



Send document comments to ucs-docfeedback@cisco.com

INDEX

A

Add SDR **8-6**
Add SEL Entry **8-4**
alerts, Call Home **4-1**
Audience **ii-i**

B

BIOS message format **7-2**
BIOS messages and codes **7-2**
BIOS message severities **7-1**
BMC commands **8-3**
BMC messages description **8-1**

C

Call Home Faults **4-1**
Cisco BIOS messages and codes **7-6**
Cisco UCS Manager CLI
 faults **1-6**
 FSM **1-8**
Cisco UCS Manager GUI
 faults **1-5**
 FSM **1-7**
cleared **1-2**
Clear SDR Repository **8-6**
Clear SEL **8-4**
CLI
 faults **1-6**
 FSM **1-8**
condition **1-2**
configuration fault type **1-3**

connectivity fault type **1-3**
critical **1-2**

D

Delete SDR **8-6**
Delete SEL Entry **8-4**
discovery **5-1**

E

Enter SDR Repository Update Mode **8-7**
environment fault type **1-3**
equipment fault type **1-3**
error messages **9-1**
Event Receiver commands **8-7**
event receiver device **8-3**
Exit SDR Repository Update Mode **8-7**

F

fault collection policy **1-1, 1-5**
faults
 about **1-1**
 active state **1-4**
 Call Home **4-1**
 Cisco UCS Manager CLI **1-6**
 Cisco UCS Manager GUI **1-5**
 fault collection policy **1-5**
 initial setup **5-1**
 lifecycle **1-4**
 properties **1-3**
 retention **1-4**

Send document comments to ucs-docfeedback@cisco.com

severities **1-2**
states **1-4, 1-5**
types **1-3**
Faults tab **1-5**
Fault Summary area **1-5**
fault types
 configuration **1-3**
 connectivity **1-3**
 environment **1-3**
 equipment **1-3**
 fsm **1-3**
 management **1-3**
 network **1-3**
 operational **1-3**
 server **1-3**
finite state machine
 See FSM
flapping **1-5**
FSM
 about **1-6**
 Cisco UCS Manager CLI **1-8**
 Cisco UCS Manager GUI **1-7**
 dynamic view **1-7**
 purpose **1-7**
 static view **1-8**
fsm, fault type **1-3**

GUI
 faults **1-5**
 FSM **1-7**

I
info **1-2**
initial setup **5-1**
interval
 retention **1-4**

L
lifecycle, faults **1-4**

M
major **1-2**
management fault type **1-3**
minor **1-2**

N
network fault type **1-3**

O
operational fault type **1-3**

P
Partial Add SDR **8-6**
Partial Add SEL Entry **8-4**
Platform Event Message **8-7**
policies, fault **1-5**
POST error messages and handling **7-1**
properties
 faults **1-3**

G
Get Auxiliary Log Status **8-5**
Get Event Receiver **8-7**
Get SDR **8-6**
Get SDR Repository Allocation Info **8-6**
Get SDR Repository Info **8-5**
Get SDR Repository Time **8-7**
Get SEL Allocation Info **8-4**
Get SEL Entry **8-4**
Get SEL Info **8-3**
Get SEL Time **8-4**

Send document comments to ucs-docfeedback@cisco.com

R

related documentation [ii-ii](#)

Reserve SDR Repository [8-6](#)

Reserve SEL [8-4](#)

retention interval [1-4](#)

Run Initialization Agent [8-7](#)

S

SDR command [8-5, 8-6, 8-7](#)

sdr repositories, modal and non-modal [8-2](#)

SDR repository interface [8-2](#)

SEL command [8-3, 8-4, 8-5](#)

SEL event record format [8-1](#)

SEL file description [6-1](#)

SEL policy description [6-2](#)

SEL record examples [8-8](#)

sensor data record device [8-2](#)

sensor initialization agent [8-2](#)

server fault type [1-3](#)

Set Auxiliar Log Status [8-5](#)

Set Event Receiver [8-7](#)

Set SDR Repository Time [8-7](#)

Set SEL Time [8-5](#)

severities

 cleared [1-2](#)

 condition [1-2](#)

 critical [1-2](#)

 info [1-2](#)

 major [1-2](#)

 minor [1-2](#)

 warning [1-2](#)

show fault [1-6](#)

show fault detail [1-6](#)

Smart Call Home faults [4-1](#)

soaking [1-5](#)

states

 flapping [1-5](#)

soaking [1-5](#)

system event log description [6-1](#)

T

transient faults [5-1](#)

W

warning [1-2](#)

Send document comments to ucs-docfeedback@cisco.com