



A

Allow TRAP Connections (port setting) [2-2](#)

Answer Calls (port setting) [2-2](#)

C

call information [1-1](#)

Cisco Unified CM 6.x

requirements [4-2](#)

task list, creating a SIP trunk integration [4-1](#)

E

Enabled (port setting) [2-2](#)

F

forwarded calls, information sent by phone system [1-1](#)

M

multiple integrations

adding new user template [8-1](#)

P

Perform Message Notification (port setting) [2-2](#)

ports

considerations for Cisco Unity Connection cluster [2-3](#)

planning how many will answer calls [2-3](#)

planning how many will dial out [2-3](#)

planning number to install [2-2](#)

planning setup [2-1](#)

settings [2-2](#)

S

Send MWI Requests (port setting) [2-2](#)

Server Name (port setting) [2-2](#)

T

template, adding a new user template for multiple integrations [8-1](#)

testing

deleting the test user [7-4](#)

setting up supervised transfer [7-3](#)

setting up test configuration [7-1](#)

testing an external call with release transfer [7-2](#)

testing supervised transfer [7-3](#)

testing the functionality for listening to messages [7-3](#)

U

user template, adding new for multiple integrations [8-1](#)

V

voice messaging ports, settings [2-2](#)

