



## Appendix B: QCT Utilities

---

This appendix describes QCT utilities.

QCT utilities allow you to perform the following operations:

- [Uploading Saved Configurations, page 97](#)
- [Configuring QCT Options, page 99](#)

### Uploading Saved Configurations

QCT allows you to upload previously-saved router configurations. Using QCT, you can browse to a locally-stored router configuration file on your PC and download it to any router.

To upload a saved configuration to your router, perform the following steps.

---


**Step 1** Click **Upload Saved Config** (see [Figure 149](#)):

*Figure 149 Upload Saved Config Button*



The Upload Configuration to Router window appears (see [Figure 150](#)):

*Figure 150 Upload Configuration Window*

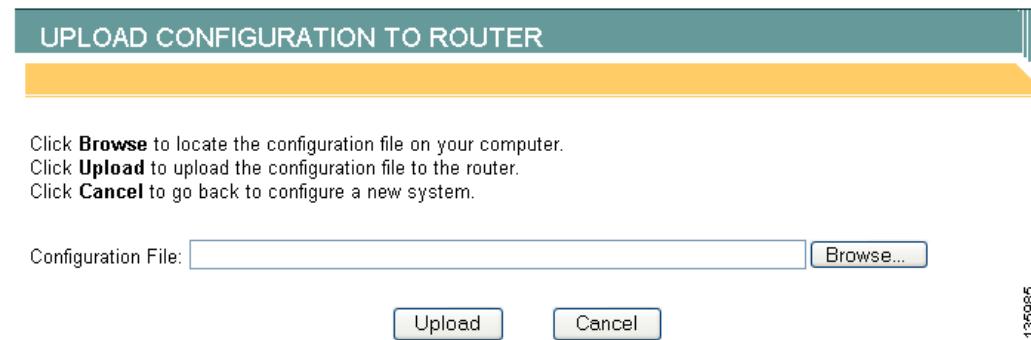


**Step 2** Click **Browse** to locate the configuration file on your PC.

## Uploading Saved Configurations

- Step 3** In the Choose File dialog that appears, browse to the file's location on your PC and select the configuration file (see [Figure 151](#)):

**Figure 151 Upload Choose File Dialog**

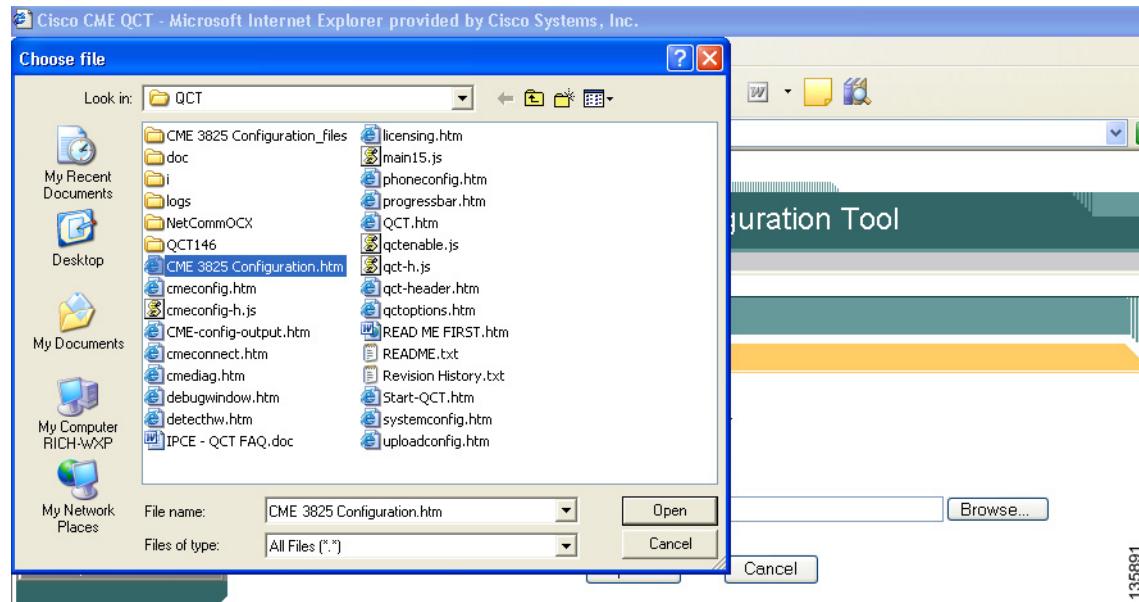


135891

- Step 4** Click **Open**.

The Configuration File field in the Upload Configuration to Router window's shows the file path that you chose (see [Figure 152](#)):

**Figure 152 Upload Configuration File Path**

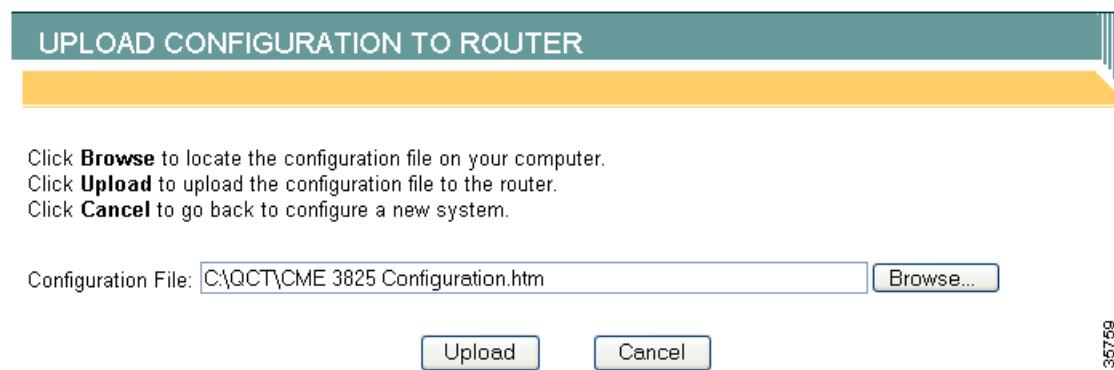

135759

- Step 5** Ensure that your router is powered on.

- Step 6** Click **Upload**.

Your router loads with the new configuration.

# Configuring QCT Options

The QCT Options window allows you to enable specific diagnostics for your system.



**Note** Any enabled QCT option will be valid only until you create a new system.

Perform the following steps to configure QCT options.


- Step 1** Click the **QCT Options** button (see [Figure 153](#)):

*Figure 153 QCT Options Button*



The QCT Options window appears (see [Figure 154](#)):

*Figure 154 QCT Option Window*

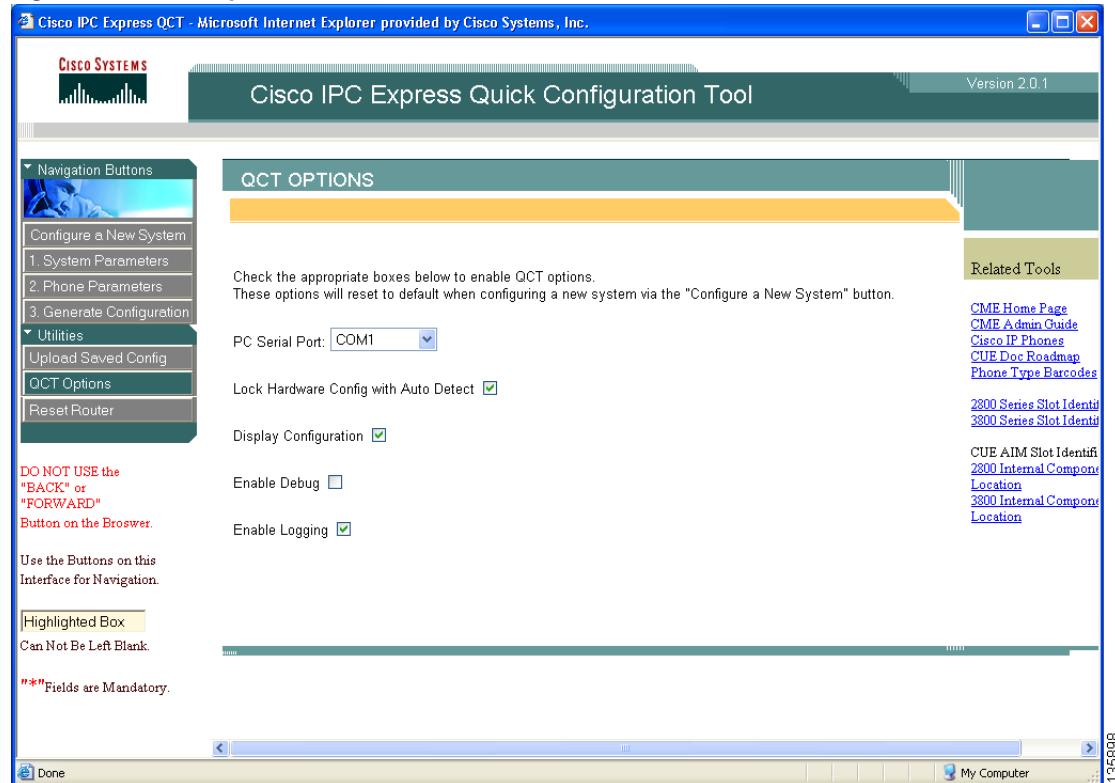

- Step 2** Enter the information listed in [Table 9](#).

**Table 9 Cisco QCT Options Field Descriptions**

| Field Name                                   | Enter or Specify                                                                                                                                                                                          | Purpose                                                                                                                                                                                            |
|----------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PC Serial Port                               | The PC serial COM port from the drop-down menu.                                                                                                                                                           | Allows communications to Cisco IPC Communications Express system.                                                                                                                                  |
| Lock Hardware Configuration with Auto Detect | <ul style="list-style-type: none"> <li>To enable any QCT option, enter a check in the appropriate check box.</li> <li>To leave any QCT option disabled, leave the appropriate check box blank.</li> </ul> | After auto-detecting hardware using the Auto Detect Hardware Configuration button, deselecting this checkbox allows changes to the Hardware Configuration section on the System Parameters window. |
| Display Configuration                        |                                                                                                                                                                                                           | Enables the display of the configuration on your PC when the Generate Configuration button is pressed.                                                                                             |
| Enable Debug                                 |                                                                                                                                                                                                           | Enables debugging after pushing configuration to router.                                                                                                                                           |
| Enable Logging                               |                                                                                                                                                                                                           | Enables logging after pushing configuration to router. Log information is stored in a folder named logs inside your locally installed QCT folder (see <a href="#">Figure 155</a> ).                |

**Figure 155 Logs Folder**

| Name                  | Type                  | Date Modified                    |
|-----------------------|-----------------------|----------------------------------|
| doc                   | File Folder           | 7/15/2005 12:51 PM               |
| i                     | File Folder           | 7/15/2005 12:51 PM               |
| logs                  | File Folder           | 7/8/2005 8:18 AM                 |
| NetCommCX             | File Folder           | 7/15/2005 12:51 PM               |
| READ ME FIRST_files   | File Folder           | 7/15/2005 12:51 PM               |
| cmeconfig.htm         | HTML Document         | 7/15/2005 11:32 AM               |
| cmeconfig-h.js        | JScript Script File   | 7/8/2005 3:21 PM                 |
| CME-config-output.htm | HTML Document         | 120 KB 6/3/2005 3:45 PM          |
| cmeconnect.htm        | HTML Document         | 19 KB 6/14/2005 11:40 AM         |
| debugwindow.htm       | HTML Document         | 1 KB 7/6/2005 4:09 PM            |
| detecthw.htm          | HTML Document         | 66 KB 7/13/2005 4:50 PM          |
| IPCE - QCT FAQ.doc    | Microsoft Word Doc... | 57 KB 6/23/2005 11:03 AM         |
| licensing.htm         | HTML Document         | 19 KB 7/12/2005 1:41 PM          |
| phoneconfig.htm       | HTML Document         | 41 KB 7/11/2005 10:18 AM         |
| progressbar.htm       | HTML Document         | 3 KB 7/6/2005 5:13 PM            |
| QCT.htm               | HTML Document         | 2 KB 7/12/2005 1:41 PM           |
| qctenable.js          | JScript Script File   | 1 KB 7/15/2005 12:57 PM          |
| qct-h.js              | JScript Script File   | 3 KB 7/7/2005 10:56 AM           |
| qct-header.htm        | HTML Document         | 15 KB 7/15/2005 10:18 AM         |
| qctoptions.htm        | HTML Document         | 21 KB 7/7/2005 3:39 PM           |
| qctsystem.htm         | HTML Document         | 1 KB 7/5/2005 3:58 PM            |
| READ ME FIRST.htm     | HTML Document         | 49 KB 7/11/2005 4:03 PM          |
| Revision History.txt  | Text Document         | 4 KB 7/14/2005 6:41 PM           |
| systemconfig.htm      | HTML Document         | 128 KB 7/15/2005 11:40 AM 136757 |