

Hardware Features

This chapter describes the hardware features of Cisco Catalyst Wireless 9164I Wi-Fi 6E Access Point and contains the following sections:

- Access Point Views, Ports, and Connectors, on page 1
- CW9164I (Internal Antenna) Radiation Patterns, on page 3

Access Point Views, Ports, and Connectors

Cisco Catalyst Wireless 9164I Wi-Fi 6E Access Point has multiple options that you can use to power the AP. For information about connectors and ports for the AP models, see Connectors and Ports on the AP, on page 1.

Connectors and Ports on the AP

The following figures show the available ports on the AP:

CW9164I Face View


Figure 1: CW9164I Face View



1	Location of the ports and connectors on the head of the AP.
2	USB 2.0 port
3	Status LED
	For information on the LEDs status, see LED Status Indications.

CW9164I Top View

Figure 2: CW9164I Top View with Connectors and Ports

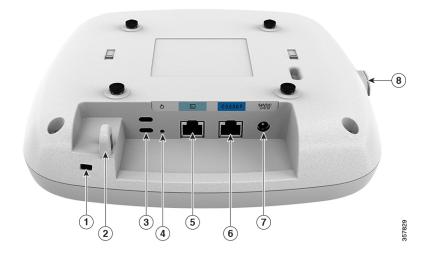



1	Kensington lock slot	5	RJ-45 console port
2	Security hasp for padlocking AP to mounting bracket	6	2.5GbE port
3	Environment Sensor vents	7	DC 54V power input port
4	Mode button	8	USB 2.0 port
	For information on how to use the Mode button, see the		
	Using the Mode Button section		


CW9164I (Internal Antenna) Radiation Patterns


The following illustrations show the CW9164I model with internal antenna radiation patterns:

Table 1: Cisco Catalyst 9164I AP Radiataion Patterns

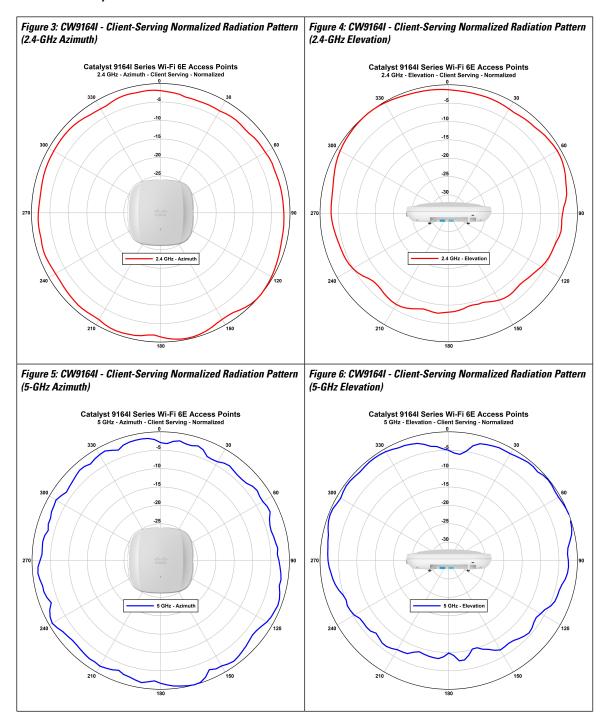

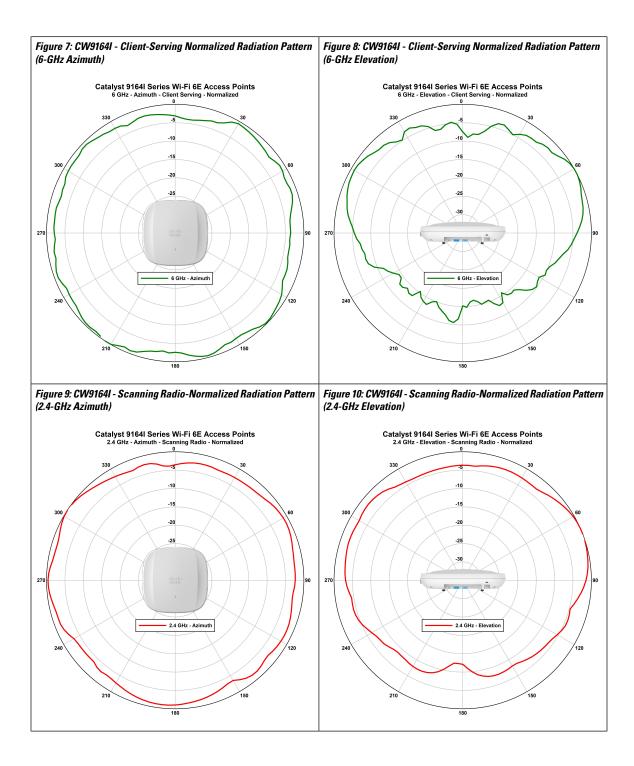

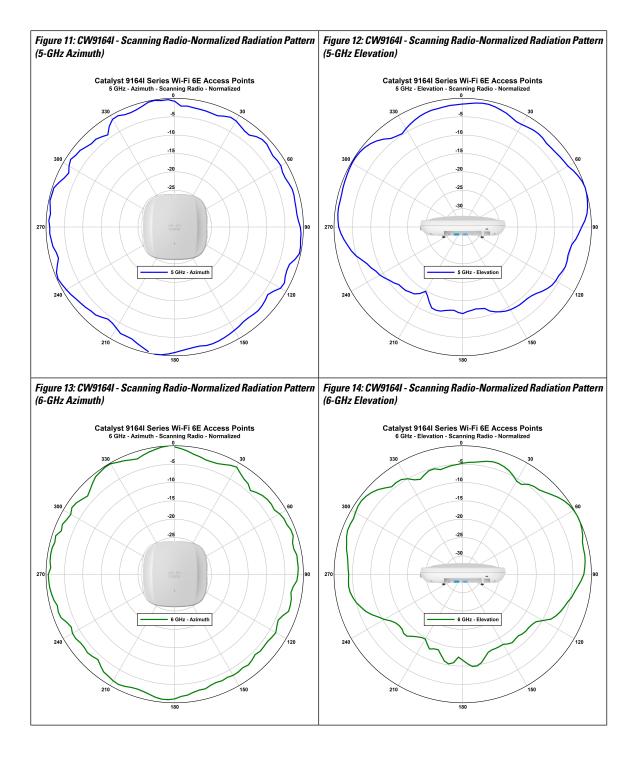

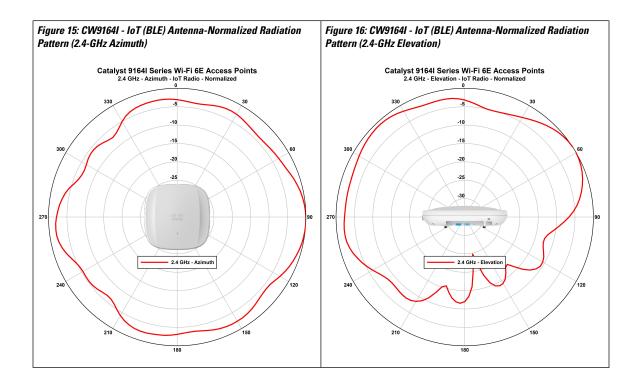

CW9164I (Internal Antenna) Radiation Patterns