



## show gtpc-load-control-profile full all

- [show gtpc-load-control-profile full all, on page 1](#)

## show gtpc-load-control-profile full all

This chapter includes the output of the **show gtpc-load-control-profile full all** command.

**Table 1: show gtpc-load-control-profile full all Command Output Descriptions**

| Field                                    | Description  |
|--|--|
| GTP-C Load Control Profile Name          | The name of this configured Load Control Profile. A string of 1 to 64 alphanumeric characters.   |
| <b>Weightage</b>                         |  |
| System CPU Utilization Weightage         | The weightage, as a percentage of 100, configured for system CPU utilization for this Load Control Profile.                                |
| System Memory Utilization Weightage      | The weightage, as a percentage of 100, configured for memory utilization for this Load Control Profile.                                    |
| License Session Utilization Weightage    | The weightage, as a percentage of 100, configured for license session utilization for this Load Control Profile.                           |
| <b>Inclusion Frequency</b>               |  |
| Change Factor                            | The change factor, as a percentage of 1 to 20, configured for this Load Control Profile.   |
| Advertisement Interval                   | The configured advertisement-interval for this Load Control Profile. Valid entries are from 0 to 3600 seconds. The default is 300 seconds. |
| <b>Load control information Handling</b> |  |
| Homer                                    | Indicates if load control information handling is enabled for the home PLMN.   |

| Field                                      | Description   |
|--|---|
| Visitor                                    | Indicates if load control information handling is enabled for the visited PLMN.   |
| <b>Load control information Publishing</b> |   |
| Homer:                                     | Indicates if load control information publishing is enabled for the home PLMN.    |
| Visitor                                    | Indicates if load control information publishing is enabled for the visited PLMN. |
| <b>Load Threshold</b>                      |   |
| Threshold                                  | The load threshold setting configured for this node.                              |