

ACS Group-of-Objects Configuration Mode Commands

The ACS Group-of-Objects Configuration Mode is used to configure groups of Active Charging Service (ACS) objects.



Important

This configuration mode is available only in 10.2 and later releases.

Command Modes

Exec > ACS Configuration > ACS Group-of-Objects Configuration

active-charging service service_name > group-of-objects object_name [type string]

Entering the above command sequence results in the following prompt:

[local]host_name(config-acs-group-of-objects)#



Important

The commands or keywords/variables that are available are dependent on platform type, product version, and installed license(s).

- end, on page 1
- exit, on page 2
- member-object, on page 2

end

Exits the current configuration mode and returns to the Exec mode.

Product

All

Privilege

Security Administrator, Administrator

Syntax Description

end

Usage Guidelines

Use this command to return to the Exec mode.

exit

Exits the current mode and returns to the parent configuration mode.

Product

All

Privilege

Security Administrator, Administrator

Syntax Description

exit

Usage Guidelines

Use this command to return to the parent configuration mode.

member-object

This command allows you to add or remove objects from the current group-of-objects.



Important

A maximum of 128 objects can be added to a group-of-objects.

Product

ACS

Privilege

Security Administrator, Administrator

Command Modes

Exec > ACS Configuration > ACS Group-of-Objects Configuration

active-charging service service_name > group-of-objects object_name [type string]

Entering the above command sequence results in the following prompt:

 $[local] {\it host_name} \ ({\it config-acs-group-of-objects}) \ \#$

Syntax Description

[no] member-object object

no

If previously added, removes the specified member object from the current group-of-objects.

object

Specifies the member object to add to or remove from the current group-of-objects.

object must be an alpha and/or numeric string of 1 through 63 characters.

Usage Guidelines

Use this command to add or remove member objects from a group-of-objects.

Example

The following command adds the object *test* to the current group-of-objects:

member-object test