



show nw-reachability

- [show nw-reachability server all](#), on page 1

show nw-reachability server all

Table 1: show nw-reachability server Command Output Descriptions

| Field | Description |
|-------------------------------------|--|
| Server | The name that was configured for this server in the current context. |
| remote-addr | The IP address to which ping packets are sent in order to determine network reachability. |
| local-addr | The IP address that is used as the source address of ping packets sent to the reachability server. |
| state | The state of the network reachability server. Either Up or Down. Up: The server is responding to ping packets. Down: The server is not responding to ping packets. |
| Total Network Reachability Servers: | The total number of network reachability servers that are configured in the current context. |
| Up: | The number of network reachability servers that are responding. |

