



## INDEX

### Numerics

- 11n Mode parameter [4-34](#)
- 1250 series access points
  - and PoE Status field [7-99](#)
  - operating modes when using PoE [7-97](#)
- 3DES IPSec data encryption [5-9](#)
- 7920 AP CAC parameter [6-39](#)
- 7920 Client CAC parameter [6-39](#)
- 7920 support mode
  - configuring [6-38](#)
  - described [6-38](#)
- 7921 support mode [6-38](#)
- 802.11a (or 802.11b) > Client Roaming page [4-62](#)
- 802.11a (or 802.11b) > Video Parameters page [4-77](#)
- 802.11a (or 802.11b) > Voice Parameters page [4-75](#)
- 802.11a (or 802.11b/g) > EDCA Parameters page [4-88](#)
- 802.11a (or 802.11b/g) Global Parameters > Auto RF page [11-9](#)
- 802.11a (or 802.11b/g) Global Parameters page [4-29, 11-44](#)
- 802.11a (or 802.11b/g) Network Status parameter [4-30, 4-38, 4-39](#)
- 802.11a/n (4.9 GHz) > Configure page [8-59](#)
- 802.11a/n (or 802.11b/g/n) Cisco APs > Configure page [11-29](#)
- 802.11a/n (or 802.11b/g/n) Radios page [4-81, 11-28, 11-40](#)
- 802.11a/n Cisco APs > Configure page [11-41](#)
- 802.11a/n Radios page (from Monitor Menu) [7-13](#)
- 802.11a/n Radios page (from Wireless Menu) [7-14](#)
- 802.11a > Pico Cell page [11-49](#)
- 802.11a > Pico Cell page with pico cell mode V2 parameters [11-49](#)



802.11a > RRM > Coverage page [11-18](#)  
802.11a > RRM > DCA page [11-14](#)  
802.11a > RRM > Dynamic Channel Assignment (DCA) page [11-14](#)  
802.11a > RRM > General page [11-19](#)  
802.11a > RRM > Tx Power Control (TPC) page [11-11](#)  
802.11a Global Parameters page [11-40](#)  
802.11b/g/n Cisco APs > Configure page [7-86, D-49](#)  
802.11 bands  
    configuring using the CLI [4-31 to 4-33](#)  
    configuring using the GUI [4-29 to 4-31](#)  
802.11g Support parameter [4-30](#)  
802.11h, described [4-38](#)  
802.11h Global Parameters page [4-38](#)  
802.11h parameters, configuring  
    using the CLI [4-39](#)  
    using the GUI [4-38 to 4-39](#)  
802.11n  
    clients [7-102](#)  
    configuring  
        using the CLI [4-35 to 4-38](#)  
        using the GUI [4-33 to 4-35](#)  
    devices [4-33](#)  
802.11n (2.4 GHz) High Throughput page [4-34](#)  
802.1Q VLAN trunk port [3-6](#)  
802.1X  
    configuring [6-24](#)  
    described [6-25](#)  
    dynamic key settings [6-24](#)  
802.1X+CCKM  
    configuring [6-27](#)  
    described [6-26](#)  
802.1X authentication for access points  
    configuring  
        the switch [7-23](#)  
        using the CLI [7-21 to 7-23](#)  
        using the GUI [7-19 to 7-21](#)  
    described [7-18](#)  
802.1x Authentication parameter [7-20](#)  
802.3 bridging

configuring using the CLI [4-54](#)  
configuring using the GUI [4-53 to 4-54](#)  
802.3 Bridging parameter [4-54](#)  
802.3 frames [4-53](#)  
802.3X flow control, enabling [4-52](#)

---

## A

AAA override  
    configuring  
        using the CLI [5-83](#)  
        using the GUI [5-83](#)  
    described [5-81](#)  
AC adapter warning for Japan [B-7](#)  
Access Control List Name parameter [5-59](#)  
access control lists (ACLs)  
    applying to an interface  
        using the CLI [5-67](#)  
        using the GUI [5-62](#)  
    applying to a WLAN  
        using the CLI [5-67](#)  
        using the GUI [5-63 to 5-64](#)  
    applying to the controller CPU  
        using the CLI [5-67](#)  
        using the GUI [5-63](#)  
    configuring  
        using the CLI [5-65 to 5-66](#)  
        using the GUI [5-58 to 5-61](#)  
    configuring for the debug facility [D-43 to D-44](#)  
    counters  
        configuring using the CLI [5-65](#)  
        configuring using the GUI [5-58](#)  
    described [5-57](#)  
    identity networking [5-79](#)  
    rules [5-57, 5-59, 5-66](#)  
        using with the debug facility [D-42 to D-43](#)  
Access Control Lists > Edit page [5-61](#)  
Access Control Lists > New page [5-58](#)  
Access Control Lists > Rules > New page [5-59](#)

Access Control Lists page **5-58**  
Access Mode parameter **4-44, 4-46**  
access point core dumps, uploading  
    using the CLI **7-45**  
    using the GUI **7-44**  
access point count, approved tiers for 5500 series controllers **4-4**  
access point event logs, viewing **D-15**  
access point groups  
    assigning access points to  
        using the CLI **6-59**  
        using the GUI **6-57**  
    creating  
        using the CLI **6-57 to 6-59**  
        using the GUI **6-54 to 6-57**  
    default group **6-54**  
    described **6-52**  
    illustrated **6-53**  
    removing  
        using the CLI **6-58**  
        using the GUI **6-55**  
    viewing **6-59 to 6-60**  
access point monitor service, debugging **D-52**  
access point radios, searching for **7-13 to 7-14**  
access points  
    20-MHz channelization **11-29**  
    40-MHz channelization **11-29**  
    assisted roaming **4-61**  
    authorization list **7-33**  
    authorizing  
        using LSCs **7-28 to 7-32**  
        using MICs **7-27**  
        using SSCs **7-27**  
        using the CLI **7-33**  
        using the GUI **7-32**  
    configuring hybrid REAP using the CLI **13-14 to 13-15**  
    converting to mesh access points **8-55**  
    embedded **7-24**  
    guidelines for operating in Japan **B-6, B-7**  
    LEDs

configuring **7-101**  
interpreting **D-2**  
migrating from the -J regulatory domain to the -U regulatory domain **7-80 to 7-83**  
number supported per controller **3-5**  
priming **7-7**  
regulatory information **B-2 to B-10**  
rules for operating in Taiwan **B-8 to B-9**  
searching for **7-10 to 7-13**  
supported for use with hybrid REAP **13-2**  
supporting oversized images **7-48 to 7-49**  
troubleshooting  
    the join process **7-34 to 7-41**  
    using Telnet or SSH **D-50 to D-52**  
VCI strings **7-34**  
verifying that they join the controller **7-9**  
viewing join information  
    using the CLI **7-39 to 7-41**  
    using the GUI **7-36 to 7-39**  
viewing multicast client table **4-60**  
Accounting Server parameters **6-65**  
accounting servers, disabling per WLAN **6-64**  
ACL. *See* access control lists (ACLS)  
ACL Name parameter **5-62, 5-63**  
ACS server configuration page **6-62**  
Action parameter **5-61**  
active exploits **5-128**  
Add AAA Client page (on CiscoSecure ACS) **5-5, 5-21**  
Add AP button **13-18**  
Add New Rule button **5-59**  
Add Web Server button **10-21**  
AdHoc Rogue AP parameter **5-88**  
administrator access **4-41**  
administrator usernames and passwords, configuring **4-41**  
Admin Status parameter **3-24, 3-25**  
Admission Control (ACM) parameter **4-76, 4-77**  
AES CBS IPSec data encryption **5-9**  
AES-CCMP **6-25**  
AES parameter **6-27**  
Aggregated MAC Protocol Data Unit (A-MPDU) **4-36**

Aggregated MAC Service Data Unit (A-MSDU) **4-36**  
aggregation method, specifying **4-36**  
aggressive load balancing **4-47**  
AirMagnet Enterprise Analyzer **D-47**  
Aironet IE parameter **6-29, 6-50**  
Aironet IEs  
    configuring using the CLI **6-52**  
    configuring using the GUI **6-50**  
Airopeek **D-47**  
Alarm Trigger Threshold parameter **11-37**  
All APs > Access Point Name > Link Details > Neighbor Name page **8-53**  
All APs > Access Point Name > Mesh Neighbor Stats page **8-53**  
All APs > Access Point Name > Neighbor Info page **8-52**  
All APs > Access Point Name > Statistics page **8-47**  
All APs > Access Point Name > VLAN Mappings page **13-13**  
All APs > Details (Advanced) page  
    configuring CDP **4-94**  
All APs > Details for (Advanced) page **7-4, 7-44, D-51**  
    configuring country codes **7-77**  
    configuring link latency **7-94**  
    configuring PoE **7-98**  
All APs > Details for (Credentials) page **7-16, 7-20, 7-53**  
All APs > Details for (General) page **7-47, 7-51, 13-12**  
All APs > Details for (High Availability) page **7-51, 7-69, 7-73**  
All APs > Details for (H-REAP) page **7-52, 13-12**  
All APs > Details for (Inventory) page **7-90**  
All APs > Details for page **D-48, D-53**  
All APs > Details page **8-19, 8-35, 11-37**  
All APs page **7-10, 8-46, 11-36, 13-12**  
Allow AAA Override parameter **5-83**  
AnchorTime parameter **11-15**  
anonymous local authentication bind method **5-36, 5-39**  
Anonymous Provision parameter **5-46**  
Antenna Gain parameter **11-31**  
Antenna parameter **11-30**  
Antenna Type parameter **11-30**  
AP > Clients > Traffic Stream Metrics page **4-82**  
AP > Clients page **4-82**  
AP801 access point

described [7-24](#)  
using with a controller [7-24](#)

AP Authentication Policy page [5-70, 11-37](#)

AP Core Dump parameter [7-44](#)

ap-count evaluation licenses, activating  
    using the CLI [4-19 to 4-20](#)  
    using the GUI [4-17 to 4-19](#)

ap-count license. *See* licenses

AP Ethernet MAC Addresses parameter [7-29](#)

AP Failover Priority parameter [7-73](#)

AP Group Name parameter [6-55](#)

AP Groups > Edit (APs) page [6-57](#)

AP Groups > Edit (General) page [6-56](#)

AP Groups > Edit (WLANS) page [6-56, 6-71](#)

AP Groups page [6-54, 6-70](#)

AP Join Stats Detail page [7-39](#)

AP Join Stats page [7-37](#)

AP-manager interface  
    and dynamic interfaces [3-10](#)  
    configuring  
        using the CLI [3-16 to 3-17](#)  
        using the GUI [3-12 to 3-15](#)  
    creating multiple interfaces  
        using the CLI [3-44](#)  
        using the GUI [3-42 to 3-43](#)  
    described [3-8](#)  
    illustration  
        of four AP-manager interfaces [3-42](#)  
        of three AP-manager interfaces [3-41](#)  
        of two AP-manager interfaces [3-40](#)  
    using multiple [3-39 to 3-44](#)

AP Mode parameter [7-51, 11-37, 13-12, D-48](#)

AP Name parameter [6-57](#)

AP Policies page [7-32](#)

AP Primary Discovery Timeout parameter [7-68](#)

ASLEAP detection [5-128](#)

Assignment Method parameter [11-29, 11-31](#)

asymmetric tunneling  
    described [12-26](#)

illustrated **12-26**

authenticated local authentication bind method **5-36, 5-39**

Authentication Protocol parameter **4-46**

Auth Key Mgmt parameter **6-27**

Authority ID Information parameter **5-46, 13-22, 13-23**

Authority ID parameter **5-46, 13-22**

Authorize LSC APs against auth-list parameter **7-32**

Authorize MIC APs against auth-list or AAA parameter **7-32**

authorizing access points

  using the CLI **7-33**

  using the GUI **7-32**

auto-anchor mobility

  configuring

    using the CLI **12-23 to 12-24**

    using the GUI **12-21 to 12-23**

  guidelines **12-21**

  overview **12-20 to 12-21**

auto-immune feature **5-109**

AutoInstall

  described **2-26, 2-29**

  example operation **2-29**

  obtaining

    DHCP addresses for interfaces **2-27**

    TFTP server information **2-27**

  overview **2-26**

  selecting configuration file **2-28**

  using **2-26**

Average Data Rate parameter **4-67, 4-70**

Average Real-Time Rate parameter **4-67, 4-71**

Avoid Cisco AP Load parameter **11-15**

Avoid Foreign AP Interference parameter **11-15, 12-18**

Avoid Non-802.11a (802.11b) Noise parameter **11-15**

---

## B

Backhaul Client Access parameter **8-59**

backup controllers

  configuring

    using the CLI **7-70 to 7-72**

using the GUI [7-68 to 7-69](#)  
described [7-67](#)

Back-up Primary Controller IP Address parameter [7-68](#)

Back-up Primary Controller Name field [7-68](#)

Back-up Secondary Controller IP Address parameter [7-69](#)

Back-up Secondary Controller Name parameter [7-69](#)

band selection [4-49](#)

bandwidth-based CAC

- described [4-73](#)
- enabling
  - using the CLI [4-83](#)
  - using the GUI [4-76](#)
- for mesh networks [8-40](#)

base license. *See* licenses

Base MAC Address parameter [3-30](#)

Beacon Period parameter [4-30](#)

beamforming

- configuring
  - using the CLI [11-41 to 11-42](#)
  - using the GUI [11-40 to 11-41](#)
- described [11-39](#)
- guidelines [11-39](#)

Beamforming parameter [11-40, 11-41](#)

Bind Password parameter [5-36](#)

Bind Username parameter [5-36](#)

Bridge Data Rate parameter [8-35](#)

Bridge Group Name parameter [8-35](#)

bridge protocol data units (BPDUs) [3-27](#)

bridging parameters

- configuring using the CLI [8-37 to 8-39](#)
- configuring using the GUI [8-35 to 8-37](#)

browsers supported [2-16](#)

Buffered Log Level parameter [D-10](#)

Burst Data Rate parameter [4-67, 4-71](#)

Burst Real-Time Rate parameter [4-67, 4-71](#)

---

## C

CAC

configuring for 7920 phones [6-38](#)

described [4-73](#)

enabling

- using the CLI [4-84](#)

- using the GUI [4-77](#)

in mesh networks [8-39](#)

viewing in mesh networks [8-42 to 8-44](#)

viewing using the CLI [4-85](#)

Canadian compliance statement [B-3](#)

CAPWAP

- and mesh access points [8-8](#)

cascading [11-6](#)

CA Server URL parameter [7-28](#)

Catalyst 3750G Integrated Wireless LAN Controller Switch

- described [1-12](#)

- logical connectivity diagram and associated software commands [E-4 to E-5](#)

- ports [3-3, 3-4, 3-5](#)

CCA Sensitivity Threshold parameter [11-50](#)

CCKM

- configuring [6-27](#)

- described [6-25](#)

- hybrid-REAP groups [13-17](#)

- with mobility [12-7](#)

CCX

- configuring Aironet IEs

- using the CLI [6-52](#)

- using the GUI [6-50](#)

- described [6-49](#)

- link test [7-90](#)

- viewing a client's version

- using the CLI [6-52](#)

- using the GUI [6-50 to 6-51](#)

CCX Layer 2 client roaming

- configuring

- using the CLI [4-64](#)

- using the GUI [4-62 to 4-64](#)

- debugging using the CLI [4-64](#)

- described [4-61 to 4-62](#)

- obtaining information using the CLI [4-64](#)

CCX radio management  
    configuring  
        using the CLI **11-45**  
        using the GUI **11-44 to 11-45**  
    debugging using the CLI **11-47**  
    features **11-43**  
    hybrid-REAP considerations **11-43**  
    obtaining information using the CLI **11-46 to 11-47**

CCXv5 clients  
    enabling location presence **4-110**  
    troubleshooting **D-26 to D-42**

CCXv5 Req button **D-33**

CCX Version parameter **6-51**

CDP > AP Neighbors > Detail page **4-97**

CDP > AP Neighbors page **4-96**

CDP > Global Configuration page **4-93**

CDP > Interface Neighbors > Detail page **4-95**

CDP > Interface Neighbors page **4-95**

CDP > Traffic Metrics page **4-97**

CDP Advertisement Version parameter **4-93**

CDP AP Neighbors page **4-96**

CDP Protocol Status parameter **4-93**

CDP State parameter **4-94**

Certificate Authority (CA) certificates  
    downloading  
        using the CLI **9-23 to 9-24**  
        using the GUI **9-22**  
    overview **9-22**  
    using with local EAP **5-42, 5-47**

Certificate File Name parameter **10-8**

Certificate File Path parameter **10-8**

Certificate Issuer parameter **5-45**

Certificate Password parameter **9-20, 10-9**

Certificate Type parameter **7-33**

Change Filter link **7-10, 7-14, 7-37**

Change Rules Priority parameter **5-93**

Channel Announcement parameter **4-38**

Channel Assignment Leader parameter **11-16**

Channel Assignment Method parameter **11-14**

channel bonding in the 5-GHz band **11-30**  
Channel parameter **11-28, D-49**  
Channel Quiet Mode parameter **4-38**  
channels  
  statically assigning using the CLI **11-32**  
  statically assigning using the GUI **11-28 to 11-32**  
Channel Scan Duration parameter **11-20**  
Channel Width parameter **11-16, 11-29**  
Check Against CA Certificates parameter **5-45**  
Check Certificate Date Validity parameter **5-45**  
chokepoints for RFID tag tracking **4-101**  
CIDS Sensor Add page **5-107**  
CIDS Sensors List page **5-106**  
CIDS Shun List page **5-110**  
ciphers  
  configuring **6-27, 6-28**  
  described **6-26**  
Cisco 2100 Series Wireless LAN Controllers  
  AutoInstall interfaces **2-27**  
  described **1-8**  
  FCC statement **B-10**  
  features not supported **1-8**  
  network connections **1-16**  
  ports **3-2, 3-4**  
Cisco 28/37/38xx Integrated Services Router  
  described **1-12**  
  logical connectivity diagram and associated software commands **E-3**  
  ports **3-4, 3-5, 4-116**  
  versions **1-12**  
Cisco 3200 Series Mobile Access Router (MAR)  
  described **8-58**  
  operating with mesh access points  
    using the CLI to configure **8-60**  
    using the GUI to configure **8-59**  
Cisco 3300 Series Mobility Services Engine (MSE), using with wIPS **5-123**  
Cisco 4400 Series Wireless LAN Controllers  
  AutoInstall interfaces **2-27**  
  choosing between link aggregation and multiple AP-manager interfaces **3-34 to 3-43**  
  described **1-9**

FCC statement **B-10**  
models **3-4 to 3-5**  
network connections **1-16 to 1-17**  
ports **3-2, 3-4, 3-5**

Cisco 5500 Series Wireless LAN Controllers  
choosing between link aggregation and multiple AP-manager interfaces **3-34 to 3-43**  
CPUs **D-5**  
described **1-9**  
FCC statement **B-10**  
features not supported **1-10**  
interface configuration example **3-45**  
licenses. *See* licenses  
models **3-5**  
multiple AP-manager interfaces **3-44 to 3-45**  
network connections **1-17**  
ports **3-3, 3-5**  
using the USB console port **3-33 to 3-34**

Cisco 7920 Wireless IP Phones **6-38**  
Cisco 7921 Wireless IP Phones **6-38**  
Cisco Adaptive Wireless Path Protocol (AWPP) **8-8**  
Cisco AV-pairs **6-60, 6-61, 6-62**  
Cisco Centralized Key Management (CCKM). *See* CCKM  
Cisco Clean Access (CCA) **6-66**  
Cisco Client Extensions (CCX). *See* CCX  
Cisco Discovery Protocol (CDP)  
configuring  
    using the CLI **4-98 to 4-99**  
    using the GUI **4-93 to 4-94**  
debugging using the CLI **4-100**  
described **4-90**  
enabling using the GUI **4-93 to 4-94**  
sample network **4-92**  
supported devices **4-90**  
viewing neighbors  
    using the CLI **4-99 to 4-100**  
    using the GUI **4-94 to 4-98**  
viewing traffic information  
    using the CLI **4-99**  
    using the GUI **4-97**

Cisco Discovery Protocol parameter **4-94**  
Cisco high-power switches **7-99**  
Cisco License Manager (CLM)  
    and the controller license agent **4-26**  
    using to register PAKs **4-6**  
Cisco Licensing website **4-21**  
Cisco Logo parameter **10-14**  
Cisco NAC Appliance **6-66**  
CiscoSecure Access Control Server (ACS) **5-4**  
Cisco Unified Wireless Network (UWN) Solution  
    described **1-2 to 1-4**  
    illustrated **1-3**  
Cisco Wireless Control System (WCS) **1-2**  
Cisco WiSM  
    configuring the Supervisor 720 **4-114 to ??**  
    guidelines **4-114**  
    logical connectivity diagram and associated software commands **E-2 to E-3**  
    maximum number supported by router chassis **1-11**  
    ports **3-4, 3-5**  
    SSC key-hash **7-26**  
CKIP  
    configuring  
        using the CLI **6-30**  
        using the GUI **6-29 to 6-30**  
    described **6-29**  
Clear Config button **7-58**  
Clear Filter link **6-8, 7-13, 7-14, 7-38**  
clearing the controller configuration **9-34**  
Clear Stats button **12-19**  
Clear Stats on All APs button **7-37**  
CLI  
    basic commands **2-26**  
    enabling wireless connections **2-36**  
    logging into **2-23 to 2-25**  
    logging out **2-25**  
    navigating **2-25**  
    troubleshooting commands **D-6 to D-8**  
    using **2-23 to 2-26**  
Client Certificate Required parameter **5-45**

client exclusion policies, configuring  
    using the CLI [5-76 to 5-77](#)  
    using the GUI [5-75 to 5-76](#)

Client Exclusion Policies page [5-76](#)

ClientLink. *See* beamforming

client location, using WCS [1-7](#)

client MFP [5-68](#)

Client Protection parameter [5-72](#)

client reporting  
    configuring using the CLI [D-35 to D-39](#)  
    configuring using the GUI [D-32 to D-35](#)  
    described [D-26](#)

Client Reporting page [D-34](#)

client roaming, configuring [4-60 to 4-65](#)

clients  
    connecting to WLANs [13-15](#)  
    viewing  
        using the CLI [7-105](#)  
        using the GUI [7-102 to 7-105](#)  
    viewing CCX version  
        using the CLI [6-52](#)  
        using the GUI [6-50 to 6-51](#)

Clients > AP > Traffic Stream Metrics page [4-80](#)

Clients > AP page [4-80](#)

Clients > Detail page  
    configuring client reporting [D-33](#)  
    viewing a client's CCX version [6-51](#)  
    viewing client details [7-65, 7-104](#)  
    viewing the status of workgroup bridges [7-64](#)  
    viewing voice and video settings [4-79](#)

Clients page  
    performing a link test [7-92](#)  
    viewing clients [7-102](#)  
    viewing the status of workgroup bridges [7-64](#)  
    viewing voice and video settings [4-78](#)

Client Type parameter [7-64, 7-65](#)

Commands > Reset to Factory Defaults page [4-116](#)

comma-separated values (CSV) file, uploading [13-21](#)

Community Name parameter [4-44](#)

conditional web redirect **6-60**  
    configuring  
        using the CLI **6-63**  
        using the GUI **6-62 to 6-63**  
    described **6-60**  
Conditional Web Redirect parameter **6-63**  
Configuration File Encryption parameter **9-30**  
configuration files  
    downloading  
        using the CLI **9-31 to 9-32**  
        using the GUI **9-29 to 9-30**  
    editing **9-33 to 9-34**  
    uploading  
        using the CLI **9-28 to 9-29**  
        using the GUI **9-27 to 9-28, ?? to 9-29, ?? to 9-30, ?? to 9-32**  
configuration wizard  
    CLI version **2-13 to 2-16**  
    described **2-2**  
    GUI version **2-3 to 2-13**  
Configuration Wizard - 802.11 Configuration page **2-11**  
Configuration Wizard Completed page **2-13**  
Configuration Wizard - Management Interface Configuration page **2-6**  
Configuration Wizard - Miscellaneous Configuration page **2-7**  
Configuration Wizard - Service Interface Configuration page **2-5**  
Configuration Wizard - Set Time page **2-12**  
Configuration Wizard - SNMP Summary page **2-4, 2-6**  
Configuration Wizard - System Information page **2-3**  
Configuration Wizard - Virtual Interface Configuration page **2-8**  
Configure option for RRM override **11-28**  
Confirm Password parameter **13-10**  
Console Log Level parameter **D-10**  
console port  
    connecting **2-2 to 2-3**  
Control and Provisioning of Wireless Access Points protocol (CAPWAP) **1-6**  
    debugging **7-6**  
    described **7-2**  
    guidelines **7-2**  
    viewing MTU information **7-5**  
controller failure detection time, reducing **7-67**

controller network module

- baud rate **3-4**
- versions **3-5**

controllers

- configuration
  - clearing **9-34**
  - erasing **9-34**
  - saving **9-32**
- connections **1-13**
- discovery process **7-6**
- guidelines for operating in Japan **B-6 to B-7**
- multiple-controller deployment **1-4**
- overview **1-7**
- resetting factory default settings
  - using the GUI **4-116**
- single-controller deployment **1-3 to 1-4**
- synchronizing with location appliance **4-106**
- types of memory **1-14**
- upgrading software
  - using the CLI **9-9 to 9-11**
  - using the GUI **9-6 to 9-8**

Controller Spanning Tree Configuration page **3-30**

Controller Time Source Valid parameter **5-72**

Control Path parameter **12-23**

core dump files

- described **D-18**
- uploading automatically to an FTP server
  - using the CLI **D-20**
  - using the GUI **D-19**
- uploading from a 5500 series controller to a TFTP or FTP server **D-20 to D-21**

Core Dump page **D-19**

Country Code parameter **7-77**

country codes

- configuring
  - using the CLI **7-78 to 7-80**
  - using the GUI **7-76 to 7-77**
- described **7-75**
- Japanese **7-81**
- viewing using the CLI **7-79**

Country page **7-76**  
Coverage Exception Level per AP parameter **11-18**  
coverage hole detection  
    configuring per controller  
        using the CLI **11-23**  
        using the GUI **11-17 to 11-19**  
disabling on a WLAN  
    described **6-65**  
    using the CLI **6-66**  
    using the GUI **6-65 to 6-66**  
coverage hole detection and correction **11-4**  
Coverage Hole Detection Enabled parameter **6-65**  
CPU Access Control Lists page **5-63**  
CPU ACL Mode parameter **5-63**  
CPUs, 5500 series controllers **D-5**  
crash files  
    uploading  
        using the CLI **D-17 to D-18**  
        using the GUI **D-16 to D-17**  
Current Channel parameter **11-31**  
Custom Signatures page **5-115**

---

## D

data encryption  
    and OfficeExtend access points **7-55**  
    configuring  
        using the CLI **7-4 to 7-5**  
        using the GUI **7-3 to 7-4**  
    described **7-3**  
    for OfficeExtend access points **7-52**  
Data Encryption parameter **7-4, 7-52**  
Data Path parameter **12-23**  
Data Rates parameter **4-31**  
date  
    configuring manually **2-30**  
    configuring through NTP server **2-30**  
    setting  
        using the CLI **2-32**

using the GUI [2-30](#)

DCA Channel Sensitivity parameter [11-15](#)

DCA Channels parameter [11-16](#)

debug commands, sending [7-41](#)

debug facility

- configuring [D-43 to D-46](#)
- described [D-42 to D-43](#)
- output [D-44 to D-45](#)

default enable password [7-15](#)

default-group access point group [6-54](#)

Default Mobility Group parameter [12-11](#)

Default Routers parameter [6-13](#)

Delivery Traffic Indication Map (DTIM). *See* DTIM period

Deny Counters parameter [5-61](#)

Description parameter [5-34, 8-14, 13-10](#)

Designated Root parameter [3-30](#)

DES IPSec data encryption [5-9](#)

Destination parameter [5-59](#)

Destination Port parameter [5-60](#)

Detect and Report Ad-Hoc Networks parameter [5-88](#)

device certificates

- downloading
  - using the CLI [9-21](#)
  - using the GUI [9-19 to 9-21](#)
- overview [9-19](#)
- using with local EAP [5-42, 5-47](#)

DHCP

- configuring using the CLI [6-11](#)
- configuring using the GUI [6-10](#)
- debugging [6-12](#)

DHCP Addr. Assignment Required parameter [6-11](#)

DHCP Allocated Lease page [6-14](#)

DHCP option 43, in controller discovery process [7-7](#)

DHCP option 82

- configuring
  - using the CLI [5-56 to 5-57](#)
  - using the GUI [5-56](#)
- described [5-55](#)
- example [5-55](#)

DHCP Option 82 Remote ID Field Format parameter [5-56](#)

DHCP Parameters page [4-40, 5-56](#)

DHCP proxy

configuring

    using the CLI [4-41](#)

    using the GUI [4-40](#)

described [4-40](#)

DHCP Scope > Edit page [6-13](#)

DHCP scopes

configuring

    using the CLI [6-14 to 6-16](#)

    using the GUI [6-12 to 6-14](#)

described [6-12](#)

DHCP Scopes page [6-12](#)

DHCP server discovery [7-7](#)

DHCP Server IP Addr parameter [6-11](#)

DHCP Server Override parameter [6-11](#)

DHCP servers

    external [6-9 to 6-10](#)

    internal [6-9](#)

diagnostic channel

configuring

    using the CLI [D-28 to D-32](#)

    using the GUI [D-27](#)

described [D-26](#)

Diagnostic Channel parameter [D-27](#)

directed roam request [4-62](#)

Direction parameter [5-60](#)

disabled clients, configuring a timeout [6-17](#)

discovery request timer, configuring [7-71](#)

distribution system ports [3-4 to 3-6](#)

Diversity parameter [11-31](#)

DNS Domain Name parameter [6-13](#)

DNS IP Address parameter [7-47](#)

DNS Servers parameter [6-14](#)

Domain Name parameter [7-47](#)

domain name server (DNS) discovery [7-8](#)

Download button

    downloading a CA certificate [9-23](#)

downloading a configuration file **9-30**  
downloading a customized web authentication login page **10-23**  
downloading a device certificate **9-20**  
downloading a signature file **5-115**  
**Download File to Controller page** **9-17**  
    downloading a customized web authentication login page **10-22**  
    downloading CA certificates **9-22**  
    downloading configuration files **9-29**  
    downloading device certificates **9-20**  
    downloading IDS signatures **5-114**  
    downloading login banner file **9-16**  
**Download SSL Certificate parameter** **10-8**  
**DSCP parameter** **5-60**  
**DTIM period, configuring for MAC filtering** **6-18**  
**DTLS data encryption.** *See* data encryption  
**DTPC Support parameter** **4-30**  
**dynamic AP management**  
    for dynamic interface **3-21**  
    for the management interface **3-15**  
**Dynamic AP Management parameter** **3-10**  
    for dynamic interface **3-20**  
    for management interface **3-13**  
**dynamic AP-manager interface** **3-10**  
**dynamic channel assignment (DCA)**  
    20-MHz channelization **11-4, 11-16**  
    40-MHz channelization **11-4, 11-16**  
    configuring  
        using the CLI **11-22 to 11-23**  
        using the GUI **11-13 to 11-17**  
    described **11-3**  
    sensitivity thresholds **11-15**  
**dynamic frequency selection** **7-84 to 7-85**  
**dynamic interface**  
    configuring  
        using the CLI **3-21 to 3-22**  
        using the GUI **3-18 to 3-20**  
    described **3-9**  
**dynamic interface example** **3-45**  
**dynamic transmit power control, configuring** **4-30**

dynamic WEP, configuring [6-24](#)  
Dynamic WEP Key Index parameter [5-43](#)

---

## E

EAP-FAST Method Parameters page [5-46](#)  
EAP-FAST parameter [5-44](#)  
EAPOL-Key Max Retries parameter [5-43](#)  
EAPOL-Key Timeout parameter [5-43](#)  
EAP Profile Name parameter [5-47](#)  
EAP-TLS parameter [5-44](#)  
EDCA Profile parameter [4-88](#)  
Edit QoS Profile page [4-66](#)  
Edit QoS Role Data Rates page [4-70](#)  
Egress Interface parameter [10-32](#)  
Email Input parameter [10-33](#)  
Enable AP Local Authentication parameter [13-20](#)  
Enable Authentication for Listener parameter [4-27](#)  
Enable Check for All Standard and Custom Signatures parameter [5-116](#)  
Enable Controller Management to be accessible from Wireless Clients parameter [2-37, 5-54](#)  
Enable Counters parameter [5-58](#)  
Enable Coverage Hole Detection parameter [11-18](#)  
Enable CPU ACL parameter [5-63](#)  
Enable Default Authentication parameter [4-27](#)  
Enable DHCP Proxy parameter [4-40](#)  
Enable Dynamic AP Management parameter [3-43](#)  
Enable EAP-FAST Authentication parameter [13-22](#)  
Enable IGMP Snooping parameter [4-57](#)  
Enable LEAP Authentication parameter [13-22](#)  
Enable Least Latency Controller Join parameter [7-53](#)  
Enable Link Latency parameter [7-53, 7-94, 7-95](#)  
Enable Listener parameter [4-27](#)  
Enable Low Latency MAC parameter [4-89](#)  
Enable LSC on Controller parameter [7-28](#)  
Enable NAT Address parameter [3-13](#)  
Enable Notification parameter [4-27](#)  
Enable OfficeExtend AP parameter [7-52](#)  
Enable Password parameter [7-16](#)  
Enable Server Status parameter [5-36](#)

Enable Tracking Optimization parameter **7-86**  
Encryption Key parameter **6-30**  
end user license agreement **C-2 to C-4**  
end-user license agreement (EULA) **4-8, 4-9**  
enhanced distributed channel access (EDCA) parameters  
    configuring using the CLI **4-89 to 4-90**  
    configuring using the GUI **4-88 to 4-89**  
enhanced neighbor list  
    described **4-61, 8-31**  
    request (E2E) **4-62**  
Enter Saved Permission Ticket File Name parameter **4-23**  
EoIP port **12-23, 12-28**  
epings **12-23, 12-29**  
erasing the controller configuration **9-34**  
error codes, for failed VoIP calls **6-45 to 6-46**  
Ethernet connection, using remotely **2-24 to 2-25**  
Ethernet Multicast Mode parameter **4-57**  
European declaration of conformity **B-4 to B-5**  
evaluation licenses  
    installed on 5500 series controllers **4-3**  
event reporting for MFP **5-69**  
Excessive 802.11 Association Failures parameter **5-76**  
Excessive 802.11 Authentication Failures parameter **5-76**  
Excessive 802.1X Authentication Failures parameter **5-76**  
Excessive Web Authentication Failures parameter **5-76**  
Expedited Bandwidth parameter **4-76**  
expedited bandwidth requests  
    described **4-74**  
    enabling  
        using the CLI **4-84**  
        using the GUI **4-76**  
Expiration Timeout for Rogue AP and Rogue Client Entries parameter **5-88**  
Extensible Authentication Protocol (EAP)  
    configuring **6-24**  
    setting local timers **5-48**  
    timeout and failure counters  
        per access point **5-51**  
        per client **5-51**  
extension channel **11-31**

---

## F

factory default settings  
resetting using the GUI **4-116**

failover priority for access points  
configuring  
    using the CLI **7-74**  
    using the GUI **7-72 to 7-74**  
described **7-72**  
viewing using the CLI **7-74**

failover protection **1-15**

false access point detection **5-128**

Fallback Mode parameter **5-10**

Fast Ethernet port **3-5**

fast heartbeat timer  
configuring  
    using the CLI **7-70**  
    using the GUI **7-68**  
described **7-67**

fast SSID changing  
configuring using the CLI **4-52**  
configuring using the GUI **4-52**

FCC declaration of conformity **B-2 to B-3**

FCC statement  
    2100 series controllers **B-10**  
    4400 series controllers **B-10**  
    5500 series controllers **B-10**

Federal Information Processing Standards (FIPS) **5-12**

File Compression parameter **7-44**

File Name to Save Credentials parameter **4-21**

file transfers **1-14**

File Type parameter  
    downloading a CA certificate **9-23**  
    downloading a configuration file **9-30**  
    downloading a customized web authentication login page **10-23**  
    downloading a device certificate **9-20**  
    Login Banner **9-17**  
    upgrading controller software **9-8**  
    uploading a configuration file **9-28**

uploading packet capture files **D-23**  
uploading PACs **9-25**  
filter, using to view clients **7-103**  
Fingerprint parameter **5-108**  
flashing LEDs, configuring **7-101**  
Forward Delay parameter **3-31, 3-32**  
forwarding plane architecture **4-53**  
Fragmentation Threshold parameter **4-30**  
fragmented pings **3-7**  
Friendly Rogue > Create page **5-93**  
FTP server guidelines **9-2**

---

## G

General (controller) page  
    configuring 802.3 bridging **4-54**  
    configuring an RF group **11-7**  
    enabling link aggregation **3-38**  
General (security) page **5-31**  
General page **5-43**  
Generate Password parameter **10-5**  
Generate Rehost Ticket button **4-23**  
gigabit Ethernet port **3-5**  
Global AP Failover Priority parameter **7-73**  
Global Configuration page  
    configuring authentication for access points **7-20**  
    configuring backup controllers **7-68**  
    configuring failover priority for access points **7-72**  
    configuring global credentials for access points **7-16**  
global credentials for access points  
    configuring  
        using the CLI **7-17 to 7-18**  
        using the GUI **7-15 to 7-17**  
    described **7-15**  
    overriding  
        using the CLI **7-17**  
        using the GUI **7-16**  
Group Mode parameter **11-9, 12-17**  
Group Name parameter **12-12, 13-18**

Group Setup page (on CiscoSecure ACS) [5-23](#)

Guest LAN parameter [10-31](#)

guest N+1 redundancy [12-20](#)

guest tunneling [12-10](#)

guest user accounts

    creating [10-2 to 10-7](#)

    creating as a lobby ambassador [10-4 to 10-6](#)

    viewing

        using the CLI [10-7](#)

        using the GUI [10-6](#)

Guest User parameter [5-33, 13-10](#)

Guest User Role parameter [5-33, 13-10](#)

guest WLAN, creating [10-5](#)

GUI

    browsers supported [2-16](#)

    enabling wireless connections [2-36](#)

    guidelines [2-16](#)

    logging into [2-17](#)

    logging out of [2-17](#)

    using [2-16](#)

---

## H

Headline parameter [10-14](#)

Hello Time parameter [3-31](#)

help, obtaining [2-17](#)

hex2pcap sample output [D-45](#)

high-density network

    benefits [11-48](#)

    example [11-48](#)

    overview [11-47](#)

Holdtime parameter [3-31, 4-93](#)

Honeypot access point detection [5-128](#)

HREAP Group Name parameter [13-13](#)

HREAP Groups > Edit (Local Authentication > Local Users) page [13-21](#)

HREAP Groups > Edit (Local Authentication > Protocols) page [13-22](#)

HREAP Groups > Edit page [13-18, 13-19](#)

HREAP Groups page [13-18](#)

H-REAP Local Switching parameter [13-8](#)

H-REAP Mode AP Fast Heartbeat Timeout parameter [7-68](#)  
H-REAP Mode AP Fast Heartbeat Timer State parameter [7-68](#)

H-REAP parameter [7-51](#)

HTTP Access parameter [2-18](#)

HTTP Configuration page [2-18](#)

HTTPS Access parameter [2-18](#)

hybrid REAP

access points supported [13-2](#)

authentication process [13-2 to 13-4](#)

bandwidth restriction [13-2](#)

configuring

access points using the CLI [13-14 to 13-15](#)

access points using the GUI [13-11 to 13-14](#)

controller using the GUI [13-6 to 13-10](#)

guidelines [13-4](#)

illustrated [13-2](#)

number of access points supported [13-2](#)

overview [13-2](#)

hybrid-REAP

debugging [13-11, 13-15](#)

hybrid-REAP groups

backup RADIUS server [13-16](#)

CCKM [13-17](#)

configuring

using the CLI [13-23](#)

using the GUI [13-17 to 13-22](#)

described [13-16](#)

example [13-16](#)

local authentication [13-17](#)

Hysteresis parameter [4-63](#)

---

identity networking

configuring [5-77 to 5-81](#)

overview [5-77 to 5-78](#)

RADIUS attributes [5-78 to 5-81](#)

Identity Request Max Retries parameter [5-43](#)

Identity Request Timeout parameter [5-43](#)

IDS [5-106](#)

IDS sensors

configuring

using the CLI [5-108 to 5-110](#)

using the GUI [5-106 to 5-108](#)

described [5-106](#)

IDS signature events

viewing using the CLI [5-121 to 5-122](#)

viewing using the GUI [5-118 to 5-119](#)

IDS signatures

configuring

using the CLI [5-119 to 5-121](#)

using the GUI [5-113 to 5-118](#)

described [5-111](#)

frequency [5-117](#)

MAC frequency [5-117, 5-120](#)

measurement interval [5-117](#)

pattern [5-117](#)

quiet time [5-117, 5-120](#)

tracking method [5-117](#)

uploading or downloading using the GUI [5-113 to 5-115](#)

viewing

using the CLI [5-121 to 5-122](#)

using the GUI [5-118 to 5-119](#)

IGMP Timeout parameter [4-57](#)

IKE Diffie Hellman Group parameter [5-10](#)

IKE Phase 1 parameter [5-10](#)

Index parameter for IDS [5-107](#)

indoor access points

converting to mesh access points [8-55](#)

infrastructure MFP

components [5-69](#)

described [5-68](#)

Infrastructure MFP Protection parameter [5-71](#)

Infrastructure Protection parameter [5-72](#)

Infrastructure Validation parameter [5-72](#)

Ingress Interface parameter [10-32](#)

Injector Switch MAC Address parameter [7-99](#)

inline power [7-97](#)

Install License button **4-8**  
intelligent power management (IPM) **7-99**  
inter-controller roaming  
    described **4-61**  
    example **12-3**  
Interface Name parameter **6-56, 6-68, 6-71, 8-14**  
Interface parameter **6-11**  
interfaces  
    and identity networking **5-79**  
    assigning WLANs **6-17**  
    configuring  
        using the CLI **3-15 to 3-18**  
        using the GUI **3-12 to 3-15**  
    overview **3-6 to 3-10**  
Interfaces > Edit page  
    applying an ACL to an interface **5-62**  
    configuring dynamic interfaces **3-19**  
    configuring NAC out-of-band integration **6-69**  
    creating multiple AP-manager interfaces **3-43**  
Interfaces > New page **3-19, 3-42**  
Interfaces page **3-12**  
interference **11-3**  
Interference threshold parameter **11-19**  
Internet Group Management Protocol (IGMP)  
    configuring  
        using the CLI **4-59**  
        using the GUI **4-57**  
    snooping **4-55**  
inter-subnet mobility **12-7**  
inter-subnet roaming  
    described **4-61**  
    illustrated **12-3 to 12-4**  
Interval parameter **11-15, 11-44**  
intra-controller roaming  
    described **4-60**  
    illustrated **12-2**  
Inventory page **7-89**  
Invoke Channel Update Now button **11-14**  
Invoke Power Update Now button **11-12**

IP address-to-MAC address binding

configuring [4-65](#)

described [4-65](#)

IP Mask parameter [4-44](#)

IPSec parameter [5-9](#)

IP Theft or IP Reuse parameter [5-76](#)

IPv6 bridging

configuring

using the CLI [6-49](#)

using the GUI [6-48 to 6-49](#)

described [6-47](#)

guidelines [6-47](#)

IPv6 bridging and IPv4 web authentication example [6-48](#)

IPv6 Enable parameter [6-49](#)

---

## J

Japanese country codes [7-81](#)

Japanese regulations for migrating access points from the -J to the -U regulatory domain [7-80 to 7-83](#)

---

## K

Keep Alive Count parameter [12-22](#)

Keep Alive Interval parameter [12-22](#)

Key Encryption Key (KEK) parameter [5-8](#)

Key Format parameter [6-30](#)

Key Index parameter [6-30](#)

key permutation

configuring [6-30, 6-31](#)

described [6-29](#)

Key Permutation parameter [6-30](#)

Key Size parameter [6-30](#)

Key Wrap Format parameter [5-8](#)

Key Wrap parameter [5-8](#)

---

## L

LAG. See link aggregation (LAG)

LAG Mode on Next Reboot parameter **3-38**

Last Auto Channel Assignment parameter **11-16**

Last Power Level Assignment parameter **11-12**

Layer 1 security **5-2**

Layer 2

    operation **1-6**

    security

        configuring **6-23 to 6-31**

        described **5-2**

Layer 2 Security parameter **6-27, 6-30, 6-62**

Layer 3

    operation **1-6**

    security

        configuring **6-32 to 6-34**

        described **5-3**

Layer 3 Security parameter

    for VPN passthrough **6-33**

    for web authentication **6-34**

    for web redirect **6-63**

    for wired guest access **10-32**

LDAP

    choosing server priority order **5-37**

    configuring

        using the CLI **5-38 to 5-40**

        using the GUI **5-35 to 5-38**

    local EAP methods supported **5-35, 5-41**

LDAP server

    assigning to WLANs **5-37 to 5-38**

    choosing local authentication bind method

        using the CLI **5-39**

        using the GUI **5-36**

LDAP Servers > New page **5-35**

LDAP Servers page **5-35**

LDAP Servers parameter **5-47**

LEAP parameter **5-44**

Learn Client IP Address parameter **13-9**

Lease Time parameter **6-13**

LEDs

    configuring **7-101**

interpreting [D-2](#)  
license agent  
  configuring  
    using the CLI [4-28 to 4-29](#)  
    using the GUI [4-26 to 4-28](#)  
  described [4-26](#)  
License Agent Configuration page [4-27](#)  
license agreement [C-2 to C-4](#)  
License Commands (Rehost) page [4-21](#)  
License Commands page [4-7](#)  
License Detail page [4-10, 4-18](#)  
license level, changing  
  using the CLI [4-16](#)  
  using the GUI [4-15](#)  
License Level page [4-14](#)  
licenses  
  activating ap-count evaluation licenses  
    using the CLI [4-19 to 4-20](#)  
    using the GUI [4-17 to 4-19](#)  
  choosing feature set  
    using the CLI [4-16](#)  
    using the GUI [4-14 to 4-15](#)  
  installing  
    using the CLI [4-8 to 4-9](#)  
    using the GUI [4-7 to 4-8](#)  
  messages in controller trap log [4-3](#)  
  obtaining [4-4 to 4-6](#)  
  rehosting  
    described [4-20](#)  
    using the CLI [4-24 to 4-25](#)  
    using the GUI [4-21 to 4-23](#)  
  removing  
    using the CLI [4-8](#)  
    using the GUI [4-10](#)  
  required for OfficeExtend access points [7-50](#)  
  saving  
    using the CLI [4-9](#)  
    using the GUI [4-8](#)  
SKUs [4-4](#)

transferring to a replacement controller after an RMA [4-25 to 4-26](#)

types [4-2](#)

viewing

    using the CLI [4-11 to 4-13](#)

    using the GUI [4-9 to 4-10](#)

Licenses page [4-9, 4-15, 4-17](#)

licensing portal, using to register PAKs [4-6](#)

Lifetime parameter [5-33, 10-5, 13-10](#)

Lightweight Access Point Protocol (LWAPP) [1-6, 7-2](#)

lightweight mode, reverting to autonomous mode [7-26](#)

limited warranty [C-4 to C-6](#)

link aggregation (LAG)

    configuring neighboring devices [3-39](#)

    described [3-35 to 3-36](#)

    enabling

        using the CLI [3-39](#)

        using the GUI [3-38](#)

    example [3-35](#)

    guidelines [3-37](#)

    illustrated [3-36](#)

    verifying settings using the CLI [3-39](#)

link latency

    and OfficeExtend access points [7-53, 7-55](#)

    configuring

        using the CLI [7-95 to 7-96](#)

        using the GUI [7-94 to 7-95](#)

    described [7-93](#)

Link Status parameter [3-24](#)

Link Test

    button [7-92](#)

    option [7-92, 8-52](#)

    page [7-92](#)

link test

    described [7-90](#)

    performing

        using the CLI [7-93](#)

        using the GUI [7-91 to 7-92, 8-52 to 8-53](#)

    types of packets [7-90](#)

Link Trap parameter [3-24, 3-25](#)

Listener Message Processing URL parameter [4-27](#)  
load balancing [4-47](#)  
Load-based AC parameter [4-76](#)  
load-based CAC  
described [4-73 to 4-74](#)  
enabling  
    using the CLI [4-83](#)  
    using the GUI [4-76](#)  
lobby ambassador account  
    creating using the CLI [10-3](#)  
    creating using the GUI [10-2 to 10-3](#)  
Lobby Ambassador Guest Management > Guest Users List > New page [10-4](#)  
Lobby Ambassador Guest Management > Guest Users List page [10-4, 10-6](#)  
Local Auth Active Timeout parameter [5-43](#)  
local EAP  
    configuring  
        using the CLI [5-47 to 5-52](#)  
        using the GUI [5-42 to 5-47](#)  
    debugging [5-52](#)  
    described [5-40 to 5-42](#)  
    example [5-41](#)  
    viewing information using the CLI [5-50](#)  
Local EAP Authentication parameter [5-47](#)  
Local EAP Profiles > Edit page [5-44](#)  
Local EAP Profiles page [5-44](#)  
Local Management Users > New page [10-3](#)  
Local Management Users page [10-2](#)  
Local Mode AP Fast Heartbeat Timeout parameter [7-68](#)  
Local Mode AP Fast Heartbeat Timer parameter [7-68](#)  
Local Net Users > New page [5-33, 13-9](#)  
Local Net Users page [5-32, 10-6](#)  
local network users  
    configuring using the CLI [5-34](#)  
    configuring using the GUI [5-32 to 5-34](#)  
local significant certificate (LSC)  
    configuring  
        using the CLI [7-30 to 7-32](#)  
        using the GUI [7-28 to 7-30](#)  
    described [7-28](#)

Local Significant Certificates (LSC) - AP Provisioning page [7-29](#)

Local Significant Certificates (LSC) - General page [7-28](#)

local user database, capacity [10-2](#)

location

calibration [11-44](#)

configuring settings using the CLI [4-106 to 4-108](#)

viewing settings using the CLI [4-108 to 4-110](#)

location appliance

installing certificate [4-105 to 4-106](#)

synchronizing with controller [4-106](#)

location-based services [11-43](#)

location presence [4-110](#)

logical connectivity diagram

Catalyst 3750G Integrated Wireless LAN Controller Switch [E-4](#)

Cisco 28/37/38xx Integrated Services Router [E-3](#)

Cisco WiSM [E-2](#)

login banner file

clearing [9-19](#)

described [9-15](#)

downloading

using the CLI [9-17 to 9-18](#)

using the GUI [9-16 to 9-17](#)

Login Banner page [9-19](#)

logs

roaming [D-26, D-39 to D-40](#)

RSNA [D-26, D-39 to D-41](#)

syslog [D-27, D-39 to D-41](#)

uploading

using the CLI [D-17 to D-18](#)

using the GUI [D-16 to D-17](#)

long preambles

described [5-52](#)

enabling on SpectraLink NetLink phones

using the CLI [5-53](#)

using the GUI [5-52](#)

LWAPP-enabled access points

debug commands [7-41](#)

disabling the reset button [7-46](#)

MAC addresses displayed on controller GUI [7-45](#)

radio core dumps  
described [7-41](#)  
receiving debug commands from controller [7-41](#)  
retrieving radio core dumps [7-42](#)  
reverting to autonomous mode [7-26 to 7-27](#)  
sending crash information to controller [7-41](#)  
uploading  
access point core dumps [7-44 to 7-45](#)  
radio core dumps [7-42 to 7-43](#)

---

## M

MAC address of access point  
adding to controller filter list  
using the GUI [8-39](#)  
displayed on controller GUI [7-45](#)  
MAC Address parameter [8-14](#)  
MAC filtering  
configuring on WLANs [6-16 to 6-17](#)  
DTIM period [6-18](#)  
MAC filtering, for mesh access points [8-13 to 8-14](#)  
MAC Filtering page [8-13](#)  
MAC Filters > New page [8-13](#)  
management frame protection (MFP)  
configuring  
using the CLI [5-72 to 5-73](#)  
using the GUI [5-70 to 5-71](#)  
debugging [5-75](#)  
described [5-68 to 5-69](#)  
guidelines [5-69](#)  
types [5-68](#)  
viewing settings [5-73 to 5-75](#)  
Management Frame Protection parameter [5-72](#)  
Management Frame Protection Settings page [5-72](#)  
management frame validation [5-69](#)  
management interface  
configuring  
using the CLI [3-15](#)  
using the GUI [3-12 to 3-15](#)

described [3-7](#)  
Management IP Address parameter [7-51](#)  
management over wireless  
described [5-54](#)  
enabling  
    using the CLI [5-54](#)  
    using the GUI [5-54](#)  
Master Controller Configuration page [7-9](#)  
Master Controller Mode parameter [7-9](#)  
Max Age parameter [3-30](#)  
Max HTTP Message Size parameter [4-27](#)  
Maximum Age parameter [3-31](#)  
maximum local database entries  
    configuring using the CLI [5-31](#)  
    configuring using the GUI [5-31](#)  
Maximum Local Database Entries parameter [5-31](#)  
Maximum Number of Sessions parameter [4-27](#)  
Maximum RF Usage Per AP parameter [4-67](#)  
Max-Login Ignore Identity Response parameter [5-43](#)  
Max RF Bandwidth parameter [4-76, 4-77](#)  
MCS data rates [4-34](#)  
Member MAC Address parameter [12-12](#)  
memory  
    types [1-14](#)  
memory leaks, monitoring [D-24 to D-25](#)  
mesh  
    network example [8-42](#)  
    parameters  
        configuring using the CLI [8-27, 8-30](#)  
        configuring using the GUI [8-23 to 8-27](#)  
    statistics  
        viewing for an access point using the CLI [8-42 to 8-45, 8-50 to 8-51](#)  
        viewing for an access point using the GUI [8-46 to 8-50](#)  
Mesh > LinkTest Results page [8-52](#)  
mesh access points  
    adding MAC address to controller filter list  
        using the CLI [8-14](#)  
        using the GUI [8-13 to 8-14](#)  
    adding to mesh networks [8-12](#)

and CAPWAP **8-8**  
converting to non-mesh access points **8-57**  
deployment modes **8-5**  
license requirements **8-2**  
models **8-2**  
network access **8-5**  
operating with Cisco 3200 Series Mobile Access Routers  
    configuration guidelines **8-58**  
    described **8-58**  
    using the CLI to configure **8-60**  
    using the GUI to configure **8-59**  
roles **8-3**  
selecting **8-35**  
supported by controller model **8-11**  
mesh backhaul data rates **8-10**  
mesh backhaul deployment example **8-6**  
mesh constraints **8-9**  
mesh deployment example **8-6**  
mesh minimum required LinkSNR **8-10**  
mesh neighbors, parents, and children **8-8**  
mesh node security statistics **8-49 to 8-50**  
mesh node statistics **8-48**  
mesh point-to-multipoint wireless bridging example **8-7**  
mesh point-to-point wireless bridging example **8-6**  
mesh routing **8-8**  
Message Authentication Code Key (MACK) parameter **5-8, 5-12**  
message logs  
    configuring  
        using the CLI **D-11 to D-14**  
        using the GUI **D-8**  
    viewing  
        using the CLI **D-14**  
        using the GUI **D-10 to D-11**  
*See also* system logging  
Message Logs page **D-11**  
Message parameter for web authentication **10-15**  
Metrics Collection parameter **4-76**  
MFP Client Protection parameter **5-71**  
MFP Frame Validation parameter **5-71**

MIC **6-25, 6-29**

migrating access points from the -J to the -U regulatory domain **7-80 to 7-83**

Min Failed Client Count per AP parameter **11-18**

Minimum RSSI parameter **4-63**

mirror mode. *See* port mirroring, configuring

MMH MIC

configuring **6-30, 6-31**

described **6-29**

MMH Mode parameter **6-30**

Mobile Announce messages **12-7**

mobility

failover **12-20**

overview **12-2**

Mobility Anchor Config page **12-22, 12-27**

Mobility Anchor Create button **12-23**

mobility anchors. *See* auto-anchor mobility

Mobility Anchors option **12-22**

Mobility Anchors page **12-22**

Mobility Group Member > New page **12-11**

Mobility Group Members > Edit All page **12-13**

mobility groups

configuring

using the CLI **12-14**

using the GUI **12-11 to 12-13**

with one NAT device **12-8**

with two NAT devices **12-9**

determining when to include controllers **12-7**

difference from RF groups **11-5**

examples **12-7**

illustrated **12-5**

messaging among **12-7**

number of access points supported **12-5, 12-6**

number of controllers supported **12-5**

prerequisites **12-9 to 12-10**

using with NAT devices **12-8 to 12-9**

mobility group statistics

types **12-16**

viewing

using the CLI **12-19**

using the GUI [12-16 to 12-19](#)

mobility list

described [12-6](#)

detecting failed members [12-20](#)

number of controllers supported [12-7](#)

ping requests to members [12-20](#)

Mobility Multicast Messaging > Edit page [12-14](#)

Mobility Multicast Messaging page [12-13](#)

mobility ping tests, running [12-28](#)

Mobility Statistics page [12-17](#)

MODE access point button [7-26, 7-46](#)

Mode parameter [4-63, 11-44](#)

monitor intervals, configuring using the GUI [11-20](#)

mpings [12-23, 12-28](#)

Multicast Appliance Mode parameter [3-25](#)

multicast client table, viewing [4-60](#)

multicast groups

viewing using the CLI [4-59](#)

viewing using the GUI [4-58](#)

Multicast Groups page [4-58](#)

multicast mode

configuring

using the CLI [4-58](#)

using the GUI [4-57 to 4-58](#)

described [4-55 to 4-56](#)

guidelines [4-56 to 4-57, 7-61](#)

Multicast page [4-57](#)

multiple AP-manager interfaces

5500 series controller example [3-44 to 3-45](#)

multiple country codes

configuration guidelines [7-75](#)

configuring

using the CLI [7-78](#)

using the GUI [7-76 to 7-77](#)

---

## N

NAC in-band mode [6-66](#)

NAC out-of-band integration



and hybrid REAP **13-5**  
configuring  
    using the CLI **6-71 to 6-72**  
    using the GUI **6-68 to 6-71**  
described **6-66 to 6-67**  
diagram **6-67**  
guidelines **6-67 to 6-68**

NAC out-of-band support  
    configuring for a specific access point group  
        using the CLI **6-72**  
        using the GUI **6-70**

NAC State parameter **6-56, 6-70, 6-71**

NAT address  
    for dynamic interface **3-20, 3-21**  
    for management interface **3-13, 3-16**

NAT devices in mobility groups **12-8 to 12-9**

Native VLAN ID parameter **13-13**

neighbor information  
    viewing for an access point using the CLI **8-54**  
    viewing for an access point using the GUI **8-51 to 8-54**

Neighbor Information option **8-51**

Neighbor Packet Frequency parameter **11-20**

neighbor statistics  
    viewing for an access point using the CLI **8-54**  
    viewing for an access point using the GUI **8-51 to 8-54**

Netbios Name Servers parameter **6-14**

Netmask parameter **6-13**

network analyzer supported software  
    AirMagnet **D-47**  
    Airopeek **D-47**  
    Omnipeek **D-47**  
    Wireshark **D-47**

Network Mobility Services Protocol (NMSP) **4-101**  
    debugging **4-113 to 4-114**  
    modifying the notification interval for clients, RFID tags, and rogues **4-110 to 4-111**  
    viewing settings **4-111 to 4-113**

Network parameter **6-13**

NTP server  
    configuring to obtain time and date **2-30**

Number of Attempts to LSC parameter [7-29](#)

Number of Hits parameter [5-61](#)

---

## O

OfficeExtend Access Point Configuration page [7-57](#)

OfficeExtend Access Point Home page [7-56](#)

OfficeExtend Access Points

LEDs [D-53](#)

positioning [D-53](#)

troubleshooting [D-53 to D-54](#)

OfficeExtend access points

and NAT [7-50](#)

configuring

a personal SSID [7-56 to 7-58](#)

using the CLI [7-54 to 7-56](#)

using the GUI [7-51 to 7-53](#)

described [7-49](#)

firewall requirements [7-50](#)

implementing security for [7-50](#)

licensing requirements [7-50](#)

supported access point models [7-50](#)

trap logs [7-50](#)

typical setup [7-49](#)

viewing statistics [7-58 to 7-60](#)

OfficeExtend AP parameter [7-53](#)

online help, using [2-17](#)

open source terms [C-8](#)

OpenSSL license issues [C-7 to C-8](#)

operating system

security [1-5](#)

software [1-4](#)

Order Used for Authentication parameter [5-11, 5-26](#)

Override Global Config parameter [10-26, 10-33](#)

Over-ride Global Credentials parameter [7-17, 7-21, 7-53](#)

Override Interface ACL parameter [5-64](#)

oversized access point images [7-49](#)

over-the-air provisioning (OTAP) [7-7](#)

---

## P

P2P Blocking parameter [6-22](#)

packet capture files

described [D-21](#)

sample output in Wireshark [D-22](#)

uploading

using the CLI [D-23 to D-24](#)

using the GUI [D-23](#)

Params parameter [7-29](#)

password

restoring [4-42](#)

password guidelines [7-20](#)

Password parameter

for access point authentication [7-20](#)

for access points [7-16](#)

for local net users [5-33, 13-10](#)

for PACs [9-25](#)

passwords

viewing in clear text [D-7](#)

path loss measurement (S60), CLI command [4-106](#)

PEAP parameter [5-44](#)

peer-to-peer blocking

configuring

using the CLI [6-23](#)

using the GUI [6-21 to 6-23](#)

described [6-20](#)

examples [6-21](#)

guidelines [6-21, 6-67](#)

permanent licenses, installed on 5500 series controllers [4-3](#)

Personal SSID parameter [7-57](#)

Physical Mode parameter [3-24, 3-25](#)

Physical Status parameter [3-24](#)

pico cell mode

configuring

using the CLI [11-50 to 11-51](#)

using the GUI [11-49 to 11-50](#)

debugging using the CLI [11-51](#)

guidelines [11-48](#)

overview [11-47 to 11-48](#)  
versions [11-49](#)

Pico Cell Mode parameter [11-49](#)  
ping link test [7-90](#)  
ping tests [12-28](#)  
pinning [11-6](#)  
PMK cache lifetime timer [6-28](#)  
PMKID caching [6-28](#)  
PoE Status parameter [7-99](#)  
Pool End Address parameter [6-13](#)  
Pool Start Address parameter [6-13](#)  
Port > Configure page [3-23](#)  
port mirroring, configuring [3-26 to 3-27](#)  
Port Number parameter  
    for controller [3-24](#)  
    for LDAP server [5-36](#)  
    for RADIUS server [5-8](#)  
    for TACACS+ server [5-25](#)  
    for wired guest access [10-31](#)  
Port parameter for IDS [5-107](#)  
ports  
    configuring [3-22 to 3-33](#)  
    on 2100 series controllers [3-2, 3-4](#)  
    on 4400 series controllers [3-2, 3-4](#)  
    on 5500 series controllers [3-3, 3-5](#)  
    on Catalyst 3750G Integrated Wireless LAN Controller Switch [3-3, 3-4, 3-5](#)  
    on Cisco 28/37/38xx Series Integrated Services Router [3-4 to 3-5, 4-116, 7-35](#)  
    on Cisco WiSM [3-4, 3-5](#)  
    overview [3-2 to 3-6](#)  
Ports page [3-22](#)  
Power Assignment Leader parameter [11-12](#)  
power cable warning for Japan [B-7](#)  
Power Injector Selection parameter [7-99](#)  
Power Injector State parameter [7-99](#)  
Power Neighbor Count parameter [11-12](#)  
Power over Ethernet (PoE)  
    configuring  
        using the CLI [7-100](#)  
        using the GUI [7-98 to 7-100](#)

described **1-14, 7-97**  
 Power Over Ethernet (PoE) parameter **3-24**  
 Power Threshold parameter **11-12**  
 preauthentication access control list (ACL)  
     applying to a WLAN  
         using the CLI **5-67**  
         using the GUI **5-64 to 5-65**  
     for external web server **10-20, 13-9**  
 Preauthentication ACL parameter **5-65, 6-63**  
 Pre-Standard State parameter **7-99**  
 Primary Controller Name parameter **7-51**  
 Primary Controller parameters **7-51, 7-69**  
 Primary RADIUS Server parameter **13-18**  
 priming access points **7-7**  
 Priority Order > Local-Auth page **5-37, 5-42**  
 Priority Order > Management User page **5-11, 5-26**  
 Priority parameter **3-31**  
 Privacy Protocol parameter **4-46**  
 probe request forwarding, configuring **7-88**  
 probe requests, described **7-88**  
 product authorization key (PAK)  
     obtaining for license upgrade **4-4**  
     registering **4-6**  
 product ID for controller, finding **4-24**  
 product ID of controller, finding **4-22**  
 Product License Registration page **4-22**  
 Profile Details page **D-35**  
 Profile Name parameter **6-5, 8-14, 10-31, 13-7**  
 protected access credentials (PACs)  
     overview **9-24**  
     uploading  
         using the CLI **9-26 to 9-27**  
         using the GUI **9-25**  
     using with local EAP **5-42, 13-22**  
 Protection Type parameter **5-70, 11-37**  
 Protocol parameter **5-60**  
 Protocol Type parameter **4-68**  
 PSK  
     configuring **6-27**

described [6-25](#)  
with mesh [8-25](#)  
PSK Format parameter [6-27](#)  
public key cryptography (PKC), with mobility [12-7](#)

---

## **Q**

QBSS  
configuring  
    using the CLI [6-41](#)  
    using the GUI [6-39 to 6-40](#)  
described [6-37](#)  
guidelines [6-38](#)  
QoS  
identity networking [5-78](#)  
levels [4-66, 6-35](#)  
translation values [6-36](#)  
with CAC [4-73](#)  
QoS profiles  
assigning to a WLAN  
    using the CLI [6-37](#)  
    using the GUI [6-36 to 6-37](#)  
configuring  
    using the CLI [4-68 to 4-69](#)  
    using the GUI [4-66 to 4-68](#)  
QoS roles  
assigning for use with hybrid REAP [13-10](#)  
configuring  
    using the CLI [4-71 to 4-72](#)  
    using the GUI [4-69 to 4-71](#)  
QoS Roles for Guest Users page [4-70](#)  
Quality of Service (QoS) parameter [6-36](#)  
quarantined VLAN  
configuring [3-13, 3-19](#)  
using [13-8](#)  
with hybrid REAP [13-4](#)  
with NAC out-of-band integration [6-69](#)  
Quarantine parameter  
for dynamic interface [3-19](#)

NAC out-of-band integration [6-69](#)

Query Interval parameter [5-108](#)

Queue Depth parameter [4-67](#)

queue statistics [8-48](#)

---

## R

Radio > Statistics page [6-43](#)

radio core dumps

described [7-41](#)

retrieving [7-42](#)

uploading

using the CLI [7-43](#)

using the GUI [7-42 to 7-43](#)

radio measurement requests

configuring

on the CLI [11-45](#)

on the GUI [11-44](#)

overview [11-43](#)

viewing status using the CLI [11-46](#)

radio preamble [5-52](#)

radio resource management (RRM)

benefits [11-5](#)

CCX features. *See CCX radio management*

configuring

monitor intervals using the GUI [11-20](#)

using the CLI [11-21 to 11-24](#)

using the GUI [11-10 to 11-21](#)

coverage hole detection

configuring per controller using the CLI [11-23](#)

configuring per controller using the GUI [11-17 to 11-19](#)

described [11-4](#)

debugging [11-26](#)

disabling dynamic channel and power assignment

using the CLI [11-35 to 11-36](#)

using the GUI [11-35](#)

overriding RRM [11-27 to 11-36](#)

overview [11-2](#)

specifying channels [11-13 to 11-16](#)

statically assigning channel and transmit power settings

    using the CLI [11-32](#)

    using the GUI [11-28 to 11-32](#)

update interval [11-7, 11-10](#)

Wireless > 802.11a/n (or 802.11b/g/n) > RRM > TPC parameter [11-11](#)

radio resource management (RRM) settings

    viewing using the CLI [11-24 to 11-26](#)

radio resource monitoring [11-2](#)

RADIUS

    accounting [5-3](#)

    authentication [5-3](#)

    choosing authentication priority order [5-11](#)

    configuring

        using the CLI [5-11 to 5-15](#)

        using the GUI [5-6 to 5-11](#)

    configuring on ACS [5-4](#)

    described [5-3](#)

    FIPS standard [5-12](#)

    KEK parameter [5-12](#)

    MACK parameter [5-12](#)

    server fallback behavior [5-10, 5-13](#)

    using with hybrid REAP [13-16](#)

RADIUS > Fallback Parameters page [5-10](#)

RADIUS accounting attributes [5-18 to 5-19](#)

RADIUS authentication attributes [5-16 to 5-18](#)

Range (RootAP to MeshAP) parameter [8-24](#)

Redirect URL After Login parameter [10-14](#)

Refresh-time Interval parameter [4-93](#)

Regenerate Certificate button [10-8](#)

regulatory information

    for 2100 series controllers [B-10](#)

    for 4400 series controllers [B-10](#)

    for lightweight access points [B-2 to B-10](#)

rehosting a license. *See* licenses

Rehost Ticket File Name parameter [4-23](#)

Remote Authentication Dial-In User Service. *See* RADIUS

Request Max Retries parameter [5-43](#)

Request Timeout parameter [5-43](#)

Reserved Roaming Bandwidth parameter [4-76, 4-77](#)

Reset Link Latency button [7-95](#)  
Reset Personal SSID parameter [7-52](#)  
resetting the controller [9-34](#)  
restoring passwords [4-42](#)  
Re-sync button [5-110](#)  
reverse path filtering (RPF) [12-26](#)  
RF Channel Assignment parameter [11-35](#)  
RF domain. *See* RF groups  
RF exposure declaration of conformity [B-5](#)  
RF group leader  
    described [11-6](#)  
    viewing [11-9](#)  
RF group name  
    described [11-7](#)  
    entering [11-8](#)  
RF groups  
    cascading [11-6](#)  
    configuring  
        using the CLI [11-8](#)  
        using the GUI [11-7](#)  
    difference from mobility groups [11-5](#)  
    overview [11-5 to 11-7](#)  
    pinning [11-6](#)  
    viewing status  
        using the CLI [11-10](#)  
        using the GUI [11-9](#)  
RFID tags  
    described [4-100](#)  
    formats supported [4-100](#)  
    number supported per controller [4-101](#)  
    tracking  
        configuring using the CLI [4-102](#)  
        debugging using the CLI [4-104](#)  
        viewing information using the CLI [4-103 to 4-104](#)  
RFID tracking on access points, optimizing  
    using the CLI [7-87](#)  
    using the GUI [7-85 to 7-86](#)  
RF-Network Name parameter [11-8](#)  
RLDP. *See* Rogue Location Discovery Protocol (RLDP)

roaming and real-time diagnostics

configuring using the CLI [D-39 to D-42](#)

described [D-26](#)

logs

described [D-26](#)

viewing [D-39 to D-40](#)

roam reason report [4-62](#)

roam reason report, described [8-32](#)

rogue access points

alarm [11-37](#)

automatically containing

using the CLI [5-89](#)

using the GUI [5-88](#)

classification mapping table [5-85](#)

classifying [5-84](#)

configuring RLDP [5-87 to 5-90](#)

detecting

using the CLI [11-38](#)

using the GUI [11-36 to 11-38](#)

managing [5-83](#)

rule-based classification support [5-84](#)

tagging, location, and containment [5-84](#)

viewing and classifying

using the CLI [5-101 to 5-106](#)

using the GUI [5-96 to 5-101](#)

WCS support for rule-based classification [5-87](#)

Rogue AP Detail page [5-97](#)

Rogue AP Ignore-List page [5-101](#)

rogue classification rules

configuring using the CLI [5-94 to 5-96](#)

configuring using the GUI [5-90 to 5-94](#)

Rogue Client Detail page [5-99](#)

rogue detection [5-87, 5-88](#)

and OfficeExtend access points [7-52, 7-55](#)

Rogue Detection parameter [5-87, 7-52](#)

Rogue Location Discovery Protocol (RLDP)

configuring

using the CLI [5-88 to 5-90](#)

using the GUI [5-87 to 5-88](#)

defined **5-84**  
Rogue Location Discovery Protocol parameter **5-88**  
Rogue on Wire parameter **5-88**  
Rogue Policies page **5-87**  
Rogue Rule > Edit page **5-92**  
Rogue Rules > Priority page **5-93**  
rogue states **5-85, 5-86**  
Role Name parameter **4-70**  
Role parameter **5-33, 13-10**  
root access points (RAPs)  
    selecting **8-35**  
root bridge **3-27**  
Root Cost parameter **3-30**  
Root Port parameter **3-30**  
RRM. *See* radio resource management (RRM)  
RSNA logs  
    configuring **D-39 to D-41**  
    described **D-26**  
Rx Sensitivity Threshold parameter **11-50**

---

## S

Save and Reboot button **9-21, 9-23**  
Save Licenses button **4-8**  
saving configuration settings **9-32**  
Scan Threshold parameter **4-63**  
Scope Name parameter **6-13**  
Search AP window **7-11, 7-14, 7-37**  
Search Clients page **7-103**  
Search WLANs window **6-8, 7-10, 7-14**  
Secondary Controller parameters **7-69**  
Secondary RADIUS Server parameter **13-18**  
secure web mode  
    described **2-18**  
    enabling  
        using the CLI **2-19**  
        using the GUI **2-18**  
security  
    overview **5-2**

solutions **5-2 to 5-3**

Security Policy Completed parameter **6-48**

security settings

- local and external authentication **8-23**

Select APs from Current Controller parameter **13-20**

self-signed certificate (SSC)

- used to authorize access points **7-27**

Sequence parameter **5-59**

serial number for controller, finding **4-24**

serial number of controller, finding **4-22**

serial port

- baud rate setting **2-24**
- timeout **2-24**

Server Address parameter **5-107**

Server Index (Priority) parameter **5-8, 5-25, 5-36**

Server IP Address parameter

- for LDAP server **5-36**
- for RADIUS server **5-8**
- for TACACS+ server **5-25**
- for wireless sniffer **D-49**

Server Key parameter **5-46, 13-22**

Server Status parameter **5-9, 5-25**

Server Timeout parameter **5-9, 5-26, 5-37**

service port **3-6**

service-port interface

- configuring
  - using the CLI **3-18**
  - using the GUI **3-12 to 3-15**
- described **3-9**

session timeout

- configuring
  - using the CLI **6-32**
  - using the GUI **6-31**
- described **6-31**

Set Priority button **4-18**

Set to Factory Default button **11-21**

Severity Level Filtering parameter **D-9**

Shared Secret Format parameter **5-8, 5-25**

Shared Secret parameter **5-8, 5-25**

Short Preamble Enabled parameter **5-52**  
short preambles **5-52**  
Show Wired Clients option **7-64**  
shunned clients  
    described **5-110**  
    viewing  
        using the CLI **5-111**  
        using the GUI **5-110**  
Signature Events Detail page **5-118**  
Signature Events Summary page **5-118**  
Signature Events Track Detail page **5-119**  
Simple Bind parameter **5-36**  
sniffing. *See* wireless sniffing **D-47**  
Sniff parameter **D-49**  
SNMP, configuring **4-42 to 4-43**  
SNMP community string  
    changing default values using the CLI **4-44 to 4-45**  
    changing default values using the GUI **4-43 to 4-44**  
SNMP v1 / v2c Community > New page **4-44**  
SNMP v1 / v2c Community page **4-43**  
SNMP v3 users  
    changing default values using the CLI **4-46**  
    changing default values using the GUI **4-45 to 4-46**  
SNMP V3 Users > New page **4-46**  
SNMP V3 Users page **4-45**  
software, upgrading  
    guidelines **9-2 to 9-4**  
    using the CLI **9-9 to 9-11**  
    using the GUI **9-6 to 9-8**  
software, upgrading in mesh networks  
    guidelines **9-4 to 9-6**  
Source parameter for ACLs **5-59**  
Source Port parameter **5-60**  
Spanning Tree Algorithm parameter **3-31**  
Spanning Tree Protocol (STP)  
    configuring  
        using the CLI **3-32 to 3-33**  
        using the GUI **3-28 to 3-32**  
    described **3-27**

spanning-tree root **3-27**  
Spanning Tree Specification parameter **3-30**  
SpectraLink NetLink phones  
enabling long preambles  
    using the CLI **5-53**  
    using the GUI **5-52**  
overview **5-52**  
Spectralink Voice Priority parameter **4-88**  
splash page web redirect **6-61**  
Splash Page Web Redirect parameter **6-63**  
SSC key-hash on Cisco WiSM **7-26**  
SSH  
    and OfficeExtend access points **7-53, 7-55**  
    configuring  
        using the CLI **2-35 to 2-36**  
        using the GUI **2-34 to 2-35**  
    troubleshooting access points  
        using the CLI **D-51 to D-52**  
        using the GUI **D-50 to D-51**  
SSH parameter **D-51**  
SSID  
    configuring  
        using the CLI **6-6**  
        using the GUI **6-5**  
    described **6-3**  
SSL certificate  
    loading  
        using the CLI **2-21 to 2-22**  
        using the GUI **?? to 2-21**  
SSLv2, configuring for web administration **2-19**  
SSLv2 for web authentication, disabling **10-13**  
Standard Signature > Detail page **5-117**  
Standard Signatures page **5-115**  
stateful DHCPv6 IP addressing **6-47**  
State parameter **5-108, 5-118**  
static IP address  
    configuring  
        using the CLI **7-47 to 7-48**  
        using the GUI **7-46 to 7-47**

described [7-46](#)

Static IP parameter [7-47](#)

Static Mobility Group Members page [12-11](#)

Statistics option [8-47](#)

Status parameter

- for DHCP scopes [6-14](#)
- for guest LANs [10-32](#)
- for SNMP community [4-44](#)
- for WLANs [6-6](#)

STP Mode parameter [3-29](#)

STP Port Designated Bridge parameter [3-28](#)

STP Port Designated Cost parameter [3-28](#)

STP Port Designated Port parameter [3-28](#)

STP Port Designated Root parameter [3-28](#)

STP Port Forward Transitions Count parameter [3-28](#)

STP Port ID parameter [3-28](#)

STP Port Path Cost Mode parameter [3-29](#)

STP Port Path Cost parameter [3-29](#)

STP Port Priority parameter [3-29](#)

STP State parameter [3-28](#)

strong passwords [7-20](#)

Summary page [2-35](#)

Supervisor 720

- configuring [4-114 to ??](#)
- described [4-114](#)

switch, configuring at the remote site [13-5 to 13-6](#)

Switch IP Address (Anchor) parameter [12-23](#)

SX/LC/T small form-factor plug-in (SFP) modules [3-5](#)

symmetric mobility tunneling

- illustrated [12-27](#)
- overview [12-26 to 12-27](#)
- verifying status
  - using the CLI [12-28](#)
  - using the GUI [12-27](#)

Symmetric Mobility Tunneling Mode parameter [12-27](#)

syslog

- described [D-27](#)
- levels [D-10](#)
- logs [D-39 to D-41](#)

Syslog Configuration page [D-8](#)  
Syslog Facility parameter [D-9](#)  
syslog server  
    number supported by controller [D-8](#)  
    removing from controller [D-8](#)  
    severity level filtering [D-9](#)  
Syslog Server IP Address parameter [D-8](#)  
system logging  
    configuring  
        using the CLI [D-11 to D-14](#)  
        using the GUI [D-8 to D-10](#)  
    setting severity level [D-10](#)  
system logs, viewing using the CLI [D-14](#)  
system messages [D-2 to D-5](#)  
System Resource Information page [D-5](#)  
system resources  
    viewing using the CLI [D-6](#)  
    viewing using the GUI [D-5](#)

---

## T

TACACS+  
    accounting [5-20](#)  
    authentication [5-19](#)  
    authorization [5-19](#)  
    choosing authentication priority order [5-26](#)  
    configuring  
        using the CLI [5-27 to 5-29](#)  
        using the GUI [5-24 to 5-26](#)  
    configuring on ACS [5-20 to 5-24](#)  
    described [5-19 to 5-20](#)  
    roles [5-19, 5-23](#)  
    viewing administration server logs [5-29 to 5-30](#)  
TACACS+ (Authentication, Authorization, or Accounting) Servers > New page [5-25](#)  
TACACS+ (Authentication, Authorization, or Accounting) Servers page [5-24](#)  
TACACS+ (Cisco) page (on CiscoSecure ACS) [5-22](#)  
TACACS+ Administration .csv page (on CiscoSecure ACS) [5-29, 5-30](#)  
TCP MSS  
    configuring [7-96 to 7-97](#)

described [7-96](#)  
telemetry [4-100](#)  
Telnet  
    and OfficeExtend access points [7-53, 7-55](#)  
    troubleshooting access points  
        using the CLI [D-51 to D-52](#)  
        using the GUI [D-50 to D-51](#)  
Telnet parameter [D-51](#)  
Telnet sessions  
    configuring  
        using the CLI [2-35 to 2-36](#)  
        using the GUI [2-34 to 2-35](#)  
Telnet-SSH Configuration page [2-34](#)  
Tertiary Controller parameters [7-69](#)  
text2pcap sample output [D-45](#)  
TFTP server guidelines [9-2](#)  
time, configuring  
    using the CLI [2-32](#)  
    using the GUI [2-30](#)  
    using the NTP server [2-30](#)  
time-length-values (TLVs), supported for CDP [4-90 to 4-92](#)  
timeout, configuring for disabled clients [6-17](#)  
Time Since Topology Changed parameter [3-30](#)  
timestamps, enabling or disabling in log and debug messages [D-14](#)  
Time to Live for the PAC parameter [5-46, 13-22](#)  
time zone  
    configuring using the CLI [2-32](#)  
    configuring using the GUI [2-31](#)  
TKIP  
    configuring [6-27, 6-28](#)  
    described [6-25](#)  
    parameter [6-27](#)  
Topology Change Count parameter [3-30](#)  
traffic specifications (TSPEC) request  
    described [4-74](#)  
    examples [4-74](#)  
traffic stream metrics (TSM)  
    configuring  
        using the CLI [4-84](#)

using the GUI [4-76](#)  
described [4-75](#)  
viewing statistics  
    using the CLI [4-86 to 4-87](#)  
    using the GUI [4-80 to 4-83](#)

Transfer Mode parameter  
    downloading a CA certificate [9-23](#)  
    downloading a configuration file [9-30](#)  
    downloading a customized web authentication login page [10-23](#)  
    downloading a device certificate [9-20](#)  
    upgrading controller software [9-8](#)  
    uploading a configuration file [9-28](#)  
    uploading a PAC [9-25](#)  
    uploading packet capture files [D-23](#)

Transition Time parameter [4-63](#)

transmit power  
    statically assigning using the CLI [11-32](#)  
    statically assigning using the GUI [11-28 to 11-32](#)

transmit power levels [11-31](#)

Transmit Power parameter [11-50](#)

transmit power threshold, decreasing [11-21](#)

trap logs  
    for OfficeExtend access points [7-50](#)

Trap Logs page [4-3, 6-43](#)

troubleshooting  
    access point join process [7-34 to 7-41](#)  
    CCXv5 clients [D-26 to D-42](#)  
    problems [D-6 to D-8](#)

tunnel attributes and identity networking [5-80 to 5-81](#)

Tx Power Level Assignment parameter [11-35](#)

Type parameter [6-5, 10-31, 13-7](#)

---

## U

### U-APSD

described [4-75](#)  
viewing status  
    using the CLI [4-86](#)  
    using the GUI [4-79](#)

UDP, use in RADIUS **5-4**

UDP port **12-23, 12-28**

unicast mode **4-55**

unique device identifier (UDI)

described **7-89**

retrieving

using the CLI **7-90**

using the GUI **7-89 to 7-90**

Upload button **5-115, 7-43, 9-26, D-17, D-23**

Upload CSV File parameter **13-21**

Upload File from Controller page **7-42, 9-25, 9-27, D-17, D-23**

URL parameter **10-21**

URL to Send the Notifications parameter **4-27**

USB console port, using on a 5500 series controller **3-33 to 3-34**

Use AES Key Wrap parameter **5-7**

User Access Mode parameter **10-3**

user accounts, managing **10-1 to 10-25**

User Attribute parameter **5-36**

User Base DN parameter **5-36**

User Credentials parameter **5-37**

User Name parameter **5-33, 13-10**

Username parameter **7-16, 7-20, 7-21**

User Object Type parameter **5-36**

User parameter **9-25**

User Profile Name parameter **4-46**

Using Our SSID parameter **5-88**

---

## V

Validate Rogue Clients Against AAA parameter **5-88**

Valid Client on Rogue AP parameter **5-88**

Validity parameter **9-25**

VCCI warnings for controllers **B-7**

VCI strings **7-34**

Verify Certificate CN Identity parameter **5-45**

video information, viewing for mesh networks using the CLI **8-42 to 8-44**

video settings

configuring

using the CLI **4-84**

using the GUI [4-76 to 4-78](#)

viewing

- using the CLI [4-85 to 4-87](#)
- using the GUI [4-78 to 4-83](#)

virtual interface

- configuring
  - using the CLI [3-17](#)
  - using the GUI [3-12 to 3-15](#)
- described [3-9](#)

VLAN Identifier parameter

- for AP-manager interface [3-14](#)
- for dynamic interface [3-19, 3-20](#)

VLAN ID parameter [6-68, 13-14](#)

VLAN interface. *See* dynamic interface

VLAN Mappings

- button [13-13](#)
- page [13-13](#)

VLANs

- described [3-9](#)
- guidelines [3-12](#)

VLAN Support parameter [13-13](#)

VLAN tag, and identity networking [5-79](#)

Voice & Video Optimized parameter [4-88](#)

voice information, viewing for mesh networks using the CLI [8-42 to 8-44](#)

Voice Optimized parameter [4-88](#)

voice-over-IP (VoIP) telephone roaming [4-61](#)

Voice RSSI parameter [11-18](#)

voice settings

- configuring
  - using the CLI [4-83 to 4-84](#)
  - using the GUI [4-75 to 4-76](#)
- viewing
  - using the CLI [4-85 to 4-87](#)
  - using the GUI [4-78 to 4-83](#)

VoIP calls, error codes [6-45 to 6-46](#)

VoIP snooping

- configuring
  - using the CLI [6-44 to 6-47](#)
  - using the GUI [6-42 to 6-43](#)

described [6-41 to 6-42](#)  
VoIP Snooping and Reporting parameter [6-42](#)  
VPN Gateway Address parameter [6-33](#)  
VPN passthrough  
    configuring using the CLI [6-33](#)  
    configuring using the GUI [6-33](#)  
    described [6-32](#)

---

## **W**

warranty [C-4 to C-6](#)  
webauth.tar files [10-26](#)  
webauth bundle [10-22](#)  
web authentication  
    certificate  
        obtaining using the CLI [10-9 to 10-10](#)  
        obtaining using the GUI [10-7 to 10-9](#)  
    configuring a WLAN for  
        using the CLI [6-34](#)  
        using the GUI [6-33](#)  
    described [10-10](#)  
    process [10-10 to 10-13](#)  
    successful login page [10-13](#)  
Web Authentication Certificate page [10-8](#)  
web authentication login page  
    assigning per WLAN  
        using the CLI [10-27](#)  
        using the GUI [10-26](#)  
    choosing the default  
        using the CLI [10-15 to 10-16](#)  
        using the GUI [10-14 to 10-15](#)  
    customized example [10-25](#)  
    customizing from an external web server  
        using the CLI [10-21](#)  
        using the GUI [10-20 to 10-21](#)  
    default [10-12](#)  
    downloading a customized login page  
        guidelines [10-22](#)  
        using the CLI [10-24](#)

using the GUI [10-22 to 10-23](#)  
modified default example [10-17](#)  
previewing [10-15, 10-23](#)  
verifying settings using the CLI [10-25](#)  
Web Authentication option [10-32](#)  
Web Authentication Type parameter [10-14, 10-21, 10-23](#)  
Web Auth Type parameter [10-26, 10-33](#)  
web-browser security alert [10-11](#)  
Web Login page [10-14, 10-20](#)  
web mode  
    configuring  
        using the CLI [2-19](#)  
        using the GUI [2-18](#)  
    described [2-18](#)  
Web Passthrough option [10-32](#)  
Web Policy parameter [5-65, 6-34, 6-63](#)  
web redirect [6-60](#)  
Web Server IP Address parameter [10-21](#)  
Web Session Timeout parameter [2-18](#)  
WEP keys, configuring [6-23](#)  
WGB parameter [7-64](#)  
WGB Wired Clients page [7-64](#)  
wired guest access  
    configuration overview [10-30](#)  
    configuring  
        using the CLI [10-33 to 10-39](#)  
        using the GUI [10-31 to 10-33](#)  
    described [10-28 to 10-30](#)  
    guidelines [10-30](#)  
    one-controller example [10-29](#)  
    two-controller example [10-30](#)  
wireless intrusion prevention system (wIPS)  
    configuring on an access point [5-125 to 5-126](#)  
    described [5-123](#)  
    viewing information [5-126 to 5-127](#)  
wireless sniffing  
    configuring  
        using the CLI [D-49](#)  
        using the GUI [D-48 to D-49](#)

prerequisites [D-47](#)  
supported software [D-47](#)

WLAN ID parameter [6-5](#)

WLAN mobility security values [12-25](#)

WLAN override [9-2](#)

WLAN Profile parameter [5-34, 13-10](#)

WLANS

- assigning web login, login failure, and logout pages
  - using the CLI [10-27](#)
  - using the GUI [10-26](#)
- checking security settings [6-24](#)
- configuring
  - conditional web redirect [6-61 to 6-64](#)
  - static and dynamic WEP [6-24](#)
- connecting clients to [13-15](#)
- creating
  - using the CLI [6-6](#)
  - using the GUI [6-4 to 6-6](#)
- deleting
  - using the CLI [6-8](#)
  - using the GUI [6-5](#)
- described [1-13, 3-10 to 3-12, 6-3 to 6-4](#)
- enabling or disabling
  - using the CLI [6-7](#)
  - using the GUI [6-6](#)
- searching [6-8](#)
- session timeout
  - configuring [6-31](#)
  - described [6-31](#)
- splash page web redirect [6-61](#)
- wired security solution [1-5](#)

WLANS > Edit (Advanced) page [6-42, 6-65](#)

- applying an ACL to a WLAN [5-64](#)
- configuring AAA override [5-83](#)
- configuring infrastructure MFP for a WLAN [5-71](#)
- configuring IPv6 bridging [6-49](#)
- configuring NAC out-of-band integration [6-70](#)
- configuring the diagnostic channel [D-27](#)

WLANS > Edit (QoS) page [6-39](#)

WLANS > Edit (Security > AAA Servers) page

assigning LDAP servers to a WLAN [5-38](#)

choosing RADIUS or LDAP servers for external authentication [10-26](#)

disabling accounting servers on a WLAN [6-64](#)

enabling local EAP on a WLAN [5-47](#)

WLANS > Edit (Security > Layer 2) page [6-27, 6-30](#)

WLANS > Edit (Security > Layer 3) page

applying a preauthentication ACL to a WLAN [5-64](#)

configuring a WLAN for VPN Passthrough [6-33](#)

configuring web redirect [6-63](#)

configuring wired guest access [10-32](#)

WLANS > Edit page [6-5, 10-31, 13-7](#)

WLANS > New page [6-5, 8-32, 8-33, 8-53, 8-54, 10-31, 13-7](#)

WLANS page [6-4, 12-22](#)

WLAN SSID parameter

configuring for guest user [10-5](#)

creating a centrally switched WLAN [13-7](#)

creating WLANS [6-5](#)

identifying the guest LAN [10-31](#)

mapping an access point group to a WLAN [6-56, 6-71](#)

WMM

configuring [4-35, 6-39, 6-41](#)

described [6-38](#)

with CAC [4-73](#)

WMM parameter [4-88, 4-89](#)

WMM Policy parameter [6-39](#)

workgroup bridges (WGBs)

debugging [7-66](#)

described [7-60](#)

guidelines [7-61](#)

illustrated [7-49, 7-52, 7-57, 7-60](#)

sample configuration [7-63](#)

viewing status

using the CLI [7-66](#)

using the GUI [7-63 to 7-65](#)

world mode [4-30, 4-32](#)

WPA1+WPA2

configuring

using the CLI [6-28](#)

using the GUI [6-27](#)

described [6-25](#)

WPA2 Policy parameter [6-27](#)

WPA Policy parameter [6-27](#)

wplus license. *See* licenses

wplus software set, included features [4-2](#)

