



## Preface

---

This preface describes the audience, organization, and conventions of the *Cisco Wireless LAN Controller System Message Guide*. It also provides information about how to obtain related documentation.

This chapter contains the following sections:

- [Audience, page ix](#)
- [Organization, page ix](#)
- [Conventions, page ix](#)
- [Related Documentation, page x](#)
- [Obtaining Documentation and Submitting a Service Request, page xi](#)

## Audience

This publication is designed for the installer and user with a working knowledge of Cisco Wireless LAN Controllers. Users of this publication might also include network administrators and other people responsible for setting up and maintaining these devices.

## Organization

This book is organized into the following chapters:

- Chapter 1 provides an introduction to system messages and an overview of how to read the system messages.
- The rest of the chapters in this document are organized alphabetically by the types of system messages.

## Conventions

Screen examples use the following conventions:

Convention	Description
<b>boldface font</b>	Commands and keywords are in <b>boldface</b> .
<i>italic font</i>	Arguments for which you supply values are in <i>italics</i> .
[ ]	Elements in square brackets are optional.
{ x   y   z }	Alternative keywords are grouped in braces and separated by vertical bars.
[ x   y   z ]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
screen font	Terminal sessions and information the system displays are in screen font.
<b>boldface screen font</b>	Information you must enter is in <b>boldface screen font</b> .
<i>italic screen font</i>	Arguments for which you supply values are in <i>italic screen font</i> .
→	This pointer highlights an important line of text in an example.
^	The symbol ^ represents the key labeled Control—for example, the key combination ^D in a screen display means hold down the Control key while you press the D key.
< >	Nonprinting characters, such as passwords are in angle brackets.

Notes use the following conventions:



**Note**

Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the publication.

## Related Documentation

These documents provide complete information about the Cisco Unified Wireless Network Solution:

- *Cisco 5500 Series Wireless Controller Installation Guide*
- *Cisco Flex 7500 Series Wireless Controller Installation Guide*
- *Cisco Wireless LAN Controller Command Reference*
- *Cisco Wireless Control System Configuration Guide*

- *Quick Start Guide: Cisco Prime Infrastructure*
- Quick start guide and hardware installation guide for your specific lightweight access point  
Click this link to browse to user documentation for the Cisco Unified Wireless Network Solution:  
[http://www.cisco.com/en/US/products/hw/wireless/tsd\\_products\\_support\\_category\\_home.html](http://www.cisco.com/en/US/products/hw/wireless/tsd_products_support_category_home.html)

## Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS version 2.0.

