



## CHAPTER 2

# Adding and Deleting Location Servers

---

This chapter describes how to add and delete location servers.

This chapter contains the following sections:

- [“Adding a Location Server to Cisco WCS” section on page 2-2](#)
- [“Deleting Location Servers from the Cisco WCS Database” section on page 2-2](#)

## Adding a Location Server to Cisco WCS

To add a location server to Cisco WCS, log into WCS and follow these steps:

- 
- Step 1** Verify that you can ping the location server that you want to add from the Cisco WCS server.
  - Step 2** Choose **Location > Location Servers** to display the All Location Servers window.
  - Step 3** From the Select a command drop-down menu (right-hand side), choose **Add Server** and click **GO**.
  - Step 4** In the Server Name field, enter a name for the location server.
  - Step 5** In the IP Address field, enter the location server's IP address.
  - Step 6** (Optional) In the Contact Name field, enter the name of the location server administrator.
  - Step 7** In the User Name and Password fields, enter the username and password for the location server.  
The default username and password are both *admin*.
  - Step 8** In the Port field, enter the port number used by the location server.  
The default port is 8001.
  - Step 9** Check the Enable check box to enable HTTPS. Uncheck the check box to disable HTTPS.  
HTTPS is disabled by default.
  - Step 10** Click **Save**.  
Cisco WCS searches for the location server and adds it to the Cisco WCS database.
  - Step 11** Go back to the All Location Servers window and click **Refresh** (top right). Verify that the location server that you have just added appears in the window.



---

**Note** Cisco WCS does not allow you to add a server that already exists in the WCS database.

---

## Deleting Location Servers from the Cisco WCS Database

To delete location servers from the Cisco WCS database, follow these steps:

- 
- Step 1** In Cisco WCS, choose **Location > Location Servers**.
  - Step 2** Select the server or servers to be deleted by checking the corresponding check box(es).
  - Step 3** From the Select a command drop-down menu (right-hand side), choose **Delete Server(s)** and click **GO**.
  - Step 4** Click **OK** to confirm that you want to delete the selected location server from the WCS database.
  - Step 5** Click **Cancel** to stop deletion.
-