



## INDEX

### Symbols

---

\* (asterisk), in Cisco IPICS Administration Console windows [10, 14](#)

### A

---

About, in Administration Console [17](#)

accessing

Activity Log Management window [133](#)

Activity Log Options window [138](#)

Administration Console [12](#)

Channel Groups window [32](#)

Channels window [4](#)

Descriptors window [80](#)

Dial Engine drawer [1](#)

Download PMC window [2](#)

License Management window [119](#)

Locations window [92](#)

Multicast Pool window [96](#)

My Profile window [2](#)

online help [17](#)

Ops View window [3](#)

Options window [140](#)

PMC Installer window [173](#)

PMC Regions window [176](#)

PMC Versions window [155](#)

Policy Management drawer [1](#)

Radios window [49](#)

RMS window [104](#)

Skins window [170](#)

User Groups window [46](#)

Users window [3](#)

Virtual Talk Groups window [1](#)

action

activate VTG [8](#)

definition [1](#)

deleting [18](#)

dial-out [8, 16](#)

in multi-purpose type policy [12](#)

invite to VTG [8, 12](#)

managing [8](#)

notification [8](#)

overview [8](#)

reactivating [29](#)

VTG add participants [8, 15](#)

activating

policy [24](#)

- RMS [110](#)
- VTG [19, 12](#)
- active
  - channel state in Channel window, described [12](#)
  - multicast address [97, 101](#)
  - VTG [2](#)
  - VTG guidelines [17](#)
- active users
  - fields, described [127](#)
  - viewing [126](#)
  - viewing information for [126](#)
- activity log
  - described [131](#)
  - downloading [133](#)
  - managing [131](#)
  - managing activity types per ops view [137](#)
  - options per ops view [137](#)
  - types [137](#)
  - understanding the Activity Log Management window [132](#)
  - viewing [133](#)
  - viewing and downloading [133](#)
  - viewing and downloading archived [135](#)
- activity log retention period, setting described [142](#)
- adding [171, 177](#)
  - alert tone set [166](#)
  - a sequence of multicast addresses to multicast pool [99](#)
  - channel [7](#)
  - channel group [33](#)
  - locations [93](#)
  - multicast address to multicast pool [98](#)
  - radio [52](#)
  - radio and tone descriptors [82](#)
  - regions [177](#)
  - RMS [111](#)
  - skins [171](#)
  - user [6](#)
  - user group [47](#)
  - VTG [9](#)
- address
  - e-mail, of user [12](#)
  - information for user [11](#)
  - multicast address [97](#)
  - of user, in user profile [5](#)
  - street, of user in Users window [11](#)
- Address Information tab [11](#)
- Administration Console
  - accessing [12](#)
  - Authentication window [12](#)
  - client system requirements [12](#)
  - displaying current data [11](#)
  - exiting [14](#)
  - logging in [12](#)
  - logging out [14](#)
  - obtaining information about [17](#)
  - online help [17](#)
  - overview [8](#)

- refreshing [11](#)
- timeout [17](#)
- advanced PMC permissions [19](#)
- advanced PMC permissions, field described [8](#)
- alerting tones
  - See* alert tones
- alert tones
  - adding [166](#)
  - associating ops views [168](#)
  - creating alert tone sets [164](#)
  - deleting [169](#)
  - managing [163](#)
  - viewing or editing alert tone sets [167](#)
- allow latch
  - field in user profile [8](#)
  - for channel [19](#)
  - for radio [58](#)
  - in PMC tab [19](#)
- all role, described [8, 12](#)
- associating
  - alert tones to ops views [168](#)
  - channel with user [28](#)
  - ops views with user group [51](#)
  - ops view with user [39](#)
  - phone with user [31](#)
  - policy with user [32, 23](#)
  - radio with user [34](#)
  - user with policy [32, 23](#)
  - user with user [30](#)

- Associations tab [22](#)
- audio, disable [19](#)
- audio client [7](#)
- authentication log file [18, 20](#)
- Authentication window [12](#)

---

## B

- backup and restore operations
  - overview [1](#)
  - performing [1](#)
- browser
  - guidelines for using [11](#)
  - memory issues [12](#)
  - pop-up windows, disabling blocking [12](#)
  - refreshing windows [11](#)

---

## C

- calculating DSPs [18](#)
- CAP XML file, for external notification [5](#)
- caveats [48](#)
- changing status of VTG [18](#)
- Channel [35](#)
- channel
  - active status [12](#)
  - adding [7](#)
  - adding to VTG template [7](#)
  - allow association to users, field described [10](#)

- allow latch, described 19
  - allow use in VTGs field, described 11
  - associated 37
  - associated ops view, field described 17
  - associating radio signals with user 28
  - associating to ops views 25
  - associating user with 28
  - associating with user 26
  - available 36, 52
  - changing status 21
  - channel color, field described 19
  - channel region, field described 19
  - channel selector, field described 16
  - deleting 31
  - deleting from a channel group 38
  - described 2
  - disabled status 12
  - disabling 21
  - editing information 8
  - enabled status 12
  - enable latch, field described 19, 58
  - enable VAD, field described 18
  - enabling 21
  - in inactive VTG 7
  - listen only, field described 19
  - location 13
  - location, field described 13
  - mixing secure and non-secure in VTG 7
  - multicast address, field described 14
  - multicast address port, field described 14
  - name, field described 9
  - PMC region field described 19
  - radio, field described 15
  - removing 31
  - removing from a channel group 38
  - RX mute during PTT, field described 18
  - search for in VTG window 35
  - secure, field described 10
  - status 12
  - type, field described 12
  - unavailable for VTG 32
  - viewing associations 30
  - viewing information 8
- Channel dashboard
    - elements 4
    - overview 4
  - channel group
    - adding 33
    - adding to VTG template 8
    - associated ops view, field described 35
    - associated VTG 38
    - associated VTG status 38
    - associating ops views to 39
    - channels in 3
    - deleting 40
    - deleting a channel from 38
    - described 3
    - editing information 34

- name [35](#)
- removing [40](#)
- removing a channel from [38](#)
- viewing associations [37](#)
- viewing information [34](#)
- Channel Selector Permissions [35](#)
- channel selectors
  - associated channel field, described [47](#)
  - enabled status check box [47](#)
  - label [46](#)
- channel statistics log file [18, 20](#)
- Cisco IOS documentation [xxii](#)
- Cisco IPICS
  - Administration Console [8](#)
  - database
    - backing up [4](#)
    - logs [20](#)
    - restoring [13](#)
  - deployment options [4](#)
  - getting started [2](#)
  - hardware components [4](#)
  - initial configuration [2](#)
  - IP multicast address guidelines for [98](#)
  - logging in to [1](#)
  - Login window [1](#)
  - overview [1, 4](#)
  - Restrict Operator Role assignments [143](#)
  - role [7](#)
  - server [5](#)
  - session timeout period setting [143](#)
  - setting up [2](#)
  - software components [4](#)
- Cisco IPICS policy engine
  - See* policy engine
- Cisco IPICS server
  - Administration Console [8](#)
  - described [5](#)
  - usage guidelines [9](#)
- Cisco IPICS service
  - about [1](#)
  - configuring for Cisco Unified Communications Manager [2](#)
  - configuring for Cisco Unified Communications Manager Express [4](#)
  - disabling log in [2](#)
  - subscribing to [5](#)
  - using [7](#)
- Cisco IPICS session timeout [143](#)
- Cisco IPICS session timeout period, setting described [143](#)
- Cisco IP Interoperability and Collaboration System
  - See* Cisco IPICS
- Cisco Land Mobile Radio (LMR) over IP/SRND documentation [xxii](#)
- Cisco router
  - configuring as SIP provider [53](#)
  - function in a Cisco IPICS deployment [7](#)
- Cisco Security Agent documentation [xxii](#)
- Cisco Unified Communications Manager

- configuring as SIP provider [49](#)
  - configuring Cisco IPICS service for [2](#)
  - documentation [xxi](#)
  - function in a Cisco IPICS deployment [7](#)
- Cisco Unified Communications Manager Express
  - configuring Cisco IPICS service for [4](#)
  - documentation [xxi](#)
- Cisco Unified IP Phone
  - accessing Cisco IPICS service from [7](#)
  - allow latch [19](#)
  - audio [19](#)
  - dial login for [13](#)
  - digit ID [14, 6](#)
  - digit password [14](#)
  - disable [15](#)
  - documentation [xxi](#)
  - enable [15](#)
  - latching [21](#)
  - listen only [19, 21](#)
  - managing for user [15](#)
  - mute [15](#)
  - subscribing to Cisco IPICS service [5](#)
  - timeout period, setting described [142](#)
  - timeout period setting [142](#)
  - unmute [15](#)
  - user in VTG [21](#)
  - using as a PTT device [1](#)
- cluster view daemon, trace file [4](#)
- codec [15, 44](#)
- radio [53](#)
- communications preferences
  - configuring [24](#)
  - described [23](#)
  - managing [23](#)
- configuring
  - Cisco IPICS [2](#)
  - controllers [6](#)
  - default tone sequences [48](#)
  - ds0 groups [6](#)
  - RMS [2](#)
  - RMS security features [2](#)
- configuring Cisco IOS Express as SIP provider [53](#)
- connection type, multicast address [97, 101](#)
- control function permissions [36](#)
- control functions [37](#)
- controllers
  - configuring T1/E1 controllers [6](#)
  - on RMS [109](#)
- copying a user [6](#)
- customized script prompts
  - codec [18](#)
  - deleting [20](#)
  - described [16](#)
  - downloading [19](#)
  - renaming [20](#)
  - uploading [18](#)
  - viewing list of [17](#)
- Customized Script Prompts window [17](#)

**D**

- Dashboard window, overview [1](#)
- database
  - backing up [4](#)
  - choosing a backup destination [12](#)
  - manually starting database server [28](#)
  - options
    - changing [9](#)
    - default [9](#)
  - options for restoring [14](#)
  - restoring [13](#)
  - troubleshooting a backup procedure [22](#)
  - troubleshooting a restore procedure [22](#)
- Database Management window
  - overview [3](#)
  - tabs inside of [3](#)
- deactivated
  - RMS [110](#)
  - RMS status [108](#)
  - VTG [19](#)
- DEBUG-level error messages [13](#)
- debug log file [18, 20](#)
- debug trace level [5](#)
- dedicated dial engine, for external notification [2](#)
- dedicated-dial-engines.xml file [2](#)
- default language folder [12](#)
- deleting
  - action from policy [18](#)
  - alert tones [169](#)
  - channel [31](#)
  - channel from a channel group [38](#)
  - channel group [40](#)
  - descriptors [85](#)
  - languages [14](#)
  - locations [95](#)
  - multicast address [102](#)
  - PMC regions [178](#)
  - PMC skins [172](#)
  - PMC versions [162](#)
  - policy [25](#)
  - radio [65](#)
  - radio and tone descriptors [85](#)
  - RMS [116](#)
  - spoken names prompts [30](#)
  - trigger from policy [22](#)
  - user [44](#)
  - user group [54](#)
  - VTG [16](#)
- deployment, of Cisco IPICS [4](#)
- description
  - radio [53](#)
- descriptors
  - deleting [85](#)
  - managing radio and tone [69](#)
  - updating [83](#)
- diagnostic information
  - downloading [11](#)

- viewing [7](#)
- Diagnostics window
  - diagnostic summary pane, described [11](#)
  - elements [8](#)
  - overview [1,7](#)
- dial engine
  - codec [44](#)
  - described [1](#)
  - parameters [43](#)
  - services
    - obtaining information about [2](#)
    - status [3](#)
  - trace file [4](#)
- Dial Engine drawer, accessing [1](#)
- dial engine script
  - See scripts [31](#)
- Dial Engine Script notification [11](#)
- dial-in
  - assigning to ops view [19](#)
  - configuring SIP provider for [48](#)
  - SIP trunk [51](#)
- dial-in floor [34](#)
- dialing out to participants in an active VTG [28](#)
- dial-in phone
  - disable [15](#)
  - enable [15](#)
  - listen only [19,21](#)
  - managing for user [15](#)
  - mute [15](#)
  - unmute [15](#)
- dial login
  - configuring [13](#)
  - described [13](#)
- Dial Login tab [14](#)
- Dial notification [10](#)
- dial-out
  - configuring SIP provider for [48](#)
  - SIP trunk [51](#)
- dial-out action [8,16](#)
- dial preferences
  - configuring [24](#)
  - described [23](#)
  - order of [27](#)
- dial prefix [46](#)
- digit ID [14,6](#)
- digit password (PIN) [14,7](#)
- direct dial
  - adding numbers [46](#)
  - configuring SIP provider for [48](#)
  - deleting numbers [48](#)
  - described [44](#)
  - dial prefix [46](#)
  - updating numbers [47](#)
  - viewing information about numbers [47](#)
  - viewing list of numbers [45](#)
- Direct Dial Management window [45](#)
- direct two-way channels [30](#)
- disable



- audio [19](#)
  - Cisco Unified IP Phone [15](#)
  - dial-in phone [15](#)
  - end device [15](#)
  - listen only [21](#)
  - PMC [15](#)
  - radio [64](#)
  - voice activation detection (VAD) [21](#)
  - disable audio, in user profile [8](#)
  - disabled channel [12](#)
  - disabled user [42](#)
  - disable PMC activity log upload, setting described [151](#)
  - disable RMS comparator, setting described [141](#)
  - disabling
    - latch in User Details window [26](#)
    - PMC attributes in an active VTG [28](#)
    - user [42](#)
  - dispatcher role
    - described [8, 12](#)
    - responsibilities [1](#)
  - documentation
    - Cisco 7800 Series Media Convergence Servers [xxi](#)
    - Cisco IOS [xxii](#)
    - Cisco Land Mobile Radio (LMR) over IP/SRND [xxii](#)
    - Cisco Security Agent [xxii](#)
    - Cisco Unified Communications Manager [xxi](#)
    - Cisco Unified Communications Manager Express [xxi](#)
    - Cisco Unified IP Phones [xxi](#)
    - session initiation protocol (SIP) [xxii](#)
  - downloading
    - activity logs [133](#)
    - archived activity logs [135](#)
    - PMC [2](#)
  - DS0
    - destination [114](#)
    - disabling [115](#)
    - enabling [114](#)
    - in loopback [114](#)
    - source [114](#)
    - status [114](#)
  - ds0 groups, configuring [6](#)
  - dspfarm
    - calculating DSPs [18](#)
    - checking configuration [17](#)
    - DSP resource pool [18](#)
    - enabling [18](#)
  - DSPs [18](#)
  - dump
    - memory trace [9](#)
    - threads trace [8](#)
- 
- E**
- E1 timeslots [7](#)
  - e-mail

- address of user [12](#)
- notification preference [23, 24](#)
- email notification [9](#)
- enable
  - Cisco Unified IP Phone [15](#)
  - dial-in phone [15](#)
  - end device [15](#)
  - listen only [21](#)
  - PMC [15](#)
  - voice activation detection (VAD) [21](#)
- enabled
  - channel [12](#)
  - user [41](#)
- enable voice activity detection (VAD), field described [18](#)
- enabling
  - latch in User Details window [26](#)
  - PMC attributes in an active VTG [28](#)
  - radio [64](#)
  - user [41](#)
- end device
  - audio [19](#)
  - described [15](#)
  - disable [15](#)
  - enable [15](#)
  - listen only [19, 21](#)
  - managing for user [15](#)
  - mute [15](#)
  - unmute [15](#)
- ERROR-level error messages [13](#)
- event, also called active VTG [2](#)
- executed policy, information about [26](#)
- executing policy, information about [26](#)
- expiration date, of password [10](#)
- external notification
  - configuring dial engine [2](#)
  - dedicated dial engine [2](#)
  - deploying [2](#)
  - description [1](#)
  - invoking
    - CAP XML file [5](#)
    - HTTP request [4](#)
    - options [4](#)
  - message file [4](#)
  - overview [1](#)
  - primary dial engine [2](#)
  - recipient list [3](#)
  - requirements [2](#)
  - results of [6](#)
- notification
  - See also* external notification

---

**F**

floor, for dial-in [34](#)

---

**G**

G.711 [15](#)

G.729 [15](#)

gateway [6](#)

General Information tab [9, 13](#)

Get Logs from PMC [20](#)

guidelines

- for using IP multicast addresses with Cisco IPICS [98](#)

- managing active VTGs [17](#)

- managing inactive VTGs [7](#)

- multicast address [98](#)

- server usage [9](#)

## H

---

hangover time [54](#)

hardware components, of Cisco IPICS [4](#)

help, in Administration Console [17](#)

host name, of RMS [108](#)

HTTP request, for external notification [4](#)

## I

---

icons, in users window [49](#)

icons in Users window [4](#)

ID, of user [7](#)

idle status, for multicast address [97, 101](#)

IN\_SERVICE [3](#)

inactive

- VTGs [6](#)

- VTGs, guidelines [7](#)

INFO-level error messages [13](#)

Informix database, manually starting [28](#)

installing

- PMC versions before you upgrade your Cisco IPICS server [160](#)

invitation policy type

- adding [17](#)

- described [6](#)

- updating [17](#)

invitation type policy, actions in [8](#)

invite to VTG action [8](#)

IP address, of RMS [108](#)

IP address selection guidelines [8](#)

ipics.log

- downloading [16](#)

- error types [13](#)

ipics.log file [6](#)

IP multicast address, guidelines for using with Cisco IPICS [98](#)

IP Phone Text notification [9](#)

## L

---

languages

- adding [12](#)

- default folder [12](#)

- default language folder [12](#)

- deleting [14](#)

- for prompts [11](#)

- for scripts [11](#)

- naming requirement [12](#)
  - of TUI prompts [32](#)
  - renaming [13](#)
  - viewing list of [12](#)
- Languages window [12](#)
- latch
- allow [19](#)
  - disable [21](#)
  - enable [21](#)
- license
- described [119](#)
  - for policy engine [1](#)
  - managing a Cisco IPICS [119](#)
  - summary [120](#)
  - time-bound, described [124](#)
  - usage per ops view [123](#)
- License dashboard
- elements [6](#)
  - overview [6](#)
- license file, uploading [125](#)
- listen only
- in channel [19](#)
  - in PMC tab [19](#)
  - in radio [58](#)
  - in user profile [8](#)
- LMR gateway [6](#)
- location
- adding [93](#)
  - associations [87](#)
  - deleting [95](#)
  - described [86](#)
  - multicast address [97, 102](#)
  - of RMS [107](#)
  - predefined [86](#)
  - radio [53](#)
  - RMS [112](#)
  - summary of access types and connections [91](#)
  - user [7](#)
  - viewing or editing [94](#)
- locking a user account [42](#)
- log files
- downloading [16](#)
  - in System Logs window [12](#)
  - location [18, 20](#)
  - managing activity [131](#)
  - obtaining [19](#)
  - PMC [15, 18](#)
- log in, disabling for Cisco IPICS service [2](#)
- log level, setting [20](#)
- logs, managing activity [131](#)
- loopback
- configuring [113](#)
  - creating [113](#)
  - disabling DS0 in [115](#)
  - DS0 destination [114](#)
  - DS0 source [114](#)
  - DS0 status [114](#)
  - dynamically allocated [3](#)

- enabling DS0 in [114](#)
- number [114](#)
- on RMS [109](#)
- removing [116](#)
- state [114](#)
- viewing information about [113, 114](#)

## M

### Management Information Base (MIB)

- network and system status MIBs [20](#)
- Request for Comments (RFC) documents [24](#)

### managing

- activity log options per ops view [137](#)
- inactive VTGs [6](#)
- PMC from Associations tab [21](#)
- radio and tone descriptors [69](#)

maximum activity logs, setting described [142](#)

MCS servers documentation [xxi](#)

member, adding to user group [49](#)

merging RMS configuration [117](#)

message file, for external notification [4](#)

### multicast address

- adding address to multicast pool [98](#)
- adding a sequence of addresses to multicast pool [99](#)
- address [101](#)
- address and port [97](#)
- assignment [98](#)

channel [14](#)

connection type [97, 101](#)

conventions [14, 98, 101](#)

deleting [102](#)

editing information [100](#)

guidelines [98](#)

in multicast pool [95](#)

location [97, 102](#)

port [101](#)

recommended range [98](#)

status [97, 101](#)

used by [97, 102](#)

viewing information [100](#)

multicast communications guidelines [98](#)

multicast domain [86](#)

### multicast pool

- adding multicast address to [98](#)
- deleting multicast address from [102](#)
- described [95](#)

### Multi-Purpose type policy

trigger [19](#)

### multi-purpose type policy

- actions in [8, 12](#)
- activating [24](#)
- adding [11](#)
- described [6](#)
- updating [11](#)

### mute

Cisco Unified IP Phone [15](#)

dial-in phone [15](#)  
 end device [15](#)  
 PMC [15](#)  
 PMC user in a VTG [23](#)

My Profile window, described [13](#)

## N

name

of user [10](#)  
 of user group [52](#)

name, of user [7](#)

New Users window [6](#)

notification

action [8](#)  
 configuring [13](#)  
 Dial [10](#)  
 Dial Engine Script [11](#)  
 email [9](#)  
 external  
     *See* Cisco IPICS  
 IP Phone Text [9](#)  
 overview [9](#)  
 Talk Group [10](#)

notification preferences

configuring [24](#)  
 described [23](#)

notifying participants in an active VTG [28](#)

## O

old digit password, changing [6](#)

online help, accessing [17](#)

operational, RMS status [108](#)

Operational Views

*See* ops views

operator role

described [8, 12](#)  
 responsibilities [1](#)  
 restricting assignments [143](#)

ops view administrator role, described [8, 12](#)

ops views

accessible to [7](#)  
 affecting VTGs [16](#)  
 allocating dial ports, described [29](#)  
 assigning a dial number (DN) [19](#)  
 assigning to user [31](#)  
 associated [39](#)  
 associating channel groups with [39](#)  
 associating channels [32](#)  
 associating channels or channel groups [32](#)  
 associating to channels [25](#)  
 associating user group with [51](#)  
 associating user with [39](#)  
 available [39](#)  
 belongs to [6](#)  
 benefits [6](#)  
 caveats [11](#)  
 channels [32](#)

- creating [4](#)
  - determining dial port allocation [31](#)
  - dial-in numbers [19](#)
  - dial port pools [29](#)
  - overview [1](#)
  - resources [5](#)
  - system [2](#)
  - to which user belongs [38](#)
  - to which user group belongs [51](#)
  - understanding VTGs [12](#)
  - user roles [8](#)
  - viewing details [25](#)
  - viewing resources [23](#)
  - Ops View to User Association window [39](#)
  - Options window [139](#)
  - order, of dial preferences [27](#)
  - OUT\_OF\_SERVICE [3](#)
- P**
- 
- pager, notification preference [23, 24](#)
  - PARTIAL\_SERVICE [3](#)
  - participant
    - adding to VTG [20](#)
    - in VTG [20](#)
    - removing from VTG [20](#)
  - password
    - Apply User Account Lockout setting [149](#)
    - Apply User Password Expiration setting [147](#)
  - changing [3](#)
  - expiration date [10](#)
  - Failed Password Attempt Expiration Hours setting [151](#)
  - Maximum Invalid Login Attempts Allowed setting [150](#)
  - Minimum Digit Password Length setting [144](#)
  - Minimum Lower Case Letter Count setting [145](#)
  - Minimum Numeric Character Count setting [146](#)
  - Minimum Password Length setting [144](#)
  - Minimum Special Character Count setting [146](#)
  - Minimum Upper Case Letter Count setting [145](#)
  - Password Expiration Notification setting [149](#)
  - Password Expiration setting [148](#)
  - Password History Count setting [147](#)
  - RMS [112](#)
  - user [7, 10](#)
  - phone
    - associated [32](#)
    - associating user with [31](#)
    - available [32](#)
  - Phone Associations window [32](#)
  - phone service [1](#)
  - PIN, digit password [14](#)
  - PIN, digit password in user profile [7](#)
  - PMC

- adding alert tone sets [166](#)
- advanced permissions [19](#)
- allow latch [19](#)
- audio [19](#)
- authentication log file [18, 20](#)
- automatic update [154](#)
- changing the state of versions for updates [158](#)
- channel statistics log file [18, 20](#)
- creating alert tone sets [164](#)
- debug log file [18, 20](#)
- deleting versions [162](#)
- described [5](#)
- direct two-way channels [30](#)
- disable [15](#)
- downloading current version [19](#)
- enable [15](#)
- forced update [158](#)
- information status in VTG [8](#)
- installer, generating [174](#)
- latching [21](#)
- listen only [19, 21](#)
- log files [15, 18, 19, 20](#)
- log level [20](#)
- managing for user [15](#)
- managing the configuration [173](#)
- mute [15](#)
- operation caveats when configuring tone sequences [79](#)
- regions [177](#)
  - regions, managing [175](#)
  - skins [170, 171](#)
  - unmute [15](#)
  - updating [154](#)
  - uploading and managing skins [170](#)
  - user interface log file [18, 20](#)
  - user in VTG [20](#)
  - voice activation detection (VAD) [21](#)
- PMC activity log update, setting frequency [154](#)
- PMC alert tones
  - See* alert tones
- PMC log upload frequency, setting described [152](#)
- PMC regions
  - managing [175](#)
  - See* regions
- PMC send logs on rollover, setting described [153](#)
- pmcsetup.exe [173](#)
- PMC skins
  - See* skins
- PMC tab [19](#)
- PMC update poll, setting described [151](#)
- PMC versions
  - changing the state [158](#)
  - installing before you upgrade your Cisco IPICS server [160](#)
  - uploading [157](#)
- Policies window
  - described [4](#)



- displaying [4](#)
- policy
  - action, *See* action
  - activating [24](#)
  - adding [6](#)
  - associated [33](#)
  - associating user with [32, 23](#)
  - available [33](#)
  - definition [1](#)
  - deleting [25](#)
  - deleting action from [18](#)
  - deleting trigger from [22](#)
  - executed [26](#)
  - executing [26](#)
  - invitation type
    - actions in [8](#)
    - adding [17](#)
    - described [6](#)
    - updating [17](#)
  - Multi-Purpose type
    - updating [11](#)
  - multi-purpose type
    - actions in [8](#)
    - adding [11](#)
    - described [6](#)
  - ops view guidelines [5](#)
  - reactivating [29](#)
  - scheduled [28](#)
  - system resources for [6](#)
  - trigger [19](#)
  - type [8](#)
  - viewing information about [26, 28](#)
- Policy Associations window [33](#)
- policy engine
  - license requirement [1](#)
  - Policies window [4](#)
  - policy, *See* policy [1](#)
  - roles that can access [1](#)
  - SIP provider [48](#)
  - tracing [4](#)
- Policy Management drawer, accessing [1](#)
- pop-up windows [12](#)
- port
  - channel [14](#)
  - conventions [14, 100, 101](#)
  - multicast address [101](#)
- preferences, system, setting in Options window [139](#)
- primary dial engine
  - configuring [2](#)
  - for external notification [2](#)
- prompts
  - customized script, *See* customized script prompts
  - described [1](#)
  - languages [11](#)
  - languages, *See* language
  - managing [11](#)
  - repository [11](#)

spoken name, *See* spoken name prompts  
 standard script, *See* standard script prompts

## PTT channel

*See* channel

## PTT channel group

*See* channel group

## Push-to-Talk Management Center

*See* PMC

# R

---

## radio

adding [52](#)

adding to VTG template [8](#)

Allow association to users, check box described [54](#)

allow latch, described [58](#)

Allow use in VTGs, check box described [55](#)

associating signals with channels [28](#)

associating user with [34](#)

associating with user from Radios window [61](#)

channel [42](#)

codec field described [53](#)

control functions [37](#)

default tone sequences [48](#)

deleting [65](#)

description, field described [53](#)

descriptor file, described [70](#)

designating permissions for [35](#)

editing information [59](#)

enabling or disabling [64](#)

frequency channels, described [45](#)

hangover time, field described [54](#)

listen only, field described [58](#)

location, field described [53](#)

managing [42](#)

managing descriptors [69](#)

multicast address, field described [53](#)

multicast port, field described [53](#)

name, field described [53](#)

PMC caveats when configuring tone sequences [79](#)

radio color, field described [59](#)

region, field described [59](#)

removing [65](#)

RX mute during PTT, field described [57](#)

search for in VTG window [35](#)

secure radio, field described [53](#)

tone and signaling sequences, described [73](#)

tone descriptors, described [72](#)

type, described [53](#)

type, field described [53](#)

viewing information [59](#)

voice delay, field described [54](#)

## radio channel

managing [42](#)

*See* radio

radio color, field described [59](#)

- radio descriptors [70](#)
  - deleting [85](#)
  - described [70](#)
  - format example [71](#)
  - managing [69](#)
  - PMC operation caveats [79](#)
  - updating [83](#)
- reactivate
  - action [29](#)
  - policy [29](#)
  - VTG [32](#)
- recipient list
  - for external notification [3](#)
  - format [3](#)
- recording, spoken names prompts [26](#)
- recovering, system administrator [43](#)
- recurrence, of trigger [21](#)
- refreshing, Administration Console [11](#)
- regions
  - adding [177](#)
  - deleting [178](#)
  - viewing or editing [178](#)
- removing
  - channel [31](#)
  - channel from channel group [38](#)
  - channel group [40](#)
  - radio [65](#)
  - RMS [116](#)
  - user [44](#)
  - user group [54](#)
  - VTG [16](#)
- repository [11, 31](#)
- Request for Comments (RFC) documents used with SNMP [24](#)
- required information, in Cisco IPICS windows [9, 14](#)
- rerecording, spoken names prompts [26](#)
- restoring a backed-up database [13](#)
- Restrict Operator Role assignments, setting described [143](#)
- RMS
  - activating [106, 110](#)
  - adding [111](#)
  - calculating DSPs [18](#)
  - configuring [2](#)
  - configuring security features [2](#)
  - configuring T1/E1 controllers, interfaces, and voice parameters [10](#)
  - connectivity guidelines [6](#)
  - controller [109](#)
  - controllers [6](#)
  - deactivated status [108, 110](#)
  - deactivating [106, 110](#)
  - deleting [116](#)
  - described [6](#)
  - ds0 groups [6](#)
  - dspfarm configuration [17](#)
  - E1 timeslots [7](#)
  - editing information [106](#)
  - host name [108](#)

- IP address [108](#)
  - IP address selection
    - Ethernet interface [8](#)
    - guidelines [8](#)
    - Loopback0 interface [9](#)
    - Vif1 interface [9](#)
  - location [107](#)
  - loopback [109](#)
  - managing [103](#)
  - managing configuration [117](#)
  - merging configuration [117](#)
  - name [107](#)
  - operational status [108](#)
  - removing [116](#)
  - status [108](#)
  - status of routers in RMS window [104](#)
  - stopping state [110](#)
  - stopping status [108](#)
  - T1 timeslots [7](#)
  - unconfigured status [108](#)
  - unreachable status [108](#)
  - updating configuration [117](#)
  - updating information in Cisco IPICS [117](#)
  - viewing information [106](#)
  - RMS dashboard
    - elements [7](#)
    - overview [6](#)
  - RMS polling frequency, setting interval [141](#)
  - role
    - all [8, 12](#)
    - assigning [12](#)
    - changing [12](#)
    - described [7, 12](#)
    - dispatcher [8, 12, 1](#)
    - operator [8, 1, 12](#)
    - ops view administrator [8, 12](#)
    - system administrator [8, 1, 12](#)
    - user [7, 1](#)
  - roles [5](#)
  - router
    - See* RMS
  - router media service
    - See* RMS
  - RX mute during PTT
    - on channel [18](#)
    - on radio [57](#)
- 
- S**
- scheduled policy, information about [28](#)
  - scripts
    - adding [32](#)
    - BulkNotifyDialer [31](#)
    - changing information about [33](#)
    - deleting [34](#)
    - described [1](#)
    - dial engine [31](#)
    - IppeDialin [31](#)

- IppeDialout **31**
- IppeRecording **31**
- languages **11**
- managing **31**
- repository **31**
- system **31**
- viewing information about **33**
- viewing list of **31**
- searching in Virtual Talk Groups window **34**
- secure radio **53**
- server, Cisco IPICS **5**
- server logs, viewing **12**
- server usage guidelines **9**
- Serviceability drawer, overview **1**
- services, obtaining information about **2**
- session initiation protocol (SIP), documentation **xxii**
- setting up Cisco IPICS **2**
- short message service (SMS), notification preference **23, 24**
- short name for channel, field described **9**
- SHUTDOWN **3**
- Simple Network Management Protocol (SNMP)
  - configuring an MIB browser **25**
  - configuring an SNMP management console **24**
  - Management Information Base (MIB) objects
    - described **18**
  - support **17**
- SIP, configuring for Policy Engine **35**
- SIP provider
  - Cisco IOS **53**
  - Cisco router **53**
  - Cisco Unified Communications Manager **49**
  - configuring for Cisco IPICS **48**
  - described **48**
- skins
  - adding **171**
  - deleting **172**
  - viewing or editing **171**
- SNMP
  - See* Simple Network Management Protocol (SNMP)
- software components, of Cisco IPICS **4**
- specifying order **12**
- spoken names prompts
  - changing information about **29**
  - deleting **30**
  - described **21**
  - downloading **25**
  - for user **40**
  - recording **26**
  - replacing .wav file **26**
  - rerecording **26**
  - uploading **23**
  - viewing list of **22**
- Spoken Names window **22**
- standard script prompts

- described [14](#)
  - uploading [15](#)
  - viewing list of [15](#)
  - Standard Script Prompts window [15](#)
  - status
    - channel [12](#)
    - DS0 [114](#)
    - multicast address [97, 101](#)
  - Status Details window [4](#)
  - stopping, RMS status in RMS window [108](#)
  - sub-VTG [7](#)
  - system administrator role
    - described [8, 1, 12](#)
    - responsibilities [1](#)
  - System dashboard, overview [3](#)
  - system logs
    - downloading [16](#)
    - entry types [13](#)
    - overview [13](#)
    - viewing [12](#)
  - System Logs window
    - described [2, 12](#)
    - log entry types [13](#)
  - system preferences, setting in Options window [139](#)
  - system status, monitoring [12](#)
- T**
- 
- T1/E1 controller configuration [6](#)
  - T1 timeslots [7](#)
  - tab
    - Address Information [11](#)
    - Associations [22](#)
    - Dial Login [14](#)
    - General Information [9, 13](#)
    - PMC [19](#)
  - Talk Group notification [10](#)
  - telephony user interface
    - See* TUI
  - text to speech
    - See* TTS [41](#)
  - time out, period for Administration Console [17](#)
  - tone broadcast wave files
    - See* alert tones
  - tone descriptor files, for radios [72](#)
  - tone descriptors
    - adding [82](#)
    - deleting [85](#)
    - described [72](#)
    - PMC operation caveats [79](#)
    - updating [83](#)
  - tone sequences
    - description field, described [47](#)
    - enabled state check box [47](#)
    - label [47](#)
    - momentary control [48](#)
    - stateful control [47](#)
  - tone sequences, described [72](#)

## trace

- advanced activities [8](#)
- cluster view daemon [4](#)
- configuring number of trace files [5](#)
- configuring size of trace files [5](#)
- debug [5](#)
- default levels [7,9](#)
- described [4](#)
- dial engine [4](#)
- dump memory trace [9](#)
- dump threads trace [8](#)
- facilities [4,7](#)
- files [4](#)
- interpreting trace files [10](#)
- levels [4,6](#)
- maximum size of all trace files on systems [6](#)
- obtaining trace files [10](#)
- recommendations for [5](#)
- XDebug (extended debug) [5](#)

TRACE-level error messages [13](#)

## trigger

- adding [19](#)
- definition [1](#)
- deleting [22](#)
- overview [19](#)
- recurrence [21](#)
- updating [19](#)
- viewing [19](#)

## TTS

- configuring [42](#)

- overview [41](#)

## TUI (telephony user interface)

- accessing [31](#)
- activities [31](#)
- described [31](#)
- dial-in floor [34](#)
- dial login for [13](#)
- digit ID [14](#)
- general guidelines [32](#)
- guidelines for using [32](#)
- logging in [31](#)
- menu guidelines [33](#)
- PIN [14](#)
- speaking [34](#)

- type, channel connection [12](#)

**U**

- unconfigured, RMS status [108](#)

- understanding [29](#)

- Activity Log Management window [132](#)

- Channels window [4](#)

- Descriptors window [80](#)

- Ops View window [3](#)

- PMC Regions window [176](#)

- Radios window [49](#)

- RMS window [104](#)

- Virtual Talk Groups window [3](#)

- unlocking a user account [42](#)
- unmute
  - Cisco Unified IP Phone [15](#)
  - dial-in phone [15](#)
  - end device [15](#)
  - PMC [15](#)
- unmuting PMC user in a VTG [23](#)
- unreachable, RMS status [108](#)
- updating
  - descriptors [83](#)
  - radio and tone descriptors [83](#)
  - RMS configuration [117](#)
- uploading
  - license file [125](#)
  - PMC versions [157](#)
  - standard script prompts [15](#)
- used by field, for multicast address [97](#)
- user
  - adding [6](#)
  - adding communications preferences in user profile [10](#)
  - adding to VTG template [8](#)
  - address
    - street, of user [11](#)
  - address information [11](#)
  - associating channels with [26](#)
  - associating channel with [28](#)
  - associating ops view with [39](#)
  - associating phone with [31](#)
  - associating policy with [32, 23](#)
  - associating radios with, from Radios window [61](#)
  - associating radio with [34](#)
  - associating user with [30](#)
  - changing information in user profile [2](#)
  - channel association [14](#)
  - copying [6](#)
  - default location [14](#)
  - deleting [44](#)
  - deleting communications preferences in user profile [10](#)
  - described [1, 2](#)
  - dial preferences [12](#)
  - digit ID [14](#)
  - digit password (PIN) [14](#)
  - digit password (PIN) field, described [7](#)
  - disabled [42](#)
  - downloading PMC [19](#)
  - editing communications preferences in user profile [10](#)
  - enabled [41](#)
  - general information [9](#)
  - in inactive VTG [7](#)
  - list of VTGs in which is a participant [40](#)
  - locking account [42](#)
  - managing associations [13](#)
  - managing communications preferences [9](#)
  - managing profile [2](#)
  - name [7, 10](#)
  - ops view for [38](#)



- password **10**
- PIN **14**
- recovering deleted **43**
- recovering system administrator **43**
- removing **44**
- search for in VTG window **35**
- specifying order of dial preferences **12**
- status **41**
- unlocking account **42**
- viewing associations **18**
- viewing communications preferences **10**
- user associations
  - Channels tab, described **14**
  - Phones tab, described **17**
  - Policies tab, described **18**
  - Radios tab, described **15**
  - Users tab, described **16**
  - Virtual Talk Groups tab, described **17**
- User dashboard
  - elements **5**
  - overview **5**
- User Details window
  - activities **13**
  - enabling or disabling latch for PMC user **26**
- user group
  - adding **47**
  - adding members to **49**
  - adding to VTG template **8**
  - associating ops views with **51**
  - changing name of **52**
  - deleting **54**
  - described **1, 45**
  - list of VTGs in which is a participant **53**
  - naming recommendation **48**
  - ops view for **51**
  - removing **54**
- User Groups window
  - accessing **46**
  - described **46**
- user interface log file **18, 20**
- User Management drawer, accessing **1**
- user name of RMS field, described **108**
- user profile **2**
  - account status field, described **4**
  - address field, described **5**
  - belongs to field, described **5**
  - confirm password field, described **4**
  - default location **7**
  - dial preferences field, described **9**
  - digit ID field, described **6**
  - first name field, described **3**
  - IPICS status field, described **4**
  - last name field, described **3**
  - new password field, described **4**
  - notification preferences field, described **9**
  - old digit password field, described **6**
  - old password field, described **3**
  - password expiration date field, described **4**

- PMC info field, described [8](#)
    - roles field, described [5](#)
    - user name field, described [3](#)
  - User Radio Permissions window [36, 37](#)
  - user role
    - described [7](#)
    - responsibilities [1](#)
  - users
    - phone associations [17](#)
    - policy associations [18](#)
    - radio associations [15](#)
    - user associations [16](#)
    - VTG associations [17](#)
  - Users window
    - accessing [3](#)
    - described [3](#)
  - using the PMC Installer window [173](#)
- ## V
- 
- viewing
    - activity logs [133](#)
    - and downloading archived activity logs [135](#)
    - and editing user associations, My Associations window [2](#)
    - channel associations [30](#)
    - ops view resources [23](#)
    - or editing locations [94](#)
    - or editing PMC alert tone sets [167](#)
    - or editing PMC regions [178](#)
    - or editing PMC skins [171](#)
    - user associations [18](#)
  - virtual talk group
    - See* VTG
  - Virtual Talk Group dashboard
    - elements [5](#)
    - overview [5](#)
  - voice activity detection
    - enable field [18](#)
    - enabling on PMC [10, 14](#)
  - voice delay [54](#)
  - VTG
    - activating [19](#)
    - active [2, 17](#)
    - adding [9](#)
    - adding channel [7](#)
    - adding channel group [8](#)
    - adding participants [20](#)
    - adding radio [8](#)
    - adding to VTG template [8](#)
    - adding user [8](#)
    - adding user group [8](#)
    - adding VTG [8](#)
    - best practices [37](#)
    - changing the status of [18](#)
    - channel in inactive [7](#)
    - Cisco Unified IP Phone user in [21](#)
    - deactivating [19](#)

- deleting [16](#)
  - dialing out to participants in active [28](#)
  - disabling latch in User Details window [26](#)
  - disabling PMC attributes in active [28](#)
  - empty [7](#)
  - enabling latch in User Details window [26](#)
  - enabling PMC attributes in active [28](#)
  - guidelines for managing active [17](#)
  - guidelines for managing inactive [7](#)
  - inactive [2](#)
  - in which user group is participating [53](#)
  - list in which user is participating [40](#)
  - managing [2](#)
  - managing active [17](#)
  - managing inactive [6](#)
  - modifying [13](#)
  - multicast address used by [95](#)
  - muting a PMC user [23](#)
  - non-secure channel in [7](#)
  - notifying participants in active [28](#)
  - participant in itself [7](#)
  - participants [20](#)
  - PMC user in [20](#)
  - reactivating [32](#)
  - removing [16](#)
  - removing participants [20](#)
  - search for in VTG window [35](#)
  - secure channel in [7](#)
  - seeing as user on Cisco Unified IP Phone [9, 10](#)
  - sub-VTG [7](#)
  - unavailable channel [32](#)
  - unmuting a PMC user [23](#)
  - user in inactive [7](#)
  - VTG add participants action [8, 15](#)
  - VTG search utility, using [34](#)
- W** 

---
- WARN-level error messages [13](#)
- X** 

---
- X, in Activate VTG Details area [33](#)
  - Xdebug (extended debug) trace level [5](#)