



Resetting the Controller to Default Settings

- [Information About Resetting the Controller to Default Settings, page 1](#)
- [Resetting the Controller to Default Settings \(GUI\), page 1](#)
- [Resetting the Controller to Default Settings \(CLI\), page 2](#)

Information About Resetting the Controller to Default Settings

You can return the controller to its original configuration by resetting the controller to factory-default settings.

Resetting the Controller to Default Settings (GUI)

- | | |
|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | Start your Internet browser. |
| Step 2 | Enter the controller IP address in the browser address line and press Enter . An Enter Network Password dialog box appears. |
| Step 3 | Enter your username in the User Name text box. The default username is <i>admin</i> . |
| Step 4 | Enter the wireless device password in the Password text box and press Enter . The default password is <i>admin</i> . |
| Step 5 | Choose Commands > Reset to Factory Default . |
| Step 6 | Click Reset . |
| Step 7 | When prompted, confirm the reset. |
| Step 8 | Reboot the controller without saving the configuration. |
| Step 9 | Use the configuration wizard to enter configuration settings. See the Configuring the Controller- Using the Configuration Wizard section section for more information. |
-

Resetting the Controller to Default Settings (CLI)

Step 1 Enter the **reset system** command. At the prompt that asks whether you need to save changes to the configuration, enter **N**. The unit reboots.

Step 2 When you are prompted for a username, enter the **recover-config** command to restore the factory-default configuration. The controller reboots and displays this message:

```
Welcome to the Cisco WLAN Solution Wizard Configuration Tool
```

Step 3 Use the configuration wizard to enter configuration settings. See the [Configuring the Controller- Using the Configuration Wizard](#) section for more information.
