



## **Cisco Nexus 7000 Series NX-OS OTV Configuration Guide**

**First Published:** 2016-12-23

**Last Modified:** 2019-09-19

### **Americas Headquarters**

Cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, CA 95134-1706  
USA  
<http://www.cisco.com>  
Tel: 408 526-4000  
800 553-NETS (6387)  
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

All printed copies and duplicate soft copies of this document are considered uncontrolled. See the current online version for the latest version.

Cisco has more than 200 offices worldwide. Addresses and phone numbers are listed on the Cisco website at [www.cisco.com/go/offices](http://www.cisco.com/go/offices).

The documentation set for this product strives to use bias-free language. For purposes of this documentation set, bias-free is defined as language that does not imply discrimination based on age, disability, gender, racial identity, ethnic identity, sexual orientation, socioeconomic status, and intersectionality. Exceptions may be present in the documentation due to language that is hardcoded in the user interfaces of the product software, language used based on standards documentation, or language that is used by a referenced third-party product.

The documentation set for this product strives to use bias-free language. For purposes of this documentation set, bias-free is defined as language that does not imply discrimination based on age, disability, gender, racial identity, ethnic identity, sexual orientation, socioeconomic status, and intersectionality. Exceptions may be present in the documentation due to language that is hardcoded in the user interfaces of the product software, language used based on standards documentation, or language that is used by a referenced third-party product.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/c/en/us/about/legal/trademarks.html>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2016–2019 Cisco Systems, Inc. All rights reserved.



## Preface

---

This preface describes the audience, organization and conventions of the *Cisco Nexus 7000 Series NX-OS Intelligent Traffic Director Configuration Guide*. It also provides information on how to obtain related documentation.

- [Audience, on page iii](#)
- [Document Conventions, on page iii](#)
- [Related Documentation for Cisco Nexus 7000 Series NX-OS Software, on page iv](#)
- [Documentation Feedback, on page vi](#)
- [Communications, Services, and Additional Information, on page vii](#)

## Audience

This publication is for network administrators who configure and maintain Cisco Nexus devices.

## Document Conventions



**Note** As part of our constant endeavor to remodel our documents to meet our customers' requirements, we have modified the manner in which we document configuration tasks. As a result of this, you may find a deviation in the style used to describe these tasks, with the newly included sections of the document following the new format.

Command descriptions use the following conventions:

Convention	Description
<b>bold</b>	Bold text indicates the commands and keywords that you enter literally as shown.
<i>Italic</i>	Italic text indicates arguments for which the user supplies the values.
[x]	Square brackets enclose an optional element (keyword or argument).
[x   y]	Square brackets enclosing keywords or arguments separated by a vertical bar indicate an optional choice.

Convention	Description
{x   y}	Braces enclosing keywords or arguments separated by a vertical bar indicate a required choice.
[x {y   z}]	Nested set of square brackets or braces indicate optional or required choices within optional or required elements. Braces and a vertical bar within square brackets indicate a required choice within an optional element.
<i>variable</i>	Indicates a variable for which you supply values, in context where italics cannot be used.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.

Examples use the following conventions:

Convention	Description
<code>screen font</code>	Terminal sessions and information the switch displays are in screen font.
<b>boldface screen font</b>	Information you must enter is in boldface screen font.
<i>italic screen font</i>	Arguments for which you supply values are in italic screen font.
<>	Nonprinting characters, such as passwords, are in angle brackets.
[ ]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

This document uses the following conventions:



**Note** Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the manual.



**Caution** Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

## Related Documentation for Cisco Nexus 7000 Series NX-OS Software

The entire Cisco Nexus 7000 Series NX-OS documentation set is available at the following URL:

<https://www.cisco.com/c/en/us/support/switches/nexus-7000-series-switches/series.html#~tab-documents>

## Release Notes

The release notes are available at the following URL:

[http://www.cisco.com/en/US/products/ps9402/prod\\_release\\_notes\\_list.html](http://www.cisco.com/en/US/products/ps9402/prod_release_notes_list.html)

## Configuration Guides

These guides are available at the following URL:

[http://www.cisco.com/en/US/products/ps9402/products\\_installation\\_and\\_configuration\\_guides\\_list.html](http://www.cisco.com/en/US/products/ps9402/products_installation_and_configuration_guides_list.html)

The documents in this category include:

- *Cisco Nexus 7000 Series NX-OS Configuration Examples*
- *Cisco Nexus 7000 Series NX-OS FabricPath Configuration Guide*
- *Cisco Nexus 7000 Series NX-OS Fundamentals Configuration Guide*
- *Cisco Nexus 7000 Series NX-OS Interfaces Configuration Guide*
- *Cisco Nexus 7000 Series NX-OS IP SLAs Configuration Guide*
- *Cisco Nexus 7000 Series NX-OS Layer 2 Switching Configuration Guide*
- *Cisco Nexus 7000 Series NX-OS LISP Configuration Guide*
- *Cisco Nexus 7000 Series NX-OS MPLS Configuration Guide*
- *Cisco Nexus 7000 Series NX-OS Multicast Routing Configuration Guide*
- *Cisco Nexus 7000 Series NX-OS OTV Configuration Guide*
- *Cisco Nexus 7000 Series NX-OS Quality of Service Configuration Guide*
- *Cisco Nexus 7000 Series NX-OS SAN Switching Guide*
- *Cisco Nexus 7000 Series NX-OS Security Configuration Guide*
- *Cisco Nexus 7000 Series NX-OS System Management Configuration Guide*
- *Cisco Nexus 7000 Series NX-OS Unicast Routing Configuration Guide*
- *Cisco Nexus 7000 Series NX-OS Verified Scalability Guide*
- *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide*
- *Cisco Nexus 7000 Series NX-OS Virtual Device Context Quick Start*
- *Cisco Nexus 7000 Series NX-OS OTV Quick Start Guide*
- *Cisco NX-OS FCoE Configuration Guide for Cisco Nexus 7000 and Cisco MDS 9500*
- *Cisco Nexus 2000 Series Fabric Extender Software Configuration Guide*

## Command References

These guides are available at the following URL:

[http://www.cisco.com/en/US/products/ps9402/prod\\_command\\_reference\\_list.html](http://www.cisco.com/en/US/products/ps9402/prod_command_reference_list.html)

The documents in this category include:

- *Cisco Nexus 7000 Series NX-OS Command Reference Master Index*
- *Cisco Nexus 7000 Series NX-OS FabricPath Command Reference*
- *Cisco Nexus 7000 Series NX-OS Fundamentals Command Reference*
- *Cisco Nexus 7000 Series NX-OS High Availability Command Reference*
- *Cisco Nexus 7000 Series NX-OS Interfaces Command Reference*
- *Cisco Nexus 7000 Series NX-OS Layer 2 Switching Command Reference*
- *Cisco Nexus 7000 Series NX-OS LISP Command Reference*
- *Cisco Nexus 7000 Series NX-OS MPLS Configuration Guide*
- *Cisco Nexus 7000 Series NX-OS Multicast Routing Command Reference*
- *Cisco Nexus 7000 Series NX-OS OTV Command Reference*
- *Cisco Nexus 7000 Series NX-OS Quality of Service Command Reference*
- *Cisco Nexus 7000 Series NX-OS SAN Switching Command Reference*
- *Cisco Nexus 7000 Series NX-OS Security Command Reference*
- *Cisco Nexus 7000 Series NX-OS System Management Command Reference*
- *Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference*
- *Cisco Nexus 7000 Series NX-OS Virtual Device Context Command Reference*
- *Cisco NX-OS FCoE Command Reference for Cisco Nexus 7000 and Cisco MDS 9500*

### Other Software Documents

You can locate these documents starting at the following landing page:

<https://www.cisco.com/c/en/us/support/switches/nexus-7000-series-switches/series.html#~tab-documents>

- *Cisco Nexus 7000 Series NX-OS MIB Quick Reference*
- *Cisco Nexus 7000 Series NX-OS Software Upgrade and Downgrade Guide*
- *Cisco Nexus 7000 Series NX-OS Troubleshooting Guide*
- *Cisco NX-OS Licensing Guide*
- *Cisco NX-OS System Messages Reference*
- *Cisco NX-OS Interface User Guide*

## Documentation Feedback

To provide technical feedback on this document, or to report an error or omission, please send your comments to: .

We appreciate your feedback.

## Communications, Services, and Additional Information

- To receive timely, relevant information from Cisco, sign up at [Cisco Profile Manager](#).
- To get the business impact you're looking for with the technologies that matter, visit [Cisco Services](#).
- To submit a service request, visit [Cisco Support](#).
- To discover and browse secure, validated enterprise-class apps, products, solutions and services, visit [Cisco Marketplace](#).
- To obtain general networking, training, and certification titles, visit [Cisco Press](#).
- To find warranty information for a specific product or product family, access [Cisco Warranty Finder](#).

### Cisco Bug Search Tool

[Cisco Bug Search Tool](#) (BST) is a web-based tool that acts as a gateway to the Cisco bug tracking system that maintains a comprehensive list of defects and vulnerabilities in Cisco products and software. BST provides you with detailed defect information about your products and software.







# CHAPTER 1

## New and Changed Information

This section provides release-specific information for the new and changed features for OTV.

- [New and Changed Information, on page 1](#)

## New and Changed Information

Your software release might not support all the features in this document. For the latest caveats and feature information, see the Bug Search Tool at <https://tools.cisco.com/bugsearch/> and the release notes for your software release.

*Table 1: New and Changed Information for OTV*

Feature	Description	Changed in Release	Where Documented
PVLAN over OTV	Introduced this feature	8.2(1)	<a href="#">Configuring PVLAN over OTV, on page 81</a>
Loopback Join Interface	Introduced this feature	8.0(1)	<a href="#">OTV Loopback Join Interface, on page 73</a>





## CHAPTER 2

# Overview

---

This chapter provides an overview for Overlay Transport Virtualization (OTV) on Cisco NX-OS devices.

- [Licensing Requirements, on page 3](#)
- [Overview, on page 3](#)
- [Sample Topologies, on page 8](#)

## Licensing Requirements

For a complete explanation of Cisco NX-OS licensing recommendations and how to obtain and apply licenses, see the [Cisco NX-OS Licensing Guide](#).

## Overview

OTV is a MAC-in-IP method that extends Layer 2 connectivity across a transport network infrastructure.

## OTV Fundamentals

OTV provides Layer 2 connectivity between remote network sites by using MAC address-based routing and IP-encapsulated forwarding across a transport network to provide support for applications that require Layer 2 adjacency, such as clusters and virtualization. You deploy OTV on the edge devices in each site. OTV requires no other changes to the sites or the transport network.

## OTV Terms

This document uses the following terms for OTV:

### Edge Device

An edge device performs typical Layer 2 learning and forwarding on the site-facing interfaces (internal interfaces) and performs IP-based virtualization on the transport-facing interfaces. The edge device capability can be collocated in a device that performs Layer 2 and Layer 3 functionality. OTV functionality only occurs in an edge device. A given edge device can have multiple overlay interfaces. You can also configure multiple edge devices in a site.

### **Authoritative Edge Device**

OTV provides loop-free multihoming by electing a designated forwarding device per site for each VLAN. This forwarder is known as an Authoritative Edge Device (AED). The edge devices at the site communicate with each other on the internal interfaces to elect the AED.

### **Transport Network**

The network that connects OTV sites. This network can be customer managed, provided by a service provider, or a mix of both.

### **Join Interface**

One of the uplink interfaces of the edge device. The join interface is a point-to-point routed interface. The edge device joins an overlay network through this interface. The IP address of this interface is used to advertise reachability of a MAC address present in this site.

### **Internal Interface**

The Layer 2 interface on the edge device that connects to the VLANs that are to be extended. These VLANs typically form a Layer 2 domain known as a site and can contain site-based switches or site-based routers. The internal interface is a Layer 2 access or trunk interface regardless of whether the internal interface connects to a switch or a router.

### **MAC Routing**

Associates the destination MAC address of the Layer 2 traffic with an edge device IP address. The MAC to IP association is advertised to the edge devices through the OTV control-plane protocol. In MAC routing, MAC addresses are reachable through the IP address of a remote edge device on the overlay network. Layer 2 traffic destined to a MAC address is encapsulated in an IP packet based on the MAC to IP mapping in the MAC table.

### **Overlay Interface**

A logical multi-access multicast-capable interface. The overlay interface encapsulates Layer 2 frames in IP unicast or multicast headers.

### **Overlay Network**

A logical network that interconnects remote sites for MAC routing of Layer 2 traffic. The overlay network is comprised of multiple edge devices.

### **Site**

A Layer 2 network that may be single-homed or multihomed to the transport network and the OTV overlay network. Layer 2 connectivity between sites is provided by edge devices that operate in an overlay network. Layer 2 sites are physically separated from each other by the transport network.

### **Site VLAN**

OTV sends local hello messages on the site VLAN to detect other OTV edge devices in the site and uses the site-VLAN to determine the authoritative edge device for the OTV-extended VLANs.


VLAN 1 is the default site VLAN. We recommend that you use a dedicated VLAN as a site VLAN. You should ensure that the site VLAN is active on at least one of the edge device ports and that the site VLAN is not extended across the overlay.

## OTV Overlay Network

The overlay network provides Layer 2 connectivity between remote sites over a transport network. The overlay network consists of one or more edge devices on each site interconnected with a control-plane protocol across the transport network.

**Figure 1: OTV Overlay Network**

This figure shows two sites connected through edge devices to a transport network to create a virtual overlay

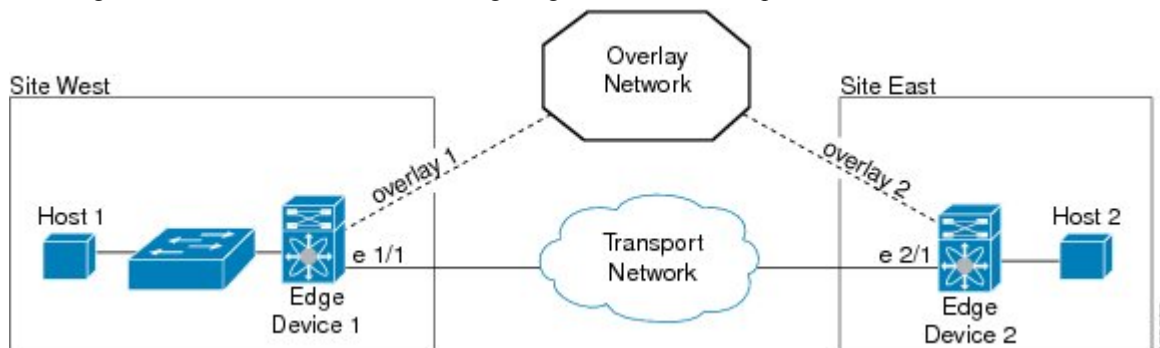

The overlay network maps MAC addresses to IP addresses of the edge devices. Once OTV identifies the correct edge device to send a Layer 2 frame to, OTV encapsulates the frame and sends the resulting IP packet using the transport network routing protocols.

OTV supports one or more separate overlay networks running IPv4 or IPv6 unicast forwarding or multicast flooding. Each overlay network supports one or more VLANs.



**Note** OTV does not extend STP across sites. Each site runs its own STP rather than include all sites in a large STP domain. This topology also allows the use of different STP modes such as Per-VLAN Rapid Spanning Tree Plus (PVRST+) or Multiple Spanning Tree (MST) in each site.

### Edge Device

Each site consists of one or more edge devices and other internal routers, switches, or servers. OTV configuration occurs only on the edge device and is completely transparent to the rest of the site. This transparency applies to MAC learning, Spanning Tree Protocol (STP) root bridge placement, and STP mode. The edge device performs typical Layer 2 learning and forwarding on the internal interfaces and transmits and receives the encapsulated Layer 2 traffic on the physical interface through the transport network.

An edge device sends and receives control plane traffic through the join interface. The control plane traffic exchanges reachability information between remote sites to build up a table that maps MAC addresses to the IP address of the edge device that is local to the MAC address.

An edge device has internal interfaces that are part of the Layer 2 network in the site and has external interfaces that are reachable through IP in the transport network.

#### Related Topics

[Authoritative Edge Device](#), on page 33

## Site-to-Site Connectivity

OTV builds Layer 2 reachability information by communicating between edge devices with the overlay protocol. The overlay protocol forms adjacencies with all edge devices. Once each edge device is adjacent with all its peers on the overlay, the edge devices share MAC address reachability information with other edge devices that participate in the same overlay network.

OTV discovers edge devices through dynamic neighbor discovery which leverages the multicast support of the core.

### Related Topics

[Building Adjacencies](#), on page 31

## Overlay Networks Mapping to Multicast Groups

For transport networks that support IP multicast, one multicast address (the control-group address) is used to encapsulate and exchange OTV control-plane protocol updates. Each edge device that participates in the particular overlay network shares the same control-group address with all the other edge devices. As soon as the control-group address and the join interface are configured, the edge device sends an IGMP report message to join the control group. The edge devices act as hosts in the multicast network and send multicast IGMP report messages to the assigned multicast group address.

As in traditional link state routing protocols, edge devices exchange OTV control-plane hellos to build adjacencies with other edge devices in the overlay network. Once the adjacencies are established, OTV control-plane Link State Packets (LSPs) communicate MAC to IP mappings to the adjacent devices. These LSPs contain the IP address of the remote edge device, the VLAN IDs, and the learned MAC addresses that are reachable through that edge device.

Edge devices participate in data-plane learning on internal interfaces to build up the list of MAC addresses that are reachable within a site. OTV sends these locally learned MAC addresses in the OTV control-plane updates to remote sites.

### Related Topics

[Multicast Group Addresses and IGMP Snooping](#), on page 13

[Configuring the Multicast Group Address](#), on page 19

## OTV Packet Flow

When an edge device receives a Layer 2 frame on an internal interface, OTV performs the MAC table lookup based on the destination address of the Layer 2 frame. If the frame is destined to a MAC address that is reachable through another internal interface, the frame is forwarded out on that internal interface. OTV performs no other actions and the processing of the frame is complete.

If the frame is destined to a MAC address that was learned over an overlay interface, OTV performs the following tasks:


1. Strips off the preamble and frame check sequence (FCS) from the Layer 2 frame.
2. Adds an OTV header to the Layer 2 frame and copies the 802.1Q information into the OTV header.
3. Adds the IP address to the packet, based on the initial MAC address table lookup. This IP address is used as a destination address for the IP packet that is sent into the core switch.

OTV traffic appears as IP traffic to the network core.

At the destination site, the edge device performs the reverse operation and presents the original Layer 2 frame to the local site. That edge device determines the correct internal interface to forward the frame on, based on the local MAC address table.

**Figure 2: MAC Routing**

This figure shows the encapsulation and decapsulation of a MAC-routed packet across an overlay

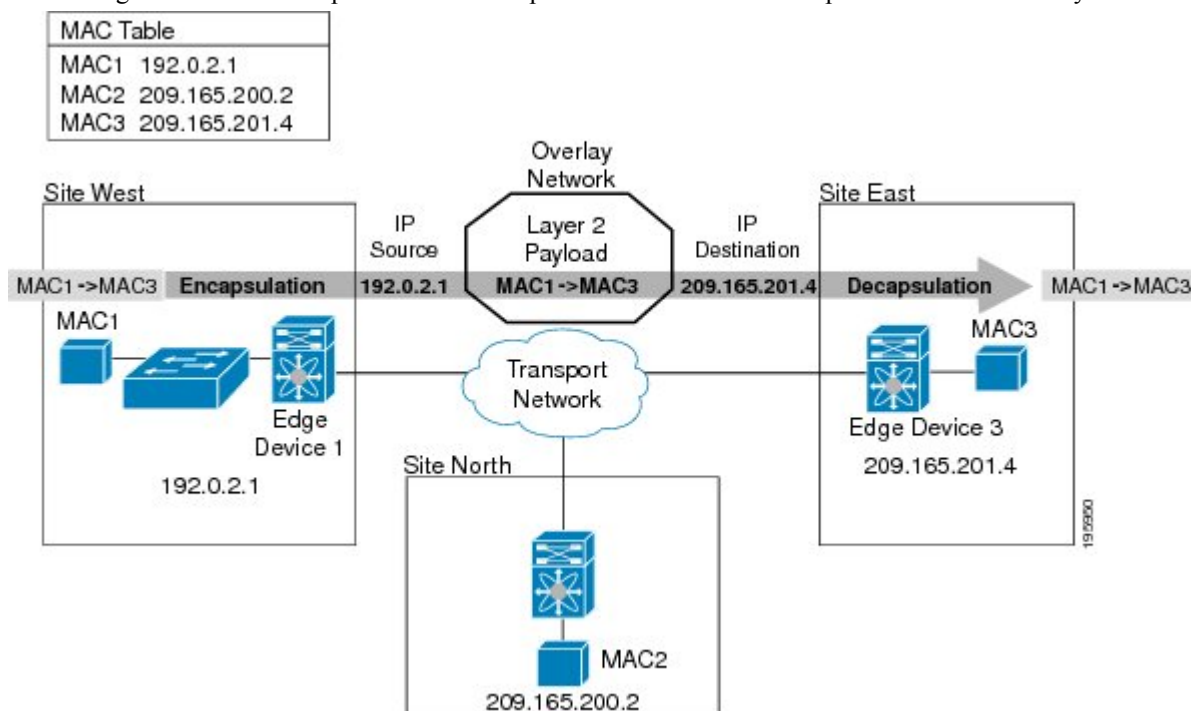

In this figure, Site West communicates with Site East over the overlay network. Edge Device 1 receives the Layer 2 frame from MAC1 and looks up the destination MAC address, MAC3, in the MAC table. The edge device encapsulates the Layer 2 frame in an IP packet with the IP destination address set for Edge Device 3 (209.165.201.4). When Edge Device 3 receives the IP packet, it strips off the IP header and sends the original Layer 2 frame onto the VLAN and port that MAC3 is connected to.

## Mobility

OTV uses a metric value to support seamless MAC mobility. The authoritative edge device that learns a new MAC address advertises that new address in the OTV control-plane updates with a metric value of one if no other edge device has advertised that MAC address before.

In the case of a mobile MAC address, the authoritative edge device advertises that newly learned local MAC address with a metric value of zero. This metric value signals the remote edge device to stop advertising that MAC address. Once the remote edge device stops advertising the moved MAC address, the authoritative edge device that contains the new MAC address changes the metric value to one.


Virtual Machine (VM) mobility is one common example of MAC mobility. VM mobility occurs when the virtual machine moves from one site to another. OTV detects this change based on the changed advertisement of the mobile MAC address.

# Sample Topologies

You can use OTV to connect remote sites in multiple topologies.

**Figure 3: Simple OTV Topology**

This figure shows a basic two-site OTV

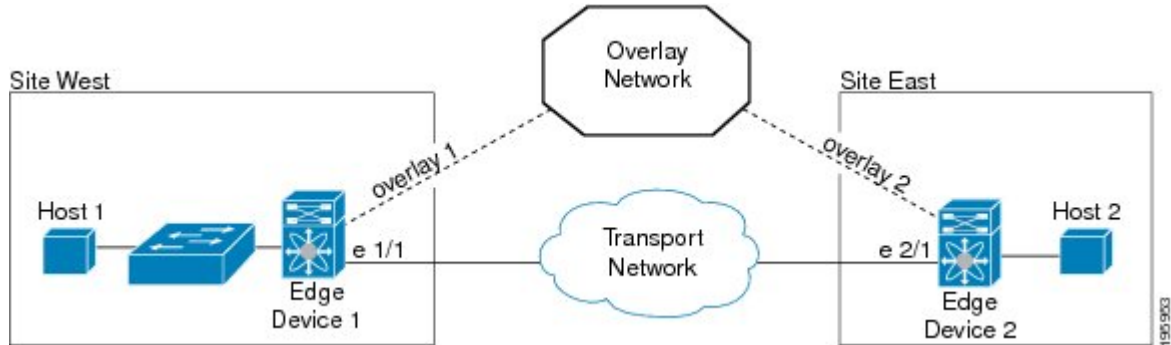


In this sample topology, both sites are connected over a common transport network. The two edge devices both have an overlay interface configured (interface overlay 1 and interface overlay 2) with the same control-group address, which makes both edge devices join a common overlay network. While the control-group addresses of the two edge devices need to match, the figure shows that the external interface is unique for each edge device.

## Multiple Overlay Networks

You can configure an edge device in more than one overlay network. Each overlay network uses a different multicast group address.

**Figure 4: Multiple Overlay Networks**

This figure shows two overlay

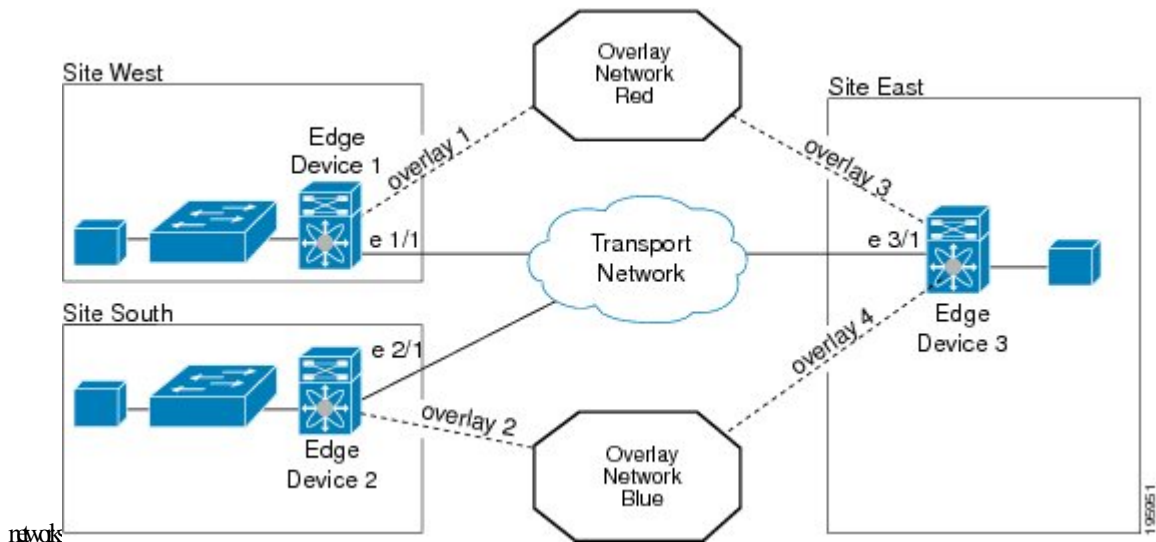



In this example, Site East connects to Site West over overlay network Red through overlay interface 3 on Edge Device 3 and connects to Site South over overlay network Blue through overlay interface 4 on Edge Device 3. Each overlay network has different control-group addresses.

Site East in this example uses Edge Device 3 to connect to both overlay networks. Edge Device 3 associates the same physical interface for both overlay networks.

## Multihomed Sites and Load Balancing

For resiliency and load balancing, a site can have multiple edge devices.


When more than one edge device is present and both participate in the same overlay network, the site is considered multihomed. For the VLANs that are extended using OTV, one edge device is elected as the authoritative edge device on a per-VLAN basis. OTV leverages a local VLAN to establish an adjacency between edge devices on their internal interfaces. The local VLAN that is shared by the internal interfaces is the site VLAN. The adjacency establishment over the site VLAN determines the following information:

- If the other edge device is still present
- Which edge device is authoritative for what VLANs

Load balancing is achieved because each edge device is authoritative for a subset of all VLANs that are transported over the overlay. Link utilization to and from the transport is optimized.

**Figure 5: Multihomed Site**

This figure shows the AED that is selected for a multihomed site in the OTV

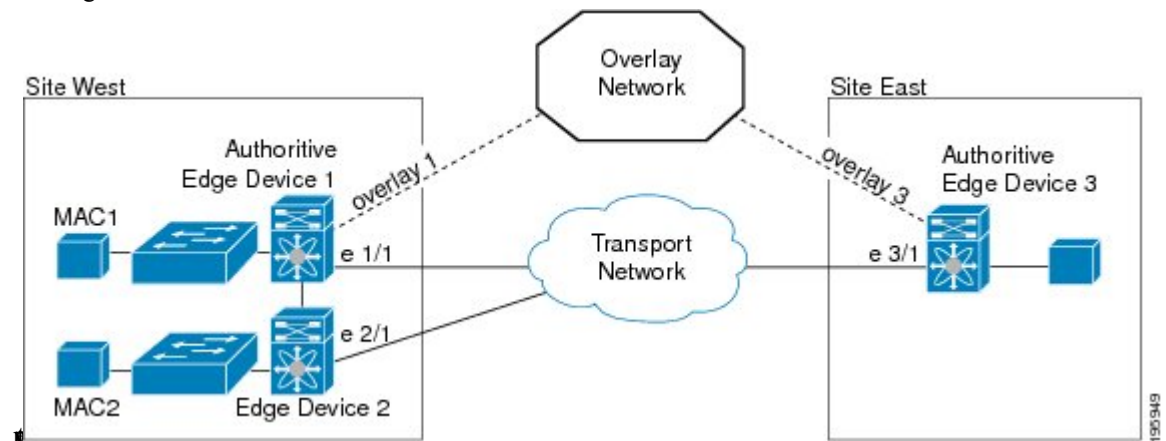

In this figure, Site West is a multihomed site, with two physical interfaces connected to the transport network.

An edge device can be authoritative for one set of VLANs but not authoritative for another set of VLANs.

### Related Topics

[Authoritative Edge Device](#), on page 33

[Verifying Load Balancing](#), on page 59

## Dual Site Adjacency

Dual site adjacency includes adjacency discovery over the overlay network as well as on the existing site VLAN. This introduces additional resiliency and loop prevention caused by site VLAN partition or

misconfiguration. Dual site adjacency also uses forwarding readiness notifications to detect when neighbor edge devices in the same site experience a change such as local failures such as the site VLAN or the extended VLANs going down or the join-interface going down. These forwarding readiness notifications trigger an immediate AED election for the site.

The dual site adjacency state is the result of the most recent adjacency state for either the overlay or site VLAN adjacency. OTV determines AED election based on active dual site adjacencies only. An inactive dual site adjacency is ignored for AED election.

You must configure the same site identifier for all edge devices in a site. OTV advertises this site identifier in the IS-IS hello packets sent over the overlay network and on the local site VLAN. The combination of the IS-IS system ID and site identifier uniquely identifies the edge devices on a site.



---

**Note** The Layer 3 core should not get arbitrarily partitioned resulting in edge devices having only partial reachability to other edge devices. An arbitrary core partition will result in traffic loss and should be fixed by ensuring that core is well-connected.

---

### Site and Core Isolation

OTV sends forwarding readiness notifications to all neighbors of an edge device in the event that the following isolation states occur:

#### Site Isolation

All extended VLANs on an edge device go down.

#### Core Isolation

All overlay adjacencies go down.

#### Related Topics

[Configuring the Site VLAN and Site Identifier](#), on page 23



## CHAPTER 3

# Configuring Basic OTV Features

This chapter describes how to configure basic Overlay Transport Virtualization (OTV) features on Cisco NX-OS devices.

- [Finding Feature Information, on page 11](#)
- [Information About Basic OTV Features, on page 11](#)
- [Prerequisites for OTV, on page 13](#)
- [Guidelines and Limitations for OTV, on page 14](#)
- [Default Settings for OTV, on page 16](#)
- [Configuring Basic OTV Features, on page 17](#)
- [Verifying the OTV Configuration, on page 26](#)
- [Configuration Examples for OTV, on page 27](#)
- [Additional References, on page 28](#)
- [Feature History for OTV, on page 28](#)

## Finding Feature Information

Your software release might not support all the features documented in this module. For the latest caveats and feature information, see the Bug Search Tool at <https://tools.cisco.com/bugsearch/> and the release notes for your software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the "New and Changed Information" chapter or the Feature History table in this chapter.

## Information About Basic OTV Features

The OTV control-plane creates adjacencies between remote sites to provide Layer 2 connectivity over a transport network. An OTV network performs the following functions:

- Discovers remote sites and builds a control-protocol adjacency
- Shares MAC routing information across the overlay network

The overlay network consists of one or more logical overlay interfaces that are created on the edge device in each remote site that connects to the physical transport network. You associate the logical overlay interface with a physical interface that connects to the transport network. The OTV control plane is responsible for discovering the edge devices in remote sites, creating control-protocol adjacencies to these sites, and establishing

protocol adjacencies among the sites. The OTV control-plane protocol uses the Intermediate-System-to-Intermediate-System (IS-IS) protocol to establish the adjacencies and exchange MAC reachability across the overlay network.




---

**Note** You do not need to configure IS-IS to use OTV. IS-IS runs in the background once OTV is enabled.

---

The OTV control-plane protocol also sends and receives MAC routing updates between remote sites and updates the OTV routing information base (ORIB) with these MAC to IP address pairs.

## Overlay Interfaces

The overlay interface is a logical interface that connects to the remote edge devices on the overlay network through an associated physical interface on the transport network. From the perspective of MAC-based forwarding on the site, the overlay interface is simply another bridged interface. As a bridged interface, the overlay interface has unicast MAC addresses that are associated with it and is eligible for inclusion in the Outbound Interface List (OIL) for different multicast groups. However, no STP packets are forwarded over the overlay interface. Unknown unicast packets are also not flooded on the overlay interface. From the perspective of the IP transport, the overlay interface is not visible.

OTV encapsulates Layer 2 frames in IP packets and transmits them on the overlay interface.




---

**Note** The overlay interface does not come up until you configure a multicast group address or if the site-VLAN does not have at least an active port on the device.

---

### Related Topics

[OTV Packet Flow](#), on page 6

[Creating an Overlay Interface](#), on page 18

## MAC Address Learning

OTV learns MAC to IP address pairs from MAC address learning on the internal interfaces, the OTV control plane (IS-IS) updates over the overlay network, and through multicast IGMP snooping.

OTV edge devices snoop IGMP traffic and issue a Group Membership-Link State Packet (GM-LSP) to advertise the presence of receivers to remote edge devices. The remote edge devices include the overlay interface in the outbound interface list (OIL) for the corresponding multicast group. OTV does not program multicast MAC addresses in the forwarding tables, but rather updates OIL state as necessary.

- Layer 2 learning on the internal network
- IGMP snooping (for multicast MAC addresses)

All learned MAC addresses are stored in the OTV Routing Information Base (ORIB) with the VLAN ID and associated remote IP address.

## Multicast Group Addresses and IGMP Snooping

OTV uses a multicast group address that is assigned from the transport network to create a unique multicast group between remote sites on the overlay network. Each edge device in the overlay network acts as a multicast host and sends an IGMP report message to join the multicast group. OTV sends encapsulated OTV control plane hello messages and MAC routing updates across this multicast group.

OTV uses IGMP snooping and group membership advertisements (GM-LSPs) to learn all multicast group members from remote sites. OTV also uses IGMP snooping to detect all multicast groups in the local site.

### Related Topics

[Configuring the Multicast Group Address](#), on page 19

## High Availability and ISSU

OTV supports stateful restarts and stateful switchovers. A stateful restart occurs when the OTV process fails and is restarted. A stateful switchover occurs when the active supervisor switches to the standby supervisor. The software applies the run-time configuration after the switchover.

Any upgrade from an image that is earlier than Cisco NX-OS 5.2(1) to an image that is Cisco NX-OS 5.2(1) or later in an OTV network is disruptive. A software image upgrade from Cisco NX-OS 5.2(1) or later to Cisco NX-OS 6.0 or 6.1 trains is not disruptive.

Any upgrade from an image that is earlier than Cisco NX-OS Release 6.2(2) to an image that is Cisco NX-OS Release 6.2(2) or later in an OTV network is disruptive. When you upgrade from any previous release, the OTV overlay needs to be shut down for ISSU to operate.

You must upgrade all edge devices in the site and configure the site identifier on all edge devices in the site before traffic is restored. You can prepare OTV for ISSU in a dual-homed site to minimize this disruption. An edge device with an older Cisco NX-OS release in the same site can cause traffic loops. You should upgrade all edge devices in the site during the same upgrade window. You do not need to upgrade edge devices in other sites because OTV interoperates between sites with different Cisco NX-OS versions.

## Virtualization Support

The software supports multiple instances of OTV that run on the same system. OTV supports virtual routing and forwarding instances (VRFs) on the physical interface that is associated with the overlay interface. VRFs exist within virtual device contexts (VDCs). By default, the software places you in the default VDC and default VRF unless you specifically configure another VDC and VRF.

Only Layer 3 physical interfaces (and subinterfaces) or Layer 3 port channel interfaces (and subinterfaces) can be configured as join interfaces in Cisco NX-OS Release 5.0(3).

## Prerequisites for OTV

OTV has the following prerequisites:

- Globally enable the OTV feature.
- Enable IGMPv3 on the join interfaces.
- Ensure connectivity for the VLANs to be extended to the OTV edge device.

**Related Topics**

[Enabling the OTV Feature](#), on page 17

[Extended VLANs and VLAN Interfaces](#), on page 35

## Guidelines and Limitations for OTV

OTV has the following configuration guidelines and limitations:

- When the OTV VDC and the MPLS VDC share the same instance of the M2 forwarding engine (FE), there is a chance for traffic blackholing. The blackholing is because of the MPLS label in MPLS VDC overlap with the MPLS label, which is used to encode the OTV extended VLAN ID (OTV MPLS label = VLAN ID + 32) in the OTV VDC.

This traffic blackholing problem can be avoided by the following methods:

- You need to allocate the interfaces on the same M2 FE in such a way that the interfaces are not shared between multiple VDCs that utilize the MPLS.
  - For N7K-M224XP-23L (24-port 10GE): ports 1 to 12 are served by FE 0, and ports 13 to 24 are served by FE 1.
  - For N7K-M206FQ-23L (6-port 10/40GE): ports 1 to 3 are served by FE 0, and ports 4 to 6 are served by FE 1.
- Configure the **mpls label range**<lowest> <highest> command in the MPLS VDC to exclude all labels that can be used for OTV VLAN transport (top of the range is 4094 + 32 = 4196) from the dynamic allocation. For example: **mpls label range**4127 1028093




---

**Note** You need to reload the MPLS VDC to reallocate the existing labels within this range.

---

- If the same device serves as the default gateway in a VLAN interface and the OTV edge device for the VLANs being extended, configure OTV on a device (VDC or switch) that is separate from the VLAN interfaces (SVIs).
- Cisco Nexus 7000 Series Switches does not support OTV with VXLAN (VNI) feature on F3 line cards.
- The site VLAN must not be extended into the OTV. This configuration is not supported and this helps to avoid unexpected results.
- When possible, we recommend that you use a separate nondefault VDC for OTV to allow for better manageability and maintenance.
- An overlay interface will only be in an up state if the overlay interface configuration is complete and enabled (**no shutdown**). The join interface has to be in an up state.
- Configure the join interface and all Layer 3 interfaces that face the IP core between the OTV edge devices with the highest maximum transmission unit (MTU) size supported by the IP core. OTV sets the Don't Fragment (DF) bit in the IP header for all OTV control and data packets so the core cannot fragment these packets.
- Only one join interface can be specified per overlay. You can decide to use one of the following methods:

- Configure a single join interface, which is shared across multiple overlays.
- Configure a different join interface for each overlay, which increases the OTV reliability.

For a higher resiliency, you can use a port channel, but it is not mandatory. There are no requirements for 1 Gigabit Ethernet versus 10 Gigabit Ethernet or dedicated versus shared mode.

- If your network includes a Cisco Nexus 1000V switch, ensure that switch is running 4.0(4)SV1(3) or later releases. Otherwise, disable Address Resolution Protocol (ARP) and Neighbor Discovery (ND) suppression for OTV.
- The transport network must support PIM sparse mode (ASM) or PIM-Bidir multicast traffic.
- OTV is compatible with a transport network configured only for IPv4. IPv6 is not supported.
- Do not enable PIM on the join interface.
- ERSPAN ACLs are not supported for use with OTV.
- Ensure the site identifier is configured and is the same for all edge devices on a site. OTV brings down all overlays when a mismatched site identifier is detected from a neighbor edge device and generates a system message.
- Any upgrade from an image that is earlier than Cisco NX-OS Release 5.2(1) to an image that is Cisco NX-OS Release 5.2(1) or later in an OTV network is disruptive. A software image upgrade from Cisco NX-OS Release 5.2(1) or later to Cisco NX-OS Release 6.0(1) is not disruptive.
- Any upgrade from an image that is earlier than Cisco NX-OS Release 6.2(2) to an image that is Cisco NX-OS Release 6.2(2) or later in an OTV network is disruptive. When you upgrade from any previous release, the OTV overlay needs to be shut down for ISSU to operate.
- You must upgrade all edge devices in the site and configure the site identifier on all edge devices in the site before traffic is restored. An edge device with an older Cisco NX-OS release in the same site can cause traffic loops. You should upgrade all edge devices in the site during the same upgrade window. You do not need to upgrade edge devices in other sites because OTV interoperates between sites with different Cisco NX-OS versions.
- Beginning with Cisco NX-OS Release 6.2, OTV supports the coexistence of F1 or F2e Series modules with M1 or M2 Series modules in the same VDC.
- For OTV fast convergence, remote unicast MAC addresses are installed in the OTV Routing Information Base (ORIB), even on non-AED VLANs.
- For OTV fast convergence, even non-AED OTV devices create a delivery source, delivery group (DS,DG) mapping for local multicast sources and send a join request to remote sources if local receivers are available. As a result, there are two remote data groups instead of one for a particular VLAN, source, group (V,S,G) entry.
- One primary IP address and no more than three secondary IP addresses are supported for OTV tunnel depolarization.
- F3 Series modules do not support the VLAN translation and traffic depolarization features in Cisco NX-OS Release 6.2(6).
- F3 Series modules support the OTV traffic depolarization feature in Cisco NX-OS Release 6.2(8).
- F2 Series modules in a specific VDC do not support OTV. F2e modules work only as internal interfaces in an OTV VDC.

- F3 Series modules in an OTV VDC should not have the VLAN mode configured as Fabricpath.
- F3 Series modules do not support data-group configurations for subnets larger than /27, in Cisco NX-OS Releases 6.2(14) / 7.2(x) and earlier. Starting from Release 6.2(16) / 7.3(0), the largest subnet mask supported is /24.
- NXOS does not support using FEX ports for OTV site or core facing interfaces.
- Beginning with Cisco NX-OS Release 7.3(0)DX(1), M3 Series modules are supported.
- The OTV VLAN mapping feature is not supported on the Cisco M3 Series and F3 Series modules, as explained in this chapter (using the **otv vlan mapping** command). In order to have VLAN translation on OTV devices using F3 or M3 line cards, you should use per-port VLAN translation on the OTV edge device internal interface (L2 trunk port), as described in the [Configuring OTV VLAN Mapping using VLAN Translation on a Trunk Port](#) document.

### Related Topics

[Creating an Overlay Interface](#), on page 18

[Configuring the Multicast Group Address](#), on page 19

[Assigning a Physical Interface to the Overlay Interface](#), on page 20

[Extended VLANs and VLAN Interfaces](#), on page 35

## Default Settings for OTV

This table lists the default settings for OTV parameters.

*Table 2: Default OTV Parameter Settings*

Parameters	Default
OTV feature	Disabled
Advertised VLANs	None
ARP and ND suppression	Enabled
Graceful restart	Enabled
Site VLAN	1
Site identifier	0x0
IS-IS overlay hello interval	20 seconds (Cisco NX-OS Release 6.2 or later) 4 seconds (Cisco NX-OS Release 5.2 through Cisco NX-OS Release 6.1) 10 seconds (Cisco NX-OS releases prior to 5.2)
IS-IS overlay hello multiplier	3



Parameters	Default
IS-IS site hello interval	3 seconds (Cisco NX-OS Release 6.2 or later) 1 second (Cisco NX-OS releases prior to 6.2)
IS-IS site hello multiplier	20 (Cisco NX-OS Release 6.2 or later) 10 (Cisco NX-OS releases prior to 6.2)
IS-IS CSNP interval	10 seconds
IS-IS LSP interval	33 milliseconds
Overlay route tracking	Disabled
Site BFD	Disabled
Tunnel depolarization with IP pools	Enabled

## Configuring Basic OTV Features

This section describes how to configure basic OTV features.




---

**Note** If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

---

## Enabling the OTV Feature

By default, the OTV feature is disabled on the device. You must explicitly enable the OTV feature to access the configuration and verification commands.

### SUMMARY STEPS

1. **configure terminal**
2. **feature otv**
3. (Optional) **show feature | include otv [interface]**
4. (Optional) **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
<b>Step 2</b>	<b>feature otv</b> <b>Example:</b> switch(config)# feature otv	Enables OTV.
<b>Step 3</b>	(Optional) <b>show feature   include otv [interface]</b> <b>Example:</b> switch(config)# show feature   include otv	Displays the enable/disable status for the OTV feature.
<b>Step 4</b>	(Optional) <b>copy running-config startup-config</b> <b>Example:</b> switch# copy running-config startup-config	Copies the running configuration to the startup configuration.

## Creating an Overlay Interface

You can create a logical OTV overlay interface. Once you create the overlay interface, you must configure a multicast group address and associate the interface with a physical interface.

### Before you begin

- Enable the OTV feature.

## SUMMARY STEPS

1. **configure terminal**
2. **interface overlay *interface***
3. (Optional) **description [*dstring*]**
4. (Optional) **show otv overlay [*interface*]**
5. (Optional) **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.

	Command or Action	Purpose
Step 2	<b>interface overlay</b> <i>interface</i> <b>Example:</b> <pre>switch(config)# interface overlay 1 switch(config-if-overlay) #</pre>	Creates an OTV overlay interface and enters interface configuration mode. The range is from 0 to 65535.
Step 3	(Optional) <b>description</b> [ <i>dstring</i> ] <b>Example:</b> <pre>switch(config-if-overlay) # description site 4</pre>	Configures a description for the overlay network. The <i>dstring</i> is any case-sensitive, alphanumeric string up to 80 characters.
Step 4	(Optional) <b>show otv overlay</b> [ <i>interface</i> ] <b>Example:</b> <pre>switch(config-if-overlay) # show otv overlay 1</pre>	Displays the OTV overlay interface configuration. The range is from 0 to 65535.
Step 5	(Optional) <b>copy running-config startup-config</b> <b>Example:</b> <pre>switch(config-if-overlay) # copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.

#### Related Topics

[Enabling the OTV Feature](#), on page 17

[Configuring the Multicast Group Address](#), on page 19

[Assigning a Physical Interface to the Overlay Interface](#), on page 20

## Configuring the Multicast Group Address

You can configure a unique multicast group address for each overlay network.

OTV uses the following multicast groups in the Transport Network:

- An any source multicast (ASM) group for neighbor discovery and to exchange MAC reachability.
- A specific source multicast (SSM) group range to map internal multicast groups in the sites to the multicast groups in the core, which will be leveraged to extend the multicast data traffic across the overlay.

#### Before you begin

- Enable the OTV feature.

#### SUMMARY STEPS

1. **configure terminal**
2. **interface overlay** *interface*
3. **otv control-group** *mcast-address*
4. **otv data-group** *mcast-range1* [*mcast-range2...*]
5. (Optional) **show otv data-group** [**local** | **remote**] [**detail**]
6. (Optional) **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>interface overlay interface</b> <b>Example:</b> <pre>switch(config)# interface overlay 1 switch(config-if-overlay)#</pre>	Creates an OTV overlay interface and enters interface configuration mode.
<b>Step 3</b>	Required: <b>otv control-group mcast-address</b> <b>Example:</b> <pre>switch(config-if-overlay)# otv control-group 239.1.1.1</pre>	Configures the multicast group address used by the OTV control plane for this OTV overlay network. The multicast group address is an IPv4 address in dotted decimal notation.
<b>Step 4</b>	Required: <b>otv data-group mcast-range1 [mcast-range2...]</b> <b>Example:</b> <pre>switch(config-if-overlay)# otv data-group 232.1.1.0/28</pre>	Configures one or more ranges of local IPv4 multicast group prefixes used for multicast data traffic. Use SSM multicast groups 232.0.0.0/8. The multicast group address is an IPv4 address in dotted decimal notation. A subnet mask is used to indicate ranges of addresses. You can define up to eight data-group ranges.
<b>Step 5</b>	(Optional) <b>show otv data-group [local   remote] [detail]</b> <b>Example:</b> <pre>switch(config-if-overlay)# show otv data-group</pre>	Displays the advertised multicast groups.
<b>Step 6</b>	(Optional) <b>copy running-config startup-config</b> <b>Example:</b> <pre>switch(config-if-overlay)# copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.

**Related Topics**

- [Enabling the OTV Feature](#), on page 17
- [Creating an Overlay Interface](#), on page 18
- [Assigning a Physical Interface to the Overlay Interface](#), on page 20

## Assigning a Physical Interface to the Overlay Interface

You must define a physical Layer 3 interface as the join interface for the overlay.

**Before you begin**

- Enable the OTV feature.
- Configure IGMPv3 on the physical Layer 3 interface that will become the join interface.

## Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>interface overlay <i>interface</i></b> <b>Example:</b> <pre>switch(config)# interface overlay 1 switch(config-if-overlay)#</pre>	Creates an OTV overlay interface and enters interface configuration mode.
<b>Step 3</b>	Required: <b>otv join-interface <i>interface</i></b> <b>Example:</b> <pre>switch(config-if-overlay)# otv join-interface ethernet 2/1</pre>	Joins the OTV overlay interface with a physical Layer 3 interface. You must configure an IP address on the physical interface.  You can specify only one join interface per overlay. You can decide to use one of the following methods: <ul style="list-style-type: none"> <li>• A single join interface, which is shared across multiple overlays.</li> <li>• A different join interface for each overlay, which increases the OTV reliability.</li> </ul>
<b>Step 4</b>	(Optional) <b>show otv overlay [<i>interface</i>]</b> <b>Example:</b> <pre>switch(config-if-overlay)# show otv overlay 1</pre>	Displays the OTV overlay interface configuration.
<b>Step 5</b>	(Optional) <b>copy running-config startup-config</b> <b>Example:</b> <pre>switch(config-if-overlay)# copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.

## Related Topics

[Enabling the OTV Feature](#), on page 17

[Creating an Overlay Interface](#), on page 18

[Configuring the Multicast Group Address](#), on page 19

## Assigning the Extended VLAN Range

You can configure OTV to advertise MAC address updates for a range of VLANs on an OTV overlay interface. OTV does not forward Layer 2 packets for VLANs that are not in the extended VLAN range for the overlay interface. You can add or remove VLANs from an existing extended VLAN range.



**Note** You can assign a VLAN to only one overlay interface. Ensure that the VLANs do not overlap across the configured overlay interfaces.

### Before you begin

- Enable the OTV feature.
- Enable the VLANs in the extended VLAN range.
- Ensure that you do not extend a VLAN that is also associated with a VLAN interface (SVI) in this VDC.

### SUMMARY STEPS

1. **configure terminal**
2. **interface overlay** *interface*
3. **otv extend-vlan** *vlan-range*
4. (Optional) **otv extend-vlan** {**add** | **remove**} *vlan-range*
5. (Optional) **show otv vlan** [*vlan-range*] [**detail**]
6. (Optional) **copy running-config startup-config**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
<b>Step 2</b>	<b>interface overlay</b> <i>interface</i>  <b>Example:</b> switch(config)# interface overlay 1 switch(config-if-overlay)#	Creates an overlay interface and enters interface configuration mode.
<b>Step 3</b>	Required: <b>otv extend-vlan</b> <i>vlan-range</i>  <b>Example:</b> switch(config-if-overlay)# otv extend-vlan 2,5-34	Extends a range of VLANs over this overlay interface and enables OTV advertisements for these VLANs. The <i>vlan-range</i> is from 1 to 3967, and from 4048 to 4093.
<b>Step 4</b>	(Optional) <b>otv extend-vlan</b> { <b>add</b>   <b>remove</b> } <i>vlan-range</i>  <b>Example:</b> switch(config-if-overlay)# otv extend-vlan add 3	Adds or removes VLANs to the existing range of VLANs over this overlay interface. The <i>vlan-range</i> is from 1 to 3967, and from 4048 to 4093.
<b>Step 5</b>	(Optional) <b>show otv vlan</b> [ <i>vlan-range</i> ] [ <b>detail</b> ]  <b>Example:</b> switch(config-if-overlay)# show otv vlan 2	Displays the VLAN information for the overlay network

	Command or Action	Purpose
Step 6	(Optional) <b>copy running-config startup-config</b> <b>Example:</b> <pre>switch(config-if-overlay)# copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.

**Related Topics**

[Multihomed Sites and Load Balancing](#), on page 9

[Verifying Load Balancing](#), on page 59

## Configuring the Site VLAN and Site Identifier

You can configure the site VLAN. OTV uses the site VLAN to communicate with other edge devices in the local site. OTV sends hello messages on the site VLAN to determine if there are other edge devices on the local site. Ensure that the site VLAN is active on at least one of the edge device ports.



**Note** You must configure the site identifier in Cisco NX-OS release 5.2(1) or later releases. The overlay network will not become operational until you configure the site identifier.

OTV uses the site identifier to support dual site adjacency. Dual site adjacency uses both site VLAN and site identifier to determine if there are other edge devices on the local site and if those edge devices can forward traffic. Ensure that the site identifier is the same on all neighbor edge devices in the site.



**Note** The site VLAN must not be extended into the OTV. This configuration is not supported and this helps to avoid unexpected results.

The site VLAN and site identifier must be configured before entering the **no shutdown** command for any interface overlay and must not be modified while any overlay is up within the site.

**Before you begin**

Enable the OTV feature.

**SUMMARY STEPS**

1. **configure terminal**
2. **otv site-vlan** *vlan-id*
3. **otv site-identifier** *id*
4. (Optional) **show otv site**
5. (Optional) **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	Required: <b>otv site-vlan</b> <i>vlan-id</i> <b>Example:</b> <pre>switch(config)# otv site-vlan 10</pre>	Configures a VLAN that all local edge devices communicate on. You must configure this VLAN ID to match on all local edge devices. We recommend that you use the same VLAN ID across all sites. The range is from 1 to 3967, and from 4048 to 4093. The default is 1.
<b>Step 3</b>	Required: <b>otv site-identifier</b> <i>id</i> <b>Example:</b> <pre>switch(config)# otv site-identifier 0018.g957.6rk0</pre>	Configures the site identifier. You should configure this same site identifier on all local OTV edge devices. The site identifier should be unique across different sites. The range is from 0x1 to 0xffffffff. The default is 0x0. The format is either MAC address or hex format.  <b>Note</b> This configuration step is required for Cisco NX-OS Release 5.2(1) and later releases.
<b>Step 4</b>	(Optional) <b>show otv site</b> <b>Example:</b> <pre>switch(config)# show otv site</pre>	Displays the OTV site information.
<b>Step 5</b>	(Optional) <b>copy running-config startup-config</b> <b>Example:</b> <pre>switch(config)# copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.

## Related Topics

[Verifying Load Balancing](#), on page 59

[Dual Site Adjacency](#), on page 9


## Preparing OTV for ISSU to Cisco NX-OS 5.2(1) or Later Releases in a Dual-Homed Site

Performing an ISSU for OTV from a release earlier than Cisco NX-OS 5.2(1) to Cisco NX-OS 5.2(1) or later releases is not supported. However, you can minimize the OTV traffic disruption in a dual-homed OTV site.



**Figure 6: Dual-Homed Site**

This example figure shows that Edge Device 1 is the Authoritative Edge Device (AED) for the dual-homed site in the OTV

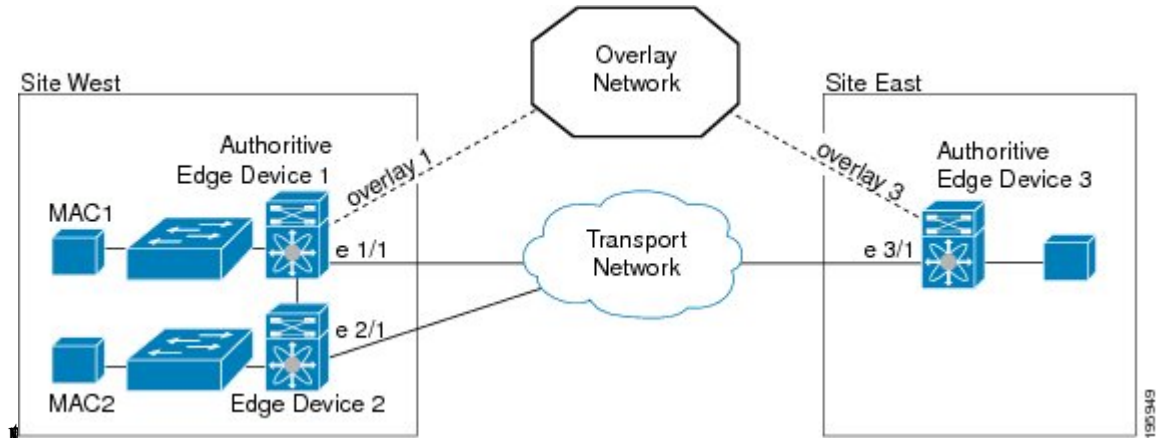

### Before you begin

- Step 1** Shut down all overlay interfaces on the OTV VDC for the Cisco Nexus 7000 Series chassis that you want to upgrade. ISSU does not proceed unless the overlay interfaces are administratively down.

**Example:**

```
edge-device-1(config)# interface overlay1
edge-device-1(config-if-overlay)# shutdown
```

Once the overlay interface on the OTV VDC is down, the other OTV edge device should become the AED for all VLANs and no major traffic disruption should occur at this point. In this example, Edge Device 2 becomes the AED.

- Step 2** Initiate the ISSU on this Cisco Nexus 7000 Series chassis. In this example, ISSU occurs on Edge Device 1. Wait until the chassis upgrade completes.

- Step 3** Configure the site identifier on this upgraded device.

**Example:**

```
edge-device-1(config)# otv site-identifier 0018.g957.6rk0
```

You should configure this same site identifier on all local OTV edge devices. The site identifier should be unique across different sites. The range is from 0x1 to 0xffffffff. The default is 0x0. The format is either MAC address or hex format.

**Note** This step is required for Cisco NX-OS Release 5.2(1) and later releases.

- Step 4** Switch back to the default VDC and enter configuration mode.

**Example:**

```
edge-device-1(config)# switchback
switch# configure terminal
switch(config)#
```

- Step 5** Apply the default CoPP policy.

**Example:**

```
switch(config)# copp profile strict
```

When you upgrade to Cisco NX-OS 5.2(1) releases, you must configure the default CoPP policy.

**Step 6** Switch to the OTV VDC and enter configuration mode.

**Example:**

```
switch(config)# switchto vdc edge-device-1
edge-device-1# configure terminal
edge-device-1(config)#
```

**Step 7** Bring the overlay interface back up on the upgraded OTV VDC.

**Example:**

```
edge-device-1(config)# interface overlay1
edge-device-1(config-if-overlay)# no shutdown
```

The overlay interface becomes operational.

**Step 8** Shut down the overlay interface of the other OTV VDC in the dual-homed site. This action causes a disruption in OTV traffic.

**Example:**

```
edge-device-2(config)# interface overlay1
edge-device-2(config-if-overlay)# shutdown
```

OTV traffic is disrupted until your upgraded OTV edge device becomes the AED. In this example, Edge Device 1 becomes AED.

**Step 9** Repeat [Step 1, on page 25](#) to [Step 7, on page 26](#) on the other Cisco Nexus 7000 Series chassis in the dual-homed site that runs Cisco NX-OS 5.1 or earlier releases.

You must configure the same site identifier on all edge devices in this site.

---

The upgraded OTV VDC comes up and becomes the AED for a subset of VLANs. OTV load balances VLANs across the two upgraded edge devices in this site.

## Verifying the OTV Configuration

To display the OTV configuration, perform one of the following tasks:

Command	Purpose
<code>show running-configuration otv [all]</code>	Displays the running configuration for OTV.
<code>show otv overlay [interface]</code>	Displays information about overlay interfaces.
<code>show otv adjacency [detail]</code>	Displays information about the adjacencies on the overlay network.

Command	Purpose
<b>show otv</b> [ <i>overlay interface</i> ] [ <b>vlan</b> [ <i>vlan-range</i> ] [ <b>authoritative</b>   <b>detail</b> ]]	Displays information about VLANs that are associated with an overlay interface.
<b>show otv isis site</b> [ <b>database</b>   <b>statistics</b> ]	Displays the BFD configuration state on both local and neighboring edge devices.
<b>show otv site</b> [ <b>all</b> ]	Displays information about the local site.
<b>show otv</b> [ <b>route</b> [ <i>interface</i> [ <b>neighbor-address</b> <i>ip-address</i> ]]] [ <b>vlan</b> [ <i>vlan-range</i> ] [ <i>mac-address</i> ]]	Displays information about the OTV routes.
<b>show otv mroute</b> <b>vlan</b> <i>vlan-id</i> <b>startup</b>	Displays the OTV multicast route information for a specific VLAN from the OTV Routing Information Base (ORIB).
<b>show forwarding distribution otv multicast route</b> <b>vlan</b> <i>vlan-id</i>	Displays Forwarding Information Base (FIB) OTV multicast route information for a specific VLAN.
<b>show otv vlan-mapping</b> [ <b>overlay</b> <i>interface-number</i> ]	Displays VLAN translation mappings from a local site to a remote site.
<b>show mac address-table</b>	Displays information about MAC addresses.
<b>show otv internal adjacency</b>	Displays information about additional tunnels on the overlay network.

## Configuration Examples for OTV

This example displays how to configure a basic OTV network that uses the configuration default values:

```
!Configure the physical interface that OTV uses to reach the
! DCI transport infrastructure
interface ethernet 2/1
 ip address 192.0.2.1/24
 ip igmp version 3
 no shutdown
```

```
!Configure the VLAN that will be extended on the overlay network
! and the site-vlan
vlan 2,5-10
```

```

! Configure OTV including the VLANs that will be extended.
feature otv
otv site-vlan 2
otv site-identifier 0018.g957.6rk0
interface Overlay1
  otv control-group 239.1.1.1
  otv data-group 232.1.1.0/28
  otv join-interface ethernet 2/1
!Extend the configured VLAN
otv extend-vlan 5-10
no shutdown

```

## Additional References

This section includes additional information related to implementing OTV.

### Related Documents

Related Topic	Document Title
Cisco NX-OS licensing	<i>Cisco NX-OS Licensing Guide</i>
OTV commands	<i>Cisco Nexus 7000 Series NX-OS OTV Command Reference</i>
Configuring BFD	<i>Cisco Nexus 7000 Series NX-OS Interfaces Configuration Guide</i>
BFD commands	<i>Cisco Nexus 7000 Series NX-OS Interfaces Command Reference</i>

### Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	—

## Feature History for OTV

This table lists the release history for this feature.

**Table 3: Feature History for OTV**

Feature Name	Releases	Feature Information
OTV	7.3(0)DX(1)	Added support for M3 modules
OTV	6.2(6)	Added support for F3 Series modules.
Tunnel depolarization with IP pools	6.2(6)	Introduced this feature.
Selective unicast flooding	6.2(2)	Introduced this feature.

Feature Name	Releases	Feature Information
OTV VLAN mapping	6.2(2)	Introduced this feature.
Dedicated data broadcast forwarding	6.2(2)	Introduced this feature.
OTV fast convergence	6.2(2)	Introduced this feature.
Fast failure detection	6.2(2)	Introduced this feature.
OTV	6.2(2)	Added the <b>track-adjacency-nexthop</b> command to enable overlay route tracking.
OTV	6.2(2)	Added support for F1 and F2e Series modules.
OTV	6.2(2)	Added a reverse timer to the <b>show otv vlan</b> command output to show the time remaining for the VLANs to become active after the overlay interface is unshut.
ARP neighbor discovery timeout	6.1(1)	Introduced this feature.
OTV adjacency server	5.2(1)	Introduced this feature.
Dual site adjacency	5.2(1)	Added site identifier support for dual site adjacency.
Extended VLAN range	5.2(1)	Added support to add or remove VLANs to the extended VLAN range.
IPv6 unicast forwarding and multicast flooding	5.2(1)	Added support for IPv6 unicast forwarding and multicast flooding across the OTV overlay.
Configuration limits	5.2(1)	Enhanced the OTV scalability limits.
OTV	5.0(3)	Introduced this feature.

### Related Topics

[OTV Adjacency Server](#), on page 32

[Configuring the Site VLAN and Site Identifier](#), on page 23

[Assigning the Extended VLAN Range](#), on page 21





## CHAPTER 4

# Configuring Advanced OTV Features

This chapter describes the advanced configuration for Overlay Transport Virtualization (OTV) on Cisco NX-OS devices.

- [Finding Feature Information, on page 31](#)
- [Information About Advanced OTV Features, on page 31](#)
- [Prerequisites for OTV, on page 41](#)
- [Guidelines and Limitations for OTV, on page 42](#)
- [Guidelines for OTV Multicast, on page 44](#)
- [Default Settings for OTV, on page 45](#)
- [Configuring Advanced OTV Features, on page 46](#)
- [Verifying the OTV Configuration, on page 63](#)
- [Configuration Examples, on page 64](#)
- [Monitoring OTV , on page 69](#)
- [Additional References, on page 70](#)
- [Feature History for OTV, on page 70](#)

## Finding Feature Information

Your software release might not support all the features documented in this module. For the latest caveats and feature information, see the Bug Search Tool at <https://tools.cisco.com/bugsearch/> and the release notes for your software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the "New and Changed Information" chapter or the Feature History table in this chapter.

## Information About Advanced OTV Features

OTV uses an overlay control-plane protocol to learn and propagate MAC routing information across the overlay network. The OTV control-plane protocol uses Intermediate-System-to-Intermediate-System (IS-IS) messages to build adjacencies to remote sites and to send MAC route updates to remote sites.

## Building Adjacencies

OTV builds Layer 2 adjacencies to remote sites on the overlay network through the following modes:

- Autodiscovery based on OTV control-plane hello messages over a common multicast group.
- OTV adjacency server operational mode that manages and distributes a list of all peer edge devices in an overlay

OTV also builds adjacencies with other edge devices in the local site. OTV sends OTV control-plane hello messages on a dedicated VLAN, which is the site VLAN, to detect other edge devices in the same local site. These edge devices communicate to elect the Authoritative Edge Device (AED) for each configured overlay network.

## Autodiscovery on the Overlay Network

The overlay routing protocol uses the IS-IS hello messages that are sent to the multicast group address to detect and build adjacencies to remote sites on the overlay network. You configure each site in the overlay network with the same multicast group address. When local and remote sites exchange hellos, a control protocol adjacency is established between the edge devices of both sites. The overlay routing protocol optionally authenticates the remote edge device before building an adjacency to the edge device.

## OTV Adjacency Server

Each OTV node provides multicast send capability by replicating at the head-end itself. Each OTV node that sends a multicast packet on a nonmulticast-capable network will unicast replicate the packet. Each OTV node takes a multicast packet that is originated by the upper layers and makes a copy to send to each OTV neighbor that is interested in the multicast packet.

To be able to unicast replicate, each OTV node must know a list of neighbors to replicate to. Rather than configuring the list of all neighbors in each OTV node, you can dynamically identify the neighbors. The set of OTV neighbors might be different for different multicast groups, but the mechanism supports a unicast-replication-list (URL) per multicast group address.

The OTV does not use a replication server, so there are no choke points or longer path delays due to the lack of multicast capability. The multicast data packets, even though they are sent as a unicast message, travel on the same path from the source OTV edge device to each interested party for the group address the multicast is sent to. The only difference is that there are multiple copies being sent from the OTV edge device source.

You must configure which OTV edge device acts as an adjacency server. The OTV edge devices are configured with the IPv4 or IPv6 address of the adjacency server. All other adjacency addresses are discovered dynamically.

When a new site is added, you must configure only the OTV edge devices for the new site with the adjacency server addresses. No other sites in this VPN or other VPNs need additional configuration.

You can have more than one adjacency server per virtual private network (VPN). An adjacency server can serve multiple VPNs.

When an OTV edge device is configured with one or more adjacency server addresses, they are added to the unicast-replication-list (URL). An OTV edge device does not process an alternate server's type length value (TLV) until it believes the primary adjacency server has timed out. The primary and secondary adjacency servers are configured in each OTV edge device. An adjacency server can also be an OTV edge device that connects an OTV site to one or more VPNs.

OTV pushes the secondary adjacency server in the replication list based on the configuration with the primary server.

When you gracefully deconfigure an adjacency server, the client starts using the replication list from the secondary adjacency server and pushes the difference to OTV. If you also deconfigure the secondary adjacency server, the client deletes the replication list entries from OTV immediately.



If you reboot the primary adjacency server, the client starts using the replication list from the secondary adjacency server and pushes the difference to OTV. If the secondary and the primary adjacency servers crash or rebooted, the client makes the replication list entries stale with a timer of 10 minutes. The replication list entries are deleted after 10 minutes in case there is no adjacency server in the network that is advertising the same entries in the replication list.

If you deconfigure or reboot the adjacency server client, the client stops sending hellos to the adjacency server. Consequently, the adjacency server deletes the replication list entry for that client and advertises the deletion to all client nodes. All the nodes delete the adjacency to that client immediately.

If the OTV adjacency is lost with a unicast-only adjacency server client, but the adjacency server continues to advertise the unicast-only node, the other nodes continue to send hellos to that node until the adjacency server specifically deletes it from its own list.

#### Related Topics

[Configuring OTV Adjacency Servers](#), on page 49

## Authoritative Edge Device

The AED is responsible for all MAC address reachability updates for a VLAN. The overlay routing protocol sends out hello messages on the edge device internal interfaces and over a designated site VLAN to discover other OTV edge devices in the local site. OTV uses a VLAN hashing algorithm to select the AED from one of these local site edge devices.

OTV load balances traffic for the overlay network by sending MAC address reachability updates on different AEDs, depending on the VLAN of the reachability update.

If the local site has only one edge device, that edge device becomes the AED for the VLANs in the configured advertise VLAN range and does not send updates for VLANs that are outside of the configured extended VLAN range.

#### Related Topics

[Configuring the Site VLAN and Site Identifier](#), on page 23

[Assigning the Extended VLAN Range](#), on page 21

## Dual Site Adjacency and AED Election

OTV uses the dual site adjacency state to determine the AED election. A change in the dual site adjacency state also triggers an immediate AED reelection.

Dual site adjacency state considers the following individual state changes for AED election:

#### Site adjacency and overlay adjacency down

Neighbors remove this edge device from consideration in the AED election.

#### Site adjacency down but overlay adjacency up

Neighbors continue to use this edge device in any AED elections.

#### Site adjacency up but overlay adjacency down

Neighbors continue to use this edge device in any AED elections if the neighbor site IS-IS hello messages still include the OTV group address.

#### Related Topics

[Feature History for OTV](#), on page 28

[Configuring the Site VLAN and Site Identifier](#), on page 23

## AED Election

The AED is elected for each VLAN based on a VLAN ID-based hash computation. The VLAN hash algorithm assigns ordinal numbers from zero to maximum to each edge device in the local site, based on the system ID (based on the system MAC address, by default). The hash algorithm uses the following equation:

$$f(\text{VLAN ID}) = (\text{VLAN ID}) \% \text{edges}$$

where edges indicates the number of OTV edge devices in the local site.

If  $f(\text{VLAN ID})$  equals the ordinal number for the local edge device, the edge device is authoritative for that VLAN ID. In a site with two edge devices, the VLANs are split as odd and even VLAN IDs on each edge device.

## MAC Address Reachability Updates

The OTV control plane uses IS-IS Link State Packets (LSPs) to propagate MAC address to IP address mappings to all edge devices in the overly network. These address mappings contain the MAC address, VLAN ID, and associated IP address of the edge device that the MAC address is reachable from.

The AED uses IGMP snooping to learn all multicast MAC addresses in the local site. OTV includes these MAC addresses in a special group-membership LSP (GM-LSP) that is sent to remote edge devices on the overlay network.

## ARP Neighbor Discovery Cache

OTV can suppress unnecessary ARP messages from being sent over the overlay network. OTV builds a local Layer 3 to Layer 2 mapping for remote hosts. Any ARP requests from local hosts are served by this ARP Neighbor Discovery cache.

### Related Topics

[Disabling the ARP Neighbor Discovery Cache](#), on page 52

## Selective Unicast Flooding for OTV

Normally, unknown unicast Layer 2 frames are not flooded between OTV sites, and MAC addresses are not learned across the overlay interface. Any unknown unicast messages that reach the OTV edge device are blocked from crossing the logical overlay, allowing OTV to prevent Layer 2 faults from spreading to remote sites.

The end points connected to the network are assumed to not be silent or unidirectional. However, some data center applications require the unknown unicast traffic to be flooded over the overlay to all the data centers, where end points may be silent. Beginning with Cisco NX-OS Release 6.2(2), you can configure selective unicast flooding to flood the specified destination MAC address to all other edge devices in the OTV overlay network with that unknown unicast traffic.

### Related Topics


[Configuring Selective Unicast Flooding](#), on page 52

## Extended VLANs and VLAN Interfaces

A VLAN can either have Layer 3 connectivity through a VLAN interface (SVI) or the VLAN can be extended over OTV. If you have a design scenario that requires the VLAN to be both extended over OTV to a remote site and have Layer 3 connectivity through a VLAN interface, you must configure OTV in a separate VDC from the VDC that contains the VLAN interfaces.

**Figure 7: OTV in a VDC**

This figure shows one physical switch with a VDC for OTV configuration and a VDC for the Aggregation

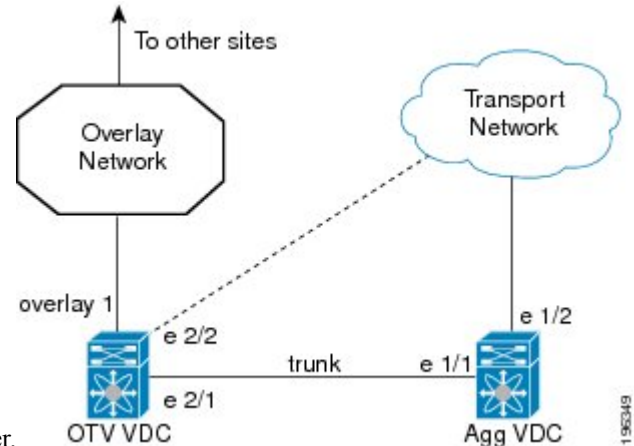

Layer (Agg VDC) configuration in a data center.

In this figure, the Agg VDC contains all the configuration and physical links for the Aggregation Layer of a data center. The Agg VDC also includes the VLAN interfaces (SVIs) for any VLANs that need Layer 3 connectivity. The Agg VDC is connected to the OTV VDC through a loopback cable over a trunk port. This trunk port carries any VLAN traffic that needs to be extended over the overlay network.

The OTV VDC also includes a trunk port that accepts this VLAN traffic. All OTV configuration exists in the OTV VDC. The overlay interface has an extended VLAN range that includes VLANs from the Agg VDC that have Layer 3 connectivity through VLAN interfaces. These extended VLANs are isolated in a separate VDC from the VLAN interfaces in the Agg VDC. The Agg VDC decides on whether a Layer 2 frame is forwarded to the local VLAN interface to Layer 3 or whether the Layer 2 frame is sent over the trunk port to the OTV VDC and encapsulated for the overlay network.



**Note** OTV is transparent to the Aggregation Layer and the rest of the data center site in this example.

## OTV VLAN Mapping

You can extend VLANs over an OTV network in order to allow VLANs with the same VLAN ID to integrate seamlessly between local and remote sites. For example, when VLAN 1 on Site A is extended to Site B, VLAN 1 on Site A integrates seamlessly with VLAN 1 on Site B.

Beginning with Cisco NX-OS Release 6.2(2), you can map a VLAN on the local site to a VLAN with a different VLAN ID on the remote site. When you map two VLANs with different VLAN IDs across sites, they get mapped to a common VLAN called the transport VLAN. For example, when you map VLAN 1 on Site A to VLAN 2 on Site B, both VLANs are mapped to a transport VLAN. All traffic originating from

VLAN 1 on Site A is translated as going from the transport VLAN. All traffic arriving at Site B from the transport VLAN is translated to VLAN 2.



**Note** The OTV VLAN mapping feature is not supported on the Cisco M3 Series and F3 Series modules, as explained in this chapter (using the **otv vlan mapping** command). In order to have VLAN translation on OTV devices using F3 or M3 line cards, you should use per-port VLAN translation on the OTV edge device internal interface (L2 trunk port), as described in the [Configuring OTV VLAN Mapping using VLAN Translation on a Trunk Port](#) document.

#### Related Topics

[Configuring OTV VLAN Mapping](#), on page 53

## Forward Referencing of VLAN Maps

On the local site, you can map a VLAN that is not yet extended. OTV saves the mapping for this VLAN as a forward reference in its database. When you extend this VLAN later, the existing mapping is applied to the VLAN. The translation of traffic happens after the VLAN has been extended.

Consider a scenario where VLANs 1-10 are extended on Site A to Site B and you map VLANs 1 to 20 on Site A to VLANs on Site B. After the VLAN mapping, only VLANs 1 to 10 will be translated because they are extended. VLAN 11 to 20 mappings will be translated after you extend them to Site B. Until they are translated, the mappings are stored in the OTV database as a forward reference. The forward referencing is maintained in the OTV database even if a VLAN is unextended.

## Dedicated Data Broadcast Forwarding

An OTV network that supports IP multicast uses the control-group address, which is a multicast address, to encapsulate and exchange OTV control-plane protocol updates. Each edge device that participates in a particular overlay network shares the same control-group address with all other edge devices of the same overlay network.

In addition to the control-group address, you can configure a dedicated broadcast-group address that can be used for all the broadcast traffic over the OTV cloud. If a broadcast-group address is not configured or the configuration is removed, OTV uses the configured control-group address for forwarding all broadcast packets.

#### Related Topics

[Configuring a Dedicated Broadcast-Group Address](#), on page 55

## OTV Fast Convergence

Cisco NX-OS Release 6.2(2) introduces the following enhancements to overcome the sources of convergence delays in an overlay network:

- VLAN AED synchronization
- Fast remote convergence by using the site ID and proactive advertisements
- Fast convergence on local edge devices by using prepopulation
- Fast detection of an edge device failure by using Bidirectional Forwarding and Detection (BFD) and route tracking
- Graceful insertion

- Graceful shutdown
- Prioritized processing of link-state packets (LSPs)

### Related Topics

[Configuring OTV Fast Convergence](#), on page 55

## VLAN AED Synchronization

The election of an AED is triggered independently and is uncoordinated among the multiple edge devices in a site. Therefore, a short wait period is required to ensure that two or more edge devices are not simultaneously elected as the AED. A convergence delay can occur if there are failures at an edge device that is the AED for some VLANs.

VLAN AED synchronization in an overlay network ensures an orderly transition of the AED status from one edge device to another, prevents loops, and ensures rapid convergence.

Any edge device that needs to give AED status does so after it stops forwarding on the overlay. Any edge device that needs to take over as AED does so only after the previous AED has given up being the AED.

In AED synchronization, a backup AED is preassigned for each VLAN. The backup AED takes over immediately when an AED failure is detected.

### AED Server Election

To aid in convergence improvement, the AED server and backup AED server are automatically elected per site for each overlay. All edge devices in a site elect both of these servers in a distributed manner. The eligible edge device with the highest system ID is selected as the AED server, and the edge device with the next highest system ID is selected as the AED backup server.

If an AED server is already elected and is active, a more eligible edge device is not designated as the AED server. Instead, that edge device becomes the new backup AED server. The backup AED server takes over only when the current AED server fails or declares itself ineligible.

### AED Server Eligibility

An edge device indicates its eligibility to be elected as an AED server by using the AED server type, length, value (TLV). An edge device becomes eligible to be an AED server after it has completed graceful insertion, specifically after the edge device has completed synchronization and formed adjacencies with all edge devices in the site. An edge device loses its eligibility to be elected as an AED server when it loses its forwarding readiness due to events either in the site or in the overlay network.

The AED server TLV is sent in hello messages on the overlay. The absence of a control group in the site hellos indicates that the edge device should not be considered eligible to be elected as an AED server.

### VLAN Reassignment

The VLANs at an OTV site are distributed among the edge devices that exist at the site. The edge device carrying the traffic of a VLAN is designated as the AED for that VLAN. During AED election, the AED server uses procedures to avoid unnecessary reassignment of VLANs among the active edge devices. The AED server ensures that the amount of message processing on various edge devices is minimal.

The following mechanisms are also used to reduce VLAN reassignments:

- When an edge device fails, the VLANs belonging to other edge devices are not reassigned; therefore, the traffic for those VLANs is not affected.

- When an edge device is added to a site, the edge device is assigned VLANs. However, VLANs are not reassigned among the other edge devices.
- VLAN reassignments to rebalance VLAN distribution after edge device insertions and failures are scheduled and spread out over a period of time.
- The AED elections for reassigning VLANs are grouped so that only one edge device gives up ownership of its VLANs at a time.

## Fast Remote Convergence

Fast remote convergence is a set of techniques used to optimize delays that are introduced during the learn-advertise cycle for a newly elected AED. When an AED fails, a newly elected AED learns the local routing information of the newly acquired VLANs and advertises it to the remote site. The learn-advertise cycle is dependent on the size of the MAC table. The MAC table does not need to be updated when a remote AED fails. The convergence is independent of the size of the MAC table and the number of MACs in the affected site.

Edge devices execute the fast cutover of traffic to the new remote AED. Fast remote convergence uses the remote site's exported VLAN-AED mapping.

## Fast Failure Detection

### AED Failure

If an AED has a local failure, it might become unable to forward traffic for all VLANs. The AED first ensures that it has disabled traffic forwarding for all VLANs. If the AED still has overlay or site reachability, the AED indicates this failure by bringing down its AED capability on either adjacency. If the AED does not have reachability or has shut down, other edge devices detect this failure by using a dual-adjacency timeout. In both cases, the preelected backup AEDs immediately assume authority for the respective VLANs after the AED failure has been determined.

### Edge Device Failure

An edge device proactively informs neighbors about local failures. If an edge device shuts down before signaling its failure, the device's failure is determined by one or both of the following:

- **Dual adjacency timeout**—This method is used when both overlay and site adjacencies are lost. If only overlay adjacency is lost, the edge device is still deemed to be active. The VLAN AED status that was received previously from the edge device is maintained and is not deleted. Any AED transaction involving the edge device does not proceed until the edge device becomes reachable on the overlay or completely fails. If the edge device becomes completely isolated from the overlay, the edge device indicates a forwarding readiness failure on the site adjacency.
- **Site edge device consensus**—This method makes the failure detection more robust at the cost of extra latency and processing. All edge devices in the same site publish a list of edge devices to which they are adjacent, either on the overlay or on the site VLAN. When an edge device loses the overlay adjacency to another edge device, the first edge device immediately triggers a hello message with this list updated to exclude that edge device. If all edge devices in the site update the list, the edge device might have failed or is no longer reachable. All edge devices generate this list, but the list might not be used to determine the failure. At first, dual adjacency is used during AED election and transitions.

BFD over an SVI is used to detect neighbor failures within a site. Both site BFD and overlay route tracking must be configured for fast device failure detection within the site.

## VLAN Failure

If an AED loses forwarding readiness for a VLAN, it generates a VLAN status update to disable both forwarding readiness and AED status bits. The backup AED can assume authority as soon as it receives the status update from the AED. The AED server-driven transition mechanism handles the failures of individual VLANs. The AED server processes the VLAN status update, runs the AED election, and generates a result that includes only the new AED value in its AED message. The backup AED then takes over as AED without waiting for any edge device's response.

## Graceful Insertion

### AED Server Insertion

When an AED server is elected or becomes active, it waits to become updated with the VLAN status of all the edge devices in the site. The AED server does this by synchronizing the VLAN AED database with the edge devices in the site. It then schedules and runs the first AED election for all the VLANs in the VLAN AED database and starts generating VLAN AED requests. These requests might reflect the current and backup AED state of the various VLANs, or they might affect a change based on VLAN status updates.

### Backup AED Server Insertion

The backup AED server runs in cold standby mode and becomes active only after the active AED server fails. Before it can run AED elections, the backup AED server must ensure that it is up to date with the AED and backup AED status of all edge devices in the site. The backup AED server does this by synchronizing the VLAN AED database with the edge devices in the site. It then runs the AED election for all VLANs and starts generating requests. During this period, the preassigned backups handle any failures of the active AEDs. However, double failures or VLAN reassignments are not handled.

### Edge Device Insertion

When an edge device is inserted or reinserted in a site, it must ensure that it has received the latest version of the AED computation result from the AED server, including any pending events that the AED server might be in the process of servicing. The edge device performs an explicit synchronization with the AED server to get the latest version of the VLAN AED results. It then generates the first VLAN status update and waits for the AED server to assign it VLANs in steady state.

## Graceful Shutdown

The fast convergence enhancements ensure that edge devices that shut down proactively inform neighbors by using the fast failure notification system. The grace period is used when a VDC is shut down.

## QoS and OTV

By default, OTV copies the QoS DSCP or 802.1p values from the original packet to the IP header of the OTV IP packet to propagate the QoS DSCP value across the overlay network. This action ensures that the encapsulated IP packet receives the same differentiated QoS policy that the original packet received before it was extended across the overlay network.

To override this default behavior, you must apply a QoS policy to the extended VLAN. This policy can set the OTV IP encapsulation DSCP values based on a chosen match criteria. At the remote site, OTV removes this VLAN QoS policy to maintain the QoS policy for the original packet.

**Note**

- For 802.1Q tagged IP traffic, the outer DSCP is derived from the original COS value during encapsulation. The original COS and DSCP values are preserved during decapsulation.
- For untagged IP traffic, the outer DSCP is derived from the original DSCP value during encapsulation. The original DSCP value is preserved during decapsulation.
- For non-IP packets, the DSCP is derived from the original COS value (COS is implicit 0 for untagged traffic) during encapsulation. The original COS value is preserved during decapsulation.

## Virtualization Support

The software supports multiple instances of OTV that run on the same system. OTV supports virtual routing and forwarding instances (VRFs) on the physical interface that is associated with the overlay interface. VRFs exist within virtual device contexts (VDCs). By default, the software places you in the default VDC and default VRF unless you specifically configure another VDC and VRF.

Only Layer 3 physical interfaces (and subinterfaces) or Layer 3 port channel interfaces (and subinterfaces) can be configured as join interfaces in Cisco NX-OS Release 5.0(3).

## High Availability and ISSU

OTV supports stateful restarts and stateful switchovers. A stateful restart occurs when the OTV process fails and is restarted. A stateful switchover occurs when the active supervisor switches to the standby supervisor. The software applies the run-time configuration after the switchover.

Any upgrade from an image that is earlier than Cisco NX-OS 5.2(1) to an image that is Cisco NX-OS 5.2(1) or later in an OTV network is disruptive. A software image upgrade from Cisco NX-OS 5.2(1) or later to Cisco NX-OS 6.0 or 6.1 trains is not disruptive.

Any upgrade from an image that is earlier than Cisco NX-OS Release 6.2(2) to an image that is Cisco NX-OS Release 6.2(2) or later in an OTV network is disruptive. When you upgrade from any previous release, the OTV overlay needs to be shut down for ISSU to operate.

You must upgrade all edge devices in the site and configure the site identifier on all edge devices in the site before traffic is restored. You can prepare OTV for ISSU in a dual-homed site to minimize this disruption. An edge device with an older Cisco NX-OS release in the same site can cause traffic loops. You should upgrade all edge devices in the site during the same upgrade window. You do not need to upgrade edge devices in other sites because OTV interoperates between sites with different Cisco NX-OS versions.

## OTV Tunnel Depolarization with IP Pools

By default, OTV uses secondary IP addresses for route depolarization. If you have two edge devices in an overlay network and each edge device is configured with two IP addresses, then four different IP header values are supported for forwarding unicast traffic between the edge devices. You must configure secondary IP addresses on the existing join interface to use route depolarization for this overlay network. Secondary IP addresses can be selected from the same subnet as the primary IP address. You do not need to configure multiple overlay networks between the same edge devices. Use the **ip address ip-address mask secondary** command to assign a secondary IP address.



On some overlay networks, secondary IP addresses on the join interface might be reserved for a different application. In this scenario, you must disable route depolarization for an entire system and to signal the lack of support for the corresponding tunnels to remote overlay members.

For route depolarization, OTV gleans its local source IP addresses from the local interface and the remote IP addresses through Intermediate-System-to-Intermediate-System (IS-IS). OTV creates multiple unicast tunnels and any one of these tunnels is used for output. Through route depolarization, you can load balance traffic to these tunnels. Route depolarization programs forwarding to point to a group of all available tunnels and modifies the forwarding infrastructure to load balance based on the actual IP packet. This feature enables load balancing based on both source and destination MAC addresses, source and destination IP addresses, or on any other criteria available to the forwarding hardware.

By default, route depolarization is enabled. Use the **otv depolarization disable** command to disable the route depolarization feature. OTV displays the secondary IP addresses that are used by the overlay interfaces and adjacencies.

#### Related Topics

[Disabling Tunnel Depolarization with IP Pools](#), on page 62

## OTV UDP Encapsulation

The OTV UDP header encapsulation mode is introduced in the Nexus 7000 series (7000 and 7700) devices having F3 or M3 line cards and the NX-OS 7.2.0 software version. In this version, the forwarding engine for control plane and data plane packets supports UDP encapsulation over IP over Ethernet. The control and data paths will use UDP headers for the multicast and unicast core routing. The IANA assigned UDP and TCP port number for OTV is port 8472. The header format aligns bit by bit with the header format used for the VXLAN header defined in IETF RFC 7348.

UDP encapsulation helps utilize more links in the core network as the UDP source port is varied automatically.

By default, the encapsulation format is MPLS-GRE. You can configure the OTV encapsulation format as UDP using the **otv encapsulation-format ip udp** command.



---

**Note** Only Nexus 7000 series devices having F3 or M3 line cards support OTV UDP header encapsulation mode. OTV sites across a network should have the same encapsulation format configured.

---

## Prerequisites for OTV

OTV has the following prerequisites:

- Globally enable the OTV feature.
- Enable IGMPv3 on the join interfaces.
- Ensure connectivity for the VLANs to be extended to the OTV edge device.

#### Related Topics

[Enabling the OTV Feature](#), on page 17

[Extended VLANs and VLAN Interfaces](#), on page 35

## Guidelines and Limitations for OTV

OTV has the following configuration guidelines and limitations:

- When the OTV VDC and the MPLS VDC share the same instance of the M2 forwarding engine (FE), there is a chance for traffic blackholing. The blackholing is because of the MPLS label in MPLS VDC overlap with the MPLS label, which is used to encode the OTV extended VLAN ID (OTV MPLS label = VLAN ID + 32) in the OTV VDC.

This traffic blackholing problem can be avoided by the following methods:

- You need to allocate the interfaces on the same M2 FE in such a way that the interfaces are not shared between multiple VDCs that utilize the MPLS.

For N7K-M224XP-23L (24-port 10GE): ports 1 to 12 are served by FE 0, and ports 13 to 24 are served by FE 1.

For N7K-M206FQ-23L (6-port 10/40GE): ports 1 to 3 are served by FE 0, and ports 4 to 6 are served by FE 1.

- Configure the **mpls label range**<lowest> <highest> command in the MPLS VDC to exclude all labels that can be used for OTV VLAN transport (top of the range is 4094 + 32 = 4196) from the dynamic allocation. For example: **mpls label range**4127 1028093




---

**Note** You need to reload the MPLS VDC to reallocate the existing labels within this range.

---

- If the same device serves as the default gateway in a VLAN interface and the OTV edge device for the VLANs being extended, configure OTV on a device (VDC or switch) that is separate from the VLAN interfaces (SVIs).
- Cisco Nexus 7000 Series Switches does not support OTV with VXLAN (VNI) feature on F3 line cards.
- The site VLAN must not be extended into the OTV. This configuration is not supported and this helps to avoid unexpected results.
- When possible, we recommend that you use a separate nondefault VDC for OTV to allow for better manageability and maintenance.
- An overlay interface will only be in an up state if the overlay interface configuration is complete and enabled (**no shutdown**). The join interface has to be in an up state.
- Configure the join interface and all Layer 3 interfaces that face the IP core between the OTV edge devices with the highest maximum transmission unit (MTU) size supported by the IP core. OTV sets the Don't Fragment (DF) bit in the IP header for all OTV control and data packets so the core cannot fragment these packets.
- Only one join interface can be specified per overlay. You can decide to use one of the following methods:
  - Configure a single join interface, which is shared across multiple overlays.
  - Configure a different join interface for each overlay, which increases the OTV reliability.

For a higher resiliency, you can use a port channel, but it is not mandatory. There are no requirements for 1 Gigabit Ethernet versus 10 Gigabit Ethernet or dedicated versus shared mode.

- If your network includes a Cisco Nexus 1000V switch, ensure that switch is running 4.0(4)SV1(3) or later releases. Otherwise, disable Address Resolution Protocol (ARP) and Neighbor Discovery (ND) suppression for OTV.
- The transport network must support PIM sparse mode (ASM) or PIM-Bidir multicast traffic.
- OTV is compatible with a transport network configured only for IPv4. IPv6 is not supported.
- Do not enable PIM on the join interface.
- ERSPAN ACLs are not supported for use with OTV.
- Ensure the site identifier is configured and is the same for all edge devices on a site. OTV brings down all overlays when a mismatched site identifier is detected from a neighbor edge device and generates a system message.
- Any upgrade from an image that is earlier than Cisco NX-OS Release 5.2(1) to an image that is Cisco NX-OS Release 5.2(1) or later in an OTV network is disruptive. A software image upgrade from Cisco NX-OS Release 5.2(1) or later to Cisco NX-OS Release 6.0(1) is not disruptive.
- Any upgrade from an image that is earlier than Cisco NX-OS Release 6.2(2) to an image that is Cisco NX-OS Release 6.2(2) or later in an OTV network is disruptive. When you upgrade from any previous release, the OTV overlay needs to be shut down for ISSU to operate.
- You must upgrade all edge devices in the site and configure the site identifier on all edge devices in the site before traffic is restored. An edge device with an older Cisco NX-OS release in the same site can cause traffic loops. You should upgrade all edge devices in the site during the same upgrade window. You do not need to upgrade edge devices in other sites because OTV interoperates between sites with different Cisco NX-OS versions.
- Beginning with Cisco NX-OS Release 6.2, OTV supports the coexistence of F1 or F2e Series modules with M1 or M2 Series modules in the same VDC.
- For OTV fast convergence, remote unicast MAC addresses are installed in the OTV Routing Information Base (ORIB), even on non-AED VLANs.
- For OTV fast convergence, even non-AED OTV devices create a delivery source, delivery group (DS,DG) mapping for local multicast sources and send a join request to remote sources if local receivers are available. As a result, there are two remote data groups instead of one for a particular VLAN, source, group (V,S,G) entry.
- One primary IP address and no more than three secondary IP addresses are supported for OTV tunnel depolarization.
- F3 Series modules do not support the VLAN translation and traffic depolarization features in Cisco NX-OS Release 6.2(6).
- F3 Series modules support the OTV traffic depolarization feature in Cisco NX-OS Release 6.2(8).
- F2 Series modules in a specific VDC do not support OTV. F2e modules work only as internal interfaces in an OTV VDC.
- F3 Series modules in an OTV VDC should not have the VLAN mode configured as Fabricpath.

- F3 Series modules do not support data-group configurations for subnets larger than /27, in Cisco NX-OS Releases 6.2(14) / 7.2(x) and earlier. Starting from Release 6.2(16) / 7.3(0), the largest subnet mask supported is /24.
- NXOS does not support using FEX ports for OTV site or core facing interfaces.
- Beginning with Cisco NX-OS Release 7.3(0)DX(1), M3 Series modules are supported.
- The OTV VLAN mapping feature is not supported on the Cisco M3 Series and F3 Series modules, as explained in this chapter (using the **otv vlan mapping** command). In order to have VLAN translation on OTV devices using F3 or M3 line cards, you should use per-port VLAN translation on the OTV edge device internal interface (L2 trunk port), as described in the [Configuring OTV VLAN Mapping using VLAN Translation on a Trunk Port](#) document.

### Related Topics

[Creating an Overlay Interface](#), on page 18

[Configuring the Multicast Group Address](#), on page 19

[Assigning a Physical Interface to the Overlay Interface](#), on page 20

[Extended VLANs and VLAN Interfaces](#), on page 35

## Guidelines for OTV Multicast

OTV has the following guidelines for multicast configuration:

- OTV does not require Protocol Independent Multicast (PIM) to be configured on an edge device. If you configure PIM on the edge device, ensure that the rendezvous point (RP) is also configured on the edge device. The reverse-path forwarding (RPF) interface for (\*.PG) should be join interface.
- Do not configure PIM on a join interface of the edge device.
- You should configure IGMP version 3 on both sides of the join interface link. The OTV edge devices send IGMP (S,G) joins to the edge devices in other sites in the same VPN. If you must configure IGMPv2, you must configure the last-hop router to do an ssm-translate, and the data-group range for the overlay interface must be SSM.
- You can directly connect edge devices in different sites.
- If there is no router in the site, you must configure the **ip igmp snooping querier** command in VLAN configuration mode on the switch.
- IGMP snooping for VLANs extended over the overlay network is enabled by default and should not be disabled. IGMP reports that are originated in the site are not sent across the core. Enough multicast state is built in the edge devices and core routers so that traffic can be sent from the source in the source site to a destination in the destination site.
- You do not need to configure a unicast routing protocol on join interfaces, although in most situations, one will be configured.
- You must disable optimized multicast forwarding (OMF) in IGMP snooping in OTV edge devices for IPv6 unicast or multicast traffic to flow across an OTV overlay network.
- The IGMP snooping timer needs to be set to four (using the **ip igmp snooping max-gq-miss 4** command) on all L2 switches in a site that runs OTV. If there is an AED failover and the snooping timer is set to

the default of three, snooped groups on the aggregation switches may prematurely expire. This may delay multicast convergence.

- When you assign an IP address to a loopback interface for Anycast RP configuration on an OTV (edge) device, ensure that you do not use the same IP address as the multicast source IP address for the device.

## Default Settings for OTV

This table lists the default settings for OTV parameters.

**Table 4: Default OTV Parameter Settings**

Parameters	Default
OTV feature	Disabled
Advertised VLANs	None
ARP and ND suppression	Enabled
Graceful restart	Enabled
Site VLAN	1
Site identifier	0x0
IS-IS overlay hello interval	20 seconds (Cisco NX-OS Release 6.2 or later) 4 seconds (Cisco NX-OS Release 5.2 through Cisco NX-OS Release 6.1) 10 seconds (Cisco NX-OS releases prior to 5.2)
IS-IS overlay hello multiplier	3
IS-IS site hello interval	3 seconds (Cisco NX-OS Release 6.2 or later) 1 second (Cisco NX-OS releases prior to 6.2)
IS-IS site hello multiplier	20 (Cisco NX-OS Release 6.2 or later) 10 (Cisco NX-OS releases prior to 6.2)
IS-IS CSNP interval	10 seconds
IS-IS LSP interval	33 milliseconds
Overlay route tracking	Disabled

Parameters	Default
Site BFD	Disabled
Tunnel depolarization with IP pools	Enabled

## Configuring Advanced OTV Features

This section describes the tasks for configuring advanced OTV features.



**Note** If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

## Configuration Modes

The following sections show how to enter each of the configuration modes. From a mode, you can enter the question mark (?) command to display the commands available in that mode.

### Interface Configuration Mode Example

The following example shows how to enter the overlay interface configuration mode:

```
switch# configure terminal
switch(config)# interface overlay 2
switch(config-if-overlay)#
```

### OTV IS-IS VPN Configuration Mode Example

The following example shows how to enter OTV IS-IS VPN configuration mode:

```
switch# configure terminal
switch(config)# otv-isis default
switch(config-router)# vpn overlay 2
switch(config-router-vrf)#
```

## Configuring Authentication for Edge Devices

You can configure authentication for the OTV control-plane protocol hello messages. OTV use hello authentication to authenticate a remote site before OTV creates an adjacency to that remote site. Each overlay network uses a unique authentication key. An edge device only creates an adjacency with a remote site that shares the same authentication key and authentication method.

OTV supports the following authentication methods:

- Clear text

- Message Digest (MD5) authentication

**Before you begin**

- Enable the OTV feature.

**SUMMARY STEPS**

1. **configure terminal**
2. **interface overlay** *interface*
3. **otv isis authentication-check**
4. **otv isis authentication-type** {cleartext | md5}
5. **otv isis authentication keychain** *keychain-name*
6. (Optional) **show otv overlay** [*interface*]
7. (Optional) **copy running-config startup-config**

**DETAILED STEPS**

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
<b>Step 2</b>	<b>interface overlay</b> <i>interface</i>  <b>Example:</b> switch(config)# interface overlay 1 switch(config-if-overlay)#	Creates an OTV overlay interface and enters interface configuration mode.
<b>Step 3</b>	Required: <b>otv isis authentication-check</b>  <b>Example:</b> switch(config-if-overlay)# otv isis authentication-check	Enables authentication of hello messages between OTV edge devices. The default is enabled.
<b>Step 4</b>	Required: <b>otv isis authentication-type</b> {cleartext   md5}  <b>Example:</b> switch(config-if-overlay)# otv isis authentication-type md5	Configures the authentication method.
<b>Step 5</b>	Required: <b>otv isis authentication keychain</b> <i>keychain-name</i>  <b>Example:</b> switch(config-if-overlay)# otv isis authentication keychain OTVKeys	Configures the authentication keychain for edge device authentication. The <i>keychain-name</i> can be any case-sensitive alphanumeric string up to 16 characters.  See the <i>Cisco Nexus 7000 Series NX-OS Security Configuration Guide</i> for information about key chains.
<b>Step 6</b>	(Optional) <b>show otv overlay</b> [ <i>interface</i> ]  <b>Example:</b>	Displays the OTV overlay interface configuration.

	Command or Action	Purpose
	<code>switch(config-if-overlay)# show otv overlay 1</code>	
<b>Step 7</b>	(Optional) <b>copy running-config startup-config</b> <b>Example:</b> <pre>switch(config-if-overlay)# copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.

**Related Topics**

[Configuring OTV PDU Authentication](#), on page 48

## Configuring OTV PDU Authentication

You can configure OTV to authenticate all incoming OTV control-plane protocol data units (PDUs). OTV supports the following authentication methods:

- Clear text
- Message Digest (MD5) authentication




---

**Note** OTV control-plane protocol hello authentication is configured separately.

---

**Before you begin**

Enable the OTV feature.

**SUMMARY STEPS**

1. **configure terminal**
2. **otv-isis default**
3. **vpn *overlay-name***
4. **authentication-check**
5. **authentication-type {cleartext | md5}**
6. **authentication keychain *keychain-name***
7. (Optional) **show otv isis hostname vpn [*overlay-name* | all]**
8. (Optional) **copy running-config startup-config**

**DETAILED STEPS**

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.



	Command or Action	Purpose
<b>Step 2</b>	<b>otv-isis default</b> <b>Example:</b> <pre>switch(config)# otv-isis default switch(config-router)#</pre>	Enters OTV router configuration mode.
<b>Step 3</b>	<b>vpn overlay-name</b> <b>Example:</b> <pre>switch(config-router)# vpn overlay 2 switch(config-router-vrf)#</pre>	Enters OTV virtual private network (VPN) configuration mode. The <i>overlay-name</i> should match with the overlay interface.
<b>Step 4</b>	Required: <b>authentication-check</b> <b>Example:</b> <pre>switch(config-router-vrf)# authentication-check</pre>	Enables authentication of OTV PDUs. The default is enabled.
<b>Step 5</b>	Required: <b>authentication-type {cleartext   md5}</b> <b>Example:</b> <pre>switch(config-router-vrf)# authentication-type md5</pre>	Configures the authentication method.
<b>Step 6</b>	Required: <b>authentication keychain keychain-name</b> <b>Example:</b> <pre>switch(config-router-vrf)# authentication keychain OTVKeys</pre>	Configures the authentication keychain for PDU authentication. The <i>keychain-name</i> can be any case-sensitive, alphanumeric string up to 16 characters. For more information about key chains, see the <i>Cisco Nexus 7000 Series NX-OS Security Configuration Guide</i> .
<b>Step 7</b>	(Optional) <b>show otv isis hostname vpn [overlay-name   all]</b> <b>Example:</b> <pre>switch(config-router-vrf)# show otv isis hostname vpn Marketing</pre>	Displays the OTV VPN configuration. The <i>overlay-name</i> can be any case-sensitive, alphanumeric string up to 32 characters.
<b>Step 8</b>	(Optional) <b>copy running-config startup-config</b> <b>Example:</b> <pre>switch(config-router-vrf)# copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.

### Related Topics

[Configuring Authentication for Edge Devices](#), on page 46

## Configuring OTV Adjacency Servers

You can either configure the local edge device to act as an adjacency server, or you can configure a remote adjacency server.

### Before you begin

Enable the OTV feature.

## SUMMARY STEPS

1. **configure terminal**
2. **interface overlay *interface***
3. (Optional) **otv adjacency-server unicast-only**
4. (Optional) **otv use-adjacency-server *primary-ip-address* [*secondary-ip-address*] unicast-only**
5. (Optional) **show otv adjacency [overlay *if-number* | vpn *vpn-name*] [detail]**
6. (Optional) **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>interface overlay <i>interface</i></b> <b>Example:</b> <pre>switch(config)# interface overlay 1 switch(config-if-overlay)#</pre>	Creates an OTV overlay interface and enters interface configuration mode.
<b>Step 3</b>	(Optional) <b>otv adjacency-server unicast-only</b> <b>Example:</b> <pre>switch(config-if-overlay)# otv adjacency-server unicast-only</pre>	Configures the local edge device to act as an adjacency server.  <b>Note</b> If the two overlay interface numbers do not match between the two OTV sites configured to use unicast adjacency servers, the OTV adjacencies will not form and OTV will not come up until the overlay interface numbers are changed to match.
<b>Step 4</b>	(Optional) <b>otv use-adjacency-server <i>primary-ip-address</i> [<i>secondary-ip-address</i>] unicast-only</b> <b>Example:</b> <pre>switch(config-if-overlay)# otv use-adjacency-server 192.0.2.1 unicast-only</pre>	Configures the local edge device to use a remote adjacency server. The IP address format is in dotted decimal notation. The <i>secondary-ip-address</i> argument is the IP address of the backup adjacency server, if you have configured a backup adjacency server.
<b>Step 5</b>	(Optional) <b>show otv adjacency [overlay <i>if-number</i>   vpn <i>vpn-name</i>] [detail]</b> <b>Example:</b> <pre>switch(config-if-overlay)# show otv adjacency overlay 1</pre>	Displays the OTV adjacency information. The <i>if-number</i> range is from 0 to 65503. The <i>vpn-name</i> is any case-sensitive, alphanumeric string up to 80 characters.
<b>Step 6</b>	(Optional) <b>copy running-config startup-config</b> <b>Example:</b> <pre>switch(config-if-overlay)# copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.

## Configuring the ARP Neighbor Discovery Timeout for an Overlay

Beginning with NX-OS Release 6.1(1), you can configure how long a dynamically learned IP address and its corresponding MAC address remain in the OTV ARP and ND cache. This command applies to all IP addresses learned for this overlay regardless of whether they were learned on the overlay interface or on an associated access interface.

### SUMMARY STEPS

1. **configure terminal**
2. **interface overlay *interface***
3. **otv arp-nd timeout *seconds***
4. (Optional) **copy running-config startup-config**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
<b>Step 2</b>	<b>interface overlay <i>interface</i></b> <b>Example:</b> switch(config)# interface overlay 1 switch(config-if-overlay)#	Creates an overlay interface and enters interface configuration mode.
<b>Step 3</b>	Required: <b>otv arp-nd timeout <i>seconds</i></b> <b>Example:</b> switch(config-if-overlay)# otv arp-nd timeout 70	Configures the time, in seconds, that an entry remains in the ARP-ND cache.  The time is in seconds varying from 60 (1 minute) to 86400 (24 hours). The default timeout value is 480 seconds.  Use the <b>no</b> form of this command to disable this feature.
<b>Step 4</b>	(Optional) <b>copy running-config startup-config</b> <b>Example:</b> switch(config-if-overlay)# copy running-config startup-config	Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

### Example

This example shows how to configure the ARP Neighbor Discovery timeout for an overlay:

```
switch # configure terminal
switch(config)# interface overlay 1
switch(config-if-overlay)# otv arp-nd timeout 70
switch(config-if-overlay)# copy running-config startup-config
```

## Disabling the ARP Neighbor Discovery Cache

An ARP cache is maintained by every OTV edge device and is populated by snooping ARP replies. Initial ARP requests are broadcasted to all sites, but subsequent ARP requests are suppressed at the edge device and answered locally. OTV edge devices can reply to ARPs on behalf of remote hosts. Use the following procedure to disable this functionality.

### SUMMARY STEPS

1. **configure terminal**
2. **interface overlay *interface***
3. **no otv suppress-arp-nd**
4. (Optional) **show otv arp-nd-cache [*interface*]**
5. (Optional) **copy running-config startup-config**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
<b>Step 2</b>	<b>interface overlay <i>interface</i></b>  <b>Example:</b> switch(config)# interface overlay 1 switch(config-if-overlay)#	Creates an OTV overlay interface and enters interface configuration mode.
<b>Step 3</b>	Required: <b>no otv suppress-arp-nd</b>  <b>Example:</b> switch(config-if-overlay)# no otv suppress-arp-nd	Suppresses the sending of ARP and ND packets on an overlay network. This command supports both IPv4 and IPv6.
<b>Step 4</b>	(Optional) <b>show otv arp-nd-cache [<i>interface</i>]</b>  <b>Example:</b> switch(config-if-overlay)# show otv arp-nd-cache	Displays the Layer 2 and Layer 3 address mapping for remote MAC addresses.
<b>Step 5</b>	(Optional) <b>copy running-config startup-config</b>  <b>Example:</b> switch(config-if-overlay)# copy running-config startup-config	Copies the running configuration to the startup configuration.

## Configuring Selective Unicast Flooding

You can configure selective unicast flooding for OTV.

### Before you begin

Enable the OTV feature.

## SUMMARY STEPS

1. **configure terminal**
2. **otv flood mac *mac-address* vlan *vlan-id***
3. (Optional) **show otv mroute vlan *vlan-id* startup**
4. (Optional) **show otv route vlan *vlan-id***
5. (Optional) **show forwarding distribution otv multicast route vlan *vlan-id***
6. (Optional) **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b> <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	<b>otv flood mac <i>mac-address</i> vlan <i>vlan-id</i></b> <b>Example:</b> switch(config)# otv flood mac 0000.ffaa.0000 vlan 328	Enables selective unicast OTV flooding.
Step 3	(Optional) <b>show otv mroute vlan <i>vlan-id</i> startup</b> <b>Example:</b> switch(config)# show otv mroute vlan 328 startup	Displays the OTV multicast route information for a specific VLAN from the OTV Routing Information Base (ORIB).
Step 4	(Optional) <b>show otv route vlan <i>vlan-id</i></b> <b>Example:</b> switch(config)# show otv route vlan 328	Displays OTV Intermediate System-to-Intermediate System (IS-IS) route information from ORIB for a specific VLAN.
Step 5	(Optional) <b>show forwarding distribution otv multicast route vlan <i>vlan-id</i></b> <b>Example:</b> switch(config)# show forwarding distribution otv multicast route vlan 328	Displays Forwarding Information Base (FIB) OTV multicast route information for a specific VLAN.
Step 6	(Optional) <b>copy running-config startup-config</b> <b>Example:</b> switch# copy running-config startup-config	Copies the running configuration to the startup configuration.

## Configuring OTV VLAN Mapping

You can configure OTV VLAN mapping to allow VLANs with different VLAN IDs to communicate across sites.



**Note** The OTV VLAN mapping feature is not supported on the Cisco M3 Series and F3 Series modules. In order to have VLAN translation on OTV devices using F3 or M3 line cards, you should use per-port VLAN translation on the OTV edge device internal interface (L2 trunk port), as described in the [Configuring OTV VLAN Mapping using VLAN Translation on a Trunk Port](#) document.

### Before you begin

Enable the OTV feature.

## SUMMARY STEPS

1. **configure terminal**
2. **interface overlay** *interface-number*
3. **otv vlan mapping** [add | remove] {*vlan-range*}
4. (Optional) **show otv vlan-mapping** [overlay *interface-number*]
5. (Optional) **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
<b>Step 2</b>	<b>interface overlay</b> <i>interface-number</i> <b>Example:</b> switch(config)# interface overlay 1	Creates an OTV overlay interface and enters overlay interface configuration mode.
<b>Step 3</b>	<b>otv vlan mapping</b> [add   remove] { <i>vlan-range</i> }	Creates translation mappings of VLANs on a local site to VLANs on a remote site in an OTV network.
<b>Step 4</b>	(Optional) <b>show otv vlan-mapping</b> [overlay <i>interface-number</i> ] <b>Example:</b> switch(config-if-overlay)# show otv vlan-mapping	Displays VLAN translation mappings from a local site to a remote site.
<b>Step 5</b>	(Optional) <b>copy running-config startup-config</b> <b>Example:</b> switch# copy running-config startup-config	Copies the running configuration to the startup configuration.

## Configuring a Dedicated Broadcast-Group Address

You can configure a dedicated broadcast-group address for an OTV network.

### Before you begin

Enable the OTV feature.

### SUMMARY STEPS

1. **configure terminal**
2. **interface overlay** *interface-number*
3. **otv broadcast-group** *multicast-address*
4. (Optional) **show otv** [*overlay interface*]
5. (Optional) **copy running-config startup-config**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
<b>Step 2</b>	<b>interface overlay</b> <i>interface-number</i>  <b>Example:</b> switch(config)# interface overlay 1	Creates an OTV overlay interface and enters overlay interface configuration mode.
<b>Step 3</b>	<b>otv broadcast-group</b> <i>multicast-address</i>  <b>Example:</b> switch(config-if-overlay)# otv broadcast-group 224.1.1.10	Configures an IP multicast address as the dedicated broadcast-group address for the specified OTV network.
<b>Step 4</b>	(Optional) <b>show otv</b> [ <i>overlay interface</i> ]  <b>Example:</b> switch(config-if-overlay)# show otv	Displays the OTV overlay interface configuration.
<b>Step 5</b>	(Optional) <b>copy running-config startup-config</b>  <b>Example:</b> switch(config-if-overlay)# copy running-config startup-config	Copies the running configuration to the startup configuration.

## Configuring OTV Fast Convergence

You can enable OTV fast convergence by configuring a switched virtual interface (SVI) on an OTV site VLAN.

**Before you begin**

Enable the OTV feature.

Enable the BFD feature.

Ensure that the IP addresses of all OTV switches in a site are in the same subnet as the site VLAN SVI.

Ensure that the site VLAN is not extended on the OTV overlay.

**SUMMARY STEPS**

1. **configure terminal**
2. **feature interface-vlan**
3. **interface vlan**
4. **no ip redirects**
5. **ip address *ip-address mask***
6. **no shutdown**

**DETAILED STEPS**

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>feature interface-vlan</b> <b>Example:</b> <pre>switch(config)# feature interface-vlan</pre>	Enables the creation of VLAN interfaces.
<b>Step 3</b>	<b>interface vlan</b> <b>Example:</b> <pre>switch(config)# interface vlan 2500 switch(config-if)#</pre>	Creates an SVI and enters interface configuration mode.
<b>Step 4</b>	<b>no ip redirects</b> <b>Example:</b> <pre>switch(config-if)# no ip redirects</pre>	Disables IP redirects.
<b>Step 5</b>	<b>ip address <i>ip-address mask</i></b> <b>Example:</b> <pre>switch(config-if)# ip address 172.1.2.1 255.255.255.0</pre>	Sets a primary or secondary IP address for the interface.
<b>Step 6</b>	<b>no shutdown</b> <b>Example:</b> <pre>switch(config-if)# no shutdown</pre>	Enables the interface.



# Configuring Fast Failure Detection

You can configure fast failure detection in an OTV site VLAN.

## Before you begin

Enable the OTV feature.

Enable the BFD feature.

## SUMMARY STEPS

1. **configure terminal**
2. **otv-isis default**
3. **track-adjacency-nexthop**
4. **exit**
5. **otv site-vlan *vlan-id***
6. **otv isis bfd**
7. (Optional) **show otv isis track-adjacency-nexthop**
8. (Optional) **show bfd neighbors**
9. (Optional) **show otv isis site**
10. (Optional) **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
Step 2	<b>otv-isis default</b> <b>Example:</b> <pre>switch(config)# otv-isis default switch(config-router)#</pre>	Enters OTV router configuration mode.
Step 3	<b>track-adjacency-nexthop</b> <b>Example:</b> <pre>switch(config-router)# track-adjacency-nexthop</pre>	Enables overlay route tracking. <b>Note</b> This command tracks only the site-adjacent edge device. The site-adjacent device must be reachable only by IGP and not by any static routes or default routes.
Step 4	<b>exit</b> <b>Example:</b> <pre>switch(config-router)# exit switch(config)#</pre>	Exits OTV router configuration mode.
Step 5	<b>otv site-vlan <i>vlan-id</i></b> <b>Example:</b>	Configures a VLAN on which all local edge devices can communicate.

	Command or Action	Purpose
	<pre>switch(config)# otv site-vlan 10 switch(config-site-vlan)#</pre>	<b>Note</b> You must configure this VLAN ID on all local edge devices.
<b>Step 6</b>	<b>otv isis bfd</b> <b>Example:</b> <pre>switch(config-site-vlan)# otv isis bfd</pre>	Enables BFD on an OTV site VLAN for failure detection and notification. The OTV IS-IS instance brings down site adjacency when a BFD failure notification occurs.
<b>Step 7</b>	(Optional) <b>show otv isis track-adjacency-nexthop</b> <b>Example:</b> <pre>switch(config-site-vlan)# show otv isis track-adjacency-nexthop</pre>	Displays the OTV IS-IS next-hop adjacencies.
<b>Step 8</b>	(Optional) <b>show bfd neighbors</b> <b>Example:</b> <pre>switch(config-site-vlan)# show bfd neighbors</pre>	Displays a line-by-line listing of existing BFD adjacencies.
<b>Step 9</b>	(Optional) <b>show otv isis site</b> <b>Example:</b> <pre>switch(config-site-vlan)# show otv isis site</pre>	Displays the BFD configuration state on both local and neighboring edge devices.
<b>Step 10</b>	(Optional) <b>copy running-config startup-config</b> <b>Example:</b> <pre>switch(config-site-vlan)# copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.

## Configuring Redistribution

You can configure a route map to filter OTV updates on an overlay network. The route map can use the following match options:

### match mac-list

List of MAC addresses to match against. Only MAC addresses that match a mac-list entry are redistributed across the overlay network.

### match vlan

VLAN ID to match against. OTV redistributes the MAC routes that match this VLAN ID.

See the *Cisco Nexus 7000 Series NX-OS Unicast Routing Configuration Guide* for more information on route maps and MAC address lists.

### Before you begin

- Enable the OTV feature.

## SUMMARY STEPS

### 1. configure terminal

2. **otv-isis default**
3. **vpn overlay-name**
4. **redistribute filter route-map map-name**
5. (Optional) **show otv isis redistribute route [vpn overlay-name | summary]**
6. (Optional) **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>otv-isis default</b> <b>Example:</b> <pre>switch(config)# otv-isis default switch(config-router)#</pre>	Enters OTV router configuration mode.
<b>Step 3</b>	<b>vpn overlay-name</b> <b>Example:</b> <pre>switch(config-router)# vpn Marketing switch(config-router-vrf)#</pre>	Enters OTV virtual private network (VPN) configuration mode. The <i>overlay-name</i> can be any case-sensitive, alphanumeric string up to 32 characters.
<b>Step 4</b>	Required: <b>redistribute filter route-map map-name</b> <b>Example:</b> <pre>switch(config-router-vrf)# redistribute filter route-map otvFilter</pre>	Assigns a route map that OTV uses to filter OTV updates that are sent to remote sites. The <i>map-name</i> can be any case-sensitive, alphanumeric string up to 63 characters.
<b>Step 5</b>	(Optional) <b>show otv isis redistribute route [vpn overlay-name   summary]</b> <b>Example:</b> <pre>switch(config-router-vrf)# show otv isis redistribute route vpn Marketing</pre>	Displays the OTV VPN redistribution information. The <i>overlay-name</i> can be any case-sensitive, alphanumeric string up to 32 characters.
<b>Step 6</b>	(Optional) <b>copy running-config startup-config</b> <b>Example:</b> <pre>switch(config-router-vrf)# copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.

## Verifying Load Balancing

You can load balance overlay network traffic across different edge devices in a local site. OTV uses the site VLAN to discover all edge devices in the local site. OTV then dynamically assigns VLANs to an AED for each VLAN, based on the VLAN ID, the number of edge devices in the local site, and the system ID of the edge device. Load balancing is achieved because each edge device is authoritative for a subset of all VLANs that are transported over the overlay.

**Before you begin**

- Enable the OTV feature.

**SUMMARY STEPS**

1. **configure terminal**
2. **otv site-vlan** *vlan-id*
3. (Optional) **show otv site** [**all**] [**detail**]
4. (Optional) **show otv** [*overlay-interface*] **vlan** *vlan-id* **authoritative** [**detail**]

**DETAILED STEPS**

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
<b>Step 2</b>	<b>otv site-vlan</b> <i>vlan-id</i>  <b>Example:</b> switch(config)# otv site-vlan 10	Configures a VLAN that all local edge devices communicate on. You must configure this VLAN ID on all local edge devices. The range is from 1 to 3967 and from 4048 to 4093. The default is 1.
<b>Step 3</b>	(Optional) <b>show otv site</b> [ <b>all</b> ] [ <b>detail</b> ]  <b>Example:</b> switch(config)# show otv site	Displays all the edge devices for the local site.
<b>Step 4</b>	(Optional) <b>show otv</b> [ <i>overlay-interface</i> ] <b>vlan</b> <i>vlan-id</i> <b>authoritative</b> [ <b>detail</b> ]  <b>Example:</b> switch(config)# show otv vlan authoritative detail	Displays all the VLANs that this edge device is the AED for. Use this command on each edge device in the local site to show which is the AED for each VLAN.

**Example**

This example shows the output for the **show otv vlan authoritative detail** command:

```
switch(config)# show otv vlan authoritative detail
OTV VLAN Configuration Information
Legend: F - Forwarding B - Blocked
VLAN-ID  VlanState          Switchport/  External  Overlay
          VlanState          Forward Count Interface  Group
```

**Related Topics**

[Multihomed Sites and Load Balancing](#), on page 9

[Authoritative Edge Device](#), on page 33

[Configuring the Site VLAN and Site Identifier](#), on page 23

# Tuning OTV

You can tune parameters for the overlay routing protocol.



**Note** We recommend that only very experienced users of OTV perform these configurations.

## Before you begin

- Enable the OTV feature.

## SUMMARY STEPS

1. **configure terminal**
2. **interface overlay interface**
3. (Optional) **otv isis csnp-interval seconds**
4. (Optional) **otv isis hello-interval seconds**
5. (Optional) **otv isis hello-multiplier multiplier**
6. (Optional) **otv isis hello-padding**
7. (Optional) **otv isis lsp-interval msec**
8. (Optional) **otv isis metric metric**
9. (Optional) **otv isis priority dis-priority**
10. (Optional) **show otv isis [isis-tag] [interface interface]**
11. (Optional) **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>interface overlay interface</b> <b>Example:</b> <pre>switch(config)# interface overlay 1 switch(config-if-overlay)#</pre>	Creates an OTV overlay interface and enters interface configuration mode.
<b>Step 3</b>	(Optional) <b>otv isis csnp-interval seconds</b> <b>Example:</b> <pre>switch(config-if-overlay)# otv isis csnp-interval 100</pre>	Specifies the interval between CSNP PDUs on an interface. The <i>seconds</i> range is from 1 to 65535. The default is 10 seconds.

	Command or Action	Purpose
<b>Step 4</b>	(Optional) <b>otv isis hello-interval</b> <i>seconds</i> <b>Example:</b> switch(config-if-overlay)# otv isis hello-interval 30	Specifies the interval between hello PDUs on an interface. The <i>seconds</i> range is from 1 to 65535. The default is 10 seconds.
<b>Step 5</b>	(Optional) <b>otv isis hello-multiplier</b> <i>multiplier</i> <b>Example:</b> switch(config-if-overlay)# otv isis hello-multiplier 30	Specifies the multiplier that is used to calculate the interval within which hello PDUs must be received to keep the OTV adjacency up. The <i>multiplier</i> range is from 3 to 1000. The default is 3.
<b>Step 6</b>	(Optional) <b>otv isis hello-padding</b> <b>Example:</b> switch(config-if-overlay)# otv isis hello-padding	Pads OTV hello PDUs to the full MTU length.
<b>Step 7</b>	(Optional) <b>otv isis lsp-interval</b> <i>msec</i> <b>Example:</b> switch(config-if-overlay)# otv isis lsp-interval 30	Specifies the interval between LSP PDUs on an interface during flooding. The <i>msec</i> range is from 10 to 65535. The default is 33 milliseconds.
<b>Step 8</b>	(Optional) <b>otv isis metric</b> <i>metric</i> <b>Example:</b> switch(config-if-overlay)# otv isis metric 30	Configures the OTV metric on an interface. The <i>metric</i> range is from 1 to 16777215.
<b>Step 9</b>	(Optional) <b>otv isis priority</b> <i>dis-priority</i> <b>Example:</b> switch(config-if-overlay)# otv isis lsp-interval 30	Configures the OTV priority for DIS election on the interface. The <i>priority</i> range is from 1 to 127. The default is 64.
<b>Step 10</b>	(Optional) <b>show otv isis</b> [ <i>isis-tag</i> ] [ <b>interface</b> <i>interface</i> ] <b>Example:</b> switch(config-if-overlay)# show otv isis interface overlay 2	Displays the overlay routing protocol information for the OTV overlay interface.
<b>Step 11</b>	(Optional) <b>copy running-config startup-config</b> <b>Example:</b> switch(config-if-overlay)# copy running-config startup-config	Copies the running configuration to the startup configuration.

## Disabling Tunnel Depolarization with IP Pools

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	switch# <b>configure terminal</b>	Enters global configuration mode.

	Command or Action	Purpose
Step 2	switch(config)# <b>feature otv</b>	Enables OTV.
Step 3	switch(config)# <b>otv depolarization disable</b>	Disables route depolarization. By default, route depolarization is enabled on the device.
Step 4	(Optional) switch(config)# <b>show otv [adjacency]</b>	Displays secondary addresses and information about the adjacencies on the overlay network.
Step 5	(Optional) switch(config)# <b>show otv adjacency detail</b>	Displays information about a secondary tunnel on the overlay network.
Step 6	(Optional) switch(config)# <b>copy running-config startup-config</b>	Copies the running configuration to the startup configuration.

## Verifying the OTV Configuration

To display the OTV configuration, perform one of the following tasks:

Command	Purpose
<b>show running-configuration otv [all]</b>	Displays the running configuration for OTV.
<b>show otv overlay [interface]</b>	Displays information about overlay interfaces.
<b>show otv adjacency [detail]</b>	Displays information about the adjacencies on the overlay network.
<b>show otv [overlay interface] [vlan [vlan-range] [authoritative   detail]]</b>	Displays information about VLANs that are associated with an overlay interface.
<b>show otv isis site [database   statistics]</b>	Displays the BFD configuration state on both local and neighboring edge devices.
<b>show otv site [all]</b>	Displays information about the local site.
<b>show otv [route [interface [neighbor-address ip-address]] [vlan vlan-range] [mac-address]]</b>	Displays information about the OTV routes.
<b>show otv mroute vlan vlan-id startup</b>	Displays the OTV multicast route information for a specific VLAN from the OTV Routing Information Base (ORIB).

Command	Purpose
<code>show forwarding distribution otv multicast route vlan <i>vlan-id</i></code>	Displays Forwarding Information Base (FIB) OTV multicast route information for a specific VLAN.
<code>show otv vlan-mapping [<i>overlay interface-number</i>]</code>	Displays VLAN translation mappings from a local site to a remote site.
<code>show mac address-table</code>	Displays information about MAC addresses.
<code>show otv internal adjacency</code>	Displays information about additional tunnels on the overlay network.

## Configuration Examples

### Configuration Example for Load Balancing

#### Basic OTV Network

The following example displays how to configure load balancing on two edge devices in the same site:

```
Edge Device 1
interface ethernet 2/1
 ip address 192.0.2.1/24
 ip igmp version 3
 no shutdown

vlan 5-10

feature otv
 otv site-identifier 0018.g957.6rk0
 interface overlay 1
  otv control-group 239.1.1.1
  otv data-group 239.1.1.0/29
  otv join-interface ethernet 2/1
  otv extend-vlan 5-10
 no shutdown
```

```
Edge Device 2
interface ethernet 1/1
 ip address 192.0.2.16/24
 ip igmp version 3
 no shutdown
```

```
vlan 5-10
```



```

feature otv
otv site-identifier 0018.g957.6rk0
interface overlay 2
  otv control group 239.1.1.1
  otv data-group 239.1.1.0/29
  otv join-interface ethernet 1/1
  otv extend-vlan 5-10
  no shutdown

```

## Configuration Example for OTV Selective Unicast Flooding

The following example shows the configuration and verification of the flooding of the 0000.faa.0000 destination MAC address to all other edge devices in the OTV overlay network for VLAN 328:

```

switch# configure terminal
switch(config)# otv flood mac 0000.faa.0000 vlan 328
switch(config)# show otv mroute vlan 328 startup
switch(config)# show otv route vlan 328
switch(config)# show forwarding distribution otv multicast route vlan 328
switch(config)# show otv mroute vlan 328 startup
OTV Multicast Routing Table For Overlay1
(328, *, 255.255.255.253), metric: 0, uptime: 00:00:46, site - New entry
Outgoing interface list: (count: 1)
Overlay1, uptime: 00:00:46, otv
switch(config)# show otv route vlan 328
OTV Unicast MAC Routing Table For Overlay2
VLAN MAC-Address Metric Uptime Owner Next-hop(s)
-----
328 0000.faa.0000 0 00:00:15 static Overlay2
switch(config)# show forwarding distribution otv multicast route vlan 328
Vlan: 100, Group: 255.255.255.253, Source: 0.0.0.0
OTV Outgoing Interface List Index: 6
Reference Count: 1
Number of Outgoing Interfaces: 2
External interface:
Delivery group IP: 255.255.255.253
Delivery source IP: 0.0.0.0
Interface Index: Overlay1
External interface: Ethernet3/11
Delivery group IP: 239.1.1.1
Delivery source IP: 10.10.10.10
Interface Index: Overlay1

```

## Configuration Examples for OTV VLAN Mapping

The following example shows how to map VLANs 10, 14, 15, 16, and 18 on Site A with VLANs 20, 21, 25, 28, and 30 on Site B:

```

switch(config)# interface overlay 5
switch(config-if-overlay)# otv vlan mapping 10,14-16,18 to 20-21,25,28,30
switch(config-if-overlay)# show otv vlan-mapping
Original VLAN -> Translated VLAN
-----
10 -> 20
14 -> 21
15 -> 25
16 -> 28
18 -> 30

```

The following example shows how to overwrite the previous VLAN mapping translation configuration:

```
switch(config)# interface overlay 5
switch(config-if-overlay)# otv vlan mapping 40,41,42 to 50,51,52
switch(config-if-overlay)# show otv vlan-mapping
Original VLAN -> Translated VLAN
-----
40 -> 50
41 -> 51
42 -> 52
```

The following example shows how to add a VLAN map to an existing translation configuration:

```
switch(config)# interface overlay 5
switch(config-if-overlay)# otv vlan mapping add 43 to 53
switch(config-if-overlay)# show otv vlan-mapping
Original VLAN -> Translated VLAN
-----
40 -> 50
41 -> 51
42 -> 52
43 -> 53
```

The following example shows how to remove a VLAN map from an existing translation configuration:

```
switch(config)# interface overlay 5
switch(config-if-overlay)# otv vlan mapping remove 40 to 50
switch(config-if-overlay)# show otv vlan-mapping
Original VLAN -> Translated VLAN
-----
41 -> 51
42 -> 52
43 -> 53
```

The following example shows how to remove all VLAN translation mappings from the existing translation configuration:

```
switch(config)# interface overlay 5
switch(config-if-overlay)# no otv vlan mapping
Removing all translations
switch(config-if-overlay)# show otv vlan-mapping
Original VLAN -> Translated VLAN
-----
```

## Configuration Examples for Dedicated Data Broadcast Forwarding

The following example shows how to configure a dedicated broadcast-group address for an OTV network:

```
switch# configure terminal
switch(config)# feature otv
switch(config)# interface overlay 5
switch(config-if-overlay)# otv broadcast-group 224.2.1.0
switch(config-if-overlay)# show otv
OTV Overlay Information
Site Identifier 0000.0000.0002
Overlay interface Overlay5
VPN name : Overlay5
VPN state : UP
Extended vlans : 25-150 251-327 (Total:203)
Control group : 224.1.1.0
```

```
Data group range(s) : 232.1.0.0/24
Broadcast group : 224.2.1.0
Join interface(s) : Po21 (2.100.21.1)
Site vlan : 1000(up)
AED-Capable : Yes
Capability : Multicast-Reachable
```

The following example shows that the broadcast-group address defaults to the control-group address when the broadcast-group address configuration is removed:

```
switch# configure terminal
switch(config)# feature otv
switch(config)# interface overlay 5
switch(config-if-overlay)# no otv broadcast-group 224.2.1.0
switch(config-if-overlay)# show otv
OTV Overlay Information
Site Identifier 0000.0000.0002
Overlay interface Overlay5
VPN name : Overlay5
VPN state : UP
Extended vlans : 25-150 251-327 (Total:203)
Control group : 224.1.1.0
Data group range(s) : 232.1.0.0/24
Broadcast group : 224.1.1.0
Join interface(s) : Po21 (2.100.21.1)
Site vlan : 1000(up)
AED-Capable : Yes
Capability : Multicast-Reachable
```

## Configuration Example for OTV Fast Convergence

The following example shows how to enable OTV fast convergence by configuring an SVI on an OTV site VLAN:

```
switch# configure terminal
switch(config)# feature bfd
switch(config)# feature interface-vlan
switch(config)# interface vlan 2500
switch(config-if)# no ip redirects
switch(config-if)# ip address 172.1.2.1/24
switch(config-if)# no shutdown
```

## Configuration Example for Fast Failure Detection

The following example shows how to configure fast failure detection in an OTV site VLAN. The output of the **show** commands displays that the BFD adjacency is "Up" between switches in the same site and the BFD configuration is applied on OTV switches in the same site:

```
switch# configure terminal
switch(config)# otv-isis default
switch(config-router)# track-adjacency-nexthop
switch(config-router)# exit
switch(config)# otv site-vlan 5
switch(config-site-vlan)# otv isis bfd
switch(config-site-vlan)# show bfd neighbors
OurAddr  NeighAddr LD/RD          RH/RS Holdown(mult) State Int      Vrf
172.1.1.1 172.1.1.2 1107296329/1107296399 Up    5462(3)   Up    Vlan2500 default
switch(config-site-vlan)# show otv isis track-adjacency-nexthop
OTV-IS-IS process: default
```

```

OTV-ISIS adjs for nexthop: 10.0.1.1, VRF: default
  Hostname: 0022.557a.3040, Overlay: Overlay4
  Hostname: 0022.557a.3040, Overlay: Overlay3
  Hostname: 0022.557a.3040, Overlay: Overlay2
  Hostname: 0022.557a.3040, Overlay: Overlay1
switch(config-site-vlan)# show otv isis site
OTV-ISIS site-information for: default

Level      Metric    CSNP  Next CSNP  Hello  Multi  Next IIH
1          16777214   10   Inactive   3     20    0.292879

Level  Adjs  AdjsUp Pri  Circuit ID      Since
1      1     1    64  0022.557a.3043.01  00:15:01

BFD: Enabled [IP: 5.5.5.11]

OTV-IS-IS site adjacency local database:

SNPA          State Last Chg Hold      Fwd-state Site-ID      Version BFD
0022.557a.3043 UP      00:15:01 00:01:00 DOWN      000a.000a.000a 3      Enabled [Nbr IP:
5.5.5.12]

OTV-IS-IS Site Group Information (as in OTV SDB):

SystemID: 0022.557a.3040, Interface: site-vlan, VLAN Id: 5, VLAN: Up

Overlay      State  Next IIH  Int  Multi
Overlay1     Up     0.290956  3    20
Overlay2     Up     0.289360  3    20
Overlay3     Up     0.287777  3    20
Overlay4     Up     0.286202  3    20

Overlay      Active SG      Last CSNP          CSNP Int  Next CSNP
Overlay1     239.1.1.1     ffff.ffff.ffff.ff-ff 01:15:21  Inactive
Overlay2     239.1.1.2     ffff.ffff.ffff.ff-ff 01:15:21  Inactive
Overlay3     0.0.4.0       ffff.ffff.ffff.ff-ff 01:15:21  Inactive
Overlay4     0.0.5.0       ffff.ffff.ffff.ff-ff 01:15:21  Inactive

Neighbor SystemID: 0022.557a.3043
IPv4 site groups:
  0.0.4.0
  0.0.5.0
  239.1.1.1
  239.1.1.2

```

## Configuration Example for Disabling Tunnel Depolarization with IP Pools

The following examples show the how to disable and verify tunnel depolarization on an overlay network:

```

switch# configure terminal
switch(config)# feature otv
switch(config)# otv depolarization disable
switch(config)# exit

switch# show otv

OTV Overlay Information
Site Identifier 0000.0000.0001

```

```

Overlay interface Overlay1

VPN name           : Overlay1
VPN state          : UP
Extended vlans    : 10-11 101-102 (Total:4)
Control group     : 239.1.1.1
Data group range(s) : 232.10.10.0/28
Broadcast group   : 239.1.1.1
Join interface(s) : Eth1/13 (20.0.0.100)
  Secondary IP Addresses: 20.0.0.101
Site vlan         : 10 (up)
AED-Capable      : No (ISIS Ctrl Group Sync Pending)
Capability        : Multicast-Reachable

```

```
switch# show otv adjacency detail
```

```
Overlay Adjacency database
```

```

Overlay interface Overlay1
Hostname           System-ID      Dest Addr      Up Time  State
meN7K-1-N7K-B1    64a0.e741.84c2 20.0.0.2      00:10:24 UP

```

## Monitoring OTV

To monitor OTV, perform one of the following tasks:

Command	Purpose
<b>show otv orib clients</b>	Displays information about the ORIB clients.
<b>show otv route</b> [ <i>overlay interface</i>   <b>vlan</b> <i>vlan-id</i>   <b>vpn</b> <i>vpn-name</i> ]	Shows unicast MAC routes.
<b>show otv mroute</b> [ <i>overlay interface</i>   <b>vlan</b> <i>vlan-id</i>   <b>vpn</b> <i>vpn-name</i> ]	Displays information about multicast MAC routes.
<b>show otv statistics multicast</b> <b>vlan</b> <i>vlan-id</i>	Shows OTV statistics.
<b>show otv isis statistics</b> { <i>*</i>   <b>overlay interface</b> }	Shows statistics for the OTV control-plane protocol.
<b>show otv isis track-adjacency-next-hop</b>	Displays the OTV IS-IS next-hop adjacencies.

To clear OTV information, perform the following task:

Command	Purpose
<b>clear otv isis statistics</b> { <i>*</i>   <b>overlay interface</b> }	Clears OTV statistics.

## Additional References

This section includes additional information related to implementing OTV.

### Related Documents

Related Topic	Document Title
Cisco NX-OS licensing	<i>Cisco NX-OS Licensing Guide</i>
OTV commands	<i>Cisco Nexus 7000 Series NX-OS OTV Command Reference</i>
Configuring BFD	<i>Cisco Nexus 7000 Series NX-OS Interfaces Configuration Guide</i>
BFD commands	<i>Cisco Nexus 7000 Series NX-OS Interfaces Command Reference</i>

### Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	—

## Feature History for OTV

This table lists the release history for this feature.

**Table 5: Feature History for OTV**

Feature Name	Releases	Feature Information
OTV	7.3(0)DX(1)	Added support for M3 modules
OTV	6.2(6)	Added support for F3 Series modules.
Tunnel depolarization with IP pools	6.2(6)	Introduced this feature.
Selective unicast flooding	6.2(2)	Introduced this feature.
OTV VLAN mapping	6.2(2)	Introduced this feature.
Dedicated data broadcast forwarding	6.2(2)	Introduced this feature.
OTV fast convergence	6.2(2)	Introduced this feature.
Fast failure detection	6.2(2)	Introduced this feature.
OTV	6.2(2)	Added the <b>track-adjacency-nexthop</b> command to enable overlay route tracking.

Feature Name	Releases	Feature Information
OTV	6.2(2)	Added support for F1 and F2e Series modules.
OTV	6.2(2)	Added a reverse timer to the <b>show otv vlan</b> command output to show the time remaining for the VLANs to become active after the overlay interface is unshut.
ARP neighbor discovery timeout	6.1(1)	Introduced this feature.
OTV adjacency server	5.2(1)	Introduced this feature.
Dual site adjacency	5.2(1)	Added site identifier support for dual site adjacency.
Extended VLAN range	5.2(1)	Added support to add or remove VLANs to the extended VLAN range.
IPv6 unicast forwarding and multicast flooding	5.2(1)	Added support for IPv6 unicast forwarding and multicast flooding across the OTV overlay.
Configuration limits	5.2(1)	Enhanced the OTV scalability limits.
OTV	5.0(3)	Introduced this feature.

#### Related Topics

[OTV Adjacency Server](#), on page 32

[Configuring the Site VLAN and Site Identifier](#), on page 23

[Assigning the Extended VLAN Range](#), on page 21







## CHAPTER 5

# OTV Loopback Join Interface

This chapter describes the Overlay Transport Virtualization (OTV) Loopback Join Interface feature on Cisco NX-OS devices.

- [Finding Feature Information, on page 73](#)
- [Information About OTV Loopback Join Interface, on page 73](#)
- [Guidelines and Limitations for OTV Loopback Join Interface, on page 74](#)
- [Prerequisites for OTV Loopback Join Interface, on page 75](#)
- [How to Configure OTV Loopback Join Interface, on page 75](#)
- [Additional References for OTV Loopback Join Interface, on page 78](#)
- [Feature Information for OTV Loopback Join Interface, on page 79](#)

## Finding Feature Information

Your software release may not support all the features documented in this module. For the latest caveats and feature information, see [Bug Search Tool](#) and the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the feature information table.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to <https://cfng.cisco.com/>. An account on Cisco.com is not required.

## Information About OTV Loopback Join Interface

The Overlay Transport Virtualization (OTV) Loopback Join interface feature, for the Cisco Nexus 7000 and Nexus 7700 platforms, adds the capability of an Overlay using a loopback interface as the Join interface. The Loopback Join Interface adds a PIM-based control plane, where the Loopback interface has PIM configured and acts as a first-hop/last-hop multicast router into the multicast core. This gives the capability for the Loopback Join interface to have multiple Uplinks into the provider Multicast core.

Prior to Release 8.0(1), OTV supports only one uplink interface to connect to the core, which is an IGMP host interface. PIM cannot be enabled on this join-interface. Beginning with Release 8.0(1), PIM routing is supported on the core uplinks through the loopback interfaces. Therefore, the OTV edge device behaves as a first hop or last hop multicast router towards the core device. This enables multiple core uplinks to be operational concurrently for OTV traffic. The PIM Routing support on uplinks utilizes the dynamic unicast routing-based convergence on the core network topology changes. This feature facilitates support for a loopback interface for sourcing OTV traffic; and therefore, the core physical topology changes does not impact Overlay states,

negating the control plane churn for OTV databases. PIM on OTV supports the loopback join interface loopback configuration under Overlay mode, similar to the existing join interface. You must configure PIM in Sparse mode on the loopback interface to use the interface for transmitting and receiving OTV traffic.

The loopback join-interface is used to facilitate the following:

- to source the OTV traffic from the edge device into the core device.
- to source multicast traffic into the core device, in order to receive OTV traffic from the core device.

The loopback will be operational irrespective of the physical network topology changes.




---

**Note** A physical Layer 3 interface cannot be used with the PIM method as an OTV join interface.

---

The same loopback can be used by multiple Overlays to source their traffic. For a given Overlay, if the join interface changes to a physical interface, Ethernet, then the behavior for that Overlay will revert to the older IGMP-host model.

## Guidelines and Limitations for OTV Loopback Join Interface

### Guidelines for OTV Loopback Join Interface

Loopback Join Interface has the following configuration guidelines:

- For optimal configuration, ensure that you use the multiple uplink interfaces.
- If all the uplink interfaces are down, the OTV connectivity to the core will be broken. You must ensure that the connection to the core is operational always.
- If the loopback join interface configuration is modified, all the OTV overlay states will be altered, which impacts the traffic.

### Limitations for OTV Loopback Join Interface

Loopback Join Interface has the following configuration limitations:

- This feature is available only on the Nexus 70xx Series and Nexus 77xx Series Switches.
- Unicast and Adjacency Server features are not supported on Loopback Join Interface.
- PIM bidirectional mode is not supported for loopback join interface for Release 8.0(1).
- Loopback join interface IP address cannot be the same as AnyCast-Rp IP address.
- If two OTV overlays are configured on the same Layer 3 join interface and packet flow is enabled, IPv6 packets will loop between the OTV overlay interfaces. This is applicable to scenarios in which the OTV overlays are stitched to VXLAN overlays.

# Prerequisites for OTV Loopback Join Interface

Loopback Join Interface has the following prerequisites:

- The transport network must support the Protocol Independent Multicast (PIM) sparse mode (Any Source Multicast [ASM]) for the provider multicast group and Source Specific Multicast (SSM) for the delivery group.

## How to Configure OTV Loopback Join Interface

### Configuring Uplink Interfaces

To configure uplink interfaces, perform the steps below.

---

**Step 1** Enter global configuration mode.

```
switch# configure terminal
```

**Step 2** Create an uplink interface and enter interface configuration mode.

```
switch(config)# interface interface_type slot/port
```

**Step 3** Configure the uplink interface.

```
switch(config-if)# ip address ip_address
```

**Step 4** Add the interface to the OSPFv2 instance and area.

```
switch(config-if)# ip router ospf instance-tag area area-id
```

**Step 5** Enable PIM sparse mode on loopback interface and on the uplink Layer3 interface. The default is disabled.

```
switch(config-if)# ip pim sparse-mode
```

**Note** You must configure PIM in sparse-mode on the uplink Layer3 interfaces, to use it for transmitting and receiving OTV traffic.

**Step 6** Enable the interface.

```
switch(config-if)# no shutdown
```

---

#### Example: Configuring Uplink Interfaces

This example shows a running configuration, followed by a verification command that displays the Cisco Uplink Interfaces configuration details. Replace the *placeholders* with relevant values for your setup.

```
configure terminal
feature pim
```

```

interface Ethernet1/2
 ip address 2.2.2.2/24
 ip router ospf 100 area 0.0.0.0
 ip pim sparse-mode
 no shutdown

interface Ethernet1/3
 ip address 5.5.5.2/24
 ip router ospf 100 area 0.0.0.0
 ip pim sparse-mode
 no shutdown

```

## Configuring Loopback Interface

To configure loopback interface, perform the steps below.

### Before you begin

By default, the OTV feature is disabled on the device. You must explicitly enable the OTV feature to access the configuration and verification commands.

---

**Step 1** Enter global configuration mode.

switch# **configure terminal**

**Step 2** Create a loopback interface and enter interface configuration mode.

switch(config)# **interface** *loopback\_interface*

**Step 3** Configure the loopback interface.

switch(config-if)# **ip address** *ip\_address*

**Step 4** Add the interface to the OSPFv2 instance and area.

switch(config-if)# **ip router ospf** *instance-tag* **area** *area-id*

**Step 5** Enable PIM sparse mode on loopback interface and on the uplink Layer3 interface. The default is disabled.

switch(config-if)# **ip pim sparse-mode**

**Note** You must configure PIM in sparse-mode on the uplink Layer3 interface, to use it for transmitting and receiving OTV traffic.

**Step 6** Enable the interface.

switch(config-if)# **no shutdown**

---

### Example: Configuring Loopback Interface

This example shows a running configuration, followed by a verification command that displays the Cisco Loopback interface configuration details. Replace the *placeholders* with relevant values for your setup.

```
configure terminal
feature pim

interface loopback1
 ip address 10.10.10.2/32
 ip router ospf 100 area 0.0.0.0
 ip pim sparse-mode
```

## Configuring Interface Overlay

To configure interface overlay, perform the steps below.

### Before you begin

By default, the OTV feature is disabled on the device. You must explicitly enable the OTV feature to access the configuration and verification commands.

- 
- Step 1** Enter global configuration mode.
- ```
switch# configure terminal
```
- Step 2** Enable OTV.
- ```
switch(config)# feature otv
```
- Step 3** Create an OTV overlay interface and enter interface configuration mode. The range is from 0 to 65535.
- ```
switch(config)# interface overlay interface_number
```
- Step 4** Join the OTV overlay interface with a loopback interface.
- ```
switch(config-if)# otv join-interface loopback1_interface
```
- Step 5** Configure a multicast group address for the OTV control plane for this OTV overlay network.
- ```
switch(config-if)# otv control-group multicast-address
```
- Step 6** Configure one or more ranges of local IPv4 multicast group prefixes used for multicast data traffic.
- ```
switch(config-if)# otv data-group multicast-address/mask
```
- Enable SSM for the groups by using the `ip pim ssm` command in global configuration mode.
  - Use SSM multicast groups `232.0.0/8`.
  - The multicast group address is an IPv4 address in dotted decimal notation.
  - A subnet mask is used to indicate ranges of addresses.
  - You can define up to 8 data-group ranges.

**Step 7** Extend the OTV Overlay to the VLAN interface, use the following command.

```
switch(config-if)# otv extend-vlan range
```

**Step 8** Enable the interface.

```
switch(config-if)# no shutdown
```

### Example: Configuring OTV Loopback Join Interface

This example shows a running configuration, followed by a verification command that displays the Cisco OTV Loopback Join Interface configuration details. Replace the *placeholders* with relevant values for your setup.

```
configure terminal
feature otv
Interface Overlay config:
interface Overlay1
  otv join-interface loopback1
  otv control-group 224.1.1.1
  otv data-group 232.1.1.0/24
  otv extend-vlan 201-205
  no shutdown

switch(config)# show otv overlay1
VPN name : Overlay1
VPN state : UP
Extended vlans : 200 (Total:1)
Control group : 224.1.1.1
Data group range(s) : 232.0.0.1/24
Broadcast group : 224.0.0.1
Join interface(s) : Lo1 (10.10.10.2)
Site vlan : 1 (up)
AED-Capable : Yes
Capability : Multicast-Reachable
```

## Additional References for OTV Loopback Join Interface

### Related Documents

Related Topic	Document Title
command syntax	<i>Cisco Nexus 7000 Series Command Reference</i>

**MIBs**

MIB	MIBs Link
<ul style="list-style-type: none"> <li>• <b>CRCMB</b></li> </ul>	<p>To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL:</p> <p><a href="http://www.cisco.com/go/mibs">http://www.cisco.com/go/mibs</a></p>

**Technical Assistance**

Description	Link
<p>The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.</p> <p>To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.</p> <p>Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.</p>	<p><a href="http://www.cisco.com/cisco/web/support/index.html">http://www.cisco.com/cisco/web/support/index.html</a></p>

## Feature Information for OTV Loopback Join Interface

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to [www.cisco.com/go/cfn](http://www.cisco.com/go/cfn). An account on Cisco.com is not required.

**Table 6: Feature Information for OTV Loopback Join Interface**

Feature Name	Releases	Feature Information
OTV Loopback Join Interface	8.0(1)	<p>The Overlay Transport Virtualization (OTV) Loopback Join interface feature adds the capability of an Overlay using a loopback interface as the Join interface. Loopback Join Interface adds a PIM-based control plane, where the Loopback interface has PIM configured and acts as a first-hop/last-hop multicast router into the multicast core.</p> <p>The following commands were modified by this feature: <b>otv join-interface</b> command has been expanded to allow for 'loopbackx' under overlay configuration.</p>







## CHAPTER 6

# Configuring PVLAN over OTV

---


This chapter describes the Configuring PVLAN over OTV feature on Cisco NX-OS devices.

- [Information About Configuring PVLAN over OTV, on page 81](#)
- [Prerequisites for Configuring PVLAN over OTV, on page 83](#)
- [Default Settings for PVLAN over OTV, on page 83](#)
- [Guidelines and Limitations for PVLAN over OTV, on page 83](#)
- [Configuring PVLAN over OTV, on page 83](#)
- [Verifying Configuring PVLAN over OTV, on page 84](#)
- [Feature Information for Configuring PVLAN over OTV, on page 85](#)

## Information About Configuring PVLAN over OTV

The private VLAN (PVLAN) partitions the Layer 2 Ethernet broadcast domain of a VLAN into subdomains, allowing you to isolate the ports on the switch from each other. A subdomain consists of a primary VLAN and one or more secondary VLANs (see the following figure). All VLANs in a PVLAN domain share the same primary VLAN. For more information about PVLANS, see *Configuring Private VLANs Using NX-OS* chapter in *Cisco Nexus 7000 Series NX-OS Layer 2 Switching Configuration Guide*.

Figure 8: Private VLAN Domain

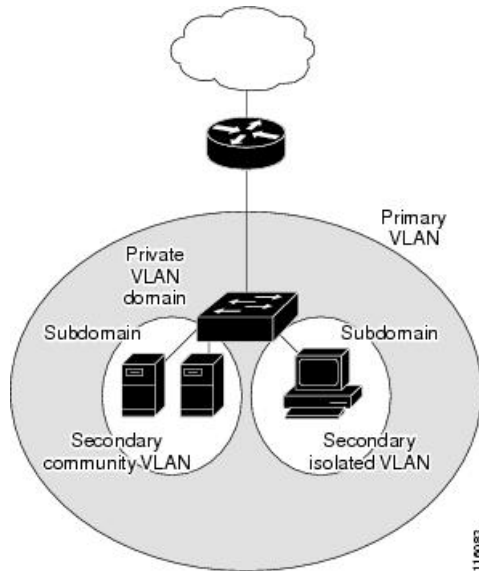

Beginning from Release 8.2(1), Cisco Nexus 7000 Series Switches support Private VLAN (PVLAN) extended over the OTV overlay. The transmission occurs in a Layer2 frame attached to a Layer 3 header. Over the OTV overlay, this feature allows two VLANs to communicate based on the PVLAN association.

PVLAN provides L2 port isolation by breaking a VLAN up into sub-domains. Primary VLAN or uplink can communicate with all the Secondary VLANs in its domain. Secondary VLANs communicate to an uplink Primary (P) VLAN and then the communication between secondary VLANs themselves can be isolate or community configurations as follows:

- Isolated (I) - they only communicate with the uplink and do not communicate with other hosts on the same 2nd VLAN.
- Community (C) - ports on this VLAN can talk among themselves and the uplink.

After the OTV is configured, and PVLAN primary and secondary VLANs are configured, OTV will receive a message from the VLAN manager that describe these PVLAN configurations.

In a multi-homing configuration, OTV will split the VLANs as odd and even between the two edge devices. In the route look-up table, the VLAN of the MAC from the secondary VLAN is the primary VLAN ID.

In OTV ARP cache the MAC is associated with the original VLAN ID, and therefore OTV is aware of the VLAN type. Based on the VLAN type, OTV decides whether an ARP request should be responded.

For example:

- If an ARP request is coming from an isolated VLAN, OTV will only response if the MAC is found in its primary VLAN.
- If an ARP request is coming from a community VLAN, OTV will only response if the MAC is found on that community VLAN ID and its primary VLAN.
- If an ARP request is coming from a primary VLAN ID, OTV will response if the MAC is found on the primary VLAN ID all its secondary VLANs.

## Prerequisites for Configuring PVLAN over OTV

- PVLAN must be configured on the Datacenter Edge device and OTV overlay device.

## Default Settings for PVLAN over OTV

There are no default settings for this feature.

## Guidelines and Limitations for PVLAN over OTV

- Starting from Cisco NX-OS Release 8.4(1) this feature is supported on F4 Series modules.
- This feature is limited to Cisco Nexus 7000 Series and Nexus 7700 Series Switches, F3, F4, and M3 modules only.
- This feature is limited to 1500 PVLAN's extended (Primary and Secondary VLAN's counted).  
VLAN translation is not supported, if the VLAN ID is associated with the PVLAN feature.  
The secondary VLANs will have the same AED as that of their primary VLAN.
- OTV supports MAC movement. If a host is hopping from VLAN 1 to VLAN2, OTV ARP table will delete the old entry on VLAN1 and insert the new one on VLAN 2.  
OTV Flood MAC can be configured on primary VLANs only, and not on Secondary VLANs.  
Although flood mac is configured on primary VLAN only, the MAC will also be flooded as if it appears on secondary VLAN.

## Configuring PVLAN over OTV

To configure PVLAN over OTV perform the following steps:

- 
- Step 1** Enter the Global Configuration mode.  
switch# **configure terminal**
- Step 2** Create an overlay interface and enters interface configuration mode.  
switch(config)# **interface overlay interface**
- Step 3** Extend the primary PVLAN over this overlay interface and enable OTV advertisements for these VLANs.  
switch(config-if-overlay)# **otv extend-vlan vlan-range**
-

**Example: Configuring PVLAN over OTV**

This example shows a running configuration, followed by a verification command that displays the Cisco PVLAN over OTV configuration details. Replace the *placeholders* with relevant values for your setup.

The example shows how to configure the PVLAN over OTV, with OTV extended over VLAN ID 100, and associated to 101-103.

Configure PVLAN.

```
configure terminal
feature pvlan

vlan 100
  private-vlan primary
  private-vlan association 101-103
vlan 101
  private-vlan community
vlan 102
  private-vlan community
vlan 103
  private-vlan isolated
```

Extend primary PVLAN over the overlay to configure PVLAN over OTV.

```
configure terminal
feature otv

interface overlay 1
  otv extend-vlan 100
```

## Verifying Configuring PVLAN over OTV

Use the following commands to display PVLAN configuration information.

Command	Purpose
switch# <b>show otv vlan private-vlan</b>	Displays the association of private VLAN to the PVLAN over OTV.
switch# <b>show otv arp-nd-cache private-vlan</b>	Displays the address mapping for remote MAC addresses on the PVLAN interface
switch# <b>show otv route</b>	Displays the OTV unicast MAC routing table for the Overlay.

To view the PVLAN over OTV configuration, use the following show commands.

```
switch# show otv vlan private-vlan
```

```
OTV Extended VLANs and Edge Device State Information (* - AED)
```

Legend:

(NA) - Non AED, (VD) - Vlan Disabled, (OD) - Overlay Down  
(DH) - Delete Holddown, (HW) - HW: State Down, (NFC) - Not Forward Capable

```

VLAN      Auth. Edge Device      Vlan State      Overlay
-----
100*      N77K-2-OTV11          active          Overlay1
          Primary (101-103 (count 3))
101*      N77K-2-OTV11          active          Overlay1
          Community (100)
102*      N77K-2-OTV11          active          Overlay1
          Community (100)
103*      N77K-2-OTV11          active          Overlay1
          Isolated (100)

```

```
switch# show otv arp-nd-cache private-vlan
```

```

OTV ARP/ND L3->L2 Address Mapping Cache
Overlay Interface Overlay1
(P) - Primary PVLAN, (I) - Isolated PVLAN, (C) - Community PVLAN
VLAN      MAC Address      Layer-3 Address      Age      Expires In
101 (C)   aaaa.aaaa.aaa4   100.100.100.21      00:04:36  00:03:23
103 (I)   aaaa.aaaa.aaa5   100.100.100.21      00:03:24  00:04:35

```

```
switch# show otv route
```

```
OTV Unicast MAC Routing Table For Overlay1
```

```

VLAN      MAC-Address      Metric      Uptime      Owner      Next-hop(s)
-----
100      8c60.4fe8.2a42   1           00:08:25    site      port-channel120
100      8c60.4fe8.2a48   42          00:42:00    overlay   N77K-2-OTV21
100      aaaa.aaaa.aaa4   42          00:19:51    overlay   N77K-2-OTV21
100      aaaa.aaaa.aaa5   42          00:42:00    overlay   N77K-2-OTV21
100      aaaa.aaaa.aaaf   0           00:42:00    static    Overlay1

```

## Feature Information for Configuring PVLAN over OTV

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to [www.cisco.com/go/cfn](http://www.cisco.com/go/cfn). An account on Cisco.com is not required.

**Table 7: Feature Information for Configuring PVLAN over OTV**

Feature Name	Releases	Feature Information
Configuring PVLAN over OTV	8.4(1)	Added support for F4 Series modules.
Configuring PVLAN over OTV	8.2(1)	This feature was introduced.





## APPENDIX **A**

# Configuration Limits for OTV

---

- [Configuration Limits for OTV, on page 87](#)

## Configuration Limits for OTV

The configuration limits are documented in the *Cisco Nexus 7000 Series NX-OS Verified Scalability Guide*.

