



# Model GS7000 GainMaker Node Local Control Module to Status Monitor Upgrade Instructions

## Introduction

The Model GS7000 GainMaker® Scaleable 4-Port Node can be optionally equipped with either a Status Monitor (SM) or a Local Control Module (LCM). For complete instructions on installing and operating the SM/LCM refer to *Model GS7000 Node Status Monitor/Local Control Module Installation and Operation Guide*, part number 4015678.

A Local Control Module can be field upgraded to a Status Monitor through the addition of a transponder core module. The transponder core module plugs directly onto the Local Control Module's main PWB and replaces the craft port module. The mechanical housing for the Status Monitor and the Local Control Module are the same.

This document explains the LCM to SM field upgrade procedure.

The Status Monitor Upgrade Kit, part number 4011933, contains the following items:

- Transponder core module (1)
- Plastic stand-offs (2)
- Upgrade instructions (1)

## Status Monitor/Local Control Module Description

### Local Control Module Description

The local control module locally monitors the following node voltages and signals:

- Receiver optical input level (all receivers)
- Transmitter optical output level (all transmitters)
- AC power presence (for split AC powering cases, AC power from both sides of node housing is monitored)
- DC voltages from both primary and redundant power supplies

The local control module communicates serially with the RF amplifier module to control the optional forward band redundancy switches on the forward configuration module. It is a low-cost module that plugs into the status monitor connectors on the optical interface board.

The local control module is equipped with a craft port to allow local control of the optional forward band redundancy switches, the reverse band 6 dB (wink) attenuators, and the reverse band on/off switches through a handheld controller. All parameters monitored by the local control module can be reviewed using the handheld controller.



T12739

The local control module can be upgraded to a status monitor through the addition of a transponder core module. The transponder core module plugs directly onto the local control module's PWB. The mechanical housing for the status monitor and the local control module are the same.

**Note:** The Heart Beat, Receive, and Error indicator LEDs are only present if the transponder module is installed.

## Status Monitor Description


The status monitor is HMS compliant and provides node monitoring and control capability at the cable plants headend. The following node voltages and signals are monitored and their status reported to the headend by the status monitor.

- Receiver optical input level (all receivers)
- Transmitter optical output level (all transmitters)

## Status Monitor/Local Control Module Description

- AC power presence (for split AC powering cases, AC power from both sides of node housing is monitored)
- DC voltages from both primary and redundant power supplies

Commands are sent from the headend to the status monitor. The status monitor communicates serially with the RF amplifier module to control the optional forward band redundancy switches on the forward configuration module, the reverse band 6 dB (wink) attenuators on the reverse amplifier PWB, and the reverse band on/off switches on the reverse amplifier PWB.

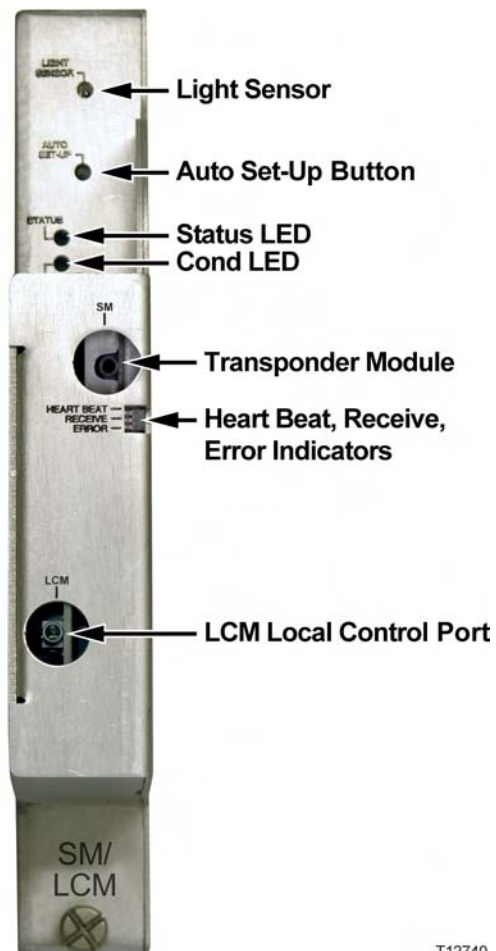


T12740

**Note:** The transponder core module can be seen through the upper of two round cutouts in the cover.

## LCM to SM Upgrade Procedure

### Upgrading the LCM to an SM

These upgrade instructions refer to the various sides of the LCM by the names shown in the following illustration.

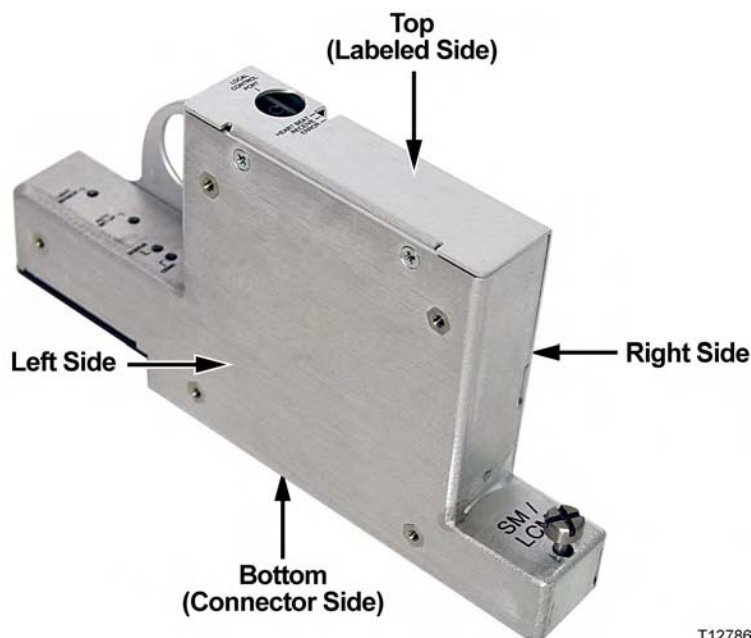

T12786

Complete the following steps to upgrade the Local Control Module to a Status Monitor.



**CAUTION:**

To prevent electrostatic damage to electronic equipment, take ESD precautions, including the use of an ESD wrist strap.


- 1 Remove the Local Control Module from the node.
- 2 Remove the eight screws that hold the cover on the LCM housing.

**Note:** Six screws are on the right side and two screws are on the left side, as shown in the following illustrations.

## LCM to SM Upgrade Procedure

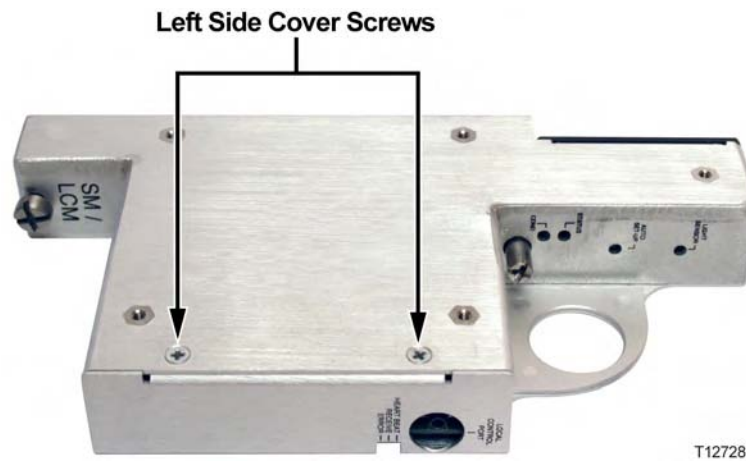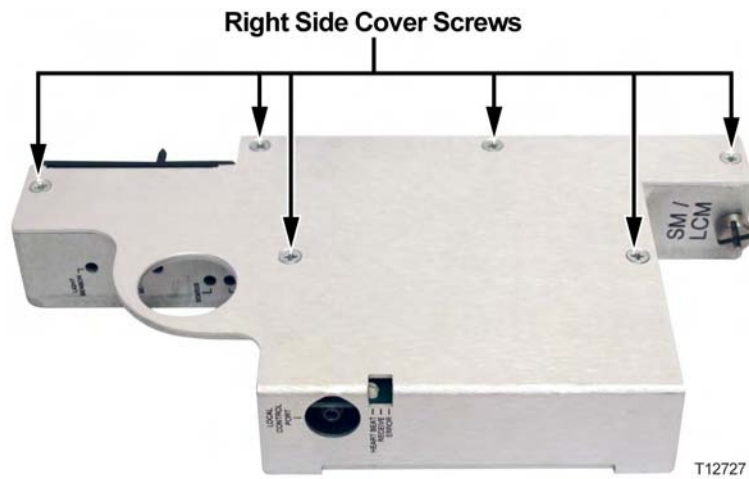


- 3 Remove the cover as follows:
  - a Tilt the bottom (connector side) of the cover up about 1 inch until the cover's metal tab clears the plastic connector guide as shown in the following illustration.

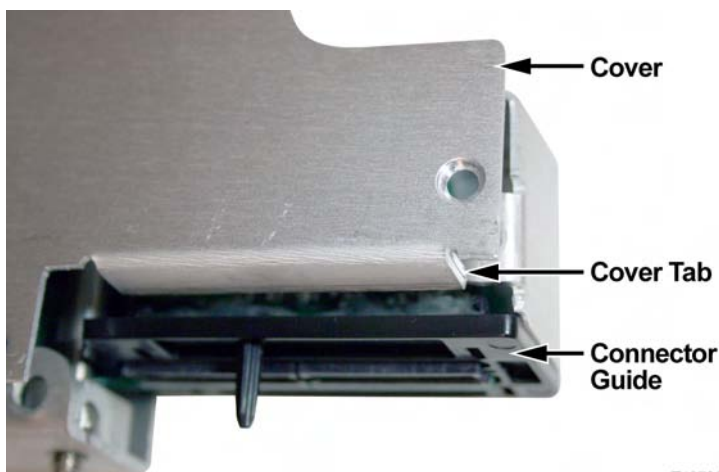

T12729

- b Slide the cover toward the top (labeled side) of the housing and remove it.
- 4 Remove the LCM craft port module and its two plastic stand-offs from the main board as follows:
  - a Pull up carefully with your fingers on the back edge of the module (near the electrical connectors) to disconnect the two electrical connectors.
  - b Push up carefully with your thumb on the front edge of the module at each end (near the plastic stand-offs) to pop loose the plastic stand-offs one at a time.

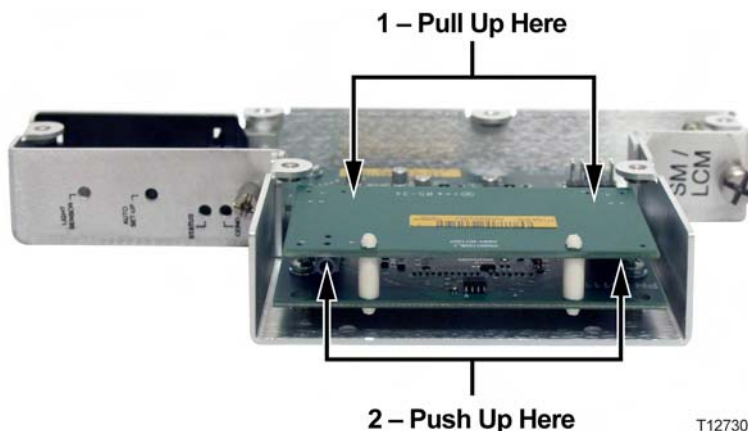


T12730


**Note:** If the stand-offs do not come out with the craft port module, pull them out of the main board separately. These stand-offs are not reused to mount the transponder module.

- 5 Insert two new plastic stand-offs into the mounting holes in the bottom of the SM transponder module. See the following note first!


## LCM to SM Upgrade Procedure

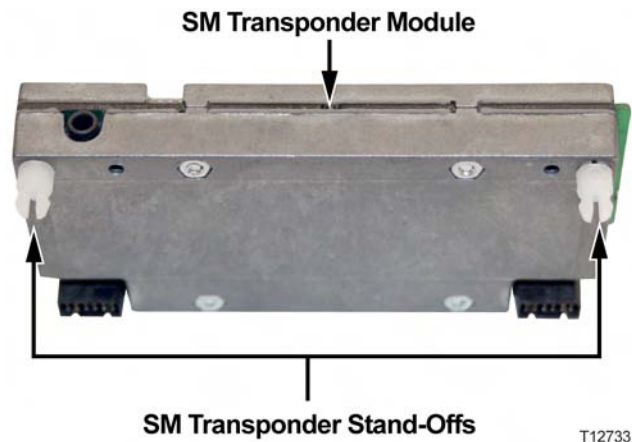

**Note:** These plastic stand-offs are shorter and a different diameter than those used on the LCM craft port module. Also, the stand-offs have two different shaped ends. One end has a barbed arrow head, while the other end has a raised bump. Be sure to insert the raised bump end of the stand-offs into the transponder module.

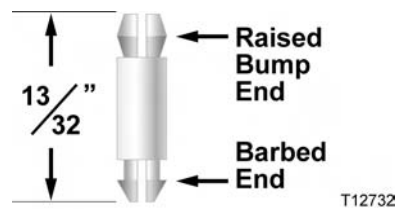


- 6 Install the SM transponder module as follows:
  - a Note the locations of the electrical connectors and stand-off holes in the main board as shown in the following illustration.

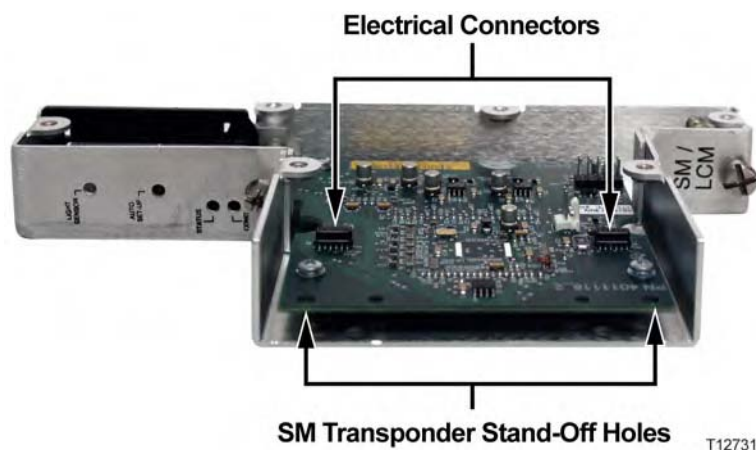




- b Set the module in place on the main board by inserting just the tips of the plastic stand-offs into the two outer-most stand-off holes in the main board.
- c Push down on the two corners of the transponder module over the stand-offs to snap the plastic stand-offs into the main board.
- d Position the back of the transponder module onto the two main board electrical connectors, making sure the connectors mate. The back edge of the module will drop down into place slightly when the electrical connectors are properly aligned.
- e Push down on the two corners of the transponder module over the electrical connectors to snap the connectors into place.

**Result:** The SM transponder module is installed on the main board as shown in the following illustration.

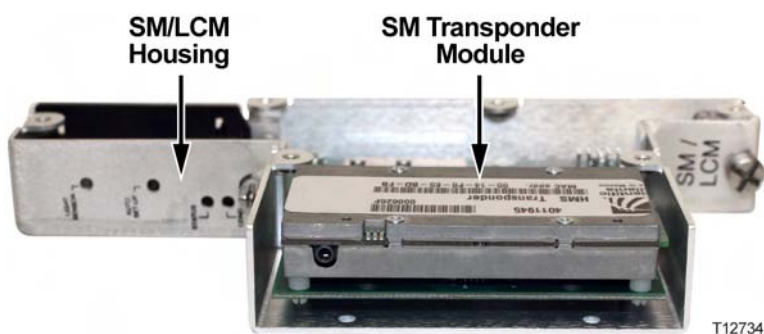


7 Re-install the cover as follows:

- a Insert the metal tab on the top left side of the cover between the housing and the main board as shown in the following illustration.

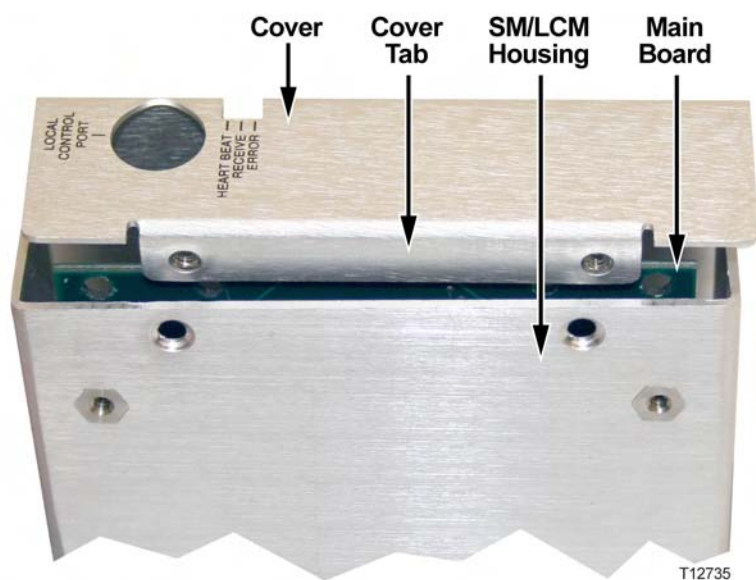

## LCM to SM Upgrade Procedure

- b Tilt the bottom (connector side) of the cover down and insert the cover's metal tab into the two small retaining tabs on the back of the plastic connector guide as shown in the following illustration.

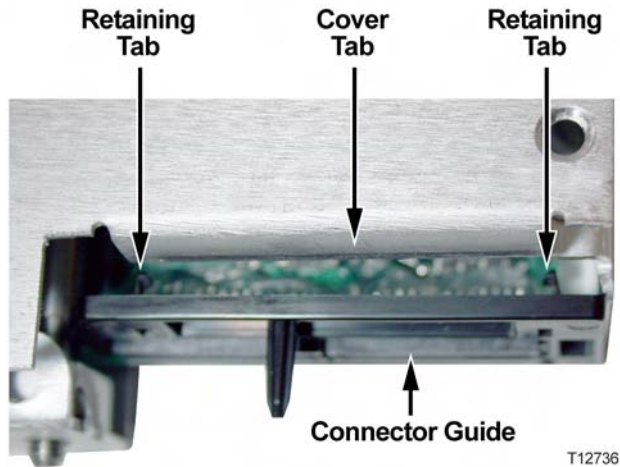

- 8 Re-install the eight screws that were removed during step 2 to secure the cover on the housing.

**Result:** The Local Control Module is upgraded to a Status Monitor.

- 9 Install the Status Monitor in the node.

## For Information

### Support Telephone Numbers

This table lists the Technical Support and Customer Service numbers for your area.

Region	Centers	Telephone and Fax Numbers
North America	SciCare™ Services Atlanta, Georgia United States	For <i>Technical Support</i> , call: <ul style="list-style-type: none"> <li>■ Toll-free: 1-800-722-2009</li> <li>■ Local: 678-277-1120 (Press <b>2</b> at the prompt)</li> </ul> For <i>Customer Service</i> or to request an RMA number, call: <ul style="list-style-type: none"> <li>■ Toll-free: 1-800-722-2009</li> <li>■ Local: 678-277-1120 (Press <b>3</b> at the prompt)</li> <li>■ Fax: 770-236-5477</li> <li>■ E-mail: customer.service@sciatl.com</li> </ul>
Europe, Middle East, Africa	Belgium	For <i>Technical Support</i> , call: <ul style="list-style-type: none"> <li>■ Telephone: 32-56-445-197 or 32-56-445-155</li> <li>■ Fax: 32-56-445-053</li> </ul> For <i>Customer Service</i> or to request an RMA number, call: <ul style="list-style-type: none"> <li>■ Telephone: 32-56-445-133 or 32-56-445-118</li> <li>■ Fax: 32-56-445-051</li> <li>■ E-mail: elc.service@sciatl.com</li> </ul>
Japan	Japan	<ul style="list-style-type: none"> <li>■ Telephone: 81-3-5908-2153 or +81-3-5908-2154</li> <li>■ Fax: 81-3-5908-2155</li> <li>■ E-mail: yuri.oguchi@sciatl.com</li> </ul>
Korea	Korea	<ul style="list-style-type: none"> <li>■ Telephone: 82-2-3429-8800</li> <li>■ Fax: 82-2-3452-9748</li> <li>■ E-mail: kelly.song@sciatl.com</li> </ul>
China (mainland)	China	<ul style="list-style-type: none"> <li>■ Telephone: 86-21-6485-3205</li> <li>■ Fax: 86-21-6485-3205</li> <li>■ E-mail: xiangyang.shan@sciatl.com</li> </ul>
All other Asia-Pacific countries & Australia	Hong Kong	<ul style="list-style-type: none"> <li>■ Telephone: 852-2588-4746</li> <li>■ Fax: 852-2588-3139</li> <li>■ E-mail: support.apr@sciatl.com</li> </ul>
Brazil	Brazil	For <i>Technical Support</i> , call: <ul style="list-style-type: none"> <li>■ Telephone: 55-11-3845-9154 ext 230</li> <li>■ Fax: 55-11-3845-2514</li> </ul> For <i>Customer Service</i> or to request an RMA number, call: <ul style="list-style-type: none"> <li>■ Telephone: 55-11-3845-9154, ext 109</li> <li>■ Fax: 55-11-3845-2514</li> <li>■ E-mail: luiz.fattinger@sciatl.com</li> </ul>

## For Information

<b>Region</b>	<b>Centers</b>	<b>Telephone and Fax Numbers</b>
Mexico, Central America, Caribbean	Mexico	For <i>Technical Support</i> , call: <ul style="list-style-type: none"><li>■ Telephone: 52-3515152599</li><li>■ Fax: 52-3515152599</li></ul> For <i>Customer Service</i> or to request an RMA number, call: <ul style="list-style-type: none"><li>■ Telephone: 52-55-50-81-8425</li><li>■ Fax: 52-55-52-61-0893</li><li>■ E-mail: karla.lugo@sciatl.com</li></ul>
All other Latin America countries	Argentina	For <i>Technical Support</i> , call: <ul style="list-style-type: none"><li>■ Telephone: 54-23-20-403340 ext 109</li><li>■ Fax: 54-23-20-403340 ext 103</li></ul> For <i>Customer Service</i> or to request an RMA number, call: <ul style="list-style-type: none"><li>■ Telephone: 770-236-5662</li><li>■ Fax: 770-236-5888</li><li>■ E-mail: veda.keillor@sciatl.com</li></ul>





Scientific Atlanta, A Cisco Company  
5030 Sugarloaf Parkway, Box 465447  
Lawrenceville, GA 30042

678.277.1000  
[www.scientificatlanta.com](http://www.scientificatlanta.com)

Cisco, Cisco Systems, the Cisco logo, the Cisco Systems logo, Scientific Atlanta, SciCare, and GainMaker are registered trademarks or trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries.

*All other trademarks mentioned in this document are the property of their respective owners.*

Product and service availability are subject to change without notice.

© 2006, 2008 Cisco Systems, Inc. All rights reserved.  
July 2008

Printed in United States of America  
Part Number 4015789 Rev B