Cabling Schema

Cisco Webex Room 70 Dual G2, Room 70 Single G2

Cisco Webex Room 55 Dual

Cisco Webex Room 70 Dual, Room 70 Single
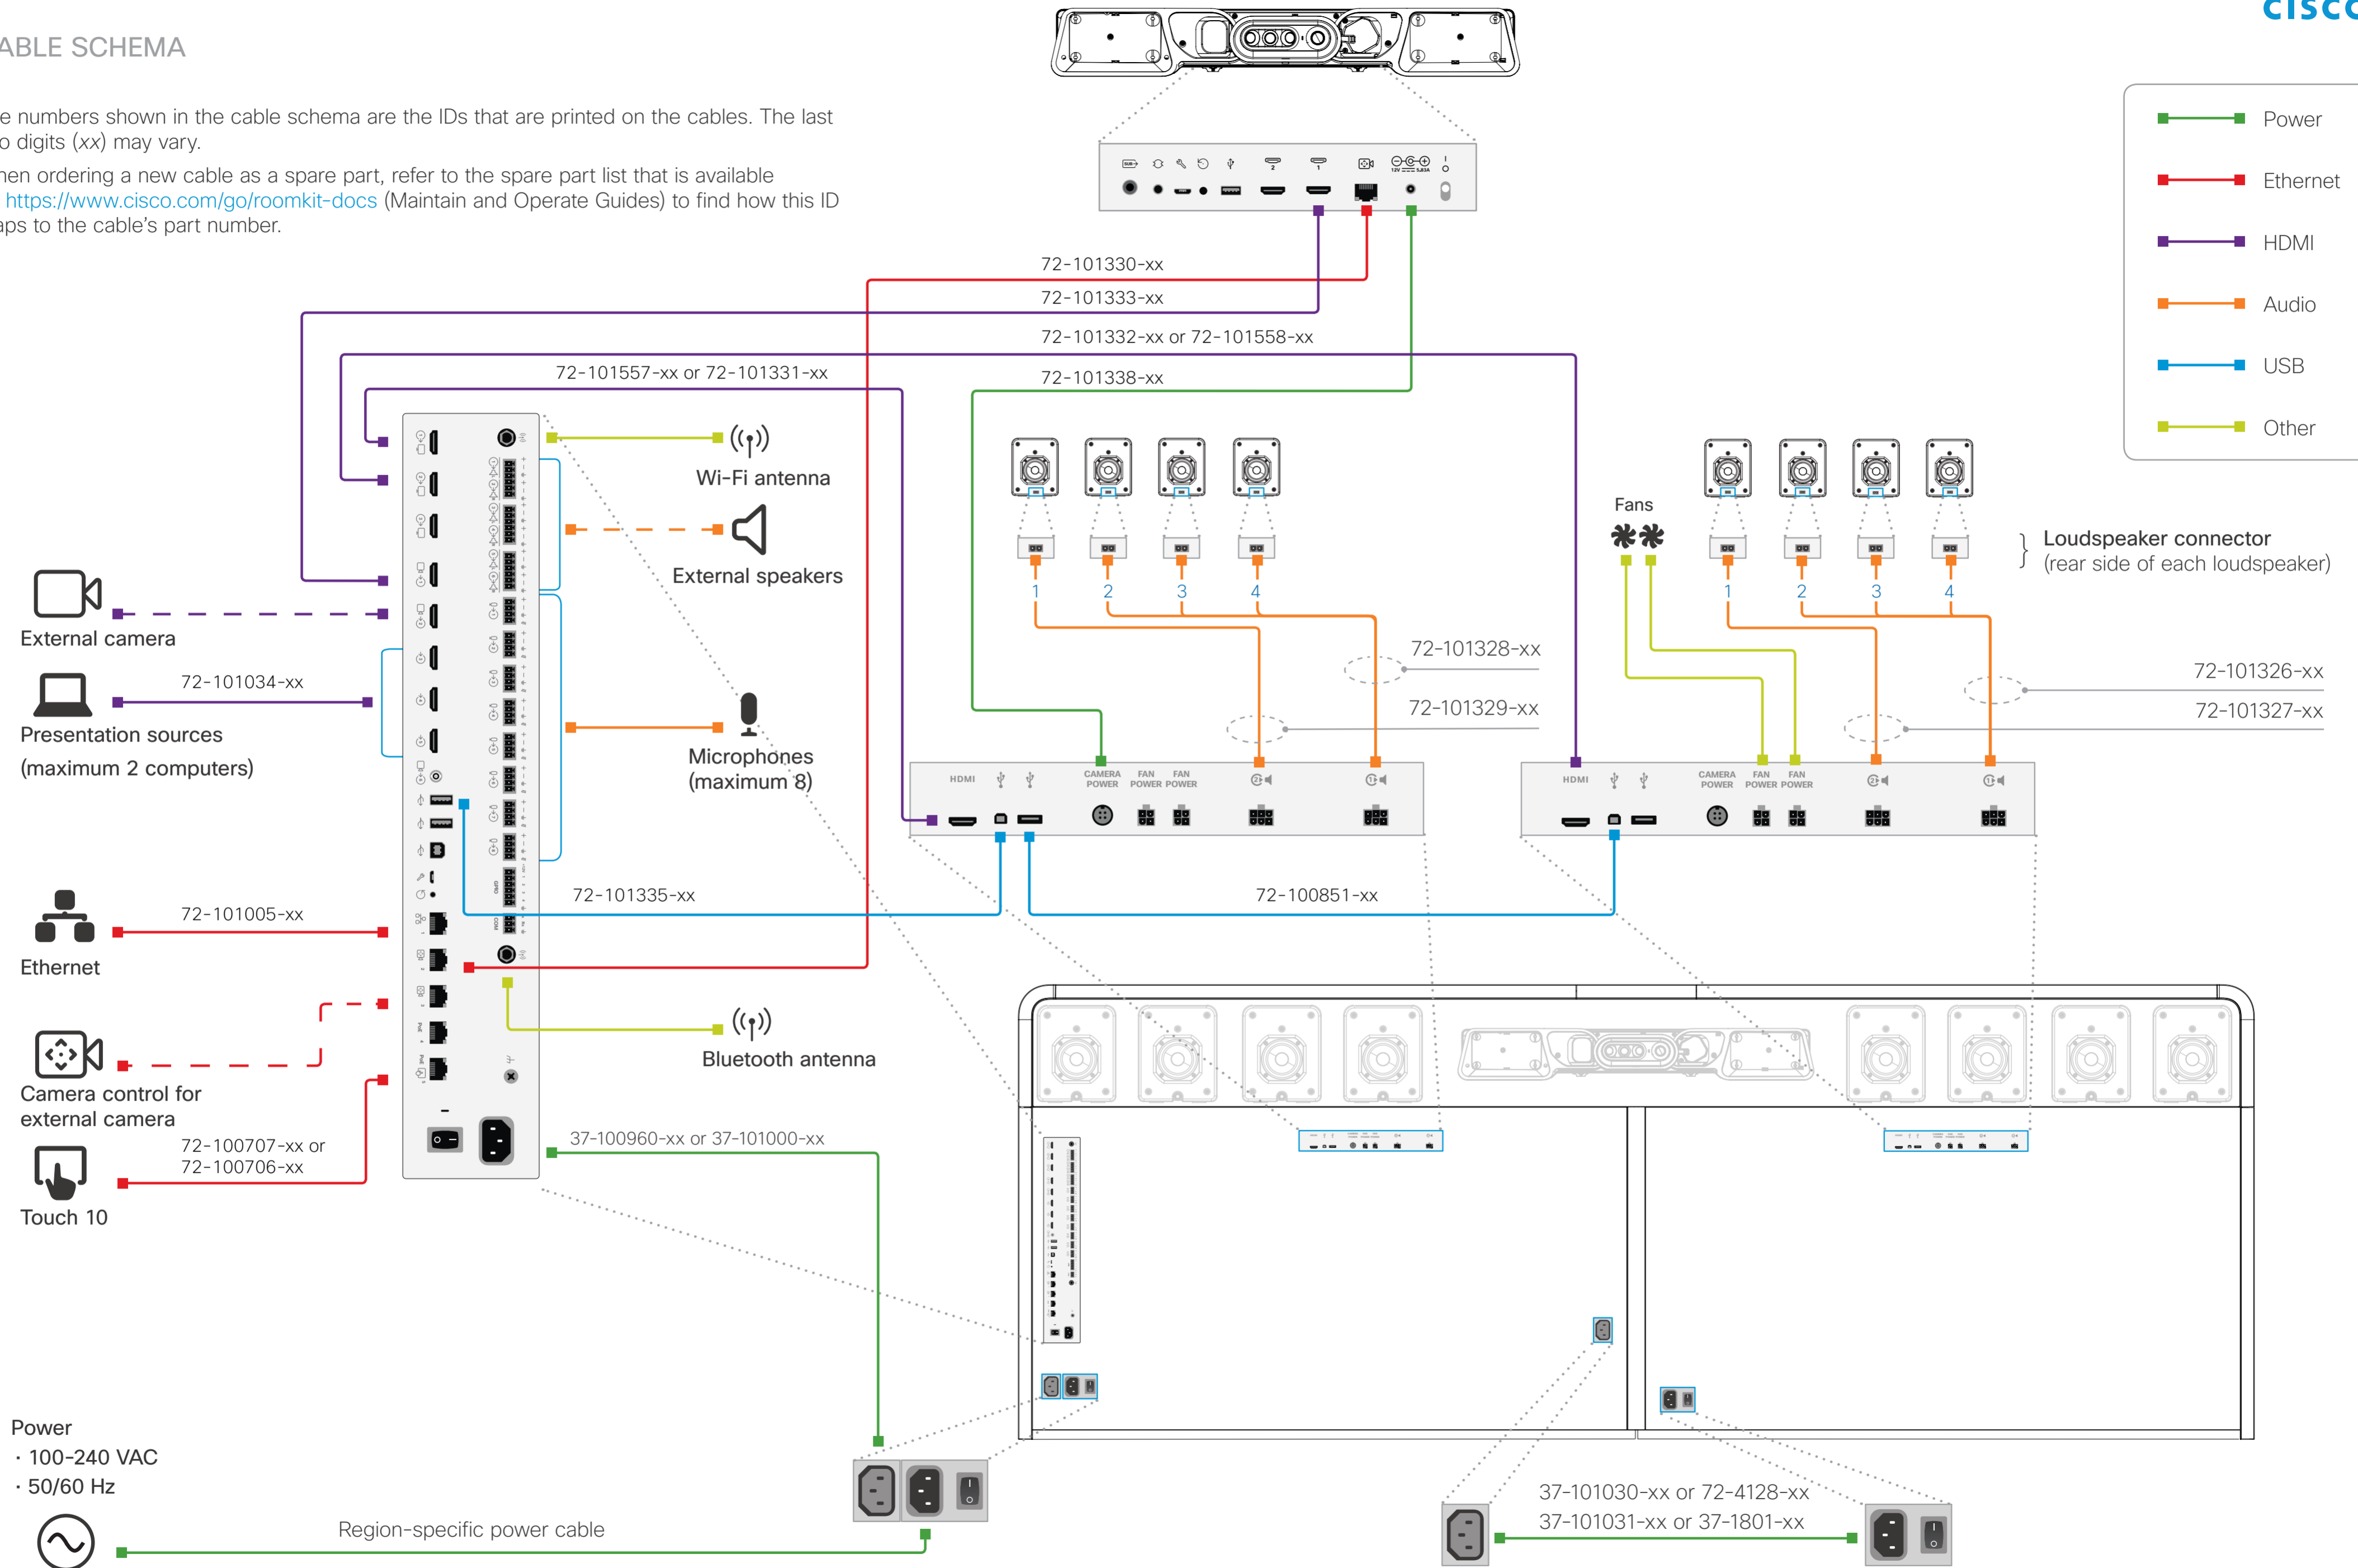
Cisco Webex Room 70 Dual G2

CABLE SCHEMA

The numbers shown in the cable schema are the IDs that are printed on the cables. The last two digits (*xx*) may vary.

When ordering a new cable as a spare part, refer to the spare part list that is available on https://www.cisco.com/go/roomkit-docs (Maintain and Operate Guides) to find how this ID maps to the cable's part number.

Legend:
- Power
- Ethernet
- HDMI
- Audio
- USB
- Other

72-101330-xx
72-101333-xx
72-101332-xx or 72-101558-xx
72-101557-xx or 72-101331-xx
72-101338-xx

Wi-Fi antenna

External speakers

External camera

72-101034-xx

Presentation sources
(maximum 2 computers)

Microphones
(maximum 8)

Fans

Loudspeaker connector
(rear side of each loudspeaker)

72-101328-xx
72-101329-xx
72-101326-xx
72-101327-xx

72-101005-xx

Ethernet

72-101335-xx

72-100851-xx

Camera control for
external camera

Bluetooth antenna

72-100707-xx or
72-100706-xx

Touch 10

37-100960-xx or 37-101000-xx

Power
- 100–240 VAC
- 50/60 Hz

Region-specific power cable

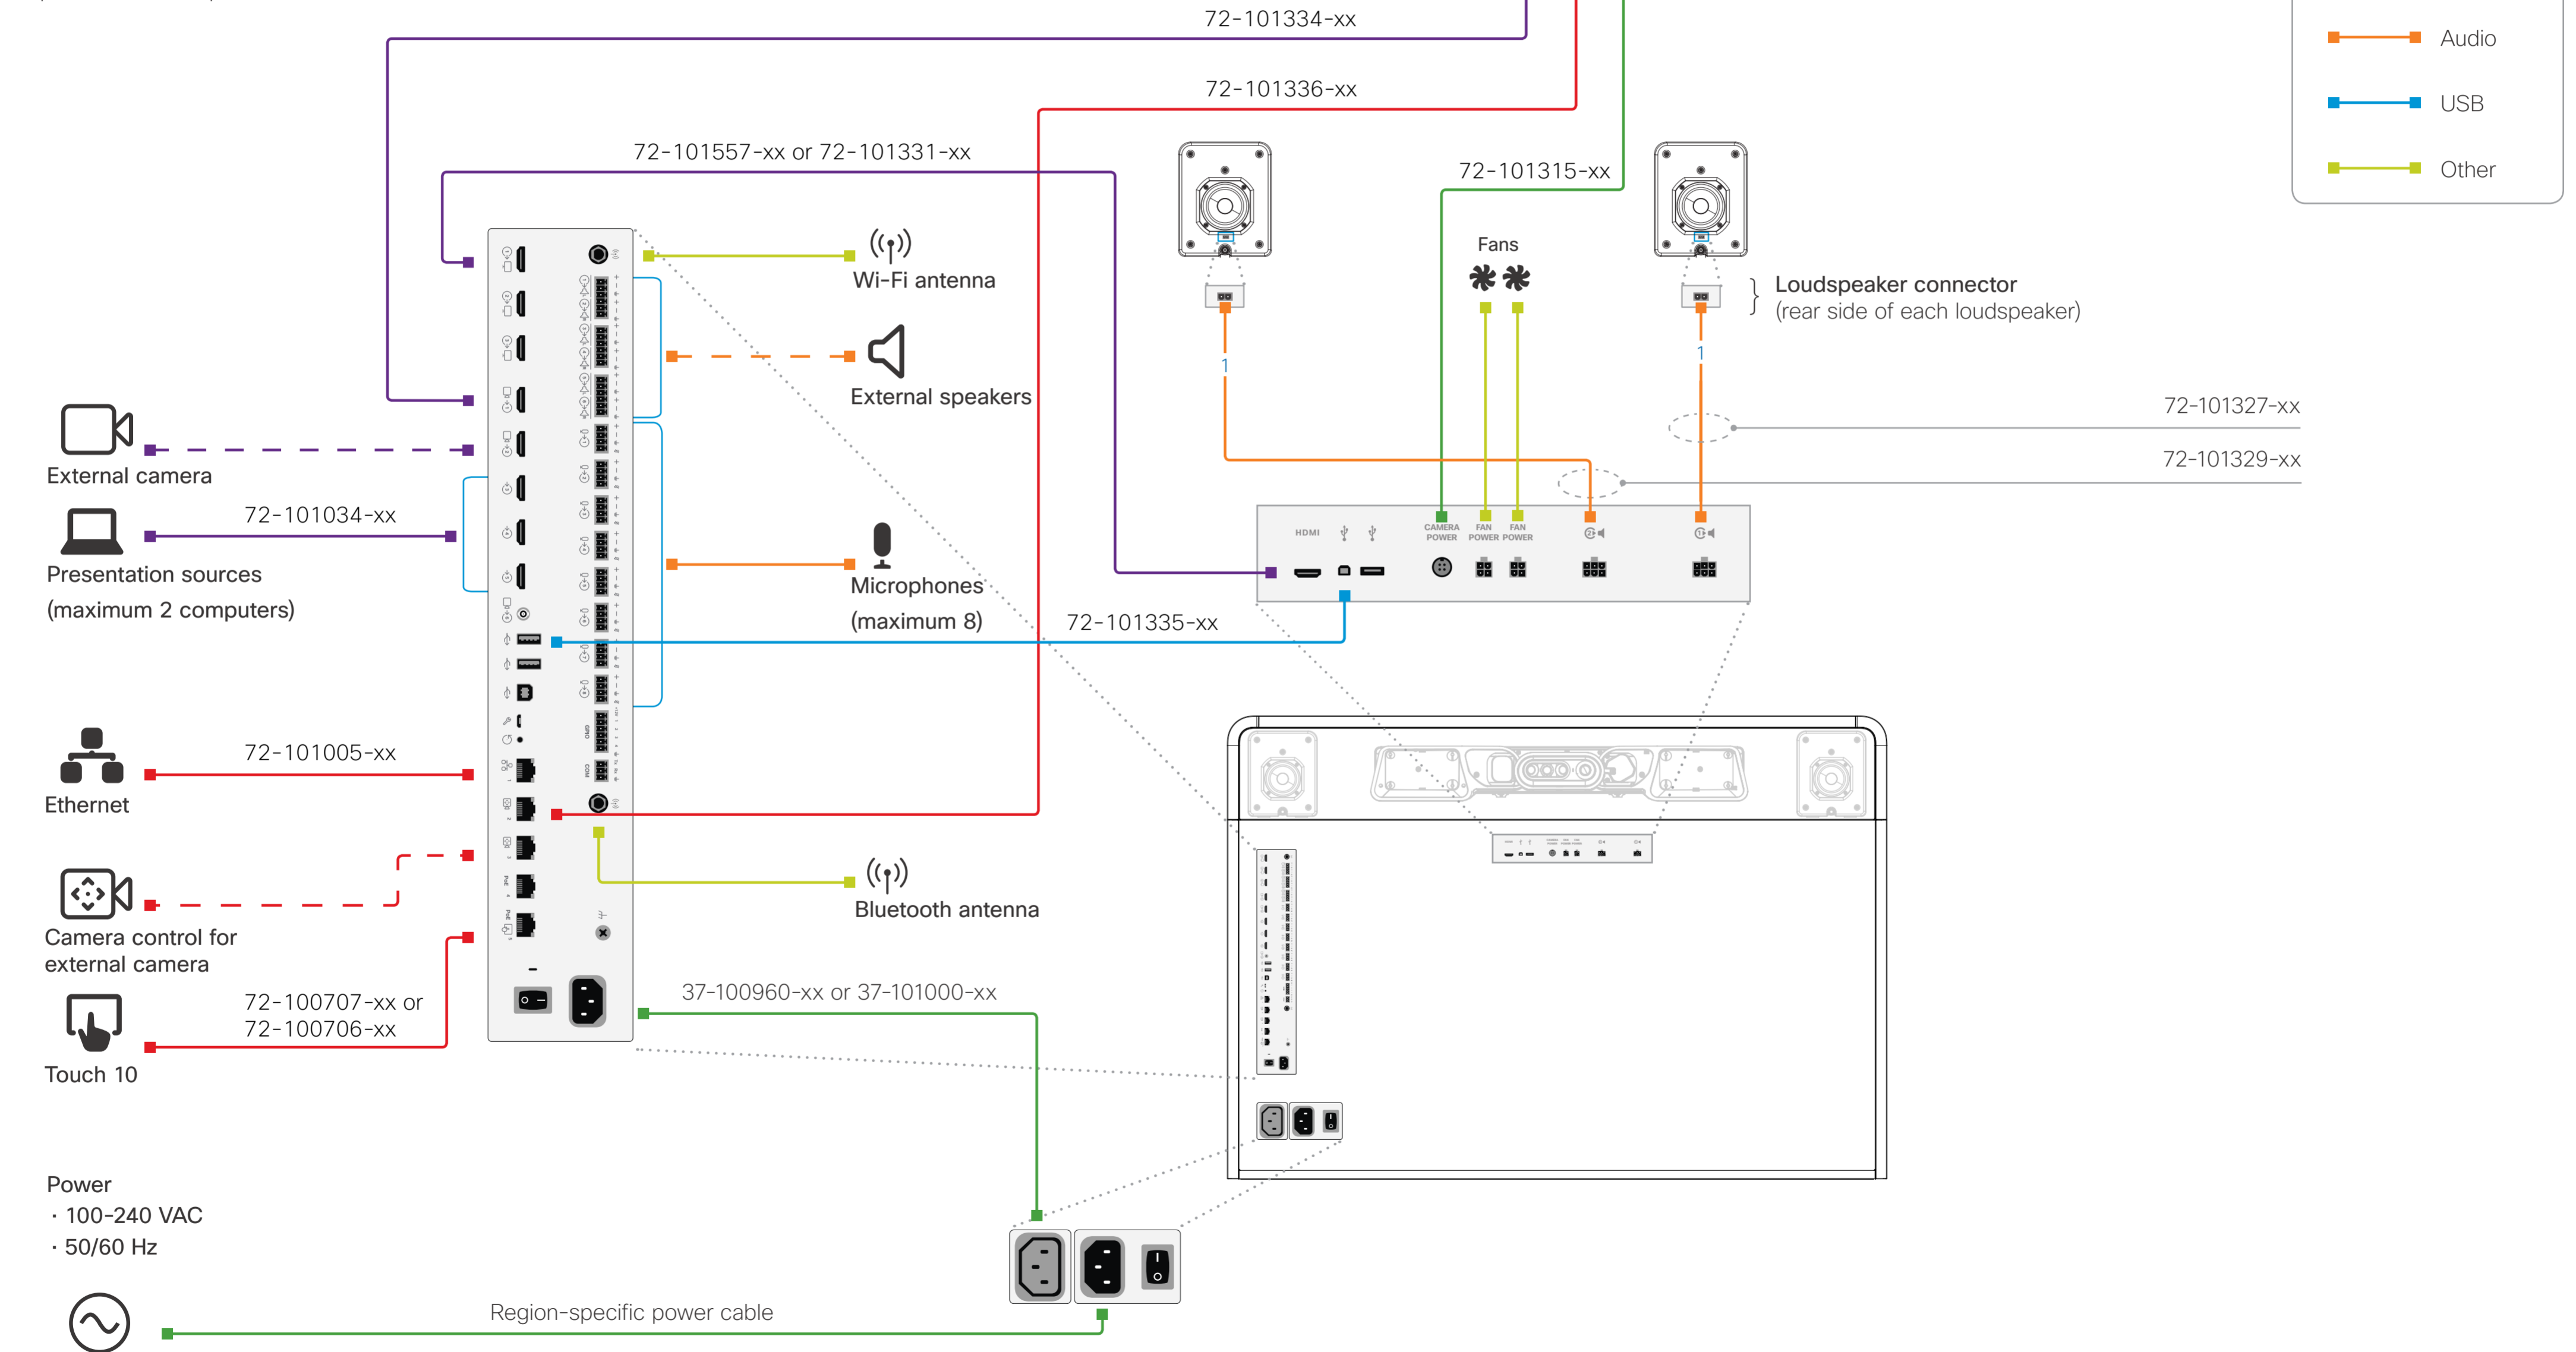37-101030-xx or 72-4128-xx
37-101031-xx or 37-1801-xx

Cisco Webex Room 70 Single G2

CABLE SCHEMA

The numbers shown in the cable schema are the IDs that are printed on the cables. The last two digits (*xx*) may vary.

When ordering a new cable as a spare part, refer to the spare part list that is available on https://www.cisco.com/go/roomkit-docs (Maintain and Operate Guides) to find how this ID maps to the cable's part number.

Legend:
- Power
- Ethernet
- HDMI
- Audio
- USB
- Other

72-101334-xx

72-101336-xx

72-101557-xx or 72-101331-xx

72-101315-xx

Fans

Loudspeaker connector
(rear side of each loudspeaker)

72-101327-xx

72-101329-xx

Wi-Fi antenna

External speakers

External camera

72-101034-xx

Presentation sources
(maximum 2 computers)

Microphones
(maximum 8)

72-101335-xx

HDMI   CAMERA POWER   FAN POWER   FAN POWER

Ethernet

72-101005-xx

Camera control for
external camera

Bluetooth antenna

Touch 10

72-100707-xx or
72-100706-xx

37-100960-xx or 37-101000-xx

Power
· 100–240 VAC
· 50/60 Hz
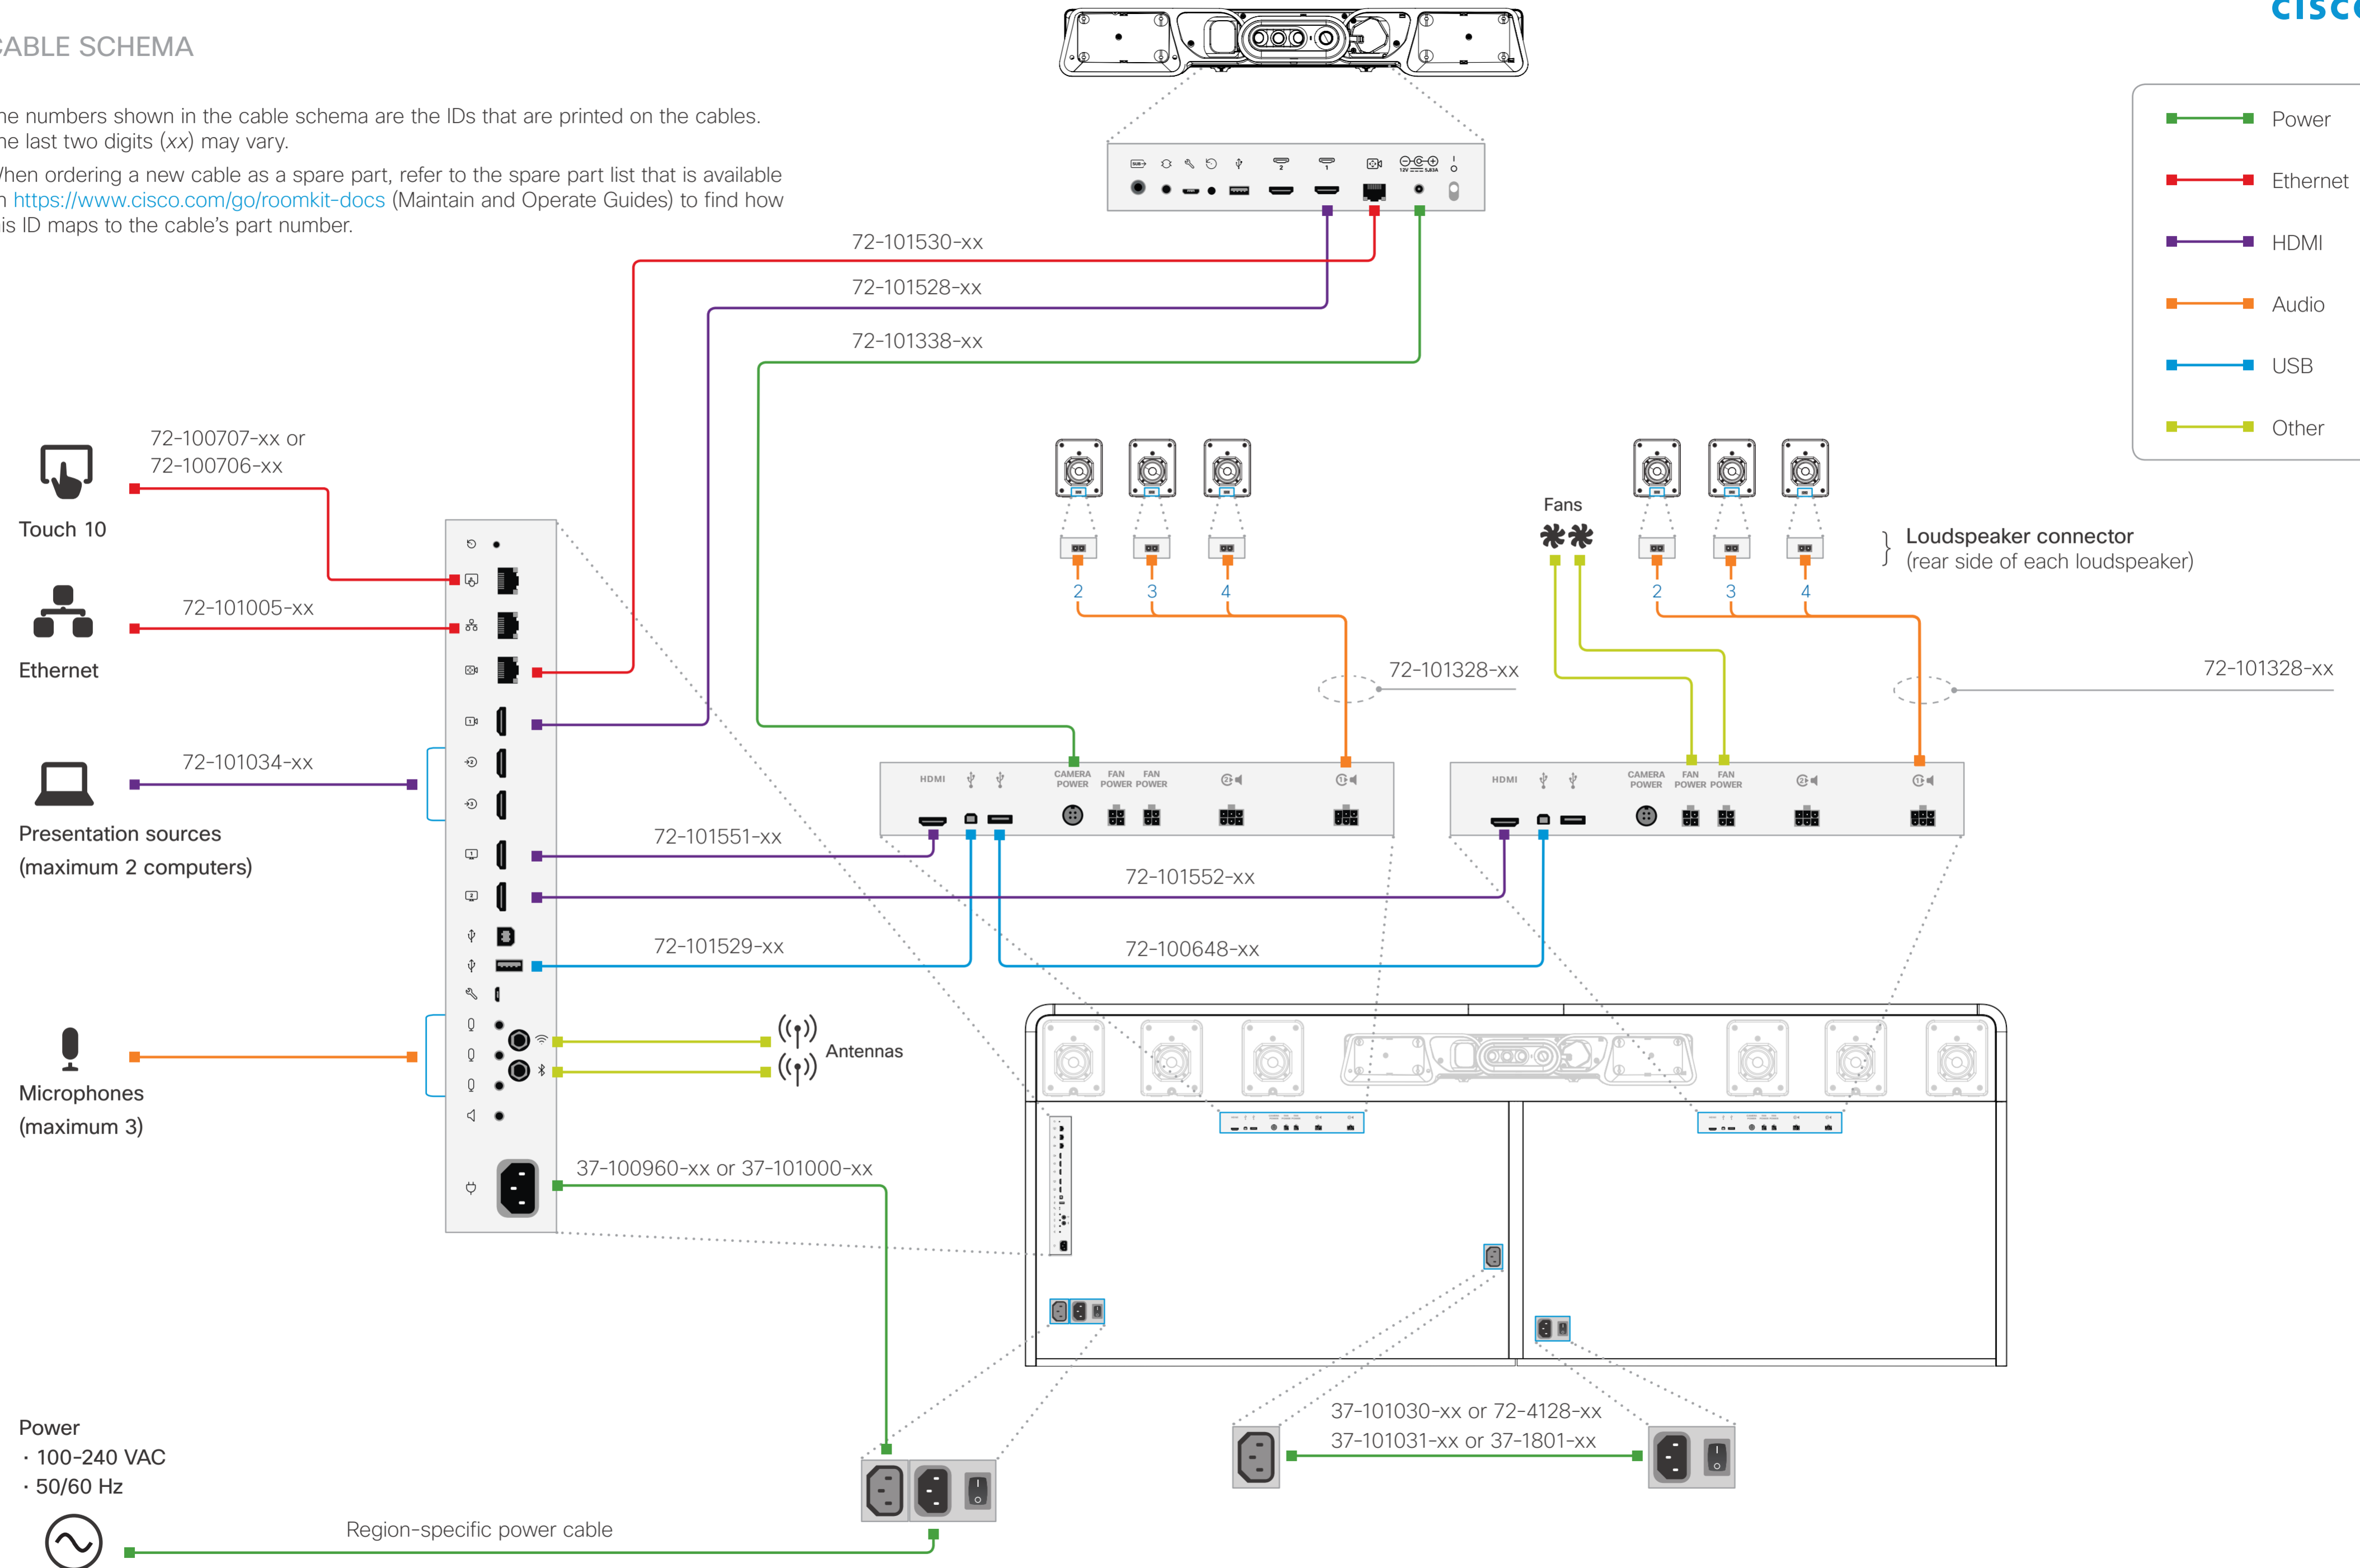
Region-specific power cable

Cisco Webex Room 55 Dual

CABLE SCHEMA

The numbers shown in the cable schema are the IDs that are printed on the cables. The last two digits (*xx*) may vary.

When ordering a new cable as a spare part, refer to the spare part list that is available on https://www.cisco.com/go/roomkit-docs (Maintain and Operate Guides) to find how this ID maps to the cable's part number.

Legend:
- Power
- Ethernet
- HDMI
- Audio
- USB
- Other

Touch 10 — 72-100707-xx or 72-100706-xx

Ethernet — 72-101005-xx

Presentation sources (maximum 2 computers) — 72-101034-xx

Microphones (maximum 3)

72-101530-xx
72-101528-xx
72-101338-xx

72-101551-xx
72-101552-xx
72-101529-xx
72-100648-xx

Antennas

Fans

Loudspeaker connector (rear side of each loudspeaker)

72-101328-xx

37-100960-xx or 37-101000-xx

CAMERA POWER   FAN POWER   FAN POWER   HDMI

Power
- 100–240 VAC
- 50/60 Hz

37-101030-xx or 72-4128-xx
37-101031-xx or 37-1801-xx
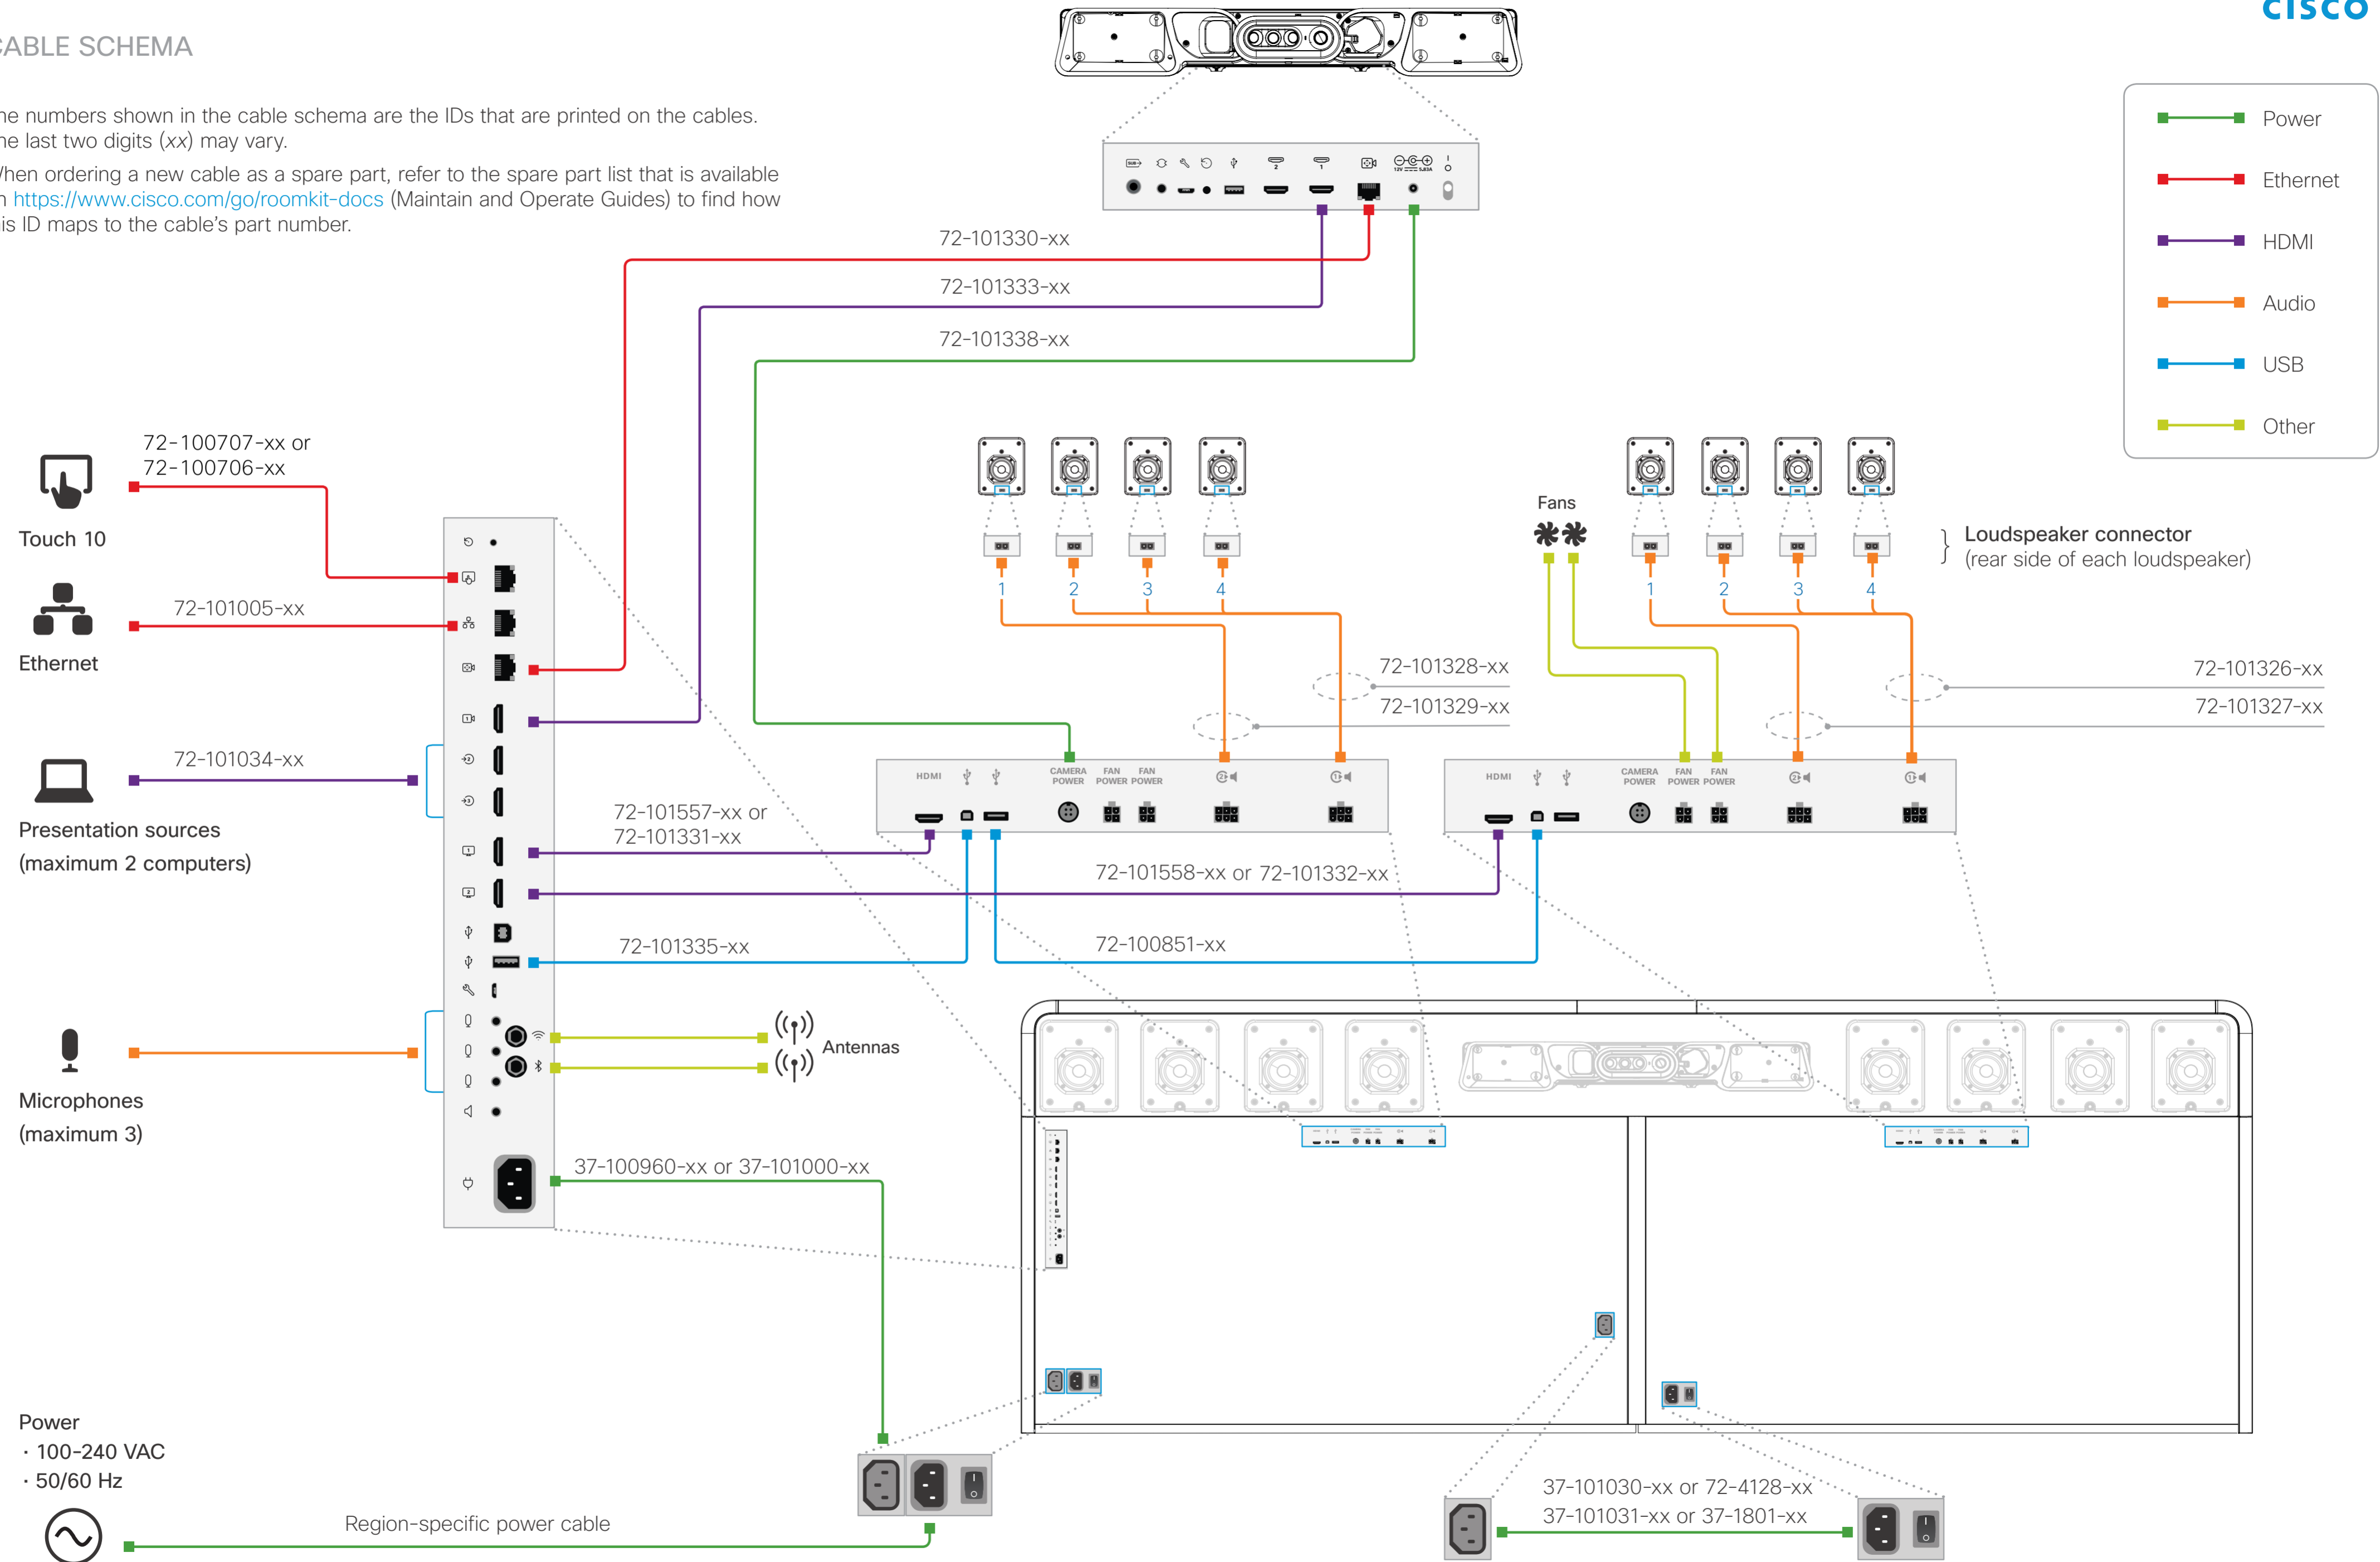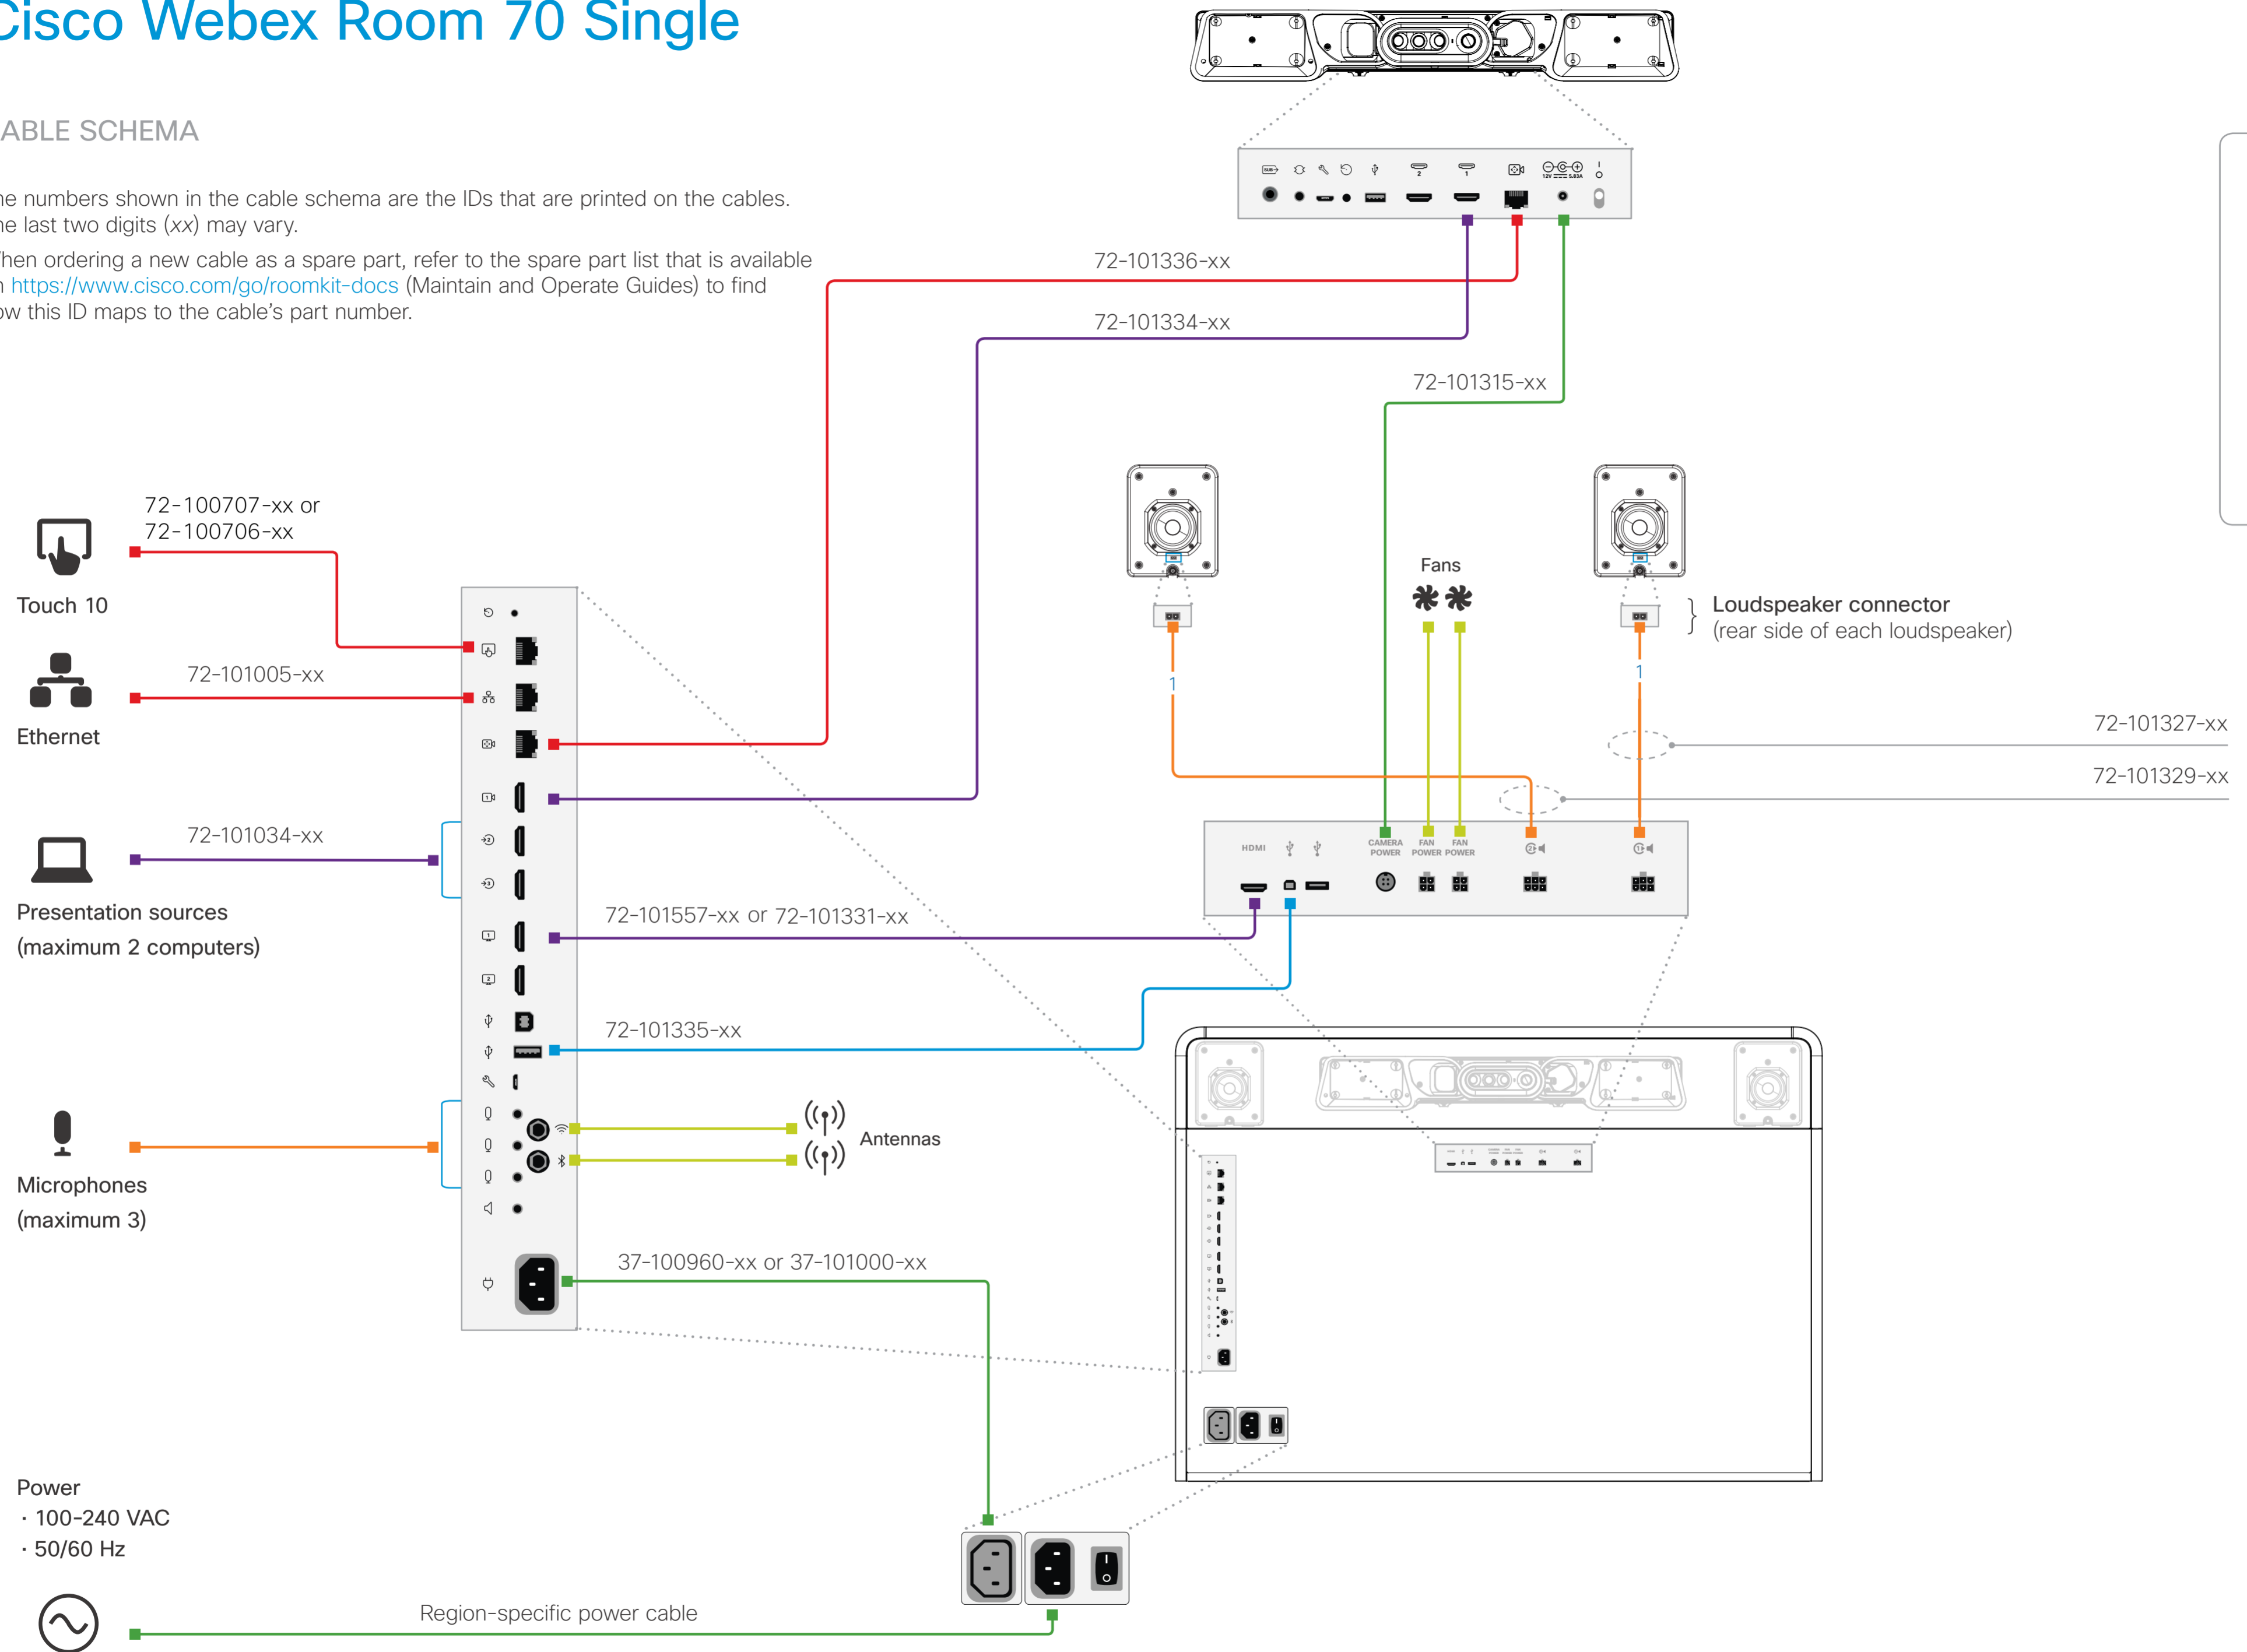
Region-specific power cable

Cisco Webex Room 70 Dual

CABLE SCHEMA

The numbers shown in the cable schema are the IDs that are printed on the cables. The last two digits (*xx*) may vary.

When ordering a new cable as a spare part, refer to the spare part list that is available on https://www.cisco.com/go/roomkit-docs (Maintain and Operate Guides) to find how this ID maps to the cable's part number.

Legend:
- Power (green)
- Ethernet (red)
- HDMI (purple)
- Audio (orange)
- USB (blue)
- Other (yellow-green)

72-101330-xx
72-101333-xx
72-101338-xx

Touch 10
72-100707-xx or 72-100706-xx

Ethernet
72-101005-xx

Presentation sources (maximum 2 computers)
72-101034-xx

72-101557-xx or 72-101331-xx

72-101558-xx or 72-101332-xx

72-101335-xx

72-100851-xx

Microphones (maximum 3)

Antennas

37-100960-xx or 37-101000-xx

Loudspeaker connector (rear side of each loudspeaker)

Fans

1 2 3 4

72-101328-xx
72-101329-xx
72-101326-xx
72-101327-xx

HDMI   CAMERA POWER   FAN POWER   FAN POWER

Power
· 100–240 VAC
· 50/60 Hz

Region-specific power cable

37-101030-xx or 72-4128-xx
37-101031-xx or 37-1801-xx

Cisco Webex Room 70 Single

CABLE SCHEMA

The numbers shown in the cable schema are the IDs that are printed on the cables. The last two digits (xx) may vary.

When ordering a new cable as a spare part, refer to the spare part list that is available on https://www.cisco.com/go/roomkit-docs (Maintain and Operate Guides) to find how this ID maps to the cable's part number.

Legend:
- Power
- Ethernet
- HDMI
- Audio
- USB
- Other

72-101336-xx

72-101334-xx

72-101315-xx

Fans

Loudspeaker connector
(rear side of each loudspeaker)

72-101327-xx

72-101329-xx

Touch 10
72-100707-xx or
72-100706-xx

Ethernet
72-101005-xx

Presentation sources
(maximum 2 computers)
72-101034-xx

72-101557-xx or 72-101331-xx

72-101335-xx

Microphones
(maximum 3)

Antennas

HDMI   USB   CAMERA POWER   FAN POWER   FAN POWER

37-100960-xx or 37-101000-xx

Power
· 100–240 VAC
· 50/60 Hz

Region-specific power cable