

# 更改Secure Firewall Appliances上使用者的密碼

## 目錄

---

[簡介](#)

[必要條件](#)

[需求](#)

[採用元件](#)

[背景資訊](#)

[變更FMC Web介面密碼](#)

[變更FMC/FTD CLI密碼](#)

[變更FDM Web介面密碼](#)

[從Web介面變更FXOS/FCM密碼](#)

[從CLI變更FXOS/FCM密碼](#)

[相關資訊](#)

---

## 簡介

本文檔介紹在不同Cisco Secure Firewall平台上更改Web介面和CLI密碼的步驟。

## 必要條件

### 需求

思科建議您瞭解以下基本技術：

- 思科安全防火牆管理中心(FMC)
- 思科安全防火牆裝置管理員(FDM)
- Cisco Firepower可擴充作業系統(FXOS)
- Cisco Firepower機箱管理器(FCM)
- 思科安全防火牆威脅防禦(FTD)

### 採用元件

本文中的資訊係根據以下軟體和硬體版本：

- Cisco Firepower 4110(帶FXOS v2.12(0.498))。
- Cisco Secure Firewall Management Center 2600 v7.4。
- Cisco Secure Firewall Threat Defense由FDM v7.1管理。

本文中的資訊是根據特定實驗室環境內的裝置所建立。文中使用到的所有裝置皆從已清除 ( 預設 ) 的組態來啟動。如果您的網路運作中，請確保您瞭解任何指令可能造成的影響。


## 背景資訊

本文檔的特定要求包括：


- 使用具有管理員許可權的使用者帳戶訪問裝置
- 對於思科安全防火牆威脅防禦程式，要求使用7.0或更高版本
- 對於Cisco Secure Firewall Management Center程式，需要使用版本7.0或更高版本
- 對於Firepower機箱管理器程式，要求使用版本2.10.1.159或更高版本

## 變更FMC Web介面密碼

步驟 1. 導航至系統。按一下Users：

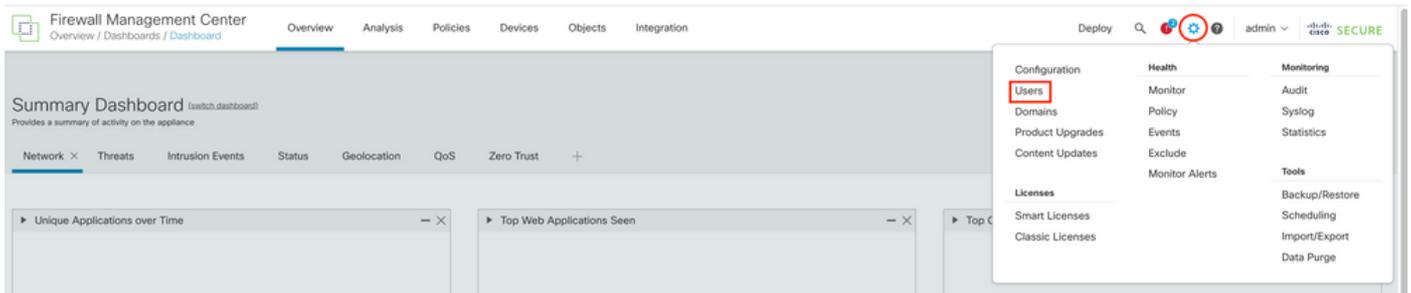

步驟 2. 辨識您要變更密碼的使用者，然後按一下鉛筆圖示：

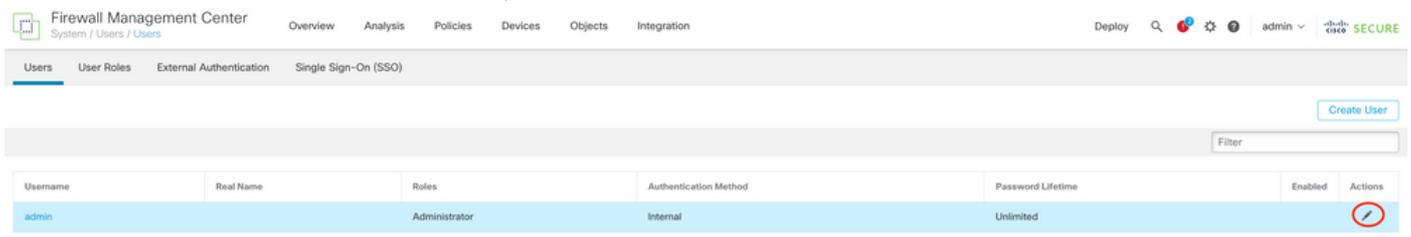

步驟 3. 配置新口令並按一下Save：

Firewall Management Center  
System / Users / Edit User

Overview Analysis Policies Devices Objects Integration

Deploy 🔍 ⚙️ 👤 admin 🔒 **SECURE**

Users User Roles External Authentication Single Sign-On (SSO)

### User Configuration

User Name: admin  
Real Name:   
Authentication:  Use External Authentication Method  
Password:   
Confirm Password:   
Maximum Number of Failed Logins: 0 (0 = Unlimited)  
Minimum Password Length: 0  
Days Until Password Expiration: 0 (0 = Unlimited)  
Days Before Password Expiration Warning: 0  
Options:  
 Force Password Reset on Login  
 Check Password Strength  
 Exempt from Browser Session Timeout

### User Role Configuration

Default User Roles:

- Administrator
- External Database User (Read Only)
- Security Analyst
- Security Analyst (Read Only)
- Security Approver
- Intrusion Admin
- Access Admin
- Network Admin
- Maintenance User
- Discovery Admin
- Threat Intelligence Director (TID) User

注意：請記住，僅FMC與Web介面和命令列介面使用者/密碼獨立。


## 變更FMC/FTD CLI密碼

步驟 1.透過SSH或控制檯電纜登入裝置並應用下一個命令：

```
>configure password
```

步驟 2.輸入目前的密碼，然後輸入新的密碼，確認您輸入的密碼，然後輸入Enter：

```
> configure password  
Enter current password:  
Enter new password:  
Confirm new password:  
Password Update successful.
```


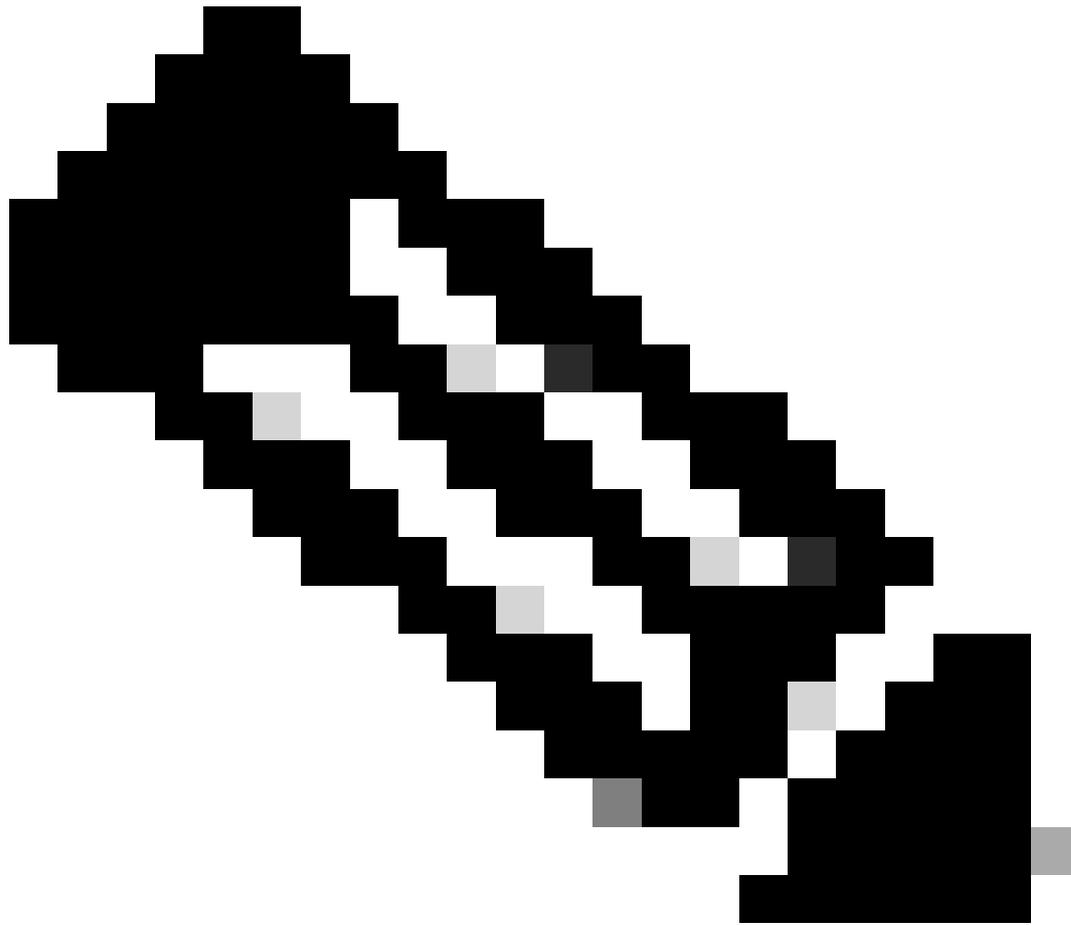


附註：在FDM管理的FTD中，變更CLI密碼將影響FDM Web介面密碼。


---

## 變更FDM Web介面密碼


1. 導航到管理員>配置檔案：

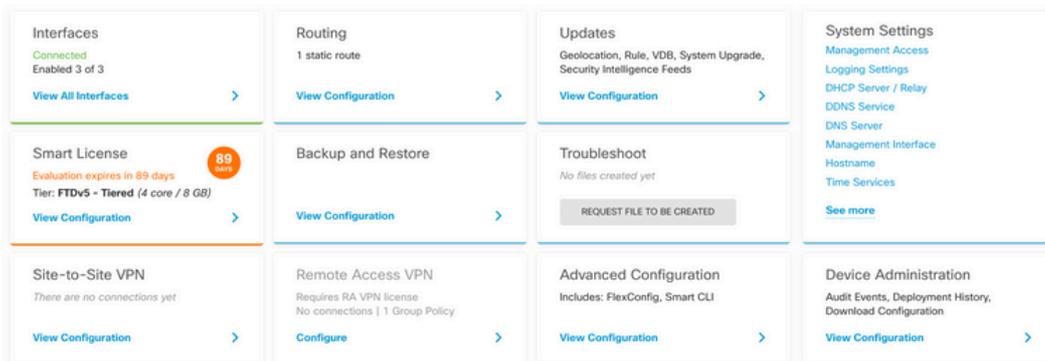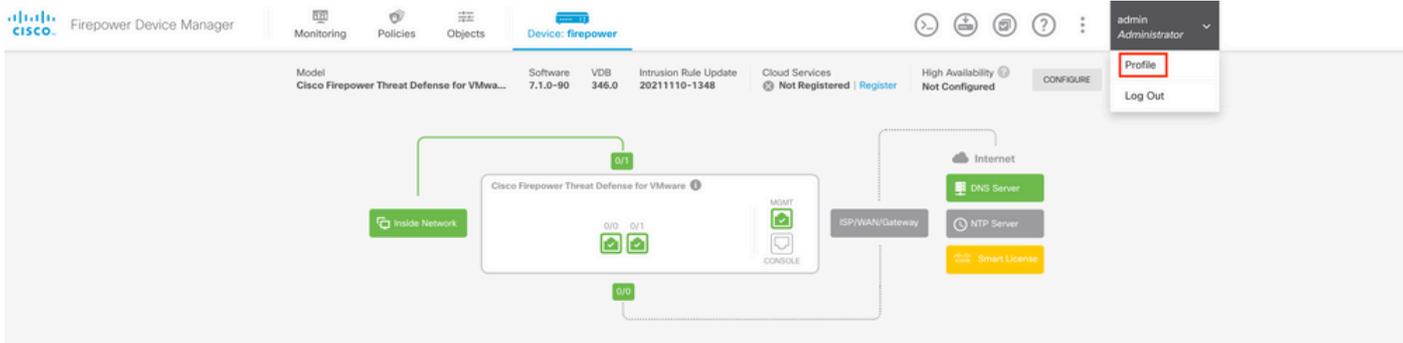

步驟 2. 按一下密碼，並填入「目前密碼」、「新密碼」和「確認密碼」欄位，然後按一下「變更」按鈕以確認程式：

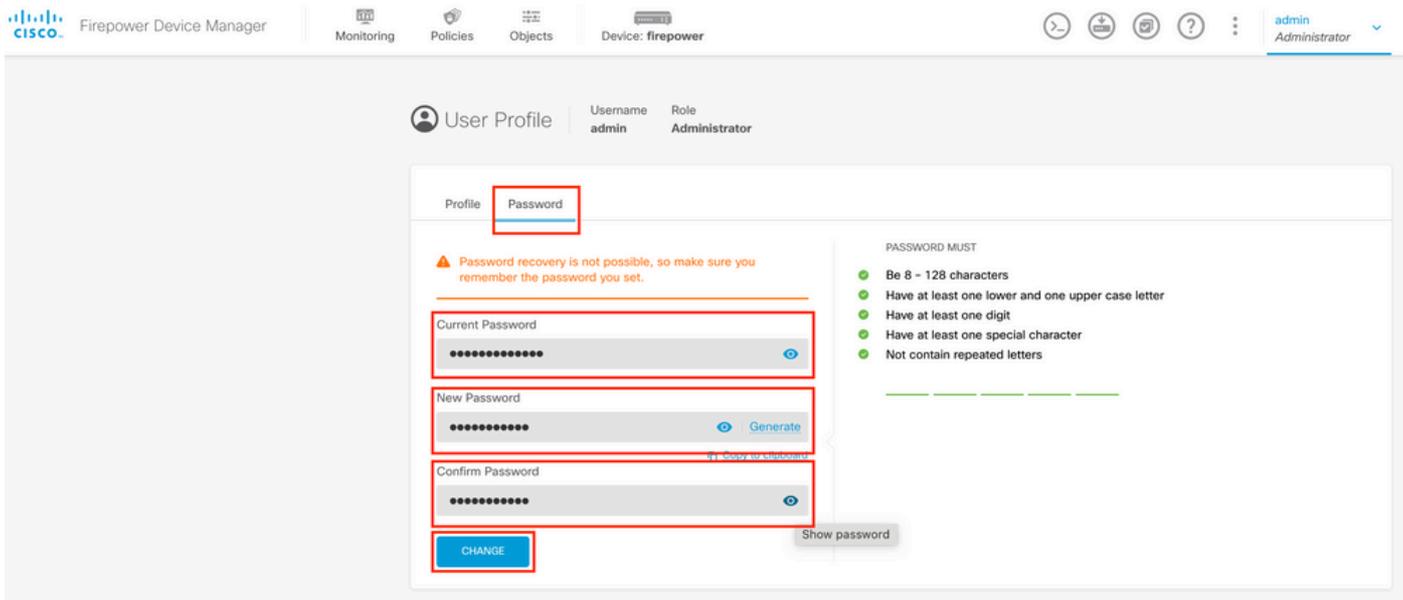

---

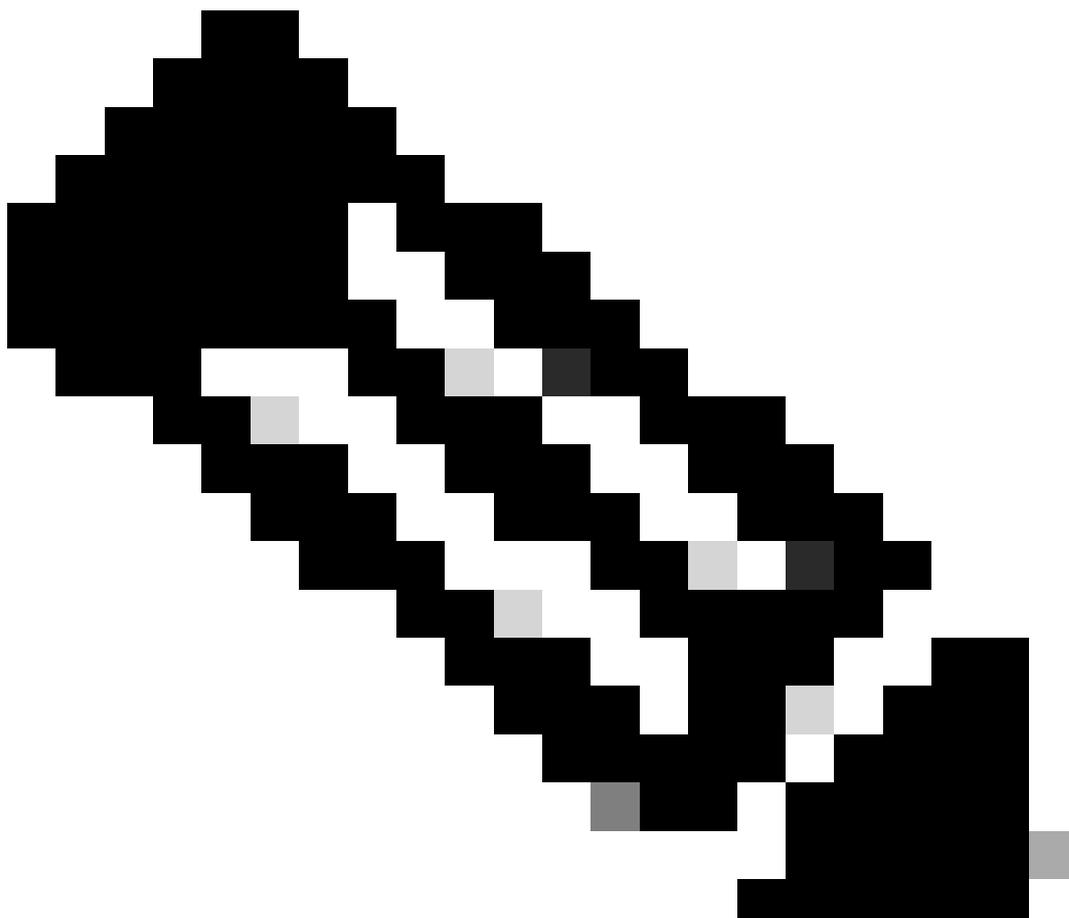

附註：請注意，從FDM Web介面變更密碼將會影響FTD CLI密碼。

---

## 從Web介面變更FXOS/FCM密碼

步驟 1. 導航到系統>使用者管理：

Hardware status: CONSOLE, MGMT, USB, Power 1 - Running, Power 2 - Removed, Network Module 1 (ports 1-8), Network Module 2: Empty, Network Module 3: Empty.

Summary: FAULTS: 1(1) CRITICAL, 2(2) MAJOR; INTERFACES: 4 DOWN, 4 UP; INSTANCES: 0 DOWN, 1 UP; LICENSE: Smart Agent UNREGISTERED; INVENTORY: 1(1) Security Engine, 6(6) Fans, 1(2) Power Supplies.

Severity	Description	Cause	Occurrence	Time	Acknowledged
CRITICAL	Network Module 2 removed when in online state. It is recommended to set mo...	module-surprise-removal	1	2022-05-25T15:31:41.087	no
MAJOR	Auto registration of device for telemetry failed. Error: Smart Licensing is dereg...	telemetry-registration-fail...	32	2023-09-21T07:03:14.543	no
MAJOR	ether port 1/2 on fabric interconnect A oper state: link-down, reason: Link fail...	link-down	1	2023-09-26T06:14:20.157	no
MINOR	Config backup may be outdated	config-backup-outdated	1	2022-10-08T20:58:10.546	no
WARNING	Power supply 2 in chassis 1 presence: missing	equipment-missing	1	2022-05-23T22:23:17.510	no

步驟 2. 辨識您要變更密碼的使用者，然後按一下鉛筆圖示：

Local Users Settings Add User

Username	Roles	User Expiration	Account Status
admin	Admin, Read-Only	never	active

步驟 3. 配置新口令並按一下Save：

Local Users Settings Add User

admin Admin, Read-Only never active

**Edit admin**

User Name \* admin

First Name

Last Name

Email example@example.com

Phone Number +XXXXXXXXXXXX

Password \*\*\*\*\* Set: Yes

Confirm Password \*\*\*\*\*

Account Status  Active  Inactive

User Role Read-Only, Admin, Operations, AAA

Account Expires

Expiry Date: (mm/dd/yyyy)

Save Cancel

---

注意：請注意，從Web介面更改密碼將影響FXOS CLI密碼。

---

## 從CLI變更FXOS/FCM密碼


步驟 1. 登入到FXOS CLI並運行以下命令以檢視已確認使用者的清單：

```
FPR4110# scope security
FPR4110 /security # show local-user
User Name      First Name    Last name
-----
admin
ciscotac
```

步驟 2. 確定要變更密碼的使用者，並執行下列命令：

```
FPR4110 /security # scope local-user ciscotac
FPR4110 /security/local-user # set password
Enter a password:
Confirm the password:
FPR4110 /security* # commit-buffer
FPR4110 /security #
```

---

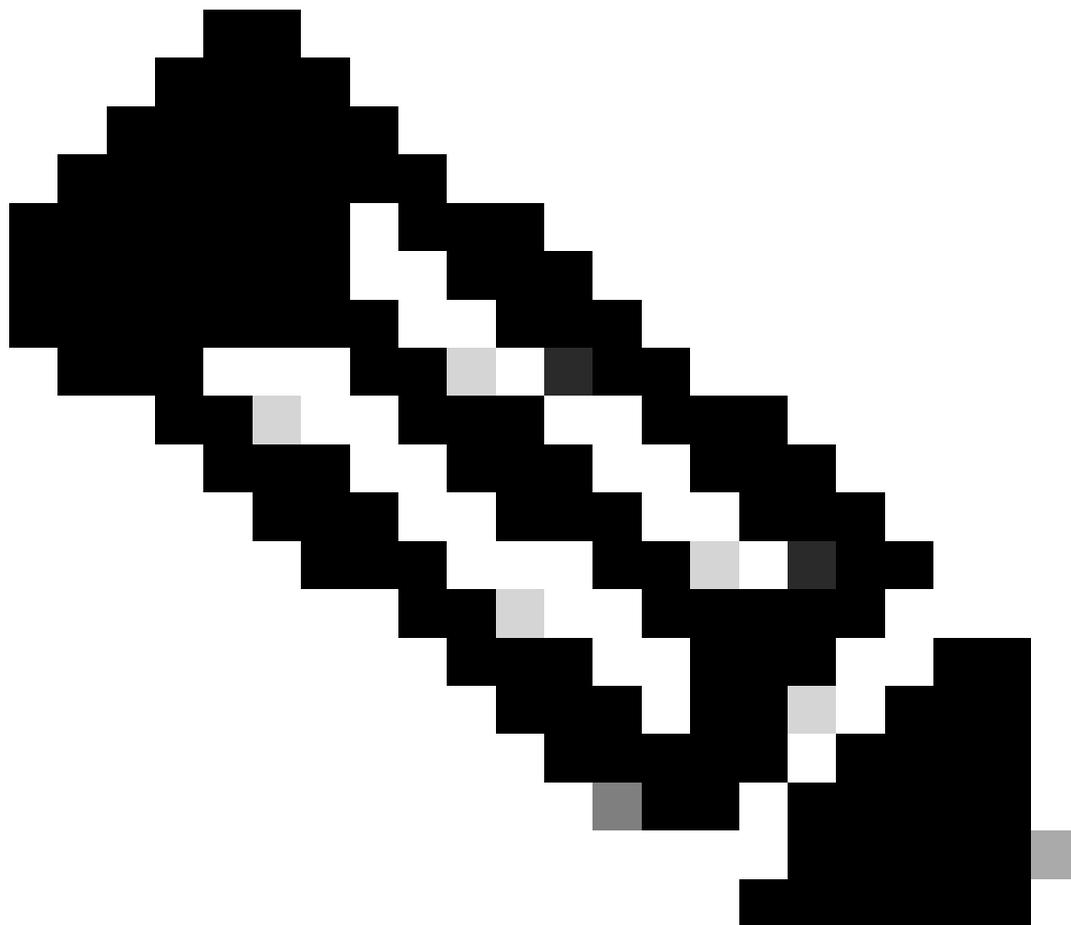

注意：請注意，從FXOS CLI更改密碼將影響Web介面密碼。

---

## 相關資訊

- [思科技術支援與下載](#)

## 關於此翻譯

思科已使用電腦和人工技術翻譯本文件，讓全世界的使用者能夠以自己的語言理解支援內容。請注意，即使是最佳機器翻譯，也不如專業譯者翻譯的內容準確。Cisco Systems, Inc. 對這些翻譯的準確度概不負責，並建議一律查看原始英文文件（提供連結）。