檢查Cisco Small Business VoIP路由器上的無線設定

目錄

簡介

本文是系列文章中的一篇，旨在協助安裝、疑難排解和維護Cisco Small Business產品。

問：如何獲取網路上的無線設定？A.

您需要注意的無線設定包括：

a.) SSID
b.) SSID廣播
c.) 無線安全

若要檢查思科S系列路由器上的無線設定，請完成以下步驟：

檢查Cisco Small Business路由器上的無線設定

第1步：
訪問路由器的基於Web的設定頁。有關說明，請按一下此處。
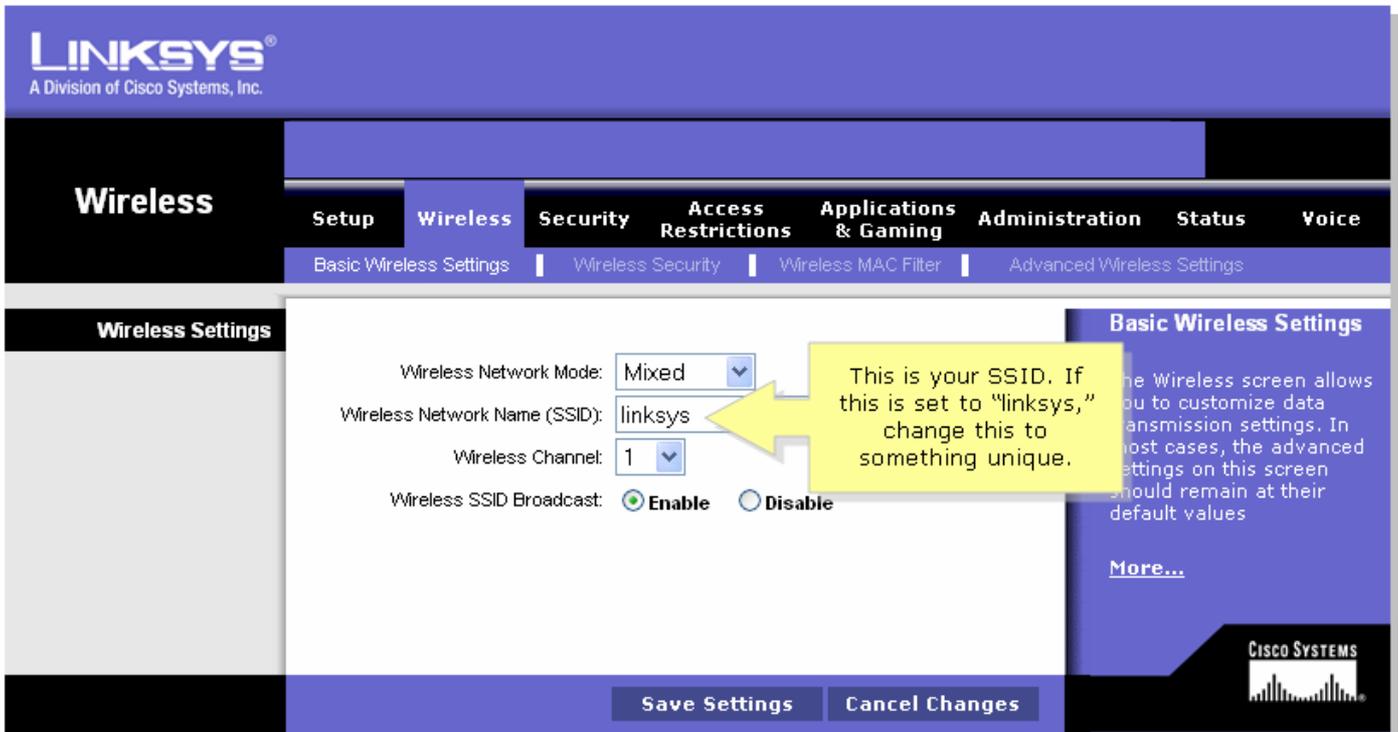
第2步：
當路由器的基於Web的設定頁面出現時，按一下**Wireless**。

步驟3:
尋找**無線網路名稱(SSID)**。 如果它仍然設定為「linksys」，請將其更改為某個唯一設定，並注意「無線SSID廣播」是否設定為**啟用**或**禁用**。

第4步：
按一下「Wireless Security」，注意目前的「Security Mode」。

如果安全模式設定為WEP:

Wireless Security

Security Mode : WEP

Default Transmit Key: ● 1 ○ 2 ○ 3 ○ 4

WEP Encryption: 64 bits 10 hex digits

Passphrase: MySecretKey [Generate]

Key 1: BA3777C135

Key 2: 8D5AA90AAD

Key 3: 60A6275993

Key 4: A98B258607

Take note that the number selected, will determine what WEP key you'll using.

*Copy **Key 1**. This will be your WEP key.*

如果安全模式設定為WPA:

Wireless Security

Security Mode : WPA Personal

WPA Algorithms: TKIP

WPA Shared Key: MySecretKey

Group Key Renewal: 3600 seconds

*Take note of your **WPA Key**. This key should be unique.*

第5步：

按一下 [Save Settings]。

相關資訊

- 技術支援與文件 - Cisco Systems