

# C ةلسلسلا نم ةلماكتملا UCS م داوخ نيوكت لقتسملا عضولا ل

## تايوتحمل

[ةمدقملا](#)

[ةيساسألا تابلطتملا](#)

[تابلطتملا](#)

[ةمدختسملا تانوكملا](#)

[ةيساسأ تامولعم](#)

[نيوكتلا](#)

[لقتسملا عضولا يف مداخلا عضو](#)

[مداخلا لي محت اعلا 1. ةوطخلا](#)

[مداخلا ذفانم نيوكت مدع 2. ةوطخلا](#)

[ةيضارتفالا تاداعلا ل CIMC ريغت 3. ةوطخلا](#)

[لقتسملا عضولا ل CIMC نيوكت 4. ةوطخلا](#)

[تباثلا جمانربلا رادصا نيوكت ةداع](#)

[ISO Host Upgrade Utility\(HUU\) ل زنت 1. ةوطخلا](#)

[ISO يولعلا ل اثمتلا عطيرخوس وامل او ويديفل او جياتفملا ةحول قالطا 2. ةوطخلا](#)

[ISO HUU مادختست تابل لي محتلا 3. ةوطخلا](#)

[يلاخلا رادصا ل نيوكت ةداع 4. ةوطخلا](#)

[UCS Manager ل ل Integrated Server جمانرب](#)

[ةيضارتفالا عنصملا تاداعلا ل CIMC طبض 1. ةوطخلا](#)

[مداخ ذفانمك اهن نيوكت داعملا ذفانملا 2. ةوطخلا](#)

[تباثملا تالبك لي صوت 3. ةوطخلا](#)

[نيوكتلا ةداعا مداخ 4. ةوطخلا](#)

[ةلص تاذا تامولعم](#)

## ةمدقملا

عضول UCS Manager جمانرب يف جدم UCS-C Series مداخ عضو ةيفيك دننتسملا اذه حضوي هب صاخلا تباثلا جمانربلا رادصا نيوكت ةداعا لقتسم.

## ةيساسألا تابلطتملا

### تابلطتملا

ةيلاتلا عيضاوملاب ةفرعم كي دل نوكت ناب Cisco ي صوت:

- (UCS) ةدحوملا ةبسوحلا ةمظنا تامقلمل يساسألا مهفلا
- UCS (UCSM) ري دمل يساسألا مهفلا
- Cisco نم (CIMC) ةلماكتملا ةرادلا يف مكحتلا ةدحول يساسألا مهفلا
- ةكبش ل يساسألا مهفلا

## ةمدختسملا تانوكملا

ةغصي صةيجمرب صاخ ىلإ ةقيثو اذه ديقي ال


ةصاخ ةيلمعم ةئيبي في ةدوجوملا ةزهجالا نم دنننسملا اذه في ةدراوللا تامولعمللا عاشنإ مت تناك اذإ. (يضا رتفا). حوسمم نيوكتب دنننسملا اذه في ةمدختسُملا ةزهجالا عيجم تادب رما يال لم تحملا ريثاتلل كمهف نم دكأتف، ليغشتلا ديقي كتكبش

## ةيساسا تامولعم

نيوكتلا اذه ةلواحم لبقي تابلطتملا هذه كيديل نا نم دكأت

- C ةئفللا نم مداخل لاصتاللا رتويبمك زااج
- KVM لبك
- ةشاشلا
- حيتافملا ةحول
- ةرادال ذفنمب ليصوتلل لوألا ليجللا نم لبك


## نيوكتلا

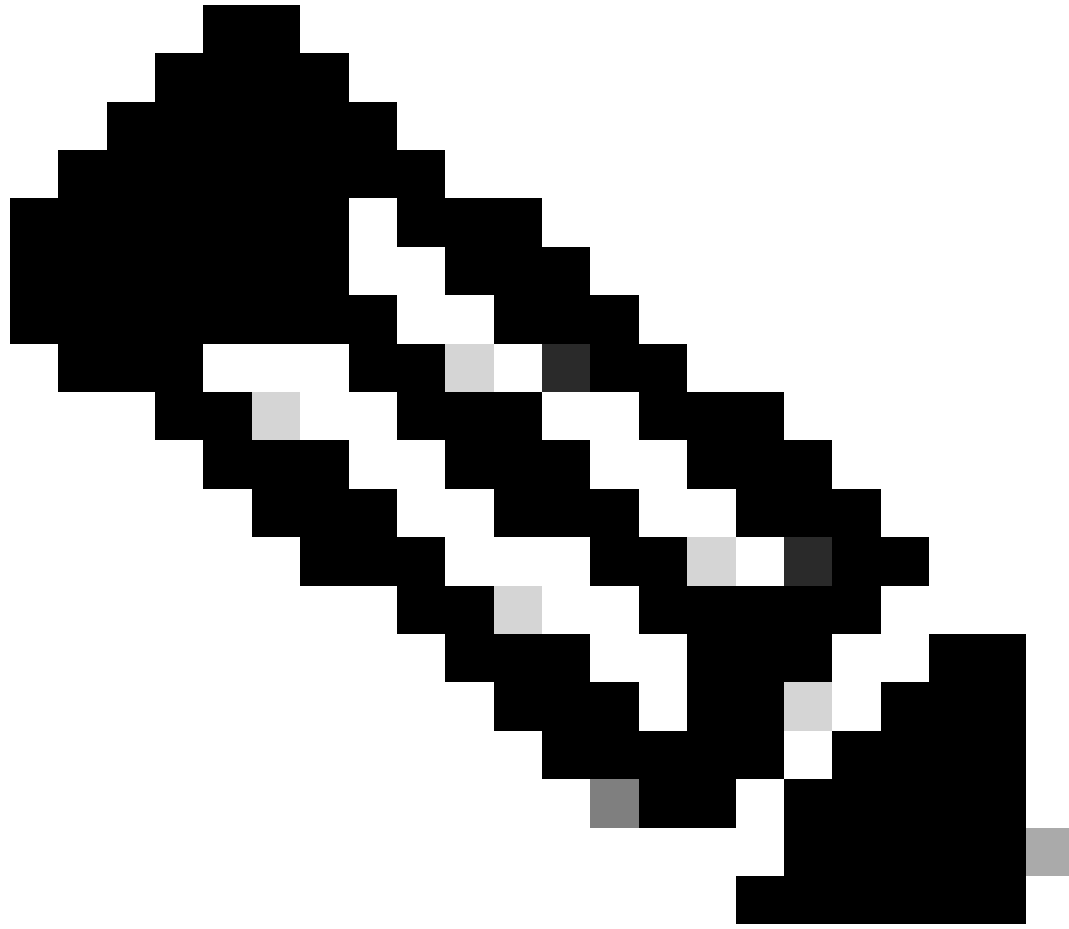

TAC. ةيصوت نودب ةيلمعلا هذهب مقت ال :ةظحالم

---

لقتسملا عضولا يف مداخلا عضو

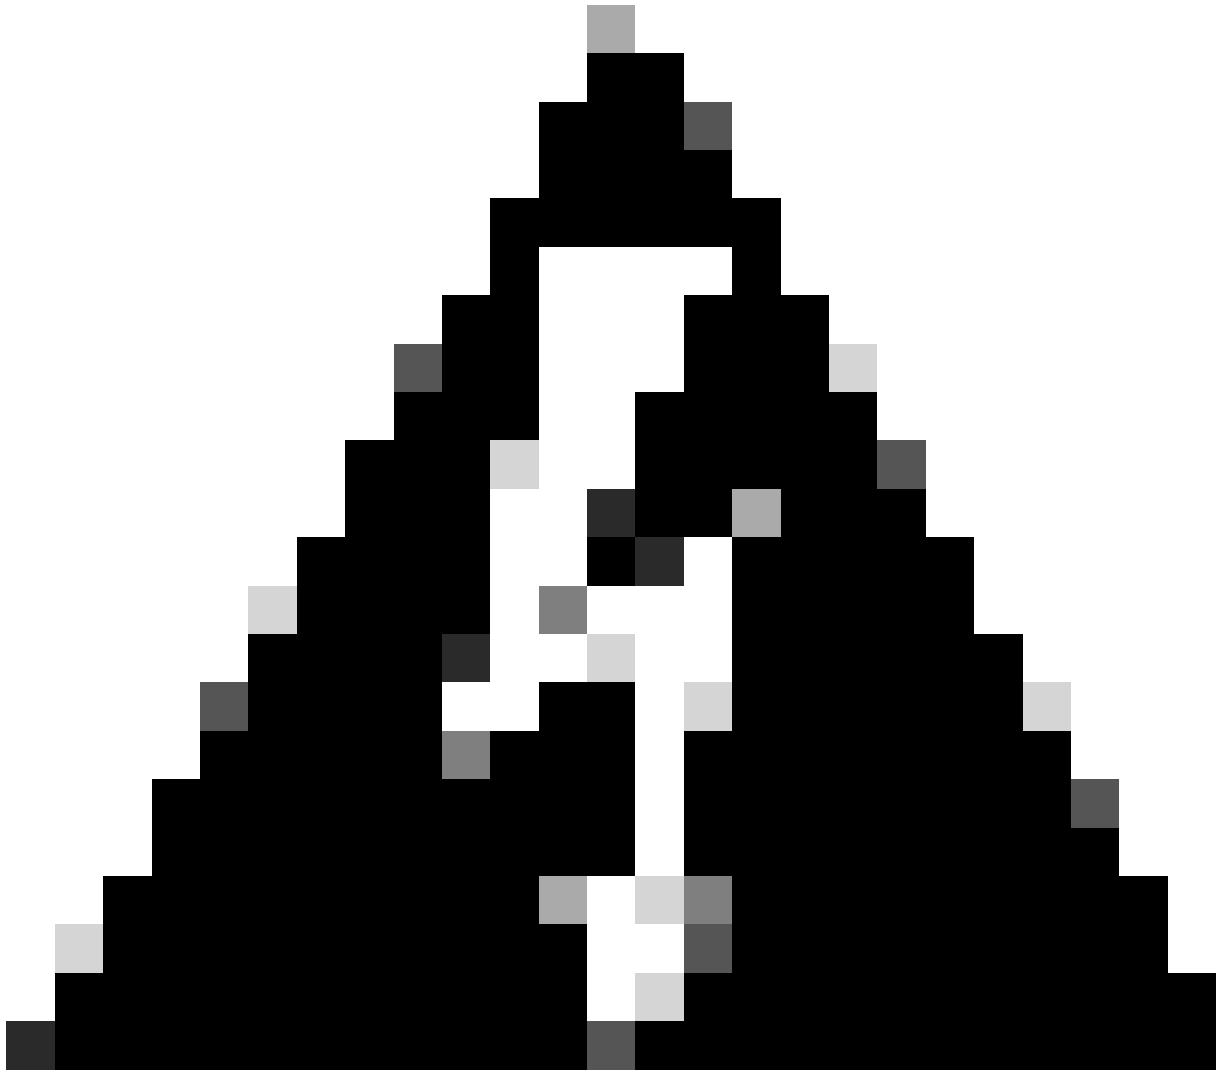

ءارجءا اذه ءء لبق مءاءءا لءغشء فاقءء نم ءكأء :رءءء

---

مءاءءا لءمءء ءاغءا 1. ءوطءءا

UCS. ءراءءا بءوءهءءا ءءا لءءءنا

X مءاءءا > لءمءاءا > ءزهءءا ءءا لءءءنا

Equipment / Rack-Mounts / Servers / Server 1

General | Inventory | Virtual Machines | Hybrid Display | Installed Firmware | SEL Logs | CIMC Ses

**Fault Summary**

0	0	1	1
---	---	---	---

**Status**


Overall Status : **Power Off**

[+ Status Details](#)

**Actions**

- Create Service Profile
- Associate Service Profile
- Set Desired Power State
- Boot Server
- Shutdown Server
- Reset
- Recover Server
- Server Maintenance**
- KVM Console >>
- SSH to CIMC for SoL >>
- Turn on Locator LED

**Physical Display**



**Properties**

ID	:
Product Name	:
Vendor	:
Revision	:
Asset Tag	:
Name	:
User Label	:
Unique Identifier	:
Service Profile	:
Locator LED	:

**Summary**

Number of Processors	:
Cores	:


لېغشت لښه اغل رتڅا و مداخله ناي ص قوف رونا

## Maintenance Server 1

You are attempting to perform server maintenance.  
Please select a maintenance task:

- Remove
- Re-acknowledge
- Decommission
- Diagnostic Interrupt
- Reset to Factory Default

**OK** **Cancel**

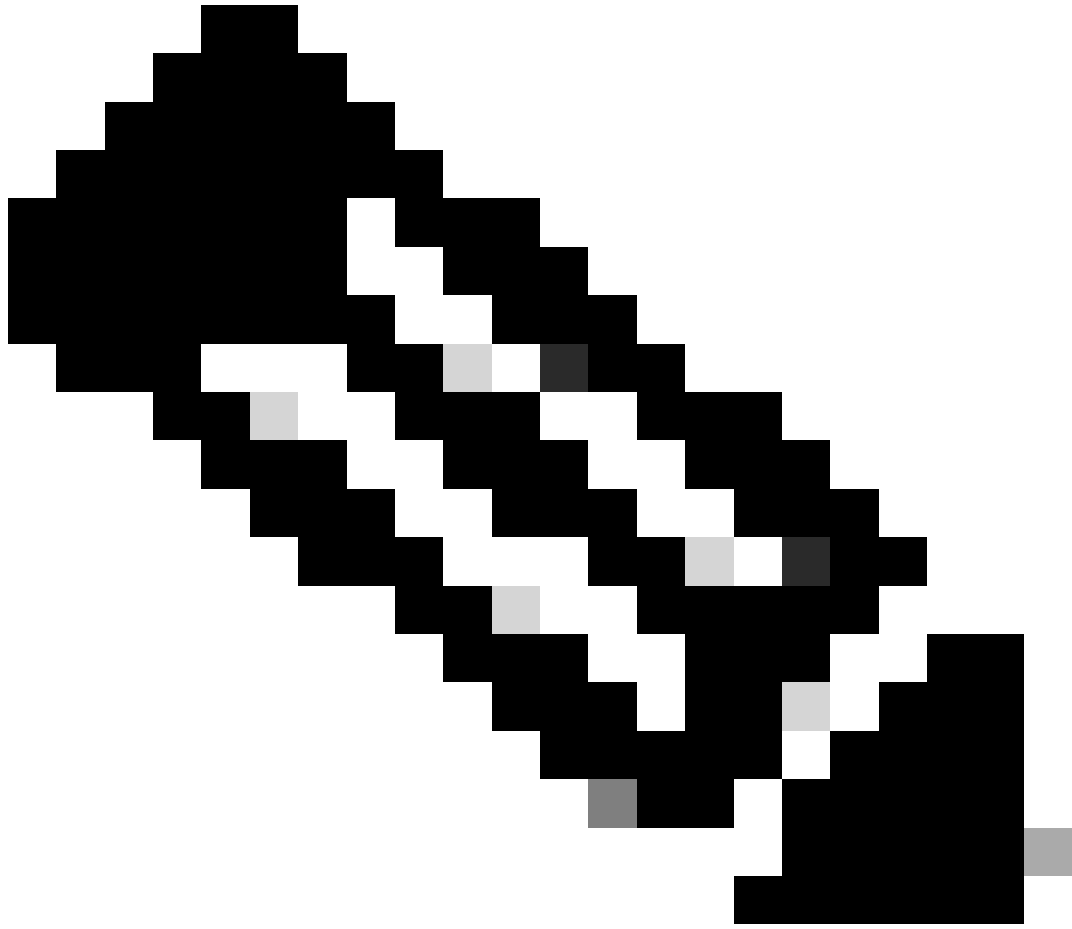

تحت هضرع متي لب ،لماوحلا قوف هضرع متي ال ،مداخال ليغشت فاقبي دنع :ةطخال م  
لماوح > هعيب كف مت ةزهجأ > ةزهجالا

---

مداخال ذفانم نيوكت مدع 2. ةوطخال

> ةتبات ةيظمن ةدحو > Fabric Interconnect A > Fabric Interconnect > Equipment | لقتنا  
x. ذفنملا > نرثي ذفانم

نيوكتلا اءال قوف رقنا





Copyright (c) 2022 Cisco Systems, Inc.

Press <F2> BIOS Setup : <F6> Boot Menu : <F7> Diagnostics

Press <F8> CIMC Setup : <F12> Network Boot

Bios Version : C240M5.4.2.2b.0.0613220203

Platform ID : C240M5

/ Loading Marvell SCSI Driver 1.1.17.1002

Processor(s) Intel(R) Xeon(R) Gold 6230 CPU @ 2.10GHz

Total Memory = 128 GB Effective Memory = 128 GB

Memory Operating Speed 2933 Mhz

M.2 SWRAID configuration is not detected. Switching to AHCI mode.

Cisco IMC IPv4 Address : 10.31.123.32

Cisco IMC MAC Address : 7C:31:0E:9F:12:80

Entering CIMC Configuration Utility ...



Cisco IMC Configuration Utility Version 2.0 Cisco Systems, Inc.

\*\*\*\*\*

NIC Properties

NIC mode		NIC redundancy	
Dedicated:	<input checked="" type="checkbox"/>	None:	<input checked="" type="checkbox"/>
Shared OCP:	<input type="checkbox"/>	Active-standby:	<input type="checkbox"/>
Cisco Card:		Active-active:	<input type="checkbox"/>
Riser1:	<input type="checkbox"/>	VLAN (Advanced)	
Riser3:	<input type="checkbox"/>	VLAN enabled:	<input type="checkbox"/>
MLom:	<input type="checkbox"/>	VLAN ID:	1
Shared OCP Ext:	<input type="checkbox"/>	Priority:	0

IP (Basic)

IPv4:	<input checked="" type="checkbox"/>	IPv6:	<input type="checkbox"/>
DHCP enabled	<input type="checkbox"/>		
CIMC IP:	1.1.1.11		
Prefix/Subnet:	255.255.255.0		
Gateway:	1.1.1.1		
Pref DNS Server:	1.1.1.2_		

Smart Access USB

Enabled

\*\*\*\*\*

<Up/Down>Selection <F10>Save <Space>Enable/Disable <F5>Refresh <ESC>Exit  
<F1>Additional settings

يضا رتفالا عن صملا دادع! نيكمت و F1 ىلع طغضا

```
Cisco IMC Configuration Utility Version 2.0 Cisco Systems, Inc.
*****
Common Properties
Hostname:      C220-WZP26360761
Dynamic DNS:   [X]
DDNS Domain:
FactoryDefaults
Factory Default: [X]
Default User(Admin)
Enter New Default User password:
Re-Enter New Default User password:
Port Properties
Auto Negotiation: [X]
Admin Mode      Operation Mode
Speed [1000/100/10Mbps] :      Auto      1000
Duplex mode [half/full] :      Auto      full
Port Profiles
Reset: [ ]
Name:
*****
<Up/Down>Selection  <F10>Save  <Space>Enable/Disable  <F5>Refresh  <ESC>Exit
<F2>Previous Page
```

مداخل لي غشت ة داع او تاريخي غت التا ظ فحل F10 لى ع ط غضا

لقت س م ل ا ع ض و ل ا لى CIMC ني وكت 4. ة و ط خ ل ا

ني وكت ة ا د ا لى ل و خ د ل ل F8 ط غ ض ا و Cisco ة م ئ ا ق لى ل ل ص ت لى ت ح م د ا خ ل ا د ي ه م ت ة ل م ع ب ق ا ر  
ل ي خ ا ة ر م ة د ع ا س م ل ا Cisco IMC

ل ي ل ا ت ل ا ني و ك ت ل ا ق ي ب ط ت :

- ص ص خ م لى ل د د ح م ل ا (NIC) ة ك ب ش ل ا ة ه ج ا و ة ق ا ط ب ع ض و
- IP لى IPv4
- ر ت و ي ب م ك ل ا ب ة ص ا خ ل ا ا ه س ف ن ة ي ع ر ف ل ا ة ك ب ش ل ا ي ف IP د و ج و ع م CIMC
- ء ش ا ل لى ل NIC ر ا ر ك ت
- ل ا VLAN


Cisco IMC Configuration Utility Version 2.0 Cisco Systems, Inc.


```
*****
NIC Properties
NIC mode                               NIC redundancy
Dedicated:      [X]                   None:           [X]
Shared OCP:     [ ]                   Active-standby: [ ]
Cisco Card:
  Riser1:       [ ]                   Active-active:  [ ]
  Riser3:       [ ]                   VLAN (Advanced)
  MLom:         [ ]                   VLAN enabled:   [ ]
Shared OCP Ext: [ ]                   VLAN ID:        1
                                           Priority:        0
IP (Basic)
IPV4:           [X]                   IPV6:           [ ]
DHCP enabled    [ ]
CIMC IP:        11.11.11.11
Prefix/Subnet:  255.255.255.0
Gateway:        11.11.11.1
Pref DNS Server:
Smart Access USB
Enabled         [ ]
*****
<Up/Down>Selection  <F10>Save  <Space>Enable/Disable  <F5>Refresh  <ESC>Exit
<F1>Additional settings
```

مداخل لى غشت ة داعإو تاريي غتلا ظفحل F10 لى طغضا

بى و ضرعتسم حت فاو مداخل لى لى ة لى لى ة رادإلا ذفنم ب رتوي ب مكلال لى صوت ب مق

أ https://x.x.x.x هنى وكتب تمق يذال IP ناونع مدختسأ

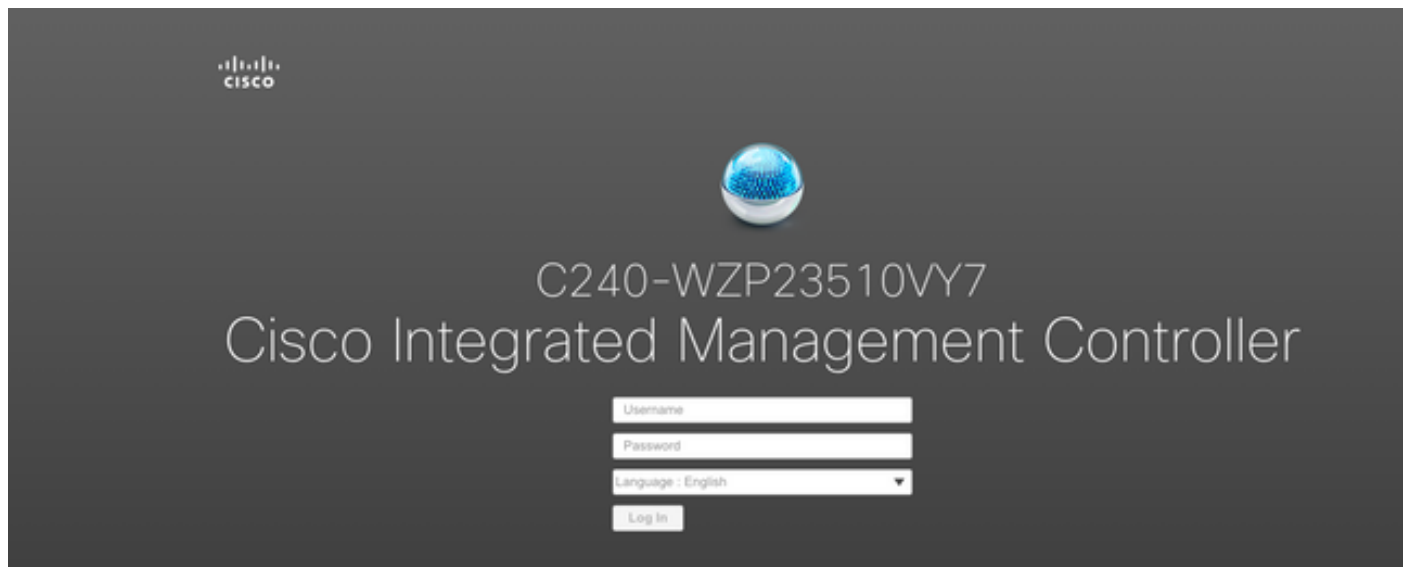

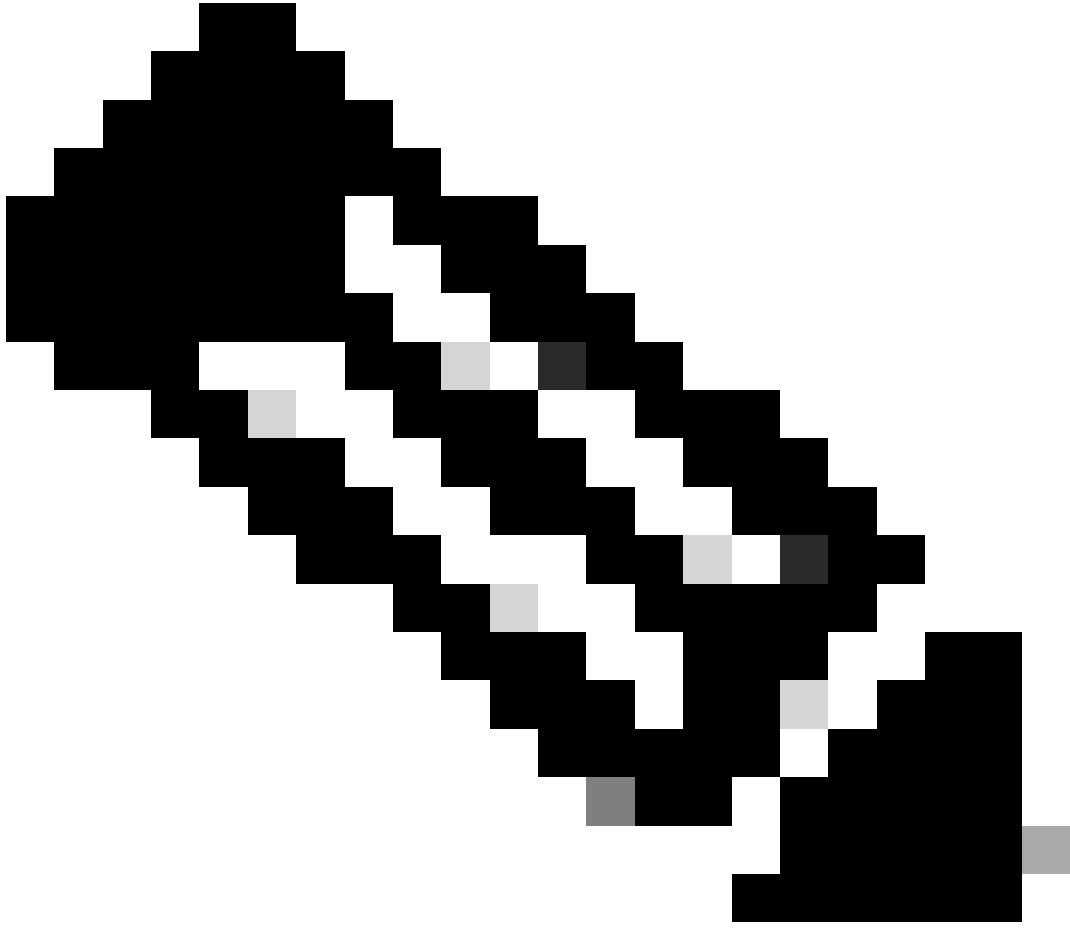

رورملا ةملك يه لوؤسملا مدختسمل ةيضارتفالا رورملا ةملك :ةظحالم

---

يلاحلا CIMC رادصإو CIMC هجوم ضرع

Server Properties

Product Name: UCS C240 MSSD  
Serial Number: WZP23510VY7  
PID: UCSC-C240-MSSD  
UUID: F0E2F2ED-AD46-4328-8E14-C3E1970B9539  
BIOS Version: C240M5.4.2.2b.0.0613220203  
Description:  
Asset Tag: Unknown


Cisco Integrated Management Controller (Cisco IMC) Information

Hostname: C240-WZP23510VY7  
IP Address: 10.21.100.100  
MAC Address: 7C:31:0E:9F:12:80  
Firmware Version: 4.2(2a)  
Current Time (UTC): Mon Sep 25 03:04:40 2023  
Local Time: Mon Sep 25 03:04:40 2023 UTC +0000 (NTP)  
Timezone: UTC

Chassis Status


- Power State: On
- Post Completion Status: Completed
- Overall Server Status: Good
- Temperature: Good
- Overall DIMM Status: Good
- Power Supplies: Good
- Fans: Good
- Locator LED: Off
- Overall Storage Status: Good

Server Utilization

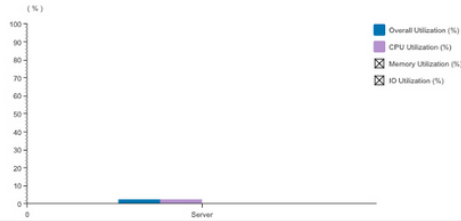

Save Changes | Reset Values

# تباثلال چمانربلا رادصا نيوكت ةداعإ

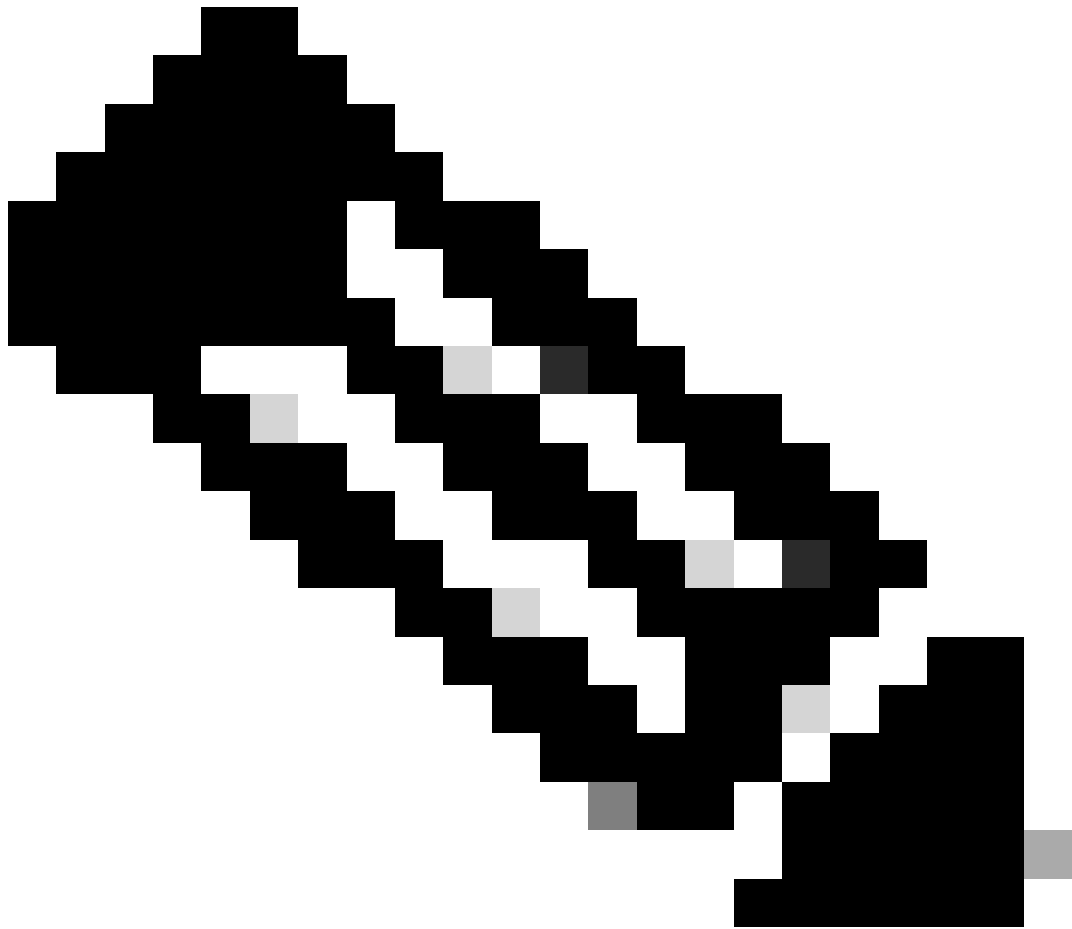

دعاإب ةدشب ىصوي، UCSM في رخأ ةرم كب صاخلا مداخل جمد ةلاح في: ةطخال  
تباثلا جمانربلا رادصا نيوكت

ISO (Host Upgrade Utility) ليزنت 1. ةوطخال

عقوم ىلع ISO ليزنت كنكمي. HUU لالخنم لاثمتلا دعاإمت  
<https://software.cisco.com/download>

ISO. لولعلا لاثمتلا ةطيرخو سواملا وويديفلا وحيتافملا ةحول قالا طإ 2. ةوطخال

KVM قالا طإ ىلع رقناو CIMC ىلا لقتنا، لالجال رادصا ل HUU ليزنتب موقت نأ درجمب

The screenshot displays the Cisco Integrated Management Controller (CIMC) web interface. The top navigation bar includes the Cisco logo, the title "Cisco Integrated Management Controller", and the user "admin@". The main content area is divided into two sections: "Server Properties" and "Cisco Integrated Management Controller (Cisco IMC) Information".

**Server Properties:**

- Product Name: UCS C240 MSSD
- Serial Number: WZP23510VY7
- PID: UCSC-C240-MSSD
- UIID: F0E2F2ED-AD46-4328-8E14-C3E1970B9539
- BIOS Version: C240M5.4.2.2b.0.0613220203
- Description: [Empty text box]
- Asset Tag: Unknown

**Cisco Integrated Management Controller (Cisco IMC) Information:**

- Hostname: C240-WZP23510VY7
- IP Address: [Redacted]
- MAC Address: 7C:31:0E:9F:12:80
- Firmware Version: 4.2(2a)
- Current Time (UTC): Mon Sep 25 03:04:40 2023
- Local Time: Mon Sep 25 03:04:40 2023 UTC +0000 (NTP)
- Timezone: UTC

**Chassis Status:**

- Power State: On
- Post Completion Status: Completed
- Overall Server Status: Good
- Temperature: Good
- Overall DIMM Status: Good
- Power Supplies: Good
- Fans: Good
- Locator LED: Off
- Overall Storage Status: Good

**Server Utilization:**

A bar chart showing utilization percentages for a single server. The Y-axis represents percentage from 0 to 100. The X-axis is labeled "Server". The legend indicates: Overall Utilization (%), CPU Utilization (%), Memory Utilization (%), and IO Utilization (%). The chart shows very low utilization for all categories.

Buttons at the bottom right: Save Changes, Reset Values.


ةيره اظلا ةزهجالا طيشنتب مقو ةيره اظلا طئاسولا قوف رقنا، vKVM لىغشت درجمب

Create Image  
Activate Virtual Devices

Cisco Systems, Inc.  
Configuring and testing memory..

Cisco IMC IPv4 : 10.31.123.32  
MAC ADDR : 7C:31:0E:9F:12:80

ة طي رخلل CD/DVD صرق ىلع HUU طي طخت

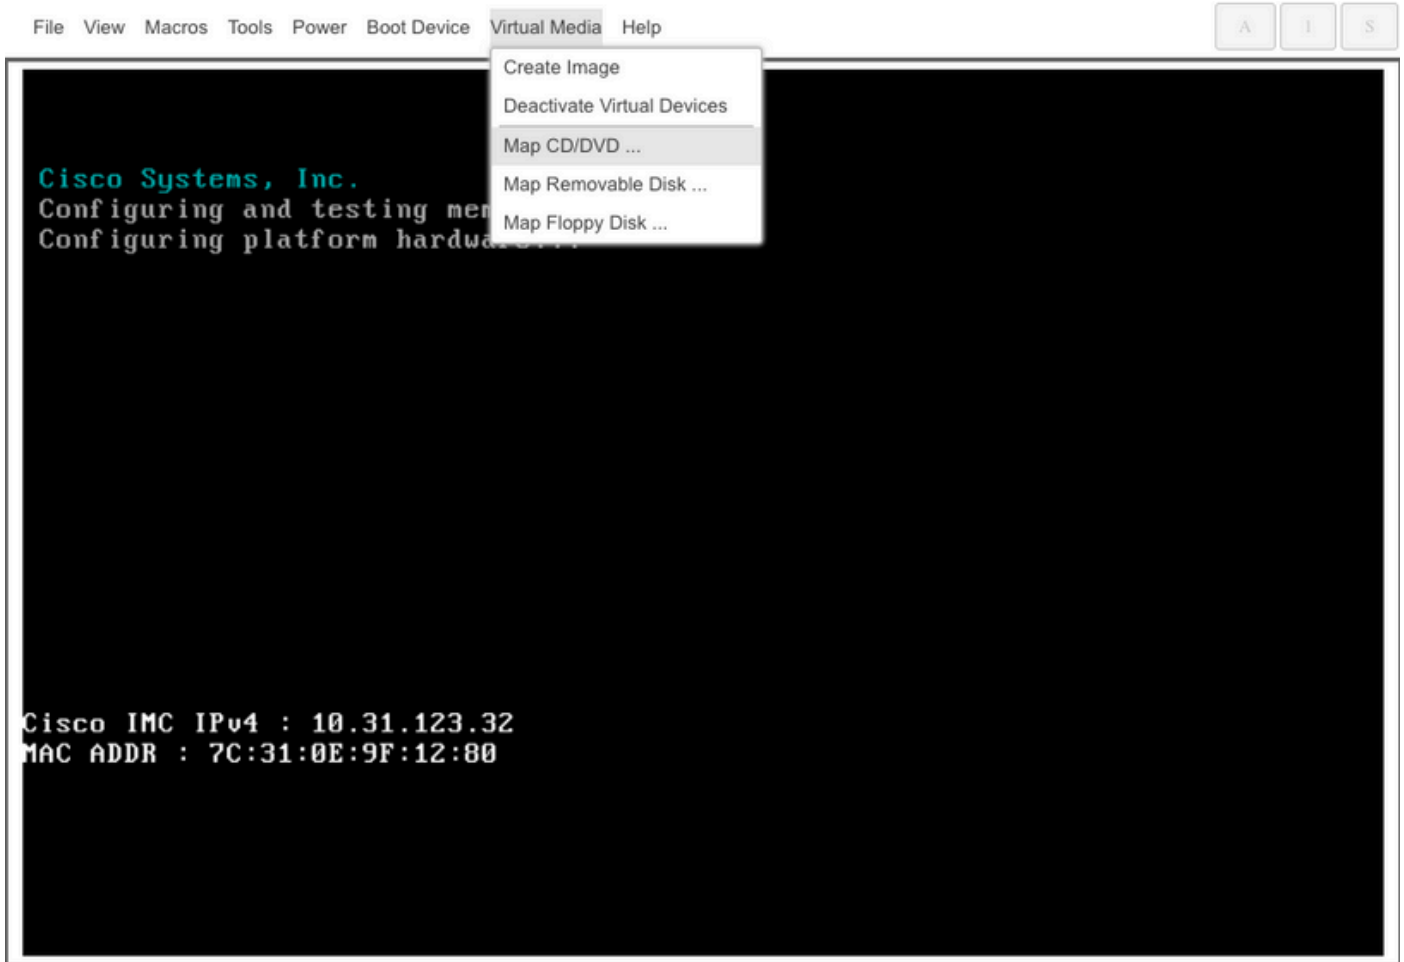

HUU ISO مادختساب لي محت لال 3. ةوطخ لال

ديهمت لال ةمئاق لال لوخد لال F6 طغضاو Cisco ةمئاق لال لصت لال مدخال لال ديهمت ةي لمع ب قار





Copyright (c) 2022 Cisco Systems, Inc.

Press <F2> BIOS Setup : <F6> Boot Menu : <F7> Diagnostics  
Press <F8> CIMC Setup : <F12> Network Boot  
Bios Version : C240M5.4.2.2b.0.0613220203  
Platform ID : C240M5

Processor(s) Intel(R) Xeon(R) Gold 6230 CPU @ 2.10GHz  
Total Memory = 128 GB Effective Memory = 128 GB  
Memory Operating Speed 2933 Mhz  
M.2 SWRAID configuration is not detected. Switching to AHCI mode.

Cisco IMC IPv4 Address : 10.31.123.32  
Cisco IMC MAC Address : 7C:31:0E:9F:12:80

Entering Boot Menu ...

ه.ن.ي.ع.ت.م.ت.ي.ذ.ل.ا. HUU ISO د.ي.م.ت.ل. vKVM-Mapped vDVD رايخ ددح.

Please select boot device:

UEFI: Built-in EFI Shell  
UEFI: PXE IPv4 Intel(R) Ethernet Controller X550  
UEFI: HTTP IPv4 Intel(R) Ethernet Controller X550  
UEFI: HTTP IPv6 Intel(R) Ethernet Controller X550  
UEFI: PXE IPv4 Intel(R) Ethernet Controller X550  
UEFI: HTTP IPv4 Intel(R) Ethernet Controller X550  
UEFI: HTTP IPv6 Intel(R) Ethernet Controller X550  
UEFI: PXE IPv4 Cisco NIC 5c:71:0d:c4:0f:d0  
UEFI: HTTP IPv4 Cisco NIC 5c:71:0d:c4:0f:d0  
UEFI: HTTP IPv6 Cisco NIC 5c:71:0d:c4:0f:d0  
UEFI OS  
UEFI: Cisco vKVM-Mapped vDVD1.24  
Enter Setup

↑ and ↓ to move selection  
ENTER to select boot device  
ESC to boot using defaults





## HOST UPGRADE UTILITY

### Cisco Software License Agreement

IMPORTANT: PLEASE READ THIS END USER LICENSE AGREEMENT CAREFULLY. DOWNLOADING, INSTALLING OR USING CISCO OR CISCO-SUPPLIED SOFTWARE CONSTITUTES ACCEPTANCE OF THIS AGREEMENT.

CISCO SYSTEMS, INC. OR ITS SUBSIDIARY LICENSING THE SOFTWARE INSTEAD OF CISCO SYSTEMS, INC. ("CISCO") IS WILLING TO LICENSE ITS SOFTWARE TO YOU ONLY UPON THE CONDITION THAT YOU ACCEPT ALL OF THE TERMS CONTAINED IN THIS END USER LICENSE AGREEMENT PLUS ANY ADDITIONAL LIMITATIONS ON THE LICENSE SET FORTH IN A SUPPLEMENTAL LICENSE AGREEMENT ACCOMPANYING THE PRODUCT (COLLECTIVELY THE "AGREEMENT"). TO THE EXTENT OF ANY CONFLICT BETWEEN THE TERMS OF THIS END USER LICENSE AGREEMENT AND ANY SUPPLEMENTAL LICENSE AGREEMENT, THE SUPPLEMENTAL LICENSE AGREEMENT SHALL APPLY. BY DOWNLOADING, INSTALLING, OR USING THE SOFTWARE, YOU ARE BINDING YOURSELF AND THE BUSINESS ENTITY THAT YOU REPRESENT (COLLECTIVELY, "CUSTOMER") TO THE AGREEMENT. IF YOU DO NOT AGREE TO ALL OF THE TERMS OF THE AGREEMENT, THEN CISCO IS UNWILLING TO LICENSE THE SOFTWARE TO YOU AND (A) YOU MAY NOT DOWNLOAD, INSTALL OR USE THE SOFTWARE, AND (B) YOU MAY RETURN THE SOFTWARE (INCLUDING ANY UNOPENED CD PACKAGE AND ANY WRITTEN MATERIALS) FOR A FULL REFUND. OR, IF THE SOFTWARE AND WRITTEN MATERIALS ARE SUPPLIED AS PART OF ANOTHER PRODUCT, YOU MAY RETURN THE ENTIRE PRODUCT FOR A FULL REFUND. YOUR RIGHT TO RETURN AND REFUND EXPIRES 30 DAYS AFTER PURCHASE FROM CISCO OR AN AUTHORIZED CISCO RESELLER, AND APPLIES ONLY IF YOU ARE THE ORIGINAL END USER PURCHASER. THE FOLLOWING TERMS OF THE AGREEMENT GOVERN CUSTOMER ACCESS AND USE OF EACH CISCO OR CISCO-SUPPLIED SOFTWARE ("SOFTWARE"), EXCEPT TO THE EXTENT: (A) THERE IS A SEPARATE SIGNED CONTRACT BETWEEN CUSTOMER AND CISCO GOVERNING CUSTOMER USE OF THE SOFTWARE, OR (B) THE SOFTWARE INCLUDES A SEPARATE LICENSE AGREEMENT OR THIRD PARTY LICENSE AGREEMENT AS PART OF THE INSTALLATION AND/OR DOWNLOAD PROCESS GOVERNING CUSTOMER USE OF THE SOFTWARE. TO THE EXTENT OF A CONFLICT BETWEEN THE PROVISIONS OF THE FOREGOING DOCUMENTS, THE ORDER OF PRECEDENCE SHALL BE

Reject

Accept

طيشنتو شي دحت يلع رقنا مث ،تانوكمال لك دحو مدقتمال عضولا ل لقتنا

CISCO HOST UPGRADE UTILITY v4.2.2a | UCSC-C240-M5SD

Components Storage Devices Verify Last Update

7 items found 10 per page 1 of 1

<input checked="" type="checkbox"/>	Name	Slot	Running Version	Package Version	Status
<input checked="" type="checkbox"/>	Cisco UCS VIC 1455	1	5.2(2b)	5.2(2b)	-
<input checked="" type="checkbox"/>	Intel X550 LOM(Enable Security Checks)	L	0x800016F9-1.826.0	0x800016F9-1.826.0	-
<input checked="" type="checkbox"/>	Cisco UCS VIC 1457 MLOM	MLOM	5.2(2b)	5.2(2b)	-
<input checked="" type="checkbox"/>	Cisco 12G Modular SAS HBA (max 16 d	MRAID	20.00.02.01	20.00.02.01	-
<input checked="" type="checkbox"/>	Cisco Boot optimized M.2 Raid controller	MSTOR-RAID	2.3.17.1014	2.3.17.1014	-
<input checked="" type="checkbox"/>	CIMC	N/A	4.2(2a)	4.2(2a)	-
<input checked="" type="checkbox"/>	BIOS	N/A	C240M5.4.2.2b.0.06...	C240M5.4.2.2b.0.06...	-

Selected 7 of 7 Show Selected Unselect All

Toggle 'Advanced Mode' for factory reset, CMC secure boot, update, and activate a single or group of components.  Advanced Mode

Progress 0% More Actions

لي غش التل اداع اب مداخل موقيو ةروصلا اداع نم يه تني يتح رطتنا

UCS Manager الى Integrated Server جم انرب


ةيضارتفال ا عنصملا تادادع الى ع CIMC طبض 1. ةوطخل

لقتسملا عضولا يف مداخل عضو الى ع 3 ةوطخل يف ةدوجوملا اهسفن تاوطخل ررك

مداخ ذفانمك اهن يوكت داعملا ذفانملا - 2. ةوطخل

> ةتبات ةي طمن ةدحو > Fabric Interconnect A > Fabric Interconnect > Equipment الى لقتنا  
x. ذفنملا ا نرنثي ذفانم

مداخ ذفنمك نيوكتلا دحو نيوكتلا اداع قوف رقنا

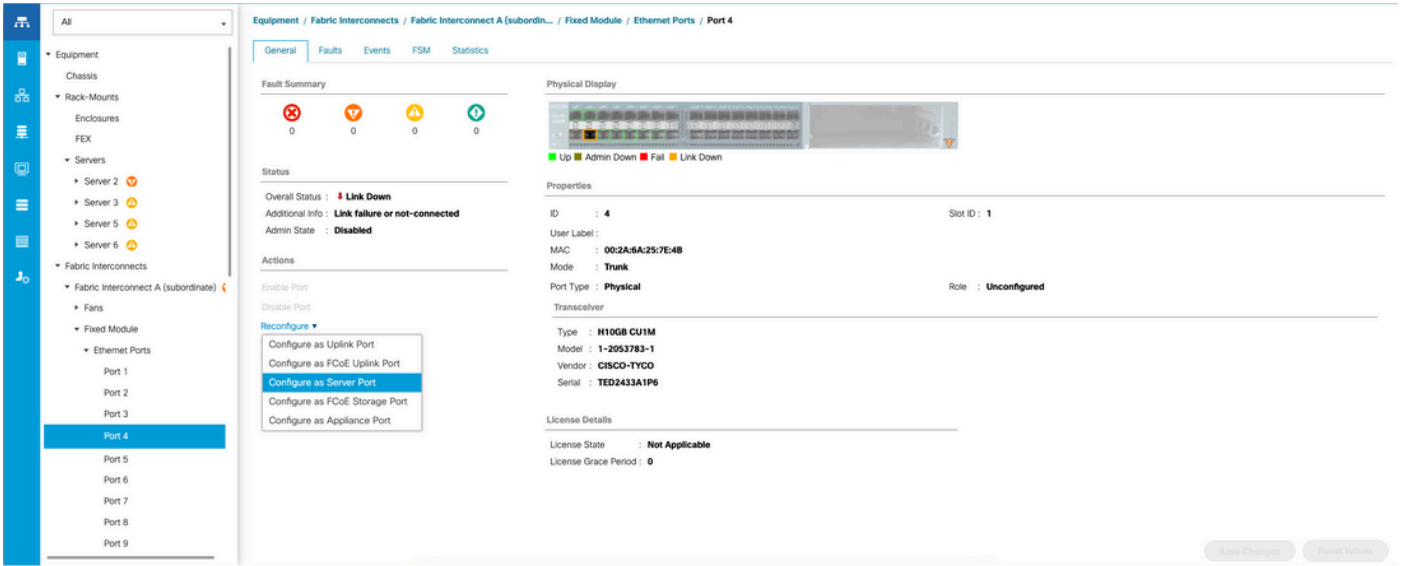

## Fabric Interconnect B تاهج اول تاوخلال س فن ررك

ةي طمنللا ةدحول > B ي جيسنللا طبرلا ةطقن > ي جيسنللا طبرلا طاقن > زاهجال لىل لقتنا X. ذفنملا > انترنثيال ذفانم > ةتباثلا


مداخ ذفنمك نيوكتلا دحو نيوكتلا ةداع قوف رقنا

لوحمل التالبك ليصوت 3 ةوخلال


VIC ةقاطب نم FI-B ب 3 ذفنملا و FI-A ب 1 ذفنملا ليصوت

نييعةال ةداع مداخ 4 ةوخلال

ظفحامث ، ليغشلتلا ةداعال رايخالا ةناخ دحو ، لم اوخلال > اهنع ينغتسم > ةزهجال لىل لقتنا تارييغتلا

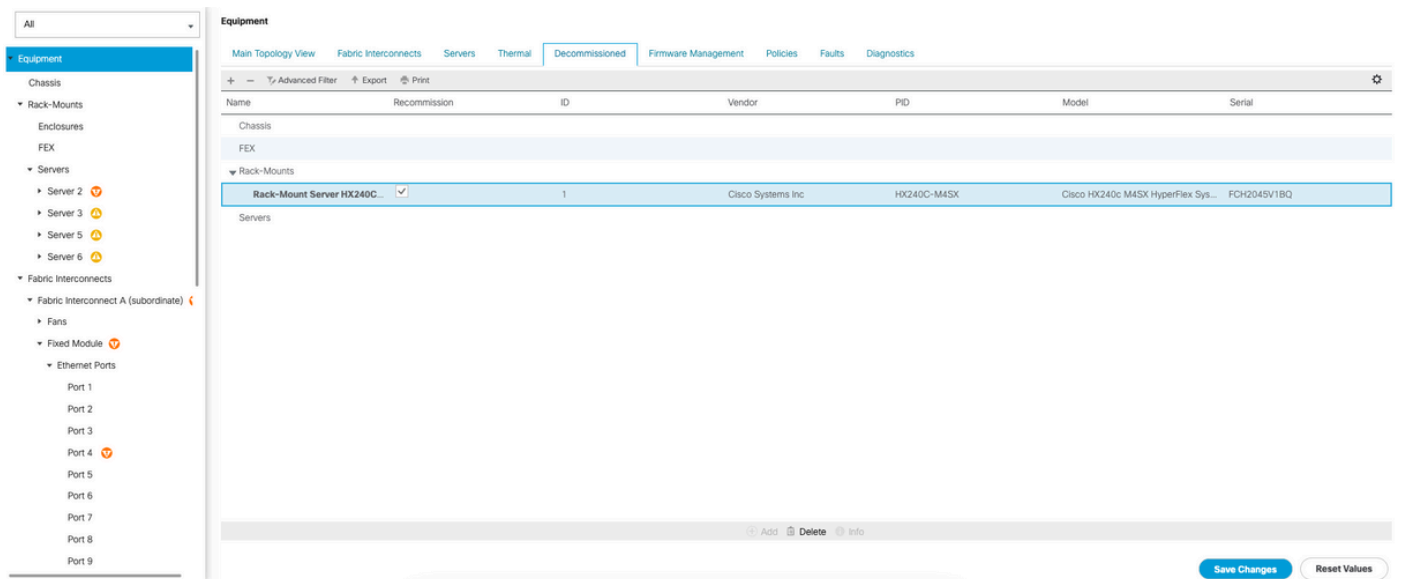

يرخا ةرم مداخلال يرت يتح رطتنا

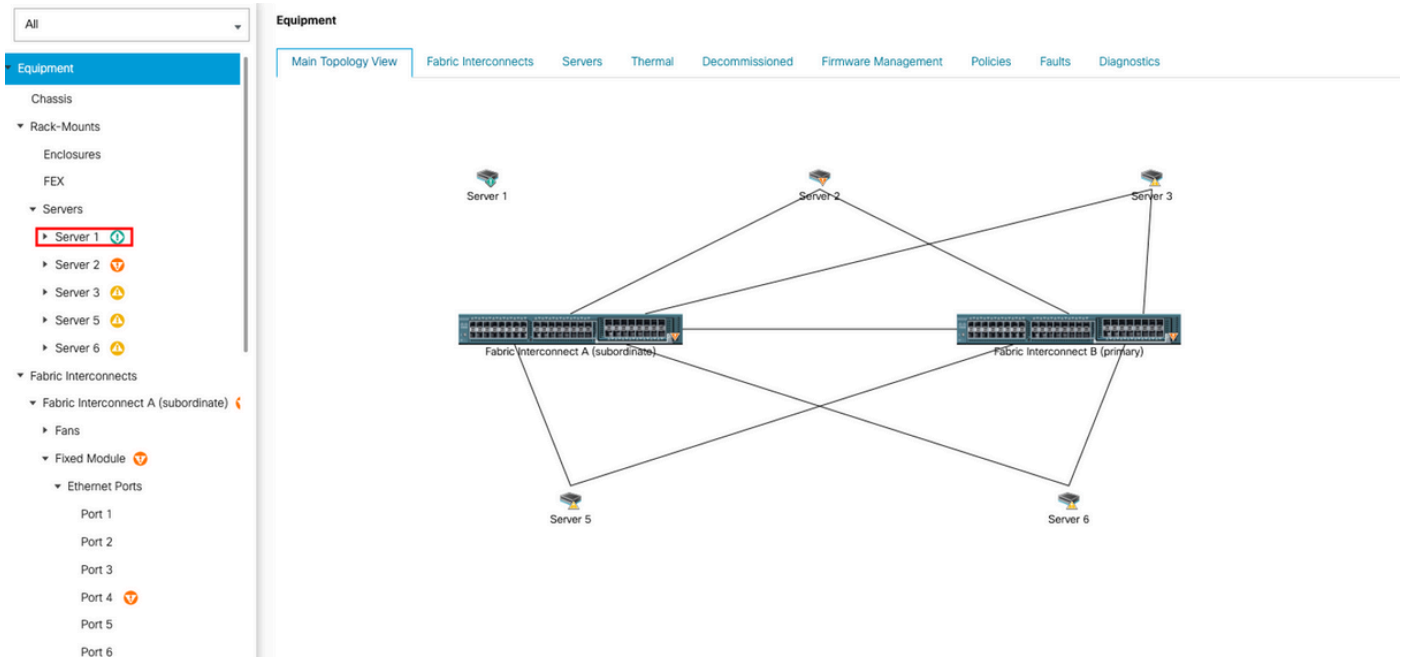

FSM ربع فاشتك! لدان تبقرار عي طتسي تنأ

Equipment / Rack-Mounts / Servers / Server 1

General Inventory Virtual Machines Hybrid Display Installed Firmware SEL Logs CIMC Sessions VIF Paths Power Control Monitor Health Diagnostics Faults Events **FSM** Statistics Temperatures Power

FSM Status : **In Progress**  
 Description :  
 Current FSM Name : **Discover**  
 Completed at :  
 Progress Status :  14%  
 Remote Invocation Result : **Not Applicable**  
 Remote Invocation Error Code : **None**  
 Remote Invocation Description :

Step Sequence

Order	Name	Description	Status	Timestamp	Retried
1	Discover Sw Port Details Local	Fetching adaptor connectivity details for ...	Skip	2023-09-26T17:02:14Z	0
2	Discover Sw Port Details Peer	Fetching adaptor connectivity details for ...	Skip	2023-09-26T17:02:14Z	0
3	Discover Sw Configure Port Channel Local	Configuring port channel for server 1/FS...	Skip	2023-09-26T17:02:14Z	0
4	Discover Sw Configure Port Channel Peer	Configuring port channel for server 1/FS...	Skip	2023-09-26T17:02:14Z	0
5	Discover Bmc Configure Conn Local	Configuring connectivity on CIMC of serv...	Success	2023-09-26T17:02:14Z	1
6	Discover Sw Configure Port Channel Peer	Configuring port channel for server 1/FS...	Success	2023-09-26T17:02:15Z	1

Name :  
 Status :  
 Description :  
 Order :  
 Retried :  
 Timestamp :

Save Changes Reset Values

ءدبلل قئاقء ءءء فاشءكالا قرءءسي ءق :ءظءالم

(SP) ءمءءالا ففرءء فلم نارئقا اءبف؁ فاشءكالا ءفلمء نم مءءالا فءءنن ف نأ ءرءمب

Equipment / Rack-Mounts / Servers / Server 1

General Inventory Virtual Machines Hybrid Display Installed Firmware SEL Logs CIMC Sessions VIF Paths Power Control Monitor Health Diagnostics Faults Events **FSM** Statistics Temperatures Power

FSM Status : **In Progress**

Description :

Current FSM Name : **Associate**

Completed at :

Progress Status : 33%

Remote Invocation Result : **Not Applicable**

Remote Invocation Error Code : **None**

Remote Invocation Description :

Step Sequence

Order	Name	Description	Status	Timestamp	Retried
1	Associate Download Images	Download images from operations mana...	Skip	2023-09-26T23:03:45Z	0
2	Associate Copy Remote	Copy images to peer node(FSM-STAGE...	Skip	2023-09-26T23:03:45Z	0
3	Associate Update IBMC Fw	Update CIMC firmware of server 1(FSM-...	Skip	2023-09-26T23:03:45Z	0
4	Associate Wait For IBMC Fw Update	Wait for CIMC firmware completion on se...	Skip	2023-09-26T23:03:45Z	0
5	Associate Config User Access	Configuring external user access(FSM-S...	In Progress	2023-09-26T23:03:47Z	1
6	Associate Associate IBMC C...	Associate CIMC Remote of server 1(CIMC...	Skip	2023-09-26T23:03:45Z	0

Name :  
Status :  
Description :  
Order :  
Retried :  
Timestamp :

Save Changes | Reset Values



جانات إالاة لملع ىلإ هتداع إومداخ لاديهمت كنكمي ،نارتقالاو فاشتكالال نمةاهت نالادعب

## ةلص تاذ تامولعم

- [Cisco UCS Manager جمانرب عم UCS C-Series لمات](#)
- [UCS C-Series مداخة دعاسم تاولأ](#)
- [Cisco Systems - تادنتس مل او ينقتللا معدلا](#)

ةمچرتل هذه لوج

ةللأل تاي نقتل نمة ومة مادختساب دن تسمل اذة Cisco تمةرت  
ملاعلاء انء مء مء نمة دختسمل معد و تمة مء دقتل ةر شبل او  
امك ةق قء نوك ت نل ةللأل ةمچرت لصف أن ةظحال مء ءرء. ةصاأل مء تءل ب  
Cisco ةللخت. فرتمة مچرت مء دقء ةللأل ةل فارتحال ةمچرتل عم لاعل او  
ىل إلمءءاد ءوچرلاب ةصوء و تامةرتل هذه ةقء نء اهءل وئس م Cisco  
Systems (رفوتم طبارل) ةلصلأل ةزىل ءن إلل دن تسمل