



Configuring VXLAN Flood and Learn

This chapter contains the following sections:

- [Information About VXLAN, on page 1](#)
- [Configuring VXLAN, on page 11](#)
- [Verifying the VXLAN Configuration, on page 17](#)
- [Configuration Examples, on page 18](#)
- [Feature History for VXLAN Flood and Learn, on page 26](#)

Information About VXLAN

VXLAN with vPC Overview

The vSwitch can be dually connected to the vPC via a hypervisor VLAN. The VTEP on L1 and L2 is identified by the same IP address. vPC is active/active for East-West traffic (from the physical server to the VMs behind vSwitch). It is active/standby with the elected forwarder for packets from North-South traffic.

Active/Active scheme:

- Both switches perform encapsulation and decapsulation between the VXLAN tunnel (on the access side) and the physical servers. To prevent duplicate copies, we rely on the VSL bit.
- If a packet comes in on hypervisor VLAN on a switch it is bridged to other peers via the peerlink. The decapsulated copy is prevented from going over the peer link (using reserved flag CBL scheme). Both switches bridge locally on the hypervisor VLAN and decapsulate and bridge in the tenant VNI (the VSL bit prevents a duplicate copy from being sent to the vPC legs).
- If a packet comes into the tenant VNI from the physical server, it is bridged to the vPC peer. The VXLAN tunnel encapsulated copy is blocked from going over the peerlink using LTL+1 logic.

Active/Standby scheme:

- Since hardware does not have a mechanism to prevent both switches from sending and receiving packets to and from the North, one of the vPC peers is selected as the forwarder by PIM.

VXLAN Layer 2 Gateway

The VXLAN Layer 2 gateway bridges traffic between physical servers and VM's behind vSwitches that are in the same VNI.


- Connectivity of vSwitches to Cisco Nexus 7000 is via a Layer 2 port through a VLAN which is called a hypervisor VLAN. One of the requirements for a VXLAN gateway is that the hypervisor VLAN should be Layer 3 enabled (SVI configured) and be a member of the core VRF.
- Traffic from the physical server is mapped to segment (VNI) using VSI configuration.
- Traffic from VMs behind vSwitches are encapsulated in VXLAN format with VNI information from the server to which it belongs. The VNI identifies the bridge-domain that both the physical server and the virtual servers are a part.
- For packets coming from vSwitches, the Layer 2 VXLAN gateway strips the VXLAN header and identifies the bridge-domain before bridging the packet to the physical server. Similarly, when physical servers talk to VM's behind vSwitches, the VXLAN header is appended with appropriate VNI information before sending it to the vSwitches.
- VXLAN uses the control multicast group for broadcast, unknown unicast and multicast (BUM) traffic. When the control multicast group is configured on the vSwitch, it sends IGMP reports to the Cisco Nexus 7000 switch on the hypervisor VLAN . This results in Layer 2 multicast state creation for the control multicast group on the hypervisor VLAN. Since the hypervisor VLAN is Layer 3 enabled on the core VRF, it triggers a PIM join and Layer 3 multicast state creation. Thus, BUM traffic is bridged to locally connected vSwitches via Layer 2 multicast bridging and to remote vSwitches behind Layer 3 cloud via Layer 3 multicast routing.

VXLAN Layer 3 Gateway

Layer 3 VXLAN gateway enables routing between different VNIs. The Cisco Nexus 7000 can be placed as a pure Layer 3 routing box, which does inter VNI routing or it can be placed along with Layer 2 VXLAN gateway functionality. To enable Layer 3 VXLAN functionality, BDI has to be configured on the tenant VNI and the tenant VRF has to be different from the core VRF.

All VMs and physical servers and VNIs belonging to the same tenants can communicate. Any packet that needs to be routed across VNIs needs to be sent to the Layer 3 gateway switch, by setting the outer IP to the Layer 3 gateway IP, and the inner DMAC to be the Layer 3 gateway MAC.

Figure 1: Layer 2 VXLAN Topology

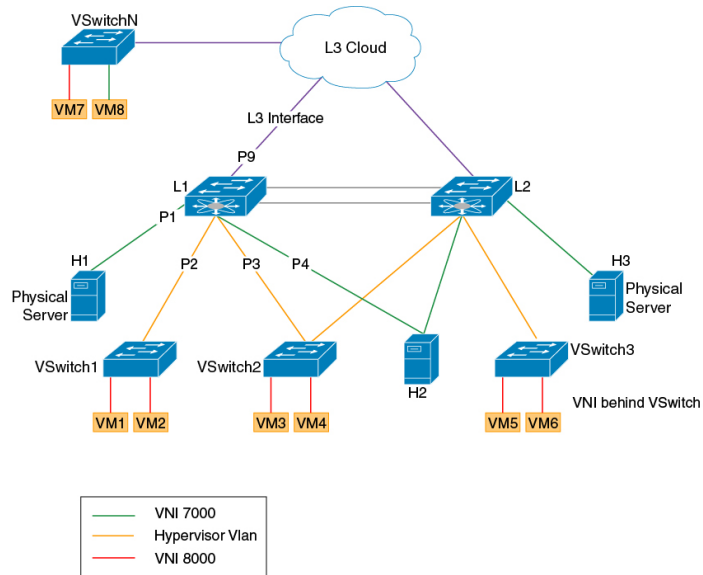

The implications of the limited Layer 3 gateway functionality are the following:

- Since the Layer 3 gateway is centralized, there is no need to run control protocols (to advertise the host reachability information). When the Layer 3 gateway receives the packet, it looks at the Layer 3 header information to route the packet (to the destination subnet/VNI), but the actual remote switch to which the packet needs to be forwarded is resolved at the Layer 2 level, which is done via data plane learning.

Figure 2: Layer 2 Gateway Packet Header

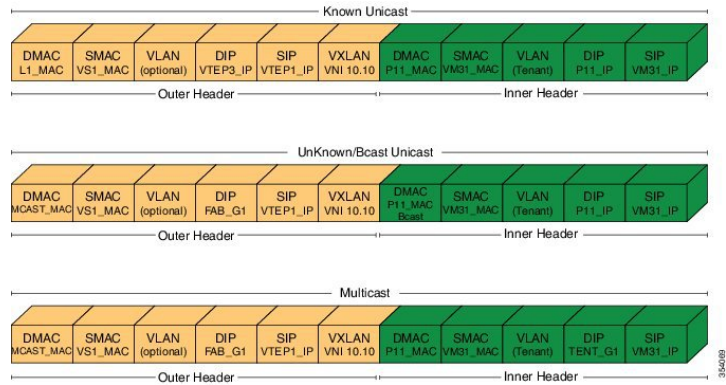


Figure 3: Layer 3 Gateway Packet Header



For example, in the above diagram the packets from VM31 (1.1.1.x) to P12 (2.2.2.x) are resolved at the Layer 3 level to go to SVI_VNI_20.20. After the routing, the destination VTEP, that is responsible for the destination host, is identified at the Layer 2 level. There are two cases to consider here:

1. If the switch that runs the Layer 3 gateway functionality does not run Layer 2 gateway functionality, that is, participates in the data plane learning, it has to flood the post-routed packet to all Layer 2 gateways through the multicast tree.
2. If the switch runs Layer 3 gateway and Layer 2 gateway functionality, the switch can resolve the destination VTEP at the Layer 2 level, and can forward the packet to the correct VTEP by itself.

Since Layer 2 gateway and Layer 3 gateway functionalities are tightly integrated from the configuration perspective (Layer 3 gateway is achieved by configuring the BDIs for bridge-domains corresponding to the VNIs), case (1) will not be applicable in the Cisco Nexus 7000, and only case (2) is supported.

Since there is a centralized Layer 3 gateway, any multicast packet that needs to be routed across multiple VNIs, will have to be replicated multiple times (one for each VNI).

In the above example, if P12 is interested in traffic initiated by VM31, the Layer 3 gateway will have to send two copies of the packet (one for VNI 20.20, and, one for VNI 30.30).

Also, note that routing between VNI and Layer 3 interfaces can be supported only for those interfaces that are local to the Layer 3 gateway, assuming those local Layer 3 interfaces are configured in the same tenant VRF as the VNI. One possible solution would be to have a separate Layer 3 connection between those leaf switches and spine (Layer 3 gateway) switch, configure them all in tenant VRF, run OSPF (or IS-IS) for that tenant VRF, and run PIM to draw multicast traffic along the tree.

Guidelines and Limitations for VXLAN

VXLAN has the following guidelines and limitations:

- VxLAN and Fabric Path features cannot be enabled on the same VDC.
- 4 VTEP interfaces per VDC are supported. The total number of remote VTEPs is 1K per VDC.

- 1K VNIs are allowed per VDC.
- 1k BDIs are allowed per system.
- Bidir in underlay is not supported on vPC VXLAN Gateways.
- In VXLAN vPC deployments with F3 modules, the vPC peer-link should be on an isolated ASIC instance from the Layer 3 core ports. After changing the peer-link ports to an isolated ASIC instance, ensure that you reload the switch.
- In a VXLAN vPC deployment with F3 modules and connected FEX devices, unknown unicast traffic from a remote source to the vPC switch pair may result in duplicate traffic if the MAC address is known to the vPC switches. Both vPC switches will receive a copy of the packet and forward it to the receiver behind FEX.
- In a VXLAN vPC deployment with F3 modules, known unicast traffic from a remote source to the vPC switch pair may result in loss of traffic if the MAC address is no longer known to the vPC switches.
- The number of IPv4 unicast routes supported is 64K shared with multicast routes.
- Number of IPv4 Multicast Groups is 32K due to software limitation.
- Maximum number of MAC addresses learned (local MACs and remote MACs) is 64K per F3 ASIC. (F3 MAC table size is 64K).
- VXLAN with IGMP snooping on VTEP tunnel interface is supported. You can configure **ip igmp snooping disable-nve-static-router-port** globally or per vlan to learn snooping states dynamically.
- VXLAN with Ingress replication using control plane is not supported.
- You can send Layer 3 end-to-end traffic with a maximum packet size of 9192 between VSI ports in different VNI segments.
- Layer 3 traffic will be dropped if the MTU packet size is greater than 9192.
- Inner VLAN class of service (CoS) needs to be propagated from ingress to egress in VXLAN. At the encaps side, CoS value will be copied to outer differentiated services code point (DSCP) and on the decap side DSCP QoS will be copied back to egress VLAN COS.
- vPC peer-link can carry both global VLAN and bridge-domains that are having VXLAN enabled.
- MLD snooping on bridge-domain with VXLAN is not supported.
- ACL and QoS on a VTEP tunnel are not supported.
- Layer 3 VXLAN gateways are supported.
- PVLAN with VXLAN is not supported.
- Extending VLAN/VNI with OTV, VPLS, NV-GRE, and Layer 2 LISP when VXLAN is enabled is not supported due to hardware restrictions in the F3 ASIC.
- Extending Layer 2 MPLS network directly with VXLAN is not supported. Layer 2 MPLS has to be terminated and connected as a CE port for VXLAN extension due to forwarding restrictions.
- Interop with IPGRE is not supported.
- Interop with Layer 3 LISP is not supported.
- F3 SPAN feature does not support spanning L3 egress multicast packets.

- Netflow is not supported on VTEP interface.
- Netflow on VXLAN-enabled bridge domains is not supported.
- FEX ports are not supported as edge ports for VXLAN enabled bridge-domains.
- Extending global VLANs using VXLAN is not supported.
- BPDUs are not sent over the VTEP tunnel.
- Layer 3 Multicast - SSM in the core is not supported.
- MIB/XML support for VXLAN related changes is not supported.
- VXLAN encapsulation of an outer header with an IPv6 header is not supported.
- In VXLAN vPC Setup, RP should be configured on L3 core network. Direct connectivity between L2 gateway and vPC L3 gateway without L3 core in between is not supported.
- Any Source Multicast (ASM) is supported. Bidirectional PIM is supported on a single, non-vPC leaf switch.
- Physical port vPC for Vn-segment Service Instance (VSI) is not supported.
- The following Interface NVE counters are supported.
 - Unicast and Multicast packets and bytes transmitted
 - Unicast and Multicast packets and bytes received
- SPAN is not supported for NVE tunnel interfaces.
- Equal cost multipath (ECMP) on the core is based on inner packet (DMAC, SMAC) combination.
- Maximum 64 MST instances are supported.
- MST scale limit is 300K logical ports on unidimensional setup.
- When vPC peer-link flap, Mac addresses will be flushed for orphan and vPC ports. End point needs to re-ARP.
- 32 VSI encapsulation profiles are supported per interface.
- SSM is not supported
- Bi-Dir multicast mode is not supported for vPC
- IGMP Snooping Layer2 Multicast Mac lookup mode is not supported.
- IPv6 for Multicast is not supported.
- Hypervisor VLANs can be configured using regular VLAN and trunk or access port configurations.
- vPC peer-link can carry both global VLANs and bridge-domains that are VXLAN enabled.

Considerations for VXLAN Deployment

- A loopback address is required when using the **source-interface config** command. The loopback address represents the local VTEP IP.

- For the Network Virtualization Endpoint (NVE) source loop back address, secondary address should be same on both the vPC peers and the primary address should be different.
- To establish IP multicast routing in the core, IP multicast configuration, PIM configuration, and RP configuration is required.
- VTEP to VTEP unicast reachability can be configured through any IGP protocol.

vPC Considerations for VXLAN Deployment

- Bind NVE to a loopback address that is separate from other loopback addresses that are required by Layer 3 protocols. A best practice is to use a dedicated loopback address for VXLAN.
- The loopback address used by NVE needs to be configured to have a primary IP address and a secondary IP address.
- The secondary IP address is used for all VXLAN traffic that includes multicast and unicast encapsulated traffic.
- vPC peers must have identical configurations as listed below:
 - Consistent Bridge-domain to VNI mapping.
 - Consistent NVE binding to the same loopback interface.
 - The same secondary IP address must be configured on both the switches. However, each vPC peer switch should have a unique primary IP address assigned to it.
 - Consistent NVE interface to VNI mapping.
 - Consistent VNI to group mapping.

- For multicast, the vPC node that receives the (S, G) join from the RP (rendezvous point) becomes the DF (designated forwarder). On the DF node, encap routes are installed for multicast.

Decap routes are installed based on the election of a decapper from between the VPC primary node and the VPC secondary node. The winner of the decap election is the node with the least cost to the RP or the source. However, if the cost to the RP is the same for both nodes, the VPC primary node is elected.

The winner of the decap election has the decap mroute installed. The other node does not have a decap route installed.

- On a VPC device, BUM traffic (broadcast, unknown-unicast, and multicast traffic) from hosts is replicated on the vPC peer-link. A copy is made of every native packet and each native packet is sent across the vPC peer-link to service orphan-ports connected to the peer VPC switch.

To prevent traffic loops in VXLAN networks, native packets ingressing the vPC peer-link cannot be sent to an uplink. However, if the peer switch is the encapper, the copied packet traverses the vPC peer-link and is sent to the uplink.

In a VXLAN vPC deployment with peer switch, encapsulation profile, and bridge domain configurations, the vPC secondary peer switch does not generate or process BPDUs for bridge domains.

- When vPC peer-link is shut, the loopback primary address is used as the source IP address for encapsulation by both vPC switches.



Note Orphans connected to the VPC secondary will experience loss of traffic for the period that the vPC peer-link is shut. This is similar to Layer 2 orphans in a VPC secondary of a traditional VPC setup.

- When vPC peer-link is no-shut, the NVE loopback secondary address is used.
- For VPC, the loopback interface has 2 IP addresses: the primary IP address and the secondary IP address.

The primary IP address is unique and is used by Layer 3 protocols.

The secondary IP address on loopback is necessary because the interface NVE uses it for the VTEP IP address. The secondary IP address must be same on both vPC peers.

- The VPC peer-gateway feature must be enabled on both peers. As a best practice, use peer-switch, peer gateway, ip arp sync, ipv6 nd sync configurations for improved convergence in VPC topologies.

The following is an example (best practice) of a VPC configuration:

```
switch# sh ru vpc

version 6.1(2)I3(1)
feature vpc
vpc domain 2
  peer-switch
  peer-keepalive destination 172.29.206.65 source 172.29.206.64
  peer-gateway
  ipv6 nd synchronize
  ip arp synchronize
```

- On a VPC pair, shutting down NVE or NVE loopback on one of the VPC nodes is not a supported configuration. This means that traffic fail over on one-side NVE shut or one-side loopback shut is not supported.
- Redundant anycast RPs configured in the network for multicast load-balancing and RP redundancy are supported on VPC VTEP topologies.
- The following are the examples of SVI with PIM enabled:

```
switch# show run interface BDI3

interface BDI3
  description special_svi_over_mct
  no shutdown
  ip address 30.2.1.1/30
  ip pim sparse-mode
```

```
switch# show run interface BDI3

interface BDI3
  description special_svi_over_vPC peer-link no shutdown
  ipv6 address FE80::290:27FF:FE8C:B709
  ip pim sparse-mode
```



Note The SVI must be configured on both VPC peers and requires PIM to be enabled.

- As a best practice when changing the secondary IP address of an anycast VPC VTEP, the NVE interfaces on both the VPC primary and the VPC secondary should be shut before the IP changes are made.
- For a VXLAN vPC deployment, you should configure the **switchport trunk native vlan tag exclude control** command on the interface port channel configured as the vPC peer-link.

Network Considerations for VXLAN Deployments

- MTU Size in the Transport Network

Due to the MAC-to-UDP encapsulation, VXLAN introduces 50-byte overhead to the original frames. Therefore, the maximum transmission unit (MTU) in the transport network needs to be increased by 50 bytes. If the overlays use a 1500-byte MTU, the transport network needs to be configured to accommodate 1550-byte packets at a minimum. Jumbo-frame support in the transport network is required if the overlay applications tend to use larger frame sizes than 1500 bytes.

- ECMP and LACP Hashing Algorithms in the Transport Network

As described in a previous section, Cisco Nexus 7000 Series Switches introduce a level of entropy in the source UDP port for ECMP and LACP hashing in the transport network. As a way to augment this implementation, the transport network uses an ECMP or LACP hashing algorithm that takes the UDP source port as an input for hashing, which achieves the best load-sharing results for VXLAN encapsulated traffic.

- Multicast Group Scaling

The VXLAN implementation on Cisco Nexus 7000 Series Switches uses multicast tunnels for broadcast, unknown unicast, and multicast traffic forwarding. Ideally, one VXLAN segment mapping to one IP multicast group is the way to provide the optimal multicast forwarding. It is possible, however, to have multiple VXLAN segments share a single IP multicast group in the core network. VXLAN can support up to 16 million logical Layer 2 segments, using the 24-bit VNID field in the header. With one-to-one mapping between VXLAN segments and IP multicast groups, an increase in the number of VXLAN segments causes a parallel increase in the required multicast address space and the amount of forwarding states on the core network devices. At some point, multicast scalability in the transport network can become a concern. In this case, mapping multiple VXLAN segments to a single multicast group can help conserve multicast control plane resources on the core devices and achieve the desired VXLAN scalability. However, this mapping comes at the cost of suboptimal multicast forwarding. Packets forwarded to the multicast group for one tenant are now sent to the VTEPs of other tenants that are sharing the same multicast group. This causes inefficient utilization of multicast data plane resources. Therefore, this solution is a trade-off between control plane scalability and data plane efficiency.

Despite the suboptimal multicast replication and forwarding, having multiple-tenant VXLAN networks to share a multicast group does not bring any implications to the Layer 2 isolation between the tenant networks. After receiving an encapsulated packet from the multicast group, a VTEP checks and validates the VNID in the VXLAN header of the packet. The VTEP discards the packet if the VNID is unknown to it. Only when the VNID matches one of the VTEP's local VXLAN VNIDs, does it forward the packet to that VXLAN segment. Other tenant networks will not receive the packet. Thus, the segregation between VXLAN segments is not compromised.

- Spanning Tree Protocol (STP) domain

Ensure that the root of an STP domain local to the VXLAN fabric is a VTEP, or placed within the fabric. The STP root should not be outside the VXLAN fabric (below the VTEPs) since it will lead to Layer 2 loops.

Considerations for the core VRF

The following are considerations for the configuration of the core VRF:

- On the VTEP device:
 - Enable and configure IP multicast.
 - Create and configure a loopback interface with a /32 IP address.
 - Enable IP multicast on the loopback interface.
 - Advertise the loopback interface/32 addresses through the routing protocol that runs in the transport network.
 - Enable IP multicast on the uplink outgoing physical interface.
- Throughout the transport network:
 - Enable and configure IP multicast.

ISSU Support

The following are the ISSU support details for VXLAN flood and learn deployment:

- Cisco Nexus 7000 Series switches running Cisco NX-OS Release 6.2.10 or 6.2.12.
- F2E, M2, and F3 modules.
- Virtual Device Context (VDC) Types:
 - F3 Only
 - F3 & F2, F3 & M2

Supported ISSU Steps:

1. Upgrade ISSU to Cisco NX-OS Release 7.2(0)D1(1).
2. For F3 Only VDC, configure default interface for all L2/L3 interfaces.
3. Reload F3 Only VDC or the switch.
4. Enable “feature nve” in F3 Only VDC.
5. Configure VXLAN - VSI/NVE.

Configuring VXLAN

Enabling VXLANs

Procedure

	Command or Action	Purpose
Step 1	<code>configure terminal</code>	Enters global configuration mode.
Step 2	<code>[no] feature nv overlay</code>	Enables the VXLAN feature.
Step 3	<code>[no] feature vni</code>	Configures the global mode for all VXLAN bridge domains.
Step 4	<code>[no] vni [range]</code>	Defines the VNI range.
Step 5	(Optional) <code>copy running-config startup-config</code>	Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

Example

```
switch# configure terminal
switch(config)# feature nv overlay
switch(config)# feature vni
switch(config)# vni 7000
switch(config)# copy running-config startup-config
```

Configuring VNI Service Instances

Procedure

	Command or Action	Purpose
Step 1	<code>configure terminal</code>	Enters global configuration mode.
Step 2	<code>encapsulation profile vni vsi-range</code>	Encapsulates traffic in the virtual network.
Step 3	<code>dot1q var vni vni-id</code>	Defines the matching criteria to map Q-in-Q ingress frames.
Step 4	<code>interface var</code>	Enters interface configuration mode.
Step 5	<code>service instance num vni</code>	Creates a service instance.
Step 6	<code>no shut down</code>	Enables the service instance on this interface.
Step 7	<code>encapsulation profile vsi-range</code>	Encapsulates traffic in the virtual network.

Example

The following example shows how to configure VNI service instances:

```

config t
    encapsulation profile vni vsi_100_to_7000
        dot1q 100 vni 7000
interface e1/1
    service instance 1 vni
    no shut down
    encapsulation profile vsi_100_to_7000

```

Mapping VLAN to VNI

Procedure

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
Step 2	system bridge-domain <i>ID</i>	Identify the bridge domain IDs that are available for bridge-domain configuration.
Step 3	bridge-domain <i>vlan-ID</i>	Enables bridging to map VLAN to VXLAN VNI.
Step 4	member vni <i>number</i>	Maps VXLAN to a bridge domain.

Example

The following example shows how to map an encapsulation profile to a VNI:

```

switch# configure terminal
switch(config)# system bridge-domain 100-500
switch(config)# bridge-domain 100
switch(config)# member vni 7000

```

Creating an VTEP and NVE Interface

An NVE interface is the overlay interface that terminates VXLAN tunnels.

There is a one-on-one mapping between NVE interface configuration and the source interface. Source interface used under a NVE cannot be reused.

You can create and configure an NVE (overlay) interface with the following:

Procedure

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.

	Command or Action	Purpose
Step 2	<code>interface nve x</code>	Creates a VXLAN overlay interface that terminates VXLAN tunnels. Note Only 4 NVE interfaces are allowed on the switch. Range is from 1 to 4.
Step 3	<code>source-interface loopback src-if</code>	The source interface must be a loopback interface that is configured on the switch with a valid /32 IP address. This /32 IP address must be known by the transient devices in the transport network and the remote VTEPs. This is accomplished by advertising it through a dynamic routing protocol in the transport network.
Step 4	<code>member vni vni [mcast-group mcast-ip]</code>	Associate VXLAN VNIs (Virtual Network Identifiers) with the NVE interface.
Step 5	<code>exit</code>	Exits interface configuration mode.
Step 6	<code>interface loopback if-number</code>	Creates a loopback interface.
Step 7	<code>ip address address</code>	Assigns an ip address to the configured interface.
Step 8	<code>vrf member core</code>	Creates a vrf member core in the interface.

Example

The following example shows how to create a VTEP / NVE interface:

```
switch# configure terminal
switch(config)# interface nve 1
switch(config-if)# source-interface loopback 10
switch(config-if)# member vni 7000 mcast-group 225.1.1.1
switch(config-if)# member vni 8000 mcast-group 226.1.1.1

switch# configure terminal
switch(config)# interface loopback 10
switch(config-if)# ip address 10.1.1.1/32
switch(config-if)# vrf member core
```

Configuring vPC Peer-link

Procedure

	Command or Action	Purpose
Step 1	<code>configure terminal</code>	Enters global configuration mode.
Step 2	<code>interface var</code>	Enters interface configuration mode.

	Command or Action	Purpose
Step 3	<code>switchport</code>	Sets the interface type to be a Layer 2 host port.
Step 4	<code>switchport mode trunk</code>	Sets the interface as a Layer 2 trunk port.
Step 5	<code>switchport trunk native vlan tag exclude control</code>	Enables native VLAN tagging on a trunk port, while ensuring that the control packets on the native VLAN are untagged. Note For trunk ports, by default data and control packets are untagged. The switchport trunk native vlan tag command form ensures that control and data packets of the native VLAN are tagged.
Step 6	<code>spanning-tree port type network</code>	Configures the interface that connects to a Layer 2 switch or bridge as a network spanning tree port.
Step 7	<code>vpc peer-link</code>	Configures the port channel as a vPC peer-link.

Example

The following example shows how to configure vPC peer-link:

```
switch# configure terminal
switch(config)# interface port-channel10
switch(config-if)# switchport
switch(config-if)# switchport mode trunk
switch(config-if)# switchport trunk native vlan tag exclude control
switch(config-if)# spanning-tree port type network
switch(config-if)# vpc peer-link
```

Configuring L3 Interface on VXLAN Tunnel/Hypervisor VLAN

Procedure

	Command or Action	Purpose
Step 1	<code>configure terminal</code>	Enters global configuration mode.
Step 2	<code>interface var</code>	Enters interface configuration mode.
Step 3	<code>ip address address</code>	Configures the IP address on the interface.
Step 4	<code>vrf member core</code>	Creates a vrf member core in the interface.

Example

The following example shows how to configure L3 interface on VXLAN tunnel/hypervisor VLAN:

```
switch# configure terminal
switch(config)# interface vlan 300
switch(config-if)# ip address 11.1.1.1/24
switch(config-if)# vrf member core
```

Configuring L3 Interface for IP Cloud Connectivity

Procedure

	Command or Action	Purpose
Step 1	<code>configure terminal</code>	Enters global configuration mode.
Step 2	<code>interface var</code>	Enters interface configuration mode.
Step 3	<code>no switchport</code>	Disables the switchport.
Step 4	<code>ip address address</code>	Configures the IP address on the interface.
Step 5	<code>vrf member core</code>	Creates a vrf member core in the interface.

Example

The following example shows how to configure L3 interface for IP cloud connectivity:

```
switch# configure terminal
switch(config)# interface e7/1
switch(config-if)# no switchport
switch(config-if)# ip address 11.1.1.1/24
switch(config-if)# vrf member core
```

Configuring L3 Interface on Tenant Bridge-Domains/VNIs in L3 Gateway

Procedure

	Command or Action	Purpose
Step 1	<code>configure terminal</code>	Enters global configuration mode.
Step 2	<code>feature interface-vlan</code>	Enables the creation of BDI interfaces.
Step 3	<code>interface bridge-domain number</code>	Enters interface configuration mode.
Step 4	<code>ip address address</code>	Configures the IP address on the interface.
Step 5	<code>vrf member tenant</code>	Configures the VRF member.

	Command or Action	Purpose
Step 6	<code>hsrp var</code>	Creates an HSRP group and enters HSRP configuration mode.
Step 7	<code>ip address address</code>	Configures the virtual IP address for the HSRP group and enables the group. Repeat steps 1-5 to configure another bridge-domain interface and HSRP.

Example

The following example shows how to configure L3 interface on tenant bridge-domains/VNIs in L3 gateway:

```
feature interface-vlan
interface bridge-domain 100
    ip address 50.1.1.2/24
    vrf member tenant
    hsrp 50
        ip address 50.1.1.1
```

```
feature interface-vlan
interface bridge-domain 200
    ip address 60.1.1.2/24
    vrf member tenant
    hsrp 60
        ip address 60.1.1.1
```

Disabling VXLANs

Procedure

	Command or Action	Purpose
Step 1	<code>configure terminal</code>	Enters configuration mode.
Step 2	<code>no feature vni</code>	Disables the global mode for all VXLAN bridge domains
Step 3	<code>no feature nv overlay</code>	Disables the VXLAN feature.
Step 4	<code>no bridge-domain</code>	Disables bridging to map VLAN.
Step 5	<code>no member vni</code>	Dissociates VXLAN VNIs from the NVE interface.
Step 6	<code>no vni</code>	Removes the VXLAN segment ID to which the VLAN is mapped.

	Command or Action	Purpose
Step 7	(Optional) <code>copy running-config startup-config</code>	Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

Verifying the VXLAN Configuration

To display the VXLAN configuration information, enter one of the following commands:

Command	Purpose
<code>show tech-support vxlan</code>	Displays related VXLAN tech-support information.
<code>show logging level nve</code>	Displays logging level.
<code>show tech-support nve</code>	Displays related NVE tech-support information.
<code>show run interface nve x</code>	Displays NVE overlay interface configuration.
<code>show nve interface nve x</code>	Displays NVE overlay interface status.
<code>show interface nve x</code>	Displays all the counters of an NVE interface.
<code>show nve peers</code>	Displays NVE peer status.
<code>show bridge-domain</code>	Displays the bridge domain information.
<code>show run vni</code>	Displays the VXLAN VNI configuration.
<code>show interface nve counters</code>	Displays the NVE counters in an interface.
<code>show interface bdi</code>	Displays the configuration summary of the corresponding BDI.
<code>show vni x</code>	Displays the list of all VNIs
<code>show ip mroute</code>	Displays information about mroute entries in the mroute table.
<code>show nve VXLAN-params</code>	Displays VXLAN parameters, such as VXLAN destination or UDP port.
<code>show nve internal platform interface nve 1 detail</code>	Displays NVE overlay internal detailed information.
<code>show nve vxlan-params</code>	Displays VXLAN parameters, such as VXLAN destination or UDP port.

Configuration Examples

Example of VXLAN Flood and Learn Configuration

The following example shows the VXLAN Flood and Learn configuration.

VTEP-1:

```
feature pim
system bridge-domain 50,75
feature nv overlay
feature interface-vlan

feature vni
vni 30000
vni 50000

ip route 10.10.10.2/32 Ethernet10/1 10.1.1.2
ip pim rp-address 10.1.1.1 group-list 209.165.0.0/4

bridge-domain 50
bridge-domain 75

encapsulation profile vni VSI_50_TO_5000
  dot1q 50 vni 5000
encapsulation profile vni VSI_75_TO_7500
  dot1q 75 vni 7500
bridge-domain 50
  member vni 5000
bridge-domain 75
  member vni 7500

interface nve1
  no shutdown
  source-interface loopback10
  member vni 5000 mcast-group 209.165.1.1
  member vni 7500 mcast-group 209.165.1.1

interface Bdi50
  no shutdown
  ip address 10.50.50.50/24

interface Bdi75
  no shutdown
  ip address 10.75.75.75/24

interface Ethernet7/17
  no switchport
  no shutdown
  service instance 1 vni
    no shutdown
    encapsulation profile VSI_50_TO_5000 default
  service instance 2 vni
    no shutdown
    encapsulation profile VSI_75_TO_7500 default

interface Ethernet10/1
  no switchport
  ip address 10.1.1.1/30
```

```

ip pim sparse-mode
no shutdown

interface loopback10
ip address 10.10.10.1/32
ip pim sparse-mode

```



Note The internal interface on the VTEP is configured as a layer-3 port. However, there is no IP assigned to it. It is also important to note that the BD value defined on the VTEP does not have to match the VLAN ID on the device from which you are sending the traffic. However, the dot1q to VNI mapping defined in the encapsulation profile, which is called under the service instance on the internal interface, must match the VLAN ID on the device from which you are sending the traffic.

VTEP-2:

```

feature pim
system bridge-domain 50,75
feature nv overlay
feature interface-vlan

feature vni
vni 32000
vni 52000

ip route 10.10.10.1/32 Ethernet10/7 10.1.1.1
ip pim rp-address 10.1.1.1 group-list 209.165.0.0/4

bridge-domain 50
bridge-domain 75

encapsulation profile vni VSI_50_TO_5000
dot1q 50 vni 5000
encapsulation profile vni VSI_75_TO_7500
dot1q 75 vni 7500
bridge-domain 50
member vni 5000
bridge-domain 75
member vni 7500

interface nve1
no shutdown
source-interface loopback10
member vni 5000 mcast-group 209.165.1.1
member vni 7500 mcast-group 209.165.1.1

interface Bdi50
no shutdown
ip address 10.50.50.51/24

interface Bdi75
no shutdown
ip address 10.75.75.76/24

interface Ethernet7/30
no switchport
no shutdown
service instance 1 vni
no shutdown
encapsulation profile VSI_50_TO_5000 default

```

```

service instance 2 vni
  no shutdown
  encapsulation profile VSI_75_TO_7500 default

interface Ethernet10/7
  no switchport
  ip address 10.1.1.2/30
  ip pim sparse-mode
  no shutdown

interface loopback10
  ip address 10.10.10.2/32
  ip pim sparse-mode

```

Example of Verifying VXLAN Flood and Learn Configuration

The following example shows the VXLAN Flood and Learn configuration verification.

VTEP-1:

```

VTEP-1# show nve vni
Codes: CP - Control Plane      DP - Data Plane
       UC - Unconfigured      SA - Suppress ARP

Interface VNI      Multicast-group  State Mode Type [BD/VRF]      Flags
-----
nve1      5000      209.165.1.1      Up   DP   L2 [50]
nve1      7500      192.168.1.1      Up   DP   L2 [75]

VTEP-1# show running-config interface nve 1

interface nve1
  no shutdown
  source-interface loopback10
  member vni 5000 mcast-group 209.165.1.1
  member vni 7500 mcast-group 192.168.1.1

VTEP-1# show service instance vni detail

VSI: VSI-Ethernet7/17.1
If-index: 0x35310001
Admin Status: Up
Oper Status: Up
Auto-configuration Mode: No
encapsulation profile vni VSI_50_TO_5000
  dot1q 50 vni 5000
Dot1q  VNI  BD
-----
50      5000  50

VSI: VSI-Ethernet7/17.2
If-index: 0x35310002
Admin Status: Up
Oper Status: Up
Auto-configuration Mode: No
encapsulation profile vni TEST
  dot1q 100 vni 7500
Dot1q  VNI  BD
-----
100     7500  75

VTEP-1# show bridge-domain

```

```
Bridge-domain 50 (2 ports in all)
Name:: Bridge-Domain50
Administrative State: UP                      Operational State: UP
VSI-Eth7/17.1
vni5000
nve1
```

```
Bridge-domain 75 (2 ports in all)
Name:: Bridge-Domain75
Administrative State: UP                      Operational State: UP
VSI-Eth7/17.2
vni7500
nve1
```

```
VTEP-1# show mac address-table dynamic
Note: MAC table entries displayed are getting read from software.
Use the 'hardware-age' keyword to get information related to 'Age'
```

Legend:

```
* - primary entry, G - Gateway MAC, (R) - Routed MAC, O - Overlay MAC
age - seconds since last seen,+ - primary entry using vPC Peer-Link, E -
EVPN entry
(T) - True, (F) - False , ~~~ - use 'hardware-age' keyword to retrieve
age info
```

VLAN/BD	MAC Address	Type	age	Secure	NTFY	Ports/SWID.SSID.LID
* 50	547f.eeec.af43	dynamic	~~~	F	F	nve1/10.10.10.2
* 50	547f.eeec.af44	dynamic	~~~	F	F	VSI-Eth7/17.1
* 50	547f.eeec.af45	dynamic	~~~	F	F	nve1/10.10.10.2
* 75	547f.eeec.af44	dynamic	~~~	F	F	VSI-Eth7/17.2
* 75	547f.eeec.af45	dynamic	~~~	F	F	nve1/10.10.10.2

```
VTEP-1# show ip mroute detail
IP Multicast Routing Table for VRF "default"
```

```
Total number of routes: 7
Total number of (*,G) routes: 2
Total number of (S,G) routes: 4
Total number of (*,G-prefix) routes: 1
```

```
(*, 209.165.1.1/32), uptime: 19:51:28, nve(1) ip(0) pim(1)
Data Created: No
VXLAN Flags
VXLAN Encap
Stats: 0/0 [Packets/Bytes], 0.000 bps
Incoming interface: Ethernet10/1, RPF nbr: 1.1.1.1
Outgoing interface list: (count: 2)
Ethernet10/1, uptime: 19:51:09, pim, (RPF)
nve1, uptime: 19:51:28, nve
```

```
(10.10.10.1/32, 209.165.1.1/32), uptime: 19:51:28, nve(0) mrrib(0) ip(0) pim(1)
Data Created: No
Received Register stop
VXLAN Flags
VXLAN Encap
Stats: 19/2274 [Packets/Bytes], 0.000 bps
Incoming interface: loopback10, RPF nbr: 10.10.10.1, internal
Outgoing interface list: (count: 1)
Ethernet10/1, uptime: 19:51:09, pim
```

```
(10.10.10.2/32, 209.165.1.1/32), uptime: 18:10:06, pim(1) mrrib(1) ip(0)
Data Created: Yes
VXLAN Flags
```

Example of Verifying VXLAN Flood and Learn Configuration

```

VXLAN Decap
Stats: 9/846 [Packets/Bytes], 0.000 bps
Incoming interface: Ethernet10/1, RPF nbr: 1.1.1.2, internal
Outgoing interface list: (count: 2)
  Ethernet10/1, uptime: 01:00:32, pim, (RPF)
  nve1, uptime: 18:10:06, mrib

(*, 209.165.1.1/32), uptime: 12:52:13, nve(1) ip(0) pim(1)
Data Created: No
VXLAN Flags
  VXLAN Encap
Stats: 0/0 [Packets/Bytes], 0.000 bps
Incoming interface: Ethernet10/1, RPF nbr: 1.1.1.1
Outgoing interface list: (count: 2)
  Ethernet10/1, uptime: 12:51:52, pim, (RPF)
  nve1, uptime: 12:52:13, nve

(10.10.10.1/32, 209.165.1.1/32), uptime: 12:52:13, nve(0) mrib(0) ip(0) pim(1)
Data Created: No
Received Register stop
VXLAN Flags
  VXLAN Encap
Stats: 300/39850 [Packets/Bytes], 0.000 bps
Incoming interface: loopback10, RPF nbr: 10.10.10.1, internal
Outgoing interface list: (count: 1)
  Ethernet10/1, uptime: 12:51:52, pim

(10.10.10.2/32, 209.165.1.1/32), uptime: 12:51:34, pim(1) mrib(1) ip(0)
Data Created: Yes
VXLAN Flags
  VXLAN Decap
Stats: 22/1928 [Packets/Bytes], 0.000 bps
Incoming interface: Ethernet10/1, RPF nbr: 1.1.1.2, internal
Outgoing interface list: (count: 2)
  Ethernet10/1, uptime: 00:52:14, pim, (RPF)
  nve1, uptime: 12:51:34, mrib

(*, 209.166.0.0/8), uptime: 20:56:33, pim(0) ip(0)
Data Created: No
Stats: 0/0 [Packets/Bytes], 0.000 bps
Incoming interface: Null, RPF nbr: 0.0.0.0
Outgoing interface list: (count: 0)

VTEP-1# show ip arp

Flags: * - Adjacencies learnt on non-active FHRP router
      + - Adjacencies synced via CFSOE
      # - Adjacencies Throttled for Glean
      D - Static Adjacencies attached to down interface

IP ARP Table for context default
Total number of entries: 4
Address      Age      MAC Address      Interface
10.50.50.1   00:11:32  547f.eeec.af44   Bdi50
10.50.50.2   00:11:14  547f.eeec.af44   Bdi50
10.75.75.1   00:10:45  547f.eeec.af44   Bdi75
10.75.75.2   00:15:04  547f.eeec.af45   Bdi75
10.1.1.2     00:05:39  547f.eeec.af43   Ethernet10/1

VTEP-1# show ip route
IP Route Table for VRF "default"
'*' denotes best ucast next-hop
'***' denotes best mcast next-hop
'[x/y]' denotes [preference/metric]

```

```
'%<string>' in via output denotes VRF <string>

10.1.1.0/30, ubest/mbest: 1/0, attached
    *via 10.1.1.1, Eth10/1, [0/0], 20:25:13, direct
1.1.1.1/32, ubest/mbest: 1/0, attached
    *via 10.1.1.1, Eth10/1, [0/0], 20:25:13, local
10.10.10.1/32, ubest/mbest: 2/0, attached
    *via 10.10.10.1, Lo10, [0/0], 20:25:45, local
    *via 10.10.10.1, Lo10, [0/0], 20:25:45, direct
10.10.10.2/32, ubest/mbest: 1/0
    *via 10.1.1.2, Eth10/1, [1/0], 20:23:42, static
10.50.50.0/24, ubest/mbest: 1/0, attached
    *via 10.50.50.50, Bdi50, [0/0], 01:18:47, direct
10.50.50.50/32, ubest/mbest: 1/0, attached
    *via 10.50.50.50, Bdi50, [0/0], 01:18:47, local
10.75.75.0/24, ubest/mbest: 1/0, attached
    *via 10.75.75.75, Bdi75, [0/0], 01:10:05, direct
10.75.75.75/32, ubest/mbest: 1/0, attached
    *via 10.75.75.75, Bdi75, [0/0], 01:10:05, local
```

VTEP-2:

```
VTEP-2# show nve vni
Codes: CP - Control Plane      DP - Data Plane
       UC - Unconfigured      SA - Suppress ARP
```

Interface	VNI	Multicast-group	State	Mode	Type	[BD/VRF]	Flags
nve1	5000	209.166.1.1	Up	DP	L2	[50]	
nve1	7500	192.168.1.1	Up	DP	L2	[75]	

```
VTEP-2# show running-config interface nve 1
```

```
interface nve1
  no shutdown
  source-interface loopback10
  member vni 5000 mcast-group 209.166.1.1
  member vni 7500 mcast-group 192.168.1.1
```

```
VTEP-2# show service instance vni detail
```

```
VSI: VSI-Ethernet7/30.1
If-index: 0x3531d001
Admin Status: Up
Oper Status: Up
Auto-configuration Mode: No
encapsulation profile vni VSI_50_TO_5000
  dot1q 50 vni 5000
Dot1q  VNI    BD
-----
50      5000   50
```

```
VSI: VSI-Ethernet7/30.2
If-index: 0x3531d002
Admin Status: Up
Oper Status: Up
Auto-configuration Mode: No
encapsulation profile vni TEST
  dot1q 100 vni 7500
Dot1q  VNI    BD
-----
100     7500   75
```

```
VTEP-2# show bridge-domain
```

Example of Verifying VXLAN Flood and Learn Configuration

```

Bridge-domain 50 (2 ports in all)
Name:: Bridge-Domain50
  Administrative State: UP                Operational State: UP
    vni5000
    VSI-Eth7/30.1
    nve1

```

```

Bridge-domain 75 (2 ports in all)
Name:: Bridge-Domain75
  Administrative State: UP                Operational State: UP
    vni7500
    VSI-Eth7/30.2
    nve1

```

```

VTEP-2# show mac address-table dynamic
Note: MAC table entries displayed are getting read from software.
Use the 'hardware-age' keyword to get information related to 'Age'

```

Legend:

```

* - primary entry, G - Gateway MAC, (R) - Routed MAC, O - Overlay MAC
age - seconds since last seen,+ - primary entry using vPC Peer-Link, E -
EVPN entry
(T) - True, (F) - False , ~~~ - use 'hardware-age' keyword to retrieve
age info

```

VLAN/BD	MAC Address	Type	age	Secure	NTFY	Ports/SWID.SSID.LID
* 50	547f.eeec.af44	dynamic	~~~	F	F	nve1/10.10.10.1
* 50	547f.eeec.af45	dynamic	~~~	F	F	VSI-Eth7/30.1
* 75	547f.eeec.af45	dynamic	~~~	F	F	VSI-Eth7/30.2
* 75	547f.eeec.af48	dynamic	~~~	F	F	nve1/10.10.10.1

```

VTEP-2# show ip mroute detail
IP Multicast Routing Table for VRF "default"

```

```

Total number of routes: 5
Total number of (*,G) routes: 2
Total number of (S,G) routes: 2
Total number of (*,G-prefix) routes: 1

```

```

(*, 209.165.1.1/32), uptime: 19:56:19, nve(1) ip(0) pim(0)
  Data Created: No
  VXLAN Flags
    VXLAN Encap
  Stats: 8/748 [Packets/Bytes], 0.000 bps
  Incoming interface: Ethernet10/7, RPF nbr: 1.1.1.1
  Outgoing interface list: (count: 1)
    nve1, uptime: 19:56:19, nve

```

```

(10.10.10.2/32, 209.165.1.1/32), uptime: 19:56:19, nve(0) mrib(0) pim(1) ip(0)
  Data Created: No
  Received Register stop
  VXLAN Flags
    VXLAN Encap
  Stats: 9/834 [Packets/Bytes], 0.000 bps
  Incoming interface: loopback10, RPF nbr: 10.10.10.2
  Outgoing interface list: (count: 1)
    Ethernet10/7, uptime: 18:15:17, pim

```

```

(*, 209.165.1.1/32), uptime: 12:57:03, nve(1) ip(0) pim(0)
  Data Created: No
  VXLAN Flags
    VXLAN Encap
  Stats: 10/864 [Packets/Bytes], 0.000 bps

```



```

Incoming interface: Ethernet10/7, RPF nbr: 1.1.1.1
Outgoing interface list: (count: 1)
    nve1, uptime: 12:57:03, nve

(10.10.10.2/32, 209.165.1.1/32), uptime: 12:57:03, nve(0) mrib(0) ip(0) pim(1)
    Data Created: No
    Received Register stop
    VXLAN Flags
        VXLAN Encap
    Stats: 30/2648 [Packets/Bytes], 0.000 bps
    Incoming interface: loopback10, RPF nbr: 10.10.10.2
    Outgoing interface list: (count: 1)
        Ethernet10/7, uptime: 12:56:45, pim

(*, 209.167.0.0/8), uptime: 18:20:36, pim(0) ip(0)
    Data Created: No
    Stats: 0/0 [Packets/Bytes], 0.000 bps
    Incoming interface: Null, RPF nbr: 0.0.0.0
    Outgoing interface list: (count: 0)

VTEP-2# show ip arp

Flags: * - Adjacencies learnt on non-active FHRP router
       + - Adjacencies synced via CFSOE
       # - Adjacencies Throttled for Glean
       D - Static Adjacencies attached to down interface

IP ARP Table for context default
Total number of entries: 4
Address      Age          MAC Address  Interface
10.50.50.1   00:11:30    547f.eeec.af44 Bdi50
10.50.50.2   00:17:07    547f.eeec.af45 Bdi50
10.75.75.1   00:04:14    547f.eeec.af45 Bdi75
10.75.75.2   00:03:24    547f.eeec.af45 Bdi75
10.1.1.1     00:10:52    547f.eeec.af48 Ethernet10/7

VTEP-2# show ip route
IP Route Table for VRF "default"
'*' denotes best ucast next-hop
'**' denotes best mcast next-hop
'[x/y]' denotes [preference/metric]
'%<string>' in via output denotes VRF <string>

10.1.1.0/30, ubest/mbest: 1/0, attached
    *via 10.1.1.2, Eth10/7, [0/0], 20:30:24, direct
10.1.1.2/32, ubest/mbest: 1/0, attached
    *via 10.1.1.2, Eth10/7, [0/0], 20:30:24, local
10.10.10.1/32, ubest/mbest: 1/0
    *via 10.1.1.1, Eth10/7, [1/0], 20:29:48, static
10.10.10.2/32, ubest/mbest: 2/0, attached
    *via 10.10.10.2, Lo10, [0/0], 20:29:39, local
    *via 10.10.10.2, Lo10, [0/0], 20:29:39, direct
10.50.50.0/24, ubest/mbest: 1/0, attached
    *via 10.50.50.51, Bdi50, [0/0], 01:22:50, direct
10.50.50.51/32, ubest/mbest: 1/0, attached
    *via 10.50.50.51, Bdi50, [0/0], 01:22:50, local
10.75.75.0/24, ubest/mbest: 1/0, attached
    *via 10.75.75.76, Bdi75, [0/0], 01:14:50, direct
10.75.75.76/32, ubest/mbest: 1/0, attached
    *via 10.75.75.76, Bdi75, [0/0], 01:14:50, local

```

Feature History for VXLAN Flood and Learn

This table lists the release history for this feature.

Table 1: Feature History for VXLAN Flood and Learn

Feature Name	Releases	Feature Information	
VXLAN Flood and Learn	7.2(0)D1(1)	This feature was introduced.	