



## **Cisco Nexus 9000 Series NX-OS Quality of Service Configuration Guide, Release 10.4(x)**

**First Published:** 2023-08-18

**Last Modified:** 2024-06-18

### **Americas Headquarters**

Cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, CA 95134-1706  
USA  
<http://www.cisco.com>  
Tel: 408 526-4000  
800 553-NETS (6387)  
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS REFERENCED IN THIS DOCUMENTATION ARE SUBJECT TO CHANGE WITHOUT NOTICE. EXCEPT AS MAY OTHERWISE BE AGREED BY CISCO IN WRITING, ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS DOCUMENTATION ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED.

The Cisco End User License Agreement and any supplemental license terms govern your use of any Cisco software, including this product documentation, and are located at: <http://www.cisco.com/go/softwareterms>. Cisco product warranty information is available at <http://www.cisco.com/go/warranty>. US Federal Communications Commission Notices are found here <http://www.cisco.com/c/en/us/products/us-fcc-notice.html>.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any products and features described herein as in development or available at a future date remain in varying stages of development and will be offered on a when-and if-available basis. Any such product or feature roadmaps are subject to change at the sole discretion of Cisco and Cisco will have no liability for delay in the delivery or failure to deliver any products or feature roadmap items that may be set forth in this document.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

The documentation set for this product strives to use bias-free language. For the purposes of this documentation set, bias-free is defined as language that does not imply discrimination based on age, disability, gender, racial identity, ethnic identity, sexual orientation, socioeconomic status, and intersectionality. Exceptions may be present in the documentation due to language that is hardcoded in the user interfaces of the product software, language used based on RFP documentation, or language that is used by a referenced third-party product.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: [www.cisco.com go trademarks](http://www.cisco.com/go/trademarks). Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2023 –2024 Cisco Systems, Inc. All rights reserved.



## CONTENTS

### Trademarks ?

---

#### PREFACE

<b>Preface</b>	<b>xi</b>
Audience	xi
Document Conventions	xi
Related Documentation for Cisco Nexus 9000 Series Switches	xii
Documentation Feedback	xii
Communications, Services, and Additional Information	xii
Cisco Bug Search Tool	xiii
Documentation Feedback	xiii

---

#### CHAPTER 1

<b>New and Changed Information</b>	<b>1</b>
New and Changed Information	1

---

#### CHAPTER 2

<b>Overview</b>	<b>5</b>
Licensing Requirements	5
Supported Platforms	5
About QoS Features	5
Using QoS	6
Classification	6
Marking	7
Policing	7
Queuing and Scheduling	7
Sequencing of QoS Actions	7
Sequencing of Ingress Traffic Actions	8
Sequencing of Egress Traffic Actions	8

High Availability Requirements for QoS Features	8
QoS Feature Configuration with MQC	8
QoS Statistics	9
Default QoS Behavior	9
Virtual Device Contexts	9

**CHAPTER 3****Using Modular QoS CLI 11**

About MQC	11
Guidelines and Limitations for Modular QoS CLI	12
System Classes	12
Default System Classes	12
Using an MQC Object	13
Type qos Policies	13
Type Queuing Policies	14
System-Defined MQC Objects	14
System-Defined MQC Objects for 4q Mode	15
System-Defined MQC Objects for 8q Mode	17
Changing to 8q Mode	20
Changing from 8q Mode to 4q Mode	25
Configuring an MQC Object	25
Configuring or Modifying a Class Map	26
Configuring or Modifying a Policy Map	27
Applying Descriptions to MQC Objects	28
Verifying an MQC Object	29
Attaching and Detaching a QoS Policy Action	30
Configuring a Service Policy for a Layer 2 Interface	31
Configuring a Service Policy for a Layer 3 Interface	32
Attaching the System Service Policy	34
Attaching a QoS Policy Action to a VLAN	34
Session Manager Support for QoS	36

**CHAPTER 4****Configuring QoS TCAM Carving 37**

About QoS TCAM Carving	37
About QoS TCAM Lite Regions	40

Guidelines and Limitations for QoS TCAM Carving	41
Configuring QoS TCAM Carving	44
Enabling Layer 3 QoS (IPv6)	44
Enabling VLAN QoS (IPv4)	46
Notes for Enabling VLAN QoS	48
Enabling FEX QoS (IPv4)	49
Enabling Egress QoS (IPv4)	49
Using Templates to Configure TCAM Region Sizes	51
Verifying QoS TCAM Carving	53

---

**CHAPTER 5**
**Configuring Classification 55**

About Classification	55
Prerequisites for Classification	56
Guidelines and Limitations for Classification	56
Configuring Traffic Classes	59
Configuring ACL Classification	59
Examples: Configuring ACL Classification	60
Configuring a DSCP Wildcard Mask	61
Configuring DSCP Classification	63
Configuring IP Precedence Classification	65
Configuring Protocol Classification	66
Configuring Layer 3 Packet Length Classification	67
Configuring CoS Classification	68
Configuring CoS Classification for FEX	69
Configuring IP RTP Classification	71
Verifying the Classification Configuration	72
Configuration Examples for Classification	73

---

**CHAPTER 6**
**Configuring Marking 75**

About Marking	75
Trust Boundaries	76
Class of Behavior	76
Prerequisites for Marking	77
Guidelines and Limitations for Marking	77

Configuring Marking	78
Configuring DSCP Marking	78
Configuring IP Precedence Marking	80
Configuring CoS Marking	82
Configuring CoS Marking for FEX	83
Configuring DSCP Port Marking	84
Verifying the Marking Configuration	86
Configuration Examples for Marking	86

---

**CHAPTER 7**

<b>Configuring Policing</b>	<b>87</b>
About Policing	87
Shared Policers	87
Prerequisites for Policing	88
Guidelines and Limitations for Policing	88
Configuring Policing	91
Configuring Ingress Policing	91
Configuring Egress Policing	91
Configuring 1-Rate and 2-Rate, 2-Color and 3-Color Policing	94
Configuring Markdown Policing	98
Configuring UDE Policers	100
Configuring Shared Policers	101
Verifying the Policing Configuration	103
Configuration Examples for Policing	103

---

**CHAPTER 8**

<b>Configuring Queuing and Scheduling</b>	<b>105</b>
About Queuing and Scheduling	105
Modifying Class Maps	105
Congestion Avoidance	106
Congestion Management	106
Explicit Congestion Notification	106
Approximate Fair Drop	107
Traffic Shaping	109
Prerequisites for Queuing and Scheduling	110
Guidelines and Limitations for Queuing and Scheduling	110

Configuring Queuing and Scheduling	115
Configuring Type Queuing Policies	115
Configuring Congestion Avoidance	117
Configuring Tail Drop on Egress Queues	118
Configuring WRED on Egress Queues	120
Configuring AFD on Egress Queues	122
Configuring Congestion Management	124
Configuring Bandwidth and Bandwidth Remaining	125
Configuring Bandwidth and Bandwidth Remaining for FEX	126
Configuring Priority	128
Configuring Priority for FEX	130
Configuring Traffic Shaping	133
Applying a Queuing Policy on a System	135
Verifying the Queuing and Scheduling Configuration	135
Controlling the QoS Shared Buffer	136
Managing Dynamic Buffer Sharing	136
Monitoring the QoS Packet Buffer	137
Configuration Examples for Queuing and Scheduling	138
Example: Configuring WRED on Egress Queues	138
Example: Configuring Traffic Shaping	139

---

**CHAPTER 9**

<b>Configuring Network QoS</b>	<b>141</b>
About Network QoS	141
Prerequisites for Network QoS	141
Guidelines and Limitations for Network QoS	141
Dynamic Packet Prioritization	142
Configuring Network QoS Policies	143
Copying a Predefined Network QoS Policy	143
Configuring a User-Defined Network QoS Policy	144
Applying a Network QoS Policy on a System	145
Verifying the Network QoS	146

---

**CHAPTER 10**

<b>Configuring Link Level Flow Control</b>	<b>147</b>
Link Level Flow Control	147

Guidelines and Limitations for Link Level Flow Control	147
Information About Link Level Flow Control	148
Link Level Flow Control on Interfaces	148
Link Level Flow Control on Ports	148
Mismatched Link Level Flow Control Configurations	149
How to Configure Link Level Flow Control	149
Configuring Link Level Flow Control Receive	149
Configuring Link Level Flow Control Transmit	150
Configuration Examples for Link Level Flow Control	151
Example: Configuring Link Level Flow Control Receive and Send	151

---

**CHAPTER 11**

<b>Configuring Priority Flow Control</b>	<b>153</b>
About Priority Flow Control	153
About Priority Flow Control Watchdog	153
Workflow of Priority Flow Control Watchdog	154
Prerequisites for Priority Flow Control	155
Guidelines and Limitations for Priority Flow Control	155
Default Settings for Priority Flow Control	158
Configuring Priority Flow Control	158
Enabling Priority Flow Control on a Traffic Class	159
Configuring a Link Level Flow Control Watchdog and Priority Flow Control Watchdog	163
Configuring Pause Buffer Thresholds and Queue Limit Using Ingress Queuing Policy	168
Verifying the Priority Flow Control Configuration	170
Configuration Examples for Priority Flow Control	170

---

**CHAPTER 12**

<b>Monitoring QoS Statistics</b>	<b>175</b>
About QoS Statistics	175
Prerequisites for Monitoring QoS Statistics	175
Guidelines and Limitations for Monitoring QoS Statistics	175
Enabling Statistics	177
Monitoring the Statistics	179
Clearing Statistics	179
Configuration Examples For Monitoring QoS Statistics	179



---

<b>CHAPTER 13</b>	<b>Micro-Burst Monitoring</b>	<b>181</b>
	Micro-Burst Monitoring	181
	Guidelines and Limitations for Micro-Burst Monitoring	181
	Configuring Micro-Burst Detection Per-Queue	184
	Configuring Micro-Burst Detection Per-Switch	186
	Clearing Micro-Burst Detection	187
	Verifying Micro-Burst Detection	188
	Example of Micro-Burst Detection Output	189

---

<b>APPENDIX A</b>	<b>FEX QoS Configuration</b>	<b>191</b>
	FEX QoS Configuration Information	191
	TCAM Carving for FEX QoS	193
	FEX QoS Configuration Example	194
	Verifying the FEX QoS Configuration	210

---

<b>APPENDIX B</b>	<b>Additional References</b>	<b>211</b>
	RFCs	211





## Preface

---

This preface includes the following sections:

- [Audience, on page xi](#)
- [Document Conventions, on page xi](#)
- [Related Documentation for Cisco Nexus 9000 Series Switches, on page xii](#)
- [Documentation Feedback, on page xii](#)
- [Communications, Services, and Additional Information, on page xii](#)

## Audience

This publication is for network administrators who install, configure, and maintain Cisco Nexus switches.

## Document Conventions

Command descriptions use the following conventions:

Convention	Description
<b>bold</b>	Bold text indicates the commands and keywords that you enter literally as shown.
<i>Italic</i>	Italic text indicates arguments for which you supply the values.
[x]	Square brackets enclose an optional element (keyword or argument).
[x   y]	Square brackets enclosing keywords or arguments that are separated by a vertical bar indicate an optional choice.
{x   y}	Braces enclosing keywords or arguments that are separated by a vertical bar indicate a required choice.
[x {y   z}]	Nested set of square brackets or braces indicate optional or required choices within optional or required elements. Braces and a vertical bar within square brackets indicate a required choice within an optional element.

Convention	Description
<i>variable</i>	Indicates a variable for which you supply values, in context where italics cannot be used.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string includes the quotation marks.

Examples use the following conventions:

Convention	Description
<code>screen font</code>	Terminal sessions and information the switch displays are in screen font.
<b>boldface screen font</b>	Information that you must enter is in boldface screen font.
<i>italic screen font</i>	Arguments for which you supply values are in italic screen font.
<>	Nonprinting characters, such as passwords, are in angle brackets.
[ ]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

## Related Documentation for Cisco Nexus 9000 Series Switches

The entire Cisco Nexus 9000 Series switch documentation set is available at the following URL:

[http://www.cisco.com/en/US/products/ps13386/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/ps13386/tsd_products_support_series_home.html)

## Documentation Feedback

To provide technical feedback on this document, or to report an error or omission, please send your comments to [nexus9k-docfeedback@cisco.com](mailto:nexus9k-docfeedback@cisco.com). We appreciate your feedback.

## Communications, Services, and Additional Information

- To receive timely, relevant information from Cisco, sign up at [Cisco Profile Manager](#).
- To get the business impact you're looking for with the technologies that matter, visit [Cisco Services](#).
- To submit a service request, visit [Cisco Support](#).
- To discover and browse secure, validated enterprise-class apps, products, solutions, and services, visit [Cisco DevNet](#).
- To obtain general networking, training, and certification titles, visit [Cisco Press](#).
- To find warranty information for a specific product or product family, access [Cisco Warranty Finder](#).

## Cisco Bug Search Tool

[Cisco Bug Search Tool](#) (BST) is a gateway to the Cisco bug-tracking system, which maintains a comprehensive list of defects and vulnerabilities in Cisco products and software. The BST provides you with detailed defect information about your products and software.

## Documentation Feedback

To provide feedback about Cisco technical documentation, use the feedback form available in the right pane of every online document.





# CHAPTER 1

## New and Changed Information

- [New and Changed Information, on page 1](#)

## New and Changed Information

This table summarizes the new and changed features for the *Cisco Nexus 9000 Series NX-OS Quality of Service Configuration Guide, Release 10.4(x)* and where they are documented.

**Table 1: New and Changed Features**

Feature	Description	Changed in Release	Where Documented
QoS	Added support for QoS on Cisco Nexus 9364C-H1 switches.	10.4(3)F	<a href="#">Guidelines and Limitations for Network QoS, on page 141</a>
QoS Classification	Added support for QoS Classification on Cisco Nexus 93108TC-FX3 switches.	10.4(2)F	<a href="#">Guidelines and Limitations for Classification, on page 56</a>
Link Level Flow Control (LLFC)	Added support for LLFC on Cisco Nexus 93108TC-FX3 switches.	10.4(2)F	<a href="#">Guidelines and Limitations for Link Level Flow Control, on page 147</a>
QoS TCAM Regions	Added support for TCAM on Cisco Nexus 93108TC-FX3 switches.	10.4(2)F	<a href="#">Guidelines and Limitations for QoS TCAM Carving, on page 41</a>
Priority Flow Control (PFC)	Added support for PFC on Cisco Nexus 93108TC-FX3 switches.	10.4(2)F	<a href="#">Guidelines and Limitations for Priority Flow Control, on page 155</a>
QoS – Queuing and scheduling	Added support for Queuing and scheduling to Cisco Nexus 93108TC-FX3 switches.	10.4(2)F	<a href="#">Guidelines and Limitations for Queuing and Scheduling, on page 110</a>

Feature	Description	Changed in Release	Where Documented
QoS	Added support for QoS on Cisco Nexus 93400LD-H1 switches.	10.4(2)F	<a href="#">Guidelines and Limitations for Network QoS, on page 141</a>
QoS – Queuing and scheduling	Added support for Queuing and scheduling on the following switches and line cards: <ul style="list-style-type: none"> <li>• Cisco Nexus 9804 platform switches</li> <li>• Cisco Nexus X98900CD-A and X9836DM-A line cards with Cisco Nexus 9808 and 9804 switches</li> </ul>	10.4(1)F	<a href="#">Guidelines and Limitations for Queuing and Scheduling, on page 110</a>
Queuing Stats	Added support for queuing statistics on the following switches and line cards: <ul style="list-style-type: none"> <li>• Cisco Nexus 9804 platform switches</li> <li>• Cisco Nexus X98900CD-A and X9836DM-A line cards with Cisco Nexus 9808 and 9804 switches</li> </ul>	10.4(1)F	<a href="#">Guidelines and Limitations for Queuing and Scheduling, on page 110</a>
ACL/QoS scale	Added support for ACL/QoS scale on the Cisco Nexus 9808/9804 platform switches.	10.4(1)F	<a href="#">Guidelines and Limitations for Classification, on page 56</a> <a href="#">Configuration Examples for Classification, on page 73</a>
ACL TCAM Regions	Added support for TCAM on Cisco Nexus 9348GCFX3 and 9348GC-FX3PH switches.	10.4(1)F	<a href="#">Guidelines and Limitations for QoS TCAM Carving, on page 41</a>
QoS Classification	Added support for QoS Classification on Cisco Nexus 9348GCFX3 and 9348GC-FX3PH switches.	10.4(1)F	<a href="#">Guidelines and Limitations for Classification, on page 56</a>
Priority Flow Control (PFC)	Added support for PFC on Cisco Nexus 9348GCFX3 switches.	10.4(1)F	<a href="#">Guidelines and Limitations for Priority Flow Control, on page 155</a>



<b>Feature</b>	<b>Description</b>	<b>Changed in Release</b>	<b>Where Documented</b>
Link Level Flow Control (LLFC)	Added support for LLFC on Cisco Nexus 9348GCFX3 switches.	10.4(1)F	<a href="#">Guidelines and Limitations for Link Level Flow Control, on page 147</a>
QoS – Queuing and scheduling	Added support for Queuing and scheduling on Cisco Nexus 9348GCFX3 switches.	10.4(1)F	<a href="#">Guidelines and Limitations for Queuing and Scheduling, on page 110</a>
QoS	Added support for QoS on Cisco Nexus 9332D-H2R switches.	10.4(1)F	<a href="#">Guidelines and Limitations for Network QoS, on page 141</a>





## CHAPTER 2

# Overview

---

- [Licensing Requirements, on page 5](#)
- [Supported Platforms, on page 5](#)
- [About QoS Features, on page 5](#)
- [Using QoS, on page 6](#)
- [Classification, on page 6](#)
- [Marking, on page 7](#)
- [Policing, on page 7](#)
- [Queuing and Scheduling, on page 7](#)
- [Sequencing of QoS Actions, on page 7](#)
- [High Availability Requirements for QoS Features, on page 8](#)
- [QoS Feature Configuration with MQC, on page 8](#)
- [QoS Statistics, on page 9](#)
- [Default QoS Behavior, on page 9](#)
- [Virtual Device Contexts, on page 9](#)

## Licensing Requirements

For a complete explanation of Cisco NX-OS licensing recommendations and how to obtain and apply licenses, see the [Cisco NX-OS Licensing Guide](#) and the [Cisco NX-OS Licensing Options Guide](#).

## Supported Platforms

Starting with Cisco NX-OS release 7.0(3)I7(1), use the [Nexus Switch Platform Support Matrix](#) to know from which Cisco NX-OS releases various Cisco Nexus 9000 and 3000 switches support a selected feature.

## About QoS Features

You use the QoS features to provide the most desirable flow of traffic through a network. QoS allows you to classify the network traffic, police and prioritize the traffic flow, and help avoid traffic congestion in a network. The control of traffic is based on the fields in the packets that flow through the system. You use the Modular QoS (MQC) CLI to create the traffic classes and policies of the QoS features.

QoS features are applied using QoS and queuing policies as follows:

- QoS policies include classification and marking features.
- QoS policies include policing features.
- QoS policies include shaping, weighted random early detection (WRED), and explicit congestion notification (ECN) features.
- Queuing policies use the queuing and scheduling features.



---

**Note** The system-defined QoS features and values that are discussed in the “Using Modular QoS CLI” section apply globally to the entire device and cannot be modified.

---

## Using QoS

Traffic is processed based on how you classify it and the policies that you create and apply to traffic classes.

To configure QoS features, you use the following steps:

1. Create traffic classes by classifying the incoming packets that match criteria such as IP address or QoS fields.
2. Create policies by specifying actions to take on the traffic classes, such as policing, marking, or dropping packets.
3. Apply policies to a port, port channel, or subinterface.

You use MQC to create the traffic classes and policies of the QoS features.



---

**Note** The queuing and scheduling operations of the overall QoS feature are applicable to both IPv4 and IPv6.

---



---

**Note** IP tunnels do not support access control lists (ACLs) or QoS policies.

---

## Classification

You use classification to partition traffic into classes. You classify the traffic based on the port characteristics or the packet header fields that include IP precedence, differentiated services code point (DSCP), Layer 3 to Layer 4 parameters, and the packet length.

The values used to classify traffic are called match criteria. When you define a traffic class, you can specify multiple match criteria, you can choose to not match on a particular criterion, or you can determine the traffic class by matching any or all criteria.

Traffic that fails to match any class is assigned to a default class of traffic called class-default.

## Marking

Marking is the setting of QoS information that is related to a packet. You can set the value of a standard QoS field for COS, IP precedence and DSCP, and internal labels (such as QoS groups) that can be used in subsequent actions. Marking QoS groups is used to identify the traffic type for queuing and scheduling traffic.

## Policing

Policing is the monitoring of data rates for a particular class of traffic. The device can also monitor associated burst sizes.

Single-rate policers monitor the specified committed information rate (CIR) of traffic. Dual-rate policers monitor both CIR and peak information rate (PIR) of traffic.

## Queuing and Scheduling

The queuing and scheduling process allows you to control the bandwidth allocated to traffic classes so that you achieve the desired trade-off between throughput and latency.

You can apply weighted random early detection (WRED) to a class of traffic, which allows packets to be dropped based on the QoS group. The WRED algorithm allows you to perform proactive queue management to avoid traffic congestion.

You can shape traffic by imposing a maximum data rate on a class of traffic so that excess packets are retained in a queue to smooth (constrain) the output rate. In addition, minimum bandwidth shaping can be configured to provide a minimum guaranteed bandwidth for a class of traffic.

You can limit the size of the queues for a particular class of traffic by applying either static or dynamic limits.

ECN can be enabled along with WRED on a particular class of traffic to mark the congestion state instead of dropping the packets.

## Sequencing of QoS Actions

The following are the three types of policies:

- **network qos**—Defines the characteristics of QoS properties network wide.
- **qos**—Defines MQC objects that you can use for marking and policing.
- **queuing**—Defines MQC objects that you can use for queuing and scheduling.



---

**Note** The default type of policy is **qos**.

---

The system performs actions for QoS policies only if you define them under the type **qos** service policies.

## Sequencing of Ingress Traffic Actions

The sequence of QoS actions on ingress traffic is as follows:

1. Classification
2. Marking
3. Policing

## Sequencing of Egress Traffic Actions

The sequencing of QoS actions on egress traffic is as follows:

1. Queuing and scheduling

## High Availability Requirements for QoS Features

The Cisco NX-OS QoS software recovers its previous state after a software restart, and it is capable of a switchover from the active supervisor to the standby supervisor without a loss of state.



**Note** For complete information on high availability, see the *Cisco Nexus 9000 Series NX-OS High Availability and Redundancy Guide*.

## QoS Feature Configuration with MQC

You use MQC to configure QoS features. The MQC configuration commands are shown in the following table:

**Table 2: MQC Configuration Commands**

MQC Command	Description
<b>class-map</b>	Defines a class map that represents a class of traffic.
<b>policy-map</b>	Defines a policy map that represents a set of policies to be applied to a set of class maps.

You can modify or delete MQC objects, except system-defined objects, when the objects are not associated with any interfaces.

After a QoS policy is defined, you can attach the policy map to an interface by using the interface configuration command shown in the following table:

**Table 3: Interface Command to Attach a Policy Map to an Interface**

Interface Command	Description
<b>service-policy</b>	Applies the specified policy map to input or output packets on the interface.

## QoS Statistics

Statistics are maintained for each policy, class action, and match criteria per interface. You can enable or disable the collection of statistics, you can display statistics using the **show policy-map** interface command, and you can clear statistics based on an interface or policy map with the **clear qos statistics** command. Statistics are enabled by default and can be disabled globally.

## Default QoS Behavior

The QoS queuing features are enabled by default. Specific QoS-type features, such as policing and marking, are enabled only when a policy is attached to an interface. Specific policies are enabled when that policy is attached to an interface.

By default, the device always enables a system default queuing policy, or system-defined queuing policy map, on each port and port channel. When you configure a queuing policy and apply the new queuing policy to specified interfaces, the new queuing policy replaces the default queuing policy, and those rules now apply.

The device enables other QoS features, policing and marking, only when you apply a policy map to an interface.

## Virtual Device Contexts

Cisco NX-OS can segment operating system and hardware resources into virtual device contexts (VDCs) that emulate virtual devices. The Cisco Nexus 9000 Series device currently does not support multiple VDCs. All device resources are managed in the default VDC.



---

**Note** The VDC feature is not supported on the Cisco Nexus 9508 switch (NX-OS 7.0(3)F3(3)).

---







## CHAPTER 3

# Using Modular QoS CLI

- [About MQC, on page 11](#)
- [Guidelines and Limitations for Modular QoS CLI, on page 12](#)
- [System Classes, on page 12](#)
- [Default System Classes, on page 12](#)
- [Using an MQC Object, on page 13](#)
- [Attaching and Detaching a QoS Policy Action, on page 30](#)
- [Configuring a Service Policy for a Layer 2 Interface, on page 31](#)
- [Configuring a Service Policy for a Layer 3 Interface, on page 32](#)
- [Attaching the System Service Policy, on page 34](#)
- [Attaching a QoS Policy Action to a VLAN, on page 34](#)
- [Session Manager Support for QoS, on page 36](#)

## About MQC

Cisco Modular Quality of Service Command Line Interface (MQC) provides a language to define QoS policies.

You configure QoS policies by following these three steps:

1. Define traffic classes.
2. Associate policies and actions with each traffic class.
3. Attach policies to logical or physical interfaces.

MQC provides a command type to define traffic classes and policies:

- **policy-map**—Defines a policy map that represents a set of policies to be applied on a class-by-class basis to class maps.

The policy map defines a set of actions to take on the associated traffic class, such as limiting the bandwidth or dropping packets.

You define the following class-map and policy-map object types when you create them:

- **network qos**—Defines MQC objects that you can use for system level-related actions.
- **qos**—Defines MQC objects that you can use for marking and policing.
- **queuing**—Defines MQC objects that you can use for queuing and scheduling.



---

**Note** The **qos** type is the default.  
Egress QoS policies are not supported on the subinterfaces.

---

You can attach policies to ports, port channels, or subinterfaces by using the **service-policy** command.

You can view all or individual values for MQC objects by using the **show class-map** and **show policy-map** commands.



---

**Caution** In the interface configuration mode, the device can accept QoS and access control list (ACL) commands irrespective of the line card on which the interface host is up or down. However, you cannot enter the interface submode when the line card is down because the device does not accept any preconfiguration information.

---

## Guidelines and Limitations for Modular QoS CLI

Modular QoS CLI has the following configuration guidelines and limitations:

- On devices with R-Series line cards, data forwarding is not supported when configured with 4q mode policies. Instead, configure the device with 8q mode policies.

## System Classes

The system qos is a type of MQC target. You use a service policy to associate a policy map with the system qos target. A system qos policy applies to all interfaces on the device unless a specific interface has an overriding service-policy configuration. The system qos policies are used to define system classes, the classes of traffic across the entire device, and their attributes.

If service policies are configured at the interface level, the interface-level policy always takes precedence over the system class configuration or defaults.

When you configure QoS features, and the system requests MQC objects, you can use system-defined MQC objects for 4q mode or system-defined objects for 8q mode.

On the Cisco Nexus device, a system class is uniquely identified by a qos-group value. A total of four system classes are supported. The device supports one default class which is always present on the device. Up to three additional system classes can be created by the administrator. Only egress queuing, network-qos, and type qos for FEX policies are supported on the system QoS target.

## Default System Classes

The device provides the following system classes:

- Drop system class

By default, the software classifies all unicast and multicast Ethernet traffic into the default drop system class. This class is identified by qos-group 0.

## Using an MQC Object

You configure QoS and queuing policies using the MQC class-map and policy-map objects. After you configure class maps and policy maps, you can attach one policy map of each type to an interface. A QoS policy can only be applied to the ingress direction.

A policy map contains either a QoS policy or queuing policy. The policy map references the names of class maps that represent traffic classes. For each class of traffic, the device applies the policies on the interface or VLAN that you select.

A packet is matched sequentially to a class of traffic starting from the first traffic class definition. When a match is found, the policy actions for that class are applied to the packet.


The reserved class map class-default receives all traffic that is not matched in type qos policies, and the device applies the policy actions as it would for any other traffic class.

## Type qos Policies

You use type qos policies to mark and to police packets, and to set qos-groups, which drive matching conditions for system-defined type network-qos and type queuing class-maps.

The following figure shows the QoS policy structure with the associated MQC objects of type qos. The MQC objects are shown in bold.

**Figure 1: QoS Policy Diagram Showing Type qos MQC Object Usage**

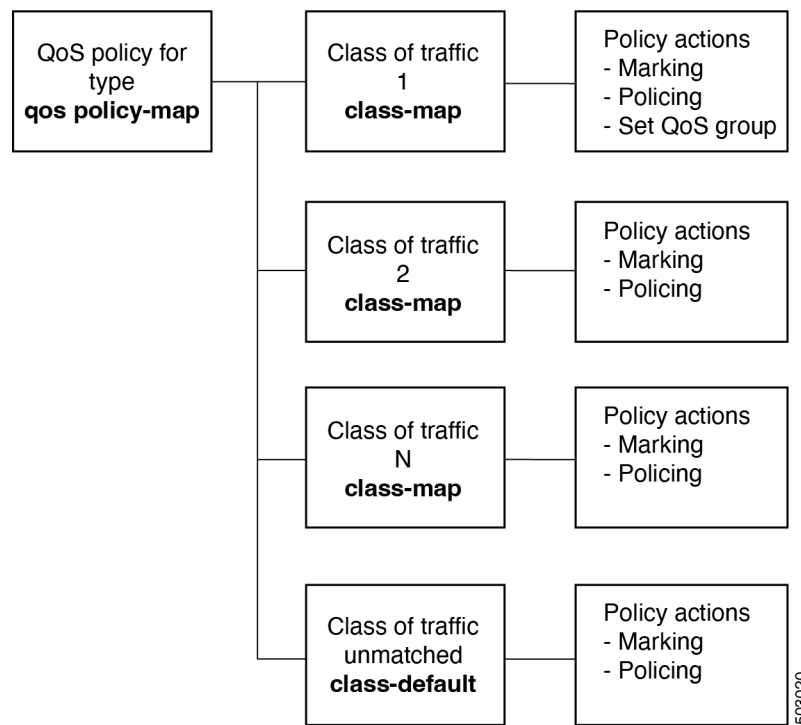


## Type Queuing Policies

You use type queuing policies to shape and queue packets.

The following figure shows the QoS policy structure with associated MQC objects of type queuing. The MQC objects are shown in bold.

**Figure 2: QoS Policy Diagram Showing Type Queuing MQC Object Usage**

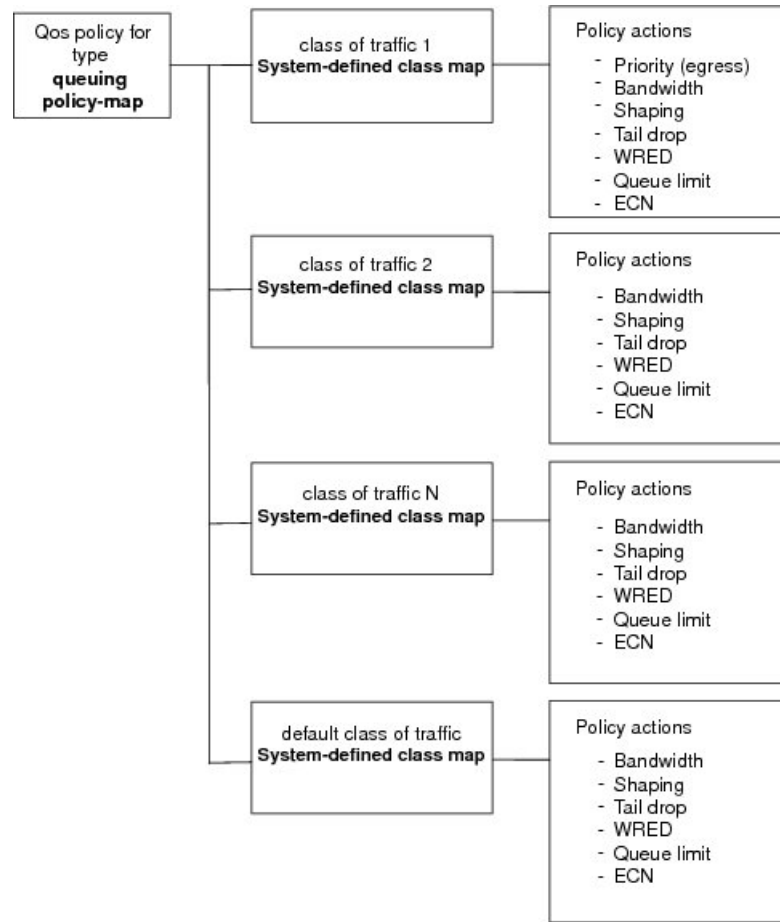

Note: See the "Configuring Queuing and Scheduling" chapter for information on configuring these parameters.

## System-Defined MQC Objects

When you configure QoS features, and the system requests MQC objects, you can use system-defined objects for 4q mode or system-defined objects for 8q mode.

The system-defined objects for 8q mode are supported on the following devices:

- N9K-C92348GC-X
- Cisco Nexus 9300-EX switches

- Cisco Nexus 9300-FX switches
- Cisco Nexus 9300-FX2 switches
- Cisco Nexus 9300-GX switches
- Cisco Nexus 9504, 9508, and 9516 switches with -EX or -FX line cards.



---

**Note** When FEX is connected, it should be configured with 4q.

---



---

**Note** The following Cisco Nexus switches and line cards do not support system-defined objects for 8q mode:

- N9K-C9272Q
  - N9K-C9332PQ
  - N9K-C93120TX
  - N9K-X9464PX
  - N9K-X9432PQ
- 



---

**Note** System-defined objects for 8q mode are not supported on ACI (Application Centric Infrastructure) capable linecards.

---

## System-Defined MQC Objects for 4q Mode

When you configure QoS features, and the system requests MQC objects, you can use the following system-defined objects:



---

**Note** The Cisco Nexus 9000 series NX-OS system operates in 8q mode by default. You must enable the following MQC objects to change to 4q mode.

---



---

**Note** System-defined MQC objects for 4q mode are not supported on the Cisco Nexus 9508 switch (NX-OS 7.0(3)F3(3)).

---

- Type qos class maps

**Table 4: System-Defined Type qos Class Maps**

Class Map Name	Description
class-default	Type qos class map that is assigned to all packets that match none of the criteria of traffic classes that you define in a type qos policy map.

- Type queuing class maps

**Table 5: System-Defined Type queuing Class Maps for 4q Mode**

Class Map Queue Name	Description
c-out-q-default	Egress default queue — QoS group 0
c-out-q1	Egress queue 1 — QoS group 1
c-out-q2	Egress queue 2 — QoS group 2
c-out-q3	Egress queue 3 — QoS group 3

- Type network-qos class maps

**Table 6: System-Defined Type network-qos Class Maps for 4q Mode**

Class Map Network-QoS Name	Description
c-nq-default	Network-qos class — QoS group 0
c-nq1	Network-qos class — QoS group 1
c-nq2	Network-qos class — QoS group 2
c-nq3	Network-qos class — QoS group 3

- Policy maps

**Table 7: System-Defined Queuing Policy Maps for 4q Mode**

Queuing Policy Map Name	Description
default-out-policy	Output queuing policy map that is attached to all module ports to which you do not apply a queuing policy map. The default configuration values are as follows:  <pre> policy-map type queuing default-out-policy   class type queuing c-out-q3     priority level 1   class type queuing c-out-q2     bandwidth remaining percent 0   class type queuing c-out-q1     bandwidth remaining percent 0   class type queuing c-out-q-default     bandwidth remaining percent 100 </pre>

Queuing Policy Map Name	Description
default-network-qos-policy	<p>Network-qos queuing policy map that is attached to all module ports to which you do not apply a queuing policy map. The default configuration values are as follows:</p> <pre> policy-map type network-qos default-nq-policy   class type network-qos c-nq3     match qos-group 3     mtu 1500   class type network-qos c-nq2     match qos-group 2     mtu 1500   class type network-qos c-nq1     match qos-group 1     mtu 1500   class type network-qos c-nq-default     match qos-group 0     mtu 1500 </pre>

## System-Defined MQC Objects for 8q Mode

When you configure QoS features, and the system requests MQC objects, you can use the following system-defined objects:



**Note** System-defined MQC objects for 8q mode are the default MQC objects.

- Type qos class maps

**Table 8: System-Defined Type qos Class Maps**

Class Map Name	Description
class-default	Type qos class map that is assigned to all packets that match none of the criteria of traffic classes that you define in a type qos policy map.

- Type queuing class maps

**Table 9: System-Defined Type queuing Class Maps for 8q Mode (Egress)**

Class Map Queue Name	Description
c-out-8q-q-default	Egress default queue — QoS group 0
c-out-8q-q1	Egress queue 1 — QoS group 1
c-out-8q-q2	Egress queue 2 — QoS group 2
c-out-8q-q3	Egress queue 3 — QoS group 3
c-out-8q-q4	Egress queue 4 — QoS group 4
c-out-8q-q5	Egress queue 5 — QoS group 5

Class Map Queue Name	Description
c-out-8q-q6	Egress queue 6 — QoS group 6
c-out-8q-q7	Egress queue 7 — QoS group 7

**Table 10: System-Defined Type queuing Class Maps for 8q Mode (Ingress)**

Class Map Queue Name	Description
c-in-q-default	Ingress default queue — QoS group 0
c-in-q1	Ingress queue 1 — QoS group 1
c-in-q2	Ingress queue 2 — QoS group 2
c-in-q3	Ingress queue 3 — QoS group 3
c-in-q4	Ingress queue 4 — QoS group 4
c-in-q5	Ingress queue 5 — QoS group 5
c-in-q6	Ingress queue 6 — QoS group 6
c-in-q7	Ingress queue 7 — QoS group 7

- Type network-qos class maps



**Note** The System-Defined Type network-qos Class Maps for 8q Mode are not supported on the Cisco Nexus 9508 switch (NX-OS 7.0(3)F3(3)).

**Table 11: System-Defined Type network-qos Class Maps for 8q Mode**

Class Map Network-QoS Name	Description
c-8q-nq-default	Network-qos class — QoS group 0
c-8q-nq1	Network-qos class — QoS group 1
c-8q-nq2	Network-qos class — QoS group 2
c-8q-nq3	Network-qos class — QoS group 3
c-8q-nq4	Network-qos class — QoS group 4
c-8q-nq5	Network-qos class — QoS group 5
c-8q-nq6	Network-qos class — QoS group 6
c-8q-nq7	Network-qos class — QoS group 7



- Policy maps

**Table 12: System-Defined Queuing Policy Maps for 8q Mode**

Queuing Policy Map Name	Description
default-8q-out-policy	<p>Output queuing policy map that is attached to all module ports to which you do not apply a queuing policy map. The default configuration values are as follows:</p> <pre> policy-map type queuing default-8q-out-policy   class type queuing c-out-8q-q7     priority level 1   class type queuing c-out-8q-q6     bandwidth remaining percent 0   class type queuing c-out-8q-q5     bandwidth remaining percent 0   class type queuing c-out-8q-q4     bandwidth remaining percent 0   class type queuing c-out-8q-q3     bandwidth remaining percent 0   class type queuing c-out-8q-q2     bandwidth remaining percent 0   class type queuing c-out-8q-q1     bandwidth remaining percent 0   class type queuing c-out-8q-q-default     bandwidth remaining percent 100 </pre>
default-8q-network-qos-policy	<p>Network-qos queuing policy map that is attached to all module ports to which you do not apply a queuing policy map. The default configuration values are as follows:</p> <pre> policy-map type network-qos default-8q-nq-policy   class type network-qos c-8q-nq7     match qos-group 7     mtu 1500   class type network-qos c-8q-nq6     match qos-group 6     mtu 1500   class type network-qos c-8q-nq5     match qos-group 5     mtu 1500   class type network-qos c-8q-nq4     match qos-group 4     mtu 1500   class type network-qos c-8q-nq3     match qos-group 3     mtu 1500   class type network-qos c-8q-nq2     match qos-group 2     mtu 1500   class type network-qos c-8q-nq1     match qos-group 1     mtu 1500   class type network-qos c-8q-nq-default     match qos-group 0     mtu 1500 </pre>

## Changing to 8q Mode




---

**Note** The Cisco Nexus 9000 series NX-OS system operates in 8q mode by default.

---

Use the following guidelines to change to 8q mode:

- Change the network-qos policy to 8q mode.

You can either activate the default-8q-nq-policy (which is the system created 8q default network-qos policy); or you can copy it using the **qos copy policy-map type network-qos** command, edit it as needed, and activate it.

- Change the queuing policy to 8q mode. (This means changing the system queuing policy and optionally any interface queuing policy.)

Make a copy of the default-8q-out-policy (the default 8q queuing policy created by the system) using the **qos copy policy-map type queuing** command. Edit the copy of the default-8q-out-policy as needed and activate it at the system level and optionally at the interface level.

- After the network-qos and queuing policies are changed to 8q mode, you can start using **set qos-group** action for qos-groups 4-7 to steer the traffic to queues 4-7.

### Notes About 8q Mode

The following are notes about 8q mode:

- When 8q policies are in active use, the system cannot be downgraded to a system image that does not support 8q mode.




---

**Note** As a best practice to avoid incompatibilities, remove the 8q policies before a downgrade.

---

The following example shows some incompatibilities when trying to downgrade to a system image that does not support 8q mode.

```
switch# show incompatibility nxos bootflash:n9000-dk9.6.1.2.I1.2.bin
```

The following configurations on active are incompatible with the system image

```
1) Service : ipqosmgr , Capability : CAP_FEATURE_IPQOS_8Q_QUE_POLICY_ACTIVE
Description : QoS Manager - 8Q queuing policy active
Capability requirement : STRICT
Enable/Disable command : Please remove 8q queuing policy
```

```
2) Service : ipqosmgr , Capability : CAP_FEATURE_IPQOS_8Q_NQOS_POLICY_ACTIVE
Description : QoS Manager - 8Q network-qos policy active
Capability requirement : STRICT
Enable/Disable command : Please remove 8q network-qos policy
```

- No 8q policies can be activated on a system that has linecards that do not support 8-queues. All ACI (Application Centric Infrastructure) capable linecards do not support 8-queues.



**Note** As a best practice, power off all linecards that do not support 8-queues before using 8-queue functionality.

The following example shows some of the errors that occur when you attempt to use 8-queue functionality on a system that has linecards that do not support 8-queues.

```
switch(config)# system qos
switch(config-sys-qos)# service-policy type queuing output default-8q-out-policy
ERROR: policy-map default-8q-out-policy can be activated only on 8q capable platforms

switch(config)# system qos
switch(config-sys-qos)# service-policy type network-qos default-8q-nq-policy
ERROR: policy-map default-8q-nq-policy can be activated only on 8q capable platforms

switch(config)# policy-map p1
switch(config-pmap-qos)# class c1
switch(config-pmap-c-qos)# set qos-group 7
ERROR: set on qos-group 4-7 is supported only on 8q capable platforms
```

### Example of Changing to 8q Mode

The following is an example of changing to 8q mode:



**Note** This example is not applicable to the Cisco Nexus 9508 switch (NX-OS 7.0(3)F3(3)).

```
switch# qos copy policy-map type network-qos default-8q-nq-policy prefix my
switch# show policy-map type network-qos

Type network-qos policy-maps
=====
policy-map type network-qos my8q-nq
  class type network-qos c-8q-nq7
    mtu 1500
  class type network-qos c-8q-nq6
    mtu 1500
  class type network-qos c-8q-nq5
    mtu 1500
  class type network-qos c-8q-nq4
    mtu 1500
  class type network-qos c-8q-nq3
    mtu 1500
  class type network-qos c-8q-nq2
    mtu 1500
  class type network-qos c-8q-nq1
    mtu 1500
  class type network-qos c-8q-nq-default
    mtu 1500

switch# config t
switch(config)# policy-map type network-qos my8q-nq
switch(config-pmap-nqos)# class type network-qos c-8q-nq1
switch(config-pmap-nqos-c)# mtu 9216
```

```

switch(config-pmap-nqos-c)# class type network-qos c-8q-nq2
switch(config-pmap-nqos-c)# mtu 2240
switch(config-pmap-nqos-c)# class type network-qos c-8q-nq4
switch(config-pmap-nqos-c)# pause pfc-cos 4
switch(config-pmap-nqos-c)# class type network-qos c-8q-nq5
switch(config-pmap-nqos-c)# mtu 2240
switch(config-pmap-nqos-c)# pause pfc-cos 5
switch(config-pmap-nqos-c)# class type network-qos c-8q-nq6
switch(config-pmap-nqos-c)# mtu 9216
switch(config-pmap-nqos-c)# pause pfc-cos 6
switch(config-pmap-nqos-c)# show policy-map type network-qos my8q-nq

Type network-qos policy-maps
=====
policy-map type network-qos my8q-nq
  class type network-qos c-8q-nq7
    mtu 1500
  class type network-qos c-8q-nq6
    pause pfc-cos 6
    mtu 9216
  class type network-qos c-8q-nq5
    pause pfc-cos 5
    mtu 2240
  class type network-qos c-8q-nq4
    pause pfc-cos 4
    mtu 1500
  class type network-qos c-8q-nq3
    mtu 1500
  class type network-qos c-8q-nq2
    mtu 2240
  class type network-qos c-8q-nq1
    mtu 9216
  class type network-qos c-8q-nq-default
    mtu 1500

switch(config)# system qos
switch(config-sys-qos)# service-policy type network-qos my8q-nq
switch(config-sys-qos)# 2014 Jun 12 11:13:48 switch %$ VDC-1 %$
%IPQOSMGR-2-QOSMGR_NETWORK_QOS_POLICY_CHANGE: Policy my8q-nq is now active

switch(config-sys-qos)# show policy-map system type network-qos

Type network-qos policy-maps
=====
policy-map type network-qos my8q-nq
  class type network-qos c-8q-nq7
    match qos-group 7
    mtu 1500
  class type network-qos c-8q-nq6
    match qos-group 6
    pause pfc-cos 6
    mtu 9216
  class type network-qos c-8q-nq5
    match qos-group 5
    pause pfc-cos 5
    mtu 2240
  class type network-qos c-8q-nq4
    match qos-group 4
    pause pfc-cos 4
    mtu 1500
  class type network-qos c-8q-nq3
    match qos-group 3
    mtu 1500
  class type network-qos c-8q-nq2

```

```

    match qos-group 2
    mtu 2240
class type network-qos c-8q-nq1
    match qos-group 1
    mtu 9216
class type network-qos c-8q-nq-default
    match qos-group 0
    mtu 1500

```

```

switch# qos copy policy-map type queuing default-8q-out-policy prefix my
switch# show policy-map type queuing my8q-out

```

```

Type queuing policy-maps
=====

```

```

policy-map type queuing my8q-out
  class type queuing c-out-8q-q7
    priority level 1
  class type queuing c-out-8q-q6
    bandwidth remaining percent 0
  class type queuing c-out-8q-q5
    bandwidth remaining percent 0
  class type queuing c-out-8q-q4
    bandwidth remaining percent 0
  class type queuing c-out-8q-q3
    bandwidth remaining percent 0
  class type queuing c-out-8q-q2
    bandwidth remaining percent 0
  class type queuing c-out-8q-q1
    bandwidth remaining percent 0
  class type queuing c-out-8q-q-default
    bandwidth remaining percent 100

```

```

switch# config t
switch(config)# policy-map type queuing my8q-out
switch(config-pmap-c-que)# class type queuing c-out-8q-q-default
switch(config-pmap-c-que)# bandwidth remaining percent 30
switch(config-pmap-c-que)# class type queuing c-out-8q-q1
switch(config-pmap-c-que)# bandwidth remaining percent 15
switch(config-pmap-c-que)# class type queuing c-out-8q-q2
switch(config-pmap-c-que)# bandwidth remaining percent 15
switch(config-pmap-c-que)# class type queuing c-out-8q-q3
switch(config-pmap-c-que)# bandwidth remaining percent 10
switch(config-pmap-c-que)# class type queuing c-out-8q-q4
switch(config-pmap-c-que)# bandwidth remaining percent 10
switch(config-pmap-c-que)# class type queuing c-out-8q-q5
switch(config-pmap-c-que)# bandwidth remaining percent 10
switch(config-pmap-c-que)# class type queuing c-out-8q-q6
switch(config-pmap-c-que)# bandwidth remaining percent 10
switch(config-pmap-c-que)# show policy-map type queuing my8q-out

```

```

Type queuing policy-maps
=====

```

```

policy-map type queuing my8q-out
  class type queuing c-out-8q-q7
    priority level 1
  class type queuing c-out-8q-q6
    bandwidth remaining percent 10
  class type queuing c-out-8q-q5
    bandwidth remaining percent 10
  class type queuing c-out-8q-q4

```

## Example of set qos-groups

```

    bandwidth remaining percent 10
class type queuing c-out-8q-q3
    bandwidth remaining percent 10
class type queuing c-out-8q-q2
    bandwidth remaining percent 15
class type queuing c-out-8q-q1
    bandwidth remaining percent 15
class type queuing c-out-8q-q-default
    bandwidth remaining percent 30

switch(config)# system qos
switch(config-sys-qos)# service-policy type queuing output my8q-out
switch(config-sys-qos)# show policy-map system type queuing

```

```

Service-policy output:  my8q-out
  Service-policy (queuing) output:  my8q-out
  policy statistics status:  disabled (current status: disabled)

  Class-map (queuing):  c-out-8q-q7 (match-any)
    priority level 1

  Class-map (queuing):  c-out-8q-q6 (match-any)
    bandwidth remaining percent 10

  Class-map (queuing):  c-out-8q-q5 (match-any)
    bandwidth remaining percent 10

  Class-map (queuing):  c-out-8q-q4 (match-any)
    bandwidth remaining percent 10

  Class-map (queuing):  c-out-8q-q3 (match-any)
    bandwidth remaining percent 10

  Class-map (queuing):  c-out-8q-q2 (match-any)
    bandwidth remaining percent 15

  Class-map (queuing):  c-out-8q-q1 (match-any)
    bandwidth remaining percent 15

  Class-map (queuing):  c-out-8q-q-default (match-any)
    bandwidth remaining percent 30

```

## Example of set qos-groups

The following is an example to set qos-groups with values 4-7.

```

switch(config)# policy-map p1
switch(config-pmap-qos)# class c1
switch(config-pmap-c-qos)# set qos-group 1
switch(config-pmap-c-qos)# ex
switch(config-pmap-qos)# class c2
switch(config-pmap-c-qos)# set qos-group 4
switch(config-pmap-c-qos)# ex
switch(config-pmap-qos)# class c3
switch(config-pmap-c-qos)# set qos-group 7
switch(config-pmap-c-qos)# ex
switch(config-pmap-qos)# ex
switch(config)# show policy-map p1

```

```

Type qos policy-maps
=====

policy-map type qos p1
  class c1
    set qos-group 1
  class c2
    set qos-group 4
  class c3
    set qos-group 7
switch(config)# conf t
switch(config)# int ethernet 2/1
switch(config-if)# service-policy type qos input p1
switch(config-if)# show policy-map interface ethernet 2/1

Global statistics status :   enabled

Ethernet2/1

Service-policy (qos) input:   p1
SNMP Policy Index: 285226505

Class-map (qos):   c1 (match-all)
Match: dscp 10
set qos-group 1

Class-map (qos):   c2 (match-all)
Match: dscp 20
set qos-group 4

Class-map (qos):   c3 (match-all)
Match: dscp 30
set qos-group 7

```

## Changing from 8q Mode to 4q Mode




---

**Note** Changing from 8q mode to 4q mode is not supported on the Cisco Nexus 9508 switch (NX-OS 7.0(3)F3(3)).

---

Use the following guidelines to change from 8q mode to 4q mode:

- Ensure that none of the active input QoS policies have **set qos-group** action for qos-groups 4-7, so that no traffic flows towards queues 4-7.
- Ensure that all 8q interface policies and 8q system level policies are replaced with corresponding 4q policies.
- Replace the 8q network-qos policy with a corresponding 4q policy.

## Configuring an MQC Object

When you specify an MQC object command, the device creates the object if it does not exist and then enters map mode.

To remove a class-map or policy-map object, use the **no** form of the command that you used to create the object.

## Configuring or Modifying a Class Map

You can create or modify a class map. You can then reference class maps in policy maps.



**Note** You cannot create a queuing class map; you must use one of the system-defined queuing class maps.

### SUMMARY STEPS

1. **configure terminal**
2. **class-map type qos [match-any | match-all] class-name**
3. **exit**
4. **class-map type queuing match-any class-name**
5. **exit**
6. **show class-map [type qos [ class-name]]**
7. **show class-map [type queuing [ class-name]]**
8. **copy running-config startup-config**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>class-map type qos [match-any   match-all] class-name</b> <b>Example:</b> <pre>switch(config)# class-map type qos class1 switch(config-cmap-qos)#</pre>	Creates or accesses the class map of type qos and then enters class-map qos mode. Class-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.
<b>Step 3</b>	<b>exit</b> <b>Example:</b> <pre>switch(config-cmap-qos)# exit switch(config)#</pre>	Exits class-map qos mode and enters global configuration mode.
<b>Step 4</b>	<b>class-map type queuing match-any class-name</b> <b>Example:</b> <pre>switch(config)# class-map type queuing match-any c-out-q2 switch(config-cmap-que)#</pre>	Creates or accesses the class map of type queuing and then enters class-map queuing mode.
<b>Step 5</b>	<b>exit</b> <b>Example:</b> <pre>switch(config-cmap-que)# exit switch(config)#</pre>	Exits class map queuing mode and enters global configuration mode.



	Command or Action	Purpose
<b>Step 6</b>	<b>show class-map</b> [type qos [ <i>class-name</i> ]] <b>Example:</b> switch(config)# show class-map type qos	(Optional) Displays information about all configured class maps, all class maps of type qos, or a selected class map of type qos.
<b>Step 7</b>	<b>show class-map</b> [type queuing [ <i>class-name</i> ]] <b>Example:</b> switch(config)# show class-map type queuing	(Optional) Displays information about all configured class maps, all class maps of type queuing, or a selected class map of type queuing.
<b>Step 8</b>	<b>copy running-config startup-config</b> <b>Example:</b> switch(config)# copy running-config startup-config	(Optional) Saves the running configuration to the startup configuration.

## Configuring or Modifying a Policy Map

You can create or modify a policy map that you can use to define actions to perform on class maps.

### SUMMARY STEPS

1. **configure terminal**
2. **policy-map type qos** { [match-first] *policy-map-name*}
3. **exit**
4. **policy-map type queuing** {[match-first] *policy-map-name*}
5. **exit**
6. **show policy-map** [type qos [ *policy-map-name*]]
7. **show policy-map** [type queuing [ *policy-map-name* | *default-out-policy*]]
8. **copy running-config startup-config**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
<b>Step 2</b>	<b>policy-map type qos</b> { [match-first] <i>policy-map-name</i> } <b>Example:</b> switch(config)# policy-map type qos policy1 switch(config-pmap-qos)#	Creates or accesses the policy map of type qos and then enters policy-map mode. Policy-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.
<b>Step 3</b>	<b>exit</b> <b>Example:</b> switch(config-pmap)# exit switch(config)#	Exits policy-map mode and enters global configuration mode.

	Command or Action	Purpose
<b>Step 4</b>	<b>policy-map type queuing</b> {[ <b>match-first</b> ] <i>policy-map-name</i> } <b>Example:</b> <pre>switch(config)# policy-map type queuing policy_queue1 switch(config-pmap-que)#</pre>	Configures the policy map of type queuing and then enters policy-map mode for the policy-map name you specify. Policy-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.
<b>Step 5</b>	<b>exit</b> <b>Example:</b> <pre>switch(config-pmap)# exit switch(config)#</pre>	Exits policy map mode and enters global configuration mode.
<b>Step 6</b>	<b>show policy-map</b> [ <b>type qos</b> [ <i>policy-map-name</i> ]] <b>Example:</b> <pre>switch(config)# show policy-map type qos</pre>	(Optional) Displays information about all configured policy maps, all policy maps of type qos, or a selected policy map of type qos.
<b>Step 7</b>	<b>show policy-map</b> [ <b>type queuing</b> [ <i>policy-map-name</i>   <i>default-out-policy</i> ]] <b>Example:</b> <pre>switch(config)# show policy-map type queuing</pre>	(Optional) Displays information about all configured policy maps, all policy maps of type queuing, a selected policy map of type queuing or the default output queuing policy.
<b>Step 8</b>	<b>copy running-config startup-config</b> <b>Example:</b> <pre>switch(config)# copy running-config startup-config</pre>	(Optional) Saves the running configuration to the startup configuration.

## Applying Descriptions to MQC Objects

You can use the **description** command to add a description to a MQC object.

### SUMMARY STEPS

- configure terminal**
- Specify the MQC object whose description you want to set:
  - Class-map:

```
class-map [type qos] [match-any | match-all] class-name
```
  - Policy-map:

```
policy-map [type qos] [match-first] policy-map-name
```
- description** *string*
- exit**
- copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	Specify the MQC object whose description you want to set: <ul style="list-style-type: none"> <li>• Class-map: <pre>class-map [type qos] [match-any   match-all] class-name</pre> </li> <li>• Policy-map: <pre>policy-map [type qos] [match-first] policy-map-name</pre> </li> </ul> <b>Example:</b> <ul style="list-style-type: none"> <li>• Class-map: <pre>switch(config-cmap)# class-map class1 switch(config-cmap)#</pre> </li> <li>• Policy-map: <pre>switch(config)# policy-map policy1 switch(config-pmap)#</pre> </li> </ul>	<ul style="list-style-type: none"> <li>• Class-map: <p>Creates or accesses the class map and then enters class-map mode. The class-map name can contain alphabetic, hyphen, or underscore characters, is case sensitive, and can be up to 40 alphanumeric characters.</p> </li> <li>• Policy-map: <p>Creates or accesses the policy map and then enters policy-map mode. The policy-map name can contain alphabetic, hyphen, or underscore characters, is case sensitive, and can be up to 40 characters.</p> </li> </ul>
<b>Step 3</b>	<b>description string</b> <b>Example:</b> <pre>switch(config-cmap)# description my traffic class switch(config-cmap)#</pre>	Adds a description string to the MQC object. The description can be up to 200 alphanumeric characters. <b>Note</b> You cannot modify the description of system-defined queuing class maps.
<b>Step 4</b>	<b>exit</b> <b>Example:</b> <pre>switch(config-cmap)# exit switch(config)#</pre>	Exits class-map mode and enters global configuration mode.
<b>Step 5</b>	<b>copy running-config startup-config</b> <b>Example:</b> <pre>switch(config)# copy running-config startup-config</pre>	(Optional) Saves the running configuration to the startup configuration.

## Verifying an MQC Object

To display MQC object configuration information, perform one of the following tasks:

Command	Purpose
<b>show class-map [type qos [class-name]]</b>	Displays information about all configured class maps, all class maps of type qos, or a selected class map of type qos.

Command	Purpose
<b>show class-map</b> [ <b>type queuing</b> ] [ <i>class-name</i> ]	Displays information about all configured class maps, all class maps of type queuing, or a selected class map of type queuing.
<b>show policy-map</b> [ <b>type qos</b> ] [ <i>policy-map-name</i> ]	Displays information about all configured policy maps, all policy maps of type qos, or a selected policy map of type qos.
<b>show policy-map</b> [ <b>type queuing</b> ] [ <i>policy-map-name</i>   <b>default-out-policy</b> ]	Displays information about all configured policy maps, all policy maps of type queuing, a selected policy map of type queuing, or the default output queuing policy.

## Attaching and Detaching a QoS Policy Action

The software does not allow you to enable or disable QoS features with a configuration command. To enable or disable QoS features, you must attach or detach QoS policies to or from interfaces or VLANs as described in this section.

The system-defined type queuing policy maps are attached to each interface unless you specifically attach a different policy map.




---

**Note** The device allows only one queuing policy per interface.

---

Policies that are defined at multiple interfaces have the following restrictions:

- A QoS policy attached to the physical port takes effect when the port is not a member of a port channel.
- A QoS policy attached to a port channel takes effect even when policies are attached to member ports.
- A QoS policy attached to a VLAN is applied to all ports in that VLAN that do not have other policies specifically applied.
- One ingress QoS policy is supported for each Layer 3 port and Layer 3 port-channel interface.
- One ingress QoS policy is supported for each VLAN.
- When a VLAN or port channel, or both, touches multiple forwarding engines, all policies that enforce a rate are enforced per forwarding engine.

For example, if you configure a policer on a specific VLAN that limits the rate for the VLAN to 100 Mbps and if you configure one switch port in the VLAN on one module and another switch port in the VLAN on another module, each forwarding engine can enforce the 100-Mbps rate. In this case, you could actually have up to 200 Mbps in the VLAN that you configured to limit the rate to 100 Mbps.




---

**Note** Default queuing policies are active, unless you configure and apply another policy.

---

The interface where a QoS policy is applied is summarized in the following table. Each row represents the interface levels. The entry descriptions are as follows:

- Applied—Interface where an attached policy is applied.
- Present—Interface where a policy is attached but not applied.
- Not present—Interface where no policy is attached.
- Present or not—Interface where a policy is either attached or not, but not applied.

Table 13: QoS Policy Interfaces

Port Policy	Port-Channel Policy	VLAN Policy
Applied	Not present	Present or not
Present or not	Applied	Present or not
Not present	Not present	Applied

To attach a policy map to an interface or VLAN, use the **service-policy** command. The policies defined in the policy map are applied to the input stream of packets on the interface.

To detach a policy map from an interface, use the **no** form of the **service-policy** command.

## Configuring a Service Policy for a Layer 2 Interface

### Before you begin

Ensure that the ternary content addressable memory (TCAM) is carved for port QoS.

For more details, see the Configuring QoS TCAM Carving section.

### SUMMARY STEPS

1. **configure terminal**
2. **interface interface slot/port**
3. **switchport**
4. **service-policy type {qos input | queuing output} | {qos output | queuing output} policy-map-name [no-stats]**
5. **show policy-map interface interface slot/port type {qos | queuing}**
6. **copy running-config startup-config**

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.

	Command or Action	Purpose
<b>Step 2</b>	<b>interface interface slot/port</b>  <b>Example:</b> switch(config)# interface ethernet 1/1 switch(config-if)#	Enters configuration interface mode.
<b>Step 3</b>	<b>switchport</b>  <b>Example:</b> switch(config-if)# switchport	Selects the Layer 2 interface.
<b>Step 4</b>	<b>service-policy type {qos input   queuing output}   {qos output   queuing output} policy-map-name [no-stats]</b>  <b>Example:</b> switch(config-if)# service-policy input policy1 switch(config-if)#  <b>Example:</b> switch(config-if)# interface intfl switch(config-if)# service-policy type qos output egressqos switch(config-if)# exit switch(config)#	Specifies the policy map to use as the service policy for the Layer 2 interface. There are two policy-map configuration modes: <ul style="list-style-type: none"> <li>• qos input or qos output — qos input is the default classification mode. To set the classification mode to egress, use qos output.</li> <li>• queuing output —Queuing mode.</li> </ul> <p><b>Note</b> The <b>output</b> keyword specifies that this policy map should be applied to traffic transmitted from an interface. You can only apply <b>output</b> to a queuing policy.</p>
<b>Step 5</b>	<b>show policy-map interface interface slot/port type {qos   queuing}</b>  <b>Example:</b> switch(config)# show policy-map interface ethernet 1/1 type qos	(Optional) Displays information about policy maps that are applied to the specified interface. You can limit what the device displays to qos or queuing policies.
<b>Step 6</b>	<b>copy running-config startup-config</b>  <b>Example:</b> switch(config)# copy running-config startup-config	(Optional) Saves the running configuration to the startup configuration.

## Configuring a Service Policy for a Layer 3 Interface

### Before you begin

Ensure that the ternary content addressable memory (TCAM) is carved for Layer 3 QoS.

For more details, see the Configuring QoS TCAM Carving section.

### SUMMARY STEPS

1. **configure terminal**
2. **interface interface slot/port**
3. **no switchport**

4. **service-policy type** {qos input | queuing output} | {qos output | queuing output} *policy-map-name* [no-stats]
5. **show policy-map interface** *interface slot/port* **type** {qos | queuing}
6. **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
Step 2	<b>interface interface slot/port</b> <b>Example:</b> <pre>switch(config)# interface ethernet 1/1 switch(config-if)#</pre>	Enters configuration interface mode.
Step 3	<b>no switchport</b> <b>Example:</b> <pre>switch(config-if)# no switchport</pre>	Selects the Layer 3 interface.
Step 4	<b>service-policy type</b> {qos input   queuing output}   {qos output   queuing output} <i>policy-map-name</i> [no-stats] <b>Example:</b> <pre>switch(config-if)# service-policy input policy1 switch(config-if)#</pre> <b>Example:</b> <pre>switch(config-if)# service-policy output policy1 switch(config-if)#</pre>	<p>Specifies the policy map to use as the service policy for the Layer 3 interface. There are two policy-map configuration modes:</p> <ul style="list-style-type: none"> <li>• qos input or qos output — qos input is the default classification mode. To set the classification mode to egress, use qos output.</li> <li>• queuing output — Queuing mode.</li> </ul> <p><b>Note</b> The <b>output</b> keyword specifies that this policy map should be applied to traffic transmitted from an interface. You can only apply <b>output</b> to a queuing policy.</p>
Step 5	<b>show policy-map interface interface slot/port type</b> {qos   queuing} <b>Example:</b> <pre>switch(config)# show policy-map interface ethernet 1/1 type qos</pre>	(Optional) Displays information about policy maps that are applied to the specified interface. You can limit what the device displays to qos or queuing policies.
Step 6	<b>copy running-config startup-config</b> <b>Example:</b> <pre>switch(config)# copy running-config startup-config</pre>	(Optional) Saves the running configuration to the startup configuration.

## Attaching the System Service Policy

The `service-policy` command specifies the system class policy map as the service policy for the system.

### SUMMARY STEPS

1. `configure terminal`
2. `system qos`
3. `service-policy type {network-qos | queuing output} policy-map-name`

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>system qos</b> <b>Example:</b> <pre>switch(config)# system qos switch(config-sys-qos)#</pre>	Enters system class configuration mode.
<b>Step 3</b>	<b>service-policy type {network-qos   queuing output} policy-map-name</b> <b>Example:</b> <pre>switch(config-sys-qos)# service-policy input default-nq-policy</pre>	<p>Specifies the policy map to use as the service policy (default-nq-policy) for the system. There are two policy-map configuration modes:</p> <ul style="list-style-type: none"> <li>• network-qos—Network-wide (system qos) mode.</li> </ul> <p><b>Note</b> To restore the system to the default service policies, use the <b>no</b> form of the command.</p> <ul style="list-style-type: none"> <li>• queuing—Queuing mode (output at system qos and interface).</li> </ul> <p><b>Note</b> There is no default policy-map configuration mode. You must specify the type. The <b>output</b> keyword specifies that this policy map should be applied to traffic transmitted from an interface. You can only apply <b>output</b> to a queuing policy.</p>

## Attaching a QoS Policy Action to a VLAN

### Before you begin

Ensure that the ternary content-addressable memory (TCAM) is carved for VLAN QoS.



For more details, see the QoS TCAM carving chapter.

## SUMMARY STEPS

1. **configure terminal**
2. **vlan configuration** *vlan-id-list*
3. **service-policy** [**type qos**] **{input}** | **{qos output}** **{policy-map-name}** [**no-stats**]
4. **show policy-map** [**interface interface** | **vlan vlan-id**] [**input**] [**type qos** | **queuing**] [**class** [**type qos** | **queuing**] **class-map-name**]
5. **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
Step 2	<b>vlan configuration</b> <i>vlan-id-list</i> <b>Example:</b> <pre>switch(config)# vlan configuration 2 switch(config-vlan-config)#</pre>	Enters VLAN configuration mode. <b>Note</b> <i>vlan-id-list</i> is a space-separated list of VLANs.
Step 3	<b>service-policy</b> [ <b>type qos</b> ] <b>{input}</b>   <b>{qos output}</b> <b>{policy-map-name}</b> [ <b>no-stats</b> ] <b>Example:</b> <pre>switch(config-vlan-config)# service-policy type qos input policy1</pre> <b>Example:</b> <pre>switch(config-if)# service-policy type qos output egressqos switch(config-if)# exit switch(config)#</pre>	Adds the policy map to the input packets of a VLAN. Only one input policy can be attached to a VLAN. The example adds policy1 to the VLAN. Label sharing only occurs when QoS policies under VLANs are configured with the <b>no-stats</b> option. With the <b>no-stats</b> option, the QoS label gets shared when the same QoS policy is applied on multiple VLANs. <b>Note</b> When the <b>no-stats</b> option is configured, the ingress QoS policy-map statistics on a VLAN basis are not available because the label is shared.
Step 4	<b>show policy-map</b> [ <b>interface interface</b>   <b>vlan vlan-id</b> ] [ <b>input</b> ] [ <b>type qos</b>   <b>queuing</b> ] [ <b>class</b> [ <b>type qos</b>   <b>queuing</b> ] <b>class-map-name</b> ] <b>Example:</b> <pre>switch(config)# show policy-map vlan 2</pre>	(Optional) Displays information about policy maps that are applied to all interfaces or the specified interface. You can limit what the device displays to input policies, qos or queuing polices, and to a specific class.
Step 5	<b>copy running-config startup-config</b> <b>Example:</b> <pre>switch(config)# copy running-config startup-config</pre>	(Optional) Saves the running configuration to the startup configuration.

## Session Manager Support for QoS

Session Manager supports the configuration of QoS. This feature allows you to verify the QoS configuration and confirm that the resources required by the configuration are available prior to committing them to the running configuration. For information about Session Manager, see the *Cisco Nexus 9000 Series NX-OS System Management Configuration Guide*.

After you start the configuration session, do not enter any configuration commands using the configure terminal configuration mode until the configuration session is aborted or committed. Entering parallel configurations (one configuration that uses the configuration session and another using the configuration terminal configuration mode) might cause verification failures in the configuration session mode.



## CHAPTER 4

# Configuring QoS TCAM Carving

- [About QoS TCAM Carving, on page 37](#)
- [Guidelines and Limitations for QoS TCAM Carving, on page 41](#)
- [Configuring QoS TCAM Carving, on page 44](#)

## About QoS TCAM Carving

You can change the size of the access control list (ACL) ternary content addressable memory (TCAM) regions in the hardware.

On Cisco Nexus 9300 and 9500 platform switches and Cisco Nexus 3164Q, 31128PQ, 3232C, and 3264Q switches, the egress TCAM size is 1K, divided into four 256 entries. On Cisco Nexus NFE2-enabled devices (such as the Cisco Nexus 3232C and 3264Q switches), the ingress TCAM size is 6K, divided into twelve 512 slices. Three slices are in one group. On other Cisco Nexus 9300 and 9500 platform switches and Cisco Nexus 3164Q and 31128PQ switches, the ingress TCAM size is 4K, divided into eight 256 slices and four 512 slices. A slice is the unit of allocation. A slice can be allocated to one region only. For example, a 512-size slice cannot be used to configure two features of size 256 each. Similarly, a 256-size slice cannot be used to configure two features of size 128 each. The IPv4 TCAM regions are single wide. The IPv6, QoS, MAC, CoPP, and system TCAM regions are double wide and consume double the physical TCAM entries. For example, a logical region size of 256 entries actually consumes 512 physical TCAM entries.

On Cisco Nexus 9200 Series switches, the egress TCAM size is 2K, and the ingress TCAM size is 4K. The concepts of TCAM slices and single- and double-wide regions do not apply to these switches. For example, the ing-ifacl region can host IPv4, IPv6, or MAC type entries. IPv4 and MAC types occupy one TCAM entry whereas IPv6 types occupy two TCAM entries.

The number of default entries for QoS TCAM carving are:

- The default QoS TCAM carving for the Cisco Nexus 9504, Cisco Nexus 9508, and Cisco Nexus 9516 is for Layer 3 QoS (IPV4) with 256 entries. For these switches, all of the QoS TCAM entries are double wide.
- The default QoS TCAM carving for ALE (Application Leaf Engine) enabled devices is for Layer 2 port QoS (IPV4) with 256 entries. For these switches, all of the QoS TCAM entries are double wide.



**Note** In addition to the above TCAM, for ALE enabled devices, a separate TCAM in the Cisco Nexus C9396PX (uplink ports) and Cisco Nexus C93128TX (uplink ports) ASIC is used for the QoS classification policies applied on 40G uplink ports. By default, this separate TCAM is carved for Layer 3 QoS (IPV4), Layer 2 Port QoS (IPV4), and VLAN QoS (IPV4) with 256 entries each.

**Table 14: QoS TCAM Regions (Cisco NX-OS Release 7.1(3)/6(1))**

Feature	Purpose	Region Name
Egress QoS	QoS policy applied on interfaces in output direction.	IPV4: e-qos Cisco Nexus 922 series switch: egr-l2-qos, egr-l3-vlan-qos IPV6: e-ipv6-qos MAC: e-mac-qos See notes following table.

**Table 15: QoS TCAM Regions (Cisco NX-OS Release 6.1(2)/3(4) and earlier)**

Feature	Purpose	Region Name
Layer 3 QoS	QoS policy applied on Layer 3 interfaces.	IPV4: l3qos*, ns-l3qos* IPV6: ipv6-l3qos*, ns-ipv6-l3qos* See notes following table.
Port QoS	QoS policy applied on Layer 2 interfaces.	IPV4: qos*, ns-qos* IPV6: ipv6-qos*, ns-ipv6-qos* MAC: mac-qos*, ns-mac-qos* See notes following table.
VLAN QoS	QoS policy applied on VLAN.	IPV4: vqos, ns-vqos IPV6: ipv6-vqos*, ns-ipv6-vqos* MAC: mac-vqos*, ns-mac-vqos* See notes following table.
FEX QoS	QoS policy applied on FEX interfaces.	IPV4: fex-qos* IPV6: fex-ipv6-qos* MAC: fex-mac-qos* See notes following table.

Table 16: QoS TCAM Regions (Cisco NX-OS Release 7.0(3)1(1))

Feature	Purpose	Region Name
Layer 3 QoS	QoS policy applied on Layer 3 interfaces.	IPV4: l3qos*, ns-l3qos* IPV6: ipv6-l3qos*, ns-ipv6-l3qos* See notes following table.
Port QoS	QoS policy applied on Layer 2 interfaces.	IPV4: qos*, ns-qos* IPV6: ipv6-qos*, ns-ipv6-qos* MAC: mac-qos*, ns-mac-qos* See notes following table.
VLAN QoS	QoS policy applied on VLAN.	IPV4: vqos, ns-vqos IPV6: ipv6-vqos*, ns-ipv6-vqos* MAC: mac-vqos*, ns-mac-vqos* See notes following table.
FEX QoS	QoS policy applied on FEX interfaces.	IPV4: fex-qos* IPV6: fex-ipv6-qos* MAC: fex-mac-qos* See notes following table.

Table 17: QoS TCAM Regions (Cisco NX-OS Release 7.0(3)1(2) and later)

Feature	Purpose	Region Name
Layer 3 QoS	QoS policy applied on Layer 3 interfaces.	IPV4: l3qos*, ns-l3qos*, rp-qos** Cisco Nexus 9200 Series switch: ing-l3-vlan-qos IPV6: ipv6-l3qos*, ns-ipv6-l3qos*, rp-ipv6-qos** See notes following table.
Port QoS	QoS policy applied on Layer 2 interfaces.	IPV4: qos*, ns-qos*, rp-qos** Cisco Nexus 9200 Series switch: ing-l2-qos IPV6: ipv6-qos*, ns-ipv6-qos*, rp-ipv6-qos** MAC: mac-qos*, ns-mac-qos*, rp-mac-qos** See notes following table.

Feature	Purpose	Region Name
VLAN QoS	QoS policy applied on VLAN.	IPV4: vqos, ns-vqos, rp-qos** Cisco Nexus 9200 Series switch: ing-l3-vlan-qos IPV6: ipv6-vqos*, ns-ipv6-vqos*, rp-ipv6-qos** MAC: mac-vqos*, ns-mac-vqos*, rp-mac-qos** See notes following table.
FEX QoS	QoS policy applied on FEX interfaces.	IPV4: fex-qos* IPv6: fex-ipv6-qos* MAC: fex-mac-qos* See notes following table.



**Note** \* The region is applicable only for ALE enabled devices and are required for classification policies applied on 40G uplink ports.



**Note** \*\* The region is applicable only for 100G enabled devices (such as the Cisco Nexus 9300 platform switch with the N9K-M4PC-CFP2 GEM or the Cisco Nexus 9500 platform switch with the Cisco Nexus 9408PC-CFP2 line card) and are required for classification policies and QoS scheduling applied on 100G uplink ports.

You need to save the configuration and reload the system for the region configuration to become effective.

## About QoS TCAM Lite Regions

IPV4 requires QoS TCAM regions to be double wide TCAMs to support conform/violate policer statistics. If conform/violate statistics are not required, the size of the QoS TCAM entries can be reduced to single wide TCAMs by using QoS TCAM lite regions. Policing is supported by these regions, however only violate packets/bytes statistics are supported.

**Table 18: QoS TCAM Regions (Release 7.1(3)I6(1))**

Feature	Purpose	Region Name
Egress QoS	QoS policy applied on interfaces in output direction.	IPV4: e-qos-lite See notes following table.

Table 19: QoS TCAM Lite Regions

Feature	Purpose	Region Name
Layer 3 QoS	QoS policy applied on Layer 3 interfaces.	IPV4: l3qos-lite
Port QoS	QoS policy applied on Layer 2 interfaces.	IPV4: qos-lite
VLAN QoS	QoS policy applied on VLAN.	IPV4: vqos-lite
FEX QoS	QoS policy applied on FEX interfaces.	IPV4: fex-qos-lite



**Note** Cisco Nexus 9200 Series switches do not support QoS TCAM lite regions.



**Note** The region is applicable only for ALE enabled devices and are required for classification policies applied on 40G uplink ports.

You need to save the configuration and reload the system for the region configuration to become effective.



**Note** Either the regular version or the lite version of the QoS TCAM can be enabled. Both cannot be enabled at the same time. For example, either the IPv4 Port QoS or the IPv4 Port QoS lite version can be enabled at any one time.

## Guidelines and Limitations for QoS TCAM Carving

TCAM region sizes have the following configuration guidelines and limitations:

- Configure egress QoS TCAM before upgrading from Release 7.0(3)I7(5) to Release 9.3(x) or Release 10.1(x) if a service-policy is attached. For more information on enabling egress QoS, see the [Enabling Egress QoS \(IPv4\), on page 49](#) section.
- **hardware access-list tcam label ing-qos optimize** is used to give separate label space for **ing-ifacl** ACLs and **ing-qos** service policies. Three labels are available for QoS policies. Some features, like VxLAN, add a QoS policy to an NVE interface by default and this reduces the available labels. **ing-ifacl-ipv4/ipv6-lite** commands move IPv4/IPv6 ACEs respectively to PT TCAM and are supported only on the following switches:
  - Cisco Nexus 9336C-FX2
  - Cisco Nexus 93240YC-FX2
  - Cisco Nexus 93240YC-FX2Z

- TCAM must be carved for the vQoS region if the QoS policy is configured within a VLAN. This will avoid traffic failure as shown in the syslog message in this example:

```
switch(config-vlan-config)# vlan configuration 3
switch(config-vlan-config)# service-policy type qos input INPUT_PREC
switch(config-vlan-config)# 2019 Jan 2 17:56:49 switch %$ VDC-1 %$
%ACLQOS-SLOT2-2-ACLQOS_FAILED: ACLQOS failure: VLAN QoS policy not
supported without TCAM carving for vQoS, traffic will fail please carve
TCAM for vQoS and IPV6-vQoS reload the module configure vlan qos policy
after module is up
```

- **show** commands with the **internal** keyword are not supported.
- After TCAM carving, you must save the configuration and reload the switch.
- Cisco Nexus 9200 platform switches and Cisco Nexus 9300-EX platform switches are of the same type and therefore, they have the same TCAM regions.
- By default, all IPv6 TCAMs are disabled (the TCAM size is set to 0).
- Use the **show hardware access-list tcam region** command to view the configured TCAM region size.
- The global CLI **hardware qos classify ns-only** command is introduced to enable configuration of the QoS policy on the NS ports without carving the T2 QoS region, for example, qos and l3-qos regions. This command removes the TCAM restrictions that are associated with the QoS classifications on the Application Leaf Engine (ALE) ports and it is only supported on Cisco Nexus 9000 series switches with ALE.

For example, for Layer 2 ALE port with IPv4 traffic, qos, and ns-qos TCAM carving is required for the QoS classification to work. With the **hardware qos classify ns-only** CLI command, ns-QoS TCAM alone is sufficient.

See the following example for applying the CLI **hardware qos classify ns-only** command:

```
switch(config)# hardware qos classify ns-only
Warning: This knob removes the restriction of carving qos as well as ns-qos TCAM region
for NS port QoS classification policies.
Warning: Only NS TCAM will be used, as a result policy-map statistics, marking and
policing is not supported on NS ports
```

See the following example for removing the CLI **hardware qos classify ns-only** command:

```
switch(config)# no hardware qos classify ns-only
Warning: Special knob removed. Please remove and apply QoS policies on NS ports to get
default behavior
```




---

**Note** Policing, policy-map statistics, and marking are not supported on the NS ports if the **hardware qos classify ns-only** CLI command is used. The **show policy-map interface ethernet x/y** does not return QoS statistics. The NS TCAM does not have some of the Network Forwarding Engine (NFE) TCAM resources, for example, range and so on. Therefore, the policies may need more TCAM entries.

---

- By default, the TCAM region for CoPP is 95% utilized on the Nexus 9300/Nexus 9500 platform switch. If you modify the CoPP policy, it is likely that you will need to modify other TCAM region sizes to allow for more space to be applied to the CoPP TCAM region.
- When any of the following classification criteria are used for IPv4 and IPv6, you must carve the IPv4 based QoS TCAM region. It is not necessary to carve an IPv6 based QoS TCAM region.



- Differentiated Services Code Point (DSCP) based classification
  - Class of service (CoS) based classification
  - IP precedence-based classification
- When a QoS policy is applied on multiple interfaces or multiple VLANs, the label is not shared since the statistics option is enabled.

To share the label for the same QoS policy that is applied on multiple interfaces or multiple VLANs, you must configure the QoS policy with no-stats option using the **service-policy type qos input my-policy no-stats** command.

- On Cisco Nexus 9300 platform switches, the Cisco Nexus 9536PQ, 9564PX, and 9564TX line cards are used to enforce the QoS classification policies that are applied on 40G ports. It has 768 TCAM entries available for carving in 256-entry granularity. These region names are prefixed with "ns-".
- For the Cisco Nexus 9536PQ, 9564PX, and 9564TX line cards, only the IPv6 TCAM regions consume double-wide entries. The rest of the TCAM regions consume single-wide entries.
- When a VACL region is configured, it is configured with the same size in both the ingress and egress directions. If the region size cannot fit in either direction, the configuration is rejected.
- On Cisco Nexus 9200 platform switches, the ing-sup region occupies a minimum size of 512 entries, and the egr-sup region occupies a minimum size of 256 entries. These regions cannot be configured to lesser values. Any region size can be carved with a value only in multiples of 256 entries (except for the span region, which can be carved only in multiples of 512 entries).
- VLAN QoS is only supported on the Cisco Nexus 9508 switch with the -R series line card.
- QoS has default TCAM sizes and these TCAM sizes must be nonzero on specific line cards to avoid failure of the line card during a reload.

Cisco Nexus 9504 and Cisco Nexus 9508 switches with the following line cards are affected:

- Cisco Nexus 96136YC-R
  - Cisco Nexus 9636C-RX
  - Cisco Nexus 9636Q-R
  - Cisco Nexus 9636C-R
- Beginning with Cisco NX-OS Release 9.3(9), applying of 64 unique egress QoS policies to all Layer 2 interfaces is supported on Cisco Nexus 9300-FX platform switches.
  - From Cisco NX-OS Release 10.4(1)F, QoS TCAM is supported on Cisco Nexus C9348GCFX3 and C9348GC-FX3PH switches.
  - From Cisco NX-OS Release 10.4(2)F, QoS TCAM is supported on Cisco Nexus C93108TC-FX3 switch.
  - The following limitations are applicable for Cisco C9348GC-FX3PH switch for QoS support:
    - TCAM for ingress classification is limited to 256 entries
    - QoS features and QoS classification features are not supported for ports 41-48 on the switch.

# Configuring QoS TCAM Carving

You can change the default QoS TCAM carving to accommodate your network requirements. The following sections contain examples of how to change the default QoS TCAM carving.



**Note** You can use this procedure for all Cisco Nexus 9200, 9300, and 9500 Series switches and the Cisco Nexus 9500 Series switches. The examples do not apply to NFE2-enabled devices (such as the X9432C-S 100G line card and the C9508-FM-S fabric module), which must use TCAM templates to configure TCAM region sizes. For more information on using TCAM templates, see "Using Templates to Configure TCAM Region Sizes." Once you apply a TCAM template, the **hardware access-list tcam region** command will not work. You must uncommit the template to use the command.

## Enabling Layer 3 QoS (IPv6)

The default TCAM region configuration does not accommodate Layer 3 QoS (IPv6). To enable Layer 3 QoS (IPv6), you must decrease the TCAM size of another region and then increase the TCAM size to enable the new Layer 3 QoS (IPv6) region.

*Table 20: Default TCAM Region Configuration (Ingress) for the Cisco Nexus 9504, Cisco Nexus 9508, and Cisco Nexus 9516 devices*

Region Name	Size	Width	Total Size
IPV4 RACL	1536	1	1536
L3 QoS(IPV4)	256	2	512
COPP	256	2	512
System	256	2	512
Redirect	256	1	256
SPAN	256	1	256
VPC Convergence	512	1	512
			4K

*Table 21: Default TCAM Region Configuration (Ingress) - For Layer 2-to-Layer 3 Configurations on Cisco Nexus 9200 Series Switches*

Region Name	Size	Width	Total Size
Ingress NAT	0	1	0
Ingress port ACL	256	1	256
Ingress VACL	256	1	256
Ingress RACL	1536	1	1536

Region Name	Size	Width	Total Size
Ingress Layer 2 QoS	256	1	256
Ingress Layer 3 VLAN QoS	256	1	256
Ingress supervisor	512	1	512
Ingress Layer 2 ACL SPAN	256	1	256
Ingress Layer 3 ACL SPAN	256	1	256
Port-based SPAN	512	1	512
			4096

**Table 22: Default TCAM Region Configuration (Ingress) - For Layer 3 Configurations on Cisco Nexus 9200 Series Switches**

Region Name	Size	Width	Total Size
Ingress NAT	0	1	0
Ingress port ACL	0	1	0
Ingress VACL	0	1	0
Ingress RACL	1792	1	1792
Ingress Layer 2 QoS	256	1	256
Ingress Layer 3 VLAN QoS	512	1	512
Ingress supervisor	512	1	512
Ingress Layer 2 ACL SPAN	256	1	256
Ingress Layer 3 ACL SPAN	256	1	256
Port-based SPAN	512	1	512
			4096

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>hardware access-list tcam region</b> <i>region tcam-size</i>	To enable carving your Layer 3 QoS (IPv6) TCAM region, specify another region to free up resources. Also specify the reduced TCAM size for the region.  <b>Note</b> Repeat this step for as many regions as necessary to free up sufficient resources to carve the new Layer 3 QoS (IPv6) TCAM region.

	Command or Action	Purpose
Step 2	<code>hardware access-list tcam region region tcam-size</code>	Carve the new Layer 3 QoS (IPv6) TCAM region including the TCAM size (number of double wide entries).

### Example

This example sets the ingress Layer 3 QoS (IPv6) TCAM region size to 256. A Layer 3 QoS (IPv6) of size 256 takes 512 entries because IPv6 is double wide.

- Reduce the span and redirect regions to 0. This creates 512 entry spaces that are used to carve Layer 3 QoS (IPV6) with 256 entries (double wide).

```
switch(config)# hardware access-list tcam region redirect 0
Warning: Please reload the linecard for the configuration to take effect
Warning: BFD, DHCPv4 and DHCPv6 features will NOT be supported after this configuration
change.
switch(config)# hardware access-list tcam region span 0
Warning: Please reload the linecard for the configuration to take effect
switch(config)# hardware access-list tcam region ipv6-l3qos 256
Warning: Please reload the linecard for the configuration to take effect
```

**Table 23: Updated TCAM Region Configuration After Reducing the IPv4 RACL (Ingress)**

Region Name	Size	Width	Total Size
IPv4 RACL	1536	1	1536
Layer 3 QoS (IPv6)	256	2	512
Layer 3 QoS (IPv4)	256	2	512
CoPP	256	2	512
System	256	2	512
Redirect	0	1	0
SPAN	0	1	0
VPC Convergence	512	1	512
			4K

## Enabling VLAN QoS (IPv4)

To enable VLAN QoS (IPv4), you must decrease the TCAM size of another region and then increase the TCAM size to enable the new VLAN QoS (IPv4) region.

The following table list the default sizes for the ingress TCAM regions for ALE enabled devices.

Table 24: Default TCAM Region Configuration (Ingress)

Region Name	Size	Width	Total Size
PACL (IPv4)	512	1	512
Port QoS (IPv4)	256	2	512
VACL (IPv4)	512	1	512
RACL(IPV4)	512	1	512
System	256	2	512
COPP	256	2	512
Redirect	512	1	512
SPAN	256	1	256
VPC Converg	256	1	256
			4K

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<code>hardware access-list tcam region region tcam-size</code>	To enable carving for your VLAN QoS (IPv4) TCAM region, specify another region to free up resources. Also specify the reduced TCAM size for the region.  <b>Note</b> Repeat this step for as many regions as necessary to free up sufficient resources to carve the new VLAN QoS (IPv4) TCAM region.
<b>Step 2</b>	<code>hardware access-list tcam region region tcam-size</code>	Carve the new VLAN QoS (IPv4) TCAM region including the TCAM size (number of double wide entries).

### Example

This example sets the VLAN QoS (IPv4) TCAM size to 256. A VLAN QoS (IPv4) of size 256 takes 512 entries because QoS TCAM is double wide.

- Reduce the ingress Port QoS (IPv4) by 256 bytes (QoS features are double wide,  $2 \times 256 = 512$ ) and add an ingress VLAN QoS (IPv4) with 256 ( $2 \times 256$ ).

```
switch(config)# hardware access-list tcam region qos 0
Warning: Please reload the linecard for the configuration to take effect
switch(config)# hardware access-list tcam region vqos 256
Warning: Please reload the linecard for the configuration to take effect
```

Table 25: Updated TCAM Region Configuration After Reducing the IPv4 Port QoS Ingress

Region Name	Size	Width	Total Size
PACL (IPv4)	512	1	512
Port QoS (IPv4)	0	2	0
VLAN QoS(IPV4)	256	2	512
VACL (IPv4)	512	1	512
RACL(IPV4)	512	1	512
System	256	2	512
COPP	256	2	512
Redirect	512	1	512
SPAN	256	1	256
VPC Converg	256	1	256
			4K

## Notes for Enabling VLAN QoS

The VLAN QoS feature enables Layer 2 bridged database lookup for QoS with VLAN as the key instead of the port.

To enable VLAN QoS, you must decrease the TCAM size of another region and increase the TCAM size for the VLAN QoS region.

To configure the size of the VLAN QoS TCAM region:

- Configure the IPv4 vqos to 640 entries.
- Configure the IPv6 ipv6-vqos to 256 entries.
- Decrease the IPv4 qos to 0 entries.
- Decrease the IPv6 ipv6-qos to 0 entries.

```
switch(config)# hardware access-list tcam region vqos 640
switch(config)# hardware access-list tcam region ipv6-vqos 256
switch(config)# hardware access-list tcam region qos 0
switch(config)# hardware access-list tcam region ipv6-qos 0
```




---

**Note** After configuring the TCAM size for VLAN QoS, it is necessary to reload the line card.

---

## Enabling FEX QoS (IPv4)



**Note** The FEX QoS feature is not supported on the Cisco Nexus 9508 switch (NX-OS 7.0(3)F3(3)).

To enable FEX QoS (IPv4), you must decrease the TCAM size of another region and then increase the TCAM size to enable the new FEX QoS (IPv4) region.

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<code>hardware access-list tcam region region tcam-size</code>	To enable carving your FEX QoS (IPv4) TCAM region, specify another region to free up resources. Also specify the reduced TCAM size for the region.  <b>Note</b> Repeat this step for as many regions as necessary to free up sufficient resources to carve the new FEX QoS (IPv4) TCAM region.
<b>Step 2</b>	<code>hardware access-list tcam region region tcam-size</code>	Carve the new FEX QoS (IPv4) TCAM region including the TCAM size (number of double wide entries).

### Example

This example sets the FEX QoS (IPv4) TCAM size to 256. A FEX QoS (IPv4) of size 256 takes 512 entries because QoS TCAM is double wide.

- Reduce the IPv4 FEX IFACL region by 512 entries and add a FEX QoS (IPv4) region with 512 entries.

```
switch(config)# hardware access-list tcam region fex-ifacl 0
Warning: Please reload the linecard for the configuration to take effect
switch(config)# hardware access-list tcam region fex-qos 256
Warning: Please reload the linecard for the configuration to take effect
```

## Enabling Egress QoS (IPv4)

To enable QoS (IPv4) TCAM, you must decrease the TCAM size of another region and then increase the TCAM size to enable the new QoS (IPv4) TCAM region.



**Note** The egress QoS feature is not supported on the Cisco Nexus 9508 switch (Cisco NX-OS 7.0(3)F3(3)).



**Note** Egress marking and policing is supported on all Network Forwarding Engine (NFE) platforms. Egress classification for egress packet scheduling is supported only on 100G platforms.

Beginning with Cisco NX-OS Release 7.0(3)I6(1), the Cisco Nexus 93108TC-EX, 93180LC-EX, and 93180YC-EX switches, and 97160YC-EX, 9732C-EX, 9736C-EX line cards support the Layer 2 and Layer 3 egress policer.

Beginning with Cisco NX-OS Release 7.0(3)I1(2), to enable egress QoS (IPv4), you must decrease the TCAM size of the **e-racl** region and then increase the TCAM size for the egress QoS (IPv4) region.

The following are considerations for egress QoS (IPv4) and TCAM regions:

- Egress QoS TCAM is based on packet type, such as **e-qos**. TCAM carving is needed to match IPv4 packets on VLAN, layer 2, and layer 3 port types.
- All egress QoS (IPv4, IPv6, and MAC) TCAM regions are double-wide, except for the **e-qos-lite** region which is single-wide.
- Violated and non-violated statistics are supported for policing action when a double-wide TCAM is configured.
- When a single-wide TCAM (**e-qos-lite**) is configured, only non-violated statistics are reported in the presence of a policing action. The violated statistics are always reported as zero instead of NA for the **qos-lite** region. The policing action (1R2C or 2R3C) is still properly enforced. Only statistics reporting is limited to non-violated statistics. If you want to view violated statistics, regular QoS TCAM should be used instead.
- Statistics are disabled when the optional **no-stats** keyword is used and policies are shared (where applicable).
- Egress QoS policies on ALE uplink ports on top-of-rack (TOR) platforms are not supported.
- The egress QoS policy supports marking, policing, and classification.




---

**Note** Egress classification for egress packet scheduling is supported only on 100G platforms.

---

- Egress qos policies do not support packet-length based matching.
- The **set qos-group** command is not supported for egress QoS policies.

However, the **set qos-group** command is supported for egress QoS policies when applied on a 100G interface.

- Depending on the policy-map match criteria, the relevant egress QoS TCAM regions, such as **e-qos**, **e-mac-qos**, **e-ipv6-qos**, **egr-l2-qos**, and **egr-l3-vlan-qos**, must be carved for end-to-end QoS within the device.
- Set the egress QoS TCAM region size to 0 before downgrading to earlier images. Remove all egress QoS policies before downgrading to earlier images.

### Procedure

	Command or Action	Purpose
Step 1	<b>hardware access-list tcam region e-racl</b> <i>tcam-size</i>	To enable carving your QoS (IPv4) TCAM region, specify the <b>e-racl</b> region to free up resources. Also specify the reduced TCAM size for the <b>e-racl</b> region.



	Command or Action	Purpose
Step 2	<p><b>hardware access-list tcam region [e-qos   e-qos-lite   e-ipv6-qos   e-mac-qos   egr-l2-qos   egr-l3-vlan-qos ] tcam-size</b></p> <p><b>Example:</b></p> <pre>switch(config)# hardware access-list tcam region egr-l2-vlan-qos 256</pre> <p>Warning: Please reload all linecards for the configuration to take effect</p> <pre>switch(config)#</pre> <p><b>Example:</b></p> <pre>switch(config)# hardware access-list tcam region egr-l3-vlan-qos 256</pre> <p>Warning: Please reload all linecards for the configuration to take effect</p> <pre>switch(config)#</pre>	<p>The <b>hardware access-list tcam region [ e-qos   e-qos-lite   e-ipv6-qos   e-mac-qos   egr-l2-qos   egr-l3-vlan-qos ] tcam-size</b> command specifies the egress QoS (IPv4) TCAM region and the TCAM size. The <b>egr-l2-qos   egr-l3-vlan-qos</b> options specify the egress QoS TCAM regions and TCAM size. An egress QoS TCAM of 256 size, takes 512 entries because QoS TCAM is double-wide.</p> <p><b>Note</b> All egress QoS (IPv4) TCAM regions are double wide, except for the <b>e-qos-lite</b> region which is single wide.</p>
Step 3	<p><b>Optional: [no]hardware access-list tcam label egr-l2-qos 6</b></p> <p><b>Example:</b></p> <pre>switch(config)# hardware access-list tcam label egr-l2-qos 6</pre> <p>Warning: Please reload all linecards for the configuration to take effect</p> <pre>switch(config)#</pre>	<p>Configures 64 unique egress QoS policies on Layer 2 physical interfaces.</p> <p>To disable the changes, use the no form of this command.</p> <p><b>Note</b> This command is supported only on Cisco Nexus 9300-FX and FX2 platform switches.</p>
Step 4	<p><b>Optional: [no]hardware access-list tcam label egr-l2-qos 6</b></p> <p><b>Example:</b></p> <pre>switch(config)# hardware access-list tcam label egr-l2-qos 6</pre> <p>Warning: Please reload all linecards for the configuration to take effect</p> <pre>switch(config)#</pre>	<p>Configures 64 unique egress QoS policies on Layer 2 physical interfaces.</p> <p>To disable the changes, use the no form of this command.</p> <p><b>Note</b> This command is supported only on Cisco Nexus 9300-FX and FX2 platform switches.</p> <p><b>Note</b> Beginning with Cisco NX-OS Release 10.3(3)F, this command is supported on Cisco Nexus 9300-FX3 platform switches.</p>

## Using Templates to Configure TCAM Region Sizes



**Note** Using templates to configure TCAM region sizes is not supported on the Cisco Nexus 9508 switch (NX-OS 7.0(3)F3(3)).

Beginning with Cisco NX-OS Release 7.0(3)I3(1), you can use create and apply custom templates to configure TCAM region sizes.



**Note** Once you apply a TCAM template, the **hardware access-list tcam region** command will not work. You must uncommit the template in order to use the command.

## SUMMARY STEPS

1. **configure terminal**
2. **[no] hardware profile tcam resource template** *template-name* **ref-template** {**nfe** | **nfe2** | {**I2-I3** | **I3**}}
3. (Optional) *region tcam-size*
4. **exit**
5. **[no] hardware profile tcam resource service-template** *template-name*
6. (Optional) **show hardware access-list tcam template** {**all** | **nfe** | **nfe2** | **I2-I3** | **I3** | *template-name*}
7. (Optional) **copy running-config startup-config**
8. **reload**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	Required: <b>[no] hardware profile tcam resource template</b> <i>template-name</i> <b>ref-template</b> { <b>nfe</b>   <b>nfe2</b>   { <b>I2-I3</b>   <b>I3</b> }} <b>Example:</b> <pre>switch(config)# hardware profile tcam resource template SR_MPLS_CARVE ref-template nfe2 switch(config-tcam-temp)#</pre>	Creates a template for configuring ACL TCAM region sizes. <b>nfe</b> —The default TCAM template for Network Forwarding Engine (NFE)-enabled Cisco Nexus 9300 and 9500 Series, 3164Q, and 31128PQ devices. <b>nfe2</b> —The default TCAM template for NFE2-enabled Cisco Nexus 9500 Series, 3232C, and 3264Q devices. <b>I2-I3</b> —The default TCAM template for Layer 2 and Layer 3 security configurations on Cisco Nexus 9200 Series switches. <b>I3</b> —The default TCAM template for Layer 3 configurations on Cisco Nexus 9200 Series switches. The Layer 3 TCAM template is the default template for the Cisco Nexus 9200 Series switches.
<b>Step 3</b>	(Optional) <i>region tcam-size</i> <b>Example:</b> <pre>switch(config-tcam-temp)# mpls 256</pre>	Adds any desired TCAM regions and their sizes to the template. Enter this command for each region you want to add to the template.
<b>Step 4</b>	Required: <b>exit</b> <b>Example:</b>	Exits the TCAM template configuration mode.

	Command or Action	Purpose
	<pre>switch(config-tcam-temp)# exit switch(config#)</pre>	
<b>Step 5</b>	Required: [no] <b>hardware profile tcam resource service-template</b> <i>template-name</i>  <b>Example:</b>  <pre>switch(config)# hardware profile tcam resource service-template SR_MPLS_CARVE</pre>	Applies the custom template to all line cards and fabric modules.
<b>Step 6</b>	(Optional) <b>show hardware access-list tcam template</b> { <b>all</b>   <b>nfe</b>   <b>nfe2</b>   <b>I2-I3</b>   <b>I3</b>   <i>template-name</i> }  <b>Example:</b>  <pre>switch(config)# show hardware access-list tcam template SR_MPLS_CARVE</pre>	Displays the configuration for all TCAM templates or for a specific template.
<b>Step 7</b>	(Optional) <b>copy running-config startup-config</b>  <b>Example:</b>  <pre>switch(config)# copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.
<b>Step 8</b>	<b>reload</b>  <b>Example:</b>  <pre>switch(config)# reload</pre>	Reloads the device.  <b>Note</b> The configuration is effective only after you enter <b>copy running-config startup-config + reload</b> .

## Verifying QoS TCAM Carving

After you adjust the TCAM region sizes, enter the **show hardware access-list tcam region** command to display the TCAM sizes that will be applicable on the next reload of the device.

To display the configuration of a TCAM template, use the **show hardware access-list tcam template** {**all** | **nfe** | **nfe2** | **I2-I3** | **I3** | *template-name*} command where:

- **all**—Displays configuration for all TCAM templates.
- **nfe**—The default TCAM template for Network Forwarding Engine (NFE)-enabled Cisco Nexus 9300 and 9500 Series, 3164Q, and 31128PQ devices.
- **nfe2**—The default TCAM template for NFE2-enabled Cisco Nexus 9500, 3232C, and 3264Q devices.
- **I2-I3**—The default TCAM template for Layer 2-to-Layer 3 configurations on Cisco Nexus 9200 Series switches.
- **I3**—The default TCAM template for Layer 3 configurations on Cisco Nexus 9200 Series switches.



---

**Note** To keep all modules synchronized, you must reload all line card modules or enter the **copy running-config startup-config** command and the **reload** command to reload the device. Multiple TCAM region configurations require only a single reload. You can wait until you complete all of your TCAM region configurations before you reload the device.

---

If you exceed the 4K ingress limit for all TCAM regions when you configure a TCAM region, the following message appears:

```
ERROR: Aggregate TCAM region configuration exceeded the available Ingress TCAM space.  
Please re-configure.
```

If TCAM for a particular feature is not configured and you try to apply a feature that requires TCAM carving, the following message appears:

```
ERROR: Module x returned status: TCAM region is not configured. Please configure TCAM  
region and retry the command.
```



## CHAPTER 5

# Configuring Classification

- [About Classification, on page 55](#)
- [Prerequisites for Classification, on page 56](#)
- [Guidelines and Limitations for Classification, on page 56](#)
- [Configuring Traffic Classes, on page 59](#)
- [Verifying the Classification Configuration, on page 72](#)
- [Configuration Examples for Classification, on page 73](#)

## About Classification

Classification is the separation of packets into traffic classes. You configure the device to take a specific action on the specified classified traffic, such as policing or marking down, or other actions.

You can create class maps to represent each traffic class by matching packet characteristics with the classification criteria in the following table:

**Table 26: Classification Criteria**

Classification Criteria	Description
CoS	Class of service (CoS) field in the IEEE 802.1Q header.
IP precedence	Precedence value within the type of service (ToS) byte of the IP header.
Differentiated Services Code Point (DSCP)	DSCP value within the DiffServ field of the IP header.
ACL	IP, IPv6, or MAC ACL name.
Packet length	Size range of Layer 3 packet lengths. <b>Note</b> Match on packet-length is not supported on Cisco Nexus 9800 platform switches.
IP RTP	Identify applications using Real-time Transport Protocol (RTP) by UDP port number range.

You can specify multiple match criteria, you can choose to not match on a particular criterion, or you can determine the traffic class by matching any or all criteria.



**Note** However, if you match on an ACL, no other match criteria, except the packet length, can be specified in a match-all class. In a match-any class, you can match on ACLs and any other match criteria.

Traffic that fails to match any class in a QoS policy map is assigned to a default class of traffic called class-default. The class-default can be referenced in a QoS policy map to select this unmatched traffic.

You can reuse class maps when defining the QoS policies for different interfaces that process the same types of traffic.

## Prerequisites for Classification

Classification has the following prerequisites:

- You must be familiar with using modular QoS CLI.
- You are logged on to the device.

## Guidelines and Limitations for Classification

Classification has the following configuration guidelines and limitations:

- QoS policy will not be effective for fragmented packets. Fragmented packets will be forwarded to the default queue.
- The **show** commands with the **internal** keyword are not supported.
- PVLANS do not provide support for PVLAN QoS.
- When the **destination interface sup-eth0** CLI command is configured, the following system log message is displayed: `Enabling span destination to SUP will affect ingress QoS classification.`
- For VXLAN, the following Cisco Nexus platforms support QoS policies for traffic in the network to host direction (decapsulation path) as egress policy on both the port and VLAN:
  - Cisco Nexus 9300 and 9500 platform switches.
  - Cisco Nexus 9200 and 9300-EX platform switches; Cisco Nexus 93180YC-EX and 93108TC-EX switches; and the Cisco Nexus 9732C-EX line card.
  - The preceding is not supported for the following hardware: Cisco Nexus 9230QC, 9272Q, 9232C, 9236C, and 92300YC switches; and Cisco Nexus 9160YC-X switches.
- For VXLAN, the following Cisco Nexus platforms do not support QoS policies for traffic from the network to access direction (decapsulation path) as ingress policy on the uplink interface:
  - Cisco Nexus 9300 and 9500 platform switches.

- Cisco Nexus 9200 and 9300-EX platform switches; and Cisco Nexus 93180YC-EX and 93108TC-EX switches; and the Cisco Nexus 9732C-EX line card.
- Cisco Nexus 9230QC, 9272Q, 9232C, 9236C, and 92300YC switches; and Cisco Nexus 9160YC-X switches.
- QoS classification is not supported on the FEX interfaces ingressing the VXLAN traffic. This limitation is applicable to all Cisco Nexus 9000 series switches.
- Matching the packets based on DSCP, CoS, or precedence in Cisco Nexus 9300-EX platform switches, the TCAM entries for both IPv4 (single-wide is one entry) and IPv6 (double-wide are two entries) are installed in the hardware. For example, if you match DSCP 4, three entries are installed in the hardware, one entry for IPv4 and two entries for IPv6.
- You can specify a maximum of 1024 match criteria in a class map.
- You can configure a maximum of 128 classes for use in a single policy map.
- When you match on an ACL, the only other match you can specify is the Layer 3 packet length in a match-all class.
- The **match-all** option in the **class-map type qos match-all** command is not supported. The match criteria of this command becomes the same as in the **class-map type qos match-any** command. The **class-map type qos match-all** command yields the same results as the **class-map type qos match-any** command.
- The **match-all** option is not supported in CoPP class-map and it always defaults to the **match-any** option.
- You can classify traffic on Layer 2 ports that are based on either the port policy or VLAN policy of the incoming packet but not both. If both are present, the device acts on the port policy and ignores the VLAN policy.
- When a Cisco Nexus Fabric Extender (FEX) is connected and in use, do not mark data traffic with a CoS value of 7. CoS 7 is reserved for control traffic transiting the Fabric Extender.
- Control traffic (control frames) from the switch to the FEX are marked with a CoS value of 7 and are limited to a jumbo MTU frame size of 2344 bytes.
- FEX QoS policy supports FEX host interfaces (HIF).
  - QoS TCAM carving is supported on ALE (Application Leaf Engine) enabled switches.
  - Only system level policies are supported.
  - Match on CoS is supported.
  - Match on QoS-group is supported.
- Jumbo ping (MTU of 2400 or greater) from a switch supervisor with a COS of 7, to a FEX host, fails because the control queue on a FEX supports an MTU limited to 2240.
- QoS classification policies are not supported under system QoS for Layer 2 switch ports. However, you can configure a QoS policy to classify the incoming traffic based on CoS/DSCP and map it to different queues. The QoS policy must be applied under all the interfaces that require the classification.
- A QoS policy with a MAC-based ACL as a match in the class map does not work for IPv6 traffic. For QoS, IPv6 traffic must be matched based on IPv6 addresses and not on MAC addresses.

- As a best practice, avoid having a voice VLAN configuration where an access VLAN is same as the voice VLAN.

The following are alternative approaches:

- If a separate dot1p tag (cos) value is not required for voice traffic, use the **switchport voice vlan untagged** command.

```
switch(config)# interface ethernet 1/1
switch(config-if)# switchport access vlan 20
switch(config-if)# switchport voice vlan untagged
```

- If a separate cos value is required for voice traffic, use the **switchport voice vlan dot1p** command.

```
switch(config)# interface ethernet 1/1
switch(config-if)# switchport access vlan 20
switch(config-if)# switchport voice vlan dot1p
```

- Cisco Nexus 9504 and Cisco Nexus 9508 switches with the following line cards do not support QoS match acl with fragments:
  - Cisco Nexus 96136YC-R
  - Cisco Nexus 9636C-RX
  - Cisco Nexus 9636Q-R
  - Cisco Nexus 9636C-R
- MPLS packets with a NULL label on transit nodes, receive an MPLS classification that is based on its NULL label EXP.
- Ingress DROP\_ACL\_DROP is seen with Cisco Nexus 9272Q, 9236C, and 92160YC-X switches on an ASIC during congestion. However, these drops do not impact the performance of the switch.
- A QoS policy that references an ACL that contains a match for ICMP type or code is not supported.
- A QoS Policy that references an ACL that contains a match for TCP flags is only supported on the following Cisco Nexus 9000 series switches:
  - Cisco Nexus 9200 platform switches
  - Cisco Nexus 9300-EX platform switches
  - Cisco Nexus 9300-FX platform switches
  - Cisco Nexus 9300-GX platform switches
  - Cisco Nexus 9500 platform switches with Cisco Nexus 97xx-EX and 97xx-FX line cards
  - Beginning with Cisco NX-OS Release 10.2(1q)F, QoS Classification is supported on the N9K-C9332D-GX2B platform switches.
- Beginning with Cisco NX-OS Release 10.3(1)F, QoS classification (ACL) is supported on the Cisco Nexus 9808 platform switches.
- Beginning with Cisco NX-OS Release 10.4(1)F, QoS classification (ACL) is supported on the Cisco Nexus 9804 platform switches.



- Cisco Nexus 9808/9804 platform switches have the following limitations for SUP QoS ACL support:
  - Egress type QoS policy is not supported.
  - policer re-marking is not supported for exceed-action and violate-action.
  - The **match cos** and **set cos** commands are not supported.
  - Max burst values are supported for 16 configs. QoS and CoPP shares these burst configs. CoPP reserves 8, and QoS will have remaining 8.
  - ACL counters are not available for the policer. The **show system internal access-list interface eth <> input entries** command will not show counters if it has policer.
  - 2-rate 3-color (2R3C) policing support is provided only for confirm action transmit and exceed action transmit.
  - Match on packet-length is not supported.
- Beginning with Cisco NX-OS Release 10.4(1)F, System level ingress QoS policy (classification and remarking) is supported on Cisco Nexus 9808/9804 platform switches. However, policer is not supported at system level QoS.
- From Cisco NX-OS Release 10.4(1)F, QoS classification is supported on Cisco Nexus C9348GCFX3 and Cisco C9348GC-FX3PH switches.



---

**Note** QoS classification is not supported for ports 41-48 on Cisco Nexus C9348GC-FX3PH switch.

---

- From Cisco NX-OS Release 10.4(2)F, QoS classification (ACL) is supported on Cisco Nexus C93108TC-FX3 switches.

## Configuring Traffic Classes

### Configuring ACL Classification

You can classify traffic by matching packets based on an existing access control list (ACL). Traffic is classified by the criteria defined in the ACL. The permit and deny ACL keywords are ignored in the matching; even though a match criteria in the access-list has a deny action, it is still used for matching for this class.



---

**Note** Use the **class-map class\_acl** command to display the ACL class-map configuration.

---

#### SUMMARY STEPS

1. **configure terminal**
2. **class-map [type qos] [match-any | match-all] class-name**
3. **match access-group name acl-name**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>class-map [type qos] [match-any   match-all] class-name</b> <b>Example:</b> <pre>switch(config)# class-map class_acl</pre>	Creates or accesses the class map named class-name and enters class-map mode. The class map name can contain alphabetic, hyphen, or underscore characters, and can be up to 40 characters. ( <b>match-any</b> is the default when no option is selected and multiple match statements are entered.)
<b>Step 3</b>	<b>match access-group name acl-name</b> <b>Example:</b> <pre>switch(config-cmap-qos)# match access-group name my_acl</pre>	Configures the traffic class by matching packets based on the <i>acl-name</i> . The <b>permit</b> and <b>deny</b> ACL keywords are ignored in the matching.

## Examples: Configuring ACL Classification

To prevent packets from being matched by the QoS class-map, you must explicitly specify the packets you want to match with permit statements. The *implicit* default deny statement at the end of the ACL will filter out the remainder. Any *explicit* deny statements configured inside the access list of a QoS class map will be ignored in the matching and treated as an explicit permit statement as shown in the examples below.

The following examples, A1, B1, and C1, all produce the same QoS matching results:

## • A1

```
ip access-list extended A1
 permit ip 10.1.0.0 0.0.255.255 any
 permit ip 172.16.128.0 0.0.1.255 any
 permit ip 192.168.17.0 0.0.0.255 any
```

## • B1

```
ip access-list extended B1
 permit ip 10.1.0.0 0.0.255.255 any
 deny ip 172.16.128.0 0.0.1.255 any /* deny is interpreted as a permit */
 permit ip 192.168.17.0 0.0.0.255 any
```

## • C1

```
ip access-list extended C1
 deny ip 10.1.0.0 0.0.255.255 any /* deny is interpreted as a permit */
 deny ip 172.16.128.0 0.0.1.255 any /* deny is interpreted as a permit */
 deny ip 192.168.17.0 0.0.0.255 any /* deny is interpreted as a permit */
```

Adding an explicit DENY ALL at the end of a QoS matching ACL causes the QoS ACL to permit all traffic.

The following examples, D1 and E1, produce the same QoS matching results:

- D1

```
ip access-list extended D1
  permit ip 10.1.0.0 0.0.255.255 any
  permit ip 172.16.128.0 0.0.1.255 any
  permit ip 192.168.17.0 0.0.0.255 any
  deny ip 0.0.0.0 255.255.255.255 any /* deny is interpreted as a permit */
```




---

**Note** The last line in the example effectively becomes a PERMIT ALL statement and results in the QoS ACL to permit all packets.

---

- E1

```
ip access-list extended E1
  permit ip 0.0.0.0 255.255.255.255 any
```

## Configuring a DSCP Wildcard Mask

Use the DSCP wildcard mask feature to classify multiple DSCP values from a set of IP flows recognized by an ACL and the DSCP value. Classification of IP information and DSCP values occurs in a more granular way by using multiple parameters. With this granularity, you can treat these flows by policing them to protect the rest of the traffic, or assign them to a qos-group for further QoS operations.




---

**Note** Only Cisco Nexus 9300-EX/FX/FX2/FX3 platform switches support the DSCP wildcard mask feature.

---

### SUMMARY STEPS

1. **configure terminal**
2. **ip access-list *acl-name***
3. [ *sequence-number* ] { **permit** | **deny** } *protocol* { *source-ip-prefix* | *source-ip-mask* } { *destination-ip-prefix* | *destination-ip-mask* } [ **dscp** *dscp-value* **dscp-mask** 0-63 ]
4. [ *sequence-number* ] { **permit** | **deny** } *protocol* { *source-ip-prefix* | *source-ip-mask* } { *destination-ip-prefix* | *destination-ip-mask* } [ **dscp** *dscp-value* [ *dscp-mask* ] ]
5. **exit**
6. **class-map [type qos] [match-any | match-all] *class-name***
7. **match access-list *acl-name***

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.

	Command or Action	Purpose
<b>Step 2</b>	<b>ip access-list</b> <i>acl-name</i> <b>Example:</b> <pre>switch(config)# ip access-list acl-01 switch(config-acl)</pre>	Enters the ACL configuration mode and creates an ACL with the entered name.
<b>Step 3</b>	<pre>[ sequence-number ] { permit   deny } protocol { source-ip-prefix   source-ip-mask } { destination-ip-prefix   destination-ip-mask } [ dscp dscp-value dscp-mask 0-63 ]</pre> <b>Example:</b> <pre>switch(config-acl)# 10 permit ip 10.1.1.1/24 20.1.1.2/24 dscp 33 dscp-mask 33</pre>	<p>Creates an ACL entry that matches or filters traffic that is based on a DSCP wildcard bit mask.</p> <p>The <i>sequence-number</i> argument can be a whole number from 1 through 4294967295.</p> <p><b>dscp dscp-value:</b> Match packets with a specific DSCP value.</p> <p><b>dscp-mask dscp-mask-value:</b> Configures the DSCP wildcard mask which matches on any bit in the DSCP value to filter traffic. Range is from 0 to 0x3F.</p>
<b>Step 4</b>	<pre>[ sequence-number ] { permit   deny } protocol { source-ip-prefix   source-ip-mask } { destination-ip-prefix   destination-ip-mask } [ dscp dscp-value [ dscp-mask ] ]</pre> <b>Example:</b> <pre>switch(config-acl)# 10 permit ip 10.1.1.1/24 20.1.1.2/24 dscp 33 30</pre>	<p>Creates an ACL entry that matches or filters traffic that is based on a DSCP wildcard bit mask.</p> <p>The <i>sequence-number</i> argument can be a whole number from 1 through 4294967295.</p> <p><b>dscp:</b> Match packets with a specific DSCP value.</p> <p><i>dscp-mask:</i> Configures the DSCP wildcard mask which matches on any bit in the DSCP value to filter traffic. Range is from 0 to 0x3F.</p>
<b>Step 5</b>	<b>exit</b> <b>Example:</b> <pre>switch(config-acl)# exit switch(config)#</pre>	Exits ACL configuration mode and enters global configuration mode.
<b>Step 6</b>	<b>class-map</b> [ <b>type qos</b> ] [ <b>match-any</b>   <b>match-all</b> ] <i>class-name</i> <b>Example:</b> <pre>switch(config)# class-map type qos match-any class_dscp_mask switch(config-cmap-qos)#</pre>	Creates or accesses the class map that is named by the <i>class-name</i> variable and enters the class-map mode. The class-map name can contain alphabetic, hyphen, or underscore characters, and can be up to 40 characters.
<b>Step 7</b>	<b>match access-list</b> <i>acl-name</i> <b>Example:</b> <pre>switch(config-cmap-qos)# match access-list acl-01 switch(config-cmap-qos)#</pre>	Configures the traffic class by matching packets that are based on the IP access list.

### Example

In the following example, an ACL looks at traffic that is sent from subnet 10.1.1.0 to subnet 20.1.1.0. The ACL also checks for traffic with DSCP 33, and any subsequent DSCP values from 33 through 63, with a mask value of 30. The ACL is set to a class map that is matching this ACL for further QoS operations.

```

switch# configure terminal
switch(config)# ip access-list acl-01
switch(config-acl)# 10 permit ip 10.1.1.1/24 20.1.1.2/24 dscp 33 dscp-mask 30
switch(config-acl)# exit
switch(config)# class-map type qos match-any class_dscp_mask
switch(config-cmap-qos)# match access-list acl-01

```

## Configuring DSCP Classification

You can classify traffic based on the DSCP value in the DiffServ field of the IP header. The standard DSCP values are listed in the following table:

**Table 27: Standard DSCP Values**

Value	List of DSCP Values
af11	AF11 dscp (001010)—decimal value 10
af12	AF12 dscp (001100)—decimal value 12
af13	AF13 dscp (001110)—decimal value 14
af21	AF21 dscp (010010)—decimal value 18
af22	AF22 dscp (010100)—decimal value 20
af23	AF23 dscp (010110)—decimal value 22
af31	AF31 dscp (011010)—decimal value 26
af32	AF40 dscp (011100)—decimal value 28
af33	AF33 dscp (011110)—decimal value 30
af41	AF41 dscp (100010)—decimal value 34
af42	AF42 dscp (100100)—decimal value 36
af43	AF43 dscp (100110)—decimal value 38
cs1	CS1 (precedence 1) dscp (001000)—decimal value 8
cs2	CS2 (precedence 2) dscp (010000)—decimal value 16
cs3	CS3 (precedence 3) dscp (011000)—decimal value 24
cs4	CS4 (precedence 4) dscp (100000)—decimal value 32
cs5	CS5 (precedence 5) dscp (101000)—decimal value 40
cs6	CS6 (precedence 6) dscp (110000)—decimal value 48
cs7	CS7 (precedence 7) dscp (111000)—decimal value 56
default	Default dscp (000000)—decimal value 0

Value	List of DSCP Values
ef	EF dscp (101110)—decimal value 46

## SUMMARY STEPS

1. **configure terminal**
2. **class-map [type qos] [match-any | match-all] class-name**
3. **match [not] dscp dscp-values**
4. **exit**
5. **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
<b>Step 2</b>	<b>class-map [type qos] [match-any   match-all] class-name</b>  <b>Example:</b> switch(config)# class-map class_dscp	Creates or accesses the class map named class-name and enters class-map mode. The class-map name can contain alphabetic, hyphen, or underscore characters, and can be up to 40 characters.
<b>Step 3</b>	<b>match [not] dscp dscp-values</b>  <b>Example:</b> switch(config-cmap-qos)# match dscp af21, af32	Configures the traffic class by matching packets based on dscp-values. The standard DSCP values are shown in the following table.  Use the <b>not</b> keyword to match on values that do not match the specified range.
<b>Step 4</b>	<b>exit</b>  <b>Example:</b> switch(config-cmap-qos)# exit switch(config)#	Exits global class-map queuing mode and enters global configuration mode.
<b>Step 5</b>	<b>copy running-config startup-config</b>  <b>Example:</b> switch(config)# copy running-config startup-config	(Optional) Saves the running configuration to the startup configuration.

### Example

This example shows how to display the DSCP class-map configuration:

```
switch# show class-map class_dscp
```

## Configuring IP Precedence Classification

You can classify traffic based on the precedence value in the type of service (ToS) byte field of the IP header. The precedence values are listed in the following:

**Table 28: Precedence Values**

Value	List of Precedence Values
0-7	IP precedence value
critical	Critical precedence (5)
flash	Flash precedence (3)
flash-override	Flash override precedence (4)
immediate	Immediate precedence (2)
internet	Internetwork control precedence (6)
network	Network control precedence (7)
priority	Priority precedence (1)
routine	Routine precedence (0)

### SUMMARY STEPS

1. **configure terminal**
2. **class-map [type qos] [match-any | match-all] class-name**
3. **match [not] precedence precedence-values**
4. **exit**
5. **copy running-config startup-config**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
<b>Step 2</b>	<b>class-map [type qos] [match-any   match-all] class-name</b>  <b>Example:</b> switch(config)# class-map class_ip_precedence	Creates or accesses the class map named class-name and then enters class-map mode. The class-map name can contain alphabetic, hyphen, or underscore characters, and can be up to 40 characters.
<b>Step 3</b>	<b>match [not] precedence precedence-values</b>  <b>Example:</b> switch(config-cmap-qos)# match precedence 1-2, 5-7	Configures the traffic class by matching packets based on <i>precedence-values</i> . Values are shown in the following table. Use the <b>not</b> keyword to match on values that do not match the specified range.

	Command or Action	Purpose
<b>Step 4</b>	<b>exit</b> <b>Example:</b> <pre>switch(config-cmap-qos)# exit switch(config)#</pre>	Exits global class-map queuing mode and enters global configuration mode.
<b>Step 5</b>	<b>copy running-config startup-config</b> <b>Example:</b> <pre>switch(config)# copy running-config startup-config</pre>	(Optional) Saves the running configuration to the startup configuration.

### Example

This example shows how to display the IP precedence class-map configuration:

```
switch# show class-map class_ip_precedence
```

## Configuring Protocol Classification

For Layer 3 protocol traffic, you can use the ACL classification match.

*Table 29: match Command Protocol Arguments*

Argument	Description
arp	Address Resolution Protocol (ARP)
bridging	Bridging
cdp	Cisco Discovery Protocol (CDP)
dhcp	Dynamic Host Configuration (DHCP)
isis	Intermediate system to intermediate system (IS-IS)

### SUMMARY STEPS

1. **configure terminal**
2. **class-map [type qos] [match-any | match-all] class-name**
3. **match [not] protocol {arp | bridging | cdp | dhcp | isis}**
4. **exit**
5. **copy running-config startup-config**



## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
Step 2	<b>class-map [type qos] [match-any   match-all] class-name</b> <b>Example:</b> <pre>switch(config)# class-map class_protocol</pre>	Creates or accesses the class map named class-name and then enters class-map mode. The class-map name can contain alphabetic, hyphen, or underscore characters, and can be up to 40 characters.
Step 3	<b>match [not] protocol {arp   bridging   cdp   dhcp   isis}</b> <b>Example:</b> <pre>switch(config-cmap-qos)# match protocol isis</pre>	Configures the traffic class by matching packets based on the specified protocol. Use the <b>not</b> keyword to match on protocols that do not match the protocol specified.
Step 4	<b>exit</b> <b>Example:</b> <pre>switch(config-cmap-qos)# exit switch(config)#</pre>	Exits global class-map queuing mode and enters global configuration mode.
Step 5	<b>copy running-config startup-config</b> <b>Example:</b> <pre>switch(config)# copy running-config startup-config</pre>	(Optional) Saves the running configuration to the startup configuration.

**Example**

This example shows how to display the protocol class-map configuration:

```
switch# show class-map class_protocol
```

## Configuring Layer 3 Packet Length Classification

You can classify Layer 3 traffic based on various packet lengths.



**Note** This feature is designed for IP packets only.

## SUMMARY STEPS

1. **configure terminal**
2. **class-map [type qos] [match-any | match-all] class-name**
3. **match [not] packet length packet-length-list**
4. **exit**
5. **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
<b>Step 2</b>	<b>class-map [type qos] [match-any   match-all] class-name</b> <b>Example:</b> switch(config)# class-map class_packet_length	Creates or accesses the class map named class-name and then enters class-map mode. The class-map name can contain alphabetic, hyphen, or underscore characters, and can be up to 40 characters.
<b>Step 3</b>	<b>match [not] packet length packet-length-list</b> <b>Example:</b> switch(config-cmap-qos)# match packet length min 2000	Configures the traffic class by matching packets based on various packet lengths (bytes). Values can range from 1 to 9198. Use the <b>not</b> keyword to match on values that do not match the specified range.
<b>Step 4</b>	<b>exit</b> <b>Example:</b> switch(config-cmap-qos)# exit switch(config)#	Exits global class-map queuing mode and enters global configuration mode.
<b>Step 5</b>	<b>copy running-config startup-config</b> <b>Example:</b> switch(config)# copy running-config startup-config	(Optional) Saves the running configuration to the startup configuration.

**Example**

This example shows how to display the packet length class-map configuration:

```
switch# show class-map class_packet_length
```

## Configuring CoS Classification

You can classify traffic based on the class of service (CoS) in the IEEE 802.1Q header. This 3-bit field is defined in IEEE 802.1p to support QoS traffic classes. CoS is encoded in the high order 3 bits of the VLAN ID Tag field and is referred to as user\_priority.

## SUMMARY STEPS

1. **configure terminal**
2. **class-map [type qos] [match-any | match-all] class-name**
3. **match [not] cos cos-list**
4. **exit**
5. **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
Step 2	<b>class-map [type qos] [match-any   match-all] class-name</b> <b>Example:</b> <pre>switch(config)# class-map class_cos</pre>	Creates or accesses the class map named class-name and then enters class-map mode. The class-map name can contain alphabetic, hyphen, or underscore characters, and can be up to 40 characters.
Step 3	<b>match [not] cos cos-list</b> <b>Example:</b> <pre>switch(config-cmap-qos)# match cos 4,5-6</pre>	Configures the traffic class by matching packets based on the list of CoS values. Values can range from 0 to 7. Use the <b>not</b> keyword to match on values that do not match the specified range.  <b>Note</b> When a Cisco Nexus Fabric Extender (FEX) is connected and in use, data traffic should not be marked with a CoS value of 7. CoS 7 is reserved for control traffic transiting the Fabric Extender.
Step 4	<b>exit</b> <b>Example:</b> <pre>switch(config-cmap-qos)# exit switch(config)#</pre>	Exits global class-map queuing mode and enters global configuration mode.
Step 5	<b>copy running-config startup-config</b> <b>Example:</b> <pre>switch(config)# copy running-config startup-config</pre>	(Optional) Saves the running configuration to the startup configuration.

**Example**

This example shows how to display the CoS class-map configuration:

```
switch# show class-map class_cos
```

## Configuring CoS Classification for FEX



**Note** The CoS Classification for FEX feature is not supported on the Cisco Nexus 9508 switch (NX-OS 7.0(3)F3(3)).

You can classify traffic based on the class of service (CoS) for a FEX.

**Before you begin**

Before configuring the FEX, enable **feature-set fex**.

**SUMMARY STEPS**

1. **configure terminal**
2. **class-map [type qos] [match-any | match-all] class-name**
3. **match [not] cos cos-list**
4. **exit**
5. **copy running-config startup-config**

**DETAILED STEPS**

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>class-map [type qos] [match-any   match-all] class-name</b> <b>Example:</b> <pre>switch(config)# class-map class_cos</pre>	Creates or accesses the class map named class-name and then enters class-map mode. The class-map name can contain alphabetic, hyphen, or underscore characters, and can be up to 40 characters.
<b>Step 3</b>	<b>match [not] cos cos-list</b> <b>Example:</b> <pre>switch(config-cmap-qos)# match cos 4,5-6</pre>	Configures the traffic class by matching packets based on the list of CoS values. Values can range from 0 to 7. Use the <b>not</b> keyword to match on values that do not match the specified range.  <b>Note</b> When a Cisco Nexus Fabric Extender (FEX) is connected and in use, data traffic should not be marked with a CoS value of 7. CoS 7 is reserved for control traffic transiting the Fabric Extender.
<b>Step 4</b>	<b>exit</b> <b>Example:</b> <pre>switch(config-cmap-qos)# exit switch(config)#</pre>	Exits global class-map queuing mode and enters global configuration mode.
<b>Step 5</b>	<b>copy running-config startup-config</b> <b>Example:</b> <pre>switch(config)# copy running-config startup-config</pre>	(Optional) Saves the running configuration to the startup configuration.

**Example**

This example shows how to configure the CoS class-map configuration:

```

switch# conf t
switch(config)# class-map type qos match-all cos6
switch(config-cmap-qos)# match cos 6
switch(config)# class-map type qos match-all cos1
switch(config-cmap-qos)# match cos 1
switch(config)# class-map type qos match-all cos2
switch(config-cmap-qos)# match cos 2
switch(config)# class-map type qos match-all cos3
switch(config-cmap-qos)# match cos 3
switch(config)# class-map type qos match-all cos0
switch(config-cmap-qos)# match cos 0

```

## Configuring IP RTP Classification

The IP Real-Time Transport Protocol (RTP) is a transport protocol for real-time applications that transmit data such as audio or video (RFC 3550). Although RTP does not use a common TCP or UDP port, you typically configure RTP to use ports 16384 to 32767. UDP communications uses an even-numbered port and the next higher odd-numbered port is used for RTP Control Protocol (RTCP) communications.

Cisco Nexus 9000 Series switches support the transport of RDMA over Converged Ethernet (RoCE) v1 and v2 protocols. RoCE uses a UDP port.

When defining a match statement in a **type qos class-map**, to match with upper layer protocols and port ranges (UDP/TCP/RTP, among others), the system cannot differentiate, for example, between UDP traffic and RTP traffic in the same port range. The system classifies both traffic types the same. For better results, you must engineer the QoS configurations to match the traffic types present in the environment.

### SUMMARY STEPS

1. **configure terminal**
2. **class-map [type qos] [match-any | match-all] class-name**
3. **match [not] ip rtp udp-port-value**
4. **match [not] ip roce udp-port-value**
5. **exit**
6. **copy running-config startup-config**

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
Step 2	<b>class-map [type qos] [match-any   match-all] class-name</b> <b>Example:</b> <pre>switch(config)# class-map class_rtp</pre>	Creates or accesses a class map and then enters the class-map mode. The class-map name can contain alphabetic, hyphen, or underscore characters, and can be up to 40 characters.

	Command or Action	Purpose
<b>Step 3</b>	<b>match [not] ip rtp <i>udp-port-value</i></b> <b>Example:</b> <pre>switch(config-cmap-qos)# match ip rtp 2000-2100, 4000-4100</pre>	Configures the traffic class by matching packets that are based on a range of lower and upper UDP port numbers, targeting applications using RTP. Values can range from 2000 to 65535. Use the <b>not</b> keyword to match on values that do not match the specified range.
<b>Step 4</b>	<b>match [not] ip roce <i>udp-port-value</i></b> <b>Example:</b> <pre>switch(config-cmap-qos)# match ip roce 3000-3100, 6000-6100</pre>	Configures the traffic class by matching packets that are based on a range of lower and upper UDP port numbers, targeting applications using RoCE. Values can range from 2000 to 65535. Use the <b>not</b> keyword to match on values that do not match the specified range.  <b>Note</b> If ip roce and ip rtp are configured to match with the same port number, only ip rtp is displayed when you use the <b>show policy-map interface <i>interface-type</i> qos</b> command. When you use the help string for both the RTP and RoCE, the recommended range is displayed but you are allowed to specify the value outside the recommended range as well (based on your requirement).
<b>Step 5</b>	<b>exit</b> <b>Example:</b> <pre>switch(config-cmap-qos)# exit switch(config)#</pre>	Exits global class-map queuing mode and enters global configuration mode.
<b>Step 6</b>	<b>copy running-config startup-config</b> <b>Example:</b> <pre>switch(config)# copy running-config startup-config</pre>	(Optional) Saves the running configuration to the startup configuration.

### Example

This example shows how to display the RTP class-map configuration:

```
switch# show class-map class_rtp
```

## Verifying the Classification Configuration

Use the **show class-map** command to verify the class-map configuration. This command displays all class maps.

# Configuration Examples for Classification

The following example shows how to configure classification for two classes of traffic:

```
class-map class_dscp
match dscp af21, af32
exit
class-map class_cos
match cos 4, 5-6
exit
```

The following example shows how to configure system QoS:

```
class-map type qos match-all match-dscp-cs1
  match dscp 8
class-map type qos match-all match-dscp-cs2
  match dscp 16
class-map type qos match-all match-dscp-cs3
  match dscp 24
class-map type qos match-all match-dscp-cs4
  match dscp 32
class-map type qos match-all match-dscp-cs5
  match dscp 40
class-map type qos match-all match-dscp-cs6
  match dscp 48
class-map type qos match-all match-dscp-cs7
  match dscp 56

policy-map type qos system-level-policy1
  class match-dscp-cs1
    set qos-group 1
  class match-dscp-cs2
    set qos-group 2
  class match-dscp-cs3
    set qos-group 3
  class match-dscp-cs4
    set qos-group 4
  class match-dscp-cs5
    set qos-group 5
  class match-dscp-cs6
    set qos-group 6
  class match-dscp-cs7
    set qos-group 7

switch# conf t
Enter configuration commands, one per line. End with CNTL/Z.
switch(config)# system qos
switch(config-sys-qos)# service-policy type qos input system-level-policy1
switch(config-sys-qos)# end
switch#
```







## CHAPTER 6

# Configuring Marking

- [About Marking, on page 75](#)
- [Prerequisites for Marking, on page 77](#)
- [Guidelines and Limitations for Marking, on page 77](#)
- [Configuring Marking, on page 78](#)
- [Verifying the Marking Configuration, on page 86](#)
- [Configuration Examples for Marking, on page 86](#)

## About Marking

Marking is a method that you use to modify the QoS fields of the incoming and outgoing packets. The QoS fields that you can mark are IP precedence and differentiated services code point (DSCP) in Layer 3. The QoS group is a label local to the system to which you can assign intermediate marking values. You can use the QoS group label to determine the egress scheduling.

You can use marking commands in traffic classes that are referenced in a policy map. The marking features that you can configure are listed in the following table:

**Table 30: Configurable Marking Features**

Marking Feature	Description
DSCP	Layer 3 DSCP.
IP precedence	Layer 3 IP precedence. <b>Note</b> IP precedence uses only the lower three bits of the type of service (ToS) field. The device overwrites the first three bits of the ToS field to 0.
QoS group	Locally significant QoS values that can be manipulated and matched within the system. The range is from 0 to 3.
Ingress	Status of the marking applies to incoming packets.
CoS	Layer 2 VLAN ID

## Trust Boundaries

The trust boundary forms a perimeter on your network. Your network trusts (and does not override) the markings on your switch.

The incoming interface enforces the trust boundary as follows:

- All Fibre Channel and virtual Fibre Channel interfaces are automatically classified into the FCoE system class.
- By default, all Ethernet interfaces are trusted interfaces. A packet tagged with an 802.1p class of service (CoS) value is classified into a system class using the value in the packet.
- Any packet not tagged with an 802.1p CoS value is classified into the default drop system class. If the untagged packet is sent over a trunk, it is tagged with the default untagged CoS value, which is zero.
- You can override the default untagged CoS value for an Ethernet interface or port channel.

After the system applies the correct CoS value to an untagged packet, QoS treats the packet according to the newly defined class.

## Class of Behavior

For routed unicast traffic, the CoS value is not available and the packet has the Differentiated Services Code Point (DSCP) value only. For bridged unicast traffic, the CoS value is copied from the CoS value received in the 802.1q header. Note that on Layer 2 access links there is no trunk header. Therefore, if traffic is received on an access port and bridged, it will egress the switch with CoS 0. The DSCP value does not change, but the packet may not get the desired priority. You can manually set the CoS value in a policy-map via any QoS policy that manually sets the CoS or DSCP value.

Routed multicast traffic derives its CoS value similar to routed unicast traffic. For bridged multicast traffic, the behavior depends on the Layer 3 state. If there is no Layer 3 state for the multicast group, the CoS is derived similar to the bridged unicast traffic. If there is a Layer 3 state for the multicast group, the CoS is derived similar to routed unicast traffic.




---

**Note** When you enable Protocol Independent Multicast (PIM) in sparse mode on the switch virtual interface (SVI) for the VLAN in which traffic is received, PIM creates an S,G entry for any multicast traffic.

---

**Table 31: CoS Behavior per Traffic Type**

Traffic Type	CoS Behavior
Routed unicast	Unchanged
Bridged unicast	Unchanged
Routed multicast	Copied from 3 MSB of ToS
Bridged multicast with Layer 3 state for group	Copied from 3 MSB of ToS
Bridged multicast with no Layer 3 state for group	Unchanged



---

**Note** CoS behavior per traffic type is not supported on the Cisco Nexus 9508 switch (NX-OS 7.0(3)F3(3)).

---

## Prerequisites for Marking

Classification has the following prerequisites:

- You must be familiar with using modular QoS CLI.
- You are logged on to the device.

## Guidelines and Limitations for Marking

Marking has the following configuration guidelines and limitations:

- PVLANS do not provide support for PVLAN QoS.
- **show** commands with the **internal** keyword are not supported.
- Egress QoS policies are not supported on subinterfaces.
- The **set qos-group** command can only be used in ingress policies.



---

**Note** You can apply the marking instructions in a QoS policy map to ingress packets by attaching that QoS policy map to an interface. To select ingress, you specify the **input** keyword in the **service-policy** command.

---

For more information, see the [Attaching and Detaching a QoS Policy Action](#) section.

- The FEX QoS policy supports FEX host interfaces (HIF).



---

**Note** FEX host interfaces are not supported on the Cisco Nexus 9508 switch.

---

- QoS TCAM carving is supported on ALE (Application Leaf Engine) enabled switches.
- The FEX QoS policy supports only the **set qos-group** command. Other marking commands are not supported.



---

**Note** **set qos-group 0** is reserved for class default. It cannot be configured in user-defined classes.

---

- Match on QoS-group is supported.

- Interface level egress QoS policies must be applied on 100G ports for egress packet scheduling. When egress QoS policies are not configured for a 100G port, all egress packet traffic goes through the default queue (Qos-group 0).




---

**Note** Egress QoS policy for 100G ports is applicable only for Cisco Nexus 9300 platform switches with the N9K-M4PC-CFP2 GEM or for Cisco Nexus 9500 platform switches with the Cisco Nexus 9408PC-CFP2 line cards. In all other 100G Cisco Nexus series switches, egress QoS policy is not a must.

---

- Control traffic, such as BPDUs, routing protocol packets, LACP/CDP/BFD, GOLD packets, glean traffic, and management traffic, are automatically classified into a control group, based on a criteria. These packets are classified into qos-group 8 and have a strict absolute priority over other traffic. These packets are also given a dedicated buffer pool so that any congestion of data traffic does not affect control traffic. The control qos-group traffic classification cannot be modified.
- Span traffic automatically gets classified into qos-group 9 and is scheduled at absolute low priority.
- Egress QoS policies are not supported on Cisco Nexus 9200 platform switches.
- QoS marking policies can be enabled on subinterfaces
- Beginning with Cisco NX-OS Release 10.1(2), Marking is supported on the N9K-X9624D-R2 and N9K-C9508-FM-R2 platform switches.

## Configuring Marking

You can combine one or more of the marking features in a policy map to control the setting of QoS values. You can then apply policies to either incoming or outgoing packets on an interface.




---

**Note** Do not press **Enter** after you use the **set** command and before you add the rest of the command. If you press **Enter** directly after entering the set keyword, you will be unable to continue to configure with the QoS configuration.

---

## Configuring DSCP Marking

You can set the DSCP value in the six most significant bits of the DiffServ field of the IP header to a specified value. You can enter numeric values from 0 to 63, in addition to the standard DSCP values shown in the following table.

**Table 32: Standard DSCP Values**

Value	List of DSCP Values
af11	AF11 dscp (001010)—decimal value 10
af12	AF12 dscp (001100)—decimal value 12

Value	List of DSCP Values
af13	AF13 dscp (001110)—decimal value 14
af21	AF21 dscp (010010)—decimal value 18
af22	AF22 dscp (010100)—decimal value 20
af23	AF23 dscp (010110)—decimal value 22
af31	AF31 dscp (011010)—decimal value 26
af32	AF40 dscp (011100)—decimal value 28
af33	AF33 dscp (011110)—decimal value 30
af41	AF41 dscp (100010)—decimal value 34
af42	AF42 dscp (100100)—decimal value 36
af43	AF43 dscp (100110)—decimal value 38
cs1	CS1 (precedence 1) dscp (001000)—decimal value 8
cs2	CS2 (precedence 2) dscp (010000)—decimal value 16
cs3	CS3 (precedence 3) dscp (011000)—decimal value 24
cs4	CS4 (precedence 4) dscp (100000)—decimal value 32
cs5	CS5 (precedence 5) dscp (101000)—decimal value 40
cs6	CS6 (precedence 6) dscp (110000)—decimal value 48
cs7	CS7 (precedence 7) dscp (111000)—decimal value 56
default	Default dscp (000000)—decimal value 0
ef	EF dscp (101110)—decimal value 46



**Note** For more information about DSCP, see RFC 2475.

## SUMMARY STEPS

1. **configure terminal**
2. **policy-map** [**type qos**] [**match-first**] *policy-map-name*
3. **class** [**type qos**] {*class-name* | **class-default**} [**insert-before** *before-class-name*]
4. **set dscp** *dscp-value*

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
<b>Step 2</b>	<b>policy-map [type qos] [match-first] policy-map-name</b> <b>Example:</b> switch(config)# policy-map policy1 switch(config-pmap-qos)#	Creates or accesses the policy map named <i>policy-map-name</i> and then enters policy-map mode. The policy-map name can contain alphabetic, hyphen, or underscore characters, is case sensitive, and can be up to 40 characters.
<b>Step 3</b>	<b>class [type qos] {class-name   class-default} [insert-before before-class-name]</b> <b>Example:</b> switch(config-pmap-qos)# class class1 switch(config-pmap-c-qos)#	Creates a reference to <i>class-name</i> and enters policy-map class configuration mode. The class is added to the end of the policy map unless <b>insert-before</b> is used to specify the class to insert before. Use the <b>class-default</b> keyword to select all traffic that is not currently matched by classes in the policy map.
<b>Step 4</b>	<b>set dscp dscp-value</b> <b>Example:</b> switch(config-pmap-c-qos)# set dscp af31	Sets the DSCP value to <i>dscp-value</i> . Standard values are shown in the previous Standard DSCP Values table.  When the QoS policy is applied on the VLAN configuration level, the DSCP value derives the CoS value for bridged and routed traffic from the 3 most significant DSCP bits.

**Example**

This example shows how to display the policy-map configuration:

```
switch# show policy-map policy1
```

## Configuring IP Precedence Marking

You can set the value of the IP precedence field in bits 0–2 of the IPv4 type of service (ToS) field of the IP header.



**Note** The device rewrites the last 3 bits of the ToS field to 0 for packets that match this class.

**Table 33: Precedence Values**

Value	List of Precedence Values
0-7	IP precedence value
critical	Critical precedence (5)

Value	List of Precedence Values
flash	Flash precedence (3)
flash-override	Flash override precedence (4)
immediate	Immediate precedence (2)
internet	Internetwork control precedence (6)
network	Network control precedence (7)
priority	Priority precedence (1)
routine	Routine precedence (0)

## SUMMARY STEPS

1. **configure terminal**
2. **policy-map** [**type qos**] [**match-first**] *policy-map-name*
3. **class** [**type qos**] [*class-name* | **class-default**] [**insert-before** *before-class-name*]
4. **set precedence** *precedence-value*

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>policy-map</b> [ <b>type qos</b> ] [ <b>match-first</b> ] <i>policy-map-name</i>  <b>Example:</b> <pre>switch(config)# policy-map policy1 switch(config-pmap-qos)#</pre>	Creates or accesses the policy map named <i>policy-map-name</i> and then enters policy-map mode. The policy-map name can contain alphabetic, hyphen, or underscore characters, is case sensitive, and can be up to 40 characters.
<b>Step 3</b>	<b>class</b> [ <b>type qos</b> ] [ <i>class-name</i>   <b>class-default</b> ] [ <b>insert-before</b> <i>before-class-name</i> ]  <b>Example:</b> <pre>switch(config-pmap-qos)# class class1 switch(config-pmap-c-qos)#</pre>	Creates a reference to <i>class-name</i> and enters policy-map class configuration mode. The class is added to the end of the policy map unless <b>insert-before</b> is used to specify the class to insert before.
<b>Step 4</b>	<b>set precedence</b> <i>precedence-value</i>  <b>Example:</b> <pre>switch(config-pmap-c-qos)# set precedence 3</pre>	Sets the IP precedence value to <i>precedence-value</i> . The value can range from 0 to 7. You can enter one of the values shown in the above Precedence Values table.

### Example

This example shows how to display the policy-map configuration:

```
switch# show policy-map policy1
```

## Configuring CoS Marking

You can set the value of the CoS field in the high-order three bits of the VLAN ID Tag field in the IEEE 802.1Q header.

### SUMMARY STEPS

1. **configure terminal**
2. **policy-map [type qos] [match-first] [qos-policy-map-name | qos-dynamic]**
3. **class [type qos] {class-map-name | class-default} [insert-before before-class-name]**
4. **set cos cos-value**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
<b>Step 2</b>	<b>policy-map [type qos] [match-first] [qos-policy-map-name   qos-dynamic]</b>  <b>Example:</b> switch(config)# policy-map policy1 switch(config-pmap-qos)#	Creates or accesses the policy map named <i>qos-policy-map-name</i> , and then enters policy-map mode. The policy-map name can contain alphabetic, hyphen, or underscore characters, is case sensitive, and can be up to 40 characters.
<b>Step 3</b>	<b>class [type qos] {class-map-name   class-default} [insert-before before-class-name]</b>  <b>Example:</b> switch(config-pmap-qos)# class class1 switch(config-pmap-c-qos)#	Creates a reference to <i>class-map-name</i> , and enters policy-map class configuration mode. The class is added to the end of the policy map unless <b>insert-before</b> is used to specify the class to insert before. Use the <b>class-default</b> keyword to select all traffic that is not currently matched by classes in the policy map.
<b>Step 4</b>	<b>set cos cos-value</b>  <b>Example:</b> switch(config-pmap-c-qos)# set cos 3 switch(config-pmap-c-qos)#	Sets the CoS value to <i>cos-value</i> . The value can range from 0 to 7.

### Example

This example shows how to display the policy-map configuration:

```
switch# show policy-map policy1
```



# Configuring CoS Marking for FEX



**Note** The CoS Marking for FEX feature is not supported on the Cisco Nexus 9508 switch (NX-OS 7.0(3)F3(3)).

You can mark traffic based on the class of service (CoS) for a FEX.

## Before you begin

Before configuring the FEX, enable **feature-set fex**.

## SUMMARY STEPS

1. **configure terminal**
2. **policy-map [type qos] [match-first] [qos-policy-map-name | qos-dynamic]**
3. **class [type qos] {class-map-name | class-default} [insert-before before-class-name]**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>policy-map [type qos] [match-first] [qos-policy-map-name   qos-dynamic]</b> <b>Example:</b> <pre>switch(config)# policy-map policy1 switch(config-pmap-qos)#</pre>	Creates or accesses the policy map named <i>qos-policy-map-name</i> , and then enters policy-map mode. The policy-map name can contain alphabetic, hyphen, or underscore characters, is case sensitive, and can be up to 40 characters.
<b>Step 3</b>	<b>class [type qos] {class-map-name   class-default} [insert-before before-class-name]</b> <b>Example:</b> <pre>switch(config-pmap-qos)# class class1 switch(config-pmap-c-qos)#</pre>	Creates a reference to <i>class-map-name</i> , and enters policy-map class configuration mode. The class is added to the end of the policy map unless <b>insert-before</b> is used to specify the class to insert before. Use the <b>class-default</b> keyword to select all traffic that is not currently matched by classes in the policy map.

## Example

This example shows how to configure the CoS class-map configuration:

```
switch# conf t
switch(config)# policy-map type qos setpol
switch(config-pmap-qos)# class cos6
switch(config-pmap-c-qos)# set qos-group 3
switch(config-pmap-qos)# class cos3
switch(config-pmap-c-qos)# set qos-group 2
switch(config-pmap-qos)# class cos1
```

```
switch(config-pmap-c-qos)# set qos-group 1
switch(config-pmap-qos)# class class-default
```

## Configuring DSCP Port Marking

You can set the DSCP value for each class of traffic defined in a specified ingress policy map.

The default behavior of the device is to preserve the DSCP value or to trust DSCP. To make the port untrusted, change the DSCP value. Unless you configure a QoS policy and attach that policy to specified interfaces, the DSCP value is preserved.



### Note

- You can attach only one policy type qos map to each interface in each direction.
- The DSCP value is trust on the Layer 3 port of a Cisco NX-OS device.

### SUMMARY STEPS

1. **configure terminal**
2. **policy-map** [**type qos**] [**match-first**] [*policy-map-name*]
3. **class** [**type qos**] {*class-name* | **class-default**} [**insert-before** *before-class-name*]
4. **set** *dscp-value*
5. **exit**
6. **class** [**type qos**] {*class-name* | **class-default**} [**insert-before** *before-class-name*]
7. **set** *dscp-value*
8. **exit**
9. **class** [**type qos**] {*class-name* | **class-default**} [**insert-before** *before-class-name*]
10. **set** *dscp-value*
11. **exit**
12. **interface ethernet** *slot/port*
13. **service-policy** [**type qos**] {**input** | **output**} {*policy-map-name*} [**no-stats**]

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>policy-map</b> [ <b>type qos</b> ] [ <b>match-first</b> ] [ <i>policy-map-name</i> ]  <b>Example:</b> <pre>switch(config)# policy-map policy1 switch(config-pmap-qos)#</pre>	Creates or accesses the policy map named <i>policy-map-name</i> and then enters policy-map mode. The policy-map name can contain alphabetic, hyphen, or underscore characters, is case sensitive, and can be up to 40 characters.

	Command or Action	Purpose
Step 3	<b>class</b> [ <b>type qos</b> ] { <i>class-name</i>   <b>class-default</b> } [ <b>insert-before</b> <i>before-class-name</i> ]  <b>Example:</b> <pre>switch(config-pmap-qos)# class class1 switch(config-pmap-c-qos)#</pre>	Creates a reference to <i>class-name</i> and enters policy-map class configuration mode. The class is added to the end of the policy map unless <b>insert-before</b> is used to specify the class to insert before. Use the <b>class-default</b> keyword to select all traffic that is not currently matched by classes in the policy map.
Step 4	<b>set dscp-value</b>  <b>Example:</b> <pre>switch(config-pmap-c-qos)# set dscp af31</pre>	Sets the DSCP value to <i>dscp-value</i> . Valid values are listed in the Standard DSCP Values table in the Configuring DSCP Marking section.
Step 5	<b>exit</b>  <b>Example:</b> <pre>switch(config-pmap-c-qos)# exit switch(config-pmap-qos)#</pre>	Returns to policy-map configuration mode.
Step 6	<b>class</b> [ <b>type qos</b> ] { <i>class-name</i>   <b>class-default</b> } [ <b>insert-before</b> <i>before-class-name</i> ]  <b>Example:</b> <pre>switch(config-pmap-qos)# class class2 switch(config-pmap-c-qos)#</pre>	Creates a reference to <i>class-name</i> and enters policy-map class configuration mode. The class is added to the end of the policy map unless <b>insert-before</b> is used to specify the class to insert before. Use the <b>class-default</b> keyword to select all traffic that is not currently matched by classes in the policy map.
Step 7	<b>set dscp-value</b>  <b>Example:</b> <pre>switch(config-pmap-c-qos)# set dscp af1</pre>	Sets the DSCP value to <i>dscp-value</i> . Valid values are listed in the Standard DSCP Values table in the Configuring DSCP Marking section.
Step 8	<b>exit</b>  <b>Example:</b> <pre>switch(config-pmap-c-qos)# exit switch(config-pmap-qos)#</pre>	Returns to policy-map configuration mode.
Step 9	<b>class</b> [ <b>type qos</b> ] { <i>class-name</i>   <b>class-default</b> } [ <b>insert-before</b> <i>before-class-name</i> ]  <b>Example:</b> <pre>switch(config-pmap-qos)# class class-default switch(config-pmap-c-qos)#</pre>	Creates a reference to <i>class-name</i> and enters policy-map class configuration mode. The class is added to the end of the policy map unless <b>insert-before</b> is used to specify the class to insert before. Use the <b>class-default</b> keyword to select all traffic that is not currently matched by classes in the policy map.
Step 10	<b>set dscp-value</b>  <b>Example:</b> <pre>switch(config-pmap-c-qos)# set dscp af22 switch(config-pmap-c-qos)#</pre>	Sets the DSCP value to <i>dscp-value</i> . Valid values are listed in the Standard DSCP Values table in the Configuring DSCP Marking section.
Step 11	<b>exit</b>  <b>Example:</b> <pre>switch(config-pmap-c-qos)# exit switch(config-pmap-qos)#</pre>	Returns to policy-map configuration mode.

	Command or Action	Purpose
<b>Step 12</b>	<b>interface ethernet slot/port</b> <b>Example:</b> <pre>switch(config)# interface ethernet 1/1 switch(config-if)#</pre>	Enters interface mode to configure the Ethernet interface.
<b>Step 13</b>	<b>service-policy [type qos] {input   output}</b> <b>{policy-map-name} [no-stats]</b> <b>Example:</b> <pre>switch(config-if)# service-policy input policy1</pre>	Adds <i>policy-map-name</i> to the input packets of the interface. You can attach only one input policy and one output policy to an interface.

**Example**

This example shows how to display the policy-map configuration:

```
switch# show policy-map policy1
```

## Verifying the Marking Configuration

To display the marking configuration information, perform one of the following tasks:

Command	Purpose
<b>show policy-map</b>	Displays all policy maps.

## Configuration Examples for Marking

The following example shows how to configure marking:

```
configure terminal
policy-map type qos untrust_dcsp
class class-default
set precedence 3
set qos-group 3
set dscp 0
```



## CHAPTER 7

# Configuring Policing

---

- [About Policing, on page 87](#)
- [Shared Policers, on page 87](#)
- [Prerequisites for Policing, on page 88](#)
- [Guidelines and Limitations for Policing, on page 88](#)
- [Configuring Policing, on page 91](#)
- [Configuring Shared Policers, on page 101](#)
- [Verifying the Policing Configuration, on page 103](#)
- [Configuration Examples for Policing, on page 103](#)

## About Policing

Policing is the monitoring of the data rates for a particular class of traffic. When the data rate exceeds user-configured values, marking or dropping of packets occurs immediately. Policing does not buffer the traffic; therefore, the transmission delay is not affected. When traffic exceeds the data rate, you instruct the system to either drop the packets or mark QoS fields in them.

You can define single-rate and dual-rate policers.

Single-rate policers monitor the committed information rate (CIR) of traffic. Dual-rate policers monitor both CIR and peak information rate (PIR) of traffic. In addition, the system monitors associated burst sizes. Three colors, or conditions, are determined by the policer for each packet depending on the data rate parameters supplied: conform (green), exceed (yellow), or violate (red).

You can configure only one action for each condition. For example, you might police for traffic in a class to conform to the data rate of 256000 bits per second, with up to 200 millisecond bursts. The system would apply the conform action to traffic that falls within this rate, and it would apply the violate action to traffic that exceeds this rate.

For more information about policers, see RFC 2697 and RFC 2698.

## Shared Policers



---

**Note** The shared policer feature is only supported on the Cisco Nexus 9508 switch (NX-OS 7.0(3)F3(3) and later 7.0(3)F3(x) releases).

---

QoS applies the bandwidth limits specified in a shared policer cumulatively to all flows in the matched traffic. A shared policer applies the same policer to more than one interface simultaneously.

For example, if you configure a shared policer to allow 1 Mbps for all Trivial File Transfer Protocol (TFTP) traffic flows on VLAN 1 and VLAN 3, the device limits the TFTP traffic for all flows combined on VLAN 1 and VLAN 3 to 1 Mbps.

The following are guidelines for configuring shared policers:

- You create named shared policers by entering the `qos shared-policer` command. If you create a shared policer and create a policy using that shared policer and attach the policy to multiple ingress ports, the device polices the matched traffic from all the ingress ports to which it is attached.
- You define shared policers in a policy map class within the `police` command. If you attach a named shared policer to multiple ingress ports, the device polices the matched traffic from all the ingress ports to which it is attached.
- Shared policing works independently on each module.
- When the shared policer is applied on interfaces or a VLAN with member ports that are across different cores or instances, the rate becomes two times the configured CIR rate.
- Use the `show qos shared-policer [type qos] [policer-name]` command to display information about shared policers.

## Prerequisites for Policing

Policing has the following prerequisites:

- You must be familiar with using modular QoS CLI.
- You are logged on to the device.

## Guidelines and Limitations for Policing



---

**Note** For scale information, see the release-specific *Cisco Nexus 9000 Series NX-OS Verified Scalability Guide*.

---

### Common

The following are guidelines and limitations common to all policers:

- PVLANS do not provide support for PVLAN QoS.
- `show` commands with the `internal` keyword are not supported.
- Each module applies policing independently, which can affect QoS features that are applied to traffic that is distributed across multiple modules. The following are examples of these QoS features:
  - Policers that are applied to a port channel interface.
  - Policers that are applied to a VLAN.

- Policing only supports violated and nonviolated statistics when using either double width or single width TCAM with e-qos-lite.
- Using the optional keyword, no-stats disables statistics and ensures that applicable policies are shared.
- You can only use the **set qos-group** command in ingress policies.
- Beginning with Cisco NX-OS Release 10.1(2), Policing is supported on the N9K-X9624D-R2 and N9K-C9508-FM-R2 platform switches. For R2, markdown action in policing is not supported.
- Beginning with Cisco NX-OS Release 10.3(1)F, the following policer limitation applies on Cisco Nexus GX/GX2 platform switches:
  - For 25.6T ASIC, the policer limit is 282G.
  - For 12.2T ASIC, the policer limit is 300G.

### Ingress Policing

The following are guidelines and limitations for ingress policing:

- All policers in the ingress direction must use the same mode.
- QoS Ingress policers can be enabled on subinterfaces.

### Egress Policing

The following are guidelines and limitations for egress policing:

- Egress QoS policing is not supported on Cisco Nexus 9500 platform switches with the following line cards:
  - Cisco Nexus 9636C-R
  - Cisco Nexus 9636Q-R
  - Cisco Nexus 9636C-RX
  - Cisco Nexus 96136YC-R
- The egress RACL feature is not supported on the Cisco Nexus 9508 switch.
- Egress QoS policy statistics for CPU generated traffic are not supported on the following:
  - Cisco Nexus 9200, 9300-EX, and 9300-FX platform switches
  - Cisco Nexus 9500 platform switches with the following line cards:
    - Cisco Nexus 9732C-EX
    - Cisco Nexus 9736C-EX
    - Cisco Nexus 97160YC-EX
    - Cisco Nexus 9736C-FX

- The total number of policers that can be successfully attached in the egress direction is only half the size of the qos-lite TCAM region.
- When egress RACL and egress QoS are applied together, you can only enable statistics for one or the other, not both.
- The egress policing feature does not support egress QoS policers on ALE uplink ports on top-of-rack (ToR) platforms.
- When using egress QoS, we recommend using the appropriate match criteria to match data traffic. Avoid match criteria such as **permit ip any any**.
- Remark action for violated packets in the egress direction is not supported on the following Cisco Nexus 9000 -EX platform switches and line cards:
  - Cisco Nexus 93180YC-EX
  - Cisco Nexus 93108TC-EX
  - Cisco Nexus 9736C-EX
  - Cisco Nexus 97160YC-EX
  - Cisco Nexus 9732C-EX

They only support the drop action for violate in the egress direction.

- VLAN Egress QoS and Egress QoS on Layer 2 Port Channel (L2PO) are not supported on the following Cisco Nexus 9000 EX-based line cards:
  - Cisco Nexus 97160YC-EX
  - Cisco Nexus 9732C-EX
  - Cisco Nexus 9736C-EX
- Egress QoS policies are not supported on subinterfaces.
- Egress QoS policies are not supported on Cisco Nexus 9200 platform switches.

### 1-Rate 2-Color and 2-Rate 3-Color Policing

The following are guidelines and limitations for 1-rate 2-color (1R2C) and 2-rate 3-color (2R3C) policing:

- A 2-rate 3-color policer is not supported on Cisco Nexus 9200 platform switches.
- Only 1R2C policing in the egress direction is supported on the following Cisco Nexus 9000 -EX and -FX platform switches and line cards:
  - Cisco Nexus 93180YC-EX
  - Cisco Nexus 93108TC-EX
  - Cisco Nexus 9736C-EX
  - Cisco Nexus 97160YC-EX
  - Cisco Nexus 9732C-EX
  - Cisco Nexus 93108TC-FX



- Cisco Nexus 9348GC-FXP
- Cisco Nexus 9736C-FX
- Cisco Nexus 9200 platform switches only support 1R2C policing in the ingress direction.
- A 2-rate 3-color policer is not supported at egress on Cisco Nexus 9300-FX/FX2/FX3/GX/GX2 platform switches. and Cisco Nexus 9700-EX/FX/GX line cards.

### Shared Policers

The following are guidelines and limitations for shared policers:

- When the shared policer is applied to interfaces or VLANs, with member ports that are across different cores or instances, the rate becomes two times the configured CIR rate.

### UDE Policers

The following are guidelines and limitations for UDE policers:

- UDE template should be enabled only on L2 interfaces and port should be in mode tap-aggregation.
- Policy-map **default-ndb-out-policy** is not supported under system QoS.
- To support this feature, you need to curve the egr-l2-qos TCAM region.
- On reboot, switch takes some time to apply the **default-ndb-out-policy** to the configured interface. Due to this, few packets may get leaked. Subsequently, all egress control/flood traffic will be dropped.
- Even if there is no data traffic, there is control traffic like cdp, lldp, arp, bpdu and so on from CPU. These will hit acl entry and get dropped, incrementing violated count. This is expected behavior when **default-ndb-out-policy** is configured.

## Configuring Policing

You can configure a single or dual-rate policer.

### Configuring Ingress Policing

You can apply the policing instructions in a QoS policy map to ingress packets by attaching that QoS policy map to an interface. To select ingress, you specify the **input** keyword in the **service-policy** command. For more information on attaching and detaching a QoS policy action from an interface, see the "Using Modular QoS CLI" section.

### Configuring Egress Policing



---

**Note** The egress policing feature is not supported on the Cisco Nexus 9508 switch (Cisco NX-OS Release 7.0(3)F3(3)).

---

The egress policing feature is supported on Cisco Nexus 9300-FX/FX2/FX3/GX/GX2 platform switches and Cisco Nexus 9700-EX/FX/GX line cards.



**Note** Egress QoS policing is not supported on Cisco Nexus 9500 platform switches with the following line cards:

- Cisco Nexus 9636C-R
- Cisco Nexus 9636Q-R
- Cisco Nexus 9636C-RX
- Cisco Nexus 96136YC-R

You can apply the policing instructions in a QoS policy map to ingress or egress packets by attaching that QoS policy map to an interface. To select ingress or egress, you specify the **input** keyword or the **output** keyword in the **service-policy** command.

**Configuring UDE policy:** Beginning with Cisco NX-OS Release 10.3(3)F, you can configure default UDE policy template to block the egress traffic from NDB layer to production layer.

**Before you begin**

- You must carve TCAM region for egress QoS before configuring policing.
- For more information about attaching and detaching a QoS policy action from an interface, see the "Using Modular QoS CLI" section.

**SUMMARY STEPS**

1. **configure terminal**
2. **policy-map [type qos] [match-first] [policy-map-name]**
3. **class [type qos] {class-map-name | class-default} [insert-before before-class-name]**
4. **police [cir] {committed-rate [data-rate] | percent cir-link-percent} [bc committed-burst-rate] [conform {transmit | set-prec-transmit | set-dscp-transmit | set-cos-transmit | set-qos-transmit} [exceed {drop}][violate {drop | set-cos-transmit | set-dscp-transmit | set-prec-transmit | set-qos-transmit}]]]**
5. **exit**
6. **exit**
7. **show policy-map [type qos] [policy-map-name | qos-dynamic]**
8. **copy running-config startup-config**

**DETAILED STEPS**

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.

	Command or Action	Purpose
Step 2	<p><b>policy-map</b> [type qos] [match-first] [policy-map-name]</p> <p><b>Example:</b></p> <pre>switch(config)# policy-map policy1 switch(config-pmap-qos)#</pre>	Creates or accesses the policy map named <i>policy-map-name</i> and then enters policy-map mode. The policy-map name can contain alphabetic, hyphen, or underscore characters, is case sensitive, and can be up to 40 characters.
Step 3	<p><b>class</b> [type qos] {class-map-name   class-default} [insert-before before-class-name]</p> <p><b>Example:</b></p> <pre>switch(config-pmap-qos)# class class-default switch(config-pmap-c-qos)#</pre>	Creates a reference to <i>class-map-name</i> and enters policy-map class configuration mode. The class is added to the end of the policy map unless <b>insert-before</b> is used to specify the class to insert before. Use the <b>class-default</b> keyword to select all traffic that is not currently matched by classes in the policy map.
Step 4	<p><b>police</b> [cir] {committed-rate [data-rate]   percent cir-link-percent} [bc committed-burst-rate ] [conform {transmit   set-prec-transmit   set-dscp-transmit   set-cos-transmit   set-qos-transmit} [ exceed { drop } ] [violate {drop   set-cos-transmit   set-dscp-transmit   set-prec-transmit   set-qos-transmit } ] ] }</p> <p><b>Example:</b></p> <pre>switch(config-pmap-qos)# policy-map type qos egressqos switch(config-pmap-qos)# class class-default switch(config-pmap-c-qos)# police [ cir] {committed-rate [data-rate]   percent cir-link-percent} [ bc committed-burst-rate][ conform { transmit   set-prec-transmit   set-dscp-transmit   set-cos-transmit   set-qos-transmit} ] [ violate { drop}]] switch(config-pmap-c-qos)# exit switch(config-pmap-qos)# exit switch(config)#</pre>	<p>Polices <b>cir</b> in bits or as a percentage of the link rate. The <b>conform</b> action is taken if the data rate is &lt;= cir. The actions are described in the Policer Actions for Exceed or Violate table and the Policer Actions for Conform table. The data rates and link speeds are described in the Data Rates for the police Command table and the Burst Sizes for the police Command table. See <a href="#">Configuring 1-Rate and 2-Rate, 2-Color and 3-Color Policing</a> for more information.</p> <p>The following information describes the <b>drop</b> option for <b>violate</b>:</p> <ul style="list-style-type: none"> <li>• set-cos-transmit—Set dscp and send it.</li> <li>• set-prec-transmit—Set precedence and send it.</li> <li>• set-qos-transmit—Set qos-group and send it.</li> </ul> <p><b>Note</b> For <b>cir</b> pps, the packet size is 64 bytes. So the pps to bps conversion is 64*8.</p>
Step 5	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>switch(config-pmap-c-qos)# exit switch(config-pmap-qos)#</pre>	Exits policy-map class configuration mode and enters policy-map mode.
Step 6	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>switch(config-pmap-qos)# exit switch(config)#</pre>	Exits policy-map mode and enters global configuration mode.
Step 7	<p><b>show policy-map</b> [type qos] [policy-map-name   qos-dynamic]</p> <p><b>Example:</b></p> <pre>switch(config)# show policy-map type qos egressqos</pre> <p><b>Example:</b></p>	(Optional) Displays information about the configured policy map of type qos.

	Command or Action	Purpose
	<pre>switch(config)# policy-map type qos egressqos class class-default police cir 10 mbs bc 200 ms conform transmit violate drop</pre>	
<b>Step 8</b>	<p><b>copy running-config startup-config</b></p> <p><b>Example:</b></p> <pre>switch(config)# copy running-config startup-config</pre>	(Optional) Saves the running configuration to the startup configuration.

## Configuring 1-Rate and 2-Rate, 2-Color and 3-Color Policing

The type of policer created by the device is based on a combination of the **police** command arguments described in the following Arguments to the police Command table.



**Note** You must specify the identical value for **pir** and **cir** to configure 1-rate 3-color policing.



**Note** A 1-rate 2-color policer with the violate markdown action is not supported.



**Note** Cisco Nexus 9200 Series switches only support 1-rate 2-color policing.

**Table 34: Arguments to the police Command**

Argument	Description
<b>cir</b>	Committed information rate, or desired bandwidth, specified as a bit rate or a percentage of the link rate. Although a value for cir is required, the argument itself is optional. The range of values is from 1 to 80000000000. The range of policing values is from 8000 to 80 Gbps.
<b>percent</b>	Rate as a percentage of the interface rate. The range of values is from 1 to 100 percent.
<b>bc</b>	Indication of how much the cir can be exceeded, either as a bit rate or an amount of time at cir. The default is 200 milliseconds of traffic at the configured rate. The default data rate units are bytes.
<b>pir</b>	Peak information rate, specified as a PIR bit rate or a percentage of the link rate. There is no default. The range of values is from 1 to 80000000000; the range of policing values is from 8000 bps to 480 Gbps. The range of percentage values is from 1 to 100 percent.

Argument	Description
<b>be</b>	Indication of how much the pir can be exceeded, either as a bit rate or an amount of time at pir. When the bc value is not specified, the default is 200 milliseconds of traffic at the configured rate. The default data rate units are bytes.  <b>Note</b> You must specify a value for pir before the device displays this argument.
<b>conform</b>	Single action to take if the traffic data rate is within bounds. The basic actions are transmit or one of the set commands listed in the following Policer Actions for Conform table. The default is transmit.
<b>exceed</b>	Single action to take if the traffic data rate is exceeded. The basic actions are drop or markdown. The default is drop.
<b>violate</b>	Single action to take if the traffic data rate violates the configured rate values. The basic actions are drop or markdown. The default is drop.

Although all the arguments in the above Arguments to the police Command table are optional, you must specify a value for **cir**. In this section, **cir** indicates its value but not necessarily the keyword itself. The combination of these arguments and the resulting policer types and actions are shown in the following Policer Types and Actions from Police Arguments Present table.

**Table 35: Policer Types and Actions from Police Arguments Present**

Police Arguments Present	Policer Type	Policer Action
<b>cir</b> , but not <b>pir</b> , <b>be</b> , or <b>violate</b>	1-rate, 2-color	<= <b>cir</b> , <b>conform</b> ; else <b>violate</b>
<b>cir</b> and <b>pir</b>	2-rate, 3-color	<= <b>cir</b> , conform; <= <b>pir</b> , exceed; else <b>violate</b>

The policer actions that you can specify are described in the following Policer Actions for Exceed or Violate table and the following Policer Actions for Conform table.



**Note** Only **drop** and **transmit** actions are supported on the Cisco Nexus 9508 switch (NX-OS 7.0(3)F3(3) and later).

**Table 36: Policer Actions for Exceed or Violate**

Action	Description
<b>drop</b>	Drops the packet. This action is available only when the packet exceeds or violates the parameters.
<b>set-cos-transmit</b>	Sets CoS and transmits the packet.
<b>set-dscp-transmit</b>	Sets DSCP and transmits the packet.
<b>set-prec-transmit</b>	Sets precedence and transmits the packet.
<b>set-qos-transmit</b>	Sets qos-group and transmits the packet.

Table 37: Policer Actions for Conform

Action	Description
<b>transmit</b>	Transmits the packet. This action is available only when the packet conforms to the parameters.
<b>set-prec-transmit</b>	Sets the IP precedence field to a specified value and transmits the packet. This action is available only when the packet conforms to the parameters.
<b>set-dscp-transmit</b>	Sets the differentiated service code point (DSCP) field to a specified value and transmits the packet. This action is available only when the packet conforms to the parameters.
<b>set-cos-transmit</b>	Sets the class of service (CoS) field to a specified value and transmits the packet. This action is available only when the packet conforms to the parameters.
<b>set-qos-transmit</b>	Sets the QoS group internal label to a specified value and transmits the packet. This action can be used only in input policies and is available only when the packet conforms to the parameters.



**Note** The policer can only drop or mark down packets that exceed or violate the specified parameters. For information on marking down packets, see the [Configuring Marking, on page 78](#) section.

The data rates used in the **police** command are described in the following Data Rates for the police Command table.

Table 38: Data Rates for the police Command

Rate	Description
bps	Bits per second (default)
kbps	1,000 bits per seconds
mbps	1,000,000 bits per second
gbps	1,000,000,000 bits per second

Burst sizes used in the **police** command are described in the following Burst Sizes for the police Command table.

Table 39: Burst Sizes for the police Command

Speed	Description
bytes	bytes
kbytes	1,000 bytes
mbytes	1,000,000 bytes

Speed	Description
ms	milliseconds
us	microseconds

## SUMMARY STEPS

1. **configure terminal**
2. **policy-map [type qos] [match-first] [policy-map-name]**
3. **class [type qos] {class-map-name | class-default} [insert-before before-class-name]**
4. **police [cir] {committed-rate [data-rate] | percent cir-link-percent} [bc committed-burst-rate [link-speed]][pir] {peak-rate [data-rate] | percent cir-link-percent} [be peak-burst-rate [link-speed]] [conform {transmit | set-prec-transmit | set-dscp-transmit | set-cos-transmit | set-qos-transmit} [exceed {drop} | violate {drop | set-cos-transmit | set-dscp-transmit | set-prec-transmit | set-qos-transmit}]}**
5. [violate {drop | set-cos-transmit | set-dscp-transmit | set-prec-transmit | set-qos-transmit}]
6. **exit**
7. **exit**
8. **show policy-map [type qos] [policy-map-name | qos-dynamic]**
9. **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
<b>Step 2</b>	<b>policy-map [type qos] [match-first] [policy-map-name]</b>  <b>Example:</b> switch(config)# policy-map policy1 switch(config-pmap-qos)#	Creates or accesses the policy map named <i>policy-map-name</i> and then enters policy-map mode. The policy-map name can contain alphabetic, hyphen, or underscore characters, is case sensitive, and can be up to 40 characters.
<b>Step 3</b>	<b>class [type qos] {class-map-name   class-default} [insert-before before-class-name]</b>  <b>Example:</b> switch(config-pmap-qos)# class class-default switch(config-pmap-c-qos)#	Creates a reference to <i>class-map-name</i> and enters policy-map class configuration mode. The class is added to the end of the policy map unless <b>insert-before</b> is used to specify the class to insert before. Use the <b>class-default</b> keyword to select all traffic that is not currently matched by classes in the policy map.
<b>Step 4</b>	<b>police [cir] {committed-rate [data-rate]   percent cir-link-percent} [bc committed-burst-rate [link-speed]][pir] {peak-rate [data-rate]   percent cir-link-percent} [be peak-burst-rate [link-speed]] [conform {transmit   set-prec-transmit   set-dscp-transmit   set-cos-transmit   set-qos-transmit} [exceed {drop}   violate {drop}  </b>	Polices <b>cir</b> in bits or as a percentage of the link rate. The <b>conform</b> action is taken if the data rate is <= cir. If <b>be</b> and <b>pir</b> are not specified, all other traffic takes the <b>violate</b> action. If <b>be</b> or <b>violate</b> are specified, the <b>exceed</b> action is taken if the data rate <= <b>pir</b> , and the <b>violate</b> action is taken otherwise. The actions are described in the Policer Actions

	Command or Action	Purpose
	<code>set-cos-transmit   set-dscp-transmit   set-prec-transmit   set-qos-transmit}}]</code>	for Exceed or Violate table and the Policer Actions for Conform table. The data rates and link speeds are described in the Data Rates for the police Command table and the Burst Sizes for the police Command table.
<b>Step 5</b>	<code>[ violate {drop   set-cos-transmit   set-dscp-transmit   set-prec-transmit   set-qos-transmit}]</code>	<b>set-cos-transmit</b> —Set cos and send it. <b>set-dscp-transmit</b> —Set dscp and send it. <b>set-prec-transmit</b> —Set precedence and send it. <b>set-qos-transmit</b> —Set qos-group and send it.
<b>Step 6</b>	<b>exit</b> <b>Example:</b> <pre>switch(config-pmap-c-qos) # exit switch(config-pmap-qos) #</pre>	Exits policy-map class configuration mode and enters policy-map mode.
<b>Step 7</b>	<b>exit</b> <b>Example:</b> <pre>switch(config-pmap-qos) # exit switch(config) #</pre>	Exits policy-map mode and enters global configuration mode.
<b>Step 8</b>	<b>show policy-map [type qos] [policy-map-name   qos-dynamic]</b> <b>Example:</b> <pre>switch(config) # show policy-map</pre>	(Optional) Displays information about all configured policy maps or a selected policy map of type qos.
<b>Step 9</b>	<b>copy running-config startup-config</b> <b>Example:</b> <pre>switch(config) # copy running-config startup-config</pre>	(Optional) Saves the running configuration to the startup configuration.

### Example

This example shows how to display the policy1 policy-map configuration:

```
switch# show policy-map policy1
```

## Configuring Markdown Policing

Markdown policing is the setting of a QoS field in a packet when traffic exceeds or violates the policed data rates. You can configure markdown policing by using the set commands for policing action described in the Policer Actions for Exceed or Violate table and the Policer Actions for Conform table.



**Note** You must specify the identical value for **pir** and **cir** to configure 1-rate 3-color policing.



## SUMMARY STEPS

1. **configure terminal**
2. **policy-map** [**type qos**] [**match-first**] [*policy-map-name*]
3. **class** [**type qos**] {*class-name* | **class-default**} [**insert-before** *before-class-name*]
4. **police** [**cir**] {*committed-rate* [*data-rate*] | **percent** *cir-link-percent*} [[**bc** | **burst**] *burst-rate* [*link-speed*]] [[**be** | **peak-burst**] *peak-burst-rate* [*link-speed*]] [**conform** *conform-action* [**exceed** [**violate drop set dscp** *dscp table* *pir-markdown-map*]]}]
5. **exit**
6. **exit**
7. **show policy-map** [**type qos**] [*policy-map-name*]
8. **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
Step 2	<b>policy-map</b> [ <b>type qos</b> ] [ <b>match-first</b> ] [ <i>policy-map-name</i> ] <b>Example:</b> <pre>switch(config)# policy-map policy1 switch(config-pmap-qos)#</pre>	Creates or accesses the policy map named <i>policy-map-name</i> and then enters policy-map mode. The policy-map name can contain alphabetic, hyphen, or underscore characters, is case sensitive, and can be up to 40 characters.
Step 3	<b>class</b> [ <b>type qos</b> ] { <i>class-name</i>   <b>class-default</b> } [ <b>insert-before</b> <i>before-class-name</i> ] <b>Example:</b> <pre>switch(config-pmap-qos)# class class-default switch(config-pmap-c-qos)#</pre>	Creates a reference to <i>class-name</i> and enters policy-map class configuration mode. The class is added to the end of the policy map unless <b>insert-before</b> is used to specify the class to insert before. Use the <b>class-default</b> keyword to select all traffic that is not currently matched by classes in the policy map.
Step 4	<b>police</b> [ <b>cir</b> ] { <i>committed-rate</i> [ <i>data-rate</i> ]   <b>percent</b> <i>cir-link-percent</i> } [[ <b>bc</b>   <b>burst</b> ] <i>burst-rate</i> [ <i>link-speed</i> ]] [[ <b>be</b>   <b>peak-burst</b> ] <i>peak-burst-rate</i> [ <i>link-speed</i> ]] [ <b>conform</b> <i>conform-action</i> [ <b>exceed</b> [ <b>violate drop set dscp</b> <i>dscp table</i> <i>pir-markdown-map</i> ]]}]	Polices <b>cir</b> in bits or as a percentage of the link rate. The <b>conform</b> action is taken if the data rate is <= cir. If <b>be</b> and <b>pir</b> are not specified, all other traffic takes the <b>violate</b> action. If <b>be</b> or <b>violate</b> are specified, the <b>exceed</b> action is taken if the data rate <= <b>pir</b> , and the <b>violate</b> action is taken otherwise. The actions are described in the Policer Actions for Exceed or Violate table and the Policer Actions for Conform table. The data rates and link speeds are described in the Data Rates for the police Command table and the Burst Sizes for the police Command table.
Step 5	<b>exit</b> <b>Example:</b> <pre>switch(config-pmap-c-qos)# exit switch(config-pmap-qos)#</pre>	Exits policy-map class configuration mode and enters policy-map mode.

	Command or Action	Purpose
<b>Step 6</b>	<b>exit</b> <b>Example:</b> switch(config-pmap-qos)# exit switch(config)#	Exits policy-map mode and enters global configuration mode.
<b>Step 7</b>	<b>show policy-map [type qos] [policy-map-name]</b> <b>Example:</b> switch(config)# show policy-map	(Optional) Displays information about all configured policy maps or a selected policy map of type qos.
<b>Step 8</b>	<b>copy running-config startup-config</b> <b>Example:</b> switch(config)# copy running-config startup-config	(Optional) Saves the running configuration to the startup configuration.

## Configuring UDE Policers

In certain cases, it's required to block all the control traffic egressing out of the interface to avoid network outage. Unidirectional Ethernet is a default QoS template used to block all the egress traffic on selected Ethernet ports.

### SUMMARY STEPS

1. hardware access-list tcam region egr-l2-qos 256 copy run start reload
2. interface type slot/port
3. interface Ethernet1/22 service-policy type qos output default-ndb-out-policy

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>hardware access-list tcam region egr-l2-qos 256 copy run start reload</b> <b>Example:</b> art does not have any config	TCAM carving.
<b>Step 2</b>	<b>interface type slot/port</b> <b>Example:</b> switch(config)# interface ethernet 2/5 switch(config-if)#	Enters interface mode on the interface specified.
<b>Step 3</b>	<b>interface Ethernet1/22 service-policy type qos output default-ndb-out-policy</b>	Block all the egress traffic on selected Ethernet ports.

### Example

Execute the following command to see default-ndb-out-policy output:

```
switch# show policy-map type qos default-ndb-out-policy
Type qos policy-maps
=====
policy-map type qos default-ndb-out-policy
class class-ndb-default
police cir 0 bps conform transmit violate drop
N9K#
```

Execute the following command to get the UDE policer stats:

```
switch# sh policy-map interface ethernet 1/6 output type qos
Global statistics status : enabled
Ethernet1/6
Service-policy (qos) output: default-ndb-out-policy
SNMP Policy Index: 285213501
Class-map (qos): class-ndb-default (match-any)
Slot 1
61211339 packets 15669992128 bytes
5 minute offered rate 17721223780 bps
Aggregate forwarded :
61211339 packets 110848 bytes
police cir 0 bps
conformed 0 bytes, n/a bps action: transmit
violated 15669881280 bytes, n/a bps action: drop
UDE-CF#
```

## Configuring Shared Policers

The shared policer feature allows you to apply the same policing parameters to several interfaces simultaneously. You create a shared policer by assigning a name to a policer, and then applying that policer to a policy map that you attach to the specified interfaces. The shared policer is also referred to as the named aggregate policer in other Cisco documentation.




---

**Note** The shared policer feature is only supported on the Cisco Nexus 9508 switch (NX-OS 7.0(3)F3(3) and later).

---




---

**Note** When the shared policer is applied on interfaces or VLANs with member ports that are across different cores or instances, the rate becomes two times the configured **cir** rate.

---

To configure a shared policer:

1. Create the class map.
2. Create a policy map.
3. Reference the shared policer to the policy map as described in this section.
4. Apply the service policy to the interfaces.



**Note** The rates specified in the shared policer are shared by the number of interfaces to which you apply the service policy. Each interface does not have its own dedicated rate as specified in the shared policer.

## SUMMARY STEPS

1. switch# **configure terminal**
2. switch(config)# **qos shared-policer** [**type qos**] *shared-policer-name* [**cir**] {*committed-rate* [*data-rate*] | **percent** *cir-link-percent*} [**bc** *committed-burst-rate* [*link-speed*]] [**pir**] {*peak-rate* [*data-rate*] | **percent** *cir-link-percent*} [**be** *peak-burst-rate* [*link-speed*]] {{**conform** *conform-action* [**exceed** {**drop** | **set dscp dscp table** *cir-markdown-map*}] [**violate** {**drop** | **set dscp dscp table** *pir-markdown-map*}}]}
3. switch(config)# **policy-map** [**type qos**] [**match-first**] {*qos-policy-map-name* | **qos-dynamic**}
4. switch(config-pmap-qos)# **class** [**type qos**] {*class-map-name* | **qos-dynamic** | **class-default**} [**insert-before** *before-class-map-name*]
5. switch(config-pmap-c-qos)# **police aggregate shared-policer-name**
6. switch(config-pmap-c-qos)# **exit**
7. switch(config-pmap-qos)# **exit**
8. (Optional) switch(config)# **show policy-map** [**type qos**] [*policy-map-name* | **qos-dynamic**]
9. (Optional) switch(config)# **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	switch# <b>configure terminal</b>	Enters global configuration mode.
<b>Step 2</b>	switch(config)# <b>qos shared-policer</b> [ <b>type qos</b> ] <i>shared-policer-name</i> [ <b>cir</b> ] { <i>committed-rate</i> [ <i>data-rate</i> ]   <b>percent</b> <i>cir-link-percent</i> } [ <b>bc</b> <i>committed-burst-rate</i> [ <i>link-speed</i> ]] [ <b>pir</b> ] { <i>peak-rate</i> [ <i>data-rate</i> ]   <b>percent</b> <i>cir-link-percent</i> } [ <b>be</b> <i>peak-burst-rate</i> [ <i>link-speed</i> ]] {{ <b>conform</b> <i>conform-action</i> [ <b>exceed</b> { <b>drop</b>   <b>set dscp dscp table</b> <i>cir-markdown-map</i> }] [ <b>violate</b> { <b>drop</b>   <b>set dscp dscp table</b> <i>pir-markdown-map</i> }}]}	<p>Creates or accesses the shared policer. The <i>shared-policer-name</i> can contain alphabetic, hyphen, or underscore characters, is case sensitive, and can be up to 40 characters. Polices <b>cir</b> in bits or as a percentage of the link rate. The <b>conform</b> action is taken if the data rate is ≤ <b>cir</b>. If <b>be</b> and <b>pir</b> are not specified, all other traffic takes the <b>violate</b> action. If <b>be</b> or <b>violate</b> are specified, the <b>exceed</b> action is taken if the data rate ≤ <b>pir</b>, and the <b>violate</b> action is taken otherwise.</p> <p><b>Note</b> A 64 byte packet size is used for the case of <b>cir</b> <b>pps</b>. This results in a 64*8 <b>pps</b> to <b>bps</b> conversion.</p> <p><b>Note</b> The <i>cir-markdown-map</i> and <i>pir-markdown-map</i> maps are not supported on the Cisco Nexus 9508 switch (NX-OS 7.0(3)F3(3)).</p>
<b>Step 3</b>	switch(config)# <b>policy-map</b> [ <b>type qos</b> ] [ <b>match-first</b> ] { <i>qos-policy-map-name</i>   <b>qos-dynamic</b> }	Creates or accesses the policy map named <i>qos-policy-map-name</i> , and then enters policy-map mode. The policy-map name can contain alphabetic, hyphen, or underscore characters, is case sensitive, and can be up to 40 characters.

	Command or Action	Purpose
Step 4	switch(config-pmap-qos)# <b>class</b> [ <b>type qos</b> ] { <i>class-map-name</i>   <b>qos-dynamic</b>   <b>class-default</b> } [ <b>insert-before</b> <i>before-class-map-name</i> ]	Creates a reference to <i>class-map-name</i> , and enters policy-map class configuration mode. The class is added to the end of the policy map unless <b>insert-before</b> is used to specify the class to insert before. Use the <b>class-default</b> keyword to select all traffic that is not currently matched by classes in the policy map.
Step 5	switch(config-pmap-c-qos)# <b>police aggregate</b> <b>shared-policer-name</b>	Creates a reference in the policy map to <i>shared-policer-name</i> .
Step 6	switch(config-pmap-c-qos)# <b>exit</b>	Exits policy-map class configuration mode and enters policy-map mode.
Step 7	switch(config-pmap-qos)# <b>exit</b>	Exits policy-map mode and enters global configuration mode.
Step 8	(Optional) switch(config)# <b>show policy-map</b> [ <b>type qos</b> ] [ <i>policy-map-name</i>   <b>qos-dynamic</b> ]	Displays information about all configured policy maps or a selected policy map of type qos.
Step 9	(Optional) switch(config)# <b>copy running-config</b> <b>startup-config</b>	Saves the running configuration to the startup configuration.

### Example

This example shows how to display the test1 shared-policer configurations:

```
switch# show qos shared-policer test1
```

## Verifying the Policing Configuration

To display the policing configuration information, perform one of the following tasks:

Command	Purpose
<b>show policy-map</b>	Displays information about policy maps and policing.

## Configuration Examples for Policing

The following example shows how to configure policing for a 1-rate, 2-color policer:

```
configure terminal
  policy-map policy1
    class one_rate_2_color_policer
      police cir 256000 conform transmit violate drop
```

The following example shows how to configure policing for a 1-rate, 2-color policer with DSCP markdown:

```
configure terminal
  policy-map policy2
```

```
class one_rate_2_color_policer_with_dscp
  police cir 256000 conform transmit violate drop
```

The following example shows how to configure policing for a shared policer:

```
configure terminal
  qos shared-policer type qos udp_10mbps cir 10 mbps pir 20 mbps conform transmit exceed
set dscp dscp table cir-markdown-map violate drop
policy-map type qos udp_policy
  class type qos udp_qos
    police aggregate udp_10mbps
```



## CHAPTER 8

# Configuring Queuing and Scheduling

- [About Queuing and Scheduling](#), on page 105
- [Modifying Class Maps](#), on page 105
- [Congestion Avoidance](#), on page 106
- [Congestion Management](#), on page 106
- [Explicit Congestion Notification](#), on page 106
- [Traffic Shaping](#), on page 109
- [Prerequisites for Queuing and Scheduling](#), on page 110
- [Guidelines and Limitations for Queuing and Scheduling](#), on page 110
- [Configuring Queuing and Scheduling](#), on page 115
- [Configuring Congestion Management](#), on page 124
- [Applying a Queuing Policy on a System](#), on page 135
- [Verifying the Queuing and Scheduling Configuration](#), on page 135
- [Controlling the QoS Shared Buffer](#), on page 136
- [Managing Dynamic Buffer Sharing](#), on page 136
- [Monitoring the QoS Packet Buffer](#), on page 137
- [Configuration Examples for Queuing and Scheduling](#), on page 138

## About Queuing and Scheduling

Traffic queuing is the ordering of packets and applies to both input and output of data. Device modules can support multiple queues, which you can use to control the sequencing of packets in different traffic classes. You can also set weighted random early detection (WRED) and taildrop thresholds. The device drops packets only when the configured thresholds are exceeded.

Traffic scheduling is the methodical output of packets at a desired frequency to accomplish a consistent flow of traffic. You can apply traffic scheduling to different traffic classes to weight the traffic by priority.

The queuing and scheduling processes allow you to control the bandwidth that is allocated to the traffic classes so that you achieve the desired trade-off between throughput and latency for your network.

## Modifying Class Maps

System-defined queuing class maps are provided.



---

**Note** The provided system-defined queuing class maps cannot be modified.

---

## Congestion Avoidance

You can use the following methods to proactively avoid traffic congestion on the device:

- Apply WRED to TCP or non-TCP traffic.
- Apply tail drop to TCP or non-TCP traffic.

## Congestion Management

For egress packets, you can choose one of the following congestion management methods:

- Specify a bandwidth that allocates a minimum data rate to a queue.
- Impose a minimum and maximum data rate on a class of traffic so that excess packets are retained in a queue to shape the output rate.
- Allocate all data for a class of traffic to a priority queue. The device distributes the remaining bandwidth among the other queues.

For information about configuring congestion management, see the [Configuring WRED on Egress Queues](#) section.

## Explicit Congestion Notification

ECN is an extension to WRED that marks packets instead of dropping them when the average queue length exceeds a specific threshold value. When configured with the WRED ECN feature, routers and end hosts use this marking as a signal that the network is congested to slow down sending packets.



---

**Note** The ECN feature is not supported on the Cisco Nexus 9508 switch (NX-OS 7.0(3)F3(3)).

---



---

**Note** Enabling WRED and ECN on a class on a network-qos policy implies that WRED and ECN is enabled for all ports in the system.

---



---

**Note** On extended output queues (EOQ), the approximate fair-drop (AFD) feature for bandwidth management is always enabled. The WRED configuration is ignored on EOQs. The configuration for EOQs is based on the system queuing policy and not on the per port policy.

---



# Approximate Fair Drop



**Note** Approximate Fair Drop is not supported on the Cisco Nexus 9508 switch (Cisco NX-OS Release NX-OS 7.0(3)F3(3)).

Approximate Fair Drop (AFD) is an Active Queue Management (AQM) algorithm that acts on long lived large flows (elephant flows) in the case of congestion, and does not impact short flows (mice flows).

When congestion occurs, the AFD algorithm maintains the queue occupancy at the configured queue desired value by probabilistically dropping packets from the large elephant flows and not impacting small mice flows.

The probability of dropping packets depends upon the arrival rate calculation of a flow at ingress. This is calculated by Elephant Trap (ETrap).

Explicit Congestion Notification (ECN) can be enabled with AFD on a particular class of traffic to mark the congestion state instead of dropping the packets.

## Elephant Trap (ETrap)

The Elephant Trap (ETrap) identifies and hashes flows and forwards the arrival rate per flow to AFD for drop probability computation. When the number of bytes received in a flow exceeds the number of bytes specified by the Elephant trap byte-count-threshold, the flow is considered an elephant flow.

The AFD algorithm is applicable only on the flows that are qualified as elephant flows. Mice flows are protected and are not subject to AFD dropping.

For a flow to continue to be an elephant flow, the configured `bw_threshold` number of bytes has to be received in the configured timer period. Otherwise, the flow is evicted from the ETrap hash table.

The ingress rate of every elephant flow is calculated and forwarded to egress for the AFD algorithm to consume.

When ECN is enabled with AFD, the packets are marked to signal congestion instead of being dropped.

ETrap has three parameters that can be configured:

- Byte-count

Byte-count Is used to identify elephant flows. When number of bytes received in a flow exceeds the number of bytes specified by the byte-count-threshold, the flow is considered an elephant flow. (Default byte-count is ~ 1 MB.)

- Age-period and Bandwidth-threshold

Age-period and Bandwidth-threshold are used together to track the activeness of an elephant flow.

When the average bandwidth during the age-period time is lower than the configured bandwidth-threshold, an elephant flow is considered inactive and is timed-out and removed from the elephant flow table. (Default age-period is 50  $\mu$ sec. Default bandwidth-threshold is 500 bytes.)

Example:

```
switch (config)# hardware qos etrap age-period 50 usec
switch (config)# hardware qos etrap bandwidth-threshold 500 bytes
switch (config)# hardware qos etrap byte-count 1048555
```

## AFD User Profiles

Three user profiles are provided with AFD:

- Mesh (Aggressive)

AFD and ETRAP timers are set to be aggressive, so that the queue depth does not grow much and is kept close to the queue-desired value.

- Burst (Default)

AFD and ETRAP timers are neither aggressive nor conservative, so that the queue depth could be observed to be hovering near the queue-desired value.

- Ultra-burst (Conservative)

AFD and ETRAP timers are set to be conservative, so that more bursts are absorbed and fluctuations for queue depth can be observed around the queue-desired value.

These profiles set the ETrap and AFD timers to pre-configured values for different traffic profiles such as, very bursty or not-so bursty traffic. For more configuration flexibility, the ETrap period set by the profile can be overridden by configuring the ETrap age-period with the **hardware qos etrap** command. However, the AFD timer cannot be changed.

The following is an example of configuring the ETrap age-period:

```
switch(config)# hardware qos etrap age-period 50 usec
```

The following are examples of configuring the AFD user profiles:

- Mesh (Aggressive with ETrap age-period: 20 µsec and AFD period: 10 µsec)

```
switch(config)# hardware qos afd profile mesh
```

- Burst (Default with ETrap age-period: 50 µsec and AFD period: 25 µsec)

```
switch(config)# hardware qos afd profile burst
```

- Ultra-burst (Conservative with ETrap age-period: 100 µsec and AFD period: 50 µsec)

```
switch(config)# hardware qos afd profile ultra-burst
```

## AFD Guidelines and Limitations

AFD has the following configuration guidelines and limitations:

- Beginning with Cisco NX-OS Release 9.3(3), Cisco Nexus 9300-GX platform switches support the AFD and ETrap features.
- If an AFD policy has already been applied in system QoS and you are configuring two unique AFD queuing policies, you must apply each unique AFD policy on ports on the same slice.

The following is an example of the system error if you do not create and apply an unique AFD policy on the same slice:

```
Eth1/50 1a006200 1 0 40 255 196 -1 1 0 0 <<<slice 1
Eth1/51 1a006400 1 0 32 255 200 -1 0 32 56 <<<slice 0
Eth1/52 1a006600 1 0 64 255 204 -1 1 24 48 <<<slice 1
Eth1/53 1a006800 1 0 20 255 208 -1 0 20 40 <<<slice 0
```

```

switch(config)# interface ethernet 1/50
switch(config-if)# service-policy type queuing output LM-out-40G
switch(config)# interface ethernet 1/51
switch(config-if)#service-policy type queuing output LM-out-100G
switch(config)# interface ethernet 1/52
switch(config-if)# service-policy type queuing output LM-out-100G
Unable to perform the action due to incompatibility: Module 1 returned status "Max
profiles reached for unique values of queue management parameters (alpha, beta,
max-threshold) in AFD config"

```

- If no AFD policy has already been applied in system QoS—then you can configure the same AFD policy on ports on a different slice, or configure different AFD policies on ports in the same slice.




---

**Note** You cannot configure an AFD queuing in the System QoS at a later time.

---

The following is an example of the system error when AFD queuing is already configured in the system:

```

interface Ethernet1/50
  service-policy type queuing output LM-out-40G
interface Ethernet1/51
  service-policy type queuing output LM-out-40G
interface Ethernet1/52
  service-policy type queuing output LM-out-100G
interface Ethernet1/53
  service-policy type queuing output LM-out-100G
interface Ethernet1/54
  service-policy type queuing output LM-out-100G

(config-sys-qos)# service-policy type queuing output LM-out
Unable to perform the action due to incompatibility: Module 1 returned status "Max
profiles reached for unique values of queue management parameters (alpha, beta,
max-threshold) in AFD config"

```

### WRED and AFD Differences

Although WRED and AFD are both AQM algorithms, they have different approaches to help manage congestion:

- WRED computes a random drop probability and drops the packets indiscriminately across all the flows in a class of traffic.
- AFD computes drop probability based on the arrival rate of incoming flows, compares it with the computed fair rate, and drops the packets from the elephant flows while not impacting the mice flows.




---

**Note** AFD and WRED cannot be applied at the same time. Only one can be used in a system.

---

## Traffic Shaping

Traffic shaping allows you to control the traffic going out of an interface in order to match its flow to the speed of the remote target interface and to ensure that the traffic conforms to policies contracted for it. You

can shape traffic that adheres to a particular profile to meet downstream requirements. Traffic shaping eliminates bottlenecks in topologies with data-rate mismatches.

Traffic shaping regulates and smooths out the packet flow by imposing a maximum traffic rate for each port's egress queue. Packets that exceed the threshold are placed in the queue and are transmitted later. Traffic shaping is similar to traffic policing, but the packets are not dropped. Because packets are buffered, traffic shaping minimizes packet loss (based on the queue length), which provides better traffic behavior for TCP traffic.

Using traffic shaping, you can control access to available bandwidth, ensure that traffic conforms to the policies established for it, and regulate the flow of traffic to avoid congestion that can occur when the egress traffic exceeds the access speed of its remote, target interface. For example, you can control access to the bandwidth when policy dictates that the rate of a given interface should not, on average, exceed a certain rate even though the access rate exceeds the speed.

Queue length thresholds are configured using the WRED configuration.




---

**Note** Traffic shaping is not supported on ALE enabled device 40G front panel ports. When traffic shaping is configured for the system level, the setting is ignored and no error message is displayed. When traffic shaping commands are configured for the port level, the setting is rejected and an error message is displayed.

---

## Prerequisites for Queuing and Scheduling

Queuing and scheduling have the following prerequisites:

- You must be familiar with using modular QoS CLI.
- You are logged on to the device.

## Guidelines and Limitations for Queuing and Scheduling

Queuing and scheduling have the following configuration guidelines and limitations:




---

**Note** For scale information, see the release-specific *Cisco Nexus 9000 Series NX-OS Verified Scalability Guide*.

---

- The minimum egress shaper granularity is 200 Mbps per queue for Cisco Nexus 9300-GX2/HX platform switches and line cards.
- **show** commands with the **internal** keyword are not supported.
- PVLANS do not provide support for PVLAN QoS.
- The device supports a system-level queuing policy, so all ports in the system are impacted when you configure the queuing policy.
- A type queuing policy can be attached to the system or to individual interfaces for input or output traffic.

- Changes are disruptive. The traffic passing through ports of the specified port type experience a brief period of traffic loss. All ports of the specified type are affected.
- Performance can be impacted. If one or more ports of the specified type do not have a queuing policy applied that defines the behavior for the new queue, the traffic mapping to that queue can experience performance degradation.
- When there is a link flap on a port with active traffic, it results in a packet/traffic loss flowing through other ports on the same or different slices. To avoid the flow discards, make sure you reduce the queue limit from the default value to a lower value and apply it at the system level.
- Traffic shaping can increase the latency of packets due to queuing because it falls back to store-and-forward mode when packets are queued.
- Traffic shaping is not supported on the Cisco Nexus 9300 ALE 40G ports. For more information on ALE 40G uplink ports, see the [Limitations for ALE 40G Uplink Ports on the Cisco Nexus 9000 Series Switches](#).
- When configuring priority for one class map queue (SPQ), configure the priority for QoS group 3. When configuring priority for more than one class map queue, configure the priority on the higher numbered QoS groups. In addition, the QoS groups must be next to each other. For example, if you want to have two SPQs, you have to configure the priority on QoS group 3 and on QoS group 2.
- About queue limits for 100G enabled devices (such as the Cisco Nexus 9300 platform switch with the N9K-M4PC-CFP2 GEM):
  - The maximum dynamic queue-limit alpha value can be greater than 8. However 8 is the maximum alpha value supported. If you configure the alpha value to a value greater than 8, it is overridden and set to the maximum.

No message is issued when the alpha value is overridden.
  - The static queue-limit has a maximum of 20,000 cells. Any value specified greater than the maximum 20,000 cell limit is overridden by the 20,000 cell limit.

No message is issued when the cell limit is overridden.
- 100G enabled devices (such as the Cisco Nexus 9300 Series switch with the N9K-M4PC-CFP2 GEM), the WRED threshold has a maximum of 20,000 cells. Any value specified greater than the maximum 20,000 cell limit is overridden by the 20,000 cell limit.

No message is issued when the cell limit is overridden.
- FEX support for:
  - System input (ingress) level queuing for HIF to NIF traffic.
  - System output (egress) level queuing for NIF to HIF traffic and HIF to HIF traffic.
- Egress queuing feature works only for base ports and not for FEX ports.
- When the switch supported system queuing policy is configured, the FEX uses the default policy.
- The FEX QoS system level queuing policy does not support WRED, queue-limit, shaping, or policing features.
- The FEX QoS system level queuing policy does not support multiple priority levels.

- Assigning a high alpha value on a Cisco Nexus 9200 platform switch uses more than the expected 50% of the available buffer space.

Assigning a lower alpha value (7 or less) assures the usage of the expected 50% of the available buffer space.

- For Cisco Nexus 9200 platform switches, when a static limit is configured on a queue, both the static limit and the dynamic limit are calculated using the dynamic threshold (alpha value).
- Maximum queue occupancy for Leaf Spine Engine (LSE) enabled switches are limited to 64K cells (~13MB).
- For the following Cisco Nexus series switches and line cards, the lowest value that the egress shaper can manage, per queue, is 100 Mbps:
  - Cisco Nexus 9200 platform switches
  - Cisco Nexus 9300-EX/FX/FX2/GX platform switches
  - Cisco Nexus 9700-EX/FX line cards
- Beginning with Cisco NX-OS Release 10.1(2), Scheduling is supported on the N9K-X9624D-R2 and N9K-C9508-FM-R2 platform switches.
- For R2, though different priority levels can be set through CLI, only priority level 1 is supported in queuing policy.
- Beginning with Cisco NX-OS Release 10.3(1)F, Queuing statistics is supported on the Cisco Nexus 9808 platform switches. The queue depth counter per queue is not supported but additional queuing counters on VOQ tail drops are supported.
- Beginning with Cisco NX-OS Release 10.4(1)F, Queuing statistics is supported on the Cisco Nexus 9804 platform switches. The queue depth counter per queue is not supported but additional queuing counters on VOQ tail drops are supported.
- Cisco Nexus 9804 platform switches have the following limitations for Queuing and scheduling support:
  - Eight queues - SPAN and CPU Queues that are overloaded with eight user queues are supported.
  - SP, DWRR, WRED, and ECN are supported. However, the shaper and DWRR accuracy will have 5% variance
  - Maximum shaper and static limit are supported.
  - Micro-Burst Monitoring is not supported.
  - Link Level Flow Control is not supported.
  - Priority Flow Control is not supported.
  - Dynamic queue-limit is not supported.
  - Multicast Queuing statistics is not supported.
- Cisco Nexus 9808 switches support only the eight queue configuration in Queuing and Scheduling policies. Fewer queues can be configured but are not supported.
- Cisco Nexus 9804 switches support only the eight queue configuration in Queuing and Scheduling policies. Fewer queues can be configured but are not supported.

- The **queue-limit** configuration is applicable only in ingress queuing policy on Cisco Nexus 9500 switches with 9600-R/RX line cards.
- The **bandwidth percent** configuration is applicable only in egress queuing policy on Cisco Nexus 9500 switches with 9600-R/RX line cards.
- If granted buffer is not carved out using a custom input queuing policy for a specified group, only global shared buffers are used.
- From Cisco NX-OS Release 10.4(1)F, Queuing and Scheduling policies are supported on Cisco Nexus C9348GCFX3.
- From Cisco NX-OS Release 10.4(1)F, below limitations apply on Cisco Nexus and C9348GC-FX3PH switch:
  - Queuing and Scheduling policies are supported on switch except for the ports 41-48.
  - Configuring WRED on egress queues is not supported on the switch.
- From Cisco NX-OS Release 10.4(2)F, Queuing and Scheduling policies are supported on Cisco Nexus C93108TC-FX3 switch.

### Buffer-Boost

The buffer-boost feature enables the line card to use extra buffers. This capability is enabled by default on line cards such as the Cisco Nexus 9564PX.

- The command to enable the buffer-boost feature is **buffer-boost**.
- The command to disable the buffer-boost feature is **no buffer-boost**.

Generally, we recommend not to disable the buffer-boost feature. However, disabling the buffer-boost is necessary when there is a need to port channel two different member ports, from Cisco Nexus 9636PQ based line cards and Cisco Nexus 9564PX based line cards. However, we do not recommend to port channel such a configuration between ACI-capable leaf line cards and NX-OS line cards.



---

**Note** Line cards like the Cisco Nexus 9636PQ and similar, do not offer the buffer-boost feature.

---

### Order of Resolution

The following describes the order of resolution for the pause buffer configuration and the queue-limit for a priority-group.

- Pause Buffer Configuration

The pause buffer configuration is resolved in the following order:

- Interface ingress queuing policy (if applied, and pause buffer configuration is specified for that class).
- System ingress queuing policy (if applied, and pause buffer configuration is specified for that class).
- System network-QoS policy (if applied, and pause buffer configuration is specified for that class).
- Default values with regard to the speed of the port.

- Queue-limit for Priority-Group

The queue-limit for a priority-group is resolved in the following order:

- Interface ingress queuing policy (if applied, and queue-limit configuration is specified for that class).
- System ingress queuing policy (if applied, and queue-limit configuration is specified for that class).
- The **hardware qos ing-pg-share** configuration provided value.
- System default value.

### Ingress Queuing

The following are notes about ingress queuing:

- No default system ingress queuing policy exists.
- The ingress queuing policy is used to override the specified pause buffer configuration.
- When downgrading to an earlier release of Cisco Nexus 9000 NX-OS, all ingress queuing configurations have to be removed.
- The ingress queuing feature is supported only on platforms where priority flow control is supported.
- Ingress queuing is not supported on devices with 100G ports.
- The ingress queuing policy is supported only at the system level (and not at the interface level) for Cisco Nexus 9508 switches with the Cisco Nexus 9732C-EX line card and Cisco Nexus 93108TC-EX and 93180YC-EX switches.
- The Cisco Nexus 9636C-R and 9636Q-R line cards and the Cisco Nexus 9508-FM-R fabric module (in a Cisco Nexus 9508 switch) support ingress queuing.
- Beginning with Cisco NX-OS Release 10.3(1)F, Ingress queuing is supported on Cisco Nexus 9800 switches.
- The Cisco Nexus 9500 switches with 9600-R/RX line cards supports only burst-mode to utilize the big-buffer provided by hardware.




---

**Note** Recommendation is to use the same port speeds at ingress and egress side.

---

- Deep Buffer - Nexus 9332D-H2R platform switches support Deep buffers for Unicast traffic. Deep buffer allows the user to handle huge bursts of traffic in the switch by providing 8GB additional buffer in-addition to the existing buffers (40MB) in the switch. Deep buffer is enabled by default in the system across all the queues such that any queue has flexibility to occupy those buffers during congestion scenarios. Multicast traffic is not supported on deep buffers.
- On Nexus 9332D-H2R platform switches, there are two special 33, 34 ports, mostly for management traffic. These ports have all the same features as any regular ports except for:
  - MACSEC and PTP and Frequency Synchronization are not supported.
  - Deep buffer is not supported on these ports, due to limitation on the total number of queues.
  - These are lower bandwidth ports.



- These ports operate in store-and-forward mode only.
- These ports don't support shaper Min/Max rate guarantees.
- PFC and no-drop classes is not supported on these ports.
- FC mode is not supported on these ports.

## Configuring Queuing and Scheduling

Queuing and scheduling are configured by creating policy maps of type queuing that you apply to an egress interface. You cannot modify system-defined class maps, which are used in policy maps to define the classes of traffic to which you want to apply policies.

System-defined class maps match based on QoS groups that can be customized using a type qos policy. By default, there is no type QoS policy and all traffic matches to qos-group 0. One consequence is that all traffic will hit the system-defined default-class of type network-qos and type queuing (assigns 100% bandwidth to qos-group 0). Since system-defined classes of type queuing and type network-qos are predefined to match based on distinct qos-groups and cannot be modified, the way to ensure that traffic hits a given type queuing/network-qos class is to configure a type qos policy that sets the corresponding qos-group for that traffic. For traffic classified into a system-defined class map matching on a qos-group other than 0, create a type QoS policy that sets the QoS groups. Once the traffic has been mapped, it will be subject to the default type network-qos and type queuing policies that operate on the non-default qos-group X ( $X \neq 0$ ). You may need to further customize those type queuing and type network-qos policies in order to ensure the desired actions (e.g. re-allocate some bandwidth). For more information on setting the qos-group, see "Example of set qos-groups" in the Using Modular QoS CLI chapter.

For information about configuring policy maps and class maps, see the Using Modular QoS CLI chapter.

You can configure the congestion-avoidance features, which include tail drop and WRED, in any queue.

You can configure one of the egress congestion management features, such as priority, traffic shaping, and bandwidth in output queues.



---

**Note** WRED is not supported on ALE enabled device front panel 40G uplink ports. When WRED is configured for the system level, the setting is ignored and no error message is displayed. When WRED is configured at the port level, the setting is rejected and an error message displays.

---

The system-defined policy map, default-out-policy, is attached to all ports to which you do not apply a queuing policy map. The default policy maps cannot be configured.

## Configuring Type Queuing Policies

Type queuing policies for egress are used for scheduling and buffering the traffic of a specific system class. A type queuing policy is identified by its QoS group and can be attached to the system or to individual interfaces for input or output traffic.



**Note** Ingress queuing policy is used to configure pause buffer thresholds. For more details, see the [About Priority Flow Control](#) section.

## SUMMARY STEPS

1. **configure terminal**
2. **policy-map type queuing** *policy-name*
3. **class type queuing** *class-name*
4. **priority**
5. **no priority**
6. **shape min** *Target-bit-rate* [ **kbps** | **mbps** | **gbps** | **mbps** | **pps** ] **max** *Target-bit-rate* [ **kbps** | **mbps** | **gbps** | **mbps** | **pps** ]
7. **bandwidth percent** *percentage*
8. **no bandwidth percent** *percentage*
9. **priority level** *level*
10. **queue-limit** *queue size* [**dynamic** *dynamic threshold*]

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>	Enters global configuration mode.
Step 2	<b>policy-map type queuing</b> <i>policy-name</i>	Creates a named object that represents a set of policies that are to be applied to a set of traffic classes. Policy-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.
Step 3	<b>class type queuing</b> <i>class-name</i>	Associates a class map with the policy map, and enters configuration mode for the specified system class.
Step 4	<b>priority</b>	Specifies that traffic in this class is mapped to a strict priority queue.
Step 5	<b>no priority</b>	(Optional) Removes the strict priority queuing from the traffic in this class.
Step 6	<b>shape min</b> <i>Target-bit-rate</i> [ <b>kbps</b>   <b>mbps</b>   <b>gbps</b>   <b>mbps</b>   <b>pps</b> ] <b>max</b> <i>Target-bit-rate</i> [ <b>kbps</b>   <b>mbps</b>   <b>gbps</b>   <b>mbps</b>   <b>pps</b> ]	Specifies the minimum and minimum shape size for the queue.
Step 7	<b>bandwidth percent</b> <i>percentage</i>	Assigns a weight to the class. The class will receive the assigned percentage of interface bandwidth if there are no strict-priority queues. If there are strict-priority queues, however, the strict-priority queues receive their share of the bandwidth first. The remaining bandwidth is shared in a weighted manner among the class configured with a bandwidth percent. For example, if strict-priority queues

	Command or Action	Purpose
		<p>take 90 percent of the bandwidth, and you configure 75 percent for a class, the class will receive 75 percent of the remaining 10 percent of the bandwidth.</p> <p><b>Note</b> Before you can successfully allocate bandwidth to the class, you must first reduce the default bandwidth configuration on class-default and class-fcoe.</p>
<b>Step 8</b>	<b>no bandwidth percent</b> <i>percentage</i>	(Optional) Removes the bandwidth specification from this class.
<b>Step 9</b>	<b>priority level</b> <i>level</i>	(Optional) Specifies the strict priority levels for the Cisco Nexus 9000 Series switches. These levels can be from 1 to 7.
<b>Step 10</b>	<b>queue-limit</b> <i>queue size</i> [ <b>dynamic</b> <i>dynamic threshold</i> ]	<p>(Optional) Specifies either the static or dynamic shared limit available to the queue for Cisco Nexus 9000 Series switches. The static queue limit defines the fixed size to which the queue can grow.</p> <p><b>Note</b> The minimum <i>queue size</i> must be at least 50 kilobytes.</p> <p>The dynamic queue limit allows the queue's threshold size to be decided depending on the number of free cells available, in terms of the alpha value.</p> <p><b>Note</b> Cisco Nexus 9200 Series switches only support a class level dynamic threshold configuration with respect to the alpha value. This means that all ports in a class share the same alpha value.</p> <p><b>Note</b> Starting from Release 10.4(1)F, enhanced queue limit range is 0 to 9437184. The maximum threshold supported in Nexus 9332D-H2R platform switches is 256MB.</p>

## Configuring Congestion Avoidance

You can configure congestion avoidance with tail drop or WRED features. Both features can be used in egress policy maps.



**Note** WRED and tail drop cannot be configured in the same class.

## Configuring Tail Drop on Egress Queues

You can configure tail drop on egress queues by setting thresholds. The device drops any packets that exceed the thresholds. You can specify a threshold based on the queue size or buffer memory that is used by the queue.

### SUMMARY STEPS

1. **configure terminal**
2. **hardware qos q-noise percent** *value*
3. **policy-map** [**type queuing**] [**match-first**] [*policy-map-name*]
4. **class type queuing** *class-name*
5. **queue-limit** {*queue-size* [**bytes** | **kbytes** | **mbytes**] | **dynamic** *value*}
6. (Optional) Repeat Steps 3 and 4 to assign tail drop thresholds for other queue classes.
7. **show policy-map** [**type queuing**] [*policy-map-name* | **default-out-policy**]
8. **copy running-config startup-config**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>hardware qos q-noise percent</b> <i>value</i> <b>Example:</b> <pre>switch(config)# hardware qos q-noise percent 30</pre>	Tunes the random noise parameter. The default value is 20 percent.  This command is supported for Cisco Nexus 9200 and 9300-EX Series switches beginning with Cisco NX-OS Release 7.0(3)I4(4).
<b>Step 3</b>	<b>policy-map</b> [ <b>type queuing</b> ] [ <b>match-first</b> ] [ <i>policy-map-name</i> ] <b>Example:</b> <pre>switch(config)# policy-map type queuing shape_queues switch(config-pmap-que)#</pre>	Configures the policy map of type queuing and then enters policy-map mode for the policy-map name you specify. Policy-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.
<b>Step 4</b>	<b>class type queuing</b> <i>class-name</i> <b>Example:</b> <pre>switch(config-pmap-que)# class type queuing c-out-q1 switch(config-pmap-c-que)#</pre>	Configures the class map of type queuing and then enters policy-map class queuing mode. Class queuing names are listed in the previous System-Defined Type queuing Class Maps table.
<b>Step 5</b>	<b>queue-limit</b> { <i>queue-size</i> [ <b>bytes</b>   <b>kbytes</b>   <b>mbytes</b> ]   <b>dynamic</b> <i>value</i> } <b>Example:</b> <pre>switch(config-pmap-c-que)# queue-limit 1000 mbytes</pre>	Assigns a tail drop threshold based on the queue size in bytes, kilobytes, or megabytes or allows the queue's threshold size to be determined dynamically depending on the number of free cells available. The device drops packets that exceed the specified threshold.

Command or Action	Purpose																																																																													
	<p>The valid values for byte-based queue size are from 1 to 83886080. The valid values for dynamic queue size are from 0 to 10 as follows:</p> <table border="1" data-bbox="901 388 1526 1285"> <thead> <tr> <th rowspan="2">Value of alpha</th> <th colspan="2">Network Forwarding Engine (NFE) enabled switches</th> <th colspan="3">Leaf Spine Engine (LSE) enabled switches</th> </tr> <tr> <th>Definition</th> <th>Max % per queue</th> <th>Definition</th> <th>Max % per queue</th> <th>ASIC value</th> </tr> </thead> <tbody> <tr><td>0</td><td>1/128</td><td>~0.8%</td><td>1/8</td><td>~11%</td><td>0</td></tr> <tr><td>1</td><td>1/64</td><td>~1.5%</td><td>1/4</td><td>~20%</td><td>1</td></tr> <tr><td>2</td><td>1/32</td><td>~3%</td><td>1/2</td><td>~33%</td><td>3</td></tr> <tr><td>3</td><td>1/16</td><td>~6%</td><td>3/4</td><td>~42%</td><td>5</td></tr> <tr><td>4</td><td>1/8</td><td>~11%</td><td>1 1/8</td><td>~53%</td><td>8</td></tr> <tr><td>5</td><td>1/4</td><td>20%</td><td>1 3/4</td><td>~64%</td><td>14</td></tr> <tr><td>6</td><td>1/2</td><td>~33%</td><td>3</td><td>~75%</td><td>16</td></tr> <tr><td>7</td><td>1</td><td>50%</td><td>5</td><td>~83%</td><td>18</td></tr> <tr><td>8</td><td>2</td><td>~66%</td><td>8</td><td>~89%</td><td>21</td></tr> <tr><td>9</td><td>4</td><td>~80%</td><td>14</td><td>~92.5%</td><td>27</td></tr> <tr><td>10</td><td>8</td><td>~89%</td><td>18</td><td>~95%</td><td>31</td></tr> </tbody> </table> <p>For example, if you configure a dynamic queue size of 6, then the alpha value is 1/2. If you configure a dynamic queue size of 7, then the alpha value is 1.</p> <p>To calculate the queue-limit consider the following:  <math display="block">\text{queue-limit} = (\text{alpha}/(1 + \text{alpha})) \times \text{total buffers}</math> For example, if you configure a queue-limit with a dynamic queue size of 7, then the queue-limit can grow up to <math>(1/(1+1)) \times \text{total buffers}</math>. This means that <math>\text{queue-limit} = 1/2 \times \text{total buffers}</math>.</p> <p><b>Note</b> Although the above calculations determine the maximum queue occupancy, the maximum queue occupancy is limited to 64K cells in all cases for Application Spine Engine (ASE2, ASE3) and Leaf Spine Engine (LSE) enabled switches.</p>	Value of alpha	Network Forwarding Engine (NFE) enabled switches		Leaf Spine Engine (LSE) enabled switches			Definition	Max % per queue	Definition	Max % per queue	ASIC value	0	1/128	~0.8%	1/8	~11%	0	1	1/64	~1.5%	1/4	~20%	1	2	1/32	~3%	1/2	~33%	3	3	1/16	~6%	3/4	~42%	5	4	1/8	~11%	1 1/8	~53%	8	5	1/4	20%	1 3/4	~64%	14	6	1/2	~33%	3	~75%	16	7	1	50%	5	~83%	18	8	2	~66%	8	~89%	21	9	4	~80%	14	~92.5%	27	10	8	~89%	18	~95%	31
Value of alpha	Network Forwarding Engine (NFE) enabled switches		Leaf Spine Engine (LSE) enabled switches																																																																											
	Definition	Max % per queue	Definition	Max % per queue	ASIC value																																																																									
0	1/128	~0.8%	1/8	~11%	0																																																																									
1	1/64	~1.5%	1/4	~20%	1																																																																									
2	1/32	~3%	1/2	~33%	3																																																																									
3	1/16	~6%	3/4	~42%	5																																																																									
4	1/8	~11%	1 1/8	~53%	8																																																																									
5	1/4	20%	1 3/4	~64%	14																																																																									
6	1/2	~33%	3	~75%	16																																																																									
7	1	50%	5	~83%	18																																																																									
8	2	~66%	8	~89%	21																																																																									
9	4	~80%	14	~92.5%	27																																																																									
10	8	~89%	18	~95%	31																																																																									

	Command or Action	Purpose
		<b>Note</b> Setting the threshold on ALE enabled devices is only supported for the system level. It is not supported for the port level.
<b>Step 6</b>	(Optional) Repeat Steps 3 and 4 to assign tail drop thresholds for other queue classes.	
<b>Step 7</b>	<b>show policy-map [type queuing [policy-map-name   default-out-policy]]</b>  <b>Example:</b> switch(config-pmap-c-que)# show policy-map type queuing shape_queues	(Optional) Displays information about all configured policy maps, all policy maps of type queuing, a selected policy map of type queuing, or the default output queuing policy.
<b>Step 8</b>	<b>copy running-config startup-config</b>  <b>Example:</b> switch(config)# copy running-config startup-config	(Optional) Saves the running configuration to the startup configuration.

## Configuring WRED on Egress Queues

You can configure WRED on egress queues to set minimum and maximum packet drop thresholds. The frequency of dropped packets increases as the queue size exceeds the minimum threshold. When the maximum threshold is exceeded, all packets for the queue are dropped.



**Note** WRED and tail drop cannot be configured in the same class.



**Note** AFD and WRED cannot be applied at the same time. Only one can be used in a system.

### SUMMARY STEPS

1. **configure terminal**
2. **policy-map type queuing** {[match-first] *policy-map-name*}
3. **class type queuing** *class-name*
4. **random-detect** [minimum-threshold *min-threshold* {packets | bytes | kbytes | mbytes} maximum-threshold *max-threshold* {packets | bytes | kbytes | mbytes} drop-probability *value weight value*] [threshold {burst-optimized | mesh-optimized}] [ecn | non-ecn]
5. (Optional) Repeat Steps 3 and 4 to configure WRED for other queuing classes.
6. (Optional) **congestion-control random-detect forward-nonecn**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>configure terminal</b></p> <p><b>Example:</b></p> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
Step 2	<p><b>policy-map type queuing</b> {[match-first] <i>policy-map-name</i>}</p> <p><b>Example:</b></p> <pre>switch(config)# policy-map type queuing pl switch(config-pmap-que)#</pre>	Configures the policy map of type queuing and then enters policy-map mode for the policy-map name you specify. Policy-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.
Step 3	<p><b>class type queuing</b> <i>class-name</i></p> <p><b>Example:</b></p> <pre>switch(config-pmap-que)# class type queuing c-out-ql switch(config-pmap-c-que)#</pre>	Configures the class map of type queuing and then enters policy-map class queuing mode. Class queuing names are listed in the previous System-Defined Type queuing Class Maps table.
Step 4	<p><b>random-detect</b> [minimum-threshold <i>min-threshold</i> {packets   bytes   kbytes   mbytes} maximum-threshold <i>max-threshold</i> {packets   bytes   kbytes   mbytes} drop-probability <i>value weight value</i>] [threshold {burst-optimized   mesh-optimized}] [ecn   non-ecn]</p> <p><b>Example:</b></p> <pre>switch(config-pmap-c-que)# random-detect minimum-threshold 10 mbytes maximum-threshold 20 mbytes</pre> <p><b>Example:</b></p> <pre>switch(config-pmap-c-que)# random-detect non-ecn minimum-threshold 1000 kbytes maximum-threshold 4000 kbytes drop-probability 100</pre> <pre>switch(config-pmap-c-que)# show queuing interface eth 1/1   grep WRED WRED Drop Pkts 0 WRED Non ECN Drop Pkts 0 switch(config-pmap-c-que)#</pre>	<p>Configures WRED on the specified queuing class. You can specify minimum and maximum thresholds used to drop packets from the queue. You can configure these thresholds by the number of packets, bytes, kilobytes, or megabytes. The minimum and maximum thresholds must be of the same type. The thresholds are from 1 to 52428800.</p> <p>Alternatively, you can specify a threshold that is optimized for burst or mesh traffic, or you can configure WRED to drop packets based on explicit congestion notification (ECN). Beginning with Cisco NX-OS Release 7.0(3)I6(1), the Network Forwarding Engine (NFE) platform supports the non-ecn option to configure drop thresholds for non-ECN flows.</p> <p><b>Note</b> The minimum-threshold and maximum-threshold parameters are not supported on the Cisco Nexus 9300 platform switches and Cisco Nexus 9564TX and 9564PX line cards.</p> <p><b>Note</b> Starting from Release 10.4(1)F, WRED and ECN queue limit range is 0 to 52428800. The maximum threshold supported in Nexus 9332D-H2R platform switches is 256MB.</p> <p>When random-detect is configured under policy-map the default thresholds and drop probabilities are as following:</p> <p><b>a.</b> On newer platforms, the threshold is 0 and then the drop probabilities would be enforced irrespective of buffer utilization.</p>

	Command or Action	Purpose
		<p><b>b.</b> On older platforms, the threshold is min 100KB, max 120KB.</p> <p>The drop probabilities are consistently 10% and 90% for burst-optimized and mesh-optimized respectively on all platforms</p>
<b>Step 5</b>	(Optional) Repeat Steps 3 and 4 to configure WRED for other queuing classes.	
<b>Step 6</b>	<p>(Optional) <b>congestion-control random-detect forward-nonecn</b></p> <p><b>Example:</b></p> <pre>switch(config-pmap-c-que) # congestion-control random-detect forward-nonecn</pre>	<p>This is a global CLI command. Allows non-ECN-capable traffic to bypass WRED thresholds and grow until the egress queue-limit and tail drops. This command is intended to be used with a WRED+ECN configuration and when the intention is to avoid WRED drops of non-ECN-capable traffic. This option is available beginning with Cisco NX-OS Release 7.0(3)I4(2) and supported only for Cisco Nexus 9200 platform switches, Cisco Nexus 93108TC-EX and 93180YC-EX switches, and Cisco Nexus 9508 switches with the Cisco Nexus 9732C-EX line card.</p> <p>Beginning with Cisco NX-OS Release 7.0(3)I4(5), this feature is supported on Cisco Nexus 9508 switches with the Cisco Nexus 9636PQ line cards and Cisco Nexus 3164Q switches.</p>

## Configuring AFD on Egress Queues

AFD can be configured for an egress queuing policy.



**Note** Approximate Fair Drop is not supported on the Cisco Nexus 9508 switch (NX-OS 7.0(3)F3(3)).



**Note** Approximate Fair Drop is not supported on the Cisco Nexus 9808 switch (NX-OS 10.3(1)F).



**Note** AFD and WRED cannot be applied at the same time. Only one can be used in a system.





**Note** The following are recommended values for **queue-desired** for different port speeds:

Port Speed	Value for Queue
10G	150 kbytes
40G	600 kbytes
100G	1500 kbytes

Values for queue are user configurable.



**Note** After AFD is configured, you can apply the policy to the system or to an interface as follows:

- System

```
switch(config)# system qos
switch(config-sys-qos)# service-policy type queuing output afd_8q-out
```

- Interface

```
switch(config)# int e1/1
switch(config-if)# service-policy type queuing output afd_8q-out
```

## SUMMARY STEPS

1. **configure terminal**
2. **policy-map type queuing afd\_8q-out**
3. **class type queuing c-out-8q-q3**
4. **afd queue-desired <number> [bytes | kbytes | mbytes] [ecn]**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b> <b>Example:</b>	Enters global configuration mode.
Step 2	<b>policy-map type queuing afd_8q-out</b>	Configures the policy map of type queuing.
Step 3	<b>class type queuing c-out-8q-q3</b>	Configures the class map of type queuing and then enters policy-map class queuing mode.
Step 4	<b>afd queue-desired &lt;number&gt; [bytes   kbytes   mbytes] [ecn]</b>	Specifies desired queue.

	Command or Action	Purpose
		<b>Note</b> Starting from Release 10.4(1)F, AFD queue limit range is 0 to 52428800. The maximum threshold supported in Nexus 9332D-H2R platform switches is 256MB.

### Example

- Configuring AFD without ECN

```
switch(config)# policy-map type queuing afd_8q-out
switch(config-pmap-que)# class type queuing c-out-8q-q3
switch(config-pmap-c-que)# afd queue-desired 600 kbytes
```

- Configuring AFD with ECN

```
switch(config)# policy-map type queuing afd-ecn_8q-out
switch(config-pmap-que)# class type queuing c-out-8q-q3
switch(config-pmap-c-que)# afd queue-desired 150 kbytes ecn
```

## Configuring Congestion Management

You can configure only one of the following congestion management methods in a policy map:

- Allocate a minimum data rate to a queue by using the **bandwidth** and **bandwidth remaining** commands.
- Allocate all data for a class of traffic to a priority queue by using the **priority** command. You can use the **bandwidth remaining** command to distribute remaining traffic among the nonpriority queues. By default, the system evenly distributes the remaining bandwidth among the nonpriority queues.
- Allocate a minimum and maximum data rate to a queue by using the **shape** command.

In addition to the congestion management feature that you choose, you can configure one of the following queue features in each class of a policy map:

- Tail drop thresholds based on the queue size and the queue limit usage. For more information, see [Configuring Tail Drop on Egress Queues, on page 118](#).
- WRED for preferential packet drops. For more information, see the [Configuring WRED on Egress Queues](#) section.




---

**Note** WRED is not supported on the Cisco Nexus 9508 switch (NX-OS 7.0(3)F3(3)).

---

## Configuring Bandwidth and Bandwidth Remaining

You can configure the bandwidth and bandwidth remaining on the egress queue to allocate a minimum percentage of the interface bandwidth to a queue.



**Note** When a guaranteed bandwidth is configured, the priority queue must be disabled in the same policy map.

### SUMMARY STEPS

1. **configure terminal**
2. **policy-map type queuing** {[match-first] *policy-map-name*}
3. **class type queuing***class-name*
4. Assign a minimum rate of the interface bandwidth or assign the percentage of the bandwidth that remains:
  - Bandwidth percent:
 

```
bandwidth {percent percent}
```
  - Bandwidth remaining percent:
 

```
bandwidth remaining percent percent
```
5. (Optional) Repeat Steps 3 and 4 to assign tail drop thresholds for other queue classes.
6. **exit**
7. **show policy-map** [type queuing [*policy-map-name* | **default-out-policy**]]
8. **copy running-config startup-config**

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
Step 2	<b>policy-map type queuing</b> {[match-first] <i>policy-map-name</i> }	Configures the policy map of type queuing and then enters policy-map mode for the policy-map name you specify. Policy-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.
	<b>Example:</b> <pre>switch(config)# policy-map type queuing shape_queues switch(config-pmap-que)#</pre>	
Step 3	<b>class type queuing</b> <i>class-name</i> <b>Example:</b> <pre>switch(config-pmap-que)# class type queuing c-out-q1 switch(config-pmap-c-que)#</pre>	Configures the class map of type queuing and then enters policy-map class queuing mode. Class queuing names are listed in the previous System-Defined Type queuing Class Maps table.
Step 4	Assign a minimum rate of the interface bandwidth or assign the percentage of the bandwidth that remains:	<ul style="list-style-type: none"> <li>• Bandwidth percent:</li> </ul>

	Command or Action	Purpose
	<ul style="list-style-type: none"> <li>Bandwidth percent: <b>bandwidth {percent percent}</b></li> <li>Bandwidth remaining percent: <b>bandwidth remaining percent percent</b></li> </ul> <p><b>Example:</b></p> <ul style="list-style-type: none"> <li>Bandwidth percent: <pre>switch(config-pmap-c-que)# bandwidth percent 25</pre></li> <li>Bandwidth remaining percent: <pre>switch(config-pmap-c-que)# bandwidth remaining percent 25</pre></li> </ul>	<p>Assigns a minimum rate of the interface bandwidth to an output queue as the percentage of the underlying interface link rate. The range is from 0 to 100.</p> <p>The example shows how to set the bandwidth to a minimum of 25 percent of the underlying link rate.</p> <ul style="list-style-type: none"> <li>Bandwidth remaining percent: Assigns the percentage of the bandwidth that remains to this queue. The range is from 0 to 100.</li> </ul> <p>The example shows how to set the bandwidth for this queue to 25 percent of the remaining bandwidth.</p>
<b>Step 5</b>	(Optional) Repeat Steps 3 and 4 to assign tail drop thresholds for other queue classes.	
<b>Step 6</b>	<p>exit</p> <p><b>Example:</b></p> <pre>switch(config-cmap-que)# exit switch(config)#</pre>	Exits policy-map queue mode and enters global configuration mode.
<b>Step 7</b>	<p><b>show policy-map [type queuing [policy-map-name   default-out-policy]]</b></p> <p><b>Example:</b></p> <pre>switch(config-pmap-c-que)# show policy-map type queuing shape_queues</pre>	(Optional) Displays information about all configured policy maps, all policy maps of type queuing, a selected policy map of type queuing, or the default output queuing policy.
<b>Step 8</b>	<p><b>copy running-config startup-config</b></p> <p><b>Example:</b></p> <pre>switch(config)# copy running-config startup-config</pre>	(Optional) Saves the running configuration to the startup configuration.

## Configuring Bandwidth and Bandwidth Remaining for FEX

You can configure the bandwidth and bandwidth remaining on the ingress and egress queue to allocate a minimum percentage of the interface bandwidth to a queue.



**Note** When a guaranteed bandwidth is configured, the priority queue must be disabled in the same policy map.

### Before you begin

Before configuring the FEX, enable **feature-set fex**.

## SUMMARY STEPS

1. **configure terminal**
2. **policy-map type queuing** {[**match-first**] *policy-map-name*}
3. **class type queuing***class-name*
4. Assign a minimum rate of the interface bandwidth or assign the percentage of the bandwidth that remains:
  - Bandwidth percent:
 

```
bandwidth {percent percent}
```
  - Bandwidth remaining percent:
 

```
bandwidth remaining percent percent
```
5. (Optional) Repeat Steps 3 and 4 to assign tail drop thresholds for other queue classes.
6. **exit**
7. **show policy-map** [**type queuing** [*policy-map-name* | **default-out-policy**]]
8. **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
Step 2	<b>policy-map type queuing</b> {[ <b>match-first</b> ] <i>policy-map-name</i> } <b>Example:</b> <pre>switch(config)# policy-map type queuing shape_queues switch(config-pmap-que)#</pre>	Configures the policy map of type queuing and then enters policy-map mode for the policy-map name you specify. Policy-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.
Step 3	<b>class type queuing</b> <i>class-name</i> <b>Example:</b> <pre>switch(config-pmap-que)# class type queuing c-out-ql switch(config-pmap-c-que)#</pre>	Configures the class map of type queuing and then enters policy-map class queuing mode. Class queuing names are listed in the previous System-Defined Type queuing Class Maps table.
Step 4	Assign a minimum rate of the interface bandwidth or assign the percentage of the bandwidth that remains: <ul style="list-style-type: none"> <li>• Bandwidth percent:           <pre>bandwidth {percent percent}</pre> </li> <li>• Bandwidth remaining percent:           <pre>bandwidth remaining percent percent</pre> </li> </ul> <b>Example:</b> <ul style="list-style-type: none"> <li>• Bandwidth percent:</li> </ul>	<ul style="list-style-type: none"> <li>• Bandwidth percent:           Assigns a minimum rate of the interface bandwidth to an output queue as the percentage of the underlying interface link rate. The range is from 0 to 100.           The example shows how to set the bandwidth to a minimum of 25 percent of the underlying link rate.         </li> <li>• Bandwidth remaining percent:           Assigns the percentage of the bandwidth that remains to this queue. The range is from 0 to 100.         </li> </ul>

	Command or Action	Purpose
	<pre>switch(config-pmap-c-que)# bandwidth percent 25</pre> <ul style="list-style-type: none"> <li>Bandwidth remaining percent:</li> </ul> <pre>switch(config-pmap-c-que)# bandwidth remaining percent 25</pre>	The example shows how to set the bandwidth for this queue to 25 percent of the remaining bandwidth.
<b>Step 5</b>	(Optional) Repeat Steps 3 and 4 to assign tail drop thresholds for other queue classes.	
<b>Step 6</b>	<pre>exit</pre> <p><b>Example:</b></p> <pre>switch(config-cmap-que)# exit switch(config)#</pre>	Exits policy-map queue mode and enters global configuration mode.
<b>Step 7</b>	<p><b>show policy-map [type queuing [policy-map-name   default-out-policy]]</b></p> <p><b>Example:</b></p> <pre>switch(config-pmap-c-que)# show policy-map type queuing shape_queues</pre>	(Optional) Displays information about all configured policy maps, all policy maps of type queuing, a selected policy map of type queuing, or the default output queuing policy.
<b>Step 8</b>	<p><b>copy running-config startup-config</b></p> <p><b>Example:</b></p> <pre>switch(config)# copy running-config startup-config</pre>	(Optional) Saves the running configuration to the startup configuration.

### Example

This example shows how to configure the interface bandwidth:

```
switch(config)# policy-map type queuing inq
switch(config-pmap-que)# class type queuing c-in-q3
switch(config-pmap-c-que)# bandwidth percent 30
switch(config-pmap-que)# class type queuing c-in-q2
switch(config-pmap-c-que)# bandwidth percent 20
switch(config-pmap-que)# class type queuing c-in-q1
switch(config-pmap-c-que)# bandwidth percent 10
switch(config-pmap-que)# class type queuing c-in-q-default
switch(config-pmap-c-que)# bandwidth percent 40
```

## Configuring Priority

If you do not specify the priority, the system-defined egress pq queues behave as normal queues. For information on the system-defined type queuing class maps, see the "Using Modular QoS CLI" section.

You can configure only one level of priority on an egress priority queue. You use the system-defined priority queue class for the type of module to which you want to apply the policy map.

For the nonpriority queues, you can configure how much of the remaining bandwidth to assign to each queue. By default, the device evenly distributes the remaining bandwidth among the nonpriority queues.



**Note** When a priority queue is configured, the other queues can only use the remaining bandwidth in the same policy map.



**Note** When configuring priority for one class map queue (SPQ), you need to configure the priority for QoS group 3. When configuring priority for more than one class map queue, you need to configure the priority on the higher numbered QoS groups. In addition, the QoS groups need to be adjacent to each other. For example, if you want to have two SPQs, you have to configure the priority on QoS group 3 and on QoS group 2.

## SUMMARY STEPS

1. **configure terminal**
2. **policy-map type queuing** {[**match-first**] *policy-map-name*}
3. **class type queuing** *class-name*
4. **priority** [*level value*]
5. **class type queuing***class-name*
6. **bandwidth remaining percent** *percent*
7. (Optional) Repeat Steps 5 to 6 to assign the remaining bandwidth for the other nonpriority queues.
8. **exit**
9. **show policy-map** [**type queuing** [*policy-map-name* | **default-out-policy**]]
10. **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>policy-map type queuing</b> {[ <b>match-first</b> ] <i>policy-map-name</i> }	Configures the policy map of type queuing and then enters policy-map mode for the policy-map name you specify. Policy-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.
	<b>Example:</b> <pre>switch(config)# policy-map type queuing priority_queue1 switch(config-pmap-que)#</pre>	
<b>Step 3</b>	<b>class type queuing</b> <i>class-name</i>  <b>Example:</b> <pre>switch(config-pmap-que)# class type queuing c-out-q1 switch(config-pmap-c-que)#</pre>	Configures the class map of type queuing and then enters policy-map class queuing mode. Class queuing names are listed in the previous System-Defined Type queuing Class Maps table.

	Command or Action	Purpose
<b>Step 4</b>	<b>priority</b> [level <i>value</i> ] <b>Example:</b> <code>switch(config-pmap-c-que)# priority</code>	Selects this queue as a priority queue. Only one priority level is supported.
<b>Step 5</b>	<b>class type queuing</b> <i>class-name</i> <b>Example:</b> <code>switch(config-pmap-que)# class type queuing c-out-q2 switch(config-pmap-c-que)#</code>	(Optional) Configures the class map of type queuing and then enters policy-map class queuing mode. Class queuing names are listed in the previous System-Defined Type queuing Class Maps table.  Choose a nonpriority queue where you want to configure the remaining bandwidth. By default, the system evenly distributes the remaining bandwidth among the nonpriority queues.
<b>Step 6</b>	<b>bandwidth remaining percent</b> <i>percent</i> <b>Example:</b> <code>switch(config-pmap-c-que)# bandwidth remaining percent 25</code>	(Optional) Assigns the percent of the bandwidth that remains to this queue. The range is from 0 to 100.
<b>Step 7</b>	(Optional) Repeat Steps 5 to 6 to assign the remaining bandwidth for the other nonpriority queues.	
<b>Step 8</b>	<b>exit</b> <b>Example:</b> <code>switch(config-cmap-que)# exit switch(config)#</code>	Exits policy-map queue mode and enters global configuration mode.
<b>Step 9</b>	<b>show policy-map</b> [type queuing [ <i>policy-map-name</i>   default-out-policy]] <b>Example:</b> <code>switch(config)# show policy-map type queuing priority_queue1</code>	(Optional) Displays information about all configured policy maps, all policy maps of type queuing, a selected policy map of type queuing, or the default output queuing policy.
<b>Step 10</b>	<b>copy running-config startup-config</b> <b>Example:</b> <code>switch(config)# copy running-config startup-config</code>	(Optional) Saves the running configuration to the startup configuration.

## Configuring Priority for FEX



**Note** Priority for FEX is not supported on the Cisco Nexus 9508 switch (NX-OS 7.0(3)F3(3)).

If you do not specify the priority, the system-defined egress pq queues behave as normal queues. For information on the system-defined type queuing class maps, see the "Using Modular QoS CLI" section.



You can configure only one level of priority on an egress priority queue. You use the system-defined priority queue class for the type of module to which you want to apply the policy map.

For the nonpriority queues, you can configure how much of the remaining bandwidth to assign to each queue. By default, the device evenly distributes the remaining bandwidth among the non-priority queues.



**Note** When a priority queue is configured, the other queues can only use the remaining bandwidth in the same policy map.



**Note** When configuring priority for one class map queue (SPQ), you need to configure the priority for QoS group 3. When configuring priority for more than one class map queue, you need to configure the priority on the higher numbered QoS groups. In addition, the QoS groups need to be adjacent to each other. For example, if you want to have two SPQs, you have to configure the priority on QoS group 3 and on QoS group 2.

### Before you begin

Before configuring the FEX, enable **feature-set fex**.

## SUMMARY STEPS

1. **configure terminal**
2. **policy-map type queuing** {[match-first] *policy-map-name*}
3. **class type queuing** *class-name*
4. **priority** [level *value*]
5. **class type queuing** *class-name*
6. **bandwidth remaining percent** *percent*
7. (Optional) Repeat Steps 5 to 6 to assign the remaining bandwidth for the other nonpriority queues.
8. **exit**
9. **show policy-map** [type queuing [*policy-map-name* | **default-out-policy**]]
10. **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
Step 2	<b>policy-map type queuing</b> {[match-first] <i>policy-map-name</i> } <b>Example:</b> <pre>switch(config)# policy-map type queuing priority_queue1 switch(config-pmap-que)#</pre>	Configures the policy map of type queuing and then enters policy-map mode for the policy-map name you specify. Policy-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.

	Command or Action	Purpose
<b>Step 3</b>	<b>class type queuing</b> <i>class-name</i> <b>Example:</b> <pre>switch(config-pmap-que)# class type queuing c-out-q3 switch(config-pmap-c-que)#</pre>	Configures the class map of type queuing and then enters policy-map class queuing mode. Class queuing names are listed in the previous System-Defined Type queuing Class Maps table.
<b>Step 4</b>	<b>priority</b> [level <i>value</i> ] <b>Example:</b> <pre>switch(config-pmap-c-que)# priority</pre>	Selects this queue as a priority queue. Only one priority level is supported.  <b>Note</b> FEX QoS priority is supported only on the c-out-q3 class map.
<b>Step 5</b>	<b>class type queuing</b> <i>class-name</i> <b>Example:</b> <pre>switch(config-pmap-que)# class type queuing c-out-q3 switch(config-pmap-c-que)#</pre>	(Optional) Configures the class map of type queuing and then enters policy-map class queuing mode. Class queuing names are listed in the previous System-Defined Type queuing Class Maps table.  Choose a nonpriority queue where you want to configure the remaining bandwidth. By default, the system evenly distributes the remaining bandwidth among the nonpriority queues.
<b>Step 6</b>	<b>bandwidth remaining percent</b> <i>percent</i> <b>Example:</b> <pre>switch(config-pmap-c-que)# bandwidth remaining percent 25</pre>	(Optional) Assigns the percent of the bandwidth that remains to this queue. The range is from 0 to 100.
<b>Step 7</b>	(Optional) Repeat Steps 5 to 6 to assign the remaining bandwidth for the other nonpriority queues.	
<b>Step 8</b>	exit <b>Example:</b> <pre>switch(config-cmap-que)# exit switch(config)#</pre>	Exits policy-map queue mode and enters global configuration mode.
<b>Step 9</b>	<b>show policy-map</b> [ <b>type queuing</b> [ <i>policy-map-name</i>   <b>default-out-policy</b> ]] <b>Example:</b> <pre>switch(config)# show policy-map type queuing priority_queue1</pre>	(Optional) Displays information about all configured policy maps, all policy maps of type queuing, a selected policy map of type queuing, or the default output queuing policy.
<b>Step 10</b>	<b>copy running-config startup-config</b> <b>Example:</b> <pre>switch(config)# copy running-config startup-config</pre>	(Optional) Saves the running configuration to the startup configuration.

### Example

This example shows how to configure the level of priority:

```

switch(config)# policy-map type queuing inq_pri
switch(config-pmap-que)# class type queuing c-in-q3
switch(config-pmap-c-que)# priority
switch(config-pmap-que)# class type queuing c-in-q2
switch(config-pmap-c-que)# bandwidth remaining percent 20
switch(config-pmap-que)# class type queuing c-in-q1
switch(config-pmap-c-que)# bandwidth remaining percent 40
switch(config-pmap-que)# class type queuing c-in-q-default
switch(config-pmap-c-que)# bandwidth remaining percent 40

```

## Configuring Traffic Shaping

You can configure traffic shaping on an egress queue to impose a minimum and maximum rate on it.




---

**Note** Configuring traffic shaping for a queue is independent of priority or bandwidth in the same policy map.

---




---

**Note** The system queuing policy is applied to both internal and front panel ports. When traffic shaping is enabled on the system queuing policy, traffic shaping is also applied to the internal ports. As a best practice, do not enable traffic shaping on the system queuing policy.

---




---

**Note** Traffic shaping is not supported on the Cisco Nexus 9300 40G ports.

---




---

**Note** The lowest value that the egress shaper can manage, per queue, is 100 Mbps on Cisco Nexus 9200 series, 9300-EX/FX/FX2/GX, and 9700-EX/FX switches.

---

### Before you begin

Configure random detection minimum and maximum thresholds for packets.

### SUMMARY STEPS

1. **configure terminal**
2. **policy-map type queuing** {[**match-first**] *policy-map-name*}
3. **class type queuing** *class-name*
4. **shape min** *value* {**bps** | **gbps** | **kbps** | **mbps** | **pps**} **max** *value* {**bps** | **gbps** | **kbps** | **mbps** | **pps**}
5. (Optional) Repeat Steps 3 and 4 to assign tail drop thresholds for other queue classes.
6. **show policy-map** [**type queuing** [*policy-map-name* | **default-out-policy**]]
7. **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>policy-map type queuing</b> {[ <b>match-first</b> ] <i>policy-map-name</i> } <b>Example:</b> <pre>switch(config)# policy-map type queuing shape_queues switch(config-pmap-que)#</pre>	Configures the policy map of type queuing and then enters policy-map mode for the policy-map name you specify. Policy-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.
<b>Step 3</b>	<b>class type queuing</b> <i>class-name</i> <b>Example:</b> <pre>switch(config)# class type queuing c-out-q-default switch(config-pmap-c-que)#</pre>	Configures the class map of type queuing and then enters policy-map class queuing mode. Class queuing names are listed in the previous System-Defined Type queuing Class Maps table.
<b>Step 4</b>	<b>shape min</b> <i>value</i> { <b>bps</b>   <b>gbps</b>   <b>kbps</b>   <b>mbps</b>   <b>pps</b> } <b>max</b> <i>value</i> { <b>bps</b>   <b>gbps</b>   <b>kbps</b>   <b>mbps</b>   <b>pps</b> } <b>Example:</b> <pre>switch(config-pmap-c-que)# shape min 100 mbps max 150 mbps</pre>	<p>Assigns a minimum and maximum bit rate on an output queue. The default bit rate is in bits per second (bps).</p> <p>The example shows how to shape traffic to a minimum rate of 100 megabits per second (mbps) and a maximum rate of 150 mbps.</p> <p><b>Note</b> Most scenarios where traffic shaping is needed requires the configuration of only the max shaper value. For instance, if you want traffic shaped and limited to a maximum desired rate, configure the min shaper value as 0 and the max shaper value as the maximum desired rate.</p> <p>You should only configure the min shaper value for specific scenarios where a guaranteed rate is desired. For instance, if you want traffic to have a guaranteed rate, configure the min shaper value as the guaranteed rate and the max value as something greater than guaranteed rate (or the maximum of the port speed rate).</p>
<b>Step 5</b>	(Optional) Repeat Steps 3 and 4 to assign tail drop thresholds for other queue classes.	
<b>Step 6</b>	<b>show policy-map</b> [ <b>type queuing</b> [ <i>policy-map-name</i>   <b>default-out-policy</b> ]] <b>Example:</b> <pre>switch(config)# show policy-map type queuing shape_queues</pre>	(Optional) Displays information about all configured policy maps, all policy maps of type queuing, a selected policy map of type queuing, or the default output queuing policy.

	Command or Action	Purpose
Step 7	<b>copy running-config startup-config</b> <b>Example:</b> <pre>switch(config)# copy running-config startup-config</pre>	(Optional) Saves the running configuration to the startup configuration.

## Applying a Queuing Policy on a System

You apply a queuing policy globally on a system.

### SUMMARY STEPS

1. **configure terminal**
2. **system qos**
3. **service-policy type queuing output** *{policy-map-name | default-out-policy}*

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
Step 2	<b>system qos</b> <b>Example:</b> <pre>switch (config)# system qos switch (config-sys-qos)#</pre>	Enters system qos mode.
Step 3	<b>service-policy type queuing output</b> <i>{policy-map-name   default-out-policy}</i> <b>Example:</b> <pre>switch (config-sys-qos)# service-policy type queuing map1</pre>	<p>Adds the policy map to the input or output packets of system.</p> <p><b>Note</b> The <b>output</b> keyword specifies that this policy map should be applied to traffic transmitted from an interface.</p> <p><b>Note</b> To restore the system to the default queuing service policy, use the <b>no</b> form of this command.</p>

## Verifying the Queuing and Scheduling Configuration

Use the following commands to verify the queuing and scheduling configuration:

Command	Purpose
<b>show class-map</b> [ <b>type queuing</b> <i>class-name</i> ]	Displays information about all configured class maps, all class maps of type queuing, or a selected class map of type queuing.
<b>show policy-map</b> [ <b>type queuing</b> <i>policy-map-name</i>   <b>default-out-policy</b> ]	Displays information about all configured policy maps, all policy maps of type queuing, a selected policy map of type queuing, or the default output queuing policy.
<b>show policy-map system</b>	Displays information about all configured policy maps on the system.

## Controlling the QoS Shared Buffer

The QoS buffer provides support per port/queue and shared space. You can control the QoS buffer that is shared by all flows by disabling or restricting reservations.

The **hardware qos min-buffer** command is used to control the QoS shared buffer.

<b>hardware qos min-buffer</b> [ <b>all</b>   <b>default</b>   <b>none</b> ]	<ul style="list-style-type: none"> <li>• <b>all</b> Current behavior where all reservations are enabled ON).</li> <li>• <b>default</b> Enables reservations only for qos-group-0.</li> <li>• <b>none</b> Disables reservations for all qos-groups.</li> </ul>
------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

The **show hardware qos min-buffer** command is used to display the current buffer configuration.

## Managing Dynamic Buffer Sharing

Beginning with NX-OS 7.0(3)I7(4), dynamic buffer sharing (egress buffering) across slices is configured with the **hardware qos dynamic-buffer-sharing** command. Following the command, you must reload the switch to enable the dynamic buffering.

Buffer sharing is enabled by dynamic bank allocation (1 bank = 4k cells, 1 cell = 416 bytes) and controlled by a global controller (eCPU) that manages the banks being distributed among slices. Dynamic buffer sharing provides six reserved banks (10MB) for each slice and twelve banks for sharing across slices (20MB).




---

**Note** Dynamic Buffer Sharing is supported only on Nexus 9300-FX2 platform switches, see [Nexus Switch Platform Support Matrix](#)

---

# Monitoring the QoS Packet Buffer

The Cisco Nexus 9000 Series device has a 12-MB buffer memory that divides into a dedicated per port and dynamic shared memory. Each front-panel port has four unicast queues and four multicast queues in egress. In the scenario of burst or congestion, each egress port consumes buffers from the dynamic shared memory.

You can display the real-time and peak status of the shared buffer per port. All counters are displayed in terms of the number of cells. Each cell is 208 bytes in size. You can also display the global level buffer consumption in terms of consumption and available number of cells.




---

**Note** Monitoring the shared buffer on ALE enabled devices is not supported for the port level.

---




---

**Note** In the examples shown in this section, the port numbers are Broadcom ASIC ports.

---

This example shows how to clear the system buffer maximum cell usage counter:

```
switch# clear counters buffers
Max Cell Usage has been reset successfully
```

This example shows how to set a buffer utilization threshold for a specific module:

```
switch(config)# hardware profile buffer info port-threshold module 1 threshold 10
Port threshold changed successfully
```




---

**Note** The buffer threshold feature is not enabled for ports if they have a no-drop class configured (PFC).

---




---

**Note** The configured threshold buffer count is checked every 5 seconds against all the buffers used by that port across all the queues of that port.

---




---

**Note** You can configure the threshold percentage configuration for all modules or for a specific module, which is applied to all ports. The default threshold value is 90% of the switch cell count of shared pool SP-0. This configuration applies to both Ethernet (front panel) and internal (HG) ports.

---




---

**Note** The buffer threshold feature is not supported for ACI capable device ports.

---

This example shows how to display the interface hardware mappings:

```
switch# show interface hardware-mappings
Legends:
  SMod - Source Mod. 0 is N/A
  Unit - Unit on which port resides. N/A for port channels
  HPort - Hardware Port Number or Hardware Trunk Id:
  FPort - Fabric facing port number. 255 means N/A
  NPort - Front panel port number
  VPort - Virtual Port Number. -1 means N/A
```

```
-----
Name          Ifindex  Smod Unit HPort FPort NPort VPort
-----
Eth2/1        1a080000 4    0   13   255  0    -1
Eth2/2        1a080200 4    0   14   255  1    -1
Eth2/3        1a080400 4    0   15   255  2    -1
Eth2/4        1a080600 4    0   16   255  3    -1
Eth2/5        1a080800 4    0   17   255  4    -1
Eth2/6        1a080a00 4    0   18   255  5    -1
Eth2/7        1a080c00 4    0   19   255  6    -1
Eth2/8        1a080e00 4    0   20   255  7    -1
Eth2/9        1a081000 4    0   21   255  8    -1
Eth2/10       1a081200 4    0   22   255  9    -1
Eth2/11       1a081400 4    0   23   255 10    -1
Eth2/12       1a081600 4    0   24   255 11    -1
Eth2/13       1a081800 4    0   25   255 12    -1
Eth2/14       1a081a00 4    0   26   255 13    -1
Eth2/15       1a081c00 4    0   27   255 14    -1
Eth2/16       1a081e00 4    0   28   255 15    -1
Eth2/17       1a082000 4    0   29   255 16    -1
Eth2/18       1a082200 4    0   30   255 17    -1
Eth2/19       1a082400 4    0   31   255 18    -1
Eth2/20       1a082600 4    0   32   255 19    -1
Eth2/21       1a082800 4    0   33   255 20    -1
Eth2/22       1a082a00 4    0   34   255 21    -1
Eth2/23       1a082c00 4    0   35   255 22    -1
Eth2/24       1a082e00 4    0   36   255 23    -1
-----
```

## Configuration Examples for Queuing and Scheduling

In this section, you can find examples of configuring queuing and scheduling.



**Note** The default system classes type queuing match based on qos-group (by default all traffic matches to qos-group 0, and this default queue gets 100% bandwidth). Create a type QoS policy that first sets the qos-group in order to drive the correct matching for the type queuing classes and policies.

### Example: Configuring WRED on Egress Queues

The following example shows how to configure the WRED feature on an egress queue:

```
configure terminal
  class-map type queuing match-any c-out-q1
    match qos-group 1
  class-map type queuing match-any c-out-q2
    match qos-group 1
```



```
policy-map type queuing wred
  class type queuing c-out-q1
    random-detect minimum-threshold 10 bytes maximum-threshold 1000 bytes
  class type queuing c-out-q2
    random-detect threshold burst-optimized ecn
```

## Example: Configuring Traffic Shaping

The following example shows how to configure traffic shaping using 500 mbps and 1000 mbps for respective classes::

```
configure terminal
  class-map type queuing match-any c-out-q1
    match qos-group 1
  class-map type queuing match-any c-out-q2
    match qos-group 1
policy-map type queuing pqu
  class type queuing c-out-8q-q3
    bandwidth percent 20
    shape min 100 mbps max 500 mbps
  class type queuing c-out-8q-q2
    bandwidth percent 30
    shape min 200 mbps max 1000 mbps
  class type queuing c-out-8q-q-default
    bandwidth percent 50
  class type queuing c-out-8q-q1
    bandwidth percent 0
  class type queuing c-out-8q-q4
    bandwidth percent 0
  class type queuing c-out-8q-q5
    bandwidth percent 0
  class type queuing c-out-8q-q6
    bandwidth percent 0
  class type queuing c-out-8q-q7
    bandwidth percent 0
system qos
  service-policy type queuing output pqu
```





## CHAPTER 9

# Configuring Network QoS

---

- [About Network QoS, on page 141](#)
- [Prerequisites for Network QoS, on page 141](#)
- [Guidelines and Limitations for Network QoS, on page 141](#)
- [Configuring Network QoS Policies, on page 143](#)
- [Applying a Network QoS Policy on a System, on page 145](#)
- [Verifying the Network QoS, on page 146](#)

## About Network QoS

The network QoS policy defines the characteristics of QoS properties network wide. With a network QoS policy, you can configure the following:

- **Pause behavior**—You can decide whether a QoS group requires the lossless behavior. The lossless behavior is provided by using a priority flow control (PFC) mechanism that prevents packet loss during congestion. You can configure drop (frames with this value that can be dropped) and no drop (frames with this value that cannot be dropped). For the drop and no drop configuration, you also need to enable PFC per port. For more information about PFC, see the "Configuring Priority Flow Control" section.

## Prerequisites for Network QoS

The network QoS policy has the following prerequisites:

- You must be familiar with using modular QoS CLI.
- You are logged on to the device.

## Guidelines and Limitations for Network QoS

The network QoS policy has the following guidelines and limitations:

- PVLANS do not provide support for PVLAN QoS.
- **show** commands with the **internal** keyword are not supported.

- Changing the network QoS policy is a disruptive operation, and it can cause traffic drops on any or all ports.
- When enabling jumbo MTU, the default network QoS policy can support jumbo frames. Under the network QoS policy, the MTU is used only for buffer carving when no-drop classes are configured. No additional MTU adjustments are required under the network QoS policy to support jumbo MTU.
- NX-OS does not allow more than 2 no-drop classes per policy-map.
- Network QoS is not supported on the Cisco Nexus 9508 switch.
- Beginning with NX-OS 7.0(3)I7(4), you can enable a network QoS pause configuration per QoS class with the **pause pfc-cos cos-list receive** command for the receive-only PFC option. When specifying this option, PFC pause frame generation is disabled for a particular queueing policy class or queue.

A network QoS policy can have a maximum combined total of six asymmetric PFC (APFC) and PFC classes.




---

**Note** PFC is required to be enabled on a port to support APFC on that port.

---

- The following section describes the guidelines and limitations for Dynamic Packet Prioritization:
- Beginning with Cisco NX-OS Release 10.3(1)F, Network QoS and DPP are not supported on the Cisco Nexus 9800 platform switches.
- Beginning with Cisco NX-OS Release 10.4(1)F, QoS is supported on the Cisco Nexus 9332D-H2R switches.
- Beginning with Cisco NX-OS Release 10.4(2)F, QoS is supported on the Cisco Nexus 93400LD-H1 switches.
- Beginning with Cisco NX-OS Release 10.4(3)F, QoS is supported on the Cisco Nexus 9364C-H1 switches.

## Dynamic Packet Prioritization

Dynamic Packet Prioritization (DPP) prioritizes a configured number of packets of every new flow in a particular class of traffic is prioritized and sent through a configured class of traffic that DPP is mapped to.

When the number of packets in a flow reaches a specific threshold, prioritization ends and the subsequent packets in the flow go to the normal class.




---

**Note** Default number of packets is 120.

---

- Maximum number of packets:
  - Application Spine Engine (ASE2) enabled switches — 256
  - Leaf Spine Engine (LSE) enabled switches — 1024

Flows seen during a reload might not be prioritized by DPP. Flows are prioritized only after the forwarding path is re-established.

Beginning with Cisco NX-OS Release 9.3(3), Cisco Nexus 9300-GX platform switches support the DPP feature.

DPP uses an age-out timer to evict idle flows.




---

**Note** Default age-period is 5 msec.

---

The DPP feature is enabled on a queue using the **dpp set-qos-group** command under a network QoS policy configuration.




---

**Note** A DPP enabled queue cannot be a no-drop queue (For example, both pause pfc-cos and dpp cannot be enabled on the same queue.)

---

Configuring and applying the policy are as follows:

```
switch(config)# policy-map type network-qos dpp
switch(config-pmap-nqos)# class type network-qos c-8q-nq1
switch(config-pmap-nqos-c)# dpp set-qos-group 7

switch(config)# system qos
switch(config-sys-qos)# service-policy type network-qos dpp
```

Configuring the age-period and the max-num-packets are as follows:

```
switch(config)# hardware qos dynamic-packet-prioritization age-period 5000 usec
switch(config)# hardware qos dynamic-packet-prioritization max-num-pkts 120
```

## Configuring Network QoS Policies

You can configure a network QoS policy by following one of these methods:

- Predefined policies—You can apply a predefined network QoS policy that fits your requirement. By default, default-nq-policy is configured.
- User-defined policy—You can create a network QoS policy that conforms to one of the system-defined policies.

## Copying a Predefined Network QoS Policy

### SUMMARY STEPS

1. **qos copy policy-map type network-qos default-nq-policy {prefix *prefix* | suffix *suffix*}**
2. **show policy-map type network-qos my\_nq**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>qos copy policy-map type network-qos default-nq-policy</b> <b>{prefix <i>prefix</i>   suffix <i>suffix</i>}</b>  <b>Example:</b> <pre>switch# qos copy policy-map type network-qos default-nq-policy prefix my_nq</pre>	Copies a predefined network QoS policy and adds a suffix or prefix to its name. A prefix or suffix name can contain alphabetic, hyphen, or underscore characters, is case sensitive, and can be up to 40 characters.
<b>Step 2</b>	<b>show policy-map type network-qos my_nq</b>  <b>Example:</b> <pre>switch# show policy-map type network-qos my_nq</pre>	(Optional) Displays the type network-qos policy map.

## Configuring a User-Defined Network QoS Policy

## SUMMARY STEPS

1. **configure terminal**
2. **class-map type network-qos match-any *class-name***
3. **match qos-group *group***
4. **exit**
5. **policy-map type network-qos *policy-map-name***
6. **class type network-qos {*class-name* | **class-default**}**
7. **pause *group***

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>class-map type network-qos match-any <i>class-name</i></b>  <b>Example:</b> <pre>switch(config)# class-map type network-qos match-any c-nq2 switch(config-cmap-nqos)#</pre>	Configures the class map of the type network-qos and enters class-map mode. Class network-qos names are listed in previous System-Defined Type network-qos Class Maps table.
<b>Step 3</b>	<b>match qos-group <i>group</i></b>  <b>Example:</b> <pre>switch(config-cmap-nqos)# match qos-group 2</pre>	Specifies the QoS group to match. The range is from 0 to 3.
<b>Step 4</b>	<b>exit</b>  <b>Example:</b>	Exits class-map mode and enters global configuration mode.

	Command or Action	Purpose
	<pre>switch (config-cmap-nqos)# exit switch (config)#</pre>	
<b>Step 5</b>	<p><b>policy-map type network-qos</b> <i>policy-map-name</i></p> <p><b>Example:</b></p> <pre>switch(config)# policy-map type network-qos map2</pre>	Creates a policy map. The policy-map name can contain alphabetic, hyphen, or underscore characters, is case sensitive, and can be up to 40 characters.
<b>Step 6</b>	<p><b>class type network-qos</b> {<i>class-name</i>   <b>class-default</b>}</p> <p><b>Example:</b></p> <pre>switch(config-pmap-nqos)# class type network-qos c1-nq2</pre>	Refers to the class map of type network-qos as configured in Step 2.
<b>Step 7</b>	<p><b>pause</b> <i>group</i></p> <p><b>Example:</b></p> <pre>switch(config-pmap-nqos-c)# pause pfc-cos 2</pre>	<p>Specifies no-drop for the QoS group.</p> <p><b>Note</b> For 7.0(3)I1(1) and earlier, the no-drop queuing configuration is not supported in the network-qos policy for the Cisco Nexus 9300 platform.</p>

## Applying a Network QoS Policy on a System

You apply a network QoS policy globally on a system. Applying a network QoS policy also automatically applies the corresponding queuing policies.

### SUMMARY STEPS

1. **configure terminal**
2. **system qos**
3. **service-policy type network-qos** {*policy-map-name* | **default-nq-policy**}

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<p><b>configure terminal</b></p> <p><b>Example:</b></p> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<p><b>system qos</b></p> <p><b>Example:</b></p> <pre>switch (config)# system qos switch (config-sys-qos)#</pre>	Enters system qos mode.
<b>Step 3</b>	<p><b>service-policy type network-qos</b> {<i>policy-map-name</i>   <b>default-nq-policy</b>}</p> <p><b>Example:</b></p>	<p>Specifies the policy map to use as the service policy for the system.</p> <p><b>Note</b> To restore the system to the default network QoS service policy, use the <b>no</b> form of this command.</p>

	Command or Action	Purpose
	<pre>switch (config-sys-qos)# service-policy type network-qos map1</pre>	<p><b>Note</b> All Layer 4 class-maps under the network-qos policy-map must be configured before applying it under the system qos level.</p>

## Verifying the Network QoS

To display the policing configuration information, perform one of the following tasks:

Command	Purpose
<b>show class-map type network-qos</b>	Displays the type network-qos class maps.
<b>show policy-map type network-qos</b>	Displays the type network-qos policy maps.
<b>show policy-map system type network-qos</b>	Displays the active type network-qos class maps.





## CHAPTER 10

# Configuring Link Level Flow Control

- [Link Level Flow Control](#), on page 147
- [Guidelines and Limitations for Link Level Flow Control](#), on page 147
- [Information About Link Level Flow Control](#), on page 148
- [How to Configure Link Level Flow Control](#), on page 149
- [Configuration Examples for Link Level Flow Control](#), on page 151

## Link Level Flow Control

Link-level flow control is a congestion management technique that pauses data transmission until the congestion in the system is resolved. When a receiving device becomes congested, it communicates with the transmitter by sending a PAUSE frame. When the transmitting device receives a Pause frame it stops the transmission of any further data frames for a short period of time. The link-level flow control feature applies to all the traffic on the link. The transmit and receive directions are separately configurable. By default, link-level flow control is disabled for both directions.

## Guidelines and Limitations for Link Level Flow Control

Link Level Flow Control (LLFC) has the following configuration guidelines and limitations:

- **show** commands with the **internal** keyword are not supported.
- Changing or configuring LLFC on FEX HIF or FEX HIF PO interfaces is not supported.
- LLFC is supported on Cisco Nexus 9500 platform switches with Network Forwarding Engine (NFE) (and Cisco Nexus 3164Q switch with NFE).
- The 100G Cisco Nexus 9408PC-CFP2 line card does not support LLFC.
- Ethernet interfaces do not auto detect the LLFC capability. LLFC must be configured explicitly.
- Enabling LLFC requires a part of the buffer to be reserved. This reservation reduces the available shared buffer space.
- Data Center Bridging Exchange Protocol (DCBX) is not supported.
- Configuration time quanta of the pause frames is not supported.
- On each Ethernet interface, the switch can enable either PFC or LLFC, but not both.



---

**Note** When both PFC and LLFC are enabled, LLFC is selected.

---

- Configuring LLFC on an interface causes the interface to flap which results in a momentary traffic loss.
- When a no-drop QoS group is configured, you must ensure that the packets received, on ports that do not have flow control send-on configured, are not classified to a no-drop QoS group.
- Do not enable Weighted Random Early Detection (WRED) on a no-drop class because it can cause an egress queue drop.
- We recommend the use of default buffer sizes for no-drop classes because if the buffer size is specified through the CLI, it allocates the same buffer size for all ports irrespective of the link speed, and MTU size.
- We recommend changing the LLFC configuration when there is no traffic, otherwise packets already in the MMU of the system may not get the expected treatment.
- LLFC and PFC are supported on Cisco Nexus 9300-X Cloud Scale platform switches and 9500 Series Cloud Scale modular switches.
- 3232C does not support a combination of cut-through and LLFC enabled ports. Cut-through and LLFC are mutually exclusive and will work without the presence of the other feature. Post 9.3(8) release, on a cut-through enabled switch, if LLFC is enabled on a port, that port will operate in store and forward mode.
- From Cisco NX-OS Release 10.4(1)F, LLFC is supported on Cisco Nexus C9348GCFX3.
- From Cisco NX-OS Release 10.4(2)F, LLFC is supported on Cisco Nexus C93108TC-FX3 switch.
- From Cisco NX-OS Release 10.4(1)F, LLFC and LLFCWD features are not supported on Cisco Nexus C9348GC-FX3PH.

## Information About Link Level Flow Control

### Link Level Flow Control on Interfaces

When link level flow control is configured the system changes the interface state to Down if the specified interface is in UP state and then applies the flow control configuration. After the configuration is successfully applied to the interface, the system restores the interface to the UP state.

### Link Level Flow Control on Ports

During a port shutdown event, the flow-control settings on an interface are retained, however no traffic is received or transmitted on the link. During a port startup event the flow-control settings are reinstated on to the hardware.

## Mismatched Link Level Flow Control Configurations

The transmit and receive directions can be configured separately, and each device on the network can have a different Link Level Flow Control (LLFC) configuration. The following table describes how devices with mis-matched configurations interact.

Switch A	Switch B	Description
LLFC configured to receive and transmit PAUSE frames.	LLFC configured to receive PAUSE frames.	Switch A can transmit 802.3x PAUSE frames and honor 802.3x PAUSE frames. Switch B can only receive 802.3x PAUSE frames.
LLFC configured to receive and transmit PAUSE frames.	LLFC configured to transmit PAUSE frames.	Switch A can transmit 802.3x PAUSE frames and honor 802.3x PAUSE frames. Switch B can transmit 802.3x PAUSE frames but will drop all received PAUSE frames.

## How to Configure Link Level Flow Control

### Configuring Link Level Flow Control Receive

#### SUMMARY STEPS

1. `configure terminal`
2. `interface ethernet 1/1`
3. `flowcontrol receive on`
4. `exit`

#### DETAILED STEPS

	Command or Action	Purpose
Step 1	<code>configure terminal</code> <b>Example:</b>  <code>Device# configure terminal</code>	Enters global configuration mode.
Step 2	<code>interface ethernet 1/1</code> <b>Example:</b>  <code>Device(config)# interface ethernet 1/1</code>	Configures an interface type and enters interface configuration mode.
Step 3	<code>flowcontrol receive on</code> <b>Example:</b>	Enables the interface to receive and process pause frames.

	Command or Action	Purpose
	<code>Device(config-if)# flowcontrol receive on</code>	
<b>Step 4</b>	<b>exit</b> <b>Example:</b> <code>Device(config-if)# exit</code>	Exits interface configuration mode.

## Configuring Link Level Flow Control Transmit

To configure link-level flow control transmit on an interface, you enable flow control on the interface, configure a network-qos type QoS policy to enable a no-drop QoS group, and apply a qos type QoS policy to classify the traffic that requires no-drop behavior to the no-drop class.

You must ensure that bandwidth is allocated for the No-Drop QoS class using a queuing policy when you define a no-drop class. For more information, see the "Configuring Type Queuing Policies" section.



**Note** When a no-drop QoS Group is configured you must ensure that packets received on ports that do not have flow-control send-on configured, are not classified to a no-drop QoS group. This is required as any ingress port that does not have flow-control send-on configured, can not generate a link level pause frame and there is no way to request the transmitting device to stop the transmission. Therefore, if flow-control send-on is not configured on all the interfaces you should not use a system policy to classify the packets to the no-drop QoS group. Instead, you should apply an interface QoS policy to the interfaces that having flow-control send-on enabled.

### SUMMARY STEPS

1. **configure terminal**
2. **interface ethernet 1/1**
3. **flowcontrol send on**
4. **exit**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <code>Device# configure terminal</code>	Enters global configuration mode.
<b>Step 2</b>	<b>interface ethernet 1/1</b> <b>Example:</b> <code>Device(config)# interface ethernet 1/1</code>	Configures an interface type and enters interface configuration mode.

	Command or Action	Purpose
Step 3	<b>flowcontrol send on</b> <b>Example:</b> Device(config-if)# flowcontrol transmit on	Enables the interface to send pause frames to remote devices.
Step 4	<b>exit</b> <b>Example:</b> Device(config-if)# exit	Exits interface configuration mode and returns to global configuration mode.

## Configuration Examples for Link Level Flow Control

### Example: Configuring Link Level Flow Control Receive and Send

#### Configuring Link Level Flow Control Receive and Send

The following examples show how to configure Link Level Flow Control receive and send on the device.

- When only LLFC receive is enabled, no-drop class does not need to be configured on the system network-qos.

```
Device# configure terminal
Device(config)# interface ethernet 1/1
Device(config-if)# flowcontrol receive on
Device(config-if)# exit
```

- When both LLFC receive and send are enabled, no-drop class needs to be configured on the system network-qos. (Refer to the Configuring a No-Drop Policy example for information about configuring the no-drop class.)

```
Device# configure terminal
Device(config)# interface ethernet 1/1
Device(config-if)# flowcontrol receive on
Device(config-if)# flowcontrol send on
Device(config-if)# exit
```

- When only LLFC send is enabled, no-drop class needs to be configured on the system network-qos. (Refer to the Configuring a No-Drop Policy example for information about configuring the no-drop class.)

```
Device# configure terminal
Device(config)# interface ethernet 1/1
Device(config-if)# flowcontrol send on
Device(config-if)# exit
```





## CHAPTER 11

# Configuring Priority Flow Control

---

- [About Priority Flow Control, on page 153](#)
- [Prerequisites for Priority Flow Control, on page 155](#)
- [Guidelines and Limitations for Priority Flow Control, on page 155](#)
- [Default Settings for Priority Flow Control, on page 158](#)
- [Configuring Priority Flow Control, on page 158](#)
- [Enabling Priority Flow Control on a Traffic Class, on page 159](#)
- [Configuring a Link Level Flow Control Watchdog and Priority Flow Control Watchdog, on page 163](#)
- [Configuring Pause Buffer Thresholds and Queue Limit Using Ingress Queuing Policy, on page 168](#)
- [Verifying the Priority Flow Control Configuration, on page 170](#)
- [Configuration Examples for Priority Flow Control, on page 170](#)

## About Priority Flow Control

Priority Flow Control (PFC) is used in lossless Ethernet to control the flow of data from a link partner for specific traffic priorities or classes specified as 'no-drop'. PFC Pause frames are transmitted to the link partner when certain queue thresholds are reached for a specific class or priority. PFC Pause frames are only local to the specific link but when traffic is suspended the congestion can cause PFC Pause frames to be generated on other links spreading the congestion. This can cause traffic for the priority or class to be suspended throughout the entire network for a time.

## About Priority Flow Control Watchdog

Priority Flow Control Watchdog (PFCWD) is a mechanism designed to detect and resolve any PFC storms (queue-stuck condition) in the network. You can configure a PFC watchdog interval to detect whether packets in a no-drop queue are drained within a specified time period. When this time period is exceeded, all outgoing packets are dropped on interfaces that match the PFC queue that is not being drained.



---


**Note** The PFC watchdog feature is supported only for no-drop queues.

---

## Workflow of Priority Flow Control Watchdog

- Monitors the PFC-enabled queues (no-drop queues) to identify the reception of an excessive number of PFC pause frames in a given interval (Watchdog interval).
- Monitors when an excessive number of PFC frames are received and traffic on the corresponding queues is halted for a specified time interval (auto + fixed multiplier).
- Initiates the shutdown timer and changes the queue's state to **wait-to-shutdown**.
- Drops all data packets when the queue transitions to a **shut** state if interface multiplier time exceeds (if the interface multiplier is configured) or shutdown multiplier timer expire exceeds (if the interface multiplier is not configured).
- Checks the queue for PFC frames and whether the traffic in the queue is still stuck at regular intervals (poll timer of 100ms) during the shutdown interval.
  - If traffic is stuck in the queue as PFC packets continue to arrive, the queue stays in the drop or shutdown state.
  - If the traffic is not stuck because the queue didn't receive any PFC frames, the queue reverts to the monitored state.
- Checks if the queue is stuck because of PFC frames when the traffic is no longer stuck at regular intervals, the auto-restore timer starts.
  - If the queue receives PFC frames during the last auto-restore interval (poll timer \* auto-restore multiplier), the auto-restore timer (secs) is reset at its expiration.
  - If the queue receives no PFC frames during the last auto-restore interval, the watchdog module restores the queue, and traffic resumes.



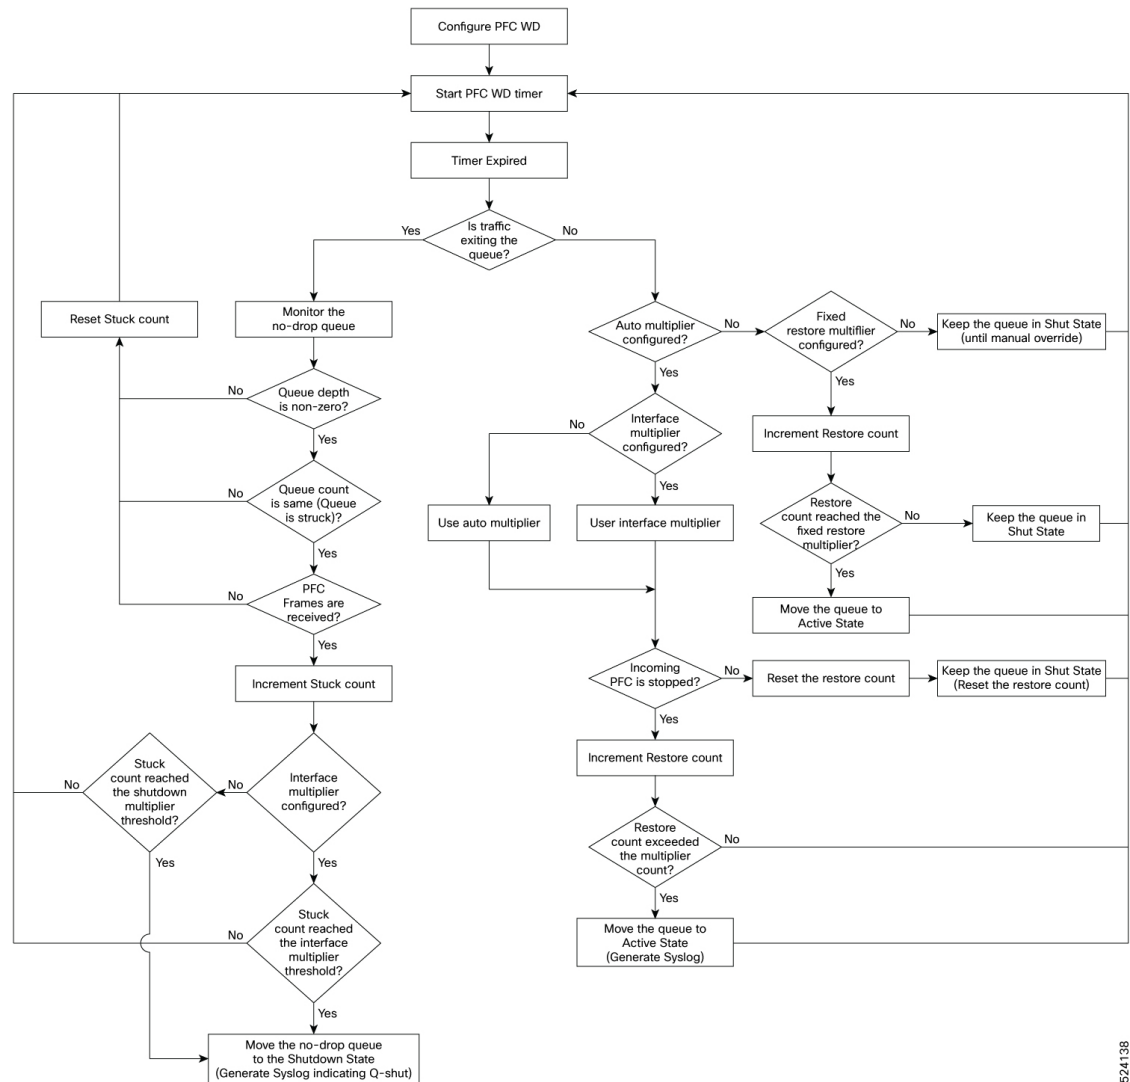

524138

# Prerequisites for Priority Flow Control

PFC has the following prerequisites:

- You must be familiar with using modular QoS CLI.
- You are logged on to the device.

# Guidelines and Limitations for Priority Flow Control



**Note** For scale information, see the release-specific *Cisco Nexus 9000 Series NX-OS Verified Scalability Guide*.

PFC has the following configuration guidelines and limitations:

- If a QoS ACL is configured with DSCP match "X" for a lossless queue, all packets (IP, TCP, UDP, etc.) with DSCP "X" are mapped to the lossless queue.
- The following guidelines apply to Cisco Nexus 9300-GX platform switches:
  - Buffer allocation is based on the configuration irrespective of the operational state of the port.
  - Buffers are allocated for no-drop operation when PFC operation mode turns on. No-drop buffers continue to remain allocated even if the interface goes down and the PFC operation mode remains on.
- Adding the "pause buffer size threshold" configuration is optional for cable lengths that are less than 100 meters and it does need not to be configured.
- Input queuing policy maps cannot have pause buffer and priority/bandwidth together.
- For cable lengths greater than 100m, the "pause buffer size threshold" configuration is mandatory and it is required as part of the QoS policy configuration.
- If PFC is enabled on a port or a port channel, it does not cause a port flap.
- PFC configuration enables PFC in both the send (Tx) and receive (Rx) direction.
- Configuration time quanta of the pause frames is not supported.
- The configuration does not support pausing selected streams that are mapped to a particular traffic-class queue. All flows that are mapped to the class are treated as no-drop. It blocks out scheduling for the entire queue, which pauses traffic for all the streams in the queue. To achieve lossless service for a no-drop class, we recommend that you have only the no-drop class traffic on the queue.
- When a no-drop class is classified based on 802.1p CoS x and assigned an internal priority value (qos-group) of y, we recommend that you use the internal priority value x to classify traffic on 802.1p CoS only, and not on any other field. The packet priority that is assigned is x if the classification is not based on CoS, which results in packets of internal priority x and y to map to the same priority x.
- The PFC feature supports up to three no-drop classes of any maximum transmission unit (MTU) size. However, there is a limit on the number of PFC-enabled interfaces, based on the following factors:
  - MTU size of the no-drop class
  - Number of 10G and 40G ports
- You can define the upper limit of any MTU in the system using the **system jumbomtu** command. The MTU range is from 1500 to 9216 bytes, and the default is 9216 bytes.
- The interface QoS policy takes precedence over the system policy. PFC priority derivation also happens in the same order.
- Ensure that you apply the same interface-level QoS policy on all PFC-enabled interfaces for both ingress and egress.




---

**Caution** Irrespective of the PFC configuration, we recommend that you stop traffic before applying or removing a queuing policy that has strict-priority levels at the interface level or the system level.

---

- To achieve end-to-end lossless service over the network, we recommend that you enable PFC on each interface through which the no-drop class traffic flows (Tx/Rx).
- We recommend that you change the PFC configuration when there is no traffic. Otherwise, packets already in the Memory Management Unit (MMU) of the system may not get the expected treatment.
- We recommend that you use default buffer sizes for no-drop classes or configure different input queuing policies suitable to 10G and 40G interfaces and the no-drop class MTU size. If the buffer size is specified through the CLI, it allocates the same buffer size for all ports irrespective of the link speed and MTU size. Applying the same pause buffer-size on 10G and 40G interfaces is not supported.
- Do not enable WRED on a no-drop class because it results in drops in the egress queue.
- Dynamic load balancing cannot be enabled for internal links with PFC. Disable DLB and enable RTAG7 load-balancing for internal links with the port-channel load-balance internal rtag7 command.
- The dynamic load balancing (DLB) based hashing scheme is enabled by default on all internal links of a linecard. When DLB is enabled, no-drop traffic may experience an out-of-order packet delivery when congestion on internal links occurs and PFC is applied. If applications on the system are sensitive to out-of-order delivery, you can adjust for this event by disabling DLB at the qos-group level. Disable DLB by using the **set dlb-disable** action in the QoS policy-maps and the **set qos-group** action for no-drop classes.

In the following example, assume that qos-group 1 is a no-drop class. DLB is disabled for this no-drop class by adding the **set dlb-disable** action and the **set qos-group** action.

```
switch(config)# policy-map p1
switch(config-pmap-qos)# class c1
switch(config-pmap-c-qos)# set qos-group 1
switch(config-pmap-c-qos)# set dlb-disable
switch(config-pmap-c-qos)# end
switch# show policy-map p1
```

```
Type qos policy-maps
=====
```

```
policy-map type qos p1
  class c1
    set qos-group 1
    set dlb-disable
```



**Note** The following Cisco Nexus platform switches do not support the **set-dlb-disable** command:

- Cisco Nexus 9200 platform switches
- Cisco Nexus 9300-EX/FX/FX2 platform switches
- Cisco Nexus 9500 platform switches with -EX and -FX line cards

- For VLAN-tagged packets, priority is assigned based on the 802.1p field in the VLAN tag and takes precedence over the assigned internal priority (qos-group). DSCP or IP access-list classification cannot be performed on VLAN-tagged frames.

- For non VLAN-tagged frames, priority is assigned based on the **set qos-group** action provided by the ingress QoS policy. Classification is based on a QoS policy-allowed match condition such as precedence, DSCP, or access-list. Ensure that the **pfc-cos** value that is provided in the network-qos policy for this class is the same as the **qos-group** value in this case.
- PFC is not supported for the Cisco Nexus 9408PC-CFP2 line card on Cisco Nexus 9500 platform switches.
- Link level flow control and PFC are supported on Cisco Nexus 9300 Series switches and line cards that contain the ALE (Application Leaf Engine).
- PFC on mode is used to support the hosts that support PFC but do not support the Data Center Bridging Capability Exchange Protocol (DCBXP).
- DCBXP is supported on the following platforms:
  - Cisco Nexus 9200, 9300-EX, and 9300-FX2 platform switches
  - Cisco Nexus 9332C, 9332PQ, 9364C, 9372PX, 9372PX-E, and 9396PX switches
- Only an exact match of the no-drop CoS is considered as a successful negotiation of PFC by the DCBXP.
- The **no lldp tlv-select dcbxp** command is enhanced so that PFC is disabled for interfaces on both sides of back-to-back switches.
- From Cisco NX-OS Release 10.4(1)F, PFC features are supported on Cisco Nexus C9348GCFX3.
- From Cisco NX-OS Release 10.4(1)F, PFC and PFCWD features are not supported on Cisco C9348GC-FX3PH.
- BUM traffic is not supported in no-drop PFC queues. Avoid marking multicast traffic as no-drop and sending it to these queues.

## Default Settings for Priority Flow Control

Table 40: Default PFC Setting

Parameter	Default
PFC	Auto

## Configuring Priority Flow Control

You can configure PFC on a per-port basis to enable the no-drop behavior for the CoS as defined by the active network QoS policy. PFC can be configured in one of these modes:

- **auto**—Enables the no-drop CoS values to be advertised by the DCBXP and negotiated with the peer. A successful negotiation enables PFC on the no-drop CoS. Any failures because of a mismatch in the capability of peers causes the PFC not to be enabled. (Cisco NX-OS Release 7.0(3)I3(1) and later)
- **on**—Enables PFC on the local port regardless of the capability of the peers.
- **off**—Disables PFC on the local port.



**Note** You can use the **priority-flow-control override-interface mode off** command to globally disable PFC on all interfaces regardless of the current interface configuration. This command, which is meant to be used during troubleshooting, allows you to quickly disable PFC without having to disable PFC on each interface. It is supported beginning with Cisco NX-OS Release 7.0(3)I4(2) and only for Cisco Nexus 9200 platform switches, Cisco Nexus 93108TC-EX and 93180YC-EX switches, and Cisco Nexus 9508 switches with the Cisco Nexus 9732C-EX line card.

Beginning with Cisco NX-OS Release 7.0(3)I4(5), this feature is supported on Cisco Nexus 9508 switches with Cisco Nexus 9636PQ line cards and Cisco Nexus 3164Q switches.

## SUMMARY STEPS

1. **configure terminal**
2. **interface** *type slot/port*
3. **priority-flow-control mode** [auto | off | on]
4. **show interface priority-flow-control**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
Step 2	<b>interface</b> <i>type slot/port</i> <b>Example:</b> <pre>switch(config)# interface ethernet 2/5 switch(config-if)#</pre>	Enters interface mode on the interface specified.
Step 3	<b>priority-flow-control mode</b> [auto   off   on] <b>Example:</b> <pre>switch(config-if)# priority-flow-control mode on switch(config-if)#</pre>	Sets PFC to the on mode.
Step 4	<b>show interface priority-flow-control</b> <b>Example:</b> <pre>switch# show interface priority-flow-control</pre>	(Optional) Displays the status of PFC on all interfaces.

# Enabling Priority Flow Control on a Traffic Class

You can enable PFC on a particular traffic class.

## SUMMARY STEPS

1. **configure terminal**
2. **class-map type qos match { all | any } class-name**
3. **match cos cos-value**
4. **match dscp dscp-value**
5. **exit**
6. **policy-map type qos policy-name**
7. **class class-name**
8. **set qos-group qos-group-value**
9. **exit**
10. **exit**
11. **policy-map type network-qos policy-name**
12. **class type network-qos class-name**
13. **pause pfc-cos value [ receive ]**
14. **exit**
15. **exit**
16. **system qos**
17. **service-policy type network-qos policy-name**
18. **exit**
19. **interface ethernet slot / number**
20. **priority-flow-control mode { auto | on | off }**
21. **service-policy type qos input policy-name**
22. **exit**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>class-map type qos match { all   any } class-name</b> <b>Example:</b> <pre>switch(config)# class-map type qos cl switch(config-cmap-qos)#</pre>	Creates a named object that represents a class of traffic. Class-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.  <b>match { all   any }</b> : Default is <b>match all</b> (if multiple matching statements are present all of them must be matched).
<b>Step 3</b>	<b>match cos cos-value</b> <b>Example:</b> <pre>switch(config-cmap-qos)# match cos 2 switch(config-cmap-qos)#</pre>	Specifies the CoS value to match for classifying packets into this class. You can configure a CoS value in the range of 0 to 7.

	Command or Action	Purpose
Step 4	<b>match dscp</b> <i>dscp-value</i> <b>Example:</b> <pre>switch(config-cmap-qos)# match dscp 3 switch(config-cmap-qos)#</pre>	Specifies the DSCP value to match for classifying packets into this class. You can configure a DSCP value in the range of 0 to 63 or the listed values.
Step 5	<b>exit</b> <b>Example:</b> <pre>switch(config-cmap-qos)# exit switch(config)#</pre>	Exits class-map mode and enters global configuration mode.
Step 6	<b>policy-map type qos</b> <i>policy-name</i> <b>Example:</b> <pre>switch(config)# policy-map type qos p1 switch(config-pmap-qos)#</pre>	Creates a named object that represents a set of policies that are to be applied to a set of traffic classes. Policy-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.
Step 7	<b>class</b> <i>class-name</i> <b>Example:</b> <pre>switch(config-pmap-qos)# class c1 switch(config-pmap-c-qos)#</pre>	Associates a class map with the policy map and enters the configuration mode for the specified system class. <b>Note</b> The associated class map must be the same type as the policy map type.
Step 8	<b>set qos-group</b> <i>qos-group-value</i> <b>Example:</b> <pre>switch(config-pmap-c-qos)# set qos-group 3 switch(config-pmap-c-qos)#</pre>	Configures one or more qos-group values to match on for classification of traffic into this class map. There is no default value.
Step 9	<b>exit</b> <b>Example:</b> <pre>switch(config-pmap-c-qos)# exit switch(config-pmap-qos)#</pre>	Exits the system class configuration mode and enters policy-map mode.
Step 10	<b>exit</b> <b>Example:</b> <pre>switch(config-pmap-qos)# exit switch(config)#</pre>	Exits policy-map mode and enters global configuration mode.
Step 11	<b>policy-map type network-qos</b> <i>policy-name</i> <b>Example:</b> <pre>switch(config)# policy-map type network-qos pfc-qos switch(config-pmap-nqos)#</pre>	Creates a named object that represents a set of policies that are to be applied to a set of traffic classes. Policy-map names can contain alphabetic, hyphen, or underscore characters, are case sensitive, and can be up to 40 characters.
Step 12	<b>class type network-qos</b> <i>class-name</i> <b>Example:</b> <pre>switch(config-pmap-nqos)# class type network-qos nw-qos3 switch(config-pmap-nqos-c)#</pre>	Associates a class map with the policy map, and enters the configuration mode for the specified system class. <b>Note</b> The associated class map must be the same type as the policy map type.

	Command or Action	Purpose
<b>Step 13</b>	<p><b>pause pfc-cos</b> <i>value</i> [ <b>receive</b> ]</p> <p><b>Example:</b></p> <pre>switch(config-pmap-nqos-c)# pause pfc-cos 3 receive switch(config-pmap-nqos-c)#</pre>	<p>PFC sends a pause frame that indicates which CoS value needs to be paused. Only PFC receive is enabled for the list of PCF CoS values.</p> <p><b>receive:</b> When this optional keyword is used, PFC only receives and honors pause frames. PFC will never send pause frames. This is known as "Asymmetric PFC".</p> <p><b>Note</b> Although not required, the <b>pause pfc-cos value</b> should match the <i>qos-group-value</i> in the <b>set qos-group</b> command. See the <b>set qos-group</b> command in steps 8 above.</p>
<b>Step 14</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>switch(config-pmap-nqos-c)# exit switch(config-pmap-nqos-c)#</pre>	Exits configuration mode and enters policy-map mode.
<b>Step 15</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>switch(config-pmap-nqos)# exit switch(config)#</pre>	Exits policy-map mode and enters global configuration mode.
<b>Step 16</b>	<p><b>system qos</b></p> <p><b>Example:</b></p> <pre>switch(config)# system qos switch(config-sys-qos)#</pre>	Enters system class configuration mode.
<b>Step 17</b>	<p><b>service-policy type network-qos</b> <i>policy-name</i></p> <p><b>Example:</b></p> <pre>switch(config-sys-qos)# service-policy type network-qos pfc-qos</pre>	Applies the policy map of type network-qos at the system level or to the specific interface.
<b>Step 18</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>switch(config-sys-qos)# exit switch(config)#</pre>	Exits policy-map mode and enters global configuration mode.
<b>Step 19</b>	<p><b>interface ethernet</b> <i>slot / number</i></p> <p><b>Example:</b></p> <pre>switch(config)# interface ethernet 1/1 switch(config-if)#</pre>	Enters the ethernet interface configuration mode for the selected slot and chassis number.
<b>Step 20</b>	<p><b>priority-flow-control mode</b> { <b>auto</b>   <b>on</b>   <b>off</b> }</p> <p><b>Example:</b></p> <pre>switch(config-if)# priority-flow-control mode on switch(config-if)#</pre>	Enables the priority flow control policy for the interface.



	Command or Action	Purpose
Step 21	<b>service-policy type qos input <i>policy-name</i></b> <b>Example:</b> <pre>switch(config-if)# service-policy type qos input p1</pre>	Adds classification to the interface ensuring that packets matching the previously configured CoS or DSCP values are classified in the correct QoS group.
Step 22	<b>exit</b> <b>Example:</b> <pre>switch(config-if)# exit switch(config)#</pre>	Exits the ethernet interface mode and enters the global configuration mode.

## Configuring a Link Level Flow Control Watchdog and Priority Flow Control Watchdog

Link Level Flow Control Watchdog (LLFCWD) is enabled globally by default. LLFCWD on an interface is enabled automatically when PFC and PFCWD are configured on the interface. If an LLFC packet is seen on a PFC/PFCWD configured interface that doesn't have LLFC configured, the LLFC watchdog is triggered.

PFCWD interval and PFCWD multiplier CLI commands are used to configure the LLFCWD interval and multipliers. Use this procedure to configure the LLFC watchdog interval and the multiplier used to restore the no-drop queue.



**Note** PFC watchdog is not supported on Cisco Nexus 9500 platform switches with Cisco Nexus 9400, 9500 and 9600 line cards, with the exception of Cisco Nexus 9636PQ line cards (that support the PFC watchdog feature).



**Note** Ingress drops provide statistics of PFC watchdog dropped packets on the front panel ports.



**Note** For Cisco Nexus 9200 platform switches, Cisco Nexus 9300-EX/FX/FX2 platform switches, and Cisco Nexus 9500 platform switches with -EX or -FX line cards, one of the following calculations is performed to determine when the queue is moved to the shutdown state:

If the interface multiplier is configured, the following calculation is used:

**priority-flow-control watch-dog interval *value* \* priority-flow-control watch-dog internal-interface-multiplier *multiplier***

If the interface multiplier is not configured, the watchdog shutdown multiplier is used instead:

**priority-flow-control watch-dog interval *value* \* priority-flow-control watch-dog shutdown-multiplier *multiplier***

### Before you begin

Consider the following before configuring the Link Level Flow Control Watchdog Interval:

- Link Level Flow Control Watchdog is supported on the following Cisco Nexus 9000 Series platform switches and line cards:
  - N9K-C9232C
  - N9K-C9236C
  - N9K-C92304QC
  - N9K-X9736C-EX
  - N9K-X9732C-EX
  - N9K-X9732C-EXM
  - N9K-X97160YC-EX
  - N9K-C93180YC-FX3S
  - N9K-C93108TC-FX3P
- PFC must be enabled at the interface. PFCWD must be enabled at the interface and globally. LLFC shouldn't be configured on the same interface. For more information on PFC, see [Configuring Priority Flow Control, on page 153](#).




---

**Note** PFC watchdog uses a command to send a syslog message indicating that the queue is "stuck" (**priority-flow-control watch-dog-interval on disable-action**). If this command is invoked on a PFC interface, the queue isn't shut down but instead, the syslog message is generated. When the LLFC watchdog feature is enabled, and if a link level flow control packet is received on an interface, the queue is shut even with the **disable-action** command for PFC watchdog is enabled.

---

- Auto-restore and fixed restore should never be configured to 0.
- If LLFC is enabled on the interface, then LLFC WD is disabled.

### SUMMARY STEPS

1. **configure terminal**
2. **priority-flow-control auto-restore multiplier** *value*
3. **priority-flow-control fixed-restore multiplier** *value*
4. **priority-flow-control watch-dog-interval** {on | off}
5. **priority-flow-control watch-dog interval** *value*
6. **priority-flow-control watch-dog shutdown-multiplier** *multiplier*
7. (Optional) **priority-flow-control watch-dog internal-interface-multiplier** *multiplier*
8. (Optional) **show queuing pfc-queue** [*interface interface-list*] [*module module*] [*detail*]
9. (Optional) **show queuing llfc-queue** [*interface interface-list*] [*module module*] [*detail*]
10. (Optional) **clear queuing pfc-queue** [*interface*] [*ethernet|ii*] [*intf-name*]

- 11. (Optional) **clear queuing llfc-queue** [interface *interface-list*] [module *module*]
- 12. (Optional) **priority-flow-control recover interface** [ethernet|ii] [intf-name] [qos-group <0-7>]

**DETAILED STEPS**

	Command or Action	Purpose
Step 1	<p><b>configure terminal</b></p> <p><b>Example:</b></p> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
Step 2	<p><b>priority-flow-control auto-restore multiplier</b> <i>value</i></p>	<p>Configures a value for the auto-restore multiplier, which is calculated by multiplying the set PFC WD interval time. The range is from 0 to 100.</p> <p><b>Note</b> The auto-restore multiplier should never be configured to 0.</p> <p>When the LLFC watchdog no-drop queue is restored, a system logging message entry is created to record the conditions of the queue. The following is an example of the message:</p> <pre>Error Message TAHUSD-SLOT#-2- TAHUSD_SYSLOG_LLFCWD_QUEUE_RESTORED : [chars] Description : NO DROP Queue Restored due to LLFC WatchDog timer expiring message</pre> <p>This command is applicable for both LLFCWD and PFCWD.</p>
Step 3	<p><b>priority-flow-control fixed-restore multiplier</b> <i>value</i></p>	Configures a value for the PFC fixed-restore multiplier.
Step 4	<p><b>priority-flow-control watch-dog-interval</b> {on   off}</p> <p><b>Example:</b></p> <pre>switch(config)# priority-flow-control watch-dog-interval on</pre>	<p>Globally enables or disables the PFC watchdog interval for all interfaces. This command should be configured at global and also at an interface.</p> <p>See the following example of the command configured at global:</p> <pre>switch(config)# priority-flow-control watch-dog-interval on</pre> <p>See the following example of the command configured at an interface:</p> <pre>switch(config)# interface ethernet 7/5 switch(config-if)# priority-flow-control watch-dog-interval on</pre>

	Command or Action	Purpose
		<p><b>Note</b> You can use this same command in interface configuration mode to enable or disable the PFC watchdog interval for a specific interface.</p> <p>This command is applicable for both LLFCWD and PFCWD.</p> <p>See the following example of the command configured at an interface with a specific shutdown multiplier value (Cisco NX-OS Release 7.0(3)I7(4) and later releases):</p> <pre>switch(config)# int e1/36 switch(config-if)# priority-flow-control watch-dog-interval on interface-multiplier 10</pre> <p><b>Note</b> Range of values for interface-multiplier is 1 - 10.</p>
<b>Step 5</b>	<p><b>priority-flow-control watch-dog interval</b> <i>value</i></p> <p><b>Example:</b></p> <pre>switch(config)# priority-flow-control watch-dog interval 200</pre>	<p>Specifies the watchdog interval value of all queues and ports for which this configuration is enabled. The range is from 100 to 1000 milliseconds.</p> <p><b>Note</b> This command is applicable for both LLFCWD and PFCWD.</p>
<b>Step 6</b>	<p><b>priority-flow-control watch-dog shutdown-multiplier</b> <i>multiplier</i></p> <p><b>Example:</b></p> <pre>switch(config)# priority-flow-control watch-dog shutdown-multiplier 5</pre>	<p>Specifies when to declare the PFC queue as stuck shutdown multiplier * poll interval. The range is from 1 to 10, and the default value is 1.</p> <p><b>Note</b> When the PFC queue is declared as stuck, a syslog entry is created to record the conditions of the PFC queue. (Cisco NX-OS Release 7.0(3)I7(4) and later releases)</p>
<b>Step 7</b>	<p>(Optional) <b>priority-flow-control watch-dog internal-interface-multiplier</b> <i>multiplier</i></p> <p><b>Example:</b></p> <pre>switch(config)# priority-flow-control watch-dog internal-interface-multiplier 5</pre>	<p>Configures a PFC watchdog poll-interval multiplier for HiGig™ interfaces. The range is from 0 to 10, and the default value is 2. A value of 0 disables this feature on HiGig™ interfaces.</p> <p><b>Note</b> This command is only applicable for EoR switches.</p>
<b>Step 8</b>	<p>(Optional) <b>show queuing pfc-queue</b> [<i>interface interface-list</i>] [<i>module module</i>] [<i>detail</i>]</p> <p><b>Example:</b></p> <pre>switch(config)# sh queuing pfc-queue interface ethernet 1/1 detail</pre>	<p>Displays the PFCWD statistics.</p>
<b>Step 9</b>	<p>(Optional) <b>show queuing llfc-queue</b> [<i>interface interface-list</i>] [<i>module module</i>] [<i>detail</i>]</p> <p><b>Example:</b></p>	<p>Displays the LLFCWD statistics. See the output example at the end of this procedure.</p>

	Command or Action	Purpose
	switch(config)# show queuing llfc-queue interface ethernet 1/1 detail	
<b>Step 10</b>	(Optional) <b>clear queuing pfc-queue [interface] [ethernet ii] [intf-name]</b>  <b>Example:</b> switch(config)# clear queuing pfc-queue interface ethernet 1/1	Clears the environment variable PFCWD statistics.
<b>Step 11</b>	(Optional) <b>clear queuing llfc-queue [interface interface-list] [module module]</b>  <b>Example:</b> switch(config)# clear queuing llfc-queue interface ethernet 1/1	Clears the LLFCWD queue statistics.
<b>Step 12</b>	(Optional) <b>priority-flow-control recover interface [ethernet ii] [intf-name] [qos-group &lt;0-7&gt;]</b>  <b>Example:</b> switch# priority-flow-control recover interface ethernet 1/1 qos-group 3	Recovers the interface manually.

**Example**

Beginning with Cisco NX-OS Release 7.0(3)I6(1), on Cisco Nexus 9200, 9300, 9300-EX, and 9500 platform switches, using the detail option, you can account for Ingress drops.

```
| QOS GROUP 1 [Active] PFC [YES] PFC-COS [1]
+-----+
|                               | Stats |
+-----+
|                               |      | |
|                               | Shutdown| 0|
|                               | Restored| 0|
|                               | Total pkts drained| 0|
|                               | Total pkts dropped| 0|
|                               | Total pkts drained + dropped| 0|
|                               | Aggregate pkts dropped| 0|
|                               | Total Ingress pkts dropped| 0| ===>>>>Ingress
|                               | Aggregate Ingress pkts dropped| 0|===>>>>Ingress
+-----+
```

The following example shows detail output of the **show queuing llfc-queue** command for an Ethernet 1/1 interface:

```
switch# show queuing llfc-queue interface 1/1 detail

slot 1
=====
+-----+
Global watch-dog interval [Enabled]
+-----+
+-----+
Global LLFC watchdog configuration details

LLFC watchdog poll interval           : 100 ms
LLFC watchdog auto-restore multiplier : 10
```

```

LLFC watchdog fixed-restore multiplier      : 0
-----+
+-----+
Ethernet1/1 Interface LLFC watchdog: [Enabled]
-----+
+-----+
| QOS GROUP 6 [Active] LLFC [YES] LLFC-COS [6]
-----+
|                               | Stats |
+-----+-----+
|                               | Shutdown|      1|
|                               | Restored|      1|
|           Total pkts drained|          554|
|           Total pkts dropped|          56093783|
| Total pkts drained + dropped|          56094337|
|           Aggregate pkts dropped|          56094337|
|           Total Ingress pkts dropped|              0|
| Aggregate Ingress pkts dropped|              0|
-----+

```

## Configuring Pause Buffer Thresholds and Queue Limit Using Ingress Queuing Policy

The pause buffer thresholds specified in the network-qos policy are shared by all the ports in the system. However, there are situations where a few ports may need different thresholds (such as long distance connections). An ingress queuing policy can be used for this purpose.

An ingress queuing policy also allows the configuration of the queue-limit to restrict the amount of shared buffer that can be used in addition to the reserved pause buffer by the no-drop class.

Each no-drop class is mapped internally to one of the port's priority-group in the ingress direction. The configured pause buffer thresholds and queue-limit are applied to the priority-group associated with the class.




---

**Note** Adding pause buffer size threshold configuration is optional for cable lengths that are less than 100 meters and it need not be configured.

For cable lengths that are greater than 100m, the pause buffer size threshold configuration is mandatory and it is required as part of the QoS policy configuration.

---



**Note** About queue limits for 100G enabled devices (such as the Cisco Nexus 9300 platform switch with the N9K-M4PC-CFP2 GEM):

- The maximum dynamic queue-limit alpha value supported by the device might be greater than 8. However 8 is the maximum alpha value supported. Configuring the alpha value to a value greater than 8 is overridden by the maximum alpha value of 8.

No message is issued when the alpha value is overridden.

- The static queue-limit has a maximum of 20,000 cells. Any value specified greater than the maximum 20,000 cell limit is overridden by the 20,000 cell limit.

No message is issued when the cell limit is overridden.

## SUMMARY STEPS

1. **configure terminal**
2. **policy-map type queuing** *policy-map-name*
3. **class type queuing** *c-in-q1*
4. **pause buffer-size** *buffer-size* **pause threshold** *xoff-size* **resume threshold** *xon-size*
5. **no pause buffer-size** *buffer-size* **pause threshold** *xoff-size* **resume threshold** *xon-size*
6. **queue-limit** *queue size* [**dynamic** *dynamic threshold*]

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>	Enters global configuration mode.
Step 2	<b>policy-map type queuing</b> <i>policy-map-name</i>	Enters policy-map queuing class mode and identifies the policy map assigned to the type queuing policy map.
Step 3	<b>class type queuing</b> <i>c-in-q1</i>	Attaches the class map of type queuing and then enters policy-map class queuing mode. Class queuing names are listed in the System-Defined Type queuing Class Maps table.  <b>Note</b> The qos-group associated with the class must be defined as a no-drop class in the network-qos policy applied in the system qos.  <b>Note</b> Up to eight ingress queues are supported for the Cisco Nexus 9636C-R and 9636Q-R line cards and the Cisco Nexus 9508-FM-R fabric module (in a Cisco Nexus 9508 switch). The range is from c-in-8q-q-default to c-in-8q-q1 through 7.
Step 4	<b>pause buffer-size</b> <i>buffer-size</i> <b>pause threshold</b> <i>xoff-size</i> <b>resume threshold</b> <i>xon-size</i>	Specifies the buffer threshold settings for pause and resume.

	Command or Action	Purpose
<b>Step 5</b>	<b>no pause buffer-size</b> <i>buffer-size</i> <b>pause threshold</b> <i>xoff-size</i> <b>resume threshold</b> <i>xon-size</i>	Removes the buffer threshold settings for pause and resume.
<b>Step 6</b>	<b>queue-limit</b> <i>queue size</i> [ <b>dynamic</b> <i>dynamic threshold</i> ]	(Optional) Specifies either the static or dynamic shared limit available to the ingress priority-group. The static queue limit defines the fixed size to which the priority-group can grow. The dynamic queue limit allows the priority-group's threshold size to be decided depending on the number of free cells available, in terms of the alpha value.  <b>Note</b> Cisco Nexus 9200 platform switches only support a class level dynamic threshold configuration with respect to the alpha value. This means that all ports in a class share the same alpha value.  <b>Note</b> The queue limit for the Cisco Nexus 9636C-R and 9636Q-R line cards and the Cisco Nexus 9508-FM-R fabric module (in a Cisco Nexus 9508 switch) can be entered as a percent or in bytes/kbytes/mbytes/gbytes. For example, <b>queue-limit percent 1</b> or <b>queue-limit bytes 100</b> .

## Verifying the Priority Flow Control Configuration

To display the PFC configuration, perform the following task:

Command	Purpose
<b>show interface priority-flow-control</b> [ <i>module number</i> ]	Displays the status of PFC on all interfaces or on specific modules.

## Configuration Examples for Priority Flow Control

The following example shows how to configure PFC:

```
configure terminal
interface ethernet 5/5
priority-flow-control mode on
```

The following example shows how to enable PFC on a traffic class:

```
switch(config)# class-map type qos c1
switch(config-cmap-qos)# match cos 3
switch(config-cmap-qos)# exit
switch(config)# policy-map type qos p1
switch(config-pmap-qos)# class type qos c1
switch(config-pmap-c-qos)# set qos-group 3
switch(config-pmap-c-qos)# exit
switch(config-pmap-qos)# exit
switch(config)# class-map type network-qos match-any c1
```





```

PFC watchdog internal-interface multiplier : 2
+-----+

+-----+
Ethernet1/23 Interface PFC watchdog: [Enabled]
Disable-action          : No
PFC watch-dog interface-multiplier : 0
+-----+
+-----+
| QOS GROUP 3 [Shutdown] PFC [YES] PFC-COS [3]
+-----+
|                               | Stats          |
+-----+
|                               | Shutdown| 1|
|                               | Restored| 0|
|                               | Total pkts drained| 0|
|                               | Total pkts dropped| 0|
|                               | Total pkts drained + dropped| 0|
|                               | Aggregate pkts dropped| 0|
|                               | Total Ingress pkts dropped| 1924| >>>>>>>> Account for Ingress
drops here
|                               | Aggregate Ingress pkts dropped| 1924|
+-----+

```

### Configuring a No-Drop Policy

The following example shows how to configure a no-drop policy and attach the policy to a session policy:

```

Device# configure terminal
Device(config)# class-map type network-qos class1
Device(config-cmap-nq)# match qos-group 1
Device(config-cmap-nq)# policy-map type network-qos my_network_policy
Device(config-pmap-nq)# class type network-qos class1
Device(config-pmap-nq-c)# pause pfc-cos 2
Device(config-pmap-nq-c)# system qos
Device(config-sys-qos)# service-policy type network-qos my_network_policy
Device# show running ipqos

```

### Classifying Traffic to a No-Drop Class

The following example shows how to create a QoS policy to map all the traffic to the no-drop class:

```

Device# configure terminal
Device(config)# class-map type qos class1
Device(config-cmap-qos)# match cos 2
Device(config-cmap-qos)# policy-map type qos my_qos_policy
Device(config-pmap-qos)# class type qos class1
Device(config-pmap-c-qos)# set qos-group 1
Device(config-pmap-c-qos)# interface e1/5
Device(config-sys-qos)# service-policy type qos input my_qos_policy
Device(config-sys-qos)#

```

Add the queuing policy that guarantees the bandwidth for qos-group 1 and apply that under system-qos as outlined in the following example:

```

policy-map type queuing my_queuing_policy
class type queuing c-out-q-default

```

```
bandwidth percent 1
class type queuing c-out-q3
bandwidth percent 0
class type queuing c-out-q2
bandwidth percent 0
class type queuing c-out-q1
bandwidth percent 99

system qos
  service-policy type queuing output my_queuing_policy
```

In the above example, c-out-q1 by default matches the traffic on qos-group 1. Therefore, the non-default class-map for queuing which matches qos-group 1 is not needed. For further information on configuring queuing, see [Configuring Queuing](#).

For LLFC to be enabled, you need to configure the no-drop policy on network-qos. The buffering module needs to inform the MAC module to generate pause (either LLFC or PFC based on the interface level configuration). PFC negotiation to the adapter is by using DCBX. LLFC or PFC is controlled by the configuration on the interfaces. For example, the **flow-control send and receive on** enables LLFC on the interfaces and the **priority-flow-control mode on** enables PFC on the interfaces.

If DCBX is supported, auto mode negotiates the PFC with the adapter. This is the interface level configuration to enable LLFC or PFC but regardless of it, you have to configure network-qos level pause configuration for LLFC to work. Even if the traffic is classified to qos-group 1 but when it generates pause, it generates LLFC based on the interface level configuration.





## CHAPTER 12

# Monitoring QoS Statistics

---

- [About QoS Statistics, on page 175](#)
- [Prerequisites for Monitoring QoS Statistics, on page 175](#)
- [Guidelines and Limitations for Monitoring QoS Statistics, on page 175](#)
- [Enabling Statistics, on page 177](#)
- [Monitoring the Statistics, on page 179](#)
- [Clearing Statistics, on page 179](#)
- [Configuration Examples For Monitoring QoS Statistics, on page 179](#)

## About QoS Statistics

You can display various QoS statistics for the device. By default, statistics are enabled, but you can disable this feature. For more information, see the Configuration Examples For Monitoring QoS Statistics section.

## Prerequisites for Monitoring QoS Statistics

Monitoring QoS statistics has the following prerequisites:

- You must be familiar with using modular QoS CLI.
- You are logged on to the device.

## Guidelines and Limitations for Monitoring QoS Statistics

Monitoring QoS statistics has the following guidelines and limitations:

- **show** commands with the **internal** keyword are not supported.
- In 64 bit architecture:
  - The queuing tabular output will retain same value of 15 seconds.
  - The tabular output after **clear statistics**, will hold zero statistics for maximum of 15 seconds.
- The **show queuing interface** command can display information about internal interfaces.

The command format for this information is specified as **ii** *x/y/z*. Where *x* is the module number, *y* is the value 1, and *z* is the internal interface number within the module.



**Note** The number of internal interfaces within a module varies based on the type of the line card.



**Note** Alternatively, you can display information about internal interfaces by providing the module number in the **show queuing** command. By including the module number, queuing information for both front-panel and internal interfaces of the module are displayed together.

Example:

```
switch# show queuing interface ii 4/1/2

slot 4
=====

Egress Queuing for ii4/1/2 [System]
-----
QoS-Group# Bandwidth% PrioLevel          Min          Shape
                                         Max          Units
-----
      3           -           1           -           -
      2           0           -           -           -
      1           0           -           -           -
      0          100           -           -           -
-----+-----
|                                     QOS GROUP 0                                     |
+-----+-----+-----+-----+-----+-----+
|                                     | Unicast | OOBFC Unicast | Multicast |
+-----+-----+-----+-----+-----+-----+
|           Tx Pkts |           0 |           0 |           235775 |
|           Tx Byts |           0 |           0 |           22634400 |
|   Dropped Pkts |           0 |           0 |           0 |
|   Dropped Byts |           0 |           0 |           0 |
|   Q Depth Byts |           0 |           0 |           0 |
+-----+-----+-----+-----+-----+-----+
|                                     QOS GROUP 1                                     |
+-----+-----+-----+-----+-----+-----+
|                                     | Unicast | OOBFC Unicast | Multicast |
+-----+-----+-----+-----+-----+-----+
|           Tx Pkts |           0 |           0 |           0 |
|           Tx Byts |           0 |           0 |           0 |
|   Dropped Pkts |           0 |           0 |           0 |
|   Dropped Byts |           0 |           0 |           0 |
|   Q Depth Byts |           0 |           0 |           0 |
+-----+-----+-----+-----+-----+-----+
|                                     QOS GROUP 2                                     |
+-----+-----+-----+-----+-----+-----+
|                                     | Unicast | OOBFC Unicast | Multicast |
+-----+-----+-----+-----+-----+-----+
|           Tx Pkts |           0 |           0 |           0 |
|           Tx Byts |           0 |           0 |           0 |
```

```

| Dropped Pkts |          0 |          0 |          0 |
| Dropped Byts |          0 |          0 |          0 |
| Q Depth Byts |          0 |          0 |          0 |
+-----+
|                               QOS GROUP 3                               |
+-----+
|                               | Unicast | OOBFC Unicast | Multicast |
+-----+
| Tx Pkts |          0 |          0 |          0 |
| Tx Byts |          0 |          0 |          0 |
| Dropped Pkts |          0 |          0 |          0 |
| Dropped Byts |          0 |          0 |          0 |
| Q Depth Byts |          0 |          0 |          0 |
+-----+
|                               CONTROL QOS GROUP                               |
+-----+
|                               | Unicast | OOBFC Unicast | Multicast |
+-----+
| Tx Pkts |          0 |          0 |          0 |
| Tx Byts |          0 |          0 |          0 |
| Dropped Pkts |          0 |          0 |          0 |
| Dropped Byts |          0 |          0 |          0 |
| Q Depth Byts |          0 |          0 |          0 |
+-----+
|                               SPAN QOS GROUP                               |
+-----+
|                               | Unicast | OOBFC Unicast | Multicast |
+-----+
| Tx Pkts |          0 |          0 |          0 |
| Tx Byts |          0 |          0 |          0 |
| Dropped Pkts |          0 |          0 |          0 |
| Dropped Byts |          0 |          0 |          0 |
| Q Depth Byts |          0 |          0 |          0 |
+-----+

```

Cannot get ingress statistics for if\_index: 0x4a180001 Error 0xe

#### Port Egress Statistics

```
-----
WRED Drop Pkts                                0
```

#### PFC Statistics

```
-----
TxPPP:                                0, RxPPP:                                0
```

```
-----
COS QOS Group      PG TxPause TxCount      RxPause      RxCount
0      -      - Inactive      0      Inactive      0
1      -      - Inactive      0      Inactive      0
2      -      - Inactive      0      Inactive      0
3      -      - Inactive      0      Inactive      0
4      -      - Inactive      0      Inactive      0
5      -      - Inactive      0      Inactive      0
6      -      - Inactive      0      Inactive      0
7      -      - Inactive      0      Inactive      0
-----
```

## Enabling Statistics

You can enable or disable QoS statistics for all interfaces on the device. By default, QoS statistics are enabled.

## SUMMARY STEPS

1. **configure terminal**
2. Enable or disable QoS statistics:
  - Enable QoS statistics:  
**qos statistics**
  - Disable QoS statistics:  
**no qos statistics**
3. **show policy-map interface**
4. (Optional) **show policy-map interface brief**
5. **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	Enable or disable QoS statistics: <ul style="list-style-type: none"> <li>• Enable QoS statistics: <b>qos statistics</b></li> <li>• Disable QoS statistics: <b>no qos statistics</b></li> </ul> <b>Example:</b> <ul style="list-style-type: none"> <li>• Enable QoS statistics: <pre>switch(config)# qos statistics</pre></li> <li>• Disable QoS statistics: <pre>switch(config)# no qos statistics</pre></li> </ul>	<ul style="list-style-type: none"> <li>• Enable QoS statistics: Enables QoS statistics on all interfaces.</li> <li>• Disable QoS statistics: Disables QoS statistics on all interfaces.</li> </ul>
<b>Step 3</b>	<b>show policy-map interface</b> <b>Example:</b> <pre>switch(config)# show policy-map interface</pre>	(Optional) Displays the statistics status and the configured policy maps on all interfaces.
<b>Step 4</b>	(Optional) <b>show policy-map interface brief</b> <b>Example:</b> <pre>switch(config)# show policy-map interface brief</pre>	Displays brief output of all policies and policy-name only in brief output displays maximum of 25 character length for easy understandability.
<b>Step 5</b>	<b>copy running-config startup-config</b> <b>Example:</b>	(Optional) Saves the running configuration to the startup configuration.



	Command or Action	Purpose
	<code>switch(config)# copy running-config startup-config</code>	

## Monitoring the Statistics

You can display QoS statistics for all interfaces or a selected interface, data direction, or a QoS type.

### SUMMARY STEPS

1. `show policy-map` [*policy-map-name*] [**interface** **input** | **output**]] [**type** {**control-plane** | **network-qos** | **qos** | **queuing**}]

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<p><code>show policy-map</code> [<i>policy-map-name</i>] [<b>interface</b> <b>input</b>   <b>output</b>]] [<b>type</b> {<b>control-plane</b>   <b>network-qos</b>   <b>qos</b>   <b>queuing</b>}]</p> <p><b>Example:</b></p> <pre>switch# show policy-map interface ethernet 2/1</pre>	Displays statistics and the configured policy maps on all interfaces, the specified interface, or on a specified data direction or QoS type.

## Clearing Statistics

You can clear QoS statistics for all interfaces or a selected interface, data direction, or QoS type.

### SUMMARY STEPS

1. `clear qos statistics` [**interface** **input** | **output**]] [**type** {**qos** | **queuing**}]

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<p><code>clear qos statistics</code> [<b>interface</b> <b>input</b>   <b>output</b>]] [<b>type</b> {<b>qos</b>   <b>queuing</b>}]</p> <p><b>Example:</b></p> <pre>switch# clear qos statistics type qos</pre>	Clears statistics and the configured policy maps on all interfaces or the specified interface or on a specified data direction or QoS type.

## Configuration Examples For Monitoring QoS Statistics

The following example shows how to display the QoS statistics:

```
Global statistics status : enabled
```

```

Ethernet6/1
  Service-policy (queuing) output:  default-out-policy

  Class-map (queuing):  c-out-q3 (match-any)
    priority level 1

  Class-map (queuing):  c-out-q2 (match-any)
    bandwidth remaining percent 0

  Class-map (queuing):  c-out-q1 (match-any)
    bandwidth remaining percent 0

  Class-map (queuing):  c-out-q-default (match-any)
    bandwidth remaining percent 100

```

The following example shows how to obtain information about queuing and PFC related counters:

```
switch(config-vlan-config)# show queuing interface ethernet 2/1
```

```

Egress Queuing for Ethernet2/1 [System]
-----
QoS-Group#  Bandwidth%  PrioLevel          Min          Shape          Units
                                     Min          Max
-----
      3           -           1              -              -              -
      2           0           -              -              -              -
      1           0           -              -              -              -
      0          100           -              -              -              -
-----+-----+-----+-----+-----+-----+
|                                     QOS GROUP 0                                     |
-----+-----+-----+-----+-----+
|          Tx Pkts |                   0|   Dropped Pkts |                   0|
-----+-----+-----+-----+-----+
|                                     QOS GROUP 1                                     |
-----+-----+-----+-----+-----+
|          Tx Pkts |                   0|   Dropped Pkts |                   0|
-----+-----+-----+-----+-----+
|                                     QOS GROUP 2                                     |
-----+-----+-----+-----+-----+
|          Tx Pkts |                   0|   Dropped Pkts |                   0|
-----+-----+-----+-----+-----+
|                                     QOS GROUP 3                                     |
-----+-----+-----+-----+-----+
|          Tx Pkts |                   0|   Dropped Pkts |                   0|
-----+-----+-----+-----+-----+
|                                     CONTROL QOS GROUP 4                                     |
-----+-----+-----+-----+-----+
|          Tx Pkts |                   58|   Dropped Pkts |                   0|
-----+-----+-----+-----+-----+
|                                     SPAN QOS GROUP 5                                     |
-----+-----+-----+-----+-----+
|          Tx Pkts |                   0|   Dropped Pkts |                   948|
-----+-----+-----+-----+-----+

```



# CHAPTER 13

## Micro-Burst Monitoring

- [Micro-Burst Monitoring](#), on page 181
- [Guidelines and Limitations for Micro-Burst Monitoring](#), on page 181
- [Configuring Micro-Burst Detection Per-Queue](#), on page 184
- [Configuring Micro-Burst Detection Per-Switch](#), on page 186
- [Clearing Micro-Burst Detection](#), on page 187
- [Verifying Micro-Burst Detection](#), on page 188
- [Example of Micro-Burst Detection Output](#), on page 189

## Micro-Burst Monitoring

The micro-burst monitoring feature allows you to monitor traffic to detect unexpected data bursts within a very small time window (microseconds). This allows you to detect traffic in the network that are at risk for data loss and for network congestion.

A micro-burst is detected when the buffer utilization in an egress queue rises above the configured rise-threshold (measured in bytes or percentage). The burst for the queue ends when the queue buffer utilization falls below the configured fall-threshold (measured in bytes or percentage).

The feature provides timestamp and instantaneous buffer utilization information about the various queues where micro-burst monitoring is enabled.

Depending on the switch, you can enable the micro-burst detection per-queue or per-switch.

## Guidelines and Limitations for Micro-Burst Monitoring

The following are the guidelines and limitations for micro-burst monitoring:

- From Cisco NX-OS Release 10.1(x), micro-burst monitoring is supported on Cisco Nexus 9500 platform switches.
- Micro-burst monitoring and detection is supported on the following platforms:

Switches	Minimum Burst Interval
Cisco Nexus 9200	86 $\mu$ sec
	96 $\mu$ sec

Switches	Minimum Burst Interval
Cisco Nexus 9300	73 $\mu$ sec 78 $\mu$ sec
Cisco Nexus 9300-EX	
Cisco Nexus 9300-FX	
Cisco Nexus 9300-FX2	
Cisco Nexus 9300-FX3	
Cisco Nexus 9300-GX	
Cisco Nexus 9300-GX2	
Cisco Nexus 9300-H	
Cisco Nexus 9400	
N9K-X9700-FX line card	
Cisco Nexus 9332C	
Cisco Nexus 9364C	
Cisco Nexus X9716D-GX	

On these switches, micro-burst monitoring is supported on both unicast and multicast egress queues. On these switches, micro-burst monitoring is supported on unicast egress queues. It is not supported on multicast, CPU, or span queues.

In addition, early detection of long bursts is supported. For bursts lasting more than 5 seconds, an early burst start record is displayed after 5 seconds from the start of the burst and is updated when the burst actually ends. This is not supported for Cisco Nexus 9300-FX, 9332C, 9364C and newer platform switches. The newer platform switches detect microburst only after the buffer usage falls below the fall threshold.




---

**Note** On these switches, micro-burst duration is not affected by the number of queues configured.

---

- **show** commands with the **internal** keyword are not supported.
- On switches that contain a Network Forwarding Engine (NFE2), micro-burst monitoring requires IO FPGA version 0x9 or later.

Beginning with Cisco NX-OS Release 7.0(3)I5(1), micro-burst monitoring on Cisco Nexus 9200 or 9300-EX platform switches require the following IO FPGA versions:

Switch	IO FPGA Version
Cisco Nexus 92160YC-X	0x16 or later

Switch	IO FPGA Version
Cisco Nexus 92304QC	0x10 or later
Cisco Nexus 9272Q	0x15 or later
Cisco Nexus 9232C	0x6 or later
Cisco Nexus 9236C	0x14 or later
Cisco Nexus 93180YC-EX	0x8 or later
Cisco Nexus 93108TC-EX	0x9 or later

For more information about EPLD programming to upgrade the FPGA, see the *Cisco Nexus 9000 Series FPGA/EPLD Upgrade Release Notes*.

- The following are guidelines for micro-burst duration on non-modular switches that contain a Network Forwarding Engine (NFE2):



**Note** Micro-burst duration is the duration of the burst that can be detected. For example, when micro-burst monitoring is configured for 1 - 3 queues, micro-bursts that exceed 0.64 microseconds are detected. Increasing the number of queues that are configured for micro-burst monitoring increases the duration of the burst that can be detected. This does not apply to Cisco Nexus 9300-FX, 9300-FX2, and 9364C platform switches.

1 - 3 queues	0.64 microsecond duration
8 queues with 10 ports each	9.0 microsecond duration
10 queues with 132 ports each	140 microsecond (0.14 millisecond) duration

- By default, the switch stores a maximum of 1000 burst records. The maximum number of records is configurable within a range of 200 - 2000 records.
  - At least, 20 burst records are stored for each queue even when the maximum number of burst records has been reached.
  - When the maximum number of burst records has been reached, the oldest record is deleted to allow the storage of a new record.
  - You can use the **hardware qos burst-detect max-records** *number-of-records* command to configure the maximum number of burst records to store.
  - You can use the **show hardware qos burst-detect max-records** command to display the maximum number of burst records that can be stored.
- Too many back to back burst records while traffic is being drained from queues might result in jitter. To avoid jitter, configure the fall-threshold to be less than the rise-threshold. As a best practice, configure the fall-threshold to be approximately 20% of the rise-threshold value (bytes).

- Beginning with Cisco NX-OS Release 10.2(3)F, micro-burst monitoring is supported on Cisco Nexus 9300-FX3 FEX.
- Beginning with Cisco NX-OS Release 10.3(3)F, micro-burst monitoring feature provides the following capabilities:
  - Micro-Burst configuration can be done in units of percentage apart from bytes on Cisco Nexus 9300-FX/FX2/FX3/GX/GX2, C9332C, and C9364C switches and Cisco Nexus 9500 platform switches with N9K-X9700-FX line card.
  - Micro-Burst records are exported to Network Insights Resources (NIR) apart from uburst bytes database using software telemetry on Cisco Nexus 9300-FX/FX2/FX3/GX/GX2 platform switches.

## Configuring Micro-Burst Detection Per-Queue

You can enable micro-burst detection for all interfaces on the device.




---

**Note** This procedure is for all Cisco Nexus 9000 Series switches that support per-queue thresholds.

---

You can enable independent micro-burst thresholds per queue on the following switches:

- Cisco Nexus X9716D-GX platform switch from Release 10.2(1)F
- Cisco Nexus 9336C-FX2-E, 9332D-GX2B, and 9364D-GX2A switches from Release 10.1(2)
- Cisco Nexus 9300-EX//FX3 platform switches
- Cisco Nexus 9300-GX/GX2/H platform switches
- Cisco Nexus 9400 platform switches
- Cisco Nexus 9336C-FX switch
- Cisco Nexus 93360YC-FX2 and Cisco Nexus 93216TC-FX2 switches from Release 9.3(7)

The parameters are defined under the individual queues in the queuing policy-maps.

### SUMMARY STEPS

1. **configure terminal**
2. **policy-map type queuing** *policy-map-name*
3. **class type queuing** *class-name*
4. **burst-detect rise-threshold** *rise-threshold-bytes* **bytes** **fall-threshold** *fall-threshold-bytes* **bytes**
5. **exit**
6. **exit**
7. **interface ethernet** *slot/port*
8. **service-policy type queuing output** *policy-map-name*

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
Step 2	<b>policy-map type queuing <i>policy-map-name</i></b> <b>Example:</b> <pre>switch(config)# policy-map type queuing xyz switch(config-pmap-que)#</pre>	Configures the policy map of type queuing and then enters policy-map mode for the policy-map name you specify.
Step 3	<b>class type queuing <i>class-name</i></b> <b>Example:</b> <pre>switch(config-pmap-que)# class type queuing c-out-def switch(config-pmap-c-que)#</pre>	Configures the class map of type queuing and then enters policy-map class queuing mode.
Step 4	<b>burst-detect rise-threshold <i>rise-threshold-bytes</i> bytes</b> <b>fall-threshold <i>fall-threshold-bytes</i> bytes</b> <b>Example:</b> <pre>switch(config-pmap-c-que)# burst-detect rise-threshold 208 bytes fall-threshold 208 bytes</pre>	Specifies the rise-threshold and the fall-threshold for micro-burst detection.  Beginning with Cisco NX-OS Release 10.3(3)F, the <b>rise-threshold</b> and <b>fall-threshold</b> for micro-burst detection can be specified even in percentage.. For example: <pre>switch(config)# burst-detect rise-threshold 60 percent fall-threshold 40 percent</pre>
Step 5	<b>exit</b> <b>Example:</b> <pre>switch(config-pmap-c-que)# exit switch(config-pmap-que)#</pre>	Exits policy-map queue mode.
Step 6	<b>exit</b> <b>Example:</b> <pre>switch(config-pmap-que)# exit switch(config)#</pre>	Exits policy-map queue mode.
Step 7	<b>interface ethernet <i>slot/port</i></b> <b>Example:</b> <pre>switch(config)# interface ethernet 1/1 switch(config-if)#</pre>	Configures the interface.
Step 8	<b>service-policy type queuing output <i>policy-map-name</i></b> <b>Example:</b>	Adds the policy map to the input or output packets of the system.

	Command or Action	Purpose
	<code>switch(config-if)# service-policy type queuing output custom-out-8q-uburst</code>	

## Configuring Micro-Burst Detection Per-Switch

You can enable micro-burst detection for all interfaces on the device.



**Note** This procedure is for all Cisco Nexus 9000 Series switches that support per-switch thresholds.

For the following switches, you have to enable thresholds per switch:

- Cisco Nexus 9200 switches
- Cisco Nexus 9300-FX switches
- Cisco Nexus 9332C switches
- Cisco Nexus 9364C switches
- Cisco Nexus 9500 Platform Switches with N9K-X9700-FX line card

Therefore, the threshold is defined globally and applied to any queues where micro-burst detection is enabled in the queuing policy.

### SUMMARY STEPS

1. **configure terminal**
2. **hardware qos burst-detect rise-threshold** *rise-threshold-bytes bytes* | **percentfall-threshold** *fall-threshold-bytes bytes*
3. **policy-map type queuing** *policy-map-name*
4. **class type queuing** *class-name*
5. **burst-detect enable**
6. **exit**
7. **exit**
8. **interface ethernet** *slot/port*
9. **service-policy type queuing output** *policy-map-name*

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> <code>switch# configure terminal</code>	Enters global configuration mode.



	Command or Action	Purpose
Step 2	<b>hardware qos burst-detect rise-threshold</b> <i>rise-threshold-bytes bytes   percentfall-threshold</i> <i>fall-threshold-bytes bytes</i>  <b>Example:</b> <pre>switch(config)# hardware qos burst-detect rise-threshold 10000 bytes fall-threshold 2000 bytes</pre>	<p>Specifies the rise-threshold and the fall-threshold for micro-burst detection.</p> <p>Beginning with Cisco NX-OS Release 10.3(3)F, the <b>rise-threshold</b> and <b>fall-threshold</b> for micro-burst detection can be specified even in percentage. For example:</p> <pre>switch(config)# hardware qos burst-detect rise-threshold 60 percent fall-threshold 40 percent</pre>
Step 3	<b>policy-map type queuing</b> <i>policy-map-name</i>  <b>Example:</b> <pre>switch(config)# policy-map type queuing custom-out-8q-uburst</pre>	Configures the policy map of type queuing and then enters policy-map mode for the policy-map name you specify.
Step 4	<b>class type queuing</b> <i>class-name</i>  <b>Example:</b> <pre>switch(config-pmap-que)# class type queuing c-out-8q-q-default</pre>	Configures the class map of type queuing and then enters policy-map class queuing mode.
Step 5	<b>burst-detect enable</b>  <b>Example:</b> <pre>switch(config-pmap-c-que)# burst-detect enable</pre>	Enable micro-burst detection on the queue.
Step 6	<b>exit</b>  <b>Example:</b> <pre>switch(config-pmap-c-que)# exit</pre>	Exits policy-map class queue mode.
Step 7	<b>exit</b>  <b>Example:</b> <pre>switch(config-pmap-que)# exit</pre>	Exits policy-map queue mode.
Step 8	<b>interface ethernet</b> <i>slot/port</i>  <b>Example:</b> <pre>switch(config)# interface ethernet 1/1 switch(config-if)#</pre>	Configures the interface.
Step 9	<b>service-policy type queuing output</b> <i>policy-map-name</i>  <b>Example:</b> <pre>switch(config-if)# service-policy type queuing output custom-out-8q-uburst</pre>	Adds the policy map to the input or output packets of the system.

## Clearing Micro-Burst Detection

You can clear micro-burst detection for all interfaces or a selected interface.



**Note** Even after removing the queuing policy from an interface, previous micro-burst statistics remain. Use the **clear queuing burst-detect** command to clear the remaining records.

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>clear queuing burst-detect</b> [ <i>slot</i> ] [ <b>interface</b> <i>port</i> [ <b>queue</b> <i>queue-id</i> ]] <b>Example:</b>	Clears micro-burst information from all interfaces or the specified interface.

### Example

- Example for an interface:

```
clear queuing burst-detect interface Eth1/2
```

- Example for a queue:

```
clear queuing burst-detect interface Eth1/2 queue 7
```

- Example for FEX:

```
clear queuing burst-detect fex 101
```

## Verifying Micro-Burst Detection

The following displays micro-burst monitoring information:

Command	Purpose
<b>show queuing burst-detect</b>	Displays micro-burst counters information for all interfaces.

- Example for an interface:

```
show queuing burst-detect interface Eth 1/2
```

- Example for a queue:

```
show queuing burst-detect interface Eth 1/2 queue 7
```

- Example for FEX:

```
show queuing burst-detect fex 101
```

## Example of Micro-Burst Detection Output

Example output of TOR switch.

```
belv6# show queuing burst-detect detail
slot 1
=====
-----
Microburst Statistics
Flags: E - Early start record, U - Unicast, M - Multicast
-----
Ethernet|Queue|Start|Start Time|Peak|Peak Time|End|End Time|Duration
Intfc| |Depth| |Depth| | |Depth| |
| | | (bytes)| | (bytes)| | | (bytes)| |
-----
Eth1/36|U0|310128|2011/01/11 22:31:51:081725|310128|2011/01/11 22:31:51:081725|0|2011/01/11 22:31:51:081918|193.14 us
Eth1/36|U0|311168|2011/01/11 22:31:51:181765|311168|2011/01/11 22:31:51:181765|0|2011/01/11 22:31:51:181959|193.90 us
Eth1/36|U0|283712|2011/01/11 22:31:51:281825|283712|2011/01/11 22:31:51:281825|0|2011/01/11 22:31:51:282018|193.63 us
Eth1/36|U0|283712|2011/01/11 22:31:51:381862|283712|2011/01/11 22:31:51:381862|0|2011/01/11 22:31:51:382056|193.42 us
Eth1/36|U0|312000|2011/01/11 22:31:51:481885|312000|2011/01/11 22:31:51:481885|0|2011/01/11 22:31:51:482080|194.42 us
Eth1/36|U0|221312|2011/01/11 22:31:51:581974|221312|2011/01/11 22:31:51:581974|0|2011/01/11 22:31:51:582168|193.58 us
Eth1/36|U0|201616|2011/01/11 22:31:51:681964|201616|2011/01/11 22:31:51:681964|0|2011/01/11 22:31:51:682157|193.10 us
Eth1/36|U0|190112|2011/01/11 22:31:51:782067|190112|2011/01/11 22:31:51:782067|18512|2011/01/11 22:31:51:782154|86.22 us
Eth1/36|U0|70512|2011/01/11 22:31:51:882167|70512|2011/01/11 22:31:51:882167|0|2011/01/11 22:31:51:882253|85.74 us
Eth1/36|U0|185328|2011/01/11 22:31:52:082111|185328|2011/01/11 22:31:52:082111|0|2011/01/11 22:31:52:082304|193.09 us
Eth1/36|U0|245856|2011/01/11 22:31:52:182158|245856|2011/01/11 22:31:52:182158|0|2011/01/11 22:31:52:182352|193.34 us
Eth1/36|U0|138112|2011/01/11 22:31:52:282293|138112|2011/01/11 22:31:52:282293|0|2011/01/11 22:31:52:282380|86.53 us
Eth1/36|U0|242112|2011/01/11 22:31:52:382284|242112|2011/01/11 22:31:52:382284|0|2011/01/11 22:31:52:382478|193.55 us
Eth1/36|U0|136448|2011/01/11 22:31:52:482264|105312|2011/01/11 22:31:52:482348|0|2011/01/11 22:31:52:482542|278.16 us
Eth1/36|U0|299312|2011/01/11 22:31:52:582334|299312|2011/01/11 22:31:52:582334|0|2011/01/11 22:31:52:582612|278.12 us
Eth1/36|U0|184912|2011/01/11 22:31:52:682432|184912|2011/01/11 22:31:52:682432|13312|2011/01/11 22:31:52:682517|85.42 us
Eth1/36|U0|148304|2011/01/11 22:31:52:782387|148304|2011/01/11 22:31:52:782387|0|2011/01/11 22:31:52:782580|192.94 us
Eth1/36|U0|226512|2011/01/11 22:31:52:882492|226512|2011/01/11 22:31:52:882492|0|2011/01/11 22:31:52:882685|193.37 us
-----
```

### Network Insights Resources Examples

Beginning with Cisco NX-OS Release 10.3(3)F, the Nexus Dashboard Insight, formally called Network Insights Resources(NIR), is supported on Cisco Nexus 9300-FX/FX2/FX3/FXP/GX/GX2 switches.

The following examples displays how the micro-burst records are exported to Nexus Dashboard Insight at frequency of 1 minute using software telemetry:

Example of **show queuing burst-detect nir** command:

```
config# show queuing burst-detect nir
slot 1
=====
-----
Microburst Statistics
Flags: E - Early start record, U - Unicast, M - Multicast
-----
Ethernet|Queue|Start Time|Peak Depth|Peak Time|Duration
Interface| | | | (in bytes) | |
-----
Eth1/56|U2|2022/05/09 15:41:31:899758|9984|2022/05/09 15:41:31:899764|6.88 us
Eth1/56|U2|2022/05/09 15:41:31:899765|7714304|2022/05/09 15:41:32:070481|9.97 s
Eth1/56|U2|2022/05/09 16:45:06:763271|2912|2022/05/09 16:45:06:763272|1.90 us
-----
```

Example of **show queuing burst-detect nir detail** command:

## Example of Micro-Burst Detection Output

```
config# show queuing burst-detect nlr
```

```
slot 1
=====
```

```
-----
Microburst Statistics
```

```
Flags: E - Early start record, U - Unicast, M - Multicast
```

Ethernet Interface	Queue	Start Depth	End Depth	End Time	Start Time	Duration	Peak Depth	Peak Time
		(bytes)	(bytes)				(bytes)	

Eth1/6	U6	416	416	2023/06/28 13:11:45:005626	2023/06/28 13:11:45:005625	1.11 us	3120	2023/06/28 13:11:45:005627
Eth1/6	U6	416	416	2023/06/28 13:11:45:005058	2023/06/28 13:11:45:005057	1.44 us	3120	2023/06/28 13:11:45:005059

Example of telemetry configuration on the switch to receive micro-burst data:

```
telemetry
destination-group 1
ip address receiver_ip_address port receiver_port protocol grpc encoding GPB-compact
sensor-group 1
data-source native
path microburst
subscription 1
dst-grp 1
snsr-grp 1 sample-interval 0
```



# APPENDIX **A**

## FEX QoS Configuration

- [FEX QoS Configuration Information, on page 191](#)
- [TCAM Carving for FEX QoS, on page 193](#)
- [FEX QoS Configuration Example, on page 194](#)
- [Verifying the FEX QoS Configuration , on page 210](#)

## FEX QoS Configuration Information



**Note** FEX QoS is not supported on the Cisco Nexus 9508 switch (NX-OS 7.0(3)F3(3).



**Note** Only 4Q queuing policy model is supported on FEX. When you try to bring up FEX in 8Q queuing policy mode you will get an error message.

- Classification (system type qos policy)

Type	System Level Action	Hardware Implementation	
		Direction: IN	
		FEX	Switch
match	cos	Yes	No
	ip access list	No	No
	dscp	No	No
	ip	No	No
	precedence	No	No
	protocol	No	No
set	qos-group	Yes	No

	precedence	No	No
	dscp	No	No
	cos	No	No
Type	Interface Level Action	Hardware Implementation	
		Direction: IN	
		FEX	Switch
match	cos	No	Yes
	ip access list	No	Yes
	dscp	No	Yes
	ip	No	Yes
	precedence	No	Yes
	protocol	No	Yes
set	dscp	No	Yes
	precedence	No	Yes
	qos-group	No	Yes
	cos	No	Yes

- Input queuing

System Level Action	Hardware Implementation	
	Direction: IN	
	FEX	Switch
Bandwidth	Yes	No
Bandwidth Remaining	Yes	No
Priority (only level 1)	Yes	No
Interface Level Action	Hardware Implementation	
	Direction: IN	
	FEX	Switch
Bandwidth	No	No
Bandwidth Remaining	No	No
Priority	No	No

- Output queuing

<b>System Level</b> <b>Action</b>	<b>Hardware Implementation</b>	
	Direction: OUT	
	FEX	Switch
Bandwidth	Yes	Yes
Bandwidth Remaining	Yes	Yes
Priority (only level 1 on FEX, 3 levels on switch)	Yes	Yes
<b>Interface Level</b> <b>Action</b>	<b>Hardware Implementation</b>	
	Direction: OUT	
	FEX	Switch
Bandwidth	No	Yes
Bandwidth Remaining	No	Yes
Priority	No	Yes

## TCAM Carving for FEX QoS

You must free up unused TCAM space to accommodate TCAM carving for FEX QoS.



**Note** FEX QoS is not supported on the Cisco Nexus 9508 switch (NX-OS 7.0(3)F3(3)).

- For FEX QoS TCAM carving for IPv4 traffic, you can use the **hardware access-list tcam region fex-qos 256** command.

As a best practice, you can use the **hardware access-list tcam region fex-qos-lite 256** command when policers are not used.



**Note** The fex-qos-lite region does not have conformed policer statistics support for IPv4.

- For IPv6 QoS TCAM carving support, you can use the **hardware access-list tcam region fex-ipv6-qos 256** command.
- For MAC based QoS TCAM carving support, you can use the **hardware access-list tcam region fex-mac-qos 256** command.

- When configuring end to end queuing from the HIF to the front panel port, the QoS classification policy needs to be applied to both system and HIF. This allows the FEX to queue on ingress appropriately (system) and allows the egress front panel port to queue appropriately (HIF).

Example:

```
system qos
  service-policy type qos input LAN-QOS-FEX

interface Ethernet101/1/12
  service-policy type qos input LAN-QOS-FEX
```

### Example of a FEX QoS Marking Policy Configuration

The following example is to configure set cos when the incoming traffic is untagged on the Layer 3 uplink port with DSCP values. In this way, it carries cos values to the FEX ports when traffic comes on the Layer 3 port and egress out on the FEX HIF port.

```
class-map type qos match-all DSCP8
  match dscp 8
class-map type qos match-all DSCP16
  match dscp 16
class-map type qos match-all DSCP32
  match dscp 32
policy-map type qos-remark
  class DSCP8
    set qos-group 1
    set cos 0
  class DSCP16
    set qos-group 2
    set cos 1
  class DSCP32
    set qos-group 3
    set cos 3
  class class-default
```

For configuring the uplink Layer 3 ports:

```
Int ethx/y
  Service-policy type qos input qos-remark
```

## FEX QoS Configuration Example




---

**Note** FEX QoS is not supported on the Cisco Nexus 9508 switch (NX-OS 7.0(3)F3(3)).

---

The following are examples of the aspects of a FEX QoS configuration.

### Classification (system type qos policy)

Policies of type qos are applied to classify incoming packets.

- Class map configuration:



```

switch# conf t
Enter configuration commands, one per line. End with CNTL/Z.

switch(config)# class-map type qos match-all cos0
switch(config-cmap-qos)# match cos 0
switch(config-cmap-qos)#
switch(config-cmap-qos)# class-map type qos match-all cos1
switch(config-cmap-qos)# match cos 1
switch(config-cmap-qos)#
switch(config-cmap-qos)# class-map type qos match-all cos2
switch(config-cmap-qos)# match cos 2
switch(config-cmap-qos)#
switch(config-cmap-qos)# class-map type qos match-all cos3
switch(config-cmap-qos)# match cos 3
switch(config-cmap-qos)#

```

- Policy map configuration:

```

switch# conf t
Enter configuration commands, one per line. End with CNTL/Z.

switch(config)# policy-map type qos setpol
switch(config-pmap-qos)# class cos0
switch(config-pmap-c-qos)# set qos-group 1
switch(config-pmap-c-qos)# class cos1
switch(config-pmap-c-qos)# set qos-group 2
switch(config-pmap-c-qos)# class cos3
switch(config-pmap-c-qos)# set qos-group 3
switch(config-pmap-c-qos)# class class-default
switch(config-pmap-c-qos)#

```

- Attach service policy to system target configuration:

```

switch# conf t
Enter configuration commands, one per line. End with CNTL/Z.

switch(config)# system qos
switch(config-sys-qos)# service-policy type qos input setpol

```

- Verifying classification:

```

switch# show policy-map system type qos

Service-policy (qos) input:  setpol
policy statistics status:  disabled (current status: disabled)

Class-map (qos):  cos0 (match-all)
Match: cos 0
set qos-group 1

Class-map (qos):  cos1 (match-all)
Match: cos 1
set qos-group 2

Class-map (qos):  cos23 (match-all)
Match: cos 2-3
set qos-group 3

Class-map (qos):  class-default (match-any)

```



```

FEX TCAM programmed successfully

switch#

switch# attach fex 101

fex-101# show platform software qosctrl port 0 0 hif 1
number of arguments 6: show port 0 0 3 1
-----
QoSCtrl internal info {mod 0x0 asic 0 type 3 port 1}

PI mod 0 front port 0 if_index 0x00000000
  ups 0 downs 0 binds 0
Media type 0
Port speed 0
MAC addr b0:00:b4:32:05:e2
Port state: , Down

Untagged COS config valid: no
Untagged COS dump:
rx_cos_def[0]=0, tx_cos_def[0]=0
rx_cos_def[1]=3, tx_cos_def[1]=3
Last queueing config recvd from supId: 0
-----SUP 0 start -----

Queueing config per qos_group
Interface queueing config valid: no

Queueing per qos_group: 00006|
  |id|bw%|bw_unit|priority
grp |00|100|00000000|00000000
grp |01|000|00000000|00000000
grp |02|000|00000000|00000000
grp |03|000|00000000|00000000
grp |04|000|00000000|00000000
grp |05|000|00000000|00000000

Scheduling Classes 00008|
  |id|cbmp|qid|bw%|nor_bw%|bw_unit|prio|dir |q2cos|class_grp|wk_gmap
class |00|0x01|000|000|00000000|00000007|0001| TX| 0x80|000000000|00000000
class |01|0x02|001|000|00000000|00000007|0001| TX| 0x00|000000000|00000000
class |02|0x04|002|000|00000000|00000007|0000| TX| 0x08|000000002|00000000
class |03|0x08|003|100|0000100|00000007|0000| TX| 0xf7|000000003|00000000
class |04|0x10|004|000|00000000|00000007|0000| TX| 0x00|000000003|00000000
class |05|0x20|005|000|00000000|00000007|0000| TX| 0x00|000000003|00000000
class |06|0x40|006|000|00000000|00000007|0000| TX| 0x00|000000003|00000000
class |07|0x80|007|000|00000000|00000007|0000| TX| 0x00|000000003|00000000

-----SUP 0 end -----

-----SUP 1 start -----

Queueing config per qos_group
Interface queueing config valid: no

Queueing per qos_group: 00006|
  |id|bw%|bw_unit|priority
grp |00|100|00000000|00000000
grp |01|000|00000000|00000000
grp |02|000|00000000|00000000
grp |03|000|00000000|00000000

```

```
grp |04|000|00000000|00000000
grp |05|000|00000000|00000000
```

```
Scheduling Classes 00008|
      |id|cbmp|qid|bw%|nor_bw%|bw_unit|prio|dir |q2cos|class_grp|wk_gmap
class |00|0x01|000|000|00000000|00000007|0001| TX| 0x80|000000000|00000000
class |01|0x02|001|000|00000000|00000007|0001| TX| 0x00|000000000|00000000
class |02|0x04|002|000|00000000|00000007|0000| TX| 0x08|000000002|00000000
class |03|0x08|003|100|0000100|00000007|0000| TX| 0xf7|000000003|00000000
class |04|0x10|004|000|00000000|00000007|0000| TX| 0x00|000000003|00000000
class |05|0x20|005|000|00000000|00000007|0000| TX| 0x00|000000003|00000000
class |06|0x40|006|000|00000000|00000007|0000| TX| 0x00|000000003|00000000
class |07|0x80|007|000|00000000|00000007|0000| TX| 0x00|000000003|00000000
```

```
-----SUP 1 end -----
```

```
PFC 0 (disabled), net_port 0x0
END of PI SECTION
HIF0/0/1
```

#### Default CoS: 0

CoS	Rx-Remap	Tx-Remap	Class
0	0	0	3
1	1	1	4
2	2	2	5
3	3	3	5
4	4	4	2
5	5	5	2
6	6	6	2
7	7	7	1

Class	FRH	CT-En	MTU-Cells	[Bytes]
0	0	0	30	[2400 ]
1	0	0	30	[2400 ]
2	2	0	116	[9280 ]
3	2	0	116	[9280 ]
4	2	0	116	[9280 ]
5	2	0	116	[9280 ]
6	2	0	127	[10160]
7	2	0	127	[10160]

#### FRH configuration:

```
Port En: 1, Tail Drop En: 0, Emergency Stop En: 1, Err Discard En: 1
```

FRH	Xon	Xoff	Total	Pause	u-Pause	Class-Map
0	2	6	8	1	0	0x03
1	0	0	0	0	0	0x00
2	15	19	38	1	0	0x3c
3	0	0	0	0	0	0x00
4	0	0	0	0	0	0x00
5	0	0	0	0	0	0x00
6	0	0	0	0	0	0x00
7	0	0	0	0	0	0x00

#### Global FRH:

```
FRH Map: 0x00, Pause Class Map: 0x00
Xoff Threshold: 0, Total Credits: 0
```

#### Pause configuration:

PFC disabled  
 Rx PFC CoS map: 0x00, Tx PFC CoS map: 0x00

Index	CoS-to-Class	Class-to-CoS
0	0x00	0xff
1	0x00	0xff
2	0x00	0xff
3	0x00	0xff
4	0x00	0xff
5	0x00	0xff
6	0x00	0xff
7	0x00	0xff

OQ configuration:  
 Credit Quanta: 1, IPG Adjustment: 0  
 PQ0 En: 0, PQ0 Class: 0  
 PQ1 En: 0, PQ1 Class: 0

Class	XoffToMap	TD	HD	DP	Grp	LSP	GSP	CrDec	bw
0	0 0	1	0	0	0	1	0	0	0
1	0 0	1	0	0	1	0	1	0	0
2	0 0	1	0	0	2	0	0	50	10
3	0 0	1	0	0	2	0	0	24	20
4	0 0	1	0	0	2	0	0	16	30
5	0 0	1	0	0	2	0	0	12	40
6	0 0	1	0	0	2	0	0	0	0
7	0 0	1	0	0	2	0	0	0	0

SS statistics:

Class	Rx (WR_RCVD)	Tx (RD_SENT)
0	0	0
1	0	0
2	0	0
3	0	0
4	0	0
5	0	0
6	0	0
7	0	0

Rx Discard (WR\_DISC): 0  
 Rx Multicast Discard (WR\_DISC\_MC): 0  
 Rx Error (WR\_RCV\_ERR): 0

OQ statistics:  
 Packets flushed: 0  
 Packets timed out: 0

Pause statistics:

CoS	Rx PFC Xoff	Tx PFC Xoff
0	0	0
1	0	0
2	0	0
3	0	0
4	0	0
5	0	0
6	0	0
7	0	0

Rx Xoff: 0  
 Rx Xon: 0  
 Tx Xoff: 0  
 Tx Xon: 0

```

Rx PFC:          0
Tx PFC:          0
Rx Xoff Status:  0x00
Tx Xoff Status:  0x00

SS  RdPort  Class  Head   Tail   QCount  RealQCountRx
-----+-----+-----+-----+-----+-----
0   1        0     3113   9348   0        0
0   1        1     11057  4864   0        0
0   1        2     5356   4257   0        0
0   1        3     12304  10048  0        0
0   1        4     11346  2368   0        0
0   1        5     162    165    0        0
0   1        6     14500  112    0        0
0   1        7     12314  9602   0        0
fex-101#

```

### Input queuing (system type queuing input policy)



**Note** System input queuing is applied on NIF Ports for HIF to NIF traffic.

- Class map (system defined class map) configuration:

```

switch# show class-map type queuing
Type queuing class-maps
=====
class-map type queuing match-any c-out-q3
  Description: Classifier for Egress queue 3
  match qos-group 3

class-map type queuing match-any c-out-q2
  Description: Classifier for Egress queue 2
  match qos-group 2

class-map type queuing match-any c-out-q1
  Description: Classifier for Egress queue 1
  match qos-group 1

class-map type queuing match-any c-out-q-default
  Description: Classifier for Egress default queue
  match qos-group 0

class-map type queuing match-any c-in-q3
  Description: Classifier for Ingress queue 3
  match qos-group 3

class-map type queuing match-any c-in-q2
  Description: Classifier for Ingress queue 2
  match qos-group 2

class-map type queuing match-any c-in-q1
  Description: Classifier for Ingress queue 1
  match qos-group 1

class-map type queuing match-any c-in-q-default
  Description: Classifier for Ingress default queue
  match qos-group 0
switch#

```

- Policy map configuration:

```
switch# conf t
Enter configuration commands, one per line. End with CNTL/Z.
switch(config)# policy-map type queuing inq_pri
switch(config-pmap-que)# class type queuing c-in-q3
switch(config-pmap-c-que)# priority level 1
switch(config-pmap-c-que)# class type queuing c-in-q2
switch(config-pmap-c-que)# bandwidth remaining percent 50
switch(config-pmap-c-que)# class type queuing c-in-q1
switch(config-pmap-c-que)# bandwidth remaining percent 30
switch(config-pmap-c-que)# class type queuing c-in-q-default
switch(config-pmap-c-que)# bandwidth remaining percent 20
switch(config-pmap-c-que)#
```

- Attach service policy to system target configuration:

```
switch# conf t
Enter configuration commands, one per line. End with CNTL/Z.

switch(config)# system qos
switch(config-sys-qos)# service-policy type queuing input inq_pri
```

- Verifying input queuing:

```
switch# show policy-map system type queuing input

Service-policy (queuing) input:  inq_pri
policy statistics status:  disabled (current status: disabled)

Class-map (queuing):  c-in-q3 (match-any)
priority level 1

Class-map (queuing):  c-in-q2 (match-any)
bandwidth remaining percent 50

Class-map (queuing):  c-in-q1 (match-any)
bandwidth remaining percent 30

Class-map (queuing):  c-in-q-default (match-any)
bandwidth remaining percent 20

switch# attach fex 101

fex-101# show platform software qosctrl port 0 0 nif 1
number of arguments 6: show port 0 0 2 1
-----
QoSctrl internal info {mod 0x0 asic 0 type 2 port 1}

PI mod 0 front port 0 if_index 0x00000000
ups 0 downs 0 binds 0
Media type 3
Port speed 10000
MAC addr 00:00:00:00:00:00
Port state: , Down

fabric_num 0, ctrl_vntag 0
ctrl_vlan 0, vntag_etype 0

Untagged COS config valid: no
Untagged COS dump:
```

```

rx_cos_def[0]=0, tx_cos_def[0]=0
rx_cos_def[1]=3, tx_cos_def[1]=3

Last queueing config recvd from supId: 0

-----SUP 0 start -----

Queueing config per qos_group
Interface queueing config valid: no

Queueing per qos_group: 00006|
  |id|bw%|bw_unit|priority
grp |00|100|0000000|00000000
grp |01|000|0000000|00000000
grp |02|000|0000000|00000000
grp |03|000|0000000|00000000
grp |04|000|0000000|00000000
grp |05|000|0000000|00000000

Scheduling Classes 00008|
  |id|cbmp|qid|bw%|nor_bw%|bw_unit|prio|dir |q2cos|class_grp|wk_gmap
class |00|0x01|000|000|0000000|0000007|0001| TX| 0x80|000000000|00000004
class |01|0x02|001|000|0000000|0000007|0001| TX| 0x00|000000000|00000005
class |02|0x04|002|000|0000000|0000007|0000| TX| 0x08|000000002|00000000
class |03|0x08|003|100|0000100|0000007|0000| TX| 0xf7|000000003|00000000
class |04|0x10|004|000|0000000|0000007|0000| TX| 0x00|000000003|00000000
class |05|0x20|005|000|0000000|0000007|0000| TX| 0x00|000000003|00000000
class |06|0x40|006|000|0000000|0000007|0000| TX| 0x00|000000003|00000000
class |07|0x80|007|000|0000000|0000007|0000| TX| 0x00|000000003|00000000

-----SUP 0 end -----

-----SUP 1 start -----

Queueing config per qos_group
Interface queueing config valid: no

Queueing per qos_group: 00006|
  |id|bw%|bw_unit|priority
grp |00|100|0000000|00000000
grp |01|000|0000000|00000000
grp |02|000|0000000|00000000
grp |03|000|0000000|00000000
grp |04|000|0000000|00000000
grp |05|000|0000000|00000000

Scheduling Classes 00008|
  |id|cbmp|qid|bw%|nor_bw%|bw_unit|prio|dir |q2cos|class_grp|wk_gmap
class |00|0x01|000|000|0000000|0000007|0001| TX| 0x80|000000000|00000004
class |01|0x02|001|000|0000000|0000007|0001| TX| 0x00|000000000|00000005
class |02|0x04|002|000|0000000|0000007|0000| TX| 0x08|000000002|00000000
class |03|0x08|003|100|0000100|0000007|0000| TX| 0xf7|000000003|00000000
class |04|0x10|004|000|0000000|0000007|0000| TX| 0x00|000000003|00000000
class |05|0x20|005|000|0000000|0000007|0000| TX| 0x00|000000003|00000000
class |06|0x40|006|000|0000000|0000007|0000| TX| 0x00|000000003|00000000
class |07|0x80|007|000|0000000|0000007|0000| TX| 0x00|000000003|00000000

-----SUP 1 end -----

PFC 1 (enabled), net_port 0x0
END of PI SECTION
NIFO/0/1

```



Default CoS: 0

CoS	Rx-Remap	Tx-Remap	Class
0	0	0	3
1	1	1	4
2	2	2	5
3	3	3	5
4	4	4	2
5	5	5	2
6	6	6	2
7	7	7	1

Class	FRH	CT-En	MTU-Cells [Bytes]
0	0	1	30 [2400 ]
1	0	1	30 [2400 ]
2	2	1	116 [9280 ]
3	3	1	116 [9280 ]
4	4	1	116 [9280 ]
5	5	1	116 [9280 ]
6	2	1	127 [10160]
7	2	1	127 [10160]

FRH configuration:

Port En: 1, Tail Drop En: 1, Emergency Stop En: 1, Err Discard En: 1

FRH	Xon	Xoff	Total	Pause	u-Pause	Class-Map
0	2	6	16	1	0	0x03
1	0	0	0	0	0	0x00
2	0	0	0	0	0	0x04
3	0	0	0	0	0	0x08
4	0	0	0	0	0	0x10
5	0	0	0	0	0	0x20
6	0	0	0	0	0	0x00
7	0	0	0	0	0	0x00

Global FRH:

FRH Map: 0x3c, Pause Class Map: 0x3c

Xoff Threshold: 0, Total Credits: 0

Pause configuration:

PFC disabled

Rx PFC CoS map: 0x00, Tx PFC CoS map: 0x00

Index	CoS-to-Class	Class-to-CoS
0	0x00	0xff
1	0x00	0xff
2	0x00	0xff
3	0x00	0xff
4	0x00	0xff
5	0x00	0xff
6	0x00	0xff
7	0x00	0xff

OQ configuration:

Credit Quanta: 1, IPG Adjustment: 0

PQ0 En: 0, PQ0 Class: 0

PQ1 En: 0, PQ1 Class: 0

Class	XoffToMap	TD	HD	DP	Grp	LSP	GSP	CrDec	bw
0	0	0	0	0	0	0	0	0	0
1	0	0	0	0	0	0	0	0	0
2	0	0	0	0	0	0	0	0	0
3	0	0	0	0	0	0	0	0	0
4	0	0	0	0	0	0	0	0	0
5	0	0	0	0	0	0	0	0	0
6	0	0	0	0	0	0	0	0	0
7	0	0	0	0	0	0	0	0	0

```

0      0 0      0 0 1 0 1 0 0 0
1      0 0      0 0 1 1 0 1 0 0
2      0 0      0 0 1 2 0 0 24 20
3      0 0      0 0 1 2 0 0 16 30
4      0 0      0 0 1 2 0 0 10 50
5      0 0      0 0 1 2 0 1 255 0
6      0 0      0 0 1 2 0 0 0 0
7      0 0      0 0 1 2 0 0 0 0

```

## SS statistics:

```

Class  Rx (WR_RCVD)      Tx (RD_SENT)
-----+-----
0      0                  68719476736
1      0                  0
2      0                  0
3      0                  0
4      0                  0
5      0                  0
6      0                  0
7      0                  0

```

```

Rx Discard (WR_DISC):      0
Rx Multicast Discard (WR_DISC_MC): 0
Rx Error (WR_RCV_ERR):    0

```

## OQ statistics:

```

Packets flushed: 0
Packets timed out: 0

```

## Pause statistics:

```

CoS    Rx PFC Xoff      Tx PFC Xoff
-----+-----
0      0                  0
1      0                  0
2      0                  0
3      0                  0
4      0                  0
5      0                  0
6      0                  0
7      0                  0

```

```

Rx Xoff:      0
Rx Xon:       0
Tx Xoff:      0
Tx Xon:       0
Rx PFC:       0
Tx PFC:       0
Rx Xoff Status: 0x00
Tx Xoff Status: 0x00

```

```
fex-101#
```

### Output queuing (system type queuing output policy)



**Note** System Output queuing is applied on HIF Ports for NIF to HIF traffic.

- Policy map (system defined policy map):

```
switch# show policy-map type queuing default-out-policy
```

```
Type queuing policy-maps
=====

policy-map type queuing default-out-policy
  class type queuing c-out-q3
    priority level 1
  class type queuing c-out-q2
    bandwidth remaining percent 0
  class type queuing c-out-q1
    bandwidth remaining percent 0
  class type queuing c-out-q-default
    bandwidth remaining percent 100
```

- Policy map (user defined policy map) configuration:

```
switch# conf t
Enter configuration commands, one per line. End with CNTL/Z.
switch(config)# policy-map type queuing outq
switch(config-pmap-que)# class type queuing c-out-q3
switch(config-pmap-c-que)# bandwidth percent 40
switch(config-pmap-c-que)# class type queuing c-out-q2
switch(config-pmap-c-que)# bandwidth percent 30
switch(config-pmap-c-que)# class type queuing c-out-q1
switch(config-pmap-c-que)# bandwidth percent 20
switch(config-pmap-c-que)# class type queuing c-out-q-default
switch(config-pmap-c-que)# bandwidth percent 10
switch(config-pmap-c-que)#
```

- Attach service policy to system target configuration:

```
switch# conf t
Enter configuration commands, one per line. End with CNTL/Z.

switch(config)# system qos
switch(config-sys-qos)# service-policy type queuing output outq
```

- Verifying output queuing:

```
switch# show policy-map system type queuing output

Service-policy (queuing) output:  outq
policy statistics status:  disabled (current status: disabled)

Class-map (queuing):  c-out-q3 (match-any)
bandwidth percent 40

Class-map (queuing):  c-out-q2 (match-any)
bandwidth percent 30

Class-map (queuing):  c-out-q1 (match-any)
bandwidth percent 20

Class-map (queuing):  c-out-q-default (match-any)
bandwidth percent 10

switch# show queuing interface ethernet 101/1/1

slot 1
=====
Ethernet101/1/1 queuing information:
Input buffer allocation:
Qos-group: ctrl
```

```

frh: 0
drop-type: drop
cos: 7
xon      xoff      buffer-size
-----+-----+-----
2560    7680    10240
Qos-group: 0 1 2 3 (shared)
frh: 2
drop-type: drop
cos: 0 1 2 3 4 5 6
xon      xoff      buffer-size
-----+-----+-----
19200   24320   48640
Queueing:
queue  qos-group  cos          priority bandwidth mtu
-----+-----+-----+-----+-----+-----
ctrl-hi n/a          7            PRI        0         2400
ctrl-lo n/a          7            PRI        0         2400
2       0            4 5 6       WRR       10        9280
3       1            0           WRR       20        9280
4       2            1           WRR       30        9280
5       3            2 3        WRR       40        9280
Queue limit: 66560 bytes

```

## Queue Statistics:

```

queue  rx          tx          flags
-----+-----+-----+-----
0      0          68719476760  ctrl
1      1           1           ctrl
2      0           0           data
3      1          109453       data
4      0           0           data
5      0           0           data

```

## Port Statistics:

```

rx drop      rx mcast drop  rx error      tx drop      mux overflow
-----+-----+-----+-----+-----
0            0              0              0            InActive

```

Priority-flow-control enabled: no

Flow-control status: rx 0x0, tx 0x0, rx\_mask 0x0

```

cos      qos-group  rx pause  tx pause  masked rx pause
-----+-----+-----+-----+-----
0        1      xon      xon      xon
1        2      xon      xon      xon
2        3      xon      xon      xon
3        3      xon      xon      xon
4        0      xon      xon      xon
5        0      xon      xon      xon
6        0      xon      xon      xon
7        n/a    xon      xon      xon

```

DSCP to Queue mapping on FEX

-----+-----+-----+-----+-----

DSCP to Queue map disabled

FEX TCAM programmed successfully

switch#

```

switch# attach fex 101
fex-101# show platform software qosctrl port 0 0 hif 1

```

```

number of arguments 6: show port 0 0 3 1
-----
QoSCtrl internal info {mod 0x0 asic 0 type 3 port 1}

PI mod 0 front port 0 if_index 0x00000000
  ups 0 downs 0 binds 0
Media type 0
Port speed 0
MAC addr b0:00:b4:32:05:e2
Port state: , Down

Untagged COS config valid: no
Untagged COS dump:
rx_cos_def[0]=0, tx_cos_def[0]=0
rx_cos_def[1]=3, tx_cos_def[1]=3
Last queueing config recvd from supId: 0
-----SUP 0 start -----

Queueing config per qos_group
Interface queueing config valid: no

Queueing per qos_group: 00006|
  |id|bw%|bw_unit|priority
grp |00|100|00000000|00000000
grp |01|000|00000000|00000000
grp |02|000|00000000|00000000
grp |03|000|00000000|00000000
grp |04|000|00000000|00000000
grp |05|000|00000000|00000000

Scheduling Classes 00008|
  |id|cbmp|qid|bw%|nor_bw%|bw_unit|prio|dir |q2cos|class_grp|wk_gmap
class |00|0x01|000|000|0000000|0000007|0001| TX| 0x80|000000000|0000000
class |01|0x02|001|000|0000000|0000007|0001| TX| 0x00|000000000|0000000
class |02|0x04|002|000|0000000|0000007|0000| TX| 0x08|000000002|0000000
class |03|0x08|003|100|0000100|0000007|0000| TX| 0xf7|000000003|0000000
class |04|0x10|004|000|0000000|0000007|0000| TX| 0x00|000000003|0000000
class |05|0x20|005|000|0000000|0000007|0000| TX| 0x00|000000003|0000000
class |06|0x40|006|000|0000000|0000007|0000| TX| 0x00|000000003|0000000
class |07|0x80|007|000|0000000|0000007|0000| TX| 0x00|000000003|0000000

-----SUP 0 end -----

-----SUP 1 start -----

Queueing config per qos_group
Interface queueing config valid: no

Queueing per qos_group: 00006|
  |id|bw%|bw_unit|priority
grp |00|100|00000000|00000000
grp |01|000|00000000|00000000
grp |02|000|00000000|00000000
grp |03|000|00000000|00000000
grp |04|000|00000000|00000000
grp |05|000|00000000|00000000

Scheduling Classes 00008|
  |id|cbmp|qid|bw%|nor_bw%|bw_unit|prio|dir |q2cos|class_grp|wk_gmap
class |00|0x01|000|000|0000000|0000007|0001| TX| 0x80|000000000|0000000
class |01|0x02|001|000|0000000|0000007|0001| TX| 0x00|000000000|0000000
class |02|0x04|002|000|0000000|0000007|0000| TX| 0x08|000000002|0000000
class |03|0x08|003|100|0000100|0000007|0000| TX| 0xf7|000000003|0000000
class |04|0x10|004|000|0000000|0000007|0000| TX| 0x00|000000003|0000000

```

```

class |05|0x20|005|000|0000000|0000007|0000| TX| 0x00|000000003|0000000
class |06|0x40|006|000|0000000|0000007|0000| TX| 0x00|000000003|0000000
class |07|0x80|007|000|0000000|0000007|0000| TX| 0x00|000000003|0000000

```

```

-----SUP 1 end -----

```

```

PFC 0 (disabled), net_port 0x0
END of PI SECTION
HIF0/0/1

```

#### Default CoS: 0

CoS	Rx-Remap	Tx-Remap	Class
0	0	0	3
1	1	1	4
2	2	2	5
3	3	3	5
4	4	4	2
5	5	5	2
6	6	6	2
7	7	7	1

Class	FRH	CT-En	MTU-Cells	[Bytes]
0	0	0	30	[2400 ]
1	0	0	30	[2400 ]
2	2	0	116	[9280 ]
3	2	0	116	[9280 ]
4	2	0	116	[9280 ]
5	2	0	116	[9280 ]
6	2	0	127	[10160]
7	2	0	127	[10160]

#### FRH configuration:

```

Port En: 1, Tail Drop En: 0, Emergency Stop En: 1, Err Discard En: 1

```

FRH	Xon	Xoff	Total	Pause	u-Pause	Class-Map
0	2	6	8	1	0	0x03
1	0	0	0	0	0	0x00
2	15	19	38	1	0	0x3c
3	0	0	0	0	0	0x00
4	0	0	0	0	0	0x00
5	0	0	0	0	0	0x00
6	0	0	0	0	0	0x00
7	0	0	0	0	0	0x00

#### Global FRH:

```

FRH Map: 0x00, Pause Class Map: 0x00
Xoff Threshold: 0, Total Credits: 0

```

#### Pause configuration:

```

PFC disabled
Rx PFC CoS map: 0x00, Tx PFC CoS map: 0x00

```

Index	CoS-to-Class	Class-to-CoS
0	0x00	0xff
1	0x00	0xff
2	0x00	0xff
3	0x00	0xff
4	0x00	0xff
5	0x00	0xff

```

6      0x00      0xff
7      0x00      0xff

```

## OQ configuration:

```

Credit Quanta: 1, IPG Adjustment: 0
PQ0 En: 0, PQ0 Class: 0
PQ1 En: 0, PQ1 Class: 0

```

Class	XoffToMap	TD	HD	DP	Grp	LSP	GSP	CrDec	bw
0	0 0	1	0	0	0	1	0	0	0
1	0 0	1	0	0	1	0	1	0	0
2	0 0	1	0	0	2	0	0	50	10
3	0 0	1	0	0	2	0	0	24	20
4	0 0	1	0	0	2	0	0	16	30
5	0 0	1	0	0	2	0	0	12	40
6	0 0	1	0	0	2	0	0	0	0
7	0 0	1	0	0	2	0	0	0	0

## SS statistics:

Class	Rx (WR_RCVD)	Tx (RD_SENT)
0	0	0
1	0	0
2	0	0
3	0	0
4	0	0
5	0	0
6	0	0
7	0	0

```

Rx Discard (WR_DISC): 0
Rx Multicast Discard (WR_DISC_MC): 0
Rx Error (WR_RCV_ERR): 0

```

## OQ statistics:

```

Packets flushed: 0
Packets timed out: 0

```

## Pause statistics:

CoS	Rx PFC Xoff	Tx PFC Xoff
0	0	0
1	0	0
2	0	0
3	0	0
4	0	0
5	0	0
6	0	0
7	0	0

```

Rx Xoff: 0
Rx Xon: 0
Tx Xoff: 0
Tx Xon: 0
Rx PFC: 0
Tx PFC: 0
Rx Xoff Status: 0x00
Tx Xoff Status: 0x00

```

SS	RdPort	Class	Head	Tail	QCount	RealQCountRx
0	1	0	3113	9348	0	0
0	1	1	11057	4864	0	0
0	1	2	5356	4257	0	0

```

0 1 3 12304 10048 0 0
0 1 4 11346 2368 0 0
0 1 5 162 165 0 0
0 1 6 14500 112 0 0
0 1 7 12314 9602 0 0
fex-101#

```

## Verifying the FEX QoS Configuration

Use the following commands to verify the FEX QoS configuration:

Command	Purpose
<b>show class-map type [qos   queuing]</b>	Displays information about configured class maps of type qos or queuing.
<b>show policy-map type [qos   queuing]</b>	Displays information about configured policy maps of type qos or queuing.
<b>show policy-map system type [qos   queuing]</b>	Displays information about all configured policy maps of type qos or queuing on the system.
<b>show queuing interface ethernet</b>	Displays information about queuing on the ethernet interface.





## APPENDIX **B**

### Additional References

---

This appendix contains additional information related to implementing QoS on the Cisco NX-OS device.

This appendix includes the following sections:

- [RFCs, on page 211](#)

### RFCs

<b>RFCs</b>	<b>Title</b>
RFC 2474	<i>Differentiated Services Field</i>
RFC 2475	<i>Architecture for Differentiated Services</i>
RFC 2697	<i>A Single Rate Three Color Marker</i>
RFC 2698	<i>A Dual Rate Three Color Marker</i>
RFC 3289	<i>Management Information Base for the Differentiated Services Architecture</i>





## INDEX

- C**
- class type queuing [186–187](#)
  - congestion-control random-detect forward-nonecn [120, 122](#)
- H**
- hardware profile tcam resource service-template [53](#)
  - hardware profile tcam resource template [52](#)
  - hardware qos burst-detect rise-threshold [186–187](#)
- I**
- interface ethernet [184–187](#)
- P**
- policy-map type queuing [186–187](#)
  - priority-flow-control override-interface mode off [159](#)
  - priority-flow-control watch-dog internal-interface-multiplier [164, 166](#)
  - priority-flow-control watch-dog interval [164, 166](#)
  - priority-flow-control watch-dog shutdown-multiplier [164, 166](#)
  - priority-flow-control watch-dog-interval [164–165](#)
- R**
- reload [52–53](#)
- S**
- service-policy type queuing output [184–187](#)
  - show hardware access-list tcam template [53](#)

