



## **Cisco ONS SONET TL1 Command Guide**

Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6  
Product and Documentation Release 9.3  
April 2014

**Cisco Systems, Inc.**  
[www.cisco.com](http://www.cisco.com)

Cisco has more than 200 offices worldwide.  
Addresses, phone numbers, and fax numbers  
are listed on the Cisco website at  
[www.cisco.com/go/offices](http://www.cisco.com/go/offices).

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The following information is for FCC compliance of Class A devices: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio-frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to correct the interference at their own expense.

The following information is for FCC compliance of Class B devices: The equipment described in this manual generates and may radiate radio-frequency energy. If it is not installed in accordance with Cisco's installation instructions, it may cause interference with radio and television reception. This equipment has been tested and found to comply with the limits for a Class B digital device in accordance with the specifications in part 15 of the FCC rules. These specifications are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation.

Modifying the equipment without Cisco's written authorization may result in the equipment no longer complying with FCC requirements for Class A or Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense.

You can determine whether your equipment is causing interference by turning it off. If the interference stops, it was probably caused by the Cisco equipment or one of its peripheral devices. If the equipment causes interference to radio or television reception, try to correct the interference by using one or more of the following measures:

- Turn the television or radio antenna until the interference stops.
- Move the equipment to one side or the other of the television or radio.
- Move the equipment farther away from the television or radio.
- Plug the equipment into an outlet that is on a different circuit from the television or radio. (That is, make certain the equipment and the television or radio are on circuits controlled by different circuit breakers or fuses.)

Modifications to this product not authorized by Cisco Systems, Inc. could void the FCC approval and negate your authority to operate the product.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: [www.cisco.com/go/trademarks](http://www.cisco.com/go/trademarks). Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental.

*Cisco ONS SONET TL1 Command Guide, Release 9.3*

Copyright © 2007–2014 Cisco Systems, Inc. All rights reserved.



# CONTENTS

<b>Preface</b>	<b>xix</b>
Revision History	xix
Document Objectives	xx
Audience	xxi
Important Notes about TL1 Commands	xxi
Related Documentation	xxi
Document Conventions	xxii
Obtaining Optical Networking Information	xxviii
Where to Find Safety and Warning Information	xxviii
Cisco Optical Networking Product Documentation CD-ROM	xxviii
Obtaining Documentation and Submitting a Service Request	xxviii
<b>Cisco ONS Documentation Roadmap for Release 9.3</b>	<b>xxix</b>

---

**CHAPTER 1****ACT Commands** 1-1

## 1.1 ACT-USER 1-1

---

**CHAPTER 2****ALW Commands** 2-1

- 2.1 ALW-CONSOLE-PORT 2-1
- 2.2 ALW-MSG-ALL 2-2
- 2.3 ALW-MSG-DBCHG 2-2
- 2.4 ALW-MSG-SECU 2-3
- 2.5 ALW-PMREPT-ALL 2-3
- 2.6 ALW-SWDX-EQPT 2-4
- 2.7 ALW-SWTOPTN-EQPT 2-5
- 2.8 ALW-SWTOWKG-EQPT 2-6
- 2.9 ALW-USER-SECU 2-7

---

**CHAPTER 3****APPLY Commands** 3-1

## 3.1 APPLY 3-1

---

**CHAPTER 4****CANC Commands and Messages** 4-1

## 4.1 CANC 4-1

- 4.2 CANC-USER 4-2
- 4.3 CANC-USER-SECU 4-2

**CHAPTER 5**

**CHG Commands 5-1**

- 5.1 CHG-ACCMD-<MOD\_TACC> 5-1
- 5.2 CHG-EQPT 5-3

**CHAPTER 6**

**CLR Commands 6-1**

- 6.1 CLR-CCDB-CFM 6-1
- 6.2 CLR-COND-SECU 6-2
- 6.3 CLR-MACTABLE 6-2
- 6.4 CLR-MEPSTATS-CFM 6-3

**CHAPTER 7**

**CONN Commands 7-1**

- 7.1 CONN-TACC-<MOD\_TACC> 7-1

**CHAPTER 8**

**COPY Commands 8-1**

- 8.1 COPY-IOSCFG 8-1
- 8.2 COPY-RFILE 8-3
  - Prerequisite 8-3

**CHAPTER 9**

**DISC Commands 9-1**

- 9.1 DISC-TACC 9-1

**CHAPTER 10**

**DLT Commands 10-1**

- 10.1 DLT-<MOD1PAYLOAD> 10-1
- 10.2 DLT-<MOD\_RING> 10-2
- 10.3 DLT-ALMTYPE 10-3
- 10.4 DLT-BULKROLL-<OCN\_TYPE> 10-3
- 10.5 DLT-BWP-ETH 10-4
- 10.6 DLT-CRS-<PATH> 10-5
- 10.7 DLT-CRS-ETH 10-7
- 10.8 DLT-EQPT 10-8
- 10.9 DLT-FFP-<MOD2DWDMPAYLOAD> 10-9
- 10.10 DLT-FFP-<OCN\_TYPE> 10-10
- 10.11 DLT-FOG 10-11

10.12	DLT-FTPSERVER	10-11
10.13	DLT-LMP-CTRL	10-12
10.14	DLT-LMP-TLINK	10-12
10.15	DLT-LMP-DLINK	10-13
10.16	DLT-LNK	10-13
10.17	DLT-LNKTERM	10-14
10.18	DLT-MA-CFM	10-15
10.19	DLT-MD-CFM	10-15
10.20	DLT-MDMAMAP-CFM	10-16
10.21	DLT-MEP-CFM	10-17
10.22	DLT-MIP-CFM	10-18
10.23	DLT-NNI-ETH	10-19
10.24	DLT-NNI-CHGRP	10-19
10.25	DLT-QNQ-ETH	10-20
10.26	DLT-OCHCC	10-21
10.27	DLT-OCHNC	10-22
10.28	DLT-QNQ-CHGRP	10-22
10.29	DLT-REP	10-23
10.30	DLT-RMONTH-<MOD2_RMON>	10-24
10.31	DLT-ROLL-<MOD_PATH>	10-29
10.32	DLT-ROUTE	10-30
10.33	DLT-ROUTE-GRE	10-31
10.34	DLT-TADRMAP	10-31
10.35	DLT-TRAPTABLE	10-32
10.36	DLT-TUNNEL-FIREWALL	10-33
10.37	DLT-TUNNEL-PROXY	10-33
10.38	DLT-USER-SECU	10-34
10.39	DLT-VCG	10-34
10.40	DLT-VLAN	10-35
10.41	DLT-WDMANS	10-36
10.42	DLT-WDMSIDE	10-41

**CHAPTER 11****ED Commands 11-1**

11.1	ED-<GIGE_TYPE>	11-1
11.2	ED-<MOD1FCPAYLOAD>	11-11
11.3	ED-<MOD1FICONPAYLOAD>	11-19

11.4	ED-<MOD2DWDMPAYLOAD>	11-26
11.5	ED-<MOD_PATH>	11-32
11.6	ED-<MOD_RING>	11-37
11.7	ED-<OCN_TYPE>	11-38
11.8	ED-ALS	11-49
11.9	ED-APC	11-50
11.10	ED-BITS	11-50
11.11	ED-BULKROLL-<OCN_TYPE>	11-53
11.12	ED-BWP-ETH	11-54
11.13	ED-CFM	11-56
11.14	ED-CHGRP	11-56
11.15	ED-CMD-SECU	11-59
11.16	ED-COS-ETH	11-60
11.17	ED-CRS-<PATH>	11-62
11.18	ED-CRS-ETH	11-64
11.19	ED-DAT	11-65
11.20	ED-DS1	11-66
11.21	ED-DSCP-<MOD2>	11-68
11.22	ED-EC1	11-69
11.23	ED-EFM	11-72
11.24	ED-ETH	11-73
11.25	ED-EQPT	11-75
11.26	ED-FAC	11-80
11.27	ED-FFP-<MOD2DWDMPAYLOAD>	11-82
11.28	ED-FFP-<OCN_TYPE>	11-83
11.29	ED-FFP-OCH	11-84
11.30	ED-FFP-OTS	11-86
11.31	ED-FOG	11-87
11.32	ED-FSTE	11-87
11.33	ED-FTPSERVER	11-91
11.34	ED-G1000	11-91
11.35	ED-GFP	11-93
11.36	ED-HDLC	11-94
11.37	ED-L2-ETH	11-95
11.38	ED-LM-EFM	11-99

11.39	ED-LMP	11-100
11.40	ED-LMP-CTRL	11-100
11.41	ED-LMP-TLINK	11-102
11.42	ED-LMP-DLINK	11-103
11.43	ED-LNK	11-104
11.44	ED-LNKTERM	11-105
11.45	ED-MA-CFM	11-106
11.46	ED-MCAST	11-107
11.47	ED-MIP-CFM	11-108
11.48	ED-NE-GEN	11-109
11.49	ED-NE-PATH	11-111
11.50	ED-NE-SYCN	11-112
11.51	ED-OCH	11-114
11.52	ED-OCHCC	11-125
11.53	ED-OCHNC	11-126
11.54	ED-OMS	11-129
11.55	ED-OTS	11-130
11.56	ED-OTU2	11-133
11.57	ED-PID	11-140
11.58	ED-POS	11-141
11.59	ED-PROTOCOL	11-142
11.60	ED-QNQ-CHGRP	11-143
11.61	ED-QNQ-ETH	11-144
11.62	ED-REP	11-146
11.63	ED-ROLL-<MOD_PATH>	11-146
11.64	ED-SLV-WDMANS	11-148
11.65	ED-STCN-REP	11-148
11.66	ED-SYCN	11-149
11.67	ED-T1	11-150
11.68	ED-T3	11-155
11.69	ED-TRAPTABLE	11-160
11.70	ED-TRC-OCH	11-160
11.71	ED-TRC-OTU2	11-162
11.72	ED-TRC-OTU3	11-163
11.73	ED-USER-SECU	11-164

11.74	ED-VCG	11-165
11.75	ED-VLAN	11-166
11.76	ED-VLAN-ETH	11-167
11.77	ED-VLB-REP	11-168
11.78	ED-WDMANS	11-169
11.79	ED-WDMSIDE	11-175

**CHAPTER 12**

**ENT Commands 12-1**

12.1	ENT-<MOD1PAYLOAD>	12-1
12.2	ENT-<MOD_RING>	12-2
12.3	ENT-ALMTYPE	12-5
12.4	ENT-BULKROLL-<OCN_TYPE>	12-5
12.5	ENT-BWP-ETH	12-7
12.6	ENT-CRS-<PATH>	12-8
12.7	ENT-CRS-ETH	12-12
12.8	ENT-EQPT	12-13
12.9	ENT-FFP-<MOD2DWDMPAYLOAD>	12-23
12.10	ENT-FFP-<OCN_TYPE>	12-24
12.11	ENT-FOG	12-27
12.12	ENT-FTPSERVER	12-27
12.13	ENT-LMP-CTRL	12-28
12.14	ENT-LMP-DLINK	12-30
12.15	ENT-LMP-TLINK	12-30
12.16	ENT-LNK	12-32
12.17	ENT-LNKTERM	12-33
12.18	ENT-MA-CFM	12-34
12.19	ENT-MD-CFM	12-35
12.20	ENT-MDMAMAP-CFM	12-36
12.21	ENT-MEP-CFM	12-38
12.22	ENT-MIP-CFM	12-38
12.23	ENT-NNI-ETH	12-39
12.24	ENT-NNI-CHGRP	12-40
12.25	ENT-OCHCC	12-41
12.26	ENT-OCHNC	12-42
12.27	ENT-QNQ-CHGRP	12-44
12.28	ENT-QNQ-ETH	12-45

12.29	ENT-REP	12-46
12.30	ENT-RMONTH-<MOD2_RMON>	12-47
12.31	ENT-ROLL-<MOD_PATH>	12-53
12.32	ENT-ROUTE	12-54
12.33	ENT-ROUTE-GRE	12-55
12.34	ENT-TADRMAP	12-56
12.35	ENT-TRAPTABLE	12-57
12.36	ENT-TUNNEL-FIREWALL	12-58
12.37	ENT-TUNNEL-PROXY	12-58
12.38	ENT-USER-SECU	12-59
12.39	ENT-VCG	12-60
12.40	ENT-VLAN	12-62
12.41	ENT-WDMANS	12-63
12.42	ENT-WDMSIDE	12-69

**CHAPTER 13****EX Commands 13-1**

13.1	EX-SW-<OCN_BLSR>	13-1
------	------------------	------

**CHAPTER 14****INH Commands 14-1**

14.1	INH-CONSOLE-PORT	14-1
14.2	INH-MSG-ALL	14-2
14.3	INH-MSG-DBCHG	14-2
14.4	INH-MSG-SECU	14-3
14.5	INH-PMREPT-ALL	14-3
14.6	INH-SWDX-EQPT	14-4
14.7	INH-SWTOPTN-EQPT	14-5
14.8	INH-SWTOWKG-EQPT	14-6
14.9	INH-USER-SECU	14-8

**CHAPTER 15****INIT Commands 15-1**

15.1	INIT-REG-<MOD2>	15-1
15.2	INIT-SYS	15-7

**CHAPTER 16****OPR Commands 16-1**

16.1	OPR-ACO-ALL	16-1
16.2	OPR-ALS	16-2

- 16.3 OPR-APC 16-2
- 16.4 OPR-EXT-CONT 16-3
- 16.5 OPR-LPBK-<MOD2> 16-4
- 16.6 OPR-LPBK-EFM 16-6
- 16.7 OPR-PROTNSW-<MOD2DWDMPAYLOAD> 16-7
- 16.8 OPR-PROTNSW-<OCN\_TYPE> 16-8
- 16.9 OPR-PROTNSW-<PATH> 16-11
- 16.10 OPR-PROTNSW-OCH 16-12
- 16.11 OPR-PROTNSW-OTS 16-13
- 16.12 OPR-RAMAN 16-13
- 16.13 OPR-SLV-WDMANS 16-15
- 16.14 OPR-SYNCNSW 16-15
- 16.15 OPR-VLB-REP 16-16
- 16.16 OPR-WDMANS 16-17

**CHAPTER 17**

**REPT Messages 17-1**

- 17.1 REPT ALM <MOD2ALM> 17-1
- 17.2 REPT ALM BITS 17-7
- 17.3 REPT ALM COM 17-9
- 17.4 REPT ALM ENV 17-10
- 17.5 REPT ALM LMP 17-13
- 17.6 REPT ALM EQPT 17-14
- 17.7 REPT ALM SECU 17-19
- 17.8 REPT ALM SYNCN 17-21
- 17.9 REPT DBCHG 17-25
- 17.10 REPT EVT <MOD2ALM> 17-26
- 17.11 REPT EVT BITS 17-32
- 17.12 REPT EVT COM 17-33
- 17.13 REPT EVT ENV 17-34
- 17.14 REPT EVT EQPT 17-37
- 17.15 REPT EVT FXFR 17-42
- 17.16 REPT EVT IOSCFG 17-43
- 17.17 REPT EVT SECU 17-44
- 17.18 REPT EVT SESSION 17-45
- 17.19 REPT EVT SYNCN 17-46
- 17.20 REPT PM <MOD2> 17-51

17.21 REPT SW 17-57

---

**CHAPTER 18**

**RLS Commands 18-1**

- 18.1 RLS-EXT-CONT 18-1
- 18.2 RLS-LPBK-<MOD2> 18-2
- 18.3 RLS-LPBK-EFM 18-4
- 18.4 RLS-PROTNSW-<MOD2DWDMPAYLOAD> 18-4
- 18.5 RLS-PROTNSW-<OCN\_TYPE> 18-5
- 18.6 RLS-PROTNSW-<PATH> 18-6
- 18.7 RLS-PROTNSW-OCH 18-7
- 18.8 RLS-PROTNSW-OTS 18-8
- 18.9 RLS-SYNCNSW 18-8

---

**CHAPTER 19**

**RMV Commands 19-1**

- 19.1 RMV-<MOD2> 19-1
- 19.2 RMV-EQPT 19-2

---

**CHAPTER 20**

**RST Commands 20-1**

- 20.1 RST-<MOD2> 20-1
- 20.2 RST-EQPT 20-2

---

**CHAPTER 21**

**RTRV Commands 21-1**

- 21.1 RTRV-<MOD1FCPAYLOAD> 21-1
- 21.2 RTRV-<MOD1FICONPAYLOAD> 21-9
- 21.3 RTRV-<MOD2DWDMPAYLOAD> 21-16
- 21.4 RTRV-<MOD\_RING> 21-24
- 21.5 RTRV-<OCN\_TYPE> 21-27
- 21.6 RTRV-<PATH> 21-37
- 21.7 RTRV-10GIGE 21-44
- 21.8 RTRV-ALM-<MOD2ALM> 21-50
- 21.9 RTRV-ALMTYPE 21-55
- 21.10 RTRV-ALM-ALL 21-56
- 21.11 RTRV-ALM-BITS 21-60
- 21.12 RTRV-ALM-ENV 21-63
- 21.13 RTRV-ALM-EQPT 21-68
- 21.14 RTRV-ALM-SYNCN 21-72

21.15	RTRV-ALMTH-<MOD2>	21-76
21.16	RTRV-ALMTH-EQPT	21-79
21.17	RTRV-ALS	21-83
21.18	RTRV-APC	21-86
21.19	RTRV-ATTR-CONT	21-87
21.20	RTRV-ATTR-ENV	21-88
21.21	RTRV-AUDIT-LOG	21-93
21.22	RTRV-BFDLPM-<MOD2>	21-94
21.23	RTRV-BITS	21-95
21.24	RTRV-BULKROLL-<OCN_TYPE>	21-98
21.25	RTRV-BWP-ETH	21-99
21.26	RTRV-CFM	21-102
21.27	RTRV-CHGRP	21-103
21.28	RTRV-CMD-SECU	21-106
21.29	RTRV-COND-<MOD2ALM>	21-107
21.30	RTRV-COND-ALL	21-110
21.31	RTRV-COND-BITS	21-114
21.32	RTRV-COND-ENV	21-118
21.33	RTRV-COND-EQPT	21-122
21.34	RTRV-COND-SYCN	21-126
21.35	RTRV-CONSOLE-PORT	21-129
21.36	RTRV-COS-ETH	21-130
21.37	RTRV-CRS	21-132
21.38	RTRV-CRS-<PATH>	21-135
21.39	RTRV-CRS-ETH	21-140
21.40	RTRV-DFLT-SECU	21-142
21.41	RTRV-DS1	21-144
21.42	RTRV-DSCP-<MOD2>	21-147
21.43	RTRV-EC1	21-148
21.44	RTRV-EFM	21-151
21.45	RTRV-EQPT	21-153
21.46	RTRV-ESCON	21-161
21.47	RTRV-ETH	21-162
21.48	RTRV-EXT-CONT	21-167
21.49	RTRV-FAC	21-168

21.50 RTRV-FFP	21-170
21.51 RTRV-FFP-<MOD2DWDMPAYLOAD>	21-173
21.52 RTRV-FFP-<OCN_TYPE>	21-174
21.53 RTRV-FFP-OCH	21-177
21.54 RTRV-FFP-OTS	21-178
21.55 RTRV-FOG	21-179
21.56 RTRV-FSTE	21-181
21.57 RTRV-FTPSEVER	21-185
21.58 RTRV-G1000	21-187
21.59 RTRV-GFP	21-191
21.60 RTRV-GIGE	21-192
21.61 RTRV-HDLC	21-203
21.62 RTRV-HDR	21-204
21.63 RTRV-INV	21-205
21.64 RTRV-L2-ETH	21-211
21.65 RTRV-L2-TOPO	21-214
21.66 RTRV-LM-EFM	21-215
21.67 RTRV-LMP	21-217
21.68 RTRV-LMP-CTRL	21-218
21.69 RTRV-LMP-TLINK	21-220
21.70 RTRV-LMP-DLINK	21-222
21.71 RTRV-LNK	21-223
21.72 RTRV-LNKTERM	21-230
21.73 RTRV-LOG	21-231
21.74 RTRV-MA-CFM	21-232
21.75 RTRV-MACTABLE	21-233
21.76 RTRV-MAP-NETWORK	21-234
21.77 RTRV-MCAST	21-235
21.78 RTRV-MD-CFM	21-237
21.79 RTRV-MDMAMAP-CFM	21-238
21.80 RTRV-MEP-CFM	21-239
21.81 RTRV-MEPCCDB-CFM	21-240
21.82 RTRV-MEPSTATS-CFM	21-242
21.83 RTRV-MIP-CFM	21-244
21.84 RTRV-MIPCCDB-CFM	21-245

21.85	RTRV-NE-APC	21-246
21.86	RTRV-NE-GEN	21-248
21.87	RTRV-NE-IMGSIGN	21-251
21.88	RTRV-NE-IPMAP	21-252
21.89	RTRV-NE-KEYINFO	21-253
21.90	RTRV-NE-PATH	21-255
21.91	RTRV-NE-SYNCN	21-257
21.92	RTRV-NE-WDMANS	21-259
21.93	RTRV-NETYPE	21-262
21.94	RTRV-NNI-CHGRP	21-263
21.95	RTRV-NNI-ETH	21-264
21.96	RTRV-OCM	21-265
21.97	RTRV-OCH	21-266
21.98	RTRV-OCHCC	21-278
21.99	RTRV-OCHNC	21-280
21.100	RTRV-OMS	21-281
21.101	RTRV-OPM	21-285
21.102	RTRV-OPMOD-PTSYS	21-286
21.103	RTRV-OTS	21-286
21.104	RTRV-OTU2	21-292
21.105	RTRV-PATH-OCH	21-299
21.106	RTRV-PM-<MOD2>	21-302
21.107	RTRV-PM-ALL	21-316
21.108	RTRV-PMMODE-<STS_PATH>	21-330
21.109	RTRV-PMMODE-<VT_PATH>	21-332
21.110	RTRV-PMSCHED-<MOD2>	21-333
21.111	RTRV-PMSCHED-ALL	21-336
21.112	RTRV-POS	21-341
21.113	RTRV-PROTNSW-<MOD2DWDMPAYLOAD>	21-342
21.114	RTRV-PROTNSW-<OCN_TYPE>	21-344
21.115	RTRV-PROTNSW-<PATH>	21-345
21.116	RTRV-PROTNSW-OCH	21-347
21.117	RTRV-PROTNSW-OTS	21-348
21.118	RTRV-PROTOCOL	21-350
21.119	RTRV-PTHTRC-<PATH>	21-351

21.120	RTRV-PTSYS	21-354
21.121	RTRV-QNQ-CHGRP	21-355
21.122	RTRV-QNQ-ETH	21-357
21.123	RTRV-RAMAN	21-358
21.124	RTRV-REP	21-359
21.125	RTRV-RMONTH-<MOD2_RMON>	21-361
21.126	RTRV-ROLL-<MOD_PATH>	21-372
21.127	RTRV-ROUTE	21-373
21.128	RTRV-ROUTE-GRE	21-374
21.129	RTRV-SHELFSTAT	21-375
21.130	RTRV-SLV-WDMANS	21-376
21.131	RTRV-STCN-REP	21-377
21.132	RTRV-STS	21-378
21.133	RTRV-SRVTYPE	21-384
21.134	RTRV-SYNCN	21-385
21.135	RTRV-T1	21-386
21.136	RTRV-T3	21-391
21.137	RTRV-TACC	21-395
21.138	RTRV-TADRMAP	21-398
21.139	RTRV-TH-<MOD2>	21-399
21.140	RTRV-TH-ALL	21-412
21.141	RTRV-TOD	21-424
21.142	RTRV-TRAPTABLE	21-426
21.143	RTRV-TRC-<OCN_BLSR>	21-427
21.144	RTRV-TRC-OCH	21-429
21.145	RTRV-TRC-OTU2	21-433
21.146	RTRV-TRC-OTU3	21-436
21.147	RTRV-TUNNEL-FIREWALL	21-438
21.148	RTRV-TUNNEL-PROXY	21-439
21.149	RTRV-USER-SECU	21-440
21.150	RTRV-VCG	21-442
21.151	RTRV-VLAN	21-445
21.152	RTRV-VLAN-ETH	21-446
21.153	RTRV-VT	21-447
21.154	RTRV-VLB-REP	21-449

21.155 RTRV-WDMANS 21-451  
 21.156 RTRV-WDMSIDE 21-462  
 21.157 RTRV-WLEN 21-463

**CHAPTER 22**

**SCHED Commands 22-1**

22.1 SCHED-PMREPT-<MOD2> 22-1

**CHAPTER 23**

**SET Commands 23-1**

23.1 SET-ALMTH-<MOD2> 23-1  
 23.2 SET-ALMTH-EQPT 23-3  
 23.3 SET-ATTR-CONT 23-4  
 23.4 SET-ATTR-ENV 23-5  
 23.5 SET-ATTR-SECUDFLT 23-7  
 23.6 SET-OPMOD-PTSYS 23-9  
 23.7 SET-PMMODE-<STS\_PATH> 23-10  
 23.8 SET-PMMODE-<VT\_PATH> 23-11  
 23.9 SET-SRVTYPE 23-12  
 23.10 SET-TH-<MOD2> 23-14  
 23.11 SET-TOD 23-19

**CHAPTER 24**

**SW Commands 24-1**

24.1 SW-DX-EQPT 24-1  
 24.2 SW-TOPROTN-EQPT 24-2  
 24.3 SW-TOWKG-EQPT 24-4

**CHAPTER 25**

**TST Commands 25-1**

25.1 TST-INSERRBITS-<MOD2> 25-1

**CHAPTER 26**

**Access Identifiers 26-1**

26.1 ALL 26-1  
 26.2 AidUnionId 26-13  
 26.3 AidUnionId1 26-20  
 26.4 BAND 26-20  
 26.5 BANDWL 26-20  
 26.6 BITS 26-21  
 26.7 BLSR 26-22

26.8 CHANNEL	26-22
26.9 CHGRP	26-24
26.10 COM	26-24
26.11 CrossConnectId	26-25
26.12 CrossConnectId1	26-29
26.13 DS1	26-36
26.14 ENV	26-37
26.15 EQPT	26-37
26.16 ETH	26-40
26.17 FACILITY	26-40
26.18 IPADDR	26-43
26.19 LINE	26-43
26.20 LINEWL	26-46
26.21 LNKTERM	26-50
26.22 OPM	26-51
26.23 OSC	26-51
26.24 PRSLOT	26-51
26.25 RFILE	26-52
26.26 SHELF	26-52
26.27 STS	26-52
26.28 SYN	26-56
26.29 SYN_SRC	26-56
26.30 SYNC_REF	26-58
26.31 SYNC_SW	26-58
26.32 UDC	26-58
26.33 VT	26-59
26.34 WDMANS	26-59
26.35 WLEN	26-60
26.36 CTC Port Numbers and TL1 Aids	26-60

---

**CHAPTER 27****Conditions** 27-1

---

**CHAPTER 28****Modifiers** 28-1

---

**INDEX**





## Preface

---

This section explains the objectives, intended audience, and organization of this publication and describes the conventions that convey instructions and other information.

This section provides the following information:

- [Revision History](#)
- [Document Objectives](#)
- [Audience](#)
- [Important Notes about TL1 Commands](#)
- [Related Documentation](#)
- [Document Conventions](#)
- [Obtaining Optical Networking Information](#)
- [Obtaining Documentation and Submitting a Service Request](#)

## Revision History

Date	Notes
September 2011	<ul style="list-style-type: none"><li>• Added a note to RTRV-PM-&lt;MOD2&gt; section.</li><li>• Modified “Mode” description in ED-&lt;OCN_TYPE&gt; section.</li></ul>
October 2011	Updated “5Gbps InfiniBand payload” to “5Gbps InfiniBand (IB_5G) payload” in the chapter, “RTRV Commands”.
February 2012	<ul style="list-style-type: none"><li>• Removed “MDLTFMT” parameter from the ED-OCH command in the chapter “ED Commands”.</li><li>• Removed “MDLTFMT” parameter from the RTRV-OCH command in the chapter “RTRV Commands”.</li><li>• Added “MS-ISC-100T” parameter to the ENT-EQPT command and removed “XCVXC-2.5G” parameter from the ENT-EQPT command in the chapter “ENT Commands”.</li></ul>
March 2012	Added Facility AID for CE1000 cards in the chapter “Access Identifiers”.
August 2012	The full length book-PDF was generated.

Date	Notes
October 2012	Updated the input example for the ED-<MOD1FCPAYLOAD> command in the chapter, ED Commands.
December 2012	Updated the ENT-RMONTH-<MOD2> command in the chapter, “ENT Commands” and RTRV-RMONTH-<MOD2> command in the chapter “RTRV Commands”.
February 2013	<ul style="list-style-type: none"> <li>Updated the section, “ENT-LNKTERM” in the chapter “ENT Commands”.</li> <li>Added a new section “Important Notes about TL1 Commands” in the “Preface” chapter.</li> <li>Added “BIT-EC” counter in the output parameters table for “MONTYPE” parameter in the chapters “INIT Commands”, “RTRV Commands”, and “SET Commands”.</li> </ul>
March 2013	Updated the input example for the OPR-SLV-WDMANS command in the chapter, OPR Commands.
May 2013	Updated the input example for the RTRV-NE-IMGSIGN command in the chapter, RTRV Commands.
June 2013	Updated the input example for the RTRV-NE-KEYINFO command in the chapter, RTRV Commands.
July 2013	Updated the allowable range of POLD and PDIF parameters for the RTRV-DFLT-SECU command in the chapter, RTRV Commands.
November 2013	<ul style="list-style-type: none"> <li>Updated the “Important Notes about TL1 Commands” section in the “Preface” chapter.</li> <li>Updated the “Usage Guidelines” section for “ED-PROTOCOL” command in the chapter, ED Commands.</li> <li>Updated the input parameter description for the ENT-EQPT command in the chapter, ENT Commands.</li> <li>Updated the “PRS” parameter description in the chapters, “ED Commands” and “RTRV Commands”.</li> <li>Updated the “SYNCMSG” and “SENDDUS” parameter descriptions in the chapters, “ED Commands” and “RTRV Commands”.</li> </ul>
January 2014	Updated the “PST” and “SST” parameter descriptions for the “ED-<GIGE_TYPE>” command in the chapter, “ED Commands”.
April 2014	The full length book-PDF was generated.

## Document Objectives

This guide explains the use of Transaction Language 1 (TL1) for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6 systems. Use this guide in conjunction with the appropriate publications listed in the [Related Documentation](#) section.

# Audience

To use this publication, you should be familiar with Cisco or equivalent optical transmission hardware and cabling, telecommunications hardware and cabling, electronic circuitry and wiring practices, and preferably have experience as a telecommunications technician.

## Important Notes about TL1 Commands

TL1 commands can be executed manually or through the use of scripts.

When commands are executed manually, there is a delay of few seconds before the next command can be executed. This gives the Network Elements (NE) sufficient time to perform most of the database (DB) operations.

However, when commands are executed using scripts, the functioning of the NE differs. The NE has insufficient time to perform all the database operations and may cause the NE to malfunction. This in turn causes the controller card to reboot. To prevent this, it is recommended that a delay of 3 to 5 seconds be added between the commands that require DB updates in the script.

User cannot enter question mark (?) as part of input for any parameter. The special character “?” is used in TL1 commands to display help.

## Related Documentation

Use this *Cisco ONS SONET TL1 Command Guide, R9.3* in conjunction with the following referenced Release 9.3 publications:

- *Cisco ONS SONET TL1 Reference Guide*  
Provides general information, procedures, and errors related to using TL1 in the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.
- *Cisco ONS SONET TL1 Command Quick Reference Guide*  
Provides input formats and output formats (where applicable) for all R9.3 TL1 commands and autonomous messages.
- *Cisco ONS SONET TL1 for Beginners*  
Provides basic beginning instruction for using TL1.
- *Cisco ONS 15454 Procedure Guide*  
Provides procedures and tasks for the corresponding Cisco ONS node and network.
- *Cisco ONS 15454 Reference Manual*  
Provides reference material for the corresponding Cisco ONS node and network.
- *Cisco ONS 15454 Troubleshooting Guide*  
Provides general troubleshooting procedures, alarm descriptions, performance monitoring parameters, and Simple Network Management Protocol (SNMP) parameters for the corresponding Cisco ONS node and network.
- *Cisco ONS 15454 DWDM Procedure Guide*  
Explains installation, turn up, provisioning, and maintenance for Cisco ONS 15454 dense wavelength division (DWDM) systems.

- *Cisco ONS 15454 DWDM Reference Manual*  
Explains installation, turn up, provisioning, and maintenance for Cisco ONS 15454 dense wavelength division (DWDM) systems.
- Cisco CPT Configuration Guide, Release 9.3  
Provides reference material, procedures and tasks for Cisco Packet Transport (CPT) system.
- *Cisco ONS 15454 DWDM Troubleshooting Guide*  
Provides troubleshooting information and troubleshooting-related parameters for the Cisco ONS 15454 (ANSI) and Cisco ONS 15454 SDH (ETSI) platforms, specifically the dense wavelength division multiplexing (DWDM) application that can operate on either platform.
- *Cisco ONS 15454 and Cisco ONS 15454 SDH Ethernet Card Software Feature and Configuration Guide*  
Provides software features for all Ethernet cards and configuration information for Cisco IOS on ML-Series cards.
- *Release Notes for Cisco ONS 15454, ONS 15454 M2, and ONS 15454 M6 DWDM, Release 9.3*  
*Release Notes for Cisco CPT-CTC and Documentation Release 9.3 and*  
*Cisco IOS Release 15.1(01)SA*  
Provides caveats, closed issues, and new feature and functionality information.

For an update on End-of-Life and End-of-Sale notices, refer to

[http://www.cisco.com/en/US/products/hw/optical/ps4533/prod\\_eol\\_notices\\_list.html](http://www.cisco.com/en/US/products/hw/optical/ps4533/prod_eol_notices_list.html).

## Document Conventions

This publication uses the following conventions:

Convention	Application
[ ]	Keywords or arguments that appear within square brackets are optional.
{ x   x   x }	A choice of keywords (represented by x) appears in braces separated by vertical bars. The user must select one.
Ctrl	The control key. For example, where Ctrl + D is written, hold down the Control key while pressing the D key.
screen font	Examples of information displayed on the screen.
< >	Command parameters that must be replaced by module-specific codes.



### Note

Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the document.



### Caution

Means *reader be careful*. In this situation, the user might do something that could result in equipment damage or loss of data.



Warning

**IMPORTANT SAFETY INSTRUCTIONS**

This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. Use the statement number provided at the end of each warning to locate its translation in the translated safety warnings that accompanied this device. Statement 1071

**SAVE THESE INSTRUCTIONS**

Waarschuwing

**BELANGRIJKE VEILIGHEIDSINSTRUCTIES**

Dit waarschuwingssymbool betekent gevaar. U verkeert in een situatie die lichamelijk letsel kan veroorzaken. Voordat u aan enige apparatuur gaat werken, dient u zich bewust te zijn van de bij elektrische schakelingen betrokken risico's en dient u op de hoogte te zijn van de standaard praktijken om ongelukken te voorkomen. Gebruik het nummer van de verklaring onderaan de waarschuwing als u een vertaling van de waarschuwing die bij het apparaat wordt geleverd, wilt raadplegen.

**BEWAAR DEZE INSTRUCTIES**

Varoitus

**TÄRKEITÄ TURVALLISUUSOHJEITA**

Tämä varoitusmerkki merkitsee vaaraa. Tilanne voi aiheuttaa ruumiillisia vammoja. Ennen kuin käsittelet laitteistoa, huomioi sähköpiirien käsittelyyn liittyvät riskit ja tutustu onnettomuuksien yleisiin ehkäisytapoihin. Turvallisuusvaroitusten käännökset löytyvät laitteen mukana toimitettujen käännettyjen turvallisuusvaroitusten joukosta varoitusten lopussa näkyvien lausuntonumeroiden avulla.

**SÄILYTÄ NÄMÄ OHJEET**

Attention

**IMPORTANTES INFORMATIONS DE SÉCURITÉ**

Ce symbole d'avertissement indique un danger. Vous vous trouvez dans une situation pouvant entraîner des blessures ou des dommages corporels. Avant de travailler sur un équipement, soyez conscient des dangers liés aux circuits électriques et familiarisez-vous avec les procédures couramment utilisées pour éviter les accidents. Pour prendre connaissance des traductions des avertissements figurant dans les consignes de sécurité traduites qui accompagnent cet appareil, référez-vous au numéro de l'instruction situé à la fin de chaque avertissement.

**CONSERVEZ CES INFORMATIONS**

Warnung

**WICHTIGE SICHERHEITSHINWEISE**

Dieses Warnsymbol bedeutet Gefahr. Sie befinden sich in einer Situation, die zu Verletzungen führen kann. Machen Sie sich vor der Arbeit mit Geräten mit den Gefahren elektrischer Schaltungen und den üblichen Verfahren zur Vorbeugung vor Unfällen vertraut. Suchen Sie mit der am Ende jeder Warnung angegebenen Anweisungsnummer nach der jeweiligen Übersetzung in den übersetzten Sicherheitshinweisen, die zusammen mit diesem Gerät ausgeliefert wurden.

**BEWAHREN SIE DIESE HINWEISE GUT AUF.**

**Avvertenza    IMPORTANTI ISTRUZIONI SULLA SICUREZZA**

Questo simbolo di avvertenza indica un pericolo. La situazione potrebbe causare infortuni alle persone. Prima di intervenire su qualsiasi apparecchiatura, occorre essere al corrente dei pericoli relativi ai circuiti elettrici e conoscere le procedure standard per la prevenzione di incidenti. Utilizzare il numero di istruzione presente alla fine di ciascuna avvertenza per individuare le traduzioni delle avvertenze riportate in questo documento.

**CONSERVARE QUESTE ISTRUZIONI****Advarsel    VIKTIGE SIKKERHETSINSTRUKSJONER**

Dette advarselssymbolet betyr fare. Du er i en situasjon som kan føre til skade på person. Før du begynner å arbeide med noe av utstyret, må du være oppmerksom på farene forbundet med elektriske kretser, og kjenne til standardprosedyrer for å forhindre ulykker. Bruk nummeret i slutten av hver advarsel for å finne oversettelsen i de oversatte sikkerhetsadvarslene som fulgte med denne enheten.

**TA VARE PÅ DISSE INSTRUKSJONENE****Aviso    INSTRUÇÕES IMPORTANTES DE SEGURANÇA**

Este símbolo de aviso significa perigo. Você está em uma situação que poderá ser causadora de lesões corporais. Antes de iniciar a utilização de qualquer equipamento, tenha conhecimento dos perigos envolvidos no manuseio de circuitos elétricos e familiarize-se com as práticas habituais de prevenção de acidentes. Utilize o número da instrução fornecido ao final de cada aviso para localizar sua tradução nos avisos de segurança traduzidos que acompanham este dispositivo.

**GUARDE ESTAS INSTRUÇÕES****¡Advertencia!    INSTRUCCIONES IMPORTANTES DE SEGURIDAD**

Este símbolo de aviso indica peligro. Existe riesgo para su integridad física. Antes de manipular cualquier equipo, considere los riesgos de la corriente eléctrica y familiarícese con los procedimientos estándar de prevención de accidentes. Al final de cada advertencia encontrará el número que le ayudará a encontrar el texto traducido en el apartado de traducciones que acompaña a este dispositivo.

**GUARDE ESTAS INSTRUCCIONES****Varning!    VIKTIGA SÄKERHETSANVISNINGAR**

Denna varningssignal signalerar fara. Du befinner dig i en situation som kan leda till personskada. Innan du utför arbete på någon utrustning måste du vara medveten om farorna med elkretsar och känna till vanliga förfaranden för att förebygga olyckor. Använd det nummer som finns i slutet av varje varning för att hitta dess översättning i de översatta säkerhetsvarningar som medföljer denna anordning.

**SPARA DESSA ANVISNINGAR**

## FONTOS BIZTONSÁGI ELOÍRÁSOK

**Ez a figyelmeztető jel veszélyre utal. Sérülésveszélyt rejtő helyzetben van. Mielőtt bármely berendezésen munkát végezne, legyen figyelemmel az elektromos áramkörök okozta kockázatokra, és ismerkedjen meg a szokásos balesetvédelmi eljárásokkal. A kiadványban szereplő figyelmeztetések fordítása a készülékhez mellékelt biztonsági figyelmeztetések között található; a fordítás az egyes figyelmeztetések végén látható szám alapján kereshető meg.**

## ORIZZE MEG EZEKET AZ UTASÍTÁSOKAT!

Предупреждение

## ВАЖНЫЕ ИНСТРУКЦИИ ПО СОБЛЮДЕНИЮ ТЕХНИКИ БЕЗОПАСНОСТИ

Этот символ предупреждения обозначает опасность. То есть имеет место ситуация, в которой следует опасаться телесных повреждений. Перед эксплуатацией оборудования выясните, каким опасностям может подвергаться пользователь при использовании электрических цепей, и ознакомьтесь с правилами техники безопасности для предотвращения возможных несчастных случаев. Воспользуйтесь номером заявления, приведенным в конце каждого предупреждения, чтобы найти его переведенный вариант в переводе предупреждений по безопасности, прилагаемом к данному устройству.

## СОХРАНИТЕ ЭТИ ИНСТРУКЦИИ

警告

重要的安全性说明

此警告符号代表危险。您正处于可能受到严重伤害的工作环境中。在您使用设备开始工作之前，必须充分意识到触电的危险，并熟练掌握防止事故发生的标准工作程序。请根据每项警告结尾提供的声明号码来找到此设备的安全性警告说明的翻译文本。

请保存这些安全性说明

警告

安全上の重要な注意事項

「危険」の意味です。人身事故を予防するための注意事項が記述されています。装置の取り扱い作業を行うときは、電気回路の危険性に注意し、一般的な事故防止策に留意してください。警告の各国語版は、各注意事項の番号を基に、装置に付属の「Translated Safety Warnings」を参照してください。

これらの注意事項を保管しておいてください。

중요 안전 지침

이 경고 기호는 위험을 나타냅니다. 작업자가 신체 부상을 일으킬 수 있는 위험한 환경에 있습니다. 장비에 작업을 수행하기 전에 전기 회로와 관련된 위험을 숙지하고 표준 작업 관례를 숙지하여 사고를 방지하십시오. 각 경고의 마지막 부분에 있는 경고문 번호를 참조하여 이 장치와 함께 제공되는 번역된 안전 경고문에서 해당 번역문을 찾으십시오.

이 지시 사항을 보관하십시오.

**Aviso INSTRUÇÕES IMPORTANTES DE SEGURANÇA**

Este símbolo de aviso significa perigo. Você se encontra em uma situação em que há risco de lesões corporais. Antes de trabalhar com qualquer equipamento, esteja ciente dos riscos que envolvem os circuitos elétricos e familiarize-se com as práticas padrão de prevenção de acidentes. Use o número da declaração fornecido ao final de cada aviso para localizar sua tradução nos avisos de segurança traduzidos que acompanham o dispositivo.

**GUARDE ESTAS INSTRUÇÕES****Advarsel VIGTIGE SIKKERHEDSANVISNINGER**

Dette advarselssymbol betyder fare. Du befinder dig i en situation med risiko for legemeskade. Før du begynder arbejde på udstyr, skal du være opmærksom på de involverede risici, der er ved elektriske kredsløb, og du skal sætte dig ind i standardprocedurer til undgåelse af ulykker. Brug erklæringsnummeret efter hver advarsel for at finde oversættelsen i de oversatte advarsler, der fulgte med denne enhed.

**GEM DISSE ANVISNINGER**

تحذير

إرشادات الأمان الهامة

يوضح رمز التحذير هذا وجود خطر. وهذا يعني أنك متواجد في مكان قد ينتج عنه التعرض لإصابات. قبل بدء العمل، احذر مخاطر التعرض للصدمات الكهربائية وكن على علم بالإجراءات القياسية للحيلولة دون وقوع أي حوادث. استخدم رقم البيان الموجود في آخر كل تحذير لتحديد مكان ترجمته داخل تحذيرات الأمان المترجمة التي تأتي مع الجهاز. قم بحفظ هذه الإرشادات

**Upozorenje VAŽNE SIGURNOSNE NAPOMENE**

Ovaj simbol upozorenja predstavlja opasnost. Nalazite se u situaciji koja može prouzročiti tjelesne ozljede. Prije rada s bilo kojim uređajem, morate razumjeti opasnosti vezane uz električne sklopove, te biti upoznati sa standardnim načinima izbjegavanja nesreća. U prevedenim sigurnosnim upozorenjima, priloženima uz uređaj, možete prema broju koji se nalazi uz pojedino upozorenje pronaći i njegov prijevod.

**SAČUVAJTE OVE UPUTE****Upozornění DŮLEŽITÉ BEZPEČNOSTNÍ POKYNY**

Tento upozorňující symbol označuje nebezpečí. Jste v situaci, která by mohla způsobit nebezpečí úrazu. Před prací na jakémkoliv vybavení si uvědomte nebezpečí související s elektrickými obvody a seznamte se se standardními opatřeními pro předcházení úrazům. Podle čísla na konci každého upozornění vyhledejte jeho překlad v přeložených bezpečnostních upozorněních, která jsou přiložena k zařízení.

**USCHOVEJTE TYTO POKYNY**

Προειδοποίηση	<p><b>ΣΗΜΑΝΤΙΚΕΣ ΟΔΗΓΙΕΣ ΑΣΦΑΛΕΙΑΣ</b></p> <p>Αυτό το προειδοποιητικό σύμβολο σημαίνει κίνδυνο. Βρίσκεστε σε κατάσταση που μπορεί να προκαλέσει τραυματισμό. Πριν εργαστείτε σε οποιοδήποτε εξοπλισμό, να έχετε υπόψη σας τους κινδύνους που σχετίζονται με τα ηλεκτρικά κυκλώματα και να έχετε εξοικειωθεί με τις συνήθεις πρακτικές για την αποφυγή ατυχημάτων. Χρησιμοποιήστε τον αριθμό δήλωσης που παρέχεται στο τέλος κάθε προειδοποίησης, για να εντοπίσετε τη μετάφρασή της στις μεταφρασμένες προειδοποιήσεις ασφαλείας που συνοδεύουν τη συσκευή.</p> <p><b>ΦΥΛΑΞΤΕ ΑΥΤΕΣ ΤΙΣ ΟΔΗΓΙΕΣ</b></p>
אזהרה	<p style="text-align: right;"><b>הוראות בטיחות חשובות</b></p> <p>סימן אזהרה זה מסמל סכנה. אתה נמצא במצב העלול לגרום לפציעה. לפני שתעבוד עם ציוד כלשהו, עליך להיות מודע לסכנות הכרוכות במגעלים חשמליים ולהכיר את הנהלים המקובלים למניעת תאונות. השתמש במספר ההוראה המסופק בסופה של כל אזהרה כדי לאתר את התרגום באזהרות הבטיחות המתורגמות שמצורפות להתקן.</p> <p style="text-align: right;"><b>שמור הוראות אלה</b></p>
Opomena	<p><b>ВАЖНИ БЕЗБЕДНОСНИ НАПАТСТВИЈА</b></p> <p>Симболот за предупредување значи опасност. Се наоѓате во ситуација што може да предизвика телесни повреди. Пред да работите со опремата, бидете свесни за ризикот што постои кај електричните кола и треба да ги познавате стандардните постапки за спречување на несреќни случаи. Искористете го бројот на изјавата што се наоѓа на крајот на секое предупредување за да го најдете неговиот период во преведените безбедносни предупредувања што се испорачани со уредот.</p> <p><b>ЧУВАЈТЕ ГИ ОБИЕ НАПАТСТВИЈА</b></p>
Ostrzeżenie	<p><b>WAŻNE INSTRUKCJE DOTYCZĄCE BEZPIECZEŃSTWA</b></p> <p>Ten symbol ostrzeżenia oznacza niebezpieczeństwo. Zachodzi sytuacja, która może powodować obrażenia ciała. Przed przystąpieniem do prac przy urządzeniach należy zapoznać się z zagrożeniami związanymi z układami elektrycznymi oraz ze standardowymi środkami zapobiegania wypadkom. Na końcu każdego ostrzeżenia podano numer, na podstawie którego można odszukać tłumaczenie tego ostrzeżenia w dołączonym do urządzenia dokumencie z tłumaczeniami ostrzeżeń.</p> <p><b>NINIEJSZE INSTRUKCJE NALEŻY ZACHOWAĆ</b></p>
Upozornenie	<p><b>DÔLEŽITÉ BEZPEČNOSTNÉ POKYNY</b></p> <p>Tento varovný symbol označuje nebezpečenstvo. Nachádzate sa v situácii s nebezpečenstvom úrazu. Pred prácou na akomkoľvek vybavení si uvedomte nebezpečenstvo súvisiace s elektrickými obvodmi a oboznámte sa so štandardnými opatreniami na predchádzanie úrazom. Podľa čísla na konci každého upozornenia vyhľadajte jeho preklad v preložených bezpečnostných upozorneniach, ktoré sú priložené k zariadeniu.</p> <p><b>USCHOVAJTE SI TENTO NÁVOD</b></p>

## Obtaining Optical Networking Information

This section contains information that is specific to optical networking products. For information that pertains to all of Cisco, refer to the [Obtaining Documentation and Submitting a Service Request](#) section.

## Where to Find Safety and Warning Information

For safety and warning information, refer to the *Cisco Optical Transport Products Safety and Compliance Information* document that accompanied the product. This publication describes the international agency compliance and safety information for the Cisco ONS 15454 system. It also includes translations of the safety warnings that appear in the ONS 15454 system documentation.

## Cisco Optical Networking Product Documentation CD-ROM

Optical networking-related documentation, including Cisco ONS 15xxx product documentation, is available in a CD-ROM package that ships with your product. The Optical Networking Product Documentation CD-ROM is updated periodically and may be more current than printed documentation.

## Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS Version 2.0.



## Cisco ONS Documentation Roadmap for Release 9.3

---

To quickly access publications of Cisco ONS Release 9.3, see the [Cisco ONS Documentation Roadmap for Release 9.3](#).





# CHAPTER 1

## ACT Commands

---

This chapter provides activate (ACT) commands for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.



### Note

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

---

## 1.1 ACT-USER

(Cisco ONS 15454) The Activate User (ACT-USER) command opens a session with the network element (NE).

### Usage Guidelines

- Passwords are masked for the following security commands: ACT-USER, COPY-RFILE, COPY-IOSCFG, ED-PID, ENT-USER-SECU, and ED-USER-SECU. The password will be masked when accessing a TL1 session through any means. The Cisco Transport Controller (CTC) Request History and Message Log also show the commands as masked. When a password-masked command is reissued by double-clicking the command from CTC Request History, the password is masked in the CTC Request History and Message Log. The actual password that was previously issued is sent to the NE. To use a former command as a template only, single-click the command in CTC Request History. The command is placed in the Command Request text box, where you can edit the appropriate fields prior to reissuing it.
- For the ACT-USER command:  
ACT-USER:[TID]:[STRING]:CTAG::[STRING]
  - The syntax of the user ID (first [STRING]) and the password (second [STRING]) are not checked.
  - Invalid syntax for both the user ID and password is permitted, but the user can only log in if the user ID/password match what is in the database.
  - The user ID and password cannot exceed 10 characters.
- For the ACT-USER command, no error code is transmitted except to convey that the login is granted or denied. According to Telcordia TR-835, Appendix A, Section A.2, "... the error codes corresponding to ACT ... do not apply to the ACT-USER command because this command requires

that no error code be provided to the session request except to indicate that it has been denied. Before a session is established, a specific error code might reveal clues to an intruder attempting unauthorized entry.”

- In some configurations, a new user must change his or her password after establishing a session for the first time before continuing. All TL1 commands except for ED-PID and CANC-USER are denied until the password is changed. When the password has been changed, a user can execute any command that his security level allows. If the user logs out without changing his password, each following session will DENY all commands, except ED-PID and CANC-USER, until the password is changed. Starting with Release 4.6, this feature can be turned on or off. The default is off.

<b>Category</b>	Security
<b>Security</b>	N/A
<b>Input Format</b>	ACT-USER:[<TID>]:<UID>:<CTAG>::<PID>;
<b>Input Example</b>	ACT-USER:PETALUMA:TERRI:100::MYPASSWD;

**Table 1-1** Input Parameter Support

Parameter	Description	Cisco ONS 15454
<UID>	The user identifier (user ID) of the person logged in. UID can be any combination of up to 10 alphanumeric characters. UID is a string. It must not be null.	Y
<PID>	The user password. PID is any combination of up to 10 alphanumeric characters. Passwords are encrypted for security reasons and will appear as asterisks (*). PID is a string. It must not be null.	Y

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<UID>:<LASTLOGINTIME>,<UNSUCCESSFULLOGINS>"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"TERRI:2003-01-02 14-04-49,0"
;
```

**Output Parameters**

<UID>	The user ID of the person logged in. The UID can be any combination of up to 10 alphanumeric characters. UID is a string. It must not be null.
<LASTLOGINTIME>	The date and time of the last successful connection to the NE (not including current login). LASTLOGINTIME is a string.
<UNSUCCESSFULLOGINS>	The number of unsuccessful login attempts since the last successful login. UNSUCCESSFULLOGINS is an integer.





# CHAPTER 2

## ALW Commands

---

This chapter provides allow (ALW) commands for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.



**Note**

---

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

---

### 2.1 ALW-CONSOLE-PORT

(Cisco ONS 15454) The Allow Console Port (ALW-CONSOLE-PORT) command is used to turn on the console port for the ML1000-2, ML100T-12 and ML-100T-8 cards.

---

**Usage Guidelines**

None.

---

**Category**

Security

---

**Security**

Superuser

---

**Input Format**

ALW-CONSOLE-PORT:[<TID>]:<AID>:<CTAG>;

---

**Input Example**

ALW-CONSOLE-PORT:CISCONODE:SLOT-2:123;

---

**Input Parameters**

<AID>                      Access identifier. Values are in the [“26.15 EQPT”](#) section on page 26-37.

---

## 2.2 ALW-MSG-ALL

(Cisco ONS 15454) The Allow Message All (ALW-MSG-ALL) command instructs the NE to enter a mode where all the REPT ALM and REPT EVT autonomous messages are transmitted. Use the INH-MSG-ALL command to inhibit these autonomous messages. When a TL1 session starts, the REPT ALM and REPT EVT messages are allowed by default.

### Usage Guidelines

If this command is issued twice in the same session, the SAAL (Status, Already Allowed) error message will be returned. The optional fields in the block are not supported.

### Category

System

### Security

Retrieve

### Input Format

ALW-MSG-ALL:[<TID>]:[<AID>]:<CTAG>[:,:];

### Input Example

ALW-MSG-ALL:PETALUMA:ALL:549;

### Input Parameters

<AID>	Access identifier. Support is limited to the AID ALL. AID is a string.
-------	--

## 2.3 ALW-MSG-DBCHG

(Cisco ONS 15454) The Allow Database Change Message (ALW-MSG-DBCHG) command enables REPT DBCHG. When a TL1 session starts, the REPT DBCHG messages are not allowed by default.



### Note

This command is not defined in the GR.

### Usage Guidelines

None.

### Category

Log

### Security

Retrieve

---

**Input Format** ALW-MSG-DBCHG:[<TID>]::<CTAG>[:,,];

---

**Input Example** ALW-MSG-DBCHG:CISCO::123;

---

**Input Parameters** None.

## 2.4 ALW-MSG-SECU

(Cisco ONS 15454) The Allow Message Security (ALW-MSG-SECU) command enables the REPT EVT SECU and REPT ALM SECU autonomous messages.

---

**Usage Guidelines** None.

---

**Category** Security

---

**Security** Superuser

---

**Input Format** ALW-MSG-SECU:[<TID>]::<CTAG>[:,,];

---

**Input Example** ALW-MSG-SECU:PETALUMA::123;

---

**Input Parameters** None.

## 2.5 ALW-PMREPT-ALL

(Cisco ONS 15454) The Allow Performance Report All (ALW-PMREPT-ALL) command resumes the processing of all the PM reports that are inhibited. The allowance of the PM reporting is session-based, which means the command is only effective to the TL1 session that issues this command.

---

**Usage Guidelines** None.

---

**Category** Performance

## ■ ALW-SWDX-EQPT

---

**Security** Retrieve

---

**Input Format** ALW-PMREPT-ALL:[<TID>]::<CTAG>;

---

**Input Example** ALW-PMREPT-ALL:CISCONODE::123;

---

**Input Parameters** None

## 2.6 ALW-SWDX-EQPT

(Cisco ONS 15454) The Allow Switch Duplex Equipment (ALW-SWDX-EQPT) command allows automatic or manual switching on a duplex system containing duplexed or redundant equipment. To inhibit an NE from switching to duplex, use the INH-SWDX-EQPT command.

---

**Usage Guidelines** ALW-SWDX-EQPT is not used for SONET line or electrical card protection switching. For SONET line or path protection switching commands, see the OPR-PROTNSW and RLS-PROTNSW commands. For electrical card protection switching, see the SW-TOWKG-EQPT and SW-TOPROTN-EQPT commands.
**Note**


---

This command applies to the XCVT, XC10G, and XC-VXC-10G equipment units only in this release.

---



---

**Category** Equipment

---

**Security** Maintenance

---

**Input Format** ALW-SWDX-EQPT:[<TID>]:<AID>:<CTAG>[::];

---

**Input Example** ALW-SWDX-EQPT:CISCO:SLOT-8:1234;

---

**Input Parameters** AID Access identifier for the XCVT, XC10G, or XC-VXC-10G card from the “26.15 EQPT” section on page 26-37.

---

## 2.7 ALW-SWTOPROTN-EQPT

(Cisco ONS 15454) The Allow Switch to Protection Equipment (ALW-SWTOPROTN-EQPT) command allows automatic or manual switching of an equipment unit back to a protection status. Use the INH-SWTOPROTN-EQPT command to inhibit an NE from switching to protection.

### Usage Guidelines

ALW-SWTOPROTN-EQPT is used for electrical line cards, for example, DS-1, DS-3, DS3XM, and EC-1. DS-1, DS-3, and DS3XM cards have 1:1 and 1:N equipment protection. EC-1 cards have only 1:1 equipment protection. When this command is given to a working unit, the working unit will be allowed to switch to the protection unit. When this command is given to a protection unit, any working unit in the protection group is allowed to switch to the protection unit.

The standing condition of INHSWPR on the unit specified by the AID will be cleared.



### Note

- This command only supports only the BTH value of the <DIRN> parameter. A command with any other value is considered an incorrect use of the command. An IDNV (Input, Data Not Valid) error message is returned.
- This command is not used for the common control cards (TCC2/TCC2P/ TCC3, XCVT, XC10G, and XC-VXC-10G). A command on a common control card will receive an IIAC (Input, Invalid Access Identifier) error message. To use the common control card switching commands, use the SW-DX-EQPT and ALW-SWDX-EQPT commands.
- This command is not used for OC-N cards. A command on a SONET card will receive an IIAC (Input, Invalid Access identifier) error message. To use a SONET card switching command, use the OPR-PROTNSW and RLS-PROTNSW commands.
- If this command is used on a card that is not in a protection group, the SNVS (Status, Not in Valid State) error message is returned.
- If this command is used on a card that is not in the inhibit state, the SAAL (Status, Already Allowed) error message is returned.
- As long as none of the previous error conditions apply, you are allowed to send this command to cards that have been uninstalled. This will not generate any error response.

### Category

Equipment

### Security

Maintenance

### Input Format

ALW-SWTOPROTN-EQPT:[<TID>]:<AID>:<CTAG>[::<DIRN>];

### Input Example

ALW-SWTOPROTN-EQPT:CISCO:SLOT-2:123::BTH;

<b>Input Parameters</b>	<AID>	Access identifier. This parameter can either be the protection unit for which carrying traffic will be allowed (release of lockout) or the working unit for which switching to protect will be allowed (release of lock-on). Values are in the “26.15 EQPT” section on page 26-37.
	<DIRN>	Optional. The switching direction relative to the entity defined in the AID field. This command only supports the BTH value of the DIRN parameter. Defaults to BTH.  The parameter type is DIRECTION—transmit and receive directions.
	• BTH	Both transmit and receive directions.

## 2.8 ALW-SWTOWKG-EQPT

(Cisco ONS 15454) The Allow Switch to Working Equipment (ALW-SWTOWKG-EQPT) command allows automatic or manual switching of an equipment unit back to a working status. Use the INH-SWTOWKG-EQPT command to inhibit an NE from switching to working.

### Usage Guidelines

ALW-SWTOWKG-EQPT is used for electrical line cards, for example, DS-1, DS-3, DS3XM, and EC-1. DS-1, DS-3 and DS3XM cards have 1:1 and 1:N equipment protection. EC-1 cards have only 1:1 equipment protection.

When this command is given to a working unit, the working unit will be allowed to carry traffic. In the case of revertive protection, the traffic will switch immediately from the protection unit to the working unit regardless of the reversion time setting.

When this command is given to a protection unit, the protection unit will be allowed to switch back to the working unit currently protected as long as the working unit has not raised INHSWWKG. In the case of revertive protection, the traffic will switch immediately from the protection unit to the working unit regardless of the reversion time setting. In the case of nonrevertive protection, the protection unit will continue to carry the traffic.

The standing condition of INHSWWKG on the unit specified by the AID will be cleared.



### Note

- This command only supports the BTH value of the <DIRN> parameter. A command with any other value is an incorrect use of the command. An IDNV (Input, Data Not Valid) error message is returned.
- This command is not used for the common control cards (TCC2/TCC2P/TCC3, XCVT, XC10G, and XC-VXC-10G). A command on a common control card will receive an IIAC (Input, Invalid Access Identifier) error message. To use the common control card switching commands, use the SW-DX-EQPT and ALW-SWDX-EQPT commands.
- This command is not used for OC-N cards. A command on an optical card will receive an IIAC (Input, Invalid Access Identifier) error message. For OC-N cards, use the OPR-PROTNSW and RLS-PROTNSW commands.
- If this command is used on a card that is not in a protection group, the SNVS (Status, Not in Valid State) error message is returned.
- If this command is used on a card that is not in the inhibit state, the SAAL (Status, Already Allowed) error message is returned.

- As long as none of the previous error conditions apply, you are allowed to send this command to cards that have been uninstalled. This will not generate any error response.

---

**Category** Equipment

---

**Security** Maintenance

---

**Input Format** ALW-SWTOWKG-EQPT:[<TID>]:<AID>:<CTAG>[:<DIRN>];

---

**Input Example** ALW-SWTOWKG-EQPT:CISCO:SLOT-2:123::BTH;

---

<b>Input Parameters</b>	<AID>	Access identifier. This parameter can either be the protection unit for which carrying traffic will be allowed (release of lockout) or the working unit for which switching to protect will be allowed (release of lock-on). Values are in the <a href="#">“26.15 EQPT” section on page 26-37</a> .
	<DIRN>	Optional. The switching direction relative to the entity defined in the AID field. This command only supports the BTH value of the DIRN parameter. Defaults to BTH.  The parameter type is DIRECTION—transmit and receive directions.
	• BTH	Both transmit and receive directions.

---

## 2.9 ALW-USER-SECU

(Cisco ONS 15454) The Allow User Security (ALW-USER-SECU) command enables a user ID that has been disabled using the INH-USER-SECU command so the user can reestablish a session with the NE.

---

**Usage Guidelines** None.

---

**Category** Security

---

**Security** Superuser

---

**Input Format** ALW-USER-SECU:[<TID>]::<CTAG>::<UID>;

---

**Input Example**      ALW-USER-SECU:PETALUMA::123::UID;

---

**Input Parameters**      <UID>      The user identifier (user ID) of the person logged in. UID can be a list of user IDs separated by “&”. The keyword ALL cannot be used to specify all users on an NE. UID is a string.

---



# CHAPTER 3

## APPLY Commands

---

This chapter provides apply (APPLY) commands for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.



**Note**

---

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

---

### 3.1 APPLY

(Cisco ONS 15454) The Apply (APPLY) command activates or reverts a software load during a software upgrade or downgrade process.

---

**Usage Guidelines**

An error will be generated if you attempt to activate an older software load or attempt to revert to a newer software load.

---

**Category**

File Transfer

---

**Security**

Superuser

---

**Input Format**

APPLY:[<TID>]::<CTAG>[::<MEM\_SW\_TYPE>];

---

**Input Example**

APPLY:CISCO::123::ACT;

Input Parameters	<MEM_SW_TYPE>	(Optional) Memory switch action during the software upgrade. The parameter type is DL_TYPE, which indicates the software download type. The default value is ACT.
	• RVRT	Reverts to an older software load during software download.
	• ACT	Activates to a new software load.



# CHAPTER 4

## CANC Commands and Messages

---

This chapter provides cancel (CANC) commands for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.



**Note**

---

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

---

### 4.1 CANC

(Cisco ONS 15454) The Cancel (CANC) message reports the occurrence of a session timeout event.

---

#### Usage Guidelines

CANC is an autonomous message transmitted by the NE to a user when a session established by that user is terminated because no messages were exchanged for a long period of time (a timeout). There is a default timeout period based on the user's privilege/security level. Starting with Release 4.0, timeouts can be provisioned through CTC. Starting with Software Release 4.6, timeouts can be provisioned through TL1 with the SET-ATTR-SECUDFLT command. The default timeouts based on privilege/security level are:

- A Superuser [SUPER] has a timeout period of 15 minutes.
- A Provisioning [PROV] user has a timeout period of 30 minutes.
- A Maintenance [MAINT] user has a timeout period of 60 minutes.
- A Retrieve [RTRV] user has no timeout period.

When a timeout occurs, the corresponding port drops the session and the next session initiation at that port requires the regular login procedure.

The CANC message is only used to indicate that a session has been terminated because of a timeout. If a session is terminated for a different reason (for example, forced logout, loss of communication), the REPT EVT SESSION message is used.

---

#### Category

Security

---

#### Security

Retrieve

---

**CANC-USER**


---

**Output Format**

```

SID DATE TIME
A ATAG CANC
"<UID>"
;

```

---

**Output Example**

```

TID-000 1998-06-20 14:30:00
A 100.100 CANC
"CISCO15"
;

```

---

<b>Output Parameters</b>	<code>&lt;UID&gt;</code>	The user identifier (user ID) of the person logged in. Refers to the user ID of a user whose session is terminated due to timeout. UID is a string.
--------------------------	--------------------------	---

---

## 4.2 CANC-USER

(Cisco ONS 15454) The Cancel User (CANC-USER) command logs a user out of an active session with the NE.

---

<b>Usage Guidelines</b>	For the CANC-USER command, the syntax of USERID is not checked. Invalid syntax for the user ID is permitted and the user ID must not exceed 10 characters.
-------------------------	--

---

<b>Category</b>	Security
-----------------	----------

---

<b>Security</b>	Retrieve
-----------------	----------

---

<b>Input Format</b>	CANC-USER:[<TID>]:<USERID>:<CTAG>;
---------------------	------------------------------------

---

<b>Input Example</b>	CANC-USER:PETALUMA:TERRI:101;
----------------------	-------------------------------

---

<b>Input Parameters</b>	<code>&lt;USERID&gt;</code>	Identifies the user to the system. user ID can be up to 10 alphanumeric characters. It is a string.
-------------------------	-----------------------------	---

---

## 4.3 CANC-USER-SECU

(Cisco ONS 15454) The Cancel User Security (CANC-USER-SECU) command forces a user off of the NE.

**Usage Guidelines**

The UID specified can be a single user ID or a list of user IDs separated by “&”. The keyword ALL is not permitted. The UID specified cannot be the user ID of the administrator issuing the command.

**Note**

This command will log out ALL sessions on the NE (TL1 and Cisco Transport Controller [CTC]) of a user whose user ID matches the UID specified in the command.

**Category**

Security

**Security**

Superuser

**Input Format**

CANC-USER-SECU:[<TID>]:<UID>:<CTAG>;

**Input Example**

CANC-USER-SECU:PETALUMA:CISCO10:100;

**Input Parameters**

<UID>

The user identifier (user ID) of the person logged in. UID can be a list of user IDs separated by “&”. The keyword ALL may not be used to specify all users on an NE. UID is a string.





# CHAPTER 5

## CHG Commands

---

This chapter provides change (CHG) commands for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.



### Note

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

---

### 5.1 CHG-ACCMD-<MOD\_TACC>

(Cisco ONS 15454) The Change Test Access Mode for the DS1, DS3I, E1, E3, STS1, STS12C, STS192C, STS24C, STS3C, STS48C, STS96C, STS6C, STS9C, T1, T3, VT1, or VT2 (CHG-ACCMD-<MOD\_TACC>) command changes the test access (TACC) mode for the circuit being tested. This can be a change from monitoring the data to inserting data into the synchronous transport signal (STS). For more information about TACC, refer to the *Cisco ONS 15454 SONET TL1 Reference Guide*. See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

#### Usage Guidelines

This command can only be applied to an existing test access point (TAP) connection.



### Caution

For this command to be applicable, first create the TAP using the ED-<MOD\_PATH> command. Intrusive test access modes are traffic-affecting. If a facility/path is connected to a TAP in an intrusive test access mode, it is forced to go into the Out of Service, Maintenance (OOS-MT) state. The forced transition could be traffic-affecting. The present state of the facility/path is stored by the network element (NE) and is restored when the TAP connection is terminated. Test access connections are dropped automatically if the TL1 session is terminated or is timed out.

---



### Note

- If there is no TAP connection, a DENY error message is returned.
  - If a requested condition already exists, a SRCN error message is returned.
  - If a requested access configuration is invalid, a SRAC error message is returned.
  - If a requested TAP does not exist, a RTEN error message is returned.
-

**Category** Troubleshooting and Test Access

**Security** Maintenance

**Input Format** CHG-ACCMD-<MOD\_TACC>:[<TID>]:<TAP>: <CTAG>::<MD>;

**Input Example** CHG-ACCMD-STS1:CISCO:8:123::MONE;

<b>Input Parameters</b>	<TAP>	<p>The test access point number. The TAP number must be an integer with a range of 1 to 999. It is a string.</p> <p><b>Note</b> This command only supports changing the mode for a single TAP number at a time.</p>
	<MD>	<p>The test access mode. (SPLTE, SPLTF, LOOPE, and LOOPF require an external quasi-random signal [QRS] input signal.) Single facility access digroup (FAD) test access does not support MONEF, SPLTEF, and SPLTAB modes.</p> <p>The parameter type is test access mode (TACC_MODE).</p>
	<ul style="list-style-type: none"> <li>• LOOPE</li> </ul>	<p>Splits both the A and B paths. Connect the line incoming from the E direction to the line outgoing in the E direction, and connect this looped configuration to the FAD. The line outgoing in the F direction will have a QRS connected, and the line incoming from the F direction will be terminated by the nominal characteristic impedance of the line. Intrusive test access mode.</p>
	<ul style="list-style-type: none"> <li>• LOOPF</li> </ul>	<p>Splits both the A and B paths. Connect the line incoming from F direction to the line outgoing in the F direction, and connect this looped configuration to the FAD. The line outgoing in the E direction will have a QRS connected, and the line incoming from the E direction will be terminated by the nominal characteristic impedance of the line. Intrusive test access mode.</p>
	<ul style="list-style-type: none"> <li>• MONE</li> </ul>	<p>Indicates that a monitor connection will be provided from the FAD to the A transmission path of the accessed circuit.</p>
	<ul style="list-style-type: none"> <li>• MONEF</li> </ul>	<p>Indicates that a monitor connection will be provided for the following:</p> <ul style="list-style-type: none"> <li>• From the FAD1 to a dual FAD (DFAD), or from the odd pair of a facility access path (FAP) to the A transmission path</li> <li>• From the FAD2 of the same DFAD or the even pair of a FAP, to the B transmission path of the accessed circuit</li> </ul>
	<ul style="list-style-type: none"> <li>• MONF</li> </ul>	<p>Indicates that a monitor connection will be provided from the FAD to the B transmission path of the accessed circuit.</p>
	<ul style="list-style-type: none"> <li>• SPLTA</li> </ul>	<p>Indicates that a connection will be provided from both the E and F sides of the A transmission path of the circuit under test to the FAD and split the A transmission path. Intrusive test access mode.</p>
	<ul style="list-style-type: none"> <li>• SPLTB</li> </ul>	<p>Indicates that a connection will be provided from both the E and F sides of the B transmission path of the circuit under test to the FAD and split the B transmission path. Intrusive test access mode.</p>

• SPLTE	Splits both the A and B paths and connect the E side of the accessed circuit to the FAD. The line outgoing in the F direction will have a QRS connected, the line incoming from the F direction will have a QRS connected, and the line incoming from the E direction will be terminated by the nominal characteristic impedance of the line. Intrusive test access mode.
• SPLTEF	Splits both the A and B paths, and connect the E side of the accessed circuit to FAD1 and the F side to FAD2. Intrusive test access mode.
• SPLTF	Splits both the A and B paths, and connect the F side of the accessed circuit to the FAD. The line outgoing in the E direction will have a QRS connected, the line incoming in the E direction will have a QRS connected, and the line incoming from the E direction will be terminated by the nominal characteristic impedance of the line. Intrusive test access mode.

## 5.2 CHG-EQPT

(Cisco ONS 15454) The Change Equipment (CHG-EQPT) command performs an in-service upgrade from low density (LD) electrical cards (DS1 [DS1-14, DS1N-14], DS3 [DS3-12, DS3N-12, DS3NE-12], EC1, and DS3XM-6) to high density (HD) electrical cards (DS1/E1-56, DS3/EC1-48, and DS3XM-12).

### Usage Guidelines

- For Software Release 6.0 and later, only limited upgrades are supported, such as upgrading one LD DS3-12 card to one HD DS3/EC1-48 card.
- Optical (OC-N) card upgrades and downgrades are supported with the limitations of the MRC-12 and MRC-2.5G-4 cards.
- Compatible equipment types for card upgrade:
  - DS3XM-6 to DS3XM-12
  - DS-3/DS3-N/DS3-E/DS3N-E to DS3/EC1-48
  - DS-1/DS1-N to DS1/E1-56
  - DS1-28-DS3-EC1-3
  - DS1-84-DS3-EC1-3
- Provisioning rules for card upgrade:
  - DS1-14 and DS1N-14 cards that are provisioned in Slot 1, 2, 3, 15, 16, or 17 should be upgraded to DS1/E1-56.
  - DS1-14 and DSN-14 cards that are provisioned in Slot 4, 5, 6, 12, 13, or 14 will fail when upgrading to DS1/E1-56.
  - DS3-12, DS3N-12, DS3E-12, and DS3N-12E cards that are provisioned in Slot 1, 2, 3, 15, 16, or 17 can be upgraded to DS3/EC1-48.
  - DS3-12, DS3N-12, DS3E-12, and DS3N-12E cards that are provisioned in Slot 4, 5, 6, 12, 13, or 14 will fail when upgrading to DS3/EC1-48.
  - Two upgradable cards provisioned in a 1:1 protection group cannot be upgraded.

### Category

Equipment

**Security**

Maintenance

**Input Format**

```
CHG-EQPT:[<TID>]:<AID>:<CTAG>:<EQPTTYPE>:[PPMTYPE=PPMTYPE],
[PPMNUM=<PPMNUM>],[PORTNUM=<PORTNUM>],[PORTRATE=<PORTRATE>];
```

**Input Example**

```
CHG-EQPT::SLOT-14:1::MRC-2.5G-4:PPMTYPE=PPM-1,PPMNUM=1,PORTNUM=1,
PORTRATE=OC48;
```

**Input Parameters**

Input Parameters	Description
<SRC>	The source access identifier from the “26.15 EQPT” section on page 26-37.
<EQPTTYPE>	The equipment type to be upgraded. The parameter type is EQUIPMENT_TYPE.
<ul style="list-style-type: none"> <li>10GE-XP</li> </ul>	(ONS 15454) 2 x 10 Gbps. muxponder/L2 ethernet switch card
<ul style="list-style-type: none"> <li>15216-MD-40-EVEN</li> </ul>	Thermal Multiplex/Demultiplex Passive Unit, spaced at 50 GHz on even grid
<ul style="list-style-type: none"> <li>15216-MD-40-ODD</li> </ul>	Thermal Multiplex/Demultiplex Passive Unit, spaced at 50 GHz on odd grid
<ul style="list-style-type: none"> <li>15216-MD-ID-50</li> </ul>	Thermal Interleaver Passive Unit, spaced at 50 GHz grid
<ul style="list-style-type: none"> <li>15216-FLD4-30-3</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1530.33 to 1532.68
<ul style="list-style-type: none"> <li>15216-FLD4-33-4</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1533.47 to 1535.82
<ul style="list-style-type: none"> <li>15216-FLD4-36-6</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1536.61 to 1538.98
<ul style="list-style-type: none"> <li>15216-FLD4-39-7</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1539.77 to 1542.14
<ul style="list-style-type: none"> <li>15216-FLD4-42-9</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1542.94 to 1545.32
<ul style="list-style-type: none"> <li>15216-FLD4-46-1</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1546.12 to 1548.51
<ul style="list-style-type: none"> <li>15216-FLD4-49-3</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1549.32 to 1551.72
<ul style="list-style-type: none"> <li>15216-FLD4-52-5</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1552.52 to 1554.94
<ul style="list-style-type: none"> <li>15216-FLD4-55-7</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1555.75 to 1558.17
<ul style="list-style-type: none"> <li>15216-FLD4-58-9</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1558.98 to 1561.42
<ul style="list-style-type: none"> <li>40G-MXP-C</li> </ul>	40 Gbit/Sec Multirate Muxponder
<ul style="list-style-type: none"> <li>40-SMR1-C</li> </ul>	The single module 40-channel ROADM on C-band

Input Parameters	Description
• 40-SMR2-C	The single module 40-channel ROADM with EDFA on C-band
• 40G-TXP-C	40 Gigabits per second Multirate Transponder
• 80-WXC-C	80-channel wavelength cross-connect spaced at 100 GHz grid
• AD-1B	(ONS 15454) Optical add/drop multiplexed (OADM) 1 band filter
• AD-1C	(ONS 15454) Optical add/drop multiplexed (OADM) 1 channel filter
• AD-2C	(ONS 15454) Optical add/drop multiplexed (OADM) 2 channels filter
• AD-4B	(ONS 15454) Optical add/drop multiplexed (OADM) 4 bands filter
• AD-4C	(ONS 15454) Optical add/drop multiplexed (OADM) 4 channels filter
• ADM-10G	(ONS 15454) 16 x OC3/OC12/OC48/GIGE and OC192/Trunk ADM 10 Gbps card
• AIC	(ONS 15454) AIC card
• AICI	(ONS 15454) AICI Card
• CE-1000-4	(ONS 15454) Modena mapper card
• CE-100T-8	(ONS 15454) Exige/Elise mapper card
• CE-MR-10	(ONS 15454, ONS 15454) Lotus20g ce2 card
• DCU	Dispersion Compensation Unit
• DS1-E1-56	(ONS 15454) DS1-E1-56 card
• DS3I	(ONS 15454) DS3I card
• DS3IN	(ONS 15454) DS3IN card
• E1-42	(ONS 15454) 42 port E1 card
• E1000T	(ONS 15454) E1000T card
• E100T	(ONS 15454) E100T card
• E3	(ONS 15454) E3 card
• FC-MR-4	(ONS 15454) FC-MR-4 card
• FILLER-CARD	(ONS 15454) Blank filler card
• FMEC-155E-1TO3	The equipment type for FMEC STM1E12 card with 1:3 protection
• FMEC-155E-UNPROT	The equipment type for FMEC STM1E12 card without protection
• G1000-4	(ONS 15454) A 4-port G1000 card
• GE-XP	(ONS 15454) 20 x 1 Gbps muxponder/L2 ethernet switch card
• MD-4	(ONS 15454) Four channel optical multiplexer/demultiplexer
• MESH-PP-SMR	The passive unit Patch Panel device used to connect up to four 40-SMR2-C cards

Input Parameters	Description
• ML-100T-8	(ONS 15454) Exige/Elise mapper card
• ML1000-2	(ONS 15454) Daytona 2-port GigE
• ML100T-12	(ONS 15454) Daytona 12-port FSTE
• ML100X-8	(ONS 15454) 8-port 100T card with optical interface
• MRC-12	(ONS 15454) Humvee - 12-port multirate optical card
• MRC-2.5G-4	(ONS 15454) 4-port MRC 2.5G (Hummer 4 15454-ANSI card)
• MRC-2.5G-12	(ONS 15454) 12-port MRC 2.5G (Hummer 12 15454-ETSI card)
• MXP-2.5G-10E	(ONS 15454) Monviso 10G (4 * 2.5G) muxponder card with enhanced FEC
• MXP-2.5G-10EX	(ONS 15454) Cengalo 10G (4 * 2.5G) muxponder with enhanced FEC card
• MXP-2.5G-10G	(ONS 15454) Skane 10G (4 * 2.5G) muxponder card
• MXP-MR-2.5G	(ONS 15454) Bernina multirate 2.5G muxponder unprotected
• MXPP-MR-2.5G	(ONS 15454) Bernina multirate 2.5G muxponder protected
• MXPP-MR-10DME	(ONS 15454) Multirate 10Gbps datamux
• MXPP-MR-10DMEX	(ONS 15454) Multirate 10Gbps datamux with enhanced dispersion
• OC12	(ONS 15454) OC12 card
• OC12-4	(ONS 15454) A 4-port OC12 card
• OC192	(ONS 15454) OC192 card
• OC192-XFP	(ONS 15454) Mongoose - 1-port OC192 XFP
• OC3	(ONS 15454) OC3 card
• OC3-8	(ONS 15454) 8-port OC3 card
• OC48	(ONS 15454) OC48 card
• OPT-AMP-17-C	(ONS 15454) Optical booster/pre-amplifier for C band 17 dBm
• OPT-AMP-23-C	(ONS 15454) Optical booster/pre-amplifier for C band 23 dBm
• OPT-AMP-L	(ONS 15454) Optical booster/pre-amplifier for L band
• OPT-AMP-C	(ONS 15454) Optical booster/pre-amplifier for C band
• OPT-BST	(ONS 15454) Optical booster amplifier
• OPT-BST-E	(ONS 15454) Optical booster enhanced amplifier for C band
• OPT-BST-L	(ONS 15454) Optical booster amplifier for L band
• OPT-EDFA-17	MAL-less EDFA Optical Amplifier - C-band - 17dB Gain
• OPT-EDFA-24	MAL-less EDFA Optical Amplifier - C-band - 24dB Gain
• OPT-PRE	(ONS 15454) Optical pre-amplifier
• OPT-RAMP-C	Raman pump amplifier C-band
• OPT-RAMP-CE	An extended version of Raman pump amplifier
• OPT-RAMP-E	Raman pump amplifier E-band

Input Parameters	Description
• OSC-CSM	(ONS 15454) Optical service channel (OSC) with combiner/separator module (SCM)
• OSCM	(ONS 15454) Optical service channel (OSC) module
• OTU2-XP	A 4x10G transponder that is capable to operate with multiple bit rates - 10G FC, 10GE, and OC192/STM64
• PP-4-SMR	Patch-Panel, 4 degrees, for SMR cards
• PP-MESH-4	Patch-Panel, 4 degrees
• PP-MESH-8	Patch-Panel, 8 degrees
• PPM-1	(ONS 15454) Pluggable port module with one SFP port
• PTM-4	Line card
• PTF-4	Fabric card
• PTSA	CPT 50 panel
• PTSYS- Packet Transport System	Packet transport system
• PTSYSFan-Out-Group	PTSYS Fan-Out-Group
• SHELF-M2	SHELF-M2
• SHELF-M6	SHELF-M6
• STM1E-12	(ONS 15454 SDH) STM1E-12 card
• TCC	(ONS 15454) TCC card
• TDC-CC	Coarse tunable dispersion compensation unit
• TDC-FC	Fine tunable dispersion compensation unit
• TNC	Transport Node Controller card
• TSC	Transport Shelf Controller card
• TXP-MR-10E	(ONS 15454) Skane 10G multirate transponder card with enhanced FEC
• TXP-MR-10G	(ONS 15454) Skane 10G multirate transponder card
• TXP-MR-2.5G	(ONS 15454) Rockwell multirate 2.5G unprotected
• TXPP-MR-2.5G	(ONS 15454) Rockwell multirate 2.5G protected
• XC	(ONS 15454) XC card
• XC10G	(ONS 15454) XC10G card
• XCVT	(ONS 15454) XCVT card
• XCVXC-10G	(ONS 15454) XCVXC-10G card
• XCVXC-2.5G	(ONS 15454) XCVXC-2.5G card
• XCVXL-10G	(ONS 15454) XCVXL-10G card
• XCVXL-2.5G	(ONS 15454) XCVXL-2.5G card
<PPMTYPE>	Identifies the pluggable port module type. This parameter can take only one value.
• PPM-1	Single-port PPM
<PPMNUM>	Identifies the pluggable port module number. This parameter is an Integer.
• 1	PPM No. 1
• 2	PPM No. 2

Input Parameters	Description
• 3	PPM No. 3
• 4	PPM No. 4
• 5	PPM No. 5
• 6	PPM No. 6
• 7	PPM No. 7
• 8	PPM No. 8
• 9	PPM No. 9
• 10	PPM No. 10
• 11	PPM No. 11
• 12	PPM No. 12
<PORTNUM>	Identifies the port number, which is used on the entity port with PPM. This parameter is an integer.
• 1	Port No. 1
<PORTRATE>	Identifies the port rate, which is used to specify the port rate of the multi-rate card.
• STM1	STM-1 rate
• STM4	STM-4 rate
• STM16	STM-16 rate



# CHAPTER 6

## CLR Commands

---

This chapter provides clear (CLR) commands for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.



**Note**

---

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

---

### 6.1 CLR-CCDB-CFM

(Cisco ONS 15454) The Clear Continuity Check Message Data Base Connectivity Fault Management (CLR-CCDB-CFM) command clears the continuity check message data base on a given slot.

---

**Usage Guidelines**

- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.

---

**Category**

Equipment

---

**Security**

Provisioning

---

**Input Format**

CLR-CCDB-CFM:[<TID>]:<AID>:<CTAG>;

---

**Input Example**

CLR-CCDB-CFM::SLOT-4:a;

## 6.2 CLR-COND-SECU

(Cisco ONS 15454) The Clear Security Condition (CLR-COND-SECU) command clears the specified standing condition.

**Usage Guidelines** In Software Release 6.0 and later, only the INTRUSION-PSWD parameter value is supported.

**Category** Security

**Security** Superuser

**Input Formats** CLR-COND-SECU:[<TID>]::<CTAG>[::<SECUALMTYPE>];

**Input Examples** CLR-COND-SECU:CISCO::123::INTRUSION-PSWD:

<b>Input Parameters</b>	<SECUALMTYPE>	Secure alarm type. Defaults to INTRUSION-PSWD. The parameter type is security alarm type (SECUALMTYPE).
	<ul style="list-style-type: none"> <li>INTRUSION-PSWD</li> </ul>	Condition raised after an invalid password is used during login. Condition is raised only if the password is used a specified number of times.

## 6.3 CLR-MACTABLE

(Cisco ONS 15454) The CLR-MACTABLE command clears the MAC table that has all the learned MAC addresses.

**Usage Guidelines** The card should be in Layer2 over DMDM mode to clear the MAC address.

**Category** System

**Security** Retrieve

---

**Input Format** CLR-MACTABLE:[<TID>]:<AID>:<CTAG>;

---

**Input Example** CLR-MACTABLE::SLOT-2:1;

## 6.4 CLR-MEPSTATS-CFM

(Cisco ONS 15454) The Clear Maintenance End Point Statistics Connectivity Fault Management (CLR-MEPSTATS-CFM) command clears the maintenance end point statistics.

---

**Usage Guidelines**

- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.

---

**Category** Equipment

---

**Security** Provisioning

---

**Input Format** CLR-MEPSTATS-CFM:[<TID>]:<AID>:<CTAG>;

---

**Input Example** CLR-MEPSTATS-CFM::SLOT-15:1;





# CHAPTER 7

## CONN Commands

---

This chapter provides connect (CONN) commands for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.



### Note

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

---

### 7.1 CONN-TACC-<MOD\_TACC>

(Cisco ONS 15454) The Connect Test Access for DS1, DS3I, E1, E3, STS1, STS12C, STS18C, STS192C, STS24C, STS3C, STS48C, STS96C, STS6C, STS9C, T1, T3, VT1, or VT2

(CONN-TACC-<MOD\_TACC> command connects the synchronous transport signal (STS) or Virtual Tributary (VT) defined by the access identifier (AID) to the STS specified by the test access point (TAP) number.

See [Table 28-1 on page 28-1](#) for supported modifiers by platform. For more information about TACC, refer to the *Cisco ONS 15454 SONET TL1 Reference Guide*.

#### Usage Guidelines

For this command to be applicable, you must first create the TAP using the ED-<VC\_PATH> or ED-VC12 command. Intrusive test access modes are traffic-affecting. If a facility/path is connected to a TAP in an intrusive test access mode, it is forced to go into the Locked-Maintenance state. The forced transition could be traffic-affecting. The present state of the facility/path is stored by the NE and is restored when the TAP connection is brought down. Test access connections are dropped automatically if the TL1 session is terminated or is timed out.

The following actions will return error messages:

- If all TAPs are busy, a RABY error message is returned.
- If a requested TAP is busy, a RTBY error message is returned.
- If a requested TAP does not exist, a RTEN error message is returned.
- If a circuit is already connected to another TAP, a SCAT error message is returned.
- If a requested condition already exists, a SRCN error message is returned.
- An invalid AID will return an Input, Invalid Access Identifier (IIAC) error message.
- If an access is not supported, an EANS error message is returned.
- If a requested access configuration is invalid, a SRAC error message is returned.

- You cannot connect a TACC to a cross-connect that is in pending roll.
- A connection can be made to a cross-connection, in which case all modes of access are supported. A connection to an Unmapped AID (an AID without a cross-connect on it) will allow only MONE, SPLTE, and LOOPE modes.
- A connection to the protect path of a 1+1, 1:1, or 1:N is not allowed; however, connecting to the PCA path of a two-fiber or four-fiber multiplex section-shared protection ring (MS-SPRing) is supported. This will be preempted when a MS-SPRing switch occurs.
- When you connect a TACC to a protect subnetwork connection protection (SNCP) trunk, you will always be connected to the working trunk instead.

**Category**

Troubleshooting and Test Access

**Security**

Maintenance

**Input Format**

CONN-TACC-&lt;MOD\_TACC&gt;:[&lt;TID&gt;]:&lt;SRC&gt;:&lt;CTAG&gt;::&lt;TAP&gt;:MD=&lt;MD&gt;;

**Input Example**

CONN-TACC-ST51:CISCO:STS-2-1-4:123::8:MD=MONE;

**Input Parameters**

<SRC>	Source AID from the <a href="#">“26.1 ALL” section on page 26-1</a> . SRC must not be null.
<TAP>	The test access point number. The TAP number is used to identify all messages between the TSC and the NE until the access point is released. The TAP number must be an integer with a range of 1 to 999. The TAP must not be null.
<MD>	The test access mode. (SPLTE, SPLTF, LOOPE, and LOOPF require an external quasi-random signal [QRS] input signal.) Single facility access digroup (FAD) test access does not support MONEF, SPLTEF, and SPLTAB modes. MD must not be null.  The parameter type is test access mode (TACC_MODE).
• LOOPE	Splits both the A and B paths. Connect the line incoming from E direction to the line outgoing in the E direction, and connect this looped configuration to the FAD. The line outgoing in the F direction will have a QRS connected, and the line incoming from the F direction will be terminated by the nominal characteristic impedance of the line. Intrusive test access mode.
• LOOPF	Splits both the A and B paths. Connects the line incoming from F direction to the line outgoing in the F direction, and connects this looped configuration to the FAD. The line outgoing in the E direction will have a QRS connected, and the line incoming from the E direction will be terminated by the nominal characteristic impedance of the line. Intrusive test access mode.
• MONE	Indicates that a monitor connection is to be provided from the FAD to the A transmission path of the accessed circuit.

• MONEF	Indicates that a monitor connection is to be provided from the FAD1 to a dual FAD (DFAD), or the odd pair of a facility access path (FAP), to the A transmission path, and from FAD2 of the same DFAD, or the even pair of a FAP, to the B transmission path of the accessed circuit.
• MONF	Indicates that a monitor connection is to be provided from the FAD to the B transmission path of the accessed circuit.
• SPLTA	Indicates that a connection is to be provided from both the E and F sides of the A transmission path of the circuit under test to the FAD and split the A transmission path. Intrusive test access mode.
• SPLTB	Indicates that a connection is to be provided from both the E and F sides of the B transmission path of the circuit under test to the FAD and split the B transmission path. Intrusive test access mode.
• SPLTE	Splits both the A and B paths and connects the E side of the accessed circuit to the FAD. The line outgoing in the F direction will have a QRS connected, the line incoming from the F direction will have a QRS connected, and the line incoming from the E direction will be terminated by the nominal characteristic impedance of the line. Intrusive test access mode.
• SPLTEF	Splits both the A and B paths, and connects the E side of the accessed circuit to FAD1 and the F side to FAD2. Intrusive test access mode.
• SPLTF	Splits both the A and B paths and connects the F side of the accessed circuit to the FAD. The line outgoing in the E direction will have a QRS connected, and the line incoming in the E direction will have a QRS connected. The line incoming from the E direction will be terminated by the nominal characteristic impedance of the line. Intrusive test access mode.

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<TAP>"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"8"
;
```

**Output Parameters**

<TAP>	The test access point number. The TAP number is used to identify all messages between TSC and NE until the access point is released. The TAP number must be an integer with a range of 1 to 999.
-------	--





## CHAPTER 8

# COPY Commands

---

This chapter provides copy (COPY) commands for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.



### Note

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

---

## 8.1 COPY-IOSCFG

(Cisco ONS 15454) The Copy Cisco IOS Configuration File (COPY-IOSCFG) command supports the following types of operations on the Cisco IOS configuration file of ML-Series Ethernet cards:

1. Uploading the startup Cisco IOS configuration file from the network to the node.  
FTP is the only protocol allowed for uploading. When doing this operation, the source access identifier (SRC) field must be an FTP URL string specifying the user name and password for FTP authentication, and specifying the host and the directory to locate the startup configuration file from the network. The DEST field must be a string of "STARTUP."
2. Downloading the startup Cisco IOS configuration file from the node to the network.  
FTP is the only protocol allowed for downloading. When doing this operation, the SRC field must be a string of "STARTUP." The DEST field must be an FTP URL string specifying the user name and password for FTP authentication, and specifying the host and the directory to store the startup configuration file on the network.

---

### Usage Guidelines

- This FTP timeout is 30 seconds and is not configurable.
- The Cisco IOS configuration file is unique for each ML-Series card, and is specified by the SLOT number in the AID field of the command.
- The format of the FTP URL string used in the SRC or DEST field of the command is as follows:
  - In a nonfirewall environment, the format of the URL should be:  
"FTP://[FTPUSER[:FTPPASSWORD]]@FTPHOST/CONFIG\_FILE\_PATH"  
where:  
FTPUSER is the user ID to connect to the computer with the package file.  
<FTPPASSWORD> is the password used to connect to the computer with the package file.

<FTPHOST> is the IP address of the computer with the package file. DNS lookup of hostnames is not supported.

<CONFIG\_FILE\_PATH> is the long path name to the package file.

Note that USERID and PASSWORD are optional if the user does not need to log into the host computer. All the other portions of the URL are required, including the initial “FTP:\” string.

- In a firewall environment, the hostname should be replaced with a list of IP addresses each separated by the ampersand (@) character. The first IP address should be the machine where the package file is stored. Subsequent IP addresses should be for firewall machines moving outwards towards the edge of the network, until the final IP address listed was the machine that outside users first access the network. For example, if your topology is

“FTPHOST <-> GNE3 <-> GNE2 <-> GNE1 <-> ENE”

your FTP URL will be:

“FTP://FTPUSER:FTPPASSWORD@FTPHOST@GNE3@GNE2@GNE1/CONFIG\_FILE\_PATH”

---

**Category**

File Transfer

---

**Security**

Provisioning

---

**Input Format**

COPY-IOSCFG:[<TID>]:<AID>:<CTAG>::SRC=<SRC>,DEST=<DEST>,[FTTD=<FTTD>];

---

**Input Example**

COPY-IOSCFG::SLOT-1:CTAG::SRC=“LONG\_FTP\_PATH”,DEST=“STARTUP”,  
FTTD=“FTTD\_URL”;

---

**Input Parameters**

<AID>	Access identifier. Specifies the slot number of the card where the Cisco IOS configuration file belongs. The AID is from the <a href="#">“26.15 EQPT” section on page 26-37</a> .
<SRC>	Source AID. Specifies where the Cisco IOS configuration file is copied from. SRC is a string.
<DEST>	Specifies where the Cisco IOS configuration file is copied to. DEST is a string.
<FTTD>	FTTD is a string.

## 8.2 COPY-RFILE

(Cisco ONS 15454) The Copy File (COPY-RFILE) command downloads a new software package from the location specified by the FTP URL. It is also used to back up and restore the system database.

### Prerequisite

To run the **COPY-RFILE** command, do the following:

- Run the FTP server on the remote machine.
- Register the FTP server on the GNE using the **ENT-FTPSERVER** command.

Here is an example that explains the execution of **COPY-RFILE** command:

```
> ENT-FTPSERVER:::A:::IPADDR=72.163.210.211,ENABLE=Y,IPMASK=255.255.255.
> 0,TIMER=0;
Infy600-162 2009-01-23 07:18:27
M A COMPLD
;
>
> RTRV-FTPSERVER:::A;
Infy600-162 2009-01-23 07:18:43
M A COMPLD
"IPADDR=10.77.29.252,IPMASK=255.255.255.0,ENABLE=Y,TIMER=0"
"IPADDR=72.163.210.211,IPMASK=255.255.255.0,ENABLE=Y,TIMER=0"
"IPADDR=64.103.135.83,IPMASK=255.255.255.0,ENABLE=Y,TIMER=0"
"IPADDR=10.65.72.136,IPMASK=255.255.255.0,ENABLE=N,TIMER=0"
;
>
```

### Usage Guidelines

To upload package files or restore databases from a host, the host must be running an FTP server application. If the host is not running an FTP server application, the command fails, indicating that the NE was unable to connect to the remote IP address (host). A host can either be a PC or a workstation running an FTP server application.

- User ID is the user's ID used to connect to the computer hosting the package file or system database.
- Password is the password used to connect to the computer hosting the package file or system database.
- Hostname is the hostname or IP address of the computer hosting the package file or system database.
- PACKAGE\_PATH is the long path name to the package file, starting from the home directory of the logged-in user.

All the other portions of the URL are required, including the initial "FTP://" string. For example:

```
COPY-RFILE:TID:RFILE-PKG:703:::TYPE=SWDL,SRC="FTP://USERID:PASSWORD@HOSTIP:2
1/DIR1/DIR2/DIR3/PACKAGE.PKG";
```



#### Note

- The SWDL type is used for software package uploads. The RFBU type is used for system database backups, and the RFR type is used for system database restores. The SRC input is required when the type is SWDL or RFR. The DEST input is needed when the type is RFBU. The SRC and DEST inputs cannot both be used in the same command.
- The extended FTP URL syntax is required by the COPY-RFILE syntax.

- If using an FTP URL, port number (21) is optional. Leaving this field blank defaults to 21. However, if using an FTTD URL, then port number (21) is mandatory and no default is defined.
- The default values for all optional parameters are NE default values. These values might not be the current value for a parameter. In order to obtain the current value, issue the RTRV-XX command.
- If using an FTTD URL, the firewall on the GNE must be disabled.

**Note**

FTP timeout is 30 seconds and is not configurable.

**Category**

File Transfer

**Security**

Superuser

**Input Format**

COPY-RFILE:[<TID>]:<SRC>:<CTAG>::TYPE=<XFERTYPE>,[SRC=<SRC1>],  
[DEST=<DEST>],[OVWRT=<OVWRT>],[FTTD=<FTTD>];

**Input Example**

COPY-RFILE:HERNDON:RFILE-PKG:703::TYPE=SWDL,SRC="LONG\_FTP\_PATH",  
DEST="LONG\_FTP\_PATH",OVWRT=YES,FTTD="FTTD\_URL";

**Input Parameters**


<SRC>	Source AID. The type of file being transferred. Defaults to RFILE-PKG. From the AID <a href="#">“26.25 RFILE”</a> section on page 26-52.
<XFERTYPE>	The file transfer protocol. The parameter type is TX_TYPE, which specifies the type and direction of the file transferred.
• RFBU	Remote File Backup. Applicable for Maintenance User (and higher).
• RFR	Remote File Restore. Applicable for Superuser.
• SWDL	Software Download. Applicable for Maintenance User (and higher).

---

<code>&lt;SRC1&gt;</code>	<p>Specifies the source of the file to be transferred. Only the FTP URL is supported. In a nonfirewall environment, the format of the URL should be: “FTP://FTP_USER[:FTP_PASSWORD]]@FTP_HOST_IP[:21]/PACKAGE_PATH[:TYPE=I]”</p> <p>where:</p> <ul style="list-style-type: none"> <li>• <code>&lt;FTP_USER&gt;</code> is the user ID to connect to the computer hosting the package file.</li> <li>• <code>&lt;FTP_PASSWORD&gt;</code> is the password used to connect to the computer hosting the package file.</li> <li>• <code>&lt;FTP_HOST_IP&gt;</code> is the IP address of the computer hosting the package file. DNS lookup of host names is not supported.</li> <li>• <code>&lt;PACKAGE_PATH&gt;</code> is the long path name to the package file starting from the home directory of the logged-in user.</li> </ul> <p><b>Note</b> User ID and password are optional if the user does not need to log into the host computer. All the other portions of the URL are required, including the initial “FTP://” string.</p> <p><b>Note</b> In Software Release 5.0 and later, <code>PACKAGE_PATH</code> is relative to your home directory, instead of being an absolute path from the root directory of the network element (NE). If you want to specify an absolute path, start the path with the string “%2F”.</p> <p>In a firewall environment, the hostname should be replaced with a list of IP addresses each separated by a @ character. The first IP address should be for the machine where the package file is stored. Subsequent IP addresses should then be for firewall machines moving outwards towards the edge of the network, until the final IP address listed is the machine that outside users first access the network.</p> <p>For example, if the topology is</p> <pre>“FTP_HOST_IP &lt;-&gt; GNE3 &lt;-&gt;GNE2 &lt;-&gt; GNE1 &lt;-&gt; ENE”</pre> <p>the FTP URL is:</p> <pre>FTP://FTP_USER:FTP_PASSWORD@FTP_HOST_IP@GNE3@GNE2@GNE1/PACKAGE_PATH</pre> <p>The <code>FTP_HOST_IP</code> must be one of the IP addresses that is configured on the node as a secure FTP Host.</p> <p><b>Note</b> In the secure mode setting, if the IP address of the front LAN port is different from the IP address of the back LAN port, then <code>GNE3</code> is the IP address of the front LAN port.</p> <p><code>SRC1</code> is a string.</p>
<code>&lt;DEST&gt;</code>	<p>Specifies the destination of the file to be transferred. The comments for the <code>SRC</code> parameter (above) also apply to the <code>DEST</code> parameter. <code>DEST</code> is a string.</p>

---

<OVWRT>	If OVWRT is YES, the files should be overwritten. If OVWRT is NO, the file transfer will fail if the file already exists at the destination. Using the NO value will result in an error message. The NO value is not supported for database restore or software download.  The parameter type is YES_NO, which indicates whether the user password is about to expire, the user is logged into the N or the user is locked out of the NE.
• NO	No
• YES	Yes
<FTTD>	FTTD is a string

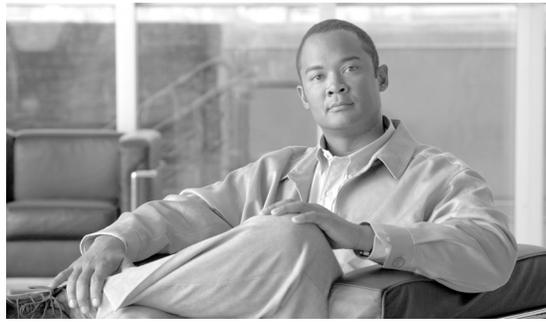

# CHAPTER 9

## DISC Commands

---

This chapter provides disconnect (DISC) commands for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.



**Note**

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

---

### 9.1 DISC-TACC

(Cisco ONS 15454) The Disconnect Test Access (DISC-TACC) command disconnects the test access point (TAP) and puts the connection back to its original state (no splits). For more information on test access (TACC), refer to the *Cisco ONS 15454 SONET TL1 Reference Guide*.

---

#### Usage Guidelines

For this command to be applicable, you must first create the TAP using the ED-<MOD\_PATH> command.



**Note**

If you send this command to an already disconnected TAP connection, an SADC error message is returned.

---



**Note**

If the system cannot release TAP, an SRTN error message is returned.

---

---

#### Category

Troubleshooting and Test Access

---

#### Security

Maintenance

---

#### Input Format

DISC-TACC:[<TID>]:<TAP>:<CTAG>;

---


**Input Example**      DISC-TACC:CISCO:8:123;

---

**Input Parameters**      <TAP>      The test access point number. The TAP number must be an integer with a range of 1 to 999. String

**Note**      This command only supports disconnecting one TAP at a time.

---

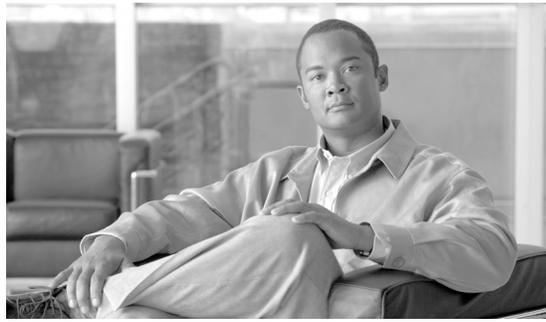

# CHAPTER 10

## DLT Commands

---



### Note

The terms "Unidirectional Path Switched Ring" and "UPSR" may appear in Cisco literature. These terms do not refer to using Cisco ONS 15xxx products in a unidirectional path switched ring configuration. Rather, these terms, as well as "Path Protected Mesh Network" and "PPMN," refer generally to Cisco's path protection feature, which may be used in any topological network configuration. Cisco does not recommend using its path protection feature in any particular topological network configuration.

---

This chapter provides delete (DLT) commands for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.



### Note

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

---

## 10.1 DLT-<MOD1PAYLOAD>

(Cisco ONS 15454) The Delete 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 1GISC3, 2GFC, 2GFICON, 2GISC3, 4GFC, 4GFICON, 5GIB, 8GFC, CHGRP, D1VIDEO, DV6000, DVBA5I, EC1, ESCON, ETRCLO, FSTE, GIGE, HDTV, ISC1, ISC3PEER1G, ISC3PEER2G, ISC3PEER2R, ISCCOMPAT, OC12, OC192, OC3, OC48, OC768, OTU3, or T3 (DLT-<MOD1PAYLOAD>) command deletes the specified port.

---

### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.



### Note

This command supports ports with pluggable port modules (PPMs), for example, the ASAP card, the FC\_MR-4 card and ONS 15454 dense wavelength division multiplexing (DWDM) cards.

---

---

### Category

Ports

---

### Security

Provisioning

## ■ DLT-&lt;MOD\_RING&gt;

---

**Input Format** DLT-<MOD1PAYLOAD>:[<TID>]:<AID>:<CTAG>[:::];

---

**Input Example** DLT-GIGE:PETALUMA:FAC-5-1-1-1:1;

---

**Input Parameters** <AID> [Access identifier from the “26.17 FACILITY” section on page 26-40 and “26.8 CHANNEL” section on page 26-22](#)

---

## 10.2 DLT-<MOD\_RING>

(Cisco ONS 15454) The Delete Bidirectional Line Switched Ring (DLT-<MOD\_RING>) command deletes the BLSR of the NE.

---

### Usage Guidelines

- If the system fails on getting IOR, a SROG (Status, Get IOR Failed) error message is returned.
- If the AID is invalid, an IIAC (Invalid AID) error message is returned.
- If the BLSR does not exist, a SRQN (BLSR Does Not Exist) error message is returned.
- The ALL AID is invalid for this command.
- The list AID format has been supported since Software Release 4.6.
- The SROF (Facility Not Provisioned or Cannot Access BLSR) error message will be returned for an invalid query.
- If the BLSR is in use, a SROF (BLSR In Use) error message is returned.
- The SRQN (BLSR Deletion Failed) error message is returned for the invalid deletion query.

---

**Category** BLSR

---

**Security** Provisioning

---

**Input Format** DLT-<MOD\_RING>:[<TID>]:<AID>:<CTAG>[:::];

---

**Input Example** DLT-BLSR:PETALUMA:BLSR-2:123;

---

**Input Parameters** <AID> [Access identifier from the “26.3 AidUnionId1” section on page 26-20](#). Identifies the bidirectional line switched ring (BLSR) of the network element (NE). The ALL and BLSR-ALL AIDs are not allowed for editing BLSRs.

---

## 10.3 DLT-ALMTYPE

(Cisco ONS 15454) The Delete Alarm Type (DLT-ALMTYPE) command deletes only user-defined alarm types.

### Usage Guidelines

ALMTYPE must not contain blank spaces or special characters other than the hyphen (-). The maximum ALMTYPE length allowed is 20 characters.

Only one alarm type can be deleted at a time using this command. There is no option available to delete all user-defined alarm types.

### Category

System

### Security

Provisioning

### Input Format

DLT-ALMTYPE:[<TID>]::<CTAG>::<ALMTYPE>;

### Input Example

DLT-ALMTYPE:::1::USERDEFINEDALARM;

### Input Parameters

<ALMTYPE>	Specifies user-defined alarm types associated with virtual wires in environmental alarm inputs.
-----------	---

## 10.4 DLT-BULKROLL-<OCN\_TYPE>

(Cisco ONS 15454) The Delete Bulkroll for OC12, OC192, OC3, OC48, OC768 (DLT-BULKROLL-<OCN\_TYPE>) command deletes an attempted bulk rolling operation of a facility or completes an attempted rolling operation. This command is used for bulk line level rolling. Use DLT-ROLL-<MOD\_PATH> for single path level rolling.

### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

### Category

Bridge and Roll

### Security

Provisioning

**Input Format**

```
DLT-BULKROLL-<OCN_TYPE>:[<TID>]:<FROM>:<CTAG>:::
[RFROMSTART=<RFROMSTART>],[RFROMEND=<RFROMEND>],WHY=<WHY>;
```

**Input Example**

```
DLT-BULKROLL-OC12:CISCO:FAC-1-1:6:::RFROMSTART=STS-1-1-1,
RFROMEND=STS-1-1-11,WHY=STOP;
```

**Input Parameters**

<FROM>	One of the end points. Access identifier from the “26.17 FACILITY” section on page 26-40 for line level rolling and bulk rolling.
<RFROMSTART>	The starting time slot in the source roll port. For bulk rolling only. The AID is from the “26.12 CrossConnectId1” section on page 26-29 (except VCM and FACILITY). Defaults to STS-<FROMSLOT>-<FROMPORT>-1, where <FROMSLOT> and <FROMPORT> are the slot and port of the <FROM> AID.
<RFROMEND>	The ending time slot in the source roll port. For bulk rolling only. The AID is from the “26.12 CrossConnectId1” section on page 26-29 (except VCM and FACILITY). Defaults to STS-<FROMSLOT>-<FROMPORT>-N, where <FROMSLOT> and <FROMPORT> are the slot and port of the <FROM> AID and N is the value of OC-N (for example, in the case of OC48, N=48).
<WHY>	The reason for deletion. The parameter type is WHY, which is the reason for deletion.
<ul style="list-style-type: none"> <li>• END</li> </ul>	Drop the leg to be rolled; this leg is identified by the RFROM parameter in ENT-ROLL or ENT-BULKROLL command.
<ul style="list-style-type: none"> <li>• STOP</li> </ul>	The rolling operation will be aborted and reverted to the previous configuration.

## 10.5 DLT-BWP-ETH

(Cisco ONS 15454)

The Delete Bandwidth Profile ETH (DLT-BWP-ETH) command deletes a bandwidth profile from the bandwidth profile database (BWP DB). The BWP DB is a collection of BWP used in a Network Element.

**Usage Guidelines**

Error conditions for deleting bandwidth profile can be:

- Invalid AID. If the AID is invalid an IIAC (Invalid AID) error message is returned.
- The “ALL” AID is invalid for this command.

**Category**

Ethernet

**Security**

Provisioning

**Input Format** DLT-BWP-ETH:[<TID>]:<AID>:<CTAG>[:::];

**Input Example** DLT-BWP-ETH:ROCKS:BWP-10000:1;

Input Parameters	<AID>	This AID is used to access BWP.
	• BWP-ALL	All AID for BWP.
	• BWP-{1-10000}	Single AID for BWP. The valid identifier ranges from 1 to 10000.

## 10.6 DLT-CRS-<PATH>

(Cisco ONS 15454) The Delete Cross-Connection for STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, STS9C, VT1, or VT2 (DLT-CRS-<PATH>) command deletes a cross-connection between synchronous transport signal (STS) paths. STS paths are specified using their STS AIDs.

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.



### Note

- The fields after CTAG (including the trailing colons) are optional.
- For one-way cross-connections, the AIDs must be in the same order as originally entered; for two-way cross-connections, either order will work.
- This command does not support the deletion of multiple STS cross-connections.
- Using “&” in the AID field of this command can delete a path protection STS cross-connection.
  - The following command is used to delete a one-way selector or two-way selector and bridge with:
 

```
from points: F1, F2
to points: T1
DLT-CRS-{STS_PATH}:[<TID>]:F1&F2,T1:<CTAG>;
```
  - The following command is used to delete a one-way bridge or two-way selector and bridge with:
 

```
from point: F1
to points: T1, T2
DLT-CRS-{STS_PATH}:[<TID>]:F1,T1&T2:<CTAG>;
```
  - The following command is used to delete a one-way or two-way subtending path protection connection with:
 

```
from point: F1, F2
to points: T1, T2
DLT-CRS-{STS_PATH}:[<TID>]:F1&F2,T1&T2:<CTAG>;
```
  - The AID format in the deletion command is the same as the AID format in the retrieved response message. For example, if the output of any retrieved AID is “F1&F2,T1:CCT,STS3C”, the deletion command with the AID format (F1&F2,T1) is required to delete this cross-connection.

- The following command is used to delete a path protection IDRI (integrated dual-ring interconnect) cross-connection:

```
DLT-CRS-{STS_PATH}:[<TID>]:A&B,C&D:<CTAG>;
```

A – Path on Ring X to which traffic from Ring Y is bridged

B – Path on Ring X to which traffic from the same ring is bridged

C – Path on Ring Y to which traffic from Ring X is bridged

D – Path on Ring Y to which traffic from the same ring is bridged

A, B, C, and D have a positional meaning. Connection type 2WAYDC is used for path protection IDRI cross-connections.

- The following command is used to delete a path protection dual-ring interconnect (DRI) cross-connection:

```
DLT-CRS-{STS_PATH}:[<TID>]:A&B,C:<CTAG>;
```

A – Path on Ring X to which traffic from Ring Y is bridged

B – Path on Ring X to which traffic from the same ring is bridged

C – Traffic to and from Ring Y

A, B, C, and D have a positional meaning. Connection type 2WAYDC is used for path protection DRI cross-connections.

- All A&B AIDs in the TL1 cross-connection command are in the format of WorkingAID&ProtectAID.
- You can experience some implementation behavior problems if additional drops have been added to the connection object.
- The facility AID is only valid for slots holding the G1K-4 card.
- The virtual facility AID (VFAC) is only valid on slots holding an ML-Series card.
- CKTID is a string of ASCII characters. The maximum length of CKTID can be 48 characters. If the CKTID is EMPTY or NULL, the field will not appear.
- The default values for all optional parameters are NE default values. These values might not be the current value for a parameter. Use a retrieve command to retrieve current values.

---

**Category**

Cross Connections

---

**Security**

Provisioning

---

**Input Format**

```
DLT-CRS-<PATH>:[<TID>]:<SRC>,<DST>:<CTAG>[::[CKTID=<CKTID>],  
[CMDMDE=<CMDMDE>]];
```

---

**Input Example**

```
DLT-CRS-ST512C:VINBURG:STS-1-1-1,STS-12-1-1:102:::CKTID=XYZ,CMDMDE=NORM;
```

<b>Input Parameters</b>	<SRC>	Source AID from the “26.12 CrossConnectId1” section on page 26-29.
	<DST>	Destination AID from the “26.12 CrossConnectId1” section on page 26-29.
	<CKTID>	Cross-connect ID. The default is Blank or None. String of ASCII characters. Maximum length is 48. If CKTID is empty or null, the CKTID field will not be displayed.
	<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
	<ul style="list-style-type: none"> <li>FRCD</li> </ul>	Force the system to override a state in which the command would normally be denied.
	<ul style="list-style-type: none"> <li>NORM</li> </ul>	Execute the command normally. Do not override any conditions that might make the command fail.

## 10.7 DLT-CRS-ETH

(Cisco ONS 15454)

The Delete Cross-Connect ETH (DLT-CRS-ETH) command deletes a cross connection between the ethernet paths. Ethernet paths are specified by using their ethernet facilities AID and SVLAN.

### Usage Guidelines

This command deletes an ethernet connection between two or more ethernet connection end points inside an ethernet port. Specify all the ethernet connection end points associated in order to identify a unique cross-connection inside the node.

### Category

DWDM

### Security

Provisioning

### Input Format

```
DLT-CRS-ETH:[<TID>]:<SRC>,<DST>:<CTAG>:::[CKTID=<CKTID>],[CMDMDE=<CMDMDE>]
;
```

### Input Example

```
DLT-CRS-ETH:VA454-22:ETHID-1-3-2-1-15,ETH-1-3-21-1-15:116:::CKTID=CIRCUIT,CMDMDE=FRCD;
```

Input Parameters		
<SRC>	Ethernet connection identifier AIDs used to access L2 ethernet connection end point.	
• ALL	The ALL AID is applicable for RTRV-only commands, basically the RTRV-rr type of commands.	
• ETHID[-{1-12}]-{1-5,12-16}-{1-22}-1-{1-20}	Ethernet connection end point aid for GE-XP card.	
• ETHID[-{1-12}]-{1-6,12-17}-{1-4}-1-{1-20}	Facility aid for 10GE-XP card.	
<DST>	Ethernet connection identifier AIDs used to access L2 ethernet connection end point	
• ALL	The ALL aid is applicable for RTRV-only commands, basically the RTRV-rr type of commands.	
• ETHID[-{1-12}]-{1-5,12-16}-{1-22}-1-{1-20}	Ethernet connection end point aid for GE-XP card.	
• ETHID[-{1-12}]-{1-6,12-17}-{1-4}-1-{1-20}	Facility aid for 10GE-XP card.	
<CKTID>	(Optional) Circuit identification parameter contains the Common Language Circuit ID or other alias of the circuit being provisioned. May not contain blank spaces. CKTID is a string of ASCII characters. The maximum length of CKTID can be 48. cktid is a string. Default value is - "NULL".	
<CMDMDE>	Command Mode is used to force the system to execute a given irrespective of any standing conditions. Default value is -NORM	
• FRCD	Force the system to override a state in which the command would normally be denied.	
• NORM	Execute the command normally. Do not override any conditions that may make the command fail.	

## 10.8 DLT-EQPT

(Cisco ONS 15454) The Delete Equipment (DLT-EQPT) command deletes a card from the NE.

This command removes the card type and attributes that were entered for a particular slot. If any facilities are assigned, they are deleted too. The command will be denied if the card is part of a protection group or has a cross-connect endpoint.

The DLT-EQPT command can also be used to delete a shelf that is no longer used. A shelf can only be deleted if there is no equipment present or if the equipment and its attributes are not in use and can be deleted as well. Only one REPT-DBCHG message will be reported on SHELF-{1-8} in the latter case. The node controller shelf (the shelf whose shelf ID is 1) cannot be deleted.

### Usage Guidelines

To delete a card that is part of a protection group, it has to be removed from the protection group first using the ED-EQPT command.

Error conditions for deleting equipment can be:

- The error message SPLD (Equipment In Use) will be returned in the following conditions:
  - The card is in a protection group.

- The card has a cross-connection, a data communications channel (DCC), a generic communications channel (GCC), an optical service channel (OSC), or a provisionable patchcord termination.
- If any of its facilities is being used as a synchronization source.
- If a card is not provisioned, an error message is returned.

<b>Category</b>	Equipment
<b>Security</b>	Provisioning
<b>Input Format</b>	DLT-EQPT:[<TID>]:<AID>:<CTAG>[::];
<b>Input Example</b>	DLT-EQPT:SONOMA:SLOT-1:104;
<b>Input Parameters</b>	<AID>      Access identifier from the <a href="#">“26.15 EQPT” section on page 26-37</a> . Identifies an equipment unit to act on.

## 10.9 DLT-FFP-<MOD2DWDMPAYLOAD>

(Cisco ONS 15454) The Delete Facility Protection Group for 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 1GISC3, 2GFC, 2GFICON, 2GISC3, 4GFC, 4GFICON, 8GFC, D1VIDEO, DV6000, DVBASI, ETRCLO, FSTE, GIGE, HDTV, ISC1, ISC3, OTU3, PASSTHRU, or OCH (DLT-FFP-<MOD2DWDMPAYLOAD>) command deletes Y-cable protection on client facilities.

<b>Usage Guidelines</b>	None
<b>Category</b>	DWDM
<b>Security</b>	Provisioning
<b>Input Format</b>	DLT-FFP-<MOD2DWDMPAYLOAD>:[<TID>]:<SRC>,<DST>:<CTAG>[::];
<b>Input Example</b>	DLT-FFP-HDTV:CISCO:FAC-1-1-1,FAC-2-1-1:100;

<b>Input Parameters</b>	<SRC>	The working facility AID from the “26.17 FACILITY” section on page 26-40.
	<DST>	The protecting facility AID from the “26.17 FACILITY” section on page 26-40.

## 10.10 DLT-FFP-<OCN\_TYPE>

(Cisco ONS 15454) The Delete Facility Protection Group for OC3, OC12, OC48, OC192, OC768 (DLT-FFP-<OCN\_TYPE>) command deletes an OC-N facility protection group in a 1+1 protection scheme.

**Usage Guidelines** See [Table 28-1 on page 28-1](#) for supported modifiers by platform.  
If the protection group does not exist, an error message will be returned.

**Category** Protection

**Security** Provisioning

**Input Format** DLT-FFP-<OCN\_TYPE>:[<TID>]:<WORK>,<PROTECT>:<CTAG>[:::];

**Input Example** DLT-FFP-OC3:PETALUMA:FAC-2-1,FAC-1-1:1;

<b>Input Parameters</b>	<WORK>	The working facility AID from the “26.17 FACILITY” section on page 26-40.
	<PROTECT>	The protect facility AID from the “26.17 FACILITY” section on page 26-40.

## 10.11 DLT-FOG

(Cisco ONS 15454) The Delete Fan-Out-Group (DLT-FOG) command deletes the provisioned Fan-out-Group.

### Usage Guidelines

- Deletes the provisioned FOG.
- If AID is invalid, an IIAC (Invalid AID) error message is returned.
- An error message will be returned if the unprovisioned FOG AID is entered.

### Category

Equipment

### Security

Provisioning

### Input Format

DLT-FOG:[<TID>]:<AID>:<CTAG>[::];

### Input Examples

DLT-FOG::FOG-1-37:1;

### Input Parameters

<b>&lt;AID&gt;</b>	Access identifier of the Fan-out-group. The ALL AIDs are not allowed for deleting the FOGs. Access identifier from the <a href="#">“26.15 EQPT” section on page 26-37</a> .
--------------------	---

## 10.12 DLT-FTPSEVER

(Cisco ONS 15454) The Delete FTP Server (DLT-FTPSEVER) command deletes FTP server entries.

### Usage Guidelines

None.

### Category

ENE

### Security

Superuser

### Input Format

DLT-FTPSEVER:[<TID>]::<CTAG>:::IPADDR=<IPADDR>;

### Input Examples

1. DLT-FTPSEVER:[<TID>]::<CTAG>:::IPADDR=10.20.30.40;

2. DLT-FTPSERVER:TID::CTAG::

<b>Input Parameters</b>	<code>&lt;IPADDR&gt;</code>	Specifies the IP address of the FTP server entry to be deleted. IPADDR=ALL specifies that all entries are deleted from the list.
-------------------------	-----------------------------	--

## 10.13 DLT-LMP-CTRL

(Cisco ONS 15454) The Delete Link Management Protocol Control Channel (DLT-LMP-CTRL) command deletes an LMP control channel.

<b>Usage Guidelines</b>	This command is only applicable on nodes that support the LMP protocol and have the LMP protocol enabled.
-------------------------	---

<b>Category</b>	DWDM
-----------------	------

<b>Security</b>	Maintenance
-----------------	-------------

<b>Input Format</b>	DLT-LMP-CTRL:[<TID>]:<SRC>:<CTAG>;
---------------------	------------------------------------

<b>Input Example</b>	DLT-LMP-CTRL:PETALUMA:CTRL-3:704;
----------------------	-----------------------------------

<b>Input Parameters</b>	<code>&lt;SRC&gt;</code>	The LMP control channel.
	<ul style="list-style-type: none"> <li>• CTRL-ALL</li> </ul>	Specifies all the control channels.
	<ul style="list-style-type: none"> <li>• CTRL-{1-4}</li> </ul>	Specifies an individual control channel.

## 10.14 DLT-LMP-TLINK

(Cisco ONS 15454) The Delete Link Management Protocol Traffic Engineering (TE) Link (DLT-LMP-TLINK) command deletes an LMP TE link.

<b>Usage Guidelines</b>	This command is only applicable on nodes that support the LMP protocol and have the LMP protocol enabled.
-------------------------	---

<b>Category</b>	DWDM
-----------------	------

---

**Security** Maintenance

---

**Input Format** DLT-LMP-TLINK:[<TID>]:<SRC>:<CTAG>;

---

**Input Example** DLT-LMP-TLINK:PETALUMA:TLINK-3:704;

---

Input Parameters		
<SRC>		LMP TE link.
• TLINK-ALL		Specifies all the TE links.
• TLINK-{1-256}		Specifies an individual TE link.

---

## 10.15 DLT-LMP-DLINK

(Cisco ONS 15454) The Delete Link Management Protocol Data Link (DLT-LMP-DLINK) command deletes an LMP data link.

---

**Usage Guidelines** This command is only applicable on nodes that support the LMP protocol and have the LMP protocol enabled.

---

**Category** DWDM

---

**Security** Maintenance

---

**Input Format** DLT-LMP-DLINK:[<TID>]:<SRC>:<CTAG>;

---

**Input Example** DLT-LMP-DLINK:PETALUMA:FAC-14-1-1:704;

---

Input Parameters	<SRC>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
------------------	-------	--

---

## 10.16 DLT-LNK

(Cisco ONS 15454) The Delete Optical Link for OCH, OMS, or OTS (DLT-LNK) command deletes an optical link between two optical connection points. The optical link is specified by using the AID of the involved optical connection points.

## ■ DLT-LNKTERM

<b>Usage Guidelines</b>	None	
<b>Category</b>	DWDM	
<b>Security</b>	Provisioning	
<b>Input Format</b>	DLT-LNK:[<TID>]:<FROM>,<TO>:<CTAG>;	
<b>Input Example</b>	DLT-LNK:PENNGROVE:BAND-6-1-TX,BAND-13-1-RX:114;	
<b>Input Parameters</b>	<FROM>	The identifier at one end of the optical link from the AID <a href="#">“26.4 BAND” section on page 26-20</a>
	<TO>	The identifier at the other end of the optical link from the AID <a href="#">“26.4 BAND” section on page 26-20</a>

## 10.17 DLT-LNKTERM

(Cisco ONS 15454) The Delete a Provisionable Patchcord Termination (DLT-LNKTERM) command deletes a provisionable patchcord termination that is present on a node. All termination points of a link/provisionable patchcord have to be deleted in order for the link to be deleted fully.

<b>Usage Guidelines</b>	This command accepts multiple AIDs, but does not accept the ALL AID. A suitable error will be responded if the link termination does not exist.	
<b>Category</b>	Provisionable Patchcords	
<b>Security</b>	Provisioning	
<b>Input Format</b>	DLT-LNKTERM:[<TID>]:<AID>:<CTAG>;	
<b>Input Example</b>	DLT-LNKTERM::LNKTERM-1:CTAG;	

<b>Input Parameters</b>	<AID>	Access identifier from the “ <a href="#">26.21 LNKTERM</a> ” section on <a href="#">page 26-50</a> . Indicates a link (provisionable patchcord) termination on the local node.
-------------------------	-------	--

## 10.18 DLT-MA-CFM

(Cisco ONS 15454) The Delete Maintenance Association Connectivity Fault Management (DLT-MA-CFM) command deletes the maintenance association present on the card.

### Usage Guidelines

- The “ALL” AID is invalid for this command.
- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.

### Category

Equipment

### Security

Provisioning

### Input Format

DLT-MA-CFM:[<TID>]:<AID>:<CTAG>::MANAME=<MANAME>,SVLANID=<SVLANID>;

### Input Example

DLT-MA-CFM:454-156:SLOT-1:1:::MANAME=MANAME,SVLANID=4;

### Input Parameters

<AID>	Access identifier from the “ <a href="#">26.15 EQPT</a> ” section on <a href="#">page 26-37</a> .
<MANAME>	Maintenance Association Name. It is a string. The MA name length should not exceed more than 43 characters.
<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.

## 10.19 DLT-MD-CFM

(Cisco ONS 15454) The Delete Maintenance Domain Connectivity Fault Management (DLT-MD-CFM) command deletes the maintenance domain present on the card.

### Usage Guidelines

- The “ALL” AID is invalid for this command.
- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.

<b>Category</b>	Equipment						
<b>Security</b>	Provisioning						
<b>Input Format</b>	DLT-MD-CFM:[<TID>]:<AID>:<CTAG>:::MDNAME=<MANAME>,LEVEL=<LEVEL>;						
<b>Input Example</b>	DLT-MD-CFM:454-156:SLOT-1:1:::MDNAME=MDNAME,LEVEL=5;						
<b>Input Parameters</b>	<table border="1"> <tr> <td>&lt;AID&gt;</td> <td>Access identifier from the <a href="#">“26.15 EQPT” section on page 26-37</a>.</td> </tr> <tr> <td>&lt;MDNAME&gt;</td> <td>Maintenance Domain Name. It is a string. The MD name length should not exceed more than 43 characters.</td> </tr> <tr> <td>&lt;LEVEL&gt;</td> <td>This indicates the level of the maintenance domain. The value ranges from 0 to 7.</td> </tr> </table>	<AID>	Access identifier from the <a href="#">“26.15 EQPT” section on page 26-37</a> .	<MDNAME>	Maintenance Domain Name. It is a string. The MD name length should not exceed more than 43 characters.	<LEVEL>	This indicates the level of the maintenance domain. The value ranges from 0 to 7.
<AID>	Access identifier from the <a href="#">“26.15 EQPT” section on page 26-37</a> .						
<MDNAME>	Maintenance Domain Name. It is a string. The MD name length should not exceed more than 43 characters.						
<LEVEL>	This indicates the level of the maintenance domain. The value ranges from 0 to 7.						

## 10.20 DLT-MDMAMAP-CFM

(Cisco ONS 15454) The Delete Maintenance Domain and Maintenance Association mapping Connectivity Fault Management (DLT-MDMAMAP-CFM) command deletes the maintenance domain and maintenance association mapping.

### Usage Guidelines

- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.

<b>Category</b>	Equipment
<b>Security</b>	Configuration
<b>Input Format</b>	DLT-MDMAMAP-CFM:[<TID>]:<AID>:<CTAG>:::MDNAME=<MANAME>,MAPACTION=<MAP ACTION>,[MANAME=<MANAME>],[SVLANID=<SVLANID>];
<b>Input Example</b>	DLT-MDMAMAP-CFM::SLOT-17:1:::MDNAME=CISCO,MAPACTION=DETACH,MANAME=MA1,SVLANID=10;

<b>Input Parameters</b>	<AID>	Access identifier from the <a href="#">“26.15 EQPT”</a> section on page 26-37.
	<MDNAME>	Maintenance Association Name. It is a string. The MA name length should not exceed more than 43 characters.
	<MAPACTION>	Describes the mapping action while deleting the attached MAs with MDs.
	• DETACH	Deletes the specified MA.
	• DETACH-ALL	Deletes all the MAs attached to the MD.
	<MANAME>	Maintenance Association Name. It is a string. The MA name length should not exceed more than 43 characters.
	<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.

## 10.21 DLT-MEP-CFM

(Cisco ONS 15454) The Delete Maintenance End Point Connectivity Fault Management (DLT-MEP-CFM) command deletes the maintenance end points on the port.

### Usage Guidelines

- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.

### Category

Ports

### Security

Provisioning

### Input Format

```
DLT-MEP-CFM:[<TID>]:<AID>:<CTAG>:::SVLANID=<SVLANID>,MDNAME=<MDNAME>,MPID=<MPID>;
```

### Input Example

```
DLT-MEP-CFM::ETH-12-3-1:1:::SVLANID=100,MDNAME=MD2,MPID=20;
```

### Input Parameters

<AID>	Access identifier from the <a href="#">“26.16 ETH”</a> section on page 26-40.
<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<MDNAME>	Maintenance Domain Name. It is a string. The MD name length should not exceed more than 43 characters.
<MPID>	Maintenance Point Identifier. It is an integer.

## 10.22 DLT-MIP-CFM

(Cisco ONS 15454) The Delete Maintenance Intermediate Point Connectivity Fault Management (DLT-MIP-CFM) command deletes the maintenance intermediate points on the port.

### Usage Guidelines

- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.

### Category

Ports

### Security

Provisioning

### Input Format

DLT-MIP-CFM:[<TID>]:<AID>:<CTAG>::VLANID=<VLANID>;

### Input Example

DLT-MIP-CFM::ETH-1-1-1:1::VLANID=2;

### Input Parameters

<AID>	Access identifier from the <a href="#">“26.16 ETH” section on page 26-40</a> .
<VLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.

## 10.23 DLT-NNI-ETH

(Cisco ONS 15454) The Delete Ethernet Network-to-Network Interface (DLT-NNI-ETH) command deletes the NNI S-VLAN ID for the NNI of an L2 Ethernet port.

### Usage Guidelines

- The default values for all optional parameters are NE default values, but these values might not be the current value for a parameter. Use the RTRV-ETH command to obtain the current value.
- If the AID is invalid, an IIAC (Invalid AID) error message is returned.
- The ALL AID is invalid for this command.

### Category

Ethernet

### Security

Provisioning

### Input Format

DLT-NNI-ETH:[<TID>]:<AID>:<CTAG>::<SVLANID>[::];

### Input Example

DLT-NNI-ETH:PETALUMA:ETH-1-1-1:1::1010;

### Input Parameters

<AID>	Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the <a href="#">“26.16 ETH” section on page 26-40</a> .
<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.

## 10.24 DLT-NNI-CHGRP

(Cisco ONS 15454) The Delete Channel Group Network-to-Network Interface (DLT-NNI-CHGRP) command deletes the NNI S-VLAN ID for the NNI of a channel group.

### Usage Guidelines

- The default values for all optional parameters are NE default values, but these values might not be the current value for a parameter. Use the RTRV-ETH command to obtain the current value.
- If the AID is invalid, an IIAC (Invalid AID) error message is returned.
- The ALL AID is invalid for this command.

### Category

Channel group

---

**Security** Provisioning

---

**Input Format** DLT-NNI-CHGRP:[<TID>]:<AID>:<CTAG>::<SVLANID>[::];

---

**Input Example** DLT-NNI-CHGRP:CISCO:CHGRP-1-1:1::1010;

---

<b>Input Parameters</b>	<AID>	Access identifier from the “ <a href="#">Table 26-9CHGRP</a> ” section on <a href="#">page 26-24</a> .
	<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.

---

## 10.25 DLT-QNQ-ETH

(Cisco ONS 15454) The Delete Ethernet QinQ (DLT-QNQ-ETH) command deletes the IEEE 802.1Q tunneling (QinQ) relationship between the CE-VLAN and the S-VLAN for Gigabit Ethernet uniport provisioning associated to an L2 Ethernet port.

---

**Usage Guidelines** The default values for all optional parameters are NE default values, but these values might not be the current value for a parameter. Use the RTRV-ETH command to obtain the current value.

---

**Category** Ethernet

---

**Security** Provisioning

---

**Input Format** DLT-QNQ-ETH:[<TID>]:<AID>:<CTAG>::<FIRSTCEVLANID>,<LASTCEVLANID>,<SVLANID>[::];

---

**Input Example** DLT-QNQ-ETH:PETALUMA:ETH-1-1-1:1::10,11,100;

---

<b>Input Parameters</b>	<AID>	Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the “ <a href="#">26.16 ETH</a> ” section on <a href="#">page 26-40</a> .
	<FIRSTCEVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.

---

<LASTCEVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.

## 10.26 DLT-OCHCC

(Cisco ONS 15454) The Delete Optical Channel Client Connection (DLT-OCHCC) command deletes the OCH client connection.

**Usage Guidelines** None

**Category** DWDM

**Security** Provisioning

**Input Format** DLT-OCHCC:[<TID>]:<AID>:<CTAG>[:::CKTID=<CKTID>],[CMDMDE=<CMDMDE>];

**Input Example** DLT-OCHCC:VA454-22:FAC-2-1-1:116:::CKTID=\`OCHCC-1\`,CMDMDE=FRCD;

<b>Input Parameters</b>	<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
	<CKTID>	Cross-connect ID. The default is Blank or None. String of ASCII characters. Maximum length is 48. If CKTID is empty or null, the CKTID field will not be displayed.
	<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
	• FRCD	Force the system to override a state in which the command would normally be denied.
	• NORM	Execute the command normally. Do not override any conditions that might make the command fail.

## 10.27 DLT-OCHNC

(Cisco ONS 15454) The Delete Optical Channel Network Connection (DLT-OCHNC) command deletes the OCH network connection.

### Usage Guidelines

Two OCHNC endpoints must be specified in order to identify the wavelength channel inside the node.

### Category

DWDM

### Security

Provisioning

### Input Format

DLT-OCHNC:[<TID>]:<SRC>,<DST>:<CTAG>:::[CKTID=<CKTID>],[CMDMDE=<CMDMDE>];

### Input Example

```
DLT-OCHNC:VA454-22:CHANWL-1-3-TX-1530.33,
CHANWL-4-1-RX-1530.33:116:::CKTID=CIRCUIT,CMDMDE=FRCD;
```

### Input Parameters

<SRC>	Source access identifier from the <a href="#">“26.8 CHANNEL”</a> section on page 26-22. In two-way wavelength connection sources, both directions need to be indicated.
<DST>	Destination access identifier from the <a href="#">“26.20 LINEWL”</a> section on page 26-46. In two-way wavelength connection sources, both directions need to be indicated.
<CKTID>	Cross-connect ID. The default is Blank or None. String of ASCII characters. Maximum length is 48. If CKTID is empty or null, the CKTID field will not be displayed.
<CMDMDE>	The parameter type is command mode, which forces the system to execute a given command regardless of any standing conditions. NORM mode is the default behavior for all commands but you can specify FRCD to force the system to override a state in which the command would normally be denied.
<ul style="list-style-type: none"> <li>FRCD</li> </ul>	Force the system to override a state in which the command would normally be denied.
<ul style="list-style-type: none"> <li>NORM</li> </ul>	Execute the command normally. Do not override any conditions that might make the command fail.

## 10.28 DLT-QNQ-CHGRP

(Cisco ONS 15454) The Delete Channel Group QinQ (DLT-QNQ-CHGRP) command deletes the IEEE 802.1Q tunneling (QinQ) relationship between the CE-VLAN and the S-VLAN for Gigabit Ethernet uniprot provisioning associated to a channel group.

<b>Usage Guidelines</b>	The default values for all optional parameters are NE default values, but these values might not be the current value for a parameter. Use the RTRV-ETH command to obtain the current value.	
<b>Category</b>	Channel Group	
<b>Security</b>	Provisioning	
<b>Input Format</b>	DLT-QNQ-CHGRP:[<TID>]:<AID>:<CTAG>::<FIRSTCEVLANID>,<LASTCEVLANID>,<SVLANID>[::];	
<b>Input Example</b>	DLT-QNQ-CHGRP:CISCO:CHGRP-1-1:1::10,11,100;	
<b>Input Parameters</b>	<AID>	Access identifier from the “26.9 CHGRP” section on page 26-24.
	<FIRSTCEVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
	<LASTCEVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
	<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.

## 10.29 DLT-REP

(Cisco ONS 15454) The Delete Resilient Ethernet Protocol (DLT-REP) command deletes the ethernet port from the Resilient Ethernet Protocol (REP) segment.

### Usage Guidelines

- This command deletes all REP configuration configured on ETH ports on the card.
- This command is applicable only to GE\_XP and 10GE\_XP cards.
- This command is only applicable if the card is in ETH-L2 card mode.
- If the port is not part of any segment, the NE generates an error message.

**Category** Ethernet

---

**Security** Provisioning

---

**Input Format** DLT-REP:[TID]:<AID>:<CTAG>[:::];

---

**Input Example** DLT-REP:CISCO:ETH-1-1-1-1:123;

---

**Input Parameters** <AID> Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the “26.16 ETH” section on page 26-40.

---

## 10.30 DLT-RMONTH-<MOD2\_RMON>

(Cisco ONS 15454) The Delete Remote Monitoring Threshold for 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 4GFC, 4GFICON, 8GFC, CHGRP, ETH, FSTE, G1K-4, GFPOS, GIGE, HDLC, OCH, or POS (DLT-RMONTH-<MOD2\_RMON>) command deletes a threshold entry in the remote monitoring (RMON) alarm table. Because multiple thresholds can be created for a particular MONTYPE, you must specify all of the necessary parameters for the specific threshold that you want to delete.

---

**Usage Guidelines** See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

---

**Category** Performance

---

**Security** Provisioning

---

**Input Format** DLT-RMONTH-<MOD2\_RMON>:[<TID>]:<SRC>:<CTAG>::<MONTYPE>,,,<INTVL>:  
RISE=<RISE>,FALL=<FALL>,[SAMPLE=<SAMPLE>],[STARTUP=<STARTUP>][:];

---

**Input Example** DLT-RMONTH-GIGE:CISCO:FAC-2-1:1234::etherStatsOctets,,,100:RISE=1000,FALL=100  
SAMPLE=DELTA,STARTUP=RISING;

---

<b>Input Parameters</b>	<SRC>	Source access identifier from the “26.17 FACILITY” section on page 26-40. AID for the facility that manages the data statistics.
	<MONTYPE>	Monitored type. Type of RMON monitored data statistics. The parameter type is monitoring type list (ALL_MONTYPE).
	• AISSP	Alarm Indication Signal Seconds—Path
	• ALL	All possible values

---

• BBE-PM	OTN—Background Block Errors—Path Monitor Point
• BBE-SM	OTN—Background Block Errors—Section Monitor Point
• BBER-PM	OTN—Background Block Error Ratio—Path Monitor Point expressed as one tenth of a percentage
• BBER-SM	OTN—Background Block Error Ratio—Section Monitor Point expressed as one tenth of a percentage
• BIEC	FEC—Bit Errors Corrected
• CGV	8B10B—Code Group Violations
• CSSP	Controlled Slip Seconds—Path (DSXM-12 FDL/T1.403 PM count)
• CVCPP	Coding Violations—CP-Bit Path
• CVL	Coding Violations—Line
• CVP	Coding Violations—Path
• CVS	Coding Violations—Section
• CVV	Coding Violations—Section
• DCG	8B10B—Data Code Groups
• ESAP	Errored Second Type A—Path (DS3XM-12 DS1 PM count)
• ESBP	Errored Second Type B—Path (DS3XM-12 DS1 PM count)
• ESCPP	Errored Seconds—CP—Bit Path
• ESL	Errored Seconds—Line
• ESNPFE	Errored Second—Network Path (DS3XM-12 DS1 PM count)
• ESP	Errored Seconds—Path
• ES-PM	OTN—Errored Seconds—Path Monitor Point
• ES-SM	OTN—Errored Seconds—Section Monitor Point
• ESR	Errored Second—Ratio
• ESR-PM	Errored Seconds Ratio—Path monitor Point expressed as one tenth of a percentage
• ESR-SM	Errored Seconds Ratio—Section monitor Point expressed as one tenth of a percentage
• ESS	Errored Seconds—Section
• ESV	Errored Seconds—VT Path
• etherStatsBroadcastPkts	The total number of good packets received that were directed to a multicast address.
• etherStatsCollisions	Number of transmit packets that are collisions.
• etherStatsCRCAAlignErrors	The total number of packets received that have a length between 64 and 1518 octets (excluding framing bits, but including frame check sequence [FCS] octets).
• etherStatsDropEvents	Number of received frames dropped at the port level.
• etherStatsFragments	The total number of packets received that were less than 64 octets.
• etherStatsJabbers	The total number of packets received that are longer than 1518 octets.
• etherStatsOctets	The total number of octets of data.
• etherStatsOversizePkts	The total number of packets received that are longer than 1518 octets.

• etherStatsPkts	The total number of packets received (including bad packets, broadcast packets, and multicast packets).
• etherStatsUndersizePkts	The total number of packets received that are less than 64 octets.
• FCP	Failure Count—Line
• FC-PM	OTN—Failure Count—Path Monitor Point
• FC-SM	OTN—Failure Count—Section Monitor Point
• HP-AR	Availability Ratio
• HP-BBE	High-Order Path Background Block Error
• HP-BBER	High-Order Path Background Block Error Ratio
• HP-EB	High-Order Path Errored Block
• HP-ES	High-Order Path Errored Second
• HP-ESA	High-Order Path Errored Seconds—A
• HP-ESB	High-Order Path Errored Seconds—B
• HP-ESR	High-Order Path Errored Second Ratio
• HP-FC	High-Order Path Failure Count
• HP-NPJC-PDET	High Order Path Negative Pointer Justification Count
• HP-NPJC-PGEN	High Order Path, Negative Pointer Justification Count
• HP-OI	Outage Intensity
• HP-PJCDIFF	High Order Path Pointer Justification Count Difference
• HP-PJCS-PDET	High Order Path Pointer Justification Count
• HP-PJCS-PGEN	High Order Path Pointer Justification Count Seconds
• HP-PPJC-PDET	High Order Path Positive Pointer Justification Count
• HP-PPJC-PGEN	High Order Path, Positive Pointer Justification Count
• HP-SEPI	The number of SEP events in available time
• HP-SES	High-Order Path Severely Errored Seconds
• HP-SESR	High-Order Path Severely Errored Second Ratio
• HP-UAS	High-Order Path Unavailable Seconds
• ifInBroadcastPkts	Number of broadcast packets received since the last counter reset.
• ifInDiscards	The number of inbound packets.
• ifInErrorBytePktss	Receive Error Byte
• ifInErrors	The number of inbound packets (or transmission units) that contained errors.
• ifInFramingErrorPkts	Receive Framing Error
• ifInJunkInterPkts	Receive Interpacket Junk
• ifInMulticastPkts	Number of multicast packets received since the last counter reset.
• ifInOctets	Number of bytes transmitted since the last counter reset.
• ifInUcastPkts	Number of unicast packets received since the last counter reset.
• ifOutBroadcastPkts	Number of broadcast packets transmitted.
• ifOutDiscards	The number of outbound packets.
• ifOutErrors	The number of outbound packets (or transmission units) that could not be transmitted because of errors.
• ifOutMulticastPkts	Number of multicast packets transmitted.

• ifOutPayloadCrcErrors	Received payload cyclic redundancy check (CRC) errors.
• ifOutUcastPkts	Number of unicast packets transmitted.
• IOS	8B10B—Idle Ordered Sets
• IPC	Invalid Packet Count
• LBCL-AVG	Average Laser Bias current in microamps
• LBCL-MAX	Maximum Laser Bias current in microamps
• LBCL-MIN	Minimum Laser Bias current in microamps
• LBCN	Normalized Laser Bias Current for OC3-8
• LBCN-HWT	Laser Bias Current
• LBCN-LWT	Laser Bias Current
• LOSSL	Loss of Signal Seconds—Line
• LP-BBE	Low-Order Path Background Block Error
• LP-BBER	Low-Order Path Background Block Error Ratio
• LP-EB	Low-Order Path Errored Block
• LP-ES	Low-Order Path Errored Second
• LP-ESA	Low-Order Path Errored Seconds—A
• LP-ESB	Low-Order Path Errored Seconds—B
• LP-ESR	Low-Order Path Errored Second Ratio
• LP-FC	Low-Order Path Failure Count
• LP-NPJC-DET	Low-Order Negative Pointer Justification Count, Detected
• LP-NPJC-GEN	Low Order Negative Pointer Justification Count, Generated
• LP-PPJC-DET	Low-Order Positive Pointer Justification Count, Detected
• LP-PPJC-GEN	Low-Order Positive Pointer Justification Count, Generated
• LP-SEP	Low-Order Path Severely Errored Period
• LP-SEPI	Low-Order Path Severely Errored Period Intensity
• LP-SES	Low-Order Path Severely Errored
• LP-UAS	Low-Order Path Unavailable Seconds
• MS-PSC	Protection switch count
• MS-PSD	Protection switch duration
• NIOS	8B10B—Non Idle Ordered Sets
• NPJC-PDET	Negative Pointer Justification Count, Path Detected
• NPJC-PGEN	Negative Pointer Justification Count, Path Generated
• OPR-AVG	Average Receive Power in tenths of a microwatt
• OPR-MAX	Maximum Receive Power in tenths of a microwatt
• OPR-MIN	Minimum Receive Power in tenths of a microwatt
• OPRN	Normalized Optical Receive Power for OC3-8
• OPRN-MAX	Maximum value for OPRN
• OPRN-MIN	Minimum value for OPRN
• OPT-AVG	Average Transmit Power in tenths of a microwatt
• OPT-MAX	Maximum Transmit Power in tenths of a microwatt
• OPT-MIN	Minimum Transmit Power in tenths of a microwatt

• OPTN	Normalized value for Optical Power Transmitted for the OC3-8 card
• OPTN-MAX	Maximum value for OPTN
• OPTN-MIN	Minimum value for OPTN
• OPWR-AVG	Optical Power—Average Interval Value in one tenth of dBm
• OPWR-MAX	Optical Power—Maximum Interval Value in one tenth of dBm
• OPWR-MIN	Optical Power—Minimum Interval Value in one tenth of dBm
• PPJC-PDET	Positive Pointer Justification Count, Path Detected
• PPJC-PGEN	Positive Pointer Justification Count, Path Generated
• PSC	Protection Switching Count
• PSC-R	Protection Switching Count—Ring
• PSC-S	Protection Switching Count—Span
• PSC-W	Protection Switching Count—Working
• PSD	Protection Switching Duration
• PSD-R	Protection Switching Duration—Ring
• PSD-S	Protection Switching Duration—Span
• PSD-W	Protection Switching Duration—Working
• SASCPP	Severely Errored Framing/Alarm Indication Signal (AIS) Second—CP-Bit Path
• SASP	Severely Errored Framing/AIS Seconds Path
• SEFS	Severely Errored Framing Seconds
• SEFSP	Severely Errored Framing Seconds—Path (DS3XM-12 DS1 PM count)
• SESCPP	Severely Errored Second—CP-Bit Path
• SESL	Severely Errored Second—Line
• SESNPFE	Severely Errored Second—Network Path (DS3XM-12 DS1 PM count)
• SESP	Severely Errored Second—Path
• SES-PM	OTN—Severely Errored Second—Path
• SESR-PM	OTN—Severely Errored Second Ratio—Path Monitor Point expressed as one tenth of a percentage
• SESR-SM	OTN—Severely Errored Second Ratio—Section Monitor Point expressed as one tenth of a percentage
• SESS	Severely Errored Second—Section
• SES-SM	OTN—Severely Errored Second—Section Monitor Point
• SESV	Severely Errored Second—VT Path
• UASCPP	Unavailable Second—CP-Bit Path
• UASL	Unavailable Second—Line
• UASNPFE	Unavailable Second—Network Path (DS3XM-12 DS1 PM count)
• UASP	Unavailable Second—Path
• UAS-PM	OTN—Unavailable Second—Path Monitor Point
• UAS-SM	OTN—Unavailable Second—Section Monitor Point
• UASV	Unavailable Second—VT Path

• UNC-WORDS	FEC—Uncorrectable Words
• VPC	Valid Packet Count
<INTVL>	The interval, in seconds, during which the data is sampled and compared with the rising and falling threshold. A valid value is any integer greater than or equal to 10 (seconds).
<RISE>	The rising threshold for the sampled statistics. A valid value is any integer.
<FALL>	The falling threshold. A valid value is any integer smaller than the rising threshold.
<SAMPLE>	The method of calculating the value to be compared to the thresholds. The parameter type is SAMPLE_TYPE, which describes how the data will be calculated during the sampling period.
• ABSOLUTE	Comparing directly
• DELTA	Comparing with the current value of the selected variable subtracted by the last sample
<STARTUP>	Dictates whether an event will generate if the first valid sample is greater than or equal to the rising threshold, less than or equal to the falling threshold, or both. The parameter type is STARTUP_TYPE, which indicates whether an event will be generated when the first valid sample is crossing the rising or falling threshold.
• FALLING	Generates the event when the sample is smaller than or equal to the falling threshold
• RISING	Generates the event when the sample is greater than or equal to the rising threshold
• RISING-OR-FALLING	Generates the event when the sample is crossing the rising threshold, or the falling threshold

## 10.31 DLT-ROLL-<MOD\_PATH>

(Cisco ONS 15454) The Delete Roll on STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, STS9C, VT1, or VT2 (DLT-ROLL-MOD\_PATH>) command deletes or completes an attempted rolling operation.

### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.



### Note

STS18C and STS36 are not supported for this command in this release.

### Category

Bridge and Roll

### Security

Provisioning

**Input Format** DLT-ROLL-<MOD\_PATH>:[<TID>]:<FROM>,<TO>:<CTAG>:::WHY=<WHY>;

**Input Example** DLT-ROLL-ST1:CISCO:STS-1-1-1,STS-2-1-1:6:::WHY=STOP;

<b>Input Parameters</b>	<FROM>	Source access identifier from the “ <a href="#">26.12 CrossConnectId1</a> ” section on page 26-29 (except VCM and FACILITY). It is one of the termination points (legs) of the existing cross-connection. If the existing cross-connection is one-way, this termination point (leg) should be the FROM-AID termination point. Otherwise, FROM is not significant. FROM and TO should be entered as they are entered in the ENT-CRS command. You can issue RTRV-CRS command, and use the response for the FROM and TO parameters.
	<TO>	Destination access identifier from the “ <a href="#">26.12 CrossConnectId1</a> ” section on page 26-29 (except VCM and FACILITY). It is one of the termination points (legs) of the existing cross-connection. If the existing cross-connection is one-way, this termination point (leg) should be the TO-AID termination point. Otherwise, TO is not significant. FROM and TO should be entered as they are entered in the ENT-CRS command. You can issue RTRV-CRS command, and use the response for the FROM and TO parameters.
	<WHY>	The reason for deletion. The parameter type is WHY, which is the reason for deletion.
	• END	Drop the leg to be rolled; the leg is identified by the RFROM parameter in the ENT-ROLL command.
	• STOP	The rolling operation will be deleted and reverted to the previous configuration.

## 10.32 DLT-ROUTE

(Cisco ONS 15454) The Delete Route (DLT-ROUTE) command deletes static routes.

**Usage Guidelines** None

**Category** System

**Security** Provisioning

**Input Format** DLT-ROUTE:[<TID>]::<CTAG>::<DESPID>;

**Input Example** DLT-ROUTE:CISCO::123::10.64.72.57;

**Input Parameters** <DESPID> Destination IP address. DESPID is a string.

## 10.33 DLT-ROUTE-GRE

(Cisco ONS 15454) The Delete Route Generic Routing Encapsulation (DLT-ROUTE-GRE) command deletes a GRE tunnel.

**Usage Guidelines** None

**Category** System

**Security** Provisioning

**Input Format** DLT-ROUTE-GRE:[<TID>]::<CTAG>:::IPADDR=<IPADDR>,IPMASK=<IPMASK>,  
NSAP=<NSAP>;

**Input Example** DLT-ROUTE-GRE:CISCO::123:::IPADDR=10.64.72.57,IPMASK=255.255.255.0,  
NSAP="39840F80FFFFFF0000DDDDAA000010CFB4910200";

<b>Input Parameters</b>	<IPADDR>	IP address of the tunnel endpoint. IPADDR is a string.
	<IPMASK>	Subnet mask for the tunnel endpoint. IPMASK is a string.
	<NSAP>	NSAP address for the tunnel endpoint. NSAP is a string.

## 10.34 DLT-TADRMAP

(Cisco ONS 15454) The Delete Target Identifier Address Mapping (DLT-TADRMAP) command instructs a gateway NE to delete an entry in the TADRMAP table.

**Usage Guidelines** None

**Category** System

**Security** Provisioning

**Input Format** DLT-TADRMAP:[<TID>]::<CTAG>:::[TIDNAME=<TIDNAME>],[ADDRTYPE=<ADDRTYPE>];

**Input Example** DLT-TADRMAP:DXT::CTAG:::TIDNAME=ENENODENAME,ADDRTYPE=IPADDR;

<b>Input Parameters</b>	<TIDNAME>	TID of the entity to be removed from the TADRMAP. TIDNAME is a string.
	<ADDRTYPE>	Specifies to remove either the IP address entry, the NSAP address entry, or both entries from the TADRMAP.
	• IP	IP address
	• IP-AND-NSAP	IP and NSAP addresses
	• NSAP	NSAP address

## 10.35 DLT-TRAPTABLE

(Cisco ONS 15454) The Delete Trap Table (DLT-TRAPTABLE) command deletes a Simple Network Management Protocol (SNMP) trap destination entry. Entering ALL will delete the whole table.

**Usage Guidelines** None

**Category** System

**Security** Provisioning

**Input Format** DLT-TRAPTABLE:[<TID>]:<AID>:<CTAG>;

- Input Examples**
1. DLT-TRAPTABLE::1.2.3.4:1;
  2. DLT-TRAPTABLE::"[3ffe:0501:0008:0000:0260:97ff:fe40:efab]":1;

<b>Input Parameters</b>	<AID>	Access identifier from the <a href="#">“26.18 IPADDR”</a> section on page 26-43. IP address identifies the trap destination. Only numeric IP addresses are allowed.
-------------------------	-------	---

## 10.36 DLT-TUNNEL-FIREWALL

(Cisco ONS 15454) The Delete Tunnel Firewall (DLT-TUNNEL-FIREWALL) command deletes a firewall tunnel.

**Usage Guidelines** None

**Category** System

**Security** Provisioning

**Input Format** DLT-TUNNEL-FIREWALL:[<TID>]::<CTAG>::SRCADDR=<SRCADDR>, SRCMASK=<SRCMASK>,DESTADDR=<DESTADDR>,DESTMASK=<DESTMASK>;

**Input Example** DLT-TUNNEL-FIREWALL:TID::CTAG::SRCADDR=192.168.100.52, SRCMASK=255.255.255.0,DESTADDR=192.168.101.14,DESTMASK=255.255.255.0;

<b>Input Parameters</b>	<SRCADDR>	Source IP address. SRCADDR is a string.
	<SRCMASK>	Source mask. SRCMASK is a string.
	<DESTADDR>	Destination IP address. DESTADDR is a string.
	<DESTMASK>	Destination mask. DESTMASK is a string.

## 10.37 DLT-TUNNEL-PROXY

(Cisco ONS 15454) The Delete Tunnel Proxy (DLT-TUNNEL-PROXY) command deletes a proxy tunnel.

**Usage Guidelines** None

**Category** System

**Security** Provisioning

**Input Format** DLT-TUNNEL-PROXY:[<TID>]::<CTAG>::SRCADDR=<SRCADDR>, SRCMASK=<SRCMASK>,DESTADDR=<DESTADDR>,DESTMASK=<DESTMASK>;

**Input Example** DLT-TUNNEL-PROXY:TID::CTAG:::SRCADDR=192.168.100.52,  
SRCMASK=255.255.255.0,DESTADDR=192.168.101.14,DESTMASK=255.255.255.0;

<b>Input Parameters</b>	<SRCADDR>	Source IP address. SRCADDR is a string.
	<SRCMASK>	Source mask. SRCMASK is a string.
	<DESTADDR>	Destination IP address. DESTADDR is a string.
	<DESTMASK>	Destination mask. DESTMASK is a string.

## 10.38 DLT-USER-SECU

(Cisco ONS 15454) The Delete User Security (DLT-USER-SECU) command deletes a user. It can only be performed by a Superuser. Privilege levels are described in the ENT-USER-SECU command.

**Usage Guidelines** This command cannot be used to delete a user that is currently logged on.  
For the DLT-USER-SECU command, the syntax of the <UID> is not checked. The user is deleted if the <UID> exists in the database.

**Category** Security

**Security** Superuser

**Input Format** DLT-USER-SECU:[<TID>]:<UID>:<CTAG>;

**Input Example** DLT-USER-SECU:PETALUMA:CISCO15:123;

<b>Input Parameters</b>	<UID>	User identifier. Can be up to 10 alphanumeric characters. UID is a string.
-------------------------	-------	--

## 10.39 DLT-VCG

(Cisco ONS 15454) The Delete Virtual Concatenated Group (DLT-VCG) command deletes a virtual concatenation group (VCG) object.

**Usage Guidelines** None

<b>Category</b>	VCAT	
<b>Security</b>	Provisioning	
<b>Input Format</b>	DLT-VCG:[<TID>]:<SRC>:<CTAG>:::[CMDMDE=<CMDMDE>][:];	
<b>Input Example</b>	DLT-VCG:NODE1:FAC-1-1:1234:::CMDMDE=FRCD;	
<b>Input Parameters</b>	<SRC>	Source AID from the “ <a href="#">26.17 FACILITY</a> ” section on page 26-40. ML-Series cards use the VFAC AID and FC_MR-4 cards use the FAC AID.
	<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
	• FRCD	Force the system to override a state in which the command would normally be denied.
	• NORM	Execute the command normally. Do not override any conditions that might make the command fail.

## 10.40 DLT-VLAN

(Cisco ONS 15454) The Delete Virtual LAN (DLT-VLAN) command deletes a VLAN from the VLAN database. The VLAN database is a collection of VLANs used in an NE.

- Usage Guidelines**
- If the AID is invalid, an IIAC (Invalid AID) error message is returned.
  - The ALL AID is invalid for this command.

**Category** Ethernet

**Security** Provisioning

**Input Format** DLT-VLAN:[<TID>]:<AID>:<CTAG>[:::];

**Input Example** DLT-VLAN:PETALUMA:VLAN-4096:1;

<b>Input Parameters</b>	<AID>	The AID is used to access the VLAN.
	<ul style="list-style-type: none"> <li>VLAN-ALL</li> </ul>	All AIDs for the VLAN.
	<ul style="list-style-type: none"> <li>VLAN-{0-4096}</li> </ul>	The AID used for a single VLAN. VLAN ID 0 is reserved for untagged VLANs.

## 10.41 DLT-WDMANS

(Cisco ONS 15454) The Delete Wavelength Division Multiplexing Automatic Node Setup (DLT-WDMANS) command deletes the automatic optical node setup application attributes.

- Usage Guidelines**
- If the AID is invalid, an IIAC (Invalid AID) error message is returned.
  - The ALL AID is invalid for this command.

**Category** DWDM

**Security** Maintenance

**Input Format** DLT-WDMANS:[<TID>]:<AID>:<CTAG>::<PARAM>,[<WLEN>][::];

**Input Example** DLT-WDMANS:PENNGROVE:WDMNODE:114::VOAATT,1530.33;

<b>Input Parameters</b>	<AID>	The AID is used to access the WDM node or a single port of the DWDM node.
	<ul style="list-style-type: none"> <li>WDMNODE</li> </ul>	Indicates the WDM node of an MSTP and accesses the NWTTYPE and DITHER WDMANS node parameters.
	<ul style="list-style-type: none"> <li>LINE</li> </ul>	The optical transport section port.
	<ul style="list-style-type: none"> <li>BAND</li> </ul>	The optical multiplex section port.
	<ul style="list-style-type: none"> <li>CHAN</li> </ul>	The optical channel port.
	<WLEN>	(Optional) The parameter type is OPTICAL_WLEN, which indicates the optical wavelength.
	<ul style="list-style-type: none"> <li>1310</li> </ul>	Wavelength 1310
	<ul style="list-style-type: none"> <li>1470</li> </ul>	Wavelength 1470
	<ul style="list-style-type: none"> <li>1490</li> </ul>	Wavelength 1490

• 1510	Wavelength 1510
• 1528.77	Wavelength 1528.77
• 1529.55	Wavelength 1529.55
• 1529.94	Wavelength 1529.94
• 1530	Wavelength 1530
• 1530.33	Wavelength 1530.33
• 1530.73	Wavelength 1530.73
• 1531.12	Wavelength 1531.12
• 1531.51	Wavelength 1531.51
• 1531.90	Wavelength 1531.90
• 1532.29	Wavelength 1532.29
• 1532.68	Wavelength 1532.68
• 1533.07	Wavelength 1533.07
• 1533.47	Wavelength 1533.47
• 1533.86	Wavelength 1533.86
• 1534.25	Wavelength 1534.25
• 1534.64	Wavelength 1534.64
• 1535.04	Wavelength 1535.04
• 1535.43	Wavelength 1535.43
• 1535.82	Wavelength 1535.82
• 1536.22	Wavelength 1536.22
• 1536.61	Wavelength 1536.61
• 1537	Wavelength 1537
• 1537.40	Wavelength 1537.40
• 1537.79	Wavelength 1537.79
• 1538.19	Wavelength 1538.19
• 1538.58	Wavelength 1538.58
• 1538.98	Wavelength 1538.98
• 1539.37	Wavelength 1539.37
• 1539.77	Wavelength 1539.77
• 1540.16	Wavelength 1540.16
• 1540.56	Wavelength 1540.56
• 1540.95	Wavelength 1540.95
• 1541.35	Wavelength 1541.35
• 1541.75	Wavelength 1541.75
• 1542.14	Wavelength 1542.14
• 1542.35	Wavelength 1542.35
• 1542.54	Wavelength 1542.54
• 1542.94	Wavelength 1542.94
• 1543.33	Wavelength 1543.33
• 1543.73	Wavelength 1543.73

• 1544.13	Wavelength 1544.13
• 1544.53	Wavelength 1544.53
• 1544.92	Wavelength 1544.92
• 1545.32	Wavelength 1545.32
• 1545.72	Wavelength 1545.72
• 1546.12	Wavelength 1546.12
• 1546.52	Wavelength 1546.52
• 1546.92	Wavelength 1546.92
• 1547.32	Wavelength 1547.32
• 1547.72	Wavelength 1547.72
• 1548.12	Wavelength 1548.12
• 1548.51	Wavelength 1548.51
• 1548.92	Wavelength 1548.92
• 1549.32	Wavelength 1549.32
• 1549.71	Wavelength 1549.71
• 1550	Wavelength 1500
• 1550.12	Wavelength 1550.12
• 1550.52	Wavelength 1550.52
• 1550.92	Wavelength 1550.92
• 1551.32	Wavelength 1551.32
• 1551.72	Wavelength 1551.72
• 1552.12	Wavelength 1552.12
• 1552.52	Wavelength 1552.52
• 1552.93	Wavelength 1552.93
• 1553.33	Wavelength 1553.33
• 1553.73	Wavelength 1553.73
• 1554.13	Wavelength 1554.13
• 1554.13	Wavelength 1554.13
• 1554.94	Wavelength 1554.94
• 1555.34	Wavelength 1555.34
• 1555.75	Wavelength 1555.75
• 1556.15	Wavelength 1556.15
• 1556.55	Wavelength 1556.55
• 1556.96	Wavelength 1556.96
• 1557.36	Wavelength 1557.36
• 1557.77	Wavelength 1557.77
• 1558.17	Wavelength 1558.17
• 1558.58	Wavelength 1558.58
• 1558.98	Wavelength 1558.98
• 1559.39	Wavelength 1559.39
• 1559.79	Wavelength 1559.79

• 1560.20	Wavelength 1560.20
• 1560.61	Wavelength 1560.61
• 1561.01	Wavelength 1561.01
• 1561.42	Wavelength 1561.42
• 1561.83	Wavelength 1561.83
• 1570	Wavelength 1570
• 1570.83	Wavelength 1570.83
• 1571.24	Wavelength 1571.24
• 1571.65	Wavelength 1571.65
• 1572.06	Wavelength 1572.06
• 1572.48	Wavelength 1572.48
• 1572.89	Wavelength 1572.89
• 1573.30	Wavelength 1573.30
• 1573.71	Wavelength 1573.71
• 1574.13	Wavelength 1574.13
• 1574.54	Wavelength 1574.54
• 1574.95	Wavelength 1574.95
• 1575.37	Wavelength 1575.37
• 1575.78	Wavelength 1575.78
• 1576.20	Wavelength 1576.20
• 1576.61	Wavelength 1576.61
• 1577.03	Wavelength 1577.03
• 1577.44	Wavelength 1577.44
• 1577.86	Wavelength 1577.86
• 1578.27	Wavelength 1578.27
• 1578.69	Wavelength 1578.69
• 1579.10	Wavelength 1579.10
• 1579.52	Wavelength 1579.52
• 1579.93	Wavelength 1579.93
• 1580.35	Wavelength 1580.35
• 1580.77	Wavelength 1580.77
• 1581.18	Wavelength 1581.18
• 1581.60	Wavelength 1581.60
• 1582.02	Wavelength 1582.02
• 1582.44	Wavelength 1582.44
• 1582.85	Wavelength 1582.85
• 1583.27	Wavelength 1583.27
• 1583.69	Wavelength 1583.69
• 1584.11	Wavelength 1584.11
• 1584.53	Wavelength 1584.53
• 1584.95	Wavelength 1584.95

• 1585.36	Wavelength 1585.36
• 1585.78	Wavelength 1585.78
• 1586.20	Wavelength 1586.20
• 1586.62	Wavelength 1586.62
• 1587.04	Wavelength 1587.04
• 1587.46	Wavelength 1587.46
• 1587.88	Wavelength 1587.88
• 1588.30	Wavelength 1588.30
• 1588.73	Wavelength 1588.73
• 1589.15	Wavelength 1589.15
• 1589.57	Wavelength 1589.57
• 1589.99	Wavelength 1589.99
• 1590	Wavelength 1590
• 1590.41	Wavelength 1590.41
• 1590.83	Wavelength 1590.83
• 1591.26	Wavelength 1591.26
• 1591.68	Wavelength 1591.68
• 1592.10	Wavelength 1592.10
• 1592.52	Wavelength 1592.52
• 1592.95	Wavelength 1592.95
• 1593.37	Wavelength 1593.37
• 1593.79	Wavelength 1593.79
• 1594.22	Wavelength 1594.22
• 1594.64	Wavelength 1594.64
• 1595.06	Wavelength 1595.06
• 1595.49	Wavelength 1595.49
• 1596.34	Wavelength 1596.34
• 1596.76	Wavelength 1596.76
• 1597.19	Wavelength 1597.19
• 1597.62	Wavelength 1597.62
• 1598.04	Wavelength 1598.04
• 1598.47	Wavelength 1598.47
• 1598.89	Wavelength 1598.89
• 1599.32	Wavelength 1599.32
• 1599.75	Wavelength 1599.75
• 1600.06	Wavelength 1600.06
• 1601.03	Wavelength 1601.03
• 1601.46	Wavelength 1601.46
• 1601.88	Wavelength 1601.88
• 1602.31	Wavelength 1602.31
• 1602.74	Wavelength 1602.74

• 1603.17	Wavelength 1603.17
• 1603.60	Wavelength 1603.60
• 1604.03	Wavelength 1604.03
• 1610	Wavelength 1610
<VOAATTN>	The value of calibrated attenuation for the VOA expressed in dBm. The range is 0.0 to +30.0. VOAATTN is a float.
<POWEROSC>	WDM-ANS OSC power parameter.
<NTWTYPE>	WDM-ANS network type parameter.
<CHLOSS>	WDM-ANS channel loss parameter.
<GAIN>	WDM-ANS amplifier gain parameter.
<TILT>	WDM-ANS amplifier tilt parameter.
<CHPWR>	WDM-ANS channel power parameter.
<AMPLMODE>	WDM-ANS amplifier mode parameter.
<RATIO>	WDM-ANS Raman amplifier pump ratio parameter.
<OSCLLOSS>	WDM-ANS OSC channel loss parameter.
<DITHER>	WDM-ANS WXC dithering parameter.
<TOTALPWR>	WDM-ANS Raman amplifier total power in mW.
<HIGHSLVEXP>	Span loss verification—high value.
<LOWSLVEXP>	Span loss verification—low value.

## 10.42 DLT-WDMSIDE

(Cisco ONS 15454) The Delete Wavelength Division Multiplexing Side (DLT-WDMSIDE) command deletes a WDM side.

### Usage Guidelines

- If the AID is invalid, an IIAC (Invalid AID) error message is returned.
- The ALL AID is invalid for this command.

### Category

DWDM

### Security

Maintenance

### Input Format

DLT-WDMSIDE:[<TID>]:<AID>:<CTAG>[:[:]];

### Input Example


DLT-WDMSIDE:PENNGROVE:WDMSIDE-A:114;

**Input Parameters**

&lt;AID&gt;

The AID used to access the WDM side of a Multiservice Transport Platform (MSTP) node.

- WDMSIDE-{UNKNOWN,A,B,C,D,E,F,G,H} MSTP side identifier.

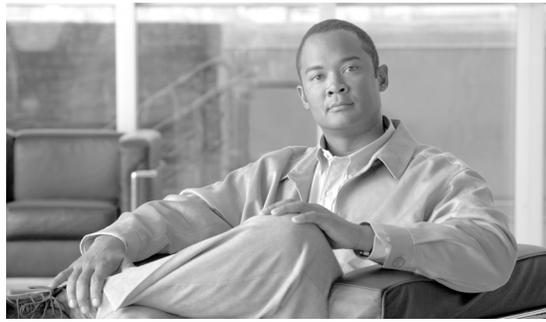

# CHAPTER 11

## ED Commands

---

**Note**

The terms "Unidirectional Path Switched Ring" and "UPSR" may appear in Cisco literature. These terms do not refer to using Cisco ONS 15xxx products in a unidirectional path switched ring configuration. Rather, these terms, as well as "Path Protected Mesh Network" and "PPMN," refer generally to Cisco's path protection feature, which may be used in any topological network configuration. Cisco does not recommend using its path protection feature in any particular topological network configuration.

---

This chapter provides edit (ED) commands for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.

**Note**

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

---

### 11.1 ED-<GIGE\_TYPE>

(Cisco ONS 15454) The Edit 10GIGE or GIGE (ED-<GIGE\_TYPE>) command edits Ethernet facility attributes. See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

---

**Usage Guidelines**

The default values for all optional parameters are network element (NE) default values. These values might not be the current value for a parameter. Use a retrieve command to obtain the current value.

The user can change the service state of a facility to OOS-MA OR DSBLD, only if all the following conditions are met

- The facility is not sourcing a synchronization clock
- The facility's DCC is disabled.
- The facility is not part of a protection group
- The facility is not supporting cross-connects

**Note**

The conditions stipulated can be overridden by using the CMDMDE=FRCD option. The FRCD option will immediately remove the facility from service with no consideration for orderly interruption. Do not use in scripts or automated batch operations.

---



**Note** To completely disable the CMDMDE=FRCD option, provision the <to be defined parameter> in the NE defaults to FALSE. This will prevent the FRCD option from being honored by the NE. The NE default parameter can be provisioned using the CTC only.



**Note** The following parameters apply only to ED-GIGE; ADMINSTATE, LINKSTATE, MTU, FLOWCTRL, AUTONEG, HIWMRK, LOWMRK, DUPLEX, SPEED, and SOAK.



**Note** The MACADDR parameter is applicable for ED-10GIGE only.

**Category**

Ports

**Security**

Provisioning

**Input Format**

```
ED-<GIGE_TYPE>:[<TID>]:<AID>:<CTAG>[:::ADMINSTATE=<ADMINSTATE>],[LINKSTATE=
<LINKSTATE>],[MTU=<MTU>],[MFS=<MFS>],[FLOW=<FLOW>],[FLOWCTRL=
<FLOWCTRL>],[AUTONEG=<AUTONEG>],[HIWMRK=<INT>],[LOWMRK=<INT>],
[OPTICS=<OPTICS>],[DUPLEX=<DUPLEX>],[SPEED=<SPEED>],[NAME=
<NAME>],[CMDMDE=<CMDMDE>],[MACADDR=<MACADDR>],[FREQ=<FREQ>],
[LOSSB=<LOSSB>],[SUPPRESS=<SUPPRESS>],[SOAK=<SOAK>],[SQUELCH=
<SQUELCH>],[CIR=<CIR>],[CBS=<CBS>],[EBS=<EBS>],[LIENABLE=
<LIENABLE>],[LITIMER=<LITIMER>],[ENCAP=<ENCAP>],[OSC=<OSC>],[PAUSEFRAME=
<PAUSEFRAME>],[CLNTDST=<CLNTDST>],EXPDUPLICATION=<EXPDUPLICATION>,
[EXPSPEED=<EXPSPEED>],[SELECTIVEAUTO=<SELECTIVEAUTO>][:<PST>[:<SST>]];
```

**Input Example**

```
ED-GIGE:PETALUMA:FAC-1-1:123:::ADMINSTATE=DOWN,LINKSTATE=DOWN,MTU=1548,
FLOWCTRL=NONE,AUTONEG=Y,HIWMRK=485,LOWMRK=25,OPTICS=1000_BASE_LX,
DUPLEX=AUTO,SPEED=AUTO,NAME="GIGE PORT",CMDMDE=FRCD,
MACADDR=00-0E-AA-BB-CC-FF,FREQ=1550,LOSSB=XX,SOAK=32,LIENABLE=Y,
LITIMER=200:IS,AINS;
```

**Input Parameters**

<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
<ADMINSTATE>	(Optional) The parameter type is UP_DOWN, which indicates an up or down value.
<ul style="list-style-type: none"> <li>DOWN</li> <li>UP</li> </ul>	<ul style="list-style-type: none"> <li>Down</li> <li>Up</li> </ul>
<LINKSTATE>	(Optional) The parameter type is UP_DOWN, which indicates an up or down value.
<ul style="list-style-type: none"> <li>DOWN</li> </ul>	<ul style="list-style-type: none"> <li>Down</li> </ul>

• UP	Up
<MTU>	(Optional) Maximum transport unit. The parameter type is MTU_TYPE, which indicates the maximum transport unit used by an Ethernet card. Defaults to 9600.
• 10004	10004. Indicates jumbo size.
• 1500	1500
• 1548	1548
• 9600	9600. Indicates jumbo size.
• 64	64
• 9700	9700. Indicates jumbo size.
<MFS>	(Optional) Maximum frame size. The parameter type is MFS_TYPE, which is the maximum frame size used by an Ethernet card.
• 1548	Normal frame size
• JUMBO	Jumbo frame size
<FLOWCTRL>	(Optional) Flow control. The parameter type is FLOW, which indicates the type of flow control that has been negotiated for an Ethernet port. Defaults to NONE.
• ASYMMETRIC	Asymmetric flow control
• ASYMMETRIC_LOCAL	Asymmetric local flow control
• NONE	No flow control
• PASSTHRU	Passthrough flow control
• SYMMETRIC	Symmetric flow control
<AUTONEG>	(Optional) Autonegotiation. The parameter is ON_OFF, which disables or enables an attribute. Defaults to Y.
• N	Disable an attribute.
• Y	Enable an attribute.
<HIWMRK>	(Optional) High water mark. HIWMRK is an integer. Defaults to 485.
<LOWMRK>	(Optional) Low water mark. LOWMRK is an integer. Defaults to 25.
<OPTICS>	(Optional) The parameter is OPTICS, which indicates the type of Gigabyte Ethernet optics being used.
• 1000_BASE_CX	1000BaseCX
• 1000_BASE_LX	1000BaseLX
• 1000_BASE_SX	1000BaseSX
• 1000_BASE_T	1000BaseT
• 1000_BASE_ZX	1000BaseZX
• 100_BASE_BX_D	100BaseBX_D
• 100_BASE_BX_U	100BaseBX_U
• 100_BASE_FX	100BaseFX
• 100_BASE_LX	100BaseLX
• CWDM_1470	Coarse wavelength division multiplexing (CWDM) 1470
• CWDM_1490	CWDM 1490

• CWDM_1510	CWDM 1510
• CWDM_1530	CWDM 1530
• CWDM_1550	CWDM 1550
• CWDM_1570	CWDM 1570
• CWDM_1590	CWDM 1590
• CWDM_1610	CWDM 1610
• ITU_100G_1530_33	ITU-100G 1530.33
• ITU_100G_1531_12	ITU-100G 1531.12
• ITU_100G_1531_90	ITU-100G 1531.90
• ITU_100G_1532_68	ITU-100G 1532.68
• ITU_100G_1534_25	ITU-100G 1534.25
• ITU_100G_1535_04	ITU-100G 1535.04
• ITU_100G_1535_82	ITU-100G 1535.82
• ITU_100G_1536_61	ITU-100G 1536.61
• ITU_100G_1538_19	ITU-100G 1538.19
• ITU_100G_1538_98	ITU-100G 1538.98
• ITU_100G_1539_77	ITU-100G 1539.77
• ITU_100G_1540_56	ITU-100G 1540.56
• ITU_100G_1542_14	ITU-100G 1542.14
• ITU_100G_1542_94	ITU-100G 1542.94
• ITU_100G_1543_73	ITU-100G 1543.73
• ITU_100G_1544_53	ITU-100G 1544.53
• ITU_100G_1546_12	ITU-100G 1546.12
• ITU_100G_1546_92	ITU-100G 1546.92
• ITU_100G_1547_72	ITU-100G 1547.72
• ITU_100G_1548_51	ITU-100G 1548.51
• ITU_100G_1550_12	ITU-100G 1550.12
• ITU_100G_1550_92	ITU-100G 1550.92
• ITU_100G_1551_72	ITU-100G 1551.72
• ITU_100G_1552_52	ITU-100G 1552.52
• ITU_100G_1554_13	ITU-100G 1554.13
• ITU_100G_1554_94	ITU-100G 1554.94
• ITU_100G_1555_75	ITU-100G 1555.75
• ITU_100G_1556_55	ITU-100G 156.55
• ITU_100G_1558_17	ITU-100G 1558.17
• ITU_100G_1558_98	ITU-100G 1558.98
• ITU_100G_1559_79	ITU-100G 1559.79
• ITU_100G_1560_61	ITU-100G 1560.61
• UNKNOWN	Unknown
• UNPLUGGED	Unplugged
<EXDUPLEX>	(Optional) The parameter is ETHER_DUPLEX, which indicates duplex mode. Defaults to AUTO.

• AUTO	Auto mode
• FULL	Full mode
• HALF	Half mode
<SELECTIVEAUTO>	(Optional) Selective auto-negotiation. The parameter is Y or N (enable or disable auto-negotiation) This indicates selective auto-negotiation of EXPSPEED and EXPDUPLEX only.
• Y	Enable selective auto-negotiation.
• N	Disable selective auto-negotiation.
<EXSPEED>	(Optional) The parameter type is ETHER_SPEED, which indicates Ethernet speed. Defaults to AUTO.
• 100_MBPS	100 Megabits per second
• 10_GBPS	10 Gigabits per second
• 10_MBPS	10 Megabits per second
• 1_GBPS	1 Gigabit per second
• 40_GBPS	40 Gigabit per second
• AUTO_FDX	Enable auto negotiation with full duplex
• AUTO	Automatic
<NAME>	(Optional) Port name. NAME is a string. Defaults to NULL. Maximum length is 32 characters.
<CMDMDE>	(Optional) Command mode. Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in Unlocked-Enabled or Locked-Disabled, AutomaticInService service states.
• FRCD	Force the system to override a state where the command would normally be denied.
• NORM	Execute the command normally. Do not override any conditions that might make the command fail.
<MACADDR>	(Optional) MACADDR is a string. Defaults to NULL. Maximum length is 18 characters.
<FREQ>	(Optional) The parameter type is OPTICAL_WLEN, which indicates the optical wavelength.
• 1310	Wavelength 1310
• 1470	Wavelength 1470
• 1490	Wavelength 1490
• 1510	Wavelength 1510
• 1528.77	Wavelength 1528.77
• 1529.55	Wavelength 1529.55
• 1529.94	Wavelength 1529.94
• 1530	Wavelength 1530
• 1530.33	Wavelength 1530.33
• 1530.73	Wavelength 1530.73

• 1531.12	Wavelength 1531.12
• 1531.51	Wavelength 1531.51
• 1531.90	Wavelength 1531.90
• 1532.29	Wavelength 1532.29
• 1532.68	Wavelength 1532.68
• 1533.07	Wavelength 1533.07
• 1533.47	Wavelength 1533.47
• 1533.86	Wavelength 1533.86
• 1534.25	Wavelength 1534.25
• 1534.64	Wavelength 1534.64
• 1535.04	Wavelength 1535.04
• 1535.43	Wavelength 1535.43
• 1535.82	Wavelength 1535.82
• 1536.22	Wavelength 1536.22
• 1536.61	Wavelength 1536.61
• 1537	Wavelength 1537
• 1537.40	Wavelength 1537.40
• 1537.79	Wavelength 1537.79
• 1538.19	Wavelength 1538.19
• 1538.58	Wavelength 1538.58
• 1538.98	Wavelength 1538.98
• 1539.37	Wavelength 1539.37
• 1539.77	Wavelength 1539.77
• 1540.16	Wavelength 1540.16
• 1540.56	Wavelength 1540.56
• 1540.95	Wavelength 1540.95
• 1541.35	Wavelength 1541.35
• 1541.75	Wavelength 1541.75
• 1542.14	Wavelength 1542.14
• 1542.35	Wavelength 1542.35
• 1542.54	Wavelength 1542.54
• 1542.94	Wavelength 1542.94
• 1543.33	Wavelength 1543.33
• 1543.73	Wavelength 1543.73
• 1544.13	Wavelength 1544.13
• 1544.53	Wavelength 1544.53
• 1544.92	Wavelength 1544.92
• 1545.32	Wavelength 1545.32
• 1545.72	Wavelength 1545.72
• 1546.12	Wavelength 1546.12
• 1546.52	Wavelength 1546.52

• 1546.92	Wavelength 1546.92
• 1547.32	Wavelength 1547.32
• 1547.72	Wavelength 1547.72
• 1548.12	Wavelength 1548.12
• 1548.51	Wavelength 1548.51
• 1548.92	Wavelength 1548.92
• 1549.32	Wavelength 1549.32
• 1549.71	Wavelength 1549.71
• 1550	Wavelength 1500
• 1550.12	Wavelength 1550.12
• 1550.52	Wavelength 1550.52
• 1550.92	Wavelength 1550.92
• 1551.32	Wavelength 1551.32
• 1551.72	Wavelength 1551.72
• 1552.12	Wavelength 1552.12
• 1552.52	Wavelength 1552.52
• 1552.93	Wavelength 1552.93
• 1553.33	Wavelength 1553.33
• 1553.73	Wavelength 1553.73
• 1554.13	Wavelength 1554.13
• 1554.13	Wavelength 1554.13
• 1554.94	Wavelength 1554.94
• 1555.34	Wavelength 1555.34
• 1555.75	Wavelength 1555.75
• 1556.15	Wavelength 1556.15
• 1556.55	Wavelength 1556.55
• 1556.96	Wavelength 1556.96
• 1557.36	Wavelength 1557.36
• 1557.77	Wavelength 1557.77
• 1558.17	Wavelength 1558.17
• 1558.58	Wavelength 1558.58
• 1558.98	Wavelength 1558.98
• 1559.39	Wavelength 1559.39
• 1559.79	Wavelength 1559.79
• 1560.20	Wavelength 1560.20
• 1560.61	Wavelength 1560.61
• 1561.01	Wavelength 1561.01
• 1561.42	Wavelength 1561.42
• 1561.83	Wavelength 1561.83
• 1570	Wavelength 1570
• 1570.83	Wavelength 1570.83

• 1571.24	Wavelength 1571.24
• 1571.65	Wavelength 1571.65
• 1572.06	Wavelength 1572.06
• 1572.48	Wavelength 1572.48
• 1572.89	Wavelength 1572.89
• 1573.30	Wavelength 1573.30
• 1573.71	Wavelength 1573.71
• 1574.13	Wavelength 1574.13
• 1574.54	Wavelength 1574.54
• 1574.95	Wavelength 1574.95
• 1575.37	Wavelength 1575.37
• 1575.78	Wavelength 1575.78
• 1576.20	Wavelength 1576.20
• 1576.61	Wavelength 1576.61
• 1577.03	Wavelength 1577.03
• 1577.44	Wavelength 1577.44
• 1577.86	Wavelength 1577.86
• 1578.27	Wavelength 1578.27
• 1578.69	Wavelength 1578.69
• 1579.10	Wavelength 1579.10
• 1579.52	Wavelength 1579.52
• 1579.93	Wavelength 1579.93
• 1580.35	Wavelength 1580.35
• 1580.77	Wavelength 1580.77
• 1581.18	Wavelength 1581.18
• 1581.60	Wavelength 1581.60
• 1582.02	Wavelength 1582.02
• 1582.44	Wavelength 1582.44
• 1582.85	Wavelength 1582.85
• 1583.27	Wavelength 1583.27
• 1583.69	Wavelength 1583.69
• 1584.11	Wavelength 1584.11
• 1584.53	Wavelength 1584.53
• 1584.95	Wavelength 1584.95
• 1585.36	Wavelength 1585.36
• 1585.78	Wavelength 1585.78
• 1586.20	Wavelength 1586.20
• 1586.62	Wavelength 1586.62
• 1587.04	Wavelength 1587.04
• 1587.46	Wavelength 1587.46
• 1587.88	Wavelength 1587.88

• 1588.30	Wavelength 1588.30
• 1588.73	Wavelength 1588.73
• 1589.15	Wavelength 1589.15
• 1589.57	Wavelength 1589.57
• 1589.99	Wavelength 1589.99
• 1590	Wavelength 1590
• 1590.41	Wavelength 1590.41
• 1590.83	Wavelength 1590.83
• 1591.26	Wavelength 1591.26
• 1591.68	Wavelength 1591.68
• 1592.10	Wavelength 1592.10
• 1592.52	Wavelength 1592.52
• 1592.95	Wavelength 1592.95
• 1593.37	Wavelength 1593.37
• 1593.79	Wavelength 1593.79
• 1594.22	Wavelength 1594.22
• 1594.64	Wavelength 1594.64
• 1595.06	Wavelength 1595.06
• 1595.49	Wavelength 1595.49
• 1596.34	Wavelength 1596.34
• 1596.76	Wavelength 1596.76
• 1597.19	Wavelength 1597.19
• 1597.62	Wavelength 1597.62
• 1598.04	Wavelength 1598.04
• 1598.47	Wavelength 1598.47
• 1598.89	Wavelength 1598.89
• 1599.32	Wavelength 1599.32
• 1599.75	Wavelength 1599.75
• 1600.06	Wavelength 1600.06
• 1601.03	Wavelength 1601.03
• 1601.46	Wavelength 1601.46
• 1601.88	Wavelength 1601.88
• 1602.31	Wavelength 1602.31
• 1602.74	Wavelength 1602.74
• 1603.17	Wavelength 1603.17
• 1603.60	Wavelength 1603.60
• 1604.03	Wavelength 1604.03
• 1610	Wavelength 1610
• USE-TWL1	Use Tunable Wavelength 1
<LOSSB>	(Optional) The parameter type is REACH, which indicates the reach values.
• AUTOPROV	Autoprovisioning

• CWDM	Coarse wavelength division multiplexing (CWDM)
• CWDM-40KM	CWDM 40 kilometers.
• CX	Reach CX
• CX1	Reach CX1
• DX	Reach DX
• HX	Reach HX
• I1	Reach I1
• IR-1	Reach IR-1
• IR-2	Reach IR-2
• L1	Reach L1
• L2	Reach L2
• L3	Reach L3
• LR-1	Reach LR-1
• LR-2	Reach LR-2
• LR-3	Reach LR-3
• LX	Reach LX
• S1	Reach S1
• S2	Reach S2
• SR	Reach SR
• SR-1	Reach SR-1
• SX	Reach SX
• T	Reach T
• TEN-GE-ER	10 GE extended range
• TEN-GE-LR	10 GE long range
• TEN-GE-SR	10 GE short range
• ULH	Reach ULH
• VSR	Reach VSR
• VX	Reach VX
• ZX	Reach ZX
<SOAK>	(Optional) Locked-AutomaticInService to Unlocked transition soak time as measured in 15-minute intervals. A value of 4 equals a soak time of 1 hour. The allowable range is 0 to 192 intervals (maximum of 48 hours). SOAK is an integer. Defaults to 32.
<LIENABLE>	(Optional) Enable or Disable link integrity timer. Takes either Y or N. Value Y enables the LITIMER and value N disables LITIMER.  By default LITIMER is enabled.  <b>Note</b> The LIENABLE parameter is supported on only CE-1000-4 and CE-1000T-8 cards on the 15454.

<LITIMER>	(Optional) Link integrity timer duration in the range between 200 ms and 10000 ms in multiples on 100 ms. <b>Note</b> The LITIMER parameter is supported on only CE-1000-4 and CE-1000T-8 cards on the 15454.
<ENCAP>	(Optional) Frame encapsulation type. The parameter type is ENCAP, which is the frame encapsulation type.
• GFP_F	GFP frame mode.
• GFP_T	GFP transparent mode.
• HDLC	HDLC frame mode.
• HDLC_LEX	HDLC LAN extension frame mode.
• HDLC_X86	HDLC X.86 frame mode.
<OSC>	To enable or disable the OSC on the port. <b>Note</b> The OSC parameter is supported only on 15454-M2 and 15454-M6.
<PAUSEFRAME>	To Enable or Disable the Pause Frame.
• Y	Enable
• N	Disable
<CLNTDST>	Client distance in kilometers.
• 10KM	10 kilometers.
• 30KM	30 kilometers.
<PST>	(Optional) Primary state. The parameter type is PST, which indicates the current overall service condition of an entity.
• IS	In service
• OOS	Out of service
<SST>	(Optional) Secondary state. Defaults to AINS. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic in service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of equipment and attributes
• MT	Maintenance mode
• OOG	Out of group
• SWDL	Software downloading
• UAS	Unassigned
• UEQ	Unequipped

## 11.2 ED-<MOD1FCPAYLOAD>

(Cisco ONS 15454) The Edit 1GISC3, 2GISC3, D1VIDEO, DV6000, ESCON, ETRCLO, HDTV or PASSTHRU (ED-<MODFCPAYLOAD>) command edits the attributes related to the Fibre Channel (FC) facility. The state IS,AINS is not supported on the FC port. See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

**Usage Guidelines**

The user can change the service state of a facility to locked-enabled or disabled, only if all the following conditions are met

- The facility is not sourcing a synchronization clock
- The facility's DCC is disabled.
- The facility is not part of a protection group
- The facility is not supporting cross-connects



**Note** The conditions stipulated can be overridden by using the CMDMDE=FRCD option. The FRCD option will immediately remove the facility from service with no consideration for orderly interruption. Do not use in scripts or automated batch operations.



**Note** To completely disable the CMDMDE=FRCD option, provision the <to be defined parameter> in the NE defaults to FALSE. This will prevent the FRCD option from being honored by the NE. The NE default parameter can be provisioned using the CTC only.

**Note**

- The port parameters VIZ, LINKRCVRY, DISTEXTN, AUTODETECTION, LINKCREDITS, and MFS can be edited only if the port state is OOS,MT or OOS,DSBLD.
- The port parameters AUTODETECTION, LINKCREDITS, and MFS can be edited only if distance extension is enabled (set to B2B).
- When 1GFICON and 2GFICON payloads are provisioned, distance extension=B2B is the default and only valid setting. Setting distance extension (using the ED-nGFICON command) to any other setting will be denied with an error message, for example, Provisioning Rules Failed.

**Category**

Ports

**Security**

Provisioning

**Input Format**

```
ED-<MOD1FCPAYLOAD>:[<TID>]:<AID>:<CTAG>:::[LINKRCVRY=<LINKRCVRY>],[DISTEXTN=
<DISTANCE_EXTENSION>],[AUTODETECTION=<AUTO_DETECTION>],[LINKCREDITS=<CREDITS>],[FASTSWITCH=<FASTSWITCH>],[MFS=<MAXFRMSIZE>]
,[NAME=<NAME>],[CMDMDE=<CMDMDE>],[SOAK=<SOAK>],[FREQ=<FREQ>],[LOSSB=<LOSSB>],[SQUELCH=<SQUELCH>][:<PST>[:<SST>]];
```

**Input Example**

```
ED-1GFC:PETALUMA:FAC-6-1:1:::LINKRCVRY=Y,DISTEXTN=NONE,AUTODETECTION=Y,
LINKCREDITS=10,FASTSWITCH= ,MFS=2148,NAME="FC PORT",CMDMDE=NORM,SOAK=32,
FREQ=1550,LOSSB=LR-1:OOS,MT;
```

## Input Parameters

<AID>	Access identifier from the “26.17 FACILITY” section on page 26-40.
<LINKRCVRY>	Link recovery. The parameter type is ON_OFF, which disables or enables an attribute.
• N	Disable an attribute.
• Y	Enable an attribute.
<DISTEXTN>	Distance extension. It can be set to Buffer-to-Buffer (B2B) Credit Management state or None.
	<b>Note</b> B2B and link recovery are mutually exclusive. You cannot turn on both B2B and link recovery at the same time.
	The parameter type is DISTANCE_EXTENSION (distance extension).
• B2B	Buffer to buffer flow control
• NONE	No distance extension
<AUTODETECTION>	Autodetection. Turns autodetection on or off. The parameter type is ON_OFF, which disables or enables an attribute.
• N	Disable an attribute
• Y	Enable an attribute
<LINKCREDITS>	Number of link credits. If autodetection is set to off, the value of the link credits will be used to configure the hardware. LINKCREDITS is an integer.
<FASTSWITCH>	When Fast Switchover is ON switchover must be less than 150 ms. In case of client Failure Fast Switchover is not supported. This switch time is achieved for fc1g/fc2g/fc4g traffic for trunk failures and manual/forced/lockout switches only. The parameter type is ON_OFF, which disables or enables an attribute.
• N	Disable an attribute.
• Y	Enable an attribute.
<MFS>	Maximum frame size. MFS is an integer.
<NAME>	String. User-assigned port name.
<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
• FRCD	Force the system to override a state where the command would normally be denied.
• NORM	Execute the command normally. Do not override any conditions that might make the command fail.
<SOAK>	OOS-AINS to IS transition soak time as measured in 15-minute intervals. A value of 4 equals a soak time of 1 hour. The allowable range is 0 to 192 intervals (maximum of 48 hours). SOAK is an integer.
<FREQ>	The parameter type is OPTICAL_WLEN, which is the optical wavelength.

• 1310	Wavelength 1310
• 1470	Wavelength 1470
• 1490	Wavelength 1490
• 1510	Wavelength 1510
• 1528.77	Wavelength 1528.77
• 1529.55	Wavelength 1529.55
• 1529.94	Wavelength 1529.94
• 1530	Wavelength 1530
• 1530.33	Wavelength 1530.33
• 1530.73	Wavelength 1530.73
• 1531.12	Wavelength 1531.12
• 1531.51	Wavelength 1531.51
• 1531.90	Wavelength 1531.90
• 1532.29	Wavelength 1532.29
• 1532.68	Wavelength 1532.68
• 1533.07	Wavelength 1533.07
• 1533.47	Wavelength 1533.47
• 1533.86	Wavelength 1533.86
• 1534.25	Wavelength 1534.25
• 1534.64	Wavelength 1534.64
• 1535.04	Wavelength 1535.04
• 1535.43	Wavelength 1535.43
• 1535.82	Wavelength 1535.82
• 1536.22	Wavelength 1536.22
• 1536.61	Wavelength 1536.61
• 1537	Wavelength 1537
• 1537.40	Wavelength 1537.40
• 1537.79	Wavelength 1537.79
• 1538.19	Wavelength 1538.19
• 1538.58	Wavelength 1538.58
• 1538.98	Wavelength 1538.98
• 1539.37	Wavelength 1539.37
• 1539.77	Wavelength 1539.77
• 1540.16	Wavelength 1540.16
• 1540.56	Wavelength 1540.56
• 1540.95	Wavelength 1540.95
• 1541.35	Wavelength 1541.35
• 1541.75	Wavelength 1541.75
• 1542.14	Wavelength 1542.14
• 1542.35	Wavelength 1542.35
• 1542.54	Wavelength 1542.54

• 1542.94	Wavelength 1542.94
• 1543.33	Wavelength 1543.33
• 1543.73	Wavelength 1543.73
• 1544.13	Wavelength 1544.13
• 1544.53	Wavelength 1544.53
• 1544.92	Wavelength 1544.92
• 1545.32	Wavelength 1545.32
• 1545.72	Wavelength 1545.72
• 1546.12	Wavelength 1546.12
• 1546.52	Wavelength 1546.52
• 1546.92	Wavelength 1546.92
• 1547.32	Wavelength 1547.32
• 1547.72	Wavelength 1547.72
• 1548.12	Wavelength 1548.12
• 1548.51	Wavelength 1548.51
• 1548.92	Wavelength 1548.92
• 1549.32	Wavelength 1549.32
• 1549.71	Wavelength 1549.71
• 1550	Wavelength 1500
• 1550.12	Wavelength 1550.12
• 1550.52	Wavelength 1550.52
• 1550.92	Wavelength 1550.92
• 1551.32	Wavelength 1551.32
• 1551.72	Wavelength 1551.72
• 1552.12	Wavelength 1552.12
• 1552.52	Wavelength 1552.52
• 1552.93	Wavelength 1552.93
• 1553.33	Wavelength 1553.33
• 1553.73	Wavelength 1553.73
• 1554.13	Wavelength 1554.13
• 1554.13	Wavelength 1554.13
• 1554.94	Wavelength 1554.94
• 1555.34	Wavelength 1555.34
• 1555.75	Wavelength 1555.75
• 1556.15	Wavelength 1556.15
• 1556.55	Wavelength 1556.55
• 1556.96	Wavelength 1556.96
• 1557.36	Wavelength 1557.36
• 1557.77	Wavelength 1557.77
• 1558.17	Wavelength 1558.17
• 1558.58	Wavelength 1558.58

• 1558.98	Wavelength 1558.98
• 1559.39	Wavelength 1559.39
• 1559.79	Wavelength 1559.79
• 1560.20	Wavelength 1560.20
• 1560.61	Wavelength 1560.61
• 1561.01	Wavelength 1561.01
• 1561.42	Wavelength 1561.42
• 1561.83	Wavelength 1561.83
• 1570	Wavelength 1570
• 1570.83	Wavelength 1570.83
• 1571.24	Wavelength 1571.24
• 1571.65	Wavelength 1571.65
• 1572.06	Wavelength 1572.06
• 1572.48	Wavelength 1572.48
• 1572.89	Wavelength 1572.89
• 1573.30	Wavelength 1573.30
• 1573.71	Wavelength 1573.71
• 1574.13	Wavelength 1574.13
• 1574.54	Wavelength 1574.54
• 1574.95	Wavelength 1574.95
• 1575.37	Wavelength 1575.37
• 1575.78	Wavelength 1575.78
• 1576.20	Wavelength 1576.20
• 1576.61	Wavelength 1576.61
• 1577.03	Wavelength 1577.03
• 1577.44	Wavelength 1577.44
• 1577.86	Wavelength 1577.86
• 1578.27	Wavelength 1578.27
• 1578.69	Wavelength 1578.69
• 1579.10	Wavelength 1579.10
• 1579.52	Wavelength 1579.52
• 1579.93	Wavelength 1579.93
• 1580.35	Wavelength 1580.35
• 1580.77	Wavelength 1580.77
• 1581.18	Wavelength 1581.18
• 1581.60	Wavelength 1581.60
• 1582.02	Wavelength 1582.02
• 1582.44	Wavelength 1582.44
• 1582.85	Wavelength 1582.85
• 1583.27	Wavelength 1583.27
• 1583.69	Wavelength 1583.69

• 1584.11	Wavelength 1584.11
• 1584.53	Wavelength 1584.53
• 1584.95	Wavelength 1584.95
• 1585.36	Wavelength 1585.36
• 1585.78	Wavelength 1585.78
• 1586.20	Wavelength 1586.20
• 1586.62	Wavelength 1586.62
• 1587.04	Wavelength 1587.04
• 1587.46	Wavelength 1587.46
• 1587.88	Wavelength 1587.88
• 1588.30	Wavelength 1588.30
• 1588.73	Wavelength 1588.73
• 1589.15	Wavelength 1589.15
• 1589.57	Wavelength 1589.57
• 1589.99	Wavelength 1589.99
• 1590	Wavelength 1590
• 1590.41	Wavelength 1590.41
• 1590.83	Wavelength 1590.83
• 1591.26	Wavelength 1591.26
• 1591.68	Wavelength 1591.68
• 1592.10	Wavelength 1592.10
• 1592.52	Wavelength 1592.52
• 1592.95	Wavelength 1592.95
• 1593.37	Wavelength 1593.37
• 1593.79	Wavelength 1593.79
• 1594.22	Wavelength 1594.22
• 1594.64	Wavelength 1594.64
• 1595.06	Wavelength 1595.06
• 1595.49	Wavelength 1595.49
• 1596.34	Wavelength 1596.34
• 1596.76	Wavelength 1596.76
• 1597.19	Wavelength 1597.19
• 1597.62	Wavelength 1597.62
• 1598.04	Wavelength 1598.04
• 1598.47	Wavelength 1598.47
• 1598.89	Wavelength 1598.89
• 1599.32	Wavelength 1599.32
• 1599.75	Wavelength 1599.75
• 1600.06	Wavelength 1600.06
• 1601.03	Wavelength 1601.03
• 1601.46	Wavelength 1601.46

• 1601.88	Wavelength 1601.88
• 1602.31	Wavelength 1602.31
• 1602.74	Wavelength 1602.74
• 1603.17	Wavelength 1603.17
• 1603.60	Wavelength 1603.60
• 1604.03	Wavelength 1604.03
• 1610	Wavelength 1610
• USE-TWL1	Use Tunable Wavelength 1
<LOSSB>	The parameter type is REACH, which is the reach value.
• AUTOPROV	Autoprovisioning
• CX	Reach CX
• CX1	Reach CX1
• DX	Reach DX
• HX	Reach HX
• I1	Reach I1
• IR-1	Reach IR-1
• IR-2	Reach IR-2
• L1	Reach L1
• L2	Reach L2
• L3	Reach L3
• LR-1	Reach LR-1
• LR-2	Reach LR-2
• LR-3	Reach LR-3
• LX	Reach LX
• S1	Reach S1
• S2	Reach S2
• SR	Reach SR
• SR-1	Reach SR-1
• SX	Reach SX
• T	Reach T
• TEN-GE-ER	10 GE extended range
• TEN-GE-LR	10 GE long range
• TEN-GE-SR	10 GE short range
• VX	Reach VX
• ZX	Reach ZX
<PST>	Primary state. the parameter type is PST, which indicates the current overall service condition of an entity.
• IS	In service
• OOS	Out of service
<SST>	Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic in service

• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of equipment and attributes
• MT	Maintenance mode
• OOG	Out of group
• SWDL	Software downloading
• UAS	Unassigned
• UEQ	Unequipped

## 11.3 ED-<MOD1FICONPAYLOAD>

(Cisco ONS 15454) The Edit 1GFICON, 2GFICON, 4GFICON, or ESCON (ED-<MOD1FICONPAYLOAD>) command edits the attributes related with the fiber connectivity (FICON) payload facility. The state IS,AINS is not supported on the FICON port.

**Usage Guidelines** See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

**Category** Ports

**Security** Provisioning

**Input Format** ED-<MOD1FICONPAYLOAD>:[<TID>]:<AID>:<CTAG>:::[LINKRCVRY=<LINKRCVRY>],[DISTEXTN=<DISTANCE\_EXTENSION>],[AUTODETECTION=<AUTO\_DETECTION>],[LINKCREDITS=<CREDITS>],[FASTSWITCH=<FASTSWITCH>],[MFS=<MAXFRMSIZE>],[NAME=<NAME>],[CMDMDE=<CMDMDE>],[SOAK=<SOAK>],[FREQ=<FREQ>],[LOSSB=<LOSSB>],[SQUELCH=<SQUELCH>][:<PST>[,<SST>]];

**Input Example** ED-1GFICON:PETALUMA:FAC-6-1:1:::LINKRCVRY=Y,DISTEXTN=NONE,AUTODETECTION=Y, LINKCREDITS=10, FASTSWITCH=,MFS=2148,NAME="FCPORT",CMDMDE=CMDMDE,SOAK=32,FREQ=1550,LOSSB=LR-1:OOS,MT;

<b>Input Parameters</b>	<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on <a href="#">page 26-40</a> .
	<LINKRCVRY>	Link recovery. The parameter type is ON_OFF, which disables or enables an attribute.
	• N	Disable an attribute
	• Y	Enable an attribute

<DISTEXTN>	Distance extension. It can be set to B2B Credit Management state or None.  <b>Note</b> B2B and link recovery are mutually exclusive. You cannot turn on both B2B and link recovery at the same time.  The parameter type is DISTANCE_EXTENSION (distance extension).
• B2B	Buffer-to-buffer flow control
• NONE	No distance extension
<AUTODETECTION>	Autodetection. Turns autodetection on or off. The parameter type is ON_OFF, which disables or enables an attribute.
• N	Disable an attribute
• Y	Enable an attribute
<LINKCREDITS>	Number of link credits. If autodetection is set to off the value of the link credits will be used to configure the hardware. LINKCREDITS is an integer.
<FASTSWITCH>	When Fast Switchover is ON switchover must be less than 150 ms. In case of client Failure Fast Switchover is not supported. This switch time is achieved for fc1g/fc2g/fc4g traffic for trunk failures and manual/forced/lockout switches only. The parameter type is ON_OFF, which disables or enables an attribute.
• N	Disable an attribute.
• Y	Enable an attribute.
<MFS>	Maximum frame size. MFS is an integer.
<NAME>	String. User-assigned port name.
<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
• FRCD	Force the system to override a state where the command would normally be denied.
• NORM	Execute the command normally. Do not override any conditions that might make the command fail.
<SOAK>	OOS-AINS to IS transition soak time as measured in 15-minute intervals. A value of 4 equals a soak time of 1 hour. The allowable range is 0 to 192 intervals (maximum of 48 hours). SOAK is an integer.
<FREQ>	The parameter type is OPTICAL_WLEN (optical wavelength).
• 1310	Wavelength 1310
• 1470	Wavelength 1470
• 1490	Wavelength 1490
• 1510	Wavelength 1510
• 1529.55	Wavelength 1529.55
• 1529.94	Wavelength 1529.94

• 1530	Wavelength 1530
• 1530.33	Wavelength 1530.33
• 1530.73	Wavelength 1530.73
• 1531.12	Wavelength 1531.12
• 1531.51	Wavelength 1531.51
• 1531.90	Wavelength 1531.90
• 1532.29	Wavelength 1532.29
• 1532.68	Wavelength 1532.68
• 1533.07	Wavelength 1533.07
• 1533.47	Wavelength 1533.47
• 1533.86	Wavelength 1533.86
• 1534.25	Wavelength 1534.25
• 1534.64	Wavelength 1534.64
• 1535.04	Wavelength 1535.04
• 1535.43	Wavelength 1535.43
• 1535.82	Wavelength 1535.82
• 1536.22	Wavelength 1536.22
• 1536.61	Wavelength 1536.61
• 1537	Wavelength 1537
• 1537.40	Wavelength 1537.40
• 1537.79	Wavelength 1537.79
• 1538.19	Wavelength 1538.19
• 1538.58	Wavelength 1538.58
• 1538.98	Wavelength 1538.98
• 1539.37	Wavelength 1539.37
• 1539.77	Wavelength 1539.77
• 1540.16	Wavelength 1540.16
• 1540.56	Wavelength 1540.56
• 1540.95	Wavelength 1540.95
• 1541.35	Wavelength 1541.35
• 1541.75	Wavelength 1541.75
• 1542.14	Wavelength 1542.14
• 1542.35	Wavelength 1542.35
• 1542.54	Wavelength 1542.54
• 1542.94	Wavelength 1542.94
• 1543.33	Wavelength 1543.33
• 1543.73	Wavelength 1543.73
• 1544.13	Wavelength 1544.13
• 1544.53	Wavelength 1544.53
• 1544.92	Wavelength 1544.92
• 1545.32	Wavelength 1545.32

• 1545.72	Wavelength 1545.72
• 1546.12	Wavelength 1546.12
• 1546.52	Wavelength 1546.52
• 1546.92	Wavelength 1546.92
• 1547.32	Wavelength 1547.32
• 1547.72	Wavelength 1547.72
• 1548.12	Wavelength 1548.12
• 1548.51	Wavelength 1548.51
• 1548.92	Wavelength 1548.92
• 1549.32	Wavelength 1549.32
• 1549.71	Wavelength 1549.71
• 1550	Wavelength 1500
• 1550.12	Wavelength 1550.12
• 1550.52	Wavelength 1550.52
• 1550.92	Wavelength 1550.92
• 1551.32	Wavelength 1551.32
• 1551.72	Wavelength 1551.72
• 1552.12	Wavelength 1552.12
• 1552.52	Wavelength 1552.52
• 1552.93	Wavelength 1552.93
• 1553.33	Wavelength 1553.33
• 1553.73	Wavelength 1553.73
• 1554.13	Wavelength 1554.13
• 1554.13	Wavelength 1554.13
• 1554.94	Wavelength 1554.94
• 1555.34	Wavelength 1555.34
• 1555.75	Wavelength 1555.75
• 1556.15	Wavelength 1556.15
• 1556.55	Wavelength 1556.55
• 1556.96	Wavelength 1556.96
• 1557.36	Wavelength 1557.36
• 1557.77	Wavelength 1557.77
• 1558.17	Wavelength 1558.17
• 1558.58	Wavelength 1558.58
• 1558.98	Wavelength 1558.98
• 1559.39	Wavelength 1559.39
• 1559.79	Wavelength 1559.79
• 1560.20	Wavelength 1560.20
• 1560.61	Wavelength 1560.61
• 1561.01	Wavelength 1561.01
• 1561.42	Wavelength 1561.42

• 1561.83	Wavelength 1561.83
• 1570	Wavelength 1570
• 1570.83	Wavelength 1570.83
• 1571.24	Wavelength 1571.24
• 1571.65	Wavelength 1571.65
• 1572.06	Wavelength 1572.06
• 1572.48	Wavelength 1572.48
• 1572.89	Wavelength 1572.89
• 1573.30	Wavelength 1573.30
• 1573.71	Wavelength 1573.71
• 1574.13	Wavelength 1574.13
• 1574.54	Wavelength 1574.54
• 1574.95	Wavelength 1574.95
• 1575.37	Wavelength 1575.37
• 1575.78	Wavelength 1575.78
• 1576.20	Wavelength 1576.20
• 1576.61	Wavelength 1576.61
• 1577.03	Wavelength 1577.03
• 1577.44	Wavelength 1577.44
• 1577.86	Wavelength 1577.86
• 1578.27	Wavelength 1578.27
• 1578.69	Wavelength 1578.69
• 1579.10	Wavelength 1579.10
• 1579.52	Wavelength 1579.52
• 1579.93	Wavelength 1579.93
• 1580.35	Wavelength 1580.35
• 1580.77	Wavelength 1580.77
• 1581.18	Wavelength 1581.18
• 1581.60	Wavelength 1581.60
• 1582.02	Wavelength 1582.02
• 1582.44	Wavelength 1582.44
• 1582.85	Wavelength 1582.85
• 1583.27	Wavelength 1583.27
• 1583.69	Wavelength 1583.69
• 1584.11	Wavelength 1584.11
• 1584.53	Wavelength 1584.53
• 1584.95	Wavelength 1584.95
• 1585.36	Wavelength 1585.36
• 1585.78	Wavelength 1585.78
• 1586.20	Wavelength 1586.20
• 1586.62	Wavelength 1586.62

• 1587.04	Wavelength 1587.04
• 1587.46	Wavelength 1587.46
• 1587.88	Wavelength 1587.88
• 1588.30	Wavelength 1588.30
• 1588.73	Wavelength 1588.73
• 1589.15	Wavelength 1589.15
• 1589.57	Wavelength 1589.57
• 1589.99	Wavelength 1589.99
• 1590	Wavelength 1590
• 1590.41	Wavelength 1590.41
• 1590.83	Wavelength 1590.83
• 1591.26	Wavelength 1591.26
• 1591.68	Wavelength 1591.68
• 1592.10	Wavelength 1592.10
• 1592.52	Wavelength 1592.52
• 1592.95	Wavelength 1592.95
• 1593.37	Wavelength 1593.37
• 1593.79	Wavelength 1593.79
• 1594.22	Wavelength 1594.22
• 1594.64	Wavelength 1594.64
• 1595.06	Wavelength 1595.06
• 1595.49	Wavelength 1595.49
• 1596.34	Wavelength 1596.34
• 1596.76	Wavelength 1596.76
• 1597.19	Wavelength 1597.19
• 1597.62	Wavelength 1597.62
• 1598.04	Wavelength 1598.04
• 1598.47	Wavelength 1598.47
• 1598.89	Wavelength 1598.89
• 1599.32	Wavelength 1599.32
• 1599.75	Wavelength 1599.75
• 1600.06	Wavelength 1600.06
• 1601.03	Wavelength 1601.03
• 1601.46	Wavelength 1601.46
• 1601.88	Wavelength 1601.88
• 1602.31	Wavelength 1602.31
• 1602.74	Wavelength 1602.74
• 1603.17	Wavelength 1603.17
• 1603.60	Wavelength 1603.60
• 1604.03	Wavelength 1604.03
• 1610	Wavelength 1610

• USE-TWL1	Use Tunable Wavelength 1
<LOSSB>	The parameter type is REACH, which is the reach value.
• AUTOPROV	Autoprovisioning
• CX	Reach CX
• DX	Reach DX
• HX	Reach HX
• I1	Reach I1
• IR-1	Reach IR-1
• IR-2	Reach IR-2
• L1	Reach L1
• L2	Reach L2
• L3	Reach L3
• LR-1	Reach LR-1
• LR-2	Reach LR-2
• LR-3	Reach LR-3
• LX	Reach LX
• S1	Reach S1
• S2	Reach S2
• SR	Reach SR
• SR-1	Reach SR-1
• SX	Reach SX
• T	Reach T
• VX	Reach VX
• ZX	Reach ZX
<PST>	Primary state. The parameter type is PST, which indicates the current overall service condition of an entity.
• IS	In service
• OOS	Out of service
<SST>	Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic in service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of equipment and attributes
• MT	Maintenance mode
• OOG	Out of group
• SWDL	Software downloading
• UAS	Unassigned
• UEQ	Unequipped

## 11.4 ED-`<MOD2DWDMPAYLOAD>`

(Cisco ONS 15454) The Edit 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 1GISC3, 2GFC, 2GFICON, 2GISC3, 4GFC, 4GFICON, 5GIB, 8GFC, D1VIDEO, DV6000, DVBASI, ESCON, ETRCLO, GIGE, HDTV, ISC1, ISC3, OTU3, or PASSTHRU (ED-`<MOD2DWDMPAYLOAD>`) command edits the operating parameters for a dense wavelength division multiplexing (DWDM) client facility.

### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

### Category

DWDM

### Security

Provisioning

### Input Format

```
ED-<MOD2DWDMPAYLOAD>:<TID>:<AID>:<CTAG>::[NAME=<NAME>],  
[CMDMDE=<CMDMDE>],[FREQ=<FREQ>],[LOSSB=<LOSSB>]:<PST>[<SST>]];
```

### Input Example

```
ED-HDTV::FAC-1-1:1::NAME="PORTNAME",CMDMDE=CMDMDE,FREQ=1550,  
LOSSB=LR-1:IS,AINS;
```

### Input Parameters

<code>&lt;AID&gt;</code>	Access identifier from the <a href="#">“26.17 FACILITY” section on page 26-40</a> .
<code>&lt;LINKCREDITS&gt;</code>	Number of link credits. If autodetection is set to off the value of the link credits will be used to configure the hardware. LINKCREDITS is an integer.
<code>&lt;NAME&gt;</code>	String. User-assigned port name.
<code>&lt;CMDMDE&gt;</code>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
<ul style="list-style-type: none"> <li>FRCD</li> </ul>	Force the system to override a state where the command would normally be denied.
<ul style="list-style-type: none"> <li>NORM</li> </ul>	Execute the command normally. Do not override any conditions that might make the command fail.
<code>&lt;FREQ&gt;</code>	The parameter type is OPTICAL_WLEN (optical wavelength).
<ul style="list-style-type: none"> <li>1310</li> </ul>	Wavelength 1310
<ul style="list-style-type: none"> <li>1470</li> </ul>	Wavelength 1470
<ul style="list-style-type: none"> <li>1490</li> </ul>	Wavelength 1490
<ul style="list-style-type: none"> <li>1510</li> </ul>	Wavelength 1510

• 1529.55	Wavelength 1529.55
• 1529.94	Wavelength 1529.94
• 1530	Wavelength 1530
• 1530.33	Wavelength 1530.33
• 1530.73	Wavelength 1530.73
• 1531.12	Wavelength 1531.12
• 1531.51	Wavelength 1531.51
• 1531.90	Wavelength 1531.90
• 1532.29	Wavelength 1532.29
• 1532.68	Wavelength 1532.68
• 1533.07	Wavelength 1533.07
• 1533.47	Wavelength 1533.47
• 1533.86	Wavelength 1533.86
• 1534.25	Wavelength 1534.25
• 1534.64	Wavelength 1534.64
• 1535.04	Wavelength 1535.04
• 1535.43	Wavelength 1535.43
• 1535.82	Wavelength 1535.82
• 1536.22	Wavelength 1536.22
• 1536.61	Wavelength 1536.61
• 1537	Wavelength 1537
• 1537.40	Wavelength 1537.40
• 1537.79	Wavelength 1537.79
• 1538.19	Wavelength 1538.19
• 1538.58	Wavelength 1538.58
• 1538.98	Wavelength 1538.98
• 1539.37	Wavelength 1539.37
• 1539.77	Wavelength 1539.77
• 1540.16	Wavelength 1540.16
• 1540.56	Wavelength 1540.56
• 1540.95	Wavelength 1540.95
• 1541.35	Wavelength 1541.35
• 1541.75	Wavelength 1541.75
• 1542.14	Wavelength 1542.14
• 1542.35	Wavelength 1542.35
• 1542.54	Wavelength 1542.54
• 1542.94	Wavelength 1542.94
• 1543.33	Wavelength 1543.33
• 1543.73	Wavelength 1543.73
• 1544.13	Wavelength 1544.13
• 1544.53	Wavelength 1544.53

• 1544.92	Wavelength 1544.92
• 1545.32	Wavelength 1545.32
• 1545.72	Wavelength 1545.72
• 1546.12	Wavelength 1546.12
• 1546.52	Wavelength 1546.52
• 1546.92	Wavelength 1546.92
• 1547.32	Wavelength 1547.32
• 1547.72	Wavelength 1547.72
• 1548.12	Wavelength 1548.12
• 1548.51	Wavelength 1548.51
• 1548.92	Wavelength 1548.92
• 1549.32	Wavelength 1549.32
• 1549.71	Wavelength 1549.71
• 1550	Wavelength 1500
• 1550.12	Wavelength 1550.12
• 1550.52	Wavelength 1550.52
• 1550.92	Wavelength 1550.92
• 1551.32	Wavelength 1551.32
• 1551.72	Wavelength 1551.72
• 1552.12	Wavelength 1552.12
• 1552.52	Wavelength 1552.52
• 1552.93	Wavelength 1552.93
• 1553.33	Wavelength 1553.33
• 1553.73	Wavelength 1553.73
• 1554.13	Wavelength 1554.13
• 1554.13	Wavelength 1554.13
• 1554.94	Wavelength 1554.94
• 1555.34	Wavelength 1555.34
• 1555.75	Wavelength 1555.75
• 1556.15	Wavelength 1556.15
• 1556.55	Wavelength 1556.55
• 1556.96	Wavelength 1556.96
• 1557.36	Wavelength 1557.36
• 1557.77	Wavelength 1557.77
• 1558.17	Wavelength 1558.17
• 1558.58	Wavelength 1558.58
• 1558.98	Wavelength 1558.98
• 1559.39	Wavelength 1559.39
• 1559.79	Wavelength 1559.79
• 1560.20	Wavelength 1560.20
• 1560.61	Wavelength 1560.61

• 1561.01	Wavelength 1561.01
• 1561.42	Wavelength 1561.42
• 1561.83	Wavelength 1561.83
• 1570	Wavelength 1570
• 1570.83	Wavelength 1570.83
• 1571.24	Wavelength 1571.24
• 1571.65	Wavelength 1571.65
• 1572.06	Wavelength 1572.06
• 1572.48	Wavelength 1572.48
• 1572.89	Wavelength 1572.89
• 1573.30	Wavelength 1573.30
• 1573.71	Wavelength 1573.71
• 1574.13	Wavelength 1574.13
• 1574.54	Wavelength 1574.54
• 1574.95	Wavelength 1574.95
• 1575.37	Wavelength 1575.37
• 1575.78	Wavelength 1575.78
• 1576.20	Wavelength 1576.20
• 1576.61	Wavelength 1576.61
• 1577.03	Wavelength 1577.03
• 1577.44	Wavelength 1577.44
• 1577.86	Wavelength 1577.86
• 1578.27	Wavelength 1578.27
• 1578.69	Wavelength 1578.69
• 1579.10	Wavelength 1579.10
• 1579.52	Wavelength 1579.52
• 1579.93	Wavelength 1579.93
• 1580.35	Wavelength 1580.35
• 1580.77	Wavelength 1580.77
• 1581.18	Wavelength 1581.18
• 1581.60	Wavelength 1581.60
• 1582.02	Wavelength 1582.02
• 1582.44	Wavelength 1582.44
• 1582.85	Wavelength 1582.85
• 1583.27	Wavelength 1583.27
• 1583.69	Wavelength 1583.69
• 1584.11	Wavelength 1584.11
• 1584.53	Wavelength 1584.53
• 1584.95	Wavelength 1584.95
• 1585.36	Wavelength 1585.36
• 1585.78	Wavelength 1585.78

• 1586.20	Wavelength 1586.20
• 1586.62	Wavelength 1586.62
• 1587.04	Wavelength 1587.04
• 1587.46	Wavelength 1587.46
• 1587.88	Wavelength 1587.88
• 1588.30	Wavelength 1588.30
• 1588.73	Wavelength 1588.73
• 1589.15	Wavelength 1589.15
• 1589.57	Wavelength 1589.57
• 1589.99	Wavelength 1589.99
• 1590	Wavelength 1590
• 1590.41	Wavelength 1590.41
• 1590.83	Wavelength 1590.83
• 1591.26	Wavelength 1591.26
• 1591.68	Wavelength 1591.68
• 1592.10	Wavelength 1592.10
• 1592.52	Wavelength 1592.52
• 1592.95	Wavelength 1592.95
• 1593.37	Wavelength 1593.37
• 1593.79	Wavelength 1593.79
• 1594.22	Wavelength 1594.22
• 1594.64	Wavelength 1594.64
• 1595.06	Wavelength 1595.06
• 1595.49	Wavelength 1595.49
• 1596.34	Wavelength 1596.34
• 1596.76	Wavelength 1596.76
• 1597.19	Wavelength 1597.19
• 1597.62	Wavelength 1597.62
• 1598.04	Wavelength 1598.04
• 1598.47	Wavelength 1598.47
• 1598.89	Wavelength 1598.89
• 1599.32	Wavelength 1599.32
• 1599.75	Wavelength 1599.75
• 1600.06	Wavelength 1600.06
• 1601.03	Wavelength 1601.03
• 1601.46	Wavelength 1601.46
• 1601.88	Wavelength 1601.88
• 1602.31	Wavelength 1602.31
• 1602.74	Wavelength 1602.74
• 1603.17	Wavelength 1603.17
• 1603.60	Wavelength 1603.60

• 1604.03	Wavelength 1604.03
• 1610	Wavelength 1610
• USE-TWL1	Use Tunable Wavelength 1
<LOSSB>	the parameter type is REACH, which is the reach value.
• AUTOPROV	Autoprovisioning
• CX	Reach CX
• CX1	Reach CX1
• DX	Reach DX
• HX	Reach HX
• I1	Reach I1
• IR-1	Reach IR-1
• IR-2	Reach IR-2
• L1	Reach L1
• L2	Reach L2
• L3	Reach L3
• LR-1	Reach LR-1
• LR-2	Reach LR-2
• LR-3	Reach LR-3
• LX	Reach LX
• S1	Reach S1
• S2	Reach S2
• SR	Reach SR
• SR-1	Reach SR-1
• SX	Reach SX
• T	Reach T
• TEN-GE-ER	10 GE extended range
• TEN-GE-LR	10 GE long range
• TEN-GE-SR	10 GE short range
• VX	Reach VX
• ZX	Reach ZX
<PST>	Primary state. The parameter type is PST, which indicates the current overall service condition of an entity.
• IS	In service
• OOS	Out of service
<SST>	Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic in service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of equipment and attributes
• MT	Maintenance mode
• OOG	Out of group

• SWDL	Software downloading
• UAS	Unassigned
• UEQ	Unequipped

## 11.5 ED-<MOD\_PATH>

(Cisco ONS 15454) The Edit STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, STS9C, VC12, VC3, VT1, or VT2 (ED-<MOD\_PATH>) command edits the attributes associated with synchronous transport signal (STS) and Virtual Tributary (VT) paths.

### Usage Guidelines

The SFBER, SDBER, RVRTV, and RVTM parameters only apply to path protection configurations at the STS path level and ONS 15454 VT paths.

SFBER and SDBER also apply to the VT path level on the ONS 15454 when the ONS 15454 has an XC-VXC-10G card.

SWPDIP does not apply to the VT path level (VT1 and VT2).

The path trace message is a 64 character string including the terminating CR (carriage return) and LF (line feed) that is transported in the J1 byte of the SONET STS Path overhead. Both the EXPTRC and TRC string can be provisioned by user with up to 62 character string.

The EXPTRC indicates that the contents of the expected incoming path trace are provisioned by the user. The TRC indicates the contents of the outgoing path trace message. The INCTRC indicates the contents of the incoming path trace message.

Path trace has three modes: OFF, MANUAL, and AUTO. The path trace mode defaults to OFF. The MANUAL mode performs the comparison of the received string with the user-entered expected string. The AUTO mode performs the comparison of the present received string with an expected string that is set to a previously received string. If there is a mismatch, a TIM-P alarm is raised. When the path trace is in OFF mode, there is no path trace processing, and all of the alarm and state conditions are reset.

The TACC parameter edits an existing single STS or VT and changes it to a test access point. When an editing command on TACC is executed, it assigns the STS or VT for the first two-way connection and STS+1 as the second two-way connection. For single facility access digroup (FAD) test access, only a single STS/VT is used for the test access point (TAP) creation. For more information on TACC, refer to the *Cisco ONS 15454 SONET TL1 Reference Guide*.

J1 is implemented on the DS1/DS1N, DS3E/DS3NE, DS3XM, EC1, OC3, OC12-4, OC48AS, and OC192 cards.

DS3/DS3N, OC12, OC48, E100, and E1000 cards do not support path trace.

DS1/DS1N, DS3E/DS3NE, and DS3XM support both TRC and EXPTRC in the ED-STSPATH command.

EC1, OC3, OC48AS, and OC192 only support EXPTRC in the ED-STSPATH command.



### Note

Each TL1 command must be less than or equal to 255 characters. Any command larger than 255 characters must be split into multiple commands. For example, if you use the ED-<MOD\_PATH> command to edit the J1 EXPTRC/TRC message, path protection attributes, and TACC attributes and the command exceeds 255 characters, the command will not be processed. You must use multiple ED-<MOD\_PATH> commands instead.

The following actions will produce error messages:

- Sending this command to edit SFBER, SDBER, RVRTV, or RVTM for the non-path protection STS path.
- Sending this command to edit the EXPTRC string with the AUTO path trace mode (TRCMODE=AUTO).
- Sending this command to edit TRC on any card other than DS3(N)E, DS1(N), and DS3XM cards, will return the “TRC-not allowed for monitor paths. Incorrect card type” error message.
- Sending this command to edit both TACC and any other attribute(s) will return the “Parameters Not compatible” error message.
- Sending this command to edit TACC on an AID with cross-connections will return the “STS in Use” error message.



**Note**

- TACC creation will be denied on the protect ports/cards for 1:1, 1:N, and 1+1 protection.
- The VFAC AID is only valid on slots containing an ML-Series card. TACC is not supported for the ML-Series cards.
- After bidirectional line switched ring (BLSR) switching, provisioning of the J1 trace string or trace mode is not allowed on the protection path.
- TACC creation is allowed on protection channel access (PCA) for two-fiber and four-fiber BLSR.
- TACC is not supported on G1000, MXP\_2.5G\_10G, TXP\_MR\_10G, ML1000-2, and ML100T-12 cards.
- HOLDOFFTIMER is not specific to a path. It is applicable to the path protection selector. If HOLDOFFTIMER is changed on one path associated with the selector, the HOLDOFFTIMER of the other path associated with the same selector is also changed.
- The test set physical connection set up through ED-T3/DS1/STS1/VT1 of the DS3XM-12 card is only allowed on the physical front ports (PORTED ports, Ports 1 to 12), which are the monitoring ports.
  - The monitoring test access ports follow the common rules for the other cards. For example, with an ED-T3 command on Port 2 (FAC-6-2) that has a TACC number (8), the next port, Port 3 (FAC-6-3) is used as the monitoring point also. The RTRV-T3 on both Port 2 and Port 3 return the same TACC number (8) used to monitor the cross-connection end (A-B). The last port (Port 12) is not allowed to set up a physical connection with the test set because there is no next available port to be the monitoring port.
  - The TACC disconnection (DISC-TACC) and the test access mode change command (CHG-TACC) follow the same requirement as in the previous step, but it is applied on the ported ports of the DS3XM-12 card.
  - The test access connection setup command (CONN-TACC) has monitored points, which can be portless ports. This command is applied on both ported and portless ports of the DS3XM-12 card.
- If the entity has a TACC connection, the entity is not allowed to have ported or portless STS/VT cross-connection (or circuit) provisioning on the DS3XM-12 card.
- The cross-connects on the DS3i-N-12 card will be STS3c width, but the individual STS 1s within the 3C will be accessible. To edit the path attributes, use the ED-STS1 command with the FAC AID.

For TACC creation, use the ED-STS3C command because the TACC path width (like the cross-connect) has to be 3C on the DS3i-N-12 card. In this case, you are creating a new entity (TAP) on the DS3i-N-12 card that has to be of 3C width. On the DS3i-N-12 card, the ED0STS command can be used either with STS1 or STS3C depending on the parameter to be modified.

- For the selector path on a BLSR, the SWPDIP is not editable and is always in the ON state. If you attempt to edit SWPDIP (for the selector path on a BLSR), an error message will be returned.
- You can create an STS1 or VT1.5 single TAP on the DS3XM-12 card's last ported port (12) if the bandwidth is available on that port.
- Optical ports do not support MAN and AUTO trace mode because they are not capable of raising AIS on TIM-P. Use the AUTO-NO-AIS or MAN-NO-AIS trace mode on optical ports.
- Sending the ED-VT1/VT2 commands over ONS 15454 path protection paths to edit SFBER or SDBER (when the ONS 15454 does not have an XC-VXC-10G cross-connect) will return the "Invalid Operation For The XCON" error message.
- Sending the ED-VT1/VT2 commands to edit SDBER with 1E-9 will return the "Out Of Range" error message.

**Category**

Paths

**Security**

Provisioning

**Input Format**

```
ED-<MOD_PATH>:[<TID>]:<AID>:<CTAG>:::[SFBER=<SFBER>],[SDBER=<SDBER>],
[RVRTV=<RVRTV>],[RVTM=<RVTM>],[SWPDIP=<SWPDIP>],
[HOLDOFFTIMER=<HOLDOFFTIMER>],[EXPTRC=<EXPTRC>],[TRC=<TRC>],
[TRCMODE=<TRCMODE>],[TRCFORMAT=<TRCFORMAT>][TACC=<TACC>],
[TAPTYPE=<TAPTYPE>],[CMDMDE=<CMDMDE>]:[<PST>[,<SST>]];
```

**Input Example**

```
ED-STS3C:FERNDAL:STS-2-1-4:115:::SFBER=1E-3,SDBER=1E-5,RVRTV=Y,RVTM=1.0,
SWPDIP=Y,HOLDOFFTIMER=2000,EXPTRC="EXPTRCSTRING",TRC="TRCSTRING",
TRCMODE=OFF,TRCFORMAT=64-BYTE,TACC=8,TAPTYPE=SINGLE,
CMDMDE=CMDMDE:IS,AINS;
```

**Input Parameters**

<AID>	Access identifier from the <a href="#">"26.12 CrossConnectId1"</a> section on page 26-29.
<SFBER>	Signal failure threshold. Applies only to path protection. Defaults to 1E-4. The parameter type is SF_BER, which is the threshold for declaring signal failure on a facility or path.
• 1E-3	SFBER is 1E-3.
• 1E-4	SFBER is 1E-4.
• 1E-5	SFBER is 1E-5.

<SDBER>	Signal degrade threshold. Applies only to path protection. 1E-9 is not allowed for VT-level/LO paths. Defaults to 1E-6. The parameter type is SD_BER, which is the threshold for declaring signal degrade on a facility or path.
• 1E-5	SDBER is 1E-5.
• 1E-6	SDBER is 1E-6.
• 1E-7	SDBER is 1E-7.
• 1E-8	SDBER is 1E-8.
• 1E-9	SDBER is 1E-9.
<RVRTV>	Revertive mode. The value Y indicates that protection switching system reverts service to the original line after restoration. The value N indicates that protection switching system does not revert service to the original line after restoration. RVRTV is applicable only for 1+1 protection switching. Null defaults to N. Only applies to path protection. The parameter type is ON_OFF, which disables or enables an attribute.
• N	Does not revert service to original line after restoration.
• Y	Reverts service to original line after restoration.
<RVTM>	Revertive time. RVTM is not allowed to be set while RVRTV is N. Only applies to path protection. The parameter type is REVERTIVE_TIME (revertive time).
• 0.5 to 12.0	Revertive time is 0.5 to 12.0 minutes.
<SWPDIP>	On/off switch for path protection payload defect level switching. Applicable only to STS-level paths in SONET (STS <sub>n</sub> ). For the selector path on a BLSR, SWPDIP is not editable and always ON. Defaults to N. The parameter type is ON_OFF, which disables or enables an attribute.
• N	Disable an attribute.
• Y	Enable an attribute.
<HOLDOFFTIMER>	Hold off timer for path protection dual-ring interconnect (DRI). Values must be within 0 and 10000 ms (0 to 10 seconds), with increments of 100 ms. Defaults to “existed value.” HOLDOFFTIMER is an integer.
<EXPTRC>	Expected path trace content. Indicates the expected path trace message (J1) contents. EXPTRC is any 64-character ASCII string, including the terminating CR (carriage return) and LF (line feed). Applicable to STS-level paths in SONET (STS <sub>n</sub> ). Applicable to VT-level paths for the DS3XM-12 and CE-100T-8 card on the ONS 15454. Defaults to 64 null characters. EXPTRC is a string.
<TRC>	The path trace message to be transmitted. The trace byte (J1) continuously transmits a 64-byte, fixed length ASCII string, one byte at a time. A null value defaults to the network element (NE) transmitting 62 null characters (hex 00) and CR and LF. Applicable to STS-level paths in SONET (STS <sub>n</sub> ). Applicable to VT-level paths for the DS3XM-12 and CE-100T-8 card on the ONS 15454.

<TRCMODE>	Path trace mode. Applicable only to STS-level paths in SONET (STS <sub>n</sub> ). Defaults to the OFF mode.  The parameter type is TRCMODE (trace mode).
• AUTO	Use the previously received path trace string as the expected string. Not applicable to muxponder (MXP) and transponder (TXP) cards.
• AUTO-NO-AIS	Use the previously received path trace string as the expected string and do not turn on the alarm indication signal (AIS) and remote defect indication (RDI) if TIM-P is detected.
• MAN	Use the provisioned expected string as the expected string.
• MAN-NO-AIS	Use the provisioned expected string as the expected string and do not turn on AIS and RDI if TIM-P is detected.
• OFF	Turn off path trace capability. Nothing will be reported.
<TRCFORMAT>	Path trace format. Only 64-byte is supported. Defaults to 64-byte. The parameter type is TRCFORMAT (trace format).
• 64-BYTE	64 byte trace message
<TACC>	TAP number within a range of 0 to 999. Indicates whether the digroup being provisioned is to be used as a test access digroup. When TACC is 0 (zero), the TAP is deleted. TACC is an integer.
<TAPTYPE>	TAP type. Defaults to DUA. The parameter type is TAPTYPE, which is the test access point type.
• DUAL	Dual FAD
• SINGLE	Single FAD
<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
• FRCD	Force the system to override a state where the command would normally be denied.
• NORM	Execute the command normally. Do not override any conditions that might make the command fail.
<PST>	Primary state. Defaults to IS. The parameter type is PST, which indicates the current overall service condition of an entity.
• IS	In service
• OOS	Out of service
<SST>	Secondary state. Defaults to AINS. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic in service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of equipment and attributes
• MT	Maintenance mode
• OOG	Out of group
• SWDL	Software downloading

• UAS	Unassigned
• UEQ	Unequipped

## 11.6 ED-<MOD\_RING>

(Cisco ONS 15454) The Edit Bidirectional Line Switched Ring (ED-<MOD\_RING>) command edits the BLSR attributes.

### Usage Guidelines

The RVRTV, RVTM, SRVRTV, SRVTM, NODEID, and RINGID attributes can be edited for the four-fiber BLSR.

The RVRTV, RVTM, NODEID, and RINGID attributes can be edited for the two-fiber BLSR.

The following actions will produce errors:

- If the system fails on getting IOR, a SROF (Get IOR Failed) error message is returned.
- If the AID is invalid, an IIAC (Invalid AID) error message is returned.
- If the BLSR does not exist, a SRQN (BLSR Does Not Exist) error message is returned.
- The SROF (Facility Not Provisioned) or (Cannot Access BLSR) error message will be returned for an invalid query.
- The SRQN (BLSR Edition Failed) error message is returned for an invalid edition query.
- Sending this command to modify SRVRTV or SRVTM on a two-fiber BLSR will return an IDNV (Invalid Data For 2F-BLSR) error message.
- Sending this command to modify the nodeid with invalid data will return an IIAC (Invalid NodeId) error message.
- Sending this command to change the ringid into invalid data will return an IIAC (Invalid RingId) error message.
- Changing the BLSR nodeid with a duplicated ID will return a SROF (Cannot Set NodeId) error message.
- Changing the BLSR ringid with a duplicated ID will return a SROF (Cannot Set RingId) error message is returned.



### Note

- The ALL AID is invalid for this command.
- The list AID format is supported for Software Release 4.6 and later.

### Category

BLSR

### Security

Provisioning

### Input Format

```
ED-<MOD_RING>:[<TID>]:<AID>:<CTAG>:::[RINGID=<RINGID>],[NODEID=<NODEID>],
[RVRTV=<RVRTV>],[RVTM=<RVTM>],[SRVRTV=<SRVRTV>],[SRVTM=<SRVTM>][:];
```

**Input Example**

```
ED-BLSR:PETALUMA:BLSR-43:123:::RINGID=43,NODEID=3,RVRTV=Y,RVTM=2.0,
SRVRTV=Y,SRVTM=5.0;
```

**Input Parameters**

<AID>	Access identifier from the “26.3 AidUnionId1” section on page 26-20. Identifies the BLSR of the NE. The ALL and BLSR-ALL AIDs are not allowed for editing BLSRs.
<RINGID>	The BLSR ID of the NE up to six characters. Valid characters are A–Z and 0–9. RINGID is a string.
<NODEID>	The BLSR node ID of the NE. NODEID ranges from 0 to 31. It is an integer.
<RVRTV>	<p>Revertive mode. The value Y indicates that protection switching system reverts service to the original line after restoration. The value N indicates that protection switching system does not revert service to the original line after restoration. RVRTV is applicable only for 1+1 protection switching. Null defaults to N.</p> <p>The parameter type is ON_OFF, which disables or enables an attribute.</p> <ul style="list-style-type: none"> <li>• N Does not revert service to original line after restoration.</li> <li>• Y Reverts service to original line after restoration.</li> </ul>
<RVTM>	<p>Revertive time. RVTM is not allowed to be set while RVRTV is N. The parameter type is REVERTIVE_TIME (revertive time).</p> <ul style="list-style-type: none"> <li>• 0.5 to 12.0 Revertive time is 0.5 to 12.0 minutes.</li> </ul>
<SRVRTV>	<p>The span revertive mode for four-fiber BLSR only. The parameter type is ON_OFF, which disables or enables an attribute.</p> <ul style="list-style-type: none"> <li>• N Disable an attribute.</li> <li>• Y Enable an attribute.</li> </ul>
<SRVTM>	<p>The span revertive time for four-fiber BLSR only. SRVTM is not allowed to be set while SRVRTV is N. The parameter type is REVERTIVE_TIME (revertive time).</p> <ul style="list-style-type: none"> <li>• 0.5 to 12.0 Revertive time is 0.5 to 12.0 minutes.</li> </ul>

## 11.7 ED-<OCN\_TYPE>

(Cisco ONS 15454) The Edit OC3, OC12, OC48, OC192, or OC768 (ED-<OCN\_TYPE>) command edits the attributes (for example, service parameters) and status of an OC-N facility. Allowable states for a facility are Out Of Service (OOS), Out Of Service and Automatic In Service (OOS-AINS), Out Of Service and Maintenance (OOS-MT), and In Service (IS). See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

**Usage Guidelines**

- The OPRNOMINAL parameter is supported only by optical card types that support Optical PM. The following cards support OPRNOMINAL: OC3-8, MRC-12, MRC-12-2.5G, MRC-4-2.5G, OC192-XFP, CTX-2500, CTX, OC192-4, OC48-16, OC192-4-DWDM, ASAP-4.

- The data communications channel (DCC) transmit side is bridged to both working and protect in a 1+1 protection scheme. On the receive side, the active one is selected for DCC. The DCC is provisioned on the working port only in a 1+1 protection scheme.
- All lines in a 1+1 BLSR must have the same mode. If you change the mode of a line that is in a 1+1 BLSR, an error message will be returned.
- You cannot directly transition a facility from IS to OOS-MA,DSBLD service state. You can transition a facility to OOS-MA,DSBLD service state from any state except OOS-MA,MT. To transition a facility from OOS-MA,MT to OOS-MA,DSBLD service state, all the following conditions must be met:
  - The facility is not sourcing a synchronization clock
  - The facility's DCC is disabled
  - The facility is not part of a protection group
  - The facility is not supporting cross-connects
  - The facility is not using overhead connections or overhead terminations (such as express orderwire, local orderwire, or user data channels [UDCs])



**Note** The conditions stipulated can be overridden by using the CMDMDE=FRCD option. The FRCD option will immediately remove the facility from service (except for IS to OOS-MA,DSBLD transition) with no consideration for orderly interruption.



**Note** OSI parameters are not supported in Release 9.0 and 9.1.

### Category

Ports

### Security

Provisioning

### Input Format

```
ED-<OCN_TYPE>:[<TID>]:<AID>:<CTAG>:::[DCC=<DCC>],[AREA=<AREA>],[SYNCMSG=<SYNCMSG>],[SENDDUS=<SENDDUS>],[PJMON=<PJMON>],[SFBER=<SFBER>],[SDBER=<SDBER>],[MODE=<MODE>],[SOAK=<SOAK>],[OSPF=<OSPF>],[LDCC=<LDCC>],[NAME=<NAME>],[CMDMDE=<CMDMDE>],[EXPTRC=<EXPTRC>],[TRC=<TRC>],[TRCMODE=<TRCMODE>],[TRCFORMAT=<TRCFORMAT>],[ADMSSM=<ADMSSM>],[SENDDUSFF=<SENDDUSFF>],[AISONLPBK=<AISONLPBK>],[FOREIGNFEND=<FOREIGNFEND>],[FOREIGNIP=<FOREIGNIPADDRESS>],[FREQ=<FREQ>],[LOSSB=<LOSSB>],[OPRNOMINAL=<OPRNOMINAL>],[OSISDCC=<OSISDCC>],[OSILDCC=<OSILDCC>],[OSIROUTER=<OSIROUTER>],[PORTMODE=<PORTMODE>],[<PST>],[<SST>]];
```

### Input Example

```
ED-OC48:PENNGROVE:FAC-6-1:114:::DCC=Y,AREA=10.92.63.1,SYNCMSG=N,SENDDUS=N,PJMON=48,SFBER=1E-4,SDBER=1E-6,MODE=SINGLESHELF,MUX=E2,SOAK=10,OSPF=Y,LDCC=N,NAME="OCNPORT",CMDMDE=CMDMDE,EXPTRC="AAA",TRC="AAA",TRCMODE=MAN,TRCFORMAT=16-BYTE,ADMSSM=PRS,SENDDUSFF=N,
```

```
AISONLPBK=AIS_ON_LPBK_ALL,FREQ=1550,LOSSB=LR-1,FOREIGNFEND=N,
FOREIGNIP="IP
ADDRESS",OPRNOMINAL=Y,OSISDCC=Y,OSILDCC=Y,OSIROUTER=1:IS,AINS;
```

**Input Parameters**

<AID>	Access identifier from the “26.17 FACILITY” section on page 26-40.
<DCC>	Indicates whether or not the SDCC is to be used. Identifies the SDCC connection of the port. The parameter type is ON_OFF, which disables or enables an attribute.
• N	Disable an attribute.
• Y	Enable an attribute.
<AREA>	The area ID and shows up only if the DCC is enabled. AREA is a string.
<SYNCSMSG>	Synchronization status message. The parameter type is EXT_RING, which indicates whether the ring supports the extended K1/K2/K3 protocol.
• N	The ring does not support the extended K1/K2/K3 protocol.
• Y	The ring does support the extended K1/K2/K3 protocol.
<SENDDUS>	The facility will send the DUS (Do not use for Synchronization) value as the SSM for that facility. The parameter type is ON_OFF, which disables or enables an attribute.
• N	Disable an attribute.
• Y	Enable an attribute.
<PJMON>	Identifies an OC-N port PJMON. PJMON is an integer. It defaults to 0 (zero). Set a valid STS number of the optical port.  <b>Note</b> The PJMON number displayed in TL1 interface does not correspond to the PJVC4MON number in CTC, but instead corresponds to the STS number of the optical port.
<SFBER>	Signal failure threshold. The parameter type is SF_BER, which is the threshold for declaring signal failure on a facility or path.
• 1E-3	SFBER is 1E-3.
• 1E-4	SFBER is 1E-4.
• 1E-5	SFBER is 1E-5.
<SDBER>	Signal degrade threshold. The parameter type is SD_BER, which is the threshold for declaring signal degrade on a facility or path.
• 1E-5	SDBER is 1E-5.
• 1E-6	SDBER is 1E-6.
• 1E-7	SDBER is 1E-7.
• 1E-8	SDBER is 1E-8.
• 1E-9	SDBER is 1E-9.
<MODE>	This parameter identifies the facility's operating mode. The mode could be either SONET or SDH.
• SDH	SDH/ETSI mode
• SONET	SONET/ANSI mode

<MUX>	<p>BLSR extension byte (supported only on the OC48AS card). MUX cannot be configured if:</p> <ul style="list-style-type: none"> <li>• The card is SONET and the media type is SDHT.</li> <li>• The card has an orderwire or user data channel (UDC) connection.</li> <li>• This is a protect line and the working line has an orderwire or UDC connection.</li> </ul> <p>The parameter type is MUX_TYPE, which is the BLSR extension type.</p>
• E2	E2 byte (orderwire)
• F1	F1 byte (user)
• K3	K3 byte
• Z2	Z2 byte
<SOAK>	<p>OOS-AINS to IS transition soak time as measured in 15-minute intervals. A value of 4 equals a soak time of 1 hour. The allowable range is 0 to 192 intervals (maximum of 48 hours). Defaults to 32. SOAK is an integer.</p>
<OSFP>	<p>The Open Shortest Path First discovery. Defaults to Y. The parameter type is ON_OFF, which disables or enables an attribute.</p>
• N	Disable an attribute.
• Y	Enable an attribute.
<LDCC>	<p>The LDCC connection on the port. Defaults to N. the parameter type is EXT_RING, which indicates if the ring supports the extended K1/K2/K3 protocol.</p>
• N	The ring does not support the extended K1/K2/K3 protocol.
• Y	The ring does support the extended K1/K2/K3 protocol.
<NAME>	<p>NAME is a user-specified string to identify the facility. It defaults to NULL. Its maximum length is 32 characters.</p>
<CMDMDE>	<p>The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.</p> <ul style="list-style-type: none"> <li>• FRCD Force the system to override a state where the command would normally be denied.</li> <li>• NORM Execute the command normally. Do not override any conditions that might make the command fail.</li> </ul>
<EXPTRC>	<p>Expected section trace content. Indicates the expected section trace message (J1) contents. EXPTRC is any 64-character ASCII string, including the terminating CR (carriage return) and LF (line feed). Applicable to STS-level paths in SONET (STS<sub>n</sub>). Applicable to VT-level paths for the DS3XM-12 card on the ONS 15454. Defaults to NULL. EXPTRC is a string.</p>

<TRC>	The section trace message to be transmitted. The trace byte (J1) continuously transmits a 64-byte, fixed length ASCII string, one byte at a time. A null value defaults to the NE transmitting 62 null characters (hex 00) and CR and LF. Applicable to STS-level paths in SONET (STSn). Applicable to VT-level paths for the DS3XM-12 card on the ONS 15454. TRC is a string.
<TRCMODE>	Section trace mode. Applicable only to STS-level paths in SONET (STSn). Defaults to MAN. The parameter type is TRCMODE (trace mode).
• AUTO	Use the previously received section trace string as the expected string. Not applicable to MXP or TXP cards.
• AUTO-NO-AIS	Use the previously received section trace string as the expected string and do not turn on AIS and RDI if TIMP is detected.
• MAN	Use the provisioned expected string as the expected string.
• MAN-NO-AIS	Use the provisioned expected string as the expected string and do not turn on AIS and RDI if TIMP is detected.
• OFF	Turn off section trace capability. Nothing will be reported.
<TRCFORMAT>	Trace message size. The parameter type is TRCFORMAT (trace format).
• 1-BYTE	1 byte trace message
• 16-BYTE	16 byte trace message
• 64-BYTE	64 byte trace message
<ADMSSM>	SSM selectable value. It will only appear when SSM is disabled. Defaults to STU. The parameter type is SYNC_CLOCK_REF_QUALITY_LEVEL, which is the clock source quality level for SONET.
• DUS	Do Not Use For Synchronization
• PRS	Primary Reference Source, Stratum 1 Traceable
• RES	Reserved For Network Synchronization Use
• SMC	SONET Minimum Clock Traceable
• ST2	Stratum 2 Traceable
• ST3	Stratum 3 Traceable
• ST3E	Stratum 3E Traceable
• ST4	Stratum 4 Traceable
• STU	Synchronized, Traceability Unknown
• TNC	Transit Node Clock (2nd Generation Only)
<SENDDUSFF>	The parameter type is ON_OFF, which disables or enables an attribute.
• N	Disable an attribute.
• Y	Enable an attribute.
<AISONLPBK>	The parameter type is AIS_ON_LPBK, which indicates if AIS is sent on a loopback.
• FACILITY	AIS is sent on facility loopbacks.
• ALL	AIS is sent on all loopbacks.
• OFF	AIS is not sent on loopbacks.

• TERMINAL	AIS is sent on terminal loopbacks.
<FREQ>	The parameter type is OPTICAL_WLEN (optical wavelength).
• 1310	Wavelength 1310
• 1470	Wavelength 1470
• 1490	Wavelength 1490
• 1510	Wavelength 1510
• 1528.77	Wavelength 1528.77
• 1529.55	Wavelength 1529.55
• 1529.94	Wavelength 1529.94
• 1530	Wavelength 1530
• 1530.33	Wavelength 1530.33
• 1530.73	Wavelength 1530.73
• 1531.12	Wavelength 1531.12
• 1531.51	Wavelength 1531.51
• 1531.90	Wavelength 1531.90
• 1532.29	Wavelength 1532.29
• 1532.68	Wavelength 1532.68
• 1533.07	Wavelength 1533.07
• 1533.47	Wavelength 1533.47
• 1533.86	Wavelength 1533.86
• 1534.25	Wavelength 1534.25
• 1534.64	Wavelength 1534.64
• 1535.04	Wavelength 1535.04
• 1535.43	Wavelength 1535.43
• 1535.82	Wavelength 1535.82
• 1536.22	Wavelength 1536.22
• 1536.61	Wavelength 1536.61
• 1537	Wavelength 1537
• 1537.40	Wavelength 1537.40
• 1537.79	Wavelength 1537.79
• 1538.19	Wavelength 1538.19
• 1538.58	Wavelength 1538.58
• 1538.98	Wavelength 1538.98
• 1539.37	Wavelength 1539.37
• 1539.77	Wavelength 1539.77
• 1540.16	Wavelength 1540.16
• 1540.56	Wavelength 1540.56
• 1540.95	Wavelength 1540.95
• 1541.35	Wavelength 1541.35
• 1541.75	Wavelength 1541.75
• 1542.14	Wavelength 1542.14

• 1542.35	Wavelength 1542.35
• 1542.54	Wavelength 1542.54
• 1542.94	Wavelength 1542.94
• 1543.33	Wavelength 1543.33
• 1543.73	Wavelength 1543.73
• 1544.13	Wavelength 1544.13
• 1544.53	Wavelength 1544.53
• 1544.92	Wavelength 1544.92
• 1545.32	Wavelength 1545.32
• 1545.72	Wavelength 1545.72
• 1546.12	Wavelength 1546.12
• 1546.52	Wavelength 1546.52
• 1546.92	Wavelength 1546.92
• 1547.32	Wavelength 1547.32
• 1547.72	Wavelength 1547.72
• 1548.12	Wavelength 1548.12
• 1548.51	Wavelength 1548.51
• 1548.92	Wavelength 1548.92
• 1549.32	Wavelength 1549.32
• 1549.71	Wavelength 1549.71
• 1550	Wavelength 1500
• 1550.12	Wavelength 1550.12
• 1550.52	Wavelength 1550.52
• 1550.92	Wavelength 1550.92
• 1551.32	Wavelength 1551.32
• 1551.72	Wavelength 1551.72
• 1552.12	Wavelength 1552.12
• 1552.52	Wavelength 1552.52
• 1552.93	Wavelength 1552.93
• 1553.33	Wavelength 1553.33
• 1553.73	Wavelength 1553.73
• 1554.13	Wavelength 1554.13
• 1554.13	Wavelength 1554.13
• 1554.94	Wavelength 1554.94
• 1555.34	Wavelength 1555.34
• 1555.75	Wavelength 1555.75
• 1556.15	Wavelength 1556.15
• 1556.55	Wavelength 1556.55
• 1556.96	Wavelength 1556.96
• 1557.36	Wavelength 1557.36
• 1557.77	Wavelength 1557.77

• 1558.17	Wavelength 1558.17
• 1558.58	Wavelength 1558.58
• 1558.98	Wavelength 1558.98
• 1559.39	Wavelength 1559.39
• 1559.79	Wavelength 1559.79
• 1560.20	Wavelength 1560.20
• 1560.61	Wavelength 1560.61
• 1561.01	Wavelength 1561.01
• 1561.42	Wavelength 1561.42
• 1561.83	Wavelength 1561.83
• 1570	Wavelength 1570
• 1570.83	Wavelength 1570.83
• 1571.24	Wavelength 1571.24
• 1571.65	Wavelength 1571.65
• 1572.06	Wavelength 1572.06
• 1572.48	Wavelength 1572.48
• 1572.89	Wavelength 1572.89
• 1573.30	Wavelength 1573.30
• 1573.71	Wavelength 1573.71
• 1574.13	Wavelength 1574.13
• 1574.54	Wavelength 1574.54
• 1574.95	Wavelength 1574.95
• 1575.37	Wavelength 1575.37
• 1575.78	Wavelength 1575.78
• 1576.20	Wavelength 1576.20
• 1576.61	Wavelength 1576.61
• 1577.03	Wavelength 1577.03
• 1577.44	Wavelength 1577.44
• 1577.86	Wavelength 1577.86
• 1578.27	Wavelength 1578.27
• 1578.69	Wavelength 1578.69
• 1579.10	Wavelength 1579.10
• 1579.52	Wavelength 1579.52
• 1579.93	Wavelength 1579.93
• 1580.35	Wavelength 1580.35
• 1580.77	Wavelength 1580.77
• 1581.18	Wavelength 1581.18
• 1581.60	Wavelength 1581.60
• 1582.02	Wavelength 1582.02
• 1582.44	Wavelength 1582.44
• 1582.85	Wavelength 1582.85

• 1583.27	Wavelength 1583.27
• 1583.69	Wavelength 1583.69
• 1584.11	Wavelength 1584.11
• 1584.53	Wavelength 1584.53
• 1584.95	Wavelength 1584.95
• 1585.36	Wavelength 1585.36
• 1585.78	Wavelength 1585.78
• 1586.20	Wavelength 1586.20
• 1586.62	Wavelength 1586.62
• 1587.04	Wavelength 1587.04
• 1587.46	Wavelength 1587.46
• 1587.88	Wavelength 1587.88
• 1588.30	Wavelength 1588.30
• 1588.73	Wavelength 1588.73
• 1589.15	Wavelength 1589.15
• 1589.57	Wavelength 1589.57
• 1589.99	Wavelength 1589.99
• 1590	Wavelength 1590
• 1590.41	Wavelength 1590.41
• 1590.83	Wavelength 1590.83
• 1591.26	Wavelength 1591.26
• 1591.68	Wavelength 1591.68
• 1592.10	Wavelength 1592.10
• 1592.52	Wavelength 1592.52
• 1592.95	Wavelength 1592.95
• 1593.37	Wavelength 1593.37
• 1593.79	Wavelength 1593.79
• 1594.22	Wavelength 1594.22
• 1594.64	Wavelength 1594.64
• 1595.06	Wavelength 1595.06
• 1595.49	Wavelength 1595.49
• 1596.34	Wavelength 1596.34
• 1596.76	Wavelength 1596.76
• 1597.19	Wavelength 1597.19
• 1597.62	Wavelength 1597.62
• 1598.04	Wavelength 1598.04
• 1598.47	Wavelength 1598.47
• 1598.89	Wavelength 1598.89
• 1599.32	Wavelength 1599.32
• 1599.75	Wavelength 1599.75
• 1600.06	Wavelength 1600.06

• 1601.03	Wavelength 1601.03
• 1601.46	Wavelength 1601.46
• 1601.88	Wavelength 1601.88
• 1602.31	Wavelength 1602.31
• 1602.74	Wavelength 1602.74
• 1603.17	Wavelength 1603.17
• 1603.60	Wavelength 1603.60
• 1604.03	Wavelength 1604.03
• 1610	Wavelength 1610
• USE-TWL1	Use Tunable Wavelength 1
<LOSSB>	The parameter type is REACH (reach value)
• AUTOPROV	Autoprovisioning
• CX	Reach CX
• CX1	Reach CX1
• DX	Reach DX
• HX	Reach HX
• I1	Reach I1
• IR-1	Reach IR-1
• IR-2	Reach IR-2
• L1	Reach L1
• L2	Reach L2
• L3	Reach L3
• LR-1	Reach LR-1
• LR-2	Reach LR-2
• LR-3	Reach LR-3
• LX	Reach LX
• S1	Reach S1
• S2	Reach S2
• SR	Reach SR
• SR-1	Reach SR-1
• SX	Reach SX
• T	Reach T
• TEN-GE-ER	10 GE extended range
• TEN-GE-LR	10 GE long range
• TEN-GE-SR	10 GE short range
• VX	Reach VX
• ZX	Reach ZX
<FOREIGNFEND>	Indicates whether the far-end NE on the DCC is a foreign NE. The parameter type is ON_OFF, which disables or enables an attribute.

• N	Disable an attribute.
• Y	Enable an attribute.
<FOREIGNIP>	The IP address of the far-end NE on the DCC. Used only if FOREIGNFEND is Y. FOREIGNIP is a string.
<OPRNOMINAL>	Reads the current raw optical receive power and sets the raw OPR value as the nominal optical receive power.
• N	Not Supported.
• Y	Sets the OPR.
OSISDCC	Indicates whether or not the OSI SDCC is to be used. Identifies the SDCC connection of the port. The parameter type is ON_OFF, which disables or enables an attribute.
• Y	Enable an attribute.
• N	Disable an attribute.
OSILDCC	Indicates whether or not the OSI LDCC is to be used. Identifies the SDCC connection of the port. The parameter type is ON_OFF, which disables or enables an attribute.
• Y	Enable an attribute.
• N	Disable an attribute.
OSIROUTER	The OSI virtual router number in the range of 1 to 3 for 15454.
<PORTMODE>	Describes the termination mode of each interface on the OTU2-XP card.
• DWDM-LINE	Line terminating mode.
• DWDM-SECTION	Section terminating mode.
• DWDM-TRANS-AIS	Transparent mode AIS.
• DWDM-TRANS-SQUELCH	Transparent mode squelch.
• 10GLANWAN-SQUELCH	10G LAN to WAN Squelch.
<PST>	Primary state. The parameter type is PST, which indicates the current overall service condition of an entity.
• IS	In service
• OOS	Out of service
<SST>	Secondary state. Defaults to AINS. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic in service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of equipment and attributes
• MT	Maintenance mode
• OOG	Out of group
• SWDL	Software downloading
• UAS	Unassigned
• UEQ	Unequipped

## 11.8 ED-ALS

(Cisco ONS 15454) The Edit Automatic Laser Shutdown (ED-ALS) command is used to modify the ALS attributes of an OC-N facility and all the facilities that support the ALS feature. For transponder and muxponder cards, this command is used to modify the ALS parameter of the OC48 and OC192 ports.

**Usage Guidelines** None

**Category** Ports

**Security** Provisioning

**Input Format** ED-ALS[:<TID>]:<AID>:<CTAG>[::<ALSMODE>=<ALSMODE>],[<ALSRCINT>=<ALSRCINT>],[<ALSRCPW>=<ALSRCPW>],[<OSRI>=<OSRI>],[:];

**Input Example** ED-ALS::CHAN-1-1-1:100::ALSMODE=AUTO,ALSRCINT=130,ALSRCPW=80.1;

Input Parameters	
<SRC>	Access identifier from the <a href="#">“26.2 AidUnionId”</a> section on page 26-13.
<ALSMODE>	ALS is enabled or disabled. The parameter type is ALS_MODE, which is the working mode for automatic laser shutdown.
<ul style="list-style-type: none"> <li>• AUTO</li> <li>• DISABLED</li> <li>• MAN</li> <li>• MAN-RESTART</li> </ul>	<ul style="list-style-type: none"> <li>Automatic</li> <li>Disabled</li> <li>Manual</li> <li>Manual restart for test</li> </ul>
<ALSRCINT>	ALS recovery interval. The range is 60 to 300 seconds. ALSRCINT is an integer.
<ALSRCPW>	ALS recovery pulse width. The range is 2.0 to 100.00 seconds, in increments of 100 ms. ALSRCWP is a float.
<OSRI>	(Optional) OSRI enabled or disabled. Present only on a port where the safety is supported. The parameter type is ON_OFF (disable or enable an attribute).
<ul style="list-style-type: none"> <li>• N</li> <li>• Y</li> </ul>	<ul style="list-style-type: none"> <li>Disable an attribute.</li> <li>Enable an attribute.</li> </ul>

## 11.9 ED-APC

(Cisco ONS 15454) The Edit Amplification Power Control (ED-APC) command is used to modify the APC application attributes. The default value for an optional parameter is the NE default value. The value might not be the current value for the parameter. Use a retrieve command to retrieve the current value.

### Usage Guidelines

None

### Category

DWDM

### Security

Provisioning

### Input Format

ED-APC[:&lt;TID&gt;]:&lt;AID&gt;:&lt;CTAG&gt;[:&lt;ROLE&gt;][:APCENABLE=&lt;APCENABLE&gt;][:];

### Input Example

ED-APC:PENNGROVE:WDMSIDE-A:CTAG:::APCENABLE=N;

### Input Parameters

<WDMSIDE>	The AID is used to access the WDM side of an MSTP node.
<ul style="list-style-type: none"> <li>WDMSIDE-{UNKNOWN,A, B,C,D,E,F,G,H}</li> </ul>	MSTP side identifier
<ROLE>	The role the unit is playing in the protection group.
<ul style="list-style-type: none"> <li>PROT</li> </ul>	The entity is the protection unit in the protection group.
<ul style="list-style-type: none"> <li>WORK</li> </ul>	The entity is the working unit in the protection group.
<APCENABLE>	Enable or disable the APC application. Default is N. The parameter type is ON_OFF, which disables or enables an attribute.
<ul style="list-style-type: none"> <li>N</li> </ul>	Disable an attribute.
<ul style="list-style-type: none"> <li>Y</li> </ul>	Enable an attribute.

## 11.10 ED-BITS

(Cisco ONS 15454) The Edit Building Integrated Timing Supply (ED-BITS) command edits the building integrated timing supply (BITS) reference attributes.

### Usage Guidelines

The SYNC-BITS1 and SYNC-BITS2 AIDs can be used to set the BITS-OUT port state. For a BITS facility, 64 k and 6 MHz are only applicable to ON. The default values for all optional parameters are NE default values. These values might not be the current value for a parameter. Use a retrieve command to obtain the current value.

**Category** Synchronization

**Security** Provisioning

**Input Format**

**Cisco ONS 15454**

```
ED-BITS:[<TID>]:<AID>:<CTAG>:::[LINECDE=<LINECDE>],[FMT=<FMT>],[LBO=<LBO>],
[SYNCSMSG=<SYNCSMSG>],[AISTHRSHLD=<AISTHRSHLD>],[SABIT=<SABIT>],
[BITSFAC=<BITSFAC>],[ADMSSM=<ADMSSM>][:<PST>];
```

**Input Example**

**Cisco ONS 15454**

```
ED-BITS:SONOMA:BITS-2:779:::LINECDE=AMI,FMT=E1-MF,SYNCSMSG=N,
,SABIT=BYTE-5,BITSFAC=E1,ADMSSM=G811:UNLOCKED
```

**Input Parameters**

<AID>	Access identifier from the <a href="#">“26.6 BITS” section on page 26-21</a> .
<LINECDE>	The parameter type is LINE_CODE (line code).
• AMI	Line code value is AMI.
• B8ZS	Line code value is B8ZS (binary 8-zero substitution).
<FMT>	Digital signal frame format. The parameter type is FRAME_FORMAT, which is the frame format for a T1 port.
• D4	Frame format is D4.
• ESF	Frame format is Extended Superframe (ESF).
• UNFRAMED	Frame format is unframed.
<IMPEDANCE>	(Optional) Impedance is the total opposition that a circuit presents to alternating current. The maximum power transfer that takes place from the source to load when the impedance match.
• 120 ohms	120 ohm termination.
• 100 ohms	100 ohm termination.
• 75 ohms	75 ohm termination.
<LBO>	Line build-out settings. BITS line build-out. Default value is 0 to 133. LBO is an integer. The parameter type is BITS_LineBuildOut (BITS line build-out).
• 0–133	BITS line build-out range is 0–133.
• 134–266	BITS line build-out range is 134–266.
• 267–399	BITS line build-out range is 267–399.
• 400–533	BITS line build-out range is 400–533.
• 534–655	BITS line build-out range is 534–655.
<SYNCSMSG>	Indicates if the BITS facility supports synchronization status message. Default is ON (Y). The parameter type is EXT_RING, which indicates whether the ring supports the extended K1/K2/K3 protocol.

• N	The ring does not support the extended K1/K2/K3 protocol.
• Y	The ring does support the extended K1/K2/K3 protocol.
<AISTHRSHLD>	Alarm indication signal threshold. The parameter type is SYNC_CLOCK_REF_QUALITY_LEVEL, which is the clock source quality level for SONET.
• DUS	Do Not Use For Synchronization
• PRS	Primary Reference Source, Stratum 1 Traceable
• RES	Reserved For Network Synchronization Use
• SMC	SONET Minimum Clock Traceable
• ST2	Stratum 2 Traceable
• ST3	Stratum 3 Traceable
• ST3E	Stratum 3E Traceable
• ST4	Stratum 4 Traceable
• STU	Synchronized, Traceability Unknown
• TNC	Transit Node Clock (2nd Generation Only)
<SABIT>	When the frame format selection is E1, SABIT is the bit used to receive and transmit the SSM. The parameter type is SABITS (SA BITS).
• BYTE-4	SABIT is BYTE-4.
• BYTE-5	SABIT is BYTE-5.
• BYTE-6	SABIT is BYTE-6.
• BYTE-7	SABIT is BYTE-7.
• BYTE-8	SABIT is BYTE-8.
<IMPEDANCE>	When the frame format selection is E1, IMPEDANCE is the terminal impedance of the BITS-IN port. The parameter type is IMPEDANCE, which is the terminal impedance of the BITS-IN port.
• 120-OHM	Impedance of 120 ohm
• 75-OHM	Impedance of 75 ohm
<BITSFAC>	BITS facility settings. BITS-2 always inherits the value of BITS-1. The parameter type is BITS_FAC (the BITS facility rate). 64 k and 6 MHz are only applicable to the ONS 15454.
• 2 M	2 MHz rate
• 64 K	64 K rate
• 6 M	6 MHz rate
• E1	E1 rate
• T1	T1 rate
<ADMSSM>	SSM selectable. Only applicable to BITS-IN when SSM is disabled. The parameter type is SYNC_CLOCK_REF_QUALITY_LEVEL, which is the clock source quality level for SONET.
• DUS	Do Not Use For Synchronization
• PRS	Primary Reference Source, Stratum 1 Traceable
• RES	Reserved For Network Synchronization Use

• SMC	SONET Minimum Clock Traceable
• ST2	Stratum 2 Traceable
• ST3	Stratum 3 Traceable
• ST3E	Stratum 3E Traceable
• ST4	Stratum 4 Traceable
• STU	Synchronized, Traceability Unknown
• TNC	Transit Node Clock (2nd Generation Only)
<PST>	The primary state. The parameter type is PST, which indicates the current overall service condition of an entity.
• IS	In service
• OOS	Out of service

## 11.11 ED-BULKROLL-<OCN\_TYPE>

(Cisco ONS 15454) The Edit Bulkroll for OC12, OC192, OC3, OC48, or OC768 (ED-BULKROLL-<OCN\_TYPE>) command edits information about the rolling of traffic from one endpoint to another without interrupting service. This command uses the FORCE option to force a valid signal. The only parameters that can be edited are RMODE and FORCE. The time slots cannot be edited. Use ED-ROLL-<MOD\_PATH> for single path level rolling.

### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

### Category

Bridge and Roll

### Security

Provisioning

### Input Format

```
ED-BULKROLL-<OCN_TYPE>:[<TID>]:<FROM>:<CTAG>:::
[RFROMSTART=<RFROMSTART>],[RFROMEND=<RFROMEND>],[CMDMDE=<CMDMDE>];
```

### Input Example

```
ED-BULKROLL-OC48:PETALUMA:FAC-1-1:1:::RFROMSTART=STS-1-1-1,
RFROMEND=STS-1-1-11,CMDMDE=FRCD;
```

<b>Input Parameters</b>	<FROM>	One of the endpoints. Access identifier from the “26.17 FACILITY” section on page 26-40 for line level rolling and bulk rolling.
	<RFROMSTART>	The starting time slot in the source roll port. For bulk rolling only. The AID is from the “26.12 CrossConnectId1” section on page 26-29 (except VCM and FACILITY). Defaults to STS-<FROMSLOT>-<FROMPORT>-1, where <FROMSLOT> and <FROMPORT> are the slot and port of the <FROM> AID.
	<RFROMEND>	The ending time slot in the source roll port. For bulk rolling only. The AID is from the “26.12 CrossConnectId1” section on page 26-29 (except VCM and FACILITY). Defaults to STS-<FROMSLOT>-<FROMPORT>-N, where <FROMSLOT> and <FROMPORT> are the slot and port of the <FROM> AID and N is the value of OCn. (for example, OC48, n=48).
	<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
	<ul style="list-style-type: none"> <li>FRCD</li> </ul>	Force the system to override a state where the command would normally be denied.
	<ul style="list-style-type: none"> <li>NORM</li> </ul>	Execute the command normally. Do not override any conditions that might make the command fail.

## 11.12 ED-BWP-ETH

(Cisco ONS 15454) This command is used to modify a Bandwidth Profile entry in BWP DB. The BWP DB is a collection of BWP used in a Network Element.

### Usage Guidelines

Error conditions for deleting bandwidth profile can be:

- Invalid AID. If the AID is invalid, an IIAC (Invalid AID) error message is returned.
- The "ALL" AID is invalid for this command.
- The BWP having the specified AID should be present in the node, that is, already been entered by ENT-BWP-ETH command.

### Category

ETHERNET

### Security

Provisioning

### Input Format

ED-BWP-ETH:[<TID>]:<AID>:<CTAG>:::[NAME=<NAME>],[CIR=<CIR>],[CBS=<CBS>],[PBS=<PBS>],[PIR=<PIR>],[CFMSTATE=<CFM\_STATE>][:];

**Input Example**

```
ED-BWP-ETH:ROCKS:BWP-10000:1:::NAME="MyBWP",CIR=10,CBS=1M,PBS=1M,PIR=20,CFM
STATE=Y;
```

**Input Parameters**

<AID>	This AID is used to access BWP.BWP AID Format is: BWP-[bwpid]Values
• BWP-ALL	All aid for BWP.
• BWP-{1-10000}	Single AID for BWP. The valid identifiers ranges from 1 to 10000.
<NAME>	indicates the BWP name. bwp name is a String. - Default value is -
<CIR>	Ingress committed information rate. This is a value between 0 and 100.Default value is - 100.
<CBS>	Ingress committed burst bucket size.
• 4K	4 Kbit bucket size
• 8K	16 Kbit bucket size
• 16K	32 Kbit bucket size
• 32K	64 Kbit bucket size
• 64K	128 Kbit bucket size
• 128K	256 Kbit bucket size
• 256K	512 Kbit bucket size
• 512K	1 Mbit bucket size
• 1M	2 Mbit bucket size
• 2M	4 Mbit bucket size
• 4M	8 Mbit bucket size
• 8M	16 Mbit bucket size
• 16M	16 Kbit bucket size
<EBS>	Ingress peak burst bucket size
• 4K	4 Kbit bucket size
• 8K	8 Kbit bucket size
• 16K	16 Kbit bucket size
• 32K	32 Kbit bucket size
• 64K	64 Kbit bucket size
• 128K	128 Kbit bucket size
• 256K	256 Kbit bucket size
• 512K	512 Kbit bucket size
• 1M	1 Mbit bucket size
• 2M	2 Mbit bucket size
• 4M	4 Mbit bucket size
• 8M	8 Mbit bucket size
• 16M	16 Mbit bucket size
<PIR>	Excess information rate. This is a value between 0 and 100. Default value is - 100.

<CFMSTATE>	Link Integrity status
• Y	Enabled
• N	Disabled

## 11.13 ED-CFM

(Cisco ONS 15454) The Edit Connectivity Fault Management (ED-CFM) command edits the Connectivity Fault Management (CFM) protocol at the port level.

### Usage Guidelines

- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.

### Category

Port

### Security

Provisioning

### Input Format

ED-CFM:[<TID>]:<AID>:<CTAG>;

### Input Example

ED-CFM:454-156:ETH-1-1-1:1::CFMSTATE=enable;

### Input Parameters

**Table 11-1 ED-CFM Command - Parameter Support**

Input Parameters	Description
<AID>	Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the <a href="#">“26.16 ETH” section on page 26-40</a> .
<CFM_STATE>	Indicates whether the CFM is enabled or disabled on the port.
• ENABLE	Indicates the CFM is enabled on the port.
• DISABLE	Indicates the CFM is disabled on the port.

## 11.14 ED-CHGRP

(Cisco ONS 15454) The Edit Channel Group (ED-CHGRP) command edits the layer 2 channel group information of GE\_XP and 10GE\_XP ethernet cards.

**Usage Guidelines**

The default values for all optional parameters are network element (NE) default values. These values might not be the current value for a parameter. Use a retrieve command to obtain the current value.

**Category**

Channel Group

**Security**

Provisioning

**Input Format**

```
ED-CHGRP:[<TID>]:<AID>:<CTAG>:::[ATTACH=<ATTACH>],[DETACH=<DETACH>],[LACPMODE=<LACPMODE>],[HASHALGO=<HASHALGO>],[NIMODE=<NIMODE>],[MACLEARNING=<MACLEARNING>],[INGRESSCOS=<INGRESSCOS>],[ETHERCETYPE=<ETHERCETYPE>],[ETHERSTYPE=<ETHERSTYPE>],[BPDU=<BPDU>],[QNQMODE=<QNQMODE>],[TRNSPSVLAN=<TRNSP_SVLAN>],[MTU=<MTU>],[FLOWCONTROL=<FLOWCONTROL>],[SPEED=<SPEED>],[EXPSPEED=<EXPSPEED>],[CIR=<CIR>],[CBS=<CBS>],[EBS=<EBS>]:[<PST>[,<SST>]];
```

**Input Example**

```
ED-CHGRP::CHGRP-12-2:1:::ATTACH=ETH-12-5-1&ETH-12-1-1,LACPMODE=ON,HASHINGALGO=HASHING-UCAST-SA-DA-VLAN-INCOMING-PORT,NIMODE=UNI,MACLEARNING=Y,INGRESSCOS=0,ETHERCETYPE=8100,ETHERSTYPE=8100,BPDU=Y,QNQMODE=SELECTIVE,MTU=9700,FLOWCTRL=ASYMMETRIC,SPEED=10_GBPS,EXPSPEED=1_GBPS,CIR=100,CBS=4K,EBS=4k;
```

**Input Parameters**

<AID>	Access identifier from the “26.9 CHGRP” section on page 26-24.
<NIMODE>	Identifies the Ethernet Network Interface Mode.
• NNI	(Default) Network-Network Interface Mode
• UNI	User-Network Interface Mode
<LACPMODE>	LACP mode values
• ON	Manual mode of LACP
• ACTIVE	Active mode of LACP
• PASSIVE	Passive mode of LACP
<HASHINGALGO>	Hashing algorithm value
• HASHING_SA_VLAN_INCOMING_PORT	The Hashing Algorithm value is HASHING_SA_VLAN_INCOMING_PORT.
• HASHING_DA_VLAN_INCOMING_PORT	The Hashing Algorithm is HASHING_DA_VLAN_INCOMING_PORT.
• HASHING_SA_DA_VLAN_INCOMING_PORT	The Hashing Algorithm is HASHING_SA_DA_VLAN_INCOMING_PORT.
• HASHING_SRC_IP_TCP_UDP	The Hashing Algorithm is HASHING_SRC_IP_TCP_UDP.
• HASHING_DST_IP_TCP_UDP	The Hashing Algorithm is HASHING_DST_IP_TCP_UDP.

• HASHING_SRC_DST_IP_TCP_UDP	The Hashing Algorithm is HASHING_SRC_DST_IP_TCP_UDP.
<MTU>	(Optional) Maximum transport unit. The parameter type is MTU_TYPE, which indicates the maximum transport unit used by an Ethernet card. Defaults to 9600.
• 10004	10004. Indicates jumbo size.
• 1500	1500
• 1548	1548
• 9600	9600. Indicates jumbo size.
• 64	64
• 9700	9700. Indicates jumbo size.
<ATTACH >	Ethernet AID for the ethernet port on GE_XP and 10GE_XP card.
<DETACH>	To remove or detach the port.
<SPEED>	(Optional) The parameter type is ETHER_SPEED, which indicates Ethernet speed. Defaults to AUTO.
• 100_MBPS	100 Megabits per second
• 10_GBPS	10 Gigabits per second
• 10_MBPS	10 Megabits per second
• 1_GBPS	1 Gigabit per second
<EXPSPEED>	(Optional) Ethernet speed. The parameter type is ETHER_SPEED, which is the Ethernet speed.
• 100_MBPS	100 Megabits per second
• 10_GBPS	10 Gigabits per second
• 10_MBPS	10 Megabits per second
• 1_GBPS	1 Gigabit per second
• 40_GBPS	40 Gigabit per second
• AUTO_FDX	Enable auto negotiation with full duplex
• AUTO	Auto
<CIR>	Ingress committed information rate. The value ranges from 0 to 100. The default value is 100.
<CBS>	Ingress committed burst bucket size.
• 4K	4 Kbit bucket size
• 8K	16 Kbit bucket size
• 16K	32 Kbit bucket size
• 32K	64 Kbit bucket size
• 64K	128 Kbit bucket size
• 128K	256 Kbit bucket size
• 256K	512 Kbit bucket size
• 512K	1 Mbit bucket size
• 1M	2 Mbit bucket size
• 2M	4 Mbit bucket size

• 4M	8 Mbit bucket size
• 8M	16 Mbit bucket size
• 16M	16 Kbit bucket size
<EBS>	Ingress excess burst bucket size.
<MACLEARNING>	MAC Address Learning Mode. This activates the MAC address learning on the interface to avoid packet broadcasting.
• Y	Enables the MAC learning on the interface.
• N	Disables the MAC learning on the interface.
<INGRESSCOS>	Identifies the COS value set in the S-VLAN tag.
• 0 to 7	Set a Cos value
• TRUST	Use the Customer COS
• VLAN	The COS will be provisioned on CVLAN basis (QinQ selective mode)
<ETHERCETYPE>	Identifies a customer foreseen Ethernet type. If the customer uses a non-standard Ethernet type, the incoming packets will be accepted only if the CE-VLAN Ethernet type matches this parameter.
<ETHERSTYPE>	Identifies a customer foreseen Ethernet type. If the customer uses a non-standard Ethernet type, the incoming packets will be accepted only if the CE-VLAN Ethernet type matches this parameter.
<BPDU>	BPDU (Bridge Protocol Data Unit) management mode; Drop/Passthrough BPDU tagged packets.
• Y	Enables the BPDU tag.
• N	Disables the BPDU tag.
<QNQMODE>	This is used to represent the QinQ mode operations.
• Selective	The S-VLAN tag is added only on specified CE-VLANs. The other packets are dropped.
• Transparent	The S-VLAN tag is always performed where all packets having the S-VLAN-ID identified by TRNSPSVLAN parameter are allowed.
<TRNSPSVLAN>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<NAME>	(Optional) NAME is a string. User-assigned port name.

## 11.15 ED-CMD-SECU

(Cisco ONS 15454) The Edit Command Security (ED-CMD-SECU) command edits the command security level of a particular command.

### Usage Guidelines

None

<b>Category</b>	Security
<b>Security</b>	Superuser
<b>Input Format</b>	ED-CMD-SECU:[<TID>]:<AID>:<CTAG>::<CAP>;
<b>Input Example</b>	ED-CMD-SECU::INIT-REG:1::SUPER;

<b>Input Parameters</b>	<AID>	Access identifier string. Identifies the entity in the NE to which the command pertains. It is the command verb along with verb modifier(s), as it currently exists. It can be a single command or a block of commands, where the block might include all commands. Only INIT-REG will be supported. String. Must not be null.
	<CAP>	Command access privilege. Must not be null. The parameter type is PRIVILEGE, which is the security level.
	• PROV	Provision security level. 60 minutes of idle time.
	• SUPER	Superuser security level. 15 minutes of idle time.

## 11.16 ED-COS-ETH

(Cisco ONS 15454) The Edit Ethernet Cost of Service Table (ED-COS-ETH) command edits the egress parameter of a cost of service table associated to an L2 Ethernet port.

<b>Usage Guidelines</b>	The default values for all optional parameters are NE default values, but these values might not be the current value for a parameter. Use a retrieve command to obtain the current value.
-------------------------	--

<b>Category</b>	Ethernet
-----------------	----------

<b>Security</b>	Provisioning
-----------------	--------------

<b>Input Format</b>	ED-COS-ETH:[<TID>]:<AID>:<CTAG>:::[AISACTION=<AISACTION>],[IGMPROUTE=<IGMPROUTE>],[QOSENABLED=<QOSENABLED>],[BW0=<BWO>],[WEIGHT0=<WEIGHT0>],[BW1=<BW1>],[WEIGHT1=<WEIGHT1>],[BW2=<BW2>],[WEIGHT2=<WEIGHT2>],[BW3=<BW3>],[WEIGHT3=<WEIGHT3>],[BW4=<BW4>],[WEIGHT4=<WEIGHT4>],[BW5=<BW5>],[WEIGHT5=<WEIGHT5>],[BW6=<BW6>],[WEIGHT6=<WEIGHT6>],[BW7=<BW7>],[WEIGHT7=<WEIGHT7>][:];
---------------------	---

**Input Example**

```
ED-COS-ETH:PETALUMA:ETH-1-1-1:1:::QOSENABLED=Y,BW0=10,WEIGHT0=0,BW1=20,
WEIGHT1=2,BW2=40,WEIGHT2=4,BW3=60,WEIGHT3=6,BW4=70,WEIGHT4=8,BW5=80,
WEIGHT5=10,BW6=85,WEIGHT6=12,BW7=100,WEIGHT7=15::;
```

**Input Parameters**

<AID>	Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the “ <a href="#">26.16 ETH</a> ” section on page 26-40.
<AISACTION>	VLAN-AIS Action. Indicates what action take place on port when VLAN-AIS alarm is raised.
<ul style="list-style-type: none"> <li>• AIS-NONE</li> <li>• AIS-SQUELCH</li> </ul>	<p>No action after VLAN-AIS</p> <p>The port is squelched.</p>
<IGMPROUTE>	IGMP M Router port. Indicates the type of connection between this port and the IGMP M Router.
<ul style="list-style-type: none"> <li>• STATIC</li> <li>• NONE</li> </ul>	<p>A static connection is present between this port and the IGMP M Router</p> <p>No connection is present</p>
<INGRESSCOS>	Identifies the COS value set in the S-VLAN tag.
<ul style="list-style-type: none"> <li>• 0 to 7</li> <li>• TRUST</li> <li>• VLAN</li> </ul>	<p>Set a Cos value</p> <p>Use the customer COS</p> <p>The COS to be provisioned on CVLAN basis (QinQ selective mode).</p>
<QOSENABLED>	Used to enable or disable the egress QOS policy of an L2 Ethernet port.
<ul style="list-style-type: none"> <li>• N</li> <li>• Y</li> </ul>	<p>Disable the service.</p> <p>Enable the service.</p>
<BW0>	Bandwidth percentage, a value between 0 and 100.
<WEIGHT0>	Value represents the weighted round-robin (WRR) weight associated to the COS values, an integer value between 0 and 15.
<BW1>	Bandwidth percentage, a value between 0 and 100.
<WEIGHT1>	Value represents the WRR weight associated to the COS values, an integer value between 0 and 15.
<BW2>	Bandwidth percentage, a value between 0 and 100.
<WEIGHT2>	Value represents the WRR weight associated to the COS values, an integer value between 0 and 15.
<BW3>	Bandwidth percentage, a value between 0 and 100.
<WEIGHT3>	Value represents the WRR weight associated to the COS values, an integer value between 0 and 15.
<BW4>	Bandwidth percentage, a value between 0 and 100.
<WEIGHT4>	Value represents the WRR weight associated to the COS values, an integer value between 0 and 15.
<BW5>	Bandwidth percentage, a value between 0 and 100.
<WEIGHT5>	Value represents the WRR weight associated to the COS values, an integer value between 0 and 15.
<BW6>	Bandwidth percentage, a value between 0 and 100.

<WEIGHT6>	Value represents the WRR weight associated to the COS values, an integer value between 0 and 15.
<BW7>	Bandwidth percentage, a value between 0 and 100.
<WEIGHT7>	Value represents the WRR weight associated to the COS values, an integer value between 0 and 15.

## 11.17 ED-CRS-<PATH>

(Cisco ONS 15454) The Edit Cross-Connect for STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, STS9C, VT1, or VT2 (ED-CRS-<PATH>) command edits a cross-connection.

### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.



#### Note

- ADD and REMOVE cannot be used together. The example provided is for informational purposes only. ADD and REMOVE are mutually exclusive.
- Add/Remove drops is possible only on ONEWAY, UPSR\_DROP, UPSR\_DC, and UPSR\_EN type cross-connections (one-way only).
- Traditional cross-connections cannot be upgraded to DRI cross-connections using the ED\_CRS command.
- CKTID is a string of ASCII characters. The maximum length of CKTID is 48. If the CKTID is EMPTY or NULL, this field will not appear.
- You cannot add a drop onto unidirectional connections on BLSR DRI primary or secondary nodes.

### Category

Cross Connections

### Security

Provisioning

### Input Format

```
ED-CRS-<PATH>:[<TID>]:<SRC>,<DST>:<CTAG>::[<CCT>]:[ADD=<ADD>],
[REMOVE=<REMOVE>],[CKTID=<CKTID>],[CMDMDE=<CMDMDE>]:[<PST>[,<SST>]];
```

### Input Example

```
ED-CRS-ST33C::STS-1-1-1,STS-2-1-1:1:::ADD=STS-13-1-1,REMOVE=STS-2-1-1,CKTID=CKTID
CMDMDE=FRCD:IS,AINS;
```

## Input Parameters

<SRC>	Source AID from the “ <a href="#">26.12 CrossConnectId1</a> ” section on page 26-29.
<DST>	Destination AID from the “ <a href="#">26.12 CrossConnectId1</a> ” section on page 26-29.
<CCT>	Cross-connection. The parameter type is CCT which indicates the type of cross-connection to be created.
<ul style="list-style-type: none"> <li>• 1WAY</li> </ul>	A unidirectional connection from a source tributary to a destination tributary
<ul style="list-style-type: none"> <li>• 1WAYDC</li> </ul>	Path Protection multicast drop (one-way continue)
<ul style="list-style-type: none"> <li>• 1WAYEN</li> </ul>	Path Protection multicast end node (one-way continue)
<ul style="list-style-type: none"> <li>• 1WAYMON</li> </ul>	A bidirectional connection between the two tributaries  <b>Note</b> In ONS 15454 Software Release 3.0 and later, 1WAYMON is not supported with TL1. However, it is still supported from Cisco Transport Controller (CTC). Using CTC, you can create 1WAYMON cross-connects that can be retrieved with TL1.
<ul style="list-style-type: none"> <li>• 1WAYPCA</li> </ul>	A unidirectional connection from a source tributary to a destination tributary on the protection path/fiber
<ul style="list-style-type: none"> <li>• 2WAY</li> </ul>	A bidirectional connection between the two tributaries
<ul style="list-style-type: none"> <li>• 2WAYDC</li> </ul>	A bidirectional drop and continue connection applicable only to path protection traditional and integrated DRIs
<ul style="list-style-type: none"> <li>• 2WAYPCA</li> </ul>	A bidirectional connection between the two tributaries on the extra protection path/fiber
<ul style="list-style-type: none"> <li>• DIAG</li> </ul>	Diagnostics cross-connect. Supports BERT (BLSR PCA diagnostics cross-connect).
<ADD>	AID from the “ <a href="#">26.2 AidUnionId</a> ” section on page 26-13.
<REMOVE>	AID from the “ <a href="#">26.2 AidUnionId</a> ” section on page 26-13.
<CKTID>	Cross-connect ID. The default is Blank or None. String of ASCII characters. Maximum length is 48. If CKTID is empty or null, the CKTID field will not be displayed.
<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
<ul style="list-style-type: none"> <li>• FRCD</li> </ul>	Force the system to override a state where the command would normally be denied.
<ul style="list-style-type: none"> <li>• NORM</li> </ul>	Execute the command normally. Do not override any conditions that might make the command fail.
<PST>	Primary state. The parameter type is PST, which indicates the current overall service condition of an entity.
<ul style="list-style-type: none"> <li>• IS</li> </ul>	In service
<ul style="list-style-type: none"> <li>• OOS</li> </ul>	Out of service
<SST>	Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.

• AINS	Automatic in service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of equipment and attributes
• MT	Maintenance mode
• OOG	Out of group
• SWDL	Software downloading
• UAS	Unassigned
• UEQ	Unequipped

## 11.18 ED-CRS-ETH

This command modifies an ethernet connection relationship between two or more ethernet connection end points inside the ethernet facilities.

### Usage Guidelines

The default values for all optional parameters are NE default values. These values may not be the current value for a parameter. In order to obtain the current value use RTRV-XX command to retrieve them.

The ethernet connection end point identifier must be the same for all the ethernet ports inside the connection and must be kept the same for all the ethernet circuit.

CKTID is a string of ASCII characters. The maximum length of CKTID can be 48. If the CKTID is EMPTY or NULL this field is not displayed

If the AID is invalid, an IIAC (Invalid AID) error message is returned.

The "ALL" AID is invalid for this command.

### Category

ETHERNET

### Security

Provisioning

### Input Format

ED-CRS-ETH:[<TID>]:<src>,<dst>:<CTAG>:::[ADD=<add>],[REMOVE=<remove>],[CKTID=<ckt  
id>][:];

### Input Example

ED-CRS-ETH:KARTHIK:ETH-1-1-1-12,ETH-1-21-1-12:1:::CKTID=NEW,ADD=ETH-1-2-1;

## Input Parameters

<SRC>	Ethernet connection identifier AIDs are used to access L2 ethernet connection end point.
<ul style="list-style-type: none"> <li>• ALL</li> </ul>	The ALL aid is applicable for RTRV-only commands, basically the RTRV-rr type of commands. For e.g. RTRV-CRS-ETH with ALL aid returns all ETH connections on the node.
<ul style="list-style-type: none"> <li>• ETHID[-{1-12}]-{1-5,12-16}-{1-22}-1-{1-20}</li> </ul>	Ethernet connection end point aid for GE-XP card in the format of:ETHID-[shelf]-[slot]-[ppm]-[port]-[cepid], where [cepid] is the connection end point identifier, that identifies a single 1 Gbit/sec. circuit inside an ethernet port.
<ul style="list-style-type: none"> <li>• ETHID[-{1-12}]-{1-6,12-17}-{1-4}-1-{1-20}</li> </ul>	Facility aid for 10GE-XP card in the format of:ETHID-[shelf]-[slot]-[ppm]-[port]-[cepid], where [cepid] is the connection end point identifier, that identifies a single 1 Gbit/sec. circuit inside an ethernet port.
<DST>	Ethernet connection identifier AIDs are used to access L2 ethernet connection end point
<ul style="list-style-type: none"> <li>• ALL</li> </ul>	The ALL aid is applicable for RTRV-only commands, basically the RTRV-rr type of commands. For e.g. RTRV-CRS-ETH with ALL aid returns all ETH connections on the node.
<ul style="list-style-type: none"> <li>• ETHID[-{1-12}]-{1-5,12-16}-{1-22}-1-{1-20}</li> </ul>	Ethernet connection end point aid for GE-XP card in the format of:ETHID-[shelf]-[slot]-[ppm]-[port]-[cepid], where [cepid] is the connection end point identifier, that identifies a single 1 Gbit/sec. circuit inside an ethernet port.
<ul style="list-style-type: none"> <li>• ETHID[-{1-12}]-{1-6,12-17}-{1-4}-1-{1-20}</li> </ul>	Facility aid for 10GE-XP card in the format of:ETHID-[shelf]-[slot]-[ppm]-[port]-[cepid], where [cepid] is the connection end point identifier, that identifies a single 1 Gbit/sec. circuit inside an ethernet port.
<ADD>	add is the AID AidUnionId.Default value is - NULL
<REMOVE>	remove is the AID AidUnionId. Default value is - "NULL".
<CKTID>	Circuit identification parameter contains the Common Language Circuit ID or other alias of the circuit being provisioned. May not contain blank spaces. CKTID is a string of ASCII characters. The maximum length of CKTID can be 48. cktid is a String. cktid is optional. Default value is - "NULL"

## 11.19 ED-DAT

(Cisco ONS 15454) The Edit Date and Time (ED-DAT) command edits the date and the time.

**Usage Guidelines** None

**Category** System

**Security**

Provisioning

**Input Format**

ED-DAT:[&lt;TID&gt;]::&lt;CTAG&gt;::[&lt;DATE&gt;],[&lt;TIME&gt;];

**Input Example**

ED-DAT:PETALUMA::1234::99-12-21,14-35-15;

**Input Parameters**

<DATE>	The new date. DATE is a string
<TIME>	The new time. TIME is a string.

## 11.20 ED-DS1

(Cisco ONS 15454) The Edit DS1 (ED-DS1) command edits the test access attribute for DS1 access on a DS3XM-6 and DS3XM-12 card.

**Usage Guidelines**

- This command is not allowed if the card is a protect card.
- Both the MODE and FMT fields of this command apply to the DS3XM-12 card only.
- For the DS3XM-12 card, the DS1 frame format NE default is AUTO\_PROV\_FMT for the first 30 seconds to determine the real format. After 30 seconds, the DS1 frame format will be detected as FRAMED. If the frame format is not detected, it will be in the UNFRAMED format.
- For preprovisioning the DS3XM-12 card, the DS1 frame format defaults to UNFRAMED.
- For the DS3XM-12 card, the DS1 configurable attributes (PM, TH, alarm, etc.) only apply on the ported ports (Ports 1 to 12) and the VT-mapped (odd) portless ports in xxx-xxx-DS1 commands. If you provision or retrieve DS1 attributes on the DS3-mapped (even) portless port in xxx-xxx-DS1 commands, an error message will be returned.
- The test set physical connection that is set up through the ED-T3/DS1/STS1/VT1 command of the DS3XM-12 card is only allowed on the physical front ports (PORTED ports, Ports 1 to 12), which are the monitoring ports, as follows:
  - The monitoring test access ports follow the common rules for the other cards. For example, when issuing the ED-T3 command on Port 2 (FAC-6-2) with a TACC number (8), the next port, Port 3 (FAC-6-3) is used as the monitoring point also. The RTRV-T3 command on both Port 2 and Port 3 return the same TACC number (8) being used to monitor the cross-connection end (A-B). The last port (Port 12) is not allowed to set up a physical connection with the test set because there is no next available port to be the monitoring port.
  - The TACC disconnection (DISC-TACC) and the test access mode change command (CHG-TACC) follow the same requirement as in the previous step, but it is applied on the ported ports of the DS3XM-12 card.
  - The test access connection set-up command (CONN-TACC) has monitored points, which can be portless ports. This command is applied on both ported and portless ports of the DS3XM-12 card.
- If the entity has a TACC connection, the entity is not allowed to have ported or portless STS/VT cross-connection (or circuit) provisioning on the DS3XM-12 card.

- The parameters BERTMODE, BERTPATTERN, and BERTERRCOUNT apply only to DS1/E1-56 and DS3XM-12 cards
- BERT is implemented on a single port.

**Category**

Ports

**Security**

Provisioning

**Input Format**

```
ED-DS1:[<TID>]:<AID>:<CTAG>:::[TACC=<TACC>],[TAPTYPE=<TAPTYPE>],
[AISONLPBK=<AISONLPBK>],[MODE=<MODE>],[FMT=<FMT>],
[BERTMODE=<BERTMODE>],[BERTPATTERN=<BERTPATTERN>],
[BERTERRCOUNT=<BERTERRCOUNT>];
```

**Input Example**

```
ED-DS1:PETALUMA:DS1-2-1-6-12:123:::TACC=8,TAPTYPE=DUAL,MODE=FDL,
FMT=ESF,BERTMODE=NONE,BERTPATTERN=NONE;
```

**Input Parameters**

<AID>	Access identifier from the <a href="#">“26.13 DS1”</a> section on page 26-36.
<TACC>	TAP number within a range of 0 to 999. Indicates whether the digroup being provisioned is to be used as a test access digroup. When TACC is 0 (zero), the TAP is deleted. TACC is an integer.
<TAPTYPE>	TAP type. The parameter type is TAPTYPE (test access point type).
• DUAL	Dual FAD
• SINGLE	Single FAD
<AISONLPBK>	The parameter type is AIS_ON_LPBK, which indicates whether AIS is sent on a loopback.
• FACILITY	AIS is sent on facility loopbacks.
• ALL	AIS is sent on all loopbacks.
• OFF	AIS is not sent on loopbacks.
• TERMINAL	AIS is sent on terminal loopbacks.
<MODE>	Mode with which the command is to be implemented. DS1 path mode of the DS3XM-12 card. Defaults to FDL. The parameter type is DS1MODE, which is the DS1 path mode of the DS3XM-12 card.
• ATT	The DS1 path of the DS3XM-12 card is in AT&T 54016 mode.
• FDL	The DS1 path of the DS3XM-12 card is in FDL T1-403 mode.
<FMT>	Digital signal format. The DS1 path frame format of the DS3XM-12 card. Defaults to UNFRAMED. The parameter type is FRAME_FORMAT, which is the frame format for a T1 port.
• D4	Frame format is D4.
• ESF	Frame format is ESF.
• UNFRAMED	Frame format is unframed.

<BERTMODE>	Specifies the mode [Test Pattern Generator (TPG) or Test Pattern Monitor (TPM)] of the port for BERT.
• NONE	BERT mode not enabled.
• TPGM-L	Test pattern generator and monitor on line side.
• TPGM-B	Test pattern generator and monitor on backplane.
• TPG-L	Test pattern generator on line side.
• TPM-L	Test pattern monitor on line side.
• TPG-B	Test pattern generator on backplane.
• TPM-B	Test pattern monitor on backplane.
<BERTPATTERN>	Specifies the error pattern to be injected for BERT.
• NONE	BERT pattern not enabled.
• PRBS15	PRBS15 test pattern.
• PRBS20	PRBS20 test pattern.
• PRBS23	PRBS23 test pattern.
• QRSS	QRSS test pattern.
• ALT-ONE-ALT-ZERO	Alternate one and zero pattern.
<BERTERRCOUNT>	Integer value. Value -1 indicates that BERT is disabled/not supported.

## 11.21 ED-DSCP-<MOD2>

(Cisco ONS 15454) The Edit ETH or CHGRP (ED-DSCP-<MOD2>) command edits Differentiated Service Code Points (DSCP) to COS conversion table associated to a L2 ethernet port or a channel group.

### Usage Guidelines

This command is applicable when the INGRESSCOS parameter is set to DSCP value on the ethernet port or channel group.

### Category

Ethernet or Channel Group

### Security

Provisioning

### Input Format

ED-DSCP-MOD2:[<TID>]:<AID>:<CTAG>::<COS>:DSCPFIRST=<DSCP\_FIRST>,DSCPLAST=<DSCP\_LAST>[:];

### Input Example

```
ED-DSCP-ETH::ETH-5-1-1:1234::3:DSCPFIRST=26,DSCPLAST=30;
ED-DSCP-CHGRP::CHGRP-5-1-1::3:DSCPFIRST=26,DSCPLAST=30;
```

**Table 11-2 ED-DSCP-MOD2 Command - Parameter Support**

Input Parameters	Description
<AID>	Access identifier.
<ul style="list-style-type: none"> <li>Ethernet</li> </ul>	Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the “26.16 ETH” section on page 26-40.
<ul style="list-style-type: none"> <li>Channel Group</li> </ul>	Access identifier from the “26.9 CHGRP” section on page 26-24.
<INGRESSCOS>	Identifies the COS value set in the S-VLAN tag.
<ul style="list-style-type: none"> <li>0 to 7</li> </ul>	Set a Cos value
<ul style="list-style-type: none"> <li>DSCP</li> </ul>	The COS is set according to DSCP to COS mapping table.
<ul style="list-style-type: none"> <li>TRUST</li> </ul>	Use the Customer COS
<ul style="list-style-type: none"> <li>VLAN</li> </ul>	The COS will be provisioned on CVLAN basis (QinQ selective mode)
<DSCPFIRST>	DSCP range. Indicates a DSCP value used in the ethernet frame to define the QoS in L3 ethernet transport. It is a number in the range 0..64. Default values is 0
<DSCPLAST>	DSCP range. Indicates a DSCP value used in the ethernet frame to define the QoS in L3 ethernet transport. It is a number in the range 0..64. Default values is 0.

## 11.22 ED-EC1

(Cisco ONS 15454) The Edit Electrical Carrier (ED-EC1) command edits the attributes of an EC1 card.

### Usage Guidelines

- This command is not allowed if the card is a protecting card.
- You cannot directly transition a facility from IS to OOS-MA,DSBLD service state. You can transition a facility to OOS-MA,DSBLD service state from any state except OOS-MA,MT. To transition a facility from OOS-MA,MT to OOS-MA,DSBLD service state, all the following conditions must be met:
  - The facility is not sourcing a synchronization clock
  - The facility's DCC is disabled
  - The facility is not part of a protection group
  - The facility is not supporting cross-connects
  - The facility is not using overhead connections or overhead terminations (such as express orderwire, local orderwire, or user data channels [UDCs])



**Note** The conditions stipulated can be overridden by using the CMDMDE=FRCD option. The FRCD option will immediately remove the facility from service (except for IS to OOS-MA,DSBLD transition) with no consideration for orderly interruption.

**Category** Ports

**Security** Provisioning

**Input Format** ED-EC1:[<TID>]:<AID>:<CTAG>:::[PJMON=<PJMON>],[LBO=<LBO>],[SOAK=<SOAK>],[SFBER=<SFBER>],[SDBER=<SDBER>],[NAME=<NAME>],[EXPTRC=<EXPTRC>],[TRC=<TRC>],[TRCMODE=<TRCMODE>],[<TRCFORMAT>],[AISONLPBK=<AISONLPBK>],[CMDMDE=<CMDMDE>]:[<PST>[,<SST>]];

**Input Example** ED-EC1:PETALUMA:FAC-1-1:123:::PJMON=0,LBO=0-225,SOAK=10,SFBER=1E-4,SDBER=1E-6,NAME="EC1 PORT",EXPTRC="AAA",TRC="AAA",TRCMODE=MAN,TRCFORMAT="16-BYTE",AISONLPBK=AIS\_ON\_LPBK\_ALL,CMDMDE=CMDMDE:IS,AINS;

<b>Input Parameters</b>	<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
	<PJMON>	A SONET pointer number (0 or 1) of an EC1 port. PJMON is an integer.
	<LBO>	Line build-out settings. LBO is an integer. It defaults to 0–225. The parameter type is E_LBO (electrical signal line build-out).
	• 0–225	Electrical signal line build-out range is 0–225.
	• 226–450	Electrical signal line build-out range is 226–450.
	<SOAK>	IS-AINS to IS transition soak time as measured in 15-minute intervals. A value of 4 equals a soak time of 1 hour. The allowable range is 0 to 192 intervals (maximum of 48 hours). SOAK is an integer. Defaults to 32.
	<SFBER>	Signal failure threshold. Defaults to 1E-4. The parameter type is SF_BER, which is the threshold for declaring signal failure on a facility or path.
	• 1E-3	SFBER is 1E-3.
	• 1E-4	SFBER is 1E-4.
	• 1E-5	SFBER is 1E-5.
	<SDBER>	Signal degrade threshold. Defaults to 1E-7. The parameter type is SD_BER, which is the threshold for declaring signal degrade on a facility or path.
	• 1E-5	SDBER is 1E-5.
	• 1E-6	SDBER is 1E-6.
	• 1E-7	SDBER is 1E-7.
	• 1E-8	SDBER is 1E-8.
	• 1E-9	SDBER is 1E-9.
	<NAME>	NAME is a string. Default value is NULL. Maximum length is 32 characters.
	<EXPTRC>	String

<TRC>	String
<TRCMODE>	The parameter type is TRCMODE (trace mode).
<ul style="list-style-type: none"> <li>AUTO</li> </ul>	Use the previously received path trace string as the expected string. Not applicable to MXP/TXP cards.
<ul style="list-style-type: none"> <li>AUTO-NO-AIS</li> </ul>	Use the previously received path trace string as the expected string and do not turn on AIS and RDI if TIM-P is detected.
<ul style="list-style-type: none"> <li>MAN</li> </ul>	Use the provisioned expected string as the expected string.
<ul style="list-style-type: none"> <li>MAN-NO-AIS</li> </ul>	Use the provisioned expected string as the expected string and do not turn on AIS and RDI if TIM-P is detected.
<ul style="list-style-type: none"> <li>OFF</li> </ul>	Turn off path trace capability. Nothing will be reported.
<TRCFORMAT>	Trace message size. The parameter type is TRCFORMAT (trace format).
<ul style="list-style-type: none"> <li>1-BYTE</li> </ul>	1 byte trace message.
<ul style="list-style-type: none"> <li>16-BYTE</li> </ul>	16 byte trace message.
<ul style="list-style-type: none"> <li>64-BYTE</li> </ul>	64 byte trace message.
<ul style="list-style-type: none"> <li>Y</li> </ul>	Enable an attribute.
<AISONLPBK>	Defaults to AIS_ONLPBK_FACILITY. The parameter type is AIS_ON_LPBK, which indicates whether AIS is sent on a loopback.
<ul style="list-style-type: none"> <li>AIS_ONLPBK_FACILITY</li> </ul>	AIS is sent on facility loopbacks.
<ul style="list-style-type: none"> <li>ALL</li> </ul>	AIS is sent on all loopbacks.
<ul style="list-style-type: none"> <li>OFF</li> </ul>	AIS is not sent on loopbacks.
<ul style="list-style-type: none"> <li>TERMINAL</li> </ul>	AIS is sent on terminal loopbacks.
<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
<ul style="list-style-type: none"> <li>FRCD</li> </ul>	Force the system to override a state where the command would normally be denied.
<ul style="list-style-type: none"> <li>NORM</li> </ul>	Execute the command normally. Do not override any conditions that might make the command fail.
<PST>	Primary state. Defaults to IS. The parameter type is PST, which indicates the current overall service condition of an entity.
<ul style="list-style-type: none"> <li>IS</li> </ul>	In service
<ul style="list-style-type: none"> <li>OOS</li> </ul>	Out of service
<SST>	Secondary state. Defaults to AINS. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
<ul style="list-style-type: none"> <li>AINS</li> </ul>	Automatic in service
<ul style="list-style-type: none"> <li>DSBLD</li> </ul>	Disabled
<ul style="list-style-type: none"> <li>LPBK</li> </ul>	Loopback
<ul style="list-style-type: none"> <li>MEA</li> </ul>	Mismatch of equipment and attributes
<ul style="list-style-type: none"> <li>MT</li> </ul>	Maintenance mode
<ul style="list-style-type: none"> <li>OOG</li> </ul>	Out of group

• SWDL	Software downloading
• UAS	Unassigned
• UEQ	Unequipped

## 11.23 ED-EFM

(Cisco ONS 15454) The Edit Ethernet in the First Mile (ED-EFM) command edits ethernet OAM parameters on the front end port of the fast (10/100 Mbps) ethernet card.

### Usage Guidelines

- The EFMSTATE parameter should be “enabled” for the facility by ED-FSTE to edit the EFM parameters.
- You cannot enable or disable the remote loopback through the local interface on the remote OAM peer entity if any other type of loopback (facility/terminal) is already configured on the local interface.

### Category

Ports

### Security

Provisioning

### Input Format

ED-EFM:[<TID>]:<AID>:<CTAG>:::[STATE=<STATE>],[MODE=<MODE>],[LFACTION=<LFACTION>],[SESSIONTIMER=<SESSIONTIMER>];

### Input Example

ED-EFM::ETH-12-1-1-1:::MODE=PASSIVE,LFACTION=ERROR-BLOCK,DGACTION=ERROR-BLOCK,SESSIONTIMER=40;

### Input Parameters

<AID>	Access identifier from the <a href="#">“26.16 ETH” section on page 26-40</a> .
<STATE>	Indicates whether the EFM is enabled or disabled on the port.
• ENABLE	Indicates the EFM is enabled on the port.
• DISABLE	Indicates the EFM is disabled on the port.
<MODE>	Indicates the mode of the EFM port.
• ACTIVE	The port is in the active state.
• PASSIVE	The port is in the passive state.
<LFACTION>	Action to be taken for the failure of the link on the port.
• RFACTION-NONE	No action.
• ERROR-BLOCK	Block the port.
<SESSIONTIMER>	Session expire timer for EFM (in seconds).

## 11.24 ED-ETH

(Cisco ONS 15454) The Edit Ethernet (ED-ETH) command edits the front-end port information of a 10/100/1000 Mbps Ethernet card.

### Usage Guidelines

The default values for all optional parameters are NE default values, but these values might not be the current value for a parameter. Use a retrieve command to obtain the current value.

The SELECTIVEAUTO parameter is applicable only when EXPSPEED and EXPDUPLEX are not set to AUTO mode.



### Note

This command is available in Software Release 8.0.1 and later. It is not available in R8.0 and earlier.

### Category

Ethernet

### Security

Provisioning

### Input Format

```
ED-ETH:[<TID>]:<AID>:<CTAG>:::[FLOW=<FLOW>],[EXPDUPLEX=<EXPDUPLEX>],[SELECTIVEAUTO=<SELECTIVEAUTO>],[EXPSPEED=<EXPSPEED>],[VLANCOS=<VLANCOSTHRESHOLD>],[IPTOS=<IPTOSTHRESHOLD>],[NAME=<NAME>],[CMDMDE=<CMDMDE>],[SUPPRESS=<SUPPRESS>],[SOAK=<SOAK>],[LIENABLE=<LIENABLE>],[LITIMER=<LITIMER>][:<PST>[:<SST>]];
```

### Input Example

```
ED-ETH:CISCO:FAC-1-1:123::FLOW=Y,EXPDUPLEX=HALF,EXPSPEED=10_MBPS,SELECTIVEAUTO=Y,VLANCOS=2,IPTOS=4,NAME="ETHPORT",CMDMDE=FRCD,SOAK=32,LIENABLE=Y,LITIMER=200:IS,AINS;
```

### Input Parameters

<AID>	Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the <a href="#">“26.16 ETH”</a> section on page 26-40.
<FACILITY>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40
<FLOW>	(Optional) Flow. The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.
<EXPDUPLEX>	(Optional) Ethernet duplex mode. The parameter type is ETHER_DUPLEX, which is the duplex mode.
• AUTO	Auto mode
• FULL	Full mode
• HALF	Half mode

<SELECTIVEAUTO>	(Optional) Selective auto-negotiation. The parameter is Y or N (enable or disable auto-negotiation). This indicates selective auto-negotiation of EXPSPEED and EXPDUPLEX only.
• Y	Enable selective auto-negotiation.
• N	Disable selective auto-negotiation.
<EXPSPEED>	(Optional) Ethernet speed. The parameter type is ETHER_SPEED, which is the Ethernet speed.
• 100_MBPS	100 Megabits per second
• 10_GBPS	10 Gigabits per second
• 10_MBPS	10 Megabits per second
• 1_GBPS	1 Gigabit per second
• 40_GBPS	40 Gigabit per second
• AUTO_FDX	Enable auto negotiation with full duplex
• AUTO	Auto
<VLANCOS>	(Optional) Priority queuing threshold based on VLAN class of service for incoming Ethernet packets. VLANCOS is an integer.
<IPTOS>	(Optional) Priority queuing threshold based on IP type of service for incoming Ethernet packets. IPTOS is an integer.
<NAME>	(Optional) Name. NAME is a string.
<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
<SUPPRESS>	Pre-service alarm flag for data ports.
• ON	Enable suppress.
• OFF	Disable suppress. Default is Off.
<SOAK>	(Optional) OOS-AINS to IS transition soak time as measured in 15-minute intervals. SOAK is an integer.
<LIENABLE>	(Optional) Enable or Disable link integrity timer. Takes either Y or N. Value Y enables the LITIMER and value N disables LITIMER.  By default LITIMER is enabled.
	<b>Note</b> The LIENABLE parameter is supported on only CE-1000-4 and CE-1000T-8 cards on the 15454.
<LITIMER>	(Optional) Link integrity timer duration in the range between 200 ms and 10000 ms in multiples on 100 ms.  <b>Note</b> The LITIMER parameter is supported on only CE-1000-4 and CE-1000T-8 cards on the 15454.
<PST>	Primary state. The parameter type is PST, which indicates the current overall service condition of an entity.
• IS	In service

• OOS	Out of service
<SST>	Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic in service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of equipment and attributes
• MT	Maintenance mode
• OOG	Out of group
• SWDL	Software downloading
• UAS	Unassigned
• UEQ	Unequipped

## 11.25 ED-EQPT

(Cisco ONS 15454) The Edit Equipment (ED-EQPT) command edits the attributes for a given equipment slot in the NE. If the card is in an equipment slot, this command is allowed only on the working AID.

The ED-EQPT command also modifies a shelf role from node controller (NC) to shelf controller (SC) on an NE configured in multishelf mode.

### Usage Guidelines

The PROTID parameter indicates the unique identifier of the protection group (the protect card). “NULL” is a special value of the PROTID parameter and indicates the absence of a protection group. For the 1:1 protection type, RVRTV and RVTM parameters can be changed. For the 1:1 protection type, if the PROTID parameter is entered as “NULL”, the protection group is deleted, as shown in the following command:

```
ED-EQPT:[<TID>]:SLOT-2:<CTAG>:::PROTID=NULL;
```

For the 1:N protection type, if the PROTID is “NULL,” the AIDs in the list are removed from the protection group. If all the working cards are in the AID list, the protection group is deleted.

For example, if Slot 1, Slot 2, and Slot 4 were the only working cards in the protection group, the following command would remove Slot 4 from the protection group:

```
ED-EQPT:[<TID>]:SLOT-4:<CTAG>:::PROTID=NULL;
```

The protection group still has Slot 1 and Slot 2 as working cards.

The following command will remove all the other working cards in the above example and consequently, delete the protection group itself:

```
ED-EQPT:[<TID>]:SLOT-2&SLOT-1:<CTAG>:::PROTID=NULL;
```

The ED-EQPT command can be successfully executed on an already provisioned card to add or remove a working card from a protection group. This command is not valid on a protect card. Only cards can be added to or removed from a protection group. Protection type is immutable and is determined at the time of creation of a protection group (while adding the first working card). After it is provisioned, the equipment type cannot be edited either.

Examples of adding an existing card to a protection group using the ED-EQPT command:

1:1 protection group:

ED-EQPT::SLOT-2:12:::PROTID=SLOT-1,RVRTV=Y,RVTM=9.0;

1:N protection group:

ED-EQPT::SLOT-2:12:::PROTID=SLOT-3,PRTYPE=1-N,RVTM=6.5;

Error conditions for editing a 1:1 or 1:N protection group might be:

- Editing the PRTYPE or PROTID (non-NULL value) parameters.
- Editing RVRTV or RVTM when no protection group exists.
- Editing RVRTV for 1:N protection.
- Failed to remove, currently switched to protect.
- CARDMODE provisioning is allowed on the DS3XM-12 cards as follows:
  - DS3XM-12 card provisioning is based on the XCON type and DS3XM-12 card's location. For example, the DS3XM-12 card in the lower speed I/O slot with the XCVT card only allows the DS3XM-12-ST512 CARDMODE. Other cases allow the CARDMODE to be DS3XM-12-ST548.
  - There is no card reboot if the CARDMODE is changed on the DS3XM-12 card.
  - The DS3XM-12 card can be upgraded or downgraded by changing the CARDMODE with the ED-EQPT command.

CMDMDE provisioning behaves as follows:

- If the command mode (CMDMDE) is set to NORM during the creation of a 1:1 or 1:N protection group, all cards must be physically plugged in and in the service state (IS). If the cards are not physically plugged in and are not in ready state, the command is denied with an appropriate error message. CMDMDE=FRCD will override the default behavior and allow creation of protection group regardless of the physical presence and ready state of cards.
- If the command mode is set to NORM during the removal of a card in a 1:1 or 1:N protection group, there must be no cross-connects (for example, services) present on the card. CMDMDE=FRCD will override the default behavior and allow deletion of protection group regardless of presence of cross-connects on the card.



**Note**

For the FC\_MR-4 card, the card mode cannot be changed to FCMR-LINERATE when the payload on any port is 1GFICON or 2GFICON. These payloads are allowed only in distance extension card mode.

**Category**

Equipment

**Security**

Provisioning

**Input Format**

ED-EQPT[:<TID>]:<AID>:<CTAG>[::PROTID=<PROTID>],[PRTYPE=<PRTYPE>],[RVRTV=<RVRTV>],[RVTM=<RVTM>],[CARDMODE=<CARDMODE>],[PEERID=<PEERID>],[REGENNAME=<REGENNAME>],[PEERNAME=<PEERNAME>],[CMDMDE=<CMDMDE>],[RETIME=<RETIME>],[SHELFROLE=<SHELFROLE>],[NEWSHELFID=<NEWSHELFID>],[FRPROLE=<FRPROLE>],[FRPSTATE=<FRPSTATE>],[FRPHOLDOFFTIME=<FRPHOLDOFFTIME>],[ADMINCVLAN=<ADMINCVLAN>],[ADMINSVLAN=<ADMINSVLAN>],[CFMSTATE=<CFMSTATE>],[CCTIMER

```
=<CCTIMER>],[PROTOPMODE=<PROTOPMODE>],[SWITCHWITHCRCALARM=<SWITCHWITHCRCALARM>],[CRCTHR=<CRCTHR>],[CRCPOLLINTRVL=<CRCPOLLINTRVL>],[CRCSOAKCNT=<CRCSOAKCNT>],[USB=<USB>][:<PST>[,<SST>]]];
```

**Input Example**

```
ED-EQPT::SLOT-15:a::CARDMODE=GEXP-L2ETH,SWITCHWITHCRCALARM=Y;
ED-EQPT::SLOT-15:a::CARDMODE=GEXP-L2ETH,CRCPOLINTRVL=4;
```

**Input Parameters**

<AID>	Access identifier from the “26.15 EQPT” section on page 26-37.
<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
• FRCD	Force the system to override a state where the command would normally be denied.
• NORM	Execute the command normally. Do not override any conditions that might make the command fail.
<CARDMODE>	Defines the card mode.
• 10GLAN-WAN-LINE-SQUELCH	Changes the card mode from LAN to WAN.
• DS1E1-DS1ONLY	DS1 mode on DS1E1 card.
• DS1E1-E1ONLY	E1 mode on DS1E1 card.
• DS1E1-E1MIXED	Hybrid/E1-retimed port usage profile.
• DS1E1-DS1MIXED	Hybrid/DS1-retimed port usage profile.
• DS3XM12-STS12	Indicates the DS3XM-12 card in the STS12 back plane rate mode.
• DS3XM12-STS48	Indicates the DS3XM-12 card in the STS12 back plane rate mode.
• DWDM-LINE	Line terminating mode.
• DWDM-SECTION	Section terminating mode.
• DWDM-TRANS-AIS	Transparent mode AIS.
• DWDM-TRANS-SQUELCH	Transparent mode SQUELCH.
• FCMR-DISTEXTN	FC-MR-4 card with Distance Extension support.
• FCMR-LINERATE	FC-MR-4 card without Distance Extension support.
• ML-GFP	ML1 series card in DOS FPGA using GFP framing type.
• ML-HDLC	ML1 series card in DOS FPGA using HDLC framing type.
• ML-IEEE-RPR	ML1 series card in DOS FPGA which supports Resilient Packet Ring (RPR).
• MXPMR25G-FCGE	Fiber channel or GIGE mode for the MXP-MR-2.5G.
• MXPMR10DME-FC-GEISC	Fiber channel, GIGE, or ISC mode for the Cisco ONS 15454 MXP-MR-10DME, MXP-MR-10DMEX card series.

• MXPMR10DME-FC-GEISC-4GFC	1..4 facilities with fiber channel, GIGE, or ISC traffic mode and facility 5 with 4 Gbps fiber channel traffic mode for the Cisco ONS 15454 MXP-MR-10DME, MXP-MR-10DMEX card series.
• MXPMR10DME-4GFC-FC-GEISC	Facility 1 with 4 Gbps fiber channel traffic mode and 5..8 facilities with fiber channel, GIGE, or ISC traffic mode for the Cisco ONS 15454 MXP-MR-10DME, MXP-MR-10DMEX card series.
• MXPMR10DME-4GFC	4 Gbps fiber channel traffic mode for the Cisco ONS 15454 MXP-MR-10DME, MXP-MR-10DMEX card series.
• PSM-NORMAL	PSM working in classic configuration.
• PSM-STANDALONE	PSM working in stand-alone mode.
• AMPL-BST	Booster mode for amplifier cards: OPT-AMP-L, OPT-AMP-17-C and OPT-AMP-23-C cards.
• AMPL-PRE	Pre-amplifier mode for amplifier cards: OPT-AMP-L, OPT-AMP-17-C and OPT-AMP-23-C cards.
• 10GEXP-TXP	10GE-XP behaves as two separate transponders, where client 1 is associated to trunk 3 and client 2 is associated to trunk 4.
• 10GEXP-L2ETH	10GE-XP behaves as an L2 Ethernet switch.
• GEXP-10x1Gx2-MXP	GE-XP behaves as a double Muxponder having ten 1 Gbps client facilities with one trunk. The first 10 GIGE clients are associated to the first trunk (21), while GIGE facilities from 11 to 20 are associated to trunk 22.
• GEXP-20x1G-MXP	GE-XP behaves as a single Muxponder having ten 1 Gbps client facilities with one trunk. Only the first 10 GIGE clients are associated to the first trunk (21) while the other facilities are unused.
• GEXP-L2ETH	GE-XP behaves as an L2 Ethernet Switch.
• CEMR-AUTO	Auto allocation of back-end channels for CE-MR-10 (Cisco ONS 15454 SONET only) cards.
• CEMR-MANUAL	Manual allocation of back-end channels for CE-MR-10 (Cisco ONS 15454 SONET only) cards.
• UNKNOWN	Unknown.
• WXC80-BIDI	80-WXC-C working in bidirectional mode.
• WXC80-DMX	80-WXC-C working as demultiplexer.
• WXC80-MUX	80-WXC-C working as multiplexer.
• 40G-MXP-MUXPONDER	40G-MXP-MUXPONDER working as multiplexer.
• 40G-MXP-UNIDIR-REGEN	40G-MXP-UNIDIR-REGEN working as regenerator.
<FRPHOLDOFFTIME>	Indicates the hold off timer value. The protection does not start until the hold off time expires.
• 100-MSEC	Indicates the hold off timer value as 100 milliseconds.
• 1-MSEC	Indicates the hold off timer value as 1milisecond.
• 200-MSEC	Indicates the hold off timer value as 200 milliseconds.
• 2-MSEC	Indicates the hold off timer value as 2 milliseconds.
• 500-MSEC	Indicates the hold off timer value as 500 milliseconds.

• 50-MSEC	Indicates the hold off timer value as 50 milliseconds.
• 5-MSEC	Indicates the hold off timer value as 50 milliseconds.
• DISABLED	Indicates that the hold off timer is disabled.
<ADMINCVLAN>	Customer VLAN identifier for REP. ADMINCVLAN is a number between 1 and 4096. The value 0 is reserved to untagged VLAN.
<ADMINSVLAN >	Service provider VLAN identifier for REP. ADMINSVLAN is a number between 1 and 4096. The value 0 is reserved to untagged VLAN.
<CFMSTATE>	Link Integrity status.
• Y	Enabled
• N	Disabled
<CCTIMER>	Indicates continuity check message timer.
• ONE-MIN	1 minute.
• ONE-SEC	1 second.
• TEN-SEC	10 seconds.
<PROTOPMODE>	PROTOPMODE
<FRPROLE>	Indicates the fast ring protection enable mode for GE-XP/10GE-XP units involved in a protection scheme.
• MASTER	Role is of card master of the ring.
• SLAVE	Role is of card slave of the ring.
<FRPSTATE>	Indicates the fast ring protection enable state.
• DISABLED	Disabled protection
• ENABLED	Enabled protection
• FORCED	Forced protection
<NEWSHELFID>	(Optional) New shelf identifier is used to change the value of the shelf identifier for the addressed shelf. The value must be different by one and can be in the range from two to eight. This field can only be changed if (in the same command) the SHELFROLE is equal to SC. Integer.
<PEERID>	The regeneration peer slot from the <a href="#">“26.9 CHGRP” section on page 26-24.</a>
<PROTID>	(Optional) Protection group name. PROTID is a string.
<REGENNAME>	The name of a regeneration group. REGENNAME is a string.
<RETIME>	(Optional) Indicates the RETIME function for all the facilities on this card. The parameter type is ON_OFF (disable or enable an attribute). (Supported on the DS1/E1-56 card for the Cisco ONS 15454 platform).
• N	Disable an attribute.
• Y	Enable an attribute.
<RVRTV>	(Optional) Revertive mode. The value Y indicates that protection switching system reverts service to the original line after restoration. The value N indicates that protection switching system does not revert service to the original line after restoration. RVRTV is applicable only for 1+1 protection switching. Defaults to N, non-revertive.

• N	Does not revert service to original line after restoration.
• Y	Reverts service to original line after restoration.
<RVTM>	(Optional) Revertive time. The parameter type is REVERTIVE_-TIME (revertive time).
• 0.5 to 12.0	Revertive time is 0.5 to 12.0 minutes.
<SWITCHWITHCRCA-LARM>	Switch the GZ card with CRC Alarms
<CRCTHR>	CRC threshold values beyond which alarms are raised. The available threshold values are 10E-2, 10E-3, and 10E-4.
<CRCPOLLINTRVL>	Interval of time after which the polling starts.
<CRCSOAKCNT>	Number of poll cycles during which defect is integrated. The value ranges from 3 to 10.
<USB>	Identifies the USB port where a passive unit is connected.
<PST>	(Optional) Primary state. The parameter type is PST, which indicates the current overall service condition of an entity.
• Unlocked	In service
• Locked	Out of service
<SHELFROLE>	The role of the shelf in the context of the node. When it is omitted it defaults to SC. The parameter is SHELF_ROLE.
<SST>	(Optional) Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AutomaticInService	Automatic in service
• Disabled	Disabled
• Loopback	Loopback
• MismatchofEquipmentAlarm	Mismatch of equipment and attributes
• Maintenance	Maintenance mode
• OutOfGroup	Out of group
• SoftwareDownload	Software downloading
• Unassigned	Unassigned
• NotInstalled	Unequipped

## 11.26 ED-FAC

(Cisco ONS 15454) The Edit Facility (ED-FAC) command provisions the payload (or signal) type of facility. The default values for all optional parameters are NE default values. These values might not be the current value for a parameter. Use a retrieve command to obtain the current value.

### Usage Guidelines

The DS3/EC1 values for the payload parameter are applicable to the following cards:

- DS3/EC1-48 (ONS 15454)"

### Category

Ports

**Security**

Provisioning

**Input Format**

```
ED-FAC:[<TID>]:<SRC>:<CTAG>:::[PAYLOAD=<PAYLOAD>],
[CMDMDE=<CMDMDE>]:[<PST>[,<SST>]];
```

**Input Example**

```
ED-FAC:PETALUMA:FAC-3-9:2222:::PAYLOAD=E4-FRAMED,CMDMDE=FRCD:IS,AINS;
```

**Input Parameters**

<SRC>	Source access identifier from the <a href="#">“26.17 FACILITY” section on page 26-40.</a>
<PAYLOAD>	The payload for the card. The parameter type is PAYLOAD, which identifies the payload type.
<ul style="list-style-type: none"> <li>• DS3</li> </ul>	DS3/T3 facility
<ul style="list-style-type: none"> <li>• EC1</li> </ul>	EC1 facility
<ul style="list-style-type: none"> <li>• E3</li> </ul>	E3 facility
<ul style="list-style-type: none"> <li>• OC3</li> </ul>	OC3 facility
<ul style="list-style-type: none"> <li>• OC12</li> </ul>	OC12 facility
<ul style="list-style-type: none"> <li>• OC48</li> </ul>	OC48 facility
<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
<ul style="list-style-type: none"> <li>• FRCD</li> </ul>	Force the system to override a state where the command would normally be denied.
<ul style="list-style-type: none"> <li>• NORM</li> </ul>	Execute the command normally. Do not override any conditions that might make the command fail.
<PST>	Primary state. Defaults to IS. The parameter type is PST, which indicates the current overall service condition of an entity.
<ul style="list-style-type: none"> <li>• IS</li> </ul>	In service
<ul style="list-style-type: none"> <li>• OOS</li> </ul>	Out of service
<SST>	Secondary state. Defaults to AINS. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
<ul style="list-style-type: none"> <li>• AINS</li> </ul>	Automatic in service
<ul style="list-style-type: none"> <li>• DSBLD</li> </ul>	Disabled
<ul style="list-style-type: none"> <li>• MT</li> </ul>	Maintenance mode

## 11.27 ED-FFP-<MOD2DWDMPAYLOAD>

(Cisco ONS 15454) The Edit Facility Protection Group for 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 4GFC, 4GFICON, 8GFC, D1VIDEO, DV6000, DVBASI, ETRCLO, FSTE, GIGE, HDTV, ISC1, or OTU3 (ED-FFP-<MOD2DWDMPAYLOAD>) command edits a Y-cable protection group on client facilities.

### Usage Guidelines

None

### Category

DWDM

### Security

Provisioning

### Input Format

ED-FFP-<MOD2DWDMPAYLOAD>:[<TID>]:<AID>:<CTAG>:::[PROTID=<PROTID>],  
[RVRTV=<RVRTV>],[RVTM=<RVTM>],[PSDIRN=<PSDIRN>][:];

### Input Example

ED-FFP-1GFC:CISCO:FAC-1-1:100::PROTID=DC-METRO,RVRTV=N,RVTM=1.0,PSDIRN=BI;

### Input Parameters

<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
<PROTAID>	The protection group identifier (protection group name). Defaults to the protecting port AID of the protection group. PROTAID can have a maximum length of 32 characters. It is a string.
<RVRTV>	Revertive mode. The value Y indicates that protection switching system reverts service to the original line after restoration. The value N indicates that protection switching system does not revert service to the original line after restoration. RVRTV is applicable only for 1+1 protection switching. Null defaults to N. Only applies to path protection configurations. The parameter type is ON_OFF, which disables or enables an attribute. <ul style="list-style-type: none"> <li>• N Does not revert service to original line after restoration.</li> <li>• Y Reverts service to original line after restoration.</li> </ul>
<RVTM>	Revertive time. RVTM is not allowed to be set while “RVRTV” is N. Only applies to path protection configurations. The parameter type is REVERTIVE_TIME (revertive time). <ul style="list-style-type: none"> <li>• 0.5 to 12.0 Revertive time is 0.5 to 12.0 minutes.</li> </ul>

<PSDIRN>	Protection switch operation. Identifies the switching mode. Defaults to UNI.  <b>Note</b> The MXP_2.5G_10G and TXP_MR_10G cards do not support bidirectional switching.  The parameter type is UNI_BI (unidirectional switch operations).
• BI	Bidirectional protection switching
• UNI	Unidirectional protection switching

## 11.28 ED-FFP-<OCN\_TYPE>

(Cisco ONS 15454) The Edit Facility Protection Group for OC3, OC12, OC48, OC192, or OC768 (ED-FFP-<OCN\_TYPE>) command edits the optical facility protection.

### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.



#### Note

- This command can be used on both protecting and working AIDs. Optimized 1+1 and related attributes are only applicable to the ONS 15454.
- Optimized 1+1 and related attributes are only applicable to ONS 15454.
- The default values for all optional parameters are NE default values. These values might not be the current value for a parameter. Use a retrieve command obtain the current value.

### Category

Protection

### Security

Provisioning

### Input Format

```
ED-FFP-<OCN_TYPE>:[<TID>]:<AID>:<CTAG>:::[PROTID=<PROTID>],
[RVRTV=<RVRTV>],[RVTM=<RVTM>],[PSDIRN=<PSDIRN>],[VRGRDTM=<VRGRDTM>],
[DTGRDTM=<DTGRDTM>],[RCGRDTM=<RCGRDTM>][:];
```

### Input Example

```
ED-FFP-OC3:PETALUMA:FAC-1-1:1:::PROTID=PROT_NAME,RVRTV=Y,RVTM=1.0,
PSDIRN=BI,VRGRDTM=0.5,DTGRDTM=1.0,RCGRDTM=1.0;
```

### Input Parameters

<AID>	Access identifier from the <a href="#">“26.17 FACILITY” section on page 26-40</a> .
<PROTAID>	The protection group identifier (protection group name). PROTAID can have a maximum length of 32 characters. It is a string.

<RVRTV>	Revertive mode. The value Y indicates that protection switching system reverts service to the original line after restoration. The value N indicates that protection switching system does not revert service to the original line after restoration. RVRTV is applicable only for 1+1 protection switching. Null defaults to N. The parameter type is ON_OFF, which disables or enables an attribute.
• N	Does not revert service to original line after restoration.
• Y	Reverts service to original line after restoration.
<RVTM>	Revertive time. The parameter type is REVERTIVE_TIME (revertive time).
• 0.5 to 12.0	Revertive time is 0.5 to 12.0 minutes.
<PSDIRN>	Protection switch operation. Indicates the switch mode. Defaults to UNI. The parameter type is UNI_BI (unidirectional and bidirectional switch operations).
• BI	Bidirectional protection switching
• UNI	Unidirectional protection switching
<VRGRDTM>	Verification guard timer. Only applicable to optimized 1+1. The parameter type is VERIFICATION_GUARD_TIMER (optimized 1+1 verification guard timer).
• 0.5	500 milliseconds
• 1.0	1 second
<DTGRDTM>	Detection guard timer. Only applicable to optimized 1+1. The parameter type is DETECTION_GUARD_TIMER (optimized 1+1 detection guard timer).
• 0.0	0 seconds
• 0.05	50 milliseconds
• 0.1	100 milliseconds
• 0.5	500 milliseconds
• 1.0 to 5.0	1 second to 5 seconds
<RCGRDTM>	Recovery guard timer. Only applicable to optimized 1+1. The parameter type is RECOVERY_GUARD_TIMER (optimized 1+1 recovery guard timer).
• 0.0	0 seconds
• 0.05	50 milliseconds
• 0.1	100 milliseconds
• 0.5	500 milliseconds
• 1.0 to 10.0	1 second to 10 seconds

## 11.29 ED-FFP-OCH

(Cisco ONS 15454) The Edit Facility Protection Group Optical Channel (ED-FFP-OCH) command changes the provisioning for the default protection group on the DWDM port of a TXP\_MR\_2.5G and TXPP\_MR\_2.5G card.

**Usage Guidelines** None

**Category** DWDM

**Security** Provisioning

**Input Format** ED-FFP-OCH:[<TID>]:<AID>:<CTAG>:::[PROTID=<PROTID>],[RVRTV=<RVRTV>],[RVTM=<RVTM>],[PSDIRN=<PSDIRN>][:];

**Input Example** ED-FFP-OCH:VA454-22:CHAN-2-2:100:::PROTID="FIXEDPROTECTION",RVRTV=N,RVTM=1.0,PSDIRN=BI;

<b>Input Parameters</b>	<AID>	Access identifier from the <a href="#">"26.8 CHANNEL" section on page 26-22</a> .
	<PROTAID>	The protection group identifier (protection group name). PROTAID is a string.
	<RVRTV>	Revertive mode. The value Y indicates that protection switching system reverts service to the original line after restoration. The value N indicates that protection switching system does not revert service to the original line after restoration. RVRTV is applicable only for 1+1 protection switching. Null defaults to N. The parameter type is ON_OFF, which disables or enables an attribute.
	<ul style="list-style-type: none"> <li>• N</li> <li>• Y</li> </ul>	<ul style="list-style-type: none"> <li>Does not revert service to original line after restoration.</li> <li>Reverts service to original line after restoration.</li> </ul>
	<RVTM>	Revertive time. The parameter type is REVERTIVE_TIME (revertive time).
	<ul style="list-style-type: none"> <li>• 0.5 to 12.0</li> </ul>	Revertive time is 0.5 to 12.0 minutes
	<PSDIRN>	Protection switch operation. The parameter type is TRANS_MODE (G1000 transponder mode)
	<ul style="list-style-type: none"> <li>• BI</li> <li>• NONE</li> <li>• UNI</li> </ul>	<ul style="list-style-type: none"> <li>Bidirectional</li> <li>Not in transponder mode</li> <li>Unidirectional</li> </ul>

## 11.30 ED-FFP-OTS

(Cisco ONS 15454)

The Edit Facility Protection Group OTS (ED-FFP-OTS) command changes provisioning for the Y-cable or splitter protection group on the OTU2-XP card

### Usage Guidelines

The default values for all optional parameters are NE default values. These values might not be the current value for a parameter. Use a retrieve command to obtain the current value.

### Category

DWDM

### Security

Provisioning

### Input Format

ED-FFP-OTS:[<TID>]:<AID>:<CTAG>:::[PROTID=<PROTID>],[RVRTV=<RVRTV>],[RVTM=<RVTM>],[PSDIRN=<PSDIRN>][:];

### Input Example

ED-FFP-OTS:VA454-22:CHAN-2-2:100:::PROTID="FIXED PROTECTION",RVRTV=N,RVTM=1.0,PSDIRN=BI;

**Table 11-3** Parameter Support

Parameter	Description
<AID>	Access identifier from the <a href="#">"26.8 CHANNEL" section on page 26-22</a> .
<PROTAID>	The protection group identifier (protection group name). PROTAID is a string.
<RVRTV>	(Optional) Revertive mode. The value Y indicates that protection switching system reverts service to the original line after restoration. The value N indicates that protection switching system does not revert service to the original line after restoration. RVRTV is applicable only for 1+1 protection switching. Null defaults to N. The parameter type is ON_OFF (disable or enable an attribute). <ul style="list-style-type: none"> <li>N Does not revert service to original line after restoration.</li> <li>Y Reverts service to original line after restoration.</li> </ul>
<RVTM>	(Optional) Revertive time. The parameter type is REVERTIVE_TIME (revertive time). <ul style="list-style-type: none"> <li>0.5 to 12.0 Revertive time is 0.5 to 12.0 minutes.</li> </ul>
<PSDIRN>	(Optional) Protection switch operation. The parameter type is TRANS_MODE, which is the G1000 transponder mode. <ul style="list-style-type: none"> <li>BI Bidirectional</li> </ul>

**Table 11-3** Parameter Support

Parameter	Description
• NONE	Not in transponder mode
• UNI	Unidirectional

## 11.31 ED-FOG

(Cisco ONS 15454) The Edit Fan-Out-Group (ED-FOG) command adds and deletes the members connecting to the CPT 50 panel and applied on the carrier packet transport (CPT) system.

### Usage Guidelines

The interfaces that can be attached should be valid for the FOG. At least one interface must be always attached to the FOG.

### Category

Equipment

### Security

Provisioning

### Input Format

ED-FOG:[<TID>]:<AID>:<CTAG>:::[ATTACH=<ATTACH>],[DETACH=<DETACH>];

### Input Examples

ED-FOG::FOG-1-36:1::ATTACH=FAC-2-2-1;

### Input Parameters

<AID>	Access identifier from the <a href="#">“26.15 EQPT” section on page 26-37</a> .
<ATTACH>	AID of the fabric and line card ports used as the Fan-out members. This is the AID of the interface to be attached to the FOG.
<DETACH>	AID of the fabric and line card ports used as the Fan-out members. This is the AID of the interface to be detached from the FOG.

## 11.32 ED-FSTE

(Cisco ONS 15454) The Edit Fast Ethernet (ED-FSTE) command edits the front-end port information of the fast (10/100 Mbps) Ethernet card.

### Usage Guidelines

The default values for all optional parameters are NE default values. These values might not be the current value for a parameter. Use a retrieve command to obtain the current value.

The SELECTIVEAUTO parameter is applicable only when EXPSPEED and EXPDUPLEX are not set to AUTO mode.

**Note**

For the ML-100T-8 card, only the NAME parameter can be set.

**Category**

Ports

**Security**

Provisioning

**Input Format**

```
ED-FSTE[:<TID>]:<SRC>:<CTAG>[:::FLOW=<FLOW>],[EXPDUPLICATION=<EXPDUPLICATION>],[EXPSP
EED=<EXPSPEED>],[SELECTIVEAUTO=<SELECTIVEAUTO>],[VLANCOS=<VLANCOSTHRE
SHOLD>],[IPTOS=<IPTOSTHRESHOLD>],[NAME=<NAME>],[CMDMDE=<CMDMDE>],[SUPP
RESS=<SUPPRESS>],[SOAK=<SOAK>],[LIENABLE=<LIENABLE>],[LITIMER=<LITIMER>],[F
REQ=<FREQ>],[LOSSB=<LOSSB>],[CIR=<CIR>],[CBS=<CBS>],[EBS=<EBS>],[OSC=<OSC>][:
<PST>[,<SST>]];
```

**Input Example**

```
ED-FSTE:CISCO:FAC-1-1:123:::FLOW=Y,EXPDUPLICATION=HALF,EXPSPEED=10_MBPS,
SELECTIVEAUTO=Y,VLANCOS=2,IPTOS=4,NAME="FSTEPOR",CMDMDE=FRCD,
SUPPRESS=Y,SOAK=32,LIENABLE=Y,LITIMER=200:IS,AINS;
```

**Input Parameters**

<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
<FLOW>	Flow control. The parameter type is ON_OFF, which disables or enables an attribute. <ul style="list-style-type: none"> <li>N Disable an attribute.</li> <li>Y Enable an attribute.</li> </ul>
<EXPDUPLICATION>	Ethernet duplex mode. The parameter type is ETHER_DUPLEX (duplex mode). <ul style="list-style-type: none"> <li>AUTO Auto mode</li> <li>FULL Full mode</li> <li>HALF Half mode</li> </ul>
<EXPSPEED>	Ethernet speed. The parameter type is ETHER_SPEED (Ethernet speed). <ul style="list-style-type: none"> <li>100_MBPS 100 Megabits per second</li> <li>10_GBPS 10 Gigabits per second</li> <li>10_MBPS 10 Megabits per second</li> <li>1_GBPS 1 Gigabits per second</li> <li>40_GBPS 40 Gigabit per second</li> <li>AUTO_FDX Enable auto negotiation with full duplex</li> <li>AUTO Auto</li> </ul>

<SELECTIVEAUTO>	(Optional) Selective auto-negotiation. The parameter is Y or N (enable or disable auto-negotiation). This indicates selective auto-negotiation of EXPSPEED and EXPDUPLEX only.
• Y	Enable selective auto-negotiation.
• N	Disable selective auto-negotiation.
<VLANCOS>	Priority queuing threshold based on VLAN class of service of incoming Ethernet packets. Default value is 1175. VLANCOS is an integer.
<IPTOS>	Priority queuing threshold based on IP type of service of incoming Ethernet packets. Default value is 368. IPTOS is an integer.
<NAME>	Name. NAME is a string.
<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
• FRCD	Force the system to override a state where the command would normally be denied.
• NORM	Execute the command normally. Do not override any conditions that might make the command fail.
<SUPPRESS>	Pre-service alarm flag for data ports.
• ON	Enable suppress.
• OFF	Disable suppress. Default is Off.
<SOAK>	OOS-AINS to IS transition soak time as measured in 15 minute intervals, so a value of 4 translates to a soak time of 1 hour. The allowable range is 0 to 192 intervals (maximum of 48 hours). SOAK is an integer.
<LIENABLE>	(Optional) Enable or Disable link integrity timer. Takes either Y or N. Value Y enables the LITIMER and value N disables LITIMER. By default LITIMER is enabled. <b>Note</b> The LIENABLE parameter is supported on only CE-1000-4 and CE-1000T-8 cards on the 15454.
<LITIMER>	(Optional) Link integrity timer duration in the range between 200 ms and 10000 ms in multiples on 100 ms. <b>Note</b> The LITIMER parameter is supported on only CE-1000-4 and CE-1000T-8 cards on the 15454.
<FREQ>	(Optional) The parameter type is OPTICAL_WLEN, which indicates the optical wavelength.
• 1310	Wavelength 1310.
<LOSSB>	(Optional) The parameter type is REACH, which indicates the reach values.
• AUTOPROV	Auto provisioning
• CWDM	Coarse wavelength division multiplexing (CWDM)
• CX1	Reach CX1
• LR	Reach LR

• LR-2	Reach LR-2
• LX	Reach LX
• SR	Reach SR
• TEN-GE-ER	10 GE extended range
• TEN-GE-LR	10 GE long range
• TEN-GE-SR	10 GE short range
<CIR>	Ingress committed information rate. This is a value between 0 and 100. Default value is - 100.
<CBS>	Ingress committed burst bucket size.
4K	4 Kbit bucket size
8K	8 Kbit bucket size
16K	16 Kbit bucket size
32K	32 Kbit bucket size
64K	64 Kbit bucket size
128K	128 Kbit bucket size
256K	256 Kbit bucket size
512K	512 Kbit bucket size
1M	1 Mbit bucket size
2M	1 Mbit bucket size
4M	4 Mbit bucket size
8M	8 Mbit bucket size
16M	16 Mbit bucket size
<EBS>	Ingress excess burst bucket size.
<OSC>	To enable or disable the OSC on the port. <b>Note</b> The OSC parameter is supported only on 15454-M2 and 15454-M6.
<PST>	Primary state. The parameter type is PST, which indicates the current overall service condition of an entity.
• IS	In service
• OOS	Out of service
<SST>	Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic in service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of equipment and attributes
• MT	Maintenance mode
• OOG	Out of group
• SWDL	Software downloading
• UAS	Unassigned
• UEQ	Unequipped

## 11.33 ED-FTPSERVER

(Cisco ONS 15454) The Edit FTP Server (ED-FTPSERVER) command edits FTP server entries.

### Usage Guidelines

This command is used to edit only the ENABLE and TIMER parameters.

### Category

ENE

### Security

Superuser

### Input Format

```
ED-FTPSERVER:[<TID>]::<CTAG>:::IPADDR=<IPADDR>,[ENABLE=<ENABLE>],
[TIMER=<TIMER>];
```

### Input Examples

- ED-FTPSERVER::A:::IPADDR=10.20.30.40,ENABLE=Y,TIMER=30;
- ED-FTPSERVER:TID::CTAG:::IPADDR="[3ffe:0501:0008:0000:0260:97ff:fe40:efab]",ENABLE=Y  
,  
TIMER=45;

### Input Parameters

<IPADDR>	Specifies the IP address of the FTP server.
<ENABLE>	Specifies the enable/disable option of the FTP server. The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.
<TIMER>	(Optional) Specifies the timeout value of the FTP server in minutes. Timer is an integer that can be set between 0 and 60 minutes.

## 11.34 ED-G1000

(Cisco ONS 15454) The Edit G1000 (ED-G1000) command edits the attributes related to a G1000 port.

### Usage Guidelines

The default values for all optional parameters are NE default values. These values might not be the current value for a parameter. Use a retrieve command to obtain the current value.

### Category

Ports

### Security

Provisioning

**Input Format**

```
ED-G1000:[<TID>]:<AID>:<CTAG>:::[MFS=<MFS>],[FLOW=<FLOW>],
[LOWMRK=<LOWMRK>],[HIWMRK=<HIWMRK>],[AUTONEG=<AUTONEG>],
[NAME=<NAME>],[CMDMDE=<CMDMDE>],[SOAK=<SOAK>],[LIENABLE=<LIENABLE>],
[LITIMER=<LITIMER>]:[<PST>[,<SST>]];
```

**Input Example**

```
ED-G1000:PETALUMA:FAC-1-1:CTAG:::MFS=1548,FLOW=Y,LOWMRK=20,HIWMRK=492,
AUTONEG=Y,NAME="G1000 PORT",CMDMDE=FRCD,SOAK=32,LIENABLE=Y
LITIMER=300:OOS,DSBLD;
```

**Input Parameters**

<AID>	Access identifier from the “26.17 FACILITY” section on page 26-40.
<MFS>	Maximum frame size. the parameter type is MFS_TYPE, which is the maximum frame size used by an Ethernet card.
<ul style="list-style-type: none"> <li>1548</li> <li>JUMBO</li> </ul>	<p>Normal frame size</p> <p>Jumbo frame size</p>
<FLOW>	Flow control. The parameter type is ON_OFF, which disables or enables an attribute.
<ul style="list-style-type: none"> <li>N</li> <li>Y</li> </ul>	<p>Disable an attribute.</p> <p>Enable an attribute.</p>
<LOWMRK>	Low watermark value. LOWMRK is an integer. Defaults to 25. LOWMRK is available in Software Release 4.0.1 and later.
<HIWMRK>	High watermark value. HIWMRK is an integer. Defaults to 485.
<AUTONEG>	Automatic negotiation. Defaults to Y. The parameter type is ON_OFF, which disables or enables an attribute.
<ul style="list-style-type: none"> <li>N</li> <li>Y</li> </ul>	<p>Disable an attribute.</p> <p>Enable an attribute.</p>
<NAME>	Name. NAME is a string. Default is NULL. Maximum length is 32 characters.
<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
<ul style="list-style-type: none"> <li>FRCD</li> <li>NORM</li> </ul>	<p>Force the system to override a state where the command would normally be denied.</p> <p>Execute the command normally. Do not override any conditions that might make the command fail.</p>
<SOAK>	OOS-AINS to IS transition soak time as measured in 15-minute intervals. A value of 4 equals a soak time of 1 hour. The allowable range is 0 to 192 intervals (maximum of 48 hours). SOAK is an integer. Defaults to 32.

<LIENABLE>	(Optional) Enable or Disable link integrity timer. Takes either Y or N. Value Y enables the LITIMER and value N disables LITIMER. By default LITIMER is enabled. <b>Note</b> The LIENABLE parameter is supported on only CE-1000-4 and CE-1000T-8 cards on the 15454.
<LITIMER>	(Optional) Link integrity timer duration in the range between 200 ms and 10000 ms in multiples on 100 ms. <b>Note</b> The LITIMER parameter is supported on only CE-1000-4 and CE-1000T-8 cards on the 15454.
<ENCAP>	(Optional) Frame encapsulation type. The parameter type is ENCAP, which is the frame encapsulation type.
• GFP_F	GFP frame mode.
• GFP_T	GFP transparent mode.
• HDLC	HDLC frame mode.
• HDLC_LEX	HDLC LAN extension frame mode.
• HDLC_X86	HDLC X.86 frame mode.
<PST>	Primary state. Defaults to OOS. The parameter type is PST, which indicates the current overall service condition of an entity.
• IS	In service
• OOS	Out of service
<SST>	Secondary state. Defaults to DSBLD. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic in service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of equipment and attributes
• MT	Maintenance mode
• OOG	Out of group
• SWDL	Software downloading
• UAS	Unassigned
• UEQ	Unequipped

## 11.35 ED-GFP

(Cisco ONS 15454) The Edit Generic Framing Protocol (ED-GFP) command edits GFP parameters on the ONS 15454 CE-100T-8 AND FC\_MR-4, CE-1000-4 cards.

### Usage Guidelines

- For the FC\_MR-4 card, the parameters AUTOTHGFPBUF, GFPBUF, and FILTER can be edited only if distance extension is enabled (set to B2B).
- On POS ports of CE-MR-10 card, FCS cannot be set to NONE when the encapsulation is set to GFP.

<b>Category</b>	Ports
<b>Security</b>	Provisioning
<b>Input Format</b>	ED-GFP:[<TID>]:<AID>:<CTAG>:::[FCS=<FCS>],[AUTOTHGFPBUF=<AUTOTHGFPBUF>],[GFPBUF=<GFPBUF>],[FILTER=<FILTER>];
<b>Input Example</b>	ED-GFP:PETALUMA:VFAC-1-0:123:::FCS=N,AUTOTHGFPBUF=Y,GFPBUF=16,FILTER=INGRESS;

<b>Input Parameters</b>	<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.  <b>Note</b> VFAC AID is used for the CE-100T-8 cards on the ONS 15454. ML-100T-8 GFP management is done through the Cisco IOS command-line interface (CLI) and not through the TL1 interface. The FAC AID is used for the ONS 15454 FC_MR-4.
	<FCS>	Payload frame check sequence. The parameter type is FCS (frame check sequence).
	<ul style="list-style-type: none"> <li>• FCS-16</li> <li>• FCS-32</li> <li>• NONE</li> </ul>	<ul style="list-style-type: none"> <li>Frame check sequencing using 16 bits</li> <li>Frame check sequencing using 32 bits</li> <li>No frame check sequence</li> </ul>
	<AUTOTHGFPBUF>	The parameter type is ON_OFF, which disables or enables an attribute.
	<ul style="list-style-type: none"> <li>• N</li> <li>• Y</li> </ul>	<ul style="list-style-type: none"> <li>Disable an attribute.</li> <li>Enable an attribute.</li> </ul>
	<FILTER>	The parameter type is GFP_FILTER, which is the filter feature in GFP.
	<ul style="list-style-type: none"> <li>• INGRESS</li> <li>• NONE</li> </ul>	<ul style="list-style-type: none"> <li>Activate filter feature on the egress port.</li> <li>Turn off filter feature.</li> </ul>

## 11.36 ED-HDLC

(Cisco ONS 15454) The Edit High-Level Data Link Control (ED-HDLC) command edits HDLC-related attributes for HDLC-encapsulated payloads.

<b>Usage Guidelines</b>	None
-------------------------	------

<b>Category</b>	Ports
-----------------	-------

**Security** Provisioning

**Input Format** ED-HDLC[:<TID>]:<SRC>:<CTAG>[::FCS=<FCS>][CRC=<CRC>];

**Input Example** ED-HDLC:PETALUMA:VFAC-1-1-PORT:CTAG:::FCS=FCS-16,CRC=CRC-32;

<b>Input Parameters</b>	<SRC>	Access identifier from the “ <a href="#">26.17 FACILITY</a> ” section on page 26-40.
	<FCS>	Payload frame check sequence. The parameter type is FCS (frame check sequence).
	<ul style="list-style-type: none"> <li>FCS-16</li> <li>FCS-32</li> <li>NONE</li> </ul>	<ul style="list-style-type: none"> <li>Frame check sequence using 16 bits</li> <li>Frame check sequence using 32 bits</li> <li>No frame check sequence</li> </ul>
	<CRC>	Cyclic Redundancy Check.
		<b>Note</b> CRC is applicable only to ADM10G card.
	<ul style="list-style-type: none"> <li>CRC-16</li> <li>CRC-32</li> </ul>	<ul style="list-style-type: none"> <li>Cyclic Redundancy Check using 16 bits.</li> <li>Cyclic Redundancy Check using 32 bits.</li> </ul>

## 11.37 ED-L2-ETH

(Cisco ONS 15454) The Edit Layer 2 Ethernet (ED-L2-ETH) command edits the layer 2 port information of GE-XP and 10GE-XP Ethernet cards.

**Usage Guidelines** The default values for all optional parameters are NE default values, but these values might not be the current value for a parameter. Use a retrieve command to obtain the current value.

**Category** Ethernet

**Security** Provisioning

**Input Format** ED-L2-ETH[:<TID>]:<AID>:<CTAG>[::NIMODE=<NIMODE>],[MACLEARNING=<MACLEAR  
NING>],[INGRESSCOS=<INGRESSCOS>],[ETHERCETYPE=<ETHER\_CE\_TYPE>],[ETHERSTY  
PE=<ETHER\_S\_TYPE>],[ALWMACADDR=<ALW\_MAC\_ADDR>],[INHMADDR=<INH\_MAC  
\_ADDR>],[BPDU=<BPDU>],[BRIDGESTATE=<BRIDGE\_STATE>],[QNQMODE=<QNQMODE>],  
[TRNSPSVLAN=<TRNSP\_SVLAN>],[NAME=<NAME>],[IGMPROUTER=<IGMPROUTER>],[AI  
SACTION=<AISACTION>],[PROTACTION=<PROTACTION>],[CMDMDE=<CMDMD>],[IGMPO

```
NCVLAN=<IGMPONCVLAN>],[IGMPCVLAN=<IGMPCVLAN>],[DLF=<DLF>],[DLFTHRES=<DLFTHRES>],[MCAST=<MCAST>],[MCASTTHRES=<MCASTTHRES>],[BCAST=<BCAST>],[BCASTTHRES=<BCASTTHRES>],[CLRCRCALM=<CLRCRCALM>][:];
```

**Input Example**

```
"ETH-2-21-1::NIMODE=NNI,MACLEARNING=N,INGRESSCOS=0,ETHERCETYPE=8100,ETHERSTYPE=8100,BPDU=N,BRIDGESTATE=FORWARDING,ACTBRIDGESTATE=UNKNOWN,QNQM
ODE=SELECTIVE,IGMPROUTER=NONE,AISACTION=AIS-NONE,PROTACTION=PROT-SQU
ELCH,IGMPONCVLAN=N,DLF=N,DLFTHRES=0,MCAST=N,MCASTTHRES=0,BCAST=N,BCASTTHRES=0,CLRCRCALM=N:"
```

```
"ETH-2-22-1::NIMODE=NNI,MACLEARNING=N,INGRESSCOS=0,ETHERCETYPE=8100,ETHERSTYPE=8100,BPDU=N,BRIDGESTATE=FORWARDING,ACTBRIDGESTATE=UNKNOWN,QNQM
ODE=SELECTIVE,IGMPROUTER=NONE,AISACTION=AIS-NONE,PROTACTION=PROT-SQU
ELCH,IGMPONCVLAN=N,DLF=N,DLFTHRES=0,MCAST=N,MCASTTHRES=0,BCAST=N,BCASTTHRES=0,CLRCRCALM=Y:"
```

**Input Parameters**

<AID>	Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the <a href="#">“26.16 ETH” section on page 26-40</a> .
<NIMODE>	Identifies the Ethernet Network Interface Mode.
<ul style="list-style-type: none"> <li>• NNI</li> <li>• UNI</li> </ul>	(Default) Network-Network Interface Mode User-Network Interface Mode
<MACLEARNING>	MAC address learning mode. This activates the MAC address learning on the interface to avoid packet broadcasting.
<ul style="list-style-type: none"> <li>• Y</li> <li>• N</li> </ul>	Enables MAC learning Disable MAC learning
<INGRESSCOS>	Identifies the COS value set in the S-VLAN tag.
<ul style="list-style-type: none"> <li>• 0 to 7</li> <li>• TRUST</li> <li>• VLAN</li> </ul>	Set a Cos value Use the customer COS The COS to be provisioned on CVLAN basis (QinQ selective mode).
<ETHERCETYPE>	Identifies a customer foreseen Ethernet type. If the customer uses a non-standard Ethernet type, the incoming packets will be accepted only if the CE-VLAN Ethernet type matches this parameter.
<ETHERSTYPE>	Identifies a customer foreseen Ethernet type. If the customer uses a non-standard Ethernet type, the incoming packets will be accepted only if the CE-VLAN Ethernet type matches this parameter.
<ALWMACADDR>	Identifies the allowed MAC addresses filtered out by the L2 Ethernet port. Every single MAC address is in the format of aa-bb-cc-dd-ee-ff, where every digit is in a hexadecimal form.
<INHMACADDR>	Identifies the inhibited MAC addresses filtered out by the L2 Ethernet port. Every single MAC address is in the format of aa-bb-cc-dd-ee-ff, where every digit is in a hexadecimal form.

<BPDU>	BPDU (Bridge Protocol Data Unit) management mode; Drop/Passthrough BPDU tagged packets.
• Y	Enables the BPDU tag.
• N	Disables the BPDU tag.
<BRIDGESTATE>	Defines if the traffic is blocked on the port.
• Unknown	Unknown state
• Disabled	Disabled state
• Blocking	Blocking state
• Listening	Listening state
• Learning	Learning state
• Forwarding	Forwarding state
• Broken	Broken state
<QNQMODE>	This is used to represent the QinQ mode operations.
• Selective	The S-VLAN tag is added only on specified CE-VLANs. The other packets are dropped.
• Transparent	The S-VLAN tag is always performed where all packets having the S-VLAN-ID identified by TRNSPSVLAN parameter are allowed.
<TRNSPSVLAN>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<NAME>	(Optional) Name. NAME is a string.
<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
<PST>	Primary state. The parameter type is PST, which indicates the current overall service condition of an entity.
• IS	In service
• OOS	Out of service
<SST>	Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic in service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of equipment and attributes
• MT	Maintenance mode
• OOG	Out of group
• SWDL	Software downloading
• UAS	Unassigned
• UEQ	Unequipped

<IGMPROUTE>	IGMP M Router port. Indicates the type of connection between this port and the IGMP M Router.
<ul style="list-style-type: none"> <li>• STATIC</li> </ul>	A static connection is present between this port and the IGMP M Router
<ul style="list-style-type: none"> <li>• NONE</li> </ul>	No connection is present
<AISACTION>	VLAN-AIS Action. Indicates what action take place on port when VLAN-AIS alarm is raisedValues
<ul style="list-style-type: none"> <li>• AIS-SQUELCH</li> </ul>	The port is squelched
<ul style="list-style-type: none"> <li>• AIS-NONE</li> </ul>	No action after VLAN-AIS
<PROTACTION>	Indicates the action that takes place on the standby port in the protection unit when a ONEPLUSONEL2 protection is activated.
<ul style="list-style-type: none"> <li>• SQUELCH</li> </ul>	The port is squelched.
<ul style="list-style-type: none"> <li>• NONE</li> </ul>	Ethernet traffic is blocked.
<IGMPCVLAN>	Indicates the customer VLAN value for IGMP on CVLAN.
<DLF>	To enable or disable storm control on DLFC packet.
<DLFTHRES>	Indicates the DLFC packet threshold value for storm control.
<MCAST>	To enable or disable the storm control on multicast packet.
<MCASTTHRES>	Indicates the multicast packet threshold value for storm control.
<BCAST>	To enable or disable the storm control on broadcast packet.
<BCASTTHRES>	Indicates the broadcast packet threshold value for storm control.
<CLRRCALM>	Clears the DATA-CRC alarm.

## 11.38 ED-LM-EFM

(Cisco ONS 15454) The Edit Link Monitoring Ethernet in the First Mile (ED-LM-EFM) command edits the Ethernet in the First Mile (EFM) link monitoring parameters and the action associated with each of the parameters.

### Usage Guidelines

- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.

### Category

Ports

### Security

Provisioning

### Input Format

```
ED-LM-EFM:[<TID>]:<AID>:<CTAG>::LMPARAM=<LMPARAM>,[LOWTH=<LOWTH>],[HIGH
TH=<HIGHTH>],[ACTION=<ACTION>],[WINDOW=<WINDOW>];
```

### Input Example

```
ED-LM-EFM::ETH-12-1-1:1::LMPARAM=ERR-FRAME,LOWTH=20,HIGHTH=30,ACTION=DIS
ABLE-PORT,WINDOW=40;
```

### Input Parameters

<AID>	Access identifier from the “26.16 ETH” section on page 26-40.
<LMPARAM>	Name of the link monitoring parameter.
• ERR-FRAME	Error frames.
• ERR-FRAME-PRD	Error frame period.
• ERR-FRAME-SEC	Error frames second.
<LOWTH>	The lowest value of the link monitoring parameter. It is an integer.
<HIGHTH>	The highest value of the link monitoring parameter. It is an integer.
<ACTION>	Action to be taken when the link monitoring parameter crosses the HIGH value, which is set by the user. The value can be NONE or DISABLED.
<WINDOW>	This indicates the window associated with each of the link monitoring parameter (number of packets, number of frames or the timer). It is an integer.

## 11.39 ED-LMP

(Cisco ONS 15454) The Edit Link Management Protocol (ED-LMP) command edits the global LMP protocol attributes.

### Usage Guidelines

This command is only available on platforms that support the LMP protocol.

### Category

LMP

### Security

Provisioning

### Input Format

```
ED-LMP:[<TID>]::<CTAG>:::[ENABLED=<ENABLED>],[WDMEXT=<WDM>],
[ROLE=<ROLE>], [LMPNODEID-<NODEID>][:];
```

### Input Example

```
ED-LMP:PETALUMA::704::ENABLED=Y,WDMEXT=Y,ROLE=PEER,LMPNODEID=198.133.219.25;
```

### Input Parameters

<ENABLED>	LMP protocol status.
<ul style="list-style-type: none"> <li>• Y</li> </ul>	The protocol is enabled.
<ul style="list-style-type: none"> <li>• N</li> </ul>	The protocol is disabled.
<ul style="list-style-type: none"> <li>• &lt;WDM&gt;</li> </ul>	Determines if the LMP wave division multiplexing (WDM) extensions are in effect.
<ul style="list-style-type: none"> <li>• Y</li> </ul>	The LMP WDM extensions are in effect.
<ul style="list-style-type: none"> <li>• N</li> </ul>	The LMP WDM extensions are not in effect.
<ul style="list-style-type: none"> <li>• &lt;ROLE&gt;</li> </ul>	The role the LMP protocol is configured to play.
<ul style="list-style-type: none"> <li>• OLS</li> </ul>	The LMP protocol is configured to respond as an optical line system (OLS).
<ul style="list-style-type: none"> <li>• PEER</li> </ul>	The LMP protocol is configured to respond as a peer node.
<ul style="list-style-type: none"> <li>• &lt;NODEID&gt;</li> </ul>	LMP node ID. NODEID is a stable IP address that is always reachable if there is any connectivity to it. The default LMP node ID value is the IP address of the node.

## 11.40 ED-LMP-CTRL

(Cisco ONS 15454) The Edit Link Management Protocol Control Channel (ED-LMP-CTRL) command edits the LMP control channels.

### Usage Guidelines

This command is only available on nodes where the LMP protocol is available and has been enabled.

**Category** LMP

**Security** Provisioning

**Input Format** ED-LMP-CTRL:[<TID>]:<SRC>:<CTAG>:::[LOCALPORT=<LOCALPORT>],  
[REMOTENE=<REMOTENE>],[REMOTEIP=<REMOTEIP>],[HELLO=<HELLO>],  
[HELLOMIN=<HELLOMIN>],[HELLOMAX=<HELLOMAX>],[DEAD=<DEAD>],  
[DEADMIN=<DEADMIN>],[DEADMAX=<DEADMAX>]:[<PST>][,<SST>];

**Input Example** ED-LMP-CTRL:PETALUMA:CTRL-123:704:::LOCALPORT=FAC-1-1-1  
,REMOTENE=15.15.15.115,REMOTEIP=126.0.0.1,HELLO=500,HELLOMIN=300,  
HELLOMAX=5000,DEAD=12000,DEADMIN=2000,DEADMAX=20000:OOS,DSBLD;

<b>Input Parameters</b>		
<SRC>		The LMP control channel AID values.
	<ul style="list-style-type: none"> <li>CTRL-ALL</li> <li>CTRL-{1-4}</li> </ul>	<p>Specifies all the control channels.</p> <p>Specifies an individual control channel.</p>
<LOCALPORT>		The pathway that the LMP control channel will use to send and receive messages.
<REMOTENE>		Remote IP address used by the far-end LMP control channel.
<REMOTEIP>		Remote IP address used by the LMP control channel to send and receive messages.
<HELLO>		The time interval in which the LMP protocol sends HELLO messages.
<HELLOMIN>		The minimum amount of time within which the LMP control channels can send out HELLO messages to the remote node.
<HELLOMAX>		The maximum amount of time that the LMP control channel can wait between HELLO messages.
<DEAD>		Time interval an LMP control channel will wait for a HELLO message from the remote side before listing the control channel as down.
<DEADMIN>		The minimum amount of time that an LMP control channel can wait before listing the control channel status as down.
<DEADMAX>		The maximum amount of time that the LMP control channel can wait before listing the control channel as down.
<PST>		Primary state. This parameter indicates the current overall service condition of an entity.
	<ul style="list-style-type: none"> <li>IS</li> <li>OOS</li> </ul>	<p>In service</p> <p>Out of service</p>
<SST>		Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
	<ul style="list-style-type: none"> <li>AINS</li> <li>DSBLD</li> </ul>	<p>Automatic in service</p> <p>Disabled</p>

• LPBK	Loopback
• MEA	Mismatch of equipment and attributes
• MT	Maintenance mode
• OOG	Out of group
• SWDL	Software downloading
• UAS	Unassigned
• UEQ	Unequipped

## 11.41 ED-LMP-TLINK

(Cisco ONS 15454) The Edit Link Management Protocol Traffic Engineering (TE) Link (ED-LMP-TLINK) command edits the LMP TE link.

### Usage Guidelines

This command can only be used on nodes that have the LMP protocol available and enabled.

### Category

LMP

### Security

Provisioning

### Input Format

```
ED-LMP-TLINK:[<TID>]:<SRC>:<CTAG>:::REMOTEID=<REMOTE_ID>,
REMOTETE=<REMOTE_TELINK>, [MUXCAP=<MUXCAP>]:[<PST>[,<SST>]];
```

### Input Example

```
ED-LMP-TLINK:PETALUMA:TLINK-123:704:::REMOTEID=15.15.15.115,REMOTETE=123,
MUXCAP=LAMBDA:OOS,DSBLD;
```

### Input Parameters

<SRC>	LMP TE link AID values.
• TLINK-ALL	Specifies all the TE links.
• TLINK-{1-256}	Specifies an individual TE link.
<REMOTEID>	Remote node ID associated with the LMP TE link.
<REMOTETE>	Remote ID used by the far end LMP TE link.
<MUXCAP>	The muxponder capability of the LMP TE link.
• PKTSWITCH1	Packet Switching 1
• PKTSWITCH2	Packet Switching 2
• PKTSWITCH3	Packet Switching 3
• PKTSWITCH4	Packet Switching 4
• LAYER2	Layer 2 switching
• TDM	Time-division multiplexing (TDM) switching

• LAMBDA	Lambda switching
• FIBER	Fiber switching
<PST>	Primary state. This parameter indicates the current overall service condition of an entity.
• IS	In service
• OOS	Out of service
<SST>	Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic in service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of equipment and attributes
• MT	Maintenance mode
• OOG	Out of group
• SWDL	Software downloading
• UAS	Unassigned
• UEQ	Unequipped

## 11.42 ED-LMP-DLINK

(Cisco ONS 15454) The Edit Link Management Protocol Data Link (ED-LMP-DLINK) command edits the LMP data link.

### Usage Guidelines

This command can only be used on nodes that have the LMP protocol available and enabled.

### Category

LMP

### Security

Provisioning

### Input Format

ED-LMP-DLINK:[<TID>]:<SRC>:<CTAG>:::[LINKTYPE=<LINKTYPE>],TELINK=<TELINK>,REMOTEID=<REMOTEID>;

### Input Example

ED-LMP-DLINK:PETALUMA:FAC-14-1-1:704:::LINKTYPE=PORT,TELINK=TLNK-45,REMOTEID=646631;

### Input Parameters

<SRC>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
<LINKTYPE>	The type of LMP data link.

• PORT	Port data link
• COMPONENT	Component data link
<TELINK>	Used to map LMP data links to LMP TE links.
<REMOTEID>	The remote LMP data link ID.

## 11.43 ED-LNK

(Cisco ONS 15454) The Edit Link (ED-LNK) command edits an optical link state.

### Usage Guidelines

The default values for all optional parameters are NE default values. These values might not be the current value for a parameter. Use a retrieve command to obtain the current value.

### Categories

DWDM

### Security

Provisioning

### Input Format

ED-LNK:[<TID>]:<FROM>,<TO>:<CTAG>:::[CMDMDE=<CMDMDE>]:  
[<PST>[,<SST>]];

### Input Example

ED-LNK:PENNGROVE:BAND-6-1-TX,BAND-13-1-RX:114:::CMDMDE=CMDMDE:  
IS,AINS;

### Input Parameters

<FROM>	Identifier at one end of the optical link from the <a href="#">“26.4 BAND” section on page 26-20</a> .
<TO>	Identifier at the other end of the optical link from the <a href="#">“26.4 BAND” section on page 26-20</a> .
<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
• FRCD	Force the system to override a state where the command would normally be denied.
• NORM	Execute the command normally. Do not override any conditions that might make the command fail.

<PST>	Primary state. <b>Note</b> PST is not supported for optical channel (OCH) provisioning.  The parameter type is PST, which indicates the current overall service condition of an entity.
• IS	In service
• OOS	Out of service
<SST>	Secondary state. <b>Note</b> SST is not supported for OCH provisioning.  The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic in service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of equipment and attributes
• MT	Maintenance mode
• OOG	Out of group
• SWDL	Software downloading
• UAS	Unassigned
• UEQ	Unequipped

## 11.44 ED-LNKTERM

(Cisco ONS 15454) The Edit Provisionable Patchcord Termination (ED-LNKTERM) command edits the attributes of a provisionable patchcord that has already been created. Only the remote end attributes (REMOTENODE and REMOTELNKTERMID) can be edited.

### Usage Guidelines

- No two provisionable patchcord terminations on a node can have the same remote end link termination information. An attempt to modify an existing provisionable patchcord termination while not following this restriction will lead to an error message being responded.
- If the provisionable patchcord termination does not exist, an error message will be responded.
- This command does not accept multiple and ALL AIDs.
- REMOTENODE is a string with a maximum length of 20 characters.

### Category

Provisionable Patchcords

### Security

Provisioning

**Input Format**

```
ED-LNKTERM:[<TID>]:<AID>:<CTAG>:::[RE MOTENODE=<RE MOTENODE>],
[RE MOTELNKTER MID=<RE MOTELNKTER MID>];
```

**Input Example**

```
ED-LNKTERM::LNKTERM-1:CTAG:::RE MOTENODE=172.20.208.226,
RE MOTELNKTER MID=25;
```

**Input Parameters**

<AID>	Access identifier from the “ <a href="#">26.21 LNKTERM</a> ” section on page 26-50. Indicates a link (provisionable patchcord) termination on the local node.
<RE MOTENODE>	The node where the other end of the provisionable patchcord resides. This can be an IP address or a valid TID. Defaults to the IP address of the local node/existing value. RE MOTENODE is a string.
<RE MOTELNKTER MID>	The corresponding provisionable patchcord termination on the remote node (as specified by the RE MOTENODE parameter). Integer value within the range of 1 to 65535. Defaults to the existing value.

## 11.45 ED-MA-CFM

(Cisco ONS 15454) The Edit Maintenance Association Connectivity Fault Management (ED-MA-CFM) command edits the maintenance association present on the card.

**Usage Guidelines**

- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.
- The ALL AID is invalid for this command.

**Category**

Equipment

**Security**

Provision

**Input Format**

```
ED-MA-CFM:[<TID>]:<AID>:<CTAG>:::MANAME=<MANAME>,SVLANID=<SVLANID>,[NEW
MANAME=<NEWMANAME>],[NEWSVLANID=<NEWSVLNAID>],[CCENABLE=<CCENABLE
>];
```

**Input Example**

```
ED-MA-CFM:454-156:SLOT-1:1:::MANAME=MANAME,SVLANID=4,NEWMANAME=NEWMA,
NEWSVLANID=5;
```

<b>Input Parameters</b>	<AID>	Access identifier from the “26.15 EQPT” section on page 26-37.
	<MANAME>	Maintenance Association Name. It is a string. The MA name length should not exceed more than 43 characters.
	<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
	<CCENABLE>	Enable or disable Continuous Check messaging
	• Y	Enable
	• N	Disable
	<NEWMANAME>	New name for Maintenance Association. It is a string.
	<NEWSVLANID>	New service Vlan ID. It is an integer.

## 11.46 ED-MCAST

(Cisco ONS 15454)

Edit Multicast attributes command is used to modify the Multicast VLAN Registration attributes.

### Usage Guidelines

The default values for all optional parameters are NE default values. These values may not be the current value for a parameter. In order to obtain the current value use RTRV-XX command to retrieve them.

Error conditions:

- If the AID is invalid, an IIAC (Invalid AID) error message is returned.
- The “ALL” AID is invalid for this command.

### Category

ETHERNET

### Security

Provisioning

### Input Format

```
ED-MCAST[:<TID>]:<AID>:<CTAG>[:MVRSTATE=<MVRSTATE>],[MVRSVLAN=<MVRSVLAN>],[MVRSTARTIP=<MVRSTARTIP>],[MVRIPRANGE=<MVRIPRANGE>],[IGMPONCVLAN=<IGMPONCVLAN>][:];
```

### Input Example

```
ED-MCAST::SLOT-1-4:321::MVRSTATE=Y,MVRSVLAN=46,MVRSTARTIP=230.64.72.57,MVRIPRANGE=20;;
```

Input Parameters		
<AID>		Equipment aids are used to access specific cards.
	• ALL	It is only used for RTRV-INV, RTRV-EQPT, RTRV-ALM/COND-EQPT commands.
	• SLOT-ALL	The NE equipment AIDs.
	• SLOT[-{1-30}]-{1-6,12-17}	Individual equipment AID of the I/O card units or slots.
<MVRSTATE>		Multicast VLAN Registration status. Default values is - N
	• Y	Enabled
	• N	Disabled
<MVRSVLAN>		Define the SVLAN used to distribute the Multicast stream inside the Network. Default values is 0
<MVRSTARTIP>		Define the first IP Address of the Multicast IP Group.
<MVRIPRANGE>		MVR IP Range. Indicates the number of IP address starting from mvrStartIp used to identified the multicast IP group. It is a number in the range 0..255. Default values is 0
<IGMPONCVLAN>		To Enable IGMP on Customer VLAN.

## 11.47 ED-MIP-CFM

(Cisco ONS 15454) The Edit Maintenance Intermediate Point Connectivity Fault Management (ED-MIP-CFM) command edits the maintenance intermediate points on the port.

### Usage Guidelines

- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.

### Category

Ports

### Security

Provisioning

### Input Format

ED-MIP-CFM:[<TID>]:<AID>:<CTAG>::VLANID=<VLANID>,LEVEL=<LEVEL>;

### Input Example

ED-MIP-CFM::ETH-1-1-1:1::VLANID=2,LEVEL=3;

### Input Parameters

<AID>	Access identifier from the <a href="#">“26.16 ETH” section on page 26-40</a> .
<VLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<LEVEL>	This indicates the level of the maintenance domain. The value ranges from 0 to 7.

## 11.48 ED-NE-GEN

(Cisco ONS 15454) The Edit Network Element General (ED-NE-GEN) command edits the node attributes of the NE.

### Usage Guidelines

- The node name can be a maximum of 20 characters. If the entered name exceeds 20 characters, an IPNV (Node Name Too Long) error message is returned.
- An existing NTP timing source can be removed by setting the address to 0.0.0.0.
- The maximum length of IPADDR and DEFRTTR is 20 characters. The default value is the local IP address and default router.
- The maximum length of IPMASK is 18 characters. The default is the mask of the local IP address.
- ETHIPADDR and ETHIPMASK are disabled in this command. ETHIPADDR and ETHIPMASK are used to show the Ethernet interface address and mask. Both default to the nodes' IP address and masks.
- The default values for all optional parameters are NE default values. These values might not be the current value for a parameter. Use a retrieve command to obtain the current value.
- An existing NTP and Backup NTP timing source can be removed by setting the address to 0.0.0.0.



### Caution

Changing the IPADDR, IPMASK, or IIOPPORT will cause a reset of the controller card.



### Note

OSI parameters are not supported in Release 9.0 and 9.1.

### Category

System

### Security

Superuser

### Input Format

```
ED-NE-GEN[:<TID>]::<CTAG>[:<NAME=<NAME>>],[IPADDR=<IPADDR>],[IPMASK=<IPMASK>],
[DEFRTTR=<DEFRTTR>],[IPV6ADDR=<IPV6ADDR>],[IPV6PREFLEN=<IPV6PREFLEN>],[IPV6DEFRTTR=<IPV6DEFRTTR>],
[IPV6ENABLE=<IPV6ENABLE>],[IIOPPORT=<IIOPPORT>],[NTP=<NTP>],[SUPPRESSIP=<SUPPRESSIP>],[MODE=<MODE>],
[MSPUBVLANID=<MSPUBVLANID>],[MSINTLVLANID=<MSINTLVLANID>],[SERIALPORTECHO=<SERIALPORTECHO>],[OSIROUTINGMODE=<OSIROUTINGMODE>],
[OSIL1BUFSIZE=<OSIL1BUFSIZE>],[OSIL2BUFSIZE=<OSIL2BUFSIZE>],[BKUPNTP=<BKUPNTP>];
```

### Input Example

```
ED-NE-GEN:CISCO::123:::NAME=NODENAME,IPADDR=192.168.100.52,
IPMASK=255.255.255.0,DEFRTTR=192.168.100.1,IPV6ADDR="[3ffe:0501:0008:0000:0260:97ff:efab]",
IPV6PREFLEN=112,IPV6DEFRTTR="[3ffe:0501:0008:0000:0260:97ff:fe40:efab]",
```

IPV6ENABLE=Y,IIOPPORT=57790, NTP=192.168.100.52, SUPPRESSIP=NO,  
 MODE=SINGLESHELF,MSPUBVLANID=1,MSINTLVLANID=5,SERIALPORTECHO=Y,OSIROU  
 TINGMODE=ES,OSIL1BUFSIZE=512,OSIL2BUFSIZE=512,bkupntp=10.1.1.2;;

**Input Parameters**

<NAME>	Node name. NAME is a string. Defaults to NULL.
<IPADDR>	Node IP address. IPADDR is a string.
<IPMASK>	Node IP mask. IPMASK is a string.
<DEFRTR>	Node default router. DEFRTR is a string.
<IPV6ADDR>	Specifies the IPv6 address of the NE. IPV6ADDR is a string.
	 <b>Note</b> IPV6ADDR parameter can be set only if IPV6ENABLE parameter is set to Y
<IPV6PREFLEN>	Specifies the prefix length for the IPv6 address of the NE. IPV6PREFLEN is an integer
<IPV6DEFRTR>	Specifies the IPv6 default router address for the NE. IPV6DEFRTR is a string
<IPV6ENABLE>	Specifies if the IPv6 enable mode for the NE is enabled or disabled.
• Y	Indicates that IPV6 mode is enabled.
• N	Indicates that IPV6 mode is disabled.
<IIOPPORT>	Node IIO port. IIOPPORT is an integer. Defaults to 57790.
<NTP>	Node NTP timing origin address. NTP is a string. Defaults to 0.0.0.0.
<SUPPRESSIP>	Suppress the IP display.
• NO	No
• YES	Yes
<MODE>	(Optional) Indicates the AID mode to access shelf identifier objects. Defaults to SINGLESHELF. This field is always set to MULTISHELF in the case of DWDM nodes with more than one shelf managed. Parameter type is SHELF_MODE which is the NE mode.
• SINGLESHELF	The NE contains only one shelf and the AID representation does not consider the shelf identifier for command requests/response and autonomous reports.
• MULTISHELF	The AID representation considers the shelf identifier for command requests/response and autonomous reports. This means the NE has more than one shelf configured or the user wants to use the new AID style.
• MULTISHELFETH	The AID representation considers the shelf identifier for command requests/response and autonomous reports. This means the NE has more than one shelf configured or the user wants to use the new AID style. The shelves are connected by means of an external Ethernet switch.

<MSPUBVLANID>	Public VLAN ID used by the node controller to communicate with the external network. The VLAN ID can be in the range of 1 to 4094. But for M6 shelf, you cannot modify the MSPUBVLANID value. The MSPUBVLANID value is 1.
<MSINTLVLANID>	Internal VLAN ID used by the node controller to communicate with the Subtending shelves. The VLAN ID can be in the range of 1 to 4094. But for M6 shelf, you cannot modify the MSINTLVLANID value. The MSINTLVLANID value is 2.
<SERIALPORTECHO>	Indicates if echo is turned on for the TL1 serial port sessions.
• Y	Echo is turned on.
• N	Echo is turned off.
<OSIROUTINGMODE>	Indicates the routing mode of the node.
• ES	Provisions the node as an OSI ES. The ONS node performs all ES functions and relies upon an IS for communication with other IS nodes inside and outside the ES OSI area.
• IS1	Provisions the node as an OSI IS. The ONS node performs all IS functions including routing data between ISs and ESs, between networks, and between parts of a network.
• IS2	The ONS node performs all IS functions. It communicates with other IS and ES nodes within an OSI area. It also broadcasts ISHs to IS nodes in other areas to which it is connected.
<OSIL1BUFSIZE>	Level 1 Link State Protocol Data Unit (LSP) buffer size. The default is 512.
<OSIL2BUFSIZE>	Level 2 Link State Protocol Data Unit (LSP) buffer size. The default is 512.
<BKUPNTP>	Indicates that the Secondary NTP server is used as backup for primary.

## 11.49 ED-NE-PATH

(Cisco ONS 15454) The Edit Network Element Path (ED-NE-PATH) command edits the path attributes of the NE.

### Usage Guidelines

The default value for an optional parameter is the NE default value.

### Category

System

### Security

Provisioning

### Input Format

ED-NE-PATH:[<TID>]::<CTAG>:::[PDIP=<PDIP>],[XCMODE=<XCMODE>];

**Input Example** ED-NE-PATH:::CTAG:::PDIP=Y,XCMODE=MIXED;

<b>Input Parameters</b>	<PDIP>	Flag used to indicate whether PDI-P should be generated on the outgoing VT structured STSs. The parameter type is ON_OFF, which disables or enables an attribute.
	<ul style="list-style-type: none"> <li>N</li> <li>Y</li> </ul>	<ul style="list-style-type: none"> <li>Disable an attribute.</li> <li>Enable an attribute.</li> </ul>
	<XCMODE>	Cross-connect mode. The parameter type is XCMODE, which is applicable only to a node with cross-connect cards (XC-VXC-10G or XC-VXC-2.5G, for example) that support cross-connect mode change.
	<ul style="list-style-type: none"> <li>MIXED</li> <li>VT1</li> <li>VT2</li> </ul>	<ul style="list-style-type: none"> <li>Both VT1 and VT2 cross-connects can be provisioned on the node.</li> <li>Only VT1 cross-connects can be provisioned on the node.</li> <li>Only VT2 cross-connects can be provisioned on the node.</li> </ul>

## 11.50 ED-NE-SYNCN

(Cisco ONS 15454) The Edit Network Element Synchronization (ED-NE-SYNCN) command edits the synchronization attributes of the NE.

**Usage Guidelines** The existing external and line modes have the same functionality in all ONS 15454 4.x and 5.x releases:

- External mode: The node derives its timing from the BITS inputs.
- Line mode: The node derives its timing from the SONET line(s).
- Mixed mode: The node derives its timing from the BITS input or SONET lines.



**Note**

Although mixed mode timing is supported in this release, it is not recommended. Refer to the *Cisco ONS 15454 SONET TL1 Reference Guide* for more information.

**Category** Synchronization

**Security** Provisioning

**Input Format** ED-NE-SYNCN:[<TID>]:[<AID>]:<CTAG>:::[TMMD=<TMMD>],[SSMGEN=<SSMGEN>],[QRES=<QRES>],[RVRTV=<RVRTV>],[RVTM=<RVTM>];  
 ED-NE-SYNCN:[<TID>]:[<AID>]:<CTAG>:::[TMMD=<TMMD>],[RVRTV=<RVRTV>],[RVTM=<RVTM>],[SYSTEMN=<SYSTEMN>];

**Input Example**

```
ED-NE-SYNCN:PETALUMA::123::TMMD=LINE,SSMGEN=GEN1,QRES=ABOVE-PRS,
RVRTV=Y,RVTM=8.0,SYSTEMN=SONET;
```

```
ED-NE-SYNCN:PETALUMA::123::TMMD=LINE,RVRTV=Y,RVTM=8.0,SYSTEMN=SONET;
```

**Input Parameters**

<AID>	The node or shelf access identifier from the “ <a href="#">26.26 SHELF</a> ” section on page 26-52. If omitted it addresses the node or first shelf of the node. Must not be null. This is applicable only to ONS 15454.
<TMMD>	Timing mode. A null value is equivalent to ALL. Defaults to EXTERNAL. The parameter type is TIMING_MODE, which is the timing mode for the current node.
<ul style="list-style-type: none"> <li>• EXTERNAL</li> <li>• LINE</li> <li>• MIXED</li> </ul>	<ul style="list-style-type: none"> <li>The node derives its clock from the BITS input.</li> <li>The node derives its clock from the SONET lines.</li> <li>The node derives its clock from the mixed timing mode.</li> </ul>
<SSMGEN>	Synchronization status message set. Defaults to GEN1. A null value is equivalent to ALL. The default is ABOVE-STU. The parameter type is SYNC_GENERATION (synchronization status message set generation).
<ul style="list-style-type: none"> <li>• GEN1</li> <li>• GEN2</li> </ul>	<ul style="list-style-type: none"> <li>First generation SSM set</li> <li>Second generation SSM set</li> </ul>
<QRES>	Quality of the RES. A null value is equivalent to ALL. Defaults to DUS. The parameter type is SYNC_QUALITY_LEVEL, which is the network synchronization quality level.
<ul style="list-style-type: none"> <li>• ABOVE-PRS</li> <li>• ABOVE-SMC</li> <li>• ABOVE-ST2</li> <li>• ABOVE-ST3</li> <li>• ABOVE-ST3E</li> <li>• ABOVE-ST4</li> <li>• ABOVE-STU</li> <li>• ABOVE-TNC</li> <li>• BELOW-ST4</li> <li>• SAME-AS-DUS</li> </ul>	<ul style="list-style-type: none"> <li>Better than primary reference source. Valid setting for Generation-1 and Generation-2 SSM Set.</li> <li>Between SMC and ST3. Valid setting for Generation-1 and Generation-2 SSM Set.</li> <li>Between ST2 and STU. Valid setting for Generation-1 and Generation-2 SSM Set.</li> <li>For Generation-1 SSM set, between ST3 and ST2. For Generation-2 SSM set, between ST3 and ST3E.</li> <li>Between ST3E and TNC. Valid setting only for Generation-2 SSM set.</li> <li>Between ST4 and ST3. Valid setting for Generation-1 and Generation-2 SSM Set.</li> <li>Between STU and PRS. Valid setting for Generation-1 and Generation-2 SSM Set. This is default setting.</li> <li>Between TNC and ST2. Valid setting only for Generation-2 SSM set.</li> <li>Below ST4 but still usable. Valid setting for Generation-1 and Generation-2 SSM Set.</li> <li>Disable the RES message by equating it to DUS. Valid setting for Generation-1 and Generation-2 SSM Set.</li> </ul>

<RVRTV>	Revertive mode. The value Y indicates that protection switching system reverts service to the original line after restoration. The value N indicates that protection switching system does not revert service to the original line after restoration. RVRTV is applicable only for 1+1 protection switching. Null defaults to N. A null value is equivalent to ALL. The parameter type is ON_OFF, which disables or enables an attribute.
• N	Does not revert service to original line after restoration.
• Y	Reverts service to original line after restoration.
<RVTM>	Revertive time. A null value is equivalent to ALL. The parameter type is REVERTIVE_TIME (revertive time).
• 0.5 to 12.0	Revertive time is 0.5 to 12.0 minutes.
<SYSTEMN>	(ONS 15454 only) Identifies the system timing standard used by the node.
• SONET	SONET timing standard
• SDH	SDH timing standard

## 11.51 ED-OCH

(Cisco ONS 15454) The Edit Optical Channel (ED-OCH) command edits the attributes (service parameters) and state of an OCH facility. Refer to the *Cisco ONS 15454 SONET TL1 Reference Guide* for specific card provisioning rules.

### Usage Guidelines

- Primary=OOS and secondary=AINS states do not apply to Ethernet mode.
- Disable all the ports, before you change the card mode from LAN to WAN mode.

### Category

DWDM

### Security

Provisioning

### Input Format

```
ED-OCH[:<TID>]:<AID>:<CTAG>[:<EXPWLEN=<EXPWLEN>],[VOAATTN=<VOAATTN>],[VO
APWR=<VOAPWR>],[CALOPWR=<CALOPWR>],[NAME=<PORTNAME>],[OSDBER=<SDBER
>],[GCC=<GCC>],[GCCRATE=<GCCRATE>],[DWRAP=<DRWAP>],[FEC=<FEC>],[PAYLOADM
AP=<PAYLOADMAP>],[SOAK=<SOAK>],[LOSSB=<LOSSB>],[CMDMDE=<CMDMDE>],[PEERID
=<PEERID>],[REGENNAME=<REGENNAME>],[PORTMODE=<PORTMODE>],[ODUTRANSM
ODE=<ODUTRANSMODE>],[ERRORDECORRELATOR=<ERRORDECORRELATOR>],[FCS=<F
CS>],[PPR=<PPR>],[TRIGTH=<TRIGTH>],[RVRTTH=<RVRTTH>],[TRIGWINDOW=<TRIGWIN
DOW>],[RVRTWINDOW=<RVRTWINDOW>],[OVRCLK=<OVRCLK>],[RXWLEN=<RXWLEN>][
:<PST>[:<SST>]];
```

**Input Example**

```
ED-OCH:CISCO:CHAN-6-2:114:::EXPWLEN=1530.32,NAME="NYLINE",GCC=Y,
GCCRATE=192K,OSDBER=1E-6,DWRAP=Y,FEC=STD,PAYLOADMAP=ASYNCH,
SOAK=10,CMDMDE=FRCD:IS,AINS;
```

**Input Parameters**

<AID>	Access identifier from the “ <a href="#">26.8 CHANNEL</a> ” section on <a href="#">page 26-22</a> .
<EXPWLEN>	(Optional) Optical wavelength for this port. Applicable only to the following types of cards: optical service channel cards, optical amplifier cards, dispersion compensation units, multiplexer and demultiplexer cards, and optical add/drop multiplexing (OADM) cards. The parameter type is OPTICAL_WLEN, which is the optical wavelength.
• 1310	Wavelength 1310
• 1470	Wavelength 1470
• 1490	Wavelength 1490
• 1510	Wavelength 1510
• 1528.77	Wavelength 1528.77
• 1529.55	Wavelength 1529.55
• 1529.94	Wavelength 1529.94
• 1530	Wavelength 1530
• 1530.33	Wavelength 1530.33
• 1530.72	Wavelength 1530.72
• 1531.12	Wavelength 1531.12
• 1531.51	Wavelength 1531.51
• 1531.90	Wavelength 1531.90
• 1532.29	Wavelength 1532.29
• 1532.68	Wavelength 1532.68
• 1533.07	Wavelength 1533.07
• 1533.47	Wavelength 1533.47
• 1533.86	Wavelength 1533.86
• 1534.25	Wavelength 1534.25
• 1534.64	Wavelength 1534.64
• 1535.04	Wavelength 1535.04
• 1535.43	Wavelength 1535.43
• 1535.82	Wavelength 1535.82
• 1536.22	Wavelength 1536.22
• 1536.61	Wavelength 1536.61
• 1537	Wavelength 1537
• 1537.40	Wavelength 1537.40
• 1537.79	Wavelength 1537.79
• 1538.19	Wavelength 1538.19

• 1538.58	Wavelength 1538.58
• 1538.98	Wavelength 1538.98
• 1539.37	Wavelength 1539.37
• 1539.77	Wavelength 1539.77
• 1540.16	Wavelength 1540.16
• 1540.56	Wavelength 1540.56
• 1540.95	Wavelength 1540.95
• 1541.35	Wavelength 1541.35
• 1541.75	Wavelength 1541.75
• 1542.14	Wavelength 1542.14
• 1542.35	Wavelength 1542.35
• 1542.54	Wavelength 1542.54
• 1542.94	Wavelength 1542.94
• 1543.33	Wavelength 1543.33
• 1543.73	Wavelength 1543.73
• 1544.13	Wavelength 1544.13
• 1544.53	Wavelength 1544.53
• 1544.92	Wavelength 1544.92
• 1545.32	Wavelength 1545.32
• 1545.72	Wavelength 1545.72
• 1546.12	Wavelength 1546.12
• 1546.52	Wavelength 1546.52
• 1546.92	Wavelength 1546.92
• 1547.32	Wavelength 1547.32
• 1547.72	Wavelength 1547.72
• 1548.11	Wavelength 1548.11
• 1548.51	Wavelength 1548.51
• 1548.91	Wavelength 1548.91
• 1549.32	Wavelength 1549.32
• 1549.72	Wavelength 1549.72
• 1550	Wavelength 1500
• 1550.12	Wavelength 1550.12
• 1550.52	Wavelength 1550.52
• 1550.92	Wavelength 1550.92
• 1551.32	Wavelength 1551.32
• 1551.72	Wavelength 1551.72
• 1552.12	Wavelength 1552.12
• 1552.52	Wavelength 1552.52
• 1552.93	Wavelength 1552.93
• 1553.33	Wavelength 1553.33
• 1553.73	Wavelength 1553.73

• 1554.13	Wavelength 1554.13
• 1554.13	Wavelength 1554.13
• 1554.94	Wavelength 1554.94
• 1555.34	Wavelength 1555.34
• 1555.75	Wavelength 1555.75
• 1556.15	Wavelength 1556.15
• 1556.55	Wavelength 1556.55
• 1556.96	Wavelength 1556.96
• 1557.36	Wavelength 1557.36
• 1557.77	Wavelength 1557.77
• 1558.17	Wavelength 1558.17
• 1558.58	Wavelength 1558.58
• 1558.98	Wavelength 1558.98
• 1559.39	Wavelength 1559.39
• 1559.79	Wavelength 1559.79
• 1560.20	Wavelength 1560.20
• 1560.61	Wavelength 1560.61
• 1561.01	Wavelength 1561.01
• 1561.42	Wavelength 1561.42
• 1561.83	Wavelength 1561.83
• 1570	Wavelength 1570
• 1570.83	Wavelength 1570.83
• 1571.24	Wavelength 1571.24
• 1571.65	Wavelength 1571.65
• 1572.06	Wavelength 1572.06
• 1572.48	Wavelength 1572.48
• 1572.89	Wavelength 1572.89
• 1573.30	Wavelength 1573.30
• 1573.71	Wavelength 1573.71
• 1574.13	Wavelength 1574.13
• 1574.54	Wavelength 1574.54
• 1574.95	Wavelength 1574.95
• 1575.37	Wavelength 1575.37
• 1575.78	Wavelength 1575.78
• 1576.20	Wavelength 1576.20
• 1576.61	Wavelength 1576.61
• 1577.03	Wavelength 1577.03
• 1577.44	Wavelength 1577.44
• 1577.86	Wavelength 1577.86
• 1578.27	Wavelength 1578.27
• 1578.69	Wavelength 1578.69

• 1579.10	Wavelength 1579.10
• 1579.52	Wavelength 1579.52
• 1579.93	Wavelength 1579.93
• 1580.35	Wavelength 1580.35
• 1580.77	Wavelength 1580.77
• 1581.18	Wavelength 1581.18
• 1581.60	Wavelength 1581.60
• 1582.02	Wavelength 1582.02
• 1582.44	Wavelength 1582.44
• 1582.85	Wavelength 1582.85
• 1583.27	Wavelength 1583.27
• 1583.69	Wavelength 1583.69
• 1584.11	Wavelength 1584.11
• 1584.53	Wavelength 1584.53
• 1584.95	Wavelength 1584.95
• 1585.36	Wavelength 1585.36
• 1585.78	Wavelength 1585.78
• 1586.20	Wavelength 1586.20
• 1586.62	Wavelength 1586.62
• 1587.04	Wavelength 1587.04
• 1587.46	Wavelength 1587.46
• 1587.88	Wavelength 1587.88
• 1588.30	Wavelength 1588.30
• 1588.73	Wavelength 1588.73
• 1589.15	Wavelength 1589.15
• 1589.57	Wavelength 1589.57
• 1589.99	Wavelength 1589.99
• 1590	Wavelength 1590
• 1590.41	Wavelength 1590.41
• 1590.83	Wavelength 1590.83
• 1591.26	Wavelength 1591.26
• 1591.68	Wavelength 1591.68
• 1592.10	Wavelength 1592.10
• 1592.52	Wavelength 1592.52
• 1592.95	Wavelength 1592.95
• 1593.37	Wavelength 1593.37
• 1593.79	Wavelength 1593.79
• 1594.22	Wavelength 1594.22
• 1594.64	Wavelength 1594.64
• 1595.06	Wavelength 1595.06
• 1595.49	Wavelength 1595.49

• 1596.34	Wavelength 1596.34
• 1596.76	Wavelength 1596.76
• 1597.19	Wavelength 1597.19
• 1597.62	Wavelength 1597.62
• 1598.04	Wavelength 1598.04
• 1598.47	Wavelength 1598.47
• 1598.89	Wavelength 1598.89
• 1599.32	Wavelength 1599.32
• 1599.75	Wavelength 1599.75
• 1600.06	Wavelength 1600.06
• 1601.03	Wavelength 1601.03
• 1601.46	Wavelength 1601.46
• 1601.88	Wavelength 1601.88
• 1602.31	Wavelength 1602.31
• 1602.74	Wavelength 1602.74
• 1603.17	Wavelength 1603.17
• 1603.60	Wavelength 1603.60
• 1604.03	Wavelength 1604.03
• 1610	Wavelength 1610
• USE-TWL1	Use Tunable Wavelength 1
<VOAATTN>	(Optional) The value of calibrated attenuation for the VOA expressed in dBm. The range is 0.0 to +30.0. VOAATTN is a float.
<FCS>	(Optional) First Circuit Startup. An automatic channel startup that operates the VOA when the light is detected on the ingress port.
• Y	Automatic Channel startup enabled.
• N	Automatic Channel startup disabled.
<VOAPWR>	(Optional) The value of calibrated output power that the VOA is going to set as a result of its attenuation. VOAPWR is a float.
<CALOPWR>	(Optional) The value of the calibrated optical power expected for the line added to the calculated value, which equals the total expected output power. Expressed in dBm. Defaults to 0 dBm. CALOPWR is a float.
<NAME>	(Optional) Port name. PORTNAME is a string.
<OSDBER>	OTN SDBER. Can only be provisioned on the working port. Defaults to 1E-7  Parameter type is SD_BER—the threshold for declaring signal degrade on a facility or path
• 1E-5	SDBER is 1E-5
• 1E-6	SDBER is 1E-6
• 1E-7	SDBER is 1E-7
• 1E-8	SDBER is 1E-8

• 1E-9	SDBER is 1E-9
<GCC>	Identifies the Generic communication channel (GCC) connection of the port.
• Y	GCC can be utilized
• N	GCC cannot be utilized
<GCCRATE>	(Optional) The data rate of the GCC traffic. The default is 192 Kbps. For MXP_2.5G_10G and TXP_MR_10G cards, this applies only to the DWDM port. The parameter type is GCCRATE, which is the data rate of the GCC traffic.
• 192K	192 Kbps
• 576K	576 Kbps
<DWRAP>	(Optional) The ITU-T G.709 monitoring digital wrapper. It is either on or off. The system default is ON. For MXP_2.5G_10G and TXP_MR_10G cards, this applies only to the DWDM port. The parameter type is ON_OFF (disable or enable an attribute). To enable ITU-T G.709 monitoring, there should be no GCC on the DWDM port and the payload (in which the card is configured) should not be UNFRAMED. To disable ITU-T G.709 monitoring, there should be no GCC on the DWDM port, the FEC should be turned to off, there should be no overhead circuit created on the DWDM port, and none of the client ports on the card should be part of a Y-cable protection group (muxponder only).
• N	Disable an attribute.
• Y	Enable an attribute.
<FEC>	(Optional) Forward error correction. It can be enabled only if ITU-T G.709 monitoring is turned ON. It is either off or enabled in standard or enhanced mode. The system default is standard FEC enabled. The FEC level PM and thresholds apply if the FEC is turned ON. The parameter type is FEC_MODE, which specifies the type of forward error correction.
• ENH	Enhanced FEC is enabled.
• ENH-14	Enhanced FEC 1.4 is enabled
• ENH-17	Enhanced FEC 1.7 is enabled
• OFF	FEC is disabled.
• STD	Standard FEC is enabled.
<PAYLOADMAP>	(Optional) The type of payload mapping. It can be enabled only if ITU-T G.709 monitoring is turned ON and FEC is enabled. The parameter type is PAYLOAD_MAPPING, which is the payload mapping mode.
• ASYNCH	Asynchronous mapping mode
• ODU	ODU multiplex structure mode
• SYNCH	Synchronous mapping mode
• N	Disable an attribute.
• Y	Enable an attribute.

• NOOPU2FIXEDSTUFF	Mapping with no FIXEDSTUFF
<SOAK>	(Optional) Locked-AutomaticInService to Unlocked transition soak time as measured in 15-minute intervals. A value of 4 equals a soak time of 1 hour. The allowable range is 0 to 192 intervals (maximum of 48 hours). SOAK is an integer.
<LOSSB>	The parameter type is REACH which indicates the reach values.
• AUTOPROV	Autoprovisioning
• CWDM-40KM	CWDM 40 kilometers.
• CX	Reach CX
• CX1	Reach CX1
• DX	Reach DX
• HX	Reach HX
• I1	Reach I1
• IR-1	Reach IR-1
• IR-2	Reach IR-2
• L1	Reach L1
• L2	Reach L2
• L3	Reach L3
• LR-1	Reach LR-1
• LR-2	Reach LR-2
• LR-3	Reach LR-3
• LX	Reach LX
• S1	Reach S1
• S2	Reach S2
• SR	Reach SR
• SR-1	Reach SR-1
• SX	Reach SX
• T	Reach T
• TEN-GE-ER	10 GE extended range
• TEN-GE-LR	10 GE long range
• TEN-GE-SR	10 GE short range
• ULH	Reach ULH
• VSR	Reach VSR
• VX	Reach VX
• ZX	Reach ZX
<CMDMDE>	(Optional) Command mode. Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in Unlocked-Enabled or Locked-Disabled, AutomaticInService service states.

• FRCD	Force the system to override a state in which the command would normally be denied.
• NORM	Execute the command normally. Do not override any conditions that could make the command fail.
<PEERID>	Indicates the peer trunk facility of the regeneration group on the OTU2-XP card. Accessed using the CHAN AID.
<REGENNAME>	Indicates the name of a regeneration group. Applicable only to DWDM flavored cards, which support regeneration group. Regenname is a string. The default value is "NULL".
<PORTMODE>	Describes the termination mode of each interface on the OTU2-XP card.
• DWDM-LINE	Line terminating mode.
• DWDM-SECTION	Section terminating mode.
• DWDM-TRANS-AIS	Transparent mode AIS.
• DWDM-TRANS-SQUELCH	Transparent mode squelch.
• 10GLANWAN-SQUELCH	10G LAN to WAN Squelch.
<ODUTRANSMODE>	To configure the "ODUk OH" transparency on the OTU2-XP card.
• CISCO-EXT	Cisco Extended. When the Cisco Extended configuration is selected, two bytes of the ODU layer is terminated to guarantee the interoperability with the older Transponder/Muxponder cards.
• TRANS-STD	Transparent Standard Use. The transponder, behaving as a regenerator, terminates the OUT layer and is transparent to the ODU layer. Also in this case the FEC-MISM (FEC Mismatch) alarm is not generated.
<ERRORDECORRELATOR>	To enable or disable the MLSE module on the card. This applies only to TXP_MR_10EX_C, MXP_2.5G_10EX_C, and MXP_MR_10DMEX_C cards
• Y	To enable the MLSE module on the card.
• N	To disable the MLSE module on the card.
<PPR>	(Optional) To enable or disable the Proactive Protection Regen (PPR) in the OTU2 Card in Regen Mode.
• Y	PPR enabled.
• N	PPR disabled.
<TRIGTH>	Specifies the trigger threshold value for Proactive Protection Regen. The parameter type is TRIGGER_THRESHOLD.
• 1E-3	Trigger threshold is 1E-3.
• 1E-4	Trigger threshold is 1E-4.
• 1E-5	Trigger threshold is 1E-5
• 1E-6	Trigger threshold is 1E-6.
• 1E-7	Trigger threshold is 1E-7.
• 2E-4	Trigger threshold is 2E-4
• 2E-5	Trigger threshold is 2E-5
• 2E-6	Trigger threshold is 2E-6.

• 2E-7	Trigger threshold is 2E-7.
• 3E-4	Trigger threshold is 3E-4
• 3E-5	Trigger threshold is 3E-5
• 3E-6	Trigger threshold is 3E-6
• 3E-7	Trigger threshold is 4E-7.
• 4E-4	Trigger threshold is 4E-4
• 4E-5	Trigger threshold is 4E-5
• 4E-6	Trigger threshold is 4E-6.
• 4E-7	Trigger threshold is 4E-7.
• 5E-4	Trigger threshold is 5E-4
• 5E-5	Trigger threshold is 5E-5
• 5E-6	Trigger threshold is 5E-6.
• 5E-7	Trigger threshold is 5E-7.
• 6E-4	Trigger threshold is 6E-4.
• 6E-5	Trigger threshold is 6E-5
• 6E-6	Trigger threshold is 6E-6.
• 6E-7	Trigger threshold is 6E-7.
• 7E-4	Trigger threshold is 7E-4.
• 7E-5	Trigger threshold is 7E-5
• 7E-6	Trigger threshold is 7E-6.
• 7E-7	Trigger threshold is 7E-7.
• 8E-4	Trigger threshold is 8E-4.
• 8E-5	Trigger threshold is 8E-5
• 8E-6	Trigger threshold is 8E-6.
• 8E-7	Trigger threshold is 8E-7.
• 9E-4	Trigger threshold is 9E-4.
• 9E-5	Trigger threshold is 9E-5
• 9E-6	Trigger threshold is 9E-6.
• 9E-7	Trigger threshold is 9E-7.
<RVRTTH>	Specifies the revert threshold for Proactive Protection Regen. The parameter type is REP_PORT_ROLE
• 1E-4	Revert threshold is 1E-4.
• 1E-5	Revert threshold is 1E-5
• 1E-6	Revert threshold is 1E-6.
• 1E-7	Revert threshold is 1E-7.
• 2E-5	Revert threshold is 2E-5
• 2E-6	Revert threshold is 2E-6.
• 2E-7	Revert threshold is 2E-7.
• 3E-6	Revert threshold is 3E-6
• 3E-7	Revert threshold is 4E-7.
• 4E-5	Revert threshold is 4E-5
• 4E-6	Revert threshold is 4E-6.

• 4E-7	Revert threshold is 4E-7.
• 5E-5	Revert threshold is 5E-5.
• 5E-6	Revert threshold is 5E-6.
• 5E-7	Revert threshold is 5E-7.
• 5E-8	Revert threshold is 5E-8.
• 6E-5	Revert threshold is 6E-5.
• 6E-6	Revert threshold is 6E-6.
• 6E-7	Revert threshold is 6E-7.
• 6E-8	Revert threshold is 6E-8.
• 7E-5	Revert threshold is 7E-5.
• 7E-6	Revert threshold is 7E-6.
• 7E-7	Revert threshold is 7E-7.
• 7E-8	Revert threshold is 7E-8.
• 8E-5	Revert threshold is 8E-5.
• 8E-6	Revert threshold is 8E-6.
• 8E-7	Revert threshold is 8E-7.
• 8E-8	Revert threshold is 8E-8.
• 9E-5	Revert threshold is 9E-5.
• 9E-6	Revert threshold is 9E-6.
• 9E-7	Revert threshold is 9E-7.
• 9E-8	Revert threshold is 9E-8.
<TRIGWINDOW>	Specifies the trigger window value for Proactive Protection Regen in milli seconds. It should always be a multiple of the sample slot value, derived from the trigger threshold value. The maximum TRIGWINDOW value is 10000.
<RVRTWINDOW>	Specifies the revert window value for Proactive Protection Regen in milli seconds. It should always be a multiple of the sample slot value, derived from the revert threshold value. The maximum RVRTWINDOW value is 10000 and minimum value is 2000.
<OVRCLK>	Indicates whether the optical trunk is over-clocked or not. It can be Y or N. The default is N.
• DQPSK	Indicates the D-QPSK modulation format.
• QPSK	Indicates the QPSK modulation format.
<RXWLEN>	The RX wavelength. It is applicable in unidirectional regeneration mode of a muxponder card. In this case the RX wavelength can be different from the nominal TX wavelength (EXPWLEN). It can be any valid DWDM wavelength value. The default value is USE-TWL1.
<PST>	(Optional) Primary state. The parameter type is PST, which indicates the current overall service condition of an entity.
• Unlocked	In service
• Locked	Out of service

<SST>	(Optional) Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AutomaticInService	Automatic in service
• Disabled	Disabled
• Loopback	Loopback
• MismatchofEquipmentAlarm	Mismatch of equipment and attributes
• Maintenance	Maintenance mode
• OutOfGroup	Out of group
• SoftwareDownload	Software downloading
• Unassigned	Unassigned
• NotInstalled	Unequipped

## 11.52 ED-OCHCC

(Cisco ONS 15454) The Edit Optical Channel Client Connection (ED-OCHCC) command edits the OCH client connection.

### Usage Guidelines

- The fields after CTAG (trailing colons) are optional.
- This command does not support multiple editing of OCH client connection provisioning.
- The default values for all optional parameters are NE default values. These values might not be the current value for a parameter. Use a retrieve command to obtain the current value.

### Category

DWDM

### Security

Provisioning

### Input Format

ED-OCHCC:[<TID>]:<AID>:<CTAG>[::CKTID=<CKTID>],  
[CMDMDE=<CMDMDE>]:[<PST>[,<SST>]];

### Input Example

ED-OCHCC:VA454-22:FAC-2-1-1:116:::CKTID=OCHCC,CMDMDE=FRCD:OOS,DSBLD;

### Input Parameters

<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
<CKTID>	Cross-connect ID. The default is Blank or None. String of ASCII characters. Maximum length is 48. If CKTID is empty or null the CKTID field will not be displayed.

<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
• FRCD	Force the system to override a state in which the command would normally be denied.
• NORM	Execute the command normally. Do not override any conditions that might make the command fail.
<PST>	Primary state. The parameter type is PST, which indicates the current overall service condition of an entity. The default is IS.
• IS	In service
• OOS	Out of service
<SST>	Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ. The default is AINS.
• AINS	Automatic in service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of equipment and attributes
• MT	Maintenance mode
• OOG	Out of group
• SWDL	Software downloading
• UAS	Unassigned
• UEQ	Unequipped

## 11.53 ED-OCHNC

(Cisco ONS 15454) The Edit Optical Channel Network Connection (ED-OCHNC) command edits the OCH network connection.

### Usage Guidelines

- The fields after CTAG (trailing colons) are optional.
- This command does not support multiple editing of wavelength connection provisioning.
- The default values for all optional parameters are NE default values. These values might not be the current value for a parameter. Use a retrieve command to obtain the current value.

### Category

DWDM

### Security

Provisioning

**Input Format**

```
ED-OCHNC:[<TID>]:<SRC>,<DST>:<CTAG>:::[CKTID=<CKTID>],[CMDMDE=<CMDMDE>],[
WLOPWR=<WLOPWR>],[VOAATTN=<VOAATTN>]:[<PST>[,<SST>]];
```

**Input Example**

```
ED-OCHNC:VA454-22:CHANWL-1-3-TX-1530.33,
LINEWL-4-1-RX-1530.33:116:::CKTID=CIRCUIT,CMDMDE=FRCD:LOCKED,DISABLED;
```

**Input Parameters**

<SRC>	Source access identifier from the “ <a href="#">26.8 CHANNEL</a> ” section on page 26-22. In two-way wavelength connection sources, both directions need to be indicated.
<DST>	Destination access identifier from the “ <a href="#">26.20 LINEWL</a> ” section on page 26-46. In two-way wavelength connection sources, both directions need to be indicated.
<CKTID>	Cross-connect ID. The default is Blank or None. String of ASCII characters. Maximum length is 48. If CKTID is empty or null the CKTID field will not be displayed.
<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
<ul style="list-style-type: none"> <li>FRCD</li> </ul>	Force the system to override a state in which the command would normally be denied.
<ul style="list-style-type: none"> <li>NORM</li> </ul>	Execute the command normally. Do not override any conditions that might make the command fail.
<WLOPWR>	The value of calibrated output power that the VOA is going to set as a result of its attenuation. WLOPWR is a float.
<VOAATTN>	The value of calibrated attenuation for the VOA expressed in dBm. The range is 0.0 to +30.0. VOAATTN is a float.
<PST>	Primary state. The parameter type is PST, which indicates the current overall service condition of an entity. The default is IS.
<ul style="list-style-type: none"> <li>IS</li> <li>OOS</li> </ul>	In service Out of service
<SST>	Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ. The default is AINS.
<ul style="list-style-type: none"> <li>AINS</li> <li>DSBLD</li> <li>LPBK</li> <li>MEA</li> <li>MT</li> <li>OOG</li> <li>SWDL</li> </ul>	Automatic in service Disabled Loopback Mismatch of equipment and attributes Maintenance mode Out of group Software downloading

---

• UAS	Unassigned
• UEQ	Unequipped

---

## 11.54 ED-OMS

(Cisco ONS 15454) The Edit Optical Multiplex Section (ED-OMS) command edits the attributes (service parameters) and state of an OMS facility.

**Usage Guidelines** None

**Category** DWDM

**Security** Provisioning

**Input Format** ED-OMS[:<TID>]:<AID>:<CTAG>[:::EXPBAND=<EXPBAND>],[VOAATTN=<VOAATTN>],[VOAPWR=<VOAPWR>],[CALOPWR=<CALOPWR>],[NAME=<NAME>],[SOAK=<SOAK>],[CMDMDE=<CMDMDE>][:<PST>[,<SST>]];

**Input Example** ED-OMS:PENNGROVE:BAND-6-1:114:::,EXPBAND=1530.32-1532.68,VOAATTN=2.5,VOAPWR=7.5,CALOPWR=0.0,NAME="OMSPORT",SOAK=8,CMDMDE=NORM:UNLOCKED,AUTOMATICINSERVICE;

Input Parameters	
<AID>	Access identifier from the <a href="#">“26.4 BAND” section on page 26-20</a> .
<RDIRN>	Ring directionality of the optical line. The parameter type is RDIRN_MODE, which is the optical ring directionality.
<ul style="list-style-type: none"> <li>• E-W</li> <li>• W-E</li> </ul>	<p>The direction of the signal is from east to west (clockwise).</p> <p>The direction of the signal is from west to east (counterclockwise).</p>
<EXPBAND>	The expected value of the optical band for this port. The parameter type is OPTICAL_BAND (optical band).
<ul style="list-style-type: none"> <li>• 1530.33 to 1532.68</li> <li>• 1534.25 to 1536.61</li> <li>• 1538.19 to 1540.56</li> <li>• 1542.14 to 1544.53</li> <li>• 1546.12 to 1548.51</li> <li>• 1550.12 to 1552.52</li> <li>• 1554.13 to 1556.55</li> <li>• 1558.17 to 1560.61</li> </ul>	<p>Band 1</p> <p>Band 2</p> <p>Band 3</p> <p>Band 4</p> <p>Band 5</p> <p>Band 6</p> <p>Band 7</p> <p>Band 8</p>
• USE-DEFAULT	This band is not yet configured/retrieved from unit.
<VOAATTN>	The value of calibrated attenuation for the VOA expressed in dBm. The range is 0.0 to +30.0. VOAATTN is a float.
<VOAPWR>	The value of calibrated output power that the VOA is going to set as a result of its attenuation. VOAPWR is a float.

<CALOPWR>	The value of the calibrated optical power expected for the line added to the calculated value which equals the total expected output power. Expressed in dBm. Defaults to 0 dBm. CALOPWR is a float.
• 0.5 to 12.0	Revertive time is 0.5 to 12.0 minutes.
<NAME>	Port name. NAME is a string.
<SOAK>	SOAK is an integer. Defaults to 8.
<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
• FRCD	Force the system to override a state where the command would normally be denied.
• NORM	Execute the command normally. Do not override any conditions that might make the command fail.
<PST>	Primary state. The parameter type is PST, which indicates the current overall service condition of an entity.
• IS	In service
• OOS	Out of service
<SST>	Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic in service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of equipment and attributes
• MT	Maintenance mode
• OOG	Out of group
• SWDL	Software downloading
• UAS	Unassigned
• UEQ	Unequipped

## 11.55 ED-OTS

(Cisco ONS 15454) The Edit Optical Transport Section (ED-OTS) command edits the attributes (service parameters) and state of an OTS facility.

**Usage Guidelines** None

**Category** DWDM

**Security**

Provisioning

**Input Format**

```
ED-OTS[:<TID>]:<AID>:<CTAG>[:::VOAATTN=<VOAATTN>],[VOAPWR=<VOAPWR>],[OFFSET=
<OFFSET>],[CALTILT=<CALTILT>],[OSRI=<OSRI>],[NAME=<NAME>],[SOAK=<SOAK>],[<
FG>],[<CG>],[CMDMDE=<CMDMDE>][:<PST>[,<SST>]];
```

**Input Example**

```
ED-OTS:PENNGROVE:LINE-6-1:114:::RDIRN=W-E,VOAATTN=5.0,VOAPWR=10.0,OFFSET=0.0,
CALTILT=0.0,OSRI=N,
NAME="OTS PORT",SOAK=8,CMDMDE=NORM:UNLOCKED,AUTOMATICINSERVICE;
```

**Input Parameters**

<AID>	Access identifier from the <a href="#">“26.19 LINE” section on page 26-43</a> .
<RDIRN>	Ring directionality of the optical line. The parameter type is RDIRN_MODE, which is the optical ring directionality.
<ul style="list-style-type: none"> <li>E-W</li> <li>W-E</li> </ul>	<p>The direction of the signal is from east to west (clockwise).</p> <p>The direction of the signal is from west to east (counterclockwise).</p>
<VOAATTN>	The value of calibrated attenuation for the VOA expressed in dBm. The range is 0.0 to +30.0. VOAATTN is a float.
<VOAPWR>	The value of calibrated output power that the VOA is going to set as a result of its attenuation. VOAPWR is a float.
<OFFSET>	The calibration value of the optical power added to the calculated reference value. Defaults to 0 dBm. OFFSET is a float.
<CALTILT>	(Optional) The amplifier calibration tilt offset to be added to the calculated reference value. Defaults to 0 dBm. CALTILT is a float.
<OSRI>	(Optional) Optical safety remote interlock (OSRI) is enabled or disabled. Present only on a port where the OSRI is supported. The parameter type is ON_OFF, which disables or enables an attribute.
<ul style="list-style-type: none"> <li>N</li> <li>Y</li> </ul>	<p>Disable an attribute.</p> <p>Enable an attribute.</p>
<NAME>	The name of the port. NAME is a string.
<SOAK>	SOAK is an integer. It defaults to 8.
<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
<ul style="list-style-type: none"> <li>FRCD</li> <li>NORM</li> </ul>	<p>Force the system to override a state where the command would normally be denied.</p> <p>Execute the command normally. Do not override any conditions that might make the command fail.</p>
<CG>	TDCU coarse grain value
<ul style="list-style-type: none"> <li>0</li> <li>-110</li> </ul>	<p>TDCU coarse grain value</p> <p>TDCU coarse grain value</p>

• -1100	TDCU coarse grain value
• -1210	TDCU coarse grain value
• -1320	TDCU coarse grain value
• -1430	TDCU coarse grain value
• -1540	TDCU coarse grain value
• -1650	TDCU coarse grain value
• -220	TDCU coarse grain value
• -330	TDCU coarse grain value
• -440	TDCU coarse grain value
• -550	TDCU coarse grain value
• -660	TDCU coarse grain value
• -770	TDCU coarse grain value
• -880	TDCU coarse grain value
• -990	TDCU coarse grain value
<FG>	TDCU fine grain value
• 0	TDCU fine grain value
• -45	TDCU fine grain value
• -450	TDCU fine grain value
• -495	TDCU fine grain value
• -540	TDCU fine grain value
• -585	TDCU fine grain value
• -630	TDCU fine grain value
• -675	TDCU fine grain value
• -90	TDCU fine grain value
• -135	TDCU fine grain value
• -180	TDCU fine grain value
• -225	TDCU fine grain value
• -270	TDCU fine grain value
• -315	TDCU fine grain value
• -360	TDCU fine grain value
• -405	TDCU fine grain value
<PST>	Primary state. The parameter type is PST, which indicates the current overall service condition of an entity.
• IS	In service
• OOS	Out of service
<SST>	Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic in service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of equipment and attributes
• MT	Maintenance mode

• OOG	Out of group
• SWDL	Software downloading
• UAS	Unassigned
• UEQ	Unequipped

## 11.56 ED-OTU2

(Cisco ONS 15454) The Edit Optical Transport Unit Level 2 (ED-OTU2) command edits the attributes (service parameters) and state of an OTU2 facility.

### Usage Guidelines

The default values for all optional parameters are NE default values. These values might not be the current value for a parameter. Use a retrieve command to obtain the current value.

### Category

DWDM

### Security

Provisioning

### Input Format

```
ED-OTU2[:<TID>]:<AID>:<CTAG>[:<<OSDBER=<SDBER>,<GCC=<GCC>,<DWRAP=<DRWAP>,<FEC=<FEC>,<PAYLOADMAP=<PAYLOADMAP>,<PMMODE=<PMMODE>,<FREQ=<FREQ>,<LOSSB=<LOSSB>,<NAME=<PORTNAME>,<SOAK=<SOAK>,<CMDMDE=<CMDMDE>[:<PST>[:<SST>]]];
```

### Input Example

```
ED-OTU2:CISCO:FAC-6-1-1:114:::NAME="NY
LINE",GCC=Y,OSDBER=1E-6,DWRAP=Y,FEC=STD,PAYLOADMAP=ASYNCH,PMMODE=STD,
CMDMDE=FRCD:IS,AINS;
```

### Input Parameters.

<AID>	Access identifier from the <a href="#">“26.19 LINE”</a> section on page 26-43.
<OSDBER>	OTN SDBER. Can only be provisioned on the working port. Defaults to 1E-7.  Parameter type is SD_BER—the threshold for declaring signal degrade on a facility or path.
• 1E-5	SDBER is 1E-5
• 1E-6	SDBER is 1E-6
• 1E-7	SDBER is 1E-7
• 1E-8	SDBER is 1E-8
• 1E-9	SDBER is 1E-9
<GCC>	Identifies the generic communication channel (GCC) connection of the port.

• Y	GCC can be utilized.
• N	GCC cannot be utilized.
<DWRAP>	(Optional) The ITU-T G.709 monitoring digital wrapper. It is either on or off. The system default is ON. For MXP_2.5G_10G and TXP_MR_10G cards, this applies only to the DWDM port. The parameter type is ON_OFF (disable or enable an attribute). To enable ITU-T G.709 monitoring, there should be no GCC on the DWDM port and the payload (in which the card is configured) should not be UNFRAMED. To disable ITU-T G.709 monitoring, there should be no GCC on the DWDM port, the FEC should be turned off, there should be no overhead circuit created on the DWDM port, and none of the client ports on the card should be part of a Y-cable protection group (muxponder only).
• N	Disable an attribute.
• Y	Enable an attribute.
<FEC>	(Optional) Forward error correction. It can be enabled only if ITU-T G.709 monitoring is turned ON. It is either off or enabled in standard or enhanced mode. The system default is standard FEC enabled. The FEC level PM and thresholds apply if the FEC is turned ON. The parameter type is FEC_MODE, which specifies the type of forward error correction.
• ENH	Enhanced FEC is enabled.
• ENH-14	Enhanced FEC 1.4 is enabled
• ENH-17	Enhanced FEC 1.7 is enabled
• OFF	FEC is disabled.
• STD	Standard FEC is enabled.
<PAYLOADMAP>	(Optional) The type of payload mapping. It can be enabled only if ITU-T G.709 monitoring is turned ON and FEC is enabled. The parameter type is PAYLOAD_MAPPING, which is the payload mapping mode.
• ASYNCH	Asynchronous mapping mode
• ODU	ODU multiplex structure mode
• SYNCH	Synchronous mapping mode
• NOOPU2FIXEDSTUFF	Mapping with no FIXEDSTUFF
<FREQ>	(Optional) The parameter type is OPTICAL_WLEN, which indicates the optical wavelength.
• 1310	Wavelength 1310
• 1470	Wavelength 1470
• 1490	Wavelength 1490
• 1510	Wavelength 1510
• 1528.77	Wavelength 1528.77
• 1529.55	Wavelength 1529.55
• 1529.94	Wavelength 1529.94
• 1530	Wavelength 1530
• 1530.33	Wavelength 1530.33

• 1530.73	Wavelength 1530.73
• 1531.12	Wavelength 1531.12
• 1531.51	Wavelength 1531.51
• 1531.90	Wavelength 1531.90
• 1532.29	Wavelength 1532.29
• 1532.68	Wavelength 1532.68
• 1533.07	Wavelength 1533.07
• 1533.47	Wavelength 1533.47
• 1533.86	Wavelength 1533.86
• 1534.25	Wavelength 1534.25
• 1534.64	Wavelength 1534.64
• 1535.04	Wavelength 1535.04
• 1535.43	Wavelength 1535.43
• 1535.82	Wavelength 1535.82
• 1536.22	Wavelength 1536.22
• 1536.61	Wavelength 1536.61
• 1537	Wavelength 1537
• 1537.40	Wavelength 1537.40
• 1537.79	Wavelength 1537.79
• 1538.19	Wavelength 1538.19
• 1538.58	Wavelength 1538.58
• 1538.98	Wavelength 1538.98
• 1539.37	Wavelength 1539.37
• 1539.77	Wavelength 1539.77
• 1540.16	Wavelength 1540.16
• 1540.56	Wavelength 1540.56
• 1540.95	Wavelength 1540.95
• 1541.35	Wavelength 1541.35
• 1541.75	Wavelength 1541.75
• 1542.14	Wavelength 1542.14
• 1542.35	Wavelength 1542.35
• 1542.54	Wavelength 1542.54
• 1542.94	Wavelength 1542.94
• 1543.33	Wavelength 1543.33
• 1543.73	Wavelength 1543.73
• 1544.13	Wavelength 1544.13
• 1544.53	Wavelength 1544.53
• 1544.92	Wavelength 1544.92
• 1545.32	Wavelength 1545.32
• 1545.72	Wavelength 1545.72
• 1546.12	Wavelength 1546.12

• 1546.52	Wavelength 1546.52
• 1546.92	Wavelength 1546.92
• 1547.32	Wavelength 1547.32
• 1547.72	Wavelength 1547.72
• 1548.12	Wavelength 1548.12
• 1548.51	Wavelength 1548.51
• 1548.92	Wavelength 1548.92
• 1549.32	Wavelength 1549.32
• 1549.71	Wavelength 1549.71
• 1550	Wavelength 1500
• 1550.12	Wavelength 1550.12
• 1550.52	Wavelength 1550.52
• 1550.92	Wavelength 1550.92
• 1551.32	Wavelength 1551.32
• 1551.72	Wavelength 1551.72
• 1552.12	Wavelength 1552.12
• 1552.52	Wavelength 1552.52
• 1552.93	Wavelength 1552.93
• 1553.33	Wavelength 1553.33
• 1553.73	Wavelength 1553.73
• 1554.13	Wavelength 1554.13
• 1554.13	Wavelength 1554.13
• 1554.94	Wavelength 1554.94
• 1555.34	Wavelength 1555.34
• 1555.75	Wavelength 1555.75
• 1556.15	Wavelength 1556.15
• 1556.55	Wavelength 1556.55
• 1556.96	Wavelength 1556.96
• 1557.36	Wavelength 1557.36
• 1557.77	Wavelength 1557.77
• 1558.17	Wavelength 1558.17
• 1558.58	Wavelength 1558.58
• 1558.98	Wavelength 1558.98
• 1559.39	Wavelength 1559.39
• 1559.79	Wavelength 1559.79
• 1560.20	Wavelength 1560.20
• 1560.61	Wavelength 1560.61
• 1561.01	Wavelength 1561.01
• 1561.42	Wavelength 1561.42
• 1561.83	Wavelength 1561.83
• 1570	Wavelength 1570

• 1570.83	Wavelength 1570.83
• 1571.24	Wavelength 1571.24
• 1571.65	Wavelength 1571.65
• 1572.06	Wavelength 1572.06
• 1572.48	Wavelength 1572.48
• 1572.89	Wavelength 1572.89
• 1573.30	Wavelength 1573.30
• 1573.71	Wavelength 1573.71
• 1574.13	Wavelength 1574.13
• 1574.54	Wavelength 1574.54
• 1574.95	Wavelength 1574.95
• 1575.37	Wavelength 1575.37
• 1575.78	Wavelength 1575.78
• 1576.20	Wavelength 1576.20
• 1576.61	Wavelength 1576.61
• 1577.03	Wavelength 1577.03
• 1577.44	Wavelength 1577.44
• 1577.86	Wavelength 1577.86
• 1578.27	Wavelength 1578.27
• 1578.69	Wavelength 1578.69
• 1579.10	Wavelength 1579.10
• 1579.52	Wavelength 1579.52
• 1579.93	Wavelength 1579.93
• 1580.35	Wavelength 1580.35
• 1580.77	Wavelength 1580.77
• 1581.18	Wavelength 1581.18
• 1581.60	Wavelength 1581.60
• 1582.02	Wavelength 1582.02
• 1582.44	Wavelength 1582.44
• 1582.85	Wavelength 1582.85
• 1583.27	Wavelength 1583.27
• 1583.69	Wavelength 1583.69
• 1584.11	Wavelength 1584.11
• 1584.53	Wavelength 1584.53
• 1584.95	Wavelength 1584.95
• 1585.36	Wavelength 1585.36
• 1585.78	Wavelength 1585.78
• 1586.20	Wavelength 1586.20
• 1586.62	Wavelength 1586.62
• 1587.04	Wavelength 1587.04
• 1587.46	Wavelength 1587.46

• 1587.88	Wavelength 1587.88
• 1588.30	Wavelength 1588.30
• 1588.73	Wavelength 1588.73
• 1589.15	Wavelength 1589.15
• 1589.57	Wavelength 1589.57
• 1589.99	Wavelength 1589.99
• 1590	Wavelength 1590
• 1590.41	Wavelength 1590.41
• 1590.83	Wavelength 1590.83
• 1591.26	Wavelength 1591.26
• 1591.68	Wavelength 1591.68
• 1592.10	Wavelength 1592.10
• 1592.52	Wavelength 1592.52
• 1592.95	Wavelength 1592.95
• 1593.37	Wavelength 1593.37
• 1593.79	Wavelength 1593.79
• 1594.22	Wavelength 1594.22
• 1594.64	Wavelength 1594.64
• 1595.06	Wavelength 1595.06
• 1595.49	Wavelength 1595.49
• 1596.34	Wavelength 1596.34
• 1596.76	Wavelength 1596.76
• 1597.19	Wavelength 1597.19
• 1597.62	Wavelength 1597.62
• 1598.04	Wavelength 1598.04
• 1598.47	Wavelength 1598.47
• 1598.89	Wavelength 1598.89
• 1599.32	Wavelength 1599.32
• 1599.75	Wavelength 1599.75
• 1600.06	Wavelength 1600.06
• 1601.03	Wavelength 1601.03
• 1601.46	Wavelength 1601.46
• 1601.88	Wavelength 1601.88
• 1602.31	Wavelength 1602.31
• 1602.74	Wavelength 1602.74
• 1603.17	Wavelength 1603.17
• 1603.60	Wavelength 1603.60
• 1604.03	Wavelength 1604.03
• 1610	Wavelength 1610
• USE-TWL1	Use Tunable Wavelength 1
<LOSSB>	(Optional) The parameter type is REACH, which indicates the reach values.

• AUTOPROV	Autoprovisioning
• CX	Reach CX
• CX1	Reach CX1
• DX	Reach DX
• HX	Reach HX
• I1	Reach I1
• IR-1	Reach IR-1
• IR-2	Reach IR-2
• L1	Reach L1
• L2	Reach L2
• L3	Reach L3
• LR-1	Reach LR-1
• LR-2	Reach LR-2
• LR-3	Reach LR-3
• LX	Reach LX
• S1	Reach S1
• S2	Reach S2
• SR	Reach SR
• SR-1	Reach SR-1
• SX	Reach SX
• T	Reach T
• TEN-GE-ER	10 GE extended range
• TEN-GE-LR	10 GE long range
• TEN-GE-SR	10 GE short range
• VX	Reach VX
• ZX	Reach ZX
<PORTNAME>	(Optional) Port name. PORTNAME is a string.
<SOAK>	(Optional) Locked-AutomaticInService to Unlocked transition soak time as measured in 15-minute intervals. A value of 4 equals a soak time of 1 hour. The allowable range is 0 to 192 intervals (maximum of 48 hours). SOAK is an integer.
<CMDMDE>	(Optional) Command mode. Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in Unlocked-Enabled or Locked-Disabled, AutomaticInService service states.
<PST>	(Optional) Primary state. The parameter type is PST, which indicates the current overall service condition of an entity.
• Unlocked	In service
• Locked	Out of service
<SST>	(Optional) Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.

## 11.57 ED-PID

(Cisco ONS 15454) The Edit Password (ED-PID) command allows a user to change his or her own password.

### Usage Guidelines

- Passwords are masked for the following security commands: ACT-USER, ED-PID, ENT-USER-SECU, and ED-USER-SECU. Access to a TL1 session by any means will have the password masked. The Cisco Transport Controller (CTC) Request History and Message Log will also show the masked commands. When a password-masked command is reissued by double-clicking the command from CTC Request History, the password will still be masked in the CTC Request History and Message Log. The actual password that was previously issued will be sent to the NE. To use a former command as a template only, single-click the command in CTC Request History. The command will be placed in the Command Request text box, where you can edit the appropriate fields prior to reissuing it.

- The password will not appear in the TL1 log on the NE.

- For the ED-PID command:

```
ED-PID:[TID]:<UID>:[CTAG]::<OLDPID>,<NEWPID>;
```

The syntax of OLDPID is not checked. The NEWPID is required to follow Telcordia standards (for example, 10 characters maximum including 1 letter, 1 number, and any one of the following characters: #, %, or +). The OLDPID must match what is in the database.

You must use the ED-USER-SECU command to change the default password for the CISCO15 superuser.

- The ED-PID command cannot be used to change the empty password to a valid password.

### Category

Security

### Security

Retrieve

### Input Format

```
ED-PID:[<TID>]:<UID>:<CTAG>::<OLDPID>,<NEWPID>;
```

### Input Example

```
ED-PID:PETALUMA:UID:123::OLDPWD,NEWPWD;
```

### Input Parameters

<UID>	User identifier. Up to 10 alphanumeric characters. UID is a string.
<OLDPID>	The user's old password. Up to 10 alphanumeric characters. Passwords are encrypted and will appear as asterisks (*). OLDPID is a string.
<NEWPID>	The user's new password. Up to 10 alphanumeric characters. Passwords are encrypted and will appear as asterisks (*). NEWPID is a string.

## 11.58 ED-POS

(Cisco ONS 15454) The Edit Packet-Over-SONET (ED-POS) command edits the back-end port information for the Ethernet card when the back-end port is working in POS mode. The default values for all optional parameters are NE default values. These values might not be the current value for a parameter. Use the retrieve command to obtain the current value. ED-POS cannot set ENCAP and PST/SST.

### Usage Guidelines

This command is supported for the ONS 15454 CE-100T-8 and CE-1000-4 cards.

### Category

Ports

### Security

Provisioning

### Input Format

```
ED-POS:[<TID>]:<AID>:<CTAG>:::[ENCAP=<ENCAP>],[NAME=<NAME>],
[CMDMDE=<CMDMDE>],[SOAK=<SOAK>]:[<PST>[,<SST>]];
```

### Input Example

```
ED-POS:PETALUMA:VFAC-2-0:123::ENCAP=HDLC,NAME=NAME,CMDMDE=CMDMDE,
SOAK=32:IS,AINS;
```

### Input Parameters

<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
<ENCAP>	Encapsulation. The parameter type is ENCAP, which is the frame encapsulation type.
<ul style="list-style-type: none"> <li>GFP_F</li> <li>GFP_T</li> <li>HDLC</li> <li>HDLC_LEX</li> <li>HDLC_X86</li> </ul>	<ul style="list-style-type: none"> <li>GFP frame mode</li> <li>GFP transparent mode</li> <li>HDLC frame mode</li> <li>HDLC LAN extension frame mode</li> <li>HDLC X.86 frame mode</li> </ul>
<NAME>	Port name. NAME is a string.
<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
<ul style="list-style-type: none"> <li>FRCD</li> <li>NORM</li> </ul>	<ul style="list-style-type: none"> <li>Force the system to override a state where the command would normally be denied.</li> <li>Execute the command normally. Do not override any conditions that might make the command fail.</li> </ul>

<SOAK>	OOS-AINS to IS transition soak time as measured in 15 minute intervals, so a value of 4 translates to a soak time of 1 hour. The allowable range is 0 to 192 intervals (maximum of 48 hours). SOAK is an integer.
<PST>	Primary state. The parameter type is PST, which indicates the current overall service condition of an entity.
• IS	In service
• OOS	Out of service
<SST>	Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic in service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of equipment and attributes
• MT	Maintenance mode
• OOG	Out of group
• SWDL	Software downloading
• UAS	Unassigned
• UEQ	Unequipped

## 11.59 ED-PROTOCOL

(Cisco ONS 15454) The Edit Protocol (ED-PROTOCOL) command is used to enable/disable a protocol/service that is supported in the NE. Valid protocols include shell/file system access (SHELL), EMS, TL1, and Simple Network Management Protocol (SNMP).

### Usage Guidelines

- If the AID is TL1, the command will be denied because TL1 users are not allowed to change the setting for TL1 protocol.
- If the PROTOCOLAID is SNMP, the SECURE PROTOCOLSTAT is supported. To enable SNMP, set PROTOCOLSTAT to either SECURE or UNSECURE.

### Category

Security

### Security

Superuser

### Input Format

ED-PROTOCOL:[<TID>]:<AID>:<CTAG>::<PROTSTAT>;

### Input Example

ED-PROTOCOL:CISCONODE:EMS:123::SECURE;

Input Parameters		
	<AID>	The protocol/service to which the command pertains. The parameter type is PROTOCOLAID, which is the AID for the protocol/service.
	<ul style="list-style-type: none"> <li>• EMS</li> <li>• SHELL</li> <li>• SNMP</li> <li>• TL1</li> </ul>	CTC/CTM protocol/service Shell/file system access protocol SNMP protocol/service TL1 protocol service
	<PROTSTAT>	Identifies the status of the protocol/service. The parameter type is PROTOCOLSTAT, which is the status of the protocol.
	<ul style="list-style-type: none"> <li>• DISABLED</li> <li>• SECURE</li> <li>• UNSECURE</li> </ul>	The protocol cannot be used. The protocol is enabled and communication using the protocol are sure, for example, through Secure Shell Protocol (SSH). The protocol is enabled but communication is not secure, for example, through Telnet.

## 11.60 ED-QNQ-CHGRP

(Cisco ONS 15454) The Edit Channel Group QinQ (ED-QNQ-CHGRP) command edits the IEEE 802.1Q tunneling (QinQ) relationship between the CE-VLAN and the S-VLAN for Gigabit Ethernet uniprot provisioning associated to a channel group.

### Usage Guidelines

- The default values for all optional parameters are NE default values, but these values might not be the current value for a parameter. Use the RTRV-ETH command to obtain the current value.
- If the AID is invalid, an IIAC (Invalid AID) error message is returned.
- The ALL AID is invalid for this command.

### Category

Channel Group

### Security

Provisioning

### Input Format

```
ED-QNQ-CHGRP:[<TID>]:<AID>:<CTAG>::<FIRST_CE_VLAN_ID>,<LAST_CE_VLAN_ID>,<S_VLAN_ID>:[RULE=<RULE>],[INTERNALVLAN=<INTERNAL_VLAN_ID>],[INGRESSCOS=<INGRESSCOS>][:];
```

### Input Example

```
ED-QNQ-CHGRP:CISCO:CHGRP-1-1:1::10,11,100:RULE=ADD;
```

**Input Parameters**

<AID>	Access identifier from the “26.9 CHGRP” section on page 26-24.
<FIRSTCEVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<LASTCEVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<RULE>	Used to represent the rules allowed for the VLAN tagging operations. The default value is ADD.
<ul style="list-style-type: none"> <li>• ADD</li> </ul>	The S-VLAN tag is added to the CE-VLAN tag.
<ul style="list-style-type: none"> <li>• XLTE</li> </ul>	The S-VLAN tag replaces the CE-VLAN tag (single Q).
<ul style="list-style-type: none"> <li>• XLTE-ADD</li> </ul>	XLTE and ADD rule applied together. This rule request to supply an internal S-VLAN. First the Internal VLAN substitutes the Customer VLAN, then Service Provider VLAN TAG (S-VLAN) is added
<ul style="list-style-type: none"> <li>• DOUBLE-ADD</li> </ul>	ADD rule applied two times. This rule request to supply an internal S-VLAN. First the Internal VLAN is added, then Service Provider VLAN TAG (S-VLAN) is added to have a double tag
<INTERNAL_VLAN_ID>	Internal VLAN ID.
<INGRESSCOS>	Identifies the COS value set in the S-VLAN tag.
<ul style="list-style-type: none"> <li>• 0 to 7</li> </ul>	Set a Cos value
<ul style="list-style-type: none"> <li>• DSCP</li> </ul>	The COS is set according to DSCP to COS mapping table.
<ul style="list-style-type: none"> <li>• TRUST</li> </ul>	Use the Customer COS
<ul style="list-style-type: none"> <li>• VLAN</li> </ul>	The COS provisioned on CVLAN basis (QinQ selective mode)

## 11.61 ED-QNQ-ETH

(Cisco ONS 15454) The Edit ETH QinQ Table (ED-QNQ-ETH) command modifies the IEEE 802.1Q tunneling (QinQ) relationship between the customer VLAN (CE-VLAN) and the service provider VLAN (S-VLAN) for Gigabit Ethernet uniprot provisioning associated to an L2 Ethernet port.

**Usage Guidelines**

- The default values for all optional parameters are NE default values, but these values might not be the current value for a parameter. Use a retrieve command to obtain the current value.
- If the AID is invalid, an IIAC (Invalid AID) error message is returned.
- The ALL AID is invalid for this command.

**Category** Ethernet

**Security** Provisioning

**Input Format** ED-QNQ-ETH:[<TID>]:<AID>:<CTAG>::<FIRSTCEVLANID>,<LASTCEVLANID>,<S\_VLAN\_ID>[:RULE=<RULE>],[INTERNALVLAN=<INTERNAL\_VLAN\_ID>],[INGRESSCOS=<INGRESSCOS>][:];

**Input Example** ED-QNQ-ETH:PETALUMA:ETH-1-1-1:1::10,11,100:RULE=ADD;

Input Parameters		
<AID>		Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the <a href="#">“26.16 ETH” section on page 26-40</a> .
<FIRSTCEVLANID>		VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<LASTCEVLANID>		VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<SVLANID>		VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<RULE>		Used to represent the rules allowed for VLAN tagging operations.
• ADD		The service provider VLAN tag is added to the customer VLAN tag.
• XLTE		The service provider VLAN tag replaces the CE-VLAN tag (single Q).
• XLTE-ADD		XLTE and ADD rule applied together. This rule request to supply an internal S-VLAN. First the Internal VLAN substitutes the Customer VLAN, then Service Provider VLAN TAG (S-VLAN) is added
• DOUBLE-ADD		ADD rule applied two times. This rule request to supply an internal S-VLAN. First the Internal VLAN is added, then Service Provider VLAN TAG (S-VLAN) is added to have a double tag
<INTERNAL_VLAN_ID>		Internal VLAN ID
<INGRESSCOS>		Identifies the COS value set in the S-VLAN tag.
• 0 to 7		Set a Cos value
• DSCP		The COS is set according to DSCP to COS mapping table.

• TRUST	Use the Customer COS.
• VLAN	The COS provisioned on CVLAN basis (QinQ selective mode)

## 11.62 ED-REP

(Cisco ONS 15454) The Edit Resilient Ethernet Protocol (ED-REP) command edits the Resilient Ethernet Protocol (REP) configuration on the ethernet port.

### Usage Guidelines

- The PREEMPTDELAY parameter value “0” indicates the automatic VLB is disabled on the Edge Ports.
- The NE generates a REPT-DBCHG notification when the preempt delay timer is changed.
- This command is applicable only to GE\_XP and 10GE\_XP cards.

### Category

Ethernet

### Security

Provisioning

### Input Format

ED-REP:[<TID>]:<AID>:<CTAG>::<PREEMPTDELAY>;

### Input Example

ED-REP:CISCO:ETH-12-1-1:1::20;

### Input Parameters

<AID>	Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the “26.16 ETH” section on page 26-40.
<PREEMPT DELAY>	Specifies the time in minutes after which the VLAN load balancing is triggered automatically. The valid range is from 15 to 300 minutes. The default value is 0.

## 11.63 ED-ROLL-<MOD\_PATH>

(Cisco ONS 15454) The Edit Roll for STS1, STS12C, STS192C, STS24C, STS3C, STS48C, STS96C, STS6C, STS9C, VT1, or VT2 (ED-ROLL-<MOD\_PATH>) command forces a rolling operation, which attempts to force a valid signal to complete the rolling operation.

### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.



#### Note

STS18C and STS36C are not supported for this command in this release.

**Category** Bridge and Roll

**Security** Provisioning

**Input Format** ED-ROLL-<MOD\_PATH>:[<TID>]:<FROM>,<TO>:<CTAG>:::[CMDMDE=<CMDMDE>];

**Input Example** ED-ROLL-ST51:PETALUMA:STS-1-1-1,STS-2-1-1:1:::CMDMDE=FRCD;

<b>Input Parameters</b>	<FROM>	Source access identifier from the “ <a href="#">26.12 CrossConnectId1</a> ” section on page 26-29. It is one of the termination points (legs) of the existing cross-connection. If the existing cross-connection is one-way, then this termination point (leg) should be the FROM-AID termination point. Otherwise, FROM is not significant. FROM and TO should be entered as they are entered in the ENT-CRS command. You can issue RTRV-CRS command, and use the response for FROM and TO parameters.
	<TO>	Destination access identifier from the “ <a href="#">26.12 CrossConnectId1</a> ” section on page 26-29. It is one of the termination points (legs) of the existing cross-connection. If the existing cross-connection is one-way, then this termination point (leg) should be the TO-AID termination point. Otherwise, the TO is not significant. FROM and TO should be entered as they are entered in the ENT-CRS command. You can issue RTRV-CRS command, and use the response for FROM and TO parameters.
	<CMDMDE>	<p>The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.</p> <p><b>Note</b> CMDMDE can only go from NORM to FRCD (cannot go from FRCD to NORM). CMDMDE cannot be set to NORM using this command.</p>
	<ul style="list-style-type: none"> <li>• FRCD</li> </ul>	Force the system to override a state where the command would normally be denied.
	<ul style="list-style-type: none"> <li>• NORM</li> </ul>	Execute the command normally. Do not override any conditions that might make the command fail.

## 11.64 ED-SLV-WDMANS

(Cisco ONS 15454) The Edit Span Loss Verification Wavelength Division Multiplexing Automatic Node Set-Up (ED-SLV-WDMANS) command edits the expected span loss verification.

### Usage Guidelines

None

### Category

DWDM

### Security

Maintenance

### Input Format

ED-SLV-WDMANS:[<TID>]:<AID>:<CTAG>[::<ROLE>][:];

### Input Example

ED-SLV-WDMANS:VA454-22:WDMANS-E:116;

### Input Parameters

<AID>	Access identifier from the “ <a href="#">26.34 WDMANS</a> ” section on <a href="#">page 26-59</a> .
<ROLE>	The role the unit is playing in the protection group.
• PROT	The entity is the protection unit in the protection group.
• WORK	The entity is the working unit in the protection group.

## 11.65 ED-STCN-REP

(Cisco ONS 15454) The Edit Segment Topology Change Notification Resilient Ethernet Protocol (ED-STCN-REP) command edits the Segment Topology Change Notification (STCN) for REP Segment on the ethernet ports.

### Usage Guidelines

- STCN can be enabled only on the EDGE ports of the REP Segment.
- If the STCN is not enabled, you cannot edit any other parameters related to STCN.
- Only one Segment range can be added or removed at a time
- A maximum of 2 Segment range can be configured on the ethernet edge port.
- This command is applicable only to GE\_XP and 10GE\_XP cards.

### Category

Ethernet

**Security**

Provisioning

**Input Format**

ED-STCN-REP:[<TID>]:<AID>:<CTAG>:::[STCNENABLED=<STCNENABLED>],[STCNOPERATION=<STCNOPERATION>],[SEGRANGESTART=<SEGRANGESTART>],[SEGRANGEEND=<SEGRANGEEND>],[STCNPORT=<STCNPORT>];

**Input Example**

ED-STCN-REP::ETH-16-1-1:1:::STCNENABLED=Y,STCNOPERATION=ADD,SEGRANGESTART=1000,SEGRANGEEND=1004,STCNPORT=ETH-16-2-1;

**Input Parameters**

<AID>	Access identifier from the “26.17 FACILITY” section on page 26-40.
<STCNENABLED>	To enable or disable the Segment Topology Notification on ethernet entity for REP.
<ul style="list-style-type: none"> <li>• Y</li> <li>• N</li> </ul>	<ul style="list-style-type: none"> <li>Enables STCN on the ethernet port.</li> <li>Disables STCN on the ethernet port.</li> </ul>
<STCNOPERATION>	Adds or removes the range for STCN notification.
<ul style="list-style-type: none"> <li>• ADD</li> <li>• REMOVE</li> </ul>	<ul style="list-style-type: none"> <li>Adds the range to a list of segment ranges for STCN notification.</li> <li>Removes the range from the list of ranges for STCN notification.</li> </ul>
<SEGRANGESTART>	Indicates the segment range start value for the STCN. The valid range is from 0 to 1024.
<SEGRANGEEND>	Indicates the segment range end value for the STCN. The valid range is from 0 to 1024.
<STCNPORT>	Determines on which ethernet port the STCN should be sent. STCNPORT is an AID, it takes ETH AID value. The default is NULL.

## 11.66 ED-SYNCN

(Cisco ONS 15454) The Edit Synchronization (ED-SYNCN) command edits the synchronization reference list used to determine the sources for the NE's reference clock and the BITS output clock. For each clock, up to three synchronization sources might be specified (for example, PRIMARY, SECOND, THIRD). To view or edit the system timing mode, use the RTRV-NE-SYNCN or ED-NE-SYNCN commands.

**Usage Guidelines**

To retrieve/set the timing mode, SSM message set, or quality of RES information, use the RTRV-NE-SYNCN and ED-NE-SYNCN commands.

**Category**

Synchronization

**Security**

Provisioning

**Input Format**

ED-SYNCN:[&lt;TID&gt;]:&lt;AID&gt;:&lt;CTAG&gt;:::[PRI=&lt;PRI&gt;],[SEC=&lt;SEC&gt;],[THIRD=&lt;THIRD&gt;][:];

**Input Example**

ED-SYNCN:BOYES:SYNC-NE:112:::PRI=INTERNAL,SEC=INTERNAL,THIRD=INTERNAL;

**Input Parameters**

<AID>	Access identifier from the “26.30 SYNC_REF” section on page 26-58.
<PRI>	Primary reference of the synchronization from the “26.29 SYN_SRC” section on page 26-56.
<SEC>	Secondary reference of the synchronization from the “26.29 SYN_SRC” section on page 26-56.
<THIRD>	Third reference of the synchronization from the “26.29 SYN_SRC” section on page 26-56.

## 11.67 ED-T1

(Cisco ONS 15454) The Edit Digital Signal Facility (ED-T1) command edits the attributes related to a DS1/T1 port.

**Usage Guidelines**

- This command is not allowed if the card is a protect card.
- If sending this command to edit TACC and any other attribute(s), and the port having the cross-connection, the Parameters Not Compatible error message will be returned.
- Editing the TACC using an ED-xxx command is only allowed when there is no circuit/cross-connection on the port and the port/VT does not have a TAP or TACC number. Otherwise, an error message (for example, VT in Use) will be returned.
- TACC creation will be denied on protect ports/cards.
- AUTO-PROV is not supported.
- The AISONLPBK and RETIME options are applicable to the DS1/E1-56 card on the ONS 15454.
- The default values for all optional parameters are NE default values. These values might not be the current value for a parameter. Use a retrieve command to retrieve the current value.
- The parameters SYNCMAP, and VTMAP are only supported on the DS1/E1-56 card on the ONS 15454.
- The parameters ADMSSM and INHFELPBK are only supported on the DS1/E1-56 card on the ONS 15454.
- You cannot directly transition a facility from IS to OOS-MA,DSBLD service state. You can transition a facility to OOS-MA,DSBLD service state from any state except OOS-MA,MT. To transition a facility from OOS-MA,MT to OOS-MA,DSBLD service state, all the following conditions must be met:
  - The facility is not sourcing a synchronization clock

- The facility's DCC is disabled
- The facility is not part of a protection group
- The facility is not supporting cross-connects
- The facility is not using overhead connections or overhead terminations (such as express orderwire, local orderwire, or user data channels [UDCs])



**Note** The conditions stipulated can be overridden by using the CMDMDE=FRCD option. The FRCD option will immediately remove the facility from service (except for IS to OOS-MA,DSBLD transition) with no consideration for orderly interruption.

- The parameters BERTMODE, BERTPATTERN, and BERTERRCOUNT apply to DS1/E1-56 and DS3XM-12 cards.
- BERT is implemented on a single port.

---

**Category**

Ports

---

**Security**

Provisioning

---

**Input Format**

```
ED-T1:[<TID>]:<AID>:<CTAG>[::LINECDE=<LINECDE>],[FMT=<FMT>],[LBO=<LBO>],[TACC=<TACC>],[TAPTYPE=<TAPTYPE>],[SOAK=<SOAK>],[SFBER=<SFBER>],[SDBER=<SDBER>],[SYNCSMSG=<SYNCSMSG>],[SENDDUS=<SENDDUS>],[NAME=<NAME>],[CMDMDE=<CMDMDE>],[AISONLPBK=<AISONLPBK>],[MODE=<MODE>],[SYNCSMAP=<SYNCSMAP>],[ADMSSM=<ADMSSM>],[VTMAP=<VTMAP>],[AISVONAI=<AISVONAI>],[AISONLOF=<AISONLOF>],[INHFELPBK=<INHFELPBK>],[INHFEBPLPBK=<INHFEBPLPBK>],[BERTMODE=<BERTMODE>],[BERTPATTERN=<BERTPATTERN>],[BERTERRCOUNT=<BERTERRCOUNT>][:<PST>][,<SST>];
```

---

**Input Example**

```
ED-T1:CISCO:FAC-2-1:1223:::LINECDE=AMI,FMT=ESF,LBO=0-131,TACC=8,
TAPTYPE=SINGLE,SOAK=10,SFBER=1E-4,SDBER=1E-6,SYNCSMSG=Y,SENDDUS=Y,
NAME="T1 PORT",CMDMDE=FRCD,AISONLPBK=AIS_ON_LPBK_ALL,
MODE=FDL,SYNCSMAP=ASYNCS,ADMSSM=STU,VTMAP=GR253,AISVONAI=Y,
AISONLOF=Y,INHFELPBK=N, BERTMODE=NONE,BERTPATTERN=NONE,
BERTERRCOUNT=0:IS,AINS;
```

---

**Input Parameters**

<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
<LINECDE>	Line code. The parameter type is LINE_CODE.
• AMI	Line code value is AMI.
• B8ZS	Line code value is B8ZS.
<FMT>	Digital signal frame format. The parameter type is FRAME_FORMAT, which is the frame format for a T1 port.

• D4	Frame format is D4.
• ESF	Frame format is ESF.
• UNFRAMED	Frame format is unframed.
<LBO>	Line build-out settings. The parameter type is LINE_BUILDOUT.
• 0–131	Line build-out range is 0–131.
• 132–262	Line build-out range is 132–262.
• 263–393	Line build-out range is 263–393.
• 394–524	Line build-out range is 394–524.
• 525–655	Line build-out range is 525–655.
<TACC>	TAP number within a range of 0 to 999. Indicates whether the digroup being provisioned is to be used as a test access digroup. When TACC is 0 (zero), the TAP is deleted. Default is N. TACC is an integer.
<TAPTYPE>	TAP type. Defaults to DUAL. The parameter type is TAPTYPE (test access point type).
• DUAL	Dual FAD
• SINGLE	Single FAD
<SOAK>	OOS-AINS to IS transition soak time as measured in 15-minute intervals. A value of 4 equals a soak time of 1 hour. The allowable range is 0 to 192 intervals (maximum of 48 hours). SOAK is an integer.
<SFBER>	The port signal failure threshold. The parameter type is SF_BER, which is the threshold for declaring signal failure on a facility or path.
• 1E-3	SFBER is 1E-3.
• 1E-4	SFBER is 1E-4.
• 1E-5	SFBER is 1E-5.
<SDBER>	Port signal degrade threshold. The parameter type is SD_BER, which is the threshold for declaring signal degrade on a facility or path.
• 1E-5	SDBER is 1E-5.
• 1E-6	SDBER is 1E-6.
• 1E-7	SDBER is 1E-7.
• 1E-8	SDBER is 1E-8.
• 1E-9	SDBER is 1E-9.
<SYNCSMSG>	Synchronization status messaging is enabled or disabled on the T1 facility.
• N	Disable an attribute.
• Y	Enable an attribute.
<SENDDUS>	The facility will send the DUS value as the SSM for that facility.
• N	Disable an attribute.
• Y	Enable an attribute.
<NAME>	Name. NAME is a string.

<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
• FRCD	Force the system to override a state where the command would normally be denied.
• NORM	Execute the command normally. Do not override any conditions that might make the command fail.
<AISONLPBK>	Defaults to AIS_ON_LPBK_ALL. The parameter type is AIS_ON_LPBK, which indicates if AIS is sent on a loopback.
• FACILITY	AIS is sent on facility loopbacks.
• ALL	AIS is sent on all loopbacks.
• OFF	AIS is not sent on loopbacks.
• TERMINAL	AIS is sent on terminal loopbacks.
<MODE>	Mode. Default value is FDL. The parameter type is DS1MODE, which is the DS1 path mode of the DS3XM-12 card.
• ATT	Indicates that the DS1 path of the DS3XM-12 is in AT&T 54016 mode.
• FDL	Indicates that the DS1 path of the DS3XM-12 is in FDL T1-403 mode.
<SYNCPMAP>	The synchronous mapping for the DS1 facility. Defaults to ASYNC. Only supported on ONS 15454. The parameter type is SYNCPMAP (synchronous mapping type).
• ASYNC	Asynchronous
• BYTE	Mapping in byte
• JBYTE	Mapping in jbyte
<ADMSSM>	The administrative synchronization status message. Only supported on the ONS 15454. Defaults to STU. The parameter type is SYNC_CLOCK_REF_QUALITY_LEVEL, which is the clock source quality level.
• DUS	Do Not Use For Synchronization
• PRS	Primary Reference Source, Stratum 1 Traceable
• RES	Reserved For Network Synchronization Use
• SMC	SONET Minimum Clock Traceable
• ST2	Stratum 2 Traceable
• ST3	Stratum 3 Traceable
• ST3E	Stratum 3E Traceable
• ST4	Stratum 4 Traceable
• STU	Synchronized, Traceability Unknown
• TNC	Transit Node Clock (2nd Generation Only)
<VTMAP>	The port to VT mapping type for that particular STS. Only supported on ONS 15454. Defaults to GR253. The parameter type is VTMAP (VT mapping).

• GR253	Mapping based on Telcordia GR-253.
• INDUSTRY	Mapping based on industry standard.
<AISVONAI>	Defaults to N. The parameter type is ON_OFF, which disables or enables an attribute.
• N	Disable an attribute.
• Y	Enable an attribute.
<AISVONLOF>	(Optional) The parameter type is ON_OFF (disable or enable an attribute).
<INHFELPBK>	Indicates whether far-end loopbacks are inhibited on the facility. Defaults to N. The parameter type is ON_OFF.
• N	Disable an attribute.
• Y	Enable an attribute.
<INHFEPLPBK>	Indicates whether far-end backplane loopbacks are inhibited on the facility.
• N	Disable an attribute.
• Y	Enable an attribute.
<BERTMODE>	Specifies the mode TPG or TPM of the port for BERT.
• NONE	BERT mode not enabled.
• TPGM-L	Test pattern generator and monitor on line side.
• TPGM-B	Test pattern generator and monitor on backplane.
• TPG-L	Test pattern generator on line side.
• TPM-L	Test pattern monitor on line side.
• TPG-B	Test pattern generator on backplane.
• TPM-B	Test pattern monitor on backplane.
<BERTPATTERN>	Specifies the error pattern to be injected for BERT.
• NONE	BERT pattern not enabled.
• PRBS15	PRBS15 test pattern.
• PRBS20	PRBS20 test pattern.
• PRBS23	PRBS23 test pattern.
• QRSS	QRSS test pattern.
• ALT-ONE-ALT-ZERO	Alternate one and zero pattern.
<BERTERRCOUNT>	Integer value. Value -1 indicates that BERT is disabled/not supported.
<PST>	Primary state. The parameter type is PST, which indicates the current overall service condition of an entity.
• IS	In service
• OOS	Out of service
<SST>	Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic in service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of equipment and attributes

• MT	Maintenance mode
• OOG	Out of group
• SWDL	Software downloading
• UAS	Unassigned
• UEQ	Unequipped

## 11.68 ED-T3

(Cisco ONS 15454) The Edit Digital Signal Facility (ED-T3) command edits the attributes related to a DS3/T3 port and the DS3i-N-12 card.

### Usage Guidelines

- This command is not allowed if the card is a protect card.
- Neither FMT nor Line code are supported for T3/DS3 facility. They are supported on both the DS3XM and DS3E card. The unframed value of the framing format is only supported on the DS3E facility.
- If you send this command to edit TACC and any other attribute(s), and the port having the cross-connection or the port/VT has a TAP or TACC number, the Parameters Not Compatible error message is returned.
- Editing TACC using an ED-xxx command is only allowed when there is no circuit/cross-connection on the port and the port/VT does not have a TAP or TACC number. Otherwise, an error message (VT in Use) will be returned.
- TACC creation will be denied on the protect ports/cards.
- Automatic application of loopbacks originating from the far end can be initiated on the T3 ports of a DS3E, DS3NE, or DS3XM card.
- CTC can set the FMT attribute of a DS3(N)E line to AUTOPROVISION to set the framing based on the framing that is coming in. The result is the FMT field being blanked out for a few seconds or blanked out indefinitely for a preprovisioned DS3(N)E card in CTC. AUTOPROVISION is not considered a valid DS3 framing type. It is only used to trigger an autosense and subsequent autoprovisioning of a valid DS3 framing type (unframed, M13, C-BIT). TL1 does not have the AUTOPROVISION mode. TL1 maps/returns the AUTOPROVISION mode to the unframed framing type.
- For the DS3XM-12 card, the DS3/T3 configurable attributes (PM, TH, alarm, etc.) only apply on the ported ports (1 to 12) and the DS3-mapped (even) portless ports in xxx-xxx-T3 commands. If you attempt to provision or retrieve DS3/T3 attributes on the VT-mapped (odd) portless port in xxx-xxx-T3 commands, an error message is returned.
- For the DS3XM-12 card, if the administrative state is already set for a portless port, the state setting operation over its associated ported port is an invalid operation.
- The test set physical connection set up through ED-T3/DS1/STS1/VT1 of the DS3XM-12 card is only allowed on the physical front ports (PORTED ports, Ports 1 to 12), which are the monitoring ports.
  - The monitoring test access ports follow the common rules for the other cards. For example, ED-T3 on Port 2 (FAC-6-2) with a TACC number (8), the next port, Port 3 (FAC-6-3) is used as the monitoring point also. The RTRV-T3 on both Port 2 and Port 3 return the same TACC

number (8) being used to monitor the cross-connection end (A-B). The last port (Port 12) is not allowed to set up a physical connection with the test set because there is no next available port to be the monitoring port.

- The DISC-TACC and CHG-TACC commands follow the same requirements as in the previous bullet, but applied on the ported ports of the DS3XM-12 card.
- The CONN-TACC command has monitored points that can be portless ports. This command is applied on both ported and portless ports of the DS3XM-12 card.
- If the entity has a TACC connection, the entity is not allowed to have ported or portless STS/VT cross-connection (or circuit) provisioning on the DS3XM-12 card.
- ED-T3 cannot be used to create TAPs on the DS3i-N-12 card on the SONET platform because the DS3I card only supports STS3C TAPs.
- You cannot use this command to change the default provisioning on Slots 3 and 15 for the DS3/EC1-48 card.
- The default values for all optional parameters are NE default values. These values might not be the current value for a parameter. Use a retrieve command to retrieve the current default values.
- You cannot directly transition a facility from IS to OOS-MA,DSBLD service state. You can transition a facility to OOS-MA,DSBLD service state from any state except OOS-MA,MT. To transition a facility from OOS-MA,MT to OOS-MA,DSBLD service state, all the following conditions must be met:
  - The facility is not sourcing a synchronization clock.
  - The facility's DCC is disabled.
  - The facility is not part of a protection group.
  - The facility is not supporting cross-connects.
  - The facility is not using overhead connections or overhead terminations (such as express orderwire, local orderwire, or user data channels [UDCs]).




---

**Note** The conditions stipulated can be overridden by using the CMDMDE=FRCD option. The FRCD option will immediately remove the facility from service (except for IS to OOS-MA,DSBLD transition) with no consideration for orderly interruption.

---

- The parameters BERTMODE, BERTPATTERN, and BERTERRCOUNT apply to DS1/E1-56 and DS3XM-12 cards.
- BERT is implemented on a single port.

---

**Category**

Ports

---

**Security**

Provisioning

**Input Format**

```
ED-T3:[<TID>]:<AID>:<CTAG>:::[FMT=<FMT>],[LINECDE=<LINECDE>],[LBO=<LBO>],
[INHFELPBK=<INHFELPBK>],[TACC=<TACC>],[TAPTYPE=<TAPTYPE>],[SOAK=<SOAK>],
[SFBER=<SFBER>],[SDBER=<SDBER>],[NAME=<NAME>],[AISONLPBK=<AISONLPBK>],
[CMDMDE=<CMDMDE>],[BERTMODE=<BERTMODE>],[BERTPATTERN=<BERTPATTERN>],
[BERTERRCOUNT=<BERTERRCOUNT>]:[<PST>[,<SST>]];
```

**Input Example**

```
ED-T3:CISCO:FAC-1-2:123:::FMT=C-BIT,LINECDE=B3ZS,LBO=0-225,INHFELPBK=N,
TACC=8,TAPTYPE=SINGLE,SOAK=10,SFBER=1E-4,SDBER=1E-6,NAME="T3
PORT",AISONLPBK=ALL,CMDMDE=FRCD,BERTMODE=NONE,BERTPATTERN=NONE,
BERTERRCOUNT=0:IS,AINS;
```

**Input Parameters**

<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
<FMT>	Digital signal frame format. The parameter type is DS_LINE_TYPE, which is the DS123 line type.
<ul style="list-style-type: none"> <li>C-BIT</li> <li>M13</li> <li>UNFRAMED</li> </ul>	<ul style="list-style-type: none"> <li>C-BIT line type applies to the DS3XM and DS3E cards.</li> <li>M13 line type applies to the DS3XM and DS3E cards.</li> <li>Line type is unframed. The old DS3 (L3M) and DS3CR cards can only run in unframed mode.</li> </ul>
<LINECDE>	Line code. The parameter type is DS_LINE_CODE, which is the DS123 line code.
<ul style="list-style-type: none"> <li>B3ZS</li> </ul>	Bipolar with three-zero substitution
<LBO>	Line build-out settings. LBO is an integer. The parameter type is E_LBO, which is the electrical signal line build-out.
<ul style="list-style-type: none"> <li>0–225</li> <li>226–450</li> </ul>	<ul style="list-style-type: none"> <li>Electrical signal line build-out range is 1–225.</li> <li>Electrical signal line build-out range is 226–450.</li> </ul>
<INHFELPBK>	(Optional) Far-end loopback inhibition attribute of the port. If it is Y, the automatic far-end loopbacks are inhibited. It is either on or off. The system default is N. The parameter type is ON_OFF, which disables or enables an attribute.
<ul style="list-style-type: none"> <li>N</li> <li>Y</li> </ul>	<ul style="list-style-type: none"> <li>Disable an attribute.</li> <li>Enable an attribute.</li> </ul>
<TACC>	TAP number within a range of 0 to 999. Indicates whether the digroup being provisioned is to be used as a test access digroup. When TACC is 0 (zero), the TAP is deleted. Default is N. TACC is an integer.
<TAPTYPE>	TAP type. Defaults to DUAL. The parameter type is TAPTYPE, which is the test access point type.
<ul style="list-style-type: none"> <li>DUAL</li> <li>SINGLE</li> </ul>	<ul style="list-style-type: none"> <li>Dual FAD</li> <li>Single FAD</li> </ul>
<SOAK>	OOS-AINS to IS transition soak time as measured in 15-minute intervals. A value of 4 equals a soak time of 1 hour. The allowable range is 0 to 192 intervals (maximum of 48 hours). SOAK is an integer.

<SFBER>	The port signal failure threshold. The parameter type is SF_BER, which is the threshold for declaring signal failure on a facility or path.
• 1E-3	SFBER is 1E-3.
• 1E-4	SFBER is 1E-4.
• 1E-5	SFBER is 1E-5.
<SDBER>	Port signal degrade threshold. The parameter type is SD_BER, which is the threshold for declaring signal degrade on a facility or path.
• 1E-5	SDBER is 1E-5.
• 1E-6	SDBER is 1E-6.
• 1E-7	SDBER is 1E-7.
• 1E-8	SDBER is 1E-8.
• 1E-9	SDBER is 1E-9.
<NAME>	Name. NAME is a string.
<AISONLPBK>	The parameter type is AIS_ON_LPBK, which indicates whether AIS is sent on a loopback. Defaults to AIS_ON_LPBK_ALL.
• FACILITY	AIS is sent on facility loopbacks.
• ALL	AIS is sent on all loopbacks.
• OFF	AIS is not sent on loopbacks.
• TERMINAL	AIS is sent on terminal loopbacks.
<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
• FRCD	Force the system to override a state where the command would normally be denied.
• NORM	Execute the command normally. Do not override any conditions that might make the command fail.
<BERTMODE>	Specifies the mode TPG and TPM of the port for BERT.
• NONE	BERT mode not enabled.
• TPGM-L	Test pattern generator and monitor on line side.
• TPGM-B	Test pattern generator and monitor on backplane.
• TPG-L	Test pattern generator on line side.
• TPM-L	Test pattern monitor on line side.
• TPG-B	Test pattern generator on backplane.
• TPM-B	Test pattern monitor on backplane.
<BERTPATTERN>	Specifies the error pattern to be injected for BERT.
• NONE	BERT pattern not enabled.
• PRBS15	PRBS15 test pattern.
• PRBS20	PRBS20 test pattern.
• PRBS23	PRBS23 test pattern.

• QRSS	QRSS test pattern.
• ALT-ONE-ALT-ZERO	Alternate one and zero pattern.
<BERTERRCOUNT>	Integer value. Value –1 indicates that BERT is disabled/not supported.
PST	Primary state. The parameter type is PST, which indicates the current overall service condition of an entity.
• IS	In service
• OOS	Out of service
SST	Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic in service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of equipment and attributes
• MT	Maintenance mode
• OOG	Out of group
• SWDL	Software downloading
• UAS	Unassigned
• UEQ	Unequipped

## 11.69 ED-TRAPTABLE

(Cisco ONS 15454) The Edit Trap Table (ED-TRAPTABLE) command edits a trap destination entry identified by a specific trap destination address.

### Usage Guidelines

None

### Category

System

### Security

Provisioning

### Input Format

```
ED-TRAPTABLE:[<TID>]:<AID>:<CTAG>:::COMMUNITY=<COMMUNITY>,
[TRAPPORT=<TRAPPORT>],[TRAPVER=<TRAPVER>];
```

### Input Examples

- ED-TRAPTABLE::1.2.3.4:1:::COMMUNITY="PUBLIC",TRAPPORT=162,TRAPVER=SNMPV1;
- ED-TRAPTABLE:"[3ffe:0501:0008:0000:0260:97ff:fe40:efab]":1:::COMMUNITY="PUBLIC",TRAPPORT=162,TRAPVER=SNMPV1;

### Input Parameters

<AID>	Access identifier from the <a href="#">“26.18 IPADDR”</a> section on page 26-43. IP address identifying the trap destination.
<COMMUNITY>	Community name associated to the trap destination. Maximum of 32 characters. COMMUNITY is a string.
<TRAPPORT>	User datagram protocol (UDP) port number associated with the trap destination. Default to 162. TRAPPORT is an integer.
<TRAPVER>	SNMP version number. Defaults to SNMPv1. The parameter type is SNMP_VERSION (SNMP version).
• SNMPV1	SNMP version 1 (default)
• SNMPV2	SNMP version 2

## 11.70 ED-TRC-OCH

(Cisco ONS 15454) The Edit Trace Optical Channel Facility (ED-TRC-OCH) command edits trace-related optical channel facilities. Refer to the *Cisco ONS 15454 SONET TL1 Reference Guide* for specific card provisioning rules.

### Usage Guidelines

None

**Category** DWDM

**Security** Provisioning

**Input Format** ED-TRC-OCH:[<TID>]:<SRC>:<CTAG>:::[EXPTRC=<EXPTRC>],[TRC=<TRC>],[TRCMODE=<TRCMODE>],[TRCLEVEL=<TRCLEVEL>],[TRCFORMAT=<TRCFORMAT>][:];

**Input Example** ED-TRC-OCH:PETALUMA:CHAN-6-2:10:::EXPTRC="AAA",TRC="AAA",TRCMODE=MAN,TRCLEVEL=TTI-PM,TRCFORMAT=64-BYTE;

<b>Input Parameters</b>	<SRC>	Source access identifier from the <a href="#">“26.8 CHANNEL” section on page 26-22.</a>
	<EXPTRC>	Expected path trace content. Indicates the expected path trace message (J1) contents. EXPTRC is any 64-character ASCII string, including the terminating CR (carriage return) and LF (line feed). A null value is equivalent to ALL. EXPTRC is a string.
	<TRC>	The path trace message to be transmitted. The trace byte continuously transmits a 64-byte, fixed-length, ASCII string, one byte at a time. A null value defaults to the NE transmitting 62 null characters (Hex 00) and CR and LF. A null value is equivalent to ALL.
	<TRCMODE>	Trace mode. Defaults to the OFF mode. The parameter type is TRCMODE (trace mode).
	<ul style="list-style-type: none"> <li>AUTO</li> </ul>	Use the previously received path trace string as the expected string. Not applicable to MXP/TXP cards.
	<ul style="list-style-type: none"> <li>AUTO-NO-AIS</li> </ul>	Use the previously received path trace string as the expected string and do not turn on AIS and RDI if TIM-P is detected.
	<ul style="list-style-type: none"> <li>MAN</li> </ul>	Use the provisioned expected string as the expected string.
	<ul style="list-style-type: none"> <li>MAN-NO-AIS</li> </ul>	Use the provisioned expected string as the expected string and do not turn on AIS and RDI if TIM-P is detected.
	<ul style="list-style-type: none"> <li>OFF</li> </ul>	Turn off path trace capability. Nothing will be reported.
	<TRCLEVEL>	The trace level to be managed. TRCLEVEL is a string.
	<TRCFORMAT>	Trace message size. The parameter type is TRCFORMAT (trace format).
	<ul style="list-style-type: none"> <li>1-BYTE</li> </ul>	1 byte trace message
	<ul style="list-style-type: none"> <li>16-BYTE</li> </ul>	16 byte trace message
	<ul style="list-style-type: none"> <li>64-BYTE</li> </ul>	64 byte trace message

## 11.71 ED-TRC-OTU2

(Cisco ONS 15454) The Edit Trace Optical Transport Unit Level 2 (ED-TRC-OTU2) command edits trace-related attributes of an OTU2 facility.

### Usage Guidelines

The default values for all optional parameters are NE default values. These values might not be the current value for a parameter. Use a retrieve command to obtain the current value.

### Category

DWDM

### Security

Provisioning

### Input Format

ED-TRC-OTU2:[<TID>]:<SRC>:<CTAG>:::[EXPTRC=<EXPTRC>],[TRC=<TRC>],[TRCMODE=<TRCMODE>],[TRCLEVEL=<TRCLEVEL>],[TRCFORMAT=<TRCFORMAT>][:];

### Input Example

ED-TRC-OTU2:CISCO:CHAN-6-2:10:::EXPTRC="AAA",TRC="AAA",TRCMODE=MAN,TRCLEVEL=TTI-PM,TRCFORMAT=64-BYTE;

### Input Parameters

<SRC>	Source access identifier from the <a href="#">“26.8 CHANNEL” section on page 26-22</a> .
<EXPTRC>	(Optional) Expected path trace content. Indicates the expected path trace message (J1) contents. EXPTRC is any 64-character ASCII string, including the terminating CR (carriage return) and LF (line feed). A null value is equivalent to ALL. EXPTRC is a string.
<TRC>	(Optional) The path trace message to be transmitted. The trace byte continuously transmits a 64 byte, fixed length ASCII string, one byte at a time. A null value defaults to the NE transmitting 62 null characters (Hex 00) and CR and LF. A null value is equivalent to ALL.
<TRCMODE>	(Optional) Trace mode. Defaults to the OFF mode. A null value is equivalent to ALL. The parameter type is TRCMODE (trace mode).
<ul style="list-style-type: none"> <li>• AUTO</li> </ul>	Use the previously received path trace string as the expected string. Not applicable to MXP/TXP cards.
<ul style="list-style-type: none"> <li>• AUTO-NO-AIS</li> </ul>	Use the previously received path trace string as the expected string and do not turn on AIS and RDI if TIM-P is detected.
<ul style="list-style-type: none"> <li>• MAN</li> </ul>	Use the provisioned expected string as the expected string.
<ul style="list-style-type: none"> <li>• MAN-NO-AIS</li> </ul>	Use the provisioned expected string as the expected string and do not turn on AIS and RDI if TIM-P is detected.
<ul style="list-style-type: none"> <li>• OFF</li> </ul>	Turn off path trace capability. Nothing will be reported.
<TRCLEVEL>	(Optional) The trace level to be managed. A null value is equivalent to ALL. TRCLEVEL is a string.

<TRCFORMAT>	(Optional) Trace message size. A null value is equivalent to ALL. The parameter type is TRCFORMAT (trace format).
• 1-BYTE	1-byte trace message
• 16-BYTE	16-byte trace message
• 64-BYTE	64-byte trace message

## 11.72 ED-TRC-OTU3

(Cisco ONS 15454) The Edit Trace Optical Transport Unit Level 3(ED-TRC-OTU3) command edits trace-related attributes of an OTU3 facility.

### Usage Guidelines

The default values for all optional parameters are NE default values. These values might not be the current value for a parameter. Use a retrieve command to obtain the current value.

### Category

DWDM

### Security

Provisioning

### Input Format

ED-TRC-OTU3:[<TID>]:<SRC>:<CTAG>:::[EXPTRC=<EXPTRC>],[TRC=<TRC>],[TRCMODE=<TRCMODE>],[TRCLEVEL=<TRCLEVEL>],[TRCFORMAT=<TRCFORMAT>][:];

### Input Example

ED-TRC-OTU3:CISCO:CHAN-6-2:10:::EXPTRC="AAA",TRC="AAA",TRCMODE=MAN,TRCLEVEL=TTI-PM,TRCFORMAT=64-BYTE;

### Input Parameters

<SRC>	Source access identifier from the <a href="#">“26.8 CHANNEL” section on page 26-22</a> .
<EXPTRC>	(Optional) Expected path trace content. Indicates the expected path trace message (J1) contents. EXPTRC is any 64-character ASCII string, including the terminating CR (carriage return) and LF (line feed). A null value is equivalent to ALL. EXPTRC is a string.
<TRC>	(Optional) The path trace message to be transmitted. The trace byte continuously transmits a 64 byte, fixed length ASCII string, one byte at a time. A null value defaults to the NE transmitting 62 null characters (Hex 00) and CR and LF. A null value is equivalent to ALL.
<TRCMODE>	(Optional) Trace mode. Defaults to the OFF mode. A null value is equivalent to ALL. The parameter type is TRCMODE (trace mode).
• AUTO	Use the previously received path trace string as the expected string. Not applicable to MXP/TXP cards.
• AUTO-NO-AIS	Use the previously received path trace string as the expected string and do not turn on AIS and RDI if TIM-P is detected.
• MAN	Use the provisioned expected string as the expected string.

• MAN-NO-AIS	Use the provisioned expected string as the expected string and do not turn on AIS and RDI if TIM-P is detected.
• OFF	Turn off path trace capability. Nothing will be reported.
<TRCLEVEL>	(Optional) The trace level to be managed. A null value is equivalent to ALL. TRCLEVEL is a string.
<TRCFORMAT>	(Optional) Trace message size. A null value is equivalent to ALL. The parameter type is TRCFORMAT (trace format).
• 1-BYTE	1-byte trace message
• 16-BYTE	16-byte trace message
• 64-BYTE	64-byte trace message

## 11.73 ED-USER-SECU

(Cisco ONS 15454) The Edit User Security (ED-USER-SECU) command edits a user's privileges, password, or ID. Only a Superuser can perform this operation. Privilege levels are described in the ENT-USER-SECU command.

### Usage Guidelines

- Passwords are masked for the following security commands: ACT-USER, ED-PID, ENT-USER-SECU, and ED-USER-SECU. Access to a TL1 session by any means will have the password masked. The CTC Request History and Message Log will also show the masked commands. When a password-masked command is reissued by double-clicking the command from CTC Request History, the password will still be masked in the CTC Request History and Message Log. The actual password that was previously issued will be sent to the NE. To use a former command as a template only, single-click the command in CTC Request History. The command will be placed in the Command Request text box, where you can edit the appropriate fields prior to reissuing it.
- Although the CTC allows both a <UID> and a <PID> of up to 20 characters, the CTC-entered users (<UID>, <PID>) are not valid TL1 users. For example, if you issue an ACT-USER command using a CTC-entered <UID> that is greater than 10 characters long, TL1 will respond with DENY.
- For the ED-USER-SECU command:
 

```
ED-USER-SECU:[TID]:<UID>:[CTAG]:[<NEWUID>],[<NEWPID>],[<UAP>];;
```

  - If the <NEWPID> is specified, the syntax is checked.
  - The syntax of <UID> is not checked.
  - Old users can change their password without changing their user ID, but the new password must meet the new requirements.
  - The <NEWPID> is required when changing the <UID>.
- When <NEWUID> is specified, <NEWPID> (and the <UAP>) become mandatory.
- The ED-USER-SECU command should be used to change the default password for the CISCO15 default Superuser.
- The ED-PID command cannot be used to change the empty password to a valid password.

### Category

Security

**Security** Superuser

**Input Format** ED-USER-SECU:[<TID>]:<UID>:<CTAG>::[<NEWUID>],[<NEWPID>],,[<UAP>][:];

**Input Example** ED-USER-SECU:PETALUMA:CISCO15:123::NEWUID,NEWPID,,MAINT;

<b>Input Parameters</b>	<UID>	User identifier. Minimum UID is 6 characters. Maximum UID is 10 characters. UID is a string.
	<NEWUID>	User's new identifier. Minimum NEWUID is 6 characters. Maximum NEWUID is 10 characters. NEWUID is a string.
	<NEWPID>	User's new password. Minimum NEWPID is 6 characters. Maximum NEWPID is 10 characters. NEWPID is a string.
	<UAP>	User's access privilege. The parameter type is PRIVILEGE, which is the security level.
	• MAINT	Maintenance security level. 60 minutes of idle time.
	• PROV	Provisioning security level. 30 minutes of idle time.
	• RTRV	Retrieve security level. Unlimited idle time.
	• SUPER	Superuser security level. 15 minutes of idle time.

## 11.74 ED-VCG

(Cisco ONS 15454) The Edit Virtual Concatenated Group (ED-VCG) command edits the attributes of a VCG.

**Usage Guidelines** None

**Category** VCAT

**Security** Provisioning

**Input Format** ED-VCG:[<TID>]:<SRC>:<CTAG>:::[TXCOUNT=<TXCOUNT>],[NAME=<NAME>];

**Input Example** ED-VCG:NODE1:FAC-1-1:1234:::TXCOUNT=7,NAME="VCG2";

<b>Input Parameters</b>	<SRC>	Source access identifier from the “26.17 FACILITY” section on page 26-40.
	<TXCOUNT>	Number of members in the transmit (Tx) direction. For ML1000-2 and ML100T-12 cards, the only valid value is 2. For the FC_MR-4 card, the only valid value is 8. TXCOUNT is an integer.
	<NAME>	Name of the VCAT group. Maximum length is 64 characters. NAME is a string.

## 11.75 ED-VLAN

(Cisco ONS 15454) The Edit VLAN (ED-VLAN) command modifies a VLAN entry in the VLAN database. The VLAN database is a collection of VLANs used in an NE.

**Usage Guidelines** A VLAN having the specified AID should be present in the node.

**Category** Ethernet

**Security** Provisioning

**Input Format** ED-VLAN:[<TID>]:<AID>:<CTAG>[:::NAME=<NAME>],[PROTN=<PROTN>],[MACLEARNING=<MACLEARNING>],[IGMPENABLE=<IGMPENABLE>],[IGMPFASTLEAVE=<IGMPFASTLEAVE>],[IGMPSUPP=<IGMPSUPP>][:];

**Input Example** ED-VLAN:PETALUMA:VLAN-4096:1:::NAME="MYVLAN",PROTN=N,MACLEARNING=Y,IGMPENABLE=Y,IGMPFASTLEAVE=Y,IGMPSUPP=Y;

<b>Input Parameters</b>	<AID>	AID is used to access the VLAN.
	VLAN-ALL	All AIDs for the VLAN.
	VLAN-{0-4096}	Single AID for the VLAN. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
	<NAME>	Indicates the name of the VLAN.
	<PROTN>	Indicates the VLAN protection, enable or disable feature
	<MACLEARNING>	MAC Address Learning Mode. This activates the MAC address learning on interface to avoid packet broadcasting. Default value is - “N”
	• Y	Activate the MAC learning.
	• N	Disable MAC learning.
	<IGMPENABLE>	Internet Group Management Protocol status.

• Y	Enabled
• N	Disabled
<IGMPFASTLEAVE>	Internet Group Management Protocol FastLeave status. When enabled, decreases the delay between receiving a Leave Group packet and disabling forwarding of multicast
• Y	Enabled
• N	Disabled
<IGMPSUPP>	IGMP Report suppression. Indicates multicast registered client hiding. When enabled (default) it prevents duplicate reports from being sent to the multicast devices.
• Y	Enabled
• N	Disabled

## 11.76 ED-VLAN-ETH

(Cisco 15454)

Edit VLAN ETH attributes command is used to modify the VLAN Profile associated to the L2 Ethernet ports - VLAN.

### Usage Guidelines

The default values for all optional parameters are NE default values. These values may not be the current value for a parameter. In order to obtain the current value, a user needs to use RTRV-XX command to retrieve them.

If the AID is invalid, an IIAC (Invalid AID) error message is returned.

The "ALL" AID is invalid for this command.

The L2 ethernet port must be present when this command is sent. The S-VLAN-ID must not be absent otherwise this command will fail.

If BWP is omitted the first time this command is performed, the default BWP-0 is assumed

Use BWP=0 to restore the Default VLAN Profile

### Category

ETHERNET

### Security

Provisioning

### Input Format

ED-VLAN-ETH[:<TID>]:<AID>:<CTAG>::[VLAN\_ID=<VLAN\_ID>],[VLAN\_TYPE=<VLAN\_TYPE>],[BWP=<BWP>][:];

### Input Example

ED-VLAN-ETH::ETH-1-1-1:1:1010:BWP=34;

Input Parameters	Input Parameters	Description
	<AID>	Ethernet aids are used to access L2 Ethernet ports.
	<ul style="list-style-type: none"> <li>ALL</li> </ul>	The ALL aid is applicable for RTRV-only commands, basically the RTRV-rr type of commands.
	<ul style="list-style-type: none"> <li>ETH[-{1-30}]-{1-5,12-16}-{1-22}-1</li> </ul>	Facility aid for GE-XP card.
	<ul style="list-style-type: none"> <li>ETH[-{1-30}]-{1-6,12-17}-{1-4}-1</li> </ul>	Facility aid for 10GE-XP card.
	<VLAN_ID>	The VLAN identifier. A VLAN ID is a number in the range 1..4096. The value of 0 is reserved to UNTAGged VLAN.
	VLAN_TYPE	Specifies the type of VLAN.
	<ul style="list-style-type: none"> <li>SVLAN</li> <li>CVLAN</li> </ul>	Service provider VLAN. Customer VLAN.
	<BWP>	The BWP identifier. A BWP ID is a number in the range 0..10000. The value of 0 is reserved for the default profile that cannot be edited or delete. Default value is 0.

## 11.77 ED-VLB-REP

(Cisco ONS 15454) The Edit VLAN Load Balancing Resilient Ethernet Protocol (ED-VLB-REP) command edits the VLAN Load Balancing (VLB) for REP Segment on the ethernet ports.

### Usage Guidelines

- VLB can be enabled only on the EDGE Primary ports of the REP Segment.
- If the VLB is not enabled, you cannot edit any other parameters related to STCN.
- Only one VLAN range can be added or removed at a time
- A maximum of 10 VLAN range can be configured on the ethernet edge port.
- This command is applicable only to GE\_XP and 10GE\_XP cards.

### Category

Ethernet

### Security

Provisioning

### Input Format

```
ED-VLB-REP:[<TID>]:<AID>:<CTAG>:::[VLBENABLED=<VLBENABLED>],[VLBOPERATION=<VLBOPERATION>],[VLANRANGESTART=<VLANRANGESTART>],[VLANRANGEEND=<VLANRANGEEND>],[PREFERRED=<PREFERRED>],[REPPORTID=<REPPORTID>];
```

### Input Example

```
ED-VLB-REP::ETH-16-2-1:1:::VLBENABLED=Y,VLBOPERATION=ADD,VLANRANGESTART=1000,VLANRANGEEND=1001,PREFERRED=N,REPPORTID=0X0134454345678598;
```

Input Parameters	Input Parameters	Description
	<AID>	Access identifier from the “26.17 FACILITY” section on page 26-40.
	<VLBENABLED>	Enables or disables the segment topology notification on ethernet entity for REP.
	<ul style="list-style-type: none"> <li>• Y</li> <li>• N</li> </ul>	<ul style="list-style-type: none"> <li>Enables STCN on the ethernet port.</li> <li>Disables STCN on the ethernet port.</li> </ul>
	<VLBOPERATION>	Adds or removes the range for STCN notification.
	<ul style="list-style-type: none"> <li>• ADD</li> <li>• REMOVE</li> </ul>	<ul style="list-style-type: none"> <li>Adds the range to a list of segment ranges for STCN notification.</li> <li>Removes the range from a list of segment ranges for STCN notification.</li> </ul>
	<VLANRANGESTART>	Indicates the VLAN range start value for VLB on REP. The valid range is 0 to 1024.
	<VLANRANGEEND>	Indicates the VLAN range end value for VLB on REP. The valid range is from 0 to 1024.
	<PREFERRED>	Indicates that the port is the preferred alternate port. Or the preferred port for VLAN load balancing.
	<ul style="list-style-type: none"> <li>• Y</li> <li>• N</li> </ul>	<ul style="list-style-type: none"> <li>Yes</li> <li>No</li> </ul>
	<REPPORTID>	Determines the REP port to trigger VLB.

## 11.78 ED-WDMANS

(Cisco ONS 15454) The Edit Wavelength Division Multiplexing Automatic Node Set Up (ED-WDMANS) command edits the optical node set-up application (AONS) attributes.

**Usage Guidelines** None

**Category** DWDM

**Security** Maintenance

**Input Format** ED-WDMANS:[<TID>]:<AID>:<CTAG>::[<WLEN>]:[VOAATTN=<VOAATTN>],[POWEROSC=<POWEROSC>],[NTWTYPE=<NTWTYPE>],[CHLOSS=<CHLOSS>],[GAIN=<GAIN>],[TILT=<TILT>],[CHPWR=<CHPWR>],[AMPLMODE=<AMPLMODE>],[RATIO=<RATIO>],[OSCCLOSS=<OSCCLOSS>],[DITHER=<DITHER>],[TOTALPWR=<TOTALPWR>],[HIGHSLVEXP=<HIGHSLVEXP>],[LOWSLVEXP=<LOWSLVEXP>][:];

**Input Example**

```
ED-WDMANS:PENNGROVE:WDMSIDE-A:114:::POWERIN=10.0,POWEROUT=10.0,
POWEREXP=10.0;
```

```
ED-WDMANS:PENNGROVE:WDMSIDE-A:114:::POWERIN=10.0,POWEROUT=10.0,
POWEREXP=10.0,POWEROSC=5.0;
```

```
ED-WDMANS::LINE-1-3-1-RX:77:::CHLOSS=-11.00;
```

**Input Parameters**

<AID>	The AID is used to access the WDM node or a single port of the DWDM node.
• WDMNODE	Indicates the WDM node of an MSTP and accesses the NTWTYPE and DITHER WDMANS node parameters.
• LINE	The optical transport section port.
• BAND	The optical multiplex section port.
• CHAN	The optical channel port.
<WLEN>	(Optional) The parameter type is OPTICAL_WLEN, which indicates the optical wavelength.
• 1310	Wavelength 1310
• 1470	Wavelength 1470
• 1490	Wavelength 1490
• 1510	Wavelength 1510
• 1528.77	Wavelength 1528.77
• 1529.55	Wavelength 1529.55
• 1529.94	Wavelength 1529.94
• 1530	Wavelength 1530
• 1530.33	Wavelength 1530.33
• 1530.73	Wavelength 1530.73
• 1531.12	Wavelength 1531.12
• 1531.51	Wavelength 1531.51
• 1531.90	Wavelength 1531.90
• 1532.29	Wavelength 1532.29
• 1532.68	Wavelength 1532.68
• 1533.07	Wavelength 1533.07
• 1533.47	Wavelength 1533.47
• 1533.86	Wavelength 1533.86
• 1534.25	Wavelength 1534.25
• 1534.64	Wavelength 1534.64
• 1535.04	Wavelength 1535.04
• 1535.43	Wavelength 1535.43
• 1535.82	Wavelength 1535.82
• 1536.22	Wavelength 1536.22
• 1536.61	Wavelength 1536.61
• 1537	Wavelength 1537

• 1537.40	Wavelength 1537.40
• 1537.79	Wavelength 1537.79
• 1538.19	Wavelength 1538.19
• 1538.58	Wavelength 1538.58
• 1538.98	Wavelength 1538.98
• 1539.37	Wavelength 1539.37
• 1539.77	Wavelength 1539.77
• 1540.16	Wavelength 1540.16
• 1540.56	Wavelength 1540.56
• 1540.95	Wavelength 1540.95
• 1541.35	Wavelength 1541.35
• 1541.75	Wavelength 1541.75
• 1542.14	Wavelength 1542.14
• 1542.35	Wavelength 1542.35
• 1542.54	Wavelength 1542.54
• 1542.94	Wavelength 1542.94
• 1543.33	Wavelength 1543.33
• 1543.73	Wavelength 1543.73
• 1544.13	Wavelength 1544.13
• 1544.53	Wavelength 1544.53
• 1544.92	Wavelength 1544.92
• 1545.32	Wavelength 1545.32
• 1545.72	Wavelength 1545.72
• 1546.12	Wavelength 1546.12
• 1546.52	Wavelength 1546.52
• 1546.92	Wavelength 1546.92
• 1547.32	Wavelength 1547.32
• 1547.72	Wavelength 1547.72
• 1548.12	Wavelength 1548.12
• 1548.51	Wavelength 1548.51
• 1548.92	Wavelength 1548.92
• 1549.32	Wavelength 1549.32
• 1549.71	Wavelength 1549.71
• 1550	Wavelength 1500
• 1550.12	Wavelength 1550.12
• 1550.52	Wavelength 1550.52
• 1550.92	Wavelength 1550.92
• 1551.32	Wavelength 1551.32
• 1551.72	Wavelength 1551.72
• 1552.12	Wavelength 1552.12
• 1552.52	Wavelength 1552.52

• 1552.93	Wavelength 1552.93
• 1553.33	Wavelength 1553.33
• 1553.73	Wavelength 1553.73
• 1554.13	Wavelength 1554.13
• 1554.13	Wavelength 1554.13
• 1554.94	Wavelength 1554.94
• 1555.34	Wavelength 1555.34
• 1555.75	Wavelength 1555.75
• 1556.15	Wavelength 1556.15
• 1556.55	Wavelength 1556.55
• 1556.96	Wavelength 1556.96
• 1557.36	Wavelength 1557.36
• 1557.77	Wavelength 1557.77
• 1558.17	Wavelength 1558.17
• 1558.58	Wavelength 1558.58
• 1558.98	Wavelength 1558.98
• 1559.39	Wavelength 1559.39
• 1559.79	Wavelength 1559.79
• 1560.20	Wavelength 1560.20
• 1560.61	Wavelength 1560.61
• 1561.01	Wavelength 1561.01
• 1561.42	Wavelength 1561.42
• 1561.83	Wavelength 1561.83
• 1570	Wavelength 1570
• 1570.83	Wavelength 1570.83
• 1571.24	Wavelength 1571.24
• 1571.65	Wavelength 1571.65
• 1572.06	Wavelength 1572.06
• 1572.48	Wavelength 1572.48
• 1572.89	Wavelength 1572.89
• 1573.30	Wavelength 1573.30
• 1573.71	Wavelength 1573.71
• 1574.13	Wavelength 1574.13
• 1574.54	Wavelength 1574.54
• 1574.95	Wavelength 1574.95
• 1575.37	Wavelength 1575.37
• 1575.78	Wavelength 1575.78
• 1576.20	Wavelength 1576.20
• 1576.61	Wavelength 1576.61
• 1577.03	Wavelength 1577.03
• 1577.44	Wavelength 1577.44

• 1577.86	Wavelength 1577.86
• 1578.27	Wavelength 1578.27
• 1578.69	Wavelength 1578.69
• 1579.10	Wavelength 1579.10
• 1579.52	Wavelength 1579.52
• 1579.93	Wavelength 1579.93
• 1580.35	Wavelength 1580.35
• 1580.77	Wavelength 1580.77
• 1581.18	Wavelength 1581.18
• 1581.60	Wavelength 1581.60
• 1582.02	Wavelength 1582.02
• 1582.44	Wavelength 1582.44
• 1582.85	Wavelength 1582.85
• 1583.27	Wavelength 1583.27
• 1583.69	Wavelength 1583.69
• 1584.11	Wavelength 1584.11
• 1584.53	Wavelength 1584.53
• 1584.95	Wavelength 1584.95
• 1585.36	Wavelength 1585.36
• 1585.78	Wavelength 1585.78
• 1586.20	Wavelength 1586.20
• 1586.62	Wavelength 1586.62
• 1587.04	Wavelength 1587.04
• 1587.46	Wavelength 1587.46
• 1587.88	Wavelength 1587.88
• 1588.30	Wavelength 1588.30
• 1588.73	Wavelength 1588.73
• 1589.15	Wavelength 1589.15
• 1589.57	Wavelength 1589.57
• 1589.99	Wavelength 1589.99
• 1590	Wavelength 1590
• 1590.41	Wavelength 1590.41
• 1590.83	Wavelength 1590.83
• 1591.26	Wavelength 1591.26
• 1591.68	Wavelength 1591.68
• 1592.10	Wavelength 1592.10
• 1592.52	Wavelength 1592.52
• 1592.95	Wavelength 1592.95
• 1593.37	Wavelength 1593.37
• 1593.79	Wavelength 1593.79
• 1594.22	Wavelength 1594.22

• 1594.64	Wavelength 1594.64
• 1595.06	Wavelength 1595.06
• 1595.49	Wavelength 1595.49
• 1596.34	Wavelength 1596.34
• 1596.76	Wavelength 1596.76
• 1597.19	Wavelength 1597.19
• 1597.62	Wavelength 1597.62
• 1598.04	Wavelength 1598.04
• 1598.47	Wavelength 1598.47
• 1598.89	Wavelength 1598.89
• 1599.32	Wavelength 1599.32
• 1599.75	Wavelength 1599.75
• 1600.06	Wavelength 1600.06
• 1601.03	Wavelength 1601.03
• 1601.46	Wavelength 1601.46
• 1601.88	Wavelength 1601.88
• 1602.31	Wavelength 1602.31
• 1602.74	Wavelength 1602.74
• 1603.17	Wavelength 1603.17
• 1603.60	Wavelength 1603.60
• 1604.03	Wavelength 1604.03
• 1610	Wavelength 1610
<VOAATTN>	The value of calibrated attenuation for the VOA expressed in dBm. The range is 0.0 to +30.0. VOAATTN is a float.
<POWEROSC>	WDM-ANS OSC power parameter.
<NTWTYPE>	WDM-ANS network type parameter.
<CHLOSS>	WDM-ANS channel loss parameter.
<GAIN>	WDM-ANS amplifier gain parameter.
<TILT>	WDM-ANS amplifier tilt parameter.
<CHPWR>	WDM-ANS channel power parameter.
<AMPLMODE>	WDM-ANS amplifier mode parameter.
<RATIO>	WDM-ANS Raman amplifier pump ratio parameter.
<OSCLLOSS>	WDM-ANS OSC channel loss parameter.
<DITHER>	WDM-ANS WXC dithering parameter.
<TOTALPWR>	WDM-ANS Raman amplifier total power in mW.
<HIGHSLVEXP>	Span loss verification—high value.
<LOWSLVEXP>	Span loss verification—low value.

## 11.79 ED-WDMSIDE

(Cisco ONS 15454) The Edit Wavelength Division Multiplexing Side (ED-WDMSIDE) command modifies the WDM node side attribute.

### Usage Guidelines

- If the AID is invalid, an IIAC (Invalid AID) error message is returned.
- The ALL AID is invalid for this command.

### Category

DWDM

### Security

Maintenance

### Input Format

ED-WDMSIDE:[<TID>]:<AID>:<CTAG>:::[NEWSIDE=<NEWSIDE>][:];

### Input Example

ED-WDMSIDE:PENNGROVE:WDMSIDE-A:114:::NEWSIDE=WDMSIDE-B;

### Input Parameters

<AID>	The AID is used to access the WDM side of an MSTP node.
• WDMSIDE- { A,B,C,D,E,F,G,H }	MSTP side identifier.
<NEWSIDE>	The AID is used to access the WDM side of an MSTP node.
• WDMSIDE- { A,B,C,D,E,F,G,H }	MSTP side identifier.





# CHAPTER 12

## ENT Commands

---



### Note

The terms "Unidirectional Path Switched Ring" and "UPSR" may appear in Cisco literature. These terms do not refer to using Cisco ONS 15xxx products in a unidirectional path switched ring configuration. Rather, these terms, as well as "Path Protected Mesh Network" and "PPMN," refer generally to Cisco's path protection feature, which may be used in any topological network configuration. Cisco does not recommend using its path protection feature in any particular topological network configuration.

---

This chapter provides enter (ENT) commands for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.



### Note

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

---

## 12.1 ENT-<MOD1PAYLOAD>

(Cisco ONS 15454) The Enter 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 5GIB, 8GFC, CHGRP, D1VIDEO, DV6000, DVBASI, EC1, ESCON, ETRCLO, FSTE, GIGE, HDTV, ISC1, ISCCOMPAT, ISC3PEER2R, ISC3PEER1G, ISC3PEER2G, OC-12, OC-192, OC-3, OC-48, OC768, OTU3, or T3 (ENT-<MOD1PAYLOAD> command creates a specified port.

---

### Usage Guidelines

- When 1GFICON and 2GFICON payloads are provisioned, distance extension=B2B is the default and only valid setting. Setting distance extension (using ED-1GFICON or ED-2GFICON) to any other setting will be denied with the error message "Provisioning Rules Failed."
- Support is limited to ports with pluggable port modules (PPMs).
- See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

---

### Category

Ports

---

### Security

Provisioning

**Input Format** ENT-<MOD|PAYLOAD>:[<TID>]:<AID>:<CTAG>[:::];

**Input Example** ENT-GIGE:TID:FAC-5-1:1;

**Input Parameters** <AID> Access identifier from the [“26.17 FACILITY” section on page 26-40.](#)

## 12.2 ENT-<MOD\_RING>

(Cisco ONS 15454) The Enter Bidirectional Line Switched Ring (ENT-<MOD\_RING>) command creates either a two-fiber or four-fiber BLSR.

### Usage Guidelines

The command parameters that are used vary depending on whether a two-fiber or four-fiber BLSR is being created.

Here is an example of a command to create a four-fiber BLSR:

```
ENT-BLSR:TID:BLSR-N02ABC:CTAG:::RINGID=N02ABC,NODEID=3,MODE=4F,RVRTV=Y,
RVTM=5.0,SRVRTV=Y,SRVTM=5.0,EASTWORK=FAC-5-1,WESTWORK=FAC-6-1,
EASTPROT=FAC-12-1,WESTPROT=FAC-13-1;
```

Here is an example of a command to create a two-fiber BLSR:

```
ENT-BLSR:TID:BLSR-N04EFG:CTAG:::RINGID=N04EFG,NODEID=6,MODE=2F,RVRTV=Y,
RVTM=5.0,EASTWORK=FAC-5-1,WESTWORK=FAC-6-1;
```

The following actions will produce error messages:

- If RINGID is different from the string presented in the AID format, an IIAC (RingId Does Not Match With AID) error message is returned.
- Sending this command to create a BLSR with an out-of-range node ID or ring ID will return an IIAC (Invalid NodeId) or (Invalid RingId) error message.
- Sending this command to create a four-fiber BLSR on OC-12 cards, or a two-fiber BLSR on OC-3 cards will return an IIAC (Input, Invalid Work/Prot Port) error message.
- Sending this command to create a BLSR on a network element (NE) that already has five BLSRs will return a SRQN (BLSR Creation Failed) error message because only one NE can support up to five BLSRs.
- Sending this command to create a BLSR on a port with 1+1 protection will return a SRQN (BLSR Creation Failed) error message.
- If the system fails while accessing the IOR, an SROF (Get IOR Failed) error message is returned.
- If the AID is invalid, an IIAC (Invalid AID) error message is returned.
- If any facility requested in this command is in use, a SPLD (Facility is Busy) error message is returned.
- The SRQN (BLSR Creation Failed) error message is returned for an invalid creation query.
- Sending this command to provision the mode with an invalid BLSR mode will return an IIDT (Invalid BLSR Mode) error message.

- Sending this command to modify SRVRTV or SRVTM on the two-fiber BLSR will return an IDNV (Invalid Data for 2F-BLSR) error message.
- Sending this command to provision the node ID with invalid data will return an IIAC (Invalid NodeId) error message.
- Sending this command to provision the ring ID with invalid data will return an IIAC (Invalid RingId) error message.
- Sending this command with an invalid working AID will return an IIDT (Invalid BLSR Working Facility) error message.
- Sending this command with an invalid protection AID will return an IIDT (Invalid BLSR Protect Facility) error message.
- Changing the BLSR node ID with a duplicated ID will return an SROF (Cannot Set NodeId) error message.

**Note**

Both <EASTPROT> and <WESTPROT> are optional, but required for 4-fiber BLSR creation.

**Note**

The ALL AID is invalid for this command.

**Category**

BLSR

**Security**

Provisioning

**Input Format**

```
ENT-<MOD_RING>:[<TID>]:<AID>:<CTAG>:::[RINGID=<RINGID>],NODEID=<NODEID>,
MODE=<MODE>,[RVRTV=<RVRTV>],[RVTM=<RVTM>],[SRVRTV=<SRVRTV>],
[SRVTM=<SRVTM>],EASTWORK=<EASTWORK>,WESTWORK=<WESTWORK>,
[EASTPROT=<EASTPROT>],[WESTPROT=<WESTPROT>];
```

**Input Example**

Four-fiber BLSR:

```
ENT-BLSR:PETALUMA:BLSR-2:123:::RINGID=2,NODEID=1,MODE=4F,
RVRTV=Y,RVTM=5.0,SRVRTV=Y,SRVTM=5.0,EASTWORK=FAC-5-1,WESTWORK=FAC-6-1,
EASTPROT=FAC-12-1,WESTPROT=FAC-13-1;
```

Two-fiber BLSR:

```
ENT-BLSR:PETALUMA:BLSR-2:123:::RINGID=2,NODEID=1,MODE=2F,RVRTV=Y,
RVTM=5.0,EASTWORK=FAC-5-1,WESTWORK=FAC-6-1;
```

**Input Parameters**

<AID>	Access identifier from the <a href="#">“26.3 AidUnionId1” section on page 26-20</a> . Identifies the BLSR of the NE. ALL or BLSR-ALL AIDs are not allowed for editing the BLSR. This command only supports a single BLSR AID.
<RINGID>	(Optional) The BLSR ID of the NE up to six characters. Valid characters are A-Z and 0-9. RINGID is a string. The parameter defaults to the text in the AID that follows the “BLSR-”.
<NODEID>	The BLSR node ID of the NE. NODEID ranges from 0 to 31. NODEID is an integer.
<MODE>	Mode with which the command is to be implemented. Identifies the BLSR mode. The parameter type is BLSR_MODE (BLSR mode).
• 2F	Two-fiber BLSR
• 4F	Four-fiber BLSR
<RVRTV>	(Optional) Revertive mode. The value Y indicates that protection switching system reverts service to the original line after restoration. The value N indicates that protection switching system does not revert service to the original line after restoration. RVRTV is applicable only for 1+1 protection switching. Null defaults to N. The parameter type is ON_OFF (disable or enable an attribute).
• N	Does not revert service to original line after restoration.
• Y	Reverts service to original line after restoration.
<RVTM>	(Optional) Revertive time. Defaults to 5.0. The parameter type is REVERTIVE_TIME (revertive time).
• 0.5 to 12.0	(Optional) Revertive time is 0.5 to 12.0 minutes.
<SRVRTV>	The span revertive mode for four-fiber BLSR only. Defaults to Y. The parameter type is ON_OFF (disable or enable an attribute)
• N	Disable an attribute.
• Y	Enable an attribute.
<SRVTM>	(Optional) The span revertive time for four-fiber BLSR only. Defaults to 5.0. The parameter type is REVERTIVE_TIME (revertive time).
• 0.5 to 12.0	Revertive time is 0.5 to 12.0 minutes.
<EASTWORK>	East working facility. AID from the <a href="#">“26.17 FACILITY” section on page 26-40</a> .
<WESTWORK>	West working facility. AID from the <a href="#">“26.17 FACILITY” section on page 26-40</a> .
<EASTPROT>	(Optional) East protect facility. AID from the <a href="#">“26.17 FACILITY” section on page 26-40</a> .
<WESTPROT>	(Optional) West protect facility. AID from the <a href="#">“26.17 FACILITY” section on page 26-40</a> .

## 12.3 ENT-ALMTYPE

(Cisco ONS 15454) The Enter Alarm Type (ENT-ALMTYPE) command enters user-defined alarm types on the fly for environmental inputs. In addition to the system-defined alarm types, this command supports up to 50 new user-defined alarm types.

<b>Usage Guidelines</b>	ALMTYPE must not contain blank spaces or special characters other than the hyphen (-). The maximum ALMTYPE length allowed is 20 characters.  Entering of duplicate alarm types is not allowed. System-defined alarm types cannot be replicated as user-defined alarm type.
<b>Category</b>	System
<b>Security</b>	Provisioning
<b>Input Format</b>	ENT-ALMTYPE:[<TID>]::<CTAG>::<ALMTYPE>;
<b>Input Example</b>	ENT-ALMTYPE:::1::USERDEFINEDALARM;
<b>Input Parameters</b>	<ALMTYPE>      Specifies user-defined alarm types associated with virtual wires in environmental alarm inputs.

## 12.4 ENT-BULKROLL-<OCN\_TYPE>

(Cisco ONS 15454) The Enter Bulk Roll for OC-12, OC-192, OC-3, OC-48, or OC768 (ENT-BULKROLL-<OCN\_TYPE>) command enters information about rolling traffic from one end point to another without interrupting service. This command can be used for line-level rolling and bulk rolling and cannot be used for single-path-level rolling.

<b>Usage Guidelines</b>	None
<b>Category</b>	Bridge and Roll
<b>Security</b>	Provisioning

**Input Format**

```
ENT-BULKROLL-<MOD_PATH>:[<TID>]:<FROM>:<CTAG>:::RTOSTART=<RTOSTART>,
[RFROMSTART=<RFROMSTART>],[RFROMEND=<RFROMEND>],[RMODE=<RMODE>],
[CMDMDE=<CMDMDE>];
```

**Input Example**

```
ENT-BULKROLL-OC-48:CISCO:FAC-5-1:123:::RTOSTART=STS-6-1-1,
RFROMSTART=STS-5-1-1,RFROMEND=STS-5-1-4,RMODE=AUTO,CMDMDE=FRCD;
```

**Input Parameters**

<FROM>	One of the endpoints. Access identifier from the “26.17 FACILITY” section on page 26-40 for line-level rolling and bulk rolling.
<RTOSTART>	The starting time slot in the destination roll port. Access identifier from the “26.17 FACILITY” section on page 26-40 (synchronous transport signal [STS] or Virtual Tributary [VT]). <b>Note</b> For bulk rolling only
<RFROMSTART>	The starting time slot in the source roll port. Access identifier from the “26.17 FACILITY” section on page 26-40 (STS or VT). Defaults to STS-<FROMSLOT>-<FROMPORT>-1, where <FROMSLOT> and <FROMPORT> are the slot and port of the <FROM> AID. <b>Note</b> For bulk rolling only
<RFROMEND>	The ending time slot in the source roll port. Access identifier from the “26.17 FACILITY” section on page 26-40 (STS and VT). Defaults to STS-<FROMSLOT>-<FROMPORT>-N, where <FROMSLOT> and <FROMPORT> are the slot and port of the <FROM> AID and N is the value of OCn (for example, with OC-48, n=48). <b>Note</b> For bulk rolling only
<RMODE>	Indicates the mode of the rolling operation. The parameter type is RMODE (roll mode).
<ul style="list-style-type: none"> <li>AUTO</li> <li>MAN</li> </ul>	<p>Automatic. When a valid signal is available, the roll with an AUTO mode will automatically delete the previous end-point.</p> <p>Manual. Enter the corresponding delete roll/bulkroll command to delete the previous end-point.</p>
<CMDMDE>	Command execution mode. Defaults to NORM. The parameter type is CMDMDE, which forces the system to execute a given command regardless of any standing conditions. Normal mode is the default behavior for all commands but you can specify FRCD to force the system to override a state where the command would normally be denied.
<ul style="list-style-type: none"> <li>FRCD</li> <li>NORM</li> </ul>	<p>Force the system to override a state where the command would normally be denied.</p> <p>Execute the command normally. Do not override any conditions that could make the command fail.</p>

## 12.5 ENT-BWP-ETH

(Cisco ONS 15454)

Enter Bandwidth Profile for ETH command is used to enter a new Bandwidth Profile entry in BWP DB. The BWP DB is a collection of Bandwidth Profiles used in a Network Element.

### Usage Guidelines

Error conditions are:

- If the AID is invalid, an IIAC (Invalid AID) error message is returned
- The “ALL” AID is invalid for this command.
- The BWP having the specified AID should not be present in the node, otherwise the command is denied.

### Category

ETHERNET

### Security

Provisioning

### Input Format

ENT-BWP-ETH:[<TID>]:<AID>:<CTAG>:::[NAME=<NAME>],[CIR=<CIR>],[CBS=<CBS>],[PBS=<PBS>],[PIR=<PIR>],[CFMSTATE=<CFM\_STATE>][:];

### Input Example

ENT-BWP-ETH:ROCKS:BWP-10000:1:::NAME="MyBWP",CIR=10,CBS=1M,PBS=1M,PIR=20,CFMSTATE=Y;

### Input Parameters

<AID>	This AID is used to access BWP.BWP AID Format is: BWP-[bwpid]Values
• BWP-ALL	All aid for BWP.
• BWP-{1-10000}	Single AID for BWP. The valid identifiers ranges from 1 to 10000.
<NAME>	indicates the BWP name. bwp name is a String. - Default value is -
<CIR>	Ingress committed information rate. This is a value between 0 and 100.Default value is - 100.
<CBS>	Ingress committed burst bucket size.
• 4K	4 Kbit bucket size
• 8K	16 Kbit bucket size
• 16K	32 Kbit bucket size
• 32K	64 Kbit bucket size
• 64K	128 Kbit bucket size
• 128K	256 Kbit bucket size
• 256K	512 Kbit bucket size

• 512K	1 Mbit bucket size
• 1M	2 Mbit bucket size
• 2M	4 Mbit bucket size
• 4M	8 Mbit bucket size
• 8M	16 Mbit bucket size
• 16M	16 Kbit bucket size
<PBS>	Ingress peak burst bucket size
• 4K	4 Kbit bucket size
• 8K	8 Kbit bucket size
• 16K	16 Kbit bucket size
• 32K	32 Kbit bucket size
• 64K	64 Kbit bucket size
• 128K	128 Kbit bucket size
• 256K	256 Kbit bucket size
• 512K	512 Kbit bucket size
• 1M	1 Mbit bucket size
• 2M	2 Mbit bucket size
• 4M	4 Mbit bucket size
• 8M	8 Mbit bucket size
• 16M	16 Mbit bucket size
<PIR>	Peak information rate. This is a value between 0 and 100. Default value is - 100.
<CFMSTATE>	Link Integrity status. Default value is -
• Y	Enabled
• N	Disabled

## 12.6 ENT-CRS-<PATH>

(Cisco ONS 15454) The Enter STS Cross-Connection for STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, STS9C, VT1, or VT2 (ENT-CRS-<PATH>) command creates a synchronous transport signal (STS) cross-connection with a cross-connection type (CCT). Refer to the *Cisco ONS 15454 SONET TL1 Reference Guide* for specific ring provisioning procedures.

### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

When a path protection cross-connection is created, the path presented by the first AID is configured to be the preferred path. For example, the AID (F1) of the cross-connection (created by ENT-CRS-STs1::F1&F2,T1:123;) is the preferred path.

The following guidelines also apply:

- The default cross-connection type is two-way.
- If a path is already in a connection, it cannot be in another connection even if the existing connection is one-way and the new one will be one-way in the other direction.

- This command does not support creating multiple STS cross-connections.
  - The path protection STS cross-connection can be created by using “&” in the AID fields of this command.
    - The following command is used to create a one-way selector or two-way selector and bridge with F1, F2 as from points and T1 as the to point:  
 ENT-CRS-**{STS\_PATH}**:**[<TID>]**:F1&F2,T1:**<CTAG>**::**[<CCT>]**;
    - The following command is used to create a one-way bridge or two-way selector and bridge with F1 as the from point and T1, T2 as the to points:  
 ENT-CRS-**{STS\_PATH}**:**[<TID>]**:F1,T1&T2:**<CTAG>**::**[<CCT>]**;
    - The following command is used to create a one-way subtending path protection connection or two-way subtending path protection connection with F1, F2 as the from points and T1, T2 as the to points:  
 ENT-CRS-**{STS\_PATH}**:**[<TID>]**:F1&F2,T1&T2:**<CTAG>**::**[<CCT>]**;
    - The following command is used to create a two-way selector and bridge with F1,F2 (F1 is the working side, F2 is the protect side) as the from points and S1, S2 (S1 is the working side, S2 is the protect side) as the selector points:  
 ENT-CRS-**{STS\_PATH}**:**[<TID>]**:F1&F2,S1&S2:**<CTAG>**::**2WAY**;
    - The following command is used to create a path protection integrated dual-ring interconnect (IDRI) cross-connection:  
 ENT-CRS-**{STS\_PATH}**:**[<TID>]**:A&B,C&D:**<CTAG>**::**2WAYDC**;

where:

    - A: Path on Ring X to which traffic from Ring Y is bridged
    - B: Path on Ring X to which traffic from the same ring is bridged
    - C: Path on Ring Y to which traffic from Ring X is bridged
    - D: Path on Ring Y to which traffic from the same ring is bridged

A, B, C, and D have a positional meaning. Connection type 2WAYDC is used for path protection IDRI cross-connections.

  - The following command is used to create a path protection dual-ring interconnect (DRI) cross-connection:  
 ENT-CRS-**{STS\_PATH}**:**[<TID>]**:A&B,C:**<CTAG>**::**2WAYDC**;
- where:
- A: Path on Ring X to which traffic from Ring Y is bridged
  - B: Path on Ring X to which traffic from the same ring is bridged
  - C: Traffic to and from Ring Y
- A, B, C, and D have a positional meaning. Connection type 2WAYDC is used for path protection DRI cross-connections.
- All A&B AIDs in the TL1 cross-connection command are in the WorkingAID&ProtectAID format.
- To establish a cross-connection on a two-fiber protection path or on a four-fiber protection channel, the protection channel access (PCA) connection type (1WAYPCA or 2WAYPCA) is required.
- If you send a PCA cross-connection type on the non-PCA AIDs, the IIAC error message is returned.
- If you send a non-PCA cross-connection type on the PCA AIDs, the IIAC error message is returned.

- The facility AID is only valid on slots with a G1K-4 card installed.
- The virtual facility AID (VFAC) is only valid on slots holding an ML-Series card.
- Both DRITYPE and DRINODE have been optional fields since Release 5.0 to support the BLSR-DRI feature. DRITYPE is applied only if the CCT is drop-and-continue (1WAYDC or 2WAYDC), and defaults to path protection for the DRI. DRINODE must be specified only if at least one end of the connection is on the BLSR, and defaults to NA.
- The DS3XM-12 card allows portless STS1/VT1.5 cross-connection provisioning on the DS3XM-12 PORTLESS ports (port number > = 12).
- CKTID is a string of ASCII characters. The maximum length of CKTID is 48. If the CKTID is EMPTY or NULL the field will not appear.
- STS18c and STS36c cross-connects are only supported on the FC\_MR-4 card and optical cards.
- LO CCAT is not applicable for ML-100T-8 and CE-100T-8 cards.

**Category**

Cross Connections

**Security**

Provisioning

**Input Format**

```
ENT-CRS-<PATH>:[<TID>]:<SRC>,<DST>:<CTAG>::[<CCT>]:[DRITYPE=<DRITYPE>],
[DRINODE=<DRINODE>],[CKTID=<CKTID>],[CMDMDE=<CMDMDE>]:[<PST>[,<SST>]];
```

**Input Example**

```
ENT-CRS-ST33C:BODEGA:STS-5-1-1&STS-6-1-1,STS-12-1-1&STS-13-1-1:116::1WAYDC:
DRITYPE=BLSR,DRINODE=PRI,CKTID=CKTID,CMDMDE=FRCD:IS,AINS;
```

**Input Parameters**

<SRC>	Source access identifier from the “26.1 ALL” section on page 26-1. Llistable.
<DST>	Destination AID from the “26.1 ALL” section on page 26-1.
<CCT>	Type of connection. Used for specifying one or two-way connections. Default is 2-way. The parameter type is CCT, which is the type of cross-connect that will be created.
• 1WAY	A unidirectional connection from a source tributary to a destination tributary.
• 1WAYDC	Path Protection multicast drop with one-way continue.
• 1WAYEN	Path Protection multicast end node with one-way continue.
• 1WAYMON	A bidirectional connection between the two tributaries.
<b>Note</b>	1WAYMON is not supported with TL1. However, it is still supported from the Cisco Transport Controller (CTC). Using CTC, you can create 1WAYMON cross-connects that can be retrieved through TL1.

• 1WAYPCA	A unidirectional connection from a source tributary to a destination tributary on the protection path/fiber.
• 2WAY	A bidirectional connection between the two tributaries.
• 2WAYDC	A bidirectional drop-and-continue connection applicable only to path protection traditional and integrated DRIs.
• 2WAYPCA	A bidirectional connection between the two tributaries on the extra protection path/fiber.
• DIAG	Diagnostic cross-connect. Supports BERT (BLSR PCA diagnostic cross-connect).
<DRITYPE>	DRI connection type. Applied only if the CCT is a drop-and-continue connection type (1WAYDC or 2WAYDC). Defaults to path protection. The parameter type is DRITYPE (DRI type).
• BLSR	BLSR DRI type
• Path Protection	Path Protection DRI type
• Path Protection-BLSR	Path Protection-BLSR type
<DRINODE>	Dual ring interconnect node. The parameter type is DRINODE (DRI node).
• INT	Intermediate DRI node
• NA	The node is not a DRI node.
• PRI	Primary DRI node
• SEC	Secondary DRI node
<CKTID>	Cross-connect ID. Defaults to blank or none. CKTID is a string.
<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
• FRCD	Force the system to override a state where the command would normally be denied.
• NORM	Execute the command normally. Do not override any conditions that could make the command fail.
<PST>	Primary state. Defaults to IS. The parameter type is primary state (PST), which indicates the current overall service condition of an entity.
• IS	In service
• OOS	Out of service
<SST>	Secondary state. Defaults to AINS. The parameter type is SST, which provides additional information pertaining to PST and primary state qualifier (PSTQ).
• AINS	Automatic in-service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of equipment and attributes

• MT	Maintenance mode
• OOG	Out of group
• SWDL	Software downloading
• UAS	Unassigned
• UEQ	Unequipped

## 12.7 ENT-CRS-ETH

(Cisco ONS 15454)

Enter Cross-Connect Ethernet (ENT-CRS-ETH) command allocates an Ethernet Connection. The user need to specify two or more ethernet connection end points inside ethernet facilities in order to allocate the connection inside the node. According to the specified ethernet facilities, the connection allocated can be a pass-through, add or drop or multi-drop.

### Usage Guidelines

The ethernet connection end point identifier must be the same for all the ethernet ports inside the connection and must be kept the same for all the ethernet circuit.

The client and trunk facilities involved in cross-connection is set in UNI and NNI network mode respectively.

The ethernet connection can be allocated in 2WAY (bidirectional) mode.

AID rule to be used for different cases:

- only one source AID can be specified
- one or more destination (drops) AID can be specified
- In both cases the AID specifies a valid ethernet facility and a connection end point identifier within the valid range.
- CKTID is a string of ASCII characters. The maximum length of CKTID can be 48. If the CKTID is EMPTY or NULL this field is not displayed.

### Category

DWDM

### Security

Provisioning

### Input Format

ENT-CRS-ETH:[<TID>]:<SRC>,<DST>:<CTAG>::[<ECT>]:[CKTID=<CKTID>][:];

### Input Example

ENT-CRS-ETH:VA454-22:ETH-1-3-1-1-13,ETH-1-3-21-1-13:116::2WAY:CKTID=ETHCIRCUIT::;

Input Parameters		
<SRC>	Ethernet connection identifier AID used to access L2 ethernet connection end point.	
• ALL	The ALL aid is applicable for RTRV-only commands, basically the RTRV-rr type of commands.	
• ETHID[-{1-12}]{1-5, 12-16}{1-22}-1-{1-20}	Ethernet connection end point aid for GE-XP card.	
• ETHID[-{1-12}]{1-6, 12-17}{1-4}-1-{1-20}	Facility aid for 10GE-XP card.	
<DST>	Ethernet connection identifier AIDs used to access L2 ethernet connection end point.	
• ALL	The ALL aid is applicable for RTRV-only commands, basically the RTRV-rr type of commands.	
• ETHID[-{1-12}]{1-5, 12-16}{1-22}-1-{1-20}	Ethernet connection end point aid for GE-XP card.	
• ETHID[-{1-12}]{1-6, 12-17}{1-4}-1-{1-20}	Facility aid for 10GE-XP card.	
<ECT>	Defines the type of cross-connect to be created. It is a subset of the CCT. Default value is - 2way default for cross-connection creation.	
• 2WAY	A bidirectional connection between the two tributaries.	
<CKTID>	(optional) Circuit identification parameter contains the Common Language Circuit ID or other alias of the circuit being provisioned. CKTID is a string of ASCII characters. The maximum length of CKTID can be 48. cktid is a String. Default value is - "NULL"	

## 12.8 ENT-EQPT

(Cisco ONS 15454) The Enter Equipment (ENT-EQPT) command enters the card type and attributes for a given equipment slot in the NE. It also automatically enters all facilities supported by the card and assigns default values to all facility and path attributes. The ENT-EQPT command is also used to preprovision an NE configured in multishelf mode.

### Usage Guidelines

The command supports optional parameters: RVTM (revertive time), RVRTV (revertive behavior), PROTID (unique protection ID), and PRTYPE (protection type) for configuring the card in an equipment protection group. PRTYPE can be 1:1 or 1:N. These parameters can only be entered for a working AID. The protect card must already be provisioned before creating the protection group.

This command creates a 1:1 protection group. If the command has the optional parameters for creating a protection group and the protection group cannot be created due to an error condition, provisioning of the equipment fails. 1:1 protection involves the odd slot protecting the even slot. The work-protect pair is 2-1, 4-3, 6-5, 16-17, 14-15, 12-13. The DS1, DS3, DS3XM, DS3N, DS3E, EC1 and other electrical cards support 1:1 protection. The value of PROTID is the protecting slot and has a "Slot-x" format.

The PROTID slot must be provisioned first.

To create 1:1 with the ENT-EQPT command, do not provision a working card first.

The following is an example for a 1:1 protection group:

```
ENT-EQPT:[<TID>]:SLOT-1:<CTAG>::DS1;
ENT-EQPT:[<TID>]:SLOT-2:<CTAG>::DS1:PROTID=SLOT-1,PRTYPE=1-1,RVTM=5.0,
RVRTV=Y;
```

The ENT-EQPT command creates a 1:N protection group or adds a new card to an existing 1:N protection group. Multiple working AIDs can be entered in a protection group. 1:N protection is always revertive. For 1:N protection, the protect slot can only be Slot 3 or Slot 15. For a protect card in Slot 3, the working cards can be in any of the slots on Bank A. Slot 15 is for protection in Bank B. A DSXN (DS1N or DS3N) card must be provisioned in the protect slot. 1:1 protection cannot be upgraded to 1:N protection.

The following is an example of provisioning a 1:N protection group with the ENT-EQPT command:

```
ENT-EQPT:[<TID>]:SLOT-3:<CTAG>::DS1N;
ENT-EQPT:[<TID>]:SLOT-2&SLOT-1:<CTAG>::DS1:PROTID=SLOT-3,PRTYPE=1-N;
```

The following is an example of provisioning a 1:N protection group with the ED-EQPT command:

```
ENT-EQPT:[<TID>]:SLOT-1&SLOT-2:<CTAG>::DS1;
ENT-EQPT:[<TID>]:SLOT-3:<CTAG>::DS1N;
ED-EQPT:[<TID>]:SLOT-2&SLOT-1:<CTAG>::PROTID=SLOT-1,PRTYPE=1-N;
```



**Note**

The ENT-EQPT command provisions a new card and adds it to the protection group. The ED-EQPT command adds the already provisioned cards to the protection group.

If the provisioning fails for some AIDs, PRTL responses will indicate failed AIDs. If the provisioning fails for all the AIDs, a DENY response occurs. CMPLD and PRTL responses for protection group queries indicate that the protection group has been successfully created for the AID(s) query.

The following is an example for 1:N protection. The RVRTV parameter is not valid for 1:N protection.

```
ENT-EQPT:[<TID>]:SLOT-2:<CTAG>::PROTID=SLOT-3,PRTYPE=1-N,RVTM=5.0;
```

Both ENT-EQPT and ED-EQPT commands can provision all working AIDs (1-5) together for 1:N by using listed AIDs. The protect AID should already be provisioned for either command because protection group parameters are not supported for the protect AID.

The ENT-EQPT command provisions a card successfully in an empty slot if the equipment type is compatible with the slot number. This command can have the optional parameters in the “f” block to provision a card as a working card. It has the effect of adding the protection behavior at the time of provisioning itself. For the protection provisioning to succeed, the protect card should have already been provisioned. Trying to execute ENT-EQPT to provision a protection group on an already provisioned card will result in an error.

The following is an example of provisioning a 1:1 protection group:

<b>Step 1</b>	ENT-EQPT::SLOT-1:12::DS3;	Provisions the protect card.
<b>Step 2</b>	ENT-EQPT::SLOT-2:12::DS3:PROTID=SLOT-1, RVRTV=Y,RVTM=8.0;	Provisions a card and adds it to the protection group.

The following is an example of provisioning a 1:N protection group:

<b>Step 1</b>	ENT-EQPT::SLOT-3:12::DS3N;	Provisions the protect card.
<b>Step 2</b>	ENT-EQPT::SLOT-1:12::DS3:PROTID=SLOT-3, RVTM=7.5,PRTYPE=1-N;	Provisions a card and adds it to protection group.

**Note**

- If you send this command to provision a DS3NE card on Slot 1, 2, 4, 5, 6, 12, 13, 14, 16, or 17, the DS3E card type is presented.
- If you send this command to provision a DS3N card on Slot 1, 2, 4, 5, 6, 12, 13, 14, 16, or 17, the DS3 card type is presented.
- If you send this command to provision a DS1N card on Slot 1, 2, 4, 5, 6, 12, 13, 14, 16, or 17, the DS1 card type is presented.
- For the MRC-12 card, there are hardware limitations for which Small Form-Factor Pluggable (SFP) ports can be used.
- The OC192-XFP card must be installed in Slots 5 and 6 or 12 and 13 and requires an XC10G or XC-VXC-10G cross-connect card.

Error conditions for creating 1:1 or 1:N protection groups are:

- AID sent to a non-working slot; the working cards must be in even slots for 1:1 protection, and working cards must be in the same bank and not in Slot 3 or Slot 15 for 1:N protection.
- An invalid AID was chosen for the protection slot.
- The working AID is already in a protection group.
- The AID is a protect AID.
- The protect card has a circuit.
- The equipment type does not match the allowed AID.
- The slot is already provisioned.
- The protect slot is not provisioned.
- Multiple working AIDs were sent for 1:1 protection.
- The CARDMODE provisioning is allowed on the DS3XM-12 and ML-Series cards. Provisioning for the DS3XM-12 is based on the cross-connect type and DS3XM-12 location. The following error conditions apply:
  - The DS3XM-12 card in the lower speed input/output (I/O) slot with the XCVT card only allows the DS3XM-12-STS12 CARDMODE. Other cases allow the CARDMODE to be DS3XM-12-STS48.
  - The NE defaults to the highest available backplane rate/mode for the DS3XM-12 card if you do not specify the CARDMODE in the ENT-EQPT command.
  - The ML100T-8 card will be provisioned to MAPPER mode by default.
- The 1:N (1 <= N <= 7) protection group is allowed on the DS3XM-12 card in an ONS 15454 across two sides (A and B). All the cards in the 1:N protection group must be on the same backplane rate (or CARDMODE). The following error conditions apply:
  - For 1:N protection, the protect card must be allocated on either Slot 3 or Slot 15. For 1:1 protection, the protect card must be allocated on the odd slots.

- The working DS3XM-12 cards on the opposite side of the shelf from the protection card (either Slot 3 or Slot 15) in a 1:N group can only have portless connections. The other working cards of the 1:N group on the same side of the shelf as the protection card do not have this limitation.

For example, suppose that there is a DS3XM-12 card 1:N group on Slot 2, Slot 3, Slot 4, Slot 12, and Slot 16, where Slot 3 is the protect card. Slot 2, Slot 4, Slot 12, and Slot 16 are the working cards in the 1:N (1:5) protection group. According to the above limitation rule, the Slot 12 and Slot 16 cards need to have the portless provisioning only, while the Slot 2 and Slot 4 cards can be either portless or ported provisioning.

CMDMDE provisioning behaves as follows:

- If the command mode (CMDMDE) is set to NORM during the creation of a 1:1 or 1:N protection group, all cards must be physically plugged in and in the service state (IS). If the cards are not physically plugged in and are not in ready state, the command is denied with an appropriate error message. CMDMDE=FRCD will override the default behavior and allow creation of protection group regardless of the physical presence and ready state of cards.
- If the command mode is set to NORM during the removal of a card in a 1:1 or 1:N protection group, there must be no cross-connects (for example, services) present on the card. CMDMDE=FRCD will override the default behavior and allow deletion of protection group regardless of presence of cross-connects on the card.
- RETIME provisioning is allowed only on the DS1/E1-56 card (ONS 15454).
- The protection group is automatically created when both the working and protect cards are provisioned; therefore, protection groups cannot be created using the ENT-EQPT or ED-EQPT commands. A protection group can be deleted by deleting the protect card (DLT-EQPT). Trying to delete the working card will result in the Equipment In Use (SPLD) error.

---

**Category**

Equipment

---

**Security**

Provisioning

---

**Input Format**

```
ENT-EQPT[:<TID>]:<AID>:<CTAG>::<AIDTYPE>[:PROTID=<PROTID>],[PRTYPE=<PRTYPE>],
[RVRTV=<RVRTV>],[RVTM=<RVTM>],[CARDMODE=<CARDMODE>],[PEERID=<PROTID>],[
REGENNAME=<REGENNAME>],[CMDMDE=<CMDMDE>],[TRANSMODE=<TRANSMODE>],[
RETIME=<RETIME>],[SHELFROLE=<SHELFROLE>],[FRPROLE=<FRPROLE>],[FRPSTATE=<F
RPSTATE>],[FRPHOLDOFFTIME=<FRPHOLDOFFTIME>],[CFMSTATE=<CFMSTATE>],[CCTIM
ER=<CCTIMER>],[PROTOPMODE=<PROTOPMODE>],[SWITCHWITHCRCALARM=<SWITCH
WITHCRCALARM>],[CRCTHR=<CRCTHR>],[CRCPOLLINTRVL=<CRCPOLLINTRVL>],[CRCS
OAKCNT=<CRCSOAKCNT>],[USB=<USB>][:];
```

**Input Example**

```
ENT-EQPT::SLOT-15:a::GE-XP:CARDMODE=GEXP-L2ETH,SWITCHWITHCRCALARM=Y;
```

```
ENT-EQPT::SLOT-15:a::GE-XP:CARDMODE=GEXP-L2ETH,CRCPOLLINTRVL=4;
```

**Input Parameters**

Parameter	Description
<AID>	Access identifier from the “26.15 EQPT” section on page 26-37.
<AIDTYPE>	(Optional) The type of facility, link or other addressable entity targeted by the message. The parameter type is EQUIPMENT_TYPE (equipment type). The equipment type options are 40E-MXP-C and 40E-TXP-C.
<ul style="list-style-type: none"> <li>10GE-XP</li> </ul>	(ONS 15454) 2 x 10 Gbps. muxponder/L2 ethernet switch card
<ul style="list-style-type: none"> <li>15216-MD-40-EVEN</li> </ul>	Thermal Multiplex/Demultiplex Passive Unit, spaced at 50 GHz on even grid
<ul style="list-style-type: none"> <li>15216-MD-40-ODD</li> </ul>	Thermal Multiplex/Demultiplex Passive Unit, spaced at 50 GHz on odd grid
<ul style="list-style-type: none"> <li>15216-MD-ID-50</li> </ul>	Thermal Interleaver Passive Unit, spaced at 50 GHz grid
<ul style="list-style-type: none"> <li>15216-FLD4-30-3</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1530.33 to 1532.68
<ul style="list-style-type: none"> <li>15216-FLD4-33-4</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1533.47 to 1535.82
<ul style="list-style-type: none"> <li>15216-FLD4-36-6</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1536.61 to 1538.98
<ul style="list-style-type: none"> <li>15216-FLD4-39-7</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1539.77 to 1542.14
<ul style="list-style-type: none"> <li>15216-FLD4-42-9</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1542.94 to 1545.32
<ul style="list-style-type: none"> <li>15216-FLD4-46-1</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1546.12 to 1548.51
<ul style="list-style-type: none"> <li>15216-FLD4-49-3</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1549.32 to 1551.72
<ul style="list-style-type: none"> <li>15216-FLD4-52-5</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1552.52 to 1554.94
<ul style="list-style-type: none"> <li>15216-FLD4-55-7</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1555.75 to 1558.17
<ul style="list-style-type: none"> <li>15216-FLD4-58-9</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1558.98 to 1561.42
<ul style="list-style-type: none"> <li>32-DMX</li> </ul>	(ONS 15454) 32 channel optical demultiplexer
<ul style="list-style-type: none"> <li>32-DMX-L</li> </ul>	(ONS 15454) 32 channel optical demultiplexer for L-band
<ul style="list-style-type: none"> <li>32-DMX-O</li> </ul>	(ONS 15454) 32 channel unidirectional optical demultiplexer This overrides the old equipment type DMX-32 present in the 4.6 and earlier releases.

Parameter	Description
• 32-MUX-O	(ONS 15454) 32 channel unidirectional optical multiplexer This overrides the old equipment type MUX-32 present in the 4.6 and earlier releases.
• 32-WSS	(ONS 15454) 32 channel optical wavelength selective switch for C Band
• 40-DMX-C	(ONS 15454) 40 channel optical demultiplexer for C Band
• 40-MUX-C	(ONS 15454) 40 channel optical multiplexer for C Band
• 40G-MXP-C	40 Gbit/Sec Multirate Muxponder
• 40-SMR1-C	The single module 40-channel ROADM on C-band
• 40-SMR2-C	The single module 40-channel ROADM with EDFA on C-band
• 40G-TXP-C	40 Gigabits per second Multirate Transponder
• 40-WXC-C	(ONS 15454) 40 channel optical wavelength cross-connect/wavelength router for C Band
• 80-WXC-C	80-channel wavelength cross-connect spaced at 100 GHz grid
• AD-1B	(ONS 15454) Optical add/drop multiplexed (OADM) 1 band filter
• AD-1C	(ONS 15454) Optical add/drop multiplexed (OADM) 1 channel filter
• AD-2C	(ONS 15454) Optical add/drop multiplexed (OADM) 2 channels filter
• AD-4B	(ONS 15454) Optical add/drop multiplexed (OADM) 4 bands filter
• AD-4C	(ONS 15454) Optical add/drop multiplexed (OADM) 4 channels filter
• ADM-10G	(ONS 15454) 16 x OC3/OC12/OC48/GIGE and OC192/Trunk ADM 10 Gbps card
• AIC	(ONS 15454) AIC card
• AICI	(ONS 15454) AICI Card
• CE-1000-4	(ONS 15454) Modena mapper card
• CE-100T-8	(ONS 15454) Exige/Elise mapper card
• CE-MR-10	(ONS 15454, ONS 15454) Lotus20g ce2 card
• DCU	Dispersion Compensation Unit
• DS1-E1-56	(ONS 15454) DS1-E1-56 card
• DS1I	(ONS 15454) DS1I card
• DS3	(ONS 15454) DS3 card
• DS3-EC1-48	(ONS 15454) DS3-EC1-48 card type
• DS3E	(ONS 15454) DS3E card
• DS3I	(ONS 15454) DS3I card
• DS3IN	(ONS 15454) DS3IN card
• E1-42	(ONS 15454) 42 port E1 card
• E1000T	(ONS 15454) E1000T card

Parameter	Description
• E100T	(ONS 15454) E100T card
• E3	(ONS 15454) E3 card
• EC1	(ONS 15454) EC1 card
• FILLER-CARD	(ONS 15454) Blank filler card
• FMEC-155E-1TO3	The equipment type for FMEC STM1E12 card with 1:3 protection
• FMEC-155E-UNPROT	The equipment type for FMEC STM1E12 card without protection
• G1000-4	(ONS 15454) A 4-port G1000 card
• GE-XP	(ONS 15454) 20 x 1 Gbps muxponder/L2 ethernet switch card
• MD-4	(ONS 15454) Four channel optical multiplexer/demultiplexer
• MESH-PP-SMR	The passive unit Patch Panel device used to connect up to four 40-SMR2-C cards.
• ML-100T-8	(ONS 15454) Exige/Elise mapper card
• ML1000-2	(ONS 15454) Daytona 2-port GigE
• ML100T-12	(ONS 15454) Daytona 12-port FSTE
• ML100X-8	(ONS 15454) 8-port 100T card with optical interface
• MRC-12	(ONS 15454) Humvee - 12-port multirate optical card
• MRC-2.5G-4	(ONS 15454) 4-port MRC 2.5G (Hummer 4 15454-ANSI card)
• MRC-2.5G-12	(ONS 15454) 12-port MRC 2.5G (Hummer 12 15454-ETSI card)
• MS-ISC-100T	(ONS 15454) Multishelf Internal Switch Card
• MXP-2.5G-10E	(ONS 15454) Monviso 10G (4 * 2.5G) muxponder card with enhanced FEC
• MXP-2.5G-10G	(ONS 15454) Skane 10G (4 * 2.5G) muxponder card
• MXP-MR-2.5G	(ONS 15454) Bernina multirate 2.5G muxponder unprotected
• MXPP-MR-2.5G	(ONS 15454) Bernina multirate 2.5G muxponder protected
• MXP-MR-10DME	(ONS 15454) Multirate 10Gbps datamux
• OPT-AMP-17-C	(ONS 15454) Optical booster/pre-amplifier for C band 17 dBm
• OPT-AMP-23-C	(ONS 15454) Optical booster/pre-amplifier for C band 23 dBm
• OPT-AMP-L	(ONS 15454) Optical booster/pre-amplifier for L band
• OPT-AMP-C	(ONS 15454) Optical booster/pre-amplifier for C band
• OPT-BST	(ONS 15454) Optical booster amplifier
• OPT-BST-E	(ONS 15454) Optical booster enhanced amplifier for C band
• OPT-BST-L	(ONS 15454) Optical booster amplifier for L band
• OPT-EDFA-17	MAL-less EDFA Optical Amplifier - C-band - 17dB Gain
• OPT-EDFA-24	MAL-less EDFA Optical Amplifier - C-band - 24dB Gain

Parameter	Description
• OPT-PRE	(ONS 15454) Optical pre-amplifier
• OPT-RAMP-C	Raman pump amplifier C-band
• OPT-RAMP-CE	An extended version of Raman pump amplifier
• OPT-RAMP-E	Raman pump amplifier E-band
• OSC-CSM	(ONS 15454) Optical service channel (OSC) with combiner/separator module (SCM)
• OSCM	(ONS 15454) Optical service channel (OSC) module
• OTU2-XP	A 4x10G transponder that is capable to operate with multiple bit rates - 10G FC, 10GE, and OC192/STM64
• PP-4-SMR	Patch-Panel, 4 degrees, for SMR cards
• PP-MESH-4	Patch-Panel, 4 degrees
• PP-MESH-8	Patch-Panel, 8 degrees
• PPM-1	(ONS 15454) Pluggable port module with one SFP port
• PSM	Protection Service Module card
• PTM-4	Line card
• PTF-4	Fabric card
• PTSA	CPT 50 panel
• SHELF	To Provision the 15454 node as SSC
• SHELF-M6	To Provision the M6 node as SSC
• STM1E-12	(ONS 15454 SDH) STM1E-12 card
• TCC	(ONS 15454) TCC card
• TDC-CC	Coarse tunable dispersion compensation unit
• TDC-FC	Fine tunable dispersion compensation unit
• TNC	Transport Node Controller card
• TSC	Transport Shelf Controller card
• TXP-MR-10E	(ONS 15454) Skane 10G multirate transponder card with enhanced FEC
• TXP-MR-10G	(ONS 15454) Skane 10G multirate transponder card
• TXP-MR-2.5G	(ONS 15454) Rockwell multirate 2.5G unprotected
• TXPP-MR-2.5G	(ONS 15454) Rockwell multirate 2.5G protected
• XC	(ONS 15454) XC card
• XC10G	(ONS 15454) XC10G card
• XCVT	(ONS 15454) XCVT card
• XCVXC-10G	(ONS 15454) XCVXC-10G card
• XCVXL-10G	(ONS 15454) XCVXL-10G card
• XCVXL-2.5G	(ONS 15454) XCVXL-2.5G card
<PROTID>	Identifies valid protection slots for the electrical cards.
• NULL	Indicates there is no protection group. Used when trying to delete a protection group.
• SLOT-1	The No.1 slot of an NE.
• SLOT-2	The No.2 slot of an NE

Parameter	Description
• SLOT-3	The No.3 slot of an NE.
• SLOT-5	The No.5 slot of an NE.
• Slot-6	The No.6 slot of an NE.
• SLOT-13	The No.13 slot of an NE.
• SLOT-15	The No.15 slot of an NE.
• SLOT-17	The No.17 slot of an NE.
<PRTYPE>	Identifies the protection group type values.
• 1-1	1 to 1 protection
• 1-N	1 to N protection
<RVRTV>	(Optional) Revertive mode. The value Y indicates that protection switching system reverts service to the original line after restoration. The value N indicates that protection switching system does not revert service to the original line after restoration. RVRTV is applicable only for 1+1 protection switching. Null defaults to N. Only applies to SNCP. The parameter type is ON_OFF, which disables or enables an attribute.
• N	Does not revert service to original line after restoration.
• Y	Reverts service to original line after restoration.
<RVTM>	(Optional) Revertive time. RVTM is not allowed to be set while RVRTV is N. Only applies to SNCP. The parameter type is REVERTIVE_TIME (revertive time).
• 0.5 to 12.0	Revertive time is 0.5 to 12.0 minutes.
<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
<FRCD>	Force the system to override a state where the command would normally be denied.
• NORM	Execute the command normally. Do not override any conditions that might make the command fail.
<RETIME>	(Optional) Indicates the RETIME function for all the facilities on this card. Applies only to the DS1/E1-56 card. The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.
<PEERID>	Indicates the peer trunk facility of the regeneration group on the OTU2-XP card. Accessed using the CHAN AID.
<REGENNAME>	Indicates the name of a regeneration group. Applicable only to DWDM flavored cards, which support regeneration group. Regenname is a string. The default value is "NULL".
<TRANSMODE>	Transition Mode.

Parameter	Description
<ul style="list-style-type: none"> <li>AU3</li> </ul>	Au3 mode.
<ul style="list-style-type: none"> <li>AU4</li> </ul>	Au4 mode.
<ul style="list-style-type: none"> <li>SONET</li> </ul>	Sonnet mode.
<SHELFROLE>	The role of the shelf in the context of the node. When it is omitted it defaults to SC. The parameter is SHELF_ROLE.
<FRPHOLDOFFTIME>	Indicates the hold off timer value. The protection do not start until the hold off expire.
<ul style="list-style-type: none"> <li>100-MSEC</li> </ul>	Indicates the hold off timer value as 100 milliseconds.
<ul style="list-style-type: none"> <li>1-MSEC</li> </ul>	Indicates the hold off timer value as 1milisecond.
<ul style="list-style-type: none"> <li>200-MSEC</li> </ul>	Indicates the hold off timer value as 200 milliseconds.
<ul style="list-style-type: none"> <li>2-MSEC</li> </ul>	Indicates the hold off timer value as 2 milliseconds.
<ul style="list-style-type: none"> <li>500-MSEC</li> </ul>	Indicates the hold off timer value as 500 milliseconds.
<ul style="list-style-type: none"> <li>50-MSEC</li> </ul>	Indicates the hold off timer value as 50 milliseconds.
<ul style="list-style-type: none"> <li>5-MSEC</li> </ul>	Indicates the hold off timer value as 50 milliseconds.
<ul style="list-style-type: none"> <li>DISABLED</li> </ul>	Indicates that the hold off timer is disabled.
<FRPROLE>	Indicates the fast ring protection enable mode for GE-XP/10GE-XP units involved in a protection scheme.
<ul style="list-style-type: none"> <li>MASTER</li> </ul>	Role is of card master of the ring.
<ul style="list-style-type: none"> <li>SLAVE</li> </ul>	Role is of card slave of the ring.
<FRPSTATE>	Indicates the fast ring protection enable state.
<ul style="list-style-type: none"> <li>DISABLED</li> </ul>	Disabled protection
<ul style="list-style-type: none"> <li>ENABLED</li> </ul>	Enabled protection
<ul style="list-style-type: none"> <li>FORCED</li> </ul>	Forced protection
<CFMSTATE>	Link Integrity status.
<ul style="list-style-type: none"> <li>Y</li> </ul>	Enabled
<ul style="list-style-type: none"> <li>N</li> </ul>	Disabled
<CCTIMER>	Indicates continuity check message timer.
<ul style="list-style-type: none"> <li>ONE-MIN</li> </ul>	1 minute.
<ul style="list-style-type: none"> <li>ONE-SEC</li> </ul>	1 second.
<ul style="list-style-type: none"> <li>TEN-SEC</li> </ul>	10 seconds.
<PROTOPMODE>	PROTOPMODE
<SWITCHWITHCRCALARM>	Switch the GZ card with CRC Alarms
<CRCTHR>	CRC threshold values beyond which alarms are raised. The available threshold values are 10E-2, 10E-3, and 10E-4.
<CRCPOLLINTRVL>	Interval of time after which the polling starts.
<CRCISOAKCNT>	Number of poll cycles during which defect is integrated. The value ranges from 3 to 10.
<USB>	Identifies the USB Port where a passive unit is connected.

## 12.9 ENT-FFP-<MOD2DWDMPAYLOAD>

(Cisco ONS 15454) The Enter Facility Protection Group for 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 8GFC, D1VIDEO, DV6000, DVBASI, ETRCLO, FSTE, GIGE, HDTV, ISC1, ISC3, OTU3, PASSTHRU, or OCH (ENT-FFP-<MOD2DWDMPAYLOAD>) command creates Y-cable protection on client facilities. Refer to the *Cisco ONS 15454 SONET TL1 Reference Guide* for specific card provisioning rules.

**Usage Guidelines** None

**Category** DWDM

**Security** Provisioning

**Input Format** ENT-FFP-<MOD2DWDMPAYLOAD>:[<TID>]:<SRC>,<DST>:<CTAG>:::[PROTOTYPE=<PROTOTYPE>],[PROTID=<PROTID>],[RVRTV=<RVRTV>],[RVTM=<RVTM>],[PSDIRN=<PSDIRN>][:];

**Input Example** ENT-FFP-HDTV:CISCO:FAC-1-1-1,FAC-2-1-1:100:::PROTOTYPE=Y-CABLE,PROTID=DC-METRO-1,RVRTV=Y,RVTM=1.0,PSDIRN=BI;

<b>Input Parameters</b>	<SRC>	Source access identifier from the “ <a href="#">26.17 FACILITY</a> ” section on page 26-40.
	<DST>	Destination access identifier from the “ <a href="#">26.17 FACILITY</a> ” section on page 26-40.
	<PROTOTYPE>	The type of facility protection. The parameter type is PROTOTYPE (protection type for dense wavelength division multiplexing [DWDM] client facilities).
	<ul style="list-style-type: none"> <li>Y-CABLE</li> </ul>	Y-cable protection for the client ports on TXP_MR_10G, MXP_2.5G_10G, and TXP_MR_2.5G/TXPP_MR_2.5G cards.
	<ul style="list-style-type: none"> <li>SPLITTER</li> </ul>	Splitter Protection is applicable only on OTU2-XP card.
	<ul style="list-style-type: none"> <li>ONEPLUSONEL2</li> </ul>	1 + 1 L2 Protection for the client ports on 10GE XP and GE XP
	<PROTID>	Protection group identifier. Defaults to the protect port AID of the protection group. The identifier is a string that can have a maximum length of 32 characters.

<RVRTV>	Revertive mode. The value Y indicates that protection switching system reverts service to the original line after restoration. The value N indicates that protection switching system does not revert service to the original line after restoration. RVRTV is applicable only for 1+1 protection switching. Null defaults to N. The parameter type is ON_OFF (disable or enable an attribute).
• N	Does not revert service to original line after restoration.
• Y	Reverts service to original line after restoration.
<RVTM>	Revertive time. Defaults to 5.0 minutes. The parameter type is REVERTIVE_TIME (revertive time).
• 0.5 to 12.0	Revertive time is 0.5 to 12.0 minutes.
<PSDIRN>	Protection switch operation. Identifies the switching mode. Defaults to UNI.
	<b>Note</b> TXP_MR_10G and MXP_2.5G_10G cards do not support bidirectional switching.
	Parameter type is UNI_BI (unidirectional and bidirectional switch operations).
• BI	Bidirectional protection switching
• UNI	Unidirectional protection switching

## 12.10 ENT-FFP-<OCN\_TYPE>

(Cisco ONS 15454) The Enter Facility Protection Group for OC-3, OC-12, OC-48, OC-192, or OC768 (ENT-FFP-<OCN\_TYPE>) command creates optical 1+1 protection.

### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.



#### Note

- The protect AID must not be provisioned with traffic.
- The working AID can be provisioned with traffic.
- PROTID is a string and can have a maximum length of 32 characters.
- Optimized 1+1 protection and related attributes are only applicable to the ONS 15454.
- The following parameters are supported in Software Release 6.0 and later: OPOTYPE, VRGRDTM, DTGRDTM, and RCGRDTM.
- The following 1+1 protection group rules apply to the MRC-12 card:
  - A 1+1 protection group can only be created between MRC-12 cards. You cannot create a 1+1 protection group between an MRC-12 card and an OC-48 card, for example.
  - A 1+1 protection group can be created only using the same port number. For example, a protection group cannot be created between Port 1 of Slot 5 and Port 4 of Slot 12 (assuming that Slot 5 and Slot 12 both contain MRC-12 cards).
  - A 1+1 protection group cannot be created between ports on the same card. For example, protection groups cannot be created between Port 1 of Slot 5 and Port 4 of Slot 5 (assuming that Slot 5 contains a MRC-12 card).

- Both the cards in the protection group must be placed in the same type of slot. Both MRC-12 cards must be in drop slots (Slots 1 to 4, 14 to 17) or both cards must be in trunk slots (Slots 5 to 6, 12 to 13). You cannot create a protection group between an MRC-12 card in a drop slot and another MRC-12 card in a trunk slot.
- The following 1+1 protection group rules apply to the OC192-XFP cards:
  - A 1+1 protection group can be created between two OC192-XFP cards in trunk slots (Slots 5 to 6, 12 to 13).
  - A 1+1 protection group can be created between an OC192-XFP card and an OC192LR/STM64LH card in trunk slots (Slots 5 to 6, 12 to 13).
- The PROTOTYPE parameter is only applicable to optical DWDM cards.

**Category**

Protection

**Security**

Provisioning

**Input Format**

```
ENT-FFP-<OCN_TYPE>:[<TID>]:<WORK>,
<PROTECT>:<CTAG>:::[PROTOTYPE=<PROTOTYPE>],[PROTID=<PROTID>],
[RVRTV=<RVRTV>],[RVTM=<RVTM>],[PSDIRN=<PSDIRN>],[OPOTYPE=<OPOTYPE>],
[VRGRDTM=<VRGRDTM>],[DTGRDTM=<DTGRDTM>],[RCGRDTM=<RCGRDTM>][:];
```

**Input Example**

```
ENT-FFP-OC-3:PETALUMA:OC3-3-1-1,OC3-3-2-1:1::PROTOTYPE=Y-CABLE,
PROTID=PROT_NAME,RVRTV=Y,RVTM=1.0,PSDIRN=BI,OPOTYPE=STANDARD,
VRGRDTM=0.5,DTGRDTM=1.0,RCGRDTM=1.0;
```

**Input Parameters**

<b>&lt;PROTID&gt;</b>	Protection group identifier. Defaults to the protect port AID of the protection group. If the name has an embedded double quote character, that double quote character has to be escaped with a backslash \". The double quotes are special characters that delimit the protection group name and they must be balanced (paired). PROTID is a string that has a maximum length of 32 characters.
<b>&lt;RVRTV&gt;</b>	Revertive mode. The value Y indicates that protection switching system reverts service to the original line after restoration. The value N indicates that protection switching system does not revert service to the original line after restoration. RVRTV is applicable only for 1+1 protection switching. Null defaults to N. The parameter type is ON_OFF (disable or enable an attribute).
<ul style="list-style-type: none"> <li>• N</li> <li>• Y</li> </ul>	<ul style="list-style-type: none"> <li>Does not revert service to original line after restoration.</li> <li>Reverts service to original line after restoration.</li> </ul>
<b>&lt;RVTM&gt;</b>	Revertive time. Defaults to 5.0 minutes. The parameter type is REVERTIVE_TIME (revertive time).
<ul style="list-style-type: none"> <li>• 0.5 to 12.0</li> </ul>	Revertive time is 0.5 to 12.0 minutes.

<PSDIRN>	Protection switch operation. Identifies the switch mode. The parameter type is UNI_BI (unidirectional and bidirectional switch operations)
• BI	Bidirectional protection switching
• UNI	Unidirectional protection switching
<OPOTYPE>	1+1 protection type. Can be either standard or optimized 1+1 protection. The parameter type is ONE_PLUS_ONE (1+1 protection type).
• Optimized	Optimized 1+1. <b>Note</b> Only applicable to the ONS 15454. The port must be in Sonet mode.
• Standard	Standard 1+1
<VRGRDTM>	Verification guard timer. Only applicable to optimized 1+1. The parameter type is VERIFICATION_GUARD_TIMER (optimized 1+1 verification guard timer).
• 0.5	500 ms
• 1.0	1 second
<DTGRDTM>	Detection guard timer. Only applicable to optimized 1+1. The parameter type is DETECTION_GUARD_TIMER (optimized 1+1 detection guard timer).
• 0.0	0 seconds
• 0.05	50 ms
• 0.1	100 ms
• 0.5	500 ms
• 1.0	1 second
• 2.0	2 second
• 3.0	3 seconds
• 4.0	4 seconds
• 5.0	5 seconds
<RCGRDTM>	Recovery guard timer. Only applicable to optimized 1+1. The parameter type is RECOVERY_GUARD_TIMER (optimized 1+1 detection guard timer).
• 0.0	0 seconds
• 0.05	50 ms
• 0.1	100 ms
• 0.5	500 ms
• 1.0	1 second
• 2.0	2 second
• 3.0	3 seconds
• 4.0	4 seconds
• 5.0	5 seconds
• 6.0	6 seconds
• 7.0	7 seconds
• 8.0	8 seconds

• 9.0	9 seconds
• 10.0	10 seconds

## 12.11 ENT-FOG

(Cisco ONS 15454) The Enter Fan-Out-Group (ENT-FOG) command creates the Fan-Out-Group.

### Usage Guidelines

- This command is used to provision the CPT 50 panel and applied on the carrier packet transport (CPT) system.
- The FOG can be created on a PTSYS AID.
- A 10 GIGE interface provisioned on the CPT 50 panel must be attached when you create the FOG.
- Interfaces that are valid for a particular FOG can be attached.
- Interface attached to one of the FOG cannot be attached to any other FOG.

### Category

Equipment

### Security

Provisioning

### Input Format

ENT-FOG:[<TID>]:<AID>:<CTAG>:::FOGID=<FOGID>,ATTACH=<ATTACH>;

### Input Examples

ENT-FOG::PTSYS-1:1:::FOGID=37,ATTACH=FAC-3-2-1;

### Input Parameters

<AID>	AID of the PTSYS on which the FOG is being created. Access identifier from the <a href="#">“26.15 EQPT”</a> section on page 26-37.
<FOGID>	This is the FOGID. FOG AID is created using the FOGID. The valid range is from 36 to 55.
<ATTACH>	AID of the fabric and line card ports used as the Fan-out members. This is the AID of the interface to be attached to the FOG.

## 12.12 ENT-FTPSERVER

(Cisco ONS 15454) The Enter FTP Server (ENT-FTPSERVER) command creates FTP server entries.

### Usage Guidelines

- The default value of the TIMER, 0, denotes infinite timeout. The TIMER cannot be set with ENABLE=N.
- The FTP server entries are created on the gateway node only.

## ENT-LMP-CTRL

<b>Category</b>	ENE										
<b>Security</b>	Superuser										
<b>Input Format</b>	ENT-FTPSERVER:[<TID>]::<CTAG>:::IPADDR=<IPADDR>,[IPMASK=<IPMASK>],ENABLE=<ENABLE>,[TIMER=<TIMER>];										
<b>Input Examples</b>	<ol style="list-style-type: none"> <li>ENT-FTPSERVER:::A:::IPADDR=10.20.30.40,IPMASK=255.0.0.0,ENABLE=Y,TIMER=30;</li> <li>ENT-FTPSERVER:TID::CTAG:::IPADDR="[3ffe:0501:0008:0000:0260:97ff:fe40:efab/64]",ENABLE=Y,TIMER=45;</li> </ol>										
<b>Input Parameters</b>	<table border="1"> <tr> <td>&lt;IPADDR&gt;</td> <td>Specifies the IP address of the FTP server.</td> </tr> <tr> <td>&lt;IPMASK&gt;</td> <td>Specifies the subnet mask of the FTP server.</td> </tr> <tr> <td>&lt;ENABLE&gt;</td> <td>Specifies the enable/disable option of the FTP server. The parameter type is ON_OFF (disable or enable an attribute).</td> </tr> <tr> <td> <ul style="list-style-type: none"> <li>N</li> <li>Y</li> </ul> </td> <td>           Disable an attribute.            Enable an attribute.         </td> </tr> <tr> <td>&lt;TIMER&gt;</td> <td>(Optional) Specifies the timeout value of the FTP server in minutes. Timer is an integer that can be set between 0 and 60 minutes.</td> </tr> </table>	<IPADDR>	Specifies the IP address of the FTP server.	<IPMASK>	Specifies the subnet mask of the FTP server.	<ENABLE>	Specifies the enable/disable option of the FTP server. The parameter type is ON_OFF (disable or enable an attribute).	<ul style="list-style-type: none"> <li>N</li> <li>Y</li> </ul>	Disable an attribute. Enable an attribute.	<TIMER>	(Optional) Specifies the timeout value of the FTP server in minutes. Timer is an integer that can be set between 0 and 60 minutes.
<IPADDR>	Specifies the IP address of the FTP server.										
<IPMASK>	Specifies the subnet mask of the FTP server.										
<ENABLE>	Specifies the enable/disable option of the FTP server. The parameter type is ON_OFF (disable or enable an attribute).										
<ul style="list-style-type: none"> <li>N</li> <li>Y</li> </ul>	Disable an attribute. Enable an attribute.										
<TIMER>	(Optional) Specifies the timeout value of the FTP server in minutes. Timer is an integer that can be set between 0 and 60 minutes.										

## 12.13 ENT-LMP-CTRL

(Cisco ONS 15454) The Enter Link Management Protocol Control Channel (ENT-LMP-CTRL) command creates an LMP control channel.

**Usage Guidelines** This command is only available on nodes where the LMP is available and has been enabled.

**Category** LMP

**Security** Provisioning

**Input Format** ENT-LMP-CTRL:[<TID>]:<SRC>:<CTAG>:::[LOCALPORT=<LOCALPORT>],[RE MOTENE=<RE MOTENE>],RE MOTEI P=<RE MOTEI P>,[HELLO=<HELLO>],[HELLOMIN=<HELLOMIN>],[HELLOMAX=<HELLOMAX>],[DEAD=<DEAD>],[DEADMIN=<DEADMIN>],[DEADMAX=<DEADMAX>]:[<PST>][,<SST>];

**Input Example**

```
ENT-LMP-CTRL:PETALUMA:CTRL-123:704:::LOCALPORT=FAC-1-1-1,
RE MOTENE=15.15.15.115,RE MOTEI P=126.0.0.1,HELLO=500,
HELLOMIN=300,HELLOMAX=5000,DEAD=12000,DEADMIN=2000,
DEADMAX=20000:OOS,DSBLD;
```

**Input Parameters**

<SRC>	The LMP control channel AID value
<ul style="list-style-type: none"> <li>CTRL-ALL</li> <li>CTRL-{1-4}</li> </ul>	<ul style="list-style-type: none"> <li>Specifies all the control channels</li> <li>Specifies an individual control channel</li> </ul>
<LOCALPORT>	LOCALPORT is the pathway that the LMP control channel will use to send and receive messages.
<RE MOTENE>	Remote IP address used by the far-end LMP control channel
<RE MOTEI P>	Remote IP address with which the LMP control channel sends and receives messages
<HELLO>	The time interval in which the LMP protocol sends HELLO messages
<HELLOMIN>	Minimum hello time within which the LMP control channels can send out HELLO messages to the remote node
<HELLOMAX>	The maximum amount of time that the LMP control channel can wait between HELLO messages
<DEAD>	Time interval an LMP control channel will wait for a HELLO message from the remote side before listing the control channel as down
<DEADMIN>	The minimum amount of time that an LMP control channel can wait before listing the control channel status as down
<DEADMAX>	The maximum amount of time that the LMP control channel can wait before listing the control channel as down
<PST>	Primary state. This parameter indicates the current overall service condition of an entity.
<ul style="list-style-type: none"> <li>IS</li> <li>OOS</li> </ul>	<ul style="list-style-type: none"> <li>In service</li> <li>Out of service</li> </ul>
<SST>	Secondary state. This parameter provides additional information pertaining to PST and PSTQ.
<ul style="list-style-type: none"> <li>AINS</li> <li>DSBLD</li> <li>LPBK</li> <li>MEA</li> <li>MT</li> <li>OOG</li> <li>SWDL</li> <li>UAS</li> <li>UEQ</li> </ul>	<ul style="list-style-type: none"> <li>Automatic in-service</li> <li>Disabled</li> <li>Loopback</li> <li>Mismatch of equipment and attributes</li> <li>Maintenance mode</li> <li>Out of group</li> <li>Software downloading</li> <li>Unassigned</li> <li>Unequipped</li> </ul>

## 12.14 ENT-LMP-DLINK

(Cisco ONS 15454) The Enter Link Management Protocol Data Link (ENT-LMP-DLINK) command creates an LMP data link.

### Usage Guidelines

This command can only be used on nodes where the LMP protocol is available and enabled.

### Category

LMP

### Security

Provisioning

### Input Format

```
ENT-LMP-DLINK:[<TID>]:<SRC>:<CTAG>:::[LINKTYPE=<LINKTYPE>],TELINK=<TELINK>,
REMOTEID=<REMOTEID>;
```

### Input Example

```
ENT-LMP-DLINK:PETALUMA:FAC-14-1-1:704:::LINKTYPE=PORT,TELINK=TLNK-45,
REMOTEID=646631;
```

### Input Parameters

<SRC>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
<LINKTYPE>	The type of LMP data link
<ul style="list-style-type: none"> <li>• PORT</li> <li>• COMPONENT</li> </ul>	<ul style="list-style-type: none"> <li>Port data link</li> <li>Component data link</li> </ul>
<TELINK>	Maps LMP data links to LMP TE links
<REMOTEID>	The remote LMP data link ID

## 12.15 ENT-LMP-TLINK

(Cisco ONS 15454) The Enter Link Management Protocol Traffic Engineering Link (ENT-LMP-TLINK) command creates an LMP Traffic Engineering (TE) link.

### Usage Guidelines

This command can only be used on nodes where LMP is available and enabled.

### Category

LMP

### Security

Provisioning

**Input Format**

```
ENT-LMP-TLINK:[<TID>]:<SRC>:<CTAG>:::REMOTEID=<REMOTEID>,
REMOTETE=<REMOTETELINK>, [MUXCAP=<MUXCAP>]:[<PST>[,<SST>]];
```

**Input Example**

```
ENT-LMP-TLINK:PETALUMA:TLINK-123:704:::REMOTEID=15.15.15.115,REMOTETE=123,
MUXCAP=LAMBDA:OOS,DSBLD;
```

**Input Parameters**

<SRC>	LMP TE link AID values
<ul style="list-style-type: none"> <li>TLINK-ALL</li> <li>TLINK-{1-256}</li> </ul>	<ul style="list-style-type: none"> <li>Specifies all the TE links.</li> <li>Specifies an individual TE link.</li> </ul>
<REMOTEID>	Remote node ID associated with the LMP TE link
<REMOTETE>	Remote ID used by the far-end LMP TE Link
<MUXCAP>	The muxponder capability of the LMP TE link
<ul style="list-style-type: none"> <li>PKTSWITCH1</li> <li>PKTSWITCH2</li> <li>PKTSWITCH3</li> <li>PKTSWITCH4</li> <li>LAYER2</li> <li>TDM</li> <li>LAMBDA</li> <li>FIBER</li> </ul>	<ul style="list-style-type: none"> <li>Packet Switching 1</li> <li>Packet Switching 2</li> <li>Packet Switching 3</li> <li>Packet Switching 4</li> <li>Layer 2 switching</li> <li>Time-division multiplexing (TDM) switching</li> <li>Lambda switching</li> <li>Fiber switching</li> </ul>
<PST>	Primary state. This parameter indicates the current overall service condition of an entity.
<ul style="list-style-type: none"> <li>IS</li> <li>OOS</li> </ul>	<ul style="list-style-type: none"> <li>In service</li> <li>Out of service</li> </ul>
<SST>	Secondary state. This parameter provides additional information pertaining to PST and PSTQ.
<ul style="list-style-type: none"> <li>AINS</li> <li>DSBLD</li> <li>LPBK</li> <li>MEA</li> <li>MT</li> <li>OOG</li> <li>SWDL</li> <li>UAS</li> <li>UEQ</li> </ul>	<ul style="list-style-type: none"> <li>Automatic in-service</li> <li>Disabled</li> <li>Loopback</li> <li>Mismatch of equipment and attributes</li> <li>Maintenance mode</li> <li>Out of group</li> <li>Software downloading</li> <li>Unassigned</li> <li>Unequipped</li> </ul>

## 12.16 ENT-LNK

(ONS 15454) The Enter Optical Link (ENT-LNK) command creates an optical link between two optical connection points.

The optical links can be established between:

- Two optical transport sections (OTSs)
- Two optical multiplexing sections (OMSs) with the same band
- Two optical channels (OCHs) with the same wavelength

### Usage Guidelines

The created optical link must be between points belonging to the same ring direction. An optical link between two OMSs or between two OCHs can be HITLESS if the connection is between two points from one drop point to a consecutive add point in the logical link. When this command is used to create an optical link between two OCH ports, where the first port belongs to an OCH filter and the second port is an OCH trunk, the second port should be tuned to the same wavelength of the OCH filter if it has not been set yet.

### Category

DWDM

### Security

Provisioning

### Input Format

ENT-LNK:[<TID>]:<FROM>,<TO>:<CTAG>:::[<PST>[,<SST>]];

### Input Example

```
ENT-LNK:PENNGROVE:CHAN-6-2,CHAN-13-1-RX:114:::OOS,AINS;
ENT-LNK:PENNGROVE:CHAN-6-3-1,CHAN-13-1-RX:114:::OOS,AINS;
ENT-LNK:PENNGROVE:CHAN-6-19-1,CHAN-13-1-RX:114:::OOS,AINS;
ENT-LNK:PENNGROVE:BAND-6-1-TX,BAND-13-1-RX:114:::OOS,AINS;
ENT-LNK:PENNGROVE:LINE-6-1-TX,LINE-13-1-RX:114:::OOS,AINS;
```

### Input Parameters

<FROM>	Identifier at one end of the optical link from the “26.8 CHANNEL” section on page 26-22, “26.4 BAND” section on page 26-20, or “26.19 LINE” section on page 26-43.
<TO>	Identifier at the other end of the optical link from the “26.8 CHANNEL” section on page 26-22, “26.4 BAND” section on page 26-20, or “26.19 LINE” section on page 26-43.
<PST>	Primary state of the entity. The parameter type is PST (primary state). Indicates the current overall service condition of an entity.
• IS	In Service
• OOS	Out of Service

<SST>	Secondary state of the entity. The parameter type is SST (secondary state). Provides additional information pertaining to PST and PSTQ.
• AINS	Automatic in-service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of equipment and attributes
• MT	Maintenance mode
• OOG	Out of group
• SWDL	Software downloading
• UAS	Unassigned
• UEQ	Unequipped

## 12.17 ENT-LNKTERM

(Cisco ONS 15454) The ENT-LNKTERM command creates a provisionable patchcord (PP) termination (virtual link) on a physical interface. A user-provisioned link is needed when the data communications channel/generic communications channel (DCC/GCC) is transparently carried over several physical links, and the physical link cannot be automatically discovered by Open Shortest Path First (OSPF) due to lack of control-channel termination or non-support of SONET by the link.

### Usage Guidelines

The error message “Provisioning Rules Failed” is returned if the provisioning rules are not satisfied. The following rules must be satisfied while creating a provisionable patchcord termination on a physical interface:

- For a SONET port:
  - A Section DCC (SDCC) termination must be provisioned. If it is the protect facility in a 1+1 protection group, the corresponding working facility must have an SDCC termination provisioned.
  - If the port is part of a BLSR, the SDCC must be provisioned on all of the working ports of the BLSR.
- For a TXP/MXP trunk port, either ITU-T G.709 must be enabled or the payload type must be non-SONET/SDH.
- For a TXP/MXP client port, a card must be operating in the transparent termination mode.
- For a DWDM OCH port:
  - If the OC-N interface is part of a 1+1 protection group, a separate PP termination can be provisioned on the other (working/protect) interface also.
  - If the client interface is part of a Y-cable protection group, a separate PP termination can be provisioned on the other (working/protect) interface also.
  - If the MXP/TXP trunk interface is part of a splitter protection group, a separate PP termination can be provisioned on the other (working/protect) interface also.
  - If REMOTENODE is specified as an IP address (or a node name that can be resolved by the gateway network element [GNE]) that is different from the local node’s IP address/name, this termination is intended to be a part of an internode provisionable patchcord.

- All endpoints of the provisionable patchcord need to be provisioned correctly (on the local and/or remote node) for it to show as UP in OSPF.
  - Misconfigured or partially configured provisionable patchcords will not cause alarms or events to be generated at either end of the link.
  - No two provisionable patchcord terminations on a node can be configured to have the same remote node PP termination information (for example, the combination of values for REMOTENODE and REMOTELNKTERMAID attributes for a PP termination must be unique on a single node).
  - All provisionable patchcord terminations on one physical interface must have their remote terminations on a single remote node.
  - The command does not accept multiple and ALL style AIDs.
- The number of PP terminations is limited to 146.

**Category**

Provisionable Patchcords

**Security**

Provisioning

**Input Format**

```
ENT-LNKTERM:[<TID>]:<AID>:<CTAG>:::PORT=<PORT>,
[REMOTENODE=<REMOTENODE>],REMOTELNKTERMID=<REMOTELNKTERMID>;
```

**Input Example**

```
ENT-LNKTERM::LNKTERM-1:CTAG:::PORT=FAC-5-1,REMOTENODE=172.20.208.225,
REMOTELNKTERMID=20;
```

**Input Parameters**

<b>&lt;AID&gt;</b>	Access identifier from the <a href="#">“26.21 LNKTERM”</a> section on page 26-50. Indicates a link (provisionable patchcord) termination on the local node.
<b>&lt;PORT&gt;</b>	The local port corresponding to this provisionable patchcord termination from the <a href="#">“26.8 CHANNEL”</a> section on page 26-22.
<b>&lt;REMOTENODE&gt;</b>	The node where the other end of the provisionable patchcord resides. This can be an IP address or a valid TID. Defaults to the IP address of the local node/existing value. REMOTENODE is a string.
<b>&lt;REMOTELNKTERMID&gt;</b>	The corresponding provisionable patchcord termination on the remote node (as specified by the REMOTENODE parameter). Integer value within the range of 1 to 65535. Defaults to existing value.

## 12.18 ENT-MA-CFM

(Cisco ONS 15454) The Enter Maintenance Association Connectivity Fault Management (ENT-MA-CFM) command adds the maintenance association on the card.

**Usage Guidelines**

- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.
- The ALL AID is invalid for this command.

**Category**

Equipment

**Security**

Provision

**Input Format**

ENT-MA-CFM:[<TID>]:<AID>:<CTAG>::MANAME=<MANAME>,SVLANID=<SVLANID>,[<CCENABLE=<CCENABLE>];

**Input Example**

ENT-MA-CFM:454-156:SLOT-1:1::MANAME=MANAME,SVLANID=4,CCENABLE=Y;

**Input Parameters**

<AID>	Access identifier from the <a href="#">“26.15 EQPT”</a> section on page 26-37.
<MANAME>	Maintenance Association Name. It is a string. The MA name length should not exceed more than 43 characters.
<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<CCENABLE>	Enable or disable Continuous Check messaging
• Y	Enable
• N	Disable

## 12.19 ENT-MD-CFM

(Cisco ONS 15454) The Enter Maintenance Domain Connectivity Fault Management (ENT-MD-CFM) command adds the maintenance domain on the card.

**Usage Guidelines**

- The “ALL” AID is invalid for this command.
- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.

**Category**

Equipment

<b>Security</b>	Provisioning						
<b>Input Format</b>	ENT-MD-CFM:[<TID>]:<AID>:<CTAG>::MDNAME=<MANAME>,LEVEL=<LEVEL>;						
<b>Input Example</b>	ENT-MD-CFM:454-156:SLOT-1:1::MDNAME=MDNAME,LEVEL=5;						
<b>Input Parameters</b>	<table border="1"> <tr> <td>&lt;AID&gt;</td> <td>Access identifier from the <a href="#">“26.15 EQPT” section on page 26-37</a>.</td> </tr> <tr> <td>&lt;MDNAME&gt;</td> <td>Maintenance Domain Name. It is a string. The MD name length should not exceed more than 43 characters.</td> </tr> <tr> <td>&lt;LEVEL&gt;</td> <td>This indicates the level of the maintenance domain. The value ranges from 0 to 7.</td> </tr> </table>	<AID>	Access identifier from the <a href="#">“26.15 EQPT” section on page 26-37</a> .	<MDNAME>	Maintenance Domain Name. It is a string. The MD name length should not exceed more than 43 characters.	<LEVEL>	This indicates the level of the maintenance domain. The value ranges from 0 to 7.
<AID>	Access identifier from the <a href="#">“26.15 EQPT” section on page 26-37</a> .						
<MDNAME>	Maintenance Domain Name. It is a string. The MD name length should not exceed more than 43 characters.						
<LEVEL>	This indicates the level of the maintenance domain. The value ranges from 0 to 7.						

## 12.20 ENT-MDMAMAP-CFM

(Cisco ONS 15454) The Enter Maintenance Domain and Maintenance Association mapping Connectivity Fault Management (ENT-MDMAMAP-CFM) command creates the maintenance domain and maintenance association mapping.

- |                         |   |
|-------------------------|---|
| <b>Usage Guidelines</b> | <ul style="list-style-type: none"> <li>This command is applicable only to GE_XP and 10GE_XP cards.</li> <li>The card should be in Layer2 over DMDM mode.</li> </ul> |
|-------------------------|---|

<b>Category</b>	Equipment				
<b>Security</b>	Configuration				
<b>Input Format</b>	ENT-MDMAMAP-CFM:[<TID>]:<AID>:<CTAG>::MDNAME=<MANAME>,SVLANID=<SVLAN ID>,MANAME=<MANAME>;				
<b>Input Example</b>	ENT-MDMAMAP-CFM::SLOT-17:1::MDNAME=CISCO,SVLANID=6,MANAME=MA_1;				
<b>Input Parameters</b>	<table border="1"> <tr> <td>&lt;AID&gt;</td> <td>Access identifier from the <a href="#">“26.15 EQPT” section on page 26-37</a>.</td> </tr> <tr> <td>&lt;MDNAME&gt;</td> <td>Maintenance Domain Name. It is a string. The MD name length should not exceed more than 43 characters.</td> </tr> </table>	<AID>	Access identifier from the <a href="#">“26.15 EQPT” section on page 26-37</a> .	<MDNAME>	Maintenance Domain Name. It is a string. The MD name length should not exceed more than 43 characters.
<AID>	Access identifier from the <a href="#">“26.15 EQPT” section on page 26-37</a> .				
<MDNAME>	Maintenance Domain Name. It is a string. The MD name length should not exceed more than 43 characters.				

---

<MANAME>	Maintenance Association Name. It is a string. The MA name length should not exceed more than 43 characters.
<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.

---

## 12.21 ENT-MEP-CFM

(Cisco ONS 15454) The Enter Maintenance End Point Connectivity Fault Management (ENT-MEP-CFM) command creates the maintenance end points on the port.

### Usage Guidelines

- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.

### Category

Ports

### Security

Provisioning

### Input Format

ENT-MEP-CFM:[<TID>]:<AID>:<CTAG>:::SVLANID=<SVLANID>,MDNAME=<MDNAME>,MPID=<MPID>;

### Input Example

ENT-MEP-CFM::ETH-12-3-1:1:::SVLANID=100,MDNAME=MD2,MPID=20;

### Input Parameters

<AID>	Access identifier from the <a href="#">“26.16 ETH” section on page 26-40</a> .
<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<MDNAME>	Maintenance Domain Name. It is a string. The MD name length should not exceed more than 43 characters.
<MPID>	Maintenance Point Identifier. It is an integer.
<LEVEL>	This indicates the level of the maintenance domain. The value ranges from 0 to 7.

## 12.22 ENT-MIP-CFM

(Cisco ONS 15454) The Enter Maintenance Intermediate Point Connectivity Fault Management (ENT-MIP-CFM) command creates the maintenance intermediate points on the port.

### Usage Guidelines

- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.

### Category

Ports

---

**Security** Provisioning

---

**Input Format** ENT-MIP-CFM:[<TID>]:<AID>:<CTAG>::VLANID=<VLANID>,LEVEL=<LEVEL>;

---

**Input Example** ENT-MIP-CFM::ETH-1-1-1:1::VLANID=2,LEVEL=5;

---

<b>Input Parameters</b>	<AID>	Access identifier from the <a href="#">“26.16 ETH” section on page 26-40</a> .
	<VLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
	<LEVEL>	This indicates the level of the maintenance domain. The value ranges from 0 to 7.

---

## 12.23 ENT-NNI-ETH

(Cisco ONS 15454) The Enter Network-to-Network Interface Ethernet (ENT-NNI-ETH) command adds a new network-to-network interface service provider VLAN ID to the NNI interface of an L2 Ethernet port.

---

### Usage Guidelines

- The default values for all optional parameters are NE default values, but these values might not be the current value for a parameter. Use a retrieve command to obtain the current value.
- If the AID is invalid, an IIAC error message is returned.
- The ALL AID is invalid for this command.
- The L2 Ethernet port must be present when this command is executed.
- The command will be denied if the service provider VLAN ID is present.

---

**Category** Ethernet

---

**Security** Provisioning

---

**Input Format** ENT-NNI-ETH:[<TID>]:<AID>:<CTAG>::<SVLANID>[::];

---

**Input Example** ENT-NNI-ETH:PETALUMA:ETH-1-1-1:1::1010;

<b>Input Parameters</b>	<AID>	Ethernet AIDs are used to access the L2 Ethernet ports. Access identifier from the “ <a href="#">26.16 ETH</a> ” section on <a href="#">page 26-40</a> .
	<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.

## 12.24 ENT-NNI-CHGRP

(Cisco ONS 15454) The Enter Channel Group Network-to-Network Interface (ENT-NNI-CHGRP) command adds the NNI S-VLAN ID for the NNI of a channel group.

### Usage Guidelines

- The default values for all optional parameters are NE default values, but these values might not be the current value for a parameter. Use the RTRV-ETH command to obtain the current value.
- If the AID is invalid, an IIAC (Invalid AID) error message is returned.
- The ALL AID is invalid for this command.

### Category

Channel group

### Security

Provisioning

### Input Format

ENT-NNI-CHGRP:[<TID>]:<AID>:<CTAG>::<SVLANID>[::];

### Input Example

ENT-NNI-CHGRP:CISCO:CHGRP-1-1:1::1010;

<b>Input Parameters</b>	<AID>	Access identifier from the “ <a href="#">26.9 CHGRP</a> ” section on <a href="#">page 26-24</a> .
	<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.

## 12.25 ENT-OCHCC

(Cisco ONS 15454) The Enter Optical Channel Client Connection (ENT-OCHCC) command allocates an OCH client connection. An OCH client connection is the portion of the circuit that connects the end client ports using trail ports to an OCH network connection circuit. This allocates the portion of the circuit between the OCH filter port to the TXP/MXP or ITU-T client port.

### Usage Guidelines

- The client port FAC AID must be specified in order to allocate a client channel inside the node.
- The default values for all optional parameters are NE default values. These values might not be the current value for a parameter. Use a retrieve command to obtain the current value.

### Category

DWDM

### Security

Provisioning

### Input Format

```
ENT-OCHCC:[<TID>]:<AID>:<CTAG>[:::CKTID=<CKTID>],
[CMDMDE=<CMDMDE>]:[<PST>][,<SST>];
```

### Input Example

```
ENT-OCHCC:VA454-22:FAC-2-1-1:116:::CKTID="OCHCC-1",CMDMDE=FRCD:OOS,DSBLD;
```

### Input Parameters

<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
<CKTID>	Cross-connect ID. The default is Blank or None. It is a string of ASCII characters. The maximum length is 48. If CKTID is empty or null the CKTID field will not appear.
<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
<ul style="list-style-type: none"> <li>• FRCD</li> </ul>	Force the system to override a state in which the command would normally be denied.
<ul style="list-style-type: none"> <li>• NORM</li> </ul>	Execute the command normally. Do not override any conditions that may make the command fail.
<PST>	Primary state. The parameter type is PST, which indicates the current overall service condition of an entity. The default is IS.
<ul style="list-style-type: none"> <li>• IS</li> </ul>	In service
<ul style="list-style-type: none"> <li>• OOS</li> </ul>	Out of service

<SST>	Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ. The default is AINS.
• AINS	Automatic in-service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of equipment and attributes
• MT	Maintenance mode
• OOG	Out of group
• SWDL	Software downloading
• UAS	Unassigned
• UEQ	Unequipped

## 12.26 ENT-OCHNC

(Cisco ONS 15454) The Enter Optical Channel Network Connection (ENT-OCHNC) command allocates an OCH network connection.

### Usage Guidelines

- Two CHANWL end points must be specified in order to allocate a wavelength channel inside the node. According to the CHANWL specified, the channel allocated can be a passthrough.
- The default values for all optional parameters are NE default values. These values might not be the current value for a parameter. Use a retrieve command to obtain the current value.

### Category

DWDM

### Security

Provisioning

### Input Format

```
ENT-OCHNC:[<TID>]:<SRC>,<DST>:<CTAG>::[<WCT>]:[CKTID=<CKTID>],[CMDMDE=<CMDMDE>],[WLOPWR=<WLOPWR>],[VOAATTN=<VOAATTN>]:[<PST>[,<SST>]];
```

### Input Example

```
ENT-OCHNC:VA454-22:LINEWL-1-3-TX-1530.33,CHAN-4-1-RX:116::1WAY:
CKTID=CIRCUIT,CMDMDE=FRCD:OOS,DSBLD;
```

```
ENT-OCHNC:VA454-22:LINEWL-1-3-TX-1530.33&CHAN-4-1-TX,
CHAN-4-1-RX&LINEWL-1-3-RX-1530.33:116::2WAYDCN:
CKTID="DCN CIRCUIT",CMDMDE=FRCD:OOS,DSBLD;
```

```
ENT-OCHNC:VA454-22:LINEWL-1-9-TX-1530.33,LINEWL-1-11-RX-1530.33:116::DIAG:
WLOPWR=1.0,VOAATTN=1.0;
```

**Input Parameters**

<SRC>	Source access identifier from the “26.8 CHANNEL” section on page 26-22. In 2-way wavelength connection sources both directions need to be indicated.
<DST>	Destination access identifier from the “26.20 LINEWL” section on page 26-46. In 2-way wavelength connection sources both directions need to be indicated.
<WCT>	Wavelength connection type. The parameter type is WCT. The default is 1WAY.
• 1WAY	A unidirectional wavelength connection for one specified ring direction.
• 2WAY	A bidirectional wavelength connection for both the ring directions.
• DIAG	A unidirectional maintenance wavelength connection inside 40-WXC-C cards.
• 2WAYDCN	A bidirectional wavelength connection for both the ring directions that is also used to carry the data communication channels.
<CKTID>	Cross-connect ID. The default is Blank or None. It is a string of ASCII characters. The maximum length is 48. If CKTID is empty or null the CKTID field will not appear.
<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
• FRCD	Force the system to override a state in which the command would normally be denied.
• NORM	Execute the command normally. Do not override any conditions that may make the command fail.
<WLOPWR>	The value of calibrated output power that the VOA is going to set as a result of its attenuation. WLOPWR is a float.
<VOAATTN>	The value of calibrated attenuation for the VOA expressed in dBm. The range is 0.0 to +30.0. VOAATTN is a float.
<PST>	Primary state. The parameter type is PST, which indicates the current overall service condition of an entity. The default is IS.
• IS	In service
• OOS	Out of service
<SST>	Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ. The default is AINS.
• AINS	Automatic in-service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of equipment and attributes
• MT	Maintenance mode
• OOG	Out of group
• SWDL	Software downloading
• UAS	Unassigned
• UEQ	Unequipped

## 12.27 ENT-QNQ-CHGRP

(Cisco ONS 15454) The Enter Channel Group QinQ (ENT-QNQ-CHGRP) command adds the IEEE 802.1Q tunneling (QinQ) relationship between the CE-VLAN and the S-VLAN for Gigabit Ethernet uniprot provisioning associated to a channel group.

### Usage Guidelines

- The default values for all optional parameters are NE default values, but these values might not be the current value for a parameter. Use the RTRV-ETH command to obtain the current value.
- If the AID is invalid, an IIAC (Invalid AID) error message is returned.
- The ALL AID is invalid for this command.

### Category

Channel Group

### Security

Provisioning

### Input Format

```
ENT-QNQ-CHGRP:[<TID>]:<AID>:<CTAG>::<FIRST_CE_VLAN_ID>,<LAST_CE_VLAN_ID>,<S_VLAN_ID>:[RULE=<RULE>],[INTERNALVLAN=<INTERNAL_VLAN_ID>],[INGRESSCOS=<INGRESSCOS>][:];
```

### Input Example

```
ENT-QNQ-CHGRP:CISCO:CHGRP-1-1:1::10,11,100:RULE=ADD;
```

### Input Parameters

<AID>	Access identifier from the <a href="#">“26.9 CHGRP” section on page 26-24</a> .
<FIRSTCEVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<LASTCEVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<RULE>	Used to represent the rules allowed for the VLAN tagging operations. The default value is ADD.
• ADD	The S-VLAN tag is added to the CE-VLAN tag.
• XLTE	The S-VLAN tag replaces the CE-VLAN tag (single Q).

• XLTE-ADD	XLTE and ADD rule applied together. This rule request to supply an internal S-VLAN. First the Internal VLAN substitutes the Customer VLAN, then Service Provider VLAN TAG (S-VLAN) is added
• DOUBLE-ADD	ADD rule applied two times. This rule request to supply an internal S-VLAN. First the Internal VLAN is added, then Service Provider VLAN TAG (S-VLAN) is added to have a double tag
<INTERNAL_VLAN_ID>	Internal VLAN ID.
<INGRESSCOS>	Identifies the COS value set in the S-VLAN tag.
• 0 to 7	Set a Cos value
• DSCP	The COS is set according to DSCP to COS mapping table.
• TRUST	Use the Customer COS
• VLAN	The COS provisioned on CVLAN basis (QinQ selective mode)

## 12.28 ENT-QNQ-ETH

(Cisco ONS 15454) The Enter QinQ Ethernet (ENT-QNQ-ETH) command enters a new IEEE 802.1Q tunneling (QinQ) relationship between the CE-VLAN and S-VLAN for Gigabit Ethernet uniport provisioning associated to an L2 Ethernet port.

### Usage Guidelines

- The default values for all optional parameters are NE default values, but these values may not be the current value for a parameter. Use a retrieve command to obtain the current value.
- If the AID is invalid, an IIAC error message is returned.
- The ALL AID is invalid for this command.
- The L2 Ethernet port must be defined before executing this command or the command will be denied.
- The command will be denied if the CE-VLAN-ID and S-VLAN-ID relationship is defined before the L2 Ethernet port is defined.

### Category

Ethernet

### Security

Provisioning

### Input Format

```
ENT-QNQ-ETH:[<TID>]:<AID>:<CTAG>::<FIRSTCEVLANID>,<LASTCEVLANID>,<S_VLAN_ID>[:RULE=<RULE>],[INTERNALVLAN=<INTERNAL_VLAN_ID>],[INGRESSCOS=<INGRESSCOS>][:];
```

### Input Example

```
ENT-QNQ-ETH:PETALUMA:ETH-1-1-1:1::10,11,100:RULE=ADD;
```

**Input Parameters**

<AID>	Ethernet AIDs are used to access the L2 Ethernet ports. Access identifier from the “26.16 ETH” section on page 26-40.
<FIRSTCEVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<LASTCEVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<RULE>	Used to represent the rules allowed for the VLAN tagging operations. The default value is ADD.
<ul style="list-style-type: none"> <li>• ADD</li> </ul>	The S-VLAN tag is added to the CE-VLAN tag.
<ul style="list-style-type: none"> <li>• XLTE</li> </ul>	The S-VLAN tag replaces the CE-VLAN tag (single Q).
<ul style="list-style-type: none"> <li>• XLTE-ADD</li> </ul>	XLTE and ADD rule applied together. This rule request to supply an internal S-VLAN. First the Internal VLAN substitutes the Customer VLAN, then Service Provider VLAN TAG (S-VLAN) is added
<ul style="list-style-type: none"> <li>• DOUBLE-ADD</li> </ul>	ADD rule applied two times. This rule request to supply an internal S-VLAN. First the Internal VLAN is added, then Service Provider VLAN TAG (S-VLAN) is added to have a double tag
<INTERNAL_VLAN_ID>	Internal VLAN ID
<INGRESSCOS>	Identifies the COS value set in the S-VLAN tag.
<ul style="list-style-type: none"> <li>• 0 to 7</li> </ul>	Set a Cos value
<ul style="list-style-type: none"> <li>• TRUST</li> </ul>	Use the Customer COS
<ul style="list-style-type: none"> <li>• VLAN</li> </ul>	The COS provisioned on CVLAN basis (QinQ selective mode)

## 12.29 ENT-REP

(Cisco ONS 15454) The Enter Resilient Ethernet Protocol (ENT-REP) command associates the Resilient Ethernet Protocol (REP) configuration on the ethernet port of GE\_XP or 10GE\_XP card.

**Usage Guidelines**

- This command is applicable only if the card is in ETH-L2 card mode.
- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The PORTROLE parameter can be PRIMARY, NO\_NEIGHBOR, or NO\_NEIGHBOR\_PRIMARY only if the port is an edge port.
- If the Edge is not Enabled, the PORTROLE parameter can only be REGULAR.

- If only the segment ID is specified, by default the edge is disabled and PORTROLE is REGULAR; PREFERRED is disabled.

**Category**

Ethernet

**Security**

Provisioning

**Input Format**

ENT-REP:[TID>]:<AID>:<CTAG>:::<SEGMENTID=<SEGMENTID>,[EDGE=<EDGE>],[PORTROLE=<PORTROLE>],[PREFERRED=<PREFERRED>];

**Input Example**

ENT-REP::ETH-12-1-1:1:::SEGMENTID=1,EDGE=Y,PORTROLE=PRIMARY,PREFERRED=N;

**Input Parameters**

<AID>	Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the “26.16 ETH” section on page 26-40.
<SEGMENTID>	Indicates the segment ID for REP segment. The valid range is from 0 to 1024.
<EDGE>	Configures the port as an edge port.
• Y	To configure the port as an edge port.
• N	Not to configure the port as an edge port.
<PORTROLE>	The parameter type is REP_PORT_ROLE, which indicates the port’s role in a REP Segment for the ethernet ports.
• PRIMARY	Indicates that the port is a primary port.
• NO_NEIGHB OR	Indicates that the port has no neighbor port in the segment.
• NO_NEIGHB OR_PRIMA RY	Indicates that the port is a primary port and has no neighbor port in the segment.
• REGULAR	Indicates that the port is a regular port.
• None	Indicates that the port is an edge port.
<PREFERRED>	Indicates that the port is the preferred alternate port. Or the preferred port for VLAN load balancing.
• Y	Yes
• N	No

## 12.30 ENT-RMONTH-<MOD2\_RMON>

(Cisco ONS 15454) The Enter Remote Monitoring Threshold for 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 4FGC, 4GFICON, 8GFC, CHGRP, FSTE, G1000, GFP, GIGE, ETH, GFPOS, GIGE, HDLC, ISCCOMPAT, POS (ENT-RMONTH-<MOD2\_RMON>) command creates an entry in the remote monitoring (RMON) alarm table for the threshold of data statistics (for example, GIGE or FC) managed by the RMON engine. After creating the RMON threshold (RMONTH), a

threshold crossing alert (TCA) event will be generated and reported to the TL1 session when the threshold is crossed. More than one threshold can be created with different parameters for each data statistic type.

**Usage Guidelines**

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

**Category**

Performance

**Security**

Provisioning

**Input Format**

```
ENT-RMONTH-<MOD2_RMON>:[<TID>]:<SRC>:<CTAG>::<MONTYPE>,,,
<INTVL>:RISE=<RISE>,FALL=<FALL>,[SAMPLE=<SAMPLE>],[STARTUP=<STARTUP>][:];
```

**Input Example**

```
ENT-RMONTH-GIGE:CISCO:FAC-2-1:1234::ETHERSTATSOCTETS,,,100:RISE=1000,
FALL=100,SAMPLE=DELTA,STARTUP=RISING;
```

**Input Parameters**

<SRC>	Source access identifier from the <a href="#">“26.17 FACILITY” section on page 26-40</a> . AID for the facility that manages the data statistics.
<MONTYPE>	Monitored type. Type of RMON data statistics. The parameter type is ALL_MONTYPE (monitoring type list).
• AISSP	Alarm Indication Signal Seconds—Path
• BBE-PM	OTN—Background Block Errors—Path Monitor Point
• BBE-SM	OTN—Background Block Errors—Section Monitor Point
• BBER-PM	OTN—Background Block Error Ratio—Path Monitor Point expressed as one tenth of a percentage
• BBER-SM	OTN—Background Block Error Ratio—Section Monitor Point expressed as one tenth of a percentage
• BIEC	FEC—Bit Errors Corrected
• CGV	8B10B—Code Group Violations
• CSSP	Controlled Slip Seconds—Path (DSXM-12 FDL/T1.403 PM count)
• CVCPP	Coding Violations—CP-Bit Path
• CVL	Coding Violations—Line
• CVP	Coding Violations—Path
• CVS	Coding Violations—Section
• CVV	Coding Violations—Section
• DCG	8B10B—Data Code Groups
• ESAP	Errored Second Type A-Path (DS3XM-12 DS1 PM count)
• ESBP	Errored Second Type B-Path (DS3XM-12 DS1 PM count)
• ESCPP	Errored Seconds—CP—Bit Path

• ESL	Errored Seconds—Line
• ESNPFE	Errored Second—Network Path (DS3XM-12 DS1 PM count)
• ESP	Errored Seconds—Path
• ES-PM	OTN—Errored Seconds—Path Monitor Point
• ES-SM	OTN—Errored Seconds—Section Monitor Point
• ESR	Errored Second—Ratio
• ESR-PM	Errored Seconds Ratio—Path monitor Point expressed as one tenth of a percentage
• ESR-SM	Errored Seconds Ratio—Section monitor Point expressed as one tenth of a percentage
• ESS	Errored Seconds—Section
• ESV	Errored Seconds—VT Path
• etherStatsBroadcastPkts	The total number of good packets received that were directed to a multicast address
• etherStatsCollisions	Number of transmit packets that are collisions
• etherStatsCRCAAlignErrors	The total number of packets received that have a length (excluding framing bits, but including frame check sequence [FCS] octets) of between 64 and 1518 octets
• etherStatsDropEvents	Number of received frames dropped at the port level
• etherStatsFragments	The total number of packets received that were less than 64 octets
• etherStatsJabbers	The total number of packets received that are longer than 1518 octets
• etherStatsOctets	The total number of octets of data
• etherStatsOversizePkts	The total number of packets received that are longer than 1518 octets
• etherStatsPkts	The total number of packets (including bad packets, broadcast packets, and multicast packets) received
• etherStatsUndersizePkts	The total number of packets received that are less than 64 octets
• FCP	Failure Count—Line
• FC-PM	OTN—Failure Count—Path Monitor Point
• FC-SM	OTN—Failure Count—Section Monitor Point
• HP-AR	Availability Ratio
• HP-BBE	High-Order Path Background Block Error
• HP-BBER	High-Order Path Background Block Error Ratio
• HP-EB	High-Order Path Errored Block
• HP-ES	High-Order Path Errored Second
• HP-ESA	High-Order Path Errored Seconds - A
• HP-ESB	High-Order Path Errored Seconds - B
• HP-ESR	High-Order Path Errored Second Ratio
• HP-FC	High-Order Path Failure Count
• HP-NPJC-PDET	High-Order Path Negative Pointer Justification Count - Path Detected
• HP-NPJC-PGEN	High-Order Path Negative Pointer Justification Count - Path Generated

• HP-OI	Outage Intensity
• HP-PJCDIFF	High-Order Path Pointer Justification Count Difference
• HP-PJCS-PDET	High-Order Path Pointer Justification Count Seconds - Path Detected
• HP-PJCS-PGEN	High-Order Path Pointer Justification Count Seconds - Path Generated
• HP-PPJC-PDET	High-Order Path Positive Pointer Justification Count - Path Detected
• HP-PPJC-PGEN	High-Order Path Positive Pointer Justification Count - Path Generated
• HP-SEPI	The number of Severely Errored Period Intensity events in available time
• HP-SES	High-Order Path Severely Errored Seconds
• HP-SESR	High-Order Path Severely Errored Second Ratio
• HP-UAS	High-Order Path Unavailable Seconds
• ifInBroadcastPkts	Number of broadcast packets received since the last counter reset
• ifInDiscards	The number of inbound packets
• ifInErrorBytePktss	Receive Error Byte
• ifInErrors	The number of inbound packets (or transmission units) that contained errors
• ifInFramingErrorPkts	Receive Framing Error
• ifInJunkInterPkts	Receive Interpacket Junk
• ifInMulticastPkts	Number of multicast packets received since the last counter reset
• ifInOctets	Number of bytes transmitted since the last counter reset
• ifInUcastPkts	Number of unicast packets received since the last counter reset
• ifOutBroadcastPkts	Number of broadcast packets transmitted
• ifOutDiscards	The number of outbound packets
• ifOutErrors	The number of outbound packets (or transmission units) that could not be transmitted because of errors
• ifOutMulticastPkts	Number of multicast packets transmitted
• ifOutPayloadCrcErrors	Received payload cyclic redundancy check (CRC) errors
• ifOutUcastPkts	Number of unicast packets transmitted
• IOS	8B10B- Idle Ordered Sets
• IPC	Invalid Packet Count
• LBCL-AVG	Average Laser Bias current in microA
• LBCL-MAX	Maximum Laser Bias current in microA
• LBCL-MIN	Minimum Laser Bias current in microA
• LBCN	Normalized Laser Bias Current for OC3-8
• LBCN-HWT	Laser Bias Current
• LBCN-LWT	Laser Bias Current
• LOSSL	Loss of Signal Seconds—Line
• LP-BBE	Low-Order Path Background Block Error
• LP-BBER	Low-Order Path Background Block Error Ratio

• LP-EB	Low-Order Path Errored Block
• LP-ES	Low-Order Path Errored Second
• LP-ESA	Low-Order Path Errored Seconds-A
• LP-ESB	Low-Order Path Errored Seconds-B
• LP-ESR	Low-Order Path Errored Second Ratio
• LP-FC	Low-Order Path Failure Count
• LP-NPJC-DET	Low-Order Negative Pointer Justification Count, Detected
• LP-NPJC-GEN	Low Order Negative Pointer Justification Count, Generated
• LP-PPJC-DET	Low-Order Positive Pointer Justification Count, Detected
• LP-PPJC-GEN	Low-Order Positive Pointer Justification Count, Generated
• LP-SEP	Low-Order Path Severely Errored Period
• LP-SEPI	Low-Order Path Severely Errored Period Intensity
• LP-SES	Low-Order Path Severely Errored
• LP-UAS	Low-Order Path Unavailable Seconds
• mediaIndStatsRxFramesBadCrc	rx frames with bad crc
• mediaIndStatsRxLcvErrors	L1 line code violations for lower rate FC. This equates to invalid 8b10b ordered sets.
• mediaIndStatsTxFramesBadCrc	tx frames with bad crc
• mediaIndStatsTxLcvErrors	L1 line code violations for lower rate FC. This equates to invalid 8b10b ordered sets.
• MS-PSC	Protection switch count
• MS-PSD	Protection switch duration
• NIOS	8B10B—Non Idle Ordered Sets
• NPJC-PDET	Negative Pointer Justification Count- Path Detected
• NPJC-PGEN	Negative Pointer Justification Count- Path Generated
• OPR-AVG	Average Receive Power in tenths of a microW
• OPR-MAX	Maximum Receive Power in tenths of a microW
• OPR-MIN	Minimum Receive Power in tenths of a microW
• OPRN	Normalized Optical Receive Power for OC3-8 card
• OPRN-MAX	Maximum value for OPRN
• OPRN-MIN	Minimum value for OPRN
• OPT-AVG	Average Transmit Power in tenths of a microW
• OPT-MAX	Maximum Transmit Power in tenths of a microW
• OPT-MIN	Minimum Transmit Power in tenths of a microW
• OPTN	Normalized value for Optical Power Transmitted for the OC3-8 card
• OPTN-MAX	Maximum value for OPTN
• OPTN-MIN	Minimum value for OPTN
• OPWR-AVG	Optical Power—Average Interval Value in tenths of a dBm
• OPWR-MAX	Optical Power—Maximum Interval Value in tenths of a dBm
• OPWR-MIN	Optical Power—Minimum Interval Value in tenths of a dBm

• PPJC-PDET	Positive Pointer Justification Count - Path Detected
• PPJC-PGEN	Positive Pointer Justification Count - Path Generated
• PSC	Protection Switching Count
• PSC-R	Protection Switching Count—Ring
• PSC-S	Protection Switching Count—Span
• PSC-W	Protection Switching Count—Working
• PSD	Protection Switching Duration
• PSD-R	Protection Switching Duration—Ring
• PSD-S	Protection Switching Duration—Span
• PSD-W	Protection Switching Duration—Working
• SASCPP	Severely Errored Framing/AIS Second—CP-Bit Path
• SASP	Severely Errored Framing/AIS Seconds Path
• SEFS	Severely Errored Framing Seconds
• SEFSP	Severely Errored Framing Seconds—Path (DS3XM-12 DS1 PM count)
• SESCOPP	Severely Errored Second—CP-Bit Path
• SESL	Severely Errored Second—Line
• SESNPFE	Severely Errored Second—Network Path (DS3XM-12 DS1 PM count)
• SESP	Severely Errored Second—Path
• SES-PM	OTN—Severely Errored Second—Path
• SESR-PM	OTN—Severely Errored Second Ratio—Path Monitor Point expressed as one tenth of a percentage
• SESR-SM	OTN—Severely Errored Second Ratio—Section Monitor Point expressed as one tenth of a percentage
• SESS	Severely Errored Second—Section
• SES-SM	OTN—Severely Errored Second—Section Monitor Point
• SESV	Severely Errored Second—VT Path
• UASCPP	Unavailable Second—CP-Bit Path
• UASL	Unavailable Second—Line
• UASNPFE	Unavailable Second—Network Path (DS3XM-12 DS1 PM count)
• UASP	Unavailable Second—Path
• UAS-PM	OTN—Unavailable Second—Path Monitor Point
• UAS-SM	OTN—Unavailable Second—Section Monitor Point
• UASV	Unavailable Second—VT Path
• UNC-WORDS	FEC—Uncorrectable Words
• VPC	Valid Packet Count
<INTVL>	The interval in seconds over which the data is sampled and compared with the rising and falling threshold. A valid value is any integer larger than or equal to 10 (seconds).
<RISE>	The rising threshold for the sampled statistic. A valid value is any integer.

<FALL>	The falling threshold. A valid value is any integer smaller than the rising threshold.
<SAMPLE>	The method of calculating the threshold comparison value. The parameter type is SAMPLE_TYPE, which describes how the data will be calculated during the sampling period.
<ul style="list-style-type: none"> <li>ABSOLUTE</li> <li>DELTA</li> </ul>	Comparing directly
<STARTUP>	Dictates whether an event will generate if the first valid sample is greater than or equal to the rising threshold, less than or equal to the falling threshold, or both. The parameter type is STARTUP_TYPE, which indicates whether an event will be generated when the first valid sample is crossing the rising or falling threshold.
<ul style="list-style-type: none"> <li>FALLING</li> <li>RISING</li> <li>RISING-OR-FALLING</li> </ul>	Generates the event when the sample is smaller than or equal to the falling threshold.
	Generates the event when the sample is greater than or equal to the rising threshold.
	Generates the event when the sample is crossing the rising threshold or the falling threshold.

## 12.31 ENT-ROLL-<MOD\_PATH>

(Cisco ONS 15454) The Enter Roll for STS1, STS12C, STS192C, STS24C, STS3C, STS48C, STS96C, STS6C, STS9C, VC12, VC3, VT1, or VT2 (ENT-ROLL-<MOD\_PATH>) command enters information about rolling of traffic from one end point to another without interrupting service. This command can be used to roll single paths (STS or VT).



### Note

STS18C and STS36C are not supported in this release.

### Usage Guidelines

None

### Category

Bridge and Roll

### Security

Provisioning

### Input Format

ENT-ROLL-<MOD\_PATH>:[<TID>]:<FROM>,<TO>:<CTAG>:::RFROM=<RFROM>,  
RTO=<RTO>,RMODE=<RMODE>,[CMDMDE=<CMDMDE>];

### Input Example

ENT-ROLL-STS1:CISCO:STS-1-1-1,STS-2-1-1:1:::RFROM=STS-2-1-1,RTO=STS-3-1-1,  
RMODE=MAN,FORCE=Y;

<b>Input Parameters</b>	<FROM>	Source access identifier from the “26.27 STS” section on page 26-52, which is one of the termination points (legs) of the existing cross-connection. If the existing cross-connection is one-way, then this termination point (leg) should be the FROM-AID termination point. Otherwise, FROM is not significant. FROM and TO should be entered as they are entered in the ENT-CRS command. You can issue the RTRV-CRS command and use the response for FROM and TO parameters.
	<TO>	Destination AID from the “26.27 STS” section on page 26-52 which is one of the termination points (legs) of the existing cross-connection. If the existing cross-connection is one-way, then this termination point (leg) should be the TO-AID termination point. Otherwise, the TO is not significant. FROM and TO should be entered as they are entered in the ENT-CRS command. You can issue the RTRV-CRS command and use the response for FROM and TO parameters.
	<RFROM>	The termination point of the existing cross-connect that is to be rolled. The termination point is an AID from the “26.27 STS” section on page 26-52.
	<RTO>	The termination point that will become a leg of the new cross-connection. the termination point is an AID from the “26.27 STS” section on page 26-52.
	<RMODE>	Indicates the mode of the rolling operation. The parameter type is RMODE (roll mode).
	• AUTO	Automatic. When a valid signal is available, the roll that has the AUTO mode will automatically delete the previous end-point.
	• MAN	Manual. Enter the corresponding delete roll/bulkroll command to delete the previous end-point.
	<FORCE>	Forces a valid signal on the path. FORCE can only go from Y to N. The parameter type is ON_OFF (disable or enable an attribute).
	• N	Disable an attribute.
	• Y	Enable an attribute.

## 12.32 ENT-ROUTE

(Cisco ONS 15454) The Enter Route (ENT-ROUTE) command creates static routes.

**Usage Guidelines** There is no Domain Name Server (DNS) service available on the node. Only numeric IP addresses will be accepted.

**Category** System

**Security** Provisioning

**Input Format** ENT-ROUTE:[<TID>]::<CTAG>::<DESTIP>,<IPMASK>,<NXTHOP>,<COST>;

**Input Example** ENT-ROUTE:CISCO::123::10.64.72.57,255.255.255.0,10.64.10.12,200;

<b>Input Parameters</b>	<DESTIP>	Destination tip. DESTIP is a string.
	<IPMASK>	IP mask. IPMASK is a string.
	<NXTHOP>	Next hop. NXTHOP is a string.
	<COST>	Unsigned integer. The valid range is from 1 to 32,797.

## 12.33 ENT-ROUTE-GRE

(Cisco ONS 15454) The Enter Route Generic Routing Encapsulation (ENT-ROUTE-GRE) command creates a GRE tunnel. This can be used to transport IP over Open Systems Interconnect (OSI) or OSI over IP.

**Usage Guidelines** None

**Category** System

**Security** Provisioning

**Input Format** ENT-ROUTE-GRE:[<TID>]::<CTAG>:::IPADDR=<IPADDR>,IPMASK=<IPMASK>,NSAP=<NSAP>,[COST=<COST>];

**Input Example** ENT-ROUTE-GRE:CISCO::123:::IPADDR=10.64.72.57,IPMASK=255.255.255.0,NSAP="39840F80FFFFFF0000DDDDAA000010CFB4910200",COST=110;

<b>Input Parameters</b>	<IPADDR>	IP address of the tunnel endpoint. IPADDR is a string.
	<IPMASK>	Subnet mask for the tunnel endpoint. IPMASK is a string.
	<NSAP>	Network service access point (NSAP) address for the tunnel endpoint. NSAP is a string.
	<COST>	Routing cost associated with the tunnel. COST is an integer.

## 12.34 ENT-TADRMAP

(Cisco ONS 15454) The Enter Target Identifier Address Mapping (ENT-TADRMAP) command instructs a gateway NE (GNE) to create an entry in the TADRMAP table that maps the target identifiers (TIDs) of the subtending NEs to their addresses. The operating systems (OSs) will address the subtending NEs using the TID in TL1 messages and a GNE will address these NEs by mapping the TID to an IP address or NSAP. The TADRMAP table, which resides in the GNE, correlates a TID and an address. The command requires that at least one IPADDR or NSAP be specified. The PORT and ENCODING parameters are only used with IP address mappings.

### Usage Guidelines

None

### Category

System

### Security

Provisioning

### Input Format

```
ENT-TADRMAP:[<TID>]::<CTAG>:::[TIDNAME=<TIDNAME>],[IPADDR=<IPADDR>],
[PORT=<PORT>],[ENCODING=<ENCODING>],[NSAP=<NSAP>];
```

### Input Example

```
ENT-TADRMAP:TID::CTAG::TIDNAME=ENENODENAME,IPADDR=192.168.100.52,
PORT=3082,ENCODING=LV,NSAP="39840F80FFFFFF0000DDDDAA01001800";
```

### Input Parameters

<TIDNAME>	TID of the new TID/address mapping. TIDNAME is a string.
<IPADDR>	(Optional) IP address. IPADDR is a string. <b>Note</b> If the NSAP parameter is not used, the IPADDR parameter is required.
<PORT>	Port for the TID/IP address mapping. The port default is 3082. PORT is an integer.
<ENCODING>	TL1 encoding for the TID/IP address mapping. The encoding default is LV. The parameter type is ENCODING (modifies information into the required transmission format).
<ul style="list-style-type: none"> <li>LV</li> </ul>	Length encoding
<ul style="list-style-type: none"> <li>RAW-CISCO</li> </ul>	Cannot be specified. Used only for display with backward compatible Optical Networking System (ONS) NEs.
<ul style="list-style-type: none"> <li>RAW-STD</li> </ul>	Noninteractive encoding
<NSAP>	(Optional) NSAP address. NSAP is a string. <b>Note</b> If the IPADDR parameter is not used, the NSAP parameter is required.

## 12.35 ENT-TRAPTABLE

(Cisco ONS 15454) The Enter Trap Table (ENT-TRAPTABLE) command provisions a Simple Network Management Protocol (SNMP) trap destination and its associated community, User Datagram Protocol (UDP) port, and SNMP version. The maximum number of trap entries is ten.

**Usage Guidelines** None

**Category** System

**Security** Provisioning

**Input Format** ENT-TRAPTABLE:[<TID>]:<AID>:<CTAG>::COMMUNITY=<COMMUNITY>,  
[TRAPPORT=<TRAPPORT>],[TRAPVER=<TRAPVER>];

**Input Examples**

1. ENT-TRAPTABLE::1.2.3.4:1::COMMUNITY="PRIVATE",TRAPPORT=162,TRAPVER=SNMPV1;
2. ENT-TRAPTABLE::"[3ffe:0501:0008:0000:0260:97ff:fe40:efab]":1::COMMUNITY="PRIVATE",TRAPPORT=162,TRAPVER=SNMPV1;

<b>Input Parameters</b>	
<AID>	IP address identifying the trap destination. Only a numeric IP address is allowed. Access identifier from the <a href="#">“26.18 IPADDR”</a> section on page 26-43.
<COMMUNITY>	Community associated with the trap destination. Community name is a string with up to 32 characters.
<TRAPPORT>	UDP port number associated with the trap destination. The UDP port number default is 162. TRAPPORT is an integer.
<TRAPVER>	SNMP version number. Defaults to SNMPv1. The parameter type is SNMP_VERSION (SNMP Version).
• SNMPV1	(Default) SNMP Version 1
• SNMPV2	SNMP Version 2

## 12.36 ENT-TUNNEL-FIREWALL

(Cisco ONS 15454) The Enter Tunnel Firewall (ENT-TUNNEL-FIREWALL) command creates a firewall tunnel.

### Usage Guidelines

None

### Category

System

### Security

Provisioning

### Input Format

```
ENT-TUNNEL-FIREWALL:[<TID>]::<CTAG>:::[SRCADDR=<SRCADDR>],
[SRCMASK=<SRCMASK>],[DESTADDR=<DESTADDR>],[DESTMASK=<DESTMASK>];
```

### Input Example

```
ENT-TUNNEL-FIREWALL:TID::CTAG:::SRCADDR=192.168.100.52,
SRCMASK=255.255.255.0,DESTADDR=192.168.101.14,DESTMASK=255.255.255.0;
```

### Input Parameters

<SRCADDR>	Source IP address. SRCADDR is a string.
<SRCMASK>	Source mask. SRCMASK is a string.
<DESTADDR>	Destination IP address. DESTADDR is a string.
<DESTMASK>	Destination mask. DESTMASK is a string.

## 12.37 ENT-TUNNEL-PROXY

(Cisco ONS 15454) The Enter Tunnel Proxy (ENT-TUNNEL-PROXY) command creates a proxy tunnel.

### Usage Guidelines

None

### Category

System

### Security

Provisioning

### Input Format

```
ENT-TUNNEL-PROXY:[<TID>]::<CTAG>:::[SRCADDR=<SRCADDR>],
[SRCMASK=<SRCMASK>],[DESTADDR=<DESTADDR>],[DESTMASK=<DESTMASK>];
```

**Input Example**

```
ENT-TUNNEL-PROXY:TID::CTAG:::SRCADDR=192.168.100.52,SRCMASK=255.255.255.0,
DESTADDR=192.168.101.14,DESTMASK=255.255.255.0;
```

**Input Parameters**

<SRCADDR>	Source IP address. SRCADDR is a string.
<SRCMASK>	Source mask. SRCMASK is a string.
<DESTADDR>	Destination IP address. DESTADDR is a string.
<DESTMASK>	Destination mask. DESTMASK is a string.

## 12.38 ENT-USER-SECU

(Cisco ONS 15454) The Enter User Security (ENT-USER-SECU) command adds a user account. Only a Superuser can use the ENT-USER-SECU command. Each user created by the Superuser has one of these four privilege levels:

1. Retrieve [RTRV]: Users with this security level can retrieve information from the node, but cannot modify anything. The default idle time for a Retrieve user is unlimited.
2. Maintenance [MAINT]: Users with this security level can retrieve information from the node and perform limited maintenance operations such as card resets, Manual/Force/Lockout on cross-connects or in protection groups, and BLSR maintenance. The default idle time for a Maintenance user is 60 minutes.
3. Provisioning [PROV]: Users with this security level can perform all maintenance actions, and all provisioning actions except those restricted to Superusers. The default idle time for a Provisioning user is 30 minutes.
4. Superuser [SUPER]: Users with this security level can perform all provisioning user actions, plus creating and deleting user security profiles, setting basic system parameters such as time, date, node name, and IP address, and doing database backup and restoration. The default idle time for a Superuser is 15 minutes.

**Usage Guidelines**

- Passwords are masked for the following security commands: ACT-USER, ED-PID, ENT-USER-SECU, and ED-USER-SECU. Access to a TL1 session by any means will have the password masked. The CTC Request History and Message Log will also show the masked commands. When a password-masked command is reissued by double-clicking the command from CTC Request History, the password will still be masked in the CTC Request History and Message Log. The actual password that was previously issued will be sent to the NE. To use a former command as a template only, single-click the command in CTC Request History. The command will be placed in the Command Request text box, where you can edit the appropriate fields prior to reissuing it.
- The user ID can be any combination of up to 10 alphanumeric characters.
- The password ID is a string of up to 10 characters where at least 2 characters are nonalphabetic with at least one special character (+, %, or #).
- Although the CTC allows both a UID and a PID of up to 20 characters, the CTC-entered users (UID and PID) might not be valid TL1 users. For example, if you issue an ACT-USER command using a CTC-entered UID that is greater than 10 characters long, TL1 will respond with DENY (Cannot Login) error message.
- The TL1 password security is enforced as follows:

- The PID cannot be the same as or contain the UID. For example, if the userid is CISCO25 the password cannot be CISCO25#.
- The PID must have one nonalphanumeric and one special (+, %, or #) character.
- PID toggling is not permitted; for example, if the current password is CISCO25#, the new password cannot be CISCO25#.

---

**Category** Security

---

**Security** Superuser

---

**Input Format** ENT-USER-SECU:[<TID>]:<UID>:<CTAG>::<PID>,,<UAP>[:];

---

**Input Example** ENT-USER-SECU:PETALUMA:CISCO15:123::PSWD11#,,MAINT;

---

<b>Input Parameters</b>	<UID>	User identifier. The minimum UID size is 6 and the maximum size is 10. UID is a string.
	<PID>	User's password or private identifier. PID is a string.
	<UAP>	User's access privilege. The parameter type is PRIVILEGE (security level).
	• MAINT	Maintenance security level
	• PROV	Provision security level
	• RTRV	Retrieve security level
	• SUPER	Superuser security level

---

## 12.39 ENT-VCG

(Cisco ONS 15454) The Enter Virtual Concatenated Group (ENT-VCG) command creates a VCG object. VCGs on ML-Series cards support two members. Supported subrates are STS1, STS3C, and STS12C. ML-Series VCG also supports SW-LCAS or NONE. VCG on the FC\_MR-4 card supports eight members and the supported subrate is limited to STS3C. The FC\_MR-4 card VCG has no link capacity adjustment scheme (LCAS) support (NONE). VCG on the ML-100T-8 card supports up to three members at a subrate of STS1 and 64 members at a subrate of VT1.

---

**Usage Guidelines** None

---

**Category** VCAT

**Security**

Provisioning

**Input Format**

ENT-VCG:[<TID>]:<SRC>:<CTAG>:::TYPE=<TYPE>,TXCOUNT=<TXCOUNT>,[CCT=<CCT>],[LCAS=<LCAS>],[BUFFERS=<BUFFERS>],[NAME=<NAME>];

**Input Example**

ENT-VCG:NODE1:FAC-1-1:1234:::TYPE=STS3C,TXCOUNT=8,CCT=2WAY,LCAS=LCAS,BUFFERS=DEFAULT,NAME="VCG1";

**Input Parameters**

<SRC>	Source access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40. ML1000-2 and ML100T-12 cards use the VFAC AID. The FC_MR-4 card uses the FAC AID.
<TYPE>	The type of entity or member cross-connect being provisioned. Null indicates not applicable. TYPE can be a Common Language Equipment Identification (CLEI) code or another value. ML1000-2 and ML100T-12 cards support STS1, STS3c, and STS12c. The FC_MR-4 card supports STS3c only. The parameter type is MOD_PATH (STS/VT path modifier).
• STS1	STS1 path
• STS12C	STS12C path
• STS18C	STS18C path
• STS192	STS192C path
• STS24C	STS24C path
• STS36C	STS36C path
• STS3C	STS3C path
• STS48C	STS48C path
• STS6C	STS6C path
• STS9C	STS9C path
• VT1	VT1 path
• VT2	VT2 path
<TXCOUNT>	Number of members in the transmit (Tx) direction. For ML1000-2 and ML100T-12 cards, the only valid value is 2. For the FC_MR-4 card the only valid value is 8. TXCOUNT is an integer.
<CCT>	Type of connection (one-way or two-way). CCT is the cross-connect type for the VCG member cross-connects. It must be the same for all the member cross-connects of a VCG. The parameter type is CCT, which is the type of cross-connect to be created.
• 1WAY	A unidirectional connection from a source tributary to a destination tributary
• 1WAYDC	Path Protection multicast drop with one-way continue
• 1WAYEN	Path Protection multicast end node with one-way continue

• 1WAYMON	A bidirectional connection between the two tributaries <b>Note</b> 1WAYMON is not supported with TL1. However, it is still supported from CTC. Using CTC, you can create 1WAYMON cross-connects that can be retrieved through TL1.
• 1WAYPCA	A unidirectional connection from a source tributary to a destination tributary on the protection path/fiber
• 2WAY	A bidirectional connection between the two tributaries
• 2WAYDC	A bidirectional drop-and-continue connection applicable only to traditional path protection configurations and integrated DRIs
• 2WAYPCA	A bidirectional connection between the two tributaries on the extra protection path/fiber
• DIAG	Diagnostic cross-connect. Supports BERT (BLSR PCA diagnostic cross-connect).
<LCAS>	Link capacity adjustment scheme. <b>Note</b> If SW-LCAS is selected, then the far-end VCG must also be configured as SW-LCAS.  The parameter type is LCAS, which is the link capacity adjustment scheme mode for the VCG created.
• LCAS	LCAS is enabled.
• NONE	No LCAS is created
• SW-LCAS	Supports the temporary removal of a VCG member during member failure. Only supported by the ML1000-2 and ML100T-12 cards.
<BUFFERS>	Buffer type. The default value is DEFAULT. The FC_MR-4 and CE1000 cards support DEFAULT and EXPANDED buffers. Other data cards support DEFAULT buffers only. The parameter type is BUFFER_TYPE, which is the buffer type used in the VCAT circuit.
• DEFAULT	Default buffer value
• EXPANDED	Expanded buffer value
<NAME>	Name of the VCAT group. The name defaults to null. Its maximum length is 32 characters. NAME is a string.

## 12.40 ENT-VLAN

(Cisco ONS 15454) The Enter Virtual VLAN (ENT-VLAN) command adds a new VLAN entry to the VLAN database. The VLAN database is a collection of VLANs used in an NE.

### Usage Guidelines

- If the AID is invalid, an IIAC error message is returned.
- The ALL AID is invalid for this command.
- The VLAN with the specified AID must be present in the node or the command will be denied.

### Category

Ethernet

**Security**

Provisioning

**Input Format**

```
ENT-VLAN:[<TID>]:<AID>:<CTAG>::NAME=<NAME>,[PROTN=<PROTN>],[MACLEARNING=
<MACLEARNING>],[IGMPENABLE=<IGMPENABLE>],[IGMPFASTLEAVE=<IGMPFASTLEAV
E>],[IGMPSUPP=<IGMPSUPP>][:];
```

**Input Example**

```
ENT-VLAN:ROCKS:VLAN-4096:1:::NAME=MYVLAN,PROTN=N,MACLEARNING=Y,
IGMPENABLE=Y,IGMPFASTLEAVE=Y,IGMPSUPP=Y;
```

**Input Parameters**

<AID>	The AID is used to access the VLAN.
<ul style="list-style-type: none"> <li>VLAN-ALL</li> </ul>	All AIDs for the VLAN.
<ul style="list-style-type: none"> <li>VLAN-{0-4096}</li> </ul>	Single AID for the VLAN. VLAN ID 0 is reserved for untagged VLAN.
<NAME>	(Optional) Indicates the name of the VLAN.
<PROTN>	Indicates the VLAN protection feature. This is an optional parameter indicating if the VLAN being created/modified is protected.
<ul style="list-style-type: none"> <li>N</li> <li>Y</li> </ul>	Not protected (Default) Protected
<MACLEARNING>	MAC Address Learning Mode. This activates the MAC address learning on interface to avoid packet broadcasting. Default value is - "N"
<ul style="list-style-type: none"> <li>Y</li> <li>N</li> </ul>	Activate the MAC learning. Disable MAC learning.
<IGMPENABLE>	Internet Group Management Protocol status.
<ul style="list-style-type: none"> <li>Y</li> <li>N</li> </ul>	Enabled Disabled
<IGMPFASTLEAVE>	Internet Group Management Protocol FastLeave status. When enabled, decreases the delay between receiving a Leave Group packet and disabling forwarding of multicast
<ul style="list-style-type: none"> <li>Y</li> <li>N</li> </ul>	Enabled Disabled
<IGMPSUPP>	IGMP Report suppression. Indicates multicast registered client hiding. When enabled (default) it prevents duplicate reports from being sent to the multicast devices.
<ul style="list-style-type: none"> <li>Y</li> <li>N</li> </ul>	Enabled Disabled

## 12.41 ENT-WDMANS

(Cisco ONS 15454) The Enter Wavelength Division Multiplexing Automatic Node Setup (ENT-WDMANS) command adds the automatic optical node setup application attributes.

**Usage Guidelines**

- If the AID is invalid, an IIAC (Invalid AID) error message is returned.
- The ALL AID is invalid for this command.

**Category**

DWDM

**Security**

Maintenance

**Input Format**

```
ENT-WDMANS:[<TID>]:<AID>:<CTAG>::[<WLEN>]:[VOAATTN=<VOAATTN>],[POWEROSC=
<POWEROSC>],[NTWTYPE=<NTWTYPE>],[CHLOSS=<CHLOSS>],[GAIN=<GAIN>],[TILT=<TI
LT>],[CHPWR=<CHPWR>],[AMPLMODE=<AMPLMODE>],[RATIO=<RATIO>],[OSCLOSE=<OS
CLOSE>],[DITHER=<DITHER>],[TOTALPWR=<TOTALPWR>],[HIGHSLVEXP=<HIGHSLVEXP>
],[LOWSLVEXP=<LOWSLVEXP>];
```

**Input Example**

```
ENT-WDMANS:PENNGROVE:WDMNODE:114::1530.33:VOAATTN=2.5,POWEROSC=5.0,NTWT
YPE=METRO-CORE,CHPWR=2.0,DITHER=10,TOTALPWR=150;
```

**Input Parameters**

<AID>	The AID is used to access the WDM node or a single port of the DWDM node.
<ul style="list-style-type: none"> <li>• WDMNODE</li> </ul>	Indicates the WDM node of an MSTP and accesses the NTWTYPE and DITHER WDMANS node parameters.
<ul style="list-style-type: none"> <li>• LINE</li> </ul>	The optical transport section port.
<ul style="list-style-type: none"> <li>• BAND</li> </ul>	The optical multiplex section port.
<ul style="list-style-type: none"> <li>• CHAN</li> </ul>	The optical channel port.
<WLEN>	(Optional) The parameter type is OPTICAL_WLEN, which indicates the optical wavelength.
<ul style="list-style-type: none"> <li>• 1310</li> </ul>	Wavelength 1310
<ul style="list-style-type: none"> <li>• 1470</li> </ul>	Wavelength 1470
<ul style="list-style-type: none"> <li>• 1490</li> </ul>	Wavelength 1490
<ul style="list-style-type: none"> <li>• 1510</li> </ul>	Wavelength 1510
<ul style="list-style-type: none"> <li>• 1528.77</li> </ul>	Wavelength 1528.77
<ul style="list-style-type: none"> <li>• 1529.55</li> </ul>	Wavelength 1529.55
<ul style="list-style-type: none"> <li>• 1529.94</li> </ul>	Wavelength 1529.94
<ul style="list-style-type: none"> <li>• 1530</li> </ul>	Wavelength 1530
<ul style="list-style-type: none"> <li>• 1530.33</li> </ul>	Wavelength 1530.33
<ul style="list-style-type: none"> <li>• 1530.73</li> </ul>	Wavelength 1530.73
<ul style="list-style-type: none"> <li>• 1531.12</li> </ul>	Wavelength 1531.12
<ul style="list-style-type: none"> <li>• 1531.51</li> </ul>	Wavelength 1531.51
<ul style="list-style-type: none"> <li>• 1531.90</li> </ul>	Wavelength 1531.90
<ul style="list-style-type: none"> <li>• 1532.29</li> </ul>	Wavelength 1532.29

• 1532.68	Wavelength 1532.68
• 1533.07	Wavelength 1533.07
• 1533.47	Wavelength 1533.47
• 1533.86	Wavelength 1533.86
• 1534.25	Wavelength 1534.25
• 1534.64	Wavelength 1534.64
• 1535.04	Wavelength 1535.04
• 1535.43	Wavelength 1535.43
• 1535.82	Wavelength 1535.82
• 1536.22	Wavelength 1536.22
• 1536.61	Wavelength 1536.61
• 1537	Wavelength 1537
• 1537.40	Wavelength 1537.40
• 1537.79	Wavelength 1537.79
• 1538.19	Wavelength 1538.19
• 1538.58	Wavelength 1538.58
• 1538.98	Wavelength 1538.98
• 1539.37	Wavelength 1539.37
• 1539.77	Wavelength 1539.77
• 1540.16	Wavelength 1540.16
• 1540.56	Wavelength 1540.56
• 1540.95	Wavelength 1540.95
• 1541.35	Wavelength 1541.35
• 1541.75	Wavelength 1541.75
• 1542.14	Wavelength 1542.14
• 1542.35	Wavelength 1542.35
• 1542.54	Wavelength 1542.54
• 1542.94	Wavelength 1542.94
• 1543.33	Wavelength 1543.33
• 1543.73	Wavelength 1543.73
• 1544.13	Wavelength 1544.13
• 1544.53	Wavelength 1544.53
• 1544.92	Wavelength 1544.92
• 1545.32	Wavelength 1545.32
• 1545.72	Wavelength 1545.72
• 1546.12	Wavelength 1546.12
• 1546.52	Wavelength 1546.52
• 1546.92	Wavelength 1546.92
• 1547.32	Wavelength 1547.32
• 1547.72	Wavelength 1547.72
• 1548.12	Wavelength 1548.12

• 1548.51	Wavelength 1548.51
• 1548.92	Wavelength 1548.92
• 1549.32	Wavelength 1549.32
• 1549.71	Wavelength 1549.71
• 1550	Wavelength 1500
• 1550.12	Wavelength 1550.12
• 1550.52	Wavelength 1550.52
• 1550.92	Wavelength 1550.92
• 1551.32	Wavelength 1551.32
• 1551.72	Wavelength 1551.72
• 1552.12	Wavelength 1552.12
• 1552.52	Wavelength 1552.52
• 1552.93	Wavelength 1552.93
• 1553.33	Wavelength 1553.33
• 1553.73	Wavelength 1553.73
• 1554.13	Wavelength 1554.13
• 1554.13	Wavelength 1554.13
• 1554.94	Wavelength 1554.94
• 1555.34	Wavelength 1555.34
• 1555.75	Wavelength 1555.75
• 1556.15	Wavelength 1556.15
• 1556.55	Wavelength 1556.55
• 1556.96	Wavelength 1556.96
• 1557.36	Wavelength 1557.36
• 1557.77	Wavelength 1557.77
• 1558.17	Wavelength 1558.17
• 1558.58	Wavelength 1558.58
• 1558.98	Wavelength 1558.98
• 1559.39	Wavelength 1559.39
• 1559.79	Wavelength 1559.79
• 1560.20	Wavelength 1560.20
• 1560.61	Wavelength 1560.61
• 1561.01	Wavelength 1561.01
• 1561.42	Wavelength 1561.42
• 1561.83	Wavelength 1561.83
• 1570	Wavelength 1570
• 1570.83	Wavelength 1570.83
• 1571.24	Wavelength 1571.24
• 1571.65	Wavelength 1571.65
• 1572.06	Wavelength 1572.06
• 1572.48	Wavelength 1572.48

• 1572.89	Wavelength 1572.89
• 1573.30	Wavelength 1573.30
• 1573.71	Wavelength 1573.71
• 1574.13	Wavelength 1574.13
• 1574.54	Wavelength 1574.54
• 1574.95	Wavelength 1574.95
• 1575.37	Wavelength 1575.37
• 1575.78	Wavelength 1575.78
• 1576.20	Wavelength 1576.20
• 1576.61	Wavelength 1576.61
• 1577.03	Wavelength 1577.03
• 1577.44	Wavelength 1577.44
• 1577.86	Wavelength 1577.86
• 1578.27	Wavelength 1578.27
• 1578.69	Wavelength 1578.69
• 1579.10	Wavelength 1579.10
• 1579.52	Wavelength 1579.52
• 1579.93	Wavelength 1579.93
• 1580.35	Wavelength 1580.35
• 1580.77	Wavelength 1580.77
• 1581.18	Wavelength 1581.18
• 1581.60	Wavelength 1581.60
• 1582.02	Wavelength 1582.02
• 1582.44	Wavelength 1582.44
• 1582.85	Wavelength 1582.85
• 1583.27	Wavelength 1583.27
• 1583.69	Wavelength 1583.69
• 1584.11	Wavelength 1584.11
• 1584.53	Wavelength 1584.53
• 1584.95	Wavelength 1584.95
• 1585.36	Wavelength 1585.36
• 1585.78	Wavelength 1585.78
• 1586.20	Wavelength 1586.20
• 1586.62	Wavelength 1586.62
• 1587.04	Wavelength 1587.04
• 1587.46	Wavelength 1587.46
• 1587.88	Wavelength 1587.88
• 1588.30	Wavelength 1588.30
• 1588.73	Wavelength 1588.73
• 1589.15	Wavelength 1589.15
• 1589.57	Wavelength 1589.57

• 1589.99	Wavelength 1589.99
• 1590	Wavelength 1590
• 1590.41	Wavelength 1590.41
• 1590.83	Wavelength 1590.83
• 1591.26	Wavelength 1591.26
• 1591.68	Wavelength 1591.68
• 1592.10	Wavelength 1592.10
• 1592.52	Wavelength 1592.52
• 1592.95	Wavelength 1592.95
• 1593.37	Wavelength 1593.37
• 1593.79	Wavelength 1593.79
• 1594.22	Wavelength 1594.22
• 1594.64	Wavelength 1594.64
• 1595.06	Wavelength 1595.06
• 1595.49	Wavelength 1595.49
• 1596.34	Wavelength 1596.34
• 1596.76	Wavelength 1596.76
• 1597.19	Wavelength 1597.19
• 1597.62	Wavelength 1597.62
• 1598.04	Wavelength 1598.04
• 1598.47	Wavelength 1598.47
• 1598.89	Wavelength 1598.89
• 1599.32	Wavelength 1599.32
• 1599.75	Wavelength 1599.75
• 1600.06	Wavelength 1600.06
• 1601.03	Wavelength 1601.03
• 1601.46	Wavelength 1601.46
• 1601.88	Wavelength 1601.88
• 1602.31	Wavelength 1602.31
• 1602.74	Wavelength 1602.74
• 1603.17	Wavelength 1603.17
• 1603.60	Wavelength 1603.60
• 1604.03	Wavelength 1604.03
• 1610	Wavelength 1610
<VOAATTN>	The value of calibrated attenuation for the VOA expressed in dBm. The range is 0.0 to +30.0. VOAATTN is a float.
<POWEROSC>	WDM-ANS OSC power parameter.
<NTWTYPE>	WDM-ANS network type parameter.
<CHLOSS>	WDM-ANS channel loss parameter.
<GAIN>	WDM-ANS amplifier gain parameter.
<TILT>	WDM-ANS amplifier tilt parameter.
<CHPWR>	WDM-ANS channel power parameter.

<AMPLMODE>	WDM-ANS amplifier mode parameter.
<RATIO>	WDM-ANS Raman amplifier pump ratio parameter.
<OSCLOSS>	WDM-ANS OSC channel loss parameter.
<DITHER>	WDM-ANS WXC dithering parameter.
<TOTALPWR>	WDM-ANS Raman amplifier total power in mW.
<HIGHSLVEXP>	Span loss verification—high value.
<LOWSLVEXP>	Span loss verification—low value.

## 12.42 ENT-WDMSIDE

(Cisco ONS 15454) The Enter Wavelength Division Multiplexing Side (ENT-WDMSIDE) command adds a new WDM Node Side and defines its attributes.

### Usage Guidelines

- The LINEIN and LINEOUT attributes are mandatory and they specify the input and output lines of the node.
- If the AID is invalid, an IIAC error message is returned.
- The ALL AID is invalid for this command.

### Category

DWDM

### Security

Maintenance

### Input Format

ENT-WDMSIDE:[<TID>]:<AID>:<CTAG>:::LINEIN=<LINEIN>,LINEOUT=<LINEOUT>[:];

### Input Example

ENT-WDMSIDE:TEXAS:WDMSIDE-A:114:::LINEIN=LINE-1-3-RX,LINEOUT=LINE-1-3-TX;

### Input Parameters

<AID>	The AID is used to access the WDM side of a DWDM node.
• WMSIDE-{A,B,C,D,E,F,G,H}	DWDM side identifier
<LINEIN>	Used to access the Optical Transport Section (OTS) layer of the ONS cards.
• LINE[-{1-8}]-{1-6,12-17}-{1-3}-ALL	All the lines (COM=1, OSC=2, LINE=3) in OPT-BST, OPT-BST-E, OPT-BST-L, and OPT-AMP-17-C cards where the format is LINE-[SHELF]-[SLOT]-[PORT]-ALL.
• LINE[-{1-8}]-{1-6,12-17}-{1-3}-{RX,TX}	The receive/transmit lines (COM=1, OSC=2, LINE=3) in OPT-BST, OPT-BST-E, OPT-BST-L, and OPT-AMP-17-C cards where the format is LINE-[SHELF]-[SLOT]-[PORT]-[DIRN].

<LINEOUT>	Used to access Optical Transport Section (OTS) layer of Optical Network units.
<ul style="list-style-type: none"> <li>• LINE[-{1-8}]-{1-6,12-17}-{1-3}-ALL</li> </ul>	All the lines (COM=1, OSC=2, LINE=3) in OPT-BST, OPT-BST-E, OPT-BST-L, and OPT-AMP-17-C cards where the format is LINE-[SHELF]-[SLOT]-[PORT]-ALL.
<ul style="list-style-type: none"> <li>• LINE[-{1-8}]-{1-6,12-17}-{1-3}-{RX,TX}</li> </ul>	The receive/transmit lines (COM=1, OSC=2, LINE=3) in OPT-BST, OPT-BST-E, OPT-BST-L, and OPT-AMP-17-C cards where the format is LINE-[SHELF]-[SLOT]-[PORT]-[DIRN].



# CHAPTER 13

## EX Commands

---

This chapter provides exercise (EX) commands for Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.



**Note**

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

---

### 13.1 EX-SW-<OCN\_BLSR>

(Cisco ONS 15454) The Exercise Protection Switch for OC12, OC48, OC192, or OC768 (EX-SW-<OCN\_BLSR>) command exercises the algorithm for switching from a working facility to a protection facility without actually performing a switch. It is assumed that the facility being exercised is the working unit. The success or failure of the exercise switching will be indicated by an automatic alarm.

#### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

Exercise switch for the SONET protection line is not supported in this release. If sending this command to the protection unit, an error message will be returned. In addition to all normal INPUT, EQUIPAGE, and PRIVILEGE error codes, the following error codes are also included in this command:

- SNVS (Status, Not in Valid State)
- SROF (Status, Requested Operation Failed)
- SSRD (Status, Switch Request Denied)



**Note**

- If you send the EX-SW-<OCN\_BLSR> command to both the east and the west sides/spans of a two-fiber or four-fiber ring within a short time period (less than 30 to 45 seconds) the system will only execute one (WEST) side EXER-RING query, and preempt the other (EAST) side query. There will be no event messages reported for the preempted side, and it will be in APS-CLEAR switching state. Examples of this are:
  - A single command with both side/span AIDs (in the list AID format) of the same two-fiber or four-fiber ring
  - Separate queries (through TL1 or Cisco Transport Controller [CTC], or TL1 and CTC) on both sides/spans of the same two-fiber or four-fiber ring

- DIRN is an optional parameter. A NULL value of this parameter defaults to BTH for a two-fiber or four-fiber BLSR protection group. DIRN follows these rules:
  - TRMT will always fail for any kind of protection group.
  - For two-fiber and four-fiber BLSR protection groups, both the RCV and TRMT direction will fail.
  - Only BTH is a valid parameter. EX-SW-<OCN\_TYPE> can be operated only on bidirectional line switched ring (BLSR) protection groups.

**Category**

BLSR

**Security**

Maintenance

**Input Format**


EX-SW-&lt;OCN\_BLSR&gt;:[&lt;TID&gt;]:&lt;AID&gt;:&lt;CTAG&gt;::,[&lt;SWITCHTYPE&gt;],[&lt;DIRECTION&gt;];

**Input Example**

EX-SW-OC48:CISCO:FAC-12-1:123::,SPAN,BTH;

**Input Parameters**

<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40. Identifies the facility in the NE to which the switch request is directed.
<SWITCHTYPE>	Switch type. Must not be null. The parameter type is SWITCH_TYPE, which is the BLSR switch type. MANWKSWBK, MANWKSWPR, FRCDWKSWBK, FRCDWKSWPR, LOCKOUTOFPR, and LOCKOUTOFWK are retrieve-only values for RTRV-PROTNSW-OCn commands. They are not applicable for the OPR-PROTNSW-OCn commands. RING and SPAN are the only allowed values for BLSR protection.
• FRCDWKSWBK	Working unit is forced to switch back to working
• FRCDWKSWPR	Working unit is forced to switch to the protection unit
• LOCKOUTOFPR	Lock out of protection
• LOCKOUTOFWK	Lock out of working
• MANWKSWBK	Manual switch of working unit back to working
• MANWKSWPR	Manual switch of working unit back to the protection unit
• RING	BLSR ring switch type
• SPAN	BLSR span switch type
<DIRECTION>	Direction. A null value defaults to RCV. The parameter type is DIRECTION (transmit and receive direction)
• BTH	Both transmit and receive directions
• RCV	Receive direction only
• TRMT	Transmit direction only

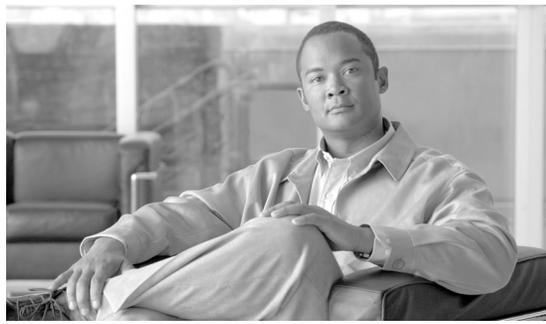

# CHAPTER 14

## INH Commands

---

This chapter provides inhibit (INH) commands for the for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.



**Note**

---

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

---

### 14.1 INH-CONSOLE-PORT

(Cisco ONS 15454) The Inhibit Console Port (INH-CONSOLE-PORT) command is used to turn off the console port for the ML-Series cards.

---

**Usage Guidelines** None

---

**Category** Security

---

**Security** Superuser

---

**Input Format** INH-CONSOLE-PORT:[<TID>]:<AID>:<CTAG>;

---

**Input Example** INH-CONSOLE-PORT:CISCONODE:SLOT-2:123;

---

**Input Parameters** <AID> Access identifier from the [“26.15 EQPT”](#) section on page 26-37.

---

## 14.2 INH-MSG-ALL

(Cisco ONS 15454) The Inhibit Message All (INH-MSG-ALL) command inhibits all REPT ALM and REPT EVT autonomous messages from being transmitted. See the ALW-MSG-ALL to resume these autonomous messages.


**Note**


---

When a TL1 session starts, the REPT ALM and REPT EVT messages are allowed by default.

---

**Usage Guidelines**

If this command is used twice in the same session, the SAIN (Already Inhibited) error message is reported.

**Category**

System

**Security**

Retrieve

**Input Format**

INH-MSG-ALL:[<TID>]:[<AID>]:<CTAG>[::,];

**Input Example**

INH-MSG-ALL:PETALUMA:ALL:550;

**Input Parameters**


---

<code>&lt;AID&gt;</code>	Access identifier from the <a href="#">“26.1 ALL” section on page 26-1</a> .
--------------------------	--

---

## 14.3 INH-MSG-DBCHG

(Cisco ONS 15454) The Inhibit Database Change Message (INH-MSG-DGCHG) command disables REPT DBCHG autonomous message.

**Usage Guidelines**

None

**Category**

Log

**Security**

Retrieve

**Input Format**

INH-MSG-DBCHG:[<TID>]::<CTAG>[::,];

---

**Input Example** INH-MSG-DBCHG:CISCO::123;

---

**Input Parameters** None

## 14.4 INH-MSG-SECU

(Cisco ONS 15454) The Inhibit Message Security (INH-MSG-SECU) command inhibits the REPT EVT SECU and REPT ALM SECU autonomous messages.

---

**Usage Guidelines** None

---

**Category** Security

---

**Security** Superuser

---

**Input Format** INH-MSG-SECU:[<TID>]::<CTAG>[::,];

---

**Input Example** INH-MSG-SECU:PETALUMA::123;

---

**Input Parameters** None

## 14.5 INH-PMREPT-ALL

(Cisco ONS 15454) The Inhibit Performance Report All (INH-PMREPT-ALL) command inhibits all scheduled performance monitoring (PM) reporting. Inhibiting PM reporting is session-based, which means the command is only effective to the TL1 session that issues this command. By default, the scheduled PM reporting is inhibited by a TL1 session.

**Note**

---

A TL1 session for which PM reports are inhibited will include an INHMSG-PMREPT condition when issuing TL1 command RTRV-COND-ALL.

---

---

**Usage Guidelines** None

---

**Category** Performance

---

**Security** Retrieve

---

**Input Format** INH-PMREPT-ALL:[<TID>]::<CTAG>;

---

**Input Example** INH-PMREPT-ALL:NE-NAME::123;

---

**Input Parameters** None

## 14.6 INH-SWDX-EQPT

(Cisco ONS 15454) The Inhibit Switch Duplex Equipment (INH-SWDX-EQPT) command inhibits automatic or manual switching on a system containing duplex equipment.

---

### Usage Guidelines

- Use the ALW-SWDX command to release the inhibit.
- This command is not used for SONET line protection switching. For SONET line/path protection switching commands, use the OPR-PROTNSW and RLS-PROTNSW commands.
- This command is not used for 1:1 and 1:N equipment protection switching. Instead, use the ALW-SWTOPROTN, ALW-SWTOWKG, INH-SWTOPROTN, and INH-SWTOWKG commands.
- This command applies to XCVT, XC10G, XC-VXC-10G equipment units.
- When sending this command to a TCC2/TCC2P/TCC3 card, an error message will occur because the network element (NE) treats the TCC2/TCC2P/TCC3 as a nonrevertive protection group without user control.

---

**Category** Equipment

---

**Security** Maintenance

---

**Input Format** INH-SWDX-EQPT:[<TID>]:<AID>:<CTAG>[::];

---

**Input Example** INH-SWDX-EQPT:CISCO:SLOT-8:1234;

---

**Input Parameters** <AID> Access identifier from the [“26.15 EQPT” section on page 26-37](#).  
XCVT/XC10G equipment AID (Slot 8 or Slot 10).

---

## 14.7 INH-SWTOPROTN-EQPT

(Cisco ONS 15454) The Inhibit Switch to Protection Equipment (INH-SWTOPROTN-EQPT) command inhibits automatic or manual switching of an equipment unit to protection. Use the ALW-SWTOPROTN-EQPT command to release the inhibit.

### Usage Guidelines

INH-SWTOPROTN-EQPT is used for electrical cards that could participate in an electrical protection group (for example, DS1, DS3, DS3XM, and EC1 cards). DS1 and DS3 cards have 1:1 and 1:N equipment protection. DS3XM and EC1 cards have only 1:1 equipment protection. When performing a lockout with this command, the traffic will be switched from the unit specified by the AID, unless the working unit being protected has failed or is missing. When performing a lock-on with this command and the working unit specified in the AID is in standby, sending this command will also initiate a traffic switch. When traffic is locked on a working unit or locked out of the protection unit with this command, the protection unit will not carry traffic, even if the working unit is pulled from the system.

Sending this command to a working unit in a 1:N protection group does not prevent a protection switch from another working unit in the same protection group. All the working units must be sent this command to prevent a protection switch. If the command is sent only to a subset of the working units, only those working units will have traffic locked on.

The inhibit state is persistent over TCC2/TCC2P/TCC3 side switches and removal/reboot of all the units in the protection group. The inhibit state can, but does not have to be, persistent over a complete power cycle of the NE.

The unit specified by the AID will raise the condition of INHSWPR when this command is sent.

The following actions will produce errors:

- This command only supports the BTH value of the DIRN parameter. A command with any other value is considered an incorrect use of the command and will return an IDNV (Input, Data Not Valid) error message.
- This command is not used for the common control (TCC2/TCC2P/TCC3 or CTX2500) cards. A command on a common control card will return an IIAC (Input, Invalid Access Identifier) error message. For common control card switching, use the SW-DX-EQPT and ALW-SWDX-EQPT commands.
- This command is not used for optical (OC-N) cards. A command on an optical card will return an IIAC (Input, Invalid Access Identifier) error message. For optical card switching, use the OPR-PROTNSW and RLS-PROTNSW commands.
- Using this command on a card that is not in a protection group will return the SNVS (Status, Not in Valid State) error message.
- Using this command on a card that is already in the inhibit state will return the SAIN (Status, Already Inhibited) error message.
- Sending the inhibit switch to protection command to a working card when the protect card in the same protection group has already raised the condition of INHSWWKG will return the SPLD (Status, Protection unit Locked) error message.
- Sending the inhibit switch to protection command to the protect card when a working card in the same protection group has already raised the condition of INHSWWKG will return the SWLD (Status, Working unit Locked) error message.
- Sending the inhibit switch to protection command to an active protect card when the peer working card is failed or missing will return the SWFA (Status, Working unit Failed) error message.

- As long as none of the previous error conditions apply, sending this command to missing cards is allowed and will not generate any error response.

**Category**

Equipment

**Security**

Maintenance

**Input Format**

INH-SWTOPROTN-EQPT:[&lt;TID&gt;]:&lt;AID&gt;:&lt;CTAG&gt;[:&lt;DIRN&gt;];

**Input Example**

INH-SWTOPROTN-EQPT:CISCO:SLOT-2:123::BTH;

**Input Parameters**

<b>&lt;AID&gt;</b>	Access identifier from the <a href="#">“26.15 EQPT”</a> section on page 26-37. This AID can either be the working unit for which switching to protection is inhibited (lock-on) or the protection unit for which carrying traffic is to be inhibited (lockout).
<b>&lt;DIRN&gt;</b>	The direction relative to the entity defined in the AID field. The direction of the switching. This command only supports the BTH value of this parameter. DIRN defaults to BTH. The parameter type is DIRECTION (transmit and receive directions).
<ul style="list-style-type: none"> <li>• BTH</li> </ul>	Both transmit and receive directions

## 14.8 INH-SWTOWKG-EQPT

(Cisco ONS 15454) The Inhibit Switch to Working Equipment (INH-SWTOWKG-EQPT) command inhibits automatic or manual switching of an equipment unit back to the working unit. Use the ALW-SWTOWKG-EQPT command to release the inhibit.

**Usage Guidelines**

INH-SWTOWKG-EQPT is used for electrical cards that could participate in an electrical protection group (for example, DS1, DS3, DS3XM, and EC1 cards). DS1 and DS3 cards have 1:1 and 1:N equipment protection. DS3XM and EC1 cards have only 1:1 equipment protection. When performing a lockout with this command, the traffic will be switched from the unit specified by the AID, unless the protection unit has failed or is missing. When performing a lock-on with this command and the protection unit specified in the AID is in standby, sending this command will initiate a traffic switch only when there is one working card in the protection group. In the case where there is more than one working card in the protection group, an error will be generated (see the error conditions that follow). When traffic is locked on the protection unit or locked out of a working unit with this command, the working unit will not carry traffic, even if the protection unit is pulled from the system.

The inhibit state is persistent over TCC2/TCC2P/TCC3 side switches and removal/reboot of all the units in the protection group. The inhibit state can but does not have to be persistent over a complete power cycle of the NE.

The unit specified by the AID will raise the condition of INH-SWTOWKG when this command is sent.

The following actions will return error messages:

- The command only supports the BTH value of the DIRN parameter. A command with any other value is considered an incorrect use of the command and will return An IDNV (Input, Data Not Valid) error message.
- This command is not used for the common control (TCC2/TCC2P/TCC3 or CTX2500) cards. A command on a common control card will return an IIAC (Input, Invalid Access Identifier) error message. For common control card switching, use the SW-DX-EQPT and ALW-SWDX-EQPT commands.
- This command is not used for optical (OC-N) cards. A command on an optical card will return an IIAC (Input, Invalid Access Identifier) error message. For optical card switching, use the OPR-PROTNSW and RLS-PROTNSW commands.
- Using this command on a card that is not in a protection group will return the SNVS (Status, Not in Valid State) error message.
- Using this command on a card that is already in the inhibit state will return the SAIN (Status, Already Inhibited) error message.
- Sending this command to a working card when the protect card in the same protection group has already raised the condition of INHSWPR will return the SPLD (Status, Protection unit Locked) error message.
- Sending the INH-SWTOWKG command to a protect card when a working card in the same protection group has already raised the condition of INHSWPR will return the SWLD (Status, Working unit Locked) error message.
- Sending the INH-SWTOWKG command to an active working card when the protect card has failed or is missing will return the SPFA (Status, Protection unit Failed) error message.
- Sending the INH-SWTOWKG command to an active working card when the protect card is already carrying traffic (this only occurs in a 1:N protection group with N greater than one) will return the SPAC (Status, Protection unit Active) error message.
- As long as none of the previous error conditions apply, sending this command to missing cards is allowed and will not generate any error response.

---

**Category** Equipment

---

**Security** Maintenance

---

**Input Format** INH-SWTOWKG-EQPT:[<TID>]:<AID>:<CTAG>[:<DIRN>];

---

**Input Example** INH-SWTOWKG-EQPT:CISCO:SLOT-2:123::BTH;

<b>Input Parameters</b>	<AID>	Access identifier from the “26.15 EQPT” section on page 26-37. This AID can either be the working unit for which switching to protection is inhibited (lock-on) or the protection unit for which carrying traffic is to be inhibited (lockout).
	<DIRN>	The direction relative to the entity defined in the AID field. The direction of the switching. This command only supports the BTH value of this parameter. DIRN defaults to BTH. The parameter type is DIRECTION (transmit and receive directions).
	• BTH	Both transmit and receive directions

## 14.9 INH-USER-SECU

(Cisco ONS 15454) The Inhibit User Security (INH-USER-SECU) command disables (without deleting) a user account, so the user is denied access to the NE. The user is disabled until reenabled by the ALW-USER-SECU command.

### Usage Guidelines

- This command does not forcibly log a user off. If the user is logged in, changes do not apply until after the user has logged off.
- The user is disabled until enabled using the corresponding ALW command.

### Category

Security

### Security

Superuser

### Input Format

INH-USER-SECU:[<TID>]::<CTAG>::<UID>;

### Input Example

INH-USER-SECU:PETALUMA::123::CISCO100;

### Input Parameters

<UID>	User identifier. UID is a string.
-------	-----------------------------------



# CHAPTER 15

## INIT Commands

---

This chapter provides initialize (INIT) commands for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.



### Note

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

---

### 15.1 INIT-REG-<MOD2>

(Cisco ONS 15454) Initialize Register for 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 5GIB, 8GFC, CHGRP, CLNT, D1VIDEO, DS1, DV6000, DVBA5I, E1, E3, E4, EC1, ESCON, ETRCLO, ETH, FSTE, G1000, GFPOS, GIGE, HDLC, HDTV, ISC1, ILK, ISCCOMPAT, ISC3PEER2R, ISC3PEER1G, ISC3PEER2G, OC12, OC192, OC3, OC48, OC768, OCH, OMS, OTS, OTU3, POS, STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C STS6C, STS9C, T1, T3, VC12, VC3, VT1, or VT2 (INIT-REG-<MOD2>) command initializes the performance monitoring (PM) registers.

#### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.



### Note

- The time period is always the current time period, and the previous time period counts are not cleared; therefore, neither MONDAT nor MONTM are supported in this command.
  - Unless otherwise stated, DS1 cards are the only cards that support the RCV and TRMT directions.
  - INIT-REG-<MOD2> can also be used to initialize the remote monitoring (RMON)-managed raw data.
- 

#### Category

Performance

#### Security

Provisioning

**Input Format**

INIT-REG-<MOD2>:[<TID>]:<AID>:<CTAG>::<MONTYPE>,,[<LOCN>],[<DIRN>],[<TMPER>]  
[,,];

**Input Examples**

INIT-REG-OC3:CISCO:FAC-1-1:1234::CVL,,NEND,BTH,15-MIN;

**Input Parameters**

<AID>	Access identifier from the “26.1 ALL” section on page 26-1. All of the STS, VT1, Facility, and DS1 AIDs are supported.
<MONTYPE>	Monitored type. The parameter type is ALL_MONTYPE (monitoring type list).
• AISSP	Alarm Indication Signal Seconds—Path
• ALL	All possible values
• BBE-PM	OTN—Background Block Errors—Path Monitor Point
• BBE-SM	OTN—Background Block Errors—Section Monitor Point
• BBER-PM	OTN—Background Block Error Ratio—Path Monitor Point expressed as one tenth of a percentage.
• BBER-SM	OTN—Background Block Error Ratio—Section Monitor Point expressed as one tenth of a percentage.
• BIEC	FEC—Bit Errors Corrected
• BIT-EC	the number of bit errors corrected by the FEC algorithm
• CGV	8B10B—Code Group Violations
• CSSP	Controlled Slip Seconds—Path (DSXM-12 FDL/T1.403 PM count)
• CVCPP	Coding Violations—CP-Bit Path
• CVL	Coding Violations—Line
• CVP	Coding Violations—Path
• CVS	Coding Violations—Section
• CVV	Coding Violations—Section
• DCG	8B10B—Data Code Groups
• ESAP	Errored Second Type A-Path (DS3XM-12 DS1 PM count)
• ESBP	Errored Second Type B-Path (DS3XM-12 DS1 PM count)
• ESCPP	Errored Seconds—CP—Bit Path
• ESL	Errored Seconds—Line
• ESNPFE	Errored Second—Network Path (DS3XM-12 DS1 PM count)
• ESP	Errored Seconds—Path
• ES-PM	OTN—Errored Seconds—Path Monitor Point
• ES-SM	OTN—Errored Seconds—Section Monitor Point
• ESR	Errored Second—Ratio
• ESR-PM	Errored Seconds Ratio—Path monitor Point expressed as one tenth of a percentage
• ESR-SM	Errored Seconds Ratio—Section monitor Point expressed as one tenth of a percentage
• ESS	Errored Seconds—Section

• ESV	Errored Seconds—VT Path
• etherStatsBroadcastPkts	The total number of good packets received that were directed to a multicast address
• etherStatsCollisions	Number of transmit packets that are collisions
• etherStatsCRCAlignErrors	The total number of packets received that have a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets
• etherStatsDropEvents	Number of received frames dropped at the port level
• etherStatsFragments	The total number of packets received that were less than 64 octets
• etherStatsJabbers	The total number of packets received that are longer than 1518 octets
• etherStatsOctets	The total number of octets of data
• etherStatsOversizePkts	The total number of packets received that are longer than 1518 octets
• etherStatsPkts	The total number of packets (including bad packets, broadcast packets, and multicast packets) received
• etherStatsUndersizePkts	The total number of packets received that are less than 64 octets
• FCP	Failure Count—Line
• FC-PM	OTN—Failure Count—Path Monitor Point
• FC-SM	OTN—Failure Count—Section Monitor Point
• HP-AR	Availability Ratio
• HP-BBE	High-Order Path Background Block Error
• HP-BBER	High-Order Path Background Block Error Ratio
• HP-EB	High-Order Path Errored Block
• HP-ES	High-Order Path Errored Second
• HP-ESA	High-Order Path Errored Seconds—A
• HP-ESB	High-Order Path Errored Seconds—B
• HP-ESR	High-Order Path Errored Second Ratio
• HP-FC	High-Order Path Failure Count
• HP-NPJC-PDET	High Order Path Negative Pointer Justification Count
• HP-NPJC-PGEN	High Order Path, Negative Pointer Justification Count
• HP-OI	Outage Intensity
• HP-PJCDIFF	High Order Path Pointer Justification Count Difference
• HP-PJCS-PDET	High Order Path Pointer Justification Count
• HP-PJCS-PGEN	High Order Path Pointer Justification Count Seconds
• HP-PPJC-PDET	High Order Path Positive Pointer Justification Count
• HP-PPJC-PGEN	High Order Path, Positive Pointer Justification Count
• HP-SEPI	The number of Severely Errored Period Intensity events in available time
• HP-SES	High-Order Path Severely Errored Seconds
• HP-SESR	High-Order Path Severely Errored Second Ratio
• HP-UAS	High-Order Path Unavailable Seconds
• ifInBroadcastPkts	Number of broadcast packets received since the last counter reset

• ifInDiscards	The number of inbound packets
• ifInErrorBytePkts	Receive Error Byte
• ifInErrors	The number of inbound packets (or transmission units) that contained errors
• ifInFramingErrorPkts	Receive Framing Error
• ifInJunkInterPkts	Receive Interpacket Junk
• ifInMulticastPkts	Number of multicast packets received since the last counter reset
• ifInOctets	Number of bytes transmitted since the last counter reset
• ifInUcastPkts	Number of unicast packets received since the last counter reset
• ifOutBroadcastPkts	Number of broadcast packets transmitted
• ifOutDiscards	The number of outbound packets
• ifOutErrors	The number of outbound packets (or transmission units) that could not be transmitted because of errors
• ifOutMulticastPkts	Number of multicast packets transmitted
• ifOutPayloadCrcErrors	Received payload cyclic redundancy check (CRC) errors
• ifOutUcastPkts	Number of unicast packets transmitted
• IOS	8B10—Idle Ordered Sets
• IPC	Invalid Packet Count
• LBCL-AVG	Average Laser Bias current in microA
• LBCL-MAX	Maximum Laser Bias current in microA
• LBCL-MIN	Minimum Laser Bias current in microA
• LBCN	Normalized Laser Bias Current for OC3-8
• LBCN-HWT	Laser Bias Current
• LBCN-LWT	Laser Bias Current
• LOSSL	Loss of Signal Seconds—Line
• LP-BBE	Low-Order Path Background Block Error
• LP-BBER	Low-Order Path Background Block Error Ratio
• LP-EB	Low-Order Path Errored Block
• LP-ES	Low-Order Path Errored Second
• LP-ESA	Low-Order Path Errored Seconds—A
• LP-ESB	Low-Order Path Errored Seconds—B
• LP-ESR	Low-Order Path Errored Second Ratio
• LP-FC	Low-Order Path Failure Count
• LP-NPJC-DET	Low-Order Negative Pointer Justification Count, Detected
• LP-NPJC-GEN	Low Order Negative Pointer Justification Count, Generated
• LP-PPJC-DET	Low-Order Positive Pointer Justification Count, Detected
• LP-PPJC-GEN	Low-Order Positive Pointer Justification Count, Generated
• LP-SEP	Low-Order Path Severely Errored Period
• LP-SEPI	Low-Order Path Severely Errored Period Intensity
• LP-SES	Low-Order Path Severely Errored
• LP-UAS	Low-Order Path Unavailable Seconds
• MS-PSC	Protection switch count

• MS-PSD	Protection switch duration
• NIOS	8B10B—Non Idle Ordered Sets
• NPJC-PDET	PPJC-PDET:Negative Pointer Justification
• NPJC-PGEN	PPJC-PGEN:Negative Pointer Justification
• OPR-AVG	Average Receive Power in tenths of a microW
• OPR-MAX	Maximum Receive Power in tenths of a microW
• OPR-MIN	Minimum Receive Power in tenths of a microW
• OPRN	Normalized Optical Receive Power for OC3-8
• OPRN-MAX	Maximum value for OPRN
• OPRN-MIN	Minimum value for OPRN
• OPT-AVG	Average Transmit Power in tenths of a microW
• OPT-MAX	Maximum Transmit Power in tenths of a microW
• OPT-MIN	Minimum Transmit Power in tenths of a microW
• OPTN	Normalized value for Optical Power Transmitted for the OC3-8 card
• OPTN-MAX	Maximum value for OPTN
• OPTN-MIN	Minimum value for OPTN
• OPWR-AVG	Optical Power—Average Interval Value in tenths of a dBm
• OPWR-MAX	Optical Power—Maximum Interval Value in tenths of a dBm
• OPWR-MIN	Optical Power—Minimum Interval Value in tenths of a dBm
• PPJC-PDET	PPJC-PDET:Positive Pointer Justification
• PPJC-PGEN	PPJC-PGEN:Positive Pointer Justification
• PSC	Protection Switching Count
• PSC-R	Protection Switching Count—Ring
• PSC-S	Protection Switching Count—Span
• PSC-W	Protection Switching Count—Working
• PSD	Protection Switching Duration
• PSD-R	Protection Switching Duration—Ring
• PSD-S	Protection Switching Duration—Span
• PSD-W	Protection Switching Duration—Working
• SASCPP	Severely Errored Framing/Alarm Indication Signal (AIS) Seconds—CP-Bit Path
• SASP	Severely Errored Framing/AIS Seconds Path
• SEFS	Severely Errored Framing Seconds
• SEFSP	Severely Errored Framing Seconds—Path (DS3XM-12 DS1 PM count)
• SESCPP	Severely Errored Second—CP-Bit Path
• SESL	Severely Errored Second—Line
• SESNPFE	Severely Errored Second—Network Path (DS3XM-12 DS1 PM count)
• SESP	Severely Errored Second—Path
• SES-PM	OTN—Severely Errored Second—Path

• SESR-PM	OTN—Severely Errored Second Ratio—Path Monitor Point expressed as one tenth of a percentage
• SESR-SM	OTN—Severely Errored Second Ratio—Section Monitor Point expressed as one tenth of a percentage
• SESS	Severely Errored Second—Section
• SES-SM	OTN—Severely Errored Second—Section Monitor Point
• SESV	Severely Errored Second—VT Path
• UASCPP	Unavailable Second—CP-Bit Path
• UASL	Unavailable Second—Line
• UASNPFE	Unavailable Second—Network Path (DS3XM-12 DS1 PM count)
• UASP	Unavailable Second—Path
• UAS-PM	OTN—Unavailable Second—Path Monitor Point
• UAS-SM	OTN—Unavailable Second—Section Monitor Point
• UASV	Unavailable Second—VT Path
• UNC-WORDS	FEC—Uncorrectable Words
• VPC	Valid Packet Count
<LOCN>	Location associated with a particular command in reference to the entity identified by the AID. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility
• NEND	Action occurs on the near end of the facility
<DIRN>	Direction relative to the entity identified by the AID. Defaults to ALL, which means that the command initializes all of the registers irrespective of the PM direction. The parameter type is DIRECTION (transmit and receive directions).
• BTH	Both transmit and receive directions
• RCV	Receive direction only
• TRMT	Transmit direction only
<TMPER>	Accumulation time period for performance counters. A null value defaults to 15-MIN. Defaults to 15-MIN. The parameter type is TMPER, which is the accumulation time period for the performance management center.
• 1-DAY	Performance parameter accumulation interval length; every 24-hours. For SONET PM data, only one day of history data is available. For RMON managed PM data, seven days of history data are available.
• 1-HR	Performance parameter accumulation interval length; every 1 hour. This is only applicable to RMON managed PM data. There are 24 hours of history data available.
• 1-MIN	Performance parameter accumulation interval length; every 1 minute. This is only applicable to RMON managed PM data. There are 60 minutes of history available.

• 15-MIN	Performance parameter accumulation interval length; every 15 minutes. There are 32 15-MIN buckets of history data available for this accumulation interval length.
• RAW-DATA	Performance parameter accumulation interval length; starting from the last time the counters were cleared. This is only applicable to RMON managed PMs.

## 15.2 INIT-SYS

(Cisco ONS 15454) The Initialize System (INIT-SYS) command initializes the specified card and its associated subsystems.

### Usage Guidelines

- This command cannot be executed if the network is in a Bidirectional Line Switched Ring (BLSR).
- The SLOT-ALL AID and the list AID are not allowed in this command.
- Only one level of reset is supported in this command for the ONS 15454.
- It is important that the standby TCC2/TCC2P/TCC3, TNC, and TSC should be up and running fully standby for a period of time before this command is sent on the active TCC2/TCC2PTCC3, TNC, and TSC. During this time, the system is vulnerable to traffic outages caused by timing disruptions or other causes.
- If a card is hard reset, it has to be in one of the following states: OOS-MA, MT; OOS-MA, DSBLD; OOS-AUMA, MT; OOS-AUMA, DSBLD.

### Category

System

### Security

Maintenance

### Input Format

INIT-SYS:[<TID>]:<AID>:<CTAG>::<PH>[,<CMDMDE=CMDMDE>];

### Input Examples

INIT-SYS:HOTWATER:SLOT-8:201::1,CMDMDE=FRCD;


### Input Parameters

<AID>	Access identifier from the <a href="#">“26.15 EQPT”</a> section on page 26-37.
<PH>	The phase. 1=soft reset; 2=hard reset. PH is an integer.  The PH parameter is supported on the CE-100T-8 and CE-MR-10 cards on the ONS 15454.

---

<CMDMDE>	(Optional) Command mode. Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in Unlocked-Enabled or Locked-Disabled, AutomaticInService service states.
• FRCD	Force the system to override a state in which the command would normally be denied.
• NORM	Execute the command normally. Do not override any conditions that could make the command fail.

---

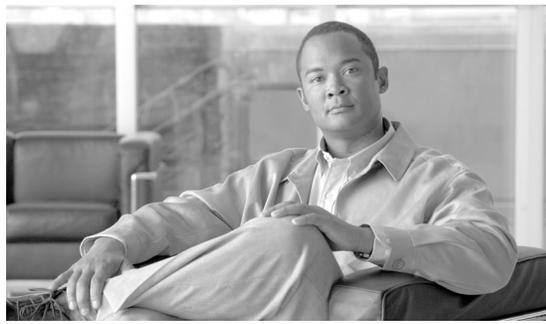

# CHAPTER 16

## OPR Commands

---



### Note

The terms "Unidirectional Path Switched Ring" and "UPSR" may appear in Cisco literature. These terms do not refer to using Cisco ONS 15xxx products in a unidirectional path switched ring configuration. Rather, these terms, as well as "Path Protected Mesh Network" and "PPMN," refer generally to Cisco's path protection feature, which may be used in any topological network configuration. Cisco does not recommend using its path protection feature in any particular topological network configuration.

---

This chapter provides operate (OPR) commands for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.



### Note

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

---

## 16.1 OPR-ACO-ALL

(Cisco ONS 15454) The Operate Alarm Cutoff All (OPR-ACO-ALL) command cuts off the office audible alarm indication without changing the local alarm indications.

---

### Usage Guidelines

This command does not have any effect on future alarms at the network element (NE); it directs the NE to provide conditioning only on those alarms that are currently active.

The ACO retires the Central Office (CO) alarm audible indicators without clearing the indicators that show that the trouble still exists. There is no need for a RLS-ACO command.

---

### Category

Environment

---

### Security

Maintenance

---

### Input Format

OPR-ACO-ALL:[<TID>]:[<AID>]:<CTAG>;

---

**Input Example** OPR-ACO-ALL:CISCO:SHELF-1:123;  
OPR-ACO-ALL:CISCO::123;

---

<b>Input Parameters</b>	<AID>	The node or shelf access identifier from the <a href="#">“26.26 SHELF”</a> section on page 26-52. If this parameter is omitted, the node or the first shelf of the node becomes the AID.
-------------------------	-------	--

---

## 16.2 OPR-ALS

(Cisco ONS 15454) The Operate Automatic Laser Shutdown (OPR-ALS) command is used to restart the laser of an OC-N facility and for all of the facilities that support the ALS feature.

---

**Usage Guidelines** None

---

**Category** Ports

---

**Security** Maintenance

---

**Input Format** OPR-ALS:[<TID>]:<AID>:<CTAG>[:...];

---

**Input Example** OPR-ALS:CISCO:FAC-1-1:100;

---

<b>Input Parameters</b>	<AID>	Access identifier from the <a href="#">“26.2 AidUnionId”</a> section on page 26-13.
-------------------------	-------	---

---

## 16.3 OPR-APC

(Cisco ONS 15454) The Operate Amplification Power Control (OPR-APC) command permits the APC application inside the NE to force regulation of the optical power to the entire dense wavelength division multiplexing (DWDM) ring.

---

**Usage Guidelines** None

---

**Category** DWDM

**Security** Maintenance

**Input Format** OPR-APC[:<TID>]:<AID>:<CTAG>[:<ROLE>];

**Input Example** OPR-APC:15454:WDMSIDE-A:123::;

**Input Parameters**

**Table 16-1 Input Parameter Support**

<AID>	Access identifier from the “26.34 WDMANS” section on page 26-59.
<ROLE>	The role the unit is playing in the protection group.
• PROT	The entity is the protection unit in the protection group.
• WORK	The entity is the working unit in the protection group.

## 16.4 OPR-EXT-CONT

(Cisco ONS 15454) The Operate External Control (OPR-EXT-CONT) command operates an external control and closes the external control contact. The control can be operated momentarily or continuously.

**Usage Guidelines**

- The duration has two values:
  - MENTRY: Momentary duration
  - CONTS: Continuous duration
- In an automatic state, the contact could be opened or closed depending on the provisioned trigger.
- RLS-EXT-CONT changes the state to automatic. Therefore, issuing an OPR-EXT-CONT command when the control is manually open and then issuing a RLS-EXT-CONT command will not revert the state back to Manual Open.
- A NULL value for the duration parameter defaults to MENTRY in this release.
- RLS-EXT-CONT is not allowed during the MENTRY duration. It is allowed for the CONTS duration. The length of the MENTRY duration is 2 seconds on the Cisco ONS 15454.
- RLS-EXT-CONT cannot change the state to automatic if the existing state is Manual Open.



**Caution**

Do not turn on external controls that activate a potential danger, such as sprinklers or other controls connected to possibly hazardous systems or equipment.

**Category** Environment

**Security**

Maintenance

**Input Format**

OPR-EXT-CONT:[&lt;TID&gt;]:&lt;AID&gt;:&lt;CTAG&gt;::[&lt;CONTTYPER&gt;],[&lt;DURATION&gt;];

**Input Example**

OPR-EXT-CONT:CISCO:ENV-OUT-2:123::AIRCOND,CONTS;

**Input Parameters**

<AID>	Access identifier from the “26.14 ENV” section on page 26-37. The AID must not be null.
<CONTTYPER>	Environmental control type. A null value is equivalent to ALL. The parameter type is CONTTYPER (the environmental control types).
• AIRCOND	Air conditioning
• ENGINE	Engine
• FAN	Fan
• GEN	Generator
• HEAT	Heat
• LIGHT	Light
• MISC	Miscellaneous
• SPKLR	Sprinkler
<DURATION>	Identifies the duration. A NULL value for the duration parameter defaults to CONTS (Continuous).
• CONTS	Continuous duration

## 16.5 OPR-LPBK-<MOD2>

(Cisco ONS 15454) The Operate Loopback for 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 5GIB, 8GFC, CLNT, D1VIDEO, DS1, DS3I, DV6000, E1, E3, E4, EC1, ESCON, ETRCLO, ETH, FSTE, G1000, GFPOS, GIGE, HDTV, OC12, OC192, OC3, OC48, OC768, OCH, OMS, OTS, OTU3, POS, STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, STS9C, T1, T3, VC12, VC3, VT1, or VT2 (OPR-LPBK-MMOD2) command operates a signal loopback on a traffic or a cross-connect card.

**Usage Guidelines**

- See [Table 28-1 on page 28-1](#) for supported modifiers by platform.
- The optional LPBKTYPE parameter defaults to FACILITY in this command if it is given to a port entity. It defaults to CRS if given to a synchronous transport signal (STS) entity.
- The value CRS for the LPBKTYPE parameter is applicable only for the STS modifier. The FACILITY and TERMINAL values are applicable to the ports.
- The TERMINAL loopback type is not supported for the DS1 line of a DS3XM card.
- Loopbacks are only allowed to be set up if the port/interface/STS\_PATH is in the OOS-MT or OOS-AINS state.
- Cross-connect loopbacks cannot be applied to the destination end of any 1WAY cross-connect.

- A cross-connect loopback can be applied only on one STS path of a cross-connect.
- FEAC loopbacks can be applied by using the LINE value for the LPBKTYPE parameter and specifying the LOCN as FEND. The FEAC loopbacks are supported only on the DS3(T3) and DS1 interfaces on the DS3XM-12 and DS3XM-6 card.
- FEAC loopbacks can be applied only if the DS3 is in C-bit framing format. FEAC loopbacks will override existing loopbacks at the near end on the entity and vice versa. This means that if a facility loopback has been applied on a port and the FEAC loopback is also applied, then the facility loopback is released first and the far-end loopback is applied.
- The LINE value is supported only with the FEND value of the LOCN parameter. FACILITY, TERMINAL, and CRS values are not compatible with the FEND value for the LOCN parameter.
- A lockout of the protection command is required before putting the span of either a two-fiber or four-fiber bidirectional line switched ring (BLSR) line in loopback.
  - A span lockout on one side (for example, the east side) of the two-fiber BLSR is required before operating a facility (or terminal) line loopback on the same side (that is, the east side) of the ring.
  - A span lockout on one protection side (for example, the east side) of the four-fiber BLSR is required before operating a facility (or terminal) line loopback on the same side working line (that is, the east side) of the ring.
- FEAC loopbacks on the DS-1 interface of a DS3XM card can be applied only if a Virtual Tributary (VT) connection has been created on the DS-1. An attempt to operate or release FEAC loopbacks in the absence of a VT connection will cause an error message.
- The FEAC line is supported only with the FEND value of the LOCN parameter on DS-1/ T3 of the DS3XM-12 card.
- Only the following MOD2 fields are supported in this release: DS1 EC1, G1000, FSTE, OC12, OC192, OC3, OC48, OCH, T1, T3, STS1, STS12C, STS192C, STS24C, STS3C, STS36C, STS48C, STS6C, STS9C, E1, 1GFC, 2GFC, 4GFC, 10GFC, 1GFICON, 2GFICON, 4GFICON, GIGE, 10GIGE, ESCON, STS18C, DV6000, ETRCLO, ISCCOMPAT, ISC3PEER1G, ISC3PEER2R, PASSTHRU, ISC3PEER2G.

**Note**

LINE and PAYLOAD values are applicable only with the FEND location value. PAYLOAD loopback can be applied by specifying the loopback type as PAYLOAD and the location as FEND.

**Category**

Troubleshooting and Test Access

**Security**

Maintenance

**Input Format**

OPR-LPBK-<MOD2>:[<TID>]:<AID>:<CTAG>::[<LOCATION>],,,[<LPBKTYPE>];

**Input Example**

OPR-LPBK-DS1:PTREYES:DS1-4-1-2-13:203::NEND,,,FACILITY;

<b>Input Parameters</b>	<AID>	Access identifier from the “26.1 ALL” section on page 26-1. The valid values for AID are BAND, CHANNEL, DS1, FACILITY, LINE, STS, and VT.
	<LOCATION>	The location where the operation is to be carried out. LOCATION defaults to NEND. The parameter type is LOCATION, which is the location where the action is to take place.
	<ul style="list-style-type: none"> <li>FEND</li> <li>NEND</li> </ul>	<ul style="list-style-type: none"> <li>Action occurs on the far end of the facility.</li> <li>Action occurs on the near end of the facility.</li> </ul>
	<LPBKTYPE>	Type of loopback signal. The parameter type is LPBK_TYPE, which indicates the type of loopback that is to be operated or released.
	<ul style="list-style-type: none"> <li>CRS</li> </ul>	Path-level loopback that is established at the cross-connect matrix level (the XCVT/XC10G card). An STS-level cross-connect loopback causes a path alarm indication signal (AIS-P) to be sent on the outgoing direction of transmission.
	<ul style="list-style-type: none"> <li>FACILITY</li> </ul>	Type of loopback that connects the incoming received signal immediately following the optical-to-electrical conversion (after descrambling) to the associated transmitter in the return direction.
	<ul style="list-style-type: none"> <li>LINE</li> </ul>	Line-level loopback for a far-end DS1 path loopback of the DS3XM. The DS3XM cards only support the DS1 path far-end FEAC loopback in this release.
	<ul style="list-style-type: none"> <li>TERMINAL</li> </ul>	A loopback that connects the signal that is about to be transmitted (after scrambling but before the electrical-to-optical conversion) and is connected to the associated, incoming receiver.

## 16.6 OPR-LPBK-EFM

(Cisco ONS 15454) The Operate Loopback Edit Ethernet in the First Mile (OPR-LPBK-EFM) command enables loopback on the Edit Ethernet in the First Mile (EFM) enabled port.

### Usage Guidelines

- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.

### Category

Ports

### Security

Provisioning

### Input Format

OPR-LPBK-EFM:[<TID>]:<AID>:<CTAG>;

### Input Example

OPR-LPBK-EFM::ETH-12-1-1:1;

<b>Input Parameters</b>	<AID>	Access identifier from the “26.16 ETH” section on page 26-40.
-------------------------	-------	---

## 16.7 OPR-PROTNSW-<MOD2DWDMPAYLOAD>

(Cisco ONS 15454) The Operate Protection Switch for 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 8GFC, D1VIDEO, DV6000, DVBASI, ETRCLO, FSTE, GIGE, HDTV, ISC1, ISC3, OTU3, or PASSTHRU (OPR-PROTNSW-<MOD2DWDMPAYLOAD>) command initiates a Y-cable protection switch request. User switch requests initiated with this command remain active until they are released through the RLS-PROTNSW-<MOD2DWDMPAYLOAD> command or are overridden by a higher priority protection switch request.

### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

The switch commands MAN (Manual Switch), FRCD (Forced Switch), and LOCKOUT (Lockout) are supported by the ONS 15454.

- Manual Switch of Protection Line (to Working Line). If the AID identifies the protection line in a 1+1 protection group, then service will be transferred from the protection line to the working line, unless a request of equal or higher priority is in effect.
- Manual Switch of Working Line (to Protection Line). If the AID identifies a working line, service will be switched from the working line to the protection line unless a request of equal or higher priority is in effect.
- Force Switch of Protection Line (to Working Line). If the AID identifies the protection line, service will be transferred from the protection line to the working line unless a request of equal or higher priority is in effect.
- Force Switch of Working Line (to Protection Line). If the AID identifies a working line, service will be transferred from the working line to the protection line unless a request of equal or higher priority is in effect. A lockout of protection and a signal fail of protection have higher priority than a Force switch command.
- Lockout of Protection Line. If the AID identifies the protection line, this switch command will prevent the working line from switching to protection line. If the working line is already in protection, then the protection line will be switched back to its original working line.
- Lockout of Working Line. If the AID identifies the working line, this switch command will prevent the working line from switching to protection line. If the working line is already in protection, then the working line will be switched back from the protection line to its original working line.

If the command is used against preprovisioned cards, the SROF (Protection Switching Failed) error is returned.

<b>Category</b>	DWDM
-----------------	------

<b>Security</b>	Maintenance
-----------------	-------------

<b>Input Format</b>	OPR-PROTNSW-<MOD2DWDMPAYLOAD>:[<TID>]:<SRC>:<CTAG>::<SC>[:];
---------------------	--

**Input Example** OPR-PROTNSW-HDTV:CISCO:FAC-1-1-1:100::FRCD;

Input Parameters		
<SRC>		Access identifier from the “26.17 FACILITY” section on page 26-40.
<SC>		Switch command that is to be initiated on the paths. The parameter type is SW.
	• APS-CLEAR	APS-CLEAR switch state. It is a read-only switch state and is not allowed in the OPR-PROTNSW-xxx commands.
	• CLEAR	CLEAR switch state. CLEAR switch state is not allowed in the OPR-PROTNSW-xxx commands.
	• EXERCISE	EXERCISE switch state. EXERCISE switch state is not allowed in the OPR-PROTNSW-xxx commands.
	• FRCD	Forces a switch unless another FRCD or LOCKOUT is in effect.
	• LOCKOUT	Locks the facility out of switching. The system cannot switch to this facility to carry service.
	• MAN	Requests a manual switch of the facility.

## 16.8 OPR-PROTNSW-<OCN\_TYPE>

(Cisco ONS 15454) The Operate Protection Switch for OC3, OC12, OC48, OC192, or OC768 (OPR-PROTNSW-<OCN\_TYPE>) command initiates a SONET line protection switch request. User switch requests initiated with this command remain active until they are released via the RLS-PROTNSW-OCN command or are overridden by a higher priority protection switch request.

**Usage Guidelines** See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

The switch commands; MAN (Manual Switch), FRCD (Forced Switch), and LOCKOUT (Lockout) are supported by the ONS 15454.

- Manual Switch of Protection Line (to Working Line). If the AID identifies the protection line in a 1+1 protection group, then service will be transferred from the protection line to the working line, unless a request of equal or higher priority is in effect.
- Manual Switch of Working Line (to Protection Line). If the AID identifies a working line, then service will be switched from the working line to the protection line unless a request of equal or higher priority is in effect.
- Force Switch of Protection Line (to Working Line). If the AID identifies the protection line, then (only in the 1+1 architecture) service will be transferred from the protection line to the working line unless a request of equal or higher priority is in effect.
- Force Switch of Working Line (to Protection Line). If the AID identifies a working line, then service will be transferred from the working line to the protection line unless a request of equal or higher priority is in effect. A lockout of protection and a signal fail of protection have higher priority than a Force switch command.
- Lockout of Protection Line. If the AID identifies the protection line, this switch command will prevent the working line from switching to protection line. If the working line is already in protection, then the protection line will be switched back to its original working line.

- Lockout of Working Line. If the AID identifies the working line, this switch command will prevent the working line from switching to the protection line. If the working line is already in protection, then the working line will be switched back from protection line to its original working line.

The following actions will return error messages:

- This command cannot be used for the common control cards (TCC2/TCC2P/TCC3 or XCVT/XC10G). A query on a common control card will generate an IIAC (Input, Invalid Access Identifier) error message. For common control card switching, use the SW-DX-EQPT and ALW-SWDX-EQPT commands.
- Sending this command to electrical cards will return an IIAC error message. For electrical card switching, use the ALW-SWTOPROTN/SWTOWKG-EQPT and INH-SWTOPROTN/SWTOWKG-EQPT commands.
- Sending this command to query on a card that is not in a protection group will return the SNVS (Status, Not in Valid State) error message.
- Sending this command to a working card that is failed or missing will return the SROF error message.
- Sending this command to a protect card that is failed or missing will return the SROF error message.
- Protection for preprovisioned cards will not succeed.
- Sending this command to a card that is already in protection with a higher priority will return the SSRD (Status, Switch Request Denied) error message.
- Sending this command to an OCN line with a switching mode that is already in process will return a SAMS (Already in the Maintenance State) error message.
- Sending this command with the EXERCISE or APS\_CLEAR switch operations will return an error SROF (Invalid Protection Switch Operation) because these operations are not valid according to Telcordia GR-833-CORE. The EX-SW-<OCN\_BLSR> is the correct command to perform the EXERCISE switch over the BLSR line.
- Protection switch will be denied if signal degrade/signal fail (SD/SF) is already present on the switching path. If SD/SF is generated on the switching path after the switch is performed, the switch will be overwritten by the APS\_CLEAR state. The switch will not be overwritten despite an SD or SF condition if the switch is a Lockout of Protection or a Force switch, because these switches have a higher priority than SD and SF.



#### Note

- To get the protection switching state (Manual, Force, and lockout), use the RTRV-COND-ALL or RTRV-ALM-ALL commands.
- If the far end of the same span has a higher protection switching state (for example, the near end is in the Manual protection state and the far end is in the Force protection state) the near-end protection switching state will be preemptive and will have an APS\_CLEAR switching state. The RTRV-PROTNSW-OCN command is used to retrieve the current switching state of a SONET line.
- Sending the following Manual ring switch requests on both east and west sides/spans of a two-fiber or four-fiber BLSR in less than 30 to 45 seconds will cause the system to execute only one (WEST) side BLSR query and preempt the other (EAST) side query.
  - A single TL1 command with both side/span AIDs (in the list AID format) of the same two-fiber or four-fiber ring.
  - The separated (via TL1, CTC, or TL1 and CTC user interfaces) queries on both sides/spans of the same two-fiber or four-fiber ring.

There will be no event messages for the preempted side, whose switching state will be in the APS-CLEAR state.

- DIRN is an optional parameter. A NULL value defaults to BTH for BLSR protection, BTH for 1+1 bidirectional protection, and RCV for 1+1 unidirectional protection.

DIRN follows these rules: TRMT will always fail for all protection groups. For two-fiber and four-fiber BLSR protection groups, both the RCV and TRMT directions will fail.

- DIRN is applicable for both 1+1 and BLSR protection groups. For example, OPR-PROTNSW can be performed on a BLSR span/ring as follows:

```
OPR-PROTNSW-OC48::FAC-5-1:A::LOCKOUT,SPAN:BTH;
```

- A Lockout of Protection command is required before putting the span of either a two-fiber or four-fiber BLSR line in loopback.
  - A span lockout on one side (for example, the east side) of the two-fiber BLSR is required before operating a facility (or terminal) line loopback on the same side (for example, the east side) of the ring.
  - A span lockout on one protection side (for example, the east side) of the four-fiber BLSR is required before operating a facility (or terminal) line loopback on the same side Working line (for example, the east side) of the ring.
- A span lockout on the working port is not supported in ONS 15454.

**Category**

Protection

**Security**

Maintenance

**Input Format**

```
OPR-PROTNSW-<OCN_TYPE>:[<TID>]:<AID>:<CTAG>::<SC>,[<SWITCHTYPE>][:<DIRN>];
```

**Input Example**

```
OPR-PROTNSW-OC48:CHICKALUMA:FAC-6-1:204::LOCKOUT,SPAN:BTH;
```

**Input Parameters**

<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on <a href="#">page 26-40</a> . Identifies the facility in the NE to which the switch request is directed.
<SC>	Switch command that is to be initiated on the paths. The parameter type is SW.
• APS-CLEAR	APS-CLEAR switch state. It is a read-only switch state and is not allowed in the OPR-PROTNSW-xxx commands.
• CLEAR	CLEAR switch state. The CLEAR switch state is not allowed in the OPR-PROTNSW-xxx commands.
• EXERCISE	EXERCISE switch state. The EXERCISE switch state is not allowed in the OPR-PROTNSW-xxx commands.
• FRCD	Forces a switch unless another FRCD or LOCKOUT is in effect.

• LOCKOUT	Locks the facility out of switching. The system cannot switch to this facility to carry service.
• MAN	Requests a manual switch of the facility.
<SWITCHTYPE>	BLSR switch type. The parameter type is SWITCH_TYPE (switch type).
• RING	BLSR ring switch type
• SPAN	BLSR span switch type
<DIRN>	The direction relative to the entity defined in the AID field. The direction of the switching. DIRN defaults to RCV. The parameter type is DIRECTION (transmit and receive directions).
• BTH	Both transmit and receive directions
• RCV	Receive direction only
• TRMT	Transmit direction only

## 16.9 OPR-PROTNSW-<PATH>

(Cisco ONS 15454) The Operate Protection Switch for STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, STS9C, VT1, or VT2 (OPR-PROTNSW-<PATH>) command initiates a path protection switch request. User switch requests initiated with this command (forced switch, lockout, and manual switch) remain active until they are released through the RLS-PROTNSW-<PATH> command or overridden by a higher priority protection switch request.

### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.



#### Note

- This command applies to path protection configurations only.
- The VTAID should be the working or protect AID only.
- If you send this command on the drop AID, a DENY (Invalid AID, should use working/protect AID) message will be returned.
- To retrieve the protection switching state (Manual, Force, lockout), use the RTRV-COND-ALL or RTRV-ALM-ALL commands.
- Telcordia GR-1400 does not allow the LOCKOUT\_OF\_WORKING command on the path protection WORKING path/AID. When sending this command on the path protection WORKING path, a SROF (Invalid Protection Switch Operation) is returned.
- If sending this command with EXERCISE or APS\_CLEAR switch operations, an SROF error will be returned because these operations are not valid according to Telcordia GR-833-CORE.
- A protection switch will be denied if an SD or SF condition is already present on the switching path. If an SD or SF is generated on the switching path after the switch is performed, the switch will be overwritten by the APS\_CLEAR state. The switch is not overwritten if it is a lockout of protection or a Force switch, because these switch types have a higher priority than SD/SF conditions.

### Category

Protection

## ■ OPR-PROTNSW-OCH

---

**Security** Maintenance

---

**Input Format** OPR-PROTNSW-<PATH>:[<TID>]:<SRC>:<CTAG>::<SC>[:];

---

**Input Example** OPR-PROTNSW-STS1:CISCO:STS-2-1-1:123::MAN;

---

Input Parameters		
<SRC>		Source access identifier from the “26.11 CrossConnectId” section on page 26-25.
<SC>		The switch command that is to be initiated on the paths. The parameter type is SW, which is the type of switch.
• APS-CLEAR		APS-CLEAR switch state. It is a read-only switch state and is not allowed in the OPR-PROTNSW-xxx commands.
• CLEAR		CLEAR switch state. The CLEAR switch state is not allowed in the OPR-PROTNSW-xxx commands.
• EXERCISE		EXERCISE switch state. The EXERCISE switch state is not allowed in the OPR-PROTNSW-xxx commands.
• FRCD		Forces a switch unless another FRCD or LOCKOUT is in effect.
• LOCKOUT		Locks the facility out of switching. The system cannot switch to this facility to carry service.
• MAN		Requests a manual switch of the facility.

---

## 16.10 OPR-PROTNSW-OCH

(Cisco ONS 15454) The Operate Protection Switch Optical Channel (OPR-PROTNSW-OCH) command performs a protection switch on the trunk port of a card that has splitter protection.

---

**Usage Guidelines** None

---

**Category** DWDM

---

**Security** Maintenance

---

**Input Format** OPR-PROTNSW-OCH:[<TID>]:<AID>:<CTAG>::<SW>;

---

**Input Example** OPR-PROTNSW-OCH:VA454-22:CHAN-2-2:100::FRCD;

<b>Input Parameters</b>	<AID>	Access identifier from the “26.8 CHANNEL” section on page 26-22. Indicates the trunk port.
	<SW>	Switch operation. The parameter type is SW, which is the type of switch.
	• APS-CLEAR	APS-CLEAR switch state. It is a read-only switch state and is not allowed in the OPR-PROTNSW-xxx commands.
	• CLEAR	CLEAR switch state. The CLEAR switch state is not allowed in the OPR-PROTNSW-xxx commands.
	• EXERCISE	EXERCISE switch state. The EXERCISE switch state is not allowed in the OPR-PROTNSW-xxx commands.
	• FRCD	Forces a switch unless another FRCD or LOCKOUT is in effect.
	• LOCKOUT	Locks the facility out of switching. The system cannot switch to this facility to carry service.
• MAN	Requests a manual switch of the facility.	

## 16.11 OPR-PROTNSW-OTS

(Cisco ONS 15454) The Operate Protection Switch OTS (OPR-PROTNSW-OTS) command performs a protection switch on the protection switch on the OTS ports of the PSM cards.

**Usage Guidelines** None

**Category** DWDM

**Security** Maintenance

**Input Format** OPR-PROTNSW-OTS:[<TID>]:<AID>:<CTAG>::<SW>;

**Input Example** OPR-PROTNSW-OTS:VA454-22:LINE-2-2-RX:100::FRCD;

<b>Input Parameters</b>	<AID>	The CHAN aid is used to access Optical Channels (OCH) layer of Optical Network/Client units. Applicable only to 15454 for SONET. Format is CHAN-[slot]-[port]-[direction] Values
	<SW>	The type of switch to be initiated.

## 16.12 OPR-RAMAN

(Cisco ONS 15454) The Operate RAMAN (OPR-RAMAN) command operates the Raman amplifier.

**Usage Guidelines** None

**Category** DWDM

**Security** Maintenance

**Input Format** OPR-RAMAN:[<TID>]:<AID>:<CTAG>:::[RAMANACT=<RAMANACT>],[AID2=<AID2>],[MEASIDX=<MEASIDX>],[RAMANST=<RAMANST>],[LAMBDA=<LAMBDA>],[DELTAPWR=<DELTAPWR>];

**Input Example** OPR-RAMAN::LINE-2-5-TX:AA:::RAMANACT=DO-TEST,AID2=LINE-2-5-RX,RAMANST=MEASURE,LAMBDA=1,DELTAPWR=0.0;

<b>Input Parameters</b>	<AID>	The LINE aid is used to access Optical Transport Section (OTS) layer of Optical Network units. Applicable only to 15454 DWDM in SONET. Format is LINE-[slot]-[port]-[direction].
	<ul style="list-style-type: none"> <li>LINE[-{1-30}]-{1-5,12-16}-{1-5}-{RX,TX}</li> </ul>	The receive/transmit Lines (COM=1, OSC=2, LINE=3, DC=4, RAMAN=5) in a OPT-RAMP-C cards. Where format is LINE-[shelf]-[slot]-[port]-[dirn]
	<ul style="list-style-type: none"> <li>LINE[-{1-30}]-{1-5,12-16}-{1-5}-ALL</li> </ul>	All the Lines (COM=1,OSC=2,LINE=3, DC=4, RAMAN=5) in a OPT-RAMP-C cards. Where format is LINE-[shelf]-[slot]-[port]-ALL
	<RAMANACT>	RAMAN action
	<ul style="list-style-type: none"> <li>DO-MEASURE</li> <li>DO-RSTSM</li> <li>DO-TEST</li> <li>RESTORE</li> <li>DO-CALCPAR</li> <li>ACCEPT</li> <li>FORCE-UPD</li> </ul>	<ul style="list-style-type: none"> <li>Starts RAMAN Measure.</li> <li>Restarts RAMAN SM.</li> <li>Starts RAMAN test.</li> <li>Restores after RAMAN test.</li> <li>Calculates RAMAN parameters.</li> <li>Accepts tuning parameters.</li> <li>Restores Raman after fiber cut.</li> </ul>
	<AID2>	The LINE aid is used to access Optical Transport Section (OTS) layer of Optical Network units. Applicable only to 15454 DWDM in SONET. Format is LINE-[slot]-[port]-[direction]
	<ul style="list-style-type: none"> <li>LINE[-{1-30}]-{1-5,12-16}-{1-5}-{RX,TX}</li> </ul>	The receive/transmit Lines (COM=1, OSC=2, LINE=3, DC=4, RAMAN=5) in a OPT-RAMP-C cards. Where format is LINE-[shelf]-[slot]-[port]-[dirn].
	<ul style="list-style-type: none"> <li>LINE[-{1-30}]-{1-5,12-16}-{1-5}-ALL</li> </ul>	All the Lines (COM=1,OSC=2,LINE=3, DC=4, RAMAN=5) in a OPT-RAMP-C cards. Where format is LINE-[shelf]-[slot]-[port]-ALL.
	<MEASIDX>	The RAMAN measure index.
	<RAMANST>	Indicates the Raman setup state.

• NOT-TUNED	RAMAN is not tuned. Default values are set
• TUNING	RAMAN is tuning
• TUNED	RAMAN is tuned but not verified
• FORCE-TUNED	RAMAN is tuned with values not measured but calculated
• ACCEPTED-TUNED	RAMAN setup has been accepted by the user
• TUNED-VERIFIED	RAMAN is tuned and verified
<LAMBDA>	The enumerate number used to indicate the wavelength inside an optical channel port
<DELTAPWR>	The delta power to add at each node interested in the Raman setup. DELTAPWR is a float.

## 16.13 OPR-SLV-WDMANS

(Cisco ONS 15454) The Operate Span Loss Verification Wavelength Division Multiplexing Automatic Node Set-Up (OPR-SLV-WDMANS) command performs the calculation of the expected span loss verification.

**Usage Guidelines** None

**Category** DWDM

**Security** Maintenance

**Input Format** OPR-SLV-WDMANS[:<TID>]:<AID>:<CTAG>[:<ROLE>];;

**Input Example** OPR-SLV-WDMANS:VA454-22:WDMSIDE-E:116;

**Input Parameters** <AID> Access identifier from the [“26.34 WDMANS”](#) section on page 26-59.

## 16.14 OPR-SYNCNSW

(Cisco ONS 15454) The Operate Synchronization Switch (OPR-SYNCNSW) command initiates a switch to the reference specified by the synchronization reference number if the reference supplied is valid and of the same quality.

**Usage Guidelines**

For manual types of switches, the reference where you want to switch should be of the same quality as the active reference source; otherwise, the command will fail.

If you want to switch to a reference of lower quality, use the Force switch option.

The Operate Synchronization Switches are released by the RLS-SYNCNSW command or are overridden by a synchronization reference failure.

After the switch is effective, the MANSWTOPRI (Manual Switch to Primary or Secondary Reference) minor alarm will be raised.

**Category**

Synchronization

**Security**

Maintenance

**Input Format**

```
OPR-SYNCNSW:[<TID>]:[<AID>]:<CTAG>::<SWITCHTO>,[<SC>];
```

**Input Example**

```
OPR-SYNCNSW:CISCO:SYNC-NE:3::PRI,MAN;
```

**Input Parameters**

<AID>	Access identifier from the “ <a href="#">26.30 SYNC_REF</a> ” section on <a href="#">page 26-58</a> . The default is SYNC-NE.
<SWITCHTO>	Access identifier from the “ <a href="#">26.31 SYNCNSW</a> ” section on <a href="#">page 26-58</a> . Identifies the new synchronization reference that will be used.
<SC>	Switch command to be initiated on the paths. Only MAN and FRCD switches are allowed for this command. The parameter type is SW, which is the type of switch.
<ul style="list-style-type: none"> <li>FRCD</li> <li>MAN</li> </ul>	<ul style="list-style-type: none"> <li>Forces a switch unless another FRCD or LOCKOUT is in effect.</li> <li>Requests a manual switch of the facility.</li> </ul>

## 16.15 OPR-VLB-REP

(Cisco ONS 15454) The Operate VLAN Load Balancing Resilient Ethernet Protocol (OPR-VLB-REP) command manually triggers the VLAN Load Balancing (VLB) on REP segment.

**Usage Guidelines**

- Enable VLB on the ports to activate VLB.
- This command is applicable only to GE\_XP and 10GE\_XP cards.

**Category**

Ethernet

---

**Security** Provisioning

---

**Input Format** OPR-VLB-REP:[<TID>]:<AID>:<CTAG>:::<TRIGGERTYPE>;

---

**Input Example** OPR-VLB-REP::ETH-16-2-1:1::ACTIVATE;

---

<b>Input Parameters</b>	<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
	<TRIGGERTYPE>	Indicates the TRIGGERTYPE.
	• ACTIVATE	Activates manual trigger.
	• DEACTIVATE	De-activates manual trigger.

---

## 16.16 OPR-WDMANS

(Cisco ONS 15454) The Operate Wavelength Division Multiplexing Automatic Node Set Up (OPR-WDMANS) command initiates the Automatic Optical Node Set Up (AONS) application inside the NE to force a recompute of the value assigned to all variable optical attenuators (VOAs) representing the optical path inside the node.

---

**Usage Guidelines** None

---

**Category** DWDM

**OPR-WDMANS**

---

**Security** Maintenance

---

**Input Format** OPR-WDMANS:[<TID>]::<CTAG>[:];

---

**Input Example** OPR-WDMANS:PENNGROVE::114;



# CHAPTER 17

## REPT Messages

This chapter provides report (REPT) messages for the Cisco ONS 15454.



**Note**

The REPT commands do not apply to the Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

### 17.1 REPT ALM <MOD2ALM>

(Cisco ONS 15454) The Report Alarm for 1GFC, 1GFICON, 2GFC, 2GFICON, CLNT, DS1, E100, E1000, E3, E4, EC1, ETH, FSTE, G1000, GFPOS, GIGE, ILK, ISCCOMPAT, ISC3PEER2R, ISC3PEER1G, ISC3PEER2G, OC12, OC192, OC3, OC48, OCH, OMS, OTS, POS, STM1, STM4, STM16, STM64, STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS6C, STS9C, T1, T3, UDCDCC, UDCF, VC3, VC4, VC4-2c, VC4-3c, VC4-4c, VC4-8c, VC4-16c, VC4-64c, VC12, VCG, VT1, VT2, or WLEN (REPT ALM <MOD2ALM>) message reports an alarm condition against a facility, an RPR interface, or a path.

#### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

#### Category

Fault

#### Security

Retrieve

#### Output Format

```
SID DATE TIME
** ATAG REPT ALM <MOD2ALM>
  "<AID>:<NTFCNCDE>,<CONDTYPE>,<SRVEFF>,<OCRDAT>],
  [<OCRTM>],[<LOCN>],[<DIRN>]:[<DESC>],[<AIDDET>]"
;
SID DATE TIME
** ATAG REPT ALM <MOD2ALM>
  "<AID>:<NTFCNCDE>,<CONDTYPE>,<SRVEFF>,<OCRDAT>],[<OCRTM>],[<LOCN>],
  [<DIRN>]:[<DESC>],[<AIDDET>]"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
** 100.100 REPT ALM 1GFC
“FAC-2-1:MJ,LOS,SA,08-01,14-25-59,,:\“LOSS OF SIGNAL\”,OC12”
;
```

**Output Parameters**

Parameter	Description
<AID>	Access identifier from the <a href="#">“26.19 LINE” section on page 26-43</a> .
<NTFCNCDE>	Two-letter notification code. The parameter type is NOTIF_CODE, which is a two-character notification code associated with an autonomous message.
<ul style="list-style-type: none"> <li>CL</li> <li>CR</li> <li>MJ</li> <li>MN</li> <li>NA</li> <li>NR</li> </ul>	<ul style="list-style-type: none"> <li>The condition causing the alarm has cleared</li> <li>A critical alarm</li> <li>A major alarm</li> <li>A minor alarm</li> <li>The condition is not alarmed</li> <li>The alarm is not reported</li> </ul>
<CONDTYPE>	Condition type for an alarm or a reported event. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, Not Alarmed conditions (NA), and Not Reported (NR) conditions. See the <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.
<SRVEFF>	The effect on service caused by the standing alarm or condition. The parameter type is SERV_EFF, which is the effect of the alarm on service.
<ul style="list-style-type: none"> <li>NSA</li> <li>SA</li> </ul>	<ul style="list-style-type: none"> <li>The condition is non-service affecting</li> <li>The condition is service affecting</li> </ul>
<OCRDAT>	(Optional) Date
<OCRTM>	(Optional) Time
<DESC>	(Optional) Condition description.
<AIDDET>	(Optional) AIDDET uses the same addressing rules as the AID, but specifies AID type and additional details about the entity being managed. The parameter type is EQPT_TYPE, which is the type of equipment being provisioned into a slot.
<ul style="list-style-type: none"> <li>15216-MD-40-EVEN</li> <li>15216-MD-40-ODD</li> <li>15216-MD-ID-50</li> <li>15216-FLD4-30-3</li> </ul>	<ul style="list-style-type: none"> <li>Thermal Multiplex/Demultiplex Passive Unit, spaced at 50 GHz on even grid</li> <li>Thermal Multiplex/Demultiplex Passive Unit, spaced at 50 GHz on odd grid</li> <li>Thermal Interleaver Passive Unit, spaced at 50 GHz grid</li> <li>Edge 4-Ch Bi-Directional OADM Module 1530.33 to 1532.68</li> </ul>

Parameter	Description
• 15216-FLD4-33-4	Edge 4-Ch Bi-Directional OADM Module 1533.47 to 1535.82
• 15216-FLD4-36-6	Edge 4-Ch Bi-Directional OADM Module 1536.61 to 1538.98
• 15216-FLD4-39-7	Edge 4-Ch Bi-Directional OADM Module 1539.77 to 1542.14
• 15216-FLD4-42-9	Edge 4-Ch Bi-Directional OADM Module 1542.94 to 1545.32
• 15216-FLD4-46-1	Edge 4-Ch Bi-Directional OADM Module 1546.12 to 1548.51
• 15216-FLD4-49-3	Edge 4-Ch Bi-Directional OADM Module 1549.32 to 1551.72
• 15216-FLD4-52-5	Edge 4-Ch Bi-Directional OADM Module 1552.52 to 1554.94
• 15216-FLD4-55-7	Edge 4-Ch Bi-Directional OADM Module 1555.75 to 1558.17
• 15216-FLD4-58-9	Edge 4-Ch Bi-Directional OADM Module 1558.98 to 1561.42
• 32DMX-L	32-channel demultiplexer for L-band
• 32WSS-L	32-channel wavelength switch selector for L-band
• 40G-MXP-C	40 Gbit/Sec Multirate Muxponder
• 40-SMR1-C	The single module 40-channel ROADM on C-band
• 40-SMR2-C	The single module 40-channel ROADM with EDFA on C-band
• 40G-TXP-C	40 Gigabits per second Multirate Transponder
• 80-WXC-C	80-channel wavelength cross-connect spaced at 100 GHz grid
• AD-1B	Optical Add/Drop Multiplexer (OADM) 1-Band Filter
• AD-1C	OADM 1-Channel Filter
• AD-2C	OADM 2-Channel Filter
• AD-4B	OADM 4-Band Filter
• AD-4C	OADM 4-Channel Filter
• ADM-10G	12 x OC3/OC12/OC48/GIGE and OC192/Trunk ADM 10 Gbit/Sec.
• AICI	AIC-I card
• AIP	Alarm Indication Panel
• ALM-PWR	Alarm Power
• BP	The backplane of the NE
• CE-100T-8	8-port 100T card
• CE-1000-4	4-port GIGE mapper card
• CRFT-TMG	Craft Timing
• DCC	The Data Communications Channel
• DCU	Dispersion Compensation Unit

Parameter	Description
• DMX-32	Optical De/Multiplexed (DMX) 32 Channels
• DS3i-N-12	DS3i-N-12 card
• E1	E1 card
• E1-42	42-port E1 card
• E1000T-2	2-port interface card supporting 1000BaseT Ethernet facilities
• E100T-12	12-port interface card supporting 100BaseT Ethernet facilities
• E100T-4	Four-port interface card supporting 100BaseT Ethernet facilities
• E1N	E1N card
• E3	E3 card
• FMEC-155E-1TO1	The equipment type for FMEC STM1E12 card
• FMEC-155E-1TO3	The equipment type for FMEC STM1E12 card with 1:3 protection
• FMEC-155E-UNPROT	The equipment type for FMEC STM1E12 card without protection
• FMEC-SMZ-E1	FMEC card corresponding to E1 card
• FMEC-SMZ-E3	FMEC card corresponding to E3 card
• FTA	Fan Tray of the NE
• FTA1	Fan Tray 1 of the NE
• FTA2	Fan Tray 2 of the NE
• G1K-4	G1K-4 card
• MD-4	Optical Multiplexer/Demultiplexer with 4 Channels
• MESH-PP-SMR	The passive unit Patch Panel device used to connect up to four 40-SMR2-C cards.
• ML100X-8	8-port 100T card with optical interface
• ML-100T-8	(Cisco ONS 15454) Exige/Elise mapper card
• ML-1000-2	(Cisco ONS 15454) Daytona 2-port GigE
• ML-100T-12	((Cisco ONS 15454) Daytona) 12-port FSTE
• MRC-12	12-port
• MRC-2.5G-4	12G (4 * 2.5G) Muxponder card
• MRC-2.5G-12	12G (4 * 2.5G) Muxponder card
• MMU	Multiring mesh upgrade unit
• MS-ISC-100T	Fast Ethernet switch card used for internal shelf connection
• MUX-32	Optical Multiplexer (MUX) 32 Channels
• MXP-2.5G-10G	10G (4 * 2.5G) Muxponder card
• MXP-MR-10DME	10 Gbps datamux with enhanced FEC
• OC12	An interface card that supports one or more OC-12 (622 Mbps) optical facilities
• OC12-4	A four-port OC12 card

Parameter	Description
• OC12-IR-1	An interface card that supports one intermediate-range OC-12 (622 Mbps) optical facilities
• OC12-LR-1	An interface card that supports one long-range OC-12 (622 Mbps) optical facilities
• OC12-SR-1	An interface card that supports one short-range OC-12 (622 Mbps) optical facilities
• OC192-LR-1	An interface card that supports one or more OC-192 optical facilities
• OC192-XFP	OC192 XFP
• OC3	An interface card that supports multiple OC-3 (155 Mbps) optical facilities
• OC3-IR-4	An interface card that supports four intermediate-range OC-3 (155 Mbps) optical facilities
• OC3-SR-4	An interface card that supports four short-range OC-3 (155 Mbps) optical facilities
• OC3ATM-IR-6	An interface card that supports six intermediate-range OC-3 (155 Mbps) ATM optical fibers
• OC3IR-STM1SH-1310-8	An OC3 card which has 8 ports over the lower speed slot of the ONS 15454 with XC10G short-range OC-48 (10 Gbps) optical facilities
• OC3POS-SR-4	An interface card that supports four short-range OC-3 (155 Mbps) POS optical facilities
• OC48	An interface card that supports one or more OC-48 optical facilities
• OC48-AS-1	An interface card that supports one short-range OC-48 (10 Gbps) optical facilities that can be provisioned in any input/output (I/O) slot
• OC48-ELR-1	An interface card that supports one short-range OC-48 (2.5 Gbps) optical facility
• OC48-IR-1	An interface card that supports one intermediate-range OC-48 (10 Gbps) optical facility
• OC48-LR-1	An interface card that supports one long-range OC-48 (10 Gbps) optical facility
• OC48-SR-1	An interface card that supports one
• OPT-AMP-L	Optical preamplifier card for L-band
• OPT-BST	Optical booster amplifier
• OPT-BST-L	Optical booster for L-band
• OPT-EDFA-17	MAL-less EDFA Optical Amplifier - C-band - 17dB Gain
• OPT-EDFA-24	MAL-less EDFA Optical Amplifier - C-band - 24dB Gain
• OPT-PRE	Optical Preamplifier
• OPT-RAMP-C	Raman pump amplifier C-band
• OPT-RAMP-CE	An extended version of Raman pump amplifier
• OPT-RAMP-COP	Raman COP card
• OPT-RAMP-CTP	Raman CTP card

Parameter	Description
• OPT-RAMP-E	Raman pump amplifier E-band
• OSC-CSM	Optical Service Channel with Combiner/Separator Module
• OSCM	Optical Service Channel (OSC) Module
• OTU2-XP	A 4x10G transponder that is capable to operate with multiple bit rates - 10G FC, 10GE, and OC192/STM64
• PIM-4	Pluggable interface module with 4 pluggable port module (PPM) slots
• PP-4-SMR	Patch-Panel, 4 degrees, for SMR cards
• PP-MESH-4	Patch-Panel, 4 degrees
• PP-MESH-8	Patch-Panel, 8 degrees
• PPM-1	Pluggable port module with 1 port SFP module
• PSM	Protection Service Module card
• PTM-4	Line card
• PTF-4	Fabric card
• PTSA	CPT 50 panel
• PTSYSFan-Out-Group	PTSYS Fan-Out-Group
• SHELF	Shelf entity
• SHELF-M2	SHELF-M2
• SHELF-M6	SHELF-M6
• STM4	An interface card that supports one or more STM4 (622 Mbps) optical facilities
• STM4-4	A four port STM4 card
• STM4-IR-1	An interface card that supports one intermediate range STM4 (622 Mbps) optical facilities
• STM4-LR-1	An interface card that supports one long range STM4 (622 Mbps) optical facilities
• STM4-SR-1	An interface card that supports one short range STM4 (622Mbps) optical facilities
• STM64-4	A four port STM64 card
• STM64-LR-1	An interface card that supports one or more STM64 optical facilities
• STM1	An interface card that supports multiple STM1 (155 Mbps) optical facilities
• STM1-IR-4	An interface card that supports four intermediate range STM1 (155 Mbps) optical facilities
• STM1-SR-4	An interface card that supports four short range STM1 (155 Mbps) optical facilities
• STM1ATM-IR-6	An interface card that supports six intermediate range STM1 (155 Mbps) asynchronous transfer mode (ATM) optical fibers
• STM1IR-STM1SH-1310-8	An STM1 card that has 8 ports over the lower speed slot of the ONS 15454 SDH with XC-VXL-10G/XC-VXL-2.5G

Parameter	Description
• STM1POS-SR-4	An interface card that supports four short range STM1 (155 Mbps) packet-over-SDH (POS) optical facilities
• STM16	An interface card that supports one or more STM16 (10 Gbps) optical facilities
• STM16-AS-1	An interface card that supports one short range OC-48 (10 Gbps) optical facilities that can be provisioned in any I/O slot
• STM16-ELR-1	An interface card that supports one short range STM16 (2.5 Gbps) optical facility
• STM16-IR-1	An interface card that supports one intermediate range STM16 (10 Gbps) optical facility
• STM16-LR-1	An interface card that supports one long range STM16 (10 Gbps) optical facility
• STM16-SR-1	An interface card that supports one short range STM16 (10 Gbps) optical facilities
• TCC	Timing, Communications, and Control card
• TDC-CC	Coarse tunable dispersion compensation unit
• TDC-FC	Fine tunable dispersion compensation unit
• TNC	Transport Node Controller card
• TSC	Transport Shelf Controller card
• TXP-MR-10G	10G Multirate Transponder card
• TXP-MR-2.5G	Multirate 2.5G Unprotected
• TXPP-MR-2.5G	Multirate 2.5G Protected
• UNKNOWN	Unknown equipment type
• UNPROVISIONED	Unprovisioned equipment type
• XC-VXC-10G	XC-VXC-10G cross-connect card
• XCVXL-10G	XC-VXL-10G cross-connect card
• XCVXL-2.5G	XC-VXL-2.5G cross-connect card

## 17.2 REPT ALM BITS

(Cisco ONS 15454) The Report Alarm Building Integrated Timing Supply (REPT ALM BITS) message reports an alarm condition on a BITS facility.

**Usage Guidelines** None

**Category** Synchronization

**Security** Retrieve

**Output Format**

```
SID DATE TIME
** ATAG REPT ALM BITS
"<AID>:<NTFCNCDE>,<CONDTYPE>,<SRVEFF>,[<OCRDAT>],[<OCRTM>],[<LOCN>],
[<DIRN>]:[<DESC>]"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
** 100.100 REPT ALM BITS
"BITS-1:MJ,SYNC,SA,08-01,14-25-59,,:\"LOSS OF TIMING\""
;
```

**Output Parameters**

<AID>	Access identifier from the <a href="#">“26.6 BITS” section on page 26-21</a> .
<NTFCNCDE>	Two-letter notification code. The parameter type is NOTIF_CODE, the two-character notification code associated with an autonomous message.
<ul style="list-style-type: none"> <li>• CL</li> <li>• CR</li> <li>• MJ</li> <li>• MN</li> <li>• NA</li> <li>• NR</li> </ul>	<ul style="list-style-type: none"> <li>The condition causing the alarm has cleared.</li> <li>A critical alarm.</li> <li>A major alarm.</li> <li>A minor alarm.</li> <li>The condition is not alarmed.</li> <li>The alarm is not reported.</li> </ul>
<CONDTYPE>	The condition type for an alarm or a reported event. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, Not-Alarmed conditions (NA), and Not-Reported (NR) conditions. See <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.
<OCRDAT>	(Optional) Date
<OCRTM>	(Optional) Time
<SRVEFF>	The effect on service caused by the standing alarm or condition. The parameter type is SERV_EFF, which is the effect of the alarm on service.
<ul style="list-style-type: none"> <li>• NSA</li> <li>• SA</li> </ul>	<ul style="list-style-type: none"> <li>The condition is non-service affecting.</li> <li>The condition is service affecting.</li> </ul>
<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
<ul style="list-style-type: none"> <li>• FEND</li> <li>• NEND</li> </ul>	<ul style="list-style-type: none"> <li>Action occurs on the far end of the facility.</li> <li>Action occurs on the near end of the facility.</li> </ul>
<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
<ul style="list-style-type: none"> <li>• BTH</li> </ul>	Both transmit and receive directions

• RCV	Receive direction only
<DESC>	(Optional) Condition description.

## 17.3 REPT ALM COM

(Cisco ONS 15454) The Report Alarm Common (REPT ALM COM) message reports an alarm condition when an AID cannot be given. For example, a fan failure is reported using this message.

**Usage Guidelines** None

**Category** Fault

**Security** Retrieve

**Output Format**

```
SID DATE TIME
** ATAG REPT ALM COM
“[<AID>]:<NTFCNCDE>,<CONDTYPE>,<SRVEFF>,<OCRDAT>],[<OCRTM>],[<LOCN>],
[<DIRN>]:[<DESC>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
** 100.100 REPT ALM COM
“COM:MJ,FAN,NSA,08-01,14-25-59,,:\“FAN FAILURE\””
;
```

<b>Output Parameters</b>	<AID>	(Optional) Access identifier. Identifies the entity to which the command pertains. Indicates an alarm without AID. AID is a string.
	<NTFCNCDE>	Two-letter notification code. The parameter type is NOTIF_CODE, which is the two-character notification code associated with an autonomous message.
	• CL	The condition causing the alarm has cleared.
	• CR	A critical alarm.
	• MJ	A major alarm.
	• MN	A minor alarm.
	• NA	The condition is not alarmed.
	• NR	The alarm is not reported.

<CONDTYPE>	The condition type for an alarm or a reported event. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether it generates a trouble notification). Reported conditions include alarms, Not-Alerted conditions (NA), and Not-Reported (NR) conditions. See <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.
<OCRDAT>	(Optional) Date
<OCRTM>	(Optional) Time
<SRVEFF>	The effect on service caused by the standing alarm or condition. The parameter type is SERV_EFF, which is the effect of the alarm on service.
<ul style="list-style-type: none"> <li>• NSA</li> <li>• SA</li> </ul>	<p>The condition is non-service affecting.</p> <p>The condition is service affecting.</p>
<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
<ul style="list-style-type: none"> <li>• FEND</li> <li>• NEND</li> </ul>	<p>Action occurs on the far end of the facility.</p> <p>Action occurs on the near end of the facility.</p>
<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
<ul style="list-style-type: none"> <li>• BTH</li> <li>• RCV</li> </ul>	<p>Both transmit and receive directions</p> <p>Receive direction only</p>
<DESC>	(Optional) Condition description.

## 17.4 REPT ALM ENV

(Cisco ONS 15454) The Report Alarm Environment (REPT ALM ENV) message reports a customer-defined condition on an environmental alarm input.

### Usage Guidelines

None

### Category

Environment

### Security

Retrieve

### Output Format

```
SID DATE TIME
** ATAG REPT ALM ENV
"<AID>:<NTFCNCDE>,<ALMTYPE>,<OCRDAT>,<OCRTM>,<DESC>]"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
** 100.100 REPT ALM ENV
"ENV-IN-1:MJ,OPENDR,08-01,14-25-59,\"OPEN DOOR\""
;
```

**Output Parameters**

<AID>	Access identifier from the <a href="#">“26.14 ENV”</a> section on page 26-37. Identifies an environmental input.
<NTFCNCDE>	Two-letter notification code. The parameter type is NOTIF_CODE, which is a two-character notification code associated with an autonomous message.
• CL	The condition causing the alarm has cleared.
• CR	A critical alarm.
• MJ	A major alarm.
• MN	A minor alarm.
• NA	The condition is not alarmed.
• NR	The alarm is not reported.
<ALMTYPE>	Abbreviated code identifying the alarm. The parameter type is ENV_ALM, which is the environmental alarm types.
• AIRCOMPR	Air compressor failure
• AIRCOND	Air conditioning failure
• AIRDRYR	Air dryer failure
• BATDSCHRG	Battery discharging
• BATTERY	Battery failure
• CLFAN	Cooling fan failure
• CPMAJOR	Centralized power major failure
• CPMINOR	Centralized power minor failure
• ENGINE	Engine failure
• ENGOPRG	Engine operating
• ENGTRANS	Standby engine transfer
• EXPLGS	Explosive gas
• FIRDETR	Fire detector failure
• FIRE	Fire
• FLOOD	Flood
• FUELLEAK	Fuel leak
• FUSE	Fuse failure
• GASALARM	Explosive gas, toxic gas, ventilation fail, or gas monitor fail
• HATCH	Controlled Environment Vault (CEV) hatch fail
• GEN	Generator failure
• HIAIR	High airflow
• HIHUM	High humidity
• HITEMP	High temperature
• HIWTR	High water

• INTRUDER	Intrusion
• LEVELCON	Level converter
• LVDADSL	Secondary ADSL low voltage disconnect
• LVDBYPAS	Low voltage disconnect bypass
• LWBATVG	Low battery voltage
• LWFUEL	Low fuel
• LWHUM	Low humidity
• LWPRES	Low cable pressure
• LWTEMP	Low temperature
• LWWTR	Low water
• MISC	Miscellaneous
• OPENDR	Open door
• POWER	Commercial power failure
• PUMP	Pump failure
• PWR-48	48 V power supply failure
• PWR-139	-139 V power converter
• PWR-190	-190 V power converter
• PWRMJ	Power supply major
• PWRMN	Power supply minor
• RECT	Rectifier failure
• RECTHI	Rectifier high voltage
• RECTLO	Rectifier low voltage
• RINGGENMJ	Ring generator major
• RINGGENMN	Ring generator minor
• RTACADSL	AC or AC/rectifier power fail ADSL equipment
• RTACCRIT	AC or AC/rectifier power fail DCL equipment critical site
• RTACPWR	AC or AC/rectifier power fail DCL equipment
• RTACPWRENG	Commercial AC fail, site equipped with standby engine
• RTBAYPWR	AC power loss distributed power RT bay
• RTRVENG	Retrieve standby engine, commercial AC restored
• SMOKE	Smoke
• TEMP	High-low temperature
• TOXICGAS	Toxic gas
• TREPEATER	T-repeater shelf
• VENTN	Ventilation system failure
<OCRDAT>	(Optional) Date.
<OCRTM>	(Optional) Time.

<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
<ul style="list-style-type: none"> <li>• FEND</li> <li>• NEND</li> </ul>	<ul style="list-style-type: none"> <li>Action occurs on the far end of the facility.</li> <li>Action occurs on the near end of the facility.</li> </ul>
<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
<ul style="list-style-type: none"> <li>• BTH</li> <li>• RCV</li> </ul>	<ul style="list-style-type: none"> <li>Both transmit and receive directions</li> <li>Receive direction only</li> </ul>
<DESC>	(Optional) Condition description.

## 17.5 REPT ALM LMP

(Cisco ONS 15454) The Report Alarm Link Management Protocol (REPT ALM LMP) is the autonomous message which is used to report the LMP-FAIL alarms for the control channels and traffic engineering (TE) links.

**Usage Guidelines** None

**Category** Fault

**Security** Retrieve

**Output Format**

```
SID DATE TIME** ATAG REPT ALM LMP
"[<AID>]:<NTFCNCDE>,<CONDTYPE>,<SRVEFF>,<OCRDAT>],[<OCRTM>],[<LOCN>],
 [<DIRN>]:[<DESC>]"
;
```

**Output Example**

```
va454-5 1998-06-20 14:30:00
A 814.812 REPT ALM LMP
"CTRL-1:MJ,LMP-FAIL,NSA,08-01,14-25-59,\'LMP Failure\',"
;
```

<b>Output Parameters</b>	<AID>	The LMP control channel AID values.
	<ul style="list-style-type: none"> <li>• CTRL-ALL</li> <li>• CTRL-{1-4}</li> </ul>	<ul style="list-style-type: none"> <li>Specifies all the control channels.</li> <li>Specifies an individual control channel.</li> </ul>
	<NTFCNCDE>	The two-character notification code associated with an autonomous message.

• CL	The condition causing the alarm has cleared.
• CR	A critical alarm.
• MJ	A major alarm.
• MN	A minor alarm.
• NA	The condition is not alarmed.
• NR	The condition is not reported.
<CONDTYPE>	The condition type for an alarm or a reported event. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether it generates a trouble notification). Reported conditions include alarms, Not-Alarmed conditions (NA), and Not-Reported (NR) conditions. See <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.
<SRVEFF>	Indicates the effect of the alarm on service.
• NSA	The condition is non-service affecting.
• SA	The condition is service affecting.
<OCRDAT>	(Optional) Date (YYYY-MM-DD)
<OCRTM>	(Optional) Time (HH:MM:SS)
<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
• BTH	Both transmit and receive directions
• RCV	Receive direction only
<DESC>	The condition description.

## 17.6 REPT ALM EQPT

(Cisco ONS 15454) The Report Alarm Equipment (REPT ALM EQPT) message reports an alarm condition against an equipment unit or slot.

**Usage Guidelines** None

**Category** Equipment

**Security** Retrieve

**Output Format**

```
SID DATE TIME
** ATAG REPT ALM EQPT
"<AID>:<NTFCNCDE>,<CONDITION>,<SRVEFF>,[<OCRDAT>],[<OCRTM>],[<LOCN>],
[<DIRN>],[<DESC>],[<AIDDET>]"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
** 100.100 REPT ALM EQPT
"SLOT-7:MJ,CONTR,NSA,08-01,14-25-59,NEND,RCV:\"CONTROLLER FAILURE",TSC"
;
```

**Output Parameters**

Parameter	Description
<AID>	Access identifier from the <a href="#">“26.15 EQPT”</a> section on <a href="#">page 26-37</a> . Equipment AID SLOT- <a href="#">{1-17}</a> .
<NTFCNCDE>	Two-letter notification code. The parameter type is NOTIF_CODE, which is a two-character notification code associated with an autonomous message.
<ul style="list-style-type: none"> <li>CL</li> <li>CR</li> <li>MJ</li> <li>MN</li> <li>NA</li> <li>NR</li> </ul>	<ul style="list-style-type: none"> <li>The condition causing the alarm has cleared.</li> <li>A critical alarm.</li> <li>A major alarm.</li> <li>A minor alarm.</li> <li>The condition is not alarmed.</li> <li>The alarm is not reported.</li> </ul>
<CONDITION>	Condition type for an alarm or a reported event. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, Not Alarmed conditions (NA), and Not Reported (NR) conditions. See the <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.
<SRVEFF>	The effect on service caused by the standing alarm or condition. The parameter type is SERV_EFF, which is the effect of the alarm on service.
<ul style="list-style-type: none"> <li>NSA</li> <li>SA</li> </ul>	<ul style="list-style-type: none"> <li>The condition is non-service affecting.</li> <li>The condition is service affecting.</li> </ul>
<OCRDAT>	(Optional) Date
<OCRTM>	(Optional) Time
<DESC>	(Optional) Condition description.
<AIDDET>	(Optional) AIDDET uses the same addressing rules as the AID, but specifies AID type and additional details about the entity being managed. The parameter type is EQPT_TYPE, which is the type of equipment being provisioned into a slot.
<ul style="list-style-type: none"> <li>15216-MD-40-EVEN</li> </ul>	Thermal Multiplex/Demultiplex Passive Unit, spaced at 50 GHz on even grid

Parameter	Description
• 15216-MD-40-ODD	Thermal Multiplex/Demultiplex Passive Unit, spaced at 50 GHz on odd grid
• 15216-MD-ID-50	Thermal Interleaver Passive Unit, spaced at 50 GHz grid
• 15216-FLD4-30-3	Edge 4-Ch Bi-Directional OADM Module 1530.33 to 1532.68
• 15216-FLD4-33-4	Edge 4-Ch Bi-Directional OADM Module 1533.47 to 1535.82
• 15216-FLD4-36-6	Edge 4-Ch Bi-Directional OADM Module 1536.61 to 1538.98
• 15216-FLD4-39-7	Edge 4-Ch Bi-Directional OADM Module 1539.77 to 1542.14
• 15216-FLD4-42-9	Edge 4-Ch Bi-Directional OADM Module 1542.94 to 1545.32
• 15216-FLD4-46-1	Edge 4-Ch Bi-Directional OADM Module 1546.12 to 1548.51
• 15216-FLD4-49-3	Edge 4-Ch Bi-Directional OADM Module 1549.32 to 1551.72
• 15216-FLD4-52-5	Edge 4-Ch Bi-Directional OADM Module 1552.52 to 1554.94
• 15216-FLD4-55-7	Edge 4-Ch Bi-Directional OADM Module 1555.75 to 1558.17
• 15216-FLD4-58-9	Edge 4-Ch Bi-Directional OADM Module 1558.98 to 1561.42
• 32DMX-L	3- channel demultiplexer for L-band
• 32WSS-L	32-channel wavelength switch selector for L-band
• 40G-MXP-C	40 Gbit/Sec Multirate Muxponder
• 40-SMR1-C	The single module 40-channel ROADM on C-band
• 40-SMR2-C	The single module 40-channel ROADM with EDFA on C-band
• 40G-TXP-C	40 Gigabits per second Multirate Transponder
• 80-WXC-C	80-channel wavelength cross-connect spaced at 100 GHz grid
• AD-1B	OADM 1-Band Filter
• AD-1C	OADM 1-Channel Filter
• AD-2C	OADM 2-Channel Filter
• AD-4B	OADM 4-Band Filter
• AD-4C	OADM 4-Channel Filter
• ADM-10G	12 x OC3/OC12/OC48/GIGE and OC192/Trunk ADM 10 Gbit/Sec.
• AICI	AIC-I card
• AIP	Alarm Indication Panel
• ALM-PWR	Alarm Power
• BP	The backplane of the NE

Parameter	Description
• CE-100T-8	8-port 100T card
• CE-1000-4	4-port GIGE mapper card
• CRFT-TMG	Craft Timing
• DCC	Data Communications Channel
• DCU	Dispersion Compensation Unit
• DMX-32	Optical DMX 32 Channels
• DS3i-N-12	DS3i-N-12 card
• E1	E1 card
• E1-42	42-port E1 card
• E1000T-2	2-port interface card supporting 1000BaseT Ethernet facilities
• E100T-12	12-port interface card supporting 100BaseT Ethernet facilities
• E100T-4	Four-port interface card supporting 100BaseT Ethernet facilities
• E1N	E1N card
• E3	E3 card
• FMEC-155E-1TO1	The equipment type for FMEC STM1E12 card
• FMEC-155E-1TO3	The equipment type for FMEC STM1E12 card with 1:3 protection
• FMEC-155E-UNPROT	The equipment type for FMEC STM1E12 card without protection
• FMEC-SMZ-E1	FMEC card corresponding to E1 card
• FMEC-SMZ-E3	FMEC card corresponding to E3 card
• FTA	Fan Tray of the NE
• FTA1	Fan Tray 1 of the NE
• FTA2	Fan Tray 2 of the NE
• G1K-4	G1K-4 card
• MD-4	Optical Multiplexer/Demultiplexer with 4 Channels
• MESH-PP-SMR	The passive unit Patch Panel device used to connect up to four 40-SMR2-C cards
• ML100X-8	8-port 100X card with optical interface
• ML-100T-8	8-port 100T card with optical interface
• MMU	Multiring mesh upgrade unit
• MS-ISC-100T	Fast Ethernet switch card used for internal shelf connection
• MUX-32	Optical MUX 32 Channels
• MXP-2.5G-10G	10G (4 * 2.5G) Muxponder card
• MXP-MR-10DME	10 Gbps datamux with enhanced FEC
• OPT-AMP-L	Optical preamplifier for L-band
• OPT-BST	Optical booster amplifier
• OPT-BST-L	Optical booster for L-band
• OPT-EDFA-17	MAL-less EDFA Optical Amplifier - C-band - 17dB Gain

Parameter	Description
• OPT-EDFA-24	MAL-less EDFA Optical Amplifier - C-band - 24dB Gain
• OPT-PRE	Optical Preamplifier
• OPT-RAMP-C	Raman pump amplifier C-band
• OPT-RAMP-CE	An extended version of Raman pump amplifier
• OPT-RAMP-COP	Raman COP card
• OPT-RAMP-CTP	Raman CTP card
• OPT-RAMP-E	Raman pump amplifier E-band
• OSC-CSM	Optical Service Channel with Combiner/Separator Module
• OSCM	Optical Service Channel Module
• OTU2-XP	A 4x10G transponder that is capable to operate with multiple bit rates - 10G FC, 10GE, and OC192/STM64
• PIM-4	Pluggable interface module with 4 PPM slots
• PP-4-SMR	Patch-Panel, 4 degrees, for SMR cards
• PP-MESH-4	Patch-Panel, 4 degrees
• PP-MESH-8	Patch-Panel, 8 degrees
• PPM-1	Pluggable port module with 1-port SFP module
• PSM	Protection Service Module card
• PTM-4	Line card
• PTF-4	Fabric card
• PTSA	CPT 50 panel
• PTSYSFan-Out-Group	PTSYS Fan-Out-Group
• SHELF	Shelf entity
• SHELF-M2	SHELF-M2
• SHELF-M6	SHELF-M6
• STM4	An interface card that supports one or more STM4 (622 Mbps) optical facilities
• STM4-4	A four port STM4 card
• STM4-IR-1	An interface card that supports one intermediate range STM4 (622 Mbps) optical facilities
• STM4-LR-1	An interface card that supports one long range STM4 (622 Mbps) optical facilities
• STM4-SR-1	An interface card that supports one short range STM4 (622 Mbps) optical facilities
• STM64-4	A four port STM64 card
• STM64-LR-1	An interface card that supports one or more STM64 optical facilities
• STM1	An interface card that supports multiple STM1 (155 Mbps) optical facilities
• STM1-IR-4	An interface card that supports four intermediate range STM1 (155 Mbps) optical facilities
• STM1-SR-4	An interface card that supports four short range STM1 (155 Mbps) optical facilities

Parameter	Description
• STM1ATM-IR-6	An interface card that supports six intermediate range STM1 (155 Mbps) ATM optical fibers
• STM1IR-STM1SH-1310-8	An STM1 card which has 8 ports over the lower speed slot of the ONS 15454 with XC-VXL-10G/XC-VXL-2.5G
• STM1POS-SR-4	An interface card that supports four short range STM1 (155 Mbps) POS optical facilities
• STM16	An interface card that supports one or more STM16 (10 Gbps) optical facilities
• STM16-AS-1	An interface card that supports one short range OC-48 (10 Gbps) optical facilities that can be provisioned in any I/O slot
• STM16-ELR-1	An interface card that supports one short range STM16 (2.5 Gbps) optical facility
• STM16-IR-1	An interface card that supports one intermediate range STM16 (10 Gbps) optical facility
• STM16-LR-1	An interface card that supports one long range STM16 (10 Gbps) optical facility
• STM16-SR-1	An interface card that supports one short range STM16 (10 Gbps) optical facilities
• TCC	Timing, Communications, and Control card
• TDC-CC	Coarse tunable dispersion compensation unit
• TDC-FC	Fine tunable dispersion compensation unit
• TNC	Transport Node Controller card
• TSC	Transport Shelf Controller card
• TXP-MR-10G	10G Multirate Transponder card
• TXP-MR-2.5G	Multirate 2.5G Unprotected
• TXPP-MR-2.5G	Multirate 2.5G Protected
• UNKNOWN	Unknown equipment type
• UNPROVISIONED	Unprovisioned equipment type
• XC-VXC-10G	XC-VXC-10G cross-connect card
• XCVXL-10G	XC-VXL-10G cross-connect card
• XCVXL-2.5G	XC-VXL-2.5G cross-connect card

## 17.7 REPT ALM SECU

(Cisco ONS 15454) The Report Alarm Security (REPT ALM SECU) reports the occurrence of an alarmed security event against the NE.

### Usage Guidelines

Based on TR-NWT-000835, the AID of the security alarm should be the connection identifier (CID) that is not currently supported.

The COM or user identifier (UID) is an acceptable substitute for the AID.

**Note**

The INTRUSION-PSWD condition is the only condition that is reported as a standing condition instead of a transient condition. It defaults to NA and is reported by the REPT EVT SECU message. However, it can be reprovisioned to be reported at a higher severity. If the severity of this alarm is higher than NA, it is reported by the REPT ALM SECU message.

**Category**

Security

**Security**

Superuser

**Output Format**

```
SID DATE TIME
** ATAG REPT ALM SECU
"<AID>:<NOTIFCODE>,<SECUALMTYPE>"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
** 100.100 REPT ALM SECU
"COM:CR,INTRUSION-PSWD"
;
```

**Output Parameters**

<AID>	Access identifier. Identifies an entity with the condition. Defaults to COM. AID is a string.
<NOTIFCODE>	Two-letter notification code. The parameter type is NOTIF_CODE, which is a two-character notification code associated with an autonomous message.
<ul style="list-style-type: none"> <li>• CL</li> <li>• CR</li> <li>• MJ</li> <li>• MN</li> <li>• NA</li> <li>• NR</li> </ul>	<p>The condition causing the alarm has cleared.</p> <p>A critical alarm.</p> <p>A major alarm.</p> <p>A minor alarm.</p> <p>The condition is not alarmed.</p> <p>The alarm is not reported.</p>
<SECUALMTYPE>	Security alarm type. It is a subset of the CONDITION type. In this release, the only allowable type is INTRUSION-PSWD. The parameter type is SECUALMTYPE (security alarm type).
<ul style="list-style-type: none"> <li>• INTRUSION-PSWD</li> </ul>	Condition raised after an invalid password is used during login. This condition is raised only if the password is used a specific number of times.

## 17.8 REPT ALM SYNCN

(Cisco ONS 15454) The Report Alarm Synchronization (REPT ALM SYNCN) message reports an alarm condition against a synchronization reference.

**Usage Guidelines** None

**Category** Synchronization

**Security** Retrieve

**Output Format**

```
SID DATE TIME
** ATAG REPT ALM SYNCN
"<AID>:<NTFCNCDE>,<CONDTYPE>,<SRVEFF>,[<OCRDAT>],[<OCRTM>],[<LOCN>],
[<DIRN>]:[<DESC>],[<EQPTTYPE>]"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
** 100.100 REPT ALM SYNCN
"SYNC-NE:MJ,MAN,SA,08-01,14-25-59,,:\"MANUAL SWITCH\",TCC"
;
```

Output Parameters	
<AID>	Access identifier from the <a href="#">“26.30 SYNC_REF”</a> section on page 26-58. Identifies a synchronization reference with alarm condition.
<NTFCNCDE>	Notification code. The parameter type is NOTIF_CODE, which is a two-character notification code associated with an autonomous message.
<ul style="list-style-type: none"> <li>• CL</li> <li>• CR</li> <li>• MJ</li> <li>• MN</li> <li>• NA</li> <li>• NR</li> </ul>	<ul style="list-style-type: none"> <li>The condition causing the alarm has cleared.</li> <li>A critical alarm.</li> <li>A major alarm.</li> <li>A minor alarm.</li> <li>The condition is not alarmed.</li> <li>The alarm is not reported.</li> </ul>
<CONDTYPE>	Condition type for an alarm or a reported event. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, Not Alarmed (NA) conditions, and Not Reported (NR) conditions. See the <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.

<SRVEFF>	The effect on service caused by the standing alarm or condition. The parameter type is SERV_EFF, which is the effect of the alarm on service.
<ul style="list-style-type: none"> <li>• NSA</li> </ul>	The condition is non-service affecting.
<ul style="list-style-type: none"> <li>• SA</li> </ul>	The condition is service affecting.
<OCRDAT>	(Optional) Date
<OCRTM>	(Optional) Time
<DESC>	(Optional) Condition description.
<EQPTTYPE>	(Optional) The parameter type is EQPT_TYPE, which is the type of equipment being provisioned into a slot.
<ul style="list-style-type: none"> <li>• 10GE-XP</li> </ul>	(ONS 15454) 2 x 10 Gbps. muxponder/L2 ethernet switch card
<ul style="list-style-type: none"> <li>• 15216-MD-40-EVEN</li> </ul>	Thermal Multiplex/Demultiplex Passive Unit, spaced at 50 GHz on even grid
<ul style="list-style-type: none"> <li>• 15216-MD-40-ODD</li> </ul>	Thermal Multiplex/Demultiplex Passive Unit, spaced at 50 GHz on odd grid
<ul style="list-style-type: none"> <li>• 15216-MD-ID-50</li> </ul>	Thermal Interleaver Passive Unit, spaced at 50 GHz grid
<ul style="list-style-type: none"> <li>• 15216-MD-ID-50</li> </ul>	Thermal Interleaver Passive Unit, spaced at 50 GHz grid
<ul style="list-style-type: none"> <li>• 15216-FLD4-30-3</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1530.33 to 1532.68
<ul style="list-style-type: none"> <li>• 15216-FLD4-33-4</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1533.47 to 1535.82
<ul style="list-style-type: none"> <li>• 15216-FLD4-36-6</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1536.61 to 1538.98
<ul style="list-style-type: none"> <li>• 15216-FLD4-39-7</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1539.77 to 1542.14
<ul style="list-style-type: none"> <li>• 15216-FLD4-42-9</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1542.94 to 1545.32
<ul style="list-style-type: none"> <li>• 15216-FLD4-46-1</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1546.12 to 1548.51
<ul style="list-style-type: none"> <li>• 15216-FLD4-49-3</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1549.32 to 1551.72
<ul style="list-style-type: none"> <li>• 15216-FLD4-52-5</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1552.52 to 1554.94
<ul style="list-style-type: none"> <li>• 15216-FLD4-55-7</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1555.75 to 1558.17
<ul style="list-style-type: none"> <li>• 15216-FLD4-58-9</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1558.98 to 1561.42
<ul style="list-style-type: none"> <li>• 32-DMX</li> </ul>	(ONS 15454) 32 channel optical demultiplexer
<ul style="list-style-type: none"> <li>• 32-DMX-L</li> </ul>	(ONS 15454) 32 channel optical demultiplexer for L-band
<ul style="list-style-type: none"> <li>• 32-DMX-O</li> </ul>	(ONS 15454) 32 channel unidirectional optical demultiplexer This overrides the old equipment type DMX-32 present in the 4.6 and earlier releases.

• 32-MUX-O	(ONS 15454) 32 channel unidirectional optical multiplexer This overrides the old equipment type MUX-32 present in the 4.6 and earlier releases.
• 32-WSS	(ONS 15454) 32 channel optical wavelength selective switch for C Band
• 40-DMX-C	(ONS 15454) 40 channel optical demultiplexer for C Band
• 40-MUX-C	(ONS 15454) 40 channel optical multiplexer for C Band
• 40G-MXP-C	40 Gbit/Sec Multirate Muxponder
• 40-SMR1-C	The single module 40-channel ROADM on C-band
• 40-SMR2-C	The single module 40-channel ROADM with EDFA on C-band
• 40G-TXP-C	40 Gigabits per second Multirate Transponder
• 40-WSS-C	(ONS 15454) 40 channel optical wavelength switch selector for C Band
• 40-WXC-C	(ONS 15454) 40 channel optical wavelength cross-connect/wavelength router for C Band
• 80-WXC-C	80-channel wavelength cross-connect spaced at 100 GHz grid
• AD-1B	(ONS 15454) Optical add/drop multiplexed (OADM) 1 band filter
• AD-1C	(ONS 15454) Optical add/drop multiplexed (OADM) 1 channel filter
• AD-2C	(ONS 15454) Optical add/drop multiplexed (OADM) 2 channels filter
• AD-4B	(ONS 15454) Optical add/drop multiplexed (OADM) 4 bands filter
• AD-4C	(ONS 15454) Optical add/drop multiplexed (OADM) 4 channels filter
• ADM-10G	(ONS 15454) 16 x OC3/OC12/OC48/GIGE and OC192/Trunk ADM 10 Gbps card
• AIC	(ONS 15454) AIC card
• AICI	(ONS 15454) AICI Card
• CE-1000-4	(ONS 15454) Modena mapper card
• CE-100T-8	(ONS 15454) Exige/Elise mapper card
• CE-MR-10	(ONS 15454, ONS 15454) Lotus20g ce2 card
• DCU	Dispersion Compensation Unit
• DS1-E1-56	(ONS 15454) DS1-E1-56 card
• DS1I	(ONS 15454) DS1I card
• DS1N	(ONS 15454) DS1N card
• DS3	(ONS 15454) DS3 card
• E1-21-DS3-E3-3	E1-21-DS3-E3-3
• E1-63-DS3-E3-3	E1-63-DS3-E3-3
• FMEC-155E-1TO1	The equipment type for FMEC STM1E12 card

• FMEC-155E-1TO3	The equipment type for FMEC STM1E12 card with 1:3 protection
• FMEC-155E-UNPROT	The equipment type for FMEC STM1E12 card without protection
• CE-100T-8	CE-100T-8
• MESH-PP-SMR	The passive unit Patch Panel device used to connect up to four 40-SMR2-C cards
• OPT-EDFA-17	MAL-less EDFA Optical Amplifier - C-band - 17dB Gain
• OPT-EDFA-24	MAL-less EDFA Optical Amplifier - C-band - 24dB Gain
• OPT-RAMP-C	Raman pump amplifier C-band
• OPT-RAMP-CE	An extended version of Raman pump amplifier
• OPT-RAMP-COP	Raman COP card
• OPT-RAMP-CTP	Raman CTP card
• OPT-RAMP-E	Raman pump amplifier E-band
• OSCM	(ONS 15454) Optical service channel (OSC) module
• OTU2-XP	A 4x10G transponder that is capable to operate with multiple bit rates - 10G FC, 10GE, and OC192/STM64
• PP-4-SMR	Patch-Panel, 4 degrees, for SMR cards
• PP-MESH-4	Patch-Panel, 4 degrees
• PP-MESH-8	Patch-Panel, 8 degrees
• PPM-1	(ONS 15454) Pluggable port module with one SFP port
• PSM	Protection Service Module card
• PTM-4	Line card
• PTF-4	Fabric card
• PTSA	CPT 50 panel
• PTSYSFan-Out-Group	PTSYS Fan-Out-Group
• SHELF-M2	SHELF-M2
• SHELF-M6	SHELF-M6
• STM1E-12	(ONS 15454 SDH) STM1E-12 card
• TCC	(ONS 15454) TCC card
• TDC-CC	Coarse tunable dispersion compensation unit
• TDC-FC	Fine tunable dispersion compensation unit
• TNC	Transport Node Controller card
• TSC	Transport Shelf Controller card
• TXP-MR-2.5G	(ONS 15454) Rockwell multirate 2.5G unprotected
• TXPP-MR-2.5G	(ONS 15454) Rockwell multirate 2.5G protected
• XC	(ONS 15454) XC card
• XC10G	(ONS 15454) XC10G card
• XCVT	(ONS 15454) XCVT card
• XCVXC-10G	(ONS 15454) XCVXC-10G card
• XCVXC-2.5G	(ONS 15454) XCVXC-2.5G card

• XCVXL-10G	(ONS 15454) XCVXL-10G card
• XCVXL-2.5G	(ONS 15454) XCVXL-2.5G card

## 17.9 REPT DBCHG

(Cisco ONS 15454) The Report Database Change (REPT DBCHG) message reports any changes on the NE that result from:

- TL1 provisioning commands or their graphical user interface (GUI) equivalents containing the verbs ALW, DLT, ED, ENT, INH, INIT, OPR, RLS, SET, and SW (for example, DLT-EQPT, ENT-CRS-ST51)
- External event such as a board insertion

### Usage Guidelines

- When the secondary state is changed from AINS state to any other state, no REPT DBCHG messages are generated.
- REPT DBCHG is turned off by default. To turn REPT DBCHG on, you must issue the ALW-MSG-DBCHG command.
- REPT DBCHG messages are generated every time a roll is performed. A cross-connect delete and add REPT DBCHG message will not be sent every time a roll is performed; instead a REPT DBCHG message on the roll will be sent.

### Category

Log

### Security

Retrieve

### Output Format

```
SID DATE TIME
A ATAG REPT DBCHG
"TIME=<TIME>,DATE=<DATE>,[SOURCE=<SOURCE>],[USERID=<USERID>],
DBCHGSEQ=<DBCHGSEQ>:<COMMAND>:[<AID>]:::[<PSTPSTQ>],[<SST>"
;
```

### Output Example

```
TID-000 1998-06-20 14:30:00
A 100 REPT DBCHG
"TIME=14-35-46,DATE=99-07-28,SOURCE=123,USERID=CISCO15,DBCHGSEQ=456:
ENT-CRS-VT1:VT1-4-1-2-6-4:::PST-PSTQ,SST"
;
```

### Output Parameters

<TIME>	The time of the message triggered by the NE.
<DATE>	The date of the message triggered by the NE.

<SOURCE>	(Optional) An input-command CTAG if present. SOURCE is a string. Maximum length of 20 characters.
<USERID>	(Optional) The user name or user identifier. USERID is a string. Maximum length of 20 characters.
<DBCHGSEQ>	Identifier or range of identifiers to be retrieved. It is a sequential number of the DBCHGSEQ message. DBCHGSEQ is an integer.
<COMMAND>	The input command or substitute. Maximum length of 20 characters. COMMAND is a string.
<AID>	Access identifier. Maximum length of 64 characters. Excess characters will be truncated. AID is a string.
<PSTPSTQ>	Admin state in the PST-PSTQ format. The parameter type is PST_PSTQ, which is the service state of the entity described by the primary state (SST) and a primary state qualifier (PSTQ).
• IS-NR	In Service and Normal
• OOS-AU	Out of Service and Autonomous
• OOS-AUMA	Out of Service and Autonomous Management
• OOS-MA	Out of Service and Management
<SST>	Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic In-Service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatched Equipment
• MT	Maintenance
• OOG	Out of Group
• SWDL	Software Download
• UAS	Unassigned
• UEQ	Unequipped

## 17.10 REPT EVT <MOD2ALM>

(Cisco ONS 15454) The Report Event for 1GFC, 1GFICON, 2GFC, 2GFICON, CLNT, DS1, E100, E1000, E3, E4, EC1, ETH, FSTE, G1000, GFPOS, GIGE, ILK, ISCCOMPAT, ISC3PEER2R, ISC3PEER1G, ISC3PEER2G, OC12, OC192, OC3, OC48, OCH, OMS, OTS, POS, STM1, STM4, STM16, STM64, STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS6C, STS9C, T1, T3, UDCDCC, UDCF, VC3, VC4, VC4-2c, VC4-3c, VC4-4c, VC4-8c, VC4-16c, VC4-64c, VC12, VCG, VT1, VT2, WLEN, or RPRIF (REPT EVT <MOD2ALM>) message reports the occurrence of a nonalarmed event. In Software Release 5.0 and later, REPT EVT <MOD2ALM> can report the remote monitoring (RMON)-managed threshold crossing alarm.

### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

### Category

Fault

**Security** Retrieve

**Output Format**

```
SID DATE TIME
A ATAG REPT EVT <MOD2ALM>
  "<AID>:<CONDTYPE>,<CONDEFF>],,,<LOCN>,<DIRN>,<MONVAL>,<THLEV>],
  [<TMPER>]:<DESC>,<AIDDET>]"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
A 100.100 REPT EVT 1GFC
  "FAC-5-1:WKSWPR,TC,,,FEND,,12,13,15-MIN:\“WORKING SWITCH TO PROTECTION\”,
  OC48”
;
```

**Output Parameters**

<AID>	Access identifier from the <a href="#">“26.1 ALL” section on page 26-1</a> .
<CONDTYPE>	Condition type for an alarm or a reported event. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, Not Alarmed (NA) conditions, and Not Reported (NR) conditions. See the <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.
<CONDEFF>	(Optional) The effect of the event on the condition of the NE. The parameter type is COND_EFF, which is the state of the condition upon the affected unit.
<ul style="list-style-type: none"> <li>• CL</li> <li>• SC</li> <li>• TC</li> </ul>	<ul style="list-style-type: none"> <li>Standing condition cleared</li> <li>Standing condition raised</li> <li>Transient condition</li> </ul>
<LOCN>	(Optional) Location associated with a particular command in reference to the entity identified by the AID. The parameter type is LOCATION, which is the location where the action is to take place.
<ul style="list-style-type: none"> <li>• FEND</li> <li>• NEND</li> </ul>	<ul style="list-style-type: none"> <li>Action occurs on the Far End of the facility.</li> <li>Action occurs on the Near End of the facility.</li> </ul>
<DIRN>	Direction relative to the entity identified by the AID. Direction of PM relative to the entity identified by the AID. The parameter type is DIRECTION (transmit and receive directions).
<ul style="list-style-type: none"> <li>• BTH</li> <li>• RCV</li> <li>• TRMT</li> </ul>	<ul style="list-style-type: none"> <li>Both transmit and receive directions</li> <li>Receive direction only</li> <li>Transmit direction only</li> </ul>

<MONVAL>	(Optional) Monitored value. Value to which the register identified by MONTYPE is to be initialized to or the measured value of a monitored parameter. The value is in the form of numeric counts or rates. MONVAL is a float.
<THLEV>	(Optional) Threshold level. THLEV is a float.
<TMPER>	(Optional) Accumulation time period for performance counters. The parameter type is TMPER, which is the accumulation time period for the performance management center.
<ul style="list-style-type: none"> <li>• 1-DAY</li> </ul>	Performance parameter accumulation interval length; every 24-hours. For SDH PM data only one day of history data is available. For RMON managed PM data seven days of history data are available.
<ul style="list-style-type: none"> <li>• 1-HR</li> </ul>	Performance parameter accumulation interval length; every 1 hour. This is only applicable to RMON managed PM data. There are 24 hours of history data available.
<ul style="list-style-type: none"> <li>• 1-MIN</li> </ul>	Performance parameter accumulation interval length; every 1 minute. This is only applicable to RMON managed PM data. There are 60 minutes of history available.
<ul style="list-style-type: none"> <li>• 15-MIN</li> </ul>	Performance parameter accumulation interval length; every 15 minutes. There are 32 15-MIN buckets of history data available for this accumulation interval length.
<ul style="list-style-type: none"> <li>• RAW-DATA</li> </ul>	Performance parameter accumulation interval length; starting from the last time the counters were cleared. This is only applicable to RMON managed PMs.
<DESC>	(Optional) Condition description.
<AIDDET>	(Optional) AIDDET uses the same addressing rules as the AID, but specifies AID type and additional details about the entity being managed. The parameter type is EQPT_TYPE, which is the type of equipment being provisioned into a slot.
<ul style="list-style-type: none"> <li>• 15216-MD-40-EVEN</li> </ul>	Thermal Multiplex/Demultiplex Passive Unit, spaced at 50 GHz on even grid
<ul style="list-style-type: none"> <li>• 15216-MD-40-ODD</li> </ul>	Thermal Multiplex/Demultiplex Passive Unit, spaced at 50 GHz on odd grid
<ul style="list-style-type: none"> <li>• 15216-MD-ID-50</li> </ul>	Thermal Interleaver Passive Unit, spaced at 50 GHz grid
<ul style="list-style-type: none"> <li>• 15216-FLD4-30-3</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1530.33 to 1532.68
<ul style="list-style-type: none"> <li>• 15216-FLD4-33-4</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1533.47 to 1535.82
<ul style="list-style-type: none"> <li>• 15216-FLD4-36-6</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1536.61 to 1538.98
<ul style="list-style-type: none"> <li>• 15216-FLD4-39-7</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1539.77 to 1542.14
<ul style="list-style-type: none"> <li>• 15216-FLD4-42-9</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1542.94 to 1545.32
<ul style="list-style-type: none"> <li>• 15216-FLD4-46-1</li> </ul>	Edge 4-Ch Bi-Directional OADM Module 1546.12 to 1548.51

• 15216-FLD4-49-3	Edge 4-Ch Bi-Directional OADM Module 1549.32 to 1551.72
• 15216-FLD4-52-5	Edge 4-Ch Bi-Directional OADM Module 1552.52 to 1554.94
• 15216-FLD4-55-7	Edge 4-Ch Bi-Directional OADM Module 1555.75 to 1558.17
• 15216-FLD4-58-9	Edge 4-Ch Bi-Directional OADM Module 1558.98 to 1561.42
• 32DMX-L	32 channels demultiplexer for L-band
• 32WSS-L	32 channels wavelength switch selector for L-band
• 40G-MXP-C	40 Gbit/Sec Multirate Muxponder
• 40-SMR1-C	The single module 40-channel ROADM on C-band
• 40-SMR2-C	The single module 40-channel ROADM with EDFA on C-band
• 40G-TXP-C	40 Gigabits per second Multirate Transponder
• 80-WXC-C	80-channel wavelength cross-connect spaced at 100 GHz grid
• AD-1B	OADM 1-Band Filter
• AD-1C	OADM 1-Channel Filter
• AD-2C	OADM 2-Channel Filter
• AD-4B	OADM 4-Band Filter
• AD-4C	OADM 4-Channel Filter
• ADM-10G	12 x OC3/OC12/OC48/GIGE and OC192/Trunk ADM 10 Gbit/Sec.
• AICI	AIC-I card
• AIP	Alarm Indication Panel
• ALM-PWR	Alarm Power
• BP	The backplane of the NE
• CE-100T-8	8-port 100T card
• CE-1000-4	4-port GIGE mapper card
• CRFT-TMG	Craft Timing
• DCC	Data Communications Channel
• DCU	Dispersion Compensation Unit
• DMX-32	Optical DMX 32 Channels
• DS3i-N-12	DS3i-N-12 card
• E1	E1 card
• E1-42	42-port E1 card
• E1000T-2	2-port interface card supporting 1000BaseT Ethernet facilities
• E100T-12	12-port interface card supporting 100BaseT Ethernet facilities
• E100T-4	Four-port interface card supporting 100BaseT Ethernet facilities
• E1N	E1N card

• E3	E3 card
• FMEC-155E-1TO3	The equipment type for FMEC STM1E12 card with 1:3 protection
• FMEC-155E-UNPROT	The equipment type for FMEC STM1E12 card without protection
• FMEC-SMZ-E1	FMEC card corresponding to E1 card
• FMEC-SMZ-E3	FMEC card corresponding to E3 card
• FTA	Fan Tray of the NE
• FTA1	Fan Tray 1 of the NE
• FTA2	Fan Tray 2 of the NE
• G1K-4	G1K-4 card
• MD-4	Optical Multiplexer/Demultiplexer with 4 Channels
• MESH-PP-SMR	The passive unit Patch Panel device used to connect up to four 40-SMR2-C cards
• ML100X-8	8-port 100T card with optical interface
• ML-100T-8	(Cisco ONS 15454) Exige/Elise mapper card
• MMU	Multiring mesh upgrade unit
• MS-ISC-100T	Fast Ethernet switch card used for internal shelf connection
• MUX-32	Optical MUX 32 Channels
• MXP-2.5G-10G	10G (4 * 2.5G) Muxponder card
• MXP-MR-10DME	10 Gbps datamux with enhanced FEC
• OPT-AMP-L	Optical preamplifier for L-band
• OPT-BST	Optical booster amplifier
• OPT-BST-L	Optical booster for L-band
• OPT-EDFA-17	MAL-less EDFA Optical Amplifier - C-band - 17dB Gain
• OPT-EDFA-24	MAL-less EDFA Optical Amplifier - C-band - 24dB Gain
• OPT-PRE	Optical Preamplifier
• OPT-RAMP-C	Raman Pump Amplifier C Band
• OPT-RAMP-CE	An extended version of Raman pump amplifier
• OPT-RAMP-COP	Raman COP card
• OPT-RAMP-CTP	Raman CTP card
• OPT-RAMP-E	Raman pump amplifier E-band
• OSC-CSM	Optical Service Channel with Combiner/Separator Module
• OSCM	Optical Service Channel Module
• OTU2-XP	A 4x10G transponder that is capable to operate with multiple bit rates - 10G FC, 10GE, and OC192/STM64
• PIM-4	Pluggable interface module with 4 PPM slots
• PP-4-SMR	Patch-Panel, 4 degrees, for SMR cards
• PP-MESH-4	Patch-Panel, 4 degrees
• PP-MESH-8	Patch-Panel, 8 degrees
• PPM-1	Pluggable port module with 1-port SFP module
• PSM	Protection Service Module card

• PTM-4	Line card
• PTF-4	Fabric card
• PTSA	CPT 50 panel
• PTSYSFan-Out-Group	PTSYS Fan-Out-Group
• SHELF	Shelf entity
• SHELF-M2	SHELF-M2
• SHELF-M6	SHELF-M6
• STM4	An interface card that supports one or more STM4 (622 Mbps) optical facilities
• STM4-4	A four port STM4 card
• STM4-IR-1	An interface card that supports one intermediate range STM4 (622 Mbps) optical facilities
• STM4-LR-1	An interface card that supports one long range STM4 (622 Mbps) optical facilities
• STM4-SR-1	An interface card that supports one short range STM4 (622 Mbps) optical facilities
• STM64-4	A four port STM64 card
• STM64-LR-1	An interface card that supports one or more STM64 optical facilities
• STM1	An interface card that supports multiple STM1 (155 Mbps) optical facilities
• STM1-IR-4	An interface card that supports four intermediate range STM1 (155 Mbps) optical facilities
• STM1-SR-4	An interface card that supports four short range STM1 (155 Mbps) optical facilities
• STM1ATM-IR-6	An interface card that supports six intermediate range STM1 (155 Mbps) ATM optical fibers
• STM1IR-STM1SH-1310-8	An STM1 card which has 8 ports over the lower speed slot of the ONS 15454 SDH with XC-VXL-10G/XC-VXL-2.5G
• STM1POS-SR-4	An interface card that supports four short range STM1 (155 Mbps) POS optical facilities
• STM16	An interface card that supports one or more STM16 (10 Gbps) optical facilities
• STM16-AS-1	An interface card that supports one short range OC-48 (10 Gbps) optical facilities that can be provisioned in any I/O slot
• STM16-ELR-1	An interface card that supports one short range STM16 (2.5 Gbps) optical facility
• STM16-IR-1	An interface card that supports one intermediate range STM16 (10 Gbps) optical facility
• STM16-LR-1	An interface card that supports one long range STM16 (10 Gbps) optical facility
• STM16-SR-1	An interface card that supports one short range STM16 (10 Gbps) optical facilities
• TCC	Timing, Communications, and Control card

• TDC-CC	Coarse tunable dispersion compensation unit
• TDC-FC	Fine tunable dispersion compensation unit
• TNC	Transport Node Controller card
• TSC	Transport Shelf Controller card
• TXP-MR-10G	10G Multirate Transponder card
• TXP-MR-2.5G	Multirate 2.5G Unprotected
• TXPP-MR-2.5G	Multirate 2.5G Protected
• UNKNOWN	Unknown equipment type
• UNPROVISIONED	Unprovisioned equipment type
• XC-VXC-10G	XC-VXC-10G cross-connect card
• XCVXL-10G	XC-VXL-10G cross-connect card
• XCVXL-2.5G	XC-VXL-2.5G cross-connect card

## 17.11 REPT EVT BITS

(Cisco ONS 15454) The Report Event Building Integrated Timing Supply (REPT EVT BITS) message reports a non-alarmed event against a BITS facility.

**Usage Guidelines** None

**Category** Synchronization

**Security** Retrieve

**Output Format**

```
SID DATE TIME
** ATAG REPT EVT BITS
"<AID>:<CONDTYPE>,<CONDEFF>],[<LOCN>],[<DIRN>],[<DESC>]"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
A 100.100 REPT ALM BITS
"BITS-1:SSM-STU,TC,,,,,,;\\"SYNCHRONIZED - TRACEABILITY UNKNOWN\'"
;
```

Output Parameters		
	<AID>	Access identifier from the “26.6 BITS” section on page 26-21.
	<CONDTYPE>	Condition type for an alarm or a reported event. The parameter type is CONDITION, which is any problem detected on an ONS 15454 node, whether or not the problem is reported (that is, whether it generates a trouble notification). Reported conditions include alarms, Not-Alarmed conditions (NA), and Not-Reported (NR) conditions. See Chapter 27, “Conditions” for a list of conditions.
	<CONDEFF>	The effect of the event on the condition of the NE. The parameter type is COND_EFF, which is the state of the condition upon the affected unit.
	<ul style="list-style-type: none"> <li>• CL</li> <li>• SC</li> <li>• TC</li> </ul>	<ul style="list-style-type: none"> <li>Standing condition cleared</li> <li>Standing condition raised</li> <li>Transient condition</li> </ul>
	<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
	<ul style="list-style-type: none"> <li>• FEND</li> <li>• NEND</li> </ul>	<ul style="list-style-type: none"> <li>Action occurs on the far end of the facility.</li> <li>Action occurs on the near end of the facility.</li> </ul>
	<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
	<ul style="list-style-type: none"> <li>• BTH</li> <li>• RCV</li> </ul>	<ul style="list-style-type: none"> <li>Both transmit and receive directions</li> <li>Receive direction only</li> </ul>
	<DESC>	(Optional) Condition description.

## 17.12 REPT EVT COM

(Cisco ONS 15454) The Report Event Common (REPT EVT COM) message reports a nonalarmed event against an NE when there is no AID associated with it.

**Usage Guidelines** None

**Category** Fault

**Security** Retrieve

**Output Format**

```
SID DATE TIME
A ATAG REPT EVT COM
“[<AID>]:<CONDTYPE>,<CONDEFF>],,,,,[<LOCN>],[<DIRN>]:[<DESC>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
A 100.100 REPT EVT COM
  "COM:CLDRESTART,TC,,,,,,,,;\\"COLD RESTART\","
;
```

**Output Parameters**

<AID>	(Optional) Access identifier. Identifies the entity to which the command pertains. AID is a string.
<CONDTYPE>	Condition type for an alarm or a reported event. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, Not-Alerted conditions (NA), and Not-Reported (NR) conditions. See <a href="#">Chapter 27, "Conditions"</a> for a list of conditions.
<CONDEFF>	The effect of the event on the condition of the NE. The parameter type is COND_EFF, which is the state of the condition upon the affected unit.
<ul style="list-style-type: none"> <li>• CL</li> <li>• SC</li> <li>• TC</li> </ul>	<ul style="list-style-type: none"> <li>Standing condition cleared</li> <li>Standing condition raised</li> <li>Transient condition</li> </ul>
<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
<ul style="list-style-type: none"> <li>• FEND</li> <li>• NEND</li> </ul>	<ul style="list-style-type: none"> <li>Action occurs on the far end of the facility.</li> <li>Action occurs on the near end of the facility.</li> </ul>
<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
<ul style="list-style-type: none"> <li>• BTH</li> <li>• RCV</li> </ul>	<ul style="list-style-type: none"> <li>Both transmit and receive directions</li> <li>Receive direction only</li> </ul>
<DESC>	(Optional) Condition description.

## 17.13 REPT EVT ENV

(Cisco ONS 15454) The Report Event Environment (REPT EVT ENV) message reports the occurrence of a nonalarmed event against an environment alarm input.

**Usage Guidelines**

None

**Category**

Environment

**Security**

Retrieve

**Output Format**

```
SID DATE TIME
A ATAG REPT EVT ENV
"<AID>:<ALMTYPE>,<CONDEFF>],,,,,,<LOCN>,<DIRN>]:<DESC>]"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
A 100.100 REPT EVT ENV
"ENV-IN-2:OPENDR,TC,,,,,,:\“OPEN DOOR\”"
;
```

**Output Parameters**

<AID>	Access identifier from the <a href="#">“26.14 ENV” section on page 26-37</a> . Identifies an environmental input.
<ALMTYPE>	Abbreviated code identifying the alarm. The parameter type is ENV_ALM (environmental alarm types).
• AIRCOMPR	Air compressor failure
• AIRCOND	Air conditioning failure
• AIRDRYR	Air dryer failure
• BATDSCHRG	Battery discharging
• BATTERY	Battery failure
• CLFAN	Cooling fan failure
• CPMAJOR	Centralized power major failure
• CPMINOR	Centralized power minor failure
• ENGINE	Engine failure
• ENGOPRG	Engine operating
• ENGTRANS	Standby engine transfer
• EXPLGS	Explosive gas
• FIRDETR	Fire detector failure
• FIRE	Fire
• FLOOD	Flood
• FUELLEAK	Fuel leak
• FUSE	Fuse failure
• GASALARM	Explosive gas, toxic gas, ventilation fail, or gas monitor fail
• HATCH	CEV hatch fail
• GEN	Generator failure
• HIAIR	High airflow
• HIHUM	High humidity
• HITEMP	High temperature
• HIWTR	High water
• INTRUDER	Intrusion
• LEVELCON	Level converter
• LVDADSL	Secondary ADSL low voltage disconnect
• LVDBYPAS	Low voltage disconnect bypass

• LWBATVG	Low battery voltage
• LWFUEL	Low fuel
• LWHUM	Low humidity
• LWPRES	Low cable pressure
• LWTEMP	Low temperature
• LWWTR	Low water
• MISC	Miscellaneous
• OPENDR	Open door
• POWER	Commercial power failure
• PUMP	Pump failure
• PWR-48	48 V power supply failure
• PWR-139	-139 V power converter
• PWR-190	-190 V power converter
• PWRMJ	Power supply major
• PWRMN	Power supply minor
• RECT	Rectifier failure
• RECTHI	Rectifier high voltage
• RECTLO	Rectifier low voltage
• RINGGENMJ	Ring generator major
• RINGGENMN	Ring generator minor
• RTACADSL	AC or AC/rectifier power fail ADSL equipment
• RTACCRIT	AC or AC/rectifier power fail DCL equipment critical site
• RTACPWR	AC or AC/rectifier power fail DCL equipment
• RTACPWRENG	Commercial AC fail, site equipped with standby engine
• RTBAYPWR	AC power loss distributed power RT bay
• RTRVENG	Retrieve standby engine, commercial AC restored
• SMOKE	Smoke
• TEMP	High-low temperature
• TOXICGAS	Toxic gas
• TREPEATER	T-repeater shelf
• VENTN	Ventilation system failure
<CONDEFF>	The effect of the event on the condition of the NE. The parameter type is COND_EFF, which is the state of the condition upon the affected unit.
• CL	Standing condition cleared
• SC	Standing condition raised
• TC	Transient condition

<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
<ul style="list-style-type: none"> <li>• FEND</li> <li>• NEND</li> </ul>	<p>Action occurs on the far end of the facility.</p> <p>Action occurs on the near end of the facility.</p>
<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
<ul style="list-style-type: none"> <li>• BTH</li> <li>• RCV</li> </ul>	<p>Both transmit and receive directions</p> <p>Receive direction only</p>
<DESC>	(Optional) Condition description.

## 17.14 REPT EVT EQPT

(Cisco ONS 15454) The Report Event Equipment (REPT EVT EQPT) message reports the occurrence of a nonalarmed event against an equipment unit or slot.

**Usage Guidelines** None

**Category** Equipment

**Security** Retrieve

**Output Format**

```
SID DATE TIME
A ATAG REPT EVT EQPT
“<AID>:<CONDTYPE>,<CONDEFF>],,,,,,<LOCN>,<DIRN>]:<DESC>,<AIDDET>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
A 100.100 REPT EVT EQPT
“SLOT-7:PLUGIN,TC,,,,,:\“EQUIPMENT PLUG-IN”,TCC”
;
```

## Output Parameters

Parameter	Description
<AID>	Access identifier from the “26.15 EQPT” section on page 26-37. Equipment AID SLOT-{1-17}.
<CONDTYPE>	Condition type for an alarm or a reported event. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, Not Alarmed (NA) conditions, and Not Reported (NR) conditions. See the Chapter 27, “Conditions” for a list of conditions.
<CONDEFF>	(Optional) The effect of the event on the condition of the NE. The parameter type is COND_EFF, which is the state of the condition upon the affected unit.
<ul style="list-style-type: none"> <li>• CL</li> <li>• SC</li> <li>• TC</li> </ul>	<ul style="list-style-type: none"> <li>Standing condition cleared</li> <li>Standing condition raised</li> <li>Transient condition</li> </ul>
<DESC>	(Optional) Condition description.
<AIDDET>	(Optional) AIDDET uses the same addressing rules as the AID, but specifies AID type and additional details about the entity being managed. The parameter type is EQPT_TYPE, which is the type of equipment being provisioned into a slot.
<ul style="list-style-type: none"> <li>• 15216-MD-40-EVEN</li> <li>• 15216-MD-40-ODD</li> <li>• 15216-MD-ID-50</li> <li>• 15216-FLD4-30-3</li> <li>• 15216-FLD4-33-4</li> <li>• 15216-FLD4-36-6</li> <li>• 15216-FLD4-39-7</li> <li>• 15216-FLD4-42-9</li> <li>• 15216-FLD4-46-1</li> <li>• 15216-FLD4-49-3</li> <li>• 15216-FLD4-52-5</li> <li>• 15216-FLD4-55-7</li> <li>• 15216-FLD4-58-9</li> </ul>	<ul style="list-style-type: none"> <li>Thermal Multiplex/Demultiplex Passive Unit, spaced at 50 GHz on even grid</li> <li>Thermal Multiplex/Demultiplex Passive Unit, spaced at 50 GHz on odd grid</li> <li>Thermal Interleaver Passive Unit, spaced at 50 GHz grid</li> <li>Edge 4-Ch Bi-Directional OADM Module 1530.33 to 1532.68</li> <li>Edge 4-Ch Bi-Directional OADM Module 1533.47 to 1535.82</li> <li>Edge 4-Ch Bi-Directional OADM Module 1536.61 to 1538.98</li> <li>Edge 4-Ch Bi-Directional OADM Module 1539.77 to 1542.14</li> <li>Edge 4-Ch Bi-Directional OADM Module 1542.94 to 1545.32</li> <li>Edge 4-Ch Bi-Directional OADM Module 1546.12 to 1548.51</li> <li>Edge 4-Ch Bi-Directional OADM Module 1549.32 to 1551.72</li> <li>Edge 4-Ch Bi-Directional OADM Module 1552.52 to 1554.94</li> <li>Edge 4-Ch Bi-Directional OADM Module 1555.75 to 1558.17</li> <li>Edge 4-Ch Bi-Directional OADM Module 1558.98 to 1561.42</li> </ul>

Parameter	Description
• 32DMX-L	32-channel demultiplexer for L-band
• 32WSS-L	32-channel wavelength switch selector for L-band
• 40G-MXP-C	40 Gbit/Sec Multirate Muxponder
• 40-SMR1-C	The single module 40-channel ROADM on C-band
• 40-SMR2-C	The single module 40-channel ROADM with EDFA on C-band
• 40G-TXP-C	40 Gigabits per second Multirate Transponder
• 80-WXC-C	80-channel wavelength cross-connect spaced at 100 GHz grid
• AD-1B	OADM 1-Band Filter
• AD-1C	OADM 1-Channel Filter
• AD-2C	OADM 2-Channel Filter
• AD-4B	OADM 4-Bans Filter
• AD-4C	OADM 4-Channel Filter
• ADM-10G	12 x OC3/OC12/OC48/GIGE and OC192/Trunk ADM 10 Gbit/Sec.
• AICI	AIC-I card
• AIP	Alarm Indication Panel
• ALM-PWR	Alarm Power
• BP	The backplane of the NE
• CE-100T-8	8-port 100T card
• CE-1000-4	4-port GIGE mapper card
• CRFT-TMG	Craft Timing
• DCC	Data Communications Channel
• DCU	Dispersion Compensation Unit
• DMX-32	Optical DMX 32 Channels
• DS3i-N-12	DS3i-N-12 card
• E1	E1 card
• E1-42	42-port E1 card
• E1000T-2	2-port interface card supporting 1000BaseT Ethernet facilities
• E100T-12	12-port interface card supporting 100BaseT Ethernet facilities
• E100T-4	Four-port interface card supporting 100BaseT Ethernet facilities
• E1N	E1N card
• E3	E3 card
• FMEC-155E-1TO1	The equipment type for FMEC STM1E12 card
• FMEC-155E-1TO3	The equipment type for FMEC STM1E12 card with 1:3 protection
• FMEC-155E-UNPROT	The equipment type for FMEC STM1E12 card without protection

Parameter	Description
• FMEC-SMZ-E1	FMEC card corresponding to E1 card
• FMEC-SMZ-E3	FMEC card corresponding to E3 card
• FTA	Fan Tray of the NE
• FTA1	Fan Tray 1 of the NE
• FTA2	Fan Tray 2 of the NE
• G1K-4	G1K-4 card
• MD-4	Optical Multiplexer/Demultiplexer with 4 Channels
• ML100X-8	8-port 100T card with optical interface
• MMU	Multiring mesh upgrade unit
• MS-ISC-100T	Fast Ethernet switch card used for internal shelf connection
• MUX-32	Optical MUX 32 Channels
• MXP-2.5G-10G	10G (4 * 2.5G) Muxponder card
• MXP-MR-10DME	10 Gbps datamux with enhanced FEC
• OPT-AMP-L	Optical preamplifier for L-band
• OPT-BST	Optical booster amplifier
• OPT-BST-L	Optical booster for L-band
• OPT-EDFA-17	MAL-less EDFA Optical Amplifier - C-band - 17dB Gain
• OPT-EDFA-24	MAL-less EDFA Optical Amplifier - C-band - 24dB Gain
• OPT-PRE	Optical Preamplifier
• OPT-RAMP-C	Raman Pump Amplifier C Band
• OPT-RAMP-CE	An extended version of Raman pump amplifier
• OPT-RAMP-COP	Raman COP card
• OPT-RAMP-CTP	Raman CTP card
• OPT-RAMP-E	Raman pump amplifier E-band
• OSC-CSM	Optical Service Channel with Combiner/Separator Module
• OSCM	Optical Service Channel Module
• OTU2-XP	A 4x10G transponder that is capable to operate with multiple bit rates - 10G FC, 10GE, and OC192/STM64
• PIM-4	Pluggable interface module with 4 PPM slots
• PP-4-SMR	Patch-Panel, 4 degrees, for SMR cards
• PP-MESH-4	Patch-Panel, 4 degrees
• PP-MESH-8	Patch-Panel, 8 degrees
• PPM-1	Pluggable port module with 1-port SFP module
• PSM	Protection Service Module card
• PTM-4	Line card
• PTF-4	Fabric card
• PTSA	CPT 50 panel
• PTSYSFan-Out-Group	PTSYS Fan-Out-Group
• SHELF	Shelf entity
• SHELF-M2	SHELF-M2
• SHELF-M6	SHELF-M6

Parameter	Description
• STM4	An interface card that supports one or more STM4 (622 Mbps) optical facilities
• STM4-4	A four port STM4 card
• STM4-IR-1	An interface card that supports one intermediate range STM4 (622 Mbps) optical facilities
• STM4-LR-1	An interface card that supports one long range STM4 (622 Mbps) optical facilities
• STM4-SR-1	An interface card that supports one short range STM4 (622 Mbps) optical facilities
• STM64-4	A four-port STM64 card
• STM64-LR-1	An interface card that supports one or more STM64 optical facilities
• STM1	An interface card that supports multiple STM1 (155 Mbps) optical facilities
• STM1-IR-4	An interface card that supports four intermediate range STM1 (155 Mbps) optical facilities
• STM1-SR-4	An interface card that supports four short range STM1 (155 Mbps) optical facilities
• STM1ATM-IR-6	An interface card that supports six intermediate range STM1 (155 Mbps) ATM optical fibers
• STM1IR-STM1SH-1310-8	An STM1 card which has 8 ports over the lower speed slot of the ONS 15454 SDH with XC-VXL-10G/XC-VXL-2.5G
• STM1POS-SR-4	An interface card that supports four short range STM1 (155 Mbps) POS optical facilities
• STM16	An interface card that supports one or more STM16 (10 Gbps) optical facilities
• STM16-AS-1	An interface card that supports one short range OC-48 (10 Gbps) optical facilities that can be provisioned in any I/O slot
• STM16-ELR-1	An interface card that supports one short range STM16 (2.5 Gbps) optical facility
• STM16-IR-1	An interface card that supports one intermediate range STM16 (10 Gbps) optical facility
• STM16-LR-1	An interface card that supports one long range STM16 (10 Gbps) optical facility
• STM16-SR-1	An interface card that supports one short range STM16 (10 Gbps) optical facilities
• TCC	Timing, Communications, and Control card
• TDC-CC	Coarse tunable dispersion compensation unit
• TDC-FC	Fine tunable dispersion compensation unit
• TNC	Transport Node Controller card
• TSC	Transport Shelf Controller card
• TXP-MR-10G	10G Multirate Transponder card
• TXP-MR-2.5G	Multirate 2.5G Unprotected

Parameter	Description
• TXPP-MR-2.5G	Multirate 2.5G Protected
• UNKNOWN	Unknown equipment type
• UNPROVISIONED	Unprovisioned equipment type
• XC-VXC-10G	XC-VXC-10G cross-connect card
• XCVXL-10G	XC-VXL-10G cross-connect card
• XCVXL-2.5G	XC-VXL-2.5G cross-connect card

## 17.15 REPT EVT FXFR

(Cisco ONS 15454) The Report Event Software Download (REPT EVT FXFR) message reports the FTP software download status of the start, completion, and completed percentage.

### Usage Guidelines

- The FXFR\_RSLT is only sent when the FXFR\_STATUS is COMPLD.
- The BYTES\_XFRD is only sent when the FXFR\_STATUS is IP or COMPLD.

### Category

File Transfer

### Security

Retrieve

### Output Format

```
SID DATE TIME
A ATAG REPT EVT FXFR
  "<FILENAME>,<FXFR_STATUS>,[<FXFR_RSLT>],[<BYTES_XFRD>]"
;
```

### Output Example

```
TID-000 1998-06-20 14:30:00
A 100.100 REPT EVT FXFR
  "NEW.PKG,COMPLD,SUCCESS,21215147"
;
```

### Output Parameters

<FILENAME>	When a package is being transferred between the FTP server and the controller cards, the filename field will contain the string ACTIVE. Following this transfer, if there is a second common-control card on the NE, the file will be copied over to the second card during which time REPT EVT FXFR messages will be generated with a filename of STANDBY. FILENAME is a string.
<FXFR_STATUS>	The status of the file transfer. The parameter type is TX_STATUS, which is the status of the file transfer.
• COMPLD	The file transmission is completed.

• IP	The file transmission is in progress.
• START	The file transmission is started.
<FXFR_RSLT>	(Optional) The result of the file transfer. The parameter type is TX_RSLT, which is the result of the file transfer.
• FAILURE	A failed result
• SUCCESS	A successful result
<BYTES_XFRD>	(Optional) The percentage of bytes transferred. BYTES_XFRED is a string.

## 17.16 REPT EVT IOSCFG

(Cisco ONS 15454) The Report Event Internet Operating System Configuration File (REPT EVT IPSCFG) message reports the status of copying the Cisco IOS configuration file when the COPY-IOSCFG command is issued.

### Usage Guidelines

- You can identify if this message is caused by a Cisco IOS configuration file downloading, uploading, or merging by looking at the SRC and DEST fields in the message. See the [“8.1 COPY-IOSCFG” section on page 8-1](#) for more details.
- There is no success/failure in the message to indicate the success or failure of the merge process when merging the startup Cisco IOS config file to the running config file.

### Category

File Transfer

### Security

Retrieve

### Output Format

```
SID DATE TIME
A ATAG REPT EVT IOSCFG
“<AID>:<SRC>,<DEST>,<STATUS>,[<RESULT>]”
;
```

### Output Example

```
TID-000 1998-06-20 14:30:00
A 100.100 REPT EVT IOSCFG
“SLOT-1:STARTUP,IOS-CONFIG-FILE-IN-NETWORK,COMPLD,SUCCESS”
;
```

### Output Parameters

<AID>	Access identifier from the <a href="#">“26.15 EQPT” section on page 26-37</a> . Slot AID for the equipment.
<SRC>	Source access identifier. Specifies where the Cisco IOS configuration file is copied from. SRC is a string.

<DEST>	Destination. Specifies where the Cisco IOS configuration file is copied to. DEST is a string.
<STATUS>	The status of COPY-IOSCFG. The parameter type is TX_STATUS, which is the status of the file transfer.
• COMPLD	The file transmission is completed.
• IP	The file transmission is in progress.
• START	The file transmission is started.
<RESULT>	(Optional) The result of the file transfer. The parameter type is TX_RSLT, which is the result of the file transfer.
• FAILURE	A failed result
• SUCCESS	A successful result

## 17.17 REPT EVT SECU

(Cisco ONS 15454) The Report Event Security (REPT EVT SECU) message reports the occurrence of a nonalarmed security event against the NE.

### Usage Guidelines

- Based on TR-NWT-000835 in TR-NWT-000835 and the AID of the security alarm should be the CID, which is not supported in this release. The COM or UID is an acceptable substitute for the AID here. CIDs will be supported in a future release.
- For the rule of single failure, single message/alarm, the security alarm will not be reported as REPT ALM COM, because it is reported as REPT ALM SECU.
- Because the NE sends this security message as a transient message, to make all TL1 autonomous messages consistent, the TL1 agent reports the security message into REPT EVT SECU.
- This message is inhibited by default. A Superuser will have to issue the ALW-MSG-SECU to see this message.

### Category

Security

### Security

Superuser

### Output Format

```
SID DATE TIME
A ATAG REPT EVT SECU
  "<AID>:<DNFIELD>,<CONDEFF>],[<LOCN>],[<DIRN>],[<SECURITY>:<DNFIELD1>"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
A 100.100 REPT EVT SECU
"COM:LOGIN-FAILURE-PSWD,TC,,,,,,:\\"SECURITY:
INVALID LOGIN - PASSWORD - SEE AUDIT LOG\\""
;
```

**Output Parameters**

<AID>	Access identifier. Identifies an entity with the condition. Defaults to COM. AID is a string.
<DNFIELD>	String
<CONDEFF>	The effect of the event on the condition of the NE. The parameter type is COND_EFF, which is the state of the condition upon the affected unit.
<ul style="list-style-type: none"> <li>• CL</li> <li>• SC</li> <li>• TC</li> </ul>	<ul style="list-style-type: none"> <li>Standing condition cleared</li> <li>Standing condition raised</li> <li>Transient condition</li> </ul>
<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
<ul style="list-style-type: none"> <li>• FEND</li> <li>• NEND</li> </ul>	<ul style="list-style-type: none"> <li>Action occurs on the far end of the facility.</li> <li>Action occurs on the near end of the facility.</li> </ul>
<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
<ul style="list-style-type: none"> <li>• BTH</li> <li>• RCV</li> </ul>	<ul style="list-style-type: none"> <li>Both transmit and receive directions</li> <li>Receive direction only</li> </ul>
<SECURITY>	SECURITY is a string.
<DNFIELD1>	DNFIELD1 is a string.

## 17.18 REPT EVT SESSION

(Cisco ONS 15454) The Report Event Session (REPT EVT SESSION) message reports a nonalarmed event related to establishing a session with the NE.

**Usage Guidelines**

The WARN field might contain different information depending on the type of session-related event.

- If the password aging feature has not been enabled (or the feature is enabled but the password is not close to expiring):  
/\*USER <UID> LOGGED IN <IP/SERIAL PORT\*/
- If the forced password feature is enforced and the user is logging in for the first time (or the password has expired):  
/\*PLEASE CHANGE PASSWORD BEFORE CONTINUING\*/
- If a session is terminated for any reason (except a user timeout), the reason for the session termination is indicated in the WARN field.

## REPT EVT SYNCN

---

**Category** Security

---

**Security** Retrieve

---

**Output Format**

```

SID DATE TIME
A ATAG REPT EVT SESSION
  "<AID>:<EXP>,<PCN>"
  "<WARN>"
;

```

---

**Output Example**

```

TID-000 1998-06-20 14:30:00
A 100.100 REPT EVT SESSION
  "TCCP:YES,5-DAY"
  "/* USER TERRI LOGGED IN TO TCCP */"
;

```

---

<b>Output Parameters</b>	<AID>	Access identifier. Identifies the NE with which a session is established. AID is a string.
	<EXP>	Indicates whether the password is alive (for example, no password updating is required at the moment), expired, or is about to expire. The parameter type is YES_NO, which indicates whether the user's password is about to expire, the user is logged into the NE, or the user is locked out of the NE.
	<ul style="list-style-type: none"> <li>• NO</li> <li>• YES</li> </ul>	<ul style="list-style-type: none"> <li>No</li> <li>Yes</li> </ul>
	<PCN>	<p>The number of days still remaining before the existing password expires. PCN appears only if EXP=YES and one of the following conditions has been met:</p> <ul style="list-style-type: none"> <li>• The warning period has not been exhausted.</li> <li>• The user is a new user establishing a session for the first time and the forced password change policy has been activated.</li> </ul> <p>PCN is a string.</p>
	<WARN>	Free format text containing additional information about the security event. WARN is a string.

---

## 17.19 REPT EVT SYNCN

(Cisco ONS 15454) The Report Event Synchronization (REPT EVT SYNCN) message reports the occurrence of a nonalarmed event against a synchronization entity.

---

**Usage Guidelines** None

**Category** Synchronization

**Security** Retrieve

**Output Format**

```
SID DATE TIME
A ATAG REPT EVT SYNCN
"<AID>:<CONDTYPE>,[<CONDEFF>],,,,,,[<LOCN>],[<DIRN>]:[<DESC>],[<AIDDET>]"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
A 100.100 REPT EVT SYNCN
"SYNC-NE:SWTOINT,SC,,,,,,:\"SWITCH TO INTERNAL CLOCK\",TCC"
;
```

Output Parameters	Parameter	Description
	<AID>	Access identifier from the <a href="#">“26.30 SYNC_REF”</a> section on page 26-58.
	<CONDTYPE>	Condition type for an alarm or a reported event. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, Not Alarmed (NA) conditions, and Not Reported (NR) conditions. See <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.
	<CONDEFF>	(Optional) The effect of the event on the condition of the NE. The parameter type is COND_EFF, which is the state of the condition upon the affected unit.
	<ul style="list-style-type: none"> <li>• CL</li> <li>• SC</li> <li>• TC</li> </ul>	<ul style="list-style-type: none"> <li>Standing condition cleared</li> <li>Standing condition raised</li> <li>Transient condition</li> </ul>
	<DESC>	(Optional) Condition description.
	<AIDDET>	(Optional) AIDDET uses the same addressing rules as the AID, but specifies AID type and additional details about the entity being managed. The parameter type is EQPT_TYPE, which is the type of equipment being provisioned into a slot.
	<ul style="list-style-type: none"> <li>• 15216-MD-40-EVEN</li> <li>• 15216-MD-40-ODD</li> <li>• 15216-MD-ID-50</li> <li>• 15216-FLD4-30-3</li> </ul>	<ul style="list-style-type: none"> <li>Thermal Multiplex/Demultiplex Passive Unit, spaced at 50 GHz on even grid</li> <li>Thermal Multiplex/Demultiplex Passive Unit, spaced at 50 GHz on odd grid</li> <li>Thermal Interleaver Passive Unit, spaced at 50 GHz grid</li> <li>Edge 4-Ch Bi-Directional OADM Module 1530.33 to 1532.68</li> </ul>

Parameter	Description
• 15216-FLD4-33-4	Edge 4-Ch Bi-Directional OADM Module 1533.47 to 1535.82
• 15216-FLD4-36-6	Edge 4-Ch Bi-Directional OADM Module 1536.61 to 1538.98
• 15216-FLD4-39-7	Edge 4-Ch Bi-Directional OADM Module 1539.77 to 1542.14
• 15216-FLD4-42-9	Edge 4-Ch Bi-Directional OADM Module 1542.94 to 1545.32
• 15216-FLD4-46-1	Edge 4-Ch Bi-Directional OADM Module 1546.12 to 1548.51
• 15216-FLD4-49-3	Edge 4-Ch Bi-Directional OADM Module 1549.32 to 1551.72
• 15216-FLD4-52-5	Edge 4-Ch Bi-Directional OADM Module 1552.52 to 1554.94
• 15216-FLD4-55-7	Edge 4-Ch Bi-Directional OADM Module 1555.75 to 1558.17
• 15216-FLD4-58-9	Edge 4-Ch Bi-Directional OADM Module 1558.98 to 1561.42
• 32DMX-L	32-channel demultiplexer for L-band
• 32WSS-L	32-channel wavelength switch selector for L-band
• 40G-MXP-C	40 Gbit/Sec Multirate Muxponder
• 40-SMR1-C	The single module 40-channel ROADM on C-band
• 40-SMR2-C	The single module 40-channel ROADM with EDFA on C-band
• 40G-TXP-C	40 Gigabits per second Multirate Transponder
• 80-WXC-C	80-channel wavelength cross-connect spaced at 100 GHz grid
• AD-1B	OADM 1-Band Filter
• AD-1C	OADM 1-Channel Filter
• AD-2C	OADM 2-Channel Filter
• AD-4B	OADM 4-Bans Filter
• AD-4C	OADM 4-Channel Filter
• AICI	AIC-I card
• AIP	Alarm Indication Panel
• ALM-PWR	Alarm Power
• BP	The backplane of the NE
• CE-100T-8	8-port 100T card
• CE-1000-4	4-port GIGE mapper card
• CRFT-TMG	Craft Timing
• DCC	Data Communications Channel
• DCU	Dispersion Compensation Unit
• DMX-32	Optical DMX 32 Channels
• DS3i-N-12	DS3i-N-12 card

Parameter	Description
• E1	E1 card
• E1-42	42-port E1 card
• E1000T-2	2-port interface card supporting 1000BaseT Ethernet facilities
• E100T-12	12-port interface card supporting 100BaseT Ethernet facilities
• E100T-4	Four-port interface card supporting 100BaseT Ethernet facilities
• E1N	E1N card
• E3	E3 card
• FMEC-155E-1TO3	The equipment type for FMEC STM1E12 card with 1:3 protection
• FMEC-155E-UNPROT	The equipment type for FMEC STM1E12 card without protection
• FMEC-SMZ-E1	FMEC card corresponding to E1 card
• FMEC-SMZ-E3	FMEC card corresponding to E3 card
• FTA	Fan Tray of the NE
• FTA1	Fan Tray 1 of the NE
• FTA2	Fan Tray 2 of the NE
• G1K-4	G1K-4 card
• MD-4	Optical Multiplexer/Demultiplexer with 4 Channels
• MESH-PP-SMR	The passive unit Patch Panel device used to connect up to four 40-SMR2-C cards
• ML100X-8	8-port 100T card with optical interface
• MMU	Multiring mesh upgrade unit
• MS-ISC-100T	Fast Ethernet switch card used for internal shelf connection
• MUX-32	Optical MUX 32 Channels
• MXP-2.5G-10G	10G (4 * 2.5G) Muxponder card
• MXP-MR-10DME	10 Gbps datamux with enhanced FEC
• OPT-AMP-L	Optical preamplifier for L-band
• OPT-BST	Optical booster amplifier
• OPT-BST-L	Optical booster for L-band
• OPT-EDFA-17	MAL-less EDFA Optical Amplifier - C-band - 17dB Gain
• OPT-EDFA-24	MAL-less EDFA Optical Amplifier - C-band - 24dB Gain
• OPT-PRE	Optical Preamplifier
• OPT-RAMP-C	Raman pump amplifier C-band
• OPT-RAMP-CE	An extended version of Raman pump amplifier
• OPT-RAMP-COP	Raman COP card
• OPT-RAMP-CTP	Raman CTP card
• OPT-RAMP-E	Raman pump amplifier E-band
• OSC-CSM	Optical Service Channel with Combiner/Separator Module
• OSCM	Optical Service Channel Module

Parameter	Description
• OTU2-XP	A 4x10G transponder that is capable to operate with multiple bit rates - 10G FC, 10GE, and OC192/STM64
• PIM-4	Pluggable interface module with 4 PPM slots
• PP-4-SMR	Patch-Panel, 4 degrees, for SMR cards
• PP-MESH-4	Patch-Panel, 4 degrees
• PP-MESH-8	Patch-Panel, 8 degrees
• PPM-1	Pluggable port module with 1-port SFP module
• PSM	Protection unit
• PTM-4	Line card
• PTF-4	Fabric card
• PTSA	CPT 50 panel
• PTSYSFan-Out-Group	PTSYS Fan-Out-Group
• SHELF	Shelf entity
• STM4	An interface card that supports one or more STM4 (622 Mbps) optical facilities
• STM4-4	A four port STM4 card
• STM4-IR-1	An interface card that supports one intermediate range STM4 (622 Mbps) optical facilities
• STM4-LR-1	An interface card that supports one long range STM4 (622 Mbps) optical facilities
• STM4-SR-1	An interface card that supports one short range STM4 (622 Mbps) optical facilities
• STM64-4	A four-port STM64 card
• STM64-LR-1	An interface card that supports one or more STM64 optical facilities
• STM1	An interface card that supports multiple STM1 (155 Mbps) optical facilities
• STM1-IR-4	An interface card that supports four intermediate range STM1 (155 Mbps) optical facilities
• STM1-SR-4	An interface card that supports four short range STM1 (155 Mbps) optical facilities
• STM1ATM-IR-6	An interface card that supports six intermediate range STM1 (155 Mbps) ATM optical fibers
• STM1IR-STM1SH-1310-8	An STM1 card which has 8 ports over the lower speed slot of the ONS 15454 SDH with XC-VXL-10G/XC-VXL-2.5G
• STM1POS-SR-4	An interface card that supports four short range STM1 (155 Mbps) POS optical facilities
• STM16	An interface card that supports one or more STM16 (10 Gbps) optical facilities
• STM16-AS-1	An interface card that supports one short range OC-48 (10 Gbps) optical facilities that can be provisioned in any I/O slot
• STM16-ELR-1	An interface card that supports one short range STM16 (2.5 Gbps) optical facility

Parameter	Description
• STM16-IR-1	An interface card that supports one intermediate range STM16 (10 Gbps) optical facility
• STM16-LR-1	An interface card that supports one long range STM16 (10 Gbps) optical facility
• STM16-SR-1	An interface card that supports one short range STM16 (10 Gbps) optical facilities
• TCC	Timing, Communications, and Control card
• TDC-CC	Coarse tunable dispersion compensation unit
• TDC-FC	Fine tunable dispersion compensation unit
• TXP-MR-10G	10G Multirate Transponder card
• TXP-MR-2.5G	Multirate 2.5G Unprotected
• TXPP-MR-2.5G	Multirate 2.5G Protected
• UNKNOWN	Unknown equipment type
• UNPROVISIONED	Unprovisioned equipment type
• XC-VXC-10G	XC-VXC-10G cross-connect card
• XCVXL-10G	XC-VXL-10G cross-connect card
• XCVXL-2.5G	XC-VXL-2.5G cross-connect card

## 17.20 REPT PM <MOD2>

(Cisco ONS 15454) The Report Performance Monitoring for 10GFC, 10GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, CLNT, D1VIDEO, DS1, DV6000, E1, E3, E4, EC1, ESCON, ETRCLO, ETH, FSTE, G1000, GFPOS, GIGE, HDTV, ILK, ISCCOMPAT, ISC3PEER2R, ISC3PEER1G, ISC3PEER2G, OC12, OC192, OC3, OC48, OCH, OMS, OTS, POS, STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS6C, STS9C, T1, T3, VC12, VC3, VT1, or VT2 (REPT PM <MOD2>) message reports autonomous monitoring statistics as a result of the schedule created by SCHED-PMREPT.

### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.



### Note

Autonomous performance monitoring (Auto PM) report will have all PM paths reported without any filtering. If a particular parameter is not applicable to that card or circuit, then the value of MONVAL and VLDTY will be NA.

### Category

Performance

### Security

Retrieve

**Output Format**

```

SID DATE TIME
A ATAG REPT PM <MOD2>
  "<AID>:<MONTYPE>,<MONVAL>,<VLDTY>,<LOCN>,<DIRN>,<TMPER>,<MONDAT>,<MONTM>"
;

```

**Output Example**

```

TID-000 1998-06-20 14:30:00
A 100 REPT PM 10GFC
  "FAC-3-1:CVL,10,PRTL,NEND,BTH,15-MIN,05-25,14-46"
;

```

**Output Parameters**

<AID>	Access identifier from the <a href="#">“26.1 ALL” section on page 26-1</a> .
<MONTYPE>	Monitored type. The parameter type is ALL_MONTYPE, which is the monitoring type list.
• AISSP	Alarm Indication Signal Seconds—Path
• ALL	All possible values
• BBE-PM	OTN—Background Block Errors—Path Monitor Point
• BBE-SM	OTN—Background Block Errors—Section Monitor Point
• BBER-PM	OTN—Background Block Error Ratio—Path Monitor Point expressed as one tenth of a percentage.
• BBER-SM	OTN—Background Block Error Ratio—Section Monitor Point expressed as one tenth of a percentage.
• BIEC	FEC—Bit Errors Corrected
• CGV	8B10B—Code Group Violations
• CSSP	Controlled Slip Seconds—Path (DSXM-12 FDL/T1.403 PM count)
• CVCPP	Coding Violations—CP-Bit Path
• CVL	Coding Violations—Line
• CVP	Coding Violations—Path
• CVS	Coding Violations—Section
• CVV	Coding Violations—Section
• DCG	8B10B—Data Code Groups
• ESAP	Errored Second Type A—Path (DS3XM-12 DS1 PM count)
• ESBP	Errored Second Type B—Path (DS3XM-12 DS1 PM count)
• ESCPP	Errored Seconds—CP—Bit Path
• ESL	Errored Seconds—Line
• ESNPFE	Errored Second—Network Path (DS3XM-12 DS1 PM count)
• ESP	Errored Seconds—Path
• ES-PM	OTN—Errored Seconds—Path Monitor Point
• ES-SM	OTN—Errored Seconds—Section Monitor Point
• ESR	Errored Second—Ratio
• ESR-PM	Errored Seconds Ratio—Path monitor point expressed as one tenth of a percentage

• ESR-SM	Errored Seconds Ratio—Section monitor point expressed as one tenth of a percentage
• ESS	Errored Seconds—Section
• ESV	Errored Seconds—VT Path
• etherStatsBroadcastPkts	The total number of good packets received that were directed to a multicast address
• etherStatsCollisions	Number of transmit packets that are collisions
• etherStatsCRCAlignErrors	The total number of packets received that have a length (excluding framing bits, but including frame check sequence [FCS] octets) of between 64 and 1518 octets
• etherStatsDropEvents	Number of received frames dropped at the port level
• etherStatsFragments	The total number of packets received that were less than 64 octets
• etherStatsJabbers	The total number of packets received that are longer than 1518 octets
• etherStatsOctets	The total number of octets of data
• etherStatsOversizePkts	The total number of packets received that are longer than 1518 octets
• etherStatsPkts	The total number of packets (including bad packets, broadcast packets, and multicast packets) received
• etherStatsUndersizePkts	The total number of packets received that are less than 64 octets
• FCP	Failure Count—Line
• FC-PM	OTN—Failure Count—Path Monitor Point
• FC-SM	OTN—Failure Count—Section Monitor Point
• HP-AR	Availability Ratio
• HP-BBE	High-Order Path Background Block Error
• HP-BBER	High-Order Path Background Block Error Ratio
• HP-EB	High-Order Path Errored Block
• HP-ES	High-Order Path Errored Second
• HP-ESA	High-Order Path Errored Seconds—A
• HP-ESB	High-Order Path Errored Seconds—B
• HP-ESR	High-Order Path Errored Second Ratio
• HP-FC	High-Order Path Failure Count
• HP-NPJC-PDET	High-Order Path Negative Pointer Justification Count, Path Detected
• HP-NPJC-PGEN	High-Order Path, Negative Pointer Justification Count, Path Generated
• HP-OI	Outage Intensity
• HP-PJCDIFF	High-Order Path Pointer Justification Count Difference
• HP-PJCS-PDET	High-Order Path Pointer Justification Count, Path Detected
• HP-PJCS-PGEN	High-Order Path Pointer Justification Count Seconds, Path Generated
• HP-PPJC-PDET	High-Order Path Positive Pointer Justification Count, Path Detected
• HP-PPJC-PGEN	High-Order Path, Positive Pointer Justification Count, Path Generated

• HP-SEPI	The number of SEP events in available time
• HP-SES	High-Order Path Severely Errored Seconds
• HP-SESR	High-Order Path Severely Errored Second Ratio
• HP-UAS	High-Order Path Unavailable Seconds
• ifInBroadcastPkts	Number of broadcast packets received since the last counter reset
• ifInDiscards	The number of inbound packets
• ifInErrorBytePktss	Receive Error Byte
• ifInErrors	The number of inbound packets (or transmission units) that contained errors
• ifInFramingErrorPkts	Receive Framing Error
• ifInJunkInterPkts	Receive Interpacket Junk
• ifInMulticastPkts	Number of multicast packets received since the last counter reset
• ifInOctets	Number of bytes transmitted since the last counter reset
• ifInUcastPkts	Number of unicast packets received since the last counter reset
• ifOutBroadcastPkts	Number of broadcast packets transmitted
• ifOutDiscards	The number of outbound packets
• ifOutErrors	The number of outbound packets (or transmission units) that could not be transmitted because of errors
• ifOutMulticastPkts	Number of multicast packets transmitted
• ifOutPayloadCrcErrors	Received payload cyclic redundancy check (CRC) errors
• ifOutUcastPkts	Number of unicast packets transmitted
• IOS	8B10B—Idle Ordered Sets
• IPC	Invalid Packet Count
• LBCL-AVG	Average Laser Bias current in microA
• LBCL-MAX	Maximum Laser Bias current in microA
• LBCL-MIN	Minimum Laser Bias current in microA
• LBCN	Normalized Laser Bias Current for OC3-8
• LBCN-HWT	Laser Bias Current
• LBCN-LWT	Laser Bias Current
• LOSSL	Loss of Signal Seconds—Line
• LP-BBE	Low-Order Path Background Block Error
• LP-BBER	Low-Order Path Background Block Error Ratio
• LP-EB	Low-Order Path Errored Block
• LP-ES	Low-Order Path Errored Second
• LP-ESA	Low-Order Path Errored Seconds—A
• LP-ESB	Low-Order Path Errored Seconds—B
• LP-ESR	Low-Order Path Errored Second Ratio
• LP-FC	Low-Order Path Failure Count
• LP-NPJC-DET	Low-Order Negative Pointer Justification Count, Detected
• LP-NPJC-GEN	Low Order Negative Pointer Justification Count, Generated
• LP-PPJC-DET	Low-Order Positive Pointer Justification Count, Detected
• LP-PPJC-GEN	Low-Order positive Pointer Justification Count, Generated

• LP-SEP	Low-Order Path Severely Errored Period
• LP-SEPI	Low-Order Path Severely Errored Period Intensity
• LP-SES	Low-Order Path Severely Errored
• LP-UAS	Low-Order Path Unavailable Seconds
• MS-PSC	Protection switch count
• MS-PSD	Protection switch duration
• NIOS	8B10B—Non Idle Ordered Sets
• NPJC-PDET	Negative Pointer Justification Count, Path Detected
• NPJC-PGEN	Negative Pointer Justification Count, Path Generated
• OPR-AVG	Average Receive Power in tenths of a microW
• OPR-MAX	Maximum Receive Power in tenths of a microW
• OPR-MIN	Minimum Receive Power in tenths of a microW
• OPRN	Normalized Optical Receive Power for OC3-8
• OPRN-MAX	Maximum value for OPRN
• OPRN-MIN	Minimum value for OPRN
• OPT-AVG	Average Transmit Power in tenths of a microW
• OPT-MAX	Maximum Transmit Power in tenths of a microW
• OPT-MIN	Minimum Transmit Power in tenths of a microW
• OPTN	Normalized value for Optical Power Transmitted for the OC3-8 card
• OPTN-MAX	Maximum value for OPTN
• OPTN-MIN	Minimum value for OPTN
• OPWR-AVG	Optical Power—Average Interval Value in one tenth of a dBm
• OPWR-MAX	Optical Power—Maximum Interval Value in one tenth of a dBm
• OPWR-MIN	Optical Power—Minimum Interval Value in one tenth of a dBm
• PPJC-PDET	Positive Pointer Justification Count, Path Detected
• PPJC-PGEN	Positive Pointer Justification Count, Path Generated
• PSC	Protection Switching Count
• PSC-R	Protection Switching Count—Ring
• PSC-S	Protection Switching Count—Span
• PSC-W	Protection Switching Count—Working
• PSD	Protection Switching Duration
• PSD-R	Protection Switching Duration—Ring
• PSD-S	Protection Switching Duration—Span
• PSD-W	Protection Switching Duration—Working
• SASCPP	Severely Errored Framing/Alarm Indication Signal (SEF/AIS) Second—CP-Bit Path
• SASP	Severely Errored Framing/AIS Seconds Path
• SEFS	Severely Errored Framing Seconds
• SEFSP	Severely Errored Framing Seconds—Path (DS3XM-12 DS1 PM count)
• SESCPP	Severely Errored Second—CP-Bit Path
• SESL	Severely Errored Second—Line

• SESNPFE	Severely Errored Second—Network Path (DS3XM-12 DS1 PM count)
• SESP	Severely Errored Second—Path
• SES-PM	OTN—Severely Errored Second—Path
• SESR-PM	OTN—Severely Errored Second Ratio—Path Monitor Point expressed as one tenth of a percentage
• SESR-SM	OTN—Severely Errored Second Ratio—Section Monitor Point expressed as one tenth of a percentage
• SESS	Severely Errored Second—Section
• SES-SM	OTN—Severely Errored Second—Section Monitor Point
• SESV	Severely Errored Second—VT Path
• UASCPP	Unavailable Second—CP-Bit Path
• UASL	Unavailable Second—Line
• UASNPFE	Unavailable Second—Network Path (DS3XM-12 DS1 PM count)
• UASP	Unavailable Second—Path
• UAS-PM	OTN—Unavailable Second—Path Monitor Point
• UAS-SM	OTN—Unavailable Second—Section Monitor Point
• UASV	Unavailable Second—VT Path
• UNC-WORDS	Forward Error Correction (FEC)—Uncorrectable Words
• VPC	Valid Packet Count
<MONVAL>	The value to which the register identified by MONTYPE is to be initialized to or the measured value of a monitored parameter. The value is in the form of numeric counts or rates. MONVAL is a string.
<VLDTY>	Indicates whether the information for the specified time period was accumulated over the entire time period or a portion of that time period. Validity indicator for the reported PM data. The parameter type is VALIDITY, which is the response validity.
• COMPL	Complete response
• PRTL	Partial response
<LOCN>	Location associated with a particular command in reference to the entity identified by the AID. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<DIRN>	Direction relative to the entity identified by the AID. Direction of PM relative to the entity identified by the AID. The parameter type is DIRECTION, which is the transmit and receive directions.
• BTH	Both transmit and receive directions
• RCV	Receive direction only
• TRMT	Transmit direction only
<TMPER>	Accumulation time period for performance counters. The parameter type is TMPER, which is the accumulation time period for the performance management center.

• 1-DAY	Performance parameter accumulation interval length; every 24 hours. For SONET PM data only one day of history data is available. For RMON managed PM data seven days of history data are available.
• 1-HR	Performance parameter accumulation interval length; every 1 hour. This is only applicable to RMON managed PM data. There are 24 hours of history data available.
• 1-MIN	Performance parameter accumulation interval length; every 1 minute. This is only applicable to RMON managed PM data. There are 60 minutes of history available.
• 15-MIN	Performance parameter accumulation interval length; every 15 minutes. There are 32 15-MIN buckets of history data available for this accumulation interval length.
• RAW-DATA	Performance parameter accumulation interval length; starting from the last time the counters were cleared. This is only applicable to RMON managed PMs.
<MONDAT>	The beginning date of the PM or storage register period specified in TMPER. The format is MM-DD. MONDAT is a string.
<MONTM>	The beginning time of day of the PM or storage register period specified in TMPER. The format is HH-MM. MONTM is a string.

## 17.21 REPT SW

(Cisco ONS 15454) The Report Switch (REPT SW) message reports the autonomous switching of a unit in a duplex equipment pair to the standby state and its mate unit to the active state. An automatic report for the occurrence or clearance of an alarm or event that triggers the switch might be associated with the message.

**Usage Guidelines** None

**Category** Protection

**Security** Retrieve

**Output Format**

```
SID DATE TIME
A ATAG REPT SW
"<ACTID>,<STDBYID>"
;
```


---

**Output Example**      TID-000 1998-06-20 14:30:00  
A 100.100 REPT SW  
    “SLOT-8,SLOT-10”  
;

---

<b>Output Parameters</b>	<ACTID>	Identifies the equipment unit from the “ <a href="#">26.15 EQPT</a> ” section on <a href="#">page 26-37</a> that was placed in the active state. Parameter grouping cannot be used with this parameter.
	<STDBYID>	Identifies the equipment unit from the “ <a href="#">26.15 EQPT</a> ” section on <a href="#">page 26-37</a> that was placed in the standby state. Parameter grouping cannot be used with this parameter.

---

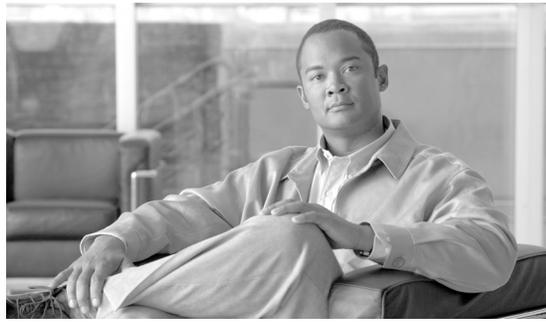

# CHAPTER 18

## RLS Commands

---



### Note

The terms "Unidirectional Path Switched Ring" and "UPSR" may appear in Cisco literature. These terms do not refer to using Cisco ONS 15xxx products in a unidirectional path switched ring configuration. Rather, these terms, as well as "Path Protected Mesh Network" and "PPMN," refer generally to Cisco's path protection feature, which may be used in any topological network configuration. Cisco does not recommend using its path protection feature in any particular topological network configuration.

This chapter provides release (RLS) commands for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.



### Note

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

## 18.1 RLS-EXT-CONT

(Cisco ONS 15454) The Release External Control (RLS-EXT-CONT) command releases a forced contact state and returns the control of the contact to an AUTOMATIC control state. In AUTOMATIC control state, the contact can be opened or closed depending on triggers that might be provisioned in the network element (NE). Therefore, issuing an RLS might not produce any contact state change.

### Usage Guidelines

The NE defaults to having no triggers provisioned for external controls, which consequently produces default open contacts. An NE with this default provisioning will always produce an open contact with a RLS-EXT-CONT command.



### Note

- The duration is not supported; it defaults to CONTS.
- In an automatic state, the contact could be opened or closed depending on the provisioned trigger. Therefore, issuing an OPR-EXT-CONT command followed by an RLS-EXT-CONT command might not produce any contact state change.

- The RLS-EXT-CONT is not allowed during the MNTRY duration. The command is allowed for the CONTS duration. The length of MNTRY duration is set to be 2 seconds.
- RLS-EXT-CONT cannot change the contact state to Automatic if the existing state is Manual Open.

<b>Category</b>	Environment
<b>Security</b>	Maintenance
<b>Input Format</b>	RLS-EXT-CONT:[<TID>]:<AID>:<CTAG>[::,];
<b>Input Example</b>	RLS-EXT-CONT:CISCO:ENV-OUT-2:123;
<b>Input Parameters</b>	<AID> Access identifier from the “ <a href="#">26.14 ENV</a> ” section on page 26-37. Identifies the external control being released.

## 18.2 RLS-LPBK-<MOD2>

(Cisco ONS 15454) The Release Loopback for 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 5GIB, 8GFC, CLNT, D1VIDEO, DS1, DV6000, E1, E3, E4, EC1, ESCON, ETRCLO, ETH, FSTE, G1000, GFPOS, GIGE, HDTV, ISC1, ISCCOMPAT, ISC3PEER2R, ISC3PEER1G, ISC3PEER2G, OC12, OC192, OC3, OC48, OC768, OCH, OMS, OTS, OTU3, POS, STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, and STS9C (RLS-LPBK-<MOD2>) command releases a signal loopback on a multiservice or a cross-connect card.

**Usage Guidelines** See [Table 28-1 on page 28-1](#) for supported modifiers by platform.



### Note

- The value CRS for the LPBKTYPE parameter is applicable only for the STS modifier. The FACILITY and TERMINAL values for LPBKTYPE parameter are applicable to the ports.
- The optional LPBKTYPE field defaults to the current existing loopback type.
- The TERMINAL loopback type is supported on the DS1 path of DS3XM cards.
- FEAC loopbacks can be released by specifying LINE as the loopback type and NEND as the location.
- FEAC loopbacks on the DS1 interface of a DS3XM card can be applied only if a Virtual Tributary (VT) connection has been created on it. An attempt to operate or release FEAC loopbacks in the absence of a VT connection will result in an error message.

- Only the following MOD2 fields are supported in this release: DS1 EC1, G1000, FSTE, OC12, OC192, OC3, OC48, OCH, T1, T3, STS1, STS12C, STS192C, STS24C, STS3C, STS36C, STS48C, STS6C, STS9C, E1, 1GFC, 2GFC, 4GFC, 10GFC, 1GFICON, 2GFICON, 4GFICON, GIGE, 10GIGE, ESCON, STS18C, DV6000, ETRCLO, ISCCOMPAT, ISC3PEER1G, ISC3PEER2R, PASSTHRU, ISC3PEER2G.

**Category**

Troubleshooting and Test Access

**Security**

Maintenance

**Input Format**

RLS-LPBK-&lt;MOD2&gt;:[&lt;TID&gt;]:&lt;SRC&gt;:&lt;CTAG&gt;::[&lt;LOCATION&gt;],,,[&lt;LPBKTYPE&gt;];

**Input Example**

RLS-LPBK-DS1:PTREYES:DS1-4-1-2-13:203::NEND,,,FACILITY;

**Input Parameters**

<SRC>	Source access identifier from the “26.1 ALL” section on page 26-1. The valid values for AID are FACILITY, DS1, and STS.
<LOCATION>	The location where the operation is to be carried out. LOCATION defaults to NEND. The parameter type is LOCATION, which is the location where the action is to take place.
<ul style="list-style-type: none"> <li>• FEND</li> <li>• NEND</li> </ul>	<ul style="list-style-type: none"> <li>Action occurs on the far end of the facility.</li> <li>Action occurs on the near end of the facility.</li> </ul>
<LPBKTYPE>	Type of loopback signal. The parameter type is LPBK_TYPE, which indicates the type of loopback that is to be operated or released.
<ul style="list-style-type: none"> <li>• CRS</li> <li>• FACILITY</li> <li>• LINE</li> <li>• TERMINAL</li> </ul>	<ul style="list-style-type: none"> <li>Path level loopback which is established at the cross-connect matrix level (the XCVT/XC10G card). A synchronous transport signal (STS)-level cross-connect loopback causes a path alarm indication signal (AIS-P) to be sent in the outgoing direction of transmission.</li> <li>Type of loopback that connects the incoming received signal immediately following the optical-to-electrical conversion (after descrambling) to the associated transmitter in the return direction.</li> <li>Line level loopback for a far-end DS1 path loop back of the DS3XM. The DS3XM cards only support the DS1 path far end FEAC loopback in this release.</li> <li>A loopback that connects the signal that is about to be transmitted (after scrambling but before the electrical-to-optical conversion) and is connected to the associated, incoming receiver.</li> </ul>

## 18.3 RLS-LPBK-EFM

(Cisco ONS 15454) The Release Loopback Edit Ethernet in the First Mile (RLS-LPBK-EFM) command releases the loopback that is provisioned on the Edit Ethernet in the First Mile (EFM) enabled port.

### Usage Guidelines

- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.

### Category

Ports

### Security

Provisioning

### Input Format

RLS-LPBK-EFM:[<TID>]:<AID>:<CTAG>;

### Input Example

RLS-LPBK-EFM::ETH-12-1-1:1;

### Input Parameters

<AID> Access identifier from the [“26.16 ETH” section on page 26-40.](#)

## 18.4 RLS-PROTNSW-<MOD2DWDMPAYLOAD>

(Cisco ONS 15454) The Release Protection Switch for 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 8GFC, D1VIDEO, DV6000, DVBAS1, ETRCLO, FSTE, GIGE, HDTV, ISC1, ISC3, OTU3, or PASSTHRU (RLS-PROTNSW-<MOD2DWDMPAYLOAD>) command releases a Y-cable protection switch on client facilities.

### Usage Guidelines

None

### Category

DWDM

### Security

Maintenance

### Input Format

RLS-PROTNSW-<MOD2DWDMPAYLOAD>:[<TID>]:<SRC>:<CTAG>[::];

**Input Example** RLS-PROTNSW-HDTV:CISCO:FAC-1-1-1:100;

**Input Parameters** <SRC> Source access identifier from the “26.17 FACILITY” section on page 26-40.

## 18.5 RLS-PROTNSW-<OCN\_TYPE>

(Cisco ONS 15454) The Release Protection Switch for OC3, OC12, OC48, OC192, or OC768 (RLS-PROTNSW-<OCN\_TYPE>) command releases a SONET line protection switch request.

**Usage Guidelines** See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

The release of a protection switch request is applicable only to the OPR-PROTNSW protection switch commands, which are the user-initiated switch protection commands.

The following actions will return error messages:

- This command is not used for the common control (TCC2/TCC2P/TCC3 or XCVT/XC10G) cards. Sending a command on a common control card will return an IIAC (Input, Invalid Access Identifier) error message. To query the common control card switching commands, use the SW-DX-EQPT and ALW-SWDX-EQPT commands.
- Sending this command to electrical cards will return an IIAC (Input, Invalid Access Identifier) error message. For electrical card switching, use the ALW-SWTOPROTN/SWTOWKG-EQPT and INH-SWTOPROTN/SWTOWKG-EQPT commands.
- Sending this command to query on a card that is not in a protection group will return the SNVS (Status, Not in Valid State) error message.
- Sending this command to a working card that is failed or missing will return the SWFA (Status, Working unit Failed) error message.
- Sending this command to a protect card that is failed or missing will return the SPFA (Status, Protection unit Failed) error message.
- Sending this command to a card that is not in protection will return the SNPR (Status, Not in Protection State) error message.
- Sending this command to an OC-N line that is already in clear mode will return a SAMS (Already in Clear Maintenance State) error message.



### Note

- To get the protection switching state (manual, lockout, forced), use the RTRV-COND-ALL or RTRV-ALM-ALL command.
- DIRN is an optional parameter. A NULL value defaults to BTH for a bidirectional line switched ring (BLSR), BTH for a 1+1 bidirectional protection group, and RCV for 1+1 unidirectional protection group.

DIRN follows these rules: TRMT will always fail for any kind of protection groups. For two-fiber and four-fiber BLSR protection groups, both the RCV and TRMT directions will fail.

- DIRN is applicable for both 1+1 and BLSR protection groups. OPR-PROTNSW applies to a BLSR span/ring as shown by the following command:

```
RLS-PROTNSW-OC48::FAC-5-1:A::BTH;
```

This command instructs the NE to release a line protection switch request between a working line and a protection line

**Category**

Protection

**Security**

Maintenance

**Input Format**

RLS-PROTNSW-&lt;OCN\_TYPE&gt;[:&lt;TID&gt;]:&lt;AID&gt;:&lt;CTAG&gt;[:&lt;DIRECTION&gt;];

**Input Example**

RLS-PROTNSW-OC48:PETALUMA:FAC-6-1:209::BTH;

**Input Parameters**

<AID>	Access identifier from the “ <a href="#">26.17 FACILITY</a> ” section on <a href="#">page 26-40</a> . Identifies the facility in the NE to which the switch request is directed.
<DIRECTION>	Direction. Defaults to RCV. The parameter type is DIRECTION (transmit and receive direction)
• BTH	Both transmit and receive directions
• RCV	Receive direction only
• TRMT	Transmit direction only

## 18.6 RLS-PROTNSW-<PATH>

(Cisco ONS 15454) The Release Protection Switch for STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, STS9C, VT1, or VT2 (RLS-PROTNSW-<PATH>) command releases a SONET path protection switch request that was established with the OPR-PROTNSW-<PATH> command. This command assumes that only one user-initiated switch is active per AID.

**Usage Guidelines**

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

**Note**

- This command applies to path protection configuration only.
- The VTAID should be the working or protect AID only.

- If sending this command on the drop AID, a DENY (Invalid AID, should use working/protect AID) message will be returned.
- To get the protection switching state (manual, lockout, forced), use the RTRV-COND-ALL or RTRV-ALM-ALL command.

<b>Category</b>	Protection
<b>Security</b>	Maintenance
<b>Input Format</b>	RLS-PROTNSW-<PATH>:[<TID>]:<SRC>:<CTAG>[::];
<b>Input Example</b>	RLS-PROTNSW-STS1:CISCO:STS-2-1-1:123;
<b>Input Parameters</b>	MSRC> <a href="#">Source access identifier from the “26.11 CrossConnectId” section on page 26-25.</a>

## 18.7 RLS-PROTNSW-OCH

(Cisco ONS 15454) The Release Protection Switch Optical Channel (RLS-PROTNSW-OCH) command releases the protection switch on a TXPP\_MR\_2.5G card.

<b>Usage Guidelines</b>	None
<b>Category</b>	DWDM
<b>Security</b>	Maintenance
<b>Input Format</b>	RLS-PROTNSW-OCH:[<TID>]:<AID>:<CTAG>;
<b>Input Example</b>	RLS-PROTNSW-OCH:VA454-22:CHAN-2-2:1;
<b>Input Parameters</b>	<AID> <a href="#">Access identifier from the “26.8 CHANNEL” section on page 26-22.</a>

## 18.8 RLS-PROTNSW-OTS

(Cisco ONS 15454) The Release Protection Switch OTS (RLS-PROTNSW-OTS) command releases the protection switch on a TXPP\_MR\_2.5G card or a protection switch unit or a OTU2-XP card.

When Y-cable protection is provisioned on the OTU2-XP, this command releases a Y-cable protection switch.

---

**Usage Guidelines**

None

---

**Category**

DWDM

---

**Security**

Maintenance

---

**Input Format**

RLS-PROTNSW-OTS:[&lt;TID&gt;]:&lt;AID&gt;:&lt;CTAG&gt;;

---

**Input Example**

RLS-PROTNSW-OTS:VA454-22:CHAN-2-2:1;

---

**Input Parameters**


---

<AID>      Access identifier from the [“26.8 CHANNEL”](#) section on page 26-22.

---

## 18.9 RLS-SYNCNSW

(Cisco ONS 15454) The Release Synchronization Switch (RLS-SYNCNSW) command releases the previous synchronization reference provided by the OPR-SYNCNSW command.

---

**Usage Guidelines**

In a nonrevertive system, the use of the RLS-SYNCNSW command might not be appropriate. All the switching between synchronization references should be initiated with the OPR-SYNCNSW command.

When a switch is released, the MANSWTOPRI (Manual Switch to Primary Reference or Secondary...) or FRDCSWTOPRI (Forced Switch to Primary Reference or Secondary...) minor alarm will be cleared.

---

**Category**

Synchronization

---

**Security**

Maintenance

---

**Input Format**

RLS-SYNCNSW:[&lt;TID&gt;]:[&lt;AID&gt;]:&lt;CTAG&gt;;

---

**Input Example** RLS-SYNCNSW:CISCO:SYNC-NE:3;

---

**Input Parameters** <AID> Access identifier from the “[26.30 SYNC\\_REF](#)” section on page 26-58 Defaults to SYNC-NE.

---





# CHAPTER 19

## RMV Commands

---

This chapter provides remove (RMV) commands for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.



**Note**

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

---

### 19.1 RMV-<MOD2>

(Cisco ONS 15454) The Remove 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 5GIB, 8GFC, CLNT, D1VIDEO, DS1, DV6000, DVBASI, E1, E3, E4, EC1, ESCON, ETRCLO, ETH, FSTE, G1000, GFPOS, GIGE, HDTV, ISC1, ILK, ISCCOMPAT, ISC3PEER2R, ISC3PEER1G, ISC3PEER2G, OC12, OC192, OC3, OC48, OC768, OCH, OMS, OTS, OTU3, POS, STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, STS9C, T1, T3, VC12, VC3, VT1, or VT2 (RMV-<MOD2>) command removes a facility from service.

---

**Usage Guidelines**

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

---

**Category**

Ports

---

**Security**

Maintenance

---

**Input Format**

RMV-<MOD2>[:<TID>]:<AID>:<CTAG>[::];

---

**Input Example**

RMV-EC1:CISCO:FAC-1-1:1;

---

**Input Parameters**

<AID> Access identifier from the [“26.1 ALL” section on page 26-1](#)

---

## 19.2 RMV-EQPT

(Cisco ONS 15454) The Remove Equipment (RMV-EQPT) command removes equipment from the In Service (IS) state and places it into the Maintenance (MT) state.

---

### Usage Guidelines

This command is only applicable to equipment that is in transition from the IS state to the MT state.



### Note

This command can be executed only if the equipment is in IS-NR, OOS-AU, MEA or OOS-AU, UEQ state.

---



---

### Category

Equipment

---

### Security

Maintenance

---

### Input Format

RMV-EQPT:[<TID>]:<AID>:<CTAG>[:.];

---

### Input Example

RMV-EQPT:CISCO:SLOT-1:1;

---

### Input Parameters

<AID> [Access identifier from the “26.15 EQPT” section on page 26-37.](#)

---



# CHAPTER 20

## RST Commands

---

This chapter provides restore (RST) commands for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.



### Note

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

---

## 20.1 RST-<MOD2>

(Cisco ONS 15454) The Restore 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 5GIB, 8GFC, CLNT, D1VIDEO, DS1, DV6000, DVBASI, E1, E3, E4, EC1, ESCON, ETRCLO, ETH, FSTE, G1000, GFPOS, GIGE, HDTV, ISC1, ILK, ISCCOMPAT, ISC3PEER2R, ISC3PEER1G, ISC3PEER2G, OC12, OC192, OC3, OC48, OC768, OCH, OMS, OTS, OTU3, POS, STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, STS9C, T1, T3, VC12, VC3, VT1, or VT2 (RST-<MOD2>) command provisions a facility as In-Service (IS).

### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.



### Note

This command can only be executed when the port is in the Out of Service and Maintenance (OOS,MT) state.

---

### Category

Ports

### Security

Maintenance

### Input Format

RST-<MOD2>:[<TID>]:<AID>:<CTAG>:::[<PST>[,<SST>]];

### Input Example

RST-EC1:CISCO:FAC-1-1:1:::IS,AINS;

<b>Input Parameters</b>	<AID>	Access identifier from the <a href="#">“26.1 ALL” section on page 26-1</a> .
	<PST>	Primary state. Defaults to IS. The parameter type is PST, which indicates the current overall service condition of an entity.
	• IS	In service
	• OOS	Out of service
	<SST>	Secondary state. Defaults to AINS. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
	• AINS	Automatic In-Service
	• DSBLD	Disabled
	• LPBK	Loopback
	• MEA	Mismatch of Equipment
	• MT	Maintenance
	• OOG	Out of Group
	• SWDL	Software Download
	• UAS	Unassigned
	• UEQ	Unequipped

## 20.2 RST-EQPT

(Cisco ONS 15454) The Restore Equipment (RST-EQPT) command provisions equipment into the IS state from the Maintenance (MT) state.

**Usage Guidelines** This command is only applicable to equipment that is in transition from the Maintenance state to the In-Service state.

**Category** Equipment

**Security** Maintenance

**Input Format** RST-EQPT:[<TID>]:<AID>:<CTAG>[:];

**Input Example** RST-EQPT:CISCO:SLOT-1:1;

**Input Parameters** <AID> Access identifier from the [“26.15 EQPT” section on page 26-37](#).



# CHAPTER 21

## RTRV Commands

---



### Note

The terms "Unidirectional Path Switched Ring" and "UPSR" may appear in Cisco literature. These terms do not refer to using Cisco ONS 15xxx products in a unidirectional path switched ring configuration. Rather, these terms, as well as "Path Protected Mesh Network" and "PPMN," refer generally to Cisco's path protection feature, which may be used in any topological network configuration. Cisco does not recommend using its path protection feature in any particular topological network configuration.

---

This chapter provides retrieve (RTRV) commands for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.



### Note

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

---

## 21.1 RTRV-<MOD1FCPAYLOAD>

(Cisco ONS 15454) The Retrieve 1GFC, 2GFC, 4 GFC, 5GIB, 8GFC, or 10GFC (RTRV-<MOD1FCPAYLOAD>) command retrieves the attributes related with the Fibre Channel port.

---

### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

---

### Category

Ports

---

### Security

Retrieve

---

### Input Format

RTRV-<MOD1FCPAYLOAD>:[<TID>]:<AID>:<CTAG>[:::];

---

### Input Example

RTRV-1GFC:CISCO:FAC-6-1:888;

**Input Parameters**

<AID>	Access identifier from the “26.17 FACILITY” section on page 26-40.
-------	--

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<AID>:.,[<ROLE>],[<STATUS>]:LINKRATE=<LINKRATE>,LINKSTATE=<LINKSTATE>,
[LINKRCVRY=<LINKRCVRY>],[DISTEXTN=<DISTEXTN>],
[LINKCREDITS=<LINKCREDITS>],[MFS=<MFS>],[ENCAP=<ENCAP>],[NAME=<NAME>],
[SOAK=<SOAK>],[SOAKLEFT=<SOAKLEFT>],[FREQ=<FREQ>],[LOSSB=<LOSSB>]:
<PST_PSTQ>,[<SST>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“FAC-1-1:.,WORK,ACT:LINKRATE=1GFC,LINKSTATE=UP,LINKRCVRY=Y,
DISTEXTN=NONE,LINKCREDITS=0,MFS=2148,ENCAP=GFP-T,
NAME="FC PORT",SOAK=32,SOAKLEFT="12-25",FREQ=1550,
LOSSB=LR-1:OOS-MA,MT”
;
```

**Output Parameters**

<AID>	Access identifier from the “26.17 FACILITY” section on page 26-40.
<ROLE>	(Optional) The port role in Y-cable protection (WORK or PROT). The parameter type is SIDE, which is the role played by the unit in the protection group.
• PROT	The entity is a protection unit in the protection group.
• WORK	The entity is a working unit in the protection group.
<STATUS>	(Optional) A port status in Y-cable protection (ACT or STBY). The parameter type is STATUS, which is the status of the unit in the protection pair.
• ACT	The entity is the active unit in the shelf.
• NA	Status is unavailable.
• STBY	The entity is the standby unit in the shelf.
<LINKRATE>	The actual rate running on the Fibre Channel port. It can differ from the payload type provisioned. The parameter type is LINKRATE, which is the link rate on a Fibre Channel port.
• 1GFC	1-Gigabit Fibre Channel payload
• 1GFICON	1-Gigabit fiber connectivity payload
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• 5GIB	5Gbps InfiniBand (IB_5G) payload
• 8GFC	8-Gigabit Fibre Channel payload
• UNKNOWN	The rate is unknown.

• UNPLUGGED	The Small Form-factor Pluggable (SFP) is not plugged into the Fibre Channel port, so the link rate cannot be detected.
<LINKSTATE>	Link state. The parameter type is DIRN, which specifies the discriminating level for the requested monitored parameter.
• DN	Monitored parameter with values equal to or greater than the level of LEV will be reported.
• UP	Monitored parameter with values equal or less than the value of LEV will be reported.
<LINKRCVRY>	Link recovery. The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.
<DISTEXTN>	(Optional) Distance extension. The parameter type is DISTANCE_EXTENSION (distance extension).
• B2B	Buffer to buffer flow control
• NONE	No distance extension
<LINKCREDITS>	(Optional) Number of link credits. LINKCREDITS is an integer.
<MFS>	(Optional) Maximum frame size. MFS is an integer.
<ENCAP>	(Optional) Frame encapsulation type. The parameter type is ENCAP (frame encapsulation type).
• GFP_F	Generic framing procedure (GFP) frame mode
• GFP_T	GFP transparent mode
• HDLC	High-level data link control (HDLC) frame mode
• HDLC_LEX	HDLC LAN extension frame mode
• HDLC_X86	HDLC X.86 frame mode
<NAME>	(Optional) Identifies the port name. NAME is a string.
<SOAK>	(Optional) OOS-AINS to IS transition soak time as measured in 15-minute intervals. SOAK is an integer.
<SOAKLEFT>	(Optional) Time remaining for the transition from OOS-AINS to IS measured in 1 minute intervals. The format is HH-MM where HH ranges from 00 to 48 and MM ranges from 00 to 59. Rules for <SOAKLEFT> are as follows: <ul style="list-style-type: none"> <li>• When the port is in OOS, OOS_MT or IS state, the parameter will not appear.</li> <li>• When the port is in OOS_AINS state but the countdown has not started due to a fault signal, the value will be SOAKLEFT=NOT-STARTED.</li> <li>• When the port is in OOS_AINS state and the countdown has started, the value will be shown in HH-MM format.</li> </ul>
<FREQ>	(Optional) Parameter type is OPTICAL_WLEN (optical wavelength).
• 1310	Wavelength 1310
• 1470	Wavelength 1470
• 1490	Wavelength 1490

• 1510	Wavelength 1510
• 1528.77	Wavelength 1528.77
• 1529.55	Wavelength 1529.55
• 1529.94	Wavelength 1529.94
• 1530	Wavelength 1530
• 1530.33	Wavelength 1530.33
• 1530.73	Wavelength 1530.73
• 1531.12	Wavelength 1531.12
• 1531.51	Wavelength 1531.51
• 1531.90	Wavelength 1531.90
• 1532.29	Wavelength 1532.29
• 1532.68	Wavelength 1532.68
• 1533.07	Wavelength 1533.07
• 1533.47	Wavelength 1533.47
• 1533.86	Wavelength 1533.86
• 1534.25	Wavelength 1534.25
• 1534.64	Wavelength 1534.64
• 1535.04	Wavelength 1535.04
• 1535.43	Wavelength 1535.43
• 1535.82	Wavelength 1535.82
• 1536.22	Wavelength 1536.22
• 1536.61	Wavelength 1536.61
• 1537	Wavelength 1537
• 1537.40	Wavelength 1537.40
• 1537.79	Wavelength 1537.79
• 1538.19	Wavelength 1538.19
• 1538.58	Wavelength 1538.58
• 1538.98	Wavelength 1538.98
• 1539.37	Wavelength 1539.37
• 1539.77	Wavelength 1539.77
• 1540.16	Wavelength 1540.16
• 1540.56	Wavelength 1540.56
• 1540.95	Wavelength 1540.95
• 1541.35	Wavelength 1541.35
• 1541.75	Wavelength 1541.75
• 1542.14	Wavelength 1542.14
• 1542.35	Wavelength 1542.35
• 1542.54	Wavelength 1542.54
• 1542.94	Wavelength 1542.94
• 1543.33	Wavelength 1543.33
• 1543.73	Wavelength 1543.73

• 1544.13	Wavelength 1544.13
• 1544.53	Wavelength 1544.53
• 1544.92	Wavelength 1544.92
• 1545.32	Wavelength 1545.32
• 1545.72	Wavelength 1545.72
• 1546.12	Wavelength 1546.12
• 1546.52	Wavelength 1546.52
• 1546.92	Wavelength 1546.92
• 1547.32	Wavelength 1547.32
• 1547.72	Wavelength 1547.72
• 1548.12	Wavelength 1548.12
• 1548.51	Wavelength 1548.51
• 1548.92	Wavelength 1548.92
• 1549.32	Wavelength 1549.32
• 1549.71	Wavelength 1549.71
• 1550	Wavelength 1500
• 1550.12	Wavelength 1550.12
• 1550.52	Wavelength 1550.52
• 1550.92	Wavelength 1550.92
• 1551.32	Wavelength 1551.32
• 1551.72	Wavelength 1551.72
• 1552.12	Wavelength 1552.12
• 1552.52	Wavelength 1552.52
• 1552.93	Wavelength 1552.93
• 1553.33	Wavelength 1553.33
• 1553.73	Wavelength 1553.73
• 1554.13	Wavelength 1554.13
• 1554.13	Wavelength 1554.13
• 1554.94	Wavelength 1554.94
• 1555.34	Wavelength 1555.34
• 1555.75	Wavelength 1555.75
• 1556.15	Wavelength 1556.15
• 1556.55	Wavelength 1556.55
• 1556.96	Wavelength 1556.96
• 1557.36	Wavelength 1557.36
• 1557.77	Wavelength 1557.77
• 1558.17	Wavelength 1558.17
• 1558.58	Wavelength 1558.58
• 1558.98	Wavelength 1558.98
• 1559.39	Wavelength 1559.39
• 1559.79	Wavelength 1559.79

• 1560.20	Wavelength 1560.20
• 1560.61	Wavelength 1560.61
• 1561.01	Wavelength 1561.01
• 1561.42	Wavelength 1561.42
• 1561.83	Wavelength 1561.83
• 1570	Wavelength 1570
• 1570.83	Wavelength 1570.83
• 1571.24	Wavelength 1571.24
• 1571.65	Wavelength 1571.65
• 1572.06	Wavelength 1572.06
• 1572.48	Wavelength 1572.48
• 1572.89	Wavelength 1572.89
• 1573.30	Wavelength 1573.30
• 1573.71	Wavelength 1573.71
• 1574.13	Wavelength 1574.13
• 1574.54	Wavelength 1574.54
• 1574.95	Wavelength 1574.95
• 1575.37	Wavelength 1575.37
• 1575.78	Wavelength 1575.78
• 1576.20	Wavelength 1576.20
• 1576.61	Wavelength 1576.61
• 1577.03	Wavelength 1577.03
• 1577.44	Wavelength 1577.44
• 1577.86	Wavelength 1577.86
• 1578.27	Wavelength 1578.27
• 1578.69	Wavelength 1578.69
• 1579.10	Wavelength 1579.10
• 1579.52	Wavelength 1579.52
• 1579.93	Wavelength 1579.93
• 1580.35	Wavelength 1580.35
• 1580.77	Wavelength 1580.77
• 1581.18	Wavelength 1581.18
• 1581.60	Wavelength 1581.60
• 1582.02	Wavelength 1582.02
• 1582.44	Wavelength 1582.44
• 1582.85	Wavelength 1582.85
• 1583.27	Wavelength 1583.27
• 1583.69	Wavelength 1583.69
• 1584.11	Wavelength 1584.11
• 1584.53	Wavelength 1584.53
• 1584.95	Wavelength 1584.95

• 1585.36	Wavelength 1585.36
• 1585.78	Wavelength 1585.78
• 1586.20	Wavelength 1586.20
• 1586.62	Wavelength 1586.62
• 1587.04	Wavelength 1587.04
• 1587.46	Wavelength 1587.46
• 1587.88	Wavelength 1587.88
• 1588.30	Wavelength 1588.30
• 1588.73	Wavelength 1588.73
• 1589.15	Wavelength 1589.15
• 1589.57	Wavelength 1589.57
• 1589.99	Wavelength 1589.99
• 1590	Wavelength 1590
• 1590.41	Wavelength 1590.41
• 1590.83	Wavelength 1590.83
• 1591.26	Wavelength 1591.26
• 1591.68	Wavelength 1591.68
• 1592.10	Wavelength 1592.10
• 1592.52	Wavelength 1592.52
• 1592.95	Wavelength 1592.95
• 1593.37	Wavelength 1593.37
• 1593.79	Wavelength 1593.79
• 1594.22	Wavelength 1594.22
• 1594.64	Wavelength 1594.64
• 1595.06	Wavelength 1595.06
• 1595.49	Wavelength 1595.49
• 1596.34	Wavelength 1596.34
• 1596.76	Wavelength 1596.76
• 1597.19	Wavelength 1597.19
• 1597.62	Wavelength 1597.62
• 1598.04	Wavelength 1598.04
• 1598.47	Wavelength 1598.47
• 1598.89	Wavelength 1598.89
• 1599.32	Wavelength 1599.32
• 1599.75	Wavelength 1599.75
• 1600.06	Wavelength 1600.06
• 1601.03	Wavelength 1601.03
• 1601.46	Wavelength 1601.46
• 1601.88	Wavelength 1601.88
• 1602.31	Wavelength 1602.31
• 1602.74	Wavelength 1602.74

• 1603.17	Wavelength 1603.17
• 1603.60	Wavelength 1603.60
• 1604.03	Wavelength 1604.03
• 1610	Wavelength 1610
• USE-TWL1	Use Tunable Wavelength 1
<LOSSB>	(Optional) Parameter type is REACH (reach values).
• AUTOPROV	Autoprovisioning
• CX	Reach CX
• CX1	Reach CX1
• DX	Reach DX
• HX	Reach HX
• I1	Reach I1
• IR-1	Reach IR-1
• IR-2	Reach IR-2
• L1	Reach L1
• L2	Reach L2
• L3	Reach L3
• LR-1	Reach LR-1
• LR-2	Reach LR-2
• LR-3	Reach LR-3
• LX	Reach LX
• S1	Reach S1
• S2	Reach S2
• SR	Reach SR
• SR-1	Reach SR-1
• SX	Reach SX
• T	Reach T
• TEN-GE-ER	10 GE extended range
• TEN-GE-LR	10 GE long range
• TEN-GE-SR	10 GE short range
• VX	Reach VX
• ZX	Reach ZX
<PST_PSTQ>	Primary state of the entity. The parameter type is PST_PSTQ, which is the service state of the entity described by primary state (PST) and primary state qualifier (PSTQ).
• IS_NR	In Service and Normal
• OOS-AU	Out of Service and Autonomous
• OOS-AUMA	Out of Service and Autonomous Management
• OOS-MA	Out of Service and Management
<SST>	(Optional) Secondary state of the entity. The parameter type is secondary state (SST), which provides additional information pertaining to PST and PSTQ.

• AINS	Automatic In-Service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of Equipment
• MT	Maintenance
• OOG	Out of Group
• SWDL	Software Download
• UAS	Unassigned
• UEQ	Unequipped

## 21.2 RTRV-<MOD1FICONPAYLOAD>

(Cisco ONS 15454) The Retrieve 1GFICON, 2GFICON, or 4GFICON (RTRV-<MOD1FICONPAYLOAD>) command returns Fibre Channel-specific settings for ports that have been configured to carry FICON traffic using the ENT-FICON command.

### Usage Guidelines

The MXPP\_MR\_2.5G card only supports the GFP-T frame type.  
See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

### Category

Ports

### Security

Retrieve

### Input Format

RTRV-<MOD1FICONPAYLOAD>:[<TID>]:<AID>:<CTAG>;

### Input Example

RTRV-1GFICON:CISCO:FAC-1-1:123;

### Input Parameters

<AID> Access identifier from the “[26.17 FACILITY](#)” section on [page 26-40](#).

### Output Format

```
SID DATE TIME
M CTAG COMPLD
“<AID>:.,[<ROLE>],[<STATUS>]:[LINKRATE=<LINKRATE>],[LINKSTATE=<LINKSTATE>],
[LINKRCVRY=<LINKRCVRY>],[DISTEXTN=<DISTEXTN>],
[LINKCREDITS=<LINKCREDITS>],[MFS=<MFS>],[ENCAP=<ENCAP>],[NAME=<NAME>],
[SOAK=<SOAK>],[SOAKLEFT=<SOAKLEFT>],[FREQ=<FREQ>],[LOSSB=<LOSSB>]:
<PST_PSTQ>,<SST>”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"FAC-1-1:.,WORK,ACT:LINKRATE=1GFICON,LINKSTATE=UP,LINKRCVRY=Y,
DISTEXTN=NONE,LINKCREDITS=0,MFS=2148,ENCAP=GFP-T,NAME="FC PORT",
SOAK=32,SOAKLEFT="12-25",FREQ=1550,LOSSB=LR-1:OOS-MA,MT"
;
```

**Output Parameters**

<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
<ROLE>	(Optional) The port role in Y-cable protection (WORK or PROT). The parameter type is SIDE, which is the role that the unit is playing in the protection group.
• PROT	The entity is a protection unit in the protection group.
• WORK	The entity is a working unit in the protection group.
<STATUS>	(Optional) A port status in Y-cable protection (ACT or STBY). The parameter type is STATUS, which is the status of the unit in the protection pair.
• ACT	The entity is the active unit in the shelf.
• NA	Status is unavailable.
• STBY	The entity is the standby unit in the shelf.
<LINKRATE>	The actual rate running on the Fibre Channel port. It can differ from the payload type provisioned. The parameter type is LINKRATE, which is the link rate on a Fibre Channel port.
• 1GFC	1-Gigabit Fibre Channel payload
• 1GFICON	1-Gigabit fiber connectivity payload
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• UNKNOWN	The rate is unknown.
• UNPLUGGED	The SFP is not plugged into the Fibre Channel port so the link rate cannot be detected.
<LINKSTATE>	Link state. The parameter type is DIRN, which specifies the discriminating level for the requested monitored parameter.
• DN	Monitored parameter with values equal to or greater than the level of LEV will be reported.
• UP	Monitored parameter with values equal or less than the value of LEV will be reported.
<LINKRCVRY>	Link recovery. The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.
<DISTEXTN>	(Optional) Distance extension. The parameter type is DISTANCE_EXTENSION (distance extension).
• B2B	Buffer to buffer flow control
• NONE	No distance extension

<LINKCREDITS>	(Optional) Number of link credits. LINKCREDITS is an integer.
<MFS>	(Optional) Maximum frame size. MFS is an integer.
<ENCAP>	(Optional) Frame encapsulation type. The parameter type is ENCAP (frame encapsulation type).
• GFP_F	GFP frame mode
• GFP_T	GFP transparent mode
• HDLC	HDLC frame mode
• HDLC_LEX	HDLC LAN extension frame mode
• HDLC_X86	HDLC X.86 frame mode
<NAME>	(Optional) Identifies the port name. NAME is a string.
<SOAK>	(Optional) OOS-AINS to IS transition soak time as measured in 15-minute intervals. SOAK is an integer.
<SOAKLEFT>	(Optional) Time remaining for the transition from OOS-AINS to IS measured in 1 minute intervals. The format is HH-MM where HH ranges from 00 to 48 and MM ranges from 00 to 59. Rules for <SOAKLEFT> are as follows: <ul style="list-style-type: none"> <li>• When the port is in OOS, OOS_MT, or IS state, the parameter will not appear.</li> <li>• When the port is in OOS_AINS state but the countdown has not started due to a fault signal, the value will be SOAKLEFT=NOT-STARTED.</li> <li>• When the port is in OOS_AINS state and the countdown has started, the value will be shown in HH-MM format.</li> </ul>
<FREQ>	(Optional) Parameter type is OPTICAL_WLEN (optical wavelength).
• 1310	Wavelength 1310
• 1470	Wavelength 1470
• 1490	Wavelength 1490
• 1510	Wavelength 1510
• 1528.77	Wavelength 1528.77
• 1529.55	Wavelength 1529.55
• 1529.94	Wavelength 1529.94
• 1530	Wavelength 1530
• 1530.33	Wavelength 1530.33
• 1530.73	Wavelength 1530.73
• 1531.12	Wavelength 1531.12
• 1531.51	Wavelength 1531.51
• 1531.90	Wavelength 1531.90
• 1532.29	Wavelength 1532.29
• 1532.68	Wavelength 1532.68
• 1533.07	Wavelength 1533.07
• 1533.47	Wavelength 1533.47
• 1533.86	Wavelength 1533.86

• 1534.25	Wavelength 1534.25
• 1534.64	Wavelength 1534.64
• 1535.04	Wavelength 1535.04
• 1535.43	Wavelength 1535.43
• 1535.82	Wavelength 1535.82
• 1536.22	Wavelength 1536.22
• 1536.61	Wavelength 1536.61
• 1537	Wavelength 1537
• 1537.40	Wavelength 1537.40
• 1537.79	Wavelength 1537.79
• 1538.19	Wavelength 1538.19
• 1538.58	Wavelength 1538.58
• 1538.98	Wavelength 1538.98
• 1539.37	Wavelength 1539.37
• 1539.77	Wavelength 1539.77
• 1540.16	Wavelength 1540.16
• 1540.56	Wavelength 1540.56
• 1540.95	Wavelength 1540.95
• 1541.35	Wavelength 1541.35
• 1541.75	Wavelength 1541.75
• 1542.14	Wavelength 1542.14
• 1542.35	Wavelength 1542.35
• 1542.54	Wavelength 1542.54
• 1542.94	Wavelength 1542.94
• 1543.33	Wavelength 1543.33
• 1543.73	Wavelength 1543.73
• 1544.13	Wavelength 1544.13
• 1544.53	Wavelength 1544.53
• 1544.92	Wavelength 1544.92
• 1545.32	Wavelength 1545.32
• 1545.72	Wavelength 1545.72
• 1546.12	Wavelength 1546.12
• 1546.52	Wavelength 1546.52
• 1546.92	Wavelength 1546.92
• 1547.32	Wavelength 1547.32
• 1547.72	Wavelength 1547.72
• 1548.12	Wavelength 1548.12
• 1548.51	Wavelength 1548.51
• 1548.92	Wavelength 1548.92
• 1549.32	Wavelength 1549.32
• 1549.71	Wavelength 1549.71

• 1550	Wavelength 1500
• 1550.12	Wavelength 1550.12
• 1550.52	Wavelength 1550.52
• 1550.92	Wavelength 1550.92
• 1551.32	Wavelength 1551.32
• 1551.72	Wavelength 1551.72
• 1552.12	Wavelength 1552.12
• 1552.52	Wavelength 1552.52
• 1552.93	Wavelength 1552.93
• 1553.33	Wavelength 1553.33
• 1553.73	Wavelength 1553.73
• 1554.13	Wavelength 1554.13
• 1554.13	Wavelength 1554.13
• 1554.94	Wavelength 1554.94
• 1555.34	Wavelength 1555.34
• 1555.75	Wavelength 1555.75
• 1556.15	Wavelength 1556.15
• 1556.55	Wavelength 1556.55
• 1556.96	Wavelength 1556.96
• 1557.36	Wavelength 1557.36
• 1557.77	Wavelength 1557.77
• 1558.17	Wavelength 1558.17
• 1558.58	Wavelength 1558.58
• 1558.98	Wavelength 1558.98
• 1559.39	Wavelength 1559.39
• 1559.79	Wavelength 1559.79
• 1560.20	Wavelength 1560.20
• 1560.61	Wavelength 1560.61
• 1561.01	Wavelength 1561.01
• 1561.42	Wavelength 1561.42
• 1561.83	Wavelength 1561.83
• 1570	Wavelength 1570
• 1570.83	Wavelength 1570.83
• 1571.24	Wavelength 1571.24
• 1571.65	Wavelength 1571.65
• 1572.06	Wavelength 1572.06
• 1572.48	Wavelength 1572.48
• 1572.89	Wavelength 1572.89
• 1573.30	Wavelength 1573.30
• 1573.71	Wavelength 1573.71
• 1574.13	Wavelength 1574.13

• 1574.54	Wavelength 1574.54
• 1574.95	Wavelength 1574.95
• 1575.37	Wavelength 1575.37
• 1575.78	Wavelength 1575.78
• 1576.20	Wavelength 1576.20
• 1576.61	Wavelength 1576.61
• 1577.03	Wavelength 1577.03
• 1577.44	Wavelength 1577.44
• 1577.86	Wavelength 1577.86
• 1578.27	Wavelength 1578.27
• 1578.69	Wavelength 1578.69
• 1579.10	Wavelength 1579.10
• 1579.52	Wavelength 1579.52
• 1579.93	Wavelength 1579.93
• 1580.35	Wavelength 1580.35
• 1580.77	Wavelength 1580.77
• 1581.18	Wavelength 1581.18
• 1581.60	Wavelength 1581.60
• 1582.02	Wavelength 1582.02
• 1582.44	Wavelength 1582.44
• 1582.85	Wavelength 1582.85
• 1583.27	Wavelength 1583.27
• 1583.69	Wavelength 1583.69
• 1584.11	Wavelength 1584.11
• 1584.53	Wavelength 1584.53
• 1584.95	Wavelength 1584.95
• 1585.36	Wavelength 1585.36
• 1585.78	Wavelength 1585.78
• 1586.20	Wavelength 1586.20
• 1586.62	Wavelength 1586.62
• 1587.04	Wavelength 1587.04
• 1587.46	Wavelength 1587.46
• 1587.88	Wavelength 1587.88
• 1588.30	Wavelength 1588.30
• 1588.73	Wavelength 1588.73
• 1589.15	Wavelength 1589.15
• 1589.57	Wavelength 1589.57
• 1589.99	Wavelength 1589.99
• 1590	Wavelength 1590
• 1590.41	Wavelength 1590.41
• 1590.83	Wavelength 1590.83

• 1591.26	Wavelength 1591.26
• 1591.68	Wavelength 1591.68
• 1592.10	Wavelength 1592.10
• 1592.52	Wavelength 1592.52
• 1592.95	Wavelength 1592.95
• 1593.37	Wavelength 1593.37
• 1593.79	Wavelength 1593.79
• 1594.22	Wavelength 1594.22
• 1594.64	Wavelength 1594.64
• 1595.06	Wavelength 1595.06
• 1595.49	Wavelength 1595.49
• 1596.34	Wavelength 1596.34
• 1596.76	Wavelength 1596.76
• 1597.19	Wavelength 1597.19
• 1597.62	Wavelength 1597.62
• 1598.04	Wavelength 1598.04
• 1598.47	Wavelength 1598.47
• 1598.89	Wavelength 1598.89
• 1599.32	Wavelength 1599.32
• 1599.75	Wavelength 1599.75
• 1600.06	Wavelength 1600.06
• 1601.03	Wavelength 1601.03
• 1601.46	Wavelength 1601.46
• 1601.88	Wavelength 1601.88
• 1602.31	Wavelength 1602.31
• 1602.74	Wavelength 1602.74
• 1603.17	Wavelength 1603.17
• 1603.60	Wavelength 1603.60
• 1604.03	Wavelength 1604.03
• 1610	Wavelength 1610
• USE-TWL1	Use Tunable Wavelength 1
<LOSSB>	(Optional) Parameter type is REACH (reach values).
• AUTOPROV	Autoprovisioning
• CX	Reach CX
• CX1	Reach CX1
• DX	Reach DX
• HX	Reach HX
• I1	Reach I1
• IR-1	Reach IR-1
• IR-2	Reach IR-2
• L1	Reach L1

• L2	Reach L2
• L3	Reach L3
• LR-1	Reach LR-1
• LR-2	Reach LR-2
• LR-3	Reach LR-3
• LX	Reach LX
• S1	Reach S1
• S2	Reach S2
• SR	Reach SR
• SR-1	Reach SR-1
• SX	Reach SX
• T	Reach T
• TEN-GE-ER	10 GE extended range
• TEN-GE-LR	10 GE long range
• TEN-GE-SR	10 GE short range
• VX	Reach VX
• ZX	Reach ZX
<PST_PSTQ>	Primary state of the entity. The parameter type is PST_PSTQ, which is the service state of the entity described by the PST and PSTQ.
• IS_NR	In Service and Normal
• OOS-AU	Out of Service and Autonomous
• OOS-AUMA	Out of Service and Autonomous Management
• OOS-MA	Out of Service and Management
<SST>	(Optional) Secondary state of the entity. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic In-Service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of Equipment
• MT	Maintenance
• OOG	Out of Group
• SWDL	Software Download
• UAS	Unassigned
• UEQ	Unequipped

## 21.3 RTRV-<MOD2DWDMPAYLOAD>

(Cisco ONS 15454) The Retrieve D1VIDEO, DV6000, DVBASI, ETRCLO, HDTV, ISCCOMPAT, ISC1, ISC3PEER2R, ISC3PEER1G, ISC3PEER2G and PASSTHRU (RTRV-<MOD2DWDMPAYLOAD>) command retrieves the configuration parameter of a dense wavelength division multiplexing (DWDM) client.

**Usage Guidelines** See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

**Category** DWDM

**Security** Retrieve

**Input Format** RTRV-<MOD2DWDMPAYLOAD>:[<TID>]:<AID>:<CTAG>[:[:[:[:]]];

**Input Example** RTRV-HDTV:MILAN:FAC-1-1:100;

**Input Parameters**

<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
-------	--

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<AIDUNIONID>,<AIDTYPE>;, [<ROLE>], [<STATUS>]: [NAME=<NAME>], [LBCL=<LBCL>],
[OPT=<OPT>], [OPR=<OPR>], [FREQ=<FREQ>], [LOSSB=<LOSSB>]: <PSTPSTQ>, [<SST>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“FAC-1-1-1,HDTV;,WORK,ACT:NAME=“NY PORT”,LBCL=10.0,OPT=10.0,OPR=10.0,
FREQ=1550,LOSSB=LR-1:OOS-AU,AINS”
;
```

**Output Parameters**

<AIDUNIONID>	Access identifier from the <a href="#">“26.2 AidUnionId”</a> section on page 26-13
<AIDTYPE>	A type of access identifier. The parameter type is MOD2DWDMPAYLOAD, which contains the payload types applicable to DWDM ports.
• 10GFC	10-Gigabit Fibre Channel payload
• 10GIGE	10-Gigabit Ethernet
• 40GIGE	40-Gigabit Ethernet
• 1GFC	1-Gigabit Fibre Channel payload
• 1GFICON	1-Gigabit fiber connectivity payload
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• 5GIB	5Gbps InfiniBand (IB_5G) payload

• 8GFC	8-Gigabit Fibre Channel payload
• D1VIDEO	D1Video payload
• DV6000	DV6000 payload
• DVBASI	DVBASI payload
• ETRCLO	ETR_CLO payload
• GIGE	Gigabit Ethernet payload
• HDTV	High definition television (HDTV) payload
• ISC1	ISC1 payload
• ISC3	ISC3 payload
• OTU3	Optical Transport Unit Level 3
• PASSTHRU	Any pass-through (2R) payload
<ROLE>	(Optional) The port role in Y-cable protection (WORK or PROT). The parameter type is SIDE, which is the role the unit is playing in the protection group.
• PROT	The entity is a protection unit in the protection group.
• WORK	The entity is a working unit in the protection group.
<STATUS>	(Optional) A port status in Y-cable protection (ACT or STBY). The parameter type is STATUS, which is the status of the unit in the protection pair.
• ACT	The entity is the active unit in the shelf.
• NA	Status is unavailable.
• STBY	The entity is the standby unit in the shelf.
<NAME>	(Optional) Identifies the port name. NAME is a string.
<LBCL>	(Optional) Displays the current value of the laser current. LBCL is a float.
<OPT>	(Optional) Displays the current value of the transmitted optical power. OPT is a float.
<OPR>	(Optional) Displays the current value of the received optical power. OPR is a float.
<FREQ>	(Optional) Parameter type is OPTICAL_WLEN (optical wavelength).
• 1310	Wavelength 1310
• 1470	Wavelength 1470
• 1490	Wavelength 1490
• 1510	Wavelength 1510
• 1528.77	Wavelength 1528.77
• 1529.55	Wavelength 1529.55
• 1529.94	Wavelength 1529.94
• 1530	Wavelength 1530
• 1530.33	Wavelength 1530.33
• 1530.73	Wavelength 1530.73
• 1531.12	Wavelength 1531.12
• 1531.51	Wavelength 1531.51

• 1531.90	Wavelength 1531.90
• 1532.29	Wavelength 1532.29
• 1532.68	Wavelength 1532.68
• 1533.07	Wavelength 1533.07
• 1533.47	Wavelength 1533.47
• 1533.86	Wavelength 1533.86
• 1534.25	Wavelength 1534.25
• 1534.64	Wavelength 1534.64
• 1535.04	Wavelength 1535.04
• 1535.43	Wavelength 1535.43
• 1535.82	Wavelength 1535.82
• 1536.22	Wavelength 1536.22
• 1536.61	Wavelength 1536.61
• 1537	Wavelength 1537
• 1537.40	Wavelength 1537.40
• 1537.79	Wavelength 1537.79
• 1538.19	Wavelength 1538.19
• 1538.58	Wavelength 1538.58
• 1538.98	Wavelength 1538.98
• 1539.37	Wavelength 1539.37
• 1539.77	Wavelength 1539.77
• 1540.16	Wavelength 1540.16
• 1540.56	Wavelength 1540.56
• 1540.95	Wavelength 1540.95
• 1541.35	Wavelength 1541.35
• 1541.75	Wavelength 1541.75
• 1542.14	Wavelength 1542.14
• 1542.35	Wavelength 1542.35
• 1542.54	Wavelength 1542.54
• 1542.94	Wavelength 1542.94
• 1543.33	Wavelength 1543.33
• 1543.73	Wavelength 1543.73
• 1544.13	Wavelength 1544.13
• 1544.53	Wavelength 1544.53
• 1544.92	Wavelength 1544.92
• 1545.32	Wavelength 1545.32
• 1545.72	Wavelength 1545.72
• 1546.12	Wavelength 1546.12
• 1546.52	Wavelength 1546.52
• 1546.92	Wavelength 1546.92
• 1547.32	Wavelength 1547.32

• 1547.72	Wavelength 1547.72
• 1548.12	Wavelength 1548.12
• 1548.51	Wavelength 1548.51
• 1548.92	Wavelength 1548.92
• 1549.32	Wavelength 1549.32
• 1549.71	Wavelength 1549.71
• 1550	Wavelength 1500
• 1550.12	Wavelength 1550.12
• 1550.52	Wavelength 1550.52
• 1550.92	Wavelength 1550.92
• 1551.32	Wavelength 1551.32
• 1551.72	Wavelength 1551.72
• 1552.12	Wavelength 1552.12
• 1552.52	Wavelength 1552.52
• 1552.93	Wavelength 1552.93
• 1553.33	Wavelength 1553.33
• 1553.73	Wavelength 1553.73
• 1554.13	Wavelength 1554.13
• 1554.13	Wavelength 1554.13
• 1554.94	Wavelength 1554.94
• 1555.34	Wavelength 1555.34
• 1555.75	Wavelength 1555.75
• 1556.15	Wavelength 1556.15
• 1556.55	Wavelength 1556.55
• 1556.96	Wavelength 1556.96
• 1557.36	Wavelength 1557.36
• 1557.77	Wavelength 1557.77
• 1558.17	Wavelength 1558.17
• 1558.58	Wavelength 1558.58
• 1558.98	Wavelength 1558.98
• 1559.39	Wavelength 1559.39
• 1559.79	Wavelength 1559.79
• 1560.20	Wavelength 1560.20
• 1560.61	Wavelength 1560.61
• 1561.01	Wavelength 1561.01
• 1561.42	Wavelength 1561.42
• 1561.83	Wavelength 1561.83
• 1570	Wavelength 1570
• 1570.83	Wavelength 1570.83
• 1571.24	Wavelength 1571.24
• 1571.65	Wavelength 1571.65

• 1572.06	Wavelength 1572.06
• 1572.48	Wavelength 1572.48
• 1572.89	Wavelength 1572.89
• 1573.30	Wavelength 1573.30
• 1573.71	Wavelength 1573.71
• 1574.13	Wavelength 1574.13
• 1574.54	Wavelength 1574.54
• 1574.95	Wavelength 1574.95
• 1575.37	Wavelength 1575.37
• 1575.78	Wavelength 1575.78
• 1576.20	Wavelength 1576.20
• 1576.61	Wavelength 1576.61
• 1577.03	Wavelength 1577.03
• 1577.44	Wavelength 1577.44
• 1577.86	Wavelength 1577.86
• 1578.27	Wavelength 1578.27
• 1578.69	Wavelength 1578.69
• 1579.10	Wavelength 1579.10
• 1579.52	Wavelength 1579.52
• 1579.93	Wavelength 1579.93
• 1580.35	Wavelength 1580.35
• 1580.77	Wavelength 1580.77
• 1581.18	Wavelength 1581.18
• 1581.60	Wavelength 1581.60
• 1582.02	Wavelength 1582.02
• 1582.44	Wavelength 1582.44
• 1582.85	Wavelength 1582.85
• 1583.27	Wavelength 1583.27
• 1583.69	Wavelength 1583.69
• 1584.11	Wavelength 1584.11
• 1584.53	Wavelength 1584.53
• 1584.95	Wavelength 1584.95
• 1585.36	Wavelength 1585.36
• 1585.78	Wavelength 1585.78
• 1586.20	Wavelength 1586.20
• 1586.62	Wavelength 1586.62
• 1587.04	Wavelength 1587.04
• 1587.46	Wavelength 1587.46
• 1587.88	Wavelength 1587.88
• 1588.30	Wavelength 1588.30
• 1588.73	Wavelength 1588.73

• 1589.15	Wavelength 1589.15
• 1589.57	Wavelength 1589.57
• 1589.99	Wavelength 1589.99
• 1590	Wavelength 1590
• 1590.41	Wavelength 1590.41
• 1590.83	Wavelength 1590.83
• 1591.26	Wavelength 1591.26
• 1591.68	Wavelength 1591.68
• 1592.10	Wavelength 1592.10
• 1592.52	Wavelength 1592.52
• 1592.95	Wavelength 1592.95
• 1593.37	Wavelength 1593.37
• 1593.79	Wavelength 1593.79
• 1594.22	Wavelength 1594.22
• 1594.64	Wavelength 1594.64
• 1595.06	Wavelength 1595.06
• 1595.49	Wavelength 1595.49
• 1596.34	Wavelength 1596.34
• 1596.76	Wavelength 1596.76
• 1597.19	Wavelength 1597.19
• 1597.62	Wavelength 1597.62
• 1598.04	Wavelength 1598.04
• 1598.47	Wavelength 1598.47
• 1598.89	Wavelength 1598.89
• 1599.32	Wavelength 1599.32
• 1599.75	Wavelength 1599.75
• 1600.06	Wavelength 1600.06
• 1601.03	Wavelength 1601.03
• 1601.46	Wavelength 1601.46
• 1601.88	Wavelength 1601.88
• 1602.31	Wavelength 1602.31
• 1602.74	Wavelength 1602.74
• 1603.17	Wavelength 1603.17
• 1603.60	Wavelength 1603.60
• 1604.03	Wavelength 1604.03
• 1610	Wavelength 1610
• USE-TWL1	Use Tunable Wavelength 1
<LOSSB>	(Optional) Parameter type is REACH (reach values).
• AUTOPROV	Autoprovisioning
• CX	Reach CX
• CX1	Reach CX1

• DX	Reach DX
• HX	Reach HX
• I1	Reach I1
• IR-1	Reach IR-1
• IR-2	Reach IR-2
• L1	Reach L1
• L2	Reach L2
• L3	Reach L3
• LR-1	Reach LR-1
• LR-2	Reach LR-2
• LR-3	Reach LR-3
• LX	Reach LX
• S1	Reach S1
• S2	Reach S2
• SR	Reach SR
• SR-1	Reach SR-1
• SX	Reach SX
• T	Reach T
• TEN-GE-ER	10 GE extended range
• TEN-GE-LR	10 GE long range
• TEN-GE-SR	10 GE short range
• VX	Reach VX
• ZX	Reach ZX
<PST_PSTQ>	Primary state of the entity. The parameter type is PST_PSTQ, which is the service state of the entity described by the PST and PSTQ.
• IS_NR	In Service and Normal
• OOS-AU	Out of Service and Autonomous
• OOS-AUMA	Out of Service and Autonomous Management
• OOS-MA	Out of Service and Management
<SST>	(Optional) Secondary state of the entity. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic In-Service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of Equipment
• MT	Maintenance
• OOG	Out of Group
• SWDL	Software Download
• UAS	Unassigned
• UEQ	Unequipped

## 21.4 RTRV-<MOD\_RING>

(Cisco ONS 15454) The Retrieve Bidirectional Line Switched Ring (RTRV-<MOD\_RING>) command retrieves the bidirectional line switched ring (BLSR) information of the NE. A two-fiber or four-fiber BLSR can be retrieved.

### Usage Guidelines

Output examples:

4F BLSR:

```
“BLSR-N43AB::RINGID=N43AB,NODEID=3,MODE=4F,RVRTV=Y,RVTM=5.0,SRVRTV=Y,
SRVTM=5.0,EASTWORK=FAC-5-1,WESTWORK=FAC-6-1,EASTPROT=FAC-12-1,
WESTPROT=FAC-13-1”
```

2F BLSR:

```
“BLSR-N12EF::RINGID=N12EF,NODEID=2,MODE=2F,RVRTV=Y,RVTM=5.0,
EASTWORK=FAC-5-1,WESTWORK=FAC-6-1”
```

- The following actions will return error messages:
  - If the system fails on getting IOR, a SROF (Get IOR Failed) error message is returned.
  - If the AID is invalid, an IIAC (Invalid AID) error message is returned.
  - If the BLSR does not exist, a SRQN (BLSR Does Not Exist) error message is returned.
- Only ALL, NULL, BLSR-ALL, or BLSR-RINGID is allowed for this command.
- A NULL AID defaults to the AID ALL.
- The list AID format is supported.

### Category

BLSR

### Security

Retrieve

### Input Format

RTRV-<MOD\_RING>:[<TID>]:[<AID>]:<CTAG>[:::];

### Input Example

RTRV-BLSR:PETALUMA:ALL:123;

### Input Parameters

<b>&lt;AID&gt;</b>	Access identifier from the <a href="#">“26.3 AidUnionId1”</a> section on page 26-20. Identifies the BLSR of the NE. Only ALL, null, or a list of BLSR-# is allowed. A null value is equivalent to ALL.
--------------------	--

### Output Format

```
SID DATE TIME
M CTAG COMPLD
“[<AID>]::[RINGID=<RINGID>],[NODEID=<NODEID>],[MODE=<MODE>],
```

```
[RVRTV=<RVRTV>],[RVTM=<RVTM>],[SRVRTV=<SRVRTV>],[SRVTM=<SRVTM>],
[EASTWORK=<EASTWORK>],[WESTWORK=<WESTWORK>],[EASTPROT=<EASTPROT>],
[WESTPROT=<WESTPROT>]”
```

```
;
```

### Output Example

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“BLSR-43::RINGID=43,NODEID=3,MODE=4F,RVRTV=Y,RVTM=5.0,SRVRTV=Y,SRVTM=5.0,
EASTWORK=FAC-5-1,WESTWORK=FAC-6-1,EASTPROT=FAC-12-1,WESTPROT=FAC-13-1”
;
```

### Output Parameters

<AID>	(Optional) Access identifier from the <a href="#">“26.3 AidUnionId1”</a> section on page 26-20. Identifies the BLSR of the NE.
<RINGID>	(Optional) The BLSR ID of the NE. String of up to six characters. Valid characters are A-Z and 0-9.
<NODEID>	(Optional) The BLSR node ID of the NE. NODEID is a string and ranges from 0 to 31.
<MODE>	(Optional) Mode with which the command is to be implemented. Identifies the BLSR mode; either two-fiber or four-fiber. The parameter type is BLSR_MODE (BLSR mode).
<ul style="list-style-type: none"> <li>• 2F</li> <li>• 4F</li> </ul>	<ul style="list-style-type: none"> <li>Two-fiber BLSR</li> <li>Four-fiber BLSR</li> </ul>
<RVRTV>	(Optional) Revertive mode. The value Y indicates that protection switching system reverts service to the original line after restoration. The value N indicates that protection switching system does not revert service to the original line after restoration. RVRTV is applicable only for 1+1 protection switching. Null defaults to N. The parameter type is ON_OFF (disable or enable an attribute).
<ul style="list-style-type: none"> <li>• N</li> <li>• Y</li> </ul>	<ul style="list-style-type: none"> <li>Does not revert service to original line after restoration.</li> <li>Reverts service to original line after restoration.</li> </ul>
<RVTM>	Revertive time. RVTM is not allowed to be set while RVRTV is N. The parameter type is REVERTIVE_TIME.
<ul style="list-style-type: none"> <li>• 0.5 to 12.0</li> </ul>	Revertive time is 0.5 to 12.0 minutes.
<SRVRTV>	The span revertive mode for four-fiber BLSR only. The parameter type is ON_OFF (disable or enable an attribute).
<ul style="list-style-type: none"> <li>• N</li> <li>• Y</li> </ul>	<ul style="list-style-type: none"> <li>Disable an attribute.</li> <li>Enable an attribute.</li> </ul>
<SRVTM>	The span revertive time for four-fiber BLSR only. SRVTM is not allowed to be set while SRVRTV is N. The parameter type is REVERTIVE_TIME.
<ul style="list-style-type: none"> <li>• 0.5 to 12.0</li> </ul>	Revertive time is 0.5 to 12.0 minutes.
<EASTWORK>	East working facility. AID from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
<WESTWORK>	West working facility. AID from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.

---

<EASTPROT>	East protecting facility. AID from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
<WESTPROT>	West protecting facility. AID from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.

---

## 21.5 RTRV-<OCN\_TYPE>

(Cisco ONS 15454) The Retrieve OC3, OC12, OC48, or OC192 command retrieves the attributes (for example, service parameters) and the state of an OC-N facility.

### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

Both RINGID and BLSRATYPE identify the OC-N port connected with a BLSR. These attributes are only presented for the OC-12, OC-48, and OC-192 ports within a BLSR connection. The RTRV-<MOD\_RING> command with the AID BLSR-RINGID can provide more information about a BLSR.



### Note

This command does not show the WVLEN attribute if the OC-N port has a zero value.

### Category

Ports

### Security

Retrieve

### Input Format

RTRV-<OCN\_TYPE>[:<TID>]:<AID>:<CTAG>[::::];

### Input Example

RTRV-OC48:PENNGROVE:FAC-6-1:236;

### Input Parameters

<AID> Access identifier from the [“26.17 FACILITY”](#) section on page 26-40.

### Output Format

```
SID DATE TIME
M CTAG COMPLD
“<AID>:.,[<ROLE>],[<STATUS>]:[DCC=<DCC>],[AREA=<AREA>],[TMGREF=<TMGREF>],
[SYNCSMSG=<SYNCSMSG>],[SENDDUS=<SENDDUS>],[PJMOM=<PJMOM>],
[SFBER=<SFBER>],[SDBER=<SDBER>],[MODE=<MODE>],[WVLEN=<WVLEN>],
[RINGID=<RINGID>],[BLSRATYPE=<BLSRATYPE>],[MUX=<MUX>],[UNIC=<UNIC>],
[SOAK=<SOAK>],[SOAKLEFT=<SOAKLEFT>],[SSMRCV=<SSMRCV>],[OSPF=<OSPF>],
[LDCC=<LDCC>],[NAME=<NAME>],[LBCL=<LBCL>],[OPT=<OPT>],[OPR=<OPR>],
[EXPTRC=<EXPTRC>],[TRC=<TRC>],[TRCMODE=<TRCMODE>],
[TRCFORMAT=<TRCFORMAT>],[ADMSSM=<ADMSSM>],
[SENDDUSFF=<SENDDUSFF>],[AISONLPBK=<AISONLPBK>],
[FREQ=<FREQ>],[LOSSB=<LOSSB>],[FOREIGNFEND=<FOREIGNFEND>],
[FOREIGNIPADDRESS=<FOREIGNIPADDRESS>].:<PSTPSTQ>.[<SSTQ>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"FAC-6-1:.,WORK,ACT:DCC=Y,AREA=10.92.63.1,TMGREF=N,SYNCSMSG=N,SENDDUS=N,
PJMOM=48,SFBER=1E-4,SDBER=1E-6,MODE=SINGLESHELF,WVLEN=1310.00,RINGID=43,
BLSRTYPE=WESTWORK,MUX=E2,UNIC=Y,
SOAKLEFT="\12-25",SSMRCV=STU,OSPF=Y,LDCC=Y,NAME="\OCN PORT",LBCL=10.0,
OPT=10.0,OPR=10.0,EXPTRC="\AAA",TRC="\AAA",TRCMODE=MAN,
TRCFORMAT=16-BYTE,ADMSSM=PRS,SENDDUSFF=N,AISONLPBK=AIS_ON_LPBK_ALL,
FREQ=1550,LOSSB=LR-1,FOREIGNFEND=Y,
FOREIGNIPADDRESS=10.92.63.44,:OOS-AU,AINS"
;
```

**Output Parameters**

<AID>	Access identifier from the “ <a href="#">26.17 FACILITY</a> ” section on <a href="#">page 26-40</a> .
<ROLE>	(Optional) An OC-N port role. The parameter type is SIDE, which is the role the unit is playing in the protection group.
• PROT	The entity is a protection unit in the protection group.
• WORK	The entity is a working unit in the protection group.
<STATUS>	(Optional) An OC-N port status. The parameter type is STATUS, which is the status of the unit in the protection pair.
• ACT	The entity is the active unit in the shelf.
• NA	Status is unavailable.
• STBY	The entity is the standby unit in the shelf.
<DCC>	(Optional) Indicates whether or not the Section data communications channel (DCC) is to be used. The parameter type is EXT_RING, which indicates whether the ring supports the extended K1/K2/K3 protocol.
• N	The ring does not support the extended K1/K2/K3 protocol.
• Y	The ring does support the extended K1/K2/K3 protocol.
<AREA>	(Optional) Area ID. Shows up only if the DCC is enabled. AREA is a string.
<TMGREF>	(Optional) The termination to be used, whether primary or secondary. Identifies if an OC-N port has a timing reference. Defaults to N. The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.
<SYNCSMSG>	Synchronization status message. The parameter type is EXT_RING, which indicates whether the ring supports the extended K1/K2/K3 protocol.
• N	The ring does not support the extended K1/K2/K3 protocol.
• Y	The ring does support the extended K1/K2/K3 protocol.
<SENDDUS>	(Optional) The facility will send the DUS (Do not use for Synchronization) value in 0x0f bits pattern as the synchronization status message for that facility. Defaults to N. The parameter type is ON_OFF (disable or enable an attribute).

• N	Disable an attribute.
• Y	Enable an attribute.
<PJMON>	(Optional) Identifies an OC-N port PJMON. Defaults to 0 (zero). PJMON is an integer. Set a valid STS number of the optical port.  <b>Note</b> The PJMON number displayed in TL1 interface does not correspond to the PJVC4MON number in CTC, but instead corresponds to the STS number of the optical port.
<SFBER>	(Optional) An OC-N port signal failure threshold. Defaults to 1E-4. The parameter type is SF_BER, which is the threshold for declaring signal failure on a facility or path.
• 1E-3	SFBER is 1E-3.
• 1E-4	SFBER is 1E-4.
• 1E-5	SFBER is 1E-5.
<SDBER>	(Optional) An OC-N port signal degrade threshold. Defaults 1E-7. The parameter type is SD_BER, which is the threshold for declaring signal degrade on a facility or path.
• 1E-5	SDBER is 1E-5.
• 1E-6	SDBER is 1E-6.
• 1E-7	SDBER is 1E-7.
• 1E-8	SDBER is 1E-8.
• 1E-9	SDBER is 1E-9.
<MODE>	(Optional) OC-N port mode. Defaults to SONET. The parameter type is OPTICAL_MODE, which is the facility's optical mode.
• SINGLESHELF	The NE contains only one shelf and the AID representation does not consider the shelf identifier for command requests/response and autonomous reports.
• MULTISHELF	The AID representation considers the shelf identifier for command requests/response and autonomous reports. This means the NE has more than one shelf configured or the user wants to use the new AID style.
• MULTISHELFETH	The AID representation considers the shelf identifier for command requests/response and autonomous reports. This means the NE has more than one shelf configured or the user wants to use the new AID style. The shelves are connected by means of an external Ethernet switch.
<WVLEN>	(Optional) An OC-N port wavelength in nanometers. For example, WVLEN=1310.00 means it operates at 1310 nm in the DWDM application. WVLEN is a float.
<RINGID>	(Optional) The BLSR RINGID with which the port is connected. RINGID ranges from 0 to 9999. RINGID is an integer.
<BLSRTYPE>	(Optional) The BLSR type with which the port is connected. The parameter type is BLSR_TYPE, which is the BLSR type of an OC-N port.
• EASTPROT	The OC-N port is an east protecting port.
• EASTWORK	The OC-N port is an east working port.
• WESTPROT	The OC-N port is an west protecting port.

• WESTWORK	The OC-N port is an west working port.
<MUX>	(Optional) BLSR extension byte. The parameter type is MUX_TYPE, which is the BLSR extension byte.
• E2	E2 byte (orderwire)
• F1	F1 byte (user)
• K3	K3 byte
• Z2	Z2 byte
<UNIC>	(Optional) Indicates if the port connects to the UCP. The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.
<SOAK>	(Optional) OOS-AINS to IS transition soak time as measured in 15-minute intervals. SOAK is an integer.
<SOAKLEFT>	(Optional) Time remaining for the transition from OOS-AINS to IS measured in 1-minute intervals. The format is HH-MM where HH ranges from 00 to 48 and MM ranges from 00 to 59. Rules for <SOAKLEFT> are as follows: <ul style="list-style-type: none"> <li>• When the port is in OOS, OOS_MT, or IS state, the parameter will not appear.</li> <li>• When the port is in OOS_AINS but the countdown has not started due to a fault signal, the value will be SOAKLEFT=NOT-STARTED.</li> <li>• When the port is in OOS_AINS state and the countdown has started, the value will be shown in HH-MM format.</li> </ul>
<SSMRCV>	(Optional) Displays the quality of the individual port. The parameter type is SYNC_CLOCK_REF_QUALITY_LEVEL, which is the clock source quality level for SONET.
• DUS	Do Not Use For Synchronization
• PRS	Primary Reference Source, Stratum 1 Traceable
• RES	Reserved For Network Synchronization Use
• SMC	SONET Minimum Clock Traceable
• ST2	Stratum 2 Traceable
• ST3	Stratum 3 Traceable
• ST3E	Stratum 3E Traceable
• ST4	Stratum 4 Traceable
• STU	Synchronized, Traceability Unknown
• TNC	Transit Node Clock (2nd Generation Only)
<OSPF>	(Optional) The Open Shortest Path First protocol. The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.
<LDCC>	(Optional) The Line DCC connection on the port. The parameter type is EXT_RING, which indicates if the ring supports the extended K1/K2/K3 protocol.

• N	The ring does not support the extended K1/K2/K3 protocol.
• Y	The ring does support the extended K1/K2/K3 protocol.
<NAME>	(Optional) Port Name. NAME is a string.
<LBCL>	(Optional) Displays the current value of the laser current. LBCL is a float.
<OPT>	(Optional) Displays the current value of the transmitted optical power. OPT is only displayed for DWDM cards. OPT is a float.
<OPR>	(Optional) Received optical power. OPR is a float.
<EXPTRC>	(Optional) Expected path trace content. EXPTRC is a string.
<TRC>	(Optional) Path trace message to be transmitted. TRC is a string.
<TRCMODE>	(Optional) Path trace mode. Applicable only to STS-level Paths in SONET. Defaults to the OFF mode. The parameter type is TRCMODE (trace mode).
• AUTO	Use the previously received path trace string as the expected string. Not applicable to MXP/TXP cards.
• AUTO-NO-AIS	Use the previously received path trace string as the expected string and do not turn on alarm indication signal (AIS) and remote defect indication (RDI) if TIM-P is detected.
• MAN	Use the provisioned expected string as the expected string.
• MAN-NO-AIS	Use the provisioned expected string as the expected string and do not turn on AIS and RDI if TIM-P is detected.
• OFF	Turn off path trace capability. Nothing will be reported.
<TRCFORMAT>	(Optional) Trace message size. The parameter type is TRCFORMAT (trace format).
• 1-BYTE	1-byte trace message
• 16-BYTE	16-byte trace message
• 64-BYTE	64-byte trace message
• Y	Enable an attribute.
<ADMSSM>	(Optional) SSM selectable value. Only displayed when SSM is disabled. The parameter type is SYNC_CLOCK_REF_QUALITY_LEVEL, which is the clock source quality level for SONET.
• DUS	Do Not Use For Synchronization
• PRS	Primary Reference Source, Stratum 1 Traceable
• RES	Reserved For Network Synchronization Use
• SMC	SONET Minimum Clock Traceable
• ST2	Stratum 2 Traceable
• ST3	Stratum 3 Traceable
• ST3E	Stratum 3E Traceable
• ST4	Stratum 4 Traceable
• STU	Synchronized, Traceability Unknown
• TNC	Transit Node Clock (2nd Generation Only)

<SENDDUSFF>	(Optional) Indicates that the facility will send the DUS value in 0xff bits pattern as the synchronization status message for that facility. Defaults to N. The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.
<AISONLPBK>	(Optional) AIS on loopback. The parameter type is AIS_ON_LPBK, which indicates whether AIS is sent on a loopback.
• AIS_ONLPBK_FACILITY	AIS is sent on facility loopbacks.
• AIS_ON_LPBK_ALL	AIS is sent on all loopbacks.
• AIS_ON_LPBK_OFF	AIS is not sent on loopbacks.
• AIS_ON_LPBK_TERMINAL	AIS is sent on terminal loopbacks.
<FREQ>	(Optional) Parameter type is OPTICAL_WLEN (optical wavelength).
• 1310	Wavelength 1310
• 1470	Wavelength 1470
• 1490	Wavelength 1490
• 1510	Wavelength 1510
• 1528.77	Wavelength 1528.77
• 1529.55	Wavelength 1529.55
• 1529.94	Wavelength 1529.94
• 1530	Wavelength 1530
• 1530.33	Wavelength 1530.33
• 1530.73	Wavelength 1530.73
• 1531.12	Wavelength 1531.12
• 1531.51	Wavelength 1531.51
• 1531.90	Wavelength 1531.90
• 1532.29	Wavelength 1532.29
• 1532.68	Wavelength 1532.68
• 1533.07	Wavelength 1533.07
• 1533.47	Wavelength 1533.47
• 1533.86	Wavelength 1533.86
• 1534.25	Wavelength 1534.25
• 1534.64	Wavelength 1534.64
• 1535.04	Wavelength 1535.04
• 1535.43	Wavelength 1535.43
• 1535.82	Wavelength 1535.82
• 1536.22	Wavelength 1536.22
• 1536.61	Wavelength 1536.61
• 1537	Wavelength 1537
• 1537.40	Wavelength 1537.40
• 1537.79	Wavelength 1537.79

• 1538.19	Wavelength 1538.19
• 1538.58	Wavelength 1538.58
• 1538.98	Wavelength 1538.98
• 1539.37	Wavelength 1539.37
• 1539.77	Wavelength 1539.77
• 1540.16	Wavelength 1540.16
• 1540.56	Wavelength 1540.56
• 1540.95	Wavelength 1540.95
• 1541.35	Wavelength 1541.35
• 1541.75	Wavelength 1541.75
• 1542.14	Wavelength 1542.14
• 1542.35	Wavelength 1542.35
• 1542.54	Wavelength 1542.54
• 1542.94	Wavelength 1542.94
• 1543.33	Wavelength 1543.33
• 1543.73	Wavelength 1543.73
• 1544.13	Wavelength 1544.13
• 1544.53	Wavelength 1544.53
• 1544.92	Wavelength 1544.92
• 1545.32	Wavelength 1545.32
• 1545.72	Wavelength 1545.72
• 1546.12	Wavelength 1546.12
• 1546.52	Wavelength 1546.52
• 1546.92	Wavelength 1546.92
• 1547.32	Wavelength 1547.32
• 1547.72	Wavelength 1547.72
• 1548.12	Wavelength 1548.12
• 1548.51	Wavelength 1548.51
• 1548.92	Wavelength 1548.92
• 1549.32	Wavelength 1549.32
• 1549.71	Wavelength 1549.71
• 1550	Wavelength 1500
• 1550.12	Wavelength 1550.12
• 1550.52	Wavelength 1550.52
• 1550.92	Wavelength 1550.92
• 1551.32	Wavelength 1551.32
• 1551.72	Wavelength 1551.72
• 1552.12	Wavelength 1552.12
• 1552.52	Wavelength 1552.52
• 1552.93	Wavelength 1552.93
• 1553.33	Wavelength 1553.33

• 1553.73	Wavelength 1553.73
• 1554.13	Wavelength 1554.13
• 1554.13	Wavelength 1554.13
• 1554.94	Wavelength 1554.94
• 1555.34	Wavelength 1555.34
• 1555.75	Wavelength 1555.75
• 1556.15	Wavelength 1556.15
• 1556.55	Wavelength 1556.55
• 1556.96	Wavelength 1556.96
• 1557.36	Wavelength 1557.36
• 1557.77	Wavelength 1557.77
• 1558.17	Wavelength 1558.17
• 1558.58	Wavelength 1558.58
• 1558.98	Wavelength 1558.98
• 1559.39	Wavelength 1559.39
• 1559.79	Wavelength 1559.79
• 1560.20	Wavelength 1560.20
• 1560.61	Wavelength 1560.61
• 1561.01	Wavelength 1561.01
• 1561.42	Wavelength 1561.42
• 1561.83	Wavelength 1561.83
• 1570	Wavelength 1570
• 1570.83	Wavelength 1570.83
• 1571.24	Wavelength 1571.24
• 1571.65	Wavelength 1571.65
• 1572.06	Wavelength 1572.06
• 1572.48	Wavelength 1572.48
• 1572.89	Wavelength 1572.89
• 1573.30	Wavelength 1573.30
• 1573.71	Wavelength 1573.71
• 1574.13	Wavelength 1574.13
• 1574.54	Wavelength 1574.54
• 1574.95	Wavelength 1574.95
• 1575.37	Wavelength 1575.37
• 1575.78	Wavelength 1575.78
• 1576.20	Wavelength 1576.20
• 1576.61	Wavelength 1576.61
• 1577.03	Wavelength 1577.03
• 1577.44	Wavelength 1577.44
• 1577.86	Wavelength 1577.86
• 1578.27	Wavelength 1578.27

• 1578.69	Wavelength 1578.69
• 1579.10	Wavelength 1579.10
• 1579.52	Wavelength 1579.52
• 1579.93	Wavelength 1579.93
• 1580.35	Wavelength 1580.35
• 1580.77	Wavelength 1580.77
• 1581.18	Wavelength 1581.18
• 1581.60	Wavelength 1581.60
• 1582.02	Wavelength 1582.02
• 1582.44	Wavelength 1582.44
• 1582.85	Wavelength 1582.85
• 1583.27	Wavelength 1583.27
• 1583.69	Wavelength 1583.69
• 1584.11	Wavelength 1584.11
• 1584.53	Wavelength 1584.53
• 1584.95	Wavelength 1584.95
• 1585.36	Wavelength 1585.36
• 1585.78	Wavelength 1585.78
• 1586.20	Wavelength 1586.20
• 1586.62	Wavelength 1586.62
• 1587.04	Wavelength 1587.04
• 1587.46	Wavelength 1587.46
• 1587.88	Wavelength 1587.88
• 1588.30	Wavelength 1588.30
• 1588.73	Wavelength 1588.73
• 1589.15	Wavelength 1589.15
• 1589.57	Wavelength 1589.57
• 1589.99	Wavelength 1589.99
• 1590	Wavelength 1590
• 1590.41	Wavelength 1590.41
• 1590.83	Wavelength 1590.83
• 1591.26	Wavelength 1591.26
• 1591.68	Wavelength 1591.68
• 1592.10	Wavelength 1592.10
• 1592.52	Wavelength 1592.52
• 1592.95	Wavelength 1592.95
• 1593.37	Wavelength 1593.37
• 1593.79	Wavelength 1593.79
• 1594.22	Wavelength 1594.22
• 1594.64	Wavelength 1594.64
• 1595.06	Wavelength 1595.06

• 1595.49	Wavelength 1595.49
• 1596.34	Wavelength 1596.34
• 1596.76	Wavelength 1596.76
• 1597.19	Wavelength 1597.19
• 1597.62	Wavelength 1597.62
• 1598.04	Wavelength 1598.04
• 1598.47	Wavelength 1598.47
• 1598.89	Wavelength 1598.89
• 1599.32	Wavelength 1599.32
• 1599.75	Wavelength 1599.75
• 1600.06	Wavelength 1600.06
• 1601.03	Wavelength 1601.03
• 1601.46	Wavelength 1601.46
• 1601.88	Wavelength 1601.88
• 1602.31	Wavelength 1602.31
• 1602.74	Wavelength 1602.74
• 1603.17	Wavelength 1603.17
• 1603.60	Wavelength 1603.60
• 1604.03	Wavelength 1604.03
• 1610	Wavelength 1610
• USE-TWL1	Use Tunable Wavelength 1
<LOSSB>	(Optional) Parameter type is REACH (reach values).
• AUTOPROV	Autoprovisioning
• CX	Reach CX
• CX1	Reach CX1
• DX	Reach DX
• HX	Reach HX
• I1	Reach I1
• IR-1	Reach IR-1
• IR-2	Reach IR-2
• L1	Reach L1
• L2	Reach L2
• L3	Reach L3
• LR-1	Reach LR-1
• LR-2	Reach LR-2
• LR-3	Reach LR-3
• LX	Reach LX
• S1	Reach S1
• S2	Reach S2
• SR	Reach SR
• SR-1	Reach SR-1

• SX	Reach SX
• T	Reach T
• TEN-GE-ER	10 GE extended range
• TEN-GE-LR	10 GE long range
• TEN-GE-SR	10 GE short range
• VX	Reach VX
• ZX	Reach ZX
<FOREIGNFEND>	(Optional) Indicates whether the far-end NE on the DCC is a foreign NE. The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.
<FOREIGNIPADDRESS>	(Optional) The IP address of the far-end NE on the DCC. Used only if FOREIGNFEND is Y. FOREIGNIPADDRESS is a string.
<PST_PSTQ>	Administrative state in the PST_PSTQ format. The parameter type is PST_PSTQ, which is the service state of the entity described by the PST and PSTQ.
• IS-NR	In Service and Normal
• OOS-AU	Out of Service and Autonomous
• OOS-AUMA	Out of Service and Autonomous Management
• OOS-MA	Out of Service and Management
<SSTQ>	(Optional) Secondary state of the entity. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic In-Service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of Equipment
• MT	Maintenance
• OOG	Out of Group
• SWDL	Software Download
• UAS	Unassigned
• UEQ	Unequipped

## 21.6 RTRV-<PATH>

(Cisco ONS 15454) The Retrieve STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, STS9C, VT1, or VT2 (RTRV-<PATH>) command retrieves the attributes associated with an STS/VT path.

### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

Supported AIDs are: ALL, SLOT-N (N=1,2,...,ALL), and STS/VT-specific AIDs.

The SFBER, SDBER, RVRTV, RVTM, SWPDIP, HOLDOFFTIMER, and UPSRPTHSTATE parameters only apply to path protection configurations.

The path trace message is a 64 character string including the terminating CR (carriage return) and LF (line feed) that is transported in the J1 byte of the SONET STS Path overhead.

The EXPTRC indicates that the contents of the expected incoming path trace are provisioned by the user in the ED-STTS\_PATH command. The TRC indicates the contents of the outgoing path trace message. The INCTRC indicates the contents of the incoming path trace message.

The path trace mode has three modes: OFF, MANUAL, and AUTO. The mode defaults to OFF. The MANUAL mode performs the comparison of the received string with the user entered expected string. The AUTO mode performs the comparison of the present received string with an expected string set to a previously received string. If there is a mismatch, the TIM-P alarm is raised. When the path trace mode is in OFF mode, there is no path trace processing, and all the alarm and state conditions are reset.

When the expected string is queried under the OFF path trace mode, the expected string is a copy of the provisioned string or NULL. When an expected string is queried under the MANUAL path trace mode, the expected string is a copy of the user entered string. When an expected string is queried under the AUTO path trace mode, the expected string is a copy of the acquired received string or NULL if the string has not been acquired.

When the incoming string is queried under the OFF path trace mode, the incoming string is NULL. When an incoming string is queried under the MANUAL or AUTO path trace mode, the incoming string is a copy of the received string or NULL if the string has not been received.

J1 (EXPTRC) is implemented on the DS1/DS1N, DS3E/DS3NE, DS3XM, EC1, DS3/EC1-48, OC3, OC48AS, OC192, MRC-12, and OC192-XFP cards.

TRC and INCTRC are supported on DS1N, DS3NE, DS3/EC1-48, and DS3XM cards.

The following actions will result in error messages:

- If you send this command while BLSRPHTHTYPE=PCA, whether there is a BLSR switch or not, the protection channel access (PCA) path J1/C2 data will be returned (if there is PCA circuit on the AID).
- Sending this command with an STS AID that does not have circuits and where no BLSR is switched on the STS will return an error message.
- In LAN to WAN card mode, ALL aid is not supported for RTRV-VC464c.



#### Note

- An optional input parameter, BLSRPHTHTYPE, is introduced into this command to provide more options to retrieve the J1/C2 of a particular BLSR path. This field is valid only if the queried AID port has BLSR. The BLSRPHTHTYPE defaults to the “non-pca” path type if the BLSR is switched, or defaults to all BLSR path types if there is no BLSR switching.
- An optional output parameter, BLSRPHTHSTATE, is introduced into this command output. Each J1/C2 output data of this command will include the BLSR path state information.
- After BLSR switching, the J1/IPPM/C2 data can be retrieved over the protection path. J1 trace string, trace mode, or threshold is not allowed on the protection path.
- HOLDOFFTIMER is not specific to a path. Instead, it is applicable to the path protection selector.
- VT1.5 J2 path trace provisioning is supported on the DS3XM-12 card and the ONS 15454 CE-100T-8 card VT1.5 path using the ED-VT1, RTRV-VT1, and RTRV-PTHTRC-VT1 commands.
- For the selector path on a BLSR, the SWPDIP path attribute is not editable and is always in the ON state.
- SFBER and SDBER are applied for the ONS 15454 when the ONS 15454 has an XC-VXC-10G card.

**Category** Paths

**Security** Retrieve

**Input Format** RTRV-<PATH>:[<TID>]:<AID>:<CTAG>[::BLSRPHTHTYPE=<BLSRPHTHTYPE>][:];

**Input Example** RTRV-ST33C:FERNDALE:STS-2-1-4:238::BLSRPHTHTYPE=NON-PCA;

<b>Input Parameters</b>	<AID>	Access identifier from the “ <a href="#">26.12 CrossConnectId1</a> ” section on page 26-29.
	<BLSRPHTHTYPE>	The BLSR path type only if the port is on the BLSR. No value or a null value defaults to NON-PCA. Applicable only to STS-level paths in SONET. The parameter type is BLSR_PTH_TYPE, which is the BLSR path type only if the port is on the BLSR.
	<ul style="list-style-type: none"> <li>NON-PCA</li> </ul>	The AID is on the working path, or the cross-connection card protection path.
	<ul style="list-style-type: none"> <li>PCA</li> </ul>	The AID is on the BLSR PCA path.

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<AID>::[LEVEL=<LEVEL>],[SFBER=<SFBER>],[SDBER=<SDBER>],[RVRTV=<RVRTV>],
[RVTM=<RVTM>],[SWPDIP=<SWPDIP>],[HOLDOFFTIMER=<HOLDOFFTIMER>],
[EXPTRC=<EXPTRC>],[TRC=<TRC>],[INCTRC=<INCTRC>],[TRCMODE=<TRCMODE>],
[TRCFORMAT =<TRCFORMAT>],[TACC=<TACC>],[TAPTYPE=<TAPTYPE>],
[UPSRPTHSTATE=<UPSRPTHSTATE>],[C2=<C2>],
[BLSRPHTHSTATE=<BLSRPHTHSTATE>]:<PST_PSTQ>,[<SSTQ>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“STS-2-1-4::LEVEL=STS1,SFBER=1E-3,SDBER=1E-5,RVRTV=Y,RVTM=1.0,SWPDIP=Y,
HOLDOFFTIMER=2000,EXPTRC=“EXPTRCSTRING”,TRC=“TRCSTRING”,
INCTRC=“INCTRCSTRING”,TRCMODE=AUTO,TRCFORMAT=64-BYTE,TACC=8,
TAPTYPE=DUAL,UPSRPTHSTATE=ACT,C2=0X04,
BLSRPHTHSTATE=PROTPHTACT:OOS-AU,AINS”
;
```

## Output Parameters

<AID>	Access identifier from the “ <a href="#">26.12 CrossConnectId1</a> ” section on page 26-29.
<LEVEL>	(Optional) The rate of the cross-connect. Indicates the rate of the cross-connected channel. Applicable only to the STS path in SONET. The parameter type is PATH, which is the modifier for path commands.
• STS1	Synchronous transport signal/module level 1 (51.84 Mbps)
• STS3C	Synchronous transport signal/module level 3 concatenated (155.52 Mbps)
• STS6C	Synchronous transport signal/module level 6 (311.04 Mbps)
• STS9C	Synchronous transport signal/module level 9 concatenated (466.56 Mbps)
• STS12C	Synchronous transport signal/module level 12 concatenated (622.08 Mbps)
• STS18C	Synchronous transport signal/module level 18 concatenated (933.12 Mbps)
• STS24C	Synchronous transport signal/module level 24 concatenated (1244.16 Mbps)
• STS36C	Synchronous transport signal/module level 36 concatenated (1866.24 Mbps)
• STS48C	Synchronous transport signal/module level 48 concatenated (2488.32 Mbps)
• STS192C	Synchronous transport signal/module level 192 concatenated (9953.28 Mbps)
<SFBER>	(Optional) An STS path signal failure threshold that only applies to path protection. Applicable only to STS-level paths in SONET. Defaults to 1E-4. The parameter type is SF_BER, which is the threshold for declaring signal failure on a facility or path.
• 1E-3	SFBER is 1E-3.
• 1E-4	SFBER is 1E-4.
• 1E-5	SFBER is 1E-5.
<SDBER>	(Optional) An STS path signal degrade threshold that only applies to path protection. Applicable only to STS-level paths in SONET. Defaults 1E-6. The parameter type is SD_BER, which is the threshold for declaring signal degrade on a facility or path.
• 1E-5	SDBER is 1E-5.
• 1E-6	SDBER is 1E-6.
• 1E-7	SDBER is 1E-7.
• 1E-8	SDBER is 1E-8.
• 1E-9	SDBER is 1E-9.

<RVRTV>	Revertive mode. Only applies to path protection. The value Y indicates that protection switching system reverts service to the original line after restoration. The value N indicates that protection switching system does not revert service to the original line after restoration. RVRTV is applicable only for 1+1 protection switching. Null defaults to N. The parameter type is ON_OFF (disable or enable an attribute).
• N	Does not revert service to original line after restoration.
• Y	Reverts service to original line after restoration.
<RVTM>	Revertive time. Only applies to path protection. The parameter type is REVERTIVE_TIME.
• 0.5 to 12.0	Revertive time is 0.5 to 12.0 minutes.
<SWPDIP>	(Optional) Switch on PDI-P. Applicable only to STS-level paths in SONET. The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.
<HOLDOFFTIMER>	(Optional) Hold off timer. HOLDOFFTIMER is an integer.
<EXPTRC>	(Optional) Expected path trace content. Indicates the expected path trace message (J1) contents. EXPTRC is any 64-character ASCII string, including the terminating CR (carriage return) and LF (line feed). Applicable to STS-level paths in SONET. Defaults to NULL when a path protection path is created. EXPTRC is a string.
<TRC>	(Optional) The path trace message to be transmitted. The trace byte (J1) continuously transmits a 64-byte, fixed length ASCII string, one byte at a time. A null value defaults to the NE transmitting 62 null characters (hex 00) and CR and LF. A null value defaults to the NE transmitting null characters (Hex 00). Applicable to STS-level paths in SONET. Applicable to VT-level paths for the DS3XM-12 card on the ONS 15454. TRC is a string.
<INCTRC>	(Optional) The incoming path trace message contents. INCTRC is any combination of 64 characters. Applicable only to STS-level paths in SONET (STS <sub>n</sub> ). Defaults to null when a path protection path is created. INCTRC is a string.
<TRCMODE>	(Optional) Path trace mode. Applicable only to STS-level paths in SONET (STS <sub>n</sub> ). Defaults to OFF when a path protection path is created. The parameter type is TRCMODE (trace mode).
• AUTO	Use the previously received path trace string as the expected string (not applicable to MXP_2.5G_10G and TXP_MR_10G cards).
• AUTO-NO-AIS	Use the previously received path trace string as the expected string and do not turn on AIS and RDI if TIM-P detected.
• MAN	Use the provisioned expected string as the expected string.
• MAN-NO-AIS	Use the provisioned expected string as the expected string and do not turn on AIS and RDI if TIM-P detected.
• OFF	Turn off path trace capability. Nothing will be reported.
<TRCFORMAT>	(Optional) Trace message size. The parameter type is TRCFORMAT (trace format).

• 1-BYTE	1-byte trace message
• 16-BYTE	16-byte trace message
• 64-BYTE	64-byte trace message
• Y	Enable an attribute.
<TACC>	(Optional) Test access. Indicates whether the digroup being provisioned is to be used as a test access digroup. Defaults to N.
<TAPTYPE>	(Optional) TAP type. The parameter type is TAPTYPE, which is the test access point type
• DUAL	Dual FAD
• SINGLE	Single FAD
<UPSRPTHSTATE>	(Optional) Indicates whether a given AID is the working or standby path of a path protection cross-connect. The parameter type is STATUS, which is the status of the unit in the protection pair.
• ACT	The entity is the active unit in the shelf.
• NA	Status is unavailable.
• STBY	The entity is the standby unit in the shelf.
<C2>	(Optional) The C2 byte hex code. Applicable only to STS-level paths in SONET (STS <sub>n</sub> ). The parameter type is C2_BYTE, which is the C2 byte hex code.
• 0X00	Unequipped
• 0X01	Equipped Non-Specific payload
• 0X02	VT-Structured STS-1 synchronous payload envelope (SPE)
• 0X03	Locked VT Mode
• 0X04	Asynchronous Mapping for DS3
• 0X12	Asynchronous Mapping for DS4 North American (NA)
• 0X13	Mapping for ATM
• 0X14	Mapping for DQDB
• 0X15	Asynchronous Mapping for FDDI
• 0X16	HDLC-Over-SONET Mapping
• 0XE1	VT-structured STS-1 SPE with 1VTx payload defect
• 0XE2	VT-structured STS-1 SPE with 2VTx payload defects
• 0XE3	VT-structured STS-1 SPE with 3VTx payload defects
• 0XE4	VT-structured STS-1 SPE with 4VTx payload defects
• 0XE5	VT-structured STS-1 SPE with 5VTx payload defects
• 0XE6	VT-structured STS-1 SPE with 6VTx payload defects
• 0XE7	VT-structured STS-1 SPE with 7VTx payload defects
• 0XE8	VT-structured STS-1 SPE with 8VTx payload defects
• 0XE9	VT-structured STS-1 SPE with 9VTx payload defects
• 0XEA	VT-structured STS-1 SPE with 10VTx payload defects
• 0XEB	VT-structured STS-1 SPE with 11VTx payload defects
• 0XEC	VT-structured STS-1 SPE with 12VTx payload defects
• 0XED	VT-structured STS-1 SPE with 13VTx payload defects
• 0XEE	VT-structured STS-1 SPE with 14VTx payload defects

• 0XEF	VT-structured STS-1 SPE with 15VTx payload defects
• 0XF0	VT-structured STS-1 SPE with 16VTx payload defects
• 0XF1	VT-structured STS-1 SPE with 17VTx payload defects
• 0XF2	VT-structured STS-1 SPE with 18VTx payload defects
• 0XF3	VT-structured STS-1 SPE with 19VTx payload defects
• 0XF4	VT-structured STS-1 SPE with 20VTx payload defects
• 0XF5	VT-structured STS-1 SPE with 21VTx payload defects
• 0XF6	VT-structured STS-1 SPE with 22VTx payload defects
• 0XF7	VT-structured STS-1 SPE with 23VTx payload defects
• 0XF8	VT-structured STS-1 SPE with 24VTx payload defects
• 0XF9	VT-structured STS-1 SPE with 25VTx payload defects
• 0XFA	VT-structured STS-1 SPE with 26VTx payload defects
• 0XFB	VT-structured STS-1 SPE with 27VTx payload defects
• 0XFC	VT-structured STS-1 SPE with 28VTx payload defects
• 0XFE	O.181 Test Signal (TSS1 to TSS3) Mapping
• 0XFF	Reserved, however, C2 is 0XFF if an AIS-L is being generated by an optical card or cross-connect downstream.
<BLSRPTHSTATE>	(Optional) The BLSR path state only if the port is on the BLSR. Applicable only to STS-level paths in SONET (STS <sub>n</sub> ). The parameter type is BLSR_PTH_STATE, which is the BLSR path state only if the port is on the BLSR.
• PCAPTHACT	Indicates the BLSR is not switched and its PCA path is in the active state.
• PCAPTHSTB	Indicates the BLSR is switched and its PCA path is in the standby state.
• PROTPHACT	Indicates the BLSR is switched and its protection path is in the active state.
• WKGPTHACT	Indicates the BLSR is not switched and its working path is in the active state.
• WKGPTHSTB	Indicates the BLSR is switched and its working path is in the standby state.
<PST_PSTQ>	Administrative state in the PST_PSTQ format. The parameter type is PST_PSTQ, which is the service state of the entity described by the PST and PSTQ.
• IS-NR	In Service and Normal
• OOS-AU	Out of Service and Autonomous
• OOS-AUMA	Out of Service and Autonomous Management
• OOS-MA	Out of Service and Management
<SSTQ>	(Optional) Secondary state of the entity. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic In-Service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of Equipment

• MT	Maintenance
• OOG	Out of Group
• SWDL	Software Download
• UAS	Unassigned
• UEQ	Unequipped

## 21.7 RTRV-10GIGE

(Cisco ONS 15454) The Retrieve 10GIGE (RTRV-10GIGE) command retrieves the 10 Gbps-specific parameters for a port that has been configured to support the Gigabit Ethernet payload with the ENT-10GIGE command.

**Usage Guidelines** None

**Category** Ports

**Security** Retrieve

**Input Format** RTRV-10GIGE:[<TID>]:<AID>:<CTAG>[:[:]];

**Input Example** RTRV-10GIGE:TID:FAC-1-1:100;

**Input Parameters** <AID> Access identifier from the [“26.17 FACILITY”](#) section on page 26-40.

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<AID>:.,[<ROLE>],[<STATUS>]:[NAME=<NAME>],[MACADDR=<MACADDR>],
[LBCL=<LBCL>],[OPT=<OPT>],[OPR=<OPR>],[FREQ=<FREQ>],
[LOSSB=<LOSSB>]:<PSTPSTQ>,[<SST>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“FAC-6-1:.,WORK,ACT:NAME="NY PORT",MACADDR=00-0E-AA-BB-CC-FF,LBCL=10.0,
OPT=10.0,OPR=10.0,FREQ=1550,LOSSB=SX:OOS-AU,AINS”
;
```

**Output Parameters**

<AID>	Access identifier from the “26.17 FACILITY” section on page 26-40.
<ROLE>	(Optional) The port role in Y-cable protection (WORK or PROT). The parameter type is SIDE, which is the role the unit is playing in the protection group.
• PROT	The entity is a protection unit in the protection group.
• WORK	The entity is a working unit in the protection group.
<STATUS>	(Optional) A port status in Y-cable protection (ACT or STBY). The parameter type is STATUS, which is the status of the unit in the protection pair.
• ACT	The entity is the active unit in the shelf.
• NA	Status is unavailable.
• STBY	The entity is the standby unit in the shelf.
<NAME>	(Optional) Port name. NAME is a string.
<MACADDR>	(Optional) The MAC address for the 10-Gigabit Ethernet payload. MACADDR is a string.
<LBCL>	(Optional) Displays the current value of the laser current. LBCL is a float.
<OPT>	(Optional) Displays the current value of the transmitted optical power. OPT is a float.
<OPR>	(Optional) Displays the current value of the received optical power. OPR is a float.
<FREQ>	(Optional) Parameter type is OPTICAL_WLEN (optical wavelength).
• 1310	Wavelength 1310
• 1470	Wavelength 1470
• 1490	Wavelength 1490
• 1510	Wavelength 1510
• 1529.55	Wavelength 1529.55
• 1529.94	Wavelength 1529.94
• 1530	Wavelength 1530
• 1530.33	Wavelength 1530.33
• 1530.73	Wavelength 1530.73
• 1531.12	Wavelength 1531.12
• 1531.51	Wavelength 1531.51
• 1531.90	Wavelength 1531.90
• 1532.29	Wavelength 1532.29
• 1532.68	Wavelength 1532.68
• 1533.07	Wavelength 1533.07
• 1533.47	Wavelength 1533.47
• 1533.86	Wavelength 1533.86
• 1534.25	Wavelength 1534.25
• 1534.64	Wavelength 1534.64

• 1535.04	Wavelength 1535.04
• 1535.43	Wavelength 1535.43
• 1535.82	Wavelength 1535.82
• 1536.22	Wavelength 1536.22
• 1536.61	Wavelength 1536.61
• 1537	Wavelength 1537
• 1537.40	Wavelength 1537.40
• 1537.79	Wavelength 1537.79
• 1538.19	Wavelength 1538.19
• 1538.58	Wavelength 1538.58
• 1538.98	Wavelength 1538.98
• 1539.37	Wavelength 1539.37
• 1539.77	Wavelength 1539.77
• 1540.16	Wavelength 1540.16
• 1540.56	Wavelength 1540.56
• 1540.95	Wavelength 1540.95
• 1541.35	Wavelength 1541.35
• 1541.75	Wavelength 1541.75
• 1542.14	Wavelength 1542.14
• 1542.35	Wavelength 1542.35
• 1542.54	Wavelength 1542.54
• 1542.94	Wavelength 1542.94
• 1543.33	Wavelength 1543.33
• 1543.73	Wavelength 1543.73
• 1544.13	Wavelength 1544.13
• 1544.53	Wavelength 1544.53
• 1544.92	Wavelength 1544.92
• 1545.32	Wavelength 1545.32
• 1545.72	Wavelength 1545.72
• 1546.12	Wavelength 1546.12
• 1546.52	Wavelength 1546.52
• 1546.92	Wavelength 1546.92
• 1547.32	Wavelength 1547.32
• 1547.72	Wavelength 1547.72
• 1548.12	Wavelength 1548.12
• 1548.51	Wavelength 1548.51
• 1548.92	Wavelength 1548.92
• 1549.32	Wavelength 1549.32
• 1549.71	Wavelength 1549.71
• 1550	Wavelength 1500
• 1550.12	Wavelength 1550.12

• 1550.52	Wavelength 1550.52
• 1550.92	Wavelength 1550.92
• 1551.32	Wavelength 1551.32
• 1551.72	Wavelength 1551.72
• 1552.12	Wavelength 1552.12
• 1552.52	Wavelength 1552.52
• 1552.93	Wavelength 1552.93
• 1553.33	Wavelength 1553.33
• 1553.73	Wavelength 1553.73
• 1554.13	Wavelength 1554.13
• 1554.13	Wavelength 1554.13
• 1554.94	Wavelength 1554.94
• 1555.34	Wavelength 1555.34
• 1555.75	Wavelength 1555.75
• 1556.15	Wavelength 1556.15
• 1556.55	Wavelength 1556.55
• 1556.96	Wavelength 1556.96
• 1557.36	Wavelength 1557.36
• 1557.77	Wavelength 1557.77
• 1558.17	Wavelength 1558.17
• 1558.58	Wavelength 1558.58
• 1558.98	Wavelength 1558.98
• 1559.39	Wavelength 1559.39
• 1559.79	Wavelength 1559.79
• 1560.20	Wavelength 1560.20
• 1560.61	Wavelength 1560.61
• 1561.01	Wavelength 1561.01
• 1561.42	Wavelength 1561.42
• 1561.83	Wavelength 1561.83
• 1570	Wavelength 1570
• 1570.83	Wavelength 1570.83
• 1571.24	Wavelength 1571.24
• 1571.65	Wavelength 1571.65
• 1572.06	Wavelength 1572.06
• 1572.48	Wavelength 1572.48
• 1572.89	Wavelength 1572.89
• 1573.30	Wavelength 1573.30
• 1573.71	Wavelength 1573.71
• 1574.13	Wavelength 1574.13
• 1574.54	Wavelength 1574.54
• 1574.95	Wavelength 1574.95

• 1575.37	Wavelength 1575.37
• 1575.78	Wavelength 1575.78
• 1576.20	Wavelength 1576.20
• 1576.61	Wavelength 1576.61
• 1577.03	Wavelength 1577.03
• 1577.44	Wavelength 1577.44
• 1577.86	Wavelength 1577.86
• 1578.27	Wavelength 1578.27
• 1578.69	Wavelength 1578.69
• 1579.10	Wavelength 1579.10
• 1579.52	Wavelength 1579.52
• 1579.93	Wavelength 1579.93
• 1580.35	Wavelength 1580.35
• 1580.77	Wavelength 1580.77
• 1581.18	Wavelength 1581.18
• 1581.60	Wavelength 1581.60
• 1582.02	Wavelength 1582.02
• 1582.44	Wavelength 1582.44
• 1582.85	Wavelength 1582.85
• 1583.27	Wavelength 1583.27
• 1583.69	Wavelength 1583.69
• 1584.11	Wavelength 1584.11
• 1584.53	Wavelength 1584.53
• 1584.95	Wavelength 1584.95
• 1585.36	Wavelength 1585.36
• 1585.78	Wavelength 1585.78
• 1586.20	Wavelength 1586.20
• 1586.62	Wavelength 1586.62
• 1587.04	Wavelength 1587.04
• 1587.46	Wavelength 1587.46
• 1587.88	Wavelength 1587.88
• 1588.30	Wavelength 1588.30
• 1588.73	Wavelength 1588.73
• 1589.15	Wavelength 1589.15
• 1589.57	Wavelength 1589.57
• 1589.99	Wavelength 1589.99
• 1590	Wavelength 1590
• 1590.41	Wavelength 1590.41
• 1590.83	Wavelength 1590.83
• 1591.26	Wavelength 1591.26
• 1591.68	Wavelength 1591.68

• 1592.10	Wavelength 1592.10
• 1592.52	Wavelength 1592.52
• 1592.95	Wavelength 1592.95
• 1593.37	Wavelength 1593.37
• 1593.79	Wavelength 1593.79
• 1594.22	Wavelength 1594.22
• 1594.64	Wavelength 1594.64
• 1595.06	Wavelength 1595.06
• 1595.49	Wavelength 1595.49
• 1596.34	Wavelength 1596.34
• 1596.76	Wavelength 1596.76
• 1597.19	Wavelength 1597.19
• 1597.62	Wavelength 1597.62
• 1598.04	Wavelength 1598.04
• 1598.47	Wavelength 1598.47
• 1598.89	Wavelength 1598.89
• 1599.32	Wavelength 1599.32
• 1599.75	Wavelength 1599.75
• 1600.06	Wavelength 1600.06
• 1601.03	Wavelength 1601.03
• 1601.46	Wavelength 1601.46
• 1601.88	Wavelength 1601.88
• 1602.31	Wavelength 1602.31
• 1602.74	Wavelength 1602.74
• 1603.17	Wavelength 1603.17
• 1603.60	Wavelength 1603.60
• 1604.03	Wavelength 1604.03
• 1610	Wavelength 1610
• USE-TWL1	Use Tunable Wavelength 1
<LOSSB>	(Optional) The parameter type is REACH (reach values).
• AUTOPROV	Autoprovisioning
• CX	Reach CX
• CX1	Reach CX1
• DX	Reach DX
• HX	Reach HX
• I1	Reach I1
• IR-1	Reach IR-1
• IR-2	Reach IR-2
• L1	Reach L1
• L2	Reach L2
• L3	Reach L3

• LR-1	Reach LR-1
• LR-2	Reach LR-2
• LR-3	Reach LR-3
• LX	Reach LX
• S1	Reach S1
• S2	Reach S2
• SR	Reach SR
• SR-1	Reach SR-1
• SX	Reach SX
• T	Reach T
• TEN-GE-ER	10 GE extended range
• TEN-GE-LR	10 GE long range
• TEN-GE-SR	10 GE short range
• VX	Reach VX
• ZX	Reach ZX
<PST_PSTQ>	Administrative state in the PST_PSTQ format. The parameter type is PST_PSTQ, which is the service state of the entity described by the SST and PSTQ.
• IS-NR	In Service and Normal
• OOS-AU	Out of Service and Autonomous
• OOS-AUMA	Out of Service and Autonomous Management
• OOS-MA	Out of Service and Management
<SSTQ>	(Optional) Secondary state of the entity. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic In-Service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of Equipment
• MT	Maintenance
• OOG	Out of Group
• SWDL	Software Download
• UAS	Unassigned
• UEQ	Unequipped

## 21.8 RTRV-ALM-<MOD2ALM>

(Cisco ONS 15454) The Retrieve Alarm for (10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 4GFC, 4GFICON, 5GIB, 8GFC, CHGRP, DS1, DS3I, DVBASI, E1, E100, E1000, E3, E4, EC1, ETH, FSTE, G1000, GFPOS, GIGE, HDLC, ILK, ISCCOMPAT, ISC1, ISC3PEER2R, ISC3PEER1G, ISC3PEER2G, MSISC, OC12, OC192, OC3, OC48, OC768, OCH, OMS, OTS, OTU2, OTU3, POS, RPRIF, STM1, STM4, STM16, STM64, STM1E, STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, STS9C, T1, T3, UDCDCC, UDCF,

VC3, VC4, VC4-2c, VC4-3c, VC4-4c, VC4-16c, VC4-64c, VC11, VC12, VC3, VCG, VT1, VT2, or WLEN (RTRV-ALM-<MOD2ALM>) command retrieves and sends the current status of alarm conditions. The alarm condition or severity to be retrieved can be specified by using the input parameters as a filter.

**Usage Guidelines**

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

**Note**

VT1-n-n-n replaces PS\_VT1-n-n-n for the VT1 alarm AID.

**Note**

The AIDTYPE shows STS1 for STS alarms.

**Category**

Fault

**Security**

Retrieve

**Input Format**

RTRV-ALM-<MOD2ALM>:[<TID>]:<AID>:<CTAG>::[<NTFCNCDE>],[<CONDTYPE>],[<SRVEFF>][<LOCN>],[<DIRN>][,];

**Input Example**

RTRV-ALM-OC12:ELDRIDGE:FAC-5-1:225::MN,SD,SA,NEND,RCV;

**Input Parameters**

<AID>	Access identifier from the <a href="#">“26.2 AidUnionId” section on page 26-13</a> .
<NTFCNCDE>	Two-letter notification code. A null value is equivalent to ALL. The parameter type is NOTIF_CODE, which is the two-character notification code associated with an autonomous message.
<ul style="list-style-type: none"> <li>• CL</li> <li>• CR</li> <li>• MJ</li> <li>• MN</li> <li>• NA</li> <li>• NR</li> </ul>	<ul style="list-style-type: none"> <li>The condition causing the alarm has cleared.</li> <li>A critical alarm.</li> <li>A major alarm.</li> <li>A minor alarm.</li> <li>The condition is not alarmed.</li> <li>The alarm is not reported.</li> </ul>
<CONDTYPE>	Condition type for an alarm or a reported event. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, NA conditions, and NR conditions. See <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.

<SRVEFF>	The effect on service caused by the standing alarm or condition. The parameter type is SERV_EFF, which is the effect of the alarm on service. A null value is equivalent to ALL.
• NSA	The condition is non-service affecting.
• SA	The condition is service affecting.
<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
• BTH	Both transmit and receive directions
• RCV	Receive direction only

**Output Format**

```

SID DATE TIME
M CTAG COMPLD
"<AID>,[<AIDTYPE>]:<NTFCNCDE>,<CONDDTYPE>,<SRVEFF>,[<OCRDAT>],
[<OCRTM>],[<LOCN>],[<DIRN>]:[<DESC>]"
;

```

**Output Example**

```

TID-000 1998-06-20 14:30:00
M 001 COMPLD
"FAC-5-1,OC12:MJ,SD,SA,09-05,12-30-20,NEND,RCV:\'BER AT SIGNAL DEGRADE LEVEL\'",
;

```

**Output Parameters**

<AID>	Access identifier from the <a href="#">“26.1 ALL” section on page 26-1</a> .
<AIDTYPE>	(Optional) Type of access identifier. The parameter type is MOD2ALM (alarm type).
• 1GFC	1-Gigabit Fibre Channel payload
• 1GFICON	1-Gigabit fiber connectivity payload
• 1GISC3	1-Gigabit ISC3 compatible
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• 4GFC	4-Gigabit Fibre Channel payload
• 4GFICON	4-Gigabit fiber connectivity payload
• 40GIGE	40-Gigabit Ethernet
• 5GIB	5Gbps InfiniBand (IB_5G) payload
• 8GFC	8-Gigabit Fibre Channel payload
• CLNT	Client facility for MXP/TXP cards
• CHGRP	Channel group

• DS1	DS1 alarm
• DS3I	DS3I alarm
• DVBASI	Digital Video Broadband Asynchronous Serial Interface (DVBASI) payload
• E100	E100 alarm
• E1000	E1000 alarm
• EC1	EC1 alarm
• FSTE	Fast Ethernet Port alarm
• G1000	G1000 alarm
• GFPOS	Generic framing protocol over packet over SONET virtual port alarm
• GIGE	Gigabit Ethernet port alarm
• ISC1	InterSystem Channel, a protocol defined by IBM (ISC1) payload
• ISC3PEER1G	1-Gigabit ISC3 Peer
• ISC3PEER2G	2-Gigabit ISC3 Peer
• ISC3PEER2R	1-Gigabit or 2-Gigabit ISC3 peer used in transparent (2R) mode
• ISCCOMPAT	1-Gigabit ISC1, ISC2, and ISC3 compatibility
• ML1000-2	(ONS 15454) ML-Series two port Gigabit Ethernet card
• MSISC	MSISC
• OC3	OC3 alarm
• OC12	OC12 alarm
• OC48	OC48 alarm
• OC192	OC192 alarm
• OC768	OC768 alarm
• OCH	Optical channel
• OCHTERM	OCH termination
• OMS	Optical Multiplex Section
• OTS	Optical Transport Section
• OTU3	Optical Transport Unit Level 3
• POS	POS port alarm
• STS1	STS1 alarm
• STS3C	STS3c alarm
• STS6C	STS6c alarm
• STS9C	STS9c alarm
• STS18C	STS18c alarm
• STS12C	STS12c alarm
• STS24C	STS24c alarm
• STS36C	STS36c alarm
• STS48C	STS48c alarm
• STS192C	STS192c alarm
• T1	T1 alarm
• T3	T3 alarm

• UDCDCC	UDC-DCC alarm
• UDCF	UCD-F alarm
• VCG	Virtual concatenation group alarm
• VT1	VT1 alarm
• VT2	VT2 alarm
• WLEN	Wavelength path provisioning
<NTFCNCDE>	Two-letter notification code. The parameter type is NOTIF_CODE, which is the two-character notification code associated with an autonomous message.
• CL	The condition causing the alarm has cleared.
• CR	A critical alarm.
• MJ	A major alarm.
• MN	A minor alarm.
• NA	The condition is not alarmed.
• NR	The alarm is not reported.
<CONDTYPE>	Condition type for an alarm or a reported event. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, NA conditions, and NR conditions. See <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.
<SRVEFF>	The effect on service caused by the standing alarm or condition. The parameter type is SERV_EFF, which is the effect of the alarm on service.
• NSA	The condition is non-service affecting.
• SA	The condition is service affecting.
<OCRDAT>	(Optional) Date when the specific event or violation occurred, MM-DD.
<OVRTM>	(Optional) Time when the specific event or violation occurred, HH-MM-SS.
<LOCN>	Location associated with a particular command in reference to the entity identified by the AID. A null value defaults to NEND. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
• BTH	Both transmit and receive directions
• RCV	Receive direction only
<DESC>	(Optional) A condition description. DESC is a string.

## 21.9 RTRV-ALMTYPE

(Cisco ONS 15454) The Retrieve Alarm Type command retrieves all system and user-defined alarm types.

**Usage Guidelines** None

**Category** System

**Security** Retrieve

**Input Format** RTRV-ALMTYPE:[<TID>]::<CTAG>;

**Input Example** RTRV-ALMTYPE:CISCONODE::1;

**Input Parameters** None.

**Output Format**  
 SID DATE TIME  
 M CTAG COMPLD  
 "<TYPEOFALM>,<ALMTYPE>"  
 ;

**Output Examples**  
 CISCONODE 2007-06-26 14:30:00  
 M 1 COMPLD  
 "SYSTEMDEFINED,AIRCOMPR"  
 ;

<b>Output Parameters</b>	<TYPEOFALM>	Specifies the type of alarm, that is, system or user-defined.
	• SYSTEMDEFINED	Specifies a system-defined alarm type.
	• USERDEFINED	Specifies a user-defined alarm type.
	<ALMTYPE>	Specifies user-defined alarm types associated with virtual wires in environmental alarm inputs.

## 21.10 RTRV-ALM-ALL

(Cisco ONS 15454) The Retrieve Alarm All (RTRV-ALM-ALL) command retrieves and sends the current status of all active alarm conditions. The alarm condition or severity to be retrieved is specified using the input parameters as a filter.

### Usage Guidelines

According to Telcordia GR-833, the RTRV-ALM-ALL command only reports EQPT, COM, T1, T3, OCN, EC1, STSN, VT1, DS1, E100, E1000, G1000, ML-Series, TXP, and MXP alarms. To retrieve all the NE alarms, issue all of the following commands:

```
RTRV-ALM-ALL
RTRV-ALM-BITS
RTRV-ALM-ENV
RTRV-ALM-SYNCN
```

### Category

Fault

### Security

Retrieve

### Input Format

```
RTRV-ALM-ALL:[<TID>]:[<AID>]:<CTAG>::[<NTFCNCDE>],
[<CONDITION>],[<SRVEFF>],[<LOCN>],[<DIRN>],[,];
```

### Input Example

```
RTRV-ALM-ALL:COTATI:ALL:229::MN,PWRRESTART,NSA,NEND,RCV;
```

### Input Parameters

<AID>	Access identifier from the “26.1 ALL” section on page 26-1. A null value is equivalent to ALL. AID is a string.
<NTFCNCDE>	Two-letter notification code. A null value is equivalent to ALL. The parameter type is NOTIF_CODE, which is the two-character notification code associated with an autonomous message.
<ul style="list-style-type: none"> <li>• CR</li> <li>• MJ</li> <li>• MN</li> </ul>	<p>A critical alarm.</p> <p>A major alarm.</p> <p>A minor alarm.</p>
<CONDITION>	The type of alarm condition. A null value is equivalent to ALL. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, NA conditions, and NR conditions. See <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.
<SRVEFF>	The effect on service caused by the standing alarm or condition. The parameter type is SERV_EFF, which is the effect of the alarm on service. A null value is equivalent to ALL.
<ul style="list-style-type: none"> <li>• NSA</li> </ul>	The condition is non-service affecting.

• SA	The condition is service affecting.
<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
• BTH	Both transmit and receive directions
• RCV	Receive direction only

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“[<AID>],[<AIDTYPE>]:<NTFCNCDE>,<CONDTYPE>,<SRVEFF>,[<LOCN>],[<DIRN>]:
[<DESC>],[<AIDDET>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“SLOT-2,EQPT:MN,PWRRESTART,NSA,08-01,14-25-59,NEND,RCV:\“POWER FAIL RESTART\”,
DS1-14”
;
```

**Output Parameters**

<AID>	(Optional) Access identifier from the <a href="#">“26.1 ALL” section on page 26-1</a> .
<AIDTYPE>	(Optional) Type of facility, link, or other addressable entity targeted by the message. The parameter type is MOD2B, which is the alarm type.
• 1GFC	1-Gigabit Fibre Channel payload
• 1GFICON	1-Gigabit fiber connectivity payload
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• 4GFC	4-Gigabit Fibre Channel payload
• 4GFICON	4-Gigabit fiber connectivity payload
• 40GIGE	40-Gigabit Ethernet
• 5GIB	5Gbps InfiniBand (IB_5G) payload
• 8GFC	8-Gigabit Fibre Channel payload
• BITS	Building integrated timing supply (BITS) alarm
• CHGRP	Channel group
• CLNT	Client facility for muxponder (MXP) and transponder (TXP) cards
• COM	Common alarm
• DS1	DS1 alarm

• DS3I	DS3i-N-12 alarm
• E100	E100 alarm
• E1000	E1000 alarm
• EC1	EC1 alarm
• ENV	ENV alarm
• EQPT	EQPT alarm
• FSTE	Fast Ethernet Port alarm
• G1000	G1000 alarm
• GIGE	Gigabit Ethernet port alarm
• HDLC	High-level data link control (HDLC) frame mode.
• ISC3PEER1G	1-Gigabit ISC3 Peer
• ISC3PEER2G	2-Gigabit ISC3 Peer
• ISC3PEER2R	1-Gigabit or 2-Gigabit ISC3 peer used in transparent (2R) mode
• ISCCOMPAT	1-Gigabit ISC1, ISC2, and ISC3 compatibility
• ML1000-2	(ONS 15454) ML-Series two port Gigabit Ethernet card
• MSISC	MSISC
• OC3	OC3 alarm
• OC12	OC12 alarm
• OC48	OC48 alarm
• OC192	OC192 alarm
• OC768	OC768 alarm
• OCH	Optical channel
• OMS	Optical Multiplex Section
• OTS	Optical Transport Section
• OTU3	Optical Transport Unit Level 3
• POS	Packet over SONET (POS) port alarm
• REP	Resilient Ethernet Protocol
• STS1	STS1 alarm
• STS3C	STS3c alarm
• STS6C	STS6c alarm
• STS9C	STS9c alarm
• STS18C	STS18c alarm
• STS12C	STS12c alarm
• STS24C	STS24c alarm
• STS36C	STS36c alarm
• STS48C	STS48c alarm
• STS192C	STS192c alarm
• SYNCN	SYNCN alarm
• T1	T1 alarm
• T3	T3 alarm
• TCC	TCC alarm

• VT1	VT1 alarm
• VT2	VT2 alarm
<NTFCNCDE>	Two-letter notification code. The parameter type is NOTIF_CODE, which is the two-character notification code associated with an autonomous message.
• CL	The condition causing the alarm has cleared.
• CR	A critical alarm.
• MJ	A major alarm.
• MN	A minor alarm.
• NA	The condition is not alarmed.
• NR	The alarm is not reported.
<CONDTYPE>	Condition type for an alarm or a reported event. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, NA conditions, and NR conditions. See <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.
<SRVEFF>	The effect on service caused by the standing alarm or condition. The parameter type is SERV_EFF, which is the effect of the alarm on service.
• NSA	The condition is non-service affecting.
• SA	The condition is service affecting.
<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
• BTH	Both transmit and receive directions
• RCV	Receive direction only
<OCRDAT>	(Optional) Date when the specific event or violation occurred, MM-DD.
<OCRTM>	(Optional) Time when the specific event or violation occurred, HH-MM-SS.
<DESC>	(Optional) A condition description. DESC is a string.
<AIDDET>	(Optional) AIDDET uses the same addressing rules as the AID, but specifies AID type and additional details about the entity being managed. The supplementary equipment identification.

## 21.11 RTRV-ALM-BITS

(Cisco ONS 15454) The Retrieve Alarm Building Integrated Timing Supply (RTRV-ALM-BITS) command retrieves and sends the current status of alarm conditions associated with the BITS facility. The alarm condition or severity retrieved is specified using the input parameters as a filter.

### Usage Guidelines

None

### Category

Synchronization

### Security

Retrieve

### Input Format

```
RTRV-ALM-BITS:[<TID>]:<AID>:<CTAG>:[<NTFCNCDE>],[<CONDTYPE>],[<SRVEFF>],
[<LOCN>],[<DIRN>];
```

### Input Example

```
RTRV-ALM-BITS:ELVERANO:BITS-1:228::CR,LOS,SA;
```

### Input Parameters

<AID>	Access identifier from the <a href="#">“26.6 BITS” section on page 26-21</a> .
<NTFCNCDE>	Two-letter notification code. A null value is equivalent to ALL. The parameter type is NOTIF_CODE, which is the two-character notification code associated with an autonomous message.
<ul style="list-style-type: none"> <li>• CL</li> <li>• CR</li> <li>• MJ</li> <li>• MN</li> <li>• NA</li> <li>• NR</li> </ul>	<ul style="list-style-type: none"> <li>The condition causing the alarm has cleared.</li> <li>A critical alarm.</li> <li>A major alarm.</li> <li>A minor alarm.</li> <li>The condition is not alarmed.</li> <li>The alarm is not reported.</li> </ul>
<CONDTYPE>	The condition type for an alarm or reported event. A null value is equivalent to ALL. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, NA conditions, and NR conditions. See <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.
<SRVEFF>	The effect on service caused by the standing alarm or condition. The parameter type is SERV_EFF, which is the effect of the alarm on service. A null value is equivalent to ALL.
<ul style="list-style-type: none"> <li>• NSA</li> <li>• SA</li> </ul>	<ul style="list-style-type: none"> <li>The condition is non-service affecting.</li> <li>The condition is service affecting.</li> </ul>

<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
• BTH	Both transmit and receive directions
• RCV	Receive direction only

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<AID>,[<AIDTYPE>]:<NTFCNCDE>,<CONDTYPE>,<SRVEFF>,[<OCRDAT>],[<OCRTM>],[<LOCATION>],[<DIRECTION>]:[<DESC>],"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"BITS-1,BITS:CR,LOS,SA,,,:A"LOSS OF SIGNAL","
;
```

**Output Parameters**

<AID>	(Optional) Access identifier from the <a href="#">"26.6 BITS" section on page 26-21</a> .
<AIDTYPE>	(Optional) Type of facility, link, or other addressable entity targeted by the message. The parameter type is MOD2B, which is the alarm type.
• 1GFC	1-Gigabit Fibre Channel payload
• 1GFICON	1-Gigabit fiber connectivity payload
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• 4GFC	4-Gigabit Fibre Channel payload
• 4GFICON	4-Gigabit fiber connectivity payload
• 5GIB	5Gbps InfiniBand (IB_5G) payload
• 8GFC	8-Gigabit Fibre Channel payload
• 40GIGE	40-Gigabit Ethernet
• BITS	BITS alarm
• CHGRP	Channel group
• CLNT	Client facility for MXP/TXP cards
• COM	Common alarm
• DS1	DS1 alarm
• DS3I	DS3i-N-12 alarm

• E100	E100 alarm
• E1000	E1000 alarm
• EC1	EC1 alarm
• ENV	ENV alarm
• EQPT	EQPT alarm
• FSTE	Fast Ethernet Port alarm
• G1000	G1000 alarm
• GIGE	Gigabit Ethernet port alarm
• HDLC	High-level data link control (HDLC) frame mode.
• ISC3PEER1G	1-Gigabit ISC3 Peer
• ISC3PEER2G	2-Gigabit ISC3 Peer
• ISC3PEER2R	1-Gigabit or 2-Gigabit ISC3 peer used in transparent (2R) mode
• ISCCOMPAT	1-Gigabit ISC1, ISC2, and ISC3 compatibility
• MSISC	MSISC
• OC3	OC3 alarm
• OC12	OC12 alarm
• OC48	OC48 alarm
• OC192	OC192 alarm
• OC768	OC 768 alarm
• OCH	Optical channel
• OMS	Optical Multiplex Section
• OTS	Optical Transport Section
• OTU3	Optical Transport Unit Level 3
• POS	POS port alarm
• REP	Resilient Ethernet Protocol
• STS1	STS1 alarm
• STS3C	STS3c alarm
• STS6C	STS6c alarm
• STS9C	STS9c alarm
• STS18C	STS18c alarm
• STS12C	STS12c alarm
• STS24C	STS24c alarm
• STS36C	STS36c alarm
• STS48C	STS48c alarm
• STS192C	STS192c alarm
• SYNCN	SYNCN alarm
• T1	T1 alarm
• T3	T3 alarm
• TCC	TCC alarm
• VT1	VT1 alarm
• VT2	VT2 alarm

<NTFCNCDE>	Two-letter notification code. The parameter type is NOTIF_CODE, which is the two-character notification code associated with an autonomous message.
• CL	The condition causing the alarm has cleared.
• CR	A critical alarm.
• MJ	A major alarm.
• MN	A minor alarm.
• NA	The condition is not alarmed.
• NR	The alarm is not reported.
<CONDTYPE>	Condition type for an alarm or a reported event. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, NA conditions, and NR conditions. See <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.
<SRVEFF>	The effect on service caused by the standing alarm or condition. The parameter type is SERV_EFF, which is the effect of the alarm on service.
• NSA	The condition is non-service affecting.
• SA	The condition is service affecting.
<LOCATION>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<DIRECTION>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
• BTH	Both transmit and receive directions
• RCV	Receive direction only
<DESC>	(Optional) A condition description. DESC is a string.

## 21.12 RTRV-ALM-ENV

(Cisco ONS 15454) The Retrieve Alarm Environment (RTRV-ALM-ENV) command retrieves the environmental alarms.

**Usage Guidelines** None

**Category** Environment

**Security** Retrieve

**Input Format**

```
RTRV-ALM-ENV:[<TID>]:<AID>:<CTAG>::[<NTFCNCDE>],[<ALMTYPE>];
```

**Input Example**

```
RTRV-ALM-ENV:CISCO:ENV-IN-1:123::MJ,OPENDR;
```

**Input Parameters**

<AID>	Access identifier from the “26.14 ENV” section on page 26-37. <b>Note</b> For RTRV-ALM-ENV, only ENV-IN-1-4 is a valid AID for ONS 15454. ENV-OUT-1,6 is not a valid AID for RTRV-ALM-ENV.
<NTFCNCDE>	Two-letter notification code. A null value is equivalent to ALL. The parameter type is NOTIFY_CODE, which is the two-character notification code associated with an autonomous message.
• CL	The condition causing the alarm has cleared.
• CR	A critical alarm.
• MJ	A major alarm.
• MN	A minor alarm.
• NA	The condition is not alarmed.
• NR	The alarm is not reported.
<ALMTYPE>	The alarm type for the environmental alarm. A null value is equivalent to ALL. The parameter type is ENV_ALM, which is the environmental alarm types.
• AIRCOMPR	Air compressor failure
• AIRCOND	Air conditioning failure
• AIRDRYR	Air dryer failure
• BATDSCHRG	Battery discharging
• BATTERY	Battery failure
• CLFAN	Cooling fan failure
• CPMAJOR	Centralized power major failure
• CPMINOR	Centralized power minor failure
• ENGINE	Engine failure
• ENGOPRG	Engine operating
• ENGTRANS	Standby engine transfer
• EXPLGS	Explosive gas
• FIRDETR	Fire detector failure
• FIRE	Fire
• FLOOD	Flood
• FUELLEAK	Fuel leak
• FUSE	Fuse failure
• GASALARM	Explosive gas, toxic gas, ventilation fail, or gas monitor fail
• HATCH	Controlled Environment Vault (CEV) hatch fail
• GEN	Generator failure
• HIAIR	High airflow

• HIHUM	High humidity
• HITEMP	High temperature
• HIWTR	High water
• INTRUDER	Intrusion
• LEVELCON	Level converter
• LVDADSL	Secondary ADSL low voltage disconnect
• LVDBYPAS	Low voltage disconnected bypass
• LWBATVG	Low battery voltage
• LWFUEL	Low fuel
• LWHUM	Low humidity
• LWPRES	Low cable pressure
• LWTEMP	Low temperature
• LWWTR	Low water
• MISC	Miscellaneous
• OPENDR	Open door
• POWER	Commercial power failure
• PUMP	Pump failure
• PWR-48	48 V power supply failure
• PWR-139	-139 V power converter
• PWR-190	-190 V power converter
• PWRMJ	Power supply major
• PWRMN	Power supply minor
• RECT	Rectifier failure
• RECTHI	Rectifier high voltage
• RECTLO	Rectifier low voltage
• RINGGENMJ	Ring generator major
• RINGGENMN	Ring generator minor
• RTACADSL	AC or AC/rectifier power fail ADSL equipment
• RTACCRIT	AC or AC/rectifier power fail DCL equipment critical site
• RTACPWR	AC or AC/rectifier power fail DCL equipment
• RTACPWRENG	Commercial AC fail, site equipped with standby engine
• RTBAYPWR	AC power loss distributed power RT bay
• RTRVENG	Retrieve standby engine, commercial AC restored
• SMOKE	Smoke
• TEMP	High-low temperature
• TOXICGAS	Toxic gas
• TREPEATER	T-repeater shelf
• VENTN	Ventilation system failure

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<AID>:<NTFCNCDE>,<ALMTYPE>,[<OCRDAT>],[<OCRTM>],[<DESC>]"
```

;

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
  "ENV-IN-1:MJ,OPENDR,08-01,14-25-59,\"OPEN DOOR\""
```

;

**Output Parameters**

<AID>	Access identifier from the <a href="#">“26.14 ENV” section on page 26-37</a> .
<NTFCNCDE>	Two-letter notification code. The parameter type is NOTIF_CODE, which is the two-character notification code associated with an autonomous message.
<ul style="list-style-type: none"> <li>• CL</li> <li>• CR</li> <li>• MJ</li> <li>• MN</li> <li>• NA</li> <li>• NR</li> </ul>	<ul style="list-style-type: none"> <li>The condition causing the alarm has cleared.</li> <li>A critical alarm.</li> <li>A major alarm.</li> <li>A minor alarm.</li> <li>The condition is not alarmed.</li> <li>The alarm is not reported.</li> </ul>
<CONDTYPE>	Condition type for an alarm or a reported event. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, NA conditions, and NR conditions. See <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.
<ALMTYPE>	The alarm type for the environmental alarm. A null value is equivalent to ALL. The parameter type is ENV_ALM, which is the environmental alarm types.
<ul style="list-style-type: none"> <li>• AIRCOMPR</li> <li>• AIRCOND</li> <li>• AIRDRYR</li> <li>• BATDSCHRG</li> <li>• BATTERY</li> <li>• CLFAN</li> <li>• CPMAJOR</li> <li>• CPMINOR</li> <li>• ENGINE</li> <li>• ENGOPRG</li> <li>• ENGTRANS</li> <li>• EXPLGS</li> <li>• FIRDETR</li> <li>• FIRE</li> <li>• FLOOD</li> <li>• FUELLEAK</li> <li>• FUSE</li> </ul>	<ul style="list-style-type: none"> <li>Air compressor failure</li> <li>Air conditioning failure</li> <li>Air dryer failure</li> <li>Battery discharging</li> <li>Battery failure</li> <li>Cooling fan failure</li> <li>Centralized power major failure</li> <li>Centralized power minor failure</li> <li>Engine failure</li> <li>Engine operating</li> <li>Standby engine transfer</li> <li>Explosive gas</li> <li>Fire detector failure</li> <li>Fire</li> <li>Flood</li> <li>Fuel leak</li> <li>Fuse failure</li> </ul>

• GASALARM	Explosive gas, toxic gas, ventilation fail, or gas monitor fail
• HATCH	CEV hatch fail
• GEN	Generator failure
• HIAIR	High airflow
• HIHUM	High humidity
• HITEMP	High temperature
• HIWTR	High water
• INTRUDER	Intrusion
• LEVELCON	Level converter
• LVDADSL	Secondary ADSL low voltage disconnect
• LVDBYPAS	Low voltage disconnected bypass
• LWBATVG	Low battery voltage
• LWFUEL	Low fuel
• LWHUM	Low humidity
• LWPRES	Low cable pressure
• LWTEMP	Low temperature
• LWWTR	Low water
• MISC	Miscellaneous
• OPENDR	Open door
• POWER	Commercial power failure
• PUMP	Pump failure
• PWR-48	48 V power supply failure
• PWR-139	-139 V power converter
• PWR-190	-190 V power converter
• PWRMJ	Power supply major
• PWRMN	Power supply minor
• RECT	Rectifier failure
• RECTHI	Rectifier high voltage
• RECTLO	Rectifier low voltage
• RINGGENMJ	Ringing generator major
• RINGGENMN	Ringing generator minor
• RTACADSL	AC or AC/rectifier power fail ADSL equipment
• RTACCRIT	AC or AC/rectifier power fail DCL equipment critical site
• RTACPWR	AC or AC/rectifier power fail DCL equipment
• RTACPWRENG	Commercial AC fail, site equipped with standby engine
• RTBAYPWR	AC power loss distributed power RT bay
• RTRVENG	Retrieve standby engine, commercial AC restored
• SMOKE	Smoke
• TEMP	High-low temperature
• TOXICGAS	Toxic gas
• TREPEATER	T-repeater shelf

• VENTN	Ventilation system failure
OCRDAT	(Optional) Date when the specific event or violation occurred, MM-DD.
OCRTM	(Optional) Time when the specific event or violation occurred, HH-MM-SS.
DESC	(Optional) A condition description. DESC is a string.

## 21.13 RTRV-ALM-EQPT

(Cisco ONS 15454) The Retrieve Alarm Equipment (RTRV-ALM-EQPT) command retrieves and sends the current status of alarm conditions associated with the equipment units. The alarm condition or severity to be retrieved is specified using the input parameters as a filter.

### Usage Guidelines

None

### Category

Equipment

### Security

Retrieve

### Input Format

RTRV-ALM-EQPT:[<TID>]:<AID>:<CTAG>::[<NTFCNCDE>],[<CONDTYPE>],[<SRVEFF>],[<LOCN>],[<DIRN>];

### Input Example

RTRV-ALM-EQPT:TWOROCK:SLOT-7:227::MJ,HITEMP,NSA;

### Input Parameters

<AID>	Access identifier from the <a href="#">“26.15 EQPT”</a> section on page 26-37.
<NTFCNCDE>	Two-letter notification code. A null value is equivalent to ALL. The parameter type is NOTIF_CODE, which is the two-character notification code associated with an autonomous message.
• CL	The condition causing the alarm has cleared.
• CR	A critical alarm.
• MJ	A major alarm.
• MN	A minor alarm.
• NA	The condition is not alarmed.
• NR	The alarm is not reported.

<CONDTYPE>	The condition type for an alarm or a reported event. A null value is equivalent to ALL. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, NA conditions, and NR conditions. See <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.
<SRVEFF>	The effect on service caused by the standing alarm or condition. The parameter type is SERV_EFF, which is the effect of the alarm on service. A null value is equivalent to ALL.
<ul style="list-style-type: none"> <li>• NSA</li> <li>• SA</li> </ul>	<p>The condition is non-service affecting.</p> <p>The condition is service affecting.</p>
<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
<ul style="list-style-type: none"> <li>• FEND</li> <li>• NEND</li> </ul>	<p>Action occurs on the far end of the facility.</p> <p>Action occurs on the near end of the facility.</p>
<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
<ul style="list-style-type: none"> <li>• BTH</li> <li>• RCV</li> </ul>	<p>Both transmit and receive directions</p> <p>Receive direction only</p>

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“[<AID>],[<AIDTYPE>]:<NTFCNCDE>,<CONDTYPE>,<SRVEFF>,
[<OCRDAT>],[<OCR TM>],[<LOCN>],[<DIRN>]:[<DESC>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“SLOT-7,EQPT:MJ,HITEMP,NSA,08-01,14-25-59,,:“HI TEMPERATURE”,”
;
```

**Output Parameters**

<AID>	(Optional) Access identifier from the <a href="#">“26.15 EQPT”</a> section on <a href="#">page 26-37</a> .
<AIDTYPE>	(Optional) Type of facility, link, or other addressable entity targeted by the message. The parameter type is MOD2B, which is the alarm type.
<ul style="list-style-type: none"> <li>• 1GFC</li> <li>• 1GFICON</li> <li>• 2GFC</li> <li>• 2GFICON</li> <li>• 4GFC</li> </ul>	<p>1-Gigabit Fibre Channel payload</p> <p>1-Gigabit fiber connectivity payload</p> <p>2-Gigabit Fibre Channel payload</p> <p>2-Gigabit fiber connectivity payload</p> <p>4-Gigabit Fibre Channel payload</p>

• 4GFICON	4-Gigabit fiber connectivity payload
• 40GIGE	40-Gigabit Ethernet
• 5GIB	5Gbps InfiniBand (IB_5G) payload
• 8GFC	8-Gigabit Fibre Channel payload
• BITS	BITS alarm
• CHGRP	Channel group
• CLNT	Client facility for MXP/TXP cards
• COM	Common alarm
• DS1	DS1 alarm
• DS3I	DS3I alarm
• DVBASI	Digital Video Broadband Asynchronous Serial Interface (DVBASI) payload
• E100	E100 alarm
• E1000	E1000 alarm
• EC1	EC1 alarm
• ENV	ENV alarm
• EQPT	EQPT alarm
• FSTE	Fast Ethernet Port alarm
• G1000	G1000 alarm
• GIGE	Gigabit Ethernet port alarm
• HDLC	High-level data link control (HDLC) frame mode.
• ISC1	InterSystem Channel, a protocol defined by IBM (ISC1) payload
• ISC3PEER1G	1-Gigabit ISC3 Peer
• ISC3PEER2G	2-Gigabit ISC3 Peer
• ISC3PEER2R	1-Gigabit or 2-Gigabit ISC3 peer used in transparent (2R) mode
• ISCCOMPAT	1-Gigabit ISC1, ISC2, and ISC3 compatibility
• MSISC	MSISC
• OC3	OC3 alarm
• OC12	OC12 alarm
• OC48	OC48 alarm
• OC192	OC192 alarm
• OC768	OC768 alarm
• OCH	Optical channel
• OMS	Optical Multiplex Section
• OTS	Optical Transport Section
• OTU3	Optical Transport Unit Level 3
• POS	POS port alarm
• REP	Resilient Ethernet Protocol
• STS1	STS1 alarm
• STS3C	STS3c alarm
• STS6C	STS6c alarm
• STS9C	STS9c alarm

• STS18C	STS18c alarm
• STS12C	STS12c alarm
• STS24C	STS24c alarm
• STS36C	STS36c alarm
• STS48C	STS48c alarm
• STS192C	STS192c alarm
• SYNCN	SYNCN alarm
• T1	T1 alarm
• T3	T3 alarm
• TCC	TCC alarm
• VT1	VT1 alarm
• VT2	VT2 alarm
<NTFCNCDE>	Two-letter notification code. The parameter type is NOTIF_CODE, which is the two-character notification code associated with an autonomous message.
• CL	The condition causing the alarm has cleared.
• CR	A critical alarm.
• MJ	A major alarm.
• MN	A minor alarm.
• NA	The condition is not alarmed.
• NR	The alarm is not reported.
<CONDTYPE>	Condition type for an alarm or a reported event. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, NA conditions, and NR conditions. See <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.
<SRVEFF>	The effect on service caused by the standing alarm or condition. The parameter type is SERV_EFF, which is the effect of the alarm on service.
• NSA	The condition is non-service affecting.
• SA	The condition is service affecting.
<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
• BTH	Both transmit and receive directions
• RCV	Receive direction only
<OCRDAT>	(Optional) Date when the specific event or violation occurred, MM-DD.

<OCRTM>	(Optional) Time when the specific event or violation occurred, HH-MM-SS.
<DESC>	(Optional) A condition description. DESC is a string.

## 21.14 RTRV-ALM-SYCN

(Cisco ONS 15454) The Retrieve Alarm Synchronization (RTRV-ALM-SYCN) command retrieves and sends the current status of alarm conditions associated with a synchronization facility. The alarm condition or severity to be retrieved can be specified by using the input parameters as a filter.

### Usage Guidelines

None

### Category

Synchronization

### Security

Retrieve

### Input Format

RTRV-ALM-SYCN:[<TID>]:<AID>:<CTAG>::[<NTFCNCDE>],[<CONDTYPE>],[<SRVEFF>],[<LOCN>],[<DIRN>];

### Input Example

RTRV-ALM-SYCN:FULTON:SYNC-NE:226::CR,FAILTOSW,SA;

### Input Parameters

<AID>	Access identifier from the <a href="#">“26.30 SYNC_REF”</a> section on page 26-58.
<NTFCNCDE>	Two-letter notification code. A null value is equivalent to ALL. The parameter type is NOTIF_CODE, which is the two-character notification code associated with an autonomous message.
<ul style="list-style-type: none"> <li>• CL</li> <li>• CR</li> <li>• MJ</li> <li>• MN</li> <li>• NA</li> <li>• NR</li> </ul>	<p>The condition causing the alarm has cleared.</p> <p>A critical alarm.</p> <p>A major alarm.</p> <p>A minor alarm.</p> <p>The condition is not alarmed.</p> <p>The alarm is not reported.</p>
<CONDTYPE>	The condition type for an alarm or a reported event. A null value is equivalent to ALL. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, NA conditions, and NR conditions. See <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.

<SRVEFF>	The effect on service caused by the standing alarm or condition. The parameter type is SERV_EFF, which is the effect of the alarm on service. A null value is equivalent to ALL.
• NSA	The condition is non-service affecting.
• SA	The condition is service affecting.
<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
• BTH	Both transmit and receive directions
• RCV	Receive direction only

**Output Format**

```

SID DATE TIME
M CTAG COMPLD
"<AID>,[<AIDTYPE>]:<NTFCNCDE>,<CONDTYPE>,<SRVEFF>,
[<OCRDAT>],[<OCRTM>],[<LOCN>],[<DIRN>]:[<DESC>]"
;

```

**Output Example**

```

TID-000 1998-06-20 14:30:00
M 001 COMPLD
"SYN-NE,SYCN:CR,FAILTOSW,SA,08-01,
14-25-59,;\^"FAILURE TO SWITCH TO PROTECTION\;"
;

```

**Output Parameters**

<AID>	Access identifier from the <a href="#">"26.28 SYN" section on page 26-56</a> .
<AIDTYPE>	(Optional) Type of facility, link or other addressable entity targeted by the message. The parameter type is MOD2B, which is the alarm type.
• 1GFC	1-Gigabit Fibre Channel payload
• 1GFICON	1-Gigabit fiber connectivity payload
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• 4GFC	4-Gigabit Fibre Channel payload
• 4GFICON	4-Gigabit fiber connectivity payload
• 40GIGE	40-Gigabit Ethernet
• 5GIB	5Gbps InfiniBand (IB_5G) payload
• 8GFC	8-Gigabit Fibre Channel payload
• BITS	BITS alarm
• CHGRP	Channel group

• CLNT	Client facility for MXP/TXP cards
• COM	Common alarm
• DS1	DS1 alarm
• DS3I	DS3I alarm
• DVBASI	Digital Video Broadband Asynchronous Serial Interface (DVBASI) payload
• E100	E100 alarm
• E1000	E1000 alarm
• EC1	EC1 alarm
• ENV	ENV alarm
• EQPT	EQPT alarm
• FSTE	Fast Ethernet Port alarm
• G1000	G1000 alarm
• GIGE	Gigabit Ethernet port alarm
• HDLC	High-level data link control (HDLC) frame mode.
• ISC1	InterSystem Channel, a protocol defined by IBM (ISC1) payload
• ISC3PEER1G	1-Gigabit ISC3 Peer
• ISC3PEER2G	2-Gigabit ISC3 Peer
• ISC3PEER2R	1-Gigabit or 2-Gigabit ISC3 peer used in transparent (2R) mode
• ISCCOMPAT	1-Gigabit ISC1, ISC2, and ISC3 compatibility
• MSISC	MSISC
• OC3	OC3 alarm
• OC12	OC12 alarm
• OC48	OC48 alarm
• OC192	OC192 alarm
• OC768	OC768 alarm
• OCH	Optical channel
• OMS	Optical Multiplex Section
• OTS	Optical Transport Section
• OTU3	Optical Transport Unit Level 3
• POS	POS port alarm
• REP	Resilient Ethernet Protocol
• STS1	STS1 alarm
• STS3C	STS3c alarm
• STS6C	STS6c alarm
• STS9C	STS9c alarm
• STS18C	STS18c alarm
• STS12C	STS12c alarm
• STS24C	STS24c alarm
• STS36C	STS36c alarm
• STS48C	STS48c alarm
• STS192C	STS192c alarm

• SYNCN	SYCN alarm
• T1	T1 alarm
• T3	T3 alarm
• TCC	TCC alarm
• VT1	VT1 alarm
• VT2	VT2 alarm
<NTFCNCDE>	Two-letter notification code. The parameter type is NOTIF_CODE, which is the two-character notification code associated with an autonomous message.
• CL	The condition causing the alarm has cleared.
• CR	A critical alarm.
• MJ	A major alarm.
• MN	A minor alarm.
• NA	The condition is not alarmed.
• NR	The alarm is not reported.
<CONDTYPE>	Condition type for an alarm or a reported event. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, NA conditions, and NR conditions. See <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.
<SRVEFF>	The effect on service caused by the standing alarm or condition. The parameter type is SERV_EFF, which is the effect of the alarm on service.
• NSA	The condition is non-service affecting.
• SA	The condition is service affecting.
<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
• BTH	Both transmit and receive directions
• RCV	Receive direction only
<OCRDAT>	(Optional) Date when the specific event or violation occurred, MM-DD.
<OCRTM>	(Optional) Time when the specific event or violation occurred, HH-MM-SS.
<DESC>	(Optional) A condition description. DESC is a string.

## 21.15 RTRV-ALMTH-<MOD2>

(Cisco ONS 15454) The Retrieve Alarm Threshold for 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 5GIB, 8GFC, CLNT, D1VIDEO, DS1, DV6000, DVBA5I, E1, E3, E4, EC1, ESCON, ETRCLO, ETH, FSTE, G1000, GFPOS, GIGE, HDTV, ISC1, ILK, ISCCOMPAT, ISC3PEER2R, ISC3PEER1G, ISC3PEER2G, OC12, OC192, OC3, OC48, OC768, OCH, OMS, OTS, OTU3, POS, STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS6C, STS9C, T1, T3, VC12, VC3, VT1, or VT2 (RTRV-ALMTH-<MOD2>) command retrieves the alarm threshold values. The only applicable MOD2 values are OC3, OC12, OC48, OC192, OCH, OMS, and OTS.

### Usage Guidelines

None

### Category

Fault

### Security

Retrieve

### Input Format

RTRV-ALMTH-&lt;MOD2&gt;:[&lt;TID&gt;]:&lt;AID&gt;:&lt;CTAG&gt;::[&lt;CONDTYPE&gt;][,,:];

### Input Example

RTRV-ALMTH-{MOD2}::CHAN-2-2:1::OPT-HIGH;

### Input Parameters

<AID>	Access identifier from the “26.1 ALL” section on page 26-1.
<CONDTYPE>	Alarm threshold. A null value is equivalent to ALL. The parameter type is ALM_THR, which is the alarm threshold list for MXP_2.5G_10G, TXP_MR_10G, OSCM, OSC-CSM, OPT-PRE, OPT-BST, 4MD-xx.x, 32MUX-O, 32DMX-O, AD-1C-xx.x, AD-2C-xx.x, AD-4C-xx.x, AD-1B-xx.x, and AD-4B-xx.x cards.
• ADD-HDEG	ADD Power - High Degrade
• ADD-HFAIL	ADD Power - High Failure
• ADD-LDEG	ADD Power - Low Degrade
• ADD-LFAIL	ADD Power - Low Failure
• BATV-LOW	Battery Voltage—Low
• GAIN-HDEG	Gain not reached—High Degrade Threshold
• GAIN-HFAIL	Gain not reached—High Failure Threshold
• GAIN-LDEG	Gain not reached—Low Degrade Threshold
• GAIN-LFAIL	Gain not reached—Low Failure Threshold
• LBCL-HIGH	Laser Bias Current in microA as one tenth of a percent. High Warning Threshold, Low Warning Threshold. Measured value (0.0 percent, 100.0 percent).
• OPR-HIGH	Receive power in one tenth of a microwatt. Measured value (–0.0 dBm, +30.0 dBm).

• OPR-LOW	Receive power in one tenth of a microwatt. Measured value (–0.0 dBm, +30.0 dBm).
• OPT-HIGH	Transmit power in one tenth of a microwatt. Measured value (–40.0 dBm, +30.0 dBm).
• OPT-LOW	Transmit power in one tenth of a microwatt. Measured value (–0.0 dBm, +30.0 dBm).
• OPWR-HDEG	Optical Power—High Degrade Threshold
• OPWR-HFAIL	Optical Power—High Failure Threshold
• OPWR-LDEG	Optical Power—Low Degrade Threshold
• OPWR-LFAIL	Optical Power—Low Failure Threshold
• VOA-HDEG	VOA Attenuation—High Degrade Threshold
• VOA-HFAIL	VOA Attenuation—High Failure Threshold
• VOA-LDEG	VOA Attenuation—Low Degrade Threshold
• VOA-LFAIL	VOA Attenuation—Low Failure Threshold

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<AID>,<MOD>:<CONDTYPE>,,,<THLEVEL>"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"CHAN-2-2,OCH:OPT-HIGH,,,20"
;
```

**Output Parameters**

<AID>	Access identifier from the <a href="#">“26.1 ALL” section on page 26-1</a> .
<MOD>	AID type. The parameter type is MOD2, which is the line/path modifier.
• 10GFC	10-Gigabit Fibre Channel payload
• 10GFICON	10-Gigabit fiber connectivity payload
• 1GFC	1-Gigabit Fibre Channel payload
• 1GFICON	1-Gigabit fiber connectivity payload
• 1GISC3	1-Gigabit ISC3 compatible
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• 2GISC3	2-Gigabit ISC3 compatible
• 4GFC	4-Gigabit Fibre Channel payload
• 4GFICON	4-Gigabit fiber connectivity payload
• 40GIGE	40-Gigabit Ethernet
• 5GIB	5Gbps InfiniBand (IB_5G) payload
• 8GFC	8-Gigabit Fibre Channel payload

• D1VIDEO	D1 video
• DS1	DS1 line of a DS3XM card
• DS3I	DS3I line
• DV6000	DV6000
• DVBASI	Digital Video Broadband Asynchronous Serial Interface (DVBASI) payload
• EC1	EC1 facility
• ESCON	ESCON
• ETRCLO	ETR_CLO
• FSTE	FSTE facility
• G1000	G1000 facility
• GFPOS	GFP over POS. Virtual ports partitioned using GFP's multiplexing capability.
• GIGE	Gigabit Ethernet
• HDTV	HDTV
• ISC1	InterSystem Channel, a protocol defined by IBM (ISC1) payload
• ISC3PEER1G	1-Gigabit ISC3 Peer
• ISC3PEER2G	2-Gigabit ISC3 Peer
• ISC3PEER2R	1-Gigabit or 2-Gigabit ISC3 peer used in transparent (2R) mode
• ISCCOMPAT	1-Gigabit ISC1, ISC2, and ISC3 compatibility
• OC3	OC-3 facility
• OC12	OC-12 facility
• OC48	OC-48 facility
• OC192	OC-192 facility
• OC768	OC-768 facility
• OCH	Optical Channel
• OCHCC	OCH client connection
• OCHNC	OCH network connection
• OCHTERM	OCH termination
• OMS	Optical Multiplex Section
• OTS	Optical Transport Section
• OTU3	Optical Transport Unit Level 3
• POS	POS port
• STS1	STS1 path
• STS3C	STS3c path
• STS6C	STS6c path
• STS9C	STS9c path
• STS18C	STS18c path
• STS12C	STS12c path
• STS24C	STS24c path
• STS36C	STS36c path
• STS48C	STS48c path

• STS192C	STS192c path
• T1	T1/DS1 facility/line
• T3	T1/DS1 facility/line
• VT1	VT1 path
• VT2	VT2 path
<CONDTYPE>	Condition type for an alarm or a reported event. The parameter type is ALM_THR, which is the alarm threshold list for MXP_2.5G_10G, TXP_MR_10G, OSCM, OSC-CSM, OPT-PRE, OPT-BST, 4MD-xx.x, 32MUX-O, 32DMX-O, AD-1C-xx.x, AD-2C-xx.x, AD-4C-xx.x, AD-1B-xx.x, and AD-4B-xx.x cards.
• BATV-EHIGH	Battery Voltage—Extremely High
• BATV-ELow	Battery Voltage—Extremely Low
• BATV-HIGH	Battery Voltage—High
• BATV-LOW	Battery Voltage—Low
• GAIN-HDEG	Gain not reached—High Degrade Threshold
• GAIN-HFAIL	Gain not reached—High Failure Threshold
• GAIN-LDEG	Gain not reached—Low Degrade Threshold
• GAIN-LFAIL	Gain not reached—Low Failure Threshold
• LBCL-HIGH	Laser Bias Current in microA as one tenth of a percent. High Warning Threshold, Low Warning Threshold. Measured value (0.0 percent, 100.0 percent).
• OPR-HIGH	Receive power in one tenth of a microwatt. Measured value (–0.0 dBm, +30.0 dBm).
• OPR-LOW	Receive power in one tenth of a microwatt. Measured value (–0.0 dBm, +30.0 dBm).
• OPT-HIGH	Transmit power in one tenth of a microwatt. Measured value (–0.0 dBm, +30.0 dBm).
• OPT-LOW	Transmit power in one tenth of a microwatt. Measured value (–0.0 dBm, +30.0 dBm).
• OPWR-HDEG	Optical Power—High Degrade Threshold
• OPWR-HFAIL	Optical Power—High Failure Threshold
• OPWR-LDEG	Optical Power—Low Degrade Threshold
• OPWR-LFAIL	Optical Power—Low Failure Threshold
• VOA-HDEG	VOA Attenuation—High Degrade Threshold
• VOA-HFAIL	VOA Attenuation—High Failure Threshold
• VOA-LDEG	VOA Attenuation—Low Degrade Threshold
• VOA-LFAIL	VOA Attenuation—Low Failure Threshold
<THLEVEL>	Threshold level. THLEVEL is a float.

## 21.16 RTRV-ALMTH-EQPT

(Cisco ONS 15454) The Retrieve Alarm Threshold Equipment (RTRV-ALMTH-EQPT) command retrieves the alarm thresholds for the power level monitoring on an NE.

**Usage Guidelines** None

**Category** Equipment

**Security** Retrieve

**Input Format** RTRV-ALMTH-EQPT:[<TID>]:[<AID>]:<CTAG>::[<CONDTYPE>][,,:];

**Input Example** RTRV-ALMTH-EQPT:::1::BATV-HIGH;  
RTRV-ALMTH-EQPT::SHELF-2:1::BATV-HIGH;

<b>Input Parameters</b>	<AID>	The node or shelf access identifier from the <a href="#">“26.26 SHELF” section on page 26-52</a> . If omitted it addresses the node or first shelf of the node.
	<CONDTYPE>	Must not be null. The parameter type is ALM_THR, which is the alarm threshold list for MXP_2.5G_10G, TXP_MR_10G, OSCM, OSC-CSM, OPT-PRE, OPT-BST, 4MD-xx.x, 32MUX-O, 32DMX-O, AD-1C-xx.x, AD-2C-xx.x, AD-4C-xx.x, AD-1B-xx.x, and AD-4B-xx.x cards.
	• BATV-EHIGH	Battery Voltage—Extremely High
	• BATV-ELOW	Battery Voltage—Extremely Low
	• BATV-HIGH	Battery Voltage—High
	• BATV-LOW	Battery Voltage—Low
	• GAIN-HDEG	Gain not reached—High Degrade Threshold
	• GAIN-HFAIL	Gain not reached—High Failure Threshold
	• GAIN-LDEG	Gain not reached—Low Degrade Threshold
	• GAIN-LFAIL	Gain not reached—Low Failure Threshold
	• LBCL-HIGH	Laser Bias Current in microA as one tenth of a percent. High Warning Threshold, Low Warning Threshold Measured value (0.0 percent, 100.0 percent)
	• OPR-HIGH	Receive power in one tenth of a microwatt. Measured value (–0.0 dBm, +30.0 dBm).
	• OPR-LOW	Receive power in one tenth of a microwatt. Measured value (–0.0 dBm, +30.0 dBm).
	• OPT-HIGH	Transmit power in one tenth of a microwatt. Measured value (–0.0 dBm, +30.0 dBm).
	• OPT-LOW	Transmit power in one tenth of a microwatt. Measured value (–0.0 dBm, +30.0 dBm).
	• OPWR-HDEG	Optical Power—High Degrade Threshold
	• OPWR-HFAIL	Optical Power—High Failure Threshold

• OPWR-LDEG	Optical Power—Low Degrade Threshold
• OPWR-LFAIL	Optical Power—Low Failure Threshold
• VOA-HDEG	VOA Attenuation—High Degrade Threshold
• VOA-HFAIL	VOA Attenuation—High Failure Threshold
• VOA-LDEG	VOA Attenuation—Low Degrade Threshold
• VOA-LFAIL	VOA Attenuation—Low Failure Threshold

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“[<AID>],<MOD2B>:<CONDTYPE>,,,<DNFIELD>”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“SHELF-1,EQPT:BATV-HIGH,,,-52.0,”
;

TID-000 1998-06-20 14:30:00
M 001 COMPLD
“,EQPT:BATV-HIGH,,,-52.0,””
;
```

**Output Parameters**

<AID>	The node or shelf access identifier from the <a href="#">“26.26 SHELF”</a> section on page 26-52. If omitted, it addresses the node or the first shelf of the node.
<MOD2B>	Alarm type. The parameter type is MOD2B, which is the alarm type.
• 1GFC	1-Gigabit Fibre Channel payload
• 1GFICON	1-Gigabit fiber connectivity payload
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• BITS	BITS alarm
• CLNT	Client facility for MXP/TXP cards
• COM	Common alarm
• DS1	DS1 alarm
• DS3I	DS3I alarm
• E100	E100 alarm
• E1000	E1000 alarm
• EC1	EC1 alarm
• ENV	ENV alarm
• EQPT	EQPT alarm
• FSTE	Fast Ethernet Port alarm
• G1000	G1000 alarm
• GIGE	Gigabit Ethernet port alarm

• ISC3PEER1G	1-Gigabit ISC3 Peer
• ISC3PEER2G	2-Gigabit ISC3 Peer
• ISC3PEER2R	1-Gigabit or 2-Gigabit ISC3 peer used in transparent (2R) mode
• ISCCOMPAT	1-Gigabit ISC1, ISC2, and ISC3 compatibility
• OC3	OC3 alarm
• OC12	OC12 alarm
• OC48	OC48 alarm
• OC192	OC192 alarm
• OCH	Optical channel
• OMS	Optical Multiplex Section
• OTS	Optical Transport Section
• POS	POS port alarm
• STS1	STS1 alarm
• STS3C	STS3c alarm
• STS6C	STS6c alarm
• STS9C	STS9c alarm
• STS18C	STS18c alarm
• STS12C	STS12c alarm
• STS24C	STS24c alarm
• STS36C	STS36c alarm
• STS48C	STS48c alarm
• STS192C	STS192c alarm
• SYNCN	SYNCN alarm
• T1	T1 alarm
• T3	T3 alarm
• TCC	TCC alarm
• VT1	VT1 alarm
• VT2	VT2 alarm
<CONDTYPE>	Parameter type is ALM_THR, which is the alarm threshold list for MXP_2.5G_10G, TXP_MR_10G, OSCM, OSC-CSM, OPT-PRE, OPT-BST, 4MD-xx.x, 32MUX-O, 32DMX-O, AD-1C-xx.x, AD-2C-xx.x, AD-4C-xx.x, AD-1B-xx.x, and AD-4B-xx.x cards.
• BATV-EHIGH	Battery Voltage—Extremely High
• BATV-ELOW	Battery Voltage—Extremely Low
• BATV-HIGH	Battery Voltage—High
• BATV-LOW	Battery Voltage—Low
• GAIN-HDEG	Gain not reached—High Degrade Threshold
• GAIN-HFAIL	Gain not reached—High Failure Threshold
• GAIN-LDEG	Gain not reached—Low Degrade Threshold
• GAIN-LFAIL	Gain not reached—Low Failure Threshold

• LBCL-HIGH	Laser Bias Current in microA as one tenth of a percent. High Warning Threshold, Low Warning Threshold. Measured value (0.0 percent, 100.0 percent).
• OPR-HIGH	Receive power in one tenth of a microwatt. Measured value (–0.0 dBm, +30.0 dBm).
• OPR-LOW	Receive power in one tenth of a microwatt. Measured value (–0.0 dBm, +30.0 dBm).
• OPT-HIGH	Transmit power in one tenth of a microwatt. Measured value (–0.0 dBm, +30.0 dBm).
• OPT-LOW	Transmit power in one tenth of a microwatt. Measured value (–0.0 dBm, +30.0 dBm).
• OPWR-HDEG	Optical Power—High Degrade Threshold
• OPWR-HFAIL	Optical Power—High Failure Threshold
• OPWR-LDEG	Optical Power—Low Degrade Threshold
• OPWR-LFAIL	Optical Power—Low Failure Threshold
• VOA-HDEG	VOA Attenuation—High Degrade Threshold
• VOA-HFAIL	VOA Attenuation—High Failure Threshold
• VOA-LDEG	VOA Attenuation—Low Degrade Threshold
• VOA-LFAIL	VOA Attenuation—Low Failure Threshold
<DNFIELD>	DNFIELD is a float.

## 21.17 RTRV-ALS

(Cisco ONS 15454) The Retrieve Automatic Laser Shutoff (RTRV-ALS) command retrieves the ALS attributes of an OC-N facility and all the facilities that support the ALS feature. This command is used to retrieve the ALS parameter of the OC48 and OC192 ports on the MXP\_2.5G\_10E, TXP\_MR\_10E, TXP\_MR\_2.5G, TXPP\_MR\_2.5G, MXP\_2.5G\_10G, and TXP\_MR\_10G cards.

**Usage Guidelines** None

**Category** Ports

**Security** Retrieve

**Input Format** RTRV-ALS:[<TID>]:<AID>:<CTAG>[:[:]];

**Input Example** RTRV-ALS:PENNGROVE:FAC-1-1:1

<b>Input Parameters</b>	<AID>	Access identifier from the <a href="#">“26.2 AidUnionId”</a> section on page 26-13.
-------------------------	-------	---

<b>Output Format</b>	<pre> SID DATE TIME M CTAG COMPLD “&lt;AID&gt;,&lt;AIDTYPE&gt;::[ALSMODE=&lt;ALSMODE&gt;],[ALSRCINT=&lt;ALSRCINT&gt;], [ALSRCPW=&lt;ALSRCPW&gt;],[LSRSTAT=&lt;LSRSTAT&gt;],[OSRI=&lt;OSRI&gt;]” ; </pre>	
----------------------	--	--

<b>Output Example</b>	<pre> TID-000 1998-06-20 14:30:00 M 001 COMPLD “FAC-6-1,OC192::ALSMODE=DISABLED,ALSRCINT=100,ALSRCPW=2.0,LSRSTAT=ON:” ; </pre>	
-----------------------	--	--

<b>Output Parameters</b>	<AID>	Access identifier from the <a href="#">“26.2 AidUnionId”</a> section on page 26-13.
	<AIDTYPE>	Type of access identifier. The parameter type is MOD2, which is the line/path modifier.
	• 10GFC	10-Gigabit Fibre Channel payload
	• 10GFICON	10-Gigabit fiber connectivity payload
	• 1GFC	1-Gigabit Fibre Channel payload
	• 1GFICON	1-Gigabit fiber connectivity payload
	• 1GISC3	1-Gigabit ISC3 compatible
	• 2GFC	2-Gigabit Fibre Channel payload
	• 2GFICON	2-Gigabit fiber connectivity payload
	• 2GISC3	2-Gigabit ISC3 compatible
	• 4GFC	4-Gigabit Fibre Channel payload
	• 4GFICON	4-Gigabit fiber connectivity payload
	• 40GIGE	40-Gigabit Ethernet
	• 5GIB	5Gbps InfiniBand (IB_5G) payload
	• 8GFC	8-Gigabit Fibre Channel payload
	• D1VIDEO	D1 video
	• DS1	DS1 line of a DS3XM card
	• DS3I	DS3I line
	• DV6000	DV6000
	• DVBASI	Digital Video Broadband Asynchronous Serial Interface (DVBASI) payload
	• EC1	EC1 facility
	• ESCON	ESCON
	• ETRCLO	ETR_CLO
	• FSTE	FSTE facility
	• G1000	G1000 facility

• GFPOS	GFP over POS. Virtual ports partitioned using GFP's multiplexing capability.
• GIGE	Gigabit Ethernet
• HDTV	HDTV
• ISC1	InterSystem Channel, a protocol defined by IBM (ISC1) payload
• ISC3PEER1G	1-Gigabit ISC3 Peer
• ISC3PEER2G	2-Gigabit ISC3 Peer
• ISC3PEER2R	1-Gigabit or 2-Gigabit ISC3 peer used in transparent (2R) mode
• ISCCOMPAT	1-Gigabit ISC1, ISC2, and ISC3 compatibility
• OC3	OC-3 facility
• OC12	OC-12 facility
• OC48	OC-48 facility
• OC192	OC-192 facility
• OC768	OC768 facility
• OCH	Optical Channel
• OCHCC	OCH client connection
• OCHNC	OCH network connection
• OCHTERM	OCH termination
• OMS	Optical Multiplex Section
• OTS	Optical Transport Section
• OTU3	Optical Transport Unit Level 3
• POS	POS port
• STS1	STS1 path
• STS3C	STS3c path
• STS6C	STS6c path
• STS9C	STS9c path
• STS18C	STS18c path
• STS12C	STS12c path
• STS24C	STS24c path
• STS36C	STS36c path
• STS48C	STS48c path
• STS192C	STS192c path
• T1	T1/DS1 facility/line
• T3	T1/DS1 facility/line
• VT1	VT1 path
• VT2	VT2 path
<ALSMODE>	ALS is enabled or disabled. The parameter type is ALS_MODE, which is the working mode for automatic laser shutdown.
• AUTO	Automatic
• DISABLED	Disabled
• MAN	Manual

• MAN-RESTART	Manual restart for test
<ALSRCINT>	(Optional) ALS interval. The range is 60 to 300 seconds. ALSRCINT is an integer.
<ALSRCPW>	(Optional) ALS recovery pulse width. The range is 2.0 to 100.00 seconds, in increments of 100 ms. ALSRCPW is a float.
<LSRSTAT>	(Optional) Status of the laser. The parameter type is LASER_STATUS (laser status).
• APR	Laser is switched on but is working automatic power reduction.
• OFF	Laser is switched off.
• ON	Laser is switched on.
<OSRI>	(Optional) OSRI enabled or disabled. Present only on a port where the safety is supported. Defaults to off. The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.

## 21.18 RTRV-APC

(Cisco ONS 15454) The Operate Amplifier Power Control (RTRV-APC) command retrieves the APC application attributes.

### Usage Guidelines

None

### Category

DWDM

### Security

Maintenance

### Input Format

RTRV-APC:[<TID>]::<CTAG>;

### Input Example

RTRV-APC:PENNGROVE:WDMSIDE-A:114;

### Input Parameters

None that require description

### Output Format

```
SID DATE TIME
M CTAG COMPLD
“::[APCENABLE=<APCENABLE>],[APCSTATE=<APCSTATE>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“::APCENABLE=Y,APCSTATE=WORKING”
;
```

Output Parameters		
<WDMSIDE>	The AID is used to access the WDM side of an MSTP node.	
	<ul style="list-style-type: none"> <li>WDMSIDE-{UNKNOWN,A, B,C,D,E,F,G,H}</li> </ul>	MSTP side identifier
<APCENABLE>	(Optional) Enable or disable the APC application. The parameter type is ON_OFF (disable or enable an attribute).	
	<ul style="list-style-type: none"> <li>N</li> <li>Y</li> </ul>	Disable an attribute. Enable an attribute.
<APCSTATE>	(Optional) Indicates the status of the APC application. The parameter type is APC_STATE (APC status).	
	<ul style="list-style-type: none"> <li>DISABLE</li> <li>FORCED-DISABLE</li> <li>WORKING</li> <li>PASSIVE</li> </ul>	The APC is disabled by the user and is not working. The APC has been internally disabled by the node and is not working. The APC is enabled by the user and is working. The APC is in the passive state.

## 21.19 RTRV-ATTR-CONT

(Cisco ONS 15454) The Retrieve Attribute Control (RTRV-ATTR-CONT) command retrieves and sends the attributes associated with an external control. These attributes are used when an external control is operated or released. To set these attributes, use the SET-ATTR-CONT command.

**Usage Guidelines** None

**Category** Environment

**Security** Retrieve

**Input Format** RTRV-ATTR-CONT:[<TID>]:<AID>:<CTAG>[:<CONTTYPE>];

**Input Example** RTRV-ATTR-CONT:CISCO:ENV-OUT-2:123::AIRCOND;

<b>Input Parameters</b>	<AID>	Access identifier from the “26.14 ENV” section on page 26-37. Identifies the external control for which attributes are being set.
	<CONTTYPE>	Environmental control type. A null value is equivalent to ALL. The parameter type is CONTTYPE, which is the environmental control type.
	• AIRCOND	Air conditioning
	• ENGINE	Engine
	• FAN	Fan
	• GEN	Generator
	• HEAT	Heat
	• LIGHT	Light
	• MISC	Miscellaneous
	• SPKLR	Sprinkler

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<AID>:[<CONTTYPE>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“ENV-OUT-2:AIRCOND”
;
```

<b>Output Parameters</b>	<AID>	Access identifier from the “26.14 ENV” section on page 26-37. Identifies the external control for which attributes are being set.
	<CONTTYPE>	Environmental control type. A null value is equivalent to ALL. The parameter type is CONTTYPE, which is the environmental control type.
	• AIRCOND	Air conditioning
	• ENGINE	Engine
	• FAN	Fan
	• GEN	Generator
	• HEAT	Heat
	• LIGHT	Light
	• MISC	Miscellaneous
	• SPKLR	Sprinkler

## 21.20 RTRV-ATTR-ENV

(Cisco ONS 15454) The Retrieve Attribute Environment (RTRV-ATTR-ENV) command retrieves the attributes associated with an environmental alarm.

**Usage Guidelines** None

**Category** Environment

**Security** Retrieve

**Input Format** RTRV-ATTR-ENV:[<TID>]:<AID>:<CTAG>::[<NTFCNCDE>],[<ALMTYPE>];

**Input Example** RTRV-ATTR-ENV:CISCO:ENV-IN-1:123::MJ,OPENDR;

Input Parameters	
<AID>	Access identifier from the “26.14 ENV” section on page 26-37.
<NTFCNCDE>	Two-letter notification code. The parameter type is NOTIF_CODE, which is the two-character notification code associated with an autonomous message.
• CL	The condition causing the alarm has cleared.
• CR	A critical alarm.
• MJ	A major alarm.
• MN	A minor alarm.
• NA	The condition is not alarmed.
• NR	The alarm is not reported.
<ALMTYPE>	The alarm type for the environmental alarm. A null value is equivalent to ALL. The parameter type is ENV_ALM, which is the environmental alarm type.
• AIRCOMPR	Air compressor failure
• AIRCOND	Air conditioning failure
• AIRDRYR	Air dryer failure
• BATDSCHRG	Battery discharging
• BATTERY	Battery failure
• CLFAN	Cooling fan failure
• CPMAJOR	Centralized power major failure
• CPMINOR	Centralized power minor failure
• ENGINE	Engine failure
• ENGOPRG	Engine operating
• ENGTRANS	Standby engine transfer
• EXPLGS	Explosive gas
• FIRDETR	Fire detector failure
• FIRE	Fire
• FLOOD	Flood

• FUELLEAK	Fuel leak
• FUSE	Fuse failure
• GASALARM	Explosive gas, toxic gas, ventilation fail, or gas monitor fail
• HATCH	CEV hatch fail
• GEN	Generator failure
• HIAIR	High airflow
• HIHUM	High humidity
• HITEMP	High temperature
• HIWTR	High water
• INTRUDER	Intrusion
• LEVELCON	Level converter
• LVDADSL	Secondary ADSL low voltage disconnect
• LVDBYPAS	Low voltage disconnect bypass
• LWBATVG	Low battery voltage
• LWFUEL	Low fuel
• LWHUM	Low humidity
• LWPRES	Low cable pressure
• LWTEMP	Low temperature
• LWWTR	Low water
• MISC	Miscellaneous
• OPENDR	Open door
• POWER	Commercial power failure
• PUMP	Pump failure
• PWR-48	48 V power supply failure
• PWR-139	-139 V power converter
• PWR-190	-190 V power converter
• PWRMJ	Power supply major
• PWRMN	Power supply minor
• RECT	Rectifier failure
• RECTHI	Rectifier high voltage
• RECTLO	Rectifier low voltage
• RINGGENMJ	Ring generator major
• RINGGENMN	Ring generator minor
• RTACADSL	AC or AC/rectifier power fail ADSL equipment
• RTACCRIT	AC or AC/rectifier power fail DCL equipment critical site
• RTACPWR	AC or AC/rectifier power fail DCL equipment
• RTACPWRENG	Commercial AC fail, site equipped with standby engine
• RTBAYPWR	AC power loss distributed power RT bay
• RTRVENG	Retrieve standby engine, commercial AC restored
• SMOKE	Smoke
• TEMP	High-low temperature

• TOXICGAS	Toxic gas
• TREPEATER	T-repeater shelf
• VENTN	Ventilation system failure

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<AID>:[<NTFCNCDE>],[<ALMTYPE>],[<DESC>]"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"ENV-IN-1:MJ,OPENDR,\"OPEN DOOR\""
;
```

**Output Parameters**

<AID>	Access identifier from the <a href="#">“26.14 ENV” section on page 26-37</a> .
<NTFCNCDE>	(Optional) Two-letter notification code. The parameter type is NOTIF_CODE, which is the two-character notification code associated with an autonomous message.
• CL	The condition causing the alarm has cleared.
• CR	A critical alarm.
• MJ	A major alarm.
• MN	A minor alarm.
• NA	The condition is not alarmed.
• NR	The alarm is not reported.
<ALMTYPE>	(Optional) The alarm type for the environmental alarm. The parameter type is ENV_ALM, which is the environmental alarm type.
• AIRCOMPR	Air compressor failure
• AIRCOND	Air conditioning failure
• AIRDRYR	Air dryer failure
• BATDSCHRG	Battery discharging
• BATTERY	Battery failure
• CLFAN	Cooling fan failure
• CPMAJOR	Centralized power major failure
• CPMINOR	Centralized power minor failure
• ENGINE	Engine failure
• ENGOPRG	Engine operating
• ENGTRANS	Standby engine transfer
• EXPLGS	Explosive gas
• FIRDETR	Fire detector failure
• FIRE	Fire
• FLOOD	Flood

• FUELLEAK	Fuel leak
• FUSE	Fuse failure
• GASALARM	Explosive gas, toxic gas, ventilation fail or gas monitor fail
• HATCH	CEV hatch fail
• GEN	Generator failure
• HIAIR	High airflow
• HIHUM	High humidity
• HITEMP	High temperature
• HIWTR	High water
• INTRUDER	Intrusion
• LEVELCON	Level converter
• LVDADSL	Secondary ADSL low voltage disconnect
• LVDBYPAS	Low voltage disconnect bypass
• LWBATVG	Low battery voltage
• LWFUEL	Low fuel
• LWHUM	Low humidity
• LWPRES	Low cable pressure
• LWTEMP	Low temperature
• LWWTR	Low water
• MISC	Miscellaneous
• OPENDR	Open door
• POWER	Commercial power failure
• PUMP	Pump failure
• PWR-48	48V power supply failure
• PWR-139	-139 V power converter
• PWR-190	-190 V power converter
• PWRMJ	Power supply major
• PWRMN	Power supply minor
• RECT	Rectifier failure
• RECTHI	Rectifier high voltage
• RECTLO	Rectifier low voltage
• RINGGENMJ	Ring generator major
• RINGGENMN	Ring generator minor
• RTACADSL	AC or AC/rectifier power fail ADSL equipment
• RTACCRIT	AC or AC/rectifier power fail DCL equipment critical site
• RTACPWR	AC or AC/rectifier power fail DCL equipment
• RTACPWRENG	Commercial AC fail, site equipped with standby engine
• RTBAYPWR	AC power loss distributed power RT bay
• RTRVENG	Retrieve standby engine, commercial AC restored
• SMOKE	Smoke
• TEMP	High-low temperature

• TOXICGAS	Toxic gas
• TREPEATER	T-repeater shelf
• VENTN	Ventilation system failure
<DESC>	(Optional) Alarm description. DESC is a string.

## 21.21 RTRV-AUDIT-LOG

(Cisco ONS 15454) The Retrieve Audit Log (RTRV-AUDIT-LOG) command retrieves the contents of the audit log stored in the NE. Audit records contain information for user operations such as login, logout, change of provisioning parameters and other changes a user might make when connected to the NE. Audit records do not store operations related to parameter retrieval.

**Usage Guidelines** None

**Category** Log

**Security** Superuser

**Input Format** RTRV-AUDIT-LOG:[<TID>]::<CTAG>;

**Input Example** RTRV-AUDIT-LOG:::1;

**Input Parameters** None that require description

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“ <ENTRYNUM>,<OCRDAT>,<OCRTM>,<TASKID>,<TXSTATUS>,<DESCRIPTION>”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“ 17172,2004-10-05,09-52-44, TPROVMGR,COMPLD,
\17172,2004-10-05,09-52-44, TPROVMGR,COMPLD,\"DESCRIPTION\””
;
```

<b>Output Parameters</b>	<ENTRYNUM>	Entry number. ENTRYNUM is an integer.
	<OCRDAT>	Date when the specific event or violation occurred, MM-DD.
	<OCRTM>	Time when the specific event or violation occurred, HH-MM-SS.
	<TASKID>	Task ID. TASKID is a string.
	<TXSTATUS>	Parameter type is TX_STATUS, which indicates the status of the transferred file.
	<ul style="list-style-type: none"> <li>• COMPLD</li> <li>• IP</li> <li>• START</li> </ul>	<ul style="list-style-type: none"> <li>The file transmission is completed.</li> <li>The file transmission is in process.</li> <li>The file transmission is started.</li> </ul>
	<DESCRIPTION>	Description of event. Description format varies depending on the event and can include parameters used during the event. DESCRIPTION is a string.

## 21.22 RTRV-BFDLPM-<MOD2>

(Cisco ONS 15454) The Retrieve BFDL Performance Monitoring (DS1, T1) command retrieves the BFDL (enhanced 24-hour ES, UAS, BES, CSS, and LOFC) performance monitoring parameters and applies to the DS3XM-12 card DS1 under BFDL mode. This command returns the current 15-minute and current 24-hour BFDL performance monitoring (PM) parameters and the 96 15-minute history requested type PM parameters.

### Usage Guidelines

For example, the following input:

```
RTRV-BFDLPM-DS1::DS1-14-1-1:1::REQTYPE=ENH-24HR-ES;
```

Will retrieve the following output:

```
DS1-14-1-1:ES,30,CURR-15MIN-INV DS1-14-1-1:UAS,40,CURR-15MIN-INV
DS1-14-1-1:BES,50,CURR-15MIN-INV DS1-14-1-1:SES,60,CURR-15MIN-INV
DS1-14-1-1:CSS,70,CURR-15MIN-INV DS1-14-1-1:LOFC,80,CURR-15MIN-INV
DS1-14-1-1:ES,30,CURR-24HR-INV DS1-14-1-1:UAS,40,CURR-24HR-INV
DS1-14-1-1:BES,50,CURR-24HR-INV DS1-14-1-1:SES,60,CURR-24HR-INV
DS1-14-1-1:CSS,70,CURR-24HR-INV DS1-14-1-1:LOFC,80,CURR-24HR-INV
DS1-14-1-1:ES,30,1-15MIN-INV DS1-14-1-1:ES,40,2-15MIN-INV
DS1-14-1-1:ES,50,3-15MIN-INV
DS1-14-1-1:ES,80,96-15MIN-INV
```

Sending this command with a REQTYPE of ENH-24HR-CSS-AND-LOFC will retrieve 96 15-minute PM parameters for both CSS and LOFC. The command is applied on the DS3XM-12 DS1 under BFDL mode, ESF frame format, C-BIT IS port with an IS VT circuit configuration.

### Category

Performance

### Security

Retrieve

**Input Format**

```
RTRV-BFDLPM-<MOD2>:[<TID>]:<AID>:<CTAG>:::REQTYPE=<REQTYPE>;
```

**Input Example**

```
RTRV-BFDLPM-DS1:TID:DS1-14-1-1:123:::REQTYPE=ENH-24HR-ES;
```

**Input Parameters**

<AID>	Access identifier from the “26.13 DS1” section on page 26-36.
<REQTYPE>	Indicates requested BFDL PM type. Must not be null. The parameter type is REQTYPE, which is the requested PM type.
• ENH-24HR-BES	The enhanced 24-hour BES performance data
• ENH-24HR-CSS-AND-LOFC	The enhanced 24-hour CSS-AND-LOFC performance data
• ENH-24HR-ES	The enhanced 24-hour ES performance data
• ENH-24HR-SES	The enhanced 24-hour SES performance data
• ENH-24HR-UAS	The enhanced 24-hour UAS performance data

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<AID>:<MONTYPE>,<MONVAL>,<BUCKET>”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“DS1-14-1-1:ES,55,CURR-15MIN-INV”
;
```

**Output Parameters**

<AID>	Access identifier from the “26.13 DS1” section on page 26-36.
<MONTYPE>	Monitored type which includes: BES, CSS, ES, LOFC, SES, UAS. MONTYPE is a string.
<MONVAL>	The value to which the register identified by MONTYPE is to be initialized to or the measured value of a monitored parameter. The value is in the form of numeric counts or rates. MONVAL is a string.
<BUCKET>	The BIN of each BFDL PM. BUCKET is a string.

## 21.23 RTRV-BITS

(Cisco ONS 15454) The Retrieve Building Integrated Timing Supply (RTRV-BITS) command retrieves the BITS configuration command. For BITS facility, 64 K and 6 MHz are only applicable to the ONS 15454.

**Usage Guidelines**

None

## RTRV-BITS

**Category** Synchronization

**Security** Retrieve

**Input Format** RTRV-BITS:[<TID>]:<AID>:<CTAG>[:::];

**Input Example** RTRV-BITS:SONOMA:BITS-1:782;

**Input Parameters**

<AID>	Access identifier from the <a href="#">“26.6 BITS” section on page 26-21</a> .
-------	--

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
  “<AID>::[LINECDE=<LINECDE>],[FMT=<FMT>],[LBO=<LBO>],
  [SYNCSMSG=<SYNCSMSG>],[AISTHRSHLD=<AISTHRSHLD>],[SABIT=<SABIT>],
  [IMPEDANCE=<IMPEDANCE>],[BITSFAC=<BITSFAC>],[ADMSSM=<ADMSSM>]:[<PST>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
  “BITS-1::LINECDE=AMI,FMT=ESF,LBO=0-133,SYNCSMSG=N,AISTHRSHLD=PRS,
  SABIT=BYTE-4,IMPEDANCE=120-OHM,BITSFAC=T1,ADMSSM=PRS:IS”
;
```

**Output Parameters**

<AID>	Access identifier from the <a href="#">“26.6 BITS” section on page 26-21</a>
<LINECDE>	(Optional) Line code. The parameter type is LINE_CODE.
• AMI	Line code value is AMI.
• B8ZS	Line code value is B8ZS (binary eight-zero substitution).
<FMT>	(Optional) Digital signal frame format. The parameter type is FRAME_FORMAT, which is the frame format for a T1 port.
• D4	Frame format is D4.
• ESF	Frame format is ESF.
• UNFRAMED	Frame format is unframed.
<LBO>	(Optional) Line buildout settings. BITS line buildout. Default value is 0 to 133. LBP is an integer. The parameter type is BITS_LineBuildOut, which is the BITS line buildout.
• 0–133	BITS line buildout range is 0–133.
• 134–266	BITS line buildout range is 134–266.
• 267–399	BITS line buildout range is 267–399.
• 400–533	BITS line buildout range is 400–533.

• 534–655	BITS line buildout range is 534–655.
<SYNCMSG>	Indicates if the BITS facility supports synchronization status message. Default is Y. The parameter type is EXT_RING, which indicates if the ring supports the extended K1/K2/K3 protocol.
• N	The ring does not support the extended K1/K2/K3 protocol.
• Y	The ring does support the extended K1/K2/K3 protocol.
<AISTHRSHLD>	(Optional) Alarm indication signal threshold. The parameter type is SYNC_CLOCK_REF_QUALITY_LEVEL, which is the clock source quality level for SONET.
• DUS	Do Not Use For Synchronization
• PRS	Primary Reference Source, Stratum 1 Traceable
• RES	Reserved For Network Synchronization Use
• SMC	SONET Minimum Clock Traceable
• ST2	Stratum 2 Traceable
• ST3	Stratum 3 Traceable
• ST3E	Stratum 3E Traceable
• ST4	Stratum 4 Traceable
• STU	Synchronized, Traceability Unknown
• TNC	Transit Node Clock (2nd Generation Only)
<SABIT>	(Optional) When the frame format selection is E1, SABIT is the BIT used to receive and transmit the SSM. The parameter type is SABITS (SA BITS).
• BYTE-4	SABIT is BYTE-4.
• BYTE-5	SABIT is BYTE-5.
• BYTE-6	SABIT is BYTE-6.
• BYTE-7	SABIT is BYTE-7.
• BYTE-8	SABIT is BYTE-8.
<IMPEDANCE>	(Optional) When the frame format selection is E1, IMPEDANCE is the terminal impedance of the BITS-IN port. The parameter type is IMPEDANCE, which is the terminal impedance of the BITS-IN port
• 120-OHM	Impedance of 120 ohms
• 75-OHM	Impedance of 75 ohms
<BITSFAC>	(Optional) BITS facility settings. The parameter type is BITS_FAC, which is the BITS facility rate. 64 K and 6 MHz are only applicable to the ONS 15454.
• 2 M	2 MHz rate
• 64 K	64 K rate
• 6 M	6 MHz rate
• E1	E1 rate
• T1	T1 rate

<ADMSSM>	(Optional) SSM selectable. Only applicable to BITS-IN when SSM is disabled. The parameter type is SYNC_CLOCK_REF_QUALITY_LEVEL, which is the clock source quality level for SONET.
• DUS	Do Not Use For Synchronization
• PRS	Primary Reference Source, Stratum 1 Traceable
• RES	Reserved For Network Synchronization Use
• SMC	SONET Minimum Clock Traceable
• ST2	Stratum 2 Traceable
• ST3	Stratum 3 Traceable
• ST3E	Stratum 3E Traceable
• ST4	Stratum 4 Traceable
• STU	Synchronized, Traceability Unknown
• TNC	Transit Node Clock (2nd Generation Only)
<PST>	(Optional) Primary state. The parameter type is PST, which indicates the current overall service condition of an entity.
• IS	In Service
• OOS	Out of Service

## 21.24 RTRV-BULKROLL-<OCN\_TYPE>

(Cisco ONS 15454) The Retrieve Bulkroll for OC12, OC192, OC3, OC48, or OC768 (RTRV-BULKROLL-<OCN\_TYPE>) command retrieves roll data parameters on a line.

**Usage Guidelines** See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

**Category** Bridge and Roll

**Security** Provisioning

**Input Format** RTRV-BULKROLL-<OCN\_TYPE>[:<TID>]:<SRC>:<CTAG>;

**Input Example** RTRV-BULKROLL-OC12:CISCO:FAC-3-1:1;

**Input Parameters** <SRC> Source AID from the [“26.17 FACILITY” section on page 26-40](#).

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<FROM>:RFROM=<RFROM>,RTO=<RTO>,[RMODE=<RMODE>],VLDSIG=<VLDSIG>"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"STS-3-1-1:RFROM=STS-3-1-1,RTO=STS-5-1-1,RMODE=AUTO,VLDSIG=Y"
;
```

**Output Parameters**

<FROM>	One of the end points. Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40 for line level rolling and bulk rolling.
<RFROM>	The termination point of the existing cross-connect that is to be rolled. The AID is from the <a href="#">“26.12 CrossConnectId1”</a> section on page 26-29 (except VCM and FACILITY).
<RTO>	The termination point that will become a leg of the new cross-connection. The AID is from the <a href="#">“26.12 CrossConnectId1”</a> section on page 26-29 (except VCM and FACILITY).
<RMODE>	(Optional) The rolling mode of operation. The parameter type is RMODE, which specifies the roll mode.
<ul style="list-style-type: none"> <li>AUTO</li> </ul>	Automatic. When a valid signal is available, the roll under AUTO mode will automatically delete the previous end-point.
<ul style="list-style-type: none"> <li>MAN</li> </ul>	Manual. Enter the corresponding delete roll/bulkroll command to delete the previous end-point.
<ul style="list-style-type: none"> <li>MAN</li> </ul>	Manual
<ul style="list-style-type: none"> <li>MAN-RESTART</li> </ul>	Manual Restart for Test
<VLDSIG>	(Optional) The rolling mode of operation. The parameter type is ON_OFF (disable or enable an attribute).
<ul style="list-style-type: none"> <li>N</li> </ul>	Disable an attribute.
<ul style="list-style-type: none"> <li>Y</li> </ul>	Enable an attribute.

## 21.25 RTRV-BWP-ETH

(Cisco ONS 15454)

This command is used to retrieve a BandWidth Profile entry in BWP DB. The BWP DB is a collection of BWP used in a Network Element.

**Usage Guidelines**

The “ALL” AID is supported by this command.

If the AID is invalid, an IIAC (Invalid AID) error message is returned.

## RTRV-BWP-ETH

**Category** Ethernet

**Security** Retrieve

**Input Format** RTRV-BWP-ETH:[<TID>]:<AID>:<CTAG>[:::];

**Input Example** RTRV-BWP-ETH:ROCKS:BWP-10000:1;

**Input Parameter**

**Table 21-1** *Input Parameter Support*

Parameter	Description
<AID>	This AID is used to access BWP.
• BWP-ALL	All aid for BWP.
• BWP-{1-10000}	Single AID for BWP. The valid identifiers ranges from 1 to 10000.

**Output Format**

SID DATE TIME  
M CTAG COMPLD

"<AID>::[NAME=<NAME>],[CIR=<CIR>],[CBS=<CBS>],[PBS=<PBS>],[PIR=<PIR>],[CFMSTATE=<CFM\_STATE>]:";

;

**Output Example**

TID-000 1998-06-20 14:30:00

M 001 COMPLD

"BWP-10000::NAME="MyBWP",CIR=10,CBS=1M,PBS=1M,PIR=20,CFMSTATE=Y:";

;

**Output Parameters**

**Table 21-2** *Output Parameter Support*

Parameter	Description
<AID>	This AID is used to access BWP.
• BWP-ALL	All aid for BWP.
• BWP-{1-10000}	Single AID for BWP. The valid identifiers ranges from 1 to 10000.
<NAME>	The BWP name. BWP name is a String.

**Table 21-2 Output Parameter Support**

Parameter	Description
<CIR>	Ingress committed information rate. This is a value between 0 and 100. Default value is - 100.
<CBS>	Ingress committed burst bucket size.
• 4K	4 Kbit bucket size
• 8K	16 Kbit bucket size
• 16K	32 Kbit bucket size
• 32K	64 Kbit bucket size
• 64K	128 Kbit bucket size
• 128K	256 Kbit bucket size
• 256K	512 Kbit bucket size
• 512K	1 Mbit bucket size
• 1M	2 Mbit bucket size
• 2M	4 Mbit bucket size
• 4M	8 Mbit bucket size
• 8M	16 Mbit bucket size
• 16M	16 Kbit bucket size
<PBS>	Ingress peak burst bucket size
• 4K	4 Kbit bucket size
• 8K	8 Kbit bucket size
• 16K	16 Kbit bucket size
• 32K	32 Kbit bucket size
• 64K	64 Kbit bucket size
• 128K	128 Kbit bucket size
• 256K	256 Kbit bucket size
• 512K	512 Kbit bucket size
• 1M	1 Mbit bucket size
• 2M	2 Mbit bucket size
• 4M	4 Mbit bucket size
• 8M	8 Mbit bucket size
• 16M	16 Mbit bucket size
<PIR>	Peak information rate. This is a value between 0 and 100. Default value is - 100.
<CFMSTATE>	Link Integrity status
• Y	Enabled
• N	Disabled

## 21.26 RTRV-CFM

(Cisco ONS 15454) The Retrieve Connectivity Fault Management (RTRV-CFM) command retrieves the Connectivity Fault Management (CFM) protocol state at the port level.

### Usage Guidelines

- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.

### Category

Port

### Security

Retrieve

### Input Format

RTRV-CFM:[<TID>]:<AID>:<CTAG>;

### Input Example

RTRV-CFM:454-156:ETH-1-1-1;

### Input Parameter

<AID> Access identifier from the [“26.16 ETH” section on page 26-40](#).

### Output Format

```
SID DATE TIME
M CTAG COMPLD
“<AID>,<STATE>”
;
```

### Output Example

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“ETH-7-1-1,STATE=ENABLE”
;
```

### Output Parameters

<AID>	Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the <a href="#">“26.16 ETH” section on page 26-40</a> .
<CFM_STATE>	Indicates whether the CFM is enabled or disabled on the port.
• ENABLE	Indicates the CFM is enabled on the port.
• DISABLE	Indicates the CFM is disabled on the port.

## 21.27 RTRV-CHGRP

(Cisco ONS 15454) The Retrieve Channel Group (RTRV-CHGRP) command retrieves the layer 2 channel group information of GE\_XP and 10GE\_XP ethernet cards.

<b>Category</b>	Channel Group						
<b>Security</b>	Retrieve						
<b>Input Format</b>	RTRV-CHGRP:[<TID>]:<aid>:<CTAG>[:::];						
<b>Input Example</b>	RTRV-CHGRP::CHGRP-1-2:1;						
<b>Input Parameters</b>	<AID> Access identifier from the <a href="#">“26.9 CHGRP”</a> section on page 26-24.						
<b>Output Format</b>	<pre> SID DATE TIME M CTAG COMPLD “&lt;AID&gt;:[LACPMODE=&lt;LACPMODE&gt;],[HASHINGALGO=&lt;HASHINGALGO&gt;],[NIMODE=&lt;NIMODE&gt;],[MACLEARNING=&lt;MACLEARNING&gt;],[INGRESSCOS=&lt;INGRESSCOS&gt;],[ETHERCETYPE=&lt;ETHERCETYPE&gt;],[ETHERSTYPER=&lt;ETHERSTYPER&gt;],[ETHERSTYPER=&gt;ETHERSTYPER],[BPDU=&lt;BPDU&gt;],[QNQMODE=&lt;QNQMODE&gt;],[MTU=&lt;MTU&gt;],[FLOWCTRL=&lt;FLOWCTRL&gt;],[SPEED=&lt;SPEED&gt;],[EXPSPEED=&lt;EXPSPEED&gt;],[CIR=&lt;CIR&gt;],[CBS=&lt;CBS&gt;],[EBS=&lt;EBS&gt;]:&lt;PST&gt;,&lt;SST&gt;]” ; </pre>						
<b>Output Example</b>	<pre> TID-000 1998-06-20 14:30:00 M 001 COMPLD  “CHGRP-1-1:LACPMODE=ACTIVE,HASHINGALGO=HASHING_SA_DA_VLAN_INCOMING_PORT,NIMODE=UNI,MACLEARNING=N,INGRESSCOS=0,ETHERCETYPE=8100,ETHERSTYPER=8100,BPDU=Y,QNQMODE=SELECTIVE,MTU=9700,FLOWCTRL=ASYMMETRIC,SPEED=AUTO,EXPSPEED=AUTO,CIR=100,CBS=4K,EBS=4K:OOS-MA,DSBLD” ; </pre>						
<b>Output Parameters</b>	<table border="1"> <tr> <td>&lt;AID&gt;</td> <td>Access identifier from the <a href="#">“26.9 CHGRP”</a> section on page 26-24.</td> </tr> <tr> <td>&lt;NIMODE&gt;</td> <td>Identifies the Ethernet Network Interface Mode. <ul style="list-style-type: none"> <li>NNI (Default) Network-Network Interface Mode</li> <li>UNI User-Network Interface Mode</li> </ul> </td> </tr> <tr> <td>&lt;LACPMODE&gt;</td> <td>LACP mode values</td> </tr> </table>	<AID>	Access identifier from the <a href="#">“26.9 CHGRP”</a> section on page 26-24.	<NIMODE>	Identifies the Ethernet Network Interface Mode. <ul style="list-style-type: none"> <li>NNI (Default) Network-Network Interface Mode</li> <li>UNI User-Network Interface Mode</li> </ul>	<LACPMODE>	LACP mode values
<AID>	Access identifier from the <a href="#">“26.9 CHGRP”</a> section on page 26-24.						
<NIMODE>	Identifies the Ethernet Network Interface Mode. <ul style="list-style-type: none"> <li>NNI (Default) Network-Network Interface Mode</li> <li>UNI User-Network Interface Mode</li> </ul>						
<LACPMODE>	LACP mode values						

• ON	Manual mode of LACP
• ACTIVE	Active mode of LACP
• PASSIVE	Passive mode of LACP
<HASHINGALGO>	Hashing algorithm value
• HASHING_SA_VLAN_INCOMIN G_PORT	The Hashing Algorithm value is HASHING_SA_VLAN_INCOMING_PORT.
• HASHING_DA_VLAN_INCOMIN G_PORT	The Hashing Algorithm is HASHING_DA_VLAN_INCOMING_PORT.
• HASHING_SA_DA_VLAN_INCO MING_PORT	The Hashing Algorithm is HASHING_SA_DA_VLAN_INCOMING_PORT.
• HASHING_SRC_IP_TCP_UDP	The Hashing Algorithm is HASHING_SRC_IP_TCP_UDP.
• HASHING_DST_IP_TCP_UDP	The Hashing Algorithm is HASHING_DST_IP_TCP_UDP.
• HASHING_SRC_DST_ IP_TCP_UDP	The Hashing Algorithm is HASHING_SRC_DST_IP_TCP_UDP.
<MTU>	(Optional) Maximum transport unit. The parameter type is MTU_TYPE, which indicates the maximum transport unit used by an Ethernet card. Defaults to 9600.
• 10004	10004. Indicates jumbo size.
• 1500	1500
• 1548	1548
• 9600	9600. Indicates jumbo size.
• 64	64
• 9700	9700. Indicates jumbo size.
<ATTACH >	Ethernet AID for the front end CE-MR-6 cards. Ethernet AID for the ethernet port on GE_XP and 10GE_XP card.
<DETACH>	To remove or detach the port.
<SPEED>	(Optional) The parameter type is ETHER_SPEED, which indicates Ethernet speed. Defaults to AUTO.
• 100_MBPS	100 Megabits per second
• 10_GBPS	10 Gigabits per second
• 10_MBPS	10 Megabits per second
• 1_GBPS	1 Gigabit per second
<EXPSPEED>	(Optional) Ethernet speed. The parameter type is ETHER_SPEED, which is the Ethernet speed.
• 100_MBPS	100 Megabits per second
• 10_GBPS	10 Gigabits per second
• 10_MBPS	10 Megabits per second
• 1_GBPS	1 Gigabit per second
• 40_GBPS	40 Gigabit per second
• AUTO_FDX	Enable auto negotiation with full duplex
• AUTO	Auto
<CIR>	Ingress committed information rate. The value ranges from 0 to 100. The default value is 100.
<CBS>	Ingress committed burst bucket size.

• 4K	4 Kbit bucket size
• 8K	16 Kbit bucket size
• 16K	32 Kbit bucket size
• 32K	64 Kbit bucket size
• 64K	128 Kbit bucket size
• 128K	256 Kbit bucket size
• 256K	512 Kbit bucket size
• 512K	1 Mbit bucket size
• 1M	2 Mbit bucket size
• 2M	4 Mbit bucket size
• 4M	8 Mbit bucket size
• 8M	16 Mbit bucket size
• 16M	16 Kbit bucket size
<EBS>	Ingress excess burst bucket size.
<MACLEARNING>	MAC Address Learning Mode. This activates the MAC address learning on the interface to avoid packet broadcasting.
• Y	Enables the MAC learning on the interface.
• N	Disables the MAC learning on the interface.
<INGRESSCOS>	Identifies the COS value set in the S-VLAN tag.
• 0 to 7	Set a Cos value
• TRUST	Use the Customer COS
• VLAN	The COS will be provisioned on CVLAN basis (QinQ selective mode)
<ETHERCETYPE>	Identifies a customer foreseen Ethernet type. If the customer uses a non-standard Ethernet type, the incoming packets will be accepted only if the CE-VLAN Ethernet type matches this parameter.
<ETHERSTYPE>	Identifies a customer foreseen Ethernet type. If the customer uses a non-standard Ethernet type, the incoming packets will be accepted only if the CE-VLAN Ethernet type matches this parameter.
<BPDU>	BPDU (Bridge Protocol Data Unit) management mode; Drop/Passthrough BPDU tagged packets.
• Y	Enables the BPDU tag.
• N	Disables the BPDU tag.
<QNQMODE>	This is used to represent the QinQ mode operations.
• Selective	The S-VLAN tag is added only on specified CE-VLANs. The other packets are dropped.
• Transparent	The S-VLAN tag is always performed where all packets having the S-VLAN-ID identified by TRNSPSVLAN parameter are allowed.

<TRNSPSVLAN>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<NAME>	(Optional) NAME is a string. User-assigned port name.

## 21.28 RTRV-CMD-SECU

(Cisco ONS 15454) The Retrieve Command Security (RTRV-CMD-SECU) command retrieves the current command security level of the command specified in the AID field.

<b>Usage Guidelines</b>	None		
<b>Category</b>	Security		
<b>Security</b>	Superuser		
<b>Input Format</b>	RTRV-CMD-SECU:[<TID>]:<AID>:<CTAG>;		
<b>Input Example</b>	RTRV-CMD-SECU::INIT-REG:1;		
<b>Input Parameters</b>	<table border="1"> <tr> <td>&lt;AID&gt;</td> <td>Access identifier string. Identifies the entity in the NE to which the command pertains. It is the command verb along with verb modifier(s), as it currently exists. It can be a single command or a block of commands, where the block might include all commands. Only INIT-REG will be supported. String.</td> </tr> </table>	<AID>	Access identifier string. Identifies the entity in the NE to which the command pertains. It is the command verb along with verb modifier(s), as it currently exists. It can be a single command or a block of commands, where the block might include all commands. Only INIT-REG will be supported. String.
<AID>	Access identifier string. Identifies the entity in the NE to which the command pertains. It is the command verb along with verb modifier(s), as it currently exists. It can be a single command or a block of commands, where the block might include all commands. Only INIT-REG will be supported. String.		
<b>Output Format</b>	<pre>SID DATE TIME M CTAG COMPLD "&lt;AID&gt;:&lt;CAP&gt;" ;</pre>		
<b>Output Example</b>	<pre>TID-000 1998-06-20 14:30:00 M 001 COMPLD "INIT-REG:PROV" ;</pre>		

<b>Output Parameters</b>	<AID>	(Optional) Access identifier. It can be a single command or a block of commands, where the block can include all commands. Only INIT-REG is supported. AID is a string.
	<CAP>	Command access privilege. The parameter type is PRIVILEGE, which is the security level.
	• PROV	Provisioning security level
	• SUPER	Superuser security level

## 21.29 RTRV-COND-<MOD2ALM>

(Cisco ONS 15454) The Retrieve Condition for 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 4GFC, 4GFICON, 5GIB, 8GFC, CHGRP, DS1, DS3I, DVBASI, E1, E100, E1000, E3, E4, EC1, ETH, FSTE, G1000, HDLC, ETH, GFPOS, GIGE, ILK, ISCCOMPAT, ISC1, ISC3PEER2R, ISC3PEER1G, ISC3PEER2G, MSISC, OC12, OC192, OC3, OC48, OC768, OCH, OMS, OTS, OTU2, OTU3, POS, RPRIF, STM1, STM4, STM16, STM64, STM1E, STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, STS9C, T1, T3, UDCDCC, UDCF, VC11, VC12, VC3, VC4, VC4-2c, VC4-3c, VC4-4c, VC4-8c, VC4-16c, VC4-64c, VCG, VT1, VT2, WLEN, or RPRIF (RTRV-COND-<MOD2ALM>) command retrieves the current standing condition and state associated with an entity.

**Usage Guidelines** See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

**Category** Fault

**Security** Retrieve

**Input Format** RTRV-COND-<MOD2ALM>:[<TID>]:<AID>:<CTAG>::[<TYPEREQ>],[<LOCN>],[<DIRN>];

**Input Example** RTRV-COND-RPRIF:DXT:RPRIF-2-0:229::FORCE-REQ;

<b>Input Parameters</b>	<AID>	Access identifier from the <a href="#">“26.1 ALL” section on page 26-1</a> .
	<TYPEREQ>	The type of condition to be retrieved. A null value is equivalent to ALL. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, NA conditions, and NR conditions. See <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.

<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
• BTH	Both transmit and receive directions
• RCV	Receive direction only

**Output Format**

```

SID DATE TIME
M CTAG COMPLD
"<AID>,[<AIDTYPE>]:[<NTFCNCDE>],<TYPEREP>,[<SRVEFF>],[<OCRDAT>],
[<OCRTM>],<LOCN>,<DIRECTION>,[<DESC>]"
;

```

**Output Example**

```

TID-000 1998-06-20 14:30:00
M 001 COMPLD
"RPRIF-2-0,T3:MJ,FORCE-REQ,SA,01-01,16-00-20,NEND,RCV,\"FORCED SWITCH
REQUEST\""
;

```

**Output Parameters**

<AID>	Access identifier from the <a href="#">“26.1 ALL” section on page 26-1</a> .
<AIDTYPE>	(Optional) Type of access identifier. Specifies the type of facility, link or other addressable entity targeted by the message. The parameter type is MOD2ALM, which is the alarm type.
• 1GFC	1-Gigabit Fibre Channel payload
• 1GFICON	1-Gigabit fiber connectivity payload
• 1GISC3	1-Gigabit ISC3 compatible
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• 4GFC	4-Gigabit Fibre Channel payload
• 4GFICON	4-Gigabit fiber connectivity payload
• 40GIGE	40-Gigabit Ethernet
• 5GIB	5Gbps InfiniBand (IB_5G) payload
• 8GFC	8-Gigabit Fibre Channel payload
• CLNT	Client facility for MXP/TXP cards
• CHGRP	Channel group
• DS1	DS1 alarm
• DS3I	DS3I alarm
• DVBASI	Digital Video Broadband Asynchronous Serial Interface (DVBASI) payload

• E100	E100 alarm
• E1000	E1000 alarm
• EC1	EC1 alarm
• FSTE	Fast Ethernet Port alarm
• G1000	G1000 alarm
• GFPOS	Generic framing protocol over packet over SONET virtual port alarm
• GIGE	Gigabit Ethernet port alarm
• ISC1	InterSystem Channel, a protocol defined by IBM (ISC1) payload
• ISC3PEER1G	1-Gigabit ISC3 Peer
• ISC3PEER2G	2 Gbps ISC3 Peer
• ISC3PEER2R	1 Gbps or 2 Gbps ISC3 peer used in transparent (2R) mode
• ISCCOMPAT	1 Gbps ISC1, ISC2, and ISC3 compatibility
• MSISC	MSISC
• OC3	OC3 alarm
• OC12	OC12 alarm
• OC48	OC48 alarm
• OC192	OC192 alarm
• OC768	OC768 alarm
• OCH	Optical channel
• OCHTERM	OCH termination
• OMS	Optical Multiplex Section
• OTS	Optical Transport Section
• OTU3	Optical Transport Unit Level 3
• POS	POS port alarm
• STS1	STS1 alarm
• STS3C	STS3c alarm
• STS6C	STS6c alarm
• STS9C	STS9c alarm
• STS18C	STS18c alarm
• STS12C	STS12c alarm
• STS24C	STS24c alarm
• STS36C	STS36c alarm
• STS48C	STS48c alarm
• STS192C	STS192c alarm
• T1	T1 alarm
• T3	T3 alarm
• UDCDCC	UDC-DCC alarm
• UDCF	UCD-F alarm
• VCG	Virtual concatenation group alarm
• VT1	VT1 alarm
• VT2	VT2 alarm

• WLEN	Wavelength path provisioning
<NTFCNCDE>	(Optional) Two-letter notification code. The parameter type is NOTIF_CODE, which is the two-character notification code associated with an autonomous message.
• CL	The condition causing the alarm has cleared.
• CR	A critical alarm.
• MJ	A major alarm.
• MN	A minor alarm.
• NA	The condition is not alarmed.
• NR	The alarm is not reported.
<TYPEREP>	The condition itself. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, NA conditions, and NR conditions. See <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.
<SRVEFF>	(Optional) The effect on service caused by the standing alarm or condition. The parameter type is SERV_EFF, which is the effect of the alarm on service.
• NSA	The condition is non-service affecting.
• SA	The condition is service affecting.
<OCRDAT>	(Optional) Date when the specific event or violation occurred, MM-DD.
<OCRTM>	(Optional) Time when the specific event or violation occurred, HH-MM-SS.
<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<DIRECTION>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
• BTH	Both transmit and receive directions
• RCV	Receive direction only
<DESC>	(Optional) Condition description. DESC is a string.

## 21.30 RTRV-COND-ALL

(Cisco ONS 15454) The Retrieve Condition All (RTRV-CON-ALL) command retrieves the current standing condition for all entities.

### Usage Guidelines

According to Telcordia GR-833, the RTRV-COND-ALL command only reports EQPT, COM, and rr (T1, T3, OCn, EC1, STSn, VT1, DS1, E100, E1000, G1000, ML-Series, TXP and MXP) alarms.

This command does not return all conditions that are returned by other, more specific RTRV-COND commands; RTRV-COND-ALL returns a subset of these conditions. Telcordia GR-253-CORE, Section 6.2.1.8.4 states a retrieval that returns ALL conditions from a node (RTRV-COND-ALL) must omit any conditions that are “same root cause” as other raised conditions. The section also states any retrieval of a subset of the conditions from a node, regardless of how the subsetting occurs, should not omit these “same root cause” conditions.

RTRV-COND-STS1, for example, includes “same root cause” conditions in the set it returns and RTRV-COND-ALL does not.

To retrieve all the NE conditions, issue all of the following commands:

```
RTRV-COND-ALL
RTRV-COND-ENV
RTRV-COND-BITS
RTRV-COND-SYCN
```

<b>Category</b>	Fault
<b>Security</b>	Retrieve
<b>Input Format</b>	RTRV-COND-ALL:[<TID>]:[<AID>]:<CTAG>::[<TYPEREQ>],[<LOCN>],[<DIRN>];
<b>Input Example</b>	RTRV-COND-ALL:DXT:ALL:229::FORCE-REQ;

<b>Input Parameters</b>	<AID>	Access identifier from the <a href="#">“26.1 ALL” section on page 26-1</a> . String. A null value is equivalent to ALL.
	<TYPEREQ>	The type of condition to be retrieved. A null value is equivalent to ALL. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, NA conditions, and NR conditions. See <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.
	<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
	• FEND	Action occurs on the far end of the facility.
	• NEND	Action occurs on the near end of the facility.
	<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
	• BTH	Both transmit and receive directions
	• RCV	Receive direction only

**Output Format**

```

SID DATE TIME
M CTAG COMPLD
"<AID>,[<AIDTYPE>]:[<NTFCNCDE>],<TYPEREP>,[<SRVEFF>],[<OCRDAT>],
[<OCRTM>],[<LOCN>,<DIRECTION>,[<DESC>]"
;

```

**Output Example**

```

TID-000 1998-06-20 14:30:00
M 001 COMPLD
"RPRIF-2-0,T3:MJ,FORCE-REQ,SA,01-01,16-00-20,NEND,RCV,\"FORCED SWITCH
REQUEST\""
;

```

**Output Parameters**

<AID>	Access identifier from the <a href="#">“26.1 ALL” section on page 26-1</a> that has an alarm condition.
<AIDTYPE>	(Optional) Type of access identifier. Specifies the type of facility, link or other addressable entity targeted by the message. The parameter type is MOD2B, which is the alarm type.
• 1GFC	1-Gigabit Fibre Channel payload
• 1GFICON	1-Gigabit fiber connectivity payload
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• 4GFC	4-Gigabit Fibre Channel payload
• 4GFICON	4-Gigabit fiber connectivity payload
• 40-GiGE	40-Gigabit Ethernet
• 5GIB	5Gbps InfiniBand (IB_5G) payload
• 8GFC	8-Gigabit Fibre Channel payload
• BITS	BITS alarm
• CHGRP	Channel group
• CLNT	Client facility for MXP/TXP cards
• COM	Common alarm
• DS1	DS1 alarm
• DS3I	DS3I alarm
• DVBASI	Digital Video Broadband Asynchronous Serial Interface (DVBASI) payload
• E100	E100 alarm
• E1000	E1000 alarm
• EC1	EC1 alarm
• ENV	ENV alarm
• EQPT	EQPT alarm
• FSTE	Fast Ethernet Port alarm
• G1000	G1000 alarm
• GIGE	Gigabit Ethernet port alarm

• HDLC	High-level data link control (HDLC) frame mode.
• ISC1	InterSystem Channel, a protocol defined by IBM (ISC1) payload
• ISC3PEER1G	1 Gbps ISC3 Peer
• ISC3PEER2G	2 Gbps ISC3 Peer
• ISC3PEER2R	1 Gbps or 2 Gbps ISC3 peer used in transparent (2R) mode
• ISCCOMPAT	1 Gbps ISC1, ISC2, and ISC3 compatibility
• MSISC	MSISC
• OC3	OC3 alarm
• OC12	OC12 alarm
• OC48	OC48 alarm
• OC192	OC192 alarm
• OC768	OC768 alarm
• OCH	Optical channel
• OMS	Optical Multiplex Section
• OTS	Optical Transport Section
• OTU3	Optical Transport Unit Level 3
• POS	POS port alarm
• REP	Resilient Ethernet Protocol
• STS1	STS1 alarm
• STS3C	STS3c alarm
• STS6C	STS6c alarm
• STS9C	STS9c alarm
• STS18C	STS18c alarm
• STS12C	STS12c alarm
• STS24C	STS24c alarm
• STS36C	STS36c alarm
• STS48C	STS48c alarm
• STS192C	STS192c alarm
• SYNCN	SYNCN alarm
• T1	T1 alarm
• T3	T3 alarm
• TCC	TCC alarm
• VT1	VT1 alarm
• VT2	VT2 alarm
<NTFCNCDE>	(Optional) Two-letter notification code. The parameter type is NOTIF_CODE, which is the two-character notification code associated with an autonomous message.
• CL	The condition causing the alarm has cleared.
• CR	A critical alarm.
• MJ	A major alarm.
• MN	A minor alarm.
• NA	The condition is not alarmed.

• NR	The alarm is not reported.
<TYPEREP>	The type of condition to be retrieved. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, NA conditions, and NR conditions. See <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.
<SRVEFF>	(Optional) The effect on service caused by the standing alarm or condition. The parameter type is SERV_EFF, which is the effect of the alarm on service.
• NSA	The condition is non-service affecting.
• SA	The condition is service affecting.
<OCRDAT>	(Optional) Date when the specific event or violation occurred, MM-DD.
<OCRTM>	(Optional) Time when the specific event or violation occurred, HH-MM-SS.
<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<DIRECTION>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
• BTH	Both transmit and receive directions
• RCV	Receive direction only
<DESC>	(Optional) Condition description. DESC is a string.

## 21.31 RTRV-COND-BITS

(Cisco ONS 15454) The Retrieve Condition Building Integrated Timing Supply (RTRV-COND-BITS) command retrieves the standing conditions on BITS.

### Usage Guidelines

None

### Category

Synchronization

### Security

Retrieve

### Input Format

RTRV-COND-BITS:[<TID>]:<AID>:<CTAG>::[<TYPEREQ>],[<LOCN>],[<DIRN>];

**Input Example** RTRV-COND-BITS:TID:BITS-1:229::LOS;

Input Parameters	
<AID>	Access identifier from the “26.6 BITS” section on page 26-21.
<TYPEREQ>	The type of condition to be retrieved. A null value is equivalent to ALL. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, NA conditions, and NR conditions. See Chapter 27, “Conditions” for a list of conditions.
<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
• BTH	Both transmit and receive directions
• RCV	Receive direction only

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<AID>,[<AIDTYPE>]:[<NTFCNCDE>],<TYPEREP>,[<SRVEFF>],[<OCRDAT>],
[<OCRTM>],[<LOCN>],[<DIRN>],[<DESC>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“BITS-1,BITS:CR,LOS,SA,01-01,16-02-15,,\“LOS OF SIGNAL\””
;
```

Output Parameters	
<AID>	Access identifier from the “26.6 BITS” section on page 26-21 that has an alarm condition.
<AIDTYPE>	(Optional) Type of access identifier. Specifies the type of facility, link or other addressable entity targeted by the message. The parameter type is MOD2B, which is the alarm type.
• 1GFC	1-Gigabit Fibre Channel payload
• 1GFICON	1-Gigabit fiber connectivity payload
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• 4GFC	4-Gigabit Fibre Channel payload
• 4GFICON	4-Gigabit fiber connectivity payload
• 40GIGE	40-Gigabit Ethernet

• 5GIB	5Gbps InfiniBand (IB_5G) payload
• 8GFC	8-Gigabit Fibre Channel payload
• BITS	BITS alarm
• CHGRP	Channel group
• CLNT	Client facility for MXP/TXP cards
• COM	Common alarm
• DS1	DS1 alarm
• DS3I	DS2I alarm
• E100	E100 alarm
• E1000	E1000 alarm
• EC1	EC1 alarm
• ENV	ENV alarm
• EQPT	EQPT alarm
• FSTE	Fast Ethernet Port alarm
• G1000	G1000 alarm
• GIGE	Gigabit Ethernet port alarm
• HDLC	High-level data link control (HDLC) frame mode.
• ISC3PEER1G	1 Gbps ISC3 Peer
• ISC3PEER2G	2 Gbps ISC3 Peer
• ISC3PEER2R	1 Gbps or 2 Gbps ISC3 peer used in transparent (2R) mode
• ISCCOMPAT	1 Gbps ISC1, ISC2, and ISC3 compatibility
• MSISC	MSISC
• OC3	OC3 alarm
• OC12	OC12 alarm
• OC48	OC48 alarm
• OC192	OC192 alarm
• OC768	OC768 alarm
• OCH	Optical channel
• OMS	Optical Multiplex Section
• OTS	Optical Transport Section
• OTU3	Optical Transport Unit Level 3
• POS	POS port alarm
• REP	Resilient Ethernet Protocol
• STS1	STS1 alarm
• STS3C	STS3c alarm
• STS6C	STS6c alarm
• STS9C	STS9c alarm
• STS18C	STS18c alarm
• STS12C	STS12c alarm
• STS24C	STS24c alarm
• STS36C	STS36c alarm

• STS48C	STS48c alarm
• STS192C	STS192c alarm
• SYNCN	SYNCN alarm
• T1	T1 alarm
• T3	T3 alarm
• TCC	TCC alarm
• VT1	VT1 alarm
• VT2	VT2 alarm
<NTFCNCDE>	(Optional) Two-letter notification code. The parameter type is NOTIF_CODE, which is the two-character notification code associated with an autonomous message.
• CL	The condition causing the alarm has cleared.
• CR	A critical alarm.
• MJ	A major alarm.
• MN	A minor alarm.
• NA	The condition is not alarmed.
• NR	The alarm is not reported.
<TYPEREP>	The type of condition to be retrieved. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, NA conditions, and NR conditions. See <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.
<SRVEFF>	(Optional) The effect on service caused by the standing alarm or condition. The parameter type is SERV_EFF, which is the effect of the alarm on service.
• NSA	The condition is non-service affecting.
• SA	The condition is service affecting.
<OCRDAT>	(Optional) Date when the specific event or violation occurred, MM-DD.
<OCRMTM>	(Optional) Time when the specific event or violation occurred, HH-MM-SS.
<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
• BTH	Both transmit and receive directions
• RCV	Receive direction only
<DESC>	(Optional) Condition description. DESC is a string.

## 21.32 RTRV-COND-ENV

(Cisco ONS 15454) The Retrieve Environmental Condition (RTRV-COND-ENV) command retrieves the environmental conditions.

### Usage Guidelines

None

### Category

Environment

### Security

Retrieve

### Input Format

RTRV-COND-ENV:[<TID>]:<AID>:<CTAG>::[<NTFCNCDE>],[<ALMTYPE>],[<LOCN>],[<DIRN>];

### Input Example

RTRV-COND-ENV:CISCO:ENV-IN-1:123::MJ,OPENDR;

### Input Parameters

<b>&lt;AID&gt;</b>	Access identifier from the <a href="#">“26.14 ENV” section on page 26-37</a> .  <b>Note</b> For RTRV-ALM-ENV, only ENV-IN- <b>{1-4}</b> is a valid AID for ONS 15454. ENV-OUT- <b>{1,6}</b> is not a valid AID for RTRV-ALM-ENV.
<b>&lt;NTFCNCDE&gt;</b>	Two-letter notification code. A null value is equivalent to ALL. The parameter type is NOTIF_CODE, which is the two-character notification code associated with an autonomous message.
<ul style="list-style-type: none"> <li>• CL</li> <li>• CR</li> <li>• MJ</li> <li>• MN</li> <li>• NA</li> <li>• NR</li> </ul>	<p>The condition causing the alarm has cleared.</p> <p>A critical alarm.</p> <p>A major alarm.</p> <p>A minor alarm.</p> <p>The condition is not alarmed.</p> <p>The alarm is not reported.</p>
<b>&lt;ALMTYPE&gt;</b>	The alarm type for the environmental alarm. A null value is equivalent to ALL. The parameter type is ENV_ALM, which is the environmental alarm type.
<ul style="list-style-type: none"> <li>• AIRCOMPR</li> <li>• AIRCOND</li> <li>• AIRDRYR</li> <li>• BATDSCHRG</li> <li>• BATTERY</li> <li>• CLFAN</li> <li>• CPMAJOR</li> </ul>	<p>Air compressor failure</p> <p>Air conditioning failure</p> <p>Air dryer failure</p> <p>Battery discharging</p> <p>Battery failure</p> <p>Cooling fan failure</p> <p>Centralized power major failure</p>

• CPMINOR	Centralized power minor failure
• ENGINE	Engine failure
• ENGOPRG	Engine operating
• ENGTRANS	Standby engine transfer
• EXPLGS	Explosive gas
• FIRDETR	Fire detector failure
• FIRE	Fire
• FLOOD	Flood
• FUELLEAK	Fuel leak
• FUSE	Fuse failure
• GASALARM	Explosive gas, toxic gas, ventilation fail, or gas monitor fail
• HATCH	CEV hatch fail
• GEN	Generator failure
• HIAIR	High airflow
• HIHUM	High humidity
• HITEMP	High temperature
• HIWTR	High water
• INTRUDER	Intrusion
• LEVELCON	Level converter
• LVDADSL	Secondary ADSL low voltage disconnect
• LVDBYPAS	Low voltage disconnect bypass
• LWBATVG	Low battery voltage
• LWFUEL	Low fuel
• LWHUM	Low humidity
• LWPRES	Low cable pressure
• LWTEMP	Low temperature
• LWWTR	Low water
• MISC	Miscellaneous
• OPENDR	Open door
• POWER	Commercial power failure
• PUMP	Pump failure
• PWR-48	48 V power supply failure
• PWR-139	-139 V power converter
• PWR-190	-190 V power converter
• PWRMJ	Power supply major
• PWRMN	Power supply minor
• RECT	Rectifier failure
• RECTHI	Rectifier high voltage
• RECTLO	Rectifier low voltage
• RINGGENMJ	Ring generator major
• RINGGENMN	Ring generator minor

• RTACADSL	AC or AC/rectifier power fail ADSL equipment
• RTACCRIT	AC or AC/rectifier power fail DCL equipment critical site
• RTACPWR	AC or AC/rectifier power fail DCL equipment
• RTACPWRENG	Commercial AC fail, site equipped with standby engine
• RTBAYPWR	AC power loss distributed power RT bay
• RTRVENG	Retrieve standby engine, commercial AC restored
• SMOKE	Smoke
• TEMP	High-low temperature
• TOXICGAS	Toxic gas
• TREPEATER	T-repeater shelf
• VENTN	Ventilation system failure
<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
• BTH	Both transmit and receive directions
• RCV	Receive direction only

**Output Format**

```

SID DATE TIME
M CTAG COMPLD
  "<AID>:<NTFCNCDE>,<ALMTYPE>,[<OCRDAT>],[<OCRMTM>],[<LOCN>],[<DIRN>],
  [<DESC>]"
;

```

**Output Example**

```

TID-000 1998-06-20 14:30:00
M 001 COMPLD
  "ENV-IN-1:MJ,OPENDR,01-01,16-02-15,,,\\"OPEN DOOR\\"
;

```

**Output Parameters**

<AID>	Access identifier from the <a href="#">“26.14 ENV” section on page 26-37</a> .
<NTFCNCDE>	(Optional) Two-letter notification code. The parameter type is NOTIF_CODE, which is the two-character notification code associated with an autonomous message.
• CL	The condition causing the alarm has cleared.
• CR	A critical alarm.
• MJ	A major alarm.
• MN	A minor alarm.
• NA	The condition is not alarmed.

• NR	The alarm is not reported.
<ALMTYPE>	The alarm type for the environmental alarm. The parameter type is ENV_ALM, which is the environmental alarm type.
• AIRCOMPR	Air compressor failure
• AIRCOND	Air conditioning failure
• AIRDRYR	Air dryer failure
• BATDSCHRG	Battery discharging
• BATTERY	Battery failure
• CLFAN	Cooling fan failure
• CPMAJOR	Centralized power major failure
• CPMINOR	Centralized power minor failure
• ENGINE	Engine failure
• ENGOPRG	Engine operating
• ENGTRANS	Standby engine transfer
• EXPLGS	Explosive gas
• FIRDETR	Fire detector failure
• FIRE	Fire
• FLOOD	Flood
• FUELLEAK	Fuel leak
• FUSE	Fuse failure
• GASALARM	Explosive gas, toxic gas, ventilation fail, or gas monitor fail
• HATCH	CEV hatch fail
• GEN	Generator failure
• HIAIR	High airflow
• HIHUM	High humidity
• HITEMP	High temperature
• HIWTR	High water
• INTRUDER	Intrusion
• LEVELCON	Level converter
• LVDADSL	Secondary ADSL low voltage disconnect
• LVDBYPAS	Low voltage disconnect bypass
• LWBATVG	Low battery voltage
• LWFUEL	Low fuel
• LWHUM	Low humidity
• LWPRES	Low cable pressure
• LWTEMP	Low temperature
• LWWTR	Low water
• MISC	Miscellaneous
• OPENDR	Open door
• POWER	Commercial power failure
• PUMP	Pump failure
• PWR-48	48V power supply failure

• PWR-139	-139 V power converter
• PWR-190	-190 V power converter
• PWRMJ	Power supply major
• PWRMN	Power supply minor
• RECT	Rectifier failure
• RECTHI	Rectifier high voltage
• RECTLO	Rectifier low voltage
• RINGGENMJ	Ring generator major
• RINGGENMN	Ring generator minor
• RTACADSL	AC or AC/rectifier power fail ADSL equipment
• RTACCRIT	AC or AC/rectifier power fail DCL equipment critical site
• RTACPWR	AC or AC/rectifier power fail DCL equipment
• RTACPWRENG	Commercial AC fail, site equipped with standby engine
• RTBAYPWR	AC power loss distributed power RT bay
• RTRVENG	Retrieve standby engine, commercial AC restored
• SMOKE	Smoke
• TEMP	High-low temperature
• TOXICGAS	Toxic gas
• TREPEATER	T-repeater shelf
• VENTN	Ventilation system failure
<OCRDAT>	(Optional) Date when the specific event or violation occurred, MM-DD.
<OVRTM>	(Optional) Time when the specific event or violation occurred, HH-MM-SS.
<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
• BTH	Both transmit and receive directions
• RCV	Receive direction only
<DESC>	(Optional) Condition description. DESC is a string.

## 21.33 RTRV-COND-EQPT

(Cisco ONS 15454) The Retrieve Condition Equipment (RTRV-COND-EQPT) command retrieves the equipment conditions.

### Usage Guidelines

None

**Category** Equipment

**Security** Retrieve

**Input Format** RTRV-COND-EQPT:[<TID>]:<AID>:<CTAG>::[<TYPEREQ>],[<LOCN>],[<DIRN>];

**Input Example** RTRV-COND-EQPT:TID:SLOT-1:229::LOS;

<b>Input Parameters</b>	<AID>	Access identifier from the “26.15 EQPT” section on page 26-37 that has an alarm condition.
	<TYPEREQ>	The type of condition to be retrieved. A null value is equivalent to ALL. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, NA conditions, and NR conditions. See Chapter 27, “Conditions” for a list of conditions.
	<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
	• FEND	Action occurs on the far end of the facility.
	• NEND	Action occurs on the near end of the facility.
	<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
	• BTH	Both transmit and receive directions
	• RCV	Receive direction only

**Output Format**

```

SID DATE TIME
M CTAG COMPLD
“<AID>,[<AIDTYPE>]:[<NTFCNCDE>],<TYPEREP>,[<SRVEFF>],[<OCRDAT>],
[<OCRTM>],[<LOCN>],[<DIRN>],[<DESC>]”
;

```

**Output Example**

```

TID-000 1998-06-20 14:30:00
M 001 COMPLD
“SLOT-1,EQPT:CR,LOS,SA,01-01,16-02-15,NEND,RCV,“LOS OF SIGNAL””
;

```

## Output Parameters

<AID>	Access identifier from the “26.15 EQPT” section on page 26-37 that has an alarm condition.
<AIDTYPE>	(Optional) Type of facility, link or other addressable entity targeted by the message. The parameter type is MOD2B, which is the alarm type.
• 1GFC	1-Gigabit Fibre Channel payload
• 1GFICON	1-Gigabit fiber connectivity payload
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• 4GFC	4-Gigabit Fibre Channel payload
• 4GFICON	4-Gigabit fiber connectivity payload
• 40GIGE	40-Gigabit Ethernet
• 5GIB	5Gbps InfiniBand (IB_5G) payload
• 8GFC	8-Gigabit Fibre Channel payload
• BITS	BITS alarm
• CHGRP	Channel group
• CLNT	Client facility for MXP/TXP cards
• COM	Common alarm
• DS1	DS1 alarm
• DS3I	DS3I alarm
• E100	E100 alarm
• E1000	E1000 alarm
• EC1	EC1 alarm
• ENV	ENV alarm
• EQPT	EQPT alarm
• FSTE	Fast Ethernet Port alarm
• G1000	G1000 alarm
• GIGE	Gigabit Ethernet port alarm
• HDLC	High-level data link control (HDLC) frame mode.
• ISC3PEER1G	1 Gbps ISC3 Peer
• ISC3PEER2G	2 Gbps ISC3 Peer
• ISC3PEER2R	1 Gbps or 2 Gbps ISC3 peer used in transparent (2R) mode
• ISCCOMPAT	1 Gbps ISC1, ISC2, and ISC3 compatibility
• MSISC	MSISC
• OC3	OC3 alarm
• OC12	OC12 alarm
• OC48	OC48 alarm
• OC192	OC192 alarm
• OC768	OC768 alarm
• OCH	Optical channel
• OMS	Optical Multiplex Section
• OTS	Optical Transport Section

• OTU3	Optical Transport Unit Level 3
• POS	POS port alarm
• REP	Resilient Ethernet Protocol
• STS1	STS1 alarm
• STS3C	STS3c alarm
• STS6C	STS6c alarm
• STS9C	STS9c alarm
• STS18C	STS18c alarm
• STS12C	STS12c alarm
• STS24C	STS24c alarm
• STS36C	STS36c alarm
• STS48C	STS48c alarm
• STS192C	STS192c alarm
• SYNCN	SYNCN alarm
• T1	T1 alarm
• T3	T3 alarm
• TCC	TCC alarm
• VT1	VT1 alarm
• VT2	VT2 alarm
<NTFCNCDE>	(Optional) Two-letter notification code. The parameter type is NOTIF_CODE, which is the two-character notification code associated with an autonomous message.
• CL	The condition causing the alarm has cleared.
• CR	A critical alarm.
• MJ	A major alarm.
• MN	A minor alarm.
• NA	The condition is not alarmed.
• NR	The alarm is not reported.
<TYPEREP>	The type of condition to be retrieved. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, NA conditions, and NR conditions. See <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.
<SRVEFF>	(Optional) The effect on service caused by the standing alarm or condition. The parameter type is SERV_EFF, which is the effect of the alarm on service.
• NSA	The condition is non-service affecting.
• SA	The condition is service affecting.
<OCRDAT>	(Optional) Date when the specific event or violation occurred, MM-DD.
<OCRTM>	(Optional) Time when the specific event or violation occurred.

<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
<ul style="list-style-type: none"> <li>• FEND</li> <li>• NEND</li> </ul>	<ul style="list-style-type: none"> <li>Action occurs on the far end of the facility.</li> <li>Action occurs on the near end of the facility.</li> </ul>
<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
<ul style="list-style-type: none"> <li>• BTH</li> <li>• RCV</li> </ul>	<ul style="list-style-type: none"> <li>Both transmit and receive directions</li> <li>Receive direction only</li> </ul>
<DESC>	(Optional) Condition description. DESC is a string.

## 21.34 RTRV-COND-SYNCN

(Cisco ONS 15454) The Retrieve Condition Synchronization (RTRV-COND-SYNCN) command retrieves the synchronization condition.

### Usage Guidelines

None

### Category

Synchronization

### Security

Retrieve

### Input Format

RTRV-COND-SYNCN:[<TID>]:<AID>:<CTAG>::[<TYPEREQ>],[<LOCN>],[<DIRN>];

### Input Example

RTRV-COND-SYNCN:TID:SYNC-NE:229::LOS;

### Input Parameters

<AID>	Access identifier from the <a href="#">“26.30 SYNC_REF”</a> section on <a href="#">page 26-58</a> that has an alarm condition.
<TYPEREQ>	The type of condition to be retrieved. A null value is equivalent to ALL. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, NA conditions, and NR conditions. See <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.

<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
• BTH	Both transmit and receive directions
• RCV	Receive direction only

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<AID>,[<AIDTYPE>]:[<NTFCNCDE>],<TYPEREP>,[<SRVEFF>],[<OCRDAT>],
[<OCR TM>],[<LOCN>],[<DIRN>],[<DESC>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“SYNC-NE,SYCN:MJ,FRNGSYCN,SA,01-01,16-02-15,,
\“FREE RUNNING SYNCHRONIZATION MODE\””
;
```

**Output Parameters**

<AID>	Access identifier from the <a href="#">“26.28 SYN”</a> section on page 26-56 that has an alarm condition.
<AIDTYPE>	(Optional) Type of facility, link or other addressable entity targeted by the message. The value is always SYCN. The parameter type is MOD2B, which is the alarm type.
• 1GFC	1-Gigabit Fibre Channel payload
• 1GFICON	1-Gigabit fiber connectivity payload
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• 4GFC	4-Gigabit Fibre Channel payload
• 4GFICON	4-Gigabit fiber connectivity payload
• 40GIGE	40-Gigabit Ethernet
• 5GIB	5Gbps InfiniBand (IB_5G) payload
• 8GFC	8-Gigabit Fibre Channel payload
• BITS	BITS alarm
• CHGRP	Channel group
• CLNT	Client facility for MXP/TXP cards
• COM	Common alarm
• DS1	DS1 alarm
• DS3I	DS3I alarm

• E100	E100 alarm
• E1000	E1000 alarm
• EC1	EC1 alarm
• ENV	ENV alarm
• EQPT	EQPT alarm
• FSTE	Fast Ethernet Port alarm
• G1000	G1000 alarm
• GIGE	Gigabit Ethernet port alarm
• HDLC	High-level data link control (HDLC) frame mode.
• ISC3PEER1G	1 Gbps ISC3 Peer
• ISC3PEER2G	2 Gbps ISC3 Peer
• ISC3PEER2R	1 Gbps or 2 Gbps ISC3 peer used in transparent (2R) mode
• ISCCOMPAT	1 Gbps ISC1, ISC2, and ISC3 compatibility
• MSISC	MSISC
• OC3	OC3 alarm
• OC12	OC12 alarm
• OC48	OC48 alarm
• OC192	OC192 alarm
• OC768	OC768 alarm
• OCH	Optical channel
• OMS	Optical Multiplex Section
• OTS	Optical Transport Section
• OTU3	Optical Transport Unit Level 3
• POS	POS port alarm
• REP	Resilient Ethernet Protocol
• STS1	STS1 alarm
• STS3C	STS3c alarm
• STS6C	STS6c alarm
• STS9C	STS9c alarm
• STS18C	STS18c alarm
• STS12C	STS12c alarm
• STS24C	STS24c alarm
• STS36C	STS36c alarm
• STS48C	STS48c alarm
• STS192C	STS192c alarm
• SYCN	SYCN alarm
• T1	T1 alarm
• T3	T3 alarm
• TCC	TCC alarm
• VT1	VT1 alarm
• VT2	VT2 alarm

<NTFCNCDE>	(Optional) Two-letter notification code. The parameter type is NOTIF_CODE, which is the two-character notification code associated with an autonomous message.
• CL	The condition causing the alarm has cleared.
• CR	A critical alarm.
• MJ	A major alarm.
• MN	A minor alarm.
• NA	The condition is not alarmed.
• NR	The alarm is not reported.
<TYPEREP>	The type of condition to be retrieved. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, NA conditions, and NR conditions. See <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.
<SRVEFF>	(Optional) The effect on service caused by the standing alarm or condition. The parameter type is SERV_EFF, which is the effect of the alarm on service.
• NSA	The condition is non-service affecting.
• SA	The condition is service affecting.
<OCRDAT>	(Optional) Date when the specific event or violation occurred, MM-DD.
<OVRTM>	(Optional) Time when the specific event or violation occurred, HH-MM-SS.
<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<DIRN>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
• BTH	Both transmit and receive directions
• RCV	Receive direction only
<DESC>	(Optional) Condition description. DESC is a string.

## 21.35 RTRV-CONSOLE-PORT

(Cisco ONS 15454) The Retrieve Console Port (RTRV-CONSOLE-PORT) command retrieves the status of the console port from the ML-Series cards.

**Usage Guidelines** None

## RTRV-COS-ETH

---

**Category** Security

---

**Security** Retrieve

---

**Input Format** RTRV-CONSOLE-PORT:[<TID>]:<AID>:<CTAG>;

---

**Input Example** RTRV-CONSOLE-PORT:CISCONODE:SLOT-2:123;

---

**Input Parameters**

<AID>	Access identifier from the <a href="#">“26.15 EQPT”</a> section on page 26-37.
-------	--

---

**Output Format**

```

SID DATE TIME
M CTAG COMPLD
  “<EQPT>:[PORT=<PORT>]”
;

```

---

**Output Example**

```

TID-000 1998-06-20 14:30:00
M 001 COMPLD
  “SLOT-2:PORT=ENABLED”
;

```

---

**Output Parameters**

<EQPT>	Identifies the slot number for the data card. EQPT is a string.
<PORT>	(Optional) Status of the console port on the data card. The parameter type is PORTSTAT, which is the status of the console port on the card.
• DISABLED	The port is disabled.
• ENABLED	The port is enabled.

## 21.36 RTRV-COS-ETH

(Cisco ONS 15454) The Retrieve Cost of Service Ethernet (RTRV-COS-ETH) command retrieves the egress parameters of a CoS table associated to an L2 Ethernet port.

---

**Usage Guidelines** None

---

**Category** Ethernet

**Security** Provisioning

**Input Format** RTRV-COS-ETH:[<TID>]:<AID>:<CTAG>[:::];

**Input Example** RTRV-COS-ETH:TID:ETH-1-1-1:CTAG;

**Input Parameters**

<AID>	Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the “26.16 ETH” section on page 26-40.
-------	---

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<AID>::[QOSENABLED=<QOSENABLED>],[BW0=<BWO>],
[WEIGHT0=<WEIGHT0>],[BW1=<BW1>],[WEIGHT1=<WEIGHT1>],[BW2=<BW2>],
[WEIGHT2=<WEIGHT2>],[BW3=<BW3>],[WEIGHT3=<WEIGHT3>],[BW4=<BW4>],
[WEIGHT4=<WEIGHT4>],[BW5=<BW5>],[WEIGHT5=<WEIGHT5>],[BW6=<BW6>],
[WEIGHT6=<WEIGHT6>],[BW7=<BW7>],[WEIGHT7=<WEIGHT7>][:]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“ETH-5-1-1::QOSENABLED=Y,BW0=10,WEIGHT0=0,BW1=20,WEIGHT1=2,BW2=40,
WEIGHT2=4,BW3=60,WEIGHT3=6,BW4=70,WEIGHT4=8,BW5=80,WEIGHT5=10,BW6=85,
WEIGHT6=12,BW7=100,WEIGHT7=15:”
;
```

**Output Parameters**

<AID>	Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the “26.16 ETH” section on page 26-40.
<QOSENABLED>	Used to enable or disable the egress quality of service (QoS) policy of an L2 Ethernet port.
• N	Disable the service
• Y	Enable the service
<BWO>	Bandwidth percentage, a value between 0 and 100
<WEIGHT0>	Value represents the weighted round-robin (WRR) weight associated to the CoS values. It is an integer value ranging between 0 and 15.
<BW1>	Bandwidth percentage, a value between 0 and 100
<WEIGHT1>	Value represents the WRR weight associated to the CoS values. It is an integer value ranging between 0 and 15.
<BW2>	Bandwidth percentage, a value between 0 and 100
<WEIGHT2>	Value represents the WRR weight associated to the CoS values. It is an integer value ranging between 0 and 15.

<BW3>	Bandwidth percentage, a value between 0 and 100
<WEIGHT3>	Value represents the WRR weight associated to the CoS values. It is an integer value ranging between 0 and 15.
<BW4>	Bandwidth percentage, a value between 0 and 100
<WEIGHT4>	Value represents the WRR weight associated to the CoS values. It is an integer value ranging between 0 and 15.
<BW5>	Bandwidth percentage, a value between 0 and 100
<WEIGHT5>	Value represents the WRR weight associated to the CoS values. It is an integer value ranging between 0 and 15.
<BW6>	Bandwidth percentage, a value between 0 and 100
<WEIGHT6>	Value represents the WRR weight associated to the CoS values. It is an integer value ranging between 0 and 15.
<BW7>	Bandwidth percentage, a value between 0 and 100
<WEIGHT7>	Value represents the WRR weight associated to the CoS values. It is an integer value ranging between 0 and 15.

## 21.37 RTRV-CRS

(Cisco ONS 15454) The Retrieve Cross-Connect (RTRV-CRS) command retrieves all the cross-connections based on the required PATH types.

### Usage Guidelines

- This command retrieves all the STS and/or VT cross-connections on the NE, or on the specified shelf, card, or port.
- A NULL AID defaults to ALL (NE).
- A NULL PATH defaults to all the existing cross-connections.
- Both DRITYPE and DRINODE optional fields are available to support MSSPR-DRI. DRITYPE is applied only if the cross-connect is a drop-and-continue connection (1WAYDC or 2WAYDC), and defaults to SNCP for the DRI. DRINODE must be specified only if at least one end of the connection is on the MS-SPRing, and defaults to NA.
- CKTID is a string of ASCII characters. The maximum length of CKTID is 48. If the CKTID is EMPTY or NULL it will not appear.
- VC values in CRS\_TYPE are not supported in this command.

### Category

Cross Connections

### Security

Retrieve

### Input Format

RTRV-CRS:[<TID>]:[<AID>]:<CTAG>:::[CRSTYPE=<CRSTYPE>][:];

**Input Example**

```
RTRV-CRS:CISCO:ALL:123:::CRSTYPE=STS;
```

**Input Parameters**

<AID>	Access identifier from the “ <a href="#">26.12 CrossConnectId1</a> ” section on page 26-29 that can be EQPT, Facility, STS, VT, or ALL. The ALL AID defaults to NE, which means it reports all the existing cross-connections on the NE. A null value is equivalent to ALL.
<CRSTYPE>	The cross-connection type. Defaults to all existing cross-connections. A null value is equivalent to ALL. The parameter type is PATH, which is the modifier for path commands.  <b>Note</b> The cross-connection type cannot be VT, if the AID specified is an STS AID.
• STS1	Synchronous transport signal/module level 1 (51.84 Mbps)
• STS3C	Synchronous transport signal/module level 3 concatenated (155.52 Mbps)
• STS6C	Synchronous transport signal/module level 6 (311.04 Mbps)
• STS9C	Synchronous transport signal/module level 9 concatenated (466.56 Mbps)
• STS12C	Synchronous transport signal/module level 12 concatenated (622.08 Mbps)
• STS18C	Synchronous transport signal/module level 18 concatenated (933.12 Mbps)
• STS24C	Synchronous transport signal/module level 24 concatenated (1244.16 Mbps)
• STS36C	Synchronous transport signal/module level 36 concatenated (1866.24 Mbps)
• STS48C	Synchronous transport signal/module level 48 concatenated (2488.32 Mbps)
• STS192C	Synchronous transport signal/module level 192 concatenated (9953.28 Mbps)
• VT1	Virtual Tributary 1
• VT2	Virtual Tributary 2

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<SRC>,<DST>:<CCT>,<CRSTYPE>:[DRITYPE=<DRITYPE>],[DRINODE=<SYNCSW>],
[CKTID=<CKTID>]:<PST_PSTQ>,[<SSTQ>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“STS-5-1-2&STS-6-1-2,STS-12-1-2&STS-13-1-2:1WAYDC,STS1:DRITYPE=BLSR,
DRINODE=PRI,CKTID=CKTID:OOS-AU,AINS”
;
```

## Output Parameters

<SRC>	Source access identifier from the “ <a href="#">26.11 CrossConnectId</a> ” section on page 26-25. Indicates the source AID(s) of the cross-connection. SRC is listable.
<DST>	Destination AID of the cross-connection from the “ <a href="#">26.11 CrossConnectId</a> ” section on page 26-25. DST is listable.
<CCT>	Type of connection. Used for specifying one or two-way connections. The parameter type is CCT, which is the type of cross-connect to be created.
• 1WAY	A unidirectional connection from a source tributary to a destination tributary
• 1WAYDC	Path Protection multicast drop with one-way continue
• 1WAYEN	Path Protection multicast end node with one-way continue
• 1WAYMON	A bidirectional connection between the two tributaries  <b>Note</b> In ONS 15454 Software Release 3.0 and later, 1WAYMON is not supported with TL1. However, it is still supported from Cisco Transport Controller (CTC). Using CTC, you can create 1WAYMON cross-connects that can be retrieved with TL1.
• 1WAYPCA	A unidirectional connection from a source tributary to a destination tributary on the protection path/fiber
• 2WAY	A bidirectional connection between the two tributaries
• 2WAYDC	A bidirectional drop and continue connection applicable only to path protection traditional and integrated DRIs
• 2WAYPCA	A bidirectional connection between the two tributaries on the extra protection path/fiber
• DIAG	Diagnostics cross-connect. Supports BERT (BLSR PCA diagnostics cross-connect).
<CRSTYPE>	The cross-connection type. The parameter type is CRS_TYPE, which is the cross-connection type.  <b>Note</b> The cross-connection type cannot be VT, if the AID specified is an STS AID.
• STS	Indicates all the STS cross-connections
• STS1	STS1 cross-connect
• STS3C	STS3c cross-connect
• STS6C	STS6c cross-connect
• STS9C	STS9c cross-connect
• STS12C	STS12c cross-connect
• STS18C	STS18c cross-connect
• STS24C	STS24c cross-connect
• STS36C	STS36c cross-connect
• STS48C	STS48c cross-connect
• STS192C	STS192c cross-connect
• VT	Indicates all the VT1 cross-connections
• VT1	VT1 cross-connect
• VT2	VT2 cross-connect

<DRITYPE>	(Optional) The DRI connection type. It is applied only if the cross-connection is a drop-and-continue connection type (1WAYDC or 2WAYDC), and defaults to path protection for the DRI configuration. The parameter type is DRITYPE (DRI type).
• BLRS	BLSR DRI type
• Path Protection	Path Protection DRI type
• Path Protection-BLSR	Path Protection-BLSR hand-off DRI type
<DRINODE>	(Optional) Synchronization switch AID from the “26.31 SYNC SW” section on page 26-58.
<CKTID>	(Optional) Circuit identification parameter that contains a common language ID or other alias of the circuit being provisioned. It cannot contain blank spaces. CKTID is a string.
<PST_PSTQ>	Primary state and primary state qualifier separated by a colon. The parameter type is PST_PSTQ, which is the service state of the entity described by the PST and PSTQ.
• IS-NR	In Service and Normal
• OOS-AU	Out of Service and Autonomous
• OOS-AUMA	Out of Service and Autonomous Management
• OOS-MA	Out of Service and Management
<SSTQ>	(Optional) One or more secondary states separated by “&”, in alphabetical order. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic In-Service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of Equipment
• MT	Maintenance
• OOG	Out of Group
• SWDL	Software Download
• UAS	Unassigned
• UEQ	Unequipped

## 21.38 RTRV-CRS-<PATH>

(Cisco ONS 15454) The Retrieve Cross-Connect for STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, STS9C, VT1, or VT2 (RTRV-CRS-<PATH>) command retrieves any connections associated with the entered AID(s) or AID range. The information on both ends is returned along with the type of connection.

### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.



#### Note

- The path protection STS cross-connection can be retrieved by using “&” in the AID fields of this command.

- To retrieve a 1-way selector or 2-way selector and bridge cross-connection with:  
 from points: F1, F2  
 to points: T1  
 the output will be:  
 1-way  
 "F1&F2,T1:CCT,STS3C"  
 2-way  
 If retrieved on point F1 or F2, the output format is the same as the 1-way output.  
 If retrieved on point T1, the output will be:  
 "T1,F1&F2:CCT,STS3C"
- To retrieve a 1-way bridge or 2-way selector and bridge cross-connection with:  
 from point: F1  
 to points: T1, T2  
 the output will be:  
 1-way  
 "F1,T1&T2:CCT,STS3C"  
 2-way  
 "T1&T2,F1:CCT,STS3C"
- To retrieve a 1-way subtending path protection connection or 2-way subtending path protection cross-connection with:  
 from point: F1, F2  
 to points: T1, T2  
 the output will be:  
 1-way:  
 "F1&F2,T1&T2:CCT,STS3C"  
 2-way:  
 If retrieved on point F1 or F2, the output format is the same as the 1-way output.  
 If retrieved on point T1 or T2, the output will be:  
 "T1&T2,F1&F2:CCT,STS3C"
- To retrieve a 2-way selector and bridge cross-connection with:  
 ENT-CRS-<PATH>::F1&F2,S1&S2:<CTAG>::2WAY;  
 from points: F1, F2 (F1 is the working side, F2 is the protect side)  
 selector: S1, S2 (S1 is the working side, S2 is the protect side)  
 the output will be:  
 If retrieved on point F1 or F2, the output will be:  
 "F1&F2,S1&S2:CCT,STS3C"  
 If retrieved on selector S1 or S2, the output will be:  
 "S1&S2,F1&F2:CCT,STS3C"

- To retrieve a path protection IDRI cross-connect with:  
from points: F1, F2  
to points: T1, T2  
the output will be:  
“F1&F2,T1&T2:CCT,STS3C”
- To retrieve a path protection DRI cross-connect with:  
from points: F1, F2  
to points: T1  
the output will be:  
“F1&F2,T1:CCT,STS3C”
- All A&B AIDs in the TL1 cross-connection command are in the format of WorkingAID&ProtectAID.
- STS\_PATH does not include STS for the RTRV-CRS command because STS is not a standard designator as defined by Telcordia GR-833, Section A-2.
- Both the 1WAYPCA and 2WAYPCA is used to specify a PCA cross-connection.
- The facility AID is only valid on slots with a G1K-4 card.
- The virtual facility AID (VFAC) is only valid on slots holding the ML-Series card.
- Both DRITYPE and DRINODE optional fields are available to support BLSR-DRI. DRITYPE is applied only if the cross-connect is a drop-and-continue connection (1WAYDC or 2WAYDC), and defaults to path protection for the DRI. DRINODE must be specified only if at least one end of the connection is on the BLSR, and defaults to NA.
- The DS3XM-12 card allows portless STS1/VT1.5 cross-connection provisioning on the PORTLESS ports.

<b>Category</b>	Cross Connections
<b>Security</b>	Retrieve
<b>Input Format</b>	RTRV-CRS-<PATH>:[<TID>]:<SRC>:<CTAG>[:::];
<b>Input Example</b>	RTRV-CRS-STS3C:KENWOOD:STS-6-1-1:223;
<b>Input Parameters</b>	<SRC> Source access identifier from the <a href="#">“26.12 CrossConnectId1”</a> section on page 26-29.

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<SRC>,<DST>:<CCT>,<MOD>:[DRITYPE=<DRITYPE>],[DRINODE=<SYNCSW>],
[CKTID=<CKTID>]:<PST_PSTQ>,[<SSTQ>]"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"STS-5-1-2&STS-6-1-2,STS-12-1-2&STS-13-1-2:1WAYDC,STS1:DRITYPE=BLSR,
DRINODE=PRI,CKTID=CKTID:OOS-AU,AINS"
;
```

**Output Parameters**

<SRC>	Source access identifier from the <a href="#">“26.11 CrossConnectId” section on page 26-25</a> . Indicates the source AID(s) of the cross-connection. SRC is listable.
<DST>	Destination AID of the cross-connection from the <a href="#">“26.11 CrossConnectId” section on page 26-25</a> . DST is listable.
<CCT>	Type of connection. Used for specifying one or two-way connections. The parameter type is CCT, which is the type of cross-connect to be created.
<ul style="list-style-type: none"> <li>• 1WAY</li> </ul>	A unidirectional connection from a source tributary to a destination tributary
<ul style="list-style-type: none"> <li>• 1WAYDC</li> </ul>	Path Protection multicast drop with one-way continue
<ul style="list-style-type: none"> <li>• 1WAYEN</li> </ul>	Path Protection multicast end node with one-way continue
<ul style="list-style-type: none"> <li>• 1WAYMON</li> </ul>	A bidirectional connection between the two tributaries  <b>Note</b> With ONS 15454 Software R3.0 and later, 1WAYMON is not supported with TL1. However, it is still supported from CTC. Using CTC, you can create 1WAYMON cross-connects and can be retrieved by TL1.
<ul style="list-style-type: none"> <li>• 1WAYPCA</li> </ul>	A unidirectional connection from a source tributary to a destination tributary on the protection path/fiber
<ul style="list-style-type: none"> <li>• 2WAY</li> </ul>	A bidirectional connection between the two tributaries
<ul style="list-style-type: none"> <li>• 2WAYDC</li> </ul>	A bidirectional drop and continue connection applicable only to path protection traditional and integrated dual-ring interconnects
<ul style="list-style-type: none"> <li>• 2WAYPCA</li> </ul>	A bidirectional connection between the two tributaries on the extra protection path/fiber
<ul style="list-style-type: none"> <li>• DIAG</li> </ul>	Diagnostics cross-connect. Supports BERT (BLSR PCA diagnostics cross-connect)
<MOD>	The connection path bandwidth. The parameter type is MOD2, which is the line/path modifier.
<ul style="list-style-type: none"> <li>• 10GFC</li> </ul>	10-Gigabit Fibre Channel payload
<ul style="list-style-type: none"> <li>• 10GIGE</li> </ul>	10-Gigabit Ethernet
<ul style="list-style-type: none"> <li>• 1GFC</li> </ul>	1-Gigabit Fibre Channel payload
<ul style="list-style-type: none"> <li>• 1GFICON</li> </ul>	1-Gigabit fiber connectivity payload

• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• 4GFC	4-Gigabit Fibre Channel payload
• 4GFICON	4-Gigabit fiber connectivity payload
• D1VIDEO	D1 Video
• DS1	DS1 line of a DS3XM card
• DS3I	DS3I line
• DV6000	DV6000
• EC1	EC1 facility
• ESCON	ESCON
• ETRCLO	ETR_CLO
• FSTE	FSTE facility
• G1000	G1000 facility
• GFPOS	GFP over POS. Virtual ports partitioned using GFP's multiplexing capability.
• GIGE	Gigabit Ethernet
• HDTV	HDTV
• ISC3PEER1G	1 Gbps ISC3 Peer
• ISC3PEER2G	2 Gbps ISC3 Peer
• ISC3PEER2R	1 Gbps or 2 Gbps ISC3 peer used in transparent (2R) mode
• ISCCOMPAT	1 Gbps ISC1, ISC2, and ISC3 compatibility
• OC3	OC3 facility
• OC12	OC12 facility
• OC48	OC48 facility
• OC192	OC192 facility
• OCH	Optical channel
• OCHCC	OCH client connection
• OCHNC	OCH network connection
• OCHTERM	OCH termination
• OMS	Optical Multiplex Section
• OTS	Optical Transport Section
• POS	POS port
• STS1	STS1 path
• STS3C	STS3c path
• STS6C	STS6c path
• STS9C	STS9c path
• STS18C	STS18c path
• STS12C	STS12c path
• STS24C	STS24c path
• STS36C	STS36c path
• STS48C	STS48c path
• STS192C	STS192c path

• T1	T1/DS1 facility/line
• T3	T1/DS1 facility/line
• VT1	VT1 path
• VT2	VT2 path
<DRITYPE>	(Optional) The DRI connection type. It is applied only if the cross-connection is a drop-and-continue connection type (1WAYDC or 2WAYDC), and defaults to path protection for the DRI configuration. The parameter type is DRITYPE (DRI type).
• BLRS	BLSR DRI type
• Path Protection	Path Protection DRI type
• Path Protection-BLSR	Path Protection-BLSR hand-off DRI type
<SYNCSW>	(Optional) Synchronization switch AID from the “26.31 SYNCSW” section on page 26-58.
<CKTID>	(Optional) A string of ASCII characters. Maximum length is 48. CKTID is a string.
<PST_PSTQ>	Primary state and primary state qualifier separated by a colon. The parameter type is PST_PSTQ, which is the service state of the entity described by the PST and PSTQ.
• IS-NR	In Service and Normal
• OOS-AU	Out of Service and Autonomous
• OOS-AUMA	Out of Service and Autonomous Management
• OOS-MA	Out of Service and Management
<SSTQ>	(Optional) One or more secondary states separated by “&”, in alphabetical order. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic In-Service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of Equipment
• MT	Maintenance
• OOG	Out of Group
• SWDL	Software Download
• UAS	Unassigned
• UEQ	Unequipped

## 21.39 RTRV-CRS-ETH

(Cisco ONS 15454)

This command retrieve an Ethernet Connection between two or more ethernet connection end points within ethernet facilities.

### Usage Guidelines

This command accept the ALL AID. Use one of the specified ethernet end points and the connection end point identifier associated in order to identify a cross-connection inside the node.

**Category** ETHERNET

**Security** Retrieve

**Input Format** RTRV-CRS-ETH:[<TID>]:<aid>:<CTAG>[:::];

**Input Example**  
 RTRV-CRS-ETH:TID:ALL:CTAG;  
 RTRV-CRS-ETH:TID:ETH-5-1-1-ALL:CTAG;  
 RTRV-CRS-ETH:TID:ETH-1-1-1-11:CTAG;

### Input Parameters

**Table 21-3** Input Parameter Support

Parameter	Description
<AID>	Ethernet connection identifier AIDs used to access L2 ethernet connection end point.
<ul style="list-style-type: none"> <li>ALL</li> </ul>	The ALL aid is applicable for RTRV-only commands, basically the RTRV-rr type of commands.
<ul style="list-style-type: none"> <li>ETHID[-{1-12}]-{1-5,12-16}-{1-22}-1-{1-20}</li> </ul>	Ethernet connection end point aid for GE-XP card.
<ul style="list-style-type: none"> <li>ETHID[-{1-12}]-{1-6,12-17}-{1-4}-1-{1-20}</li> </ul>	Facility aid for 10GE-XP card.

**Output Format**  
 SID DATE TIME  
 M CTAG COMPLD  
 "<SRC>,<DST>:<ECT>:[<CKTID=<CKTID>]:<PSTPSTQ>,<SSTQ>";

**Output Example**  
 TID-000 1998-06-20 14:30:00  
 M 001 COMPLD  
 "ETH-1-1-1-13,ETH-1-21-1-13&ETH-1-22-1-13:2WAY:CKTID=ETHERNET:IS-NR";

### Output Parameters

<SRC>	Ethernet connection identifier AIDs used to access L2 ethernet connection end point.
<ul style="list-style-type: none"> <li>ALL</li> </ul>	The ALL aid is applicable for RTRV-only commands, basically the RTRV-rr type of commands.
<ul style="list-style-type: none"> <li>ETHID[-{1-12}]-{1-5,12-16}-{1-22}-1-{1-20}</li> </ul>	Ethernet connection end point aid for GE-XP card.

• ETHID[-{1-12}]-{1-6,12-17} -{1-4}-1-{1-20}	Facility aid for 10GE-XP card.
<DST>	Ethernet connection identifier AIDs used to access L2 ethernet connection end point.
• ALL	The ALL aid is applicable for RTRV-only commands, basically the RTRV-rr type of commands.
• ETHID[-{1-12}]-{1-5,12-16} -{1-22}-1-{1-20}	Ethernet connection end point aid for GE-XP card.
• ETHID[-{1-12}]-{1-6,12-17} -{1-4}-1-{1-20}	Facility aid for 10GE-XP card.
<ECT>	Defines the type of cross-connect to be created. It is a subset of the CCT.
• 2WAY	A bidirectional connection between the two tributaries
<CKTID>	Circuit identification parameter contains the Common Language Circuit ID or other alias of the circuit being provisioned.
<PST-PSTQ >	Service State of the entity described by the Primary State (PST) and a Primary State Qualifier (PSTQ)
• IS-NRorUnlocked-Enabled	In Service - Normal
• OOS-AUorUnlocked-Disabled	Out of Service - Autonomous
• OOS-AUMAorLocked-Disabl ed	Out of Service - Autonomous and Management
• OOS-MTorLocked-Enabled	Out of Service - Management
<SST>	Secondary State. This parameter provides additional information pertaining to PST and PSTQ.
AINSorAutomaticInService	Automatic In Service State Transition.
DSBLDorDisabled	Disabled

## 21.40 RTRV-DFLT-SECU

(Cisco ONS 15454) The Retrieve Default Security (RTRV-DFLT-SECU) command retrieves the system-wide default values associated with several security parameters.

**Usage Guidelines** None

**Category** Security

**Security** Superuser

**Input Format** RTRV-DFLT-SECU:[<TID>]:<AID>:<CTAG>;

**Input Example**

```
RTRV-DFLT-SECU:CISCO:ALL:123;
```

**Input Parameters**

<AID>	Access identifier. ALL is the only acceptable value. AID is a string.
-------	---

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<NE>;PAGE=<PAGE>;PCND=<PCND>;MXINV=<MXINV>;DURAL=<DURAL>;
TMOUT=<TMOUT>;UOUT=<UOUT>;PFRCD=<PFRCD>;POLD=<POLD>;PINT=<PINT>;
LOGIN=<LOGIN>;PRIVLVL=<PRIVLVL>];[PDIF=<PDIF>]"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"TCC2;PAGE=40;PCND=5;MXINV=5;DURAL=30;TMOUT=0;UOUT=60;PFRCD=NO;
POLD=5;PINT=20;LOGIN=MULTIPLE;PRIVLVL=RTRV;PDIF=1"
;
```

**Output Parameters**

<NE>	The node name of the NE where the system values are to be retrieved.
<PAGE>	Password aging interval. It is the number of days before a user is prompted to change his or her password. 0 indicates the policy is turned off and is the default. If PAGE is turned on for all privilege levels and is not specified for each privilege level, it defaults to 45 days. PAGE ranges from 20 to 90 days. PAGE is an integer.
<PCND>	Number of days a password can be used before a new one is mandatory (for example, the warning period). Default is 5 days. PCND ranges from 2 to 20 days. PCND is an integer.
<MXINV>	Maximum number of consecutive and invalid session set up attempts allowed to occur before an intrusion attempt is suspected (for example, "Failed Logins Before Lockout" from CTC). 0 indicates the policy is turned off. Default is 5. MXINV ranges from 0 to 10. MXINV is an integer.
<DURAL>	Time interval (in seconds) during which a user ID is locked out when an intrusion attempt is suspected (for example, the "Lockout Duration"). If the user is locked out until unlocked by a Superuser, DURAL=INFINITE. Default is 30 seconds. DURAL ranges from 0 to 600 seconds. DURAL is 0 for RTRV users, 60 minutes for MAINT users, 30 minutes for PROV users, and 15 minutes for SUPER users. DURAL is a string.
<TMOUT>	Interval (in minutes) after which a session is terminated if no messages are exchanged between the user and the NE. 0 indicates that the session will not timeout. TMOUT is an integer.

<UOUT>	UID aging interval, expressed in days. If a userid has not been used in UOUT days, the user will be forced to change his/her password (or logout) at the next login. No other command is allowed until the password has been changed. 0 indicates the policy is turned off and is the default. UOUT ranges from 1 to 99 days. UOUT is an integer.
<PFRCD>	Indicates if a password change is required when a new user establishes a session to the NE for the first time. (For example, "Require password change on 1st login"). Default is NO. The parameter type is YES_NO, which indicates whether the user's password is about to expire, the user is logged into the NE or the user is locked out of the NE.
<ul style="list-style-type: none"> <li>• NO</li> <li>• YES</li> </ul>	<p>Password change is not required.</p> <p>Password change is required.</p>
<POLD>	Number of prior passwords that cannot be reused (for example, "Prevent reusing last X passwords"). Default is 1. POLD ranges from 1 to 10. POLD is an integer.
<PINT>	Number of days that must pass before a password can be changed. If PINT is 0, the policy is turned off. Default is off. PINT ranges from 20 to 95 days. PINT is an integer.
<LOGIN>	Number of times a user can log into an NE. LOGIN is either SINGLE or MULTIPLE. If LOGIN is SINGLE, a user can only log into an NE one time with any given userid, regardless of the method of login (for example, CTC, TL1, etc.). Default is MULTIPLE. The parameter type is USER_LOGINS, which is the number of times a user can log into the same NE with the same user ID.
<ul style="list-style-type: none"> <li>• MULTIPLE</li> <li>• SINGLE</li> </ul>	<p>A user can log into the same NE many times.</p> <p>A user can log into the NE only once (includes both CTC and TL1 sessions).</p>
<PRIVLVL>	Parameter type is PRIVILEGE, which is the security level.
<ul style="list-style-type: none"> <li>• MAINT</li> <li>• PROV</li> <li>• RTRV</li> <li>• SUPER</li> </ul>	<p>Maintenance security level. Unlimited idle time.</p> <p>Provision security level. 60 minutes of idle time.</p> <p>Retrieve security level. 30 minutes of idle time.</p> <p>Superuser security level. 15 minutes of idle time.</p>
<PDIF>	(Optional) Indicates how many characters must differ between old and new passwords. Default minimum character difference is 1. Ranges from 1 to 5 characters. PDIF is an integer.

## 21.41 RTRV-DS1

(Cisco ONS 15454) The Retrieve DS1 (RTRV-DS1) command retrieves the test access attributes on a DS1 layer of a DS3XM card.



### Note

Frame format is not applicable to even port less ports on DS3XM-12 card and cannot be retrieved through RTRV-DS1 command.

**Usage Guidelines**

- Both the MODE and the FMT fields of this command are applied for the DS3XM-12 card only.
- If the DS1 mode of the DS3XM-12 is ATT, the DS1 path can retrieve AT&T/54016 FEND PM counts up to 96 15-minute intervals; if the DS1 mode of the DS3XM-12 is FDL, the DS1 path can retrieve FDL/T1-403 FEND PM counts up to 32 15-minute intervals in RTRV-PM-DS1.
- For the DS3XM-12 card, the DS1 frame format NE default is AUTO\_PROV\_FMT for the first 30 seconds to determine the real format. After 30 seconds, the DS1 frame format is the detected frame. If the frame format is not determined, it will be in the UNFRAMED format.
- For the preprovisioning DS3XM-12 card, its DS1 frame format defaults to UNFRAMED.
- For the DS3XM-12 card, the DS1-configurable attributes (PM, TH, alarm, etc.) only apply to the ported ports (1 to 12) and the VT-mapped (odd) portless ports in xxx-xxx-DS1 commands. Provisioning or retrieving DS1 attributes on the DS3-mapped (even) portless ports in xxx-xxx-DS1 commands is not allowed.
- The parameters BERTMODE, BERTPATTERN, BERTERRCOUNT, BERTERRRATE, and BERTSYNCSTATUS apply only to DS1/E1-56 and DS3XM-12 cards
- BERT is implemented on a single port.

**Category**

Ports

**Security**

Retrieve

**Input Format**

RTRV-DS1:[&lt;TID&gt;]:&lt;DS1AID&gt;:&lt;CTAG&gt;[:[:]];

**Input Example**

RTRV-DS1:PETALUMA:DS1-2-1-6-12:123;

**Input Parameters**

<b>&lt;DS1AID&gt;</b>	The DS1 path access identifier of the DS3XM card from the “26.13 DS1” section on page 26-36.
-----------------------	--

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<AID>::[TACC=<TACC>],[TAPTYPE=<TAPTYPE>],[AISONLPBK=<AISONLPBK>],
[MODE=<MODE>],[FMT=<FMT>],[BERTMODE=<BERTMODE>],
[BERTPATTERN=<BERTPATTERN>],[BERTERRCOUNT=<BERTERRCOUNT>],
[BERTERRRATE=<BERTERRRATE>],[BERTSYNCSTATUS=<BERTSYNCSTATUS>]";
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"DS1-2-1-6-12::TACC=8,TAPTYPE=SINGLE,MODE=FDL,FMT=ESF,BERTMODE=NONE,
BERTPATTERN=NONE,BERTERRCOUNT=0,BERTERRRATE=NONE,
BERTSYNCSTATUS=N";
```

## Output Parameters

<AID>	(Optional) Access identifier from the “26.13 DS1” section on page 26-36.
<TACC>	(Optional) Indicates whether the digroup being provisioned is to be used as a test access digroup. Default is N. TACC is an integer.
<TAPTYPE>	(Optional) TAP type. The parameter type is TAPTYPE, which is the test access point type.
• DUAL	Dual FAD
• SINGLE	Single FAD
<AISONLPBK>	(Optional) AIS on loopback. The parameter type is AIS_ON_LPBK, which indicates if an AIS is sent on a loopback.
• AIS_ONLPBK_FACILITY	AIS is sent on facility loopbacks.
• AIS_ON_LPBK_ALL	AIS is sent on all loopbacks.
• AIS_ON_LPBK_OFF	AIS is not sent on loopbacks.
• AIS_ON_LPBK_TERMINAL	AIS is sent on terminal loopbacks.
<MODE>	(Optional) Mode. The parameter type is DS1MODE, which is the DS1 path mode of the DS3XM-12 card
• ATT	Indicates the DS1 path of the DS3XM-12 is in AT&T 54016 mode.
• FDL	Indicates the DS1 path of the DS3XM-12 is in FDL T1-403 mode.
<FMT>	(Optional) Digital signal frame format. The parameter type is FRAME_FORMAT, which is the frame format for a T1 port.
• D4	Frame format is D4.
• ESF	Frame format is ESF.
• UNFRAMED	Frame format is unframed.
<BERTMODE>	Specifies the mode [Test Pattern Generator (TPG) or Test Pattern Monitor (TPM)] of the port for BERT.
• NONE	BERT mode not enabled.
• TPGM-L	Test pattern generator and monitor on line side.
• TPGM-B	Test pattern generator and monitor on backplane.
• TPG-L	Test pattern generator on line side.
• TPM-L	Test pattern monitor on line side.
• TPG-B	Test pattern generator on backplane.
• TPM-B	Test pattern monitor on backplane.
<BERTPATTERN>	Specifies the error pattern to be injected for BERT.
• NONE	BERT pattern not enabled.
• PRBS15	PRBS15 test pattern.
• PRBS20	PRBS20 test pattern.
• PRBS23	PRBS23 test pattern.
• QRSS	QRSS test pattern.
• ALT-ONE-ALT-ZERO	Alternate one and zero pattern.
<BERTERRCOUNT>	Integer value. Value -1 indicates that BERT is disabled/not supported.
<BERTERRRATE>	Specifies the BERT error rate received.
• NONE	No bit errors.

• SINGLE	Single bit error.
• 1E-3	Bit errors in 1E-3 rate.
• 1E-4	Bit errors in 1E-4 rate.
• 1E-5	Bit errors in 1E-5 rate.
• 1E-6	Bit errors in 1E-6 rate.
<BERTSYNCSTATUS>	Synchronization status of BERT values. The parameter type is Y_N, which specifies if synchronization status is up or down.
• Y	BERT synchronization status is up.
• N	BERT synchronization status is down.

## 21.42 RTRV-DSCP-<MOD2>

(Cisco ONS 15454) The RTRV-DSCP-<MOD2> command retrieves Differentiated Service Code Points (DSCP) to COS conversion table associated to a L2 ethernet port or a channel group.

### Usage Guidelines

This command is applicable when the INGRESSCOS parameter is set to DSCP value on the ethernet port or channel group.

### Category

Ethernet or Channel Group

### Security

Retrieve

### Input Format

RTRV-DSCP-MOD2:[<TID>]:<AID>:<CTAG>::[<COS>][:];

### Input Example

```
RTRV-DSCP-ETH::ETH-5-1-1:1234;
RTRV-DSCP-CHGRP::CHGRP-1-1:1234::3;
```

### Input Parameters

Input Parameters	Description
<AID>	Access identifier.
• Ethernet	Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the <a href="#">“26.16 ETH”</a> section on page 26-40.
• Channel Group	Access identifier from the <a href="#">“26.9 CHGRP”</a> section on page 26-24.

### Output Format

```
SID DATE TIME
M CTAG COMPLD
“AID>:<COS>:[DSCPFIRST=<DSCP_FIRST>],[DSCPLAST=<DSCP_LAST>];”
;
```

```

Output Example
TID-000 1998-06-20 14:30:00
M 001 COMPLD
  "ETH-5-1-1:0:DSCPFIRST=0,DSCPLAST=9:"
;

TID-000 1998-06-20 14:30:00
M 001 COMPLD
  "CHGRP-5-1-1:0:DSCPFIRST=0,DSCPLAST=9:"
;

```

Output Parameters		
<AID>		Access identifier.
	<ul style="list-style-type: none"> <li>Ethernet</li> </ul>	Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the <a href="#">"26.16 ETH" section on page 26-40.</a>
	<ul style="list-style-type: none"> <li>Channel Group</li> </ul>	Access identifier from the <a href="#">"26.9 CHGRP" section on page 26-24.</a>
<INGRESSCOS>		Identifies the COS value set in the S-VLAN tag.
	<ul style="list-style-type: none"> <li>0 to 7</li> </ul>	Cos value
	<ul style="list-style-type: none"> <li>DSCP</li> </ul>	The COS set according to DSCP to COS mapping table.
	<ul style="list-style-type: none"> <li>TRUST</li> </ul>	The Customer COS
	<ul style="list-style-type: none"> <li>VLAN</li> </ul>	The COS provisioned on CVLAN basis (QinQ selective mode)
<DSCPFIRST>		DSCP range. Indicates a DSCP value used in the ethernet frame to define the QoS in L3 ethernet transport. It is a number in the range 0..64. Default values is 0
<DSCPLAST>		DSCP range. Indicates a DSCP value used in the ethernet frame to define the QoS in L3 ethernet transport. It is a number in the range 0..64. Default values is 0.

## 21.43 RTRV-EC1

(Cisco ONS 15454) The Retrieve Electrical Carrier (RTRV-EC1) command retrieves the facility status of an EC1 card.

**Usage Guidelines** None

**Category** Ports

**Security** Retrieve

**Input Format** RTRV-EC1:[<TID>]:<AID>:<CTAG>[:::];

**Input Example** RTRV-EC1:CISCO:FAC-1-1:1234;

**Input Parameters** <AID> Access identifier from the “26.17 FACILITY” section on page 26-40.

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<AID>::[PJMON=<PJMON>],[LBO=<LBO>],[RXEQUAL=<RXEQUAL>],[SOAK=<SOAK>],
[SOAKLEFT=<SOAKLEFT>],[SFBER=<SFBER>],[SDBER=<SDBER>],[NAME=<NAME>],
[EXPTRC=<EXPTRC>],[TRC=<TRC>],[TRCMODE=<TRCMODE>],
[TRCFORMAT=<TRCFORMAT>],[AISONLPBK=<AISONLPBK>]:<PSTPSTQ>,<[SSTQ]>”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“FAC-1-1::PJMON=0,LBO=0-225,RXEQUAL=Y,SOAK=52,SOAKLEFT=12-25,SFBER=1E-4,
SDBER=1E-7,NAME="EC1 PORTV",EXPTRC="AAA",TRC="AAA",TRCMODE=MAN,
TRCFORMAT=16-BYTE,AISONLPBK=AIS_ON_LPBK_ALL:IS-NR,AINS”
;
```

<b>Output Parameters</b>	<AID>	Access identifier from the “26.17 FACILITY” section on page 26-40.
	<PJMON>	(Optional) A SONET pointer monitor attribute of an EC1 port. PJMON is an integer.
	<LBO>	(Optional) Line buildout settings. LBO is an integer. The parameter type is E_LBO, which is the electrical signal line buildout.
	• 0–225	Electrical signal line buildout range is 0–225.
	• 226–450	Electrical signal line buildout range is 226–450.
	<RXEQUAL>	(Optional) Parameter type is EXT_RING, which indicates if the ring supports the extended K1/K2/K3 protocol.
	• N	The ring does not support the extended K1/K2/K3 protocol.
	• Y	The ring does support the extended K1/K2/K3 protocol.
	<SOAK>	IS-AINS to IS transition soak time as measured in 15-minute intervals. SOAK is an integer.

<SOAKLEFT>	(Optional) Time remaining for the transition from OOS-AINS to IS measured in 1-minute intervals. The format is HH-MM where HH ranges from 00 to 48 and MM ranges from 00 to 59. Rules for SOAKLEFT are as follows: <ul style="list-style-type: none"> <li>• When the port is in OOS, OOS_MT, or IS state, the parameter will not appear.</li> <li>• When the port is in IS-AINS but the countdown has not started due to fault signal, the value will be SOAKLEFT=NOT-STARTED.</li> <li>• When the port is in IS_AINS state and the countdown has started, the value will be shown in HH-MM format.</li> </ul>
<SFBER>	(Optional) Signal failure threshold. The default value is 1E-4. The parameter type is SF_BER, which is the threshold for declaring signal failure on a facility or path.
• 1E-3	SFBER is 1E-3.
• 1E-4	SFBER is 1E-4.
• 1E-5	SFBER is 1E-5.
<SDBER>	(Optional) Signal degrade threshold. The parameter type is SD_BER, which is the threshold for declaring signal degrade on a facility or path.
• 1E-5	SDBER is 1E-5.
• 1E-6	SDBER is 1E-6.
• 1E-7	SDBER is 1E-7.
• 1E-8	SDBER is 1E-8.
• 1E-9	SDBER is 1E-9.
<NAME>	(Optional) Port Name. NAME is a string.
<EXPTRC>	(Optional) EXPTRC is a string.
<TRC>	(Optional) TRC is a string.
<TRCMODE>	(Optional) Trace mode. The parameter type is TRCMODE.
• AUTO	Use the previously received path trace string as the expected string. Not applicable to MXP/TXP cards.
• AUTO-NO-AIS	Use the previously received path trace string as the expected string and do not turn on AIS and RDI if TIM-P is detected.
• MAN	Use the provisioned expected string as the expected string.
• MAN-NO-AIS	Use the provisioned expected string as the expected string and do not turn on AIS and RDI if TIM-P is detected.
• OFF	Turn off path trace capability. Nothing will be reported.
<TRCFORMAT>	(Optional) Trace message size. The parameter type is TRCFORMAT (trace format).
• 1-BYTE	1-byte trace message
• 16-BYTE	16-byte trace message
• 64-BYTE	64-byte trace message

• Y	Enable an attribute.
<AISONLPBK>	(Optional) AIS on loopback. The parameter type is AIS_ON_LPBK, which indicates if an AIS is sent on a loopback.
• AIS_ONLPBK_FACILITY	AIS is sent on facility loopbacks.
• AIS_ON_LPBK_ALL	AIS is sent on all loopbacks.
• AIS_ON_LPBK_OFF	AIS is not sent on loopbacks.
• AIS_ON_LPBK_TERMINAL	AIS is sent on terminal loopbacks.
<PST_PSTQ>	Administrative state in the PST_PSTQ format. The parameter type is PST_PSTQ, which is the service state of the entity described by the SST and PSTQ.
• IS-NR	In Service and Normal
• OOS-AU	Out of Service and Autonomous
• OOS-AUMA	Out of Service and Autonomous Management
• OOS-MA	Out of Service and Management
<SSTQ>	(Optional) Secondary state of the entity. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic In-Service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of Equipment
• MT	Maintenance
• OOG	Out of Group
• SWDL	Software Download
• UAS	Unassigned
• UEQ	Unequipped

## 21.44 RTRV-EFM

(Cisco ONS 15454) The Retrieve Edit Ethernet in the First Mile (RTRV-EFM) command retrieves the Edit Ethernet in the First Mile (EFM) state on the port and EFM protocol parameters associated with that port.

### Usage Guidelines

- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.

### Category

Ports

### Security

Retrieve

**Input Format** RTRV-EFM:[<TID>]:<AID>:<CTAG>;

**Input Example** RTRV-EFM::ETH-12-1-1:1;

**Input Parameters**

<AID>	Access identifier from the “26.16 ETH” section on page 26-40.
-------	---

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
  “AID>:[STATE=<STATE>], [MODE=<MODE>],
[LFACTION=<LFACTION>],[DGACTION=<DGACTION>],[SESSIONTIMER=<SESSIONTIMER>
],[EFMREMOTELPBK=<EFMREMOTELPBK>];”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“ETH-7-1-1,STATE=DISABLE,MODE=ACTIVE,LFACTION=NONE,SESSIONTIMER=5,EFMREM
OTELPBK=N:”
;
```

**Output Parameters**

<AID>	Access identifier from the “26.16 ETH” section on page 26-40.
<STATE>	Indicates whether the EFM is enabled or disabled on the port.
<ul style="list-style-type: none"> <li>• ENABLE</li> <li>• DISABLE</li> </ul>	<ul style="list-style-type: none"> <li>Indicates the EFM is enabled on the port.</li> <li>Indicates the EFM is disabled on the port.</li> </ul>
<MODE>	Indicates the mode of the EFM port.
<ul style="list-style-type: none"> <li>• ACTIVE</li> <li>• PASSIVE</li> </ul>	<ul style="list-style-type: none"> <li>The port is in the active state.</li> <li>The port is in the passive state.</li> </ul>
<LFACTION>	Action to be taken for the failure of the link on the port.
<ul style="list-style-type: none"> <li>• RFIACTION-NONE</li> <li>• ERROR-BLOCK</li> </ul>	<ul style="list-style-type: none"> <li>No action.</li> <li>Block the port.</li> </ul>
<SESSIONTIMER>	Session expire timer for EFM (in seconds).
<EFMREMOTELPBK>	Indicates the EFM remote loopback state on the port.
<ul style="list-style-type: none"> <li>• Y</li> <li>• N</li> </ul>	<ul style="list-style-type: none"> <li>Loopback is enabled on the remote port.</li> <li>Loopback is disabled on the remote Port.</li> </ul>

## 21.45 RTRV-EQPT

(Cisco ONS 15454) The Retrieve Equipment (RTRV-EQPT) command retrieves the data parameters and state parameters associated with a card or shelf.

### Usage Guidelines

This command returns the PRTYPE, PROTID, RVTM, and RVRTV parameters for a card inside a protection group according to the following scenarios:

- A working AID/card within a 1:1 protection group will return PRTYPE, PROTID, RVTM, and RVRTV.
- A protection/AID card within a 1:1 protection group will return PRTYPE, RVTM, and RVRTV.
- A working AID/card within a 1:N protection group will return PRTYPE, PROTID, RVTM, and RVRTV=Y.
- A protection AID/card of a 1:1 protection group will return PRTYPE, RVTM, and RVRTV=Y.
- An unprotected AID/card will return the AID type, equip (equip/unequip), status (act/standby), and state (IS/OOS) values.
- Preprovisioned cards (without being plugged in) will display OOS,AINS for PST and SST. After the card is plugged in and has gone through its initialization sequence, the card automatically goes to IS state (PST).
- The CARDMODE parameter is displayed for ML-Series Ethernet, FC\_MR-4, DS1/E1-56, and DWDM xponder cards.
- The RETIME parameter is only displayed for the DS1/E1-56 (ONS 15454) card.
- The TRANSMODE parameter is only displayed for the DS1/E1-56 card.

Error conditions:

- The NE will generate an error when the equipment is not provisioned.

### Category

Equipment

### Security

Retrieve

### Input Format

RTRV-EQPT:[<TID>]:<AID>:<CTAG>[:::];

### Input Example

RTRV-EQPT:MIRABEL:SLOT-12:230;

### Input Parameters

<AID> Access identifier from the [“26.15 EQPT”](#) section on page 26-37.

### Output Format

SID DATE TIME  
M CTAG COMPLD  
“<AID>:<AIDTYPE>,<EQUIP>,[<ROLE>],[<STATUS>]:[<PROTID>],[<PRTYPE>],[<RVRTV>],[<

```
RVTM>],[<CARDNAME>],[<IOSCFG>],[<CARDMODE>],[<PEERID>],[<REGENNAME>],[<PEERNAME>],[<TRANSMODE>],[<RETIME>],[<SHELFROLE>],[<FRPROLE>],[<FRPSTATE>],[<FRPHOLDOFFTIME>],[<ADMINCVLAN>],[<ADMINSVLAN>],[<CFMSTATE>],[<CCTIMER>],[<PROTOPMODE>],[<SWITCHWITHCRCALARM>],[<CRCTHR>],[<CRCPOLLINTRVL>],[<CRCSOAKCOUNT>],[<USB>]:<PST>,[<SST>]"
;
```

**Output Example**

```
RTRV-EQPT::ALL:a;
```

```
M a COMPLD
```

```
"SLOT-1:10GE-XP,UNEQUIP,,NA:CARDMODE=10GEXP-L2ETH,FRPROLE=SLAVE,FRPSTATE=DISABLED,FRPHOLDOFFTIME=DISABLED,ADMINCVLAN=0,ADMINSVLAN=0,CFMSTATE=N,CCTIMER=ONE-SEC,SWITCHWITHCRCALARM=Y,CRCTHR=10E-2,CRCPOLLINTRVL=60,CRCSOAKCNT=10:OOS-AU,AINS&UEQ"
```

```
"SLOT-2:GE-XP,UNEQUIP,,NA:CARDMODE=GEXP-L2ETH,FRPROLE=SLAVE,FRPSTATE=DISABLED,FRPHOLDOFFTIME=DISABLED,ADMINCVLAN=0,ADMINSVLAN=0,CFMSTATE=N,CCTIMER=ONE-SEC,SWITCHWITHCRCALARM=Y,CRCTHR=10E-2,CRCPOLLINTRVL=60,CRCSOAKCNT=10:OOS-AU,AINS&UEQ"
```

**Output Parameters**

<AID>	Access identifier from the <a href="#">“26.15 EQPT”</a> section on page 26-37.
<AIDTYPE>	The type of facility, link or other addressable entity targeted by the message. The parameter type is EQUIPMENT-TYPE (equipment type).
• 10GE-XP	(ONS 15454) 2 x 10 Gbps. muxponder/L2 ethernet switch card
• 32-DMX	(ONS 15454) 32 channel optical demultiplexer
• 32-DMX-L	(ONS 15454) 32 channel optical demultiplexer for L-band
• 32-MUX-O	(ONS 15454) 32 channel unidirectional optical multiplexer This overrides the old equipment type MUX-32 present in the 4.6 and earlier releases.
• 32-WSS	(ONS 15454) 32 channel optical wavelength selective switch for C Band
• 40-DMX-C	(ONS 15454) 40 channel optical demultiplexer for C Band
• 40-MUX-C	(ONS 15454) 40 channel optical multiplexer for C Band
• 40-WSS-C	(ONS 15454) 40 channel optical wavelength switch selector for C Band
• 40-WXC-C	(ONS 15454) 40 channel optical wavelength cross-connect/wavelength router for C Band
• AD-1B	(ONS 15454) Optical add/drop multiplexed (OADM) 1 band filter
• AD-1C	(ONS 15454) Optical add/drop multiplexed (OADM) 1 channel filter
• AD-2C	(ONS 15454) Optical add/drop multiplexed (OADM) 2 channels filter

• AD-4B	(ONS 15454) Optical add/drop multiplexed (OADM) 4 bands filter
• AD-4C	(ONS 15454) Optical add/drop multiplexed (OADM) 4 channels filter
• ADM-10G	(ONS 15454) 16 x OC3/OC12/OC48/GIGE and OC192/Trunk ADM 10 Gbps card
• AIC	(ONS 15454) AIC card
• AICI	(ONS 15454) AICI Card
• CE-1000-4	(ONS 15454) Modena mapper card
• CE-100T-8	(ONS 15454) Exige/Elise mapper card
• CE-MR-10	(ONS 15454, ONS 15454 SDH) Lotus20g ce2 card
• DS1-E1-56	(ONS 15454) DS1-E1-56 card
• DS1I	(ONS 15454) DS1I card
• DS3I	(ONS 15454) DS3I card
• DS3IN	(ONS 15454) DS3IN card
• E1-42	(ONS 15454) 42 port E1 card
• E1000T	(ONS 15454) E1000T card
• E100T	(ONS 15454) E100T card
• E3	(ONS 15454) E3 card
• FC-MR-4	(ONS 15454) FC-MR-4 card
• FILLER-CARD	(ONS 15454) Blank filler card
• G1000-4	(ONS 15454) A 4-port G1000 card
• GE-XP	(ONS 15454) 20 x 1 Gbps muxponder/L2 ethernet switch card
• MD-4	(ONS 15454) Four channel optical multiplexer/demultiplexer
• ML-100T-8	(ONS 15454) Exige/Elise mapper card
• ML1000-2	(ONS 15454) Daytona 2-port GigE
• ML100T-12	(ONS 15454) Daytona 12-port FSTE
• ML100X-8	(ONS 15454) 8-port 100T card with optical interface
• MRC-12	(ONS 15454) Humvee - 12-port multirate optical card
• MRC-2.5G-4	(ONS 15454) 4-port MRC 2.5G (Hummer 4 15454-ANSI card)
• MRC-2.5G-12	(ONS 15454) 12-port MRC 2.5G (Hummer 12 15454-ETSI card)
• MXP-2.5G-10E	(ONS 15454) Monviso 10G (4 * 2.5G) muxponder card with enhanced FEC
• MXP-2.5G-10EX	(ONS 15454) Cengalo 10G (4 * 2.5G) muxponder with enhanced FEC card
• MXP-2.5G-10G	(ONS 15454) Skane 10G (4 * 2.5G) muxponder card
• MXP-MR-2.5G	(ONS 15454) Bernina multirate 2.5G muxponder unprotected
• MXPP-MR-2.5G	(ONS 15454) Bernina multirate 2.5G muxponder protected
• MXPP-MR-10DME	(ONS 15454) Multirate 10Gbps datamux

• MXPP-MR-10DMEX	(ONS 15454) Multirate 10Gbps datamux with enhanced dispersion
• ML-MR-10	(Cisco ONS 15454 SDH)
• OPT-AMP-17-C	(ONS 15454) Optical booster/pre-amplifier for C band 17 dBm
• OPT-AMP-23-C	(ONS 15454) Optical booster/pre-amplifier for C band 23 dBm
• OPT-AMP-L	(ONS 15454) Optical booster/pre-amplifier for L band
• OPT-AMP-C	(ONS 15454) Optical booster/pre-amplifier for C band
• OPT-BST	(ONS 15454) Optical booster amplifier
• OPT-BST-E	(ONS 15454) Optical booster enhanced amplifier for C band
• OPT-BST-L	(ONS 15454) Optical booster amplifier for L band
• OPT-PRE	(ONS 15454) Optical pre-amplifier
• OSC-CSM	(ONS 15454) Optical service channel (OSC) with combiner/separator module (SCM)
• OSCM	(ONS 15454) Optical service channel (OSC) module
• PPM-1	(ONS 15454) Pluggable port module with one SFP port
• STM1E-12	(ONS 15454 SDH) STM1E-12 card
• TCC	(ONS 15454) TCC card
• TXP-MR-10E	(ONS 15454) Skane 10G multirate transponder card with enhanced FEC
• TXP-MR-10G	(ONS 15454) Skane 10G multirate transponder card
• TXP-MR-2.5G	(ONS 15454) Rockwell multirate 2.5G unprotected
• TXPP-MR-2.5G	(ONS 15454) Rockwell multirate 2.5G protected
• XC	(ONS 15454) XC card
• XC10G	(ONS 15454) XC10G card
• XCVT	(ONS 15454) XCVT card
• XCVXC-10G	(ONS 15454) XCVXC-10G card
• XCVXC-2.5G	(ONS 15454) XCVXC-2.5G card
• XCVXL-10G	(ONS 15454) XCVXL-10G card
• XCVXL-2.5G	(ONS 15454) XCVXL-2.5G card
<EQUIP>	Indicates if the equipment is physically present. The parameter type is EQUIP, which is the presence of a plug-in unit.
• EQUIP	The unit is equipped—present.
• UNEQUIP	The unit is unequipped—absent.
• <ROLE>	Identifies the port role in a Y-cable protection scheme. The parameter type is SIDE, which is the role the unit is playing in the protection group.
• PROT	The entity is a protection unit in the protection group.
• WORK	The entity is a working unit in the protection group.

<STATUS>	(Optional) Indicates a status. SDH card status is shown on its card level. The parameter type is STATUS, which is the status of the unit in the protection pair.
• ACT	The entity is the active unit in the shelf.
• NA	Status is unavailable.
• STBY	The entity is the standby unit on the shelf.
• <PROTID>	(Optional) Protection group name. PROTID is a string.
<PRTYPE>	Identifies the protection group type values.
• 1-1	1 to 1 protection
• 1-N	1 to N protection
<RVRTV>	(Optional) Revertive mode. The value Y indicates that protection switching system reverts service to the original line after restoration. The value N indicates that protection switching system does not revert service to the original line after restoration. RVRTV is applicable only for 1+1 protection switching. Null defaults to N. Only applies to SNCP. The parameter type is ON_OFF, which disables or enables an attribute.
• N	Does not revert service to original line after restoration.
• Y	Reverts service to original line after restoration.
<RVTM>	(Optional) Revertive time. RVTM is not allowed to be set while RVRTV is N. Only applies to SNCP. The parameter type is REVERTIVE_TIME (revertive time).
• 0.5 to 12.0	Revertive time is 0.5 to 12.0 minutes.
<CARDNAME>	(Optional) Contains the manufacturing name of the card when it is different from the EQUIPMENT_TYPE.
<IOSCFG>	(Optional) Displays the information about startup IOS config file for the ML series card. A example of this field is "TL1,11.22.33.44//DIR/IOS.CONF,2002/1/1 9:1:1 EST". The following information is included in this field: 1) Where the config file is from: TL1, or CTC/CTM/CLI/TCC; 2) The host (IP address)/directory/file name, if the config file is downloaded from the network; 3) When the startup config file is created (by copying from the network, for example). This field only applies to ML series card. IOSCFG is a string.
<CARDMODE>	(Optional) Card mode. The parameter type is CARDMODE (card mode). Card mode is applicable to cards that have multiple capabilities, for example, the ML-Series card can operate in two distinct modes: Linear Mapper mode and L2/L3 mode.
• 10GLANWAN-LINE-SQUELCH	Changes the card mode from LAN to WAN.
• AMPL-BST	The optical amplifier is working as an optical booster.
• AMPL-PRE	The optical amplifier is working as an optical preamplifier.
• CEMR-AUTO	CE-MR-10 (Cisco ONS 15454 SDH Only) cards supports auto-allocation of back-end channels.

• CEMR-MANUAL	CE-MR-10 (Cisco ONS 15454 SDH Only) cards supports manual-allocation of back-end channels.
• CE-MR-10	(Cisco ONS 15454, Cisco ONS 15454 SDH) Lotus20g ce2 card
• CE-MR-6	(ONS 15454, ONS 15454 SDH) Lotus20g ce2 card
• DS1E1-DS1ONLY	DS1 mode on DS1/E1 card
• DS1E1-E1ONLY	E1 mode on DS1/E1 card
• DWDM-LINE	Line terminating mode
• DWDM-SECTION	Section terminating mode
• DWDM-TRANS-AIS	Transparent mode AIS
• DWDM-TRANS-SQUELCH	Transparent mode SQUELCH
• FCMR-DISTEXTN	FC_MR-4 card with distance extension support
• FCMR-LINERATE	FC_MR-4 card without distance extension support
• ML-GFP	ML-Series card in DOS FPGA using GFP framing type
• ML-HDLC	ML-Series card in DOS FPGA using HDLC framing type
• ML-IEEE-RPR	ML-Series card in DOS FPGA which supports Resilient Packet Ring (RPR).
• MXPMR10DME-4GFC	4-Gbps Fibre Channel/FICON mode for the Cisco ONS 15454 SDH MXP_MR_10DME_C or MXP_M-R_10DME_L card supported on Ports 1 and 5
• MXPMR10DME-4GFC-FC-GEISC	4-Gbps Fibre Channel/FICON supported on port one and Fibre Channel, GIGE and ISC modes for the Cisco ONS 15454 SDH MXP_MR_10DME_C or MXP_M-R_10DME_L card supported on Ports 5 to 8
• MXPMR10DME-FCGEISC	Fibre Channel, GIGE, and ISC modes for the Cisco ONS 15454 SDH 1MXP_MR_10DME_C or MX-P_MR_10DME_L card supported on all eight ports
• MXPMR10DME-FC-GEISC-4GFC	Fibre Channel, GIGE, and ISC modes for the Cisco ONS 15454 SDH MXP_MR_10DME_C or MXP_M-R_10DME_L card supported on Ports 1 to 4 and 4 Gbps Fibre Channel/FICON supported on Port 5
• MXPMR10G-FCGEISC	Fibre Channel, GIGE, and ISC modes for the Cisco ONS 15454 SDH MXP_MR_10DME_C or MXP_M-R_10DME_L card supported on all eight ports
• MXPMR10G-4GFC	4-Gbps Fibre Channel/FICON mode for the Cisco ONS 15454 SDH MXP_MR_10DME_C or MXP_M-R_10DME_L card supported on Ports 1 and 5
• MXPMR10G-FCGEISC-4GFC	Fibre Channel, GIGE, and ISC modes for the Cisco ONS 15454 SDH MXP_MR_10DME_C or MXP_M-R_10DME_L card supported on Ports 1 to 4 and 4-Gbps Fibre Channel/FICON supported on Port 5
• MXPMR10G-4GFC-FCGEISC	4-Gbps Fibre Channel/FICON supported on Port 1 and Fibre Channel, GIGE and ISC modes for the Cisco ONS 15454 SDH MXP_MR_10DME_C or MXP_M-R_10DME_L card supported on Ports 5 to 8
• MXPMR25G-ESCON	ESCON mode for the Cisco ONS 15454 SDH MX-P_2.5G_10G card

• MXP25G-FCGE	Fibre channel or GIGE mode for the MXP_2.5G_10G card
• MXP25G-MIXED	Mixed Fibre Channel, GIGE and ESCON modes for the Cisco ONS 15454 SDH MXP_2.5G_10G card
• PSM-NORMAL	PSM working in classic configuration.
• PSM-STANDALONE	PSM working in stand-alone mode.
• WXC80-BIDI	80-WXC-C working in bidirectional mode.
• WXC80-DMX	80-WXC-C working as demultiplexer.
• WXC80-MUX	80-WXC-C working as multiplexer.
• 40G-MXP-MUXPONDER	40G-MXP-MUXPONDER working as multiplexer.
• 40G-MXP-UNIDIR-REGEN	40G-MXP-UNIDIR-REGEN working as regenerator.
<PEERID>	Indicates the peer trunk facility of the regeneration group on the OTU2-XP card. Accessed using the CHAN AID.
<REGENNAME>	Indicates the name of a regeneration group. Applicable only to DWDM flavored cards, which support regeneration group. Regenname is a string. The default value is "NULL".
<PEERNAME>	Indicates the name of a peer group.
<TRANSMODE>	Transition Mode.
• AU3	Au3 mode.
• AU4	Au4 mode.
• SONET	Sonnet mode.
<RETIME>	(Optional) Indicates the RETIME function for all the facilities on this card. Applies only to the DS1/E1-56 card. The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.
<SHELFROLE>	The role of the shelf in the context of the node. When it is omitted it defaults to SC. The parameter is SHELF_ROLE.
<FRPROLE>	Indicates the fast ring protection enable mode for GE-XP/10GE-XP units involved in a protection scheme.
• MASTER	Role is of card master of the ring.
• SLAVE	Role is of card slave of the ring.
<FRPSTATE>	Indicates the fast ring protection enable state.
• DISABLED	Disabled protection
• ENABLED	Enabled protection
• FORCED	Forced protection
<FRPHOLDOFFTIME>	Indicates the hold off timer value. The protection do not start until the hold off expire.
• 100-MSEC	Indicates the hold off timer value as 100 milliseconds.
• 1-MSEC	Indicates the hold off timer value as 1milisecond.
• 200-MSEC	Indicates the hold off timer value as 200 milliseconds.
• 2-MSEC	Indicates the hold off timer value as 2 milliseconds.
• 500-MSEC	Indicates the hold off timer value as 500 milliseconds.
• 50-MSEC	Indicates the hold off timer value as 50 milliseconds.

• 5-MSEC	Indicates the hold off timer value as 50 milliseconds.
• DISABLED	Indicates that the hold off timer is disabled.
<ADMINCVLAN>	Customer VLAN identifier for REP. ADMINCVLAN is a number between 1 and 4096. The value 0 is reserved to untagged VLAN.
<ADMINSVLAN >	Service provider VLAN identifier for REP. ADMINSVLAN is a number between 1 and 4096. The value 0 is reserved to untagged VLAN.
<CFMSTATE>	Link Integrity status.
• Y	Enabled
• N	Disabled
<CCTIMER>	Indicates continuity check message timer.
• ONE-MIN	1 minute.
• ONE-SEC	1 second.
• TEN-SEC	10 seconds.
<PROTOPMODE>	PROTOPMODE
<SWITCHWITHCRCALARM>	Switch the GZ card with CRC Alarms
<CRCTHR>	CRC threshold values beyond which alarms are raised. The available threshold values are 10E-2, 10E-3, and 10E-4.
<CRCPOLLINTRVL>	Interval of time after which the polling starts.
<CRCSOAKCNT>	Number of poll cycles during which defect is integrated. The value ranges from 3 to 10.
<USB>	Identifies the USB Port where a passive unit is connected.
<PST>	(Optional) Primary state of the entity. The parameter type is PST, which indicates the current overall service condition of an entity.
• Unlocked	In Service
• Locked	Out of Service
<SST>	Secondary state of the entity. SST is listable. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AutomaticInService	Automatic in service
• Disabled	Disabled
• Loopback	Loopback
• MismatchofEquipmentAlarm	Mismatch of equipment and attributes
• Maintenance	Maintenance mode
• OutOfGroup	Out of group
• SoftwareDownload	Software downloading
• Unassigned	Unassigned
• NotInstalled	Unequipped

## 21.46 RTRV-ESCON

(Cisco ONS 15454) The Retrieve Enterprise System Connection (RTRV-ESCON) command retrieves the Fibre Channel-specific settings for ports that have been configured to carry ESCON traffic using the ENT-ESCON command.

<b>Usage Guidelines</b>	None								
<b>Category</b>	Ports								
<b>Security</b>	Retrieve								
<b>Input Format</b>	RTRV-ESCON:[<TID>]:<AID>:<CTAG>;								
<b>Input Example</b>	RTRV-ESCON::CISCO:FAC-1-1:123;								
<b>Input Parameters</b>	<table border="1"> <tr> <td>&lt;AID&gt;</td> <td>Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.</td> </tr> </table>	<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.						
<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.								
<b>Output Format</b>	<pre>SID DATE TIME M CTAG COMPLD “&lt;AID&gt;:.,[&lt;ROLE&gt;],[&lt;STATUS&gt;]:[ENCAP=&lt;ENCAP&gt;]” ;</pre>								
<b>Output Example</b>	<pre>TID-000 1998-06-20 14:30:00 M 001 COMPLD “FAC-1-1:.,WORK,ACT:ENCAP=GFP-T” ;</pre>								
<b>Output Parameters</b>	<table border="1"> <tr> <td>&lt;AID&gt;</td> <td>Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.</td> </tr> <tr> <td>&lt;ROLE&gt;</td> <td>(Optional) The port role in Y-cable protection (WORK or PROT). The parameter type is SIDE, which is the role the unit is playing in the protection group.</td> </tr> <tr> <td>• PROT</td> <td>The entity is a protection unit in the protection group.</td> </tr> <tr> <td>• WORK</td> <td>The entity is a working unit in the protection group.</td> </tr> </table>	<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.	<ROLE>	(Optional) The port role in Y-cable protection (WORK or PROT). The parameter type is SIDE, which is the role the unit is playing in the protection group.	• PROT	The entity is a protection unit in the protection group.	• WORK	The entity is a working unit in the protection group.
<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.								
<ROLE>	(Optional) The port role in Y-cable protection (WORK or PROT). The parameter type is SIDE, which is the role the unit is playing in the protection group.								
• PROT	The entity is a protection unit in the protection group.								
• WORK	The entity is a working unit in the protection group.								

<STATUS>	(Optional) A port status in Y-cable protection (ACT or STBY). The parameter type is STATUS, which is the status of the unit in the protection pair.
• ACT	The entity is the active unit in the shelf.
• NA	Status is unavailable.
• STBY	The entity is the standby unit in the shelf.
<ENCAP>	(Optional) Encapsulation frame type. The parameter type is ENCAP, which is the frame encapsulation type.
• GFP_F	GFP Frame Mode
• GFP_T	GFP Transparent Mode
• HDLC	HDLC Frame Mode
• HDLC_LEX	HDLC LAN Extension Frame Mode
• HDLC_X86	HDLC X.86 Frame Mode

## 21.47 RTRV-ETH

(Cisco ONS 15454) The Retrieve Ethernet (RTRV-ETH) command retrieves the front-end port information of an Ethernet card.

### Usage Guidelines

This command retrieves the front-end port information of 10/100/1000 Mbps Ethernet cards. However, RTRV-POS will display the MTU, which is common for front and backend ports.

The SELECTIVEAUTO parameter is applicable only when EXPSPEED and EXPDUPLEX are not set to AUTO mode.



### Note

This command is available in Software Release 8.0.1 and later. It is not available in R8.0.0 and later.

### Category

Ethernet

### Security

Provisioning

### Input Format

RTRV-ETH:[<TID>]:<AID>:<CTAG>[::];

### Input Example

RTRV-ETH:TID:FAC-1-1:CTAG;

### Input Parameters

<AID> Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the [“26.16 ETH” section on page 26-40](#).

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<AID>::[LINKSTATE=<LINKSTATE>],[FLOWCTRL=<FLOWCTRL>],[DUPLEX=<DUPLEX>],
[SPEED=<SPEED>],[FLOW=<FLOW>],[EXPDUPLEX=<EXPDUPLEX>],
[EXPSPEED=<EXPSPEED>],[VLANCOS=<VLANCOS>],[IPTOS=<IPTOS>],
[OPTICS=<OPTICS>],[NAME=<NAME>],[SOAK=<SOAK>],[SOAKLEFT=<SOAKLEFT>],
[SELECTIVEAUTO=<SELECTIVEAUTO>],[LIENABLE=<LIENABLE>],[LITIMER=<LITIMER>]:
<PST_PSTQ>,[<SSTQ>]";
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"FAC-1-1::LINKSTATE=DOWN,FLOWCTRL=SYMMETRIC,
DUPLEX=AUTO,SPEED=AUTO,FLOW=FLOW,EXPDUPLEX=AUTO,
EXPSPEED=AUTO,VLANCOS=7,IPTOS=255,OPTICS=1000-BASE-LX,
NAME="ETH PORT",SOAK=32,SOAKLEFT="\ 12-25",
SELECTIVEAUTO=N,LIENABLE=Y,LITIMER=200:OOS-AU,
AINS";
```

**Output Parameters**

<AID>	Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the <a href="#">“26.16 ETH” section on page 26-40</a> .
<LINKSTATE>	Link state. The parameter type is UP_DOWN, which indicates an up or down value.
<ul style="list-style-type: none"> <li>• DOWN</li> <li>• UP</li> </ul>	<ul style="list-style-type: none"> <li>Down</li> <li>Up</li> </ul>
<FLOWCTRL>	Flow control. The parameter is FLOW, which indicates the type of flow control that has been negotiated for an Ethernet port. Defaults to NONE.
<ul style="list-style-type: none"> <li>• ASYMMETRIC</li> <li>• ASYMMETRIC_LOCAL</li> <li>• NONE</li> <li>• PASSTHRU</li> <li>• SYMMETRIC</li> </ul>	<ul style="list-style-type: none"> <li>Asymmetric flow control</li> <li>Asymmetric local flow control</li> <li>No flow control</li> <li>Pass-through flow control</li> <li>Symmetric flow control</li> </ul>
<DUPLEX>	The parameter is ETHER_DUPLEX, which indicates duplex mode. Defaults to AUTO.
<ul style="list-style-type: none"> <li>• AUTO</li> <li>• FULL</li> <li>• HALF</li> </ul>	<ul style="list-style-type: none"> <li>Auto mode</li> <li>Full mode</li> <li>Half mode</li> </ul>
<SPEED>	The parameter type is ETHER_SPEED which indicates Ethernet speed. Defaults to AUTO.
<ul style="list-style-type: none"> <li>• 100_MBPS</li> <li>• 10_GBPS</li> <li>• 10_MBPS</li> <li>• 1_GBPS</li> <li>• 40_GBPS</li> </ul>	<ul style="list-style-type: none"> <li>100 Megabits per seconds</li> <li>10 Gigabits per second</li> <li>10 Megabits per second</li> <li>1 Gigabit per second</li> <li>40 Gigabit per second</li> </ul>

• AUTO_FDX	Enable auto negotiation with full duplex
• AUTO	Automatic
<FLOW>	(Optional) Flow. The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.
<EXPDUPLEX>	(Optional) Ethernet duplex mode. The parameter type is ETHER_DUPLEX, which is the duplex mode.
• AUTO	Auto mode
• FULL	Full mode
• HALF	Half mode
<EXPSPEED>	(Optional) Expected speed. Due to the auto-negotiation feature, actual speed may differ from expected speed. The parameter type is ETHER_SPEED, which is the Ethernet speed.
• 100_MBPS	100 Megabits per second
• 10_GBPS	10 Gigabits per second
• 10_MBPS	10 Megabits per second
• 1_GBPS	1 Gigabit per second
• AUTO	Auto
<SELECTIVEAUTO>	(Optional) Selective auto-negotiation. The parameter is Y or N (enable or disable auto-negotiation) This indicates selective auto-negotiation of EXPSPEED and EXPDUPLEX only.
• Y	Enable selective auto-negotiation.
• N	Disable selective auto-negotiation. The default value is N.
<VLANCOS>	(Optional) Priority queuing threshold based on VLAN class of service for incoming Ethernet packets. VLANCOS is an integer.
<IPTOS>	(Optional) Priority queuing threshold based on IP type of service for incoming Ethernet packets. IPTOS is an integer.
<OPTICS>	(Optional) Optics. The parameter type is OPTICS, which is the type of Gigabit Ethernet optics being used.
• 1000_BASE_CX	1000BaseCX
• 1000_BASE_LX	1000BaseLX
• 1000_BASE_SX	1000BaseSX
• 1000_BASE_ZX	1000BaseZX
• CWDM_1470	CWDM 1470
• CWDM_1490	CWDM 1490
• CWDM_1510	CWDM 1510
• CWDM_1530	CWDM 1530
• CWDM_1550	CWDM 1550
• CWDM_1570	CWDM 1570
• CWDM_1590	CWDM 1590
• CWDM_1610	CWDM 1610
• ITU_100G_1530_33	ITU-100G 1530.33

• ITU_100G_1531_12	ITU-100G 1531.12
• ITU_100G_1531_90	ITU-100G 1531.90
• ITU_100G_1532_68	ITU-100G 1532.68
• ITU_100G_1534_25	ITU-100G 1534.25
• ITU_100G_1535_04	ITU-100G 1535.04
• ITU_100G_1535_82	ITU-100G 1535.82
• ITU_100G_1536_61	ITU-100G 1536.61
• ITU_100G_1538_19	ITU-100G 1538.19
• ITU_100G_1538_98	ITU-100G 1538.98
• ITU_100G_1539_77	ITU-100G 1539.77
• ITU_100G_1540_56	ITU-100G 1540.56
• ITU_100G_1542_14	ITU-100G 1542.14
• ITU_100G_1542_94	ITU-100G 1542.94
• ITU_100G_1543_73	ITU-100G 1543.73
• ITU_100G_1544_53	ITU-100G 1544.53
• ITU_100G_1546_12	ITU-100G 1546.12
• ITU_100G_1546_92	ITU-100G 1546.92
• ITU_100G_1547_72	ITU-100G 1547.72
• ITU_100G_1548_51	ITU-100G 1548.51
• ITU_100G_1550_12	ITU-100G 1550.12
• ITU_100G_1550_92	ITU-100G 1550.92
• ITU_100G_1551_72	ITU-100G 1551.72
• ITU_100G_1552_52	ITU-100G 1552.52
• ITU_100G_1554_13	ITU-100G 1554.13
• ITU_100G_1554_94	ITU-100G 1554.94
• ITU_100G_1555_75	ITU-100G 1555.75
• ITU_100G_1556_55	ITU-100G 156.55
• ITU_100G_1558_17	ITU-100G 1558.17
• ITU_100G_1558_98	ITU-100G 1558.98
• ITU_100G_1559_79	ITU-100G 1559.79
• ITU_100G_1560_61	ITU-100G 1560.61
• UNKNOWN	Unknown Optical Type
• UNPLUGGED	Unplugged
<NAME>	(Optional) Name. NAME is a string.
<SOAK>	(Optional) OOS-AINS to IS transition soak time as measured in 15-minute intervals. SOAK is an integer.

<SOAKLEFT>	<p>(Optional) Time remaining for the transition from Locked-AutomaticInService to Unlocked measured in 1 minute intervals. The format is HH-MM where HH ranges from 00 to 48 and MM ranges from 00 to 59. Rules for SOAKLEFT are as follows:</p> <ul style="list-style-type: none"> <li>• When the port is in Locked;Locked,Maintenance; or Unlocked state, the parameter is not displayed.</li> <li>• When the port is in Locked,AutomaticInService state but the countdown has not started due to a fault signal, the value will be SOAKLEFT=NOT-STARTED.</li> <li>• When the port is in Locked,AutomaticInService state and the countdown has started, the value will be shown in HH-MM format.</li> </ul>
<LIENABLE>	<p>(Optional) Enable or Disable link integrity timer. Takes either Y or N. Value Y enables the LITIMER and value N disables LITIMER. By default LITIMER is enabled.</p> <p><b>Note</b> The LIENABLE parameter is supported on only CE-1000-4 and CE-1000T-8 cards on the 15454.</p>
<LITIMER>	<p>(Optional) Link integrity timer duration in the range between 200 ms and 10000 ms in multiples on 100 ms.</p> <p><b>Note</b> The LITIMER parameter is supported on only CE-1000-4 and CE-1000T-8 cards on the 15454.</p>
<PSTPSTQ>	<p>Administrative state in the PST_PSTQ format. The parameter type is PST_PSTQ, which is the service state of the entity described by the PST and the PSTQ.</p>
• Unlocked-Enabled	In service and normal
• Unlocked-Disabled	Out of service and autonomous
• Locked-Disabled	Out of service, autonomous and management
• Locked-Enabled	Out of service and management
<SSTQ>	<p>(Optional) Secondary state of the entity. the parameter type is SST, which provides additional information pertaining to PST and PSTQ.</p>
• AutomaticInService	Automatic in service
• Disabled	Disabled
• Loopback	Loopback
• MismatchofEquipmentAlarm	Mismatch of equipment and attributes
• Maintenance	Maintenance mode
• OutOfGroup	Out of group
• SoftwareDownload	Software downloading
• Unassigned	Unassigned
• NotInstalled	Unequipped

## 21.48 RTRV-EXT-CONT

(Cisco ONS 15454) The Retrieve External Control (RTRV-EXT-CONT) command retrieves the control state of an external control. The command can be used to audit the result of an OPR-EXT-CONT or a RLS-EXT-CONT command.

### Usage Guidelines

- If the CONTTYPE is null, the existing CONTTYPE on this AID will be returned.
- The duration is not supported. It defaults to CONTS.

### Category

Environment

### Security

Retrieve

### Input Format

RTRV-EXT-CONT:[<TID>]:<AID>:<CTAG>[:<CONTTYPE>];

### Input Example

RTRV-EXT-CONT:CISCO:ENV-OUT-2:123::AIRCOND;

### Input Parameters

<AID>	Access identifier from the <a href="#">“26.14 ENV” section on page 26-37</a> . The only valid AID for RTRV-EXT-CONT is ENV-OUT-{1-2}.
<CONTTYPE>	Environmental control type. A null value is equivalent to ALL. The parameter type is CONTTYPE, which is the environmental control type.
• AIRCOND	Air conditioning
• ENGINE	Engine
• FAN	Fan
• GEN	Generator
• HEAT	Heat
• LIGHT	Light
• MISC	Miscellaneous
• SPKLR	Sprinkler

### Output Format

```
SID DATE TIME
M CTAG COMPLD
“<AID>:[<CONTTYPE>],<DUR>,[<CONTSTATE>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
  "ENV-OUT-2:AIRCOND,CONTS,OPEN"
;
```

Output Parameters		
<AID>		Access identifier from the “26.14 ENV” section on page 26-37. Identifies the external control for which the control state is being retrieved.
<CONTTYPE>		(Optional) Environmental control type. The parameter type is CONTTYPE, which is the environmental control type.
	• AIRCOND	Air conditioning
	• ENGINE	Engine
	• FAN	Fan
	• GEN	Generator
	• HEAT	Heat
	• LIGHT	Light
	• MISC	Miscellaneous
	• SPKLR	Sprinkler
<DUR>		Duration of operation. The duration for which the external control can be operated. The parameter type is Duration.
	• CONTS	Continuous duration
<CONTSTATE>		(Optional) Control state of the external control. The parameter type is CONT_MODE, which is the current state of the environmental control.
	• NA	Not applicable (for example, duration is MNTRY).
	• OPER	The environmental control state is CLOSE.
	• RLS	The environmental control state is OPEN.

## 21.49 RTRV-FAC

(Cisco ONS 15454) The Retrieve Facility (RTRV-FAC) command retrieves the payload type of the facility. It can also dump all the facilities on a given card and is applicable to all cards.

**Usage Guidelines** None

**Category** Ports

**Security** Retrieve

**Input Format** RTRV-FAC:[<TID>]:<SRC>:<CTAG>[:::];

**Input Example** RTRV-FAC:CISCO:FAC-2-9:2223;

**Input Parameters**

<SRC>	Source access identifier from the “26.17 FACILITY” section on page 26-40.
-------	---

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<SRC>::PAYLOAD=<PAYLOAD>:<PST_PSTQ>,[<SSTQ>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“FAC-2-9::PAYLOAD=E4-FRAMED:OOS-AU,AINS”
;
```

**Output Parameters**

<SRC>	Source access identifier from the “26.17 FACILITY” section on page 26-40.
<PAYLOAD>	(Optional) Payload type of the facility. The parameter type is PAYLOAD, which identifies payload type.
• 10GFC	10-Gigabit Fibre Channel payload
• 10GIGE	10-Gigabit Ethernet
• 1GFC	1-Gigabit Fibre Channel payload
• 1GFICON	1-Gigabit fiber connectivity payload
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• 5GIB	5Gbps InfiniBand (IB_5G) payload
• 8GFC	8-Gigabit Fibre Channel payload
• 40GIGE	40-Gigabit Ethernet
• DS3	DS3 mode
• DS3XM	DS3XM payload mode for DS3XM card
• DV6000	Video mode
• DVBASI	DVBASI payload
• EC1	EC1 mode
• ESCON	ESCON mode
• ETRCLO	ETR_CLO payload mode
• GIGE	Gigabit Ethernet Payload
• HDLC	High-level data link control (HDLC) frame mode.
• HDTV	HDTV mode

• ISC1	ISC1 Mode
• ISC3	ISC3 Mode
• OC12	SONET OC12 mode
• OC3	SONET OC3 mode
• OC48	SONET OC48 mode
• OC768	SONET OC768 mode
• OTU3	Optical Transport Unit Level 3
• PASS-THROUGH	Pass through mode
• SDI-D1-VIDEO	SDI-D1-Video mode
• SONET	SONET Payload Mode
<PST_PSTQ>	Administrative state in the PST-PSTQ format. The parameter type is PST_PSTQ, which is the service state of the entity described by the PST and PSTQ.
• IS-NR	In Service and Normal
• OOS-AU	Out of Service and Autonomous
• OOS-AUMA	Out of Service and Autonomous Management
• OOS-MA	Out of Service and Management
<SSTQ>	(Optional) Secondary state. SSTQ is a string.

## 21.50 RTRV-FFP

(Cisco ONS 15454) The Retrieve Facility Protection Group (RTRV-FFP) command retrieves all optical 1+1 protection groups.

### Usage Guidelines

None

### Category

Protection

### Security

Retrieve

### Input Format

RTRV-FFP:[<TID>]:<AID>:<CTAG>[:::];

### Input Example

RTRV-FFP:HERNDON:FAC-1-1:1;

### Input Parameters

AID                      Optical facility access identifier from the [“26.17 FACILITY”](#) section on page 26-40.

**Output Format**

```

SID DATE TIME
M CTAG COMPLD
"<WORK>,<PROTECT>:<LEVEL>:[PROTID=<PROTID>],[RVRTV=<RVRTV>],
[RVTM=<RVTM>],[PSDIRN=<PSDIRN>],[VRGRDTM=<VRGRDTM>],
[DTGRDTM=<DTGRDTM>],[RCGRDTM=<RCGRDTM>],[OPOTYPE=<OPOTYPE>]"
;

```

**Output Example**

```

TID-000 1998-06-20 14:30:00
M 001 COMPLD
"FAC-2-1,FAC-1-1:OC48:PROTID="PROT_NAME",RVRTV=Y,RVTM=1.0,PSDIRN=BI,
VRGRDTM=0.5,DTGRDTM=1.0,RCGRDTM=1.0,OPOTYPE=OPTIMIZED"
;

```

**Output Parameters**

<WORK>	The working port access identifier from the <a href="#">“26.17 FACILITY” section on page 26-40</a> .
<PROTECT>	The protected port access identifier from the <a href="#">“26.17 FACILITY” section on page 26-40</a> .
<PROTOTYPE>	(Optional) Protection group type. PROTOTYPE is a string.
<LEVEL>	Optical rate the protection group was defined against. The parameter type is OCN_TYPE, which is the modifier used to differentiate various levels of OC-N.
<ul style="list-style-type: none"> <li>• OC12</li> <li>• OC192</li> <li>• OC3</li> <li>• OC48</li> </ul>	<ul style="list-style-type: none"> <li>Optical Carrier level 12 (622 Mbps)</li> <li>Optical Carrier level 192 (10 Gbps)</li> <li>Optical Carrier level 3 (155 Mbps)</li> <li>Optical Carrier level 48 (2.4 Gbps)</li> </ul>
<PROTID>	(Optional) Protection group name. PROTID is a string.
<RVRTV>	(Optional) Revertive mode. The value Y indicates that protection switching system reverts service to the original line after restoration. The value N indicates that protection switching system does not revert service to the original line after restoration. RVRTV is applicable only for 1+1 protection switching. Defaults to N, non-revertive.
<ul style="list-style-type: none"> <li>• N</li> <li>• Y</li> </ul>	<ul style="list-style-type: none"> <li>Does not revert service to original line after restoration.</li> <li>Reverts service to original line after restoration.</li> </ul>
<RVTM>	(Optional) Revertive time. The parameter type is REVERTIVE_TIME.
<ul style="list-style-type: none"> <li>• 0.5 to 12.0</li> </ul>	Revertive time is 0.5 to 12.0 minutes.
<PSDIRN>	(Optional) Protection switch operation. Direction of reversion. The parameter type is UNI_BI, which is the unidirectional and bidirectional switch operations.
<ul style="list-style-type: none"> <li>• BI</li> <li>• UNI</li> </ul>	<ul style="list-style-type: none"> <li>Bidirectional protection switching</li> <li>Unidirectional protection switching</li> </ul>
<VRGRDTM>	(Optional) Verification guard timer. Only applies to optimized 1+1. The parameter type is VERIFICATION_GUARD_TIMER, which is the optimized 1+1 verification guard timer.

• 0.5	500 ms
• 1.0	1 second
<DTGRDTM>	(Optional) Detection guard timer. Only applies to optimized 1+1. The parameter type is DETECTION_GUARD_TIMER, which is the optimized 1+1 detection guard timer.
• 0.0	0 seconds
• 0.05	50 ms
• 0.1	100 ms
• 0.5	500 ms
• 1.0	1 second
• 2.0	2 seconds
• 3.0	3 seconds
• 4.0	4 seconds
• 5.0	5 seconds
<RCGRDTM>	(Optional) Recovery guard timer. Only applies to optimized 1+1. The parameter type is RECOVERY_GUARD_TIMER, which is the optimized 1+1 recovery guard timer.
• 0.0	0 seconds
• 0.05	50 ms
• 0.1	100 ms
• 0.5	500 ms
• 1.0	1 second
• 2.0	2 seconds
• 3.0	3 seconds
• 4.0	4 seconds
• 5.0	5 seconds
• 6.0	6 seconds
• 7.0	7 seconds
• 8.0	8 seconds
• 9.0	9 seconds
• 10.0	10 seconds
<OPOTYPE>	(Optional) 1+1 protection type. The parameter type is ONE_PLUS_ONE, which is the 1+1 protection type.
• OPTIMIZED	Optimized 1+1
• STANDARD	Standard 1+1

## 21.51 RTRV-FFP-<MOD2DWDMPAYLOAD>

(Cisco ONS 15454) The Retrieve Facility Protection Group for 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 5GIB, 8GFC, D1VIDEO, DV6000, DVBASI, ETRCLO, FSTE, GIGE, HDTV, ISC1, ISC3, OTU3, or PASSTHRU (RTRV-FFP-<MOD2DWDMPAYLOAD>) command retrieves Y-cable protection on client facilities.

**Usage Guidelines** None

**Category** DWDM

**Security** Retrieve

**Input Format** RTRV-FFP-<MOD2DWDMPAYLOAD>:[<TID>]:<SRC>:<CTAG>[:::];

**Input Example** RTRV-FFP-HDTV:CISCO:FAC-1-1-1:100;

**Input Parameters**

<SRC>	Source access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
-------	---

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<AIDUNIONID>,<AIDUNIONID1>::[PROTOTYPE=<PROTOTYPE>],[PROTID=<PROTID>],
[RVRTV=<RVRTV>],[RVTM=<RVTM>],[PSDIRN=<PSDIRN>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“FAC-1-1-1,FAC-2-1-1::PROTOTYPE=Y-CABLE,PROTID=\“DC-METRO\”,
RVRTV=N,RVTM=1.0,PSDIRN=BI”
;
```

**Output Parameters**

<AIDUNIONID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
<AIDUNIONID1>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
<PROTOTYPE>	(Optional) The type of facility protection. The parameter type is PROTOTYPE, which is the protection type for DWDM client facilities.

• Y-CABLE	Y-cable protection for the client ports on TXP_MR_10G, MXP_2.5G_10G, TXP_MR_2.5G, and TXPP_MR_2.5G cards.
<PROTID>	(Optional) Y-cable protection group identifier. PROTID is a string.
<RVRTV>	(Optional) Revertive mode. The value Y indicates that protection switching system reverts service to the original line after restoration. The value N indicates that protection switching system does not revert service to the original line after restoration. RVRTV is applicable only for 1+1 protection switching. Null defaults to N. The parameter type is ON_OFF (disable or enable an attribute).
• N	Does not revert service to original line after restoration.
• Y	Reverts service to original line after restoration.
<RVTM>	(Optional) Revertive time. Defaults to 5.0 minutes. The parameter type is REVERTIVE_TIME.
• 0.5 to 12.0	Revertive time is 0.5 to 12.0 minutes.
<PSDIRN>	(Optional) Protection switch operation. Identifies the switching mode. Defaults to UNI. The parameter type is UNI_BI, which is the unidirectional and bidirectional switch operations.
• BI	Bidirectional protection switching
• UNI	Unidirectional protection switching

## 21.52 RTRV-FFP-<OCN\_TYPE>

(Cisco ONS 15454) The Retrieve Facility Protection Group for OC3, OC12, OC48, OC192, or OC768 (RTRV-FFP-<OCN\_TYPE>) command retrieves the optical facility protection information.

### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.



### Note

Optimized 1+1 and related attributes only apply to the ONS 15454.

### Category

Protection

### Security

Retrieve

### Input Format

RTRV-FFP-<OCN\_TYPE>:[<TID>]:<AID>:<CTAG>[:::];

### Input Example

RTRV-FFP-OC3:PETALUMA:OC3-1-1:1;

<b>Input Parameters</b>	<AID>	Access identifier from the “26.17 FACILITY” section on page 26-40.
<b>Output Format</b>	<pre> SID DATE TIME M CTAG COMPLD “&lt;WORK&gt;,&lt;PROTECT&gt;::[PROTOTYPE=&lt;PROTOTYPE&gt;],[PROTID=&lt;PROTID&gt;], [RVRTV=&lt;RVRTV&gt;],[RVTM=&lt;RVTM&gt;],[PSDIRN=&lt;PSDIRN&gt;],[VRGRDTM=&lt;VRGRDTM&gt;], [DTGRDTM=&lt;DTGRDTM&gt;],[RCGRDTM=&lt;RCGRDTM&gt;],[OPOTYPE=&lt;OPOTYPE&gt;]” ; </pre>	
<b>Output Example</b>	<pre> TID-000 1998-06-20 14:30:00 M 001 COMPLD “FAC-2-1,FAC-1-1::PROTOTYPE=Y-CABLE,PROTID="PROT_NAME",RVRTV=Y,RVTM=1.0, PSDIRN=BI,VRGRDTM=0.5,DTGRDTM=1.0,RCGRDTM=1.0,OPOTYPE=OPTIMIZED” ; </pre>	
<b>Output Parameters</b>	<WORK>	Access identifier from the “26.17 FACILITY” section on page 26-40. Identifies the working port.
	<PROTECT>	Access identifier from the “26.17 FACILITY” section on page 26-40. Identifies the protection port.
	<PROTOTYPE>	(Optional) Protection group type. Applicable only to DWDM cards. The parameter type is PROTOTYPE, which is the protection type for DWDM client facilities.
	<ul style="list-style-type: none"> <li>Y-CABLE</li> </ul>	Y-cable protection for the client ports on TXP_MR_10G, MXP_2.5G_10G, TXP_MR_2.5G, and TXPP_MR_2.5G cards.
	<PROTID>	(Optional) Free-form text string name given to the 1+1 protection group. PROTID is a string.
	<RVRTV>	(Optional) Revertive mode. The value Y indicates that protection switching system reverts service to the original line after restoration. The value N indicates that protection switching system does not revert service to the original line after restoration. RVRTV is applicable only for 1+1 protection switching. Defaults to N, non-revertive.
	<ul style="list-style-type: none"> <li>N</li> <li>Y</li> </ul>	<ul style="list-style-type: none"> <li>Does not revert service to original line after restoration.</li> <li>Reverts service to original line after restoration.</li> </ul>
	<RVTM>	(Optional) Revertive time. Defaults to 5.0 minutes. The parameter type is REVERTIVE_TIME.
	<ul style="list-style-type: none"> <li>0.5 to 12.0</li> </ul>	Revertive time is 0.5 to 12.0 minutes.
	<PSDIRN>	(Optional) Protection switch operation. Identifies the switching mode. Defaults to UNI. The parameter type is TRANS_MODE, which is the G1000 transponder mode.
	<ul style="list-style-type: none"> <li>BI</li> <li>NONE</li> <li>UNI</li> </ul>	<ul style="list-style-type: none"> <li>Bidirectional</li> <li>Not in transponder mode</li> <li>Unidirectional</li> </ul>

<VRGRDTM>	(Optional) Verification guard timer. Only applies to optimized 1+1. The parameter type is VERIFICATION_GUARD_TIMER, which is the optimized 1+1 verification guard timer.
• 0.5	500 ms
• 1.0	1 second
<DTGRDTM>	(Optional) Detection guard timer. Only applies to optimized 1+1. The parameter type is DETECTION_GUARD_TIMER, which is the optimized 1+1 detection guard timer.
• 0.0	0 seconds
• 0.05	50 ms
• 0.1	100 ms
• 0.5	500 ms
• 1.0	1 second
• 2.0	2 seconds
• 3.0	3 seconds
• 4.0	4 seconds
• 5.0	5 seconds
<RCGRDTM>	(Optional) Recovery guard timer. Only applies to optimized 1+1. The parameter type is RECOVERY_GUARD_TIMER, which is the optimized 1+1 recovery guard timer.
• 0.0	0 seconds
• 0.05	50 ms
• 0.1	100 ms
• 0.5	500 ms
• 1.0	1 second
• 2.0	2 seconds
• 3.0	3 seconds
• 4.0	4 seconds
• 5.0	5 seconds
• 6.0	6 seconds
• 7.0	7 seconds
• 8.0	8 seconds
• 9.0	9 seconds
• 10.0	10 seconds
<OPOTYPE>	(Optional) 1+1 protection type. The parameter type is ONE_PLUS_ONE, which is the 1+1 protection type.
• OPTIMIZED	Optimized 1+1
• STANDARD	Standard 1+1

## 21.53 RTRV-FFP-OCH

(Cisco ONS 15454) The Retrieve Facility Protection Group Optical Channel (RTRV-FFP-OCH) command retrieves the protection group information for the TXP\_MR\_2.5G and TXPP\_MR\_2.5G card trunk port.

**Usage Guidelines** None

**Category** DWDM

**Security** Retrieve

**Input Format** RTRV-FFP-OCH:[<TID>]:<AID>:<CTAG>[:::];

**Input Example** RTRV-FFP-OCH:VA454-22:CHAN-2-2:100;

**Input Parameters**

<AID>	Access identifier from the <a href="#">“26.8 CHANNEL”</a> section on page 26-22.
-------	--

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<WORK>,<PROTECT>::[PROTOTYPE=<PROTOTYPE>],[PROTID=<PROTID>],
[RVRTV=<RVRTV>],[RVTM=<RVTM>],[PSDIRN=<PSDIRN>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“CHAN-2-2,CHAN-2-3::PROTOTYPE=SPLITTER,PROTID=\“TRUNK PROT”,RVRTV=Y,
RVTM=1.0,PSDIRN=UNI”
;
```

**Output Parameters**

<WORK>	The working port access identifier from the <a href="#">“26.8 CHANNEL”</a> section on page 26-22.
<PROTECT>	The protected port access identifier from the <a href="#">“26.8 CHANNEL”</a> section on page 26-22.
<PROTOTYPE>	(Optional) Protection group type. PROTOTYPE is a string.
<PROTID>	(Optional) Protection group name. PROTID is a string.

<RVRTV>	(Optional) Revertive mode. The value Y indicates that protection switching system reverts service to the original line after restoration. The value N indicates that protection switching system does not revert service to the original line after restoration. RVRTV is applicable only for 1+1 protection switching. Defaults to N. Null defaults to N. The parameter type is ON_OFF (disable or enable an attribute).
<ul style="list-style-type: none"> <li>• N</li> <li>• Y</li> </ul>	<p>Does not revert service to original line after restoration.</p> <p>Reverts service to original line after restoration.</p>
<RVTM>	(Optional) Revertive time. The parameter type is REVERTIVE_TIME.
<ul style="list-style-type: none"> <li>• 0.5 to 12.0</li> </ul>	Revertive time is 0.5 to 12.0 minutes.
<PSDIRN>	(Optional) Protection switch operation. Direction of reversion. The parameter type is UNI_BI, which is the unidirectional and bidirectional switch operations.
<ul style="list-style-type: none"> <li>• BI</li> <li>• UNI</li> </ul>	<p>Bidirectional protection switching</p> <p>Unidirectional protection switching</p>

## 21.54 RTRV-FFP-OTS

(Cisco ONS 15454) The Retrieve Facility Protection Group OTS (RTRV-FFP-OTS) command retrieves the protection group information for the TXP\_MR\_2.5G and TXPP\_MR\_2.5G card trunk port and OTU2-XP and optical protection switching unit.

<b>Usage Guidelines</b>	None
<b>Category</b>	DWDM
<b>Security</b>	Retrieve
<b>Input Format</b>	RTRV-FFP-OTS:[<TID>]:<AID>:<CTAG>[:::];
<b>Input Example</b>	RTRV-FFP-OTS:VA454-22:CHAN-2-2:100;
<b>Input Parameters</b>	<AID>      Access identifier from the <a href="#">“26.8 CHANNEL”</a> section on <a href="#">page 26-22</a> .

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<WORK>,<PROTECT>::[PROTOTYPE=<PROTOTYPE>],[PROTID=<PROTID>],
[RVRTV=<RVRTV>],[RVTM=<RVTM>],[PSDIRN=<PSDIRN>]"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"CHAN-2-2,CHAN-2-3::PROTOTYPE=SPLITTER,PROTID=\“TRUNK PROT”,RVRTV=Y,
RVTM=1.0,PSDIRN=UNI"
;
```

**Output Parameters**

<WORK>	The working port access identifier from the <a href="#">“26.8 CHANNEL” section on page 26-22.</a>
<PROTECT>	The protected port access identifier from the <a href="#">“26.8 CHANNEL” section on page 26-22.</a>
<PROTOTYPE>	(Optional) Protection group type. PROTOTYPE is a string.
<PROTID>	(Optional) Protection group name. PROTID is a string.
<RVRTV>	(Optional) Revertive mode. The value Y indicates that protection switching system reverts service to the original line after restoration. The value N indicates that protection switching system does not revert service to the original line after restoration. RVRTV is applicable only for 1+1 protection switching. Defaults to N. Null defaults to N. The parameter type is ON_OFF (disable or enable an attribute).
• N	Does not revert service to original line after restoration.
• Y	Reverts service to original line after restoration.
<RVTM>	(Optional) Revertive time. The parameter type is REVERTIVE_TIME.
• 0.5 to 12.0	Revertive time is 0.5 to 12.0 minutes.
<PSDIRN>	(Optional) Protection switch operation. Direction of reversion. The parameter type is UNI_BI, which is the unidirectional and bidirectional switch operations.
• BI	Bidirectional protection switching
• UNI	Unidirectional protection switching

## 21.55 RTRV-FOG

(Cisco ONS 15454) The Retrieve Fan-Out-Group (ENT-FOG) command retrieves Fan-Out-Groups.

**Usage Guidelines**

- This command is applicable to PTSYS.
- Retrieves the CPT 50 panel provisioning information.
- Retrieves all the provisioned FOGs or specific FOG with the “ALL” AID.

## RTRV-FOG

**Category** Equipment

**Security** Retrieve

**Input Format** RTRV-FOG:[<TID>]:<AID>:<CTAG>;

**Input Examples** RTRV-FOG::ALL:1;

**Input Parameters** <AID> Access identifier from the [“26.15 EQPT”](#) section on page 26-37.

**Output Format** SID DATE TIME  
M CTAG COMPLD  
“<AID>:[PTSYSID=<PTSYSID>],[FOGID=<FOGID>],[FOMEM=<FOMEM>],  
[<PEERMEM=<PEERMEM>],[STATE=<STATE>]”;

**Output Example** TID-000 1998-06-20 14:30:00  
M 001 COMPLD  
“FOG-1-36:PTSYSID=1,FOGID=36,FOMEM=FAC-2-2-1,STATE=UNKNOWN”

Parameter	Description
<AID>	AID of the FOG to be retrieved.
<PTSYSID>	PTSYS number or ID.
<FOGID>	This is AID of the provisioned FOG. The valid range is [-{1}]-{36-55}.
<FOMEM>	Ports of line and fabric cards.
<PEERMEM>	Ports of CPT 50 panel.
<STATE>	FOG state.
<ul style="list-style-type: none"> <li>• Discovered</li> <li>• Invalid</li> <li>• UNKNOWN</li> </ul>	<ul style="list-style-type: none"> <li>Discovered state.</li> <li>Not discovered.</li> <li>Not known</li> </ul>

## 21.56 RTRV-FSTE

(Cisco ONS 15454) The Retrieve Fast Ethernet (RTRV-FSTE) command retrieves the front-end port information of a Fast Ethernet (10/100 Mbps) card. MTU is not displayed for the ML-100T-8 and CE-100T-8 cards.

### Usage Guidelines

This command retrieves the front-end port information of Fast Ethernet (10/100 Mbps) cards. MTU is not displayed for CE-100T-8 and ML-100T-8. However, RTRV-POS will display the MTU, which is common for front and backend ports.

The SELECTIVEAUTO parameter is applicable only when EXPSPEED and EXPDUPLEX are not set to AUTO mode.

### Category

Ports

### Security

Retrieve

### Input Format

RTRV-FSTE:[<TID>]:<AID>:<CTAG>;

### Input Example

RTRV-FSTE:TID:FAC-1-1:CTAG;

### Input Parameters

<AID> Access identifier from the [“26.17 FACILITY”](#) section on page 26-40.

### Output Format

```
SID DATE TIME
M CTAG COMPLD
"<AID>:[<ROLE>],[<STATUS>]:[<ADMINSTATE>],[<LINKSTATE>],[<MTU>],[<FLOWCTRL>],[
<OPTICS>],[<DUPLEX>],[<SPEED>],[<FLOW>],[<EXPDUPLEX>],[<EXPSPEED>],[<VLANCOS
THRESHOLD>],[<IPTOSTHRESHOLD>],[<NAME>],[<SUPPRESS>],[<SOAK>],[<SOAKLEFT>],
[<SELECTIVEAUTO>],[<LIENABLE>],[<LITIMER>],[<LBCL>],[<OPT>],[<OPR>],[<FREQ>],[<
LOSSB>],[<ACTFLOW>],[<ACTDUPLEX>],[<ACTSPEED>],[<CIR>],[<CBS>],[<EBS>],[<OSC>]:
<PST>,[<SST>]";
```

### Output Example

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"FAC-2-1;.;LINKSTATE=DOWN,FLOWCTRL=NONE,DUPLEX=AUTO,SPEED=AUTO,FLOW=Y,E
XPDUPLEX=AUTO,EXPSPEED=AUTO,VLANCOS=7,IPTOS=255,SOAK=32,
SELECTIVEAUTO=N,LIENABLE=Y,LITIMER=200;.:OOS-MA,DSBLD"
;
```

**Output Parameters**

<AID>	Access identifier from the “26.17 FACILITY” section on page 26-40.
<ROLE>	Identifies the port role in a Y-cable protection scheme. The parameter type is SIDE, which is the role the unit is playing in the protection group.
<STATUS>	Identifies a port status in a Y-cable protection scheme. The parameter type is STATUS, which is the status of the unit in the protection pair.
<ADMINSTATE>	(Optional) Administration type. The parameter type is UP_DOWN (up or down).
• DOWN	Down
• UP	Up
<LINKSTATE>	(Optional) Link protocol. The parameter type is UP_DOWN (up or down).
• DOWN	Down
• UP	Up
<MTU>	(Optional) Maximum transmission unit. MTU is an integer.
<FLOWCTRL>	(Optional) Flow control. The parameter type is FLOW, which is the type of flow control that has been negotiated for an Ethernet port.
• ASYMMETRIC	Asymmetric flow control
• ASYMMETRIC_LOCAL	Asymmetric local flow control
• NONE	No flow control
• PASSTHRU	Passthrough flow control
• SYMMETRIC	Symmetric flow control
<OPTICS>	(Optional) Optics. The parameter type is OPTICS, which is the type of Gigabit Ethernet optics being used.
• 1000_BASE_CX	1000BaseCX
• 1000_BASE_LX	1000BaseLX
• 1000_BASE_SX	1000BaseSX
• 1000_BASE_ZX	1000BaseZX
• CWDM_1470	CWDM 1470
• CWDM_1490	CWDM 1490
• CWDM_1510	CWDM 1510
• CWDM_1530	CWDM 1530
• CWDM_1550	CWDM 1550
• CWDM_1570	CWDM 1570
• CWDM_1590	CWDM 1590
• CWDM_1610	CWDM 1610
• ITU_100G_1530_33	ITU-100G 1530.33
• ITU_100G_1531_12	ITU-100G 1531.12
• ITU_100G_1531_90	ITU-100G 1531.90
• ITU_100G_1532_68	ITU-100G 1532.68
• ITU_100G_1534_25	ITU-100G 1534.25

• ITU_100G_1535_04	ITU-100G 1535.04
• ITU_100G_1535_82	ITU-100G 1535.82
• ITU_100G_1536_61	ITU-100G 1536.61
• ITU_100G_1538_19	ITU-100G 1538.19
• ITU_100G_1538_98	ITU-100G 1538.98
• ITU_100G_1539_77	ITU-100G 1539.77
• ITU_100G_1540_56	ITU-100G 1540.56
• ITU_100G_1542_14	ITU-100G 1542.14
• ITU_100G_1542_94	ITU-100G 1542.94
• ITU_100G_1543_73	ITU-100G 1543.73
• ITU_100G_1544_53	ITU-100G 1544.53
• ITU_100G_1546_12	ITU-100G 1546.12
• ITU_100G_1546_92	ITU-100G 1546.92
• ITU_100G_1547_72	ITU-100G 1547.72
• ITU_100G_1548_51	ITU-100G 1548.51
• ITU_100G_1550_12	ITU-100G 1550.12
• ITU_100G_1550_92	ITU-100G 1550.92
• ITU_100G_1551_72	ITU-100G 1551.72
• ITU_100G_1552_52	ITU-100G 1552.52
• ITU_100G_1554_13	ITU-100G 1554.13
• ITU_100G_1554_94	ITU-100G 1554.94
• ITU_100G_1555_75	ITU-100G 1555.75
• ITU_100G_1556_55	ITU-100G 156.55
• ITU_100G_1558_17	ITU-100G 1558.17
• ITU_100G_1558_98	ITU-100G 1558.98
• ITU_100G_1559_79	ITU-100G 1559.79
• ITU_100G_1560_61	ITU-100G 1560.61
• UNKNOWN	Unknown Optical Type
• UNPLUGGED	Unplugged
<DUPLEX>	(Optional) Duplex mode. The parameter type is ETHER_DUPLEX (duplex mode).
• AUTO	Auto mode
• FULL	Full mode
• HALF	Half mode
<SPEED>	(Optional) Speed. The parameter type is ETHER_SPEED, which is the Ethernet speed.
• 100_MBPS	100 Mbps
• 10_GBPS	10 Gbps
• 10_MBPS	10 Mbps
• 1_GBPS	1 Gbps
• 40_GBPS	40 Gigabit per second
• AUTO_FDX	Enable auto negotiation with full duplex

• AUTO	Auto
<FLOW>	(Optional) Flow. The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.
<EXPDUPLICATE>	(Optional) Ethernet duplex mode. The parameter type is ETHER_DUPLEX, which is the duplex mode.
• AUTO	Auto mode
• FULL	Full mode
• HALF	Half mode
<EXPSPEED>	(Optional) Expected speed. Due to the auto-negotiation feature, actual speed may differ from expected speed. The parameter type is ETHER_SPEED, which is the Ethernet speed.
• 100_MBPS	100 Mbps
• 10_GBPS	10 Gbps
• 10_MBPS	10 Mbps
• 1_GBPS	1 Gbps
• AUTO	Auto
<SELECTIVEAUTO>	(Optional) Selective auto-negotiation. The parameter is Y or N (enable or disable auto-negotiation) This indicates selective auto-negotiation of EXPSPEED and EXPDUPLICATE only.
• Y	Enable selective auto-negotiation.
• N	Disable selective auto-negotiation. The default value is N.
<VLANCOS>	(Optional) Priority queuing threshold based on VLAN class of service of incoming Ethernet packets. VLANCOS is an integer in the range 0 to 7. Defaults to 7.
<IPTOS>	(Optional) Priority queuing threshold based on IP type of service of incoming Ethernet packets. IPTOS is an integer in the range 0 to 255. Defaults to 255.
<NAME>	(Optional) Facility name. NAME is a string.
<SUPPRESS>	Pre-service alarm flag for data ports.
• ON	Enable suppress.
• OFF	Disable suppress. Default is Off.
<SOAK>	(Optional) Locked-AutomaticInService to Unlocked transition soak time as measured in 15-minute intervals. SOAK is an integer.

<SOAKLEFT>	<p>(Optional) Time remaining for the transition from Locked-AutomaticInService to Unlocked measured in 1 minute intervals. The format is HH-MM where HH ranges from 00 to 48 and MM ranges from 00 to 59. Rules for SOAKLEFT are as follows:</p> <ul style="list-style-type: none"> <li>• When the port is in Locked, Locked_Maintenance or Unlocked state, the parameter will not appear.</li> <li>• When the port is in Locked_AutomaticInService but the countdown has not started due to a fault signal, the value will be SOAKLEFT=NOT-STARTED.</li> <li>• When the port is in Locked_AutomaticInService state and the countdown has started, the value will be shown in HH-MM format.</li> </ul>
<LIENABLE>	<p>(Optional) Enable or Disable link integrity timer. Takes either Y or N. Value Y enables the LITIMER and value N disables LITIMER. By default LITIMER is enabled.</p> <p><b>Note</b> The LIENABLE parameter is supported on only CE-1000-4 and CE-1000T-8 cards on the 15454.</p>
<LITIMER>	<p>(Optional) Link integrity timer duration in the range between 200 ms and 10000 ms in multiples on 100 ms.</p> <p><b>Note</b> The LITIMER parameter is supported on only CE-1000-4 and CE-1000T-8 cards on the 15454.</p>
<PSTPSTQ>	<p>Administrative state in the PST_PSTQ format. The parameter type is PST_PSTQ, which is the service state of the entity described by the PST and the PSTQ.</p>
• Unlocked-Enabled	In service and normal
• Unlocked-Disabled	Out of service and autonomous
• Locked-Disabled	Out of service, autonomous and management
• Locked-Enabled	Out of service and management
<SSTQ>	<p>(Optional) Secondary state of the entity. the parameter type is SST, which provides additional information pertaining to PST and PSTQ.</p>
• AutomaticInService	Automatic in service
• Disabled	Disabled
• Loopback	Loopback
• MismatchofEquipmentAlarm	Mismatch of equipment and attributes
• Maintenance	Maintenance mode
• OutOfGroup	Out of group
• SoftwareDownload	Software downloading
• Unassigned	Unassigned
• NotInstalled	Unequipped

## 21.57 RTRV-FTPSERVER

(Cisco ONS 15454) The Retrieve FTP Server (RTRV-FTPSERVER) command retrieves FTP server entries.

**Usage Guidelines** FTP server entries cannot be retrieved using the TIMER filter.

**Category** ENE

**Security** Retrieve

**Input Format** RTRV-FTPSERVER:[<TID>]::<CTAG>:::[IPADDR=<IPADDR>],[IPMASK=<IPMASK>],[ENABLE=<ENABLE>];

**Input Example** RTRV-FTPSERVER:::A:::IPADDR=10.20.30.40

<b>Input Parameters</b>	<IPADDR>	Specifies the IP address of the FTP server.
	<IPMASK>	Specifies the subnet mask of the FTP server.
	<ENABLE>	Specifies the enable/disable option of the FTP server. The parameter type is ON_OFF (disable or enable an attribute).
	• N	Disable an attribute.
	• Y	Enable an attribute.

**Output Format** SID DATE TIME  
M CTAG COMPLD  
";IPADDR=<IPADDR>,IPMASK=<IPMASK>, ENABLE=<ENABLE>,TIMER=<TIMER>"  
;

**Output Example** SID DATE TIME  
M CTAG COMPLD  
";IPADDR=10.20.30.40,IPMASK=255.0.0.0, ENABLE=Y,TIMER=10"  
;

<b>Output Parameters</b>	<IPADDR>	Specifies the IP address of the FTP Server.
	<IPMASK>	Specifies the subnet mask of the FTP Server.
	<ENABLE>	Specifies the enable/disable option of the FTP Server. The parameter type is ON_OFF (disable or enable an attribute).
	• N	Disable an attribute.
	• Y	Enable an attribute.
	<TIMER>	Specifies the timeout value of the FTP Server in minutes.

## 21.58 RTRV-G1000

(Cisco ONS 15454) The Retrieve G1000 Facility (RTRV-G1000) command retrieves the G1000 facilities configuration.

**Usage Guidelines** None

**Category** Ports

**Security** Retrieve

**Input Format** RTRV-G1000:[<TID>]:<AID>:<CTAG>;

**Input Example** RTRV-G1000:TID:FAC-1-1:CTAG;

**Input Parameters** <AID> Access identifier from the [“26.17 FACILITY”](#) section on page 26-40.

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<AID>::[MFS=<MFS>],[FLOW=<FLOW>],[LAN=<LAN>],[OPTICS=<OPTICS>],
[TRANS=<TRANS>],[TPORT=<TPORT>],[LOWMRK=<LOWMRK>],
[HIWMRK=<HIWMRK>],[AUTONEG=<AUTONEG>],[ENCAP=<ENCAP>],
[NAME=<NAME>],[SOAK=<SOAK>],[SOAKLEFT=<SOAKLEFT>],[LIENABLE=<LIENABLE>],
[LITIMER=<LITIMER>]:<PST_PSTQ>,<SSTQ>”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“FAC-1-1::MFS=9032,FLOW=N,LAN=ASYMMETRIC,OPTICS=UNKNOWN,TRANS=NONE,
TPORT=FAC-5-1,LOWMRK=20,HIWMRK=492,AUTONEG=Y,ENCAP=GFP_T,
NAME=“G1000 PORT”,SOAK=32,SOAKLEFT=“12-25”, LIENABLE=Y,
LITIMER=300:OOS-AU,AINS”
;
```

**Output Parameters** <AID> Access identifier from the [“26.17 FACILITY”](#) section on page 26-40.

<MFS>	Maximum frame size. The parameter type is MFS_TYPE, which is the maximum frame size used by an Ethernet card.
• 1548	Normal frame size
• JUMBO	Jumbo frame size
<FLOW>	Flow control. The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.
<LAN>	(Optional) Local-area network. The parameter type is FLOW, which is the type of flow control that has been negotiated for an Ethernet port.
• ASYMMETRIC	Asymmetric flow control
• ASYMMETRIC_LOCAL	Asymmetric local flow control
• NONE	No flow control
• PASSTHRU	Passthrough flow control
• SYMMETRIC	Symmetric flow control
<OPTICS>	(Optional) GBIC type. The parameter type is OPTICS, which is the type of Gigabit Ethernet optics being used.
• 1000_BASE_CX	1000 Base CX
• 1000_BASE_LX	1000 Base LX
• 1000_BASE_SX	1000 Base SX
• 1000_BASE_ZX	1000 Base ZX
• CWDM_1470	CWDM 1470
• CWDM_1490	CWDM 1490
• CWDM_1510	CWDM 1510
• CWDM_1530	CWDM 1530
• CWDM_1550	CWDM 1550
• CWDM_1570	CWDM 1570
• CWDM_1590	CWDM 1590
• CWDM_1610	CWDM 1610
• ITU_100G_1530_33	ITU-100G 1530.33
• ITU_100G_1531_12	ITU-100G 1531.12
• ITU_100G_1531_90	ITU-100G 1531.90
• ITU_100G_1532_68	ITU-100G 1532.68
• ITU_100G_1534_25	ITU-100G 1534.25
• ITU_100G_1535_04	ITU-100G 1535.04
• ITU_100G_1535_82	ITU-100G 1535.82
• ITU_100G_1536_61	ITU-100G 1536.61
• ITU_100G_1538_19	ITU-100G 1538.19
• ITU_100G_1538_98	ITU-100G 1538.98
• ITU_100G_1539_77	ITU-100G 1539.77
• ITU_100G_1540_56	ITU-100G 1540.56

• ITU_100G_1542_14	ITU-100G 1542.14
• ITU_100G_1542_94	ITU-100G 1542.94
• ITU_100G_1543_73	ITU-100G 1543.73
• ITU_100G_1544_53	ITU-100G 1544.53
• ITU_100G_1546_12	ITU-100G 1546.12
• ITU_100G_1546_92	ITU-100G 1546.92
• ITU_100G_1547_72	ITU-100G 1547.72
• ITU_100G_1548_51	ITU-100G 1548.51
• ITU_100G_1550_12	ITU-100G 1550.12
• ITU_100G_1550_92	ITU-100G 1550.92
• ITU_100G_1551_72	ITU-100G 1551.72
• ITU_100G_1552_52	ITU-100G 1552.52
• ITU_100G_1554_13	ITU-100G 1554.13
• ITU_100G_1554_94	ITU-100G 1554.94
• ITU_100G_1555_75	ITU-100G 1555.75
• ITU_100G_1556_55	ITU-100G 156.55
• ITU_100G_1558_17	ITU-100G 1558.17
• ITU_100G_1558_98	ITU-100G 1558.98
• ITU_100G_1559_79	ITU-100G 1559.79
• ITU_100G_1560_61	ITU-100G 1560.61
• UNKNOWN	Unknown Optical Type
• UNPLUGGED	Unplugged
<TRANS>	(Optional) Transponder mode. The parameter type is TRANS_MODE, which is the G1000 transponder mode.
• BI	Bidirectional
• NONE	Not in transponder mode
• UNI	Unidirectional
<TPORT>	(Optional) Transponding port access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
<LOWMRK>	(Optional) Low watermark value. LOWMRK is an integer.
<HIWMRK>	(Optional) High watermark value. HIWMRK is an integer.
<AUTONEG>	(Optional) Automatic negotiation. The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.
<ENCAP>	(Optional) Frame encapsulation type. The parameter type is ENCAP, which is the frame encapsulation type.
• GFP_F	GFP frame mode
• GFP_T	GFP transparent mode
• HDLC	HDLC frame mode
• HDLC_LEX	HDLC LAN extension frame mode
• HDLC_X86	HDLC X.86 frame mode

<NAME>	(Optional) Facility name. NAME is a string.
<SOAK>	(Optional) OOS-AINS to IS transition soak time as measured in 15-minute intervals. SOAK is an integer.
<SOAKLEFT>	(Optional) Time remaining for the transition from OOS-AINS to IS measured in 1-minute intervals. The format is HH-MM where HH ranges from 00 to 48 and MM ranges from 00 to 59. Rules for SOAKLEFT are as follows: <ul style="list-style-type: none"> <li>• When the port is in OOS, OOS_MT or IS state, the parameter will not appear.</li> <li>• When the port is in OOS_AINS state but the countdown has not started due to a fault signal, the value will be SOAKLEFT=NOT-STARTED.</li> <li>• When the port is in OOS_AINS state and the countdown has started, the value will be shown in HH-MM format.</li> </ul>
<LIENABLE>	(Optional) Enable or Disable link integrity timer. Takes either Y or N. Value Y enables the LITIMER and value N disables LITIMER. By default LITIMER is enabled. <p><b>Note</b> The LIENABLE parameter is supported on only CE-1000-4 and CE-1000T-8 cards on the 15454.</p>
<LITIMER>	(Optional) Link integrity timer duration in the range between 200 ms and 10000 ms in multiples on 100 ms. <p><b>Note</b> The LITIMER parameter is supported on only CE-1000-4 and CE-1000T-8 cards on the 15454.</p>
<PSTPSTQ>	Administrative state in the PST-PSTQ format. The parameter type is PST_PSTQ, which is the service state of the entity described by the PST and PSTQ. <ul style="list-style-type: none"> <li>• IS-NR In Service and Normal</li> <li>• OOS-AU Out of Service and Autonomous</li> <li>• OOS-AUMA Out of Service and Autonomous Management</li> <li>• OOS-MA Out of Service and Management</li> </ul>
<SSTQ>	Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ. <ul style="list-style-type: none"> <li>• AINS Automatic In-Service</li> <li>• DSBLD Disabled</li> <li>• LPBK Loopback</li> <li>• MEA Mismatch of Equipment</li> <li>• MT Maintenance</li> <li>• OOG Out of Group</li> <li>• SWDL Software Download</li> <li>• UAS Unassigned</li> <li>• UEQ Unequipped</li> </ul>

## 21.59 RTRV-GFP

(Cisco ONS 15454) The Retrieve Generic Framing Protocol (RTRV-GFP) command retrieves GFP information for the ONS 15454 CE-100T-8 and CE-1000-4 cards.

**Usage Guidelines** None

**Category** Ports

**Security** Retrieve

**Input Format** RTRV-GFP:[<TID>]:<SRC>:<CTAG>;

**Input Example** RTRV-GFP:CISCO:FAC-1-1:123;

<b>Input Parameters</b>	<b>&lt;SRC&gt;</b>	Source access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
	<b>Note</b>	VFAC AID is used for the CE-100T-8 cards on 15454. ML-100T-8 GFP management is done by the Cisco IOS CLI and not by the TL1 interface. FAC AID is used for ONS 15454 FC_MR-4

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<AID>::[FCS=<FCS>],[AUTOTHGFPBUF=<AUTOTHGFPBUF>],
 [GFPBUF=<GFPBUF>],[FILTER=<FILTER>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“FAC-1-1::FCS=FCS-32,AUTOTHGFPBUF=Y,GFPBUF=16,FILTER=EGRESS”
;
```

<b>Output Parameters</b>	<b>&lt;AID&gt;</b>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
	<b>&lt;FCS&gt;</b>	(Optional) Payload frame check sequence. The parameter type is FCS, which is the frame check sequence.
	• FCS-16	Frame check sequencing using 16 bits

• FCS-32	Frame check sequencing using 32 bits
• NONE	No frame check sequence
<AUTOTHGFPBUF>	(Optional) Flag used to indicate whether PDI-P should be generated on the outgoing VT-structured STSs. The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.
<GFPBUF>	(Optional) GFPBUF is an integer.
<FILTER>	(Optional) Parameter type is GFP_FILTER, which is the filter.
• EGRESS	Activate filter on egress port.
• NONE	Turn off filter.

## 21.60 RTRV-GIGE

(Cisco ONS 15454) The Retrieve Gigabit (GIGE, 10GIGE) Ethernet (RTRV-GIGE) command retrieves the front-end port information for a 1 Gigabit Ethernet card.

<b>Usage Guidelines</b>	None
<b>Category</b>	Ports
<b>Security</b>	Retrieve
<b>Input Format</b>	RTRV-GIGE:[<TID>]:<AID>:<CTAG>;
<b>Input Example</b>	RTRV-GIGE:TID:FAC-1-1:CTAG;
<b>Input Parameters</b>	<AID> Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<AID>::,<ROLE>,<STATUS>]:<ADMINSTATE>,<LINKSTATE>,<MTU>,<MFS>,<FLOW
W>,<FLOWCTRL>,<AUTONEG>,<HIWMRK>,<LOWMRK>,<OPTICS>,<DUPLEX>,<S
PEED>,<NAME>,<MACADDR>,<LBCL>,<OPT>,<OPR>,<FREQ>,<LOSSB>,<SUP
PRESS>,<SOAK>,<SOAKLEFT>,<SQUELCH>,<CIR>,<CBS>,<EBS>,<LIENABLE>,<
LITIMER>,<ACTFLOW>,<ACTDUPLEX>,<ACTSPEED>,<OSC>,<ENCAP>,<PAUSEF
RAME>,<CLNTDST>,<EXPSPEED>,<EXPDUPLEX>,<SELECTIVEAUTO>,<INTERCON
MODE>]:<PST>,<SST>]"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"FAC-1-1:.,WORK,ACT:ADMINSTATE=DOWN,LINKSTATE=DOWN,MTU=1548,
ENCAP=GFP-F,FLOWCTRL=SYMMETRIC,AUTONEG=Y,HIWMRK=485,LOWMRK=25,
OPTICS=1000_BASE_SX,DUPLEX=AUTO,SPEED=AUTO,NAME="GIGEPOR",
FREQ=1550,LOSSB=SX,SOAK=32,SOAKLEFT="12-22",LIENABLE=Y,
LITIMER=300:IS,AINS"
;
```

**Output Parameters**

Parameter	Description
<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
<ROLE>	Identifies the port role in a Y-cable protection scheme. The parameter type is SIDE, which is the role the unit is playing in the protection group. <ul style="list-style-type: none"> <li>• PROT The entity is a protection unit in the protection group.</li> <li>• WORK The entity is a working unit in the protection group.</li> </ul>
<STATUS>	Identifies a port status in a Y-cable protection scheme. The parameter type is STATUS, which is the status of the unit in the protection pair. <ul style="list-style-type: none"> <li>• ACT The entity is the active unit in the shelf.</li> <li>• NA Status is unavailable.</li> <li>• STBY The entity is the standby unit in the shelf.</li> </ul>
<ADMINSTATE>	(Optional) Administration type. The parameter type is UP_DOWN (up or down). <ul style="list-style-type: none"> <li>• DOWN Down</li> <li>• UP Up</li> </ul>
<LINKSTATE>	(Optional) Link protocol. The parameter type is UP_DOWN (up or down). <ul style="list-style-type: none"> <li>• DOWN Down</li> <li>• UP Up</li> </ul>
<MTU>	(Optional) Maximum transmission unit. MTU is an integer.
<MFS>	The max frame size used by an Ethernet card.

Parameter	Description
<ENCAP>	(Optional) Encapsulation frame type. The parameter type is ENCAP, which is the frame encapsulation type.
• GFP_F	GFP Frame mode
• GFP_T	GFP Transparent mode
• HDLC	HDLC Frame mode
• HDLC_LEX	HDLC LAN Extension Frame mode
• HDLC_X86	HDLC X.86 Frame mode
<FLOWCTRL>	(Optional) Flow control. The parameter type is FLOW, which is the type of flow control that has been negotiated for an Ethernet port.
• ASYMMETRIC	Asymmetric flow control
• ASYMMETRIC_LOCAL	Asymmetric local flow control
• NONE	No flow control
• PASSTHRU	Passthrough flow control
• SYMMETRIC	Symmetric flow control
<AUTONEG>	(Optional) Automatic negotiation. The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.
<LOWMRK>	(Optional) Low watermark value. LOWMRK is an integer.
<HIWMRK>	(Optional) High watermark value. HIWMRK is an integer.
<OPTICS>	(Optional) Optics type. The parameter type is OPTICS, which is the type of Gigabit Ethernet optics being used.
• 1000_BASE_CX	1000BaseCX
• 1000_BASE_LX	1000BaseLX
• 1000_BASE_SX	1000BaseSX
• 1000_BASE_T	1000BaseT
• 1000_BASE_ZX	1000BaseZX
• 100_BASE_BX_D	100BaseBX_D
• 100_BASE_BX_U	100BaseBX_U
• CWDM_1470	CWDM 1470
• CWDM_1490	CWDM 1490
• CWDM_1510	CWDM 1510
• CWDM_1530	CWDM 1530
• CWDM_1550	CWDM 1550
• CWDM_1570	CWDM 1570
• CWDM_1590	CWDM 1590
• CWDM_1610	CWDM 1610
• ITU_100G_1530_33	ITU-100G 1530.33
• ITU_100G_1531_12	ITU-100G 1531.12
• ITU_100G_1531_90	ITU-100G 1531.90

Parameter	Description
• ITU_100G_1532_68	ITU-100G 1532.68
• ITU_100G_1534_25	ITU-100G 1534.25
• ITU_100G_1535_04	ITU-100G 1535.04
• ITU_100G_1535_82	ITU-100G 1535.82
• ITU_100G_1536_61	ITU-100G 1536.61
• ITU_100G_1538_19	ITU-100G 1538.19
• ITU_100G_1538_98	ITU-100G 1538.98
• ITU_100G_1539_77	ITU-100G 1539.77
• ITU_100G_1540_56	ITU-100G 1540.56
• ITU_100G_1542_14	ITU-100G 1542.14
• ITU_100G_1542_94	ITU-100G 1542.94
• ITU_100G_1543_73	ITU-100G 1543.73
• ITU_100G_1544_53	ITU-100G 1544.53
• ITU_100G_1546_12	ITU-100G 1546.12
• ITU_100G_1546_92	ITU-100G 1546.92
• ITU_100G_1547_72	ITU-100G 1547.72
• ITU_100G_1548_51	ITU-100G 1548.51
• ITU_100G_1550_12	ITU-100G 1550.12
• ITU_100G_1550_92	ITU-100G 1550.92
• ITU_100G_1551_72	ITU-100G 1551.72
• ITU_100G_1552_52	ITU-100G 1552.52
• ITU_100G_1554_13	ITU-100G 1554.13
• ITU_100G_1554_94	ITU-100G 1554.94
• ITU_100G_1555_75	ITU-100G 1555.75
• ITU_100G_1556_55	ITU-100G 156.55
• ITU_100G_1558_17	ITU-100G 1558.17
• ITU_100G_1558_98	ITU-100G 1558.98
• ITU_100G_1559_79	ITU-100G 1559.79
• ITU_100G_1560_61	ITU-100G 1560.61
• UNKNOWN	Unknown Optical Type
• UNPLUGGED	Unplugged
<DUPLEX>	(Optional) Duplex mode. The parameter type is ETHER_DUPLEX, which is the duplex mode.
• AUTO	Auto mode
• FULL	Full mode
• HALF	Half mode
<SPEED>	(Optional) Speed. The parameter type is ALS_MODE, which is the automatic laser shutdown mode.
• AUTO	Automatic
• DISABLED	Disabled
• MAN	Manual

Parameter	Description
• MAN-RESTART	Manual restart for test
<NAME>	(Optional) Facility name. NAME is a string.
<FREQ>	(Optional) The parameter type is OPTICAL WLEN, which is the optical wavelength.
• 1310	Wavelength 1310
• 1470	Wavelength 1470
• 1490	Wavelength 1490
• 1510	Wavelength 1510
• 1529.55	Wavelength 1529.55
• 1529.94	Wavelength 1529.94
• 1530	Wavelength 1530
• 1530.33	Wavelength 1530.33
• 1530.73	Wavelength 1530.73
• 1531.12	Wavelength 1531.12
• 1531.51	Wavelength 1531.51
• 1531.90	Wavelength 1531.90
• 1532.29	Wavelength 1532.29
• 1532.68	Wavelength 1532.68
• 1533.07	Wavelength 1533.07
• 1533.47	Wavelength 1533.47
• 1533.86	Wavelength 1533.86
• 1534.25	Wavelength 1534.25
• 1534.64	Wavelength 1534.64
• 1535.04	Wavelength 1535.04
• 1535.43	Wavelength 1535.43
• 1535.82	Wavelength 1535.82
• 1536.22	Wavelength 1536.22
• 1536.61	Wavelength 1536.61
• 1537	Wavelength 1537
• 1537.40	Wavelength 1537.40
• 1537.79	Wavelength 1537.79
• 1538.19	Wavelength 1538.19
• 1538.58	Wavelength 1538.58
• 1538.98	Wavelength 1538.98
• 1539.37	Wavelength 1539.37
• 1539.77	Wavelength 1539.77
• 1540.16	Wavelength 1540.16
• 1540.56	Wavelength 1540.56
• 1540.95	Wavelength 1540.95
• 1541.35	Wavelength 1541.35
• 1541.75	Wavelength 1541.75

Parameter	Description
• 1542.14	Wavelength 1542.14
• 1542.35	Wavelength 1542.35
• 1542.54	Wavelength 1542.54
• 1542.94	Wavelength 1542.94
• 1543.33	Wavelength 1543.33
• 1543.73	Wavelength 1543.73
• 1544.13	Wavelength 1544.13
• 1544.53	Wavelength 1544.53
• 1544.92	Wavelength 1544.92
• 1545.32	Wavelength 1545.32
• 1545.72	Wavelength 1545.72
• 1546.12	Wavelength 1546.12
• 1546.52	Wavelength 1546.52
• 1546.92	Wavelength 1546.92
• 1547.32	Wavelength 1547.32
• 1547.72	Wavelength 1547.72
• 1548.12	Wavelength 1548.12
• 1548.51	Wavelength 1548.51
• 1548.92	Wavelength 1548.92
• 1549.32	Wavelength 1549.32
• 1549.71	Wavelength 1549.71
• 1550	Wavelength 1500
• 1550.12	Wavelength 1550.12
• 1550.52	Wavelength 1550.52
• 1550.92	Wavelength 1550.92
• 1551.32	Wavelength 1551.32
• 1551.72	Wavelength 1551.72
• 1552.12	Wavelength 1552.12
• 1552.52	Wavelength 1552.52
• 1552.93	Wavelength 1552.93
• 1553.33	Wavelength 1553.33
• 1553.73	Wavelength 1553.73
• 1554.13	Wavelength 1554.13
• 1554.13	Wavelength 1554.13
• 1554.94	Wavelength 1554.94
• 1555.34	Wavelength 1555.34
• 1555.75	Wavelength 1555.75
• 1556.15	Wavelength 1556.15
• 1556.55	Wavelength 1556.55
• 1556.96	Wavelength 1556.96

Parameter	Description
• 1557.36	Wavelength 1557.36
• 1557.77	Wavelength 1557.77
• 1558.17	Wavelength 1558.17
• 1558.58	Wavelength 1558.58
• 1558.98	Wavelength 1558.98
• 1559.39	Wavelength 1559.39
• 1559.79	Wavelength 1559.79
• 1560.20	Wavelength 1560.20
• 1560.61	Wavelength 1560.61
• 1561.01	Wavelength 1561.01
• 1561.42	Wavelength 1561.42
• 1561.83	Wavelength 1561.83
• 1570	Wavelength 1570
• 1570.83	Wavelength 1570.83
• 1571.24	Wavelength 1571.24
• 1571.65	Wavelength 1571.65
• 1572.06	Wavelength 1572.06
• 1572.48	Wavelength 1572.48
• 1572.89	Wavelength 1572.89
• 1573.30	Wavelength 1573.30
• 1573.71	Wavelength 1573.71
• 1574.13	Wavelength 1574.13
• 1574.54	Wavelength 1574.54
• 1574.95	Wavelength 1574.95
• 1575.37	Wavelength 1575.37
• 1575.78	Wavelength 1575.78
• 1576.20	Wavelength 1576.20
• 1576.61	Wavelength 1576.61
• 1577.03	Wavelength 1577.03
• 1577.44	Wavelength 1577.44
• 1577.86	Wavelength 1577.86
• 1578.27	Wavelength 1578.27
• 1578.69	Wavelength 1578.69
• 1579.10	Wavelength 1579.10
• 1579.52	Wavelength 1579.52
• 1579.93	Wavelength 1579.93
• 1580.35	Wavelength 1580.35
• 1580.77	Wavelength 1580.77
• 1581.18	Wavelength 1581.18
• 1581.60	Wavelength 1581.60

Parameter	Description
• 1582.02	Wavelength 1582.02
• 1582.44	Wavelength 1582.44
• 1582.85	Wavelength 1582.85
• 1583.27	Wavelength 1583.27
• 1583.69	Wavelength 1583.69
• 1584.11	Wavelength 1584.11
• 1584.53	Wavelength 1584.53
• 1584.95	Wavelength 1584.95
• 1585.36	Wavelength 1585.36
• 1585.78	Wavelength 1585.78
• 1586.20	Wavelength 1586.20
• 1586.62	Wavelength 1586.62
• 1587.04	Wavelength 1587.04
• 1587.46	Wavelength 1587.46
• 1587.88	Wavelength 1587.88
• 1588.30	Wavelength 1588.30
• 1588.73	Wavelength 1588.73
• 1589.15	Wavelength 1589.15
• 1589.57	Wavelength 1589.57
• 1589.99	Wavelength 1589.99
• 1590	Wavelength 1590
• 1590.41	Wavelength 1590.41
• 1590.83	Wavelength 1590.83
• 1591.26	Wavelength 1591.26
• 1591.68	Wavelength 1591.68
• 1592.10	Wavelength 1592.10
• 1592.52	Wavelength 1592.52
• 1592.95	Wavelength 1592.95
• 1593.37	Wavelength 1593.37
• 1593.79	Wavelength 1593.79
• 1594.22	Wavelength 1594.22
• 1594.64	Wavelength 1594.64
• 1595.06	Wavelength 1595.06
• 1595.49	Wavelength 1595.49
• 1596.34	Wavelength 1596.34
• 1596.76	Wavelength 1596.76
• 1597.19	Wavelength 1597.19
• 1597.62	Wavelength 1597.62
• 1598.04	Wavelength 1598.04
• 1598.47	Wavelength 1598.47

Parameter	Description
• 1598.89	Wavelength 1598.89
• 1599.32	Wavelength 1599.32
• 1599.75	Wavelength 1599.75
• 1600.06	Wavelength 1600.06
• 1601.03	Wavelength 1601.03
• 1601.46	Wavelength 1601.46
• 1601.88	Wavelength 1601.88
• 1602.31	Wavelength 1602.31
• 1602.74	Wavelength 1602.74
• 1603.17	Wavelength 1603.17
• 1603.60	Wavelength 1603.60
• 1604.03	Wavelength 1604.03
• 1610	Wavelength 1610
• USE-TWL1	Use Tunable Wavelength 1
<LOSSB>	(Optional) The parameter type is REACH, which is the reach value.
• AUTOPROV	Autoprovisioning
• CWDM-40KM	CWDM 40 kilometers.
• CX	Reach CX
• CX1	Reach CX1
• DX	Reach DX
• HX	Reach HX
• I1	Reach I1
• IR-1	Reach IR-1
• IR-2	Reach IR-2
• L1	Reach L1
• L2	Reach L2
• L3	Reach L3
• LR-1	Reach LR-1
• LR-2	Reach LR-2
• LR-3	Reach LR-3
• LX	Reach LX
• S1	Reach S1
• S2	Reach S2
• SR	Reach SR
• SR-1	Reach SR-1
• SX	Reach SX
• T	Reach T
• TEN-GE-ER	10 GE extended range
• TEN-GE-LR	10 GE long range
• TEN-GE-SR	10 GE short range

Parameter	Description
• ULH	Reach ULH
• VSR	Reach VSR
• VX	Reach VX
• ZX	Reach ZX
<SOAK>	(Optional) Locked-AutomaticInService to Unlocked transition soak time as measured in 15-minute intervals. SOAK is an integer.
<LIENABLE>	(Optional) Enable or disable link integrity timer. Takes either Y or N. Value Y enables the LITIMER and value N disables LITIMER.  By default LITIMER is enabled.  <b>Note</b> The LIENABLE parameter is supported on only CE-1000-4 and CE-1000T-8 cards on the 15454.
<LITIMER>	(Optional) Link integrity timer duration in the range between 200 ms and 10000 ms in multiples of 100 ms.  <b>Note</b> The LITIMER parameter is supported on only CE-1000-4 and CE-1000T-8 cards on the 15454.
<ACTFLOW>	The type of flow control.
• ASYMMETRIC	Asymmetric flow control
• ASYMMETRIC_LOCAL	Asymmetric local flow control.
• NONE	No flow control
• PASSTHRU	Pass-through flow control
• SYMMETRIC	Symmetric flow control
<ACTDUPLEX>	Ethernet duplex mode. Default value is -AUTO.
• AUTO	Auto mode
• FULL	Full mode
• HALF	Half mode
<ACTSPEED>	Ethernet speed.
• 100_MBPS	100 MBPS
• 10_GBPS	10 GBPS
• 10_MBPS	10 MBPS
• 1_GBPS	1 GBPS
• 40_GBPS	40 Gigabit per second
• AUTO_FDX	Enable auto negotiation with full duplex
• AUTO	AUTO

Parameter	Description
<SOAKLEFT>	(Optional) Time remaining for the transition from Locked-AutomaticInService to Unlocked measured in 1 minute intervals. The format is HH-MM where HH ranges from 00 to 48 and MM ranges from 00 to 59. Rules for SOAKLEFT are as follows: <ul style="list-style-type: none"> <li>• When the port is in Locked, Locked_Maintenance or Unlocked state, the parameter will not appear.</li> <li>• When the port is in Locked_AutomaticInService but the countdown has not started due to a fault signal, the value will be SOAKLEFT=NOT-STARTED.</li> <li>• When the port is in Locked_AutomaticInService state and the countdown has started, the value will be shown in HH-MM format.</li> </ul>
<ENCAP>	(Optional) Frame encapsulation type. The parameter type is ENCAP, which is the frame encapsulation type.
• GFP_F	GFP frame mode.
• GFP_T	GFP transparent mode.
• HDLC	HDLC frame mode.
• HDLC_LEX	HDLC LAN extension frame mode.
• HDLC_X86	HDLC X.86 frame mode.
<OSC>	(Optional) Facility AID from the <a href="#">“26.17 FACILITY” section on page 26-40</a>
<PAUSEFRAME>	To Enable or Disable the Pause Frame.
• Y	Enable
• N	Disable
<EXPSPEED>	(Optional) Expected speed. Due to the auto-negotiation feature, actual speed may differ from expected speed. The parameter type is ETHER_SPEED, which is the Ethernet speed.
• 100_MBPS	100 Mbps
• 10_GBPS	10 Gbps
• 10_MBPS	10 Mbps
• 1_GBPS	1 Gbps
• 40_GBPS	40 Gigabit per second
• AUTO	Automatic
• AUTO_FDX	Enable auto negotiation with full duplex.
<EXPDUPLEX>	(Optional) Ethernet duplex mode. The parameter type is ETHER_DUPLEX, which is the duplex mode.
• AUTO	Auto mode
• FULL	Full mode
• HALF	Half mode

Parameter	Description
<SELECTIVEAUTO>	(Optional) Selective auto-negotiation. The parameter is Y or N (enable or disable auto-negotiation) This indicates selective auto-negotiation of EXPSPEED and EXPDUPLEX only.
• Y	Enable selective auto-negotiation.
• N	Disable selective auto-negotiation. The default value is N.
<INTERCONMODE>	Inter connect mode.
<CLNTDST>	Client distance in kilometers.
• 10KM	10 kilometers.
• 30KM	30 kilometers.
<PST>	Primary state. The parameter type is PST, which is the current overall service condition of an entity.
• Unlocked	In service
• Locked	Out of service
<SST>	Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AutomaticInService	Automatic in service
• Disabled	Disabled
• Loopback	Loopback
• MismatchofEquipmentAlarm	Mismatch of equipment and attributes
• Maintenance	Maintenance mode
• OutOfGroup	Out of group
• SoftwareDownload	Software downloading
• Unassigned	Unassigned
• NotInstalled	Unequipped

## 21.61 RTRV-HDLC

(Cisco ONS 15454) The Retrieve High-Level Data Link Control (RTRV-HDLC) command retrieves HDLC-related attributes.

**Usage Guidelines** None

**Category** Ports

**Security** Retrieve

**Input Format** RTRV-HDLC:[<TID>]:<AID>:<CTAG>;

## RTRV-HDR

**Input Example** RTRV-HDLC:TID:VFAC-1-1-1:123;

**Input Parameters** <AID> Access identifier from the “[26.17 FACILITY](#)” section on page 26-40.

**Output Format** SID DATE TIME  
M CTAG COMPLD  
“<AID>::[FCS=<FCS>],[CRC=<CRS>]”  
;

**Output Example** TID-000 1998-06-20 14:30:00  
M 001 COMPLD  
“VFAC-1-1-1::FCS=FCS-16,CRC=CRC-16”  
;

<b>Output Parameters</b>	<AID>	Access identifier from the “ <a href="#">26.17 FACILITY</a> ” section on page 26-40.
	<FCS>	(Optional) Payload frame check sequence. The parameter type is FCS, which is the frame check sequence.
	• FCS-16	Frame check sequencing using 16 bits
	• FCS-32	Frame check sequencing using 32 bits
	• NONE	No frame check sequence
	<CRC>	Cyclic Redundancy Check.
	• CRC-16	Cyclic Redundancy Check using 16 bits.
	• CRC-32	Cyclic Redundancy Check using 32 bits.

## 21.62 RTRV-HDR

(Cisco ONS 15454) The Retrieve Header (RTRV-HDR) command retrieves the header of a TL1 response message. It is used by TL1 clients to determine if the link to the NE is still active and if the NE is responding to commands.

**Usage Guidelines** None

**Category** System

**Security** Retrieve

**Input Format** RTRV-HDR:[<TID>]::<CTAG>;

**Input Example** RTRV-HDR:SONOMA::232;

**Input Parameters** None that require description

## 21.63 RTRV-INV

(Cisco ONS 15454) The Retrieve Inventory (RTRV-INV) command retrieves a list of the equipment inventory. For each unit in the system, the list identifies the unit's firmware numbers and Common Language Equipment Identifier (CLEI) codes, and the system's product ID and version ID. This command also retrieves the inventory information from pluggable modules using the AID PPM-SLOT-PORT format. For multishelf nodes, the inventory parameters are retrieved by using RTRV-INV command with the BP AID. Because there is more than one shelf, the SHELFID is specified in the BP AID.

**Usage Guidelines** None

**Category** System

**Security** Retrieve

**Input Format** RTRV-INV:[<TID>]:<AID>:<CTAG>[:[:]];

**Input Example** RTRV-INV:OCCIDENTAL:SLOT-15:301;

**Input Parameters** <AID> Access identifier from the ["26.15 EQPT"](#) section on page 26-37 or ALL.

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<AID>,<AIDTYPE>::[PLUGTYPE=<PLUGTYPE>],[PN=<PN>],[HWREV=<HWREV>],
[FWREV=<FWREV>],[SN=<SN>],[CLEI=<CLEI>],[TWL=<TWL>],
[PLUGINVENDORID=<PLUGINVENDORID>],[PLUGINPN=<PLUGINPN>],
[PLUGINHWREV=<PLUGINWREV>],[PLUGINFWREV=<PLUGINFWREV>],
[PLUGINSN=<PLUGINSN>],[ILOSSREF=<ILOSSREF>],[PID=<PID>],[VID=<VID>],
[FPGA=<FPGA>],[MODULETYPE=<MODULETYPE>]";
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
  "SLOT-15,OC3-IR-4::PLUGTYPE=SX-IR-SW-SN,PN=87-31-00002,HWREV=004K,
FWREV=76-99-00009-004A,SN=013510,CLEI=NOCLEI,TWL1=1546.12,TWL2=1546.92,
TWL3=1547.72,TWL4=1548.51,PLUGINVENDORID=012345,PLUGINPN=ABCDE,
PLUGINHWREV=ABCDE,PLUGINFWREV=01-02-03,PLUGINSN=01234,ILOSSREF=1.0,
PID=CISCO_ONS15454,VID=V01,FPGA=F451,MODULETYPE=101"
;
```

**Output Parameters**

<AID>	Access identifier from the <a href="#">“26.15 EQPT” section on page 26-37</a>
<AIDTYPE>	Specifies the type of (AID) facility, link or other addressable entity targeted by the message. AIDTYPE is a string.
<PLUGTYPE>	(Optional) Describes the type of plug-in. PLUGTYPE is a string.
<PN>	(Optional) Hardware part number. PN is a string.
<HWREV>	(Optional) Hardware revision. HWREV is a string.
<FWREV>	(Optional) Firmware revision. It is also known as Bootrom revision. FWREV is a string.
<SN>	(Optional) Serial number. SN is a string.
<CLEI>	(Optional) Common language equipment identifier code for the equipment. CLEI is a string.
<TWL1>	(Optional) Tunable wavelength 1.
• 1310	Wavelength 1310
• 1470	Wavelength 1470
• 1490	Wavelength 1490
• 1510	Wavelength 1510
• 1529.55	Wavelength 1529.55
• 1529.94	Wavelength 1529.94
• 1530	Wavelength 1530
• 1530.33	Wavelength 1530.33
• 1530.73	Wavelength 1530.73
• 1531.12	Wavelength 1531.12
• 1531.51	Wavelength 1531.51
• 1531.90	Wavelength 1531.90
• 1532.29	Wavelength 1532.29
• 1532.68	Wavelength 1532.68
• 1533.07	Wavelength 1533.07
• 1533.47	Wavelength 1533.47
• 1533.86	Wavelength 1533.86
• 1534.25	Wavelength 1534.25
• 1534.64	Wavelength 1534.64
• 1535.04	Wavelength 1535.04
• 1535.43	Wavelength 1535.43
• 1535.82	Wavelength 1535.82

• 1536.22	Wavelength 1536.22
• 1536.61	Wavelength 1536.61
• 1537	Wavelength 1537
• 1537.40	Wavelength 1537.40
• 1537.79	Wavelength 1537.79
• 1538.19	Wavelength 1538.19
• 1538.58	Wavelength 1538.58
• 1538.98	Wavelength 1538.98
• 1539.37	Wavelength 1539.37
• 1539.77	Wavelength 1539.77
• 1540.16	Wavelength 1540.16
• 1540.56	Wavelength 1540.56
• 1540.95	Wavelength 1540.95
• 1541.35	Wavelength 1541.35
• 1541.75	Wavelength 1541.75
• 1542.14	Wavelength 1542.14
• 1542.35	Wavelength 1542.35
• 1542.54	Wavelength 1542.54
• 1542.94	Wavelength 1542.94
• 1543.33	Wavelength 1543.33
• 1543.73	Wavelength 1543.73
• 1544.13	Wavelength 1544.13
• 1544.53	Wavelength 1544.53
• 1544.92	Wavelength 1544.92
• 1545.32	Wavelength 1545.32
• 1545.72	Wavelength 1545.72
• 1546.12	Wavelength 1546.12
• 1546.52	Wavelength 1546.52
• 1546.92	Wavelength 1546.92
• 1547.32	Wavelength 1547.32
• 1547.72	Wavelength 1547.72
• 1548.12	Wavelength 1548.12
• 1548.51	Wavelength 1548.51
• 1548.92	Wavelength 1548.92
• 1549.32	Wavelength 1549.32
• 1549.71	Wavelength 1549.71
• 1550	Wavelength 1500
• 1550.12	Wavelength 1550.12
• 1550.52	Wavelength 1550.52
• 1550.92	Wavelength 1550.92
• 1551.32	Wavelength 1551.32

• 1551.72	Wavelength 1551.72
• 1552.12	Wavelength 1552.12
• 1552.52	Wavelength 1552.52
• 1552.93	Wavelength 1552.93
• 1553.33	Wavelength 1553.33
• 1553.73	Wavelength 1553.73
• 1554.13	Wavelength 1554.13
• 1554.13	Wavelength 1554.13
• 1554.94	Wavelength 1554.94
• 1555.34	Wavelength 1555.34
• 1555.75	Wavelength 1555.75
• 1556.15	Wavelength 1556.15
• 1556.55	Wavelength 1556.55
• 1556.96	Wavelength 1556.96
• 1557.36	Wavelength 1557.36
• 1557.77	Wavelength 1557.77
• 1558.17	Wavelength 1558.17
• 1558.58	Wavelength 1558.58
• 1558.98	Wavelength 1558.98
• 1559.39	Wavelength 1559.39
• 1559.79	Wavelength 1559.79
• 1560.20	Wavelength 1560.20
• 1560.61	Wavelength 1560.61
• 1561.01	Wavelength 1561.01
• 1561.42	Wavelength 1561.42
• 1561.83	Wavelength 1561.83
• 1570	Wavelength 1570
• 1570.83	Wavelength 1570.83
• 1571.24	Wavelength 1571.24
• 1571.65	Wavelength 1571.65
• 1572.06	Wavelength 1572.06
• 1572.48	Wavelength 1572.48
• 1572.89	Wavelength 1572.89
• 1573.30	Wavelength 1573.30
• 1573.71	Wavelength 1573.71
• 1574.13	Wavelength 1574.13
• 1574.54	Wavelength 1574.54
• 1574.95	Wavelength 1574.95
• 1575.37	Wavelength 1575.37
• 1575.78	Wavelength 1575.78
• 1576.20	Wavelength 1576.20

• 1576.61	Wavelength 1576.61
• 1577.03	Wavelength 1577.03
• 1577.44	Wavelength 1577.44
• 1577.86	Wavelength 1577.86
• 1578.27	Wavelength 1578.27
• 1578.69	Wavelength 1578.69
• 1579.10	Wavelength 1579.10
• 1579.52	Wavelength 1579.52
• 1579.93	Wavelength 1579.93
• 1580.35	Wavelength 1580.35
• 1580.77	Wavelength 1580.77
• 1581.18	Wavelength 1581.18
• 1581.60	Wavelength 1581.60
• 1582.02	Wavelength 1582.02
• 1582.44	Wavelength 1582.44
• 1582.85	Wavelength 1582.85
• 1583.27	Wavelength 1583.27
• 1583.69	Wavelength 1583.69
• 1584.11	Wavelength 1584.11
• 1584.53	Wavelength 1584.53
• 1584.95	Wavelength 1584.95
• 1585.36	Wavelength 1585.36
• 1585.78	Wavelength 1585.78
• 1586.20	Wavelength 1586.20
• 1586.62	Wavelength 1586.62
• 1587.04	Wavelength 1587.04
• 1587.46	Wavelength 1587.46
• 1587.88	Wavelength 1587.88
• 1588.30	Wavelength 1588.30
• 1588.73	Wavelength 1588.73
• 1589.15	Wavelength 1589.15
• 1589.57	Wavelength 1589.57
• 1589.99	Wavelength 1589.99
• 1590	Wavelength 1590
• 1590.41	Wavelength 1590.41
• 1590.83	Wavelength 1590.83
• 1591.26	Wavelength 1591.26
• 1591.68	Wavelength 1591.68
• 1592.10	Wavelength 1592.10
• 1592.52	Wavelength 1592.52
• 1592.95	Wavelength 1592.95

• 1593.37	Wavelength 1593.37
• 1593.79	Wavelength 1593.79
• 1594.22	Wavelength 1594.22
• 1594.64	Wavelength 1594.64
• 1595.06	Wavelength 1595.06
• 1595.49	Wavelength 1595.49
• 1596.34	Wavelength 1596.34
• 1596.76	Wavelength 1596.76
• 1597.19	Wavelength 1597.19
• 1597.62	Wavelength 1597.62
• 1598.04	Wavelength 1598.04
• 1598.47	Wavelength 1598.47
• 1598.89	Wavelength 1598.89
• 1599.32	Wavelength 1599.32
• 1599.75	Wavelength 1599.75
• 1600.06	Wavelength 1600.06
• 1601.03	Wavelength 1601.03
• 1601.46	Wavelength 1601.46
• 1601.88	Wavelength 1601.88
• 1602.31	Wavelength 1602.31
• 1602.74	Wavelength 1602.74
• 1603.17	Wavelength 1603.17
• 1603.60	Wavelength 1603.60
• 1604.03	Wavelength 1604.03
• 1610	Wavelength 1610
• USE-TWL1	Use Tunable Wavelength 1
<PLUGINVENDORID>	(Optional) Plugin vendor ID. Integer.
<PLUGINPN>	(Optional) Third-party plug-in module HW part number. Applicable only to optical service channel cards, optical amplifier cards, dispersion compensation units, multiplexer and demultiplexer cards, and OADM cards. PLUGINPN is a string.
<PLUGINHWREV>	(Optional) Third-party plug-in module hardware revision. Applicable only to optical service channel cards, optical amplifier cards, dispersion compensation units, multiplexer and demultiplexer cards, and OADM cards. PLUGINHWREV is a string.
<PLUGINFWREV>	(Optional) Third-party plug-in module firmware. Applicable only to optical service channel cards, optical amplifier cards, dispersion compensation units, multiplexer and demultiplexer cards, and OADM cards. PLUGINFWREV is a string.
<PLUGINSN>	(Optional) Third-party plug-in module serial number. Applicable only to optical service channel cards, optical amplifier cards, dispersion compensation units, multiplexer and demultiplexer cards, and OADM cards. PLUGINSW is a string.

<ILOSSREF>	(Optional) The insertion loss reference calculated by the unit as worst insertion loss of all the unit. The parameter type is REVERTIVE_TIME.
• 0.5 to 12.0	Revertive time is 0.5 to 12.0 minutes
<PID>	(Optional) Product ID of the module. PID is a string.
<VID>	(Optional) Vendor ID. VID is a string.
<FPGA>	(Optional) FPGA version. FPGA is a string.
<MODULETYPE>	(Optional) Describes the type of embedded plugin module. String.

**Note**

If the SFP contains manufacturing information or data that is not compliant with Telcordia GR-831 (Appendix A), the system automatically adds quotes (") around the invalid characters in the TL1 response. TL1 is Telcordia GR-831 compliant after Software Release 7.0.4.

## 21.64 RTRV-L2-ETH

(Cisco ONS 15454) The Retrieve Layer 2 Ethernet (RTRV-L2-ETH) command retrieves the Layer 2 port information of the Ethernet card.

**Usage Guidelines** None

**Category** Ethernet

**Security** Retrieve

**Input Format** RTRV-L2-ETH:[<TID>]:<AID>:<CTAG>[::];

**Input Example** RTRV-L2-ETH:PETALUMA:FAC-1-1:CTAG;

**Input Parameters**

<AID>	Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the <a href="#">“26.16 ETH” section on page 26-40</a> .
-------	--

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<AID>:[:<NIMODE>],[<MACLEARNING>],[<INGRESSCOS>],[<ETHERCETYPE>],[<ETHERS
TYPE>],[<ALWMACADDR>],[<INHMACADDR>],[<BPDU>],[<BRIDGESTATE>],[<ACTBRIDG
```

```
ESTATE>],[<QNQMODE>],[<TRNSPSVLAN>],[<NAME>],[<IGMPROUTER>],[<AISACTION>],[
<PROTACTION>],[<IGMPONCVLAN>],[<IGMPCVLAN>],[<DLF>],[<DLFTHRES>],[<MCAST>]
,[<MCASTTHRES>],[<BCAST>],[<BCASTTHRES>],[<CLRCRCALM>]:”
;
```

**Output Example**

```
MS-55- 2010-11-09 01:26:55
```

```
M c COMPLD
```

```
"ETH-5-1-22-1::NIMODE=NNI,MACLEARNING=Y,INGRESSCOS=0,ETHERCETYPE=8100,ETH
ERSTYPE=8100,BPDU=Y,BRIDGESTATE=FORWARDING,ACTBRIDGESTATE=FORWARDING,
QNQMODE=SELECTIVE,IGMPROUTER=NONE,AISACTION=AIS-NONE,PROTACTION=PROT
SQUELCH,IGMPONCVLAN=N,DLF=N,DLFTHRES=0,MCAST=N,MCASTTHRES=0,BCAST=N,
BCASTTHRES=0,CLRCRCALM=N:"
```

**Output Parameters**

<ETHERNET>	Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the <a href="#">“26.16 ETH” section on page 26-40</a> .
<NIMODE>	Identifies the Ethernet network interface mode.
<ul style="list-style-type: none"> <li>• NNI</li> <li>• UNI</li> </ul>	<ul style="list-style-type: none"> <li>(Default) Network-network interface mode</li> <li>User-network interface mode</li> </ul>
<MACLEARNING>	MAC address learning mode. This activates MAC address learning on the interface to avoid packet broadcasting.
<ul style="list-style-type: none"> <li>• Y</li> <li>• N</li> </ul>	<ul style="list-style-type: none"> <li>Enables MAC learning</li> <li>Disable MAC learning</li> </ul>
<INGRESSCOS>	Identifies the CoS value set in the service provider VLAN (S-VLAN) tag.
<ETHERCETYPE>	Identifies a customer specific Ethernet type. If the customer uses a non-standard Ethernet type, the incoming packets will be accepted only if the customer VLAN (CE-VLAN) Ethernet type matches this parameter.
<ETHERSTYPE>	Identifies a customer specific Ethernet type. If the customer uses a non-standard Ethernet type, the incoming packets will be accepted only if the CE-VLAN Ethernet type matches this parameter.
<ALWMACADDR>	Identifies the allowed MAC addresses filtered out by the L2 Ethernet port. Every single MAC address is in the format of aa-bb-cc-dd-ee-ff, where every digit is in a hexadecimal form.
<INHMACADDR>	Identifies the inhibited MAC addresses filtered out by the L2 Ethernet port. Every single MAC address is in the format of aa-bb-cc-dd-ee-ff, where every digit is in a hexadecimal form.
<BPDU>	Bridge Protocol Data Unit (BPDU) management mode; Drop/Passthrough BPDU tagged packets.
<ul style="list-style-type: none"> <li>• Y</li> <li>• N</li> </ul>	<ul style="list-style-type: none"> <li>Enables the BPDU tag.</li> <li>Disables the BPDU tag.</li> </ul>

<BRIDGESTATE>	Defines if the traffic is blocked on the port.
• UNKNOWN	Unknown state
• DISABLED	Disabled state
• BLOCKING	Blocking state
• LISTENING	Listening state
• LEARNING	Learning state
• FORWARDING	Forwarding state
• BROKEN	Broken state
<ACTBRIDGESTATE>	Defines if the traffic is blocked on the port.
• UNKNOWN	Unknown state
• DISABLED	Disabled state
• BLOCKING	Blocking state
• LISTENING	Listening state
• LEARNING	Learning state
• FORWARDING	Forwarding state
• BROKEN	Broken state
<QNQMODE>	This is used to represent the IEEE 802.1Q tunneling (QinQ) mode operations.
• SELECTIVE	The S-VLAN tag is added only on specified CE-VLANs. The other packets are dropped.
• TRANSPARENT	The S-VLAN tag is always added where all packets having the S-VLAN-ID identified by the TRNSPSVLAN parameter are allowed.
<TRNSPSVLAN>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<NAME>	(Optional) Facility name. NAME is a string.
<CMDMDE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
<PST>	Primary state. The parameter type is PST, which indicates the current overall service condition of an entity.
• IS	In service
• OOS	Out of service
<SST>	Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic in service
• DSBLD	Disabled

• LPBK	Loopback
• MEA	Mismatch of equipment and attributes
• MT	Maintenance mode
• OOG	Out of group
• SWDL	Software downloading
• UAS	Unassigned
• UEQ	Unequipped
<IGMPCVLAN>	Indicates the customer VLAN value for IGMP on CVLAN.
<DLF>	To enable or disable storm control on DLFPC packet.
<DLFTHRES>	Indicates the DLFPC packet threshold value for storm control.
<MCAST>	To enable or disable the storm control on multicast packet.
<MCASTTHRES>	Indicates the multicast packet threshold value for storm control.
<BCAST>	To enable or disable the storm control on broadcast packet.
<BCASTTHRES>	Indicates the broadcast packet threshold value for storm control.
<CLRRCALM>	Clears the DATA-CRC alarm.

## 21.65 RTRV-L2-TOPO

(Cisco ONS 15454) The Retrieve Layer 2 topology (RTRV-L2-TOPO) command retrieves the LACP, REP, and EFM topology configuration.

### Usage Guidelines

The RTRV-L2-TOPO command retrieves the normal and detailed logs of a port that is configured with LACP, REP, or EFM topology.

### Category

Ports

### Security

Retrieve

### Input Format

RTRV-L2-TOPO:[<TID>]:<AID>:<CTAG>:::PROTOCOL=<PROTOCOL>,[LOGLEVEL=<LOGLEVEL>],[IDENTIFIER=<IDENTIFIER>];

### Input Example

RTRV-L2-TOPO::SLOT-16:1:::PROTOCOL=REP-INTERFACES,IDENTIFIER=2;



**Usage Guidelines**

- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.

**Category**

Ports

**Security**

Retrieve

**Input Format**

RTRV-LM-EFM:[&lt;TID&gt;]:&lt;AID&gt;:&lt;CTAG&gt;;

**Input Example**

RTRV-LM-EFM::ETH-12-1-1:1;

**Input Parameters**

<b>&lt;AID&gt;</b>	Access identifier from the <a href="#">“26.16 ETH”</a> section on page 26-40.
--------------------	---

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
  “AID>:[IMPARAM=<IMPARAM>], [HIGHTH=<HIGHTH>],
  [LOWTH=<LOWTH>],[ACTION=<ACTION>],[WINDOW=<WINDOW>];”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
  “ETH-7-1-1,LMPARAM=ERR-FRAME,LOWTH=1,HIGHTH=0,ACTION=NONE,WINDOW=10;”
;
```

**Output Parameters**

Parameter	Description
<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
<LMPARAM>	Name of the link monitoring parameter.
<ul style="list-style-type: none"> <li>• ERR-FRAME</li> </ul>	Error frames.
<ul style="list-style-type: none"> <li>• ERR-FRAME-PRD</li> </ul>	Error frame period.
<ul style="list-style-type: none"> <li>• ERR-FRAME-SEC</li> </ul>	Error frames second.
<LOWTH>	The lowest value of the link monitoring parameter. It is an integer.
<HIGHTH>	The highest value of the link monitoring parameter. It is an integer.

Parameter	Description
<ACTION>	Action to be taken when the link monitoring parameter crosses the HIGH value, which is set by the user. The value can be NONE or DISABLED.
<WINDOW>	This indicates the window associated with each of the link monitoring parameter (number of packets, number of frames or the timer). It is an integer.

## 21.67 RTRV-LMP

(Cisco ONS 15454) The Retrieve Link Management Protocol (RTRV-LMP) command retrieves the global LMP protocol attributes.

<b>Usage Guidelines</b>	This command is only available on platforms that support the LMP protocol.
<b>Category</b>	LMP
<b>Security</b>	Provisioning
<b>Input Format</b>	RTRV-LMP:[<TID>]::<CTAG>;
<b>Input Example</b>	RTRV-LMP:PETALUMA::704;
<b>Input Parameters</b>	None.
<b>Output Format</b>	<pre>SID DATE TIME M CTAG COMPLD "::ENABLE=&lt;ENABLE&gt;,[WDM=&lt;WDM&gt;],[ROLE=&lt;ROLE&gt;],[NODEID=&lt;NODEID&gt;], [OPSTATE=&lt;OPSTATE&gt;]" ;</pre>
<b>Output Example</b>	<pre>TID-000 1998-06-20 14:30:00 M 001 COMPLD "::ENABLE=Y,WDM=Y,ROLE=PEER,NODEID=198.133.219.25,OPSTATE=UP" ;</pre>

<b>Output Parameters</b>	<ENABLE>	LMP protocol status
	• Y	Protocol is enabled.
	• N	Protocol is disabled.
	<WDM>	Determines if the LMP WDM extensions are in effect.
	• Y	The LMP WDM extensions are in effect.
	• N	The LMP WDM extensions are not in effect.
	<ROLE>	The role the LMP protocol is configured to play.
	• OLS	The LMP protocol is configured to respond as a Optical Line System.
	• PEER	The LMP protocol is configured to respond as a peer node.
	<NODEID>	LMP Node ID. NODEID is a stable IP address that is always reachable if there is any connectivity to it. The default LMP node ID value is the IP address of the node.
<OPSTATE>	Indicates the operational status of the LMP protocol stack.	
• UP	LMP protocol is active.	
• DOWN	LMP protocol is not active.	

## 21.68 RTRV-LMP-CTRL

(Cisco ONS 15454) The Retrieve Link Management Protocol Control Channel (RTRV-LMP-CTRL) command retrieves the attributes of an LMP control channel.

**Usage Guidelines** This command is only available on platforms that support the LMP protocol.

**Category** LMP

**Security** Provisioning

**Input Format** RTRV-LMP-CTRL:[<TID>]:<SRC>:<CTAG>;

**Input Example** RTRV-LMP-CTRL:PETALUMA:CC-123:704;

<b>Input Parameters</b>	<SRC>	The LMP control channel AID.
	• CTRL-ALL	Specifies all the control channels.
	• CTRL-{1-4}	Specifies an individual control channel.

**Output Format**

```

SID DATE TIME
M CTAG COMPLD
"<AID>::REMOTEID=<REMOTEID>,LOCALPORT=<LOCALPORT>,REMOTEIP=<REMOTEIP>,
[HELLO=<HELLO>],[HELLOMIN=<HELLOMIN>],[HELLOMAX=<HELLOMAX>],
[DEAD=<DEAD>],[DEADMIN=<DEADMIN>],[DEADMAX=<DEADMAX>],
[OPSTATE=<OPSTATE>]:[<PST>[,<SST>]]
;

```

**Output Example**

```

TID-000 1998-06-20 14:30:0
M 001 COMPLD
"CTRL-2::REMOTEID=15.15.15.115,LOCALPORT=FAC-1-1-1,REMOTEIP=126.0.0.1,HELLO=50,
HELLOMIN=300,HELLOMAX=5000,DEAD=12000,DEADMIN=2000,DEADMAX=20000,
OPSTATE=UP:OOS,DSBLD"
;

```

**Output Parameters**

<REMOTEID>	Distinguishes the LMP control channel messages that are using the same local port to send messages.
<LOCALPORT>	The pathway that the LMP control channel will use to send and receive messages.
<REMOTEIP>	Remote IP address with which the LMP control channel sends and receives messages.
<HELLO>	The time interval within which the LMP protocol sends HELLO messages.
<HELLOMIN>	Minimum hello time the LMP control channels can send out HELLO messages to the remote node.
<HELLOMAX>	The maximum amount of time the LMP control channel can wait between HELLO messages.
<DEAD>	Time interval an LMP control channel will wait for a HELLO message from the remote side before listing the control channel as down.
<DEADMIN>	The minimum amount of time that an LMP control channel can wait before listing the control channel status as down.
<DEADMAX>	The maximum amount of time that an LMP control channel can wait before listing the control channel status as down.
<OPSTATE>	Indicates the operational status of the LMP protocol stack.
• UP	The control channel is communicating with its counterpart on the remote node.
• DOWN	The control channel is not communicating with its counterpart on the remote node.
• GOING DOWN	The LMP stack sets the ControlChannelDown bit in all the messages it sends. This is mainly because of administrative action.
• GOING UP	The control channel is in the process of transitioning to the UP state.

• CFG-SND	The control channel is in the parameter negotiation state. In this state, the node periodically sends a Config message, and is expecting the other side to reply with either a ConfigAck or ConfigNack message. The control channel Finite State Machine (FSM) does not transition into the ACTIVE state until the remote side positively acknowledges the parameters.
• CFG-RCV	The control channel is in the parameter negotiation state. In this state, the node is waiting for acceptable configuration parameters from the remote side. After these parameters are received and acknowledged, the FSM can transition to the ACTIVE state response.
• ACTIVE	In this state, the node periodically sends a Hello message and is waiting to receive a valid Hello message. After a valid Hello message is received, it can transition to the UP state.
• ACT-FAILED	Activation of the control channel failed.
• UNKNOWN	Unknown or unexpected state.
<PST>	Primary state. The parameter type is PST, which indicates the current overall service condition of an entity.
• IS	In Service
• OOS	Out of Service
<SST>	Secondary state of the entity. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic In-Service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of Equipment
• MT	Maintenance
• OOG	Out of Group
• SWDL	Software Download
• UAS	Unassigned
• UEQ	Unequipped

## 21.69 RTRV-LMP-TLINK

(Cisco ONS 15454) The Retrieve Link Management Protocol (RTRV-LMP-TLINK) command retrieves the attributes of an LMP Traffic Engineering (TE) link.

### Usage Guidelines

This command is limited to nodes where the LMP protocol is supported and has been enabled.

### Category

LMP

### Security

Provisioning

**Input Format** RTRV-LMP-TLINK:[<TID>]:<SRC>:<CTAG>;

**Input Example** RTRV-LMP-TLINK:PETALUMA:TLINK-123:704;

<b>Input Parameters</b>	<SRC>	LMP TE link AID values.
	<ul style="list-style-type: none"> <li>• TLINK-ALL</li> <li>• TLINK-{ 1-256 }</li> </ul>	<ul style="list-style-type: none"> <li>Specifies all the TE links.</li> <li>Specifies an individual TE link.</li> </ul>

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<SRC>::[REMOTEID=<REMOTEID>],[DWDM=<DWDM>],[RE MOTETE=<RE MOTETE>],
[MUXCAP=<MUXCAP>],[OPSTATE=<OPSTATE>]:[<PST>[,<SST>]]"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:0
M CTAG COMPLD
"TLINK-2::REMOTEID=15.15.15.115,DWDM=Y,RE MOTETE=3,MUXCAP=LAMBDA,
OPSTATE=UP:IS"
;
```

<b>Output Parameters</b>	<SRC>	LMP TE link AID values.
	<ul style="list-style-type: none"> <li>• TLINK-ALL</li> <li>• TLINK-{ 1-256 }</li> </ul>	<ul style="list-style-type: none"> <li>Specifies all the TE links.</li> <li>Specifies an individual TE link.</li> </ul>
	<REMOTEID>	Remote node ID associated with the LMP TE link.
	<DWDM>	Indicates whether or not the LMP TE link supports DWDM.
	<ul style="list-style-type: none"> <li>• Y</li> <li>• N</li> </ul>	<ul style="list-style-type: none"> <li>The LMP TE link supports DWDM.</li> <li>The LMP TE link does not support DWDM.</li> </ul>
	<RE MOTETE>	Remote ID used by the far-end LMP TE link.
	<MUXCAP>	The muxponder capability of the LMP TE link.
	<ul style="list-style-type: none"> <li>• PKTSWITCH1</li> <li>• PKTSWITCH2</li> <li>• PKTSWITCH3</li> <li>• PKTSWITCH4</li> <li>• LAYER2</li> <li>• TDM</li> <li>• LAMBDA</li> <li>• FIBER</li> </ul>	<ul style="list-style-type: none"> <li>Packet Switching 1</li> <li>Packet Switching 2</li> <li>Packet Switching 3</li> <li>Packet Switching 4</li> <li>Layer 2 switching</li> <li>Time-division multiplexing (TDM) switching</li> <li>Lambda switching</li> <li>Fiber switching</li> </ul>
	<OPSTATE>	Indicates the operational status of a TE link.
	<ul style="list-style-type: none"> <li>• DEGRADED</li> </ul>	In this state, all LMP control channels are down, but the TE link still includes some data links that are allocated to user traffic.

• INIT	Data links have been allocated to the TE link, but the configuration has not yet been synchronized with the LMP neighbor. A LinkSummary message is periodically transmitted to the LMP neighbor.
• UP	The TE link is communicating with its counterpart on the remote node.
• DOWN	The TE link is not communicating with its counterpart on the remote node.
• UNKNOWN	Unknown or unexpected state.
<PST>	Primary state. This parameter indicates the current overall service condition of an entity.
• IS	In service
• OOS	Out of service
<SST>	Secondary state. This parameter provides additional information pertaining to PST and PSTQ.
• AINS	Automatic In-Service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of Equipment
• MT	Maintenance
• OOG	Out of Group
• SWDL	Software Download
• UAS	Unassigned
• UEQ	Unequipped

## 21.70 RTRV-LMP-DLINK

(Cisco ONS 15454) The Retrieve Link Management Protocol (RTRV-LMP-DLINK) command retrieves the attributes of an LMP data link.

**Usage Guidelines** This command is only applicable on a node where the LMP protocol is supported and enabled.

**Category** LMP

**Security** Provisioning

**Input Format** RTRVD-LMP-DLINK:[<TID>]:<SRC>:<CTAG>;

**Input Example** RTRV-LMP-DLINK:PETALUMA:FAC-14-1-1:704;

<b>Input Parameters</b>	<SRC>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
<b>Output Format</b>	<pre> SID DATE TIME M CTAG COMPLD "&lt;AID&gt;::[LINKTYPE=&lt;LINKTYPE&gt;],[REMOTEID=&lt;REMOTEID&gt;],[TELINK=&lt;TELINK&gt;], [OPSTATE=&lt;OPSTATE&gt;]" ; </pre>	
<b>Output Example</b>	<pre> TID-000 1998-06-20 14:30:00 M 001 COMPLD "FAC-14-1-1::LINKTYPE=PORT,REMOTEID=45,TELINK=TLINK-4,OPSTATE=UP-ALLOC" ; </pre>	
<b>Output Parameters</b>	<SRC>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
	<LINKTYPE>	The type of LMP data link.
	<ul style="list-style-type: none"> <li>PORT</li> <li>COMPONENT</li> </ul>	<ul style="list-style-type: none"> <li>Port data link.</li> <li>Component data link.</li> </ul>
	<REMOTEID>	The remote LMP data link ID.
	<TELINK>	Used to map LMP data links to LMP TE links.
	<OPSTATE>	Indicates the operational status of an LMP data link.
	<ul style="list-style-type: none"> <li>TESTING</li> <li>DOWN</li> <li>UP-ALLOC</li> <li>UP-FREE</li> </ul>	<ul style="list-style-type: none"> <li>The data link is being tested. An LMP test message is periodically sent through the link.</li> <li>The data link is not communicating with its counterpart on the remote node.</li> <li>The link is up and has been allocated for data traffic.</li> <li>The link has been successfully tested and is now put in the pool of resources (in-service). The link has not yet been allocated to data traffic.</li> </ul>

## 21.71 RTRV-LNK

(Cisco ONS 15454) The Retrieve Link (RTRV-LNK) command retrieves all the (optical) links created in the NE. The end information is returned along with the type of (optical) link.

**Usage Guidelines** None

**Category** DWDM

**Security** Retrieve

**Input Format** RTRV-LNK:[<TID>]::<CTAG>;

**Input Example** RTRV-LNK:PENNGROVE::114;

**Input Parameters** None that require description

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<FROM>,<TO>::[OLNKT=<OLNKT>],[CTYPE=<CTYPE>],[RDIRN=<RDIRN>],
[BAND=<BAND>],[WLEN=<WLEN>]:<PSTPSTQ>,<SST>]"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"BAND-6-1-TX,BAND-13-1-RX::OLNKT=HITLESS,CTYPE=PROV,
RDIRN=W_E, BAND=1530.32-1532.68,WLEN=1530.32:OOS-AU,AINS"
;
```

<b>Output Parameters</b>	<FROM>	Access identifier from the <a href="#">“26.1 ALL” section on page 26-1</a> . Identifies an entity at one end of the optical link.
	<TO>	Access identifier from the <a href="#">“26.1 ALL” section on page 26-1</a> . Identifies an entity at the other end of the optical link.
	<OLNKT>	(Optional) Optical link type. The parameter type is OPTICAL_LINK_TYPE, which is the type of optical link between two optical facilities.
	• ADD-DROP	Link between two points that results in an add/drop connection from a drop point to an add point
	• HITLESS	Link between two OMS points that results in a hitless connection from a drop point to an add point of a consecutive band/channel filter
	• MPO	MPO connector
	• OTS	Link between two OTS points
	• OTS-INTLEAV	Link between two OTS points interrupted by an interleaver card that the system does not monitor.
	<CTYPE>	(Optional) The type of cross-connection. Indicates if the optical link is provisioned by the user or automatically created by the NE. The parameter type is CREATION_TYPE, which is the optical link creation type.
	• AUTO	Automatically created by the NE

• PROV	Provisioned by the user
<RDIRN>	(Optional) Ring directionality of the optical line. The parameter type is RDIRN_MODE, which is the optical ring directionality.
• E-W	The direction of the signal is from east to west (clockwise).
• W-E	The direction of the signal is from west to east (counterclockwise).
<BAND>	(Optional) The optical band (group of four contiguous wavelengths) for this optical link. BAND is present only when there is a link between two OMS entities. The parameter type is OPTICAL_BAND.
• 1530.33 to 1532.68	Band 1
• 1534.25 to 1536.61	Band 2
• 1538.19 to 1540.56	Band 3
• 1542.14 to 1544.53	Band 4
• 1546.12 to 1548.51	Band 5
• 1550.12 to 1552.52	Band 6
• 1554.13 to 1556.55	Band 7
• 1558.17 to 1560.61	Band 8
• USE-DEFAULT	This band is not yet configured/retrieved from the unit.
<WLEN>	(Optional) Optical wavelength for this optical link. WLEN is present only when there is a link between two OCH entities. The parameter type is OPTICAL_WLEN (optical wavelength).
• 1310	Wavelength 1310
• 1470	Wavelength 1470
• 1490	Wavelength 1490
• 1510	Wavelength 1510
• 1528.77	Wavelength 1528.77
• 1529.55	Wavelength 1529.55
• 1529.94	Wavelength 1529.94
• 1530	Wavelength 1530
• 1530.33	Wavelength 1530.33
• 1530.72	Wavelength 1530.72
• 1531.12	Wavelength 1531.12
• 1531.51	Wavelength 1531.51
• 1531.90	Wavelength 1531.90
• 1532.29	Wavelength 1532.29
• 1532.68	Wavelength 1532.68
• 1533.07	Wavelength 1533.07
• 1533.47	Wavelength 1533.47
• 1533.86	Wavelength 1533.86
• 1534.25	Wavelength 1534.25
• 1534.64	Wavelength 1534.64
• 1535.04	Wavelength 1535.04
• 1535.43	Wavelength 1535.43

• 1535.82	Wavelength 1535.82
• 1536.22	Wavelength 1536.22
• 1536.61	Wavelength 1536.61
• 1537	Wavelength 1537
• 1537.40	Wavelength 1537.40
• 1537.79	Wavelength 1537.79
• 1538.19	Wavelength 1538.19
• 1538.58	Wavelength 1538.58
• 1538.98	Wavelength 1538.98
• 1539.37	Wavelength 1539.37
• 1539.77	Wavelength 1539.77
• 1540.16	Wavelength 1540.16
• 1540.56	Wavelength 1540.56
• 1540.95	Wavelength 1540.95
• 1541.35	Wavelength 1541.35
• 1541.75	Wavelength 1541.75
• 1542.14	Wavelength 1542.14
• 1542.35	Wavelength 1542.35
• 1542.54	Wavelength 1542.54
• 1542.94	Wavelength 1542.94
• 1543.33	Wavelength 1543.33
• 1543.73	Wavelength 1543.73
• 1544.13	Wavelength 1544.13
• 1544.53	Wavelength 1544.53
• 1544.92	Wavelength 1544.92
• 1545.32	Wavelength 1545.32
• 1545.72	Wavelength 1545.72
• 1546.12	Wavelength 1546.12
• 1546.52	Wavelength 1546.52
• 1546.92	Wavelength 1546.92
• 1547.32	Wavelength 1547.32
• 1547.72	Wavelength 1547.72
• 1548.11	Wavelength 1548.11
• 1548.51	Wavelength 1548.51
• 1548.91	Wavelength 1548.91
• 1549.32	Wavelength 1549.32
• 1549.72	Wavelength 1549.72
• 1550	Wavelength 1500
• 1550.12	Wavelength 1550.12
• 1550.52	Wavelength 1550.52
• 1550.92	Wavelength 1550.92

• 1551.32	Wavelength 1551.32
• 1551.72	Wavelength 1551.72
• 1552.12	Wavelength 1552.12
• 1552.52	Wavelength 1552.52
• 1552.93	Wavelength 1552.93
• 1553.33	Wavelength 1553.33
• 1553.73	Wavelength 1553.73
• 1554.13	Wavelength 1554.13
• 1554.13	Wavelength 1554.13
• 1554.94	Wavelength 1554.94
• 1555.34	Wavelength 1555.34
• 1555.75	Wavelength 1555.75
• 1556.15	Wavelength 1556.15
• 1556.55	Wavelength 1556.55
• 1556.96	Wavelength 1556.96
• 1557.36	Wavelength 1557.36
• 1557.77	Wavelength 1557.77
• 1558.17	Wavelength 1558.17
• 1558.58	Wavelength 1558.58
• 1558.98	Wavelength 1558.98
• 1559.39	Wavelength 1559.39
• 1559.79	Wavelength 1559.79
• 1560.20	Wavelength 1560.20
• 1560.61	Wavelength 1560.61
• 1561.01	Wavelength 1561.01
• 1561.42	Wavelength 1561.42
• 1561.83	Wavelength 1561.83
• 1570	Wavelength 1570
• 1570.83	Wavelength 1570.83
• 1571.24	Wavelength 1571.24
• 1571.65	Wavelength 1571.65
• 1572.06	Wavelength 1572.06
• 1572.48	Wavelength 1572.48
• 1572.89	Wavelength 1572.89
• 1573.30	Wavelength 1573.30
• 1573.71	Wavelength 1573.71
• 1574.13	Wavelength 1574.13
• 1574.54	Wavelength 1574.54
• 1574.95	Wavelength 1574.95
• 1575.37	Wavelength 1575.37
• 1575.78	Wavelength 1575.78

• 1576.20	Wavelength 1576.20
• 1576.61	Wavelength 1576.61
• 1577.03	Wavelength 1577.03
• 1577.44	Wavelength 1577.44
• 1577.86	Wavelength 1577.86
• 1578.27	Wavelength 1578.27
• 1578.69	Wavelength 1578.69
• 1579.10	Wavelength 1579.10
• 1579.52	Wavelength 1579.52
• 1579.93	Wavelength 1579.93
• 1580.35	Wavelength 1580.35
• 1580.77	Wavelength 1580.77
• 1581.18	Wavelength 1581.18
• 1581.60	Wavelength 1581.60
• 1582.02	Wavelength 1582.02
• 1582.44	Wavelength 1582.44
• 1582.85	Wavelength 1582.85
• 1583.27	Wavelength 1583.27
• 1583.69	Wavelength 1583.69
• 1584.11	Wavelength 1584.11
• 1584.53	Wavelength 1584.53
• 1584.95	Wavelength 1584.95
• 1585.36	Wavelength 1585.36
• 1585.78	Wavelength 1585.78
• 1586.20	Wavelength 1586.20
• 1586.62	Wavelength 1586.62
• 1587.04	Wavelength 1587.04
• 1587.46	Wavelength 1587.46
• 1587.88	Wavelength 1587.88
• 1588.30	Wavelength 1588.30
• 1588.73	Wavelength 1588.73
• 1589.15	Wavelength 1589.15
• 1589.57	Wavelength 1589.57
• 1589.99	Wavelength 1589.99
• 1590	Wavelength 1590
• 1590.41	Wavelength 1590.41
• 1590.83	Wavelength 1590.83
• 1591.26	Wavelength 1591.26
• 1591.68	Wavelength 1591.68
• 1592.10	Wavelength 1592.10
• 1592.52	Wavelength 1592.52

• 1592.95	Wavelength 1592.95
• 1593.37	Wavelength 1593.37
• 1593.79	Wavelength 1593.79
• 1594.22	Wavelength 1594.22
• 1594.64	Wavelength 1594.64
• 1595.06	Wavelength 1595.06
• 1595.49	Wavelength 1595.49
• 1596.34	Wavelength 1596.34
• 1596.76	Wavelength 1596.76
• 1597.19	Wavelength 1597.19
• 1597.62	Wavelength 1597.62
• 1598.04	Wavelength 1598.04
• 1598.47	Wavelength 1598.47
• 1598.89	Wavelength 1598.89
• 1599.32	Wavelength 1599.32
• 1599.75	Wavelength 1599.75
• 1600.06	Wavelength 1600.06
• 1601.03	Wavelength 1601.03
• 1601.46	Wavelength 1601.46
• 1601.88	Wavelength 1601.88
• 1602.31	Wavelength 1602.31
• 1602.74	Wavelength 1602.74
• 1603.17	Wavelength 1603.17
• 1603.60	Wavelength 1603.60
• 1604.03	Wavelength 1604.03
• 1610	Wavelength 1610
• USE-TWL1	Use Tunable Wavelength 1
<PST_PSTQ>	Primary state of the entity. The parameter type is PST_PSTQ, which is the service state of the entity described by the SST and PSTQ.
• IS_NR	In Service and Normal
• OOS-AU	Out of Service and Autonomous
• OOS-AUMA	Out of Service and Autonomous Management
• OOS-MA	Out of Service and Management
<SST>	(Optional) Secondary state of the entity. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic In-Service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of Equipment
• MT	Maintenance
• OOG	Out of Group
• SWDL	Software Download

• UAS	Unassigned
• UEQ	Unequipped

## 21.72 RTRV-LNKTERM

(Cisco ONS 15454) The Retrieve Provisionable Patchcord Termination (RTRV-LNKTERM) command retrieves information about one or more provisionable patchcord (PP) terminations.

### Usage Guidelines

- All the terminations can be retrieved using ALL or LNKTERM-ALL as the AID.
- If the PP termination does not exist, an error message will be returned.

### Category

Provisionable Patchcords

### Security

Retrieve

### Input Format

RTRV-LNKTERM:[<TID>]:<AID>:<CTAG>;

### Input Example

RTRV-LNKTERM::LNKTERM-2:CTAG;

### Input Parameters

<AID> Access identifier from the [“26.21 LNKTERM”](#) section on page 26-50.

### Output Format

```
SID DATE TIME
M CTAG COMPLD
“<AID>::PORT=<PORT>,[RE MOTENODE=<RE MOTENODE>],
[RE MOTELNKTERMID=<RE MOTELNKTERMID>]”
;
```

### Output Example

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“LNKTERM-2::PORT=FAC-3-1,RE MOTENODE=172.20.221.225,RE MOTELNKTERMID=21”
;
```

### Output Parameters

<AID> Access identifier from the [“26.21 LNKTERM”](#) section on page 26-50.

<PORT> Access identifier from the [“26.2 AidUnionId”](#) section on page 26-13.

<REMOTENODE>	(Optional) Remote node. REMOTENODE is a string.
<REMOTELNKTERMID>	(Optional) Remote link term ID. REMOTELNKTERMID is a string.

## 21.73 RTRV-LOG

Cisco ONS 15454) The Retrieve Log (RTRV-LOG) command retrieves the alarm log of the NE.

### Usage Guidelines

The only option reported for LOGNM is ALARM.

### Category

Log

### Security

Retrieve

### Input Format

RTRV-LOG:[<TID>]::<CTAG>::<LOGNM>;

### Input Example

RTRV-LOG:CERENT::123::ALARM;

### Input Parameters

<LOGNM>	Log to be retrieved. The log name is ALARM. String.
---------	---

### Output Format

```
SID DATE TIME
M CTAG COMPLD
“<AID>,<ALMNUMBER>:CURRENT=<CURRENT>,[PREVIOUS=<PREVIOUS>],
<CONDITION>,<SRVEFF>,[TIME=<OCRTIME>],[DATE=<OCRDAT>]:<ALMDESCR>”
;
```

### Output Example

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“FAC-3-1,18:CURRENT=MJ,PREVIOUS=CL,EOC,NSA,TIME=16-33-04,
DATE=1971-02-03:\“SDCC TERMINATION FAILURE\””
;
```

### Output Parameters

<AID>	Access identifier from the <a href="#">“26.1 ALL” section on page 26-1</a> .
<ALMNUMBER>	Alarm number of the log. ALMNUMBER is an integer.
<CURRENT>	Current severity. The parameter type is NOTIF_CODE, which is the two-character notification code associated with an autonomous message.

• CL	The condition causing the alarm has cleared.
• CR	A critical alarm.
• MJ	A major alarm.
• MN	A minor alarm.
• NA	The condition is not alarmed.
• NR	The alarm is not reported.
<PREVIOUS>	(Optional) Previous severity. The parameter type is COND_EFF, which is the state of the condition upon the affected unit.
• CL	Standing condition cleared
• SC	Standing condition raised
• TC	Transient condition
<CONDITION>	Condition type for an alarm or a reported event. The parameter type is CONDITION, which is any problem detected on an ONS 15454 shelf, whether or not the problem is reported (that is, whether or not it generates a trouble notification). Reported conditions include alarms, NA conditions, and NR conditions. See <a href="#">Chapter 27, “Conditions”</a> for a list of conditions.
<OVRTIME>	(Optional) Time when the specific event or violation occurred, HH-MM-SS. Time when alarm was triggered.
<OCRDAT>	(Optional) Date when the specific event or violation occurred, MM-DD. Date when alarm was triggered.
<ALMDESCR>	Alarm description. ALMDESCR is a string.

## 21.74 RTRV-MA-CFM

(Cisco ONS 15454) The Retrieve Maintenance Association Connectivity Fault Management (RTRV-MA-CFM) command retrieves the maintenance association present on the card.

### Usage Guidelines

- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.

### Category

Equipment

### Security

Retrieve

### Input Format

RTRV-MA-CFM:[<TID>]:<AID>:<CTAG>;

### Input Example

RTRV-MA-CFM::SLOT-1:1;

Input Parameters	Input Parameters	Description
	<AID>	Access identifier from the <a href="#">“26.16 ETH”</a> section on page 26-40.
<b>Output Format</b>	SID DATE TIME M CTAG COMPLD “AID>:MANAME=<MANAME>, SVLANID=<SVLANID>, CCENABLE=<CCENABLE>[:];” ;	
<b>Output Example</b>	TID-000 1998-06-20 14:30:00 M 001 COMPLD “SLOT-7,MANAME=CISCO,SVLANID=1,CCENABLE=Y” ;	
Output Parameters	Parameter	Description
	<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
	<MANAME>	Maintenance Association Name. It is a string. The MA name length should not exceed more than 43 characters.
	<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
	<CCENABLE>	Enable or disable Continuous Check messaging
	• Y	Enable
	• N	Disable

## 21.75 RTRV-MACTABLE

(Cisco ONS 15454) The RTRV-MACTABLE command retrieves all the MAC addresses stored in the card, as well as the internal MAC addresses associated with each port of the card.

### Usage Guidelines

- This command is supported on GZ 1.0 and GZ 1.5 TXP/MXP cards.
- The card should be in Layer2 over DMDM mode to retrieve the MAC address.
- VLANID is applicable to the command only during the retrieval of learned MAC address.
- During the retrieval of Card MAC address, port 5 of 10GEXP card and port 23 of GEXP card stands for CPU port.

### Input Format

RTRV-MACTABLE:<TID>:<AID>:<CTAG>:::ADDRTYPE=<addrtype>,[VLANIDFROM=<vlanidfrom>],[VLANIDTO=<vlanidto>];

**Input Example** RTRV-MACTABLE::SLOT-12:1:::ADDRTYPE=LEARNED-MAC, VLANIDFROM=10, VLANIDTO=20;

**Output Format** SID DATE TIME  
M CTAG COMPLD  
“<AID>,<ADDRTYPE>,<PORT>,<VLANID>,<MACADDRESS>”  
;

**Output Example** SID DATE TIME  
M CTAG COMPLD  
"SLOT-1,ADDRTYPE=LEARNED-MAC,PORT=4,VLANID=199,MACADDRESS=10:10:10:10:10:10";

**Table 21-4 RTRV-MACTABLE command - Parameter Support**

Parameter	Description
<AID>	"ALL" AID is NOT supported for this operation.
<ADDRTYPE>	Indicates whether the address shown is card MAC address OR dynamically learned MAC address.
<ul style="list-style-type: none"> <li>CARD-MAC</li> <li>LEARNED-MAC</li> </ul>	Internal MAC Address of the card. Dynamically learnt MAC Address.
<VLANIDFROM>	VLAN range. It is the start of the VLANID. Valid range is from 1 to 4096. It is an optional parameter.
<VLANIDTO>	VLAN range. It is the end of the VLANID. Valid range is from 1 to 4096. It is an optional parameter.

## 21.76 RTRV-MAP-NETWORK

(Cisco ONS 15454) The Retrieve Map Network (RTRV-MAP-NETWORK) command retrieves all the NE attributes which are accessible from the GNE (gateway NE). The NE attributes include the node IP address (IPADDR), node name (TID), and the product type of the NE (PRODUCT).

**Usage Guidelines** The product type field in the response will appear as “unknown” for nodes that are not running the same version of software.

**Category** System

**Security** Retrieve

**Input Format** RTRV-MAP-NETWORK:[<TID>]::<CTAG>;

**Input Example** RTRV-MAP-NETWORK:CISCO::123;

**Input Parameters** None that require description

**Output Format** SID DATE TIME  
M CTAG COMPLD  
“<IPADDR>,<NODENAME>,<PRODUCT>”  
;

**Output Example** TID-000 1998-06-20 14:30:00  
M 001 COMPLD  
“172.20.222.225,TID-000,15454”  
;

<b>Output Parameters</b>	<IPADDR>	Node IP address. IPADDR is a string.
	<NODENAME>	Node name (TID). NODENAME is a string.
	<PRODUCT>	Product type of the NE. The parameter type is PRODUCT_-TYPE, which is the product (NE) type.
	• ONS15454	ONS 15454
	• ONS15454SDH	ONS 15454 SDH
	• ONS15454-M2	ONS 15454 M2
	• ONS15454-M2SDH	ONS 15454 M2 SDH
	• ONS15454-M6	ONS 15454 M6
	• ONS15454-M6	ONS 15454 M6 SDH
	• UNKNOWN	Unknown product type

## 21.77 RTRV-MCAST

(Cisco ONS 15454) The Retrieve the Multicast attributes command retrieves the Multicast VLAN Registration attributes.

**Usage Guidelines** None

**Category** Ethernet

**Security** Retrieve

## RTRV-MCAST

**Input Format** RTRV-MCAST:[<TID>]:<AID>:<CTAG>::[:];

**Input Example** RTRV-MCAST:TID:SLOT-1-5:CTAG;

**Input Parameters**

<AID>	Equipment aids are used to access specific cards.
ALL	It is only used for RTRV-INV, RTRV-EQPT, RTRV-ALM/COND-EQPT commands.
SLOT-ALL	The NE equipment AIDs.
SLOT[-{1-30}]-{1-6,12-17}	Individual equipment AID of the I/O card units or slots in a 15454.

**Output Format**

SID DATE TIME

M CTAG COMPLD

“<AID>::[:<MVRSTATE>],[<MVRSVLAN>],[<MVRSTARTIP>],[<MVRIPRANGE>],[<IGMPONC VLAN>].”;

**Output Example**

TID-000 1998-06-20 14:30:00

M 001 COMPLD

“SLOT-1-12::MVRSTATE=Y,MVRSVLAN=132,MVRSTARTIP=230.64.38.55,  
MVRIPRANGE=60:”

;

<b>Output Parameters</b>	<AID>	Equipment aids used to access specific cards.
	• ALL	It is only used for RTRV-INV, RTRV-EQPT, RTRV-ALM/COND-EQPT commands.
	• SLOT-ALL	All the NE equipment AIDs.
	• SLOT[-{1-30}]-{1-6,12-17}	Individual equipment AID of the I/O card units or slots.
	<MVRSTATE>	Multicast VLAN Registration status values.
	• Y	Enabled
	• N	Disabled
	<MVRSVLAN>	Define the SVLAN used to distribute the Multicast stream inside the Network. It is a value in the range 1-4096.
	<MVRSTARTIP>	The first IP Address of the Multicast IP Group.
<MVRIPRANGE>	MVR IP Range. Indicate the number of IP address starting from mvrStartIp used to identified the multicast IP group. It is a number in the range 1..255.	

## 21.78 RTRV-MD-CFM

(Cisco ONS 15454) The Retrieve Maintenance Domain Connectivity Fault Management (RTRV-MD-CFM) command retrieves the maintenance domain on the card.

### Usage Guidelines

- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.

### Category

Equipment

### Security

Retrieve

### Input Format

RTRV-MD-CFM:[<TID>]:<AID>:<CTAG>;

### Input Example

RTRV-MD-CFM:454-156:SLOT-1:1;

### Input Parameters

Input Parameters	Description
<AID>	Access identifier from the <a href="#">“26.15 EQPT”</a> section on <a href="#">page 26-37</a> .

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
  "AID>:[MDNAME=<MDNAME>],[LEVEL=<LEVEL>]"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"SLOT-7,MDNAME=MD1,LEVEL=4"
;
```

Output Parameters	Parameter	Description
	<AID>	Access identifier from the <a href="#">"26.15 EQPT"</a> section on page 26-37.
	<MDNAME>	Maintenance Domain Name. It is a string. The MD name length should not exceed more than 43 characters.
	<LEVEL>	This indicates the level of the maintenance domain. The value ranges from 0 to 7.

## 21.79 RTRV-MDMAMAP-CFM

(Cisco ONS 15454) The Retrieve Maintenance Domain and Maintenance Association mapping Connectivity Fault Management (RTRV-MDMAMAP-CFM) command retrieves the maintenance domain and maintenance association mapping.

- Usage Guidelines**
- This command is applicable only to GE\_XP and 10GE\_XP cards.
  - The card should be in Layer2 over DMDM mode.

**Category** Equipment

**Security** Retrieve

**Input Format** RTRV-MDMAMAP-CFM:[<TID>]:<AID>:<CTAG>:::MDNAME=<MDNAME>;

**Input Example** RRTRV-MDMAMAP-CFM::SLOT-4:A;

**Input Parameters**

<AID>	Access identifier from the <a href="#">"26.15 EQPT"</a> section on page 26-37.
-------	--

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<AID>:[MANAME=<MANAME>],[SVLANID=<SVLANID>],[CCENABLE=<CCENABLE>];"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
" SLOT-17,MDNAME=MD1,SVLANID=7,MANAME=MA3:"
;
```

<b>Output Parameters</b>	<AID>	Access identifier from the <a href="#">"26.15 EQPT"</a> section on page 26-37.
	<MANAME>	Maintenance Association Name. It is a string. The MA name length should not exceed more than 43 characters.
	<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
	<CCENABLE>	Enable or disable Continuous Check messaging
	• Y	Enable
	• N	Disable

## 21.80 RTRV-MEP-CFM

(Cisco ONS 15454) The Retrieve Maintenance End Point Connectivity Fault Management (RTRV-MEP-CFM) command retrieves the maintenance end points on the port.

**Usage Guidelines**

- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.

**Category** Ports

**Security** Retrieve

**Input Format** RTRV-MEP-CFM:[<TID>]:<AID>:<CTAG>;

**Input Example** RTRV-MEP-CFM::ETH-1-1-1:1;

Input Parameters	Input Parameters	Description
	<AID>	Access identifier from the <a href="#">“26.16 ETH”</a> section on page 26-40.
<b>Output Format</b>	SID DATE TIME M CTAG COMPLD “<AID>:[SVLANID=<SVLANID>],[MDNAME=<MDNAME>], [LEVEL=<LEVEL>],[MPID=<MPID>];” ;	
<b>Output Example</b>	TID-000 1998-06-20 14:30:00 M 001 COMPLD “ETH-3-4-1,SVLANID=200,MDNAME=D4,LEVEL=4,MPID=314” ;	
<b>Output Parameters</b>	<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
	<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
	<MDNAME>	Maintenance Domain Name. It is a string. The MD name length should not exceed more than 43 characters.
	<LEVEL>	This indicates the level of the maintenance domain. The value ranges from 0 to 7.
	<MPID>	Maintenance Point Identifier. It is an integer.

## 21.81 RTRV-MEPCCDB-CFM

(Cisco ONS 15454) The Retrieve Maintenance End Point Continuity Check Message Data Base Connectivity Fault Management (RTRV-MEPCCDB-CFM) command retrieves the maintenance end point continuity check message data base on a given slot.

### Usage Guidelines

- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.

### Category

Equipment

### Security

Retrieve

**Input Format**

RTRV-MEPCDB-CFM:[<TID>]:<AID>:<CTAG>:::[MDNAME=<MDNAME>],[VLANIDFROM=<VLANIDFROM>],[VLANIDTO=<VLANIDTO>];

**Input Example**

RTRV-MEPCDB-CFM::SLOT-1:1:::MDNAME=D2,VLANIDFROM=99,VLANIDTO=100;

**Input Parameters**

Input Parameters	Description
<AID>	Access identifier from the “26.15 EQPT” section on page 26-37.
<MDNAME>	Maintenance Domain Name. It is a string. The MD name length should not exceed more than 43 characters.
<VLANIDFROM>	VLAN range. It is the start of the VLANID. Valid range is from 1 to 4096. It is an optional parameter.
<VLANIDTO>	VLAN range. It is the end of the VLANID. Valid range is from 1 to 4096. It is an optional parameter.

**Output Format**

SID DATE TIME  
M CTAG COMPLD  
“<AID>:[MPID=<MPID>],[MACADDR=<MACADDR>],[MDNAME=<MDNAME>],[LEVEL=<LEVEL>],[MANAME=<MANAME>],[INPORT=<INPORT>],[CCLIFETIME=<CCLIFETIME>],[AGEOFLASTCC=<AGEOFLASTCC>],[RMTTPORSTATE=<RMTTPORTSTATE>];”  
;

**Output Example**

TID-000 1998-06-20 14:30:00  
M 001 COMPLD  
“SLOT-1,MPID=301,MACADDR=00:19:07:6C:B7:7A,MDNAME=D2,MANAME=M1,SVLANID=100,INPORT=0,CCLIFETIME=0,AGEOFLASTCC=0:”  
;

**Output Parameters**

Parameter	Description
<AID>	Access identifier from the “26.15 EQPT” section on page 26-37.
<MPID>	Maintenance Point Identifier. It is an integer.
<MACADDR>	(Optional) The MAC address for the 10 Gigabit Ethernet payload. MACADDR is a string.
<MDNAME>	Maintenance Domain Name. It is a string. The MD name length should not exceed more than 43 characters.
<LEVEL>	This indicates the level of the maintenance domain. The value ranges from 0 to 7.
<MANAME>	Maintenance Association Name. It is a string. The MA name length should not exceed more than 43 characters.
<INPORT>	Ingress port.

Parameter	Description
<CCLIFETIME>	Indicates the Continuity Check Message Timer Life Time on the receiving end. It indicates how long the interface has to wait for the CC message expiry. It is 3 times the CCTIMER.
<AGEOFLASTCC>	Age of the last CC timer. This indicates the time interval between the present time and the last time CC message received.
<RMTPORSTATE>	Indicates the state of the remote port.
• RMTPORT-INVALID	Invalid state.
• RMTPORT-UP	Up.
• RMTPORT-DOWN	Down.
• RMTPORT-TEST	Test.
• RMTPORT-UNKNOWN	Unknown port.
• RMTPORT-DORMANT	In active.
• RMTPORT-NOT-PRESENT	Port does not exist.
• LOWER-LAYER-DOWN	Lower layer is down.
• ADMIN-DOWN	Admin is down.
• REMOTE-EXCESSIVE-ERR	Excessive errors on the remote port.
• LOCAL-EXCESSIVE-ERR	Excessive errors on the local port.

## 21.82 RTRV-MEPSTATS-CFM

(Cisco ONS 15454) The Retrieve Maintenance End Point Statistics Connectivity Fault Management (RTRV-MEPSTATS-CFM) command retrieves the maintenance end point statistics.

### Usage Guidelines

- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.

### Category

Equipment

### Security

Retrieve

### Input Format

```
RTRV-MEPSTATS-CFM:[<TID>]:<AID>:<CTAG>:::[MDNAME=<MDNAME>],[VLANIDFROM=<VLANIDFROM>],[VLANIDTO=<VLANIDTO>];
```

### Input Example

```
RTRV-MEPSTATS-CFM::SLOT-4:a;
```

### Input Example

```
RTRV-MEPCCDB-CFM::SLOT-1:1:::MDNAME=D2,VLANIDFROM=99,VLANIDTO=100;
```

Input Parameters	Input Parameters	Description
	<AID>	Access identifier from the “26.15 EQPT” section on page 26-37.
	<MDNAME>	Maintenance Domain Name. It is a string. The MD name length should not exceed more than 43 characters.
	<VLANIDFROM>	VLAN range. It is the start of the VLANID. Valid range is from 1 to 4096. It is an optional parameter.
	<VLANIDTO>	VLAN range. It is the end of the VLANID. Valid range is from 1 to 4096. It is an optional parameter.

**Output Format**

```

SID DATE TIME
M CTAG COMPLD
“M CTAG COMPLD;
<AID>,<MDNAME>,<SVLANID>,<MPID>,<CCMTRANSMITTED>,<CCMRCVD>,
<CCRCVDSEQERROR>,<LTRUNEXPTDRCVD>,<LBRTRANSMITTED>,
<LBRRCDVINORDER>,<LBRRCDVSEQERROR>,<LBRRCDVBADMSDU>”;
;

```

**Output Example**

```

TID-000 1998-06-20 14:30:00
M 001 COMPLD
“SLOT-3,MDNAME=Domain_6,SVLANID=30,MPID=600,CCMTRANSMTD=801,CCMRCVDSEQ
ERR=0,CCRCVDSEQERR=0,LTRUNEXPDRCDVD=0,LBRTRANSMTD=0,LBRRCDVINORDER=0,
LBRRCDVSEQERR=0,LBRRCDVBADMSDU=0”
;

```

**Output Parameters**

<AID>	Access identifier from the “26.15 EQPT” section on page 26-37.
<MDNAME >	Maintenance Domain Name. It is a string. The MD name length should not exceed more than 43 characters.
<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<MPID>	Maintenance Point Identifier. It is an integer.
<CCMTRANSMTD>	Indicates the transmission of continuity check messages.
<CCMRCVD>	Continuity check messages received.
<CCRCVDSEQERR>	Continuity check received with sequence errors.
<LTRUNEXPDRCDVD>	Link trace reply received unexpectedly.
<LBRTRANSMTD>	Loopback reply transmitted.
<LBRRCDVINORDER>	Loopback reply received in order.
<LBRRCDVSEQERR>	Loopback reply received with sequence error.
<LBRRCDVBADMSDU>	Loopback reply received with bad MSDU.

## 21.83 RTRV-MIP-CFM

(Cisco ONS 15454) The Retrieve Maintenance Intermediate Point Connectivity Fault Management (RTRV-MIP-CFM) command retrieves the maintenance intermediate points on the port.

### Usage Guidelines

- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.

### Category

Ports

### Security

Retrieve

### Input Format

RTRV-MIP-CFM:[<TID>]:<AID>:<CTAG>;

### Input Example

RTRV-MIP-CFM::ETH-1-1-1:1;

### Input Parameters

<AID>	Access identifier from the <a href="#">“26.16 ETH”</a> section on page 26-40.
-------	---

### Output Format

```
SID DATE TIME
M CTAG COMPLD
“M CTAG COMPLD; “<<AID>,<VLANID>,<LEVEL>”
;
```

### Output Example

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“ETH-17-1-1,VLANID=6,LEVEL=7”
;
```

### Output Parameters

Parameter	Description
<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
<VLANID >	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<LEVEL>	This indicates the level of the maintenance domain. The value ranges from 0 to 7.

## 21.84 RTRV-MIPCCDB-CFM

(Cisco ONS 15454) The Retrieve Maintenance Intermediate Point Continuity Check Message Data Base Connectivity Fault Management (RTRV-MIPCCDB-CFM) command retrieves the continuity check message database (CCDB) of the maintenance intermediate points.

### Usage Guidelines

- This command is applicable only to GE\_XP and 10GE\_XP cards.
- The card should be in Layer2 over DMDM mode.

### Category

Equipment

### Security

Retrieve

### Input Format

RTRV-MIPCCDB-CFM:[<TID>]:<AID>:<CTAG>:::[LEVEL=<LEVEL>],[VLANIDFROM=<VLANIDFROM>],[VLANIDTO=<VLANIDTO>];

### Input Example

RTRV-MIPCCDB-CFM::SLOT-1:1:::MDNAME=D2,VLANIDFROM=10,VLANIDTO=100;

### Input Parameters

<AID>	Access identifier from the <a href="#">“26.15 EQPT”</a> section on page 26-37.
<LEVEL>	This indicates the level of the maintenance domain. The value ranges from 0 to 7.
<VLANIDFROM>	VLAN range. It is the start of the VLANID. Valid range is from 1 to 4096. It is an optional parameter.
<VLANIDTO>	VLAN range. It is the end of the VLANID. Valid range is from 1 to 4096. It is an optional parameter.

### Output Format

```
SID DATE TIME
M CTAG COMPLD
“M CTAG COMPLD;
“<<AID>,<MACADDR>,<SVLANID>,<LEVEL>,<INGRESSPORT>,<MPID>,<ARCHIVETIMER”
;
```

### Output Example

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“SLOT-4,MACADDR=00:00:00:00:00:00,SVLANID=100,LEVEL=1,INGRESSPORT=0,MPID=300,
ARCHIVETIMER=0”
;
```

Output Parameters	Parameter	Description
	<AID>	Access identifier from the “ <a href="#">26.15 EQPT</a> ” section on <a href="#">page 26-37</a> .
	<MACADDR>	(Optional) The MAC address for the 10 Gigabit Ethernet payload. MACADDR is a string.
	<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
	<LEVEL>	This indicates the level of the maintenance domain. The value ranges from 0 to 7.
	<INGRESSPORT>	Identifies the ingress port.
	<MPID>	Maintenance Point Identifier. It is an integer.
	<ARCHIVETIMER>	Archive Timer for CCDB. The default value is 0.

## 21.85 RTRV-NE-APC

(Cisco ONS 15454) The Retrieve Network Amplification Power Control (RTRV-NE-APC) command retrieves the APC application ports involved in node set-up regulation.

<b>Usage Guidelines</b>	None
<b>Category</b>	System
<b>Security</b>	Maintenance
<b>Input Format</b>	RTRV-NE-APC:[<TID>]:[<AID>]:<CTAG>;
<b>Input Example</b>	RTRV-NE-APC:PENNGROVE:CHAN-16-1-RX:114;
<b>Input Parameters</b>	<AID> Access identifier from the “ <a href="#">26.8 CHANNEL</a> ” section on <a href="#">page 26-22</a> . A null value is equivalent to ALL.
<b>Output Format</b>	SID DATE TIME M CTAG COMPLD “<AID>,<MOD>::[MODIFDAT=<MODIFDAT>],[MODIFTM=<MODIFTM>], [CHECKDAT=<CHECKDAT>],[CHECKTM=<CHECKTM>]” ;

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"CHAN-16-1-RX,OCH::MODIFDAT=04-11-02,MODIFTM=12-35-00,
CHECKDAT=04-11-02,CHECKTM=12-55-00"
;
```

**Output Parameters**

<AID>	Access identifier from the <a href="#">“26.8 CHANNEL”</a> section on page 26-22.
<MOD>	AID type. The parameter type is MOD2O, which is the facility types for MXP_2.5G_10G, TXP_MR_10G, OSCM, OSC-CSM, OPT-PRE, OPT-BST, MD-4, MUX-32, DMX-32, AD-1C, AD-2C, AD-4C, AD-1B, and AD-4B cards.
• 4GFC	4-Gigabit Fibre Channel payload
• 4GFICON	4-Gigabit fiber connectivity payload
• 5GIB	5Gbps InfiniBand (IB_5G) payload
• 8GFC	8-Gigabit Fibre Channel payload
• ISC3PEER1G	1 Gbps ISC3 peer
• ISC3PEER2G	2 Gbps ISC3 peer
• ISC3PEER2R	1 Gbps ISC1, ISC2, and ISC3 compatibility
• ISCCOMPAT	1 Gbps or 2 Gbps ISC3 peer used in transparent (2R) mode
• OCH	Optical channel
• OMS	Optical multiplexer section
• OTS	Optical trace section
• OTU3	Optical Transport Unit Level 3
<MODIFDAT>	(Optional) The last date when the APC application modified this port. The format of MODIFDAT is MM-DD, where MM (month of year) ranges from 1 to 12 and DD (day of month) ranges from 1 to 31.
<MODIFTM>	(Optional) The last time when the APC application modified this port. The format of MODIFTM is HH-MM, where HH (hour of day) ranges from 0 to 23 and MM (minute of hour) ranges from 0 to 59.
<CHECKDAT>	(Optional) The last date when the APC application controlled and validated this port. The format of CHECKDAT is MM-DD, where MM (month of year) ranges from 1 to 12 and DD (day of month) ranges from 1 to 31.
<CHECKTM>	(Optional) The last time when the APC application controlled and validated this port. The format of CHECKTM is HH-MM, where HH (hour of day) ranges from 0 to 23 and MM (minute of hour) ranges from 0 to 59.

## 21.86 RTRV-NE-GEN

(Cisco ONS 15454) The Retrieve Network Element General (RTRV-NE-GEN) command retrieves the general NE attributes.

### Usage Guidelines

ETHIPADDR and ETHIPMASK are disabled in this command. ETHIPADDR and ETHIPMASK are used to show the Ethernet interface address and mask. Both default to the nodes' IP address and masks.

### Category

System

### Security

Retrieve

### Input Format

RTRV-NE-GEN:[<TID>]::<CTAG>;

### Input Example

RTRV-NE-GEN:CISCO::123;

### Input Parameters

None that require description

### Output Format

```
SID DATE TIME
M CTAG COMPLD
"[IPADDR=<IPADDR>],[IPMASK=<IPMASK>],[DEFRTR=<DEFRTR>],[IPV6ADDR=<IPV6ADDR>],[IPV6PREFLEN=<IPV6PREFLEN>],[IPV6DEFRTR=<IPV6DEFRTR>],[IPV6ENABLE=<IPV6ENABLE>],[IIOPPORT=<IIOPPORT>],[NTP=<NTP>],[NAME=<NAME>],[SWVER=<SWVER>],[LOAD=<LOAD>],[PROTSWVER=<PROTSWVER>],[PROTLOAD=<PROTLOAD>],[DEFDESC=<DEFDESC>],[PLATFORM=<PLATFORM>],[SECUMODE=<SECUMODE>],[SUPPRESSIP=<SUPPRESSIP>],[MODE=<MODE>],[MSPUBVLANID=<MSPUBVLANID>],[MSINTLVLANID=<MSINTLVLANID>],[AUTOPM=<AUTOPM>],[SERIALPORTECHO=<SERIALPORTECHO>],[OSIROUTINGMODE=<OSIROUTINGMODE>],[OSIL1BUFSIZE=<OSIL1BUFSIZE>],[OSIL2BUFSIZE=<OSIL2BUFSIZE>],[NET=<NET>]>],[BKUPNTP=<BKUPNTP>]
;
```

### Output Example

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
IPADDR=192.168.100.52,IPMASK=255.255.255.0,DEFRTR=192.168.100.1,
IPV6ADDR="[3ffe:0501:0008:0000:0260:97ff:fe40:efab]",IPV6PREFLEN=64,IPV6DEFRTR="[3ffe:0501:0008:0000:0260:97ff:fe40:e000]",IPV6ENABLE=NO
IIOPPORT=57970,NTP=192.168.100.52,NAME="NODENAME",SWVER=2.01.03,
LOAD=02.13-E09A-08.15,PROTSWVER=2.01.02,PROTLOAD=02.12-E09A-09.25,
DEFDESC="\NE DEFAULTS FEATURE",PLATFORM=15454-ANSI,SECUMODE=NORMAL,
SUPPRESSIP=YES,PROXYSRV=N,FIREWALL=N,MSPUBVLANID=1,MSINTLVLANID=2,AUTO
```

```
PM=NO,SERIALPORTECHO=Y,OSIROUTINGMODE=ES,OSIL1BUFSIZE=512,OSIL2BUFSIZE=512"
;
```

**Output Parameters**

<IPADDR>	(Optional) Node IP address. IPADDR is a string.
<IPMASK>	(Optional) Node IP mask. IPMASK is a string.
<DEFRTR>	(Optional) Node default router. DEFRTR is a string.
<IPV6ADDR>	Specifies the IPv6 address of the NE. IPV6ADDR is a string.
	 <b>Note</b> IPV6ADDR parameter can be set only if IPV6ENABLE parameter is set to Y
<IPV6PREFLEN>	Specifies the prefix length for the IPv6 address of the NE. IPV6PREFLEN is an integer.
<IPV6DEFRTR>	Specifies the IPv6 default router address for the NE. IPV6DEFRTR is a string.
<IPV6ENABLE>	Specifies if the IPv6 enable mode for the NE is enabled or disabled.
<ul style="list-style-type: none"> <li>• Y</li> <li>• N</li> </ul>	<ul style="list-style-type: none"> <li>Indicates that IPV6 mode is enabled.</li> <li>Indicates that IPV6 mode is disabled.</li> </ul>
<IIOPPORT>	(Optional) Node IIOP port. IIPOOPRT is an integer.
<NTP>	(Optional) Node Network Timing Protocol (NTP) timing source address. NTP is a string.
<ETHIPADDR>	Not supported in this release.
<ETHIPMASK>	Not supported in this release.
<NAME>	(Optional) Facility name. NAME is a string.
<SWVER>	(Optional) Software version. SWVER is a string.
<LOAD>	(Optional) Load. LOAD is a string.
<PROTSWVER>	(Optional) Protect software version. PROTSWVER is a string.
<PROTLOAD >	(Optional) Protect load. PROTLOAD is a string.
<DEFDESC>	(Optional) Provides a default description for the NE. DEFDESC is a string.
<PLATFORM>	(Optional) Platform. PLATFORM is a string.
<SECUMODE>	(Optional) Security mode of the NE. The parameter type is NE_SECURE_MODE, which is the security mode of the NE.
<ul style="list-style-type: none"> <li>• REPEATER</li> <li>• SECURE</li> </ul>	<ul style="list-style-type: none"> <li>The front port and backplane are sharing the same IP network.</li> <li>The front port and backplane are independent and in different IP subnetworks.</li> </ul>
<SUPPRESSIP>	(Optional) The parameter type is YES_NO, which is whether the user's password is about to expire, the user is logged into the NE, or the user is locked out of the NE.
<ul style="list-style-type: none"> <li>• NO</li> </ul>	No

• YES	Yes
<MODE>	(Optional) Indicates the AID mode to access shelf identifier objects. Defaults to SINGLESHELF. This field is always set to MULTISHELF in the case of DWDM nodes with more than one shelf managed. Parameter type is SHELF_MODE which is the NE mode.
• SINGLESHELF	The NE contains only one shelf and the AID representation does not consider the shelf identifier for command requests/response and autonomous reports.
• MULTISHELF	The AID representation considers the shelf identifier for command requests/response and autonomous reports. This means the NE has more than one shelf configured or the user wants to use the new AID style.
• MULTISHELFETH	The AID representation considers the shelf identifier for command requests/response and autonomous reports. This means the NE has more than one shelf configured or the user wants to use the new AID style. The shelves are connected by means of an external Ethernet switch.
<PROXYSRV>	(Optional) Indicates if the proxy server is enabled or disabled.
• Y	Proxy server is enabled.
• N	Proxy server is disabled.
<FIREWALL>	(Optional) Indicates if the firewall is enabled or disabled.
• Y	Firewall is enabled.
• N	Firewall is disabled.
<AUTOPM>	(Optional) AUTOPM is a flag to indicate if autonomous PM reporting to TL1 clients is enabled or disabled.
• Y	Auto PM reporting is enabled.
• N	Auto PM reporting is disabled.
<SERIALPORTECHO>	(Optional) Indicates if the echo is turned on for TL1 serial port sessions.
• Y	Echo is turned on.
• N	Echo is turned off.
<OSIROUTINGMODE>	Indicates the routing mode of the node.
• ES	Provisions the node as an OSI ES. The ONS node performs all ES functions and relies upon an IS for communication with other IS nodes inside and outside the ES OSI area.
• IS1	Provisions the node as an OSI IS. The ONS node performs all IS functions including routing data between ISs and ESs, between networks, and between parts of a network.
• IS2	The ONS node performs all IS functions. It communicates with other IS and ES nodes within an OSI area. It also broadcasts ISHs to IS nodes in other areas to which it is connected.
<OSIL1BUFSIZE>	Level 1 Link State Protocol Data Unit (LSP) buffer size. The default is 512.

<OSIL2BUFSIZE>	Level 2 Link State Protocol Data Unit (LSP) buffer size. The default is 512.
<NET>	Network Entity Title of the node. The NET is used in OSI networks to identify the node to end system (ES) or intermediate system (IS) NEs. NETs are allocated from the same name space as the Network Service Address Point (NSAP) address. Whether an address is an NSAP or NET depends on the NSAP Selector value.

## 21.87 RTRV-NE-IMGSIGN



### Note

The RTRV-NE-IMGSIGN command does not apply to the Cisco ONS 15454 platform.

(Cisco ONS 15454 M2 and Cisco ONS 15454 M6) The Retrieve Network Image Signature (RTRV-NE-IMGSIGN) command retrieves the signature details of a given shelf.

### Usage Guidelines

None

### Category

System

### Security

Maintenance

### Input Format

RTRV-NE-IMGSIGN:[<TID>]:<AID>:<CTAG>[:::];

### Input Example

RTRV-NE-IMGSIGN:PENNGROVE:SHELF-1:CTAG;

### Input Parameters

<AID> Shelf access identifier. AID can be ignored if the command is executed on a single shelf. For a multi-shelf configuration, AID can take a shelf value from 1 to 30 (SHELF-{1-30}).

### Output Format

```
SID DATE TIME
M CTAG COMPLD
"[<AID>],[PKGTYPE=<PKGTYPE>],[IMGTYPE=<IMGTYPE>],
[CMNNAME=<CMNNAME>],[ORGUNIT=<ORGUNIT>],[ORGNAME=<ORGNAME>],[CERTSN=
<CERTSN>],[HASH=<HASH>],[SIGNALGO=<SIGNALALGO>],[KEYVER=<KEYVER>]"
;
```

**Output Example**

```
SID DATE TIME
M CTAG COMPLD
“SHELF-1,PKGTYPE=WORKING,IMGTYPE=DEVELOPMENT,CMNNAME=UTS
TNC,ORGUNIT=OTBU,ORGNAME=CISCO,CERTSN=10000,HASH=SHA-512,SIGNALGO=RSA-
2048,KEYVER=A”;
```

**Output Parameters**

<AID>	Shelf access identifier. AID can be ignored if the command is executed on a single shelf. For a multi-shelf configuration, AID can take a shelf value from 1 to 30 (SHELF- $\{1-30\}$ ).
<PKGTYPE>	Indicates the Package Type. The parameter type is PKGTYPE.
• INVALID	Indicates that the package type is invalid.
• PROTECT	Indicates that the package type is a protect package.
• WORKING	Indicates that the package type is a working package.
<IMGTYPE>	Indicates the Image Type. The parameter type is IMGTYPE.
• DEVELOPMENT	Indicates that the IMGTYPE is a DEVELOPMENT Image.
• PRODUCTION	Indicates that the IMGTYPE is a PRODUCTION Image.
• REVOCATION	Indicates that the IMGTYPE is a REVOCATION Image.
• UNKNOWN	Indicates that the IMGTYPE is an UNKNOWN Image.
<CMNNAME>	Indicates the Common Name.
<ORGUNIT>	Indicates the Organization Unit.
<ORGNAME>	Indicates the Organization Name.
<CERTSN>	Indicates the Certificate Serial Number.
<HASH>	Indicates the hashing Algorithm. The parameter type is HASH_ALGO.
SHA-256	Hashing Algorithm is SHA-256.
SHA-512	Hashing Algorithm is SHA-512.
UNKNOWN	Hashing Algorithm is Unknown.
<SIGNALGO>	Indicates the signature Algorithm. The parameter type is SIGN_ALGO.
• DSA	Signature Algorithm is DSA.
• ECDSA	Signature Algorithm is ECDSA.
• RSA-2048	Signature Algorithm is RSA-2048.
• UNKNOWN	Signature Algorithm is Unknown.
<KEYVER>	Indicates the key Version.

## 21.88 RTRV-NE-IPMAP

(Cisco ONS 15454) The Retrieve Network Element Internet Protocol Map (RTRV-NE-IPMAP) command retrieves the IP address and node name of the NEs that have a DCC connection with this NE.

**Usage Guidelines**

This command only reports the discovered DCC link. If there is no discovered DCC link on the port (or the node), the command will return COMPLD without IPMAP information.

<b>Category</b>	Network
<b>Security</b>	Retrieve
<b>Input Format</b>	RTRV-NE-IPMAP:[<TID>]:[<AID>]:<CTAG>;
<b>Input Example</b>	RTRV-NE-IPMAP:CISCO:FAC-12-1:123;
<b>Input Parameters</b>	<p>&lt;AID&gt; Access identifier from the <a href="#">“26.17 FACILITY” section on page 26-40</a>. The port of an NE carrying the DCC connection. A null value defaults to the whole NE. A null value is equivalent to ALL.</p>
<b>Output Format</b>	<pre>SID DATE TIME M CTAG COMPLD “&lt;AID&gt;:&lt;IPADDR&gt;,&lt;NODENAME&gt;” ;</pre>
<b>Output Example</b>	<pre>TID-000 1998-06-20 14:30:00 M 001 COMPLD “FAC-12-1:172.20.208.225,NODENAME2” ;</pre>
<b>Output Parameters</b>	<p>&lt;AID&gt; Access identifier from the <a href="#">“26.17 FACILITY” section on page 26-40</a>. Port of an NE carrying the DCC connection.</p> <p>&lt;IPADDR&gt; Node IP address. IPADDR is a string.</p> <p>&lt;NODENAME&gt; Network element name. NODENAME is a string.</p>

## 21.89 RTRV-NE-KEYINFO



### Note

The RTRV-NE-KEYINFO command does not apply to the Cisco ONS 15454 platform.

(Cisco ONS 15454 M2 and Cisco ONS 15454 M6) The Retrieve Network Key Information (RTRV-NE-KEYINFO) command retrieves the details of the keys that are stored in a given shelf.

**Usage Guidelines** None

## RTRV-NE-KEYINFO

<b>Category</b>	System
<b>Security</b>	Maintenance
<b>Input Format</b>	RTRV-NE-KEYINFO:[<TID>]:<AID>:<CTAG>[::::];
<b>Input Example</b>	RTRV-NE-KEYINFO:PENNGROVE:SHELF-5:CTAG;
<b>Input Parameters</b>	<p>&lt;AID&gt; Shelf access identifier. AID can be ignored if the command is executed on a single shelf. For a multi-shelf configuration, AID can take a shelf value from 1 to 30 (SHELF-{1-30}).</p>
<b>Output Format</b>	<pre>SID DATE TIME M CTAG COMPLD “[&lt;AID&gt;],[KEYTYPE=&lt;KEYTYPE&gt;],[PUBKEY=&lt;PUBKEY&gt;],[EXPN=&lt;EXPN&gt;], [KEYVER=&lt;KEYVER&gt;],[MOD=&lt;MOD&gt;]” ;</pre>
<b>Output Example</b>	<pre>SID DATE TIME M CTAG COMPLD “SHELF-5,KEYTYPE=DEVELOPMENT,PUBKEY=RSA-2048,EXPN=1000,KEYVER=A,MOD=\\”0: 1:2:3:4:5:6:7:8:9:a:b:c:d:e:f:10:11:12:13:14:15:16:17:18:19:1a:1b:1c:1d:1e:1f:20:21:22:23:24:25:26:2 7:28:29:2a:2b:2c:2d:2e:2f:30:31:32:33:34:35:36:37:38:39:3a:3b:3c:3d:3e:3f:40:41:42:43:44:45:46:47: 48:49:4a:4b:4c:4d:4e:4f:50:51:52:53:54:55:56:57:58:59:5a:5b:5c:5d:5e:5f:60:61:62:63:64:65:66:67:68 :69:6a:6b:6c:6d:6e:6f:70:71:72:73:74:75:76:77:78:79:7a:7b:7c:7d:7e:7f:80:81:82:83:84:85:86:87:88:8 9:8a:8b:8c:8d:8e:8f:90:91:92:93:94:95:96:97:98:99:9a:9b:9c:9d:9e:9f:a0:a1:a2:a3:a4:a5:a6:a7:a8:a9:a a:ab:ac:ad:ae:af:b0:b1:b2:b3:b4:b5:b6:b7:b8:b9:ba:bb:bc:bd:be:bf:c0:c1:c2:c3:c4:c5:c6:c7:c8:c9:ca:cb :cc:cd:ce:cf:d0:d1:d2:d3:d4:d5:d6:d7:d8:d9:da:db:dc:dd:de:df:e0:e1:e2:e3:e4:e5:e6:e7:e8:e9:ea:eb:ec: ed:ee:ef:f0:f1:f2:f3:f4:f5:f6:f7:f8:f9:fa:fb:fc:fd:fe:ff”;</pre>
<b>Output Parameters</b>	<p>&lt;AID&gt; Shelf access identifier. AID can be ignored if the command is executed on a single shelf. For a multi-shelf configuration, AID can take a shelf value from 1 to 30 (SHELF-{1-30}).</p> <p>&lt;KEYTYPE&gt; Indicates the Key Type. Displays the public key available on the system for verification. The parameter type is KEYTYPE.</p> <ul style="list-style-type: none"> <li>DEVELOPMENT Indicates that the key type is DEVELOPMENT.</li> <li>RELEASE Indicates that the key type is RELEASE.</li> <li>ROLLOVER Indicates that the key type is ROLLOVER.</li> <li>UNKNOWN Indicates that the key type is Unknown.</li> </ul> <p>&lt;PUBKEY&gt; Indicates the Public Key. Displays the name of the algorithm used for public key cryptography.</p>

<EXPN>	Indicates the Exponential. Displays the exponent of the public key algorithm—release or development keys.
<KEYVER>	Indicates the Key version. Indicates the key version used to digitally sign the image. A key version is identified with an alphabetical character that ranges from A to Z.
<MOD>	Indicates the Modulus. Displays the modulus of the public key algorithm with a size of 2048 bits.

## 21.90 RTRV-NE-PATH

(Cisco ONS 15454) The Retrieve Network Element Path (RTRV-NE-PATH) command retrieves the path-level attributes on an NE.

<b>Usage Guidelines</b>	None
<b>Category</b>	System
<b>Security</b>	Retrieve
<b>Input Format</b>	RTRV-NE-PATH:[<TID>]::<CTAG>[:::];
<b>Input Example</b>	RTRV-NE-PATH:::CTAG;
<b>Input Parameters</b>	None that require description
<b>Output Format</b>	SID DATE TIME M CTAG COMPLD “[PDIP=<PDIP>],[XCMODE=<XCMODE>]” ;
<b>Output Example</b>	TID-000 1998-06-20 14:30:00 M 001 COMPLD “PDIP=Y,XCMODE=MIXED” ;
<b>Output Parameters</b>	

<PDIP>	(Optional) Flag used to indicate whether PDI-P should be generated on the outgoing VT-structured STSs. The parameter type is ON_OFF (disable or enable an attribute).
<ul style="list-style-type: none"> <li>• N</li> <li>• Y</li> </ul>	<p>Disable an attribute.</p> <p>Enable an attribute.</p>
<XCMODE>	(Optional) Cross-connect mode. The parameter type is XCMODE, which is applicable only to a node with cross-connect cards that support cross-connect mode change.
<ul style="list-style-type: none"> <li>• MIXED</li> <li>• VT1</li> <li>• VT2</li> </ul>	<p>Both VT1 and VT2 cross-connects can be provisioned on the node.</p> <p>Only VT1 cross-connects can be provisioned on the node.</p> <p>Only VT2 cross-connects can be provisioned on the node.</p>

## 21.91 RTRV-NE-SYNCN

(Cisco ONS 15454) The Retrieve Network Element Synchronization (RTRV-NE-SYNCN) command retrieves the synchronization attributes of the NE.

### Usage Guidelines

- Although mixed mode timing is supported in this release, it is not recommended. Refer to the *Cisco ONS 15454 SONET TLI Reference Guide* for more information.
- The timing modes are:
  - External mode: The node derives its timing from the BITS inputs.
  - Line mode: The node derives its timing from the SONET line(s).
  - Mixed mode: The node derives its timing from the BITS input or SONET lines.

### Category

Synchronization

### Security

Retrieve

### Input Format

RTRV-NE-SYNCN:[<TID>]:[<AID>]:<CTAG>[:::];

### Input Example

RTRV-NE-SYNCN:CISCO:SHELF-2:123;

### Input Parameters

<AID>	The node or shelf access identifier from the <a href="#">“26.26 SHELF”</a> section on page 26-52. If omitted it addresses the node or first shelf of the node.
-------	--

### Output Format

```
SID DATE TIME
M CTAG COMPLD
“[<AID>]:[TMMD=<TMMD>],[SSMGEN=<SSMGEN>],[QRES=<QRES>],
[RVRTV=<RVRTV>],[RVTM=<RVTM>],[SYSTEMN=<SYSTEMN>]”
;
```

### Output Example

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“SHELF-2::TMMD=LINE,SSMGEN=GEN1,QRES=ABOVE-G811,RVRTV=Y,RVTM=8.0,
SYSTEMN=SONET”
;
```

### Output Parameters

<AID>	The node or shelf access identifier from the “ <a href="#">26.26 SHELF</a> ” section on page 26-52. If omitted it addresses the node or first shelf of the node. Must not be null
<TMMD>	(Optional) Timing mode. The parameter type is TIMING_MODE, which is the timing mode for the current node.
• EXTERNAL	The node derives its clock from the BITS input.
• LINE	The node derives its clock from the SONET lines.
• MIXED	The node derives its clock from the mixed timing mode.
<SSMGEN>	(Optional) Synchronization status message generator. The parameter type is SYNC_GENERATION, which is the synchronization status message set generation.
• GEN1	First generation SSM set
• GEN2	Second generation SSM set
<QRES>	(Optional) Quality of the RES. The parameter type is SYNC_QUALITY_LEVEL, which is the network synchronization quality level.
• ABOVE-G811	Better than G811
• ABOVE-STU	Between STU and G811 (default setting)
• ABOVE-G812T	Between G812T and STU
• ABOVE-G812L	Between G812L and G812T
• ABOVE-SETS	Between SETS and G812L
• BELOW-SETS	Below SETS but still usable
• SAME-AS-DUS	Disable the RES message by equating to DUS
<RVRTV>	(Optional) Revertive mode. The value Y indicates that protection switching system reverts service to the original line after restoration. The value N indicates that protection switching system does not revert service to the original line after restoration. RVRTV is applicable only for 1+1 protection switching. Null defaults to N. The parameter type is ON_OFF (disable or enable an attribute).
• N	Does not revert service to original line after restoration.
• Y	Reverts service to original line after restoration.
<RVTM>	(Optional) Revertive time. The parameter type is REVERTIVE_TIME.
• 0.5 to 12.0	Revertive time is 0.5 to 12.0 minutes.
<SYSTEMN>	(ONS 15454 only) Identifies the system timing standard used by the node.
• SONET	SONET timing standard
• SDH	SDH timing standard

## 21.92 RTRV-NE-WDMANS

(Cisco ONS 15454) The Retrieve Network Element Wavelength Division Multiplexing Automatic Node Setup (RTRV-NE-WDMANS) command retrieves the optical node setup (WDMANS) application ports involved in node setup regulation.

<b>Usage Guidelines</b>	None										
<b>Category</b>	DWDM										
<b>Security</b>	Retrieve										
<b>Input Format</b>	RTRV-NE-WDMANS:[<TID>]:[<AID>]:<CTAG>;										
<b>Input Example</b>	RTRV-NE-WDMANS:PENNGROVE:ALL:114;										
<b>Input Parameters</b>	<table border="1"> <tr> <td>&lt;AID&gt;</td> <td>The access identifier from the “26.1 ALL” section on page 26-1. A null value is equivalent to ALL.</td> </tr> </table>	<AID>	The access identifier from the “26.1 ALL” section on page 26-1. A null value is equivalent to ALL.								
<AID>	The access identifier from the “26.1 ALL” section on page 26-1. A null value is equivalent to ALL.										
<b>Output Format</b>	<pre>SID DATE TIME M CTAG COMPLD “&lt;AID&gt;,&lt;AIDTYPE&gt;::[REGULATED=&lt;REGULATED&gt;],[PARAM=&lt;PARAM&gt;],[&lt;VALUE&gt;],[&lt;ACTOR&gt;],[&lt;DATE&gt;],[&lt;TIME&gt;]:” ;</pre>										
<b>Output Example</b>	<pre>TID-000 1998-06-20 14:30:00 M 001 COMPLD “CHAN-16-1-RX,OCH::REGULATED=OUT-OF-RANGE,PARAM=VOAATTN” ;</pre>										
<b>Output Parameters</b>	<table border="1"> <tr> <td>&lt;AID&gt;</td> <td>Access identifier from the “26.1 ALL” section on page 26-1. AID is port regulated.</td> </tr> <tr> <td>&lt;AIDTYPE&gt;</td> <td>Specifies the type of facility, link, or other addressable entity targeted by the message. A type of access identifier. The parameter type is MOD2, which is the line/path modifier.</td> </tr> <tr> <td>• 10GFC</td> <td>10-Gigabit Fibre Channel payload</td> </tr> <tr> <td>• 10GFICON</td> <td>10-Gigabit fiber connectivity payload</td> </tr> <tr> <td>• 1GFC</td> <td>1-Gigabit Fibre Channel payload</td> </tr> </table>	<AID>	Access identifier from the “26.1 ALL” section on page 26-1. AID is port regulated.	<AIDTYPE>	Specifies the type of facility, link, or other addressable entity targeted by the message. A type of access identifier. The parameter type is MOD2, which is the line/path modifier.	• 10GFC	10-Gigabit Fibre Channel payload	• 10GFICON	10-Gigabit fiber connectivity payload	• 1GFC	1-Gigabit Fibre Channel payload
<AID>	Access identifier from the “26.1 ALL” section on page 26-1. AID is port regulated.										
<AIDTYPE>	Specifies the type of facility, link, or other addressable entity targeted by the message. A type of access identifier. The parameter type is MOD2, which is the line/path modifier.										
• 10GFC	10-Gigabit Fibre Channel payload										
• 10GFICON	10-Gigabit fiber connectivity payload										
• 1GFC	1-Gigabit Fibre Channel payload										

• 1GFICON	1-Gigabit fiber connectivity payload
• 1GISC3	1-Gigabit ISC3 compatible
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• 2GISC3	2-Gigabit ISC3 compatible
• 4GFC	4-Gigabit Fibre Channel payload
• 4GFICON	4-Gigabit fiber connectivity payload
• 5GIB	5Gbps InfiniBand (IB_5G) payload
• 8GFC	8-Gigabit Fibre Channel payload
• CHGRP	Channel group
• D1VIDEO	D1 video
• DS1	DS1 line of a DS3XM card
• DS3I	DS3I line
• DV6000	DV6000
• EC1	EC1 facility
• ESCON	ESCON
• ETRCLO	ETR_CLO
• FSTE	FSTE facility
• G1000	G1000 facility
• GFPOS	GFP over POS. Virtual ports partitioned using GFP's multiplexing capability.
• GIGE	Gigabit Ethernet
• HDLC	High-level data link control (HDLC) frame mode.
• HDTV	HDTV
• ISC3PEER1G	1 Gbps ISC3 Peer
• ISC3PEER2G	2 Gbps ISC3 Peer
• ISC3PEER2R	1 Gbps or 2 Gbps ISC3 peer used in transparent (2R) mode
• ISCCOMPAT	1 Gbps ISC1, ISC2, and ISC3 compatibility
• MSISC	MSISC
• OC3	OC-3 facility
• OC12	OC-12 facility
• OC48	OC-48 facility
• OC192	OC-192 facility
• OCH	Optical Channel
• OCHCC	OCH client connection
• OCHNC	OCH network connection
• OCHTERM	OCH termination
• OMS	Optical Multiplex Section
• OTS	Optical Transport Section
• OTU3	Optical Transport Unit Level 3
• POS	POS port
• REP	Resilient Ethernet Protocol

• STS1	STS1 path
• STS3C	STS3c path
• STS6C	STS6c path
• STS9C	STS9c path
• STS18C	STS18c path
• STS12C	STS12c path
• STS24C	STS24c path
• STS36C	STS36c path
• STS48C	STS48c path
• STS192C	STS192c path
• T1	T1/DS1 facility/line
• T3	T1/DS1 facility/line
• VT1	VT1 path
• VT2	VT2 path
<REGULATED>	(Optional) The status of the port after a node setup regulation. The parameter type is REGULATED_PORT_TYPE, which is the optical configuration types for NEs.
• FAILED	WDM-ANS encountered a failure while regulating this port.
• MISSING-INPUT-PWR-PARAM	Missing input power parameter
• MISSING-OUTPUT-PWR-PARAM	Missing output power parameter
• NOT-APPLICABLE	WDM-ANS does not foresee any algorithm or does not have any value to set for the parameter.
• OUT-OF-RANGE	WDM-ANS cannot modify the set point because the calculated value is out of the allowed range.
• PORT-IN-SERVICE	WDM-ANS cannot modify the set point because the ports are in IS state.
• REGULATED	WDM-ANS has successfully regulated this port.
• UNCHANGED	WDM-ANS has not changed this port.
<ACTOR>	Regulator Actor is the name of the Network Element application that regulates the WDM-ANS parameter. The parameter type is REGULATED_ACTOR.
• ANS	Parameter regulated by the ANS application.
• APC	Parameter regulated by the APC application.
• OCHNC	Parameter regulated by the OCHNC application.
• RAMAN-WIZARD	Parameter regulated by the RAMAN Wizard application.
• UNKNOWN	The parameter that has been regulated by an unknown application.
<PARAM>	(Optional) The regulated parameter inside of the specified port. The parameter type is REGULATED_PARAM_NAME, which is the name of the parameter regulated by the WDMANS application.
• AMPLMODE	WDM-ANS has regulated the amplifier control mode parameter.
• CHPOWER	WDM-ANS has regulated the amplifier per the channel power parameter.

• GAIN	WDM-ANS has regulated the amplifier gain parameter.
• OPWR-LFAIL	WDM-ANS has regulated the OPWR-LFAIL threshold parameter.
• REFTILT	WDM-ANS has regulated the amplifier tilt reference parameter.
• VOAREFATTN	WDM-ANS has regulated the variable optical attenuator (VOA) attenuation reference parameter.
• VOAREFPWR	WDM-ANS has regulated the VOA power reference parameter.
• DARK-POWER	WDM-ANS has regulated the port P-Dark power.
• VOA-STARTUP	WDM-ANS regulated the port VOA startup.
<DATE>	Identifies the date. Date is a string. Default value is - current date.
<TIME>	Identifies the time. Time is a string. Default value is - current time.

## 21.93 RTRV-NETYPE

(Cisco ONS 15454) The Retrieve Network Element Type (RTRV-NETYPE) command retrieves the NE's equipment-related information.

### Usage Guidelines

None

### Category

System

### Security

Retrieve

### Input Format

RTRV-NETYPE:[<TID>]::<CTAG>;

### Input Example

RTRV-NETYPE:GAUR1::1;

### Input Parameters

None that require description

### Output Format

```
SID DATE TIME
M CTAG COMPLD
  "<VENDOR>,<MODEL>,<NETYPE>,<SW_ISSUE>"
;
```

### Output Example

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
  "CISCO,ONS15454,ADM&MSPP&MSTP,5.00.00"
;
```

<b>Output Parameters</b>	<VENDOR>	NE equipment vendor name. VENDOR is a string.
	<MODEL>	NE equipment model. The parameter type is PRODUCT_TYPE, which is the product (NE) type.
	• ONS15454	ONS 15454
	• UNKNOWN	Unknown product type
	<NETYPE>	NE equipment type. Abbreviation of NE type can be used. The grouping sign “&” can be used to indicate multifunction NE type, for example, ADM&MSPP means Add-Drop Multiplexers and Multiservice Provisioning Platform. Listable. The parameter type is NETYPE, which is the NE equipment type.
	• ADM	Add-Drop Multiplexers
	• DCS	Digital Cross-Connect System
	• MSPP	Multiservice Provisioning Platform
	• MSSP	Multiservice Switching Platform
	• MSTP	Multiservice Transport Platform
	<SW_ISSUE>	The software release issue of the NE. SW_ISSUE is a string.

## 21.94 RTRV-NNI-CHGRP

(Cisco ONS 15454) The Retrieve Network-to-Network Interface Channel Group (RTRV-NNI-CHGRP) command retrieves the NNI selective S-VLAN-ID table associated to a channel group.

<b>Usage Guidelines</b>	This command accepts the ALL AID.	
<b>Category</b>	Channel Group	
<b>Security</b>	Retrieve	
<b>Input Format</b>	RTRV-NNI-CHGRP:[<TID>]:<AID>:<CTAG>::[<SVLANID>][:];	
<b>Input Example</b>	RTRV-NNI-CHGRP:TID:CHGRP-1-1:1::110;	
<b>Input Parameters</b>	<AID>	Access identifier from the <a href="#">“26.9 CHGRP”</a> section on <a href="#">page 26-24</a> .
	<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.

---

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<AID>:<SVLANID>[::]"
;
```

---

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"ETH-1-1-1:110::"
;
```

---

<b>Output Parameters</b>	<AID>	Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the <a href="#">“26.16 ETH” section on page 26-40.</a>
	<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.

---

## 21.95 RTRV-NNI-ETH

(Cisco ONS 15454) The Retrieve Network-to-Network Interface Ethernet (RTRV-NNI-ETH) command retrieves the NNI selective S-VLAN-ID table associated to an L2 Ethernet port.

---

**Usage Guidelines** This command accepts the ALL AID.

---

**Category** Ethernet

---

**Security** Retrieve

---

**Input Format** RTRV-NNI-ETH:[<TID>]:<AID>:<CTAG>::[<SVLANID>][::];

---

**Input Example** RTRV-NNI-ETH:TID:ETH-1-1-1:CTAG::110;

---

<b>Input Parameters</b>	<AID>	Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the <a href="#">“26.16 ETH” section on page 26-40.</a>
	<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.

---

---

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<AID>:<S_VLAN_ID>[:]"
;
```

---

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"ETH-1-1-1:110:]"
;
```

---

<b>Output Parameters</b>	<AID>	Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the <a href="#">"26.16 ETH" section on page 26-40</a> .
	<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.

---

## 21.96 RTRV-OCM

(Cisco ONS 15454) The Retrieve Optical Channel Monitoring (RTRV-OCM) command retrieves the optical channel monitoring parameters present at OCH layer in a ROADM node.

---

**Usage Guidelines**

- Primary=Locked and secondary=AutomaticInService states do not apply to Ethernet mode.

---

**Category** DWDM

---

**Security** Retrieve

---

**Input Format** RTRV-OCM:[<TID>]:<AID>:<CTAG>;

---

**Input Example** RTRV-OCM::OCM-1-16-1-RX-1530.33:12;

---

**Input Parameters** <AID> Access identifier from the ["26.8 CHANNEL" section on page 26-22](#).

---



---

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"[<AID>]::[CHPOWER=<CHPOWER>]"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
" TID-000 1998-06-20 14:30:00M 001 COMPLD "OCM-1-16-1-RX-1530.33::CHPOWER=9.0";
```

**Table 21-5 Output Parameter Support**

Parameter	Description
<AID>	Access identifier from the <a href="#">“26.8 CHANNEL” section on page 26-22</a> .
<CHPOWER>	(Optional) The per channel optical power. Applicable only to amplified OTS ports.

## 21.97 RTRV-OCH

(Cisco ONS 15454) The Retrieve Optical Channel (RTRV-OCH) command retrieves the attributes (service parameters) and state of an OCH facility.

**Usage Guidelines**

Refer to the *Cisco ONS 15454 SONET TL1 Reference Guide* for specific card provisioning rules.

**Note**

Primary=OOS and secondary=AINS states do not apply to Ethernet mode.

**Category**

DWDM

**Security**

Retrieve

**Input Format**

RTRV-OCH:[<TID>]:<AID>:<CTAG>;

**Input Example**

RTRV-OCH:PENNGROVE:CHAN-6-2:236;

**Input Parameters**

<AID> Access identifier from the [“26.8 CHANNEL” section on page 26-22](#).

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<AID>:.,[<ROLE>],[<STATUS>]:[<OPTICALPORTTYPE>],[<POWER>],[<EXPWLEN>],[<ACT
WLEN>],[<ILOSS>],[<VOAMODE>],[<VOAATTN>],[<VOAPWR>],[<VOAREFATTN>],[<VOARE
FPWR>],[<REFOPWR>],[<CALOPWR>],[<CHPOWER>],[<CHPOWERFLG>],[<ADDOPWR>],[<
PORTNAME>],[<GCC>],[<GCCRATE>],[<DWRAP>],[<FEC>],[<PAYLOADMAP>],[<LBCLCURR
>],[<OPTCURR>],[<OPRCURR>],[<OSFBER>],[<OSDBER>],[<SOAK>],[<SOAKLEFT>],[<LOSS
B>],[<PEERID>],[<REGENNAME>],[<PORTMODE>],[<ODUTRANSMODE>],[<ERRORDECOR
RELATOR>],[<FCS>],[<PROACTPROTECTION>],[<TRIGGERTH>],[<REVERTTH>],[<TRIGWIN
```

```
DOW>],[<RVRTWINDOW>],[<OVRCLK>],[<RXWLEN>],[OSNR>],[<PMD>],[<CHROMDISP>]:<
PST>],[<SST>]"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"CHAN-6-1:.,WORK,ACT:OPTYPE=DROP,OPWR=10.0,EXPWLEN=1530.33,NAME="NY
PORT",GCC=Y,GCCRATE=192K,DWRAP=Y,FEC=STD,PAYLOADMAP=ASYNCH,OSFBER=1E-4
,OSDBER=1E-5,SOAK=52,SOAKLEFT=12-25,LBCL=10.0,OPT=10.0,OPR=10.0,LOSSB=DWDM,E
RRORDECORRELATOR=Y:OOS-AU,AINS"
;
```

**Output Parameters**

Parameter	Description
<AID>	Access identifier from the <a href="#">“26.8 CHANNEL” section on page 26-22.</a>
<ROLE>	(Optional) Identifies an OCH port role. The parameter type is SIDE, which is the role the unit is playing in the protection group.
<ul style="list-style-type: none"> <li>• PROT</li> </ul>	The entity is a protection unit in the protection group.
<ul style="list-style-type: none"> <li>• WORK</li> </ul>	The entity is a working unit in the protection group.
<STATUS>	(Optional) The port status. The parameter type is STATUS, which is the status of the unit in the protection pair.
<ul style="list-style-type: none"> <li>• ACT</li> </ul>	The entity is the active unit in the shelf.
<ul style="list-style-type: none"> <li>• NA</li> </ul>	Status is unavailable.
<ul style="list-style-type: none"> <li>• STBY</li> </ul>	The entity is the standby unit in the shelf.
<OPTICALPORTTYPE>	The optical port type. The parameter type is OPTICAL_PORT_TYPE, which qualifies the optical port of a card.
<ul style="list-style-type: none"> <li>• ADD</li> </ul>	The signal is added to the port.
<ul style="list-style-type: none"> <li>• COM</li> </ul>	Common Port
<ul style="list-style-type: none"> <li>• DROP</li> </ul>	The signal is dropped from the port.
<ul style="list-style-type: none"> <li>• EAD</li> </ul>	Express/Add/Drop port
<ul style="list-style-type: none"> <li>• IN-ASE</li> </ul>	Logical port on Raman CTP card.
<ul style="list-style-type: none"> <li>• IN-COM</li> </ul>	COM channels (without OSC) that continue the signal from the previous card
<ul style="list-style-type: none"> <li>• IN-DC</li> </ul>	Input DCU port
<ul style="list-style-type: none"> <li>• IN-DFB</li> </ul>	Rx managed port on Raman CTP card used for span continuity check.
<ul style="list-style-type: none"> <li>• IN-EXP</li> </ul>	The express channel that continues the signal from the previous card
<ul style="list-style-type: none"> <li>• IN-LINE</li> </ul>	All the channels that continue the signal from the previous card
<ul style="list-style-type: none"> <li>• IN-OSC</li> </ul>	OSC channel that continues the signal from the previous card

Parameter	Description
• OUT-COM	COM channels (without OSC) that continue the signal to the next card
• OUT-DC	Output DCU port
• OUT-DFB	Tx managed port on Raman CTP card used for span continuity check.
• OUT-EXP	Express channel that continues the signal to the next card
• OUT-LINE	All the channels that continue the signal to the next card
<ACTWLEN>	(Optional) The manufacturing optical wavelength for this port. Applicable only to the following cards: OSCM, OSC-CSM, OPT-PRE, OPT-BST, 4MD-xx.x, 32MUX, 32DMX, AD-1C-xx.x, AD-2C-xx.x, AD-4C-xx.x, AD-1B-xx.x, and AD-4B-xx.x. The parameter type is OPTICAL_WLEN, which is the optical wavelength.
<EXPWLEN>	(Optional) Optical wavelength for this port. Applicable only to the following types of cards: optical service channel cards, optical amplifier cards, dispersion compensation units, multiplexer and demultiplexer cards, and optical add/drop multiplexing (OADM) cards. The parameter type is OPTICAL_WLEN, which is the optical wavelength.
• 1310	Wavelength 1310
• 1470	Wavelength 1470
• 1490	Wavelength 1490
• 1510	Wavelength 1510
• 1528.77	Wavelength 1528.77
• 1529.55	Wavelength 1529.55
• 1529.94	Wavelength 1529.94
• 1530	Wavelength 1530
• 1530.33	Wavelength 1530.33
• 1530.72	Wavelength 1530.72
• 1531.12	Wavelength 1531.12
• 1531.51	Wavelength 1531.51
• 1531.90	Wavelength 1531.90
• 1532.29	Wavelength 1532.29
• 1532.68	Wavelength 1532.68
• 1533.07	Wavelength 1533.07
• 1533.47	Wavelength 1533.47
• 1533.86	Wavelength 1533.86
• 1534.25	Wavelength 1534.25
• 1534.64	Wavelength 1534.64
• 1535.04	Wavelength 1535.04
• 1535.43	Wavelength 1535.43
• 1535.82	Wavelength 1535.82
• 1536.22	Wavelength 1536.22

Parameter	Description
• 1536.61	Wavelength 1536.61
• 1537	Wavelength 1537
• 1537.40	Wavelength 1537.40
• 1537.79	Wavelength 1537.79
• 1538.19	Wavelength 1538.19
• 1538.58	Wavelength 1538.58
• 1538.98	Wavelength 1538.98
• 1539.37	Wavelength 1539.37
• 1539.77	Wavelength 1539.77
• 1540.16	Wavelength 1540.16
• 1540.56	Wavelength 1540.56
• 1540.95	Wavelength 1540.95
• 1541.35	Wavelength 1541.35
• 1541.75	Wavelength 1541.75
• 1542.14	Wavelength 1542.14
• 1542.35	Wavelength 1542.35
• 1542.54	Wavelength 1542.54
• 1542.94	Wavelength 1542.94
• 1543.33	Wavelength 1543.33
• 1543.73	Wavelength 1543.73
• 1544.13	Wavelength 1544.13
• 1544.53	Wavelength 1544.53
• 1544.92	Wavelength 1544.92
• 1545.32	Wavelength 1545.32
• 1545.72	Wavelength 1545.72
• 1546.12	Wavelength 1546.12
• 1546.52	Wavelength 1546.52
• 1546.92	Wavelength 1546.92
• 1547.32	Wavelength 1547.32
• 1547.72	Wavelength 1547.72
• 1548.11	Wavelength 1548.11
• 1548.51	Wavelength 1548.51
• 1548.91	Wavelength 1548.91
• 1549.32	Wavelength 1549.32
• 1549.72	Wavelength 1549.72
• 1550	Wavelength 1500
• 1550.12	Wavelength 1550.12
• 1550.52	Wavelength 1550.52
• 1550.92	Wavelength 1550.92
• 1551.32	Wavelength 1551.32

Parameter	Description
• 1551.72	Wavelength 1551.72
• 1552.12	Wavelength 1552.12
• 1552.52	Wavelength 1552.52
• 1552.93	Wavelength 1552.93
• 1553.33	Wavelength 1553.33
• 1553.73	Wavelength 1553.73
• 1554.13	Wavelength 1554.13
• 1554.13	Wavelength 1554.13
• 1554.94	Wavelength 1554.94
• 1555.34	Wavelength 1555.34
• 1555.75	Wavelength 1555.75
• 1556.15	Wavelength 1556.15
• 1556.55	Wavelength 1556.55
• 1556.96	Wavelength 1556.96
• 1557.36	Wavelength 1557.36
• 1557.77	Wavelength 1557.77
• 1558.17	Wavelength 1558.17
• 1558.58	Wavelength 1558.58
• 1558.98	Wavelength 1558.98
• 1559.39	Wavelength 1559.39
• 1559.79	Wavelength 1559.79
• 1560.20	Wavelength 1560.20
• 1560.61	Wavelength 1560.61
• 1561.01	Wavelength 1561.01
• 1561.42	Wavelength 1561.42
• 1561.83	Wavelength 1561.83
• 1570	Wavelength 1570
• 1570.83	Wavelength 1570.83
• 1571.24	Wavelength 1571.24
• 1571.65	Wavelength 1571.65
• 1572.06	Wavelength 1572.06
• 1572.48	Wavelength 1572.48
• 1572.89	Wavelength 1572.89
• 1573.30	Wavelength 1573.30
• 1573.71	Wavelength 1573.71
• 1574.13	Wavelength 1574.13
• 1574.54	Wavelength 1574.54
• 1574.95	Wavelength 1574.95
• 1575.37	Wavelength 1575.37
• 1575.78	Wavelength 1575.78

Parameter	Description
• 1576.20	Wavelength 1576.20
• 1576.61	Wavelength 1576.61
• 1577.03	Wavelength 1577.03
• 1577.44	Wavelength 1577.44
• 1577.86	Wavelength 1577.86
• 1578.27	Wavelength 1578.27
• 1578.69	Wavelength 1578.69
• 1579.10	Wavelength 1579.10
• 1579.52	Wavelength 1579.52
• 1579.93	Wavelength 1579.93
• 1580.35	Wavelength 1580.35
• 1580.77	Wavelength 1580.77
• 1581.18	Wavelength 1581.18
• 1581.60	Wavelength 1581.60
• 1582.02	Wavelength 1582.02
• 1582.44	Wavelength 1582.44
• 1582.85	Wavelength 1582.85
• 1583.27	Wavelength 1583.27
• 1583.69	Wavelength 1583.69
• 1584.11	Wavelength 1584.11
• 1584.53	Wavelength 1584.53
• 1584.95	Wavelength 1584.95
• 1585.36	Wavelength 1585.36
• 1585.78	Wavelength 1585.78
• 1586.20	Wavelength 1586.20
• 1586.62	Wavelength 1586.62
• 1587.04	Wavelength 1587.04
• 1587.46	Wavelength 1587.46
• 1587.88	Wavelength 1587.88
• 1588.30	Wavelength 1588.30
• 1588.73	Wavelength 1588.73
• 1589.15	Wavelength 1589.15
• 1589.57	Wavelength 1589.57
• 1589.99	Wavelength 1589.99
• 1590	Wavelength 1590
• 1590.41	Wavelength 1590.41
• 1590.83	Wavelength 1590.83
• 1591.26	Wavelength 1591.26
• 1591.68	Wavelength 1591.68
• 1592.10	Wavelength 1592.10

Parameter	Description
• 1592.52	Wavelength 1592.52
• 1592.95	Wavelength 1592.95
• 1593.37	Wavelength 1593.37
• 1593.79	Wavelength 1593.79
• 1594.22	Wavelength 1594.22
• 1594.64	Wavelength 1594.64
• 1595.06	Wavelength 1595.06
• 1595.49	Wavelength 1595.49
• 1596.34	Wavelength 1596.34
• 1596.76	Wavelength 1596.76
• 1597.19	Wavelength 1597.19
• 1597.62	Wavelength 1597.62
• 1598.04	Wavelength 1598.04
• 1598.47	Wavelength 1598.47
• 1598.89	Wavelength 1598.89
• 1599.32	Wavelength 1599.32
• 1599.75	Wavelength 1599.75
• 1600.06	Wavelength 1600.06
• 1601.03	Wavelength 1601.03
• 1601.46	Wavelength 1601.46
• 1601.88	Wavelength 1601.88
• 1602.31	Wavelength 1602.31
• 1602.74	Wavelength 1602.74
• 1603.17	Wavelength 1603.17
• 1603.60	Wavelength 1603.60
• 1604.03	Wavelength 1604.03
• 1610	Wavelength 1610
• USE-TWL1	Use Tunable Wavelength 1
<LOSSB>	The parameter type is REACH, which indicates the reach values.
• AUTOPROV	Autoprovisioning
• CWDM-40KM	CWDM 40 kilometers.
• CX	Reach CX
• CX1	Reach CX1
• DX	Reach DX
• HX	Reach HX
• I1	Reach I1
• IR-1	Reach IR-1
• IR-2	Reach IR-2
• L1	Reach L1
• L2	Reach L2

Parameter	Description
• L3	Reach L3
• LR-1	Reach LR-1
• LR-2	Reach LR-2
• LR-3	Reach LR-3
• LX	Reach LX
• S1	Reach S1
• S2	Reach S2
• SR	Reach SR
• SR-1	Reach SR-1
• SX	Reach SX
• T	Reach T
• TEN-GE-ER	10 GE extended range
• TEN-GE-LR	10 GE long range
• TEN-GE-SR	10 GE short range
• ULH	Reach ULH
• VSR	Reach VSR
• VX	Reach VX
• ZX	Reach ZX
<ILOSS>	(Optional) Insertion loss expressed in dBm. ILOSS applies to output ports only on the following cards: OSCM, OSC-CSM, OPT-PRE, OPT-BST, 4MD-xx.x, 32MUX, 32DMX, AD-1C-xx.x, AD-2C-xx.x, AD-4C-xx.x, AD-1B-xx.x, and AD-4B-xx.x. ILOSS is a string.
<VOAATTN>	(Optional) The transit power attenuation for the VOA expressed in dBm. The range is -24.0 to +2.0 dBm for the MXP_2.5G_10G and TXP_MR_10G cards. VOAATTN is a string.
<VOAPWR>	(Optional) The value of calibrated output power that the VOA is going to set as a result of its attenuation. Applicable only to the following cards: OSCM, OSC-CSM, OPT-PRE, OPT-BST, 4MD-xx.x, 32MUX, 32DMX, AD-1C-xx.x, AD-2C-xx.x, AD-4C-xx.x, AD-1B-xx.x, and AD-4B-xx.x. VOAPWR is a float and a string.
<VOAREFATTN>	(Optional) The value of reference attenuation for the VOA. Applicable only to the following cards: OSCM, OSC-CSM, OPT-PRE, OPT-BST, 4MD-xx.x, 32MUX, 32DMX, AD-1C-xx.x, AD-2C-xx.x, AD-4C-xx.x, AD-1B-xx.x, and AD-4B-xx.x. VOAREFATTN is a float and a string.
<VOAREFPWR>	(Optional) The value of reference output power that the VOA is going to set as a result of its attenuation. Applicable only to the following cards: OSCM, OSC-CSM, OPT-PRE, OPT-BST, 4MD-xx.x, 32MUX, 32DMX, AD-1C-xx.x, AD-2C-xx.x, AD-4C-xx.x, AD-1B-xx.x, and AD-4B-xx.x. VOAREFPWR is a float and a string.

Parameter	Description
<REFOPWR>	(Optional) The value of the calculated optical power expected for the output line added to the calibration value which equals the total expected output power. Applicable only to the following cards: OSCM, OSC-CSM, OPT-PRE, OPT-BST, 4MD-xx.x, 32MUX, 32DMX, AD-1C-xx.x, AD-2C-xx.x, AD-4C-xx.x, AD-1B-xx.x, and AD-4B-xx.x. REFOPWR is a float and a string.
<PORTNAME>	(Optional) Port name. PORTNAME is a string.
<FCS>	(Optional) First Circuit Startup. An automatic channel startup that operates the VOA when the light is detected on the ingress port.
• Y	Automatic Channel startup enabled.
• N	Automatic Channel startup disabled.
<PROACTPROTECTION>	To enable or disable the protective protection on the card.
<TRIGGERTH>	Specifies the trigger threshold value for Proactive Protection Regen. The parameter type is TRIGGER_THRESHOLD.
• 1E-3	Trigger threshold is 1E-3.
• 1E-4	Trigger threshold is 1E-4.
• 1E-5	Trigger threshold is 1E-5.
• 1E-6	Trigger threshold is 1E-6.
• 1E-7	Trigger threshold is 1E-7.
• 2E-4	Trigger threshold is 2E-4.
• 2E-5	Trigger threshold is 2E-5.
• 2E-6	Trigger threshold is 2E-6.
• 2E-7	Trigger threshold is 2E-7.
• 3E-4	Trigger threshold is 3E-4.
• 3E-5	Trigger threshold is 3E-5.
• 3E-6	Trigger threshold is 3E-6.
• 3E-7	Trigger threshold is 4E-7.
• 4E-4	Trigger threshold is 4E-4.
• 4E-5	Trigger threshold is 4E-5.
• 4E-6	Trigger threshold is 4E-6.
• 4E-7	Trigger threshold is 4E-7.
• 5E-4	Trigger threshold is 5E-4.
• 5E-5	Trigger threshold is 5E-5.
• 5E-6	Trigger threshold is 5E-6.
• 5E-7	Trigger threshold is 5E-7.
• 6E-4	Trigger threshold is 6E-4.
• 6E-5	Trigger threshold is 6E-5.
• 6E-6	Trigger threshold is 6E-6.
• 6E-7	Trigger threshold is 6E-7.
• 7E-4	Trigger threshold is 7E-4.

Parameter	Description
• 7E-5	Trigger threshold is 7E-5
• 7E-6	Trigger threshold is 7E-6.
• 7E-7	Trigger threshold is 7E-7.
• 8E-4	Trigger threshold is 8E-4.
• 8E-5	Trigger threshold is 8E-5
• 8E-6	Trigger threshold is 8E-6.
• 8E-7	Trigger threshold is 8E-7.
• 9E-4	Trigger threshold is 9E-4.
• 9E-5	Trigger threshold is 9E-5
• 9E-6	Trigger threshold is 9E-6.
• 9E-7	Trigger threshold is 9E-7.
<REVERTTH>	Specifies the revert threshold for Proactive Protection Regen. The parameter type is REP_PORT_ROLE
• 1E-4	Revert threshold is 1E-4.
• 1E-5	Revert threshold is 1E-5
• 1E-6	Revert threshold is 1E-6.
• 1E-7	Revert threshold is 1E-7.
• 2E-5	Revert threshold is 2E-5
• 2E-6	Revert threshold is 2E-6.
• 2E-7	Revert threshold is 2E-7.
• 3E-6	Revert threshold is 3E-6
• 3E-7	Revert threshold is 4E-7.
• 4E-5	Revert threshold is 4E-5
• 4E-6	Revert threshold is 4E-6.
• 4E-7	Revert threshold is 4E-7.
• 5E-5	Revert threshold is 5E-5
• 5E-6	Revert threshold is 5E-6.
• 5E-7	Revert threshold is 5E-7.
• 5E-8	Revert threshold is 5E-8.
• 6E-5	Revert threshold is 6E-5
• 6E-6	Revert threshold is 6E-6.
• 6E-7	Revert threshold is 6E-7.
• 6E-8	Revert threshold is 6E-8.
• 7E-5	Revert threshold is 7E-5
• 7E-6	Revert threshold is 7E-6.
• 7E-7	Revert threshold is 7E-7.
• 7E-8	Revert threshold is 7E-8.
• 8E-5	Revert threshold is 8E-5
• 8E-6	Revert threshold is 8E-6.
• 8E-7	Revert threshold is 8E-7.
• 8E-8	Revert threshold is 8E-8.

Parameter	Description
<ul style="list-style-type: none"> <li>• 9E-5</li> </ul>	Revert threshold is 9E-5
<ul style="list-style-type: none"> <li>• 9E-6</li> </ul>	Revert threshold is 9E-6.
<ul style="list-style-type: none"> <li>• 9E-7</li> </ul>	Revert threshold is 9E-7.
<ul style="list-style-type: none"> <li>• 9E-8</li> </ul>	Revert threshold is 9E-8.
<CALOPWR>	(Optional) The value of the calibrated optical power expected for the line added to the calculated value, which equals the total expected output power. Expressed in dBm. Defaults to 0 dBm. CALOPWR is a float.
<CHPOWERFLG>	(Optional) Parameter status flag indicating the state of the channel power.
<ADDOPWR>	(Optional) The value of the ADD optical power to an ADD port of the WSS card. The ADDOPWR is a float.
<GCC>	Identifies the generic communication channel (GCC) connection of the port.
<ul style="list-style-type: none"> <li>• Y</li> </ul>	GCC can be utilized.
<ul style="list-style-type: none"> <li>• N</li> </ul>	GCC cannot be utilized.
<GCCRATE>	(Optional) The data rate of the GCC traffic. The default is 192 Kbps. For MXP_2.5G_10G and TXP_MR_10G cards, this applies only to the DWDM port. The parameter type is GCCRATE, which is the data rate of the GCC traffic.
<ul style="list-style-type: none"> <li>• 192K</li> </ul>	192 Kbps
<ul style="list-style-type: none"> <li>• 576K</li> </ul>	576 Kbps
<DWRAP>	(Optional) The ITU-T G.709 monitoring digital wrapper. It is either on or off. The system default is ON. For MXP_2.5G_10G and TXP_MR_10G cards, this applies only to the DWDM port. The parameter type is ON_OFF (disable or enable an attribute). To enable ITU-T G.709 monitoring, there should be no GCC on the DWDM port and the payload (in which the card is configured) should not be UNFRAMED. To disable ITU-T G.709 monitoring, there should be no GCC on the DWDM port, the FEC should be turned to off, there should be no overhead circuit created on the DWDM port, and none of the client ports on the card should be part of a Y-cable protection group (muxponder only).
<ul style="list-style-type: none"> <li>• N</li> </ul>	Disable an attribute.
<ul style="list-style-type: none"> <li>• Y</li> </ul>	Enable an attribute.
<PAYLOADMAP>	(Optional) The type of payload mapping. It can be enabled only if ITU-T G.709 monitoring is turned ON and FEC is enabled. The parameter type is PAYLOAD_MAPPING, which is the payload mapping mode.
<ul style="list-style-type: none"> <li>• ASYNCH</li> </ul>	Asynchronous mapping mode
<ul style="list-style-type: none"> <li>• ODU</li> </ul>	ODU multiplex structure mode
<ul style="list-style-type: none"> <li>• SYNCH</li> </ul>	Synchronous mapping mode
<ul style="list-style-type: none"> <li>• NOOPU2FIXEDSTUFF</li> </ul>	Mapping with no FIXEDSTUFF

Parameter	Description
<FEC>	(Optional) Forward error correction. It can be enabled only if ITU-T G.709 monitoring is turned ON. It is either off or enabled in standard or enhanced mode. The system default is standard FEC enabled. The FEC level PM and thresholds apply if the FEC is turned ON. The parameter type is FEC_MODE, which specifies the type of forward error correction.
<ul style="list-style-type: none"> <li>• ENH</li> <li>• ENH-14</li> <li>• ENH-17</li> <li>• OFF</li> <li>• STD</li> </ul>	<ul style="list-style-type: none"> <li>Enhanced FEC is enabled.</li> <li>Enhanced FEC 1.4 is enabled</li> <li>Enhanced FEC 1.7 is enabled</li> <li>FEC is disabled.</li> <li>Standard FEC is enabled.</li> </ul>
<PEERID>	Indicates the peer trunk facility of the regeneration group on the OTU2-XP card. Accessed using the CHAN AID.
<REGENNAME>	Indicates the name of a regeneration group. Applicable only to DWDM flavored cards, which support regeneration group. Regenname is a string. The default value is "NULL".
<PORTMODE>	Describes the termination mode of each interface on the OTU2-XP card.
<ul style="list-style-type: none"> <li>• DWDM-LINE</li> <li>• DWDM-SECTION</li> <li>• DWDM-TRANS-AIS</li> <li>• DWDM-TRANS-SQUELCH</li> <li>• 10GLANWAN-SQUELCH</li> </ul>	<ul style="list-style-type: none"> <li>Line terminating mode.</li> <li>Section terminating mode.</li> <li>Transparent mode AIS.</li> <li>Transparent mode squelch.</li> <li>10G LAN to WAN Squelch.</li> </ul>
<ODUTRANSMODE>	To configure the "ODUk OH" transparency on the OTU2-XP card.
<ul style="list-style-type: none"> <li>• CISCO-EXT</li> <li>• TRANS-STD</li> </ul>	<ul style="list-style-type: none"> <li>Cisco Extended. When the Cisco Extended configuration is selected, two bytes of the ODU layer is terminated to guarantee the interoperability with the older Transponder/Muxponder cards.</li> <li>Transparent Standard Use. The transponder, behaving as a regenerator, terminates the OUT layer and is transparent to the ODU layer. Also in this case the FEC-MISM (FEC Mismatch) alarm is not generated.</li> </ul>
<ERRORDECORRELATOR>	Indicates the presence of the MLSE modules on the card. This applies only to TXP_MR_10EX_C, MXP_2.5G_10EX_C, and MXP_MR_10DMEX_C cards
<ul style="list-style-type: none"> <li>• Y</li> <li>• N</li> </ul>	<ul style="list-style-type: none"> <li>Indicates that the MLSE module is enabled on the card.</li> <li>Indicates that the MLSE module is disabled on the card.</li> </ul>
<OVRCLK>	Indicates whether the optical trunk is over-clocked or not. It can be Y or N. The default is N.
<ul style="list-style-type: none"> <li>• DQPSK</li> <li>• QPSK</li> </ul>	<ul style="list-style-type: none"> <li>Indicates the D-QPSK modulation format.</li> <li>Indicates the QPSK modulation format.</li> </ul>

Parameter	Description
<RXWLEN>	The RX wavelength. It is applicable in unidirectional regeneration mode of a muxponder card. In this case the RX wavelength can be different from the nominal TX wavelength (EXPWLEN). It can be any valid DWDM wavelength value. The default value is USE-TWL1.
<OSNR>	Measure of the optical signal to noise ration
<PMD>	Measure of the polarization mode value, an average of the 2 polarization modes.
<CHROMDISP>	Alarm raised when receiver fails in compensating the excessive PMD.
<PST_PSTQ>	Primary state of the entity. The parameter type is PST_PSTQ, which is the service state of the entity described by the PST and PSTQ.
<ul style="list-style-type: none"> <li>• IS_NR</li> <li>• OOS-AU</li> <li>• OOS-AUMA</li> <li>• OOS-MA</li> </ul>	<ul style="list-style-type: none"> <li>In Service and Normal</li> <li>Out of Service and Autonomous</li> <li>Out of Service and Autonomous Management</li> <li>Out of Service and Management</li> </ul>
<SSTQ>	(Optional) Secondary state of the entity. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
<ul style="list-style-type: none"> <li>• AINS</li> <li>• DSBLD</li> <li>• LPBK</li> <li>• MEA</li> <li>• MT</li> <li>• OOG</li> <li>• SWDL</li> <li>• UAS</li> <li>• UEQ</li> </ul>	<ul style="list-style-type: none"> <li>Automatic In-Service</li> <li>Disabled</li> <li>Loopback</li> <li>Mismatch of Equipment</li> <li>Maintenance</li> <li>Out of Group</li> <li>Software Download</li> <li>Unassigned</li> <li>Unequipped</li> </ul>

## 21.98 RTRV-OCHCC

(Cisco ONS 15454) The Retrieve Optical Channel Client Connection (RTRV-OCHCC) command retrieves the OCH client connection provisioning information.

**Usage Guidelines** None

**Category** DWDM

**Security** Retrieve

**Input Format** RTRV-OCHCC:[<TID>]:<AID>:<CTAG>;

**Input Example** RTRV-OCHCC:VA454-22:FAC-2-1-1:116;

**Input Parameters**

<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
-------	--

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<AID>::[PAYLOAD=<PAYLOAD>],[CTKID=<CTKID>]:<PSTPSTQ>”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“FAC-2-1-1::PAYLOAD=OC192,CTKID=\"OCHCC\":IS-NR”
;
```

**Output Parameters**

<AID>	Access identifier from the <a href="#">“26.8 CHANNEL”</a> section on page 26-22.
<PAYLOAD>	Indicates the payload of the connection which is equivalent to the type of the payload configured on the facility port where the connection is originated or terminated. Parameter type is MOD1PAYLOAD.
• 10GFC	10-Gigabit Fibre Channel payload
• 10GFICON	10-Gigabit fiber connectivity payload
• 1GFC	1-Gigabit Fibre Channel payload
• 1GFICON	1-Gigabit fiber connectivity payload
• 1GISC3	1-Gigabit ISC3 compatible
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• 2GISC3	2-Gigabit ISC3 compatible
• 4GFC	4-Gigabit Fibre Channel payload
• 4GFICON	4-Gigabit fiber connectivity payload
• 5GIB	5Gbps InfiniBand (IB_5G) payload
• 8GFC	8-Gigabit Fibre Channel payload
• D1VIDEO	D1Video payload
• DV6000	DV6000 payload
• EC1	EC1 payload
• ESCON	ESCON payload
• ETRCLO	ETRCLO payload

• GIGE	1 G Ethernet payload
• HDTV	HDTV payload
• ISC3PEER1G	1 Gbps ISC3 Peer
• ISC3PEER2G	2 Gbps ISC3 Peer
• ISC3PEER2R	1 Gbps or 2 Gbps ISC3 peer used in transparent (2R) mode
• ISCCOMPAT	1 Gbps ISC1, ISC2, and ISC3 compatibility
• OC12	OC12 payload
• OC192	OC192 payload
• OC3	OC3 payload
• OC48	OC48 payload
• OC768	OC768 payload
• OTU3	Optical Transport Unit Level 3
• T3	DS3 payload
<CKTID>	Cross-connect ID. The default is Blank or None. String of ASCII characters. Maximum length is 48. If CKTID is empty or null the CKTID field will not be displayed.
<PSTPSTQ>	Service state. The parameter is PST_PSTQ, which provides the service state of the entity described by the PST and PSTQ.
• Unlocked-Enabled	In service and normal
• Unlocked-Disabled	Out of service and autonomous
• Locked-Disabled	Out of service, autonomous and management
• Locked-Enabled	Out of service and management

## 21.99 RTRV-OCHNC

(Cisco ONS 15454) The Retrieve Optical Channel Network Connection (RTRV-OCHNC) command retrieves the OCH wavelength connection provisioning information.

**Usage Guidelines** None

**Category** DWDM

**Security** Retrieve

**Input Format** RTRV-OCHNC:[<TID>]:<AID>:<CTAG>[:::];

**Input Example** RTRV-OCHNC:VA454-22:CHANWL-1-3-TX-1530.33:116;

<b>Input Parameters</b>	<AID>	Access identifier from the “26.8 CHANNEL” section on page 26-22.
<b>Output Format</b>	<pre>SID DATE TIME M CTAG COMPLD “&lt;SRC&gt;,&lt;DST&gt;:&lt;WCT&gt;:[CKTID=&lt;CKTID&gt;]::&lt;PSTPSTQ&gt;” ;</pre>	
<b>Output Example</b>	<pre>TID-000 1998-06-20 14:30:00 M 001 COMPLD “CHANWL-1-3-TX-1530.33,LINEWL-4-1-RX-1530.33:1WAY:CKTID=\\OCHNC-1\\:IS-NR” ;</pre>	
<b>Output Parameters</b>	<SRC>	Source access identifier from the “26.8 CHANNEL” section on page 26-22. In 2-way wavelength connection sources both directions need to be indicated.
	<DST>	Destination access identifier from the “26.20 LINEWL” section on page 26-46. In 2-way wavelength connection sources both directions need to be indicated.
	<WCT>	Wavelength connection type. The parameter type is WCT. The default is 1WAY.
	• 1WAY	A unidirectional wavelength connection for one specified ring direction.
	• 2WAY	A bidirectional wavelength connection for both the ring directions.
	<CKTID>	Cross-connect ID. The default is Blank or None. String of ASCII characters. Maximum length is 48. If CKTID is empty or null the CKTID field will not be displayed.
	<PSTPSTQ>	Service state. The parameter is PST_PSTQ, which provides the service state of the entity described by the PST and PSTQ.
	• Unlocked-Enabled	In service and normal
	• Unlocked-Disabled	Out of service and autonomous
	• Locked-Disabled	Out of service, autonomous and management
	• Locked-Enabled	Out of service and management

## 21.100 RTRV-OMS

(Cisco ONS 15454) The Retrieve Optical Multiplex Section (RTRV-OMS) command retrieves the attributes (service parameters) and state of an OMS facility.

**Usage Guidelines** None

**Category** DWDM

**Security** Retrieve

**Input Format** RTRV-OMS:[<TID>]:<AID>:<CTAG>;

**Input Example** RTRV-OMS:PENNGROVE:BAND-6-1-RX:236;

**Input Parameters** <AID> Access identifier from the [“26.4 BAND”](#) section on page 26-20.

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<AID>::RDIRN=<RDIRN>,OPTYPE=<OPTICALPORTTYPE>,[OPWR=<POWER>],
EXPBAND=<EXPBAND>,[ACTBAND=<ACTBAND>],[ILOSS=<ILOSS>],
[VOAMODE=<VOAMODE>],[VOAATTN=<VOAATTN>],[VOAPWR=<VOAPWR>],
[VOAREFATTN=<VOAREFATTN>],[VOAREFPWR=<VOAREFPWR>],
[REFOPWR=<REFOPWR>],[CALOPWR=<CALOPWR>],[CHPOWER=<CHPOWER>],
[NAME=<NAME>]:<PST_PSTQ>,[<SSTQ>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“BAND-6-1-RX::RDIRN=W-E,OPTYPE=ADD,OPWR=10.0,EXPBAND=UNKNOWN,
ACTBAND=1530.33_1531.12,ILOSS=1.0,VOAMODE=ATTN,VOAATTN=0.5,
VOAPWR=0.0,VOAREFATTN=3.5,VOAREFPWR=5.0,REFOPWR=10.5,CALOPWR=0.5,
CHPOWER=2.0,NAME=“OMS PORT”:OOS-AU,AINS”
;
```

**Output Parameters**

<AID>	Access identifier from the <a href="#">“26.8 CHANNEL”</a> section on page 26-22.
<RDIRN>	Ring directionality of the optical line. The parameter type is RDIRN_MODE, which is the optical ring directionality.
<ul style="list-style-type: none"> <li>E-W</li> <li>W-E</li> </ul>	<p>The direction of the signal is from east to west (clockwise).</p> <p>The direction of the signal is from west to east (counterclockwise).</p>
<OPTICALPORTTYPE>	The optical port type. The parameter type is OPTICAL_PORT_TYPE, which qualifies the optical port of a card.
<ul style="list-style-type: none"> <li>ADD</li> <li>COM</li> <li>DROP</li> <li>EAD</li> </ul>	<p>The signal is added to the port.</p> <p>Common Port</p> <p>The signal is dropped from the port.</p> <p>Express/Add/Drop port</p>

• IN-ASE	Logical port on Raman CTP card.
• IN-COM	COM channels (without an OSC) that continue the signal from the previous card.
• IN-DC	Input dispersion compensation unit (DCU) port.
• IN-DFB	Rx managed port on Raman CTP card used for span continuity check.
• IN-EXP	Express channel that continues the signal from the previous card.
• IN-LINE	All the channels that continue the signal from the previous card.
• IN-OSC	OSC channel that continues the signal from the previous card.
• OUT-COM	COM channels (without an OSC) that continue the signal to the next card.
• OUT-DC	Output DCU port.
• OUT-DFB	Tx managed port on Raman CTP card used for span continuity check.
• OUT-EXP	Express channel that continues the signal to the next card.
• OUT-LINE	All the channels that continue the signal to the next card.
• OUT-OSC	OSC channel that continue the signal to the next card.
<POWER>	(Optional) The optical power measured at this port. It can be the input or output power according to port type. POWER is a string.
<EXPBAND>	The expected value of the band for this port. The parameter type is OPTICAL_BAND (optical band).
• 1530.33 to 1532.68	Band 1
• 1534.25 to 1536.61	Band 2
• 1538.19 to 1540.56	Band 3
• 1542.14 to 1544.53	Band 4
• 1546.12 to 1548.51	Band 5
• 1550.12 to 1552.52	Band 6
• 1554.13 to 1556.55	Band 7
• 1558.17 to 1560.61	Band 8
• USE-DEFAULT	This band is not yet configured/retrieved from unit.
<ACTBAND>	(Optional) Identifies the manufacturing optical band (group of four contiguous wavelengths) for this port. The parameter type is OPTICAL_BAND (optical band).
• 1530.33 to 1532.68	Band 1
• 1534.25 to 1536.61	Band 2
• 1538.19 to 1540.56	Band 3
• 1542.14 to 1544.53	Band 4
• 1546.12 to 1548.51	Band 5
• 1550.12 to 1552.52	Band 6
• 1554.13 to 1556.55	Band 7
• 1558.17 to 1560.61	Band 8
• USE-DEFAULT	This band is not yet configured/retrieved from unit.

<ILOSS>	(Optional) Insertion loss expressed in dBm. ILOSS applies to output ports only.
<VOAMODE>	(Optional) The working control mode of the VOA. The parameter type is VOA_CNTR_MODE, which defines the VOA control mode.
• ATTN	VOA has a fixed attenuation.
• POWER	VOA controls the attenuation to obtain a fixed output power.
<VOAATTN>	(Optional) The value of calibrated attenuation for the VOA. VOAATTN is a float and a string.
<VOAPWR>	(Optional) The value of calibrated output power that the VOA is going to set as a result of its attenuation. VOAPWR is a float and a string.
<VOAREFATTN>	(Optional) The value of reference attenuation for the VOA. VOAREFATTN is a float and a string.
<VOAREFPWR>	(Optional) The value of reference output power that the VOA is going to set as a result of its attenuation. VOAREFPWR is a float and a string.
<REFOPWR>	(Optional) The value of the calculated optical power expected for the output line added to the calibration value which equals the total expected output power. REFOPWR is a float and a string.
<CALOPWR>	(Optional) The value of the calibrated optical power expected for the output added to the calculated value, which equals the total expected output power. Expressed in dBm. Defaults to 0 dBm. CALOPWR is a float and a string.
<CHPOWER>	(Optional) The per-channel optical power. The parameter type is REVERTIVE_TIME.
• 0.5 to 12.0	Revertive time is 0.5 to 12.0 minutes.
<NAME>	(Optional) Facility name. NAME is a string.
<PST_PSTQ>	Primary state of the entity. The parameter type is PST_PSTQ, which is the service state of the entity described by the primary state (PST) and a primary state qualifier (PSTQ).
• IS_NR	In Service and Normal
• OOS-AU	Out of Service and Autonomous
• OOS-AUMA	Out of Service and Autonomous Management
• OOS-MA	Out of Service and Management
<SSTQ>	(Optional) Secondary state of the entity. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic In-Service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of Equipment
• MT	Maintenance
• OOG	Out of Group
• SWDL	Software Download
• UAS	Unassigned
• UEQ	Unequipped

## 21.101 RTRV-OPM

(Cisco ONS 15454) The Retrieve Optical Monitoring Parameter (RTRV-OPM) command retrieves the optical power monitoring parameters present at the OCH layer in a reconfigurable optical add/drop multiplexing (ROADM) node.

<b>Usage Guidelines</b>	None								
<b>Category</b>	DWDM								
<b>Security</b>	Retrieve								
<b>Input Format</b>	RTRV-OPM:[<TID>]:[<AID>]:<CTAG>[:[:]];								
<b>Input Example</b>	RTRV-OPM:VA454-22:OPM-5-1530.33:116;								
<b>Input Parameters</b>	<table border="1"> <tr> <td>&lt;AID&gt;</td> <td>Access identifier from the <a href="#">“26.22 OPM”</a> section on page 26-51.</td> </tr> </table>	<AID>	Access identifier from the <a href="#">“26.22 OPM”</a> section on page 26-51.						
<AID>	Access identifier from the <a href="#">“26.22 OPM”</a> section on page 26-51.								
<b>Output Format</b>	<pre>SID DATE TIME M CTAG COMPLD “&lt;AID&gt;::[POWEROUT=&lt;POWEROUT&gt;],[POWERADD=&lt;POWERADD&gt;], [POWERPT=&lt;POWERPT&gt;]” ;</pre>								
<b>Output Example</b>	<pre>TID-000 1998-06-20 14:30:00 M 001 COMPLD “OPM-5-1530.33::POWEROUT=9.0,POWERADD=10.0,POWERPT=11.0:” ;</pre>								
<b>Output Parameters</b>	<table border="1"> <tr> <td>&lt;AID&gt;</td> <td>Access identifier from the <a href="#">“26.22 OPM”</a> section on page 26-51.</td> </tr> <tr> <td>&lt;POWEROUT&gt;</td> <td>(Optional) The value of the output power associated to the add or pass-through channel port of a 32WSS card. POWEROUT is a float.</td> </tr> <tr> <td>&lt;POWERADD&gt;</td> <td>(Optional) The value of the input power associated to the add channel port of a 32WSS card. POWERADD is mutually exclusive with the POWERPT parameter. POWERADD is a float.</td> </tr> <tr> <td>&lt;POWERPT&gt;</td> <td>(Optional) The value of the input power associated to the pass-through channel port of a 32WSS card. POWERPT is mutually exclusive with the POWERADD parameter. POWERPT is a float.</td> </tr> </table>	<AID>	Access identifier from the <a href="#">“26.22 OPM”</a> section on page 26-51.	<POWEROUT>	(Optional) The value of the output power associated to the add or pass-through channel port of a 32WSS card. POWEROUT is a float.	<POWERADD>	(Optional) The value of the input power associated to the add channel port of a 32WSS card. POWERADD is mutually exclusive with the POWERPT parameter. POWERADD is a float.	<POWERPT>	(Optional) The value of the input power associated to the pass-through channel port of a 32WSS card. POWERPT is mutually exclusive with the POWERADD parameter. POWERPT is a float.
<AID>	Access identifier from the <a href="#">“26.22 OPM”</a> section on page 26-51.								
<POWEROUT>	(Optional) The value of the output power associated to the add or pass-through channel port of a 32WSS card. POWEROUT is a float.								
<POWERADD>	(Optional) The value of the input power associated to the add channel port of a 32WSS card. POWERADD is mutually exclusive with the POWERPT parameter. POWERADD is a float.								
<POWERPT>	(Optional) The value of the input power associated to the pass-through channel port of a 32WSS card. POWERPT is mutually exclusive with the POWERADD parameter. POWERPT is a float.								

## 21.102 RTRV-OPMOD-PTSYS

(Cisco ONS 15454) The Retrieve Operation Mode Packet Transport System (RTRV-OPMOD-PTSYS) command retrieves the operation mode of the CPT 50 panel.

**Usage Guidelines** This command is valid for PTSYS. Retrieves the operation mode of the PTSYS.

**Category** Equipment

**Security** Retrieve

**Input Format** RTRV-OPMOD-PTSYS:[<TID>]:<AID>:<CTAG>;

**Input Example** RTRV-OPMOD-PTSYS::ALL:1;

**Input Parameters** <AID> PTSYS AID. Access identifier from the [“26.15 EQPT” section on page 26-37](#).

**Output Format** SID DATE TIME  
M CTAG COMPLD  
“<PTSYS AID>:<MODE>”;

**Output Example** TID-000 1998-06-20 14:30:00  
M 001 COMPLD  
“PTSYS-1:NMS”;

Output Parameters	Parameter	Description
	<AID>	AID of the CPT 50 panel for which the operation mode is to be retrieved.
	<OPMODE>	Operation mode of the PTSYSTEM.
	• NMS	TCP IPC mode.
	• IOS	IPC mode.

## 21.103 RTRV-OTS

(Cisco ONS 15454) The Retrieve Optical Transport System (RTRV-OTS) command retrieves the attributes (service parameters) and state of an OTS facility.

<b>Usage Guidelines</b>	None										
<b>Category</b>	DWDM										
<b>Security</b>	Retrieve										
<b>Input Format</b>	RTRV-OTS:[<TID>]:<AID>:<CTAG>;										
<b>Input Example</b>	RTRV-OTS:PENNGROVE:LINE-6-1-RX:236;										
<b>Input Parameters</b>	<table border="1"> <tr> <td>&lt;AID&gt;</td> <td>Access identifier from the <a href="#">“26.19 LINE”</a> section on page 26-43.</td> </tr> </table>	<AID>	Access identifier from the <a href="#">“26.19 LINE”</a> section on page 26-43.								
<AID>	Access identifier from the <a href="#">“26.19 LINE”</a> section on page 26-43.										
<b>Output Format</b>	<pre>SID DATE TIME M CTAG COMPLD  “&lt;AID&gt;:.,[&lt;ROLE&gt;],[&lt;STATUS&gt;]:&lt;OPTICALPORTTYPE&gt;,[&lt;POWER&gt;],[&lt;OSCPWR&gt;],[&lt;ILOSS&gt;], [&lt;VOAMODE&gt;],[&lt;VOAATTN&gt;],[&lt;VOAPWR&gt;],[&lt;VOAREFATTN&gt;],[&lt;VOAREFPWR&gt;],[&lt;OSRI&gt;],[ &lt;AMPLMODE&gt;],[&lt;AMPLMODEFLG&gt;],[&lt;CHPOWER&gt;],[&lt;CHPOWERFLG&gt;],[&lt;GAIN&gt;],[&lt;EXPGA IN&gt;],[&lt;EXPGAINFLG&gt;],[&lt;REFOPWR&gt;],[&lt;OFFSET&gt;],[&lt;REFTILT&gt;],[&lt;REFTILTFLG&gt;],[&lt;CALTILT &gt;],[&lt;ASEOPWR&gt;],[&lt;DCULOSS&gt;],[&lt;AWGST&gt;],[&lt;HEATST&gt;],[&lt;NAME&gt;],[&lt;SOAK&gt;],[&lt;SOAKLEFT &gt;],[&lt;WRKCHANNELS&gt;],[&lt;RATIO&gt;],[&lt;RAMAN_STATUS&gt;],[&lt;RAMAN_QUALITY&gt;],[&lt;TIME&gt;],[ &lt;DATE&gt;],[&lt;RAMAN_RESTORE_FC&gt;],[&lt;TIME_FC&gt;],[&lt;DATE_FC&gt;],[&lt;FG&gt;],[&lt;CG&gt;]:&lt;PST&gt;,[&lt;SST &gt;]” ;</pre>										
<b>Output Example</b>	<pre>TID-000 1998-06-20 14:30:00 M 001 COMPLD “LINE-6-1-RX:RDIRN=W-E,OPTYPE=IN,OPWR=10.0,ILOSS=1.0,VOAMODE=ATTN, VOAATTN=0.5,VOAPWR=0.0,VOAREFATTN=3.5,VOAREFPWR=5.0,OSRI=Y, AMPLMODE=GAIN,CHPOWER=-10.0,GAIN=3.0,EXPGAIN=3.0,REFOPWR=10.0, OFFSET=0.0,REFTILT=3.0,CALTILT=0.0,ASEOPWR=5.0,DCULOSS=1.2, AWGST=WARM-UP,HEATST=ON,NAME=“OTS PORT”:OOS-AU,AINS” ;</pre>										
<b>Output Parameters</b>	<table border="1"> <tr> <td>&lt;AID&gt;</td> <td>Access identifier from the <a href="#">“26.19 LINE”</a> section on page 26-43.</td> </tr> <tr> <td>&lt;RDIRN&gt;</td> <td>Ring direction of the optical line. The parameter type is RDIRN_MODE, which is the optical ring direction.</td> </tr> <tr> <td>• E-W</td> <td>The direction of the signal is from east to west (clockwise).</td> </tr> <tr> <td>• W-E</td> <td>The direction of the signal is from west to east (counterclockwise).</td> </tr> <tr> <td>&lt;ROLE&gt;</td> <td>The role the unit is playing in the protection group.</td> </tr> </table>	<AID>	Access identifier from the <a href="#">“26.19 LINE”</a> section on page 26-43.	<RDIRN>	Ring direction of the optical line. The parameter type is RDIRN_MODE, which is the optical ring direction.	• E-W	The direction of the signal is from east to west (clockwise).	• W-E	The direction of the signal is from west to east (counterclockwise).	<ROLE>	The role the unit is playing in the protection group.
<AID>	Access identifier from the <a href="#">“26.19 LINE”</a> section on page 26-43.										
<RDIRN>	Ring direction of the optical line. The parameter type is RDIRN_MODE, which is the optical ring direction.										
• E-W	The direction of the signal is from east to west (clockwise).										
• W-E	The direction of the signal is from west to east (counterclockwise).										
<ROLE>	The role the unit is playing in the protection group.										

• PROT	The entity is the protection unit in the protection group.
• WORK	The entity is the working unit in the protection group.
<STATUS>	The status of the unit in the protection pair.
• ACT	The entity is the active unit on the shelf
• STBY	The entity is the standby unit on the shelf
<OPTICALPORTTYPE>	The optical port type. The parameter type is OPTICAL_PORT_TYPE, which qualifies the optical port of a card.
• ADD	The signal is added to the port.
• COM	Common port
• DROP	The signal is dropped from the port.
• EAD	Express/Add/Drop port
• IN-ASE	Logical port on Raman CTP card.
• IN-COM	COM channels (without OSC) that continue the signal from the previous card
• IN-DC	Input DCU port
• IN-DFB	Rx managed port on Raman CTP card used for span continuity check.
• IN-EXP	The express channel that continues the signal from the previous card
• IN-LINE	All the channels that continue the signal from the previous card
• IN-OSC	OSC channel that continues the signal from the previous card
• IN-RAMAN	Input RAMAN line facility
• OUT-COM	COM channels (without OSC) that continue the signal to the next card
• OUT-DC	Output DCU port.
• OUT-DFB	Tx managed port on Raman CTP card used for span continuity check.
• OUT-EXP	Express channel that continues the signal to the next card
• OUT-LINE	All the channels that continue the signal to the next card
• OUT-OSC	OSC channel that continue the signal to the next card
• OUT-RAMAN	Output RAMAN line facility
<POWER>	(Optional) The optical power measured at this port. It can be the input or output power according to port type. POWER is a float.
<OSCPWR>	(Optional) The optical power of the OSC channel inside the OTS port.
<ILOSS>	(Optional) Insertion loss.
<VOAMODE>	(Optional) The working control mode of the VOA. The parameter type is VOA_CNTR_MODE, which defines the VOA control mode.
• ATTN	VOA has a fixed attenuation.
• POWER	VOA controls the attenuation to obtain a fixed output power.
<VOAATTN>	(Optional) The value of calibrated attenuation for the VOA. VOAATTN is a float.
<VOAPWR>	(Optional) The value of calibrated output power that the VOA is going to set as a result of its attenuation. VOAPWR is a float.

<VOAREFATTN>	(Optional) The value of reference attenuation for the VOA. VOAREFATTN is a float.
<VOAREFPWR>	(Optional) The value of reference output power that the VOA is going to set as a result of its attenuation. VOAREFPWR is a float.
<OSRI>	(Optional) OSRI enabled or disabled. Present only on a port where the safety is supported. Defaults to off. The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.
<AMPLMODE>	(Optional) The optical amplification control mode. The parameter type is AMPL_MODE, which defines amplifier control mode.
• GAIN	The amplifier always maintains a fixed gain.
• POWER	The amplifier maintains the output power to a fixed value.
<AMPLMODEFLG>	(Optional) Parameter status flag indicating the state of the amplifier control mode.
<CHPOWER>	(Optional) The per channel optical power. Applicable only to amplified OTS ports.
<CHPOWERFLG>	(Optional) Parameter status flag indicating the state of the channel power.
<GAIN>	(Optional) The value of the gain of the amplifier. Defaults to 21 dB for a preamplifier and 20 dB for a booster amplifier.
<EXPGAIN>	(Optional) The expected gain value to be reached from an amplifier when the node is in a DWDM access network. EXPGAIN is a float.
<EXPGAINFLG>	Parameter status flag indicating the state of the expected gain.
<REFOPWR>	(Optional) The value of the calculated optical power expected for the output line added to the calibration value, which equals the total expected output power. REFOPWR is a float.
<OFFSET>	(Optional) The value of the calibrated optical power expected for the output line, which is added to the calculated value to have the total expected output power. OFFSET is a float.
<REFTILT>	(Optional) The calculated tilt value to be added to the user provided calibration value. REFTILT is a float.
<REFTILTFLG>	Parameter status flag indicating the state of the calculated tilt.
<CALTILT>	(Optional) The amplifier calibration tilt offset to be added to the calculated reference value. CALTILT is a float.
<ASEOPWR>	(Optional) The value of the calibrated optical power expected for the output line which is provided by the user, added to the calculated value to have the total expected output power. ASEOPWR is a float.
<DCULOSS>	(Optional) The value of insertion loss associated to DCU in between the two stages of a preamplifier unit. DCULOSS is a float.
<AWGST>	(Optional) The status assumed by arrayed waveguide grating (AWG). The parameter value is AWG_STATUS, which is the AWG status list.
• ON	The AWG is on.
• WARM-UP	The AWG is warming up.

<HEATST>	(Optional) The status assumed by the heater. The parameter type is HEATER_STATUS, which is the heater status list.
• OFF	The heater is off.
• ON	The heater is on.
<NAME>	(Optional) Port name. NAME is a string.
<SOAK>	(Optional) Locked-Automatic In Service to Unlocked transition soak time as measured in 15-minute intervals. SOAK is an integer.
<SOAKLEFT>	(Optional) Time remaining for the transition from Locked-AutomaticInService to Unlocked measured in 1 minute intervals. The format is HH-MM where HH ranges from 00 to 48 and MM ranges from 00 to 59. Rules for SOAKLEFT are as follows: <ul style="list-style-type: none"> <li>• When the port is in Locked;Locked,Maintenance; or Unlocked state, the parameter is not displayed.</li> <li>• When the port is in Locked,AutomaticInService state but the countdown has not started due to a fault signal, the value will be SOAKLEFT=NOT-STARTED.</li> <li>• When the port is in Locked,AutomaticInService state and the countdown has started, the value will be shown in HH-MM format.</li> </ul>
<WRKCHANNELS>	Number of working OCHNC channels carried by the facility.
<RATIO>	Indicates the Raman Pump Power ratio.
<RAMAN_STATUS>	Indicates the Raman setup state.
• NOT-TUNED	Raman is not tuned. Default values are set.
• TUNING	Raman is tuning.
• TUNED	Raman is tuned but not verified.
• FORCE-TUNED	Raman is tuned with values not measured but calculated.
• ACCEPTED-TUNED	Raman setup has been accepted by the user.
• TUNED-VERIFIED	Raman is tuned and verified.
<RAMAN_QUALITY>	Indicates the Raman quality setup results.
• SETUP-GOOD	Setup good
• SETUP-NEED-ACCEPT	Setup needs acceptance
• SETUP-UNACCEPT	Setup unaccepted
• SETUP-FORCED	Setup forced
<TIME>	Identifies the time. Time is a string. Default value is - current time.
<DATE>	Identifies the date. Date is a string. Default value is - current date.
<RAMAN_RESTORE_FC>	Restores Raman after fiber cut.
• FAILED	Restores Raman after fiber cut fails.
• NOTEXEC	Restores Raman after fiber cut is not executed.
• OK	Restores Raman after fiber cut is OK.
• PENDING	Restores Raman after fiber cut is PENDING.
<CG>	TDCU coarse grain value
• 0	TDCU coarse grain value
• 110	TDCU coarse grain value

• -1100	TDCU coarse grain value
• -1210	TDCU coarse grain value
• -1320	TDCU coarse grain value
• -1430	TDCU coarse grain value
• -1540	TDCU coarse grain value
• -1650	TDCU coarse grain value
• -220	TDCU coarse grain value
• -330	TDCU coarse grain value
• -440	TDCU coarse grain value
• -550	TDCU coarse grain value
• -660	TDCU coarse grain value
• -770	TDCU coarse grain value
• -880	TDCU coarse grain value
• -990	TDCU coarse grain value
<FG>	TDCU fine grain value
• 0	TDCU fine grain value
• -45	TDCU fine grain value
• -450	TDCU fine grain value
• -495	TDCU fine grain value
• -540	TDCU fine grain value
• -585	TDCU fine grain value
• -630	TDCU fine grain value
• -675	TDCU fine grain value
• -90	TDCU fine grain value
• -135	TDCU fine grain value
• -180	TDCU fine grain value
• -225	TDCU fine grain value
• -270	TDCU fine grain value
• -315	TDCU fine grain value
• -360	TDCU fine grain value
• -405	TDCU fine grain value
<PST>	(Optional) Primary state of the entity. The parameter type is PST, which indicates the current overall service condition of an entity.
• Unlocked-Enabled	In service and normal
• Unlocked-Disabled	Out of service and autonomous
• Locked-Disabled	Out of service, autonomous and management
• Locked-Enabled	Out of service and management
<SST>	(Optional) Secondary state of the entity. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AutomaticInService	Automatic in service
• Disabled	Disabled
• Loopback	Loopback

• MismatchofEquipmentAlarm	Mismatch of equipment and attributes
• Maintenance	Maintenance mode
• OutOfGroup	Out of group
• SoftwareDownload	Software downloading
• Unassigned	Unassigned
• NotInstalled	Unequipped

## 21.104 RTRV-OTU2

(Cisco ONS 15454) The Retrieve Optical Transport Unit Level 2 (RTRV-OTU2) command retrieves the attributes (service parameters) and state of an OTU2 facility.

### Usage Guidelines

None

### Category

DWDM

### Security

Retrieve

### Input Format

RTRV-OTU2:[<TID>]:<AID>:<CTAG>;

### Input Example

RTRV-OTU2:PENNGROVE:FAN-6-1-1:236;

### Input Parameters

<AID>      Access identifier from the [“26.19 LINE”](#) section on page 26-43.

### Output Format

```
SID DATE TIME
M CTAG COMPLD
“<AID>:.,[<ROLE>],[<STATUS>]:[NAME=<PORTNAME>],GCC=<GCC>],[DWRAP=<DWRAP>],
[FEC=<FEC>],[PAYLOADMAP=<PAYLOADMAP>],[OSDBER=<OSDBER>],[PMMODE=<PMMODE>],:<PST_PSTQ>,[<SSTQ>]”;
```

### Output Example

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“CHAN-6-1:.,WORK,ACT:NAME="NY PORT",GCC=Y,DWRAP=Y,
FEC=STD,PAYLOADMAP=ASYNCH,OSDBER=1E-5,PMMODE=STD,:OOS-AU,AINS”
;
```

**Output Parameters**

Parameter	Description
<AID>	Access identifier from the “26.19 LINE” section on page 26-43.
<ROLE>	The role the unit is playing in the protection group.
• PROT	The entity is the protection unit in the protection group.
• WORK	The entity is the working unit in the protection group.
<STATUS>	The status of the unit in the protection pair.
• ACT	The entity is the active unit on the shelf.
• STBY	The entity is the standby unit on the shelf.
<OSDBER>	OTN SDBER. Can only be provisioned on the working port. Defaults to 1E-7. Parameter type is SD_BER—the threshold for declaring signal degrade on a facility or path.
• 1E-5	SDBER is 1E-5
• 1E-6	SDBER is 1E-6
• 1E-7	SDBER is 1E-7
• 1E-8	SDBER is 1E-8
• 1E-9	SDBER is 1E-9
<GCC>	Identifies the generic communication channel (GCC) connection of the port.
• Y	GCC can be utilized.
• N	GCC cannot be utilized.
<DWRAP>	(Optional) The ITU-T G.709 monitoring digital wrapper. It is either on or off. The system default is ON. For MXP_2.5G_10G and TXP_MR_10G cards, this applies only to the DWDM port. The parameter type is ON_OFF (disable or enable an attribute). To enable ITU-T G.709 monitoring, there should be no GCC on the DWDM port and the payload (in which the card is configured) should not be UNFRAMED. To disable ITU-T G.709 monitoring, there should be no GCC on the DWDM port, the FEC should be turned to off, there should be no overhead circuit created on the DWDM port, and none of the client ports on the card should be part of a Y-cable protection group (muxponder only).
• N	Disable an attribute.
• Y	Enable an attribute.
<FEC>	(Optional) Forward error correction. It can be enabled only if ITU-T G.709 monitoring is turned ON. It is either off or enabled in standard or enhanced mode. The system default is standard FEC enabled. The FEC level PM and thresholds apply if the FEC is turned ON. The parameter type is FEC_MODE, which specifies the type of forward error correction.
• ENH	Enhanced FEC is enabled.
• OFF	FEC is disabled.
• STD	Standard FEC is enabled.
<PAYLOADMAP>	(Optional) The type of payload mapping. It can be enabled only if ITU-T G.709 monitoring is turned ON and FEC is enabled. The parameter type is PAYLOAD_MAPPING, which is the payload mapping mode.
• ASYNCH	Asynchronous mapping mode
• ODU	ODU multiplex structure mode
• SYNCH	Synchronous mapping mode

- NOOPU2FIXED Mapping with no FIXEDSTUFF STUFF

<FREQ> (Optional) The parameter type is OPTICAL\_WLEN, which indicates the optical wavelength.

- 1310 Wavelength 1310
- 1470 Wavelength 1470
- 1490 Wavelength 1490
- 1510 Wavelength 1510
- 1528.77 Wavelength 1528.77
- 1529.55 Wavelength 1529.55
- 1529.94 Wavelength 1529.94
- 1530 Wavelength 1530
- 1530.33 Wavelength 1530.33
- 1530.73 Wavelength 1530.73
- 1531.12 Wavelength 1531.12
- 1531.51 Wavelength 1531.51
- 1531.90 Wavelength 1531.90
- 1532.29 Wavelength 1532.29
- 1532.68 Wavelength 1532.68
- 1533.07 Wavelength 1533.07
- 1533.47 Wavelength 1533.47
- 1533.86 Wavelength 1533.86
- 1534.25 Wavelength 1534.25
- 1534.64 Wavelength 1534.64
- 1535.04 Wavelength 1535.04
- 1535.43 Wavelength 1535.43
- 1535.82 Wavelength 1535.82
- 1536.22 Wavelength 1536.22
- 1536.61 Wavelength 1536.61
- 1537 Wavelength 1537
- 1537.40 Wavelength 1537.40
- 1537.79 Wavelength 1537.79
- 1538.19 Wavelength 1538.19
- 1538.58 Wavelength 1538.58
- 1538.98 Wavelength 1538.98
- 1539.37 Wavelength 1539.37
- 1539.77 Wavelength 1539.77
- 1540.16 Wavelength 1540.16
- 1540.56 Wavelength 1540.56
- 1540.95 Wavelength 1540.95
- 1541.35 Wavelength 1541.35
- 1541.75 Wavelength 1541.75

• 1542.14	Wavelength 1542.14
• 1542.35	Wavelength 1542.35
• 1542.54	Wavelength 1542.54
• 1542.94	Wavelength 1542.94
• 1543.33	Wavelength 1543.33
• 1543.73	Wavelength 1543.73
• 1544.13	Wavelength 1544.13
• 1544.53	Wavelength 1544.53
• 1544.92	Wavelength 1544.92
• 1545.32	Wavelength 1545.32
• 1545.72	Wavelength 1545.72
• 1546.12	Wavelength 1546.12
• 1546.52	Wavelength 1546.52
• 1546.92	Wavelength 1546.92
• 1547.32	Wavelength 1547.32
• 1547.72	Wavelength 1547.72
• 1548.12	Wavelength 1548.12
• 1548.51	Wavelength 1548.51
• 1548.92	Wavelength 1548.92
• 1549.32	Wavelength 1549.32
• 1549.71	Wavelength 1549.71
• 1550	Wavelength 1500
• 1550.12	Wavelength 1550.12
• 1550.52	Wavelength 1550.52
• 1550.92	Wavelength 1550.92
• 1551.32	Wavelength 1551.32
• 1551.72	Wavelength 1551.72
• 1552.12	Wavelength 1552.12
• 1552.52	Wavelength 1552.52
• 1552.93	Wavelength 1552.93
• 1553.33	Wavelength 1553.33
• 1553.73	Wavelength 1553.73
• 1554.13	Wavelength 1554.13
• 1554.13	Wavelength 1554.13
• 1554.94	Wavelength 1554.94
• 1555.34	Wavelength 1555.34
• 1555.75	Wavelength 1555.75
• 1556.15	Wavelength 1556.15
• 1556.55	Wavelength 1556.55
• 1556.96	Wavelength 1556.96
• 1557.36	Wavelength 1557.36

• 1557.77	Wavelength 1557.77
• 1558.17	Wavelength 1558.17
• 1558.58	Wavelength 1558.58
• 1558.98	Wavelength 1558.98
• 1559.39	Wavelength 1559.39
• 1559.79	Wavelength 1559.79
• 1560.20	Wavelength 1560.20
• 1560.61	Wavelength 1560.61
• 1561.01	Wavelength 1561.01
• 1561.42	Wavelength 1561.42
• 1561.83	Wavelength 1561.83
• 1570	Wavelength 1570
• 1570.83	Wavelength 1570.83
• 1571.24	Wavelength 1571.24
• 1571.65	Wavelength 1571.65
• 1572.06	Wavelength 1572.06
• 1572.48	Wavelength 1572.48
• 1572.89	Wavelength 1572.89
• 1573.30	Wavelength 1573.30
• 1573.71	Wavelength 1573.71
• 1574.13	Wavelength 1574.13
• 1574.54	Wavelength 1574.54
• 1574.95	Wavelength 1574.95
• 1575.37	Wavelength 1575.37
• 1575.78	Wavelength 1575.78
• 1576.20	Wavelength 1576.20
• 1576.61	Wavelength 1576.61
• 1577.03	Wavelength 1577.03
• 1577.44	Wavelength 1577.44
• 1577.86	Wavelength 1577.86
• 1578.27	Wavelength 1578.27
• 1578.69	Wavelength 1578.69
• 1579.10	Wavelength 1579.10
• 1579.52	Wavelength 1579.52
• 1579.93	Wavelength 1579.93
• 1580.35	Wavelength 1580.35
• 1580.77	Wavelength 1580.77
• 1581.18	Wavelength 1581.18
• 1581.60	Wavelength 1581.60
• 1582.02	Wavelength 1582.02
• 1582.44	Wavelength 1582.44

• 1582.85	Wavelength 1582.85
• 1583.27	Wavelength 1583.27
• 1583.69	Wavelength 1583.69
• 1584.11	Wavelength 1584.11
• 1584.53	Wavelength 1584.53
• 1584.95	Wavelength 1584.95
• 1585.36	Wavelength 1585.36
• 1585.78	Wavelength 1585.78
• 1586.20	Wavelength 1586.20
• 1586.62	Wavelength 1586.62
• 1587.04	Wavelength 1587.04
• 1587.46	Wavelength 1587.46
• 1587.88	Wavelength 1587.88
• 1588.30	Wavelength 1588.30
• 1588.73	Wavelength 1588.73
• 1589.15	Wavelength 1589.15
• 1589.57	Wavelength 1589.57
• 1589.99	Wavelength 1589.99
• 1590	Wavelength 1590
• 1590.41	Wavelength 1590.41
• 1590.83	Wavelength 1590.83
• 1591.26	Wavelength 1591.26
• 1591.68	Wavelength 1591.68
• 1592.10	Wavelength 1592.10
• 1592.52	Wavelength 1592.52
• 1592.95	Wavelength 1592.95
• 1593.37	Wavelength 1593.37
• 1593.79	Wavelength 1593.79
• 1594.22	Wavelength 1594.22
• 1594.64	Wavelength 1594.64
• 1595.06	Wavelength 1595.06
• 1595.49	Wavelength 1595.49
• 1596.34	Wavelength 1596.34
• 1596.76	Wavelength 1596.76
• 1597.19	Wavelength 1597.19
• 1597.62	Wavelength 1597.62
• 1598.04	Wavelength 1598.04
• 1598.47	Wavelength 1598.47
• 1598.89	Wavelength 1598.89
• 1599.32	Wavelength 1599.32
• 1599.75	Wavelength 1599.75

• 1600.06	Wavelength 1600.06
• 1601.03	Wavelength 1601.03
• 1601.46	Wavelength 1601.46
• 1601.88	Wavelength 1601.88
• 1602.31	Wavelength 1602.31
• 1602.74	Wavelength 1602.74
• 1603.17	Wavelength 1603.17
• 1603.60	Wavelength 1603.60
• 1604.03	Wavelength 1604.03
• 1610	Wavelength 1610
• USE-TWL1	Use Tunable Wavelength 1
<LOSSB>	(Optional) The parameter type is REACH, which indicates the reach values.
• AUTOPROV	Autoprovisioning
• CX	Reach CX
• CX1	Reach CX1
• DX	Reach DX
• HX	Reach HX
• I1	Reach I1
• IR-1	Reach IR-1
• IR-2	Reach IR-2
• L1	Reach L1
• L2	Reach L2
• L3	Reach L3
• LR-1	Reach LR-1
• LR-2	Reach LR-2
• LR-3	Reach LR-3
• LX	Reach LX
• S1	Reach S1
• S2	Reach S2
• SR	Reach SR
• SR-1	Reach SR-1
• SX	Reach SX
• T	Reach T
• VX	Reach VX
• ZX	Reach ZX
<PORTNAME>	(Optional) Port name. PORTNAME is a string.
<CMDMDE>	(Optional) Command mode. Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in Unlocked-Enabled or Locked-Disabled, AutomaticInService service states.

<PST_PSTQ>	Primary state. The parameter type is PST_PSTQ, which is the service state of the entity described by the PST and PSTQ.
• Unlocked-Enabled	In service and normal
• Unlocked-Disabled	Out of service and autonomous
• Locked-Disabled	Out of service, autonomous and management
• Locked-Enabled	Out of service and management
<SSTQ>	(Optional) Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AutomaticInService	Automatic in service
• Disabled	Disabled
• Loopback	Loopback
• MismatchofEquipmentAlarm	Mismatch of equipment and attributes
• Maintenance	Maintenance mode
• OutOfGroup	Out of group
• SoftwareDownload	Software downloading
• Unassigned	Unassigned
• NotInstalled	Unequipped

## 21.105 RTRV-PATH-OCH

(ONS 15454) The Retrieve Path Optical Channel (RTRV-PATH-OCH) command retrieves the OCH path inside a node. An OCH path is a list of access identifiers that addresses all the possible facility and internal optical channels that are all associated to the same wavelength.

<b>Usage Guidelines</b>	None
<b>Category</b>	DWDM
<b>Security</b>	Retrieve
<b>Input Format</b>	RTRV-PATH-OCH:[<TID>]:<AID>:<CTAG>[:::];
<b>Input Example</b>	RTRV-PATH-OCH:PENNGROVE:CHAN-6-2:236;

<b>Input Parameters</b>	<AID>	Access identifier from the “26.8 CHANNEL” section on page 26-22, “26.20 LINEWL” section on page 26-46, and “26.5 BANDWL” section on page 26-20.
<b>Output Format</b>	<pre> SID DATE TIME M CTAG COMPLD "&lt;AID&gt;::[WLEN=&lt;WLEN&gt;],[PATH=&lt;PATH&gt;]:" ; </pre>	
<b>Output Example</b>	<pre> TID-000 1998-06-20 14:30:00 M 001 COMPLD "CHAN-6-2::WLEN=1530.33,PATH=LINEWL-1-3-RX-1530.33&amp;LINEWL-1-1-TX-1530.33&amp; LINEWL-3-1-RX-1530.33&amp;CHAN-3-1-TX&amp;CHAN-6-2:" ; </pre>	
<b>Output Parameters</b>	<AID>	Access identifier from the “26.8 CHANNEL” section on page 26-22, “26.20 LINEWL” section on page 26-46, and “26.5 BANDWL” section on page 26-20.
	<WLEN>	Defines the optical wavelength. The parameter type is OPTICAL_WLEN (optical wavelength).
	• 1530.33	Wavelength C Band - 1/40
	• 1530.72	Wavelength 1530.72
	• 1531.12	Wavelength C Band - 2/40
	• 1531.90	Wavelength C Band - 3/40
	• 1532.68	Wavelength C Band - 4/40
	• 1534.25	Wavelength C Band - 6/40
	• 1535.04	Wavelength C Band - 7/40
	• 1535.82	Wavelength C Band - 8/40
	• 1536.61	Wavelength C Band - 9/40
	• 1538.19	Wavelength C Band - 11/40
	• 1538.98	Wavelength C Band - 12/40
	• 1539.77	Wavelength C Band - 13/40
	• 1540.56	Wavelength C Band - 14/40
	• 1542.14	Wavelength C Band - 16/40
	• 1542.94	Wavelength C Band - 17/40
	• 1543.73	Wavelength C Band - 18/40
	• 1544.53	Wavelength C Band - 19/40
	• 1546.12	Wavelength C Band - 21/40
	• 1546.92	Wavelength C Band - 22/40
	• 1547.72	Wavelength C Band - 23/40
	• 1548.11	Wavelength 1548.11
	• 1548.51	Wavelength C Band - 24/40

• 1548.91	Wavelength 1548.91
• 1549.72	Wavelength 1549.72
• 1550.12	Wavelength C Band - 26/40
• 1550.92	Wavelength C Band - 27/40
• 1551.72	Wavelength C Band - 28/40
• 1552.52	Wavelength C Band - 29/40
• 1554.13	Wavelength C Band - 31/40
• 1554.94	Wavelength C Band - 32/40
• 1555.75	Wavelength C Band - 33/40
• 1556.55	Wavelength C Band - 34/40
• 1558.17	Wavelength C Band - 36/40
• 1558.98	Wavelength C Band - 37/40
• 1559.79	Wavelength C Band - 38/40
• 1560.61	Wavelength C Band - 39/40
• 1577.44	L-Band Wavelength 1577.44
• 1577.86	L-Band Wavelength 1577.86
• 1578.27	L-Band Wavelength 1578.27
• 1578.69	L-Band Wavelength 1578.69
• 1579.10	L-Band Wavelength 1579.10
• 1579.52	L-Band Wavelength 1579.52
• 1579.93	L-Band Wavelength 1579.93
• 1580.35	L-Band Wavelength 1580.35
• 1580.77	L-Band Wavelength 1580.77
• 1581.18	L-Band Wavelength 1581.18
• 1581.60	L-Band Wavelength 1581.60
• 1582.02	L-Band Wavelength 1582.02
• 1582.44	L-Band Wavelength 1582.44
• 1582.85	L-Band Wavelength 1582.85
• 1583.27	L-Band Wavelength 1583.27
• 1583.69	L-Band Wavelength 1583.69
• 1584.11	L-Band Wavelength 1584.11
• 1584.53	L-Band Wavelength 1584.53
• 1584.95	L-Band Wavelength 1584.95
• 1585.36	L-Band Wavelength 1585.36
• 1585.78	L-Band Wavelength 1585.78
• 1586.20	L-Band Wavelength 1586.20
• 1586.62	L-Band Wavelength 1586.62
• 1587.04	L-Band Wavelength 1587.04
• 1587.46	L-Band Wavelength 1587.46
• 1587.88	L-Band Wavelength 1587.88
• 1588.30	L-Band Wavelength 1588.30

• 1588.73	L-Band Wavelength 1588.73
• 1589.15	L-Band Wavelength 1589.15
• 1589.57	L-Band Wavelength 1589.57
• 1589.99	L-Band Wavelength 1589.99
• 1590.41	L-Band Wavelength 1590.41
• 1590.83	L-Band Wavelength 1590.83
• 1591.26	L-Band Wavelength 1591.26
• 1591.68	L-Band Wavelength 1591.68
• 1592.10	L-Band Wavelength 1592.10
• 1592.52	L-Band Wavelength 1592.52
• 1592.95	L-Band Wavelength 1592.95
• 1593.37	L-Band Wavelength 1593.37
• 1593.79	L-Band Wavelength 1593.79
<PATH>	Access identifier from the “26.8 CHANNEL” section on page 26-22 or the “26.20 LINEWL” section on page 26-46.

## 21.106 RTRV-PM-<MOD2>

(Cisco ONS 15454) The Retrieve Performance for 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 5GIB, 8GFC, CHGRP, CLNT, D1VIDEO, DS1, DV6000, DVBASI, E1, E3, E4, EC1, ESCON, ETH, ETRCLO, FSTE, G1000, GFPOS, GIGE, HDLC, HDTV, ISC1, ILK, ISCCOMPAT, ISC3PEER2R, ISC3PEER1G, ISC3PEER2G, OC12, OC192, OC3, OC48, OC768, OCH, OMS, OTS, OTU3, POS, STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, STS9C, T1, T3, VC12, VC3, VT1, or VT2 (RTRV-PM-<MOD2>) command retrieves the values of PM parameters for a specified card type.



### Note

The RTRV-PM-<MOD2> command does not retrieve SEFS/RS-OFS PM counter for OC192/STM64 payloads on ADM-10G, 40G/40E (TXP/MXP), and OTU2-XP cards.

### Usage Guidelines

- See [Table 28-1 on page 28-1](#) for supported modifiers by platform.
- MONLEV is in the format of LEV-DIRN.
- The format of MONDAT is MM-DD, where MM (month of the year) ranges from 1 to 12 and DD (day of the month) ranges from 1 to 31.
- The format for MONTM is HH-MM, where HH (hour of the day) ranges from 0 to 23 and MM (minute of the hour) ranges from 0 to 59.
- If there are no errors to report, the response will be COMPLD (completed).
- If the TMPER is 1-DAY, MONTM is not applicable (null), and is treated as null if MONTM is not null.
- A null value for MONLEV defaults to 1-UP.
- A null value for MONDAT defaults to the current date (MM-DD).
- A null value for MONTM defaults to the current time (HH-MM).

- Unless otherwise stated, DS-1 cards are the only cards that support both the RCV and TRMT directions. All other cards only support the RCV direction.
- After BLSR switching, the working path is switched out, the traffic goes through the protection path, and the IPPM can be retrieved from the protection STS path.
- If there is a STS PCA on the protection path, during the BLSR switching, the PCA path is preemptive; sending this command on the protection path after a BLSR switch, the command returns the PMs from the protection path, not from the PCA path.
- Some MOD2 entities; for example, OCH, CLNT, and Optical (OCn), support negative MONTYPE values. By default, this command defaults to 0-UP (return MONTYPES where the MONVAL is 0 or higher). To retrieve the negative values, you must issue 0-DN in the MONLEV field. The rules are as follows:
  - Client port only-Laser and SONET PMs are applicable and will appear. If the card payload is in SONET mode, then SONET PMs will appear, provided the MONLEV criteria is met.
  - Trunk port Laser PMs are always available. Laser PMs are only for near end. If ITU-T G.709 is enabled, then the OTN PMs will appear. If ITU-T G.709 and FEC are enabled, then the FEC PMs will appear. If the card payload is in SONET mode, then SONET PMs will appear. All PM MONVALUES should pass the MONLEV filter criteria.
- For DWDM cards, the MONLEV filter criteria will not support a floating point. It will be returned and interpreted as an integer.
- If the DS-1 mode of the DS3XM-12 card is FDL, the DS-1 path can retrieve FDL/T.403 FEND PM counts up to 32 15-minute intervals in the RTRV-PM-DS1 command.
- RTRV-PM-<MOD2> can also be used to retrieve the RMON-managed PM data.

<b>Category</b>	Performance												
<b>Security</b>	Retrieve												
<b>Input Format</b>	RTRV-PM-<MOD2>:[<TID>]:<AID>:<CTAG>::[<MONTYPE>],[<MONLEV>],[<LOCN>],[<DIRECTION>],[<TMPER>],[<DATE>],[<TIME>];												
<b>Input Example</b>	RTRV-PM-T1:TID:FAC-2-1:123::CVL,10-UP,NEND,RCV,15-MIN,04-11,12-45;												
<b>Input Parameters</b>	<table border="1"> <tr> <td>&lt;AID&gt;</td> <td>Access identifier from the “<a href="#">26.1 ALL</a>” section on page 26-1. All of the STS, VT1, Facility, and DS1 AIDs are supported.</td> </tr> <tr> <td>&lt;MONTYPE&gt;</td> <td>Monitored type. A null value defaults to all montypes applicable to the modifier. The parameter type is ALL_MONTYPE, which is the monitoring type list.</td> </tr> <tr> <td>• AISSP</td> <td>Alarm Indication Signal Seconds—Path</td> </tr> <tr> <td>• ALL</td> <td>All possible values</td> </tr> <tr> <td>• BBE-PM</td> <td>OTN—Background Block Errors—Path Monitor Point</td> </tr> <tr> <td>• BBE-SM</td> <td>OTN—Background Block Errors—Section Monitor Point</td> </tr> </table>	<AID>	Access identifier from the “ <a href="#">26.1 ALL</a> ” section on page 26-1. All of the STS, VT1, Facility, and DS1 AIDs are supported.	<MONTYPE>	Monitored type. A null value defaults to all montypes applicable to the modifier. The parameter type is ALL_MONTYPE, which is the monitoring type list.	• AISSP	Alarm Indication Signal Seconds—Path	• ALL	All possible values	• BBE-PM	OTN—Background Block Errors—Path Monitor Point	• BBE-SM	OTN—Background Block Errors—Section Monitor Point
<AID>	Access identifier from the “ <a href="#">26.1 ALL</a> ” section on page 26-1. All of the STS, VT1, Facility, and DS1 AIDs are supported.												
<MONTYPE>	Monitored type. A null value defaults to all montypes applicable to the modifier. The parameter type is ALL_MONTYPE, which is the monitoring type list.												
• AISSP	Alarm Indication Signal Seconds—Path												
• ALL	All possible values												
• BBE-PM	OTN—Background Block Errors—Path Monitor Point												
• BBE-SM	OTN—Background Block Errors—Section Monitor Point												

• BBER-PM	OTN—Background Block Error Ratio—Path Monitor Point expressed as one tenth of a percentage
• BBER-SM	OTN—Background Block Error Ratio—Section Monitor Point expressed as one tenth of a percentage
• BIEC	FEC—Bit Errors Corrected
• BIT-EC	the number of bit errors corrected by the FEC algorithm
• CGV	8B10B—Code Group Violations
• CSSP	Controlled Slip Seconds—Path (DS3XM-12 FDL/T1.403 PM count)
• CVCPP	Coding Violations—CP-Bit Path
• CVL	Coding Violations—Line
• CVP	Coding Violations—Path
• CVS	Coding Violations—Section
• CVV	Coding Violations—Section
• DCG	8B10B—Data Code Groups
• ESAP	Errored Second Type A-Path (DS3XM-12 DS1 PM count)
• ESBP	Errored Second Type B-Path (DS3XM-12 DS1 PM count)
• ESCPP	Errored Seconds—CP—Bit Path
• ESL	Errored Seconds—Line
• ESNPFE	Errored Second—Network Path (DS3XM-12 DS1 PM count)
• ESP	Errored Seconds—Path
• ES-PM	OTN—Errored Seconds—Path Monitor Point
• ES-SM	OTN—Errored Seconds—Section Monitor Point
• ESR	Errored Second—Ratio
• ESR-PM	Errored Seconds Ratio—Path monitor Point expressed as one tenth of a percentage
• ESR-SM	Errored Seconds Ratio—Section monitor Point expressed as one tenth of a percentage
• ESS	Errored Seconds—Section
• ESV	Errored Seconds—VT Path
• dot3StatsFCSErrors	A count of frames received on a particular interface that are an integral number of octets in length but do not pass the FCS check.
• dot3StatsFrameTooLong	A count of frames received on a particular interface that exceed the maximum permitted frame size.
• etherStatsBroadcastPkts	The total number of good packets received that were directed to a multicast address
• etherStatsCollisions	Number of transmit packets that are collisions
• etherStatsCRCAlignErrors	The total number of packets received that have a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets
• etherStatsDropEvents	Number of received frames dropped at the port level
• etherStatsFragments	The total number of packets received that were less than 64 octets
• etherStatsJabbers	The total number of packets received that are longer than 1518 octets
• etherStatsOctets	The total number of octets of data

• etherStatsOversizePkts	The total number of packets received that are longer than 1518 octets
• etherStatsPkts	The total number of packets (including bad packets, broadcast packets, and multicast packets) received
• etherStatsUndersizePkts	The total number of packets received that are less than 64 octets
• FCP	Failure Count—Line
• FC-PM	OTN—Failure Count—Path Monitor Point
• FC-SM	OTN—Failure Count—Section Monitor Point
• HP-AR	Availability Ratio
• HP-BBE	High-Order Path Background Block Error
• HP-BBER	High-Order Path Background Block Error Ratio
• HP-EB	High-Order Path Errored Block
• HP-ES	High-Order Path Errored Second
• HP-ESA	High-Order Path Errored Seconds—A
• HP-ESB	High-Order Path Errored Seconds—B
• HP-ESR	High-Order Path Errored Second Ratio
• HP-FC	High-Order Path Failure Count
• HP-NPJC-PDET	High-Order Path Negative Pointer Justification Count, Path Detected
• HP-NPJC-PGEN	High-Order Path, Negative Pointer Justification Count, Path Generated
• HP-OI	Outage Intensity
• HP-PJCDIFF	High-Order Path Pointer Justification Count Difference
• HP-PJCS-PDET	High-Order Path Pointer Justification Count, Path Detected
• HP-PJCS-PGEN	High-Order Path Pointer Justification Count Seconds, Path Generated
• HP-PPJC-PDET	High-Order Path Positive Pointer Justification Count, Path Detected
• HP-PPJC-PGEN	High-Order Path, Positive Pointer Justification Count, Path Generated
• HP-SEPI	The number of SEP events in available time
• HP-SES	High-Order Path Severely Errored Seconds
• HP-SESR	High-Order Path Severely Errored Second Ratio
• HP-UAS	High-Order Path Unavailable Seconds
• ifInBroadcastPkts	Number of broadcast packets received since the last counter reset
• ifInDiscards	The number of inbound packets
• ifInErrorBytePktss	Receive Error Byte
• ifInErrors	The number of inbound packets (or transmission units) that contained errors
• ifInFramingErrorPkts	Receive Framing Error
• ifInJunkInterPkts	Receive Interpacket Junk
• ifInMulticastPkts	Number of multicast packets received since the last counter reset
• ifInOctets	Number of bytes transmitted since the last counter reset
• ifInUcastPkts	Number of unicast packets received since the last counter reset

• ifOutBroadcastPkts	Number of broadcast packets transmitted
• ifOutDiscards	The number of outbound packets
• ifOutErrors	The number of outbound packets (or transmission units) that could not be transmitted because of errors
• ifOutMulticastPkts	Number of multicast packets transmitted
• ifOutPayloadCrcErrors	Received payload CRC errors
• ifOutUcastPkts	Number of unicast packets transmitted
• IOS	8B10B—Idle Ordered Sets
• IPC	Invalid Packet Count
• LBCL-AVG	Average Laser Bias Current in microA
• LBCL-MAX	Maximum Laser Bias Current in microA
• LBCL-MIN	Minimum Laser Bias Current in microA
• LBCN	Normalized Laser Bias Current for OC3-8
• LBCN-HWT	Normalized Laser Bias Current—Higher Threshold
• LBCN-LWT	Normalized Laser Bias Current—Lower Threshold
• LOSSL	Loss of Signal Seconds—Line
• LP-BBE	Low-Order Path Background Block Error
• LP-BBER	Low-Order Path Background Block Error Ratio
• LP-EB	Low-Order Path Errored Block
• LP-ES	Low-Order Path Errored Second
• LP-ESA	Low-Order Path Errored Seconds-A
• LP-ESB	Low-Order Path Errored Seconds-B
• LP-ESR	Low-Order Path Errored Second Ratio
• LP-FC	Low-Order Path Failure Count
• LP-NPJC-DET	Low-Order Negative Pointer Justification Count, Detected
• LP-NPJC-GEN	Low Order Negative Pointer Justification Count, Generated
• LP-PPJC-DET	Low-Order Positive Pointer Justification Count, Detected
• LP-PPJC-GEN	Low-Order Positive Pointer Justification Count, Generated
• LP-SEP	Low-Order Path Severely Errored Period
• LP-SEPI	Low-Order Path Severely Errored Period Intensity
• LP-SES	Low-Order Path Severely Errored
• LP-UAS	Low-Order Path Unavailable Seconds
• MS-PSC	Protection switch count
• MS-PSD	Protection switch duration
• NIOS	8B10B—Non Idle Ordered Sets
• NPJC-PDET	Negative Pointer Justification Count, Path Detected
• NPJC-PGEN	Negative Pointer Justification Count, Path Generated
• OPR-AVG	Average Receive Power in one tenth of a microwatt
• OPR-MAX	Maximum Receive Power in one tenth of a microwatt
• OPR-MIN	Minimum Receive Power in one tenth of a microwatt
• OPRN	Normalized Optical Receive Power for OC3-8
• OPRN-MAX	Maximum value for OPRN

• OPRN-MIN	Minimum value for OPRN
• OPT-AVG	Average Transmit Power in one tenth of a microwatt
• OPT-MAX	Maximum Transmit Power in one tenth of a microwatt
• OPT-MIN	Minimum Transmit Power in one tenth of a microwatt
• OPTN	Normalized value for Optical Power Transmitted for the OC3-8 card
• OPTN-MAX	Maximum value for OPTN
• OPTN-MIN	Minimum value for OPTN
• OPWR-AVG	Optical Power—Average Interval Value in one tenth of a dBm
• OPWR-MAX	Optical Power—Maximum Interval Value in one tenth of a dBm
• OPWR-MIN	Optical Power—Minimum Interval Value in one tenth of a dBm
• PPJC-PDET	Positive Pointer Justification Count, Path Detected
• PPJC-PGEN	Positive Pointer Justification Count, Path Generated
• PSC	Protection Switching Count
• PSC-R	Protection Switching Count—Ring
• PSC-S	Protection Switching Count—Span
• PSC-W	Protection Switching Count—Working
• PSD	Protection Switching Duration
• PSD-R	Protection Switching Duration—Ring
• PSD-S	Protection Switching Duration—Span
• PSD-W	Protection Switching Duration—Working
• SASCPP	Severely Errored Framing/AIS Second—CP-Bit Path
• SASP	Severely Errored Framing/AIS Seconds Path
• SEFS	Severely Errored Framing Seconds
• SEFSP	Severely Errored Framing Seconds—Path (DS3XM-12 DS1 PM count)
• SESCPP	Severely Errored Second—CP-Bit Path
• SESL	Severely Errored Second—Line
• SESNPFE	Severely Errored Second—Network Path (DS3XM-12 DS1 PM count)
• SESP	Severely Errored Second—Path
• SES-PM	OTN—Severely Errored Second—Path
• SESR-PM	OTN—Severely Errored Second Ratio—Path Monitor Point expressed as one tenth of a percentage
• SESR-SM	OTN—Severely Errored Second Ratio—Section Monitor Point expressed as one tenth of a percentage
• SESS	Severely Errored Second—Section
• SES-SM	OTN—Severely Errored Second—Section Monitor Point
• SESV	Severely Errored Second—VT Path
• UASCPP	Unavailable Second—CP-Bit Path
• UASL	Unavailable Second—Line
• UASNPFE	Unavailable Second—Network Path (DS3XM-12 DS1 PM count)
• UASP	Unavailable Second—Path

• UAS-PM	OTN—Unavailable Second—Path Monitor Point
• UAS-SM	OTN—Unavailable Second—Section Monitor Point
• UASV	Unavailable Second—VT Path
• UNC-WORDS	FEC—Uncorrectable Words
• VPC	Valid Packet Count
<MONLEV>	The discriminating level of the requested monitored parameter in the format of LEVEL-DIRN, where LEVEL is the measured value of the monitored parameter (MONVAL) and DIRN is the type of direction. A null value defaults to 1-UP. MONLEV is a string.
<LOCN>	Location associated with a particular command in reference to the entity identified by the AID. A null value defaults to NEND. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility
• NEND	Action occurs on the near end of the facility
<DIRECTION>	Type of direction. The parameter type is DIRECTION (transmit and receive directions).
• RCV	Receive direction only.
• TRMT	Transmit direction only.
<TMPER>	Accumulation time period for performance counters. If TMPER is 1-DAY, MONTM is not applicable (null), and is treated as null. A null value defaults to 15-MIN. The parameter type is TMPER, which is the accumulation time period for the performance management center.
• 1-DAY	Performance parameter accumulation interval length; every 24-hours. For SONET PM data, only one day of history data is available. For RMON managed PM data, seven days of history data are available.
• 1-HR	Performance parameter accumulation interval length; every 1 hour. This is only applicable to RMON managed PM data. There are 24 hours of history data available.
• 1-MIN	Performance parameter accumulation interval length; every 1 minute. This is only applicable to RMON managed PM data. There are 60 minutes of history available.
• 15-MIN	Performance parameter accumulation interval length; every 15 minutes. There are 32 15-MIN buckets of history data available for this accumulation interval length.
• RAW-DATA	Performance parameter accumulation interval length; starting from the last time the counters were cleared. This is only applicable to RMON managed PMs.

<DATE>	The beginning date of the PM or storage register period specified in TPER. The format of DATE is MM-DD, where MM (month of year) ranges from 1 to 12 and DD (day of month) ranges from 1 to 31. A null value defaults to current date.
<TIME>	The beginning time of day of the PM or storage register period specified in TPER. The format of TIME is HH-MM, where HH (hour of day) ranges from 0 to 23 and MM (minute of hour) ranges from 0 to 59. A null value defaults to current time.

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<AID>,[<AIDTYPE>]:<MONTYPE>,<MONVAL>,[<VLDTY>],[<LOCN>],
 [<DIRECTION>],[<TPER>],[<MONDAT>],[<MONTM>]"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"FAC-2-1,DS1-14:CVL,21,COMPL,NEND,RCV,15-MIN,04-11,12-45"
;
```

**Output Parameters**

<AID>	Access identifier from the <a href="#">"26.1 ALL" section on page 26-1</a> .
<AIDTYPE>	(Optional) Type of facility, link, or other addressable entity targeted by the message. The parameter type is MOD2B, which is the alarm type.
• 1GFC	1-Gigabit Fibre Channel payload
• 1GFICON	1-Gigabit fiber connectivity payload
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• 4GFC	4-Gigabit Fibre Channel payload
• 4GFICON	4-Gigabit fiber connectivity payload
• 40-GIGE	40-Gigabit ethernet
• 5GIB	5Gbps InfiniBand (IB_5G) payload
• 8GFC	8-Gigabit Fibre Channel payload
• BITS	BITS alarm
• CHGRP	Channel group
• CLNT	Client facility for MXP/TXP cards
• COM	Common alarm
• DS1	DS1 alarm
• DS3I	DS3I alarm
• DVBASI	Digital Video Broadband Asynchronous Serial Interface (DVBASI) payload
• E100	E100 alarm
• E1000	E1000 alarm

• EC1	EC1 alarm
• ENV	ENV alarm
• EQPT	EQPT alarm
• FSTE	Fast Ethernet Port alarm
• G1000	G1000 alarm
• GIGE	Gigabit Ethernet port alarm
• HDLC	Resilient Ethernet Protocol
• ISC1	InterSystem Channel, a protocol defined by IBM (ISC1) payload
• ISC3PEER1G	1 Gbps ISC3 Peer
• ISC3PEER2G	2 Gbps ISC3 Peer
• ISC3PEER2R	1 Gbps or 2 Gbps ISC3 peer used in transparent (2R) mode
• ISCCOMPAT	1 Gbps ISC1, ISC2, and ISC3 compatibility
• MSISC	MSISC
• OC3	OC3 alarm
• OC12	OC12 alarm
• OC48	OC48 alarm
• OC192	OC192 alarm
• OC768	OC768 alarm
• OCH	Optical channel
• OMS	Optical Multiplex Section
• OTS	Optical Transport Section
• OTU3	Optical Transport Unit Level 3
• POS	POS port alarm
• REP	Resilient Ethernet Protocol
• STS1	STS1 alarm
• STS3C	STS3c alarm
• STS6C	STS6c alarm
• STS9C	STS9c alarm
• STS18C	STS18c alarm
• STS12C	STS12c alarm
• STS24C	STS24c alarm
• STS36C	STS36c alarm
• STS48C	STS48c alarm
• STS192C	STS192c alarm
• SYNCN	SYNCN alarm
• T1	T1 alarm
• T3	T3 alarm
• TCC	TCC alarm
• VT1	VT1 alarm
• VT2	VT2 alarm
<MONTYPE>	Monitored type. The parameter type is ALL_MONTYPE, which is the monitoring type list.

• AISSP	Alarm Indication Signal Seconds—Path
• ALL	All possible values
• BBE-PM	OTN—Background Block Errors—Path Monitor Point
• BBE-SM	OTN—Background Block Errors—Section Monitor Point
• BBER-PM	OTN—Background Block Error Ratio—Path Monitor Point expressed as one tenth of a percentage
• BBER-SM	OTN—Background Block Error Ratio—Section Monitor Point expressed as one tenth of a percentage
• BIEC	FEC—Bit Errors Corrected
• BIT-EC	the number of bit errors corrected by the FEC algorithm
• CGV	8B10B—Code Group Violations
• CSSP	Controlled Slip Seconds—Path (DSXM-12 FDL/T1.403 PM count)
• CVCPP	Coding Violations—CP-Bit Path
• CVL	Coding Violations—Line
• CVP	Coding Violations—Path
• CVS	Coding Violations—Section
• CVV	Coding Violations—Section
• DCG	8B10B—Data Code Groups
• dot3StatsFCSErrors	A count of frames received on a particular interface that are an integral number of octets in length but do not pass the FCS check.
• dot3StatsFrameTooLong	A count of frames received on a particular interface that exceed the maximum permitted frame size.
• ESAP	Errored Second Type A-Path (DS3XM-12 DS1 PM count)
• ESBP	Errored Second Type B-Path (DS3XM-12 DS1 PM count)
• ESCPP	Errored Seconds—CP—Bit Path
• ESL	Errored Seconds—Line
• ESNPFE	Errored Second—Network Path (DS3XM-12 DS1 PM count)
• ESP	Errored Seconds—Path
• ES-PM	OTN—Errored Seconds—Path Monitor Point
• ES-SM	OTN—Errored Seconds—Section Monitor Point
• ESR	Errored Second—Ratio
• ESR-PM	Errored Seconds Ratio—Path monitor Point expressed as one tenth of a percentage
• ESR-SM	Errored Seconds Ratio—Section monitor Point expressed as one tenth of a percentage
• ESS	Errored Seconds—Section
• ESV	Errored Seconds—VT Path
• etherStatsBroadcastPkts	The total number of good packets received that were directed to a multicast address
• etherStatsCollisions	Number of transmit packets that are collisions
• etherStatsCRCAlignErrors	The total number of packets received that have a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets

• etherStatsDropEvents	Number of received frames dropped at the port level
• etherStatsFragments	The total number of packets received that were less than 64 octets
• etherStatsJabbers	The total number of packets received that are longer than 1518 octets
• etherStatsOctets	The total number of octets of data
• etherStatsOversizePkts	The total number of packets received that are longer than 1518 octets
• etherStatsPkts	The total number of packets (including bad packets, broadcast packets, and multicast packets) received
• etherStatsUndersizePkts	The total number of packets received that are less than 64 octets
• FCP	Failure Count—Line
• FC-PM	OTN—Failure Count—Path Monitor Point
• FC-SM	OTN—Failure Count—Section Monitor Point
• HP-AR	Availability Ratio
• HP-BBE	High-Order Path Background Block Error
• HP-BBER	High-Order Path Background Block Error Ratio
• HP-EB	High-Order Path Errored Block
• HP-ES	High-Order Path Errored Second
• HP-ESA	High-Order Path Errored Seconds—A
• HP-ESB	High-Order Path Errored Seconds—B
• HP-ESR	High-Order Path Errored Second Ratio
• HP-FC	High-Order Path Failure Count
• HP-NPJC-PDET	High-Order Path Negative Pointer Justification Count, Path Detected
• HP-NPJC-PGEN	High-Order Path, Negative Pointer Justification Count, Path Generated
• HP-OI	Outage Intensity
• HP-PJCDIFF	High-Order Path Pointer Justification Count Difference
• HP-PJCS-PDET	High-Order Path Pointer Justification Count seconds, Path Detected
• HP-PJCS-PGEN	High-Order Path Pointer Justification Count Seconds, Path Generated
• HP-PPJC-PDET	High-Order Path Positive Pointer Justification Count, Path Detected
• HP-PPJC-PGEN	High-Order Path, Positive Pointer Justification Count, Path Generated
• HP-SEPI	The number of SEP events in available time
• HP-SES	High-Order Path Severely Errored Seconds
• HP-SESR	High-Order Path Severely Errored Second Ratio
• HP-UAS	High-Order Path Unavailable Seconds
• ifInBroadcastPkts	Number of broadcast packets received since the last counter reset
• ifInDiscards	The number of inbound packets
• ifInErrorBytePktss	Receive Error Byte
• ifInErrors	The number of inbound packets (or transmission units) that contained errors

• ifInFramingErrorPkts	Receive Framing Error
• ifInJunkInterPkts	Receive Interpacket Junk
• ifInMulticastPkts	Number of multicast packets received since the last counter reset
• ifInOctets	Number of bytes transmitted since the last counter reset
• ifInUcastPkts	Number of unicast packets received since the last counter reset
• ifOutBroadcastPkts	Number of broadcast packets transmitted
• ifOutDiscards	The number of outbound packets
• ifOutErrors	The number of outbound packets (or transmission units) that could not be transmitted because of errors
• ifOutMulticastPkts	Number of multicast packets transmitted
• ifOutPayloadCrcErrors	Received payload CRC errors
• ifOutUcastPkts	Number of unicast packets transmitted
• IOS	8B10B—Idle Ordered Sets
• IPC	Invalid Packet Count
• LBCL-AVG	Average Laser Bias Current in microA
• LBCL-MAX	Maximum Laser Bias Current in microA
• LBCL-MIN	Minimum Laser Bias Current in microA
• LBCN	Normalized Laser Bias Current for OC3-8
• LBCN-HWT	Normalized Laser Bias Current—Higher Threshold
• LBCN-LWT	Normalized Laser Bias Current—Lower Threshold
• LOSSL	Loss of Signal Seconds—Line
• LP-BBE	Low-Order Path Background Block Error
• LP-BBER	Low-Order Path Background Block Error Ratio
• LP-EB	Low-Order Path Errored Block
• LP-ES	Low-Order Path Errored Second
• LP-ESA	Low-Order Path Errored Seconds-A
• LP-ESB	Low-Order Path Errored Seconds-B
• LP-ESR	Low-Order Path Errored Second Ratio
• LP-FC	Low-Order Path Failure Count
• LP-NPJC-DET	Low-Order Negative Pointer Justification Count, Detected
• LP-NPJC-GEN	Low Order Negative Pointer Justification Count, Generated
• LP-PPJC-DET	Low-Order Positive Pointer Justification Count, Detected
• LP-PPJC-GEN	Low-Order positive Pointer Justification Count, Generated
• LP-SEP	Low-Order Path Severely Errored Period
• LP-SEPI	Low-Order Path Severely Errored Period Intensity
• LP-SES	Low-Order Path Severely Errored
• LP-UAS	Low-Order Path Unavailable Seconds
• MS-PSC	Protection switch count
• MS-PSD	Protection switch duration
• NIOS	8B10B—Non Idle Ordered Sets
• NPJC-PDET	Negative Pointer Justification Count, Path Detected
• NPJC-PGEN	Negative Pointer Justification Count, Path Generated

• OPR-AVG	Average Receive Power in one tenth of a microwatt
• OPR-MAX	Maximum Receive Power in one tenth of a microwatt
• OPR-MIN	Minimum Receive Power in one tenth of a microwatt
• OPRN	Normalized Optical Receive Power for OC3-8
• OPRN-MAX	Maximum value for OPRN
• OPRN-MIN	Minimum value for OPRN
• OPT-AVG	Average Transmit Power in one tenth of a microwatt
• OPT-MAX	Maximum Transmit Power in one tenth of a microwatt
• OPT-MIN	Minimum Transmit Power in one tenth of a microwatt
• OPTN	Normalized value for Optical Power Transmitted for the OC3-8 card
• OPTN-MAX	Maximum value for OPTN
• OPTN-MIN	Minimum value for OPTN
• OPWR-AVG	Optical Power—Average Interval Value in one tenth of a dBm
• OPWR-MAX	Optical Power—Maximum Interval Value in one tenth of a dBm
• OPWR-MIN	Optical Power—Minimum Interval Value in one tenth of a dBm
• PPJC-PDET	Positive Pointer Justification Count, Path Detected
• PPJC-PGEN	Positive Pointer Justification Count, Path Generated
• PSC	Protection Switching Count
• PSC-R	Protection Switching Count—Ring
• PSC-S	Protection Switching Count—Span
• PSC-W	Protection Switching Count—Working
• PSD	Protection Switching Duration
• PSD-R	Protection Switching Duration—Ring
• PSD-S	Protection Switching Duration—Span
• PSD-W	Protection Switching Duration—Working
• SASCPP	Severely Errored Framing/AIS Second—CP-Bit Path
• SASP	Severely Errored Framing/AIS Seconds Path
• SEFS	Severely Errored Framing Seconds
• SEFSP	Severely Errored Framing Seconds—Path (DS3XM-12 DS1 PM count)
• SESCOPP	Severely Errored Second—CP-Bit Path
• SESL	Severely Errored Second—Line
• SESNPFE	Severely Errored Second—Network Path (DS3XM-12 DS1 PM count)
• SESP	Severely Errored Second—Path
• SES-PM	OTN—Severely Errored Second—Path
• SESR-PM	OTN—Severely Errored Second Ratio—Path Monitor Point expressed as one tenth of a percentage
• SESR-SM	OTN—Severely Errored Second Ratio—Section Monitor Point expressed as one tenth of a percentage
• SESS	Severely Errored Second—Section
• SES-SM	OTN—Severely Errored Second—Section Monitor Point

• SESV	Severely Errored Second—VT Path
• UASCPP	Unavailable Second—CP-Bit Path
• UASL	Unavailable Second—Line
• UASNPFE	Unavailable Second—Network Path (DS3XM-12 DS1 PM count)
• UASP	Unavailable Second—Path
• UAS-PM	OTN—Unavailable Second—Path Monitor Point
• UAS-SM	OTN—Unavailable Second—Section Monitor Point
• UASV	Unavailable Second—VT Path
• UNC-WORDS	FEC—Uncorrectable Words
• VPC	Valid Packet Count
<MONVAL>	The value to which the register identified by MONTYPE is to be initialized to or the measured value of a monitored parameter. The value is in the form of numeric counts or rates. MOVAL is a string.
<VLDTY>	(Optional) Indicates whether the information for the specified time period was accumulated over the entire time period or some portion thereof. Validity indicator for the reported PM data. The parameter type is VALIDITY, which is the response validity.
• COMPL	Complete response
• PRTL	Partial response
<LOCN>	(Optional) Location associated with a particular command. The parameter type is LOCATION, which is the location where the action is to take place
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<DIRECTION>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
• BTH	Both transmit and receive directions
• RCV	Receive direction only
• TRMT	Transmit direction only
<TMPER>	(Optional) Accumulation time period for performance counters. The parameter type is TMPER, which is the accumulation time period for the performance management center.
• 1-DAY	Performance parameter accumulation interval length; every 24-hours. For SONET PM data, only one day of history data is available. For RMON managed PM data, seven days of history data are available.
• 1-HR	Performance parameter accumulation interval length; every 1 hour. This is only applicable to RMON managed PM data. There are 24 hours of history data available.
• 1-MIN	Performance parameter accumulation interval length; every 1 minute. This is only applicable to RMON managed PM data. There are 60 minutes of history available.
• 15-MIN	Performance parameter accumulation interval length; every 15 minutes. There are 32 15-MIN buckets of history data available for this accumulation interval length.

• RAW-DATA	Performance parameter accumulation interval length; starting from the last time the counters were cleared. This is only applicable to RMON managed PMs.
<MONDAT>	(Optional) The beginning date of the PM or storage register period specified in TMPER. The format of MONDAT is MM-DD, where MM (month of year) ranges from 1 to 12 and DD (day of month) ranges from 1 to 31. MONDAT is a string.
<MONTM>	(Optional) The beginning time of day of the PM or storage register period specified in TMPER. The format of MONTM is HH-MM, where HH (hour of day) ranges from 0 to 23 and MM (minute of hour) ranges from 0 to 59. MONTM is a string.

## 21.107 RTRV-PM-ALL

(Cisco ONS 15454) The Retrieve Performance Monitoring All (RTRV-PM-ALL) command retrieves the values of all the performance monitoring parameters for the specified AID. When the ALL AID is used, the response will include the PM parameters for all cards and ports in the chassis.

### Usage Guidelines

- The format of MONLEV is LEV-DIRN.
- The format of MONDAT is MM-DD, where MM (month of the year) ranges from 1 to 12 and DD (day of the month) ranges from 1 to 31.
- The format for MONTM is HH-MM, where HH (hour of the day) ranges from 0 to 23 and MM (minute of the hour) ranges from 0 to 59.
- If the TMPER is 1-DAY, MONTM is not applicable (null), and is treated as null if MONTM is not null.
- A null value for MONLEV defaults to 1-UP.
- A null value for MONDAT defaults to the current date (MM-DD).
- A null value for MONTM defaults to the current time (HH-MM).
- Unless otherwise stated, DS-1 cards are the only cards that support both the RCV and TRMT directions. All other cards only support the RCV direction.
- After BLSR switching, the working path is switched out, the traffic goes through the protection path, and the IPPM can be retrieved from the protection STS path.
- If there is a STS PCA on the protection path, during the BLSR switching, the PCA path is preemptive; sending this command on the protection path after a BLSR switch, the command returns the PMs from the protection path, not from the PCA path.
- Some MOD2 entities; for example, OCH, CLNT, and Optical (OCn), support negative MONTYPE values. By default, this command defaults to 0-UP (return MONTYPES where the MONVAL is 0 or higher). To retrieve the negative values, you must issue 0-DN in the MONLEV field. The rules are as follows:
  - Client port only-Laser and SONET PMs are applicable and will appear. If the card payload is in SONET mode, then SONET PMs will appear, provided the MONLEV criteria is met.

- Trunk port Laser PMs are always available. Laser PMs are only for near end. If ITU-T G.709 is enabled, then the OTN PMs will appear. If ITU-T G.709 and FEC are enabled, then the FEC PMs will appear. If the card payload is in SONET mode, then SONET PMs will appear. All PM MONVALUES should pass the MONLEV filter criteria.
- For DWDM cards, the MONLEV filter criteria will not support a floating point. It will be returned and interpreted as an integer.
- If the DS-1 mode of the DS3XM-12 card is FDL, the DS-1 path can retrieve FDL/T.403 FEND PM counts up to 32 15-minute intervals in the RTRV-PM-DS1 command.
- BTH is not supported for the direction. A null value for direction should take care of TRMT and RCV.
- RTRV-PM-ALL command can also be used to retrieve the RMON managed PM data.

**Category**

Performance

**Security**

Retrieve

**Input Format**

RTRV-PM-ALL:[<TID>]:<AID>:<CTAG>::[<MONTYPE>],[<MONLEV>],[<LOCN>],[<DIRECTION>],[<TMPER>],[<DATE>],[<TIME>];

**Input Example**

RTRV-PM-ALL:TID:FAC-2-1:123::CVL,10-UP,NEND,RCV,15-MIN,04-11,12-45;

**Input Parameters**

<AID>	The DS1 AID is used access DS1 frame layer of the DS3XM. Format is DS1-[SLOT]-[DS3PORT]-[DS1PORT].
• 1GFC	1-Gigabit Fibre Channel payload
• 1GFICON	1-Gigabit fiber connectivity payload
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• CLNT	Client facility
• DS1	DS1 line of a DS3XM card
• DS3I	DS3I line
• DV6000	DV6000
• EC1	EC1 facility
• ESCON	ESCON
• ETRCLO	ETR_CLO
• FSTE	FSTE facility
• G1000	G1000 facility
• GFPOS	GFP over POS. Virtual ports partitioned using GFP's multiplexing capability.
• GIGE	Gigabit Ethernet

• HDTV	HDTV
• ISC3PEER1G	1 Gbps ISC3 Peer
• ISC3PEER2G	2 Gbps ISC3 Peer
• ISC3PEER2R	1 Gbps or 2 Gbps ISC3 peer used in transparent (2R) mode
• ISCCOMPAT	1 Gbps ISC1, ISC2, and ISC3 compatibility
• OC3	OC3 facility
• OC12	OC12 facility
• OC48	OC48 facility
• OC192	OC192 facility
• OCH	Optical channel
• OCHCC	OCH client connection
• OCHNC	OCH network connection
• OCHTERM	OCH termination
• OMS	Optical Multiplex Section
• OTS	Optical Transport Section
• POS	POS port
• STS1	STS1 path
• STS3C	STS3c path
• STS6C	STS6c path
• STS9C	STS9c path
• STS18C	STS18c path
• STS12C	STS12c path
• STS24C	STS24c path
• STS36C	STS36c path
• STS48C	STS48c path
• STS192C	STS192c path
• T1	T1/DS1 facility/line
• T3	T3/DS1 facility/line
• VT1	VT1 path
• VT2	VT2 path
<MONTYPE>	Monitoring type. A null value defaults to all montypes applicable to the modifier. The parameter type is ALL_MONTYPE, which is the monitoring type list.
• AISSP	Alarm Indication Signal Seconds—Path
• ALL	All possible values
• BBE-PM	OTN—Background Block Errors—Path Monitor Point
• BBE-SM	OTN—Background Block Errors—Section Monitor Point
• BBER-PM	OTN—Background Block Error Ratio—Path Monitor Point expressed as one tenth of a percentage
• BBER-SM	OTN—Background Block Error Ratio—Section Monitor Point expressed as one tenth of a percentage
• BIEC	FEC—Bit Errors Corrected

• BIT-EC	the number of bit errors corrected by the FEC algorithm
• CGV	8B10B—Code Group Violations
• CSSP	Controlled Slip Seconds—Path (DS3XM-12 FDL/T1.403 PM count)
• CVCPP	Coding Violations—CP-Bit Path
• CVL	Coding Violations—Line
• CVP	Coding Violations—Path
• CVS	Coding Violations—Section
• CVV	Coding Violations—Section
• DCG	8B10B—Data Code Groups
• ESAP	Errored Second Type A-Path (DS3XM-12 DS1 PM count)
• ESBP	Errored Second Type B-Path (DS3XM-12 DS1 PM count)
• ESCPP	Errored Seconds—CP—Bit Path
• ESL	Errored Seconds—Line
• ESNPFE	Errored Second—Network Path (DS3XM-12 DS1 PM count)
• ESP	Errored Seconds—Path
• ES-PM	OTN—Errored Seconds—Path Monitor Point
• ES-SM	OTN—Errored Seconds—Section Monitor Point
• ESR	Errored Second—Ratio
• ESR-PM	Errored Seconds Ratio—Path monitor point expressed as one tenth of a percentage
• ESR-SM	Errored Seconds Ratio—Section monitor point expressed as one tenth of a percentage
• ESS	Errored Seconds—Section
• ESV	Errored Seconds—VT Path
• etherStatsBroadcastPkts	The total number of good packets received that were directed to a multicast address
• etherStatsCollisions	Number of transmit packets that are collisions
• etherStatsCRCAlignErrors	The total number of packets received that have a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets
• etherStatsDropEvents	Number of received frames dropped at the port level
• etherStatsFragments	The total number of packets received that were less than 64 octets
• etherStatsJabbers	The total number of packets received that are longer than 1518 octets
• etherStatsOctets	The total number of octets of data
• etherStatsOversizePkts	The total number of packets received that are longer than 1518 octets
• etherStatsPkts	The total number of packets (including bad packets, broadcast packets, and multicast packets) received
• etherStatsUndersizePkts	The total number of packets received that are less than 64 octets
• FCP	Failure Count—Line
• FC-PM	OTN—Failure Count—Path Monitor Point
• FC-SM	OTN—Failure Count—Section Monitor Point
• HP-AR	Availability Ratio
• HP-BBE	High-Order Path Background Block Error

• HP-BBER	High-Order Path Background Block Error Ratio
• HP-EB	High-Order Path Errored Block
• HP-ES	High-Order Path Errored Second
• HP-ESA	High-Order Path Errored Seconds—A
• HP-ESB	High-Order Path Errored Seconds—B
• HP-ESR	High-Order Path Errored Second Ratio
• HP-FC	High-Order Path Failure Count
• HP-NPJC-PDET	High-Order Path Negative Pointer Justification Count, Path Detected
• HP-NPJC-PGEN	High-Order Path Negative Pointer Justification Count, Path Generated
• HP-OI	High-Order Path, Outage Intensity
• HP-PJCDIFF	High-Order Path Pointer Justification Count Difference
• HP-PJCS-PDET	High-Order Path Pointer Justification Count Seconds, Path Detected
• HP-PJCS-PGEN	High-Order Path Pointer Justification Count Seconds, Path Generated
• HP-PPJC-PDET	High-Order Path Positive Pointer Justification Count, Path Detected
• HP-PPJC-PGEN	High-Order Path, Positive Pointer Justification Count, Path Generated
• HP-SEPI	The number of SEP events in available time
• HP-SES	High-Order Path Severely Errored Seconds
• HP-SESR	High-Order Path Severely Errored Second Ratio
• HP-UAS	High-Order Path Unavailable Seconds
• ifInBroadcastPkts	Number of broadcast packets received since the last counter reset
• ifInDiscards	The number of inbound packets
• ifInErrorBytePktss	Receive Error Byte
• ifInErrors	The number of inbound packets (or transmission units) that contained errors
• ifInFramingErrorPkts	Receive Framing Error
• ifInJunkInterPkts	Receive Interpacket Junk
• ifInMulticastPkts	Number of multicast packets received since the last counter reset
• ifInOctets	Number of bytes transmitted since the last counter reset
• ifInUcastPkts	Number of unicast packets received since the last counter reset
• ifOutBroadcastPkts	Number of broadcast packets transmitted
• ifOutDiscards	The number of outbound packets
• ifOutErrors	The number of outbound packets (or transmission units) that could not be transmitted because of errors
• ifOutMulticastPkts	Number of multicast packets transmitted
• ifOutPayloadCrcErrors	Received payload CRC errors
• ifOutUcastPkts	Number of unicast packets transmitted
• IOS	8B10B—Idle Ordered Sets
• IPC	Invalid Packet Count
• LBCL-AVG	Average Laser Bias Current in microA
• LBCL-MAX	Maximum Laser Bias Current in microA
• LBCL-MIN	Minimum Laser Bias Current in microA
• LBCN	Normalized Laser Bias Current for OC3-8

• LBCN-HWT	Normalized Laser Bias Current—Higher Threshold
• LBCN-LWT	Normalized Laser Bias Current—Lower Threshold
• LOSSL	Loss of Signal Seconds—Line
• LP-BBE	Low-Order Path Background Block Error
• LP-BBER	Low-Order Path Background Block Error Ratio
• LP-EB	Low-Order Path Errored Block
• LP-ES	Low-Order Path Errored Second
• LP-ESA	Low-Order Path Errored Seconds-A
• LP-ESB	Low-Order Path Errored Seconds-B
• LP-ESR	Low-Order Path Errored Second Ratio
• LP-FC	Low-Order Path Failure Count
• LP-NPJC-DET	Low-Order Negative Pointer Justification Count, Detected
• LP-NPJC-GEN	Low Order Negative Pointer Justification Count, Generated
• LP-PPJC-DET	Low-Order Positive Pointer Justification Count, Detected
• LP-PPJC-GEN	Low-Order positive Pointer Justification Count, Generated
• LP-SEP	Low-Order Path Severely Errored Period
• LP-SEPI	Low-Order Path Severely Errored Period Intensity
• LP-SES	Low-Order Path Severely Errored
• LP-UAS	Low-Order Path Unavailable Seconds
• MS-PSC	Protection switch count
• MS-PSD	Protection switch duration
• NIOS	8B10B—Non Idle Ordered Sets
• NPJC-PDET	Negative Pointer Justification Count, Path Detected
• NPJC-PGEN	Negative Pointer Justification Count, Path Generated
• OPR-AVG	Average Receive Power in one tenth of a microwatt
• OPR-MAX	Maximum Receive Power in one tenth of a microwatt
• OPR-MIN	Minimum Receive Power in one tenth of a microwatt
• OPRN	Normalized Optical Receive Power for OC3-8
• OPRN-MAX	Maximum value for OPRN
• OPRN-MIN	Minimum value for OPRN
• OPT-AVG	Average Transmit Power in one tenth of a microwatt
• OPT-MAX	Maximum Transmit Power in one tenth of a microwatt
• OPT-MIN	Minimum Transmit Power in one tenth of a microwatt
• OPTN	Normalized value for Optical Power Transmitted for the OC3-8 card
• OPTN-MAX	Maximum value for OPTN
• OPTN-MIN	Minimum value for OPTN
• OPWR-AVG	Optical Power—Average Interval Value in one tenth of a dBm
• OPWR-MAX	Optical Power—Maximum Interval Value in one tenth of a dBm
• OPWR-MIN	Optical Power—Minimum Interval Value in one tenth of a dBm
• PPJC-PDET	Positive Pointer Justification Count, Path Detected
• PPJC-PGEN	Positive Pointer Justification Count, Path Generated

• PSC	Protection Switching Count
• PSC-R	Protection Switching Count—Ring
• PSC-S	Protection Switching Count—Span
• PSC-W	Protection Switching Count—Working
• PSD	Protection Switching Duration
• PSD-R	Protection Switching Duration—Ring
• PSD-S	Protection Switching Duration—Span
• PSD-W	Protection Switching Duration—Working
• SASCPP	Severely Errored Framing/AIS Second—CP-Bit Path
• SASP	Severely Errored Framing/AIS Seconds Path
• SEFS	Severely Errored Framing Seconds
• SEFSP	Severely Errored Framing Seconds—Path (DS3XM-12 DS1 PM count)
• SESCPP	Severely Errored Second—CP-Bit Path
• SESL	Severely Errored Second—Line
• SESNPFE	Severely Errored Second—Network Path (DS3XM-12 DS1 PM count)
• SESP	Severely Errored Second—Path
• SES-PM	OTN—Severely Errored Second—Path
• SESR-PM	OTN—Severely Errored Second Ratio—Path Monitor Point expressed as one tenth of a percentage
• SESR-SM	OTN—Severely Errored Second Ratio—Section Monitor Point expressed as one tenth of a percentage
• SESS	Severely Errored Second—Section
• SES-SM	OTN—Severely Errored Second—Section Monitor Point
• SESV	Severely Errored Second—VT Path
• UASCPP	Unavailable Second—CP-Bit Path
• UASL	Unavailable Second—Line
• UASNPFE	Unavailable Second—Network Path (DS3XM-12 DS1 PM count)
• UASP	Unavailable Second—Path
• UAS-PM	OTN—Unavailable Second—Path Monitor Point
• UAS-SM	OTN—Unavailable Second—Section Monitor Point
• UASV	Unavailable Second—VT Path
• UNC-WORDS	FEC—Uncorrectable Words
• VPC	Valid Packet Count
<MONLEV>	The discriminating level of the requested monitored parameter in the format of LEVEL-DIRN, where LEVEL is the measured value of the monitored parameter (MONVAL) and DIRN is the type of direction. A null value defaults to 1-UP. MONLEV is a string.

<LOCN>	Location associated with a particular command in reference to the entity identified by the AID. A null value defaults to NEND. The parameter type is LOCATION, which is the location where the action is to take place.
<ul style="list-style-type: none"> <li>• FEND</li> <li>• NEND</li> </ul>	<p>Action occurs on the far end of the facility</p> <p>Action occurs on the near end of the facility</p>
<DIRECTION>	Type of direction. Must not be null. The parameter type is DIRECTION (transmit and receive directions).
<ul style="list-style-type: none"> <li>• BTH</li> <li>• RCV</li> <li>• TRMT</li> </ul>	<p>Both transmit and receive directions.</p> <p>Receive direction only.</p> <p>Transmit direction only.</p>
<TMPER>	Accumulation time period for performance counters. If TMPER is 1-DAY, MONTM is not applicable (null), and is treated as null. A null value defaults to 15-MIN. The parameter type is TMPER, which is the accumulation time period for the performance management center.
<ul style="list-style-type: none"> <li>• 1-DAY</li> <li>• 1-HR</li> <li>• 1-MIN</li> <li>• 15-MIN</li> <li>• RAW-DATA</li> </ul>	<p>Performance parameter accumulation interval length; every 24-hours. For SONET PM data, only one day of history data is available. For RMON managed PM data, seven days of history data are available.</p> <p>Performance parameter accumulation interval length; every 1 hour. This is only applicable to RMON managed PM data. There are 24 hours of history data available.</p> <p>Performance parameter accumulation interval length; every 1 minute. This is only applicable to RMON managed PM data. There are 60 minutes of history available.</p> <p>Performance parameter accumulation interval length; every 15 minutes. There are 32 15-MIN buckets of history data available for this accumulation interval length.</p> <p>Performance parameter accumulation interval length; starting from the last time the counters were cleared. This is only applicable to RMON managed PMs.</p>
<DATE>	The beginning date of the PM or storage register period specified in TMPER. The format of DATE is MM-DD, where MM (month of year) ranges from 1 to 12 and DD (day of month) ranges from 1 to 31. A null value defaults to current date.
<TIME>	The beginning time of day of the PM or storage register period specified in TMPER. The format of TIME is HH-MM, where HH (hour of day) ranges from 0 to 23 and MM (minute of hour) ranges from 0 to 59. A null value defaults to current time.

**Output Format**

```

SID DATE TIME
M CTAG COMPLD
  "<AID>,[<AIDTYPE>]:<MONTYPE>,<MONVAL>,[<VLDTY>],[<LOCN>],[<DIRECTION>],
  [<TMPER>],[<MONDAT>],[<MONTM>]"
;

```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
  "FAC-2-1,DS1-14:CVL,21,COMPL,NEND,RCV,15-MIN,04-11,12-45"
;
```

**Output Parameters**

<AID>	The DS1 AID is used access DS1 frame layer of the DS3XM. Format is DS1-[SLOT]-[DS3PORT]-[DS1PORT].
<AIDTYPE>	(Optional) Type of facility, link, or other addressable entity targeted by the message. The parameter type is MOD2B, which is the alarm type.
• 1GFC	1-Gigabit Fibre Channel payload
• 1GFICON	1-Gigabit fiber connectivity payload
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• 4GFC	4-Gigabit Fibre Channel payload
• 4GFICON	4-Gigabit fiber connectivity payload
• BITS	BITS alarm
• CLNT	Client facility for MXP/TXP cards
• COM	Common alarm
• DS1	DS1 alarm
• DS3I	DS3I alarm
• E100	E100 alarm
• E1000	E1000 alarm
• EC1	EC1 alarm
• ENV	ENV alarm
• EQPT	EQPT alarm
• FSTE	Fast Ethernet Port alarm
• G1000	G1000 alarm
• GIGE	Gigabit Ethernet port alarm
• ISC3PEER1G	1-Gbps ISC3 Peer
• ISC3PEER2G	2 Gbps ISC3 Peer
• ISC3PEER2R	1 Gbps or 2 Gbps ISC3 peer used in transparent (2R) mode
• ISCCOMPAT	1 Gbps ISC1, ISC2, and ISC3 compatibility
• OC3	OC3 alarm
• OC12	OC12 alarm
• OC48	OC48 alarm
• OC192	OC192 alarm
• OCH	Optical channel
• OMS	Optical Multiplex Section
• OTS	Optical Transport Section
• POS	POS port alarm
• STS1	STS1 alarm

• STS3C	STS3c alarm
• STS6C	STS6c alarm
• STS9C	STS9c alarm
• STS18C	STS18c alarm
• STS12C	STS12c alarm
• STS24C	STS24c alarm
• STS36C	STS36c alarm
• STS48C	STS48c alarm
• STS192C	STS192c alarm
• SYNCN	SYNCN alarm
• T1	T1 alarm
• T3	T3 alarm
• TCC	TCC alarm
• VT1	VT1 alarm
• VT2	VT2 alarm
<MONTYPE>	Monitored type. The parameter type is ALL_MONTYPE, which is the monitoring type list.
• AISSP	Alarm Indication Signal Seconds—Path
• ALL	All possible values
• BBE-PM	OTN—Background Block Errors—Path Monitor Point
• BBE-SM	OTN—Background Block Errors—Section Monitor Point
• BBER-PM	OTN—Background Block Error Ratio—Path Monitor Point expressed as one tenth of a percentage
• BBER-SM	OTN—Background Block Error Ratio—Section Monitor Point expressed as one tenth of a percentage
• BIEC	FEC—Bit Errors Corrected
• BIT-EC	the number of bit errors corrected by the FEC algorithm
• CGV	8B10B—Code Group Violations
• CSSP	Controlled Slip Seconds—Path (DS3XM-12 FDL/T1.403 PM count)
• CVCPP	Coding Violations—CP-Bit Path
• CVL	Coding Violations—Line
• CVP	Coding Violations—Path
• CVS	Coding Violations—Section
• CVV	Coding Violations—Section
• DCG	8B10B—Data Code Groups
• ESAP	Errored Second Type A-Path (DS3XM-12 DS1 PM count)
• ESBP	Errored Second Type B-Path (DS3XM-12 DS1 PM count)
• ESCPP	Errored Seconds—CP—Bit Path
• ESL	Errored Seconds—Line
• ESNPFE	Errored Second—Network Path (DS3XM-12 DS1 PM count)
• ESP	Errored Seconds—Path
• ES-PM	OTN—Errored Seconds—Path Monitor Point

• ES-SM	OTN—Errored Seconds—Section Monitor Point
• ESR	Errored Second—Ratio
• ESR-PM	Errored Seconds Ratio—Path monitor Point expressed as one tenth of a percentage
• ESR-SM	Errored Seconds Ratio—Section monitor Point expressed as one tenth of a percentage
• ESS	Errored Seconds—Section
• ESV	Errored Seconds—VT Path
• etherStatsBroadcastPkts	The total number of good packets received that were directed to a multicast address
• etherStatsCollisions	Number of transmit packets that are collisions
• etherStatsCRCAlignErrors	The total number of packets received that have a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets
• etherStatsDropEvents	Number of received frames dropped at the port level
• etherStatsFragments	The total number of packets received that were less than 64 octets
• etherStatsJabbers	The total number of packets received that are longer than 1518 octets
• etherStatsOctets	The total number of octets of data
• etherStatsOversizePkts	The total number of packets received that are longer than 1518 octets
• etherStatsPkts	The total number of packets (including bad packets, broadcast packets, and multicast packets) received
• etherStatsUndersizePkts	The total number of packets received that are less than 64 octets
• FCP	Failure Count—Line
• FC-PM	OTN—Failure Count—Path Monitor Point
• FC-SM	OTN—Failure Count—Section Monitor Point
• HP-AR	Availability Ratio
• HP-BBE	High-Order Path Background Block Error
• HP-BBER	High-Order Path Background Block Error Ratio
• HP-EB	High-Order Path Errored Block
• HP-ES	High-Order Path Errored Second
• HP-ESA	High-Order Path Errored Seconds—A
• HP-ESB	High-Order Path Errored Seconds—B
• HP-ESR	High-Order Path Errored Second Ratio
• HP-FC	High-Order Path Failure Count
• HP-NPJC-PDET	High-Order Path Negative Pointer Justification Count, Path Detected
• HP-NPJC-PGEN	High Order Path, Negative Pointer Justification Count, Path Generated
• HP-OI	Outage Intensity
• HP-PJCDIFF	High-Order Path Pointer Justification Count Difference
• HP-PJCS-PDET	High-Order Path Pointer Justification Count Seconds, Path Detected

• HP-PJCS-PGEN	High-Order Path Pointer Justification Count Seconds, Path Generated
• HP-PPJC-PDET	High-Order Path Positive Pointer Justification Count, Path Detected
• HP-PPJC-PGEN	High-Order Path, Positive Pointer Justification Count, Path Generated
• HP-SEPI	The number of SEP events in available time
• HP-SES	High-Order Path Severely Errored Seconds
• HP-SESR	High-Order Path Severely Errored Second Ratio
• HP-UAS	High-Order Path Unavailable Seconds
• ifInBroadcastPkts	Number of broadcast packets received since the last counter reset
• ifInDiscards	The number of inbound packets
• ifInErrorBytePktss	Receive Error Byte
• ifInErrors	The number of inbound packets (or transmission units) that contained errors
• ifInFramingErrorPkts	Receive Framing Error
• ifInJunkInterPkts	Receive Interpacket Junk
• ifInMulticastPkts	Number of multicast packets received since the last counter reset
• ifInOctets	Number of bytes transmitted since the last counter reset
• ifInUcastPkts	Number of unicast packets received since the last counter reset
• ifOutBroadcastPkts	Number of broadcast packets transmitted
• ifOutDiscards	The number of outbound packets
• ifOutErrors	The number of outbound packets (or transmission units) that could not be transmitted because of errors
• ifOutMulticastPkts	Number of multicast packets transmitted
• ifOutPayloadCrcErrors	Received payload CRC errors
• ifOutUcastPkts	Number of unicast packets transmitted
• IOS	8B10B—Idle Ordered Sets
• IPC	Invalid Packet Count
• LBCL-AVG	Average Laser Bias Current in microA
• LBCL-MAX	Maximum Laser Bias Current in microA
• LBCL-MIN	Minimum Laser Bias Current in microA
• LBCN	Normalized Laser Bias Current for OC3-8
• LBCN-HWT	Normalized Laser Bias Current—Higher Threshold
• LBCN-LWT	Normalized Laser Bias Current—Lower Threshold
• LOSSL	Loss of Signal Seconds—Line
• LP-BBE	Low-Order Path Background Block Error
• LP-BBER	Low-Order Path Background Block Error Ratio
• LP-EB	Low-Order Path Errored Block
• LP-ES	Low-Order Path Errored Second
• LP-ESA	Low-Order Path Errored Seconds-A
• LP-ESB	Low-Order Path Errored Seconds-B
• LP-ESR	Low-Order Path Errored Second Ratio

• LP-FC	Low-Order Path Failure Count
• LP-NPJC-DET	Low-Order Negative Pointer Justification Count, Detected
• LP-NPJC-GEN	Low Order Negative Pointer Justification Count, Generated
• LP-PPJC-DET	Low-Order Positive Pointer Justification Count, Detected
• LP-PPJC-GEN	Low-Order positive Pointer Justification Count, Generated
• LP-SEP	Low-Order Path Severely Errored Period
• LP-SEPI	Low-Order Path Severely Errored Period Intensity
• LP-SES	Low-Order Path Severely Errored
• LP-UAS	Low-Order Path Unavailable Seconds
• MS-PSC	Protection switch count
• MS-PSD	Protection switch duration
• NIOS	8B10B—Non Idle Ordered Sets
• NPJC-PDET	Negative Pointer Justification Count, Path Detected
• NPJC-PGEN	Negative Pointer Justification Count, Path Generated
• OPR-AVG	Average Receive Power in one tenth of a microwatt
• OPR-MAX	Maximum Receive Power in one tenth of a microwatt
• OPR-MIN	Minimum Receive Power in one tenth of a microwatt
• OPRN	Normalized Optical Receive Power for OC3-8
• OPRN-MAX	Maximum value for OPRN
• OPRN-MIN	Minimum value for OPRN
• OPT-AVG	Average Transmit Power in one tenth of a microwatt
• OPT-MAX	Maximum Transmit Power in one tenth of a microwatt
• OPT-MIN	Minimum Transmit Power in one tenth of a microwatt
• OPTN	Normalized value for Optical Power Transmitted for the OC3-8 card
• OPTN-MAX	Maximum value for OPTN
• OPTN-MIN	Minimum value for OPTN
• OPWR-AVG	Optical Power—Average Interval Value in one tenth of a dBm
• OPWR-MAX	Optical Power—Maximum Interval Value in one tenth of a dBm
• OPWR-MIN	Optical Power—Minimum Interval Value in one tenth of a dBm
• PPJC-PDET	Positive Pointer Justification Count, Path Detected
• PPJC-PGEN	Positive Pointer Justification Count, Path Generated
• PSC	Protection Switching Count
• PSC-R	Protection Switching Count—Ring
• PSC-S	Protection Switching Count—Span
• PSC-W	Protection Switching Count—Working
• PSD	Protection Switching Duration
• PSD-R	Protection Switching Duration—Ring
• PSD-S	Protection Switching Duration—Span
• PSD-W	Protection Switching Duration—Working
• SASCPP	Severely Errored Framing/AIS Second—CP-Bit Path
• SASP	Severely Errored Framing/AIS Seconds Path

• SEFS	Severely Errored Framing Seconds
• SEFSP	Severely Errored Framing Seconds—Path (DS3XM-12 DS1 PM count)
• SESCPP	Severely Errored Second—CP-Bit Path
• SESL	Severely Errored Second—Line
• SESNPFE	Severely Errored Second—Network Path (DS3XM-12 DS1 PM count)
• SESP	Severely Errored Second—Path
• SES-PM	OTN—Severely Errored Second—Path
• SESR-PM	OTN—Severely Errored Second Ratio—Path Monitor Point expressed as one tenth of a percentage
• SESR-SM	OTN—Severely Errored Second Ratio—Section Monitor Point expressed as one tenth of a percentage
• SESS	Severely Errored Second—Section
• SES-SM	OTN—Severely Errored Second—Section Monitor Point
• SESV	Severely Errored Second—VT Path
• UASCPP	Unavailable Second—CP-Bit Path
• UASL	Unavailable Second—Line
• UASNPFE	Unavailable Second—Network Path (DS3XM-12 DS1 PM count)
• UASP	Unavailable Second—Path
• UAS-PM	OTN—Unavailable Second—Path Monitor Point
• UAS-SM	OTN—Unavailable Second—Section Monitor Point
• UASV	Unavailable Second—VT Path
• UNC-WORDS	FEC—Uncorrectable Words
• VPC	Valid Packet Count
<MONVAL>	The value to which the register identified by MONTYPE is to be initialized to or the measured value of a monitored parameter. The value is in the form of numeric counts or rates. MONVAL is a string.
<VLDTY>	(Optional) Indicates whether the information for the specified time period was accumulated over the entire time period or some portion thereof. Validity indicator for the reported PM data. The parameter type is VALIDITY, which is the response validity.
• COMPL	Complete response
• PRTL	Partial response
<LOCN>	(Optional) Location associated with a particular command. The parameter type is LOCATION, which is the location where the action is to take place
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<DIRECTION>	The PM count retrieval direction. The parameter type is DIRECTION, which is the transmit and receive directions.
• BTH	Both transmit and receive directions
• RCV	Receive direction only
• TRMT	Transmit direction only

<TMPER>	(Optional) Accumulation time period for performance counters. The parameter type is TMPER, which is the accumulation time period for the performance management center.
• 1-DAY	Performance parameter accumulation interval length; every 24-hours. For SONET PM data, only one day of history data is available. For RMON managed PM data, seven days of history data are available.
• 1-HR	Performance parameter accumulation interval length; every 1 hour. This is only applicable to RMON managed PM data. There are 24 hours of history data available.
• 1-MIN	Performance parameter accumulation interval length; every 1 minute. This is only applicable to RMON managed PM data. There are 60 minutes of history available.
• 15-MIN	Performance parameter accumulation interval length; every 15 minutes. There are 32 15-MIN buckets of history data available for this accumulation interval length.
• RAW-DATA	Performance parameter accumulation interval length; starting from the last time the counters were cleared. This is only applicable to RMON managed PMs.
<MONDAT>	(Optional) The beginning date of the PM or storage register period specified in TMPER. The format of MONDAT is MM-DD, where MM (month of year) ranges from 1 to 12 and DD (day of month) ranges from 1 to 31. MONDAT is a string.
<MONTM>	(Optional) The beginning time of day of the PM or storage register period specified in TMPER. The format of MONTM is HH-MM, where HH (hour of day) ranges from 0 to 23 and MM (minute of hour) ranges from 0 to 59. MONTM is a string.

## 21.108 RTRV-PMMODE-<STS\_PATH>

(Cisco ONS 15454) The Retrieve Performance Mode of PM Data Collection for STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, or STS9C (RTRV-PMMODE-<STS\_PATH>) command retrieves the type of PM mode that has been previously set in the NE. This command can be used to identify whether the PM parameters are Section, Line or Path type, and to identify whether or not the PMs are being collected by the NE.

### Usage Guidelines

- See [Table 28-1 on page 28-1](#) for supported modifiers by platform.
- The PM mode and state of an entity is set by using the SET-PMMODE command.
- This command returns the categories that are enabled only.
- This near-end monitoring of the intermediate-path performance monitoring (IPPM) only supports OC3, OC12, OC48, OC192, and EC1 on the STS Path.
- The far-end IPPM data collection is supported by MRC-12 and ADM-10G cards only.
- This release of software will support only the Path (P) mode type PM parameters with this command, that is, this command will not be applicable for Line (L) and Section (S) mode types. Note that the PM monitoring for Line (L) and Section (S) are supported by the ONS 15454, and the storing PM data is always performed.

- This command only returns the categories that are enabled (pmstate is ON), and does not return the categories that are disabled (pmstate is OFF).

**Category**

Performance

**Security**

Retrieve

**Input Format**

RTRV-PMMODE-&lt;STS\_PATH&gt;:[&lt;TID&gt;]:&lt;SRC&gt;:&lt;CTAG&gt;::&lt;LOCN&gt;;

**Input Example**

RTRV-PMMODE-STS1:CISCO:STS-4-1-2:123::NEND;

**Input Parameters**

<SRC>	Source access identifier from the <a href="#">“26.11 CrossConnectId”</a> section on page 26-25.
<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. Must not be null. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<CROSSCONNECTID>:[<LOCN>],<MODETYPE>”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“STS-4-1-2:NEND,P”
;
```

**Output Parameters**

<CROSSCONNECTID>	Access identifier from the <a href="#">“26.11 CrossConnectId”</a> section on page 26-25.
<LOCN>	(Optional) Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.

<MODETYPE>	The type of PM parameters that the entity or the subentity is to store as a result of an attribute change. The parameter type is PM_MODE, which is the type of PM parameters.
• P	Transport Path PM parameters.

## 21.109 RTRV-PMMODE-<VT\_PATH>

The Retrieve Performance Mode of PM Data Collection for VT1 and VT2 (RTRV-PMMODE-<VT\_PATH>) command retrieves the type of PM mode that has been previously set in the NE. This command can be used to identify whether the PM parameters are Section, Line, or Path type, and to identify whether or not the PMs are being collected by the NE.

### Usage Guidelines

- The PM mode and state of an entity is set by using the SET-PMMODE command.
- This command returns the categories that are enabled (pmstate is ON) only. It does not return the categories that are disabled (pmstate is OFF).
- This release of software will support only the Path (P) mode type PM parameters with this command, that is, this command will not be applicable for Line (L) and Section (S) mode types.

### Category

Performance

### Security

Retrieve

### Input Format

RTRV-PMMODE-<VT\_PATH>:[<TID>]:<SRC>:<CTAG>::<LOCN>;

### Input Example

RTRV-PMMODE-VT1:CISCO:VT-1-1-2-2:1::NEND;

### Input Parameters

<SRC>	Source access identifier from the <a href="#">“26.11 CrossConnectId”</a> section on page 26-25.
<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. Must not be null. The parameter type is LOCATION, which is the location where the action is to take place. Must not be null.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.

### Output Format

```
SID DATE TIME
M CTAG COMPLD
“<CROSSCONNECTID>:<LOCN>,<MODETYPE>”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"VT1-1-1-2-2:NEND,P"
;
```

<b>Output Parameters</b>	<CROSSCONNECTID>	Access identifier from the “ <a href="#">26.12 CrossConnectId1</a> ” section on page 26-29.
	<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
	• FEND	Action occurs on the far end of the facility.
	• NEND	Action occurs on the near end of the facility.
	<MODETYPE>	The type of PM parameters that the entity or the subentity is to store as a result of an attribute change. The parameter type is PM_MODE, which is the type of PM parameters.
	• P	Transport Path PM parameters.

## 21.110 RTRV-PMSCHED-<MOD2>

(Cisco ONS 15454) The Retrieve Performance Monitoring Schedule for 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 5GIB, 8GFC, CHGRP, CLNT, D1VIDEO, DS1, DV6000, DVBASI, E1, E3, E4, EC1, ESCON, ETRCLO, ETH, FSTE, G1000, GFPOS, GIGE, HDLC, HDTV, ISC1, ILK, ISCCOMPAT, ISC3PEER2R, ISC3PEER1G, ISC3PEER2G, OC12, OC192, OC3, OC48, OC768, OCH, OMS, OTS, OTU3, POS, STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, STS9C, T1, T3, VC12, VC3, VT1, or VT2 (RTRV-PMSCHED-<MOD2>) command retrieves the PM reporting schedule that was set for the NE by the SCHED-PMREPT command.

**Usage Guidelines** See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

**Category** Performance

**Security** Retrieve

**Input Format** RTRV-PMSCHED-<MOD2>:[<TID>]:<AID>:<CTAG>;

**Input Example** RTRV-PMSCHED-OC3:CISCO-NODE:FAC-3-1:123;

<b>Input Parameters</b>	<AID>	Access identifier from the “26.1 ALL” section on page 26-1.
-------------------------	-------	---

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<AID>,<AIDTYPE>:<REPTINVL>,<REPTDAT>,<REPTTM>,<NUMINVL>,,
[<MONLEV>,<LOCN>,<TMPER>,<TMOFST>,<INHMODE>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“FAC-3-1,OC3:30-MIN,5-25,14-46,100,,1-UP,NEND,,15-MIN,0-0-15,ALW”
;
```

**Output Parameters**

<AID>	Access identifier from the “26.1 ALL” section on page 26-1.
<AIDTYPE>	(Optional) Type of facility, link or other addressable entity targeted by the message. The parameter type is MOD2, which is the line/path modifier.
• 10GFC	10-Gigabit Fibre Channel payload
• 10GIGE	10-Gigabit Ethernet
• 40GIGE	40-Gigabit Ethernet
• 1GFC	1-Gigabit Fibre Channel payload
• 1GFICON	1-Gigabit fiber connectivity payload
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• 4GFC	4-Gigabit Fibre Channel payload
• 4GFICON	4-Gigabit fiber connectivity payload
• 5GIB	5Gbps InfiniBand (IB_5G) payload
• 8GFC	8-Gigabit Fibre Channel payload
• D1VIDEO	D1 Video
• DS1	DS1 line of a DS3XM card
• DS3I	DS3I line
• DV6000	DV6000
• DVBASI	Digital Video Broadband Asynchronous Serial Interface (DVBASI) payload
• EC1	EC1 facility
• ESCON	ESCON
• ETRCLO	ETR_CLO
• FSTE	FSTE facility
• G1000	G1000 facility
• GFPOS	GFP over POS. Virtual ports partitioned using GFP’s multiplexing capability.
• GIGE	Gigabit Ethernet

• HDTV	HDTV
• ISC1	InterSystem Channel, a protocol defined by IBM (ISC1) payload
• ISC3PEER1G	1 Gbps ISC3 Peer
• ISC3PEER2G	2 Gbps ISC3 Peer
• ISC3PEER2R	1 Gbps or 2 Gbps ISC3 peer used in transparent (2R) mode
• ISCCOMPAT	1 Gbps ISC1, ISC2, and ISC3 compatibility
• OC3	OC3 facility
• OC12	OC12 facility
• OC48	OC48 facility
• OC192	OC192 facility
• OC768	OC768 facility
• OCH	Optical channel
• OCHCC	OCH client connection
• OCHNC	OCH network connection
• OCHTERM	OCH termination
• OMS	Optical Multiplex Section
• OTS	Optical Transport Section
• OTU3	Optical Transport Unit Level 3
• POS	POS port
• STS1	STS1 path
• STS3C	STS3c path
• STS6C	STS6c path
• STS9C	STS9c path
• STS18C	STS18c path
• STS12C	STS12c path
• STS24C	STS24c path
• STS36C	STS36c path
• STS48C	STS48c path
• STS192C	STS192c path
• T1	T1/DS1 facility/line
• T3	T1/DS1 facility/line
• VT1	VT1 path
• VT2	VT2 path
<REPTINVL>	Reporting interval. How often a report is to be generated and sent to the appropriate NE. REPTINVL is a string.
<REPTDAT>	Report date. Date for the next report. REPTDAT is a string.
<REPTTM>	Report time. The time of day for the next PM report. REPTTM is a string.
	<b>Note</b> PM schedule processing is performed every 5 minutes. Therefore, specifying a REPTINVL of 5-MIN or less would be processed at the earliest every 5 minutes.

<NUMINVL>	(Optional) The remaining number of intervals over which the PM will be reported. NUMINVL is an integer.
<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode will be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<TMPER>	(Optional) Accumulation time period for performance counters. The parameter type is TMPER, which is the accumulation time period for the performance management center.
• 1-DAY	Performance parameter accumulation interval length; every 24 hours. For SONET PM data, only one day of history data is available. For RMON managed PM data, seven days of history data are available.
• 1-HR	Performance parameter accumulation interval length; every 1 hour. This is only applicable to RMON managed PM data. There are 24 hours of history data available.
• 1-MIN	Performance parameter accumulation interval length; every 1 minute. This is only applicable to RMON managed PM data. There are 60 minutes of history available.
• 15-MIN	Performance parameter accumulation interval length; every 15 minutes. There are 32 15-MIN buckets of history data available for this accumulation interval length.
• RAW-DATA	Performance parameter accumulation interval length; starting from the last time the counters were cleared. This is only applicable to RMON managed PMs.
<TMOFST>	(Optional) Time offset between reporting/diagnostics/exercises; from the end of the last complete accumulation time period to the beginning of the accumulation time period specified by TMPER. TMOFST is a string.
<INHMODE>	(Optional) Indicates whether a function is inhibited by an INH command. Indicates whether the reporting of PM data is inhibited (by the INH-PMREPT-ALL command) or is allowed (by the ALW-PMREPT-ALL command). The parameter type is INH_MODE, which indicates whether the function is inhibited.
• ALW	Function is allowed.
• INH	Function is inhibited.

## 21.111 RTRV-PMSCHED-ALL

(Cisco ONS 15454) The Retrieve Performance Schedule All (RTRV-PMSCHED-ALL) command retrieves all the PM reporting schedules that were set for the NE by the SCHED-PMREPT command.

### Usage Guidelines

None

**Category** Performance

**Security** Retrieve

**Input Format** RTRV-PMSCHED-ALL:[<TID>]::<CTAG>;

**Input Example** RTRV-PMSCHED-ALL:CISCO-NODE::123;

**Input Parameters** None that require description

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<AID>,[<AIDTYPE>]:<REPTINVL>,<REPTDAT>,<REPTTM>,[<NUMINVL>],,
[<MONLEV>],<LOCN>,,[<TMPER>],<TMOFST>,[<INHMODE>]"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"FAC-3-1,OC3:30-MIN,5-25,14-46,100,,1-UP,NEND,,15-MIN,0-0-15,ALW"
;
```

Output Parameters	
<AID>	Access identifier from the <a href="#">"26.1 ALL" section on page 26-1</a> .
<AIDTYPE>	(Optional) Type of facility, link or other addressable entity targeted by the message. The parameter type is MOD2, which is the line/path modifier.
• 10GFC	10-Gigabit Fibre Channel payload
• 10GIGE	10-Gigabit Ethernet
• 1GFC	1-Gigabit Fibre Channel payload
• 1GFICON	1-Gigabit fiber connectivity payload
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• 4GFC	4-Gigabit Fibre Channel payload
• 4GFICON	4-Gigabit fiber connectivity payload
• 40GIGE	40-Gigabit Ethernet
• 5GIB	5Gbps InfiniBand (IB_5G) payload
• 8GFC	8-Gigabit Fibre Channel payload
• CHGRP	Channel group
• D1VIDEO	D1 Video

• DVBASI	Digital Video Broadband Asynchronous Serial Interface (DVBASI) payload
• DS1	DS-1 line of a DS3XM card
• DS3I	DS3I line
• DV6000	DV6000
• EC1	EC1 facility
• ESCON	ESCON
• ETRCLO	ETR_CLO
• FSTE	FSTE facility
• G1000	G1000 facility
• GFPOS	GFP over POS. Virtual ports partitioned using GFP's multiplexing capability.
• GIGE	Gigabit Ethernet
• HDLC	High-level data link control (HDLC) frame mode.
• HDTV	HDTV
• ISC1	InterSystem Channel, a protocol defined by IBM (ISC1) payload
• ISC3PEER1G	1 Gbps ISC3 Peer
• ISC3PEER2G	2 Gbps ISC3 Peer
• ISC3PEER2R	1 Gbps or 2 Gbps ISC3 peer used in transparent (2R) mode
• ISCCOMPAT	1 Gbps ISC1, ISC2, and ISC3 compatibility
• MSISC	MSISC
• OC3	OC-3 facility
• OC12	OC-12 facility
• OC48	OC-48 facility
• OC192	OC-192 facility
• OCH	Optical channel
• OCHCC	OCH client connection
• OCHNC	OCH network connection
• OCHTERM	OCH termination
• OMS	Optical Multiplex Section
• OTS	Optical Transport Section
• OTU3	Optical Transport Unit Level 3
• POS	POS port
• REP	Resilient Ethernet Protocol
• STS1	STS1 path
• STS3C	STS3c path
• STS6C	STS6c path
• STS9C	STS9c path
• STS18C	STS18c path
• STS12C	STS12c path
• STS24C	STS24c path
• STS36C	STS36c path

• STS48C	STS48c path
• STS192C	STS192c path
• T1	T1/DS1 facility/line
• T3	T1/DS1 facility/line
• VT1	VT1 path
• VT2	VT2 path
<REPTINVL>	Reporting interval. How often a report is to be generated and sent to the appropriate NE. REPTINVL is a string.
<REPTDAT>	Report date. Date for the next report. REPTDAT is a string.
<REPTTM>	Report time. The time of day for the next PM report. REPTTM is a string.
<NUMINVL>	(Optional) The remaining number of intervals over which PM is to be reported. NUMINVL is an integer.
<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<TMPER>	(Optional) Accumulation time period for performance counters. The parameter type is TMPER, which is the accumulation time period for the performance management center.
• 1-DAY	Performance parameter accumulation interval length; every 24 hours. For SONET PM data, only one day of history data is available. For RMON managed PM data, seven days of history data are available.
• 1-HR	Performance parameter accumulation interval length; every 1 hour. This is only applicable to RMON managed PM data. There are 24 hours of history data available.
• 1-MIN	Performance parameter accumulation interval length; every 1 minute. This is only applicable to RMON managed PM data. There are 60 minutes of history available.
• 15-MIN	Performance parameter accumulation interval length; every 15 minutes. There are 32 15-MIN buckets of history data available for this accumulation interval length.
• RAW-DATA	Performance parameter accumulation interval length; starting from the last time the counters were cleared. This is only applicable to RMON managed PMs.
<TMOFST>	(Optional) Time offset between reporting/diagnostics/exercises; from the end of the last complete accumulation time period to the beginning of the accumulation time period specified by TMPER. TMOFST is a string.
<INHMODE>	(Optional) Indicates whether a function is inhibited by an INH command. Indicates whether the reporting of PM data is inhibited (by the INH-PMREPT-ALL command) or is allowed (by the ALW-PMREPT-ALL command). The parameter type is INH_MODE, which indicates whether the function is inhibited.

- 
- ALW Function is allowed.
  - INH Function is inhibited.
-

## 21.112 RTRV-POS

(Cisco ONS 15454) The Retrieve Packet Over SONET (RTRV-POS) command retrieves the back-end port information for the Ethernet card when the back-end port is working in POS mode.

### Usage Guidelines

- This command is supported for the ML-Series cards.
- For the ML-Series card, the EDGE, RPRSPAN, JUMBO, ADMINSTATE, ENCAP, and NAME parameters are valid when the card mode is ML-IEEE-RPR. Other parameters, including PST and SST, are not valid in this mode.
- This command is supported for the ASAP card, but ADMINSTATE information will not appear.
- Because the back-end port is virtual, the Virtual Facility (VFAC) AID should be used when issuing the command.

### Category

Ports

### Security

Retrieve

### Input Format

RTRV-POS:[<TID>]:<AID>:<CTAG>;

### Input Example

RTRV-POS:TID:VFAC-1-1:CTAG;

### Input Parameters

<AID> Access identifier from the [“26.17 FACILITY”](#) section on page 26-40.

### Output Format

```
SID DATE TIME
M CTAG COMPLD
“<AID>::[ADMINSTATE=<ADMINSTATE>],[JUMBO=<MTU>],[ENCAP=<ENCAP>],
[RPRSPAN=<RPRSPAN>],[EDGE=<EDGE>],[NAME=<NAME>].”;
;
```

### Output Example

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“VFAC-1-1::ADMINSTATE=DOWN,JUMBO=N,ENCAP=RPR-GFP-F,RPRSPAN=EAST,
EDGE=Y,NAME=\"RPR\".”
;
```

<b>Output Parameters</b>	<AID>	Access identifier from the “26.17 FACILITY” section on page 26-40.
	<ADMINSTATE>	(Optional) Administration type. The parameter type is UP_DOWN (up or down).
	• DOWN	Down
	• UP	Up
	<ENCAP>	Frame encapsulation
	• RPR-GFP-F	RPR-over-GFP frame mode
	<JUMBO>	Jumbo frame values
	• Y	Yes
	• N	No
	<RPRSPAN>	RPR span values
	• EAST	East direction
	• WEST	West direction
	<EDGE>	RPR edge values
	• Y	Yes
	• N	No
	<NAME>	Port name, facility name, or VCAT group name

## 21.113 RTRV-PROTNSW-<MOD2DWDMPAYLOAD>

(Cisco ONS 15454) The Retrieve Protection Switch for 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 8GFC, D1VIDEO, DV6000, DVBAS1, ETRCLO, FSTE, GIGE, HDTV, ISC1, ISC3, OTU3, or PASSTHRU (RTRV-PROTNSW-<MOD2DWDMPAYLOAD>) command retrieves the protection switch status of client facilities.

<b>Usage Guidelines</b>	None
<b>Category</b>	DWDM
<b>Security</b>	Retrieve
<b>Input Format</b>	RTRV-PROTNSW-<MOD2DWDMPAYLOAD>:[<TID>]:<SRC>:<CTAG>[:::];
<b>Input Example</b>	RTRV-PROTNSW-HDTV:CISCO:FAC-1-1-1:100;
<b>Input Parameters</b>	<SRC> Source access identifier from the “26.17 FACILITY” section on page 26-40.

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<AIDUNIONID>:<SC>,[<SWITCHTYPE>]"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"FAC-1-1-1:FRCD,MANWKSWBK"
;
```

**Output Parameters**

<AIDUNIONID>	Access identifier from the <a href="#">"26.17 FACILITY"</a> section on page 26-40.
<SC>	Switch command to be initiated on the paths. The parameter type is SW, which is the type of switch to be initiated.
<ul style="list-style-type: none"> <li>• APS-CLEAR</li> </ul>	APS-CLEAR switch state. It is a read-only switch state and is not allowed in the OPR-PROTNSW-xxx commands.
<ul style="list-style-type: none"> <li>• CLEAR</li> </ul>	CLEAR switch state. CLEAR switch state is not allowed in the OPR-PROTNSW-xxx commands.
<ul style="list-style-type: none"> <li>• EXERCISE</li> </ul>	EXERCISE switch state. EXERCISE switch state is not allowed in the OPR-PROTNSW-xxx commands.
<ul style="list-style-type: none"> <li>• FRCD</li> </ul>	Forces a switch unless another FRCD or LOCKOUT is in effect.
<ul style="list-style-type: none"> <li>• LOCKOUT</li> </ul>	Locks the facility out of switching. The system cannot switch to this facility to carry service.
<ul style="list-style-type: none"> <li>• MAN</li> </ul>	Requests a manual switch of the facility.
<SWITCHTYPE>	(Optional) Switch type. The parameter type is SWITCH_TYPE, which is the BLSR switch type. MANWKSWBK, MANWKSWPR, FRCDWKSWBK, FRCDWKSWPR, LOCKOUTOFPR, and LOCKOUTOFWK are retrieve-only values for RTRV-PROTNSW-OCn commands. They are not applicable for the OPR-PROTNSW-OCn commands. RING and SPAN are the only allowed values for BLSR protection.
<ul style="list-style-type: none"> <li>• FRCDWKSWBK</li> </ul>	Working unit is forced to switch back to working.
<ul style="list-style-type: none"> <li>• FRCDWKSWPR</li> </ul>	Working unit is forced to switch to the protection unit.
<ul style="list-style-type: none"> <li>• LOCKOUTOFPR</li> </ul>	Lockout of protection.
<ul style="list-style-type: none"> <li>• LOCKOUTOFWK</li> </ul>	Lockout of working.
<ul style="list-style-type: none"> <li>• MANWKSWBK</li> </ul>	Manual switch of working unit back to working.
<ul style="list-style-type: none"> <li>• MANWKSWPR</li> </ul>	Manual switch of working unit back to the protection unit.
<ul style="list-style-type: none"> <li>• RING</li> </ul>	BLSR ring switch type.
<ul style="list-style-type: none"> <li>• SPAN</li> </ul>	BLSR span switch type.

## 21.114 RTRV-PROTNSW-<OCN\_TYPE>

(Cisco ONS 15454) The Retrieve Protection Switch for OC3, OC12, OC48, OC192, OC768 (RTRV-PROTNSW-<OCN\_TYPE>) command retrieves the switching state of a SONET line specified in the AID.

**Usage Guidelines** See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

**Category** Protection

**Security** Retrieve

**Input Format** RTRV-PROTNSW-<OCN\_TYPE>:[<TID>]:<AID>:<CTAG>[:::];

**Input Example** RTRV-PROTNSW-OC48:CISCO:FAC-5-1:123;

**Input Parameters**

<AID>	Access identifier from the <a href="#">“26.17 FACILITY” section on page 26-40.</a>
-------	--

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<AID>:<SC>,[<SWITCHTYPE>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“FAC-5-1:MAN,MANWKSWBK”
;
```

**Output Parameters**

<AID>	Access identifier from the <a href="#">“26.17 FACILITY” section on page 26-40.</a>
<SC>	Switch command to be initiated on the paths. The parameter type is SW, which is the type of switch to be initiated.

• APS-CLEAR	APS-CLEAR switch state. It is a read-only switch state and is not allowed in the OPR-PROTNSW-xxx commands.
• CLEAR	CLEAR switch state. CLEAR switch state is not allowed in the OPR-PROTNSW-xxx commands.
• EXERCISE	EXERCISE switch state. EXERCISE switch state is not allowed in the OPR-PROTNSW-xxx commands.
• FRCD	Forces a switch unless another FRCD or LOCKOUT is in effect.
• LOCKOUT	Locks the facility out of switching. The system cannot switch to this facility to carry service.
• MAN	Requests a manual switch of the facility.
<SWITCHTYPE>	(Optional) Switch type. The parameter type is SWITCH_TYPE, which is the BLSR switch type. MANWKSWBK, MANWKSWPR, FRCDWKSWBK, FRCDWKSWPR, LOCKOUTOFPR, and LOCKOUTOFWK are retrieve-only values for RTRV-PROTNSW-OCn commands. They are not applicable for the OPR-PROTNSW-OCn commands. RING and SPAN are the only allowed values for BLSR protection.
• FRCDWKSWBK	Working unit is forced to switch back to working.
• FRCDWKSWPR	Working unit is forced to switch to the protection unit.
• LOCKOUTOFPR	Lockout of protection.
• LOCKOUTOFWK	Lockout of working.
• MANWKSWBK	Manual switch of working unit back to working.
• MANWKSWPR	Manual switch of working unit back to the protection unit.
• RING	BLSR ring switch type.
• SPAN	BLSR span switch type.

## 21.115 RTRV-PROTNSW-<PATH>

(Cisco ONS 15454) The Retrieve Protection Switch for STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, STS9C, VT1, or VT2 (RTRV-PROTNSW-<PATH>) command retrieves the switching state of a SONET path protection STS path specified in the AID. Because Telcordia GR-1400 does not allow LOCKOUT\_OF\_WORKING on the path protection WORKING path/AID, the “AID:LOCKOUT,LOCKOUTOFWK” does not appear in this protection switch retrieval result.

### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.



### Note

RTRV-PROTNSW-VT1 accepts STS-1 AID when STS-1 cross connection is made using the DS1 card. This will allow the user to retrieve all the VT1 conditions/alarms that are raised by DS-1 card when STS-1 cross connect is created.

### Category

Protection

## RTRV-PROTNSW-&lt;PATH&gt;

**Security** Retrieve

**Input Format** RTRV-PROTNSW-<PATH>:[<TID>]:<SRC>:<CTAG>[::::];

**Input Example** RTRV-PROTNSW-ST51:CISCO:STS-5-1-1:123;

**Input Parameters** <SRC> Source access identifier from the “[26.11 CrossConnectId](#)” section on page 26-25.

**Output Format** SID DATE TIME  
M CTAG COMPLD  
“<CROSSCONNECTID>:<SC>,[<SWITCHTYPE>]”  
;

**Output Example** TID-000 1998-06-20 14:30:00  
M 001 COMPLD  
“STS-5-1-1:MAN,MANWKSWBK”  
;

**Output Parameters**

<CROSSCONNECTID>	Access identifier from the “ <a href="#">26.11 CrossConnectId</a> ” section on page 26-25.
<SC>	Switch command that is to be initiated on the paths. The parameter type is SW, which is the type of switch to be initiated.
<ul style="list-style-type: none"> <li>• APS-CLEAR</li> </ul>	APS-CLEAR switch state. It is a read-only switch state and is not allowed in the OPR-PROTNSW-xxx commands.
<ul style="list-style-type: none"> <li>• CLEAR</li> </ul>	CLEAR switch state. CLEAR switch state is not allowed in the OPR-PROTNSW-xxx commands.
<ul style="list-style-type: none"> <li>• EXERCISE</li> </ul>	EXERCISE switch state. EXERCISE switch state is not allowed in the OPR-PROTNSW-xxx commands.
<ul style="list-style-type: none"> <li>• FRCD</li> </ul>	Forces a switch unless another FRCD or LOCKOUT is in effect.
<ul style="list-style-type: none"> <li>• LOCKOUT</li> </ul>	Locks the facility out of switching. The system cannot switch to this facility to carry service.
<ul style="list-style-type: none"> <li>• MAN</li> </ul>	Requests a manual switch of the facility.
<SWITCHTYPE>	(Optional) Switch type. The parameter type is SWITCH_TYPE, which is the BLSR switch type. MANWKSWBK, MANWKSWPR, FRCDWKSWBK, FRCDWKSWPR, LOCKOUTOFPR, and LOCKOUTOFWK are retrieve-only values for RTRV-PROTNSW-OCn commands. They are not applicable for the OPR-PROTNSW-OCn commands. RING and SPAN are the only allowed values for BLSR protection.
<ul style="list-style-type: none"> <li>• FRCDWKSWBK</li> </ul>	Working unit is forced to switch back to working.

• FRCDWKSWPR	Working unit is forced to switch to the protection unit.
• LOCKOUTOFPR	Lockout of protection.
• LOCKOUTOFWK	Lockout of working.
• MANWKSWBK	Manual switch of working unit back to working.
• MANWKSWPR	Manual switch of working unit back to the protection unit.
• RING	BLSR ring switch type.
• SPAN	BLSR span switch type.

## 21.116 RTRV-PROTNSW-OCH

(Cisco ONS 15454) The Retrieve Protection Switch Optical Channel (RTRV-PROTNSW-OCH) command retrieves the protection switch status of the TXPP\_MR\_2.5G and MXPP\_MR\_2.5G card's splitter protection group (of its working and protected trunk ports).

**Usage Guidelines** None

**Category** DWDM

**Security** Retrieve

**Input Format** RTRV-PROTNSW-OCH:[<TID>]:<AID>:<CTAG>;

**Input Example** RTRV-PROTNSW-OCH:VA454-22:CHAN-2-2:100;

**Input Parameters** <AID> Access identifier from the [“26.8 CHANNEL”](#) section on page 26-22.

**Output Format** SID DATE TIME  
M CTAG COMPLD  
“<AID>:<SW>,<SWTYPE>”  
;

**Output Example** TID-000 1998-06-20 14:30:00  
M 001 COMPLD  
“CHAN-2-2:FRCD,FRCDWKSWBK”  
;

Output Parameters		
<AID>		Access identifier from the “26.8 CHANNEL” section on page 26-22.
<SW>		Indicates the switch operation. The parameter type is SW, which is the type of switch to be initiated.
	• APS-CLEAR	APS-CLEAR switch state. It is a read-only switch state and is not allowed in the OPR-PROTNSW-xxx commands.
	• CLEAR	CLEAR switch state. CLEAR switch state is not allowed in the OPR-PROTNSW-xxx commands.
	• EXERCISE	EXERCISE switch state. EXERCISE switch state is not allowed in the OPR-PROTNSW-xxx commands.
	• FRCD	Forces a switch unless another FRCD or LOCKOUT is in effect.
	• LOCKOUT	Locks the facility out of switching. The system cannot switch to this facility to carry service.
	• MAN	Requests a manual switch of the facility.
<SWITCHTYPE>		Indicates the switch type operation. The parameter type is SWITCH_TYPE, which is the BLSR switch type. MANWKSWBK, MANWKSWPR, FRCDWKSWBK, FRCDWKSWPR, LOCKOUTOFPR, and LOCKOUTOFWK are retrieve-only values for RTRV-PROTNSW-OCn commands. They are not applicable for the OPR-PROTNSW-OCn commands. RING and SPAN are the only allowed values for BLSR protection.
	• FRCDWKSWBK	Working unit is forced to switch back to working.
	• FRCDWKSWPR	Working unit is forced to switch to the protection unit.
	• LOCKOUTOFPR	Lockout of protection.
	• LOCKOUTOFWK	Lockout of working.
	• MANWKSWBK	Manual switch of working unit back to working.
	• MANWKSWPR	Manual switch of working unit back to the protection unit.
	• RING	BLSR ring switch type.
	• SPAN	BLSR span switch type.

## 21.117 RTRV-PROTNSW-OTS

(Cisco ONS 15454) The Retrieve Protection Switch OTS (RTRV-PROTNSW-OTS) command retrieves the protection switch status of the PSM splitter protection group (of its working and protected OTS RX ports).

**Usage Guidelines** None

**Category** DWDM

**Security** Retrieve

**Input Format** RTRV-PROTNSW-OTS:[<TID>]:<AID>:<CTAG>;

**Input Example** RTRV-PROTNSW-OTS:VA454-22:CHAN-2-2:100;

**Input Parameters**

<AID>	Access identifier from the “26.8 CHANNEL” section on page 26-22.
-------	--

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<AID>:<SW>,<SWTYPE>”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“CHAN-2-2:FRCD,FRCDWKSWBK”
;
```

**Output Parameters**

<AID>	Access identifier from the “26.8 CHANNEL” section on page 26-22.
<SW>	Indicates the switch operation. The parameter type is SW, which is the type of switch to be initiated.
• APS-CLEAR	APS-CLEAR switch state. It is a read-only switch state and is not allowed in the OPR-PROTNSW-xxx commands.
• CLEAR	CLEAR switch state. CLEAR switch state is not allowed in the OPR-PROTNSW-xxx commands.
• EXERCISE	EXERCISE switch state. EXERCISE switch state is not allowed in the OPR-PROTNSW-xxx commands.
• FRCD	Forces a switch unless another FRCD or LOCKOUT is in effect.
• LOCKOUT	Locks the facility out of switching. The system cannot switch to this facility to carry service.
• MAN	Requests a manual switch of the facility.
<SWITCHTYPE>	Indicates the switch type operation. The parameter type is SWITCH_TYPE, which is the BLSR switch type. MANWKSWBK, MANWKSWPR, FRCDWKSWBK, FRCDWKSWPR, LOCKOUTOFPR, and LOCKOUTOFWK are retrieve-only values for RTRV-PROTNSW-OCn commands. They are not applicable for the OPR-PROTNSW-OCn commands. RING and SPAN are the only allowed values for BLSR protection.
• FRCDWKSWBK	Working unit is forced to switch back to working.
• FRCDWKSWPR	Working unit is forced to switch to the protection unit.
• LOCKOUTOFPR	Lockout of protection.
• LOCKOUTOFWK	Lockout of working.

• MANWKSWBK	Manual switch of working unit back to working.
• MANWKSWPR	Manual switch of working unit back to the protection unit.
• RING	BLSR ring switch type.
• SPAN	BLSR span switch type.

## 21.118 RTRV-PROTOCOL

(Cisco ONS 15454) The Retrieve Protocol (RTRV-PROTOCOL) command retrieves the status of a protocol or service supported in the NE. Valid protocols include SHELL, EMS, TL1, and SNMP. If the AID is not specified, the status of all the protocols is retrieved.

**Usage Guidelines** If the AID is TL1, the status can be retrieved to show if the protocol is in SECURE or UNSECURE mode.

**Category** Security

**Security** Retrieve

**Input Format** RTRV-PROTOCOL:[<TID>]:[<AID>]:<CTAG>;

**Input Example** RTRV-PROTOCOL::EMS:123;

<b>Input Parameters</b>	<AID>	(Optional) Identifies the protocol or service to which the command pertains. Defaults to ALL. A null value is equivalent to ALL. The parameter type is PROTOCOLAID, which is the AID for the protocol/service.
	• EMS	CTC/CTM protocol/service
	• SHELL	Shell/file system access protocol
	• SNMP	SNMP protocol/service
	• TL1	TL1 protocol service

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<PROTOCOLAID>:<PROTOCOLSTAT>"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"EMS:UNSECURE"
;
```

Output Parameters		
PROTOCOLAID		Identifies the protocol or service to which the command pertains. The parameter type is PROTOCOLAID, which is the AID for the protocol/service.
	• EMS	CTC/CTM protocol/service
	• SHELL	Shell/file system access protocol
	• SNMP	SNMP protocol/service
	• TL1	TL1 protocol/service
PROTOCOLSTAT		Identifies the status of the protocol or service. The parameter type is PROTOCOLSTAT, which is the status of the protocol.
	• DISABLED	The protocol cannot be used.
	• SECURE	The protocol is enabled and communications using the protocol are sure, for example, through SSH. Not applicable for SNMP protocols.
	• UNSECURE	The protocol is enabled but communication is not secure, for example, through Telnet.

## 21.119 RTRV-PTHTRC-<PATH>

(Cisco ONS 15454) The Retrieve Path Trace for STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, STS9C, VT1, or VT2 (RTRV-PTHTRC-<PATJ>) command retrieves the contents of the SONET path trace message.

**Usage Guidelines** See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

The path trace message is a 64-character string with the last two characters reserved for the terminating CR (carriage return) and the LF (line feed). The message can be an incoming path trace message, an expected incoming path trace message, or an outgoing path trace message, which is inserted into the path overhead of the outgoing signal.

The path trace mode has three modes: OFF, MANUAL, and AUTO. The path trace mode defaults to OFF mode. The MANUAL mode performs the comparison of the received string with the user-entered expected string. The AUTO mode performs the comparison of the present received string with an expected string set to a previously received string. If there is a mismatch, the TIM-P alarm is raised. When the path trace mode is in OFF mode, there is no path trace processing, and all the alarm and state conditions are reset.

When the expected string is queried under the OFF path trace mode, the expected string is a copy of the provisioned string or NULL. When an expected string is queried under the MANUAL path trace mode, the expected string is a copy of the user-entered string. When an expected string is queried under the AUTO path trace mode, the expected string is a copy of the acquired received string or NULL if the string has not been acquired.

When the incoming string is queried under the OFF path trace mode, the incoming string is NULL. When an incoming string is queried under the MANUAL or AUTO path trace mode, the incoming string is a copy of the received string or NULL if the string has not been received.

When the transmitted string is queried under the OFF, MANUAL, or AUTO path trace mode, the transmitted string is the provisioned transmit string.

**Note**

- A null value for the MSGTYPE defaults to INCTRC.
- Only the NEND location value is supported. A null value of the location defaults to NEND.
- Sending a FEND of the location with this command will return an “unsupported locn value” error message.
- J1 (EXPTRC/INCTRC) is implemented on the DS1/DS1N, DS3E/DS3NE, DS3XM, EC1, OC3, OC48A, OC192, OC192-XFP, and MRC-12 cards.
- TRC is supported only on DS1(N), DS3(N)E, and DS3XM cards.
- The VCAF AID is only valid on slots holding ML-Series cards.
- After the BLSR switch, the working path is switched out and the traffic goes through the protection path. The J1 trace message can be retrieved from the protection STS path.
- If there is an STS PCA on the protection path during the BLSR switch, the PCA path is preemptive. If this command is sent on the protection path after a BLSR switch, the command will return the trace message off of the protection path and not from the PCA path.
- The J2 path trace on the VT1.5 is supported on the VT1.5 cross-connection of the DS3XM-12 card in Software R5.0 and later.
- The VT2 modifier is not supported in this release.
- According to Telcordia GR-833, RTRV-PTHTRC-<PATH> can only have a single output row, therefore you cannot specify multiple AIDs using '&' with this command because each AID would require it's own output row. You also cannot use the AIDs that end in ALL because this might also result in multiple output rows.

---

**Category** Troubleshooting and Test Access

---

**Security** Retrieve

---

**Input Format** RTRV-PTHTRC-<PATH>:[<TID>]:<SRC>:<CTAG>::[<MSGTYPE>][:<LOCN>];

---

**Input Example** RTRV-PTHTRC-ST51:CISCO:STS-2-1-1:123::EXPTRC:NEND;

<b>Input Parameters</b>	<SRC>	Source access identifier from the “26.11 CrossConnectId” section on page 26-25.
	<MSGTYPE>	Type of autonomous message to be retrieved. A null value defaults to INCTRC. The parameter type is MSGTYPE, which is the type of trace message.
	<ul style="list-style-type: none"> <li>• EXPTRC</li> <li>• INCTRC</li> <li>• TRC</li> </ul>	<ul style="list-style-type: none"> <li>Expected incoming path trace message</li> <li>Incoming path trace message</li> <li>Outgoing path trace message</li> </ul>
	<LOCN>	Location associated with a particular command in reference to the entity identified by the AID. The parameter type is LOCATION, which is the location where the action is to take place.
	<ul style="list-style-type: none"> <li>• FEND</li> <li>• NEND</li> </ul>	<ul style="list-style-type: none"> <li>Action occurs on the far end of the facility.</li> <li>Action occurs on the near end of the facility.</li> </ul>

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<TRACMSG>”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“TRACMSG”
;
```

**Output Parameters**

<TRACMSG>	The path trace message returned to the requester. The message can be up to 64 characters in length with the last two characters reserved for the CR (carriage return) and the LF (line feed). TRACMSG is a string.
-----------	--

## 21.120 RTRV-PTSYS

(Cisco ONS 15454) The Retrieve Packet Transport System (RTRV-PTSYS) command retrieves the provisioned information of the CPT 50 panel.

**Usage Guidelines** This command is valid for CPT 50 panel. Retrieves the PTSYS information provisioned on the Node.

**Category** Equipment

**Security** Retrieve

**Input Format** RTRV-PTSYS:[<TID>]:<AID>:<CTAG>;

**Input Example** PTSYS-1:PTSYSID=1,OPMODE=NMS,MEMLIST="\SLOT-3-36&SLOT-2&PTSA;

**Input Parameters**

<AID>	AID of the PTSYS.
-------	-------------------

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<PTSYS AID>:<MODE>,<MEMLIST>,<FOGLIST>"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"PTSYS-1:PTSYSID=1,OPMODE=NMS,MEMLIST="\SLOT-3&PTSA-37\",FOGLIST="\FOG-1-36"
;
```

**Output Parameters**

Parameter	Description
<AID>	AID of the CPT 50 panel to be retrieved.
<PTSYSID>	PTSYS number or ID.
<OPMODE>	Operation mode of the PTSYSTEM.
<ul style="list-style-type: none"> <li>NMS</li> <li>IOS</li> </ul>	TCP IPC mode. IPC mode.
<MEMLIST>	Defines the slot of the PT systme.
<FOGLIST>	Defines the FOG members.

## 21.121 RTRV-QNQ-CHGRP

(Cisco ONS 15454) The Retrieve QinQ Channel Group (RTRV-QNQ-CHGRP) command retrieves the IEEE 802.1Q tunneling (QinQ) relationship between the CE-VLAN and the S-VLAN for Gigabit Ethernet uniport provisioning associated to a channel group.

**Usage Guidelines** None

**Category** Channel Group

**Security** Retrieve

**Input Format** RTRV-QNQ-CHGRP:[<TID>]:<AID>:<CTAG>::<FIRSTCEVLANID>,<LASTCEVLANID>,<SVLANID>[:];

**Input Example** RTRV-QNQ-CHGRP::CHGRP-1-1:1::110,110,1208;

Input Parameters	
<AID>	Access identifier from the <a href="#">“26.9 CHGRP”</a> section on page 26-24.
<FIRSTCEVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<LASTCEVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<INGRESSCOS>	Identifies the COS value set in the S-VLAN tag.
<ul style="list-style-type: none"> <li>• 0 to 7</li> </ul>	Set a Cos value
<ul style="list-style-type: none"> <li>• DSCP</li> </ul>	The COS is set according to DSCP to COS mapping table.
<ul style="list-style-type: none"> <li>• TRUST</li> </ul>	Use the Customer COS
<ul style="list-style-type: none"> <li>• VLAN</li> </ul>	The COS will be provisioned on CVLAN basis (QinQ selective mode)

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<AID>:<FIRSTCEVLANID>,<LASTCEVLANID>,<SVLANID>:RULE=<RULE>,[INTERNALVL
AN=<INTERNAL_VLAN_ID>],[INGRESSCOS=<INGRESSCOS>[:];
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"CHGRP-1-1:110,111,1208:RULE=DOUBLE-ADD,INTERNALVLAN=18,INGRASSCOS="
;
```

**Output Parameters**

<AID>	Access identifier from the <a href="#">26.9 CHGRP, page 26-24</a> .
<FIRSTCEVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<LASTCEVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<RULE>	Used to represent the Rules allowed for VLAN tagging operations. Default is ADD.
<ul style="list-style-type: none"> <li>• ADD</li> <li>• XLTE</li> <li>• XLTE-ADD</li> </ul>	<p>The S-VLAN tag is added to the CE-VLAN tag.</p> <p>The S-VLAN tag substitutes the CE-VLAN tag (single Q).</p> <p>XLTE and ADD rule applied together. This rule request to supply an internal S-VLAN. First the Internal VLAN substitutes the Customer VLAN, then Service Provider VLAN TAG (S-VLAN) is added</p>
<ul style="list-style-type: none"> <li>• DOUBLE-ADD</li> </ul>	ADD rule applied two times. This rule request to supply an internal S-VLAN. First the Internal VLAN is added, then Service Provider VLAN TAG (S-VLAN) is added to have a double tag
<INTERNAL_VLAN_ID>	Internal VLAN ID
<INGRESSCOS>	Identifies the COS value set in the S-VLAN tag.
<ul style="list-style-type: none"> <li>• 0 to 7</li> <li>• DSCP</li> <li>• TRUST</li> <li>• VLAN</li> </ul>	<p>Set a Cos value</p> <p>The COS is set according to DSCP to COS mapping table.</p> <p>Use the Customer COS.</p> <p>The COS provisioned on CVLAN basis (QinQ selective mode)</p>

## 21.122 RTRV-QNQ-ETH

(Cisco ONS 15454) The Retrieve QinQ Ethernet (RTRV-QNQ-ETH) command retrieves the IEEE 802.1Q tunneling (QinQ) relationship between the CE-VLAN and the S-VLAN for Gigabit Ethernet uniport provisioning associated to an L2 Ethernet port.

**Usage Guidelines** None

**Category** Ethernet

**Security** Retrieve

**Input Format** RTRV-QNQ-ETH:[<TID>]:<AID>:<CTAG>::<FIRSTCEVLANID>,<LASTCEVLANID>,<SVLANID>[:];

**Input Example** RTRV-QNQ-ETH:PETALUMA:ETH-1-1-1:236::110,110,1208;

<b>Input Parameters</b>	<AID>	Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the <a href="#">“26.16 ETH”</a> section on page 26-40.
	<FIRSTCEVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40. Value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
	<LASTCEVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
	<SVLANID>	VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.

**Output Format** SID DATE TIME  
M CTAG COMPLD  
“<AID>:<FIRSTCEVLANID>,<LASTCEVLANID>,<SVLANID>:RULE=<RULE>[:]”  
;

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"ETH-1-1-1:110,111,1208:RULE=XLTE:"
;
```

Output Parameters		
<AID>		Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the “ <a href="#">26.16 ETH</a> ” section on page 26-40.
<FIRSTCEVLANID>		VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<LASTCEVLANID>		VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<SVLANID>		VLAN identifier. A VLAN ID is a number between 1 and 4096. The value 0 is reserved for untagged VLANs. This identifier is used for customer VLAN IDs and service provider VLAN IDs.
<RULE>		Used to represent the Rules allowed for VLAN tagging operations. Default is ADD.
	• ADD	The S-VLAN tag is added to the CE-VLAN tag.
	• XLTE	The S-VLAN tag substitutes the CE-VLAN tag (single Q).

## 21.123 RTRV-RAMAN

(Cisco ONS 15454)

Retrieve RAMAN retrieves the attributes of a RAMAN measure.

**Usage Guidelines** None

**Category** DWDM

**Security** Retrieve

**Input Format** RTRV-RAMAN:[<TID>]:<AID>:<CTAG>;

**Input Example** RTRV-RAMAN:PENNGROVE:LINE-6-1-TX:236;

**Input Parameter**

<AID>	The LINE AID is used to access Optical Transport Section (OTS) layer of Optical Network units.
• LINE[-{1-12}]-{1-5,12-16}-{1-5}-{RX,TX}	The receive/transmit Lines (COM=1, OSC=2, LINE=3, DC=4, RAMAN=5) in a OPT-RAMP-C card.
• LINE[-{1-12}]-{1-5,12-16}-{1-5}-ALL	All the Lines (COM=1,OSC=2,LINE=3, DC=4, RAMAN=5) in a OPT-RAMP-C card.

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<AID>:<MEAS_INDEX>:<MINRAMANLEV>,<MAXRAMANLEV>,<DATE>,<TIME>”;
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“LINE-6-1-TX:1:MINRAMANLEV=1.0,MAXRAMANLEV=2.0,TIME=00-00-00,DATE=02-02-07;”
;
```

**Output Parameters**

<AID>	The LINE aid is used to access Optical Transport Section (OTS) layer of Optical Network units.
• LINE[-{1-12}]-{1-5,12-16}-{1-5}-{RX,TX}	The receive/transmit Lines (COM=1, OSC=2, LINE=3, DC=4, RAMAN=5) in a OPT-RAMP-C card.
• LINE[-{1-12}]-{1-5,12-16}-{1-5}-ALL	All the Lines (COM=1,OSC=2,LINE=3, DC=4, RAMAN=5) in a OPT-RAMP-C card.
<MEAS_INDEX >	Raman measure Index.
<MINRAMANLEV>	Power measured with MIN raman power level.
<MAXRAMANLEV >	Power measured with MAX raman power level.
<DATE>	Identifies the date. Date is a string. Default value is - “current date”.
<TIME>	Identifies the time. Time is a string. Default value is - “current time.”

## 21.124 RTRV-REP

(Cisco ONS 15454) The Retrieve Resilient Ethernet Protocol (RTRV-REP) command retrieves the Resilient Ethernet Protocol (REP) configuration on the ethernet port of GE\_XP or 10GE\_XP card.

**Usage Guidelines**

- This command accept the ALL AID.
- This command is applicable only to GE\_XP and 10GE\_XP cards.

**Category**

Ethernet

## RTRV-REP

**Security** Retrieve

**Input Format** RTRV-REP:[<TID>]:<AID>:<CTAG>;

**Input Example** RTRV-REP:PENNGROVE:CHAN-16-1-RX:114;

**Input Parameters**

<AID>	Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the “26.16 ETH” section on page 26-40.
-------	---

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<AID>::[SEGMENTID=<SEGMENTID>],[EDGE=<EDGE>],[PORTROLE=<PORTROLE>],[PREFERRED=<PREFERRED>],[PREEMPTDELAY=<PREEMPTDELAY>][:]”
;
```

**Output Example**

```
SID DATE TIME
M CTAG COMPLD
ETH-16-1-1::SEGMENTID=1,EDGE=Y,PORTROLE=NO_NEIGHBOR,PREFERRED=N,
REEMPTDELAY=0”
;
```

**Output Parameters**

<AID>	Ethernet AIDs are used to access L2 Ethernet ports. Access identifier from the “26.16 ETH” section on page 26-40.
<SEGMENTID>	Indicates the segment ID for REP segment. The valid range is from 0 to 1024.
<EDGE>	Configures the port as an edge port. <ul style="list-style-type: none"> <li>• Y To configure the port as an edge port.</li> <li>• N Not to configure the port as an edge port.</li> </ul>
<PORTROLE>	The parameter type is REP_PORT_ROLE, which indicates the port’s role in a REP Segment for the ethernet ports. <ul style="list-style-type: none"> <li>• PRIMARY Indicates that the port is a primary port.</li> <li>• NO_NEIGHB OR Indicates that the port has no neighbor port in the segment.</li> <li>• NO_NEIGHB OR_PRIMA RY Indicates that the port is a primary port and has no neighbor port in the segment.</li> <li>• REGULAR Indicates that the port is a regular port.</li> <li>• None Indicates that the port is an edge port.</li> </ul>
<PREFERRED>	Indicates that the port is the preferred alternate port. Or the preferred port for VLAN load balancing.

• Y	Yes
• N	No

## 21.125 RTRV-RMONTH-<MOD2\_RMON>

(Cisco ONS 15454) The Retrieve Remote Monitoring Threshold for 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 4GFC, 4GFICON, 8GFC, CHGRP, FSTE, G1000, ETH, GFP, GFPOS, GIGE, HDLC, ISCCOMPAT, ISC3PEER1G, ISC3PEER2G, OCH, POS (RTRV-RMONTH-<MOD2\_RMON>) command retrieves the thresholds defined in the RMON alarm table.

### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

### Category

Performance

### Security

Retrieve

### Input Format

RTRV-RMONTH-<MOD2\_RMON>[:<TID>]:<SRC>:<CTAG>::<MONTYPE>],,,[<INTVL>]:[RISE=<RISE>],[FALL=<FALL>],[SAMPLE=<SAMPLE>],[STARTUP=<STARTUP>][:];

### Input Example

RTRV-RMONTH-GIGE:CISCO:FAC-2-1:1234::ETHERSTATSOCTETS,,,100:RISE=1000,FALL=100,SAMPLE=DELTA,STARTUP=RISING;

### Input Parameters

<AID>	Access identifier from the “ <a href="#">26.17 FACILITY</a> ” section on <a href="#">page 26-40</a> . AID for the facility that the data statistic is managed by.
<MONTYPE>	Monitored type. Type of RMON monitored data statistic. A null value is equivalent to ALL. The parameter type is ALL_MONTYPE, which is the monitoring type list.
• AISSP	Alarm Indication Signal Seconds—Path
• ALL	All possible values
• BBE-PM	OTN—Background Block Errors—Path Monitor Point
• BBE-SM	OTN—Background Block Errors—Section Monitor Point
• BBER-PM	OTN—Background Block Error Ratio—Path Monitor Point expressed as one tenth of a percentage.
• BBER-SM	OTN—Background Block Error Ratio—Section Monitor Point expressed as one tenth of a percentage.
• BIEC	FEC—Bit Errors Corrected
• CGV	8B10B—Code Group Violations
• CSSP	Controlled Slip Seconds—Path (DSXM-12 FDL/T1.403 PM count)

• CVCPP	Coding Violations—CP-Bit Path
• CVL	Coding Violations—Line
• CVP	Coding Violations—Path
• CVS	Coding Violations—Section
• CVV	Coding Violations—Section
• DCG	8B10B—Data Code Groups
• ESAP	Errored Second Type A-Path (DS3XM-12 DS1 PM count)
• ESBP	Errored Second Type B-Path (DS3XM-12 DS1 PM count)
• ESCPP	Errored Seconds—CP—Bit Path
• ESL	Errored Seconds—Line
• ESNPFE	Errored Second—Network Path (DS3XM-12 DS1 PM count)
• ESP	Errored Seconds—Path
• ES-PM	OTN—Errored Seconds—Path Monitor Point
• ES-SM	OTN—Errored Seconds—Section Monitor Point
• ESR	Errored Second—Ratio
• ESR-PM	Errored Seconds Ratio—Path monitor Point expressed as one tenth of a percentage
• ESR-SM	Errored Seconds Ratio—Section monitor Point expressed as one tenth of a percentage
• ESS	Errored Seconds—Section
• ESV	Errored Seconds—VT Path
• dot3StatsFCSErrors	A count of frames received on a particular interface that are an integral number of octets in length but do not pass the FCS check.
• dot3StatsFrameTooLong	A count of frames received on a particular interface that exceed the maximum permitted frame size.
• etherStatsBroadcastPkts	The total number of good packets received that were directed to a multicast address
• etherStatsCollisions	Number of transmit packets that are collisions
• etherStatsCRCAAlignErrors	The total number of packets received that have a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets
• etherStatsDropEvents	Number of received frames dropped at the port level
• etherStatsFragments	The total number of packets received that were less than 64 octets
• etherStatsJabbers	The total number of packets received that are longer than 1518 octets
• etherStatsOctets	The total number of octets of data
• etherStatsOversizePkts	The total number of packets received that are longer than 1518 octets
• etherStatsPkts	The total number of packets (including bad packets, broadcast packets, and multicast packets) received
• etherStatsUndersizePkts	The total number of packets received that are less than 64 octets
• FCP	Failure Count—Line
• FC-PM	OTN—Failure Count—Path Monitor Point
• FC-SM	OTN—Failure Count—Section Monitor Point

• HP-AR	Availability Ratio
• HP-BBE	High-Order Path Background Block Error
• HP-BBER	High-Order Path Background Block Error Ratio
• HP-EB	High-Order Path Errored Block
• HP-ES	High-Order Path Errored Second
• HP-ESA	High-Order Path Errored Seconds—A
• HP-ESB	High-Order Path Errored Seconds—B
• HP-ESR	High-Order Path Errored Second Ratio
• HP-FC	High-Order Path Failure Count
• HP-NPJC-PDET	High-Order Path Negative Pointer Justification Count, Path Detected
• HP-NPJC-PGEN	High-Order Path, Negative Pointer Justification Count, Path Generated
• HP-OI	Outage Intensity
• HP-PJCDIFF	High-Order Path Pointer Justification Count Difference
• HP-PJCS-PDET	High-Order Path Pointer Justification Count Seconds, Path Detected
• HP-PJCS-PGEN	High-Order Path Pointer Justification Count Seconds, Path Generated
• HP-PPJC-PDET	High-Order Path Positive Pointer Justification Count, Path Detected
• HP-PPJC-PGEN	High-Order Path, Positive Pointer Justification Count, Path Generated
• HP-SEPI	The number of SEP events in available time
• HP-SES	High-Order Path Severely Errored Seconds
• HP-SESR	High-Order Path Severely Errored Second Ratio
• HP-UAS	High-Order Path Unavailable Seconds
• ifInBroadcastPkts	Number of broadcast packets received since the last counter reset
• ifInDiscards	The number of inbound packets
• ifInErrorBytePktss	Receive Error Byte
• ifInErrors	The number of inbound packets (or transmission units) that contained errors
• ifInFramingErrorPkts	Receive Framing Error
• ifInJunkInterPkts	Receive Interpacket Junk
• ifInMulticastPkts	Number of multicast packets received since the last counter reset
• ifInOctets	Number of bytes transmitted since the last counter reset
• ifInUcastPkts	Number of unicast packets received since the last counter reset
• ifOutBroadcastPkts	Number of broadcast packets transmitted
• ifOutDiscards	The number of outbound packets
• ifOutErrors	The number of outbound packets (or transmission units) that could not be transmitted because of errors
• ifOutMulticastPkts	Number of multicast packets transmitted
• ifOutPayloadCrcErrors	Received payload CRC errors
• ifOutUcastPkts	Number of unicast packets transmitted

• IOS	8B10B—Idle Ordered Sets
• IPC	Invalid Packet Count
• LBCL-AVG	Average Laser Bias Current in microA
• LBCL-MAX	Maximum Laser Bias Current in microA
• LBCL-MIN	Minimum Laser Bias Current in microA
• LBCN	Normalized Laser Bias Current for OC3-8
• LBCN-HWT	Normalized Laser Bias Current—Higher Threshold
• LBCN-LWT	Normalized Laser Bias Current—Lower Threshold
• LOSSL	Loss of Signal Seconds—Line
• LP-BBE	Low-Order Path Background Block Error
• LP-BBER	Low-Order Path Background Block Error Ratio
• LP-EB	Low-Order Path Errored Block
• LP-ES	Low-Order Path Errored Second
• LP-ESA	Low-Order Path Errored Seconds-A
• LP-ESB	Low-Order Path Errored Seconds-B
• LP-ESR	Low-Order Path Errored Second Ratio
• LP-FC	Low-Order Path Failure Count
• LP-NPJC-DET	Low-Order Negative Pointer Justification Count, Detected
• LP-NPJC-GEN	Low Order Negative Pointer Justification Count, Generated
• LP-PPJC-DET	Low-Order Positive Pointer Justification Count, Detected
• LP-PPJC-GEN	Low-Order Positive Pointer Justification Count, Generated
• LP-SEP	Low-Order Path Severely Errored Period
• LP-SEPI	Low-Order Path Severely Errored Period Intensity
• LP-SES	Low-Order Path Severely Errored
• LP-UAS	Low-Order Path Unavailable Seconds
• MS-PSC	Protection switch count
• MS-PSD	Protection switch duration
• NIOS	8B10B—Non Idle Ordered Sets
• NPJC-PDET	Negative Pointer Justification Count, Path Detected
• NPJC-PGEN	Negative Pointer Justification Count, Path Generated
• OPR-AVG	Average Receive Power in one tenth of a microwatt
• OPR-MAX	Maximum Receive Power in one tenth of a microwatt
• OPR-MIN	Minimum Receive Power in one tenth of a microwatt
• OPRN	Normalized Optical Receive Power for OC3-8
• OPRN-MAX	Maximum value for OPRN
• OPRN-MIN	Minimum value for OPRN
• OPT-AVG	Average Transmit Power in one tenth of a microwatt
• OPT-MAX	Maximum Transmit Power in one tenth of a microwatt
• OPT-MIN	Minimum Transmit Power in one tenth of a microwatt
• OPTN	Normalized value for Optical Power Transmitted for the OC3-8 card
• OPTN-MAX	Maximum value for OPTN

• OPTN-MIN	Minimum value for OPTN
• OPWR-AVG	Optical Power—Average Interval Value in one tenth of a dBm
• OPWR-MAX	Optical Power—Maximum Interval Value in one tenth of a dBm
• OPWR-MIN	Optical Power—Minimum Interval Value in one tenth of a dBm
• PPJC-PDET	Positive Pointer Justification Count, Path Detected
• PPJC-PGEN	Positive Pointer Justification Count, Path Generated
• PSC	Protection Switching Count
• PSC-R	Protection Switching Count—Ring
• PSC-S	Protection Switching Count—Span
• PSC-W	Protection Switching Count—Working
• PSD	Protection Switching Duration
• PSD-R	Protection Switching Duration—Ring
• PSD-S	Protection Switching Duration—Span
• PSD-W	Protection Switching Duration—Working
• SASCPP	Severely Errored Framing/AIS Second—CP-Bit Path
• SASP	Severely Errored Framing/AIS Seconds Path
• SEFS	Severely Errored Framing Seconds
• SEFSP	Severely Errored Framing Seconds—Path (DS3XM-12 DS1 PM count)
• SESCOPP	Severely Errored Second—CP-Bit Path
• SESL	Severely Errored Second—Line
• SESNPFE	Severely Errored Second—Network Path (DS3XM-12 DS1 PM count)
• SESP	Severely Errored Second—Path
• SES-PM	OTN—Severely Errored Second—Path
• SESR-PM	OTN—Severely Errored Second Ratio—Path Monitor Point expressed as one tenth of a percentage
• SESR-SM	OTN—Severely Errored Second Ratio—Section Monitor Point expressed as one tenth of a percentage
• SESS	Severely Errored Second—Section
• SES-SM	OTN—Severely Errored Second—Section Monitor Point
• SESV	Severely Errored Second—VT Path
• UASCPP	Unavailable Second—CP-Bit Path
• UASL	Unavailable Second—Line
• UASNPFE	Unavailable Second—Network Path (DS3XM-12 DS1 PM count)
• UASP	Unavailable Second—Path
• UAS-PM	OTN—Unavailable Second—Path Monitor Point
• UAS-SM	OTN—Unavailable Second—Section Monitor Point
• UASV	Unavailable Second—VT Path
• UNC-WORDS	FEC—Uncorrectable Words
• VPC	Valid Packet Count

<INTVL>	The interval in seconds during which the data is sampled and compared with the rising and falling threshold. A valid value is any integer larger than or equal to 10 (seconds). A null value is equivalent to ALL.
<RISE>	The rising threshold for the sampled statistic. A valid value is any integer. A null value is equivalent to ALL.
<FALL>	The falling threshold. A valid value is any integer smaller than the rising threshold. A null value is equivalent to ALL.
<SAMPLE>	The method of calculating the value to be compared to the thresholds. A null value is equivalent to ALL. The parameter type is SAMPLE_TYPE, which describes how the data will be calculated during the sampling period.
<ul style="list-style-type: none"> <li>ABSOLUTE</li> <li>DELTA</li> </ul>	<p>Comparing directly</p> <p>Comparing with the current value of the selected variable subtracted by the last sample</p>
<STARTUP>	Dictates whether an event will generate if the first valid sample is greater than or equal to the rising threshold, less than or equal to the falling threshold, or both. A null value is equivalent to ALL. The parameter type is STARTUP_TYPE, which indicates whether an event will be generated when the first valid sample is crossing the rising or falling threshold.
<ul style="list-style-type: none"> <li>FALLING</li> <li>RISING</li> <li>RISING-OR-FALLING</li> </ul>	<p>Generates the event when the sample is smaller than or equal to the falling threshold.</p> <p>Generates the event when the sample is greater than or equal to the rising threshold.</p> <p>Generates the event when the sample is crossing the rising threshold, or the falling threshold.</p>

**Output Format**

```

SID DATE TIME
M CTAG COMPLD
"<AIDUNIONID>,<AIDTYPE>:<MONTYPE>,,,<INTVL>:INDEX=<INDEX>,
RISE=<RISE>,FALL=<FALL>,SAMPLE=<SAMPLE>,STARTUP=<STARTUP>"
;

```

**Output Example**

```

TID-000 1998-06-20 14:30:00
M 001 COMPLD
"FAC-2-1,GIGE:ETHERSTATSOCTETS,,100:INDEX=2,RISE=1000,FALL=100,
SAMPLE=DELTA,STARTUP=RISING"
;

```

**Output Parameters**

<AIDUNIONID>	Access identifier from the <a href="#">“26.17 FACILITY” section on page 26-40.</a>
<AIDTYPE>	The type of facility, link, or other addressable entity targeted by the message. The parameter type is MOD2_RMON, which is the line modifiers.
<ul style="list-style-type: none"> <li>10GFC</li> </ul>	10-Gigabit Fibre Channel payload

• 10GIGE	10-Gigabit Ethernet
• 40GIGE	40-Gigabit Ethernet
• 1GFC	1-Gigabit Fibre Channel payload
• 1GFICON	1-Gigabit fiber connectivity payload
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• 8GFC	8-Gigabit Fibre Channel payload
• FSTE	Fast Ethernet (10/100 Megabits per second)
• G1000	Gigabit Ethernet (used for G1000 ports)
• GFPOS	Generic framing protocol over SONET
• GIGE	Gigabit Ethernet (used for Non-G1000 ports)
• OCH	Optical channel
• POS	Packet over SONET
<MONTYPE>	Monitored type. Type of RMON monitored data statistic. The parameter type is ALL_MONTYPE, which is the monitoring type list.
• AISSP	Alarm Indication Signal Seconds—Path
• ALL	All possible values
• BBE-PM	OTN—Background Block Errors—Path Monitor Point
• BBE-SM	OTN—Background Block Errors—Section Monitor Point
• BBER-PM	OTN—Background Block Error Ratio—Path Monitor Point expressed as one tenth of a percentage
• BBER-SM	OTN—Background Block Error Ratio—Section Monitor Point expressed as one tenth of a percentage
• BIEC	FEC—Bit Errors Corrected
• CGV	8B10B—Code Group Violations
• CSSP	Controlled Slip Seconds—Path (DSXM-12 FDL/T1.403 PM count)
• CVCPP	Coding Violations—CP-Bit Path
• CVL	Coding Violations—Line
• CVP	Coding Violations—Path
• CVS	Coding Violations—Section
• CVV	Coding Violations—Section
• DCG	8B10B—Data Code Groups
• ESAP	Errored Second Type A-Path (DS3XM-12 DS1 PM count)
• ESBP	Errored Second Type B-Path (DS3XM-12 DS1 PM count)
• ESCPP	Errored Seconds—CP—Bit Path
• ESL	Errored Seconds—Line
• ESNPFE	Errored Second—Network Path (DS3XM-12 DS1 PM count)
• ESP	Errored Seconds—Path
• ES-PM	OTN—Errored Seconds—Path Monitor Point
• ES-SM	OTN—Errored Seconds—Section Monitor Point
• ESR	Errored Second—Ratio

• ESR-PM	Errored Seconds Ratio—Path monitor Point expressed as one tenth of a percentage
• ESR-SM	Errored Seconds Ratio—Section monitor Point expressed as one tenth of a percentage
• ESS	Errored Seconds—Section
• ESV	Errored Seconds—VT Path
• dot3StatsFCSErrors	A count of frames received on a particular interface that are an integral number of octets in length but do not pass the FCS check.
• dot3StatsFrameTooLong	A count of frames received on a particular interface that exceed the maximum permitted frame size.
• etherStatsBroadcastPkts	The total number of good packets received that were directed to a multicast address
• etherStatsCollisions	Number of transmit packets that are collisions
• etherStatsCRCAlignErrors	The total number of packets received that have a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets
• etherStatsDropEvents	Number of received frames dropped at the port level
• etherStatsFragments	The total number of packets received that were less than 64 octets
• etherStatsJabbers	The total number of packets received that are longer than 1518
• etherStatsOctets	The total number of octets of data
• etherStatsOversizePkts	The total number of packets received that are longer than 1518 octets
• etherStatsPkts	The total number of packets (including bad packets, broadcast packets, and multicast packets) received
• etherStatsUndersizePkts	The total number of packets received that are less than 64 octets
• FCP	Failure Count—Line
• FC-PM	OTN—Failure Count—Path Monitor Point
• FC-SM	OTN—Failure Count—Section Monitor Point
• HP-AR	Availability Ratio
• HP-BBE	High-Order Path Background Block Error
• HP-BBER	High-Order Path Background Block Error Ratio
• HP-EB	High-Order Path Errored Block
• HP-ES	High-Order Path Errored Second
• HP-ESA	High-Order Path Errored Seconds—A
• HP-ESB	High-Order Path Errored Seconds—B
• HP-ESR	High-Order Path Errored Second Ratio
• HP-FC	High-Order Path Failure Count
• HP-NPJC-PDET	High-Order Path Negative Pointer Justification Count, Path Detected
• HP-NPJC-PGEN	High-Order Path, Negative Pointer Justification Count, Path Generated
• HP-OI	Outage Intensity
• HP-PJCDIFF	High-Order Path Pointer Justification Count Difference

• HP-PJCS-PGEN	High-Order Path Pointer Justification Count Seconds, Path Generated
• HP-PPJC-PDET	High-Order Path Positive Pointer Justification Count, Path Detected
• HP-PPJC-PGEN	High-Order Path, Positive Pointer Justification Count, Path Generated
• HP-SEPI	The number of SEP events in available time
• HP-SES	High-Order Path Severely Errored Seconds
• HP-SESR	High-Order Path Severely Errored Second Ratio
• HP-UAS	High-Order Path Unavailable Seconds
• ifInBroadcastPkts	Number of broadcast packets received since the last counter reset
• ifInDiscards	The number of inbound packets
• ifInErrorBytePktss	Receive Error Byte
• ifInErrors	The number of inbound packets (or transmission units) that contained errors
• ifInFramingErrorPkts	Receive Framing Error
• ifInJunkInterPkts	Receive Interpacket Junk
• ifInMulticastPkts	Number of multicast packets received since the last counter reset
• ifInOctets	Number of bytes transmitted since the last counter reset
• ifInUcastPkts	Number of unicast packets received since the last counter reset
• ifOutBroadcastPkts	Number of broadcast packets transmitted
• ifOutDiscards	The number of outbound packets
• ifOutErrors	The number of outbound packets (or transmission units) that could not be transmitted because of errors
• ifOutMulticastPkts	Number of multicast packets transmitted
• ifOutPayloadCrcErrors	Received payload CRC errors
• ifOutUcastPkts	Number of unicast packets transmitted
• IOS	8B10B—Idle Ordered Sets
• IPC	Invalid Packet Count
• LBCL-AVG	Average Laser Bias Current in microA
• LBCL-MAX	Maximum Laser Bias Current in microA
• LBCL-MIN	Minimum Laser Bias Current in microA
• LBCN	Normalized Laser Bias Current for OC3-8
• LBCN-HWT	Normalized Laser Bias Current—Higher Threshold
• LBCN-LWT	Normalized Laser Bias Current—Lower Threshold
• LOSSL	Loss of Signal Seconds—Line
• LP-BBE	Low-Order Path Background Block Error
• LP-BBER	Low-Order Path Background Block Error Ratio
• LP-EB	Low-Order Path Errored Block
• LP-ES	Low-Order Path Errored Second
• LP-ESA	Low-Order Path Errored Seconds-A
• LP-ESB	Low-Order Path Errored Seconds-B
• LP-ESR	Low-Order Path Errored Second Ratio

• LP-FC	Low-Order Path Failure Count
• LP-NPJC-DET	Low-Order Negative Pointer Justification Count, Detected
• LP-NPJC-GEN	Low Order Negative Pointer Justification Count, Generated
• LP-PPJC-DET	Low-Order Positive Pointer Justification Count, Detected
• LP-PPJC-GEN	Low-Order Positive Pointer Justification Count, Generated
• LP-SEP	Low-Order Path Severely Errored Period
• LP-SEPI	Low-Order Path Severely Errored Period Intensity
• LP-SES	Low-Order Path Severely Errored
• LP-UAS	Low-Order Path Unavailable Seconds
• MS-PSC	Protection switch count
• MS-PSD	Protection switch duration
• NIOS	8B10B—Non Idle Ordered Sets
• NPJC-PDET	Negative Pointer Justification Count, Path Detected
• NPJC-PGEN	Negative Pointer Justification Count, Path Generated
• OPR-AVG	Average Receive Power in one tenth of a microwatt
• OPR-MAX	Maximum Receive Power in one tenth of a microwatt
• OPR-MIN	Minimum Receive Power in one tenth of a microwatt
• OPRN	Normalized Optical Receive Power for OC3-8
• OPRN-MAX	Maximum value for OPRN
• OPRN-MIN	Minimum value for OPRN
• OPT-AVG	Average Transmit Power in one tenth of a microwatt
• OPT-MAX	Maximum Transmit Power in one tenth of a microwatt
• OPT-MIN	Minimum Transmit Power in one tenth of a microwatt
• OPTN	Normalized value for Optical Power Transmitted for the OC3-8 card
• OPTN-MAX	Maximum value for OPTN
• OPTN-MIN	Minimum value for OPTN
• OPWR-AVG	Optical Power—Average Interval Value in one tenth of a dBm
• OPWR-MAX	Optical Power—Maximum Interval Value in one tenth of a dBm
• OPWR-MIN	Optical Power—Minimum Interval Value in one tenth of a dBm
• PPJC-PDET	Positive Pointer Justification Count, Path Detected
• PPJC-PGEN	Positive Pointer Justification Count, Path Generated
• PSC	Protection Switching Count
• PSC-R	Protection Switching Count—Ring
• PSC-S	Protection Switching Count—Span
• PSC-W	Protection Switching Count—Working
• PSD	Protection Switching Duration
• PSD-R	Protection Switching Duration—Ring
• PSD-S	Protection Switching Duration—Span
• PSD-W	Protection Switching Duration—Working
• SASCPP	Severely Errored Framing/AIS Second—CP-Bit Path
• SASP	Severely Errored Framing/AIS Seconds Path

• SEFS	Severely Errored Framing Seconds
• SEFSP	Severely Errored Framing Seconds—Path (DS3XM-12 DS1 PM count)
• SESCPP	Severely Errored Second—CP-Bit Path
• SESL	Severely Errored Second—Line
• SESNPFE	Severely Errored Second—Network Path (DS3XM-12 DS1 PM count)
• SESP	Severely Errored Second—Path
• SES-PM	OTN—Severely Errored Second—Path
• SESR-PM	OTN—Severely Errored Second Ratio—Path Monitor Point expressed as one tenth of a percentage
• SESR-SM	OTN—Severely Errored Second Ratio—Section Monitor Point expressed as one tenth of a percentage
• SESS	Severely Errored Second—Section
• SES-SM	OTN—Severely Errored Second—Section Monitor Point
• SESV	Severely Errored Second—VT Path
• UASCPP	Unavailable Second—CP-Bit Path
• UASL	Unavailable Second—Line
• UASNPFE	Unavailable Second—Network Path (DS3XM-12 DS1 PM count)
• UASP	Unavailable Second—Path
• UAS-PM	OTN—Unavailable Second—Path Monitor Point
• UAS-SM	OTN—Unavailable Second—Section Monitor Point
• UASV	Unavailable Second—VT Path
• UNC-WORDS	FEC—Uncorrectable Words
• VPC	Valid Packet Count
<INTVL>	The interval in seconds over which the data is sampled and compared with the rising and falling threshold. A valid value is any integer larger than or equal to 10 (seconds).
<INDEX>	The index for the threshold created by the system in the RMON threshold table. INDEX is an integer.
<RISE>	The rising threshold for the sampled statistic. A valid value is any integer.
<FALL>	The falling threshold. A valid value is any integer smaller than the rising threshold. AID is an integer
<SAMPLE>	The method of calculating the value to be compared to the thresholds. The parameter type is SAMPLE_TYPE, which describes how the data will be calculated during the sampling period
• ABSOLUTE	Comparing directly
• DELTA	Comparing with the current value of the selected variable subtracted from the last sample
<STARTUP>	Dictates whether an event will generate if the first valid sample is greater than or equal to the rising threshold, less than or equal to the falling threshold, or both. The parameter type is STARTUP_TYPE, which indicates whether an event will be generated when the first valid sample is crossing the rising or falling threshold.

• FALLING	Generates the event when the sample is smaller than or equal to the falling threshold.
• RISING	Generates the event when the sample is greater than or equal to the rising threshold.
• RISING-OR-FALLING	Generates the event when the sample is crossing the rising threshold or the falling threshold.

## 21.126 RTRV-ROLL-<MOD\_PATH>

(Cisco ONS 15454) The Retrieve Roll for STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, STS9C, VC11, VC12, VC3, VT1, or VT2 (RTRV-ROLL-<MOD\_PATH>) command retrieves roll data parameters.

### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

### Category

Bridge and Roll

### Security

Retrieve

### Input Format

RTRV-ROLL-<MOD\_PATH>:[<TID>]:<SRC>:<CTAG>;

### Input Example

RTRV-ROLL-STs1:CISCO:STs-1-1-1:6;

### Input Parameters

<SRC>	Source access identifier from the “ <a href="#">26.12 CrossConnectId1</a> ” section on page 26-29 (except VCM and FACILITY). Roll path (STS or VT).
-------	---

### Output Format

```
SID DATE TIME
M CTAG COMPLD
“<FROM>,<TO>:RFROM=<RFROM>,RTO=<RTO>,[RMODE=<RMODE>],
VLDSIG=<VLDSIG>”
;
```

### Output Example

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“STs-1-1-1,STs-2-1-1:RFROM=STs-2-1-1,RTO=STs-3-1-1,RMODE=AUTO,VLDSIG=N”
;
```

Output Parameters		
<FROM>		One of the termination points (legs) of the existing cross-connection. AID from the “26.12 CrossConnectId1” section on page 26-29 (except VCM and FACILITY).
<TO>		One of the termination points (legs) of the existing cross-connection. AID from the “26.12 CrossConnectId1” section on page 26-29 (except VCM and FACILITY).
<RFROM>		The termination point of the existing cross-connect that is to be rolled. AID from the “26.12 CrossConnectId1” section on page 26-29 (except VCM and FACILITY).
<RTO>		The termination point that will become a leg of the new cross-connection. AID from the “26.12 CrossConnectId1” section on page 26-29 (except VCM and FACILITY).
<RMODE>		(Optional) The rolling mode of operation. The parameter type is RMODE, which specifies the roll mode.
	• AUTO	Automatic. When a valid signal is available, the roll under AUTO mode will automatically delete the previous end-point.
	• MAN	Manual. Enter the corresponding delete roll/bulkroll command to delete the previous end-point.
<VLDSIG>		Shows whether or not the roll has received a valid signal. VLDSIG is Y if the signal is valid and N if it is not. The parameter type is ON_OFF (disable or enable an attribute).
	• N	Disable an attribute.
	• Y	Enable an attribute.

## 21.127 RTRV-ROUTE

(Cisco ONS 15454) The Retrieve Route (RTRV-ROUTE) command retrieves static routes.

### Usage Guidelines

- There is no DNS service available on the node. Only numeric IP addresses will be accepted.
- The optional parameters DESTIP, IPMASK, NXTHOP, and COST are used to filter the retrieved static routes. In the absence of any optional parameter, all the static routes on the node will be retrieved.

### Category

System

### Security

Retrieve

### Input Format

RTRV-ROUTE:[<TID>]::<CTAG>::[<DESTIP>],[<IPMASK>],[<NXTHOP>],[<COST>];

### Input Example

RTRV-ROUTE:CISCO::123::10.64.72.57,255.255.255.0,10.64.10.1,200;

<b>Input Parameters</b>	<DESTIP>	Destination tip. DESTIP is a string. A null value is equivalent to ALL.
	<IPMASK>	IP mask. IPMASK is a string. A null value is equivalent to ALL.
	<NXTHOP>	Next hop. NXTHOP is a string. A null value is equivalent to ALL.
	<COST>	Unsigned integer. Valid range is from 1 to 32,797. A null value is equivalent to ALL.

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“,<DESTIP>,<IPMASK>,<NXTHOP>,<COST>”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“,\“10.64.72.57\”,\“255.255.255.0\”,\“10.64.10.1\”,200”
;
```

<b>Output Parameters</b>	<DESTIP>	Destination tip. DESTIP is a string.
	<IPMASK>	IP mask. IPMASK is a string.
	<NXTHOP>	Next hop. NXTHOP is a string.
	<COST>	Cost. COST is a string.

## 21.128 RTRV-ROUTE-GRE

(Cisco ONS 15454) The Retrieve Route Generic Routing Encapsulation (RTRV-ROUTE-GRE) command displays the existing GRE tunnels.

**Usage Guidelines** None

**Category** System

**Security** Retrieve

**Input Format** RTRV-ROUTE-GRE:[<TID>]::<CTAG>[:::];

**Input Example** RTRV-ROUTE-GRE:CISCO::123;

**Input Parameters** None that require description

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“,:IPADDR=<IPADDR>,IPMASK=<IPMASK>,NSAP=<NSAP>,COST=<COST>”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“,:IPADDR=10.64.72.57,IPMASK=255.255.255.0,
NSAP=39840F80FFFFFF0000DDDDAA000010CFB4910200,COST=110”
;
```

Output Parameters	
<IPADDR>	IP address of the tunnel endpoint. IPADDR is a string.
<IPMASK>	Subnet mask for the tunnel endpoint. IPMASK is a string.
<NSAP>	NSAP address for the tunnel endpoint. NSAP is a string.
<COST>	Routing cost associated with the tunnel. COST is an integer.

## 21.129 RTRV-SHELFSTAT

(Cisco ONS 15454) The RTRV-SHELFSTAT command retrieves and reports the temperature and voltage of the shelf.

**Usage Guidelines** None

**Category** Equipment

**Security** Retrieve

**Input Format** RTRV-SHELFSTAT:[<TID>]:<AID>:<CTAG>;

**Input Example** RTRV-SHELFSTAT:CISCO454::1;

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"AID:AIDTYPE,TEMPERATURE=<TEMPERATURE>,VOLTAGEA=<VOLTAGEA>,VOLTAGEB=
<VOLTAGEB>[,VOLTAGEC=<VOLTAGEC>,VOLTAGED=<VOLTAGED>]"
;
```

**Output Example**

```
TID-000 2008-07-19 18:57:00
M 001 COMPLD
":SHELF,TEMPERATURE=22C,VOLTAGEA=51760,VOLTAGEB=51783,VOLTAGEC=51760,VOLT
AGED=51783"
;
```

**Table 21-6 Output Parameter Support**

Parameter	Description
<Temperature>	Temperature of the shelf (in degrees Celsius).
<VOLTAGEA>	Voltage of the shelf that corresponds to power supply A (in millivolts).
<VOLTAGEB>	Voltage of the shelf that corresponds to power supply B (in millivolts).
<VOLTAGEC>	Voltage of the shelf that corresponds to power supply C (in millivolts).
<VOLTAGED>	Voltage of the shelf that corresponds to power supply D (in millivolts).

## 21.130 RTRV-SLV-WDMANS

(Cisco ONS 15454) The Retrieve Span Loss Verification Wavelength Division Multiplexing Automatic Node Setup (RTRV-SLV-WDMANS) command retrieves the expected span loss verification provisioned by the ED-SLV-WDMANS command.

**Usage Guidelines** None

**Category** DWDM

**Security** Retrieve

**Input Format** RTRV-SLV-WDMANS:[<TID>]:<AID>:<CTAG>;

**Input Example** RTRV-SLV-WDMANS:VA454-22:WDMANS-E:116;

<b>Input Parameters</b>	<AID>	Access identifier from the “ <a href="#">26.34 WDMANS</a> ” section on page 26-59.
<b>Output Format</b>	<pre>SID DATE TIME M CTAG COMPLD “&lt;AID&gt;::[HIGHSLVEXP=&lt;HIGHSLVEXP&gt;],[LOWSLVEXP=&lt;LOWSLVEXP&gt;], [SLVACT=&lt;SLVACT&gt;],[RESOLUTION=&lt;RESOLUTION&gt;]” ;</pre>	
<b>Output Example</b>	<pre>TID-000 1998-06-20 14:30:00 M 001 COMPLD “WDMANS-E::HIGHSLVEXP=10.0,LOWSLVEXP=5.0,SLVACT=10.0,RESOLUTION=1.0:” ;</pre>	
<b>Output Parameters</b>	<AID>	Access identifier from the “ <a href="#">26.34 WDMANS</a> ” section on page 26-59.
	<HIGHSLVEXP>	(Optional) The high range value of the expected span loss verification. HIGHSLVEXP is a float.
	<LOWSLVEXP>	(Optional) The low range value of the expected span loss verification. LOWSLVEXP is a float.
	<SLVACT>	(Optional) The value of the calculated span loss verification. SLVACT is a float.
	<RESOLUTION>	(Optional) The value of the resolution applied to the calculated span loss verification. RESOLUTION is a float.

## 21.131 RTRV-STCN-REP

(Cisco ONS 15454) The RTRV Segment Topology Change Notification Resilient Ethernet Protocol (RTRV-STCN-REP) command retrieves the Segment Topology Change Notification (STCN) for REP Segment on the ethernet ports.

### Usage Guidelines

- REP must be configured on the ethernet port.
- This command is applicable only to GE\_XP and 10GE\_XP cards.

### Category

Ethernet

### Security

Retrieve

### Input Format

RTRV-STCN-REP:[<TID>]:<AID>:<CTAG>[:[:[:]]];

<b>Input Example</b>	RTRV-STCN-REP:CISCO:ETH-16-1-1:1;	
<b>Input Parameters</b>	<AID>	Access identifier from the “ <a href="#">26.17 FACILITY</a> ” section on page 26-40.
<b>Output Format</b>	SID DATE TIME M CTAG COMPLD “<AID>::[STCNENABLED=<STCNENABLED>],[SEGRANGE=<SEGRANGE>],[STCNPORT=<STCNPORT>]” ;	
<b>Output Example</b>	SID DATE TIME M CTAG COMPLD “ETH-16-1-1::STCNENABLED=Y,SEGRANGE=\"1000-1020"\&1020-1021, STCNPORT=ETH-16-2-1”	
<b>Output Parameters</b>	<AID>	Access identifier from the “ <a href="#">26.17 FACILITY</a> ” section on page 26-40.
	<STCNENABLED>	To enable or disable the Segment Topology Notification on ethernet entity for REP.
	• Y	Enables STCN on the ethernet port.
	• N	Disables STCN on the ethernet port.
	<SEGRANGESTART>	Indicates the segment range start value for the STCN. The valid range is from 0 to 1024.
	<SEGRANGEEND>	Indicates the segment range end value for the STCN. The valid range is from 0 to 1024.
	<STCNPORT>	Determines on which ethernet port the STCN should be sent. STCNPORT is an AID, it takes ETH AID value. The default is NULL.

## 21.132 RTRV-STS

(Cisco ONS 15454) The Retrieve Synchronous Transport Signal (RTRV-STS) command retrieves the attributes associated with an STS path based on the granularity level of NE/SLOT-specific STSs.

### Usage Guidelines

- Supported AIDs are ALL, SLOT-N (N=1,2,...,ALL), STS-<SLOT>[-<PORT>]-<STS NUMBER>.
- The SFBER, SDBER, RVRTV, RVTM, SWPDIP, HOLDOFFTIMER, and UPSRPTHSTATE parameters only apply to path protection.
- The path trace message is a 64-character string including the terminating CR (carriage return) and LF (line feed) that is transported in the J1 byte of the SONET STS Path overhead.

- The EXPTRC indicates that the contents of the expected incoming path trace are provisioned by the user in the ED-STS\_PATH command. The TRC indicates the contents of the outgoing path trace message. The INCTRC indicates the contents of the incoming path trace message.
- The path trace mode has three modes: OFF, MANUAL, and AUTO. The mode defaults to OFF. The MANUAL mode compares the received string with the user entered expected string. The AUTO mode compares the present received string with an expected string set to a previously received string. If there is a mismatch, the TIM-P alarm is raised. When the path trace mode is in OFF mode, there is no path trace processing, and all the alarm and state conditions are reset.
- When the expected string is queried under the OFF path trace mode, the expected string is a copy of the provisioned string or NULL. When an expected string is queried under the MANUAL path trace mode, the expected string is a copy of the user entered string. When an expected string is queried under the AUTO path trace mode, the expected string is a copy of the acquired received string or NULL if the string has not been acquired.
- When the incoming string is queried under the OFF path trace mode, the incoming string is NULL. When an incoming string is queried under the MANUAL or AUTO path trace mode, the incoming string is a copy of the received string or NULL if the string has not been received.
- J1 (EXPTRC) is implemented on the DS1/DS1N, DS3E/DS3NE, DS3XM, EC1, DS3-EC1-48 OC3, OC12-4, OC48AS, OC192, OC192-XFP, and MRC-12 cards.
- TRC and INCTRC are supported on DS1(N), DS3(N)E, DS3-EC1-48, DS3XM, OC192-XFP and MRC-12 cards.
- In Software R5.0 and later, the ED-VT1 command is only supported to edit the J2 path trace on the VT1.5 cross-connection of the DS3XM-12 card.

---

**Category** Paths

---

**Security** Retrieve

---

**Input Format** RTRV-STS:[<TID>]:<AID>:<CTAG>;

---

**Input Example** RTRV-STS:TID:STS-2-1-1:1;

---

**Input Parameters** <AID> Access identifier from the [“26.2 AidUnionId”](#) section on page 26-13.

---



---

**Output Format** SID DATE TIME  
M CTAG COMPLD  
“<AID>::[LEVEL=<LEVEL>],[SFBER=<SFBER>],[SDBER=<SDBER>],[RVRTV=<RVRTV>],  
[RVTM=<RVTM>],[SWPDIP=<SWPDIP>],[HOLDOFFTIMER=<HOLDOFFTIMER>],  
[EXPTRC=<EXPTRC>],[TRC=<TRC>],[INCTRC=<INCTRC>],[TRCMODE=<TRCMODE>],  
[TACC=<TACC>],[TAPTYPE=<TAPTYPE>],[UPSRPTHSTATE=<UPSRPTHSTATE>],  
[C2=<C>],[BLSRPTHSTATE=<BLSRPTHSTATE>]:<PST\_PSTQ>,<SSTQ>”  
;

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"STS-2-1-4::LEVEL=STS3C,SFBER=1E-3,SDBER=1E-5,RVRTV=Y,RVTM=1.0,SWPDIP=Y,
HOLDOFFTIMER=2000,EXPTRC="EXPTRCSTRING",TRC="TRCSTRING",
INCTRC="INCTRCSTRING",TRCMODE=AUTO,TACC=8,TAPTYPE=SINGLE,
UPSRPTHSTATE=ACT,C2=0X04,BLSRPTHSTATE=PROTPTHACT:OOS-AU,AINS"
;
```

**Output Parameters**

<AID>	Access identifier from the <a href="#">"26.2 AidUnionId" section on page 26-13.</a>
<LEVEL>	(Optional) The rate of the cross-connect. Applicable only to STS paths in SONET. The parameter type is STS_PATH, which is the modifier for some STS commands.
• STS1	Synchronous Transport Signal level 1 (51 Mbps)
• STS12C	Synchronous Transport Signal level 12 Concatenated (622 Mbps)
• STS18C	Synchronous Transport Signal level 18 Concatenated (933 Mbps)
• STS192C	Synchronous Transport Signal level 192 (9952 Mbps)
• STS24C	Synchronous Transport Signal level 24 Concatenated (1240 Mbps)
• STS36C	Synchronous Transport Signal level 36 Concatenated (1866 Mbps)
• STS3C	Synchronous Transport Signal level 3 Concatenated (155 Mbps)
• STS48C	Synchronous Transport Signal level 48 Concatenated (2488 Mbps)
• STS6C	Synchronous Transport Signal level 3 Concatenated (310 Mbps)
• STS9C	Synchronous Transport Signal level 9 Concatenated (465 Mbps)
<SFBER>	(Optional) An STS path SFBER that applies only to path protection and only to STS-level paths in SONET. Defaults to 1E-4. The parameter type is SF_BER, which is the threshold for declaring signal failure on a facility or path.
• 1E-3	SFBER is 1E-3.
• 1E-4	SFBER is 1E-4.
• 1E-5	SFBER is 1E-5.
<SDBER>	(Optional) An STS path SDBER that applies only to path protection and only to STS-level paths in SONET. Defaults to 1E-6. The parameter type is SD_BER, which is the threshold for declaring signal degrade on a facility or path.
• 1E-5	SDBER is 1E-5.
• 1E-6	SDBER is 1E-6.
• 1E-7	SDBER is 1E-7.
• 1E-8	SDBER is 1E-8.
• 1E-9	SDBER is 1E-9.

<RVRTV>	(Optional) Revertive mode. The value Y indicates that protection switching system reverts service to the original line after restoration. The value N indicates that protection switching system does not revert service to the original line after restoration. RVRTV is applicable only for 1+1 protection switching. Null defaults to N. Only applies to path protection. The parameter type is ON_OFF (disable or enable an attribute).
<ul style="list-style-type: none"> <li>• N</li> <li>• Y</li> </ul>	<p>Does not revert service to original line after restoration.</p> <p>Reverts service to original line after restoration.</p>
<RVTM>	Revertive time. RVTM is not allowed to be set while RVRTV is N. Only applies to path protection. The parameter type is REVERTIVE_TIME.
<ul style="list-style-type: none"> <li>• 0.5 to 12.0</li> </ul>	Revertive time is 0.5 to 12.0 minutes.
<SWPDIP>	(Optional) Switch on PDI-P. Applicable only to STS-level paths in SONET (STS <sub>n</sub> ). The parameter type is ON_OFF (disable or enable an attribute).
<ul style="list-style-type: none"> <li>• N</li> <li>• Y</li> </ul>	<p>Disable an attribute.</p> <p>Enable an attribute.</p>
<HOLDOFFTIMER>	(Optional) Hold off timer. HOLDOFFTIMER is an integer.
<EXPTRC>	(Optional) Expected path trace content. A 64-character ASCII string including the terminating CR (carriage return) and LF (line feed). Indicates the expected path trace message (J1) contents. Applicable only to STS-Level Paths in SONET. Defaults to null when path protection path is created.
<TRC>	(Optional) The path trace message to be transmitted. The trace byte (J1) continuously transmits a 64-byte, fixed length ASCII string, one byte at a time. A null value defaults to the NE transmitting 62 null characters (hex 00) and CR and LF. A null value defaults to the NE transmitting null characters (Hex 00). Applicable to STS-level paths in SONET (STS <sub>n</sub> ). TRC is a string.
<INCTRC>	(Optional) Identifies the incoming path trace message contents. Can be any combination of 64-characters. Applicable only to STS-level paths in SONET. Defaults to null when a path protection path is created. INCTRC is a string.
<TRCMODE>	(Optional) Path trace mode. Applicable only to STS-level Paths in SONET (STS <sub>n</sub> ). Defaults to the OFF mode. The parameter type is TRCMODE (trace mode).
<ul style="list-style-type: none"> <li>• AUTO</li> <li>• AUTO-NO-AIS</li> <li>• MAN</li> <li>• MAN-NO-AIS</li> <li>• OFF</li> </ul>	<p>Use the previously received path trace string as the expected string. Not applicable to MXP/TXP cards.</p> <p>Use the previously received path trace string as the expected string and do not turn on AIS and RDI if TIM-P is detected.</p> <p>Use the provisioned expected string as the expected string.</p> <p>Use the provisioned expected string as the expected string and do not turn on AIS and RDI if TIM-P is detected.</p> <p>Turn off path trace capability. Nothing will be reported.</p>
<TACC>	(Optional) Indicates whether the digroup being provisioned is to be used as a test access digroup. Default is N. TACC is an integer.

<TAPTYPE>	(Optional) TAP type. The parameter type is TAPTYPE, which is the test access point type.
• DUAL	Dual FAD
• SINGLE	Single FAD
<UPSRPTHSTATE>	(Optional) Indicates whether a given AID is the working or standby path of a path protection cross-connect. The parameter type is STATUS, which is the status of the unit in the protection pair.
• ACT	The entity is the active unit in the shelf.
• NA	Status is unavailable.
• STBY	The entity is the standby unit in the shelf.
<C>	(Optional) The C2 byte hex code. Applicable only to STS-level paths in SONET (STS <sub>n</sub> ). The parameter type is C2_BYTE, which is the C2 byte hex code.
• 0X00	Unequipped
• 0X01	Equipped-Non-Specific payload
• 0X02	VT-Structured STS-1 SPE
• 0X03	Locked VT Mode
• 0X04	Asynchronous Mapping for DS3
• 0X12	Asynchronous Mapping for DS4NA
• 0X13	Mapping for ATM
• 0X14	Mapping for DQDB
• 0X15	Asynchronous Mapping for FDDI
• 0X16	HDLC-Over-SONET Mapping
• 0XE1	VT-structured STS-1 SPE with 1VTx payload defect
• 0XE2	VT-structured STS-1 SPE with 2VTx payload defects
• 0XE3	VT-structured STS-1 SPE with 3VTx payload defects
• 0XE4	VT-structured STS-1 SPE with 4VTx payload defects
• 0XE5	VT-structured STS-1 SPE with 5VTx payload defects
• 0XE6	VT-structured STS-1 SPE with 6VTx payload defects
• 0XE7	VT-structured STS-1 SPE with 7VTx payload defects
• 0XE8	VT-structured STS-1 SPE with 8VTx payload defects
• 0XE9	VT-structured STS-1 SPE with 9VTx payload defects
• 0XEA	VT-structured STS-1 SPE with 10VTx payload defects
• 0XEB	VT-structured STS-1 SPE with 11VTx payload defects
• 0XEC	VT-structured STS-1 SPE with 12VTx payload defects
• 0XED	VT-structured STS-1 SPE with 13VTx payload defects
• 0XEE	VT-structured STS-1 SPE with 14VTx payload defects
• 0XEF	VT-structured STS-1 SPE with 15VTx payload defects
• 0XF0	VT-structured STS-1 SPE with 16VTx payload defects
• 0XF1	VT-structured STS-1 SPE with 17VTx payload defects
• 0XF2	VT-structured STS-1 SPE with 18VTx payload defects
• 0XF3	VT-structured STS-1 SPE with 19VTx payload defects

• 0XF4	VT-structured STS-1 SPE with 20VTx payload defects
• 0XF5	VT-structured STS-1 SPE with 21VTx payload defects
• 0XF6	VT-structured STS-1 SPE with 22VTx payload defects
• 0XF7	VT-structured STS-1 SPE with 23VTx payload defects
• 0XF8	VT-structured STS-1 SPE with 24VTx payload defects
• 0XF9	VT-structured STS-1 SPE with 25VTx payload defects
• 0XFA	VT-structured STS-1 SPE with 26VTx payload defects
• 0XFB	VT-structured STS-1 SPE with 27VTx payload defects
• 0XFC	VT-structured STS-1 SPE with 28VTx payload defects
• 0XFE	O.181 Test Signal (TSS1 to TSS3) Mapping
• 0XFF	Reserved, however, C2 is 0XFF if AIS-L is being generated by an optical card or cross-connect downstream.
<BLSRPTHSTATE>	(Optional) The BLSR path state only if the port is on the BLSR. Applicable only to STS-level paths in SONET (STS <sub>n</sub> ). The parameter type is BLSR_PTH_STATE, which is the BLSR path state only if the port is on the BLSR.
• PCAPTHACT	Indicates the BLSR is not switched and its PCA path is in the active state.
• PCAPTHSTB	Indicates the BLSR is switched and its PCA path is in the standby state.
• PROTPHACT	Indicates the BLSR is switched and its protection path is in the active state.
• WKGPTHACT	Indicates the BLSR is not switched and its working path is in the active state.
• WKGPTHSTB	Indicates the BLSR is switched and its working path is in the standby state.
<PST_PSTQ>	Administrative state in the PST_PSTQ format. The parameter type is PST_PSTQ, which is the service state of the entity described by the SST and PSTQ.
• IS-NR	In Service and Normal
• OOS-AU	Out of Service and Autonomous
• OOS-AUMA	Out of Service and Autonomous Management
• OOS-MA	Out of Service and Management
<SSTQ>	(Optional) Secondary state of the entity. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic In-Service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of Equipment
• MT	Maintenance
• OOG	Out of Group
• SWDL	Software Download
• UAS	Unassigned
• UEQ	Unequipped

## 21.133 RTRV-SRVTYPE

(Cisco ONS 15454 M2 and Cisco ONS 15454 M6) The Retrieve Service Type (RTRV-SRVTYPE) command retrieves the service type on the ports of the TNC card.

---

**Category** Ports

---

**Security** Retrieve

---

**Input Format** RTRV-SRVTYPE:[<TID>]:<AID>:<CTAG>;

---

**Input Example** RTRV-SRVTYPE::ALL:CTAG;

---

**Input Parameters**

<AID>	Supports only "ALL" AID.
-------	--------------------------

---



---

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"<AID>:<SRVTYPE>;"
;
```

---

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"FAC-1-1-1:UDC"
;
```

---

**Output Parameters**

<AID>	Supports only "ALL" AID.
<SRVTYPE>	Indicates the service type set on the TNC port.
• UDC	To set the service type to UDC.
• VOIP	To set the service type to VOIP
• NONE	To set the service type to NONE.

---

## 21.134 RTRV-SYNCN

(Cisco ONS 15454) The Retrieve Synchronization command retrieves the synchronization reference list used to determine the sources for the NE's reference clock and the BITS output clock. For each clock, up to three synchronization sources can be specified (for example, PRIMARY, SECOND, THIRD).

### Usage Guidelines

- To retrieve/set the timing mode, SSM message Set or Quality of RES information, use the RTRV-NE-SYNCN and ED-NE-SYNCN commands.
- The output example shown here is under line timing mode.

### Category

Synchronization

### Security

Retrieve

### Input Format

RTRV-SYNCN:[<TID>]:<AID>:<CTAG>[::::];

### Input Example

RTRV-SYNCN:BOYES:SYNC-NE:234;

### Input Parameters

<AID> Access identifier from the [“26.30 SYNC\\_REF”](#) section on page 26-58.

### Output Format

```
SID DATE TIME
M CTAG COMPLD
“<AID>:<REF>,<REFVAL>,<QREF>,<STATUS>,<PROTECTSTATUS>”
;
```

### Output Example

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“SYNC-NE:PRI,FAC-1-2,WORK,ACT,PRS”
;
```

### Output Parameters

<AID> Access identifier from the [“26.30 SYNC\\_REF”](#) section on page 26-58.

<REF> Rank of synchronization reference. Access identifier from the [“26.31 SYNCSW”](#) section on page 26-58.

<REFVAL> Value of a synchronization reference. [“26.29 SYN\\_SRC”](#) section on page 26-56.

<QREF>	(Optional) Indicates whether the working or protect card (in a protection group) provides timing. This parameter has no significance if the reference source is BITS or INTERNAL and is left blank. The parameter type is SYNC_CLOCK_REF_QUALITY_LEVEL, which is the clock source quality level for SONET.
• DUS	Do Not Use For Synchronization
• PRS	Primary Reference Source, Stratum 1 Traceable
• RES	Reserved For Network Synchronization Use
• SMC	SONET Minimum Clock Traceable
• SSM-FAILED	Incoming timing signal cannot be used for synchronization as it has an alarm like LOS, LOF, AIS-L.
• ST2	Stratum 2 Traceable
• ST3	Stratum 3 Traceable
• ST3E	Stratum 3E Traceable
• ST4	Stratum 4 Traceable
• STU	Synchronized, Traceability Unknown
• TNC	Transit Node Clock (2nd Generation Only)
<STATUS>	(Optional) Status. The parameter type is STATUS, which is the status of the unit in the protection pair.
• ACT	The entity is the active unit in the shelf.
• NA	Status is unavailable.
• STBY	The entity is the standby unit in the shelf.
<PROTECTSTATUS>	(Optional) Applicable to 1+1. Designates the role of the entity in the protection group. Either it is the working or the protect entity. The parameter type is SIDE, which is the role the unit is playing in the protection group.
• PROT	The entity is a protection unit in the protection group.
• WORK	The entity is a working unit in the protection group.

## 21.135 RTRV-T1

(Cisco ONS 15454) The Retrieve T1 Facility (RTRV-T1) command retrieves the DS-1 facilities configuration.

### Usage Guidelines

- The parameters SYNCMAP, ADMSSM, VTMAP, INHFELPBK, AND PROVIDESYNC are only displayed on the DS1/E1-56 card (ONS 15454).
- The parameters BERTMODE, BERTPATTERN, BERTERRCOUNT, BERTERRRATE, and BERTSYNCSTATUS apply only to DS1/E1-56 and DS3XM-12 cards.
- BERT is implemented on a single port.
- SENDDUS and RETIME are not supported on the ONS 15454.

<b>Category</b>	Ports										
<b>Security</b>	Retrieve										
<b>Input Format</b>	RTRV-T1:[<TID>]:<AID>:<CTAG>[::::];										
<b>Input Example</b>	RTRV-T1:TID:FAC-2-1:1223;										
<b>Input Parameters</b>	<table border="1"> <tr> <td>&lt;AID&gt;</td> <td>Access identifier from the “26.17 FACILITY” section on page 26-40.</td> </tr> </table>	<AID>	Access identifier from the “26.17 FACILITY” section on page 26-40.								
<AID>	Access identifier from the “26.17 FACILITY” section on page 26-40.										
<b>Output Format</b>	<pre> SID DATE TIME M CTAG COMPLD “&lt;AID&gt;::[LINECDE=&lt;LINECDE&gt;],[FMT=&lt;FMT&gt;],[LBO=&lt;LBO&gt;],[TACC=&lt;TAP&gt;], [TAPTYPE=&lt;TAPTYPE&gt;],[SOAK=&lt;SOAK&gt;],[SOAKLEFT=&lt;SOAKLEFT&gt;],[SFBER=&lt;SFBER&gt;], [SDBER=&lt;SDBER&gt;],[NAME=&lt;NAME&gt;],[SYNCSMSG=&lt;SYNCSMSG&gt;],[SENDDUS=&lt;SENDDUS&gt;], [RETIME=&lt;RETIME&gt;],[AISONLPBK=&lt;AISONLPBK&gt;],[AISVONAIIS=&lt;AISVONAIIS&gt;], [AISONLOF=&lt;AISONLOF&gt;],[MODE=&lt;MODE&gt;],[SYNCSMAP=&lt;SYNCSMAP&gt;], [ADMSSM=&lt;ADMSSM&gt;],[PROVIDESYNC=&lt;PROVIDESYNC&gt;],[VTMAP=&lt;VTMAP&gt;], [INHFELPBK=&lt;INHFELPBK&gt;],[BERTMODE=&lt;BERTMODE&gt;], [BERTPATTERN=&lt;BERTPATTERN&gt;],[BERTERRCOUNT=&lt;BERTERRCOUNT&gt;], [BERTERRRATE=&lt;BERTERRRATE&gt;],[BERTSYNCSSTATUS=&lt;BERTSYNCSSTATUS&gt;]: &lt;PST&gt;,[&lt;SST&gt;]” ; </pre>										
<b>Output Example</b>	<pre> TID-000 1998-06-20 14:30:00 M 001 COMPLD "FAC-2-1::LINECDE=AMI,FMT=ESF,LBO=0-131,TACC=8,TAPTYPE=DUAL,SOAK=52, SOAKLEFT=12-25,SFBER=1E-4,SDBER=1E-7,NAME="T1 PORT",SYNCSMSG=Y, SENDDUS=Y,RETIME=Y,AISONLPBK=ALL,AISVONAIIS=Y,AISONLOF=Y, MODE=FDL,SYNCSMAP=ASYNCS,ADMSSM=STU,PROVIDESYNC=N,VTMAP=GR253, INHFELPBK=N,BERTMODE=NONE,BERTPATTERN=NONE, BERTERRCOUNT=,BERTERRRATE=NONE,BERTSYNCSSTATUS=N:OOS-AU,AINS"; </pre>										
<b>Output Parameters</b>	<table border="1"> <tr> <td>&lt;AID&gt;</td> <td>Access identifier from the “26.17 FACILITY” section on page 26-40.</td> </tr> <tr> <td>&lt;LINECDE&gt;</td> <td>(Optional) Line code. The parameter type is LINE_CODE.</td> </tr> <tr> <td>• AMI</td> <td>Line code value is AMI.</td> </tr> <tr> <td>• B8ZS</td> <td>Line code value is B8ZS.</td> </tr> <tr> <td>&lt;FMT&gt;</td> <td>(Optional) Digital signal frame format. The parameter type is FRAME_FORMAT, which is the frame format for a T1 port.</td> </tr> </table>	<AID>	Access identifier from the “26.17 FACILITY” section on page 26-40.	<LINECDE>	(Optional) Line code. The parameter type is LINE_CODE.	• AMI	Line code value is AMI.	• B8ZS	Line code value is B8ZS.	<FMT>	(Optional) Digital signal frame format. The parameter type is FRAME_FORMAT, which is the frame format for a T1 port.
<AID>	Access identifier from the “26.17 FACILITY” section on page 26-40.										
<LINECDE>	(Optional) Line code. The parameter type is LINE_CODE.										
• AMI	Line code value is AMI.										
• B8ZS	Line code value is B8ZS.										
<FMT>	(Optional) Digital signal frame format. The parameter type is FRAME_FORMAT, which is the frame format for a T1 port.										

• D4	(Default) Frame format is D4.
• ESF	Frame format is ESF.
• UNFRAMED	Frame format is unframed.
<LBO>	(Optional) Line buildout settings. LBP is an integer. The parameter type is LINE_BUILDOUT.
• 0–131	Line buildout range is 0–131
• 132–262	Line buildout range is 132–262
• 263–393	Line buildout range is 263–393
• 394–524	Line buildout range is 394–524
• 525–655	Line buildout range is 525–655
<TAP>	(Optional) Defines the STS as a test access port with a selected unique TAP number. The TAP number is within a range of 0, 1 to 999. When TACC is 0 (zero), the TAP is deleted. Default is N.
<TAPTYPE>	(Optional) TAP type. The parameter type is TAPTYPE, which is the test access point type.
• DUAL	Dual FAD
• SINGLE	Single FAD
<SOAK>	(Optional) OOS-AINS to IS transition soak time as measured in 15-minute intervals. SOAK is an integer.
<SOAKLEFT>	(Optional) Time remaining for the transition from OOS-AINS to IS measured in 1 minute intervals. The format is HH-MM where HH ranges from 00 to 48 and MM ranges from 00 to 59. SOAKLEFT is a string. Rules for SOAKLEFT are as follows: <ul style="list-style-type: none"> <li>• When the port is in OOS, OOS_MT, or IS state, the parameter will not appear.</li> <li>• When the port is in OOS_AINS but the countdown has not started due to fault signal, the value will be SOAKLEFT=NOT-STARTED.</li> <li>• When the port is in OOS_AINS state and the countdown has started, the value will be shown in HH-MM format.</li> </ul>
<SFBER>	(Optional) The port signal failure threshold. Defaults to 1E-4. The parameter type is SF_BER, which is the threshold for declaring signal failure on a facility or path.
• 1E-3	SFBER is 1E-3.
• 1E-4	SFBER is 1E-4.
• 1E-5	SFBER is 1E-5.
<SDBER>	(Optional) Port signal degrade threshold. Defaults to 1E-7. The parameter type is SD_BER, which is the threshold for declaring signal degrade on a facility or path.
• 1E-5	SDBER is 1E-5.
• 1E-6	SDBER is 1E-6.
• 1E-7	SDBER is 1E-7.
• 1E-8	SDBER is 1E-8.
• 1E-9	SDBER is 1E-9.

<NAME>	(Optional) Port name. NAME is a string.
<SYNCSMSG>	Synchronization status messaging is enabled or disabled on the T1 facility.
• N	Disable an attribute.
• Y	Enable an attribute.
<SENDDUS>	The facility will send the DUS value as the sync status message for that facility.
• N	Disable an attribute.
• Y	Enable an attribute.
<RETIME>	(Optional) Indicates if retiming is needed.  The parameter type is YES_NO, which is whether the user's password is about to expire, the user is logged into the NE, or the user is locked out of the NE.
• NO	No
• YES	Yes
• FDL	Indicates the DS1 path of the DS3XM-12 is in FDL T1-403 mode.
<AISONLPBK>	(Optional) Defaults to AIS_ON_LPBK_ALL. The parameter type is AIS_ON_LPBK, which indicates if AIS is sent on a loopback
• AIS_ONLPBK_FACILITY	AIS is sent on facility loopbacks.
• AIS_ON_LPBK_ALL	AIS is sent on all loopbacks.
• AIS_ON_LPBK_OFF	AIS is not sent on loopbacks.
• AIS_ON_LPBK_TERMINAL	AIS is sent on terminal loopbacks.
<AISVON AIS>	(Optional) Defaults to N. The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.
<AISVON LOF>	(Optional) The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.
<MODE>	(Optional) Mode. Default value is FDL. The parameter type is DS1MODE, which is the DS1 path mode of the DS3XM-12 card
• ATT	Indicates the DS1 path of the DS3XM-12 is in AT&T 54016 mode.
• FDL	Indicates the DS1 path of the DS3XM-12 is in FDL T1-403 mode.
<SYNCSMAP>	(Optional) The synchronous mapping for the DS1 facility. Defaults to ASYNC. Only supported on ONS 15454. The parameter type is SYNCSMAP, which is the synchronous mapping type.
• ASYNC	Asynchronous
• BYTE	Byte
• JBYTE	Jbyte
<ADMSSM>	(Optional) The administrative synchronization status message. Only supported on the ONS 15454. The parameter type is SYNC_CLOCK_REF_QUALITY_LEVEL, which is the clock source quality level.

• DUS	Do Not Use For Synchronization
• PRS	Primary Reference Source, Stratum 1 Traceable
• RES	Reserved For Network Synchronization Use
• SMC	SONET Minimum Clock Traceable
• ST2	Stratum 2 Traceable
• ST3	Stratum 3 Traceable
• ST3E	Stratum 3E Traceable
• ST4	Stratum 4 Traceable
• STU	Synchronized, Traceability Unknown
• TNC	Transit Node Clock (2nd Generation Only)
<PROVIDESYNC>	(Optional) Indicates whether the facility provides synchronization. Only supported on ONS 15454. The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.
<VTMAP>	(Optional) The port to VT mapping type for that particular STS. Only supported on ONS 15454. Defaults to GR253. The parameter type is VTMAP, which is the VT mapping.
• GR253	Mapping based on Telcordia GR-253.
• INDUSTRY	Mapping based on industry standard.
<INHFELPBK>	(Optional) Indicates whether far end loopbacks are inhibited on the facility. Only supported on ONS 15454. The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.
<BERTMODE>	Specifies the mode [Test Pattern Generator (TPG) or Test Pattern Monitor (TPM)] of the port for BERT.
• NONE	BERT mode not enabled.
• TPGM-L	Test pattern generator and monitor on line side.
• TPGM-B	Test pattern generator and monitor on backplane.
• TPG-L	Test pattern generator on line side.
• TPM-L	Test pattern monitor on line side.
• TPG-B	Test pattern generator on backplane.
• TPM-B	Test pattern monitor on backplane.
<BERTPATTERN>	Specifies the error pattern to be injected for BERT.
• NONE	BERT pattern not enabled.
• PRBS15	PRBS15 test pattern.
• PRBS20	PRBS20 test pattern.
• PRBS23	PRBS23 test pattern.
• QRSS	QRSS test pattern.
• ALT-ONE-ALT-ZERO	Alternate one and zero pattern.
<BERTERRCOUNT>	Integer value. Value -1 indicates that BERT is disabled/not supported.

<BERTERRRATE>	Specifies the BERT error rate received.
• NONE	No bit errors.
• SINGLE	Single bit error.
• 1E-3	Bit errors in 1E-3 rate.
• 1E-4	Bit errors in 1E-4 rate.
• 1E-5	Bit errors in 1E-5 rate.
• 1E-6	Bit errors in 1E-6 rate.
<BERTSYNCSTATUS>	Synchronization status of BERT values. The parameter type is Y_N, which specifies if synchronization status is up or down.
Y	BERT synchronization status is up.
N	BERT synchronization status is down.
<PST>	Primary state. The parameter type is PST, which indicates the current overall service condition of an entity.
• IS	In Service
• OOS	Out of Service
<SST>	Secondary state of the entity. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic In-Service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of Equipment
• MT	Maintenance
• OOG	Out of Group
• SWDL	Software Download
• UAS	Unassigned
• UEQ	Unequipped

## 21.136 RTRV-T3

(Cisco ONS 15454) The Retrieve T3 (RTRV-T3) command retrieves the facility properties of a DS3 or a DS3XM card.

### Usage Guidelines

- CTC can set the FMT attribute of a DS3NE line to AUTOPROVISION, to set the framing based on the incoming framing. This would result in the FMT field being blanked out for a few seconds or blanked out forever for a preprovisioned DS3NE card on CTC.
- The autoprovision is not considered a valid DS3 framing type. It is used only to trigger an autosense and subsequent autoprovisioning of a valid DS3 framing type (unframed, M23, C-BIT).
- TL1 does not have the autoprovision mode according to Telcordia GR-199. TL1 maps/returns the autoprovision to be unframed.



## Output Parameters

<AID>	Access identifier from the “26.17 FACILITY” section on page 26-40.
<FMT>	(Optional) Digital signal format. The parameter type is DS_LINE_TYPE, which is the DS123 line type.
• C-BIT	C-BIT line type applies to the DS3XM and DS3E cards.
• M13	M13 line type applies to the DS3XM and DS3E cards.
• UNFRAMED	Line type is unframed. The old DS3 (L3M) and DS3CR cards can only run in unframed mode.
<LINECDE>	(Optional) Line code. The parameter type is DS_LINE_CODE, which is the DS123 line code.
• B3ZS	Binary three-zero substitution.
<LBO>	(Optional) Line buildout settings. LBO is an integer. The parameter type is E_LBO, which is the electrical signal line buildout.
• 0–225	Electrical signal line buildout range is 0–225.
• 226–450	Electrical signal line buildout range is 226–450.
<INHFELPBK>	(Optional) Far-end loopback inhibition attribute of the port. If it is Y, the automatic far-end loopbacks are inhibited. It is either on or off. The system default is N. The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.
<TAP>	(Optional) Defines the STS as a test access port with a selected unique TAP number. The TAP number is within a range of 0, 1 to 999. When TACC is 0 (zero), the TAP is deleted. Default is N.
<TAPTYPE>	(Optional) TAP type. The parameter type is TAPTYPE, which is the test access point type.
• DUAL	Dual FAD
• SINGLE	Single FAD
<SOAK>	(Optional) OOS-AINS to IS transition soak time as measured in 15-minute intervals. SOAK is an integer.
<SOAKLEFT>	(Optional) Time remaining for the transition from OOS-AINS to IS measured in 1 minute intervals. The format is HH-MM where HH ranges from 00 to 48 and MM ranges from 00 to 59. SOAKLEFT is a string. Rules for <SOAKLEFT> are as follows: <ul style="list-style-type: none"> <li>• When the port is in OOS, OOS_MT, or IS state, the parameter will not appear.</li> <li>• When the port is in OOS_AINS but the countdown has not started due to fault signal, the value will be SOAKLEFT=NOT-STARTED.</li> <li>• When the port is in OOS_AINS state and the countdown has started, the value will be shown in HH-MM format.</li> </ul>
<SFBER>	(Optional) The port signal failure threshold. Defaults to 1E-4. The parameter type is SF_BER, which is the threshold for declaring signal failure on a facility or path.
• 1E-3	SFBER is 1E-3.

• 1E-4	SFBER is 1E-4.
• 1E-5	SFBER is 1E-5.
<SDBER>	(Optional) Port signal degrade threshold. Defaults to 1E-7. The parameter type is SD_BER, which is the threshold for declaring signal degrade on a facility or path.
• 1E-5	SDBER is 1E-5.
• 1E-6	SDBER is 1E-6.
• 1E-7	SDBER is 1E-7.
• 1E-8	SDBER is 1E-8.
• 1E-9	SDBER is 1E-9.
<NAME>	(Optional) Port name. NAME is a string.
<AISONLPBK>	(Optional) AIS on loopback. The parameter type is AIS_ON_LPBK, which indicates if AIS is sent on a loopback.
• AIS_ONLPBK_FACILITY	AIS is sent on facility loopbacks.
• AIS_ON_LPBK_ALL	AIS is sent on all loopbacks.
• AIS_ON_LPBK_OFF	AIS is not sent on loopbacks.
• AIS_ON_LPBK_TERMINAL	AIS is sent on terminal loopbacks.
<BERTMODE>	Specifies the mode [Test Pattern Generator (TPG) and Test Pattern Monitor (TPM)] of the port for BERT.
• NONE	BERT mode not enabled.
• TPGM-L	Test pattern generator and monitor on line-side.
• TPGM-B	Test pattern generator and monitor on backplane.
• TPG-L	Test pattern generator on line-side.
• TPM-L	Test pattern monitor on line-side.
• TPG-B	Test pattern generator on backplane.
• TPM-B	Test pattern monitor on backplane.
<BERTPATTERN>	Specifies the error pattern to be injected for BERT.
• NONE	BERT pattern not enabled.
• PRBS15	PRBS15 test pattern.
• PRBS20	PRBS20 test pattern.
• PRBS23	PRBS23 test pattern.
• QRSS	QRSS test pattern.
• ALT-ONE-ALT-ZERO	Alternate one and zero pattern.
<BERTERRCOUNT>	Integer value. Value -1 indicates that BERT is disabled/not supported.
<BERTERRRATE>	Specifies the BERT error rate received.
• NONE	No bit errors.
• SINGLE	Single bit error.
• 1E-3	Bit errors in 1E-3 rate.
• 1E-4	Bit errors in 1E-4 rate.
• 1E-5	Bit errors in 1E-5 rate.
• 1E-6	Bit errors in 1E-6 rate.

<BERTSYNCSTATUS>	Synchronization status of BERT values. The parameter type is Y_N, which specifies if synchronization status is up or down.
Y	BERT synchronization status is up.
N	BERT synchronization status is down.
<PST>	Primary state. The parameter type is PST, which indicates the current overall service condition of an entity.
• IS	In Service
• OOS	Out of Service
<SST>	Secondary state of the entity. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic In-Service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of Equipment
• MT	Maintenance
• OOG	Out of Group
• SWDL	Software Download
• UAS	Unassigned
• UEQ	Unequipped

## 21.137 RTRV-TACC

(Cisco ONS 15454) The Retrieve Test Access (RTRV-TACC) command retrieves details associated with a TAP. The TAP is identified by the TAP number. The ALL input TAP value means that the command will return all the configured TACCs in the NE.



### Note

The RTRV-TACC command displays the working path AID irrespective of whether TACC is connected to the working or protect path of the path protected circuit.

**Usage Guidelines** None

**Category** Troubleshooting and Test Access

**Security** Retrieve

**Input Format** RTRV-TACC:[<TID>]:<TAP>:<CTAG>;

**Input Example** RTRV-TACC:CISCO:241:CTAG;

<b>Input Parameters</b>	<TAP>	The assigned number for AID being used as a test access point. TAP must be an integer within a range of 1 to 999. The ALL TAP value returns all the configured TACCs in this NE. TAP is a string.
<b>Output Format</b>	<pre> SID DATE TIME M CTAG COMPLD "&lt;TAP&gt;:&lt;TACC_AIDA&gt;,&lt;TACC_AIDB&gt;,&lt;MD&gt;],[&lt;CROSSCONNECTID1&gt;], &lt;AIDUNIONID&gt;,&lt;PATHWIDTH&gt;" ; </pre>	
<b>Output Example</b>	<pre> TID-000 1998-06-20 14:30:00 M 001 COMPLD "241:STS-2-1-1,STS-2-1-2,MONE,STS-12-1-1,STS-13-1-1,STS1" ; </pre>	
<b>Output Parameters</b>	<TAP>	The assigned number for the AID being used as a test access point. TAP is an integer.
	<TACC_AIDA>	Access identifier from the <a href="#">"26.11 CrossConnectId" section on page 26-25</a> . The A path of the test access point. The first STS/VT path of the TAP.
	<TACC_AIDB>	Access identifier from the <a href="#">"26.11 CrossConnectId" section on page 26-25</a> . The B path of the test access point. The second STS/VT path of the TAP. For single FAD TAP this path will be empty.
	<MD>	(Optional) Test access mode. It identifies the mode of access between the TAP and the circuit connected to the TAP. The parameter type is TACC_MODE, which is the test access mode.
	<ul style="list-style-type: none"> <li>• LOOPE</li> </ul>	Indicates to split both the A and B paths. Connect the line incoming from E direction to the line outgoing in the E direction, and connect this looped configuration to the FAD. The line outgoing in the F direction will have a QRS connected, and the line incoming from the F direction shall be terminated by the nominal characteristic impedance of the line. Intrusive test access mode.
	<ul style="list-style-type: none"> <li>• LOOPF</li> </ul>	Indicates to split both the A and B paths. Connect the line incoming from F direction to the line outgoing in the F direction, and connect this looped configuration to the FAD. The line outgoing in the E direction shall have a QRS connected, and the line incoming from the E direction shall be terminated by the nominal characteristic impedance of the line. Intrusive test access mode.
	<ul style="list-style-type: none"> <li>• MONE</li> </ul>	Indicates that a monitor connection is to be provided from the FAD to the A transmission path of the accessed circuit.
	<ul style="list-style-type: none"> <li>• MONEF</li> </ul>	Indicates that a monitor connection is to be provided from the FAD1 to a DFAD, or from the odd pair of a FAP to the A transmission path and from FAD2 of the same DFAD, or from the even pair of a FAP to the B transmission path of the accessed circuit.
	<ul style="list-style-type: none"> <li>• MONF</li> </ul>	Indicates that a monitor connection is to be provided from the FAD to the B transmission path of the accessed circuit.

• SPLTA	Indicates that a connection is to be provided from both the E and F sides of the A transmission path of the circuit under test to the FAD and split the A transmission path. Intrusive test access mode.
• SPLTB	Indicates that a connection is to be provided from both the E and F sides of the B transmission path of the circuit under test to the FAD and split the B transmission path. Intrusive test access mode.
• SPLTE	Indicates to split both the A and B paths and connect the E side of the accessed circuit to the FAD. The line outgoing in the F direction shall have a QRS connected, and the line incoming from the F direction shall have a QRS connected, and the line incoming from the E direction shall be terminated by the nominal characteristic impedance of the line. Intrusive test access mode.
• SPLTEF	Indicates to split both the A and B paths, and connect the E side of the accessed circuit to FAD1 and the F side to FAD2. Intrusive test access mode.
• SPLTF	Indicates to split both the A and B paths, and connect the F side of the accessed circuit to the FAD. The line outgoing in the E direction shall have a QRS connected, and the line incoming in the E direction shall have a QRS connected, and the line incoming from the E direction shall be terminated by the nominal characteristic impedance of the line. Intrusive test access mode.
<CROSSCONNECTID1>	(Optional) Access identifier from the <a href="#">“26.11 CrossConnectId” section on page 26-25</a> . The E path of the cross-connect.
<PATHWIDTH>	The cross-connection width. The parameter type is CRS_TYPE, which is the cross-connection type.
• STS	Indicates all the STS cross-connections.
• STS1	STS1 cross-connect
• STS3C	STS3C cross-connect
• STS6C	STS6C cross-connect
• STS9C	STS9C cross-connect
• STS12C	STS12C cross-connect
• STS18C	STS18C cross-connect
• STS24C	STS24C cross-connect
• STS36C	STS36C cross-connect
• STS48C	STS48C cross-connect
• STS192C	STS192C cross-connect
• VT	Indicates all the VT1 cross-connections.
• VT1	VT1 cross-connect
• VT2	VT2 cross-connect
<CROSSCONNECTID2>	(Optional) Access identifier from the <a href="#">“26.11 CrossConnectId” section on page 26-25</a> . The F path of the cross-connect.

## 21.138 RTRV-TADRMAP

(Cisco ONS 15454) The Retrieve Target Identifier Address Mapping (RTRV-TADRMAP) command retrieves the contents of the TADRMAP table.

### Usage Guidelines

When MODE is NSAP, TID name of the NODE can be specified to trigger TARP.

### Category

System

### Security

Retrieve

### Input Format

RTRV-TADRMAP:[<TID>]:[<AID>]:<CTAG>[:::MODE=<MODE>];

### Input Example

RTRV-TADRMAP:CISCO:AIP:100:::MODE=PROV;

Additional input examples:

1. To retrieve another node's NSAP (TID=NODE-1) while using a TL1 session on the local node (TID=NODE-2), follow this input example:

```
RTRV-TADRMAP:NODE-2:NODE-1:1:::MODE=NSAP;
```

Output example:

```
NODE-2 2006-01-26 14:47:30
```

```
M 1 COMPLD
```

```
"TIDNAME=NODE-1,NSAP=TARP request has been initiated. Check again later."
```

```
;
```

```
RTRV-TADRMAP:NODE-2:::123;
```

```
NODE-2 2006-01-26 14:47:38
```

```
M 123 COMPLD
```

```
"TIDNAME=NODE-2,IPADDR=10.92.24.146,"
```

```
"TIDNAME=NODE-1,NSAP=39840F8000000000000000000000000010010CFCE5A0200"
```

```
;
```

2. To retrieve the NSAP address of a node (TID=NODE-2) itself, follow this input example:

```
RTRV-TADRMAP:NODE-2:NODE-2:1:::MODE=NSAP;
```

Output example:

```
NODE-2 2006-01-26 14:48:07
```

```
M 1 COMPLD
```

```
"TIDNAME=NODE-2,NSAP=39840F800000000000000000000000001000BFCF8A88500"
```

```
;
```

3. To retrieve the local TARP data cache (TDC) of a node (no AID required) follow this input example:  
RTRV-TADRMAP:NODE-2::123:::MODE=NSAP;

Output example:

NODE-2 2006-01-26 13:47:38

M 123 COMPLD

"TIDNAME=FOREIGN-NODE-1,NSAP=39840F800000000000000000000000001000075DE520800"

"TIDNAME=FOREIGN-NODE-2,NSAP=39840F800000000000000000000000001000075D07A4A00"

"TIDNAME=NODE-1,NSAP=39840F8000000000000000000000000010010CFCE5A0200"

;

Input Parameters		
<AID>		AID is a target identifier from the “26.1 ALL” section on page 26-1. AID is a string. If AID is not null, MODE must be NSAP.
<MODE>		Must not be null. The parameter type is MODE, which determines the category of addresses to return.
	• ALL	Discovered and provisioned addresses
	• DISC	Discovered addresses
	• IP	IP addresses
	• NSAP	NSAP addresses
	• PROV	Provisioned

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“[TID=<TID>],[IP ADDRESS =<IPADDRESS>],[NSAP=<NSAP>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“TID=RANGERS1,IP ADDRESS = 64.101.245.5,
NSAP=39840FFFFFFFOOOODDDDA01D00F0400000700”
;
```

Output Parameters		
<TID>		(Optional) Target identifier. TID is a string.
<IPADDRESS>		(Optional) IP address. IPADDRESS is a string.
<NSAP>		(Optional) NSAP address. NSAP is a string.

## 21.139 RTRV-TH-<MOD2>

(Cisco ONS 15454) The Retrieve Threshold for 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 5GIB, 8GFC, CLNT, D1VIDEO, DS1, DV6000, DVBAS1, E1, E3, E4, EC1, ESCON, ETRCLO, ETH, FSTE, G1000, GFPOS, GIGE, HDTV, ISC1, ILK, ISCCOMPAT, ISC3PEER2R,

ISC3PEER1G, ISC3PEER2G, OC12, OC192, OC3, OC48, OC768, OCH, OMS, OTS, OTU3, POS, STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, STS9C, T1, T3, VT1, or VT2 (RTRV-TH-<MOD2>) command retrieves the threshold level of one or more monitored parameters.

---

**Usage Guidelines**

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

**Note**

- After the BLSR switch, the working path is switched out, the traffic goes through the protection path, and the threshold can be retrieved from the protection path.
  - If there is an STS PCA on the protection path during BLSR switching, the PCA path is preemptive; sending this command on the protection path after the BLSR switch, the command returns the PMs off the protection path, not from the PCA path.
  - The message is issued to retrieve the thresholds for PM and alarm thresholds. If it is used to retrieve the alarm thresholds, the time-period is not applicable.
  - The presentation rules are as follows:
    - Client port only–Laser, Alarm and SONET Thresholds are applicable and will appear. Laser and alarm thresholds are only for near end. If the card payload is in SONET mode, then SONET thresholds will appear. The Receiver Temperature Montypes (RXT) are only applicable to the Trunk Port. The Transceiver Voltage Montypes (XCVR) are not applicable, though it might be displayed or handled.
    - Laser and Alarm thresholds are always available. Laser and alarm thresholds are only for near end. If ITU-T G.709 is enabled, then the OTN thresholds will appear. If ITU-T G.709 is enabled and FEC is enabled, then the FEC thresholds will appear. If the card payload is in SONET mode, then SONET thresholds will appear. The Transceiver Voltage Montypes (XCVR) are not applicable, though it is displayed or handled.
  - Refer to the *Cisco ONS 15454 SONET TL1 Reference Guide* for specific card provisioning rules.
- 

---

**Category**

Performance

---

**Security**

Retrieve

---

**Input Format**

RTRV-TH-<MOD2>:[<TID>]:<AID>:<CTAG>::[<MONTYPE>],[<LOCN>],[<TMPER>][:];

---

**Input Example**

RTRV-TH-T3:CISCO:FAC-1-3:1234::CVL,NEND,15-MIN;

## Input Parameters

<AID>	Access identifier from the “26.1 ALL” section on page 26-1.
<MONTYPE>	Monitored type.
	<b>Note</b> MONTYPE defaults to CVL for OCN/EC1/DSN, to ESP for STSp, to UASV for VT1, and to AISSP for the DS1 layer of the DS3XM card.
	A null value is equivalent to ALL. The parameter type is ALL_MONTYPE, which is the monitoring type list.
• AISSP	Alarm Indication Signal Seconds—Path
• ALL	All possible values
• BBE-PM	OTN—Background Block Errors—Path Monitor Point
• BBE-SM	OTN—Background Block Errors—Section Monitor Point
• BBER-PM	OTN—Background Block Error Ratio—Path Monitor Point expressed as one tenth of a percentage.
• BBER-SM	OTN—Background Block Error Ratio—Section Monitor Point expressed as one tenth of a percentage.
• BIEC	FEC—Bit Errors Corrected
• BIT-EC	the number of bit errors corrected by the FEC algorithm
• CGV	8B10B—Code Group Violations
• CSSP	Controlled Slip Seconds—Path (DSXM-12 FDL/T1.403 PM count)
• CVCPP	Coding Violations—CP-Bit Path
• CVL	Coding Violations—Line
• CVP	Coding Violations—Path
• CVS	Coding Violations—Section
• CVV	Coding Violations—Section
• DCG	8B10B—Data Code Groups
• ESAP	Errored Second Type A-Path (DS3XM-12 DS1 PM count)
• ESBP	Errored Second Type B-Path (DS3XM-12 DS1 PM count)
• ESCPP	Errored Seconds—CP—Bit Path
• ESL	Errored Seconds—Line
• ESNPFE	Errored Second—Network Path (DS3XM-12 DS1 PM count)
• ESP	Errored Seconds—Path
• ES-PM	OTN—Errored Seconds—Path Monitor Point
• ES-SM	OTN—Errored Seconds—Section Monitor Point
• ESR	Errored Second—Ratio
• ESR-PM	Errored Seconds Ratio—Path monitor Point expressed as one tenth of a percentage
• ESR-SM	Errored Seconds Ratio—Section monitor Point expressed as one tenth of a percentage
• ESS	Errored Seconds—Section
• ESV	Errored Seconds—VT Path
• etherStatsBroadcastPkts	The total number of good packets received that were directed to a multicast address

• etherStatsCollisions	Number of transmit packets that are collisions
• etherStatsCRCAlignErrors	The total number of packets received that have a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets
• etherStatsDropEvents	Number of received frames dropped at the port level
• etherStatsFragments	The total number of packets received that were less than 64 octets
• etherStatsJabbers	The total number of packets received that are longer than 1518 octets
• etherStatsOctets	The total number of octets of data
• etherStatsOversizePkts	The total number of packets received that are longer than 1518 octets
• etherStatsPkts	The total number of packets (including bad packets, broadcast packets, and multicast packets) received
• etherStatsUndersizePkts	The total number of packets received that are less than 64 octets
• FCP	Failure Count—Line
• FC-PM	OTN—Failure Count—Path Monitor Point
• FC-SM	OTN—Failure Count—Section Monitor Point
• HP-AR	Availability Ratio
• HP-BBE	High-Order Path Background Block Error
• HP-BBER	High-Order Path Background Block Error Ratio
• HP-EB	High-Order Path Errored Block
• HP-ES	High-Order Path Errored Second
• HP-ESA	High-Order Path Errored Seconds—A
• HP-ESB	High-Order Path Errored Seconds—B
• HP-ESR	High-Order Path Errored Second Ratio
• HP-FC	High-Order Path Failure Count
• HP-NPJC-PDET	High Order Path Negative Pointer Justification Count
• HP-NPJC-PGEN	High Order Path, Negative Pointer Justification Count
• HP-OI	Outage Intensity
• HP-PJCDIFF	High Order Path Pointer Justification Count Difference
• HP-PJCS-PDET	High Order Path Pointer Justification Count
• HP-PJCS-PGEN	High Order Path Pointer Justification Count Seconds
• HP-PPJC-PDET	High Order Path Positive Pointer Justification Count
• HP-PPJC-PGEN	High Order Path, Positive Pointer Justification Count
• HP-SEPI	The number of SEP events in available time
• HP-SES	High-Order Path Severely Errored Seconds
• HP-SESR	High-Order Path Severely Errored Second Ratio
• HP-UAS	High-Order Path Unavailable Seconds
• ifInBroadcastPkts	Number of broadcast packets received since the last counter reset
• ifInDiscards	The number of inbound packets
• ifInErrorBytePktss	Receive Error Byte
• ifInErrors	The number of inbound packets (or transmission units) that contained errors

• ifInFramingErrorPkts	Receive Framing Error
• ifInJunkInterPkts	Receive Interpacket Junk
• ifInMulticastPkts	Number of multicast packets received since the last counter reset
• ifInOctets	Number of bytes transmitted since the last counter reset
• ifInUcastPkts	Number of unicast packets received since the last counter reset
• ifOutBroadcastPkts	Number of broadcast packets transmitted
• ifOutDiscards	The number of outbound packets
• ifOutErrors	The number of outbound packets (or transmission units) that could not be transmitted because of errors
• ifOutMulticastPkts	Number of multicast packets transmitted
• ifOutPayloadCrcErrors	Received payload CRC errors
• ifOutUcastPkts	Number of unicast packets transmitted
• IOS	8B10B- Idle Ordered Sets
• IPC	Invalid Packet Count
• LBCL-AVG	Average Laser Bias Current in microA
• LBCL-MAX	Maximum Laser Bias Current in microA
• LBCL-MIN	Minimum Laser Bias Current in microA
• LBCN	Normalized Laser Bias Current for OC3-8
• LBCN-HWT	Normalized Laser Bias Current—Higher Threshold
• LBCN-LWT	Normalized Laser Bias Current—Lower Threshold
• LOSSL	Loss of Signal Seconds—Line
• LP-BBE	Low-Order Path Background Block Error
• LP-BBER	Low-Order Path Background Block Error Ratio
• LP-EB	Low-Order Path Errored Block
• LP-ES	Low-Order Path Errored Second
• LP-ESA	Low-Order Path Errored Seconds-A
• LP-ESB	Low-Order Path Errored Seconds-B
• LP-ESR	Low-Order Path Errored Second Ratio
• LP-FC	Low-Order Path Failure Count
• LP-NPJC-DET	Low-Order Negative Pointer Justification Count, Detected
• LP-NPJC-GEN	Low Order Negative Pointer Justification Count, Generated
• LP-PPJC-DET	Low-Order Positive Pointer Justification Count, Detected
• LP-PPJC-GEN	Low-Order positive Pointer Justification Count, Generated
• LP-SEP	Low-Order Path Severely Errored Period
• LP-SEPI	Low-Order Path Severely Errored Period Intensity
• LP-SES	Low-Order Path Severely Errored
• LP-UAS	Low-Order Path Unavailable Seconds
• MS-PSC	Protection switch count
• MS-PSD	Protection switch duration
• NIOS	8B10B—Non Idle Ordered Sets
• NPJC-PDET	Negative Pointer Justification Count, Path Detected
• NPJC-PGEN	Negative Pointer Justification Count, Path Generated

• OPR-AVG	Average Receive Power in one tenth of a microwatt
• OPR-MAX	Maximum Receive Power in one tenth of a microwatt
• OPR-MIN	Minimum Receive Power in one tenth of a microwatt
• OPRN	Normalized Optical Receive Power for OC3-8
• OPRN-MAX	Maximum value for OPRN
• OPRN-MIN	Minimum value for OPRN
• OPT-AVG	Average Transmit Power in one tenth of a microwatt
• OPT-MAX	Maximum Transmit Power in one tenth of a microwatt
• OPT-MIN	Minimum Transmit Power in one tenth of a microwatt
• OPTN	Normalized value for Optical Power Transmitted for the OC3-8 card
• OPTN-MAX	Maximum value for OPTN
• OPTN-MIN	Minimum value for OPTN
• OPWR-AVG	Optical Power—Average Interval Value in one tenth of a dBm
• OPWR-MAX	Optical Power—Maximum Interval Value in one tenth of a dBm
• OPWR-MIN	Optical Power—Minimum Interval Value in one tenth of a dBm
• PPJC-PDET	Positive Pointer Justification Count, Path Detected
• PPJC-PGEN	Positive Pointer Justification Count, Path Generated
• PSC	Protection Switching Count
• PSC-R	Protection Switching Count—Ring
• PSC-S	Protection Switching Count—Span
• PSC-W	Protection Switching Count—Working
• PSD	Protection Switching Duration
• PSD-R	Protection Switching Duration—Ring
• PSD-S	Protection Switching Duration—Span
• PSD-W	Protection Switching Duration—Working
• SASCPP	Severely Errored Framing/AIS Second—CP-Bit Path
• SASP	Severely Errored Framing/AIS Seconds Path
• SEFS	Severely Errored Framing Seconds
• SEFSP	Severely Errored Framing Seconds—Path (DS3XM-12 DS1 PM count)
• SESCOPP	Severely Errored Second—CP-Bit Path
• SESL	Severely Errored Second—Line
• SESNPFE	Severely Errored Second—Network Path (DS3XM-12 DS1 PM count)
• SESP	Severely Errored Second—Path
• SES-PM	OTN—Severely Errored Second—Path
• SESR-PM	OTN—Severely Errored Second Ratio—Path Monitor Point expressed as one tenth of a percentage
• SESR-SM	OTN—Severely Errored Second Ratio—Section Monitor Point expressed as one tenth of a percentage
• SESS	Severely Errored Second—Section
• SES-SM	OTN—Severely Errored Second—Section Monitor Point

• SESV	Severely Errored Second—VT Path
• UASCPP	Unavailable Second—CP-Bit Path
• UASL	Unavailable Second—Line
• UASNPFE	Unavailable Second—Network Path (DS3XM-12 DS1 PM count)
• UASP	Unavailable Second—Path
• UAS-PM	OTN—Unavailable Second—Path Monitor Point
• UAS-SM	OTN—Unavailable Second—Section Monitor Point
• UASV	Unavailable Second—VT Path
• UNC-WORDS	FEC—Uncorrectable Words
• VPC	Valid Packet Count
<LOCN>	Location associated with a particular command in reference to the entity identified by the AID. LOCN defaults to NEND (near end). A null value is equivalent to ALL. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<TMPER>	Accumulation time period for performance counters. Defaults to 15-MIN. Must not be null. The parameter type is TMPER, which is the accumulation time period for the performance management center
• 1-DAY	Performance parameter accumulation interval length; every 24-hours. For SONET PM data only one day of history data is available. For RMON managed PM data seven days of history data are available.
• 1-HR	Performance parameter accumulation interval length; every 1 hour. This is only applicable to RMON managed PM data. There are 24 hours of history data available.
• 1-MIN	Performance parameter accumulation interval length; every 1 minute. This is only applicable to RMON managed PM data. There are 60 minutes of history available.
• 15-MIN	Performance parameter accumulation interval length; every 15 minutes. There are 32 15-MIN buckets of history data available for this accumulation interval length.
• RAW-DATA	Performance parameter accumulation interval length; starting from the last time the counters were cleared. This is only applicable to RMON managed PMs.

**Output Format**

```

SID DATE TIME
M CTAG COMPLD
“<AID>,[<AIDTYPE>]:<MONTYPE>,[<LOCN>],[<THLEV>],[<TMPER>]”
;

```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
  "FAC-1-3,DS3:CVL,NEND,,1,15-MIN"
;
```

**Output Parameters**

<AID>	Access identifier from the <a href="#">“26.1 ALL” section on page 26-1</a> .
<AIDTYPE>	(Optional) Type of facility, link, or other addressable entity targeted by the message. The parameter type is MOD2B, which is the alarm type.
• 1GFC	1-Gigabit Fibre Channel payload
• 1GFICON	1-Gigabit fiber connectivity payload
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• 4GFC	4-Gigabit Fibre Channel payload
• 4GFICON	4-Gigabit fiber connectivity payload
• 40GIGE	40-Gigabit Ethernet
• 5GIB	5Gbps InfiniBand (IB_5G) payload
• 8GFC	8-Gigabit Fibre Channel payload
• BITS	BITS alarm
• CLNT	Client facility for MXP/TXP cards
• COM	Common alarm
• DS1	DS1 alarm
• DS3I	DS3I alarm
• DVBASI	Digital Video Broadband Asynchronous Serial Interface (DVBASI) payload
• E100	E100 alarm
• E1000	E1000 alarm
• EC1	EC1 alarm
• ENV	ENV alarm
• EQPT	EQPT alarm
• FSTE	Fast Ethernet Port alarm
• G1000	G1000 alarm
• GIGE	Gigabit Ethernet port alarm
• ISC1	InterSystem Channel, a protocol defined by IBM (ISC1) payload
• ISC3PEER1G	1 Gbps ISC3 Peer
• ISC3PEER2G	2 Gbps ISC3 Peer
• ISC3PEER2R	1 Gbps or 2 Gbps ISC3 peer used in transparent (2R) mode
• ISCCOMPAT	1 Gbps ISC1, ISC2, and ISC3 compatibility
• OC3	OC3 alarm
• OC12	OC12 alarm
• OC48	OC48 alarm
• OC192	OC192 alarm

• OC768	OC768 alarm
• OCH	Optical channel
• OMS	Optical Multiplex Section
• OTS	Optical Transport Section
• OTU3	Optical Transport Unit Level 3
• POS	POS port alarm
• STS1	STS1 alarm
• STS3C	STS3c alarm
• STS6C	STS6c alarm
• STS9C	STS9c alarm
• STS18C	STS18c alarm
• STS12C	STS12c alarm
• STS24C	STS24c alarm
• STS36C	STS36c alarm
• STS48C	STS48c alarm
• STS192C	STS192c alarm
• SYNCN	SYNCN alarm
• T1	T1 alarm
• T3	T3 alarm
• TCC	TCC alarm
• VT1	VT1 alarm
• VT2	VT2 alarm
<MONTYPE>	Monitored type. The parameter type is ALL_MONTYPE, which is the monitoring type list.
• AISSP	Alarm Indication Signal Seconds—Path
• ALL	All possible values
• BBE-PM	OTN—Background Block Errors—Path Monitor Point
• BBE-SM	OTN—Background Block Errors—Section Monitor Point
• BBER-PM	OTN—Background Block Error Ratio—Path Monitor Point expressed as one tenth of a percentage.
• BBER-SM	OTN—Background Block Error Ratio—Section Monitor Point expressed as one tenth of a percentage.
• BIEC	FEC—Bit Errors Corrected
• BIT-EC	the number of bit errors corrected by the FEC algorithm
• CGV	8B10B—Code Group Violations
• CSSP	Controlled Slip Seconds—Path (DSXM-12 FDL/T1.403 PM count)
• CVCPP	Coding Violations—CP-Bit Path
• CVL	Coding Violations—Line
• CVP	Coding Violations—Path
• CVS	Coding Violations—Section
• CVV	Coding Violations—Section
• DCG	8B10B—Data Code Groups

• ESAP	Errored Second Type A-Path (DS3XM-12 DS1 PM count)
• ESBP	Errored Second Type B-Path (DS3XM-12 DS1 PM count)
• ESCPP	Errored Seconds—CP—Bit Path
• ESL	Errored Seconds—Line
• ESNPFE	Errored Second—Network Path (DS3XM-12 DS1 PM count)
• ESP	Errored Seconds—Path
• ES-PM	OTN—Errored Seconds—Path Monitor Point
• ES-SM	OTN—Errored Seconds—Section Monitor Point
• ESR	Errored Second—Ratio
• ESR-PM	Errored Seconds Ratio—Path monitor Point expressed as one tenth of a percentage
• ESR-SM	Errored Seconds Ratio—Section monitor Point expressed as one tenth of a percentage
• ESS	Errored Seconds—Section
• ESV	Errored Seconds—VT Path
• etherStatsBroadcastPkts	The total number of good packets received that were directed to a multicast address
• etherStatsCollisions	Number of transmit packets that are collisions
• etherStatsCRCAlignErrors	The total number of packets received that have a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets
• etherStatsDropEvents	Number of received frames dropped at the port level
• etherStatsFragments	The total number of packets received that were less than 64 octets
• etherStatsJabbers	The total number of packets received that are longer than 1518 octets
• etherStatsOctets	The total number of octets of data
• etherStatsOversizePkts	The total number of packets received that are longer than 1518 octets
• etherStatsPkts	The total number of packets (including bad packets, broadcast packets, and multicast packets) received
• etherStatsUndersizePkts	The total number of packets received that are less than 64 octets
• FCP	Failure Count—Line
• FC-PM	OTN—Failure Count—Path Monitor Point
• FC-SM	OTN—Failure Count—Section Monitor Point
• HP-AR	Availability Ratio
• HP-BBE	High-Order Path Background Block Error
• HP-BBER	High-Order Path Background Block Error Ratio
• HP-EB	High-Order Path Errored Block
• HP-ES	High-Order Path Errored Second
• HP-ESA	High-Order Path Errored Seconds—A
• HP-ESB	High-Order Path Errored Seconds—B
• HP-ESR	High-Order Path Errored Second Ratio
• HP-FC	High-Order Path Failure Count

• HP-NPJC-PDET	High-Order Path Negative Pointer Justification Count
• HP-NPJC-PGEN	High-Order Path Negative Pointer Justification Count
• HP-OI	Outage Intensity
• HP-PJCDIFF	High-Order Path Pointer Justification Count Difference
• HP-PJCS-PDET	High-Order Path Pointer Justification Count Seconds, Path Detected
• HP-PJCS-PGEN	High-Order Path Pointer Justification Count Seconds, Path Generated
• HP-PPJC-PDET	High-Order Path Positive Pointer Justification Count, Path Detected
• HP-PPJC-PGEN	High-Order Path, Positive Pointer Justification Count, Path Generated
• HP-SEPI	The number of SEP events in available time
• HP-SES	High-Order Path Severely Errored Seconds
• HP-SESR	High-Order Path Severely Errored Second Ratio
• HP-UAS	High-Order Path Unavailable Seconds
• ifInBroadcastPkts	Number of broadcast packets received since the last counter reset
• ifInDiscards	The number of inbound packets
• ifInErrorBytePktss	Receive Error Byte
• ifInErrors	The number of inbound packets (or transmission units) that contained errors
• ifInFramingErrorPkts	Receive Framing Error
• ifInJunkInterPkts	Receive Interpacket Junk
• ifInMulticastPkts	Number of multicast packets received since the last counter reset
• ifInOctets	Number of bytes transmitted since the last counter reset
• ifInUcastPkts	Number of unicast packets received since the last counter reset
• ifOutBroadcastPkts	Number of broadcast packets transmitted
• ifOutDiscards	The number of outbound packets
• ifOutErrors	The number of outbound packets (or transmission units) that could not be transmitted because of errors
• ifOutMulticastPkts	Number of multicast packets transmitted
• ifOutPayloadCrcErrors	Received payload CRC errors
• ifOutUcastPkts	Number of unicast packets transmitted
• IOS	8B10B- Idle Ordered Sets
• IPC	Invalid Packet Count
• LBCL-AVG	Average Laser Bias Current in microA
• LBCL-MAX	Maximum Laser Bias Current in microA
• LBCL-MIN	Minimum Laser Bias Current in microA
• LBCN	Normalized Laser Bias Current for OC3-8
• LBCN-HWT	Normalized Laser Bias Current—Higher Threshold
• LBCN-LWT	Normalized Laser Bias Current—Lower Threshold
• LOSSL	Loss of Signal Seconds—Line
• LP-BBE	Low-Order Path Background Block Error

• LP-BBER	Low-Order Path Background Block Error Ratio
• LP-EB	Low-Order Path Errored Block
• LP-ES	Low-Order Path Errored Second
• LP-ESA	Low-Order Path Errored Seconds-A
• LP-ESB	Low-Order Path Errored Seconds-B
• LP-ESR	Low-Order Path Errored Second Ratio
• LP-FC	Low-Order Path Failure Count
• LP-NPJC-DET	Low-Order Negative Pointer Justification Count, Detected
• LP-NPJC-GEN	Low Order Negative Pointer Justification Count, Generated
• LP-PPJC-DET	Low-Order Positive Pointer Justification Count, Detected
• LP-PPJC-GEN	Low-Order positive Pointer Justification Count, Generated
• LP-SEP	Low-Order Path Severely Errored Period
• LP-SEPI	Low-Order Path Severely Errored Period Intensity
• LP-SES	Low-Order Path Severely Errored
• LP-UAS	Low-Order Path Unavailable Seconds
• MS-PSC	Protection switch count
• MS-PSD	Protection switch duration
• NIOS	8B10B—Non Idle Ordered Sets
• NPJC-PDET	Negative Pointer Justification Count, Path Detected
• NPJC-PGEN	Negative Pointer Justification Count, Path Generated
• OPR-AVG	Average Receive Power in one tenth of a microwatt
• OPR-MAX	Maximum Receive Power in one tenth of a microwatt
• OPR-MIN	Minimum Receive Power in one tenth of a microwatt
• OPRN	Normalized Optical Receive Power for OC3-8
• OPRN-MAX	Maximum value for OPRN
• OPRN-MIN	Minimum value for OPRN
• OPT-AVG	Average Transmit Power in one tenth of a microwatt
• OPT-MAX	Maximum Transmit Power in one tenth of a microwatt
• OPT-MIN	Minimum Transmit Power in one tenth of a microwatt
• OPTN	Normalized value for Optical Power Transmitted for the OC3-8 card
• OPTN-MAX	Maximum value for OPTN
• OPTN-MIN	Minimum value for OPTN
• OPWR-AVG	Optical Power—Average Interval Value in one tenth of a dBm
• OPWR-MAX	Optical Power—Maximum Interval Value in one tenth of a dBm
• OPWR-MIN	Optical Power—Minimum Interval Value in one tenth of a dBm
• PPJC-PDET	Positive Pointer Justification Count, Path Detected
• PPJC-PGEN	Positive Pointer Justification Count, Path Generated
• PSC	Protection Switching Count
• PSC-R	Protection Switching Count—Ring
• PSC-S	Protection Switching Count—Span
• PSC-W	Protection Switching Count—Working

• PSD	Protection Switching Duration
• PSD-R	Protection Switching Duration—Ring
• PSD-S	Protection Switching Duration—Span
• PSD-W	Protection Switching Duration—Working
• SASCPP	Severely Errored Framing/AIS Second—CP-Bit Path
• SASP	Severely Errored Framing/AIS Seconds Path
• SEFS	Severely Errored Framing Seconds
• SEFSP	Severely Errored Framing Seconds—Path (DS3XM-12 DS1 PM count)
• SESCPP	Severely Errored Second—CP-Bit Path
• SESL	Severely Errored Second—Line
• SESNPFE	Severely Errored Second—Network Path (DS3XM-12 DS1 PM count)
• SESP	Severely Errored Second—Path
• SES-PM	OTN—Severely Errored Second—Path
• SESR-PM	OTN—Severely Errored Second Ratio—Path Monitor Point expressed as one tenth of a percentage
• SESR-SM	OTN—Severely Errored Second Ratio—Section Monitor Point expressed as one tenth of a percentage
• SESS	Severely Errored Second—Section
• SES-SM	OTN—Severely Errored Second—Section Monitor Point
• SESV	Severely Errored Second—VT Path
• UASCPP	Unavailable Second—CP-Bit Path
• UASL	Unavailable Second—Line
• UASNPFE	Unavailable Second—Network Path (DS3XM-12 DS1 PM count)
• UASP	Unavailable Second—Path
• UAS-PM	OTN—Unavailable Second—Path Monitor Point
• UAS-SM	OTN—Unavailable Second—Section Monitor Point
• UASV	Unavailable Second—VT Path
• UNC-WORDS	FEC—Uncorrectable Words
• VPC	Valid Packet Count
<LOCN>	(Optional) Location associated with a particular command. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<THELV>	Threshold level. THLEV is a float.
<TMPER>	(Optional) Accumulation time period for performance counters. The parameter type is TMPER, which is the accumulation time period for the performance management center.
• 1-DAY	Performance parameter accumulation interval length; every 24-hours. For SONET PM data, only one day of history data is available. For RMON managed PM data, seven days of history data are available.

• 1-HR	Performance parameter accumulation interval length; every 1 hour. This is only applicable to RMON managed PM data. There are 24 hours of history data available.
• 1-MIN	Performance parameter accumulation interval length; every 1 minute. This is only applicable to RMON managed PM data. There are 60 minutes of history available.
• 15-MIN	Performance parameter accumulation interval length; every 15 minutes. There are 32 15-MIN buckets of history data available for this accumulation interval length.
• RAW-DATA	Performance parameter accumulation interval length; starting from the last time the counters were cleared. This is only applicable to RMON managed PMs.

## 21.140 RTRV-TH-ALL

(Cisco ONS 15454) The Retrieve Threshold All (RTRV-TH-ALL) command retrieves the threshold level of all monitored parameters on the NE.

### Usage Guidelines

- After a BLSR switch, the working path is switched out, the traffic goes through the protection path, and the threshold can be retrieved from the protection STS path.
- If there is an STS PCA on the protection path during BLSR switching, the PCA path is preemptive; sending this command on the protection path after a BLSR switch, the command returns the PMs from the protection path, not from the PCA path.
- Multiple RTRV completion codes will appear after the execution of this command according to Telcordia GR-1831-CORE for bulk retrievals. The final completion code after the multiple RTRV codes is COMPLD.
- Some monitored types are not available for some cards or cross-connect types. In that case, a 0 value will appear for the monitored type. This will happen only when a user requests the thresholds of a specific monitored parameter on the NE, and the monitored type does not apply to that card or cross-connect type. When the user does not filter by monitored type, the applicable thresholds will be retrieved.
- If the user requests the thresholds of a particular monitored type and if the monitored type is not applicable to some of the entities, DENY will not be returned.
- Refer to the *Cisco ONS 15454 SONET TL1 Reference Guide* for specific card provisioning rules.

### Category

Performance

### Security

Retrieve

### Input Format

RTRV-TH-ALL:[<TID>]::<CTAG>:::<MONTYPE>],[<LOCATION>],[<TMPER>][::];

**Input Example**

```
RTRV-TH-ALL:CHARGERS6::123::CVL,NEND,15-MIN;
```

**Input Parameters**

<MONTYPE>	Monitored type. A null value defaults to ALL. The parameter type is ALL_MONTYPE, which is the monitoring type list.
• AISSP	Alarm Indication Signal Seconds—Path
• ALL	All possible values
• BBE-PM	OTN—Background Block Errors—Path Monitor Point
• BBE-SM	OTN—Background Block Errors—Section Monitor Point
• BBER-PM	OTN—Background Block Error Ratio—Path Monitor Point expressed as one tenth of a percentage
• BBER-SM	OTN—Background Block Error Ratio—Section Monitor Point expressed as one tenth of a percentage
• BIEC	FEC—Bit Errors Corrected
• BIT-EC	the number of bit errors corrected by the FEC algorithm
• CGV	8B10B—Code Group Violations
• CSSP	Controlled Slip Seconds—Path (DS3XM-12 FDL/T1.403 PM count)
• CVCPP	Coding Violations—CP-Bit Path
• CVL	Coding Violations—Line
• CVP	Coding Violations—Path
• CVS	Coding Violations—Section
• CVV	Coding Violations—Section
• DCG	8B10B—Data Code Groups
• ESAP	Errored Second Type A-Path (DS3XM-12 DS1 PM count)
• ESBP	Errored Second Type B-Path (DS3XM-12 DS1 PM count)
• ESCPP	Errored Seconds—CP—Bit Path
• ESL	Errored Seconds—Line
• ESNPFE	Errored Second—Network Path (DS3XM-12 DS1 PM count)
• ESP	Errored Seconds—Path
• ES-PM	OTN—Errored Seconds—Path Monitor Point
• ES-SM	OTN—Errored Seconds—Section Monitor Point
• ESR	Errored Second—Ratio
• ESR-PM	Errored Seconds Ratio—Path monitor Point expressed as one tenth of a percentage
• ESR-SM	Errored Seconds Ratio—Section monitor Point expressed as one tenth of a percentage
• ESS	Errored Seconds—Section
• ESV	Errored Seconds—VT Path
• etherStatsBroadcastPkts	The total number of good packets received that were directed to a multicast address
• etherStatsCollisions	Number of transmit packets that are collisions
• etherStatsCRCAAlignErrors	The total number of packets received that have a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets

• etherStatsDropEvents	Number of received frames dropped at the port level
• etherStatsFragments	The total number of packets received that were less than 64 octets
• etherStatsJabbers	The total number of packets received that are longer than 1518 octets
• etherStatsOctets	The total number of octets of data
• etherStatsOversizePkts	The total number of packets received that are longer than 1518 octets
• etherStatsPkts	The total number of packets (including bad packets, broadcast packets, and multicast packets) received
• etherStatsUndersizePkts	The total number of packets received that are less than 64 octets
• FCP	Failure Count—Line
• FC-PM	OTN—Failure Count—Path Monitor Point
• FC-SM	OTN—Failure Count—Section Monitor Point
• HP-AR	Availability Ratio
• HP-BBE	High-Order Path Background Block Error
• HP-BBER	High-Order Path Background Block Error Ratio
• HP-EB	High-Order Path Errored Block
• HP-ES	High-Order Path Errored Second
• HP-ESA	High-Order Path Errored Seconds—A
• HP-ESB	High-Order Path Errored Seconds—B
• HP-ESR	High-Order Path Errored Second Ratio
• HP-FC	High-Order Path Failure Count
• HP-NPJC-PDET	High-Order Path Negative Pointer Justification Count
• HP-NPJC-PGEN	High-Order Path, Negative Pointer Justification Count
• HP-OI	Outage Intensity
• HP-PJCDIFF	High-Order Path Pointer Justification Count Difference
• HP-PJCS-PDET	High-Order Path Pointer Justification Count Seconds, Path Detected
• HP-PJCS-PGEN	High-Order Path Pointer Justification Count Seconds, Path Generated
• HP-PPJC-PDET	High-Order Path Positive Pointer Justification Count, Path Detected
• HP-PPJC-PGEN	High-Order Path, Positive Pointer Justification Count, Path Generated
• HP-SEPI	The number of SEP events in available time
• HP-SES	High-Order Path Severely Errored Seconds
• HP-SESR	High-Order Path Severely Errored Second Ratio
• HP-UAS	High-Order Path Unavailable Seconds
• ifInBroadcastPkts	Number of broadcast packets received since the last counter reset
• ifInDiscards	The number of inbound packets
• ifInErrorBytePktss	Receive Error Byte
• ifInErrors	The number of inbound packets (or transmission units) that contained errors
• ifInFramingErrorPkts	Receive Framing Error
• ifInJunkInterPkts	Receive Interpacket Junk
• ifInMulticastPkts	Number of multicast packets received since the last counter reset
• ifInOctets	Number of bytes transmitted since the last counter reset
• ifInUcastPkts	Number of unicast packets received since the last counter reset

• ifOutBroadcastPkts	Number of broadcast packets transmitted
• ifOutDiscards	The number of outbound packets
• ifOutErrors	The number of outbound packets (or transmission units) that could not be transmitted because of errors
• ifOutMulticastPkts	Number of multicast packets transmitted
• ifOutPayloadCrcErrors	Received payload CRC errors
• ifOutUcastPkts	Number of unicast packets transmitted
• IOS	8B10B—Idle Ordered Sets
• IPC	Invalid Packet Count
• LBCL-AVG	Average Laser Bias Current in microA
• LBCL-MAX	Maximum Laser Bias Current in microA
• LBCL-MIN	Minimum Laser Bias Current in microA
• LBCN	Normalized Laser Bias Current for OC3-8
• LBCN-HWT	Normalized Laser Bias Current—Higher Threshold
• LBCN-LWT	Normalized Laser Bias Current—Lower Threshold
• LOSSL	Loss of Signal Seconds—Line
• LP-BBE	Low-Order Path Background Block Error
• LP-BBER	Low-Order Path Background Block Error Ratio
• LP-EB	Low-Order Path Errored Block
• LP-ES	Low-Order Path Errored Second
• LP-ESA	Low-Order Path Errored Seconds-A
• LP-ESB	Low-Order Path Errored Seconds-B
• LP-ESR	Low-Order Path Errored Second Ratio
• LP-FC	Low-Order Path Failure Count
• LP-NPJC-DET	Low-Order Negative Pointer Justification Count, Detected
• LP-NPJC-GEN	Low Order Negative Pointer Justification Count, Generated
• LP-PPJC-DET	Low-Order Positive Pointer Justification Count, Detected
• LP-PPJC-GEN	Low-Order positive Pointer Justification Count, Generated
• LP-SEP	Low-Order Path Severely Errored Period
• LP-SEPI	Low-Order Path Severely Errored Period Intensity
• LP-SES	Low-Order Path Severely Errored
• LP-UAS	Low-Order Path Unavailable Seconds
• MS-PSC	Protection switch count
• MS-PSD	Protection switch duration
• NIOS	8B10B—Non Idle Ordered Sets
• NPJC-PDET	Negative Pointer Justification Count, Path Detected
• NPJC-PGEN	Negative Pointer Justification Count, Path Generated
• OPR-AVG	Average Receive Power in one tenth of a microwatt
• OPR-MAX	Maximum Receive Power in one tenth of a microwatt
• OPR-MIN	Minimum Receive Power in one tenth of a microwatt
• OPRN	Normalized Optical Receive Power for OC3-8
• OPRN-MAX	Maximum value for OPRN

• OPRN-MIN	Minimum value for OPRN
• OPT-AVG	Average Transmit Power in one tenth of a microwatt
• OPT-MAX	Maximum Transmit Power in one tenth of a microwatt
• OPT-MIN	Minimum Transmit Power in one tenth of a microwatt
• OPTN	Normalized value for Optical Power Transmitted for the OC3-8 card
• OPTN-MAX	Maximum value for OPTN
• OPTN-MIN	Minimum value for OPTN
• OPWR-AVG	Optical Power—Average Interval Value in one tenth of a dBm
• OPWR-MAX	Optical Power—Maximum Interval Value in one tenth of a dBm
• OPWR-MIN	Optical Power—Minimum Interval Value in one tenth of a dBm
• PPJC-PDET	Positive Pointer Justification Count, Path Detected
• PPJC-PGEN	Positive Pointer Justification Count, Path Generated
• PSC	Protection Switching Count
• PSC-R	Protection Switching Count—Ring
• PSC-S	Protection Switching Count—Span
• PSC-W	Protection Switching Count—Working
• PSD	Protection Switching Duration
• PSD-R	Protection Switching Duration—Ring
• PSD-S	Protection Switching Duration—Span
• PSD-W	Protection Switching Duration—Working
• SASCPP	Severely Errored Framing/AIS Second—CP-Bit Path
• SASP	Severely Errored Framing/AIS Seconds Path
• SEFS	Severely Errored Framing Seconds
• SEFSP	Severely Errored Framing Seconds—Path (DS3XM-12 DS1 PM count)
• SESCOPP	Severely Errored Second—CP-Bit Path
• SESL	Severely Errored Second—Line
• SESNPFE	Severely Errored Second—Network Path (DS3XM-12 DS1 PM count)
• SESP	Severely Errored Second—Path
• SES-PM	OTN—Severely Errored Second—Path
• SESR-PM	OTN—Severely Errored Second Ratio—Path Monitor Point expressed as one tenth of a percentage
• SESR-SM	OTN—Severely Errored Second Ratio—Section Monitor Point expressed as one tenth of a percentage
• SESS	Severely Errored Second—Section
• SES-SM	OTN—Severely Errored Second—Section Monitor Point
• SESV	Severely Errored Second—VT Path
• UASCPP	Unavailable Second—CP-Bit Path
• UASL	Unavailable Second—Line
• UASNPFE	Unavailable Second—Network Path (DS3XM-12 DS1 PM count)
• UASP	Unavailable Second—Path

• UAS-PM	OTN—Unavailable Second—Path Monitor Point
• UAS-SM	OTN—Unavailable Second—Section Monitor Point
• UASV	Unavailable Second—VT Path
• UNC-WORDS	FEC—Uncorrectable Words
• VPC	Valid Packet Count
<LOCATION>	The location. A null value defaults to NEND. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<TMPER>	The accumulation time period for performance counters. A null value defaults to 15-MIN. The parameter type is TMPER, which is the accumulation time period for the performance management counter.
• 1-DAY	Performance parameter accumulation interval length is every 24 hours.
• 1-HR	Performance parameter accumulation interval length is every 1 hour.
• 1-MIN	Performance parameter accumulation interval length is every 1 minute.
• 15-MIN	Performance parameter accumulation interval length is every 15 minutes.
• RAW-DATA	Performance parameter accumulation interval length starts from the last time the counters were cleared. This is only applicable to RMON-managed PMs.

**Output Format**

```

SID DATE TIME
M CTAG COMPLD
"<AID>,<AIDTYPE>:<MONTYPE>,<LOCATION>,<THLEV>,<TMPER>"
;

```

**Output Example**

```

TID-000 1998-06-20 14:30:00
M 001 COMPLD
"FAC-1-1,DS3:CVL,NEND,,1,15-MIN"
;

```

**Output Parameters**

<AID>	Access identifier from the <a href="#">“26.2 AidUnionId”</a> section on page 26-13.
<AIDTYPE>	Specifies the type of facility, link, or other addressable entity targeted by the message. The parameter type is MOD2B, which is the alarm type for certain generic TL1 commands.
• 1GFC	1-Gigabit Fibre Channel payload
• 1GFICON	1-Gigabit fiber connectivity payload
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• 4GFC	4-Gigabit Fibre Channel payload

• 4GFICON	4-Gigabit fiber connectivity payload
• 40GIGE	40-Gigabit Ethernet
• 5GIB	5Gbps InfiniBand (IB_5G) payload
• 8GFC	8-Gigabit Fibre Channel payload
• BITS	BITS alarm
• CHGRP	Channel group
• CLNT	Client facility for MXP/TXP cards
• COM	Common alarm
• DS1	DS1 alarm
• DS3I	DS3I alarm
• DVBASI	Digital Video Broadband Asynchronous Serial Interface (DVBASI) payload
• E100	E100 alarm
• E1000	E1000 alarm
• EC1	EC1 alarm
• ENV	ENV alarm
• EQPT	EQPT alarm
• FC	Fibre Channel alarm
• FSTE	FSTE alarm
• G1000	G1000 alarm
• GIGE	GIGE alarm
• HDLC	High-level data link control (HDLC) frame mode.
• ISC1	InterSystem Channel, a protocol defined by IBM (ISC1) payload
• ISC3PEER1G	1 Gbps ISC3 Peer
• ISC3PEER2G	2 Gbps ISC3 Peer
• ISC3PEER2R	1 Gbps or 2 Gbps ISC3 peer used in transparent (2R) mode
• ISCCOMPAT	1 Gbps ISC1, ISC2, and ISC3 compatibility
• MSISC	MSISC
• OC3	OC3 alarm
• OC12	OC12 alarm
• OC48	OC48 alarm
• OC192	OC192 alarm
• OC768	OC768 alarm
• OCH	Optical channel
• OMS	Optical Multiplex Section
• OTS	Optical Transport Section
• OTU3	Optical Transport Unit Level 3
• POS	POS alarm
• REP	Resilient Ethernet Protocol
• STS1	STS1 alarm
• STS3C	STS3c alarm
• STS6C	STS6c alarm

• STS9C	STS9c alarm
• STS12C	STS12c alarm
• STS18C	STS18c alarm
• STS24C	STS24c alarm
• STS48C	STS48c alarm
• STS192C	STS192c alarm
• SYNCN	SYNCN alarm
• T1	T1 alarm
• T3	T3 alarm
• TCC	TCC alarm
• VT1	VT1 alarm
• VT2	VT2 alarm
<MONTYPE>	Monitored type. A null value defaults to ALL. The parameter type is ALL_MONTYPE, which is the monitoring type list.
• AISSP	Alarm Indication Signal Seconds—Path
• ALL	All possible values
• BBE-PM	OTN—Background Block Errors—Path Monitor Point
• BBE-SM	OTN—Background Block Errors—Section Monitor Point
• BBER-PM	OTN—Background Block Error Ratio—Path Monitor Point expressed as one tenth of a percentage
• BBER-SM	OTN—Background Block Error Ratio—Section Monitor Point expressed as one tenth of a percentage
• BIEC	FEC—Bit Errors Corrected
• BIT-EC	the number of bit errors corrected by the FEC algorithm
• CGV	8B10B—Code Group Violations
• CSSP	Controlled Slip Seconds—Path (DSXM-12 FDL/T1.403 PM count)
• CVCPP	Coding Violations—CP-Bit Path
• CVL	Coding Violations—Line
• CVP	Coding Violations—Path
• CVS	Coding Violations—Section
• CVV	Coding Violations—Section
• DCG	8B10B—Data Code Groups
• ESAP	Errored Second Type A-Path (DS3XM-12 DS1 PM count)
• ESBP	Errored Second Type B-Path (DS3XM-12 DS1 PM count)
• ESCPP	Errored Seconds—CP—Bit Path
• ESL	Errored Seconds—Line
• ESNPFE	Errored Second—Network Path (DS3XM-12 DS1 PM count)
• ESP	Errored Seconds—Path
• ES-PM	OTN—Errored Seconds—Path Monitor Point
• ES-SM	OTN—Errored Seconds—Section Monitor Point
• ESR	Errored Second—Ratio

• ESR-PM	Errored Seconds Ratio—Path monitor Point expressed as one tenth of a percentage
• ESR-SM	Errored Seconds Ratio—Section monitor Point expressed as one tenth of a percentage
• ESS	Errored Seconds—Section
• ESV	Errored Seconds—VT Path
• etherStatsBroadcastPkts	The total number of good packets received that were directed to a multicast address
• etherStatsCollisions	Number of transmit packets that are collisions
• etherStatsCRCAlignErrors	The total number of packets received that have a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets
• etherStatsDropEvents	Number of received frames dropped at the port level
• etherStatsFragments	The total number of packets received that were less than 64 octets
• etherStatsJabbers	The total number of packets received that are longer than 1518 octets
• etherStatsOctets	The total number of octets of data
• etherStatsOversizePkts	The total number of packets received that are longer than 1518 octets
• etherStatsPkts	The total number of packets (including bad packets, broadcast packets, and multicast packets) received
• etherStatsUndersizePkts	The total number of packets received that are less than 64 octets
• FCP	Failure Count—Line
• FC-PM	OTN—Failure Count—Path Monitor Point
• FC-SM	OTN—Failure Count—Section Monitor Point
• HP-AR	Availability Ratio
• HP-BBE	High-Order Path Background Block Error
• HP-BBER	High-Order Path Background Block Error Ratio
• HP-EB	High-Order Path Errored Block
• HP-ES	High-Order Path Errored Second
• HP-ESA	High-Order Path Errored Seconds—A
• HP-ESB	High-Order Path Errored Seconds—B
• HP-ESR	High-Order Path Errored Second Ratio
• HP-FC	High-Order Path Failure Count
• HP-NPJC-PDET	High-Order Path Negative Pointer Justification Count, Path Detected
• HP-NPJC-PGEN	High-Order Path Negative Pointer Justification Count, Path Generated
• HP-OI	Outage Intensity
• HP-PJCDIFF	High-Order Path Pointer Justification Count Difference
• HP-PJCS-PDET	High-Order Path Pointer Justification Count Seconds, Path Detected
• HP-PJCS-PGEN	High-Order Path Pointer Justification Count Seconds, Path Generated

• HP-PPJC-PDET	High-Order Path Positive Pointer Justification Count, Path Detected
• HP-PPJC-PGEN	High-Order Path Positive Pointer Justification Count, Path Generated
• HP-SEPI	The number of SEP events in available time
• HP-SES	High-Order Path Severely Errored Seconds
• HP-SESR	High-Order Path Severely Errored Second Ratio
• HP-UAS	High-Order Path Unavailable Seconds
• ifInBroadcastPkts	Number of broadcast packets received since the last counter reset
• ifInDiscards	The number of inbound packets
• ifInErrorBytePktss	Receive Error Byte
• ifInErrors	The number of inbound packets (or transmission units) that contained errors
• ifInFramingErrorPkts	Receive Framing Error
• ifInJunkInterPkts	Receive Interpacket Junk
• ifInMulticastPkts	Number of multicast packets received since the last counter reset
• ifInOctets	Number of bytes transmitted since the last counter reset
• ifInUcastPkts	Number of unicast packets received since the last counter reset
• ifOutBroadcastPkts	Number of broadcast packets transmitted
• ifOutDiscards	The number of outbound packets
• ifOutErrors	The number of outbound packets (or transmission units) that could not be transmitted because of errors
• ifOutMulticastPkts	Number of multicast packets transmitted
• ifOutPayloadCrcErrors	Received payload CRC errors
• ifOutUcastPkts	Number of unicast packets transmitted
• IOS	8B10B—Idle Ordered Sets
• IPC	Invalid Packet Count
• LBCL-AVG	Average Laser Bias Current in microA
• LBCL-MAX	Maximum Laser Bias Current in microA
• LBCL-MIN	Minimum Laser Bias Current in microA
• LBCN	Normalized Laser Bias Current for OC3-8
• LBCN-HWT	Normalized Laser Bias Current—Higher Threshold
• LBCN-LWT	Normalized Laser Bias Current—Lower Threshold
• LOSSL	Loss of Signal Seconds—Line
• LP-BBE	Low-Order Path Background Block Error
• LP-BBER	Low-Order Path Background Block Error Ratio
• LP-EB	Low-Order Path Errored Block
• LP-ES	Low-Order Path Errored Second
• LP-ESA	Low-Order Path Errored Seconds-A
• LP-ESB	Low-Order Path Errored Seconds-B
• LP-ESR	Low-Order Path Errored Second Ratio
• LP-FC	Low-Order Path Failure Count
• LP-NPJC-DET	Low-Order Negative Pointer Justification Count, Detected

• LP-NPJC-GEN	Low Order Negative Pointer Justification Count, Generated
• LP-PPJC-DET	Low-Order Positive Pointer Justification Count, Detected
• LP-PPJC-GEN	Low-Order Positive Pointer Justification Count, Generated
• LP-SEP	Low-Order Path Severely Errored Period
• LP-SEPI	Low-Order Path Severely Errored Period Intensity
• LP-SES	Low-Order Path Severely Errored
• LP-UAS	Low-Order Path Unavailable Seconds
• MS-PSC	Protection switch count
• MS-PSD	Protection switch duration
• NIOS	8B10B—Non Idle Ordered Sets
• NPJC-PDET	Negative Pointer Justification Count, Path Detected
• NPJC-PGEN	Negative Pointer Justification Count, Path Generated
• OPR-AVG	Average Receive Power in one tenth of a microwatt
• OPR-MAX	Maximum Receive Power in one tenth of a microwatt
• OPR-MIN	Minimum Receive Power in one tenth of a microwatt
• OPRN	Normalized Optical Receive Power for OC3-8
• OPRN-MAX	Maximum value for OPRN
• OPRN-MIN	Minimum value for OPRN
• OPT-AVG	Average Transmit Power in one tenth of a microwatt
• OPT-MAX	Maximum Transmit Power in one tenth of a microwatt
• OPT-MIN	Minimum Transmit Power in one tenth of a microwatt
• OPTN	Normalized value for Optical Power Transmitted for the OC3-8 card
• OPTN-MAX	Maximum value for OPTN
• OPTN-MIN	Minimum value for OPTN
• OPWR-AVG	Optical Power—Average Interval Value in one tenth of a dBm
• OPWR-MAX	Optical Power—Maximum Interval Value in one tenth of a dBm
• OPWR-MIN	Optical Power—Minimum Interval Value in one tenth of a dBm
• PPJC-PDET	Positive Pointer Justification Count, Path Detected
• PPJC-PGEN	Positive Pointer Justification Count, Path Generated
• PSC	Protection Switching Count
• PSC-R	Protection Switching Count—Ring
• PSC-S	Protection Switching Count—Span
• PSC-W	Protection Switching Count—Working
• PSD	Protection Switching Duration
• PSD-R	Protection Switching Duration—Ring
• PSD-S	Protection Switching Duration—Span
• PSD-W	Protection Switching Duration—Working
• SASCPP	Severely Errored Framing/AIS Second—CP-Bit Path
• SASP	Severely Errored Framing/AIS Seconds Path
• SEFS	Severely Errored Framing Seconds
• SEFSP	Severely Errored Framing Seconds—Path (DS3XM-12 DS1 PM count)

• SESCPP	Severely Errored Second—CP-Bit Path
• SESL	Severely Errored Second—Line
• SESNPFE	Severely Errored Second—Network Path (DS3XM-12 DS1 PM count)
• SESP	Severely Errored Second—Path
• SES-PM	OTN—Severely Errored Second—Path
• SESR-PM	OTN—Severely Errored Second Ratio—Path Monitor Point expressed as one tenth of a percentage
• SESR-SM	OTN—Severely Errored Second Ratio—Section Monitor Point expressed as one tenth of a percentage
• SESS	Severely Errored Second—Section
• SES-SM	OTN—Severely Errored Second—Section Monitor Point
• SESV	Severely Errored Second—VT Path
• UASCPP	Unavailable Second—CP-Bit Path
• UASL	Unavailable Second—Line
• UASNPFE	Unavailable Second—Network Path (DS3XM-12 DS1 PM count)
• UASP	Unavailable Second—Path
• UAS-PM	OTN—Unavailable Second—Path Monitor Point
• UAS-SM	OTN—Unavailable Second—Section Monitor Point
• UASV	Unavailable Second—VT Path
• UNC-WORDS	FEC—Uncorrectable Words
• VPC	Valid Packet Count
<LOCATION>	The location. A null value defaults to NEND. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility.
• NEND	Action occurs on the near end of the facility.
<THLEV>	Threshold level. Indicates the threshold value. THLEV is a float.
<TMPER>	The accumulation time period for performance counters. A null value defaults to 15-MIN. The parameter type is TMPER, which is the accumulation time period for the performance management counter.
• 1-DAY	Performance parameter accumulation interval length is every 24 hours.
• 1-HR	Performance parameter accumulation interval length is every 1 hour.
• 1-MIN	Performance parameter accumulation interval length is every 1 minute.
• 15-MIN	Performance parameter accumulation interval length is every 15 minutes.
• RAW-DATA	Performance parameter accumulation interval length starts from the last time the counters were cleared. This is only applicable to RMON-managed PMs.

## 21.141 RTRV-TOD

(Cisco ONS 15454) The Retrieve Time of Day (RTRV-TOD) command retrieves the system date and time at the instant when the command was executed. The time returned is in Coordinated Universal Time (UTC).

<b>Usage Guidelines</b>	None														
<b>Category</b>	System														
<b>Security</b>	Retrieve														
<b>Input Format</b>	RTRV-TOD:[<TID>]::<CTAG>;														
<b>Input Example</b>	RTRV-TOD:CAZADERO::230;														
<b>Input Parameters</b>	None that require description														
<b>Output Format</b>	<pre>SID DATE TIME M CTAG COMPLD "&lt;YEAR&gt;,&lt;MONTH&gt;,&lt;DAY&gt;,&lt;HOUR&gt;,&lt;MINUTE&gt;,&lt;SECOND&gt;,&lt;DIFFERENCE&gt;:&lt;TMTYPE&gt;" ;</pre>														
<b>Output Example</b>	<pre>TID-000 1998-06-20 14:30:00 M 001 COMPLD "2002,05,08,17,01,33,840:LINT" ;</pre>														
<b>Output Parameters</b>	<table border="1"> <tr> <td>&lt;YEAR&gt;</td> <td>The current calendar year. YEAR is a string.</td> </tr> <tr> <td>&lt;MONTH&gt;</td> <td>The month of the year. Ranges from 01 to 12. MONTH is a string.</td> </tr> <tr> <td>&lt;DAY&gt;</td> <td>The day of the month. Ranges from 01 to 31. DAY is a string.</td> </tr> <tr> <td>&lt;HOUR&gt;</td> <td>The hour of the day. Ranges from 00 to 23. HOUR is a string.</td> </tr> <tr> <td>&lt;MINUTE&gt;</td> <td>The minute of the hour. Ranges from 00 to 59. MINUTE is a string.</td> </tr> <tr> <td>&lt;SECOND&gt;</td> <td>The second of the minute. Ranges from 00 to 59. SECOND is a string.</td> </tr> <tr> <td>&lt;DIFFERENCE&gt;</td> <td>The number of minutes off UTC. The parameter type is DIFFERENCE, which is the number of minutes off UTC.</td> </tr> </table>	<YEAR>	The current calendar year. YEAR is a string.	<MONTH>	The month of the year. Ranges from 01 to 12. MONTH is a string.	<DAY>	The day of the month. Ranges from 01 to 31. DAY is a string.	<HOUR>	The hour of the day. Ranges from 00 to 23. HOUR is a string.	<MINUTE>	The minute of the hour. Ranges from 00 to 59. MINUTE is a string.	<SECOND>	The second of the minute. Ranges from 00 to 59. SECOND is a string.	<DIFFERENCE>	The number of minutes off UTC. The parameter type is DIFFERENCE, which is the number of minutes off UTC.
<YEAR>	The current calendar year. YEAR is a string.														
<MONTH>	The month of the year. Ranges from 01 to 12. MONTH is a string.														
<DAY>	The day of the month. Ranges from 01 to 31. DAY is a string.														
<HOUR>	The hour of the day. Ranges from 00 to 23. HOUR is a string.														
<MINUTE>	The minute of the hour. Ranges from 00 to 59. MINUTE is a string.														
<SECOND>	The second of the minute. Ranges from 00 to 59. SECOND is a string.														
<DIFFERENCE>	The number of minutes off UTC. The parameter type is DIFFERENCE, which is the number of minutes off UTC.														

• -120	2 hours before UTC
• -180	3 hours before UTC
• -210	3.5 hours before UTC
• -240	4 hours before UTC
• -300	5 hours before UTC
• -360	6 hours before UTC
• -420	7 hours before UTC
• -480	8 hours before UTC
• -540	9 hours before UTC
• -60	1 hour before UTC
• -600	10 hours before UTC
• -660	11 hours before UTC
• 0	UTC
• 120	2 hours after UTC
• 180	3 hours after UTC
• 210	3.5 hours after UTC
• 240	4 hours after UTC
• 270	4.5 hours after UTC
• 300	5 hours after UTC
• 330	5.5 hours after UTC
• 345	5.75 hours after UTC
• 360	6 hours after UTC
• 390	6.5 hours after UTC
• 420	7 hours after UTC
• 480	8 hours after UTC
• 540	9 hours after UTC
• 570	9.5 hours after UTC
• 60	1 hour after UTC
• 600	10 hours after UTC
• 630	10.5 hours after UTC
• 660	11 hours after UTC
• 690	11.5 hours after UTC
• 720	12 hours after UTC
• 765	12.75 hours after UTC
• 780	13 hours after UTC
• 840	14 hours after UTC
<TMYPE>	Identifies the time zone. TMYPE is a String

## 21.142 RTRV-TRAPTABLE

(Cisco ONS 15454) The Retrieve Trap Table (RTRV-TRAPTABLE) command retrieves a trap destination entry identified by a specific trap destination address.

<b>Usage Guidelines</b>	None												
<b>Category</b>	System												
<b>Security</b>	Retrieve												
<b>Input Format</b>	RTRV-TRAPTABLE:[<TID>]:[<AID>]:<CTAG>;												
<b>Input Example</b>	RTRV-TRAPTABLE::1.2.3.4:1;												
<b>Input Parameters</b>	<table border="1"> <tr> <td>&lt;AID&gt;</td> <td>Access identifier from the <a href="#">“26.18 IPADDR”</a> section on page 26-43. IP address identifying the trap destination. Only a numeric IP address is allowed. A null value is equivalent to ALL.</td> </tr> </table>	<AID>	Access identifier from the <a href="#">“26.18 IPADDR”</a> section on page 26-43. IP address identifying the trap destination. Only a numeric IP address is allowed. A null value is equivalent to ALL.										
<AID>	Access identifier from the <a href="#">“26.18 IPADDR”</a> section on page 26-43. IP address identifying the trap destination. Only a numeric IP address is allowed. A null value is equivalent to ALL.												
<b>Output Format</b>	<pre>SID DATE TIME M CTAG COMPLD “&lt;DEST&gt;,&lt;TRAPPORT&gt;,&lt;COMMUNITY&gt;,&lt;SNMPVERSION&gt;” ;</pre>												
<b>Output Example</b>	<pre>TID-000 1998-06-20 14:30:00 M 001 COMPLD “1.2.3.4,162,\“PRIVATE\”,SNMPV1” ;</pre>												
<b>Output Parameters</b>	<table border="1"> <tr> <td>&lt;DEST&gt;</td> <td>Access identifier from the <a href="#">“26.18 IPADDR”</a> section on page 26-43.</td> </tr> <tr> <td>&lt;TRAPPORT&gt;</td> <td>UDP port number associated with the trap destination. Defaults to 162. Integer</td> </tr> <tr> <td>&lt;COMMUNITY&gt;</td> <td>Community name associated to the trap destination. Maximum of 32 characters. COMMUNITY is a string.</td> </tr> <tr> <td>&lt;SNMPVERSION&gt;</td> <td>SNMP version number. Defaults to SNMPv1. The parameter type is SNMP_VERSION, which is the SNMP version.</td> </tr> <tr> <td>• SNMPV1</td> <td>SNMP version 1 (default)</td> </tr> <tr> <td>• SNMPV2</td> <td>SNMP version 2</td> </tr> </table>	<DEST>	Access identifier from the <a href="#">“26.18 IPADDR”</a> section on page 26-43.	<TRAPPORT>	UDP port number associated with the trap destination. Defaults to 162. Integer	<COMMUNITY>	Community name associated to the trap destination. Maximum of 32 characters. COMMUNITY is a string.	<SNMPVERSION>	SNMP version number. Defaults to SNMPv1. The parameter type is SNMP_VERSION, which is the SNMP version.	• SNMPV1	SNMP version 1 (default)	• SNMPV2	SNMP version 2
<DEST>	Access identifier from the <a href="#">“26.18 IPADDR”</a> section on page 26-43.												
<TRAPPORT>	UDP port number associated with the trap destination. Defaults to 162. Integer												
<COMMUNITY>	Community name associated to the trap destination. Maximum of 32 characters. COMMUNITY is a string.												
<SNMPVERSION>	SNMP version number. Defaults to SNMPv1. The parameter type is SNMP_VERSION, which is the SNMP version.												
• SNMPV1	SNMP version 1 (default)												
• SNMPV2	SNMP version 2												

## 21.143 RTRV-TRC-<OCN\_BLSR>

(Cisco ONS 15454) The Retrieve Trace Client for OC12, OC192, OC48, or OC768 (RTRV-TRC-<OCN\_BLSR>) command retrieves the valid J1 expected trace string, retrieved trace string, trace mode, C2 byte, and STS bandwidth of the OC-N port only if the port has a BLSR.

### Usage Guidelines

- See [Table 28-1 on page 28-1](#) for supported modifiers by platform.
- This command only applies to OC48AS and OC192 cards.
- Sending this command over unsupported BLSR path trace cards, or unequipped cards will result in a J1 Trace Not Supported On This Card (IIAC) error.

### Category

BLSR

### Security

Retrieve

### Input Format

RTRV-TRC-&lt;OCN\_BLSR&gt;:[&lt;TID&gt;]:&lt;AID&gt;:&lt;CTAG&gt;[:::];

### Input Example

RTRV-TRC-OC48:CISCO:FAC-6-1:238;

### Input Parameters

<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
-------	--

### Output Format

```
SID DATE TIME
M CTAG COMPLD
“<AID>::[LEVEL=<LEVEL>],[EXPTRC=<EXPTRC>],[INCTRC=<INCTRC>],
[TRCMODE=<TRCMODE>],[C2=<C2>]”
;
```

### Output Example

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“STS-6-1-25::LEVEL=STS1,EXPTRC=“EXPTRCSTRING”,INCTRC=“INCTRCSTRING”,
TRCMODE=AUTO,C2=0X04”
;
```

### Output Parameters

<AID>	Access identifier from the <a href="#">“26.27 STS”</a> section on page 26-52.
<LEVEL>	(Optional) The rate of the cross-connect. The parameter type is STS_PATH, which is the modifier for some STS commands.
• STS1	Synchronous Transport Signal level 1 (51 Mbps)

• STS12C	Synchronous Transport Signal level 12 Concatenated (622 Mbps)
• STS18C	Synchronous Transport Signal level 18 Concatenated (933 Mbps)
• STS192C	Synchronous Transport Signal level 192 (9952 Mbps)
• STS24C	Synchronous Transport Signal level 24 Concatenated (1240 Mbps)
• STS36C	Synchronous Transport Signal level 36 Concatenated (1866 Mbps)
• STS3C	Synchronous Transport Signal level 3 Concatenated (155 Mbps)
• STS48C	Synchronous Transport Signal level 48 Concatenated (2488 Mbps)
• STS6C	Synchronous Transport Signal level 3 Concatenated (310 Mbps)
• STS9C	Synchronous Transport Signal level 9 Concatenated (465 Mbps)
<EXPTRC>	(Optional) Expected path trace content. Indicates the expected path trace message (J1) contents. EXPTRC is any 64-character ASCII string, including the terminating CR (carriage return) and LF (line feed). EXPTRC is a string.
<INCTRC>	(Optional) The incoming path trace message contents. INCTRC is any combination of 64 characters including CR and LF. INCTRC is a string.
<TRCMODE>	(Optional) Trace mode. The parameter type is TRCMODE (trace mode).
• AUTO	Use the previously received path trace string as the expected string. Not applicable to MXP/TXP cards.
• AUTO-NO-AIS	Use the previously received path trace string as the expected string and do not turn on AIS and RDI if TIM-P is detected.
• MAN	Use the provisioned expected string as the expected string
• MAN-NO-AIS	Use the provisioned expected string as the expected string and do not turn on AIS and RDI if TIM-P is detected.
• OFF	Turn off path trace capability. Nothing will be reported
<C2>	(Optional) The C2 byte hex code. Applicable only to STS-level paths in SONET (STS <sub>n</sub> ). The parameter type is C2_BYTE, which is the C2 byte hex code.
• 0X00	Unequipped
• 0X01	Equipped-Non Specific payload
• 0X02	VT-Structured STS-1 SPE
• 0X03	Locked VT Mode
• 0X04	Asynchronous Mapping for DS3
• 0X12	Asynchronous Mapping for DS4NA
• 0X13	Mapping for ATM
• 0X14	Mapping for DQDB
• 0X15	Asynchronous Mapping for FDDI
• 0X16	HDLC-Over-SONET Mapping
• 0XE1	VT-structured STS-1 SPE with 1VTx payload defect
• 0XE2	VT-structured STS-1 SPE with 2VTx payload defects
• 0XE3	VT-structured STS-1 SPE with 3VTx payload defects
• 0XE4	VT-structured STS-1 SPE with 4VTx payload defects
• 0XE5	VT-structured STS-1 SPE with 5VTx payload defects

• 0XE6	VT-structured STS-1 SPE with 6VTx payload defects
• 0XE7	VT-structured STS-1 SPE with 7VTx payload defects
• 0XE8	VT-structured STS-1 SPE with 8VTx payload defects
• 0XE9	VT-structured STS-1 SPE with 9VTx payload defects
• 0XEA	VT-structured STS-1 SPE with 10VTx payload defects
• 0XEB	VT-structured STS-1 SPE with 11VTx payload defects
• 0XEC	VT-structured STS-1 SPE with 12VTx payload defects
• 0XED	VT-structured STS-1 SPE with 13VTx payload defects
• 0XEE	VT-structured STS-1 SPE with 14VTx payload defects
• 0XEF	VT-structured STS-1 SPE with 15VTx payload defects
• 0XF0	VT-structured STS-1 SPE with 16VTx payload defects
• 0XF1	VT-structured STS-1 SPE with 17VTx payload defects
• 0XF2	VT-structured STS-1 SPE with 18VTx payload defects
• 0XF3	VT-structured STS-1 SPE with 19VTx payload defects
• 0XF4	VT-structured STS-1 SPE with 20VTx payload defects
• 0XF5	VT-structured STS-1 SPE with 21VTx payload defects
• 0XF6	VT-structured STS-1 SPE with 22VTx payload defects
• 0XF7	VT-structured STS-1 SPE with 23VTx payload defects
• 0XF8	VT-structured STS-1 SPE with 24VTx payload defects
• 0XF9	VT-structured STS-1 SPE with 25VTx payload defects
• 0XFA	VT-structured STS-1 SPE with 26VTx payload defects
• 0XFB	VT-structured STS-1 SPE with 27VTx payload defects
• 0XFC	VT-structured STS-1 SPE with 28VTx payload defects
• 0XFE	O.181 Test Signal (TSS1 to TSS3) Mapping
• 0XFF	Reserved, however, C2 is 0XFF if AIS-L is being generated by an optical card or cross-connect downstream.

## 21.144 RTRV-TRC-OCH

(Cisco ONS 15454) The Retrieve Trace Optical Channel (RTRV-TRC-OCH) command retrieves the sent trace string, expected trace string, received trace string, trace mode, and the trace level for the SONET J0 Section, the TTI PATH and SECTION monitoring levels of the DWDM facility.

### Usage Guidelines

The following rules apply:

- Client port—only the J0 Section trace applies.
- The J0 Section trace applies only if the card termination mode is not transparent and the payload is SONET.
- On the DWDM port, the J0 Section trace, the TTI Path, Section trace monitoring point traces are allowed.
- The J0 Section trace is allowed only if the payload for the card is set to SONET.
- The J0 Section trace is allowed only if the card termination mode is not transparent.

- The TTI Path, Section trace is allowed only if the ITU-T G.709 (DWRAP) is enabled.

Depending on the settings, the following filtering applies:

- If no TRCLEVEL is provided, all TRCLEVELs are reported as applicable.
- If TRCLEVEL is provided and no MSGTYPE is provided, all applicable MSGTYPEs for the given level are displayed.
- If no MSGTYPE is provided, all MSGTYPEs are reported as applicable.
- If a MSGTYPE is provided with out a TRCLEVEL, then the given MSGTYPE for all TRCLEVELs are displayed.

**Category**

DWDM

**Security**

Retrieve

**Input Format**

RTRV-TRC-OCH:[&lt;TID&gt;]:&lt;SRC&gt;:&lt;CTAG&gt;::[&lt;MSGTYPE&gt;],[&lt;TRCLEVEL&gt;][::];

**Input Example**

RTRV-TRC-OCH:CISCO:CHAN-2-2:100::EXPTRC,TTI-PM;

**Input Parameters**

<SRC>	Access identifier from the “26.8 CHANNEL” section on page 26-22.
<MSGTYPE>	Type of autonomous message to be retrieved. A null value is equivalent to ALL. The parameter type is MSGTYPE, which is the type of trace message.
<ul style="list-style-type: none"> <li>• EXPTRC</li> <li>• INCTRC</li> <li>• TRC</li> </ul>	<ul style="list-style-type: none"> <li>Expected incoming path trace message</li> <li>Incoming path trace message</li> <li>Outgoing path trace message</li> </ul>
<TRCLEVEL>	The trace level to be managed. A null value is equivalent to ALL. The parameter type is TRCLEVEL, which is the trace mode options.
<ul style="list-style-type: none"> <li>• J0</li> <li>• TTI-PM</li> <li>• TTI-SM</li> </ul>	<ul style="list-style-type: none"> <li>Identifies the SONET J0 Section trace level</li> <li>Identifies the TTI Path monitoring point</li> <li>Identifies the TTI Section monitoring point</li> </ul>

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<CHANNEL>,<MOD>::[TRCLEVEL=<TRCLEVEL>],[EXPTRC=<EXPTRC>],
[TRC=<TRC>],[INCTRC=<INCTRC>],[TRCMODE=<TRCMODE>],
[TRCFORMAT=<TRCFORMAT>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"CHAN-2-2,OCH::TRCLEVEL=TTI-PM,EXPTRC=\\"AAA\\",TRC=\\"AAA\\",
INCTRC=\\"AAA\\",TRCMODE=MAN,TRCFORMAT=64-BYTE"
;
```

**Output Parameters**

<CHANNEL>	Access identifier from the <a href="#">“26.8 CHANNEL”</a> section on page 26-22.
<MOD>	Indicates an OCH AID type. The parameter type is MOD2, which is the line/path modifier.
• 10GFC	10-Gigabit Fibre Channel payload
• 10GFICON	10-Gigabit fiber connectivity payload
• 1GFC	1-Gigabit Fibre Channel payload
• 1GFICON	1-Gigabit fiber connectivity payload
• 1GISC3	1-Gigabit ISC3 compatible
• 2GFC	2-Gigabit Fibre Channel payload
• 2GFICON	2-Gigabit fiber connectivity payload
• 2GISC3	2-Gigabit ISC3 compatible
• 4GFC	4-Gigabit Fibre Channel payload
• 4GFICON	4-Gigabit fiber connectivity payload
• 5GIB	5Gbps InfiniBand (IB_5G) payload
• 8GFC	8-Gigabit Fibre Channel payload
• 40GIGE	40-Gigabit Ethernet
• CHGRP	Channel group
• D1VIDEO	D1 video
• DS1	DS1 line of a DS3XM card
• DS3I	DS3I line
• DV6000	DV6000
• EC1	EC1 facility
• ESCON	ESCON
• ETRCLO	ETRCLO
• FSTE	FSTE facility
• G1000	G1000 facility
• GFPOS	GFP over POS. Virtual ports partitioned using GFP’s multiplexing capability.
• GIGE	Gigabit Ethernet
• HDLC	High-level data link control (HDLC) frame mode.
• HDTV	HDTV
• ISC3PEER1G	1 Gbps ISC3 Peer
• ISC3PEER2G	2 Gbps ISC3 Peer
• ISC3PEER2R	1 Gbps or 2 Gbps ISC3 peer used in transparent (2R) mode
• ISCCOMPAT	1 Gbps ISC1, ISC2, and ISC3 compatibility

• MSISC	MSISC
• OC3	OC-3 facility
• OC12	OC-12 facility
• OC48	OC-48 facility
• OC192	OC-192 facility
• OC768	OC-768 facility
• OCH	Optical Channel
• OCHCC	OCH client connection
• OCHNC	OCH network connection
• OCHTERM	OCH termination
• OMS	Optical Multiplex Section
• OTS	Optical Transport Section
• OTU3	Optical Transport Unit Level 3
• POS	POS port
• REP	Resilient Ethernet Protocol
• STS1	STS1 path
• STS3C	STS3c path
• STS6C	STS6c path
• STS9C	STS9c path
• STS18C	STS18c path
• STS12C	STS12c path
• STS24C	STS24c path
• STS36C	STS36c path
• STS48C	STS48c path
• STS192C	STS192c path
• T1	T1/DS1 facility/line
• T3	T1/DS1 facility/line
• VT1	VT1 path
• VT2	VT2 path
<TRCLEVEL>	(Optional) The trace level to be managed. The parameter type is TRCLEVEL, which is the trace mode options.
• J0	Identifies the SONET J0 Section trace level.
• TTI-PM	Identifies the TTI Path monitoring point.
• TTI-SM	Identifies the TTI Section monitoring point.
<EXPTRC>	(Optional) Expected path trace content. A 64 character ASCII string.
<TRC>	(Optional) The path trace message to be transmitted. The trace byte continuously transmits a 64 byte, fixed length ASCII string, one byte at a time. A null value defaults to the NE transmitting 62 null characters (hex 00) and CR and LF. TRC is a string.
<INCTRC>	(Optional) The incoming path trace message contents. INCTRC is a string.

<TRCMODE>	(Optional) Trace mode. The parameter type is TRCMODE (trace mode).
• AUTO	Use the previously received path trace string as the expected string. Not applicable to MXP/TXP cards.
• AUTO-NO-AIS	Use the previously received path trace string as the expected string and do not turn on AIS and RDI if TIM-P is detected.
• MAN	Use the provisioned expected string as the expected string.
• MAN-NO-AIS	Use the provisioned expected string as the expected string and do not turn on AIS and RDI if TIM-P is detected.
• OFF	Turn off path trace capability. Nothing will be reported.
<TRCFORMAT>	(Optional) The size of the trace message. If in SONET mode, only 1 or 16 bytes is applicable for the J0 section trace. The TTI level trace is only 64 bytes. The parameter type is TRCFORMAT (trace format).
• 1-BYTE	1 byte trace message
• 16-BYTE	16 byte trace message
• 64-BYTE	64 byte trace message
• Y	Enable an attribute.

## 21.145 RTRV-TRC-OTU2

(Cisco ONS 15454) The Retrieve Trace Optical Transport Unit Level 2 (RTRV-TRC-OTU2) command retrieves the sent trace string, expected trace string, received trace string, trace mode, and the trace level for the SDH J0 section and the TTI PATH and SECTION monitoring levels of the DWDM facility.

### Usage Guidelines

- On the client port:
  - Only the J0 section trace applies.
  - The J0 section trace applies only if the card termination mode is not transparent and the payload is SDH.
- On the DWDM port:
  - The J0 section trace and the TTI path and section trace monitoring point traces are allowed.
  - The J0 section trace is allowed only if the payload for the card is set to SDH.
  - The J0 section trace is allowed only if the card termination mode is not transparent. The TTI path and section trace is allowed only if ITU-T G.709 (DWRAP) is enabled.
- Depending on the settings, the following filtering applies:
  - If no TRCLEVEL is provided, all TRCLEVELs are reported as applicable.
  - If TRCLEVEL is provided and no MSGTYPE is provided, all applicable MSGTYPEs for the given level are displayed.
  - If no MSGTYPE is provided, all MSGTYPEs are reported as applicable.
  - If an MSGTYPE is provided with out a TRCLEVEL, then the given MSGTYPE for all TRCLEVELs are displayed.

<b>Category</b>	DWDM
<b>Security</b>	Retrieve
<b>Input Format</b>	RTRV-TRC-OTU2:[<TID>]:<SRC>:<CTAG>::[<MSGTYPE>],[<TRCLEVEL>][::];
<b>Input Example</b>	RTRV-TRC-OTU2:CISCO:CHAN-2-2:100::EXPTRC,TTI-PM;

**Table 21-7 Input Parameter Support**

Parameter	Description
<SRC>	Access identifier from the “26.8 CHANNEL” section on page 26-22.
<MSGTYPE>	Type of autonomous message to be retrieved. A null value is equivalent to ALL. The parameter type is MSGTYPE, which is the type of trace message.
<ul style="list-style-type: none"> <li>EXPTRC</li> <li>INCTRC</li> <li>TRC</li> </ul>	<ul style="list-style-type: none"> <li>Expected incoming path trace message</li> <li>Incoming path trace message</li> <li>Outgoing path trace message</li> </ul>
<TRCLEVEL>	The trace level to be managed. A null value is equivalent to ALL. The parameter type is TRCLEVEL, which is the trace mode options.
<ul style="list-style-type: none"> <li>J0</li> <li>TTI-PM</li> <li>TTI-SM</li> </ul>	<ul style="list-style-type: none"> <li>Identifies the SDH J0 section trace level.</li> <li>Identifies the TTI path monitoring point.</li> <li>Identifies the TTI section monitoring point.</li> </ul>

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<CHANNEL>,<MOD>::[TRCLEVEL=<TRCLEVEL>],[EXPTRC=<EXPTRC>],
[TRC=<TRC>],[INCTRC=<INCTRC>],[TRCMODE=<TRCMODE>],
[TRCFORMAT=<TRCFORMAT>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“CHAN-2-2,OTU2::TRCLEVEL=TTI-PM,EXPTRC=\“AAA\”,TRC=\“AAA\”,
INCTRC=\“AAA\”,TRCMODE=MAN,TRCFORMAT=64-BYTE”
;
```

**Table 21-8 Output Parameter Support**

Parameter	Description
<CHANNEL>	Access identifier from the “26.8 CHANNEL” section on page 26-22.
<MOD>	Indicates an OTU2 AID type. The parameter type is MOD2, which is the line/path modifier.
<ul style="list-style-type: none"> <li>• OCH</li> <li>• OTU2</li> <li>• OTU3</li> </ul>	<ul style="list-style-type: none"> <li>Optical Channel</li> <li>Optical Transport Unit Level 2</li> <li>Optical Transport Unit Level 3</li> </ul>
<TRCLEVEL>	(Optional) The trace level to be managed. The parameter type is TRCLEVEL, which is the trace mode options.
<ul style="list-style-type: none"> <li>• J0</li> <li>• TTI-PM</li> <li>• TTI-SM</li> </ul>	<ul style="list-style-type: none"> <li>Identifies the SDH J0 section trace level.</li> <li>Identifies the TTI path monitoring point.</li> <li>Identifies the TTI section monitoring point.</li> </ul>
<EXPTRC>	(Optional) Expected path trace content. A 64 character ASCII string.
<TRC>	(Optional) The path trace message to be transmitted. The trace byte continuously transmits a 64 byte, fixed length ASCII string, one byte at a time. A null value defaults to the NE transmitting 62 null characters (hex 00), CR, and LF. TRC is a string.
<INCTRC>	(Optional) The incoming path trace message contents. INCTRC is a string.
<TRCMODE>	(Optional) Trace mode. The parameter type is TRCMODE (trace mode).
<ul style="list-style-type: none"> <li>• AUTO</li> <li>• AUTO-NO-AIS</li> <li>• MAN</li> <li>• MAN-NO-AIS</li> <li>• OFF</li> </ul>	<ul style="list-style-type: none"> <li>Use the previously received path trace string as the expected string. Not applicable to MXP/TXP cards.</li> <li>Use the previously received path trace string as the expected string and do not turn on AIS and RDI if TIMP is detected.</li> <li>Use the provisioned expected string as the expected string.</li> <li>Use the provisioned expected string as the expected string and do not turn on AIS and RDI if TIMP is detected.</li> <li>Turn off path trace capability. Nothing will be reported.</li> </ul>
<TRCFORMAT>	(Optional) The size of the trace message. If in SDH mode, only 1 or 16 bytes is applicable for the J0 section trace. The TTI level trace is only 64 bytes. The parameter type is TRCFORMAT, which is the trace format.
<ul style="list-style-type: none"> <li>• 1-BYTE</li> <li>• 16-BYTE</li> <li>• 64-BYTE</li> </ul>	<ul style="list-style-type: none"> <li>1-byte trace message</li> <li>16-byte trace message</li> <li>64-byte trace message</li> </ul>

## 21.146 RTRV-TRC-OTU3

(Cisco ONS 15454) The Retrieve Trace Optical Transport Unit Level 3 (RTRV-TRC-OTU2) command retrieves the sent trace string, expected trace string, received trace string, trace mode, and the trace level for the SDH J0 section and the TTI PATH and SECTION monitoring levels of the DWDM facility.

### Usage Guidelines

- On the client port:
  - Only the J0 section trace applies.
  - The J0 section trace applies only if the card termination mode is not transparent and the payload is SDH.
- On the DWDM port:
  - The J0 section trace and the TTI path and section trace monitoring point traces are allowed.
  - The J0 section trace is allowed only if the payload for the card is set to SDH.
  - The J0 section trace is allowed only if the card termination mode is not transparent. The TTI path and section trace is allowed only if ITU-T G.709 (DWRAP) is enabled.
- Depending on the settings, the following filtering applies:
  - If no TRCLEVEL is provided, all TRCLEVELs are reported as applicable.
  - If TRCLEVEL is provided and no MSGTYPE is provided, all applicable MSGTYPEs for the given level are displayed.
  - If no MSGTYPE is provided, all MSGTYPEs are reported as applicable.
  - If an MSGTYPE is provided with out a TRCLEVEL, then the given MSGTYPE for all TRCLEVELs are displayed.

### Category

DWDM

### Security

Retrieve

### Input Format

RTRV-TRC-OTU3:[<TID>]:<SRC>:<CTAG>:[:<MSGTYPE>],[<TRCLEVEL>][:];

### Input Example

RTRV-TRC-OTU3:CISCO:CHAN-2-2:100::EXPTRC,TTI-PM;

**Table 21-9**      *Input Parameter Support*

Parameter	Description
<SRC>	Access identifier from the <a href="#">“26.8 CHANNEL”</a> section on page 26-22.
<MSGTYPE>	Type of autonomous message to be retrieved. A null value is equivalent to ALL. The parameter type is MSGTYPE, which is the type of trace message.

**Table 21-9** *Input Parameter Support*

Parameter	Description
• EXPTRC	Expected incoming path trace message
• INCTRC	Incoming path trace message
• TRC	Outgoing path trace message
<TRCLEVEL>	The trace level to be managed. A null value is equivalent to ALL. The parameter type is TRCLEVEL, which is the trace mode options.
• J0	Identifies the SDH J0 section trace level.
• TTI-PM	Identifies the TTI path monitoring point.
• TTI-SM	Identifies the TTI section monitoring point.

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<CHANNEL>,<MOD>::[TRCLEVEL=<TRCLEVEL>],[EXPTRC=<EXPTRC>],
[TRC=<TRC>],[INCTRC=<INCTRC>],[TRCMODE=<TRCMODE>],
[TRCFORMAT=<TRCFORMAT>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“CHAN-2-2,OTU3::TRCLEVEL=TTI-PM,EXPTRC=\“AAA\”,TRC=\“AAA\”,
INCTRC=\“AAA\”,TRCMODE=MAN,TRCFORMAT=64-BYTE”
;
```

**Table 21-10** *Output Parameter Support*

Parameter	Description
<CHANNEL>	Access identifier from the <a href="#">“26.8 CHANNEL”</a> section on page 26-22.
<MOD>	Indicates an OTU2 AID type. The parameter type is MOD2, which is the line/path modifier.
• OCH	Optical Channel
• OTU2	Optical Transport Unit Level 2
• OTU3	Optical Transport Unit Level 3
<TRCLEVEL>	(Optional) The trace level to be managed. The parameter type is TRCLEVEL, which is the trace mode options.
• J0	Identifies the SDH J0 section trace level.
• TTI-PM	Identifies the TTI path monitoring point.
• TTI-SM	Identifies the TTI section monitoring point.
<EXPTRC>	(Optional) Expected path trace content. A 64 character ASCII string.

**Table 21-10** Output Parameter Support

Parameter	Description
<TRC>	(Optional) The path trace message to be transmitted. The trace byte continuously transmits a 64 byte, fixed length ASCII string, one byte at a time. A null value defaults to the NE transmitting 62 null characters (hex 00), CR, and LF. TRC is a string.
<INCTRC>	(Optional) The incoming path trace message contents. INCTRC is a string.
<TRCMODE>	(Optional) Trace mode. The parameter type is TRCMODE (trace mode).
<ul style="list-style-type: none"> <li>AUTO</li> </ul>	Use the previously received path trace string as the expected string. Not applicable to MXP/TXP cards.
<ul style="list-style-type: none"> <li>AUTO-NO-AIS</li> </ul>	Use the previously received path trace string as the expected string and do not turn on AIS and RDI if TIMP is detected.
<ul style="list-style-type: none"> <li>MAN</li> </ul>	Use the provisioned expected string as the expected string.
<ul style="list-style-type: none"> <li>MAN-NO-AIS</li> </ul>	Use the provisioned expected string as the expected string and do not turn on AIS and RDI if TIMP is detected.
<ul style="list-style-type: none"> <li>OFF</li> </ul>	Turn off path trace capability. Nothing will be reported.
<TRCFORMAT>	(Optional) The size of the trace message. If in SDH mode, only 1 or 16 bytes is applicable for the J0 section trace. The TTI level trace is only 64 bytes. The parameter type is TRCFORMAT, which is the trace format.
<ul style="list-style-type: none"> <li>1-BYTE</li> </ul>	1-byte trace message
<ul style="list-style-type: none"> <li>16-BYTE</li> </ul>	16-byte trace message
<ul style="list-style-type: none"> <li>64-BYTE</li> </ul>	64-byte trace message

## 21.147 RTRV-TUNNEL-FIREWALL

(Cisco ONS 15454) The Retrieve Tunnel Firewall (RTRV-TUNNEL-FIREWALL) command retrieves the contents of the firewall tunnel table.

**Usage Guidelines** None

**Category** System

**Security** Retrieve

**Input Format** RTRV-TUNNEL-FIREWALL:[<TID>]::<CTAG>;

<b>Input Example</b>	RTRV-TUNNEL-FIREWALL:TID::CTAG;								
<b>Input Parameters</b>	None that require description								
<b>Output Format</b>	<pre>SID DATE TIME M CTAG COMPLD “[SRC ADDR=&lt;SRCADDR&gt;],[SRC MASK=&lt;SRCMASK&gt;],[DEST ADDR=&lt;DESTADDR&gt;], [DEST MASK=&lt;DESTMASK&gt;]” ;</pre>								
<b>Output Example</b>	<pre>TID-000 1998-06-20 14:30:00 M 001 COMPLD “SRC ADDR=64.101.150.10,SRC MASK=255.255.255.0,DEST ADDR=64.101.144.7, DEST MASK=255.255.255.0” ;</pre>								
<b>Output Parameters</b>	<table border="1"> <tr> <td>&lt;SRCADDR&gt;</td> <td>(Optional) Source IP address. SRCADDR is a string.</td> </tr> <tr> <td>&lt;SRCMASK&gt;</td> <td>(Optional) Source mask. SRCMASK is a string.</td> </tr> <tr> <td>&lt;DESTADDR&gt;</td> <td>(Optional) Destination IP address. DESTADDR is a string.</td> </tr> <tr> <td>&lt;DESTMASK&gt;</td> <td>(Optional) Destination mask. DESTMASK is a string.</td> </tr> </table>	<SRCADDR>	(Optional) Source IP address. SRCADDR is a string.	<SRCMASK>	(Optional) Source mask. SRCMASK is a string.	<DESTADDR>	(Optional) Destination IP address. DESTADDR is a string.	<DESTMASK>	(Optional) Destination mask. DESTMASK is a string.
<SRCADDR>	(Optional) Source IP address. SRCADDR is a string.								
<SRCMASK>	(Optional) Source mask. SRCMASK is a string.								
<DESTADDR>	(Optional) Destination IP address. DESTADDR is a string.								
<DESTMASK>	(Optional) Destination mask. DESTMASK is a string.								

## 21.148 RTRV-TUNNEL-PROXY

(Cisco ONS 15454) The Retrieve Tunnel Proxy command retrieves the contents of the proxy tunnel table.

<b>Usage Guidelines</b>	None
<b>Category</b>	System
<b>Security</b>	Retrieve
<b>Input Format</b>	RTRV-TUNNEL-PROXY:[<TID>]::<CTAG>;
<b>Input Example</b>	RTRV-TUNNEL-PROXY:TID::CTAG;

**Input Parameters** None that require descriptions

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
"[SRC ADDR=<SRCADDR>],[SRC MASK=<SRCMASK>],[DEST ADDR=<DESTADDR>],
[DEST MASK=<DESTMASK>]"
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"SRC ADDR=64.101.150.10,SRC MASK=255.255.255.0,DEST ADDR=64.101.144.7,
DEST MASK=255.255.255.0"
;
```

<b>Output Parameters</b>	<SRCADDR>	(Optional) Source IP address. SRCADDR is a string.
	<SRCMASK>	(Optional) Source mask. SRCMASK is a string.
	<DESTADDR>	(Optional) Destination IP address. DESTADDR is a string.
	<DESTMASK>	(Optional) Destination mask. DESTMASK is a string.

## 21.149 RTRV-USER-SECU

(Cisco ONS 15454) The Retrieve User Security (RTRV-USER-SECU) command retrieves the security information of a specified user or list of users. The keyword ALL can be used to obtain a list of all users. For security reasons the password cannot be retrieved.

**Usage Guidelines** A Superuser can retrieve any user's security information. A user with MAINT, PROV, or RTRV privileges can only retrieve their own information.



**Note**

When using the keyword ALL, all users created for the system are displayed. This includes users created outside of the TL1 environment (for example, user IDs and passwords greater than 10 characters in length). Although displayed by the RTRV-USER-SECU command, these users will not be able to log into the TL1 environment.

**Category** Security

**Security** Retrieve



**Note**

Maintenance, Provisioning and Retrieve users can retrieve their own information only.

**Input Format** RTRV-USER-SECU:[<TID>]:<UID>:<CTAG>;

**Input Example** RTRV-USER-SECU::CISCO15:1;

**Input Parameters**

<UID>	User identifier. The user ID or the keyword ALL. A non-Superuser can only specify his own user ID. Must not be null. UID is a string.
-------	---

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<UID>,<PRIVILEGE>:LOGGEDIN=<LOGGEDIN>,[NUMSESSIONS=<NUMSESS>],[
  LOCKEDOUT=<LOCKEDOUT>],[DISABLED=<DISABLED>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“CISCO15:,SUPER:LOGGEDIN=YES,NUMSESSIONS=1,LOCKEDOUT=NO,DISABLED=NO”
;
```

**Output Parameters**

<UID>	User identifier. The user ID that was retrieved. UID is a string.
<PRIVILEGE>	The privilege level of the user. The parameter type is PRIVILEGE, which is the security level.
<ul style="list-style-type: none"> <li>• MAINT</li> <li>• PROV</li> <li>• RTRV</li> <li>• SUPER</li> </ul>	<ul style="list-style-type: none"> <li>Maintenance security level. 60 minutes of idle time.</li> <li>Provision security level. 30 minutes of idle time.</li> <li>Retrieve security level. Unlimited idle time.</li> <li>Superuser security level. 15 minutes of idle time.</li> </ul>
<LOGGEDIN>	Indicates whether the user is logged in to the NE. The parameter type is YES_NO, which indicates whether the user's password is about to expire, the user is logged into the NE, or the user is locked out of the NE.
<ul style="list-style-type: none"> <li>• NO</li> <li>• YES</li> </ul>	<ul style="list-style-type: none"> <li>No</li> <li>Yes</li> </ul>
<NUMSESS>	(Optional) The number of times the user is logged into the NE. NUMSESS is an integer.
<LOCKEDOUT>	(Optional) Indicates whether the user is locked out of the NE. The parameter type is YES_NO, which indicates whether the user's password is about to expire, the user is logged into the NE, or the user is locked out of the NE.
<ul style="list-style-type: none"> <li>• NO</li> <li>• YES</li> </ul>	<ul style="list-style-type: none"> <li>No</li> <li>Yes</li> </ul>

<DISABLED>	(Optional) Indicates if the user is disabled. The parameter type is YES_NO, which indicates whether the user's password is about to expire, the user is logged into the NE, or the user is locked out of the NE.
• NO	No
• YES	Yes

## 21.150 RTRV-VCG

(Cisco ONS 15454) The Retrieve Virtual Concatenation Group (RTRV-VCG) command retrieves all the attributes provisioned for a VCG.

### Usage Guidelines

None

### Category

VCAT

### Security

Retrieve

### Input Format

RTRV-VCG:[<TID>]:<SRC>:<CTAG>[:[:]];

### Input Example

RTRV-VCG:NODE1:FAC-1-1:1234;

### Input Parameters

<SRC>	Source access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40. ML1000-2 and ML100T-12 cards use the VFAC AID. The FC_MR-4 card uses the FAC AID.
-------	---

### Output Format

```
SID DATE TIME
M CTAG COMPLD
“<SRC>.:TYPE=<TYPE>,TXCOUNT=<TXCOUNT>,CCT=<CCT>,[LCAS=<LCAS>],
[BUFFERS=<BUFFERS>],[NAME=<NAME>]:<PST>”
;
```

### Output Example

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“FAC-1-1.:TYPE=STS3C,TXCOUNT=8,CCT=2WAY,LCAS=LCAS,BUFFERS=DEFAULT,
NAME=“VCG2”:IS”
;
```

## Output Parameters

<SRC>	Source access identifier from the “ <a href="#">26.17 FACILITY</a> ” section on page 26-40. ML1000-2 and ML100T-12 cards use the VFAC AID. The FC_MR-4 card uses the FAC AID.
<TYPE>	The type of the entity being provisioned. Null indicates not applicable. TYPE can be a CLEI code or another value. The type of member cross-connect. ML1000-2 and ML100T-12 cards support STS1, STS3c, and STS12c. The FC_MR-4 card supports STS3c only. The parameter type is MOD_PATH, which is the STS/VT path modifier.
• STS1	STS1 path
• STS12C	STS12c path
• STS18C	STS18c path
• STS192	STS192c path
• STS24C	STS24c path
• STS36C	STS36c path
• STS3C	STS3c path
• STS48C	STS48c path
• STS6C	STS6c path
• STS9C	STS9c path
• VT1	VT1 path
• VT2	VT2 path
<TXCOUNT>	Number of VCG members in the transmit (Tx) direction. For ML1000-2 and ML100T-12 cards, the only valid value is 2. For the FC_MR-4 card, the only valid value is 8. TXCOUNT is an integer.
<CCT>	Type of connection; one-way or two-way. Cross-connect type for the VCG member cross-connects. The parameter type is CCT, which is the type of cross-connect to be created.
• 1WAY	A unidirectional connection from a source tributary to a destination tributary
• 1WAYDC	Path Protection multicast drop with one-way continue
• 1WAYEN	Path Protection multicast end node with one-way continue
• 1WAYMON	A bidirectional connection between the two tributaries
	<b>Note</b> 1WAYMON is not supported with TL1. However, it is still supported from CTC. Using CTC, you can create 1WAYMON cross-connects that can be retrieved by TL1.
• 1WAYPCA	A unidirectional connection from a source tributary to a destination tributary on the protection path/fiber
• 2WAY	A bidirectional connection between the two tributaries
• 2WAYDC	A bidirectional drop and continue connection applicable only to path protection traditional and integrated dual-ring interconnects
• 2WAYPCA	A bidirectional connection between the two tributaries on the extra protection path/fiber
• DIAG	Diagnostics cross-connect. Supports BERT (BLSR PCA diagnostics cross-connect).

<LCAS>	(Optional) Link capacity adjustment scheme. The parameter type is LCAS, which is the link capacity adjustment scheme mode for the VCG created.
<ul style="list-style-type: none"> <li>• LCAS</li> <li>• NONE</li> <li>• SW-LCAS</li> </ul>	<p>LCAS is enabled.</p> <p>No LCAS.</p> <p>Supports the temporary removal of a VCG member during the member failure. Only supported by the ML1000-2 and ML100T-12 cards.</p>
<BUFFERS>	(Optional) Buffer type. The default value is DEFAULT. The FC_MR-4 card supports DEFAULT and EXPANDED buffers. Other data cards support DEFAULT buffers only. The parameter type is BUFFER_TYPE, which is the buffer type (used in VCAT).
<ul style="list-style-type: none"> <li>• DEFAULT</li> <li>• EXPANDED</li> </ul>	<p>Default buffer value</p> <p>Expanded buffer value</p>
<NAME>	(Optional) Name of the VCAT group. NAME is a string.
<PST>	(Optional) Primary state. The parameter type is PST, which indicates the current overall service condition of an entity.
<ul style="list-style-type: none"> <li>• IS</li> <li>• OOS</li> </ul>	<p>In Service</p> <p>Out of Service</p>

## 21.151 RTRV-VLAN

(Cisco ONS 15454) The Retrieve Virtual LAN (RTRV-VLAN) command retrieves a virtual LAN entry from the VLAN database. The VLAN database is a collection of VLANs used in an NE.

### Usage Guidelines

- If the AID is invalid, an IIAC (Invalid AID) error message is returned.

### Category

Ethernet

### Security

Retrieve

### Input Format

RTRV-VLAN:[<TID>]:<AID>:<CTAG>[:::];

### Input Example

RTRV-VLAN:ROCKS:VLAN-4096:1;

### Input Parameters

<AID>	The AID is used to access the VLAN.
• VLAN-{0-4096}	The AID for a single VLAN. The value 0 is reserved for untagged VLANs.

### Output Format

```
SID DATE TIME
M CTAG COMPLD
"<AID>::[NAME=<NAME>],[PROTN=<PROTN>]:"
;
```

### Output Example

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"VLAN-4096::NAME="MYVLAN",PROTN=Y:"
;
```

### Output Parameters

<AID>	Aid is used to access the VLAN.
• VLAN-{0-4096}	The AID for a single VLAN. The value 0 is reserved for untagged VLANs.
<NAME>	Indicates the VLAN name.
<PROTN>	Indicates the VLAN protection (enabled or disabled).
• Y	VLAN protection is enabled.
• N	(Default) VLAN protection is disabled.

## 21.152 RTRV-VLAN-ETH

(Cisco ONS 15454)

The VLAN attributes on a L2 ethernet port command retrieves the VLAN Profile associated to the couple L2 Ethernet port - VLAN.

It retrieves also the Alarm status of a VLAN associated to a L2 ethernet port and the Multicast Mac address list.

### Usage Guidelines

This command accept the ALL AID.

### Category

ETHERNET

### Security

Retrieve

### Input Format

RTRV-VLAN-ETH[:<TID>]:<AID>:<CTAG>[:<VLAN\_ID>],[<VLAN\_TYPE>][:];

### Input Example

RTRV-VLAN-ETH:TID:ETH-1-1-1:CTAG::110;

### Input Parameters

<AID>	Ethernet aids used to access L2 Ethernet ports.
<ul style="list-style-type: none"> <li>ALL</li> </ul>	The ALL aid is applicable for RTRV-only commands, basically the RTRV-rr type of commands.
<ul style="list-style-type: none"> <li>ETH[-{1-30}]-{1-5,12-16}-{1-22}-1</li> </ul>	Facility aid for GE-XP card.
<ul style="list-style-type: none"> <li>ETH[-{1-30}]-{1-6,12-17}-{1-4}-1</li> </ul>	Facility aid for 10GE-XP card.
<VLAN_ID>	The VLAN identifier. A VLAN ID is a number in the range 1..4096. The value of 0 is reserved to UNTAGged VLAN.
VLAN_TYPE	Specifies the type of VLAN.
<ul style="list-style-type: none"> <li>SVLAN</li> <li>CVLAN</li> </ul>	Service provider VLAN. Customer VLAN.

### Output Format

```
SID DATE TIME
M CTAG COMPLD
"<AID>:<VLANID>,<VLANTYPE>:[<ALM>],[<ALMDAT>],[<ALMTM>],[<BWP>],[<IGMPIP>]:
"
;
```

### Output Example

TID-000 1998-06-20 14:30:00

M 001 COMPLD

```
"ETH-1-1-1:110:ALM=VLAN-AIS,ALMDAT=08-07,ALMTM=16-38-57,BWP=23:";
;
```

### Output Parameters

<AID>	Ethernet aids are used to access L2 Ethernet ports.
ALL	The ALL aid is applicable for RTRV-only commands, basically the RTRV-rr type of commands. For e.g. RTRV-ETH with ALL aid returns all ETH ports on the node.
<ul style="list-style-type: none"> <li>ETH[-{1-30}]-{1-5,12-16}-{1-22}-1</li> </ul>	Facility aid for GE-XP card in the format of:ETH-[shelf]-[slot]-[ppm]-[port]
<ul style="list-style-type: none"> <li>ETH[-{1-30}]-{1-6,12-17}-{1-4}-1</li> </ul>	Facility aid for 10GE-XP card in the format of:ETH-[shelf]-[slot]-[ppm]-[port]
<VLANID>	This is the VLAN identifier. A VLAN ID is a number in the range 1..4096. The value of 0 is reserved to UNTAGged VLAN.This identifier is used for both CE (Customer) VLAN ID and S (Service Provider) VLAN ID.Default value is -
VLAN_TYPE	Specifies the type of VLAN.
<ul style="list-style-type: none"> <li>SVLAN</li> <li>CVLAN</li> </ul>	Service provider VLAN. Customer VLAN.
<ALM>	This is used to represent the Vlan Alarm status
<ul style="list-style-type: none"> <li>VLAN-AIS</li> </ul>	Alarm condition indicating Vlan is lost
<ALMDAT>	identifies the date. date is a String. Default value is - "current date"
<ALMTM>	identifies the time. time is a String. Default value is - current time
<BWP>	This is the BWP identifier. A BWP ID is a number in the range 0..10000. The value of 0 is reserved for the default profile that can't be edited nor delete. - Default value is 0
<IGMPIP>	IGMP IP address. Is the Multicast IP address indicating the IGMP group activated on a L2 Ethernet port to provide multicast stream through a specific S-Vlan. Default value is -

## 21.153 RTRV-VT

(Cisco ONS 15454) The Retrieve Virtual Tributary (RTRV-VT) command retrieves the attributes associated with a VT path based on the granularity level of NE- or slot-specific VTs.

### Usage Guidelines

- Supported AIDs are ALL, SLOT-N (N=1,2,...ALL), VT-<SLOT>[-<PORT>]-<STS NUMBER>-<VT GROUP>-<VT NUMBER>.
- The RVRTV, RVTM, HOLDOFFTIMER, and UPSRPTHSTATE parameters only apply to UPSR.

### Category

Paths

**Security** Retrieve

**Input Format** RTRV-VT:[<TID>]:<AID>:<CTAG>;

**Input Example** RTRV-VT:TID:VT1-1-1-1-1:1;

**Input Parameters**

<AID>	Access identifier from the <a href="#">“26.2 AidUnionId”</a> section on page 26-13.
-------	---

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<AID>:[LEVEL=<LEVEL>],[RVRTV=<RVRTV>],[RVTM=<RVTM>],
[HOLDOFFTIMER=<HOLDOFFTIMER>],[TACC=<TACC>],[TAPTYPE=<TAPTYPE>],
[UPSRPTHSTATE=<UPSRPTHSTATE>]:[<PST>],[<SST>]”
;
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
“VT1-1-1-1-1-1::LEVEL=VT1,RVRTV=Y,RVTM=1.0,HOLDOFFTIMER=2000,TACC=8,
TAPTYPE=SINGLE,UPSRPTHSTATE=ACT:OOS,AINS”
;
```

**Output Parameters**

<AID>	Access identifier from the <a href="#">“26.2 AidUnionId”</a> section on page 26-13.
<LEVEL>	(Optional) The rate of the cross-connect. Indicates the rate of the cross-connected channel. Applicable only to VT1 path in SONET. The parameter type is VT_PATH, which is the modifier for some VT commands.
<ul style="list-style-type: none"> <li>VT1</li> <li>VT2</li> </ul>	Virtual Tributary 1 Virtual Tributary 2
<RVRTV>	(Optional) Revertive mode. The value Y indicates that protection switching system reverts service to the original line after restoration. The value N indicates that protection switching system does not revert service to the original line after restoration. RVRTV is applicable only for 1+1 protection switching. Null defaults to N. The parameter type is ON_OFF (disable or enable an attribute).
<ul style="list-style-type: none"> <li>N</li> <li>Y</li> </ul>	Does not revert service to original line after restoration. Reverts service to original line after restoration.
<RVTM>	(Optional) Revertive time. Only applies to path protection. Defaults to empty because RVRTV is N when a path protection path is created. The parameter type is REVERTIVE_TIME.
<ul style="list-style-type: none"> <li>0.5 to 12.0</li> </ul>	Revertive time is 0.5 to 12.0 minutes.

<HOLDOFFTIMER>	(Optional) Hold off timer. HOLDOFFTIMER is an integer.
<TACC>	(Optional) Test access. Indicates whether the digroup being provisioned is to be used as a test access digroup. Defaults to N.
<TAPTYPE>	(Optional) TAP type. The parameter type is TAPTYPE, which is the test access point type.
• DUAL	Dual FAD
• SINGLE	Single FAD
<UPSRPTHSTATE>	(Optional) Indicates whether a given AID is the working or standby path of a path protection cross-connect. The parameter type is STATUS, which is the status of the unit in the protection pair.
• ACT	The entity is the active unit in the shelf.
• NA	Status is unavailable.
• STBY	The entity is the standby unit in the shelf.
<PST>	Primary state. The parameter type is PST, which indicates the current overall service condition of an entity.
• IS	In Service
• OOS	Out of Service
<SST>	Secondary state. The parameter type is SST, which provides additional information pertaining to PST and PSTQ.
• AINS	Automatic In-Service
• DSBLD	Disabled
• LPBK	Loopback
• MEA	Mismatch of Equipment
• MT	Maintenance
• OOG	Out of Group
• SWDL	Software Download
• UAS	Unassigned
• UEQ	Unequipped

## 21.154 RTRV-VLB-REP

(Cisco ONS 15454) The Retrieve VLAN Load Balancing Resilient Ethernet Protocol (RTRV-VLB-REP) command retrieves the VLAN Load Balancing (VLB) for REP Segment on the ethernet ports.

### Usage Guidelines

- REP must be configured on the ethernet port.
- This command is applicable only to GE\_XP and 10GE\_XP cards.

### Category

Ethernet

### Security

Retrieve

**Input Format** RTRV-VLB-REP:[<TID>]:<AID>:<CTAG>[:::];

**Input Example** RTRV-VLB-REP:CISCO:ETH-16-2-1:1;

<b>Input Parameters</b>	<AID>	Access identifier from the “26.17 FACILITY” section on page 26-40.
-------------------------	-------	--

**Output Format**

```
SID DATE TIME
M CTAG COMPLD
“<AID>::[VLBENABLED=<VLBENABLED>],[VLANRANGE=<VLANRANGE>],
[REPPORTID=<REPPORTID>],[PREFERRED=<PREFERRED>]”
;
```

**Output Example**

```
SID DATE TIME
M CTAG COMPLD
“ETH-16-2-1::VLBENABLED=Y,VLANRANGE=1010-1024&1010-1025,
REPPORTID=0X0134A543456785A8,PREFERRED=N”
;
```

Input Parameters	Description
<AID>	Access identifier from the “26.17 FACILITY” section on page 26-40.
<VLBENABLED>	Enables or disables the segment topology notification on ethernet entity for REP. <ul style="list-style-type: none"> <li>• Y Enables STCN on the ethernet port.</li> <li>• N Disables STCN on the ethernet port.</li> </ul>
<VLBOPERATION>	Adds or removes the range for STCN notification. <ul style="list-style-type: none"> <li>• ADD Adds the range to a list of segment ranges for STCN notification.</li> <li>• REMOVE Removes the range from a list of segment ranges for STCN notification.</li> </ul>
<VLANRANGESTART>	Indicates the VLAN range start value for VLB on REP. The valid range is 0 to 1024.
<VLANRANGEEND>	Indicates the VLAN range end value for VLB on REP. The valid range is from 0 to 1024.
<PREFERRED>	Indicates that the port is the preferred alternate port. Or the preferred port for VLAN load balancing. <ul style="list-style-type: none"> <li>• Y Yes</li> <li>• N No</li> </ul>
<REPPORTID>	Determines the REP port to trigger VLB.

## 21.155 RTRV-WDMANS

(Cisco ONS 15454) The Retrieve Wavelength Division Multiplexing Automatic Node Setup (RTRV-WDMANS) command edits the Automatic Optical Node Setup (AONS) application attributes.

**Usage Guidelines** None

**Category** DWDM

**Security** Maintenance

**Input Format** RTRV-WDMANS:[<TID>]:<AID>:<CTAG>:[<WLEN>];;

**Input Example** RTRV-WDMANS::LINE-1-13-2-TX:77::1530.33;

Input Parameters	
<AID>	The AID is used to access the WDM node or a single port of the DWDM node.
<ul style="list-style-type: none"> <li>WDMNODE</li> </ul>	Indicates the WDM node of an MSTP and accesses the NTWTYPE and DITHER WDMANS node parameters.
<ul style="list-style-type: none"> <li>LINE</li> </ul>	The optical transport section port.
<ul style="list-style-type: none"> <li>BAND</li> </ul>	The optical multiplex section port.
<ul style="list-style-type: none"> <li>CHAN</li> </ul>	The optical channel port.
<WLEN>	(Optional) The parameter type is OPTICAL_WLEN, which indicates the optical wavelength.
<ul style="list-style-type: none"> <li>1310</li> </ul>	Wavelength 1310
<ul style="list-style-type: none"> <li>1470</li> </ul>	Wavelength 1470
<ul style="list-style-type: none"> <li>1490</li> </ul>	Wavelength 1490
<ul style="list-style-type: none"> <li>1510</li> </ul>	Wavelength 1510
<ul style="list-style-type: none"> <li>1528.77</li> </ul>	Wavelength 1528.77
<ul style="list-style-type: none"> <li>1529.55</li> </ul>	Wavelength 1529.55
<ul style="list-style-type: none"> <li>1529.94</li> </ul>	Wavelength 1529.94
<ul style="list-style-type: none"> <li>1530</li> </ul>	Wavelength 1530
<ul style="list-style-type: none"> <li>1530.33</li> </ul>	Wavelength 1530.33
<ul style="list-style-type: none"> <li>1530.73</li> </ul>	Wavelength 1530.73
<ul style="list-style-type: none"> <li>1531.12</li> </ul>	Wavelength 1531.12
<ul style="list-style-type: none"> <li>1531.51</li> </ul>	Wavelength 1531.51

• 1531.90	Wavelength 1531.90
• 1532.29	Wavelength 1532.29
• 1532.68	Wavelength 1532.68
• 1533.07	Wavelength 1533.07
• 1533.47	Wavelength 1533.47
• 1533.86	Wavelength 1533.86
• 1534.25	Wavelength 1534.25
• 1534.64	Wavelength 1534.64
• 1535.04	Wavelength 1535.04
• 1535.43	Wavelength 1535.43
• 1535.82	Wavelength 1535.82
• 1536.22	Wavelength 1536.22
• 1536.61	Wavelength 1536.61
• 1537	Wavelength 1537
• 1537.40	Wavelength 1537.40
• 1537.79	Wavelength 1537.79
• 1538.19	Wavelength 1538.19
• 1538.58	Wavelength 1538.58
• 1538.98	Wavelength 1538.98
• 1539.37	Wavelength 1539.37
• 1539.77	Wavelength 1539.77
• 1540.16	Wavelength 1540.16
• 1540.56	Wavelength 1540.56
• 1540.95	Wavelength 1540.95
• 1541.35	Wavelength 1541.35
• 1541.75	Wavelength 1541.75
• 1542.14	Wavelength 1542.14
• 1542.35	Wavelength 1542.35
• 1542.54	Wavelength 1542.54
• 1542.94	Wavelength 1542.94
• 1543.33	Wavelength 1543.33
• 1543.73	Wavelength 1543.73
• 1544.13	Wavelength 1544.13
• 1544.53	Wavelength 1544.53
• 1544.92	Wavelength 1544.92
• 1545.32	Wavelength 1545.32
• 1545.72	Wavelength 1545.72
• 1546.12	Wavelength 1546.12
• 1546.52	Wavelength 1546.52
• 1546.92	Wavelength 1546.92
• 1547.32	Wavelength 1547.32

• 1547.72	Wavelength 1547.72
• 1548.12	Wavelength 1548.12
• 1548.51	Wavelength 1548.51
• 1548.92	Wavelength 1548.92
• 1549.32	Wavelength 1549.32
• 1549.71	Wavelength 1549.71
• 1550	Wavelength 1500
• 1550.12	Wavelength 1550.12
• 1550.52	Wavelength 1550.52
• 1550.92	Wavelength 1550.92
• 1551.32	Wavelength 1551.32
• 1551.72	Wavelength 1551.72
• 1552.12	Wavelength 1552.12
• 1552.52	Wavelength 1552.52
• 1552.93	Wavelength 1552.93
• 1553.33	Wavelength 1553.33
• 1553.73	Wavelength 1553.73
• 1554.13	Wavelength 1554.13
• 1554.13	Wavelength 1554.13
• 1554.94	Wavelength 1554.94
• 1555.34	Wavelength 1555.34
• 1555.75	Wavelength 1555.75
• 1556.15	Wavelength 1556.15
• 1556.55	Wavelength 1556.55
• 1556.96	Wavelength 1556.96
• 1557.36	Wavelength 1557.36
• 1557.77	Wavelength 1557.77
• 1558.17	Wavelength 1558.17
• 1558.58	Wavelength 1558.58
• 1558.98	Wavelength 1558.98
• 1559.39	Wavelength 1559.39
• 1559.79	Wavelength 1559.79
• 1560.20	Wavelength 1560.20
• 1560.61	Wavelength 1560.61
• 1561.01	Wavelength 1561.01
• 1561.42	Wavelength 1561.42
• 1561.83	Wavelength 1561.83
• 1570	Wavelength 1570
• 1570.83	Wavelength 1570.83
• 1571.24	Wavelength 1571.24
• 1571.65	Wavelength 1571.65

• 1572.06	Wavelength 1572.06
• 1572.48	Wavelength 1572.48
• 1572.89	Wavelength 1572.89
• 1573.30	Wavelength 1573.30
• 1573.71	Wavelength 1573.71
• 1574.13	Wavelength 1574.13
• 1574.54	Wavelength 1574.54
• 1574.95	Wavelength 1574.95
• 1575.37	Wavelength 1575.37
• 1575.78	Wavelength 1575.78
• 1576.20	Wavelength 1576.20
• 1576.61	Wavelength 1576.61
• 1577.03	Wavelength 1577.03
• 1577.44	Wavelength 1577.44
• 1577.86	Wavelength 1577.86
• 1578.27	Wavelength 1578.27
• 1578.69	Wavelength 1578.69
• 1579.10	Wavelength 1579.10
• 1579.52	Wavelength 1579.52
• 1579.93	Wavelength 1579.93
• 1580.35	Wavelength 1580.35
• 1580.77	Wavelength 1580.77
• 1581.18	Wavelength 1581.18
• 1581.60	Wavelength 1581.60
• 1582.02	Wavelength 1582.02
• 1582.44	Wavelength 1582.44
• 1582.85	Wavelength 1582.85
• 1583.27	Wavelength 1583.27
• 1583.69	Wavelength 1583.69
• 1584.11	Wavelength 1584.11
• 1584.53	Wavelength 1584.53
• 1584.95	Wavelength 1584.95
• 1585.36	Wavelength 1585.36
• 1585.78	Wavelength 1585.78
• 1586.20	Wavelength 1586.20
• 1586.62	Wavelength 1586.62
• 1587.04	Wavelength 1587.04
• 1587.46	Wavelength 1587.46
• 1587.88	Wavelength 1587.88
• 1588.30	Wavelength 1588.30
• 1588.73	Wavelength 1588.73

• 1589.15	Wavelength 1589.15
• 1589.57	Wavelength 1589.57
• 1589.99	Wavelength 1589.99
• 1590	Wavelength 1590
• 1590.41	Wavelength 1590.41
• 1590.83	Wavelength 1590.83
• 1591.26	Wavelength 1591.26
• 1591.68	Wavelength 1591.68
• 1592.10	Wavelength 1592.10
• 1592.52	Wavelength 1592.52
• 1592.95	Wavelength 1592.95
• 1593.37	Wavelength 1593.37
• 1593.79	Wavelength 1593.79
• 1594.22	Wavelength 1594.22
• 1594.64	Wavelength 1594.64
• 1595.06	Wavelength 1595.06
• 1595.49	Wavelength 1595.49
• 1596.34	Wavelength 1596.34
• 1596.76	Wavelength 1596.76
• 1597.19	Wavelength 1597.19
• 1597.62	Wavelength 1597.62
• 1598.04	Wavelength 1598.04
• 1598.47	Wavelength 1598.47
• 1598.89	Wavelength 1598.89
• 1599.32	Wavelength 1599.32
• 1599.75	Wavelength 1599.75
• 1600.06	Wavelength 1600.06
• 1601.03	Wavelength 1601.03
• 1601.46	Wavelength 1601.46
• 1601.88	Wavelength 1601.88
• 1602.31	Wavelength 1602.31
• 1602.74	Wavelength 1602.74
• 1603.17	Wavelength 1603.17
• 1603.60	Wavelength 1603.60
• 1604.03	Wavelength 1604.03
• 1610	Wavelength 1610

**Output Format**

```

SID DATE TIME
M CTAG COMPLD
"<AID>:[<WLEN>]:[VOAATTN=<VOAATTN>],[VOAATTNFLG=<VOAATTNFLG>],[POWEROSC=<POWEROSC>],[POWEROSCFLG=<POWEROSCFLG>],[NTWTYPE=<NTWTYPE>],[NTWTYPEFLG=<NTWTYPEFLG>],[CHLOSS=<CHLOSS>],[CHLOSSFLG=<CHLOSSFLG>],[GAIN=<GA

```

```
IN>],[GAINFLG=<GAINFLG>],[TILT=<TILT>],[TILTFLG=<TILTFLG>],[CHPWR=<CHPWR>],[C
HPWRFLG=<CHPWRFLG>],[AMPLMODE=<AMPLMODE>],[AMPLMODEFLG=<AMPLMODEFL
G>],[RATIO=<RATIO>],[RATIOFLG=<RATIOFLG>],[OSCLOSE=<OSCLOSE>],[OSCLOSEFLG
=<OSCLOSEFLG>],[OPTICALNODETYPE=<OPTICALNODETYPE>],[DITHER=<DITHER>],[DI
THERFLG=<DITHERFLG>],[TOTALPWR=<TOTALPWR>],[TOTALPWRFLG=<TOTALPWRFLG
>],[HIGHSLVEXP=<HIGHSLVEXP>],[HIGHSLVEXPFLG=<HIGHSLVEXPFLG>],[LOWSLVEXP=
<LOWSLVEXP>],[LOWSLVEXPFLG=<LOWSLVEXPFLG>],[LASTRUNDAT=<LASTRUNDAT>],[
LASTRUNTM=<LASTRUNTM>][:]";
```

**Output Example**

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
CHAN-1-13-1-TX::CHPWR=-14.1,CHPWRFLG=PROV,
"WDMNODE::NTWTYPE=METRO-CORE,NTWTYPEFLG=DFLT,OPTICALNODETYPE=OADM,
LASTRUNDAT=2009-09-03,LASTRUNTM=11-52-18,:"
```

**Output Parameters**

<AID>	The AID is used to access the WDM node or a single port of the DWDM node.
• WDMNODE	Indicates the WDM node of an MSTP and accesses the NTWTYPE and DITHER WDMANS node parameters.
• LINE	The optical transport section port.
• BAND	The optical multiplex section port.
• CHAN	The optical channel port.
<WLEN>	(Optional) The parameter type is OPTICAL_WLEN, which indicates the optical wavelength.
• 1310	Wavelength 1310
• 1470	Wavelength 1470
• 1490	Wavelength 1490
• 1510	Wavelength 1510
• 1528.77	Wavelength 1528.77
• 1529.55	Wavelength 1529.55
• 1529.94	Wavelength 1529.94
• 1530	Wavelength 1530
• 1530.33	Wavelength 1530.33
• 1530.73	Wavelength 1530.73
• 1531.12	Wavelength 1531.12
• 1531.51	Wavelength 1531.51
• 1531.90	Wavelength 1531.90
• 1532.29	Wavelength 1532.29
• 1532.68	Wavelength 1532.68
• 1533.07	Wavelength 1533.07
• 1533.47	Wavelength 1533.47
• 1533.86	Wavelength 1533.86
• 1534.25	Wavelength 1534.25

• 1534.64	Wavelength 1534.64
• 1535.04	Wavelength 1535.04
• 1535.43	Wavelength 1535.43
• 1535.82	Wavelength 1535.82
• 1536.22	Wavelength 1536.22
• 1536.61	Wavelength 1536.61
• 1537	Wavelength 1537
• 1537.40	Wavelength 1537.40
• 1537.79	Wavelength 1537.79
• 1538.19	Wavelength 1538.19
• 1538.58	Wavelength 1538.58
• 1538.98	Wavelength 1538.98
• 1539.37	Wavelength 1539.37
• 1539.77	Wavelength 1539.77
• 1540.16	Wavelength 1540.16
• 1540.56	Wavelength 1540.56
• 1540.95	Wavelength 1540.95
• 1541.35	Wavelength 1541.35
• 1541.75	Wavelength 1541.75
• 1542.14	Wavelength 1542.14
• 1542.35	Wavelength 1542.35
• 1542.54	Wavelength 1542.54
• 1542.94	Wavelength 1542.94
• 1543.33	Wavelength 1543.33
• 1543.73	Wavelength 1543.73
• 1544.13	Wavelength 1544.13
• 1544.53	Wavelength 1544.53
• 1544.92	Wavelength 1544.92
• 1545.32	Wavelength 1545.32
• 1545.72	Wavelength 1545.72
• 1546.12	Wavelength 1546.12
• 1546.52	Wavelength 1546.52
• 1546.92	Wavelength 1546.92
• 1547.32	Wavelength 1547.32
• 1547.72	Wavelength 1547.72
• 1548.12	Wavelength 1548.12
• 1548.51	Wavelength 1548.51
• 1548.92	Wavelength 1548.92
• 1549.32	Wavelength 1549.32
• 1549.71	Wavelength 1549.71
• 1550	Wavelength 1500

• 1550.12	Wavelength 1550.12
• 1550.52	Wavelength 1550.52
• 1550.92	Wavelength 1550.92
• 1551.32	Wavelength 1551.32
• 1551.72	Wavelength 1551.72
• 1552.12	Wavelength 1552.12
• 1552.52	Wavelength 1552.52
• 1552.93	Wavelength 1552.93
• 1553.33	Wavelength 1553.33
• 1553.73	Wavelength 1553.73
• 1554.13	Wavelength 1554.13
• 1554.13	Wavelength 1554.13
• 1554.94	Wavelength 1554.94
• 1555.34	Wavelength 1555.34
• 1555.75	Wavelength 1555.75
• 1556.15	Wavelength 1556.15
• 1556.55	Wavelength 1556.55
• 1556.96	Wavelength 1556.96
• 1557.36	Wavelength 1557.36
• 1557.77	Wavelength 1557.77
• 1558.17	Wavelength 1558.17
• 1558.58	Wavelength 1558.58
• 1558.98	Wavelength 1558.98
• 1559.39	Wavelength 1559.39
• 1559.79	Wavelength 1559.79
• 1560.20	Wavelength 1560.20
• 1560.61	Wavelength 1560.61
• 1561.01	Wavelength 1561.01
• 1561.42	Wavelength 1561.42
• 1561.83	Wavelength 1561.83
• 1570	Wavelength 1570
• 1570.83	Wavelength 1570.83
• 1571.24	Wavelength 1571.24
• 1571.65	Wavelength 1571.65
• 1572.06	Wavelength 1572.06
• 1572.48	Wavelength 1572.48
• 1572.89	Wavelength 1572.89
• 1573.30	Wavelength 1573.30
• 1573.71	Wavelength 1573.71
• 1574.13	Wavelength 1574.13
• 1574.54	Wavelength 1574.54

• 1574.95	Wavelength 1574.95
• 1575.37	Wavelength 1575.37
• 1575.78	Wavelength 1575.78
• 1576.20	Wavelength 1576.20
• 1576.61	Wavelength 1576.61
• 1577.03	Wavelength 1577.03
• 1577.44	Wavelength 1577.44
• 1577.86	Wavelength 1577.86
• 1578.27	Wavelength 1578.27
• 1578.69	Wavelength 1578.69
• 1579.10	Wavelength 1579.10
• 1579.52	Wavelength 1579.52
• 1579.93	Wavelength 1579.93
• 1580.35	Wavelength 1580.35
• 1580.77	Wavelength 1580.77
• 1581.18	Wavelength 1581.18
• 1581.60	Wavelength 1581.60
• 1582.02	Wavelength 1582.02
• 1582.44	Wavelength 1582.44
• 1582.85	Wavelength 1582.85
• 1583.27	Wavelength 1583.27
• 1583.69	Wavelength 1583.69
• 1584.11	Wavelength 1584.11
• 1584.53	Wavelength 1584.53
• 1584.95	Wavelength 1584.95
• 1585.36	Wavelength 1585.36
• 1585.78	Wavelength 1585.78
• 1586.20	Wavelength 1586.20
• 1586.62	Wavelength 1586.62
• 1587.04	Wavelength 1587.04
• 1587.46	Wavelength 1587.46
• 1587.88	Wavelength 1587.88
• 1588.30	Wavelength 1588.30
• 1588.73	Wavelength 1588.73
• 1589.15	Wavelength 1589.15
• 1589.57	Wavelength 1589.57
• 1589.99	Wavelength 1589.99
• 1590	Wavelength 1590
• 1590.41	Wavelength 1590.41
• 1590.83	Wavelength 1590.83
• 1591.26	Wavelength 1591.26

• 1591.68	Wavelength 1591.68
• 1592.10	Wavelength 1592.10
• 1592.52	Wavelength 1592.52
• 1592.95	Wavelength 1592.95
• 1593.37	Wavelength 1593.37
• 1593.79	Wavelength 1593.79
• 1594.22	Wavelength 1594.22
• 1594.64	Wavelength 1594.64
• 1595.06	Wavelength 1595.06
• 1595.49	Wavelength 1595.49
• 1596.34	Wavelength 1596.34
• 1596.76	Wavelength 1596.76
• 1597.19	Wavelength 1597.19
• 1597.62	Wavelength 1597.62
• 1598.04	Wavelength 1598.04
• 1598.47	Wavelength 1598.47
• 1598.89	Wavelength 1598.89
• 1599.32	Wavelength 1599.32
• 1599.75	Wavelength 1599.75
• 1600.06	Wavelength 1600.06
• 1601.03	Wavelength 1601.03
• 1601.46	Wavelength 1601.46
• 1601.88	Wavelength 1601.88
• 1602.31	Wavelength 1602.31
• 1602.74	Wavelength 1602.74
• 1603.17	Wavelength 1603.17
• 1603.60	Wavelength 1603.60
• 1604.03	Wavelength 1604.03
• 1610	Wavelength 1610
<VOAATTN>	The value of calibrated attenuation for the VOA expressed in dBm. The range is 0.0 to +30.0. VOAATTN is a float.
<VOAATTNFLG>	Status flag indicating the state of the WDMANS parameter.
<POWEROSC>	WDM-ANS OSC power parameter.
<POWEROSCFLG>	Status flag indicating the state of the WDMANS parameter.
<NTWTYPE>	WDM-ANS network type parameter.
<NTWTYPEFLG>	Status flag indicating the state of the WDMANS parameter.
<CHLOSS>	WDM-ANS channel loss parameter.
<CHLOSSFLG>	Status flag indicating the state of the WDMANS parameter.
<GAIN>	WDM-ANS amplifier gain parameter.
<GAINFLG>	Status flag indicating the state of the WDMANS parameter.
<TILT>	WDM-ANS amplifier tilt parameter.
<TILTFLG>	Status flag indicating the state of the WDMANS parameter.

<CHPWR>	WDM-ANS channel power parameter.
<CHPWRFLG>	Status flag indicating the state of the WDMANS parameter.
<AMPLMODE>	WDM-ANS amplifier mode parameter.
<AMPLMODEFLG>	Status flag indicating the state of the WDMANS parameter.
<RATIO>	WDM-ANS Raman amplifier pump ratio parameter.
<RATIOFLG>	.Status flag indicating the state of the WDMANS parameter.
<OSCLOSS>	WDM-ANS OSC channel loss parameter.
<OSCLOSSFLG>	Status flag indicating the state of the WDMANS parameter.
<OPTICALNODETYPE>	(Optional) The optical configuration type for the NE. The parameter type is OPTICAL_NODE_TYPE, which is the optical configuration types for NEs.
<DITHER>	WDM-ANS WXC dithering parameter.
<DITHERFLG>	Status flag indicating the state of the WDMANS parameter.
<TOTALPWR>	WDM-ANS Raman amplifier total power in mW.
<TOTALPWRFLG>	Status flag indicating the state of the WDMANS parameter.
<HIGHSLVEXP>	Span loss verification—high value.
<HIGHSLVEXPFLG>	Status flag indicating the state of the WDMANS parameter.
<LOWSLVEXP>	Span loss verification—low value.
<LOWSLVEXPFLG>	Status flag indicating the state of the WDMANS parameter.
<LASTRUNDAT>	(Optional) The last date when the WDMANS application calculated the parameters. The format is MM-DD, where MM (month of year) ranges from 1 to 12 and DD (day of month) ranges from 1 to 31.
<LASTRUNTM>	(Optional) The last time when the WDMANS application calculated the parameters. The format is HH-MM, where HH (hour of day) ranges from 1 to 23 and MM (minute of hour) ranges from 0 to 59.
<LASTCALCDAT>	(Optional) The last date when the WDMANS application was run automatically or by user request. The format is MM-DD, where MM (month of year) ranges from 1 to 12 and DD (day of month) ranges from 1 to 31.
<LASTCALSTM>	(Optional) The last time when the WDMANS application was run automatically or by user request. The format is HH-MM, where HH (hour of day) ranges from 1 to 23 and MM (minute of hour) ranges from 0 to 59.

## 21.156 RTRV-WDMSIDE

(Cisco ONS 15454) The Retrieve Wavelength Division Multiplexing Side (RTRV-WDMSIDE) command retrieves the WDM side and defines its attributes.

### Usage Guidelines

None

### Category

DWDM

### Security

Maintenance

### Input Format

RTRV-WDMSIDE:[<TID>]:<AID>:<CTAG>[:::];

### Input Example

RTRV-WDMSIDE:PENNGROVE:WDMSIDE-A:114;

### Input Parameters

<AID>	The AID is used to access the WDM side of an DWDM node. This is applicable to WDMANS and APC applications of the NE.
• WDMSIDE-{A,B,C,D,E,F,G,H}	DWDM side identifier.

### Output Format

```
SID DATE TIME
M CTAG COMPLD
"<AID>::LINEIN=<LINEIN>,LINEOUT=<LINEOUT>,[OCS=<OSC>][:]"
;
```

### Output Example

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"WDMSIDE-A::LINEIN=LINE-1-3-RX,LINEOUT=LINE-1-3-TX,OSC=FAC-8-1"
;
```

### Output Parameters

<AID>	The AID is used to access the WDM side of an DWDM node. This is applicable to WDMANS and APC applications of the NE.
• WDMSIDE-{A,B,C,D,E,F,G,H}	DWDM side identifier.
<LINEIN>	(Optional) Used to access the OTS layer of optical network units.
• ALL	Indicates all the OTSs of the NE. The ALL AID is applicable only for retrieve commands.

<ul style="list-style-type: none"> <li>LINE[-{1-8}]-{1-6,12-17}-{1-3} -ALL</li> </ul>	All the lines (COM=1, OSC=2, LINE=3) in OPT-BST, OPT-BST-E, OPT-BST-L, OPT-AMP-17-C, and OPT-AMP-23-C cards where the format is LINE-[SHELF]-[SLOT]-[PORT]-ALL.
<ul style="list-style-type: none"> <li>LINE[-{1-8}]-{1-6,12-17}-{1-3} -{RX,TX}</li> </ul>	The receive/transmit lines (COM=1, OSC=2, LINE=3) in OPT-BST, OPT-BST-E, OPT-BST-L, OPT-AMP-17-C, and OPT-AMP-23-C cards where the format is LINE-[SHELF]-[SLOT]-[PORT]-[DIRN].
<LINEOUT>	(Optional) Used to access the OTS layer of optical network units.
<ul style="list-style-type: none"> <li>ALL</li> </ul>	Indicates all the OTSs of the NE. The ALL AID is applicable for retrieve-only commands.
<ul style="list-style-type: none"> <li>LINE[-{1-8}]-{1-6,12-17}-{1-3} -ALL</li> </ul>	All the lines (COM=1, OSC=2, LINE=3) in OPT-BST, OPT-BST-E, OPT-BST-L, OPT-AMP-17-C, and OPT-AMP-23-C cards where the format is LINE-[SHELF]-[SLOT]-[PORT]-ALL.
<ul style="list-style-type: none"> <li>LINE[-{1-8}]-{1-6,12-17}-{1-3} -{RX,TX}</li> </ul>	The receive/transmit lines (COM=1, OSC=2, LINE=3) in OPT-BST, OPT-BST-E, OPT-BST-L, OPT-AMP-17-C, and OPT-AMP-23-C cards where the format is LINE-[SHELF]-[SLOT]-[PORT]-[DIRN].
<OSC>	Facility AID from the <a href="#">“26.17 FACILITY” section on page 26-40</a> .

## 21.157 RTRV-WLEN

(Cisco ONS 15454) The Retrieve Wavelength (RTRV-WLEN) command retrieves the wavelength provisioning information.

**Usage Guidelines** None

**Category** DWDM

**Security** Retrieve

**Input Format** RTRV-WLEN:[<TID>]:<AID>:<CTAG>;

**Input Example** RTRV-WLEN:PENNGROVE:WLEN-A-ADD-1530.33:114;

**Input Parameters** <AID> Access identifier from the [“26.35 WLEN” section on page 26-60](#).

**Output Format**

```

SID DATE TIME
M CTAG COMPLD
  "<AID>:<CCT>:[SIZE=<SIZE>],[CKTID=<CKTID>],[TOSIDE=<TOSIDE>],[SRC=<SRC>],
[DST=<DST>]:<PST_PSTQ>,<SSTQ>]"
;

```

**Output Example**

```

TID-000 1998-06-20 14:30:00
M 001 COMPLD
  "WLEN-A-ADD-1530.33:1WAY:SIZE=MULTI-RATE,CKTID=CKTID,SRC=CHAN-4-1-RX,
DST=LINEWL-1-3-TX-1530.33:OOS-AU,AINS"
;

```

**Output Parameters**

<AID>	Access identifier from the <a href="#">“26.35 WLEN”</a> section on page 26-60.
<CCT>	Identifies the wavelength connection types.
<ul style="list-style-type: none"> <li>1WAY</li> </ul>	A unidirectional wavelength connection for one specified ring direction.
<ul style="list-style-type: none"> <li>2WAY</li> </ul>	A bidirectional wavelength connection for both the ring directions
<SIZE>	Identifies the DWDM circuit size used on a wavelength.
<CKTID>	(Optional) Circuit identification parameter that contains the a common language ID or other alias of the circuit being provisioned. It cannot contain blank spaces. CKTID is a string.
<TOSIDE>	The AID is used to access the WDM side of a DWDM node.
<ul style="list-style-type: none"> <li>WDMSIDE-{A,B,C,D,E,F,G,H}</li> </ul>	DWDM side identifier.
<SRC>	Source access identifier from the <a href="#">“26.20 LINEWL”</a> section on page 26-46.
<DST>	Destination AID of the cross-connection from the <a href="#">“26.20 LINEWL”</a> section on page 26-46.
<PST_PSTQ>	Primary state of the entity. The parameter type is PST_PSTQ, which is the service state of the entity described by primary state (PST) and primary state qualifier (PSTQ).
<ul style="list-style-type: none"> <li>IS_NR</li> </ul>	In Service and Normal
<ul style="list-style-type: none"> <li>OOS-AU</li> </ul>	Out of Service and Autonomous
<ul style="list-style-type: none"> <li>OOS-AUMA</li> </ul>	Out of Service and Autonomous Management
<ul style="list-style-type: none"> <li>OOS-MA</li> </ul>	Out of Service and Management
<SSTQ>	(Optional) Secondary state of the entity. The parameter type is secondary state (SST), which provides additional information pertaining to PST and PSTQ.
<ul style="list-style-type: none"> <li>AINS</li> </ul>	Automatic In-Service
<ul style="list-style-type: none"> <li>DSBLD</li> </ul>	Disabled
<ul style="list-style-type: none"> <li>LPBK</li> </ul>	Loopback
<ul style="list-style-type: none"> <li>MEA</li> </ul>	Mismatch of Equipment
<ul style="list-style-type: none"> <li>MT</li> </ul>	Maintenance

• OOG	Out of Group
• SWDL	Software Download
• UAS	Unassigned
• UEQ	Unequipped





# CHAPTER 22

## SCHEM Commands

This chapter provides schedule (SCHED) commands for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.



### Note

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

## 22.1 SCHED-PMREPT-<MOD2>

(Cisco ONS 15454) The Schedule Performance Monitoring Report for 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 5GIB, 8GFC, CHGRP, CLNT, D1VIDEO, DS1, DV6000, DVBASI, E1, E3, E4, EC1, ESCON, ETRCLO, ETH, FSTE, G1000, GFPOS, GIGE, HDLC, HDTV, ISC1, ISCCOMPAT, ISC3PEER2R, ISC3PEER1G, ISC3PEER2G, OC12, OC192, OC3, OC48, OC768, OCH, OMS, OTS, OTU3, POS, STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, STS9C, T1, T3, VC12, VC3, VT1, or VT2 (SCHED-PMREPT-<MOD2>) command schedules/reschedules the network element (NE) to report the performance monitoring (PM) data for a line facility or for a synchronous transport signal (STS) path periodically, using the automatic REPT PM message. This command can also remove the previously created schedule.

### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

The automatic PM reporting scheduled by this command is inhibited by default. ALW-PMREPT-ALL can be used to allow the NE to send the PM report. INH-PMREPT-ALL can be used to stop the NE from sending the PM report. The schedules created for the NE can be retrieved by RTRV-PMSCHED command.

The deletion of the schedule for the automatic PM reporting can be done by issuing SCHED-PMREPT-<MOD2> with the NUMREPT parameter equal to zero.



### Note

- The current maximum number of schedules allowed to be created for a NE is 1000. If this number of schedules has been created for the NE, an error message “Reach Limits Of MAX Schedules Allowed. Can Not Add More” will be returned if another schedule creation is attempted on the NE. Frequent use of automatic PM reporting will significantly degrade the performance of the NE.
- A schedule cannot be created if the card associated with the schedule is not provisioned, or if the cross-connection associated with the schedule has not been created. However, a schedule is allowed to be deleted even if a card is not provisioned, or if the cross-connection has not been created.

- The number of outstanding PM reports counter (NUMREPT) will not be decremented, and the scheduled automatic PM reporting will not start if the card associated with the schedule is not physically plugged into the slot.
- An expired schedule would not be automatically removed. The SCHED-PMREPT command has to be issued with the NUMREPT parameter equal to zero in order to delete the expired schedule.
- Identical schedules for an NE are not allowed. Two schedules are considered identical if they have the same AID, MOD2 type, performance monitor type, performance monitor level, location, direction, and time period.

An error message “Duplicate Schedule” is returned if you try to create a schedule that is a duplicate of a existing schedule. However, if the existing schedule expires (with the parameter NUMINVL equal to zero when retrieved by the RTRV-PMSCHED command, that is, no more PM reporting is sent) the new schedule with the identical parameters will replace the existing schedule.

- When a electrical or optical card is unprovisioned by the DLT-EQPT command, or a cross-connection is deleted by the DLT-CRS command, the schedules associated with that card or that cross-connection will be removed silently by the NE. This removal prevents another type of card or cross-connection with the same AID to be provisioned on the NE, and prevents the NE from trying to send automatic PM reports based on the existing schedules.

The card or cross-connect can be unprovisioned or deleted through CTC. The schedules associated with that card or that cross-connection will also be removed silently by the NE.

- VT1 level schedules cannot be created on Optical ports. The VT-level PMs are monitored only on the path terminating ports.

<b>Category</b>	Performance
<b>Security</b>	Retrieve
<b>Input Format</b>	SCHED-PMREPT-<MOD2>:[<TID>]:<SRC>:<CTAG>::[<REPTINVL>],[<REPTSTATM>],[<NUMREPT>],[<MONLEV>],[<LOCN>],[<TMPER>],[<TMOFST>];
<b>Input Example</b>	SCHED-PMREPT-OC3:NE-NAME:FAC-3-1:123::60-MIN,15-30,100,,1-UP,NEND,,15-MIN,0-0-15;

Input Parameters	
<REPTINVL>	<p>Reporting interval. How often a report is to generated and sent to the appropriate operating system (OS). Specifies how often a PM report is generated. The format is VAL-UN, where valid values for VAL (value) are 1 to 31 if UN (units of time) is DAY, 1 to 24 if UN is HR, or 1 to 1440 if UN is MIN. Examples are 10-DAY, 12-HR, and 100-MIN. A null value for the input defaults to 15-MIN. REPTINVL is a string.</p> <p><b>Note</b> PM schedule processing is performed every 5 minutes. Therefore, specifying a REPTINVL of 5-MIN or less would be processed at the earliest every 5 minutes.</p>
<REPTSTATM>	<p>The start time for the PM report. The format is HOD-MOH, where HOD (hour of day) ranges from 0 to 23, and MOH (minute of hour) ranges from 0 to 59. If the input value of the starting time is smaller than the current time, for example, the input value is 5-30 (5:30 in the morning), and the current time is 10:30, the reporting will be scheduled to start at 5:30 the next day. A null value defaults to the current time of day. REPTSTATM is a string.</p>
<NUMREPT>	<p>The number of reports that the schedule is expected to produce. A value of 0 is used to delete a existing identical schedule. If NUMREPT is null, the schedule will be kept in effect until it is deleted. The value of NUMREPT will continue to be decremented even though the automatic PM reporting is inhibited. NUMREPT is an integer.</p>
<MONLEV>	<p>The discriminating level of the requested monitored parameter. It applies to all MONTYPE of the scheduled PM report. The null input defaults to 1-UP. MONLEV is a string. The format is LEV-DIRN, where valid values for LEV are decimal numbers, and valid values for DIRN are as follows:</p> <ul style="list-style-type: none"> <li>• UP monitored parameter with values equal to or greater than the value of LEV will be reported.</li> <li>• DN monitored parameter with values equal to or less than the value of LEV will be reported.</li> </ul>
<LOCN>	<p>Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. A null input defaults to NEND. FEND is not supported by all MOD2 types. The parameter type is LOCATION, which is the location where the action is to take place.</p>
<ul style="list-style-type: none"> <li>• FEND</li> <li>• NEND</li> </ul>	<p>Action occurs on the far end of the facility.</p> <p>Action occurs on the near end of the facility.</p>
<TMPER>	<p>(Optional) Accumulation time period for performance counters. Defaults to 15-MIN. The parameter type is TMPER, which is the accumulation time period for the performance management center.</p>
<ul style="list-style-type: none"> <li>• 1-DAY</li> </ul>	<p>Performance parameter accumulation interval length; every 24 hours. For SONENT PM data, only one day of history data is available. For remote monitoring (RMON) managed PM data, seven days of history data are available.</p>

• 1-HR	Performance parameter accumulation interval length; every 1 hour. This is only applicable to RMON managed PM data. There are 24 hours of history data available.
• 1-MIN	Performance parameter accumulation interval length; every 1 minute. This is only applicable to RMON managed PM data. There are 60 minutes of history available.
• 15-MIN	Performance parameter accumulation interval length; every 15 minutes. There are 32 15-MIN buckets of history data available for this accumulation interval length.
• RAW-DATA	Performance parameter accumulation interval length; starting from the last time the counters were cleared. This is only applicable to RMON managed PMs.
<TMOFST>	<p>Time offset between reporting/diagnostics/exercises; from the end of the last complete accumulation time period to the beginning of the accumulation time period specified by TPER. The format is DAY-HR-MIN where DAYS (days) ranges from 0 to 99, HR (hours) ranges from 0 to 23, and MIN (minutes) ranges from 1 to 59. A null value defaults to 0-0-0. Grouping of this parameter is not supported.</p> <p>If the value specified is larger than the maximum length of PM history the system is saving, there will be no PM report for the PM schedule generated. For example, if a PM schedule for OC48 is created with TMOFST of 2-1-0 (format: day-hour-minute), no report will be generated because the system can only hold two days worth of PM history. For setting 15-MIN schedules, the system can only hold 32 15-MIN buckets, which totals eight hours. Therefore, a schedule greater than 0-8-0 will not result in PM schedules being generated. TMOFST is a string.</p>



# CHAPTER 23

## SET Commands

---

This chapter provides set (SET) commands for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.



### Note

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

---

### 23.1 SET-ALMTH-<MOD2>

(Cisco ONS 15454) The Set Alarm Threshold for 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 5GIB, 8GFC, CLNT, D1VIDEO, DS1, DV6000, DVBAS1, EC1, ESCON, ETRCLO, ETH, FSTE, GIGE, HDTV, ISC1, ISCCOMPAT, ISC3PEER2R, ISC3PEER1G, ISC3PEER2G, OC12, OC192, OC3, OC48, OC768, OCH, OMS, OTS, OTU3, T1, or T3 (SET-ALMTH-<MOD2>) command sets the alarm thresholds on the following cards/ports/channels: MXP\_2.5G\_10G, TXP\_MR\_10G, optical service channel (OSC), optical amplifier, dispersion compensation unit (DCU), multiplexer, demultiplexer, and optical add/drop multiplexing (OADM).

---

#### Usage Guidelines

This command is used to set the alarm thresholds on a facilities, ports, channels, for example. Not all MOD2 types are supported.

---

#### Category

Fault

---

#### Security

Provisioning

---

#### Input Format

SET-ALMTH-<MOD2>:[<TID>]:<AID>:<CTAG>::<CONDTYPE>,<THLEV>[,,,];

---

#### Input Example

SET-ALMTH-{MOD2}::FAC-1-1:1::OPT-LOW,10;

## Input Parameters

<AID>	Access identifier from the “26.1 ALL” section on page 26-1. Must not be null.
<CONDTYPE>	Condition type for an alarm or a reported event. The parameter type is ALM_THR, which is the alarm threshold list for MXP_2.5G_10G, TXP_MR_10G, OSCM, OSC-CSM, OPT-PRE, OPT-BST, MD-4, MUX-32, DMX-32, AD-1C, AD-2C, AD-4C, AD-1B, and AD-4B cards.
• ADD-HDEG	ADD Power - High Degrade
• ADD-HFAIL	ADD Power - High Failure
• ADD-LDEG	ADD Power - Low Degrade
• ADD-LFAIL	ADD Power - Low Failure
• BATV-EHIGH	Battery Voltage—Extremely High
• BATV-ELow	Battery Voltage—Extremely Low
• BATV-HIGH	Battery Voltage—High
• BATV-LOW	Battery Voltage—Low
• GAIN-HDEG	Gain not reached—High Degrade Threshold
• GAIN-HFAIL	Gain not reached—High Failure Threshold
• GAIN-LDEG	Gain not reached—Low Degrade Threshold
• GAIN-LFAIL	Gain not reached—Low Failure Threshold
• LBCL-HIGH	Laser Bias current in microA as one tenth of a percentage. High Warning Threshold, Low Warning Threshold. Measured value (0.0 percent, 100.0 percent)
• OPR-HIGH	Receive power in one tenth of a microW. Measured value (–40.0 dBm, +30.0 dBm)
• OPR-LOW	Receive power in one tenth of a microW. Measured value (–40.0 dBm, +30.0 dBm)
• OPT-HIGH	Transmit power in one tenth of a microW. Measured value (–40.0 dBm, +30.0 dBm)
• OPT-LOW	Transmit power in one tenth of a microW. Measured value (–40.0 dBm, +30.0 dBm)
• OPWR-HDEG	Optical Power—High Degrade Threshold
• OPWR-HFAIL	Optical Power—High Failure Threshold
• OPWR-LDEG	Optical Power—Low Degrade Threshold
• OPWR-LFAIL	Optical Power—Low Failure Threshold
• VOA-HDEG	VOA Attenuation—High Degrade Threshold
• VOA-HFAIL	VOA Attenuation—High Failure Threshold
• VOA-LDEG	VOA Attenuation—Low Degrade Threshold
• VOA-LFAIL	VOA Attenuation—Low Failure Threshold
<THLEVEL>	Threshold level. THLEVEL is a float.

## 23.2 SET-ALMTH-EQPT

(Cisco ONS 15454) The Set Alarm Threshold Equipment (SET-ALMTH-EQPT) command sets the alarm thresholds to manage the power level monitoring on an NE.

**Usage Guidelines** None

**Category** Equipment

**Security** Provisioning

**Input Format** SET-ALMTH-EQPT:[<TID>]:[<AID>]:<CTAG>::<ALMTHTYPE>,<THLEV>[,,,];

**Input Example**  
 SET-ALMTH-EQPT::SHELF-2:1::BATV-HIGH,-53.5;  
 SET-ALMTH-EQPT:::1::BATV-HIGH,-53.5;

<b>Input Parameters</b>	<AID>	The node or shelf access identifier from the “ <a href="#">26.26 SHELF</a> ” section on page 26-52. If omitted it addresses the node or first shelf of the node. Must not be null
	<CONDTYPE>	Alarm threshold type. The parameter type is ALM_THR, which is the alarm threshold list for MXP_2.5G_10G, TXP_MR_10G, OSCM, OSC-CSM, OPT-PRE, OPT-BST, MD-4, MUX-32, DMX-32, AD-1C, AD-2C, AD-4C, AD-1B, and AD-4B cards.
	• BATV-EHIGH	Battery Voltage—Extremely High
	• BATV-ELOW	Battery Voltage—Extremely Low
	• BATV-HIGH	Battery Voltage—High
	• BATV-LOW	Battery Voltage—Low
	• GAIN-HDEG	Gain not reached—High Degrade Threshold
	• GAIN-HFAIL	Gain not reached—High Failure Threshold
	• GAIN-LDEG	Gain not reached—Low Degrade Threshold
	• GAIN-LFAIL	Gain not reached—Low Failure Threshold
	• LBCL-HIGH	Laser Bias current in microA as one tenth of a percentage High Warning Threshold, Low Warning Threshold. Measured value (0.0 percent, 100.0 percent)
	• OPR-HIGH	Receive power in one tenth of a microW. Measured value (–40.0 dBm, +30.0 dBm)
	• OPR-LOW	Receive power in one tenth of a microW. Measured value (–40.0 dBm, +30.0 dBm)

• OPT-HIGH	Transmit power in one tenth of a microW. Measured value (–40.0 dBm, +30.0 dBm)
• OPT-LOW	Transmit power in one tenth of a microW. Measured value (–40.0 dBm, +30.0 dBm)
• OPWR-HDEG	Optical Power—High Degrade Threshold
• OPWR-HFAIL	Optical Power—High Failure Threshold
• OPWR-LDEG	Optical Power—Low Degrade Threshold
• OPWR-LFAIL	Optical Power—Low Failure Threshold
• VOA-HDEG	VOA Attenuation—High Degrade Threshold
• VOA-HFAIL	VOA Attenuation—High Failure Threshold
• VOA-LDEG	VOA Attenuation—Low Degrade Threshold
• VOA-LFAIL	VOA Attenuation—Low Failure Threshold
<THLEVEL>	Threshold level. THLEV is a float.

## 23.3 SET-ATTR-CONT

(Cisco ONS 15454) The Set Attribute Control (SET-ATTR-CONT) command sets the attributes associated with an external control. The attributes are used when an external control is operated or released. To send the attributes, use the RTRV-ATTR-CONT command.

### Usage Guidelines

- If the CONTTYPE parameter is not specified, the control specified by AID is unprovisioned.
- A control should be unprovisioned before it is reprovisioned to another type of control.

### Category

Environment

### Security

Provisioning

### Input Format

SET-ATTR-CONT:[<TID>]:<AID>:<CTAG>[::<CONTTYPE>];

### Input Example

SET-ATTR-CONT:CISCO:ENV-OUT-1:123::AIRCOND;

### Input Parameters

<AID>	Access identifier from the <a href="#">“26.14 ENV” section on page 26-37</a> . Identifies the external control for which attributes are being retrieved.
<CONTTYPE>	Environmental control type. A null value is equivalent to ALL. The parameter type is CONTTYPE, which is the environmental control type.
• AIRCOND	Air conditioning

• ENGINE	Engine
• FAN	Fan
• GEN	Generator
• HEAT	Heat
• LIGHT	Light
• MISC	Miscellaneous
• SPKLR	Sprinkler

## 23.4 SET-ATTR-ENV

(Cisco ONS 15454) The Set Attribute Environment (SET-ATTR-ENV) command sets the attributes associated with an external control.

### Usage Guidelines

- If the NTFNCNDE, ALMTYPE, and ALMMSG parameters are omitted, the environmental alarm specified by AID is unprovisioned.
- An alarm should be unprovisioned and you should wait for any raised alarm to clear before reprovisioning the alarm to another alarm type.
- CL in NOTIF\_CODE is not valid for provisioning commands. It is only valid for autonomous messages.

### Category

Environment

### Security

Provisioning

### Input Format

SET-ATTR-ENV:[<TID>]:<AID>:<CTAG>:.[<NTFCNCDE>],[<ALMTYPE>],[<ALMMSG>];

### Input Example

SET-ATTR-ENV:CISCO:ENV-IN-1:123::MJ,OPENDR,\"OPEN DOOR\";

### Input Parameters

<AID>	Access identifier from the <a href="#">“26.14 ENV” section on page 26-37</a> . Must not be null.
<NTFCNCDE>	Two-letter notification code. Must not be null. The parameter type is NOTIF_CODE, which is the two-character notification code associated with an autonomous message.
• CL	The condition causing the alarm has cleared.
• CR	A critical alarm.
• MJ	A major alarm.
• MN	A minor alarm.
• NA	The condition is not alarmed.

• NR	The alarm is not reported.
<ALMTYPE>	The alarm type for the environmental alarm. Must not be null. The parameter type is ENV_ALM, which is the environmental alarm type.
• AIRCOMPR	Air compressor failure
• AIRCOND	Air conditioning failure
• AIRDRYR	Air dryer failure
• BATDSCHRG	Battery discharging
• BATTERY	Battery failure
• CLFAN	Cooling fan failure
• CPMAJOR	Centralized power major failure
• CPMINOR	Centralized power minor failure
• ENGINE	Engine failure
• ENGOPRG	Engine operating
• ENGTRANS	Standby engine transfer
• EXPLGS	Explosive gas
• FIRDETR	Fire detector failure
• FIRE	Fire
• FLOOD	Flood
• FUELLEAK	Fuel leak
• FUSE	Fuse failure
• GASALARM	Explosive gas, toxic gas, ventilation fail, or gas monitor fail
• HATCH	Controlled Environment Vault (CEV) hatch fail
• GEN	Generator failure
• HIAIR	High airflow
• HIHUM	High humidity
• HITEMP	High temperature
• HIWTR	High water
• INTRUDER	Intrusion
• LEVELCON	Level converter
• LVDADSL	Secondary ADSL low voltage disconnect
• LVDBYPAS	Low voltage disconnected bypass
• LWBATVG	Low battery voltage
• LWFUEL	Low fuel
• LWHUM	Low humidity
• LWPRES	Low cable pressure
• LWTEMP	Low temperature
• LWWTR	Low water
• MISC	Miscellaneous
• OPENDR	Open door
• POWER	Commercial power failure
• PUMP	Pump failure

• PWR-48	48 V power supply failure
• PWR-139	-139 V power converter
• PWR-190	-190 V power converter
• PWRMJ	Power supply major
• PWRMN	Power supply minor
• RECT	Rectifier failure
• RECTHI	Rectifier high voltage
• RECTLO	Rectifier low voltage
• RINGGENMJ	Ring generator major
• RINGENMN	Ring generator minor
• RTACADSL	AC or AC/rectifier power fail ADSL equipment
• RTACCRIT	AC or AC/rectifier power fail DCL equipment critical site
• RTACPWR	AC or AC/rectifier power fail DCL equipment
• RTACPWRENG	Commercial AC fail, site equipped with standby engine
• RTBAYPWR	AC power loss distributed power RT bay
• RTRVENG	Retrieve standby engine, commercial AC restored
• SMOKE	Smoke
• TEMP	High-low temperature
• TOXICGAS	Toxic gas
• TREPEATER	T-repeater shelf
• VENTN	Ventilation system failure
>ALMMSG>	Alarm message. ALMMSG is a string. Must not be null.

## 23.5 SET-ATTR-SECUDFLT

(Cisco ONS 15454) The Set Attribute Security Default (SET-ATTR-SECUDFLT) command sets the system-wide default values associated with several security parameters.

### Usage Guidelines

The following parameters are set on a system-wide basis for all users and all privilege levels: MXINV, DURAL, UOUT, PFRCD, POLD, PINT, and LOGIN. The PRIVLVL keyword cannot be used to set these parameters for a specific privilege level.

The following parameters are set on a privilege-level basis: PAGE, PCND, and TMOUT. If any of these values are specified, the PRIVLVL keyword must also be present. If none of these parameters are specified, the PRIVLVL keyword cannot be used.



### Note

Password aging can only be enabled/disabled for all privilege levels. The PRIVLVL keyword cannot be used with PAGE=0 to disable a specific user privilege level.

When system-level and privilege-level keywords are combined in the same command, system-level parameters are still set for all privilege levels, regardless of the value specified by PRIVLVL. Privilege-level parameters are only set for the privilege level specified by PRIVLVL.

**Note**

If PAGE and PINT both have values greater than 0, PINT must be less than PAGE.

The order of keywords is not restricted. Commas are only needed to separate keywords. If no keywords are specified, all parameters are left as-is.

**Category**

Security

**Security**

Superuser

**Input Format**

```
SET-ATTR-SECUDFLT:[<TID>>::<CTAG>::[PAGE=<PAGE>],[PCND=<PCND>],
[MXINV=<MXINV>],[DURAL=<DURAL>],[TMOUT=<TMOUT>],[UOUT=<UOUT>],
[PFRCD=<PFRCD>],[POLD=<POLD>],[PINT=<PINT>],[LOGIN=<LOGIN>],
[PRIVLVL=<PRIVLVL>],[PDIF=<PDIF>];
```

**Input Example**

```
SET-ATTR-SECUDFLT:CISCO::123::PAGE=45,PCND=5,MXINV=5,DURAL=30,
TMOUT=0,UOUT=20,PFRCD=NO,POLD=5,PINT=20,LOGIN=MULTIPLE,
PRIVLVL=RTRV,PDIF=1;
```

**Input Parameters**

<PAGE>	Password aging interval. It is the number of days before a user is prompted to change his/her password. 0 indicates that the policy is turned off and is the default. If PAGE is turned on for all privilege levels and is not specified for each privilege level, it defaults to 45 days. PAGE ranges from 20 to 90 days. PAGE is an integer.
<PCND>	Number of days a password can be used before a new one is mandatory (for example, the warning period). Default is 5 days. PCND ranges from 2 to 20 days. PCND is an integer.
<MXINV>	Maximum number of consecutive and invalid session setup attempts allowed to occur before an intrusion attempt is suspected (for example, “Failed Logins Before Lockout” from Cisco Transport Controller [CTC]). 0 indicates the policy is turned off. Default is 5. MXINV ranges from 0 to 10. MXINV is an integer.
<DURAL>	Time interval (in seconds) during which a user ID is locked out when an intrusion attempt is suspected (for example, “Lockout Duration”). If the user is locked out until unlocked by a Superuser, DURAL=INFINITE. Default is 30 seconds. DURAL ranges from 0 to 600 seconds. DURAL is a string.
<TMOUT>	Interval (in minutes) after which a session is terminated if no messages are exchanged between the user and the NE. 0 indicates that the session will not timeout. TMOUT ranges from 0 minutes to 999 minutes. Defaults are 0 (no timeout) for RTRV users, 60 minutes for MAINT users, 30 minutes for PROV users, and 15 minutes for SUPER users. TMOUT is an integer.

<UOUT>	UID aging interval, expressed in days. If a user ID has not been used in UOUT days, the user will be forced to change his/her password (or logout) at the next login. No other command is allowed until the password has been changed. 0 indicates the policy is turned off and is the default. UOUT ranges from 0 to 99 days. UOUT is an integer.
<PFRCD>	Indicates that a password change is required when a new user establishes a session to the NE for the first time (for example, “Require password change on 1st login”). Default is NO. The parameter type is YES_NO, which indicates whether the user’s password is about to expire, the user is logged into the NE, or the user is locked out of the NE.
<ul style="list-style-type: none"> <li>• NO</li> <li>• YES</li> </ul>	<p>No</p> <p>Yes</p>
<POLD>	Number of prior passwords that cannot be reused (for example, “Prevent reusing last X passwords”). Default is 1. POLD ranges from 1 to 10. POLD is an integer.
<PINT>	Number of days that must pass before a password can be changed. If PINT is 0, the policy is turned off. Default is off. PINT ranges from 20 to 95 days. PINT is an integer.
<LOGIN>	Number of times a user can log into an NE. LOGIN is either SINGLE or MULTIPLE. If LOGIN is SINGLE, a user can only log into an NE one time with any given user ID, regardless of the method of login (for example, CTC, TL1, etc.). Default is MULTIPLE. The parameter type is USER_LOGINS, which is the number of times a user can log into the same NE with the same user ID.
<ul style="list-style-type: none"> <li>• MULTIPLE</li> <li>• SINGLE</li> </ul>	<p>A user can log into the same NE many times.</p> <p>A user can log into the NE only once (includes both CTC and TL1 sessions).</p>
<PRIVLVL>	User’s access privilege. The parameter type is PRIVILEGE, which is the security level.
<ul style="list-style-type: none"> <li>• MAINT</li> <li>• PROV</li> <li>• RTRV</li> <li>• SUPER</li> </ul>	<p>Maintenance security level. 60 minutes of idle time.</p> <p>Provision security level. 30 minutes of idle time.</p> <p>Retrieve security level. Unlimited idle time.</p> <p>Superuser security level. 15 minutes of idle time.</p>
<PDIF>	Indicates how many characters must differ between the old and new password. Default minimum character difference is 1. PDIF ranges from 1 to 5 characters. PDIF is a rangeable integer.

## 23.6 SET-OPMOD-PTSYS

(Cisco ONS 15454) The Set Operation Mode Packet Transport System (SET-OPMOD-PTSYS) sets the operation mode for the CPT 50 panel.

### Usage Guidelines

- Sets the operation mode for the PTSYS.

## ■ SET-PMMODE-&lt;STS\_PATH&gt;

- OPMODE can be set as NMS or IOS.
- RETAINDB can be set only for IOS.

<b>Category</b>	Equipment																
<b>Security</b>	Retrieve																
<b>Input Format</b>	SET-OPMOD-PTSYS:[<TID>]:<AID>:<CTAG>:::<OPMODE>,[RETAINDB=<RETAINDB>];																
<b>Input Example</b>	SET-OPMOD-PTSYS::PTSYS-1:1:::IOS,RETAINDB=Y;																
<b>Input Parameters</b>	<table border="1"> <tr> <td>&lt;AID&gt;</td> <td>AID of the PTSYS.</td> </tr> <tr> <td>&lt;OPMODE&gt;</td> <td>Operation mode of the PTSYSTEM.</td> </tr> <tr> <td>• NMS</td> <td>TCP IPC mode.</td> </tr> <tr> <td>• IOS</td> <td>IPC mode.</td> </tr> <tr> <td>&lt;RETAINDB&gt;</td> <td>Retain the database.</td> </tr> <tr> <td></td> <td>Can be updated only for the IOS mode.</td> </tr> <tr> <td>Y</td> <td>Retains the database.</td> </tr> <tr> <td>N</td> <td>Does not retain the databse.</td> </tr> </table>	<AID>	AID of the PTSYS.	<OPMODE>	Operation mode of the PTSYSTEM.	• NMS	TCP IPC mode.	• IOS	IPC mode.	<RETAINDB>	Retain the database.		Can be updated only for the IOS mode.	Y	Retains the database.	N	Does not retain the databse.
<AID>	AID of the PTSYS.																
<OPMODE>	Operation mode of the PTSYSTEM.																
• NMS	TCP IPC mode.																
• IOS	IPC mode.																
<RETAINDB>	Retain the database.																
	Can be updated only for the IOS mode.																
Y	Retains the database.																
N	Does not retain the databse.																

## 23.7 SET-PMMODE-<STS\_PATH>

(Cisco ONS 15454) The Set Performance Mode of PM Data Collection for STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, or STS9C (SET-PMMODE-<STS\_PATH>) command sets the mode and turns the performance monitoring (PM) data collection mode on or off.

**Usage Guidelines** See [Table 28-1 on page 28-1](#) for supported modifiers by platform.



**Note**

- The PM mode and state of an entity are retrieved by using the RTRV-PMMODE command.
- The near-end monitoring of the intermediate-path performance monitoring (IPPM) only supports OC3, OC12, OC48, OC192, and EC-1 on STS Path.
- The far-end IPPM data collection is supported by MRC-12 and ADM-10G cards only.

- This release of software will support only the Path (P) mode type PM parameters with this command, that is, this command is not applicable for Line (L) and Section (S) mode types. PM monitoring for Line (L) and Section (S) are supported by the ONS 15454, and the storing PM data is always performed.

<b>Category</b>	Performance																
<b>Security</b>	Provisioning																
<b>Input Format</b>	SET-PMMODE-<STS_PATH>:[<TID>]:<SRC>:<CTAG>::<LOCN>,<MODETYPE>,<PMSTATE>;																
<b>Input Example</b>	SET-PMMODE-STS1:CISCO:STS-4-1-2:123::NEND,P,ON;																
<b>Input Parameters</b>	<table border="1"> <tr> <td>&lt;SRC&gt;</td> <td>Source access identifier from the “<a href="#">26.11 CrossConnectId</a>” section on page 26-25.</td> </tr> <tr> <td>&lt;LOCN&gt;</td> <td>Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. Only near-end PM data collection is supported. The parameter type is LOCATION, which is the location where the action is to take place.</td> </tr> <tr> <td>• NEND</td> <td>Action occurs on the near end of the facility.</td> </tr> <tr> <td>&lt;MODETYPE&gt;</td> <td>The type of PM parameters that the entity or the sub entity is to store as a result of an attribute change. Only the path (P) PM parameter is supported. The parameter type is PM_MODE, which is the type of PM parameter.</td> </tr> <tr> <td>• P</td> <td>Transport Path PM parameters</td> </tr> <tr> <td>&lt;PMSTATE&gt;</td> <td>Directs the named PM mode type to turn on or off. A null value defaults to on. The parameter type is PM_STATE, which directs the named PM mode type (P) state.</td> </tr> <tr> <td>• OFF</td> <td>Disable the mode</td> </tr> <tr> <td>• ON</td> <td>Enable the mode</td> </tr> </table>	<SRC>	Source access identifier from the “ <a href="#">26.11 CrossConnectId</a> ” section on page 26-25.	<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. Only near-end PM data collection is supported. The parameter type is LOCATION, which is the location where the action is to take place.	• NEND	Action occurs on the near end of the facility.	<MODETYPE>	The type of PM parameters that the entity or the sub entity is to store as a result of an attribute change. Only the path (P) PM parameter is supported. The parameter type is PM_MODE, which is the type of PM parameter.	• P	Transport Path PM parameters	<PMSTATE>	Directs the named PM mode type to turn on or off. A null value defaults to on. The parameter type is PM_STATE, which directs the named PM mode type (P) state.	• OFF	Disable the mode	• ON	Enable the mode
<SRC>	Source access identifier from the “ <a href="#">26.11 CrossConnectId</a> ” section on page 26-25.																
<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be retrieved. Only near-end PM data collection is supported. The parameter type is LOCATION, which is the location where the action is to take place.																
• NEND	Action occurs on the near end of the facility.																
<MODETYPE>	The type of PM parameters that the entity or the sub entity is to store as a result of an attribute change. Only the path (P) PM parameter is supported. The parameter type is PM_MODE, which is the type of PM parameter.																
• P	Transport Path PM parameters																
<PMSTATE>	Directs the named PM mode type to turn on or off. A null value defaults to on. The parameter type is PM_STATE, which directs the named PM mode type (P) state.																
• OFF	Disable the mode																
• ON	Enable the mode																

## 23.8 SET-PMMODE-<VT\_PATH>

The Set Performance Mode of PM Data Collection for VT1 and VT2 (SET-PMMODE-<VT\_PATH>) command sets the mode and turns the performance monitoring (PM) data collection mode on or off.

**Usage Guidelines****Note**

- The PM mode and state of an entity is retrieved by using the RTRV-PMMODE command.
- This release of software will support only the Path (P) mode type PM parameters with this command, that is, this command will not be applicable for Line (L) and Section (S) mode types.

**Category**

Performance

**Security**

Provisioning

**Input Format**

SET-PMMODE-&lt;VT\_PATH&gt;:[&lt;TID&gt;]:&lt;SRC&gt;:&lt;CTAG&gt;::&lt;LOCN&gt;,&lt;MODETYPE&gt;,[&lt;PMSTATE&gt;];

**Input Example**

SET-PMMODE-VT1:CISCO:VT1-1-1-2-2:123::NEND,P,ON;

**Input Parameters**

<SRC>	Source access identifier from the “ <a href="#">26.12 CrossConnectId1</a> ” section on page 26-29. Must not be null.
<LOCN>	Location associated with a particular command. Identifies the location from which the PM mode is to be set. Only near end (NEND)PM data collection is supported. The parameter type is LOCATION, which is the location where the action is to take place. Must not be null.
• NEND	Action occurs on the near end of the facility.
<MODETYPE>	The type of PM parameters that the entity or the subentity is to store as a result of an attribute change. Only the path (P) type is supported. The parameter type is PM_MODE, which is the type of PM parameters.
• P	Transport Path PM parameters.
<PMSTATE>	Directs the named PM mode type to turn on or off. A null value defaults to on. The parameter type is PM_STATE, which directs the named PM mode type (P) state.
• OFF	Disable the mode
• ON	Enable the mode

## 23.9 SET-SRVTYPE

(Cisco ONS 15454 M2 and Cisco ONS 15454 M6) The Set Service Type (SET-SRVTYPE) command allows you to set the service type in the TNC card to carry User Data Channel (UDC) or voice over IP (VOIP) traffic.

**Usage Guidelines**

- You can configure UDC or VoIP on the two SFP ports present on the TNC card. The TNC card supports the UDC/VoIP configuration only when OSC is provisioned on the SFP ports.
- You can configure UDC or VoIP on only one SFP port at a time per TNC card. If you want to configure UDC or VoIP on the second SFP port, set NONE for the first port and then set UDC or VoIP for the second port.

**Category**

Ports

**Security**

Provisioning

**Input Format**

SET-SRVTYPE:[&lt;TID&gt;]:&lt;AID&gt;:&lt;CTAG&gt;:::&lt;SRVTYPE&gt;;

**Input Example**

SET-SRVTYPE::FAC-1-1-1:1::UDC;

**Input Parameters**

<AID>	FAC-<Shelf>-<Slot>-<PPM>-<Port>.
<SRVTYPE>	Indicates the service type set on the TNC port.
• UDC	To set the service type to UDC.
• VOIP	To set the service type to VOIP
• NONE	To set the service type to NONE.

## 23.10 SET-TH-<MOD2>

(Cisco ONS 15454) The Set Threshold for 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 5GIB, 8GFC, CLNT, D1VIDEO, DS1, DS3I, DV6000, DVBASI, E1, E3, E4, EC1, ESCON, ETRCLO, FSTE, G1000, GFPOS, GIGE, HDTV, ISC1, ISCCOMPAT, ISC3PEER2R, ISC3PEER1G, ISC3PEER2G, OC12, OC192, OC3, OC48, OC768, OCH, OMS, OTS, OTU3, POS, STM1E, STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, STS9C, T1, T3, VC11, VC12, VC3, VT1, or VT2 (SET-TH-<MOD2>) command sets the threshold for PMs and sets the alarm thresholds for the MXP\_2.5G\_10G and TXP\_MR\_10G cards. If this command is used to set the alarm thresholds, the time period is not applicable.

### Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

The rules are as follows:

- The PM Thresholds have a default of NEND for the location. The Alarm Thresholds do not require or interpret the location.
- The TMPER is not applicable to alarm thresholds. The TMPER default is 15-MIN.
- The client ports only accept SONET, Laser, and alarm MONTYPES. The trunk ports accept SONET, Laser, alarm, FEC, OTN, and 8B10B MONTYPES.

Refer to the *Cisco ONS 15454 SONET TL1 Reference Guide* for specific card provisioning rules.

### Category

Performance

### Security

Provisioning

### Input Format

SET-TH-<MOD2>:[<TID>]:<AID>:<CTAG>::<MONTYPE>,<THLEV>,[<LOCN>],[<TMPER>];

### Input Example

SET-TH-T3:CISCO:FAC-1-1:123::CVL,12,NEND,,15-MIN;

### Input Parameters

<AID>	Access identifier from the “ <a href="#">26.1 ALL</a> ” section on page 26-1. All of the STS, VT1, Facility, and DS1 AIDs are supported.
<MONTYPE>	Monitored type. The parameter type is ALL_MONTYPE, which is the monitoring type list.
• AISSP	Alarm Indication Signal Seconds—Path
• ALL	All possible values
• BBE-PM	OTN—Background Block Errors—Path Monitor Point
• BBE-SM	OTN—Background Block Errors—Section Monitor Point
• BBER-PM	OTN—Background Block Error Ratio—Path monitor point expressed as one tenth of a percentage

• BBER-SM	OTN—Background Block Error Ratio—Section monitor point expressed as one tenth of a percentage
• BIEC	FEC—Bit Errors Corrected
• BIT-EC	the number of bit errors corrected by the FEC algorithm
• CGV	8B10B—Code Group Violations
• CSSP	Controlled Slip Seconds—Path (DSXM-12 FDL/T1.403 PM count)
• CVCPP	Coding Violations—CP-Bit Path
• CVL	Coding Violations—Line
• CVP	Coding Violations—Path
• CVS	Coding Violations—Section
• CVV	Coding Violations—Section
• DCG	8B10B—Data Code Groups
• ESAP	Errored Second Type A-Path (DS3XM-12 DS1 PM count)
• ESBP	Errored Second Type B-Path (DS3XM-12 DS1 PM count)
• ESCPP	Errored Seconds—CP—Bit Path
• ESL	Errored Seconds—Line
• ESNPFE	Errored Second—Network Path (DS3XM-12 DS1 PM count)
• ESP	Errored Seconds—Path
• ES-PM	OTN—Errored Seconds—Path Monitor Point
• ES-SM	OTN—Errored Seconds—Section Monitor Point
• ESR	Errored Second—Ratio
• ESR-PM	Errored Seconds Ratio—Path monitor point expressed as one tenth of a percentage
• ESR-SM	Errored Seconds Ratio—Section monitor point expressed as one tenth of a percentage
• ESS	Errored Seconds—Section
• ESV	Errored Seconds—VT Path
• etherStatsBroadcastPkts	The total number of good packets received that were directed to a multicast address
• etherStatsCollisions	Number of transmit packets that are collisions
• etherStatsCRCAlignErrors	The total number of packets received that have a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets
• etherStatsDropEvents	Number of received frames dropped at the port level
• etherStatsFragments	The total number of packets received that were less than 64 octets
• etherStatsJabbers	The total number of packets received that are longer than 1518 octets
• etherStatsOctets	The total number of octets of data
• etherStatsOversizePkts	The total number of packets received that are longer than 1518 octets
• etherStatsPkts	The total number of packets (including bad packets, broadcast packets, and multicast packets) received
• etherStatsUndersizePkts	The total number of packets received that are less than 64 octets

• FC-L	Failure Count—Line
• FC-P	Failure Count—Path
• FC-PM	OTN—Failure Count—Path Monitor Point
• FC-SM	OTN—Failure Count—Section Monitor Point
• HP-AR	Availability Ratio
• HP-BBE	High-Order Path Background Block Error
• HP-BBER	High-Order Path Background Block Error Ratio
• HP-EB	High-Order Path Errored Block
• HP-ES	High-Order Path Errored Second
• HP-ESA	High-Order Path Errored Seconds—A
• HP-ESB	High-Order Path Errored Seconds—B
• HP-ESR	High-Order Path Errored Second Ratio
• HP-FC	High-Order Path Failure Count
• HP-NPJC-PDET	High-Order Path Negative Pointer Justification Count
• HP-NPJC-PGEN	High-Order Path, Negative Pointer Justification Count
• HP-OI	Outage Intensity
• HP-PJCDIFF	High-Order Path Pointer Justification Count Difference
• HP-PJCS-PDET	High-Order Path Pointer Justification Count
• HP-PJCS-PGEN	High-Order Path Pointer Justification Count Seconds
• HP-PPJC-PDET	High-Order Path Positive Pointer Justification Count
• HP-PPJC-PGEN	High-Order Path, Positive Pointer Justification Count
• HP-SEPI	The number of High-Order Path Severely Errored Period Intensity events in available time
• HP-SES	High-Order Path Severely Errored Seconds
• HP-SESR	High-Order Path Severely Errored Second Ratio
• HP-UAS	High-Order Path Unavailable Seconds
• ifInBroadcastPkts	Number of broadcast packets received since the last counter reset
• ifInDiscards	The number of inbound packets
• ifInErrorBytePktss	Receive Error Byte
• ifInErrors	The number of inbound packets (or transmission units) that contained errors
• ifInFramingErrorPkts	Receive Framing Error
• ifInJunkInterPkts	Receive Interpacket Junk
• ifInMulticastPkts	Number of multicast packets received since the last counter reset
• ifInOctets	Number of bytes transmitted since the last counter reset
• ifInUcastPkts	Number of unicast packets received since the last counter reset
• ifOutBroadcastPkts	Number of broadcast packets transmitted
• ifOutDiscards	The number of outbound packets
• ifOutErrors	The number of outbound packets (or transmission units) that could not be transmitted because of errors
• ifOutMulticastPkts	Number of multicast packets transmitted
• ifOutPayloadCrcErrors	Received payload cyclic redundancy check (CRC) errors

• ifOutUcastPkts	Number of unicast packets transmitted
• IOS	8B10B—Idle Ordered Sets
• IPC	Invalid Packet Count
• LBCL-AVG	Average Laser Bias current in microA
• LBCL-MAX	Maximum Laser Bias current in microA
• LBCL-MIN	Minimum Laser Bias current in microA
• LBCN	Normalized Laser Bias Current for OC3-8
• LBCN-HWT	Laser Bias Current
• LBCN-LWT	Laser Bias Current
• LOSSL	Loss of Signal Seconds—Line
• LP-BBE	Low-Order Path Background Block Error
• LP-BBER	Low-Order Path Background Block Error Ratio
• LP-EB	Low-Order Path Errored Block
• LP-ES	Low-Order Path Errored Second
• LP-ESA	Low-Order Path Errored Seconds-A
• LP-ESB	Low-Order Path Errored Seconds-B
• LP-ESR	Low-Order Path Errored Second Ratio
• LP-FC	Low-Order Path Failure Count
• LP-NPJC-DET	Low-Order Negative Pointer Justification Count, Detected
• LP-NPJC-GEN	Low Order Negative Pointer Justification Count, Generated
• LP-PPJC-DET	Low-Order Positive Pointer Justification Count, Detected
• LP-PPJC-GEN	Low-Order positive Pointer Justification Count, Generated
• LP-SEP	Low-Order Path Severely Errored Period
• LP-SEPI	Low-Order Path Severely Errored Period Intensity
• LP-SES	Low-Order Path Severely Errored
• LP-UAS	Low-Order Path Unavailable Seconds
• MS-PSC	Protection switch count
• MS-PSD	Protection switch duration
• NIOS	8B10B—Non Idle Ordered Sets
• NPJC-PDET	PPJC-PDET:Negative Pointer Justification
• NPJC-PGEN	PPJC-PGEN:Negative Pointer Justification
• OPR-AVG	Average Receive Power in one tenth of a microW
• OPR-MAX	Maximum Receive Power in one tenth of a microW
• OPR-MIN	Minimum Receive Power in one tenth of a microW
• OPRN	Normalized Optical Receive Power for OC3-8
• OPRN-MAX	Maximum value for OPRN
• OPRN-MIN	Minimum value for OPRN
• OPT-AVG	Average Transmit Power in one tenth of a microW
• OPT-MAX	Maximum Transmit Power in one tenth of a microW
• OPT-MIN	Minimum Transmit Power in one tenth of a microW
• OPTN	Normalized value for Optical Power Transmitted for the OC3-8 card

• OPTN-MAX	Maximum value for OPTN
• OPTN-MIN	Minimum value for OPTN
• OPWR-AVG	Optical Power—Average Interval Value in one tenth of a dBm
• OPWR-MAX	Optical Power—Maximum Interval Value in one tenth of a dBm
• OPWR-MIN	Optical Power—Minimum Interval Value in one tenth of a dBm
• PPJC-PDET	PPJC-PDET:Positive Pointer Justification
• PPJC-PGEN	PPJC-PGEN:Positive Pointer Justification
• PSC	Protection Switching Count
• PSC-R	Protection Switching Count—Ring
• PSC-S	Protection Switching Count—Span
• PSC-W	Protection Switching Count—Working
• PSD	Protection Switching Duration
• PSD-R	Protection Switching Duration—Ring
• PSD-S	Protection Switching Duration—Span
• PSD-W	Protection Switching Duration—Working
• SASCPP	Severely Errored Framing/AIS Second—CP-Bit Path
• SASP	Severely Errored Framing/AIS Seconds Path
• SEFS	Severely Errored Framing Seconds
• SEFSP	Severely Errored Framing Seconds—Path (DS3XM-12 DS1 PM count)
• SESCOPP	Severely Errored Second—CP-Bit Path
• SESL	Severely Errored Second—Line
• SESNPFE	Severely Errored Second—Network Path (DS3XM-12 DS1 PM count)
• SESP	Severely Errored Second—Path
• SES-PM	OTN—Severely Errored Second—Path
• SESR-PM	OTN—Severely Errored Second Ratio—Path Monitor Point expressed as one tenth of a percentage
• SESR-SM	OTN—Severely Errored Second Ratio—Section Monitor Point expressed as one tenth of a percentage
• SESS	Severely Errored Second—Section
• SES-SM	OTN—Severely Errored Second—Section Monitor Point
• SESV	Severely Errored Second—VT Path
• UASCPP	Unavailable Second—CP-Bit Path
• UASL	Unavailable Second—Line
• UASNPFE	Unavailable Second—Network Path (DS3XM-12 DS1 PM count)
• UASP	Unavailable Second—Path
• UAS-PM	OTN—Unavailable Second—Path Monitor Point
• UAS-SM	OTN—Unavailable Second—Section Monitor Point
• UASV	Unavailable Second—VT Path
• UNC-WORDS	FEC—Uncorrectable Words
• VPC	Valid Packet Count

<THELV>	Threshold level. THLEV is a float.
<LOCN>	Location associated with a particular command. The parameter type is LOCATION, which is the location where the action is to take place.
• FEND	Action occurs on the far end of the facility
• NEND	Action occurs on the near end of the facility
<TMPER>	(Optional) Accumulation time period for performance counters. The parameter type is TMPER, which is the accumulation time period for the performance management center.
• 1-DAY	Performance parameter accumulation interval length; every 24-hours. For SONET PM data, only one day of history data is available. For RMON managed PM data, seven days of history data are available.
• 1-HR	Performance parameter accumulation interval length; every 1 hour. This is only applicable to RMON managed PM data. There are 24 hours of history data available.
• 1-MIN	Performance parameter accumulation interval length; every 1 minute. This is only applicable to RMON managed PM data. There are 60 minutes of history available.
• 15-MIN	Performance parameter accumulation interval length; every 15 minutes. There are 32 15-MIN buckets of history data available for this accumulation interval length.
• RAW-DATA	Performance parameter accumulation interval length; starting from the last time the counters were cleared. This is only applicable to RMON managed PMs.

## 23.11 SET-TOD

(Cisco ONS 15454) The Set Time of Day (SET-TOD) command sets the system date and time for the NE. The year should be entered using four digits while the hour should be entered using a 24-hour time period (for example, military time).

**Usage Guidelines** None

**Category** System

**Security** Provisioning

**Input Format** SET-TOD:[<TID>]::<CTAG>::<YEAR>,<MONTH>,<DAY>,<HOUR>,<MINUTE>,<SECOND>,<DIFFERENCE>[:DST=<DST>];

**Input Example**

```
SET-TOD:CAZADERO::240::1998,05,08,13,18,55,480:DST=Y;
```

**Input Parameters**

<YEAR>	The current calendar year. YEAR is an integer.
<MONTH>	The month of the year. Ranges from 01 to 12. MONTH is an integer.
<DAY>	The day of the month. Ranges from 01 to 31. DAY is an integer.
<HOUR>	The hour of the day. Ranges from 00 to 23. HOUR is an integer.
<MINUTE>	The minute of the hour. Ranges from 00 to 59. MINUTE is an integer.
<SECOND>	The second of the minute. Ranges from 00 to 59. SECOND is an integer.
<DIFFERENCE>	The number of minutes off UTC. DIFFERENCE is an integer.
<DST>	Daylight savings time. The parameter type is ON_OFF (disable or enable an attribute).
• N	Disable an attribute.
• Y	Enable an attribute.



# CHAPTER 24

## SW Commands

---

This chapter provides switch (SW) commands for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.



**Note**

---

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

---

### 24.1 SW-DX-EQPT

(Cisco ONS 15454) The Switch Duplex Equipment (SW-DX-EQPT) command switches a cross-connect card with the mate card within the NE.

---

**Usage Guidelines**

If sending a mode parameter with a value other than NORM, FRCD, or NULL, the IDNV (Input, Data Not Valid) error message will be returned.

---

**Category**

Equipment

---

**Security**

Maintenance

---

**Input Format**

SW-DX-EQPT:[<TID>]:<AID>:<CTAG>::[<MODE>][,];

---

**Input Example**

SW-DX-EQPT:CISCO:SLOT-1:123::NORM;

<b>Input Parameters</b>	<AID>	Access identifier from the “26.15 EQPT” section on page 26-37. Identifies the equipment unit in the network element (NE) that is to be switched with its mate.
	<MODE>	The parameter type is command mode (CMDMDE). Normal (NORM) mode is the default behavior for all commands but you can specify forced (FRCD) mode to force the system to override a state where the command would normally be denied. The FRCD mode of operation is applicable to delete a virtual concatenated (VCAT) member cross-connect in IS-NR or OOS-AU,AINS service states.
	• FRCD	Force the system to override a state where the command would normally be denied. (FRCD is not supported in this command).
	• NORM	Execute the command normally. Do not override any conditions that could make the command fail.

## 24.2 SW-TOPROTN-EQPT

(Cisco ONS 15454) The Switch to Protection Equipment (SW-TOPROTN-EQPT) command performs an equipment unit protection switch.

### Usage Guidelines

This command is used for electrical cards (for example, DS1, DS3, DS3XM, and EC1). DS1 and DS3 cards have 1:1 and 1:N equipment protection. DS3XM and EC1 cards have only 1:1 equipment protection.

This command will switch the traffic from the working card specified in the AID to the protect card.

There is a priority for the switch to protection commands. In a 1:N protection group with  $N > 1$ , consider two working cards: A and B. Card A is switched to the protect card with the SW-TOPROTN command. If Card B is pulled from the system, the protect card will carry the traffic of Card B and Card A will raise the FAILTOSW condition and carry traffic. When Card B is replaced and the revert timer expires, Card B will carry traffic and Card A will switch to the protect card. The FAILTOSW condition on Card A will be cleared. Note that 1:N protection groups in the system are always revertive.

In a revertive protection group, the unit specified by the AID will raise the standing condition of WKSWPR if the command were executed without an error. In a nonrevertive protection group, the unit specified by the AID will raise the transient condition of WKSWPR if the command were executed without an error.

The following actions will return error messages:

- Sending this command to a card that is not in a protection group will return the SNVS (Status, Not in Valid State) error message.
- Sending this command to a missing working card will return the SWFA (Status, Working Unit Failed) error message.
- Sending this command to a protection card will return the IIAC (Input, Invalid Access Identifier) error message.
- Sending a mode parameter with a value other than NORM, FRCD, or null will return the IDNV (Input, Data Not Valid) error message.
- Sending this command to a working card when the working card has raised INHSWPR will return the SWLD (Status, Working Unit Locked) error message.

- Sending this command to a working card when the protection card has raised INHSWPR will return the SPLD (Status, Protection Unit Locked) error message.
- Sending this command to an active working card when the protect card is already carrying traffic (this only occurs in a 1:N protection group where N is greater than 1) will return the SNVS (Status, Not in Valid State) error message.
- Sending this command to an active working card when the protect card is failed or missing will return the SPFA (Status, Protection Unit Failed) error message.
- Sending this command to a standby working card will return the SNVS (Status, Not in Valid State) error message.

**Note**

- The default PROTID is the protect unit if there is only one protect unit per protection group in the NE. Otherwise, a DENY error message will be responded.
- This command only supports the BTH or null value of the DIRN parameter. A command with any other value is considered an incorrect use of the command and will return An IDNV (Input, Data Not Valid) error message.
- This command is not used for the common control (TCC2/TCC2P/TCC3 or XCVT/XC10G) cards. A command on a common control card will return an IIAC (Input, Invalid Access Identifier) error message. To use the switch common control cards, use the SW-DX-EQPT and ALW-SWDX-EQPT commands.
- This command is not used for SONET (OC-N) cards. A command on a SONET card will return an IIAC (Input, Invalid Access Identifier) error message. To switch a SONET card, use the OPR-PROTNSW and RLS-PROTNSW commands.

**Category**

Equipment

**Security**

Maintenance

**Input Format**

SW-TOPROTN-EQPT:[&lt;TID&gt;]:&lt;AID&gt;:&lt;CTAG&gt;::[&lt;MODE&gt;],[&lt;PROTID&gt;],[&lt;DIRN&gt;];

**Input Example**

SW-TOPROTN-EQPT:CISCO:SLOT-1:123::FRCD,SLOT-3,BTH;

Input Parameters		
<AID>		Access identifier from the “ <a href="#">26.15 EQPT</a> ” section on page 26-37. Specifies the working unit which will have traffic switched to protection.
<MODE>		Mode with which the command is to be implemented. The parameter will only support the NORM value. A null value defaults to NORM. Sending the FRCD value will generate the same switching behavior as sending the NORM value. The parameter type is CMDMDE, which forces the system to execute a given command regardless of any standing conditions. Normal mode is the default behavior for all commands but you can specify FRCD to force the system to override a state where the command would normally be denied.
	<ul style="list-style-type: none"> <li>• FRCD</li> </ul>	Force the system to override a state where the command would normally be denied.
	<ul style="list-style-type: none"> <li>• NORM</li> </ul>	Execute the command normally. Do not override any conditions that could make the command fail.
<PROTID>		(Optional) Access identifier from the “ <a href="#">26.24 PRSLOT</a> ” section on page 26-51. Identifies the protection unit to be switched when there is more than one protection unit within the NE.
<DIRN>		The direction relative to the entity defined in the AID field. The direction of the switching. This command only supports the BTH value of this parameter. DIRN defaults to BTH. The parameter type is DIRECTION, which is the transmit and receive directions.
	<ul style="list-style-type: none"> <li>• BTH</li> </ul>	Both transmit and receive directions

## 24.3 SW-TOWKG-EQPT

(Cisco ONS 15454) The Switch to Working Equipment (SW-TOWKG-EQPT) command switches the protected working unit back to working unit.

### Usage Guidelines

This command is used for electrical cards (for example, DS1, DS3, DS3XM, and EC1). DS1 and DS3 cards have 1:1 and 1:N equipment protection. DS3XM and EC1 cards have only 1:1 equipment protection cards.

This command will switch the traffic from the protection card to the working card specified by the AID.

In a revertive protection group, the unit specified by the AID will clear the standing condition of WKSWPR if the command were executed without an error. In a nonrevertive protection group, the unit specified by the AID will raise the transient condition of WKSWBK if the command were executed without an error.

The following actions will return error messages:

- Sending this command to a card that is not in a protection group will return the SNVS (Status, Not in Valid State) error message.
- Sending this command to a missing working card will return the SWFA (Status, Working Unit Failed) error message.
- Sending this command to a protection card will return the IIAC (Input, Invalid Access Identifier) error message.

- Sending a mode parameter with a value other than NORM, FRCD, or null will return the IDNV (Input, Data Not Valid) error message.
- Sending this command to a working card when the working card has raised INHSSWWKG will return the SWLD (Status, Working Unit Locked) error message.
- Sending this command to a working card when the protection card has raised INHSSWWKG will return the SPLD (Status, Protection Unit Locked) error message.
- Sending this command to an active working card will return the SNVS (Status, Not in Valid State) error message.

**Note**

- This command only supports the BTH or null value of the DIRN parameter. A command with any other value is considered an incorrect use of the command and will return An IDNV (Input, Data Not Valid) error message.
- This command is not used for the common control (TCC2/TCC2P/TCC3 or XCVT/XC10G) cards. A command on a common control card will return an IIAC (Input, Invalid Access Identifier) error message. To switch the common control cards, use the SW-DX-EQPT and ALW-SWDX-EQPT commands.
- This command is not used for SONET (OC-N) cards. A command on a SONET card will return an IIAC (Input, Invalid Access Identifier) error message. To switch a SONET card, use the OPR-PROTNSW and RLS-PROTNSW commands.

**Category**

Equipment

**Security**

Maintenance

**Input Format**

SW-TOWKG-EQPT:[&lt;TID&gt;]:&lt;AID&gt;:&lt;CTAG&gt;::[&lt;MODE&gt;][,&lt;DIRN&gt;];


**Input Example**

SW-TOWKG-EQPT:CISCO:SLOT-2:123::FRCD,BTH;

**Input Parameters**

<AID>	Access identifier from the <a href="#">“26.24 PRSLOT”</a> section on page 26-51. Specifies the working unit which will have traffic switched to protection.
<MODE>	Mode with which the command is to be implemented. The parameter will only support the NORM value. A null value defaults to NORM. Sending the FRCD value for will generate the same switching behavior as sending the NORM value. The parameter type is CMDMDE, which forces the system to execute a given command regardless of any standing conditions. Normal mode is the default behavior for all commands but you can specify FRCD to force the system to override a state where the command would normally be denied.

• FRC	Force the system to override a state where the command would normally be denied.
• NORM	Execute the command normally. Do not override any conditions that could make the command fail.
<DIRN>	The direction relative to the entity defined in the AID field. The direction of the switching. This command only supports the BTH value of this parameter. DIRN defaults to BTH. The parameter type is DIRECTION, which is the transmit and receive directions.
• BTH	Both transmit and receive directions

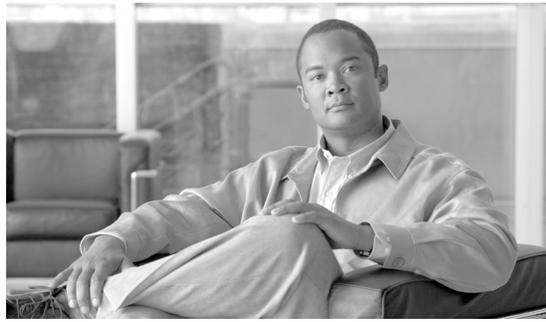

# CHAPTER 25

## TST Commands

---

This chapter provides test (TST) commands for the Cisco ONS 15454.

### 25.1 TST-INSERRBITS-<MOD2>

(CISCO ONS 15454) The test inserted error bits for DS1, T1, or T3 (TST-INSERRBITS-<MOD2>) command tests the connectivity and error count on the traffic line, running on the DS1, T1, and T3 ports of the electrical card.

---

#### Usage Guidelines

Before issuing this command, bit error rate testing (BERT) must be enabled on the port and the SYNC STATUS of BERT on the port must be UP.



#### Note

---

This command is limited to DS1/E1-56 and DS3XM-12 electrical cards.

---

---

#### Category

Ports

---

#### Security

Provisioning

---

#### Input Format

TST-INSERRBITS-<MOD2>:[<TID>]:<AID>:<CTAG>::BITERRS=<BITERRS>;

---

#### Input Example

TST-INSERRBITS-DS1::FAC-2-1:CTAG:::BITERRS=SINGLE;

---

#### Input Parameters

<AID>	Access identifier from the <a href="#">“26.17 FACILITY”</a> section on page 26-40.
<BITERRS>	Specifies the error rate to be injected for BERT. The parameter type is BITERR.
• STOP	Stops inserting bit errors.
• SINGLE	Inserts single bit errors.

---

• 1E-3	Inserts bit errors at the 1E-3 rate.
• 1E-4	Inserts bit errors at the 1E-4 rate.
• 1E-5	Inserts bit errors at the 1E-5 rate.
• 1E-6	Inserts bit errors at the 1E-6 rate.



# CHAPTER 26

## Access Identifiers

This chapter describes the access identifiers (AIDs) of TL1 commands and autonomous messages for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.

The AID code directs an input command to its intended physical or data entity inside the network element (NE). Equipment modules and facilities are typical examples of entities addressed by the access code. The AIDs in this section apply to the SONET ONS 15454, ONS 15454 M2, and ONS 15454 M6 except where noted.



**Note**

Access identifiers supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

### 26.1 ALL

**Table 26-1** ALL

AID	Pattern
AidUnion Id	FACILITY STS VT
AidUnion Id1	BLSR
BAND	ALL BAND[-{1-30}]-{1-6,12-17}-{1-4}-ALL BAND[-{1-30}]-{1-6,12-17}-{1-4}-{RX,TX} BAND[-{1-30}]-{1-6,12-17}-{1}-ALL BAND[-{1-30}]-{1-6,12-17}-{1}-{RX,TX}
BANDWL	BANDWL-{1-6,12-17}-{1-32}-{RX,TX}-1530.33 BANDWL-{1-6,12-17}-{1-32}-{RX,TX}-ALL BANDWL-{{1-30}}-{{1-6,12-17}}-{{1-32}}-{{RX,TX,PT}}-<WLEN> BANDWL-{{1-30}}-{{1-6,12-17}}-{{1-32}}-{{RX,TX,PT}}-ALL

Table 26-1 ALL (continued)

AID	Pattern	
BITS	ALL	
	BITS-ALL	
	BITS[<SHELFID>]-ALL	
	BITS[<SHELFID>]-{1,2}	
	SYNC[<SHELFID>]-BITS{1,2}	
BLSR	BLSR-RINGID	
BWP	BWP-ALL	
	BWP-{1-10000}	
CHANNE L	ALL	CHAN[-{1-30}]-{1-6,12-17}- {5}
	CHAN[-{1-30}]-{1-6,12-17}-ALL	CHAN[-{1-30}]-{1-6,12-17}- {9}
	CHAN[-{1-30}]-{1-6,12-17}-{1-32}-ALL	CHAN[-{1-30}]-{1-6,12-17}- {9,10}
	CHAN[-{1-30}]-{1-6,12-17}-{1-32}-{RX,TX}	CHAN[-{1-30}]-{1-6,12-17}- {3,4}-{1}
	CHAN[-{1-30}]-{1-6,12-17}-{1-32}-{RX,PT}	CHAN[-{1-30}]-{1-6,12-17}- {21,22}-{1}
	CHAN[-{1-30}]-{1-6,12-17}-{1-40}-ALL	CHAN[-{1-30}]-{1-6,12-17}- {19}-{1}
	CHAN[-{1-30}]-{1-6,12-17}-{1-40}-{RX,TX}	CHAN[-{1-30}]-{1-6,12-17}- {17,18}-{1}
	CHAN[-{1-30}]-{1-6,12-17}-{1-40}-{RX,PT}	CHAN[-{1-30}]-{1-6,12-17}- {1-4}-{1}
	CHAN[-{1-30}]-{1-6,12-17}-{1-4}-ALL	CHAN[-{1-30}]-{1-6,12-17}- {1,2}
	CHAN[-{1-30}]-{1-6,12-17}-{1-4}-{RX,TX}	CHAN[-{1-30}]-{1-6,12-17}- {1-4}-{1}
	CHAN[-{1-30}]-{1-6,12-17}-{2,3}	CHAN[-{1-30}]-{1-6,12-17}- {5}
	COM	Common
	CTRL	CTRL-ALL
CTRL-{1-4}		
CrossCon nectId	FACILITY	
	STS	

Table 26-1 ALL (continued)

AID	Pattern
CrossConnectId1	VCM FACILITY STS VT
DS1	ALL DS1-{{1-6,12-17}}-{{1-30,13,15,17,19,21,23,25,27,29,31,33,35}}-{{1-28}} DS1-{{1-6,12-17}}-{{1-30,13,15,17,19,21,23}}-{{1-28}} DS1-{{1-6,12-17}}-{{1-6}}-{{1-28}}
ENV	ALL ENV-IN-ALL ENV-IN[{{1-30}}]-ALL ENV-IN[{{1-30}}]-{{1-20}} ENV-IN[{{1-30}}]-{{1-32}} ENV-IN[{{1-30}}]-{{1-3}} ENV-IN[{{1-30}}]-{{1-4}} ENV-IN[{{1-30}}]-{{1-4}} ENV-IN[{{1-30}}]-{{1-6}} ENV-OUT-ALL ENV-OUT[{{1-30}}]-ALL ENV-OUT[{{1-30}}]-{{1-16}} ENV-OUT[{{1-30}}]-{{1-2}} ENV-OUT[{{1-30}}]-{{1-4}} ENV-OUT[{{1-30}}]-{{1-6}}
EQPT	ALL AIP-ALL AIP[{{1-30}}] BIC-ALL BIC[{{1-30}}]-ALL BIC[{{1-30}}]-{{A,B}} BP-ALL BP[{{1-30}}] FAN-ALL FAN[{{1-30}}] PIM[{{1-30}}]-{{1-4,11-14}}-ALL PIM[{{1-30}}]-{{1-4,11-14}}-{{1-4}} PPM[{{1-30}}]-1-{{1,2}} PPM[{{1-30}}]-2-{{1,2}} PPM[{{1-30}}]-{{1-4,11-14}}-{{1-4}}-ALL PPM[{{1-30}}]-{{1-4,11-14}}-{{1-4}} PPM[{{1-30}}]-{{1-6,12-17}}-{{1-4}} PPM[{{1-30}}]-{{1-6,12-17}}-{{1-8}} PWR-ALL PWR[{{1-30}}]-ALL PWR[{{1-30}}]-{{A,B}} SLOT-ALL SLOT[{{1-30}}]-ALL SLOT[{{1-30}}]-{{1-14}} SLOT[{{1-30}}]-{{1-17}} SLOT[{{1-30}}]-{{1-2}} SLOT[{{1-30}}]-{{1-4,11-14}} SLOT[{{1-30}}]-{{1-6,12-17}} SLOT[{{1-30}}]-{{1-8}} SHELF-ALL SHELF[{{1-30}}]

Table 26-1 ALL (continued)

AID	Pattern
ETHERN	ALL
ET	ETH[-{1-30}]-{1-5,12-16}-{1-22}-1 ETH[-{1-30}]-{1-6,12-17}-{1-4}-1
ETH	ETH-{1,2,5,6}-{1-6} ETH-{1}-{1-6}
ETHID	ALL ETHID[-{1-30}]-{1-5,12-16}-{1-22}-1-{1-20} ETHID[-{1-30}]-{1-6,12-17}-{1-4}-1-{1-20}

Table 26-1 ALL (continued)

AID	Pattern	
FACILIT Y	ALL	FAC[-{1-30}]-{5-6}-{1-3}
	E1-{1,2,5,6}-{1-21}	FAC[-{1-30}]-{8,10}-{1}
	E1-{1,2,5,6}-{1-63}	FSTE-{1,2,5,6}-{0-7}
	E3-{1,2,5,6}-{1-3}	FSTE-{1,2,5,6}-{1-8}
	EC1-{1,2,5,6}-{1-3}	FSTE-{1}-{0-7}
	EC1-{2}-{1-3}	FSTE-{1}-{1-8}
	ETH-{1,2,5,6}-{1-6}	OC12-{2}-{1-2}-{1}
	ETH-{1}-{1-6}	OC12-{3,4}-{1-2}-{1}
	FAC[-{1-30}]-{1-4,11-14}-ALL	OC3-{2}-{1-2}-{1}
	FAC[-{1-30}]-{1-4,11-14}-{1-16}	OC3-{3,4}-{1-2}-{1}
	FAC[-{1-30}]-{1-4,11-14}-{1-4}	OC48-{3,4}-{1-2}-{1}
	FAC[-{1-30}]-{1-4,11-14}-{1-4}-{1-4}-{1}	STM1-{3,4}-{1,2}-{1}
	FAC[-{1-30}]-{1-4,14-17}-{1-8}	STM4-{3,4}-{1,2}-{1}
	FAC[-{1-30}]-{1-4}-1	STM16-{3,4}-{1,2}-{1}
	FAC[-{1-30}]-{1-4}-{1-4}	T1-{1,2,5,6}-{1-28}
	FAC[-{1-30}]-{1-6,12-17}-1	T1-{1,2,5,6}-{1-84}
	FAC[-{1-30}]-{1-6,12-17}-ALL	T1-{2}-{1-21}
	FAC[-{1-30}]-{1-6,12-17}-{0-11}	T3-{1,2,5,6}-{1-3}
	FAC[-{1-30}]-{1-6,12-17}-{0-1}	T3-{2}-{1-3}
	FAC[-{1-30}]-{1-6,12-17}-{1-30,14,16,18,20,22, 24,26,28,30,32,34,36}	VFAC-{1,2,5,6}-{0-1}
	FAC[-{1-30}]-{1-6,12-17}-{1-30,14,16,18,20,22, 24}	VFAC-{1,2,5,6}-{1-6}
	FAC[-{1-30}]-{1-6,12-17}-{1-12}	VFAC-{1,2,5,6}-{1-8}
	FAC[-{1-30}]-{1-6,12-17}-{1-4}	VFAC[-{1-30}]-{1-4,11-14}-{ 1-4}-{1-4}-1
	FAC[-{1-30}]-{1-6,12-17}-{1-6}	VFAC[-{1-30}]-{1-6,12-17}-{ 0-1}
	FAC[-{1-30}]-{1-6,12-17}-{1}	VFAC[-{1-30}]-{1-6,12-17}-{ 1,2}
	FAC[-{1-30}]-{1-6}-ALL	VFAC[-{1-30}]-{1-6,12-17}-{ 1,2}-{1,8}
	FAC[-{1-30}]-{5,6,12,13}-{1}	VFAC[-{1-30}]-{1}-{0-1}
	FAC[-{1-30}]-{5-6}-{1-28}	VFAC[-{1-30}]-{1}-{1-8}
	IPADDR	111.222.333.444 "[3ffe:0501:0008:0000:0260:97ff:fe40:efab]"
	IPCC	ALL CC-{1-16}

Table 26-1 ALL (continued)

AID	Pattern
LINE	LINE[-{1-30}]-{1-6,12-17}-{1-2}-ALL
	LINE[-{1-30}]-{1-6,12-17}-{1-2}-{RX,TX}
	LINE[-{1-30}]-{1-6,12-17}-{1-3}-ALL
	LINE[-{1-30}]-{1-6,12-17}-{1-3}-{RX,TX}
	LINE[-{1-30}]-{8,10}-{1}-ALL
	LINE[-{1-30}]-{8,10}-{1}-{RX,TX}
	LINE-{{1-30}}-{{1-6,12-17}}-{{1}}-{{RX,TX}}(COM)
	LINE-{{1-30}}-{{1-6,12-17}}-{{2}}-{{RX,TX}}(OSC)
	LINE-{{1-30}}-{{1-6,12-17}}-{{3}}-{{RX,TX}}(LINE)
	LINE-{{1-30}}-{{1-6,12-17}}-{{1-3}}-ALL
	LINE-{{1-30}}-{{1-6,12-17}}-{{1}}-{{RX,TX}}(LINE)
	LINE-{{1-30}}-{{1-6,12-17}}-{{2}}-{{RX,TX}}(COM)
	LINE-{{1-30}}-{{1-6,12-17}}-{{3}}-{{RX,TX}}(OSC)
	LINE-{{1-30}}-{{1-6,12-17}}-{{4}}-{{RX,TX}}(DC)
	LINE-{{1-30}}-{{1-6,12-17}}-{{1-4}}-ALL
	LINE-{{1-30}}-{{1-6,12-17}}-1-RX (For input OTS)
	LINE-{{1-30}}-{{1-6,12-17}}-1-ALL
	CHAN-{{1-30}}-{{1-6,12-17}}-{{1-32}}-TX (For drop OCH)
	CHAN-{{1-30}}-{{1-6,12-17}}-{{1-32}}-ALL
	LINE-{{1-30}}-{{1-5,12-16}}-{{1}}-{{RX,TX}} (EXP)
	LINE-{{1-30}}-{{1-5,12-16}}-{{2}}-{{RX,TX}} (COM)
	LINE-{{1-30}}-{{1-5,12-16}}-{{3}}-{{TX}} (DROP)
	LINE-{{1-30}}-{{1-5,12-16}}-{{1-3}}-ALL
	CHAN-{{1-30}}-{{1-5,12-16}}-{{1-32}}-{{RX}} (ADD)
	CHAN-{{1-30}}-{{1-5,12-16}}-{{1-32}}-{{PT}} (PT)
	CHAN-{{1-30}}-{{1-5,12-16}}-{{1-32}}-ALL
	LINE-{{1-30}}-{{1-6,12-17}}-{{1}}-{{RX,TX}} (EXP)
	LINE-{{1-30}}-{{1-6,12-17}}-{{2}}-{{RX,TX}} (COM)
	LINE-{{1-30}}-{{1-6,12-17}}-{{3}}-{{RX,TX}} (EXP to other ring)
	LINE-{{1-30}}-{{1-6,12-17}}-{{1-3}}-ALL

Table 26-1 ALL (continued)

AID	Pattern	
LINEWL	LINEWL[-{1-30}]{1-6,8,10,12-17}-ALL	LINEWL[-{1-30}]{1-6,12-17}{1}{RX,TX}-ALL
	LINEWL[-{1-30}]{1-6,12-17}{1}{RX,TX}-ALL	LINEWL[-{1-30}]{1-6,12-17}{1}{RX,TX}<WLEN>
	LINEWL[-{1-30}]{1-6,12-17}{1}{RX,TX}<WLEN>	LINEWL[-{1-30}]{1-5,12-16}{1-8}{RX}<WLEN>
	LINEWL[-{1-30}]{1-6,12-17}{1-3}{RX,TX}-ALL	LINEWL[-{1-30}]{1-5,12-16}{9}{RX,TX}<WLEN>
	LINEWL[-{1-30}]{1-6,12-17}{1-3}{RX,TX}<WLEN>	LINEWL[-{1-30}]{1-5,12-16}{10}{TX}<WLEN>
	LINEWL[-{1-30}]{1-6,12-17}{1-2}{RX,TX}-ALL	LINEWL[-{1-30}]{1-5,12-16}{11}{RX,TX}<WLEN>
	LINEWL[-{1-30}]{1-6,12-17}{1-2}{RX,TX}<WLEN>	
	LINEWL[-{1-30}]{1-6,12-17}{1-2}{RX,TX}-ALL	
	LINEWL[-{1-30}]{1-6,12-17}{1-2}{RX,TX}<WLEN>	
	LINEWL[-{1-30}]{1-6,12-17}{1,3,4}{RX,TX}-ALL	
	LINEWL[-{1-30}]{1-6,12-17}{1,3,4}{RX,TX}<WLEN>	
	LNKTERM	ALL
LNKTERM-ALL		
LNKTERM-{1-65535}		
OSC	OSC-RINGID	
OPM	ALL	
	OPM[-{1-30}]{1-5,12-16}<WLEN>	
	OPM[-{1-30}]{1-5,12-16}-ALL	
PR SLOT	NULL	
	SLOT-1	
	SLOT-13	
	SLOT-15	
	SLOT-17	
	SLOT-3	
	SLOT-5	

Table 26-1 ALL (continued)

AID	Pattern
RPRIF	<p>ALL</p> <p>RPRIF-{1-6,12-17}-0</p> <p>PPM[-{1-30}]-{1-4,11-14}-{1-4}-{1-4}</p> <p>RPRIF-&lt;SLOT&gt;-&lt;RPR INTERFACE&gt;. Currently, only interface 0 is supported.</p>
RFILE	<p>RFILE-DB</p> <p>RFILE-LOG</p> <p>RFILE-PKG</p> <p>RFILE-COMPDB</p>
SHELF	<p>SHELF-ALL</p> <p>SHELF-{1-30}</p>
STS	<p>FAC-{1-4,11-14}-{1-4}-{1-4}-{1}</p> <p>FAC-{1-6,12-17}-{1-4}</p> <p>STS-{1,2,5,6}-1</p> <p>STS-{1,2,5,6}-{1-3}</p> <p>STS-{1,2,5,6}-{1-3}-1</p> <p>STS-{1-4,11-14}-{1-16}-1</p> <p>STS-{1-4,11-14}-{1-16}-ALL</p> <p>STS-{1-4,11-14}-{1-16}-{1,13,25,37}</p> <p>STS-{1-4,11-14}-{1-16}-{1,25}</p> <p>STS-{1-4,11-14}-{1-16}-{1,4,7,10,-,46}</p> <p>STS-{1-4,11-14}-{1-4}-1</p> <p>STS-{1-4,11-14}-{1-4}-ALL</p> <p>STS-{1-4,11-14}-{1-4}-{1,13,25,37,-,181}</p> <p>STS-{1-4,11-14}-{1-4}-{1,25,49,73,-,169}</p> <p>STS-{1-4,11-14}-{1-4}-{1,4,7,10,-,190}</p> <p>STS-{1-4,11-14}-{1-4}-{1,49,97,145}</p> <p>STS-{1-4,11-14}-{1-4}-{1,4}-{1}</p> <p>STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,13,25,37}</p>

Table 26-1 ALL (continued)

AID	Pattern
STS (continued )	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,25}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,4,13,16,25,28,37,40}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,4,7,10,13,16,19,22,25,28,31,34,37,40,43,46}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,4,7}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,4}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1-12}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1-3}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1-48}
	STS-{1-4,11-14}-{1-4}-{1-192}
	STS-{1-4,11-14}-{1-4}-{1-4}-{1}-ALL
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,4,7,13,16,19,25,28,31,43}
	STS-{1-4,14-17}-{1-16}-{1-48}
	STS-{1-4,14-17}-{1-4}-1
	STS-{1-4,14-17}-{1-4}-ALL
	STS-{1-4,14-17}-{1-4}-{1,4,7,10}
	STS-{1-4,14-17}-{1-4}-{1,4,7}
	STS-{1-4,14-17}-{1-4}-{1-3}
	STS-{1-4,14-17}-{1-8}-1
	STS-{1-4,14-17}-{1-8}-ALL
	STS-{1-4,14-17}-{1-8}-{1-3}
	STS-{1-4}-1-1
	STS-{1-4}-1-ALL
	STS-{1-4}-1-{1,13,25,37}
	STS-{1-4}-1-{1,4,7,10,-,46}
	STS-{1-4}-1-{1,4,7,10}
	STS-{1-4}-1-{1,7,13,19,-,43}
	STS-{1-4}-1-{1,7}
	STS-{1-4}-1-{1-12}
	STS-{1-4}-1-{1-48}
	STS-{1-6,12-17}-1
	STS-{1-6,12-17}-1-1
	STS-{1-6,12-17}-1-ALL
	STS-{1-6,12-17}-1-{1,13,25,37}
	STS-{1-6,12-17}-1-{1,4,10,13,16,19,25,28,37,40}
	STS-{1-6,12-17}-1-{1,4,7,10,13,16,19,22,25}

Table 26-1 ALL (continued)

AID	Pattern
STS (continued )	STS-{1-6,12-17}-1-{1,4,7,10-46}
	STS-{1-6,12-17}-1-{1,4,7,10}
	STS-{1-6,12-17}-1-{1,4,7,13,16,19,25,28,37,40,43}
	STS-{1-6,12-17}-1-{1,4,7}
	STS-{1-6,12-17}-1-{1,4}
	STS-{1-6,12-17}-1-{1-12}
	STS-{1-6,12-17}-1-{1-48}
	STS-{1-6,12-17}-ALL
	STS-{1-6,12-17}-{1-12}-1
	STS-{1-6,12-17}-{1-24}-1
	STS-{1-6,12-17}-{1-36}-1
	STS-{1-6,12-17}-{1-4}-1
	STS-{1-6,12-17}-{1-4}-ALL
	STS-{1-6,12-17}-{1-4}-{1,4,7,10-46}
	STS-{1-6,12-17}-{1-4}-{1,4,7}
	STS-{1-6,12-17}-{1-4}-{1,4}
	STS-{1-6,12-17}-{1-4}-{1-12}
	STS-{1-6,12-17}-{1-6}
	STS-{2}-{1-2}-{1}-{1,4,7,10}
	STS-{2}-{1-2}-{1}-{1,7}
	STS-{2}-{1-2}-{1}-{1-12}
	STS-{2}-{1-2}-{1}-{1-3}
	STS-{2}-{1-2}-{1}-{1}
	STS-{2}-{1-3}-{1}
	STS-{2}-{1}
	STS-{3,4}-{1,2}-1-{1-12}
	STS-{3,4}-{1,2}-1-{1-3}
	STS-{3,4}-{1,2}-1-{1-48}
	STS-{5,6,12,13}-1-1
	STS-{5,6,12,13}-1-{1,13,25,37-180}
	STS-{5,6,12,13}-1-{1,13,25,37}
	STS-{5,6,12,13}-1-{1,4,7,10,13,16,19,22,25}
	STS-{5,6,12,13}-1-{1,4,7,10-190}
	STS-{5,6,12,13}-1-{1,4,7,10-46}
	STS-{5,6,12,13}-1-{1,4,7,13,16,19,25,28,37,40,43}

Table 26-1 ALL (continued)

AID	Pattern
STS (continued )	STS-{5,6,12,13}-1-{1,49,97,145} STS-{5,6,12,13}-1-{1-192} STS-{5,6,12,13}-1-{1-48} STS-{5,6}-1 STS-{5,6}-{1-4}-1 STS-{5-6}-ALL VFAC-{1-6,12-17}-{0-1}
SYN	SYNC-NE
SYN_SR C	BITS-1 FAC-{5,6,12,13}-{1} BITS-2 INTERNAL FAC-{1-4,11-14}-{1-16} NONE FAC-{1-4,11-14}-{1-4} OC12-{2}-{1-2}-{1} FAC-{1-4}-1 OC3-{2}-{1-2}-{1} FAC-{1-4}-{1-4} SYNC-NE FAC-{1-6,12-17}-{1-4} T1-{2}-{1-21} FAC-{1-6,12-17}-{1}
SYNC_R EF	SYNC-ALL SYNC-NE SYNC-{BITS1,BITS2}
SYNCSW	INT PRI SEC
UDC	UDC-{F,DCC}-{A,B}

Table 26-1 ALL (continued)

AID	Pattern	
VT	VT1- $\{1,2,5,6\}$ -1- $\{1-7\}$ - $\{1-4\}$	VT1- $\{2\}$ - $\{1-2\}$ - $\{1\}$ - $\{1-3\}$ - $\{1-7\}$ - $\{1-4\}$
	VT1- $\{1,2,5,6\}$ - $\{1-3\}$ -1- $\{1-7\}$ - $\{1-4\}$	VT1- $\{2\}$ - $\{1-3\}$ - $\{1\}$ - $\{1-7\}$ - $\{1-4\}$
	VT1- $\{1,2,5,6\}$ - $\{1-3\}$ - $\{1-7\}$ - $\{1-4\}$	VT1- $\{2\}$ - $\{1\}$ - $\{1-7\}$ - $\{1-3\}$
	VT1- $\{1-4,14-17\}$ - $\{1-8\}$ - $\{1-3\}$ - $\{1-7\}$ - $\{1-4\}$	VT1- $\{3,4\}$ - $\{1-2\}$ - $\{1\}$ - $\{1-12\}$ - $\{1-7\}$ - $\{1-4\}$
	VT1- $\{1-4\}$ -1- $\{1-12\}$ - $\{1-7\}$ - $\{1-4\}$	VT1- $\{3,4\}$ - $\{1-2\}$ - $\{1\}$ - $\{1-3\}$ - $\{1-7\}$ - $\{1-4\}$
	VT1- $\{1-4\}$ -1- $\{1-48\}$ - $\{1-7\}$ - $\{1-4\}$	VT1- $\{3,4\}$ - $\{1-2\}$ - $\{1\}$ - $\{1-48\}$ - $\{1-7\}$ - $\{1-4\}$
	VT1- $\{1-4\}$ - $\{1-4\}$ - $\{1-3\}$ - $\{1-7\}$ - $\{1-4\}$	VT1- $\{5,6,12,13\}$ -1- $\{1-192\}$ - $\{1-7\}$ - $\{1-4\}$
	VT1- $\{1-6,12-17\}$ -1- $\{1-12\}$ - $\{1-7\}$ - $\{1-4\}$	VT1- $\{5,6,12,13\}$ -1- $\{1-48\}$ - $\{1-7\}$ - $\{1-4\}$
	VT1- $\{1-6,12-17\}$ -1- $\{1-48\}$ - $\{1-7\}$ - $\{1-4\}$	VT1- $\{5-6\}$ -1- $\{1-7\}$ - $\{1-2\}$
	VT1- $\{1-6,12-17\}$ -1- $\{1-7\}$ - $\{1-2\}$	VT1- $\{5-6\}$ -1- $\{1-7\}$ - $\{1-4\}$
	VT1- $\{1-6,12-17\}$ - $\{1-12\}$ -1- $\{1-7\}$ - $\{1-4\}$	VT2- $\{1-4,14-17\}$ - $\{1-8\}$ - $\{1-3\}$ - $\{1-7\}$ - $\{1-3\}$
	VT1- $\{1-6,12-17\}$ - $\{1-24\}$ -1- $\{1-7\}$ - $\{1-4\}$	VT2- $\{1-6,12-17\}$ -1- $\{1-12\}$ - $\{1-7\}$ - $\{1-3\}$
	VT1- $\{1-6,12-17\}$ - $\{1-36\}$ -1- $\{1-7\}$ - $\{1-4\}$	VT2- $\{1-6,12-17\}$ -1- $\{1-48\}$ - $\{1-7\}$ - $\{1-3\}$
	VT1- $\{1-6,12-17\}$ - $\{1-4\}$ - $\{1-12\}$ - $\{1-7\}$ - $\{1-4\}$	VT2- $\{1-6,12-17\}$ - $\{1-4\}$ - $\{1-12\}$ - $\{1-7\}$ - $\{1-3\}$
	VT1- $\{1-6,12-17\}$ - $\{1-4\}$ - $\{1-3\}$ - $\{1-7\}$ - $\{1-4\}$	VT2- $\{1-6,12-17\}$ - $\{1-4\}$ - $\{1-3\}$ - $\{1-7\}$ - $\{1-3\}$
	VT1- $\{1-6,12-17\}$ - $\{1-6\}$ - $\{1-7\}$ - $\{1-4\}$	VT2- $\{5,6,12,13\}$ -1- $\{1-192\}$ - $\{1-7\}$ - $\{1-3\}$
	VT1- $\{2\}$ - $\{1-2\}$ - $\{1\}$ - $\{1-12\}$ - $\{1-7\}$ - $\{1-4\}$	VT2- $\{5,6,12,13\}$ -1- $\{1-48\}$ - $\{1-7\}$ - $\{1-3\}$
	WDMAN S	WDMSIDE- $\{UNKNOWN,A,B,C,D,E,F,G,H\}$ WDMNODE
	WLEN	WLEN- $\{E,W\}$ - $\{ADD,DROP,EXP\}$ - $\{1530.33,1531.12,1531.90,1532.68,1534.25,1535.04,1535.82,1536.61,1538.19,1538.98,1539.77,1540.56,1542.14,1542.94,1543.73,1544.53,1546.12,1546.92,1547.72,1548.51,1550.12,1550.92,1551.72,1552.52,1554.13,1554.94,1555.75,1556.55,1558.17,1558.98,1559.79,1560.61\}$

## 26.2 AidUnionId

Table 26-2 AidUnionId

AID	Pattern		
Facility	ALL	FAC-{5-6}-{1-3}	
	EC1-{1,2,5,6}-{1-3}	FAC-{8,10}-{1}	
	EC1-{2}-{1-3}	FSTE-{1,2,5,6}-{0-7}	
	FAC-{1-4,11-14}-ALL	FSTE-{1,2,5,6}-{1-8}	
	FAC-{1-4,11-14}-{1-16}	FSTE-{1}-{0-7}	
	FAC-{1-4,11-14}-{1-4}	FSTE-{1}-{1-8}	
	FAC-{1-4,11-14}-{1-4}-{1-4}-{1}	OC12-{2}-{1-2}-{1}	
	FAC-{1-4,14-17}-{1-8}	OC12-{3,4}-{1-2}-{1}	
	FAC-{1-4}-1	OC3-{2}-{1-2}-{1}	
	FAC-{1-4}-{1-4}	OC3-{3,4}-{1-2}-{1}	
	FAC-{1-6,12-17}-1	T1-{1,2,5,6}-{1-28}	
	FAC-{1-6,12-17}-ALL	T1-{1,2,5,6}-{1-84}	
	FAC-{1-6,12-17}-{0-11}	T1-{2}-{1-21}	
	FAC-{1-6,12-17}-{0-1}	T3-{1,2,5,6}-{1-3}	
	FAC-{1-6,12-17}-{1-30,14,16,18,20,22,24,26,28,30,32,34,36}	T3-{2}-{1-3}	
	FAC-{1-6,12-17}-{1-30,14,16,18,20,22,24}	VFAC-{1,2,5,6}-{0-1}	
	FAC-{1-6,12-17}-{1-12}	VFAC-{1,2,5,6}-{1-8}	
	FAC-{1-6,12-17}-{1-4}	VFAC-{1-4,11-14}-{1-4}-{1-4}-1	
	FAC-{1-6,12-17}-{1-6}	VFAC-{1-6,12-17}-{0-1}	
	FAC-{1-6,12-17}-{1}	VFAC-{1-6,12-17}-{1,2}	
	FAC-{1-6}-ALL	VFAC-{1-6,12-17}-{1,2}-{1,8}	
	FAC-{5,6,12,13}-{1}	VFAC-{1}-{0-1}	
	FAC-{5-6}-{1-28}	VFAC-{1}-{1-8}	
	STS	FAC-{1-4,11-14}-{1-4}-{1-4}-{1}	
		FAC-{1-6,12-17}-{1-4}	
		STS-{1,2,5,6}-1	
		STS-{1,2,5,6}-{1-3}	
STS-{1,2,5,6}-{1-3}-1			
STS-{1-4,11-14}-{1-16}-1			
STS-{1-4,11-14}-{1-16}-ALL			
STS-{1-4,11-14}-{1-16}-{1,13,25,37}			
STS-{1-4,11-14}-{1-16}-{1,25}			

Table 26-2 AidUnionId (continued)

AID	Pattern
STS (continued)	STS-{1-4,11-14}-{1-16}-{1,4,7,10,-,46}
	STS-{1-4,11-14}-{1-4}-1
	STS-{1-4,11-14}-{1-4}-ALL
	STS-{1-4,11-14}-{1-4}-{1,13,25,37,-,181}
	STS-{1-4,11-14}-{1-4}-{1,25,49,73,-,169}
	STS-{1-4,11-14}-{1-4}-{1,4,7,10,-,190}
	STS-{1-4,11-14}-{1-4}-{1,49,97,145}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,13,25,37}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,25}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,4,13,16,25,28,37,40}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,4,7,10,13,16,19,22,25,28,31,34,37,40,43,46}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,4,7}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,4}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1-12}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1-3}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1-48}
	STS-{1-4,11-14}-{1-4}-{1-192}
	STS-{1-4,11-14}-{1-4}-{1-4}-{1}-ALL
	STS-{1-4,11-14}-{1-4}-{1-4}-{1}-{1,4,7,13,16,19,25,28,31,43}

Table 26-2 AidUnionId (continued)

AID	Pattern
STS (continued)	STS-{1-4,14-17}-{1-16}-{1-48}
	STS-{1-4,14-17}-{1-4}-1
	STS-{1-4,14-17}-{1-4}-ALL
	STS-{1-4,14-17}-{1-4}-{1,4,7,10}
	STS-{1-4,14-17}-{1-4}-{1,4,7}
	STS-{1-4,14-17}-{1-4}-{1-3}
	STS-{1-4,14-17}-{1-8}-1
	STS-{1-4,14-17}-{1-8}-ALL
	STS-{1-4,14-17}-{1-8}-{1-3}
	STS-{1-4}-1-1
	STS-{1-4}-1-ALL
	STS-{1-4}-1-{1,13,25,37}
	STS-{1-4}-1-{1,4,7,10,-,46}
	STS-{1-4}-1-{1,4,7,10}
	STS-{1-4}-1-{1,7,13,19,-,43}
	STS-{1-4}-1-{1,7}
	STS-{1-4}-1-{1-12}
	STS-{1-4}-1-{1-48}
	STS-{1-6,12-17}-1
	STS-{1-6,12-17}-1-1
	STS-{1-6,12-17}-1-ALL
	STS-{1-6,12-17}-1-{1,13,25,37}
	STS-{1-6,12-17}-1-{1,4,10,13,16,19,25,28,37,40}
	STS-{1-6,12-17}-1-{1,4,7,10,13,16,19,22,25}
	STS-{1-6,12-17}-1-{1,4,7,10-46}
	STS-{1-6,12-17}-1-{1,4,7,10}
	STS-{1-6,12-17}-1-{1,4,7,13,16,19,25,28,37,40,43}
	STS-{1-6,12-17}-1-{1,4,7}
	STS-{1-6,12-17}-1-{1,4}
	STS-{1-6,12-17}-1-{1-12}
	STS-{1-6,12-17}-1-{1-48}
	STS-{1-6,12-17}-ALL
	STS-{1-6,12-17}-{1-12}-1
	STS-{1-6,12-17}-{1-24}-1

Table 26-2 AidUnionId (continued)

AID	Pattern
STS (continued)	STS-{1-6,12-17}-{1-36}-1
	STS-{1-6,12-17}-{1-4}-1
	STS-{1-6,12-17}-{1-4}-ALL
	STS-{1-6,12-17}-{1-4}-{1,4,7,10-46}
	STS-{1-6,12-17}-{1-4}-{1,4,7}
	STS-{1-6,12-17}-{1-4}-{1,4}
	STS-{1-6,12-17}-{1-4}-{1-12}
	STS-{1-6,12-17}-{1-6}
	STS-{2}-{1-2}-{1}-{1,4,7,10}
	STS-{2}-{1-2}-{1}-{1,7}
	STS-{2}-{1-2}-{1}-{1-12}
	STS-{2}-{1-2}-{1}-{1-3}
	STS-{2}-{1-2}-{1}-{1}
	STS-{2}-{1-3}-{1}
	STS-{2}-{1}
	STS-{3,4}-{1,2}-1-{1-12}
	STS-{3,4}-{1,2}-1-{1-3}
	STS-{3,4}-{1,2}-1-{1-48}
	STS-{5,6,12,13}-1-1
	STS-{5,6,12,13}-1-{1,13,25,37-180}
	STS-{5,6,12,13}-1-{1,13,25,37}
	STS-{5,6,12,13}-1-{1,4,7,10,13,16,19,22,25}
	STS-{5,6,12,13}-1-{1,4,7,10-190}
	STS-{5,6,12,13}-1-{1,4,7,10-46}
	STS-{5,6,12,13}-1-{1,4,7,13,16,19,25,28,37,40,43}
	STS-{5,6,12,13}-1-{1,49,97,145}
	STS-{5,6,12,13}-1-{1-192}
	STS-{5,6,12,13}-1-{1-48}
	STS-{5,6}-1
	STS-{5,6}-{1-4}-1
	STS-{5,6}-ALL
	VFAC-{1-6,12-17}-{0-1}

Table 26-2 AidUnionId (continued)

AID	Pattern
VT	ALL
	VT1-{1,2,5,6}-1-{1-7}-{1-4}
	VT1-{1,2,5,6}-{1-3}-1-{1-7}-{1-4}
	VT1-{1,2,5,6}-{1-3}-{1-7}-{1-4}
	VT1-{1-4,14-17}-{1-8}-{1-3}-{1-7}-{1-4}
	VT1-{1-4}-1-{1-12}-{1-7}-{1-4}
	VT1-{1-4}-1-{1-48}-{1-7}-{1-4}
	VT1-{1-4}-{1-4}-{1-3}-{1-7}-{1-4}
	VT1-{1-6,12-17}-1-{1-12}-{1-7}-{1-4}
	VT1-{1-6,12-17}-1-{1-48}-{1-7}-{1-4}
	VT1-{1-6,12-17}-1-{1-7}-{1-2}
	VT1-{1-6,12-17}-{1-12}-1-{1-7}-{1-4}
	VT1-{1-6,12-17}-{1-24}-1-{1-7}-{1-4}
	VT1-{1-6,12-17}-{1-36}-1-{1-7}-{1-4}
	VT1-{1-6,12-17}-{1-4}-{1-12}-{1-7}-{1-4}
	VT1-{1-6,12-17}-{1-4}-{1-3}-{1-7}-{1-4}

Table 26-2 AidUnionId (continued)

AID	Pattern
VT (continued)	VT1-{1-6,12-17}-{1-6}-{1-7}-{1-4}
	VT1-{2}-{1-2}-{1}-{1-12}-{1-7}-{1-4}
	VT1-{2}-{1-2}-{1}-{1-3}-{1-7}-{1-4}
	VT1-{2}-{1-3}-{1}-{1-7}-{1-4}
	VT1-{2}-{1}-{1-7}-{1-3}
	VT1-{3,4}-{1-2}-{1}-{1-12}-{1-7}-{1-4}
	VT1-{3,4}-{1-2}-{1}-{1-3}-{1-7}-{1-4}
	VT1-{3,4}-{1-2}-{1}-{1-48}-{1-7}-{1-4}
	VT1-{5,6,12,13}-1-{1-192}-{1-7}-{1-4}
	VT1-{5,6,12,13}-1-{1-48}-{1-7}-{1-4}
	VT1-{5-6}-1-{1-7}-{1-2}
	VT1-{5-6}-1-{1-7}-{1-4}
	VT2-{1-4,14-17}-{1-8}-{1-3}-{1-7}-{1-3}
	VT2-{1-6,12-17}-1-{1-12}-{1-7}-{1-3}
	VT2-{1-6,12-17}-1-{1-48}-{1-7}-{1-3}
	VT2-{1-6,12-17}-{1-4}-{1-12}-{1-7}-{1-3}
	VT2-{1-6,12-17}-{1-4}-{1-3}-{1-7}-{1-3}
	VT2-{5,6,12,13}-1-{1-192}-{1-7}-{1-3}
	VT2-{5,6,12,13}-1-{1-48}-{1-7}-{1-3}

## 26.3 AidUnionId1

Table 26-3 AidUnionId1

AID	Patterns
BLSR	ALL BLSR-RINGID

## 26.4 BAND

(Cisco ONS 15454 only) The BAND AID is used to access Optical Multiplex Section (OMS) layer of optical networking units.

Table 26-4 BAND

Pattern	Description
ALL	All of the OMSs of the NE. The ALL AID is applicable for retrieve-only commands.
BAND[-{1-30}]-{1-6,12-17}-{1-4}-ALL	All the channels in a Band OADM (1Bn, 4Bn) unit.
BAND[-{1-30}]-{1-6,12-17}-{1-4}-{RX,TX}	The Receive/Transmit channels in a Band OADM (1Bn, 4Bn) unit.
BAND[-{1-30}]-{1-6,12-17}-{1}-ALL	All the channels in an Optical Multiplexer/Demultiplexer (4Ch) unit.
BAND[-{1-30}]-{1-6,12-17}-{1}-{RX,TX}	The Receive/Transmit channels in an Optical Multiplexer/Demultiplexer (4Ch) unit.

## 26.5 BANDWL

(Cisco ONS 15454) Band wavelength. Identifies a wavelength channel included in any of the lower layer OMS facilities.

Table 26-5 BANDWL

Pattern	Description
BANDWL-{1-6,12-17}-{1-32}-{RX,TX}-1530.33	Identifies an allocated wavelength channel included in any of the lower layer OMS facilities.
BANDWL-{1-6,12-17}-{1-32}-{RX,TX}-ALL	Identifies all of the allocated wavelength channels included in any of the lower layer OMS facilities.

Table 26-5 BANDWL (continued)

Pattern	Description
BANDWL-[[ 1-30]-][ 1-6,12-17]-[ 1-32]- {RX,TX,PT}-<WLEN>	<p>OCH is the termination point of OCHNC connections and it is also used to report alarms and conditions eventually notified by the node connection anomalies.</p> <p>Because the end points of an OCHNC connection can be both at the OCH filter level and at the node LINE OTS single wavelength level, this logical termination is useful to represent univocally a wavelength termination independently by the physical port it is contained in.</p> <p>The format is CHAN-[SHELF]-[SLOT]-[PORT]-[PORTDIRECTION]-[WAVELENGTH (in the form of 15xx.yy)]</p>
BANDWL-[[ 1-30]-][ 1-6,12-17]-[ 1-32]- {RX,TX,PT}-ALL	<p>OCH is the termination point of OCHNC connections and it is also used to report alarms and conditions eventually notified by the node connection anomalies.</p> <p>Because the end points of an OCHNC connection can be both at the OCH filter level and at the node LINE OTS single wavelength level, this logical termination is useful to represent univocally a wavelength termination independently by the physical port it is contained in.</p> <p>The format is CHAN-[SHELF]-[SLOT]-[PORT]-[PORTDIRECTION]-[WAVELENGTH (in the form of 15xx.yy)]</p>

## 26.6 BITS

AID for building integrated timing supply (BITS).

Table 26-6 BITS

Pattern	Description
ALL	The ALL AID is applicable to RTRV commands only (RTRV-BITS and RTRV-ALM/COND-BITS). The All AID is equivalent to BITS-ALL for these commands. For RTRV-ALM/COND-SYCN, the ALL AID translates to BITS-ALL, SYNC-BITS1, and SYNC-BITS2.
BITS-ALL	BITS AIDS of both BITS-1 and BITS-2 in the RTRV-BITS command.
BITS[<SHELFID>]-ALL	BITS shelf ID of both BITS-1 and BITS-2 in the RTRV-BITS command.
BITS[<SHELFID>]-{1,2}	Individual BITS AID.
SYNC[<SHELFID>]-BITS{1,2}	BITS-OUT AIDs of BITS-1 and BITS-2. These AIDs are applicable only in ED/RTRV-BITS commands and are used for setting and retrieving the BITS-OUT parameters.

## 26.7 BLSR

(ONS 15454) BLSR AIDs are used to access the specific BLSR of the NE.

**Table 26-7** BLSR

Pattern	Description
ALL	All the BLSRs in the NE. The ALL AID is applicable for retrieve-only commands like RTRV-<MOD_RING> (BLSR).
BLSR-RINGID	RINGID is a string of up to six characters. Valid characters are [A-Z,0-9] (case insensitive).

## 26.8 CHANNEL

(Cisco ONS 15454 only) Accesses the optical channels (OCH) layer of optical networking units.

**Table 26-8** CHANNEL

CHANNEL Values	Description
ALL	ALL OCHs of the NE. The ALL AID is applicable for retrieve-only commands.
CHAN[-{1-30}]-{1-6,12-17}-ALL	All the channels of an Optical Transponder/Muxponder. The format is CHAN-[SLOT]-ALL
CHAN[-{1-30}]-{1-6,12-17}-{1-32}-ALL	All the channels in an Optical Multiplexer/Demultiplexer 32WSS unit. The format is CHAN-[SHELF]-[SLOT]-[PORT]-ALL.
CHAN[-{1-30}]-{1-6,12-17}-{1-32}-{RX,TX}	The Receive/Transmit channels in an Optical Multiplexer/Demultiplexer (32DMX, 32MUX) units. The format is CHAN-[SHELF]-[SLOT]-[PORT]-[DIRECTION].
CHAN[-{1-30}]-{1-6,12-17}-{1-32}-{RX,PT}	The Receive/Pass-through channels in an Optical 32WSS unit. The format is CHAN-[SHELF]-[SLOT]-[PORT]-[DIRECTION].
CHAN[-{1-30}]-{1-5,12-16}-{1-40}-ALL	All the channels in Optical Multiplexer/Demultiplexer/WSS (40Ch) units. The format is CHAN-[SHELF]-[SLOT]-[PORT]-ALL.
CHAN[-{1-30}]-{1-5,12-16}-{1-40}-RX,TX	The receive/transmit channels in an Optical Multiplexer/Demultiplexer (40Ch) unit. The format is CHAN-[SHELF]-[SLOT]-[PORT]-[DIRECTION].
CHAN[-{1-30}]-{1-5,12-16}-{1-40}-RX,PT	The Receive/Pass-through channels in an Optical WSS (40Ch) unit. The format is CHAN-[SHELF]-[SLOT]-[PORT]-[DIRECTION].
CHAN[-{1-30}]-{1-6,12-17}-{1-4}-ALL	All the Channels in an OADM (AD-1C-xx.x, AD-2C-xx.x, AD-4C-xx.x) unit or Optical Multiplexer/Demultiplexer (4MD-xx.x) units. The format is CHAN-[SHELF]-[SLOT]-[PORT]-ALL.

Table 26-8 CHANNEL (continued)

CHANNEL Values	Description
CHAN[-{1-30}]-{1-6,12-17}-{1-4}-{RX,TX}	The Receive/Transmit Channels in an OADM (AD-1C-xx.x, AD-2C-xx.x, AD-4C-xx.x) unit or Optical Multiplexer/Demultiplexer (4MD-xx.x) unit. The format is CHAN-[SHELF]-[SLOT]-[PORT]-[DIRECTION].
CHAN[-{1-30}]-{1-6,12-17}-{2,3}	A single channel of an Optical Transponder/Muxponder. The TXP_MR_10G, TXP_MR_10E, and TXP_MR_2.5G cards use CHAN-[SHELF]-SLOT-2 for the one dense wavelength division multiplexing (DWDM) Facility. The TXPP_MR_2.5G card uses CHAN-[SHELF]-SLOT-{2,3} for the two DWDM Facilities. The format is CHAN-[SHELF]-[SLOT]-[PORT].
CHAN[-{1-30}]-{1-6,12-17}-{5}	A single channel of an Optical Muxponder. The TXP_MR_10G and TXP_MR_10E cards use CHAN-[SHELF]-SLOT-5 for the one DWDM facility. The TXP_MR_10G uses the CHAN-[SHELF]-SLOT-5 for the one DWDM facility. The format is CHAN-[SHELF]-[SLOT]-[PORT].
CHAN[-{1-30}]-{1-6,12-17}-{9,10}	A single channel of an Optical Muxponder. The MXP_MR_10DME_C and MXP_2.5G_10G cards use CHAN-[SHELF]-SLOT-9 for the one DWDM Facility. The MXPP_2.5G_10G card uses CHAN-[SHELF]-SLOT-{9,10} for the two DWDM Facilities. The format is CHAN-[SHELF]-[SLOT]-[PORT].
CHAN[-{1-30}]-{1-6,12-17}-{3,4}-{1}	A single channel of an Optical Muxponder. The 10GE-XP uses CHAN-[SHELF]-SLOT-{3,4}-1 for the two DWDM facilities. The format is CHAN-[SHELF]-[SLOT]-[PPM]-[PORT].
CHAN[-{1-30}]-{1-6,12-17}-{21,22}-{1}	A single channel of an Optical Muxponder. The GE-XP uses CHAN-[SHELF]-SLOT-{11,12}-1 for the two DWDM facilities. The format is CHAN-[SHELF]-[SLOT]-[PPM]-[PORT].
CHAN-[[{1-30}]-]{1-6,12-17}-{1-32}-{RX,TX,PT}	OCH is the termination point of OCHNC connections and it is also used to report alarms and conditions eventually notified by the node connection anomalies. Because the end points of an OCHNC connection can be both at the OCH filter level and at the node LINE OTS single wavelength level, this logical termination is useful to represent univocally a wavelength termination independently by the physical port it is contained in. The format is CHAN-[SHELF]-[SLOT]-[PORT]-[PORTDIRECTION].
CHAN-[[{1-30}]-]{1-6,12-17}-{1-32}-ALL	OCH is the termination point of OCHNC connections and it is also used to report alarms and conditions eventually notified by the node connection anomalies. Because the end points of an OCHNC connection can be both at the OCH filter level and at the node LINE OTS single wavelength level, this logical termination is useful to represent univocally a wavelength termination independently by the physical port it is contained in. The format is CHAN-[SHELF]-[SLOT]-[PORT]-[PORTDIRECTION]-[WAVELENGTH] (in the form of 15xx.yy).
CHAN[-{1-30}]-{1-6,12-17}-{19}-{1}	A single channel of an ADM-10G card. ADM-10G uses CHAN-[SHELF]-SLOT-19 for one DWDM Facility. Format is CHAN-[SHELF]-[SLOT]-[PPM]-[PORT].

Table 26-8 CHANNEL (continued)

CHANNEL Values	Description
CHAN[-{1-30}]-{1-6,12-17}-{17,18}-{1}	The DWDM interlinks between two peer ADM-10G cards. ADM-10G uses CHAN-[SHELF]-SLOT-{17,18} for the two DWDM interlinks Facilities. Format is CHAN-[SHELF]-[SLOT]-[PPM]-[PORT].
CHAN[-{1-30}]-{1-6,12-17}-{19}-{1}	A single channel of an ADM-10G card. ADM-10G uses CHAN-[shelf]-slot-19 for the 1 DWDM Facility. Format is CHAN-[shelf]-[slot]-[ppm]-[port].
CHAN[-{1-0}]-{1-6,12-17}-{17,18}-{1}	The DWDM Interlinks between 2 peer ADM-10G cards. ADM-10G uses CHAN-[shelf]-slot-{17,18} for the 2 DWDM Interlinks Facilities. Where format is CHAN-[shelf]-[slot]-[ppm]-[port]. In Release 9.0 or later, Port Number 18 can be used as an optical channel in the single card mode, the AID and the format remain the same.

## 26.9 CHGRP

AID for the Channel Group (CHGRP). [Table 26-9](#) lists the CHGRP AIDs and their descriptions.

Table 26-9 CHGRP

Pattern	Description
ALL	The ALL aid is applicable for RTRV-only commands, basically the RTRV-rr type of commands. For example, RTRV-CHGRP with ALL aid returns all CHGRP ports on the GE_XP and 10GE_XP cards.
CHGRP-{{1-30}}-1-6,12-17-1-11	Channel group AID on GE_XP and 10GE_XP cards. The format is CHGRP-[SHELF]-[SLOT]-[CHGRP]

## 26.10 COM

Common

Table 26-10 COM

Pattern	Description
COM	Common

## 26.11 CrossConnectId

Table 26-11 CrossConnect Id

Pattern	Description
FACILITY	<p>ALL FAC-{5-6}-{1-3}</p> <p>EC1-{1,2,5,6}-{1-3} FAC-{8,10}-{1}</p> <p>EC1-{2}-{1-3} FSTE-{1,2,5,6}-{0-7}</p> <p>FAC-{1-4,11-14}-ALL FSTE-{1,2,5,6}-{1-8}</p> <p>FAC-{1-4,11-14}-{1-16} FSTE-{1}-{0-7}</p> <p>FAC-{1-4,11-14}-{1-4} FSTE-{1}-{1-8}</p> <p>FAC-{1-4,11-14}-{1-4}-{1-4}-{1} OC12-{2}-{1-2}-{1}</p> <p>FAC-{1-4,14-17}-{1-8} OC12-{3,4}-{1-2}-{1}</p> <p>FAC-{1-4}-1 OC3-{2}-{1-2}-{1}</p> <p>FAC-{1-4}-{1-4} OC3-{3,4}-{1-2}-{1}</p> <p>FAC-{1-6,12-17}-1 T1-{1,2,5,6}-{1-28}</p> <p>FAC-{1-6,12-17}-ALL T1-{1,2,5,6}-{1-84}</p> <p>FAC-{1-6,12-17}-{0-11} T1-{2}-{1-21}</p> <p>FAC-{1-6,12-17}-{0-1} T3-{1,2,5,6}-{1-3}</p> <p>FAC-{1-6,12-17}-{1-12,14,16,18,20,2 2,24,26,28,30,32,34,36} T3-{2}-{1-3}</p> <p>FAC-{1-6,12-17}-{1-12,14,16,18,20,2 2,24} VFAC-{1,2,5,6}-{0-1}</p> <p>FAC-{1-6,12-17}-{1-12} VFAC-{1,2,5,6}-{1-8}</p> <p>FAC-{1-6,12-17}-{1-4} VFAC-{1-4,11-14}-{1-4}-{1-4}-1</p> <p>FAC-{1-6,12-17}-{1-4} VFAC-{1-6,12-17}-{0-1}</p> <p>FAC-{1-6,12-17}-{1-6} VFAC-{1-6,12-17}-{1,2}</p> <p>FAC-{1-6,12-17}-{1} VFAC-{1-6,12-17}-{1,2}-{1,8}</p> <p>FAC-{1-6}-ALL VFAC-{1}-{0-1}</p> <p>FAC-{5,6,12,13}-{1} VFAC-{1}-{1-8}</p> <p>FAC-{5-6}-{1-28}</p>
STS	FAC-{1-4,11-14}-{1-4}-{1-4}-{1}

Table 26-11 CrossConnect Id (continued)

Pattern	Description
STS (continued)	FAC-{1-6,12-17}-{1-4}
	STS-{1,2,5,6}-1
	STS-{1,2,5,6}-{1-3}
	STS-{1,2,5,6}-{1-3}-1
	STS-{1-4,11-14}-{1-16}-1
	STS-{1-4,11-14}-{1-16}-ALL
	STS-{1-4,11-14}-{1-16}-{1,13,25,37}
	STS-{1-4,11-14}-{1-16}-{1,25}
	STS-{1-4,11-14}-{1-16}-{1,4,7,10,-,46}
	STS-{1-4,11-14}-{1-4}-1
	STS-{1-4,11-14}-{1-4}-ALL
	STS-{1-4,11-14}-{1-4}-{1,13,25,37,-,181}
	STS-{1-4,11-14}-{1-4}-{1,25,49,73,-,169}
	STS-{1-4,11-14}-{1-4}-{1,4,7,10,-,190}
	STS-{1-4,11-14}-{1-4}-{1,49,97,145}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,13,25,37}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,25}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,4,13,16,25,28,37,40}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,4,7,10,13,16,19,22,25,28,31,34,37,40,43,46}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,4,7}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,4}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1-12}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1-3}

Table 26-11 CrossConnect Id (continued)

Pattern	Description
STS (continued)	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1-48}
	STS-{1-4,11-14}-{1-4}-{1-192}
	STS-{1-4,11-14}-{1-4}-{1-4}-{1}-ALL
	STS-{1-4,11-14}-{1-4}-{1-4}-{1}-{1,4,7,13,16,19,25,28,31,43}
	STS-{1-4,14-17}-{1-16}-{1-48}
	STS-{1-4,14-17}-{1-4}-1
	STS-{1-4,14-17}-{1-4}-ALL
	STS-{1-4,14-17}-{1-4}-{1,4,7,10}
	STS-{1-4,14-17}-{1-4}-{1,4,7}
	STS-{1-4,14-17}-{1-4}-{1-3}
	STS-{1-4,14-17}-{1-8}-1
	STS-{1-4,14-17}-{1-8}-ALL
	STS-{1-4,14-17}-{1-8}-{1-3}
	STS-{1-4}-1-1
	STS-{1-4}-1-ALL
	STS-{1-4}-1-{1,13,25,37}
	STS-{1-4}-1-{1,4,7,10,-,46}
	STS-{1-4}-1-{1,4,7,10}
	STS-{1-4}-1-{1,7,13,19,-,43}
	STS-{1-4}-1-{1,7}
	STS-{1-4}-1-{1-12}
	STS-{1-4}-1-{1-48}
	STS-{1-6,12-17}-1
	STS-{1-6,12-17}-1-1
	STS-{1-6,12-17}-1-ALL
	STS-{1-6,12-17}-1-{1,13,25,37}
	STS-{1-6,12-17}-1-{1,4,10,13,16,19,25,28,37,40}
	STS-{1-6,12-17}-1-{1,4,7,10,13,16,19,22,25}
	STS-{1-6,12-17}-1-{1,4,7,10-46}
	STS-{1-6,12-17}-1-{1,4,7,10}
	STS-{1-6,12-17}-1-{1,4,7,13,16,19,25,28,37,40,43}
	STS-{1-6,12-17}-1-{1,4,7}
	STS-{1-6,12-17}-1-{1,4}

Table 26-11 CrossConnect Id (continued)

Pattern	Description
STS (continued)	STS-{1-6,12-17}-1-{1-12}
	STS-{1-6,12-17}-1-{1-48}
	STS-{1-6,12-17}-ALL
	STS-{1-6,12-17}-{1-12}-1
	STS-{1-6,12-17}-{1-24}-1
	STS-{1-6,12-17}-{1-36}-1
	STS-{1-6,12-17}-{1-4}-1
	STS-{1-6,12-17}-{1-4}-ALL
	STS-{1-6,12-17}-{1-4}-{1,4,7,10-46}
	STS-{1-6,12-17}-{1-4}-{1,4,7}
	STS-{1-6,12-17}-{1-4}-{1,4}
	STS-{1-6,12-17}-{1-4}-{1-12}
	STS-{1-6,12-17}-{1-6}
	STS-{2}-{1-2}-{1}-{1,4,7,10}
	STS-{2}-{1-2}-{1}-{1,7}
	STS-{2}-{1-2}-{1}-{1-12}
	STS-{2}-{1-2}-{1}-{1-3}
	STS-{2}-{1-2}-{1}-{1}
	STS-{2}-{1-3}-{1}
	STS-{2}-{1}
	STS-{3,4}-{1,2}-1-{1-12}
	STS-{3,4}-{1,2}-1-{1-3}
	STS-{3,4}-{1,2}-1-{1-48}
	STS-{5,6,12,13}-1-1
	STS-{5,6,12,13}-1-{1,13,25,37-180}
	STS-{5,6,12,13}-1-{1,13,25,37}
	STS-{5,6,12,13}-1-{1,4,7,10,13,16,19,22,25}
	STS-{5,6,12,13}-1-{1,4,7,10-190}
	STS-{5,6,12,13}-1-{1,4,7,10-46}
	STS-{5,6,12,13}-1-{1,4,7,13,16,19,25,28,37,40,43}
	STS-{5,6,12,13}-1-{1,49,97,145}
	STS-{5,6,12,13}-1-{1-192}
	STS-{5,6,12,13}-1-{1-48}

Table 26-11 CrossConnect Id (continued)

Pattern	Description
STS (continued)	STS-{5,6}-1
	STS-{5,6}-{1-4}-1
	STS-{5-6}-ALL
	VFAC-{1-6,12-17}-{0-1}

## 26.12 CrossConnectId1

Table 26-12 CrossConnectId1

AID	Pattern
EQPT	ALL PPM[-{1-30}]-{1-4,11-14}-{1-4}-{1-4}
	AIP-ALL PPM[-{1-30}]-{1-6,12-17}-{1-4}
	AIP[-{1-30}] PPM[-{1-30}]-{1-6,12-17}-{1-8}
	BIC-ALL PWR-ALL
	BIC[-{1-30}]-ALL PWR[-{1-30}]-ALL
	BIC[-{1-30}]-{A,B} PWR[-{1-30}]-{A,B}
	BP-ALL SLOT-ALL
	BP[-{1-30}] SLOT[-{1-30}]-ALL
	FAN-ALL SLOT[-{1-30}]-{1-14}
	FAN[-{1-30}] SLOT[-{1-30}]-{1-17}
	PIM[-{1-30}]-{1-4,11-14}-ALL SLOT[-{1-30}]-{1-2}
	PIM[-{1-30}]-{1-4,11-14}-{1-4} SLOT[-{1-30}]-{1-4,11-14}
	PPM[-{1-30}]-1-{1,2} SLOT[-{1-30}]-{1-6,12-17}
	PPM[-{1-30}]-2-{1,2} SLOT[-{1-30}]-{1-8}
	PPM[-{1-30}]-{1-4,11-14}-{1-4}-ALL
	VCM
VCM-{1,2,5,6}-{1-8}-{1-256}	
VCM-{1-6,12-17}-{0-1}-ALL	
VCM-{1-6,12-17}-{0-1}-{1-256}	
VCM-{1-6,12-17}-{1-4}-ALL	
VCM-{1-6,12-17}-{1-4}-{1-256}	

Table 26-12 CrossConnectId1 (continued)

AID	Pattern
FACILITY	ALL
	EC1-{1,2,5,6}-{1-3}
	EC1-{2}-{1-3}
	FAC-{1-4,11-14}-ALL
	FAC-{1-4,11-14}-{1-16}
	FAC-{1-4,11-14}-{1-4}
	FAC-{1-4,11-14}-{1-4}-{1-4}-{1}
	FAC-{1-4,14-17}-{1-8}
	FAC-{1-4}-1
	FAC-{1-4}-{1-4}
	FAC-{1-6,12-17}-1
	FAC-{1-6,12-17}-ALL
	FAC-{1-6,12-17}-{0-11}
	FAC-{1-6,12-17}-{0-1}
	FAC-{1-6,12-17}-{1-12,14,16,18,20,22,24,26,28,30,32,34,36}
	FAC-{1-6,12-17}-{1-12,14,16,18,20,22,24}
	FAC-{1-6,12-17}-{1-12}
	FAC-{1-6,12-17}-{1-4}
	FAC-{1-6,12-17}-{1-6}
	FAC-{1-6,12-17}-{1}
	FAC-{1-6}-ALL
	FAC-{5,6,12,13}-{1}
	FAC-{5-6}-{1-28}
	FAC-{5-6}-{1-3}
	FAC-{8,10}-{1}
	FSSTE-{1,2,5,6}-{0-7}
	FSSTE-{1,2,5,6}-{1-8}
	FSSTE-{1}-{0-7}
	FSSTE-{1}-{1-8}
	OC12-{2}-{1-2}-{1}
	OC12-{3,4}-{1-2}-{1}
	OC3-{2}-{1-2}-{1}
	OC3-{3,4}-{1-2}-{1}
	T1-{1,2,5,6}-{1-28}
	T1-{1,2,5,6}-{1-84}
	T1-{2}-{1-21}
	T3-{1,2,5,6}-{1-3}
	T3-{2}-{1-3}
	VFAC-{1,2,5,6}-{0-1}
	VFAC-{1,2,5,6}-{1-8}
	VFAC-{1-4,11-14}-{1-4}-{1-4}-1
	VFAC-{1-6,12-17}-{0-1}
	VFAC-{1-6,12-17}-{1,2}
	VFAC-{1-6,12-17}-{1,2}-{1,8}
	VFAC-{1}-{0-1}
	VFAC-{1}-{1-8}

Table 26-12 CrossConnectId1 (continued)

AID	Pattern
STS	FAC-{1-4,11-14}-{1-4}-{1-4}-{1} FAC-{1-6,12-17}-{1-4} STS-{1,2,5,6}-1 STS-{1,2,5,6}-{1-3} STS-{1,2,5,6}-{1-3}-1 STS-{1-4,11-14}-{1-16}-1 STS-{1-4,11-14}-{1-16}-ALL STS-{1-4,11-14}-{1-16}-{1,13,25,37} STS-{1-4,11-14}-{1-16}-{1,25} STS-{1-4,11-14}-{1-16}-{1,4,7,10,-,46} STS-{1-4,11-14}-{1-4}-1 STS-{1-4,11-14}-{1-4}-ALL STS-{1-4,11-14}-{1-4}-{1,13,25,37,-,181} STS-{1-4,11-14}-{1-4}-{1,25,49,73,-,169} STS-{1-4,11-14}-{1-4}-{1,4,7,10,-,190} STS-{1-4,11-14}-{1-4}-{1,49,97,145} STS-{1-4,11-14}-{1-4}-{1,4}-{1} STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,13,25,37}

Table 26-12 CrossConnectId1 (continued)

AID	Pattern
STS (continued)	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,25}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,4,13,16,25,28,37,40}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,4,7,10,13,16,19,22,25,28,31,34,37,40,43,46}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,4,7}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,4}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1-12}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1-3}
	STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1-48}
	STS-{1-4,11-14}-{1-4}-{1-192}
	STS-{1-4,11-14}-{1-4}-{1-4}-{1}-ALL
	STS-{1-4,11-14}-{1-4}-{1-4}-{1}-{1,4,7,13,16,19,25,28,31,43}
	STS-{1-4,14-17}-{1-16}-{1-48}
	STS-{1-4,14-17}-{1-4}-1
	STS-{1-4,14-17}-{1-4}-ALL
	STS-{1-4,14-17}-{1-4}-{1,4,7,10}
	STS-{1-4,14-17}-{1-4}-{1,4,7}
	STS-{1-4,14-17}-{1-4}-{1-3}
	STS-{1-4,14-17}-{1-8}-1
	STS-{1-4,14-17}-{1-8}-ALL
	STS-{1-4,14-17}-{1-8}-{1-3}
	STS-{1-4}-1-1
	STS-{1-4}-1-ALL
	STS-{1-4}-1-{1,13,25,37}
	STS-{1-4}-1-{1,4,7,10,-,46}
	STS-{1-4}-1-{1,4,7,10}
	STS-{1-4}-1-{1,7,13,19,-,43}
	STS-{1-4}-1-{1,7}
	STS-{1-4}-1-{1-12}
	STS-{1-4}-1-{1-48}
	STS-{1-6,12-17}-1
	STS-{1-6,12-17}-1-1
	STS-{1-6,12-17}-1-ALL
	STS-{1-6,12-17}-1-{1,13,25,37}
	STS-{1-6,12-17}-1-{1,4,10,13,16,19,25,28,37,40}
	STS-{1-6,12-17}-1-{1,4,7,10,13,16,19,22,25}

Table 26-12 CrossConnectId1 (continued)

AID	Pattern
STS (continued)	STS-{1-6,12-17}-1-{1,4,7,10-46}
	STS-{1-6,12-17}-1-{1,4,7,10}
	STS-{1-6,12-17}-1-{1,4,7,13,16,19,25,28,37,40,43}
	STS-{1-6,12-17}-1-{1,4,7}
	STS-{1-6,12-17}-1-{1,4}
	STS-{1-6,12-17}-1-{1-12}
	STS-{1-6,12-17}-1-{1-48}
	STS-{1-6,12-17}-ALL
	STS-{1-6,12-17}-{1-12}-1
	STS-{1-6,12-17}-{1-24}-1
	STS-{1-6,12-17}-{1-36}-1
	STS-{1-6,12-17}-{1-4}-1
	STS-{1-6,12-17}-{1-4}-ALL
	STS-{1-6,12-17}-{1-4}-{1,4,7,10-46}
	STS-{1-6,12-17}-{1-4}-{1,4,7}
	STS-{1-6,12-17}-{1-4}-{1,4}
	STS-{1-6,12-17}-{1-4}-{1-12}
	STS-{1-6,12-17}-{1-6}
	STS-{2}-{1-2}-{1}-{1,4,7,10}
	STS-{2}-{1-2}-{1}-{1,7}
	STS-{2}-{1-2}-{1}-{1-12}
	STS-{2}-{1-2}-{1}-{1-3}
	STS-{2}-{1-2}-{1}-{1}
	STS-{2}-{1-3}-{1}
	STS-{2}-{1}
	STS-{3,4}-{1,2}-1-{1-12}
	STS-{3,4}-{1,2}-1-{1-3}
	STS-{3,4}-{1,2}-1-{1-48}
	STS-{5,6,12,13}-1-1
	STS-{5,6,12,13}-1-{1,13,25,37-180}
	STS-{5,6,12,13}-1-{1,13,25,37}
	STS-{5,6,12,13}-1-{1,4,7,10,13,16,19,22,25}
	STS-{5,6,12,13}-1-{1,4,7,10-190}
	STS-{5,6,12,13}-1-{1,4,7,10-46}
	STS-{5,6,12,13}-1-{1,4,7,13,16,19,25,28,37,40,43}

Table 26-12 CrossConnectId1 (continued)

AID	Pattern
STS	STS-{5,6,12,13}-1-{1,49,97,145}
(continued)	STS-{5,6,12,13}-1-{1-192}
	STS-{5,6,12,13}-1-{1-48}
	STS-{5,6}-1
	STS-{5,6}-{1-4}-1
	STS-{5-6}-ALL
	STS[-{1-30}]-{1-5,12-16}-{1-17,19}
	}{1}-{1-48}
	VFAC-{1-6,12-17}-{0-1}

Table 26-12 CrossConnectId1 (continued)

AID	Pattern
VT	ALL
	VT1- $\{1,2,5,6\}$ -1- $\{1-7\}$ - $\{1-4\}$
	VT1- $\{1,2,5,6\}$ - $\{1-3\}$ -1- $\{1-7\}$ - $\{1-4\}$
	VT1- $\{1,2,5,6\}$ - $\{1-3\}$ - $\{1-7\}$ - $\{1-4\}$
	VT1- $\{1-4,14-17\}$ - $\{1-8\}$ - $\{1-3\}$ - $\{1-7\}$ - $\{1-4\}$
	VT1- $\{1-4\}$ -1- $\{1-12\}$ - $\{1-7\}$ - $\{1-4\}$
	VT1- $\{1-4\}$ -1- $\{1-48\}$ - $\{1-7\}$ - $\{1-4\}$
	VT1- $\{1-4\}$ - $\{1-4\}$ - $\{1-3\}$ - $\{1-7\}$ - $\{1-4\}$
	VT1- $\{1-6,12-17\}$ -1- $\{1-12\}$ - $\{1-7\}$ - $\{1-4\}$
	VT1- $\{1-6,12-17\}$ -1- $\{1-48\}$ - $\{1-7\}$ - $\{1-4\}$
	VT1- $\{1-6,12-17\}$ -1- $\{1-7\}$ - $\{1-2\}$
	VT1- $\{1-6,12-17\}$ - $\{1-12\}$ -1- $\{1-7\}$ - $\{1-4\}$
	VT1- $\{1-6,12-17\}$ - $\{1-24\}$ -1- $\{1-7\}$ - $\{1-4\}$
	VT1- $\{1-6,12-17\}$ - $\{1-36\}$ -1- $\{1-7\}$ - $\{1-4\}$
	VT1- $\{1-6,12-17\}$ - $\{1-4\}$ - $\{1-12\}$ - $\{1-7\}$ - $\{1-4\}$
	VT1- $\{1-6,12-17\}$ - $\{1-4\}$ - $\{1-3\}$ - $\{1-7\}$ - $\{1-4\}$
	VT1- $\{1-6,12-17\}$ - $\{1-6\}$ - $\{1-7\}$ - $\{1-4\}$
	VT1- $\{2\}$ - $\{1-2\}$ - $\{1\}$ - $\{1-12\}$ - $\{1-7\}$ - $\{1-4\}$
	VT1- $\{2\}$ - $\{1-2\}$ - $\{1\}$ - $\{1-3\}$ - $\{1-7\}$ - $\{1-4\}$
	VT1- $\{2\}$ - $\{1-3\}$ - $\{1\}$ - $\{1-7\}$ - $\{1-4\}$
	VT1- $\{2\}$ - $\{1\}$ - $\{1-7\}$ - $\{1-3\}$

Table 26-12 CrossConnectId1 (continued)

AID	Pattern
VT (continued)	VT1-{3,4}-{1-2}-{1}-{1-12}-{1-7} - {1-4}
	VT1-{3,4}-{1-2}-{1}-{1-3}-{1-7}- {1-4}
	VT1-{3,4}-{1-2}-{1}-{1-48}-{1-7} - {1-4}
	VT1-{5,6,12,13}-1-{1-192}-{1-7}- {1-4}
	VT1-{5,6,12,13}-1-{1-48}-{1-7}-{ 1-4}

## 26.13 DS1

(Cisco ONS 15454 only) Used to access the DS-1 frame layer of the DS3XM. The format is DS1-[SLOT]-[DS3PORT]-[DS1PORT].

Table 26-13 DS1

Pattern	Description
ALL	The ALL AID applies to RTRV-DS1 and RTRV-ALM/COND-DS1 commands only to retrieve all DS1 facilities and DS1-level alarms/conditions on the NE.
DS1-{1-6,12-17}-{1-12,13,15,17,19,21,23,25,27,29,31,33,35}-{1-28}	<p>DS1 AIDs for the DS3XM-12 card STS48 backplane rate. The format is DS1-[SLOT]-[DS3PORT]-[DS1PORT]. Ports 1–12 are always available and odd ports after 12 are available.</p> <p><b>Note</b> The DS3XM-12 even DS3Ports (after 12) are valid DS3XM-12 DS1 AIDs, which are applied on DS3XM-12 TCA autonomous events (REPT EVT DS1) only.</p> <p><b>Note</b> The DS3XM-12 even DS3Ports (after 12) are not valid DS3XM-12 DS1 AIDs for all DS3XM-12 DS1 provisioning/retrieval non-TCA event commands.</p>
DS1-{1-6,12-17}-{1-12,13,15,17,19,21,23}-{1-28}	<p>DS1 AIDs for DS3XM-12 card STS48 backplane rate. The format is DS1-[SLOT]-[DS3PORT]-[DS1PORT]. Ports 1–12 are always available and odd ports after 12 are available</p> <p><b>Note</b> The DS3XM-12 even DS3Ports (after 12) are valid DS3XM-12 DS1 AIDs, which are applied on DS3XM-12 TCA autonomous events (REPT EVT DS1) only.</p> <p><b>Note</b> The DS3XM-12 even DS3Ports (after 12) are not valid DS3XM-12 DS1 AIDs for all DS3XM-12 DS1 provisioning/retrieval non-TCA event commands.</p>
DS1-{1-6,12-17}-{1-6}-{1-28}	DS1 AIDs for DS3XM-6 cards. Format is DS1-[SLOT]-[DS3PORT]-[DS1PORT].

## 26.14 ENV

The environmental AID for the AIC-I cards. “IN” is used for environmental alarms. “OUT” is used for environmental controls.

**Table 26-14** ENV

Pattern	Description
ALL	The ALL AID applies to retrieve-only commands: RTRV-ALM/COND-ENV, RTRV-ATTR-CONT, and RTRV-ATTR-ENV.
ENV-IN-ALL	Environmental AID for ALL environmental alarms on the Cisco ONS 15454.
ENV-IN[-{1-30}]-ALL	Environmental AID for ALL multishelf environmental alarms.
ENV-IN[-{1-30}]-{1-4}	(ONS 15454 only) Environmental alarm AID for the AIC-I card on the ONS 15454.
ENV-IN[-{1-30}]-{1-16}	(ONS 15454 only) Environmental alarm AID on the ONS 15454.
ENV-IN[-{1-30}]-{1-20}	(ONS 15454 only) Environmental alarm AID for the AIC-I card on the ONS 15454.
ENV-IN[-{1-30}]-{1-32}	(ONS 15454) Environmental alarm AID for AIC-I card extensions on the ONS 15454.
ENV-{IN,OUT}[-{1-30}]-{1-16}	ENV-IN-{1-16} is used for environmental alarm AIDs. ENV-OUT-{1-16} is used for external control AIDs.
ENV-OUT-ALL	All environmental control output contacts.
ENV-OUT[-{1-30}]-ALL	Environmental AID for AIC-I cards. “OUT” is used for environmental controls
ENV-OUT[-{1-30}]-{1-4}	(ONS 15454 only) Environmental control AID for the AIC-I cards on the ONS 15454.
ENV-OUT[-{1-30}]-{1-16}	(ONS 15454 only) Environmental control AID for AIC-I card extensions on the ONS 15454.

## 26.15 EQPT

Equipment AIDs are used to access specific cards.

In the ONS 15454, the OC-48/OC-192 cards are only used in Slots 5, 6, 12, and 13.

**Table 26-15** EQPT

Pattern	Description
AIP[-{1-30}]	(ONS 15454 only) The AID for the alarm interface panel (AIP). It is used for RTRV-INV output only.
AIP-ALL	(ONS 15454 only) The AID for all of the AIPs in any shelf of the node. It is used for RTRV-INV output only.
ALL	Only used for RTRV-INV, RTRV-EQPT, and RTRV-ALM/COND-EQPT commands. RTRV-INV returns all the inventory information for the NE. The ONS 15454 includes the multiservice cards, common control cards, and the AIP, BP, and FAN.
BIC-ALL	AIDs for the backplane interface connectors (BICs), BIC-A and BIC-B. These AIDs are valid only for the RTRV-ALM-EQPT and RTRV-COND-EQPT commands.
BIC[-{1-30}]-ALL	AIDs for the backplane interface connectors (BICs), BIC-A and BIC-B of a single shelf in a multishelf node. These AIDs are valid only for the RTRV-ALM-EQPT and RTRV-COND-EQPT commands.
BIC[-{1-30}]-{A,B}	AIDs for the BICs. These AIDs are valid only for the RTRV-ALM-EQPT and RTRV-COND-EQPT commands.
BP[-{1-30}]	(ONS 15454) The AID for the backplane. It is used for RTRV-INV output only.
BP-ALL	(ONS 15454) The AID for all of the backplanes in any shelf on the multishelf node. It is used for RTRV-INV output only.
FAN[-{1-30}]	The AID for the fan tray. It is used for RTRV-INV, RTRV-ALM, RTRV-COND, RTRV-ALM-EQPT, and RTRV-COND-EQPT output only.
FAN-ALL	The AID for all of the fan tray in all the shelves of a multishelf node. It is used for RTRV-INV, RTRV-ALM, RTRV-COND, RTRV-ALM-EQPT, and RTRV-COND-EQPT output only.
PPM-{1-6,12-17}-{1-4}	Pluggable Port Module for MRC-2.5G-4. Format is PPM-[SLOT]-[PPM]. It is not applied on CHG-EQPT, and RMV/RST/ED-EQPT commands.
PPM-{1-6,12-17}-{1-12}	Pluggable Port Module for MRC-2.5G-12. Format is PPM-[SLOT]-[PPM]. It is not applied on CHG-EQPT, and RMV/RST/ED-EQPT commands.
PPM[-{1-30}]-{1-4,11-14}-{1-4}-ALL	PPM AID. Applicable for the RTRV-EQPT and RTRV-INV commands pertaining to the ASAP card. Format is PPM-[SLOT]-[PIM]-[PPM].
PPM[-{1-30}]-{1-4,11-14}-{1-4}-{1-4}	PPM AID. Applicable for the ENT/ED/RTRV/DLT-EQPT and RTRV-INV commands pertaining to the ASAP card. Format is PPM-[SLOT]-[PIM]-[PPM].
PPM-{1-6,12-17}-1	PPM for the OC192-XFP card. Format is PPM-[SLOT]-[PPM].
PPM-{1-6,12-17}-{1-12}	PPM for the MRC-12 card. Format is PPM-[SLOT]-[PPM].
PPM[-{1-30}]-{1-6,12-17}-{1-4}	PPM AID for dense wavelength division multiplexing (DWDM) MXP_2.5G_10G, TXP_MR_10G, TXP_MR_2.5G, TXPP_MR_2.5G, MXP_2.5G_10E, and TXP_MR_10E cards. Format of AID is PPM-[SLOT]-[PPM].
PPM[-{1-30}]-{1-6,12-17}-{1-8}	(ONS 15454 only) PPM AID for the MXP_MR_2.5G and MXPP_MR_2.5G cards. Format of AID is PPM-[SLOT]-[PPM].

Table 26-15 EQPT (continued)

Pattern	Description
PPM[-{1-30}] - {1-6,12-17}- {1-22}	PPM AID for XP-GE Cards. Format of AID is PPM-[SHELF]-[SLOT]-[PPM]
PWR-ALL	AIDs for the power supply sources. These AIDs are valid only for the RTRV-ALM-EQPT and RTRV-COND-EQPT commands.
PWR[-{1-30}] ]-{A,B}	AIDs for the power supply sources. These AIDs are valid only for the RTRV-ALM-EQPT and RTRV-COND-EQPT commands.
PWR[-{1-30}] ]-ALL	AIDs for all of the power supply sources. These AIDs are valid only for the RTRV-ALM-EQPT and RTRV-COND-EQPT commands.
SLOT-ALL	All of the NE equipment AIDs.
SLOT[-{1-30}] ]-{1-17}	(ONS 15454 only) EQPT AID where the format is SLOT-[SLOT].
SLOT[-{1-30}] ]-{1-6,12-17}	(ONS 15454 only) Individual equipment AID of the multiservice card units or slots where the format is SLOT-[SLOT].
SPPM[-{36-55}] ]-{1-44}	PPM for the CPT 50 panel GIGE ports card. The format is SPPM-[PTSA]-[PPM].
SFOPPM[-{36-55}] ]-{45-48}	PPM for the CPT 50 panel 10GIGE ports card. The format is SFOPPM-[PTSA]-[PPM].
PTSYS[-{1}] ]-ALL	PT System AID for the CPT system. The format is PTSYS-{PTSYSID}.
FOG[-{1}] ]-{36-55}-ALL	Fan-Out-Group AID for connecting the CPT 50 panel to fabric and line cards. The format is FOG-{PTSYSID}-{FOGID}.

## 26.16 ETH

Ethernet (ETH) AIDs are used to access the ethernet port. [Table 26-9](#) lists the ETH AIDs and their descriptions.

**Table 26-16** ETH

Pattern	Description
ETH-{1,2,5,6}-{1-6}	Format is ETH-slot-port. Port numbering is 1-based.
ETH[-{1-30}]{1-6,12-17}{1-22}{1}	Ethernet AID for ethernet port on GE_XP and 10GE_XP cards. The format is ETH-[SHELF]-[SLOT]-[PPM]-[PORT].
ETH[-{1-30}]{1-6,12-17}{1-22}{1}{1-4096}	Ethernet CEPID AID for ethernet port CEP on GE_XP and 10GE_XP cards. The format is ETH-[SHELF]-[SLOT]-[PPM]-[PORT]-[CEPID], where [CEPID] is the connection end point identifier, that identifies a single 1 Gbit/sec circuit inside an ethernet port.

## 26.17 FACILITY

(Cisco ONS 15454) Facility AIDs are used to access specific ports.

ONS 15454 Facility AID format:

- Format for optical and EC1 facilities without PPM: FAC-[SLOT]-[PORT]
- Format for optical facilities with PPM: FAC-[SLOT]-[PPM]-[PORT]
- Format for optical facilities with PPM and PIM: FAC-[SLOT]-[PIM]-[PPM]-[PORT]
- Format for DS1-flavored electrical facilities: FAC-[SLOT]-[PORT]
- Format for DS3-flavored (including DS3i) electrical facilities: FAC-[SLOT]-[PORT]
- Format for packet-over-SONET (POS) ports: VFAC-[SLOT]-[PORT]
- Format for POS ports with PIMs and PPMs: VFAC-[SLOT]-[PIM]-[PPM]-[PORT]

**Table 26-17** FACILITY

Pattern	Description
ALL	The ALL AID is applicable for RTRV-only commands (RTRV-rr type of commands), for example, RTRV-OC48 with the ALL AID returns all OC48 facilities on the node. RTRV-T1 with the ALL AID returns all T1 facilities on the node.
ETH[-{1-30}]{1-5,12-16}{1-22}-1	Facility AID for GE-XP card. Format is FAC-[SHELF]-[SLOT]-[PPM]-[PORT]
ETH[-{1-30}]{1-6,12-17}{1-4}-1	Facility AID for 10GE-XP card. Format is FAC-[SHELF]-[SLOT]-[PPM]-[PORT]
FAC-{1-6,12-17}{1-10}	(ONS 15454) Facility AID for CE-MR-10 (454) cards that can plug into Slots 1-6 and 12-17 and there are 10 Facility ports, where format is FAC-[SLOT]-[PORT]

Table 26-17 FACILITY (continued)

Pattern	Description
FAC[-{1-30}]{1-4,11-14} }{1-4} {1-4}{1}	Facility AID for the ASAP card with PIM and PPM. The format is FAC-[SLOT]-[PIM]-[PPM]-[PORT].
FAC[-{1-30}]{1-4,14-17} }{1-8}	(ONS 15454 only) Facility AID for an OC3-8 card, where the format is FAC-[SLOT]-[PORT].
FAC[-{1-30}]{1-5,12-16} }{1-20}-1	Facility AID for GE-XP card, where format is: FAC-[SHELF]-[SLOT]-[PPM]-[PORT]
FAC[-{1-30}]{1-6,12-17} }{1-2}-1	Facility AID for 10GE-XP card, where format is: FAC-[SHELF]-[SLOT]-[PPM]-[PORT]
FAC[-{1-30}]{1-6,12-17} }-1	(ONS 15454 only) Facility AID for the 1 Client (CLNT) port on a TXP_MR_10G, TXP_MR_2.5G, TXP_MR_2.5G, or TXPP_MR_2.5G card, where the format is FAC-[SLOT]-[PORT].
FAC[-{1-30}]{1-6,12-17} }-ALL	(ONS 15454 only) All the facilities of an multiservice unit or slot, where the format is FAC-[SLOT]-[ALL].
FAC[-{1-30}]{1-6,12-17} }{0-11}	(ONS 15454 only) Facility AID for the Ethernet front-end ports on the ML-100T-12 card. Ports are numbered starting with 0. The first port is FAC-SLOT-0, the second port is FAC-SLOT-1, and so on. The last port is FAC-SLOT-11. The format is FAC-[SLOT]-[PORT].
FAC[-{1-30}]{1-6,12-17} }{0-1}	(ONS 15454 only) Facility AID for the Ethernet back-end ports on the ML1000-2 card. Ports are numbered starting with 0. The first port is FAC-SLOT-0 and the second port is FAC-SLOT-1). The format is FAC-[SLOT]-[PORT].
FAC-{1-6,12-17}{1-8}	Facility AID for the Ethernet front-end ports on the CE-100T-8 card The format is FAC-[SLOT]-[PORT].
FAC-{1-6,12-17}{0-11}	Facility AID for the Ethernet front-end ports on the MS-ISC-100T The first port is FAC-SLOT-0, the second port is FAC-SLOT-1, and so on. The last port is FAC-SLOT-11. The format is FAC-[SLOT]-[PORT].
FAC[-{1-30}]{1-6,12-17} }{1-12, 14,16,18,20,22,24,26,28, 30,32,34, 36}	Facility AID for the DS3XM-12 STS48 backplane rate, where the format is FAC-[SLOT]-[PORT]. Ports 1 through 12 are always available, but only even ports greater than 12 are available.
FAC[-{1-30}]{1-6,12-17} }{1-12, 14,16,18,20,22,24}	Facility AID for DS3XM-12 STS12 backplane, rate where the format is FAC-[SLOT]-[PORT]. Ports 1 through 12 are always available, but only even ports greater than 12 are available.
FAC[-{1-30}]{1-6,12-17} }{1-12}	(ONS 15454 only) Facilities AID for the EC1 and DS3 cards, where the format is FAC-[SLOT]-[PORT].
FAC[-{1-30}]{1-6,12-17} }{1-4}	(ONS 15454 only) Facility AID for the four Client (CLNT) facilities on the MXP_2.5G_10G card. Facility AID for 4-port G1000/FC_MR-4 card. Facility AID for creating/editing cross-connects (STS1/VC3, STS3C/VC4, STS6C/VC4-2C, STS9C/VC4-3C, STS12C/VC4-4C, and STS24C/VC4-8C) for the 4-port G1000/FC_MR-4 card, where the format is FAC-[SLOT]-[PORT].

Table 26-17 FACILITY (continued)

Pattern	Description
FAC[-{1-30}]-{1-6,12-17}-{1-6}	(ONS 15454 only) Facility AID for the DS3XM card, where the format is FAC-[SLOT]-[PORT].
FAC[-{1-30}]-{1-6,12-17}-{1}	(ONS 15454 only) Facility AID for a single-port OC12, OC48AS and OC3 in OSC-CSM cards. Facility AID for the client ports on the muxponder (MXP) and transponder (TXP) cards, where the format is FAC-[SLOT]-[PORT].
FAC[-{1-30}]-{5,6,12,13}-{1}	(ONS 15454 only) Facility AID for the OC48/OC192 cards. The OC48/OC192 cards can only use Slots 5, 6, 12, and 13), where the format is FAC-[SLOT]-[PORT].
FAC[-{1-30}]-{8,10}-{1}	(ONS 15454 only) Facility AID for the OSCM card. The OSCM cards can use only the XC slots (Slot 8, Slot 10), where the format is FAC-[SLOT]-[PORT].
FAC[-{1-30}]-{1-6,12-17}-1-1	Facility AID for the TXP_MR_2.5G, TXPP_MR_2.5G, TXP_MR_10E, TXP_MR_10EX and TXPP_MR_10EX cards in the format of:FAC-[shelf]-[slot]-[ppm]-[port].
VFAC-{1-6,12-17}-{1-10}	(ONS 15454) Virtual Facility AID for CE-MR-10 cards that can plug into Slots 1-6 and 12-17 and there are 10 Virtual Facility ports. Format is VFAC-[SLOT]-[PORT]
VFAC-{1}-{1-6}	Virtual Facility AID for CE-MR-6 (310CL) cards that can plug into Slot 1 and there are 6 Virtual Facility ports. Format is VFAC-[SLOT]-[PORT]
VFAC[-{1-30}]-{1-5,12-16}-{21-22}-1	Facility AID for the trunk "higher layer" of GE-XP card in the format of:VFAC-[SHELF]-[SLOT]-[PPM]-[PORT]
VFAC[-{1-30}]-{1-6,12-17}-{3-4}-1	Facility AID for the trunk "higher layer" of 10GE-XP card in the format of:VFAC-[SHELF]-[SLOT]-[PPM]-[PORT]
VFAC[-{1-30}]-{1-6,12-17}-{0-1}	(ONS 15454 only) Facility AID for the back-end POS ports on the ML-Series cards. Port numbering is 0-based (first POS port is VFAC-SLOT-0, second POS port is VFAC-SLOT-1). VC4, VC4-2C, VC4-3C, VC4-4C, and VC4-8C for the ML1000 and ML100T cards. Format is VFAC-[SLOT]-[PORT].
VFAC[-{1-30}]-{1-6,12-17}-{1,2}	Generic framing procedure (GFP) facility AIDs on the MXP-MR-2.5G and MXPP-MR-2.5G cards.
VFAC[-{1-30}]-{1-6,12-17}-{1,2}-{1,8}	GFP client facility AIDs for MXP-MR-2.5G and MXPP-MR-2.5G cards.
FAC[-{1-30}]-{1-4,14-17}-{1-4}	Facility AID for four Ether Ports on the CE1000 card.
VFAC[-{1-30}]-{1-4,14-17}-{1-4}	Facility AID for the back-end ports on the CE1000 card.
SFAC[-{36-55}]-{1-44}-1	GIGE facilities on the CPT 50 panel. The format is SFAC-[PTSAID]-[PPM]-[PORT].
SFOFAC[-{36-55}]-{45-48}-1	10GIGE facilities on the CPT 50 panel. The format is SFOFAC-[PTSAID]-[PPM]-[PORT].

## 26.18 IPADDR

IP Address

**Table 26-18** IPADDR

Pattern	Description
111.222.333.444	Standard 4-part IP address notation
ALL	ALL

## 26.19 LINE

(Cisco ONS 15454 only) The LINE AID is used to access the Optical Transport Section (OTS) layer of optical network units. Applicable only to AD-1B-xx.x, AD-4B-xx.x, AD-1C-xx.x, AD-2C-xx.x, AB-4C-xx.x, OSC-CSM, OSCM, OPT-BST, OPT-PRE, 4MD-xx.x, 32MUX-O, 32DMX-O, 40-SMR1-C, 40-SMR2-C, and 80-WXC-C cards.

The format is LINE-[SLOT]-[PORT]-[DIRECTION].

**Table 26-19** LINE

Values	Description
ALL	All of the OTSs of the NE. The ALL AID applies for retrieve-only commands.
LINE-{1-6,12-17}-{1-2}-ALL	All the lines in an OPT-PRE, OCS-CSM, AD-1B, AD-4B, AD-1C, AD-2C, or AD-4C unit.
LINE-{1-6,12-17}-{1-2}-{RX,TX}	The receive/transmit lines in an OPT-PRE, OCS-CSM, AD-1B, AD-4B, AD-1C, AD-2C, or AD-4C unit.
LINE-{1-6,12-17}-{1-3}-{RX,TX}	The receive/transmit lines in an OPT-BST unit.
LINE-{8,10}-{1}-ALL	All the lines in OSCM units.
LINE-{8,10}-{1}-{RX,TX}	The receive/transmit lines in OSCM units.
LINE-[[1-30]-]{1-6,12-17}-{1}-{RX,TX}	For Booster units, there is an input OTS for LINE(1) and an output OTS (Amplified) for amplification stage COM(2), 2 OTS for input line COM(2) and output LINE(1) and 2 OTS for OSC(3) Add & Drop service channel.
LINE-[[1-30]-]{1-6,12-17}-{2}-{RX,TX}	
LINE-[[1-30]-]{1-6,12-17}-{3}-{RX,TX}	
LINE-[[1-30]-]{1-6,12-17}-{1-3}-ALL	

Table 26-19 LINE (continued)

Values	Description	
LINE-[[1-30]-][1-6,12-17]-{1}- {RX,TX}	Pre-Amplifier unit with 2 stages of amplification; input OTS for LINE(1) and an output OTS (Amplified) for amplification stage COM(2), 2 OTS for input line COM(2) and output LINE(1) and 2 OTS for OSC(3) Add & Drop service channel and output and an input OTS for the DCU(2).	
LINE-[[1-30]-][1-6,12-17]-{2}- {RX,TX}		
LINE-[[1-30]-][1-6,12-17]-{3}- {RX,TX}		
LINE-[[1-30]-][1-6,12-17]-{4}- {RX,TX}		
LINE-[[1-30]-][1-6,12-17]-{1-4}-ALL		
LINE-[[1-30]-][1-6,12-17]-1-RX For input OTS		For demux units there is an OTS for input line, and up to 32 OCH for drop channel connectors. Demux is a unidirectional unit.
LINE-[[1-30]-][1-6,12-17]-1-ALL		
CHAN-[[1-30]-][1-6,12-17]-{1-32}-TXFor Drop OCH		
CHAN-[[1-30]-][1-6,12-17]-{1-32}- ALL		
LINE-[[1-30]-][1-5,12-16]-{1}- {RX,TX} (EXP)	Wavelength switch selector unit has input and output OTS for signal coming from amplifier units COM(2), input and output OTS for signal continuing to next WSS unit in the node EXP(1) and an output PT(3) drop port for the signal continuing to 32-DMX-L card. It also has 32 internal OCH pass-through channels (PT) and 32 external input channels (ADD). This unit is 2 slots sized.	
LINE-[[1-30]-][1-5,12-16]-{2}- {RX,TX} (COM)		
LINE-[[1-30]-][1-5,12-16]-{3}-{TX} (DROP)		
LINE-[[1-30]-][1-5,12-16]-{1-3}-ALL		
CHAN-[[1-30]-][1-5,12-16]-{1-32}- {RX} (ADD)		
CHAN-[[1-30]-][1-5,12-16]-{1-32}- {PT} (PT)		
CHAN-[[1-30]-][1-5,12-16]-{1-32}- ALL		

Table 26-19 *LINE (continued)*

Values	Description
LINE-{{1-30}}-{{1-6,12-17}}-{{1}}-{{RX,TX}} (EXP)	Multiring/mesh unit has 6 OTS connectors: 2 are the input and output OTS for signal coming from amplifier units COM(1), the other are for the split 50/50 signal continuing to AD, MUX/DEMUX, WSS unit. Because the incoming signal is split into 2 separate signals, there are two sets of input and output EXP port (2 and 3).
LINE-{{1-30}}-{{1-6,12-17}}-{{2}}-{{RX,TX}} (COM)	
LINE-{{1-30}}-{{1-6,12-17}}-{{3}}-{{RX,TX}} (EXP to other ring)	
LINE-{{1-30}}-{{1-6,12-17}}-{{1-3}}-ALL	
LINE-{{1-30}}-{{1-6,12-17}}-{{4}}-ALL	All the receive and transmit COM lines in a 40-SMR2-C card.
LINE-{{1-30}}-{{1-6,12-17}}-{{4}}-{{RX,TX}}	The receive/transmit COM lines in a 40-SMR2-C card.
LINE-{{1-30}}-{{1-6,12-17}}-{{2}}-ALL	All the receive and transmit OSC lines in a 40-SMR2-C card.
LINE-{{1-30}}-{{1-6,12-17}}-{{2}}-{{RX,TX}}	The receive/transmit OSC lines in a 40-SMR2-C card.
LINE-{{1-30}}-{{1-6,12-17}}-{{1}}-ALL	All the receive and transmit DC lines in a 40-SMR2-C card.
LINE-{{1-30}}-{{1-6,12-17}}-{{1}}-{{RX,TX}}	The receive/transmit DC lines in a 40-SMR2-C card.
LINE-{{1-30}}-{{1-6,12-17}}-{{3}}-ALL	All the ADD-RX and DROP-TX lines in a 40-SMR2-C card.
LINE-{{1-30}}-{{1-6,12-17}}-{{3}}-{{RX,TX}}	The ADD-RX/DROP-TX lines in a 40-SMR2-C card.
LINE-{{1-30}}-{{1-6,12-17}}-{{5}}-TX	The transmit EXP-TX line in a 40-SMR2-C card.
LINE-{{1-30}}-{{1-6,12-17}}-{{6-8}}-RX	The receive EXP-RX lines in a 40-SMR2-C card.
LINE-{{1-30}}-{{1-6,12-17}}-{{5}}-ALL	All the receive and transmit COM lines in a 40-SMR1-C card.
LINE-{{1-30}}-{{1-6,12-17}}-{{5}}-{{RX,TX}}	The receive/transmit COM lines in a 40-SMR1-C card.
LINE-{{1-30}}-{{1-6,12-17}}-{{3}}-ALL	All the receive and transmit OSC lines in a 40-SMR1-C card.
LINE-{{1-30}}-{{1-6,12-17}}-{{3}}-{{RX,TX}}	The receive/transmit OSC lines in a 40-SMR1-C card.
LINE-{{1-30}}-{{1-6,12-17}}-{{2}}-ALL	All the receive and transmit DC lines in a 40-SMR1-C card.

Table 26-19 *LINE (continued)*

Values	Description
LINE[-{1-30}]-{1-6,12-17}-{2}-{RX,TX}	The receive/transmit DC lines in a 40-SMR1-C card.
LINE[-{1-30}]-{1-6,12-17}-{4}-ALL	All the ADD-RX and DROP-TX lines in a 40-SMR1-C card.
LINE[-{1-30}]-{1-6,12-17}-{4}-{RX,TX}	The ADD-RX/DROP-TX lines in a 40-SMR1-C card.
LINE[-{1-30}]-{1-6,12-17}-{1}-ALL	All the receive and transmit EXP lines in a 40-SMR1-C card.
LINE[-{1-30}]-{1-6,12-17}-{1}-{RX,TX}	The receive/transmit EXP lines in a 40-SMR1-C card.
LINE[-{1-30}]-{1-5,12-16}-ALL	All the OTSs lines in a 80-WXC-C cards.
LINE[-{1-30}]-{1-5,12-16}-{10}	The receive or transmit COM line in a 80-WXC-C card.
LINE[-{1-30}]-{1-5,12-16}-{9}	The receive or transmit AD line in a 80-WXC-C card.
LINE[-{1-30}]-{1-5,12-16}-{1-8}	The receive or transmit EAD line in a 80-WXC-C card.
LINE[-{1-30}]-{1-5,12-16}-{11}-ALL	All the DROP-TX lines in a 80-WXC-C card.
LINE[-{1-30}]-{1-5,12-16}-{11}-{TX}	The transmit DROP-TX line in a 80-WXC-C card.
LINE[-{1-30}]-{1-5,12-16}-{12}-ALL	All the EXP-TX lines in a 80-WXC-C card.
LINE[-{1-30}]-{1-5,12-16}-{12}-{TX}	The transmit EXP-TX line in a 80-WXC-C card.
LINE[-{1-30}]-{1-5,12-16}-{13}-ALL	All the COM-RX lines in a 80-WXC-C card.
LINE[-{1-30}]-{1-5,12-16}-{13}-{RX}	The receive COM-RX line in a 80-WXC-C card.

## 26.20 LINEWL

Line wavelength. Identifies a wavelength channel included in any of the lower layer OTS facilities.

Table 26-20 LINEWL

Values	Description
LINEWL[-{1-30}]-{1-6,8,10,12-17}-ALL	All the Optical Channels representing single wavelength inside OTS facility of a card configured in specified slot. The format is LINE-[SHELF]-[SLOT]-ALL
LINEWL[-{1-30}]-{1-6,12-17}-{1}-{RX,TX}-ALL	The Optical Channel representing single wavelength inside OTS facility in a 32-DMX-O, 32-DMX, 32-DMX-L, 32-MUX-O, 40-DMX-C, 40-MUX-C cards. The format is LINEWL-[SHELF]-[SLOT]-[PORT]-[DIRN]-ALL.
LINEWL[-{1-30}]-{1-6,12-17}-{1}-{RX,TX}<wlen>	The Optical Channel representing single wavelength inside OTS facility in a 32-DMX-O, 32-DMX, 32-DMX-L, 32-MUX-O, 40-DMX-C, 40-MUX-C cards. The format is LINEWL-[SHELF]-[SLOT]-[PORT]-[DIRN]-[WLEN].
LINEWL[-{1-30}]-{1-6,12-17}-{1-3}-{RX,TX}-ALL	The Optical Channel representing single wavelength inside OTS facility in a 32-WSS, 40-WSS-C cards. The format is LINEWL-[SHELF]-[SLOT]-[PORT]-[DIRN]-ALL.
LINEWL[-{1-30}]-{1-6,12-17}-{1-3}-{RX,TX}<WLEN>	The Optical Channel representing single wavelength inside OTS facility in a 32-WSS, 40-WSS-C cards. The format is LINEWL-[SHELF]-[SLOT]-[PORT]-[DIRN]-[WLEN].
LINEWL[-{1-30}]-{1-6,12-17}-{1-2}-{RX,TX}-ALL	All the Optical Channel representing single wavelength inside OTS facility in a AD-1B, AD-4B, AD-1C, AD-2C, AD-4C units. The format is LINE-[SHELF]-[SLOT]-[PORT]-[DIRN]-ALL
LINEWL[-{1-30}]-{1-6,12-17}-{1-2}-{RX,TX}<WLEN>	The Optical Channel representing single wavelength inside OTS facility in a AD-1B, AD-4B, AD-1C, AD-2C, AD-4C units. The format is LINE-[SHELF]-[SLOT]-[PORT]-[DIRN]-[WLEN]
LINEWL[-{1-30}]-{1-6,12-17}-{1-2}-{RX,TX}-ALL	All the Optical Channel representing single wavelength inside OTS (COM=1, DC=2) facility in an OPT-PRE unit. The format is LINE-[SHELF]-[SLOT]-[PORT]-[DIRN]-ALL
LINEWL[-{1-30}]-{1-6,12-17}-{1-2}-{RX,TX}<WLEN>	The Optical Channel representing single wavelength inside OTS (COM=1, DC=2) facility in a OPT-PRE units. The format is LINE-[SHELF]-[SLOT]-[PORT]-[DIRN]<WLEN>
LINEWL[-{1-30}]-{1-6,12-17}-{1,3}-{RX,TX}-ALL	The Optical Channel representing single wavelength inside OTS (COM=1, LINE=3) facility in a OPT-BST, OPT-BST-E, OPT-BST-L, OPT-AMP-L, OPT-AMP-17-C, and OPT-AMP-23-C cards. The format is LINEWL-[SHELF]-[SLOT]-[PORT]-[DIRN]-ALL.
LINEWL[-{1-30}]-{1-6,12-17}-{1,3}-{RX,TX}<WLEN>	The Optical Channel representing single wavelength inside OTS (COM=1, LINE=3) facility in a OPT-BST, OPT-BST-E, OPT-BST-L, OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-23-C, and OPT-AMP-C cards. The format is LINEWL-[SHELF]-[SLOT]-[PORT]-[DIRN]-[WLEN].
LINEWL[-{1-30}]-{1-6,12-17}-{1,3,4}-{RX,TX}-ALL	The Optical Channel representing single wavelength inside OTS (COM=1, LINE=3, DC=4) facility in a OPT-AMP-C card. The format is LINEWL-[SHELF]-[SLOT]-[PORT]-[DIRN]-ALL.

Table 26-20 LINEWL (continued)

Values	Description
LINEWL[-{1-30}]-{1-6,12-17}-{1,3,4}-{RX,TX}-<WLEN>	The Optical Channel representing single wavelength inside OTS (COM=1, LINE=3, DC=4) facility in a OPT-AMP-C card. The format is LINEWL-[SHELF]-[SLOT]-[PORT]-[DIRN]-[WLEN].
LINEWL[-{1-30}]-{1-6,12-17}-{1}{-}{RX,TX}-ALL	All the Optical Channel representing single wavelength inside OTS (COM) facility in a OPT-PRE units. The format is LINE-[SHELF]-[SLOT]-[PORT]-[DIRN]-ALL
LINEWL[-{1-30}]-{1-6,12-17}-{1}{-}{RX,TX}-<WLEN>	The Optical Channel representing single wavelength inside OTS (COM) facility in a OPT-PRE units. The format is LINE-[SHELF]-[SLOT]-[PORT]-[DIRN]-[WLEN]
LINEWL[-{1-30}]-{1-6,12-17}-{1,3}{-}{RX,TX}-ALL	The Optical Channel representing single wavelength inside OTS (COM=1, LINE=3) facility in a OPT-BST, OPT-BST-E, OPT-BST-L, OPT-AMP-L, OPT-AMP-17-C and OPT-AMP-23-C cards. The format is LINEWL-[SHELF]-[SLOT]-[PORT]-[DIRN]-ALL.
LINEWL[-{1-30}]-{1-6,12-17}-{1,3}{-}{RX,TX}-<WLEN>	The Optical Channel representing single wavelength inside OTS (COM=1, LINE=3) facility in a OPT-BST, OPT-BST-E, OPT-BST-L, OPT-AMP-L, OPT-AMP-17-C and OPT-AMP-23-C cards. The format is LINEWL-[SHELF]-[SLOT]-[PORT]-[DIRN]-[WLEN].
LINEWL[-{1-30}]-{1-6,12-17}-{1-2}{-}{RX,TX}-ALL	The Optical Channel representing single wavelength inside OTS (COM=1, LINE=2) facility in a OSC-CSM cards. The format is LINEWL-[SHELF]-[SLOT]-[PORT]-[DIRN]-ALL.
LINEWL[-{1-30}]-{1-6,12-17}-{1-2}{-}{RX,TX}-<WLEN>	The Optical Channel representing single wavelength inside OTS (COM=1, LINE=2) facility in a OSC-CSM cards. The format is LINEWL-[SHELF]-[SLOT]-[PORT]-[DIRN]-[WLEN].
LINEWL-[[{1-30}]-{1-5,12-16}-{1-8}]{-}{RX}-<WLEN>	The Optical Channel representing single wavelength inside EXP lines from all the other WXC cards in a 40-WX-C card. The format is LINEWL-[SHELF]-[SLOT]-[PORT]-[DIRN].
LINEWL-[[{1-30}]-{1-5,12-16}-{9}]{-}{RX,TX}-<WLEN>	The Optical Channel representing single wavelength inside ADD/DROP line to/from MUX/DMX/WSS cards in a 40-WXC-C card. The format is LINEWL-[SHELF]-[SLOT]-[PORT]-[DIRN].
LINEWL-[[{1-30}]-{1-5,12-16}-{10}]{-}{TX}-<WLEN>	The Optical Channel representing single wavelength inside EXP line in a 40-WXC-C card. The format is LINEWL-[SHELF]-[SLOT]-[PORT]-[DIRN].
LINEWL-[[{1-30}]-{1-5,12-16}-{11}]{-}{RX,TX}-<WLEN>	The Optical Channel representing single wavelength inside COM line in a 40-WXC-C card. The format is LINEWL-[SHELF]-[SLOT]-[PORT]-[DIRN].
LINEWL[-{1-30}]-{1-6,12-17}-{4}{-}{TX}-ALL	All the Optical Channel representing single wavelength inside COM line TX in a 40-SMR2-C cards. The format is LINEWL-[shelf]-[slot]-[port]-[dirn]-ALL

Table 26-20 LINEWL (continued)

Values	Description
LINEWL[-{1-30}]-{1-6,12-17}-{4} -{TX}-<wlen>	The Optical Channel representing single wavelength inside COM line TX in a 40-SMR2-C cards. The format is LINEWL-[shelf]-[slot]-[port]-[dirn]-<wlen>
LINEWL[-{1-30}]-{1-6,12-17}-{3} -{RX,TX}-ALL	All the Optical Channel representing single wavelength inside ADD-RX/DROP-TX lines in a 40-SMR2-C cards. The format is LINEWL-[shelf]-[slot]-[port]-[dirn]-ALL
LINEWL[-{1-30}]-{1-6,12-17}-{3} -{RX,TX}-<wlen>	The Optical Channel representing single wavelength inside ADD-RX/DROP-TX line in a 40-SMR2-C cards. The format is LINEWL-[shelf]-[slot]-[port]-[dirn]-<wlen>.
LINEWL[-{1-30}]-{1-6,12-17}-{5} -{TX}-ALL	All the Optical Channel representing single wavelength inside EXP-TX line in a 40-SMR2-C cards. The format is LINEWL-[shelf]-[slot]-[port]-[dirn]-ALL.
LINEWL[-{1-30}]-{1-6,12-17}-{5} -{TX}-<wlen>	The Optical Channel representing single wavelength inside EXP-TX line in a 40-SMR2-C cards. The format is LINEWL-[shelf]-[slot]-[port]-[dirn]-<wlen>
LINEWL[-{1-30}]-{1-6,12-17}-{6-8}-{RX}-ALL	All the Optical Channel representing single wavelength inside EXP-RX lines in a 40-SMR2-C cards. The format is LINEWL-[shelf]-[slot]-[port]-[dirn]-ALL
LINEWL[-{1-30}]-{1-6,12-17}-{6-8}-{RX}-<wlen>	The Optical Channel representing single wavelength inside EXP-RX lines in a 40-SMR2-C cards. The format is LINEWL-[shelf]-[slot]-[port]-[dirn]-<wlen>
LINEWL[-{1-30}]-{1-6,12-17}-{5} -{TX}-ALL	All the Optical Channel representing single wavelength inside COM line TX in a 40-SMR1-C cards. The format is LINEWL-[shelf]-[slot]-[port]-[dirn]-ALL
LINEWL[-{1-30}]-{1-6,12-17}-{5} -{TX}-<wlen>	The Optical Channel representing single wavelength inside COM line TX in a 40-SMR1-C cards. The format is LINEWL-[shelf]-[slot]-[port]-[dirn]-<wlen>
LINEWL[-{1-30}]-{1-6,12-17}-{4} -{RX,TX}-ALL	All the Optical Channel representing single wavelength inside ADD-RX/DROP-TX lines in a 40-SMR1-C cards. The format is LINEWL-[shelf]-[slot]-[port]-[dirn]-ALL
LINEWL[-{1-30}]-{1-6,12-17}-{4} -{RX,TX}-<wlen>	The Optical Channel representing single wavelength inside ADD-RX/DROP-TX line in a 40-SMR1-C cards. The format is LINEWL-[shelf]-[slot]-[port]-[dirn]-<wlen>
LINEWL[-{1-30}]-{1-6,12-17}-{1} -{RX,TX}-ALL	All the Optical Channel representing single wavelength inside EXP lines in a 40-SMR1-C cards. The format is LINEWL-[shelf]-[slot]-[port]-[dirn]-ALL
LINEWL[-{1-30}]-{1-6,12-17}-{1} -{RX,TX}-<wlen>	The Optical Channel representing single wavelength inside EXP line in a 40-SMR1-C cards. The format is LINEWL-[shelf]-[slot]-[port]-[dirn]-<wlen>
LINEWL[-{1-30}]-{1-5,12-16}-ALL	All the Optical Channels representing single wavelength inside OTS facility in a 80-WXC-C card configured in specified slot. The format is LINEWL-[shelf]-[slot]-ALL

Table 26-20 LINEWL (continued)

Values	Description
LINEWL[-{1-30}]{1-5,12-16}{10}-ALL	All the Optical Channel representing single wavelength inside COM line in a 80-WXC-C cards. The format is LINEWL-[shelf]-[slot]-[port]-ALL
LINEWL[-{1-30}]{1-5,12-16}{10}-<wlen>	The Optical Channel representing single wavelength inside COM line in a 80-WXC-C cards. The format is LINEWL-[shelf]-[slot]-[port]-<wlen>
LINEWL[-{1-30}]{1-5,12-16}{9}-ALL	All the Optical Channel representing single wavelength inside ADD/DROP line in a 80-WXC-C cards. The format is LINEWL-[shelf]-[slot]-[port]-ALL
LINEWL[-{1-30}]{1-5,12-16}{9}-<wlen>	The Optical Channel representing single wavelength inside ADD/DROP line in a 80-WXC-C cards. The format is LINEWL-[shelf]-[slot]-[port]-<wlen>
LINEWL[-{1-30}]{1-5,12-16}{1-8}-ALL	All the Optical Channel representing single wavelength inside EAD line in a 80-WXC-C cards. The format is LINEWL-[shelf]-[slot]-[port]-ALL
LINEWL[-{1-30}]{1-5,12-16}{1-8}-<wlen>	The Optical Channel representing single wavelength inside EAD line in a 80-WXC-C cards. The format is LINEWL-[shelf]-[slot]-[port]-<wlen>
LINEWL[-{1-30}]{1-5,12-16}{11}{-TX}-ALL	All the Optical Channel representing single wavelength inside DROP-TX line in a 80-WXC-C cards. The format is LINEWL-[shelf]-[slot]-[port]-[dirn]-ALL
LINEWL[-{1-30}]{1-5,12-16}{11}{-TX}-<wlen>	The Optical Channel representing single wavelength inside DROP-TX line in a 80-WXC-C cards. The format is LINEWL-[shelf]-[slot]-[port]-[dirn]-<wlen>

## 26.21 LNKTERM

Link termination AIDs are used to access the termination points of a provisionable patchcord.

Table 26-21 LNKTERM

Pattern	Description
ALL	Indicates all the provisionable patchcord terminations on a node. Applicable only for the retrieve commands.
LNKTERM-ALL	Indicates all the provisionable patchcord terminations on a node. Applicable only for the retrieve commands.
LNKTERM-{1-65535}	Indicates a single provisionable patchcord termination point on a node, where the format is LNKTERM-.

## 26.22 OPM

OPM AIDs represent the single wavelength inside an optical power monitoring object.

**Table 26-22** OPM

Values	Description
ALL	The first ID represents the shelf, the second ID represents the slot, and the last ID is the wavelength, represented in the form of 15xx.yy nanometers. The last index of the wavelength is the value of the wavelength as described in OPTICAL_WLEN.
OPM[-{1-30}]-{1-5,12-16}-ALL	
OPM[-{1-30}]-{1-5,12-16}-<wlen>	

## 26.23 OSC

(Cisco ONS 15454 only) OSC AIDs are used to access the OSC of the NE.

**Table 26-23** OSC

Values	Description
ALL	All of the OSCs of the NE. The ALL AID applies to the retrieve-only commands.
OSC-RINGID	RINGID is a string of up to six characters. Valid characters are [A-Z,0-9] (case insensitive).

## 26.24 PRSLOT

(Cisco ONS 15454 only) Valid protection slots for the electrical cards.

**Table 26-24** PRSLOT

Pattern	Description
NULL	Indicates there is no protection group. Used when trying to delete a protection group.
SLOT-1	The No.1 slot of an NE.
SLOT-3	The No.3 slot of an NE.
SLOT-5	The No.5 slot of an NE.
SLOT-13	The No.13 slot of an NE.
SLOT-15	The No.15 slot of an NE.
SLOT-17	The No.17 slot of an NE.

## 26.25 RFILE

(ONS 15454) File transfer type.

**Table 26-25** RFILE

Pattern	Description
RFILE-DB	Transferring the provisioning database.
RFILE-LOG	Transferring a log file.
RFILE-PKG	Transferring a software package.
RFILE-COMPDB	Transferring the provisioning and system database.

## 26.26 SHELF

(ONS 15454) Identifies a shelf within a node. SHELF is applicable only to nodes that are set to MULTISHELF or MULTISHELFETH mode.

**Table 26-26** SHELF

Pattern	Description
SHELF-ALL	All of the shelves in the node.
SHELF-{1-30}	A specific shelf in the node (shelf 1 through 30).

## 26.27 STS

SONET frame-level AID set:

- STS AID format for optical and EC1 facilities without PPM: STS-[SLOT]-[PORT]-[STS]
- STS AID format for optical facilities with PPMs: STS-[SLOT]-[PPM]-[PORT]-[STS]
- STS AID format for optical facilities with PIMs and PPMs:  
STS-[SLOT]-[PIM]-[PPM]-[PORT]-[STS]
- STS AID format for DS1 electrical facilities: STS-[SLOT]-[STS]
- STS AID format for DS3 (except DS3i) electrical facilities: STS-[SLOT]-[PORT]-[STS]
- STS AID format for DS3i electrical facilities: STS-[SLOT]-[STS]
- STS AID format for G1K-4 card Gigabit Ethernet (GIGE) facilities: FAC-[SLOT]-[PORT]

Table 26-27 STS

Pattern	Description
ALL	The ALL AID applies to the RTRV-only commands: RTRV-STs with the ALL AID retrieves all STS interfaces on the NE. RTRV-STs1 with ALL AID retrieves all STS1 interfaces on the NE. RTRV-STs3c with ALL AID retrieves all STS3c interfaces on the NE.
FAC-{1-4,11-14}-{1-4}-{1-4}-{1}	Dynamically allocated STSs of all widths for the GIGE port on an ASAP card. Format is FAC-[SLOT]-[PIM]-[PPM]-[PORT].
FAC-{1-6,12-17}-{1-4}	(ONS 15454 only) Dynamically allocated STSs of all widths for the G1K-4 card. Format is FAC-[SLOT]-[PORT]
STS-{1-4,11-14}-{1-4}-{1,4}-{1}	StS3c AID for the ASAP card with an OC3 port provisioned. STS12C AID for the ASAP card with an OC12 port provisioned. STS48C AID for the ASAP card with OC48 port provisioned. Format of AID is STS-[SLOT]-[PIM]-[PPM]-[PORT]-[STS].
STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,13,25,37}	STS12C AID for the ASAP card with an OC48 port provisioned. Format is STS-[SLOT]-[PIM]-[PPM]-[PORT]-[STS].
STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,25}	STS24C AID for the ASAP card with an OC48 port provisioned. Format is STS-[SLOT]-[PIM]-[PPM]-[PORT]-[STS].
STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,4,13,16,25,28,37,40}	STS9C AID for the ASAP card with an OC48 port provisioned. Format is STS-[SLOT]-[PIM]-[PPM]-[PORT]-[STS].
STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,4,7,10,13,16,19,22,25,28,31,34,37,40,43,46}	STS3C AID for the ASAP card with an OC48 port provisioned. Format is STS-[SLOT]-[PIM]-[PPM]-[PORT]-[STS].
STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,4,7}	STS6C AID for the ASAP card with an OC12 port provisioned. Format is STS-[SLOT]-[PIM]-[PPM]-[PORT]-[STS].
STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1,4}	STS9C AID for the ASAP card with an OC12 port provisioned. Format is STS-[SLOT]-[PIM]-[PPM]-[PORT]-[STS].
STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1-12}	STS1 AID for the ASAP card with an OC12 port provisioned. Format is STS-[SLOT]-[PIM]-[PPM]-[PORT]-[STS].
STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1-3}	STS1 AID for the ASAP card with an OC3 port provisioned. Format is STS-[SLOT]-[PIM]-[PPM]-[PORT]-[STS].
STS-{1-4,11-14}-{1-4}-{1,4}-{1}-{1-48}	STS1 AID for the ASAP card with an OC48 port provisioned. Format is STS-[SLOT]-[PIM]-[PPM]-[PORT]-[STS].
STS-{1-4,11-14}-{1-4}-{1-4}-{1}-ALL	STS1, STS3C, STS6C, STS9C, STS12C, STS24C, and STS48C AID for the ASAP card with an OCN port provisioned. Format is STS-[SLOT]-[PIM]-[PPM]-[PORT]-[STS].
STS-{1-4,11-14}-{1-4}-{1-4}-{1}-{1,4,7,13,16,19,25,28,31,43}	STS6C AID for the ASAP card with an OC48 port provisioned. Format is STS-[SLOT]-[PIM]-[PPM]-[PORT]-[STS].

Table 26-27 STS (continued)

Pattern	Description
STS-{1-4,14-17}-{1-4}-1	(ONS 15454 only) STS12C AIDs for a 4-port OC12 card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{1-4,14-17}-{1-4}-ALL	(ONS 15454 only) All the STSs for a given 4-port OC12 card. Format is STS-[SLOT]-[PORT]-ALL.
STS-{1-4,14-17}-{1-4}-{1,4,7,10}	(ONS 15454 only) STS3C for the 4-port OC12 card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{1-4,14-17}-{1-4}-{1,4,7}	(ONS 15454 only) STS6C AIDs for a 4-port OC12 card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{1-4,14-17}-{1-4}-{1-3}	(ONS 15454 only) STS1 AID for the 4-port OC3 card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{1-4,14-17}-{1-8}-1	(ONS 15454 only) STS3C for the 8-port OC3 card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{1-4,14-17}-{1-8}-ALL	(ONS 15454 only) All the STSs for a given 8-port OC3 card. Format is STS-[SLOT]-[PORT]-ALL.
STS-{1-4,14-17}-{1-8}-{1-3}	(ONS 15454 only) STS1 AID for the 8-port OC3 card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{1-6,12-17}-1	(ONS 15454 only) STS1 AID for a DS1 card. Format is STS-[SLOT]-[STS]. There is only 1 STS for the DS1 card.
STS-{1-6,12-17}-1-1	(ONS 15454 only) STS12C AID for a single-port OC12 card STS48C AID for an OC48AS card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{1-6,12-17}-1-ALL	(ONS 15454 only) All the STSs of an STS bandwidth on a single port optical card. Format is STS-[SLOT]-[PORT]-ALL.
STS-{1-6,12-17}-1-{1,13,25,37}	(ONS 15454 only) STS12C AIDs for an OC48AS card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{1-6,12-17}-1-{1,4,10,13,16,19,25,28,37,40}	(ONS 15454 only) STS9C AID for an OC48AS card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{1-6,12-17}-1-{1,4,7,10,13,16,19,22,25}	(ONS 15454 only) STS24C AID for an OC48AS card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{1-6,12-17}-1-{1,4,7,10-46}	(ONS 15454 only) STS3C AID for an OC48AS card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{1-6,12-17}-1-{1,4,7,10}	(ONS 15454 only) STS3C AID for a single-port OC12 card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{1-6,12-17}-1-{1,4,7,13,16,19,25,28,37,40,43}	(ONS 15454 only) STS6C AID for an OC48AS card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{1-6,12-17}-1-{1,4,7}	(ONS 15454 only) STS6C AID for an OC12 card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{1-6,12-17}-1-{1,4}	(ONS 15454 only) STS9C AID for a single-port OC12 card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{1-6,12-17}-1-{1-12}	(ONS 15454 only) STS1 AID for a single-port OC12 card. Format is STS-[SLOT]-[PORT]-[STS].

Table 26-27 STS (continued)

Pattern	Description
STS-{1-6,12-17}-1-{1-48}	(ONS 15454 only) STS1 AID for an OC48AS card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{1-6,12-17}-ALL	(ONS 15454 only) STS ALL AID for the card in the given slot. Format is STS-[SLOT]-[ALL].
STS-{1-6,12-17}-{1-12}-1	(ONS 15454 only) STS1 AID for EC1 and DS3 cards. Format is STS-[SLOT]-[PORT]-[STS].
STS-{1-6,12-17}-{1-24}-1	STS1 AIDs for the DS3XM-12 STS12 backplane rate cards. Format is STS-[SLOT]-[PORT]-[STS].
STS-{1-6,12-17}-{1-36}-1	STS1 AIDs for the DS3XM-12 STS48 backplane rate cards. Format is STS-[SLOT]-[PORT]-[STS].
STS-{1-6,12-17}-{1-4}-1	(ONS 15454 only) STS3C AID for a 4-port OC3 card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{1-6,12-17}-{1-4}-ALL	(ONS 15454 only) All the STSs for a 4-port OC3 card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{1-6,12-17}-{1-4}-{1,4,7,10-46}	Format is STS-[SLOT]-[PORT]-[STS].
STS-{1-6,12-17}-{1-4}-{1,4,7}	(ONS 15454 only) STS6c AID for a 4-port OC12 card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{1-6,12-17}-{1-4}-{1,4}	(ONS 15454 only) STS9C AID for a 4-port OC12 card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{1-6,12-17}-{1-4}-{1-12}	(ONS 15454 only) STS1 AID for a 4-port OC12 card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{1-6,12-17}-{1-6}	(ONS 15454 only) STS1 AID for a DS3XM card. Format is STS-[SLOT]-[STS].
STS-{2}-{1-2}-{1}-{1-3}	STS1 AID for the OC3 port. Format is STS-[SLOT]-[PPM]-[PORT]-[STS].
STS-{5,6,12,13}-1-1	(ONS 15454 only) STS48c AID for an OC48 card, or STS192 AID for an OC192 card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{5,6,12,13}-1-{1,13,25,37-180}	(ONS 15454 only) STS12c AID for an OC192 card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{5,6,12,13}-1-{1,13,25,37}	(ONS 15454 only) STS12c AIDs for an OC48 card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{5,6,12,13}-1-{1,4,7,10,13,16,19,22,25}	(ONS 15454 only) STS24c AID for an OC48 card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{5,6,12,13}-1-{1,4,7,10-190}	(ONS 15454 only) STS3c for an OC192 card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{5,6,12,13}-1-{1,4,7,10-46}	(ONS 15454 only) STS3c AID for an OC48 card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{5,6,12,13}-1-{1,4,7,13,16,19,25,28,37,40,43}	(ONS 15454 only) STS6c AID for an OC48 card. Format is STS-[SLOT]-[PORT]-[STS].

Table 26-27 STS (continued)

Pattern	Description
STS-{5,6,12,13}-1-{1,49,97,145}	(ONS 15454 only) STS48c AID for an OC192 card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{5,6,12,13}-1-{1-192}	(ONS 15454 only) STS1 AID for an OC192 card. Format is STS-[SLOT]-[PORT]-[STS].
STS-{5,6,12,13}-1-{1-48}	(ONS 15454 only) STS1 AID for an OC48 card. Format is STS-[SLOT]-[PORT]-[STS].
VFAC-{1-6,12-17}-{0-1}	(ONS 15454 only) Virtual facility AID for the ML-Series card back-end POS ports. Both the ML1000-2 and ML100T-12 have two POS ports. Port numbering starts at 0. Format is VFAC-[SLOT]-[PORT].

## 26.28 SYN

Synchronization AIDs

Table 26-28 SYN

Pattern	Description
SYNC[-{1-30}]-ALL	ALL synchronization AID (values 1 to 8 is the shelf ID).
SYNC[-{1-30}]-NE	NE synchronization AID (values 1 to 8 is the shelf ID).
SYNC[-{1-30}]-{BITS1,BITS2}	BITS synchronization AID (values 1 to 8 is the shelf ID).

## 26.29 SYN\_SRC

Synchronization source

Table 26-29 SYN\_SRC

Pattern	Description
BITS-1	(ONS 15454) Synchronization source is BITS-1. Format is BITS-[PORT].
BITS-2	(ONS 15454) Synchronization source is BITS-2. Format is BITS-[PORT].
FAC-{1-4,11-14}-{1-4}	Synchronization source is 4-port OC192. Format is FAC-[SLOT]-[PORT].
FAC-{1-6,12-17}-{1-4}	(ONS 15454 only) Synchronization source is the optical card (four-port OC3 and four-port OC12) facility. Format is FAC-[SLOT]-[PORT].
FAC-{1-6,12-17}-{1}	(ONS 15454 only) Synchronization source is the optical card (one-port OC12 and OC48AS) facility. Format is FAC-[SLOT]-[PORT].

Table 26-29 SYN\_SRC (continued)

Pattern	Description
FAC-{5,6,12,13}-{1}	Synchronization source is the optical card (OC48, OC192) facility. Format is FAC-[SLOT]-[PORT].
INTERNAL	Set the SYN_SRC to be the system default value. The INTERNAL value of the SYN_SRC is only applied for the SYNC-NE AID on the ED-SYCN command.
NONE	Set the SYNC_SRC value to the default value for BITS-OUT. The NONE value of SYNC_SRC only applies to the BITS-1 and BITS-2 AID of the ED-SYCN command.
SYNC-NE	SYNC-NE source. It is only used in the alarm report or alarm retrieve commands.

## 26.30 SYNC\_REF

(Cisco ONS 15454) Synchronization AIDs.

**Table 26-30** SYNC\_REF

Pattern	Description
ALL	Equivalent to a combination of SYNC-ALL, BITS-1 and BITS-2. This AID is valid only for the commands RTRV-SYNCN, RTRV-ALM-SYNCN, and RTRV-COND-SYNCN.
SYNC-ALL	All synchronization references.
SYNC-{1-30}-NE	NE synchronization AID.
SYNC-{1-30}-{BITS1, BITS2}	BITS1 and BITS2 synchronization AIDs.

## 26.31 SYNC\_SW

New synchronization reference that will be used.

**Table 26-31** SYNC\_SW

Pattern	Description
INT	Internal clock. The INT value is only applied for the SYNC-NE AID on the OPR-SYNC_SW command.
PRI	Primary timing reference.
SEC	Secondary timing reference.

## 26.32 UDC

(ONS 15454) UDC AIDs for F-UDC and DCC-UDC channels on the AIC-I card.

**Table 26-32** UDC

Pattern	Description
ALL	Applicable to RTRV-only commands, for example, RTRV-ALM/COND-UDCF and RTRV-ALM/COND-UDCDCC. Corresponds to a superset of F-UDC and DCC-UDC AIDs.
UDC-{F,DCC}-{A,B}	F-UDC and DCC-UDC AIDs for A and B channels. DCC-UDC is supported on the ONS 15454 only. F-UDC is supported on the ONS 15454.

## 26.33 VT

(ONS 15454) Virtual tributary.

- VT1 AID format for optical and EC1 facilities without PPM:  
VT1-[SLOT]-[PORT]-[STS]-[VTG]-[VTN]
- VT1 AID format for optical facilities with PPM:  
VT1-[SLOT]-[PPM]-[PORT]-[STS]-[VTG]-[VTN]
- VT1 AID format for DS1 electrical facilities: VT1-[SLOT]-[STS]-[VTG]-[VTN]
- VT1 AID format for DS3 electrical facilities: VT1-[SLOT]-[PORT]-[STS]-[VTG]-[VTN]

**Table 26-33** VT

Pattern	Description
ALL	Applies to RTRV-only commands. For example, the RTRV-VT and RTRV-VT1 with ALL AIDs return all VT1 interfaces on the node.
VT1-{1-4,14-17}-{1-8}-{1-3}-{1-7}-{1-4}	(ONS 15454 only) 8-port OC3 card
VT1-{1-6,12-17}-1-{1-12}-{1-7}-{1-4}	(ONS 15454 only) Single-port OC12 card
VT1-{1-6,12-17}-1-{1-48}-{1-7}-{1-4}	(ONS 15454 only) OC48AS card
VT1-{1-6,12-17}-1-{1-7}-{1-2}	(ONS 15454 only) DS1 card
VT1-{1-6,12-17}-{1-12}-1-{1-7}-{1-4}	(ONS 15454 only) EC1 card
VT1-{1-6,12-17}-{1-24}-1-{1-7}-{1-4}	VT1.5 AIDs for DS3XM-12 STS12 backplane rate cards
VT1-{1-6,12-17}-{1-36}-1-{1-7}-{1-4}	VT1.5 AIDs for DS3XM-12 STS48 backplane rate cards
VT1-{1-6,12-17}-{1-4}-{1-12}-{1-7}-{1-4}	(ONS 15454 only) 4-port OC12 card
VT1-{1-6,12-17}-{1-4}-{1-3}-{1-7}-{1-4}	(ONS 15454 only) 4-port OC3 card
VT1-{1-6,12-17}-{1-6}-{1-7}-{1-4}	(ONS 15454 only) DS3XM-6 card
VT1-{5,6,12,13}-1-{1-192}-{1-7}-{1-4}	(ONS 15454 only) OC192 card
VT1-{5,6,12,13}-1-{1-48}-{1-7}-{1-4}	(ONS 15454 only) OC48 card
VT2-{1-4,14-17}-{1-8}-{1-3}-{1-7}-{1-3}	(ONS 15454 only) Eight-port OC3 card
VT2-{1-6,12-17}-1-{1-12}-{1-7}-{1-3}	(ONS 15454 only) Single-port OC12 card
VT2-{1-6,12-17}-1-{1-48}-{1-7}-{1-3}	(ONS 15454 only) OC48AS card
VT2-{1-6,12-17}-{1-4}-{1-12}-{1-7}-{1-3}	(ONS 15454 only) Four-port OC12 card
VT2-{1-6,12-17}-{1-4}-{1-3}-{1-7}-{1-3}	(ONS 15454 only) Four-port OC3 card
VT2-{5,6,12,13}-1-{1-192}-{1-7}-{1-3}	(ONS 15454 only) OC192 card
VT2-{5,6,12,13}-1-{1-48}-{1-7}-{1-3}	(ONS 15454 only) OC48 card

## 26.34 WDMANS

(Cisco ONS 15454 only) This AID is used to access the Wavelength Division Multiplexing (WDM) automatic optical node setup (AONS) application of the NE.

Table 26-34 WDMANS

Pattern	Description
WDMSIDE-{UNKNOWN,A,B,C,D,E,F,G,H}	Automatic MSTP node setup identifier
WDMNODE	Automatic MSTP node setup identifier

## 26.35 WLEN

(Cisco ONS 15454 only) This AID represents the single wavelength inside an external facility. If the facility is of type OTS (line), the wavelengths contained are all the available in the node (currently 32). If the facility is of type OCH (CHAN), the wavelength is just one and it is the same of the correspondent wavelength customized for that channel.

Table 26-35 WLEN

Pattern	Description
WLEN-{E,W}-{ADD,DROP,EXP}-{1530.33,1531.12,1531.90,1532.68,1534.25,1535.04,1535.82,1536.61,1538.19,1538.98,1539.77,1540.56,1542.14,1542.94,1543.73,1544.53,1546.12,1546.92,,1547.72,1548.51,1550.12,1550.92,1551.72,1552.52,1554.13,1554.94,1555.75,1556.55,1558.17,1558.98,1559.79,1560.61,1577.44,1577.86,1578.27,1578.69,1579.10,1579.52,1579.93,1580.35,1580.77,1581.18,1581.60,1582.02,1582.44,1582.85,1583.27,1583.69,1584.11,1584.53,1584.95,1585.36,1585.78,1586.20,1586.62,1587.04,1587.46,1587.88,1588.30,1588.73,1589.15,1589.57,1589.99,1590.41,1590.83,1591.26,1591.68,1592.10,1592.52,1592.95,1593.37,1593.79}	Wavelength identifier

## 26.36 CTC Port Numbers and TL1 Aids

Table 26-36 CTC Port Numbers and TL1 Aids

Equipment	CTC Port Name	CTC Port Number	TL1 Aid
OPT-RAMP-C	COM-RX	1	LINE-shelf-slot-1-RX
	COM-TX	2	LINE-shelf-slot-1-TX
	OSC-RX	3	LINE-shelf-slot-2-RX
	OSC-TX	4	LINE-shelf-slot-2-TX
	LINE-RX	5	LINE-shelf-slot-3-RX
	LINE-TX	6	LINE-shelf-slot-3-TX
	DC-RX	7	LINE-shelf-slot-4-RX
	DC-TX	8	LINE-shelf-slot-4-TX
	RAMAN-RX	9	LINE-shelf-slot-5-RX
	RAMAN-TX	10	LINE-shelf-slot-5-TX

Table 26-36 CTC Port Numbers and TL1 Aids

Equipment	CTC Port Name	CTC Port Number	TL1 Aid
OPT-AMP-17C	COM-RX	1	LINE-shelf-slot-1-RX
	COM-TX	2	LINE-shelf-slot-1-TX
	OSC-RX	3	LINE-shelf-slot-2-RX
	OSC-TX	4	LINE-shelf-slot-2-TX
	LINE-RX	5	LINE-shelf-slot-3-RX
	LINE-TX	6	LINE-shelf-slot-3-TX
OPT-AMP-C	COM-RX	1	LINE-shelf-slot-1-RX
	COM-TX	2	LINE-shelf-slot-1-TX
	DC-RX	7	LINE-shelf-slot-4-RX
	DC-TX	8	LINE-shelf-slot-4-TX
	OSC-RX	3	LINE-shelf-slot-2-RX
	OSC-TX	4	LINE-shelf-slot-2-TX
	LINE-RX	5	LINE-shelf-slot-3-RX
	LINE-TX	6	LINE-shelf-slot-3-TX
OSC-CSM	COM-RX	2	LINE-shelf-slot-1-RX
	COM-TX	3	LINE-shelf-slot-1-TX
	LINE-RX	4	LINE-shelf-slot-2-RX
	LINE-TX	5	LINE-shelf-slot-2-TX
	OSC-RX	6	LINE-shelf-slot-3-RX
	OSC-TX	7	LINE-shelf-slot-3-TX
	OC3	1	FAC-shelf-slot-1
40 WXC	EXP-i-RX	1..8	LINE-shelf-slot-i-RX (i=1..8)
	EXP-TX	11	LINE-shelf-slot-10-TX
	ADD-RX	9	LINE-shelf-slot-9-RX
	DROP-TX	10	LINE-shelf-slot-9-TX
	COM-RX	12	LINE-shelf-slot-11-RX
	COM-TX	13	LINE-shelf-slot-11-TX
80-WXC-C	EAD-i-R/T	1..8	LINE-shelf-slot-i (i=1..8)
	ADD R/T	9	LINE-shelf-slot-9
	COM R/T	10	LINE-shelf-slot-10
	DROP-TX	11	LINE-shelf-slot-11-TX
	COM-RX	13	LINE-shelf-slot-13-RX
	EXP-TX	12	LINE-shelf-slot-12-TX
32 DMX	CHAN TX	1-32	CHAN-shelf-slot-i-TX (i=1..32)
	COM-RX	33	LINE-shelf-slot-1-RX

Table 26-36 CTC Port Numbers and TL1 Aids

Equipment	CTC Port Name	CTC Port Number	TL1 Aid
OPT-PRE	COM-RX	1	LINE-shelf-slot-1-RX
	COM-TX	2	LINE-shelf-slot-1-TX
	DC-RX	3	LINE-shelf-slot-2-RX
	DC-TX	4	LINE-shelf-slot-2-TX
40 DMX	CHAN TX	1 - 40	CHAN-shelf-slot-i-TX (i=1..40)
	COM RX	41	LINE-shelf-slot-1-RX
4 MD	CHAN-RX	1	CHAN-shelf-slot-1-RX
	CHAN-TX	2	CHAN-shelf-slot-1-TX
	CHAN-RX	3	CHAN-shelf-slot-2-RX
	CHAN-TX	4	CHAN-shelf-slot-2-TX
	CHAN-RX	5	CHAN-shelf-slot-3-RX
	CHAN-TX	6	CHAN-shelf-slot-3-TX
	CHAN-RX	7	CHAN-shelf-slot-4-RX
	CHAN-TX	8	CHAN-shelf-slot-4-TX
	COM-RX	9	LINE-shelf-slot-1-RX
	COM-TX	10	LINE-shelf-slot-1-TX
40 MUX	CHAN-RX	1-40	CHAN-shelf-slot-i-RX (i=1..40)
	COM-TX	41	LINE-shelf-slot-1-TX
32 DMX L	CHAN TX	1 - 32	CHAN-shelf-slot-i-TX (i=1..32)
	COM RX	33	LINE-shelf-slot-1-RX
32 WSS L	ADD-RX	1-32	CHAN-shelf-slot-i-RX (i=1..32)
	PT	33-64	CHAN-shelf-slot-i-PT (i=1..32)
	DROP-TX	69	LINE-shelf-slot-3-TX
	EXP-RX	66	LINE-shelf-slot-2-RX
	EXP-TX	65	LINE-shelf-slot-2-TX
	COM-RX	68	LINE-shelf-slot-1-RX
	COM-TX	67	LINE-shelf-slot-1-TX
OPT-BST	COM-RX	1	LINE-shelf-slot-1-RX
	COM-TX	2	LINE-shelf-slot-1-TX
	OSC-RX	3	LINE-shelf-slot-2-RX
	OSC-TX	4	LINE-shelf-slot-2-TX
	LINE-RX	5	LINE-shelf-slot-3-RX
	LINE-TX	6	LINE-shelf-slot-3-TX

Table 26-36 CTC Port Numbers and TL1 Aids

Equipment	CTC Port Name	CTC Port Number	TL1 Aid
OPT-BST E	COM-RX	1	LINE-shelf-slot-1-RX
	COM-TX	2	LINE-shelf-slot-1-TX
	OSC-RX	3	LINE-shelf-slot-2-RX
	OSC-TX	4	LINE-shelf-slot-2-TX
	LINE-RX	5	LINE-shelf-slot-3-RX
	LINE-TX	6	LINE-shelf-slot-3-TX
OPT-AMP L	COM-RX	1	LINE-shelf-slot-1-RX
	COM-TX	2	LINE-shelf-slot-1-TX
	DC-RX	7	LINE-shelf-slot-4-RX
	DC-TX	8	LINE-shelf-slot-4-TX
	OSC-RX	3	LINE-shelf-slot-2-RX
	OSC-TX	4	LINE-shelf-slot-2-TX
	LINE-RX	5	LINE-shelf-slot-3-RX
	LINE-TX	6	LINE-shelf-slot-3-TX
OPT-BST L	COM-RX	1	LINE-shelf-slot-1-RX
	COM-TX	2	LINE-shelf-slot-2-TX
	OSC-RX	3	LINE-shelf-slot-1-RX
	OSC-TX	4	LINE-shelf-slot-2-TX
	LINE-RX	5	LINE-shelf-slot-1-RX
	LINE-TX	6	LINE-shelf-slot-2-TX
MMU	EXPA-RX	5	LINE-shelf-slot-3-RX
	EXPA-TX	6	LINE-shelf-slot-3-TX
	EXP-RX	1	LINE-shelf-slot-1-RX
	EXP-TX	2	LINE-shelf-slot-1-TX
	COM-RX	3	LINE-shelf-slot-2-RX
	COM-TX	4	LINE-shelf-slot-2-TX
PSM	W-RX	1	LINE-shelf-slot-1-RX
	W-TX	2	LINE-shelf-slot-1-TX
	P-RX	3	LINE-shelf-slot-2-RX
	P-TX	4	LINE-shelf-slot-2-TX
	COM-RX	5	LINE-shelf-slot-3-RX
	COM-TX	6	LINE-shelf-slot-3-TX

Table 26-36 CTC Port Numbers and TL1 Aids

Equipment	CTC Port Name	CTC Port Number	TL1 Aid
AD 1B	BAND-RX	1	BAND-shelf-slot-1-RX
	BAND-TX	2	BAND-shelf-slot-1-TX
	EXP-RX	3	LINE-shelf-slot-1-RX
	EXP-TX	4	LINE-shelf-slot-1-TX
	COM-RX	5	LINE-shelf-slot-2-RX
	COM-TX	6	LINE-shelf-slot-2-TX
AD 1C	CHAN-RX	1	CHAN-shelf-slot-1-RX
	CHAN-TX	2	CHAN-shelf-slot-1-TX
	EXP-RX	3	LINE-shelf-slot-1-RX
	EXP-TX	4	LINE-shelf-slot-1-TX
	COM-RX	5	LINE-shelf-slot-2-RX
	COM-TX	6	LINE-shelf-slot-2-TX
AD 2C	CHAN-RX	1	CHAN-shelf-slot-1-RX
	CHAN-TX	2	CHAN-shelf-slot-1-TX
	CHAN-RX	3	CHAN-shelf-slot-2-RX
	CHAN-TX	4	CHAN-shelf-slot-2-TX
	EXP-RX	5	LINE-shelf-slot-1-RX
	EXP-TX	6	LINE-shelf-slot-1-TX
	COM-RX	7	LINE-shelf-slot-2-RX
	COM-TX	8	LINE-shelf-slot-2-TX
AD 4C	CHAN-RX	1	CHAN-shelf-slot-1-RX
	CHAN-TX	2	CHAN-shelf-slot-1-TX
	CHAN-RX	3	CHAN-shelf-slot-2-RX
	CHAN-TX	4	CHAN-shelf-slot-2-TX
	CHAN-RX	5	CHAN-shelf-slot-3-RX
	CHAN-TX	6	CHAN-shelf-slot-3-TX
	CHAN-RX	7	CHAN-shelf-slot-4-RX
	CHAN-TX	8	CHAN-shelf-slot-4-TX
	EXP-RX	9	LINE-shelf-slot-1-RX
	EXP-TX	10	LINE-shelf-slot-1-TX
	COM-RX	11	LINE-shelf-slot-2-RX
	COM-TX	12	LINE-shelf-slot-2-TX

Table 26-36 CTC Port Numbers and TL1 Aids

Equipment	CTC Port Name	CTC Port Number	TL1 Aid
32 WSS	ADD-RX	1-32	CHAN-shelf-slot-i-RX (i=1..32)
	PT	33-64	CHAN-shelf-slot-i-PT (i=1..32)
	DROP-TX	69	LINE-shelf-slot-3-TX
	EXP-RX	66	LINE-shelf-slot-2-RX
	RXP-TX	65	LINE-shelf-slot-2-TX
	COM-RX	68	LINE-shelf-slot-1-RX
	COM-TX	67	LINE-shelf-slot-1-TX
40 WSS CO	ADD-RX	1-40	CHAN-shelf-slot-i-RX (i=1..32)
	PT	41-80	CHAN-shelf-slot-i-PT (i=1..32)
	DROP-TX	85	LINE-shelf-slot-3-TX
	EXP-RX	82	LINE-shelf-slot-2-RX
	RXP-TX	81	LINE-shelf-slot-2-TX
	COM-RX	84	LINE-shelf-slot-1-RX
	COM-TX	83	LINE-shelf-slot-1-TX
32 DMXO	CHAN-TX	1-32	CHAN-shelf-slot-i-TX (i=1..32)
	COM-RX	33	LINE-shelf-slot-1-RX
32 MUXO	CHAN RX	1-32	CHAN-shelf-slot-i-RX (i=1..32)
	COM TX	33	LINE-shelf-slot-1-TX
SMR-1	EXP-RX	1	LINE-shelf-slot-1-RX
	EXP-TX	2	LINE-shelf-slot-1-TX
	DC-RX	3	LINE-shelf-slot-2-RX
	DC-TX	4	LINE-shelf-slot-2-TX
	OSC-RX	5	LINE-shelf-slot-3-RX
	OSC-TX	6	LINE-shelf-slot-3-TX
	ADD-RX	7	LINE-shelf-slot-4-RX
	DROP-TX	8	LINE-shelf-slot-4-TX
	LINE-RX	9	LINE-shelf-slot-5-RX
	LINE_TX	10	LINE-shelf-slot-5-TX

Table 26-36 CTC Port Numbers and TL1 Aids

Equipment	CTC Port Name	CTC Port Number	TL1 Aid
SMR-2	DC-RX	1	LINE-shelf-slot-1-RX
	DC-TX	2	LINE-shelf-slot-1-TX
	OSC-RX	3	LINE-shelf-slot-2-RX
	OSC-TX	4	LINE-shelf-slot-2-TX
	ADD-RX	5	LINE-shelf-slot-3-RX
	DROP-TX	6	LINE-shelf-slot-3-TX
	LINE-RX	7	LINE-shelf-slot-4-RX
	LINE_TX	8	LINE-shelf-slot-4-TX
	EXP-TX-1	9	LINE-shelf-slot-5-TX
	EXP-RX-2	10	LINE-shelf-slot-6-RX
	EXP-RX-3	11	LINE-shelf-slot-7-RX
	EXP-RX-4	12	LINE-shelf-slot-8-RX



# CHAPTER 27

## Conditions

---



**Note**

The terms "Unidirectional Path Switched Ring" and "UPSR" may appear in Cisco literature. These terms do not refer to using Cisco ONS 15xxx products in a unidirectional path switched ring configuration. Rather, these terms, as well as "Path Protected Mesh Network" and "PPMN," refer generally to Cisco's path protection feature, which may be used in any topological network configuration. Cisco does not recommend using its path protection feature in any particular topological network configuration.

---

This chapter describes the conditions for TL1 commands and autonomous messages for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.

Conditions include any problem detected on an Cisco ONS 15454, Cisco ONS 15454 M2, or Cisco ONS 15454 M6 shelf. They can include standing or transient notifications. A snapshot of all currently raised standing conditions on the network, node, or card can be retrieved in the Cisco Transport Controller (CTC) Conditions window or using the RTRV-COND commands. (In addition, some but not all cleared conditions are found in the CTC History tab.)



**Note**

The Condition that apply to Cisco ONS 15454 also applies to Cisco ONS 15454 M2 and Cisco ONS 15454 M6.

---

**Table 27-1**      *Conditions*

Condition	Description
AIS	Alarm Indication Signal
AIS-L	Alarm Indication Signal-Line
AIS-P	Alarm Indication Signal-Path
AIS-V	Alarm Indication Signal-VT
ALS	Automatic Laser Shutdown
APC-DISABLED	Automatic Power Control Disabled
APC-FAIL	Automatic Power Control Failure
APSB	Byte Failure
APSC-IMP	Improper Automatic Protection Switch (APS) Code
APSCDFLTK	Default K Byte
APSCINCON	Inconsistent APS Code

Table 27-1 Conditions (continued)

Condition	Description
APSCM	Protection Switching Channel Match Failure
APSCNMIS	Node ID Mismatch
APSIMP	APS Invalid Mode
APSMM	Automatic Protection Switch Mode Mismatch
AS-CMD	Alarms Suppressed By User Command
AS-MT	Alarms Suppressed For Maintenance
AU-LOF	Loss of Frame (LOF)–Administration Unit–Loss of Multiframe
AUD-LOG-LOSS	Audit Log 100 Percent Full–Oldest records will be lost
AUD-LOG-LOW	Audit Log 80 Percent Full
AUTOLSROFF	Automatic Laser Shutoff Due To High Temperature
AUTORESET	Automatic System Reset
AUTOSW-AIS	Automatic Path Protection Switch Caused By AIS
AUTOSW-LOP	Automatic Path Protection Switch Caused By LOP
AUTOSW-PDI	Automatic Path Protection Switch Caused By PDI
AUTOSW-SDBER	Automatic Path Protection Switch Caused By SDBER
AUTOSW-SFBER	Automatic Path Protection Switch Caused By SFBER
AUTOSW-UNEQ	Automatic Path Protection Switch Caused By UNEQ
BAT-FAIL	Battery Failure
BAT-HGH-VLT	High Volt
BAT-LOW-VLT	Low Volt
BKUPMEMP	Primary Nonvolatile Backup Memory Failure
BLSROSYNC	BLSR Out Of Sync
CARLOSS	Carrier Loss On The LAN
CKTDOWN	Signaling Unable to Set Up Circuit
CLDRESTART	Cold Restart
COMIOXC	Input/Output (IO) Slot To Cross-connect (XCON) Communication Failure
COMM-FAIL	Plug-in Module Communication Failure
CONTBUS-A-18	TCC A To DCC A Processor Communication Failure
CONTBUS-B-18	TCC B To DCC B Processor Communication Failure
CONTBUS_A	Controller A To Shelf Slot Communication Failure
CONTBUS_B	Controller B To Shelf Slot Communication Failure
CTNEQPT-MISMATCH	Connection Equipment Mismatch
CTNEQPT-PBPROT	Interconnection Equipment Failure–Protect XC Payload Bus
CTNEQPT-PBWORK	Interconnection Equipment Failure–Working XC Payload Bus
DATAFLT	Software Fault–Data Integrity Fault

**Table 27-1** Conditions (continued)

Condition	Description
DBOSYNC	Standby Database Out of Synchronization
DS3-MISM	DS3 Frame Format Mismatch
DSP-COMM-FAIL	DSP Communication Failure
DSP-FAIL	DSP Failure
DUP-IPADDR	IP address already in use within the same data communications channel (DCC) area
DUP-NODENAME	Node name already in use within the same DCC area
E-W-MISMATCH	Both Ends Of Fiber Provisioned As East Or Both As West
EHIBATVG	Extreme High Voltage
ELWBATVG	Extreme Low Voltage
EOC	Section DCC (SDCC) Termination Failure
EOC-L	Line DCC (LDCC) Termination Failure
EQPT	Equipment Failure
EQPT-MISS	Replaceable Equipment/Unit is Missing
ERFI-P-CONN	Enhanced Remote Failure Indication–Path–Connectivity
ERFI-P-PAYLD	Enhanced Remote Failure Indication–Path–Payload
ERFI-P-SRVR	Enhanced Remote Failure Indication–Path–Server
ERROR-CONFIG	Error in Startup Configuration
ETH-LINKLOSS	Rear Panel Ethernet Link Removed
EXCCOL	Excess Collisions on the LAN
EXERCISE-RING-FAIL	Exercise Request on Ring Failed
EXERCISE-RING-REQ	Exercise Request on Ring
EXERCISE-SPAN-FAIL	Exercise Request on Span Failed
EXERCISE-SPAN-REQ	Exercise Request on Span
EXT	Failure Detected External To The NE
EXTRA-TRAF-PREEMPT	Extra Traffic Preempted
FAILTOSW	Failure To Switch To Protection
FAILTOSW-PATH	Failure To Switch To Protection–Path
FAILTOSWR	Failure To Switch To Protection–Ring
FAILTOSWS	Failure To Switch To Protection–Span
FAN	Fan Failure
FANDEGRADE	Partial Fan Failure
FE-AIS	Far End AIS
FE-DS1-MULTLOS	Far End Multiple DS1 LOS Detected On DS3
FE-DS1-NSA	Far End DS1 Equipment Failure–Non-Service-Affecting
FE-DS1-SA	Far End DS1 Equipment Failure–Service-Affecting

Table 27-1 Conditions (continued)

Condition	Description
FE-DS1-SNGLLOS	Far End Single DS1 Loss of Signal (LOS)
FE-DS3-NSA	Far End DS3 Equipment Failure–Non-Service-Affecting
FE-DS3-SA	Far End DS3 Equipment Failure–Service-Affecting
FE-EQPT-NSA	Far End Common Equipment Failure–Non-Service-Affecting
FE-EXERCISING-RING	Far End Exercising Ring
FE-EXERCISING-SPAN	Far End Exercising Span
FE-FRCDWKSWPR-RING	Far End Working Facility Forced To Switch To Protection–Ring
FE-FRCDWKSWPR-SPAN	Far End Working Facility Forced To Switch To Protection–Span
FE-IDLE	Far End Idle
FE-LOCKOUTOFPR-SPAN	Far End Lockout Of Protection–Span
FE-LOF	Far End LOF
FE-LOS	Far End LOS
FE-MANWKSWPR-RING	Far End Manual Switch Of Working Facility To Protection–Ring
FE-MANWKSWPR-SPAN	Far End Manual Switch Of Working Facility To Protection–Span
FEC-MISM	FEC Mismatch
FEPRLF	Far End Protection Line Failure
FORCED-REQ	Forced Switch Request
FORCED-REQ-RING	Forced Switch Request On Ring
FORCED-REQ-SPAN	Forced Switch Request On Span
FRCDSWTOINT	Forced Switch To Internal Clock
FRCDSWTOPRI	Forced Switch To Primary Reference
FRCDSWTOSEC	Forced Switch To Second Reference
FRCDSWTOTHIRD	Forced Switch To Third Reference
FRNGSYNC	Free Running Synchronization Mode
FSTSYNC	Fast Start Synchronization Mode
FULLPASSTHR-BI	Bidirectional Full Pass Through Is Active
GCC-EOC	GCC Termination Failure
GE-OOSYNC	Gigabit Ethernet Out of Synchronization
HI-LASERBIAS	Equipment High Laser Bias
HI-RXPOWER	Equipment High Receive (Rx) Power
HI-TXPOWER	Equipment High Transmit (Tx) Power
HITEMP	High Temperature
HLDOVRSYNC	Holdover Synchronization Mode

**Table 27-1** Conditions (continued)

Condition	Description
I-HITEMP	Industrial High Temperature
IMPROPRMVL	Improper Removal
INC-GFP-OUTOFFRAME	Out Of Frame Detected by Generic Framing Procedure (GFP) Receiver
INC-GFP-SIGLOSS	Client Signal Loss Frames Detected by GFP Receiver
INC-ISD	DS3 Idle Condition
INC-SIGLOSS	Incoming Signal Loss on Fibre Channel Interface
INC-SYNCCLOSS	Incoming Synchronization Loss on Fibre Channel Interface
INC_GFP_SYNCCLOSS	Client Synchronization Loss Frames Detected by GFP Receiver
INHSWPR	Inhibit Switch To Protect Request On Equipment
INHSWWKG	Inhibit Switch To Working Request On Equipment
INTRUSION-PSWD	Security Intrusion Attempt Detected—See Audit Log
INVMACADR	Invalid MAC Address
IOSCFGCOPY	IOS Configuration Copy In Progress
KB-PASSTHR	K Byte Pass Through Is Active
KBYTE-APS-CHANNEL-FAILURE	K Byte Channel Failure
LAN-POL-REV	LAN Connection Polarity Reversed
LASEREOL	Laser Approaching End of Life
LKOUTPR-S	Lockout Of Protection—Span
LMP-HELLODOWN	LMP Hello FSM to Control Channel Down
LMP-NDFAIL	LMP Neighbor Discovery has failed
LO-RXPOWER	Equipment Low Rx Power
LO-TXPOWER	Equipment Low Tx Power
LOA	Loss of Alignment
LOC	Loss of Channel
LOCKOUT-REQ	Lockout Switch Request On Facility or Equipment
LOCKOUT-REQ-RING	Lockout Switch Request On Ring
LOF	Loss Of Frame
LOM	Loss of Multiframe
LOP-P	Loss Of Pointer—Path
LOP-V	Loss Of Pointer—VT
LOS	Loss Of Signal
LPBKCRS	Cross-connect Loopback
LPBKDS1FEAC	DS1 Loopback Due To Far End Alarm and Control (FEAC) Command
LPBKDS1FEAC-CMD	DS1 Loopback Command Sent To Far End

Table 27-1 Conditions (continued)

Condition	Description
LPBKDS3FEAC	DS3 Loopback Due To FEAC Command
LPBKDS3FEAC-CMD	DS3 Loopback Command Sent To Far End
LPBKFACILITY	Facility Loopback
LPBKTERMINAL	Terminal Loopback
LWBATVG	Low Volt
MAN-REQ	Manual Switch Request
MANRESET	Manual System Reset
MANSWTOINT	Manual Switch To Internal Clock
MANSWTOPRI	Manual Switch To Primary Reference
MANSWTOSEC	Manual Switch To Second Reference
MANSWTO THIRD	Manual Switch To Third Reference
MANUAL-REQ-RING	Manual Switch Request On Ring
MANUAL-REQ-SPAN	Manual Switch Request On Span
MEA	Mismatch Of Equipment And Attributes
MEM-GONE	Free Memory On Card Near Zero
MEM-LOW	Free Memory On Card Very Low
MFGMEM	Manufacturing Data Memory (EEPROM Failure)
NO-CONFIG	No Startup Config
NTWTPINC	Network Topology Incomplete
OCHNC-ACTIV-FAIL	Optical Channel Activation Failure
OCHNC-DEACTIV-FAIL	Optical Channel Deactivation Failure
OCHNC-FAIL	Optical Channel Connection Failure
OCHNC-INC	Optical Channel Incomplete
ODUK-AIS-PM	ODUk: Alarm Indication Signal
ODUK-BDI-PM	ODUk: PM Backward Defect Indication
ODUK-LCK-PM	ODUk: Locked Defect-PM
ODUK-OCI-PM	ODUk: Open Connection Indication
ODUK-SD-PM	ODUk: Signal Degrade
ODUK-SF-PM	ODUk: Signal Failure
ODUK-TIM-PM	ODUk: Trail Trace Identifier Mismatch
OOU-TPT	Out of Use-Transport Failure
OPTNTWMIS	Optical Network Type Mismatch
OTUK-AIS	OTUk: Alarm Indication Signal
OTUK-BDI	OTUk: Backward Defect Indication
OTUK-LOF	OTUk: Loss Of Frame
OTUK-SD	OTUk: Signal Degrade

**Table 27-1** Conditions (continued)

Condition	Description
OTUK-SF	OTUk: Signal Failure
OTUK-TIM	OTUk: Trail Trace Identifier Mismatch
OUT-OF-SYNC	8B10B Out of Sync
PDI-P	Payload Defect Indication–Path
PEER-NORESPONSE	Peer Card Not Responding
PLM-P	Payload Label Mismatch–Path
PLM-V	Signal Label Mismatch Failure–Payload Label Mismatch–VT
PORT-CODE-MISM	Pluggable Port security code mismatch
PORT-COMM-FAIL	Module Communication Failure
PORT-MISMATCH	Pluggable Port rate mismatch
PORT-MISSING	Pluggable Port missing
PRC-DUPID	Duplicate Node ID
PROTNA	Protection Unit Not Available
PTIM	Payload Type Identifier Mismatch
PWR-REDUN	Redundant Power Capability Lost
RAI	Remote Alarm Indication
RCVR-MISS	Facility Termination Equipment–Receiver Missing
RFI	Remote Failure Indication
RFI-L	Remote Failure Indication–Line
RFI-P	One-Bit Remote Failure Indication–Path
RFI-V	Remote Failure Indication–VT
RING-ID-MIS	Ring ID Mismatch
RING-MISMATCH	Far End of Fiber Is Provisioned With Different Ring ID
RING-SW-EAST	Ring Switch Is Active on the East Side
RING-SW-WEST	Ring Switch Is Active on the West Side
RSVP-HELLODOWN	RSVP Hello FSM to Neighbor Down
RUNCFG-SAVENEED	Need to Save Running Configuration
SD	Signal Degrade
SD-L	Bit Error Rate (BER) Threshold Exceeded For Signal Degrade–Line
SD-P	BER Threshold Exceeded For Signal Degrade–Path
SF	Signal Failure
SF-L	BER Threshold Exceeded For Signal Failure–Line
SF-P	BER Threshold Exceeded For Signal Failure–Path
SFTWDOWN	Software Download In Progress
SNTP-HOST	Simple Network Time Protocol (SNTP) Host Failure

Table 27-1 Conditions (continued)

Condition	Description
SPAN-SW-EAST	Span Switch Is Active On The East Side
SPAN-SW-WEST	Span Switch Is Active On The West Side
SQM	Sequence Mismatch
SQUELCH	Ring Is Squelching Traffic
SQUELCHED	Equipment Squelched
SSM-DUS	Do Not Use For Synchronization
SSM-FAIL	Failed To Receive Synchronization Status Message
SSM-LNC	G812–Local Node Clock Traceable
SSM-OFF	Synchronization Status Messages Are Disabled On This Interface
SSM-PRC	G811–Primary Reference Clock Traceable
SSM-PRS	Stratum 1 Primary Reference Source Traceable
SSM-RES	Reserved For Network Synchronization Use
SSM-SDH-TN	G812–Transit Node Clock Traceable
SSM-SETS	G813–Synchronous Equipment Timing Source Traceable
SSM-SMC	SONET Minimum Clock Traceable
SSM-ST2	Stratum 2 Traceable
SSM-ST3	Stratum 3 Traceable
SSM-ST3E	Stratum 3E Traceable
SSM-ST4	Stratum 4 Traceable
SSM-STU	Synchronized–Traceability Unknown
SSM-TNC	Transit Node Clock Traceable
SWMTXMOD	Switching Matrix Module Failure
SWTOPRI	Switch To Primary Reference
SWTOSEC	Switch To Second Reference
SWTOTHIRD	Switch To Third Reference
SYNC-FREQ	Synchronization Reference Frequency Out Of Bounds
SYNCPRI	Primary Synchronization Reference Failure
SYNCSEC	Secondary Synchronization Reference Failure
SYNCTHIRD	Third Synchronization Reference Failure
SYSBOOT	System Reboot
TIM	TIM Section–Trace Identifier Mismatch Failure
TIM-MON	TIM Section Monitor–Trace Identifier Mismatch Failure
TIM-P	STS Path Trace Identifier Mismatch
TPTFAIL	Transport layer failure
TRMT	Transmit Failure

**Table 27-1** *Conditions (continued)*

<b>Condition</b>	<b>Description</b>
TRMT-MISS	Facility Termination Equipment–Transmitter Missing
TUNDERRUN	Ethernet Transmit First In First Out Underrun
TX-AIS	Alarm Indication Signal in Tx
TX-RAI	Remote Alarm Indication in Tx
UNC-WORD	Forward Error Correction (FEC) Uncorrected Word
UNEQ-P	Unequipped–Path
UNEQ-V	Signal Label Mismatch Failure–Unequipped VT
VCG-DEG	Virtual Concatenation (VCAT) Group Degraded
VCG-DOWN	VCAT Group Down
WKSWPR	Switched To Protection
WTR	Wait To Restore
WVL-MISMATCH	Equipment Wavelength Mismatch





# CHAPTER 28

## Modifiers

This chapter describes the modifiers for TL1 commands and autonomous messages for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6. [Table 28-1](#) details the TL1 modifiers for commands that have carets (< >) in part of their input format; for example, RTRV-<OCN\_TYPE>. A “Yes” in the platform column indicates that a particular modifier is supported in that platform. A “No” in the platform column indicates that a particular modifier is not supported in that platform.



**Note**

The Modifier supported on the Cisco ONS 15454 is also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 Platforms.

**Table 28-1**      **Modifier Support**

<b>Modifier</b>	<b>ONS 15454</b>
10GFC	Yes
10GIGE	Yes
40GIGE	Yes
1GFC	Yes
1GFICON	Yes
2GFC	Yes
2GFICON	Yes
5GIB	Yes
8GFC	Yes
CHGRP	Yes
D1VIDEO	Yes
DS1	Yes
DV6000	Yes
DVBASI	Yes
E100	Yes
E1000	Yes
EC1	Yes
FSTE	Yes

**Table 28-1** *Modifier Support (continued)*

<b>Modifier</b>	<b>ONS 15454</b>
G1000	Yes
GIGE	Yes
HDLC	Yes
HDTV	Yes
ISC1	Yes
MSISC	Yes
OC12	Yes
OC192	Yes
OC3	Yes
OC48	Yes
OC768	Yes
OCH	Yes
OMS	No
OTS	No
OTU3	Yes
POS	Yes
REP	Yes
STS1	Yes
STS12C	Yes
STS192C	Yes
STS24C	Yes
STS18C	Yes
STS36C	Yes
STS3C	Yes
STS48C	Yes
STS6C	Yes
STS9C	Yes
T1	Yes
T3	Yes
VT1	Yes



## INDEX

---

### Numerics

- 1:1 electrical protection. *See* electrical cards
- 1:N electrical protection. *See* electrical cards
- 1+1 optical protection
  - creating groups [12-24](#)
  - deleting [10-10](#)
  - editing [11-83](#)
  - initiating a switch [16-8](#)
  - releasing a switch [18-5](#)
  - retrieving all groups [21-170](#)

---

### A

- Activate User command [1-1](#)
- activating
  - software loads [3-1](#)
  - users [1-1](#)
- ACT-USER command [1-1](#)
- AID
  - AidUnionId [26-13](#)
  - AidUnionId1 [26-20](#)
  - ALL [26-1](#)
  - BAND [26-20](#)
  - BANDWL [26-20](#)
  - BITS [26-21](#)
  - BLSR [26-22](#)
  - CHANNEL [26-22](#)
  - CHGRP [26-24](#)
  - COM [26-24](#)
  - CrossConnectId [26-25](#)
  - CrossConnectId1 [26-29](#)
  - DS1 [26-36](#)

- ENV [26-37](#)
- EQPT [26-37](#)
- ETH [26-40](#)
- FACILITY [26-40](#)
- IPADDRESS [26-43](#)
- LINE [26-43](#)
- LINEWL [26-46](#)
- LNKTERM [26-50](#)
- OSC [26-51](#)
- PRSLOT [26-51](#)
- RFILE [26-52](#)
- SHELF [26-52](#)
- STS [26-52](#)
- SYN [26-56](#)
- SYN\_SRC [26-56](#)
- SYNC\_REF [26-58](#)
- SYNCSW [26-58](#)
- UDC [26-58](#)
- VT [26-59](#)
- WDMANS [26-59](#)
- WLEN [26-60](#)

AidUnionId1 AID [26-20](#)

AidUnionId AID [26-13](#)

AINS soak, editing [11-41](#)

#### alarms

- autonomous messages [17-1](#)
- autonomous messages, cards [17-14](#)
- autonomous messages, security [17-19](#)
- autonomous messages, synchronization [17-21](#)
- BITS [17-7](#)
- equipment without AIDs [17-9](#)
- retrieving for BITS [21-60](#)
- retrieving for cards [21-68](#)

- retrieving for synchronization [21-72](#)
- retrieving log [21-231](#)
- retrieving power level thresholds [21-79](#)
- retrieving status [21-50, 21-56](#)
- retrieving threshold values [21-76](#)
- setting power monitoring thresholds [23-3](#)
- setting thresholds [23-1](#)
- setting thresholds for MXP\_2.5G\_10G and TXP\_MR\_10G cards [23-14](#)
- turning off audible alerts [16-1](#)

alarmtype

- retrieving status [21-55](#)

ALL AID [26-1](#)

Allow Console Port command [2-1](#)

Allow Database Change Message command [2-2](#)

allowing. *See* enabling

Allow Message All command [2-2](#)

Allow Message Security command [2-3](#)

Allow Performance Report All command [2-3](#)

Allow Switch Duplex Equipment command [2-4](#)

Allow Switch to Protection Equipment command [2-5](#)

Allow Switch to Working Equipment command [2-6](#)

Allow User Security command [2-7](#)

ALMTYPE

- deleting [10-3](#)
- entering [12-5](#)

ALS

*See also* lasers

- editing [11-49](#)
- restarting laser after [16-2](#)
- retrieving attributes [21-83](#)

ALW-CONSOLE-PORT command [2-1](#)

ALW-MSG-ALL command [2-2](#)

ALW-MSG-DBCHG command [2-2](#)

ALW-MSG-SECU command [2-3](#)

ALW-PMREPT-ALL command [2-3](#)

ALW-SWDX-EQPT command [2-4](#)

ALW-SWTOPROTN-EQPT command [2-5](#)

ALW-SWTOWKG-EQPT command [2-6](#)

ALW-USER-SECU command [2-7](#)

## ANS

- calculating expected span loss verification [16-14, 16-15](#)
- editing expected span loss verification [11-148](#)
- retrieving attributes [21-451](#)
- retrieving expected span loss value [21-376](#)
- retrieving involved ports [21-259](#)
- starting [16-17](#)

## APC

- enabling [16-2](#)
- modifying attributes [11-50](#)
- retrieving attributes [21-86](#)
- retrieving ports involved in ANS regulation [21-246](#)

APPLY command [3-1](#)

ASAP cards, editing GFP [11-93](#)

audit log, retrieving [21-93](#)

automatic laser shutdown. *See* ALS

automatic protection groups. *See* APC

autonomous messages

*See also* individual message names

- enabling all [2-2](#)
- enabling for PMs [2-3](#)
- enabling for REPT DBCHG command [2-2](#)
- enabling security messages [2-3](#)
- inhibiting all [14-2](#)
- session timeout [4-1](#)

---

## B

backing up the database [8-3](#)

BAND AID [26-20](#)

BANDWL AID [26-20](#)

bidirectional line switched rings. *See* BLSRs

## BITS

- AID [26-21](#)
- alarm messages [17-7](#)
- editing [11-50](#)
- editing synchronization reference list [11-149](#)

- nonalarmed event reports [17-32](#)
- retrieving alarms [21-60](#)
- retrieving conditions [21-114](#)
- retrieving configuration [21-95](#)
- retrieving synchronization reference list [21-385](#)

## BLSRs

- BLSR AID [26-22](#)
- creating [12-2](#)
- deleting [10-2](#)
- editing [11-37](#)
- editing extension byte [11-41](#)
- exercising a switch [13-1](#)
- releasing a switch [18-5](#)
- retrieving information about [21-24](#)
- retrieving path trace information [21-427](#)

building integrated timing supply. *See* BITS

## C

### calculating

- expected span loss verification [16-14, 16-15](#)
- VOA values [16-17](#)

CANC command [4-1](#)

Cancel command [4-1](#)

Cancel User command [4-2](#)

Cancel User Security command [4-2](#)

CANC-USER command [4-2](#)

CANC-USER-SECU command [4-2](#)

### cards

- alarm reports [17-14](#)
- changing service state [19-2](#)
- deleting provisioning [10-8](#)
- initializing [15-7](#)
- nonalarmed event reports [17-37](#)
- provisioning [12-13](#)
- provisioning payload type [11-80](#)
- removing facilities [21-168](#)
- resetting [15-7](#)
- retrieving alarms [21-68](#)

- retrieving data and state parameters [21-153](#)

- retrieving inventory information [21-205](#)

- retrieving PM parameters for a specified type [21-302](#)

### CE-1000-4 cards

*See also* Ethernet

- editing GFP [11-93](#)

- retrieving GFP information [21-191](#)

### CE-100T-8 cards

*See also* Ethernet

- editing GFP [11-93](#)

- retrieving GFP information [21-191](#)

Change Equipment command [5-3](#)

Change Test Access Mode command [5-1](#)

### changing

*See also* editing

*See also* modifying

- database, autonomous report [17-25](#)

- passwords [11-140](#)

- service state [19-1, 19-2, 20-1, 20-2](#)

- TACC mode [5-1](#)

CHANNEL AID [26-22](#)

CHG-ACCMD-<MOD\_TACC> command [5-1](#)

CHG-EQPT command [5-3](#)

CHGRP AID [26-24](#)

circuits, changing TACC mode [5-1](#)

### Cisco IOS

- copying, status report of [17-43](#)

- downloading startup configuration file [8-1](#)

- uploading startup configuration file [8-1](#)

Clear Continuity Check Message Data Base Connectivity Fault Management command [6-1](#)

clearing standing conditions [6-2](#)

clearing the INTRUSION-PSWD condition [6-2](#)

Clear Maintenance End Point Statistics Connectivity Fault Management command [6-3](#)

Clear Security Condition command [6-2](#)

CLR-CCDB-CFM command [6-1](#)

CLR-COND-SECU command [6-2](#)

CLR-MEPSTATS-CFM command [6-3](#)

COM AID [26-24](#)

commands

*See also* individual command names

editing security [11-59](#)

retrieving security level [21-106](#)

conditions

autonomous messages about customer-defined [17-10, 17-13](#)

clearing [6-2](#)

list of available [27-1 to 27-9](#)

retrieving [21-107, 21-110, 21-122](#)

retrieving for BITS [21-114](#)

retrieving for synchronization [21-126](#)

connecting STSs or VTs to the STS specified by the TAP [7-1](#)

Connect Test Access command [7-1](#)

CONN-TACC-<MOD\_TACC> command [7-1](#)

console port

retrieving status [21-129](#)

turning off [14-1](#)

turning on [2-1](#)

Copy Cisco IOS Configuration File command [8-1](#)

Copy File command [8-3](#)

copying Cisco IOS configuration file, status report of [17-43](#)

COPY-IOSCFG command [8-1](#)

COPY-RFILE command [8-3](#)

creating

1+1 optical protection groups [12-24](#)

BLSRs [12-2](#)

cross-connects [12-8](#)

firewall tunnels [12-58](#)

GRE tunnels [12-55](#)

OCHCCs [12-41](#)

OCHNCs [12-42](#)

optical links [12-32](#)

provisionable patchcord terminations [12-33](#)

proxy tunnels [12-58](#)

RMON thresholds [12-47](#)

rolls [12-5, 12-53](#)

static routes [12-54](#)

TADRMAP table entry [12-56](#)

users [12-59](#)

VCGs [12-60](#)

WDMSIDE [12-69](#)

Y-cable protection groups [12-23](#)

cross-connect cards

disabling loopbacks [18-2](#)

enabling switching [2-4](#)

inhibiting switching [14-4](#)

switching [24-1](#)

CrossConnectId AID [26-25](#)

cross-connects

creating [12-8](#)

deleting [10-5](#)

editing [11-62](#)

editing node attributes [11-111](#)

retrieving [21-132](#)

retrieving specified [21-135](#)

CrossConnectId1 AID [26-29](#)

CTC

message log for masked passwords [1-1](#)

request history for masked passwords [1-1](#)

---

## D

database

autonomous report of changes [17-25](#)

backing up and restoring [8-3](#)

date

editing [11-65](#)

retrieving [21-424](#)

setting for system [23-19](#)

DCCs

creating provisionable patchcord terminations [12-33](#)

editing [11-39](#)

retrieving nodes connected by [21-252](#)

DCUs, setting thresholds [23-1](#)

Delete ALMTYPE command [10-3](#)

- Delete BLSR command [10-2](#)
- Delete Bulkroll command [10-3](#)
- Delete Channel Group Network-to-Network Interface command [10-19](#)
- Delete Channel Group QinQ command [10-22](#)
- Delete Cross Connection command [10-5](#)
- Delete Equipment command [10-8](#)
- Delete Ethernet Network-to-Network Interface command [10-19](#)
- Delete Facility Protection Group DWDM command [10-9](#)
- Delete Facility Protection Group OC-N command [10-10](#)
- Delete FOG command [10-11](#)
- Delete FTPSERVER command [10-11](#)
- Delete Link Management Protocol Control Channel command [10-12](#)
- Delete Link Management Protocol Data Link command [10-13](#)
- Delete Maintenance Association Connectivity Fault Management command [10-15](#)
- Delete Maintenance Domain and Maintenance Association mapping Connectivity Fault Management command [10-16](#)
- Delete Maintenance Domain Connectivity Fault Management command [10-15](#)
- Delete Maintenance End Point Connectivity Fault Management command [10-17](#)
- Delete Maintenance Intermediate Point Connectivity Fault Management command [10-18](#)
- Delete OCHCC command [10-21](#)
- Delete Optical Channel Network Connection command [10-22](#)
- Delete Optical Link command [10-13](#)
- Delete Port command [10-1](#)
- Delete Provisionable Patchcord Termination command [10-14, 10-20](#)
- Delete Remote Monitoring Threshold command [10-24](#)
- Delete Resilient Ethernet Protocol command [10-23](#)
- Delete Roll command [10-29](#)
- Delete Route command [10-30](#)
- Delete Route GRE command [10-31](#)
- Delete Target Identifier Address Mapping command [10-31](#)
- Delete Trap Table command [10-32](#)
- Delete Tunnel Firewall command [10-33](#)
- Delete Tunnel Proxy command [10-33](#)
- Delete Wavelength Division Multiplexing Side command [10-41](#)
- deleting
  - 1+1 optical protection group [10-10](#)
  - ALMTYPE [10-3](#)
  - BLSRs [10-2](#)
  - bulk rolling operation [10-3](#)
  - card slot provisioning [10-8](#)
  - cross-connects [10-5](#)
  - DWDM optical links [10-13](#)
  - Ethernet network-to-network interface [10-19](#)
  - firewall tunnels [10-33](#)
  - FOG [10-11](#)
  - FTPSERVER [10-11](#)
  - GRE tunnels [10-31](#)
  - LMP control channel [10-12](#)
  - LMP data link [10-13](#)
  - OCHCCs [10-21](#)
  - OCHNCs [10-22](#)
  - ports [10-1](#)
  - provisionable patchcord terminations [10-14, 10-20](#)
  - proxy tunnels [10-33](#)
  - RMON thresholds [10-24](#)
  - rolls [10-29](#)
  - SNMP traps [10-32](#)
  - static routes [10-30](#)
  - TADRMAP table entry [10-31](#)
  - TAPs [9-1](#)
  - users [10-34](#)
  - VCGs [10-34](#)
  - virtual LAN [10-35](#)
  - wavelength division multiplexing side [10-41](#)
  - Y-cable protection group [10-9](#)
- demultiplexers, setting thresholds [23-1](#)
- disabling
  - See also* inhibiting
  - See also* turning off

- EMS protocol [11-142](#)
- loopbacks [18-2](#)
- OSPF discovery [11-41](#)
- REPT ALM SECU messages [14-3](#)
- REPT DBCHG message [14-2](#)
- REPT EVT SECU messages [14-3](#)
- SHELL protocol [11-142](#)
- SNMP [11-142](#)
- TL1 [11-142](#)
- user accounts [14-8](#)
- Disconnect Test Access command [9-1](#)
- DISC-TACC command [9-1](#)
- DLT-<MOD\_RING> command [10-2](#)
- DLT-<MOD1PAYLOAD> command [10-1](#)
- DLT-ALMTYPE command [10-3](#)
- DLT-BULKROLL-<OCN\_TYPE> command [10-3](#)
- DLT-CRS-<PATH> command [10-4](#)
- DLT-EQPT command [10-8](#)
- DLT-FFP-<MOD2DWDMPAYLOAD> command [10-9](#)
- DLT-FFP-<OCN\_TYPE> command [10-10](#)
- DLT-FTPSEVER command [10-11](#)
- DLT-LMP-CTRL command [10-12](#)
- DLT-LMP-DLINK command [10-13](#)
- DLT-LMP-TLINK command [10-12](#)
- DLT-LNK command [10-13](#)
- DLT-LNKTERM command [10-14](#)
- DLT-MA-CFM command [10-15](#)
- DLT-MD-CFM command [10-15](#)
- DLT-MDMAMAP-CFM command [10-16](#)
- DLT-MEP-CFM command [10-17](#)
- DLT-MIP-CFM command [10-18](#)
- DLT-NNI-CHGRP command [10-19](#)
- DLT-NNI-ETH command [10-19](#)
- DLT-OCHCC command [10-21](#)
- DLT-OCHNC command [10-22](#)
- DLT-QNQ-CHGRP command [10-22](#)
- DLT-QNQ-ETH command [10-20](#)
- DLT-REP command [10-23](#)
- DLT-RMONTH-<MOD2\_RMON> command [10-24](#)
- DLT-ROLL-<MOD\_PATH> command [10-29](#)
- DLT-ROUTE command [10-30](#)
- DLT-ROUTE-GRE command [10-31](#)
- DLT-TADRMAMP command [10-31](#)
- DLT-TRAPTABLE command [10-32](#)
- DLT-TUNNEL-FIREWALL command [10-33](#)
- DLT-TUNNEL-PROXY command [10-33](#)
- DLT-USER-SECU command [10-34](#)
- DLT-VCG command [10-34](#)
- DLT-VLAN command [10-35](#)
- DLT-WDMSIDE command [10-41](#)
- downgrading
  - activating software load during [3-1](#)
  - reverting software load during [3-1](#)
- downloading
  - Cisco IOS startup configuration file [8-1](#)
  - software [8-3](#)
  - software, autonomous messages [17-42](#)
- DS1/E1-56 cards
  - See also* electrical cards
  - editing DS1/T1 ports [11-150](#)
- DS1 AID [26-36](#)
- DS-1 cards
  - See also* electrical cards
  - retrieving facilities configuration [21-386](#)
- DS-3 cards
  - See also* electrical cards
  - retrieving facility properties [21-391](#)
- DS3i-N-12 cards
  - See also* electrical cards
  - editing DS3/T3 ports [11-155](#)
- DS3XM cards
  - See also* electrical cards
  - retrieving facility properties [21-391](#)
  - retrieving test access attributes [21-144](#)
- DWDM
  - creating Y-cable protection groups [12-23](#)
  - deleting OCHCCs [10-21](#)
  - deleting OCHNCs [10-22](#)

- deleting optical links [10-13](#)
- deleting Y-cable protection group [10-9](#)
- editing operating parameters [11-26](#)
- editing TXP\_MR\_2.5G/TXPP\_MR\_2.5G card protection [11-84](#)
- editing Y-cable protection group [11-82](#)
- enabling APC [16-2](#)
- retrieving client configuration parameters [21-16](#)
- retrieving optical attributes and service states [21-266](#)
- retrieving path trace information [21-429](#)
- retrieving protection switching status [21-342](#)

---

## E

### EC-1 cards

*See also* electrical cards

- editing attributes [11-69](#)

- retrieving facility status [21-148](#)

- ED-<GIGE\_TYPE> command [11-1](#)

- ED-<MOD\_PATH> command [11-32](#)

- ED-<MOD\_RING> command [11-37](#)

- ED-<MOD1FCPAYLOAD> command [11-11](#)

- ED-<MOD1FICONPAYLOAD> command [11-19](#)

- ED-<MOD2DWDMPAYLOAD> command [11-26](#)

- ED-<OCN\_TYPE> command [11-38](#)

- ED-ALS command [11-49](#)

- ED-APC command [11-50](#)

- ED-BITS command [11-50](#)

- ED-BULKROLL-<OCN\_TYPE> command [11-53](#)

- ED-CFM command [11-56](#)

- ED-CHGRP command [11-56](#)

- ED-CMD-SECU command [11-59](#)

- ED-COS-ETH command [11-60](#)

- ED-CRS-<PATH> command [11-62](#)

- ED-DAT command [11-65](#)

- ED-DS1 command [11-66](#)

- ED-DSCP- command [11-68](#)

- ED-EC1 command [11-69](#)

- ED-EFM command [11-72](#)

- ED-EQPT command [11-75](#)

- ED-ETH command [11-73](#)

- ED-FAC command [11-80](#)

- ED-FFP-<MOD2DWDMPAYLOAD> command [11-82](#)

- ED-FFP-<OCN\_TYPE> command [11-83](#)

- ED-FFP-OCH command [11-84](#)

- ED-FSTE command [11-87](#)

- ED-FTPSERVER command [11-91](#)

- ED-G1000 command [11-91](#)

- ED-GFP command [11-93](#)

- ED-HDLC command [11-94](#)

- Edit ALS command [11-49](#)

- Edit APC command [11-50](#)

- Edit BITS command [11-50](#)

- Edit BLSR command [11-37](#)

- Edit Bulkroll command [11-53](#)

- Edit Channel Group command [11-56](#)

- Edit Channel Group QinQ command [11-143](#)

- Edit Command Security command [11-59](#)

- Edit Connectivity Fault Management command [11-56](#)

- Edit Cross-connect command [11-62](#)

- Edit Date and Time command [11-65](#)

- Edit Digital Facility T3 command [11-155](#)

- Edit DS1 command [11-66](#)

- Edit DWDM command [11-26](#)

- Edit Electrical Carrier command [11-69](#)

- Edit Equipment command [11-75](#)

- Edit Ethernet command [11-1, 11-73](#)

- Edit Ethernet Cost of Service Table command [11-60](#)

- Edit Ethernet in the First Mile command [11-72](#)

- Edit ETH or CHGRP command [11-68](#)

- Edit Facility command [11-80](#)

- Edit Facility Protection Group DWDM command [11-82](#)

- Edit Facility Protection Group OC-N command [11-83](#)

- Edit Facility Protection Group Optical Channel command [11-84](#)

- Edit Fan-Out-Group command [11-87](#)

- Edit Fast Ethernet command [11-87](#)

- Edit Fibre Channel command [11-11](#)

- Edit FICON command [11-19](#)
- Edit FTPSERVER command [11-91](#)
- Edit G1000 command [11-91](#)
- Edit GFP command [11-93](#)
- Edit HDLC command [10-12, 11-94](#)
- editing
  - See also* changing
  - See also* modifying
  - 1+1 optical protection [11-83](#)
  - AINS soak [11-41](#)
  - ALS [11-49](#)
  - BITS attributes [11-50](#)
  - BLSRs [11-37](#)
  - command security [11-59](#)
  - cross-connects [11-62](#)
  - date and time [11-65](#)
  - DCCs [11-39](#)
  - DS1/E1-56 card DS1/T1 port [11-150](#)
  - DS3i-N-12 card DS3/T3 port [11-155](#)
  - DWDM operating parameters [11-26](#)
  - EC-1 card attributes [11-69](#)
  - equipment slot attributes [11-75](#)
  - Ethernet attributes [11-1](#)
  - Ethernet commands [11-73](#)
  - Ethernet cost of service table [11-60](#)
  - ETH QinQ table [11-144](#)
  - expected span loss verification [11-148](#)
  - Fibre Channel attributes [11-11](#)
  - FICON attributes [11-19](#)
  - FTPSERVER [11-91](#)
  - G1000 ports [11-91](#)
  - GFP [11-93](#)
  - HDLC attributes [10-12, 11-94](#)
  - J1 path trace [11-41](#)
  - Layer 2 Ethernet [11-95](#)
  - LMP [11-100](#)
  - LMP control channel [11-100](#)
  - LMP data link [11-103](#)
  - LMP TE link [11-102](#)
  - node attributes [11-109](#)
  - node path attributes [11-111](#)
  - node timing [11-112](#)
  - OCHCCs [11-125](#)
  - OCHNCs [11-126](#)
  - OCH service parameters [11-114](#)
  - OMS facility attributes [11-129](#)
  - optical attributes [11-38](#)
  - optical link states [11-104](#)
  - OTS [11-130](#)
  - OTU2 attributes [11-133](#)
  - port information for Fast Ethernet cards [11-87](#)
  - POS [11-141](#)
  - provisional patchcord terminations [11-105](#)
  - rolls [11-53](#)
  - SDBER [11-119](#)
  - SSM [11-40](#)
  - STS and VT paths [11-32](#)
  - synchronization reference list [11-149](#)
  - TACC attribute for DS1 access on a DS3XM card [11-66](#)
  - trace-related OCH facilities [11-160](#)
  - trap table destination entry [11-160](#)
  - TXP\_MR\_2.5G/TXPP\_MR\_2.5G card protection [11-84](#)
  - user security [11-164](#)
  - VCGs [11-165](#)
  - VLAN [11-166](#)
  - wavelength division multiplexing side [11-175](#)
  - wavelengths [11-43](#)
  - WDMANS [11-169](#)
  - XTC card DS1/T1 port [11-150](#)
  - Y-cable protection group [11-82](#)
- Edit Layer 2 Ethernet command [11-95](#)
- Edit Link command [11-104](#)
- Edit Link Management Protocol command [11-100](#)
- Edit Link Management Protocol Control Channel command [11-100](#)
- Edit Link Management Protocol Data Link command [11-103](#)

- Edit Link Management Protocol Traffic Engineering Link command [11-102](#)
- Edit Link Monitoring Ethernet in the First Mile command [11-99](#)
- Edit Maintenance Association Connectivity Fault Management command [11-106](#)
- Edit Maintenance Intermediate Point Connectivity Fault Management command [11-108](#)
- Edit Network Element General [11-109](#)
- Edit Network Element Path command [11-111](#)
- Edit Network Element Synchronization command [11-112](#)
- Edit OCHCC command [11-125](#)
- Edit OCHNC command [11-126](#)
- Edit OC-N command [11-38](#)
- Edit Optical Channel command [11-114](#)
- Edit Optical Multiplex Section command [11-129](#)
- Edit Optical Transport Section command [11-130](#)
- Edit Optical Transport Unit Level 2 command [11-133](#)
- Edit Password command [11-140](#)
- Edit POS command [11-141](#)
- Edit Protocol command [11-142](#)
- Edit Provisionable Patchcord Termination command [11-105](#)
- Edit Resilient Ethernet Protocol command [11-146](#)
- Edit Roll command [11-146](#)
- Edit Segment Topology Change Notification Resilient Ethernet Protocol command [11-148](#)
- Edit Span Loss Verification WDM ANS command [11-148](#)
- Edit STS and VT Paths [11-32](#)
- Edit Synchronization command [11-149](#)
- Edit Trace OCH Facility command [11-160](#)
- Edit Trace Optical Transport Unit Level 2 command [11-162](#)
- Edit Trace Optical Transport Unit Level 3 command [11-163](#)
- Edit Trap Table [11-160](#)
- Edit VLAN command [11-166](#)
- Edit VLAN Load Balancing Resilient Ethernet Protocol command [11-168](#)
- Edit WDMANS command [11-169](#)
- ED-L2-ETH command [11-95](#)
- ED-LM-EFM command [11-99](#)
- ED-LNK command [11-104](#)
- ED-LNKTERM command [11-105](#)
- ED-MA-CFM command [11-106](#)
- ED-MIP-CFM command [11-108](#)
- ED-NE-GEN command [11-109](#)
- ED-NE-PATH command [11-111](#)
- ED-NE-SYNCN command [11-112](#)
- ED-OCHCC command [11-125](#)
- ED-OCH command [11-114](#)
- ED-OCHNC command [11-126](#)
- ED-OMS command [11-129](#)
- ED-OTS command [11-130](#)
- ED-OTU2 command [11-133](#)
- ED-PID command [11-140](#)
- ED-POS command [11-141](#)
- ED-PROTOCOL command [11-142](#)
- ED-QNQ-CHGRP command [11-143](#)
- ED-QNQ-ETH command [11-144](#)
- ED-REP command [11-146](#)
- ED-ROLL-<MOD\_PATH> command [11-146](#)
- ED-SLV-WDMANS command [11-148](#)
  - retrieving provisioned value [21-376](#)
- ED-STCN-REP command [11-148](#)
- ED-SYNCN command [11-149](#)
- ED-T1 command [11-150](#)
- ED-T3 command [11-155](#)
- ED-TRAPTABLE command [11-160](#)
- ED-TRC-OCH command [11-160](#)
- ED-TRC-OTU2 command [11-162](#)
- ED-TRC-OTU3 command [11-163](#)
- ED-USER-SECU command [11-164](#)
- ED-VCG command [11-165](#)
- ED-VLAN command [11-166](#)
- ED-VLB-REP command [11-168](#)
- ED-WDMSIDE command [11-175](#)
- electrical cards
  - See also* DS-1 cards
  - See also* DS-3 cards

- See also* EC-1 cards
- See also* DS1/E1-56 cards
- See also* DS3i-N-12 cards
- disabling loopbacks [18-2](#)
- enabling loopbacks [16-4](#)
- enabling protection switching [2-5, 2-6](#)
- inhibiting protection switching [14-6](#)
- protection switching [24-2, 24-4](#)
- provisioning protection [12-13](#)
- upgrading from low density to high density [5-3](#)
- EMS protocol
  - disabling [11-142](#)
  - enabling [11-142](#)
  - retrieving status [21-350](#)
- enabling
  - all autonomous messages [2-2](#)
  - APC [16-2](#)
  - disabled user ID [2-7](#)
  - EMS protocol [11-142](#)
  - loopbacks [16-4](#)
  - OSPF discovery [11-41](#)
  - PM reporting [2-3](#)
  - REPT ALM SECU messages [2-3](#)
  - REPT DBCHG messages [2-2](#)
  - REPT EVT SECU messages [2-3](#)
  - SHELL protocol [11-142](#)
  - SNMP [11-142](#)
  - switching for electrical protection cards [2-5, 2-6](#)
  - switching on cross-connect cards [2-4](#)
  - TL1 [11-142](#)
- ENT-<MOD\_RING> command [12-2](#)
- ENT-<MOD1PAYLOAD> command [12-1](#)
- ENT-ALMTYPE command [12-5](#)
- ENT-BULKROLL-<OCN\_TYPE> command [12-5](#)
- ENT-CRS-<PATH> command [12-8](#)
- ENT-EQPT command [12-13](#)
- Enter BLSR command [12-2](#)
- Enter Channel Group QinQ command [12-44](#)
- Enter Channel Group Network-to-Network Interface command [12-40](#)
- entering
  - Alarm types on the fly [12-5](#)
  - FTP server entries [12-27](#)
  - link management protocol data link [12-30](#)
  - link management protocol traffic engineering link [12-30](#)
  - LMP control channel [12-28](#)
  - network-to-network interface ethernet [12-39](#)
  - VLAN [12-62](#)
- Enter Link Management Protocol Control Channel command [12-28](#)
- Enter Maintenance Association Connectivity Fault Management command [12-34](#)
- Enter Maintenance Domain and Maintenance Association mapping Connectivity Fault Management command [12-36](#)
- Enter Maintenance Domain Connectivity Fault Management command [12-35](#)
- Enter Maintenance End Point Connectivity Fault Management command [12-38](#)
- Enter Maintenance Intermediate Point Connectivity Fault Management command [12-38](#)
- Enter Network-to-Network Interface Ethernet command [12-39](#)
- Enter OCHCC command [12-41](#)
- Enter OCHNC command [12-42](#)
- Enter Optical Link command [12-32](#)
- Enter Port command [12-1](#)
- Enter Provisionable Patchcord Termination command [12-33](#)
- Enter QinQ Ethernet command [12-45](#)
- Enter Resilient Ethernet Protocol command [12-46](#)
- Enter RMON Threshold command [12-47](#)
- Enter Roll command [12-53](#)
- Enter Route command [12-54](#)
- Enter Route GRE command [12-55](#)
- Enter TID Address Mapping [12-56](#)
- Enter Trap Table command [12-57](#)
- Enter Tunnel Firewall command [12-58](#)
- Enter Tunnel Proxy command [12-58](#)

Enter User Security command [12-59](#)  
 Enter VCG command [12-60](#)  
 Enter Virtual VLAN command [12-62](#)  
 Enter Wavelength Division Multiplexing Side  
 command [12-69](#)  
 ENT-FFP-<MOD2DWDMPAYLOAD> command [12-23](#)  
 ENT-FFP-<OCN\_TYPE> command [12-24](#)  
 ENT-FOG command [12-27](#)  
 ENT-FTPSERVER command [12-27](#)  
 ENT-LMP-CTRL command [12-28](#)  
 ENT-LMP-DLINK command [12-30](#)  
 ENT-LMP-TLINK command [12-30](#)  
 ENT-LNK command [12-32](#)  
 ENT-LNKTERM command [12-33](#)  
 ENT-MA-CFM) command [12-34](#)  
 ENT-MD-CFM command [12-35](#)  
 ENT-MDMAMAP-CFM command [12-36](#)  
 ENT-MEP-CFM command [12-38](#)  
 ENT-MIP-CFM command [12-38](#)  
 ENT-NNI-CHGRP command [12-40](#)  
 ENT-NNI-ETH command [12-39](#)  
 ENT-OCHCC command [12-41](#)  
 ENT-OCHNC command [12-42](#)  
 ENT-QNQ-CHGRP command [12-44](#)  
 ENT-QNQ-ETH command [12-45](#)  
 ENT-REP command [12-46](#)  
 ENT-RMONTH-<MOD2\_RMON> command [12-47](#)  
 ENT-ROLL-<MOD\_PATH> command [12-53](#)  
 ENT-ROUTE command [12-54](#)  
 ENT-ROUTE-GRE command [12-55](#)  
 ENT-TADRMAMAP command [12-56](#)  
 ENT-TRAPTABLE command [12-57](#)  
 ENT-TUNNEL-FIREWALL command [12-58](#)  
 ENT-TUNNEL-PROXY command [12-58](#)  
 ENT-USER-SECU command [12-59](#)  
 ENT-VCG command [12-60](#)  
 ENT-VLAN command [12-62](#)  
 ENT-WDMSIDE command [12-69](#)  
 ENV AID [26-37](#)

environmental alarms  
     autonomous reports [17-10, 17-13](#)  
     nonalarmed event reports [17-34](#)  
     retrieving [21-63](#)  
     retrieving attributes [21-88](#)  
 environmental conditions, retrieving [21-118](#)  
 EPT DBCHG message [17-25](#)  
 EQPT AID [26-37](#)  
 ESCON, retrieving settings [21-161](#)  
 ETH AID [26-40](#)  
 Ethernet  
     *See also* ML-Series Ethernet cards  
     editing attributes [11-1](#)  
     editing Fast Ethernet port information [11-87](#)  
     editing POS [11-141](#)  
     retrieving back-end POS port information [21-341](#)  
     retrieving information about Fast Ethernet  
     cards [21-179, 21-181](#)  
 Exercise Protection Switch command [13-1](#)  
 exercising a BLSR protection switch [13-1](#)  
 EX-SW-<OCN\_BLSR> command [13-1](#)  
 external controls  
     operating [16-3](#)  
     releasing [18-1](#)  
     retrieving attributes [21-87](#)  
     retrieving states [21-167](#)  
     setting attributes [23-4, 23-5](#)

---

## F

FACILITY AID [26-40](#)  
 Fast Ethernet cards. *See* Ethernet  
 FC\_MR-4 cards  
     disabling loopbacks [18-2](#)  
     editing Fibre Channel attributes [11-11](#)  
     editing GFP [11-93](#)  
     enabling loopbacks [16-4](#)  
     retrieving ESCON settings [21-161](#)  
     retrieving FICON settings [21-9](#)

retrieving GFP information [21-191](#)

retrieving port attributes [21-1](#)

Fibre Channel. *See* FC\_MR-4 cards

## FICON

editing attributes [11-19](#)

retrieving settings [21-9](#)

## firewall tunnels

creating [12-58](#)

deleting [10-33](#)

retrieving information about [21-438](#)

## FOG

deleting [10-11](#)

## forcing

rolls [11-146](#)

users off an NE [4-2](#)

valid signal on a roll [11-53](#)

## FTPSEVER

creating server entries [12-27](#)

deleting [10-11](#)

editing [11-91](#)

retrieving status [21-185](#)

## G

### G1000-4 cards

editing ports [11-91](#)

retrieving facilities configuration [21-187](#)

GCCs, creating provisionable patchcord terminations [12-33](#)

### GFP

editing [11-93](#)

retrieving information [21-191](#)

GIGE, retrieving information [21-192](#)

GNE, retrieving node attributes [21-234](#)

### GRE tunnels

creating [12-55](#)

deleting [10-31](#)

viewing list [21-374](#)

## H

### HDLC

editing attributes [10-12, 11-94](#)

retrieving attributes [21-203](#)

## I

INH-CONSOLE-PORT command [14-1](#)

Inhibit Console Port command [14-1](#)

Inhibit Database Change Message command [14-2](#)

### inhibiting

*See also* disabling

*See also* turning off

all autonomous messages [14-2](#)

cross-connect switching [14-4](#)

electrical card protection switching [14-6](#)

protection switching [14-5](#)

Inhibit Message All command [14-2](#)

Inhibit Message Security command [14-3](#)

Inhibit Performance Report All command [14-3](#)

Inhibit Switch Duplex Equipment command [14-4](#)

Inhibit Switch to Protection Equipment command [14-5](#)

Inhibit Switch to Working Equipment command [14-6](#)

Inhibit User Security command [14-8](#)

INH-MSG-ALL command [14-2](#)

INH-MSG-DBCHG command [14-2](#)

INH-MSG-SECU command [14-3](#)

INH-PMREPT-ALL command [14-3](#)

INH-SWDX-EQPT command [14-4](#)

INH-SWTOPROTN-EQPT command [14-5](#)

INH-SWTOWKG-EQPT command [14-6](#)

INH-USER-SECU command [14-8](#)

Initialize Register command [15-1](#)

Initialize System command [15-7](#)

### initializing

cards [15-7](#)

performance monitoring registers [15-1](#)

INIT-REG-<MOD2> command [15-1](#)

INIT-SYS command [15-7](#)  
 INTRUSION-PSWD condition, clearing [6-2](#)  
 IP address  
   editing settings [11-109](#)  
   IPADDRESS AID [26-43](#)  
   retrieving for a node [21-234](#)  
   retrieving for DCC-connected nodes [21-252](#)

---

## J

J1 path trace. *See* path trace

---

## L

lasers  
   *See also* ALS  
   restarting [16-2](#)  
 LCAS, provisioning [12-60](#)  
 LINE AID [26-43](#)  
 LINEWL AID [26-46](#)  
 Link Management Protocol Data Link  
   entering [12-30](#)  
 Link Management Protocol Traffic Engineering link  
   entering [12-30](#)  
 LNKTERM AID [26-50](#)  
 logging out  
   of an active session [4-2](#)  
   users involuntarily [4-2](#)  
 loopbacks  
   disabling [18-2](#)  
   enabling [16-4](#)

---

## M

Maintenance user, description [12-59](#)  
 mapping TIDs to subtending NEs [12-56](#)  
 masked passwords [1-1](#), [11-140](#), [12-59](#)  
 messages. *See* autonomous messages

ML-Series Ethernet cards  
   *See also* Ethernet  
   retrieving console port status [21-129](#)  
   turning off the console port [14-1](#)  
   turning on the console port [2-1](#)  
 modifiers [28-1](#)  
 modifying  
   *See also* changing  
   *See also* editing  
   APC attributes [11-50](#)  
 multiplexers, setting thresholds [23-1](#)  
 multishelf mode, editing [11-109](#)  
 MXP\_2.5G\_10G cards, setting thresholds [23-1](#)

---

## N

NE. *See* nodes  
 Network-to-Network Interface Ethernet  
   entering [12-39](#)  
 nodes  
   editing attributes [11-109](#)  
   editing path attributes [11-111](#)  
   editing timing [11-112](#)  
   mapping TIDs to subtending NEs [12-56](#)  
   retrieving equipment information [21-262](#)  
   retrieving general attributes [21-248](#)  
   retrieving internal OCH path [21-299](#)  
   retrieving IP address [21-234](#)  
   retrieving path-level attributes [21-255](#)  
   retrieving synchronization attributes [21-257](#)  
 nonalarmed events  
   related to starting a session [17-45](#)  
   reported for BITS [17-32](#)  
   reported for cards [17-37](#)  
   reported for environmental alarms [17-34](#)  
   reported for equipment without AIDs [17-33](#)  
   reported for RMON [17-26](#)  
   reports for synchronization [17-46](#)  
   security reports [17-44](#)

**O**

OADM cards, setting thresholds [23-1](#)

## OCHCCs

creating [12-41](#)

deleting [10-21](#)

editing [11-125](#)

OCH facilities, editing service parameters [11-114](#)

## OCHNCs

creating [12-42](#)

deleting [10-22](#)

editing [11-126](#)

retrieving wavelength connection provisioning information [21-280](#)

## OMS facilities

editing attributes [11-129](#)

retrieving parameters [21-281](#)

Operate Alarm Cutoff All command [16-1](#)

Operate ALS command [16-2](#)

Operate APC command [16-2](#)

Operate External Control command [16-3](#)

Operate Loopback command [16-4](#)

Operate Loopback Ethernet in the First Mile command [16-6](#)

Operate Protection Switch DWDM command [16-7](#)

Operate Protection Switch OCH command [16-12](#)

Operate Protection Switch OC-N command [16-8](#)

Operate Protection Switch STS or VT command [16-11](#)

Operate Span Loss Verification WDM ANS command [16-14, 16-15](#)

Operate Synchronization Switch command [16-15](#)

Operate VLAN Load Balancing Resilient Ethernet Protocol command [16-16](#)

Operate WDM ANS command [16-17](#)

operating external controls [16-3](#)

OPR-ACO-ALL command [16-1](#)

OPR-ALS command [16-2](#)

OPR-APC command [16-2](#)

OPR-EXT-CONT command

auditing results [21-167](#)

description [16-3](#)

OPR-LPBK-<MOD2> command [16-4](#)

OPR-LPBK-EFM command [16-6](#)

OPR-PROTNSW-<OCN\_TYPE> command [16-8](#)

OPR-PROTNSW-<PATH> command [16-11](#)

OPR-PROTNSW-OCH command [16-12](#)

OPR-SLV-WDMANS command [16-14, 16-15](#)

OPR-SYNCNSW command [16-15](#)

OPR-VLB-REP command [16-16](#)

OPR-WDMANS command [16-17](#)

optical amplifiers, setting thresholds [23-1](#)

## optical cards

disabling loopbacks [18-2](#)

editing attributes [11-38](#)

enabling loopbacks [16-4](#)

retrieving attributes [21-27](#)

retrieving switching state [21-344](#)

## optical links

creating [12-32](#)

editing states [11-104](#)

retrieving list [21-223](#)

optical protection. *See* 1+1 optical protection

## OSCs

OSC AID [26-51](#)

setting thresholds [23-1](#)

OSFP, enabling discovery of [11-41](#)

OSI-over-IP [12-55](#)

## OTS

editing [11-130](#)

retrieving parameters [21-286](#)

## OTU2

editing attributes [11-133](#)

retrieving parameters [21-292](#)

**P**

## passwords

changing [11-140](#)

commands that mask [1-1](#)

- editing by Superuser [11-164](#)
  - Path Protection
    - retrieving switching state [21-345](#)
    - switching protection [16-11](#)
  - path trace
    - editing J1 [11-41](#)
    - editing related OCH facilities [11-160](#)
    - retrieving DWDM information [21-429](#)
    - retrieving information [21-427](#)
    - retrieving message contents [21-351, 21-357](#)
  - payload
    - provisioning type [11-80](#)
    - retrieving type for a facility [21-168](#)
  - performance monitoring
    - enabling autonomous messages [2-3](#)
    - inhibiting reports for a session [14-3](#)
    - initializing registers [15-1](#)
    - retrieving all reporting schedules [21-336](#)
    - retrieving BDFL parameters [21-94](#)
    - retrieving mode [21-316, 21-330, 21-332](#)
    - retrieving parameters for a specified card type [21-302](#)
    - retrieving schedule [21-333](#)
    - retrieving threshold levels [21-399](#)
    - retrieving thresholds [21-412](#)
    - scheduled reports [17-51](#)
    - scheduling reports [22-1](#)
    - setting data collection mode [23-10, 23-11](#)
  - PID [1-2](#)
  - ports
    - deleting [10-1](#)
    - editing DS1/T1 [11-150](#)
    - editing DS3/T3 [11-155](#)
    - editing Fast Ethernet information [11-87](#)
    - editing G1000 [11-91](#)
    - involved in ANS [21-259](#)
    - provisioning PPMs [12-1](#)
    - provisioning UDP [12-57](#)
    - retrieving 10GIGE parameters [21-44](#)
    - retrieving Fibre Channel attributes [21-1](#)
    - retrieving FICON settings [21-9](#)
    - retrieving status for console ports [21-129](#)
    - turning off console port [14-1](#)
    - turning on console ports [2-1](#)
  - POS
    - editing [11-141](#)
    - retrieving back-end port information [21-341](#)
  - power
    - retrieving ROADM optical power monitoring parameters [21-285](#)
    - retrieving thresholds [21-79](#)
    - setting monitoring thresholds [23-3](#)
  - PPMs
    - provisioning [12-1](#)
    - retrieving inventory information [21-205](#)
  - provisionable patchcords
    - creating terminations [12-33](#)
    - deleting terminations [10-14, 10-20](#)
    - editing terminations [11-105](#)
    - retrieving termination information [21-230](#)
  - provisioning
    - cards [12-13](#)
    - deleting for card slots [10-8](#)
    - LCAS [12-60](#)
    - payload type [11-80](#)
    - signal type [11-80](#)
    - SNMP trap destination [12-57](#)
    - specified PPMs [12-1](#)
    - UDP port [12-57](#)
  - Provisioning user, description [12-59](#)
  - proxy tunnels
    - creating [12-58](#)
    - deleting [10-33](#)
    - retrieving information about [21-439](#)
  - PR SLOT AID [26-51](#)
- 
- Q**
- QNQ-ETH

editing [11-144](#)

## R

Release External Control command [18-1](#)

Release Loopback command [18-2](#)

Release Loopback Ethernet in the First Mile command [18-4](#)

Release Protection Switch command

OCH [18-8](#)

Release Protection Switch DWDM command [18-4](#)

Release Protection Switch OCH [18-7](#)

Release Protection Switch OC-N command [18-5](#)

Release Protection Switch STS or VT command [18-6](#)

Release Synchronization Switch command [18-8](#)

releasing

external controls [18-1](#)

SONET line protection switch [18-5](#)

SONET path protection switch command [18-6](#)

synchronization switch [18-8](#)

TXPP\_MR\_2.5G protection switch [18-7](#)

TXPP\_MR\_2.5G protection switches [18-8](#)

Remove Equipment command [19-2](#)

Remove Facility command [19-1](#)

removing

card facilities [21-168](#)

facility from service [19-1](#)

Report Alarm BITS message [17-7](#)

Report Alarm Common message [17-9](#)

Report Alarm Environment message [17-10, 17-13](#)

Report Alarm Equipment message [17-14](#)

Report Alarm message [17-1](#)

Report Alarm Security message [17-19](#)

Report Alarm Synchronization message [17-21](#)

Report Database Change message [17-25](#)

Report Event BITS message [17-32](#)

Report Event Cisco IOS Configuration File message [17-43](#)

Report Event Common message [17-33](#)

Report Event Environment message [17-34](#)

Report Event Equipment message [17-37](#)

Report Event message [17-26](#)

Report Event Security message [17-44](#)

Report Event Session message [17-45](#)

Report Event Software Download message [17-42](#)

Report Event Synchronization message [17-46](#)

Report Performance Monitoring message [17-51](#)

reports. *See* autonomous messages

Report Switch message [17-57](#)

REPT ALM <MOD2ALM> message [17-1](#)

REPT ALM BITS message [17-7](#)

REPT ALM COM message [17-9](#)

REPT ALM ENV message [17-10, 17-13](#)

REPT ALM EQPT message [17-14](#)

REPT ALM SECU message

description [17-19](#)

disabling [14-3](#)

REPT ALM SYNCN message [17-21](#)

REPT DBCHG message

disabling [14-2](#)

enabling [2-2](#)

REPT EVT <MOD2ALM> message [17-26](#)

REPT EVT BITS message [17-32](#)

REPT EVT COM message [17-33](#)

REPT EVT ENV message [17-34](#)

REPT EVT EQPT message [17-37](#)

REPT EVT FXFR message [17-42](#)

REPT EVT IOSCFG message [17-43](#)

REPT EVT SECU message

description [17-44](#)

disabling [14-3](#)

REPT EVT SESSION message [17-45](#)

REPT EVT SYNCN message [17-46](#)

REPT PM <MOD2> message [17-51](#)

REPT SW message [17-57](#)

resetting cards [15-7](#)

restarting lasers [16-2](#)

Restore Equipment command [20-2](#)

- Restore Facility command [20-1](#)
- restoring the database [8-3](#)
- Retrieve 10GIGE command [21-44](#)
- Retrieve Alarm All command [21-56](#)
- Retrieve Alarm BITS command [21-60](#)
- Retrieve Alarm command [21-50](#)
- Retrieve Alarm Environment command [21-63](#)
- Retrieve Alarm Equipment command [21-68](#)
- Retrieve Alarm Synchronization command [21-72](#)
- Retrieve Alarm Threshold command [21-76](#)
- Retrieve Alarm Threshold Equipment command [21-79](#)
- Retrieve Alarmtype command [21-55](#)
- Retrieve ALS command [21-83](#)
- Retrieve APC command [21-86](#)
- Retrieve Attribute Control command [21-87](#)
- Retrieve Attribute Environment command [21-88](#)
- Retrieve Audit Log command [21-93](#)
- Retrieve BFDL Performance Monitoring command [21-94](#)
- Retrieve BITS command [21-95](#)
- Retrieve BLSR command [21-24](#)
- Retrieve Bulkroll command [21-98](#)
- Retrieve Command Security command [21-106](#)
- Retrieve Condition All command [21-110](#)
- Retrieve Condition BITS command [21-114](#)
- Retrieve Condition command [21-107](#)
- Retrieve Condition Equipment command [21-122](#)
- Retrieve Condition Synchronization command [21-126](#)
- Retrieve Connectivity Fault Management command [21-102](#)
- Retrieve Console Port command [21-129](#)
- Retrieve Cost of Service Ethernet command [21-130](#)
- Retrieve Cross-connect command [21-132](#)
- Retrieve Cross-connect STS or VT command [21-135](#)
- Retrieve Default Security command [21-142](#)
- Retrieve DS1 command [21-144](#)
- Retrieve DWDM command [21-16](#)
- Retrieve Electrical Carrier command [21-148](#)
- Retrieve Environmental Condition command [21-118](#)
- Retrieve Equipment command [21-153](#)
- Retrieve ESCON command [21-161](#)
- Retrieve Ethernet command [21-162](#)
- Retrieve Ethernet in the First Mile command [21-151](#)
- Retrieve External Control command [21-167](#)
- Retrieve Facility command [21-168](#)
- Retrieve Facility Protection Group command [21-170](#)
- Retrieve Facility Protection Group DWDM command [21-173](#)
- Retrieve Facility Protection Group OCH command [21-177, 21-178](#)
- Retrieve Facility Protection Group OC-N command [21-174](#)
- Retrieve FAN-Out-Group command [21-179](#)
- Retrieve Fast Ethernet command [21-179, 21-181](#)
- Retrieve Fibre Channel command [21-1](#)
- Retrieve FICON command [21-9](#)
- Retrieve FTPSERVER command [21-185](#)
- Retrieve G1000 command [21-187](#)
- Retrieve GFP command [21-191](#)
- Retrieve Gigabit Ethernet command [21-192](#)
- Retrieve GRE command [21-374](#)
- Retrieve HDLC command [21-203](#)
- Retrieve Header command [21-204](#)
- Retrieve Inventory command [21-205](#)
- Retrieve Layer 2 Ethernet command [21-211](#)
- Retrieve Layer 2 topology command [21-214](#)
- Retrieve Link command [21-223](#)
- Retrieve Link Management Protocol command [21-217, 21-220, 21-222](#)
- Retrieve Link Management Protocol Control Channel command [21-218](#)
- Retrieve Link Monitoring Ethernet in the First Mile command [21-215](#)
- Retrieve Log command [21-231](#)
- Retrieve Maintenance Association Connectivity Fault Management command [21-232](#)
- Retrieve Maintenance Domain and Maintenance Association mapping Connectivity Fault Management command [21-238](#)
- Retrieve Maintenance Domain Connectivity Fault Management command [21-237](#)

- Retrieve Maintenance End Point Connectivity Fault Management command [21-239](#)
- Retrieve Maintenance End Point Continuity Check Message Data Base Connectivity Fault Management command [21-240](#)
- Retrieve Maintenance End Point Statistics Connectivity Fault Management command [21-242](#)
- Retrieve Maintenance Intermediate Point Connectivity Fault Management command [21-244](#)
- Retrieve Maintenance Intermediate Point Continuity Check Message Data Base Connectivity Fault Management command [21-245](#)
- Retrieve Map Network [21-234](#)
- Retrieve Network APC [21-246](#)
- Retrieve Network Element General command [21-248](#)
- Retrieve Network Element IP map [21-252](#)
- Retrieve Network Element Path command [21-255](#)
- Retrieve Network Element Synchronization command [21-257](#)
- Retrieve Network Element Type command [21-262](#)
- Retrieve Network Element WDM ANS command [21-259](#)
- Retrieve Network Image Signature command [21-251](#)
- Retrieve Network Key Information command [21-253](#)
- Retrieve Network-to-Network Interface Channel Group command [21-263](#)
- Retrieve Network-to-Network Interface Ethernet command [21-264](#)
- Retrieve OCH command [21-266](#)
- Retrieve OCHNC command [21-280](#)
- Retrieve OC-N command [21-27](#)
- Retrieve OMS command [21-281](#)
- Retrieve Operation Mode Packet Transport System command [21-286](#)
- retrieve optical channel client connection [21-278](#)
- Retrieve Optical Monitoring Parameter command [21-285](#)
- Retrieve OTS command [21-286](#)
- Retrieve OTU2 command [21-292](#)
- Retrieve Packet Transport System command [21-354](#)
- Retrieve Path OCH command [21-299](#)
- Retrieve Path Trace command [21-351, 21-357](#)
- Retrieve Performance command [21-302](#)
- Retrieve Performance Mode of PM Data Collection (STS) command [21-316, 21-330](#)
- Retrieve Performance Mode of PM Data Collection (VT) [21-332](#)
- Retrieve Performance Monitoring Schedule command [21-333](#)
- Retrieve Performance Schedule All command [21-336](#)
- Retrieve POS command [21-341](#)
- Retrieve Protection Switch DWDM command [21-342](#)
- Retrieve Protection Switch OCH command [21-347, 21-348](#)
- Retrieve Protection Switch OC-N command [21-344](#)
- Retrieve Protection Switch STS or VT command [21-345](#)
- Retrieve Protocol command [21-350](#)
- Retrieve Provisionable Patchcord Termination command [21-230](#)
- Retrieve QinQ Channel Group command [21-355](#)
- Retrieve Resilient Ethernet Protocol command [21-359](#)
- Retrieve RMON Threshold command [21-361](#)
- Retrieve Roll command [21-372](#)
- Retrieve Route command [21-373](#)
- Retrieve Service Type command [21-384](#)
- Retrieve Span Loss Verification WDM ANS command [21-376](#)
- Retrieve STS command [21-378](#)
- Retrieve STS or VT command [21-37](#)
- Retrieve Synchronization command [21-385](#)
- Retrieve T1 Facility command [21-386](#)
- Retrieve T3 Facility command [21-391](#)
- Retrieve TACC command [21-395](#)
- Retrieve Threshold All command [21-412](#)
- Retrieve Threshold command [21-399](#)
- Retrieve TID Address Mapping [21-398](#)
- Retrieve Time of Day command [21-424](#)
- Retrieve Trace Client command [21-427](#)
- Retrieve Trace OCH command [21-429](#)
- Retrieve Trace Optical Transport Unit Level 2 command [21-433](#)
- Retrieve Trace Optical Transport Unit Level 3 command [21-436](#)
- Retrieve Trap Table command [21-426](#)
- Retrieve Tunnel Firewall command [21-438](#)

- Retrieve Tunnel Proxy command [21-439](#)
- Retrieve user, description [12-59](#)
- Retrieve User Security command [21-440](#)
- Retrieve VCG command [21-442](#)
- Retrieve Virtual LAN command [21-445](#)
- Retrieve VLAN Load Balancing Resilient Ethernet Protocol command [21-449](#)
- Retrieve VT command [21-447](#)
- Retrieve Wavelength command [21-463](#)
- Retrieve Wavelength Division Multiplexing Side command [21-462](#)
- Retrieve WDM ANS command [21-451](#)
- retrieving
  - 1+1 optical protection groups [21-170](#)
  - 10GIGE port parameters [21-44](#)
  - alarm log [21-231](#)
  - alarm power level thresholds [21-79](#)
  - alarm status [21-50, 21-56](#)
  - alarm threshold values [21-76](#)
  - alarmtype [21-55](#)
  - all PM reporting schedules [21-336](#)
  - ALS attributes [21-83](#)
  - ANS attributes [21-451](#)
  - APC attributes [21-86](#)
  - audit log [21-93](#)
  - BDFL PM parameters [21-94](#)
  - BITS alarms [21-60](#)
  - BITS conditions [21-114](#)
  - BITS configuration [21-95](#)
  - BLSR information [21-24](#)
  - card alarms [21-68](#)
  - card data and state parameters [21-153](#)
  - card firmware number and CLEI code [21-205](#)
  - command security level [21-106](#)
  - cost of service Ethernet [21-130](#)
  - cross-connects [21-132](#)
  - current condition and state of an entity [21-107](#)
  - current condition for all entities [21-110](#)
  - DCC-connected nodes [21-252](#)
  - default security parameter values [21-142](#)
  - DS-1 facilities configuration [21-386](#)
  - DS-3 facility properties [21-391](#)
  - DS3XM facility properties [21-391](#)
  - DWDM configuration parameters [21-16](#)
  - DWDM optical attributes and service states [21-266](#)
  - EC-1 card status [21-148](#)
  - environmental alarm attributes [21-88](#)
  - environmental alarms [21-63](#)
  - environmental conditions [21-118](#)
  - equipment conditions [21-122](#)
  - ESCON settings [21-161](#)
  - Ethernet back-end POS port information [21-341](#)
  - expected span loss verification value [21-376](#)
  - external control attributes [21-87](#)
  - external control states [21-167](#)
  - facility payload types [21-168](#)
  - fan-out-groups [21-179](#)
  - Fast Ethernet information [21-179, 21-181](#)
  - Fibre Channel port attributes [21-1](#)
  - FICON settings [21-9](#)
  - firewall tunnel information [21-438](#)
  - FTPSERVER [21-185](#)
  - G1000 facilities configuration [21-187](#)
  - general NE attributes [21-248](#)
  - GFP information [21-191](#)
  - GIGE information [21-192](#)
  - global LMP protocol attributes [21-217](#)
  - HDLC attributes [21-203](#)
  - inventory list [21-205](#)
  - J1 path trace information [21-427](#)
  - list of optical links [21-223](#)
  - LMP protocol channel attributes [21-218](#)
  - LMP TE link attributes [21-220](#)
  - ML-Series card console port status [21-129](#)
  - network-to-network interface Ethernet [21-264](#)
  - node attributes accessible from the GNE [21-234](#)
  - node equipment information [21-262](#)
  - node synchronization attributes [21-257](#)

- OCHNC wavelength connection provisioning information [21-280](#)
- OCH path inside a node [21-299](#)
- OC-N attributes and states [21-27](#)
- OMS attributes and service states [21-281](#)
- optical facility protection group information [21-174](#)
- OTS attributes and service states [21-286](#)
- OTU2 attributes and service states [21-292](#)
- parameter threshold levels [21-399](#)
- path-level node attributes [21-255](#)
- Path Protection switching state [21-345](#)
- path trace information for DWDM [21-429](#)
- performance monitoring mode [21-316](#), [21-330](#), [21-332](#)
- performance monitoring schedule [21-333](#)
- PM parameters for a specified card type [21-302](#)
- ports involved in ANS [21-259](#)
- ports involved in ANS regulation [21-246](#)
- protection switch status [21-342](#)
- protocol status [21-350](#)
- provisionable patchcord termination information [21-230](#)
- proxy tunnel information [21-439](#)
- RMON thresholds [21-361](#)
- ROADM optical power monitoring parameters [21-285](#)
- roll data [21-98](#), [21-372](#)
- SONET line switching states [21-344](#)
- SONET path trace message [21-351](#), [21-357](#)
- specified cross-connects [21-135](#)
- static routes [21-373](#)
- STS attributes [21-37](#)
- STS path attributes [21-378](#)
- synchronization alarms [21-72](#)
- synchronization conditions [21-126](#)
- synchronization reference list [21-385](#)
- system date and time [21-424](#)
- system product and version ID [21-205](#)
- TACCs [21-395](#)
- TADRMAP table contents [21-398](#)
- test access attributes on DS3XM cards [21-144](#)
- thresholds [21-412](#)
- TL1 header [21-204](#)
- trap destinations [21-426](#)
- TXP\_MR\_2.5G/TXPP\_MR\_2.5G card protection information [21-177](#), [21-178](#)
- TXP\_MR\_2.5G/TXPP\_MR\_2.5G card switching status [21-347](#), [21-348](#)
- user security information [21-440](#)
- VCG attributes [21-442](#)
- virtual LAN [21-445](#)
- VT attributes [21-37](#)
- VT path attributes [21-447](#)
- Y-cable protection on client facilities [21-173](#)
- reverting software loads [3-1](#)
- RFILE AID [26-52](#)
- RLS-EXT-CONT command
  - auditing results [21-167](#)
  - description [18-1](#)
- RLS-LASER-OTS command [18-2](#)
- RLS-LPBK-<MOD2> command [18-2](#)
- RLS-LPBK-EFM command [18-4](#)
- RLS-PROTNSW-<MOD2DWDMPAYLOAD> command [18-4](#)
- RLS-PROTNSW-<OCN\_TYPE> command [18-5](#)
- RLS-PROTNSW-<PATH> command [18-6](#)
- RLS-PROTNSW-OCH command [18-7](#), [18-8](#)
- RLS-SYNCNSW command [18-8](#)
- RMON
  - creating thresholds [12-47](#)
  - deleting thresholds [10-24](#)
  - retrieving thresholds [21-361](#)
  - TCA reports [17-26](#)
- RMV-<MOD2> command [19-1](#)
- RMV-EQPT command [19-2](#)
- ROADMs, retrieving optical power monitoring parameters [21-285](#)
- rolls
  - bulk and line level [12-5](#)
  - deleting [10-3](#), [10-29](#)
  - editing [11-53](#)

- forcing [11-146](#)
- forcing a valid signal [11-53](#)
- retrieving data [21-372](#)
- retrieving parameters [21-98](#)
- single paths [12-53](#)
- RST-<MOD2> command [20-1](#)
- RST-EQPT command [20-2](#)
- RTRV-<MOD\_RING> command [21-24](#)
- RTRV-<MOD1FCPAYLOAD> command [21-1](#)
- RTRV-<MOD1FICONPAYLOAD> command [21-9](#)
- RTRV-<MOD2DWDMPAYLOAD> command [21-16](#)
- RTRV-<OCN\_TYPE> command [21-27](#)
- RTRV-<PATH> command [21-37](#)
- RTRV-10GIGE command [21-44](#)
- RTRV-ALM-<MOD2ALM> command [21-50](#)
- RTRV-ALM-ALL command [21-56](#)
- RTRV-ALM-BITS command [21-60](#)
- RTRV-ALM-ENV command [21-63](#)
- RTRV-ALM-EQPT command [21-68](#)
- RTRV-ALM-SYNCN command [21-72](#)
- RTRV-ALMTH-<MOD2> command [21-76](#)
- RTRV-ALMTH-EQPT command [21-79](#)
- RTRV-ALS command [21-83](#)
- RTRV-APC command [21-86](#)
- RTRV-ATTR-CONT command [21-87](#)
- RTRV-ATTR-ENV command [21-88](#)
- RTRV-AUDIT-LOG command [21-93](#)
- RTRV-BFDLPM-<MOD2> command [21-94](#)
- RTRV-BITS command [21-95](#)
- RTRV-BULKROLL-<OCN\_TYPE> command [21-98](#)
- RTRV-CFM command [21-102](#)
- RTRV-CHGRP command [21-103](#)
- RTRV-CMD-SECU command [21-106](#)
- RTRV-COND-<MOD2ALM> command [21-107](#)
- RTRV-COND-ALL command [21-110](#)
- RTRV-COND-BITS command [21-114](#)
- RTRV-COND-ENV command [21-118](#)
- RTRV-COND-EQPT command [21-122](#)
- RTRV-COND-SYNCN command [21-126](#)
- RTRV-CONSOLE-PORT command [21-129](#)
- RTRV-COS-ETH command [21-130](#)
- RTRV-CRS-<PATH> command [21-135](#)
- RTRV-CRS command [21-132](#)
- RTRV-DFLT-SECU command [21-142](#)
- RTRV-DS1 command [21-144](#)
- RTRV-DSCP- command [21-147](#)
- RTRV-EC1 command [21-148](#)
- RTRV-EFM command [21-151](#)
- RTRV-EQPT command [21-153](#)
- RTRV-ESCON command [21-161](#)
- RTRV-ETH command [21-162](#)
- RTRV-EXT-CONT command [21-167](#)
- RTRV-FAC command [21-168](#)
- RTRV-FFP-<MOD2DWDMPAYLOAD> command [21-173](#)
- RTRV-FFP-<OCN\_TYPE> command [21-174](#)
- RTRV-FFP command [21-170](#)
- RTRV-FFP-OCH command [21-177](#)
- RTRV-FSTE command [21-179, 21-181](#)
- RTRV-G1000 command [21-187](#)
- RTRV-GFP command [21-191](#)
- RTRV-GIGE command [21-192](#)
- RTRV-HDLC command [21-203](#)
- RTRV-HDR command [21-204](#)
- RTRV-INV command [21-205](#)
- RTRV-L2-ETH command [21-211](#)
- RTRV-L2-TOPO command [21-214](#)
- RTRV-LM-EFM command [21-215](#)
- RTRV-LNK-<MOD2O> command [21-230](#)
- RTRV-LNK command [21-223](#)
- RTRV-LNKTERM command [21-230](#)
- RTRV-LOG command [21-231](#)
- RTRV-MA-CFM command [21-232](#)
- RTRV-MAP-NETWORK command [21-234](#)
- RTRV-MD-CFM command [21-237](#)
- RTRV-MDMAMAP-CFM) command [21-238](#)
- RTRV-MEPCCDB-CFM command [21-240](#)
- RTRV-MEP-CFM command [21-239](#)

- RTRV-MEPSTATS-CFM command [21-242](#)
- RTRV-MIPCCDB-CFM command [21-245](#)
- RTRV-MIP-CFM command [21-244](#)
- RTRV-NE-APC command [21-246](#)
- RTRV-NE-GEN command [21-248](#)
- RTRV-NE-IMGSIGN command [21-251](#)
- RTRV-NE-IPMAP command [21-252](#)
- RTRV-NE-KEYINFO command [21-253](#)
- RTRV-NE-PATH command [21-255](#)
- RTRV-NE-SYNCN command [21-257](#)
- RTRV-NETYPE command [21-262, 21-264](#)
- RTRV-NE-WDMANS command [21-259](#)
- RTRV-NNI-CHGRP command [21-263](#)
- RTRV-NNI-ETH command [21-264](#)
- RTRV-OCHCC command [21-278](#)
- RTRV-OCH command [21-266](#)
- RTRV-OCHNC command [21-280](#)
- RTRV-OMS command [21-281](#)
- RTRV-OPM command [21-285](#)
- RTRV-OPMOD-PTSYS command [21-286](#)
- RTRV-OSC command [21-286](#)
- RTRV-OTS command [21-286](#)
- RTRV-PATH-OCH command [21-299](#)
- RTRV-PM-<MOD2> command [21-302](#)
- RTRV-PMODE-<STS\_PATH> command [21-330](#)
- RTRV-PMODE-<VT\_PATH> command [21-332](#)
- RTRV-PMSCHED-<MOD2> command [21-333](#)
- RTRV-PMSCHED-ALL command [21-336](#)
- RTRV-POS command [21-341](#)
- RTRV-PROTNSW-<MOD2DWDMPAYLOAD> command [21-342](#)
- RTRV-PROTNSW-<OCN\_TYPE> command [21-344](#)
- RTRV-PROTNSW-<PATH> command [21-345](#)
- RTRV-PROTNSW-OCH command [21-347](#)
- RTRV-PROTOCOL command [21-350](#)
- RTRV-PTHTRC-<PATH> command [21-351](#)
- RTRV-PTSYS command [21-354](#)
- RTRV-QNQ-CHGRP command [21-355](#)
- RTRV-QNQ-ETH command [21-357](#)
- RTRV-REP command [21-359](#)
- RTRV-RMONTH-<MOD2\_RMON> command [21-361](#)
- RTRV-ROLL-<MOD\_PATH> command [21-372](#)
- RTRV-ROUTE command [21-373](#)
- RTRV-ROUTE-GRE command [21-374](#)
- RTRV Segment Topology Change Notification Resilient Ethernet Protocol command [21-377](#)
- RTRV-SLV-WDMANS command [21-376](#)
- RTRV-SRVTYPE command [21-384](#)
- RTRV-STCN-REP command [21-377](#)
- RTRV-STS command [21-378](#)
- RTRV-SYNC command [21-385](#)
- RTRV-T1 command [21-386](#)
- RTRV-T3 command [21-391](#)
- RTRV-TACC command [21-395](#)
- RTRV-TADRMAP command [21-398](#)
- RTRV-TH-<MOD2> command [21-399](#)
- RTRV-TH-ALL command [21-412](#)
- RTRV-TOD command [21-424](#)
- RTRV-TRAPTABLE command [21-426](#)
- RTRV-TRC-<OCN\_BLSR> command [21-427](#)
- RTRV-TRC-OCH command [21-429](#)
- RTRV-TRC-OTU2 command [21-433](#)
- RTRV-TRC-OTU3 command [21-436](#)
- RTRV-TUNNEL-FIREWALL command [21-438](#)
- RTRV-TUNNEL-PROXY command [21-439](#)
- RTRV-USER-SECU command [21-440](#)
- RTRV-VCG command [21-442](#)
- RTRV-VLAN command [21-445](#)
- RTRV-VLB-REP command [21-449](#)
- RTRV-VT command [21-447](#)
- RTRV-WDMANS command [21-451](#)
- RTRV-WDMSIDE command [21-462, 21-463](#)
- RTRV-WLEN command [21-463](#)

---

## S

- SCHED-PMREPT command  
description [22-1](#)

- retrieving all schedules [21-336](#)
- retrieving schedule [21-333](#)
- Schedule Performance Monitoring Report command [22-1](#)
- scheduling performance monitoring reports [22-1](#)
- SDBER, editing [11-40, 11-119](#)
- security
  - alarm reports [17-19](#)
  - clearing conditions [6-2](#)
  - clearing INTRUSION-PSWD condition [6-2](#)
  - creating users [12-59](#)
  - deleting users [10-34](#)
  - disabling user accounts [14-8](#)
  - editing for commands [11-59](#)
  - editing for users [11-164](#)
  - enabling disabled user ID [2-7](#)
  - forcing a user off the NE [4-2](#)
  - report of nonalarmed events [17-44](#)
  - retrieving defaults [21-142](#)
  - retrieving level for a command [21-106](#)
  - retrieving user information [21-440](#)
  - setting default values [23-7](#)
- service states
  - changing [19-1, 19-2, 20-1, 20-2](#)
  - retrieving [21-107](#)
  - retrieving for DWDM cards [21-266](#)
  - retrieving for OMS facilities [21-281](#)
  - retrieving for optical cards [21-27](#)
  - retrieving for OTS facilities [21-286](#)
  - retrieving for OTU2 facilities [21-292](#)
- Set Alarm Threshold command [23-1](#)
- Set Alarm Threshold Equipment command [23-3](#)
- SET-ALMTH-<MOD2> command [23-1](#)
- SET-ALMTH-EQPT command [23-3](#)
- SET-ATTR-CONT command [23-4](#)
- SET-ATTR-ENV command [23-5](#)
- Set Attribute Control command [23-4](#)
- Set Attribute Environment command [23-5](#)
- Set Attribute Security Default command [23-7](#)
- SET-ATTR-SECUDFLT command [23-7](#)
- Set Performance Mode of PM Data Collection (STS) command [23-10](#)
- Set Performance Mode of PM Data Collection (VT) command [23-11](#)
- SET-PMMODE-<STS\_PATH> command [23-10](#)
- SET-PMMODE-<VT\_PATH> command [23-11](#)
- Set Service Type command [23-12](#)
- SET-SRVTYPE command [23-12](#)
- SET-TH-<MOD2> command [23-14](#)
- Set Threshold command [23-14](#)
- Set Time of Day command [23-19](#)
- setting
  - alarm thresholds [23-1](#)
  - alarm thresholds for power level monitoring [23-3](#)
  - external control attributes [23-4, 23-5](#)
  - MXP\_2.5G\_10G card alarm thresholds [23-14](#)
  - PM data collection mode [23-10, 23-11](#)
  - system date [23-19](#)
  - system security default values [23-7](#)
  - system time [23-19](#)
  - TXP\_MR\_10G card alarm thresholds [23-14](#)
- SET-TOD command [23-19](#)
- SFBER, editing [11-40](#)
- SHELF AID [26-52](#)
- SHELL protocol
  - disabling [11-142](#)
  - enabling [11-142](#)
  - retrieving status [21-350](#)
- slots
  - deleting provisioning [10-8](#)
  - editing attributes [11-75](#)
- SNMP
  - deleting traps [10-32](#)
  - disabling [11-142](#)
  - editing trap table destination entry [11-160](#)
  - enabling [11-142](#)
  - provisioning [12-57](#)
  - retrieving status [21-350](#)
  - retrieving trap destination [21-426](#)

## software

- activating or reverting loads [3-1](#)
- downloading [8-3](#)
- download message [17-42](#)

## span loss

- calculating expected verification [16-14, 16-15](#)
- retrieving expected value [21-376](#)

SSM, editing [11-40, 11-112](#)

## starting

- ANS [16-17](#)
- a session, nonalarmed event report [17-45](#)
- Cisco IOS [8-1](#)

## static routes

- creating [12-54](#)
- deleting [10-30](#)
- retrieving [21-373](#)

## STSs

- creating cross-connects [12-8](#)
- editing paths [11-32](#)
- protection switching [16-11](#)
- releasing protection switch [18-6](#)
- retrieving attributes [21-37](#)
- retrieving path attributes [21-378](#)
- retrieving path protection switching state [21-345](#)
- retrieving specified cross-connects [21-135](#)
- rolling [12-53](#)
- setting PM data collection mode [23-10](#)
- STS AID [26-52](#)

Superuser, description [12-59](#)SW-DX-EQPT command [24-1](#)Switch Duplex Equipment command [24-1](#)

## switching

- 1+1 optical protection [16-8](#)
- autonomous reports [17-57](#)
- cross-connect cards [24-1](#)
- electrical equipment [24-2, 24-4](#)
- enabling for electrical protection cards [2-5, 2-6](#)
- enabling on a cross-connect cards [2-4](#)
- inhibiting for cross-connect cards [14-4](#)

- inhibiting for electrical cards [14-6](#)
- inhibiting protection switches [14-5](#)
- Path Protection [16-11](#)
- protection on TXPP\_MR\_2.5G card [16-12](#)
- releasing Y-cable protection switch [18-4](#)
- retrieving SONET line state [21-344](#)
- retrieving status [21-342](#)
- timing references [16-15](#)
- Y-cable protection [16-7](#)

Switch to Protection Equipment command [24-2](#)Switch to Working Equipment command [24-4](#)SW-TOPROTN-EQPT command [24-2](#)SW-TOWKG-EQPT command [24-4](#)

## synchronization

*See also* timing

- alarm reports [17-21](#)
- editing reference list [11-149](#)
- nonalarmed events [17-46](#)
- retrieving alarms [21-72](#)
- retrieving associated conditions [21-126](#)
- retrieving node attributes [21-257](#)
- retrieving reference list [21-385](#)
- switching references [16-15](#)
- SYN\_SRC AID [26-56](#)
- SYN AID [26-56](#)
- SYNC\_REF AID [26-58](#)
- SYNCSW AID [26-58](#)

synchronization. *See* timing

system reports. *See* autonomous messages

---

**T**

## TACCs

*See also* TAPs

- changing mode [5-1](#)
- editing attributes for DS3XM card DS1 access [11-66](#)
- retrieving [21-395](#)

## TADRMAP table

- deleting an entry from [10-31](#)

- retrieving contents [21-398](#)
  - TAPs
    - See also* TACCs
    - connecting STSs or VTs to the specified STS [7-1](#)
    - deleting [9-1](#)
    - retrieving TACCs [21-395](#)
  - testing circuits [5-1](#)
  - The Retrieve Channel Group command [21-103](#)
  - thresholds
    - creating RMON [12-47](#)
    - deleting RMON [10-24](#)
    - retrieving [21-412](#)
    - retrieving for alarms [21-76](#)
    - retrieving for power alarms [21-79](#)
    - retrieving RMON [21-361](#)
    - setting for alarms [23-1](#)
    - setting for MXP\_2.5G\_10G and TXP\_MR\_10G cards [23-14](#)
    - setting for power monitoring [23-3](#)
  - time
    - editing [11-65](#)
    - retrieving [21-424](#)
    - setting for system [23-19](#)
  - timing
    - See also* BITS
    - See also* synchronization
    - alarms [17-21](#)
    - editing for nodes [11-112](#)
    - mixed mode [11-112](#)
    - releasing switch [18-8](#)
    - retrieving synchronization reference list [21-385](#)
    - switching references [16-15](#)
  - TL1
    - commands [1-1 to 24-6](#)
    - disabling [11-142](#)
    - enabling [11-142](#)
    - retrieving header [21-204](#)
    - retrieving status [21-350](#)
  - traps. *See* SNMP
  - troubleshooting the TL1 link to the NE [21-204](#)
  - TST-INSERRBITS-<MOD2> command [25-1](#)
  - tunnels
    - firewall. *See* firewall tunnels
    - GRE. *See* GRE tunnels
    - proxy. *See* proxy tunnels
  - turning off
    - See also* disabling
    - See also* inhibiting
    - audible alarms [16-1](#)
    - ML-Series card console port [14-1](#)
    - performance monitoring reports for a session [14-3](#)
  - TXP\_MR\_10G cards, setting thresholds [23-1](#)
  - TXP\_MR\_2.5G/TXPP\_MR\_2.5G cards
    - editing OCH protection [11-84](#)
    - protection switching [16-12](#)
    - releasing protection switch [18-7](#)
    - retrieving protection information [21-177, 21-178](#)
    - retrieving switching status [21-347, 21-348](#)
  - TXPP\_MR\_2.5G cards
    - releasing protection switches [18-8](#)
- 
- ## U
- UDC AID [26-58](#)
  - UDP port, provisioning [12-57](#)
  - UID [1-2](#)
  - upgrading
    - activating or reverting software load during [3-1](#)
    - low-density electrical cards to high density [5-3](#)
  - uploading the Cisco IOS startup configuration file [8-1](#)
  - users
    - activating [1-1](#)
    - changing passwords [11-140](#)
    - creating [12-59](#)
    - deleting [10-34](#)
    - disabling accounts [14-8](#)
    - enabling after ID has been disabled [2-7](#)
    - forcing off an NE [4-2](#)

logging out [4-2](#)  
 retrieving security information [21-440](#)

---

## V

VCAT groups. *See* VCGs

VCGs

creating [12-60](#)  
 deleting [10-34](#)  
 editing [11-165](#)  
 retrieving attributes [21-442](#)

viewing a list of GRE tunnels [21-374](#)

virtual concatenation groups. *See* VCGs

Virtual LAN

deleting [10-35](#)

VLAN

entering [12-62](#)

VOAs, computing values [16-17](#)

VTs

creating cross-connects [12-8](#)  
 editing paths [11-32](#)  
 protection switching [16-11](#)  
 releasing protection switch [18-6](#)  
 retrieving attributes [21-37](#)  
 retrieving path attributes [21-447](#)  
 retrieving path protection switching state [21-345](#)  
 retrieving specified cross-connects [21-135](#)  
 rolling [12-53](#)  
 setting PM data collection mode [23-11](#)  
 VT AID [26-59](#)

---

## W

wavelengths

provisioning [11-43](#)  
 WLEN AID [26-60](#)

WDMANS

editing [11-169](#)

WDMANS AID [26-59](#)

WDMSIDE

creating [12-69](#)

---

## X

XC10G cards. *See* cross-connect cards

XCVT cards. *See* cross-connect cards

XC-VXC-10G cards. *See* cross-connect cards

XTC cards

*See also* cross-connect cards [11-150](#)

editing DS1/T1 ports [11-150](#)

---

## Y

Y-cable protection

creating groups [12-23](#)  
 deleting [10-9](#)  
 editing groups [11-82](#)  
 initiating a switch [16-7](#)  
 releasing a switch [18-4](#)  
 retrieving for client facilities [21-173](#)