



Configuring Channelized SONET/SDH

This module describes the configuration of Channelized SONET/SDH.

Feature History for Configuring Channelized SONET/SDH

Release	Modification
Release 3.9.0	Support for the following SPA was introduced on the Cisco ASR 9000 Series Router: <ul style="list-style-type: none">• Cisco 2-Port Channelized OC-12/DS0 SPA
Release 4.0.0	Support for the following SPA was introduced on the Cisco ASR 9000 Series Router: <ul style="list-style-type: none">• Cisco 1-Port Channelized OC-48/STM-16 SPA Support for SDH, E3, E1, and POS channelization was added for the Cisco 2-Port Channelized OC-12/DS0 and Cisco 1-Port Channelized OC-48/STM-16 SPAs.
Release 4.0.1	Support for the following SPA was introduced on the Cisco ASR 9000 Series Router: <ul style="list-style-type: none">• Cisco 1-Port Channelized OC-3/STM-1 SPA

- [Configuring Channelized SONET/SDH, on page 1](#)
- [Prerequisites for Configuring Channelized SONET/SDH, on page 2](#)
- [Information About Configuring Channelized SONET/SDH, on page 2](#)
- [How to Configure Channelized SONET/SDH, on page 12](#)
- [Configuration Examples for Channelized SONET, on page 40](#)

Configuring Channelized SONET/SDH

This module describes the configuration of Channelized SONET/SDH.

Feature History for Configuring Channelized SONET/SDH

Release	Modification
---------	--------------

Prerequisites for Configuring Channelized SONET/SDH

Release 3.9.0	Support for the following SPA was introduced on the Cisco ASR 9000 Series Router: <ul style="list-style-type: none">Cisco 2-Port Channelized OC-12/DS0 SPA
Release 4.0.0	Support for the following SPA was introduced on the Cisco ASR 9000 Series Router: <ul style="list-style-type: none">Cisco 1-Port Channelized OC-48/STM-16 SPA Support for SDH, E3, E1, and POS channelization was added for the Cisco 2-Port Channelized OC-12/DS0 and Cisco 1-Port Channelized OC-48/STM-16 SPAs.
Release 4.0.1	Support for the following SPA was introduced on the Cisco ASR 9000 Series Router: <ul style="list-style-type: none">Cisco 1-Port Channelized OC-3/STM-1 SPA

Prerequisites for Configuring Channelized SONET/SDH

You must be in a user group associated with a task group that includes the proper task IDs. The command reference guides include the task IDs required for each command. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Before configuring Channelized SONET/SDH, be sure that the following tasks and conditions are met:

- You have at least one of the following SPAs installed in your chassis:
 - Cisco 1-Port Channelized OC-3/STM-1 SPA
 - Cisco 2-Port Channelized OC-12c/DS0 SPA
 - Cisco 1-Port Channelized OC-48/STM-16 SPA
- You should know how to apply and specify the SONET controller name and *interface-path-id* with the generalized notation *rack/slot/module/port*. The SONET controller name and *interface-path-id* are required with the **controller sonet** command.

Information About Configuring Channelized SONET/SDH

To configure Channelized SONET/SDH, you must understand these concepts:

Channelized SONET Overview

Synchronous Optical Network (SONET) is an American National Standards Institute (ANSI) specification format used in transporting digital telecommunications services over optical fiber.

Synchronous Digital Hierarchy (SDH) is the international equivalent of SONET.

Channelized SONET provides the ability to transport SONET frames across multiplexed T3/E3 and virtual tributary group (VTG) channels.

Channelized SONET is supported on the following SPAs:

- Cisco 1-Port Channelized OC-48/STM-16 SPA
- Cisco 1-Port Channelized OC-3/STM-1 SPA
- Cisco 2-Port Channelized OC-12c/DS0 SPA

Channelized SDH is supported on the following SPAs:

- Cisco 1-Port Channelized OC-48/STM-16 SPA
- Cisco 1-Port Channelized OC-3/STM-1 SPA
- Cisco 2-Port Channelized OC-12c/DS0 SPA

SONET uses Synchronous Transport Signal (STS) framing. An STS is the electrical equivalent to an optical carrier 1 (OC-1).

SDH uses Synchronous Transport Mode (STM) framing. An STM-1 is the electrical equivalent to 3 optical carrier 1s (OC-1s).

A channelized SONET interface is a composite of STS streams, which are maintained as independent frames with unique payload pointers. The frames are multiplexed before transmission.

When a line is channelized, it is logically divided into smaller bandwidth channels called *paths*. These paths carry the SONET payload. The sum of the bandwidth on all paths cannot exceed the line bandwidth.

When a line is not channelized, it is called *clear channel*, and the full bandwidth of the line is dedicated to a single channel that carries broadband services.

An STS stream can be channelized into the following types of channels:

- T3/E3
- VT1.5 mapped T1
- Packet over SONET/SDH (POS) (OC12 and OC48 only)

The T3/E3 channels can be channelized further into T1s, and the T1s can be channelized into time slots (DS0s), except on the 1-Port Channelized OC-48/STM-16 SPA, which does not support T1 or DS0s.

Channelizing a SONET line consists of two primary processes:

- Configuring the controller
- Configuring the interface into channelized paths

You configure the controller first by setting the mode of the STS path. The mode can be set to T3, or VT1.5-mapped T1, or POS, depending on your hardware support.




Note POS is supported only on the STS-3c and STS-12c paths on the Cisco 1-Port Channelized OC-12/DS0 SPA and on the STS-3c, STS-12c, and STS-48c paths on the Cisco 1-Port Channelized OC-48/STM-16 SPA.

When the mode is specified, the respective controller is created, and the remainder of the configuration is applied on that controller. For example, mode T3 creates a T3 controller. The T3 controller can then be configured to a serial channel, or it can be further channelized to carry T1s, and those T1s can be configured to serial interfaces.

Depending on the support for your installed SPA, each STS path can be independently configured into T3s, E3s, or VTGs, and so on.

This figure shows an example of three STS paths for a SONET controller. However, the 2-Port Channelized OC-12/DS0 SPA supports up to 12 STS paths, and the 1-Port Channelized OC-48/STM-16 SPA supports up to 48 STS paths, but the 1-Port Channelized OC-48/STM-16 SPA does not support VTGs.

Figure 1: SONET Controller STS Paths

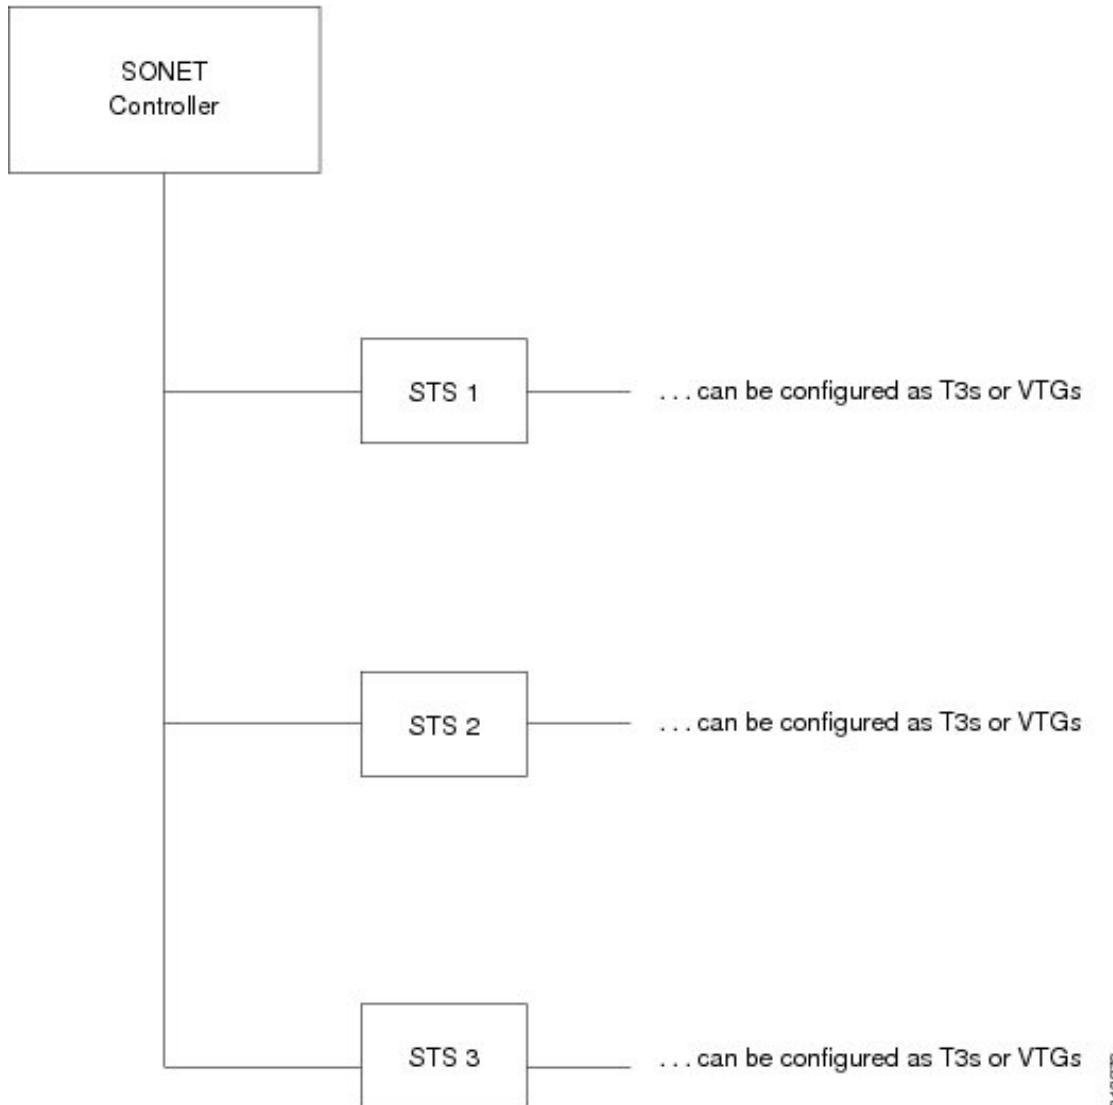


This figure shows an example of some SONET controller configuration combinations.

**Note**

The 1-Port Channelized OC-48/STM-16 SPA on the Cisco ASR 9000 Series Router does not support VTGs.

Figure 2: SONET Controller Configuration Combinations

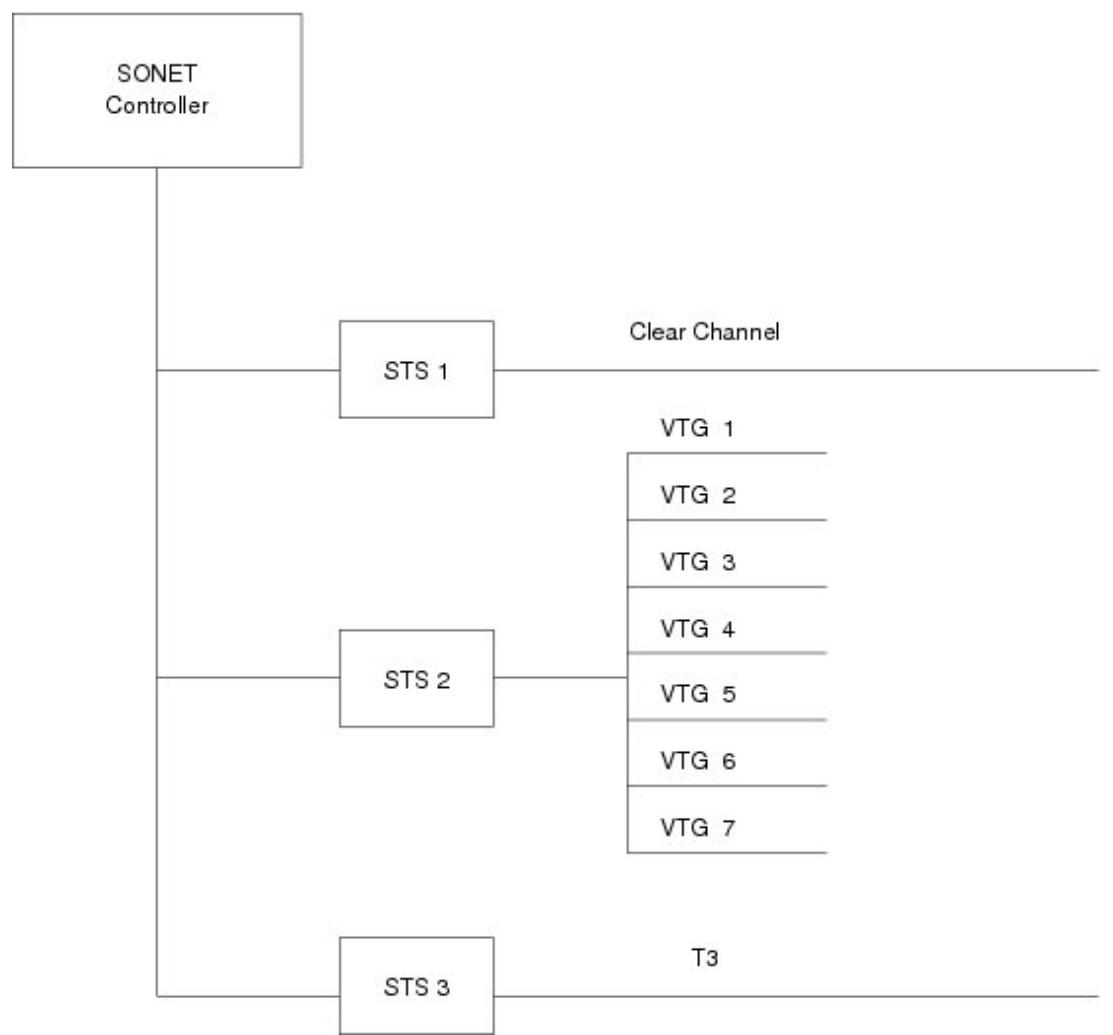


This figure shows the T3 paths that can be configured.



Note Channelized T3 paths are only supported on the 1-Port Channelized OC-3/STM-1 SPA and 2-Port Channelized OC-12c/DS0 SPA.

Figure 3: SONET T3 Channelized Paths

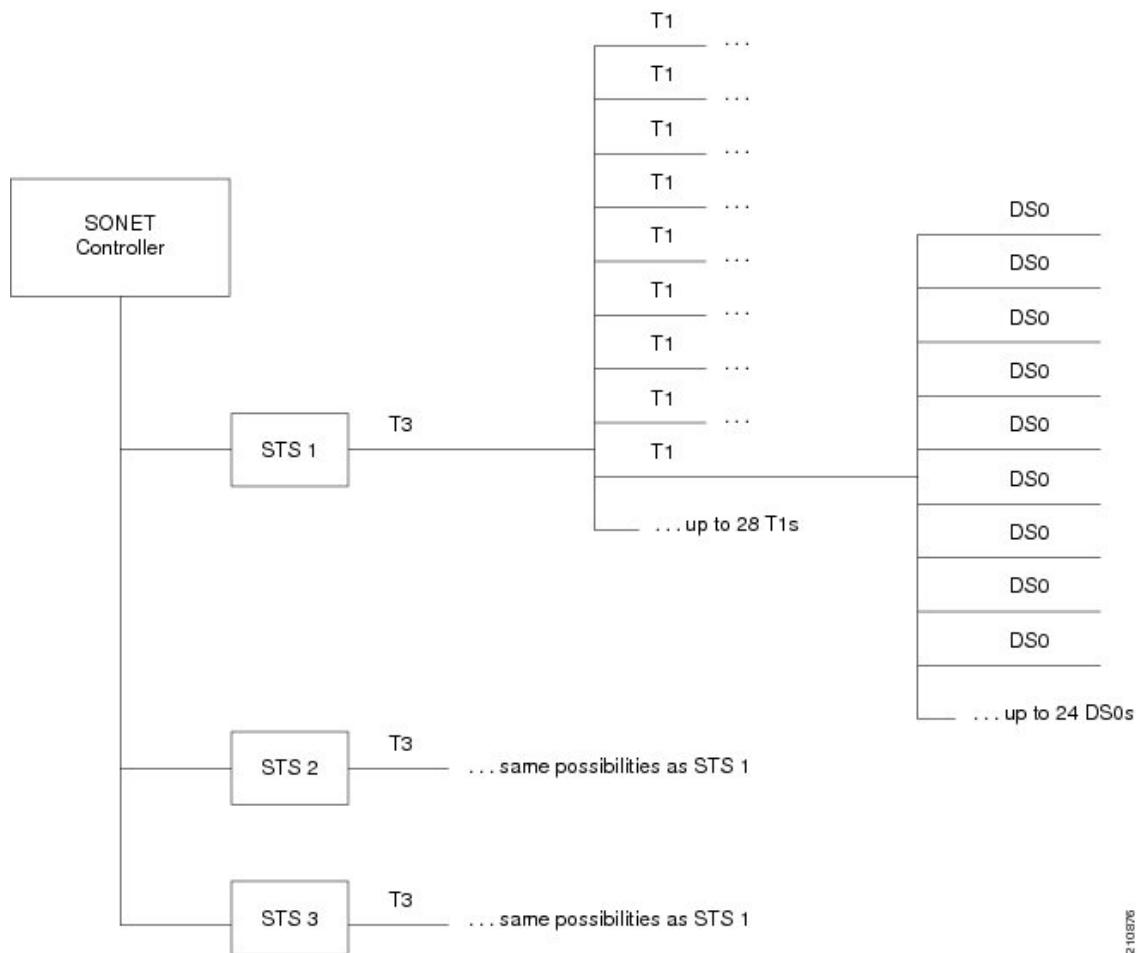


210876

This figure shows the VTG paths that can be configured.



Note VTG paths are only supported on the Cisco 1-Port Channelized OC-3/STM-1 SPA and Cisco 2-Port Channelized OC-12c/DS0 SPA on the Cisco ASR 9000 Series Router.

Figure 4: SONET VTG Channelized Paths

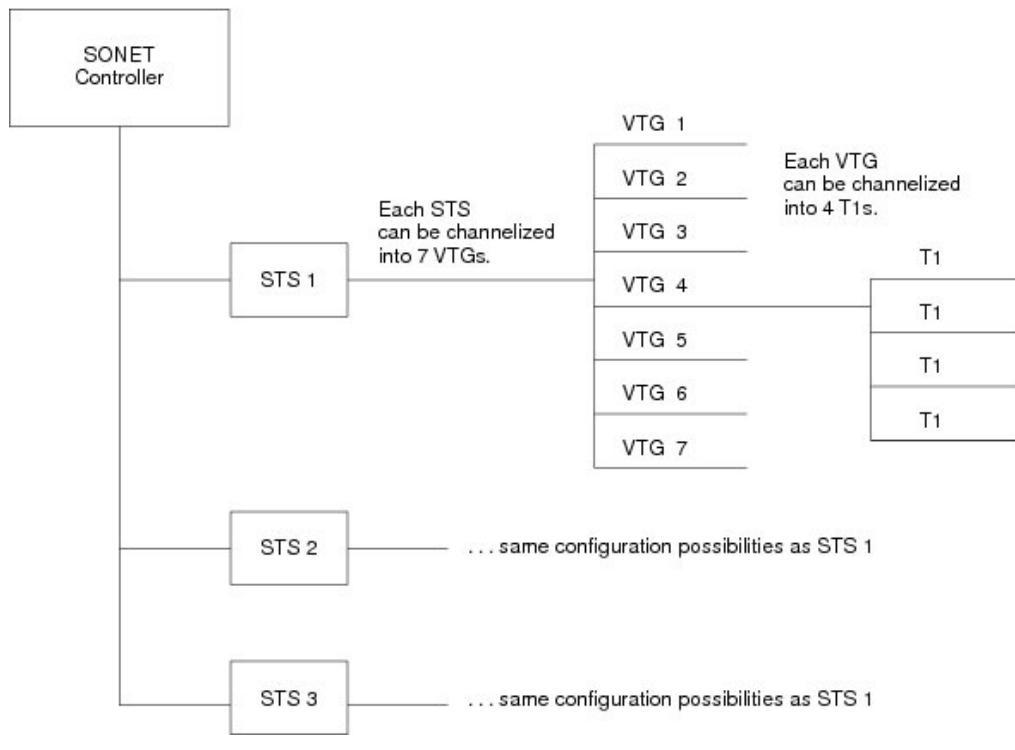

210877

Channelized SDH Overview

Synchronous Digital Hierarchy (SDH) is the international equivalent of SONET.

Channelized SDH is supported on the following SPAs:

- Cisco 1-Port Channelized OC-48/STM-16 SPA
- Cisco 1-Port Channelized OC-3/STM-1 SPA
- Cisco 2-Port Channelized OC-12/DS0 SPA

A Synchronous Transport Module (STM) signal is the Synchronous Digital Hierarchy (SDH) equivalent of the SONET STS, but the numbers are different for each bandwidth. In this guide, the STM term refers to both path widths and optical line rates. The paths within an STM signals are called administrative units (AUs).

A summary of the basic terminology differences between SONET and SDH is as follows:

- SONET STS is equivalent to SDH administrative unit (AU)
- SONET VT is equivalent to SDH tributary unit (TU)
- SDH basic building blocks are STM-1 (equivalent to STS-3) and STM-0 (equivalent to STS-1)

An administrative unit (AU) is the information structure that provides adaptation between the higher-order path layer and the multiplex section layer. It consists of an information payload (the higher-order virtual container) and an administrative unit pointer, which indicates the offset of the payload frame start relative to the multiplex section frame start.

An AU can be channelized into tributary units (TUs) and tributary unit groups (TUGs).

An administrative unit 4 (AU-4) consists of three STM-1s or an STM-3.

An administrative unit 3 (AU-3) consists of one STM-1.

An administrative unit group (AUG) consists of one or more administrative units occupying fixed, defined positions in an STM payload.

Table 1: SONET and SDH Terminology Equivalencies

SONET Term	SDH Term
SONET	SDH
STS-3c	AU-4
STS-1	AU-3
VT	TU
SPE	VC
Section	Regenerator Section
Line	Multiplex Section
Path	Path

On the Cisco ASR 9000 Series Router, the following levels of SDH channelization are supported:

- 1-Port Channelized OC-3/STM-1 SPA
 - AU4 to TUG-3 to TUG-2 to VC-12 to E1 to NxDS0
 - AU4 to TUG-3 to VC-3 to DS3 (Clear Channel)
 - AU4 to TUG-3 to VC-3 to E3 (Clear Channel)
 - AU3 to TUG-2 to VC-11 to DS1 to NxDS0
- 2-Port Channelized OC-12/DS0 SPA
 - AU-4-4c (VC-4-4c)
 - AU-4 (VC-4)
 - AU-4 to TUG-3 to VC-3 to DS3
 - AU-4 to TUG-3 to VC-3 to E3
 - AU-4 to TUG-3 to TUG-2 to VC-11 to T1 to NxDS0
 - AU-4 to TUG-3 to TUG-2 to VC-12 to E1 to NxDS0


- AU-3 to VC-3 to DS3
 - AU-3 to TUG-2 to VC-11 to T1 to NxDS0
 - AU-3 to TUG-2 to VC-12 to E1 to NxDS0
 - AU-3 to VC-3 to E3
 - AU-3 to VC-3 to DS3 to T1 to NxDS0
 - AU-3 to VC-3 to DS3 to E1 to NxDS0
-
- 1-Port Channelized OC-48/STM-16 SPA
 - DS3
 - E3
 - AU-3 (VC-3)
 - AU-4 (VC-4)
 - AU-4-4c (VC-4-4c)
 - AU-4-16c (VC-4-16c)

This figure shows an example of SDH AU-3 paths that can be configured on certain supported SPAs.



Note The 1-Port Channelized OC-48/STM-16 SPA does not support further channelization of AU-3 paths into T1s.

Figure 5: SDH AU3 Paths

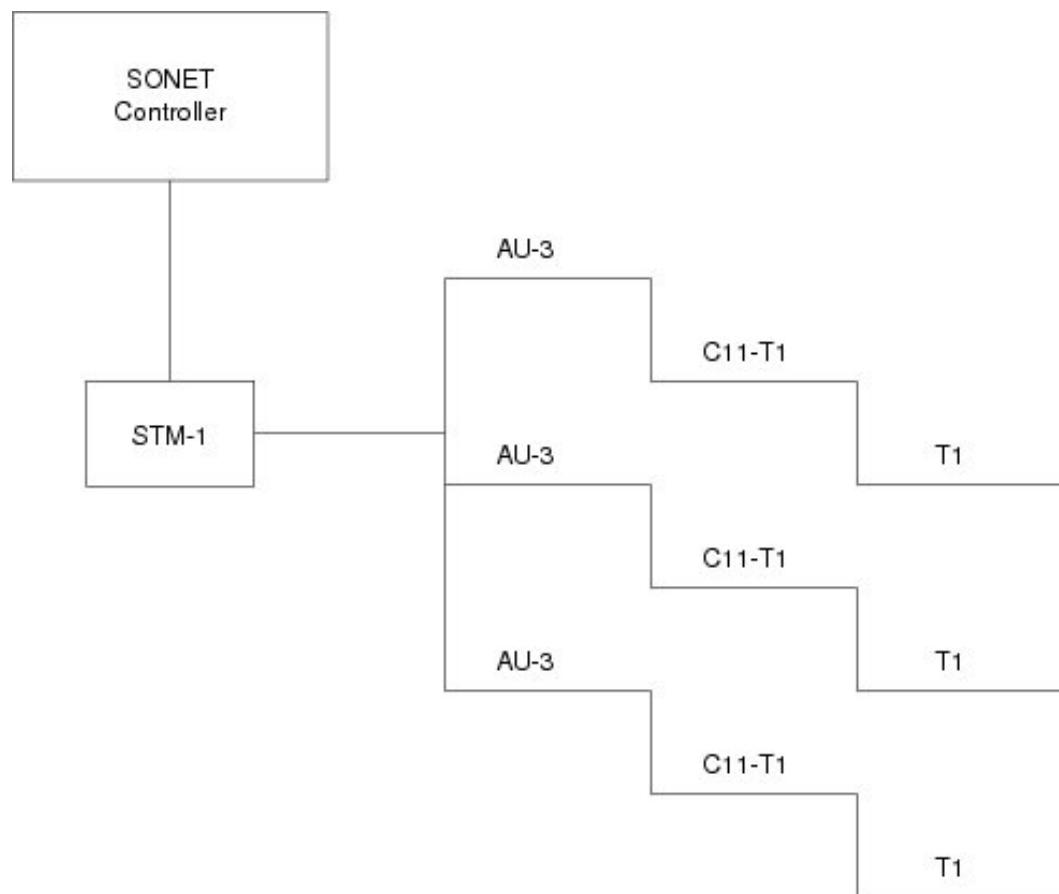


210874

This figure shows the SDH AU4 paths that can be configured on supported SPAs.



Note The 1-Port Channelized OC-48/STM-16 SPA only supports channelization to the T3 or E3 level. Further channelization of AU-4 paths is not supported.

Figure 6: SDH AU4 Paths

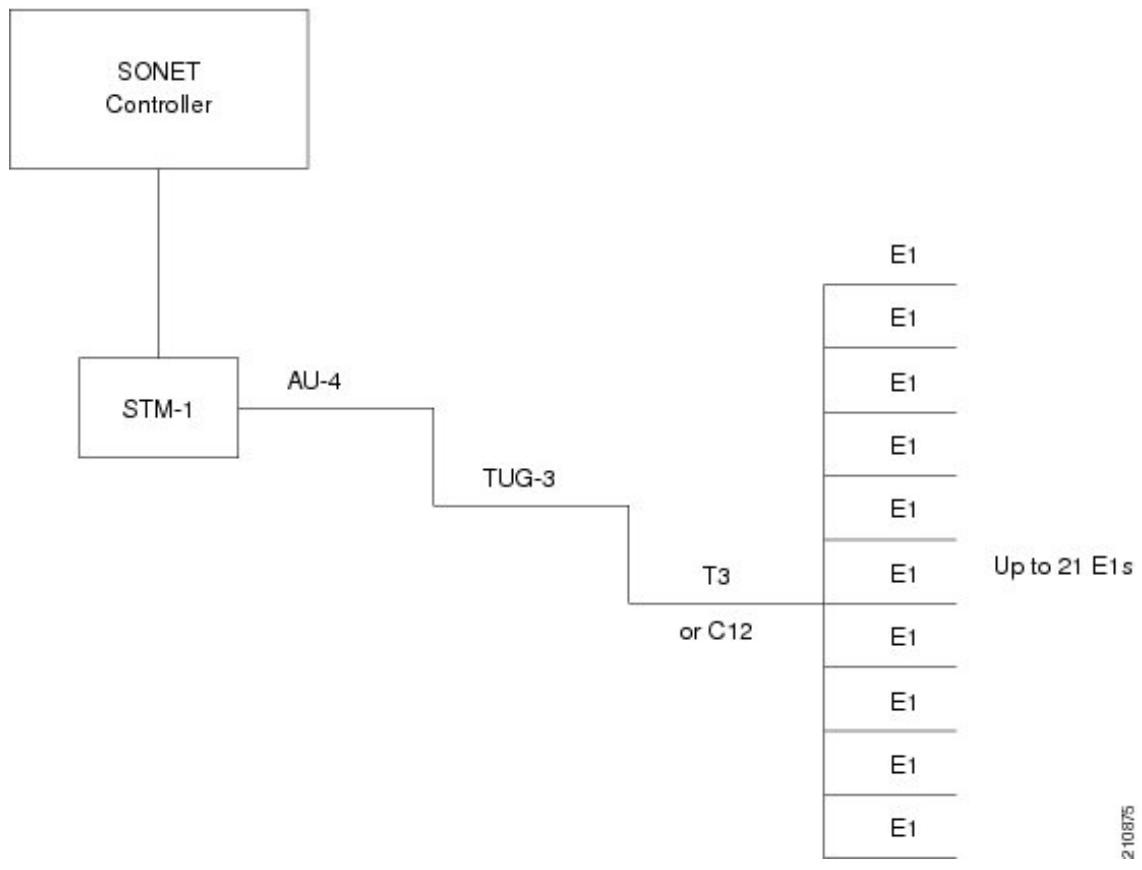

210875

Default Configuration Values for Channelized SONET/SDH

This table describes the default configuration parameters that are present on the Channelized SONET/SDH.

Table 2: SONET/SDH Controller Default Configuration Values

Parameter	Default Value	Configuration File Entry
Clock source	line	clock source {internal line}
SONET framing	sonet	framing {sdh sonet}

How to Configure Channelized SONET/SDH

This section contains the following procedures:

Configuring SONET T3 and VT1.5-Mapped T1 Channels

This task explains how to configure a SONET line into T3 and VT-mapped T1 Channels.

Before you begin

- You should know how to configure the SONET controller as specified in the [How to Configure Channelized SONET/SDH](#) section of the *Configuring Clear Channel SONET Controllers* module.
- STS paths can be channelized into T3s on the following SPAs:
 - Cisco 1-Port Channelized OC-48/STM-16 SPA
 - Cisco 1-Port Channelized OC-3/STM-1 SPA
 - Cisco 2-Port Channelized OC-12/DS0 SPA
- STS paths can be channelized into VTG mapped T1s on the following SPA:
 - Cisco 1-Port Channelized OC-3/STM-1 SPA
 - Cisco 2-Port Channelized OC-12/DS0 SPA
- T3 paths can be channelized into T1s or E1s on the following SPA:
 - Cisco 1-Port Channelized OC-3/STM-1 SPA
 - Cisco 2-Port Channelized OC-12/DS0 SPA
- T1 paths can be channelized into NxDS0s on the Cisco 2-Port Channelized OC-12/DS0 SPA.

Restrictions

T1s and E1s are not supported on the Cisco 1-Port Channelized OC-48/STM-16 SPA.

SUMMARY STEPS

1. **configure**
2. **controller sonet *interface-path-id***
3. **clock source {internal | line}**
4. **framing sonet**
5. **sts *number***
6. **mode *mode***
7. **width *number***
8. **root**
9. **controller *controllerName instance***
10. **mode *mode***
11. **root**

12. **controller t1** *interface-path-id*
13. **channel-group** *number*
14. **timeslots** *num1:num2:num3:num4*
15. or
16. **timeslots** *range1-range2*
17. **show configuration**
18. **root**
19. **interface serial** *interface-path-id*
20. **encapsulation** {**frame-relay** | **hdlc** | **ppp**}
21. **ipv4** *ip-address mask*
22. **no shutdown**
23. **end** or **commit**
24. **show controllers sonet** *interface-path-id*

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure Example: RP/0/RSP0/CPU0:router# configure	Enters global configuration mode.
Step 2	controller sonet <i>interface-path-id</i> Example: RP/0/RSP0/CPU0:router(config)# controller sonet 0/1/1/0	Enters SONET controller configuration submode and specifies the SONET controller name and <i>interface-path-id</i> with the <i>rack/slot/module/port</i> notation.
Step 3	clock source { internal line } Example: RP/0/RSP0/CPU0:router(config-sonet)# clock source internal	Configures the SONET port transmit clock source, where the internal keyword sets the internal clock and the line keyword sets the clock recovered from the line. <ul style="list-style-type: none"> • Use the line keyword whenever clocking is derived from the network. Use the internal keyword when two routers are connected back to back or over fiber for which no clocking is available. • line is the default keyword. <p>Note • Internal clocking is required for SRP interfaces.</p>
Step 4	framing sonet Example: RP/0/RSP0/CPU0:router(config-sonet)# framing sonet	Configures the controller for SONET framing. SONET framing (sonet) is the default.

	Command or Action	Purpose
Step 5	sts <i>number</i> Example: RP/0/RSP0/CPU0:router(config-sonet)# sts 1	Configures the STS stream specified by <i>number</i> . The ranges are: <ul style="list-style-type: none">• 1 to 48—1 Port Channelized OC-48/STM-16 SPA• 1 to 3—1-Port Channelized OC-3/STM-1 SPA• 1 to 12—2-Port Channelized OC-12/DS0 SPA
Step 6	mode <i>mode</i> Example: RP/0/RSP0/CPU0:router(config-stsPath)# mode t3	Sets the mode of interface at the STS level. The possible modes are: <ul style="list-style-type: none">• t3—SONET path carrying T3• vt15-t1—SONET path carrying virtual tributary 1.5 T1s (VT15 T1) (1-Port Channelized OC-3/STM-1 SPA and 2-Port Channelized OC-12c/DS0 SPA only)• pos—Packet over SONET
Step 7	width <i>number</i> Example: RP/0/RSP0/CPU0:router(config-stsPath)# width 3	Configures the number of the STS streams that are concatenated. The possible values for <i>number</i> are: <ul style="list-style-type: none">• 1—Indicating one STS stream• 3—Indicating three STS streams (STS-3c)• 12—Indicating concatenation of 12 STS streams (STS-12c)• 48—Indicating concatenation of 48 STS streams (STS-48c). This is the default on the 1-Port Channelized OC-48/STM-16 SPA. Widths 3, and 12, and 48 are configured on STS paths at natural boundaries, which coincide with the following path numbers: <ul style="list-style-type: none">• 1, 4, 7, 10, and so on, for STS-3c• 1, 13, 25, and 37 for STS-12c• 1 for STS-48c
Step 8	root Example: RP/0/RSP0/CPU0:router(config-stsPath)# root	Exits to global configuration mode.
Step 9	controller <i>controllerName instance</i> Example:	Enters controller configuration submode and specifies the controller name and instance identifier with the <i>rack/slot/module/port/controllerName</i> notation. The controller names are:

	Command or Action	Purpose
	RP/0/RSP0/CPU0:router(config)# controller t3 0/1/1/0/0	<ul style="list-style-type: none"> • t3—SONET path carrying T3 • vt15-t1—SONET path carrying virtual tributary 1.5 T1s (VT15 T1) (1-Port Channelized OC-3/STM-1 SPA and 2-Port Channelized OC-12c/DS0 SPA only)
Step 10	mode mode Example: RP/0/RSP0/CPU0:router(config-t3)# mode t1	Sets the mode of interface at this level. The possible modes are: <ul style="list-style-type: none"> • t1—Channelized into 28 T1s (1-Port Channelized OC-3/STM-1 SPA and 2-Port Channelized OC-12c/DS0 SPA only) • e1—Channelized into 21 E1s (1-Port Channelized OC-3/STM-1 SPA and 2-Port Channelized OC-12c/DS0 SPA only) • serial—Clear channel carrying an HDLC-like payload
Step 11	root Example: RP/0/RSP0/CPU0:router(config-t3)# root	Exits to global configuration mode.
Step 12	controller t1 interface-path-id Example: RP/0/RSP0/CPU0:router(config)# controller t1 0/1/1/0/0/0	Enters T1 controller configuration submode and specifies the T1 controller name and <i>interface-path-id</i> with the <i>rack/slot/module/port/T3Num/T1num</i> notation. (1-Port Channelized OC-3/STM-1 SPA and 2-Port Channelized OC-12c/DS0 SPA only)
Step 13	channel-group number Example: RP/0/RSP0/CPU0:router(config-t1)# channel-group 1	Sets the channel group number to which time slots are assigned. The range is from 1 to 24.
Step 14	timeslots num1:num2:num3:num4	
Step 15	or	
Step 16	timeslots range1-range2 Example: RP/0/0/CPU0:router(config-t1-channel_group)# timeslots 1:3:7:9 RP/0/0/CPU0:router(config-t1-channel_group)# timeslots 1-24	Specifies the time slots for the interface by number with the <i>num1:num2:num3:num4</i> notation, or by range with the <i>range1-range2</i> notation.
Step 17	show configuration Example:	Displays the contents of uncommitted configuration.

	Command or Action	Purpose
	RP/0/RSP0/CPU0:router(config-t1-channel_group)# show configuration	
Step 18	root Example: RP/0/RSP0/CPU0:router(config-t3)# root	Exits to global configuration mode.
Step 19	interface serial interface-path-id Example: RP/0/RSP0/CPU0:router(config)# interface serial 0/1/1/0/0:0	Specifies the complete interface number with the <i>rack/slot/module/port/T3Num/T1num:instance</i> notation.
Step 20	encapsulation {frame-relay hdlc ppp} Example: RP/0/RSP0/CPU0:router(config-if)# encapsulation ppp	Specifies the encapsulation type with the one of the following keywords: <ul style="list-style-type: none">• frame-relay—Frame Relay network protocol• hdlc—High-level Data Link Control (HDLC) synchronous protocol• ppp—Point-to-Point Protocol
Step 21	ipv4 ip-address mask Example: RP/0/RSP0/CPU0:router(config-if)# ip address 10.10.10.10 255.255.255.255	Assigns an IP address and subnet mask to the interface.
Step 22	no shutdown Example: RP/0/RSP0/CPU0:router(config-if)# no shutdown	Removes the shutdown configuration. Note • Removal of the shutdown configuration eliminates the forced administrative down on the interface, enabling it to move to an up or down state (assuming that the parent SONET layer is not configured administratively down).
Step 23	end or commit Example: RP/0/0RSP0/CPU0:router(config-sonet)# end or RP/0/RSP0/CPU0:router(config-sonet)# commit	Saves configuration changes. <ul style="list-style-type: none">• When you issue the end command, the system prompts you to commit changes: Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]:• Entering yes saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.

	Command or Action	Purpose
		<ul style="list-style-type: none"> • Entering no exits the configuration session and returns the router to EXEC mode without committing the configuration changes. • Entering cancel leaves the router in the current configuration session without exiting or committing the configuration changes. • Use the commit command to save the configuration changes to the running configuration file and remain within the configuration session.
Step 24	show controllers sonet <i>interface-path-id</i> Example: <pre>RP/0/RSP0/CPU0:router# show controllers sonet 0/1/1/0</pre>	Verifies the SONET controller configuration.

Configuring Packet over SONET Channels

This task explains how to configure Packet over SONET (POS) channels on SPAs supporting channelized SONET.

Before you begin

You have one of the following SPAs installed:

- Cisco 1-Port Channelized OC-48/STM-16 SPA
- Cisco 2-Port Channelized OC-12/DS0 SPA

SUMMARY STEPS

1. **configure**
2. **controller sonet *interface-path-id***
3. **clock source {internal | line}**
4. **framing {sdh | sonet}**
5. **sts *number***
6. **width *number***
7. **mode *mode* scramble**
8. **root**
9. **interface pos *interface-path-id***
10. **encapsulation [hdlc | ppp | frame-relay [IETF]]**
11. **pos crc {16 | 32}**
12. **mtu *value***
13. **no shutdown**
14. **end or commit**
15. **show interfaces pos *interface-path-id***

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure Example: RP/0/RSP0/CPU0:router# configure	Enters global configuration mode.
Step 2	controller sonet <i>interface-path-id</i> Example: RP/0/RSP0/CPU0:router(config)# controller sonet 0/1/1/0	Enters SONET controller configuration submode and specifies the SONET controller name and <i>interface-path-id</i> with the <i>rack/slot/module/port</i> notation.
Step 3	clock source {internal line} Example: RP/0/RSP0/CPU0:router(config-sonet)# clock source internal	Configures the SONET port transmit clock source, where the internal keyword sets the internal clock and the line keyword sets the clock recovered from the line. <ul style="list-style-type: none"> • Use the line keyword whenever clocking is derived from the network. Use the internal keyword when two routers are connected back to back or over fiber for which no clocking is available. • line is the default keyword. <p>Note • Internal clocking is required for SRP interfaces.</p>
Step 4	framing {sdh sonet} Example: RP/0/RSP0/CPU0:router(config-sonet)# framing sonet	(Optional) Configures the controller framing with either the sdh keyword for Synchronous Digital Hierarchy (SDH) framing or the sonet keyword for SONET framing. SONET framing (sonet) is the default.
Step 5	sts <i>number</i> Example: RP/0/RSP0/CPU0:router(config-sonet)# sts 1	Configures the STS stream specified by <i>number</i> . The ranges are: <ul style="list-style-type: none"> • 1 to 12 on the 2-Port Channelized OC12c/DS0 SPA • 1 to 48 on the 1 Port Channelized OC48/DS3 SPA
Step 6	width <i>number</i> Example: RP/0/RSP0/CPU0:router(config-stsPath)# width 3	Configures the number of the STS streams that are concatenated. The possible values for <i>number</i> are: <ul style="list-style-type: none"> • 3—Indicating three STS streams (STS-3c) • 12—Indicating concatenation of 12 STS streams (STS-12c) • 48—Indicating concatenation of 48 STS streams (STS-48c)

	Command or Action	Purpose
		<p>Widths 3, 12, and 48 are configured on STS paths at natural boundaries, which coincide with the following path numbers:</p> <ul style="list-style-type: none"> • 1, 4, 7, 10, and so on, for STS-3c • 1, 13, 25, and 37 for STS-12c • 1 for STS-48c <p>Note • POS interfaces are not supported when width is 1.</p>
Step 7	mode mode scramble Example: RP/0/RSP0/CPU0:router(config-stsPath)# mode pos scramble	Sets the mode of interface at the STS level. Set the mode to pos to create POS interface (OC12 and OC48 only).
Step 8	root Example: RP/0/RSP0/CPU0:router(config-stsPath)# root	Exits to global configuration mode.
Step 9	interface pos interface-path-id Example: RP/0/RSP0/CPU0:router(config)# interface POS 0/1/1/0	Specifies the POS interface name and notation <i>rack/slot/module/port</i> , and enters interface configuration mode.
Step 10	encapsulation [hdlc ppp frame-relay [IETF]] Example: RP/0/RSP0/CPU0:router(config-if)# encapsulation hdlc	(Optional) Configures the interface encapsulation parameters and details such as HDLC or PPP. The default is HDLC.
Step 11	pos crc {16 32} Example: RP/0/RSP0/CPU0:router(config-if)# pos crc 32	(Optional) Configures the CRC value for the interface. Enter the 16 keyword to specify 16-bit CRC mode, or enter the 32 keyword to specify 32-bit CRC mode. The default CRC is 32 .
Step 12	mtu value Example: RP/0/RSP0/CPU0:router(config-if)# mtu 4474	(Optional) Configures the POS MTU value. The range is 64–65535.
Step 13	no shutdown Example:	Removes the shutdown configuration.

	Command or Action	Purpose
	RP/0/RSP0/CPU0:router (config-if) # no shutdown	<p>Note</p> <ul style="list-style-type: none"> Removal of the shutdown configuration eliminates the forced administrative down on the interface, enabling it to move to an up or down state (assuming that the parent SONET layer is not configured administratively down).
Step 14	end or commit Example: <pre>RP/0/RSP0/CPU0:router(config-sonet) # end</pre> or <pre>RP/0/RSP0/CPU0:router(config-sonet) # commit</pre>	<p>Saves configuration changes.</p> <ul style="list-style-type: none"> When you issue the end command, the system prompts you to commit changes: Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]: Entering yes saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode. Entering no exits the configuration session and returns the router to EXEC mode without committing the configuration changes. Entering cancel leaves the router in the current configuration session without exiting or committing the configuration changes. Use the commit command to save the configuration changes to the running configuration file and remain within the configuration session.
Step 15	show interfaces pos interface-path-id Example: <pre>RP/0/0/CPU0:router# show interfaces pos 0/1/1/0</pre>	(Optional) Displays the interface configuration.

Configuring a Clear Channel SONET Controller for T3

This task explains how to configure a SONET line into a single T3 serial channel called *clear channel*. Clear channel is established by setting the T3 controller mode to serial.

Before you begin

- You should know how to configure the SONET controller as specified in the [How to Configure Channelized SONET/SDH](#) section of the *Configuring Clear Channel SONET Controllers* module.

SUMMARY STEPS

1. **configure**
2. **controller sonet *interface-path-id***
3. **clock source {internal | line}**
4. **framing sonet**
5. **sts *number***
6. **mode t3**
7. **root**
8. **controller t3 *interface-path-id***
9. **mode serial**
10. **root**
11. **interface serial *interface-path-id***
12. **encapsulation {frame-relay | hdlc | ppp}**
13. **ipv4 *ip-address mask***
14. **no shutdown**
15. **end or commit**
16. **show controllers sonet *interface-path-id***

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure Example: <pre>RP/0/RSP0/CPU0:router# configure</pre>	Enters global configuration mode.
Step 2	controller sonet <i>interface-path-id</i> Example: <pre>RP/0/RSP0/CPU0:router(config)# controller sonet 0/1/1/0</pre>	Enters SONET controller configuration submode and specifies the SONET controller name and <i>interface-path-id</i> with the <i>rack/slot/module/port</i> notation.
Step 3	clock source {internal line} Example: <pre>RP/0/RSP0/CPU0:router(config-sonet)# clock source internal</pre>	Configures the SONET port transmit clock source, where the internal keyword sets the internal clock and the line keyword sets the clock recovered from the line. <ul style="list-style-type: none"> • Use the line keyword whenever clocking is derived from the network. Use the internal keyword when two routers are connected back to back or over fiber for which no clocking is available. • line is the default keyword. <p>Note</p> <ul style="list-style-type: none"> • Internal clocking is required for SRP interfaces.

	Command or Action	Purpose
Step 4	framing sonet Example: RP/0/RSP0/CPU0:router(config-sonet)# framing sonet	Configures the controller for SONET framing. SONET framing (sonet) is the default.
Step 5	sts <i>number</i> Example: RP/0/RSP0/CPU0:router(config-sonet)# sts 1	Configures the STS stream specified by <i>number</i> . The ranges are: <ul style="list-style-type: none"> • 1 to 48—1-Port Channelized OC-48/DS3 SPA • 1 to 3—1-Port Channelized OC-3/STM-1 SPA • 1 to 12—2-Port Channelized OC-12/DS0 SPA
Step 6	mode t3 Example: RP/0/RSP0/CPU0:router(config-stsPath)# mode t3	Sets the mode of the interface at the STS level for T3.
Step 7	root Example: RP/0/RSP0/CPU0:router(config-stsPath)# root	Exits to global configuration mode.
Step 8	controller t3 <i>interface-path-id</i> Example: RP/0/RSP0/CPU0:router(config)# controller t3 0/1/1/0/0	Enters T3 controller configuration submode and specifies the T3 controller name and interface-path-id identifier with the <i>rack/slot/module/port/T3Num</i> notation.
Step 9	mode serial Example: RP/0/RSP0/CPU0:router(config-t3)# mode serial	Sets the mode of the interface to serial to establish a clear channel.
Step 10	root Example: RP/0/RSP0/CPU0:router(config-t3)# root	Exits to global configuration mode.
Step 11	interface serial <i>interface-path-id</i> Example: RP/0/RSP0/CPU0:router(config)# interface serial 0/1/1/0/0/0:0	Specifies the complete interface number with the <i>rack/slot/module/port/T3Num/T1num:instance</i> notation.
Step 12	encapsulation {frame-relay hdlc ppp} Example:	Specifies the encapsulation type with the one of the following keywords:

	Command or Action	Purpose
	RP/0/RSP0/CPU0:router(config-if)# encapsulation ppp	<ul style="list-style-type: none"> • frame-relay—Frame Relay network protocol • hdlc—High-level Data Link Control (HDLC) synchronous protocol • ppp—Point-to-Point Protocol
Step 13	ipv4 ip-address mask Example: RP/0/RSP0/CPU0:router(config-if)# ip address 10.10.10.10 255.255.255.255	Assigns an IP address and subnet mask to the interface.
Step 14	no shutdown Example: RP/0/RSP0/CPU0:router(config-if)# no shutdown	<p>Removes the shutdown configuration.</p> <p>Note</p> <ul style="list-style-type: none"> • Removal of the shutdown configuration eliminates the forced administrative down on the interface, enabling it to move to an up or down state (assuming that the parent SONET layer is not configured administratively down).
Step 15	end or commit Example: RP/0/RSP0/CPU0:router(config-sonet)# end or RP/0/RSP0/CPU0:router(config-sonet)# commit	<p>Saves configuration changes.</p> <ul style="list-style-type: none"> • When you issue the end command, the system prompts you to commit changes: Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]: • Entering yes saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode. • Entering no exits the configuration session and returns the router to EXEC mode without committing the configuration changes. • Entering cancel leaves the router in the current configuration session without exiting or committing the configuration changes. • Use the commit command to save the configuration changes to the running configuration file and remain within the configuration session.
Step 16	show controllers sonet interface-path-id Example: RP/0//RSP0/CPU0:router# show controllers sonet 0/1/1/0	Verifies the SONET controller configuration.

Configuring Channelized SONET APS

This task explains how to configure APS for channelized SONET lines.

Before you begin

- You should know how to configure the SONET controller as specified in the [How to Configure Channelized SONET/SDH](#) section of the *Configuring Clear Channel SONET Controllers* module.
- You should know how to configure the SONET APS as specified in the [Configuring SONET APS](#) section of the *Configuring Clear Channel SONET Controllers* module.

Restrictions

- SONET APS is not supported on the 1-Port Channelized OC-48/STM-16 SPA.
- The Cisco ASR 9000 Series Router supports multirouter APS only on the following SPAs:
 - 1-Port Channelized OC-3/STM-1 SPA
 - 2-Port Channelized OC-12c/DS0 SPA

SUMMARY STEPS

1. **aps group number**
2. **channel 0 local sonet interface**
3. or
4. **channel 0 remote ip-address**
5. **channel 1 local sonet interface**
6. or
7. **channel 1 remote ip-address**
8. **signalling {sonet | sdh}**
9. **end or commit**
10. **show aps**
11. **show aps group [number]**

DETAILED STEPS

	Command or Action	Purpose
Step 1	aps group number Example: <pre>RP/0/RSP0/CPU0:router(config)# aps group 1</pre>	Adds an APS group with a specified number and enters APS group configuration mode. <ul style="list-style-type: none"> • Use the aps group command in global configuration mode. • To remove a group, use the no form of this command, as in: no aps group number, where the value range is from 1 to 255.

	Command or Action	Purpose
		<p>Note</p> <ul style="list-style-type: none"> • To use the aps group command, you must be a member of a user group associated with the proper task IDs for APS commands. • The aps group command is used even when a single protect group is configured.
Step 2	channel 0 local sonet interface	
Step 3	or	
Step 4	channel 0 remote ip-address Example: <pre>RP/0/RSP0/CPU0:router(config-aps)# channel 0 local SONET 0/0/0/1 or RP/0/RSP0/CPU0:router(config-aps)# channel 0 remote 172.18.69.123</pre>	Creates a protect channel for the APS group, where 0 designates a protect channel. <p>Note</p> <ul style="list-style-type: none"> • The protect channel must be assigned before the active channel can be assigned. • To configure APS where both channels are on one router, use the channel local command for both the protect and active channels. To configure APS using two different routers where the active channel is on one router and the protect channel is on another router, use the channel local command for either the protect or the active channel, but use the channel remote command for the other channel.
Step 5	channel 1 local sonet interface	
Step 6	or	
Step 7	channel 1 remote ip-address Example:	Creates an active channel for the APS group, where 1 designates an active channel.

	Command or Action	Purpose
	<pre>RP/0/RSP0/CPU0:router(config-aps)# channel 1 local SONET 0/0/0/2 or RP/0/0/CPU0:router(config-aps)# channel 1 remote 172.18.69.123</pre>	<p>Note</p> <ul style="list-style-type: none"> The active channel must be assigned after the protect channel is assigned. To configure APS where both channels are on one router, use the channel local command for both the protect and active channels. To configure APS using two different routers where the active channel is on one router and the protect channel is on another router, use the channel local command for either the protect or the active channel, but use the channel remote command for the other channel.
Step 8	signalling {sonet sdh} Example: <pre>RP/0/RSP0/CPU0:router(config-aps)# signalling sonet</pre>	Configures the K1K2 overhead byte used for automatic protection switching (APS). The keyword options are: <ul style="list-style-type: none"> sonet—Sets signaling to SONET. sdh—Sets signaling to Synchronous Digital Hierarchy (SDH).
Step 9	end or commit Example: <pre>RP/0/RSP0/CPU0:router(config-sonet)# end or RP/0/RSP0/CPU0:router(config-sonet)# commit</pre>	Saves configuration changes. <ul style="list-style-type: none"> When you issue the end command, the system prompts you to commit changes: Uncommitted changes found, commit them before exiting(yes/no/cancel) ? [cancel] : Entering yes saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode. Entering no exits the configuration session and returns the router to EXEC mode without committing the configuration changes. Entering cancel leaves the router in the current configuration session without exiting or committing the configuration changes. Use the commit command to save the configuration changes to the running configuration file and remain within the configuration session.
Step 10	show aps Example:	(Optional) Displays the operational status for all configured SONET APS groups.

	Command or Action	Purpose
	RP/0/RSP0/CPU0:router# show aps	
Step 11	show aps group [number] Example: RP/0/RSP0/CPU0:router# show aps group 3	(Optional) Displays the operational status for configured SONET APS groups. Note • The show aps group command is more useful than the show aps command when multiple groups are defined.

Configuring SDH AU-3

This section includes the following tasks:

Configuring SDH AU-3 Mapped to C11-T1 or C12-E1

This task explains how to configure SDH AU-3 with c11-t1 or c12-e1 mapping.

Before you begin

- You should know how to configure the SONET controller as specified in the [How to Configure Channelized SONET/SDH](#) section of the *Configuring Clear Channel SONET Controllers* module.

Restrictions

Channelized SDH AU-3 with c11-t1 or c12-e1 mapping is supported on the following SPAs:

- Cisco 1-Port Channelized OC-3/STM-1 SPA
- Cisco 2-Port Channelized OC-12c/DS0 SPA

SUMMARY STEPS

1. **configure**
2. **controller sonet interface-path-id**
3. **clock source {internal | line}**
4. **framing sdh**
5. **au number**
6. **mode mode**
7. **root**
8. **controller t1 interface-path-id**
9. **channel-group number**
10. **timeslots num1:num2:num3:num4**
11. **or**
12. **timeslots range1-range2**
13. **show configuration**
14. **root**
15. **interface serial interface-path-id**

16. **encapsulation {frame-relay | hdlc | ppp}**
17. **ipv4 ip-address mask**
18. **no shutdown**
19. **end or commit**
20. **show controllers sonet interface-path-id**

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure Example: RP/0/RSP0/CPU0:router# configure	Enters global configuration mode.
Step 2	controller sonet interface-path-id Example: RP/0/RSP0/CPU0:router(config)# controller sonet 0/1/1/0	Enters SONET controller configuration submode and specifies the SONET controller name and interface-path-id identifier with the <i>rack/slot/module/port</i> notation.
Step 3	clock source {internal line} Example: RP/0/RSP0/CPU0:router(config-sonet)# clock source internal	<p>Configures the SONET port transmit clock source, where the internal keyword sets the internal clock and the line keyword sets the clock recovered from the line.</p> <ul style="list-style-type: none"> • Use the line keyword whenever clocking is derived from the network. Use the internal keyword when two routers are connected back to back or over fiber for which no clocking is available. • line is the default keyword. <p>Note • Internal clocking is required for SRP interfaces.</p>
Step 4	framing sdh Example: RP/0/RSP0/CPU0:router(config-sonet)# framing sdh	<p>Configures the controller framing for Synchronous Digital Hierarchy (SDH) framing.</p> <p>SONET framing (sonet) is the default.</p>
Step 5	au number Example: RP/0/RSP0/CPU0:router(config-sonet)# au 1	<p>Specifies the administrative unit (AU) group and enters AU path configuration mode. For AU-3, the valid range is:</p> <ul style="list-style-type: none"> • 1 to 3—1-Port Channelized OC-3/STM-1 SPA • 1 to 12—2-Port Channelized OC-12c/DS0 SPA

	Command or Action	Purpose
		<p>Note</p> <ul style="list-style-type: none"> The au command does not specify the AU type. It specifies the number of the AU group for the AU type that you want to configure. The range for the AU command varies based on whether you are configuring AU-3 or AU-4.
Step 6	mode mode Example: <pre>RP/0/RSP0/CPU0:router(config-auPath) # mode c11-t1</pre>	Sets the mode of interface at the AU level. AU-3 paths can be mapped to c11-t1 or c12-e1 on supported SPAs.
Step 7	root Example: <pre>RP/0/RSP0/CPU0:router(config-auPath) # root</pre>	Exits to global configuration mode.
Step 8	controller t1 interface-path-id Example: <pre>RP/0/RSP0/CPU0:router(config) # controller T1 0/1/1/0/0/0/0</pre>	Enters T1 controller configuration submode and specifies the T1 controller name and <i>interface-path-id</i> with the <i>rack/slot/module/port/auNum/t1Num</i> notation.
Step 9	channel-group number Example: <pre>RP/0/RSP0/CPU0:router(config-t1) # channel-group 0</pre>	Sets the channel-group number to which time slots are assigned. The range is from 1 to 28.
Step 10	timeslots num1:num2:num3:num4	
Step 11	or	
Step 12	timeslots range1-range2 Example: <pre>RP/0/RSP0/CPU0:router(config-t1-channel_group) # timeslots 1:3:7:9 RP/0/RSP0/CPU0:router(config-t1-channel_group) # timeslots 1-12</pre>	Specifies time slots for the interface by number with the <i>num1:num2:num3:num4</i> notation, or by range with the <i>range1-range2</i> notation.
Step 13	show configuration Example: <pre>RP/0/RSP0/CPU0:router(config-t1-channel_group) # show configuration</pre>	Displays the contents of uncommitted configuration.

	Command or Action	Purpose
Step 14	root Example: RP/0/RSP0/CPU0:router(config-t3)# root	Exits to global configuration mode.
Step 15	interface serial interface-path-id Example: RP/0/RSP0/CPU0:router(config)# interface serial 0/1/1/0/0:0	Specifies the complete interface number with the <i>rack/slot/module/port/T3Num/T1num:instance</i> notation.
Step 16	encapsulation {frame-relay hdlc ppp} Example: RP/0/RSP0/CPU0:router(config-if)# encapsulation frame-relay	Specifies the encapsulation type with the one of the following keywords: <ul style="list-style-type: none">• frame-relay—Frame Relay network protocol• hdlc—High-level Data Link Control (HDLC) synchronous protocol• ppp—Point-to-Point Protocol
Step 17	ipv4 ip-address mask Example: RP/0/RSP0/CPU0:router(config-if)# ip address 10.10.10.10 255.255.255.255	Assigns an IP address and subnet mask to the interface.
Step 18	no shutdown Example: RP/0/RSP0/CPU0:router(config-if)# no shutdown	Removes the shutdown configuration. Note • Removal of the shutdown configuration eliminates the forced administrative down on the interface, enabling it to move to an up or down state (assuming that the parent SONET layer is not configured administratively down).
Step 19	end or commit Example: RP/0/RSP0/CPU0:router(config-sonet)# end or RP/0/RSP0/CPU0:router(config-sonet)# commit	Saves configuration changes. <ul style="list-style-type: none">• When you issue the end command, the system prompts you to commit changes: Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]:• Entering yes saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.

	Command or Action	Purpose
		<ul style="list-style-type: none"> • Entering no exits the configuration session and returns the router to EXEC mode without committing the configuration changes. • Entering cancel leaves the router in the current configuration session without exiting or committing the configuration changes. • Use the commit command to save the configuration changes to the running configuration file and remain within the configuration session.
Step 20	show controllers sonet <i>interface-path-id</i> Example: <pre>RP/0/RSP0/CPU0:router# show controllers sonet 0/1/1/0</pre>	Verifies the SONET controller configuration.

Configuring SDH AU-3 Mapped to T3 or E3

This task explains how to configure SDH AU-3 mapped to T3 or E3.

Before you begin

- You should know how to configure the SONET controller as specified in the [How to Configure Channelized SONET/SDH](#) section of the *Configuring Clear Channel SONET Controllers* module.

Restrictions

Channelized SDH AU-3 with T3 or E3 mapping is supported on the following SPAs:

- Cisco 1-Port Channelized OC-48/STM-16 SPA
- Cisco 1-Port Channelized OC-3/STM-1 SPA
- Cisco 2-Port Channelized OC-12c/DS0 SPA

SUMMARY STEPS

1. **configure**
2. **controller sonet *interface-path-id***
3. **clock source {internal | line}**
4. **framing sdh**
5. **au *number***
6. **mode t3**
7. **or**
8. **mode e3**
9. **root**
10. **controller {t3 | e3} *interface-path-id***
11. **mode serial**

12. **show configuration**
13. **root**
14. **interface serial *interface-path-id***
15. **encapsulation frame-relay | hdlc | ppp**
16. **ipv4 *ip-address mask***
17. **no shutdown**
18. **end or commit**
19. **show controllers sonet *interface-path-id***

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure Example: RP/0/RSP0/CPU0:router# configure	Enters global configuration mode.
Step 2	controller sonet <i>interface-path-id</i> Example: RP/0/RSP0/CPU0:router(config)# controller sonet 0/1/1/0	Enters SONET controller configuration submode and specifies the SONET controller name and interface-path-id identifier with the <i>rack/slot/module/port</i> notation.
Step 3	clock source {internal line} Example: RP/0/RSP0/CPU0:router(config-sonet)# clock source internal	Configures the SONET port transmit clock source, where the internal keyword sets the internal clock and the line keyword sets the clock recovered from the line. <ul style="list-style-type: none"> • Use the line keyword whenever clocking is derived from the network. Use the internal keyword when two routers are connected back to back or over fiber for which no clocking is available. • line is the default keyword. <p>Note • Internal clocking is required for SRP interfaces.</p>
Step 4	framing sdh Example: RP/0/RSP0/CPU0:router(config-sonet)# framing sdh	Configures the controller framing for Synchronous Digital Hierarchy (SDH) framing. SONET framing (sonet) is the default.
Step 5	au number Example: RP/0/RSP0/CPU0:router(config-sonet)# au 1	Specifies the administrative unit (AU) group and enters AU path configuration mode. For AU-3, the valid range is: <ul style="list-style-type: none"> • 1 to 48—1-Port Channelized OC-48/DS3 SPA • 1 to 3—1-Port Channelized OC-3/STM-1 SPA

	Command or Action	Purpose
		<ul style="list-style-type: none"> • 1 to 12—2-Port Channelized OC-12c/DS0 SPA <p>Note</p> <ul style="list-style-type: none"> • The au command does not specify the AU type. It specifies the number of the AU group for the AU type that you want to configure. The range for the AU command varies based on whether you are configuring AU-3 or AU-4.
Step 6	mode t3	
Step 7	or	
Step 8	mode e3 Example: RP/0/RSP0/CPU0:router(config-auPath)# mode t3	Sets the mode of interface at the AU level to T3 or E3.
Step 9	root Example: RP/0/RSP0/CPU0:router(config-auPath)# root	Exits to global configuration mode.
Step 10	controller {t3 e3} interface-path-id Example: RP/0/RSP0/CPU0:router(config)# controller T3 0/1/1/0/0	Enters T3 or E3 controller configuration submode and specifies the T3 or E3 controller name and <i>interface-path-id</i> with the <i>rack/slot/module/port/auNum</i> notation.
Step 11	mode serial Example: RP/0/RSP0/CPU0:router(config-t3)# mode serial	Configures the mode of the port to be clear channel serial.
Step 12	show configuration Example: RP/0/RSP0/CPU0:router(config-t3)# show configuration	Displays the contents of uncommitted configuration.
Step 13	root Example: RP/0/RSP0/CPU0:router(config-t3)# root	Exits to global configuration mode.

	Command or Action	Purpose
Step 14	interface serial <i>interface-path-id</i> Example: RP/0/RSP0/CPU0:router(config)# interface serial 0/1/1/0/0/0:0	Specifies the complete interface number with the <i>rack/slot/module/port/T3Num/T1num:instance</i> notation.
Step 15	encapsulation frame-relay hdlc ppp Example: RP/0/RSP0/CPU0:router(config-if)# encapsulation frame-relay hdlc ppp	Specifies the encapsulation type with the one of the following keywords: <ul style="list-style-type: none">• frame-relay—Frame Relay network protocol• hdlc—High-level Data Link Control (HDLC) synchronous protocol• ppp—Point-to-Point Protocol
Step 16	ipv4 <i>ip-address mask</i> Example: RP/0/RSP0/CPU0:router(config-if)# ip address 10.10.10.10 255.255.255.255	Assigns an IP address and subnet mask to the interface.
Step 17	no shutdown Example: RP/0/RSP0/CPU0:router(config-if)# no shutdown	Removes the shutdown configuration. Note • Removal of the shutdown configuration eliminates the forced administrative down on the interface, enabling it to move to an up or down state (assuming that the parent SONET layer is not configured administratively down).
Step 18	end or commit Example: RP/0/RSP0/CPU0:router(config-sonet)# end or RP/0/RSP0/CPU0:router(config-sonet)# commit	Saves configuration changes. <ul style="list-style-type: none">• When you issue the end command, the system prompts you to commit changes: Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]:• Entering yes saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.• Entering no exits the configuration session and returns the router to EXEC mode without committing the configuration changes.• Entering cancel leaves the router in the current configuration session without exiting or committing the configuration changes.

	Command or Action	Purpose
		<ul style="list-style-type: none"> Use the commit command to save the configuration changes to the running configuration file and remain within the configuration session.
Step 19	show controllers sonet interface-path-id Example: <pre>RP/0/RSP0/CPU0:router# show controllers sonet 0/1/1/0</pre>	Verifies the SONET controller configuration.

Configuring SDH AU-4

This task explains how to configure an SDH AU-4 stream into a TUG-3 channel mapped to E3s.

Before you begin

- You should know how to configure the SONET controller as specified in the [How to Configure Channelized SONET/SDH](#) section of the *Configuring Clear Channel SONET Controllers* module.

Restrictions

- Channelized SDH is supported on the following SPAs:
 - Cisco 1-Port Channelized OC-48/STM-16 SPA
 - Cisco 1-Port Channelized OC-3/STM-1 SPA
 - Cisco 2-Port Channelized OC-12/DS0 SPA
- In this release, AU-4 paths can only be channelized into TUG-3s.
- The 1-Port Channelized OC-48/STM-16 SPA does not support T1 or E1 channelization.

SUMMARY STEPS

- configure**
- controller sonet interface-path-id**
- clock source {internal | line}**
- framing sdh**
- au number**
- mode tug3**
- width number**
- tug3 number**
- mode mode**
- root**
- controller name instance**
- mode mode**
- root**

14. **controller** *name instance*
15. **channel-group** *number*
16. **timeslots** *num1: num2: num3: num4*
17. or
18. **timeslots** *range1-range2*
19. **show configuration**
20. **root**
21. **interface serial** *interface-path-id*
22. **encapsulation** {**frame-relay** | **hdlc** | **ppp**}
23. **ipv4** *ip-address mask*
24. **no shutdown**
25. **end** or **commit**
26. **show controllers sonet** *interface-path-id*

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure Example: <pre>RP/0/0/CPU0:router# configure</pre>	Enters global configuration mode.
Step 2	controller sonet <i>interface-path-id</i> Example: <pre>RP/0/0/CPU0:router(config)# controller sonet 0/1/1/0</pre>	Enters SONET controller configuration submode and specifies the SONET controller name and <i>interface-path-id</i> with the <i>rack/slot/module/port</i> notation.
Step 3	clock source { internal line } Example: <pre>RP/0/0/CPU0:router(config-sonet)# clock source internal</pre>	Configures the SONET port transmit clock source, where the internal keyword sets the internal clock and the line keyword sets the clock recovered from the line. <ul style="list-style-type: none"> • Use the line keyword whenever clocking is derived from the network. Use the internal keyword when two routers are connected back to back or over fiber for which no clocking is available. • line is the default keyword. <p>Note • Internal clocking is required for SRP interfaces.</p>
Step 4	framing sdh Example: <pre>RP/0/0/CPU0:router(config-sonet)# framing sdh</pre>	Configures the controller for Synchronous Digital Hierarchy (SDH) framing. SONET framing (sonet) is the default.

	Command or Action	Purpose
Step 5	au number Example: <pre>RP/0/RSP0/CPU0:router(config-sonet)# au 1</pre>	<p>Specifies the administrative unit (AU) group and enters AU path configuration mode. For AU-4, the valid range is:</p> <ul style="list-style-type: none"> • 1 to 16—1-Port Channelized OC-48/DS3 SPA • 1 to 3—1-Port Channelized OC-3/STM-1 SPA • 1 to 4—2-Port Channelized OC-12c/DS0 SPA <p>Note</p> <ul style="list-style-type: none"> • The au command does not specify the AU type. It specifies the number of the AU group for the AU type that you want to configure. The range for the AU command varies based on whether you are configuring AU-3 or AU-4.
Step 6	mode tug3 Example: <pre>RP/0/0/CPU0:router(config-auPath)# mode tug3</pre>	Sets the mode of interface at the AU level. Currently only TUG3 is supported.
Step 7	width number Example: <pre>RP/0/0/CPU0:router(config-auPath)# width 3</pre>	Configures the number of the AU streams.
Step 8	tug3 number Example: <pre>RP/0/0/CPU0:router(config-auPath)#tug3 1</pre>	Specifies the Tributary Unit Group (TUG) <i>number</i> and enters the config-tug3Path mode. The range is 1 to 3.
Step 9	mode mode Example: <pre>RP/0/0/CPU0:router(config-tug3Path)# mode e3</pre>	<p>Sets the mode of interface at the tug3 level. The modes are:</p> <ul style="list-style-type: none"> • c11—TUG-3 path carrying TU-11 • c11-t1—TUG-3 path carrying TU-11 to T1 • c12—TUG-3 path carrying TU-12 • c12-e1—TUG-3 path carrying TU-12 to E1 • e3—TUG-3 path carrying E3 • t3—TUG-3 path carrying T3 <p>Note</p> <ul style="list-style-type: none"> • The 1-Port Channelized OC-48/STM-16 SPA only supports the e3 and t3 options.

	Command or Action	Purpose
Step 10	root Example: RP/0/0/CPU0:router(config-tug3Path) # root	Exits to global configuration mode.
Step 11	controller name instance Example: RP/0/0/CPU0:router(config)# controller e3 0/1/1/0/0/0	Enters controller configuration submode and specifies the controller name and instance identifier with the <i>rack/slot/module/port/name/instance</i> notation. The controller names are: <ul style="list-style-type: none">• e3—TUG3 path carrying E3• t3—TUG3 path carrying T3• e1—channelized E1 port Note • In this step, you can create an E3 or T3 controller and add T1 channels under the T3 controller as shown in Step 14, or you can create a channelized E1 port at this point. • E1 is not supported on the 1-Port Channelized OC-48/STM-16 SPA.
Step 12	mode mode Example: RP/0/0/CPU0:router(config-e3) # mode e1	Sets the mode of interface. The modes are: <ul style="list-style-type: none">• e1—Channelized into 21 E1s• serial—Clear Channel carrying HDLC-like payload• t1—Channelized into 28 T1s Note • T1 and E1 are not supported on the 1-Port Channelized OC-48/STM-16 SPA.
Step 13	root Example: RP/0/0/CPU0:router(config-e3) # root	Exits to global configuration mode.
Step 14	controller name instance Example: RP/0/0/CPU0:router(config)# controller E1 0/1/1/0/0/0/0/0	Enters controller configuration submode and specifies the controller name and instance identifier with the <i>rack/slot/module/port/name/instance1/instance2</i> notation. The controller names are: <ul style="list-style-type: none">• serial—Clear Channel carrying HDLC-like payload.• t1—Channelized into 24 T1s.

	Command or Action	Purpose
Step 15	channel-group <i>number</i> Example: RP/0/0/CPU0:router(config-e1)# channel-group 0	Sets the channel-group number to which time slots are assigned. <ul style="list-style-type: none"> • For t1, the range is from 1 to 24. • For e1, the range is from 1 to 32.
Step 16	timeslots <i>num1: num2: num3: num4</i>	
Step 17	or	
Step 18	timeslots <i>range1-range2</i> Example: RP/0/0/CPU0:router(config-e1-channel_group)# timeslots 1:3:7:9 RP/0/0/CPU0:router(config-e1-channel_group)# timeslots 1-12	Specifies time slots for the interface by number with the <i>num1: num2: num3: num4</i> notation, or by range with the <i>range1-range2</i> notation.
Step 19	show configuration Example: RP/0/0/CPU0:router(config-e1-channel_group)# show configuration	Displays the contents of uncommitted configuration.
Step 20	root Example: RP/0/0/CPU0:router(config-e1-channel_group)# root	Exits to global configuration mode.
Step 21	interface serial <i>interface-path-id</i> Example: RP/0/0/CPU0:router(config)# interface serial 0/1/1/0/0:0	Specifies the complete interface number with the <i>rack/slot/module/port/T3Num/T1num:instance</i> notation.
Step 22	encapsulation {frame-relay hdlc ppp} Example: Router(config-if)# encapsulation frame-relay hdlc ppp	Specifies the encapsulation type with one of the following keywords: <ul style="list-style-type: none"> • frame-relay—Frame Relay network protocol • hdlc—High-level Data Link Control (HDLC) synchronous protocol • ppp—Point-to-Point Protocol
Step 23	ipv4 <i>ip-address mask</i> Example: Router(config-if)# ip address 10.10.10.10 255.255.255.255	Assigns an IP address and subnet mask to the interface.

	Command or Action	Purpose
Step 24	no shutdown Example: <pre>RP/0/0/CPU0:router (config-if)# no shutdown</pre>	Purpose Removes the shutdown configuration. Note <ul style="list-style-type: none"> Removal of the shutdown configuration eliminates the forced administrative down on the interface, enabling it to move to an up or down state (assuming that the parent SONET layer is not configured administratively down).
Step 25	end or commit Example: <pre>RP/0/0/CPU0:router(config-sonet)# end</pre> <p>or</p> <pre>RP/0/0/CPU0:router(config-sonet)# commit</pre>	Saves configuration changes. <ul style="list-style-type: none"> When you issue the end command, the system prompts you to commit changes: Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]: Entering yes saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode. Entering no exits the configuration session and returns the router to EXEC mode without committing the configuration changes. Entering cancel leaves the router in the current configuration session without exiting or committing the configuration changes. Use the commit command to save the configuration changes to the running configuration file and remain within the configuration session.
Step 26	show controllers sonet interface-path-id Example: <pre>RP/0/0/CPU0:router# show controllers sonet 0/1/1/0</pre>	Verifies the SONET controller configuration.

Configuration Examples for Channelized SONET

This section contains the following examples:

Channelized SONET Examples

Channelized SONET T3 to T1 Configuration: Example

This example shows SONET T3 to T1 configuration.

```
configure
controller sonet 0/1/1/0
  clock source internal
  framing sonet
  sts 1
  mode t3
  width 3
  root
controller t3 0/1/1/0/0
  mode t1
framing auto-detect
  root
controller t1 0/1/1/0/0/0
  framing esf
  channel-group 0
    timeslots 1:3:7:9
show configuration
  root
interface serial 0/1/1/0/0/0:0
encapsulation hdlc
ip address 10.10.10.10 255.255.255.255
no shutdown
commit
show controllers sonet 0/1/1/0
```

Channelized SONET in VT1.5 Mode and T1 Channelization to NxDS0



Note This example is not supported on the 1-Port Channelized OC-48/STM-16 SPA.

This example shows how to configure SONET channelized to NxDS0s through SONET VT1.5 mode:

```
configure
controller sonet 0/1/1/0
  clock source internal
  framing sonet
  sts 1
  mode vt15-t1
  root
controller t1 0/1/1/0/0/0
  channel-group 0 timeslots 1
  channel-group 1 timeslots 2-3
commit
```

Channelized Packet over SONET Configuration: Example

This example shows Channelized Packet over SONET configuration.

```
configure
```

SONET Clear Channel T3 Configuration: Example

```

controller sonet 0/1/1/0
clock source internal
framing sonet
sts 1
mode pos scramble
width 3
root
interface POS 0/1/1/0
encapsulation hdlc
pos crc 32
mtu 4474
no shutdown
commit
show interfaces pos 0/1/1/0

```

SONET Clear Channel T3 Configuration: Example

This example shows SONET clear channel configuration for T3:

```

configure
controller sonet 0/1/1/0
clock source internal
framing sonet
sts 1
mode t3
root
controller t3 0/1/1/0/0
mode serial
root
interface serial 0/1/1/0/0/0:0
encapsulation ppp
ip address 10.10.10.10 255.255.255.255
no shutdown
commit
show controllers sonet 0/1/1/0

```

Channelized SONET APS Multirouter Configuration: Example

This example shows SONET APS multirouter configuration.

```

aps group 1
channel 0 local SONET 0/0/0/1
channel 1 remote 172.18.69.123

signalling sonet

commit
show aps
show aps group 3

```

Channelized SDH Examples

Channelized SDH AU-3 Configuration: Examples

This section includes the following configuration examples

Channelized SDH AU-3 to VC-3 and Clear Channel T3/E3: Examples

This example shows how to configure SDH AU-3 to VC-3 and clear channel T3:

```
configure
controller sonet 0/1/1/0
clock source internal
framing sdh
au 1
width 1
mode t3
root
controller t3 0/1/1/0/1
mode serial
commit
```

This example shows how to configure SDH AU-3 to VC-3 and clear channel E3:

```
configure
controller sonet 0/1/1/0
clock source internal
framing sdh
au 1
width 1
mode e3
root
controller e3 0/1/1/0/1
mode serial
commit
```

Channelized SDH AU-3 to TUG-2, VC-11, T1 and NxDSOs: Example



Note This example is not supported on the 1-Port Channelized OC-48/STM-16 SPA.

The following example shows how to configure SDH AU-3 to TUG-2, VC-11 and channelized T1 to NxDSOs:

```
configure
controller sonet 0/1/1/0
clock source internal
framing sdh
au 1
mode c11-t1
width 1
root
controller T1 0/1/1/0/0/1/1
channel-group 0
timeslots 1-12
show configuration
root
interface serial 0/1/1/0/1/1:0
encapsulation ppp
ip address 10.10.10.10 255.255.255.255
no shutdown
commit
show controllers sonet 0/1/1/0
```



Note This example is not supported on the 1-Port Channelized OC-48/STM-16 SPA.

The following example shows how to configure SDH AU-3 to TUG-2, VC-12 and channelized E1 to NxDS0s:

```
configure
controller sonet 0/1/1/0
clock source internal
framing sdh
au 1
mode c12-e1
width 1
root
controller e1 0/1/1/0/0/1/1
channel-group 0
timeslots 1-12
show configuration
root
interface serial 0/1/1/0/1/1:0
encapsulation ppp
ip address 10.10.10.10 255.255.255.255
no shutdown
commit
show controllers sonet 0/1/1/0
```

Channelized SDH AU-4 Configuration: Examples

This section includes the following configuration examples

Channelized SDH AU-4 to TUG-3 and Clear Channel T3/E3: Examples

This example shows SDH AU-4 channelization to TUG-3 and clear channel T3:

```
configure
controller sonet 0/4/0/0
framing sdh
au 1
width 3
mode tug3
tug3 1
mode t3
root
controller t3 0/4/0/0/1/1
mode serial
commit
```

This example shows SDH AU-4 channelization to TUG-3 and clear channel E3:

```
configure
controller sonet 0/4/0/0
framing sdh
au 1
width 3
mode tug3
tug3 1
```

```

mode e3
root
controller e3 0/4/0/0/1/1
mode serial
commit

```

Channelized SDH AU-4 to TUG-3, TUG-2, and T1/E1 and NxDS0: Examples



Note Channelization to T1/E1 and NxDS0s is not supported on the 1-Port Channelized OC-48/STM-16 SPA.

The following example shows SDH AU-4 configuration with unframed E1 controllers and serial interfaces:

```

configure
controller sonet 0/1/2/0
framing sdh
au 1
width 3
mode tug3
tug3 1
mode c12-e1
!
tug3 2
mode c12-e1
!
tug3 3
mode c12-e1
!
controller E1 0/1/2/0/0/1/1/1/1
framing unframed
!
controller E1 0/1/2/0/0/1/1/1/2
framing unframed
!
controller E1 0/1/2/0/0/1/1/1/3
framing unframed
!
interface Serial0/1/2/0/0/1/1/1/1:0
encapsulation ppp
multilink
group 1
!
interface Serial0/1/2/0/0/1/1/1/2:0
encapsulation ppp
multilink
group 1
!
!
interface Serial0/1/2/0/0/1/1/1/3:0
encapsulation ppp
multilink
group 1
!
```

The following example shows SDH AU-4 configuration with E1 controller channel groups and serial interfaces:

```

configure
controller SONET0/3/2/0
framing sdh
au 1

```

Channelized SDH AU-4 to TUG-3, TUG-2, and T1/E1 and NxDS0: Examples

```

width 3
mode tug3
tug3 1
mode c12-e1
!
tug3 2
mode c12-e1
!
tug3 3
mode c12-e1
!
controller E1 0/3/2/0/1/1/1/1
framing crc4
channel-group 0
timeslots 1-4
!
controller E1 0/3/2/0/1/1/3/1
framing crc4
channel-group 0
timeslots 1-31
!
controller E1 0/3/2/0/1/1/1/2
framing crc4
channel-group 0
timeslots 1-31
!
controller E1 0/3/2/0/1/2/7/3
framing crc4
channel-group 0
timeslots 1-5
!
channel-group 1
timeslots 6-31
!
interface Serial0/3/2/0/1/1/1/1:0
encapsulation frame-relay IETF
frame-relay lmi-type ansi
frame-relay intf-type dce
!
interface Serial0/3/2/0/1/1/1/1:0.1 point-to-point
ipv4 address 192.168.200.2 255.255.255.252
ipv4 verify unicast source reachable-via rx
pvc 100
encap ietf
!
interface Serial0/3/2/0/1/1/3/1:0
encapsulation ppp
multilink
group 1
!
interface Serial0/3/2/0/1/1/1/2:0
encapsulation ppp
multilink
group 1

```