



# Multiprotocol Label Switching (MPLS) Configuration Guide, Cisco IOS XE Bengaluru 17.5.x (Catalyst 9300 Switches)

**First Published: 2021-03-31** 

### **Americas Headquarters**

Cisco Systems, Inc. 170 West Tasman Drive San Jose, CA 95134-1706 USA http://www.cisco.com Tel: 408 526-4000

800 553-NETS (6387) Fax: 408 527-0883 THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

All printed copies and duplicate soft copies of this document are considered uncontrolled. See the current online version for the latest version.

Cisco has more than 200 offices worldwide. Addresses and phone numbers are listed on the Cisco website at www.cisco.com/go/offices.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com go trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2021 Cisco Systems, Inc. All rights reserved.



### CONTENTS

CHAPTER 1	Configuring	Multiprotocol 1	Label Switching	(MPLS)	1
-----------	-------------	-----------------	-----------------	--------	---

Multiprotocol Label Switching 1

Restrictions for Multiprotocol Label Switching 1

Information about Multiprotocol Label Switching 1

Functional Description of Multiprotocol Label Switching 2

Label Switching Functions 2

Distribution of Label Bindings 2

MPLS Layer 3 VPN 3

Classifying and Marking MPLS QoS EXP 3

How to Configure Multiprotocol Label Switching 3

Configuring a Switch for MPLS Switching 4

Configuring a Switch for MPLS Forwarding 4

Verifying Multiprotocol Label Switching Configuration 5

Verifying Configuration of MPLS Switching 5

Verifying Configuration of MPLS Forwarding 6

Additional References for Multiprotocol Label Switching 8

Feature History for Multiprotocol Label Switching 8

### CHAPTER 2 Configuring MPLS Layer 3 VPN 9

MPLS Layer 3 VPNs 9

Prerequisites for MPLS Virtual Private Networks 9

Restrictions for MPLS Virtual Private Networks 10

Information About MPLS Virtual Private Networks 11

MPLS Virtual Private Network Definition 12

How an MPLS Virtual Private Network Works 13

Major Components of an MPLS Virtual Private Network 13

CHAPTER 3

Benefits of an MPLS Virtual Private Network 13
How to Configure MPLS Virtual Private Networks 15
Configuring the Core Network 15
Connecting the MPLS Virtual Private Network Customers 16
Verifying the Virtual Private Network Configuration 19
Verifying Connectivity Between MPLS Virtual Private Network Sites 19
Configuration Examples for MPLS Virtual Private Networks 20
Example: Configuring an MPLS Virtual Private Network Using RIP 21
Example: Configuring an MPLS Virtual Private Network Using Static Routes 22
Example: Configuring an MPLS Virtual Private Network Using BGP 23
Additional References 25
Feature History for MPLS Virtual Private Networks 25
Configuring eBGP and iBGP Multipath 27
BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN 27
Prerequisites for BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN 27
Restrictions for BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN 27
Information About BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN 28
Multipath Load Sharing Between eBGP and iBGP 28
eBGP and iBGP Multipath Load Sharing in a BGP MPLS Network 29
Benefits of Multipath Load Sharing for Both eBGP and iBGP 29
How to Configure BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN <b>30</b>
Configuring Multipath Load Sharing for Both eBGP an iBGP 30
Verifying Multipath Load Sharing for Both eBGP an iBGP 31
Configuration Examples for the BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN Feature 31
eBGP and iBGP Multipath Load Sharing Configuration Example 32
Feature Information for BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN 32
Configuring EIGRP MPLS VPN PE-CE Site of Origin 33
EIGRP MPLS VPN PE-CE Site of Origin 33
Prerequisites for EIGRP MPLS VPN PE-CE Site of Origin 33
Restrictions for EIGRP MPLS VPN PE-CE Site of Origin 33
Information About EIGRP MPLS VPN PE-CE Site of Origin 34

CHAPTER 4

EIGRP MPLS VPN PE-CE Site of Origin Support Overview 34
Site of Origin Support for Backdoor Links 34
Router Interoperation with the Site of Origin Extended Community 35
Redistribution of BGP VPN Routes That Carry the Site of Origin into EIGRP 35
Benefits of the EIGRP MPLS VPN PE-CE Site of Origin Support Feature 35
How to Configure EIGRP MPLS VPN PE-CE Site of Origin Support 35
Configuring the Site of Origin Extended Community 36
Verifying the Configuration of the SoO Extended Community 38
Configuration Examples for EIGRP MPLS VPN PE-CE SoO 38
Example Configuring the Site of Origin Extended Community 38
Example Verifying the Site of Origin Extended Community 38
Feature History for EIGRP MPLS VPN PE-CE Site of Origin 39
Configuring Ethernet-over-MPLS and Pseudowire Redundancy 41
Configuring Ethernet-over-MPLS 41
Prerequisites for Ethernet-over-MPLS 41
Restrictions for Ethernet-over-MPLS 41
Restrictions for Ethernet-over-MPLS Port Mode 42
Restrictions for EoMPLS VLAN Mode 42
Information About Ethernet-over-MPLS 43
How to Configure Ethernet-over-MPLS 43
Configuring Ethernet-over-MPLS Port Mode 43
Configuring Ethernet-over-MPLS VLAN Mode 47
Configuration Examples for Ethernet-over-MPLS 51
Configuring Pseudowire Redundancy 56
Prerequisites for Pseudowire Redundancy 56
Restrictions for Pseudowire Redundancy 56
Restrictions for Pseudowire Redundancy Port Mode 56
Restrictions for Pseudowire Redundancy VLAN Mode 57
Information About Pseudowire Redundancy 57
How to Configure Pseudowire Redundancy 57
Configuring Pseudowire Redundancy Port Mode 57
Configuring Pseudowire Redundancy VLAN Mode 62
Configuration Examples for Pseudowire Redundancy 68

CHAPTER 5

# Feature History for Ethernet-over-MPLS and Pseudowire Redundancy 71 CHAPTER 6 Configuring IPv6 Provider Edge over MPLS (6PE) 73 Prerequisites for 6PE 73 Restrictions for 6PE **73** Information About 6PE **73** Configuring 6PE **74** Configuration Examples for 6PE 77 Feature History for IPv6 Provider Edge over MPLS (6PE) 79 CHAPTER 7 Configuring IPv6 VPN Provider Edge over MPLS (6VPE) 81 Configuring 6VPE 81 Restrictions for 6VPE 81 Information About 6VPE 81 Configuration Examples for 6VPE 82 Feature History for IPv6 VPN Provider Edge over MPLS (6VPE) 86 CHAPTER 8 Configuring MPLS VPN InterAS Options 87 Information About MPLS VPN InterAS Options 87 ASes and ASBRs 87 MPLS VPN InterAS Options 88 InterAS Option B 88 InterAS Option AB 91 How to Configure MPLS VPN InterAS Options 94 Configuring MPLS VPN InterAS Option B 94 Configuring InterAS Option B using the Next-Hop-Self Method 94 Configuring InterAS Option B using Redistribute Connected Method Configuring MPLS VPN Inter-AS Option AB 102 Configuring the VRFs on the ASBR Interface for Each VPN Customer 102 Configuring the MP-BGP Session Between ASBR Peers 103 Configuring the Routing Policy for VPNs that Need Inter-AS Connections 105 Changing an Inter-AS Option A Deployment to an Option AB Deployment 107

Verifying MPLS VPN InterAS Options Configuration 108

Configuration Examples for MPLS VPN InterAS Options 110

```
InterAS OptionAB 122
                         Additional References for MPLS VPN InterAS Options 126
                         Feature History for MPLS VPN InterAS Options 126
CHAPTER 9
                    Configuring MPLS over GRE 129
                         Prerequisites for MPLS over GRE 129
                         Restrictions for MPLS over GRE 129
                         Information About MPLS over GRE 130
                            PE-to-PE Tunneling 130
                           P-to-PE Tunneling 131
                           P-to-P Tunneling 131
                         How to Configure MPLS over GRE 131
                            Configuring the MPLS over GRE Tunnel Interface 131
                         Configuration Examples for MPLS over GRE 133
                            Example: PE-to-PE Tunneling 133
                           Example: P-to-PE Tunneling 134
                            Example: P-to-P Tunneling 135
                          Additional References for MPLS over GRE 136
                         Feature History for MPLS over GRE 136
CHAPTER 10
                    Configuring MPLS Layer 2 VPN over GRE 139
                         Information About MPLS Layer 2 VPN over GRE 139
                            Types of Tunneling Configurations 139
                              PE-to-PE Tunneling 139
                              P-to-PE Tunneling 140
                              P-to-P Tunneling 140
                         How to Configure MPLS Layer 3 VPN over GRE 141
                         Configuration Examples for MPLS Layer 2 VPN over GRE 142
                            Example: Configuring a GRE Tunnel That Spans a non-MPLS Network 142
                          Additional References for Configuring MPLS Layer 2 VPN over GRE
                         Feature History for Configuring MPLS Layer 2 VPN over GRE 143
```

InterAS Option B 110

Next-Hop-Self Method 110

IGP Redistribute Connected Subnets Method 116

```
CHAPTER 11
                    Configuring MPLS Layer 3 VPN over GRE 145
                         Prerequisites for MPLS Layer 3 VPN over GRE 145
                         Restrictions for MPLS Layer 3 VPN over GRE 145
                         Information About MPLS Layer 3 VPN over GRE 146
                           Types of Tunneling Configurations 146
                             PE-to-PE Tunneling 146
                             P-to-PE Tunneling 147
                             P-to-P Tunneling 147
                         How to Configure MPLS Layer 3 VPN over GRE 148
                         Configuration Examples for MPLS Layer 3 VPN over GRE 149
                           Example: Configuring MPLS Layer 3 VPN over GRE (PE-to-PE Tunneling) 149
                           Example: Configuring MPLS Layer 3 VPN over GRE (P-to-PE Tunneling) 151
                         Feature History for Configuring MPLS Layer 3 VPN over GRE 155
CHAPTER 12
                    Configuring MPLS QoS 157
                         Classifying and Marking MPLS EXP
                           Prerequisites for MPLS QoS
                           Restrictions for MPLS QoS 157
                         Information About MPLS QoS 158
                           MPLS QoS Overview 158
                           MPLS Experimental Field 158
                           Benefits of MPLS EXP Classification and Marking 159
                         How to Configure MPLS QoS 159
                           Classifying MPLS Encapsulated Packets 159
                           Marking MPLS EXP on the Outermost Label 160
                           Marking MPLS EXP on Label Switched Packets 162
                           Configuring Conditional Marking 163
                           Configuring WRED for MPLS EXP 164
                         Configuration Examples for MPLS QoS 165
                           Example: Classifying MPLS Encapsulated Packets
                           Example: Marking MPLS EXP on Outermost Label 166
                           Example: Marking MPLS EXP on Label Switched Packets
                           Example: Configuring Conditional Marking 167
```

Additional References 168 Feature History for QoS MPLS EXP 168 Configuring MPLS Static Labels 171 MPLS Static Labels 171 Prerequisites for MPLS Static Labels 171 Restrictions for MPLS Static Labels 171 Information About MPLS Static Labels 171 MPLS Static Labels Overview 171 Benefits of MPLS Static Labels 172 How to Configure MPLS Static Labels 172 Configuring MPLS Static Prefix Label Bindings 172 Verifying MPLS Static Prefix Label Bindings 173 Monitoring and Maintaining MPLS Static Labels 174 Configuration Examples for MPLS Static Labels 174 Example: Configuring MPLS Static Prefixes Labels 174 Additional References 175 Feature History for MPLS Static Labels 176 Configuring Virtual Private LAN Service (VPLS) and VPLS BGP-Based Autodiscovery 177 Restrictions for VPLS 177 Information About VPLS, VPLS BGP-Based Autodiscovery and Flow-Aware Transport 177 VPLS Overview 178 **About Full-Mesh Configuration** About VPLS BGP-Based Autodiscovery 179 About Flow-Aware Transport Pseudowire 179 Interoperability Between Cisco Catalyst 6000 Series Switches and Cisco Catalyst 9000 Series Switches 180 How to Configure VPLS, VPLS BGP-Based Autodiscovery and Flow-Aware Transport 181 Configuring Layer 2 PE Device Interfaces to CE Devices 181 Configuring 802.1Q Trunks on a PE Device for Tagged Traffic from a CE Device Configuring 802.1Q Access Ports on a PE Device for Untagged Traffic from a CE Device 182 Configuring Layer 2 VLAN Instances on a PE Device 183

Example: Configuring WRED for MPLS EXP

CHAPTER 13

CHAPTER 14

```
Configuring VPLS in Xconnect Mode 184
Configuring VPLS in Protocol-CLI Mode 187
Configuring VPLS BGP-based Autodiscovery 194
Enabling VPLS BGP-based Autodiscovery 194
Configuring BGP to Enable VPLS Autodiscovery 195
Configuring VPLS BGP-based Autodiscovery in Protocol-CLI Mode 197
Configuration Examples for VPLS and VPLS BGP-Based Autodiscovery 201
Example: Configuring VPLS in Xconnect Mode 201
Examples: Verifying VPLS Configured in Xconnect Mode 202
Example: Configuring VPLS Flow-Aware Transport Using a Template (in Protocol-CLI Mode) 204
Example: Configuring VPLS BGP-Auto Discovery 205
Example: Verifying VPLS BGP-Auto Discovery 205
Feature History for VPLS and VPLS BGP-Based Autodiscovery 206
```

### CHAPTER 15 Configuring MPLS VPN Route Target Rewrite 207

Prerequisites for MPLS VPN Route Target Rewrite 207

Restrictions for MPLS VPN Route Target Rewrite 207

Information About MPLS VPN Route Target Rewrite 207

Route Target Replacement Policy 207

Route Maps and Route Target Replacement 208

How to Configure MPLS VPN Route Target Rewrite 208

Configuring a Route Target Replacement Policy 208

Applying the Route Target Replacement Policy 212

Associating Route Maps with Specific BGP Neighbors 212

Verifying the Route Target Replacement Policy 214

Configuration Examples for MPLS VPN Route Target Rewrite 215

Examples: Applying Route Target Replacement Policies 215

Examples: Associating Route Maps with Specific BGP Neighbor 219

Feature History for MPLS VPN Route Target Rewrite 215

### CHAPTER 16 Configuring MPLS VPN-Inter-AS-IPv4 BGP Label Distribution 217

MPLS VPN Inter-AS IPv4 BGP Label Distribution 217
Restrictions for MPLS VPN Inter-AS IPv4 BGP Label Distribution 218

```
Information About MPLS VPN Inter-AS IPv4 BGP Label Distribution 218
  MPLS VPN Inter-AS IPv4 BGP Label Distribution Overview 218
  BGP Routing Information 219
  How BGP Sends MPLS Labels with Routes
  Using Route Maps to Filter Routes 219
How to Configure MPLS VPN Inter-AS IPv4 BGP Label Distribution
  Configuring the ASBRs to Exchange IPv4 Routes and MPLS Labels
  Configuring the Route Reflectors to Exchange VPNv4 Routes 222
  Configuring the Route Reflectors to Reflect Remote Routes in Its autonomous system 224
Creating Route Maps 226
  Configuring a Route Map for Arriving Routes
  Configuring a Route Map for Departing Routes 228
  Applying the Route Maps to the ASBRs 230
Verifying the MPLS VPN Inter-AS IPv4 BGP Label Distribution Configuration 231
  Verifying the Route Reflector Configuration 232
  Verifying that CE1 Has Network Reachability Information for CE2 233
  Verifying that PE1 Has Network Layer Reachability Information for CE2
  Verifying that PE2 Has Network Reachability Information for CE2
  Verifying the ASBR Configuration 236
Configuration Examples for MPLS VPN Inter-AS IPv4 BGP Label Distribution 237
  Configuration Examples for Inter-AS Using BGP to Distribute Routes and MPLS Labels Over an
     MPLS VPN Service Provider 237
    Example: Route Reflector 1 (MPLS VPN Service Provider) 238
    Configuration Example: ASBR1 (MPLS VPN Service Provider) 239
    Configuration Example: Route Reflector 2 (MPLS VPN Service Provider) 241
    Configuration Example: ASBR2 (MPLS VPN Service Provider) 242
  Configuration Examples: Inter-AS Using BGP to Distribute Routes and MPLS Labels Over a Non-
     MPLS VPN Service Provider 243
    Configuration Example: Route Reflector 1 (Non MPLS VPN Service Provider) 244
    Configuration Example: ASBR1 (Non MPLS VPN Service Provider) 245
    Configuration Example: Route Reflector 2 (Non MPLS VPN Service Provider) 247
    Configuration Examples: ASBR2 (Non MPLS VPN Service Provider) 248
    Configuration Example: ASBR3 (Non MPLS VPN Service Provider) 249
    Configuration Example: Route Reflector 3 (Non MPLS VPN Service Provider) 250
```

# Configuration Example: ASBR4 (Non MPLS VPN Service Provider) **251**Feature History for Configuring MPLS VPN Inter-AS IPv4 BGP Label Distribution **253**

### CHAPTER 17 Configuring Seamless MPLS 255

Information about Seamless MPLS 255
Overview of Seamless MPLS 255
Architecture for Seamless MPLS 256
How to configure Seamless MPLs 256
Configuring Seamless MPLS on the PE Router 257
Configuring Seamless MPLS on the Route Reflector 259
Configuration Examples for Seamless MPLS 262
Example: Configuring Seamless MPLS on PE Router 1 262
Example: Configuring Seamless MPLS on Route Reflector 1 262
Example: Configuring Seamless MPLS on PE Router 2 <b>263</b>
Example: Configuring Seamless MPLS on Route Reflector 2 263

Feature History for Seamless MPLS 264



# Configuring Multiprotocol Label Switching (MPLS)

- Multiprotocol Label Switching, on page 1
- Restrictions for Multiprotocol Label Switching, on page 1
- Information about Multiprotocol Label Switching, on page 1
- How to Configure Multiprotocol Label Switching, on page 3
- Verifying Multiprotocol Label Switching Configuration, on page 5
- Additional References for Multiprotocol Label Switching, on page 8
- Feature History for Multiprotocol Label Switching, on page 8

# Multiprotocol Label Switching

This module describes Multiprotocol Label Switching and how to configure it on Cisco switches.

# **Restrictions for Multiprotocol Label Switching**

- Multiprotocol Label Switching (MPLS) fragmentation is not supported.
- MPLS maximum transmission unit (MTU) is not supported.

# Information about Multiprotocol Label Switching

Multiprotocol label switching (MPLS) combines the performance and capabilities of Layer 2 (data link layer) switching with the proven scalability of Layer 3 (network layer) routing. MPLS enables you to meet the challenges of explosive growth in network utilization while providing the opportunity to differentiate services without sacrificing the existing network infrastructure. The MPLS architecture is flexible and can be employed in any combination of Layer 2 technologies. MPLS support is offered for all Layer 3 protocols, and scaling is possible well beyond that typically offered in today's networks.

## **Functional Description of Multiprotocol Label Switching**

Label switching is a high-performance packet forwarding technology that integrates the performance and traffic management capabilities of data link layer (Layer 2) switching with the scalability, flexibility, and performance of network layer (Layer 3) routing.

## **Label Switching Functions**

In conventional Layer 3 forwarding mechanisms, as a packet traverses the network, each switch extracts all the information relevant to forwarding the packet from the Layer 3 header. This information is then used as an index for a routing table lookup to determine the next hop for the packet.

In the most common case, the only relevant field in the header is the destination address field, but in some cases, other header fields might also be relevant. As a result, the header analysis must be done independently at each switch through which the packet passes. In addition, a complicated table lookup must also be done at each switch.

In label switching, the analysis of the Layer 3 header is done only once. The Layer 3 header is then mapped into a fixed length, unstructured value called a *label* .

Many different headers can map to the same label, as long as those headers always result in the same choice of next hop. In effect, a label represents a *forwarding equivalence class* --that is, a set of packets which, however different they may be, are indistinguishable by the forwarding function.

The initial choice of a label need not be based exclusively on the contents of the Layer 3 packet header; for example, forwarding decisions at subsequent hops can also be based on routing policy.

Once a label is assigned, a short label header is added at the front of the Layer 3 packet. This header is carried across the network as part of the packet. At subsequent hops through each MPLS switch in the network, labels are swapped and forwarding decisions are made by means of MPLS forwarding table lookup for the label carried in the packet header. Hence, the packet header does not need to be reevaluated during packet transit through the network. Because the label is of fixed length and unstructured, the MPLS forwarding table lookup process is both straightforward and fast.

## **Distribution of Label Bindings**

Each label switching router (LSR) in the network makes an independent, local decision as to which label value to use to represent a forwarding equivalence class. This association is known as a label binding. Each LSR informs its neighbors of the label bindings it has made. This awareness of label bindings by neighboring switches is facilitated by the following protocols:

- Label Distribution Protocol (LDP)--enables peer LSRs in an MPLS network to exchange label binding information for supporting hop-by-hop forwarding in an MPLS network
- Border Gateway Protocol (BGP)--Used to support MPLS virtual private networks (VPNs)

When a labeled packet is being sent from LSR A to the neighboring LSR B, the label value carried by the IP packet is the label value that LSR B assigned to represent the forwarding equivalence class of the packet. Thus, the label value changes as the IP packet traverses the network.

For more information about LDP configuration, see the see MPLS: LDP Configuration Guide at <a href="http://www.cisco.com/c/en/us/td/docs/ios-xml/ios/mpls/config\_library/xe-3s/mp-xe-3s-library.html">http://www.cisco.com/c/en/us/td/docs/ios-xml/ios/mpls/config\_library/xe-3s/mp-xe-3s-library.html</a>



Note

As the scale of label entries is limited in, especially with ECMP, it is recommended to enable LDP label filtering. LDP labels shall be allocated only for well known prefixes like loopback interfaces of routers and any prefix that needs to be reachable in the global routing table.

## **MPLS Layer 3 VPN**

A Multiprotocol Label Switching (MPLS) Virtual Private Network (VPN) consists of a set of sites that are interconnected by means of an MPLS provider core network. At each customer site, one or more customer edge (CE) routers attach to one or more provider edge (PE) routers.

Before configuring MPLS Layer 3 VPNs, you should have MPLS, Label Distribution Protocol (LDP), and Cisco Express Forwarding (CEF) installed in your network. All routers in the core, including the PE routers, must be able to support CEF and MPLS forwarding.

# Classifying and Marking MPLS QoS EXP

The QoS EXP Matching feature allows you to classify and mark network traffic by modifying the Multiprotocol Label Switching (MPLS) experimental bits (EXP) field in IP packets.

The QoS EXP Matching feature allows you to organize network traffic by setting values for the MPLS EXP field in MPLS packets. By choosing different values for the MPLS EXP field, you can mark packets so that packets have the priority that they require during periods of congestion. Setting the MPLS EXP value allows you to:

- Classify traffic: The classification process selects the traffic to be marked. Classification accomplishes this by partitioning traffic into multiple priority levels, or classes of service. Traffic classification is the primary component of class-based QoS provisioning.
- **Police and mark traffic**: Policing causes traffic that exceeds the configured rate to be discarded or marked to a different drop level. Marking traffic is a way to identify packet flows to differentiate them. Packet marking allows you to partition your network into multiple priority levels or classes of service.

### Restrictions

Following is the list of restrictions for classifying and marking MPLS QoS EXP:

- Only Uniform mode and Pipe mode are supported; Short-pipe mode is not supported.
- Support range of QoS-group values range between 0 and 30. (Total 31 QoS-groups).
- EXP marking using QoS policy is supported only on the outer label; inner EXP marking is not supported.

# **How to Configure Multiprotocol Label Switching**

This section explains how to perform the basic configuration required to prepare a switch for MPLS switching and forwarding.

# **Configuring a Switch for MPLS Switching**

MPLS switching on Cisco switches requires that Cisco Express Forwarding be enabled.



Note

ip unnumbered command is not supported in MPLS configuration.

### **Procedure**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password, if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	ip cef distributed	Enables Cisco Express Forwarding on the
	Example:	switch.
	Device(config)# ip cef distributed	
Step 4	mpls label range minimum-value maximum-value	Configure the range of local labels available for use with MPLS applications on packet
	Example:	interfaces.
	Device(config) # mpls label range 16 4096	
Step 5	mpls label protocol ldp	Specifies the label distribution protocol for the
	Example:	platform.
	Device(config)# mpls label protocol ldp	

# **Configuring a Switch for MPLS Forwarding**

MPLS forwarding on Cisco switches requires that forwarding of IPv4 packets be enabled.



Note

ip unnumbered command is not supported in MPLS configuration.

#### **Procedure**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password, if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	interface type slot/subslot/port	Specifies the Gigabit Ethernet interface and
	Example:	enters interface configuration mode. For Switch Virtual Interface (SVI), the example is
	Device(config)# interface gigabitethernet 1/0/0	Device(config)# interface vlan 1000
Step 4	mpls ip	Enables MPLS forwarding of IPv4 packets
	Example:	along routed physical interfaces (Gigabit Ethernet), Switch Virtual Interface (SVI), or
	Device(config-if)# mpls ip	port channels.
Step 5	mpls label protocol ldp	Specifies the label distribution protocol for an
	Example:	interface.
	Device(config-if)# mpls label protocol ldp	MPLS LDP cannot be enabled on a Virtual Routing and Forwarding (VRF) interface.
Step 6	end	Exits interface configuration mode and returns
	Example:	to privileged EXEC mode.
	Device(config-if)# end	

# **Verifying Multiprotocol Label Switching Configuration**

This section explains how to verify successful configuration of MPLS switching and forwarding.

# **Verifying Configuration of MPLS Switching**

To verify that Cisco Express Forwarding has been configured properly, issue the **show ip cef summary** command, which generates output similar to that shown below:

#### **Procedure**

#### show ip cef summary

### **Example:**

```
Device# show ip cef summary

IPv4 CEF is enabled for distributed and running

VRF Default

150 prefixes (149/1 fwd/non-fwd)

Table id 0x0

Database epoch: 4 (150 entries at this epoch)

Device#
```

# **Verifying Configuration of MPLS Forwarding**

To verify that MPLS forwarding has been configured properly, issue the **show mpls interfaces detail** command, which generates output similar to that shown below:



Note

The MPLS MTU value is equivalent to the IP MTU value of the port or switch by default. MTU configuration for MPLS is not supported.

### **Procedure**

### Step 1 show mpls interfaces detail

### **Example:**

```
For physical (Gigabit Ethernet) interface:
Device# show mpls interfaces detail interface GigabitEthernet 1/0/0
        Type Unknown
        IP labeling enabled
        LSP Tunnel labeling not enabled
        IP FRR labeling not enabled
       BGP labeling not enabled
       MPLS not operational
        MTU = 1500
For Switch Virtual Interface (SVI):
Device# show mpls interfaces detail interface Vlan1000
        Type Unknown
        IP labeling enabled (ldp) :
         Interface config
        LSP Tunnel labeling not enabled
        IP FRR labeling not enabled
        BGP labeling not enabled
        MPLS operational
        MTU = 1500
```

### **Step 2** show running-config interface

### Example:

```
For physical (Gigabit Ethernet) interface:
Device# show running-config interface interface GigabitEthernet 1/0/0
Building configuration...
Current configuration: 307 bytes
interface TenGigabitEthernet1/0/0
no switchport
ip address xx.xx.x.x xxx.xxx.xx
mpls ip
mpls label protocol ldp
end
For Switch Virtual Interface (SVI):
Device# show running-config interface interface Vlan1000
Building configuration...
Current configuration: 187 bytes
interface Vlan1000
ip address xx.xx.x.x xxx.xxx.xx
mpls ip
mpls label protocol ldp
```

### Step 3 show mpls forwarding

### **Example:**

For physical (Gigabit Ethernet) interface:

Device#	show mpls for	warding-table			
Local	Outgoing	Prefix	Bytes Label	Outgoing	Next Hop
Label	Label	or Tunnel Id	Switched	interface	
500	No Label	12ckt(3)	0	Gi3/0/22	point2point
501	No Label	12ckt(1)	1231041181678	9 none	point2point
502	No Label	12ckt(2)	0	none	point2point
503	566	15.15.15.15/32	0	Po5	192.1.1.2
504	530	7.7.7.7/32	538728528	Po5	192.1.1.2
505	573	6.6.6.10/32	0	Po5	192.1.1.2
506	606	6.6.6.6/32	0	Po5	192.1.1.2
507	explicit-n	1.1.1.1/32	0	Po5	192.1.1.2
556	543	19.10.1.0/24	0	Po5	192.1.1.2
567	568	20.1.1.0/24	0	Po5	192.1.1.2
568	574	21.1.1.0/24	0	Po5	192.1.1.2
574	No Label	213.1.1.0/24[V]	0	aggregate/	vpn113
575	No Label	213.1.2.0/24[V]	0	aggregate/	vpn114
576	No Label	213.1.3.0/24[V]	0	aggregate/	vpn115
577	No Label	213:1:1::/64	0	aggregate	
594	502	103.1.1.0/24	0	Po5	192.1.1.2
595	509	31.1.1.0/24	0	Po5	192.1.1.2
596	539	15.15.1.0/24	0	Po5	192.1.1.2
597	550	14.14.1.0/24	0	Po5	192.1.1.2
633	614	2.2.2.0/24	0	Po5	192.1.1.2
634	577	90.90.90.90/32	873684	Po5	192.1.1.2
635	608	154.1.1.0/24	0	Po5	192.1.1.2

636 609 153.1.1.0/24 0 Po5 192.1.1.2 Device# end

# **Additional References for Multiprotocol Label Switching**

#### **Related Documents**

Related Topic	Document Title
	See the Multiprotocol Label Switching (MPLS) Commands section of the Command Reference (Catalyst 9300 Series Switches)

# **Feature History for Multiprotocol Label Switching**

This table provides release and related information for features explained in this module.

These features are available on all releases subsequent to the one they were introduced in, unless noted otherwise.

Release	Feature	Feature Information
Cisco IOS XE Everest 16.5.1a	Multiprotocol Label Switching	Multiprotocol Label Switching combines the performance and capabilities of Layer 2 (data link layer) switching with the proven scalability of Layer 3 (network layer) routing.

Use Cisco Feature Navigator to find information about platform and software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>.



# **Configuring MPLS Layer 3 VPN**

An MPLS Virtual Private Network (VPN) consists of a set of sites that are interconnected by means of a Multiprotocol Label Switching (MPLS) provider core network. At each customer site, one or more customer edge (CE) devices attach to one or more provider edge (PE) devices. This module explains how to create an MPLS Layer 3 VPN.

• MPLS Layer 3 VPNs, on page 9

# **MPLS Layer 3 VPNs**

An MPLS Virtual Private Network (VPN) consists of a set of sites that are interconnected by means of a Multiprotocol Label Switching (MPLS) provider core network. At each customer site, one or more customer edge (CE) devices attach to one or more provider edge (PE) devices. This module explains how to create an MPLS VPN.

### **Prerequisites for MPLS Virtual Private Networks**

- Make sure that you have installed Multiprotocol Label Switching (MPLS), Label Distribution Protocol (LDP), and Cisco Express Forwarding in your network.
- All devices in the core, including the provider edge (PE) devices, must be able to support Cisco Express
  Forwarding and MPLS forwarding. See the "Assessing the Needs of the MPLS Virtual Private Network
  Customers" section.
- Enable Cisco Express Forwarding on all devices in the core, including the PE devices. For information about how to determine if Cisco Express Forwarding is enabled, see the "Configuring Basic Cisco Express Forwarding" module in the *Cisco Express Forwarding Configuration Guide*.
- The **mpls ldp graceful-restart** command must be configured to enable the device to protect LDP bindings and MPLS forwarding state during a disruption in service. We recommend you to configure this command (even if you do not want to preserve the forwarding state) to avoid device failure during SSO in a high availability setup with scale configurations.

### **Restrictions for MPLS Virtual Private Networks**

When static routes are configured in a Multiprotocol Label Switching (MPLS) or MPLS virtual private network (VPN) environment, some variations of the **ip route** and **ip route vrf** commands are not supported. Use the following guidelines when configuring static routes.

### **Supported Static Routes in an MPLS Environment**

The following **ip route** command is supported when you configure static routes in an MPLS environment:

• ip route destination-prefix mask interface next-hop-address

The following **ip route** commands are supported when you configure static routes in an MPLS environment and configure load sharing with static nonrecursive routes and a specific outbound interface:

- ip route destination-prefix mask interface1 next-hop1
- ip route destination-prefix mask interface2 next-hop2

### Unsupported Static Routes in an MPLS Environment That Uses the TFIB

The following **ip route** command is not supported when you configure static routes in an MPLS environment:

• ip route destination-prefix mask next-hop-address

The following **ip route** command is not supported when you configure static routes in an MPLS environment and enable load sharing where the next hop can be reached through two paths:

• ip route destination-prefix mask next-hop-address

The following **ip route** commands are not supported when you configure static routes in an MPLS environment and enable load sharing where the destination can be reached through two next hops:

- ip route destination-prefix mask next-hop1
- ip route destination-prefix mask next-hop2

Use the *interface* an *next-hop* arguments when specifying static routes.

### **Supported Static Routes in an MPLS VPN Environment**

The following **ip route vrf** commands are supported when you configure static routes in an MPLS VPN environment, and the next hop and interface are in the same VRF:

- ip route vrf vrf-name destination-prefix mask next-hop-address
- ip route vrf vrf-name destination-prefix mask interface next-hop-address
- ip route vrf vrf-name destination-prefix mask interface1 next-hop1
- ip route vrf vrf-name destination-prefix mask interface2 next-hop2

The following **ip route vrf** commands are supported when you configure static routes in an MPLS VPN environment, and the next hop is in the global table in the MPLS cloud in the global routing table. For example, these commands are supported when the next hop is pointing to the Internet gateway.

• ip route vrf vrf-name destination-prefix mask next-hop-address global

• **ip route vrf** *vrf-name destination-prefix mask interface next-hop-address* (This command is supported when the next hop and interface are in the core.)

The following **ip route** commands are supported when you configure static routes in an MPLS VPN environment and enable load sharing with static nonrecursive routes and a specific outbound interface:

- ip route destination-prefix mask interface1 next-hop1
- ip route destination-prefix mask interface2 next-hop2

### Unsupported Static Routes in an MPLS VPN Environment That Uses the TFIB

The following **ip route** command is not supported when you configure static routes in an MPLS VPN environment, the next hop is in the global table in the MPLS cloud within the core, and you enable load sharing where the next hop can be reached through two paths:

• ip route vrf destination-prefix mask next-hop-address global

The following **ip route** commands are not supported when you configure static routes in an MPLS VPN environment, the next hop is in the global table in the MPLS cloud within the core, and you enable load sharing where the destination can be reached through two next hops:

- ip route vrf destination-prefix mask next-hop1 global
- ip route vrf destination-prefix mask next-hop2 global

The following **ip route vrf** commands are not supported when you configure static routes in an MPLS VPN environment, and the next hop and interface are in the same VRF:

- ip route vrf vrf-name destination-prefix mask next-hop1 vrf-name destination-prefix mask next-hop1
- ip route vrf vrf-name destination-prefix mask next-hop2

# Supported Static Routes in an MPLS VPN Environment Where the Next Hop Resides in the Global Table on the CE Device

The following **ip route vrf** command is supported when you configure static routes in an MPLS VPN environment, and the next hop is in the global table on the customer edge (CE) side. For example, the following command is supported when the destination prefix is the CE device's loopback address, as in external Border Gateway Protocol (EBGP) multihop cases.

• ip route vrf vrf-name destination-prefix mask interface next-hop-address

The following **ip route** commands are supported when you configure static routes in an MPLS VPN environment, the next hop is in the global table on the CE side, and you enable load sharing with static nonrecursive routes and a specific outbound interface:

- ip route destination-prefix mask interface1 nexthop1
- ip route destination-prefix mask interface2 nexthop2

### **Information About MPLS Virtual Private Networks**

This section provides information about MPLS Virtual Private Networks:

### MPLS Virtual Private Network Definition

Before defining a Multiprotocol Label Switching virtual private network (MPLS VPN), you must define a VPN in general. A VPN is:

- An IP-based network delivering private network services over a public infrastructure
- A set of sites that communicate with each other privately over the Internet or other public or private networks

Conventional VPNs are created by configuring a full mesh of tunnels or permanent virtual circuits (PVCs) to all sites in a VPN. This type of VPN is not easy to maintain or expand, because adding a new site requires changing each edge device in the VPN.

MPLS-based VPNs are created in Layer 3 and are based on the peer model. The peer model enables the service provider and the customer to exchange Layer 3 routing information. The service provider relays the data between the customer sites without the customer's involvement.


MPLS VPNs are easier to manage and expand than conventional VPNs. When a new site is added to an MPLS VPN, only the service provider's edge device that provides services to the customer site needs to be updated.

The different parts of the MPLS VPN are described as follows:

- Provider (P) device—Device in the core of the provider network. P devices run MPLS switching, and
  do not attach VPN labels to routed packets. The MPLS label in each route is assigned by the provider
  edge (PE) device. VPN labels are used to direct data packets to the correct egress device.
- PE device—Device that attaches the VPN label to incoming packets based on the interface or subinterface on which they are received. A PE device attaches directly to a customer edge (CE) device.
- Customer (C) device—Device in the ISP or enterprise network.
- CE device—Edge device on the network of the ISP that connects to the PE device on the network. A CE device must interface with a PE device.

The figure below shows a basic MPLS VPN.

Figure 1: Basic MPLS VPN Terminology

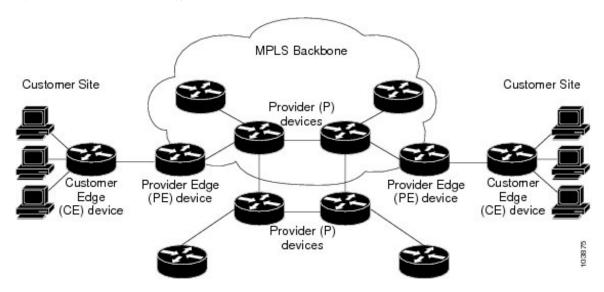

### **How an MPLS Virtual Private Network Works**

Multiprotocol Label Switching virtual private network (MPLS VPN) functionality is enabled at the edge of an MPLS network. The provider edge (PE) device performs the following:

- Exchanges routing updates with the customer edge (CE) device.
- Translates the CE routing information into VPNv4 routes.
- Exchanges VPNv4 routes with other PE devices through the Multiprotocol Border Gateway Protocol (MP-BGP).

The following sections describe how MPLS VPN works:

### **Major Components of an MPLS Virtual Private Network**

A Multiprotocol Label Switching (MPLS)-based virtual private network (VPN) has three major components:

- VPN route target communities—A VPN route target community is a list of all members of a VPN community. VPN route targets need to be configured for each VPN community member.
- Multiprotocol BGP (MP-BGP) peering of VPN community provider edge (PE) devices— MP-BGP propagates virtual routing and forwarding (VRF) reachability information to all members of a VPN community. MP-BGP peering must be configured on all PE devices within a VPN community.
- MPLS forwarding—MPLS transports all traffic between all VPN community members across a VPN service-provider network.

A one-to-one relationship does not necessarily exist between customer sites and VPNs. A given site can be a member of multiple VPNs. However, a site can associate with only one VRF. A customer-site VRF contains all the routes available to the site from the VPNs of which it is a member.

### **Benefits of an MPLS Virtual Private Network**

Multiprotocol Label Switching virtual private networks (MPLS VPNs) allow service providers to deploy scalable VPNs. They build the foundation to deliver value-added services, such as the following:

#### **Connectionless Service**

A significant technical advantage of MPLS VPNs is that they are connectionless. The Internet owes its success to its basic technology, TCP/IP. TCP/IP is built on a packet-based, connectionless network paradigm. This means that no prior action is necessary to establish communication between hosts, making it easy for two parties to communicate. To establish privacy in a connectionless IP environment, current VPN solutions impose a connection-oriented, point-to-point overlay on the network. Even if it runs over a connectionless network, a VPN cannot take advantage of the ease of connectivity and multiple services available in connectionless networks. When you create a connectionless VPN, you do not need tunnels and encryption for network privacy, thus eliminating significant complexity.

### **Centralized Service**

Building VPNs in Layer 3 allows delivery of targeted services to a group of users represented by a VPN. A VPN must give service providers more than a mechanism for privately connecting users to intranet services. It must also provide a way to flexibly deliver value-added services to targeted customers. Scalability is critical, because you want to use services privately in their intranets and extranets. Because MPLS VPNs are seen as private intranets, you may use new IP services such as:

- · Multicast
- Quality of service (QoS)
- Telephony support within a VPN
- Centralized services including content and web hosting to a VPN

You can customize several combinations of specialized services for individual customers. For example, a service that combines IP multicast with a low-latency service class enables video conferencing within an intranet.

### **Scalability**

If you create a VPN using connection-oriented, point-to-point overlays, Frame Relay, or ATM virtual connections (VCs), the VPN's key deficiency is scalability. Specifically, connection-oriented VPNs without fully meshed connections between customer sites are not optimal. MPLS-based VPNs, instead, use the peer model and Layer 3 connectionless architecture to leverage a highly scalable VPN solution. The peer model requires a customer site to peer with only one provider edge (PE) device as opposed to all other customer edge (CE) devices that are members of the VPN. The connectionless architecture allows the creation of VPNs in Layer 3, eliminating the need for tunnels or VCs.

Other scalability issues of MPLS VPNs are due to the partitioning of VPN routes between PE devices. And the further partitioning of VPN and Interior Gateway Protocol (IGP) routes between PE devices and provider (P) devices in a core network.

- PE devices must maintain VPN routes for those VPNs who are members.
- P devices do not maintain any VPN routes.

This increases the scalability of the provider's core and ensures that no one device is a scalability bottleneck.

### **Security**

MPLS VPNs offer the same level of security as connection-oriented VPNs. Packets from one VPN do not inadvertently go to another VPN.

Security is provided in the following areas:

- At the edge of a provider network, ensuring packets that are received from a customer are placed on the correct VPN.
- At the backbone, VPN traffic is kept separate. Malicious spoofing (an attempt to gain access to a PE device) is nearly impossible because the packets that are received from customers are IP packets. These IP packets must be received on a particular interface or subinterface to be uniquely identified with a VPN label.

#### **Ease of Creation**

To take full advantage of VPNs, customers must be able to easily create new VPNs and user communities. Because MPLS VPNs are connectionless, no specific point-to-point connection maps or topologies are required. You can add sites to intranets and extranets and form closed user groups. Managing VPNs in this manner enables membership of any given site in multiple VPNs, maximizing flexibility in building intranets and extranets.

### Flexible Addressing

To make a VPN service more accessible, customers of a service provider can design their own addressing plan. This addressing plan can be independent of addressing plans for other service provider customers. Many customers use private address spaces, as defined in RFC 1918. They do not want to invest the time and expense of converting to public IP addresses to enable intranet connectivity. MPLS VPNs allow customers to continue to use their present address spaces without Network Address Translation (NAT) by providing a public and private view of the address. A NAT is required only if two VPNs with overlapping address spaces want to communicate. This enables customers to use their own unregistered private addresses, and communicate freely across a public IP network.

### **Integrated QoS Support**

QoS is an important requirement for many IP VPN customers. It provides the ability to address two fundamental VPN requirements:

- Predictable performance and policy implementation
- Support for multiple levels of service in an MPLS VPN

Network traffic is classified and labeled at the edge of the network. The traffic is then aggregated according to policies defined by subscribers and implemented by the provider and transported across the provider core. Traffic at the edge and core of the network can then be differentiated into different classes by drop probability or delay.

### **Straightforward Migration**

For service providers to quickly deploy VPN services, use a straightforward migration path. MPLS VPNs are unique because you can build them over multiple network architectures, including IP, ATM, Frame Relay, and hybrid networks.

Migration for the end customer is simplified because there is no requirement to support MPLS on the CE device. No modifications are required to a customer's intranet.

### **How to Configure MPLS Virtual Private Networks**

The following section provides the steps to configure MPLS Virtual Private Networks:

### **Configuring the Core Network**

The following section provides the steps to configure the core network:

### **Assessing the Needs of MPLS Virtual Private Network Customers**

Before you configure a Multiprotocol Label Switching virtual private network (MPLS VPN), you need to identify the core network topology so that it can best serve MPLS VPN customers. Perform this task to identify the core network topology.

### **Procedure**

	Command or Action	Purpose
Step 1	l , ,	Identify the following to determine the number of devices and ports that you need:

	Command or Action	Purpose
		How many customers do you need to support?
		How many VPNs are needed per customer?
		How many virtual routing and forwarding instances are there for each VPN?
Step 2	Identify the routing protocols in the core.	Determine which routing protocols you need in the core network.
Step 3	Determine if you need MPLS VPN High Availability support.	MPLS VPN Nonstop Forwarding and Graceful Restart are supported on select devices and Cisco software releases. Contact Cisco Support for the exact requirements and hardware support.
Step 4	Determine if you need Border Gateway Protocol (BGP) load sharing and redundant paths in the MPLS VPN core.	

### **Configuring MPLS in the Core**

To enable Multiprotocol Label Switching (MPLS) on all devices in the core, you must configure either of the following as a label distribution protocol:

• MPLS Label Distribution Protocol (LDP). For configuration information, see the "MPLS Label Distribution Protocol (LDP)" module in the *MPLS Label Distribution Protocol Configuration Guide*.

### **Connecting the MPLS Virtual Private Network Customers**

The following section provides information about Connecting the MPLS Virtual Private Network Customers:

### **Defining VRFs on the PE Devices to Enable Customer Connectivity**

Use this procedure to define a virtual routing and forwarding (VRF) configuration for IPv4. To define a VRF for IPv4 and IPv6, see the "Configuring a Virtual Routing and Forwarding Instance for IPv6"section in the "IPv6 VPN over MPLS" module in the MPLS Layer 3 VPNs Configuration Guide.

#### **Procedure**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Device> enable	

	Command or Action	Purpose
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	vrf definition vrf-name	Defines the virtual private network (VPN)
	Example:	routing instance by assigning a virtual routing and forwarding (VRF) name and enters VRF
	Device(config)# vrf definition vrf1	configuration mode.
		• The <i>vrf-name</i> argument is the name assigned to a VRF.
Step 4	rd route-distinguisher	Creates routing and forwarding tables.
	Example:	• The <i>route-distinguisher</i> argument adds an
	Device(config-vrf)# rd 100:1	8-byte value to an IPv4 prefix to create a VPN IPv4 prefix. You can enter a route distinguisher (RD) in either of these formats:
		• 16-bit AS number:your 32-bit number, for example, 101:3
		• 32-bit IP address:your 16-bit number, for example, 10.0.0.1:1
Step 5	address-family ipv4   ipv6	Enters IPv4 or IPv6 address family mode
	Example:	
	Device(config-vrf)# address-family ipv6	
Step 6	route-target {import   export   both} route-target-ext-community	Creates a route-target extended community for a VRF.
	Example:	The <b>import</b> keyword imports routing information from the target VPN extended community.
	Device(config-vrf-af)# route-target both 100:1	
		The <b>export</b> keyword exports routing information to the target VPN extended community.
		The <b>both</b> keyword imports routing information from and exports routing information to the target VPN extended community.
		• The <i>route-target-ext-community</i> argument adds the route-target extended community attributes to the VRF's list of import,

	Command or Action	Purpose
		export, or both route-target extended communities.
Step 7	exit	(Optional) Exits to global configuration mode.
	Example:	
	Device(config-vrf)# exit	

### **Configuring VRF Interfaces on PE Devices for Each VPN Customer**

To associate a virtual routing and forwarding (VRF) instance with an interface or subinterface on the provider edge (PE) devices, perform this task.

### **Procedure**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	interface type number	Specifies the interface to configure and enters interface configuration mode.
	Example:  Device(config) # interface GigabitEthernet 0/0/1	• The <i>type</i> argument specifies the type of
Step 4	<pre>vrf forwarding vrf-name Example:  Device(config-if) # vrf forwarding vrf1</pre>	Associates a VRF with the specified interface or subinterface.  • The <i>vrf-name</i> argument is the name that is assigned to a VRF.
Step 5	end Example:	(Optional) Exits to privileged EXEC mode.
	Device(config-if)# end	

### **Configuring Routing Protocols Between the PE and CE Devices**

Configure the provider edge (PE) device with the same routing protocol that the customer edge (CE) device uses. You can configure the Border Gateway Protocol (BGP), Routing Information Protocol version 2 (RIPv2), EIGRP, Open Shortest Path First (OSPF) or static routes between the PE and CE devices.

### **Verifying the Virtual Private Network Configuration**

A route distinguisher must be configured for the virtual routing and forwarding (VRF) instance. Multiprotocol Label Switching (MPLS) must be configured on the interfaces that carry the VRF. Use the **show ip vrf** command to verify the route distinguisher (RD) and interface configured for the VRF.

#### **Procedure**

#### show ip vrf

Displays the set of defined VRF instances and associated interfaces. The output also maps the VRF instances to the configured route distinguisher.

### **Verifying Connectivity Between MPLS Virtual Private Network Sites**

To verify that the local and remote customer edge (CE) devices can communicate across the Multiprotocol Label Switching (MPLS) core, perform the following tasks:

### Verifying IP Connectivity from CE Device to CE Device Across the MPLS Core

#### **Procedure**

#### Step 1 enable

Enables privileged EXEC mode.

**Step 2** ping [protocol] {host-name | system-address}

Diagnoses basic network connectivity on AppleTalk, Connectionless-mode Network Service (CLNS), IP, Novell, Apollo, Virtual Integrated Network Service (VINES), DECnet, or Xerox Network Service (XNS) networks. Use the **ping** command to verify the connectivity from one CE device to another.

**Step 3 trace** [protocol] [destination]

Discovers the routes that packets take when traveling to their destination. The **trace** command can help isolate a trouble spot if two devices cannot communicate.

**Step 4 show ip route** [ip-address [mask] [longer-prefixes]] | protocol [process-id]] | [list [access-list-name | access-list-number]

Displays the current state of the routing table. Use the *ip-address* argument to verify that CE1 has a route to CE2. Verify the routes learned by CE1. Make sure that the route for CE2 is listed.

### Verifying That the Local and Remote CE Devices Are in the PE Routing Table

#### **Procedure**

### Step 1 enable

Enables privileged EXEC mode.

### **Step 2 show ip route vrf** *vrf-name* [*prefix*]

Displays the IP routing table that is associated with a virtual routing and forwarding (VRF) instance. Check that the loopback addresses of the local and remote customer edge (CE) devices are in the routing table of the provider edge (PE) devices.

### **Step 3 show ip cef vrf** *vrf-name* [*ip-prefix*]

Displays the Cisco Express Forwarding forwarding table that is associated with a VRF. Check that the prefix of the remote CE device is in the Cisco Express Forwarding table.

# **Configuration Examples for MPLS Virtual Private Networks**

The following section provides the configuration examples for MPLS Virtual Private Networks:

# **Example: Configuring an MPLS Virtual Private Network Using RIP**

PE Configuration	CE Configuration
vrf vpn1 route-target export 100:1 route-target import 100:1 ! ip cef mpls ldp router-id Loopback0 force mpls label protocol ldp ! interface Loopback0 ip address 10.0.0.1 255.255.255.255 ! interface GigabitEthernet 1/0/1 vrf forwarding vpn1 ip address 192.0.2.3 255.255.255.0 no cdp enable interface GigabitEthernet 1/0/1 ip address 192.0.2.2 255.255.255.0 mpls label protocol ldp mpls ip ! router rip version 2 timers basic 30 60 60 120 ! address-family ipv4 vrf vpn1 version 2 redistribute bgp 100 metric transparent network 192.0.2.0 distribute-list 20 in no auto-summary exit-address-family ! router bgp 100 no synchronization bgp log-neighbor changes neighbor 10.0.0.3 remote-as 100 neighbor 10.0.0.3 update-source Loopback0 no auto-summary ! address-family vpnv4 neighbor 10.0.0.3 activate neighbor 10.0.0.3 asend-community extended bgp scan-time import 5 exit-address-family ! address-family ipv4 vrf vpn1 redistribute connected redistribute rip no auto-summary no synchronization exit-address-family vo synchronization exit-address-family	ip cef mpls ldp router-id LoopbackO force mpls label protocol ldp ! interface LoopbackO ip address 10.0.0.9 255.255.255.255 ! interface GigabitEthernet 1/0/1 ip address 192.0.2.1 255.255.255.0 no cdp enable router rip version 2 timers basic 30 60 60 120 redistribute connected network 10.0.0.0 network 192.0.2.0 no auto-summary

# **Example: Configuring an MPLS Virtual Private Network Using Static Routes**

PE Configuration	CE Configuration
vrf vpn1 rd 100:1 route-target export 100:1 ! ip cef mpls ldp router-id Loopback0 force mpls label protocol ldp ! interface Loopback0 ip address 10.0.0.1 255.255.255.255 ! interface GigabitEthernet 1/0/1 vrf forwarding vpn1 ip address 192.0.2.3 255.255.255.0 no cdp enable ! interface GigabitEthernet 1/0/1 ip address 192.168.0.1 255.255.0.0 mpls label protocol ldp mpls ip ! router ospf 100 network 10.0.0. 0.0.0.0 area 100 network 192.168.0.0 255.255.0.0 area 100 ! router bgp 100 no synchronization bgp log-neighbor changes neighbor 10.0.0.3 remote-as 100 neighbor 10.0.0.3 update-source Loopback0 no auto-summary ! address-family vpnv4 neighbor 10.0.0.3 activate neighbor 10.0.0.3 send-community extended bgp scan-time import 5 exit-address-family ! address-family ipv4 vrf vpn1	<pre>ip cef ! interface Loopback0   ip address 10.0.0.9 255.255.255.255 ! interface GigabitEthernet 1/0/1   ip address 192.0.2.2 255.255.0.0   no cdp enable ! ip route 10.0.0.9 255.255.255.255 192.0.2.3 3 ip route 198.51.100.0 255.255.255.0 192.0.2.3 3</pre>
address-family ipv4 vrf vpn1 redistribute connected redistribute static no auto-summary no synchronization exit-address-family ! ip route vrf vpn1 10.0.0.9 255.255.255 192.0.2.2	
ip route vrf vpn1 192.0.2.0 255.255.0.0 192.0.2.2	

# **Example: Configuring an MPLS Virtual Private Network Using BGP**

CE Configuration
router bgp 5000
bgp log-neighbor-changes
neighbor 5.5.5.6 remote-as 5001
neighbor 5.5.5.6 ebgp-multihop 2
neighbor 5.5.5.6 update-source Loopback5
neighbor 35.2.2.2 remote-as 5001
neighbor 35.2.2.2 ebgp-multihop 2
neighbor 35.2.2.2 update-source Loopback1
neighbor 3500::1 remote-as 5001
neighbor 3500::1 ebgp-multihop 2
neighbor 3500::1 update-source Loopback1
!
address-family ipv4
redistribute connected
neighbor 5.5.5.6 activate
neighbor 35.2.2.2 activate
no neighbor 3500::1 activate
exit-address-family
!
address-family ipv6
redistribute connected
neighbor 3500::1 activate
exit-address-family
Device-RP(config)#

PE Configuration	CE Configuration
router bgp 5001	
bgp log-neighbor-changes	
bgp graceful-restart	
bgp sso route-refresh-enable	
bgp refresh max-eor-time 600	
redistribute connected	
neighbor 102.1.1.1 remote-as 5001	
neighbor 102.1.1.1 update-source Loopback1 neighbor 105.1.1.1 remote-as 5001	
neighbor 105.1.1.1 update-source Loopback10	
neighbor 160.1.1.2 remote-as 5002	
!	
address-family vpnv4	
neighbor 102.1.1.1 activate	
neighbor 102.1.1.1 send-community both	
neighbor 105.1.1.1 activate	
neighbor 105.1.1.1 send-community extended	
exit-address-family	
!	
address-family vpnv6	
neighbor 102.1.1.1 activate	
neighbor 102.1.1.1 send-community extended	
neighbor 105.1.1.1 activate	
neighbor 105.1.1.1 send-community extended	
exit-address-family	
!	
address-family ipv4 vrf full redistribute connected	
neighbor 20.1.1.1 remote-as 5000	
neighbor 20.1.1.1 lehiote-as 3000	
neighbor 20.1.1.1 update-source Loopback2	
neighbor 20.1.1.1 activate	
neighbor 20.1.1.1 send-community both	
exit-address-family	
· ·	
address-family ipv6 vrf full	
redistribute connected	
neighbor 2000::1 remote-as 5000	
neighbor 2000::1 ebgp-multihop 2	
neighbor 2000::1 update-source Loopback2	
neighbor 2000::1 activate	
exit-address-family	
address-family ipv4 vrf orange network 87.1.0.0 mask 255.255.252.0	
network 87.1.1.0 mask 255.255.255.0	
redistribute connected	
neighbor 40.1.1.1 remote-as 7000	
neighbor 40.1.1.1 ebgp-multihop 2	
neighbor 40.1.1.1 update-source Loopback3	
neighbor 40.1.1.1 activate	
neighbor 40.1.1.1 send-community extended	
neighbor 40.1.1.1 route-map orange-lp in	
maximum-paths eibgp 2	
exit-address-family	
[!	
address-family ipv6 vrf orange	
redistribute connected	
maximum-paths eibgp 2	
neighbor 4000::1 remote-as 7000	
neighbor 4000::1 ebgp-multihop 2	
neighbor 4000::1 update-source Loopback3	

neighbor 4000::1 activate exit-address-family ! address-family ipv4 vrf sona	
redistribute connected neighbor 160.1.1.2 remote-as 5002 neighbor 160.1.1.2 activate neighbor 160.1.1.4 remote-as 5003 neighbor 160.1.1.4 activate exit-address-family	

## **Additional References**

#### **Related Documents**

Related Topic	Document Title
For complete syntax and usage information for the commands used in this chapter.	See the MPLS Commands section of the Command Reference (Catalyst 9300 Series Switches)
Configuring Cisco Express Forwarding	"Configuring Basic Cisco Express Forwarding" module in the Cisco Express Forwarding Configuration Guide
Configuring LDP	"MPLS Label Distribution Protocol (LDP)" module in the MPLS Label Distribution Protocol Configuration Guide

## **Feature History for MPLS Virtual Private Networks**

This table provides release and related information for features explained in this module.

These features are available on all releases subsequent to the one they were introduced in, unless noted otherwise.

Release	Feature	Feature Information
Cisco IOS XE Everest 16.5.1a	MPLS Virtual Private Networks	An MPLS Virtual Private Network (VPN) consists of a set of sites that are interconnected by means of a Multiprotocol Label Switching (MPLS) provider core network. At each customer site, one or more customer edge (CE) devices attach to one or more provider edge (PE) devices.
Cisco IOS XE Gibraltar 16.11.1	BGP PE-CE support for MPLS Layer 3 VPNs	Support for BGP as a routing protocol between the provider edge (PE) device and the customer edge (CE) device was introduced.

Use Cisco Feature Navigator to find information about platform and software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>.



## Configuring eBGP and iBGP Multipath

- BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN, on page 27
- Information About BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN, on page 28
- How to Configure BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN, on page 30
- Configuration Examples for the BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN Feature, on page 31
- Feature Information for BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN, on page 32

## BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN

The BGP Multipath Load Sharing for eBGP and iBGP feature allows you to configure multipath load balancing with both external BGP (eBGP) and internal BGP (iBGP) paths in Border Gateway Protocol (BGP) networks that are configured to use Multiprotocol Label Switching (MPLS) Virtual Private Networks (VPNs). This feature provides improved load balancing deployment and service offering capabilities and is useful for multi-homed autonomous systems and Provider Edge (PE) routers that import both eBGP and iBGP paths from multihomed and stub networks.

## Prerequisites for BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN

Cisco Express Forwarding (CEF) or distributed CEF (dCEF) must be enabled on all participating devices.

## Restrictions for BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN

#### **Address Family Support**

This feature is configured on a per VPN routing and forwarding instance (VRF) basis. This feature can be configured under both IPv4 and IPv6 VRF address families.

#### **Memory Consumption Restriction**

Each BGP multipath routing table entry will use additional memory. We recommend that you do not use this feature on a device with a low amount of available memory and especially if the device carries full Internet routing tables.

#### **Number of Paths Limitation**

- The number of paths supported are limited to 2 BGP multipaths. This could either be 2 iBGP multipaths or 1 iBGP multipath and 1 eBGP multipath.
- If pairing of equal cost routing is more than 64 unique paths, the routes are not learnt and traffic is dropped.

#### **Unsupported Commands**

**ip unnumbered** command is not supported in MPLS configuration.

## Information About BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN

## Multipath Load Sharing Between eBGP and iBGP

A BGP routing process will install a single path as the best path in the routing information base (RIB) by default. The **maximum-paths** command allows you to configure BGP to install multiple paths in the RIB for multipath load sharing. BGP uses the best path algorithm to select a single multipath as the best path and advertise the best path to BGP peers.



Note

The valid values for the **maximum-paths** command range from 1 to 32. However, the maximum value that can be configured is 2.

Load balancing over the multipaths is performed by CEF. CEF load balancing is configured on a per-packet round robin or on a per session (source and destination pair) basis. For information about CEF, see IP Switching Cisco Express Forwarding Configuration Guide. The BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS VPN feature is enabled under the IPv4 VRF address family and IPv6 VRF address family configuration modes. When enabled, this feature can perform load balancing on eBGP and/or iBGP paths that are imported into the VRF. The number of multipaths is configured on a per VRF basis. Separate VRF multipath configurations are isolated by unique route distinguisher.




Note

The BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS VPN feature operates within the parameters of configured outbound routing policy.

### eBGP and iBGP Multipath Load Sharing in a BGP MPLS Network

The following figure shows a service provider BGP MPLS network that connects two remote networks to PE router 1 and PE router 2 are both configured for VPNv4 unicast iBGP peering. Network 2 is a multihomed network that is connected to PE router 1 and PE router 2. Network 2 also has extranet VPN services configured with Network 1. Both Network 1 and Network 2 are configured for eBGP peering with the PE routers.

Figure 2: Service Provider BGP MPLS Network

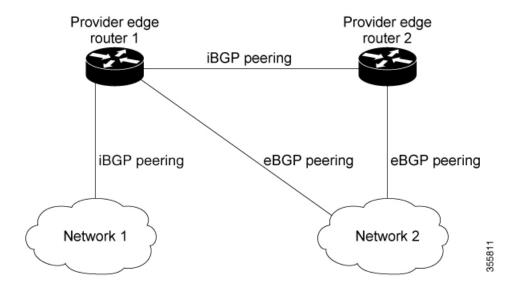

PE router 1 can be configured with the BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS VPN feature so that both iBGP and eBGP paths can be selected as multipaths and imported into the VRF . The multipaths will be used by CEF to perform load balancing. IP traffic that is sent from Network 1 to Network 2, PE router 1 will Load Share with eBGP paths as IP traffic & iBGP path will be sent as MPLS traffic.



Note

- eBGP session between local CE & local PE is not supported.
- eBGP session from a local PE to a remote CE is supported.
- eiBGP Multipath is supported in per prefix label allocation mode only. It is not supported in other label allocation modes.

## Benefits of Multipath Load Sharing for Both eBGP and iBGP

The BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS VPN feature allows multihomed autonomous systems and PE routers to be configured to distribute traffic across both eBGP and iBGP paths.

## How to Configure BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN

This section contains the following procedures:

## Configuring Multipath Load Sharing for Both eBGP an iBGP

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	Device> enable	
Step 2	configure { terminal   memory   network }	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	router bgp as-number	Enters router configuration mode to create or
	Example:	configure a BGP routing process.
	Device(config)# router bgp 40000	
Step 4	neighbor {ip-address   ipv6-address	Accepts and attempts BGP connections to
	peer-group-name }	external peers residing on networks that are not directly connected.
	Example:	
	Device(config-router)# neighbor group192	
Step 5	address-family ipv4 vrfvrf-name	Places the router in address family configuration
	Example:	mode.
	Device(config-router)# address-family	Separate VRF multipath configurations
	ipv4 vrf RED	are isolated by unique route distinguisher.
Step 6	address-family ipv6 vrfvrf-name	Places the router in address family configuration
	Example:	mode.
	Device(config-router)# address-family	Separate VRF multipath configurations
	ipv6 vrf RED	are isolated by unique route distinguisher.
Step 7	neighbor {ip-address   ipv6-address	Specifies the link-local address over which the
-	peer-group-name } update-source	peering is to occur.
	interface-type interface-name	
	Example:	

	Command or Action	Purpose
	Device(config-router) # neighbor FE80::1234:BFF:FE0E:A471 update-source Gigabitethernet 1/0/0	
Step 8	neighbor {ip-address   ipv6-address   peer-group-name } activate	Activates the neighbor or listen range peer group for the configured address family.
	Example:	
	<pre>(config-router) # neighbor group192 activate</pre>	
Step 9	maximum-paths eibgp [import-number]	Configures the number of parallel iBGP and
	Example:	eBGP routes that can be installed into a routing table.
	<pre>(config-router-af) # maximum-paths eibgp 2</pre>	1 ****

## Verifying Multipath Load Sharing for Both eBGP an iBGP

#### **Procedure**

	Command or Action	Purpose	
Step 1	enable	Enables privileged EXEC mode.	
	Example:	• Enter your password if prompted.	
	Device> enable		
Step 2	show ip bgp neighbors	Displays information about the TCP and BGP	
	Example:	connections to neighbors.	
	Device# show ip bgp neighbors		
Step 3	show ip bgp vpnv4 vrfvrf name	Displays VPN address information from the	
	Example:	BGP table. This command is used to verify that the VRF has been received by BGP.	
	Device# show ip bgp vpnv4 vrf RED	the VKF has been received by BGT.	
Step 4	show ip route vrfvrf-name	Displays the IP routing table associated with a	
	Example:	VRF instance. The show ip route vrf command	
	Device# show ip route vrf RED	is used to verify that the VRF is in the routing table.	

## Configuration Examples for the BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN Feature

The following examples show how to configure and verify this feature:

### eBGP and iBGP Multipath Load Sharing Configuration Example

This following configuration example configures a router in IPv4 address-family mode to select two BGP routes (eBGP or iBGP) as multipaths:

```
Device(config)# router bgp 40000
Device(config-router)# address-family ipv4 vrf RED
Device(config-router-af)# maximum-paths eibgp 2
Device(config-router-af)# end
```

This following configuration example configures a router in IPv6 address-family mode to select two BGP routes (eBGP or iBGP) as multipaths:

```
Device(config) #router bgp 40000
Device(config-router) # address-family ipv6 vrf RED
Device(config-router-af) # maximum-paths eibgp 2
Device(config-router-af) # end
```

## Feature Information for BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Table 1: Feature Information for BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN

Feature Name	Releases	Feature Information
BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN	Cisco IOS XE Everest 16.6.1	The BGP Multipath Load Sharing for eBGP and iBGP feature allows you to configure multipath load balancing with both external BGP (eBGP) and internal BGP (iBGP) paths in Border Gateway Protocol (BGP) networks that are configured to use Multiprotocol Label Switching (MPLS) Virtual Private Networks (VPNs). This feature provides improved load balancing deployment and service offering capabilities and is useful for multi-homed autonomous systems and Provider Edge (PE) routers that import both eBGP and iBGP paths from multihomed and stub networks.



# Configuring EIGRP MPLS VPN PE-CE Site of Origin

- EIGRP MPLS VPN PE-CE Site of Origin, on page 33
- Information About EIGRP MPLS VPN PE-CE Site of Origin, on page 34
- How to Configure EIGRP MPLS VPN PE-CE Site of Origin Support, on page 35
- Configuration Examples for EIGRP MPLS VPN PE-CE SoO, on page 38
- Feature History for EIGRP MPLS VPN PE-CE Site of Origin, on page 39

## **EIGRP MPLS VPN PE-CE Site of Origin**

The EIGRP MPLS VPN PE-CE Site of Origin feature introduces the capability to filter Multiprotocol Label Switching (MPLS) Virtual Private Network (VPN) traffic on a per-site basis for Enhanced Interior Gateway Routing Protocol (EIGRP) networks. Site of Origin (SoO) filtering is configured at the interface level and is used to manage MPLS VPN traffic and to prevent transient routing loops from occurring in complex and mixed network topologies. This feature is designed to support the MPLS VPN Support for EIGRP Between Provider Edge (PE) and Customer Edge (CE) feature. Support for backdoor links is provided by this feature when installed on PE routers that support EIGRP MPLS VPNs.

### **Prerequisites for EIGRP MPLS VPN PE-CE Site of Origin**

This document assumes that Border GatewayProtocol (BGP) is configured in the network core (or the service provider backbone). The following tasks will also need to be completed before you can configure this feature:

- This feature was introduced to support the MPLS VPN Support for EIGRP Between Provider Edge and Customer Edge feature and should be configured after the EIGRP MPLS VPN is created.
- All PE routers that are configured to support the EIGRP MPLS VPN must run Cisco IOS XE Gibraltar 16.11.1 or a later release, which provides support for the SoO extended community.

## **Restrictions for EIGRP MPLS VPN PE-CE Site of Origin**

• If a VPN site is partitioned and the SoO extended community attribute is configured on a backdoor router interface, the backdoor link cannot be used as an alternate path to reach prefixes originated in other partitions of the same site

- A uniqueSoO value must be configured for each individual VPN site. The same value must be configured
  on all provider edge and customer edge interfaces (if SoO is configured on the CE routers) that support
  the same VPN site.
- ip unnumbered command is not supported in MPLS configuration.

## Information About EIGRP MPLS VPN PE-CE Site of Origin

The following section describes information about EIGRP MPLS VPN PE-CE Site of Origin.

### **EIGRP MPLS VPN PE-CE Site of Origin Support Overview**

The EIGRP MPLS VPN PE-CE Site of Origin feature introduces SoO support for EIGRP-to-BGP and BGP-to-EIGRP redistribution. The SoO extended community is a BGP extended community attribute that is used to identify routes that have originated from a site so that the readvertisement of that prefix back to the source site can be prevented. The SoO extended community uniquely identifies the site from which a PE router has learned a route. SoO support provides the capability to filter MPLS VPN traffic on a per-EIGRP-site basis. SoO filtering is configured at the interface level and is used to manage MPLS VPN traffic and to prevent routing loops from occurring in complex and mixed network topologies, such as EIGRP VPN sites that contain both VPN and backdoor links.

The configuration of the SoO extended community allows MPLS VPN traffic to be filtered on a per-site basis. The SoO extended community is configured in an inbound BGP route map on the PE router and is applied to the interface. The SoO extended community can be applied to all exit points at the customer site for more specific filtering but must be configured on all interfaces of PE routers that provide VPN services to CE routers.

## Site of Origin Support for Backdoor Links

The EIGRP MPLS VPN PE-CE Site of Origin (SoO) feature introduces support for backdoor links. A backdoor link or a route is a connection that is configured outside of the VPN between a remote and main site; for example, a WAN leased line that connects a remote site to the corporate network. Backdoor links are typically used as back up routes between EIGRP sites if the VPN link is down or not available. A metric is set on the backdoor link so that the route though the backdoor router is not selected unless there is a VPN link failure.

The SoO extended community is defined on the interface of the backdoor router. It identifies the local site ID, which should match the value that is used on the PE routers that support the same site. When the backdoor router receives an EIGRP update (or reply) from a neighbor across the backdoor link, the router checks the update for an SoO value. If the SoO value in the EIGRP update matches the SoO value on the local backdoor interface, the route is rejected and not added to the EIGRP topology table. This scenario typically occurs when the route with the local SoO valued in the received EIGRP update was learned by the other VPN site and then advertised through the backdoor link by the backdoor router in the other VPN site. SoO filtering on the backdoor link prevents transient routing loops from occurring by filtering out EIGRP updates that contain routes that carry the local site ID.

If this feature is enabled on the PE routers and the backdoor routers in the customer sites, and SoO values are defined on both the PE and backdoor routers, both the PE and backdoor routers will support convergence between the VPN sites. The other routers in the customer sites need only propagate the SoO values carried by the routes, as the routes are forwarded to neighbors. These routers do not otherwise affect or support convergence beyond normal Diffusing Update Algorithm (DUAL) computations.

### **Router Interoperation with the Site of Origin Extended Community**

The configuration of an SoO extended community allows routers that support EIGRP MPLS VPN PE-CE Site of Origin feature to identify the site from which each route originated. When this feature is enabled, the EIGRP routing process on the PE or CE router checks each received route for the SoO extended community and filters based on the following conditions:

- A received route from BGP or a CE router contains an SoO value that matches the SoO value on the receiving interface: If a route is received with an associated SoO value that matches the SoO value that is configured on the receiving interface, the route is filtered because it was learned from another PE router or from a backdoor link. This behavior is designed to prevent routing loops.
- A received route from a CE router is configured with an SoO value that does not match: If a route is received with an associated SoO value that does not match the SoO value that is configured on the receiving interface, the route is added to the EIGRP topology table so that it can be redistributed into BGP. If the route is already installed to the EIGRP topology table but is associated with a different SoO value, the SoO value from the topology table will be used when the route is redistributed into BGP.
- A received route from a CE router does not contain an SoO value: If a route is received without a SoO value, the route is accepted into the EIGRP topology table, and the SoO value from the interface that is used to reach the next hop CE router is appended to the route before it is redistributed into BGP.

When BGP and EIGRP peers that support the SoO extended community receive these routes, they will also receive the associated SoO values and pass them to other BGP and EIGRP peers that support the SoO extended community. This filtering is designed to prevent transient routes from being relearned from the originating site, which prevents transient routing loops from occurring.

## Redistribution of BGP VPN Routes That Carry the Site of Origin into EIGRP

When an EIGRP routing process on a PE router redistributes BGP VPN routes into an EIGRP topology table, EIGRP extracts the SoO value (if one is present) from the appended BGP extended community attributes and appends the SoO value to the route before adding it to the EIGRP topology table. EIGRP tests the SoO value for each route before sending updates to CE routers. Routes that are associated with SoO values that match the SoO value configured on the interface are filtered out before they are passed to the CE routers. When an EIGRP routing process receives routes that are associated with different SoO values, the SoO value is passed to the CE router and carried through the CE site.

#### Benefits of the EIGRP MPLS VPN PE-CE Site of Origin Support Feature

The configuration of the EIGRP MPLS VPN PE-CE Site of Origin Support feature introduces per-site VPN filtering, which improves support for complex topologies, such as MPLS VPNs with backdoor links, CE routers that are dual-homed to different PE routers, and PE routers that support CE routers from different sites within the same virtual routing and forwarding (VRF) instance.

## How to Configure EIGRP MPLS VPN PE-CE Site of Origin Support

The following sections provide information about how to configure EIGRP MPLS VPN PE-CE Site of Origin Support:

### **Configuring the Site of Origin Extended Community**

The configuration of the SoO extended community allows MPLS VPN traffic to be filtered on a per-site basis. The SoO extended community is configured in an inbound BGP route map on the PE router and is applied to the interface. The SoO extended community can be applied to all exit points at the customer site for more specific filtering but must be configured on all interfaces of PE routers that provide VPN services to CE routers.

#### Before you begin

- Confirm that the Border Gateway Protocol (BGP) is configured in the network core (or the service provider backbone).
- Configure an EIGRP MPLS VPN before configuring this feature.
- All PE routers that are configured to support the EIGRP MPLS VPN must support the SoO extended community.
- A unique SoO value must be configured for each VPN site. The same value must be used on the interface of the PE router that connects to the CE router for each VPN site.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	route-map map-name { permit   deny } [ sequence-number ]	Enters route-map configuration mode and creates a route map.
	<pre>Example: Device(config) # route-map Site-of-Origin    permit 10</pre>	<ul> <li>The route map is created in this step so that SoO extended community can be applied.</li> </ul>
Step 4	set extcommunity	Sets BGP extended community attributes.
	sooextended-community-value  Example:	<ul> <li>The soo keyword specifies the site of origin extended community attribute.</li> </ul>
	Device(config-route-map)# set extcommunity soo 100:1	• The extended-community-valueargument specifies the value to be set. The value can be one of the following formats:
		<ul> <li>autonomous-system-number: network-number</li> </ul>
		• ip-address: network-number

	Command or Action	Purpose
		The colon is used to separate the autonomous system number and network number or IP address and network number.
Step 5	<pre>exit Example: Device(config-route-map)# exit</pre>	Exits route-map configuration mode and enters global configuration mode.
Step 6	<pre>interface type number Example: Device(config) # interface GigabitEthernet 1/0/1</pre>	Enters interface configuration mode to configure the specified interface.
Step 7	<pre>no switchport Example: Device(config-if) # no switchport</pre>	causes the interface to cease operating as a Layer 2 port and become a Cisco-routed (Layer 3) port:
Step 8	<pre>vrf forwarding vrf-name Example: Device(config-if)# vrf forwarding VRF1</pre>	Associates the VRF with an interface or subinterface.  • The VRF name configured in this step should match the VRF name created for the EIGRP MPLS VPN with the MPLS VPN Support for EIGRP Between Provider Edge and Customer Edge feature.
Step 9	<pre>ip vrf sitemap route-map-name Example: Device(config-if) # ip vrf sitemap Site-of-Origin</pre>	Associates the VRF with an interface or subinterface.  • The route map name configured in this step should match the route map name created to apply the SoO extended community in Step 3.
Step 10	<pre>ip address ip-address subnet-mask Example:   Device(config-if) # ip address 10.0.0.1   255.255.255.255</pre>	Configures the IP address for the interface.  • The IP address needs to be reconfigured after enabling VRF forwarding.
Step 11	<pre>end Example: Device(config-if)# end</pre>	Exits interface configuration mode and enters privileged EXEC mode.

#### What to do next

• For mixed EIGRP MPLS VPN network topologies that contain backdoor routes, the next task is to configure the "prebest path" cost community for backdoor routes.

## **Verifying the Configuration of the SoO Extended Community**

#### **Procedure**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Device> enable	
Step 2	show ip bgp vpnv4 {all   rdroute-distinguisher   vrfvrf-name} [ip-prefixlength]	Displays VPN address information from the BGP table.
	<b>Example:</b> • Use the show ip bgp vp	• Use the show ip bgp vpnv4 command with
	Device# ip bgp vpnv4 vrf SOO-1 20.2.1.1/32	the all keyword to verify that the specified route has been configured with the SoO extended community attribute.

## Configuration Examples for EIGRP MPLS VPN PE-CE SoO

The following section shows configuration examples for EIGRP MPLS VPN PE-CE SoO:

### **Example Configuring the Site of Origin Extended Community**

The following example, beginning in global configuration mode, configures SoO extended community on an interface:

```
route-map Site-of-Origin permit 10 set extcommunity soo 100:1 exit GigabitEthernet1/0/1 vrf forwarding RED ip vrf sitemap Site-of-Origin ip address 10.0.0.1 255.255.255 end
```

## **Example Verifying the Site of Origin Extended Community**

The following example shows VPN address information from the BGP table and verifies the configuration of the SoO extended community:

```
Device# show ip bgp vpnv4 all 10.0.0.1

BGP routing table entry for 100:1:10.0.0.1/32, version 6

Paths: (1 available, best #1, no table)

Advertised to update-groups:
1
100 300
192.168.0.2 from 192.168.0.2 (172.16.13.13)

Origin incomplete, localpref 100, valid, external, best

Extended Community: SOO:100:1
```

#### Show command Customer Edge Device

```
Device# show ip eigrp topo 20.2.1.1/32
EIGRP-IPv4 Topology Entry for AS(30)/ID(30.0.0.1) for 20.2.1.1/32
 State is Passive, Query origin flag is 1, 2 Successor(s), FD is 131072
  Descriptor Blocks:
  31.1.1.2 (GigabitEthernet1/0/13), from 31.1.1.2, Send flag is 0x0
     Composite metric is (131072/130816), route is External
     Vector metric:
       Minimum bandwidth is 1000000 Kbit
       Total delay is 5020 microseconds
       Reliability is 255/255
       Load is 1/255
       Minimum MTU is 1500
       Hop count is 2
       Originating router is 30.0.0.2
      Extended Community: So0:100:1
      External data:
       AS number of route is 0
       External protocol is Connected, external metric is 0
       Administrator tag is 0 (0x0000000)
```

#### Show command Provider Edge Device

```
Device# show ip eigrp vrf SOO-1 topology 31.1.1.0/24
EIGRP-IPv4 VR(L3VPN) Topology Entry for AS(30)/ID(2.2.2.22)
           Topology(base) TID(0) VRF(SOO-1)
EIGRP-IPv4(30): Topology base(0) entry for 31.1.1.0/24
  State is Passive, Query origin flag is 1, 1 Successor(s), FD is 1310720
  Descriptor Blocks:
  1.1.1.1, from VPNv4 Sourced, Send flag is 0x0
      Composite metric is (1310720/0), route is Internal (VPNv4 Sourced)
      Vector metric:
        Minimum bandwidth is 1000000 Kbit
        Total delay is 10000000 picoseconds
        Reliability is 255/255
        Load is 1/255
       Minimum MTU is 1500
        Hop count is 0
        Originating router is 1.1.1.11
      Extended Community: So0:100:1
```

## Feature History for EIGRP MPLS VPN PE-CE Site of Origin

This table provides release and related information for features explained in this module.

These features are available on all releases subsequent to the one they were introduced in, unless noted otherwise.

Release	Feature	Feature Information
Cisco IOS XE Everest 16.6.1	EIGRP MPLS VPN PE-CE Site of Origin	The EIGRP MPLS VPN PE-CE Site of Origin feature introduces the capability to filter Multiprotocol Label Switching (MPLS) Virtual Private Network (VPN) traffic on a per-site basis for Enhanced Interior Gateway Routing Protocol (EIGRP) networks.

Use Cisco Feature Navigator to find information about platform and software image support. To access Cisco Feature Navigator, go to http://www.cisco.com/go/cfn.



# Configuring Ethernet-over-MPLS and Pseudowire Redundancy

- Configuring Ethernet-over-MPLS, on page 41
- Configuring Pseudowire Redundancy, on page 56
- Feature History for Ethernet-over-MPLS and Pseudowire Redundancy, on page 71

## Configuring Ethernet-over-MPLS

This section provides information about how to configure Ethernet over Multiprotocol Label Switching (EoMPLS).

### **Prerequisites for Ethernet-over-MPLS**

Before you configure EoMPLS, ensure that the network is configured as follows:

- Configure IP routing in the core so that the provider edge (PE) devices can reach each other through IP.
- Configure MPLS in the core so that a label switched path (LSP) exists between the PE devices.
- Configure the **no switchport**, **no keepalive**, and **no ip address** commands before configuring Xconnect on the attachment circuit.
- For load-balancing, configuring the **port-channel load-balance** command is mandatory.
- Subinterfaces must be supported to enable EoMPLS VLAN mode.
- The **mpls ldp graceful-restart** command must be configured to enable the device to protect LDP bindings and MPLS forwarding state during a disruption in service. We recommend you to configure this command (even if you do not want to preserve the forwarding state) to avoid device failure during SSO in a high availability setup with scale configurations.

#### **Restrictions for Ethernet-over-MPLS**

The following sections list the restrictions for EoMPLS port mode and EoMPLS VLAN mode.

#### Restrictions for Ethernet-over-MPLS Port Mode

- Ethernet Flow Point is not supported.
- Quality of Service (QoS): Customer differentiated services code point (DSCP) re-marking is not supported with virtual private wire service (VPWS) and EoMPLS.
- Virtual Circuit Connectivity Verification (VCCV) ping with explicit null is not supported.
- Layer 2 Protocol Tunneling CLI is not supported.
- Flow-Aware Transport (FAT) Pseudowire Redundancy is supported only in Protocol-CLI mode. Supported load-balancing parameters are Source IP, Source MAC address, Destination IP, and Destination MAC address.
- MPLS QoS is supported only in pipe and uniform mode. Default mode is pipe mode.
- Both legacy Xconnect and Protocol-CLI (interface pseudowire configuration) modes are supported.
- Xconnect mode cannot be configured on SVI.
- Xconnect and MACSec cannot be configured on the same interface.
- MACSec should be configured on CE devices and Xconnect should be configured on PE devices.
- A MACSec session should be available between CE devices.
- By default, EoMPLS PW tunnels all the protocols such as Cisco Discovery Protocol and Spanning Tree Protocol (STP). EoMPLS PW cannot perform selective protocol tunneling as part of L2 Protocol Tunneling CLI.
- Link Aggregation Control Protocol (LACP) and Port Aggregation Protocol (PAgP) packets are not forwarded over Ethernet-over-MPLS Pseudowire, as these are processed by the local PE.

#### **Restrictions for EoMPLS VLAN Mode**

- Virtual circuit will not work if the same interworking type is not configured on PE devices.
- Untagged traffic is not supported as incoming traffic.
- Xconnect mode cannot be enabled on Layer 2 subinterfaces because multiplexer user-network interface (MUX UNI) is not supported.
- Xconnect mode cannot be configured on subinterfaces if it is enabled on the main interface for port-to-port transport.
- FAT can be configured on Protocol CLI mode only.
- In VLAN mode EoMPLS, only those packets encrypted with the dot1q in clear by the CE device will be processed by the PE device.
- QoS: Customer DSCP Remarking is not supported with VPWS and EoMPLS.
- MPLS QoS is supported in pipe and uniform mode. Default mode is pipe mode.
- In VLAN mode EoMPLS, Cisco Discovery Protocol packets from the CE will be processed by the PE, but will not be carried over the EoMPLS virtual circuit, whereas in port mode, Cisco Discovery Protocol packets from the CE will be carried over the virtual circuit.

- Only Ethernet and VLAN interworking types are supported.
- L2 Protocol Tunneling CLI is not supported.
- Link Aggregation Control Protocol (LACP) and Port Aggregation Protocol (PAgP) packets are not forwarded over Ethernet-over-MPLS Pseudowire, as these are processed by the local PE.

#### Information About Ethernet-over-MPLS

EoMPLS is one of the Any Transport over MPLS (AToM) transport types. EoMPLS works by encapsulating Ethernet protocol data units (PDUs) in MPLS packets and forwarding them across the MPLS network. Each PDU is transported as a single packet.

The following modes are supported:

- Port mode: Allows all traffic on a port to share a single virtual circuit across an MPLS network. Port mode uses virtual circuit type 5.
- VLAN mode: Transports Ethernet traffic from a source 802.1Q VLAN to a destination 802.1Q VLAN through a single virtual circuit over an MPLS network. VLAN mode uses virtual circuit type 5 as the default (does not transport dot1q tag); however, uses virtual circuit type 4 (transports dot1 tag) if the remote PE does not support virtual circuit type 5 for subinterface-based (VLAN-based) EoMPLS.

Interworking between EoMPLS port mode and EoMPLS VLAN mode: If EoMPLS port mode is configured on a local PE and EoMPLS VLAN mode on a remote PE, then the customer edge (CE) Layer 2 switchport interface must be configured as an *access* on the port mode side and the Spanning Tree Protocol must be disabled on the VLAN mode side of the CE device.

The maximum transmission unit (MTU) of all the intermediate links between PEs must be able to carry the largest Layer 2 packet received on ingress PE.

### **How to Configure Ethernet-over-MPLS**

EoMPLS can be configured in the port mode or VLAN mode.

#### **Configuring Ethernet-over-MPLS Port Mode**

EoMPLS port mode can be configured using either the Xconnect mode or protocol CLI method.

#### **Xconnect Mode**

To configure EoMPLS port mode in Xconnect mode, perform the following task:

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode. Enter your
	Example:	password if prompted.
	Device> enable	

	Command or Action	Purpose
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	interface interface-id	Defines the interface to be configured as a trunk, and enters interface configuration mode.
	Example:	and enters interface configuration mode.
	<pre>Device(config)# interface TenGigabitEthernet1/0/36</pre>	
Step 4	no switchport	Enters Layer 3 mode for physical ports only.
	Example:	
	Device(config-if)# no switchport	
Step 5	no ip address	Ensures that no IP address is assigned to the
	Example:	physical port.
	Device(config-if)# no ip address	
Step 6	no keepalive	Ensures that the device does not send keepalive
	Example:	messages.
	Device(config-if)# no keepalive	
Step 7	xconnect peer-device-id vc-id encapsulation	Binds the attachment circuit to a pseudowire
	mpls	virtual circuit (VC). The syntax for this command is the same as for all other Layer 2
	Example:	transports.
	<pre>Device(config-if) # xconnect 10.1.1.1 962 encapsulation mpls</pre>	
Step 8	end	Exits interface configuration mode and returns
	Example:	to privileged EXEC mode.
	Device(config-if)# end	

#### **Protocol CLI Method**

To configure EoMPLS port mode in protocol CLI mode, perform the following task:

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode. Enter your
	Example:	password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	port-channel load-balance dst-ip	Sets the load distribution method to the
	Example:	destination IP address.
	Device(config)# port-channel load-balance dst-ip	
Step 4	interface interface-id	Defines the interface to be configured as a
	Example:	trunk, and enters interface configuration mode.
	<pre>Device(config)# interface TenGigabitEthernet1/0/21</pre>	
Step 5	no switchport	Enters Layer 3 mode for physical ports only.
	Example:	
	Device(config-if)# no switchport	
Step 6	no ip address	Ensures that no IP address is assigned to the
	Example:	physical port.
	Device(config-if)# no ip address	
Step 7	no keepalive	Ensures that the device does not send keepalive
	Example:	messages.

	Command or Action	Purpose
	Device(config-if)# no keepalive	
Step 8	<pre>exit Example: Device(config-if)# exit</pre>	Exits interface configuration mode and returns to global configuration mode.
Step 9	<pre>interface pseudowire number Example:  Device(config) # interface pseudowire 17</pre>	Establishes a pseudowire interface with a value that you specify and enters pseudowire configuration mode.
Step 10	<pre>encapsulation mpls Example:  Device(config-if)# encapsulation mpls</pre>	Specifies the tunneling encapsulation.
Step 11	<pre>neighbor peer-ip-addr vc-id Example:  Device(config-if) # neighbor 10.10.0.10 17</pre>	Specifies the peer IP address and virtual circuit (VC) ID value of a Layer 2 VPN (L2VPN) pseudowire.
Step 12	<pre>12vpn xconnect context context-name Example:    Device(config-if)# 12vpn xconnect context vpws17</pre>	Creates an L2VPN cross connect context and enters Xconnect context configuration mode.
Step 13	<pre>member interface-id Example:  Device(config-if-xconn) # member TenGigabitEthernet1/0/21</pre>	Specifies interface that forms an L2VPN cross connect.

	Command or Action	Purpose
Step 14	member pseudowire number  Example:	Specifies the pseudowire interface that forms an L2VPN cross connect.
	Device(config-if-xconn)# member pseudowire 17	
Step 15	end Example:	Exits Xconnect interface configuration mode and returns to privileged EXEC mode.
	Device(config-if-xconn)# end	

## **Configuring Ethernet-over-MPLS VLAN Mode**

EoMPLS VLAN mode can be configured using either the Xconnect mode or protocol-CLI method.

#### **Xconnect Mode**

To configure EoMPLS VLAN mode in Xconnect mode, perform the following task:

mand or Action	Purpose
ble	Enables privileged EXEC mode. Enter your password if prompted.
mple:	password if prompted.
ce> enable	
figure terminal	Enters global configuration mode.
nple:	
ce# configure terminal	
rface interface-id	Defines the interface to be configured as a
mple:	trunk, and enters interface configuration mode.
ce(config)# interface SigabitEthernet1/0/36	
witchport	Enters Layer 3 mode, for physical ports only.
nple:	
ce(config-if)# no switchport	
-	

	Command or Action	Purpose
Step 5	<pre>no ip address Example: Device(config-if)# no ip address</pre>	Ensures that there is no IP address assigned to the physical port.
Step 6	no keepalive  Example:  Device(config-if)# no keepalive	Ensures that the device does not send keepalive messages.
Step 7	<pre>exit Example: Device(config-if)# exit</pre>	Exits interface configuration mode and returns to global configuration mode.
Step 8	<pre>interface interface-id.subinterface Example:  Device (config) # interface TenGigabitEthernet1/0/36.1105</pre>	Defines the subinterface to be configured, and enters subinterface configuration mode.
Step 9	<pre>encapsulation dot1Q vlan-id Example:  Device(config-subif)# encapsulation dot1Q 1105</pre>	Enables IEEE 802.1Q encapsulation of traffic on the subinterface.
Step 10	<pre>xconnect peer-ip-addr vc-id encapsulation mpls Example:  Device(config-subif) # xconnect 10.0.0.1 1105 encapsulation mpls</pre>	Binds the attachment circuit to a pseudowire VC. The syntax for this command is the same as for all other Layer 2 transports.
Step 11	<pre>end Example: Device(config-subif-xconn)# end</pre>	Returns to privileged EXEC mode.

#### **Protocol CLI Method**

To configure EoMPLS VLAN mode in protocol-CLI mode, perform the following task:

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode. Enter your
	Example:	password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	port-channel load-balance dst-ip	Sets the load-distribution method to the
	Example:	destination IP address.
	Device(config)# port-channel load-balance dst-ip	
Step 4	interface interface-id	Defines the interface to be configured as a
	Example:	trunk, and enters interface configuration mode.
	Device(config)# interface TenGigabitEthernet1/0/36	
Step 5	no switchport	Enters Layer 3 mode, for physical ports only.
	Example:	
	Device(config-if)# no switchport	
Step 6	no ip address	Ensures that there is no IP address assigned to
	Example:	the physical port.
	Device(config-if)# no ip address	
Step 7	no keepalive	Ensures that the device does not send keepalive
	Example:	messages.
	Device(config-if)# no keepalive	

	Command or Action	Purpose
Step 8	exit	Exits interface configuration mode and returns
	Example:	to global configuration mode.
	Device(config-if)# exit	
Step 9	interface interface-id.subinterface	Defines the subinterface to be configured, and
	Example:	enters subinterface configuration mode.
	Device(config)# interface TenGigabitEthernet1/0/36.1105	
Step 10	encapsulation dot1Q vlan-id	Enables IEEE 802.1Q encapsulation of traffic
	Example:	on the subinterface.
	Device(config-subif)# encapsulation dot1Q 1105	
Step 11	exit	Exits subinterface configuration mode and
	Example:	returns to interface configuration mode.
	Device(config-subif)# exit	
Step 12	interface pseudowire number	Establishes a pseudowire interface with a value
	Example:	that you specify and enters pseudowire configuration mode.
	Device(config)# interface pseudowire 17	
Step 13	encapsulation mpls	Specifies the tunneling encapsulation.
	Example:	
	Device(config-if)# encapsulation mpls	
Step 14	neighbor peer-ip-addr vc-id	Specifies the peer IP address and VC ID value
	Example:	of a L2VPN pseudowire.
	Device(config-if)# neighbor 10.10.0.10 17	

	Command or Action	Purpose
Step 15	<pre>l2vpn xconnect context context-name Example:  Device(config-if) # 12vpn xconnect context vpws17</pre>	Creates a L2VPN cross connect context, and enters Xconnect context configuration mode.
Step 16	member interface-id.subinterface  Example:  Device(config-if-xconn) # member TenGigabitEthernet1/0/36.1105	Specifies the subinterface that forms a L2VPN cross connect.
Step 17	member pseudowire number  Example:  Device(config-if-xconn) # member pseudowire 17	Specifies pseudowire interface that forms a L2VPN cross connect.
Step 18	<pre>end Example: Device(config-if-xconn)# end</pre>	Exits Xconnect configuration mode and returns to privileged EXEC mode.

## **Configuration Examples for Ethernet-over-MPLS**

Figure 3: EoMPLS Topology

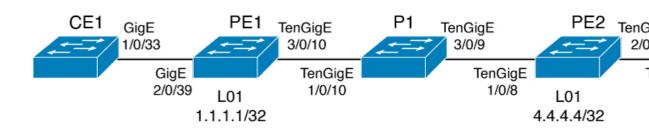


Table 2: EoMPLS Port Mode Configuration

PE Configuration	CE Configuration
mpls ip mpls label protocol ldp mpls ldp graceful-restart mpls ldp router-id loopback 1 force interface Loopback1 ip address 10.1.1.1 255.255.255.255 ip ospf 100 area 0 router ospf 100 router-id 10.1.1.1 nsf system mtu 9198 port-channel load-balance dst-ip ! interface gigabitethernet 2/0/39 no switchport no ip address no keepalive ! interface pseudowire101 encapsulation mpls neighbor 10.10.10.10 101 load-balance flow ip dst-ip load-balance flow-label both 12vpn xconnect context pw101 member pseudowire101 member gigabitethernet 2/0/39 ! interface tengigabitethernet 3/0/10 switchport trunk allowed vlan 142 switchport mode trunk channel-group 42 mode active ! interface Port-channel42 switchport mode trunk ! interface Vlan142 ip address 10.11.11.11 255.255.255.0 ip ospf 100 area 0 mpls ip mpls label protocol ldp !	interface gigabitethernet 1/0/33 switchport trunk allowed vlan 912 switchport mode trunk spanning-tree portfast trunk ! interface Vlan912 ip address 10.91.2.3 255.255.255.0 !

Table 3: EoMPLS VLAN Mode Configuration

PE Configuration	CE Configuration
interface tengigabitethernet 1/0/36 no switchport no ip address no keepalive exit ! interface tengigabitethernet 1/0/36.1105 encapsulation dot1Q 1105 exit ! interface pseudowire1105 encapsulation mpls neighbor 10.10.0.10 1105 exit ! 12vpn xconnect context vme1105 member tengigabitethernet 1/0/36.1105 member pseudowire1105 end !	interface fortygigabitethernet 1/9 switchport switchport mode trunk switchport trunk allowed vlan 1105 mtu 9216 end !

Table 4: Interworking Between EoMPLS Port Mode and EoMPLS VLAN Mode Configuration

PE Configuration: Port Mode	CE Configuration: Port Mode
interface tengigabitethernet 1/0/37	interface fortygigabitethernet1/10
no switchport no ip address no keepalive exit	switchport switchport mode access switchport access vlan 1105 end
interface pseudowire1105 encapsulation mpls neighbor 10.11.11.11 1105 exit ! 12vpn xconnect context vme1105 member tengigabitethernet 1/0/37	no spanning-tree vlan 1105 !
member pseudowire1105 end	

PE Configuration: VLAN Mode	CE Configuration: VLAN Mode
<pre>interface tengigabitethernet 1/0/36   no switchport   no ip address   no keepalive   exit ! interface tengigabitethernet 1/0/36.1105</pre>	interface fortygigabitethernet 1/9 switchport switchport mode trunk switchport trunk allowed vlan 1105 mtu 9216 end
encapsulation dot1Q 1105 exit ! interface pseudowire1105 encapsulation mpls neighbor 10.10.0.10 1105 exit ! 12vpn xconnect context vme1105 member tengigabitethernet 1/0/36.1105 member pseudowire1105 end !	no spanning-tree vlan 1105 !

Another scenario for interworking between EoMPLS port mode and EoMPLS VLAN mode is to configure the following commands on both CE devices:

- switchport mode trunk
- switchport trunk allowed vlan vlan-id
- spanning-tree vlan vlan-id

Data traffic will flow through by disabling STP on both CE devices, if the traffic sent is not double VLAN tagged.

The following is a sample output of the **show mpls 12 vc vcid** *vc-id* **detail** command:

```
Device# show mpls 12 vc vcid 1105 detail
```

```
Local interface: TenGigabitEthernet1/0/36.1105 up, line protocol up, Eth VLAN 1105 up
 Interworking type is Ethernet
  Destination address: 10.0.0.1, VC ID: 1105, VC status: up
   Output interface: Pol0, imposed label stack {33 10041}
   Preferred path: not configured
   Default path: active
   Next hop: 10.10.0.1
  Create time: 00:04:09, last status change time: 00:02:13
    Last label FSM state change time: 00:02:12
  Signaling protocol: LDP, peer 10.0.0.1:0 up
   Targeted Hello: 10.0.0.10(LDP Id) -> 10.0.0.1, LDP is UP
    Graceful restart: configured and enabled
   Non stop routing: not configured and not enabled
    Status TLV support (local/remote) : enabled/supported
     LDP route watch
                                       : enabled
     Label/status state machine
                                       : established, LruRru
     Last local dataplane status rcvd: No fault
     Last BFD dataplane
                           status rcvd: Not sent
     Last BFD peer monitor status rcvd: No fault
     Last local AC circuit status rcvd: No fault
     Last local AC circuit status sent: No fault
    Last local PW i/f circ status rcvd: No fault
```

```
Last local LDP TLV
                        status sent: No fault
   Last remote LDP TLV status rcvd: No fault
   Last remote LDP ADJ status rcvd: No fault
 MPLS VC labels: local 124, remote 10041
 Group ID: local 336, remote 352
 MTU: local 9198, remote 9198
 Remote interface description:
 MAC Withdraw: sent:1, received:0
Sequencing: receive disabled, send disabled
Control Word: On (configured: autosense)
SSO Descriptor: 10.0.0.1/1105, local label: 124
Dataplane:
 SSM segment/switch IDs: 9465983/446574 (used), PWID: 109
VC statistics:
 transit packet totals: receive 0, send 0
  transit byte totals: receive 0, send 0
  transit packet drops: receive 0, seq error 0, send 0
```

The following is a sample output of the **show l2vpn atom vc vcid** *vc-id* **detail** command:

```
Device# show 12vpn atom vc vcid 1105 detail
pseudowire100109 is up, VC status is up PW type: Ethernet
 Create time: 00:04:17, last status change time: 00:02:22
   Last label FSM state change time: 00:02:20
  Destination address: 10.0.0.1 VC ID: 1105
   Output interface: Pol0, imposed label stack {33 10041}
   Preferred path: not configured
   Default path: active
   Next hop: 10.10.0.1
 Member of xconnect service TenGigabitEthernet1/0/36.1105-1105, group right
   Associated member TenGigabitEthernet1/0/36.1105 is up, status is up
   Interworking type is Ethernet
   Service id: 0x1f000037
  Signaling protocol: LDP, peer 10.0.0.1:0 up
   Targeted Hello: 10.0.0.10(LDP Id) -> 10.0.0.1, LDP is UP
   Graceful restart: configured and enabled
   Non stop routing: not configured and not enabled
   PWid FEC (128), VC ID: 1105
                                          : enabled/supported: enabled
    Status TLV support (local/remote)
     LDP route watch
                                          : established, LruRru
     Label/status state machine
     Local dataplane status received
                                          : No fault
                                          : Not sent
     BFD dataplane status received
     BFD peer monitor status received ....
Status received from access circuit : No fault
: No fault
                                         : No fault
     Status received from pseudowire i/f
     Status sent to network peer
                                          : No fault
                                       : No fault
     Status received from network peer
     Adjacency status of remote peer
                                           : No fault
  Sequencing: receive disabled, send disabled
 Bindings
   Parameter Local
                                              Remote
    ______
   Label
                                              10041
   Group ID
               336
                                              352
   Tnterface
               9198
                                             9198
   Control word on (configured: autosense)
   PW type Ethernet
                                             Ethernet
   VCCV CV type 0x02
                                             0x02
                 LSPV [2]
                                              LSPV [2]
   VCCV CC type 0x06
                                            0x06
                 RA [2], TTL [3]
                                             RA [2], TTL [3]
```

```
Status TLV enabled supported
SSO Descriptor: 10.0.0.1/1105, local label: 124
Dataplane:
SSM segment/switch IDs: 9465983/446574 (used), PWID: 109
Rx Counters
0 input transit packets, 0 bytes
0 drops, 0 seq err
0 MAC withdraw
Tx Counters
0 output transit packets, 0 bytes
0 drops
1 MAC withdraw
```

The following is a sample output of the **show mpls forwarding-table** command:

#### Device# show mpls forwarding-table 10.0.0.1

Local	Outgoing	Prefix	Bytes Label	Outgoing	Next Hop
Label	Label	or Tunnel Id	Switched	interface	
2049	33	10.0.0.1/32	38540	Hu2/0/30/2.1	10.0.0.2
	33	10.0.0.1/32	112236	Hu2/0/30/2.2	10.0.0.6
	33	10.0.0.1/32	46188	Hu2/0/30/2.3	10.0.0.8

## **Configuring Pseudowire Redundancy**

This section provides information about how to configure pseudowire redundancy.

### **Prerequisites for Pseudowire Redundancy**

- Configure the **no switchport**, **no keepalive**, and **no ip address** before configuring Xconnect mode to connect the attachment circuit.
- For load-balancing, configure the port-channel load-balance command.
- Subinterfaces must be supported to enable pseudowire redundancy VLAN mode.

## **Restrictions for Pseudowire Redundancy**

The following sections list the restrictions for pseudowire redundancy port mode and pseudowire redundancy VLAN mode.

#### **Restrictions for Pseudowire Redundancy Port Mode**

- Ethernet Flow Point (EFP) and Internet Group Management Protocol (IGMP) Snooping is not supported.
- Flow Label for ECMP load balancing in a core network based on customer's source IP, destination IP, source MAC and destination MAC.
- MPLS QoS is supported in Pipe and Uniform Mode. Default mode is Pipe Mode.
- QoS: Customer DSCP Re-marking is not supported with VPWS and EoMPLS.
- VCCV Ping with explicit null is not supported.

- The **ip unnumbered** command is not supported in MPLS configuration.
- Not more than one backup pseudowire supported.
- PW redundancy group switchover is not supported

#### **Restrictions for Pseudowire Redundancy VLAN Mode**

- Virtual circuit will not work if the same interworking type is not configured on PE devices.
- Untagged traffic is not supported as incoming traffic.
- Xconnect mode cannot be enabled on Layer 2 subinterfaces because multiplexer user-network interface (MUX UNI) is not supported.
- X connect mode cannot be configured on subinterfaces if it is enabled on the main interface for port-to-port transport.
- Flow Aware Transport (FAT) can be configured on Protocol CLI mode only.
- MACsec is not supported on pseudowire redundancy VLAN mode.
- QoS: Customer DSCP Remarking is not supported with VPWS and pseudowire redundancy.
- MPLS QoS is supported only in pipe and uniform mode. Default mode is pipe mode.
- In VLAN mode pseudowire redundancy, Cisco Discovery Protocol packets from the CE will be processed by the PE, but is not carried over the pseudowire redundancy virtual circuit, whereas in port mode, Cisco Discovery Protocol packets from the CE will be carried over the virtual circuit.
- Only Ethernet and VLAN interworking types are supported.
- L2 Protocol Tunneling CLI is not supported.

## Information About Pseudowire Redundancy

The L2VPN pseudowire redundancy feature enables you to configure your network to detect a failure in the network and reroute the Layer 2 service to another endpoint that can continue to provide service. This feature provides the ability to recover from a failure either of the remote provider edge (PE) device or of the link between the PE and customer edge (CE) devices.

The maximum transmission unit (MTU) of all the intermediate links between PEs must be able to carry the largest Layer 2 packet received on ingress PE.

Pseudowire redundancy can be configured using both the Xconnect and the protocol CLI method.

#### **How to Configure Pseudowire Redundancy**

Pseudowire redundancy can be configured in the port mode or VLAN mode.

#### **Configuring Pseudowire Redundancy Port Mode**

Pseudowire redundancy port-mode can be configured using either the Xconnect mode or protocol-CLI method.

#### **Xconnect Mode**

To configure pseudowire redundancy port mode in Xconnect mode, perform the following task:



Note

To enable load balance, use the corresponding **load-balance** commands from Xconnect Mode procedure of the 'How to Configure Ethernet-over-MPLS section.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode. Enter your
	Example:	password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	interface interface-id	Defines the interface to be configured as a trunk,
	Example:	and enters interface configuration mode.
	Device(config)# interface GigabitEthernet1/0/44	
Step 4	no switchport	Enters Layer 3 mode, for physical ports only.
	Example:	
	Device(config-if)# no switchport	
Step 5	no ip address	Ensures that there is no IP address assigned to
	Example:	the physical port.
	Device(config-if)# no ip address	
Step 6	no keepalive	Ensures that the device does not send keepalive
	Example:	messages.
	Device(config-if)# no keepalive	

	Command or Action	Purpose	
Step 7	xconnect peer-device-id vc-id encapsulation mpls	Binds the attachment circuit to a pseudowire VC. The syntax for this command is the same	
	Example:	as for all other Layer 2 transports.	
	<pre>Device(config-if) # xconnect 10.1.1.1 117 encapsulation mpls</pre>		
Step 8	backup peer peer-router-ip-addr vcid vc-id [ priority value ]	Specifies a redundant peer for a pseudowire VC.	
	Example:		
	Device(config-if)# backup peer 10.11.11.11 118 priority 9		
Step 9	end	Exits interface configuration mode and retu	
	Example:	to privileged EXEC mode.	
	Device(config)# end		

#### **Protocol CLI Method**

To configure pseudowire redundancy port mode in protocol CLI mode, perform the following task:

	<b>Command or Action</b>	Purpose
Step 1	enable	Enables privileged EXEC mode. Enter your
	Example:	password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	port-channel load-balance dst-ip	Sets the load-distribution method to the
	Example:	destination IP address.
	Device(config)# port-channel	

	Command or Action	Purpose
	load-balance dst-ip	
Step 4	<pre>interface interface-id Example:  Device(config) # interface TenGigabitEthernet1/0/36</pre>	Defines the interface to be configured as a trunk, and enters interface configuration mode.
Step 5	<pre>no switchport Example: Device(config-if)# no switchport</pre>	Enters Layer 3 mode, for physical ports only.
Step 6	<pre>no ip address Example:  Device(config-if)# no ip address</pre>	Ensures that there is no IP address assigned to the physical port.
Step 7	<pre>no keepalive Example:  Device(config-if)# no keepalive</pre>	Ensures that the device does not send keepalive messages.
Step 8	<pre>exit Example: Device(config-if)# exit</pre>	Exits interface configuration mode.
Step 9	<pre>interface pseudowire number-active Example:  Device(config) # interface pseudowire 17</pre>	Establishes an active pseudowire interface with a value that you specify and enters pseudowire configuration mode.
Step 10	<pre>encapsulation mpls Example:  Device(config-if)# encapsulation mpls</pre>	Specifies the tunneling encapsulation.

	Command or Action	Purpose	
Step 11	<pre>neighbor active-peer-ip-addr vc-id Example:  Device(config-if)# neighbor 10.10.0.10 17</pre>	Specifies the active peer IP address and VC ID value of a L2VPN pseudowire.	
Step 12	<pre>exit Example: Device(config-if)# exit</pre>	Exits interface configuration mode and returns to global configuration mode.	
Step 13	<pre>interface pseudowire number-standby Example:  Device(config) # interface pseudowire 18</pre>	Establishes a standby pseudowire interface with a value that you specify and enters pseudowire configuration mode.	
Step 14	<pre>encapsulation mpls Example:  Device(config-if)# encapsulation mpls</pre>	Specifies the tunneling encapsulation.	
Step 15	<pre>neighbor standby-peer-ip-addr vc-id Example:  Device(config-if)# neighbor 10.10.0.11 18</pre>	Specifies the standby peer IP address and VC ID value of a L2VPN pseudowire.	
Step 16	<pre>l2vpn xconnect context context-name Example:  Device(config-if)# 12vpn xconnect context vpws17</pre>	Creates a L2VPN cross connect context, and attaches the VLAN mode EoMPLS attachmer circuit to the active and standby pseudowire interfaces.	
Step 17	<pre>member interface-id Example:  Device(config-if-xconn) # member TenGigabitEthernet1/0/36</pre>	Specifies interface that forms a L2VPN cross connect.	

	Command or Action	Purpose	
Step 18	member pseudowire number-active group group-name [priority value]	Specifies active pseudowire interface that forms a L2VPN cross connect.	
	Example:		
	Device(config-if-xconn)# member pseudowire 17 group pwr10		
Step 19	member pseudowire number-standby group group-name [priority value]	Specifies standby pseudowire interface that forms a L2VPN cross connect.	
	Example:		
	Device(config-if-xconn)# member pseudowire 18 group pwr10 priority 6		
Step 20	end	Exits X connect configuration mode and returns	
	Example:	to privileged EXEC mode.	
	Device(config-if-xconn)# end		

### **Configuring Pseudowire Redundancy VLAN Mode**

Pseudowire redundancy VLAN mode can be configured using either the Xconnect mode or the protocol CLI method.

### **Xconnect Mode**

To configure pseudowire redundancy VLAN mode in Xconnect mode, perform the following task:

### **Procedure**

	Command or Action	Purpose
Step 1	enable Example:	Enables privileged EXEC mode. Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	

	Command or Action	Purpose		
Step 3	<pre>interface interface-id Example:  Device(config) # interface TenGigabitEthernet1/0/36</pre>	Defines the interface to be configured as a trunk, and enters interface configuration mode.		
Step 4	<pre>no switchport Example: Device(config-if)# no switchport</pre>	Enters Layer 3 mode for physical ports only.		
Step 5	<pre>no ip address Example:  Device(config-if)# no ip address</pre>	Ensures that no IP address is assigned to the physical port.		
Step 6	<pre>no keepalive Example: Device(config-if)# no keepalive</pre>	Ensures that the device does not send keepalive messages.		
Step 7	<pre>exit Example: Device(config-if)# exit</pre>	Exits interface configuration mode and returns to global configuration mode.		
Step 8	<pre>interface interface-id.subinterface Example:  Device(config) # interface TenGigabitEthernet1/0/36.1105</pre>	Defines the subinterface to be configured, and enters subinterface configuration mode.		
Step 9	<pre>encapsulation dot1Q vlan-id Example:  Device(config-subif)# encapsulation dot1Q 1105</pre>	Enables IEEE 802.1Q encapsulation of traffic on the subinterface.		

	Command or Action	Purpose
Step 10	<pre>xconnect peer-ip-addr vc-id encapsulation mpls Example:  Device(config-subif) # xconnect 10.0.0.1 1105 encapsulation mpls</pre>	Binds the attachment circuit to a pseudowire VC. The syntax for this command is the same as for all other Layer 2 transports.
Step 11	<pre>backup peer peer-ip-addr vc-id [priority value]  Example:  Device(config-subif-xconn) # backup peer 10.10.10.10 1105 priority 8</pre>	Specifies a redundant peer for the pseudowire VC.
Step 12	<pre>end Example: Device(config-subif-xconn)# end</pre>	Exits Xconnect configuration mode and returns to privileged EXEC mode.

### **Protocol CLI Method**

To configure pseudowire redundancy VLAN mode in protocol CLI mode, perform the following task:

### **Procedure**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode. Enter your
	Example:	password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	port-channel load-balance dst-ip	Sets the load-distribution method to the
	Example:	destination IP address.
	Device(config)# port-channel load-balance dst-ip	

	Command or Action	Purpose		
Step 4	<pre>interface interface-id Example:  Device(config) # interface TenGigabitEthernet1/0/36</pre>	Defines the interface to be configured as a trunk, and enters interface configuration mode.		
Step 5	<pre>no switchport Example: Device(config-if)# no switchport</pre>	Enters Layer 3 mode for physical ports only.		
Step 6	<pre>no ip address Example: Device(config-if) # no ip address</pre>	Ensures that there is no IP address assigned to the physical port.		
Step 7	<pre>no keepalive Example: Device(config-if)# no keepalive</pre>	Ensures that the device does not send keepalive messages.		
Step 8	<pre>exit Example: Device(config-if)# exit</pre>	Exits interface configuration mode.		
Step 9	<pre>interface interface-id.subinterface Example:  Device(config) # interface TenGigabitEthernet1/0/36.1105</pre>	Defines the subinterface to be configured, and enters subinterface configuration mode.		
Step 10	<pre>encapsulation dot1Q vlan-id Example:  Device(config-subif) # encapsulation dot1Q 1105</pre>	Enables IEEE 802.1Q encapsulation of traffic on the subinterface.		

	Command or Action	Purpose
Step 11	exit	Exits subinterface configuration mode.
	Example:	
	Device(config-subif)# exit	
Step 12	interface pseudowire number-active	Establishes an active pseudowire interface with
	Example:	a value that you specify, and enters pseudowire configuration mode.
	Device(config)# interface pseudowire 17	
Step 13	encapsulation mpls	Specifies the tunneling encapsulation.
	Example:	
	Device(config-if)# encapsulation mpls	
Step 14	neighbor active-peer-ip-addr vc-id	Specifies the active peer IP address and virtual
	Example:	circuit (VC) ID value of a Layer 2 VPN (L2VPN) pseudowire.
	Device(config-if)# neighbor 10.10.0.10 17	
Step 15	exit	Exits interface configuration mode.
	Example:	
	Device(config-if)# exit	
Step 16	interface pseudowire number-standby	Establishes a standby pseudowire interface
	Example:	with a value that you specify, and enters pseudowire configuration mode.
	Device(config)# interface pseudowire 18	
Step 17	encapsulation mpls	Specifies the tunneling encapsulation.
	Example:	
	Device(config-if)# encapsulation mpls	

	Command or Action	Purpose	
Step 18	<pre>neighbor standby-peer-ip-addr vc-id Example:  Device(config-if)# neighbor 10.10.0.11 18</pre>	Specifies the standby peer IP address and VC ID value of an L2VPN pseudowire.	
Step 19	<pre>l2vpn xconnect context context-name Example:  Device(config-if) # 12vpn xconnect context vpws17</pre>	Creates an L2VPN cross-connect context, and attaches the VLAN mode EoMPLS attachment circuit to the active and standby pseudowire interfaces.	
Step 20	<pre>member interface-id.subinterface Example:  Device(config-if-xconn) # member TenGigabitEthernet1/0/36.1105</pre>	Specifies the interface that forms an L2VPN cross connect.	
Step 21	member pseudowire number-active group group-name [priority value]  Example:  Device(config-if-xconn) # member pseudowire 17 group pwr10	Specifies the active pseudowire interface that forms an L2VPN cross connect.	
Step 22	member pseudowire number-standby group group-name [priority value]  Example:  Device(config-if-xconn) # member pseudowire 18 group pwr10 priority 6	p Specifies standby pseudowire interface that forms an L2VPN cross connect.	
Step 23	<pre>end Example: Device(config-if-xconn)# end</pre>	Exits Xconnect configuration mode and returns to privileged EXEC mode.	

# **Configuration Examples for Pseudowire Redundancy**

Table 5: Pseudowire Redundancy Port Mode Configuration

PE Configuration	CE Configuration
<pre>mpls ip mpls label protocol ldp mpls ldp graceful-restart mpls ldp router-id loopback 1 force ! interface Loopback1 ip address 10.1.1.1 255.255.255 ip ospf 100 area 0 router ospf 100 router-id 10.1.1.1</pre>	<pre>interface gigabitethernet 1/0/33 switchport trunk allowed vlan 912 switchport mode trunk spanning-tree portfast trunk ! interface Vlan912 ip address 10.91.2.3 255.255.255.0 !</pre>
nsf ! interface gigabitethernet 2/0/39 no switchport no ip address no keepalive ! interface pseudowire101 encapsulation mpls neighbor 10.10.10.10 101 !	
interface pseudowire102 encapsulation mpls neighbor 10.10.10.11 101 12vpn xconnect context pw101 member pseudowire101 group pwgrp1 priority 1 member pseudowire102 group pwgrp1 priority 15 member GigabitEthernet2/0/39 !	
interface tengigabitethernet 3/0/10 switchport trunk allowed vlan 142 switchport mode trunk channel-group 42 mode active ! interface Port-channel42 switchport trunk allowed vlan 142 switchport mode trunk ! interface Vlan142 ip address 10.11.11.11 255.255.255.0	
ip ospf 100 area 0 mpls ip mpls label protocol ldp !	

Table 6: Pseudowire Redundancy VLAN Mode Configuration

PE Configuration	CE Configuration
interface tengigabitethernet 1/0/36 no switchport	interface fortygigabitethernet 1/9 switchport
no ip address no keepalive exit.	switchport mode trunk switchport trunk allowed vlan 1105
! ! interface tengigabitethernet 1/0/36.1105	mtu 9216
encapsulation dot1Q 1105	!
interface pseudowire1105 encapsulation mpls neighbor 10.10.0.10 1105	
exit !	
interface pseudowire1106 encapsulation mpls neighbor 10.10.0.11 1106	
12vpn xconnect context vme1105 member tengigabitethernet 1/0/36.1105 member pseudowire1105 group pwr10 member pseudowire1106 group pwr10 priority	
end !	

The following is a sample output of the **show mpls 12 vc vcid** *vc-id* **detail** command:

```
Device# show mpls 12 vc vcid 1105 detail
```

```
Local interface: TenGigabitEthernet1/0/36.1105 up, line protocol up, Eth VLAN 1105 up
 Interworking type is Ethernet
  Destination address: 10.11.11.11, VC ID: 1105, VC status: standby
   Output interface: Pol0, imposed label stack {1616}
   Preferred path: not configured
   Default path: active
   Next hop: 10.10.0.1
  Create time: 00:04:09, last status change time: 00:02:13
    Last label FSM state change time: 00:02:15
  Signaling protocol: LDP, peer 10.11.11.11:0 up
   Targeted Hello: 10.10.0.10(LDP Id) -> 10.11.11.11, LDP is UP
    Graceful restart: configured and enabled
   Non stop routing: not configured and not enabled
   Status TLV support (local/remote) : enabled/supported
     LDP route watch
                                      : enabled
     Label/status state machine
                                      : established, LrdRru
     Last local dataplane status rcvd: No fault
     Last BFD dataplane
                            status rcvd: Not sent
     Last BFD peer monitor status rcvd: No fault
     Last local AC circuit status rcvd: DOWN(standby)
     Last local AC circuit status sent: No fault
     Last local PW i/f circ status rcvd: No fault
     Last local LDP TLV
                            status sent: DOWN(standby)
                          status rcvd: No fault
     Last remote LDP TLV
     Last remote LDP ADJ status rcvd: No fault
   MPLS VC labels: local 125, remote 1616
    Group ID: local 336, remote 0
```

```
MTU: local 9198, remote 9198
Remote interface description:
MAC Withdraw: sent:1, received:0
Sequencing: receive disabled, send disabled
Control Word: On (configured: autosense)
SSO Descriptor: 10.11.11.11/1105, local label: 125
Dataplane:
SSM segment/switch IDs: 96143/450671 (used), PWID: 110
VC statistics:
transit packet totals: receive 0, send 0
transit byte totals: receive 0, send 0
transit packet drops: receive 0, seq error 0, send 0
```

The following is a sample output of the **show l2vpn atom vc vcid** *vc-id* **detail** command:

```
Device# show 12vpn atom vc vcid 1105 detail
pseudowire100110 is up, VC status is standby PW type: Ethernet
  Create time: 00:04:17, last status change time: 00:02:22
   Last label FSM state change time: 00:02:24
  Destination address: 10.11.11.11 VC ID: 1105
   Output interface: Pol0, imposed label stack {1616}
   Preferred path: not configured
    Default path: active
   Next hop: 10.0.0.1
  Member of xconnect service TenGigabitEthernet1/0/36.1105-1105, group right
   Associated member TenGigabitEthernet1/0/36.1105 is up, status is up
   Interworking type is Ethernet
    Service id: 0x1f000037
  Signaling protocol: LDP, peer 10.11.11.11:0 up
   Targeted Hello: 10.0.0.10(LDP Id) -> 10.11.11.11, LDP is UP
   Graceful restart: configured and enabled
   Non stop routing: not configured and not enabled
   PWid FEC (128), VC ID: 1105
    Status TLV support (local/remote)
                                            : enabled/supported
                                           : enabled
     LDP route watch
     Label/status state machine
                                           : established, LrdRru
     Local dataplane status received
                                           : No fault
                                           : Not sent
     BFD dataplane status received
     BFD peer monitor status received
                                           : No fault : DOWN(standby)
     Status received from access circuit
                                           : No fault
     Status sent to access circuit
     Status received from pseudowire i/f : No fault
     Status sent to network peer
                                           : DOWN(standby)
                                         : No fault
     Status received from network peer
     Adjacency status of remote peer
                                            : No fault
  Sequencing: receive disabled, send disabled
  Bindings
   Parameter Local
                                               Remote
   Label
             125
                                               1616
   Group ID
                336
                                               Ω
   Interface
   MTU
                9198
                                              9198
   Control word on (configured: autosense)
                                              on
   PW type Ethernet
                                               Ethernet
   VCCV CV type 0x02
                                              0x02
                 LSPV [2]
                                               LSPV [2]
   VCCV CC type 0x06
                                              0 \times 0.2
                 RA [2], TTL [3]
                                              RA [2]
   Status TLV enabled
                                              supported
  SSO Descriptor: 10.11.11.11/1105, local label: 125
  Dataplane:
   SSM segment/switch IDs: 96143/450671 (used), PWID: 110
  Rx Counters
```

```
0 input transit packets, 0 bytes
0 drops, 0 seq err
0 MAC withdraw
Tx Counters
0 output transit packets, 0 bytes
0 drops
1 MAC withdraw
```

The following is a sample output of the **show mpls l2transport vc** *vc-id* command:

#### Device# show mpls 12transport vc 101

Local intf	Local circuit	Dest address	VC ID	Status
TenGigabitEthernet1/0/36.1105	Eth VLAN 1105	10.0.0.1	1105	UP
TenGigabitEthernet1/0/36.1105	Eth VLAN 1105	10.11.11.11	1105	STANDBY

# Feature History for Ethernet-over-MPLS and Pseudowire Redundancy

This table provides release and related information for the features explained in this module.

These features are available in all the releases subsequent to the one they were introduced in, unless noted otherwise.

Release	Feature	Feature Information
Cisco IOS XE Everest 16.6.1	Ethernet-over-MPLS and Pseudowire Redundancy	Ethernet-over-MPLS is one of the Any Transport over MPLS (AToM) transport types. EoMPLS works by encapsulating Ethernet protocol data units (PDUs) in MPLS packets and forwarding them across the MPLS network. Each PDU is transported as a single packet.  The L2VPN pseudowire redundancy feature enables you to configure your network to detect a failure in the network and reroute the Layer 2 service to another endpoint that can continue to provide service.  Port mode support is introduced.
Cisco IOS XE Gibraltar 16.12.1	VLAN support for Ethernet-over-MPLS	EoMPLS VLAN mode can be configured using either the Xconnect mode or protocol-CLI method.

Release	Feature	Feature Information
Cisco IOS XE Amsterdam 17.1.1	Macsec over EoMPLS	In VLAN mode EoMPLS, only those packets configured with macsec dot1q-in-clear 1 command on the CE device will be processed by the PE device.

Use the Cisco Feature Navigator to find information about platform and software image support. To access Cisco Feature Navigator, go to https://cfnng.cisco.com/

http://www.cisco.com/go/cfn.



# **Configuring IPv6 Provider Edge over MPLS (6PE)**

- Prerequisites for 6PE, on page 73
- Restrictions for 6PE, on page 73
- Information About 6PE, on page 73
- Configuring 6PE, on page 74
- Configuration Examples for 6PE, on page 77
- Feature History for IPv6 Provider Edge over MPLS (6PE), on page 79

# **Prerequisites for 6PE**

Redistribute PE-CE IGP IPv6 routes into core BGP and vice-versa

### **Restrictions for 6PE**

eBGP as CE-PE is not supported. Static Routes, OSPFv3, ISIS, RIPv2 are supported as CE-PE.

# **Information About 6PE**


6PE is a technique that provides global IPv6 reachability over IPv4 MPLS. It allows one shared routing table for all other devices. 6PE allows IPv6 domains to communicate with one another over the IPv4 without an explicit tunnel setup, requiring only one IPv4 address per IPv6 domain.

While implementing 6PE, the provider edge routers are upgraded to support 6PE, while the rest of the core network is not touched (IPv6 unaware). This implementation requires no reconfiguration of core routers because forwarding is based on labels rather than on the IP header itself. This provides a cost-effective strategy for deploying IPv6. The IPv6 reachability information is exchanged by PE routers using multiprotocol Border Gateway Protocol (mp-iBGP) extensions.

6PE relies on mp-iBGP extensions in the IPv4 network configuration on the PE router to exchange IPv6 reachability information in addition to an MPLS label for each IPv6 address prefix to be advertised. PE routers are configured as dual stacks, running both IPv4 and IPv6, and use the IPv4 mapped IPv6 address for IPv6 prefix reachability exchange. The next hop advertised by the PE router for 6PE and 6VPE prefixes is still the IPv4 address that is used for IPv4 L3 VPN routes. A value of ::FFFF: is prepended to the IPv4 next hop, which is an IPv4-mapped IPv6 address.

The following figure illustrates the 6PE topology.

Figure 4: 6PE Topology

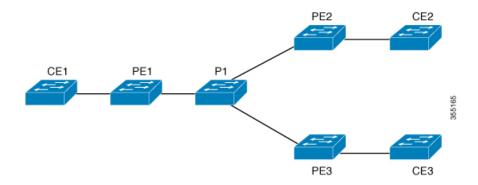

# **Configuring 6PE**

Ensure that you configure 6PE on PE routers participating in both the IPv4 cloud and IPv6 clouds.

BGP running on a PE router should establish (IPv4) neighborhood with BGP running on other PEs. Subsequently, it should advertise the IPv6 prefixes learnt from the IPv6 table to the neighbors. The IPv6 prefixes advertised by BGP would automatically have IPv4-encoded-IPv6 addresses as the nexthop-address in the advertisement.

To configure 6PE, complete the following steps:

### **Procedure**


	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	ipv6 unicast-routing	Enables the forwarding of IPv6 unicast
	Example:	datagrams.
	Device(config)# ipv6 unicast-routing	

	Command or Action	Purpose
Step 4	router bgp as-number  Example:	Enters the number that identifies the autonomous system (AS) in which the router resides.
	Device(config)# router bgp 65001	as-number—Autonomous system number. Range for 2-byte numbers is 1 to 65535. Range for 4-byte numbers is 1.0 to 65535.65535.
Step 5	bgp router-id interface interface-id  Example:	Configures a fixed router ID for the local Border Gateway Protocol (BGP) routing process.
	<pre>Device(config-router)# bgp router-id interface Loopback1</pre>	
Step 6	bgp log-neighbor-changes  Example:	Enables logging of BGP neighbor resets.
	Device(config-router)# bgp log-neighbor-changes	
Step 7	bgp graceful-restart  Example:	Enables the Border Gateway Protocol (BGP) graceful restart capability globally for all BGP neighbors.
	Device(config-router)# bgp graceful-restart	
Step 8	neighbor { ip-address   ipv6-address   peer-group-name } remote-as as-number	Adds an entry to the BGP or multiprotocol BGP neighbor table.
	Example:  Device(config-router)# neighbor 33.33.33.33 remote-as 65001	• <i>ip-address</i> —IP address of a peer router with which routing information will be exchanged.
		• <i>ipv6-address</i> —IPv6 address of a peer router with which routing information will be exchanged.
		• peer-group-name—Name of the BGP peer group.
		• remote-as—Specifies a remote autonomous system.
		• <i>as-number</i> —Number of an autonomous system to which the neighbor belongs, ranging from 1 to 65535.
Step 9	neighbor { ip-address   ipv6-address   peer-group-name } update-source interface-type interface-number	Configures BGP sessions to use any operational interface for TCP connections.
	Example:	

	Command or Action	Purpose
	Device(config-router)# neighbor 33.33.33.33 update-source Loopback1	
Step 10	address-family ipv6	Enters address family configuration mode for
	Example:	configuring routing sessions, such as BGP, that use standard IPv6 address prefixes.
	<pre>Device(config-router)# address-family ipv6</pre>	
Step 11	redistribute protocol as-number match { internal   external 1   external 2	Redistributes routes from one routing domain into another routing domain.
	Example:	
	Device(config-router-af)# redistribute ospf 11 match internal external 1	
Step 12	neighbor { ip-address   ipv6-address   peer-group-name } activate	Enables the exchange of information with a BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 33.33.33.33 activate	
Step 13	neighbor { ip-address   ipv6-address   peer-group-name } send-label	Sends MPLS labels with BGP routes to a neighboring BGP router.
	Example:	
	Device(config-router-af)# neighbor 33.33.33.33 send-label	
Step 14	exit-address-family	Exits BGP address-family submode.
	Example:	
	<pre>Device(config-router-af) # exit-address-family</pre>	
Step 15	end	Returns to privileged EXEC mode.
	Example:	
	Device(config)# end	

# **Configuration Examples for 6PE**

Figure 5: 6PE Topology

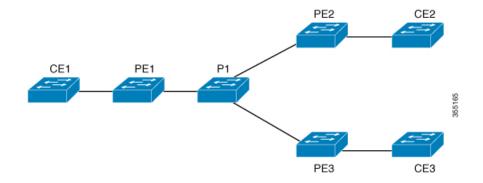

### **PE Configuration**

```
router ospfv3 11
ip routing
ipv6 unicast-routing
address-family ipv6 unicast
redistribute bgp 65001
exit-address-family
router bgp 65001
bgp router-id interface Loopback1
bgp log-neighbor-changes
bgp graceful-restart
neighbor 33.33.33.33 remote-as 65001
neighbor 33.33.33.33 update-source Loopback1
address-family ipv4
neighbor 33.33.33.33 activate
address-family ipv6
redistribute ospf 11 match internal external 1 external 2 include-connected
neighbor 33.33.33.33 activate
neighbor 33.33.33.33 send-label
neighbor 33.33.33.33 send-community extended
```

### The following is a sample output of **show bgp ipv6 unicast summary**:

```
BGP router identifier 1.1.1.1, local AS number 100
BGP table version is 34, main routing table version 34
4 network entries using 1088 bytes of memory
4 path entries using 608 bytes of memory
4/4 BGP path/bestpath attribute entries using 1120 bytes of memory
0 BGP route-map cache entries using 0 bytes of memory
0 BGP filter-list cache entries using 0 bytes of memory
BGP using 2816 total bytes of memory
BGP activity 6/2 prefixes, 16/12 paths, scan interval 60 secs
```

```
Neighbor
                          AS MsqRcvd MsqSent
                                                 TblVer InQ OutQ Up/Down
  State/PfxRcd
                          100
                                   21
                                           21
                                                    34
                                                          0
2.2.2.2
                4
                                                               0 00:04:57
sh ipv route
IPv6 Routing Table - default - 7 entries
Codes: C - Connected, L - Local, S - Static, U - Per-user Static route
       B - BGP, R - RIP, I1 - ISIS L1, I2 - ISIS L2
       IA - ISIS interarea, IS - ISIS summary, D - EIGRP, EX - EIGRP
external
      ND - ND Default, NDp - ND Prefix, DCE - Destination, NDr - Redirect
       RL - RPL, O - OSPF Intra, OI - OSPF Inter, OE1 - OSPF ext 1
       OE2 - OSPF ext 2, ON1 - OSPF NSSA ext 1, ON2 - OSPF NSSA ext 2
       la - LISP alt, lr - LISP site-registrations, ld - LISP dyn-eid lA
 - LISP away
   10:1:1:2::/64 [0/0]
    via Vlan4, directly connected
   10:1:1:2::1/128 [0/0]
    via Vlan4, receive
LC 11:11:11:11:11/128 [0/0]
    via Loopback1, receive
    30:1:1:2::/64 [200/0]
     via 33.33.33.33%default, indirectly connected
В
    40:1:1:2::/64 [200/0]
     via 44.44.44.44% default, indirectly connected
The following is a sample output of show bgp ipv6 unicast command:
BGP table version is 112, local router ID is 11.11.11.11
Status codes: s suppressed, d damped, h history, * valid, > best, i -
internal.
              r RIB-failure, S Stale, m multipath, b backup-path, f
RT-Filter.
              x best-external, a additional-path, c RIB-compressed,
              t secondary path,
Origin codes: i - IGP, e - EGP, ? - incomplete
RPKI validation codes: V valid, I invalid, N Not found
     Network
                      Next Hop
                                          Metric LocPrf Weight Path
 *>
     10:1:1:2::/64
                                                           32768 ?
                                                 \cap
                      ::
 *>i 30:1:1:2::/64
                       ::FFFF:33.33.33.33
                                                               0 ?
                                                 \cap
                                                      100
 *>i 40:1:1:2::/64
                      ::FFFF:44.44.44.44
                                                 0
                                                      100
                                                               0 ?
 *>i 173:1:1:2::/64 ::FFFF:33.33.33.33
                                                 2
                                                               0 ?
                                                      100
```

The following is a sample output of **show ipv6 cef 40:1:1:2::0/64 detail** command:

```
40:1:1:2::/64, epoch 6, flags [rib defined all labels] recursive via 44.44.44 label 67 nexthop 1.20.4.2 Port-channel103 label 99-(local:147)
```

# Feature History for IPv6 Provider Edge over MPLS (6PE)

This table provides release and related information for features explained in this module.

These features are available on all releases subsequent to the one they were introduced in, unless noted otherwise.

Release	Feature	Feature Information
Cisco IOS XE Everest 16.6.1	IPv6 Provider Edge over MPLS (6PE)	IPv6 Provider Edge over MPLS (6PE) provides global IPv6 reachability over IPv4 MPLS and allows one shared routing table for all other devices.

Use Cisco Feature Navigator to find information about platform and software image support. To access Cisco Feature Navigator, go to http://www.cisco.com/go/cfn.

Feature History for IPv6 Provider Edge over MPLS (6PE)



Configuring IPv6 VPN Provider Edge over MPLS (6VPE)

Configuring 6VPE, on page 81

# **Configuring 6VPE**

This section provides information about Configuring 6VPE on the switch.

### **Restrictions for 6VPE**

- Inter-AS and carrier supporting carrier (CSC) is not supported.
- VRF Route-Leaking is not supported.
- eBGP as CE-PE is not supported.
- EIGRP, OSPFv3, RIP, ISIS, Static Routes are supported as CE-PE.
- MPLS Label Allocation modes supported are Per-VRF and Per-Prefix. Per-Prefix is the default mode.
- IP fragmentation is not supported in the Per-Prefix mode of Layer 3 VPN.
- DHCPv6 is not supported on a 6VPE topology with per-port trust enabled.

### **Information About 6VPE**

6VPE is a mechanism to use the IPv4 backbone to provide VPN IPv6 services. It takes advantage of operational IPv4 MPLS backbones, eliminating the need for dual-stacking within the MPLS core. This translates to savings in operational costs and addresses the security limitations of the 6PE approach. 6VPE is more like a regular IPv4 MPLS-VPN provider edge, with an addition of IPv6 support within VRF. It provides logically separate routing table entries for VPN member devices.

### **Components of MPLS-based 6VPE Network**


• VPN route target communities – A list of all other members of a VPN community.

- Multiprotocol BGP (MP-BGP) peering of VPN community PE routers Propagates VRF reachability information to all members of a VPN community.
- MPLS forwarding Transports all traffic between all VPN community members across a VPN service-provider network.

In the MPLS-VPN model a VPN is defined as a collection of sites sharing a common routing table. A customer site is connected to the service provider network by one or more interfaces, where the service provider associates each interface with a VPN routing table–known as the VRF table.

## **Configuration Examples for 6VPE**

Figure 6: 6VPE Topology

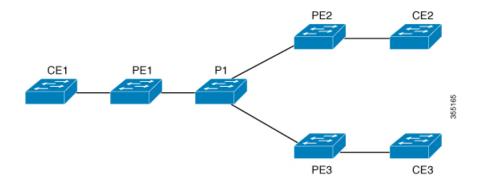

PE Configuration			
I			

C

```
PE Configuration
vrf definition 6VPE-1
rd 65001:11
route-target export 1:1
route-target import 1:1
address-family ipv4
exit-address-family
address-family ipv6
exit-address-family
interface TenGigabitEthernet1/0/38
no switchport
vrf forwarding 6VPE-1
ip address 10.3.1.1 255.255.255.0
ip ospf 2 area 0
ipv6 address 10:111:111:111:1/64
ipv6 enable
ospfv3 1 ipv6 area 0
router ospf 2 vrf 6VPE-1
router-id 1.1.11.11
redistribute bgp 65001 subnets
router ospfv3 1
nsr
graceful-restart
address-family ipv6 unicast vrf 6VPE-1
redistribute bgp 65001
exit-address-family
router bgp 65001
bgp router-id interface Loopback1
bgp log-neighbor-changes
bgp graceful-restart
neighbor 33.33.33 remote-as 65001
neighbor 33.33.33.33 update-source Loopback1
address-family ipv4 vrf 6VPE-1
 redistribute ospf 2 match internal external 1 external 2
exit-address-family
address-family ipv6 vrf 6VPE-1
 redistribute ospf 1 match internal external 1 external 2 include-connected
exit-address-family
address-family vpnv4
neighbor 33.33.33 activate
neighbor 33.33.33.33 send-community both
neighbor 44.44.44 activate
neighbor 44.44.44 send-community both
neighbor 55.55.55.55 activate
neighbor 55.55.55.55 send-community both
exit-address-family
address-family vpnv6
neighbor 33.33.33 activate
neighbor 33.33.33.33 send-community both
neighbor 44.44.44 activate
neighbor 44.44.44 send-community both
```

neighbor 55.55.55.55 activate

```
PE Configuration

neighbor 55.55.55 send-community both

exit-address-family
!
```

The following is a sample output of **show mpls forwarding-table vrf**:

```
Local Outgoing Prefix Bytes Label Outgoing Next Hop
Label Label or Tunnel Id Switched interface
29 No Label A:A:A:565::/64[V] \ 0 aggregate/VRF601
32 No Label A:B5:1:5::/64[V] 2474160 V1601 FE80::200:7BFF:FE62:2636
33 No Label A:B5:1:4::/64[V] 2477978 V1601 FE80::200:7BFF:FE62:2636
35 No Label A:B5:1:3::/64[V] 2477442 V1601 FE80::200:7BFF:FE62:2636
36 No Label A:B5:1:2::/64[V] 2476906 V1601 FE80::200:7BFF:FE62:2636
37 No Label A:B5:1:1::/64[V] 2476370 V1601 FE80::200:7BFF:FE62:2636
```

The following is a sample output of **show vrf counter** command:

```
Maximum number of VRFs supported: 256
Maximum number of IPv4 VRFs supported: 256
Maximum number of IPv6 VRFs supported: 256
Maximum number of platform iVRFs supported: 10
Current number of VRFs: 127
Current number of IPv4 VRFs: 6
Current number of IPv6 VRFs: 127
Current number of VRFs in delete state: 0
Current number of platform iVRFs: 1
```

The following is a sample output of **show ipv6 route vrf** command:

```
IPv6 Routing Table - VRF1 - 8 entries Codes: C - Connected, L - Local, S
 - Static, U - Per-user Static route B - BGP, R - RIP, I1 - ISIS L1, I2
- ISIS L2 IA - ISIS interarea, IS - ISIS summary, D - EIGRP, EX - EIGRP
external ND - ND Default, NDp - ND Prefix, DCE - Destination, NDr -
Redirect RL - RPL, O - OSPF Intra, OI - OSPF Inter, OE1 - OSPF ext 1 OE2
 - OSPF ext 2, ON1 - OSPF NSSA ext 1, ON2 - OSPF NSSA ext 2 la - LISP
alt, lr - LISP site-registrations, ld - LISP dyn-eid lA - LISP away
B 1:1:1:1:1/128 [200/1] via 1.1.1.11%default, indirectly connected
O 2:2:2:2::2/128 [110/1] via FE80::A2E0:AFFF:FE30:3E40,
TenGigabitEthernet1/0/7
B 3:3:3:3:3/128 [200/1] via 3.3.3.33%default, indirectly connected
B 10:1:1:1::/64 [200/0] via 1.1.1.11%default, indirectly connected
C 10:2:2:2::/64 [0/0] via TenGigabitEthernet1/0/7, directly connected
L 10:2:2:2::1/128 [0/0] via TenGigabitEthernet1/0/7, receive
B 10:3:3:::/64 [200/0] via 3.3.3.3%default, indirectly connected
L FF00::/8 [0/0] via Null0, receive
```

## Feature History for IPv6 VPN Provider Edge over MPLS (6VPE)

This table provides release and related information for features explained in this module.

These features are available on all releases subsequent to the one they were introduced in, unless noted otherwise.

Release	Feature	Feature Information
Cisco IOS XE Everest 16.6.1	IPv6 VPN Provider Edge over MPLS (6VPE)	IPv6 VPN Provider Edge over MPLS (6VPE) is a mechanism to use the IPv4 backbone to provide VPN IPv6 services. It takes advantage of operational IPv4 MPLS backbones, eliminating the need for dual-stacking within the MPLS core.

Use Cisco Feature Navigator to find information about platform and software image support. To access Cisco Feature Navigator, go to http://www.cisco.com/go/cfn.



# **Configuring MPLS VPN InterAS Options**

- Information About MPLS VPN InterAS Options, on page 87
- How to Configure MPLS VPN InterAS Options, on page 94
- Verifying MPLS VPN InterAS Options Configuration, on page 108
- Configuration Examples for MPLS VPN InterAS Options, on page 110
- Additional References for MPLS VPN InterAS Options, on page 126
- Feature History for MPLS VPN InterAS Options, on page 126

# **Information About MPLS VPN InterAS Options**

The MPLS VPN InterAS Options provide various ways of interconnecting VPNs between different MPLS VPN service providers. This allows sites of a customer to exist on several carrier networks (autonomous systems) and have seamless VPN connectivity between these sites.

### **ASes and ASBRs**

An autonomous system (AS) is a single network or group of networks that is controlled by a common system administration group and using a single, clearly defined protocol. In many cases, VPNs extend to different ASes in different geographical areas. Some VPNs must extend across multiple service providers; these VPNs are called overlapping VPNs. The connection between ASes must be seamless to the customer, regardless of the complexity or location of the VPNs.

An AS boundary router (ASBR) is a device in an AS that is configured by using more than one routing protocol, and exchanges routing information with other ASBRs by using an exterior routing protocol (for example, eBGP), or use static routes, or both.

Separate ASes from different service providers communicate by exchanging information in the form of VPN IP addresses and they use the following protocols to share routing information:

- Within an AS, routing information is shared using iBGP.
   iBGP distributes network layer information for IP prefixes within each VPN and each AS.
- Between ASes, routing information is shared using eBGP.
   eBGP allows service providers to set up an interdomain routing system that guarantees loop-free exchange of routing information between separate ASes. The primary function of eBGP is to exchange network reachability information between ASes, including information about the list of AS routes. The ASes use

eBGP border edge routers to distribute the routes, which includes label-switching information. Each border edge router rewrites the next-hop and MPLS labels.

MPLS VPN InterAS Options configuration is supported and can include an inter provider VPN, which is MPLS VPNs that include two or more ASes, connected by separate border edge routers. The ASes exchange routes using eBGP, and no iBGP or routing information is exchanged between the ASes.

### **MPLS VPN InterAS Options**


The following options defined in RFC4364 provide MPLS VPN connectivity between different ASes:

- InterAS Option B This option provides VPNv4 route distribution between ASBRs.
- InterAS Option AB This option combines the best functionality of an interAS option A and interAS option B network to allow an MPLS VPN service provider to interconnect different autonomous systems to provide VPN services.

### **InterAS Option B**

In an interAS option B network, ASBR ports are connected by one or more interfaces that are enabled to receive MPLS traffic. With this option, the ASBRs peer with each other using eBGP session. The ASBR also functions as a PE router and peers with every PE router in their AS. The ASBR does not hold any VRFs but holds all or a subset of VPNv4 routes from PE router that need to be passed to the other AS. VPNv4 routes are kept unique in ASBR using route-distinguisher and are filtered using route targets. The ASBRs exchange VPNv4 routes and VPN labels using eBGP.

Figure 7: Topology for InterAS Option B

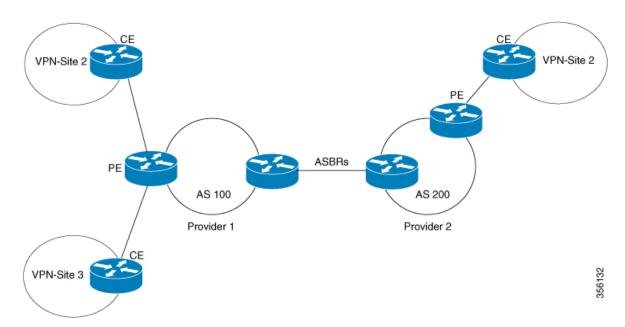

Two methods are supported to distribute the next hop for VPNv4 routes between ASBRs. There is no requirement for LDP or any IGP to be enabled on the link connecting the two ASBRs. The MP-eBGP session between directly connected interfaces on the ASBRs enables the interfaces to forward labeled packets. To ensure this MPLS forwarding for directly connected BGP peers, you must configure mpls bgp forwarding

command on the interface connecting to ASBR. This command is implemented in the IOS for directly connected interfaces. Upto 200 BGP neighbors can be configured.

- **Next-hop-self Method:** Changing next-hop to that of the local ASBR for all VPNv4 routes learnt from the other ASBR.
- Redistribute Connected Subnets Method: Redistributing the next hop address of the remote ASBR into the local IGP using redistribute connected subnets command, i.e., the next hop is not changed when the VPNv4 routes are redistributed into the local AS.




Note

In case of multiple equal paths - ECMP towards remote AS, you have to configure MPLS static label bindings towards remote Loopback on ASBR. Otherwise, you may experience packet loss.

The label switch path forwarding sections described below has AS200 configured with the Next-hop-self method and the AS300 is configured with Redistribute-subnet method.


#### **Next-Hop Self Method**

The following figure shows the label forwarding path for next-hop-self method. The labels get pushed, swapped and popped on the stack as packet makes its way from PE-200 in AS 200 to PE-300 in AS 300. In step 5, ASBR-A300 receives labeled frame, replaces label 164 with label 161 pushes IGP label 162 onto the label stack.

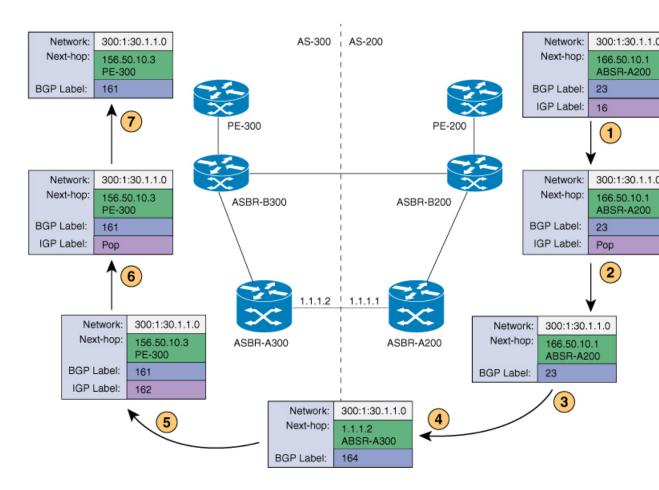

### **Redistribute Connected Subnet Method**

The following figure shows the label forwarding path for Redistribute connected subnets method. The labels get pushed, swapped and popped on the stack as packet travels from PE- 300 in AS 300 to PE-200 in AS 200. In step 5, ASBR-A200 receives frame with BGP label 20, swaps it with label 29 and pushes label 17.

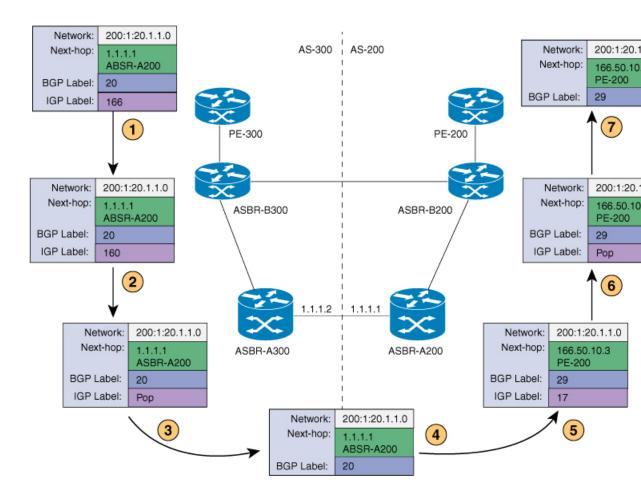

### InterAS Option AB


MPLS VPN service providers need to interconnect different autonomous systems to provide service for multiple VPN customers. The MPLS VPN InterAS Option AB feature allows the different autonomous systems to interconnect by using a single MP-BGP session in the global routing table to carry control plane traffic. This MP-BGP session signals VPN prefixes between two ASBRs for each VRF instance. This traffic can either be IP or MPLS.

MPLS BGP forwarding or LDP does not have to be configured between the two ASBRs as the VPN traffic sent is IP traffic over a VRF specific interface.

The interAS option AB feature provides the following benefits for service providers:

- IP QoS functions between ASBR peers are maintained for customer SLAs.
- Dataplane traffic is isolated on a per-VRF basis for security purposes.
- A dedicated QoS policy can be applied on each VRF by attaching the policy on an SVI.

### **Route Distribution and Packet Forwarding**

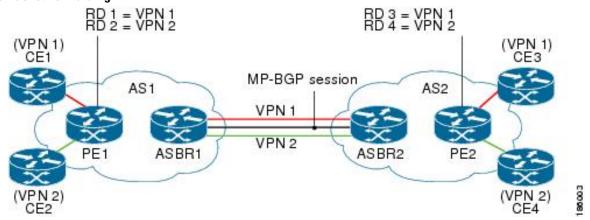

The following attributes describe the topology of the sample interAS Option AB network shown in the figure above:

- CE1 and CE3 belong to VPN 1.
- CE2 and CE 4 belong to VPN 2.
- PE1 uses route distinguisher 1 (RD 1) for VPN 1 (VRF 1) and RD 2 for VPN 2 (VRF 2).
- PE2 uses RD 3 for VPN 1 (VRF 1) and RD 4 for VPN 2 (VRF 2).
- ASBR1 has VRF 1 provisioned with RD 5 and VRF 2 provisioned with RD 6.
- ASBR2 has VRF 1 provisioned with RD 7 and VRF 2 provisioned and RD 8.
- ASBR1 and ASBR2 have three links between them:
  - VRF 1
  - VRF 2
  - MP-BGP session

#### Route Distribution for VPN 1

A route distinguisher (RD) is an identifier attached to a route that identifies which VPN belongs to each route. Each routing instance must have a unique RD autonomous system associated with it. The RD is used to place a boundary around a VPN so that the same IP address prefixes can be used in different VPNs without having these IP address prefixes overlap. An RD statement is required if the instance type is a VRF.

The following process describes the route distribution process for VPN 1 in the figure above. Prefix "N" is used in this process to indicate the IP address of a VPN.

#### ASBR 1

- CE1 advertises the prefix N to PE1.
- PE1 advertises a VPN prefix RD 1:N to ASBR1 through MP-iBGP.
- ASBR1 imports the prefix into VPN 1 and creates a prefix RD 5:N.

- ASBR1 advertises the imported prefix RD 5:N to ASBR2. ASBR1 sets itself as the next hop for prefix RD 5:N and allocates a local label that is signaled with this prefix.
- ASBR1 advertises the route with the export RT configured on the VRF rather than the originally received RTs. By default, ASBR1 does not advertise the source prefix RD 1:N to ASBR2. This advertisement is suppressed because the prefix is being imported into an Option AB VRF.

#### ASBR 2

- ASBR2 receives the prefix RD 5:N and imports it into VPN 1 as RD 7:N.
- ASBR2 advertises the route with the export RT configured on the VRF rather than the originally received RTs.
- While importing the prefix, ASBR2 sets the next hop of RD 7:N to the ASBR1 interface IP address in VRF 1. The next hop table ID is also set to VRF 1. When installing the MPLS forwarding entry for RD 7:N, by default ASBR2 does not install the outgoing label in the forwarding process. This enables the traffic between the ASBRs to be IP.
- ASBR2 advertises the imported prefix RD 7:N to PE2. It sets itself as the next hop for this prefix and
  also allocates a local label that is signalled with the prefix. By default, ASBR2 does not advertise the
  source prefix RD 5:N to PE2. This advertisement is suppressed because the prefix is being imported into
  an Option AB VRF.
- PE2 imports the RD 7:N into VRF 1 as RD 3:N.

#### Packet Forwarding for VPN 1

The following packet forwarding process works the same as it does in an Option A scenario. The ASBR acts like the PE by terminating the VPN and then forwards its traffic as standard IP packets with no VPN label to the next PE, which in turn repeats the VPN process. Each PE device, therefore, treats the adjacent PE device as a CE device, and the standard Layer 3 MPLS VPN mechanisms are used for route redistribution with each autonomous system; that is, the PEs use external BGP (eBGP) to distribute unlabeled IPv4 addresses to each other.

- CE3 sends a packet destined for N to PE2.
- PE2 encapsulates the packet with the VPN label allocated by ASBR2 and the Interior Gateway Protocol (IGP) label needed to tunnel the packet to ASBR2.
- The packet arrives on ASBR2 with the VPN label. ASBR2 removes the VPN label and sends the packet as IP to ASBR1 on the VRF 1 interface.
- The IP packet arrives at ASBR1 on the VRF 1 interface. ASBR1 then encapsulates the packet with the VPN label allocated by PE1 and the IGP label needed to tunnel the packet to PE1.
- The packet arrives on PE1 with the VPN label. PE1 disposes the VPN label and forwards the IP packet to CE1.

#### Route Distribution for VPN 2

The following information describes the route distribution process for VPN 2 in the figure above:

#### ASBR 1

• CE2 advertises prefix N to PE1, where N is the VPN IP address.

- PE1 advertises a VPN prefix RD 2:N to ASBR1 through MP-iBGP.
- ASBR1 imports the prefix into VPN 2 and creates a prefix RD 6:N.
- ASBR1 advertises the imported prefix RD 6:N to ASBR2. It sets itself as the next hop for this prefix and
  also allocates a local label that is signalled with the prefix. By default, ASBR1 does not advertise the
  source prefix RD 2:N to ASBR2. This advertisement is suppressed as the prefix is being imported into
  an Option AB VRF.

#### ASBR 2

- ASBR2 receives the prefix RD 6:N and imports it into VPN 2 as RD 8:N.
- While importing the prefix, ASBR2 sets the next hop of RD 8:N to ASBR1s interface address in VRF 2. The next hop table ID is also set to that of VRF 2. While installing the MPLS forwarding entry for RD 8:N, by default ASBR2 does not install the outgoing label in the forwarding process. This enables traffic between the ASBRs to be IP.
- ASBR2 advertises the imported prefix RD 8:N to PE2. It sets itself as the next hop for this prefix and also allocates a local label that is signalled with the prefix. By default, ASBR2 does not advertise the source prefix RD 6:N to PE2. This advertisement is suppressed because the prefix is being imported into an Option AB VRF.
- PE2 imports the RD 8:N into VRF 2 as RD 4:N.

# **How to Configure MPLS VPN InterAS Options**

The following section provides information about how to configure MPLS VPN InterAS Options.

### **Configuring MPLS VPN InterAS Option B**

### **Configuring InterAS Option B using the Next-Hop-Self Method**

To configure interAS Option B on ASBRs using the next-hop-self method, complete the following steps:

#### **Procedure**

Command or Action	Purpose
enable	Enables privileged EXEC mode.
Example:	• Enter your password if prompted.
Device> enable	
configure terminal	Enters global configuration mode.
Example:	
Device# configure terminal	
	enable Example:  Device> enable  configure terminal Example:

	Command or Action	Purpose
Step 3	router ospf process-id	Configures an OSPF routing process and
	Example:	assign a process number.
	Device(config)# router ospf 1	
Step 4	router-id ip-address	Specifies a fixed router ID.
	Example:	
	Device(config)# router-id 4.1.1.1	
Step 5	nsr	Configures OSPF non-stop routing (NSR).
	Example:	
	Device(config-router)# <b>nsr</b>	
Step 6	nsf	Confgures OSPF non-stop forwarding (NSF).
	Example:	
	Device(config-router)# <b>nsf</b>	
Step 7	redistribute bgp autonomous-system-number	
	Example:	system into and OSPF routing process.
	Device(config-router)# redistribute bgp 200	
Step 8	passive-interface interface-type	Disables Open Shortest Path First (OSPF)
	interface-number	routing updates on an interface.
	Example:	
	Device (config-router) # passive-interface GigabitEthernet 1/0/10	
	Device (config-router) # passive-interface Tunnel0	
Step 9	network ip-address wildcard-mask aread	Defines an interface on which OSPF runs and
F ~	area-id	defines the area ID for that interface.
	Example:	
	Device(config-router)# network 4.1.1.0 0.0.0.0.255 area 0	
Step 10	exit	Exits router configuration mode.
	Example:	
	Device(config-router)# exit	
Step 11	router bgp autonomous-system-number	Configures a BGP routing process.
	Example:	

	Command or Action	Purpose
	Device(config)# router bgp 200	
Step 12	bgp router-id ip-address	Configures a fixed router ID for the BGP
	Example:	routing process.
	Device(config-router)# bgp router-id 4.1.1.1	
Step 13	bgp log-neighbor changes	Enables logging of BGP neighbor resets.
	Example:	
	Device(config-router) # bgp log-neighbor changes	
Step 14	no bgp default ipv4-unicast	Disables advertisement of routing information
	Example:	for address family IPv4.
	<pre>Device(config-router)# no bgp default ipv4-unicast</pre>	
Step 15	no bgp default route-target filter	Disables automatic BGP route-target
	Example:	community filtering.
	<pre>Device(config-router)# no bgp default route-target filter</pre>	
Step 16	neighbor ip-address remote-as as-number	Configures an entry to the BGP neighbor table.
	Example:	
	Device(config-router) # neighbor 4.1.1.3 remote-as 200	
Step 17	neighbor ip-address update-source	Allows Cisco IOS software to use a specific
	interface-type interface-number <b>Example:</b>	operational interface for TCP connections by the BGP sessions.
	Device(config-router) # neighbor 4.1.1.3 update-source Loopback0	
Step 18	neighbor ip-address remote-as as-number	Configures an entry to the BGP neighbor table.
	Example:	
	Device(config-router) # neighbor 4.1.1.3 remote-as 300	

	Command or Action	Purpose	
Step 19	address-family ipv4  Example:	Enters address family configuration mode for configuring BGP routing sessions that use standard IP Version 4 address prefixes.	
	Device(config-router)# address-family ipv4		
Step 20	neighbor ip-address activate	Enables the exchange of information with a	
	Example:	BGP neighbor.	
	Device(config-router-af)# neighbor 10.32.1.2 activate		
Step 21	neighbor ip-address send-label	Sends MPLS labels with BGP routes to a	
	Example:	neighboring BGP router.	
	Device(config-router-af) # neighbor 10.32.1.2 send-label		
Step 22	exit address-family	Exits BGP address-family submode.	
	Example:		
	<pre>Device(config-router-af)# exit address-family</pre>		
Step 23	address-family vpnv4	Configures the device in address family	
	Example:	configuration mode for configuring routing sessions, such as BGP, that use standard	
	Device(config-router)# address-family vpnv4	VPNv4 address prefixes.	
Step 24	neighbor ip-address activate	Enables the exchange of information with a	
	Example:	BGP neighbor.	
	Device(config-router-af)# neighbor 4.1.1.3 activate		
Step 25	neighbor ip-address send-community extended	Specifies that a communities attribute should be sent to a BGP neighbor.	
	Example:		
	Device(config-router-af)# neighbor 4.1.1.3 send-community extended		
Step 26	neighbor ip-address next-hop-self	Configure a router as the next hop for a	
	Example:	BGP-speaking neighbor. This is the command that implements the next-hop-self method.	
	<pre>Device(config-router-af)# neighbor 4.1.1.3 next-hop-self</pre>		

	Command or Action	Purpose
Step 27	neighbor ip-address activate  Example:	Enables the exchange of information with a BGP neighbor.
	Device(config-router-af)# neighbor 10.30.1.2 activate	
Step 28	neighbor ip-address send-community extended	Specifies that a communities attribute should be sent to a BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 10.30.1.2 send-community extended	
Step 29	exit address-family	Exits BGP address-family submode.
	Example:	
	<pre>Device(config-router-af)# exit address-family</pre>	
Step 30	bgp router-id ip-address	Configures a fixed router ID for the BGP
	Example:	routing process.
	Device(config-router)# bgp router-id 4.1.1.3	
Step 31	bgp log-neighbor changes	Enables logging of BGP neighbor resets.
	Example:	
	Device(config-router)# bgp log-neighbor changes	
Step 32	neighbor ip-address remote-as as-number	Configures an entry to the BGP neighbor table.
	Example:	
	Device(config-router) # neighbor 4.1.1.1 remote-as 200	
Step 33	neighbor ip-address update-source	Allows Cisco IOS software to use a specific
	interface-type interface-number	operational interface for TCP connections by the BGP sessions.
	Example:	
	Device(config-router)# neighbor 4.1.1.1 update-source Loopback0	
Step 34	address-family vpnv4	Configures the device in address family
	Example:	configuration mode for configuring routing sessions, such as BGP, that use standard
	Device(config-router)# address-family vpnv4	VPNv4 address prefixes.

	Command or Action	Purpose
Step 35	neighbor ip-address activate  Example:	Enables the exchange of information with a BGP neighbor.
	Device(config-router-af)# neighbor 4.1.1.1 activate	
Step 36	neighbor ip-address send-community extended	Specifies that a communities attribute should be sent to a BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 4.1.1.1 send-community extended	
Step 37	exit address-family	Exits BGP address-family submode.
	Example:	
	Device(config-router-af)# exit address-family	

### **Configuring InterAS Option B using Redistribute Connected Method**

To configure interAS Option B on ASBRs using the redistribute connected method, complete the following steps:

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	router ospf process-id	Configures an OSPF routing process and
	Example:	assign a process number.
	Device(config)# router ospf 1	
Step 4	router-id ip-address	Specifies a fixed router ID.
	Example:	
	Device(config)# router-id 5.1.1.1	

	Command or Action	Purpose	
Step 5	nsr	Configures OSPF non-stop routing (NSR).	
	Example:		
	Device(config-router)# nsr		
Step 6	nsf	Confgures OSPF non-stop forwarding (NSF).	
	Example:		
	Device(config-router)# nsf		
Step 7	redistribute connected	Redistributes the next hop address of the	
	Example:	remote ASBR into the local IGP. This is the command that implements redistribute	
	Device(config-router)# redistribute connected	connected method.	
Step 8	passive-interface interface-type	Disables Open Shortest Path First (OSPF)	
	interface-number	routing updates on an interface.	
	Example:		
	Device(config-router) # passive-interface GigabitEthernet 1/0/10 Device(config-router) # passive-interface Tunnel0		
Step 9	network ip-address wildcard-mask aread area-id	Defines an interface on which OSPF runs and defines the area ID for that interface.	
	Example:		
	Device(config-router)# network 5.1.1.0 0.0.0.0.255 area 0		
Step 10	exit	Exits router configuration mode.	
	Example:		
	Device(config-router)# exit		
Step 11	router bgp autonomous-system-number	Configures a BGP routing process.	
	Example:		
	Device(config)# router bgp 300		
Step 12	bgp router-id ip-address	Configures a fixed router ID for the BGP	
	Example:	routing process.	
	Device(config-router)# bgp router-id 5.1.1.1		

	Command or Action	Purpose	
Step 13	bgp log-neighbor changes	Enables logging of BGP neighbor resets.	
	Example:		
	<pre>Device(config-router) # bgp log-neighbor changes</pre>		
Step 14	no bgp default ipv4-unicast	Disables advertisement of routing information	
	Example:	for address family IPv4.	
	<pre>Device(config-router)# no bgp default ipv4-unicast</pre>		
Step 15	no bgp default route-target filter	Disables automatic BGP route-target	
	Example:	community filtering.	
	<pre>Device(config-router)# no bgp default route-target filter</pre>		
Step 16	neighbor ip-address remote-as as-number	Configures an entry to the BGP neighbor table.	
	Example:		
	Device(config-router) # neighbor 5.1.1.3 remote-as 300		
Step 17	neighbor ip-address update-source interface-type interface-number	Allows Cisco IOS software to use a specific operational interface for TCP connections by	
	Example:	the BGP sessions.	
	Device(config-router) # neighbor 4.1.1.3 update-source Loopback0		
Step 18	neighbor ip-address remote-as as-number	Configures an entry to the BGP neighbor table.	
	Example:		
	Device(config-router)# neighbor 10.30.1.2 remote-as 200		
Step 19	address-family vpnv4	Configures the device in address family	
	Example:	configuration mode for configuring routing sessions, such as BGP, that use standard	
	Device(config-router)# address-family vpnv4	VPNv4 address prefixes.	
Step 20	neighbor ip-address activate	Enables the exchange of information with a	
	Example:	BGP neighbor.	
	Device(config-router-af)# neighbor 5.1.1.3 activate		

	Command or Action	Purpose
Step 21	neighbor <i>ip-address</i> send-community extended	Specifies that a communities attribute should be sent to a BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 5.1.1.3 send-community extended	
Step 22	neighbor <i>ip-address</i> activate  Example:	Enables the exchange of information with a BGP neighbor.
	Device(config-router-af)# neighbor 10.30.1.1 activate	
Step 23	neighbor <i>ip-address</i> send-community extended	Specifies that a communities attribute should be sent to a BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 10.30.1.2 send-community extended	
Step 24	exit address-family	Exits BGP address-family submode.
	Example:	
	Device(config-router-af)# exit address-family	
Step 25	mpls ldp router-id interface-id [force]	Specifies the preferred interface for
	Example:	determining the LDP router ID.
	Device(config-router)# mpls ldp router-id Loopback0 force	

## **Configuring MPLS VPN Inter-AS Option AB**

The following sections describe how to configure the interAS option AB feature on an ASBR for an MPLS VPN:

## Configuring the VRFs on the ASBR Interface for Each VPN Customer

Use the following steps to configure the VRFs on the ASBR interface for each VPN customer so that these VPNs have connectivity over the interAS Option AB network.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.

	Command or Action	Purpose
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	interfacetype number	Specifies the interface to configure and enters
	Example:	interface configuration mode.
	Device(config) # interface gigabitethernet 1/0/1	
Step 4	ip vrf forwardingvrf-name	Associates a VRF with the specified interface.
	Example:	The vrf-name argument is the name assigned to a VRF.
	Device(config-if)# ip vrf forwarding vpn1	
Step 5	end	(Optional) Exits to privileged EXEC mode.
	Example:	
	Device(config-if)# end	

## **Configuring the MP-BGP Session Between ASBR Peers**

BGP propagates reachability information for VPN-IPv4 prefixes among PE devices by means of the BGP multiprotocol extensions (see RFC 2283, Multiprotocol Extensions for BGP-4), which define support for address families other than IPv4. Using the extensions ensures that the routes for a given VPN are learned only by other members of that VPN, enabling members of the VPN to communicate with each other.

Follow the steps in this section to configure the MP-BGP session on the ASBR.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	

	Command or Action	Purpose
	Device# configure terminal	
Step 3	router bgp as-number  Example:	Configures a BGP routing process and places the device in router configuration mode.
	Device(config)# router bgp 100	• The as-number argument indicates the number of an autonomous system that identifies the device to other BGP devices and tags the routing information passed along. Valid numbers are from 0 to 65535. Private autonomous system numbers that can be used in internal networks range from 64512 to 65535.
Step 4	neighbor {ip-address   peer-group-name} remote-as as-number	Adds an entry to the BGP or multiprotocol BGP neighbor table.
	<pre>Example: Device(config-router)# neighbor</pre>	The ip-address argument specifies the IP address of the neighbor.
	192.168.0.1 remote-as 200	• The peer-group-name argument specifies the name of a BGP peer group.
		The as-number argument specifies the autonomous system to which the neighbor belongs.
Step 5	address-family vpnv4 [unicast] Example:	Enters address family configuration mode for configuring routing sessions, such as BGP, that use standard VPNv4 address prefixes.
	<pre>Device(config-router)# address-family vpnv4</pre>	The unicast keyword specifies IPv4 unicast address prefixes.
Step 6	neighbor { ip-address   peer-group-name } activate	Enables the exchange of information with a neighboring device.
	<pre>Example: Device(config-router-af)# neighbor</pre>	• The <i>ip-address</i> argument specifies the IP address of the neighbor.
	192.168.0.1 activate	• The <i>peer-group-name</i> argument specifies the name of a BGP peer group.
Step 7	neighbor {ip-address   peer-group-name} inter-as-hybrid	Configures eBGP peer device (ASBR) as an Inter-AS Option AB peer.
	Example:  Device(config-router-af)# neighbor 192.168.0.1 inter-as-hybrid	<ul> <li>The <i>ip-address</i> argument specifies the IP address of the neighbor.</li> <li>The <i>peer-group-name</i> argument specifies</li> </ul>
		the name of a BGP peer group.

	Command or Action	Purpose
		If any prefixes are imported into Option AB VRFs, then the imported paths are advertised to this peer.
		• If any prefixes are received from this peer and are imported into Option AB VRFs, then the imported paths are advertised to iBGP peers.
		Note Advertised routes have RTs that are configured on the VRF. Advertised routes do not have their original RTs.
Step 8	exit-address-family	Exits from address family configuration mode.
	Example:	
	<pre>Device(config-router)# exit-address-family</pre>	

## **Configuring the Routing Policy for VPNs that Need Inter-AS Connections**

Use the steps in this section to configure VRFs for the VPNs that need Inter-AS connections between ASBR peers, by configuring the appropriate routing policy and Option AB configuration.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	vrf definition vrf-name	Defines the VPN routing instance by assigning
	Example:	a VRF name and enters VRF configuration
	Device(config)# vrf definition vpn1	mode.
		• The <i>vrf-name</i> argument is the name assigned to a VRF.
Step 4	rd route-distinguisher	Creates routing and forwarding tables.
	Example:	• The <i>route-distinguisher</i> argument adds an
	Device(config-vrf) # rd 100:1	8-byte value to an IPv4 prefix to create a VPN IPv4 prefix. You can enter an RD in either of these formats:

	Command or Action	Purpose
		• 16-bit autonomous system number: your 32-bit number, for example, 101:3.
		• 32-bit IP address: your 16-bit number, for example, 192.168.122.15:1.
Step 5	address-family ipv4  Example:	Enters VRF address family configuration mode to specify an address family for a VRF.
	Device(config-vrf)# address-family ipv4	<ul> <li>The ipv4 keyword specifies an IPv4 address family for a VRF.</li> </ul>
		• 16-bit autonomous system number: your 32-bit number, for example, 101:3.
		• 32-bit IP address: your 16-bit number, for example, 192.168.122.15:1.
Step 6	route-target {import   export   both} route-target-ext-community	Creates a route-target extended community for a VRF.
	Example:  Device(config-vrf-af) # route-target import 100:1	The <b>import</b> keyword imports routing information from the target VPN extended community.
		The <b>export</b> keyword exports routing information to the target VPN extended community.
		The <b>both</b> keyword imports routing information from and exports routing information to the target VPN extended community.
		The route-target-ext-community argument adds the route-targetextended community attributes to the VRF list of import, export or both (import and export) route-target extended communities.
Step 7	inter-as-hybrid	Specifies the VRF as an option AB VRF, which has the following effects:
	<pre>Example:   Device(config-vrf-af) # inter-as-hybrid</pre>	Routes imported to this VRF can be advertised to option AB peers and VPNv4 iBGP peers.
		When routes received from option AB peers and are imported into the VRF, the

	Command or Action	Purpose
		next hop table ID of the route is set to the table ID of the VRF.
Step 8	<pre>inter-as-hybrid [next-hopip-address] Example: Device(config-vrf-af) # inter-as-hybrid next-hop 192.168.1.0</pre>	(Optional) Specifies the next hop IP address to be set on paths that are imported into the VRF and that are received from an Option AB peer.  • The next hop context is also set to the VRF, which imports these paths.
Step 9	<pre>end Example: Device(config-vrf-af)# end</pre>	(Optional) Exits to privileged EXEC mode.

### **Changing an Inter-AS Option A Deployment to an Option AB Deployment**

In an option A deployment, the VRF instances are back-to-back between the ASBR devices and there is direct connectivity between PE devices of different autonomous systems. The PE devices are attached by multiple physical or logical interfaces, each of which is associated with a given VPN (through a VRF instance).

In the Option AB deployment, the different autonomous systems interconnect by using a single MP-BGP session in the global routing table to carry control plane traffic.

Use the following steps to change an MPLS VPN Inter-AS Option A deployment to an Option AB deployment.

- 1. Configure the MP-BGP session on the ASBR. BGP multiprotocol extensions are used to define support for address families other than IPv4 so that the routes for a given VPN are learned only by other members of that VPN, enabling members of the VPN to communicate with each other.
- 2. Identify the VRFs that need an upgrade from Option A and configure them for Option AB by using the inter-as-hybrid command.
- 3. Use the following steps in this section to remove the configuration for the eBGP (peer ASBR) neighbor.
- **4.** Repeat all the steps in the following procedure to remove the configuration for additional eBGP (peer ASBR) neighbors.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	

	Command or Action	Purpose
Step 3	<pre>router bgp as-number Example:  Device(config) # router bgp 100</pre>	Configures a BGP routing process and places the device in router configuration mode.  • The <i>as-number</i> argument indicates the number of an autonomous system that identifies the device to other BGP devices and tags the routing information passed along. Valid numbers are from 0 to 65535. Private autonomous system numbers that can be used in internal networks range from 64512 to 65535.
Step 4	<pre>address-family ipv4 vrf vrf-name Example:  Device(config-router) # address-family ipv4 vrf vpn4</pre>	Configures each VRF that is identified in the MP-BGP session on the ASBR so that the routes for a given VPN are learned only by other members of that VPN, enabling members of the VPN to communicate with each other.  • Enters address family configuration mode to specify an address family for a VRF.
Step 5	<pre>no neighbor{ip-address   peer-group-name} Example:  Device(config-router-af) # no neighbor 192.168.0.1</pre>	Removes the configuration for the exchange of information with the neighboring eBGP (ASBR) device.  • The <i>ip-address</i> argument specifies the IP address of theneighbor.
Step 6	<pre>exit-address-family  Example: Device(config-router-af)# exit-address-family</pre>	Exits from address family configuration mode.
Step 7	<pre>end Example: Device(config-router-af)# end</pre>	Exits to privileged EXEC mode.

# **Verifying MPLS VPN InterAS Options Configuration**

To verify InterAS option B configuration information, perform one of the following tasks:

Command	Purpose
ping ip-address source interface-type	Checks the accessibility of devices. Use this command to check the connection between CE1 and CE2 using the loopback interface.
show bgp vpnv4 unicast labels	Displays incoming and outgoing BGP labels.


Command	Purpose
show mpls forwarding-table	Display the contents of the MPLS Label Forwarding Information Base.
show ip bgp	Displays entries in the BGP routing table.
show { ip   ipv6 } bgp [ vrf vrf-name ]	Displays information about BGP on a VRF.
show ip route [ ip-address [ mask ]] [ protocol ] vrf vrf-name	Displays the current state of the routing table. Use the ip-address argument to verify that CE1 has a route to CE2. Verify the routes learned by CE1. Make sure that the route for CE2 is listed.
show { ip   ipv6 } route vrf vrf-name	Displays the IP routing table that is associated with a VRF. Check that the loopback addresses of the local and remote CE routers are in the routing table of the PE routers.
show running-config bgp	Displays the running configuration for BGP.
show running-config vrf vrf-name	Displays the running configuration for VRFs.
show vrf vrf-name interface interface-type interface-id	Verifies the route distinguisher (RD) and interface that are configured for the VRF.
trace destination [ vrf vrf-name ]	Discovers the routes that packets take when traveling to their destination. The <b>trace</b> command can help isolate a problem if two routers cannot communicate.

# **Configuration Examples for MPLS VPN InterAS Options**

# **InterAS Option B**

### **Next-Hop-Self Method**

Figure 8: Topology for InterAS Option B using Next-Hop-Self Method

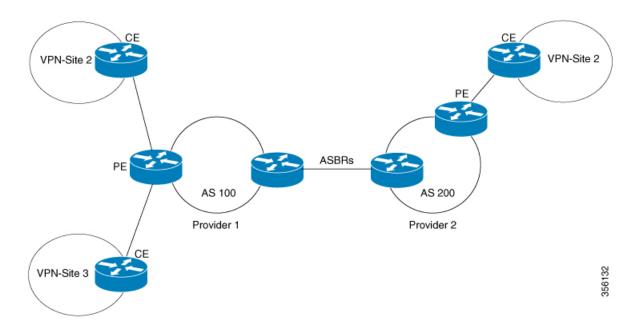

### **Configuration for PE1-P1-ASBR1**

PE1	P1	ASBR1
vrf definition Mgmt-vrf		
!		
address-family ipv4		
exit-address-family		
!		
address-family ipv6 exit-address-family		
!		
vrf definition vrf1		
rd 200:1		
route-target export 200:1		
route-target import 200:1		
route-target import 300:1		
!		
address-family ipv4 exit-address-family		
interface Loopback0		
ip address 4.1.1.3		
255.255.255.255		
ip ospf 1 area 0		
!		
interface Loopback1		
vrf forwarding vrf1		
ip address 192.1.1.1 255.255.255.255		
ip ospf 200 area 0		
!		
interface GigabitEthernet2/0/4		
no switchport		
ip address 10.10.1.1		
255.255.255.0		
ip ospf 1 area 0		
mpls ip mpls label protocol ldp		
interface GigabitEthernet2/0/9		
description to-IXIA-1:p8		
no switchport		
vrf forwarding vrf1		
ip address 192.2.1.1		
255.255.255.0		
ip ospf 200 area 0		
router ospf 200 vrf vrf1 router-id 192.1.1.1		
nsr		
nsf		
redistribute connected		
redistribute bgp 200		
network 192.1.1.1 0.0.0.0 area		
0		
network 192.2.1.0 0.0.0.255		
area 0 router ospf 1		
router-id 4.1.1.3		
nsr		
nsf		
redistribute connected		
router bgp 200		
bgp router-id 4.1.1.3		
bgp log-neighbor-changes		
neighbor 4.1.1.1 remote-as 200 neighbor 4.1.1.1 update-source		
Loopback0		
		l l

PE1	P1	ASBR1
! address-family vpnv4 neighbor 4.1.1.1 activate neighbor 4.1.1.1 send-community extended exit-address-family ! address-family ipv4 vrf vrf1 redistribute connected redistribute ospf 200 maximum-paths ibgp 2 exit-address-family		

### Configuration for ASBR2 – P2 – PE2

#### Table 7:


PE2	P2	ASBR2
	interface Loopback0 ip address 5.1.1.2 255.255.255.255 ip ospf 1 area 0 interface GigabitEthernet1 no switchport ip address 10.50.1.1 255.255.255.0 ip ospf 1 area 0 mpls ip mpls label protocol ldp interface GigabitEthernet2 no switchport ip address 10.40.1.2 255.255.255.0 ip ospf 1 area 0 mpls ip mpls label protocol ldp	<pre>interface GigabitEthernet1/0/37 no switchport ip address 10.30.1.2 255.255.255.0 mpls bgp forwarding</pre>

PE2	P2	ASBR2
vrf definition vrf1		
rd 300:1		
route-target export 300:1 route-target import 300:1		
route-target import 200:1		
!		
address-family ipv4		
exit-address-family		
interface Loopback0 ip address 5.1.1.3		
255.255.255.255		
ip ospf 1 area 0		
!		
interface Loopback1		
vrf forwarding vrf1 ip address 193.1.1.1		
255.255.255.255		
ip ospf 300 area 0		
interface GigabitEthernet1/0/1		
no switchport		
ip address 10.50.1.2 255.255.255.0		
ip ospf 1 area 0		
mpls ip		
mpls label protocol ldp		
!		
interface GigabitEthernet1/0/2 no switchport		
vrf forwarding vrf1		
ip address 193.2.1.1		
255.255.255.0		
ip ospf 300 area 0		
router ospf 300 vrf vrf1 router-id 193.1.1.1		
nsr		
nsf		
redistribute connected		
redistribute bgp 300		
network 193.1.1.1 0.0.0.0 area		
network 193.2.1.0 0.0.0.255		
area 0		
!		
router ospf 1		
router-id 5.1.1.3		
nsf		
redistribute connected		
router bgp 300		
bgp router-id 5.1.1.3		
bgp log-neighbor-changes neighbor 5.1.1.1 remote-as 300		
neighbor 5.1.1.1 update-source		
Loopback0		
!,,		
address-family ipv4 neighbor 5.1.1.1 activate		
neighbor 5.1.1.1 activate neighbor 5.1.1.1 send-label		
exit-address-family		
!		
address-family vpnv4		
neighbor 5.1.1.1 activate	l	

PE2	ASBR2
neighbor 5.1.1.1 send-community extended exit-address-family ! address-family ipv4 vrf vrf1 redistribute connected redistribute ospf 300 maximum-paths ibgp 2 exit-address-family	

### **IGP Redistribute Connected Subnets Method**

Figure 9: Topology for InterAS Option B using Redistribute Connected Subnets Method

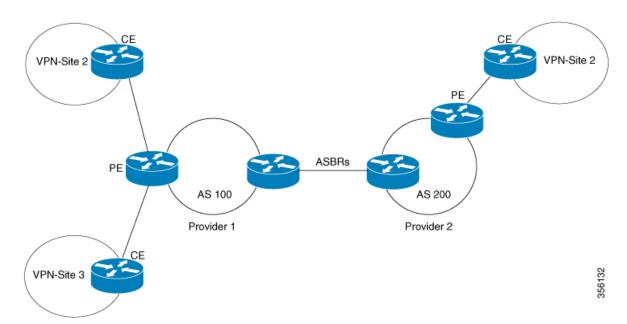

### **Configuration for PE1-P1-ASBR1**

PE1	P1	ASBR1
vrf definition Mgmt-vrf		
!		
address-family ipv4		
exit-address-family		
address-family ipv6		
exit-address-family		
vrf definition vrf1		
rd 200:1		
route-target export 200:1		
route-target import 200:1		
route-target import 300:1		
!		
address-family ipv4		
exit-address-family interface Loopback0		
ip address 4.1.1.3		
255.255.255.255		
ip ospf 1 area 0		
!		
interface Loopback1		
vrf forwarding vrf1		
ip address 192.1.1.1		
255.255.255		
ip ospf 200 area 0		
:  interface GigabitEthernet2/0/4		
no switchport		
ip address 10.10.1.1		
255.255.255.0		
ip ospf 1 area 0		
mpls ip		
mpls label protocol ldp		
interface GigabitEthernet2/0/9		
description to-IXIA-1:p8 no switchport		
vrf forwarding vrf1		
ip address 192.2.1.1		
255.255.255.0		
ip ospf 200 area 0		
router ospf 200 vrf vrf1		
router-id 192.1.1.1		
nsr		
nsf redistribute connected		
redistribute connected		
network 192.1.1.1 0.0.0.0 area		
0		
network 192.2.1.0 0.0.0.255		
area 0		
router ospf 1		
router-id 4.1.1.3		
nsr nsf		
redistribute connected		
router bgp 200		
bgp router-id 4.1.1.3		
bgp log-neighbor-changes		
neighbor 4.1.1.1 remote-as 200		
neighbor 4.1.1.1 update-source		
Loopback0		

PE1	P1	ASBR1
! address-family vpnv4 neighbor 4.1.1.1 activate neighbor 4.1.1.1 send-community extended exit-address-family ! address-family ipv4 vrf vrf1 redistribute connected redistribute ospf 200 maximum-paths ibgp 2 exit-address-family		

### $Configuration\ for\ ASBR2-P2-PE2$

PE2	P2	ASBR2
	interface Loopback0 ip address 5.1.1.2 2555.255.255.255 ip ospf 1 area 0 interface GigabitEthernet1/0/1 no switchport ip address 10.50.1.1 255.255.255.0 ip ospf 1 area 0 mpls ip mpls label protocol ldp interface GigabitEthernet2/0/3 no switchport ip address 10.40.1.2 255.255.255.0 ip ospf 1 area 0 mpls ip mpls label protocol ldp	passive-interface GigabitEthernet1/0/10 passive-interface Tunnel0 network 5.1.1.0 0.0.0.255 area 0 router bgp 300

PE2	P2	ASBR2
vrf definition vrf1		
rd 300:1		
route-target export 300:1 route-target import 300:1		
route-target import 200:1		
!		
address-family ipv4		
exit-address-family		
interface Loopback0 ip address 5.1.1.3		
255.255.255.255		
ip ospf 1 area 0		
!		
interface Loopback1		
vrf forwarding vrf1 ip address 193.1.1.1		
255.255.255.255		
ip ospf 300 area 0		
interface GigabitEthernet1/0/1		
no switchport		
ip address 10.50.1.2		
255.255.255.0 ip ospf 1 area 0		
mpls ip		
mpls label protocol ldp		
!		
interface GigabitEthernet1/0/2		
no switchport vrf forwarding vrf1		
ip address 193.2.1.1		
255.255.255.0		
ip ospf 300 area 0		
router ospf 300 vrf vrf1		
router-id 193.1.1.1		
nsf		
redistribute connected		
redistribute bgp 300		
network 193.1.1.1 0.0.0.0 area		
0 network 193.2.1.0 0.0.0.255		
area 0		
!		
router ospf 1		
router-id 5.1.1.3		
nsr		
redistribute connected		
router bgp 300		
bgp router-id 5.1.1.3		
bgp log-neighbor-changes		
neighbor 5.1.1.1 remote-as 300 neighbor 5.1.1.1 update-source		
Loopback0		
!		
address-family ipv4		
neighbor 5.1.1.1 activate		
neighbor 5.1.1.1 send-label exit-address-family		
EVIC-address_ramity		
address-family vpnv4		
neighbor 5.1.1.1 activate		

PE2	ASBR2
neighbor 5.1.1.1 send-community extended exit-address-family ! address-family ipv4 vrf vrf1 redistribute connected redistribute ospf 300 maximum-paths ibgp 2 exit-address-family	

# InterAS OptionAB

The following example displays the topology and the configuration on each device:

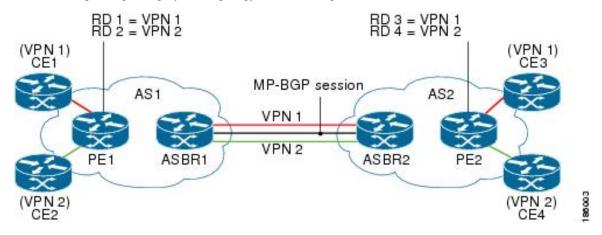


Table 8:

PE1 Config	P1 Config	ASBR1 Config	ASBR2 Config	PE2 Config
	interface			
	Loopback0			
	ip address 2.2.2.2			
	255.255.255.255			
	!			
	interface			
	TenGigabitEthernet1/1			
	ip address			
	10.1.1.2			
	255.255.255.0			
	mpls ip			
	!			
	interface			
	TenGigabitEthernet1/2			
	no ip address			
	!			
	interface			
	TenGigabitEthernet1/3			
	ip address			
	20.1.1.1			
	255.255.255.0			
	mpls ip			
	!			
	router ospf 1			
	router-id 2.2.2.2			
	network 2.2.2.2			
	0.0.0.0 area 0			
	network 10.1.1.0			
	0.0.0.255 area 0			
	network 20.1.1.0			
	0.0.0.255 area 0			
	!			

PE1 Config	P1 Config	ASBR1 Config	ASBR2 Config	PE2 Config
ip vrf cust-1		ip vrf cust-1	ip vrf cust-1	ip vrf cust-1
rd 100:1		rd 100:10001	rd 200:10001	rd 200:1
route-target		route-target	route-target	route-target
export 100:1		export 100:1	export 200:1	export 200:1
route-target		route-target	route-target	route-target
import 100:1		import 100:1	import 200:1	import 200:1
!		route-target	route-target	route-target
ip vrf cust-2		import 200:1	import 100:1	import 100:1 !
rd 100:2		inter-as-hybrid	inter-as-hybrid	ip vrf cust-2
route-target		next-hop 160.1.1.2	1 -	rd 200:2
export 100:2		I I I I I I I I I I I I I I I I I I I	160.1.1.1	route-target
route-target		ip vrf cust-2	!	export 200:2
import 100:2		rd 100:20001	ip vrf cust-2	route-target
!		route-target	rd 200:20001	import 200:2
: interface		export 100:2	route-target	route-target
		route-target	_	import 100:2
Loopback0			export 200:2 route-target	
ip address 1.1.1.1		import 100:2	I .	
0 0 0		route-target	import	interface
255.255.255.255		import 200:2	200:2 route-target	
!		inter-as-hybrid	import 100:2	ip address 5.5.5.5
interface		next-hop 170.1.1.2	_	
Loopback1		!	next-hop	255.255.255.255
ip address		!	170.1.1.1	!
11.11.11.11		interface	!	interface
255.255.255.255		Loopback0	!	Loopback1
!		ip address 3.3.3.3	3 interface	ip address
interface			Loopback0	55.55.55.55
Loopback2		255.255.255.255	ip address 4.4.4.4	255.255.255.255
ip address		!		!
12.12.12.12		!	255.255.255.255	interface
255.255.255.255		interface	!	Loopback2
!		TwentyFiveGigE1/0/3	3 !	ip address
!		no switchport	interface	56.56.56.56
interface		ip address	TwentyFiveGigE1/0/2	
HundredGigE1/0/1/1		20.1.1.2	no switchport	!
no switchport		255.255.255.0	ip address	į
ip address		mpls ip	30.1.1.1	interface
10.1.1.1		1	255.255.255.0	HundredGigE1/0/1/1.200
255.255.255.0		l i	mpls ip	110110100019227 07 17 11200
mpls ip		interface	!	encapsulation
mpis ip		TwentyFiveGigE1/0/10.10	1 *	dot1Q 200
: 		IWeitcyrivedigii/ 0/ 10:10	interface	ip vrf forwarding
: interface		encapsulation	TwentyFiveGigE1/0/10.10	
			IWEICYFIVEGIGEI/U/10.10	
HundredGigE1/0/1/4		dot1Q 10		ip address
no switchport		ip address	encapsulation	55.1.1.1
no ip address		150.1.1.1	dot1Q 10	255.255.255.0
!		255.255.255.0	ip address	! _
interface		mpls bgp	150.1.1.2	interface
HundredGigE1/0/1/4.100		forwarding	255.255.255.0	HundredGigE1/0/1/1.201
		!	mpls bgp	
encapsulation		interface	forwarding	encapsulation
dot1Q 100		TwentyFiveGigE1/0/10.20	) !	dot1Q 201
ip vrf forwarding			interface	ip vrf forwarding
cust-1		encapsulation	TwentyFiveGigE1/0/10.20	cust-2
ip address		dot1Q 20		ip address
11.1.1.1		ip vrf forwarding	encapsulation	56.1.1.1
255.255.255.0		cust-1	dot1Q 20	255.255.255.0
!		ip address	ip vrf forwarding	
interface		160.1.1.1	cust-1	interface
HundredGigE1/0/1/4.101		255.255.255.0	ip address	HundredGigE1/0/1/3
		!	160.1.1.2	no switchport
encapsulation		interface	255.255.255.0	ip address
	I	1	1	1 ~~~

PE1 Config	P1 Config	ASBR1 Config	ASBR2 Config	PE2 Config
dot1Q 101		TwentyFiveGigE1/0/10.30	!	30.1.1.2
ip vrf forwarding			interface	255.255.255.0
cust-2		encapsulation	TwentyFiveGigE1/0/10.30	mpls ip
ip address		dot1Q 30		!
12.1.1.1		ip vrf forwarding	encapsulation	router ospf 2 vrf
255.255.255.0		cust-2	dot1Q 30	cust-1
!		ip address	ip vrf forwarding	router-id
!		170.1.1.1	cust-2	55.55.55.55
router ospf 2 vrf		255.255.255.0	ip address	network 55.1.1.0
cust-1		!	170.1.1.2	0.0.0.255
router-id		router ospf 1	255.255.255.0	area 0
11.11.11.11		router-id 3.3.3.3	!	network
network 11.1.1.0		network 3.3.3.3	router ospf 1	55.55.55.55
0.0.0.255 area 0		0.0.0.0 area 0	router-id 4.4.4.4	0.0.0.0
network		network 20.1.1.0	network 4.4.4.4	area O
11.11.11.11		0.0.0.255 area 0	0.0.0.0	!
0.0.0.0 area 0		!	area 0	router ospf 3 vrf
!		router bgp 100	network 30.1.1.0	cust-2
router ospf 3 vrf		bgp router-id	0.0.0.255	router-id
cust-2		3.3.3.3	area 0	56.56.56.56
router-id		bgp log-neighbor-	!	network 56.1.1.0
12.12.12.12		changes	router bgp 200	0.0.0.255 area 0
network 12.1.1.0		neighbor 1.1.1.1	bgp router-id	network
0.0.0.255 area 0		remote-	4.4.4.4	56.56.56.56
network		as 100	bgp log-neighbor-	0.0.0.0 area 0
12.12.12.12		neighbor 150.1.1.2		!
0.0.0.0 area 0			neighbor 5.5.5.5	router ospf 1
!		remote-as 200	remote-	router-id 5.5.5.5
router ospf 1		1	as 200	network 5.5.5.5
router-id 1.1.1.1		address-family	neighbor 150.1.1.1	
		ipv4		area 0
network 1.1.1.1		redistribute	remote-as 100	network 30.1.1.0
0.0.0.0		connected	!	0.0.0.255
area 0		neighbor 1.1.1.1	address-family	area 0
network 10.1.1.0		activate	ipv4	!
0.0.0.255 area 0		neighbor 150.1.1.2	neighbor 5.5.5.5	router bgp 200
!		activate	activate	bgp router-id
router bgp 100		exit-address-family	neighbor 150.1.1.1	
bap router-id		1!	activate	bgp
1.1.1.1		address-family	exit-address-family	log-neighbor-changes
bgp log-neighbor-		vpnv4	!	neighbor 4.4.4.4
changes		neighbor 1.1.1.1	address-family	remote-as 200
neighbor 3.3.3.3		activate	vpnv4	neighbor 4.4.4.4
remote-as 100		neighbor 1.1.1.1	neighbor 5.5.5.5	update-source
neighbor 3.3.3.3		send-	activate	Loopback0
update-		community both	neighbor 5.5.5.5	!
source Loopback0		neighbor 150.1.1.2		address-family
!		activate	both	vpnv4
address-family		neighbor 150.1.1.2	neighbor 150.1.1.1	
vpnv4		send-	activate	activate
neighbor 3.3.3.3		community both	neighbor 150.1.1.1	
activate		neighbor 150.1.1.2		send-community
neighbor 3.3.3.3			send-community	extended
send-		inter- as-hybrid	both	exit-address-family
community extended			neighbor 150.1.1.1	
		1!		address-family
	J	address-family	inter-as-hybrid '	ipv4 vrf cust-1
exit-address-iamily			1 4	
<pre>exit-address-family !</pre>		=	exit-address-family	redistribute
!		ipv4	exit-address-family	
! address-family		ipv4 vrf cust-1	!	connected
!		ipv4	exit-address-family ! address-family ipv4 vrf cust-1	

PE1 Config	P1 Config	ASBR1 Config	ASBR2 Config	PE2 Config
redistribute ospf 2 maximum-paths ibgp 2 exit-address-family! address-family ipv4 vrf cust-2 redistribute connected redistribute ospf 3 maximum-paths ibgp 2 exit-address-family		! address-family ipv4 vrf cust-2 redistribute connected exit-address-family !	! address-family ipv4 vrf cust-2 redistribute connected	2 exit-address-family ! address-family ipv4 vrf cust-2 redistribute connected redistribute ospf 3 maximum-paths ibgp 2 exit-address-family !

# **Additional References for MPLS VPN InterAS Options**

#### **Related Documents**

Related Topic	Document Title
For complete syntax and usage information for the commands used in this chapter.	See the MPLS Commands section of the Command Reference (Catalyst 9300 Series Switches)

# **Feature History for MPLS VPN InterAS Options**

This table provides release and related information for features explained in this module.

These features are available on all releases subsequent to the one they were introduced in, unless noted otherwise.

٠

Release	Feature	Feature Information
Cisco IOS XE Gibraltar 16.11.1	MPLS VPN InterAS Option B	InterAS Options use iBGP and eBGP peering to allow VPNs in different AS to communicate with each other. In an interAS option B network, ASBR ports are connected by one or more interfaces that are enabled to receive MPLS traffic.

Release	Feature	Feature Information
Cisco IOS XE Amsterdam 17.3.1	MPLS VPN InterAS Option AB	MPLS VPN InterAS Option AB enables different autonomous systems to interconnect by using a single Multiprotocol Border Gateway Protocol (MP-BGP) session, which is enabled globally on the router.

Use Cisco Feature Navigator to find information about platform and software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>.

Feature History for MPLS VPN InterAS Options

# **Configuring MPLS over GRE**

- Prerequisites for MPLS over GRE, on page 129
- Restrictions for MPLS over GRE, on page 129
- Information About MPLS over GRE, on page 130
- How to Configure MPLS over GRE, on page 131
- Configuration Examples for MPLS over GRE, on page 133
- Additional References for MPLS over GRE, on page 136
- Feature History for MPLS over GRE, on page 136

# **Prerequisites for MPLS over GRE**

Ensure that the following routing protocols are configured and working properly.

- Label Distribution Protocol (LDP)—for MPLS label distribution.
- Routing protocol (ISIS or OSFP) between the core devices P1-P-P2
- MPLS between PE1-P1 and PE2-P2
- Since the ingress traffic enters the IP core from MPLS network and egress traffic leaves the IP core to enter the MPLS network, it is recommended to use QoS group value for defining QoS policies as we traverse the protocol boundary.

## **Restrictions for MPLS over GRE**

- GRE Tunneling:
  - L2VPN over mGRE and L3VPN over mGRE is not supported.
  - The tunnel source can only be a loopback or a Layer 3 interface. These interfaces could either be physical interfaces or etherchannels.
  - Tunnel interface supports Static Routes, Enhanced Interior Gateway Routing Protocol (EIGRP) and Open Shortest Path First (OSPF) routing protocols.
  - GRE Options Sequencing, Checksum and Source Route are not supported.

- IPv6 generic routing encapsulation (GRE) is not supported.
- Carrier Supporting Carrier (CSC) is not supported.
- Tunnel source cannot be a subinterface.

## Information About MPLS over GRE

The MPLS over GRE feature provides a mechanism for tunneling Multiprotocol Label Switching (MPLS) packets over a non-MPLS network. This feature allows you to create a generic routing encapsulation (GRE) tunnel across a non-MPLS network. The MPLS packets are encapsulated within the GRE tunnel packets, and the encapsulated packets traverse the non-MPLS network through the GRE tunnel. When GRE tunnel packets are received at the other side of the non-MPLS network, the GRE tunnel packet header is removed and the inner MPLS packet is forwarded to its final destination. The core network between the end-points of the GRE tunnel uses ISIS or OSPF routing protocol whereas the GRE tunnel uses OSPF or EIGRP.

# **PE-to-PE Tunneling**

The provider-edge-to-provider-edge (PE-to-PE) tunneling configuration provides a scalable way to connect multiple customer networks across a non-MPLS network. With this configuration, traffic that is destined to multiple customer networks is multiplexed through a single generic routing encapsulation (GRE) tunnel.



Note


A similar nonscalable alternative is to connect each customer network through separate GRE tunnels (for example, connecting one customer network to each GRE tunnel).

The PE device on one side of the non-MPLS network uses the routing protocols (that operate within the non-MPLS network) to learn about the PE device on the other side of the non-MPLS network. The learned routes that are established between the PE devices are then stored in the main or default routing table.

The opposing PE device uses OSPF or EIGRP to learn about the routes that are associated with the customer networks that are behind the PE devices. These learned routes are not known to the non-MPLS network.

The following figure shows an end-to-end IP core from one PE device to another through the GRE tunnel that spans the non-MPLS network.


Figure 10: PE-to-PE Tunneling

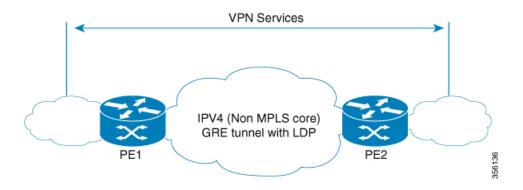

## P-to-PE Tunneling

The provider-to-provider-edge (P-to-PE) tunneling configuration provides a way to connect a PE device (P1) to a Multiprotocol Label Switching (MPLS) segment (PE-2) across a non-MPLS network. In this configuration, MPLS traffic that is destined to the other side of the non-MPLS network is sent through a single generic routing encapsulation (GRE) tunnel.


Figure 11: P-to-PE Tunneling

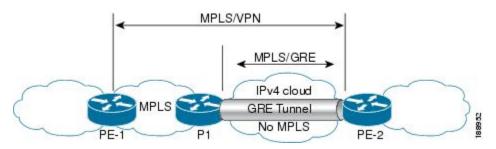

## P-to-P Tunneling

As shown in the figure below, the provider-to-provider (P-to-P) configuration provides a method of connecting two Multiprotocol Label Switching (MPLS) segments (P1 to P2) across a non-MPLS network. In this configuration, MPLS traffic that is destined to the other side of the non-MPLS network is sent through a single generic routing encapsulation (GRE) tunnel.

Figure 12: P-to-P Tunneling

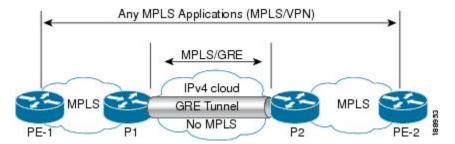

# **How to Configure MPLS over GRE**

The following section provides the various configuration steps for MPLS over GRE:

# **Configuring the MPLS over GRE Tunnel Interface**

To configure the MPLS over GRE feature, you must create a generic routing encapsulation (GRE) tunnel to span the non-MPLS networks. You must perform the following procedure on the devices located at both ends of the GRE tunnel.

	Command or Action	Purpose	
Step 1	enable	Enables privileged EXEC mode.	
	Example:	Enter your password if prompted.	
	Device> enable		
Step 2	configure terminal	Enters global configuration mode.	
	Example:		
	Device# configure terminal		
Step 3	interface tunnel tunnel-number	Creates a tunnel interface and enters interface configuration mode.	
	Example:		
	Device(config)# interface tunnel 1		
Step 4	ip address ip-address mask	Assigns an IP address to the tunnel interface.	
	Example:		
	Device(config-if)# ip address 10.0.0.1 255.255.255.0		
Step 5	tunnel source source-address	Specifies the tunnel's source IP address.	
	Example:		
	Device(config-if)# tunnel source 10.1.1.1		
Step 6	tunnel destination destination-address	Specifies the tunnel's destination IP address.	
	Example:		
	Device(config-if)# tunnel destination 10.1.1.2		
Step 7	mpls ip	Enables Multiprotocol Label Switching (MPLS)	
	Example:	on the tunnel's physical interface.	
	Device(config-if)# mpls ip		
Step 8	end	Returns to privileged EXEC mode.	
	Example:		
	Device(config-if)# end		


## **Configuration Examples for MPLS over GRE**

The following section provides configuration examples for MPLS over GRE:

### **Example: PE-to-PE Tunneling**

The following shows basic MPLS configuration on two Provider Edge (PE) devices, PE-to-PE tunneling, which use GRE tunnel to send traffic over non-MPLS network.

Figure 13: Topology for PE-to-PE Tunneling

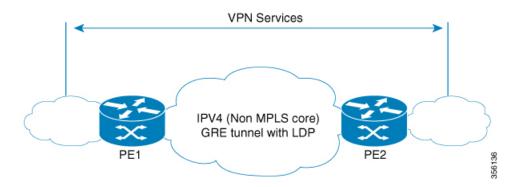

#### **PE1 Configuration**

```
mpls ip
interface loopback 10
ip address 11.2.2.2 255.255.255.255
ip router isis
interface GigabitEthernet 1/1/1
ip address 1.1.1.1 255.255.255.0
ip router isis
interface Tunnel 1
ip address 10.0.0.1 255.255.255.0
ip ospf 1 are 0
tunnel source 11.2.2.2
tunnel destination 11.1.1.1
mpls ip
interface Vlan701
ip address 65.1.1.1 255.255.255.0
ip ospf 1 area 0
```

#### **PE2 Configuration**


```
!
mpls ip
!
interface loopback 10
```

```
ip address 11.1.1.1 255.255.255.255
ip router isis
!
interface GigabitEthernet 1/1/1
ip address 2.1.1.1 255.255.255.0
ip router isis
!
interface Tunnel 1
ip address 10.0.0.2 255.255.255.0
ip ospf 1 are 0
tunnel source 11.1.1.1
tunnel destination 11.2.2.2
mpls ip
!
interface Vlan701
ip address 75.1.1.1 255.255.255.0
ip ospf 1 area 0
```

### **Example: P-to-PE Tunneling**

The following shows basic MPLS configuration on two Provider (P) devices, P-to-PE tunneling, which use GRE tunnel to send traffic over non-MPLS network.

Figure 14: Topology for P-to-PE Tunneling

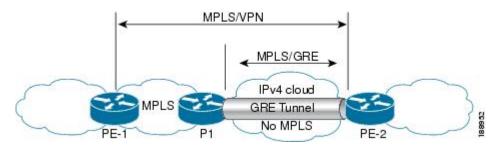

#### **PE1 Configuration**

```
! mpls ip
! interface GigabitEthernet 1/1/1 ip address 3.1.1.2 255.255.255.0 ip ospf 1 are 0 mpls ip
! interface Vlan701 ip address 75.1.1.1 255.255.255.0 ip ospf 1 area 0
!
```

### **P1 Configuration**

```
!
mpls ip
!
interface loopback 10
ip address 11.2.2.2 255.255.255.255
```

```
ip router isis
!
interface GigabitEthernet 1/1/1
ip address 1.1.1.1 255.255.255.0
ip router isis
!
interface GigabitEthernet 1/1/2
ip address 3.1.1.1 255.255.255.0
ip ospf 1 are 0
mpls ip
!
interface Tunnel 1
ip address 10.0.0.1 255.255.255.0
ip ospf 1 are 0
tunnel source 11.2.2.2
tunnel destination 11.1.1.1
```


#### **PE2 Configuration**

```
!
mpls ip
!
interface loopback 10
ip address 11.1.1.1 255.255.255.255
ip router isis
interface GigabitEthernet 1/1/1
ip address 2.2.1.1 255.255.255.0
ip router isis
interface Tunnel 1
ip address 10.0.0.2 255.255.255.0
ip ospf 1 are 0
tunnel source 11.1.1.1
tunnel destination 11.2.2.2
mpls ip
interface Vlan701
ip address 75.1.1.1 255.255.255.0
ip ospf 1 area 0
```

## **Example: P-to-P Tunneling**

The following example shows basic MPLS configuration on two Provider (P) devices, P-to-P tunneling, which use GRE tunnel to send traffic over non-MPLS network.

Figure 15: Topology for P-to-P Tunneling

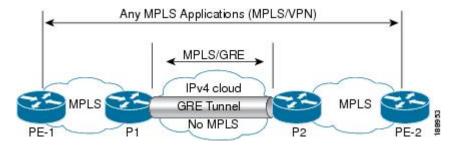

#### P1 Configuration

```
! interface Loopback10 ip address 10.1.1.1 255.255.255.255 ip router isis ! interface Tunnel10 ip address 10.10.10.1 255.255.252 ip ospf 1 area 0 mpls ip tunnel source 10.1.1.1 tunnel destination 10.2.1.1
```

#### **P2 Configuration**

```
! interface Tunnel10 ip address 10.10.10.2 255.255.255.252 ip ospf 1 area 0 mpls ip tunnel source 10.2.1.1 tunnel destination 10.1.1.1 ! interface Loopback10 ip address 10.2.1.1 255.255.255.255 ip router isis
```

## **Additional References for MPLS over GRE**

#### **Related Documents**

Related Topic	Document Title
For complete syntax and usage information for the commands used in this chapter.	See the MPLS Commands section of the Command Reference (Catalyst 9300 Series Switches)

## **Feature History for MPLS over GRE**

This table provides release and related information for the features explained in this module.

These features are available in all the releases subsequent to the one they were introduced in, unless noted otherwise.

Release	Feature	Feature Information
Cisco IOS XE Gibraltar 16.11.1	MPLS over GRE	MPLS over GRE feature provides a mechanism for tunneling Multiprotocol Label Switching (MPLS) packets over non-MPLS networks by creating a generic routing encapsulation (GRE) tunnel. The MPLS packets are encapsulated within the GRE tunnel packets, and the encapsulated packets traverse the non-MPLS network through the GRE tunnel. When GRE tunnel packets are received at the other side of the non-MPLS network, the GRE tunnel packet header is removed and the inner MPLS packet is forwarded to its final destination.

Use the Cisco Feature Navigator to find information about platform and software image support. To access Cisco Feature Navigator, go to https://cfnng.cisco.com/

http://www.cisco.com/go/cfn.

Feature History for MPLS over GRE



## **Configuring MPLS Layer 2 VPN over GRE**

- Information About MPLS Layer 2 VPN over GRE, on page 139
- How to Configure MPLS Layer 3 VPN over GRE, on page 141
- Configuration Examples for MPLS Layer 2 VPN over GRE, on page 142
- Additional References for Configuring MPLS Layer 2 VPN over GRE, on page 143
- Feature History for Configuring MPLS Layer 2 VPN over GRE, on page 143

## Information About MPLS Layer 2 VPN over GRE

The MPLS Layer 2 VPN over GRE feature provides a mechanism for tunneling Multiprotocol Label Switching (MPLS) packets over non-MPLS networks. This feature allows you to create a generic routing encapsulation (GRE) tunnel across a non-MPLS network. The MPLS packets are encapsulated within the GRE tunnel packets, and the encapsulated packets traverse the non-MPLS network through the GRE tunnel. When GRE tunnel packets are received at the other side of the non-MPLS network, the GRE tunnel packet header is removed and the inner MPLS packet is forwarded to its final destination.

To configure MPLS Layer 2 VPN over GRE, you must have configured either Virtual Private LAN Service (VPLS) or EoMPLS (Ethernet over MPLS).

### **Types of Tunneling Configurations**

The following sections provide information about the different types of tunneling configurations that are supported.

### **PE-to-PE Tunneling**


The provider edge-to-provider edge (PE-to-PE) tunneling configuration provides a scalable way to connect multiple customer networks across a non-MPLS network. With this configuration, traffic that is destined to multiple customer networks is multiplexed through a single GRE tunnel.

The PE device on one side of the non-MPLS network uses the routing protocols (that operate within the non-MPLS network) to learn about the PE device on the other side of the non-MPLS network. The learned routes that are established between the PE devices are then stored in the main or default routing table.

The opposing PE device uses Border Gateway Protocol (BGP) to learn about the routes that are associated with the customer networks that are behind the PE devices. These learned routes are not known to the non-MPLS network.

Figure 16: PE-to-PE Tunneling, on page 140 shows an end-to-end IP core from one PE device to another through the GRE tunnel that spans the non-MPLS network.


Figure 16: PE-to-PE Tunneling

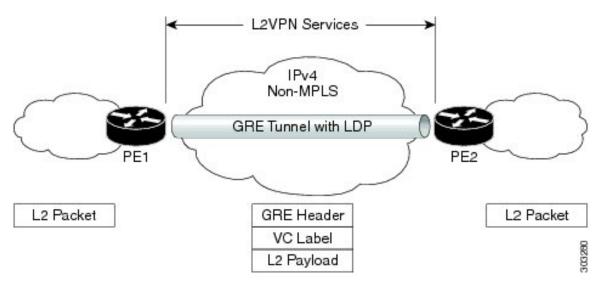

### **P-to-PE Tunneling**

Figure 17: P-to-PE Tunneling, on page 140 shows a method of connecting two MPLS segments (P2 to PE2) across a non-MPLS network. In this configuration, MPLS traffic that is destined to the other side of the non-MPLS network is sent through a single GRE tunnel.


Figure 17: P-to-PE Tunneling

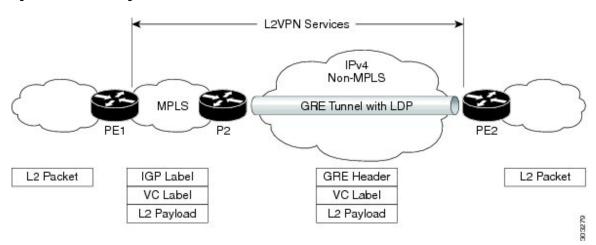

### **P-to-P Tunneling**

Figure 18: P-to-P Tunneling, on page 141 shows a method of connecting two MPLS segments (P1 to P2) across a non-MPLS network. In this configuration, MPLS traffic that is destined to the other side of the non-MPLS network is sent through a single GRE tunnel.

Figure 18: P-to-P Tunneling

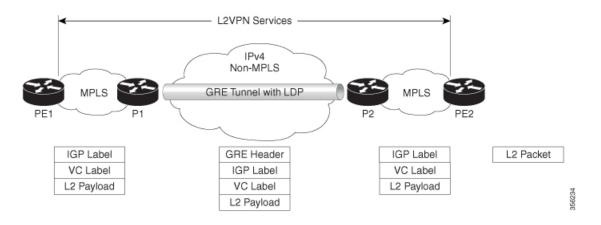

## **How to Configure MPLS Layer 3 VPN over GRE**

To configure the MPLS over GRE feature, you must create a GRE tunnel to span the non-MPLS networks. Perform the following procedure on the devices that are located at both ends of the GRE tunnel.

	Enables privileged EXEC mode.
	Enter your password, if prompted.
enable	
terminal	Enters global configuration mode.
configure terminal	
tunnel tunnel-number	Creates a tunnel interface and enters interface
	configuration mode.
onfig) # interface tunnel 1	
s ip-address mask	Assigns an IP address to the tunnel interface.
urce source-address	Configures the tunnel's source IP address.
onfig-if) # tunnel source 10.1.1.1	
	eterminal  configure terminal  tunnel tunnel-number  onfig) # interface tunnel 1  is ip-address mask  onfig-if) # ip address 10.0.0.1  255.0  urce source-address

	Command or Action	Purpose
Step 6	tunnel destination destination-address	Configures the tunnel's destination IP address.
	Example:	
	Device (config-if) # tunnel destination 10.1.1.2	
Step 7 mpls ip Enables MPLS	Enables MPLS on the tunnel's physical	
	Example:	interface.
	Device(config-if)# mpls ip	
Step 8	end	Returns to privileged EXEC mode.
	Example:	
	Device(config-if)# end	

## Configuration Examples for MPLS Layer 2 VPN over GRE

The following section provides an example for configuring MPLS Layer 2 VPN over GRE.

### **Example: Configuring a GRE Tunnel That Spans a non-MPLS Network**

The following examples show how to configure a generic GRE tunnel configuration that spans a non-MPLS network.

The following example shows the tunnel configuration on the PE1 device:

```
Device> enable
Device# configure terminal
Device(config)# interface Tunnel 1
Device(config-if)# ip address 10.1.1.1 255.255.255.0
Device(config-if)# tunnel source 10.0.0.1
Device(config-if)# tunnel destination 10.0.0.2
Device(config-if)# ip ospf 1 area 0
Device(config-if)# mpls ip
```

The following example shows the tunnel configuration on the PE2 device:

```
Device> enable
Device# configure terminal
Device(config)# interface Tunnel 1
Device(config-if)# ip address 10.1.1.2 255.255.255.0
Device(config-if)# tunnel source 10.0.0.2
Device(config-if)# tunnel destination 10.0.0.1
Device(config-if)# ip ospf 1 area 0
Device(config-if)# mpls ip
```

# Additional References for Configuring MPLS Layer 2 VPN over GRE

#### **Related Documents**

Related Topic	Document Title
Configuring VPLS	For more information, see Information About VPLS.
Configuring Ethernet-over-MPLS (EoMPLS) and Pseudowire Redundancy (PWR)	For more information, see How to Configure Ethernet-over-MPLS, on page 43

## **Feature History for Configuring MPLS Layer 2 VPN over GRE**

This table provides release and related information for the features explained in this module.

These features are available in all the releases subsequent to the one they were introduced in, unless noted otherwise.

Release	Feature	Feature Information
Cisco IOS XE Gibraltar 16.12.1	MPLS Layer 2 VPN over GRE	The MPLS Layer 2 VPN over GRE feature provides a mechanism for tunneling MPLS packets over non-MPLS networks.

Use the Cisco Feature Navigator to find information about platform and software image support. To access Cisco Feature Navigator, go to https://cfnng.cisco.com/

http://www.cisco.com/go/cfn.

Feature History for Configuring MPLS Layer 2 VPN over GRE



## **Configuring MPLS Layer 3 VPN over GRE**

- Prerequisites for MPLS Layer 3 VPN over GRE, on page 145
- Restrictions for MPLS Layer 3 VPN over GRE, on page 145
- Information About MPLS Layer 3 VPN over GRE, on page 146
- How to Configure MPLS Layer 3 VPN over GRE, on page 148
- Configuration Examples for MPLS Layer 3 VPN over GRE, on page 149
- Feature History for Configuring MPLS Layer 3 VPN over GRE, on page 155

## **Prerequisites for MPLS Layer 3 VPN over GRE**

- Ensure that your Multiprotocol Label Switching (MPLS) virtual private network (VPN) is configured.
- Ensure that the following routing protocols are configured:
  - Label Distribution Protocol (LDP): For MPLS label distribution.
  - Multiprotocol Border Gateway Protocol (MP-BGP): For VPN route and label distribution.
- We recommend that you use the Quality of Service (QoS) group value for defining QoS policies to traverse the protocol boundary. QoS group values are required because the ingress traffic enters the IP core from the MPLS network and the egress traffic leaves the IP core to enter the MPLS network.
- Before configuring a generic routing encapsulation (GRE) tunnel, configure a loopback interface (that is not attached to a virtual routing and forwarding [VRF]) interface with an IP address. This dummy loopback interface with an IPv4 address enables the internally created tunnel interface for IPv4 forwarding. You do not have to configure a loopback interface if the system has at least one interface that is not attached to the VRF and is configured with an IPv4 address.

## **Restrictions for MPLS Layer 3 VPN over GRE**

The MPLS Layer 3 VPN over GRE feature does not support the following:

• QoS service policies that are configured on the tunnel interface



Note

Although QoS service policies configured on the tunnel interface are not supported, QoS service policies configured on a physical interface or a sub-interface are supported.

- GRE options such as sequencing, checksum, and source route
- IPv6 GRE configurations
- Advanced features such as Carrier Supporting Carrier (CSC)

## Information About MPLS Layer 3 VPN over GRE

The MPLS Layer 3 VPN over GRE feature provides a mechanism for tunneling MPLS packets over non-MPLS networks. This feature allows you to create a GRE tunnel across a non-MPLS network. The MPLS packets are encapsulated within the GRE tunnel packets, and the encapsulated packets traverse the non-MPLS network through the GRE tunnel. When GRE tunnel packets are received at the other side of the non-MPLS network, the GRE tunnel packet header is removed and the inner MPLS packet is forwarded to its final destination.

## **Types of Tunneling Configurations**

The following sections provide information about the different types of tunneling configurations that are supported.

### **PE-to-PE Tunneling**

The provider edge-to-provider edge (PE-to-PE) tunneling configuration provides a scalable way to connect multiple customer networks across a non-MPLS network. With this configuration, traffic that is destined to multiple customer networks is multiplexed through a single GRE tunnel.

As shown in the Figure 19: PE-to-PE Tunneling, on page 147, the PE devices assign VRF numbers to the customer edge (CE) devices on each side of the non-MPLS network.


The PE devices use routing protocols such as Border Gateway Protocol (BGP), Open Shortest Path First (OSPF), or Routing Information Protocol (RIP) to learn about the IP networks behind the CE devices. The routes to the IP networks behind the CE devices are stored in the associated CE device's VRF routing table.

The PE device on one side of the non-MPLS network uses routing protocols (that operate within the non-MPLS network) to learn about the PE device on the other side of the non-MPLS network. The learned routes that are established between the PE devices are then stored in the main or default routing table.

The opposing PE device uses BGP to learn about the routes that are associated with the customer networks that are behind the PE devices. These learned routes are not known to the non-MPLS network.

Figure 19: PE-to-PE Tunneling, on page 147 shows BGP defining a static route to the BGP neighbor (the opposing PE device) through the GRE tunnel that spans the non-MPLS network. Because the routes that are learned by the BGP neighbor include the GRE tunnel next hop, all the customer network traffic is sent using the GRE tunnel.


Figure 19: PE-to-PE Tunneling

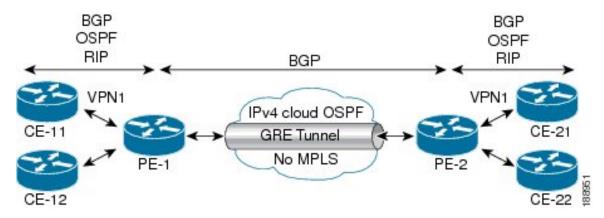

### P-to-PE Tunneling

Figure 20: P-to-PE Tunneling, on page 147 shows a method of connecting two MPLS segments (P2 to PE2) across a non-MPLS network. In this configuration, MPLS traffic that is destined to the other side of the non-MPLS network is sent through a single GRE tunnel.


Figure 20: P-to-PE Tunneling

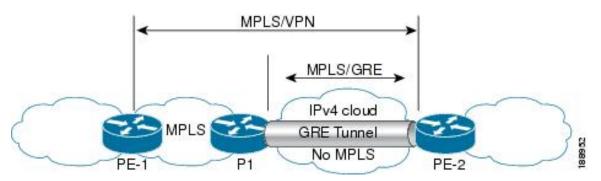

### **P-to-P Tunneling**

Figure 21: P-to-P Tunneling, on page 148 shows a method of connecting two MPLS segments (P1 to P2) across a non-MPLS network. In this configuration, MPLS traffic that is destined to the other side of the non-MPLS network is sent through a single GRE tunnel.

Figure 21: P-to-P Tunneling

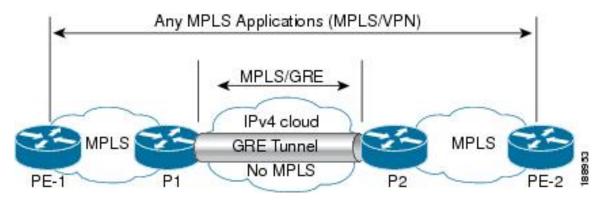

## **How to Configure MPLS Layer 3 VPN over GRE**

To configure the MPLS over GRE feature, you must create a GRE tunnel to span the non-MPLS networks. Perform the following procedure on the devices that are located at both ends of the GRE tunnel.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password, if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	interface tunnel tunnel-number	Creates a tunnel interface and enters interface
	Example:	configuration mode.
	Device(config)# interface tunnel 1	
Step 4	ip address ip-address mask	Assigns an IP address to the tunnel interface.
	Example:	
	Device(config-if)# ip address 10.0.0.1 255.255.255.0	
Step 5	tunnel source source-address	Configures the tunnel's source IP address.
	Example:	
	Device(config-if)# tunnel source 10.1.1.1	
Step 6	tunnel destination destination-address	Configures the tunnel's destination IP address.
	Example:	
	Device(config-if)# tunnel destination 10.1.1.2	

	Command or Action	Purpose
Step 7	mpls ip	Enables MPLS on the tunnel's physical
	Example:	interface.
	Device(config-if)# mpls ip	
Step 8	end	Returns to privileged EXEC mode.
	Example:	
	Device(config-if)# end	

## Configuration Examples for MPLS Layer 3 VPN over GRE

The following sections provide various configuration examples for MPLS Layer 3 VPN over GRE.

### **Example: Configuring MPLS Layer 3 VPN over GRE (PE-to-PE Tunneling)**

The following examples show how to configure Layer 3 VPN and the GRE tunnel from PE1 to PE2 (see Figure 19: PE-to-PE Tunneling, on page 147).

The following example shows how to configure a loopback interface on PE1:

```
Device> enable
Device# configure terminal
Device(config)# interface Loopback10
Device(config-if)# ip address 209.165.200.225 255.255.255
Device(config-if)# end
```

The following example shows how to configure a loopback interface on PE2:

```
Device> enable
Device# configure terminal
Device(config)# interface Loopback3
Device(config-if)# ip address 209.165.202.129 255.255.255
Device(config-if)# end
```

The following example shows how to advertise a loopback in IGP on PE1:

```
Device> enable
Device# configure terminal
Device(config)# router ospf 10
Device(config-router)# router-id 198.51.100.10
Device(config-router)# end
```

The following example shows how to configure a GRE tunnel, configure a different IGP instance on the tunnel, and enable MPLS on the tunnel on PE1:

```
Device> enable
Device# configure terminal
Device(config)# interface Tunnel13
Device(config-if)# ip address 203.0.113.200 255.255.255.248
Device(config-if)# ip ospf 11 area 0
Device(config-if)# mpls ip
Device(config-if)# tunnel source 209.165.200.225
Device(config-if)# tunnel destination 209.165.202.129
Device(config-if)# end
```

The following example shows how to configure a GRE tunnel, configure a different IGP instance on the tunnel, and enable MPLS on the tunnel on PE2:

```
Device> enable
Device# configure terminal
Device(config)# interface Tunnel31
Device(config-if)# ip address 203.0.113.201 255.255.255.248
Device(config-if)# ip ospf 11 area 0
Device(config-if)# mpls ip
Device(config-if)# tunnel source 209.165.202.129
Device(config-if)# tunnel destination 209.165.200.225
Device(config-if)# end
```

The following example shows how to advertise PE1 loopback IP for BGP in IGP instance configured on the tunnel:

```
Device> enable
Device# configure terminal
Device(config)# router ospf 11
Device(config-router)# router-id 198.51.100.11
Device(config-router)# network 192.0.1.1 0.0.0.0 area 0
Device(config-router)# end
```

The following example shows how to advertise PE2 loopback IP for BGP in IGP instance configured on the tunnel:

```
Device> enable
Device# configure terminal
Device(config)# router ospf 11
Device(config-router)# router-id 203.0.113.201
Device(config-router)# network 192.0.1.1 0.0.0.0 area 0
Device(config-router)# end
```

The following example shows how to configure VRF on PE1 where CE1 is connected:

```
Device> enable
Device# configure terminal
Device(config)# vrf definition vrf-1
Device (config-vrf)# rd 1:1
Device (config-vrf)# address-family ipv4
Device (config-vrf-af)# route-target import 1:2
Device (config-vrf-af)# route-target export 1:1
Device(config-vrf)# end
```

The following example shows how to configure VRF on PE2 where CE2 is connected:

```
Device> enable
Device# configure terminal
Device (config)# vrf definition vrf-1
Device (config-vrf)# rd 2:2
Device (config-vrf)# address-family ipv4
Device (config-vrf-af)# route-target import 1:1
Device (config-vrf-af)# route-target export 1:2
Device (config-vrf)# end
```

The following example shows how to configure PE1-CE1 interface:

```
Device> enable
Device# configure terminal
Device (config)# int po14.1
Device (config-subif)# encapsulation dot1Q 10
Device (config-subif)# vrf forwarding vrf-1
Device (config-subif)# ip address 14.2.1.1 255.255.255.0
Device(config-subif)# end
```

The following example shows how to configure PE2-CE2 interface:

```
Device> enable
Device# configure terminal
Device (config) # int po24.1
Device (config-subif) # encapsulation dot1Q 10
Device (config-subif) # vrf forwarding vrf-1
Device (config-subif) # ip address 24.2.1.1 255.255.255.0
Device (config-subif) # end
The following example shows how to configure PE1-CE1 External Border Gateway Protocol (EBGP):
Device> enable
Device# configure terminal
Device (config) # router bgp 65040
Device (config-router)# address-family ipv4 vrf vrf-1
Device (config-router-af) # neighbor 14.2.1.2 remote-as 65041
Device (config-router-af) # neighbor 14.2.1.2 activate
Device (config-router-af) # exit-address-family
Device (config-router) # end
The following example shows how to configure PE2-CE2 EBGP:
Device> enable
Device# configure terminal
Device (config) # router bgp 65040
Device (config-router) # address-family ipv4 vrf vrf-1
Device (config-router-af) # neighbor 24.2.1.2 remote-as 65041
Device (config-router-af) # neighbor 24.2.1.2 activate
Device (config-router-af) # exit-address-family
Device (config-router) # end
The following example shows how to configure PE1-PE2 MP-BGP on PE1:
Device> enable
Device# configure terminal
Device (config) # router bgp 65040
Device (config-router) # neighbor 192.0.2.1 remote-as 65040
Device (config-router) # neighbor 192.0.2.1 update-source Loopback0
Device (config-router) # address-family ipv4
Device (config-router-af) # neighbor 192.0.2.1 activate
Device (config-router-af) # exit
Device (config-router) # address-family vpnv4
Device (config-router-af) # neighbor 192.0.2.1 activate
Device (config-router-af)# neighbor 192.0.2.1 send-community both
Device (config-router-af) # exit
Device (config-router) # end
```

### **Example: Configuring MPLS Layer 3 VPN over GRE (P-to-PE Tunneling)**

The following examples show how to configure Layer 3 VPN on the PE devices (PE1 and PE2) and MPLS segment (P1), and the GRE tunnel from PE1 to P1 to PE2 (see Figure 20: P-to-PE Tunneling, on page 147).

The following example shows how to configure loopback interface for GRE tunnel for PE1:

```
Device> enable
Device# configure terminal
Device(config)# interface Loopback4
```

```
Device(config-if) # ip address 209.165.200.230 255.255.255
Device(config-if) # end
```

The following example shows how to configure loopback interface for GRE tunnel for P1:

```
Device> enable
Device# configure terminal
Device(config)# interface Loopback100
Device(config-if)# ip address 209.165.200.235 255.255.255
Device(config-if)# end
```

The following example shows how to configure interface from PE1-P1 and configure IGP:

```
Device> enable
Device# configure terminal
Device(config)# interface Port-channel11
Device(config-if)# no switchport
Device(config-if)# ip address 209.165.201.1 255.255.255.248
Device(config-if)# ip ospf 10 area 0
Device(config-if)# end
```

The following example shows how to configure interface from P1-PE1 and configure IGP:

```
Device> enable
Device# configure terminal
Device(config)# interface Port-channel1
Device(config-if)# no switchport
Device(config-if)# ip address 209.165.201.2 255.255.255.248
Device(config-if)# ip broadcast-address 209.165.201.31
Device(config-if)# ip ospf 10 area 0
Device(config-if)# end
```

The following example shows how to advertise loopback in IGP on PE1:

```
Device> enable
Device# configure terminal
Device(config)# router ospf 10
Device(config-router)# router-id 198.51.100.10
Device(config-router)# network 209.165.200.230 0.0.0.0 area 0
Device(config-router)# end
```

The following example shows how to advertise loopback in IGP on P1:

```
Device> enable
Device# configure terminal
Device(config)# router ospf 10
Device(config-router)# router-id 198.51.100.20
Device(config-router)# network 209.165.200.235 0.0.0.0 area 0
Device(config-router)# end
```

The following example shows how to configure GRE tunnel, configure an IGP instance on the tunnel, and enable MPLS on the tunnel on PE1:

```
Device> enable
Device# configure terminal
Device(config)# interface Tunnel111
Device(config-if)# ip address 209.165.202.140 255.255.255.248
Device(config-if)# ip ospf 11 area 0
Device(config-if)# mpls ip
Device(config-if)# tunnel source 209.165.200.230
Device(config-if)# tunnel destination 209.165.200.235
Device(config-if)# end
```

The following example shows how to configure GRE tunnel, configure an IGP instance on the tunnel, and enable MPLS on the tunnel on P1:

```
Device> enable
Device# configure terminal
Device(config) # interface Tunnel111
Device(config-if) # ip address 209.165.202.141 255.255.255.248
Device(config-if) # ip ospf 11 area 0
Device(config-if) # mpls ip
Device(config-if) # tunnel source 209.165.200.235
Device(config-if)# tunnel destination 209.165.200.230
Device(config-if)# end
The following example shows how to advertise PE loopback IP for BGP in tunnel's IGP instance
on PE1:
Device> enable
Device# configure terminal
Device(config) # interface Tunnel111
Device (config) # router ospf 11
Device(config-router)# router-id 198.51.100.11
Device(config-router) # network 192.0.1.1 0.0.0.0 area 0
Device(config-router) # end
The following example shows how to configure interface from PE2-P1, and configure IGP and
Device> enable
Device# configure terminal
Device(config) # interface Port-channel12
Device(config-if) # no switchport
Device(config-if)# ip address 209.165.201.1 255.255.255.248
Device(config-if) # ip ospf 11 area 0
Device(config-if) # mpls ip
Device(config-if)# end
The following example shows how to configure interface from P1-PE2, and configure IGP:
Device> enable
Device# configure terminal
Device(config) # interface Port-channel12
Device(config-if) # no switchport
Device (config-if) # ip address 209.165.201.2 255.255.255.248
Device(config-if)# ip ospf 11 area 0
Device (config-if) # mpls ip
Device(config-if)# end
The following example shows how to create VRF on PE1 where CE1 is connected:
Device> enable
Device# configure terminal
Device (config) # vrf definition vrf-1
Device (config-vrf) # rd 1:1
Device (config-vrf) # address-family ipv4
Device (config-vrf-af) # route-target import 1:2
Device (config-vrf-af) # route-target export 1:1
Device (config-vrf-af) # exit
Device (config-vrf) # end
The following example shows how to create VRF on PE2 where CE2 is connected:
Device> enable
Device# configure terminal
Device (config) # vrf definition vrf-1
Device (config-vrf) # rd 2:2
Device (config-vrf) # address-family ipv4
Device (config-vrf-af) # route-target import 1:1
Device (config-vrf-af)# route-target export 1:2
```

```
Device (config-vrf-af)# exit
Device (config-vrf)# end
```

The following example shows how to configure PE1-CE1 interface:

```
Device> enable
Device# configure terminal
Device (config)# int po14.1
Device (config-subif)# encapsulation dot1Q 10
Device (config-subif)# vrf forwarding vrf-1
Device (config-subif)# ip address 14.2.1.1 255.255.255.0
Device (config-subif)# exit
Device (config)# end
```

The following example shows how to configure PE2-CE2 interface:

```
Device> enable
Device# configure terminal
Device (config)# int po24.1
Device (config-subif)# encapsulation dot1Q 10
Device (config-subif)# vrf forwarding vrf-1
Device (config-subif)# ip address 24.2.1.1 255.255.255.0
Device (config-subif)# exit
Device (config)# end
```

The following example shows how to configure PE1-CE1 EBGP:

```
Device> enable
Device# configure terminal
Device (config)# router bgp 65040
Device (config-router)# address-family ipv4 vrf vrf-1
Device (config-router-af)# neighbor 14.2.1.2 remote-as 65041
Device (config-router-af)# neighbor 14.2.1.2 activate
Device (config-router-af)# exit-address-family
Device (config-router)# end
```

The following example shows how to configure PE2-CE2 EBGP:

```
Device> enable
Device# configure terminal
Device (config)# router bgp 65040
Device (config-router)# address-family ipv4 vrf vrf-1
Device (config-router-af)# neighbor 24.2.1.2 remote-as 65041
Device (config-router-af)# neighbor 24.2.1.2 activate
Device (config-router-af)# exit-address-family
Device (config-router)# end
```

The following example shows how to configure PE1-PE2 MP-BGP on PE1:

```
Device> enable

Device# configure terminal

Device (config)# router bgp 65040

Device (config-router)# neighbor 192.0.2.1 remote-as 65040

Device (config-router)# neighbor 192.0.2.1 update-source Loopback0

Device (config-router)# address-family ipv4

Device (config-router-af)# neighbor 192.0.2.1 activate

Device (config-router-af)# exit

Device (config-router)# address-family vpnv4

Device (config-router)# neighbor 192.0.2.1 activate

Device (config-router-af)# neighbor 192.0.2.1 send-community both

Device (config-router-af)# exit

Device (config-router)# end
```

The following example shows how to configure PE2-PE1 MP-BGP on PE2:

```
Device> enable

Device# configure terminal

Device (config)# router bgp 65040

Device (config-router)# neighbor 192.0.1.1 remote-as 65040

Device (config-router)# neighbor 192.0.1.1 update-source Loopback0

Device (config-router)# address-family ipv4

Device (config-router-af)# neighbor 192.0.1.1 activate

Device (config-router-af)# exit

Device (config-router)# address-family vpnv4

Device (config-router)# neighbor 192.0.1.1 activate

Device (config-router-af)# neighbor 192.0.1.1 send-community both

Device (config-router-af)# exit

Device (config-router)# end
```

## Feature History for Configuring MPLS Layer 3 VPN over GRE

This table provides release and related information for the features explained in this module.

These features are available in all the releases subsequent to the one they were introduced in, unless noted otherwise.

Release	Feature	Feature Information
Cisco IOS XE Gibraltar 16.12.1	MPLS Layer 3 VPN over GRE	The MPLS Layer 3 VPN over GRE feature provides a mechanism for tunneling MPLS packets over a non-MPLS network.

Use the Cisco Feature Navigator to find information about platform and software image support. To access Cisco Feature Navigator, go to <a href="https://cfnng.cisco.com/">https://cfnng.cisco.com/</a>

http://www.cisco.com/go/cfn.

Feature History for Configuring MPLS Layer 3 VPN over GRE



## **Configuring MPLS QoS**

- Classifying and Marking MPLS EXP, on page 157
- Information About MPLS QoS, on page 158
- How to Configure MPLS QoS, on page 159
- Configuration Examples for MPLS QoS, on page 165
- Additional References, on page 168
- Feature History for QoS MPLS EXP, on page 168

## Classifying and Marking MPLS EXP

The QoS EXP Matching feature allows you to classify, mark and queue network traffic by modifying the Multiprotocol Label Switching (MPLS) experimental bits (EXP) field. This module contains conceptual information and the configuration tasks for classifying and marking network traffic using the MPLS EXP field.

### **Prerequisites for MPLS QoS**

• The switch must be configured as an MPLS provider edge (PE) or provider (P) router, which can include the configuration of a valid label protocol and underlying IP routing protocols.

### **Restrictions for MPLS QoS**

- MPLS classification and marking can only occur in an operational MPLS network.
- If a packet is classified by IP type of service (ToS) or class of service (CoS) at ingress, it cannot be reclassified by MPLS EXP at egress (imposition case). However, if a packet is classified by MPLS at ingress, it can be reclassified by IP ToS, CoS, or Quality of Service (QoS) group at egress (disposition case).
- To apply QoS on traffic across protocol boundaries, use QoS-group. You can classify and assign ingress traffic to the QoS-group. Thereafter, you can use the QoS-group at egress to classify and apply QoS.
- If a packet is encapsulated in MPLS, the MPLS payload cannot be checked for other protocols, such as IP, for classification or marking. Only MPLS EXP marking affects packets that are encapsulated by MPLS.

• The short pipe mode is not supported to transport packets through the MPLS network. You can transport packets using any one of the following modes—uniform mode or pipe mode.

### Information About MPLS QoS

This section provides information about MPLS QoS:

### MPLS QoS Overview

MPLS QoS functionality enables network administrators to provide differentiated services across an MPLS network. Network administrators can satisfy a wide range of networking requirements by specifying the class of service applicable to each transmitted IP packet. Different classes of service can be established for IP packets by setting the IP precedence bit in the header of each packet. Classification, remarking, and queuing on an MPLS network is performed over MPLS EXP bits. In the MPLS network the packets are differentiated by the MPLS EXP field marking and treated appropriately, depending on the weighted early random detection (WRED) configuration.

MPLS EXP field in MPLS packet allows you to:

Classify traffic

The classification process selects the traffic to be marked. Classification accomplishes this by partitioning traffic into multiple priority levels, or classes of service. Traffic classification is the primary component of class-based QoS provisioning. For more information, see the "Classifying Network Traffic" module.

Police and mark traffic

Policing causes traffic that exceeds the configured rate to be discarded or marked to a different drop level. Marking traffic is a way to identify packet flows to differentiate them. Packet marking allows you to partition your network into multiple priority levels or classes of service. For more information, see the "Marking Network Traffic" module.

· Queueing

Queueing helps prevent traffic congestion. This includes priority level queueing, weighted tail drop (WTD), scheduling, shaping and weighted random early detection (WRED) features.

### **MPLS Experimental Field**

The MPLS experimental bits (EXP) field is a 3-bit field in the MPLS header that you can use to define the QoS treatment (per-hop behavior) that a node should give to a packet. In an IP network, the DiffServ Code Point (DSCP) (a 6-bit field) defines a class and drop precedence. The EXP bits can be used to carry some of the information encoded in the IP DSCP and can also be used to encode the dropping precedence.

By default, Cisco IOS Software copies the three most significant bits of the DSCP or the IP precedence of the IP packet to the EXP field in the MPLS header. This action happens when the MPLS header is initially imposed on the IP packet. However, you can also set the EXP field by defining a mapping between the DSCP or IP precedence and the EXP bits. This mapping is configured using the **set mpls experimental** or **police** commands. For more information, see the "How to Classify and Mark MPLS EXP" section.



Note

A policy map configured with **set ip dscp** is not supported on the provider edge device because the policy action for MPLS label imposition node should be based on **set mpls experimental imposition** value. However, a policy map with action **set ip dscp** is supported when both the ingress and egress interfaces are Layer 3 ports.

You can perform MPLS EXP marking operations using table-maps. It is recommended to assign QoS-group to a different class of traffic in ingress policy and translate QoS-group to DSCP and EXP markings in egress policy using table-map.

If a service provider does not want to modify the value of the IP precedence field in packets transported through the network, they can use the MPLS EXP field value to classify and mark IP packets.

By choosing different values for the MPLS EXP field, you can mark critical packets so that those packets have priority if network congestion occurs.

WRED monitors network traffic to anticipate and prevent congestion at common network and internetwork bottlenecks. WRED can selectively discard lower priority traffic when an interface becomes congested. This feature can also provide differentiated performance characteristics for different classes of service.

There are two ways to transport packets through the MPLS network:

Uniform mode: Uniform mode of transferring packets operates on one layer of QoS. The Provider Edge at ingress copies the DSCP information from the incoming IP packet into the MPLS EXP bits of the imposed labels and the IP precedence bits are mapped to the MPLS EXP field. As the EXP bits travel through the core, they may or may not be modified by the intermediate devices on the network. The Provider Edge at egress copies the EXP bits to the DSCP bits of the newly exposed IP packet.

Pipe mode: Pipe mode of transferring packets operates on two layers of QoS. An underlying QoS for the data that remains unchanged when traversing the core. A per-core QoS, which is separate from that of the underlying IP packets. The DSCP information is saved and stored as the packet travels through the MPLS network. The MPLS EXP label is applied by the PE at ingress but the IP precedence bits are not stored. At egress, the original IP precedence value is preserved.

## **Benefits of MPLS EXP Classification and Marking**

If a service provider does not want to modify the value of the IP precedence field in packets transported through the network, they can use the MPLS EXP field value to classify and mark IP packets.

By choosing different values for the MPLS EXP field, you can mark critical packets so that those packets have priority if network congestion occurs.

## **How to Configure MPLS QoS**

This section provides information about how to configure MPLS QoS:

## **Classifying MPLS Encapsulated Packets**

You can use the **match mpls experimental topmost** command to define traffic classes based on the packet EXP values, inside the MPLS domain. You can use these classes to define services policies to mark the EXP traffic using the **police** command.

#### **Procedure**

	Command or Action	Purpose	
Step 1	enable	Enables privileged EXEC mode.	
	Example:	• Enter your password if prompted.	
	Device> enable		
Step 2	configure terminal	Enters global configuration mode.	
	Example:		
	Device# configure terminal		
Step 3	class-map [match-all   match-any] class-map-name	Creates a class map to be used for matching traffic to a specified class, and enters class-map	
	*	configuration mode.	
	Example:	• Enter the class map name.	
	Device(config)# class-map exp3	and the class map armie.	
Step 4	match mpls experimental topmost	Specifies the match criteria.	
	mpls-exp-value	Note The match mpls experimental	
	Example:	topmost command classifies traffic on the basis of the EXP	
	Device(config-cmap)# match mpls experimental topmost 3	value in the topmost label header.	
Step 5	end	(Optional) Returns to privileged EXEC mode.	
	Example:		
	Device(config-cmap)# end		

## **Marking MPLS EXP on the Outermost Label**

Perform this task to set the value of the MPLS EXP field on imposed label entries.

#### Before you begin

In typical configurations, marking MPLS packets at imposition is used with ingress classification on IP ToS or CoS fields.



Note

For IP imposition marking, the IP precedence value is copied to the MPLS EXP value by default.



Note

The egress policy on provider edge works with MPLS EXP class match, only if there is a remarking policy at ingress. The provider edge at ingress is an IP interface and only DSCP value is trusted by default. If you do not configure remarking policy at ingress the label for queueing is generated based on DSCP value and not MPLS EXP value. However, a transit provider router works without configuring remarking policy at ingress as the router works on MPLS interfaces.



Note

The **set mpls experimental imposition** command works only on packets that have new or additional MPLS labels added to them.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	policy-map policy-map-name	Specifies the name of the policy map to be
	Example:	created and enters policy-map configuration mode.
	Device(config)# policy-map mark-up-exp-2	Enter the policy map name.
Step 4	class class-map-name	Creates a class map to be used for matching
	Example:	traffic to a specified class, and enters class-map configuration mode.
	Device(config-pmap)# class prec012	• Enter the class map name.
Step 5	set mpls experimental imposition mpls-exp-value	Sets the value of the MPLS EXP field on top label.
	Example:	
	Device(config-pmap-c)# set mpls experimental imposition 2	
Step 6	end	(Optional) Returns to privileged EXEC mode.
	Example:	
	Device(config-pmap-c)# end	

## **Marking MPLS EXP on Label Switched Packets**

Perform this task to set the MPLS EXP field on label switched packets.

### Before you begin



Note

The **set mpls experimental topmost** command marks EXP for the outermost label of MPLS traffic. Due to this marking at ingress policy, the egress policy must include classification based on the MPLS EXP values.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	policy-map policy-map-name	Specifies the name of the policy map to be
	Example:	created and enters policy-map configuration mode.
	Device(config) # policy-map mark-up-exp-2	• Enter the policy map name.
Step 4	class class-map-name	Creates a class map to be used for matching
	Example:	traffic to a specified class, and enters class-map configuration mode.
	Device(config-pmap)# class-map exp012	• Enter the class map name.
Step 5	set mpls experimental topmost	Sets the MPLS EXP field value in the topmos
	mpls-exp-value	label on the output interface.
	Example:	
	Device(config-pmap-c)# set mpls experimental topmost 2	
Step 6	end	(Optional) Returns to privileged EXEC mode.
	Example:	
	Device(config-pmap-c)# end	

## **Configuring Conditional Marking**

To conditionally set the value of the MPLS EXP field on all imposed label, perform the following task:

### Before you begin



Note

The **set-mpls-exp-topmost-transmit** action affects MPLS encapsulated packets only. The **set-mpls-exp-imposition-transmit** action affects any new labels that are added to the packet.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	policy-map policy-map-name	Specifies the name of the policy map to be created and enters policy-map configuration mode.
	Example:	
	Device(config)# policy-map ip2tag	Enter the policy map name.
Step 4	class class-map-name	Creates a class map to be used for matching
	Example:	traffic to a specified class, and enters policy-map class configuration mode.
	Device(config-pmap)# class iptcp	• Enter the class map name.
Step 5	police cir bps bc pir bps be	Defines a policer for classified traffic and enters
	Example:	policy-map class police configuration mode.
	Device(config-pmap-c)# police cir 1000000 pir 2000000	
Step 6	conform-action transmit	Defines the action to take on packets that
	Example:	conform to the values specified by the policer.
	Device(config-pmap-c-police)# conform-action transmit 3	• In this example, if the packet conforms to the committed information rate (cir) or is within the conform burst (bc) size, the MPLS EXP field is set to 3.

	Command or Action	Purpose
Step 7	exceed-action set-mpls-exp-topmost-transmit exp table table-map-name	Defines the action to take on packets that exceed the values specified by the policer.
	Example:	
	Device(config-pmap-c-police)# exceed-action set-mpls-exp-topmost-transmit exp table dscp2exp	
Step 8	violate-action drop  Example:	Defines the action to take on packets whose rate exceeds the peak information rate (pir) and is outside the bc and be ranges.
	Device(config-pmap-c-police)# violate-action drop	You must specify the exceed action before you specify the violate action.
		• In this example, if the packet rate exceeds the pir rate and is outside the bc and be ranges, the packet is dropped.
Step 9	end	(Optional) Returns to privileged EXEC mode.
	Example:	
	Device(config-pmap-c-police)# end	

## **Configuring WRED for MPLS EXP**

Perform this task to enable WRED for MPLS EXP.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	policy-map policy-map-name	Specifies the name of the policy map to be
	Example:	created and enters policy-map configuration mode.
	Device(config)# policy-map wred_exp	• Enter the policy map name.

	Command or Action	Purpose
Step 4	class class-map-name  Example:	Creates a class map to be used for matching traffic to a specified class, and enters class-map configuration mode.
	Device(config-pmap)# class exp	• Enter the class map name.
Step 5	bandwidth {kbps   remainingpercentage   percentpercentage }  Example:	Specify either the bandwidth allocated for a class belonging to a policy map or the traffic shaping.
	Device(config-pmap-c) # bandwidth percent 30	
Step 6	anbridi@ggt@lacked.ch@lackepnphisclpsisclp	Configures WRED to use the MPLS EXP value when it calculates the drop probability for the packet.
	Device(config-pmap-c)# random-detect mpls-exp- based	
Step 7	random-detectexpexp-valuepercentmin-threshold max-threshold	Specifies the MPLS EXP value, minimum and maximum thresholds, in percentage.
	Example:	
	Device(config-pmap-c)# random-detect exp 1 10 20 Device(config-pmap-c)# random-detect exp 2 30 40 Device(config-pmap-c)# random-detect exp 2 40 80	
Step 8	end	(Optional) Returns to privileged EXEC mode.
	Example:	
	Device(config-pmap-c-police)# end	

## **Configuration Examples for MPLS QoS**

This section provides configuration examples for MPLS QoS:

## **Example: Classifying MPLS Encapsulated Packets**

#### **Defining an MPLS EXP Class Map**

The following example defines a class map named exp3 that matches packets that contains MPLS experimental value 3:

```
Device(config) # class-map exp3
Device(config-cmap) # match mpls experimental topmost 3
Device(config-cmap) # exit
```

#### Defining a Policy Map and Applying the Policy Map to an Ingress Interface

The following example uses the class map created in the example above to define a policy map. This example also applies the policy map to a physical interface for ingress traffic.

```
Device(config) # policy-map change-exp-3-to-2
Device(config-pmap) # class exp3
Device(config-pmap-c) # set mpls experimental topmost 2
Device(config-pmap) # exit
Device(config) # interface GigabitEthernet 0/0/0
Device(config-if) # service-policy input change-exp-3-to-2
Device(config-if) # exit
```

#### Defining a Policy Map and Applying the Policy Map to an Egress Interface

The following example uses the class map created in the example above to define a policy map. This example also applies the policy map to a physical interface for egress traffic.

```
Device(config)# policy-map WAN-out
Device(config-pmap)# class exp3
Device(config-pmap-c)# shape average 10000000
Device(config-pmap-c)# exit
Device(config-pmap)# exit
Device(config)# interface GigabitEthernet 0/0/0
Device(config-if)# service-policy output WAN-out
Device(config-if)# exit
```

### **Example: Marking MPLS EXP on Outermost Label**

#### **Defining an MPLS EXP Imposition Policy Map**

The following example defines a policy map that sets the MPLS EXP imposition value to 2 based on the IP precedence value of the forwarded packet:

```
Device# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Device(config)# class-map prec012
Device(config-cmap)# match ip prec 0 1 2
Device(config-cmap)# exit
Device(config)# policy-map mark-up-exp-2
Device(config-pmap)# class prec012
Device(config-pmap-c)# set mpls experimental imposition 2
Device(config-pmap-c)# exit
Device(config-pmap)# exit
```

#### Applying the MPLS EXP Imposition Policy Map to a Main Interface

The following example applies a policy map to Gigabit Ethernet interface 0/0/0:

```
Device# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Device(config)# interface GigabitEthernet 0/0/0
Device(config-if)# service-policy input mark-up-exp-2
Device(config-if)# exit
```

### **Example: Marking MPLS EXP on Label Switched Packets**

#### **Defining an MPLS EXP Label Switched Packets Policy Map**

The following example defines a policy map that sets the MPLS EXP topmost value to 2 according to the MPLS EXP value of the forwarded packet:

```
Device# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Device(config)# class-map exp012
Device(config-cmap)# match mpls experimental topmost 0 1 2
Device(config-cmap)# exit
Device(config-cmap)# policy-map mark-up-exp-2
Device(config-pmap)# class exp012
Device(config-pmap-c)# set mpls experimental topmost 2
Device(config-pmap-c)# exit
Device(config-pmap)# exit
```

#### Applying the MPLS EXP Label Switched Packets Policy Map to a Main Interface

The following example shows how to apply the policy map to a main interface:

```
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Device(config)# interface GigabitEthernet 0/0/0
Device(config-if)# service-policy input mark-up-exp-2
Device(config-if)# exit
```

### **Example: Configuring Conditional Marking**

The example in this section creates a policer for the **iptcp** class, which is part of the **ip2tag** policy map, and attaches the policy map to the Gigabit Ethernet interface.

```
Device(config) # policy-map ip2tag
Device(config-pmap) # class iptcp
Device(config-pmap-c) # police cir 1000000 pir 2000000
Device(config-pmap-c-police) # conform-action transmit
Device(config-pmap-c-police) # exceed-action set-mpls-exp-imposition-transmit 2
Device(config-pmap-c-police) # violate-action drop
Device(config-pmap-c-police) # exit
Device(config-pmap-c) # exit
Device(config-pmap) # exit
Device(config) # interface GigabitEthernet 0/0/1
Device(config-if) # service-policy input ip2tag
```

### **Example: Configuring WRED for MPLS EXP**

The example in this section enables WRED for MPLS EXP.

```
Device# configure terminal

Device(config)# policy-map wred_exp

Device(config-pmap-c)# bandwidth percent 30

Device(config-pmap-c)# random-detect mpls-exp-based

Device(config-pmap-c)# random-detect exp 1 10 20

Device(config-pmap-c)# random-detect exp 2 30 40

Device(config-pmap-c)# random-detect exp 2 40 80
```

#### **Displaying WRED threshold labels**

Use the **show policy-map**-name command to verify WRED Configuration for MPLS EXP.

The following sample output displays WRED threshold labels.

## **Additional References**

#### **Related Documents**

Related Topic	Document Title
QoS commands	Cisco IOS Quality of Service Solutions Command Reference

## Feature History for QoS MPLS EXP

This table provides release and related information for features explained in this module.

These features are available on all releases subsequent to the one they were introduced in, unless noted otherwise.

Release	Feature	Feature Information
Cisco IOS XE Everest 16.5.1a	QoS MPLS EXP	The QoS EXP Matching feature allows you to classify, mark and queue network traffic by modifying the Multiprotocol Label Switching (MPLS) experimental bits (EXP) field.
Cisco IOS XE Amsterdam 17.3.1	MPLS QoS - WRED	Introduces support for weighted random early detection (WRED) in MPLS Quality of Service (QoS). This feature configures WRED to use the MPLS experimental bits (EXP) to calculate the drop probability of a packet.

Use Cisco Feature Navigator to find information about platform and software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>.

Feature History for QoS MPLS EXP



# **Configuring MPLS Static Labels**

• MPLS Static Labels, on page 171

# **MPLS Static Labels**

This document describes the Cisco MPLS Static Labels feature. The MPLS Static Labels feature provides the means to configure the binding between a label and an IPv4 prefix statically.

# **Prerequisites for MPLS Static Labels**

The network must support the following Cisco IOS features before you enable MPLS Static Labels:

- Multiprotocol Label Switching (MPLS)
- Cisco Express Forwarding

# **Restrictions for MPLS Static Labels**

- On a provider edge (PE) router for MPLS VPNs, there's no mechanism for statically binding a label to a customer network prefix (VPN IPv4 prefix).
- MPLS Static Crossconnect is not supported.
- MPLS Static Labels is not supported for label-controlled Asynchronous Transfer Mode (lc-atm).
- MPLS static bindings are not supported for local prefixes.
- VRF aware Static Labels is not supported,

# **Information About MPLS Static Labels**

### **MPLS Static Labels Overview**

Generally, label switching routers (LSRs) dynamically learn the labels they should use to label-switch packets. They do this by means of label distribution protocols that include:

- Label Distribution Protocol (LDP), the Internet Engineering Task Force (IETF) standard, used to bind labels to network addresses.
- Resource Reservation Protocol (RSVP) used to distribute labels for traffic engineering (TE)
- Border Gateway Protocol (BGP) used to distribute labels for Multiprotocol Label Switching (MPLS) Virtual Private Networks (VPNs)

To use a learned label to label-switch packets, an LSR installs the label into its Label Forwarding Information Base (LFIB).

The MPLS Static Labels feature provides the means to configure the binding between a label and an IPv4 prefix statically.

# **Benefits of MPLS Static Labels**

#### Static Bindings Between Labels and IPv4 Prefixes

You can configure static bindings between labels and IPv4 prefixes to support MPLS hop-by-hop forwarding through neighbor routers that don't implement LDP label distribution.

# **How to Configure MPLS Static Labels**

# **Configuring MPLS Static Prefix Label Bindings**

To configure MPLS static prefix/label bindings, use the following commands beginning in global configuration mode:

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode. Enter your
	Example:	password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	mpls label range min-label max-label [static min-static-label max-static-label]	Specifies a range of labels for use with MPLS Static Labels feature.
	Example:	(Default is no labels reserved for static assignment.)
	Device(config)# mpls label range 200 100000 static 16 199	
Step 4	mpls static binding ipv4 prefix mask [input output nexthop] label	Specifies static binding of labels to IPv4 prefixes.

Command or Action	Purpose
	Bindings specified are installed automatically in the MPLS forwarding table as routing
Device(config)# mpls static binding ipv4 10.0.0.0 255.0.0.0 55	demands.

# **Verifying MPLS Static Prefix Label Bindings**

To verify the configuration for MPLS static prefix/label bindings, use this procedure:

#### **Procedure**

**Step 1** Enter **show mpls label range** command. The output shows that the new label ranges do not take effect until a reload occurs:

#### **Example:**

```
Device# show mpls label range

Downstream label pool: Min/Max label: 16/983039

[Configured range for next reload: Min/Max label: 200/100000]

Range for static labels: Min/Max/Number: 16/199
```

The following output from the **show mpls label range** command, executed after a reload, indicates that the new label ranges are in effect:

#### Example:

```
Device# show mpls label range

Downstream label pool: Min/Max label: 200/100000

Range for static labels: Min/Max/Number: 16/199
```

**Step 2** Enter the **show mpls static binding ipv4** command to show the configured static prefix/label bindings:

### **Example:**

```
Device# show mpls static binding ipv4

10.17.17.17/32: Incoming label: 251 (in LIB)
Outgoing labels:
    10.0.0.1 18

10.18.18.18/32: Incoming label: 201 (in LIB)
Outgoing labels:
10.0.0.1 implicit-null
```

Step 3 Use the **show mpls forwarding-table** command to determine which static prefix/label bindings are currently in use for MPLS forwarding.

#### Example:

# Device# show mpls forwarding-table Local Outgoing Prefix Bytes tag Outgoing Next Hop tag tag or VC or Tunnel Id switched interface 201 Pop tag 10.18.18.18/32 0 PO1/1/0 point2point

	2/35	10.18.18.18/32	0	AT4/1/0.1	point2point
251	18	10.17.17.17/32	0	PO1/1/0	point2point

# **Monitoring and Maintaining MPLS Static Labels**

To monitor and maintain MPLS Static Labels, use one or more of the following commands:

#### **Procedure**

	Command or Action	Purpose
Step 1	enable Example:	Enables privileged EXEC mode. Enter your password if prompted.
	Devie> enable	
Step 2	show mpls forwarding-table	Displays the contents of the MPLS LFIB.
	Example:	
	Device# show mpls forwarding-table	
Step 3	show mpls label range	Displays information about the static label
	Example:	range.
	Device# show mpls label range	
Step 4	show mpls static binding ipv4	Displays information about the configured static
	Example:	prefix/label bindings.
	Device# show mpls static binding ipv4	

# **Configuration Examples for MPLS Static Labels**

# **Example: Configuring MPLS Static Prefixes Labels**

In the following output, the **mpls label range** command reconfigures the range used for dynamically assigned labels 16–983039 to 200–100000. It configures a static label range of 16–199.

```
Device# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# mpls label range 200 100000 static 16 199
% Label range changes take effect at the next reload.
Router(config)# end
```

In the following output, the **show mpls label range** command indicates that the new label ranges don't take effect until a reload occurs:

```
Device# show mpls label range
```

```
Downstream label pool: Min/Max label: 16/983039 [Configured range for next reload: Min/Max label: 200/100000] Range for static labels: Min/Max/Number: 16/199
```

In the following output, the **show mpls label range** command, executed after a reload, indicates that the new label ranges are in effect:

```
Device# show mpls label range

Downstream label pool: Min/Max label: 200/100000

Range for static labels: Min/Max/Number: 16/199
```

In the following output, the **mpls static binding ipv4** commands configure static prefix/label bindings. They also configure input (local) and output (remote) labels for various prefixes:

```
Device# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.

Device(config)# mpls static binding ipv4 10.0.0.0 255.0.0.0 55

Device(config)# mpls static binding ipv4 10.0.0.0 255.0.0.0 output 10.0.0.66 2607

Device(config)# mpls static binding ipv4 10.6.0.0 255.255.0.0 input 17

Device(config)# mpls static binding ipv4 10.0.0.0 255.0.0.0 output 10.13.0.8 explicit-null

Device(config)# end
```

In the following output, the **show mpls static binding ipv4** command displays the configured static prefix/label bindings:

```
Device# show mpls static binding ipv4
```

```
10.0.0.0/8: Incoming label: none;
Outgoing labels:
10.13.0.8 explicit-null
10.0.0.0/8: Incoming label: 55 (in LIB)
Outgoing labels:
10.0.0.66 2607
10.66.0.0/16: Incoming label: 17 (in LIB)
Outgoing labels: None
```

# **Additional References**

#### **Related Documents**

Related Topic	Document Title
MPLS commands	Multiprotocol Label Switching Command Reference

#### **Standards**

Standard	Title
No new or modified standards are supported by this feature. Support for existing standards has not been modified by this feature.	

#### **MIBs**

MIB	MIBs Link
feature, and support for existing MIBs has not been modified by this feature.	To locate and download MIBs for selected platforms, Cisco software releases, and feature sets, use Cisco MIB Locator found at the following URL:  http://www.cisco.com/go/mibs

### **RFCs**

RFC	Title
No new or modified RFCs are supported by this feature, and support for existing RFCs has not been modified by this feature.	
induited by this reduce.	

### **Technical Assistance**

Description	Link
The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password.	

# **Feature History for MPLS Static Labels**

This table provides release and related information for features explained in this module.

These features are available on all releases subsequent to the one they were introduced in, unless noted otherwise.

Release	Feature	Feature Information
Cisco IOS XE Everest 16.5.1a	MPLS Static Labels	The MPLS Static Labels feature provides the means to configure the binding between a label and an IPv4 prefix statically.
		The following commands were introduced or modified: debug mpls static binding, mpls label range, mpls static binding ipv4, show mpls label range, show mpls static binding ipv4

Use Cisco Feature Navigator to find information about platform and software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>.



# Configuring Virtual Private LAN Service (VPLS) and VPLS BGP-Based Autodiscovery

- Restrictions for VPLS, on page 177
- Information About VPLS, VPLS BGP-Based Autodiscovery and Flow-Aware Transport, on page 177
- How to Configure VPLS, VPLS BGP-Based Autodiscovery and Flow-Aware Transport, on page 181
- Configuration Examples for VPLS and VPLS BGP-Based Autodiscovery, on page 201
- Feature History for VPLS and VPLS BGP-Based Autodiscovery, on page 206

# **Restrictions for VPLS**

- Integrated Routing and Bridging (IRB) configuration is not supported.
- Layer 2 protocol tunneling configuration is not supported
- Virtual Circuit Connectivity Verification (VCCV) ping with explicit null is not supported.
- The switch is supported if configured only as a spoke in hierarchical Virtual Private LAN Services (VPLS) and not as a hub.
- Layer 2 VPN interworking functions are not supported.
- ip unnumbered command is not supported in Multiprotocol Label Switching (MPLS) configuration.
- Virtual Circuit (VC) statistics are not displayed for flood traffic in the output of **show mpls 12 vc vcid detail** command.
- Dot1q tunnel configuration is not supported in the attachment circuit.

# Information About VPLS, VPLS BGP-Based Autodiscovery and Flow-Aware Transport


The following sections provide information about VPLS, VPLS BGP-based autodiscovery and flow-aware transport.

# **VPLS Overview**

VPLS enables enterprises to link together their Ethernet-based LANs from multiple sites through the infrastructure provided by their service provider. From the enterprise perspective, the service provider's public network looks like one large Ethernet LAN. For the service provider, VPLS provides an opportunity to deploy another revenue-generating service on top of their existing network without major capital expenditures. Operators can extend the operational life of equipment in their network.

VPLS uses the provider core to join multiple attachment circuits together to simulate a virtual bridge between multiple attachment circuits. From a customer point of view, there is no topology for VPLS. All of the customer edge (CE) devices appear to connect to a logical bridge emulated by the provider core.

Figure 22: VPLS Topology

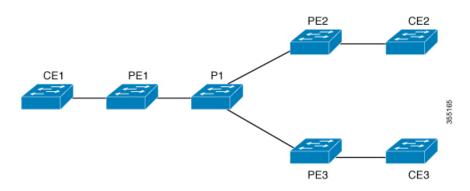

# **About Full-Mesh Configuration**

The full-mesh configuration requires a full mesh of tunnel label switched paths (LSPs) between all the provider edge (PE) devices that participate in the VPLS. With full-mesh configuration, signaling overhead and packet replication requirements for each provisioned VC on a PE device are high.

For a full-mesh configuration, a virtual forwarding instance (VFI) is required on each participating PE device. The VFI includes the VPN ID of a VPLS domain, the addresses of other PE devices in the domain, and the type of tunnel signaling and encapsulation mechanism for each peer PE device.

A VPLS instance constitutes a set of VFIs formed by the interconnection of the emulated VCs. The VPLS instance forms the logic bridge over the packet switched network. The VPLS instance is assigned a unique VPN ID.

The PE devices use the VFI to establish a full-mesh LSP of emulated VCs to all the other PE devices in the VPLS instance. PE devices obtain the membership of a VPLS instance through the static configuration using the Cisco IOS CLI.

The full-mesh configuration allows the PE device to maintain a single broadcast domain. So when the PE device receives a broadcast, multicast, or unknown unicast packet on an attachment circuit, it sends the packet out on all other attachment circuits and emulated circuits, to all the other CE devices participating in that VPLS instance. The CE devices see the VPLS instance as an emulated LAN.

To avoid the problem of a packet looping in the provider core, the PE devices enforce a 'split-horizon' principle for the emulated VCs. The split-horizon principle ensures that a packet received on an emulated VC is not forwarded on any other emulated VC.

After the VFI has been defined, it needs to be bound to an attachment circuit to the CE device.

The packet forwarding decision is made by looking up the Layer 2 VFI of a particular VPLS domain.

A VPLS instance on a particular PE device receives Ethernet frames that enter on specific physical or logical ports and populates a MAC address table similarly to how an Ethernet switch works. The PE device uses the MAC address to switch those frames into the appropriate LSP, for delivery to the other PE device at a remote site.

If a MAC address is not populated in the MAC address table, the PE device replicates the Ethernet frame and floods it to all logical ports associated with that VPLS instance, except on the ingress port where the Ethernet frame had entered. The PE device updates the MAC address table as it receives packets on specific ports and removes addresses not used after specific periods.

# **About VPLS BGP-Based Autodiscovery**

VPLS autodiscovery enables each PE device to discover other PE devices that are part of the same VPLS domain. VPLS autodiscovery also tracks PE devices when they are added to or removed from a VPLS domain. With VPLS autodiscovery enabled, it is no longer needed to manually configure a VPLS domain and maintain the configuration when a PE device is added or deleted. VPLS autodiscovery uses the Border Gateway Protocol (BGP) to discover VPLS members and set up and tear down pseudowires (PWs) in a VPLS domain.

BGP uses the Layer 2 VPN Routing Information Base (RIB) to store endpoint provisioning information, which is updated each time any Layer 2 VFI is configured. The prefix and path information is stored in the Layer 2 VPN database, which allows BGP to make decisions about the best path. When BGP distributes the endpoint provisioning information in an update message to all its BGP neighbors, this endpoint information is used to configure a pseudowire mesh to support Layer 2 VPN-based services.

The BGP autodiscovery mechanism facilitates the configuration of Layer 2 VPN services, which are an integral part of the VPLS feature. VPLS enables flexibility in deploying services by connecting geographically dispersed sites as a large LAN over high-speed Ethernet in a robust and scalable IP MPLS network.

# **About Flow-Aware Transport Pseudowire**

Devices typically load-balance traffic based on the lower most label in the label stack which is the same label for all flows on a given pseudowire. This can lead to asymmetric loadbalancing. The flow, in this context, refers to a sequence of packets that have the same source and destination pair. The packets are transported from a source provider edge (PE) device to a destination PE device.

Flow-aware transport PWs provide the capability to identify individual flows within a PW and provide devices the ability to use these flows to load-balance traffic. Flow-aware transport PWs are used to load-balance traffic in the core when equal cost multipaths (ECMP) are used. A flow label is created based on individual packet flows entering a PW; and is inserted as the lower most label in the packet. Devices can use the flow label for load-balancing which provides a better traffic distribution across ECMP paths or link-bundled paths in the core

Figure 23: Flow-aware transport PW with two flows distributing over ECMPs and Bundle-Links shows a flow-aware transport PW with two flows distributing over ECMPs and bundle links.

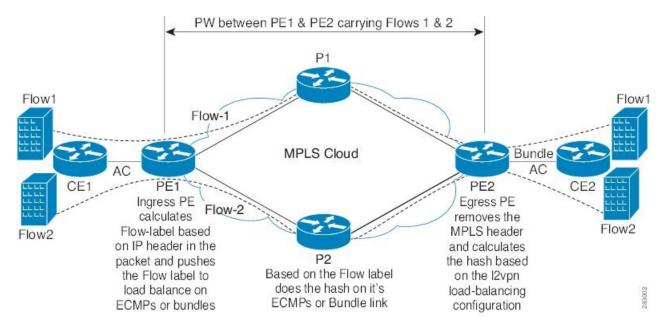


Figure 23: Flow-aware transport PW with two flows distributing over ECMPs and Bundle-Links

An extra label is added to the stack, called the flow label, which contains the flow information of a virtual circuit (VC). A flow label is a unique identifier that distinguishes a flow within the PW, and is derived from source and destination MAC addresses, and source and destination IP addresses. The flow label contains the end of label stack (EOS) bit set and inserted after the VC label and before the control word (if any). The ingress PE calculates and forwards the flow label. The flow-aware transport PW configuration enables the flow label. The egress PE discards the flow label such that no decisions are made.

All core devices perform load balancing based on the flow-label in the flow-aware transport PW. Therefore, it is possible to distribute flows over ECMPs and link bundles.

Flow-aware transport PW works based on port-channel load-balance algorithm only.

# Interoperability Between Cisco Catalyst 6000 Series Switches and Cisco Catalyst 9000 Series Switches

The following section describes how to enable sending and receiving flow labels between Cisco Catalyst 6000 Series Switches and Cisco Catalyst 9000 Series Switches.

On a Cisco Catalyst 6000 Series Switch configured with flow-aware transport PW (using Advanced VPLS) flow label negotiations are not supported. If the Cisco Catalyst 6000 Series Switch is in interoperability with a remote PE device such as a Cisco Catalyst 9000 Series Switch, then the Cisco Catalyst 9000 Series Switch cannot receive and send the flow label for data traffic. Configuring the **load-balance flow-label both static** command on the Cisco Catalyst 9000 Series Switch allows the Cisco Catalyst 9000 Series Switch to receive and send the flow labels even though the Cisco Catalyst 6000 Series Switch does not support flow label negotiations.

The following is a configuration example to enable sending and receiving flow labels:

```
Device> enable
Device# configure terminal
Device(config)# template type pseudowire mpls
Device(config-template)# encapsulation mpls
Device(config-template# load-balance flow ip dst-ip
```

Device(config-template) # load-balance flow-label both static Device(config-template# end

# How to Configure VPLS, VPLS BGP-Based Autodiscovery and Flow-Aware Transport

The following sections provide configuration information about VPLS, VPLS BGP-based autodiscovery and flow-aware transport.

# **Configuring Layer 2 PE Device Interfaces to CE Devices**

You must configure Layer 2 PE device interfaces to CE devices. The following sections provide various configuration tasks that need to be completed before configuring VPLS.

# Configuring 802.10 Trunks on a PE Device for Tagged Traffic from a CE Device

To configure 802.1Q trunks on a PE device, perform this procedure:

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	interface interface-id	Defines the interface to be configured as a trunk
	Example:	and enters interface configuration mode.
	Device(config)# interface TenGigabitEthernet1/0/24	
Step 4	no ip address ip_address mask [secondary]	Disables IP processing and enters interface
	Example:	configuration mode.
	Device(config-if)# no ip address	
Step 5	switchport	Modifies the switching characteristics of the
	Example:	Layer 2 switched interface.
	Device(config-if)# switchport	

	Command or Action	Purpose
Step 6	switchport trunk encapsulation dot1q  Example:	Sets the switch port encapsulation format to 802.1Q.
	<pre>Device(config-if)# switchport trunk encapsulation dot1q</pre>	
Step 7	switchport trunk allow vlan vlan_ID	Sets the list of allowed VLANs.
	Example:	
	Device(config-if)# switchport trunk allow vlan 2129	
Step 8	switchport mode trunk	Sets the interface to a trunking VLAN Layer 2
	Example:	interface.
	Device(config-if)# switchport mode trunk	
Step 9	end	Returns to privileged EXEC mode.
	Example:	
	Device(config-if)# end	

# Configuring 802.10 Access Ports on a PE Device for Untagged Traffic from a CE Device

To configure 802.1Q access ports on a PE device, perform this procedure:

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	interface interface-id	Defines the interface to be configured as a trunk,
	Example:	and enters interface configuration mode.
	Device(config)# interface TenGigabitEthernet1/0/24	

	Command or Action	Purpose
Step 4	no ip address ip_address mask [secondary ]  Example:	Disables IP processing.
	Device(config-if)# no ip address	
Step 5	switchport	Modifies the switching characteristics of the
	Example:	Layer 2 switched interface.
	Device(config-if)# switchport	
Step 6	switchport mode access	Sets the interface type to nontrunking and
	Example:	nontagged single VLAN Layer 2 interface.
	Device(config-if)# switchport mode access	
Step 7	switchport access vlan vlan_ID	Sets the VLAN when the interface is in access
	Example:	mode.
	Device(config-if)# switchport access vlan 2129	
Step 8	end	Returns to privileged EXEC mode.
	Example:	
	Device(config-if)# end	

# **Configuring Layer 2 VLAN Instances on a PE Device**

Configuring the Layer 2 VLAN interface on the PE device, enables the Layer 2 VLAN instance on the PE device to the VLAN database, to set up the mapping between the VPLS and VLANs.

To configure Layer 2 VLAN instance on a PE device, perform this procedure:

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	

	Command or Action	Purpose
Step 3	vlan vlan-id	Configures a specific VLAN.
	Example:	
	Device(config)# vlan 2129	
Step 4	interface vlan vlan-id	Configures an interface on the VLAN.
	Example:	
	Device(config-vlan)# interface vlan 2129	
Step 5	end	Returns to privileged EXEC mode.
	Example:	
	Device(config-vlan)# end	

# **Configuring VPLS**

VPLS can be configured using either the Xconnect mode or protocol-CLI method. The following sections provide information about how to configure VPLS.

# **Configuring VPLS in Xconnect Mode**

The following sections provide information on configuring VPLS in Xconnect mode.

## **Configuring MPLS on a PE Device**

To configure MPLS on a PE device, perform this procedure:

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	mpls ip	Configures MPLS hop-by-hop forwarding.
	Example:	
	Device(config)# mpls ip	

	Command or Action	Purpose
Step 4	mpls label protocol ldp  Example:	Specifies the default Label Distribution Protocol (LDP) for a platform.
	Device(config)# mpls label protocol ldp	
Step 5	mpls ldp logging neighbor-changes  Example:	(Optional) Determines logging neighbor changes.
	<pre>Device(config) # mpls ldp logging neighbor-changes</pre>	
Step 6	end	Returns to privileged EXEC mode.
	Example:	
	Device(config)# end	

## **Configuring VFI on a PE Device**

The VFI specifies the VPN ID of a VPLS domain, the addresses of other PE devices in this domain, and the type of tunnel signaling and encapsulation mechanism for each peer device.

To configure VFI and associated VCs on the PE device, perform this procedure:

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	12 vfi vfi-name manual	Enables the Layer 2 VFI manual configuration
	Example:	mode.
	Device(config)# 12 vfi 2129 manual	
Step 4	vpn id vpn-id	Configures a VPN ID for a VPLS domain. The
	Example:	emulated VCs bound to this Layer 2 virtual routing and forwarding (VRF) use this VPN ID
		for signaling.
	Device(config-vfi)# <b>vpn id 2129</b>	<b>Note</b> <i>vpn-id</i> is the same as <i>vlan-id</i> .

	Command or Action	Purpose
Step 5	neighbor router-id {encapsulation mpls} Example:	Specifies the remote peering router ID and the tunnel encapsulation type or the pseudowire (PW) property to be used to set up the emulated
	Device(config-vfi)# neighbor remote-router-id encapsulation mpls	VC.
Step 6	end	Returns to privileged EXEC mode.
	Example:	
	Device(config-vfi)# end	

## Associating the Attachment Circuit with the VFI on the PE Device

After defining the VFI, you must associate it to one or more attachment circuits.

To associate the attachment circuit with the VFI, perform this procedure:

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	interface vlan vlan-id	Creates or accesses a dynamic switched virtual
	Example:	interface (SVI).
	Device(config)# interface vlan 2129	<b>Note</b> vlan-id is the same as vpn-id.
Step 4	no ip address	Disables IP processing. (You can configure a
	Example:	Layer 3 interface for the VLAN if you need to configure an IP address.)
	Device(config-if)# no ip address	
Step 5	xconnect vfi vfi-name	Specifies the Layer 2 VFI that you are binding
	Example:	to the VLAN port.
	Device(config-if)# xconnect vfi 2129	

	Command or Action	Purpose
Step 6	end	Returns to privileged EXEC mode.
	Example:	
	Device(config-if)# end	

# **Configuring VPLS in Protocol-CLI Mode**

The following sections provide information on configuring VPLS in protocol-CLI mode.

# **Configuring VPLS in Protocol-CLI Mode**

To configure VPLS in protocol-CLI mode, perform this procedure:

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	12vpn vfi context vfi-name	Establishes an Layer 2 VPN VFI context and
	Example:	enters Layer 2 VFI configuration mode.
	Device(config)# 12vpn vfi context vpls1	
Step 4	vpn id vpn-id	Configures a VPN ID for the VPLS domain.
	Example:	
	Device(config-vfi)# vpn id 10	
Step 5	member ip-address encapsulation mpls	Specifies the devices that form a point-to-point
	Example:	Layer 2 VPN VFI connection.
	Device(config-vfi)# member 2.2.2.2 encapsulation mpls	
Step 6	exit	Exits to privileged EXEC mode.
	Example:	
	Device(config-vfi)# exit	

	Command or Action	Purpose
Step 7	Select one of the following:	Applies configuration to be applied on the VLAN or interface and enters VLAN or interface configuration mode.
	<ul><li>vlan configuration vlan-id</li><li>interface vlan vlan-id</li></ul>	
	Example:	
	Device(config)# vlan configuration 100 OR	
	Device(config)# interface vlan 100	
Step 8	member vfi vfi-name	Binds a VFI instance to a VLAN or an interface.
	Example:	
	Device(config-vlan-config)# member vfi vpls1	
Step 9	end	Returns to privileged EXEC mode.
	Example:	
	Device(config-vlan-config)# end	

# Configuring VPLS Flow-Aware Transport with Pseudowire Interface (in Protocol-CLI Mode)

To configure VPLS flow-aware transport with pseudowire interface, perform this procedure:

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	interface pseudowire number	Establishes a PW with the specified name, ar
	Example:	enters pseudowire interface configuration mode.
	Device(config)# interface pseudowire 1001	
Step 4	encapsulation mpls	Specifies the tunneling encapsulation as
	Example:	MPLS.
	Device(config-if)# encapsulation mpls	

	Command or Action	Purpose
Step 5	neighbor peer-address vcid-value	Specifies the peer IP address and VC ID value
	Example:	of a Layer 2 VPN PW.
	Device(config-if)# neighbor 10.1.1.200 200	
Step 6	load-balance flow	Enables the load balancing with PW feature
	Example:	so that load balancing is done on a per-flow basis.
	Device(config-if)# load-balance flow	
Step 7	load-balance flow-label	Enables the flow-aware transport of MPLS
	Example:	PW feature and specifies how flow labels are to be used.
	<pre>Device(config-if) # load-balance flow-label both</pre>	
Step 8	exit	Exits to privileged EXEC mode.
	Example:	
	Device(config-if)# exit	
Step 9	12vpn vfi context vfi-name	Establishes an Layer 2 VPN VFI context and
	Example:	enters Layer 2 VFI configuration mode.
	Device(config) # 12vpn vfi context vpls1	
Step 10	vpn id vpn-id	Configures a VPN ID for the VPLS domain.
	Example:	
	Device(config-vfi)# <b>vpn id 10</b>	
Step 11	member pseudowire number	Adds the pseudowire interface as a member of
	Example:	the VFI.
	Device(config-vfi)# member pseudowire 1001	
Step 12	exit	Exits to privileged EXEC mode.
	Example:	
	Device(config-vfi)# exit	
Step 13	Select one of the following:	Applies configuration to be applied on the
	• vlan configuration vlan-id	VLAN or interface and enters VLAN or interface configuration mode.
	• interface vlan vlan-id	
	Example:	

	Command or Action	Purpose
	Device(config) # vlan configuration 100 OR Device(config) # interface vlan 100	
Step 14	<pre>member vfi vfi-name Example:  Device(config-vlan-config) # member vfi     vpls1</pre>	Binds a VFI instance to a VLAN or an interface.
Step 15	<pre>end Example: Device(config-vlan-config)# end</pre>	Returns to privileged EXEC mode.

# Configuring VPLS Flow-Aware Transport Using a Template (in Protocol-CLI Mode)

Configuring VPLS flow-aware transport using a template allows multiple PWs to share the same configuration. To configure VPLS flow-aware transport using a template, perform this procedure:

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	template type pseudowire [template-name]  Example:	Specifies the name of a Layer 2 PW and enters pseudowire template configuration mode.
	Device(config)# template type pseudowire mpls	
Step 4	encapsulation mpls  Example:	Specifies the tunneling encapsulation as MPLS.
	Device(config-template)# encapsulation mpls	

	Command or Action	Purpose
Step 5	load-balance flow Example:	Enables the load balancing with PW feature so that load balancing is done on a per-flow basis.
	Device(config-template)# load-balance flow	
Step 6	load-balance flow-label  Example:	Enables the flow-aware transport of MPLS PW feature and specifies how flow labels are to be used.
	<pre>Device(config-template)# load-balance flow-label both</pre>	
Step 7	exit	Exits to privileged EXEC mode.
	Example:	
	Device(config-template)# exit	
Step 8	12vpn vfi context vfi-name	Establishes an Layer 2 VPN VFI context and enters Layer 2 VFI configuration mode.
	Example:	
	Device(config) # 12vpn vfi context vpls1	
Step 9	vpn id vpn-id	Configures a VPN ID for the VPLS domain.
	Example:	
	Device(config-vfi)# vpn id 10	
Step 10	member ip-address template template-name  Example:	Specifies the devices that form a point-to-point Layer 2 VPN VFI connection.
	Device(config-vfi)# member	• <b>ip-address</b> : IP address of the VFI neighbor.
	102.102.102.102 template mpls	• <b>template</b> <i>template-name</i> : Specifies the template name mpls as the template method.
Step 11	exit	Exits to privileged EXEC mode.
	Example:	
	Device(config-vfi)# exit	
Step 12	Select one of the following:	Applies configuration to be applied on the
	• vlan configuration vlan-id	VLAN or interface and enters VLAN or interface configuration mode.
	• interface vlan vlan-id	-
	Example:	
	Device(config)# vlan configuration 100	

	Command or Action	Purpose
	OR Device(config)# interface vlan 100	
Step 13	member vfi vfi-name	Binds a VFI instance to a VLAN or an
	Example: interface.	interface.
	Device(config-vlan-config)# member vfi vpls1	
Step 14	end	Exits to privileged EXEC mode.
	Example:	
	Device(config-vlan-config)# end	

## Configuring VPLS Flow-Aware Transport Using Pseudowire and a Template (in Protocol-CLI Mode)

To configure VPLS flow-aware transport using both PW and a template, perform this procedure:

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	template type pseudowire [template-name]	Specifies the name of a Layer 2 PW and enters
	Example:	pseudowire template configuration mode.
	Device(config)# template type pseudowire mpls	
Step 4	encapsulation mpls	Specifies the tunneling encapsulation as
	Example:	MPLS.
	Device(config-template)# encapsulation mpls	
Step 5	load-balance flow	Enables the load balancing with PW feature
	Example:	so that load balancing is done on a per-flow basis.
	Device(config-template)# load-balance flow	

	Command or Action	Purpose
Step 6	load-balance flow-label Example:	Enables the flow-aware transport of MPLS PW feature and specifies how flow labels are to be used.
	Device(config-template) # load-balance flow-label both	
Step 7	exit	Exits to privileged EXEC mode.
	Example:	
	Device(config-template)# exit	
Step 8	interface pseudowire number	Establishes a PW with the specified name, and
	Example:	enters pseudowire interface configuration mode.
	Device(config)# interface pseudowire 1001	
Step 9	source template type pseudowire [template-name]	Configures the source template of type pseudowire named mpls.
	Example:	
	Device(config-if)# source template type pseudowire mpls	
Step 10	neighbor peer-address vcid-value	Specifies the peer IP address and VC ID value
	Example:	of a Layer 2 VPN PW.
	Device(config-if)# neighbor 10.1.1.200 200	
Step 11	exit	Exits to privileged EXEC mode.
	Example:	
	Device(config-if)# exit	
Step 12	12vpn vfi context vfi-name	Establishes an Layer 2 VPN VFI context and
	Example:	enters Layer 2 VFI configuration mode.
	Device(config)# 12vpn vfi context vpls1	
Step 13	vpn id vpn-id	Configures a VPN ID for the VPLS domain.
	Example:	
	Device(config-vfi)# <b>vpn id 10</b>	
Step 14	member pseudowire number	Adds the pseudowire interface as a member of
	Example:	the VFI.

	Command or Action	Purpose
	Device(config-vfi)# member pseudowire 1001	
Step 15	exit	Exits to privileged EXEC mode.
	Example:	
	Device(config-vfi)# exit	
Step 16	Select one of the following:	Applies configuration to be applied on the
	<ul><li>vlan configuration vlan-id</li><li>interface vlan vlan-id</li></ul>	VLAN or interface and enters VLAN or interface configuration mode.
	Example:	
	Device(config)# vlan configuration 100 OR Device(config)# interface vlan 100	
Step 17	member vfi vfi-name	Binds a VFI instance to a VLAN or an
	Example:	interface.
	Device(config-vlan-config)# member vfi vpls1	
Step 18	end	Exits to privileged EXEC mode.
	Example:	
	Device(config-vlan-config)# end	

# **Configuring VPLS BGP-based Autodiscovery**

The following sections provide information about how to configure VPLS BGP-based Autodiscovery.

# **Enabling VPLS BGP-based Autodiscovery**

To enabling VPLS BGP-based autodiscovery, perform this procedure:

Command or Action	Purpose
enable	Enables privileged EXEC mode.
Example:	Enter your password if prompted.
Device> enable	
	enable Example:

Command or Action	Purpose
configure terminal	Enters global configuration mode.
Example:	
Device# configure terminal	
12 vfi vfi-name autodiscovery	Enables VPLS autodiscovery on a PE device and enters L2 VFI configuration mode.
Example:	
Device(config)# 12 vfi 2128 autodiscovery	
vpn id vpn-id	Configures a VPN ID for the VPLS domain.
Example:	
Device(config-vfi)# vpn id 2128	
end	Returns to privileged EXEC mode.
Example:	
Device(config-vfi)# end	
	configure terminal  Example:  Device# configure terminal  12 vfi vfi-name autodiscovery  Example:  Device(config)# 12 vfi 2128 autodiscovery  vpn id vpn-id  Example:  Device(config-vfi)# vpn id 2128  end  Example:

# **Configuring BGP to Enable VPLS Autodiscovery**

To configure BGP to enable VPLS autodiscovery, perform this procedure:

	<b>Command or Action</b>	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the
	Example:	specified routing process.

	Command or Action	Purpose
	Device(config)# router bgp 1000	
Step 4	no bgp default ipv4-unicast  Example:	Disables the IPv4 unicast address family for the BGP routing process.
	Device(config-router)# no bgp default ipv4-unicast	Note  Routing information for the IPv4 unicast address family is advertised by default for each BGP routing session configured using the neighbor remote-as router command unless you configure the no bgp default ipv4-unicast command before configuring the neighbor remote-as command. Existing neighbor configurations are not affected.
Step 5	bgp log-neighbor-changes	Enables logging of BGP neighbor resets.
	Example:	
	Device(config-router)# bgp log-neighbor-changes	
Step 6	neighbor remote-as { ip-address   peer-group-name } remote-as autonomous-system-number	Adds the IP address or peer group name of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local device.
	<pre>Device(config-router)# neighbor 44.254.44.44 remote-as 1000</pre>	If the <i>autonomous-system-number</i> argument matches the autonomous system number specified in the <b>router bgp</b> command, the neighbor is an internal neighbor.
		• If the <i>autonomous-system-number</i> argument does not match the autonomous system number specified in the <b>router bgp</b> command, the neighbor is an external neighbor.
Step 7	neighbor { ip-address   peer-group-name } update-source interface-type interface-number Example:	(Optional) Configures a device to select a specific source or interface to receive routing table updates.
	Device(config-router)# neighbor 44.254.44.44 update-source Loopback300	

	Command or Action	Purpose
Step 8	Repeat Steps 6 and 7 to configure other BGP neighbors.	Exits interface configuration mode.
Step 9	address-family l2vpn [vpls]	Specifies the Layer 2 VPN address family and
	Example:	enters address family configuration mode.
	Device(config-router)# address-family 12vpn vpls	The optional <b>vpls</b> keyword specifies that the VPLS endpoint provisioning information is to be distributed to BGP peers.
Step 10	neighbor { ip-address   peer-group-name } activate	Enables the exchange of information with a BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 44.254.44.44 activate	
Step 11	neighbor { ip-address   peer-group-name } send-community { both   standard   extended }	Specifies that a communities attribute should be sent to a BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 44.254.44.44 send-community both	
Step 12	Repeat Steps 10 and 11 to activate other BGP neighbors under an L2VPN address family.	
Step 13	exit-address-family	Exits address family configuration mode and
	Example:	returns to router configuration mode.
	<pre>Device(config-router-af) # exit-address-family</pre>	
Step 14	end	Exits router configuration mode and returns to
	Example:	privileged EXEC mode.
	Device(config-router)# end	

# **Configuring VPLS BGP-based Autodiscovery in Protocol-CLI Mode**

The following sections provide information on configuring VPLS BGP-based autodiscovery in protocol-CLI mode.

# Configuring VPLS BGP based Autodiscovery in Protocol-CLI mode

To configure VPLS BGP based autodiscovery in protocol-CLI mode, perform this procedure

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	12vpn vfi context vfi-name	Establishes an Layer 2 VPN VFI context and
	Example:	enters Layer 2 VFI configuration mode.
	Device(config)# 12vpn vfi context vpls1	
Step 4	vpn id vpn-id	Configures a VPN ID for the VPLS domain.
	Example:	
	Device(config-vfi)# vpn id 10	
Step 5	autodiscovery bgp signaling ldp	Enables BGP signaling and LDP signaling.
	Example:	
	Device(config-vfi)# autodiscovery bgp signaling ldp	
Step 6	exit	Exits to privileged EXEC mode.
	Example:	
	Device(config-vfi-autodiscovery)# exit	
Step 7	exit	Exits to privileged EXEC mode.
	Example:	
	Device(config-vfi)# exit	
Step 8	Select one of the following:	Applies configuration to be applied on the VLAN or interface and enters VLAN or interface configuration mode.
	• vlan configuration vlan-id	
	• interface vlan vlan-id	
	Example:	

	Command or Action	Purpose
	Device(config)# vlan configuration 100 OR Device(config)# interface vlan 100	
Step 9	<pre>member vfi vfi-name Example:  Device(config-vlan-config)# member vfi vpls1</pre>	Binds a VFI instance to a VLAN or an interface.
Step 10	<pre>end Example: Device(config-vlan-config)# end</pre>	Exits to privileged EXEC mode.

# Configuring VPLS BGP based Autodiscovery Flow-Aware Transport using Template (in Protocol-CLI Mode)

To configure VPLS BGP based autodiscovery flow-aware transport using template, perform this procedure

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	template type pseudowire [template-name]  Example:	Specifies the name of a Layer 2 PW and enters pseudowire template configuration mode.
	<pre>Device(config) # template type pseudowire mpls</pre>	
Step 4	encapsulation mpls  Example:	Specifies the tunneling encapsulation as MPLS.
	<pre>Device(config-template)# encapsulation mpls</pre>	

	Command or Action	Purpose
Step 5	load-balance flow  Example:	Enables the Any Transport over MPLS (AToM) load balancing with PW feature so that load balancing is done on a per-flow basis.
	Device(config-template)# load-balance flow	
Step 6	load-balance flow-label	Enables the flow-aware transport of MPLS
	Example:	PW feature and specifies how flow labels are to be used.
	Device(config-template)# load-balance flow-label both	
Step 7	exit	Exits to privileged EXEC mode.
	Example:	
	Device(config-template)# exit	
Step 8	12vpn vfi context vfi-name	Establishes an Layer 2 VPN VFI context and
	Example:	enters Layer 2 VFI configuration mode.
	Device(config) # 12vpn vfi context vpls1	
Step 9	vpn id vpn-id	Configures a VPN ID for the VPLS domain.
	Example:	
	Device(config-vfi)# <b>vpn id 10</b>	
Step 10	autodiscovery bgp signaling ldp template name	Enables BGP signaling and LDP signaling.
	Example:	
	Device(config-vfi)# autodiscovery bgp signaling ldp template mpls	
Step 11	exit	Exits to privileged EXEC mode.
	Example:	
	Device(config-vfi)# exit	
Step 12	Select one of the following:	Applies configuration to be applied on the
	<ul><li>vlan configuration vlan-id</li><li>interface vlan vlan-id</li></ul>	VLAN or interface and enters VLAN or interface configuration mode.
	Example:	
	Device (config) # vlan configuration 100 OR Device (config) # interface vlan 100	
	Device (confirs) # Interface Vian 100	

	Command or Action	Purpose
Step 13	member vfi vfi-name  Example:	Binds a VFI instance to a VLAN or an interface.
	Device(config-vlan-config)# member vfi vpls1	
Step 14	end	Exits to privileged EXEC mode.
	Example:	
	Device(config-vlan-config)# end	


# **Configuration Examples for VPLS and VPLS BGP-Based Autodiscovery**

This section provides the configuration examples for VPLS and VPLS BGP-Based Autodiscovery.

# **Example: Configuring VPLS in Xconnect Mode**

The following example shows how to configure VPLS on a PE1 and PE2 devices:

Figure 24: VPLS Topology

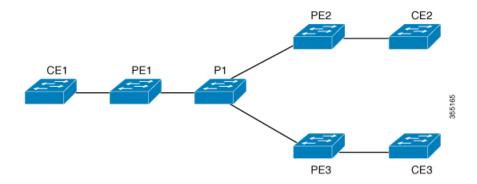

# PE1 Configuration Device> enable Device# configure terminal Device(config)# pseudowire-class vpls2129 Device(config-if)# encapsulation mpls Device(config-if)# exit Device(config)# 12 vfi 2129 manual Device(config-vfi)# vpn id 2129 Device(config-vfi)# neighbor 44.254.44.44 pw-class vpls2129 Device(config-vfi)# neighbor 188.98.89.98 pw-class vpls2129 Device(config-vfi)# exit Device(config-vfi)# exit Device(config-if)# switchport trunk allowed vlan 2129 Device(config-if)# switchport mode trunk Device(config-if)# exit

# **Examples: Verifying VPLS Configured in Xconnect Mode**

Device(config)# interface vlan 2129
Device(config-vlan-config)# no ip address
Device(config-vlan-config)# xconnect vfi 2129

The following example is a sample output of the **show mpls 12transport vc detail** command. This command provides information about the virtual circuits.

```
Device# show mpls 12transport vc detail
Local interface: VFI 2129 vfi up
  Interworking type is Ethernet
  Destination address: 44.254.44.44, VC ID: 2129, VC status: up
   Output interface: Gi1/0/9, imposed label stack {18 17}
   Preferred path: not configured
   Default path: active
   Next hop: 177.77.177.2
  Create time: 19:09:33, last status change time: 09:24:14
   Last label FSM state change time: 09:24:14
  Signaling protocol: LDP, peer 44.254.44.44:0 up
   Targeted Hello: 1.1.1.72 (LDP Id) -> 44.254.44.44, LDP is UP
   Graceful restart: configured and enabled
   Non stop routing: not configured and not enabled
    Status TLV support (local/remote) : enabled/supported
      LDP route watch
                                        : enabled
                                      : established, LruRru
      Label/status state machine
      Last local dataplane status rcvd: No fault
Last BFD dataplane status rcvd: Not sent
      Last BFD peer monitor status rcvd: No fault
      Last local AC circuit status rcvd: No fault
      Last local AC circuit status sent: No fault
      Last local PW i/f circ status rcvd: No fault
      Last local LDP TLV
                            status sent: No fault
                            status rcvd: No fault status rcvd: No fault
      Last remote LDP TLV
      Last remote LDP ADJ
MPLS VC labels: local 512, remote 17
   Group ID: local n/a, remote 0
   MTU: local 1500, remote 1500
   Remote interface description:
  Sequencing: receive disabled, send disabled
  Control Word: Off
```

```
SSO Descriptor: 44.254.44.44/2129, local label: 512
Dataplane:
   SSM segment/switch IDs: 20498/20492 (used), PWID: 2
VC statistics:
   transit packet totals: receive 0, send 0
   transit byte totals: receive 0, send 0
   transit packet drops: receive 0, seq error 0, send 0
```

The following example is a sample output of the **show l2vpn atom vc** command. The command shows that AToM over MPLS is configured on a VC.

#### Device# show 12vpn atom vc detail


```
pseudowire100005 is up, VC status is up PW type: Ethernet
 Create time: 19:25:56, last status change time: 09:40:37
   Last label FSM state change time: 09:40:37
 Destination address: 44.254.44.44 VC ID: 2129
   Output interface: Gi1/0/9, imposed label stack {18 17}
   Preferred path: not configured
   Default path: active
   Next hop: 177.77.177.2
 Member of vfi service 2129
   Bridge-Domain id: 2129
   Service id: 0x32000003
  Signaling protocol: LDP, peer 44.254.44.44:0 up
   Targeted Hello: 1.1.1.72(LDP Id) -> 44.254.44.44, LDP is UP
    Graceful restart: configured and enabled
   Non stop routing: not configured and not enabled
    PWid FEC (128), VC ID: 2129
   Status TLV support (local/remote)
                                           : enabled/supported
                                           : enabled
     LDP route watch
                                           : established, LruRru
: No fault
     Label/status state machine
     Local dataplane status received
                                           : Not sent
     BFD dataplane status received
     BFD peer monitor status received
                                           : No fault
     Status received from access circuit : No fault
                                           : No fault
     Status sent to access circuit
     Status received from pseudowire i/f
                                            : No fault
Status sent to network peer : No fault
     Status received from network peer : No fault
     Adjacency status of remote peer
                                            : No fault
  Sequencing: receive disabled, send disabled
  Bindings
   Parameter Local
                                              Remote
   Label 512
                                              17
                                              Ω
   Group ID
              n/a
   Interface
   MTU
                1500
                                              1500
   Control word off
                                              off
   PW type Ethernet
                                              Ethernet
   VCCV CV type 0x02
                                              0x02
                                               LSPV [2]
                 LSPV [2]
   VCCV CC type 0x06
                                              0x06
                 RA [2], TTL [3]
                                              RA [2], TTL [3]
   Status TLV enabled
                                              supported
  SSO Descriptor: 44.254.44.44/2129, local label: 512
  Dataplane:
   SSM segment/switch IDs: 20498/20492 (used), PWID: 2
  Rx Counters
   0 input transit packets, 0 bytes
```

```
0 drops, 0 seq err
Tx Counters
0 output transit packets, 0 bytes
0 drops
```

# **Example: Configuring VPLS Flow-Aware Transport Using a Template (in Protocol-CLI Mode)**

The following example shows how to configure VPLS on a PE1 and PE2 devices:

Figure 25: VPLS Topology

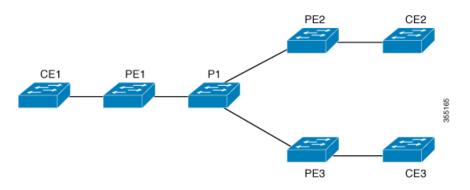

#### **PE1 Configuration**

```
Device> enable
Device# configure terminal
Device(config) # template type pseudowire mpls
Device(config-template)# encapsulation mpls
Device(config-template) # load-balance flow ip dst-ip
Device (config-template) # load-balance flow-label both
Device (config-template) # exit
Device(config)# interface Loopback0
Device(config-if) # ip address 1.1.1.30 255.255.255.255
Device(config-if) # ip ospf 1 area 0
Device (config-if) # exit
Device(config)# interface TwentyFiveGigE1/0/9
Device(config-if) # no switchport
Device(config-if)# ip address 80.0.0.30 255.255.255.0
Device(config-if)# ip ospf 1 area 0
Device(config-if) # mpls ip
Device(config-if)# exit
Device (config) # 12vpn vfi context foo
Device (config-vfi) # vpn id 2129
Device(config-vfi) # member 1.1.1.20 template mpls
Device(config-vfi)# exit
Device (config) # interface TwentyFiveGigE1/0/2
Device(config-if) # switchport mode access
Device(config-if) # switchport access vlan 100
Device(config-if)# exit
Device(config) # interface vlan 100
Device (config-vlan-config) # member vfi foo
Device (config-vlan-config) # end
```

## **Example: Configuring VPLS BGP-Auto Discovery**

The following example shows how to configure VPLS on a PE device:

```
Device> enable
Device# configure terminal
Device(config) # router bgp 1000
Device(config-router) # bgp log-neighbor-changes
Device (config-router) # bgp graceful-restart
Device(config-router) # neighbor 44.254.44.44 remote-as 1000
Device(config-router) # neighbor 44.254.44.44 update-source Loopback300
Device(config-router)# address-family 12vpn vpls
Device(config-router-af) # neighbor 44.254.44.44 activate
Device(config-router-af)# neighbor 44.254.44.44 send-community both
Device(config-router-af)# exit-address-family
Device(config-router-af)# end
Device (config) # 12 vfi 2128 autodiscovery
Device (config-vfi) # vpn id 2128
Device(config-vfi)# exit
Device(config) # interface vlan 2128
Device (config-vlan-config) # no ip address
Device(config-vlan-config) # xconnect vfi 2128
```

#### **Example: Verifying VPLS BGP-Auto Discovery**

The following example is a sample output of the **show platform software fed sw 1 matm macTable vlan 2000** command.

Device# show platform software fed sw 1 matm macTable vlan 2000

VLAN	MAC	Type	Seq#	macHandle	S	siHandle	diHandle
	*a time *e tir	ne ports					
2000	2852.6134.05c8	0X8002	0	0xffbba312c8	(	0xffbb9ef938	0x5154
	0 0	Vlan2	000				
2000	0000.0078.9012	0X1	32627	0xffbb665ec8	(	0xffbb60b198	0xffbb653f98
	300 2784	48 Port-	channel11				
					(	0xff454c2328	0xffbb653f98
	300 63						
2000					(	0xff44f9ec98	0x0
	300 1	2000:	33.33.33.	33			
Total	Mac number of a	addresses:	: 4				
*a_ti	me=aging_time(se	ecs) *e_t	ime=total	_elapsed_time	(secs)		
Type:							
MAT_D	YNAMIC_ADDR	0x1	MAT_STAT	IC_ADDR	0x2		
MAT_C	PU_ADDR	0×4	MAT_DISC	ARD_ADDR	0x8		
MAT_A	LL_VLANS	0x10	MAT_NO_F	ORWARD	0x20		
MAT_I	PMULT_ADDR	0x40	MAT_RESY	NC	0x80		
	O_NOT_AGE						
MAT_N	O_PORT	0x400	MAT_DROP	_ADDR	0x800		
	UP_ADDR						
	OT1X_ADDR		MAT_ROUT	ER_ADDR	0x8000		
_	IRELESS_ADDR			RE_CFG_ADDR			
_	PQ_DATA_PRESENT			D_TUNNEL_ADDR			
MAT_D	LR_ADDR	0x100000	MAT_MRP_	ADDR	0x20000	00	

The following example is a sample output of the show bgp l2vpn vpls all command.

# Feature History for VPLS and VPLS BGP-Based Autodiscovery

This table provides release and related information for the features explained in this module.

These features are available in all the releases subsequent to the one they were introduced in, unless noted otherwise.

Release	Feature	Feature Information
Cisco IOS XE Everest 16.5.1a	Configuring VPLS and VPLS BGP-based Autodiscovery	VPLS enables enterprises to link together their Ethernet-based LANs from multiple sites via the infrastructure provided by their service provider.  VPLS Autodiscovery enables each PE device to discover other PE devices that are part of the same VPLS domain.
Cisco IOS XE Amsterdam 17.1.1	VPLS Layer 2 Snooping : IGMP (IPv4)	IGMP snooping is supported on a VPLS configured network.

Use the Cisco Feature Navigator to find information about platform and software image support. To access Cisco Feature Navigator, go to https://cfnng.cisco.com/

http://www.cisco.com/go/cfn.



# **Configuring MPLS VPN Route Target Rewrite**

- Prerequisites for MPLS VPN Route Target Rewrite, on page 207
- Restrictions for MPLS VPN Route Target Rewrite, on page 207
- Information About MPLS VPN Route Target Rewrite, on page 207
- How to Configure MPLS VPN Route Target Rewrite, on page 208
- Configuration Examples for MPLS VPN Route Target Rewrite, on page 215
- Feature History for MPLS VPN Route Target Rewrite, on page 215

# **Prerequisites for MPLS VPN Route Target Rewrite**

- You should know how to configure Multiprotocol Label Switching (MPLS) Virtual Private Networks (VPNs).
- You need to identify the RT replacement policy and target device for the autonomous system (AS).

# **Restrictions for MPLS VPN Route Target Rewrite**

Route Target Rewrite can only be implemented in a single AS topology.

**ip unnumbered** command is not supported in MPLS configuration.

# **Information About MPLS VPN Route Target Rewrite**

This section provides information about MPLS VPN Route Target Rewrite:

#### **Route Target Replacement Policy**


Routing policies for a peer include all configurations that may impact inbound or outbound routing table updates. The MPLS VPN Route Target Rewrite feature can influence routing table updates by allowing the replacement of route targets on inbound and outbound Border Gateway Protocol (BGP) updates. Route targets are carried as extended community attributes in BGP Virtual Private Network IP Version 4 (VPNv4) updates. Route target extended community attributes are used to identify a set of sites and VPN routing and forwarding (VRF) instances that can receive routes with a configured route target.

You can configure the MPLS VPN Route Target Rewrite feature on provider edge (PE) devices.

The figure below shows an example of route target replacement on PE devices in an Multiprotocol Label Switching (MPLS) VPN single autonomous system topology. This example includes the following configurations:

- PE1 is configured to import and export RT 65000:1 for VRF Customer A and to rewrite all inbound VPNv4 prefixes with RT 65000:1 to RT 65000:2.
- PE2 is configured to import and export RT 65000:2 for VRF Customer B and to rewrite all inbound VPNv4 prefixes with RT 65000:2 to RT 65000:1.

Figure 26: Route Target Replacement on Provide Edge(PE) devices in a single MPLS VPN Autonomous System Topology

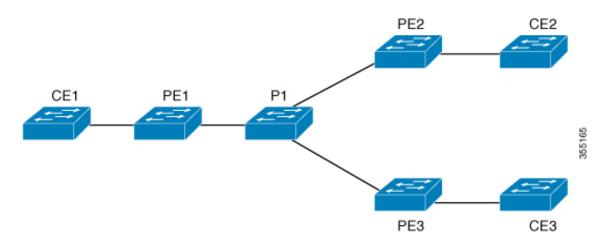

#### **Route Maps and Route Target Replacement**

The MPLS VPN Route Target Rewrite feature extends the Border Gateway Protocol (BGP) inbound/outbound route map functionality to enable route target replacement. The **set extcomm-list delete** command entered in route-map configuration mode allows the deletion of a route target extended community attribute based on an extended community list.

# **How to Configure MPLS VPN Route Target Rewrite**

This section provides the configuration steps for MPLS VPN Route Target Rewrite:

#### **Configuring a Route Target Replacement Policy**

Perform this task to configure a route target (RT) replacement policy for your internetwork.

If you configure a provider edge (PE) device to rewrite RT x to RT y and the PE has a virtual routing and forwarding (VRF) instance that imports RT x, you need to configure the VRF to import RT y in addition to RT x.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	<pre>ip extcommunity-list {standard-list-number   expanded-list-number} {permit   deny} [regular-expression] [rt   soo extended-community-value]  Example:  Device(config) # ip extcommunity-list 1 permit rt 65000:2</pre>	<ul> <li>Creates an extended community access list and controls access to it.</li> <li>The standard-list-number argument is an integer from 1 to 99 that identifies one or more permit or deny groups of extended communities.</li> <li>The expanded-list-number argument is an integer from 100 to 500 that identifies one or more permit or deny groups of extended communities. Regular expressions can be configured with expanded lists but not standard lists.</li> <li>The permit keyword permits access for a matching condition.</li> <li>The deny keyword denies access for a matching condition.</li> <li>The regular-expression argument</li> </ul>
		specifies an input string pattern to match against. When you use an expanded extended community list to match route targets, include the pattern RT: in the regular expression.  • The rt keyword specifies the route target extended community attribute. The rt keyword can be configured only with standard extended community lists and not expanded community lists.  • The soo keyword specifies the site of origin (SOO) extended community attribute. The soo keyword can be configured only with standard extended community lists and not expanded community lists and not expanded community lists.

	Command or Action	Purpose
		• The <i>extended-community-value</i> argument specifies the route target or site of origin. The value can be one of the following combinations:
		autonomous-system-numbernetwork-number
		• ip-address:network-number
		The colon is used to separate the autonomous system number and network number or IP address and network number.
Step 4	route-map map-name [permit   deny] [sequence-number]  Example:	Defines the conditions for redistributing routes from one routing protocol into another or enables policy routing and enables route-map configuration mode.
	Device(config)# route-map rtrewrite permit 10	• The <i>map-name</i> argument defines a meaningful name for the route map. The <b>redistribute</b> router configuration command uses this name to reference this route map. Multiple route maps can share the same map name.
		• If the match criteria are met for this route map, and the <b>permit</b> keyword is specified, the route is redistributed as controlled by the set actions. In the case of policy routing, the packet is policy routed.
		If the match criteria are not met, and the <b>permit</b> keyword is specified, the next route map with the same map tag is tested. If a route passes none of the match criteria for the set of route maps sharing the same name, it is not redistributed by that set.
		The <b>permit</b> keyword is the default.
		• If the match criteria are met for the route map and the <b>deny</b> keyword is specified, the route is not redistributed. In the case of policy routing, the packet is not policy routed, and no further route maps sharing the same map tag name will be examined. If the packet is not policy routed, the normal forwarding algorithm is used.
		• The <i>sequence-number</i> argument is a number that indicates the position a new route map will have in the list of route maps already configured with the same

	Command or Action	Purpose
		name. If given with the <b>no</b> form of this command, the position of the route map should be deleted.
Step 5	<b>match extcommunity</b> {standard-list-number   expanded-list-number}	Matches the Border Gateway Protocol (BGP) extended community list attributes.
	Example:  Device(config-route-map)# match extcommunity 1	• The <i>standard-list-number</i> argument is a number from 1 to 99 that identifies one or more permit or deny groups of extended community attributes.
	Example:  Device(config-route-map)# match extcommunity 101	• The <i>expanded-list-number</i> argument is a number from 100 to 500 that identifies one or more permit or deny groups of extended community attributes.
Step 6	set extcomm-list extended-community-list-number delete Example:	Removes a route target from an extended community attribute of an inbound or outbound BGP Virtual Private Network Version 4 (VPNv4) update.
	Device(config-route-map)# set extcomm-list 1 delete	The extended-community-list-number argument specifies the extended community list number.
Step 7	set extcommunity {rt extended-community-value [additive]   soo extended-community-value}	Sets BGP extended community attributes.  • The <b>rt</b> keyword specifies the route target extended community attribute.
	<pre>Example: Device(config-route-map)# set</pre>	The soo keyword specifies the site of origin extended community attribute.
	extcommunity rt 65000:1 additive	• The <i>extended-community-value</i> argument specifies the value to be set. The value can be one of the following combinations:
		autonomous-system-number : network-number
		• ip-address : network-number
		The colon is used to separate the autonomous system number and network number or IP address and network number.
		The <b>additive</b> keyword adds a route target to the existing route target list without replacing any existing route targets.

	Command or Action	Purpose
Step 8	end	(Optional) Returns to privileged EXEC mode.
	Example:	
	Device(config-route-map)# end	
Step 9	show route-map map-name	(Optional) Verifies that the match and set entries
	Example:	are correct.
	Device# show route-map extmap	• The <i>map-name</i> argument is the name of a specific route map.

# **Applying the Route Target Replacement Policy**

Perform the following tasks to apply the route target replacement policy to your network:

#### **Associating Route Maps with Specific BGP Neighbors**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	router bgp as-number	Configures a Border Gateway Protocol (BGP)
	Example:	routing process and places the device in router configuration mode.
	Device(config)# router bgp 100	• The <i>as-number</i> argument indicates the number of an autonomous system that identifies the device to other BGP devices and tags the routing information passed along.
		The range is 0 to 65535. Private autonomous system numbers that can be used in internal networks range from 64512 to 65535.
Step 4	neighbor {ip-address   peer-group-name} remote-as as-number	Adds an entry to the BGP or multiprotocol BGP neighbor table.
	Example:	

	Command or Action	Purpose
	Device(config-router) # neighbor 172.10.0.2 remote-as 200	• The <i>ip-address</i> argument specifies the IP address of the neighbor.
		• The <i>peer-group-name</i> argument specifies the name of a BGP peer group.
		• The <i>as-number</i> argument specifies the autonomous system to which the neighbor belongs.
Step 5	address-family vpnv4 [unicast]	Enters address family configuration mode for
	Example:	configuring routing sessions, such as BGP, that use standard Virtual Private Network Version 4 (VPNv4) address prefixes.
	Device(config-router)# address-family vpnv4	The optional <b>unicast</b> keyword specifies VPNv4 unicast address prefixes.
Step 6	neighbor {ip-address   peer-group-name} activate	Enables the exchange of information with a neighboring BGP device.
	Example:	• The <i>ip-address</i> argument specifies the IP address of the neighbor.
	Device(config-router-af)# neighbor 172.16.0.2 activate	• The <i>peer-group-name</i> argument specifies the name of a BGP peer group.
Step 7	neighbor {ip-address   peer-group-name} send-community [both   extended   standard]	Specifies that a communities attribute should be sent to a BGP neighbor.
	Example:	• The <i>ip-address</i> argument specifies the IP address of the BGP-speaking neighbor.
	Device(config-router-af) # neighbor 172.16.0.2 send-community extended	• The <i>peer-group-name</i> argument specifies the name of a BGP peer group.
		<ul> <li>The both keyword sends standard and extended community attributes.</li> </ul>
		The <b>extended</b> keyword sends an extended community attribute.
		The <b>standard</b> keyword sends a standard community attribute.
Step 8	neighbor {ip-address   peer-group-name} route-map map-name {in   out}	Apply a route map to incoming or outgoing routes
	Example:  Device(config-router-af) # neighbor	• The <i>ip-address</i> argument specifies the IP address of the neighbor.
	172.16.0.2 route-map extmap in	

	Command or Action	Purpose
		• The <i>peer-group-name</i> argument specifies the name of a BGP or multiprotocol peer group.
		• The <i>map-name</i> argument specifies the name of a route map.
		The <b>in</b> keyword applies route map to incoming routes.
		The <b>out</b> keyword applies route map to outgoing routes.
Step 9	end	(Optional) Returns to privileged EXEC mode.
	Example:	
	Device(config-router-af)# end	

## **Verifying the Route Target Replacement Policy**

#### **Procedure**

#### Step 1 enable

Enables privileged EXEC mode. Enter your password if prompted.

#### **Example:**

Device> enable
Device#

#### Step 2 show ip bgp vpnv4 vrf vrf-name

Verifies that Virtual Private Network Version 4 (VPNv4) prefixes with a specified route target (RT) extended community attribute are replaced with the proper RT extended community attribute to verify that the provider edge (PE) devices receive the rewritten RT extended community attributes.

Verify route target replacement on PE1:

#### **Example:**

```
Device# show ip bgp vpnv4 vrf Customer_A 192.168.1.1/32 internal
BGP routing table entry for 65000:1:192.168.1.1/32, version 6901
Paths: (1 available, best #1, table Customer_A)
Advertised to update-groups:
5
Refresh Epoch 1
650002
3.3.3.3 (metric 3) (via default) from 3.3.3.3 (55.5.4.1)
Origin IGP, metric 0, localpref 100, valid, internal, best Extended Community: RT:65000:1
mpls labels in/out nolabel/3025
```

```
rx pathid: 0, tx pathid: 0x0
net: 0xFFB0A72E38, path: 0xFFB0E6A370, pathext: 0xFFB0E5D970
flags: net: 0x0, path: 0x7, pathext: 0x181
```

#### Step 3 exit

Returns to user EXEC mode:

#### **Example:**

Device# exit
Device>

# **Configuration Examples for MPLS VPN Route Target Rewrite**

The following section provides configuration examples for MPLS VPN Route Target Rewrite:

## **Examples: Applying Route Target Replacement Policies**

#### **Examples: Associating Route Maps with Specific BGP Neighbor**

This example shows the association of route map extmap with a Border Gateway Protocol (BGP) neighbor. The BGP inbound route map is configured to replace route targets (RTs) on incoming updates.

```
router bgp 1
address-family vpnv4
neighbor 2.2.2.2 route-map rtrewrite in
```

This example shows the association of the same route map with the outbound BGP neighbor. The route map is configured to replace RTs on outgoing updates.

```
router bgp 1
address-family vpnv4
neighbor 2.2.2.2 route-map rtrewrite out
```

# **Feature History for MPLS VPN Route Target Rewrite**

This table provides release and related information for features explained in this module.

These features are available on all releases subsequent to the one they were introduced in, unless noted otherwise.

Release	Feature	Feature Information
Cisco IOS XE Everest 16.6.1	MPLS VPN Route Target Rewrite	The MPLS VPN Route Target Rewrite feature can influence routing table updates by allowing the replacement of route targets on inbound and outbound Border Gateway Protocol (BGP) updates.

Use Cisco Feature Navigator to find information about platform and software image support. To access Cisco Feature Navigator, go to http://www.cisco.com/go/cfn.



Configuring MPLS VPN-Inter-AS-IPv4 BGP Label Distribution

- MPLS VPN Inter-AS IPv4 BGP Label Distribution, on page 217
- Restrictions for MPLS VPN Inter-AS IPv4 BGP Label Distribution, on page 218
- Information About MPLS VPN Inter-AS IPv4 BGP Label Distribution, on page 218
- How to Configure MPLS VPN Inter-AS IPv4 BGP Label Distribution, on page 220
- Creating Route Maps, on page 226
- Verifying the MPLS VPN Inter-AS IPv4 BGP Label Distribution Configuration, on page 231
- Configuration Examples for MPLS VPN Inter-AS IPv4 BGP Label Distribution, on page 237
- Feature History for Configuring MPLS VPN Inter-AS IPv4 BGP Label Distribution, on page 253

## MPLS VPN Inter-AS IPv4 BGP Label Distribution

This feature enables you to set up a Virtual Private Network (VPN) service provider network. In this network, the Autonomous System Boundary Routers (ASBRs) exchange IPv4 routes with Multiprotocol Label Switching (MPLS) labels of the provider edge (PE) routers. Route reflectors (RRs) exchange VPNv4 routes by using multihop, multiprotocol, External Border Gateway Protocol (EBGP). This configuration saves the ASBRs from having to store all the VPNv4 routes. Using the route reflectors to store the VPNv4 routes and forward them to the PE routers results in improved scalability.

The MPLS VPN—Inter-AS—IPv4 BGP Label Distribution feature has the following benefits:

- Having the route reflectors store VPNv4 routes results in improved scalability—This configuration scales better than configurations where the ASBR holds all the VPNv4 routes and forwards the routes based on VPNv4 labels. With this configuration, route reflectors hold the VPNv4 route, which simplifies the configuration at the border of the network.
- Enables a non-VPN core network to act as a transit network for VPN traffic—You can transport IPv4 routes with MPLS labels over a non MPLS VPN service provider.
- Eliminates the need for any other label distribution protocol between adjacent LSRs—If two adjacent label switch routers (LSRs) are also BGP peers, BGP can handle the distribution of the MPLS labels. No other label distribution protocol is needed between the two LSRs.
- Includes EBGP multipath support to enable load balancing for IPv4 routes across autonomous system (AS) boundaries.

## Restrictions for MPLS VPN Inter-AS IPv4 BGP Label Distribution

This feature includes the following restrictions:

- For networks configured with EBGP multihop, a labeled switched path (LSP) must be established between nonadjacent devices. (RFC 3107)
- The PE devices must run images that support BGP label distribution. Otherwise, you cannot run EBGP between them.
- Point-to-Point Protocol (PPP) encapsulation on the ASBRs is not supported with this feature.
- The physical interfaces that connect the BGP speakers must support Cisco Express Forwarding (CEF) or distributed CEF and MPLS

# Information About MPLS VPN Inter-AS IPv4 BGP Label Distribution

To configure MPLS VPN Inter-AS IPv4 BGP Label Distribution, you need the following information:

#### MPLS VPN Inter-AS IPv4 BGP Label Distribution Overview

This feature enables you to set up a VPN service provider network to exchange IPv4 routes with MPLS labels. You can configure the VPN service provider network as follows:

- Route reflectors exchange VPNv4 routes by using multihop, multiprotocol EBGP. This configuration also preserves the next hop information and the VPN labels across the autonomous systems.
- A local PE router (for example, PE1 in Figure 1) needs to know the routes and label information for the remote PE router (PE2). This information can be exchanged between the PE routers and ASBRs in one of two ways:
  - Internal Gateway Protocol (IGP) and Label Distribution Protocol (LDP): The ASBR can redistribute the IPv4 routes and MPLS labels it learned from EBGP into IGP and LDP and vice versa.
  - Internal Border Gateway Protocol (IBGP) IPv4 label distribution: The ASBR and PE router can use direct IBGP sessions to exchange VPNv4 and IPv4 routes and MPLS labels.

Alternatively, the route reflector can reflect the IPv4 routes and MPLS labels learned from the ASBR to the PE routers in the VPN. This is accomplished by enabling the ASBR to exchange IPv4 routes and MPLS labels with the route reflector. The route reflector also reflects the VPNv4 routes to the PE routers in the VPN (as mentioned in the first bullet). For example, in VPN1, RR1 reflects to PE1 the VPNv4 routes it learned and IPv4 routes and MPLS labels learned from ASBR1. Using the route reflectors to store the VPNv4 routes and forward them through the PE routers and ASBRs allows for a scalable configuration.

• ASBRs exchange IPv4 routes and MPLS labels for the PE routers by using EBGP. This enables load balancing across CSC boundaries.

RR1 Multiprotocol
VPNv4

BGP IPv4 routes
and label with
multipath support
CE1

VPN1

ASBR1

ASBR2

PE2

CE2

VPN1

VPN2

Figure 27: VPNs Using EBGP and IBGP to Distribute Routes and MPLS Labels

## **BGP Routing Information**

BGP routing information includes the following items:

- A network number (prefix), which is the IP address of the destination.
- Autonomous system (AS) path, which is a list of the other ASs through which a route passes on its way to the local router. The first autonomous system in the list is closest to the local router. The last autonomous system in the list is farthest from the local router and usually the autonomous system where the route began.
- Path attributes, which provide other information about the autonomous system path, for example, the next hop.

#### How BGP Sends MPLS Labels with Routes

When BGP (EBGP and IBGP) distributes a route, it can also distribute an MPLS label that is mapped to that route. The MPLS label-mapping information for the route is carried in the BGP update message that contains the information about the route. If the next hop is not changed, the label is preserved.

When you issue the **neighbor send-label** command on both BGP routers, the routers advertise to each other that they can then send MPLS labels with the routes. If the routers successfully negotiate their ability to send MPLS labels, the routers add MPLS labels to all outgoing BGP updates.

#### **Using Route Maps to Filter Routes**

When both routers are configured to distribute routes with MPLS labels, all the routes are encoded with the multiprotocol extensions and contain an MPLS label. You can use a route map to control the distribution of MPLS labels between routers. Route maps enable you to specify the following:


- For a router distributing MPLS labels, you can specify which routes are distributed with an MPLS label.
- For a router receiving MPLS labels, you can specify which routes are accepted and installed in the BGP table.

# How to Configure MPLS VPN Inter-AS IPv4 BGP Label Distribution

The figure below shows the following configuration:

- The configuration consists of two VPNs.
- The ASBRs exchange the IPv4 routes with MPLS labels.
- The route reflectors exchange the VPNv4 routes using multi-hop MPLS EBGP.
- The route reflectors reflect the IPv4 and VPNv4 routes to the other routers in its autonomous system.

Figure 28: Configuring Two VPN Service Providers to Exchange IPv4 Routes and MPLS Labels

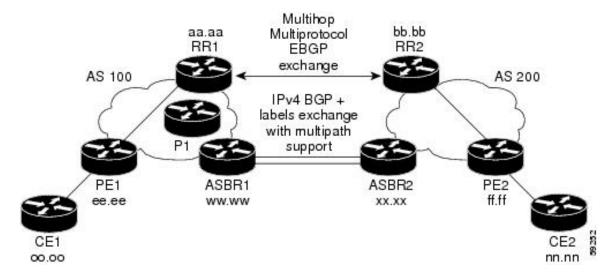

### Configuring the ASBRs to Exchange IPv4 Routes and MPLS Labels

Perform this task to configure the ASBRs so that they can distribute BGP routes with MPLS labels.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	

	Command or Action	Purpose
Step 3	<pre>router bgp as-number Example: Device(config) # router bgp 100</pre>	Enters router configuration mode.  • as-number—Number of an autonomous system that identifies the router to other BGP routers and tags the routing information that is passed along. The valid values range from 1 through 65535. Private autonomous system numbers that can be used in internal networks range from 64512 through 65535.
Step 4	<pre>neighbor {ip-address   peer-group-name} remote-as as-number  Example: Device(config) # neighbor 209.165.201.2 remote-as 200</pre>	<ul> <li>Adds an entry to the BGP or multiprotocol BGP neighbor table.</li> <li>The <i>ip-address</i> argument specifies the IP address of the neighbor.</li> <li>The <i>peer-group-name</i>argument specifies the name of a BGP peer group.</li> <li>The <i>as-number</i> argument specifies the autonomous system to which the neighbor belongs.</li> </ul>
Step 5	address-family ipv4 [multicast   unicast   vrfvrf-name]  Example:  Device(config-router) # address-family ipv4	Enters address family configuration mode for configuring routing sessions such as BGP that use standard IPv4 address prefixes.  • The multicastkeyword specifies IPv4 multicast address prefixes.  • The unicastkeyword specifies IPv4 unicast address prefixes.  • The vrf vrf-name keyword and argument specifies the name of the VPN routing/forwarding instance (VRF) to associate with subsequent IPv4 address family configuration mode commands.
Step 6	<pre>maximum-paths number-paths  Example: Device(config-router) # maximum-paths 2</pre>	(Optional) Controls the maximum number of parallel routes an IP routing protocol can support.  The number-paths argument specifies the maximum number of parallel routes an IP routing protocol installs in a routing table, in the range from 1 through 6.

	Command or Action	Purpose
		Note The valid values of the maximum-paths command range from 1 to 32. However, the maximum value that can be configured is 2.
Step 7	neighbor {ip-address   peer-group-name} activate	Enables the exchange of information with a neighboring router.
	Example:  Device(config-router-af) # neighbor 209.165.201.2 activate	<ul> <li>The ip-address argument specifies the IP address of the neighbor.</li> <li>The peer-group-name argument specifies the name of a BGP peer group.</li> </ul>
Step 8	<pre>neighbor ip-addresssend-label Example: Device(config-router-af) # neighbor 10.0.0.1 send-label</pre>	Enables a BGP router to send MPLS labels with BGP routes to a neighboring BGP router.  • The ip-address argument specifies the IP address of the neighboring router.
Step 9	<pre>exit-address-family  Example:  Device(config-router-af)# exit-address-family</pre>	Exits from the address family submode.
Step 10	<pre>end Example: Device(config-router-af)# end</pre>	(Optional) Exits to privileged EXEC mode.

# **Configuring the Route Reflectors to Exchange VPNv4 Routes**

#### Before you begin

Perform this task to enable the route reflectors to exchange VPNv4 routes by using multihop, multiprotocol EBGP.

This procedure also specifies that the next hop information and the VPN label are preserved across the autonomous systems. This procedure uses RR1 as an example.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Device> enable	

	Command or Action	Purpose
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	router bgp as-number	Enters router configuration mode.
	Example:  Device(config)# router bgp 100	• as-number—Number of an autonomous system that identifies the router to other BGP routers and tags the routing information that is passed along. The valid values range from 1through 65535. Private autonomous system numbers that can be used in internal networks range from 64512 through 65535.
		The autonomous system number identifies RR1 to routers in other autonomous systems.
Step 4	<b>neighbor</b> { <i>ip-address</i>   <i>peer-group-name</i> } <b>remote-as</b> <i>as-number</i>	Adds an entry to the BGP or multiprotocol BGP neighbor table.
	Example:  Device(config) # neighbor 192.0.2.1 remote-as 200	<ul> <li>The <i>ip-address</i> argument specifies the IP address of the neighbor.</li> <li>The <i>peer-group-name</i> argument specifies the name of a BGP peer group.</li> <li>The <i>as-number</i> argument specifies the autonomous system to which the neighbor belongs.</li> </ul>
Step 5	<pre>address-family vpnv4[unicast] Example: Device(config-router)# address-family vpnv4</pre>	Enters address family configuration mode for configuring routing sessions, such as BGP, that uses standard Virtual Private Network Version 4 (VPNv4) address prefixes.  • The optional unicast keyword specifies VPNv4 unicast address prefixes.
Step 6	<pre>neighbor {ip-address   peer-group-name} ebgp-multihop [ttl]  Example: Device(config-router-af) # neighbor 192.0.2.1 ebgp-multihop 255</pre>	Accepts and attempts BGP connections to external peers residing on networks that are not directly connected.  • The <i>ip-address</i> argument specifies the IP address of the BGP-speaking neighbor.  • The <i>peer-group-name</i> argument specifies the name of a BGP peer group.

	Command or Action	Purpose
		• The ttl argument specifies the time-to-live in the range from 1 through 255 hops.
Step 7	neighbor {ip-address   peer-group-name} activate	Enables the exchange of information with a neighboring router.
	Example:  Device(config-router-af)# neighbor 192.0.2.1 activate	<ul> <li>The <i>ip-address</i> argument specifies the IP address of the neighbor.</li> <li>The <i>peer-group-name</i> argument specifies the name of a BGP peer group.</li> </ul>
Step 8	<pre>neighbor {ip-address   peer-group-name} next-hop unchanged  Example: Device(config-router-af) # neighbor 10.0.0.2 next-hop unchanged</pre>	<ul> <li>Enables an External BGP (EBGP) multihop peer to propagate the next hop unchanged.</li> <li>The <i>ip-address</i> argument specifies the IP address of the next hop.</li> <li>The <i>peer-group-name</i> argument specifies the name of a BGP peer group that is the next hop.</li> </ul>
Step 9	<pre>exit-address-family  Example:  Device(config-router-af)# exit-address-family</pre>	Exits from the address family submode.
Step 10	<pre>end Example: Device(config-router-af)# end</pre>	(Optional) Exits to privileged EXEC mode.

# Configuring the Route Reflectors to Reflect Remote Routes in Its autonomous system

Perform this task to enable the RR to reflect the IPv4 routes and labels that are learned by the ASBR to the PE routers in the autonomous system.

This is accomplished by making the ASBR and PE router the route reflector clients of the RR. This procedure also explains how to enable the RR to reflect the VPNv4 routes.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted
	Device> enable	

	Command or Action	Purpose
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	router bgp as-number	Enters router configuration mode.
	Example: Device(config)# router bgp 100	• as-number—Number of an autonomous system that identifies the router to other BGP routers and tags the routing information that is passed along. The valid values range from 1 through 65535. Private autonomous system numbers that can be used in internal networks range from 64512 through 65535.
		The autonomous system number identifies RR1 to routers in other autonomous systems.
Step 4	address-family ipv4 [multicast   unicast   vrfvrf-name]  Example:	Enters address family configuration mode for configuring routing sessions, such as BGP, that use standard IPv4 address prefixes.
	Device(config-router) # address-family ipv4	• The <b>multicast</b> keyword specifies IPv4 multicast address prefixes.
		<ul> <li>The unicastkeyword specifies IPv4 unicast address prefixes.</li> </ul>
		• The vrf vrf-name keyword and argument specifies the name of the VPN routing/forwarding instance (VRF) to associate with subsequent IPv4 address family configuration mode commands.
Step 5	neighbor {ip-address   peer-group-name } activate	Enables the exchange of information with a neighboring router.
	Example:  Device(config-router-af)# neighbor 203.0.113.1 activate	<ul> <li>The <i>ip-address</i> argument specifies the IP address of the neighbor.</li> <li>The <i>peer-group-name</i> argument specifies</li> </ul>
		the name of a BGP peer group.
Step 6	neighborip-addressroute-reflector-client  Example:  Device (config=router-af) #_neighbor	Configures the router as a BGP route reflector and configures the specified neighbor as its client.
	Device(config-router-af)# neighbor 203.0.113.1 route-reflector-client	• The ip-address argument specifies the IP address of the BGP neighbor being identified as a client.

	Command or Action	Purpose
Step 7	<pre>neighborip-addresssend-label Example: Device(config-router-af)# neighbor 203.0.113.1 send-label</pre>	Enables a BGP router to send MPLS labels with BGP routes to a neighboring BGP router.  • The ip-address argument specifies the IP address of the neighboring router.
Step 8	<pre>exit-address-family  Example:  Device(config-router-af)# exit-address-family</pre>	Exits from the address family submode.
Step 9	address-family vpnv4 [unicast]  Example:  Device(config-router) # address-family vpnv4	Enters address family configuration mode for configuring routing sessions, such as BGP, that use standard VPNv4 address prefixes.  • The optional <b>unicast</b> keyword specifies VPNv4 unicast address prefixes.
Step 10	<pre>neighbor {ip-address   peer-group-name} activate Example: Device (config-router-af) # neighbor 203.0.113.1 activate</pre>	<ul> <li>Enables the exchange of information with a neighboring router.</li> <li>The <i>ip-address</i> argument specifies the IP address of the neighbor.</li> <li>The <i>peer-group-name</i> argument specifies the name of a BGP peer group.</li> </ul>
Step 11	<pre>neighbor ip-address route-reflector-client Example: Device(config-router-af) # neighbor 203.0.113.1 route-reflector-client</pre>	Enables the RR to pass IBGP routes to the neighboring router.
Step 12	<pre>exit-address-family  Example:    Device(config-router-af)#    exit-address-family</pre>	Exits from the address family submode.
Step 13	<pre>end Example: Device(config-router-af)# end</pre>	(Optional) Exits to privileged EXEC mode.

# **Creating Route Maps**

Route maps enable you to specify which routes are distributed with MPLS labels. Route maps also enable you to specify which routes with MPLS labels a router receives and adds to its BGP table.

Route maps work with access lists. You enter the routes into an access list and then specify the access list when you configure the route map.

The following procedures enable the ASBRs to send MPLS labels with the routes specified in the route maps. Further, the ASBRs accept only the routes that are specified in the route map.

# **Configuring a Route Map for Arriving Routes**

Perform this task to create a route map to filter arriving routes. You create an access list and specify the routes that the router accepts and adds to the BGP table.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	router bgp as-number	Enters router configuration mode.
	Example: Device(config)# router bgp 100	• as-number—Number of an autonomous system that identifies the router to other BGP routers and tags the routing information that is passed along. The valid values range from 1 through 65535. Private autonomous system numbers that can be used in internal networks range from 64512 through 65535.  The autonomous system number identifies RR1 to routers in other autonomous systems.
Step 4	<pre>route-map route-map name [permit   deny] [sequence-number]  Example: Device(config-router) # route-map IN permit 11</pre>	<ul> <li>Creates a route map with the name you specify.</li> <li>The permit keyword allows the actions to happen if all conditions are met.</li> <li>The denykeyword prevents any actions from happening if all conditions are met.</li> <li>The sequence-number argument allows you to prioritize route maps. If you have multiple route maps and want to prioritize them, assign each one a number. The route map with the lowest number is implemented first, followed by the route map with the second lowest number, and so on.</li> </ul>

	Command or Action	Purpose
Step 5	match ip address { access-list-number   access-list-name } [access-list-number  access-list-name ]  Example:  Device (config-route-map) # match ip	Distributes any routes that have a destination network number address that is permitted by a standard or extended access list, or performs policy routing on packets.  • The <i>access-list-number</i> argument is a
	address 2	number of a standard or extended access list. It can be an integer from 1 through 199.  • The <i>access-list-name</i> argument is a nam of a standard or extended access list. It can be an integer from 1 through 199.
Step 6	<pre>match mpls-label Example: Device(config-route-map) # match mpls-label</pre>	Redistributes routes that include MPLS labels if the routes meet the conditions that are specified in the route map.
Step 7	<pre>end Example: Device(config-router-af)# end</pre>	(Optional) Exits to privileged EXEC mode.

# **Configuring a Route Map for Departing Routes**

Perform this task to create a route map to filter departing routes. You create an access list and specify the routes that the router distributes with MPLS labels.

	<b>Command or Action</b>	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	router bgp as-number	Enters router configuration mode.
	Example:	• as-number—Number of an autonomous
	Device(config)# router bgp 100	system that identifies the router to other BGP routers and tags the routing information that is passed along. The valid

	Command or Action	Purpose
		values range from 1 through 65535. Private autonomous system numbers that can be used in internal networks range from 64512 through 65535.
		The AS number identifies RR1 to routers in other autonomous systems.
Step 4	route-map route-map name [permit   deny] [sequence-number]	Creates a route map with the name you specify.
	Example:	• The <b>permit</b> keyword allows the actions to happen if all conditions are met.
	Device(config-router)# route-map OUT permit 10	• The <b>deny</b> keyword prevents any actions from happening if all conditions are met.
		• The <i>sequence-number</i> argument allows you to prioritize route maps. If you have multiple route maps and want to prioritize them, assign each one a number. The route map with the lowest number is implemented first, followed by the route map with the second lowest number, and so on.
Step 5	match ip address { access-list-number   access-list-name } [access-list-number  access-list-name ]  Example:	Distributes any routes that have a destination network number address that is permitted by a standard or extended access list, or performs policy routing on packets.
	Device(config-route-map) # match 10.0.0.2	• The <i>access-list-number</i> argument is a number of a standard or extended access list. It can be an integer from 1 through 199.
		• The <i>access-list-name</i> argument is a name of a standard or extended access list. It can be an integer from 1 through 199.
Step 6	set mpls-label	Enables a route to be distributed with an MPLS
	<pre>Example:    Device(config-route-map)# set mpls-label</pre>	label if the route matches the conditions that are specified in the route map.
Step 7	end	(Optional) Exits to privileged EXEC mode.
	Example:	
	Device(config-router-af)# end	

# **Applying the Route Maps to the ASBRs**

Perform this task to enable the ASBRs to use the route maps.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	router bgp as-number	Enters router configuration mode.
	Example:  Device(config)# router bgp 100	• as-number—Number of an autonomous system that identifies the router to other BGP routers and tags the routing information that is passed along. The valid values range from 1 through 65535. Private autonomous system numbers that can be used in internal networks range from 64512 through 65535.
		The autonomous system number identifies RR1 to routers in other autonomous systems.
Step 4	address-family ipv4 [multicast   unicast   vrfvrf-name]  Example:	Enters address family configuration mode for configuring routing sessions such as BGP that use standard IPv4 address prefixes.  • The multicastkeyword specifies IPv4
	Device(config-router)# address-family ipv4	multicast address prefixes.
		• The <b>unicast</b> keyword specifies IPv4 unicast address prefixes.
		The vrf vrf-name keyword and argument specifies the name of the VPN routing/forwarding instance (VRF) to associate with subsequent IPv4 address family configuration mode commands.
Step 5	neighborip-addressroute-maproute-map-nameout	Applies a route map to incoming routes.
	Example:	

	Command or Action	Purpose
	Device(config-router-af) # neighbor 209.165.200.225 route-map OUT out	• The <i>ip-address</i> argument specifies the device to which the route map is to be applied.
		• The <i>route-map-name</i> argument specifies the name of the route map.
		• The <b>out</b> keyword applies the route map to outgoing routes.
Step 6	neighbor ip-address send-label	Advertises the ability of the router to send
	Example:	MPLS labels with routes.
	Device(config-router-af)# neighbor 209.165.200.225 send-label	The ip-address argument specifies the router that is enabled to send MPLS label with routes.
Step 7	exit-address-family	Exits from the address family submode.
	Example:	
	Device(config-router-af)# exit-address-family	
Step 8	end	(Optional) Exits to privileged EXEC mode.
	Example:	
	Device(config-router-af)# end	

# **Verifying the MPLS VPN Inter-AS IPv4 BGP Label Distribution Configuration**

The following figure is a reference for the configuration.

Multihop aa.aa bb.bb Multiprotocol RR1 RR2 EBGP exchange AS 100 AS 200 IPv4 BGP + labels exchange with multipath support ee.ee ww.ww XX.XX

Figure 29: Configuring Two VPN Service Providers to Exchange IPv4 Routes and MPLS Labels

If you use route reflectors to distribute the VPNv4 routes and use the ASBRs to distribute the IPv4 labels, use the following procedures to help verify the configuration:

# **Verifying the Route Reflector Configuration**

Perform this task to verify the route reflector configuration.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Device> enable	
Step 2	<pre>show ip bgp vpnv4 {all   rd route-distinguisher   vrf vrf-name } [summary] [labels]  Example: Device# show ip bgp vpnv4 all summary Example: Device# show ip bgp vpnv4 all labels</pre>	(Optional) Displays VPN address information from the BGP table.  • Use the <b>show ip bgp vpnv4</b> command with the all and summary keywords to verify that a multihop, multiprotocol, EBGP session exists between the route reflectors and that the VPNv4 routes are being exchanged between the route reflectors.
		<ul> <li>The last two lines of the command output show the following information:</li> <li>Prefixes are being learned from PE1 and then passed to RR2.</li> </ul>

	Command or Action	Purpose
		Prefixes are being learned from RR2 and then passed to PE1.
		• Use the <b>show ip bgp vpnv4</b> command with the all and labels keywords to verify that the route reflectors are exchanging VPNv4 label information.
Step 3	disable	(Optional) Exits to user EXEC mode.
	Example: Device# disable	

# **Verifying that CE1 Has Network Reachability Information for CE2**

Perform this task to verify that router CE1 has NLRI for router CE2.

#### **Procedure**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Device> enable	
Step 2	<pre>show ip route [ip-address [mask] [longer prefixes]]   [protocol [process-id]]   [list access-list-number   access-list-name] Example: Device# show ip route 209.165.201.1</pre>	<ul> <li>Displays the current state of the routing table.</li> <li>Use the <b>show ip route</b> command with the ip-address argument to verify that CE1 has a route to CE2.</li> <li>Use the <b>show ip route</b> command to verify the routes learned by CE1. Make sure to list the route for CE2.</li> </ul>
Step 3	disable Example:	(Optional) Exits to user EXEC mode.
	Device# disable	

# **Verifying that PE1 Has Network Layer Reachability Information for CE2**

Perform this task to verify that router PE1 has NLRI for router CE2.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	Device> enable	
Step 2	show ip route vrf vrf-name [connected] [protocols [as-number] [tag] [output-modifiers] ] [list number[cuput-modifiers]] [profile] [static[cuput-modifiers]] [summary [output-modifiers]] [supernets-only [output-modifiers]] [traffic engineering [output-modifiers]]  Example:  Device# show ip route vrf vpn1 209.165.201.1	<ul> <li>(Optional) Displays the IP routing table that is associated with a VRF.</li> <li>• Use the <b>show ip route vrf</b> command to verify that router PE1 learns routes from router CE2 (nn.nn.nn.nn).</li> </ul>
Step 3	show ip bgp vpnv4 {all   rd route-distinguisher   vrf vrf-name } {ip-prefix/length [longer-prefixes] [output-modifiers]] [network-address [mask] [longer-prefixes] [output-modifiers]] [cidr-only] [community] [community-list] [dampened-paths] [filter-list] [flap-statistics] [inconsistent-as] [neighbors] [path [line]] [peer-group] [quote-regexp] [regexp] [summary] [tags]  Example:  Device# show ip bgp vpnv4 vrf vpn1 209.165.201.1	(Optional) Displays VPN address information from the BGP table.  • Use the <b>show ip bgp vpnv4</b> command with the <b>vrf</b> or <b>all</b> keyword to verify that router PE2 is the BGP next-hop to router CE2.
Step 4	<pre>show ip cef [vrf vrf-name] [network [mask]] [longer-prefixes] [detail]  Example:  Device# show ip cef vrf vpn1 209.165.201.1</pre>	(Optional) Displays entries in the forwarding information base (FIB) or displays a summary of the FIB.  • Use the <b>show ip cef</b> command to verify that the Cisco Express Forwarding (CEF) entries are correct.
Step 5	show mpls forwarding-table [{network {mask   length}   labels   label [-label]   interface   interface   next-hop   address   lsp-tunnel [tunnel-id]   } ] [detail] Example:	(Optional) Displays the contents of the MPLS forwarding information base (LFIB).  • Use the <b>show mpls forwarding-table</b> command to verify the IGP label for the BGP next hop router (autonomous system boundary).

	Command or Action	Purpose
	Device# show mpls forwarding-table	
Step 6	show ip bgp [network] [network-mask] [longer-prefixes]	(Optional) Displays entries in the BGP routing table.
	Example: Device# show ip bgp 209.165.202.129	• Use the <b>show ip bgp</b> command to verify the label for the remote egress PE router (PE2).
Step 7	<pre>show ip bgp vpnv4 {all   rd route-distinguisher   vrf vrf-name } [summary] [labels]  Example: Device# show ip bgp vpnv4 all labels</pre>	<ul> <li>(Optional) Displays VPN address information from the BGP table.</li> <li>Use the show ip bgp vpnv4 all summary command to verify the VPN label of CE2, as advertised by PE2.</li> </ul>
Step 8	disable  Example:  Device# disable	(Optional) Exits to user EXEC mode.

# **Verifying that PE2 Has Network Reachability Information for CE2**

Perform this task to ensure that PE2 can access CE2.

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Device> enable	
Step 2	show ip route vrf vrf-name [connected] [protocol [as-number] [tag] [output-modifiers] ] [list number [output-modifiers] ] [profile] [static [output-modifiers] ] [summary [output-modifiers] ] [supernets-only [output-modifiers] ] [traffic-engineering [output-modifiers] ]  Example:  Device# show ip route vrf vpn1 209.165.201.1	<ul> <li>(Optional) Displays the IP routing table that is associated with a VRF.</li> <li>• Use the show ip route vrf command to check the VPN routing and forwarding table for CE2. The output provides next hop information.</li> </ul>
Step 3	show mpls forwarding-table [vrf vpn-name] [{network {mask   length }   labels}	(Optional) Displays the contents of the LFIB.  • Use the <b>show mpls forwarding-table</b> command with the <b>vrf</b> keyword to check

	Command or Action	Purpose
	<pre>label[-label]  interface interface   next-hop address   lsp-tunnel [tunnel-id] } ] [detail]  Example:  Device# show mpls forwarding-table vrf vpn1 209.165.201.1</pre>	the VPN routing and forwarding table for CE2. The output provides the label for CE2 and the outgoing interface.
Step 4	<pre>show ip bgp vpnv4 {all   rd route-distinguisher   vrf vrf-name} [summary] [labels]  Example:  Device# show ip bgp vpnv4 all labels</pre>	<ul> <li>(Optional) Displays VPN address information from the BGP table.</li> <li>Use the show ip bgp vpnv4 command with the all and labels keywords to check the VPN label for CE2 in the multiprotocol BGP table.</li> </ul>
Step 5	<pre>show ip cef [vrf vrf-name ] [network [mask]] [longer-prefixes] [detail] Example: Device# show ip cef <vrf-name> 209.165.201.1</vrf-name></pre>	<ul> <li>(Optional) Displays entries in the forwarding information base (FIB) or displays a summary of the FIB.</li> <li>Use the <b>show ip cef</b> command to check the CEF entry for CE2. The command output shows the local label for CE2 and the outgoing interface.</li> </ul>
Step 6	disable  Example:  Device# disable	(Optional) Exits to user EXEC mode.

# **Verifying the ASBR Configuration**

Perform this task to verify that the ASBRs exchange IPv4 routes with MPLS labels or IPv4 routes without labels as prescribed by a route map.

Command or Action	Purpose
enable	Enables privileged EXEC mode.
Example:	Enter your password if prompted.
Device> enable	
show ip bgp [network] [network-mask] [longer-prefixes]	(Optional) Displays entries in the BGP routing table.
Example:	• Use the <b>show ip bgp</b> command to verify
Device# show ip bgp 209.165.202.129	• ASBR1 receives an MPLS label for PE2 from ASBR2.
Example:	
Device# show ip bgp 192.0.2.1	
	enable  Example:  Device> enable  show ip bgp [network] [network-mask] [longer-prefixes]  Example:  Device# show ip bgp 209.165.202.129  Example:

	Command or Action	Purpose
		<ul> <li>ASBR1 received from ASBR2 IPv4 routes for RR2 without labels. If the command output does not display the MPLS label information, the route was received without an MPLS label.</li> <li>ASBR2 distributes an MPLS label for PE2 to ASBR1.</li> <li>ASBR2 does not distribute a label for RR2 to ASBR1.</li> </ul>
Step 3	<pre>show ip cef [vrf vrf-name] [network [mask]] [longer-prefixes] [detail] Example: Device# show ip cef 209.165.202.129 Example: Device# show ip cef 192.0.2.1</pre>	(Optional) Displays entries in the forwarding information base (FIB) or displays a summary of the FIB.  • Use the <b>show ip cef</b> command from ASBR1 and ASBR2 to check that  • The CEF entry for PE2 is correct.  • The CEF entry for RR2 is correct.
Step 4	disable	(Optional) Exits to the user EXEC mode.
	Example:	
	Device# disable	

# Configuration Examples for MPLS VPN Inter-AS IPv4 BGP Label Distribution

Configuration examples for MPLS VPN Inter-AS IPv4 BGP Label Distribution feature include the following:

# Configuration Examples for Inter-AS Using BGP to Distribute Routes and MPLS Labels Over an MPLS VPN Service Provider

The figure shows two MPLS VPN service providers. The service provider distributes the VPNv4 routes between the route reflectors. They distribute the IPv4 routes with MPLS labels between the ASBRs.

Multihop bb.bb aa.aa Multiprotocol RR<sub>1</sub> RR2 EBGP exchange AS 100 AS 200 IPv4 BGP + labels exchange with multipath support PE2 ff.ff ee.ee ww.ww XX.XX

Figure 30: Distributing IPv4 Routes and MPLS Labels Between MPLS VPN Service Providers

The configuration examples show the two techniques that you can use to distribute the VPNv4 routes and the IPv4 routes with MPLS labels, from the remote RRs and PEs to the local RRs and PEs:

- Autonomous system 100 uses the RRs to distribute the VPNv4 routes learned from the remote RRs. The RRs also distribute the remote PE address and label that is learned from ASBR1 using IPv4 + labels.
- In autonomous system 200, the IPv4 routes that ASBR2 learned are redistributed into IGP.

The configuration examples in this section are as follow:

#### **Example: Route Reflector 1 (MPLS VPN Service Provider)**

The configuration example for RR1 specifies the following:

- RR1 exchanges VPNv4 routes with RR2 using multiprotocol, multihop EBGP.
- The VPNv4 next hop information and the VPN label preserved across the autonomous systems.
- RR1 reflects to PE1:
  - The VPNv4 routes learned from RR2.
  - The IPv4 routes and MPLS labels learned from ASBR1

```
ip subnet-zero
ip cef
!
interface Loopback0
  ip address 10.0.0.1 255.255.255.255
  no ip directed-broadcast
!
interface Serial1/2
  ip address 209.165.201.8 255.0.0.0
  no ip directed-broadcast
  clockrate 124061
!
router ospf 10
  log-adjacency-changes
  auto-cost reference-bandwidth 1000
```

```
network 10.0.0.1 0.0.0.0 area 100
 network 209.165.201.9 0.255.255.255 area 100
router bgp 100
 bop cluster-id 1
 bgp log-neighbor-changes
 timers bgp 10 30
 neighbor 203.0.113.1 remote-as 100
 neighbor 203.0.113.1 update-source Loopback0
 neighbor 209.165.200.225 remote-as 100
 neighbor 209.165.200.225 update-source Loopback0
 neighbor 192.0.2.1 remote-as 200
 neighbor 192.0.2.1 ebgp-multihop 255
 neighbor 192.0.2.1 update-source Loopback0
 no auto-summary
 address-family ipv4
 neighbor 203.0.113.1 activate
 neighbor 203.0.113.1 route-reflector-client
                                                             !TPv4+labels session to PE1
 neighbor 203.0.113.1 send-label
 neighbor 209.165.200.225 activate
 neighbor 209.165.200.225 route-reflector-client
                                                                 !IPv4+labels session to
ASBR1
 neighbor 209.165.200.225 send-label
 no neighbor 192.0.2.1 activate
 no auto-summary
 no synchronization
 exit-address-family
 address-family vpnv4
 neighbor 203.0.113.1 activate
 neighbor 203.0.113.1 route-reflector-client
                                                             !VPNv4 session with PE1
 neighbor 203.0.113.1 send-community extended
 neighbor 192.0.2.1 activate
 neighbor 192.0.2.1 next-hop-unchanged
                                                          !MH-VPNv4 session with RR2
 neighbor 192.0.2.1 send-community extended
                                                             !with next hop unchanged
 exit-address-family
ip default-gateway 3.3.0.1
no ip classless
snmp-server engineID local 00000009020000D0584B25C0
snmp-server community public RO
 snmp-server community write RW
no snmp-server ifindex persist
 snmp-server packetsize 2048
 end
```

#### Configuration Example: ASBR1 (MPLS VPN Service Provider)

ASBR1 exchanges IPv4 routes and MPLS labels with ASBR2.

In this example, ASBR1 uses route maps to filter routes.

- A route map called OUT specifies that ASBR1 should distribute the PE1 route (ee.ee) with labels and the RR1 route (aa.aa) without labels.
- A route map called IN specifies that ASBR1 should accept the PE2 route (ff.ff) with labels and the RR2 route (bb.bb) without labels.

```
ip subnet-zero
mpls label protocol tdp
```

```
interface Loopback0
ip address 209.165.200.225 255.255.255.255
no ip directed-broadcast
no ip route-cache
no ip mroute-cache
interface Ethernet0/2
ip address 209.165.201.6 255.0.0.0
no ip directed-broadcast
no ip mroute-cache
interface Ethernet0/3
ip address 209.165.201.18 255.0.0.0
no ip directed-broadcast
no ip mroute-cache
mpls label protocol ldp
mpls ip
!router ospf 10
log-adjacency-changes
auto-cost reference-bandwidth 1000
redistribute connected subnets
 passive-interface Ethernet0/2
network 209.165.200.225 0.0.0.0 area 100
network 209.165.201.9 0.255.255.255 area 100
router bap 100
bgp log-neighbor-changes
 timers bgp 10 30
neighbor 10.0.0.1 remote-as 100
neighbor 10.0.0.1 update-source Loopback0
neighbor 209.165.201.2 remote-as 200
no auto-summary
address-family ipv4
                                         ! Redistributing IGP into BGP
                                        ! so that PE1 & RR1 loopbacks
redistribute ospf 10
neighbor 10.0.0.1 activate
                                      ! get into the BGP table
neighbor 10.0.0.1 send-label
neighbor 209.165.201.2 activate
neighbor 209.165.201.2 advertisement-interval 5
neighbor 209.165.201.2 send-label
neighbor 209.165.201.2 route-map IN in
                                              ! accepting routes in route map IN.
neighbor 209.165.201.2 route-map OUT out ! distributing routes in route map OUT.
neighbor 209.165.201.3 activate
 neighbor 209.165.201.3 advertisement-interval 5
neighbor 209.165.201.3 send-label
neighbor 209.165.201.3 route-map IN in
                                              ! accepting routes in route map IN.
neighbor 209.165.201.3 route-map OUT out ! distributing routes in route map OUT.
no auto-summary
no synchronization
exit-address-family
ip default-gateway 3.3.0.1
ip classless
access-list 1 permit 203.0.113.1 log
                                                   !Setting up the access lists
access-list 2 permit 209.165.202.129 log
access-list 3 permit 10.0.0.1 log
access-list 4 permit 192.0.2.1 log
route-map IN permit 10
                                                    !Setting up the route maps
match ip address 2
match mpls-label
```

```
route-map IN permit 11
match ip address 4
!
route-map OUT permit 12
match ip address 3
!
route-map OUT permit 13
match ip address 1
set mpls-label
!
```

#### **Configuration Example: Route Reflector 2 (MPLS VPN Service Provider)**

RR2 exchanges VPNv4 routes with RR1 through multihop, multiprotocol EBGP. This configuration also specifies that the next hop information and the VPN label are preserved across the autonomous systems.

```
ip subnet-zero
ip cef
interface Loopback0
 ip address 192.0.2.1 255.255.255.255
 no ip directed-broadcast
interface Serial1/1
 ip address 209.165.201.10 255.0.0.0
 no ip directed-broadcast
 no ip mroute-cache
 router ospf 20
 log-adjacency-changes
 network 192.0.2.1 0.0.0.0 area 200
 network 209.165.201.20 0.255.255.255 area 200
router bgp 200
 bgp cluster-id 1
 bgp log-neighbor-changes
  timers bgp 10 30
 neighbor 10.0.0.1 remote-as 100
 neighbor 10.0.0.1 ebgp-multihop 255
 neighbor 10.0.0.1 update-source Loopback0
 neighbor 209.165.202.129 remote-as 200
 neighbor 209.165.202.129 update-source Loopback0
 no auto-summary
 address-family vpnv4
 neighbor 10.0.0.1 activate
 neighbor 10.0.0.1 next-hop-unchanged
                                                    !Multihop VPNv4 session with RR1
 neighbor 10.0.0.1 send-community extended
                                                         !with next-hop-unchanged
 neighbor 209.165.202.129 activate
 neighbor 209.165.202.129 route-reflector-client
                                                           !VPNv4 session with PE2
 neighbor 209.165.202.129 send-community extended
 exit-address-family
ip default-gateway 3.3.0.1
no ip classless
 end
```

#### **Configuration Example: ASBR2 (MPLS VPN Service Provider)**

ASBR2 exchanges IPv4 routes and MPLS labels with ASBR1. However, in contrast to ASBR1, ASBR2 does not use the RR to reflect IPv4 routes and MPLS labels to PE2. ASBR2 redistributes the IPv4 routes and MPLS labels learned from ASBR1 into IGP. PE2 can now reach these prefixes.

```
ip subnet-zero
 ip cef
mpls label protocol tdp
interface Loopback0
 ip address 209.165.200.226 255.255.255.255
 no ip directed-broadcast
 interface Ethernet1/0
 ip address 209.165.201.2 255.0.0.0
 no ip directed-broadcast
 no ip mroute-cache
 interface Ethernet1/2
 ip address 209.165.201.4 255.0.0.0
  no ip directed-broadcast
  no ip mroute-cache
 mpls label protocol tdp
 mpls ip
  !
router ospf 20
 log-adjacency-changes
  auto-cost reference-bandwidth 1000
 redistribute connected subnets
 redistribute bgp 200 subnets
                                         ! Redistributing the routes learned from
 passive-interface Ethernet1/0
                                            ! ASBR1 (EBGP+labels session) into IGP
 network 209.165.200.226 0.0.0.0 area 200
                                                 ! so that PE2 will learn them
  network 209.165.201.5 0.255.255.255 area 200
 router bgp 200
 bgp log-neighbor-changes
  timers bgp 10 30
 neighbor 192.0.2.1 remote-as 200
  neighbor 192.0.2.1 update-source Loopback0
  neighbor 209.165.201.6 remote-as 100
  no auto-summary
address-family ipv4
  redistribute ospf 20
                                               ! Redistributing IGP into BGP
  neighbor 209.165.201.6 activate
                                                   ! so that PE2 & RR2 loopbacks
 neighbor 209.165.201.6 advertisement-interval 5
                                                  ! will get into the BGP-4 table.
 neighbor 209.165.201.6 route-map IN in
 neighbor 209.165.201.6 route-map OUT out
 neighbor 209.165.201.6 send-label
  neighbor 209.165.201.7 activate
 neighbor 209.165.201.7 advertisement-interval 5
 neighbor 209.165.201.7 route-map IN in
 neighbor 209.165.201.7 route-map OUT out
 neighbor 209.165.201.7 send-label
 no auto-summary
  no synchronization
  exit-address-family
 address-family vpnv4
 neighbor 192.0.2.1 activate
  neighbor 192.0.2.1 send-community extended
  exit-address-family
```

```
ip default-gateway 3.3.0.1
ip classless
access-list 1 permit 209.165.202.129 log
                                                   !Setting up the access lists
access-list 2 permit 203.0.113.1 log
access-list 3 permit 192.0.2.1 log
access-list 4 permit 10.0.0.1 log
route-map IN permit 11
                                              !Setting up the route maps
 match ip address 2
 match mpls-label
route-map IN permit 12
 match ip address 4
route-map OUT permit 10
 match ip address 1
 set mpls-label
 route-map OUT permit 13
 match ip address 3
 end
```

## Configuration Examples: Inter-AS Using BGP to Distribute Routes and MPLS Labels Over a Non MPLS VPN Service Provider

The figure shows two MPLS VPN service providers that are connected through a non MPLS VPN service provider. The autonomous system in the middle of the network is configured as a backbone autonomous system that uses Label Distribution Protocol (LDP) or Tag Distribution Protocol (TDP) to distribute MPLS labels. You can also use traffic engineering tunnels instead of TDP or LDP to build the LSP across the non MPLS VPN service provider.

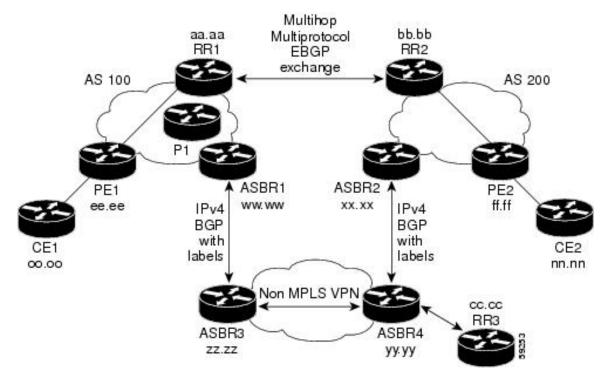


Figure 31: Distributing Routes and MPLS Labels Over a Non MPLS VPN Service Provider

Configuration examples for Inter-AS using BGP to distribute routes and MPLS labels over a non MPLS VPN service provider included in this section are as follows:

#### **Configuration Example: Route Reflector 1 (Non MPLS VPN Service Provider)**

The configuration example for RR1 specifies the following:

- RR1 exchanges VPNv4 routes with RR2 using multiprotocol, multihop EBGP.
- The VPNv4 next hop information and the VPN label are preserved across the autonomous systems.
- RR1 reflects to PE1:
  - The VPNv4 routes learned from RR2
  - The IPv4 routes and MPLS labels learned from ASBR1

```
ip subnet-zero
ip cef
!
interface Loopback0
  ip address 10.0.0.1 255.255.255.255
  no ip directed-broadcast
!
interface Serial1/2
  ip address 209.165.201.8 255.0.0.0
  no ip directed-broadcast
  clockrate 124061
!
router ospf 10
  log-adjacency-changes
```

```
auto-cost reference-bandwidth 1000
 network 10.0.0.1 0.0.0.0 area 100
 network 209.165.201.9 0.255.255.255 area 100
router bgp 100
 bgp cluster-id 1
 bgp log-neighbor-changes
 timers bgp 10 30
 neighbor 203.0.113.1 remote-as 100
 neighbor 203.0.113.1 update-source Loopback0
 neighbor 209.165.200.225 remote-as 100
 neighbor 209.165.200.225 update-source Loopback0
 neighbor 192.0.2.1 remote-as 200
 neighbor 192.0.2.1 ebgp-multihop 255
 neighbor 192.0.2.1 update-source Loopback0
 no auto-summary
 address-family ipv4
 neighbor 203.0.113.1 activate
 neighbor 203.0.113.1 route-reflector-client
                                                             !IPv4+labels session to PE1
 neighbor 203.0.113.1 send-label
 neighbor 209.165.200.225 activate
  neighbor 209.165.200.225 route-reflector-client
                                                                 !IPv4+labels session to
ASBR1
 neighbor 209.165.200.225 send-label
 no neighbor 192.0.2.1 activate
 no auto-summary
 no synchronization
 exit-address-family
address-family vpnv4
 neighbor 203.0.113.1 activate
 neighbor 203.0.113.1 route-reflector-client
                                                            !VPNv4 session with PE1
 neighbor 203.0.113.1 send-community extended
 neighbor 192.0.2.1 activate
                                                           !MH-VPNv4 session with RR2
 neighbor 192.0.2.1 next-hop-unchanged
 neighbor 192.0.2.1 send-community extended
                                                             with next-hop-unchanged
 exit-address-family
ip default-gateway 3.3.0.1
no ip classless
snmp-server engineID local 00000009020000D0584B25C0
snmp-server community public RO
 snmp-server community write RW
no snmp-server ifindex persist
snmp-server packetsize 2048
 end
```

#### Configuration Example: ASBR1 (Non MPLS VPN Service Provider)

ASBR1 exchanges IPv4 routes and MPLS labels with ASBR2.

In this example, ASBR1 uses route maps to filter routes.

- A route map called OUT specifies that ASBR1 should distribute the PE1 route (ee.ee) with labels and the RR1 route (aa.aa) without labels.
- A route map called IN specifies that ASBR1 should accept the PE2 route (ff.ff) with labels and the RR2 route (bb.bb) without labels.

```
ip subnet-zero
ip cef distributed
mpls label protocol tdp
interface Loopback0
 ip address 209.165.200.225 255.255.255.255
 no ip directed-broadcast
 no ip route-cache
 no ip mroute-cache
 interface Serial3/0/0
 ip address 209.165.201.7 255.0.0.0
 no ip directed-broadcast
 ip route-cache distributed
interface Ethernet0/3
 ip address 209.165.201.18 255.0.0.0
 no ip directed-broadcast
 no ip mroute-cache
 mpls label protocol ldp
 mpls ip
router ospf 10
 log-adjacency-changes
  auto-cost reference-bandwidth 1000
 redistribute connected subnets
 passive-interface Serial3/0/0
 network 209.165.200.225 0.0.0.0 area 100
 network dd.0.0.0 0.255.255.255 area 100
 router bgp 100
 bgp log-neighbor-changes
  timers bgp 10 30
  neighbor 10.0.0.1 remote-as 100
 neighbor 10.0.0.1 update-source Loopback0
 neighbor kk.0.0.1 remote-as 200
 no auto-summary
 address-family ipv4
  redistribute ospf 10
                                           ! Redistributing IGP into BGP
 neighbor 10.0.0.1 activate
                                         ! so that PE1 & RR1 loopbacks
 neighbor 10.0.0.1 send-label
                                         ! get into BGP table
 neighbor 209.165.201.3 activate
 neighbor 209.165.201.3 advertisement-interval 5
  neighbor 209.165.201.3 send-label
 neighbor 209.165.201.3 route-map IN in ! Accepting routes specified in route map IN
 neighbor 209.165.201.3 route-map OUT out ! Distributing routes specified in route map
OUT
 no auto-summary
  no synchronization
 exit-address-family
 ip default-gateway 3.3.0.1
 ip classless
 access-list 1 permit 203.0.113.1 log
access-list 2 permit 209.165.202.129 log
access-list 3 permit 10.0.0.1 log
access-list 4 permit 192.0.2.1 log
 route-map IN permit 10
 match ip address 2
 match mpls-label
```

```
route-map IN permit 11
match ip address 4
!
route-map OUT permit 12
match ip address 3
!
route-map OUT permit 13
match ip address 1
set mpls-label
!
```

#### Configuration Example: Route Reflector 2 (Non MPLS VPN Service Provider)

RR2 exchanges VPNv4 routes with RR1 using multihop, multiprotocol EBGP. This configuration also specifies that the next hop information and the VPN label are preserved across the autonomous systems.

```
ip subnet-zero
ip cef
interface Loopback0
 ip address 192.0.2.1 255.255.255.255
 no ip directed-broadcast
interface Serial1/1
 ip address 209.165.201.10 255.0.0.0
 no ip directed-broadcast
 no ip mroute-cache
 router ospf 20
 log-adjacency-changes
 network 192.0.2.1 0.0.0.0 area 200
 network 209.165.201.20 0.255.255.255 area 200
router bgp 200
 bgp cluster-id 1
 bgp log-neighbor-changes
  timers bgp 10 30
 neighbor 10.0.0.1 remote-as 100
 neighbor 10.0.0.1 ebgp-multihop 255
 neighbor 10.0.0.1 update-source Loopback0
 neighbor 209.165.202.129 remote-as 200
 neighbor 209.165.202.129 update-source Loopback0
 no auto-summary
 address-family vpnv4
 neighbor 10.0.0.1 activate
 neighbor 10.0.0.1 next-hop-unchanged
                                                        !MH vpnv4 session with RR1
 neighbor 10.0.0.1 send-community extended
                                                             !with next-hop-unchanged
 neighbor 209.165.202.129 activate
 neighbor 209.165.202.129 route-reflector-client neighbor 209.165.202.129 send-community extended
                                                               !vpnv4 session with PE2
 exit-address-family
ip default-gateway 3.3.0.1
no ip classless
 end
```

#### **Configuration Examples: ASBR2 (Non MPLS VPN Service Provider)**

ASBR2 exchanges IPv4 routes and MPLS labels with ASBR1. However, in contrast to ASBR1, ASBR2 does not use the RR to reflect IPv4 routes and MPLS labels to PE2. ASBR2 redistributes the IPv4 routes and MPLS labels learned from ASBR1 into IGP. PE2 can now reach these prefixes.

```
ip subnet-zero
 ip cef
mpls label protocol tdp
interface Loopback0
 ip address 209.165.200.226 255.255.255.255
 no ip directed-broadcast
 interface Ethernet0/1
 ip address 209.165.201.11 255.0.0.0
 no ip directed-broadcast
interface Ethernet1/2
 ip address 209.165.201.4 255.0.0.0
 no ip directed-broadcast
 no ip mroute-cache
 mpls label protocol tdp
 mpls ip
 router ospf 20
 log-adjacency-changes
 auto-cost reference-bandwidth 1000
 redistribute connected subnets
 redistribute bgp 200 subnets
                                          !redistributing the routes learned from
 passive-interface Ethernet0/1
                                             !ASBR2 (EBGP+labels session) into IGP
 network 209.165.200.226 0.0.0.0 area 200
                                                  !so that PE2 will learn them
 network 209.165.201.5 0.255.255.255 area 200
 router bgp 200
 bgp log-neighbor-changes
  timers bgp 10 30
 neighbor 192.0.2.1 remote-as 200
 neighbor 192.0.2.1 update-source Loopback0
 neighbor 209.165.201.21 remote-as 100
 no auto-summary
address-family ipv4
                                              ! Redistributing IGP into BGP
redistribute ospf 20
                                             ! so that PE2 & RR2 loopbacks
 neighbor 209.165.201.21 activate
                                                   ! will get into the BGP-4 table
 neighbor 209.165.201.21 advertisement-interval 5
 neighbor 209.165.201.21 route-map IN in
 neighbor 209.165.201.21 route-map OUT out
 neighbor 209.165.201.21 send-label
 no auto-summary
 no synchronization
 exit-address-family
 address-family vpnv4
 neighbor 192.0.2.1 activate
 neighbor 192.0.2.1 send-community extended
 exit-address-family
ip default-gateway 3.3.0.1
 ip classless
access-list 1 permit 209.165.202.129 log
```

```
access-list 2 permit 203.0.113.1 log access-list 3 permit 192.0.2.1 log access-list 4 permit 10.0.0.1 log ! route-map IN permit 11 match ip address 2 match mpls-label ! route-map IN permit 12 match ip address 4 ! route-map OUT permit 10 match ip address 1 set mpls-label ! route-map OUT permit 13 match ip address 3 ! end
```

#### **Configuration Example: ASBR3 (Non MPLS VPN Service Provider)**

ASBR3 belongs to a non MPLS VPN service provider. ASBR3 exchanges IPv4 routes and MPLS labels with ASBR1. ASBR3 also passes the routes learned from ASBR1 to ASBR3 through RR3.



Note

Do not redistribute EBGP routes learned into IBG if you are using IBGP to distribute the routes and labels. This is not a supported configuration.

```
ip subnet-zero
ip cef
 interface Loopback0
 ip address 209.165.200.227 255.255.255.255
 no ip directed-broadcast
 no ip route-cache
 no ip mroute-cache
ip routing
mpls label protocol ldp
mpls ldp router-id Loopback0 force
interface GigabitEthernet1/0/1
ip address 209.165.201.12 255.0.0.0
interface TenGigabitEthernet1/1/1
no switchport
ip address 209.165.201.3 255.0.0.0
load-interval 30
mpls ip
router ospf 30
 log-adjacency-changes
 auto-cost reference-bandwidth 1000
 redistribute connected subnets
 network 209.165.200.227 0.0.0.0 area 300
network 209.165.201.13 0.255.255.255 area 300
 router bgp 300
 bgp log-neighbor-changes
```

```
timers bgp 10 30
 neighbor 10.0.0.3 remote-as 300
neighbor 10.0.0.3 update-source Loopback0
 neighbor 209.165.201.7 remote-as 100
no auto-summarv
address-family ipv4
neighbor 10.0.0.3activate
                                      ! IBGP+labels session with RR3
neighbor 10.0.0.3 send-label
neighbor 209.165.201.7 activate
                                               ! EBGP+labels session with ASBR1
neighbor 209.165.201.7 advertisement-interval 5
neighbor 209.165.201.7 send-label
neighbor 209.165.201.7 route-map IN in
neighbor 209.165.201.7 route-map OUT out
no auto-summary
no synchronization
 exit-address-family
ip classless
access-list 1 permit 203.0.113.1 log
access-list 2 permit 209.165.202.129 log
access-list 3 permit 10.0.0.1 log
access-list 4 permit 192.0.2.1 log
route-map IN permit 10
match ip address 1
 match mpls-label
route-map IN permit 11
  match ip address 3
route-map OUT permit 12
match ip address 2
 set mpls-label
route-map OUT permit 13
  match ip address 4
ip default-gateway 3.3.0.1
ip classless
end
```

#### Configuration Example: Route Reflector 3 (Non MPLS VPN Service Provider)

RR3 is a non MPLS VPN RR that reflects IPv4 routes with MPLS labels to ASBR3 and ASBR4.

```
ip subnet-zero
mpls label protocol tdp
mpls traffic-eng auto-bw timers
no mpls ip
!
interface Loopback0
  ip address 10.0.0.3 255.255.255
  no ip directed-broadcast
!
interface POSO/2
  ip address 209.165.201.15 255.0.0.0
  no ip directed-broadcast
  no ip route-cache cef
  no ip route-cache
  no ip mroute-cache
  crc 16
```

```
clock source internal
router ospf 30
log-adjacency-changes
network 10.0.0.3 0.0.0.0 area 300
network 209.165.201.16 0.255.255.255 area 300
router bgp 300
bgp log-neighbor-changes
neighbor 209.165.201.2 remote-as 300
neighbor 209.165.201.2 update-source Loopback0
neighbor 209.165.200.227 remote-as 300
neighbor 209.165.200.227 update-source Loopback0
no auto-summary
address-family ipv4
neighbor 209.165.201.2 activate
neighbor 209.165.201.2 route-reflector-client
neighbor 209.165.201.2 send-label
                                                 ! TBGP+labels session with ASBR3
neighbor 209.165.200.227 activate
neighbor 209.165.200.227 route-reflector-client
neighbor 209.165.200.227 send-label
                                                   ! IBGP+labels session with ASBR4
no auto-summary
no synchronization
exit-address-family
ip default-gateway 3.3.0.1
ip classless
end
```

#### Configuration Example: ASBR4 (Non MPLS VPN Service Provider)

ASBR4 belongs to a non MPLS VPN service provider. ASBR4 and ASBR3 exchange IPv4 routes and MPLS labels by means of RR3.



Note

Do not redistribute EBGP routes learned into IBG if you are using IBGP to distribute the routes and labels. This is not a supported configuration.

```
ip subnet-zero
ip cef distributed
 interface Loopback0
 ip address 209.165.201.2 255.255.255.255
 no ip directed-broadcast
 no ip route-cache
 no ip mroute-cache
 interface Ethernet0/2
 ip address 209.165.201.21 255.0.0.0
  no ip directed-broadcast
 no ip mroute-cache
ip routing
mpls label protocol ldp
mpls ldp router-id Loopback0 force
interface GigabitEthernet1/0/1
ip address 209.165.201.17 255.0.0.0
```

```
interface TenGigabitEthernet1/1/1
no switchport
ip address 209.165.201.14 255.0.0.0
load-interval 30
mpls ip
router ospf 30
 log-adjacency-changes
 auto-cost reference-bandwidth 1000
 redistribute connected subnets
 passive-interface Ethernet0/2
 network 209.165.201.2 0.0.0.0 area 300
 network 209.165.201.16 0.255.255.255 area 300
 network 209.165.201.13 0.255.255.255 area 300
 router bgp 300
 bgp log-neighbor-changes
  timers bgp 10 30
 neighbor 10.0.0.3 remote-as 300
 neighbor 10.0.0.3 update-source Loopback0
  neighbor 209.165.201.11 remote-as 200
 no auto-summary
  address-family ipv4
 neighbor 10.0.0.3 activate
 neighbor 10.0.0.3 send-label
  neighbor 209.165.201.11 activate
 neighbor 209.165.201.11 advertisement-interval 5
 neighbor 209.165.201.11 send-label
 neighbor 209.165.201.11 route-map IN in
 neighbor 209.165.201.11 route-map OUT out
 no auto-summary
 no synchronization
 exit-address-family
 ip classless
access-list 1 permit 209.165.202.129 log
access-list 2 permit 203.0.113.1 log
 access-list 3 permit 192.0.2.1 log
access-list 4 permit 10.0.0.1 log
 route-map IN permit 10
 match ip address 1
  match mpls-label
 route-map IN permit 11
   match ip address 3
route-map OUT permit 12
 match ip address 2
  set mpls-label
route-map OUT permit 13
   match ip address 4
 ip default-gateway 3.3.0.1
 ip classless
 end
```

# Feature History for Configuring MPLS VPN Inter-AS IPv4 BGP Label Distribution

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Release	Feature	Feature Information
Cisco IOS XE Gibraltar 16.11.1	MPLS VPN Inter-AS IPv4 BGP Label Distribution	This feature enables you to set up a Virtual Private Network (VPN) service provider network. In this network, the Autonomous System Boundary Routers (ASBRs) exchange IPv4 routes with Multiprotocol Label Switching (MPLS) labels of the provider edge (PE) routers.

Use Cisco Feature Navigator to find information about platform and software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>.

Feature History for Configuring MPLS VPN Inter-AS IPv4 BGP Label Distribution

## **Configuring Seamless MPLS**

- Information about Seamless MPLS, on page 255
- How to configure Seamless MPLs, on page 256
- Configuration Examples for Seamless MPLS, on page 262
- Feature History for Seamless MPLS, on page 264

### **Information about Seamless MPLS**

The following sections provide information about Seamless MPLS.

#### **Overview of Seamless MPLS**


Seamless MPLS provides a highly flexible and scalable architecture to integrate multiple networks into a single MPLS domain. It is based on existing and well known protocols.

A large MPLS network can have several types of platforms and services in different parts of the network. Such a network would usually be divided into areas such as a core area and aggregation areas, and each of these areas have different Interior Gateway Protocols (IGPs). The IGP prefixes from one area cannot be distributed to another area. If the IGP prefixes cannot be distributed, then end-to-end Label-Switched-Paths (LSP) cannot be established. This affects the scalability of the network.

Seamless MPLS introduces greater scalability by establishing end-to-end LSPs. Seamless MPLS uses the Border Gateway Protocol (BGP) instead of IGP to forward the loopback prefixes of the Provider Edge (PE) routers. BGP distributes the prefixes end-to-end. This eliminates the need to install IGP prefixes of one domain in another domain.

Seamless MPLS introduces separation of the service and transport planes and provides end to end service independent transport. It removes the need for service specific configurations in network transport nodes.

#### **Architecture for Seamless MPLS**

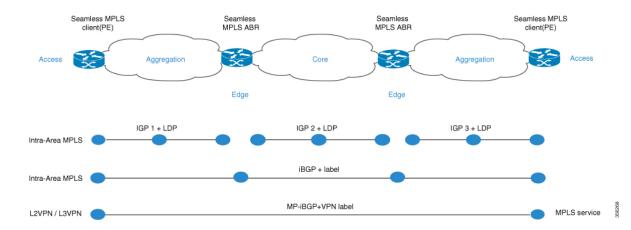

The figure shows a network with three different areas: one core and two aggregation areas on the side. Each area runs its own IGP, with no redistribution between them on the Area Border Router (ABR). Use of BGP is needed in order to provide an end-to-end MPLS LSP. BGP advertises the loopbacks of the PE routers with a label across the whole domain, and provides an end-to-end LSP. BGP is deployed between the PEs and ABRs.

Seamless MPLs uses BGP to provide an end-to-end MPLS LSP. BGP is deployed between the PEs and the ABRs. BGP sends the IPv4 prefix and label. BGP advertises the loopbacks of the PE routers with a label across the whole domain and provides an end-to-end LSP.

When using IGP in the network, the next-hop address of the prefixes is the loopback prefix of the PE routers. This prefix is not known to the IGP being used in other parts of the network. The next hop address cannot be used to recurse to an IGP prefix. To avoid this the prefixes are carried in BGP. The ABRs are configured as Route Reflectors (RR). And the RRs are configured to set the next hop to self even for the reflected iBGP prefixes.

There are two possible scenarios.

- The ABR does not set the next hop to self for the prefixes advertised (reflected by BGP) by the ABR into the aggregation part of the network. The ABR needs to redistribute the loopback prefixes of the ABRs from the core IGP into the aggregation IGP. Only the ABR loopback prefixes (from the core) need to be advertised into the aggregation part, not the loopback prefixes from the PE routers from the remote aggregation parts.
- The ABR sets the next hop to self for the prefixes advertised (reflected by BGP) by the ABR into the aggregation part. Because of this, the ABR does not need to redistribute the loopback prefixes of the ABRs from the core IGP into the aggregation IGP.

In both scenarios, the ABR sets the next hop to self for the prefixes advertised (reflected by BGP) by the ABR from the aggregation part of the network into the core part.

## **How to configure Seamless MPLs**

The following sections provide information on how to configure Seamless MPLS.

## **Configuring Seamless MPLS on the PE Router**

The following steps can be used to configure Seamless MPLS on the PE Router

#### **Procedure**

	Command or Action	Purpose	
Step 1	enable	Enables privileged EXEC mode.	
	Example:	Enter your password if prompted.	
	Device> enable		
Step 2	configure terminal	Enters global configuration mode.	
	Example:		
	Device# configure terminal		
Step 3	interface loopback slot/port	Configures a Loopback interface and enter	
	Example:	interface configuration mode.	
	Device(config-if)# interface Loopback0		
Step 4	ip address ip-address subnet-mask	Enters the IP address for the interface.	
	Example:		
	Device(config-if)ip address 10.100.1.4 255.255.255.255		
Step 5	interface ethernet slot/port	Configures an Ethernet interface and enters interface configuration mode.	
	Example:		
	Device(config-if)# interface Ethernet1/0		
Step 6	no ip address	Removes an IP address definition.	
	Example:		
	Device(config-if)# no ip address		
Step 7	xconnect peer-ip-address vcid encapsulation mpls	Specifies MPLS as the tunneling method to encapsulate.	
	Example:		
	Device(config-if) # xconnect 10.100.1.5 100 encapsulation mpls		
Step 8	router ospf process-id	Configures the OSPF routing process.	
	Example:		
	Device(config)# router ospf 2		
Step 9	network ip-address wild-mask area area-id	Defines the interfaces on which OSPF runs	
	Example:	and defines the area ID for those interfaces.	

	Command or Action	Purpose
	Device(config-router)# network 10.2.0.0 0.0.255.255 area 0	
Step 10	network ip-address wild-mask area area-id	Defines the interfaces on which OSPF runs
	Example:	and defines the area ID for those interfaces.
	Device(config-router)# network 10.100.1.4 0.0.0.0 area 0	
Step 11	router bgp autonomous-system-number	Configures the BGP routing process.
	Example:	
	Device(config)# router bgp 1	
Step 12	bgp log neighbor changes	Enables logging of BGP neighbor resets.
	Example:	
	Device(config-router)# bgp log neighbor changes	
Step 13	address-family ipv4	Enters address family configuration mode.
	Example:	
	Device(config-router)# address-family ipv4	
Step 14	network network-number mask network-mask	- F
	Example:	and multiprotocol BGP routing processes.
	Device(config-router-af)# network 10.100.1.4 mask 255.255.255.255	
Step 15	no bgp default ipv4 unicast	Disables default IPv4 unicast address family
	Example:	for peering session establishment
	Device(config-router-af)# no bgp default ipv4 unicast	
Step 16	no bgp default route-target filter	Disables automatic BGP route-target
	Example:	community filtering.
	Device(config-router-af)# no bgp default route-target filter	
Step 17	neighbor ip-address remote-as autonomous-system-number	Adds an entry to the BGP or multiprotocol BGP neighbor table.
	Example:	
	Device(config-router-af)# neighbor 10.100.1.1 remote-as 1	
Step 18	neighbor ip-address update-source interface-type interface-number	Allows BGP sessions to use any operational interface for TCP connections.
	Example:	
	Device(config-router-af)# neighbor 10.100.1.1 update-source Loopback0	

	Command or Action	Purpose
Step 19	neighbor ip-address send-label	Enables a BGP router to send MPLS labels
	Example:	with BGP routes to a neighboring BGP router.
	Device(config-router-af)# neighbor 10.100.1.1 send-label	

## **Configuring Seamless MPLS on the Route Reflector**

The following steps can be used to configure Seamless MPLS on the Route Reflector.

#### **Procedure**

	Command or Action	Purpose	
Step 1	enable	Enables privileged EXEC mode.	
	Example:	Enter your password if prompted.	
	Device> enable		
Step 2	configure terminal	Enters global configuration mode.	
	Example:		
	Device# configure terminal		
Step 3	interface loopback slot/port	Configures a Loopback interface and enters	
	Example:	interface configuration mode.	
	Device(config-if)# interface Loopback0		
Step 4	ip address ip-address subnet-mask	Enters the IP address for the interface.	
	Example:		
	Device(config-if)# ip address 10.100.1.1 255.255.255.255		
Step 5	router ospf process-id	Configures the OSPF routing process.	
	Example:		
	Device(config)# router ospf 1		
Step 6	network ip-address wild-mask area area-id	Defines the interfaces on which OSPF runs	
	Example:	and defines the area ID for those interface	
	Device(config-router)# network 10.1.0.0 0.0.255.255 area 0		
Step 7	network ip-address wild-mask area area-id	Defines the interfaces on which OSPF runs	
	Example:	and defines the area ID for those interfaces	
	Device(config-router)# 10.100.1.1 0.0.0.0 area 0		

	Command or Action	Purpose
Step 8	exit	Exits the configuration mode.
	Example:	
	Device(config-router)#exit	
Step 9	router ospf process-id	Configures the OSPF routing process.
	Example:	
	Device(config)# router ospf 2	
Step 10	redistribute ospf instance-tag route-map map-name	Injects routes from one routing domain into OSPF.
	Example:	
	Device(config-router)# redistribute ospf 1 subnets match internal route-map ospf1-into-ospf2	
Step 11	network ip-address wild-mask area area-id	Defines the interfaces on which OSPF runs
	Example:	and defines the area ID for those interfaces.
	Device(config-router)# network 10.2.0.0 0.0.255.255 area 0	
Step 12	exit	Exits the configuration mode.
	Example:	
	Device(config-router)#exit	
Step 13	router bgp autonomous-system-number	Configures the BGP routing process.
	Example:	
	Device(config)# router bgp 1	
Step 14	bgp log neighbor changes	Enables logging of BGP neighbor resets.
	Example:	
	Device(config-router)# bgp log neighbor changes	
Step 15	address-family ipv4	Enters address family configuration mode.
	Example:	
	Device(config-router)# address family ipv4	
Step 16	neighbor ip-address remote-as autonomous-system-number	Adds an entry to the BGP or multiprotocol BGP neighbor table.
	Example:	
	Device(config-route-af) # neighbor 10.100.1.2 remote-as 1	

	Command or Action	Purpose	
Step 17	neighbor ip-address update-source interface-type interface-number	Allows BGP sessions to use any operational interface for TCP connections.	
	Example:		
	Device(config-router-af)# neighbor 10.100.1.2 update-source Loopback0		
Step 18	neighbor ip-address next-hop-self all	Configures a router as the next hop for a	
	Example:	BGP-speaking neighbor or peer group.	
	Device(config-router-af)# neighbor 10.100.1.2 next-hop-self all		
Step 19	neighbor ip-address send-label	Enables a BGP router to send MPLS labels	
	Example:	with BGP routes to a neighboring BGP router.	
	Device(config-router-af)# neighbor 10.100.1.2 send-label		
Step 20	<b>neighbor</b> <i>ip-address</i> <b>remote-as</b> <i>autonomous-system-number</i>	Adds an entry to the BGP or multiprotocol BGP neighbor table.	
	Example:		
	Device(config-router-af) # neighbor 10.100.1.4 remote-as 1		
Step 21	neighbor ip-address update-source interface-type interface-number	Allows BGP sessions to use any operational interface for TCP connections.	
	Example:		
	Device(config-router-af)# neighbor 10.100.1.4 update-source Loopback0		
Step 22	neighbor ip-address route-reflector-client	Configures the router as a BGP route reflector	
	Example:	and configure the specified neighbor as its client.	
	Device(config_router-af) # neighbor 10.100.1.4 route-reflector-client	chent.	
Step 23	neighbor ip-address next-hop-self all	Configures a router as the next hop for a	
	Example:	BGP-speaking neighbor or peer group.	
	Device(config-router-af) # neighbor 10.100.1.4 next-hop-self all		
Step 24	rep 24 neighbor ip-address send-label Enable	Enables a BGP router to send MPLS labels	
	Example:	with BGP routes to a neighboring BGP router.	
	Device(config-router-af)# neighbor 10.100.1.4 send-label		
Step 25	exit	Exits the configuration mode.	
	Example:		
	Device(config-router)#exit		

	Command or Action	Purpose
Step 26	ip prefix-list name seq number permit prefix  Example:	Creates a prefix list to match IP packets or routes against.
	<pre>Device(config)# ip prefix-list prefix-list-ospf1-into-ospf2 seq 5 permit 10.100.1.1/32</pre>	
Step 27	<pre>route-map name permit sequence-number Example: Device(config) # route-map ospf1-into-ospf2 permit 10</pre>	Creates the route map entry. Enters route-map configuration mode.
Step 28	<pre>match ip address prefix-list prefix-list-name Example: Device(config-route-map) # match ip address prefix-list prefix-list-ospf1-into-ospf2</pre>	Distributes routes that have a destination IP network number address that is permitted by a prefix list.

## **Configuration Examples for Seamless MPLS**

The following sections provide examples for configuring Seamless MPLS.

#### **Example: Configuring Seamless MPLS on PE Router 1**

The following example shows how to configure Seamless MPLS on PE router 1.

```
Device (config-if) #interface Loopback0
Device(config-if) #ip address 10.100.1.4 255.255.255.255
Device(config-if) # interface Ethernet1/0
Device(config-if) # no ip address
Device (config-if) # xconnect 10.100.1.5 100 encapsulation mpls
Device (config) # router ospf 2
Device(config-router) # network 10.2.0.0 0.0.255.255 area 0
Device(config-router) # network 10.100.1.4 0.0.0.0 area 0
Device(config) #router bgp 1
Device(config-router) # bgp log-neighbor-changes
Device(config-router) # address family ipv4
Device(config-router-af)# network 10.100.1.4 mask 255.255.255.255
Device(config-router-af) # no bgp default ipv4 unicast
Device(config-router-af) # no bgp default route-target filter
Device(config-router-af)# neighbor 10.100.1.1 remote-as 1
Device(config-router-af) # neighbor 10.100.1.1 update-source Loopback0
Device(config-router-af) # neighbor 10.100.1.1 send-label
```

#### **Example: Configuring Seamless MPLS on Route Reflector 1**

The following examples shows how to configure Seamless MPLS on route reflector 1.

```
Device(cofig-if) # interface Loopback0
Device(cofig-if)# ip address 10.100.1.1 255.255.255.255
Device(config) # router ospf 1
Device(config-router) # network 10.1.0.0 0.0.255.255 area 0
Device(config-router) # network 10.100.1.1 0.0.0.0 area 0
Device(config) # router ospf 2
Device(config-router) # redistribute ospf 1 subnets match internal route-map ospf1-into-ospf2
Device(config-router) # network 10.2.0.0 0.0.255.255 area 0
Device(config) # router bgp 1
Device(config-router) # bgp log-neighbor-changes
Device(config-router) # address family ipv4
Device(config-router-af) # neighbor 10.100.1.2 remote-as 1
Device(config-router-af) # neighbor 10.100.1.2 update-source Loopback0
Device(config-router-af) # neighbor 10.100.1.2 next-hop-self all
Device(config-router-af) # neighbor 10.100.1.2 send-label
Device(config-router-af) # neighbor 10.100.1.4 remote-as 1
Device(config-router-af) # neighbor 10.100.1.4 update-source Loopback0
Device(config-router-af) # neighbor 10.100.1.4 route-reflector-client
Device(config-router-af)# neighbor 10.100.1.4 next-hop-self all
Device(config-router-af) # neighbor 10.100.1.4 send-label
Device(config)# ip prefix-list prefix-list-ospf1-into-ospf2 seq 5 permit 10.100.1.1/32
Device(config) # route-map ospf1-into-ospf2 permit 10
Device(conifg-route-mao) # match ip address prefix-list prefix-list-ospf1-into-ospf2
```

#### **Example: Configuring Seamless MPLS on PE Router 2**

The following example shows how to configure Seamless MPLS on PE router 2.

```
Device(config-if)#interface Loopback0
 Device(config-if) #ip address 10.100.1.5 255.255.255.255
Device(config-if) # interface Ethernet1/0
Device(config-if) # no ip address
Device(config-if) # xconnect 10.100.1.4 100 encapsulation mpls
Device(config) # router ospf 3
Device(config-router) # network 10.3.0.0 0.0.255.255 area 0
Device(config-router) # network 10.100.1.5 0.0.0.0 area 0
Device(config) #router bgp 1
Device(config-router) # bgp log-neighbor-changes
Device(config-router) # address family ipv4
Device(config-router-af) # network 10.100.1.5 mask 255.255.255.255
Device(config-router-af) # no bgp default ipv4 unicast
Device(config-router-af) # no bgp default route-target filter
Device(config-router-af) # neighbor 10.100.1.2 remote-as 1
Device(config-router-af) # neighbor 10.100.1.2 update-source Loopback0
Device(config-router-af) # neighbor 10.100.1.2 send-label
```

#### **Example: Configuring Seamless MPLS on Route Reflector 2**

The following examples shows how to configure Seamless MPLS on route reflector 2.

```
Device(cofig-if)# interface Loopback0
Device(cofig-if)# ip address 10.100.1.2 255.255.255
Device(config)# router ospf 1
Device(config-router)# network 10.1.0.0 0.0.255.255 area 0
```

```
Device(config-router) # network 10.100.1.2 0.0.0.0 area 0
Device(config) # router ospf 3
Device (config-router) # redistribute ospf 1 subnets match internal route-map ospf1-into-ospf3
Device(config-router) # network 10.3.0.0 0.0.255.255 area 0
Device(config) # router bgp 1
Device (config-router) # bgp log-neighbor-changes
Device(config-router) # address family ipv4
Device(config-router-af) # neighbor 10.100.1.1 remote-as 1
Device(config-router-af) # neighbor 10.100.1.1 update-source Loopback0
Device(config-router-af) # neighbor 10.100.1.1 next-hop-self all
Device(config-router-af) # neighbor 10.100.1.1 send-label
Device(config-router-af) # neighbor 10.100.1.5 remote-as 1
Device(config-router-af) # neighbor 10.100.1.5 update-source Loopback0
Device(config-router-af) # neighbor 10.100.1.5 route-reflector-client
Device(config-router-af) # neighbor 10.100.1.5 next-hop-self all
Device(config-router-af) # neighbor 10.100.1.5 send-label
Device(config) # ip prefix-list prefix-list-ospf1-into-ospf3 seq 5 permit 10.100.1.1/32
Device(config) # route-map ospf1-into-ospf3 permit 10
Device(conifg-route-mao) # match ip address prefix-list prefix-list-ospf1-into-ospf3
```

## **Feature History for Seamless MPLS**

This table provides release and related information for features explained in this module.

These features are available on all releases subsequent to the one they were introduced in, unless noted otherwise.

Release	Feature	Feature Information
Cisco IOS XE Gibraltar 16.12.1	Seamless MPLS	Seamless MPLS provides a highly flexible and scalable architecture to integrate multiple networks into a single MPLS domain. It is based on existing and well known protocols.

Use Cisco Feature Navigator to find information about platform and software image support. To access Cisco Feature Navigator, go to http://www.cisco.com/go/cfn.