



## **Cisco IP Phone 7800 Series Multiplatform Phones User Guide**

**First Published:** 2024-01-30

### **Americas Headquarters**

Cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, CA 95134-1706  
USA  
<http://www.cisco.com>  
Tel: 408 526-4000  
800 553-NETS (6387)  
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The following information is for FCC compliance of Class A devices: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio-frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to correct the interference at their own expense.

The following information is for FCC compliance of Class B devices: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment causes interference to radio or television reception, which can be determined by turning the equipment off and on, users are encouraged to try to correct the interference by using one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications to this product not authorized by Cisco could void the FCC approval and negate your authority to operate the product.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

All printed copies and duplicate soft copies of this document are considered uncontrolled. See the current online version for the latest version.

Cisco has more than 200 offices worldwide. Addresses and phone numbers are listed on the Cisco website at [www.cisco.com/go/offices](http://www.cisco.com/go/offices).

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/c/en/us/about/legal/trademarks.html>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2024 Cisco Systems, Inc. All rights reserved.



## CONTENTS

---

### CHAPTER 1

#### Your Phone 1

|   |    |
|---|----|
| The Cisco IP Phone 7800 Series                        | 1  |
| Feature Support                                       | 2  |
| New and Changed Features                              | 2  |
| New and Changed for Firmware Release 12.0(4)          | 2  |
| New and Changed for Firmware Release 12.0(3)          | 2  |
| New and Changed for Firmware Release 12.0(2)          | 3  |
| New and Changed for Firmware Release 12.0(1)          | 3  |
| New and Changed for Firmware Release 11.3(7)          | 3  |
| New and Changed for Firmware Release 11.3(6)          | 4  |
| New and Changed for Firmware Release 11.3(5)          | 5  |
| New and Changed for Release 11.3(4)                   | 6  |
| New and Changed for Firmware Release 11.3(3)          | 6  |
| New and Changed for Firmware Release 11.3(2)          | 6  |
| New and Changed Features for Firmware Release 11.3(1) | 9  |
| New and Changed for Firmware Release 11.2(3)SR1       | 9  |
| New and Changed for Firmware Release 11.2(3)          | 10 |
| New and Changed for Firmware Release 11.2(1)          | 10 |
| New and Changed for Firmware Release 11.1(2)          | 11 |
| New and Changed for Firmware Release 11.1(1)          | 11 |
| Phone Setup   | 11 |
| Adjust the Handset Rest                               | 12 |
| Change the Viewing Angle of Your Phone                | 12 |
| Connect to the Network                                | 13 |
| Onboard Your Phone with Activation Code               | 13 |
| Auto Provision Your Phone with Short Activation Code  | 13 |

- Set a Password on Initial Phone Boot Up 14
- Create User Password on Phone 14
- User Authentication Control 15
- Sign into Your Extension from Another Phone (Extension Mobility) 15
  - Sign out of Your Extension from Another Phone 15
- Sign in to a Phone as a Guest 15
  - Sign Out of a Phone as a Guest 16
- Set the Profile Rule on the Phone 16
- Coworker Line Status 16
  - Activate or Deactivate Monitoring of the BLF List 18
  - Configure Monitoring of an Individual Line 18
  - Remove the Feature Configured on a Line Key 20
- Add a Menu Shortcut to a Line Key 20
- Remove the Menu Shortcut from a Line Key 20
- Service Interruption Message on Home Screen 21
- Phone Web Page 21
  - Speed dial numbers 22
- Buttons and Hardware 23
  - Phone Keypad Characters 24
  - Navigation 25
  - Softkey, Line, and Feature Buttons 25
  - Phone Screen Features 25
    - Clean your phone screen 26
  - Differences Between Phone Calls and Lines 26
- Power Requirements 27
- Energy Savings 27
- Additional Help and Information 27
  - Accessibility Features 27
  - Troubleshooting 28
    - Find Information About Your Phone 28
    - View the Customization State on the Phone 29
    - View the Network Status 29
    - View the Phone Status 30
    - View the Status Messages on the Phone 30

|  |    |
|--|----|
| View the Line Status   | 31 |
| View Call Records in Call Statistics   | 31 |
| View 802.1X Transaction Status   | 32 |
| View the Reboot History  | 32 |
| Report all phone issues for your Cisco MPP device                            | 32 |
| Factory Reset the Phone from Phone Web Page                                  | 33 |
| Factory Reset from Server  | 33 |
| Identify Phone Issues with a URL in the Phone Web Page                       | 34 |
| Lost Phone Connectivity  | 34 |
| Get More Information When Your Phone Displays a Provisioning Failure Message | 34 |
| Find the Transition License Type   | 35 |
| Find Information about MIC Cert Refresh Status                               | 35 |
| Cisco One-Year Limited Hardware Warranty Terms                               | 36 |

---

**CHAPTER 2****Calls 37**

|   |    |
|---|----|
| Make calls                                      | 37 |
| Make a call                                     | 37 |
| Make a call with the speakerphone               | 38 |
| Make a call with a headset                      | 38 |
| Make an Emergency Call                          | 38 |
| Redial a number                                 | 39 |
| Speed Dial                                      | 39 |
| Assign a speed-dial code from the phone screen  | 39 |
| Make a call with a speed-dial code              | 40 |
| Configure a Speed Dial on a Line Key            | 40 |
| Remove a speed-dial from a line key             | 40 |
| Use the Line in Focus for Speed-Dial Calls      | 41 |
| Use the Line in Focus to Check Speed-Dial Calls | 41 |
| Dial an international number                    | 41 |
| Secure calls                                    | 42 |
| Answer Calls                                    | 42 |
| Answer a Call                                   | 42 |
| Answer Call Waiting                             | 42 |
| Decline a Call                                  | 42 |

|  |    |
|--|----|
| Silence an Incoming Call   | 43 |
| Turn On Do Not Disturb   | 43 |
| Turn On or Turn Off DND Using a Star Code                              | 44 |
| Answer a Coworker's Phone (Call Pickup)                                | 44 |
| Answer a Call Within Your Group (Pickup)                               | 44 |
| Mute Your Call   | 44 |
| Hold Calls   | 45 |
| Put a Call on Hold   | 45 |
| Answer a Call Left on Hold for Too Long                                | 45 |
| Swap between active and held calls                                     | 45 |
| Call park  | 46 |
| Place a call on hold with call park                                    | 46 |
| Retrieve a call on hold with call park                                 | 46 |
| Park and Unpark a Call with One Line Key                               | 47 |
| Call Park Extension and Status   | 47 |
| Forward Calls  | 48 |
| Activate Call Forward All with Feature Activation Code Synchronization | 49 |
| Forward Calls with the Phone Web Page                                  | 50 |
| Transfer Calls   | 51 |
| Transfer a Call to Another Person                                      | 51 |
| Consult Before You Complete a Transfer                                 | 51 |
| Conference Calls and Meetings  | 52 |
| Add Another Person to a Call   | 52 |
| Conference with a Star Code  | 52 |
| View the Participants List as a Host in Ad Hoc Conference              | 53 |
| View the Participants List as a Participant                            | 53 |
| Remove a Participant as a Host in Ad Hoc Conference                    | 54 |
| Record a Call  | 54 |
| Instant Message and Presence Contacts                                  | 55 |
| Presence   | 55 |
| Make a Call to an IM and Presence Contact                              | 55 |
| Change Your Presence State   | 56 |
| Page a Group of Phones (Multicast Paging)                              | 56 |
| XML Application and Multicast Paging                                   | 57 |

|   |                    |
|---|--------------------|
| View XML Application Details  | 57                 |
| Multiple Lines  | 57                 |
| View All Calls on Your Primary Line                                 | 57                 |
| Answer the Oldest Call First  | 58                 |
| View All Calls on Your Phone  | 58                 |
| Shared lines on your multiplatform desk phone                       | 58                 |
| Add yourself to a call on a shared line                             | 59                 |
| Call Center Features  | 59                 |
| Sign In as a Call Center Agent                                      | 60                 |
| Sign Out as a Call Center Agent                                     | 60                 |
| Change Your Status as a Call Center Agent                           | 61                 |
| Accept a Call Center Call   | 61                 |
| Hold an Agent Call  | 61                 |
| Set a Disposition Code While on a Call Center Call                  | 62                 |
| Trace a Call  | 62                 |
| Escalate a Call to a Supervisor                                     | 62                 |
| <hr/>   |                    |
| <b>CHAPTER 3</b>  | <b>Contacts 65</b> |
| Personal Address Book   | 65                 |
| Add a New Contact to Your Personal Address Book                     | 65                 |
| Add a New Contact to Your Personal Address Book with Phone Web Page | 66                 |
| Search for a Contact in Your Personal Address Book                  | 66                 |
| Call a Contact in Your Personal Address Book                        | 67                 |
| Edit a Contact in Your Personal Address Book                        | 67                 |
| Remove a Contact from Your Personal Address Book                    | 68                 |
| Search for a Contact in the All Directories Screen                  | 68                 |
| Corporate Directory   | 70                 |
| Webex Directory   | 70                 |
| Edit the Webex Directory Name                                       | 70                 |
| Search for a Contact in Your Webex Directory                        | 71                 |
| Search for a Webex Contact in All Directory                         | 72                 |
| Broadsoft Directory   | 73                 |
| Search for a Contact in Your BroadSoft Directory                    | 73                 |
| Edit Your Contact Type in Your BroadSoft Directory                  | 74                 |

Manage Your Contacts in the BroadSoft Personal Directory 75

Edit Your BroadSoft Directory Name 76

Edit the Server Name of Your BroadSoft Directory 77

Edit Credentials of Your BroadSoft Directory 78

LDAP Directory 79

    Edit Credentials of Your LDAP Directory 79

    Search for a Contact in Your LDAP Directory 80

    Call a Contact in Your LDAP Directory 80

    Edit a Contact Number in Your LDAP Directory 81

XML Directory 82

    Call a Contact in Your XML Directory 82

    Edit a Contact Number in Your XML Directory 83

Reverse Name Lookup for Incoming and Outgoing Calls 84

---

**CHAPTER 4**

**Recent Calls 85**

Recent calls list 85

View your Recent Calls 85

View Webex Call Logs Duration 87

Spam Indication for Webex Calls 88

View Calls Logs from Server 88

Return a recent call 89

Clear the recent calls list 89

Create a Contact from a Recents Record 90

Delete a call record 90

Delete All Call Records 91

---

**CHAPTER 5**

**Voicemail 93**

Your Personal Voicemail Account 93

    Set up Voicemail on Your Phone 93

Find out if you have new voicemail messages Your Personal 94

Access Your Personal your voicemail 94

Access Your Personal Audio Voicemail 94

Phone Behavior with Voicemail Setting 95

Phone Behavior with Voicemail and Missed Call Configuration Setting 95



|   |    |
|---|----|
| Voice Messages States of Monitored Voicemail Accounts | 96 |
| Access Monitored Voicemail Account Messages           | 97 |

---

**CHAPTER 6****Settings 99**

|   |     |
|---|-----|
| Phone Settings Overview                                 | 100 |
| Change the Ringtone                                     | 100 |
| Assign a Ring Tone with the Phone Web Page              | 100 |
| Control Ringer Volume                                   | 100 |
| Forward Calls from Your Phone                           | 101 |
| Turn on Do Not Disturb for a Specific Line              | 103 |
| Turn on DND from the Phone Web Page                     | 103 |
| Block an Anonymous Call                                 | 103 |
| Block Caller ID   | 104 |
| Secure a Call   | 104 |
| Set Up an Auto Answer Page                              | 105 |
| Enable Call Waiting                                     | 105 |
| Set Up Voicemail  | 105 |
| HTTP Proxy Settings                                     | 106 |
| Set Up a Proxy Server with the Auto Proxy Mode          | 106 |
| Set Up a Proxy Server with the Manual Proxy Mode        | 106 |
| Set Up a Proxy Server from the Phone Web Page           | 107 |
| VPN Connection Settings                                 | 109 |
| Set Up a VPN Connection                                 | 109 |
| Enable a VPN Connection                                 | 110 |
| Disable a VPN Connection                                | 110 |
| Set Up a VPN Connection from the Phone Web Page         | 111 |
| View the VPN Status                                     | 112 |
| Change the Display Mode                                 | 112 |
| Change the Time Format                                  | 113 |
| Change the Date Format                                  | 113 |
| Change the Screen Saver                                 | 113 |
| Configure the Screen Saver with the Phone Web Interface | 114 |
| Add a Logo as a Phone Background                        | 115 |
| Adjust the Phone Screen Contrast                        | 116 |

- Adjust the Phone Screen Backlight 116
- Adjust the Backlight Timer from Phone Web Page 116
- Specify an Audio Device for a Call 117
- Set Language 117
- Set Password 117
- Set Password from Phone Web Page 118
- Set up the Profile Account 118
- Add Multiple Locations for a BroadWorks XSI User 119
- Enable Anonymous Call Blocking from the Phone Web Page 120
- Enable Call Waiting from the Phone Web Page 120
- Reboot Your Phone 120

---

**CHAPTER 7**

**Accessories 121**

- Supported Accessories 121
- Headsets 121
  - Standard Headsets 122
    - Connect a standard headset 122
  - Wireless Headsets 122
  - Swap Headsets While on a Call 123

---

**CHAPTER 8**

**Product Safety and Security 125**

- Safety and Performance Information 125
  - Power Outage 125
  - External Devices 125
  - Ways to Provide Power to Your Phone 126
  - Phone Behavior During Times of Network Congestion 126
  - UL Warning 126
  - EnergyStar 126
  - Product Label 127
- Compliance Statements 127
  - Compliance Statements for the European Union 127
    - CE Marking 127
  - Compliance Statements for Canada 127
  - Compliance Statements for New Zealand 127

|   |     |
|---|-----|
| Permit to Connect (PTC) General Warning     | 127 |
| Compliance Information for Brazil           | 128 |
| Compliance Information for Japan            | 128 |
| FCC Compliance Statements                   | 128 |
| FCC Part 15.19 Statement                    | 128 |
| FCC Part 15.21 Statement                    | 128 |
| FCC RF Radiation Exposure Statement         | 128 |
| FCC Receivers and Class B Digital Statement | 129 |
| Cisco Product Security Overview             | 129 |
| Important Online Information                | 129 |





# CHAPTER 1

## Your Phone

- [The Cisco IP Phone 7800 Series, on page 1](#)
- [New and Changed Features, on page 2](#)
- [Phone Setup, on page 11](#)
- [Sign into Your Extension from Another Phone \(Extension Mobility\), on page 15](#)
- [Sign in to a Phone as a Guest, on page 15](#)
- [Set the Profile Rule on the Phone, on page 16](#)
- [Coworker Line Status, on page 16](#)
- [Add a Menu Shortcut to a Line Key, on page 20](#)
- [Remove the Menu Shortcut from a Line Key, on page 20](#)
- [Service Interruption Message on Home Screen, on page 21](#)
- [Phone Web Page, on page 21](#)
- [Buttons and Hardware, on page 23](#)
- [Power Requirements, on page 27](#)
- [Energy Savings, on page 27](#)
- [Additional Help and Information, on page 27](#)

## The Cisco IP Phone 7800 Series

The Cisco IP Phones 7811, 7821, 7841, and 7861 deliver easy-to-use, highly-secure voice communications.




**Table 1: Cisco IP Phone 7800 Series Major Features**

| Features | 7811                    | 7821                      | 7841                      | 7861                      |
|----------|-------------------------|---------------------------|---------------------------|---------------------------|
| Screen   | Greyscale, no backlight | Greyscale, with backlight | Greyscale, with backlight | Greyscale, with backlight |

| Features           | 7811 | 7821 | 7841 | 7861 |
|--------------------|------|------|------|------|
| Lines              | 1    | 2    | 4    | 16   |
| Fixed feature keys | 8    | 9    | 9    | 9    |

Your phone must be connected to a network and configured to connect to a call control system. The phones support many functions and features, depending on the call control system. Your phone might not have all functions available, based on the way your administrator has set it up.

When you add features to your phone, some features require a line button. But each line button on your phone can support only one function (a line, a speed dial, or a feature). If your phone's line buttons are already in use, your phone won't display any additional features.

To check which phone model you have, press **Applications**  and select **Status > Product Information**. The **Model number** field shows your phone model.

## Feature Support

This document describes all the features that the device supports. However, not all features may be supported with your current configuration. For information on supported features, contact your service provider or administrator.

## New and Changed Features

### New and Changed for Firmware Release 12.0(4)

| Revision  | New and Changed Sections   |
|---|--|
| Updated the topics to support one call per line | <a href="#">Transfer Calls, on page 51</a><br><a href="#">Consult Before You Complete a Transfer, on page 51</a> |

### New and Changed for Firmware Release 12.0(3)

| Revisions  | New and Changed Sections   |
|--|--|
| Added a new topic to mention the support password setup after factory reset. | <a href="#">Create User Password on Phone, on page 14</a>  |
| Added a new topic to support factory reset from server                       | <a href="#">Factory Reset from Server, on page 33</a>  |
| Added new topics to support invoking XML applications from multicast paging  | <a href="#">XML Application and Multicast Paging, on page 57</a><br><a href="#">View XML Application Details, on page 57</a> |

## New and Changed for Firmware Release 12.0(2)

| Revisions   | New and Changed Sections  |
|---|---|
| A new topic added for the task to manage participant list in Ad Hoc conference as a host        | <a href="#">View the Participants List as a Host in Ad Hoc Conference, on page 53</a> |
| A new topic added for the task to manage participant list in Ad Hoc conference as a participant | <a href="#">View the Participants List as a Participant, on page 53</a>               |
| A new topic added for the task to remove participant list in Ad Hoc conference as a host        | <a href="#">Remove a Participant as a Host in Ad Hoc Conference, on page 54</a>       |

## New and Changed for Firmware Release 12.0(1)

| Revision   | New and Changed Sections  |
|--|---|
| Added a new topic for Site Survivability Gateway (SGW) | <a href="#">Service Interruption Message on Home Screen, on page 21</a> |
| Added a new task to view Webex call log duration       | <a href="#">View Webex Call Logs Duration, on page 87</a>               |

## New and Changed for Firmware Release 11.3(7)

| Revision  | New and Changed Sections   |
|---|--|
| Added the topic to support spam indication for Webex calls      | <a href="#">Spam Indication for Webex Calls, on page 88</a>  |
| Updated the topic for Webex calls                               | <a href="#">View your Recent Calls, on page 85</a>   |
| Updated the topic to add VPN connection                         | <a href="#">Phone Web Page, on page 21</a>   |
| Added the topics for the new feature VPN connection             | <a href="#">VPN Connection Settings, on page 109</a><br><a href="#">Set Up a VPN Connection , on page 109</a><br><a href="#">Enable a VPN Connection, on page 110</a><br><a href="#">Disable a VPN Connection, on page 110</a><br><a href="#">Set Up a VPN Connection from the Phone Web Page, on page 111</a><br><a href="#">View the VPN Status, on page 112</a> |
| Updated the topic to remove a prerequisite related the line key | <a href="#">Configure Monitoring of an Individual Line, on page 18</a>   |
| Added the task on how to view call statistics on the phone      | <a href="#">View Call Records in Call Statistics, on page 31</a>   |

| Revision   | New and Changed Sections   |
|--|--|
| Updated the topic to mention how to set password in phone web page | <a href="#">Set Password</a> , on page 117   |
| Added the task on how to set password from phone web page          | <a href="#">Set Password from Phone Web Page</a> , on page 118   |
| Updated the topic to add <code>HTTP proxy</code>                   | <a href="#">Phone Web Page</a> , on page 21  |
| Added the topics for the feature <code>HTTP proxy</code>           | <a href="#">HTTP Proxy Settings</a> , on page 106<br><a href="#">Set Up a Proxy Server with the Auto Proxy Mode</a> , on page 106<br><a href="#">Set Up a Proxy Server with the Manual Proxy Mode</a> , on page 106<br><a href="#">Set Up a Proxy Server from the Phone Web Page</a> , on page 107 |
| Added a new topic for Webex directory support                      | <a href="#">Webex Directory</a> , on page 70<br><a href="#">Search for a Contact in Your Webex Directory</a> , on page 71<br><a href="#">Search for a Webex Contact in All Directory</a> , on page 72<br><a href="#">Edit the Webex Directory Name</a> , on page 70                                |
| Updated topic for Webex call log support                           | <a href="#">View your Recent Calls</a> , on page 85<br><a href="#">View Calls Logs from Server</a> , on page 88  |

## New and Changed for Firmware Release 11.3(6)

| Revision  | New and Changed Sections  |
|---|---|
| Updated the topics for the new feature <i>Permission Only for the Call Forward All Service Setup</i>                        | <a href="#">Forward Calls</a> , on page 48  |
| Updated the topic for the new feature <i>Permission Only for the Call Forward All Service Setup</i> to add a reference link | <a href="#">Forward Calls with the Phone Web Page</a> , on page 50                                  |
| Updated the topics for the new feature <i>Permission Only for the Call Forward All Service Setup</i>                        | <a href="#">Activate Call Forward All with Feature Activation Code Synchronization</a> , on page 49 |
| Updated the topics for the new feature <i>Permission Only for the Call Forward All Service Setup</i>                        | <a href="#">Forward Calls from Your Phone</a> , on page 101   |
| Updated several steps for the feature <i>Enhancements of Displaying Contact Numbers from the LDAP Directory</i>             | <a href="#">Search for a Contact in the All Directories Screen</a> , on page 68                     |



| Revision   | New and Changed Sections  |
|--|---|
| Updated the topic to add related topic links for the feature <i>Enhancements of Displaying Contact Numbers from the LDAP Directory</i> | <a href="#">Search for a Contact in Your LDAP Directory, on page 80</a>   |
| Added the new task for the feature <i>Enhancements of Displaying Contact Numbers from the LDAP Directory</i>                           | <a href="#">Call a Contact in Your LDAP Directory, on page 80</a>   |
| Added the new task for the feature <i>Enhancements of Displaying Contact Numbers from the LDAP Directory</i>                           | <a href="#">Edit a Contact Number in Your LDAP Directory, on page 81</a>  |
| Added the new topic for the feature <i>Enhancements of Displaying Contact Numbers from the XML Directory</i>                           | <a href="#">XML Directory, on page 82</a>   |
| Added the new topic for the feature <i>Enhancements of Displaying Contact Numbers from the XML Directory</i>                           | <a href="#">Call a Contact in Your XML Directory, on page 82</a>  |
| Added the new topic for the feature <i>Enhancements of Displaying Contact Numbers from the XML Directory</i>                           | <a href="#">Edit a Contact Number in Your XML Directory, on page 83</a>   |
| Added a new task topic on how to control the ringer volume   | <a href="#">Control Ringer Volume, on page 100</a>  |
| Updated the task topic on non-availability of <b>Continue</b> softkey  | <a href="#">Auto Provision Your Phone with Short Activation Code, on page 13</a><br><a href="#">Onboard Your Phone with Activation Code, on page 13</a> |
| Updated the task topic on non-availability of <b>Save</b> softkey  | <a href="#">Create a Contact from a Recents Record, on page 90</a>  |
| Updated the task topic on non-availability of <b>Sign in</b> softkey   | <a href="#">Set up the Profile Account, on page 118</a>   |

## New and Changed for Firmware Release 11.3(5)

| Revision   | New and Changed Sections   |
|--|--|
| Added the task about how to check the MIC Cert Status  | <a href="#">Find Information about MIC Cert Refresh Status, on page 35</a> |
| Updated the topic to support STIR/SHAKEN   | <a href="#">Recent calls list, on page 85</a>                              |
| Updated the topic to introduce the new icons to support STIR/SHAKEN                                  | <a href="#">View your Recent Calls, on page 85</a>                         |
| Added the task to find license type used for single step migration of MPP phones to enterprise phone | <a href="#">Find the Transition License Type , on page 35</a>              |

## New and Changed for Release 11.3(4)

This release has no impact on this user guide.

## New and Changed for Firmware Release 11.3(3)

| Revision  | New and Changed Sections   |
|---|--|
| Updated the step on how to add contacts in the topic  | <a href="#">Search for a Contact in the All Directories Screen, on page 68</a>       |
| Updated the topic with one prerequisite and another method to add contacts in the personal address book | <a href="#">Add a New Contact to Your Personal Address Book, on page 65</a>          |
| Added the topic about how to add, edit, and delete the contacts in the BroadSoft Personal directory     | <a href="#">Manage Your Contacts in the BroadSoft Personal Directory, on page 75</a> |
| Updated the topic with the new steps to add a contact   | <a href="#">Create a Contact from a Recents Record, on page 90</a>                   |
| Updated the topic to block an anonymous call on the phone   | <a href="#">Block an Anonymous Call, on page 103</a>                                 |
| Added the topic to enable anonymous call blocking from the phone web page                               | <a href="#">Enable Anonymous Call Blocking from the Phone Web Page, on page 120</a>  |
| Added the topic to enable call waiting on the phone   | <a href="#">Enable Call Waiting, on page 105</a>                                     |
| Added the topic to enable call waiting from the phone web page  | <a href="#">Enable Call Waiting from the Phone Web Page, on page 120</a>             |
| Updated the topic to mention the new menu text box <b>Unavailability</b>                                | <a href="#">Change Your Status as a Call Center Agent, on page 61</a>                |
| Updated the topic for the new softkeys of the calls history list  | <a href="#">View your Recent Calls, on page 85</a>                                   |
| Updated to topic to add the new menu item   | <a href="#">Find Information About Your Phone, on page 28</a>                        |

## New and Changed for Firmware Release 11.3(2)

| Revision   | New and Changed Sections  |
|--|---|
| Added the topics for adding and removing menu shortcuts on line keys | <a href="#">Add a Menu Shortcut to a Line Key, on page 20</a><br><a href="#">Remove the Menu Shortcut from a Line Key, on page 20</a> |
| Added the topic for user authentication control on phone menus       | <a href="#">User Authentication Control, on page 15</a>   |
| Added the topic for Activation Code Sync                             | <a href="#">Activate Call Forward All with Feature Activation Code Synchronization, on page 49</a>                                    |

| Revision  | New and Changed Sections   |
|---|--|
| Updated the existing task to include information on reverse name lookup with local directory                        | <a href="#">View Calls Logs from Server</a> , on page 88   |
| Added the topic to include the information on parking calls in a dedicated call park extension and call park status | <a href="#">Call Park Extension and Status</a> , on page 47  |
| Added the overview description for phone settings   | <a href="#">Phone Settings Overview</a> , on page 100  |
| Updated the directory-related tasks   | <a href="#">Search for a Contact in the All Directories Screen</a> , on page 68<br><a href="#">Add a New Contact to Your Personal Address Book</a> , on page 65<br><a href="#">Add a New Contact to Your Personal Address Book with Phone Web Page</a> , on page 66<br><a href="#">Call a Contact in Your Personal Address Book</a> , on page 67<br><a href="#">Edit a Contact in Your Personal Address Book</a> , on page 67<br><a href="#">Remove a Contact from Your Personal Address Book</a> , on page 68 |

| Revision  | New and Changed Sections  |
|---|---|
| Updated the tasks for the directory enhancement feature | <p><a href="#">Search for a Contact in the All Directories Screen, on page 68</a></p> <p><a href="#">Search for a Contact in Your BroadSoft Directory, on page 73</a></p> <p><a href="#">Edit Your Contact Type in Your BroadSoft Directory, on page 74</a></p> <p><a href="#">Edit Your BroadSoft Directory Name, on page 76</a></p> <p><a href="#">Edit the Server Name of Your BroadSoft Directory, on page 77</a></p> <p><a href="#">Edit Credentials of Your BroadSoft Directory, on page 78</a></p> <p><a href="#">Search for a Contact in Your LDAP Directory, on page 80</a></p> <p><a href="#">Make a Call to an IM and Presence Contact, on page 55</a></p> <p><a href="#">Change Your Presence State, on page 56</a></p> <p><a href="#">Add a New Contact to Your Personal Address Book, on page 65</a></p> <p><a href="#">Add a New Contact to Your Personal Address Book with Phone Web Page, on page 66</a></p> <p><a href="#">Search for a Contact in Your Personal Address Book, on page 66</a></p> <p><a href="#">Call a Contact in Your Personal Address Book, on page 67</a></p> <p><a href="#">Edit a Contact in Your Personal Address Book, on page 67</a></p> <p><a href="#">Remove a Contact from Your Personal Address Book, on page 68</a></p> |
| Updated the tasks of forwarding a call                  | <p><a href="#">Forward Calls with the Phone Web Page, on page 50</a></p> <p><a href="#">Forward Calls from Your Phone, on page 101</a></p>  |
| Updated the topic title                                 | <p><a href="#">Your Personal Voicemail Account, on page 93</a></p> <p><a href="#">Find out if you have new voicemail messages Your Personal , on page 94</a></p> <p><a href="#">Access Your Personal your voicemail, on page 94</a></p> <p><a href="#">Access Your Personal Audio Voicemail, on page 94</a></p>   |

| Revision  | New and Changed Sections   |
|---|--|
| Added the topics for the monitored voicemail with PLK                                     | <a href="#">Voice Messages States of Monitored Voicemail Accounts</a> , on page 96<br><a href="#">Access Monitored Voicemail Account Messages</a> , on page 97 |
| Add the topic to edit user credentials to access the LDAP directory                       | <a href="#">Edit Credentials of Your LDAP Directory</a> , on page 79   |
| Updated the task with a new step to include information on the different user credentials | <a href="#">Edit Credentials of Your LDAP Directory</a> , on page 79   |
| Updated the task to include user credentials  | <a href="#">Search for a Contact in Your LDAP Directory</a> , on page 80   |
| Update the topics to introduce or mention the LDAP cache mechanism                        | <a href="#">LDAP Directory</a> , on page 79<br><a href="#">Search for a Contact in Your LDAP Directory</a> , on page 80  |
| Updated the existing topic to include ACD status synchronization                          | <a href="#">Call Center Features</a> , on page 59  |
| Updated the topic to check the status of a call center agent.                             | <a href="#">Sign In as a Call Center Agent</a> , on page 60  |

## New and Changed Features for Firmware Release 11.3(1)

| Revisions  | New and Changed Sections  |
|--|---|
| Added new task to support Auto Provisioning with Short Activation Code.              | <a href="#">Auto Provision Your Phone with Short Activation Code</a> , on page 13                         |
| Updated an existing task to support display UDI feature on phone screen              | <a href="#">Find Information About Your Phone</a> , on page 28  |
| Added a task to support Serviceability Enhancement Messages for Provisioning Failure | <a href="#">Get More Information When Your Phone Displays a Provisioning Failure Message</a> , on page 34 |
| Added a task to support One-Button Call Park.  | <a href="#">Park and Unpark a Call with One Line Key</a> , on page 47                                     |

## New and Changed for Firmware Release 11.2(3)SR1

| Revision  | New or Changed Sections  |
|---|--|
| Added new task to support Activation Code Onboarding. | <a href="#">Onboard Your Phone with Activation Code</a> , on page 13 |
| Added new topic to support Phone Keypad Characters.   | <a href="#">Phone Keypad Characters</a> , on page 24                 |

## New and Changed for Firmware Release 11.2(3)

| Revisions  | New and Changed Sections   |
|--|--|
| Added a new task on contact search in multiple directories   | <a href="#">Search for a Contact in the All Directories Screen, on page 68</a> |
| Updated the topic on profile account setup to support resync profile with the SIP credentials or the login credentials | <a href="#">Set up the Profile Account, on page 118</a>                        |
| Update the topic to support monitoring phone lines for coworkers   | <a href="#">Coworker Line Status, on page 16</a>                               |
| Added a new task to support activating and deactivating the monitoring of BLF list                                     | <a href="#">Activate or Deactivate Monitoring of the BLF List, on page 18</a>  |
| Added a new task to support the configuring the monitoring of an individual line                                       | <a href="#">Configure Monitoring of an Individual Line, on page 18</a>         |
| Added a new task to support removing the feature that is configured on a Line Key                                      | <a href="#">Remove the Feature Configured on a Line Key, on page 20</a>        |

## New and Changed for Firmware Release 11.2(1)

| Revisions  | New or Changed Sections   |
|--|---|
| Added a new topic to support multiple locations (anywhere) for a BroadWorks XSI user                                     | <a href="#">Add Multiple Locations for a BroadWorks XSI User, on page 119</a>                   |
| Updated the topic with the new <b>Display recents from</b> option to support XSI call logs improvement                   | <a href="#">View your Recent Calls, on page 85</a>  |
| Added a new topic to support XSI call logs improvement   | <a href="#">View Calls Logs from Server , on page 88</a>  |
| Updated the topic with the new <b>Missed</b> softkey to support XSI call logs improvement                                | <a href="#">Return a recent call, on page 89</a>  |
| Added a new topic to support DND and call forward indication for a non-selected line                                     | <a href="#">Silence an Incoming Call, on page 43</a>  |
| Updated the topic with icons for call forward and DND to support DND and call forward indication for a non-selected line | <a href="#">Forward Calls, on page 48</a><br><a href="#">Turn On Do Not Disturb, on page 43</a> |
| Updated the topic to support XSI caller ID blocking  | <a href="#">Block Caller ID , on page 104</a>   |
| Added a new topic to support username and password collection on HTTP authentication challenge                           | <a href="#">Set up the Profile Account, on page 118</a>   |

| Revisions  | New or Changed Sections  |
|--|--|
| Updated the menu navigation for ringtone setting to support audio equalizers to customize audio for handset and headset (acoustic audio) | <a href="#">Change the Ringtone, on page 100</a>   |
| Added a new topic to support audio equalizers to customize audio for handset and headset (acoustic audio)                                | <a href="#">Specify an Audio Device for a Call, on page 117</a>  |
| Updated the topic to support screen saver type lock removal  | <a href="#">Change the Screen Saver, on page 113</a><br><a href="#">Configure the Screen Saver with the Phone Web Interface, on page 114</a> |

## New and Changed for Firmware Release 11.1(2)

| Feature                | New or Changed Sections   |
|------------------------|---|
| Emergency Call Support | <a href="#">Make an Emergency Call, on page 38</a>  |
| Reverse Name Lookup    | Administrators enable and disable this feature. For information about this feature, see <a href="#">Reverse Name Lookup for Incoming and Outgoing Calls, on page 84</a> . |

## New and Changed for Firmware Release 11.1(1)

| Revision  | Updated Section  |
|---|--|
| Adjust Contrast with a slider                     | <a href="#">Adjust the Phone Screen Contrast, on page 116</a>  |
| Call Recording Support                            | <a href="#">Record a Call, on page 54</a>  |
| Instant Message and Presence Contacts<br>Presence | <a href="#">Instant Message and Presence Contacts, on page 55</a><br><a href="#">Presence, on page 55</a><br><a href="#">Make a Call to an IM and Presence Contact, on page 55</a><br><a href="#">Change Your Presence State, on page 56</a> |
| Call Center Support                               | <a href="#">Call Center Features, on page 59</a>   |
| XSI Call Logs - Server All Calls menu             | <a href="#">View your Recent Calls, on page 85</a>   |


## Phone Setup

Your administrator sets up your phone and connects it to the network. If your phone is not set up and connected, contact your administrator for instructions.

## Adjust the Handset Rest

If your phone is wall-mounted or if the handset slips out of the cradle too easily, you may need to adjust the handset rest to ensure that the receiver does not slip out of the cradle.

**Figure 1: Adjust the Handset Rest**

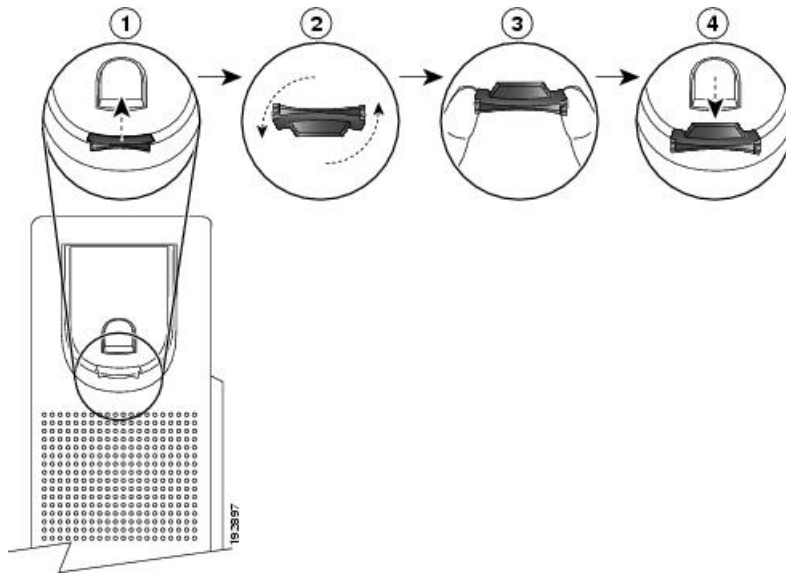

### Procedure

- 
- Step 1** Remove the handset from the cradle and pull the plastic tab from the handset rest.
  - Step 2** Rotate the tab 180 degrees.
  - Step 3** Hold the tab between two fingers, with the corner notches facing you.
  - Step 4** Line up the tab with the slot in the cradle and press the tab evenly into the slot. An extension protrudes from the top of the rotated tab.
  - Step 5** Return the handset to the handset rest.
- 

## Change the Viewing Angle of Your Phone

You can change the angle of the phone, except the Cisco IP Phone 7811, to eliminate glare on the screen.

### Procedure

- 
- Step 1** Unplug the phone from the network.
  - Step 2** Place the phone so that the keypad faces the desktop.
  - Step 3** Grasp one side of the footstand with one hand and place your other hand on the phone.
  - Step 4** Hold down the phone and pull up on the footstand.



- Step 5** Turn the footstand over.
- Step 6** Push the footstand back into the phone until the stand locks into place.
- Step 7** Place the phone upright and plug it into the network.
- 

## Connect to the Network

You need to connect the phone to the telephone network.

- Wired connection—The phone is plugged into the network using an Ethernet cable.

## Onboard Your Phone with Activation Code

After your phone boots up, you will see a welcome screen where you can enter the activation code. If you don't have an activation code, contact your administrator.

### Before you begin

Your administrator provides you with a 16-digit activation code in the form xxxx-xxxx-xxxx-xxxx.

### Procedure

---

**Step 1** Enter your activation code in the field that is provided on the Welcome screen. You don't need to input the hyphen (-) character when entering the code.

**Step 2** Press **Continue**.

**Note** The **Continue** softkey appears only when you enter either valid 16-digit activation code or the valid first three digits of it followed by a # key. The **Delete** softkey appears only when you enter the first digit of the activation code in the **Enter activation code** box.

The phone completes the onboarding process automatically.

**Step 3** If an error message displays, enter the code again or contact your administrator for a new code.

---

## Auto Provision Your Phone with Short Activation Code

After your phone boots up, you see a welcome screen where you can enter the activation code. If you don't have the activation code, contact your administrator.

### Before you begin

Your administrator provides your activation code:

### Procedure

---

**Step 1** Press pound (#), and enter your activation code in the field that is provided on the Welcome screen.

**Step 2** Press **Continue**.

**Note** The **Continue** softkey doesn't appear until you enter first three digits of the valid activation code followed by a # key. The **Delete** softkey appears only when you enter the first digit of activation code in the **Enter activation code** box.

The phone completes the provisioning process automatically.

**Step 3** If an error message displays, enter the code again or contact your administrator.

---

## Set a Password on Initial Phone Boot Up

The first time your phone boots up, you may be prompted to set a password. If you are not prompted, your administrator has created a password for you.

### Procedure

---

**Step 1** Enter your password in the **New password** and **Reenter new password** fields.

**Step 2** Press **Save**.

---

## Create User Password on Phone

Your administrator enables your phone to prompt for **Set password** notification screen when your phone reboots after every factory reset. This feature enhances the security of your phone.

### Procedure

---

**Step 1** Perform one of the following:

- After factory reset, your phone reboots and you see the **Set password** prompt on the phone.
- Press
  - a. Select **Status > Issues**. If the phone has no user password that is created, you see a message **No user password provided** and you see the **Select** softkey which lets you access the **No user password provided** screen.  
If the phone has user password, the value of the **Issues** menu is displayed as **None**.
  - b. Press **Create**.

**Step 2** In the **Set password** screen, set the new password in the **New password** box.

After you create a new password, an unlock icon appears on the phone screen.

---

## User Authentication Control

Your administrator can configure if you require authentication to access phone menus. Your administrator can also customize and turn off the authentication to allow access to all phone menus.

With this feature, whether any phone menu needs authentication is controlled by your administrator. If your administrator configures authentication to access the menu, you need to provide the password and sign in to access the menu.

## Sign into Your Extension from Another Phone (Extension Mobility)

If extension mobility is configured, you can sign into a different phone in your network and have it act the same as your phone. After you sign in, the phone adopts your personal directory number.

### Before you begin

Your administrator configures provisioning authority.

### Procedure

---

**Step 1** Press **Sign in**.

**Step 2** Enter your username and password, then press **Sign in**.

The password field allows two input methods: alphanumeric and numeric. While you type in the password, you see the **Options** softkey on the phone. Use this softkey to change the current password input type. Select **Input all** for alphanumeric input and select **Input num** for numeric entry. Your administrator configures the password input method on the phone web page.

---

## Sign out of Your Extension from Another Phone

### Procedure

---

Press **Sign out**.

---

## Sign in to a Phone as a Guest

Your phone has a guest account when your administrator enables hoteling on your phone. You can then sign in to a different phone in your network as a guest.

**Procedure****Step 1** Press **Sign in**.**Step 2** Enter your user ID and password.

The password field uses two types of input methods; alphanumeric and numeric. While you type in the password, you see **Options** softkey on the phone. You can use this softkey to change the current password input type. Select **Input all** for alphanumeric input and select **Input num** for numeric entry.

**Step 3** Press **Save**.

**Note** An administrator can set up a phone to make emergency calls. Whenever you sign in as a guest to a registered phone, the phone transfers a request to obtain the location of the phone. The location is sent to the emergency services when you make an emergency call.

## Sign Out of a Phone as a Guest

**Procedure****Step 1** Press **Guest Out**.**Step 2** Press **Sign Out**.

## Set the Profile Rule on the Phone

**Procedure****Step 1** Press **Applications** .**Step 2** Select **Device administration** > **Profile rule**.**Step 3** Enter the profile rule using the phone keypad.**Step 4** Press **Resync**.

## Coworker Line Status

You can set up line keys on your phone to monitor coworkers' lines. This feature is useful if you routinely handle calls for coworkers and need to see if they are available to answer calls. The monitoring line keys

function as Busy Lamp Field (BLF) keys. A BLF is an LED that changes color to indicate the status of the monitored line.

The following table describes the LED status:

**Table 2: BLF Key LED Status**

| LED Color    | Meaning                          |
|--------------|----------------------------------|
| Green        | The monitored line is available. |
| Red          | The monitored line is busy.      |
| Blinking red | The monitored line is ringing.   |
| Amber        | Error in BLF key configuration.  |

Your administrator performs the necessary setup on the server and for the phone to allow you to monitor the desired lines.

















You can configure monitoring on your phone in two ways:

- You can configure monitoring of an individual user's line.
- If your administrator has set up a BLF list for you, you can activate or deactivate monitoring of the entire list. The BLF list is the list of users whose lines you can monitor. The phone monitors each user on a separate line key. The phone assigns available line keys for monitoring, automatically.

With the appropriate configuration, you can use the BLF keys to call the monitored line (speed dial), and to answer incoming calls to the monitored line (call pickup).

When the configuration is complete, the icon in the BLF key label indicates the combination of features configured on the key:

**Table 3: Busy Lamp Field Icons**

|          | BLF   | BLF and Speed Dial  | BLF and Call Pickup  | BLF, Speed Dial, and Call Pickup  |
|----------|---|---|--|---|
| Idle     |  |  |  |  |
| Alerting |  |  |  |  |
| In use   |  |  |  |  |
| Error    |  |  |   |  |

## Activate or Deactivate Monitoring of the BLF List

If your administrator has configured a Busy Lamp Field (BLF) list for you, you can activate or deactivate monitoring of the entire BLF list. The phone monitors each user on a separate line key. When you activate monitoring, the phone assigns available line keys in sequence to monitor the BLF list entries.

The BLF list keys function in the same way as individual BLF keys. See [Coworker Line Status, on page 16](#) for details. When you activate monitoring, the phone starts showing the status of the monitored lines on the BLF list keys. You can use each BLF list key to call the monitored line (speed dial), and to answer incoming calls to the monitored line (call pickup).



**Note** The sequential order of the users in the BLF list is set by your administrator. The corresponding BLF list keys always maintain this sequential order. You can choose to configure another feature such as speed dial on a BLF list key at any time. However, it renders the line key unavailable for the BLF list.

Whenever you make any change to line key configurations, the phone redoes the BLF list key assignment taking the change into account. The phone only assigns available line keys, and in the same sequential order, every time. This can result in changes in the positions of BLF list keys.

The phone monitors as many users as possible with the available line keys. You can make more line keys available for monitoring the list by removing features configured on line keys. See [Remove the Feature Configured on a Line Key, on page 20](#) for details.

### Before you begin

Your administrator configures the BLF list.

### Procedure

**Step 1** Press **Applications** .

**Step 2** Select **User preferences > Attendant console preferences > BLF list**.

- When **BLF list** is set to **Show**, monitoring is activated. The phone shows the status of the monitored lines on the BLF list keys.
- When **BLF list** is set to **Hide**, monitoring is deactivated.

**Step 3** Press **Set**.

## Configure Monitoring of an Individual Line

You can configure a line key to monitor a coworker's line status. When you add speed dial to the configuration, you can use the line key to call the monitored line. When you add call pickup to the configuration, you can use the line key to answer incoming calls to the monitored line. The line key functions as a Busy Lamp Field (BLF) key. See [Coworker Line Status, on page 16](#) for details.

You can select any available line key to configure this feature. You can also select any line key that is functioning as a speed-dial key or as a BLF key. Your configuration will override any existing configuration for the key.

If your administrator has configured a BLF list for you, you can only monitor the lines of people who are in the list.

Your phone may already be monitoring the entire list. See [Activate or Deactivate Monitoring of the BLF List, on page 18](#) for details. You can still configure an individual key to monitor a line. However, the phone will then no longer monitor the line automatically as part of the list. If you remove the individual BLF key configuration, the phone resumes monitoring the line automatically as part of the list. Note that the phone adjusts the BLF list key assignment every time it has to add or remove a line for automatic monitoring. This results in changes in the positions of BLF list keys.

### Before you begin

- Your administrator performs the necessary setup to allow you to monitor the concerned line.
- Your administrator allows configuring the BLF feature options on line keys.

### Procedure

---

**Step 1** Press and hold down the line key for two seconds.

**Step 2** On the **Select feature** screen, select one of these options:

- If you just want to use the key to monitor a line, select **BLF presence**.
- If you want to use the key to monitor a line and also speed-dial the monitored line, select **BLF + Speed dial**.
- If you want to use the key to monitor a line and also answer incoming calls to the monitored line, select **BLF + Call pickup**.
- If you want to use the key for all the three functions, select **BLF + Speed dial + Call pickup**.

**Step 3** Enter the user ID of the person whose line you want to monitor, in the **User ID** field.

**Note** You must enter the user ID. The user ID may not be the person's name or extension. Consult your administrator if you need assistance.

If your administrator has configured a BLF list for you, you can select the user whose line you want to monitor from the list:

a) Select **Search BLF list**.

Users whose names appear in grey in the list are ones that your phone is already monitoring on individually configured BLF keys.

b) Select the user whose line you want to monitor.

The user ID appears in the **User ID** field.

If you select a user who is already monitored on an individually configured key, the new configuration overrides the previous configuration to monitor the user.

**Step 4** Press **Save**.

---

## Remove the Feature Configured on a Line Key

You can remove the feature configured on a line key.

If your phone is monitoring a Busy Lamp Field (BLF) list, removing the feature configured on a line key makes the line key available for monitoring the BLF list. This can change the positions of BLF list keys. See [Activate or Deactivate Monitoring of the BLF List, on page 18](#) for details.



---

**Note** You cannot remove some features configured by your administrator.

---

### Procedure

---

- Step 1** Press and hold down the line key for two seconds.
  - Step 2** On the **Select feature** screen, select **None**.
  - Step 3** When prompted to confirm, press **OK**.
- 

## Add a Menu Shortcut to a Line Key

After you configure a line key with a menu shortcut, you can open the menu with a simple press on the line key.

### Before you begin

Your administrator must enable this feature on your phone.

### Procedure

---

- Step 1** Press and hold a line key for two seconds. The available feature list is displayed.
  - Step 2** Select **Menu shortcut** from the list. The available menu list is displayed.
  - Step 3** Scroll the list and select the menu you want to add to the line key and press **Set**.
- 

## Remove the Menu Shortcut from a Line Key

### Procedure

---

- Step 1** Press and hold the line key for two seconds. The available feature list is displayed.



**Step 2** Select **None** from the list and press **Set**.

## Service Interruption Message on Home Screen

When Webex cloud server is not available, you will see **Service interruption** notification on the phone home screen and the line status shows the survivability icon. During this situation, phone gets connected to the Site Survivability Gateway (SGW) so that you can use at least basic calling features. SGW services are deployed within your local network, hence, the phone supports only basic calling features. If you check the line status, it shows **Interrupted**. To view the line status, see [View the Line Status, on page 31](#).

When you experience this issue, your administrator can help troubleshoot.

## Phone Web Page

You can customize some phone settings with the phone web page, which you access from your computer. Your administrator gives you the page URL, your user ID, and password.

In the phone web page, you can control features, line settings, and phone services for your phone.

- Phone features include speed dial, do not disturb, and your personal address book.
- Line settings affect a specific phone line (directory number) on your phone. Line settings can include call forward, visual and audio message indicators, ring patterns, and other line-specific settings.

The following table describes some specific features that you configure using the phone web page.

| Features                   | Description  |
|----------------------------|--|
| Call forward               | You specify the number that will receive calls when call forward is enabled on the phone. Use the phone web page to set up more complicated call forward functions, for example, when your line is busy. |
| Speed dial                 | You assign phone numbers to speed-dial numbers so that you can quickly call that person.   |
| Ringtone                   | You assign a ringtone to a specific line.  |
| Personal directory contact | You add a contact to your personal directory with phone web page.  |
| HTTP proxy                 | You set up an HTTP proxy for the phone to connect to the internet.   |
| VPN connection             | You set up the phone to connect to the network through a VPN sever.  |

### Related Topics

[Forward Calls with the Phone Web Page](#), on page 50

[Speed Dial](#), on page 39

[Assign a Ring Tone with the Phone Web Page](#), on page 100

[Add a New Contact to Your Personal Address Book with Phone Web Page](#), on page 66

## Speed dial numbers

When you dial a number on your phone, you enter a series of digits. When you set up a speed dial number, the speed dial number must contain all the digits you need to make the call. For example, if you need to dial 9 to get an outside line, you enter the number 9 and then the number you want to dial.

You can also add other dialed digits to the number. Examples of additional digits include a meeting access code, an extension, a voicemail password, an authorization code, and a billing code.

The dial string can contain the following characters:

- 0 to 9
- Pound (#)
- Asterisk (\*)
- Comma (,)—This is the pause character, and gives a 2 second delay in the dialing. You can have several commas in a row. For example, two commas (,,) represent a pause of 4 seconds.

The rules for dial strings are:

- Use the comma to separate the parts of the dial string.
- An authorization code must always precede a billing code in the speed dial string.
- A single comma is required between the authorization code and the billing code in the string.
- A speed dial label is required for speed dials with authorization codes and additional digits.

Before you configure the speed dial, try to dial the digits manually at least once to ensure that the digit sequence is correct.

Your phone does not save the authorization code, billing code, or extra digits from the speed dial in the call history. If you press **Redial** after you connect to a speed dial destination, the phone prompts you to enter any required authorization code, billing code, or additional digits manually.

### Example

To set up a speed dial number to call a person at a specific extension, and if you need an authorization code and billing code, consider the following requirements:

- You need to dial **9** for an outside line.
- You want to call **5556543**.
- You need to input the authorization code **1234**.
- You need to input the billing code **9876**.
- You must wait for 4 seconds.
- After the call connects, you must dial the extension **56789#**.

In this scenario, the speed dial number is **95556543,1234,9876,,56789#**.

### Related Topics

[Phone Keypad Characters](#), on page 24

# Buttons and Hardware




The Cisco IP Phone 7800 Series has distinct hardware types:











- Cisco IP Phone 7811 No buttons on either side of the screen
- Cisco IP Phone 7821 Two buttons on the left side of the screen
- Cisco IP Phone 7841 Two buttons on either side of the screen
- Cisco IP Phone 7861 16 buttons at the right edge of the phone

The following figure shows the Cisco IP Phone 7841.

**Figure 2: Cisco IP Phone 7800 Series Buttons and Features**



|   |   |   |
|---|---|---|
| 1 | Handset and Handset light strip               | Indicates whether you have an incoming call (flashing red) or a new voice message (steady red).   |
| 2 | Programmable feature buttons and line buttons |  Access your phone lines, features, and call sessions. For more information, see Softkey, Line, and Feature Button on page 13. |
| 3 | Softkey buttons                               |  Access functions and services. For more information, see Softkey, Line, and Feature Button on page 13.                        |
| 4 | Navigation cluster                            | Navigation ring and <b>Select</b>  button. Scroll through menus, highlight items, and select the highlighted item.           |

|   |  |  |
|---|--|--|
| 5 | <b>Hold/Resume, Conference, and Transfer</b> | <p><b>Hold/Resume</b>  Place an active call on hold and resume the held call.</p> <p><b>Conference</b>  Create a conference call.</p> <p><b>Transfer</b>  Transfer a call.</p>   |
| 6 | <b>Speakerphone, Mute, and Headset</b>       | <p><b>Speakerphone</b>  Toggle the speakerphone on or off. When the speakerphone is on, the button is lit.</p> <p><b>Mute</b>  Toggle the microphone on or off. When the microphone is muted, the button is lit.</p> <p><b>Headset</b>  Toggle the headset on or off. When the headset is on, the button is lit.</p> |
| 7 | <b>Contacts, Applications, and Messages</b>  | <p><b>Contacts</b>  Access personal and corporate directories.</p> <p><b>Applications</b>  Access call history, user preferences, phone settings, and phone model information.</p> <p><b>Messages</b>  Autodial your voice messaging system.</p>  |
| 8 | <b>Volume button</b>                         |  <p>Adjust the handset, headset, and speakerphone volume (off hook) and the ringer volume(on hook).</p>  |

## Phone Keypad Characters

The phone keypad allows you to enter letters, numbers, and special characters. You press the **Two (2)** to **Nine (9)** keys to get the letters and numbers. You use the **One (1)**, **Zero (0)**, **Asterisk (\*)**, and **Pound (#)** keys for special characters. The following table lists the special characters for each key for the English locale. Other locales will have their own characters.

**Table 4: Special Characters on the Keypad**

| Keypad Key          | Special Characters     |
|---------------------|------------------------|
| <b>One (1)</b>      | / . @ : ; = ? _ - & %  |
| <b>Zero (0)</b>     | (space) , ! ^ ' "      |
| <b>Asterisk (*)</b> | + * ~ ` < >            |
| <b>Pound (#)</b>    | # \$ £ □ \ ( ) { } [ ] |

## Navigation

Use the outer ring of the Navigation cluster to scroll through menus and between lines. Use the inner **Select** button of the Navigation cluster to select items.







If a menu item has an index number, you can enter the index number with the keypad to select the item.

## Softkey, Line, and Feature Buttons

You can interact with the features on your phone in several ways:

- Softkeys, located below the screen, give you access to the function displayed on the screen above the softkey. The softkeys change depending on what you are doing at the time. The **More ...** softkey shows you that more functions are available.
- Feature and line buttons, located on either side of the screen, give you access to phone features and phone lines.
  - Feature buttons—Used for features such as **Speed dial** or **Call pickup**, and to view your status on another line.
  - Line buttons—Used to initiate or answer a call or resume a held call. You can also use a line key to open and close the call session window, and to navigate through the call session window. Open the call session window to see the calls on the line.

Feature and line buttons illuminate to indicate status:


-  Green—Line is idle.
-  Red, steady—Line is active or in use.
-  Red, flashing—Line is on hold or there is an inbound call.
-  Amber, steady—Line is unregistered (cannot be used).

Some functions can be set up as softkeys or as feature buttons. You can also access some functions with softkeys or the associated hard button.

## Phone Screen Features

The phone screen shows information about your phone such as directory number, active call and line status, softkeys, speed dials, placed calls, and phone menu listings. The screen is made up of three sections: the header row, the middle section, and the footer row.

Figure 3: Cisco IP Phone 7800 Screen

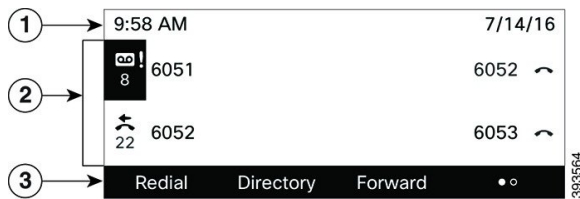

|   |   |
|---|---|
| 1 | At the top of the screen is the header row. The header row displays the phone number, current date and time, as well a number of icons. The icons display when features are active.   |
| 2 | The middle of the phone screen displays the information associated with the line and feature buttons on the phone.<br><br>When you select a line which has more than two registered lines, a black box highlight around the selected line is displayed. There will be no highlight for an active call.<br><br>Active and incoming call screen supports more than 21 characters. The Cisco IP Phone can display 15 digits on the phone screen when line is inactive. |
| 3 | The bottom row of the screen contains the softkey labels. Each label indicates the action for the softkey button below the screen.  |

## Clean your phone screen

### Procedure

If your phone screen gets dirty, wipe it with a soft, dry cloth.

**Caution** Don't use any liquids or powders on the phone because they can contaminate the phone components and cause failures.

## Differences Between Phone Calls and Lines

We use the terms *lines* and *calls* in very specific ways to explain how to use your phone.

- **Lines**—Each line corresponds to a directory number or intercom number that others can use to call you. You have as many lines as you have directory numbers and phone line icons.
- **Calls**—Each line can support multiple calls. By default, your phone supports two connected calls per line, but your administrator can adjust this number according to your needs.

Only one call can be active at any time; other calls are automatically placed on hold.

Here is an example: If you have two lines and each line supports four calls, then you could have up to eight connected calls at one time. Only one of those calls is active and the other seven are held calls.

## Power Requirements

The following Cisco-approved power adaptors must be used with the Cisco IP Phone 7800 Series:

- Phihong adapter (PSC18U-480); Rating: 48 VDC 0.38A
- Delta adapter (EADP-18VB B); Rating: 48 VDC 0.375A

## Energy Savings

Your administrator can reduce the amount of power that the phone screen uses when you're not using your phone. Level of energy-saving that your administrator can set up:

- Power Save—The backlight or screen turns off when the phone has been inactive for a period of time. You can manage the backlight.

### Related Topics

[Adjust the Phone Screen Backlight](#), on page 116

## Additional Help and Information

If you have questions about the functions available on your phone, contact your administrator.

The Cisco website (<https://www.cisco.com>) contains more information about the phones and call control systems.

- For quick start guides and end-user guides in English, follow this link:

<https://www.cisco.com/c/en/us/support/collaboration-endpoints/ip-phone-7800-series-multiplatform-firmware/products-user-guide-list.html>

- For guides in languages other than English, follow this link:

<https://www.cisco.com/c/en/us/support/collaboration-endpoints/ip-phone-7800-series-multiplatform-firmware/tsd-products-support-translated-end-user-guides-list.html>

- For licensing information, follow this link:

<https://www.cisco.com/c/en/us/support/collaboration-endpoints/ip-phone-7800-series-multiplatform-firmware/products-licensing-information-listing.html>

## Accessibility Features

Cisco IP Phones provide accessibility features for the vision impaired, the blind, and the hearing and mobility impaired.

For detailed information about the accessibility features on these phones, see <http://www.cisco.com/c/en/us/support/collaboration-endpoints/unified-ip-phone-7800-series/products-technical-reference-list.html>.

You can also find more information about accessibility at this Cisco website:

<http://www.cisco.com/web/about/responsibility/accessibility/index.html>

## Troubleshooting

You may experience issues related to the following scenarios:

- Your phone cannot communicate with the call control system.
- The call control system has communication or internal problems.
- Your phone has internal problems.

If you experience problems, your administrator can help troubleshoot the root cause of the problem.

## Find Information About Your Phone

Your administrator may ask for information about your phone. This information uniquely identifies the phone for troubleshooting purposes.

The phone contains all unique device identifier (UDI) information. The UDI is composed of three data elements associated with the phone. The data elements are:

- Product Identifier (PID)
- Version Identifier (VID)
- Serial Number (SN)

You can also find the information about your phone by going to **Info > Status > Product Information** on the phone web interface.

### Procedure

---

**Step 1** Press **Applications** .

**Step 2** Select **Status > Product Information**.

You can view the following information:

**Product name**— Name that represents the Cisco IP Phone.

**Serial number**— Serial number of the Cisco IP Phone.

**MAC address**—Hardware address of the Cisco IP Phone.

**Software version**—Version number of the Cisco IP Phone firmware.

**Configuration version**—Version number of the Cisco IP Phone configuration. This information shows when your administrator has enabled it.

**Hardware version**—Version number of the Cisco IP Phone hardware.

**VID**—Version ID of the Cisco IP Phone.

**Certificate**—Status of the client certificate, which authenticates the Cisco IP Phone for use in the ITSP network. This field indicates if the client certificate is properly installed in the phone.



**Customization**—For an RC unit, this field indicates whether the unit has been customized or not. Pending indicates a new RC unit that is ready for provisioning. If the unit has already retrieved its customized profile, this field displays the Customization state as Acquired.

**Step 3** Press **Back** to return to the Applications screen.

---

## View the Customization State on the Phone

After the RC download from the EDOS server completes, you can view the customization state of a phone on the screen.

Here are the descriptions of the remote customization states:

- **Open**—The phone has booted for the first time and is not configured.
- **Aborted**—Remote Customization is aborted due to other provisioning, for example, DHCP options.
- **Pending**—The phone can not download the profile from the EDOS server.
- **Custom-Pending**—The phone has downloaded a redirect URL from the EDOS server.
- **Acquired**—In the profile downloaded from the EDOS server, there is a redirect URL for provision configuration. If the redirect URL download from the provisioning server is successful, this state is displayed.
- **Unavailable**—Remote customization has stopped because the EDOS server responded with an empty provisioning file and the HTTP response was 200 OK.

### Procedure


---

- Step 1** Press **Applications** .
- Step 2** Select **Status > Product information > Customization**.
- Step 3** Press **Back**.
- 

## View the Network Status

### Procedure

---

- Step 1** Press **Applications** .
- Step 2** Select **Status > Network status**.

You can view the following information:

- **Network type**—Indicates the type of Local Area Network (LAN) connection that the phone uses.
- **Network status**—Indicates if the phone is connected to a network.
- **IPv4 status**—IP address of the phone. You can see information on IP address, Addressing type, IP status, Subnet mask, Default router, Domain Name Server (DNS) 1, DNS 2 of the phone.

- **IPv6 status**—IP address of the phone. You can see information on IP address, Addressing type, IP status, Subnet mask, Default router, Domain Name Server (DNS) 1, DNS 2 of the phone.
  - **VLAN ID**—VLAN ID of the phone.
  - **MAC address**—Unique Media Access Control (MAC) address of the phone.
  - **Host name**—Displays the current host name assigned to the phone.
  - **Domain**—Displays the network domain name of the phone. Default: cisco.com
  - **Switch port link**—Status of the switch port.
  - **Switch port config**—Indicates speed and duplex of the network port.
  - **PC port config**—Indicates speed and duplex of the PC port.
  - **PC port link**—Indicates speed and duplex of the PC port.
- 

## View the Phone Status

### Procedure

---

**Step 1** Press **Applications** .

**Step 2** Select **Status > Phone status > Phone status**.

You can view the following information:

- **Elapsed time**—Total time elapsed since the last reboot of the system
  - **Tx (Packets)**—Transmitted packets from the phone.
  - **Rx (Packets)**—Received packets from the phone.
- 

## View the Status Messages on the Phone

### Procedure

---

**Step 1** Press **Applications** .

**Step 2** Select **Status > Status messages**.

You can view a log of the various phone statuses since provisioning was last done.

**Note** Status messages reflect UTC time and are not affected by the timezone settings on the phone.


**Step 3** Press **Back**.

---

## View the Line Status

### Procedure

---

- Step 1** Press **Applications** .
- Step 2** Select **Status > Phone status > Line status**.
- You can view the status of each line on the phone.
- 

## View Call Records in Call Statistics

Each call record contains additional information that you might want to check, follow the procedure provided in this topic to view the detailed information of your recent call records.

### Before you begin

Sign in to the phone so you can access to access the **Call statistics** menu.

If a lock icon displays in the upper-right corner of the main screen, this means that you don't sign in to the phone yet.

### Procedure

---

- Step 1** Select **Status > Phone status > Call statistics**.
- Step 2** (Optional) If prompted, enter your password and press **Sign in**.  
If you cannot sign in to the phone, contact your administrator.
- Step 3** Highlight a call statistics entry from the list, and press **Select**.  
You can also press the **Select** button of the Navigation cluster to shows details of the highlighted entry.  
You can view the following information:
- **Call type**—An outbound or inbound call.
  - **Peer name**—The name of the person who made or answered the call.
  - **Peer phone**—The phone number of the person who made or answered the call.
  - **Encode codec**—The method used to compress the outgoing audio.
  - **Decode codec**—The method used to decompress the incoming audio.
  - **Call time**—The time a call was made or answered.
  - **Call ID**—An identifier of the caller.

The call statistics may contain additional information such as counter, statistics, and voice-quality metrics. Use this information for troubleshooting.

---

### Related Topics

[Sign into Your Extension from Another Phone \(Extension Mobility\)](#), on page 15

[Sign in to a Phone as a Guest](#), on page 15

[Sign In as a Call Center Agent](#), on page 60

[Set up the Profile Account](#), on page 118

[Set Password](#), on page 117

## View 802.1X Transaction Status

### Procedure

---

**Step 1** Press **Applications** .

**Step 2** Select **Network configuration > Ethernet configuration > 802.1X authentication > Transaction status**.

You can view the following information:

- **Transaction status**
  - **Protocol**
- 

## View the Reboot History

### Procedure

---

**Step 1** Press **Applications** .

**Step 2** Select **Status > Reboot history**.

You can view the details of the date and time whenever the phone has rebooted, no matter why the phone rebooted.

---

## Report all phone issues for your Cisco MPP device

You can use the Problem Reporting Tool (PRT) to collect and send phone logs, and to report problems to your administrator.

### Before you begin

Your administrator enables web server for the phone.

### Procedure

---

**Step 1** Press **Applications** .

- Step 2** Press **Settings**.
- Step 3** Select **Status > Report problem**.
- Step 4** Enter the date that you experienced the problem in the **Date of problem** field. The current date appears in this field by default.
- Step 5** Enter the time that you experienced the problem in the **Time of problem** field. The current time appears in this field by default.
- Step 6** Select **Problem description**.
- Step 7** Select a description from the displayed list.
- Step 8** Press **Submit**.

**Note** If your administrator disables web server for the phone, the phone fails to upload the problem report to the server. In addition, the phone screen shows `Error: 109` or `Report Problem` together with an unavailable download link. Contact your administrator to help you resolve the issue.

---

## Factory Reset the Phone from Phone Web Page

You can restore your phone to its original manufacturer settings from the phone web page. After you reset the phone, you can reconfigure it.

### Procedure

---

Enter the URL in a supported web browser and click **Confirm Factory Reset**

You can enter URL in the format:

```
http://<Phone IP>/admin/factory-reset
```

where:

Phone IP = actual IP address of your phone.

/admin = path to access admin page of your phone.

factory-reset = command that you need to enter in the phone web page to factory-reset your phone.

---

## Factory Reset from Server

You can restore your phone to its original manufacturer settings when your administrator factory reset it from the server. After you reset the phone, you can reconfigure it.

When your administrator factory reset your phone, you will observe the following notifications on the phone screen.

- If the phone is idle and has no active call or the phone is not upgrading, it shows a message, **Factory resetting as per request from administrator**, then the phone reboots to complete the factory reset.
- If the phone is busy with an active call or the phone is upgrading, it shows a message, **Phone will factory reset when idle as per request from administrator**. After the phone becomes idle, it shows **Factory resetting as per request from administrator**, then the phone reboots to complete the factory reset.

## Identify Phone Issues with a URL in the Phone Web Page

When the phone doesn't work or doesn't register, a network error or any misconfiguration might be the cause. To identify the cause, add a specific IP address or a domain name to the phone admin page. Then, try to access so that the phone can ping the destination and display the cause.

### Procedure

---

In a supported web browser, enter a URL that consists of your phone IP address and the destination IP that you want to ping. Enter the URL using the format:

```
http://<Phone IP>/admin/ping?<ping destination>, where:
```

<Phone IP> = actual IP address of your phone.

/admin = path to the access admin page of your phone.

<ping destination> = any IP address or domain name that you want to ping.

The ping destination allows only alphanumeric characters, '-', and "\_" (underscores). Otherwise the phone shows an error on the web page. If the <ping destination> includes spaces, the phone uses only the first part of the address as the pinging destination.

For example, to ping the 192.168.1.1 address:

```
http://<Phone IP>/admin/ping?192.168.1.1
```

---

## Lost Phone Connectivity

Sometimes your phone loses its connection to the phone network. When this connection is lost, your phone displays a message.

If you are on an active call when the connection is lost, the call continues. But, you don't have access to all normal phone features because some functions require information from the call control system. For example, your softkeys might not work as you expect.

When the phone reconnects to the call control system, you'll be able to use your phone normally again.

For more information on phone registration, please visit [Manual phone registration](#).

## Get More Information When Your Phone Displays a Provisioning Failure Message

If your phone displays the message *Verify your provisioning settings or contact your service provider.*, you have a configuration problem. This message will display only immediately after the phone boots up. You will not see this message after the phone is registered to a call server.

This message applies to all MPP Phones.

### Procedure

---

**Step 1** Press one of these options:

- **Details**—display a list of status messages.

- **Cancel**—return to the main phone screen.

**Note** If you cancel a provisioning alert, the phone doesn't show another provisioning alert until the phone has rebooted.

**Step 2** Highlight the relevant status message from the list, and press one of these options:

- **Details**—display the entire status message.
- **Clear**—delete the complete message list.

**Step 3** Contact your administrator to help you resolve the issue. If your administrator has given you access, you can also view the messages on the phone web page.

On the phone web page, go to **Info > Download Status > Provisioning Status**


---

## Find the Transition License Type

Your administrator may ask for information about the type of license used to migrate to multiplatform firmware.

### Procedure

---

- Step 1** Press **Applications** .
- Step 2** Select **Status > Product Information**.
- Step 3** In the **Transition Authorization Type** field, view the license type used.
- 

## Find Information about MIC Cert Refresh Status

You can view the renewal status and related information on the phone web page to check if the Manufacture Installed Certificate (MIC) renewal is completed. Your administrator might ask you about this information during the phone troubleshooting.

### Before you begin

- Your administrator has given you the access to the phone web page.
- Your administrator activates the Manufacture Installed Certificate (MIC) renewal on your phone.

### Procedure

---

- Step 1** On the phone web page, click **Info > Download Status**.
- Step 2** Find the information from the **MIC Cert Refresh Status** section.
- **MIC Cert Provisioning Status**: This field includes the date and time of the performed certificate renewal, the HTTP request URL, and result messages.

- **MIC Cert Info:** This field shows the overall status of the certificate renewal procedure. Typically, it shows whether the MIC certificate of your phone is renewed successfully.

For more information, contact your administrator.

---

## Cisco One-Year Limited Hardware Warranty Terms

Special terms apply to your hardware warranty and services that you can use during the warranty period.

Your formal Warranty Statement, including the warranties and license agreements applicable to Cisco software, is available at: [Product Warranties](#).





## CHAPTER 2

# Calls

---

- [Make calls, on page 37](#)
- [Answer Calls, on page 42](#)
- [Mute Your Call, on page 44](#)
- [Hold Calls, on page 45](#)
- [Forward Calls, on page 48](#)
- [Activate Call Forward All with Feature Activation Code Synchronization, on page 49](#)
- [Forward Calls with the Phone Web Page, on page 50](#)
- [Transfer Calls, on page 51](#)
- [Conference Calls and Meetings, on page 52](#)
- [Record a Call, on page 54](#)
- [Instant Message and Presence Contacts, on page 55](#)
- [Page a Group of Phones \(Multicast Paging\), on page 56](#)
- [XML Application and Multicast Paging, on page 57](#)
- [View XML Application Details, on page 57](#)
- [Multiple Lines, on page 57](#)
- [Call Center Features, on page 59](#)

## Make calls

Your phone works just like a regular phone. But we make it easier for you to make calls.

### Make a call

Use your phone just like any other phone to make a call.

#### Procedure

---

Enter a number and pick up the handset.


---

## Make a call with the speakerphone

Use your speakerphone for hands-free calling. Keep in mind that your coworkers might be able to hear your call too.

### Procedure

---


- Step 1** Enter a number using the keypad.
- Step 2** Press **Speakerphone** .
- 

## Make a call with a headset

Use your headset for hands-free calling that won't disturb your coworker and gives you some privacy.

### Procedure

---

- Step 1** Plug in a headset.
- Step 2** Enter a number using the keypad.
- Step 3** Press **Headset** .
- 

## Make an Emergency Call

Use your phone to make an emergency call, similar to any other call. When you dial the emergency number, your emergency services get your phone number and location so that they can assist you.



---

**Note** If your call disconnects, the emergency services can call you back.

---

### Before you begin

Your phone must be set up to obtain your physical location. Emergency services personnel need your location to find you when you make an emergency call.

### Procedure

---

Enter the emergency number and lift the handset.

---

## Redial a number

You can call the most recently dialed phone number.

### Procedure

---

**Step 1** (Optional) Select a line.

**Step 2** Press **Redial**.

**Note** For Webex Calling, workspaces support Redial when **Local Call** history is set to the workspace devices or by using FAC \*66.

**Step 3** Select the call record from the **Placed calls** list and press **Call**.

You can also access the **Placed calls** list from **Information and settings > Recents > Placed calls**.

---

## Speed Dial

Speed Dial allows you to press a button, enter a preset code, or select a phone screen item to place a call. You can configure the speed dial from the phone screen and also from the phone web page.

You can edit, delete, and validate a speed-dial code.

### Related Topics

[Phone Web Page](#), on page 21

[Speed dial numbers](#), on page 22

## Assign a speed-dial code from the phone screen

You can configure a speed-dial index from your phone screen. You can also assign a speed-dial code from the phone web page.

### Procedure

---

**Step 1** Press **Applications** .

**Step 2** Select **Speed dials**.

**Step 3** Scroll to an unassigned speed-dial index.

**Step 4** Press **Edit** and do one of the following:

- Enter the name and number.
- Select **Option > Select from contact** to select a contact from the address book.

**Step 5** Press **Save**.

---

## Make a call with a speed-dial code

### Before you begin

Set up speed-dial codes on the phone web page or from your phone screen.

### Procedure

---

Enter the speed-dial code and press **Call**.

---

## Configure a Speed Dial on a Line Key

You can configure a line key to dial a number when you press the key.

You can select any available line key to configure this feature. You can also select any line key that is functioning as a speed-dial key or as a Busy Lamp Field (BLF) key monitoring a line. See [Coworker Line Status, on page 16](#) for details about BLF. Your configuration will override any existing configuration for the key.

Your phone may be monitoring a BLF list. See [Activate or Deactivate Monitoring of the BLF List, on page 18](#) for details. You can select a BLF list key to configure this feature. However, remember that selecting a BLF list key changes the positions of BLF list keys. Because your configuration renders the key unavailable for the BLF list, the phone adjusts the positions of BLF list keys to the next available keys.

### Before you begin

- Your administrator allows configuring speed dial on line keys.
- The line key on which you want to configure this feature is not configured as an extension.

### Procedure

---

- Step 1** Press and hold down the line key for two seconds.
  - Step 2** On the **Select feature** screen, select **Speed dial**.
  - Step 3** In the **Label** field, enter the label to be displayed beside the key on the phone screen.
  - Step 4** In the **Number** field, enter the number or code to be dialed when you press the key.
  - Step 5** Press **Save**.
- 

## Remove a speed-dial from a line key

You can press a line key on your phone and delete speed dial assigned to it. The speed dial on the line key is removed. Check the phone web page to confirm that the speed dial is removed.

### Procedure

---

- Step 1** Press a line key that has a speed dial configured for at least two seconds.
  - Step 2** Press **Option** > **Delete** in the **Speed-Dial** window on the phone screen.
  - Step 3** Select **None** and confirm with **OK**
- 

## Use the Line in Focus for Speed-Dial Calls

You can configure a line key to perform a speed dial either with a Voice Profile ID (VID) or without a VID. When both are configured, VID has a higher priority. The call is routed to that line.

If a line key is configured without VID, you can configure a speed-dial key to use the line in focus.

### Procedure

---

- Step 1** Configure a speed-dial key without using VID.
- Step 2** Change the focus to the line that you prefer.
- Step 3** Press the speed-dial key to make a call.

The call is made with the line in focus.

If the existing number of calls on the line in focus is equal to the value set in the **Call Appearances Per Line** field in the phone web page, the speed-dial call is made from the next available line.

---

## Use the Line in Focus to Check Speed-Dial Calls

If a line key is configured without VID, you can perform a check to confirm whether the call is made with the line in focus.

### Procedure

---

- Step 1** Configure a speed-dial key without using VID.
- Step 2** Change the focus to the line that you prefer.
- Step 3** Press the speed-dial key to make a call.

The call is made with the line in focus.

---

## Dial an international number

You can dial international calls when you prefix the phone number with a plus (+) sign.

### Procedure

---

- Step 1** Press and hold **star** (\*) for at least 1 second.  
The plus (+) sign is displayed as the first digit in the phone number.
- Step 2** Enter the phone number.
- Step 3** Press **Call** or wait 10 seconds after the last key press to automatically place the call.
- 

## Secure calls

Your phone encrypts all calls to protect the calls. The lock icon displays on the phone screen for all secure calls.

You can also set a password on your phone to restrict unauthorized access.

## Answer Calls

Your Cisco IP Phone works just like a regular phone. But we make it easier for you to answer calls.

### Answer a Call

#### Procedure

---

Press the flashing red line button.

---

### Answer Call Waiting

When you're on an active call, you know that a call is waiting when you hear a single beep and the line button flashes red.

#### Procedure

---

- Step 1** (Optional) If you have more than one call waiting, select an incoming call.
- Step 2** Press the line button.
- 

### Decline a Call

You can send an active or ringing call to your voicemail system or to a preset phone number.

### Procedure

---

Decline a call by performing one of the following actions:

- Press **Decline**.
  - If you have multiple incoming calls, highlight the incoming call and press **Decline**.
- 

## Silence an Incoming Call

You can silence an incoming call when you are busy and don't want to be disturbed. The phone stops ringing, but you get a visual alert, and, can answer the phone call.

### Before you begin

Your administrator configures the **Ignore** softkey on your phone.


### Procedure

---

Silence the incoming call by any of the methods:

- Press the **Ignore** softkey. When you press this softkey, the softkey disappears from the phone screen, and is restored again during the next incoming call.



- Press the Volume  button down. If you press this button again, the ringer volume decreases.

The ringer volume is restored during the next incoming call.

---


## Turn On Do Not Disturb

Use Do Not Disturb (DND) to silence your phone and ignore incoming call notifications when you need to avoid distractions. However, you will always receive paging and emergency calls, even when DND is turned on.

When you enable DND, your incoming calls forward to another number, such as your voicemail, if it is set up.

When DND is turned on, **Do not disturb** is displayed in the top bar of the phone screen.

When you enable DND, by default, it affects all lines on your phone. You can also enable DND on a specific line from the **Preferences** menu.

When a line key has both feature key sync and DND enabled, the DND icon  is displayed next to the line key label.

### Procedure

---

- Step 1** Press **DND** to turn on DND.  
If the **DND** softkey is grayed on the phone screen, contact your administrator.
- Step 2** Press **Clr DND** to turn off DND.
- 

### Related Topics

[Phone Web Page](#), on page 21

[Turn on Do Not Disturb for a Specific Line](#), on page 103

## Turn On or Turn Off DND Using a Star Code

You can turn on or turn off the do not disturb feature by dialing the respective star codes that are configured for your phone. The administrator enters the star codes in the **DND Act Code** and **DND Deact Code** fields respectively on the phone web page.

### Procedure

---

- Step 1** To turn on DND, dial the star code provided by your administrator.
- Step 2** To turn off DND, dial the star code provided by your administrator.
- 

## Answer a Coworker's Phone (Call Pickup)

If you share call handling tasks with your coworkers, you can answer a call that is ringing on a coworker's phone. First, your administrator has to assign you to at least one call pickup group.

## Answer a Call Within Your Group (Pickup)

You can answer a call that rings on another phone within your call pickup group. If multiple calls are available for pickup, you'll answer the call that has been ringing for the longest time.

### Procedure

---

- Step 1** (Optional) Press the line button.
- Step 2** Press **PickUp** to transfer an incoming call within your pickup group to your phone.
- 

## Mute Your Call

While you are on a call, you can mute the audio so that you can hear the other person, but they cannot hear you.



### Procedure

---

- Step 1** Press **Mute** .
- Step 2** Press **Mute** again to turn mute off.
- 



## Hold Calls

### Put a Call on Hold

You can put an active call on hold and then resume the call when you're ready.

#### Procedure

---

- Step 1** Press **Hold**  or **Hold**.
- Step 2** To resume a call from hold, press **Hold**  or **Resume**.
- 

### Answer a Call Left on Hold for Too Long

Your phone is configured to provide cues that let you know when you have left a call on hold for too long:

- Flashing red line button
- Flashing message indicator on the handset
- Visual notification on the phone screen
- Ringing notification on the phone if a hold reminder is configured with phone web page

#### Procedure

---

Press **Hold**  or **Resume** to resume the held call.

---

### Swap between active and held calls

You can easily switch between active and held calls.

### Procedure

---

Press the line button for the held call, then press **Resume** to resume that call and place the other call on hold automatically.

---

## Call park

You can use your phone to park a call. You can then retrieve the call either from your phone or another phone, such as a phone at a coworker's desk or in a conference room.

A parked call is monitored by your network so you won't forget about it. If the call remains parked for too long, you hear an alert. You can then answer, decline to answer, or ignore the call on your original phone. You can also continue retrieving it from another phone.

If you don't answer the call within a certain length of time, it's routed to voicemail or another destination, as set by your administrator.

## Place a call on hold with call park

You can park an active call that you answered on your phone and then use another phone in the call control system to retrieve the call.

You can also park a call on your own phone. If so, then you may not hear a recording.

You can park only one call at the call park number.

### Before you begin

Your call must be active.

### Procedure

---

- Step 1** Press **Park**.  
Your phone plays a recorded message that asks for the number of the parked call.
  - Step 2** (Optional) If you have call park configured on a key expansion module, press the call park line key.
  - Step 3** Enter the number and press **Pound (#)**.
  - Step 4** (Optional) Communicate the parked number to the person retrieving the call.
- 

## Retrieve a call on hold with call park

You can pick up a parked call from anywhere in your network.

### Before you begin

You need the number that was used to park the call.

### Procedure

---

- Step 1** Press **Unpark**.
- Step 2** (Optional) Press the line key that has busy lamp field with call pickup configured to retrieve a call on hold.
- Step 3** Enter the number where the call is parked followed by **Pound (#)**.  
You can also enter **Pound (#)** to retrieve the parked call. If you retrieve a call parked on your own phone, you may not need to enter a number.
- 

## Park and Unpark a Call with One Line Key

If your administrator has configured a Busy Lamp Field (line status) list with the **prk** function for you, you can park and unpark active calls. See [Coworker Line Status, on page 16](#) for the `idle` and `Parked call` icons.

This feature doesn't apply to phone Cisco IP Phone 7811.

### Before you begin

[Activate or Deactivate Monitoring of the BLF List, on page 18](#)


### Procedure

---

- Step 1** Press the line key that monitors the user to park an active call.
- Step 2** To unpark a call, do one of three things:
- Press the monitored user that displays the parked call.
  - Press the extension line key, then press the monitored user that displays the parked call.
  - Use the navigation button to focus on the extension line key, then press the monitored user that displays the parked call.
- 

## Call Park Extension and Status

Your administrator can configure call park to support parking calls against dedicated call park extensions. These extensions are used only for call park and are not used for call routing.

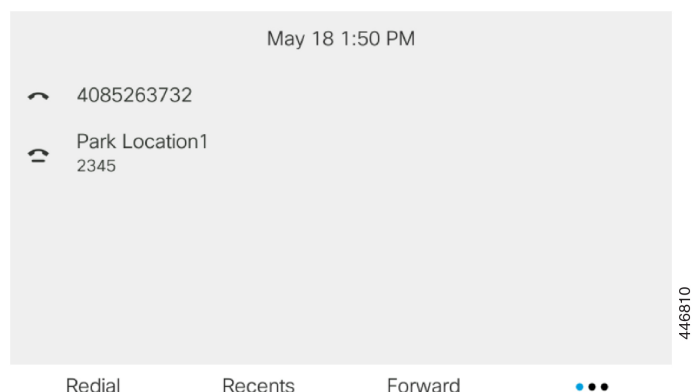**Figure 4: Call Park in Call Park Extensions**

In the above example, the phone is monitoring Park Location1. Your administrator has configured a call park extension, Park Location1. If call park extensions are subscribed successfully, line keys will be assigned for call park function and get the monitored extension status.

The following table shows the call park status and the relevant icon displayed next to the call park extension:

**Table 5: Call Park Status and Icons**

| Status | Icon |
|--------|------|
| Idle   |      |
| Parked |      |

## Forward Calls

You can forward calls from any line on your phone to another number. Call forward is phone-line specific. If a call reaches you on a line where call forward is not enabled, the call rings as usual.

If a line is enabled with feature key sync and call forward on it, the call forward icon is displayed next to the line key label.


There are three Call Forward services:

- Call Forward All—Forward all incoming calls to a target phone number.
- Call Forward Busy—Forward an incoming call to a target phone number when the line is busy.
- Call Forward No Answer—Forward an incoming call to a target phone number when the call isn't answered.

You can set up the call forward service or services by a specific softkey.

## Procedure

---

- Step 1** Press **Forward** or **Forward all**.
- If **Forward all** displays, you can only set up the Call Forward All service (not including Call Forward Busy and Call Forward No Answer services). After you press the softkey, the menu for only setting up the Call Forward All service displays, skip to the [Step 3](#).
- If you want to set up the Call Forward Busy and Call Forward No Answer services, see [Forward Calls from Your Phone, on page 101](#) or [Forward Calls with the Phone Web Page, on page 50](#).
- When your administrator enables the synchronization for call forward, the **Call forward all** screen displays instead of the **Call forward settings** screen. In this scenario, see [Activate Call Forward All with Feature Activation Code Synchronization, on page 49](#).
- Step 2** Select one of the following call forward services:
- **Forward all**
  - **Forward busy**
  - **Forward no answer**
- Step 3** Do any of the following:
- Enter the target number, to which you want to forward incoming calls from this phone line.
  - Press the **Contacts** softkey and select a contact from your contact directories.
- Step 4** Press **Set** to apply the settings.
- Step 5** Verify that your calls are forwarded by looking for the call forward  icon next to the line or at the top of the phone screen.
- 

## Related Topics

- [Phone Web Page, on page 21](#)
- [Forward Calls from Your Phone, on page 101](#)

# Activate Call Forward All with Feature Activation Code Synchronization

When you press the **Forward** or **Forward all** softkey, the **Call forward all** screen displays and it allows you to set up your phone to forward all calls.

## Before you begin


Your administrator enables a feature activation code that synchronizes the phone with a server to forward all calls.



**Note** The Feature Activation Code Synchronization feature only supports the Call Forward All service. The Call Forward Busy and the Call Forward No Answer services are not supported.

When your administrator enables the feature activation code for the synchronization, the screen **Call forward settings** is ready-only.

### Procedure

- 
- Step 1** Press **Forward** or **Forward all**
- Step 2** Do any of the following:
- Enter the target number, to which you want to forward incoming calls from this phone line.
  - Press **Contacts** and select a contact from your contact directories.
  - Press **Redial** and select an entry from the **Placed calls** list.
- Step 3** Press **Call** to forward all calls to the specified number.
- You can clear the call forward settings by pressing **Clr fwd** or **Clf fwd all**.
- Step 4** Verify that your calls are forwarded by looking for the call forward  icon next to the line or at the top of the phone screen.
- 

## Forward Calls with the Phone Web Page

Use the phone web page to set up your phone to forward calls.

You can also set up call forward on your phone screen. For more information, see [Forward Calls, on page 48](#) or [Forward Calls from Your Phone, on page 101](#).

### Before you begin

Your administrator must enable the call forward services. Otherwise, the configuration on the phone web page doesn't take effect.

### Procedure

- 
- Step 1** On the phone web page, click **User Login > Voice > User**.
- Step 2** In the **Call Forward** section, set the **Cfwd All**, **Cfwd Busy**, **Cfwd No Answer**, or combination of them to **Yes**, and enter a phone number for each of the call forward services that you want to enable:
- **Cfwd All/Cfwd All Dest**—Forwards all calls.
  - **Cfwd Busy/Cfwd Busy Dest**—Forwards calls only if the line is busy.
  - **Cfwd No Answer/Cfwd No Ans Dest**—Forwards calls only if the line is not answered.

- **Cfwd No Answer/Cfwd No Ans Delay**—Assigns a response delay time in seconds.

If your administrator disables the feature key synchronization (FKS) and XSI sync for call forward on your phone, you can enter the value as number of seconds after which a call is forwarded.

If your administrator enables feature key synchronization (FKS) or XSI sync for call forward on your phone, you can enter the value as number of rings after which a call is forwarded.

The call forward settings on the phone web page take effect only when FKS and XSI are disabled. For more information, consult your administrator.

**Step 3** Click **Submit All Changes**.

---

#### Related Topics

[Settings](#), on page 99

## Transfer Calls

You can transfer an active call to another person.

When your administrator configures support for only one call per line appearance, you will not see the option to transfer the active call.


## Transfer a Call to Another Person

When you transfer a call, you can stay on the original call until the other person answers. This gives you an opportunity to talk privately with the other person before you remove yourself from the call. If you don't want to talk, transfer the call before the other person answers.

You can also swap between both callers to consult with them individually before you remove yourself from the call.

#### Procedure

---

- Step 1** From a call that is not on hold, press **Transfer** .
- Step 2** Enter the other person's phone number and press **Call**.
- Step 3** (Optional) Wait until you hear the line ring or until the other person answers the call.
- Step 4** (Optional) Press the line key to return to the held call.
- 

## Consult Before You Complete a Transfer

Before you transfer a call, you can talk to the person that you're transferring the call to.

If your administrator configures to support only one call per line appearance and only one extension is configured, then you cannot:

- place a new call if there is an active call.



- transfer if there is an active call.
- conference an active call.

### Before you begin

You have an active call that needs to be transferred.

### Procedure

---

- Step 1** From a call that is not on hold, press **Transfer** .
- Step 2** When the other person answers, you can talk to them.
- Step 3** (Optional) Press the line key to return to the held call.
- Step 4** (Optional) Press the line key to return to the transfer target phone number.
- Step 5** Press **Transfer**  or **Transfer** again.
- 


## Conference Calls and Meetings

You can talk with several people in a single call. You can dial another person and add them to the call. If you have multiple phone lines, you can join two calls across two lines. The conference ends when all participants hang up.


### Add Another Person to a Call

#### Procedure

---

- Step 1** From an active call, press **Conference** .
- Step 2** Enter the phone number for the party you want to add and press **Call**.
- Step 3** Press **Conference** again.
- 

### Conference with a Star Code

Press the **Conference**  button only once to combine many active calls into a conference and talk to several people in a single call.


#### Before you begin

Your administrator has added a star code to the **Conference**  button from the phone web page.



### Procedure

---

- Step 1** Make a call from a line and wait for an answer.
- Step 2** Use the same line to call another number and wait for an answer. You can use the same line to call other numbers.
- Step 3** Press **Conference**  only once.
- All numbers are added to the conference call and you see the star code that represents the conference bridge URL with one of the active calls.
- 

## View the Participants List as a Host in Ad Hoc Conference

You can show the list of participants when you are hosting an Ad Hoc conference.

### Before you begin

**Participants** softkey is available.

### Procedure

---

- Step 1** Make a call (for example, user A) from a line and wait for an answer.
- Step 2** Press **Conference** to invite another person (for example, user B) into the meeting.
- Step 3** When user B answers the call, press **Conference** again to merge user B into the meeting.
- You can add more participants into the meeting in the same way.
- Step 4** Press **Participants** softkey. Name of all the participants who has joined the meeting will show up in the **Participants** screen.
- Step 5** (Optional) Press **Exit** to exit from the **Participants** screen.
- 

## View the Participants List as a Participant

You can show list of participants of an Ad Hoc conference.

### Before you begin

**Participants** softkey is available.

### Procedure

---

- Step 1** Answer the call from a host.
- Participants** softkey displays after your host merge you into the meeting.

**Step 2** Press **Participants** softkey to display the list of participants.

**Step 3** (Optional) Press **Exit** to exit from the **Participants** screen.

## Remove a Participant as a Host in Ad Hoc Conference

As a host, you can remove a participant from the participant list. However, host and participants can invite multiple participants to join the conference, but any of the participants can only be removed by the person from whom the invite has come. For example, user A is the host of the Ad Hoc conference and calls user B and conferences user C and user D. In such situation, user A will be able to remove user B, user C, and user D. Now, if user C invites user E into the conference call, user C can remove user E but user A cannot remove user E.

### Before you begin

You are host of an Ad Hoc conference.

### Procedure

**Step 1** When in an Ad Hoc conference, press **Participants** to display the participants name.

**Step 2** Select any of the participants who you have invited to the conference call and press **Remove**.



**Step 3** Confirm the removal message on the phone.

## Record a Call

When you're on an active call, you can record it. You might hear a notification tone as you record the call.

During a recording, you see different icons in different recording state. You see the icons on the Calls screen and also on the line key on which you are recording a call.

**Table 6: Recording Icons**

| Icon  | Meaning               |
|---|-----------------------|
|  | Recording in progress |
|  | Recording paused      |

### Before you begin

Your administrator enables your phone with call recording.

### Procedure

**Step 1** Press **Record** while on an active call.

- Step 2** (Optional) While recording is in progress, you can press **PauseRec** to pause the recording.
- Step 3** (Optional) Press **ResumeRec** to resume the recording.
- Step 4** (Optional) Press **StopRec** to stop the recording.
- Step 5** Press **End Call** to end the call.
- 

## Instant Message and Presence Contacts

Instant message and presence (IM&P) contacts display their presence information. You can see if the person is available, busy, or unavailable, or if the person does not want to be disturbed.

You use the UC-One Communicator to manage your lists of contacts. Your phone gets your lists of contacts from the UC-One Communicator server.

When you use the phone, the phone sends status information to the UC-One Communicator.

### Presence

Your company may use the “UC-One Communicator” service and integrate it with the phone. You can use this service to display the status of your contacts.

On the phone, your status is displayed on the status line of the phone. You see one of the following:

- Available
- Away
- Do Not Disturb
- Offline

For more information on the “UC-One Communicator” service, see the Broadsoft documentation.

## Make a Call to an IM and Presence Contact


When you call someone on your IM&P contacts, their presence state is displayed in your call history.

### Before you begin

Your administrator enables the IM&P directory in the phone.

### Procedure

---

- Step 1** Press **Contacts** .
- Step 2** Press **Category**, if it displays on the phone. Otherwise, skip the step.
- Step 3** Select **IM&P contacts**.
- Step 4** Select a directory.
- Step 5** Select an entry.

The entry shows the status of your contact.

**Step 6** (Optional) Press **Detail** to view the contact details and press **Back** to return to the contacts list.

**Step 7** Press **Call**.

---

## Change Your Presence State


Because the phone is always available, you need to set your presence manually on the phone.

### Before you begin

Your administrator enables the IM&P directory in the phone.

### Procedure

---

**Step 1** Press **Contacts** .

**Step 2** Press **Category**, if it displays on the phone. Otherwise, skip the step.

**Step 3** Select **IM&P contacts**.

**Step 4** Highlight a directory. For example, **Favorite**, **Non-Group**, **All contacts**, and so on.

**Step 5** Press **Presence**.

**Step 6** Select your presence from the list.

- Available—You can take a call.
  - Away—You have stepped away from the phone for a short time.
  - Do not disturb—You don't want to take a call.
  - Offline—You are not available to take calls. Typically, you use this presence when you leave the phone for long periods of time.
- 

## Page a Group of Phones (Multicast Paging)

Your administrator can configure your phone as a part of a paging group. In a paging group, your phone can automatically answer pages from other Multiplatform phones in the phone system. Each paging group has a unique number associated with it. Your administrator gives you the configured paging group numbers. When your phone is paged, you hear three short beeps. The phone establishes one-way audio between you and the phone that called you. You do not have to accept the page.

### Procedure

---

Dial the number of the paging group.

---

## XML Application and Multicast Paging

If your phone is part of a paging group XML application enabled, your phone displays images or messages when you receive multicast pages from server. During a unicast and multicast paging or broadcast, phones in the paging group shows the following behavior:

- Phone (sender) that initiates the page, does not display any XML application message.
- Phones (receiver) that receive page displays a XML application message (incoming page) on their screen when the paging starts if your administrator configures the service.
- If the XML application closes due to timeout (sets by your administrator) or by administrator, the receiver shows the incoming page. However, if there is no timeout configured, XML application closes when paging call ends.

Your administrator can invoke XML service from multicast paging.


## View XML Application Details

You can view list of Cisco XML objects that your phone supports.

### Before you begin

- Your administrator has configured XML applications.

### Procedure

- 
- Step 1** Press **Applications** .
- Step 2** Press **Settings**.
- Step 3** In **Information and settings** screen, select **XML applications**.  
The list of supported Cisco XML objects is displayed, such as **CiscoIPPhoneMenu**, **CiscoIPPhoneDirectory**.
- Note** **XML applications** menu is not available on your phone when your administrator disables it.
- 

## Multiple Lines

If you share phone numbers with other people, you could have multiple lines on your phone. When you have multiple lines, you have more calling features available to you.

## View All Calls on Your Primary Line

You can have a list of current and missed calls display on your primary line.

Use this feature if you have multiple lines and want to see all your calls—on all lines—displayed on a single screen. You can still filter for a specific line.

Your administrator sets up this feature.

## Answer the Oldest Call First

You can answer the oldest call available on all your phone lines, including Hold Reversion and Park Reversion calls that are in an alerting state. Incoming calls always have priority over Held or Park Reversion calls.

When working with multiple lines, you typically press the line button for the incoming call you want to answer. If you just want to answer the oldest call regardless of line, press **Answer**.

## View All Calls on Your Phone

You can view a list of all your active calls—from all your phone lines—sorted in chronological order, oldest to newest.


The list of all calls is useful if you have multiple lines or if you share lines with other users. The list displays all your calls together.

## Shared lines on your multiplatform desk phone

When you share a phone number, you can use that phone line just like you would any other line, but you should be aware of these special characteristics about shared lines:

- The shared phone number can be configured to appear on a maximum of 35 devices.
- The shared phone number appears on all phones that share the number.
- If your coworker answers the call, the shared line button and the session button are solid red on your phone.
- If you put a call on hold, your line button is solid red and the session button pulses red. Your coworker's line button is also solid red and the session button pulses red.
- Once the shared line is configured, the call bridge can be invoked by using either
  - [FAC Code](#)
  - Soft keys

Here is an example of customize PSK settings to add new soft key for Call Bridge as shown below:

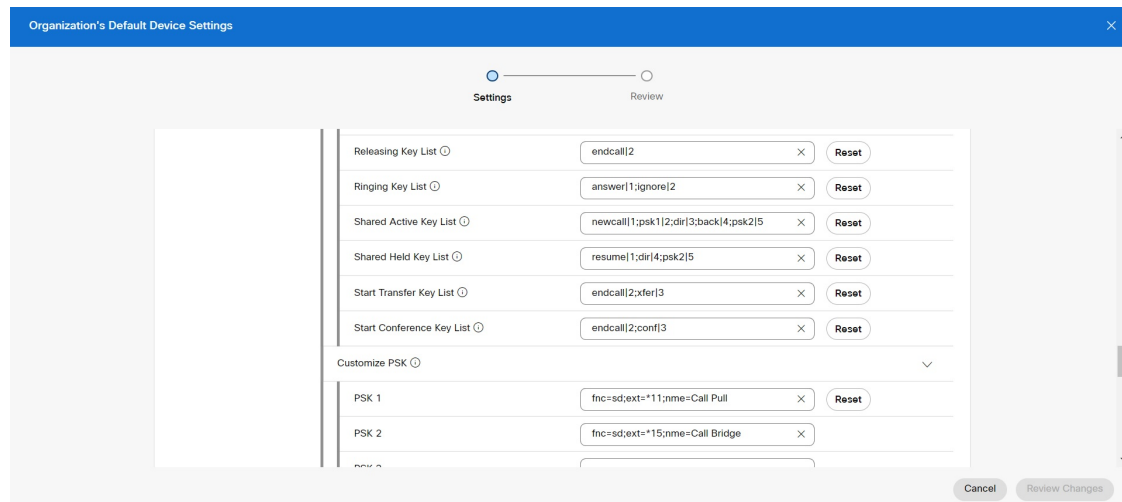

Soft keys can be configured at three levels. See [Configure and modify device settings in Webex Calling](#) to configure soft keys at organization, location and device level.

## Add yourself to a call on a shared line

You or your coworker can join a call on the shared line. Your administrator needs to enable the feature on your phone.

If a user with whom you share a line has privacy turned on, you can't see their line settings and you can't add yourself to their call.

### Procedure

- 
- Step 1** Press the line button for the shared line.
- Step 2** Enter \*33 on your phone.
- Note** If set up this way, you hear a tone to let you know that the system recognizes the access code.
- Step 3** Enter the phone number of the person whose call you want to barge in to.
- Note** When connected, you're a part of the current call.
- 

## Call Center Features

Your administrator configures your phone as a call center phone.

Your administrator can enable your phone with Automatic Call Distribution (ACD) features. This phone acts as a call center agent's phone and can be used to trace a customer call, to escalate any customer call to a supervisor in emergency, to categorize contact numbers using disposition codes, and to view customer call details.

Your phone can have ACD status as:

- Sign in
- Sign out
- Available
- Unavailable
- Wrap-up

The initial ACD status is controlled by your administrator in two ways:

- The last local status can be restored as the ACD initial status when the phone boots up, status is changed to "Registered" from "Unregistered" or "Registration failed", or registration destination ip address is changed due to failover, fallback or DNS response is changed.
- The ACD initial status can be obtained from the server.

## Sign In as a Call Center Agent

When you're ready to start your work as a call center agent, you sign into the phone and set your status.


Your administrator can set up your phone so that when you sign into the phone, your status is set to Available automatically. In this case, you don't need to manually set the status.

### Procedure

---

**Step 1** Press **AgtSgnIn**.

**Step 2** Check your status as a call center agent.

If the status is Available, the icon  displays beside your phone number. Otherwise, proceed with the next steps to manually set the status.

**Step 3** Press **Agt status**.

**Step 4** Highlight the **Available** status.

**Step 5** Press **Select**.

---

## Sign Out as a Call Center Agent

When you're ready to end your work as a call center agent, change your status and sign out of the phone. After you sign out, you won't receive more call center calls.

If you're on a call and know that you will sign off as soon as the call completes, change your status to **Wrap-up**.



### Procedure

---

Press **AgtSgnOut**.

---

## Change Your Status as a Call Center Agent

From time to time, you may need to take a brief break. To do that, change your status so that calls will not ring on your phone.

### Procedure

---

**Step 1** Press **Agt status**.

**Step 2** Highlight the **Unavailable** status.

The **Unavailable** menu text box allows you to add the reason of your unavailability.

If you need, your administrator can hide the text box on the phone from the phone web interface.

**Step 3** Press **Select**.

**Step 4** Press **Agt status**.

**Step 5** Highlight the **Available** status.

**Step 6** Press **Select**.

**Step 7** Highlight the **Wrap-up** status.

**Step 8** Press **Select**.

---

## Accept a Call Center Call

When you sign into the phone as a call center agent and your phone status is set to available, your phone are ready to accept call center calls. Before you answer a call, you see information about the call.

### Procedure

---

**Step 1** When you receive a call, you will see the call information page, press **Back** to exit and then press **Answer** to accept it.

**Step 2** Press **Call Info** to see the call details.

**Step 3** At the end of the call, press **End call**.

---

## Hold an Agent Call

When you are on a call center call, you can put the caller on hold and return to the call. While the call is held for a long time, you will hear a reminder tone and a ring splash on the phone screen.

### Procedure

---

- Step 1** Press **Hold**.
- Step 2** When you are ready to return, select the held call and press **Resume**.
- 

## Set a Disposition Code While on a Call Center Call

You can assign a disposition code to an active customer call or after you set your status to Wrap-up after a call. Disposition codes are quick labels that you apply to call records to describe a call. It is an easy way to label calls and keep track of customer contact history so that no details about the call are missed.

### Before you begin

Your administrator enables your phone to add a disposition code.

### Procedure

---

- Step 1** Press **Disp code**.
- Step 2** Press **Ok**.
- 

## Trace a Call

You can trace an active call and the last incoming call in any agent status.

### Before you begin

Your administrator enables your phone to trace a call.

### Procedure

---

From an active call or after a call, press **Trace**.

---

## Escalate a Call to a Supervisor

When you need to escalate a call, you can add your supervisor to a conference call with you and your caller.

### Before you begin

Your administrator enables emergency escalation on your phone.

## Procedure

---

**Step 1** From an active call, press **Emergency**.

**Step 2** In the **Emergency Escalation** window, click **OK**.

You can enter preferred emergency escalation number, or you can leave it empty if you do not have any supervisor preference. You will not see any emergency escalation number.

---





## CHAPTER 3

# Contacts

---

- [Personal Address Book, on page 65](#)
- [Search for a Contact in the All Directories Screen, on page 68](#)
- [Corporate Directory, on page 70](#)
- [Reverse Name Lookup for Incoming and Outgoing Calls, on page 84](#)

## Personal Address Book

### Add a New Contact to Your Personal Address Book


#### Before you begin

Your administrator must enable the personal address book on the phone. Otherwise, the menu item **Personal address book** doesn't display.

Your administrator has set the personal address book as the target directory that stores the new contacts.

#### Procedure

---

- Step 1** Press **Contacts** .
- Step 2** Press **Category**, if it displays on the phone. Otherwise, skip the step.
- Step 3** To add a contact in your personal address book.
- Select **Personal address book**.
  - Press **Add**.
  - Enter a name and at least one phone number.
  - (Optional) Select a custom ringtone for the contact.
  - Press **Save** to add the contact.
- Step 4** To add a contact from other directories to your personal address book.
- Select the All directories, the BroadSoft directory, or the LDAP directory.
  - Search for a contact that you want to add.
  - Highlight the contact.
  - Press **Option**, and then select **Add contact**.

- e) Enter a name and at least one phone number.
- f) (Optional) Select a custom ringtone for the contact.
- g) Press **Save** to add the contact.

---

**Related Topics**

[Search for a Contact in the All Directories Screen](#), on page 68

[Search for a Contact in Your BroadSoft Directory](#), on page 73

[Search for a Contact in Your LDAP Directory](#), on page 80

## Add a New Contact to Your Personal Address Book with Phone Web Page

**Before you begin**

Your administrator must enable the personal address book on the phone. Otherwise, the **Personal address book** menu doesn't display.

**Procedure**

---

- Step 1** On the phone web page, select **User Login > Personal Directory**.
  - Step 2** Click **Add to Personal Directory**.
  - Step 3** Add name and related number or numbers. The number contains work number, mobile number, and home number.
  - Step 4** Click **Submit All Changes**.
- 


## Search for a Contact in Your Personal Address Book

**Before you begin**

Your administrator must enable the personal directory feature on the phone. Otherwise, the **Personal address book** menu doesn't display.

**Procedure**

---

- Step 1** Press **Contacts** .
  - Step 2** Press **Category**, if it displays. Otherwise, skip the step.
  - Step 3** Select **Personal address book**.
  - Step 4** Select **Option > Search**.
  - Step 5** Enter the address entry to search for. The matched contacts will display on the phone.  
You can only search by name (case insensitive). Search by number is not supported.
-


## Call a Contact in Your Personal Address Book

### Before you begin

Your administrator must enable the personal directory feature on the phone. Otherwise, the **Personal address book** menu doesn't display.

### Procedure

---

- Step 1** Press **Contacts** .
  - Step 2** Press **Category**, if it displays. Otherwise, skip the step.
  - Step 3** Select **Personal address book** and search for an entry.
  - Step 4** Highlight the personal address book entry that you want to dial.
  - Step 5** Press **Call**.
- 

### Related Topics

[Search for a Contact in Your Personal Address Book](#), on page 66


## Edit a Contact in Your Personal Address Book

### Before you begin

Your administrator must enable the personal directory feature on the phone. Otherwise, the **Personal address book** menu doesn't display.

### Procedure

---

- Step 1** Press **Contacts** .
  - Step 2** Press **Category**, if it displays on the phone. Otherwise, skip the step.
  - Step 3** Select **Personal address book** and search for an entry.
  - Step 4** Highlight the entry you want to change.
  - Step 5** Press **Option**, and then select **Edit**.
  - Step 6** Modify the entry information.
  - Step 7** Press **Save**.
- 

### Related Topics

[Search for a Contact in Your Personal Address Book](#), on page 66


## Remove a Contact from Your Personal Address Book

### Before you begin

Your administrator must enable the personal directory feature on the phone. Otherwise, the **Personal address book** menu doesn't display.

### Procedure

---

- Step 1** Press **Contacts** .
- Step 2** Press **Category**, if it displays. Otherwise, skip the step.
- Step 3** Select **Personal address book**.
- Step 4** Search for the contact that you want to remove.
- Step 5** Highlight the address entry of the contact and press **Option** > **Delete** to delete the entry.
- 

### Related Topics

[Search for a Contact in Your Personal Address Book](#), on page 66

## Search for a Contact in the All Directories Screen

The **All directories** is the landing page of your contacts. Typically, it automatically retrieves the contacts from your personal address book and Bluetooth-paired phone.

If your target contact is not in the displayed directories, you can perform a manual search in the screen. The search scope covers the following directories (if enabled):

- Personal address book
- BroadSoft directory, including the following subdirectories:
  - Enterprise
  - Group
  - Personal
  - Enterprise Common
  - Group Common
- LDAP directory

The manual search operation tries to retrieve the contacts from the directories in the following order:

- Personal address book
- BroadSoft directory
- LDAP directory






**Note** Your administrator controls the directories that you can access. If the contact is in a disabled directory, the entry doesn't display in the search results.

From the search results, you can view the contact details, call the contact, or edit the number before making the call. If your administrator enables the personal directory on the phone, you can also add the contact to your personal directory.

### Before you begin

Your administrator must enable the all directory search. Otherwise, the **All directories** screen doesn't display.

### Procedure

- 
- Step 1** Press **Contacts** .
- Step 2** Select the contact already displayed in the screen by using the Navigation cluster.  
If you can't find the contact in the screen, proceed with the next step.
- Step 3** Enter the name of the contact that you want to find.  
The phone searches for first or last names that include your search string anywhere in the name.  
If you search contacts without any keywords, the phone retrieves all contacts.
- Step 4** Press **Search**.  
The search results show both full and partial name matches.  
By default, up to 50 records of the contacts display in the phone. Your administrator can set up the maximum number of the contacts.
- Step 5** (Optional) To view a contact's details, highlight the contact in the search results, and press **Details**.
- Step 6** (Optional) To add a contact to the target directory on the phone, follow these steps:
- While viewing the contact details, press **Option**.
  - Select **Add contact**.  
The menu label shows the target directory to which you want to add the contact:
    - If the menu **Add personal address entry** displays, you add the contact to the local personal address book.
    - If the menu **Add BroadSoft personal contact** displays, you add the contact to the BroadSoft Personal directory.
- Your administrator can change the target directory.  
If you don't see the **Add contact** option, contact your administrator.
- Enter the contact details and press **Save**.
- Step 7** To call a contact, follow these steps:
- Highlight a contact in the search results.

- b) Press **Details**.
- c) Highlight the work number that you want to dial.
- d) Press **Call**.

**Step 8** (Optional) To change the number to be dialed and then make a call to a contact, follow these steps:

- a) Highlight a contact in the search results.
- b) Press **Details**.
- c) Highlight the work number that you want to change.
- d) Press **Edit call**.
- e) Edit the number as necessary.
- f) Press **Call**.

---

### Related Topics

[Search for a Contact in Your Personal Address Book](#), on page 66

[Search for a Contact in Your BroadSoft Directory](#), on page 73

[Search for a Contact in Your LDAP Directory](#), on page 80

## Corporate Directory

You can look up a coworker's number from your phone, which makes it easier to give them a call. Your administrator sets up and maintains the directory.

Your phone supports three types of corporate directories—Lightweight Directory Access Protocol (LDAP) Directory, Broadsoft Directory, and a Cisco XML Directory.

## Webex Directory

Webex directory helps you to look up for Webex contacts. Your administrator configures the Webex directory on your phone. You can search and view the Webex contacts, which makes it easier to give them a call. You can edit the display name of the Webex contact. When your administrator configures Webex contacts on a line key or as a programmable softkey, you see the directory name on the line key or as softkey on phone home screen, which makes it easier to access the directory search screen directly.

### Edit the Webex Directory Name

You can modify the display name of the Webex directory.

#### Before you begin

Your administrator configures support for Webex contacts.

#### Procedure

---

- Step 1** Highlight the **Webex directory**.
- Step 2** Click **Option**.
- Step 3** Select **Edit settings**.

- Step 4** In the **Webex directory settings** screen, edit the name in the **Directory name** box. The name you enter displays as the Webex directory name under **Directory** list.
- Step 5** Click **Save**.

---

## Search for a Contact in Your Webex Directory

You can search contacts in the Webex directory by email or name.

### Before you begin

Your administrator enables the Webex directory.

### Procedure

---

- Step 1** In the **Directory** screen, select the Webex directory.  
By default, the directory name is **Webex directory**.
- Step 2** In the **Search Webex directory** screen, enter the search criteria which is either a name or an email.
- Step 3** Click **Search**.
- Note** You can also search a Webex contact from the **All directory** search screen by entering name or email. For more information, see [Search for a Webex Contact in All Directory, on page 72](#).
- The search operation sometime retrieves contacts with same name, work phone number, and mobile number. In such cases, Webex directory displays only one contact and considers the remaining contacts as duplicate.  
For example:
    - If a search retrieves A (Name: "abc", Work phone: "123456") and B (Name: "abc", Work phone is "123456"): Directory displays A only.
    - If a search retrieves A (Name: "abc", Work phone: "123456", and Mobile phone: "8888"), B (Name: "abc", Work phone: "123456", and Mobile phone: "8888"): Directory displays A only.
  - If the search retrieves A (Name: "abc", Work phone: "123456", and Mobile phone: "8888"), B (Name: "abc", Work phone: "123456", and Mobile phone: "2222"): Directory display both A and B.
- Step 4** (Optional) Select a contact from the searched list and press **Details**. You see the details, such as name, work phone number, mobile phone number, email, and department.
- Step 5** (Optional) Select a contact and make a call.
- If a contact has both work phone number and mobile phone number, the directory displays the work phone number as the call number. Work phone number has higher priority than the mobile phone number. From the details screen, if you select the name or the work phone number and make a call, the phone dials the work phone number. But, if you select the mobile number and make a call, the phone dials the mobile phone number.
  - If a contact has only mobile number, the directory displays the mobile phone number as the call number.

- If a contact has no work phone number and mobile phone number, the directory displays only the name without a call number. You can't make a call from this contact.

**Step 6** (Optional) Select a contact and press **Edit call** to access the **New call** screen. In this screen, you can modify the contact number to either work phone number or to mobile phone number, and then make a new call. If contact doesn't have a call number, **Edit call** doesn't work.



**Note** While the phone searches for the contact, you can press **Cancel** and cancel the search operation before the phone fetches final result.

Webex directory search has the following conditions and error scenarios:

- You must enter minimum three characters in the **Name/Email** box. When you enter fewer than three characters, you see a message `Invalid input. Enter at least 3 characters`
- When you enter correct search criteria but the phone returns no value, you see a message: `No match found`
- If your administrator configures max display value more than 100, the query result displays only hundred contacts for a search in Webex directory. or All directory. When search result has count more than the allowed display record value, you see a message: `Too many matches found. Refine your search`
- During the search, if there's network issue or Domain Name Server (DNS) response failed and you see a message: `Directory access failed`. Check the configuration and network settings, you must contact your administrator.

## Search for a Webex Contact in All Directory

You can search Webex contacts from the **All directory** screen.



**Note** Even if your administrator configures max display value more than 100, the query result displays only hundred contacts for a search in All directory. When search result has count more than the allowed display record value, you see a message: `Too many matches found. Refine your search`

### Before you begin

- Your administrator enables the Webex directory.
- Your administrator enables All directory search.

### Procedure

**Step 1** In the **Directory** screen, select **All directories**.

**Step 2** In the **Search all directories** screen, enter the search criteria for Webex contact. You can enter a name or an email address.

All directory search supports one character as the search input and you can enter only name of the contact. But to search Webex contacts, you must enter minimum three characters and you can search by entering name or an email. Hence, when you enter fewer than three characters in this search, phone doesn't retrieve Webex contacts.

**Step 3** Click **Search**.

The search operation sometime retrieves contacts with same name and work phone number. In such cases, **All directory** list shows only one contact with the highest priority and ignores the remaining contacts as duplicate. Search operation tries to retrieve the contacts from the directories in the following order and Personal address book has the highest priority.

- Personal address book (PAB)
- Webex directory
- BroadSoft directory
- LDAP directory

**Step 4** (Optional) Select a contact from the searched list and press **Details**. You see the details, such as name, work phone number, mobile phone number, email, and department in the **Search result details** screen.

In the **Search result details** screen, you can add the Webex contact to the Personal address book. To add, select the name and select **Option > Add contact > Select** and save the details in the **Add Personal address entry** screen. You can access the **Personal address book** screen and search for the added Webex contact, the result shows that the contact is added to PAB. If you search the added contact in the BroadSoft directory, the search retrieves the added Webex contact.

We recommend to choose either **Webex** or **XSI Server** to search contacts, as you can't search Webex contacts and XSI server contacts at the same time.

---

## Broadsoft Directory

You can search and view your personal, group, and enterprise contacts in your Broadsoft Directory, which makes it easier to give them a call. Your administrator configures the Broadsoft Directory in your phone. This application feature uses BroadSoft's Extended Services Interface (XSI).

### Search for a Contact in Your BroadSoft Directory


#### Before you begin

- Your administrator enables the BroadSoft XSI services.
- Your administrator enables the BroadSoft directories and sets up the directories properly.
- Your administrator enables the Browse Mode for the directories.

When this mode is enabled, a preload operation will start automatically to retrieve all the contacts from the directory.

### Procedure

---

- Step 1** Press **Contacts** .
- Step 2** Press **Category**, if it displays on the phone. Otherwise, skip the step.
- Step 3** Select a BroadSoft directory. The default names are:
- Enterprise
  - Group
  - Personal
  - Enterprise Common
  - Group Common

**Note** When your administrator disables the directory individual mode, the phone only displays **BroadSoft directory**.

After you enter the directory, wait until the preload operation is complete. You can press **Cancel** to stop the preload operation.

- Step 4** Press **Option**, then select **Search**.
- If your administrator disables the directory browse mode, you can find the **Search** softkey displayed on the phone instead.
- Step 5** Select a search criteria.
- In BroadSoft Enterprise or Group directory, search a contact by Last Name, First Name, User ID, Number, Extension, Mobile phone, Department, or Email address.
  - In BroadSoft Enterprise Common, Group Common, or Personal directory, search a contact by Name or Number.
- Step 6** Enter your search criteria, and press **Search**.
- 


## Edit Your Contact Type in Your BroadSoft Directory

### Before you begin

Your administrator disables the directory individual mode for the BroadSoft XSI service.

### Procedure

---

- Step 1** Press **Contacts** .
- Step 2** Press **Category**, if it displays on the phone. Otherwise, skip the step.
- Step 3** Highlight the **BroadSoft directory**.
- Step 4** Press **Option**.

- Step 5** Select **Edit settings**.
- Step 6** Select the **Type** field.  
You can select Enterprise, Group, Personal, Enterprise Common, or Group Common as your BroadSoft Directory contact type.
- Step 7** Press **Save** to apply the change.
- 

## Manage Your Contacts in the BroadSoft Personal Directory

You can add, edit, or delete contacts in the BroadSoft Personal directory.


### Before you begin

- Your phone connects to the BroadSoft XSI service.
- Your administrator enables the BroadSoft Personal directory.
- Your administrator sets the BroadSoft Personal directory as the target directory to store new contacts.
- Your administrator enables the directory browse mode.

When this mode is enabled, a preload operation will start automatically to retrieve all the contacts from the directory.

### Procedure

---

- Step 1** Press **Contacts** .
- Step 2** Press **Category**, if it displays on the phone. Otherwise, skip the step.
- Step 3** To add a contact in the BroadSoft Personal directory, do the following:
- a) Select the BroadSoft Personal directory. The default name is **Personal**.  
**Note** If your administrator disables the directory individual mode, the phone displays the menu item **BroadSoft directory** instead, select it.
  - b) Wait for the preload operation to be completed or press **Cancel** to stop the preload operation.  
If your administrator disables the directory browse mode, the menu **Search personal directory** displays instead. Enter your search criteria, and press **Search**.
  - c) Press **Option**, and then select **Add**.
  - d) Enter details of the contact.
  - e) Press **Save**.
- Step 4** To add a contact from other directories (if enabled) to the BroadSoft Personal directory:
- a) Select the All directories, the BroadSoft directory, the LDAP directory, or the personal address book.
  - b) Search for a contact that you want to add.
  - c) Highlight the contact.
  - d) Press **Option**, and then select **Add contact**.
  - e) Enter details of the contact.
  - f) Press **Save**.

**Step 5**

To edit a contact in the BroadSoft Personal directory, do the following:

- a) Select the BroadSoft Personal directory. The default name is **Personal**.

**Note** If your administrator disables the directory individual mode, the phone displays the menu item **BroadSoft directory** instead, select it.

- b) Wait for the preload operation to be completed or press **Cancel** to stop the preload operation.

If your administrator disables the directory browse mode, the menu **Search personal directory** displays instead. Enter your search criteria, and press **Search**.

- c) Highlight the contact that you want to edit.

- d) Press **Option**, and then select **Edit**.

You can also press the **Select** button of the Navigation cluster to edit the contact.

- e) Edit details of the contact.

- f) Press **Save**.

**Step 6**

To delete a contact from the BroadSoft Personal directory, do the following:

- a) Select the BroadSoft Personal directory. The default name is **Personal**.

**Note** If your administrator disables the directory individual mode, the phone displays the menu item **BroadSoft directory** instead, select it.

- b) Wait for the preload operation to be completed or press **Cancel** to stop the preload operation.

If your administrator disables the directory browse mode, the menu **Search personal directory** displays instead. Enter your search criteria, and press **Search**.

- c) Highlight the contact that you want to delete.

- d) Press **Option**, and then select **Delete**.

---

## Edit Your BroadSoft Directory Name

When your administrator disables the directory individual mode, the phone only displays **BroadSoft directory**.

When your administrator enables the directory individual mode, the phone displays all enabled directories with default or customized names. The default names are:

- Enterprise
- Group
- Personal
- Enterprise Common
- Group Common




---


**Note** Only the directory that is enabled by your administrator can display in the **Directories** screen.

---



### Procedure

---

- Step 1** Press **Contacts** .
- Step 2** Press **Category**, if it displays on the phone. Otherwise, skip the step.
- Step 3** Do one of the following actions:
- Highlight the **BroadSoft directory**.
  - Highlight one of the configured directories.
- Step 4** Press **Option**.
- Step 5** Select **Edit Settings**.
- Step 6** Edit the **Directory Name** field.
- Step 7** Press **Save** to apply the change.
- 

## Edit the Server Name of Your BroadSoft Directory

When your administrator disables the directory individual mode, the phone only displays **BroadSoft directory**.

When your administrator enables the directory individual mode, the phone displays all enabled directories with default or customized names. The default names are:

- Enterprise
- Group
- Personal
- Enterprise Common
- Group Common




---

**Note** Only the directory that is enabled by your administrator can display in the **Directories** screen.

---

### Procedure

---

- Step 1** Press **Contacts** .
- Step 2** Press **Category**, if it displays on the phone. Otherwise, skip the step.
- Step 3** Do one of the following actions:
- Highlight the **BroadSoft directory**.
  - Highlight one of the configured directories.
- Step 4** Press **Option**.
- Step 5** Select **Edit Settings**.

- Step 6** Edit the **Host Server** field.
- Step 7** Press **Save** to apply the change.
- 

## Edit Credentials of Your BroadSoft Directory

When your administrator disables the directory individual mode, the phone only displays **BroadSoft directory**.

When your administrator enables the directory individual mode, the phone displays all enabled directories with default or customized names. The default names are:

- Enterprise
- Group
- Personal
- Enterprise Common
- Group Common




---

**Note** Only the directory that is enabled by your administrator can display in the **Directories** screen.

---

### Procedure

---

- Step 1** Press **Contacts** .
- Step 2** Press **Category**, if it displays on the phone. Otherwise, skip the step.
- Step 3** Do one of the following actions:
- Highlight the **BroadSoft directory**.
  - Highlight one of the configured directories.
- Step 4** Press **Option**.
- Step 5** Select **Edit Settings**.
- Step 6** (Optional) Set the **Authentication type** to **Login credentials** or **SIP credentials**.
- Step 7** Enter the user credentials based on the authentication type.
- Login credentials: edit the **User ID** and **Password** fields.
  - SIP credentials: edit the **SIP auth ID** and **SIP password** fields.
- Step 8** Press **Save** to apply the change.
-

## LDAP Directory

The Cisco IP Phone supports Lightweight Directory Access Protocol (LDAP) v3. You can search for a specified LDAP directory for a name, phone number, or both. LDAP-based directories, such as Microsoft Active Directory 2003 and OpenLDAP-based databases, are supported.

To access the LDAP directory on the phone, enter your user credentials at least once. Your administrator can set up your user credentials on the phone administration web page. Once you successfully access the LDAP directory, the phone saves the user credentials. Next time, you can skip the user login procedure. The phone can save the user credentials for the host users or guest users. These users normally sign in to the phone through the Flexible Seating or the Extension Mobility feature.

### Edit Credentials of Your LDAP Directory

When you access the LDAP directory on the phone, you might be prompted to enter your user credentials. You can edit the credentials in advance to bypass the sign-in procedure. You can also change the LDAP account by editing the user credentials.


The phone saves the credentials for different types of users. For example, the users who sign into the phone with the Flexible Seating or Extension Mobility feature. After you switch a user on the phone, the phone retains the user's credentials. Therefore, you can still access the LDAP directory without the need to sign in.

#### Before you begin

Your administrator enables the LDAP directory.

#### Procedure

---

**Step 1** Press **Contacts** .

**Step 2** (Optional) Press **Category**.

If your administrator disables the directory browse mode, the softkey doesn't display on the phone.

**Step 3** Highlight the LDAP directory.

By default, the directory name is “Corporate directory (LDAP)”.

**Step 4** Press **Option**, then select **Edit settings**.

**Step 5** Enter the user credentials.

The displayed fields are different according to the authentication method selected by your administrator:

- If the authentication method is “Simple”, the phone prompts the **Client DN** and **Password** credentials.
- If the authentication method is “DIGEST-MD5”, the phone prompts **Username** and **Password** credentials.

**Step 6** Press **Save** to save the credentials.

---


## Search for a Contact in Your LDAP Directory

### Before you begin

Your administrator enables the LDAP directory.

### Procedure

---

**Step 1** Press **Contacts** .

**Step 2** Press **Category**, if it displays on the phone. Otherwise, skip the step.

**Step 3** Select the LDAP directory.

By default, the directory name is “Corporate directory (LDAP)”.

**Step 4** (Optional) If prompted, sign in with your user credentials.

The phone prompts one of the following credentials to access the LDAP directory:

- **Client DN and Password**
- **Username and Password**

For more information, contact your administrator.

If the local cache on the phone contains the user credentials, you skip the user sign-in procedure automatically.

When you enter the directory, the phone might start to retrieve all the contacts from the directory.

**Step 5** (Optional) Press **Cancel** to stop the auto loading.

**Step 6** Press **Option**, and then select one of the following methods:

- **Simple search:** You can search by last name and first name of a contact.
- **Advanced search:** You can search by last name, first name, and telephone number of a contact.

**Step 7** Enter your search criteria, and then press **Search**.

### Related Topics

---

[Call a Contact in Your LDAP Directory](#), on page 80

[Edit a Contact Number in Your LDAP Directory](#), on page 81

## Call a Contact in Your LDAP Directory

### Before you begin

Your administrator enables the LDAP directory.

### Procedure

---

**Step 1** Search for a contact in the LDAP directory, see [Search for a Contact in Your LDAP Directory](#), on page 80.

After the search is completed, the matched contacts display in the form of entries in the search result list.

**Step 2** In the **Company directory (LDAP) result list** screen, use the outer ring of the navigation cluster to highlight an entry.

Typically, the phone displays an entry together with a contact number. However, if an entry doesn't have any contact number, the contact number field is empty.

**Step 3** Press **Call**.

**Note** Your phone selects the first available contact number of the entry to dial out. If an entry contains multiple contact numbers and you want to call the other contact numbers, proceed with the next steps. Otherwise, skip the remaining steps.

**Step 4** Press **Details** to view more information of the highlighted entry.

**Step 5** In the **Company directory (LDAP) address entry** screen, use the outer ring of the navigation cluster to scroll through the details.

You can find that certain attributes display multiple times in the entry details, and each attribute contains a contact number.

**Step 6** Highlight a contact number that is available to dial out, and press **Call**.

The **Call** softkey displays only for the contact numbers that are available to dial out.

---

## Edit a Contact Number in Your LDAP Directory

Before you make a call, you can edit the contact number based on an existing number that you select.

### Before you begin

Your administrator enables the LDAP directory.

### Procedure

---

**Step 1** Search for a contact in the LDAP directory, see [Search for a Contact in Your LDAP Directory, on page 80](#).

After the search is completed, the matched contacts display in the form of entries in the search result list.

**Step 2** In the **Company directory (LDAP) result list** screen, use the outer ring of the navigation cluster to highlight an entry.

Typically, the phone displays an entry together with a contact number. However, if an entry doesn't have any contact number, the contact number field is empty. In this scenario, you can't edit the contact number of the entry.

**Step 3** Press **Edit call**.

**Note** If an entry contains multiple contact numbers (separated by comma) and you want to edit one of the contact numbers, perform [Step 4](#) to [Step 6](#). Otherwise, skip the steps.

**Step 4** Press **Details** to view more information of the highlighted entry.

- Step 5** In the **Company directory (LDAP) address entry** screen, use the outer ring of the navigation cluster to scroll through the details.
- You can find that certain attributes display multiple times in the entry details, and each attribute contains a contact number.
- Step 6** Highlight a contact number, and press **Edit call**.
- The **Edit call** softkey displays only for the contact numbers that are available to edit.
- Step 7** Edit the number as necessary.
- Step 8** Press **Call**.
- 

## XML Directory

Your phone can retrieve the contacts from the XML directory service or application after your administrator configures the XML directory in your phone. In this way, you can view and call the contacts in your XML directory. Typically, your phone can display up to 200 contacts (or entries) in your XML directory.


### Call a Contact in Your XML Directory

#### Before you begin

Your administrator has configured the XML directory.

#### Procedure

---

- Step 1** Press **Contacts** .
- Step 2** Press **Category**, if it displays on the phone. Otherwise, skip the step.
- Step 3** Select the XML directory.
- By default, the directory name is “Corporate directory (XML)”.
- Step 4** In the **Directories** screen, use the outer ring of the navigation cluster to highlight an entry.
- The phone displays an entry together with one or more contact numbers.
- Step 5** Press **Call**.
- Note** For the entry that contains multiple contact numbers, your phone always selects the first contact number to dial out. If you want to call the other contact numbers of the entry, proceed with the next steps. Otherwise, skip the remaining steps.
- Step 6** Press the **Select** button of the Navigation Cluster to view details of the highlighted entry.
- Step 7** In the **Corporate directory (XML) address entry** screen, use the outer ring of the navigation cluster to scroll through the details.
- An entry can contain up to 5 contact numbers.

- Step 8** Highlight a contact number, and press **Call**.
- 

## Edit a Contact Number in Your XML Directory


Before you make a call, you can edit the contact number based on an existing number that you select.

### Before you begin

Your administrator has configured the XML directory.

### Procedure

---

- Step 1** Press **Contacts** .
- Step 2** Press **Category**, if it displays on the phone. Otherwise, skip the step.
- Step 3** Select the XML directory.
- By default, the directory name is “Corporate directory (XML)”.
- Step 4** In the **Directories** screen, use the outer ring of the navigation cluster to highlight an entry. The phone displays an entry together with one or more contact numbers.
- Step 5** Do one of the following actions:
- If the entry contains only one contact number:
    - a. Press **Edit call**.
    - b. Edit the number as necessary.
    - c. Press **Call**.
  - If the entry contains multiple contact numbers (separated by comma) and you want to edit one of the contact numbers:
    - a. Press the **Select** button of the Navigation Cluster to view details of the highlighted entry.
    - b. In the **Corporate directory (XML) address entry** screen, use the outer ring of the navigation cluster to highlight a contact number.

An entry can contain up to 5 contact numbers.
    - c. Press **Edit call**.
    - d. Edit the number as necessary.
    - e. Press **Call**.
-

# Reverse Name Lookup for Incoming and Outgoing Calls

Reverse name lookup searches for the name of a number in an incoming, outgoing, conference, or transferred call. The reverse name lookup acts when the phone cannot find a name using the service provider directory, Call History, or your contacts. Reverse name lookup needs a valid LDAP Directory or XML Directory configuration.

The reverse name lookup searches the phone's external directories. When a search succeeds, the name is placed in the call session and in the call history. For simultaneous, multiple phone calls, reverse name lookup searches for a name to match the first call number. When the second call connects or is placed on hold, reverse name lookup searches for a name to match the second call.

Reverse name lookup is enabled by default.

Reverse name lookup searches the directories in the following order:

1. Phone contacts
2. Call History
3. LDAP Directory
4. XML Directory





## CHAPTER 4

# Recent Calls

---

- [Recent calls list, on page 85](#)
- [View your Recent Calls, on page 85](#)
- [View Webex Call Logs Duration, on page 87](#)
- [Spam Indication for Webex Calls, on page 88](#)
- [View Calls Logs from Server , on page 88](#)
- [Return a recent call, on page 89](#)
- [Clear the recent calls list, on page 89](#)
- [Create a Contact from a Recents Record, on page 90](#)
- [Delete a call record, on page 90](#)
- [Delete All Call Records, on page 91](#)

## Recent calls list

Use the Recents list to see the 180 most recent individual calls and call groups.

If your Recents list reaches the maximum size, the next new entry overwrites the oldest entry in the list.

When STIR/SHAKEN support is implemented on the server, the phone displays an extra icon next to the caller ID based on the caller's STIR/SHAKEN verification result. Based on the verification result, the phone displays three types of icons. For more information on the icons, see [View your Recent Calls, on page 85](#).

## View your Recent Calls

Check to see who's called you recently.



---

**Note** Each line has missed call badging. You can view the number of missed calls per line on the phone screen. The maximum missed call badge is 99. When you view either the All calls or Missed calls list on the phone screen for a particular line, the missed call badge for the selected line gets cleared.

The missed call badge and the actual number of missed calls may be different due to a display limit of 180 calls for the Recents list. This limit consists of outgoing calls, missed calls, and incoming calls. Also, there can be some old missed calls that get added to the count for the missed call badge. This can get overwritten in the Recents list.


---

## Procedure

---

**Step 1** Press **Applications** .

**Step 2** Do one of these actions:

- Desk phones: Select a line to view and press **Applications** .
- Conference phones: Press **Settings**.

**Step 3** Select **Recents** to access the **Recents** screen.

You can also press **Recents** softkey on the phone home screen. You only see this softkey when your administrator configures it on the phone web interface.

When you press the **Recents** softkey, it directly goes to the **All calls** screen automatically.

**Step 4** In the **Recents** screen, choose to view all recent calls, or to view a certain kind of recent calls from the following calls list.

- All calls
- Missed calls
- Received calls
- Placed calls
- Display recents from

To know more on how to view call logs using the **Display recents from** option, see [View Calls Logs from Server](#) , on page 88.

Your administrator configures the **Option**, **Call**, **Edit call**, **Filter**, and **Back** softkeys in this screen for All, Placed, Received, and Missed calls list. When configured, you can see those softkeys when you access any of the menus in the above calls list. The softkeys can also appear as one of the **Option** menus of calls list based on the configuration.




Your administrator enables support to log Webex calls. In the **All calls** screen, if the call is represented by a phone number, you can see **Call** and **Edit call** softkeys. If the call is not represented by a phone number, the phone doesn't show both the softkeys.

Each menu in the above calls list contains **Option** softkey with the following menus.

- Filter - Allows to access **Recents** screen, when pressed.  
Availability of this menu depends on your administrator's softkey configuration on the phone web interface.
- Edit call - Enables to edit any call entry details, when pressed.  
Availability of this menu depends on your administrator's softkey configuration on the phone web interface.
- Delete entry - Deletes any selected entry, when pressed.
- Delete list - Deletes all the entries in the selected menu, when pressed.
- Sort by name - Sort according to caller names when selected.
- Add contact - Adds a new contact to the directory.

When your administrator enables support to log Webex calls, and in the **All calls** screen, if the call is represented by a phone number, you can see **Add contact** option. If the call is not represented by a phone number, the option menu doesn't contain the **Add contact** option.

**Note**

- An extra icon  next to the caller id is displayed on the phone indicating a validated call.  
When you go to the call details of any call, you can view if the call is a missed call or an answered call.
- An extra icon  next to the caller id is displayed on the phone indicating an illegitimate caller.
- An extra icon  next to the caller id is displayed on the phone indicating an unverified call.

## View Webex Call Logs Duration

You can view duration of a received and placed Webex call.

**Before you begin**

- The phone is onboarded to the Webex cloud server.
- Your administrator adds the **Display recents from** menu on your phone.
- When your administrator enables support to show logs from Webex calls, the **Webex** option is available in the Display recents from menu.

**Procedure**

**Step 1** Select **Recents** to access the **Recents** screen.

You can also press **Recents** softkey on the phone home screen. You only see this softkey when your administrator configures it on the phone web interface.




When you press the **Recents** softkey, it directly goes to the **All calls** screen automatically.

**Step 2** In the **All calls** screen, select a call log.

When you select a placed call or a received call, you can see the call duration in the **Duration** field. For a missed call, the call duration information is not available.

## Spam Indication for Webex Calls

If your phone is registered to Webex server, the phone displays the following icons as verification in call sessions, local call logs, and Webex call logs.

- An extra icon  next to the caller id is displayed on the phone indicating a validated call.  
When you go to the call details of any call, you can view if the call is a missed call or an answered call.
- An extra icon  next to the caller id is displayed on the phone indicating an illegitimate caller.
- An extra icon  next to the caller id is displayed on the phone indicating an unverified call.

## View Calls Logs from Server

You can view a separate list for the BroadWorks XSI server call logs, for the local call logs, and for the logs from Webex cloud server depending on your selection.


The phone does a reverse name lookup against local personal directory when the user navigates the BroadWorks call log on the phone.

### Before you begin

Your administrator adds the **Display recents from** menu on your phone.

When your administrator enables support to show logs from Webex calls, the **Webex** option is available in the **Display recents from** menu.


### Procedure

- 
- Step 1** Select a line to view.
  - Step 2** Press **Applications** .
  - Step 3** Select **Recents**.
  - Step 4** Select **Display recents from** and choose one of the options.
    - **XSI Server**: Displays call logs stored on and transferred from the server.
    - **Phone**: Displays call logs stored on the phone.
    - **Webex**: Displays call logs stored in the Webex cloud server.
  - Step 5** Click **Set**.
- You can view all calls, missed calls, received calls, and placed calls list.
-

## Return a recent call

### Procedure



---

- Step 1** Do one of the following actions:
- Desk phones—Press **Applications** .
  - Conference phones—Press **Settings**.
- Step 2** Press **Recents**.
- If your administrator configured the **Missed** softkey, and there is a missed call on the line, you can use the **Missed** softkey on the phone's home screen to access the **Missed calls** list.
- Step 3** Select the call record that you want to dial.
- Step 4** (Optional) Press **Edit call** to edit the call record.
- Step 5** Press the required line button or press **Call** to place the call.
- 

## Clear the recent calls list

### Procedure

---

- Step 1** Select a line to view.
- Step 2** Press **Applications** .
- Step 3** Do one of the following actions:
- Desk phones—Press **Applications** .
  - Conference phones—Press **Settings**.
- Step 4** Select **Recents**.
- Step 5** Select a list that you want to delete.
- All Calls
  - Missed Calls
  - Received Calls
  - Placed Calls
  - Display recents from
- Step 6** Press **Option** and select **Delete all**.
- Step 7** Press **OK**.
-

# Create a Contact from a Recents Record

## Procedure

---

**Step 1** Select a line to view.

**Step 2** Press **Applications** .

**Step 3** Select **Recents**.

**Step 4** Select a list item.

- All Calls
- Missed Calls
- Received Calls
- Placed Calls
- Display recents from

To view calls in the **Display recents from** option, see [View Calls Logs from Server](#), on page 88.

**Step 5** Highlight the individual record that you want to add.

**Step 6** Press **Option**.

**Step 7** Press **Add contact**.

The menu label shows the target directory to which you want to add the contact:

- If the menu **Add personal address entry** displays, you add the contact to the local personal address book.
- If the menu **Add BroadSoft personal contact** displays, you add the contact to the BroadSoft Personal directory.

Your administrator can change the target directory.

**Step 8** Press **Save** to add the contact.

In the **Add BroadSoft personal contact** screen, when contact details fields are empty or you enter invalid values to the fields, you don't see the **Save** softkey.

---

# Delete a call record

## Procedure

---

**Step 1** Press **Applications** .

**Step 2** Do one of the following actions:

- Desk phones—Press **Applications** .
- Conference phones—Press **Settings**.

**Step 3** Select **Recents**.

**Step 4** Choose to view all recent calls, or to view a certain kind of recent call.

- All Calls
- Missed Calls
- Received Calls
- Placed Calls
- Display recents from

**Step 5** Highlight the individual record or call group that you want to delete.

**Step 6** Press **Option**.

**Step 7** Select **Delete entry**.

**Step 8** Press **OK**.

**Note** For more information, refer to [6800](#), [7800](#), [8800](#), [7832](#), and [8832](#) Multiplatform Phones User Guides.

---

## Delete All Call Records

You can delete all call history records on your phone.

### Procedure

---

**Step 1** Press **Applications** .

**Step 2** Select **Recents**.

**Step 3** Select **All calls**.

**Step 4** Press **Option** and select **Delete all**.

**Step 5** Press **OK**.

---







## CHAPTER 5


# Voicemail

---

- [Your Personal Voicemail Account](#), on page 93
- [Find out if you have new voicemail messages Your Personal](#) , on page 94
- [Access Your Personal your voicemail](#), on page 94
- [Access Your Personal Audio Voicemail](#), on page 94
- [Phone Behavior with Voicemail Setting](#), on page 95
- [Phone Behavior with Voicemail and Missed Call Configuration Setting](#), on page 95
- [Voice Messages States of Monitored Voicemail Accounts](#), on page 96

## Your Personal Voicemail Account

You can access your personal voice messages directly from your phone. But your administrator must set up your voicemail account, and may also set up your phone to access the voicemail system.

The **Messages**  button on your phone acts as a speed dial into the voicemail system.

When you aren't at your desk, you can call your voicemail system to access your voicemail. Your administrator can give you the voicemail system phone number.


Because each voicemail system is different, we can't tell you how to use your voicemail system. For information about your voicemail commands, see the voicemail system user documentation or contact your administrator.

## Set up Voicemail on Your Phone

If your administrator has not set up your personal voicemail phone number on your phone, you can set it up yourself.

### Procedure

---

- Step 1** Press **Applications** .
  - Step 2** Select **User preferences > Call preferences**.
  - Step 3** Enter your personal voicemail phone number in **Voice mail**.
  - Step 4** Press **Set**.
-

## Find out if you have new voicemail messages Your Personal

To find out if you have new voicemail messages, look for one of these signs:

- The light strip on your handset is solid red.
- The number of missed calls and voicemail messages is displayed on your screen. If you have more than 99 new messages, a plus (+) sign is displayed.
- An exclamation mark (!) indicates urgent voicemail messages.

Cisco IP Phone 6800 Series, 7800 Series, and 8800 Series: You will also hear a stutter tone played from your handset, headset, or speakerphone when you use a phone line. This stutter tone is line-specific. You only hear it when you use a line that has voice messages.

Cisco IP Conference Phone 7832 and 8832: You will hear a stutter tone played from the speakerphone when you use the phone line. You only hear it when the line has a voice message.

## Access Your Personal your voicemail

### Procedure

---

**Step 1** Press **Messages** .

**Step 2** Do one of the following actions:

- 6800: Press **Messages**  or **Messages**.
- 7800 and 8800: Press **Messages** .
- 7832 and 8832: Press **Messages**.

**Step 3** Follow the voice prompts.

**Note** For details on voicemail features and PIN rules, see [Set up and manage your voicemail](#).

---

## Access Your Personal Audio Voicemail

Depending upon how your administrator has set up your phone, you can retrieve your personal voicemail without viewing a list of messages. This option is useful if you prefer a list of voicemail messages, but you occasionally access your messages without the visual prompts.

### Procedure

---

**Step 1** In the screen, press the **Audio** softkey.

**Step 2** When prompted, enter your voicemail credentials.

## Phone Behavior with Voicemail Setting

This table lists the phone behavior in various scenarios when the **Handset LED Alert** field in the Configuration Utility is set to Voicemail.

| Starting State               | Event   | LED Status After Event | LED Turn Off Criteria                           |
|------------------------------|---|------------------------|---|
| No Voicemail, No Missed Call | There is no active call and a call is missed or a call is on hold and the call is missed. | LED Off                | -   |
| No Voicemail, No Missed Call | Voicemail comes in  | LED On                 | User calls the voicemail to retrieve a message. |
| Voicemail                    | There is no active call and a call is missed or a call is on hold and the call is missed. | LED On                 | User calls the voicemail to retrieve a message. |
| Missed Call                  | Voicemail comes in  | LED On                 | User calls the voicemail to retrieve a message. |
| No Voicemail, No Missed Call | No event  | LED Off                | -   |

## Phone Behavior with Voicemail and Missed Call Configuration Setting

This table lists the phone behavior in various scenarios when the **Handset LED Alert** field in the Configuration Utility is set to **Voicemail, Missed Call**.

| Starting State               | Event   | LED Status After Event | LED Turn Off Criteria          |
|------------------------------|---|------------------------|--------------------------------|
| No Voicemail, No Missed Call | There is no active call and a call is missed or a call is on hold and the call is missed. | LED On                 | User interacts with the phone. |

| Starting State               | Event   | LED Status After Event | LED Turn Off Criteria  |
|------------------------------|---|------------------------|--|
| No Voicemail, No Missed Call | Voicemail comes in  | LED On                 | User calls the voicemail to retrieve a message.                              |
| Voicemail                    | There is no active call and a call is missed or a call is on hold and the call is missed. | LED On                 | User interacts with the phone and calls the voicemail to retrieve a message. |
| Missed Call                  | Voicemail comes in  | LED On                 | User interacts with the phone and calls the voicemail to retrieve a message. |
| No Voicemail, No Missed Call | No event  | LED Off                | -  |

## Voice Messages States of Monitored Voicemail Accounts





You can see the voicemail messages state of a voicemail account of a user or group on a line key .

The scope of the monitored voicemail account:

- an extension-associated voicemail account that is configured on the phone
- a voicemail account that is different from any extension-associated voicemail account

To check if your SIP proxy provides the support, contact your administrator.

A monitored voicemail account displays one of these icons beside the line key:

- : There are no voicemail messages for the monitored account.
- : There are new voicemail messages. The number of messages displays adjacent to the name of the monitored account. For example, (4) VM 3300 shows there are four voicemail messages for the monitored account VM 3300.
- : The new voicemail messages contain at least one urgent message.
- : The line failed to register to the voicemail server.

The line button LED also changes color to indicate the state of the monitored line. The default LED color and pattern for the states are:

- No message: solid green
- New messages: solid red
- Urgent messages: solid red
- Registration Failed: solid amber

To customize the LED behaviour, contact your administrator.

## Access Monitored Voicemail Account Messages

### Before you begin

- Your administrator must configure either a line key on the phone to monitor a voicemail account.
- Your administrator must assign speed dial to the configured key.
- There are new messages for the monitored voicemail account.

### Procedure

---

- Step 1** Press the line key on the phone.  
You may be prompted to enter the monitored voicemail account ID and PIN.
- Step 2** Follow the voice prompts.
-





## CHAPTER 6

# Settings

---

- [Phone Settings Overview](#), on page 100
- [Change the Ringtone](#), on page 100
- [Assign a Ring Tone with the Phone Web Page](#), on page 100
- [Control Ringer Volume](#), on page 100
- [Forward Calls from Your Phone](#), on page 101
- [Turn on Do Not Disturb for a Specific Line](#), on page 103
- [Turn on DND from the Phone Web Page](#), on page 103
- [Block an Anonymous Call](#), on page 103
- [Block Caller ID](#), on page 104
- [Secure a Call](#), on page 104
- [Set Up an Auto Answer Page](#), on page 105
- [Enable Call Waiting](#), on page 105
- [Set Up Voicemail](#), on page 105
- [HTTP Proxy Settings](#), on page 106
- [VPN Connection Settings](#), on page 109
- [Change the Display Mode](#), on page 112
- [Change the Time Format](#), on page 113
- [Change the Date Format](#), on page 113
- [Change the Screen Saver](#), on page 113
- [Configure the Screen Saver with the Phone Web Interface](#), on page 114
- [Add a Logo as a Phone Background](#), on page 115
- [Adjust the Phone Screen Contrast](#), on page 116
- [Adjust the Phone Screen Backlight](#), on page 116
- [Adjust the Backlight Timer from Phone Web Page](#), on page 116
- [Specify an Audio Device for a Call](#), on page 117
- [Set Language](#), on page 117
- [Set Password](#), on page 117
- [Set Password from Phone Web Page](#), on page 118
- [Set up the Profile Account](#), on page 118
- [Add Multiple Locations for a BroadWorks XSI User](#), on page 119
- [Enable Anonymous Call Blocking from the Phone Web Page](#), on page 120
- [Enable Call Waiting from the Phone Web Page](#), on page 120
- [Reboot Your Phone](#), on page 120

# Phone Settings Overview


Your administrator can configure the phone to make the setting menus available on the phone screen or on the phone web interface. If you can't find a specific menu, contact your administrator.

## Change the Ringtone

You can set a ringtone for an incoming call.

### Procedure

---

- Step 1** Press **Applications** .
  - Step 2** Select **User preferences > Ringtone > Ext (n) - Ring tone**, where n= extension number.
  - Step 3** Scroll through the list of ringtones and press **Play** to hear a sample.
  - Step 4** Press **Select** and then **Set** to save a selection.
- 

## Assign a Ring Tone with the Phone Web Page

### Procedure

---

- Step 1** On the phone web page, select **User Login > Voice > Ext(n)**, where (n) is the number of an extension.
  - Step 2** In **Call Feature Settings** area, choose a ringtone from the **Default Ring** drop-down list.  
If you don't want to specify a ringtone for the phone line, choose **No ring**. Your phone doesn't ring when receiving an incoming call.
  - Step 3** Click **Submit All Changes**.
- 

## Control Ringer Volume

You can control the ringer volume of an incoming call on the phone, or from the phone administration web page.

If your administrator restricts your ability to control the ringer volume, you can't perform this task from either the phone volume key or from the phone administration web page.

### Before you begin



Your administrator must allow you to control the ringer volume.



## Procedure

---

To control the ringer volume do one of the following.

- On the phone, press the **Volume**  or  button to reduce or to increase the volume.
- On the phone administration web page, access the **User Login > Advanced** and then select **Voice > User > Audio Volume**. Enter a value for the **Ringer Volume** parameter and click **Submit All Changes**.

The valid value for the **Ringer Volume** parameter ranges from 0 to 15.

- **Note** When your administrator restricts your ability to control the ringer volume, the **Ringer Volume** parameter doesn't appear under the **Audio Volume** section.
- 

# Forward Calls from Your Phone

You can set up your phone to forward incoming calls after navigating to the **Call forward settings** screen.

There are two other methods to set up the call forward services. To set up the call forward services by a specific softkey, see [Forward Calls, on page 48](#). To set up the call forward services from the phone web page, see [Forward Calls with the Phone Web Page, on page 50](#).


## Before you begin

Your administrator must enable the call forward services.

Your administrator disables the feature activation code synchronization for call forward. If enabled, the screen **Call forward settings** changes to be ready-only, however you can still change the setting for the Call Forward All service by pressing **Forward** or **Forward all** on the main screen. For more information, see [Activate Call Forward All with Feature Activation Code Synchronization, on page 49](#).

## Procedure

---

- Step 1** Press **Applications** .
- Step 2** Select **User preferences > Call preferences > Call forwarding** to access the **Call forward settings** screen.
- Step 3** Select a call forward service.
  - **Forward all**—Determines whether to forward all incoming calls to a target phone number.
  - **Forward busy**—Determines whether to forward an incoming call to a target phone number when the line is busy.

- **Forward no answer**—Determines whether to forward an incoming call to a target phone number when the call isn't answered.

**Step 4** Enable the call forward service by pressing **Select** button of the Navigation cluster.

**Step 5** Assign a target phone number for the call forward service.

- **Forward all number**—Specifies the target phone number to which you want to forward all incoming calls.
- **Forward busy number**—Specifies the target phone number to which you want to forward the incoming call when the line is busy.
- **Fwd no answer number**—Specifies the target phone number to which you want to forward the coming call when the call isn't answered.
- **Fwd no answer delay**—Assigns a response delay time for the no answer scenario.

**Note**


- If your administrator disables the feature key synchronization (FKS) and XSI sync for call forward on your phone, you can enter the value as number of seconds after which call needs to be forwarded.
- If your administrator enables FKS or XSI sync for call forward on your phone, you can enter the value as number of rings after which call needs to be forwarded.

The call forward settings on the phone take effect only when FKS and XSI are disabled. For more information, consult your administrator.

**Step 6** (Optional) Assign a target phone number by using the **Contacts** softkey.

- In the **Call forward settings** screen, select any of the call forward service.
- Select **Forward all number**, **Forward busy number**, or **Fwd no answer number** based on the call forward service that you selected, then press the **Contacts** softkey.
- Search for a contact. For more information, see [Search for a Contact in the All Directories Screen, on page 68](#).
- Press **Call** to assign the target phone number.  
You can find that the target phone number displays next to the call forward service.

**Step 7** Press **Set** to apply the settings.

**Step 8** Verify if the setting takes effect by looking for the call forward  icon. The icon displays with a target number on the top left or middle of the phone screen.

After you enable any of the call forward services, the **Forward** or **Forward all** softkey changes to the **Clr fwd** or **Clr fwd all** respectively. You can press the softkey to disable the call forward service or services, while the target phone number still remains.

**Clr fwd all** disables only the Call Forward All service, **Clr fwd** disables all call forward services.


If the call forward settings on the phone don't take effect, consult your administrator.

## Turn on Do Not Disturb for a Specific Line

Set do not disturb (DND) to silence your phone and suppress incoming call notifications when you need to avoid distractions. You can suppress all incoming call notifications or you can suppress a specific caller notification.

### Procedure

---

- Step 1** Select a phone line using the Navigation cluster.
- Step 2** Press **Applications** .
- Step 3** Select **User preferences > Call preferences > Do not disturb**.

**Note** If the **Do not disturb** menu doesn't display on the screen, contact your administrator.

- Step 4** Select **On** to turn on DND or select **Off** to turn off DND.
  - Step 5** Press **Set** to save the setting.
- 

## Turn on DND from the Phone Web Page

### Procedure

---

- Step 1** On the phone web page, select **User Login > Voice > User**.
  - Step 2** Under **Supplementary Services**, set **DND Settings** to **Yes**.
  - Step 3** Click **Submit All Changes**.
- 


## Block an Anonymous Call

You can block an incoming call that does not have caller information for a specific line or all lines.

If your administrator has enabled synchronization of Anonymous Call Rejection between a line and a BroadSoft XSI service, then your setting only applies to the specific line instead of all lines. Typically, the setting applies to all the lines, except for the ones where the synchronization is enabled.

### Procedure

---

- Step 1** Press the Navigation cluster up or down to select a phone line.
- Step 2** Press **Applications** .
- Step 3** Select **User preferences > Call preferences > Block anonymous call**.

- Step 4** Select **On** if you want to block the call that does not have caller information, or select **Off** to allow the call.
- Step 5** Press **Set** to save the setting.
- 

## Block Caller ID

You can block your caller identification to prevent your name and phone number from being displayed on the receiver's screen when you make a call. This feature helps you to maintain privacy.


### Before you begin

Your administrator enables Block CID feature on your phone.

Your administrator enables Block CID feature on the XSI BroadWorks server.

### Procedure

---

- Step 1** Press **Applications** .
- Step 2** Select **User preferences** > **Call preferences**.
- Step 3** Select **Block caller ID**.
- Step 4** Press **Select** to toggle caller ID blocking on or off.

If your administrator enables the block caller ID feature on the XSI BroadWorks server, your phone retrieves the value from the server and you see the value that your administrator sets on the server. You can then modify the value from the **Block caller ID** menu on the phone.


- Step 5** Press **Set** to save the change.
- 

## Secure a Call

You can encrypt calls to protect them from eavesdroppers. You can set up the secure call feature on all outbound calls or for a specific call.

### Procedure


---

- Step 1** Press **Applications** .
- Step 2** Select **User preferences** > **Call preferences** > **Secure call**.
- Step 3** Select **On** to enable secure call feature or select **Off** to disable the secure call feature.
- Step 4** Press **Set** to save the setting.
-

## Set Up an Auto Answer Page

### Procedure

---

- Step 1** Press **Applications** .
  - Step 2** Select **User preferences > Call preferences > Auto answer page**.
  - Step 3** Select **On** to enable the Auto answer page or select **Off** to disable Auto answer page.
  - Step 4** Press **Set** to save the changes.
- 


## Enable Call Waiting

You can enable call waiting for a specific line or all lines. If enabled, you can receive the call notification (a single beep and the line button flashes red) while on an active call.

If your administrator has enabled synchronization of Call Waiting between a line and a BroadSoft XSI service, then your setting only applies to the specific line instead of all lines. Typically, the setting applies to all lines, except for the ones where the synchronization is enabled.

### Procedure


---


- Step 1** Press the Navigation cluster up or down to select a phone line.
  - Step 2** Press **Applications** .
  - Step 3** Select **User preferences > Call preferences > Call waiting**.
  - Step 4** Select **On** to allow you to answer an incoming call that rings while on another call, or select **Off** to disable the function.
  - Step 5** Press **Set** to save the setting.
- 

## Set Up Voicemail

### Procedure

---

- Step 1** Press **Applications** .
- Step 2** Select **User preferences > Call preferences > Voice mail**.
- Step 3** Enter a phone number to check voicemail.

If you press the **Messages**  button, it dials the voicemail number and displays the voice message list.

- Step 4** Press **Set** to confirm the assigned number.
- Step 5** Press **Back** to exit.
- 

## HTTP Proxy Settings

You can set up an HTTP proxy on your phone from the **HTTP proxy settings** menu under the **Network configuration** menu. The HTTP proxy settings are also available on the phone web page.

### Related Topics

- [Phone Web Page](#), on page 21
- [Set Up a Proxy Server with the Auto Proxy Mode](#), on page 106
- [Set Up a Proxy Server with the Manual Proxy Mode](#), on page 106
- [Set Up a Proxy Server from the Phone Web Page](#), on page 107

## Set Up a Proxy Server with the Auto Proxy Mode

You can choose the auto proxy mode to set up an HTTP proxy server on the phone.

### Procedure

---

- Step 1** Select **Network configuration** > **HTTP proxy settings** > **Proxy mode**.
- Step 2** Press the **Select** button of the navigation cluster to choose **Auto**.
- Step 3** Highlight **Auto discovery (WPAD)**, select **On** to turn on Web Proxy Auto-Discovery (WPAD) that is used to retrieve a PAC file automatically, select **Off** to turn off WPAD.
- By default, your phone uses WPAD in the auto proxy mode.
- Step 4** (Optional) If you turn off WPAD in the previous step, you need to further enter a valid Proxy Auto-Configuration (PAC) URL in **PAC URL**. For example:
- ```
http://proxy.department.branch.example.com/pac
```
- If you don't have the PAC URL, contact your administrator.
- Step 5** Press **Set** to apply the settings.
- 

## Set Up a Proxy Server with the Manual Proxy Mode

You can choose the manual proxy mode to set up an HTTP proxy server on the phone.

### Before you begin

Your administrator provides you the server address and port of the proxy server.

### Procedure

---

- Step 1** Select **Network configuration > HTTP proxy settings > Proxy mode**.
- Step 2** Press the **Select** button of the navigation cluster to choose **Manual**.
- Step 3** Enter a valid hostname or IP address of a proxy server in **Proxy host**.
- Note** Do not provide the scheme (`http://` or `https://`) for the proxy host.
- Step 4** Enter a valid server port of the specified proxy server in **Proxy port**.
- Step 5** (Optional) If your proxy server requires authentication, highlight **Proxy authentication** and then select **On**.
- Step 6** (Optional) Enter your username and password to access the proxy server.  
If you don't have the username and password, contact your administrator.
- Step 7** Press **Set** to apply the settings.
- 

## Set Up a Proxy Server from the Phone Web Page

You can choose the auto or manual proxy mode to set up an HTTP proxy server from the phone web page.

### Procedure

---

- Step 1** On the phone web page, select **Voice > System**.
- Step 2** Under the section **HTTP Proxy Settings**, set the parameters described in the following table:

*Table 7. HTTP Proxy Settings*

| Parameter  | Description                                                                                                                                                              |
|------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Proxy Mode | Choose the proxy mode for the HTTP proxy setting.<br>Options are: <ul style="list-style-type: none"> <li>• Auto</li> <li>• Manual</li> <li>• Off</li> </ul> Default: Off |

| Parameter                            | Description                                                                                                                                                                                                                                                                                                                          |
|--------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Use Auto Discovery (WPAD)            | <p>Select <b>Yes</b> to use the Web Proxy Auto-Discovery (WPAD) mechanism to automatically retrieve a Proxy Auto-Configuration (PAC) file.</p> <p>If the parameter is set to <b>No</b>, you must configure <b>PAC URL</b>.</p> <p>This parameter is available when you set <b>Proxy Mode</b> to <b>Auto</b>.</p> <p>Default: Yes</p> |
| PAC URL                              | <p>URL locating the PAC file.</p> <p>This parameter is available when you set <b>Proxy Mode</b> to <b>Auto</b> and <b>Use Auto Discovery (WPAD)</b> to <b>No</b>.</p>                                                                                                                                                                |
| Proxy Host                           | <p>Server address (hostname or IP address) of the proxy server.</p> <p>Do not provide the scheme (<code>http://</code> or <code>https://</code>).</p> <p>This parameter is available when you set <b>Proxy Mode</b> to <b>Manual</b>.</p>                                                                                            |
| Proxy Port                           | <p>Port number of the proxy server.</p> <p>This parameter is available when you set <b>Proxy Mode</b> to <b>Manual</b>.</p>                                                                                                                                                                                                          |
| Proxy Server Requires Authentication | <p>If your proxy server requires authentication, select <b>Yes</b>. Otherwise, select <b>No</b>. The parameter configuration depends on the actual behaviour of the proxy server.</p> <p>This parameter is available when you set <b>Proxy Mode</b> to <b>Manual</b>.</p>                                                            |
| Username                             | <p>Enter a username of a credential user on the proxy server.</p> <p>This parameter is available when you set <b>Proxy Mode</b> to <b>Manual</b> and <b>Proxy Server Requires Authentication</b> to <b>Yes</b>.</p>                                                                                                                  |
| Password                             | <p>Enter a password of the specified username for the proxy authentication purpose.</p> <p>This parameter is available when you set <b>Proxy Mode</b> to <b>Manual</b> and <b>Proxy Server Requires Authentication</b> to <b>Yes</b>.</p>                                                                                            |

**Step 3** Click **Submit All Changes**.



# VPN Connection Settings

You can set up and enable a VPN connection on your phone from the **VPN settings** menu under the **Network configuration** menu. To facilitate the settings, you can also configure the VPN settings related parameters on the phone web page. If you want to enable the VPN connection, you need to reboot the phone.

## Related Topics

[Set Up a VPN Connection](#), on page 109

[Enable a VPN Connection](#), on page 110

[Disable a VPN Connection](#), on page 110

[Set Up a VPN Connection from the Phone Web Page](#), on page 111

[View the VPN Status](#), on page 112

## Set Up a VPN Connection


You can set up a VPN connection on your phone. After you perform the procedure described in this topic, only the VPN settings are finished. You still need to enable the VPN connection by rebooting the phone in a manual or automatic way.

If you want to set up the VPN connection from the phone web page, see [Set Up a VPN Connection from the Phone Web Page, on page 111](#).

### Before you begin

Your administrator provides the necessary information that is required to establish a VPN connection.

### Procedure

- 
- Step 1** Press **Applications** .
  - Step 2** Select **Network configuration > VPN settings**.
  - Step 3** Enter the IP address or FQDN of a VPN server in **VPN server**.
  - Step 4** Enter the user credentials in **Username** and **Password**.
  - Step 5** (Optional) If needed, enter the name of a tunnel group in **Tunnel group**.  
If the field is empty, this means no tunnel group is used for this VPN connection.
  - Step 6** Highlight **Connect to VPN on bootup**, press the **Select** button of the navigation cluster to select **On**.
  - Step 7** Press **Set** to save the settings.

The VPN settings are finished. For information about how to enable the VPN connection, see [Enable a VPN Connection, on page 110](#).

---

## Enable a VPN Connection



You can enable a configured VPN connection by rebooting your phone automatically. If you want to manually reboot your phone to enable the VPN connection, see [Reboot Your Phone, on page 120](#).

### Before you begin

The VPN settings are finished. For details, see [Set Up a VPN Connection , on page 109](#) or [Set Up a VPN Connection from the Phone Web Page, on page 111](#).

### Procedure

---

- Step 1** Press **Applications** .
- Step 2** Select **Network configuration > VPN settings**.
- Step 3** Highlight **Enable VPN connection**, press the **Select** button of the navigation cluster to select **On** to apply the changes.
- Note** Once you set **Enable VPN connection** to **On**, the phone immediately tries to connect to the VPN server. During the process, the phone reboots automatically.
- The VPN connection takes about one minute.
- After your phone reboots, the VPN connection icon  on the upper-right corner of the phone screen indicates that the VPN connection is established successfully.
- If the VPN connection fails, the value of **Enable VPN connection** remains **Off**.
- Step 4** (Optional) View the details of the VPN connection. For example, the current VPN connection status and VPN IP address. For details, see [View the VPN Status, on page 112](#).
- 

## Disable a VPN Connection


You can disable a VPN connection by rebooting your phone in an automatic or manual way.

### Before you begin

A VPN connection is enabled on your phone.

### Procedure

---


- Step 1** Press **Applications** .
- Step 2** Select **Network configuration > VPN settings**.
- Step 3** Highlight **Connect to VPN on bootup**, press the **Select** button of the navigation cluster to select **Off**.
- Step 4** Press **Set** to save the setting.
- Step 5** Do one of the following actions:

- Highlight **Enable VPN connection**, select **Off**.

**Note** Once you set **Enable VPN connection** to **Off**, the phone immediately tries to disconnect from the VPN server. During the process, the phone reboots automatically.

- Manually reboot your phone, see [Reboot Your Phone, on page 120](#).

The VPN disconnection takes about one minute.

After the phone reboots, the VPN connection icon  on the phone screen disappears. This means that the VPN connection is disabled successfully.

- Step 6** (Optional) Check whether the VPN connection is `Disconnected`. For details, see [View the VPN Status, on page 112](#).

## Set Up a VPN Connection from the Phone Web Page

You can set up a VPN connection from the phone web page.

You can do the same configuration on your phone, see [Set Up a VPN Connection , on page 109](#).

### Procedure

- Step 1** On the phone web page, select **Voice > System**.

- Step 2** Under the section **VPN Settings**, set the parameters described in the following table.

**Table 8: VPN Settings**

| Parameter        | Description                                                                                                                                   |
|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| VPN Server       | IP address or FQDN of the VPN server.<br>Default: Empty                                                                                       |
| VPN User Name    | Enter a username for a credential user on the VPN server.<br>Default: Empty                                                                   |
| VPN Password     | Enter a password of the specified username to access the VPN server.<br>Default: Empty                                                        |
| VPN Tunnel Group | Enter a tunnel group assigned to the VPN user.<br>Tunnel group is used to identify the group policy for the VPN connection.<br>Default: Empty |

| Parameter         | Description                                                                                                    |
|-------------------|----------------------------------------------------------------------------------------------------------------|
| Connect on Bootup | Choose whether your phone connects to the VPN server automatically after the phone reboots.<br><br>Default: No |

**Step 3** Click **Submit All Changes** to save the changes.

The VPN settings are finished. For information about how to enable the VPN connection, see [Enable a VPN Connection, on page 110](#).

## View the VPN Status

You can check the details of the VPN connection. For example, the current VPN status and VPN IP address of your phone.

You can also view the status from the phone web page by selecting **Info > Status > VPN Status**.

### Procedure

**Step 1** Press **Applications** .

**Step 2** Select **Status > VPN status**.

You can view the following information:

- **VPN connection**—Indicates whether the phone connects to the VPN server. The status can be either *Connected* or *Disconnected*.
- **VPN IP address**—VPN IP address assigned from the VPN server.
- **VPN subnet mask**—VPN subnet mask assigned from the VPN server.
- **Sent bytes**—Total bytes the phone sent out to the network through the VPN server.
- **Received bytes**—Total bytes the phone received from the network through the VPN server.

## Change the Display Mode

This feature is supported on Cisco IP Phone 7821, 7841, and 7861.

### Procedure

**Step 1** Press **Applications** .

**Step 2** Select **User preferences > Attendant console preferences > Display mode**.

The following options are available:

- **Name**
- **Ext**
- **Both**

**Step 3** Choose the display mode and press **Set**.

---

## Change the Time Format

You can change the current time format that the phone screen displays.

### Procedure

---

**Step 1** Press **Applications** .

**Step 2** Select **Device administration** > **Date/Time** > **Time format**.

To set daylight savings, select **Device administration** > **Date/Time** > **Daylight savings**. Select **On** to turn on the daylight savings and select **Off** to turn it off.

**Step 3** (Optional) Select **Device administration** > **Date/Time** > **Time zone**.

**Step 4** Select a time format and press **Set** to apply the changes.

---

## Change the Date Format

You can change the date format that you want to see on your phone screen.

### Procedure

---

**Step 1** Press **Applications** .

**Step 2** Select **Device administration** > **Date/Time** > **Date format**.

**Step 3** Select a date format and press **Set** to apply the changes.


---

## Change the Screen Saver

You can enable your phone screen saver, and specify its appearance and the amount of time for the phone to be idle before the screen saver appears.

## Procedure

---

- Step 1** Press **Applications** .
- Step 2** Select **User preferences > Screen preferences > Screen saver**.
- Step 3** Select **On** to turn on screen saver and select **Off** to turn it off.
- Step 4** Select **Screen saver settings** to choose the settings:
- **Screen saver type**—Choose one of the following options:
    - **Clock**—Displays a rounded clock with the wallpaper in the background.
    - **Download Picture**—Displays a picture pushed from the phone web page.
    - **Logo**: Displays a logo as the phone screensaver. This image is added in the Logo URL field of the phone web page.
    - **Lock**—Displays a lock icon on the phone screen wallpaper.
  - **Trigger interval**—Enter the number of seconds that the phone remains idle before the screen saver turns on.
  - **Refresh interval**—Enter the number of seconds before the screen saver should refresh (if, for example, you chose a rotation of pictures).
- Step 5** Press **Set**.
- 

# Configure the Screen Saver with the Phone Web Interface

You can configure a screen saver for the phone. When the phone is idle for a specified time, it enters screen saver mode.

Any button press returns the phone to normal mode.

## Procedure

---

- Step 1** On the phone web page, select **Voice > User**.
- Step 2** In the **Screen** section, set up the fields as described in the following table.

| Parameter           | Description                                                                                                                                              |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen Saver Enable | Select <b>Yes</b> to enable a screen saver on the phone. When the phone is idle for a specified time, the phone enters screen saver mode.<br>Default: No |

| Parameter            | Description                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen Saver Type    | Types of screen saver. Options you can choose: <ul style="list-style-type: none"> <li>• <b>Clock</b>—Displays a digital clock on a plain background.</li> <li>• <b>Download Picture</b>—Displays a picture pushed from the phone webpage.</li> <li>• <b>Logo</b>: Displays a logo on the phone screen. Add a logo image in the <b>Logo URL</b> field.</li> <li>• <b>Lock</b> —Enables locking of the screensaver.</li> </ul> |
| Screen Saver Wait    | Amount of idle time before screen saver displays.<br>Enter the number of seconds of idle time to elapse before the screen saver starts.<br>Default: 300                                                                                                                                                                                                                                                                      |
| Picture Download URL | URL locating the (.png) file to display on the phone screen background. If you select <b>Download Picture</b> as a screensaver on the phone screen.<br><br>When you enter an incorrect URL to download a new wallpaper, the phone fails to download the wallpaper. If the phone does not have any wallpaper downloaded earlier, the phone displays the default wallpaper.                                                    |
| Logo URL             | Enter a URL or path for the location where the logo image is saved. If you select <b>Logo</b> as a screensaver on the phone screen.                                                                                                                                                                                                                                                                                          |

**Step 3** Click **Submit All Changes**.

## Add a Logo as a Phone Background

To add a logo icon as your phone screen background, add it from phone web page.

### Procedure

**Step 1** On the phone web page, select **User Login > Voice > User**.

**Step 2** In the **Screen** section, select **Logo** from the **Phone Background** field and in the **Logo URL** field enter a URL or path for the location where the logo image is saved.


**Step 3** Click **Submit All Changes**.

After the logo is added in the phone background, if you select **Default** from the **Phone Background** list and save the changes, the logo icon on the phone screen will disappear.

## Adjust the Phone Screen Contrast

### Procedure

---


- Step 1** Press **Applications** .
  - Step 2** Select **User preferences > Screen preferences > Contrast level**.
  - Step 3**
  - Step 4** Press **Save**.
- 

## Adjust the Phone Screen Backlight

You can adjust the backlight to make the phone screen easier to read.

### Procedure

---

- Step 1** Press **Applications** .
  - Step 2** Select **User preferences > Backlight timer**.
  - Step 3** Press **Edit** to change the backlight mode.
  - Step 4** Press **On** to turn the backlight on or press **Off** to turn the backlight off.  
You can also select a time from the list to set a duration for which the backlight will remain on.
  - Step 5** (Optional) Select a time from the list to set a duration that the backlight remains off.  
You can also select the option to set the backlight always on.
  - Step 6** Press **Select** to apply the selected backlight mode.
- 

## Adjust the Backlight Timer from Phone Web Page

You can save energy by disabling the backlight on the phone at a preset time. The phone's desktop remains visible, even with the backlight off.

### Procedure

---

- Step 1** On the phone web page, select **User Login > Advanced > Voice > User**.
- Step 2** Under **Screen**, select a duration for the **Back Light Timer** parameter.



**Step 3** In the **LCD Contrast** field, enter a number for the desired brightness.


---

## Specify an Audio Device for a Call

When you connect multiple headsets to the phone, you can choose the audio device to use for a call. Your choice applies when you place or answer a call with a line key or the corresponding softkey.

### Procedure

---


- Step 1** Press **Applications** .
- Step 2** Select **User preferences** > **Audio preferences** > **Preferred audio device**.
- Step 3** Press **Select** to choose one of the options:
- **None**—Selects the last used audio device.
  - **Speaker**—Selects the speakerphone as the audio device.
  - **Headset**—Selects a headset as the audio device.
- Step 4** Press **Set** to save the selection.
- 

## Set Language

Depending upon how your phone is configured, you may be able to change the language used by your phone.

### Procedure

---

- Step 1** Press **Applications** .
- Step 2** Select **Device administration** > **Language**.
- Step 3** Select a language from the list of available languages.
- Step 4** Select **Save**.
- 

## Set Password


Reset your phone password regularly and keep your network secure.

### Before you begin

You must have your password.

### Procedure

---

- Step 1** Press **Applications** .
- Step 2** Select **Device administration** > **Set password**.
- Step 3** Enter your current password in the Old password field.
- Step 4** Enter your new password in the New password and the Reenter new password fields.
- Step 5** Select **Save**.

---

### Related Topics

[Set Password from Phone Web Page](#), on page 118

## Set Password from Phone Web Page

You can update your password from the phone web page.

### Before you begin

You must have your current password.

### Procedure

---

- Step 1** On the phone web page, select **Voice** > **System**.
- Step 2** Under the section **System Configuration**, locate the parameter **User Password**, and click **Change Password** next to the parameter.
- Step 3** Enter your current password in the **Old Password** field.  
If you don't have a password, keep the field empty.
- Step 4** Enter your new password in the **New Password** field.
- Step 5** Click **Submit**.

The message `Password has been changed successfully.` will display in the web page.

---

## Set up the Profile Account

You need to enter the authentication credentials to resynchronize your phone with the provisioning profile when prompted with the **Profile account setup** screen.

If you missed the **Profile account setup** screen, you can also access it from the phone menu or the **Setup** softkey if available.


If the phone fails to sign in, contact your administrator.

### Before you begin

Your administrator specifies the profile authentication type on your phone and provides you with the authentication credentials.

### Procedure

---

- Step 1** Press **Applications** .
- Step 2** Select **Device administration** > **Profile account setup**.  
Your username and password are automatically filled. These fields are blank if your username and password were not added before.
- Step 3** Press **Sign in** to save your username and password.
- Note** If any of the **Username** field or the **Password** field is empty, the phone displays a grey **Sign in** softkey and you can't press the softkey.
- If any of the **Username** field or the **Password** field is empty, the **Sign in** softkey doesn't appear. After you enter values in both the fields you see the **Sign in** softkey.
- Step 4** (Optional) Enter a new username and password if you want to login with another set of credentials.
- 

## Add Multiple Locations for a BroadWorks XSI User


You can add multiple locations to your phone extension. This allows an incoming call to seamlessly be moved from your phone to other mobile phones or desk phones that are added to your extension.

### Before you begin

Your administrator has enabled the Anywhere feature on the extension.

### Procedure

---

- Step 1** Press **Applications** .
- Step 2** Select **User preferences** > **Call preferences**.
- Step 3** Select **Anywhere**.
- Step 4** (Optional) Select a line if BroadWorks Anywhere is configured on multiple lines.
- Step 5** Add contact number and name in the **Locations** screen.
- Maximum length of a name that you can enter is 25. You can also keep the **Name** field empty.
- Maximum length of a number that you can enter is 20.
- Step 6** Enable or disable the location.
- Step 7** Press **Save** to add the locations to the **Locations** list.
-

# Enable Anonymous Call Blocking from the Phone Web Page

## Procedure

---

**Step 1** On the phone web page, select **User Login > Voice > User**.

**Step 2** Under **Supplementary Services**, set **Block ANC Setting** to **Yes**.

The setting applies to all lines, except for the ones where your administrator has enabled synchronization of Anonymous Call Rejection between the lines and the BroadSoft XSI service.

**Step 3** Click **Submit All Changes**.

---

# Enable Call Waiting from the Phone Web Page

## Procedure

---

**Step 1** On the phone web page, select **User Login > Voice > User**.

**Step 2** Under **Supplementary Services**, set **CW Setting** to **Yes**.

The setting applies to all lines, except for the ones where your administrator has enabled synchronization of Call Waiting between the lines and the BroadSoft XSI service.

**Step 3** Click **Submit All Changes**.

---

# Reboot Your Phone

You may have to reboot your phone for a software upgrade or other changes to take effect. Your settings or other customizations do not change.

## Procedure

---

**Step 1** Press **Applications** .

**Step 2** Select **Device administration > Restart**.

**Step 3** Select **OK** to confirm that you want to reboot your phone.

---



## CHAPTER 7

# Accessories

- [Supported Accessories, on page 121](#)
- [Headsets, on page 121](#)

## Supported Accessories

The Cisco IP Phone 7800 Series supports both Cisco and third-party accessories.

In the following table, an X indicates support for an accessory by a particular phone model and a dash (-) indicates no support.

*Table 9: Accessory Support for the Cisco IP Phone 7800 Series*

| Accessory                      | Type            | Cisco IP Phone 7811 | Cisco IP Phone 7821 | Cisco IP Phone 7841 |
|--------------------------------|-----------------|---------------------|---------------------|---------------------|
| <b>Third-Party Accessories</b> |                 |                     |                     |                     |
| Headsets                       | Analog          | -                   | X                   | X                   |
|                                | Analog Wideband | -                   | X                   | X                   |
| Microphone                     | External        | -                   | -                   | -                   |
| Speakers                       | External        | -                   | -                   | -                   |
| Wall Mount                     | External        | X                   | X                   | X                   |

## Headsets

Here are the Cisco headsets we support. For tips on setting up and using these headsets, take a look at the info for your model:

- [Bang & Olufsen Cisco 980](#)
- [Cisco Headset 320 Series](#)
- [Cisco Headset 520 Series](#)

- [Cisco Headset 530 Series](#)
- [Cisco Headset 560 Series](#)
- [Cisco Headset 720 Series](#)
- [Cisco Headset 730](#)

See the [Cisco Headset Compatibility Guide](#) for detailed information on Cisco headset integration with your device.

## Standard Headsets

You can use a standard headset with your desk phone. Standard headsets plug into the back of the phone with an RJ-type connector.


### Connect a standard headset

#### Procedure

---

Plug the headset into the jack on the back of the phone and press the cable into the cable channel.

**Figure 5: Standard Headset Connection**

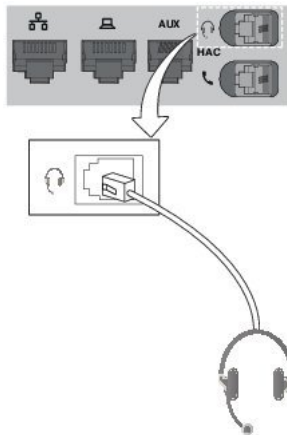

**Caution** Failure to press the cable into the channel in the phone can damage the printed circuit board inside the phone. The cable channel reduces the strain on the connector and the printed circuit board.

---

## Wireless Headsets

You can use most wireless headsets with your phone. For a list of supported headsets, see [http://www.cisco.com/c/en/us/products/unified-communications/uc\\_endpoints\\_accessories.html](http://www.cisco.com/c/en/us/products/unified-communications/uc_endpoints_accessories.html).

Refer to your wireless headset documentation for information about connecting the headset and using its features.

## Swap Headsets While on a Call

You can connect an analog headset or a wireless headset to your phone. You cannot connect both the headsets simultaneously to your phone.

When you connect multiple headsets to the phone, you can switch among the headsets during a call by pressing the **Headset** key on the phone. Though the phone is connected to multiple devices, you see a specific headset is selected as the preferred audio device in the following priority order:

- When you connect a wireless headset to the phone, you can make your wireless headset the preferred audio device.
- When you connect only an analog headset to the phone, you can make your analog headset the preferred audio device.

### Procedure

---

- Step 1** Before you make or answer a call, press **Headset**.
- Step 2** (Optional) If you place a call, dial the number.
-







## CHAPTER 8

# Product Safety and Security

---

- [Safety and Performance Information, on page 125](#)
- [Compliance Statements, on page 127](#)
- [Cisco Product Security Overview, on page 129](#)
- [Important Online Information, on page 129](#)

## Safety and Performance Information

### Power Outage

Your access to emergency service through the phone requires that the phone receive power. If a power interruption occurs, service or emergency calling service dialing does not function until power is restored. If a power failure or disruption occurs, you may need to reset or reconfigure the equipment before you can use service or emergency calling service dialing.

### External Devices

We recommend that you use good-quality external devices that are shielded against unwanted radio frequency (RF) and audio frequency (AF) signals. External devices include headsets, cables, and connectors.

Depending on the quality of these devices and their proximity to other devices, such as mobile phones or two-way radios, some audio noise may still occur. In these cases, we recommend that you take one or more of these actions:

- Move the external device away from the source of the RF or AF signals.
- Route the external device cables away from the source of the RF or AF signals.
- Use shielded cables for the external device, or use cables with a better shield and connector.
- Shorten the length of the external device cable.
- Apply ferrites or other such devices on the cables for the external device.


Cisco cannot guarantee the performance of external devices, cables, and connectors.

**Caution**

In European Union countries, use only external speakers, microphones, and headsets that are fully compliant with the EMC Directive [89/336/EC].

## Ways to Provide Power to Your Phone

You can provide power to your phone in one of these ways:

- Use the power adapter that comes with your phone.
- If your network supports Power over Ethernet (PoE), you can plug your phone into the network. Plug an Ethernet cable into the Ethernet phone port  and into the network.

If you are not sure whether your network supports PoE, check with your administrator.

## Phone Behavior During Times of Network Congestion

Anything that degrades network performance can affect phone audio and, in some cases, can cause a call to drop. Sources of network degradation can include, but are not limited to, the following activities:

- Administrative tasks, such as an internal port scan or security scan.
- Attacks that occur on your network, such as a Denial of Service attack.

## UL Warning

The LAN/Ethernet cable or other cables attached to the device should not be extended outside of the building.

## EnergyStar



The following phones have EnergyStar certification:

- Cisco IP Phone 7811
- Cisco IP Phone 7841

Any phone model that isn't listed in the above list isn't certified.

## Product Label

The product label is located on the bottom of the device.

## Compliance Statements

### Compliance Statements for the European Union

#### CE Marking

The following CE mark is affixed to the equipment and packaging.



### Compliance Statements for Canada

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Privacy of communications may not be ensured when using this phone.

This product meets the applicable Innovation, Science and Economic Development Canada technical specifications.

#### Avis de Conformité Canadien

Cet appareil est conforme aux normes RSS exemptes de licence RSS d'Industry Canada. Le fonctionnement de cet appareil est soumis à deux conditions : (1) ce périphérique ne doit pas causer d'interférence et (2) ce périphérique doit supporter les interférences, y compris celles susceptibles d'entraîner un fonctionnement non souhaitable de l'appareil. La protection des communications ne peut pas être assurée lors de l'utilisation de ce téléphone.

Le présent produit est conforme aux spécifications techniques applicables d'Innovation, Sciences et Développement économique Canada.

### Compliance Statements for New Zealand

#### Permit to Connect (PTC) General Warning

The grant of a Telepermit for any item of terminal equipment indicates only that Spark NZ has accepted that the item complies with minimum conditions for connection to its network. It indicates no endorsement of the

product by Spark NZ, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Spark NZ network services.

## Compliance Information for Brazil

### Art. 5º - 680

This equipment is not entitled to protection against harmful interference and can't cause interference in proper authorized systems.

For more information, go to this URL: <http://www.anatel.gov.br>

| Model | Certificate Number |
|-------|--------------------|
| 7811  | 0897-15-1086       |
| 7821  | 3844-13-1086       |
| 7841  | 3842-13-1086       |
| 7861  | 3844-13-1086       |

## Compliance Information for Japan



VCCI Compliance for Class B Equipment

## FCC Compliance Statements

The Federal Communications Commission requires compliance statements for the following statements.

### FCC Part 15.19 Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC Part 15.21 Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC RF Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must be at least 20 cm from the user and must not be collocated or operating in conjunction with any other antenna or transmitter.

## FCC Receivers and Class B Digital Statement

This product has been tested and complies with the specifications for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which is found by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment or devices
- Connect the equipment to an outlet other than the receiver's
- Consult a dealer or an experienced radio/TV technician for assistance

## Cisco Product Security Overview

This product contains cryptographic features and is subject to U.S. and local country laws that govern import, export, transfer, and use. Delivery of Cisco cryptographic products does not imply third-party authority to import, export, distribute, or use encryption. Importers, exporters, distributors, and users are responsible for compliance with U.S. and local country laws. By using this product, you agree to comply with applicable laws and regulations. If you are unable to comply with U.S. and local laws, return this product immediately.

Further information regarding U.S. export regulations can be found at <https://www.bis.doc.gov/index.php/regulations/export-administration-regulations-ear>.

## Important Online Information

### End User License Agreement

The End User License Agreement (EULA) is located here: <https://www.cisco.com/go/eula>

### Regulatory Compliance and Safety Information

Regulatory Compliance and Safety Information (RCSI) is located here:

[https://www.cisco.com/c/dam/en/us/td/docs/voice\\_ip\\_comm/cuipph/7800-series/regulatory\\_compliance/RCSI-0312-book.pdf](https://www.cisco.com/c/dam/en/us/td/docs/voice_ip_comm/cuipph/7800-series/regulatory_compliance/RCSI-0312-book.pdf)

