



Cisco Catalyst 6807-XL Switch Hardware Installation Guide

First Published: 2013-12-20

Last Modified: 2016-04-25

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The following information is for FCC compliance of Class A devices: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio-frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to correct the interference at their own expense.

The following information is for FCC compliance of Class B devices: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment causes interference to radio or television reception, which can be determined by turning the equipment off and on, users are encouraged to try to correct the interference by using one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications to this product not authorized by Cisco could void the FCC approval and negate your authority to operate the product

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <http://www.cisco.com/go/trademarks>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

© 2016 Cisco Systems, Inc. All rights reserved.



CONTENTS

Preface

Preface vii

Document Conventions vii

Related Documentation ix

Obtaining Documentation and Submitting a Service Request ix

CHAPTER 1

Product Overview 1

Switch Models 1

Front Panel 1

Chassis 3

Supervisor Engine 3

Supervisor Engine 2T 4

Modules supported by Supervisor Engine 2T 11

Supervisor Engine 6T 12

Modules supported by Supervisor Engine 6T 19

Fan Tray 20

Power Supply Module 21

Power Entry Module 23

Power Supply Converter 23

LEDs 24

Fan Tray LED 24

Power Supply Module LEDs 25

Power Supply Converter LEDs 26

Rear Panel 27

Backplane Bandwidth 28

Clock and VTT Module 28

CHAPTER 2

Preparing for Installation 29

Safety Warnings	29
Site Requirements	30
Temperature	30
Air Flow	31
Selecting Rack Enclosure Cabinets	32
Chassis Fan Tray	32
Humidity	33
Altitude	34
Dust and Particles	34
Corrosion	34
EMI and Radio Frequency Interference	34
Power Source Interruptions	35
System Grounding	36
Maintaining Safety with Electricity	37
Preventing Electrostatic Discharge Damage	38
Power Requirements	39
Cabling Requirements	40
Rack-Mounting Guidelines	40
Site Preparation Checklist	41

CHAPTER 3

Installing the Switch	45
Installation Tasks	45
Accessory Kit	47
Unpacking the Switch	48
L Brackets on the Chassis	49
Installing the Rack-Mount Shelf Kit	50
Installing Shelf Brackets and Crossbar in a Four-Post Rack with 17.5-inch (44.45 cm)	
Opening	50
Installing Shelf Brackets and Crossbar in a Four-Post Rack with 17.75 inch (45.09 cm)	
Opening	54
Installing Shelf Brackets and Crossbar in a Two-Post Rack with 17.5-inch (44.45 cm)	
Opening	58
Installing Shelf Brackets and Crossbar in a Two-Post Rack with 17.75 inch (45.09 cm)	
Opening	61
Rack-Mounting the Chassis	63

Establishing System Ground	68
Attaching an ESD Strap	70
Verifying the Switch Chassis Installation	72
Online Diagnostics	73
Connecting the Supervisor Engine Console Port	73
Installing Transceivers and Module Connectors	74

CHAPTER 4

Removing and Replacing FRUs	75
Online Insertion and Removal	75
Removing and Installing Power Supplies	76
Installing AC Power Supplies	76
Removing AC Power Supplies	79
Removing and Installing the Fan Tray	80
Installing the Fan Tray	80
Checking Fan Tray Installation	81
Removing the Fan Tray	81
Removing and Installing the Power Supply Converter	83
Installing the Power Supply Converter	83
Removing the Power Supply Converter	84

APPENDIX A

Technical Specifications	87
Physical Specifications	87
Environmental Specifications	88

APPENDIX B

Power Supply Specifications	91
3000 W AC-Input Power Supply Specifications	91
3000 W Power Supply AC Power Cords	93
Chassis and Module Power and Heat Values	99

APPENDIX C

Transceivers, Module Connectors, and Cable Specifications	105
Pluggable Transceivers	105
1-GB Transceivers	106
10-GB Transceivers	107
40-GB Transceivers	108
WDM Transceivers	109

Module Connectors	113
RJ-45 Connector	113
SC Connector	113
LC Connector	114
MTP-12 Connector	115
Cable Specifications	116
SFP Modules and Cables	116
Console Cables	116
DB-9 Adapter (To Connect to a PC)	118
DB-25 Adapter (To Connect to a Terminal)	118
Modem Adapter	119
Identifying a Rollover Cable	120
Cable Pinouts	120
Mode-Conditioning Patch Cord	123
Example: Patch Cord Configuration	123
Installing the Patch Cord	123
Differential Mode Delay	124
Cleaning the Fiber-Optic Connectors	125
Guidelines	126
How to Clean the Fiber-Optic Connectors	126

APPENDIX D**Repacking the Switch 129**

APPENDIX E**Troubleshooting 133**

Getting Started	133
Solving Problems at the System Component Level	133
Identifying Startup Problems	134
Troubleshooting the Power Supply Module	134
Troubleshooting the Fan Tray	135
Contacting Cisco Customer Service	136
Finding Serial Numbers	136



Preface

- [Document Conventions](#), page vii
- [Related Documentation](#), page ix
- [Obtaining Documentation and Submitting a Service Request](#), page ix

Document Conventions

This document uses the following conventions:

Convention	Description
^ or Ctrl	Both the ^ symbol and Ctrl represent the Control (Ctrl) key on a keyboard. For example, the key combination ^D or Ctrl-D means that you hold down the Control key while you press the D key. (Keys are indicated in capital letters but are not case sensitive.)
bold font	Commands and keywords and user-entered text appear in bold font .
<i>Italic font</i>	Document titles, new or emphasized terms, and arguments for which you supply values are in <i>italic font</i> .
Courier font	Terminal sessions and information the system displays appear in <i>courier font</i> .
Bold Courier font	Bold Courier font indicates text that the user must enter.
[x]	Elements in square brackets are optional.
...	An ellipsis (three consecutive nonbolded periods without spaces) after a syntax element indicates that the element can be repeated.
	A vertical line, called a pipe, indicates a choice within a set of keywords or arguments.
[x y]	Optional alternative keywords are grouped in brackets and separated by vertical bars.

Convention	Description
{x y}	Required alternative keywords are grouped in braces and separated by vertical bars.
[x {y z}]	Nested set of square brackets or braces indicate optional or required choices within optional or required elements. Braces and a vertical bar within square brackets indicate a required choice within an optional element.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
<>	Nonprinting characters such as passwords are in angle brackets.
[]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

Reader Alert Conventions

This document may use the following conventions for reader alerts:



Note

Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the manual.



Tip

Means *the following information will help you solve a problem*.



Caution

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.



Timesaver

Means *the described action saves time*. You can save time by performing the action described in the paragraph.



Warning

IMPORTANT SAFETY INSTRUCTIONS

This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. Use the statement number provided at the end of each warning to locate its translation in the translated safety warnings that accompanied this device. Statement 1071

SAVE THESE INSTRUCTIONS

Related Documentation

**Note**

Before installing or upgrading, refer to the *Release Notes for Cisco IOS Release 15.1SY*.

- Catalyst 6807-XL Switch documentation located at: http://www.cisco.com/go/cat6800_docs
- [Regulatory Compliance and Safety Information for the Catalyst 6800 Series Switches](#)
- [Catalyst 6500 Ethernet Module Installation Guide](#)
- [Catalyst 6500 Series Switch Supervisor Engine Guide](#)
- [Cisco SFP and SFP+ Transceiver Module Installation Notes](#)
- [Cisco 10-Gigabit Ethernet X2 Transceiver Modules Installation Note](#)
- [Installation Notes for the Cisco TwinGig and OneX Converter Modules](#)

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/c/en/us/td/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS version 2.0.



Product Overview

- [Switch Models, page 1](#)
- [Front Panel, page 1](#)
- [Rear Panel, page 27](#)

Switch Models

Table 1: Switch Models

Switch Model	Description
Cisco Catalyst 6807-XL	Has a seven-slot modular chassis. The switch supports redundant power supply modules (AC input), redundant supervisor engines, fan tray, power supply converter modules, clock modules, and voltage termination - enhanced (VTT-E) modules.


Front Panel

This section describes the front panel components:

- Fan tray
- Five Module slots
- Two supervisor engine slots
- Four power supply bays
- Four power entry modules
- Two power supply converter modules
- System On/Off switch

- System ground connector

Figure 1: Cisco Catalyst 6807-XL Front Panel

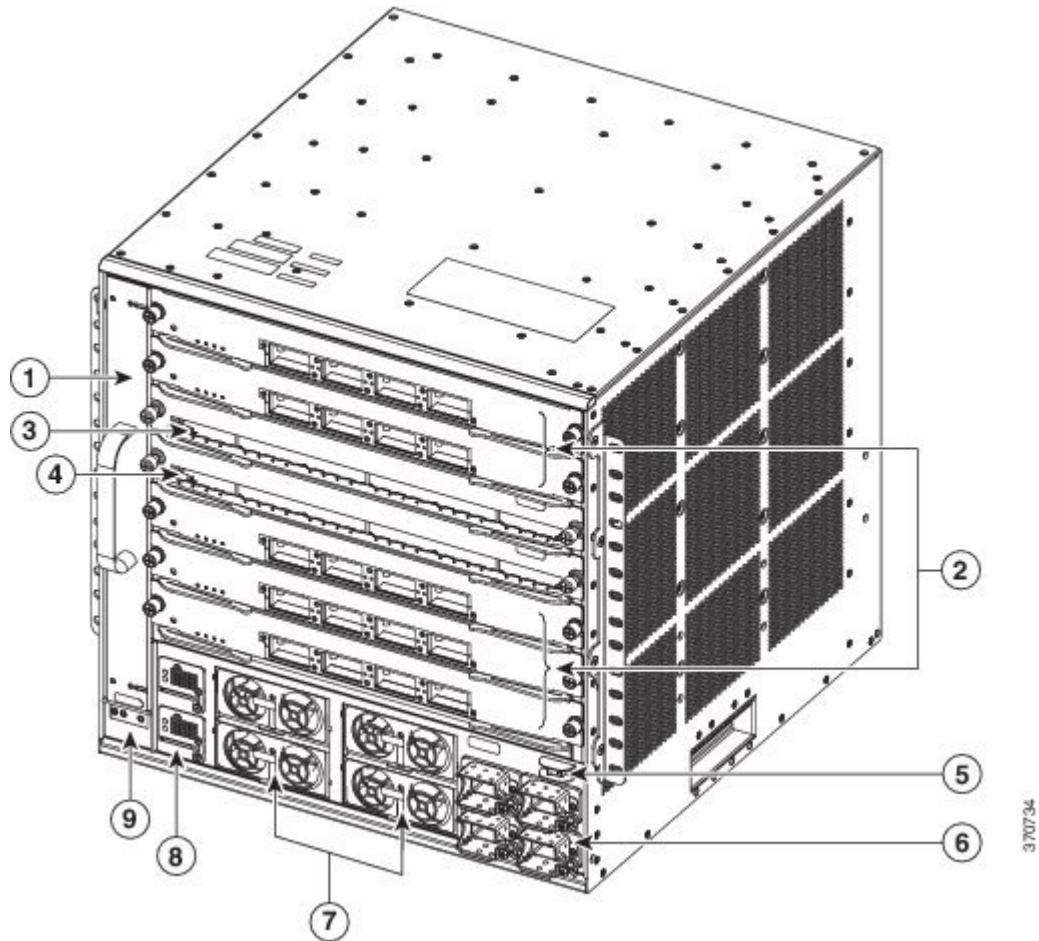

1	Fan tray	6	Power entry modules (PEMs), labeled AC1 through AC4
2	Module slots (line cards) 1, 2, 5,6, and 7	7	Power supply modules (PSMs), labeled 1 through 4
3	Supervisor engine slot	8	Power supply converter (PSC), labeled PSC1 and PSC2
4	Supervisor engine slot	9	System ground connector
5	System On/Off switch		

Chassis

The Cisco Catalyst 6807-XL switch chassis has seven horizontal slots, of which five are module slots and two are supervisor engine slots.

Related Topics

- [Rack-Mounting the Chassis, on page 63](#)
- [Environmental Specifications, on page 88](#)
- [Physical Specifications, on page 87](#)
- [Finding Serial Numbers, on page 136](#)

Supervisor Engine

The switch supports these Supervisor Engine models:

- Supervisor Engine 2T
 - VS-S2T-10G
 - VS-S2T-10G-XL
- Supervisor Engine 6T
 - C6800-SUP6T
 - C6800-SUP6T-XL

The following requirements apply to the supervisor engines installed on the switch:

- Install a 3000 W or higher-capacity power supply.
- Install supervisor engines only in slot 3 or 4.

In a switch installed with Supervisor Engine 2T if the slots are not occupied by supervisor engines, you can install service modules. However, you cannot install Ethernet modules in slot 3 and 4. Check your software release notes for any restrictions on the type of module that can be installed.

- In systems with redundant supervisor engines, both the supervisor engines must be of the same model and have the same daughter card configurations.
- Each supervisor engine must have the resources to run the switch on its own, which means that all the supervisor engine resources are duplicated. Identical supervisor engine memory configurations are recommended, but are not required, as long as the supervisor engine with the smaller memory configuration is sufficient to run the configured features of the switch. Additionally, each supervisor engine must have its own flash device and console port connections.

The uplink ports are fully functional on all redundant supervisor engine models when they are in the standby mode. For more information, see the [Catalyst 6500 Series Switch Module Installation Note](#).

Related Topics

- [Connecting the Supervisor Engine Console Port , on page 73](#)


Supervisor Engine 2T

The following are the Supervisor Engine 2T versions supported on the switch.

Table 2: Supervisor Engine 2T Models

Supervisor Engine 2T Product Numbers	Description
VS-S2T-10G	The VS-S2T-10G is shipped with a factory-installed PFC4 daughter card (VS-F6K-PFC4) and a factory-installed MSFC5 daughter card (VS-F6K-MSFC5). There are five uplink ports: two 10GBASE-X Ethernet ports that require the installation of X2 transceivers and three 1000BASE-X Ethernet ports that require SFP transceivers.
VS-S2T-10G-XL	The VS-S2T-10G-XL is shipped with a factory-installed PFC4XL daughter card (VS-F6K-PFC4XL) and a factory-installed MSFC5 daughter card (VS-F6K-MSFC5). There are five uplink ports: two 10GBASE-X Ethernet ports that require the installation of X2 transceivers and three 1000BASE-X Ethernet ports that require SFP transceivers.

Figure 2: Supervisor Engine 2T Front Panel Features

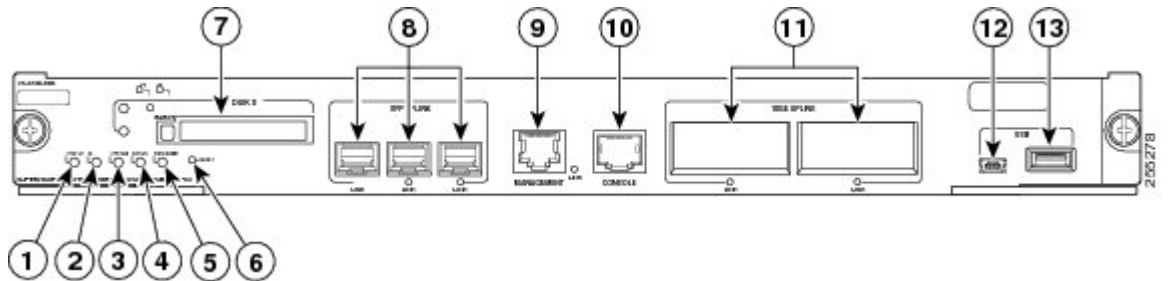

1	STATUS LED	8	1000BASE-X UPLINK ports (requires SFP transceivers)
2	ID LED	9	MANAGEMENT port
3	SYSTEM LED	10	CONSOLE port
4	ACTIVE LED	11	10GBASE-X UPLINK ports (requires X2 transceivers)
5	PWR MGMT LED	12	USB port
6	RESET switch	13	Port currently not supported
7	PCMCIA slot		

Table 3: Supervisor Engine 2T Features

Feature	Description
Chassis compatibility	Supported on all Catalyst 6500 E-series chassis and Catalyst 6807-XL chassis.
Software requirements (minimum)	12.2(50)SY
Fan tray requirements	Both versions of the Supervisor Engine 2T require that a high-speed fan tray be installed in the chassis. Note Low-speed fan trays do not provide sufficient cooling for Supervisor Engine 2T.
Slot installation restrictions	Supervisor Engine 2T must be installed in slot 3 or slot 4. The primary supervisor engine can be installed in either slot. Note When Supervisor Engine 2T is installed in a chassis with either a WS-X69xx or a WS-X68xx module, there is a requirement that the two slots adjacent to the supervisor engine and the module, should have a module installed in them or, if the slots are unused, have a switching-module filler plate (Cisco part number SLOTBLANK-09 or C6800-XL-CVR-E) installed for NEBS compliance. Do not use blank slot covers (C6800-XL-CVR) to cover the adjacent unused slots.
Hardware restrictions	Supports only modules equipped with the DFC4-A, DFC4-AXL, DFC4-E, DFC4-EXL, or the CFC daughter cards. Modules equipped with DFC3 daughter cards are not supported. For further information on hardware restrictions and module support, refer to the software release notes at the following URL http://www.cisco.com/en/US/docs/switches/catalyst6500/ios/12.2SY/relser/notes/d_20679.html
Memory <ul style="list-style-type: none"> • DRAM • External Compact Flash (disk0) 	2 GB Compact flash Type 2 (1 GB)
Front panel features	
Status LEDs	See Table 5: Supervisor Engine 2T Front Panel Status LEDs for a list of the status LEDs and their descriptions.
RESET switch	The RESET switch allows you to reset and restart the switch. Note Because the reset switch is recessed in the supervisor engine faceplate, you must use a ballpoint pen tip or other small, pointed object to access the switch.

Feature	Description
CONSOLE port	This is a 10/100/1000 port that uses an RJ-45 connector. The CONSOLE port allows you to access the switch either locally (with a console terminal) or remotely (with a modem). The CONSOLE port is an EIA/TIA-232 asynchronous, serial connection with hardware flow control.
Universal Serial Bus (USB) port	Two USB 2.0 ports are provided. The USB 5-pin mini Type-B connector is used as a console port allowing attachment to PCs that are not equipped with an RS-232 interface. The second USB port is currently not supported.
MANAGEMENT port	A 10/100/1000 copper port used for out-of-band Ethernet management of the switch.
DISK 0 slot and LED	<p>One PCMCIA slot is available. The PCMCIA slots allow a Flash PC card to be installed providing additional flash memory. You can use this flash memory to store and run software images or to serve as an I/O device. An eject button is located on the left side, next to each slot. Pushing in on the button ejects the Flash PC card from the slot. The slot supports 1 GB Flash PC cards.</p> <p>The PCMCIA slot has an activity LED associated with it.</p>
Uplink ports (PORT 1 through PORT 5)	<ul style="list-style-type: none"> • Supervisor Engine 2T has five uplink ports: <ul style="list-style-type: none"> ◦ Two 10GBASE-X ports ◦ Three 1000BASE-X ports <p>Note The two 10GBASE-X ports require X2 transceiver modules; the three 1000BASE-X uplink ports require SFP transceiver modules. For X2 and SFP transceiver support, refer to the compatibility matrices at the following URL: http://www.cisco.com/c/en/us/support/interfaces-modules/transceiver-modules/products-device-support-tables-list.html</p> <p>Note In chassis configurations where there are redundant supervisor engines installed, the uplink ports on the supervisor engine that is in standby mode are fully functional.</p> <ul style="list-style-type: none"> • Each uplink port has a link LED associated with it.

Feature	Description
Uplink port queue structure	<ul style="list-style-type: none"> • 1000BASE-X (uplink ports 1, 2, and 3) <ul style="list-style-type: none"> ◦ Tx—1p3q4t ◦ Rx—2q4t • 10GBASE-X (uplink ports 4 and 5) <ul style="list-style-type: none"> ◦ With ports 1, 2, and 3 enabled: Tx—1p3q4t, Rx—2q4t ◦ With ports 1, 2, and 3 disabled: Tx—1p7q4t, Rx—8q4t • 1 port group
Pluggable transceivers supported	<ul style="list-style-type: none"> • Supports SFP 1000BASE-X transceivers in Ports 1, 2, and 3. • Supports X2 10-GBASE-X transceivers in Ports 4 and 5. <p>For additional information about SFP and X2 transceiver support, see the compatibility matrices listed on this page: http://www.cisco.com/c/en/us/support/interfaces-modules/transceiver-modules/products-device-support-tables-list.html</p>
Hardware-based forwarding engine (Policy Feature Card)	<ul style="list-style-type: none"> • VS-S2T-10G—PFC4 (VS-F6K-PFC4) • VS-S2T-10G-XL—PFC4XL (VS-F6K-PFC4XL)
Multilayer Switch Feature Card (MSFC) daughter card version installed	MSFC5 (VS-F6K-MSFC5)

Table 4: Supervisor Engine 2T Physical and Environmental Specifications

Item	Specification
Dimensions (H x W x D)	1.73 x 14.4 x 16.0 in. (4.4 x 36.6 x 40.6 cm). Occupies one slot in the chassis.
Weight	12.0 lb (5.44 kg)
Power requirement (at 42 VDC)	<ul style="list-style-type: none"> • VS-S2T-10G—10.36 A • VS-S2T-10G-XL—10.71 A
Environment	

Item	Specification
Operating temperature	<ul style="list-style-type: none"> • Certified for operation: 32° to 104°F (0° to 40°C) • Designed and tested for operation: 32° to 130°F (0° to 55°C)
Humidity (RH) ambient (noncondensing)	10 to 90%
Operating altitude	<ul style="list-style-type: none"> • Certified for operation: 0 to 6500 feet (0 to 2000 m) • Designed and tested for operation: –200 to 10,000 feet (–60 to 3000 m)

Table 5: Supervisor Engine 2T Front Panel Status LEDs

LED	Color and Meaning
STATUS	<p>The STATUS LED indicates the status of the supervisor engine.</p> <ul style="list-style-type: none"> • Green—All diagnostics pass. The supervisor engine is operational (normal initialization sequence). • Orange—The supervisor engine is booting or running diagnostics (normal initialization sequence) or an over-temperature condition has occurred. (A minor temperature threshold has been exceeded during environmental monitoring.) • Red—The diagnostic test failed. The supervisor engine is not operational because a fault occurred during the initialization sequence or an over-temperature condition has occurred. (A major temperature threshold has been exceeded during environmental monitoring.)
ID	A blue LED that flashes at half-second intervals is used to identify the supervisor engine for servicing purposes.

LED	Color and Meaning
SYSTEM	<p>The SYSTEM LED indicates the status of the system components.</p> <ul style="list-style-type: none"> • Green—All chassis environmental monitors are reporting OK. • Orange—A minor hardware problem has been detected. • Red—A major hardware problem has occurred.
ACTIVE	<p>The ACTIVE LED indicates whether the supervisor engine is operating in active mode or is in standby mode.</p> <ul style="list-style-type: none"> • Green—The supervisor engine is operational and active. • Orange—The supervisor engine is in standby mode.
PWR MGMT	<p>The supervisor engine monitors each module's power requirements and status relative to the system's overall power capacity before fully powering up each module in the chassis.</p> <ul style="list-style-type: none"> • Orange—Power-up mode; running self-diagnostics. • Green—Power management is functioning normally and sufficient power is available for all modules. • Orange—A minor power management problem has been detected. There is insufficient power for all modules to power up. • Red—A major power failure has occurred.
DISK 0	<p>This LED is illuminated green when the installed Flash PC card is being accessed and is performing either a read operation or a write operation.</p>

LED	Color and Meaning
LINK (SFP UPLINK)	<p>Each of the three SFP uplink ports has a LINK LED associated with it. The LINK LED indicates the link status of the corresponding port.</p> <ul style="list-style-type: none"> • Green—The port is active (the link is connected and operational). • Flashing orange—The port failed diagnostics and is disabled. • Orange—The port is disabled. • Red—The supervisor engine is resetting; an over-temperature condition has occurred. Note If the supervisor engine fails to download code and configuration information successfully during the initial reset, the LED stays red; the supervisor engine does not come online. • Off—The port is not active or the link is not connected.
MANAGEMENT port	<p>The 10/100/1000 management port has an green LED associated with it.</p> <ul style="list-style-type: none"> • Green—The port is active (the link is connected and operational). • Off—The port is not active or the link is not connected.

LED	Color and Meaning
LINK (10GE UPLINK)	<p>Each of the two 10GE uplink ports have a link LED associated with it.</p> <ul style="list-style-type: none"> • Green—The port is active (the link is connected and operational). • Flashing orange—The port failed diagnostics and is disabled. • Orange—The port is disabled. • Red—The supervisor engine is resetting; an over-temperature condition has occurred. <ul style="list-style-type: none"> Note If the supervisor engine fails to download code and configuration information successfully during the initial reset, the LED stays red; the supervisor engine does not come online. • Off—The port is not active or the link is not connected.

Modules supported by Supervisor Engine 2T

Supervisor Engine 2T supports the following Ethernet modules:

- WS-X6704-10GE
- WS-X6908-10G-2T and WS-X6908-10G-2TXL
- WS-X6748-GE-TX
- WS-X6848-TX-2T and WS-X6848-TX-2TXL
- WS-X6748-SFP
- WS-X6848-SFP-2T and WS-X6848-SFP-2TXL
- WS-X6716-10T
- WS-X6816-10T-2T and WS-X6816-10T-2TXL
- WS-X6716-10G
- WS-X6816-10G-2T and WS-X6816-10G-2TXL
- WS-X6724-SFP
- WS-X6824-SFP-2T and WS-X6824-SFP-2TXL
- WS-X6904-40G-2T and WS-X6904-40G-2TXL
- C6800-8P10G, C6800-8P10G-XL

- C6800-16P10G, C6800-16P10G-XL
- C6800-32P10G, C6800-32P10G-XL
- C6800-48P-SFP, C6800-48P-SFP-XL
- C6800-48P-TX, C6800-48P-TX-XL

Supervisor Engine 2T supports the following service modules:

- NAM3
- ASA-SM
- WiSM2
- ACE-30

Related Topics

[Installing Transceivers and Module Connectors, on page 74](#)

[Pluggable Transceivers, on page 105](#)

[Module Connectors, on page 113](#)

[Cable Specifications, on page 116](#)


Supervisor Engine 6T

The following are the Supervisor Engine 6T versions supported on the switch.

Table 6: Supervisor Engine 6T Models

Supervisor Engine 6T Product Numbers	Description
C6800-SUP6T	The C6800-SUP6T is shipped with a factory-installed PFC4 daughter card (C6800-PFC). There are eight SFP+ (Multi-Rate) Ethernet ports and two QSFP (40G) Ethernet ports.
C6800-SUP6T-XL	The C6800-SUP6T-XL is shipped with a factory-installed PFC4XL daughter card (C6800-PFC-XL). There are eight SFP+ (Multi-Rate) Ethernet ports and two QSFP (40G) Ethernet ports.

Figure 3: Supervisor Engine 6T Front Panel Features

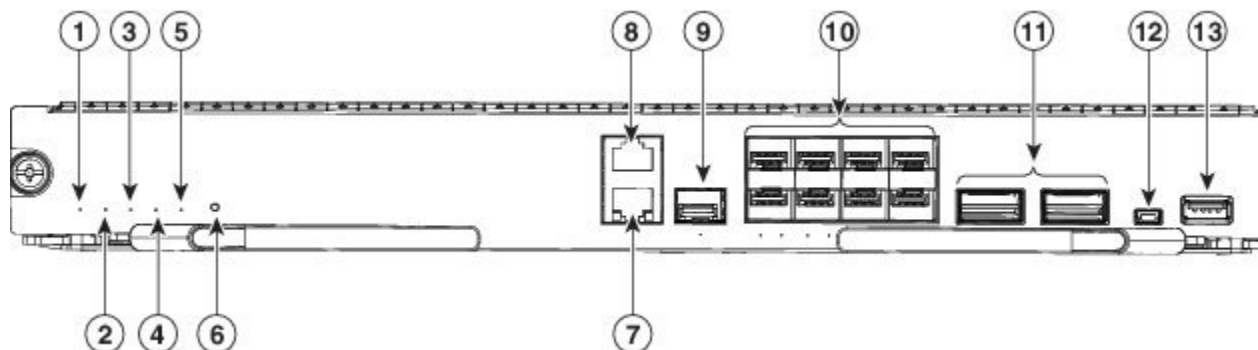

1	STATUS LED	8	Console port
2	ID LED	9	Ethernet management SFP port
3	SYSTEM LED	10	Eight 10G SFP+ ports
4	ACTIVE LED	11	Two 40G QSFP+ uplink ports
5	PWR MGMT LED	12	USB mini Type B (console) port
6	RESET switch	13	USB Type A host port
7	Ethernet management RJ-45 port		

Table 7: Port mapping for the SFP+/QSFP+ uplink ports

Native 10-Gigabit ports	Configurable 40-Gigabit port
1, 2, 3, 4	19
5, 6, 7, 8	20

Native 40-Gigabit port	Configurable 10-Gigabit ports
9	11, 12, 13, 14
10	15, 16, 17, 18

**Note**

To configure 40G ports to function as 10G ports, you need to use Cisco QSFP to four SFP+ Active Optical Breakout Cables that connect a 40G QSFP port to four 10G SFP+ ports.


Table 8: Supervisor Engine 6T Features

Feature	Description
Chassis compatibility	Supported on all Catalyst 6500 E-series chassis and Catalyst 6807-XL chassis.
Software requirements (minimum)	Cisco IOS® Software Release 15.3(1)SY and future releases.
Slot installation restrictions	Supervisor Engine 6T must be installed in slot 3 or slot 4. The primary supervisor engine can be installed in either slot. Note When the Supervisor Engine 6T is installed in a chassis with any supported module, there is a requirement that the two slots adjacent to the supervisor engine and the module either have a module installed in them or, if the slots are unused, have a switching-module filler plate (Cisco part number SLOTBLANK-09 or C6800-XL-CVR-E) installed for NEBS compliance. Do not use blank slot covers (C6800-XL-CVR) to cover the adjacent unused slots.
Hardware restrictions	Supports only modules equipped with the DFC4-A, DFC4-AXL, DFC4-E, or DFC4-EXL daughter cards. Modules equipped with DFC3 or CFC daughter cards are not supported. For further information on hardware restrictions and module support, refer to the software release notes at the following URL: http://www.cisco.com/c/en/us/td/docs/switches/lan/catalyst6500/ios/15-3SY/release_notes/release_notes.html
Memory <ul style="list-style-type: none"> • DRAM • External USB 	4 GB
Front panel features	
Status LEDs	See Table 10: Supervisor Engine 6T Front Panel Status LEDs for a list of the status LEDs and their descriptions.
RESET switch	The RESET switch allows you to reset and restart the switch. Note Because the reset switch is recessed in the supervisor engine faceplate, you must use a ballpoint pen tip or other small, pointed object to access the switch.

Feature	Description
CONSOLE port	This is a port that uses an RJ-45 connector. The CONSOLE port allows you to access the switch either locally (with a console terminal) or remotely (with a modem). The CONSOLE port is an EIA/TIA-232 asynchronous, serial connection with hardware flow control.
Universal Serial Bus (USB) port	Two USB 2.0 ports are provided. The USB 5-pin mini Type-B connector is used as a console port allowing attachment to PCs that are not equipped with an RS-232 interface. The second USB port is a host port for external USB disk drive.
MANAGEMENT port	A 10/100/1000 copper port used for out-of-band Ethernet management of the switch. It also has a fiber port that can be used as the Ethernet Management port. You can only use one of the ports (copper or fibre) at the same time.
Uplink ports	<ul style="list-style-type: none"> • Supervisor Engine 6T has the following uplink ports: <ul style="list-style-type: none"> ◦ Eight 1GB/10GB SFP+ ports ◦ Two 10GB/40GB QSFP ports • Each uplink port has a link LED associated with it.
Uplink port queue structure	<ul style="list-style-type: none"> • Receive <ul style="list-style-type: none"> ◦ 1p7q4t (default) ◦ 2p6q4t (configurable) • Transmit <ul style="list-style-type: none"> ◦ 1p7q4t (default) ◦ 2p6q4t (configurable)
Pluggable transceivers supported	For information about the transceivers supported, see the compatibility matrices listed on this page: http://www.cisco.com/c/en/us/support/interfaces-modules/transceiver-modules/products-device-support-tables-list.html
Hardware-based forwarding engine (Policy Feature Card)	Built-in

Table 9: Supervisor Engine 6T Physical and Environmental Specifications

Item	Specification
Dimensions (H x W x D)	1.73 x 14.1 x 16 in (4.4 x 36 x 40.6 cm)
Weight	11.64 lbs, 11.73 lbs (XL)
Power requirement (at 42 VDC)	<ul style="list-style-type: none"> • C6800-SUP6T - 341 W maximum • C6800-SUP6T-XL - 354 W maximum
Environment	
Operating temperature	<ul style="list-style-type: none"> • Certified for operation: 32° to 104°F (0° to 40°C) • Designed and tested for operation: 32° to 130°F (0° to 55°C)
Storage temperature	-40 to 167°F (-40 to 75°C)
Humidity (RH) ambient (noncondensing)	10 to 90%
Operating altitude	<ul style="list-style-type: none"> • Certified for operation: 0 to 6500 feet (0 to 2000 m) • Designed and tested for operation: -200 to 10,000 feet (-60 to 3000 m)

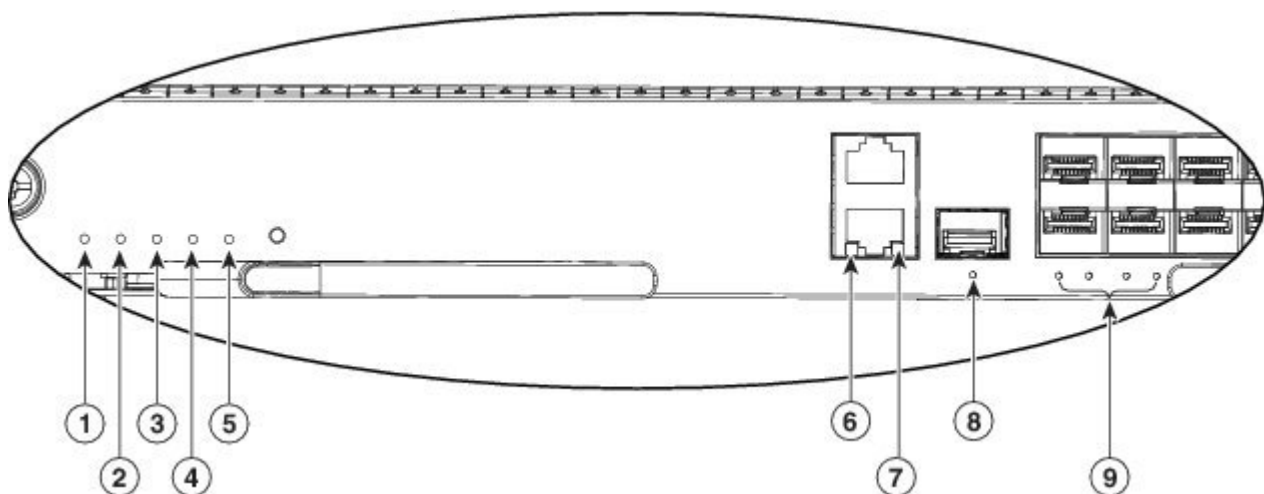Figure 4: Supervisor Engine 6T front panel LEDs

1	STATUS LED	6	LNK LED
2	ID LED	7	ACT LED
3	System LED	8	Link LED
4	Active LED	9	Port LEDs
5	PWR MGMT LED		

Table 10: Supervisor Engine 6T Front Panel Status LEDs

LED	Color and Meaning
STATUS	<p>The STATUS LED indicates the status of the supervisor engine.</p> <ul style="list-style-type: none"> • Green—All diagnostics pass. The supervisor engine is operational (normal initialization sequence). • Orange—The supervisor engine is booting or running diagnostics (normal initialization sequence) or an over-temperature condition has occurred. (A minor temperature threshold has been exceeded during environmental monitoring.) • Red—The diagnostic test failed. The supervisor engine is not operational because a fault occurred during the initialization sequence or an over-temperature condition has occurred. (A major temperature threshold has been exceeded during environmental monitoring.)
ID	<p>A blue LED that flashes at half-second intervals is used to identify the supervisor engine for servicing purposes.</p>
SYSTEM	<p>The SYSTEM LED indicates the status of the system components.</p> <ul style="list-style-type: none"> • Green—All chassis environmental monitors are reporting OK. • Orange—A minor hardware problem has been detected. • Red—A major hardware problem has occurred.

LED	Color and Meaning
ACTIVE	<p>The ACTIVE LED indicates whether the supervisor engine is operating in active mode or is in standby mode.</p> <ul style="list-style-type: none"> • Green—The supervisor engine is operational and active. • Orange—The supervisor engine is in standby mode.
PWR MGMT	<p>The supervisor engine monitors each module's power requirements and status relative to the system's overall power capacity before fully powering up each module in the chassis.</p> <ul style="list-style-type: none"> • Orange—Power-up mode; running self-diagnostics. • Green—Power management is functioning normally and sufficient power is available for all modules. • Orange—A minor power management problem has been detected. There is insufficient power for all modules to power up. • Red—A major power failure has occurred.
LNK/ACT (MANAGEMENT RJ45 port)	<p>The 10/100/1000 management port has a LNK/ACT green LEDs associated with it.</p> <ul style="list-style-type: none"> • Green—The port is active (the link is connected and operational). • Off—The port is not active or the link is not connected.
Link (Management SFP port)	<p>The SFP management port has a green LED associated with it.</p> <ul style="list-style-type: none"> • Green—The port is active (the link is connected and operational). • Off—The port is not active or the link is not connected.

LED	Color and Meaning
SFP+ uplink port LEDs	<p>Each of the eight SFP+ uplink ports has a LINK LED associated with it. The LINK LED indicates the link status of the corresponding port.</p> <ul style="list-style-type: none"> • Green—The port is active (the link is connected and operational). • Flashing orange—The port failed diagnostics and is disabled. • Orange—The port is disabled. • Red—The supervisor engine is resetting; an over-temperature condition has occurred. • Off—The port is not active or the link is not connected. <p>If the 10G SFP+ ports are configured to function as 40G ports, ports 1 and 5 represent the Link LED.</p>
QSFP 40G uplink port LEDs)	<p>Each of the 10GE uplink ports have a link LED associated with it.</p> <ul style="list-style-type: none"> • Green—The port is active (the link is connected and operational). • Flashing orange—The port failed diagnostics and is disabled. • Orange—The port is disabled. • Red—The supervisor engine is resetting; an over-temperature condition has occurred. • Off—The port is not active or the link is not connected. <p>If the 40G SFP+ ports are configured to function as 10G ports, ports 11 and 15 represent the Link LED.</p>

Modules supported by Supervisor Engine 6T

The following are the modules supported by Supervisor Engine 6T:

- C6800-8P10G, C6800-8P10G-XL
- C6800-16P10G, C6800-16P10G-XL
- C6800-32P10G, C6800-32P10G-XL
- C6800-48P-SFP, C6800-48P-SFP-XL

- C6800-48P-TX, C6800-48P-TX-XL
- WS-X6904-40G-2T, WS-X6904-40G-2TXL
- WS-X6908-10G-2T, WS-X6908-10G-2TXL
- WS-X6824-SFP-2T, WS-X6824-SFP-2TXL
- WS-X6848-SFP-2T, WS-X6848-SFP-2TXL
- WS-X6848-TX-2T, WS-X6848-TX-2TXL
- WS-X6816-10T-2T, WS-X6816-10T-2TXL

With a DFC4 or DFC4XL upgrade (WS-F6k-DFC4-A, WS-F6k-DFC4-AXL)

- WS-X6704-10GE
- WS-X6724-SFP
- WS-X6724-SFP
- WS-X6748-SFP

With a DFC4 or DFC4XL upgrade (WS-F6k-DFC4-E, WS-F6k-DFC4-EXL)

- WS-X6716-10GE
- WS-X6716-10GE

Related Topics

[Installing Transceivers and Module Connectors, on page 74](#)

[Pluggable Transceivers, on page 105](#)

[Module Connectors, on page 113](#)

[Cable Specifications, on page 116](#)

Fan Tray

The switch supports a single front-serviceable and hot-swappable fan tray with nine individual fans. The fan tray is responsible for cooling the entire chassis and interfacing with environmental monitors to trigger alarms when conditions exceed thresholds.

The fan tray supports:

- Model number C6807-XL-FAN.
- A maximum cooling capacity of 850 CFM¹ (120 CFM per slot). At this capacity, the fan tray can cool seven 800 W modules.
- Four variable-speed operating modes between 3,000 and 6,000 RPM² for each fan.
- Up to three fan failures. The fans that are working increase RPM or CFM.

¹ Cubic feet per minute.

² Revolutions per minute.

- Online Insertion and Removal (OIR) for a minimum of 120 seconds (depending on the ambient temperature).

**Note**

Individual fans are not field-replaceable units (FRUs). You must replace the fan tray.

Related Topics

[Removing and Installing the Fan Tray, on page 80](#)

[Troubleshooting the Fan Tray, on page 135](#)

[Fan Tray LED, on page 24](#)

Power Supply Module

The switch supports one to four field-replaceable power supply modules (PSMs) labeled 1 to 4, with a single system On/Off switch.

The PSM supports:

- Model number C6800-XL-3KW-AC.
- Redundant and combined configuration modes. The redundant mode is the default and recommended mode.
- Only AC input.
- 3000 W when powered with 240VAC, and 1300 W when powered with 120VAC.
- Only single-phase source AC. Source AC can be out of phase between multiple power supplies or multiple AC-power plugs on the same power supply because all AC power supply inputs are isolated.

This table describes the available power supply configuration modes:

Table 11: PSM Configuration Modes

	Redundant Mode (n+1)	Combined Mode (n+0)
Description	The system operates on two to four PSMs. This includes a reserve PSM that is available in case of a failure. The system power supply configuration is $n+1$ PSMs +1 redundant PSM.	The system operates on one to four power supplies. The power available to the system is the sum of power outputs of all the PSMs in the chassis.

	Redundant Mode (n+1)	Combined Mode (n+0)
Operating capacity	<p>With two PSMs (1+1):</p> <ul style="list-style-type: none"> • One PSM operates at 100 percent capacity. • The +1 redundant PSM operates at 0 percent of its capacity. <p>With three PSMs (2+1):</p> <ul style="list-style-type: none"> • One PSM operates at 100 percent capacity. • One PSM operates at 90 percent of its capacity. • The +1 redundant PSM operates at 0 percent of its capacity. <p>With four PSMs (3+1):</p> <ul style="list-style-type: none"> • One PSM operates at 100 percent capacity. • Two PSMs operate at 90 percent of their capacity (90 percent each). • The +1 redundant PSM operates at 0 percent of its capacity. 	All available PSMs operate at 100 percent capacity.
In case of failure	The +1 redundant PSM takes over and operates at 90 percent capacity.	<p>There is no redundant power supply in this mode. The PSMs that are still operational continue to work. If they are not able to handle the load, the necessary number of modules are shut down. The number of modules that will be shut down depends on the amount of combined power the operational PSMs are able to provide.</p> <p>For example, if you have installed two PSMs, they supply 6000 W, which can power a fully loaded chassis. But if one PSM fails, the power provided drops down to 3000 W, which causes some modules to shut down.</p>
Recommendation	<p>This is the recommended and default mode.</p> <p>If you have a fully loaded chassis, we recommend that you install at least three PSMs operating in a redundant mode (2+1).</p>	<p>Although available, we recommend that you do not use this mode. If you are implementing this mode, we recommend at least two PSMs (2+0) operating in the combined mode.</p>

³ Total number of operational PSMs

The PSMs provide 3000 W when powered with 240 VAC, and 1300 W when powered with 120 VAC. In systems where power supply modules provide different wattage, you may not have true redundancy. If the PSM with the higher wattage fails, the PSM with the lower wattage might not be able to handle the entire load by itself and system power management will shut down devices.

**Note**

When shutting down devices, depending on how much power saving is needed, the system powers down modules in a descending order, starting with the highest-numbered slot. Slots containing supervisor engines are bypassed and are not powered down (Power is automatically reserved for supervisor engine slots). This shutdown order is fixed and cannot be changed.

You can change the configuration of the power supplies to redundant or combined at any time. If you switch from a redundant to a combined configuration, all the available PSMs are enabled (even a PSM that was disabled because it was of a lower wattage). If you change from a combined to a redundant configuration, all the available PSMs are initially enabled, and if they are of the same wattage, they remain enabled. If they are of different wattage, a syslog message appears and the lower wattage supply is disabled.

Related Topics

[Removing and Installing Power Supplies, on page 76](#)

[Troubleshooting the Power Supply Module, on page 134](#)

[Power Supply Module LEDs, on page 25](#)

[3000 W Power Supply AC Power Cords, on page 93](#)

Power Entry Module

The switch supports one to four AC power entry modules (PEMs) labeled AC1 to AC4. The four PEMs connect to the four corresponding PSMs (Labeled 1 to 4), for example, AC1 connects to 1 and so on.

The AC input voltage from the PEM is transmitted to the backplane, which then conducts it to the PSM. The power supply module generates the necessary amount of power.

Related Topics

[Removing and Installing Power Supplies, on page 76](#)

[Troubleshooting the Power Supply Module, on page 134](#)

[Power Supply Module LEDs, on page 25](#)

[3000 W Power Supply AC Power Cords, on page 93](#)

Power Supply Converter

The switch supports two redundant, field-replaceable 52 V converters labeled PSC1 and PSC2.

The PSC converts the 52 V supplied by the PSM to 3.3 V and conducts it to the backplane. The clock module, VTT modules, and module slots (line cards) require 3.3 V.

The PSC supports:

- Model number C6807-X-3.3V.

- Redundancy—The PSCs share power when both are installed. If one PSC fails, the chassis will still be operational.

Related Topics

[Removing and Installing the Power Supply Converter, on page 83](#)

[Power Supply Converter LEDs, on page 26](#)

LEDs


Use the switch LEDs to monitor switch activity and performance.

For information about module and supervisor engine LEDs, refer to the *Catalyst 6500 Ethernet Module Installation Guide* and the *Catalyst 6500 Series Switch Supervisor Engine Guide* available on Cisco.com.

Fan Tray LED

The fan tray includes an ID LED and a Fan Status LED, as shown in the following figure. The different states of the LEDs are described in the following tables.

Figure 5: Fan Tray LED Locations

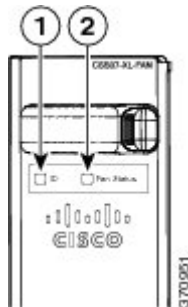

1	ID	2	Fan Status
---	----	---	------------

Table 12: Fan ID LED and Description

LED Color	Meaning
Blue	Identifies the fan module in the chassis

Table 13: Fan Status LEDs and Descriptions

LED Color	Meaning
Green	Fan is operating normally

LED Color	Meaning
Red	One or more individual fans have failed

Related Topics

[Removing and Installing the Fan Tray](#), on page 80

[Troubleshooting the Fan Tray](#), on page 135


[Fan Tray](#), on page 20

[Air Flow](#), on page 31

Power Supply Module LEDs

The PSM includes an IN, OUT, and FAULT LED, as shown in the following figure. The different states of the LEDs are described in the following tables.

Figure 6: Power Supply Module LED Locations

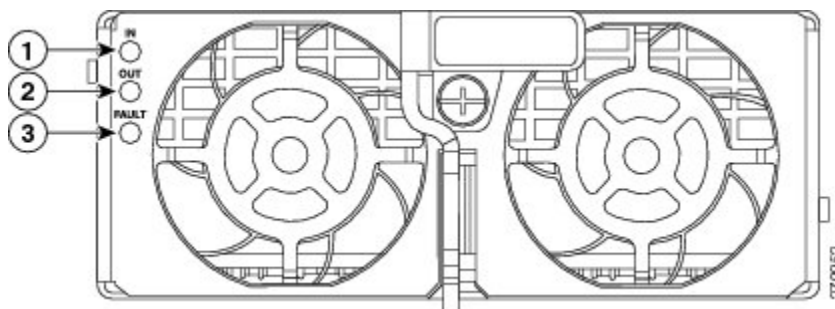

1	IN	3	FAULT
2	OUT		

PSM LEDs and Descriptions

LED	LED Color	Meaning
IN	Green	Input AC is present and within regulation range
	Green (blinking)	Input AC is present but not within regulation range or AC power was just disconnected and the power supply internal circuitry is still charged
OUT ⁴	Green	Power output is OK
	Green (blinking)	Output is in a power limit or over current condition

LED	LED Color	Meaning
FAULT	Red	Power supply module has malfunctioned

- 4 The system On/ Off switch turns the power supply output on and off.


Related Topics

- [Removing and Installing Power Supplies, on page 76](#)
- [Troubleshooting the Power Supply Module, on page 134](#)
- [Power Supply Module, on page 21](#)
- [Power Entry Module, on page 23](#)

Power Supply Converter LEDs

The PSC includes a Status LED and an ID LED, as shown in the following figure. The different states of the LEDs are described in the following tables.

Figure 7: Power Supply Converter LED Locations

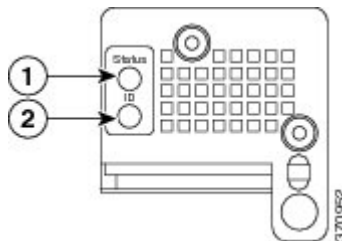

1	Status	2	ID
---	--------	---	----

Table 14: PSC Status LED and Descriptions

LED Color	Meaning
Green	The A3.3V from the module is within normal range
Red	The A3.3V from the module is not within normal range

Table 15: ID LED and Description

LED Color	Meaning
Blue	Identifies the power supply converter module in the chassis

Related Topics

[Removing and Installing the Power Supply Converter, on page 83](#)


[Power Supply Converter, on page 23](#)

Rear Panel

These rear panel components are located behind the back plate of the chassis:

- Backplane
- Clock module
- Voltage Termination-Enhanced (VTT-E) module

Figure 8: Cisco Catalyst 6807-XL Rear Panel

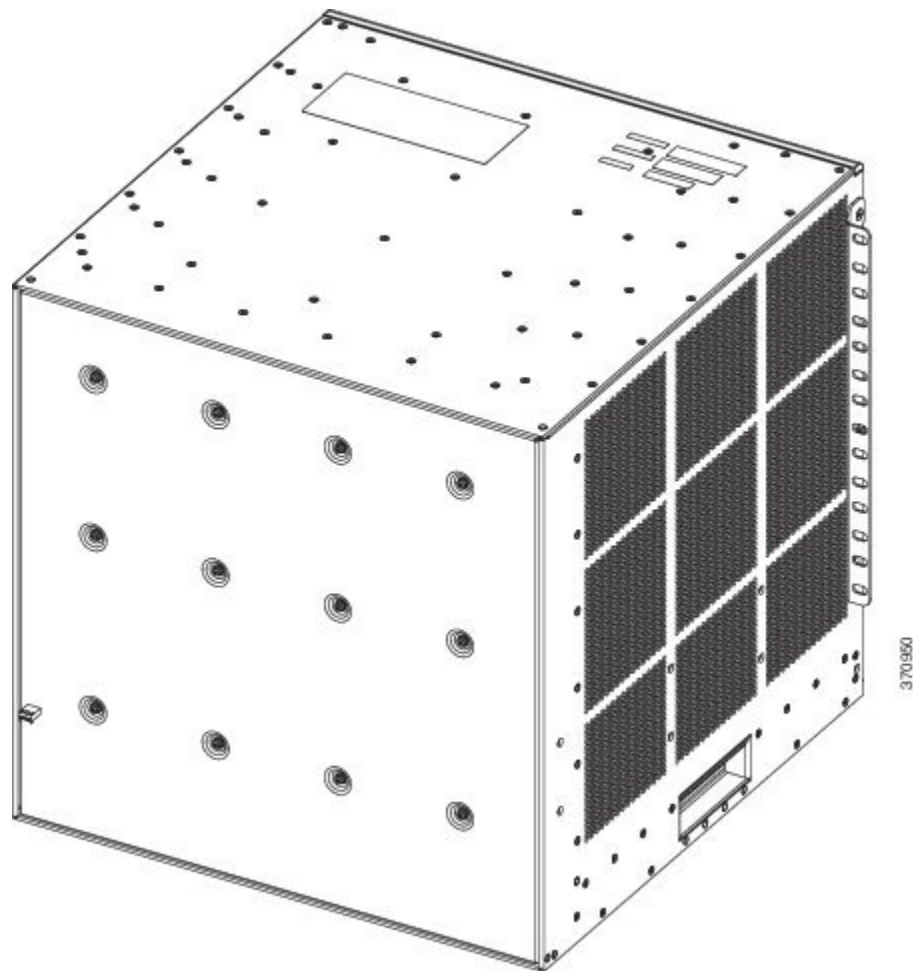

Backplane Bandwidth

The backplane supports:

- Four channels—Each module slot has four channels connected to each supervisor-engine slot (a total of eight).
- The following clock frequencies:
 - 3.13 GHz: For up to 20 Gbps (per channel)
 - 6.25 GHz: For up to 40 Gbps (per channel)
 - 7.50 GHz: For up to 55 Gbps (per channel)
 - 15.0 GHz: For up to 110 Gbps (per channel)

**Note**

The switch supports up to 220G per slot with Supervisor Engine 2T and 440G per slot with Supervisor Engine 6T. The chassis is capable of supporting up to 880G per slot.

Clock and VTT Module

The switch supports one replaceable clock card with built-in redundancy. The supported model number is CLK-7600.

Three replaceable voltage termination (VTT-E) modules, which are rear-serviceable (located behind back-plate) provide reference voltage for bus signals. The supported model number is WS-C6K-VTT-E.



CHAPTER 2

Preparing for Installation

- [Safety Warnings, page 29](#)
- [Site Requirements, page 30](#)
- [Power Requirements, page 39](#)
- [Cabling Requirements, page 40](#)
- [Rack-Mounting Guidelines, page 40](#)
- [Site Preparation Checklist, page 41](#)

Safety Warnings

Safety warnings appear throughout this publication in procedures that may harm you if you perform them incorrectly. A warning symbol precedes each warning statement. The warnings below are general warnings that are applicable to the entire publication.



Warning

Class 1 laser product. **Statement 1008**



Warning

Read the installation instructions before connecting the system to the power source. **Statement 1004**



Warning

This product relies on the building's installation for short-circuit (overcurrent) protection. Ensure that the protective device is rated not greater than: 250 V, 20 A. **Statement 1005**



Warning

This unit is intended for installation in restricted access areas. A restricted access area can be accessed only through the use of a special tool, lock and key or other means of security. **Statement 1017**

**Warning**

Only trained and qualified personnel should be allowed to install, replace, or service this equipment.

Statement 1030

Site Requirements

Planning a proper location for the switch and layout of the equipment rack or wiring closet is essential for successful system operation. These sections describe some of the basic site requirements that you should be aware of as you prepare to install your switch, including the following:

- Environmental factors can adversely affect the performance and longevity of your system.
- Install the switch in an enclosed, secure area, ensuring that only qualified personnel have access to the switch and control of the environment.
- Equipment that is placed too closely together or that is inadequately ventilated may cause system over-temperature conditions, leading to premature component failure.
- Poor equipment placement can make chassis panels inaccessible and difficult to maintain.
- The switch requires a dry, clean, well-ventilated, and air-conditioned environment.
- To ensure normal operation, maintain ambient airflow. If the airflow is blocked or restricted, or if the intake air is too warm, an over-temperature condition may occur. The switch environmental monitor may then shut down the system to protect the system components.
- Multiple switches can be rack mounted with little or no clearance above and below the chassis. However, when mounting a switch in a rack with other equipment, or when placing it on the floor near other equipment, ensure that the exhaust from other equipment does not blow into the air intake vent of the switch chassis.

Temperature

Temperature extremes may cause a system to operate at reduced efficiency and cause a variety of problems, including premature aging and failure of chips, and failure of mechanical devices. Extreme temperature fluctuations may also cause chips to become loose in their sockets. Observe the following guidelines:

- Ensure that the system is operating in an environment no colder than 50°F (10°C) or hotter than 95°F (35°C).
- Ensure that the chassis has adequate ventilation.
- Do not place the chassis within a closed-in wall unit or on top of cloth, which can act as insulation.
- Do not place the chassis where it will receive direct sunlight, particularly in the afternoon.
- Do not place the chassis next to a heat source of any kind, including heating vents.
- Adequate ventilation is particularly important at high altitudes. Make sure that all the slots and openings on the system remain unobstructed, especially the fan vent on the chassis.
- Clean the installation site at regular intervals to avoid buildup of dust and debris, which may cause a system to overheat.

- If the system has been exposed to abnormally cold temperatures, allow a 2-hour warm-up period to bring it to normal operating temperature before turning it on.

Failure to observe these guidelines may damage the chassis' internal components.

Air Flow

The switch is designed to be installed in an environment where there is a sufficient volume of air available to cool the supervisor engines, modules, and power supplies. If there are any constraints with regard to the free flow of air through the chassis, or if the ambient air temperature is elevated, the switch environmental monitor may then shut down the system to protect the system components.

To maintain proper air circulation through the switch chassis, we recommend that you maintain a minimum space of 6 inches (15 cm) between a wall and the chassis air intake or a wall and the chassis hot air exhaust. In situations where the switch chassis are installed in adjacent racks, you should allow a minimum space of 12 inches (30.5 cm) between the air intake of one chassis and the hot air exhaust of another chassis. Failure to maintain adequate spacing between chassis may cause the switch chassis that is drawing in the hot exhaust air to overheat and fail.

If you are installing your switch in an enclosed or partially enclosed rack, we strongly recommend that you verify that your site meets the following guidelines:

- Verify that there is a minimum of 6 inches (15 cm) of clearance between the sides of the rack and both the chassis air intake grill and the chassis air exhaust grill.
- Verify that the ambient air temperature within the enclosed or partially enclosed rack is within the chassis operating temperature limits. After installing the chassis in the rack, power up the chassis and allow the chassis temperature to stabilize (approximately 2 hours). Measure the ambient air temperature at the chassis air intake grill and at the chassis air exhaust grill by positioning an external temperature probe approximately 1 inch (2.5 cm) away from the grills, in line with the chassis slot occupied by a supervisor engine.
 - If the ambient intake air temperature is less than 104°F (40°C), the rack meets the intake air temperature criterion.
 - If the ambient intake air temperature exceeds 104°F (40°C), the system might experience minor temperature alarms and is in danger of overheating.
 - If the ambient intake air temperature equals or is greater than 131°F (55°C), the system will experience a major temperature alarm and shut down.
- Verify that the enclosed or partially enclosed rack allows an adequate flow of air through the switch chassis as follows:
 - If the difference between the measured intake air temperature and the exhaust air temperature does not exceed 10°C, there is sufficient airflow in the rack.
 - If the difference in air temperature exceeds 10°C, there is insufficient airflow to cool the chassis.

**Note**

Determine the 10°C temperature difference between the intake and the exhaust by taking measurements using external digital temperature probes. Do not use the chassis internal temperature sensors to measure the temperature difference.

- Plan ahead. A switch that is currently installed in an enclosed or partially enclosed rack might meet ambient air temperature and air flow requirements at present. However, if you add more chassis to the rack or more modules to a chassis in the rack, the additional heat generated might cause the ambient air temperature within the rack to exceed 104°F (40°C) and may cause minor alarms.

Related Topics

[Removing and Installing the Fan Tray, on page 80](#)

[Troubleshooting the Fan Tray, on page 135](#)

[Fan Tray LED, on page 24](#)

Selecting Rack Enclosure Cabinets

Cisco Systems has identified the following rack-enclosures that are determined to be Cisco-compatible:

Panduit Corporation

The following Panduit Corporation racks and thermal duct are recognized as compatible with the Cisco Catalyst 6807-XL switch:

- 4-Post Racks —Part numbers R4P23, R4P, and R4P36.
- Thermal Duct (fits on the above racks)—Part number R4PAE4.

Contact Panduit Corporation for further information on these racks and thermal duct systems. Their corporate website is <http://www.panduit.com>. Their Customer Service and Technical Support phone number is 800 777-3300.

Chatsworth Products, Inc.

The N-Series TeraFrame Network Gen 3 cabinet product line is compatible with the Cisco Catalyst 6807-XL switch. Several product configurations are available to support your specific datacenter airflow strategy:

- For hot and cold aisle configurations including aisle containment—Part number NF1U-113C-C42-1 (or alternate sizes).
- For a vertical exhaust-ducted configuration—Part number NF1U-114C-C62-1 (or alternate sizes).

Contact Chatsworth Products, Inc. for further information on this rack enclosure. Visit <http://www.chatsworth.com/n-series> for complete product information or visit <http://www.chatsworth.com> for general information. Their Customer Service and Technical Support phone number is 800 834-4969 (Monday to Friday, 5 a.m. to 5 p.m., (0500 to 1700) Pacific Time).

Related Topics

[Rack-Mounting Guidelines, on page 40](#)


Chassis Fan Tray

The chassis fan assembly provides cooling air for the supervisor engine and the switching modules. The fan tray supports side-to-side (right-to-left) airflow. If necessary, you can use airflow baffles or specialized data center racks to redirect the airflow exhaust to the rear. The following table describes the switch-supported fan tray models and air flow architecture and requirements.

Table 16: Air Flow Specifications and Fan Tray Support

Fan Tray Model Number	Airflow Intake	Airflow Exhaust	Air Filter Available	Air Volume
C6807-XL-FAN	Right side	Left side	No	850 CFM

Figure 9: Air Flow Direction

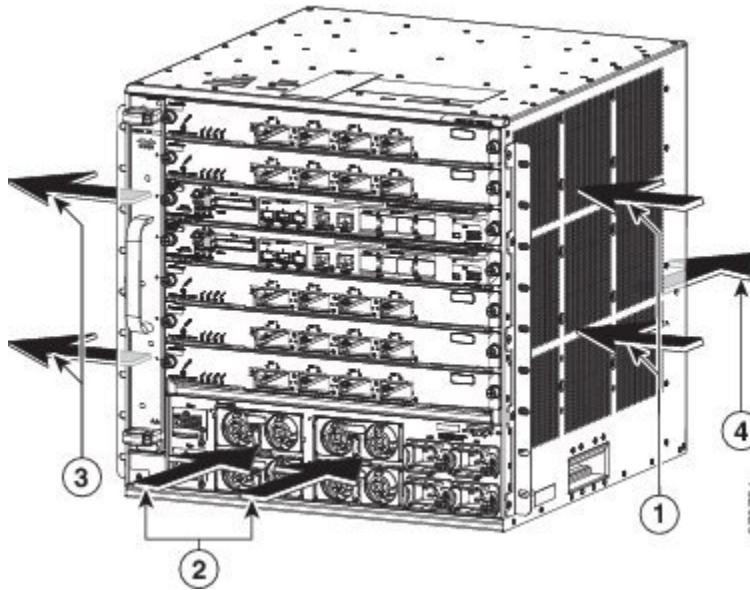

1	Module air inlet	3	Module air exhaust
2	Power supply air inlet	4	Power supply air exhaust

Humidity

High-humidity conditions may cause moisture to enter the system, and cause corrosion of internal components and degradation of properties such as electrical resistance, thermal conductivity, physical strength, and size. Extreme moisture buildup inside the system may result in electrical short circuit, which may cause serious damage to the system. Each system is rated to operate at 5 to 90 percent relative humidity, with a humidity gradation of 10 percent per hour. In storage, a system can withstand 5 to 95 percent relative humidity. Buildings in which climate is controlled by air-conditioning in the warmer months and by heat during the colder months usually maintain an acceptable level of humidity for system equipment. However, if a system is located in an unusually humid location, a dehumidifier should be used to maintain the humidity within an acceptable range.

Altitude

Operating a system at high altitude (low pressure) reduces the efficiency of forced and convection cooling and may result in electrical problems related to arcing and corona effects. This condition may also cause sealed components with internal pressure, such as electrolytic capacitors, to fail or perform at reduced efficiency. Each system is rated to operate at altitudes from -50 to 6500 feet (-16 to 1981 meters) and can be stored at altitudes of -50 to 35,000 feet (-16 to 10,668 meters).

Dust and Particles

Fans cool power supplies and system components by drawing in room-temperature air and exhausting heated air out through various openings in the chassis. However, fans also ingest dust and other particles, causing contaminant buildup in the system and increased internal chassis temperature. A clean operating environment can greatly reduce the negative effects of dust and other particles, which act as insulators and interfere with the mechanical components in the system. The standards listed below provide guidelines for acceptable working environments and acceptable levels of suspended particulate matter:

- National Electrical Manufacturers Association (NEMA) Type 1
- International Electrotechnical Commission (IEC) IP-20

Corrosion

Corrosion of system connectors is a gradual process that may eventually lead to intermittent failures of electrical circuits. The oil from a person's fingers or prolonged exposure to high temperature or humidity may corrode the gold-plated edge connectors and pin connectors on various components in the system. To prevent corrosion, avoid touching contacts on boards and cards, and protect the system from extreme temperatures and moist, salty environments.

EMI and Radio Frequency Interference

EMI and radio frequency interference (RFI) from a system can adversely affect devices such as radio and television (TV) receivers operating near the system. Radio frequencies emanating from a system can also interfere with cordless and low-power telephones. Conversely, RFI from high-power telephones can cause spurious characters to appear on the system monitor. RFI is defined as any EMI with a frequency above 10 kilohertz (kHz). This type of interference can travel from the system to other devices through the power cable and power source, or through the air in the form of transmitted radio waves. The Federal Communications Commission (FCC) publishes specific regulations to limit the amount of EMI and RFI emitted by computing equipment. Each system meets these FCC regulations. To reduce the possibility of EMI and RFI, follow these guidelines:

- Always operate the system with the chassis covers installed.
- Ensure that all chassis slots are covered by a metal filler bracket and that an unused power supply bay has a metal cover plate installed.
- Ensure that the screws on all peripheral cable connectors are securely fastened to their corresponding connectors on the back of the chassis.

- Always use shielded cables with metal connector shells for attaching peripherals to the system.

When wires are run for any significant distance in an electromagnetic field, interference can occur between the field and the signals on the wires. This fact has two implications for the construction of plant wiring:

- Bad wiring practice can result in radio interference emanating from the plant wiring.
- Strong EMI, especially when it is caused by lightning or radio transmitters, can destroy the signal drivers and receivers in the chassis, and even create an electrical hazard by conducting power surges through lines into equipment.

**Note**

To predict and provide a remedy for strong EMI, consult experts in RFI.

If you use twisted-pair cable in your plant wiring with a good distribution of grounding conductors, the plant wiring is unlikely to emit radio interference. If you exceed the recommended distances, use a high-quality twisted-pair cable with one ground conductor for each data signal when applicable.

**Caution**

Category 5e, Category 6, and Category 6a cables can store large levels of static electricity because of the dielectric properties of the materials used in their construction. Always ground the cables (especially in new cable runs) to a suitable and safe earth ground before connecting them to the module.

If the wires exceed the recommended distances, or if wires pass between buildings, give special consideration to the effect of a lightning strike in your vicinity. The electromagnetic pulse caused by lightning or other high-energy phenomena can easily couple enough energy into unshielded conductors to destroy electronic devices. If you have had problems of this sort in the past, you may want to consult experts in electrical surge suppression and shielding.

Power Source Interruptions

Systems are especially sensitive to variations in voltage supplied by the AC power source. Overvoltage, undervoltage, and transients (or spikes) can erase data from memory or even cause components to fail. To protect against these types of problems, power cables should always be properly grounded. Also, place the system on a dedicated power circuit (rather than sharing a circuit with other heavy electrical equipment). In general, do not allow the system to share a circuit with any of the following:

- Copy machines
- Air conditioners
- Vacuum cleaners
- Space heaters
- Power tools
- Teletype machines
- Laser printers
- Facsimile machines
- Any other motorized equipment

Besides these appliances, the greatest threats to a system's power supply are surges or blackouts that are caused by electrical storms. Whenever possible, turn off the system and peripherals, if any, and unplug them from their power sources during thunderstorms. If a blackout occurs—even a temporary one—while the system is turned on, turn off the system immediately and disconnect it from the electrical outlet. Leaving the system on may cause problems when the power is restored; all other appliances left on in the area may create large voltage spikes that may damage the system.

System Grounding

You must install a system ground as part of the chassis installation process. Chassis installations that rely only on the AC third-prong ground are insufficient to adequately ground the systems.

Proper grounding practices ensure that the buildings and the installed equipment within them have low-impedance connections and low-voltage differentials between chassis. When you install a system ground, you reduce or prevent shock hazards, chances of equipment damage due to transients, and the potential for data corruption.

Without proper and complete system grounding, you run the risk of increased component damage due to ESD. Additionally, you have a greatly increased chance of data corruption, system lockup, and frequent system reboot situations by not using a system ground.



Caution

Installations that rely solely on system grounding that uses only an AC third-prong ground run a substantially greater risk of equipment problems and data corruption than those installations that use both the AC third-prong ground and a properly installed system ground.

The following table lists some general grounding practice guidelines.

Table 17: Grounding Practice Guidelines

Environment	Electromagnetic Noise Severity Level	Grounding Recommendations
Commercial building is subjected to direct lightning strikes. For example, some places in the United States, such as Florida, are prone to more lightning strikes than other areas.	High	All lightning protection devices must be installed in strict accordance with manufacturer recommendations. Conductors carrying lightning current should be spaced away from power and data lines in accordance with applicable recommendations and codes. Best grounding practices must be closely followed.
Commercial building is located in an area where lightning storms occur frequently, but is not prone to direct lightning strikes.	High	Best grounding practices must be closely followed.
Commercial building contains a mix of information technology equipment and industrial equipment, such as welding.	Medium to High	Best grounding practices must be closely followed.

Environment	Electromagnetic Noise Severity Level	Grounding Recommendations
Existing commercial building is not subject to natural environmental noise or man-made industrial noise. This building contains a standard office environment. This installation has a history of malfunction due to electromagnetic noise.	Medium	Best grounding practices must be closely followed. Determine source and cause of noise if possible, and mitigate as closely as possible at the noise source or reduce coupling from the noise source to the victim equipment.
New commercial building is not subject to natural environmental noise or man-made industrial noise. This building contains a standard office environment.	Low	Best grounding practices should be followed as closely as possible. Electromagnetic noise problems are not anticipated, but installing a best-practice grounding system in a new building is often the least expensive route, and the best way to plan for the future.
Existing commercial building is not subject to natural environmental noise or man-made industrial noise. This building contains a standard office environment.	Low	Best grounding practices should be followed as much as possible. Electromagnetic noise problems are not anticipated, but installing a best-practice grounding system is always recommended.



Note

In all situations, grounding practices must comply with Section 250 of the National Electric Code (NEC) requirements or local laws and regulations. A 6 AWG grounding wire is preferred from the chassis to the rack ground or directly to the common bonding network (CBN). The equipment rack should also be connected to the CBN with a 6 AWG grounding wire.



Note

Always ensure that all of the modules are completely installed and that the captive installation screws are fully tightened. In addition, ensure that all the I/O cables and power cords are properly seated. These practices are normal installation practices and must be followed in all installations.



Caution

Category 5e, Category 6, and Category 6a cables can store large levels of static electricity because of the dielectric properties of the materials used in their construction. Always ground the cables (especially in new cable runs) to a suitable and safe earth ground before connecting them to the module.

Maintaining Safety with Electricity

When working on electrical equipment, follow these guidelines:

- Do not work alone if potentially hazardous conditions exist anywhere in your work space.

- Never assume that power is disconnected from a circuit; always check the circuit before working on it.
- Look carefully for possible hazards in your work area, such as damp floors, ungrounded power extension cables, frayed or damaged power cords, and missing safety grounds.
- If an electrical accident occurs, proceed as follows:
 - Use extreme caution; do not become a victim yourself.
 - Disconnect power from the system.
 - If possible, send another person to get medical aid. Otherwise, assess the condition of the victim and then call for help.
 - Determine if the person needs rescue breathing or external cardiac compressions; then take appropriate action.
- Use the product within its marked electrical ratings and product usage instructions.
- Install the product in compliance with local and national electrical codes.
- If any of the following conditions occur, contact the Cisco Technical Assistance Center:
 - The power cable or plug is damaged.
 - An object has fallen into the product.
 - The product has been exposed to water or other liquids.
 - The product has been dropped or shows signs of damage.
 - The product does not operate correctly when you follow the operating instructions.
- Use the correct external power source. Operate the product only from the type of power source indicated on the electrical ratings label. If you are not sure of the type of power source required, consult the Cisco Technical Assistance Center or a local electrician.
- Use approved power cables only. You have been provided with one or more power cables with your chassis power supply that are intended for use in your country, based on the shipping location. Should you need to purchase additional power cables, ensure that they are rated for the product and for the voltage and current marked on the product's electrical ratings label. The voltage and current rating of the power cable should be greater than the ratings marked on the label.
- To help prevent electrical shock, plug all the power cables into properly grounded electrical outlets. These power cables are equipped with three-prong plugs to ensure proper grounding. Do not use adapter plugs or remove the grounding prong from a power cable.
- Observe power strip ratings. Make sure that the total current rating of all products that are plugged into the power strip does not exceed 80 percent of the power strip rating.
- Do not modify power cables or plugs yourself. Consult with a licensed electrician or your power company for site modifications. Always follow your local and national wiring codes.

Preventing Electrostatic Discharge Damage

Electrostatic discharge (ESD) damage may occur when modules or other FRUs are improperly handled, and result in intermittent or complete failure of the modules or FRUs. Modules consist of printed circuit boards

that are fixed in metal carriers. EMI shielding and connectors are integral components of a carrier. Although the metal carrier helps to protect the board from ESD, always use an ESD-grounding strap when handling modules. To prevent ESD damage, follow these guidelines:

- Always use an ESD wrist strap and ensure that it has maximum contact with bare skin. ESD grounding straps are available with banana plugs, metal spring clips, or alligator clips. The chassis is equipped with a banana plug connector (identified by the ground symbol next to the connector) on the front panel.
- If you choose to use the disposable ESD wrist strap supplied with most FRUs or an ESD wrist strap equipped with an alligator clip, you must attach the system ground lug to the chassis in order to provide a proper grounding point for the ESD wrist strap.

Related Topics

[Establishing System Ground, on page 68](#)

[Attaching an ESD Strap, on page 70](#)

Power Requirements

Power supplies installed on the switch chassis must be AC input only. When preparing your site for switch installation, adhere to these requirements:

- In systems configured with more than one power supply, connect each of the power supplies to a separate input power source. If you fail to do this, your system might be susceptible to total power failure due to a fault in the external wiring or a tripped circuit breaker.
- To prevent loss of input power, be sure that the total maximum load on each source circuit is within the current ratings of the wiring and breakers.
- In some systems, you may decide to use an uninterruptible power supply (UPS) to protect against power failures at your site. Be aware when selecting a UPS that some UPS models that use ferroresonant technology may become unstable when operating with the switch power supplies that use power factor correction. This may cause the output voltage waveform to the switch to become distorted, resulting in an undervoltage situation in the system.
- The AC-input power supply has a detachable power cord.
- Each chassis power supply should have a separate, dedicated branch circuit.
 - North America—the 1300 W and 3000 W power supplies require a 20 A circuit.
 - International—Circuits should be sized according to local and national codes.
- If you are using a 200 or 240 VAC power source in North America, the circuit must be protected by a two-pole circuit breaker.
- The source AC outlet must be within 6 feet (1.8 meters) of the system, and should be easily accessible.
- The AC power receptacles used to plug in the chassis must be the grounding type. The grounding conductors that connect to the receptacles should connect to protective earth ground at the service equipment level.

Cabling Requirements

When running power and data cables together in overhead cable trays or subfloor cable trays, be aware of the following caution:



Caution

We strongly recommend that power cabling runs and other potential noise sources be located as far away as practical from LAN cabling that terminates on Cisco equipment. In situations where this type of long parallel cable runs exist and cannot be separated by at least 3.3 feet (1 meter), we recommend that you shield these potential noise sources. To avoid interference, the source should be shielded by housing it in a grounded metallic conduit.

Also be aware of the following caution concerning the use of Category 5e and Category 6 Ethernet cables:



Caution

Category 5e, Category 6, and Category 6a cables can store large levels of static electricity because of the dielectric properties of the materials used in their construction. Always ground the cables (especially in new cable runs) to a suitable and safe earth ground before connecting them to the module.

Rack-Mounting Guidelines

The Cisco Catalyst 6807-XL Switch is designed to be installed in both open and enclosed racks. The switch can be installed on 19-inch equipment racks. If you are using a 2-post or 4-post 19-inch standard equipment rack, before rack-mounting the switch, ensure that the equipment rack complies with these guidelines:

- The width of the rack, measured between the two front-mounting rails, must be one of the following measurements:
 - 17.5 inches (44.45 cm)
 - 17.75 inches (45.09 cm)
- The depth of the rack, measured between the front-mounting and rear-mounting strips, must be at least 17.61 inches (44.72 cms).
- The rack must have sufficient clearance in terms of height and depth, to insert the chassis. The chassis height is 17.5 inches (44.45 cms).



Note

Chassis height is sometimes measured in rack units (RU or just U) where 1 RU or 1 U equals 1.75 inches (44.45 mm). A typical server rack is 42 RU or 42 U in height. The Cisco Catalyst 6807-XL Switch chassis is 10 RU in height.

You can also use a center rack-mount kit for 23-inch, telco-style racks. The kit is not included in the accessory kit, but can be ordered separately (Part number C6800-XL-CNTR-MNT=). Installation instructions are included with the kit.



Caution

If the rack is on wheels, ensure that the brakes are engaged and that the rack is stabilized.



Warning

Stability hazard. The rack stabilizing mechanism must be in place, or the rack must be bolted to the floor before you slide the unit out for servicing. Failure to stabilize the rack can cause the rack to tip over. Statement 1048



Warning

To prevent bodily injury when mounting or servicing this unit in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety:

- This unit should be mounted at the bottom of the rack if it is the only unit in the rack.
- When mounting this unit in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack. Statement 1006



Note

The chassis are designed to be mounted in equipment racks that meet ANSI/EIA 310-D and ETS 300-119 standards.



Note

To maintain proper air circulation through the Catalyst switch chassis, we recommend that you maintain a minimum 6-inch (15-cm) separation between a wall and the chassis air intake or a wall and the chassis air exhaust. You should also allow a minimum separation of 12 inches (30.5 cm) between the hot air exhaust on one chassis and the air intake on another chassis. Failure to maintain adequate air space can cause the chassis to overheat and the system to fail. On Catalyst switch chassis in which the airflow is from front to back, you can place the chassis side-by-side.

Related Topics

[Selecting Rack Enclosure Cabinets, on page 32](#)

[Accessory Kit, on page 47](#)

Site Preparation Checklist

The following table lists the site-planning activities that you should perform prior to installing the switch. Completing each activity helps ensure a successful switch installation.

Table 18: Site Preparation Checklist

Task No.	Activity	Verified By	Time	Date
1	Space evaluation <ul style="list-style-type: none"> • Space and layout • Floor covering • Impact and vibration • Lighting • Maintenance access 			
2	Environmental evaluation <ul style="list-style-type: none"> • Ambient temperature • Humidity • Altitude • Atmospheric contamination • Airflow 			
3	Power evaluation <ul style="list-style-type: none"> • Input power type • Power receptacles (Depends on power supply)⁵ • Receptacle proximity to the equipment. • Dedicated (separate) circuits for redundant power supplies. • UPS for power failures⁶ 			
4	Grounding evaluation <ul style="list-style-type: none"> • Circuit breaker size • CO ground (AC powered systems) 			
5	Cable and interface equipment evaluation <ul style="list-style-type: none"> • Cable type • Connector type • Cable distance limitations • Interface equipment (transceivers) 			

Task No.	Activity	Verified By	Time	Date
6	EMI evaluation <ul style="list-style-type: none"> • Distance limitations for signaling • Site wiring • RFI levels 			

- 5 Verify that each power supply installed in the chassis has a dedicated AC source circuit.
- 6 Refer to the power supply VA rating as a sizing criteria in determining the output required by the UPS. The power supply kVA rating value is listed in the specifications table for each power supply in Appendix A (power supply specifications).



Installing the Switch

- [Installation Tasks](#) , page 45
- [Accessory Kit](#), page 47
- [Unpacking the Switch](#), page 48
- [L Brackets on the Chassis](#), page 49
- [Installing the Rack-Mount Shelf Kit](#), page 50
- [Rack-Mounting the Chassis](#), page 63
- [Establishing System Ground](#), page 68
- [Attaching an ESD Strap](#), page 70
- [Verifying the Switch Chassis Installation](#), page 72
- [Connecting the Supervisor Engine Console Port](#) , page 73
- [Installing Transceivers and Module Connectors](#), page 74

Installation Tasks

The process of installing the switch can be broken down into a series of tasks described in the following table:

Table 19: Installation Tasks

Task	Description
Unpacking the switch	Remove the switch from the packaging material. Note We recommend that you save the packaging material for use later if you have to move the chassis.
Installing the rack-mount shelf kit	Install the rack-mount shelves before you install the chassis in the rack. The shelf brackets help support the weight of the chassis.
Rack-mounting the chassis	Install the chassis in a standard 19-inch rack, either open or enclosed.

Task	Description
Connecting the chassis to system ground	Construct and attach a system ground wire from the building (earth) ground to the system ground point on the chassis.
Installing the supervisor engine and line cards and cabling them to the network	<p>Modules that you order with the chassis are installed on the chassis when delivered. Blank faceplates are installed on empty module slots.</p> <ul style="list-style-type: none"> • For the list of supported devices, see <ul style="list-style-type: none"> • Supervisor Engine, on page 3 • Modules supported by Supervisor Engine 2T, on page 11 • Modules supported by Supervisor Engine 6T, on page 19 • For detailed installation instructions, see the <i>Catalyst 6500 Series Switch Supervisor Engine Guide</i> and the <i>Catalyst 6500 Ethernet Module Installation Guide</i> available on Cisco.com.
Installing power supplies	<p>PSMs that you order with the chassis are installed on the chassis when delivered. Blank faceplates are installed on empty power supply module slots.</p> <p>For more information, see the chapter "Removing and Installing Power Supplies, on page 76".</p>
Installing the fan tray	<p>The fan tray that you order with the chassis is installed on the chassis when delivered.</p> <p>For more information, see the chapter "Removing and Installing the Fan Tray, on page 80".</p>
Powering up the chassis	After completing the network cabling and making sure that system ground is connected, the power supplies can be turned on. The system powers up and runs through a set of built-in diagnostics.

These warnings apply to the overall switch installation process:


Warning

Class 1 laser product. Statement 1008


Warning

This unit is intended for installation in restricted access areas. A restricted access area can be accessed only through the use of a special tool, lock and key, or other means of security. Statement 1017


Warning

This unit might have more than one power supply connection. All connections must be removed to de-energize the unit. Statement 1028

**Warning**

Only trained and qualified personnel should be allowed to install, replace, or service this equipment. Statement 1030

**Warning**

To prevent personal injury or damage to the chassis, never attempt to lift or tilt the chassis using the handles on modules (such as power supplies, fans, or cards); these types of handles are not designed to support the weight of the unit. Statement 1032

**Warning**

Hazardous voltage or energy is present on the backplane when the system is operating. Use caution when servicing. Statement 1034

**Warning**

Ultimate disposal of this product should be handled according to all national laws and regulations. Statement 1040

**Warning**

This equipment must be installed and maintained by service personnel as defined by AS/NZS 3260. Incorrectly connecting this equipment to a general-purpose outlet could be hazardous. The telecommunications lines must be disconnected 1) before unplugging the main power connector or 2) while the housing is open, or both. Statement 1043

**Warning**

This product requires short-circuit (overcurrent) protection, to be provided as part of the building installation. Install only in accordance with national and local wiring regulations. Statement 1045

**Warning**

When installing or replacing the unit, the ground connection must always be made first and disconnected last. Statement 1046

**Warning**

Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments. Statement 1051

**Warning**

Installation of the equipment must comply with local and national electrical codes.. Statement 1074

Accessory Kit

Each Cisco Catalyst 6807-XL Switch chassis ships with an accessory kit. The following are shipped as part of the accessory kit:

- Standard 19-inch rack-mount L brackets—The L brackets are factory installed on the left-front and right-front of the chassis. Associated rack-mounting hardware is included in the kit .
Depending on the manufacturer, the rack posts might be prethreaded to accept either 10-32 or 12-24 screws. If the rack posts are not prethreaded, install 10-32 or 12-24 clip nuts or cage nuts to secure the rack-mount screws. The clip nuts or cage nuts are not included as part of the accessory kit; you must obtain them on your own.
- Rack-mount shelf kit—This kit is used to support the weight of the chassis while you secure the chassis L brackets to the rack enclosure. It consists of two shelf brackets and a crossbar.
- Two 9-slot cable management guides—The cable guides can be installed on the front of the chassis using the same sets of screws that secure the chassis rack-mount brackets to the rack posts.
- Power supply and module blank panels—The power supply and module blank panels must be installed on any unused power supply bays or module slots to maintain chassis airflow and EMI shielding.
- Right-angled grounding lug and disposable ESD wrist strap and clip.
- Screws

Table 20: Types of Screws Shipped with the Accessory Kit

Type	Quantity
12-24 x 0.75mm	22
10-32 x 0.75mm	22
M4 x 5mm	2

Related Topics

[Rack-Mounting Guidelines, on page 40](#)

Unpacking the Switch



Tip

Do not discard the shipping container when you unpack the switch. Flatten the shipping cartons and store them with the pallet. You will require these containers if you have to move or ship the switch in the future. For repacking instructions, see [Repacking the Switch, on page 129](#).


To check the contents of the shipping container, perform the following:

- Check the contents of the accessory kit. Verify that you have received all the listed equipment, including any optional equipment you may have ordered, such as, network interface cables, transceivers, or special connectors.
- Check the modules in each slot. Ensure that the configuration matches the packing list and that all of the specified interfaces are included.

L Brackets on the Chassis

The switch chassis is shipped with two L brackets installed on the front sides of the chassis. The L brackets are secured to the chassis with eight M4 x 5mm flat-head screws (four on each side).

Figure 10: L Brackets on the Chassis

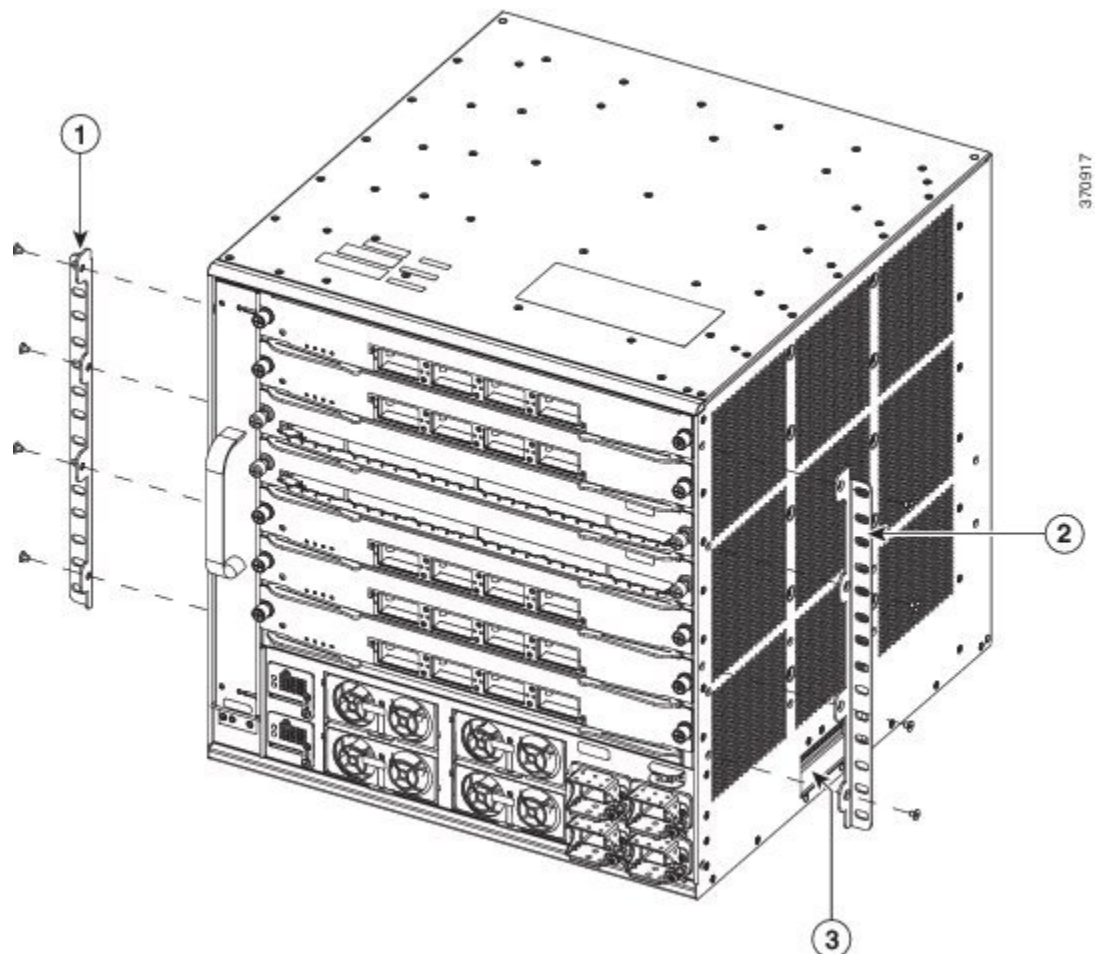

1	Left L bracket.	3	Handhold
2	Right L bracket.		

The L brackets should be installed in this position whether you perform a front rack-mount or a rear rack-mount.

Installing the Rack-Mount Shelf Kit

The rack-mount shelf kit is part of the accessory kit. Install this kit before you install the chassis in the rack. The shelf brackets attach directly to the rack and help support the weight of the chassis while you secure the L brackets to the rack enclosure.

Table 21: Rack-Mount Kit Contents and Description

Part	Quantity	Description
Shelf bracket	2	Is attached to the rack posts to form a shelf for the switch chassis to rest on.
Cross Bar	1	Is attached between the two side shelf brackets to secure them together.
12-24 x 0.75-inch Phillips binding head screw	8	Secures the shelf brackets to a rack that requires 12-24 screws (Four for each L bracket).
10-32 x 0.75-inch Phillips binding head screw	8	Secures the shelf brackets to a rack that requires 10-32 screws (Four for each L bracket).
M4 x 5 mm flat-head screw	2	Secures the cross bar with shelf brackets.



Note

- This rack-mount shelf kit is not suitable for use with racks that have obstructions (such as power strips) because the obstructions could impair access to switch FRUs.
- On many older equipment racks, the rack posts are prethreaded to accept either 10-32 or 12-24 screws. Newer rack enclosure posts might not be prethreaded. These rack-enclosure posts require that you install 10-32 or 12-24 clip nuts or cage nuts to secure the rack-mount screws. The clip nuts or cage nuts are not included as part of the accessory kit and must be obtained on your own.

Determine the clearance between the insides of the left and right rails of your rack system and install the shelf brackets accordingly.

Installing Shelf Brackets and Crossbar in a Four-Post Rack with 17.5-inch (44.45 cm) Opening



Important

You have to rear-mount the shelf brackets and the crossbar in a rack with a 17.5-inch rail-to-rail opening.

Perform these steps:

Before You Begin


You will require:

- Number 1 and Number 2 Phillips screwdrivers
- 3/16-inch flat-blade screwdriver
- Tape measure and level

Procedure

Step 1 Secure the crossbar to the shelf brackets by using two M4 screws, with one screw on each side.

Figure 11: Securing the crossbar to the shelf brackets

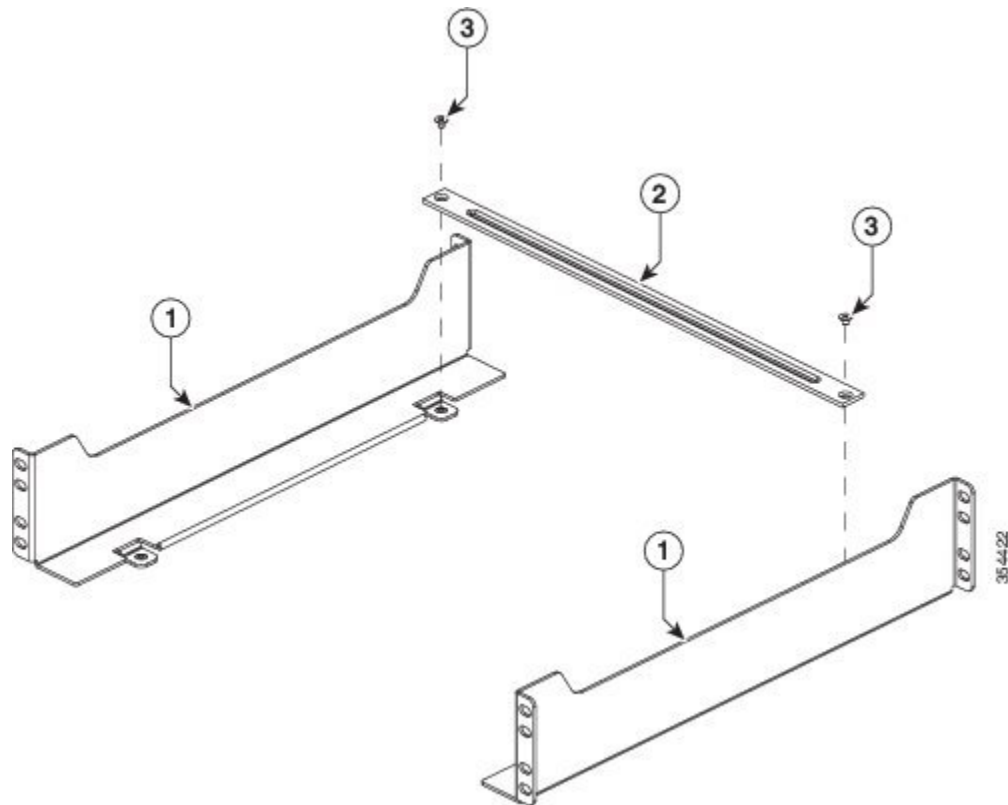


1	Shelf brackets	3	M4 x 5 mm flat-head screw
2	Crossbar		

Step 2 Position the front side of the support flanges of the shelf brackets on the fixed front-left and front-right posts of the rack and secure them by using the four EA screws (Two EA screws on each side).

Note Ensure that the crossbar attached to the shelf brackets is on the rear side of the rack post.

Figure 12: Installing Shelf Brackets and Crossbar in a 17.5-inch Opening

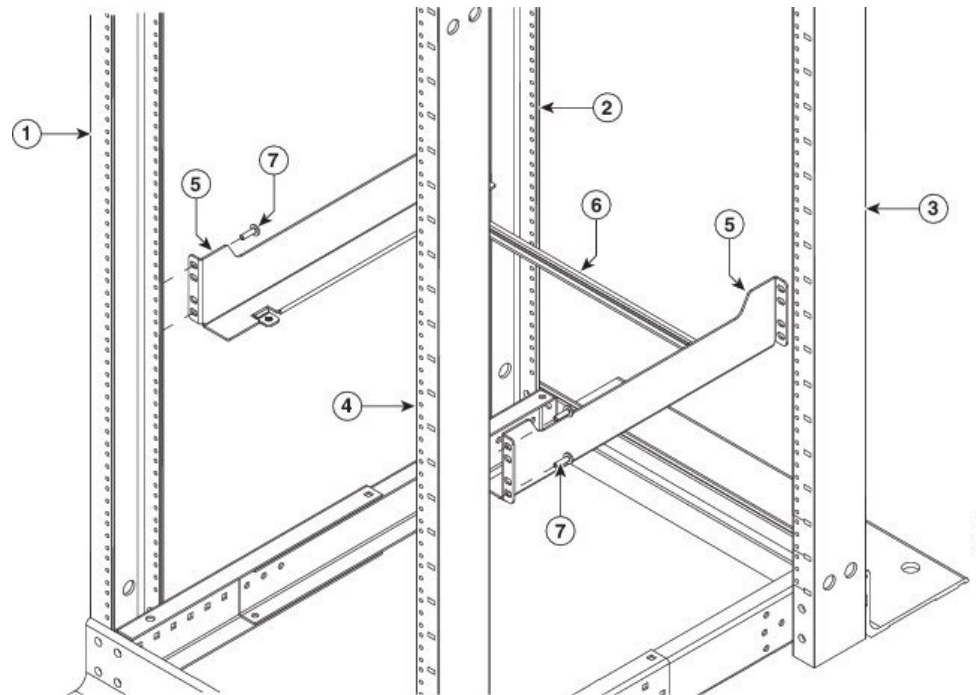

1	Fixed front-left rack post	5	Shelf brackets
2	Adjustable rear-left rack post	6	Crossbar
3	Adjustable rear-right rack post	7	Two EA screws
4	Fixed front-right rack post		

Step 3 Adjust the adjustable rear-left and rear-right rack posts until it touches the shelf brackets flange surface and secure by using four EA screws, two EA screws on each side.

Note We recommend to assemble the shelf brackets rear flanges with rear rack posts by using four EA screws (two EA screws on each side) to avoid the shelf brackets from overhanging at the ends.

Figure 13: Before adjusting the rear rack posts


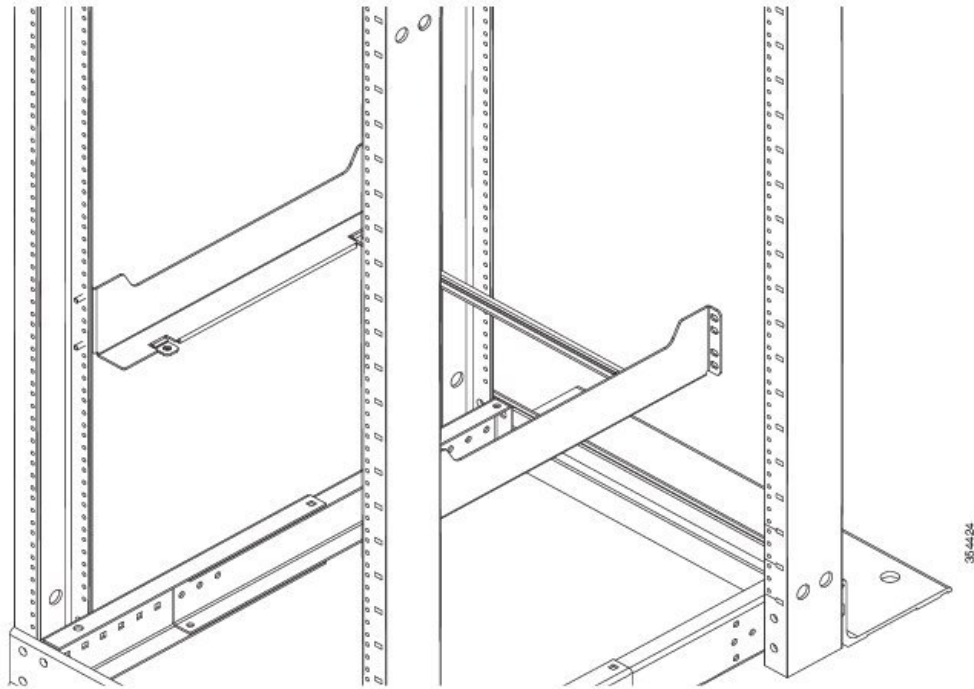


Figure 14: After adjusting the rear rack posts



Installing Shelf Brackets and Crossbar in a Four-Post Rack with 17.75 inch (45.09 cm) Opening

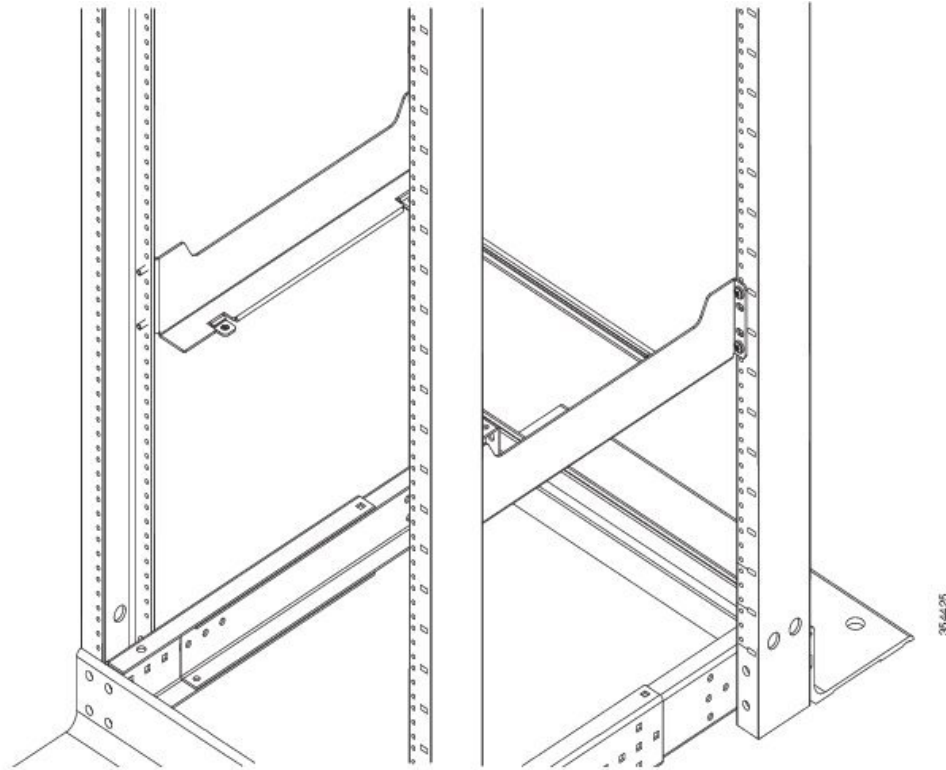

Important You have to front-mount the shelf brackets and crossbar on a rack with a 17.75-inch rail-to-rail opening.

Perform these steps:

Before You Begin


You will require:

- Number 1 and Number 2 Phillips screwdrivers
- 3/16-inch flat-blade screwdriver
- Tape measure and level

Procedure

- Step 1** Secure the crossbar to the shelf brackets by using two M4 screws, with one screw on each side.

Figure 15: Securing the crossbar to the shelf brackets

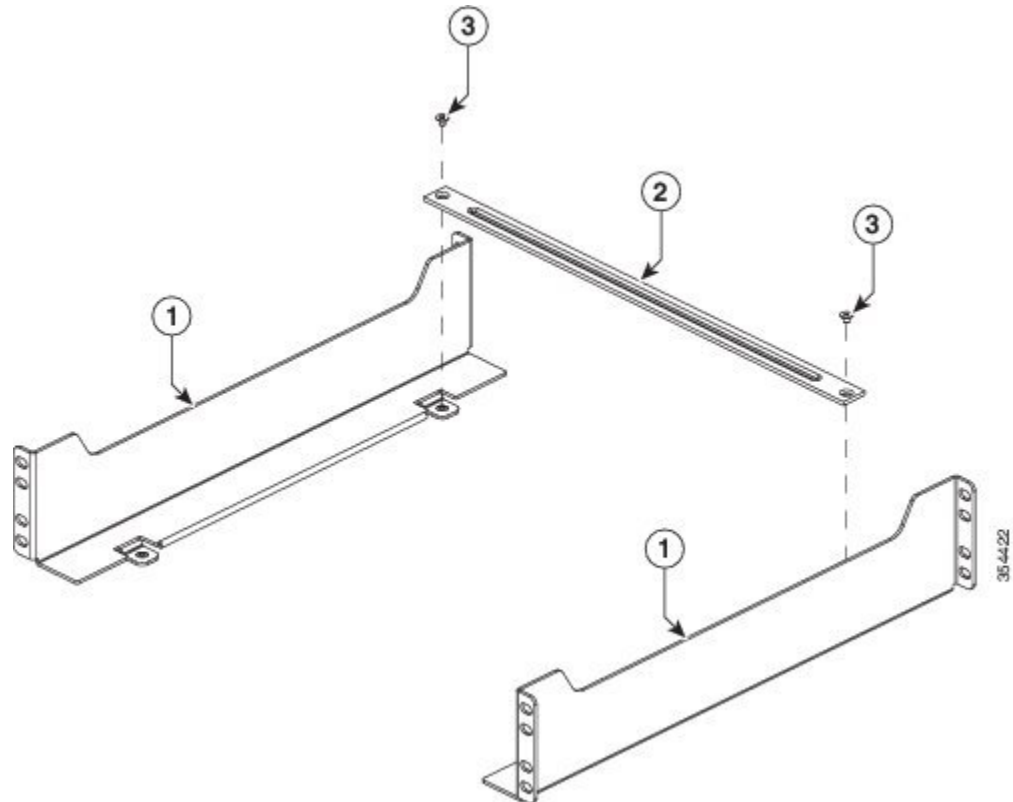


1	Shelf brackets	3	M4 x 5 mm flat-head screw
2	Crossbar		

- Step 2** Position the rear side of the support flanges of the shelf brackets on the front side of the fixed front-left and front-right posts of the rack. Align and secure the bracket to the rack by using the four EA screws (Two EA screws on each side).

Note Ensure that the crossbar attached to the shelf brackets is on the rear side of the rack post.

Figure 16: Installing Shelf Brackets and Crossbar in a 17.5-inch Opening

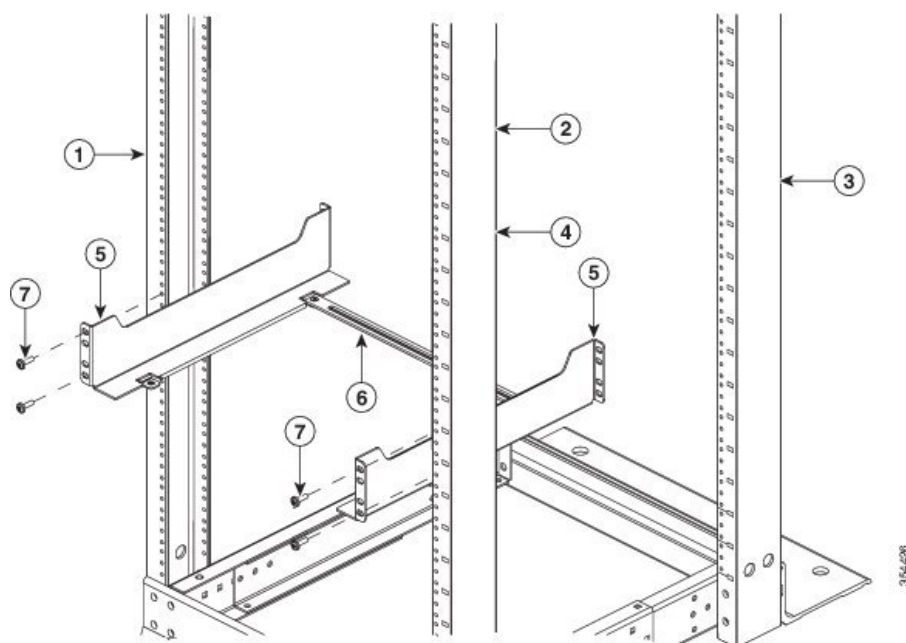

1	Fixed front-left rack post	5	Shelf brackets
2	Fixed front-right rack post	6	Crossbar
3	Adjustable rear-right rack post	7	Two EA screws
4	Adjustable rear-left rack post		

Step 3 Adjust the adjustable rear-left and rear-right rack posts until it touches the shelf brackets flange surface and secure by using four EA screws, with two EA screws on each side.

Note We recommend to assemble the shelf brackets rear flanges with rear rack posts by using the four EA screws (two EA screws on each side) to avoid the shelf brackets from overhanging at the ends.

Figure 17: Before adjusting the rear rack posts


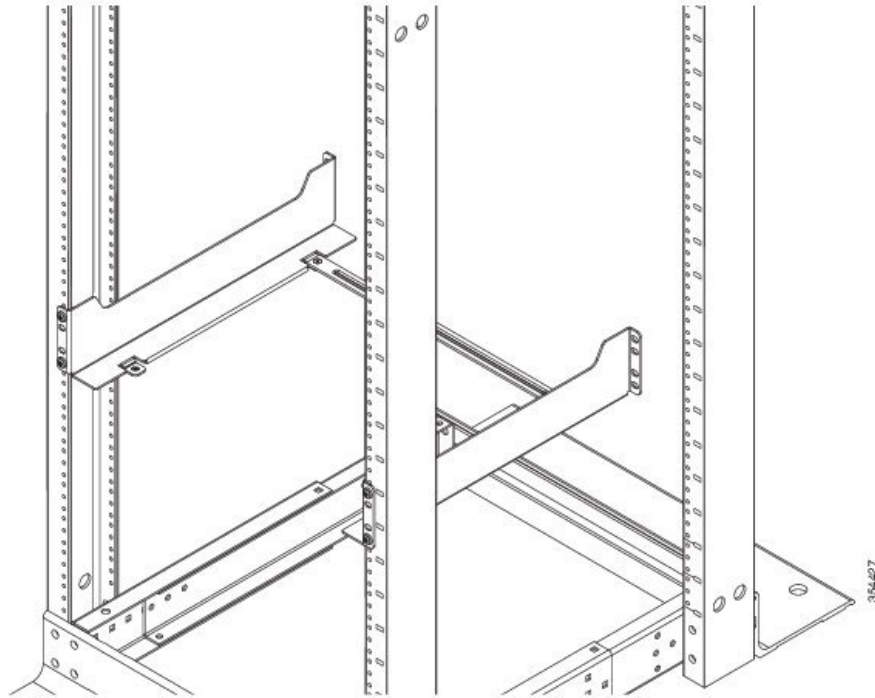


Figure 18: After adjusting the rear rack posts



Installing Shelf Brackets and Crossbar in a Two-Post Rack with 17.5-inch (44.45 cm) Opening

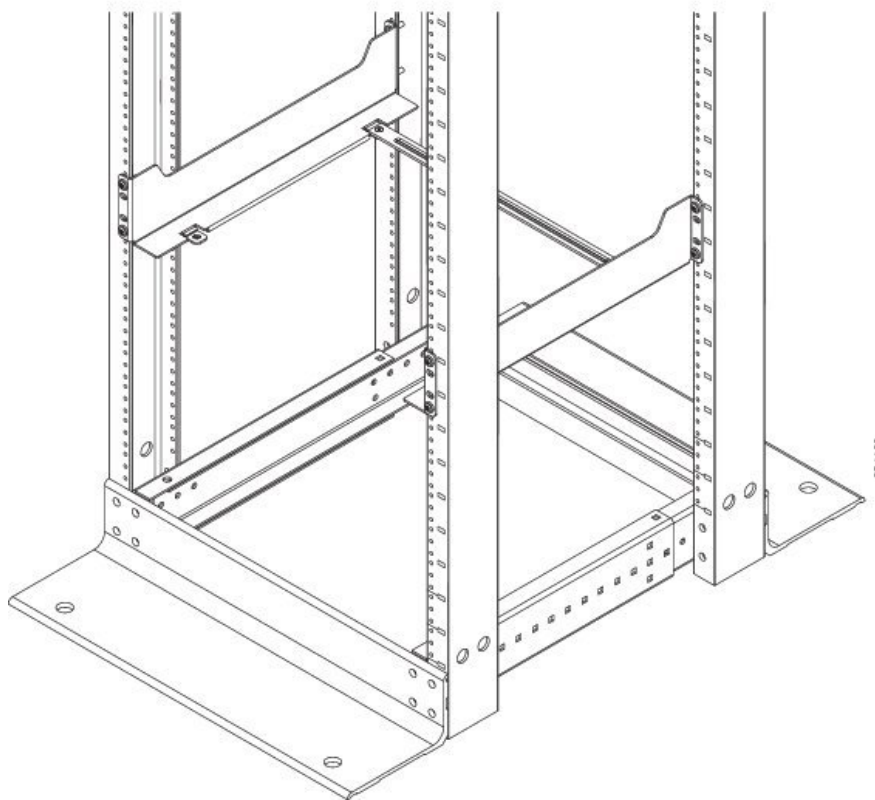

Important You have to rear-mount the shelf brackets and the crossbar for a rack with a 17.5-inch rail-to-rail opening.

Perform these steps:

Before You Begin


You will require:

- Number 1 and Number 2 Phillips screwdrivers
- 3/16-inch flat-blade screwdriver
- Tape measure and level

Procedure

- Step 1** Secure the crossbar to the shelf brackets by using two M4 screws, with one screw on each side.

Figure 19: Securing the crossbar to the shelf brackets

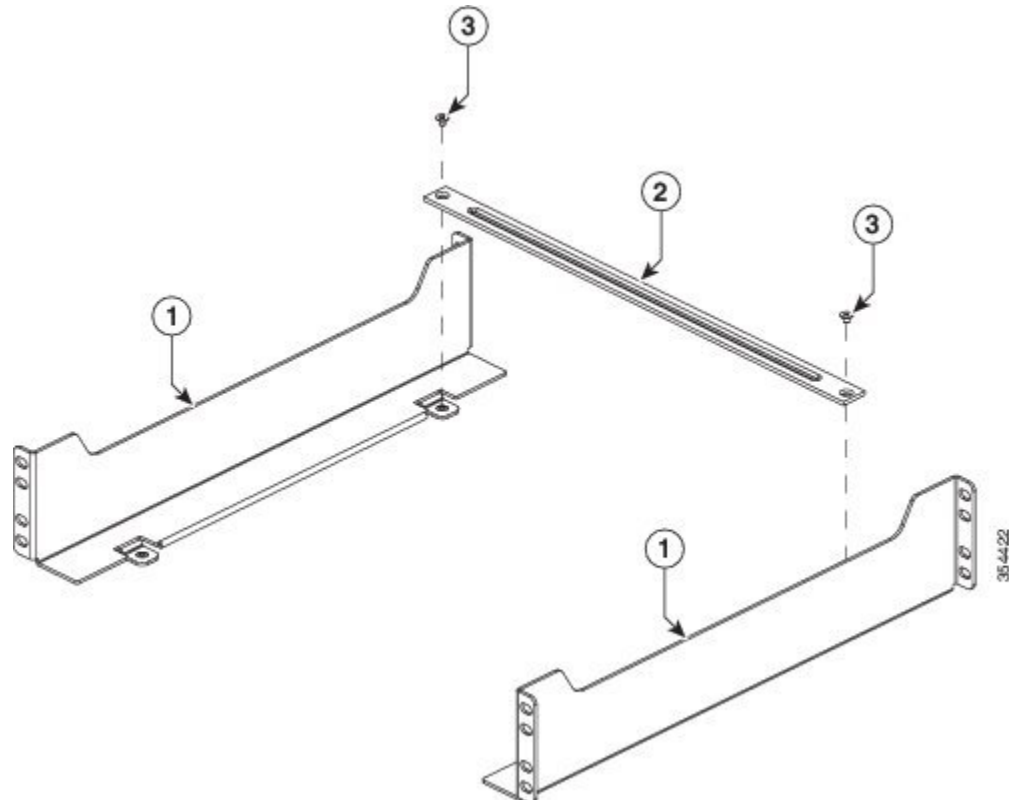


1	Shelf brackets	3	M4 x 5 mm flat-head screw
2	Crossbar		

- Step 2** Position the front side of the support flanges of the shelf brackets on the rear side of the left and the right posts of the rack. Align and secure the bracket to the rack by using the eight EA screws (four EA screws on each side).

Note Ensure that the crossbar attached to the shelf brackets is on the rear side of the rack post.

Figure 20: Installing Shelf Brackets and Crossbar in a Two-Post Rack with 17.5-inch Opening

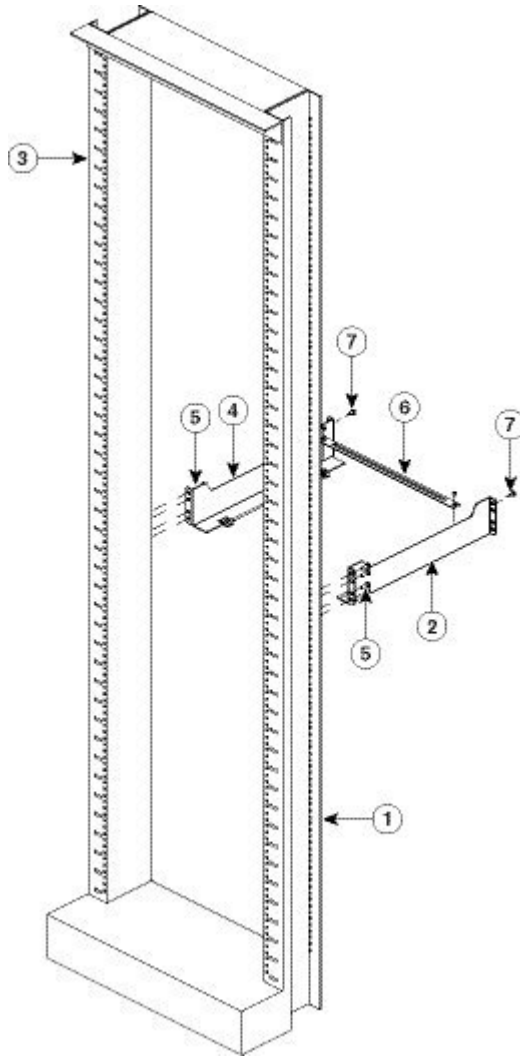

1	Right rail	4	Crossbar
2	Left rail	5	Four EA screws on each side, to secure the shelf brackets to the rack
3	Shelf brackets		

Installing Shelf Brackets and Crossbar in a Two-Post Rack with 17.75 inch (45.09 cm) Opening



Important You have to front-mount the shelf brackets and crossbar in a rack with a 17.75-inch rail-to-rail opening.

Perform these steps:

Before You Begin


You will require:

- Number 1 and Number 2 Phillips screwdrivers
- 3/16-inch flat-blade screwdriver
- Tape measure and level

Procedure

- Step 1** Secure the crossbar to the shelf brackets by using two M4 screws, with one screw on each side.


Figure 21: Securing the crossbar to the shelf brackets

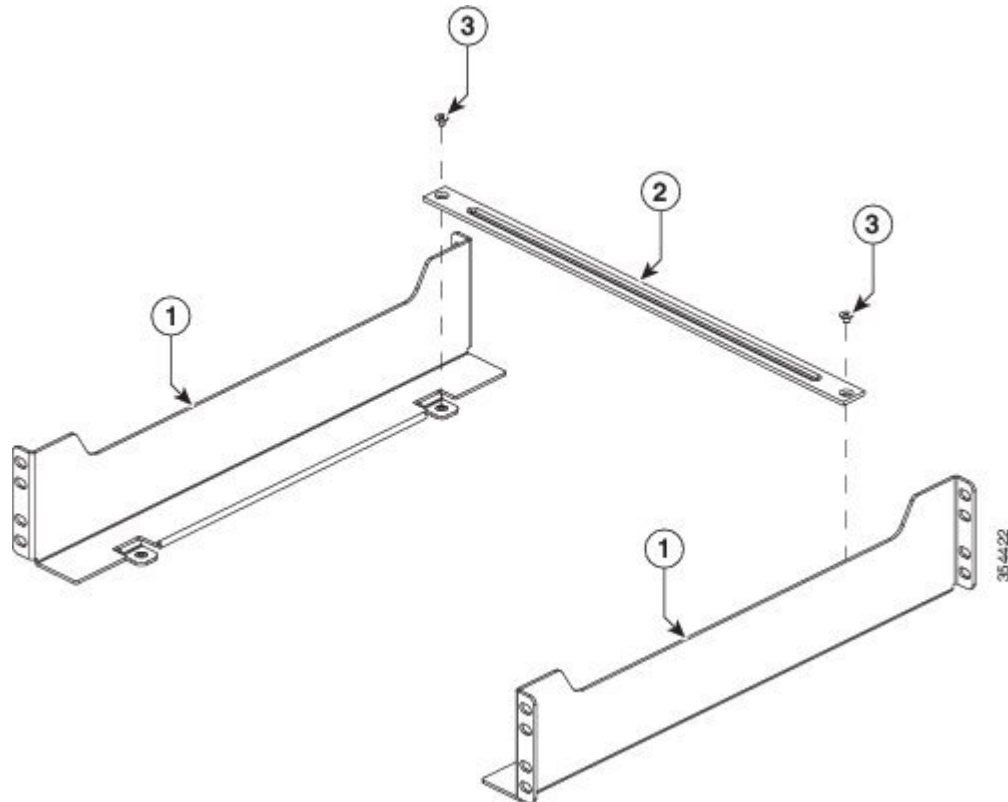

1	Shelf brackets	3	M4 x 5 mm flat-head screw
2	Crossbar		

Step 2 Position the rear side of the support flanges of the shelf brackets on the front side of the left and the right posts of the rack. Align and secure the bracket to the rack by using the four EA screws (two EA screws on each side).

Figure 22: Installing Shelf Brackets and Crossbar in a 17.75-inch Opening

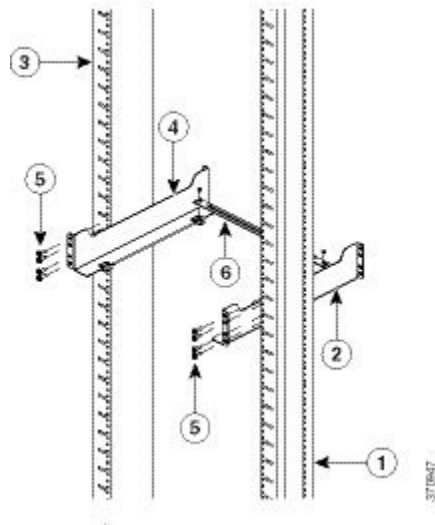

1	Right rail	4	Crossbar
2	Left rail	5	Four EA screws on each side, to secure the shelf bracket to the rack
3	Shelf brackets		

Rack-Mounting the Chassis

Warning

Two people are required to lift the chassis. To prevent injury, keep your back straight and lift with your legs, not your back. Statement 164

Tip

We recommend that you have a third person to assist in this procedure.

To install the switch chassis in the equipment rack, perform these steps:

Before You Begin

- Read the [Rack-Mounting Guidelines](#), on page 40.
- Install the rack-mount shelf kit. See [Installing the Rack-Mount Shelf Kit](#), on page 50.

Procedure

- Step 1** With a person standing at each side of the chassis, insert one hand into the handhold groove and the other hand near the back of the chassis for balance. Slowly lift the chassis. Avoid sudden twists or moves to prevent injury.
- Step 2** Rest the back end of the chassis on the edges of the rack-mount shelf kit rails and carefully slide the chassis fully into the rack.
- Step 3** Locate the rack post holes that align with the chassis L bracket holes. If the rack post holes are prethreaded, determine if the threads are 10-32 or 12-24 and install 14 screws (seven on each side).

If the rack post holes are unthreaded, install either 10-32 or 12-24 clip or cage nuts over the rack post holes to accept the installation screws.

Note Clip nuts or cage nuts are not included as part of the accessory kit that comes with the chassis. You must obtain them yourself.

Figure 23: Installing the Chassis in a Two-Post Rack


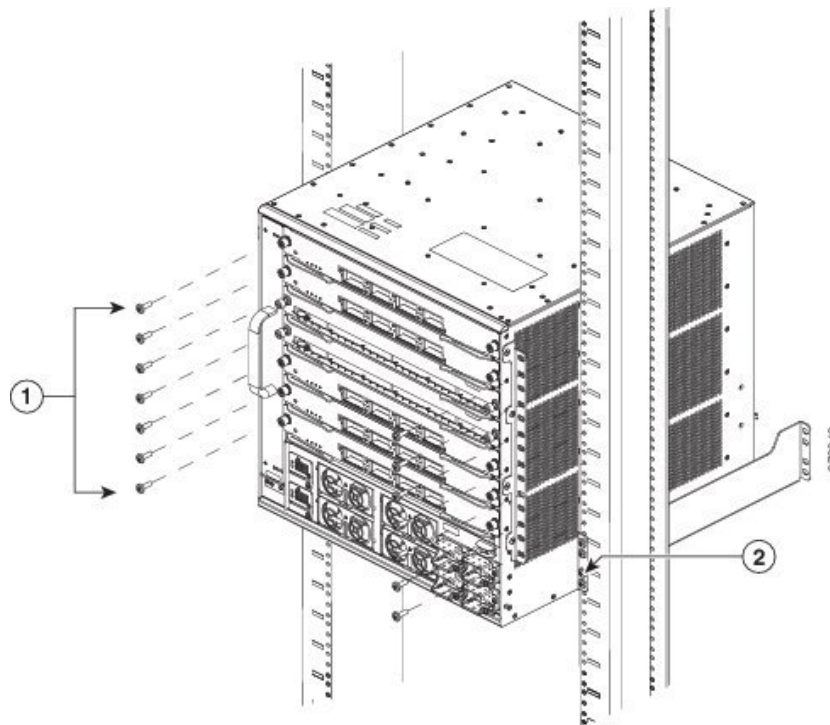


Figure 24: Installing the Chassis in a Four-Post Rack

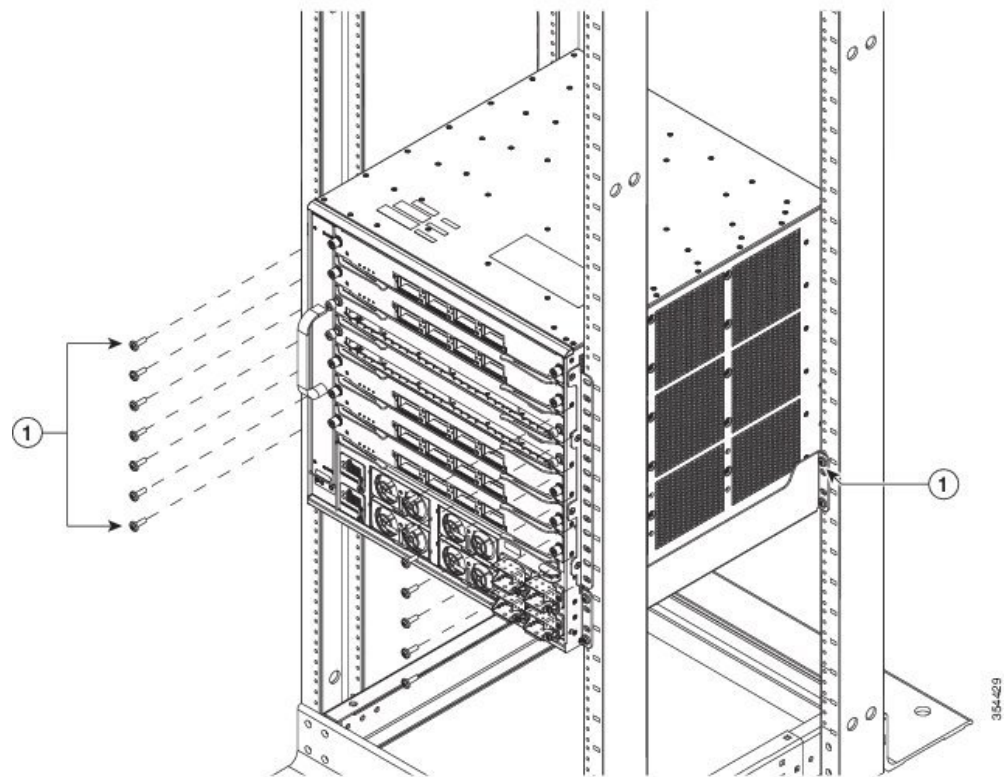

1	Seven screws on each side to secure the L bracket ears to the rack	2	Shelf brackets secured to the rack using four EA screws
---	--	---	---

- Step 4** (Optional) To install one or both of the optional cable guide assemblies, position the cable guides such that the cable guide mounting holes are aligned with the L bracket holes and the rack rail holes, as shown in the following figure:

Figure 25: Installing the Cable Guide in a Two-Post Rack


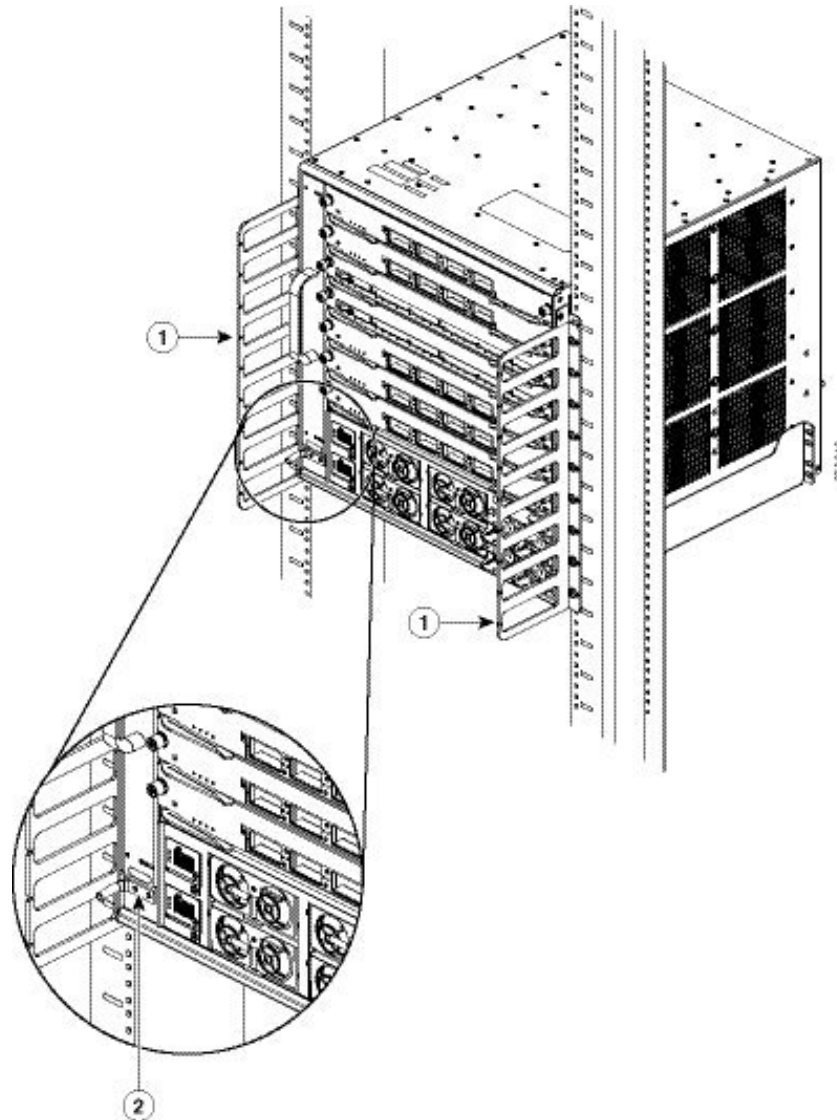


Figure 26: Installing the Cable Guide in a Four-Post Rack

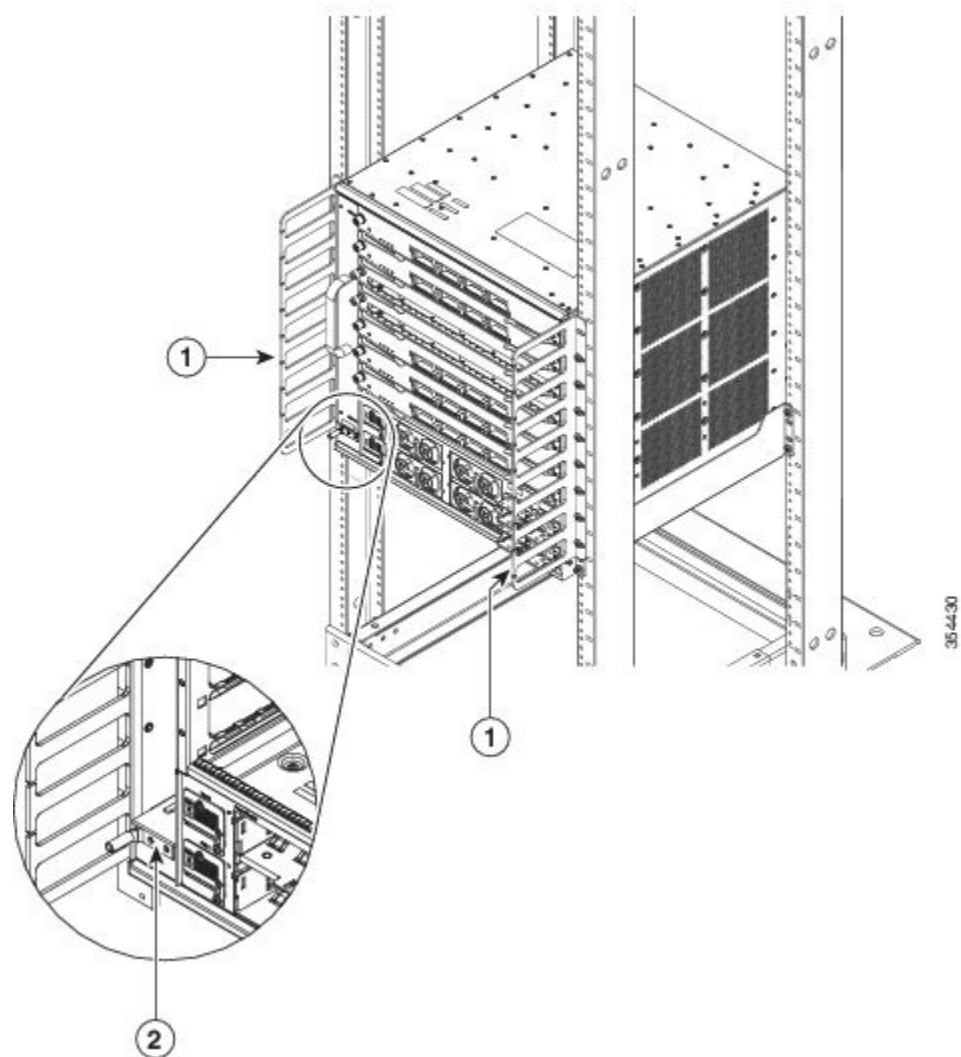

1	Cable guide installed on each side.	2	Location and position of the right-angled ground lug with the cable guide installed.
---	-------------------------------------	---	--

What to Do Next

After installing the chassis in its location, complete the installation process by:

- 1 Connecting the chassis to system ground.
- 2 Installing and connecting the power supplies to the power source.

- 3 Connecting the network interface cables to the supervisor engine and modules. This may involve installing transceivers before you attach the network interface cables.
- 4 Powering up the chassis and verifying the installation.

Related Topics

[Chassis, on page 3](#)

[Environmental Specifications, on page 88](#)

[Physical Specifications, on page 87](#)

[Finding Serial Numbers, on page 136](#)

Establishing System Ground

To attach the grounding lug and cable to the grounding pad, perform these steps

Before You Begin


To connect the system ground, you require the following tools and materials:

- Grounding lug—A two-hole right-angled lug. Supports up to 6 AWG wire. Supplied as part of accessory kit.
- Grounding screws—Two M4 x 8 mm (metric) pan-head screws. Supplied as part of the accessory kit.
- Grounding wire—Not supplied as part of accessory kit. The grounding wire should be sized according to local and national installation requirements. Depending on the power supply and system, a 12 to 6 AWG copper conductor is required for U.S. installations. Commercially available 6-AWG wire is recommended. The length of the grounding wire depends on the proximity of the switch to proper grounding facilities.
- No. 1 Phillips screwdriver.
- Crimping tool to crimp the grounding wire to the grounding lug.
- Wire-stripping tool to remove the insulation from the grounding wire.

Procedure

- Step 1** Use a wire-stripping tool to remove approximately 0.75 inches (19 mm) of the covering from the end of the grounding wire.
- Step 2** Insert the stripped end of the grounding wire into the open end of the right-angled grounding lug.
- Step 3** Crimp the grounding wire in the barrel of the grounding lug. Verify that the ground wire is securely attached to the ground lug.
- Step 4** Secure the grounding lug to the system ground connector with two M4 screws. Ensure that the grounding lug and the grounding wire do not interfere with other switch hardware or rack equipment.

Figure 27: Locating and Connecting System Ground

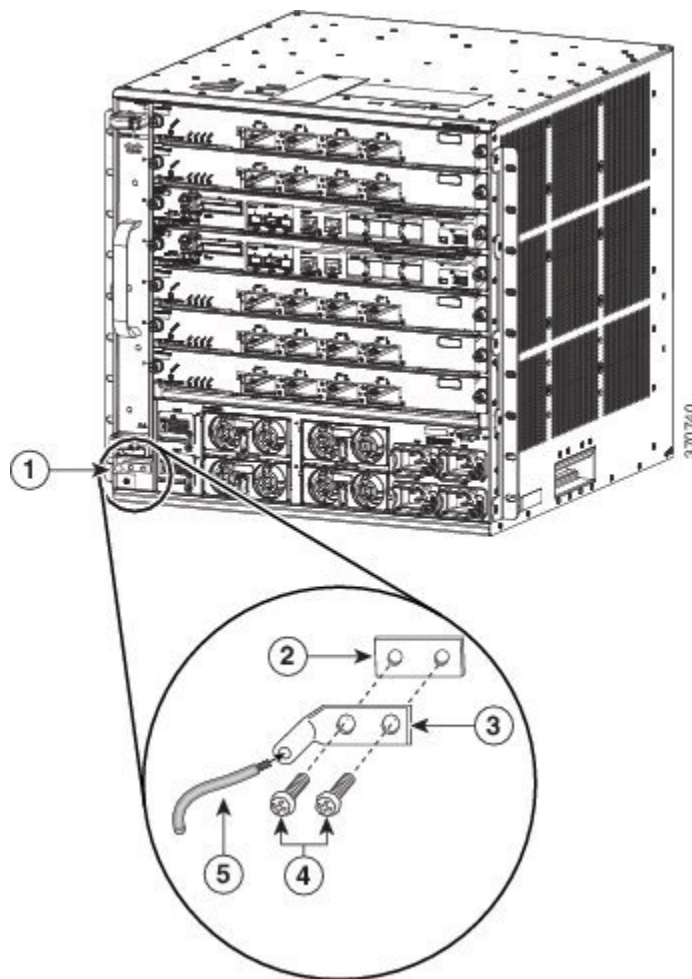

1	System ground location	4	M4 screws to secure the lug to the connector
2	System ground connector	5	Stripped end of the grounding wire inserted into the open end of the right-angled grounding lug

3	Right-angled grounding lug	
---	----------------------------	--

- Step 5** Prepare the other end of the grounding wire, and connect it to an appropriate grounding point in your site to ensure adequate earth ground for the switch.
-

Related Topics

[Preventing Electrostatic Discharge Damage](#) , on page 38

Attaching an ESD Strap

After you install the system ground lug, follow these steps to correctly attach the ESD wrist strap:


Procedure

- Step 1** Attach the ESD wrist strap to bare skin as follows:
- a) If you are using the ESD wrist strap supplied with the FRUs, open the wrist strap package and unwrap the ESD wrist strap. Place the black conductive loop over your wrist and tighten the strap such that it touches your bare skin well.
 - b) If you are using an ESD wrist strap equipped with an alligator clip, open the package and remove the ESD wrist strap. Locate the end of the wrist strap that attaches to your body and secure it to your bare skin.
- Step 2** Grasp the spring or alligator clip on the ESD wrist strap and momentarily touch the clip to a bare metal spot (unpainted surface) on the rack. We recommend that you touch the clip to an unpainted rack rail so that any built-up static charge is then safely dissipated to the entire rack.
- Step 3** Attach either the spring clip or the alligator clip to the ground lug screw as follows:
- a) If you are using the ESD wrist strap that is supplied with the FRUs, squeeze the spring clip jaws open, position the spring clip to one side of the system ground lug screw head, and slide the spring clip over the lug screw head so that the spring clip jaws close behind the lug screw head.

Note The spring clip jaws do not open wide enough to fit directly over the head of the lug screw or the lug barrel.

- b) If you are using an ESD wrist strap that is equipped with an alligator clip, attach the alligator clip directly over the head of the system ground lug screw or to the system ground lug barrel.

Figure 28: Attaching the ESD Wrist Strap Clip to the System Ground Lug Screw

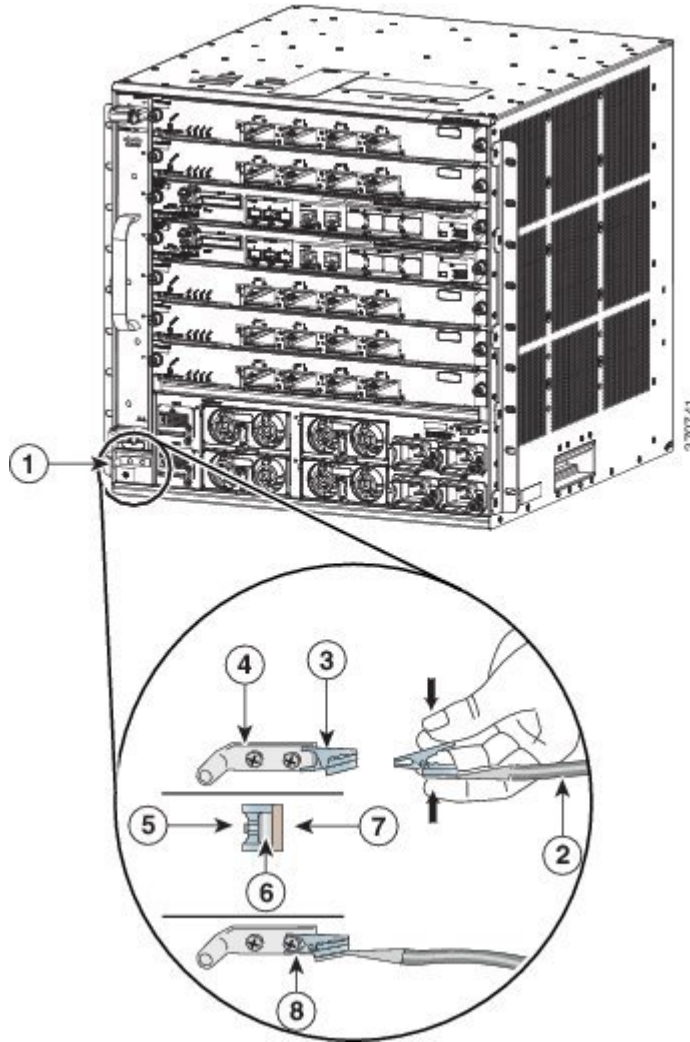

1	System ground connector	5	Side clip behind the screw
2	ESD ground strap	6	Screw
3	Clip	7	Side view of grounding lug
4	Right-angled grounding lug	8	Clip installed behind the screw

When handling modules, follow these guidelines:

- Handle carriers using the available handles or edges only; avoid touching the printed circuit boards or connectors.
- Place a removed component boardside up on an antistatic surface or in a static shielding container. If you plan to return the component to the factory, immediately place it in a static shielding container.
- Never attempt to remove the printed circuit board from the metal carrier.

Caution For safety, periodically check the resistance value of the antistatic strap. The measurement should be between 1 and 10 megohm (Mohm).

Related Topics

[Preventing Electrostatic Discharge Damage](#), on page 38

Verifying the Switch Chassis Installation

To verify the switch chassis installation, perform these steps:

Procedure

-
- Step 1** Verify that the ejector levers of each module are fully closed (parallel to the faceplate) to ensure that the supervisor engine and all the switching modules are fully seated in the backplane connectors.
- Step 2** Check the captive installation screws of each module, power supply, and power supply converter. Tighten loose captive installation screws.
- Step 3** Verify that all empty module slots have blank faceplates installed properly. The blank faceplates optimize the air flow through the chassis and contain EMI.
- Warning** Blank faceplates and cover panels serve three important functions— They prevent exposure to hazardous voltages and currents inside the chassis; they contain EMI that might disrupt other equipment; and they direct the flow of cooling air through the chassis. Do not operate the system until all cards, face plates, front covers, and rear covers are in place. Statement 1029
- Step 4** Turn on the power supply switches to power up the system. During the power-up sequence, the system performs a series of bootup diagnostic tests.
-

What to Do Next

Additional system diagnostic tests are available. These tests allow you to perform a complete sanity check on the system prior to inserting the system into your network and to monitor the health of the system while the system is running.



Tip

When prestaging systems in a nonproduction environment, we recommend that you run all the diagnostic tests, including the disruptive tests, to prescreen the systems for failures, if any.

Online Diagnostics

The Cisco Catalyst 6807-XL switches running Cisco IOS have many levels of online diagnostic capabilities. The online diagnostics are divided into the following categories:

- **Bootup**—Bootup diagnostics automatically run during bootup, module OIR, or switchover to a backup supervisor engine.
- **Background health**—Monitoring diagnostic tests are continuously run by the system to monitor system health.
- **On-demand online diagnostics**—On-demand online diagnostics can be used to run any test from the CLI. You can also run on-demand online diagnostics to perform a sanity check on the system hardware. Some of these tests are disruptive and will impact traffic flow. You must follow the on-demand diagnostic guidelines exactly to avoid false failures.
- **Scheduled diagnostics**—Scheduled diagnostics can be used to run any of the above tests at user-designated intervals.

Connecting the Supervisor Engine Console Port

The console port on the supervisor engine allows you to perform the following functions:

- Configure the switch from the CLI.
- Monitor network statistics and errors.
- Configure SNMP agent parameters.
- Download software updates to the switch, or distribute software images residing in flash memory to attached devices.

**Note**

You have to order the necessary cable and adapters to connect a terminal or modem to the console port.

To connect a terminal to the console port and then connect a modem to the console port using the cable and adapters, follow these steps:

Procedure

- Step 1** Connect to the port using the RJ-45-to-RJ-45 cable and the RJ-45-to-DB-25 DTE adapter or the RJ-45-to-DB-9 DTE adapter (labeled Terminal).
- Step 2** Check the corresponding terminal documentation to determine the baud rate. The baud rate of the terminal must match the default baud rate (9600 baud) of the console port. Set up the terminal as follows:
 - 9600 baud
 - 8 data bits

- No parity
- 2 stop bits

- Step 3** Connect to the port using the RJ-45-to-RJ-45 rollover cable and the RJ-45-to-DB-25 DCE adapter (labeled Modem).
The console port mode switch should be in the IN position (factory default).
- Step 4** Position the cable in the cable guide (if installed). Make sure there are no sharp bends in the cable.

Related Topics

[Supervisor Engine, on page 3](#)

[Console Cables, on page 116](#)

Installing Transceivers and Module Connectors

Some Ethernet modules require that pluggable transceivers be installed in the module port sockets. These transceivers are normally shipped separately from the module and must be installed after the module is installed in the chassis slot.

For detailed instructions about installing the various kinds of pluggable transceivers and module connectors, see the following:

Transceiver or Module Connector Type	Installation Procedure Document and Link
SFP and SFP+	Cisco SFP and SFP+ Transceiver Module Installation Notes
QSFP+	Cisco CVR-4SFP10G-QSFP Reverse Adapter Installation Note
Cisco OneX Converter	Installation Notes for the Cisco OneX Converter Modules
X2	Cisco 10-Gigabit Ethernet X2 Transceiver Modules Installation Note
Cisco TwinGig and OneX	Installation Notes for the Cisco TwinGig and OneX Converter Modules

Related Topics

[Modules supported by Supervisor Engine 2T, on page 11](#)

[Modules supported by Supervisor Engine 6T, on page 19](#)

[Pluggable Transceivers, on page 105](#)

[Module Connectors, on page 113](#)

[Cable Specifications, on page 116](#)



Removing and Replacing FRUs



Warning

Only trained and qualified personnel should be allowed to install, replace, or service this equipment.
Statement 1030

- [Online Insertion and Removal](#) , page 75
- [Removing and Installing Power Supplies](#), page 76
- [Removing and Installing the Fan Tray](#), page 80
- [Removing and Installing the Power Supply Converter](#), page 83

Online Insertion and Removal

The online insertion and removal (OIR) feature allows you to remove and replace modules while the system is online. You can shut down the modules before removal and restart them after insertion, without causing other software or interfaces to shut down.



Note

Do not remove or install more than one module at a time. After you remove or install a module, check the module LEDs before continuing.

When a module is removed or installed, the switch stops processing traffic for the module and scans the system for a configuration change. Each interface type is verified against the system configuration, and then the system runs diagnostics on the new module. There is no disruption of normal operation during module insertion or removal.

The switch can bring up only an identical replacement module online. To support the OIR of an identical module, the module configuration is not removed from the running-config file when you remove a module.

If the replacement module is different from the removed module, you must configure it before the switch can bring it online.

Layer 2 MAC addresses are stored in an EEPROM, which allows modules to be replaced online without requiring the system to update switching tables and data structures. Regardless of the types of modules installed, the Layer 2 MAC addresses do not change unless you replace the supervisor engine. If you do replace the

supervisor engine, the Layer 2 addresses of all the ports change to those specified in the address allocator on the new supervisor engine.

Removing and Installing Power Supplies

This section describes how to remove and install PSMs.



Note

- The PSMs installed in the switch chassis should be AC input only.
- The PSM is designed to be removed and replaced while the system is operating without presenting an electrical hazard or damage to the system.



Caution

Use both hands to install and remove power supplies.

Related Topics

[Power Supply Module, on page 21](#)

[Power Entry Module, on page 23](#)

[Power Supply Module LEDs, on page 25](#)

[3000 W Power Supply AC Power Cords, on page 93](#)

Installing AC Power Supplies

To install an AC input PSM, follow these steps:



Warning

High leakage current-earth connection essential before connecting to system power supply. Statement 342


Before You Begin

- For ground connection instructions, see [Establishing System Ground, on page 68](#)
- You may require a flat-blade or Number 2 Phillips-head screwdriver to tighten the screw on the PSM.

Procedure

- Step 1** Remove the blank cover from the power supply bay if there is one installed. Grasp the two retaining clips with your thumb and forefinger and squeeze to detach the blank cover from the power supply bay.

Figure 29: Removing the Power Supply Blank

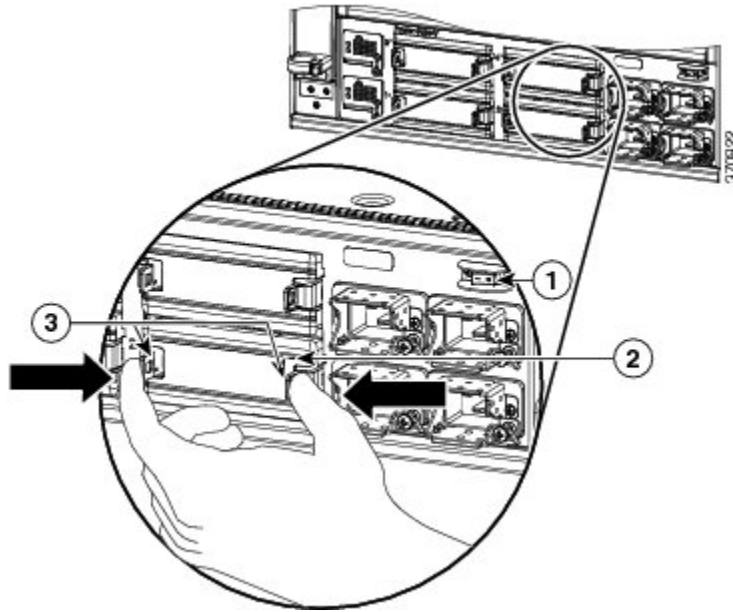


1	System On/ Off switch	3	Retaining clips on the blank cover.
2	Power supply blank		

- Step 2** Remove the PSM from its shipping packaging.
Step 3 Slide the PSM into the power supply bay. Make sure that the power supply is fully seated in the bay.

Tip The slot inside the power supply bay ensures that PSM is installed in only one direction.

Figure 30: Installing the Power Supply Module

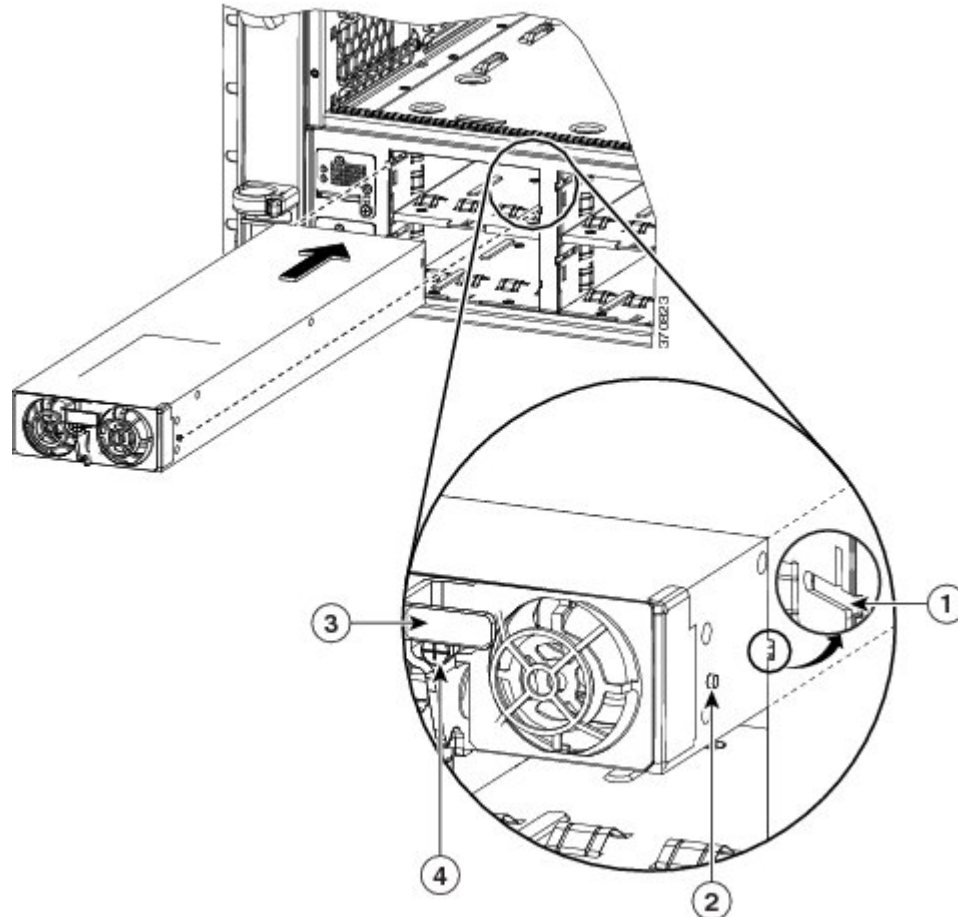

1	Slot in the power supply bay	3	Latch
2	Nub on the PSM that slides into the slot	4	Captive installation screw

- Step 4** Rotate the latch up and tighten the captive installation screw to lock the latch in place.
- Step 5** Plug the AC power cord (connected to a power source on one end) into the corresponding power entry module (PEM). For example, if you have installed the PSM in bay 1, plug the power cord into AC1. For a list of supported AC power cords for your particular AC input power supply, see [3000 W Power Supply AC Power Cords](#), on page 93.
- Step 6** Tighten the screw on the cable clamp next to the PEM. This ensures that the power cord is not accidentally pulled out. See callout (5) in [Figure 31: PSM and PEM](#), on page 79

Removing AC Power Supplies

Each power supply module has a power hold-up time of 20 milliseconds at 100 percent load and fully supports OIR. To remove an AC-input power supply, follow these steps:

Warning

Hazardous voltage or energy is present on the backplane when the system is operating. Use caution when servicing. Statement 1034


Before You Begin

You may require a flat-blade or Number 2 Phillips-head screwdriver to loosen the captive installation screw.

Procedure

Step 1 Loosen the captive installation screw on the power supply module and push the latch down.

Figure 31: PSM and PEM

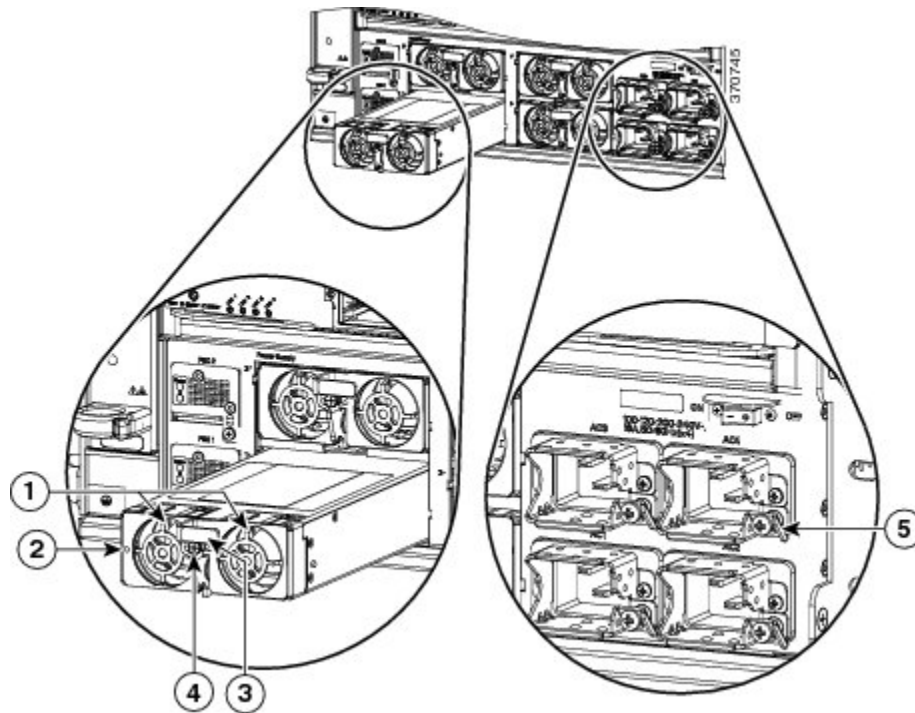

1	Dual variable speed fans	4	Captive installation screw
2	PSM LEDs	5	Cable clamp next to the PEM
3	Latch		

- Step 2** Grasp the power supply latch and pull to slide the power supply part of the way out of the chassis. Place your other hand underneath the power supply, and slide the power supply clear out of the chassis.
- Step 3** If the power supply bay is to remain empty:
- Install a blank (Cisco part number C6800-PS-CVR=), which is a part of the accessory kit, over the opening.
 - (Optional) Remove the corresponding power cord by loosening the cable clamp and then detaching the power cord.
-

Removing and Installing the Fan Tray

This section describes how to remove and install the fan tray.



Note The fan tray is designed to be removed and installed while the system is operating (powered on) without presenting an electrical hazard or damage to the system.

Related Topics

[Fan Tray](#), on page 20

[Air Flow](#), on page 31

[Fan Tray LED](#), on page 24

Installing the Fan Tray

To install the new fan tray, perform these steps:

Procedure

- Step 1** Remove the fan tray from its packaging.
- Step 2** Hold the fan tray handle with one hand. Place your other hand underneath the fan tray. (The correct position involves the fan tray LEDs being on top).
- Step 3** Place the fan module into the front of the fan tray bay so that it rests on the chassis, lift the fan module up slightly to align it with the top and bottom of the bay, and then push the fan module into the chassis until it sits in the backplane. The fan module will snap in.
-

What to Do Next

Check that the new fan assembly is installed correctly. For more information, see [Checking Fan Tray Installation](#).

Checking Fan Tray Installation

To verify that the new fan assembly is installed correctly, perform these steps:

Procedure

- Step 1** If the switch is powered on, listen for the fans; you should immediately hear them operating. If you do not hear them, ensure that the fan module is inserted completely and correctly in the bay and the outside surface of the fan module is flush with the outside surface of the chassis.
 - Step 2** Verify that the fan status LED is green. If the LED is red, one or more fans are faulty.
 - Step 3** If, after several attempts, the fans do not operate, or if you experience trouble with the installation, contact a Cisco customer service representative for assistance.
-


Removing the Fan Tray

To remove the fan tray, perform these steps:

Procedure

- Step 1** Locate the fan tray in the chassis.
- Step 2** Grasp and simultaneously push both spring latches with your thumb in a left to right direction. Slide the fan tray half-way out of the bay. Rock it gently, if necessary, to unseat the power connector from the backplane.

Figure 32: Fan Tray Location and Spring Latch Operation

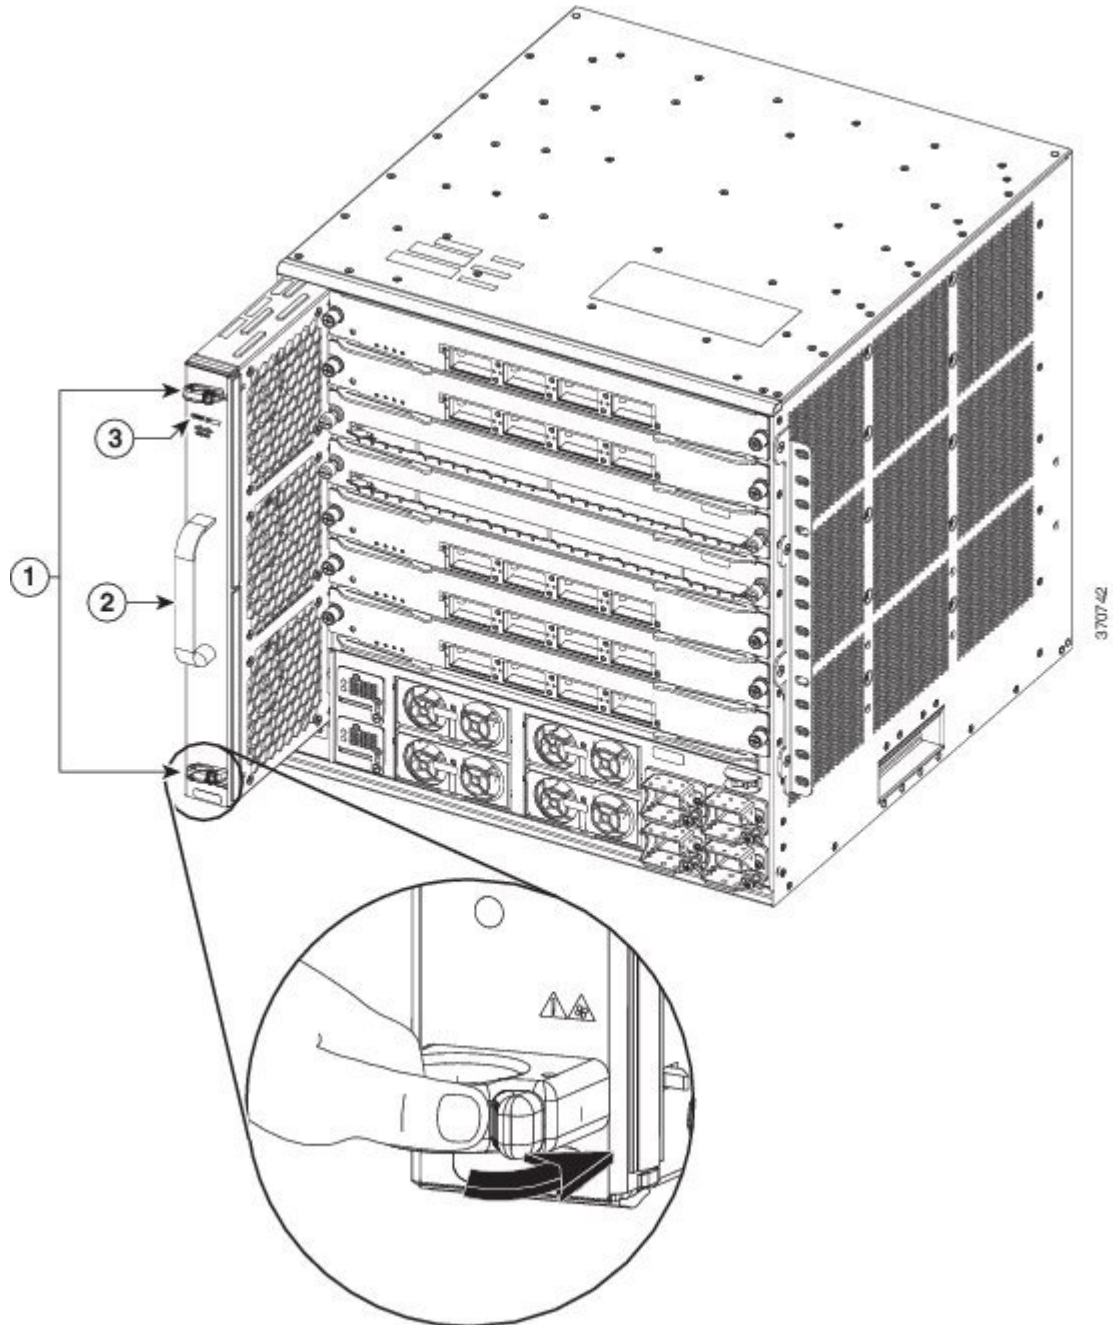

1	Spring latches and close-up view of spring latch operation	3	Fan tray LED
2	Fan tray handle		

Step 3 Grasp the handle to pull the fan assembly clear of the chassis, and set it aside.

Warning The fans might still be turning when you remove the fan assembly from the chassis. Keep fingers, screwdrivers, and other objects away from the openings in the fan assembly's housing. Statement 263

Removing and Installing the Power Supply Converter

This section describes how to remove and install PSCs.

Related Topics

[Power Supply Converter, on page 23](#)

[Power Supply Converter LEDs, on page 26](#)

Installing the Power Supply Converter

To install the PSC, perform these steps:

Before You Begin

- Ensure that the system (earth) ground connection has been made. For ground connection instructions, see [Establishing System Ground, on page 68](#)
- You may require a flat-blade or Number 2 Phillips-head screwdriver to tighten the screw on the PSC.

Procedure


Step 1 Remove the PSC from its packaging.

Step 2 Slide the PSC into the PSC bay. Ensure that the power supply is fully seated in the bay.

Step 3 Insert the mounting screw and tighten it to fully seat the connectors.

If the system is powered on and PSC is installed properly, the PSC STATUS LED is green.

Figure 33: Installing the PSC

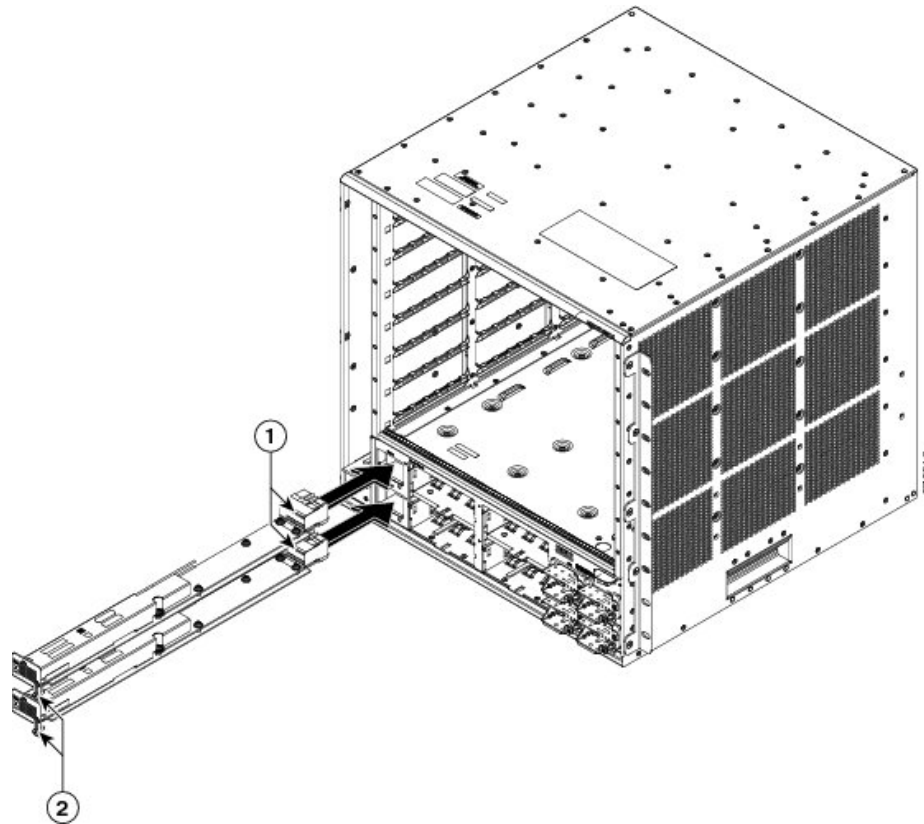

1	Power rail connectors	2	Mounting screws (one for each PSC)
---	-----------------------	---	------------------------------------

Removing the Power Supply Converter

To remove the PSC, perform these steps:

Before You Begin

- Ensure that the system (earth) ground connection has been made. For ground connection instructions, see [Establishing System Ground](#), on page 68.
- You may require a flat-blade or Number 2 Phillips-head screwdriver to loosen the screw on the PSC.

Procedure

- Step 1** Loosen the mounting screw on the PSC. This detaches the connectors.
 - Step 2** Slide the PSC out of the bay.
-



APPENDIX A

Technical Specifications

- [Physical Specifications, page 87](#)
- [Environmental Specifications, page 88](#)

Physical Specifications

The following are the physical characteristics of the chassis:

Table 22: Physical Characteristics of the Cisco Catalyst 6807-XL Switch Chassis

Physical Characteristic	Details
Dimensions (H x W x D)	<p>17.5 x 17.36 x 18.10 inches (44.45 x 44.09 x 45.97 cm).</p> <ul style="list-style-type: none"> • Chassis depth, including the cable guide is 23 inches (58.42 cm). • Chassis requires 10 RU⁷. • You can install the chassis in: <ul style="list-style-type: none"> ◦ 2-post or 4-post 19-inch standard equipment racks that meet ANSI/EIA 310-D, IEC 60297, and ETS 300-119 standards. These are available in the accessory kit. ◦ 2-post 23-inch equipment racks, where you install the chassis using center-mount brackets (to be ordered separately).
Weight	<p>Chassis only: 65 lb (29.48 kg).</p> <p>Chassis fully configured with 2 supervisor engines, 5 switching modules, and 4 power supplies: 195 lb (88.45 kg)</p>

⁷ The chassis height is sometimes measured in rack units (RU or just U), where 1 RU or 1 U equals 1.75 in (44.45 mm).

Related Topics

[Rack-Mounting the Chassis, on page 63](#)

[Chassis, on page 3](#)

Environmental Specifications

The following are the environmental specifications of the chassis:

Table 23: Environmental Specifications of the Cisco Catalyst 6807-XL Switch Chassis

Item	Environmental Specification
Operating temperature	<p>Certified for operation: 32 to 104 °F (0 to 40 °C).</p> <p>Designed and tested for operation: 32 to 131 °F (0 to 55 °C).</p> <p>Note The Cisco Catalyst 6807-XL switches are equipped with internal air temperature sensors that are triggered at 104 °F (40 °C) generating a minor alarm and at 131 °F (55 °C) generating a major alarm.</p>
Nonoperating and storage temperature	<p>Chassis unpackaged: -4 to 149 °F (-20 to 65 °C).</p> <p>Chassis in protective shipping package: -40 to 158 °F (-40 to 70 °C).</p>
Thermal transition	<p>0.5 °C per minute (hot to cold).</p> <p>0.33 °C per minute (cold to hot).</p>
Ambient (noncondensing) operating humidity (RH)	5 to 90 percent.
Ambient (noncondensing) nonoperating and storage humidity	5 to 95 percent.
Operating altitude	<p>Certified for operation: 0 to 6500 ft (0 to 2000 m).</p> <p>Designed and tested for operation: -200 to 10,000 ft (-60 to 3000 m) .</p>
Shock and vibration	<p>Shock</p> <ul style="list-style-type: none"> • Operational—5 G 30 ms, half-sine (IEC 68-2-27). • Nonoperational—20 G, 7.5 ms, trapezoidal. <p>Vibration</p> <ul style="list-style-type: none"> • Operational—3 to 500 Hz. • Power Spectral Density (PSD)—0.0005 G²/Hz at 10 and 200 Hz. 5 dB/octave roll off at each end. 0.5 hours per axis (1.12 g).

Item	Environmental Specification
Acoustic noise	67 dB. International Organization for Standardization (ISO) 7779: Bystander position operating to an ambient temperature of 86 °F (30 °C).

Related Topics

[Rack-Mounting the Chassis, on page 63](#)

[Chassis, on page 3](#)



Power Supply Specifications

- [3000 W AC-Input Power Supply Specifications, page 91](#)
- [3000 W Power Supply AC Power Cords, page 93](#)
- [Chassis and Module Power and Heat Values, page 99](#)

3000 W AC-Input Power Supply Specifications

The following table lists specifications for the 3000 W AC input power supply:

Table 24: 3000 W AC-Input Power Supply Specifications

Specification	Description
AC-input type	Autoranging input with power factor correction. Note Power factor correction is a standard feature on AC-input power supplies. Power factor correction reduces the reactive component in the source AC current, allowing higher power factors (typically 99 percent or better) and lower harmonic current components.
AC-input voltage	Low-line (120 VAC nominal)—90 VAC (min) to 132 VAC (max) High-line (230 VAC nominal)—170 VAC (min) to 264 VAC (max)
AC-input current	16 A @ 240 VAC (3000 W output) 16 A @ 120 VAC (1300 W output)
AC-input frequency	50/60 Hz (nominal) ($\pm 3\%$ for full range)

Specification	Description
Branch circuit requirement	<p>Each chassis power supply should have its own dedicated, fused-branch circuit:</p> <ul style="list-style-type: none"> • North America—20 A. • International—Circuits sized to local and national codes. • All AC power supply inputs are fully isolated: <ul style="list-style-type: none"> ◦ Source AC can be out of phase between multiple power supplies in the same chassis, which means that PS1 can be operating from phase A and PS2 can be operating from phase B. ◦ For high-line operation, the power supply operates with the hot conductor wired to a source AC phase and the neutral conductor wired either to ground or to another source AC phase as long as the net input voltage is in the range of 170 to 264 VAC. ◦ Source AC can be out of phase between AC inputs on power supplies that are equipped with multiple AC inputs, which means that power cord 1 can be plugged into phase A and power cord 2 can be plugged into phase B.
Power supply output capacity	<p>1400 W maximum (100 to 120 VAC) 3000 W maximum (200 to 240 VAC)</p>
Power supply output	<ul style="list-style-type: none"> • 100 to 120 VAC operation <ul style="list-style-type: none"> ◦ 25.0 A @ +3.3 V ◦ 5 A @ +5 V ◦ 12 A @ +12 V ◦ 27.89 A @ +42 V • 200 to 240 VAC operation <ul style="list-style-type: none"> ◦ 25.0 A @ +3.3 V ◦ 5 A @ +5 V ◦ 12 A @ +12 V ◦ 65.98 A @ +42 V
Output holdup time	20 ms minimum.
kVA rating ⁸	3520 W (total input power) or 3.6 kVA (high-line operation).
Heat dissipation	12,046 BTU /hour (approx.)
Weight	6 lb (2.72 kg)

- ⁸ The kVA rating listed for the power supply should be used as the sizing criteria for both UPS outputs as well as standard circuits and transformers to power a switch

3000 W Power Supply AC Power Cords

The following table lists the specifications for the AC power cords that are available for the 3000 W AC-input power supply. The table also includes references to power cord illustrations.









Note




All 3000 W power supply power cords:



- Are 14 feet (4.3 meters) in length.
 - Have an IEC60320/C19 appliance connector at one end.
-




Table 25: 3000 W Power Supply AC Power Cords

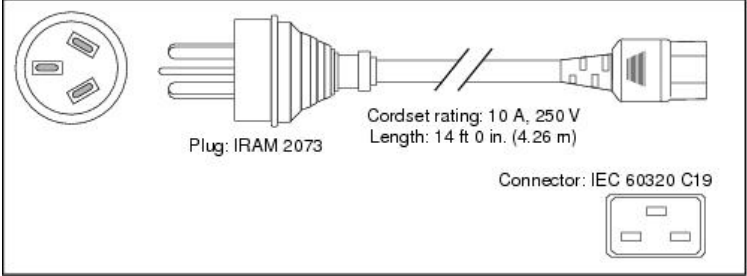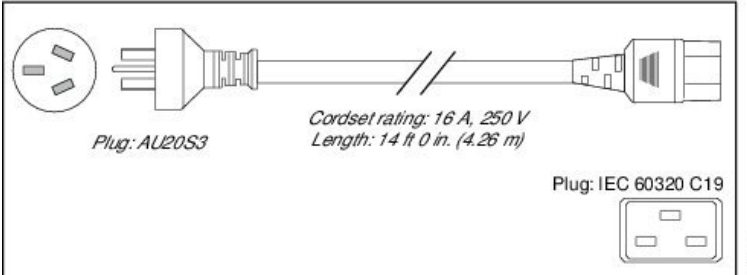
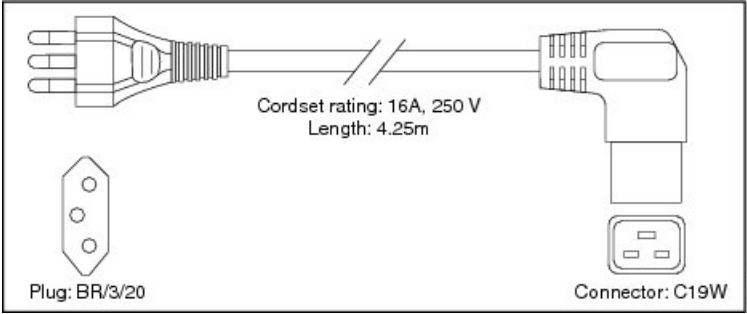
Locale	AC Source Plug Type	Cordset Rating	Power Cord Part Number and Reference Illustration
Argentina	IRAM 2073	16 A, 250 VAC	<p data-bbox="537 415 954 443">Figure 34: CAB-IR2073-C19-AR= (Argentina)</p> 
Australia, New Zealand	AU20S3	16 A, 250 VAC	<p data-bbox="537 846 1068 873">Figure 35: CAB-AC-16A-AUS= (Australia, New Zealand)</p> 
Brazil	EN60320 / C19	16 A, 250 VAC	<p data-bbox="537 1287 932 1314">Figure 36: UCSB-CABL-C19-BRZ= (Brazil)</p> 
People's Republic of China	GB16C	16 A, 250 VAC	

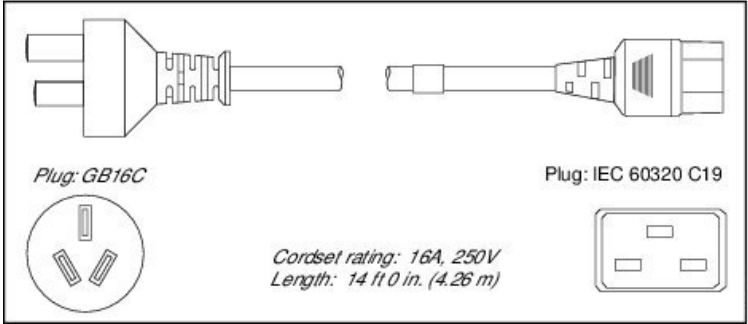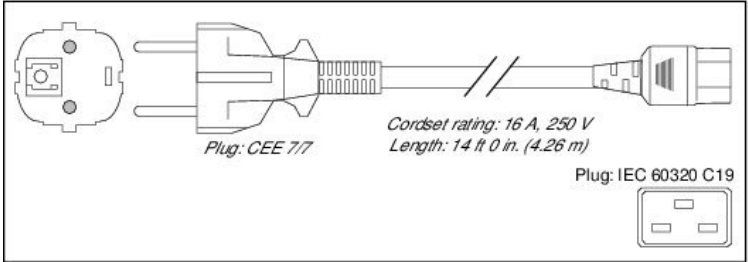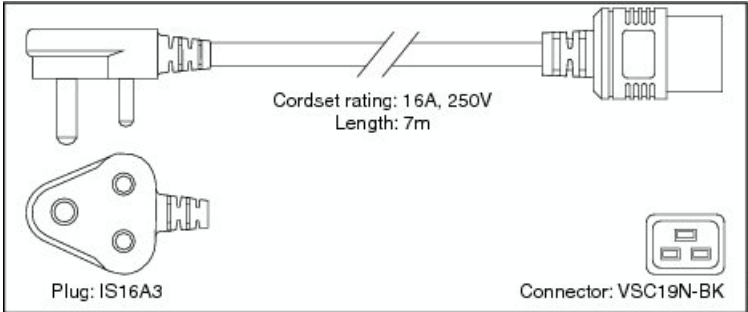Locale	AC Source Plug Type	Cordset Rating	Power Cord Part Number and Reference Illustration
			<p>Figure 37: CAB-AC16A-CH= (People's Republic of China)</p>  <p>Plug: GB16C</p> <p>Plug: IEC 60320 C19</p> <p>Cordset rating: 16A, 250V Length: 14 ft 0 in. (4.26 m)</p>
Continental Europe	CEE 7/7	16 A, 250 VAC	<p>Figure 38: CAB-AC-2500W-EU= (Continental Europe)</p>  <p>Plug: CEE 7/7</p> <p>Plug: IEC 60320 C19</p> <p>Cordset rating: 16 A, 250 V Length: 14 ft 0 in. (4.26 m)</p>
India	EN60320/C19	16 A, 250 VAC	<p>Figure 39: CAB-SABS-C19-IND= (India)</p>  <p>Plug: IS16A3</p> <p>Connector: VSC19N-BK</p> <p>Cordset rating: 16A, 250V Length: 7m</p>
International	IEC 309	16 A, 250 VAC	

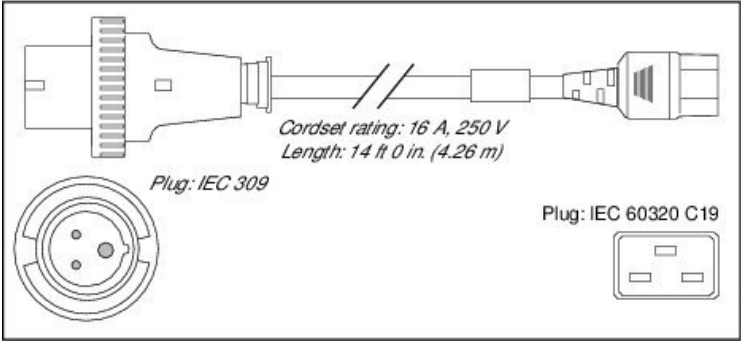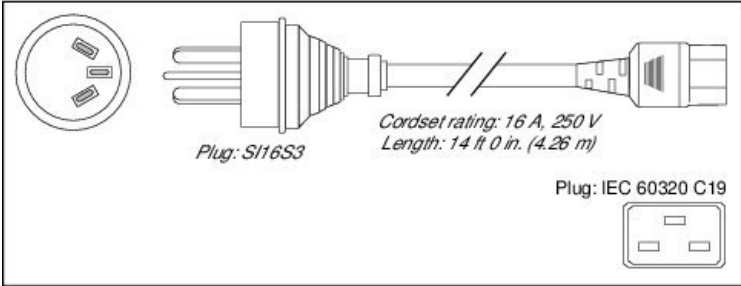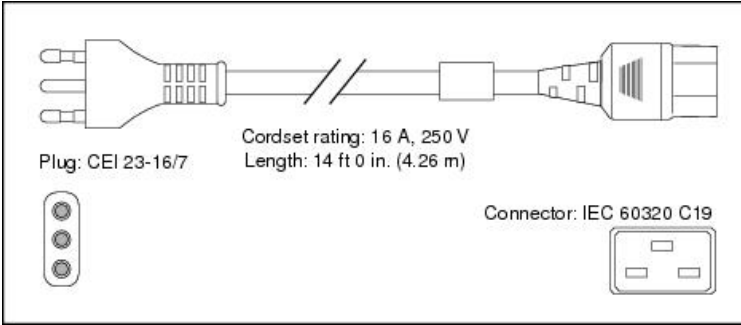Locale	AC Source Plug Type	Cordset Rating	Power Cord Part Number and Reference Illustration
			<p>Figure 40: CAB-AC-2500W-INT= (International)</p> 
Israel	SI16S3	16 A, 250 VAC	<p>Figure 41: CAB-AC-2500W-ISRL= (Israel)</p> 
Italy	CEI 23-16/7	16 A, 250 VAC	<p>Figure 42: CAB-7513ACI= (Italy)</p> 
	NEMA 6-20	16 A, 250 VAC	

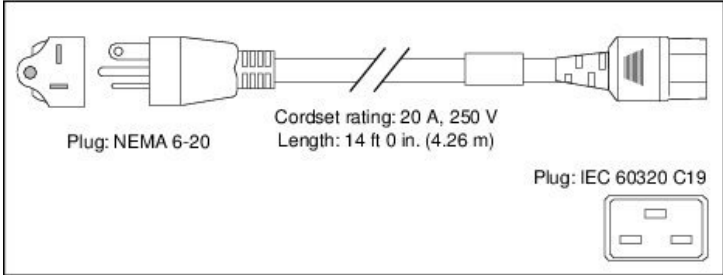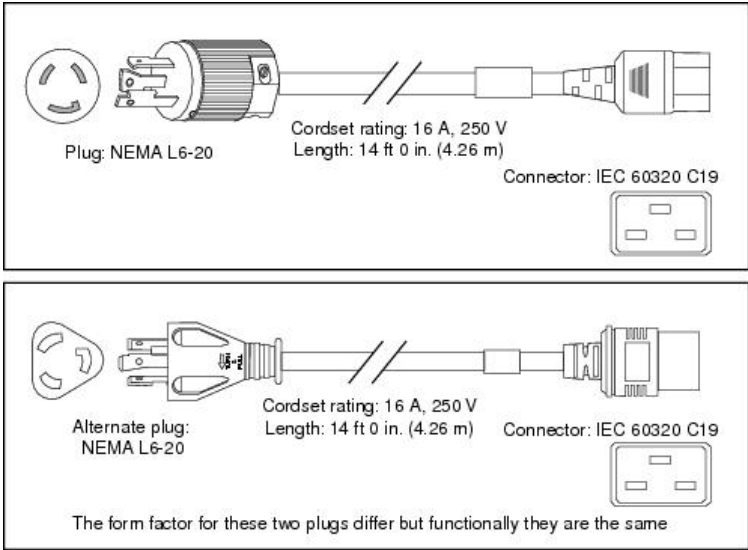Locale	AC Source Plug Type	Cordset Rating	Power Cord Part Number and Reference Illustration
Japan, North America (Nonlocking Plug) 200 to 240 VAC Operation			<p>Figure 43: CAB-AC-2500W-US1= (Japan, North America [Nonlocking Plug] 200 to 240 VAC operation)</p>  <p>Plug: NEMA 6-20 Cordset rating: 20 A, 250 V Length: 14 ft 0 in. (4.26 m) Plug: IEC 60320 C19</p>
Japan, North America (Locking Plug) 200 to 240 VAC Operation	NEMA L6-20	16 A, 250 VAC	<p>Figure 44: CAB-AC-C6K-TWLK= (Japan, North America [Locking Plug] 200 to 240 VAC operation)</p>  <p>Plug: NEMA L6-20 Cordset rating: 16 A, 250 V Length: 14 ft 0 in. (4.26 m) Connector: IEC 60320 C19</p> <p>Alternate plug: NEMA L6-20 Cordset rating: 16 A, 250 V Length: 14 ft 0 in. (4.26 m) Connector: IEC 60320 C19</p> <p>The form factor for these two plugs differ but functionally they are the same</p> <p>Note The form factor for these two plugs differ but functionally they are the same.</p>
Japan, North America 100 to 120 VAC operation ⁹	NEMA 5-20	20 A, 125 VAC	

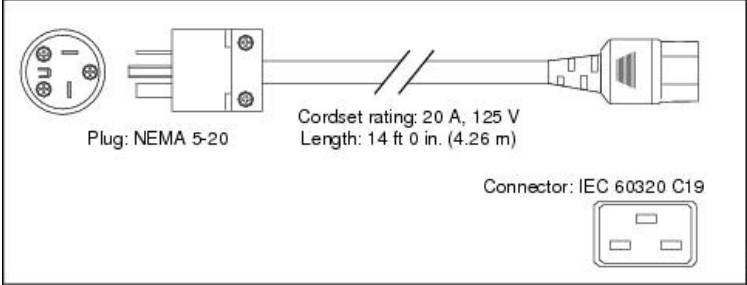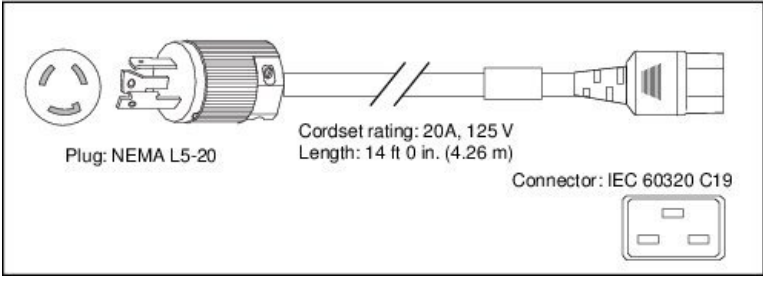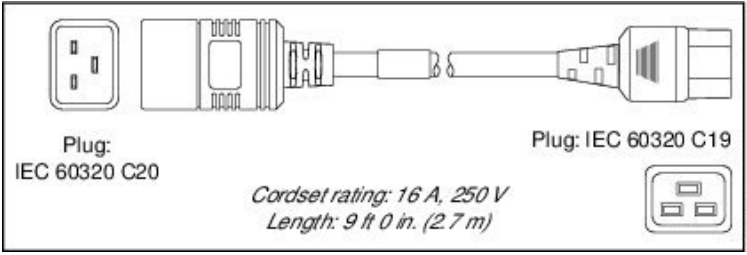Locale	AC Source Plug Type	Cordset Rating	Power Cord Part Number and Reference Illustration
			<p data-bbox="537 359 1230 386">Figure 45: CAB-7513AC= (Japan, North America 100 to 120 VAC operation)</p> 
North America	NEMA L5-20	20 A, 125 VAC	<p data-bbox="537 800 1013 827">Figure 46: CAB- L520P - C19 -US= (North America)</p> 
Power Distribution Unit (PDU) 10	IEC 60320 C19 IEC 60320 C20	16 A, 250 VAC	<p data-bbox="537 1230 846 1257">Figure 47: CAB-C19-CBN= (PDU)</p> 
South Africa	IEC 884-1	16 A, 250 VAC	

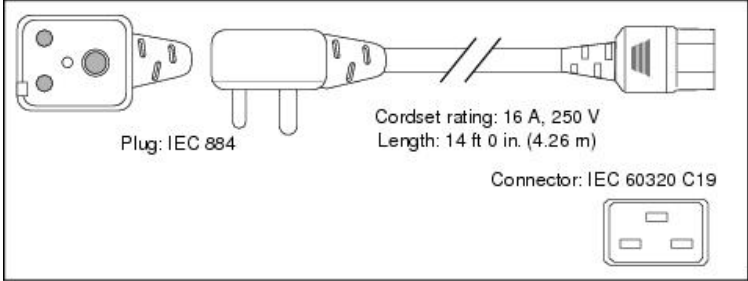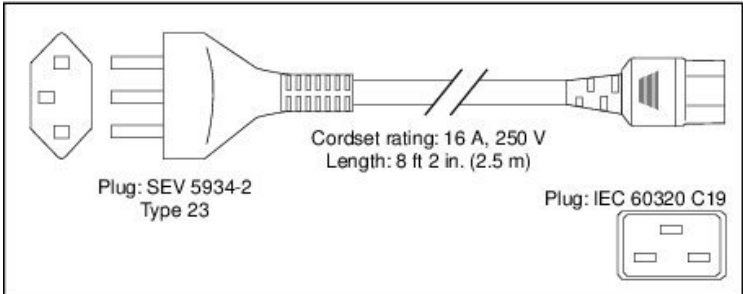Locale	AC Source Plug Type	Cordset Rating	Power Cord Part Number and Reference Illustration
			<p data-bbox="574 359 964 386">Figure 48: CAB-7513ACSA (South Africa)</p>  <p data-bbox="688 554 808 575">Plug: IEC 884</p> <p data-bbox="943 527 1166 575">Cordset rating: 16 A, 250 V Length: 14 ft 0 in. (4.26 m)</p> <p data-bbox="1057 590 1284 611">Connector: IEC 60320 C19</p> <p data-bbox="1317 659 1333 701">113337</p>
Switzerland	SEV 5934-2 Type 23	16 A, 250 VAC	<p data-bbox="574 795 943 823">Figure 49: CAB-ACS-16= (Switzerland)</p>  <p data-bbox="667 1031 824 1079">Plug: SEV 5934-2 Type 23</p> <p data-bbox="878 984 1117 1033">Cordset rating: 16 A, 250 V Length: 8 ft 2 in. (2.5 m)</p> <p data-bbox="1110 1047 1295 1068">Plug: IEC 60320 C19</p> <p data-bbox="1317 1108 1333 1150">192644</p>

⁹ The 3000 W power supply operating on 110 VAC delivers 1400 W.

¹⁰ The PDU power cable is designed for users who power their switch from a PDU. The end of the cable that plugs into the chassis power supply has a C19 connector; the other end of the cable that connects to the PDU has a C20 connector .

Related Topics

[Removing and Installing Power Supplies, on page 76](#)

[Troubleshooting the Power Supply Module, on page 134](#)

[Power Supply Module, on page 21](#)

[Power Entry Module, on page 23](#)

Chassis and Module Power and Heat Values

The following tables provide the power and heat dissipation data for the chassis and modules. Unless otherwise noted, the information in the tables is measured under fully loaded conditions (transceivers installed). Typical numbers are approximately 20 percent below the numbers listed in these tables.

**Note**

Module power is the output from the power supply (internal to the system). The AC-input power is the input from the outlet to the power supply. The percentage difference between the two values is the efficiency of the power supply.

Table 26: Power Requirements and Heat Dissipation—Chassis and Fan Trays

Model Number/ Module Type	Module Current (A) @ 52V	Module Power (Watts) (Power-Requested)	AC-Input Power (Watts) (Power-Allocated)	Heat Diss. (BTU/HR)
C6807-XL-FAN	5	260	260	887.15

Table 27: Power Requirements and Heat Dissipation—Supervisor Engines

Model Number/ Module Type	Module Current (A) @ 52V	Module Power (Watts) (Power-Requested)	AC-Input Power (Watts) (Power-Allocated)	Heat Diss. (BTU/HR)
VS-S2T-10G	6.80	353.60	353.60	1206.53
VS-S2T-10G-XL	10.73	557.96	557.96	1903.83
C6800-SUP6T	8.12	341	341	1370.18
C6800-SUP6T-XL	8.43	354	354	1422.49

Table 28: Power Requirements and Heat Dissipation—Policy Feature Cards

Model Number/ Module Type	Module Current (A) @ 52V	Module Power (Watts) (Power-Requested)	AC-Input Power (Watts) (Power-Allocated)	Heat Diss. (BTU/HR)
VS-F6K-PFC4	2.5	130	130	507.45
VS-F6K-PFC4XL	2.86	148.72	148.72	507.45

Table 29: Power Requirements and Heat Dissipation—Distributed Forwarding Cards (DFCs)

Model Number/ Module Type	Module Current (A) @ 52V	Module Power (Watts) (Power-Requested)	AC-Input Power (Watts) (Power-Allocated)	Heat Diss. (BTU/HR)
WS-F6K-DFC4-E Distributed Forwarding Card E	2.38	123.76	123.76	422.28
WS-F6K-DFC4-EXL Distributed Forwarding Card EXL	2.74	142.48	142.48	486.16
WS-F6K-DFC4-A Distributed Forwarding Card A	2.64	137.28	137.28	468.41
WS-F6K-DFC4-AXL Distributed Forwarding Card AXL	2.76	143.52	143.52	489.71

Table 30: Power Requirements and Heat Dissipation—Gigabit Ethernet Modules

Model Number/ Module Type	Module Current (A) @ 52V	Module Power (Watts) (Power-Requested)	AC-Input Power (Watts) (Power-Allocated)	Heat Diss. (BTU/HR)
WS-X6724-SFP	2.98	154.96	154.96	528.74
WS-X6748-SFP	6.07	315.64	315.64	1077.00
WS-X6848-SFP	8.08	420.16	420.16	1433.64

Table 31: Power Requirements and Heat Dissipation—10-Gigabit Ethernet Modules

Model Number/ Module Type	Module Current (A) @ 52V	Module Power (Watts) (Power-Requested)	AC-Input Power (Watts) (Power-Allocated)	Heat Diss. (BTU /HR)
WS-X6816-10G (WS-X6816-10G = WS-X6716-10GE + DFC4E)	11.99	623.48	623.48	2127.40

Model Number/ Module Type	Module Current (A) @ 52V	Module Power (Watts) (Power-Requested)	AC-Input Power (Watts) (Power-Allocated)	Heat Diss. (BTU /HR)
WS-X6816-10G XL	12.26	637.52	637.52	2175.30
WS-X6908-10G	10.29	535.08	535.08	1828.22
WS-X6908-10 XL	10.65	553.8	553.8	1889.64
WS-X6816-10T	10.61	551.72	551.72	1882.54
WS-X6816-10TXL	10.97	570.44	570.44	1946.42

Table 32: Power Requirements and Heat Dissipation—10/100/1000 Ethernet Switching Modules

Model Number/ Module Type	Module Current (A) @ 52V	Module Power (Watts) (Power-Requested)	AC-Input Power (Watts) (Power-Allocated)	Heat Diss. (BTU/HR)
WS-X6748-GE-TX	7.75	403.00	403.00	1375.09
WS-X6848-GE-TX	9.76	507.52	507.52	1731.72

Table 33: Power Requirements and Heat Dissipation—40-Gigabit Ethernet Switching Modules

Model Number/ Module Type	Module Current (A) @ 52V	Module Power (Watts) (Power-Requested)	AC-Input Power (Watts) (Power-Allocated)	Heat Diss. (BTU/HR)
WS-X6904-40G-2T	11.15	579.8	598.52	1978.36
WS-X6904-40G-2TXL	11.51	598.52	598.52	2042.23

Table 34: Power Requirements and Heat Dissipation—Service Modules

Model Number/ Module Type	Module Current (A) @ 52V	Module Power (Watts) (Power-Requested)	AC-Input Power (Watts) (Power-Allocated)	Heat Diss. (BTU/HR)
NAM3	8.83	370.86	370.86	1265.42
ASA-SM	8.83	370.86	370.86	1265.42
WiSM2	5.35	224.70	224.70	766.70

Model Number/ Module Type	Module Current (A) @ 52V	Module Power (Watts) (Power-Requested)	AC-Input Power (Watts) (Power-Allocated)	Heat Diss. (BTU/HR)
ACE-30	7.98	335.16	335.16	1143.61







Transceivers, Module Connectors, and Cable Specifications

- [Pluggable Transceivers, page 105](#)
- [Module Connectors, page 113](#)
- [Cable Specifications, page 116](#)
- [Cleaning the Fiber-Optic Connectors, page 125](#)

Pluggable Transceivers

This section provides brief descriptions of the pluggable transceivers that can be installed in the switch modules and supervisor engines. The following safety warnings apply:

- 
Warning Only trained and qualified personnel should be allowed to install, replace, or service this equipment. Statement 1030
- 
Warning Ultimate disposal of this product should be handled according to all national laws and regulations. Statement 1040
- 
Warning Class I (CDRH) and Class 1M (IEC) laser products. Statement 1055
- 
Warning Use of controls, adjustments, or performing procedures other than those specified may result in hazardous radiation exposure. Statement 1057

Related Topics

[Installing Transceivers and Module Connectors, on page 74](#)

[Modules supported by Supervisor Engine 2T, on page 11](#)

[Modules supported by Supervisor Engine 6T, on page 19](#)

1-GB Transceivers

The switch supports the 1-GB SFP transceiver. The following table lists the modules that the SFP transceiver supports and the links that provide transceiver specifications:

Table 35: 1-GB Transceiver Types

1-GB Transceiver Type	Supported on These Modules	More Information
SFP	<ul style="list-style-type: none"> • C6800-48P-SFP • C6800-48P-SFP-XL • C6800-8P10G • C6800-8P10G-XL • C6800-16P10G • C6800-16P10G-XL • C6800-32P10G • C6800-32P10G-XL • WS-X6724-SFP • WS-X6748-SFP • WS-X6824-SFP-2T • WS-X6824-SFP-2TXL • WS-X6848-SFP-2T • WS-X6848-SFP-2TXL • VS-S2T-10G • VS-S2T-10GXL • C6800-SUP6T • C6800-SUP6T-XL 	Cisco Small Form-Factor Pluggable Modules for Gigabit Ethernet Applications Data Sheet



Note

To determine if a specific SFP transceiver is compatible with the supported modules, see the [Cisco Gigabit Ethernet Transceiver Modules Compatibility Matrix](#) document that is available on Cisco.com.

10-GB Transceivers

The switch supports 10-GB X2 and 10-GB SFP+ transceivers. The following table lists the modules that the transceivers support and the links that provide transceiver specifications:

Table 36: 10-GB Transceiver Types

10-GB Transceiver Type	Supported on These Modules	More Information
X2 transceivers	<ul style="list-style-type: none">• WS-X6816-10G-2T• WS-X6816-10G-2TXL• WS-X6908-10G-2T• WS-X6908-10G-2TXL• VS-S2T-10G• VS-S2T-10G XL	Cisco 10GBASE X2 Modules

10-GB Transceiver Type	Supported on These Modules	More Information
SFP+ transceivers	<p>You can use these 10-GB modules with the Cisco OneX Converter Module¹¹</p> <ul style="list-style-type: none"> • C6800-8P10G • C6800-8P10G-XL • C6800-16P10G • C6800-16P10G-XL • C6800-32P10G • C6800-32P10G-XL • WS-X6816-10G-2T • WS-X6816-10G-2TXL • WS-X6908-10G-2T • WS-X6908-10G-2TXL • VS-S2T-10G • VS-S2T-10G XL • C6800-SUP6T • C6800-SUP6T-XL <p>You can also use these 40-GB modules with the Cisco FourX Converter Module¹²:</p> <ul style="list-style-type: none"> • WS-X6904-40G-2T • WS-X6904-40G-2TXL 	<ul style="list-style-type: none"> • Cisco 10GBASE SFP+ Modules Data Sheet • Cisco OneX Converter Module • Cisco 40GBASE CFP Modules Data Sheet

¹¹ CVR-X2-SFP10G - converter for X2 ports.

¹² CVR-CFP-4SFP10G.

To determine if a specific 10-GB transceiver is compatible with the supported modules, see the [10-Gigabit Ethernet Transceiver Modules Compatibility Matrix](#) document that is available on Cisco.com.

40-GB Transceivers

The switch supports 40-Gigabit C Form-factor Pluggable (CFP) and Quad Small Form-Factor Pluggable (QSFP) transceiver modules. The following table lists the modules that the transceivers support and the links that provide transceiver specifications:

Table 37: 40-GB Transceiver Types

40-GB Transceiver Type	Supported on These Modules	More Information
CFP Transceivers	<ul style="list-style-type: none"> • WS-X6904-40G-2T • WS-X6904-40G-2TXL 	Cisco 40GBASE CFP Modules Data Sheet
QSFP Transceivers	<ul style="list-style-type: none"> • C6800-SUP6T • C6800-SUP6T-XL • C6800-8P40G • C6800-8P40G-XL 	Cisco 40 Gigabit Modules QSFP Data Sheet

**Note**

To determine if a specific 40-GB transceiver is compatible with the supported modules, see the [Cisco 40-Gigabit Ethernet Transceiver Modules Compatibility Matrix](#) document that is available on Cisco.com.

WDM Transceivers

The following table lists the supported modules, applicable illustrations, and the specification tables for WDM transceivers.

Table 38: WDM Transceiver Types

WDM Transceiver Type	Description	Supported on These Modules	More Information
CWDM SFP	<p>The Coarse Wavelength Division Multiplexing (CWDM) SFP is a hot-swappable device that you can plug into SFP-compatible modules and supervisor engines. The CWDM SFP transceiver uses an LC optical connector to connect to a single-mode fiber-optic (SMF) cable. You can connect the CWDM SFPs to the CWDM passive optical system optical add/drop multiplexer (OADM) modules or multiplexer/demultiplexer plug-in modules using single-mode fiber-optic cables.</p>	<ul style="list-style-type: none"> • C6800-48P-SFP • C6800-48P-SFP-XL • C6800-8P10G • C6800-8P10G-XL • C6800-16P10G • C6800-16P10G-XL • C6800-32P10G • C6800-32P10G-XL • WS-X6724-SFP • WS-X6748-SFP • WS-X6848-SFP • VS-S2T-10G • VS-S2T-10G XL • C6800-SUP6T • C6800-SUP6T-XL 	<p>Cisco CWDM GBIC and SFP Solution</p>

WDM Transceiver Type	Description	Supported on These Modules	More Information
DWDM SFP	<p>The Cisco DWDM SFP is a hot-swappable I/O transceiver module that you can plug into Gigabit Ethernet SFP ports or slots. It supports the ITU 100-GHz wavelength grid and matches the wavelength plan for the Cisco 100-GHz ONS product family. It is a fixed-wavelength SFP, with 40 different SFP models. It uses standard SFP interface network: dual LC/PC connector.</p> <p>Note Only connections with patch cords having PC or UPC connectors are supported. Patch cords having APC connectors are not supported.</p>	<ul style="list-style-type: none"> • C6800-48P-SFP • C6800-48P-SFP-XL • C6800-8P10G • C6800-8P10G-XL • C6800-16P10G • C6800-16P10G-XL • C6800-32P10G • C6800-32P10G-XL • WS-X6724-SFP • WS-X6748-SFP • WS-X6848-SFP • VS-S2T-10G • VS-S2T-10G XL • C6800-SUP6T • C6800-SUP6T-XL 	<p>Cisco Dense Wavelength-Division Multiplexing Small Form-Factor Pluggable Module</p>

WDM Transceiver Type	Description	Supported on These Modules	More Information
DWDM SFP+	<p>The Cisco DWDM SFP+ transceiver module is a hot-swappable I/O device that you can plug into an Ethernet SFP+ port of a Cisco switch or router to link the port with the network. It supports 40 nontunable ITU 100-GHz wavelengths. It also supports digital optical monitoring capability and the Cisco quality identification (ID) feature, which enables a Cisco switch or router to identify whether or not the module is an SFP+ module certified and tested by Cisco.</p>	<p>You can use these 10-GB modules with the Cisco OneX Converter Module¹³</p> <ul style="list-style-type: none"> • C6800-8P10G • C6800-8P10G-XL • C6800-16P10G • C6800-16P10G-XL • C6800-32P10G • C6800-32P10G-XL • WS-X6816-10G • WS-X6816-10G XL • WS-X6908-10 • WS-X6908-10 XL • VS-S2T-10G • VS-S2T-10G XL • C6800-SUP6T • C6800-SUP6T-XL <p>You can also use these 40-GB modules with the Cisco FourX Converter Module¹⁴:</p> <ul style="list-style-type: none"> • WS-X6904-40G-2T • WS-X6904-40G-2TXL 	<ul style="list-style-type: none"> • Cisco 10GBASE Dense Wavelength-Division Multiplexing SFP+ Modules Data Sheet • Cisco OneX Converter Module • Cisco 40GBASE CFP Modules Data Sheet
DWDM X2	<p>The Cisco DWDM X2 transceiver is a hot-swappable I/O module that you can plug into an Ethernet X2 port of the switch, to link the port with the network. The module supports 32 nontunable ITU 100-GHz wavelengths compatible with the Cisco ONS DWDM channel plan. The Cisco DWDM X2 supports digital optical monitoring capability.</p>	<ul style="list-style-type: none"> • WS-X6816-10G • WS-X6816-10G XL • WS-X6908-10 • WS-X6908-10 XL • VS-S2T-10G • VS-S2T-10G XL 	<p>Cisco 10GBASE DWDM X2 Modules</p>

- 13 CVR-X2-SFP10G —Converter for X2 ports.
 14 CVR-CFP-4SFP10G.

**Note**

To determine if a specific WDM transceiver is compatible with the supported modules, see the [Cisco Gigabit Ethernet Transceiver Modules Compatibility Matrix](#) document that is available on Cisco.com.

Module Connectors

This section provides brief descriptions of the module connectors that the switch supports.

Related Topics

[Installing Transceivers and Module Connectors](#), on page 74


[Modules supported by Supervisor Engine 2T](#), on page 11

[Modules supported by Supervisor Engine 6T](#), on page 19

RJ-45 Connector

The RJ-45 connector is used to connect a Category 3, Category 5, Category 5e, or Category 6 foil twisted-pair or unshielded twisted-pair cable from the external network to the module interface connector.

Figure 50: RJ-45 Interface Cable Connector

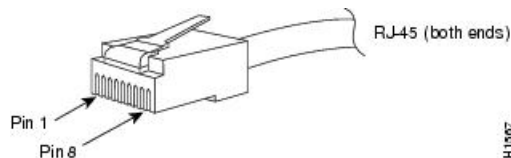**Caution**

Category 5e, Category 6, and Category 6a cables can store large levels of static electricity because of the dielectric properties of the materials used in their construction. Always ground the cables (especially in new cable runs) to a suitable and safe earth ground before connecting them to the module.

**Caution**

To comply with GR-1089 intrabuilding and lightning immunity requirements, you must use a foil twisted-pair (FTP) cable that is properly grounded at both ends.

SC Connector

The SC connector is used to connect fiber-optic module ports or transceivers with the external SMF or MMF network.


**Warning**

Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments. Statement 1051

**Note**

Make sure that the optical connectors are clean before making the connections. Contaminated connectors can damage the fiber and cause data errors.

Figure 51: SC Fiber-Optic Connector

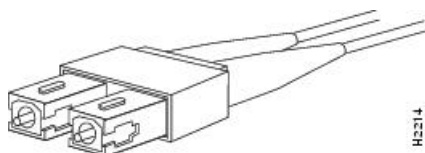

Always insert the network connector completely into the socket. A secure connection is especially important when you are establishing a connection between a module and a long-distance (1.24 miles) (2 km) network, or a module and a suspected highly attenuated network. If the link LED does not light up, try removing the network cable plug and reinserting it firmly into the module socket. It is possible that dirt or skin oils have accumulated on the plug faceplate (around the optical-fiber openings), generating significant attenuation and reducing the optical power levels below threshold levels so that a link cannot be established.

**Caution**

Use extreme care when removing or installing connectors so that you do not damage the connector housing or scratch the end-face surface of the fiber. Always install protective covers on unused or disconnected components to prevent contamination. Always clean fiber connectors before installing them.

LC Connector

The LC fiber optic connector is a small form-factor fiber-optic connector that provides high-density fiber connectivity. The LC connector can be used with either MMF cable or SMF cable. The LC connector uses a latching clip mechanism that is similar to the one used on the RJ-45 copper connector.


**Warning**

Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments. Statement 1051



Note Make sure that the optical connectors are clean before making the connections. Contaminated connectors can damage the fiber and cause data errors.


Figure 52: LC Fiber-Optic Connector

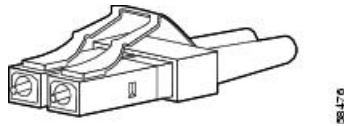

MTP-12 Connector

The MTP connector is 12-fiber optical connector with a footprint similar to the SC simplex connector. The MTP connector conforms to the TIA/EIA-604-5 intermateability standard.

Figure 53: MTP-12 Fiber-Optic Connector

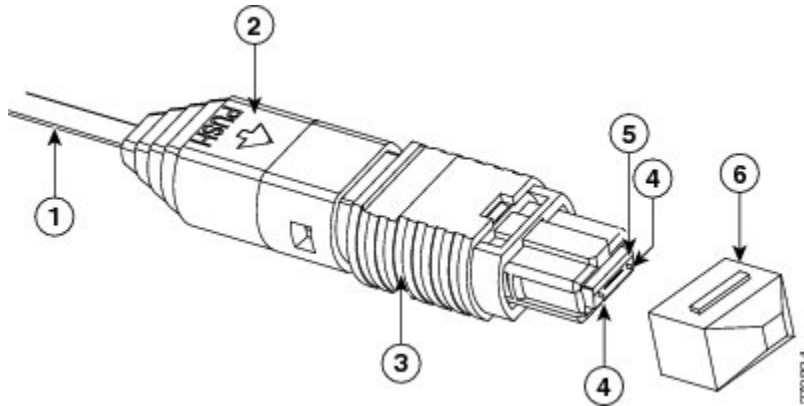

1	12-fiber ribbon	4	Guide pins
2	Boot	5	Ferrule
3	Housing assembly	6	Dust cap



Note You have to attach an adapter cable to this connector.

Cable Specifications

This section describes the cables supported on the switch.

Related Topics

[Installing Transceivers and Module Connectors](#), on page 74

[Modules supported by Supervisor Engine 2T](#), on page 11

[Modules supported by Supervisor Engine 6T](#), on page 19

SFP Modules and Cables

Use only Cisco SFP modules on your Cisco device. Each SFP module has an internal serial EEPROM that is encoded with security information. This encoding provides a way for Cisco to identify and validate that the SFP module meets the requirements for the device.

For cabling specifications, see the [Cisco SFP and SFP+ Transceiver Module Installation Notes](#). Each port must match the wave-length specifications on the other end of the cable, and the cable must not exceed the stipulated cable length. Copper 1000BASE-T SFP module transceivers use standard four twisted-pair, Category 5 cable at lengths up to 328 feet (100 meters).

For installation information, see the [Cisco SFP and SFP+ Transceiver Module Installation Notes](#).


Console Cables

The supervisor engine's front-panel console ports allow you to connect a terminal or modem to the console port.

- You can connect a terminal to the console port using one of these options:
 - The RJ45 console port—Uses an 8-pin RJ-45 connector, and has built-in DTE capability.


If the RJ-45 port does not have built-in DTE capability, use the RJ-45-to-RJ-45 rollover cable and DTE adapter, such as the DB-9 adapter. You can use the 6-ft DB9 Female-to-RJ45 console cable (to be ordered separately; Part Number: 72-3383-01).

Figure 54: DB9 Female-to-RJ45 Cable

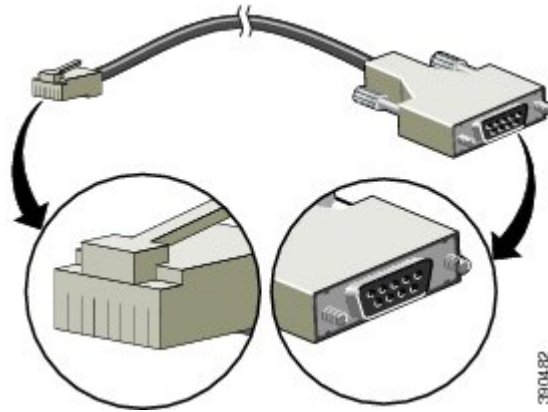

- The USB console port—Uses a USB Type A to 5-pin mini Type B cable (to be ordered separately; Part Number: 37-1090-01).

Figure 55: USB Type A-to-USB 5-Pin Mini-Type B Cable

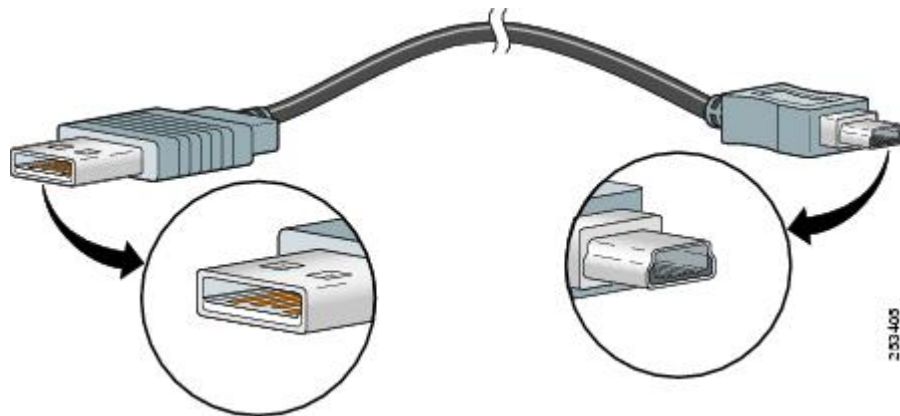

- You can connect a modem to the console port by using the RJ-45-to-RJ-45 roll over cable and DTE adapter.

Related Topics

[Connecting the Supervisor Engine Console Port , on page 73](#)

DB-9 Adapter (To Connect to a PC)

Use the RJ-45-to-RJ-45 rollover cable and the RJ-45-to-DB-9 female DTE adapter (labeled "Terminal") to connect the console port to a PC running terminal emulation software.

This table lists the pinouts for the asynchronous serial console port, the RJ-45-to-RJ-45 rollover cable, and the RJ-45-to-DB-9 female DTE adapter.

Table 39: Port Mode 1 Signaling and Pinouts (DB-9 Adapter)

Console Port	RJ-45-to-RJ-45 Rollover Cable		RJ-45-to-DB-9 Terminal Adapter	Console Device
Signal	RJ-45 Pin	RJ-45 Pin	DB-9 Pin	Signal
RTS	1 ¹⁵	8	8	CTS
DTR	2	7	6	DSR
TxD	3	6	2	RxD
GND	4	5	5	GND
GND	5	4	5	GND
RxD	6	3	3	TxD
DSR	7	2	4	DTR
CTS	8 ¹⁶	1	7	RTS

¹⁵ Pin 1 is connected internally to Pin 8.

¹⁶ Pin 1 is connected internally to Pin 8.

DB-25 Adapter (To Connect to a Terminal)

Use the RJ-45-to-RJ-45 rollover cable and the RJ-45-to-DB-25 female DTE adapter (labeled "Terminal") to connect the console port to a terminal.

This table lists the pinouts for the asynchronous serial console port, the RJ-45-to-RJ-45 rollover cable, and the RJ-45-to-DB-25 female DTE adapter.

Table 40: Port Mode 1 Signaling and Pinouts (DB-25 Adapter)

Console Port	RJ-45-to-RJ-45 Rollover Cable		RJ-45-to-DB-25 Terminal Adapter	Console Device
Signal	RJ-45 Pin	RJ-45 Pin	DB-25 Pin	Signal

Console Port	RJ-45-to-RJ-45 Rollover Cable		RJ-45-to-DB-25 Terminal Adapter	Console Device
RTS	1 ¹⁷	8	5	CTS
DTR	2	7	6	DSR
TxD	3	6	3	RxD
GND	4	5	7	GND
GND	5	4	7	GND
RxD	6	3	2	TxD
DSR	7	2	20	DTR
CTS	8 ¹⁸	1	4	RTS

¹⁷ Pin 1 is connected internally to Pin 8.

¹⁸ Pin 1 is connected internally to Pin 8.

Modem Adapter

Use the RJ-45-to-RJ-45 rollover cable and the RJ-45-to-DB-25 male DCE adapter (labeled "Modem") to connect the console port to a modem.

This table lists the pinouts for the asynchronous serial auxiliary port, the RJ-45-to-RJ-45 rollover cable, and the RJ-45-to-DB-25 male DCE adapter.

Table 41: Port Mode 1 Signaling and Pinouts (Modem Adapter)

Console Port	RJ-45-to-RJ-45 Rollover Cable		RJ-45-to-DB-25 Modem Adapter Adapter	Console Device
Signal	RJ-45 Pin	RJ-45 Pin	DB-25 Pin	Signal
RTS	1 ¹⁹	8	4	CTS
DTR	2	7	20	DSR
TxD	3	6	3	RxD
GND	4	5	7	GND
GND	5	4	7	GND
RxD	6	3	2	TxD

Console Port	RJ-45-to-RJ-45 Rollover Cable		RJ-45-to-DB-25 Modem Adapter Adapter	Console Device
DSR	7	2	8	DTR
CTS	8 ²⁰	1	5	RTS

¹⁹ Pin 1 is connected internally to Pin 8.

²⁰ Pin 1 is connected internally to Pin 8.

Identifying a Rollover Cable

You can identify a rollover cable by comparing the two ends of the cable. Holding the cables side by side, with the tab at the back, the wire connected to the pin on the outside of the left plug should be the same color as the wire connected to the pin on the outside of the right plug. If your cable was purchased from Cisco, pin 1 will be white on one connector, and pin 8 will be white on the other. (A rollover cable reverses pins 1 and 8, 2 and 7, 3 and 6, and 4 and 5.)

Figure 56: Identifying a Rollover Cable



Cable Pinouts

The following tables and figures describe the pinouts and schematics for cables that the switch supports.

Table 42: 10 BASE-T and 100 BASE-T Crossover Cable Pinout (MDI-X)

Side 1 Pin (Signal)	Side 2 Pin (Signal)
1 (RD+)	3 (TD+)
2 (RD-)	6 (TD-)
3 (TD+)	1 (RD+)
6 (TD-)	2 (RD-)

Side 1 Pin (Signal)	Side 2 Pin (Signal)
4 (Not used)	4 (Not used)
5 (Not used)	5 (Not used)
7 (Not used)	7 (Not used)
8 (Not used)	8 (Not used)

Figure 57: Twisted-Pair Crossover 10 BASE-T and 100 BASE-T Cable Schematic

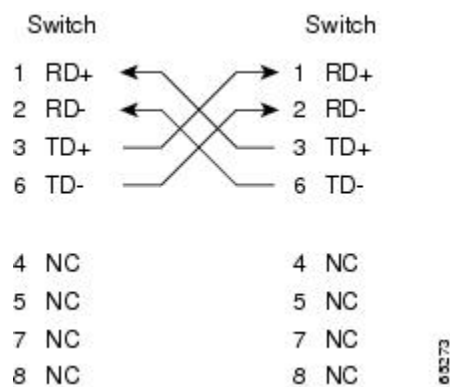
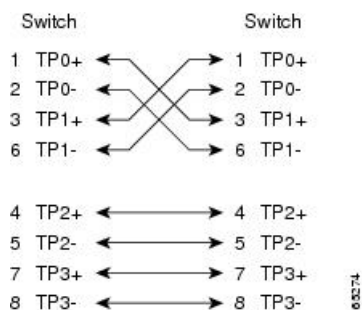


Table 43: 1000 BASE-T Crossover Cable Pinout (MDI-X)

Side 1 Pin (Signal)	Side 2 Pin (Signal)
1 (TP0+)	3 (TP1+)
2 (TP0-)	6 (TP1-)
3 (TP1+)	1 (TP0+)
6 (TP1-)	2 (TP1-)
4 (TP2+)	7 (TP3+)
5 (TP2-)	8 (TP3-)
7 (TP3+)	4 (TP2+)
8 (TP3-)	5 (TP2-)

Figure 58: Twisted-Pair Crossover 1000BASE-T Cable Schematic

The accessory kit contains the cable and adapters that you will need to connect a console (an ASCII terminal or PC running terminal emulation software) or modem to the console port. The accessory kit includes these items:

- RJ-45-to-RJ-45 rollover cable
- RJ-45-to-DB-9 female DTE adapter (labeled “Terminal”)

Table 44: MTP-12 Fiber-Optic Cable Pinout

Side 1 Pin (Signal)	Side 2 Pin (Signal)
1 (Tx)	12 (Rx)
2 (Tx)	11 (Rx)
3 (Tx)	10 (Rx)
4 (Tx)	9 (Rx)
5 (Not used)	8 (Not used)
6 (Not used)	7 (Not used)
7 (Not used)	6 (Not used)
8 (Not used)	5 (Not used)
9 (Rx)	4 (Tx)
10 (Rx)	3 (Tx)
11 (Rx)	2 (Tx)
12 (Rx)	1 (Tx)

Mode-Conditioning Patch Cord

When using the long-wavelength and long-haul (LX and LH) GBIC with 62.5-micron diameter multimode fiber (MMF), you must install a mode-conditioning patch cord (Cisco product number CAB-GELX-625 or equivalent) between the GBIC and the MMF cable on both the transmit and receive ends of the link.

A mode-conditioning patch cord is required for 1000BASE-LX and LH applications over FDDI-grade, OM1, and OM2 fiber-cable types. Mode-conditioning patch cords should not be used for applications over OM3 fiber cable (laser-optimized fiber cable). For more information about mode-conditioning patch cords, see the [Use of Mode Conditioning Patch Cables in Gigabit Ethernet and 10 Gigabit Ethernet Laser-Based Transmissions](#) bulletin available on Cisco.com.




Note

We recommend that you use the LX and LH GBIC and MMF with the patch cord for short link distances of 33 to 328 feet (10 to 100 meters) because not using the patch could result in an elevated bit error rate (BER).

The patch cord is required to comply with IEEE standards. IEEE found that link distances could not be met with certain types of fiber-optic cable due to a problem in the center of some fiber-optic cable cores. The solution is to launch light from the laser at a precise offset from the center by using the patch cord. At the output of the patch cord, the LX and LH GBIC complies with the IEEE 802.3z standard for 1000BASE-LX.

Example: Patch Cord Configuration

Figure 59: Patch Cord Configuration

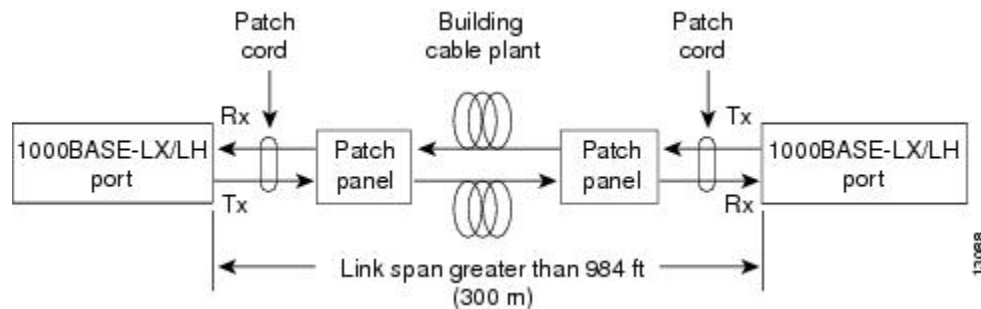

Installing the Patch Cord



Warning


Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments. Statement 1051

To install the patch cord, perform these steps:

Procedure

-
- Step 1** Plug the end of the patch cord labeled To Equipment into the GBIC. See [Figure 60: Patch Cord Installation, on page 124](#).
- Step 2** Plug the end labeled To Cable Plant into the patch panel. See [Figure 60: Patch Cord Installation, on page 124](#). The patch cord is 9.8-foot (3-meters) long and has duplex SC male connectors at each end.

Figure 60: Patch Cord Installation

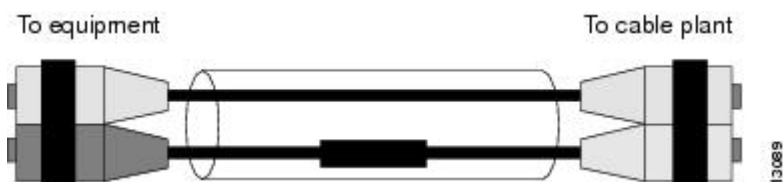

Differential Mode Delay

When an unconditioned laser source designed for operation on an SMF cable is directly coupled with an MMF cable, differential mode delay (DMD) might occur. DMD may degrade the modal bandwidth of the fiber-optic cable. This degradation causes a decrease in the link span (the distance between the transmitter and the receiver) that can be reliably supported.

The Gigabit Ethernet specification (IEEE 802.3z) outlines parameters for Ethernet communications at a gigabit-per-second rate. The specification offers a higher-speed version of Ethernet for backbone and server connectivity using existing deployed MMF cable by defining the use of laser-based optical components to propagate data over MMF cable.

Lasers function at the baud rates and longer distances required for Gigabit Ethernet. The 802.3z Gigabit Ethernet Task Force has identified the DMD condition that occurs with particular combinations of lasers and MMF cable. The results create an additional element of jitter that can limit the reach of Gigabit Ethernet over MMF cable.


With DMD, a single laser light pulse excites a few modes equally within an MMF cable. These modes, or light pathways, then follow two or more different paths. These paths might have different lengths and transmission delays as the light travels through the cable. With DMD, a distinct pulse propagating down the cable no longer remains a distinct pulse, or in extreme cases, might become two independent pulses. Strings of pulses may interfere with each other making it difficult to recover data.

DMD does not occur in all deployed fibers; it occurs with certain combinations of worst-case fibers and worst-case transceivers. Gigabit Ethernet experiences this problem because of its very high baud rate and its long MMF cable lengths. SMF cable and copper cable are not affected by DMD.

MMF cable has been tested for use only with LED sources. LEDs can create an overfilled launch condition within the fiber-optic cable. The overfilled launch condition describes the way LED transmitters couple light into the fiber-optic cable in a broad spread of modes. Similar to a light bulb radiating light into a dark room,

the generated light that shines in multiple directions can overfill the existing cable space and excite a large number of modes.

Figure 61: LED Transmission Compared to Laser Transmission

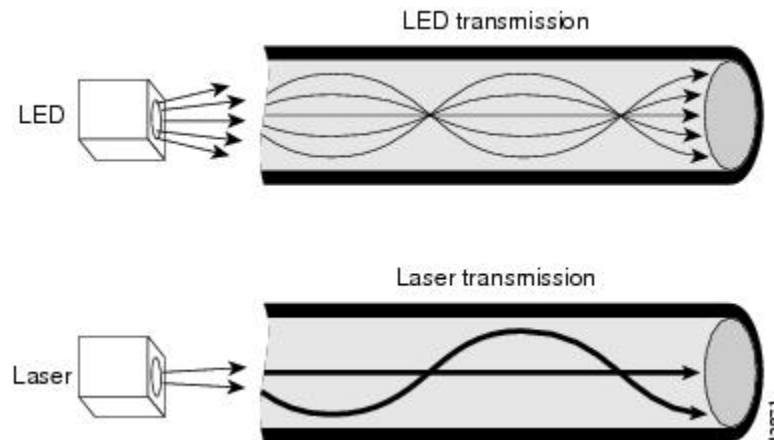

Lasers launch light in a more concentrated fashion. A laser transmitter couples light into only a fraction of the existing modes or optical pathways present in the fiber-optic cable. See [Figure 61: LED Transmission Compared to Laser Transmission](#), on page 125

The solution is to condition the laser light launched from the source (transmitter) so that it spreads the light evenly across the diameter of the fiber-optic cable making the launch look more like an LED source to the cable. The objective is to scramble the modes of light to distribute the power more equally in all the modes and prevent the light from being concentrated in just a few modes.

An unconditioned launch, in the worst case, might concentrate all of its light in the center of the fiber-optic cable, exciting only two or more modes equally.

A significant variation in the amount of DMD is produced from one MMF cable to the next. No reasonable test can be performed to survey an installed cable plant to assess the effect of DMD. Therefore, you must use the mode-conditioning patch cords for all uplink modules using MMF when the link span exceeds 984 feet (300 meters).

For link spans less than 984 feet (300 meters), you can omit the patch cord. We recommend that you do not use the LX and LH GBIC and MMF without the patch cord for very short link distances of 33 to 328 feet (10 to 100 meters) because it may result in an elevated BER.

Cleaning the Fiber-Optic Connectors

Fiber-optic connectors are used to connect two fibers together. When these connectors are used in a communications system, proper connection becomes a critical factor.

Fiber-optic cable connectors can be damaged by improper cleaning and connection procedures. Dirty or damaged fiber-optic connectors can result in communication that is not repeatable or is inaccurate.

Fiber-optic connectors differ from electrical or microwave connectors. In a fiber-optic system, light is transmitted through an extremely small fiber core. Because fiber cores are often 62.5 microns or less in diameter, and dust particles range from a tenth of a micron to several microns in diameter, dust and any contamination at the end of the fiber core can degrade the performance of the connector interface where the

two cores meet. The connector must be precisely aligned, and the connector interface must be absolutely free of trapped foreign material.

Connector loss or insertion loss is a critical performance characteristic of a fiber-optic connector. Return loss is also an important factor. Return loss specifies the amount of reflected light; the lower the reflection, the better the connection. The best physical-contact connectors have return losses greater than -40 dB, although -20 to -30 dB is more common.

The connection quality depends on two factors: the type of connector and the proper cleaning and connection techniques. Dirty fiber connectors are a common source of light loss. Keep the connectors clean at all times, and keep the dust covers installed when the connectors are not in use.

Before installing any type of cable or connector, use a lint-free alcohol pad from a cleaning kit to clean the ferrule, the protective white tube around the fiber, and the end-face surface of the fiber.

As a general rule, whenever there is a significant, unexplained loss of light, clean the connectors.

Guidelines

Connectors that are used inside the system are cleaned by the manufacturer and connected to the adapters in a proper manner. The operation of the system will be error free if the customer provides clean connectors on the application side and follows these guidelines:

- Cleans the connectors using either a CLETOP cassette cleaner (Type A for SC connectors and Type B for MT-RJ connectors) or lens tissues before connecting to the adapters; uses pure alcohol to remove contamination.
- Does not clean the inside of the connector adapters.
- Does not use force or quick movements when connecting the fiber-optic connectors in the adapters.
- Covers the connectors and adapters to keep the inside of the adapters or the surface of the connectors from getting dirty when not using the connectors or while cleaning the chassis.

How to Clean the Fiber-Optic Connectors



Caution

Use extreme care when removing or installing connectors so that you do not damage the connector housing or scratch the end-face surface of the fiber. Always install protective covers on unused or disconnected components to prevent contamination. Always clean fiber connectors before installing them.

To clean optical connectors, use a CLETOP cassette cleaner (type A for SC connectors or type B for MT-RJ connectors) and follow the product directions.



Warning

Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments. **Statement 1051**

Procedure

- Step 1** Use a lint-free tissue soaked in 99 percent pure isopropyl alcohol to gently wipe the faceplate. Wait five seconds for the surfaces to dry, and repeat.
- Step 2** Remove any residual dust from the faceplate with clean, dry, oil-free compressed air.
- Step 3** Use a magnifying glass or inspection microscope to inspect the ferrule at an angle. Do not look directly into the aperture. Repeat the process if any contamination is detected.
-



Repacking the Switch

To return or move the switch chassis, follow these steps and repack the switch using the original packaging material:

Procedure


- Step 1** Place the chassis in the packing bag (not shown here).
- Step 2** Place foam caps over the chassis.
- Step 3** Slide the components arranged in step 2 into the carton.
- Step 4** Place the accessory kit and cables in the compartments provided in the padding material (Callout 5).
Note You must include the accessory kit for the final package to fit properly.
- Step 5** Place the padding material (shown in callout 5) over the top of the chassis.
- Step 6** Place the carton over the pallet.
- Step 7** Fold the carton flaps down over the top and seal with packing tape.

Use an appropriate amount of 3M 373 3-inch-wide pressure-sensitive carton-sealing tape (the Cisco logo is displayed on the tape).

Step 8 Place the Cisco-approved poly-banding and edge protectors.

Step 9 Stretch-wrap the unit to hold the carton and the bottom pallet together.


Figure 62: Repacking the Switch

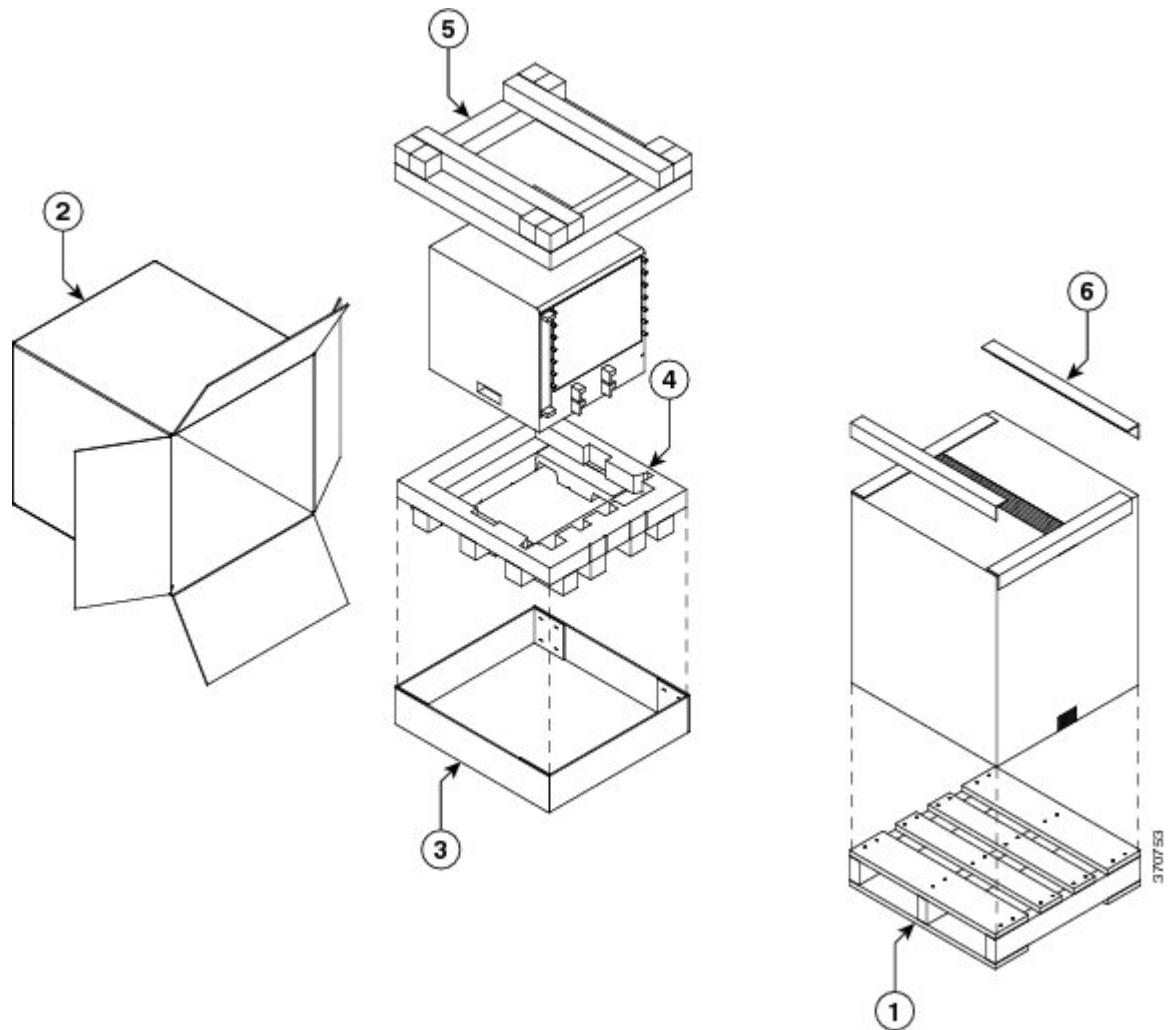

1	Bottom pallet	2	Carton
3	Foam cap	4	Foam cap
5	Padding material that also contains the accessory kit, cables, and documentation.)	6	Edge protectors

The package is now secure and ready for shipment.

Figure 63: Final Assembled Package

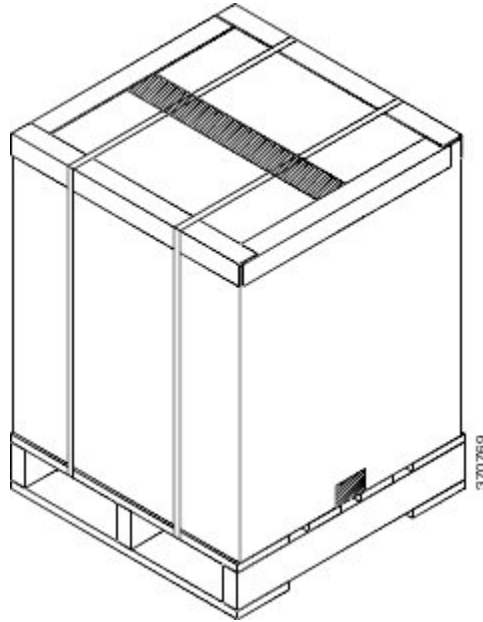



Troubleshooting

- [Getting Started, page 133](#)
- [Solving Problems at the System Component Level, page 133](#)
- [Identifying Startup Problems, page 134](#)
- [Troubleshooting the Power Supply Module, page 134](#)
- [Troubleshooting the Fan Tray, page 135](#)
- [Contacting Cisco Customer Service, page 136](#)
- [Finding Serial Numbers, page 136](#)

Getting Started

When the initial system startup is complete, verify the following:

- Power supplies are supplying power to the system.
- The fan tray assembly is operating.
- System software boots successfully.

If one or more of the above conditions are not met, use the procedures described in this chapter to isolate and, if possible, resolve the problem. If all of the above conditions are met, and the hardware installation is complete, refer to your software release notes for hardware support information and software caveats.

Solving Problems at the System Component Level

The key to success when troubleshooting the system is to isolate the problem to a specific system component. The first step is to compare what the system *is doing* to what it *should be doing*. Because a startup problem can usually be attributed to a single component, it is more efficient to isolate the problem to a subsystem rather than troubleshoot each separate component in the system.

The switch consists of these subsystems:

- Power supplies

- Fan tray assembly

The chassis fan tray assembly should operate whenever system power is on. You should see the FAN LED turn green and hear the fan tray assembly operating. A FAN LED indicates that one or more fans in the fan tray assembly is not operating. You should immediately contact a Customer Service representative if the fan tray assembly is not functioning properly. There are no installation adjustments that you can make if the fan tray assembly does not function properly at initial startup.

Identifying Startup Problems

LEDs indicate all system states in the startup sequence. By checking the LEDs, you can determine when and where the system failed in the startup sequence.

Procedure

- Step 1** Turn on the power supplies. You should immediately hear the system fan tray assembly begin to operate.
- If you do not hear the fans operating, see the [Troubleshooting the Power Supply Module, on page 134](#) section.
 - If you determine that the power supplies are functioning normally and that the fan tray assembly is faulty, contact a customer service representative.
 - If the fan tray assembly does not function properly at initial startup, there are no installation adjustments that you can make. [Troubleshooting the Fan Tray, on page 135](#) section.
- Step 2** If the startup information and system banner do not display at startup, verify that the terminal is set correctly and that it is connected properly to the console port.
-

Troubleshooting the Power Supply Module

If the INPUT OK LED does not light up after you turn on the power switch, follow these steps to isolate a power subsystem problem:

Procedure

- Step 1** Verify that the INPUT OK LED on the PSM is green.
- a) If the IN LED is green, the AC source is good and the power supply is functional.
 - b) If the IN LED is off, ensure that the PSM is flush with the back of the chassis. Turn off the power switch, tighten the captive installation screw, and then turn on the power switch.
 - c) If the IN LED remains off, there might be a problem with the AC source or the power cord.
 - d) Turn off the power to the switch, connect the power cord to another power source if one is available, and turn on the power.
 - e) If the IN LED is green, the problem is the first power source.

f) If the IN LED fails to light up after you connect the power supply to a new power source, replace the power cord, and turn on the switch.

g) If the IN LED then lights up, return the first power cord for replacement.

If this unit has more than one power cord, repeat Step 1 (and all the substeps) for each PSM.

For information about PSM LEDs, see [Power Supply Module LEDs](#), on page 25.

Step 2 If the INPUT OK LED still fails to light up when the switch is connected to a different power source with a new power cord, the PSM is probably faulty.

If a second PSM is available, install it in the second power supply bay, and contact a Cisco customer service representative for further instructions.

Step 3 Verify that you have installed the power cord in the correct PEM.

Each PSM and corresponding PEM is numbered.

Step 4 Repeat Step 1, Step 2, and Step 3 for all the PSMs that you have installed.

If you are unable to resolve the problem, or if you have determined that either a power supply or a backplane connector is faulty, contact a Cisco customer service representative for instructions.

Related Topics

[Power Supply Module](#), on page 21

[Power Entry Module](#), on page 23

[Power Supply Module LEDs](#), on page 25

[3000 W Power Supply AC Power Cords](#), on page 93

Troubleshooting the Fan Tray

To isolate a fan tray problem, follow these steps:

Procedure

Step 1 Verify that the FAN LED on the fan tray is green.

If the FAN LED is not green, see [Solving Problems at the System Component Level](#), on page 133 to determine whether or not the power subsystem is functioning properly.

For information about fan tray LEDs, see [Fan Tray LED](#), on page 24.

Step 2 Check to determine if the FAN LED is red. If the FAN LED is red, the fan tray is not seated in the backplane or has malfunctioned. Perform the following tasks:

a) To ensure that the fan tray is seated properly, remove the fan tray, and reinstall it. See [Removing and Installing the Fan Tray](#), on page 80.

b) Restart the system.

c) If the FAN LED is still red, the system detects one or more fan failures. Contact a Cisco customer service representative for instructions.

Related Topics

[Fan Tray, on page 20](#)

[Air Flow, on page 31](#)

[Fan Tray LED, on page 24](#)

Contacting Cisco Customer Service

If you are unable to solve a startup problem after using the troubleshooting suggestions in this chapter, contact a Cisco customer service representative for assistance and additional instructions. Before you call, have the following information ready to help your service provider assist you as quickly as possible:

- Date on which you received the switch
- Chassis serial number
- Type of software and release number
- Maintenance agreement or warranty information
- Brief description of the problem
- Brief explanation of the steps you have already taken to isolate and resolve the problem

Finding Serial Numbers

If you contact Cisco Technical Assistance, you should know the serial number of the part you are having a problem with. You can also use the **show version** privileged EXEC command to see the serial number.

Table 45: Serial Number Illustrations

Item	Serial Number Illustration
Chassis	Figure 64: Chassis Serial Number Location, on page 137
Fan Tray	Figure 65: Fan Tray Serial Number Location, on page 137
Power Supply Module	Figure 66: Power Supply Module Serial Number Location, on page 137
Power Supply Converter	Figure 67: Power Supply Converter Serial Number Location, on page 138

Figure 64: Chassis Serial Number Location

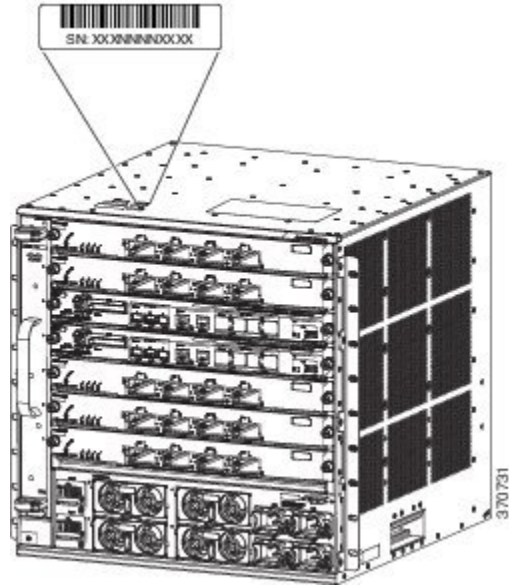


Figure 65: Fan Tray Serial Number Location

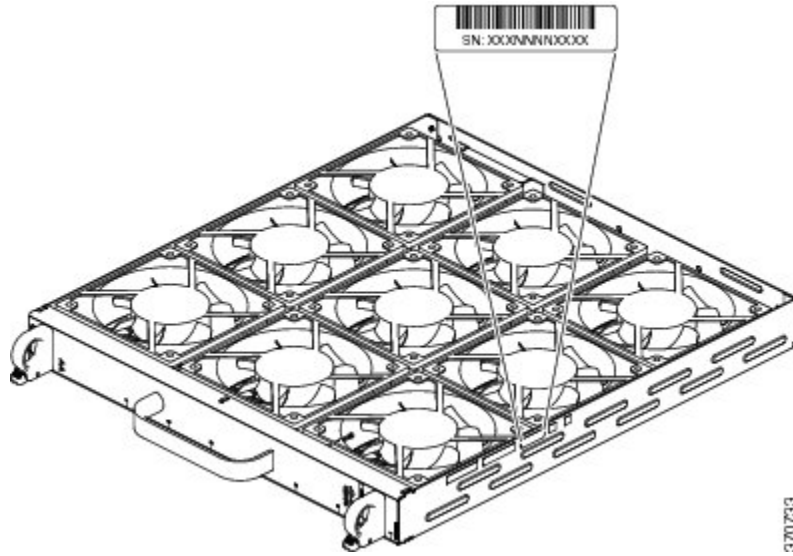


Figure 66: Power Supply Module Serial Number Location


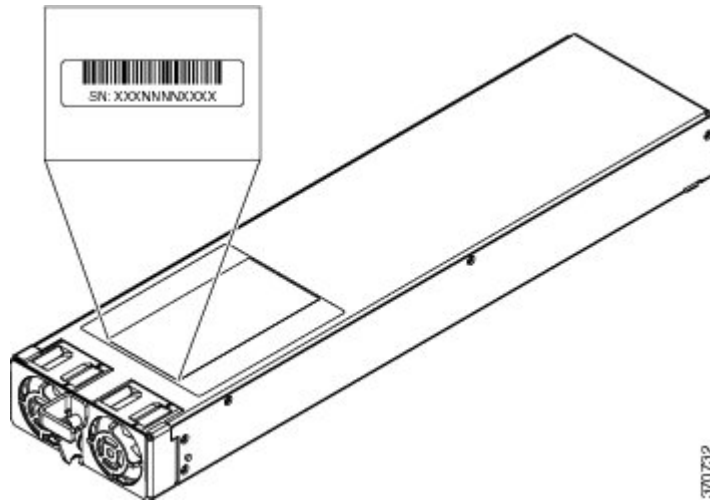


Figure 67: Power Supply Converter Serial Number Location

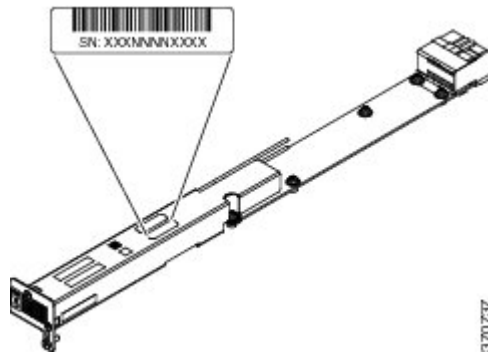

Related Topics

[Rack-Mounting the Chassis, on page 63](#)

[Chassis, on page 3](#)