



Cisco PA-FE-TX and Cisco PA-FE-FX Fast Ethernet 100BASE-T Port Adapter Installation and Configuration

Product Number: PA-FE-TX(=) and PA-FE-FX(=)

Platforms Supported: Catalyst 5000 Family Switches with RSM/VIP2, Cisco 7100 Series, Cisco 7200 Series, Cisco uBR7200 Series, Cisco 7301 Routers, Cisco 7304 PCI Port Adapter Carrier Card in the Cisco 7304 Router, Cisco 7401ASR Routers, and VIP in the Cisco 7000 Series and Cisco 7500 Series

Corporate Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 526-4100



THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The following information is for FCC compliance of Class A devices: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio-frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to correct the interference at their own expense.

The following information is for FCC compliance of Class B devices: The equipment described in this manual generates and may radiate radio-frequency energy. If it is not installed in accordance with Cisco's installation instructions, it may cause interference with radio and television reception. This equipment has been tested and found to comply with the limits for a Class B digital device in accordance with the specifications in part 15 of the FCC rules. These specifications are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation.

Modifying the equipment without Cisco's written authorization may result in the equipment no longer complying with FCC requirements for Class A or Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense.

You can determine whether your equipment is causing interference by turning it off. If the interference stops, it was probably caused by the Cisco equipment or one of its peripheral devices. If the equipment causes interference to radio or television reception, try to correct the interference by using one or more of the following measures:

- Turn the television or radio antenna until the interference stops.
- Move the equipment to one side or the other of the television or radio.
- Move the equipment farther away from the television or radio.
- Plug the equipment into an outlet that is on a different circuit from the television or radio. (That is, make certain the equipment and the television or radio are on circuits controlled by different circuit breakers or fuses.)

Modifications to this product not authorized by Cisco Systems, Inc. could void the FCC approval and negate your authority to operate the product.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

CCSP, the Cisco Square Bridge logo, Cisco Unity, Follow Me Browsing, FormShare, and StackWise are trademarks of Cisco Systems, Inc.; Changing the Way We Work, Live, Play, and Learn, and iQuick Study are service marks of Cisco Systems, Inc.; and Aironet, ASIST, BPX, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Empowering the Internet Generation, Enterprise/Solver, EtherChannel, EtherFast, EtherSwitch, Fast Step, GigaDrive, GigaStack, HomeLink, Internet Quotient, IOS, IP/TV, iQ Expertise, the iQ logo, iQ Net Readiness Scorecard, LightStream, Linksys, MeetingPlace, MGX, the Networkers logo, Networking Academy, Network Registrar, Packet, PIX, Post-Routing, Pre-Routing, ProConnect, RateMUX, Registrar, ScriptShare, SlideCast, SMARTnet, StrataView Plus, SwitchProbe, TeleRouter, The Fastest Way to Increase Your Internet Quotient, TransPath, and VCO are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or Website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0406R)



Preface vii

Objectives	vii
Organization	viii
Related Documentation	viii
Obtaining Documentation	x
Cisco.com	x
Ordering Documentation	x
Documentation Feedback	x
Obtaining Technical Assistance	xi
Cisco Technical Support Website	xi
Submitting a Service Request	xi
Definitions of Service Request Severity	xi
Obtaining Additional Publications and Information	xii

CHAPTER 1

Overview 1-1

Fast Ethernet Overview	1-1
Port Adapter Overview	1-2
IEEE 802.3u 100BASE-T Specifications	1-3
LEDs	1-4
Cables, Connectors, and Pinouts	1-5
PA-FE-TX Connectors	1-5
PA-FE-FX Connectors	1-6
MII Connection	1-7
Port Adapter Slot Locations on the Supported Platforms	1-8
Catalyst 5000 Family Switches with RSM/VIP2 Slot Numbering	1-9
Cisco 7000 Series Routers with VIP Slot Numbering	1-12
Cisco 7100 Series Routers Slot Numbering	1-14
Cisco 7200 Series Routers, Cisco 7200 VXR Routers, and Cisco uBR7200 Series Routers Slot Numbering	1-15
Cisco 7301 Router Slot Numbering	1-19
Cisco 7304 PCI Port Adapter Carrier Card Slot Numbering	1-20
Cisco 7401ASR Router Slot Numbering	1-21
Cisco 7500 Series Routers with VIP Slot Numbering	1-21

- Identifying Interface Addresses 1-22
 - Interface Addresses of the Catalyst 5000 Family Switches with RSM/VIP2 1-23
 - Interface Addresses of Cisco 7000 Series Routers with VIP 1-23
 - Interface Addresses of Cisco 7100 Series Routers 1-24
 - Interface Addresses of Cisco 7200 Series Routers, Cisco 7200 VXR Routers, and Cisco uBR7200 Series Routers 1-24
 - Interface Addresses of Cisco 7301 Router 1-24
 - Interface Addresses Cisco 7304 PCI Port Adapter Carrier Card 1-24
 - Interface Addresses of Cisco 7401ASR Router 1-25
 - Interface Addresses of Cisco 7500 Series Routers with VIP 1-25

CHAPTER 2

Preparing for Installation 2-1

- Required Tools and Equipment 2-1
- Minimum Software and Hardware Requirements 2-2
- Checking Hardware and Software Compatibility 2-3
- Safety Guidelines 2-3
 - Safety Warnings 2-3
 - Electrical Equipment Guidelines 2-9
 - Telephone Wiring Guidelines 2-9
 - Preventing Electrostatic Discharge Damage 2-9
- Laser/LED Safety 2-10
- FCC Class A Compliance 2-11

CHAPTER 3

Removing and Installing Port Adapters 3-1

- Handling Port Adapters 3-1
- Online Insertion and Removal 3-2
- Warnings and Cautions 3-2
- Port Adapter Removal and Installation 3-3
 - Catalyst 5000 Family Switches with RSM/VIP2—Removing and Installing a Port Adapter 3-4
 - Cisco 7100 Series Routers—Removing and Installing a Port Adapter 3-5
 - Cisco 7200 Series Routers and Cisco 7200 VXR Routers—Removing and Installing a Port Adapter 3-6
 - Cisco uBR7200 Series Routers—Removing a Port Adapter 3-7
 - Cisco uBR7200 Series Routers—Installing a Port Adapter 3-8
 - Cisco 7301 Router—Removing and Installing a Port Adapter 3-9
 - Cisco 7304 PCI Port Adapter Carrier Card—Removing and Installing a Port Adapter 3-10
 - Cisco 7401ASR Router—Removing and Installing a Port Adapter 3-12
 - Cisco 7000 Series Routers and Cisco 7500 Series Routers with VIP—Removing and Installing a Single-Width Port Adapter 3-13

Connecting PA-FE-TX and PA-FE-FX Port Adapter Interface Cables	3-14
PA-FE-TX and PA-FE-FX Port Adapter RJ-45 and MII Connections	3-14
Attaching PA-FE-TX and PA-FE-FX Port Adapter Interface Cables	3-14

CHAPTER 4

Configuring the PA-FE-TX or PA-FE-FX	4-1
Using the EXEC Command Interpreter	4-1
Configuring the Interfaces	4-2
Performing a Basic Configuration	4-2
Configuring PA-FE-TX or PA-FE-FX Transmission Mode	4-4
Configuring PA-FE-TX or PA-FE-FX Media Type	4-4
Checking the Configuration	4-5
Using show Commands to Verify the Interface Status	4-5
Using the show controllers Commands	4-6
Using the show protocols Command	4-6
Using the show running-config Command	4-6
Using the show startup-config Command	4-7
Using the show version or show hardware Commands	4-8
Using the show diag Command	4-13
Using the show interfaces Command	4-17
Using the ping Command to Verify Network Connectivity	4-22



Preface

This preface describes the objectives and organization of this document and explains how to find additional information on related products and services. This preface contains the following sections:

- [Objectives, page vii](#)
- [Organization, page viii](#)
- [Related Documentation, page viii](#)
- [Obtaining Documentation, page x](#)
- [Documentation Feedback, page x](#)
- [Obtaining Technical Assistance, page xi](#)
- [Obtaining Additional Publications and Information, page xii](#)

Objectives

This document describes how to install and configure the 100BASE-TX and 100BASE-FX port adapters (PA-FE-TX[=] and PA-FE-FX[=]), hereafter referred to as the PA-FE-TX or the PA-FE-FX, which is used in the following platforms:

- Catalyst 5000 family switches with the Route Switch Module (RSM)/second-generation Versatile Interface Processor (VIP2)
- Cisco 7100 series routers, consisting of the Cisco 7120 series and Cisco 7140 series
- Cisco 7200 series routers, consisting of the 2-slot Cisco 7202, 4-slot Cisco 7204 and Cisco 7204VXR, and the 6-slot Cisco 7206 and Cisco 7206VXR
- Cisco uBR7200 series universal broadband routers, consisting of the 6-slot Cisco uBR7246 and Cisco uBR7246VXR and the 3-slot Cisco uBR7223
- Cisco 7301 router
- Cisco 7304 PCI Port Adapter Carrier Card in the Cisco 7304 router
- Cisco 7401ASR router
- Versatile Interface Processor (VIP) in Cisco 7500 series and Cisco 7000 series routers with the 7000 Series Route Switch Processor (RSP7000) and 7000 Series Chassis Interface (RSP7000CI)

Organization

This document contains the following chapters:

Section	Title	Description
Chapter 1	Overview	Describes the PA-FE-TX and PA-FE-FX and their LED displays, cables, and receptacles.
Chapter 2	Preparing for Installation	Describes safety considerations, tools required, and procedures you should perform before the actual installation.
Chapter 3	Removing and Installing Port Adapters	Describes the procedures for installing and removing PA-FE-TX and PA-FE-FX port adapters in the supported platforms.
Chapter 4	Configuring the PA-FE-TX or PA-FE-FX	Provides instructions for configuring port adapters on the supported platforms.

Related Documentation

Your router and the Cisco IOS software running on it contain extensive features and functionality, which are documented in the following resources:

- Cisco IOS software:

For configuration information and support, refer to the modular configuration and modular command reference publications in the Cisco IOS software configuration documentation set that corresponds to the software release installed on your Cisco hardware.



Note You can access Cisco IOS software configuration and hardware installation and maintenance documentation on the World Wide Web at <http://www.cisco.com>. Translated documentation is available at http://www.cisco.com/public/countries_languages.html.

- Catalyst RSM/VIP2:

For hardware installation and maintenance information, refer to the following publications:

- *Route Switch Module Catalyst VIP2-15 and VIP2-40 Installation and Configuration Note*
- *Catalyst 5000 Series Route Switch Module Installation and Configuration Note*
- The installation and configuration guide that shipped with your Catalyst 5000 family switch

- Cisco 7100 series routers:

- For hardware installation and maintenance information, refer to the *Cisco 7100 Series VPN Router Installation and Configuration Guide* that shipped with your Cisco 7100 series router.
- For information on setting up a Virtual Private Network, refer to the *Cisco 7100 Series VPN Configuration Guide*.

- Cisco 7200 series routers:
 - For port adapter hardware and memory configuration guidelines, refer to the *Cisco 7200 Series Port Adapter Hardware Configuration Guidelines*.
 - For hardware installation and maintenance information (including the Cisco 7206 or Cisco 7206VXR as a router shelf in a Cisco AS5800 Universal Access Server), refer to the installation and configuration guide that shipped with your Cisco 7200 series router.
- Cisco uBR7200 series routers:

For hardware installation and maintenance information, refer to:

 - *Cisco uBR7200 Series Hardware Installation Guide*
 - *Cisco uBR7200 Series Software Configuration Guide*
- Cisco 7301 routers:

For hardware installation and maintenance information, refer to the *Cisco 7301 Installation and Configuration Guide* or the *Cisco 7301 Router Quick Start Guide*.
- Cisco 7304 PCI Port Adapter Carrier Card in Cisco 7304 routers:

For hardware installation and maintenance information, refer to the *Cisco 7304 PCI Port Adapter Carrier Card Installation and Configuration Guide*.
- Cisco 7401ASR routers:

For hardware installation and maintenance information, refer to the *Cisco 7401ASR Installation and Configuration Guide* or the *Cisco 7401ASR Quick Start Guide*.
- VIP2 or VIP4 in Cisco 7000 series and Cisco 7500 series routers:

For hardware installation and maintenance information, refer to the following publications:

 - The installation and configuration guide that shipped with your Cisco 7000 series or Cisco 7500 series router
 - *Second-Generation Versatile Interface Processor (VIP2) Installation and Configuration*
 - *Fourth-Generation Versatile Interface Processor (VIP4) Installation and Configuration*
- International agency compliance, safety, and statutory information for WAN interfaces:
 - *Site Preparation and Safety Guide*
 - *Regulatory Compliance and Safety Information for the Cisco 7000 Series Routers*
 - *Regulatory Compliance and Safety Information for Cisco 7100 Series VPN Routers*
 - *Regulatory Compliance and Safety Information for the Cisco 7200 Series Routers*
 - *“Regulatory Compliance and Safety Information for the Cisco uBR7200 Series Universal Broadband Router*
 - *Regulatory Compliance and Safety Information for the Cisco 7300 Series Routers*
 - *Cisco 7401ASR Regulatory Compliance and Safety Information*
 - *Regulatory Compliance and Safety Information for the Cisco 7500 Series Routers*
- To view Cisco documentation or obtain general information about the documentation, refer to the following sources:
 - [“Obtaining Documentation” section on page x](#)
 - [“Obtaining Technical Assistance” section on page xi](#)
 - [“Obtaining Additional Publications and Information” section on page xii](#)

- Customer service at 800 553-6387 or 408 526-7208. Customer service hours are 5:00 a.m. to 6:00 p.m. Pacific time, Monday through Friday (excluding Cisco-observed holidays).
- *Cisco Information Packet* that shipped with your router.

Obtaining Documentation

Cisco documentation and additional literature are available on Cisco.com. Cisco also provides several ways to obtain technical assistance and other technical resources. These sections explain how to obtain technical information from Cisco Systems.

Cisco.com

You can access the most current Cisco documentation at this URL:

<http://www.cisco.com/univercd/home/home.htm>

You can access the Cisco website at this URL:

<http://www.cisco.com>

You can access international Cisco websites at this URL:

http://www.cisco.com/public/countries_languages.shtml

Ordering Documentation

You can find instructions for ordering documentation at this URL:

http://www.cisco.com/univercd/cc/td/doc/es_inpkc/pdi.htm

You can order Cisco documentation in these ways:

- Registered Cisco.com users (Cisco direct customers) can order Cisco product documentation from the Ordering tool:
<http://www.cisco.com/en/US/partner/ordering/index.shtml>
- Nonregistered Cisco.com users can order documentation through a local account representative by calling Cisco Systems Corporate Headquarters (California, USA) at 408 526-7208 or, elsewhere in North America, by calling 800 553-NETS (6387).

Documentation Feedback

You can send comments about technical documentation to bug-doc@cisco.com.

You can submit comments by using the response card (if present) behind the front cover of your document or by writing to the following address:

Cisco Systems
Attn: Customer Document Ordering
170 West Tasman Drive
San Jose, CA 95134-9883

We appreciate your comments.

Obtaining Technical Assistance

For all customers, partners, resellers, and distributors who hold valid Cisco service contracts, Cisco Technical Support provides 24-hour-a-day, award-winning technical assistance. The Cisco Technical Support Website on Cisco.com features extensive online support resources. In addition, Cisco Technical Assistance Center (TAC) engineers provide telephone support. If you do not hold a valid Cisco service contract, contact your reseller.

Cisco Technical Support Website

The Cisco Technical Support Website provides online documents and tools for troubleshooting and resolving technical issues with Cisco products and technologies. The website is available 24 hours a day, 365 days a year at this URL:

<http://www.cisco.com/techsupport>

Access to all tools on the Cisco Technical Support Website requires a Cisco.com user ID and password. If you have a valid service contract but do not have a user ID or password, you can register at this URL:

<http://tools.cisco.com/RPF/register/register.do>

Submitting a Service Request

Using the online TAC Service Request Tool is the fastest way to open S3 and S4 service requests. (S3 and S4 service requests are those in which your network is minimally impaired or for which you require product information.) After you describe your situation, the TAC Service Request Tool automatically provides recommended solutions. If your issue is not resolved using the recommended resources, your service request will be assigned to a Cisco TAC engineer. The TAC Service Request Tool is located at this URL:

<http://www.cisco.com/techsupport/servicerequest>

For S1 or S2 service requests or if you do not have Internet access, contact the Cisco TAC by telephone. (S1 or S2 service requests are those in which your production network is down or severely degraded.) Cisco TAC engineers are assigned immediately to S1 and S2 service requests to help keep your business operations running smoothly.

To open a service request by telephone, use one of the following numbers:

Asia-Pacific: +61 2 8446 7411 (Australia: 1 800 805 227)

EMEA: +32 2 704 55 55

USA: 1 800 553 2447

For a complete list of Cisco TAC contacts, go to this URL:

<http://www.cisco.com/techsupport/contacts>

Definitions of Service Request Severity

To ensure that all service requests are reported in a standard format, Cisco has established severity definitions.

Severity 1 (S1)—Your network is “down,” or there is a critical impact to your business operations. You and Cisco will commit all necessary resources around the clock to resolve the situation.

Severity 2 (S2)—Operation of an existing network is severely degraded, or significant aspects of your business operation are negatively affected by inadequate performance of Cisco products. You and Cisco will commit full-time resources during normal business hours to resolve the situation.

Severity 3 (S3)—Operational performance of your network is impaired, but most business operations remain functional. You and Cisco will commit resources during normal business hours to restore service to satisfactory levels.

Severity 4 (S4)—You require information or assistance with Cisco product capabilities, installation, or configuration. There is little or no effect on your business operations.

Obtaining Additional Publications and Information

Information about Cisco products, technologies, and network solutions is available from various online and printed sources.

- Cisco Marketplace provides a variety of Cisco books, reference guides, and logo merchandise. Visit Cisco Marketplace, the company store, at this URL:
<http://www.cisco.com/go/marketplace/>
- The *Cisco Product Catalog* describes the networking products offered by Cisco Systems, as well as ordering and customer support services. Access the Cisco Product Catalog at this URL:
<http://cisco.com/univercd/cc/td/doc/pcat/>
- *Cisco Press* publishes a wide range of general networking, training and certification titles. Both new and experienced users will benefit from these publications. For current Cisco Press titles and other information, go to Cisco Press at this URL:
<http://www.ciscopress.com>
- *Packet* magazine is the Cisco Systems technical user magazine for maximizing Internet and networking investments. Each quarter, Packet delivers coverage of the latest industry trends, technology breakthroughs, and Cisco products and solutions, as well as network deployment and troubleshooting tips, configuration examples, customer case studies, certification and training information, and links to scores of in-depth online resources. You can access Packet magazine at this URL:
<http://www.cisco.com/packet>
- *iQ Magazine* is the quarterly publication from Cisco Systems designed to help growing companies learn how they can use technology to increase revenue, streamline their business, and expand services. The publication identifies the challenges facing these companies and the technologies to help solve them, using real-world case studies and business strategies to help readers make sound technology investment decisions. You can access iQ Magazine at this URL:
<http://www.cisco.com/go/iqmagazine>
- *Internet Protocol Journal* is a quarterly journal published by Cisco Systems for engineering professionals involved in designing, developing, and operating public and private internets and intranets. You can access the Internet Protocol Journal at this URL:
<http://www.cisco.com/ipj>
- World-class networking training is available from Cisco. You can view current offerings at this URL:
<http://www.cisco.com/en/US/learning/index.html>



Overview

This chapter describes the Cisco PA-FE-TX and Cisco PA-FE-FX port adapters and contains the following sections:

- [Fast Ethernet Overview, page 1-1](#)
- [Port Adapter Overview, page 1-2](#)
- [IEEE 802.3u 100BASE-T Specifications, page 1-3](#)
- [LEDs, page 1-4](#)
- [Cables, Connectors, and Pinouts, page 1-5](#)
- [Port Adapter Slot Locations on the Supported Platforms, page 1-8](#)
- [Identifying Interface Addresses, page 1-22](#)

Fast Ethernet Overview

The term *Ethernet* is commonly used for all carrier sense multiple access/collision detection (CSMA/CD) LANs that generally conform to Ethernet specifications, including Fast Ethernet under IEEE 802.3u.



Note

100BASE-TX is intended for Environment A, and 100BASE-FX is intended for Environment B. Both are described in the IEEE 802.3u standard.

IEEE 802.3u is well suited to applications where a local communication medium must carry sporadic, occasionally heavy traffic at peak data rates. Stations on a CSMA/CD LAN can access the network at any time. Before sending data, the station *listens* to the network to see if it is already in use. If it is in use, the station waits until the network is not in use, then transmits. This process is known as half-duplex operation. A collision occurs when two stations listen for network traffic, hear none, and transmit almost simultaneously. When simultaneous transmission occurs, both transmissions are damaged and the stations must retransmit. The stations detect the collision and use backoff algorithms to determine when they should retransmit.

Both Ethernet and IEEE 802.3u are broadcast networks, which means that all stations see all transmissions. Each station must examine received frames to determine whether it is the intended destination and, if it is, pass the frame to a higher protocol layer for processing.

IEEE 802.3u specifies the following different physical layers for 100BASE-T:


- 100BASE-TX—100BASE-T, half- and full-duplex over Category 5 unshielded twisted-pair (UTP), Electronics Industry Association/Telecommunications Industry Association (EIA/TIA)-568-compliant cable
- 100BASE-FX—100BASE-T, half- and full-duplex over optical fiber

Each physical layer protocol has a name that summarizes its characteristics in the format *speed/signaling method/segment length*, where *speed* is the LAN speed in megabits per second (Mbps), *signaling method* is the signaling method used (either *baseband* or *broadband*), and *segment length* is the maximum length between stations in hundreds of meters. Therefore, 100BASE-T specifies a 100-Mbps, baseband LAN with maximum network segments.

Port Adapter Overview


The PA-FE-TX and PA-FE-FX single-width port adapters provide a 100-Mbps, 100BASE-T Fast Ethernet interface and support both full-duplex and half-duplex operation. Refer to the “[Fast Ethernet Overview](#)” section on page 1-1 for additional information. [Figure 1-1](#) shows the PA-FE-TX, and [Figure 1-2](#) shows the PA-FE-FX.

Figure 1-1 PA-FE-TX—Faceplate View

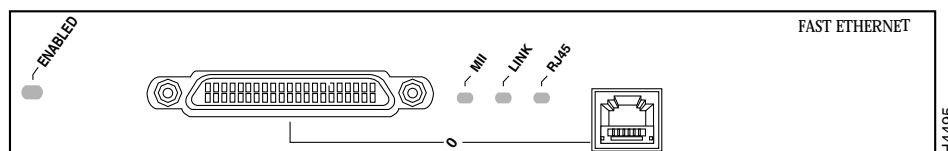

H4495

Figure 1-2 PA-FE-FX—Faceplate View

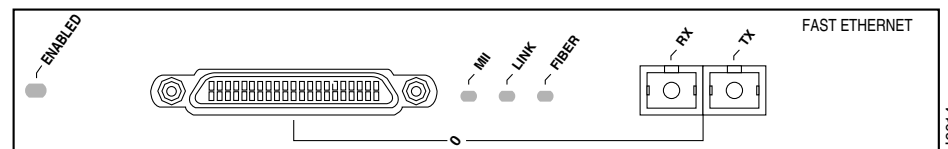

H6014

IEEE 802.3u 100BASE-T Specifications


This section provides specifications for IEEE 802.3u 100BASE-T. Table 1-1 provides cabling specifications for 100BASE-TX Fast Ethernet transmission over UTP and foil twisted-pair (FTP), and 100BASE-FX Fast Ethernet over fiber-optic cables. It also summarizes IEEE 802.3u 100BASE-TX and 100BASE-FX physical characteristics. (See [Figure 1-3](#)).

Table 1-1 Specifications and Connection Limits for 100BASE-TX and 100BASE-FX Transmission

Parameter	100BASE-TX	100BASE-FX Multi-Mode	100BASE-FX Single Mode
Cable specification	Category 5 ¹ UTP ² , 22 to 24 AWG	62.5/125 micron multimode optical fiber	9/125 micron single mode optical fiber
Maximum segment length ³ (half-duplex)	100 m (328 ft)	412 m (1351.71 ft)	N/A
Maximum segment length (full-duplex) ³	100 m (328 ft)	2000 m (6561.68 ft)	10,000 m (32808.40 ft)
Maximum network length (half-duplex, one repeater) ⁴	200 m (656.17 ft)	272 m (892.39 ft)	N/A
Data rate	100 Mbps	100 Mbps	100 Mbps
Signaling method	4B/5B block coded, scrambled, with MLT-3 line coding	4B/5B block coded, with NRZI line coding	4B/5B block coded, with NRZI line coding
Connector	RJ-45	Single mode SC-type: dual simplex or single duplex for Rx and Tx	Single mode SC-type: dual simplex or single duplex for Rx and Tx
Topology	Star/hub	Star/hub	Star/hub

1. EIA/TIA-568 or EIA-TIA-568 TSB-36 compliant.
2. Cisco does not supply Category 5 UTP RJ-45 cables. However, they are available commercially.
3. Data Terminal Equipment (DTE to DTE), see [Figure 1-3](#).
4. DTE to Repeater to DTE, see [Figure 1-3](#).

Figure 1-3 Maximum Segment and Network Lengths—100BASE-FX and 100BASE-TX

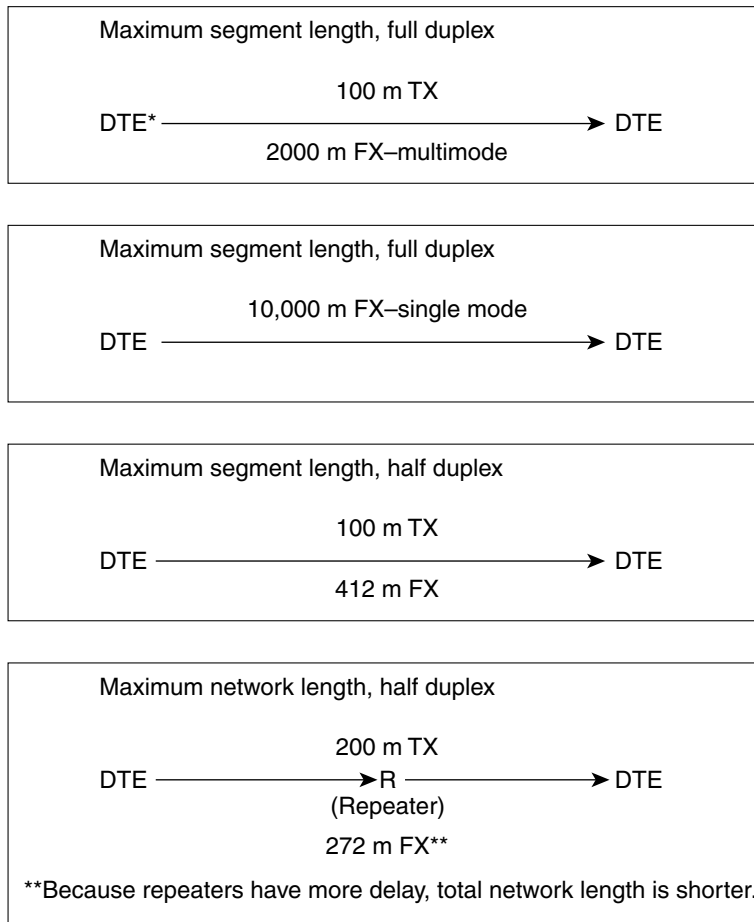

*DTE = Data Terminal Equipment

LEDs

The PA-FE-TX and the PA-FE-FX have an ENABLED LED, standard on all port adapters, and a bank of three status LEDs for the ports. After system initialization, the ENABLED LED lights to indicate that the PA-FE-TX or PA-FE-FX has been enabled for operation. (See [Figure 1-4](#).)

Figure 1-4 LEDs on the PA-FE Port Adapter—Partial Faceplate View of PA-FE-TX

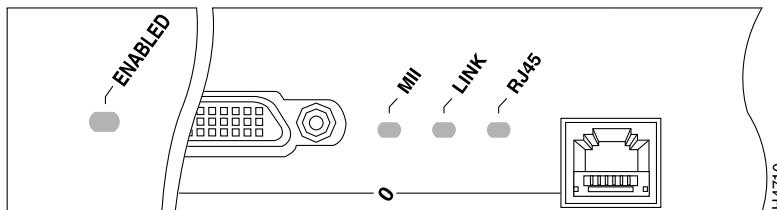


Table 1-2 lists port LED colors and indications.

Table 1-2 PA-FE-TX and PA-FE-FX LEDs

LED Label	Color	State	Meaning
ENABLED	Green	On	The PA-FE-TX or PA-FE-FX is correctly connected and receiving power, it contains a valid microcode version, and the bus recognizes the PA-FE-TX or PA-FE-FX port adapter or the PA-FE-equipped VIP or Catalyst RSM/VIP2.
MII	Green	On	This LED is illuminated when the MII port is selected as the active port by the controller.
LINK	Green	On	This LED is illuminated when the RJ-45 or fiber port is active and receiving a carrier signal from the network. This LED flickers on and off proportionately when the MII port is active and indicates network activity.
RJ45 (or FIBER on FE-FX)	Green	On	This LED is illuminated when the RJ-45 (or fiber) port is selected as the active port by the controller.

Either the MII LED or the RJ-45 (or fiber) LED should be on at any one time; never both.

Cables, Connectors, and Pinouts

PA-FE-TX Connectors

The Fast Ethernet port on the PA-FE-TX has an RJ-45 connector to attach to Category 5 foil twisted-pair (FTP) for 100BASE-TX. The MII connector permits connection through external transceivers to multimode fiber for 100BASE-FX, or to Category 3, 4, and 5 FTP for 100BASE-T4 physical media. Only one connector can be used at a time. The RJ-45 connection does not require an external transceiver. The MII connection (a 40-pin, D-shell type connector) requires an external physical sublayer (PHY) and an external transceiver.

Figure 1-5 shows the RJ-45 cable connector. Cisco Systems does not supply Category 5 FTP RJ-45 cables; these cables are available commercially. Table 1-4 on page 1-8 lists the pinouts for the PA-FE-TX RJ-45 connectors.

Figure 1-5 PA-FE-TX RJ-45 Connections—Plug and Receptacle

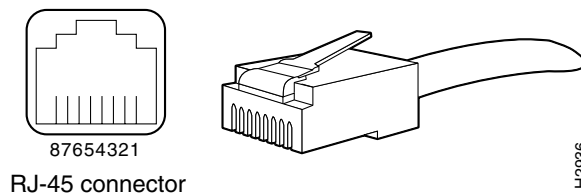




Table 1-3 PA-FE-TX RJ-45 Connector Pinout

Pin	Description
1	Transmit data + (TxD+)
2	TxD-
3	Receive data + (RxD+)
6	RxD-

**Note**

Proper common-mode line terminations should be used for the unused Category 5, FTP cable pairs 4/5 and 7/8. Common-mode termination reduces the contributions to electromagnetic interference (EMI) and susceptibility to common-mode sources. Wire pairs 4/5 and 7/8 are actively terminated in the RJ-45, 100BASE-TX port circuitry in the PA-FE-TX.



Depending on your RJ-45 interface cabling requirements, use the pinouts in [Figure 1-6](#) and [Figure 1-7](#).

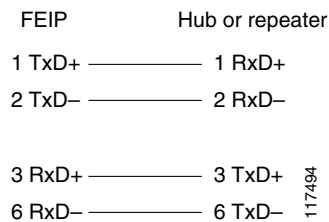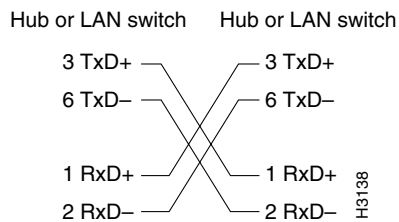Figure 1-6 Straight-Through Cable Pinout—PA-FE-TX RJ-45 Connection to a Hub or Repeater**Figure 1-7 Crossover Cable Pinout—PA-FE-TX RJ-45 Connections Between Hubs and Repeaters**

PA-FE-FX Connectors

The Fast Ethernet ports on the PA-FE-FX port adapter have an SC-type fiber-optic connector for 100BASE-FX, and an MII connector that permits connection through external transceivers to multimode fiber for 100BASE-FX, or to Category 3, 4, and 5 FTP or STP for 100BASE-T4 physical media. Only one connection can be used at a time. The MII connection (a 40-pin, D-shell type connector) requires an external physical sublayer (PHY) and an external transceiver.

[Figure 1-8](#) shows the duplex SC connector (one required for both transmit and receive), and [Figure 1-9](#) show the simplex SC connector (two required, one for each transmit and receive) used for PA-FE-FX optical-fiber connections. These multimode optical-fiber cables are commercially available and are not available from Cisco Systems.

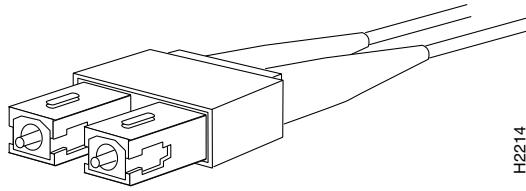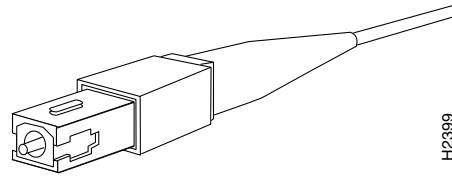Figure 1-8 PA-FE-FX Duplex SC Connector**Figure 1-9 PA-FE-FX Simplex SC Connector**

MII Connection


Depending on the type of media you use between the MII connection on the port adapter and your switch or hub, the network side of your 100BASE-T transceiver should be appropriately equipped with SC-type connectors (for optical fiber), BNC connectors, and so forth. [Figure 1-10](#) shows the pin orientation of the female MII connector on the port adapter.

The MII receptacle uses two 56 screw-type locks, called *jackscrews* (shown in [Figure 1-10](#)), to secure the cable or transceiver to the MII port. MII cables and transceivers have knurled thumbscrews that you fasten to the jackscrews on the PA-FE-TX MII connector. Use the jackscrews to provide strain relief for your MII cable.



Caution

Before you attach your MII transceiver to the MII receptacle on your PA-FE-TX or PA-FE-FX port adapter, ensure that your MII transceiver responds to physical sublayer (PHY) address 0 per section 22.2.4.4. “PHY Address” of the IEEE 802.3u specification; otherwise, interface problems might result. Confirm that this capability is available on your MII transceiver with the transceiver vendor or in the transceiver documentation. If a selection for isolation mode is available, we recommend you use this setting (if PHY addressing is not mentioned).

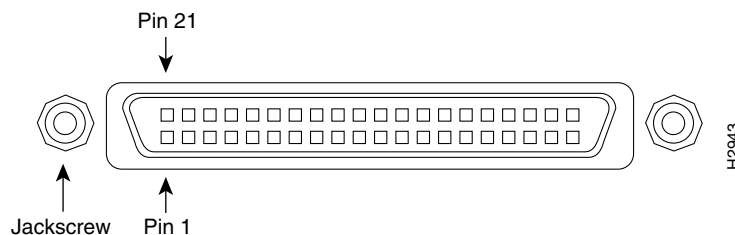Figure 1-10 PA-FE-TX or PA-FE-FX MII Connection—Receptacle

[Table 1-4](#) lists the MII connector pinouts. MII cables are available commercially and are not available from Cisco Systems. [Table 1-4](#) refers to MII cables used between the MII connector on the PA-FE-TX and an appropriate transceiver. The connection between this transceiver and your network can be Category 3, 4, or 5, 150-ohm FTP, or multimode optical fiber.

Table 1-4 MII Connector Pinout

Pin ¹	In	Out	In/Out	Description
14–17	–	Yes	–	Transmit Data (TxD)
12	Yes	–	–	Transmit Clock (Tx_CLK) ²
11	–	Yes	–	Transmit Error (Tx_ER)
13	–	Yes	–	Transmit Enable (Tx_EN)
3	–	Yes	–	MII Data Clock (MDC)
4–7	Yes	–	–	Receive Data (RxD)
9	Yes	–	–	Receive Clock (Rx_CLK)
10	Yes	–	–	Receive Error (Rx_ER)
8	Yes	–	–	Receive Data Valid (Rx_DV)
18	Yes	–	–	Collision (COL)
19	Yes	–	–	Carrier Sense (CRS)
2	–	–	Yes	MII Data Input/Output (MDIO)
22–39	–	–	–	Common (ground)
1, 20, 21, 40	–	–	–	+5.0 volts (V)

1. Any pins not indicated are not used.

2. Tx_CLK and Rx_CLK are generated by the external transceiver.

Port Adapter Slot Locations on the Supported Platforms


This section discusses port adapter slot locations on the supported platforms. The illustrations that follow summarize slot location conventions on each platform:

- [Catalyst 5000 Family Switches with RSM/VIP2 Slot Numbering, page 1-9](#)
- [Cisco 7000 Series Routers with VIP Slot Numbering, page 1-12](#)
- [Cisco 7100 Series Routers Slot Numbering, page 1-14](#)
- [Cisco 7200 Series Routers, Cisco 7200 VXR Routers, and Cisco uBR7200 Series Routers Slot Numbering, page 1-15](#)
- [Cisco 7301 Router Slot Numbering, page 1-19](#)
- [Cisco 7304 PCI Port Adapter Carrier Card Slot Numbering, page 1-20](#)
- [Cisco 7401ASR Router Slot Numbering, page 1-21](#)
- [Cisco 7500 Series Routers with VIP Slot Numbering, page 1-21](#)

Catalyst 5000 Family Switches with RSM/VIP2 Slot Numbering


The Catalyst 5000 switch chassis has five slots. (See [Figure 1-11](#).) Slot 1 is for the supervisor engine. Slots 2 through 5 are available for modules.

Figure 1-11 Catalyst 5000 Switch with Modules Installed

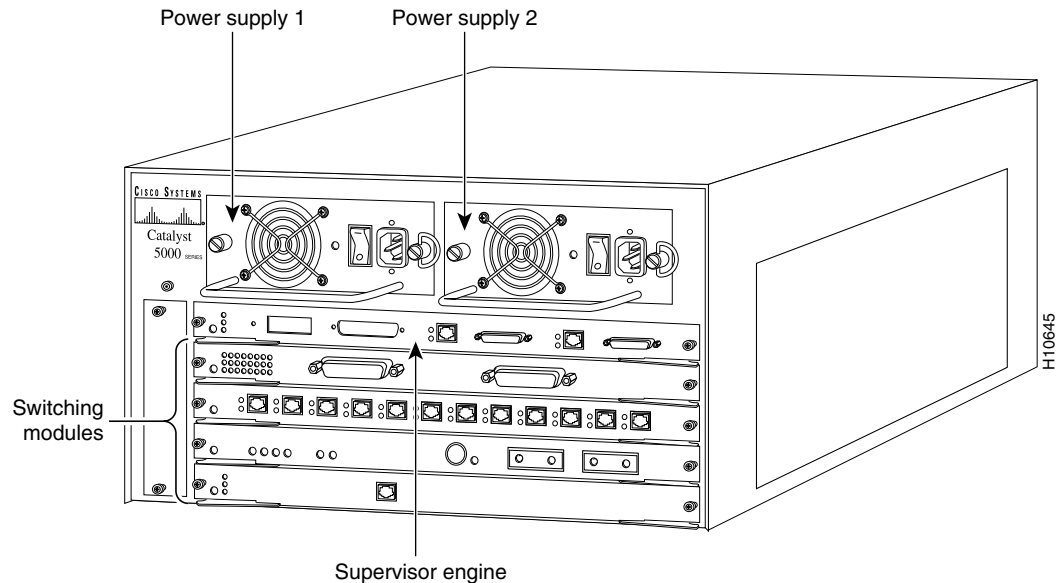


The Catalyst 5500 switch chassis has 13 slots. (See [Figure 1-12 on page 1-10](#).) Slot 1 is for the supervisor engine. Slot 2 can contain an additional redundant supervisor engine. If a redundant supervisor engine is not required, slot 2 through 12 are available for modules. Slot 13 is a dedicated slot for the ATM Switch Processor (ASP) module or the Catalyst 8510 Campus Switch Router (CSR) switch route processor (SRP). When using the ASP in slot 13, the Catalyst 5500 Switch accepts LightStream 1010 ATM port adapters in slots 9 through 12. When using the Catalyst 8510 CSR SRP in slot 13, the Catalyst 5500 switch accepts Catalyst 8510 CSR modules in slots 9 through 12.

Figure 1-12 Catalyst 5500 Switch with Modules Installed

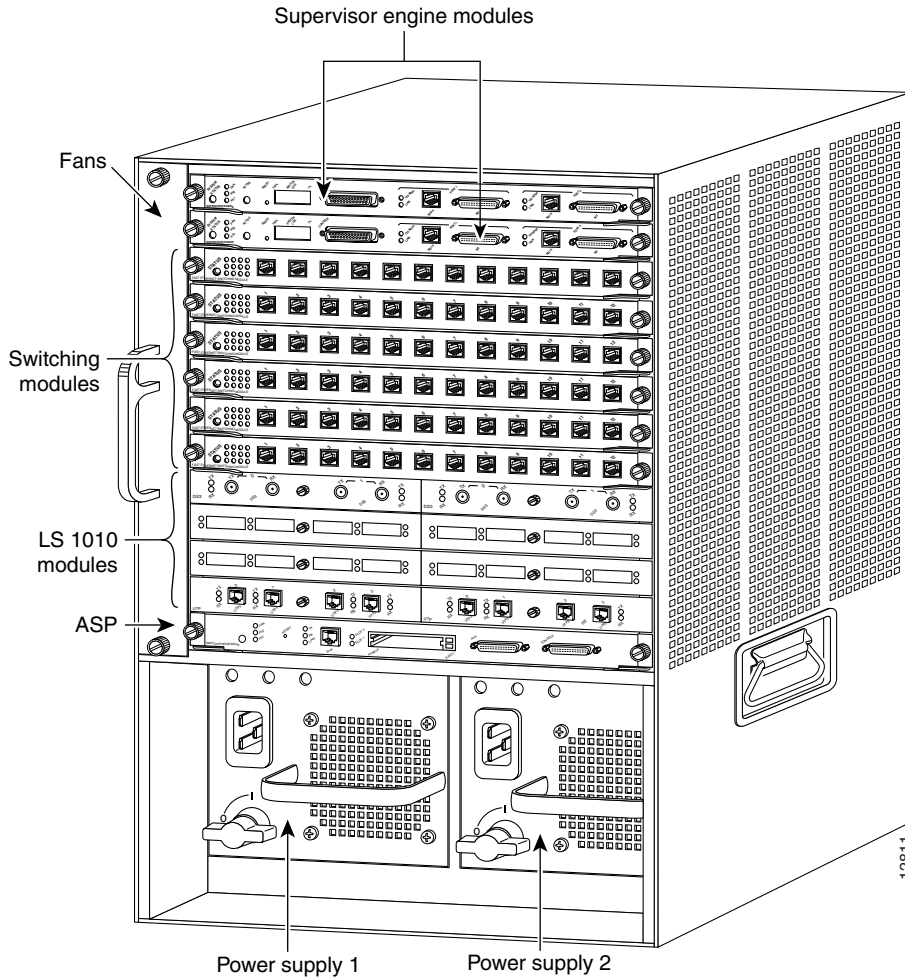


The Catalyst 5505 switch chassis has five slots. (See [Figure 1-13 on page 1-11.](#)) Slot 1 is for the supervisor engine. Slot 2 can contain an additional redundant supervisor engine. If a redundant supervisor engine is not required, slots 2 through 5 are available for modules.

Figure 1-13 Catalyst 5505 Switch with Modules Installed

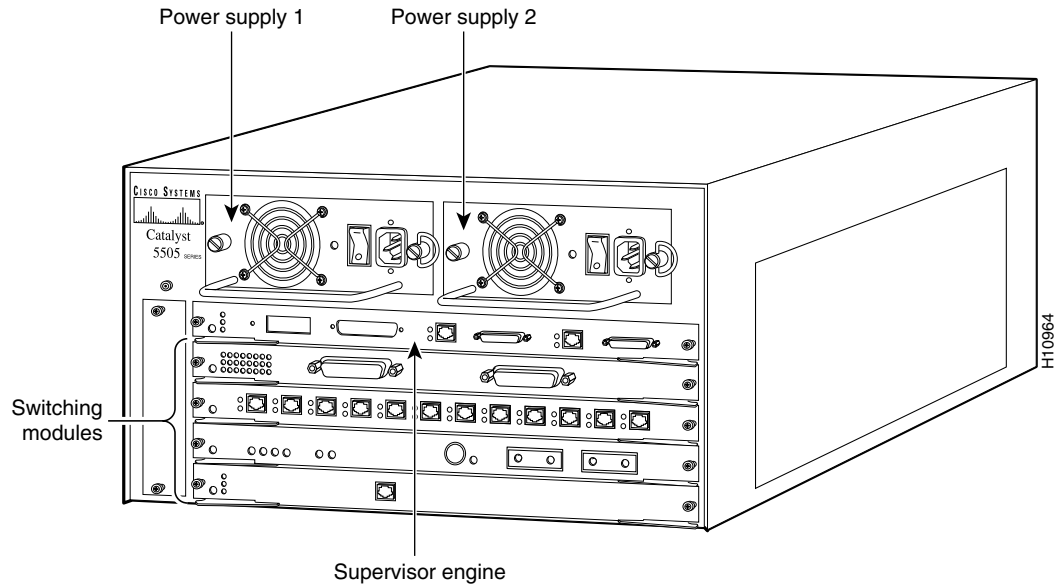

The Catalyst 5509 switch chassis has nine slots. (See [Figure 1-14](#).) Slot 1 is for the supervisor engine. Slot 2 can contain a redundant supervisor engine. If a redundant supervisor engine is not required, slots 2 through 9 are available for modules.

Figure 1-14 Catalyst 5509 Switch with Modules Installed

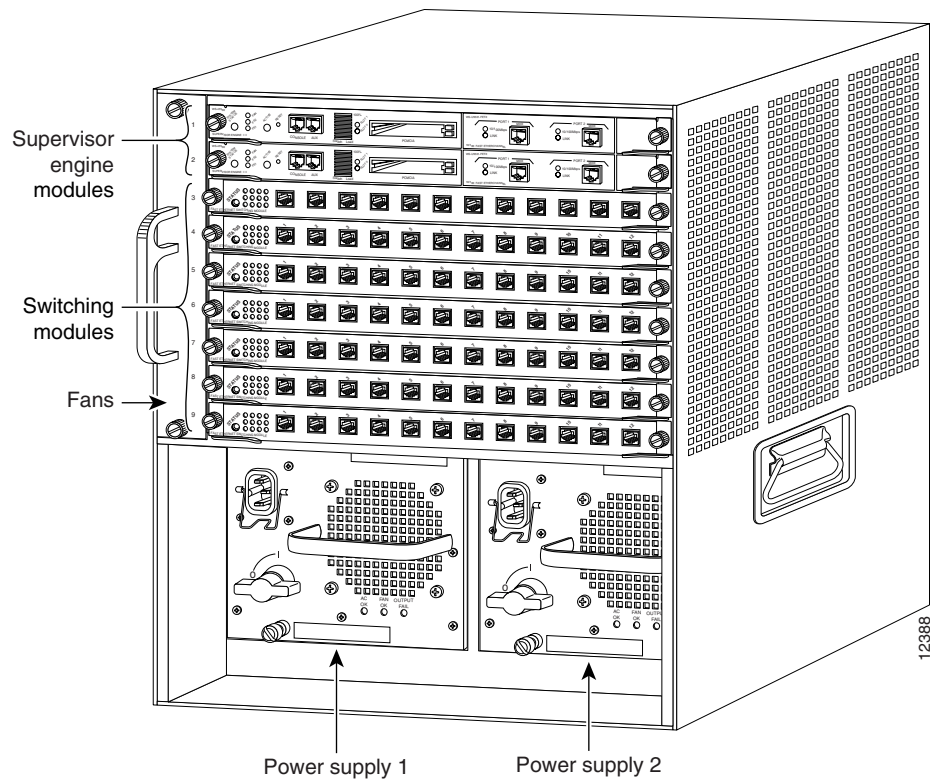


**Note**

Refer to the *Catalyst 5000 Series Route Switch Module Installation and Configuration Note* for any additional slot restrictions for the Catalyst RSM/VIP2.

Cisco 7000 Series Routers with VIP Slot Numbering

Figure 1-15 shows a partial view of a VIP motherboard with installed modules. With the motherboard oriented as shown in Figure 1-15, the left module is in slot 0, and the right module is in slot 1. The slot numbering is the same for the Catalyst RSM/VIP2. The slots are always numbered 0 and 1.

Figure 1-15 VIP Motherboard with Two Modules Installed—Horizontal Orientation

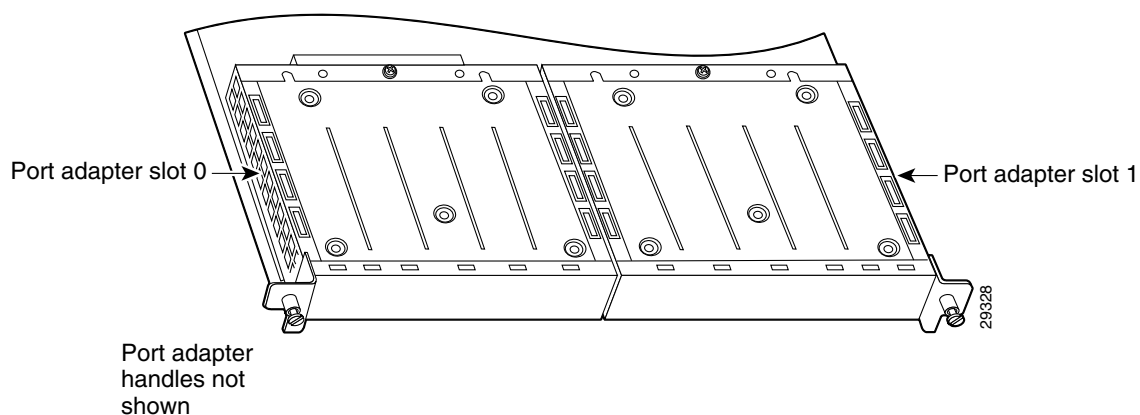**Note**

In the Cisco 7000 chassis, the VIP motherboard is installed vertically. In the Cisco 7010 chassis, the VIP motherboard is installed horizontally.

Figure 1-16 on page 1-13 shows the Cisco 7000 with modules installed in slots 0 through 4. Figure 1-17 on page 1-13 shows the Cisco 7010 with modules installed in slots 0, 1, and 2.

Figure 1-16 Cisco 7000 Interface Slot Numbers


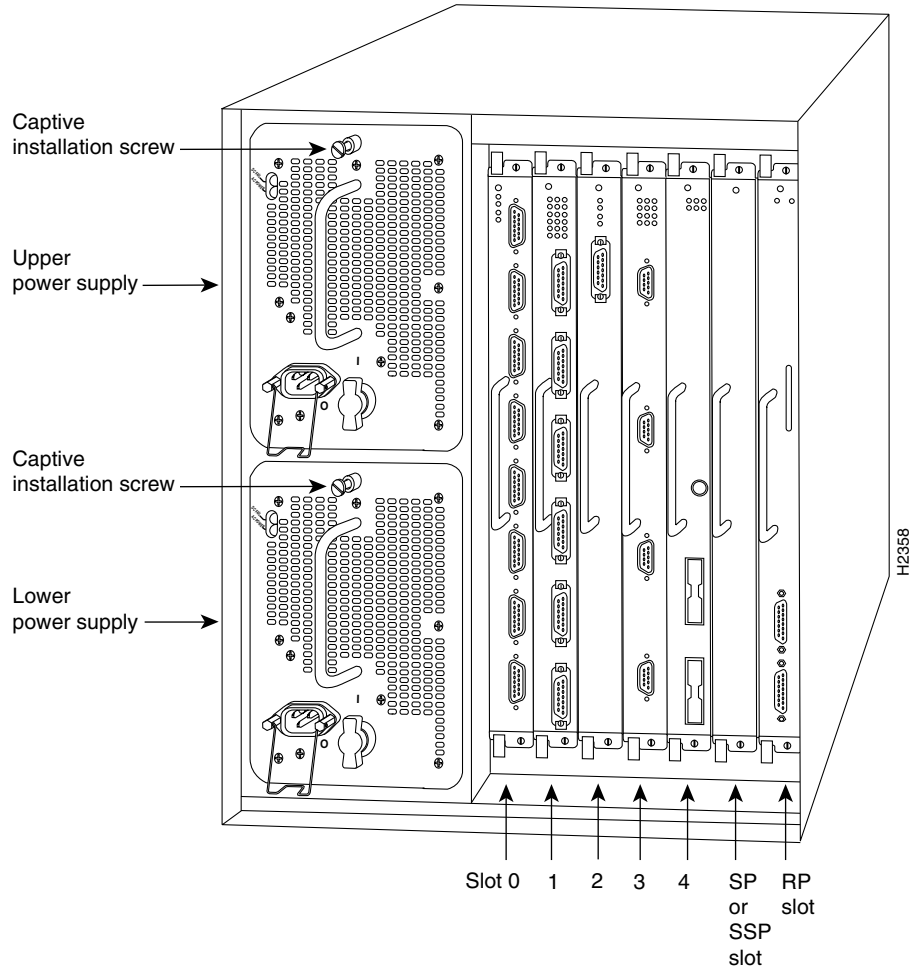


Figure 1-17 Cisco 7010 Interface Slot Numbers

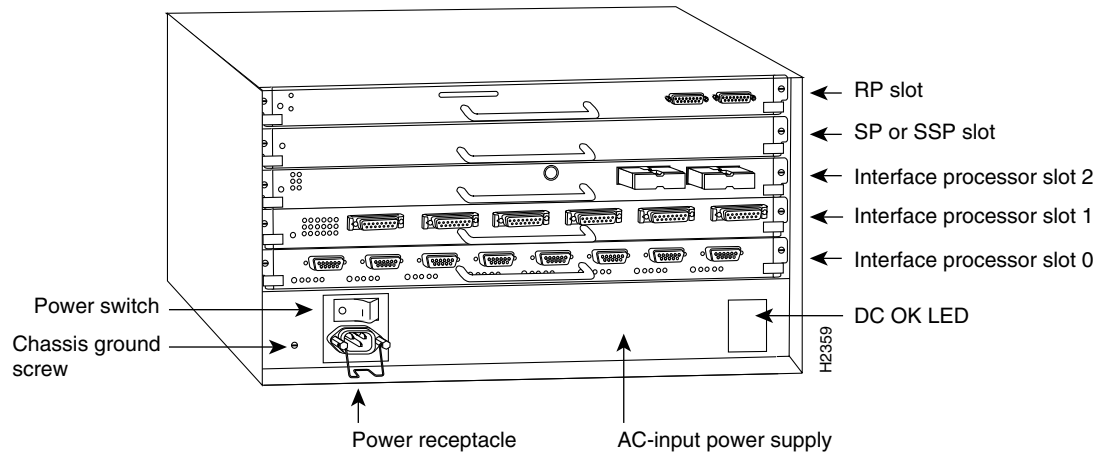

Cisco 7100 Series Routers Slot Numbering

The PA-FE-TX and PA-FE-FX can be installed in port adapter slot 3 in Cisco 7120 series routers, and in port adapter slot 4 in Cisco 7140 series routers. [Figure 1-18](#) shows a Cisco 7120 with a port adapter installed in slot 3. [Figure 1-19](#) shows a Cisco 7140 with a port adapter installed in slot 4.

Figure 1-18 Port Adapter Slots in the Cisco 7100 Series Router—Cisco 7120 Series


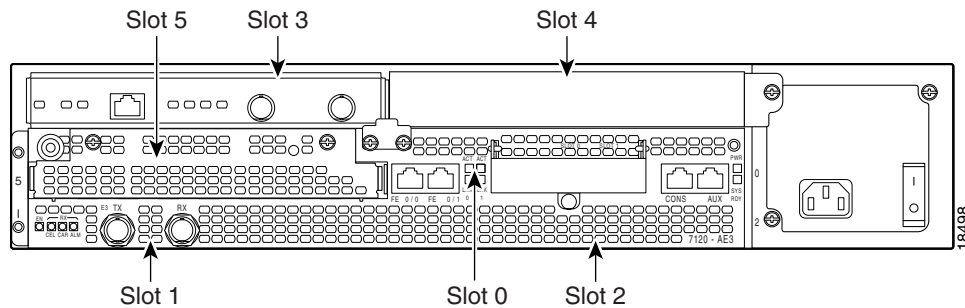



Figure 1-19 Port Adapter Slots in the Cisco 7100 Series Router—Cisco 7140 Series

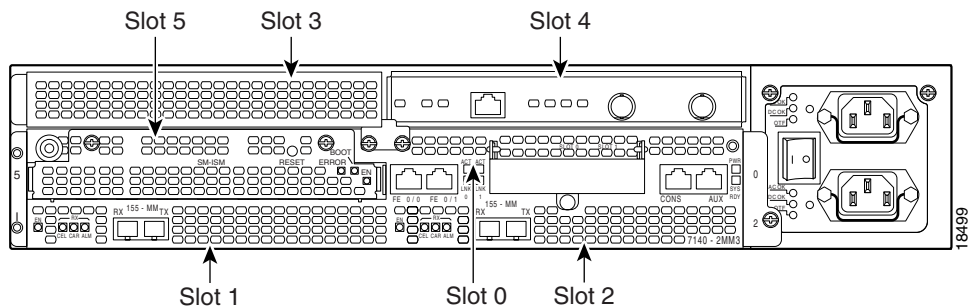

Cisco 7200 Series Routers, Cisco 7200 VXR Routers, and Cisco uBR7200 Series Routers Slot Numbering


Slots in the Cisco 7202 router are numbered from left to right, slot 1 and slot 2. (See [Figure 1-20](#).)

Figure 1-20 Module Slots in the Cisco 7202

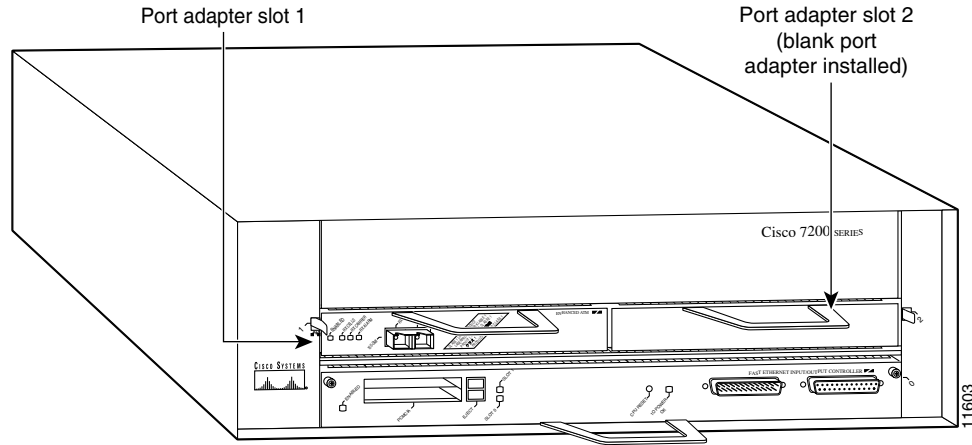


Slots in the Cisco 7204 router are numbered from left to right, beginning with slot 1 and continuing through slot 4. Slot 0 is the Fast Ethernet port on the I/O controller. (See [Figure 1-21](#).)

Figure 1-21 Module Slots in the Cisco 7204

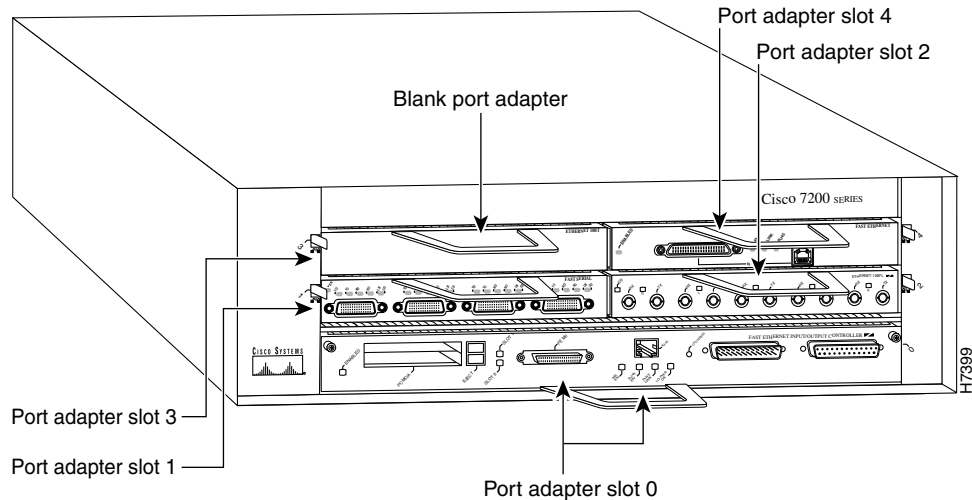


The Cisco 7204VXR has four slots (slot 1 through slot 4) for modules, one slot for an input/output (I/O) controller, and one slot for a network processing engine or network services engine. You can place the modules in any of the four available slots. (See [Figure 1-22](#).)

Figure 1-22 Module Slots in the Cisco 7204VXR

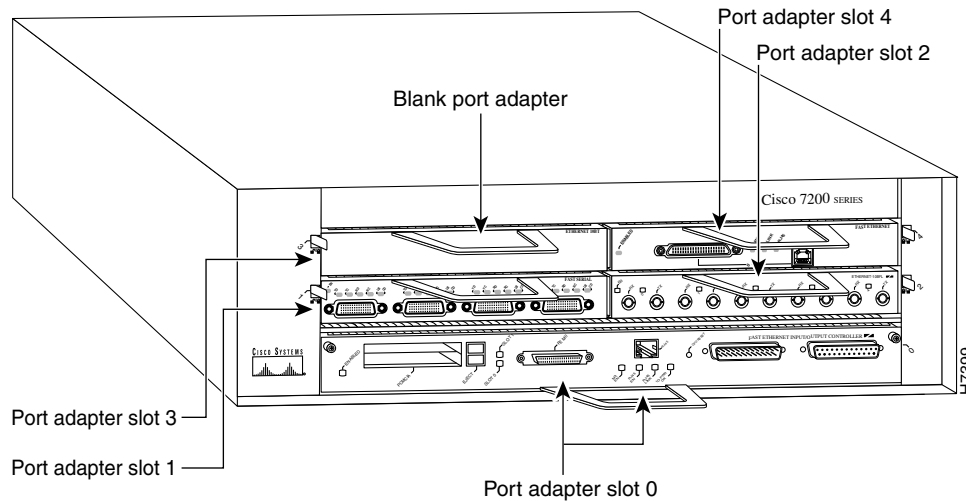

Slots in the Cisco 7206 are numbered from 1 through 6; slot 0 is reserved for the optional Fast Ethernet port on the I/O controller—if present. (See [Figure 1-23](#).)

Figure 1-23 Module Slots in the Cisco 7206

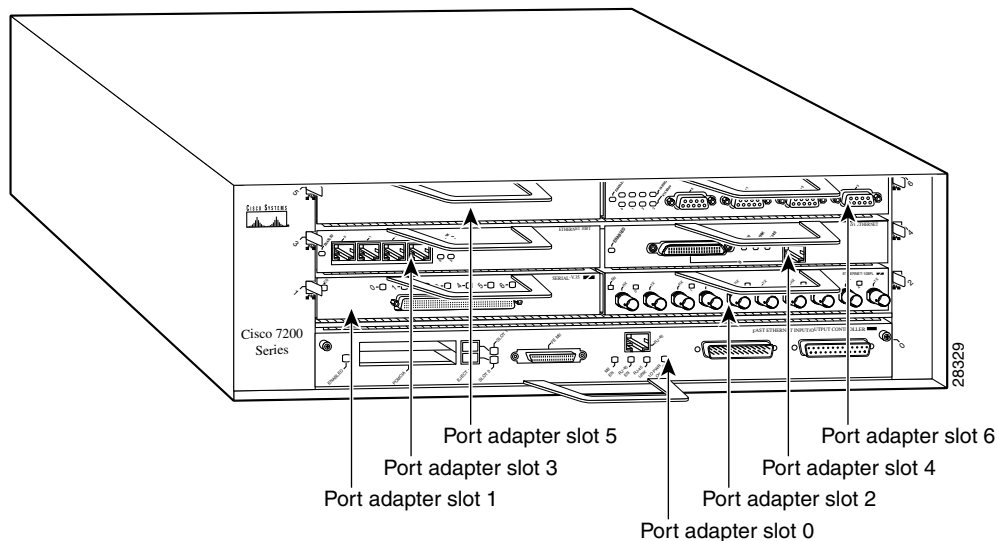

The Cisco 7206VXR has six slots (slot 1 through slot 6) for modules, one slot for an input/output (I/O) controller, and one slot for a network processing engine or network services engine. You can place the modules in any of the six available slots. (See [Figure 1-24](#) on page 1-17.)

Figure 1-24 Module Slots in the Cisco 7206VXR

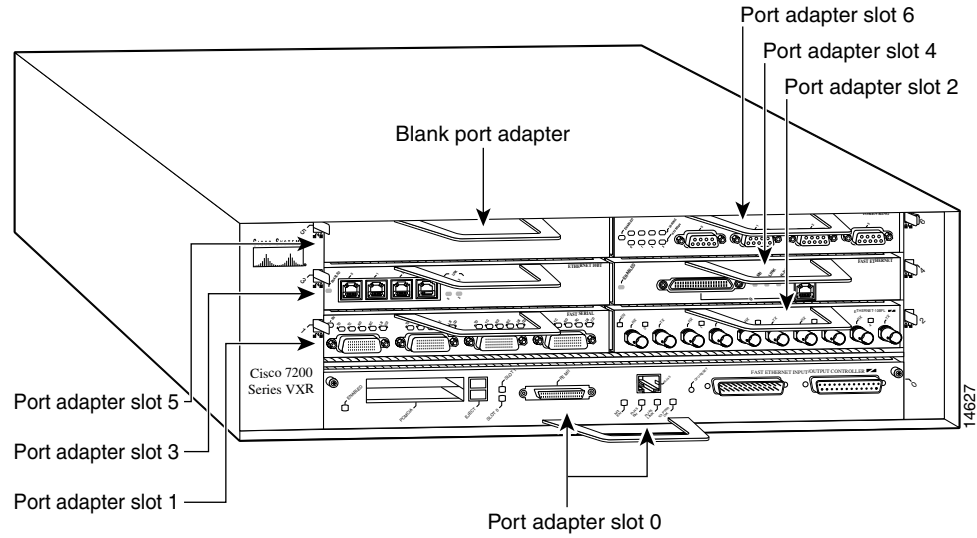


Figure 1-25 shows that slot 1 of the Cisco uBR7233 is the slot in which modules are installed. (Slot 0 is always reserved for the Fast Ethernet port on the I/O controller—if present.)

Figure 1-25 Module Slots in the Cisco uBR7233



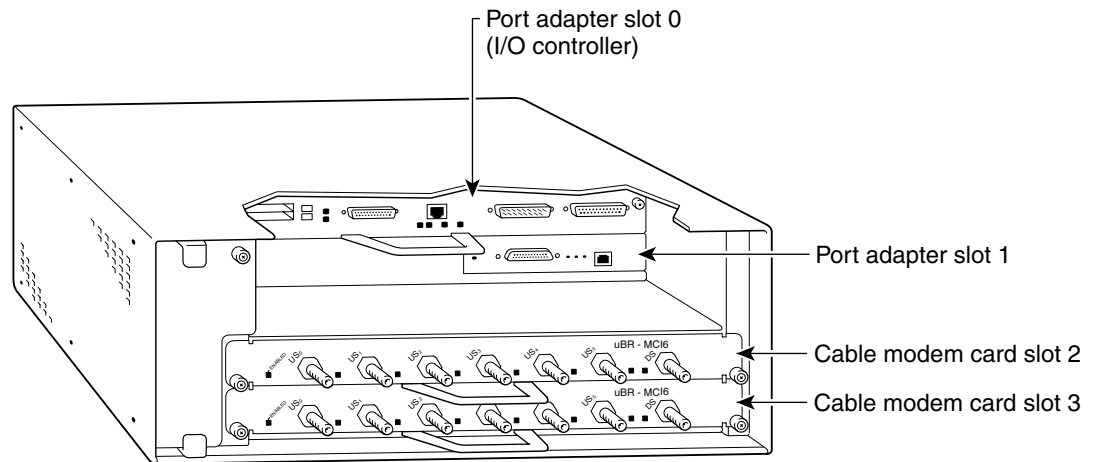


Figure 1-26 shows the slot numbering of modules installed on a Cisco uBR7246 router. The slots are numbered slot 1 and slot 2 for the Cisco uBR7246 router. (Slot 0 is always reserved for the Fast Ethernet port on the I/O controller—if present.)

Figure 1-26 Module Slots in the Cisco uBR7246

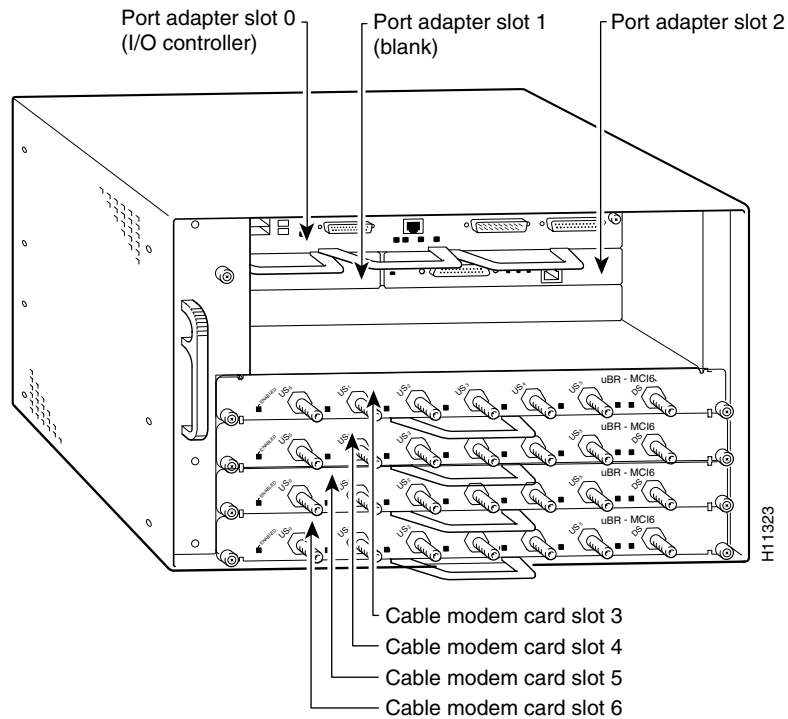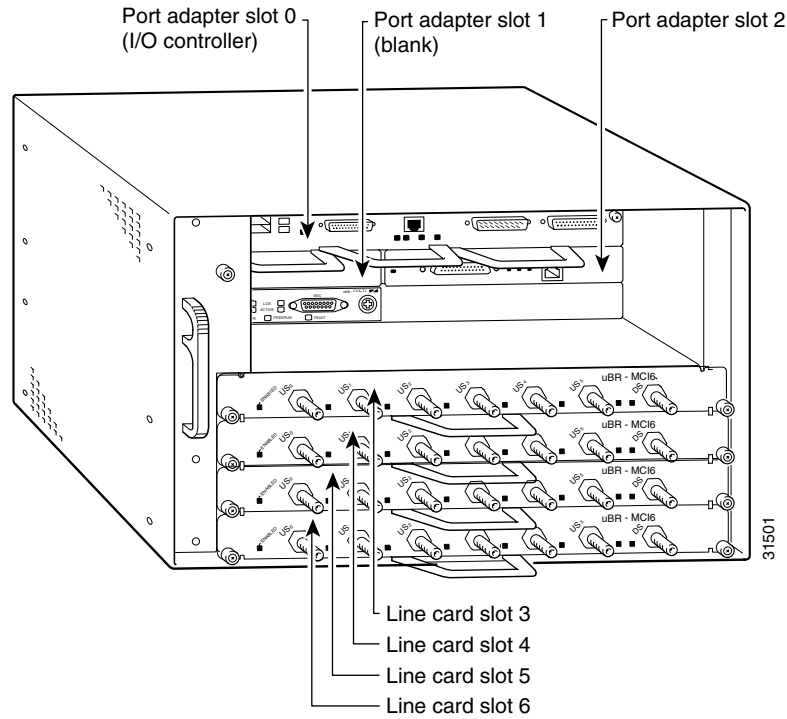


In the Cisco uBR7246 VXR, slot 0 is the Fast Ethernet port on the I/O controller. Port adapter slots are numbered 1 and 2 and line card slots are numbered from 3 to 6. (See [Figure 1-27 on page 1-19](#).)

Figure 1-27 Module Slots in the Cisco uBR7246VXR

Cisco 7301 Router Slot Numbering


Figure 1-28 shows the front view of a Cisco 7301 router with a port adapter installed. There is only one port adapter slot in a Cisco 7301 router.

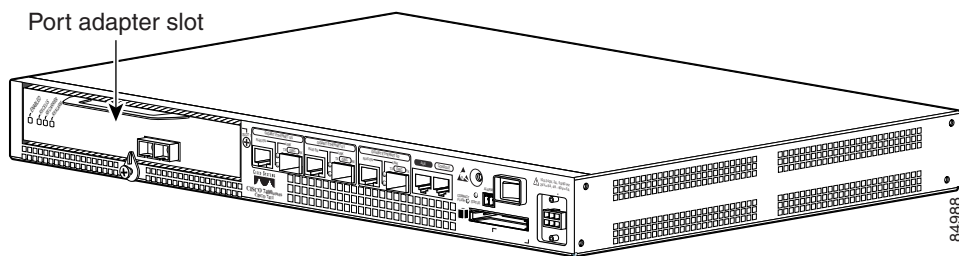Figure 1-28 Cisco 7301 Router with a Port Adapter Installed

Cisco 7304 PCI Port Adapter Carrier Card Slot Numbering


The Cisco 7304 PCI Port Adapter Carrier Card accepts one single-width port adapter. [Figure 1-29](#) shows a Cisco 7304 PCI Port Adapter Carrier Card with a port adapter installed.

Figure 1-29 Cisco 7304 PCI Port Adapter Carrier Card—Port Adapter Installed

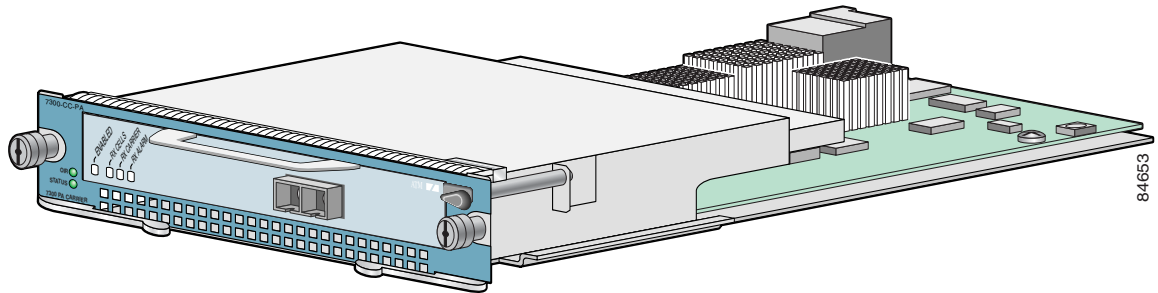

The Cisco 7304 PCI Port Adapter Carrier Card installs in Cisco 7304 router module slots 2 through 5. See [Figure 1-30](#) for module slot numbering on a Cisco 7304 router.


Figure 1-30 Module Slots on the Cisco 7304 Router

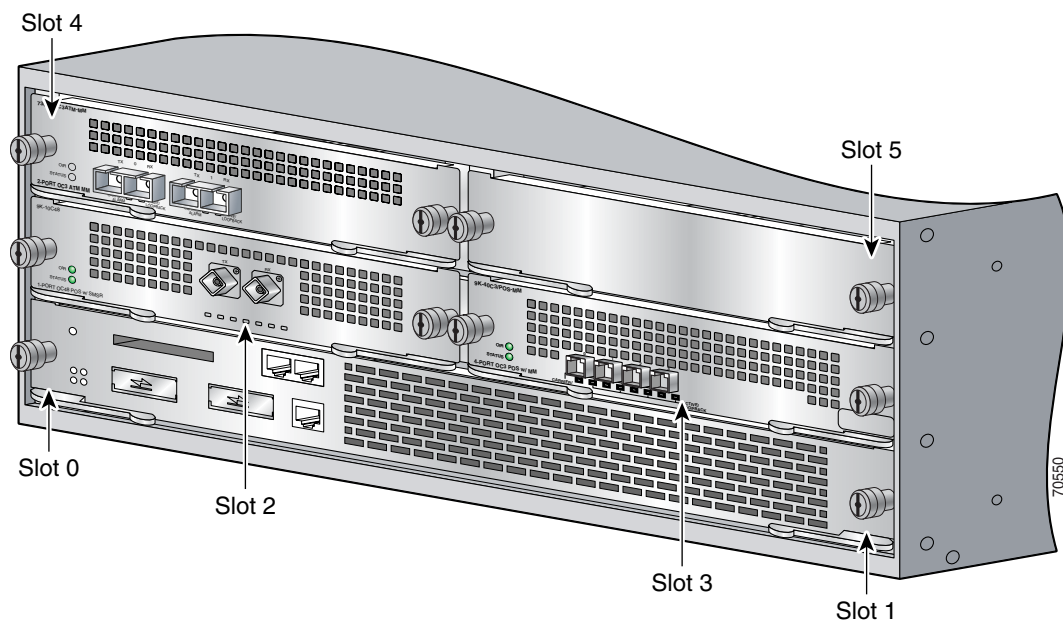

Cisco 7401ASR Router Slot Numbering

Figure 1-31 shows the front view of a Cisco 7401ASR router with a port adapter installed. There is only one port adapter slot in a Cisco 7401ASR router.


Figure 1-31 Cisco 7401ASR Router with a Port Adapter Installed

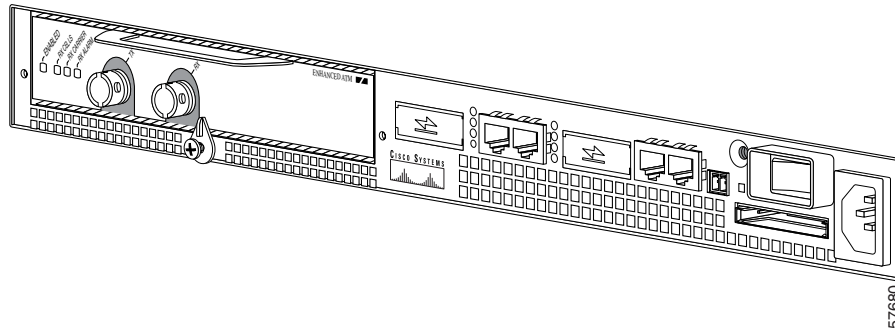

Cisco 7500 Series Routers with VIP Slot Numbering

Figure 1-32 shows a partial view of a VIP motherboard with installed modules. With the motherboard oriented as shown in Figure 1-32, the left module is in module slot 0, and the right module is in module slot 1. The slots are always numbered 0 and 1.

Figure 1-32 VIP Motherboard with Two Modules Installed—Horizontal Orientation

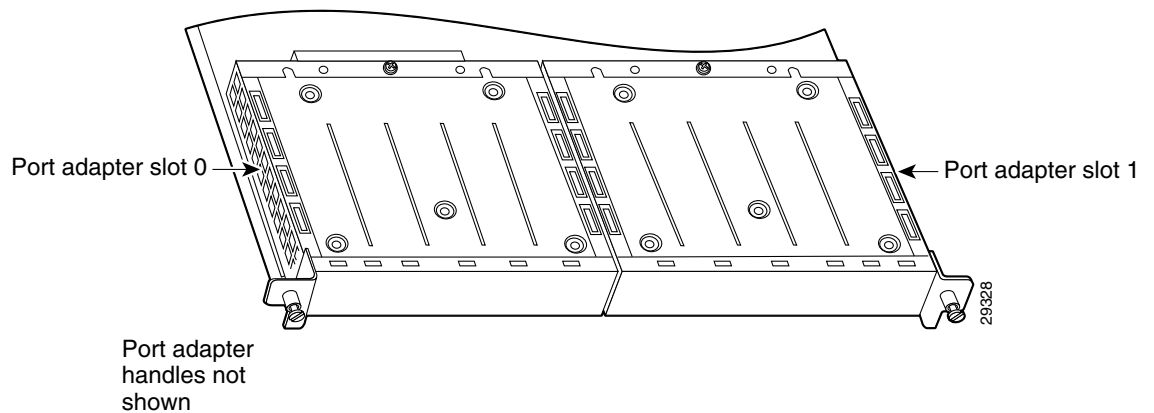


Note

In the Cisco 7507 and Cisco 7513 chassis, the VIP motherboard is installed vertically.
In the Cisco 7505 chassis, the VIP motherboard is installed horizontally.

Interface processor slots in the Cisco 7500 series routers are numbered as shown in Figure 1-33 on page 1-22.

Figure 1-33 Interface Slot Numbers—Cisco 7505 Shown

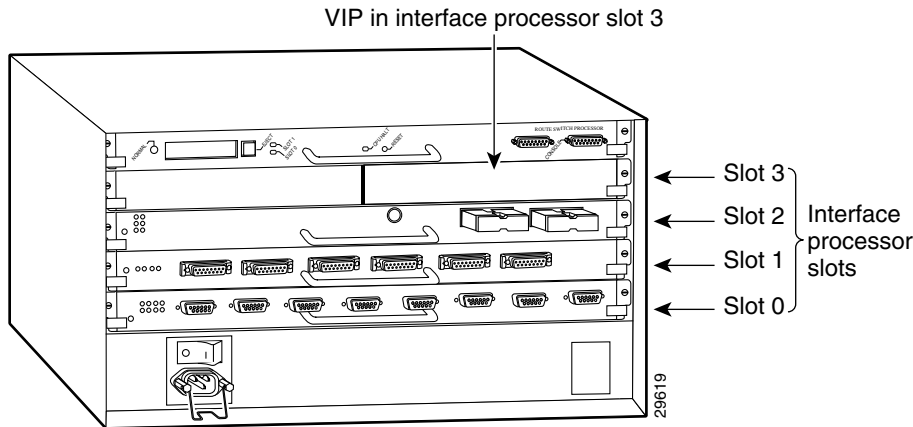

Identifying Interface Addresses

This section describes how to identify interface addresses for the PA-FE-TX and PA-FE-FX in supported platforms. Interface addresses specify the actual physical location of each interface on a router or switch.

Interfaces on the PA-FE-TX and PA-FE-FX installed in a router maintain the same address regardless of whether other port adapters are installed or removed. However, when you move a port adapter to a different slot, the first number in the interface address changes to reflect the new port adapter slot number.

Interfaces on a PA-FE-TX and PA-FE-FX installed in a VIP maintain the same address regardless of whether other interface processors are installed or removed. However, when you move a VIP to a different slot, the interface processor slot number changes to reflect the new interface processor slot.

The following subsections describe the interface address formats for specific platforms:

- [Interface Addresses of the Catalyst 5000 Family Switches with RSM/VIP2, page 1-23](#)
- [Interface Addresses of Cisco 7000 Series Routers with VIP, page 1-23](#)
- [Interface Addresses of Cisco 7100 Series Routers, page 1-24](#)
- [Interface Addresses of Cisco 7200 Series Routers, Cisco 7200 VXR Routers, and Cisco uBR7200 Series Routers, page 1-24](#)
- [Interface Addresses of Cisco 7301 Router, page 1-24](#)
- [Interface Addresses Cisco 7304 PCI Port Adapter Carrier Card, page 1-24](#)
- [Interface Addresses of Cisco 7401ASR Router, page 1-25](#)
- [Interface Addresses of Cisco 7500 Series Routers with VIP, page 1-25](#)

Interface Addresses of the Catalyst 5000 Family Switches with RSM/VIP2

The interface address for a module on the Catalyst 5000 family switch with RSM/VIP2 is composed of a two-part number in the format *slot/port-number*. The first number identifies the slot in which the module is installed. Module slots are numbered from top to bottom starting with 1. The second number identifies the physical port number on the module. The port numbers always begin at 1 and are numbered from left to right, facing the rear of the switch. In some cases, the ports are physically identified on the module front panel. The number of additional ports (*n/1*, *n/2*, and so on) depends on the number of ports available on the module.

Interface ports maintain the same address regardless of whether other modules are installed or removed. However, when you move a module to a different slot, the first number in the address changes to reflect the new slot number. For example, on a 12-port 100BASE-TX switching module in slot 2, the address of the left port is 2/1 and the address of the right port is 2/12. If you remove the 12-port 100BASE-TX switching module from slot 2 and install it in slot 4, the addresses of those same ports become 4/1 through 4/12.

Interface Addresses of Cisco 7000 Series Routers with VIP

The Cisco 7000 series routers accept modules installed with a Versatile Interface Processor (VIP). The interface address of the modules is composed of a three-part number in the format *slot/bay/port-number*. The first number identifies the slot of the router in which the VIP is installed (slot 0 through 12, depending on the number of slots in the router). These module slots are numbered from bottom to top starting with 0.

The second number identifies the bay of the VIP in which the additional module is installed (0 or 1). The bays are numbered from left to right on the VIP.

The third number identifies the physical port number on the module. The port numbers always begin at 1 and are numbered from left to right. The number of additional ports (*n/1*, *n/2*, and so on) depends on the number of ports on the module.

**Note**

Although the slots in the 7-slot Cisco 7000 are vertically oriented and those in the 5-slot Cisco 7010 are horizontally oriented, all Cisco 7000 series routers use the same method for slot and interface port numbering.

If the VIP is installed in slot 3, and the module is installed in bay 1 of the VIP and has a total of 8 ports, the interface addresses of the module are 3/1/0 through 3/1/7 (slot 3, bay 1, ports 0 through 7). If you remove the VIP with the module from slot 3 and install it in slot 2, the interface addresses become 2/1/0 through 2/1/7. If the module was in bay 0 of the VIP, these same interface addresses would be numbered 2/0/0 through 2/0/7.

Interface Addresses of Cisco 7100 Series Routers

The interface address for a module installed on a Cisco 7100 series router is composed of a two-part number in the format *slot/port-number*. The first number identifies the slot of the router in which the module is installed—slot 3 on the Cisco 7120 series routers and slot 4 on the Cisco 7140 series routers.

The second number identifies the physical interface port number on the module.

For example, if the 2-port module is installed in a Cisco 7120, and therefore in slot 3, the interface address of the left port is 3/0 and the interface address of the right port is 3/1.

If you remove the module from the Cisco 7120, and install it in a Cisco 7140, and therefore slot 4, the addresses of the interface ports become 4/0 and 4/1.

Interface Addresses of Cisco 7200 Series Routers, Cisco 7200 VXR Routers, and Cisco uBR7200 Series Routers

The interface address for a module installed in Cisco 7200 series routers, Cisco 7200 VXR routers, or Cisco uBR7200 series routers is composed of a two-part number in the format *slot/port-number*.

In Cisco 7200 series routers, slots are numbered from the lower left to the upper right, beginning with slot 1 and continuing through slot 2 for the Cisco 7202, slot 4 for the Cisco 7204 and Cisco 7204VXR, and slot 6 for the Cisco 7206 and Cisco 7206VXR. (Slot 0 is reserved for the optional Fast Ethernet port on the I/O controller—if present.)

The interface addresses of a 4-port module installed in slot 1 would be 1/0 through 1/3 (slot 1 and interface port 0 through port 3). If the 4-port module was installed in slot 4, these same interfaces would be numbered 4/0 through 4/3 (slot 4 and interface port 0 through port 3).

In Cisco uBR7200 series routers, slots are numbered slot 1 and slot 2 for the Cisco uBR7246 and Cisco uBR7246VXR and slot 1 for the Cisco uBR7223. (Slot 0 is always reserved for the Fast Ethernet port on the I/O controller—if present.) The individual interfaces always begin with 0. The number of additional interfaces depends on the number of interface ports on a module.

The interface addresses of a module installed in slot 2 would be 2/0 and 2/1 (slot 2 and interface ports 0 and 1). If a module is installed in slot 1, these same interface addresses would be 1/0 and 1/1 (slot 1 and interface ports 0 and 1).

Interface Addresses of Cisco 7301 Router

There is only one slot on the Cisco 7301 router that accepts modules and it is numbered as slot 1. The interface address is composed of a two-part number in the format *slot/port-number*. For example, if a 2-port module is installed on a Cisco 7301 router, the two interface addresses would be 1/0 and 1/1 from left to right.

Interface Addresses Cisco 7304 PCI Port Adapter Carrier Card

This section describes how to identify the interface addresses used for the PA-FE-TX and PA-FE-FX in the Cisco 7304 PCI Port Adapter Carrier Card in Cisco 7304 routers. The interface address is made of a two-part number in the format *port-adapter-slot-number/interface-port-number*.

The Cisco 7304 PCI Port Adapter Carrier Card installs into Cisco 7304 router module slots 2 through 5 (See [Figure 1-30 on page 1-20](#).) The port-adapter-slot-number is the Cisco 7304 router module slot number. For example, the interface address of port 0 on a PA-FE-TX, in which the Cisco 7304 PCI Port Adapter Carrier Card is installed in Cisco 7304 router module slot 3, would be numbered 3/0.

Interface Addresses of Cisco 7401ASR Router

There is only one slot on the Cisco 7401ASR router that accepts modules and it is numbered as slot 1. The interface address is composed of a two-part number in the format *slot/port-number*. For example, if a 2-port module is installed on a Cisco 7401ASR router, the two interface addresses would be 1/0 and 1/1 from left to right.

Interface Addresses of Cisco 7500 Series Routers with VIP

The Cisco 7500 series routers accept modules installed with a Versatile Interface Processor (VIP). The interface address of the modules is composed of a three-part number in the format *slot/bay/port-number*. The first number identifies the slot of the router in which the VIP is installed (slot 0 through 12, depending on the number of slots in the router). These module slots are numbered from bottom to top starting with 0.

The second number identifies the bay of the VIP in which the additional module is installed (0 or 1). The bays are numbered from left to right on the VIP.

The third number identifies the physical port number on the module. The port numbers always begin at 1 and are numbered from left to right. The number of additional ports (*n/1*, *n/2*, and so on) depends on the number of ports on the module.

**Note**

Although the processor slots in the 7-slot Cisco 7507 and the 13-slot Cisco 7513 and Cisco 7576 are vertically oriented and those in the 5-slot Cisco 7505 are horizontally oriented, all Cisco 7500 series routers use the same method for slot and interface port numbering.

If the VIP is installed in slot 3, and the module is installed in bay 1 of the VIP and has a total of 8 ports, the interface addresses of the module are 3/1/0 through 3/1/7 (slot 3, bay 1, ports 0 through 7). If you remove the VIP with the module from slot 3 and install it in slot 2, the interface addresses become 2/1/0 through 2/1/7. If the module was in bay 0 of the VIP, these same interface addresses would be numbered 2/0/0 through 2/0/7.



Preparing for Installation

This chapter describes the general equipment, safety, and site preparation requirements for installing the PA-FE-TX or PA-FE-FX port adapter. This chapter contains the following sections:

- [Required Tools and Equipment, page 2-1](#)
- [Minimum Software and Hardware Requirements, page 2-2](#)
- [Checking Hardware and Software Compatibility, page 2-3](#)
- [Safety Guidelines, page 2-3](#)
- [Laser/LED Safety, page 2-10](#)

Required Tools and Equipment

You need the following tools and parts to install a PA-FE-TX or PA-FE-FX port adapter. If you need additional equipment, contact a service representative for ordering information.

- PA-FE-TX(=) or PA-FE-FX(=) port adapter
- Catalyst RSM/VIP2: For information about the specific VIP models that support the PA-FE-TX and PA-FE-FX, see the [“Minimum Software and Hardware Requirements” section on page 2-2](#).
- VIP: For information about the specific VIP models that support the PA-FE-TX and PA-FE-FX, see the [“Minimum Software and Hardware Requirements” section on page 2-2](#).
- Cisco 7304 PCI Port Adapter Carrier Card (for installation in a Cisco 7304 router)
- RJ-45 and multimode optical fiber cables
- Number 1 Phillips and a 3/16-inch flat-blade screwdriver
- Number 2 Phillips screwdriver
- Your own electrostatic discharge (ESD)-prevention equipment or the disposable grounding wrist strap included with all upgrade kits, field-replaceable units (FRUs), and spares
- Antistatic mat
- Antistatic container

Minimum Software and Hardware Requirements

This section indicates the recommended minimum Cisco IOS software release required to use the PA-FE-TX and PA-FE-FX in supported platforms. For the latest releases supporting these port adapters, refer to the [“Checking Hardware and Software Compatibility”](#) section on page 2-3.

Table 2-1 PA-FE-TX and PA-FE-FX Software Requirements

Cisco 7000 series and Cisco 7500 series	
<ul style="list-style-type: none"> With VIP2-15(=) or VIP2-40(=) 	Cisco IOS Release 11.1(472) or a later release of Cisco IOS Release 11.1 Cisco IOS Release 11.1(16)CA or a later release of Cisco IOS Release 11.1 CA Cisco IOS Release 11.2(1) or a later release of Cisco IOS Release 11.2 Cisco IOS Release 11.2(5)P or a later release of Cisco IOS Release 11.2 P
<ul style="list-style-type: none"> With VIP2-50(=) 	Cisco IOS Release 11.1 CC or a later release of Cisco IOS Release 11.1 CC
<ul style="list-style-type: none"> With VIP4-50(=) or VIP4-80(=) 	Cisco IOS Release 12.0(10)S or a later release of Cisco IOS Release 12.0 S
<ul style="list-style-type: none"> With VIP6-80(=)¹ 	Cisco IOS Release 12.0(22)S, 12.1(12)E, 12.2(12)T or later releases of Cisco IOS Release 12.0 S, 12.1 E, and 12.2 T
Cisco 7200 series	
<ul style="list-style-type: none"> Cisco 7204VXR and Cisco 7206VXR 	Cisco IOS Release 12.0(2)XE2 or a later release of Cisco IOS Release 12.0 XE Cisco IOS Release 12.0(3)T or a later release of Cisco IOS Release 12.0 T Cisco IOS Release 12.2(4)B or a later release of Cisco IOS Release 12.2 B
<ul style="list-style-type: none"> Cisco 7204 and Cisco 7206 	Cisco IOS Release 11.1(472) or a later release of Cisco IOS Release 11.1 Cisco IOS Release 11.1(16)CA or a later release of Cisco IOS Release 11.1 CA Cisco IOS Release 11.2(1) or a later release of Cisco IOS Release 11.2 Cisco IOS Release 11.2(5)P or a later release of Cisco IOS Release 11.2 P Cisco IOS Release 12.2(4)B or a later release of Cisco IOS Release 12.2 B
<ul style="list-style-type: none"> Cisco 7202 	Cisco IOS Release 11.1(19)CC1 or a later release of Cisco IOS Release 11.1 CC Cisco IOS Release 11.3(4)AA or a later release of Cisco IOS Release 11.3 AA Cisco IOS Release 12.2(4)B or a later release of Cisco IOS Release 12.2 B
<ul style="list-style-type: none"> Cisco 7206 router shelf in Cisco AS5800 	Cisco IOS Release 11.3(2)AA or a later release of Cisco IOS Release 11.3 AA Cisco IOS Release 12.2(4)B or a later release of Cisco IOS Release 12.2 B
Cisco uBR7200 series	
<ul style="list-style-type: none"> Cisco uBR7246 and Cisco uBR7223 	Cisco IOS Release 11.3(7)NA or a later release of Cisco IOS Release 11.3 NA Cisco IOS Release 12.0(3)T or a later release of Cisco IOS Release 12.0 T
Cisco 7100 series	
<ul style="list-style-type: none"> Cisco 7120 series and Cisco 7140 series 	Cisco IOS Release 12.0(4)XE or a later release of Cisco IOS Release 12.0 XE Cisco IOS Release 12.0(5)T or a later release of Cisco IOS Release 12.0 T
Cisco 7301 routers	
Cisco IOS Release 12.2(11)YZ or a later release of Cisco IOS Release 12.2(11)YZ	
Cisco 7304 routers	
<ul style="list-style-type: none"> With Cisco 7304 PCI Port Adapter Carrier Card 	Cisco IOS Release 12.2(14)SZ or a later release of Cisco IOS Release 12.2SZ
Cisco 7401ASR routers	
Cisco IOS Release 12.2(1)DX or a later release of Cisco IOS Release 12.2 DX Cisco IOS Release 12.2(4)B or a later release of Cisco IOS Release 12.2 B	

Table 2-1 PA-FE-TX and PA-FE-FX Software Requirements (continued)

Catalyst 5000 family switches	
<ul style="list-style-type: none"> With Catalyst RSM/VIP2-15(=) or Catalyst RSM/VIP2-40(=) 	Cisco IOS Release 11.2(15)P or a later release of Cisco IOS Release 11.2 P

1. Cisco 7500 series routers only.

Checking Hardware and Software Compatibility

To check the minimum software requirements of Cisco IOS software with the hardware installed on your router, Cisco maintains the Software Advisor tool on Cisco.com. This tool does not verify whether modules within a system are compatible, but it does provide the minimum IOS requirements for individual hardware modules or components.



Note

Access to this tool is limited to users with Cisco.com login accounts.

To access Software Advisor, go to Cisco.com and select **Products and Solutions: Services: All Services: Software Advisor** (listed under Related Tools).

You can also access the tool by pointing your browser directly to

<http://tools.cisco.com/Support/Fusion/index.do>

Choose a product family or enter a specific product number to search for the minimum supported software release needed for your hardware.

Safety Guidelines

This section provides safety guidelines that you should follow when working with any equipment that connects to electrical power or telephone wiring.

Safety Warnings

Safety warnings appear throughout this publication in procedures that, if performed incorrectly, may harm you. A warning symbol precedes each warning statement.



Warning

IMPORTANT SAFETY INSTRUCTIONS

This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. Use the statement number provided at the end of each warning to locate its translation in the translated safety warnings that accompanied this device. Statement 1071

SAVE THESE INSTRUCTIONS

Waarschuwing

BELANGRIJKE VEILIGHEIDSINSTRUCTIES

Dit waarschuwingssymbool betekent gevaar. U verkeert in een situatie die lichamelijk letsel kan veroorzaken. Voordat u aan enige apparatuur gaat werken, dient u zich bewust te zijn van de bij elektrische schakelingen betrokken risico's en dient u op de hoogte te zijn van de standaard praktijken om ongelukken te voorkomen. Gebruik het nummer van de verklaring onderaan de waarschuwing als u een vertaling van de waarschuwing die bij het apparaat wordt geleverd, wilt raadplegen.

BEWAAR DEZE INSTRUCTIES

Varoitus

TÄRKEITÄ TURVALLISUUSOHJEITA

Tämä varoitusmerkki merkitsee vaaraa. Tilanne voi aiheuttaa ruumiillisia vammoja. Ennen kuin käsittelet laitteistoa, huomioi sähköpiirien käsittelemiseen liittyvät riskit ja tutustu onnettomuuksien yleisiin ehkäisytapoihin. Turvallisuusvaroitusten käännökset löytyvät laitteen mukana toimitettujen käännettyjen turvallisuusvaroitusten joukosta varoitusten lopussa näkyvien lausuntonumeroiden avulla.

SÄILYTÄ NÄMÄ OHJEET

Attention

IMPORTANTES INFORMATIONS DE SÉCURITÉ

Ce symbole d'avertissement indique un danger. Vous vous trouvez dans une situation pouvant entraîner des blessures ou des dommages corporels. Avant de travailler sur un équipement, soyez conscient des dangers liés aux circuits électriques et familiarisez-vous avec les procédures couramment utilisées pour éviter les accidents. Pour prendre connaissance des traductions des avertissements figurant dans les consignes de sécurité traduites qui accompagnent cet appareil, référez-vous au numéro de l'instruction situé à la fin de chaque avertissement.

CONSERVEZ CES INFORMATIONS

Warnung

WICHTIGE SICHERHEITSHINWEISE

Dieses Warnsymbol bedeutet Gefahr. Sie befinden sich in einer Situation, die zu Verletzungen führen kann. Machen Sie sich vor der Arbeit mit Geräten mit den Gefahren elektrischer Schaltungen und den üblichen Verfahren zur Vorbeugung vor Unfällen vertraut. Suchen Sie mit der am Ende jeder Warnung angegebenen Anweisungsnummer nach der jeweiligen Übersetzung in den übersetzten Sicherheitshinweisen, die zusammen mit diesem Gerät ausgeliefert wurden.

BEWAHREN SIE DIESE HINWEISE GUT AUF.

Avvertenza IMPORTANTI ISTRUZIONI SULLA SICUREZZA

Questo simbolo di avvertenza indica un pericolo. La situazione potrebbe causare infortuni alle persone. Prima di intervenire su qualsiasi apparecchiatura, occorre essere al corrente dei pericoli relativi ai circuiti elettrici e conoscere le procedure standard per la prevenzione di incidenti. Utilizzare il numero di istruzione presente alla fine di ciascuna avvertenza per individuare le traduzioni delle avvertenze riportate in questo documento.

CONSERVARE QUESTE ISTRUZIONI**Advarsel VIKTIGE SIKKERHETSINSTRUKSJONER**

Dette advarselssymbolet betyr fare. Du er i en situasjon som kan føre til skade på person. Før du begynner å arbeide med noe av utstyret, må du være oppmerksom på farene forbundet med elektriske kretser, og kjenne til standardprosedyrer for å forhindre ulykker. Bruk nummeret i slutten av hver advarsel for å finne oversettelsen i de oversatte sikkerhetsadvarslene som fulgte med denne enheten.

TA VARE PÅ DISSE INSTRUKSJONENE**Aviso INSTRUÇÕES IMPORTANTES DE SEGURANÇA**

Este símbolo de aviso significa perigo. Você está em uma situação que poderá ser causadora de lesões corporais. Antes de iniciar a utilização de qualquer equipamento, tenha conhecimento dos perigos envolvidos no manuseio de circuitos elétricos e familiarize-se com as práticas habituais de prevenção de acidentes. Utilize o número da instrução fornecido ao final de cada aviso para localizar sua tradução nos avisos de segurança traduzidos que acompanham este dispositivo.

GUARDE ESTAS INSTRUÇÕES**¡Advertencia! INSTRUCCIONES IMPORTANTES DE SEGURIDAD**

Este símbolo de aviso indica peligro. Existe riesgo para su integridad física. Antes de manipular cualquier equipo, considere los riesgos de la corriente eléctrica y familiarícese con los procedimientos estándar de prevención de accidentes. Al final de cada advertencia encontrará el número que le ayudará a encontrar el texto traducido en el apartado de traducciones que acompaña a este dispositivo.

GUARDE ESTAS INSTRUCCIONES**Varning! VIKTIGA SÄKERHETSANVISNINGAR**

Denna varningssignal signalerar fara. Du befinner dig i en situation som kan leda till personskada. Innan du utför arbete på någon utrustning måste du vara medveten om farorna med elkretsar och känna till vanliga förfaranden för att förebygga olyckor. Använd det nummer som finns i slutet av varje varning för att hitta dess översättning i de översatta säkerhetsvarningar som medföljer denna anordning.

SPARA DESSA ANVISNINGAR

Figyelem FONTOS BIZTONSÁGI ELOÍRÁSOK

Ez a figyelmeztető jel veszélyre utal. Sérülésveszélyt rejtő helyzetben van. Mielott bármely berendezésen munkát végezte, legyen figyelemmel az elektromos áramkörök okozta kockázatokra, és ismerkedjen meg a szokásos balesetvédelmi eljárásokkal. A kiadványban szereplő figyelmeztetések fordítása a készülékhez mellékelt biztonsági figyelmeztetések között található; a fordítás az egyes figyelmeztetések végén látható szám alapján kereshető meg.

ORIZZE MEG EZEKET AZ UTASÍTÁSOKAT!**Предупреждение ВАЖНЫЕ ИНСТРУКЦИИ ПО СОБЛЮДЕНИЮ ТЕХНИКИ БЕЗОПАСНОСТИ**

Этот символ предупреждения обозначает опасность. То есть имеет место ситуация, в которой следует опасаться телесных повреждений. Перед эксплуатацией оборудования выясните, каким опасностям может подвергаться пользователь при использовании электрических цепей, и ознакомьтесь с правилами техники безопасности для предотвращения возможных несчастных случаев. Воспользуйтесь номером заявления, приведенным в конце каждого предупреждения, чтобы найти его переведенный вариант в переводе предупреждений по безопасности, прилагаемом к данному устройству.

СОХРАНИТЕ ЭТИ ИНСТРУКЦИИ**警告 重要的安全性说明**

此警告符号代表危险。您正处于可能受到严重伤害的工作环境中。在您使用设备开始工作之前，必须充分意识到触电的危险，并熟练掌握防止事故发生的标准工作程序。请根据每项警告结尾提供的声明号码来找到此设备的安全性警告说明的翻译文本。

请保存这些安全性说明

警告 安全上の重要な注意事項

「危険」の意味です。人身事故を予防するための注意事項が記述されています。装置の取り扱い作業を行うときは、電気回路の危険性に注意し、一般的な事故防止策に留意してください。警告の各国語版は、各注意事項の番号を基に、装置に付属の「Translated Safety Warnings」を参照してください。

これらの注意事項を保管しておいてください。

주의 중요 안전 지침

이 경고 기호는 위험을 나타냅니다. 작업자가 신체 부상을 일으킬 수 있는 위험한 환경에 있습니다. 장비에 작업을 수행하기 전에 전기 회로와 관련된 위험을 숙지하고 표준 작업 관례를 숙지하여 사고를 방지하십시오. 각 경고의 마지막 부분에 있는 경고문 번호를 참조하여 이 장치와 함께 제공되는 번역된 안전 경고문에서 해당 번역문을 찾으십시오.

이 지시 사항을 보관하십시오.

Aviso INSTRUÇÕES IMPORTANTES DE SEGURANÇA

Este símbolo de aviso significa perigo. Você se encontra em uma situação em que há risco de lesões corporais. Antes de trabalhar com qualquer equipamento, esteja ciente dos riscos que envolvem os circuitos elétricos e familiarize-se com as práticas padrão de prevenção de acidentes. Use o número da declaração fornecido ao final de cada aviso para localizar sua tradução nos avisos de segurança traduzidos que acompanham o dispositivo.

GUARDE ESTAS INSTRUÇÕES**Advarsel VIGTIGE SIKKERHEDSANVISNINGER**

Dette advarselssymbol betyder fare. Du befinder dig i en situation med risiko for legemeskadedigelse. Før du begynder arbejde på udstyr, skal du være opmærksom på de involverede risici, der er ved elektriske kredsløb, og du skal sætte dig ind i standardprocedurer til undgåelse af ulykker. Brug erklæringsnummeret efter hver advarsel for at finde oversættelsen i de oversatte advarsler, der fulgte med denne enhed.

GEM DISSE ANVISNINGER

تحذير

إرشادات الأمان الهامة

يوضح رمز التحذير هذا وجود خطر. وهذا يعني أنك متواجد في مكان قد ينتج عنه التعرض للإصابات. قبل بدء العمل، احذر مخاطر التعرض للصدمات الكهربائية وكن على علم بالاجراءات القياسية للحيلولة دون وقوع أي حوادث. استخدم رقم البيان الموجود في آخر كل تحذير لتحديد مكان ترجمته داخل تحذيرات الأمان المترجمة التي تأتي مع الجهاز. قم بحفظ هذه الإرشادات

Upozorenje VAŽNE SIGURNOSNE NAPOMENE

Ovaj simbol upozorenja predstavlja opasnost. Nalazite se u situaciji koja može prouzročiti tjelesne ozljede. Prije rada s bilo kojim uređajem, morate razumjeti opasnosti vezane uz električne sklopove, te biti upoznati sa standardnim načinima izbjegavanja nesreća. U prevedenim sigurnosnim upozorenjima, priloženima uz uređaj, možete prema broju koji se nalazi uz pojedino upozorenje pronaći i njegov prijevod.

SAČUVAJTE OVE UPUTE**Upozornění DŮLEŽITÉ BEZPEČNOSTNÍ POKYNY**

Tento upozorňující symbol označuje nebezpečí. Jste v situaci, která by mohla způsobit nebezpečí úrazu. Před prací na jakémkoliv vybavení si uvědomte nebezpečí související s elektrickými obvody a seznamte se se standardními opatřeními pro předcházení úrazům. Podle čísla na konci každého upozornění vyhledejte jeho překlad v přeložených bezpečnostních upozorněních, která jsou přiložena k zařízení.

USCHOVEJTE TYTO POKYNY

Προειδοποίηση ΣΗΜΑΝΤΙΚΕΣ ΟΔΗΓΙΕΣ ΑΣΦΑΛΕΙΑΣ

Αυτό το προειδοποιητικό σύμβολο σημαίνει κίνδυνο. Βρίσκεστε σε κατάσταση που μπορεί να προκαλέσει τραυματισμό. Πριν εργαστείτε σε οποιοδήποτε εξοπλισμό, να έχετε υπόψη σας τους κινδύνους που σχετίζονται με τα ηλεκτρικά κυκλώματα και να έχετε εξοικειωθεί με τις συνηθισμένες πρακτικές για την αποφυγή ατυχημάτων. Χρησιμοποιήστε τον αριθμό δήλωσης που παρέχεται στο τέλος κάθε προειδοποίησης, για να εντοπίσετε τη μετάφρασή της στις μεταφρασμένες προειδοποιήσεις ασφαλείας που συνοδεύουν τη συσκευή.

ΦΥΛΑΞΤΕ ΑΥΤΕΣ ΤΙΣ ΟΔΗΓΙΕΣ

הזהרה

הוראות בטיחות חשובות

סימן הזהרה זה מסמל סכנה. אתה נמצא במצב העלול לגרום לפציעה. לפני שתעבוד עם ציוד כלשהו, עליך להיות מודע לסכנות הכרוכות במעגלים חשמליים ולהכיר את הנהלים המקובלים למניעת תאונות. השתמש במספר ההוראה המסופק בסופה של כל הזהרה כדי לאתר את התרגום באזהרות הבטיחות המתורגמות שמצורפות להתקן.

שמור הוראות אלה

Opomena

ВАЖНИ БЕЗБЕДНОСНИ НАПАТСТВИЈА

Симболот за предупредување значи опасност. Се наоѓате во ситуација што може да предизвика телесни повреди. Пред да работите со опремата, бидете свесни за ризикот што постои кај електричните кола и треба да ги познавате стандардните постапки за спречување на несреќни случаи. Искористете го бројот на изјавата што се наоѓа на крајот на секое предупредување за да го најдете неговиот период во преведените безбедносни предупредувања што се испорачани со уредот.

ЧУВАЈТЕ ГИ ОБИЕ НАПАТСТВИЈА

Ostrzeżenie

WAŻNE INSTRUKCJE DOTYCZĄCE BEZPIECZEŃSTWA

Ten symbol ostrzeżenia oznacza niebezpieczeństwo. Zachodzi sytuacja, która może powodować obrażenia ciała. Przed przystąpieniem do prac przy urządzeniach należy zapoznać się z zagrożeniami związanymi z układami elektrycznymi oraz ze standardowymi środkami zapobiegania wypadkom. Na końcu każdego ostrzeżenia podano numer, na podstawie którego można odszukać tłumaczenie tego ostrzeżenia w dołączonym do urządzenia dokumencie z tłumaczeniami ostrzeżeń.

NINIEJSZE INSTRUKCJE NALEŻY ZACHOWAĆ

Upozornenie

DÔLEŽITÉ BEZPEČNOSTNÉ POKYNY

Tento varovný symbol označuje nebezpečenstvo. Nachádzate sa v situácii s nebezpečenstvom úrazu. Pred prácou na akomkoľvek vybavení si uvedomte nebezpečenstvo súvisiace s elektrickými obvodmi a oboznámte sa so štandardnými opatreniami na predchádzanie úrazom. Podľa čísla na konci každého upozornenia vyhľadajte jeho preklad v preložených bezpečnostných upozorneniach, ktoré sú priložené k zariadeniu.

USCHOVAJTE SI TENTO NÁVOD

Electrical Equipment Guidelines

Follow these basic guidelines when working with any electrical equipment:

- Before beginning any procedures requiring access to the chassis interior, locate the emergency power-off switch for the room in which you are working.
- Disconnect all power and external cables before moving a chassis.
- Do not work alone when potentially hazardous conditions exist.
- Never assume that power has been disconnected from a circuit; always check.
- Do not perform any action that creates a potential hazard to people or makes the equipment unsafe; carefully examine your work area for possible hazards such as moist floors, ungrounded power extension cables, and missing safety grounds.

Telephone Wiring Guidelines

Use the following guidelines when working with any equipment that is connected to telephone wiring or to other network cabling:

- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

Preventing Electrostatic Discharge Damage

Electrostatic discharge (ESD) damage, which can occur when electronic cards or components are improperly handled, results in complete or intermittent failures. Port adapters and processor modules comprise printed circuit boards that are fixed in metal carriers. Electromagnetic interference (EMI) shielding and connectors are integral components of the carrier. Although the metal carrier helps to protect the board from ESD, use a preventive antistatic strap during handling.

Following are guidelines for preventing ESD damage:

- Always use an ESD wrist or ankle strap and ensure that it makes good skin contact.
- Connect the equipment end of the strap to an unfinished chassis surface.
- When installing a component, use any available ejector levers or captive installation screws to properly seat the bus connectors in the backplane or midplane. These devices prevent accidental removal, provide proper grounding for the system, and help to ensure that bus connectors are properly seated.
- When removing a component, use any available ejector levers or captive installation screws to release the bus connectors from the backplane or midplane.
- Handle carriers by available handles or edges only; avoid touching the printed circuit boards or connectors.

- Place a removed board component-side up on an antistatic surface or in a static shielding container. If you plan to return the component to the factory, immediately place it in a static shielding container.
- Avoid contact between the printed circuit boards and clothing. The wrist strap only protects components from ESD voltages on the body; ESD voltages on clothing can still cause damage.
- Never attempt to remove the printed circuit board from the metal carrier.

**Caution**

For safety, periodically check the resistance value of the antistatic strap. The measurement should be between 1 and 10 megohms (Mohms).

Laser/LED Safety

The single-mode transmitter in the module uses a small laser to transmit the light signal to the network ring. Keep the transmit port covered whenever a cable is not connected to it. Although multimode transceivers typically use LEDs for transmission, it is good practice to keep open ports covered and avoid staring into open ports or apertures. The single-mode aperture port contains a laser warning label, as shown in [Figure 2-1](#).

Figure 2-1 Laser Warning Labels for Single-Mode Port

**Warning**

Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments. Statement 1051

**Warning**

Class 1 laser product. Statement 1008

The multimode aperture contains a Class 1 LED warning label, as shown in [Figure 2-2](#).

Figure 2-2 Class 1 LED Warning Label for Multimode Port

**Warning**

Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments. Statement 1051

**Warning**

Class 1 LED product. Statement 1008

FCC Class A Compliance

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio-frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to correct the interference at their own expense.

You can determine whether your equipment is causing interference by turning it off. If the interference stops, it was probably caused by the Cisco equipment or one of its peripheral devices. If the equipment causes interference to radio or television reception, try to correct the interference by using one or more of the following measures:

- Turn the television or radio antenna until the interference stops.
- Move the equipment to one side or the other of the television or radio.
- Move the equipment farther away from the television or radio.
- Plug the equipment into an outlet that is on a different circuit from the television or radio. (That is, make certain the equipment and the television or radio are on circuits controlled by different circuit breakers or fuses.)

**Caution**

This product has been designed to meet these requirements. Modifications to this product that are not authorized by Cisco Systems, Inc. could void the various approvals and negate your authority to operate the product.



Removing and Installing Port Adapters

This chapter describes how to remove the PA-FE-TX and PA-FE-FX port adapters from supported platforms and also how to install a new or replacement port adapter. This chapter contains the following sections:

- [Handling Port Adapters, page 3-1](#)
- [Online Insertion and Removal, page 3-2](#)
- [Warnings and Cautions, page 3-2](#)
- [Port Adapter Removal and Installation, page 3-3](#)
- [Connecting PA-FE-TX and PA-FE-FX Port Adapter Interface Cables, page 3-14](#)

Each port adapter circuit board is mounted to a metal carrier and is sensitive to electrostatic discharge (ESD) damage. Before you begin installation, read [Chapter 2, “Preparing for Installation,”](#) for a list of parts and tools required for installation.



Note

When a slot is not in use, a blank must fill the empty slot to allow the router or switch to conform to electromagnetic interference (EMI) emissions requirements and to allow proper airflow across the installed port adapters. If you plan to install a new port adapter in a slot that is not in use, you must first remove the blank.



Caution

When powering off the router, wait a minimum of 30 seconds before powering it on again.


Handling Port Adapters



Caution

Always handle the port adapter by the carrier edges and handle; never touch the port adapter components or connector pins. (See [Figure 3-1 on page 3-2.](#))

Figure 3-1 Handling a Port Adapter

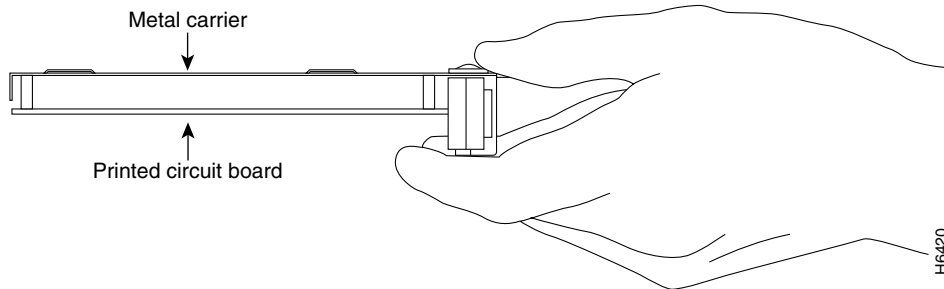

Online Insertion and Removal

The Cisco 7100 series routers, Cisco 7200 series routers, Cisco 7200 VXR routers, Cisco uBR7246 router, Cisco 7301 routers, and the Cisco 7401ASR routers support the OIR of all module types. Therefore, you do not have to power down routers when removing and replacing modules in these chassis.

Regarding the Catalyst 5000 family switches, Cisco 7000 series routers, and Cisco 7500 series routers, the VIP does not support OIR of individual port adapters. To remove or install port adapters on a Catalyst RSM/VIP2, VIP, or Cisco 7304 PCI Port Adapter Carrier Card you must first remove the Catalyst RSM/VIP2, VIP, or the Cisco 7304 PCI Port Adapter Carrier Card from the router and then remove or install the port adapter as required.



Caution

To prevent system problems, do not remove modules from a Catalyst RSM/VIP2, VIP, or the Cisco 7304 PCI Port Adapter Carrier Card, and do not attempt to install other modules on the Catalyst RSM/VIP2, VIP, or Cisco 7304 PCI Port Adapter Carrier Card when the system is operating. To install or replace modules, first remove the Catalyst RSM/VIP2, VIP, or Cisco 7304 PCI Port Adapter Carrier Card from the router.



Note

As you disengage the module from the router or switch, online insertion and removal (OIR) administratively shuts down all active interfaces in the module.

Warnings and Cautions

Observe the following warnings and cautions when installing or removing modules:

- Do not slide a module all the way into the slot until you have connected all required cables. Trying to do so disrupts normal operation of the router or switch.
- If a module lever or other retaining mechanism does not move to the locked position, the module is not completely seated in the midplane. Carefully pull the module halfway out of the slot, reinsert it, and move the module lever or other mechanism to the locked position.
- To prevent jamming the carrier between the upper and the lower edges of the module slot, and to ensure that the edge connector at the rear of the module mates with the connection at the rear of the module slot, make certain that the carrier is positioned correctly, as shown in the cutaway in the following illustrations.

**Caution**

When performing the following procedures, wear a grounding wrist strap to avoid ESD damage to the card. Some platforms have an ESD connector for attaching the wrist strap.

**Warning**

Hazardous voltage or energy is present on the backplane when the system is operating. Use caution when servicing. Statement 1034

Port Adapter Removal and Installation

In this section there are step-by-step instructions on how to remove and install port adapters. Although the procedures may refer to a particular type of port adapter, the steps are the same for installing and removing all types of port adapters.


- [Catalyst 5000 Family Switches with RSM/VIP2—Removing and Installing a Port Adapter, page 3-4](#)
- [Cisco 7100 Series Routers—Removing and Installing a Port Adapter, page 3-5](#)
- [Cisco 7200 Series Routers and Cisco 7200 VXR Routers—Removing and Installing a Port Adapter, page 3-6](#)
- [Cisco uBR7200 Series Routers—Removing a Port Adapter, page 3-7](#)
- [Cisco uBR7200 Series Routers—Installing a Port Adapter, page 3-8](#)
- [Cisco 7301 Router—Removing and Installing a Port Adapter, page 3-9](#)
- [Cisco 7304 PCI Port Adapter Carrier Card—Removing and Installing a Port Adapter, page 3-10](#)
- [Cisco 7401ASR Router—Removing and Installing a Port Adapter, page 3-12](#)
- [Cisco 7000 Series Routers and Cisco 7500 Series Routers with VIP—Removing and Installing a Single-Width Port Adapter, page 3-13](#)

Catalyst 5000 Family Switches with RSM/VIP2—Removing and Installing a Port Adapter

Note: You must first remove the Catalyst RSM/VIP2 from the chassis before removing a port adapter from the Catalyst RSM/VIP2.


Step 1

To remove the port adapter, remove the screw that secures the port adapter (or blank port adapter). (See A.)

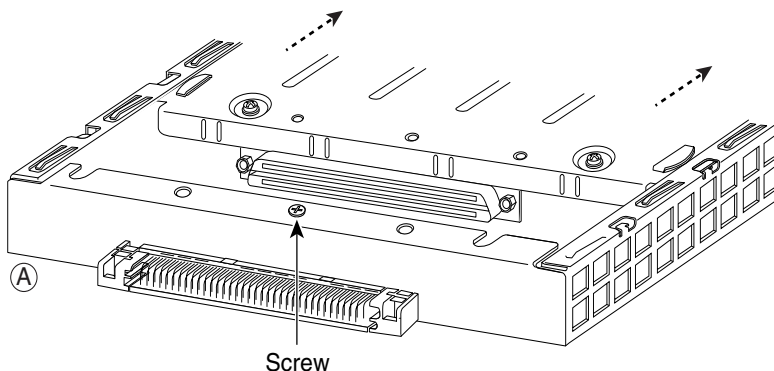

Step 2

With the screw removed, grasp the handle on the front of the port adapter (or blank port adapter) and carefully pull it out of its slot, away from the edge connector at the rear of the slot. (See A.)

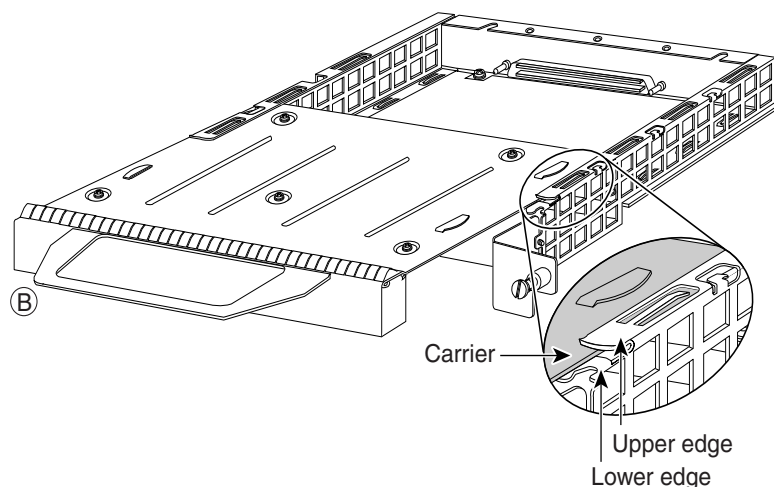

Step 3


To install the port adapter, carefully align the port adapter carrier between the upper and the lower edges of the port adapter slot. (See B.)

Step 4

Install the screw in the rear of the port adapter slot. Do not overtighten the screw. (See A.)

Step 5

Carefully slide the new port adapter into the port adapter slot until the connector on the port adapter is completely seated in the connector at the rear of the port adapter slot. (See B.)

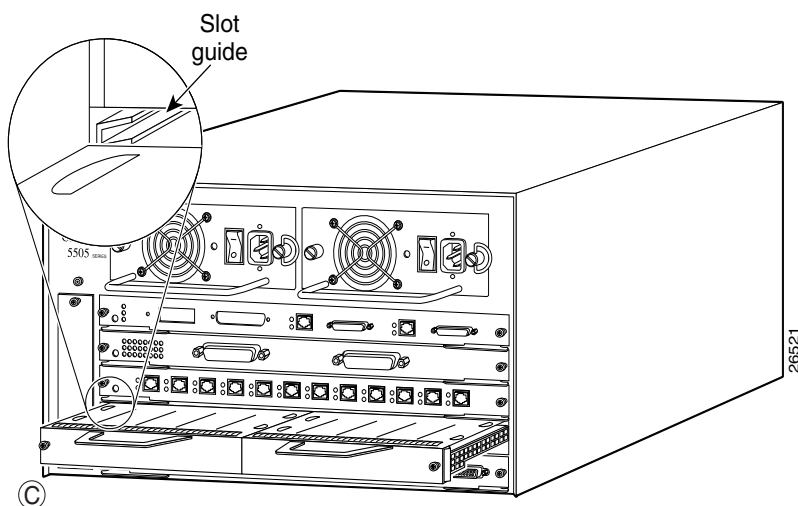


Step 6

Reinstall the Catalyst RSM/VIP2 motherboard in the chassis and tighten the captive installation screw on each side of the Catalyst RSM/VIP2 faceplate. (See C.)

Cisco 7100 Series Routers—Removing and Installing a Port Adapter

Step 1

To remove the port adapter, use a number 2 Phillips screwdriver to loosen the screws on the locking tab. Then slide the tab down to the unlocked position.

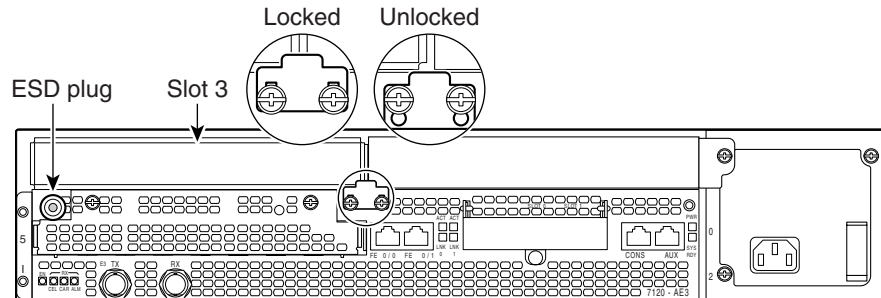

Step 2

Grasp the handle of the port adapter and pull the port adapter from the router, about halfway out of its slot. If you are removing a blank port adapter, pull the blank port adapter completely out of the chassis slot.

Step 3


With the port adapter halfway out of the slot, disconnect all cables from the port adapter.

Step 4

After disconnecting the cables, pull the port adapter from its chassis slot.

Step 5

To insert the port adapter, carefully align the port adapter carrier between the upper and the lower edges of the port adapter slot.

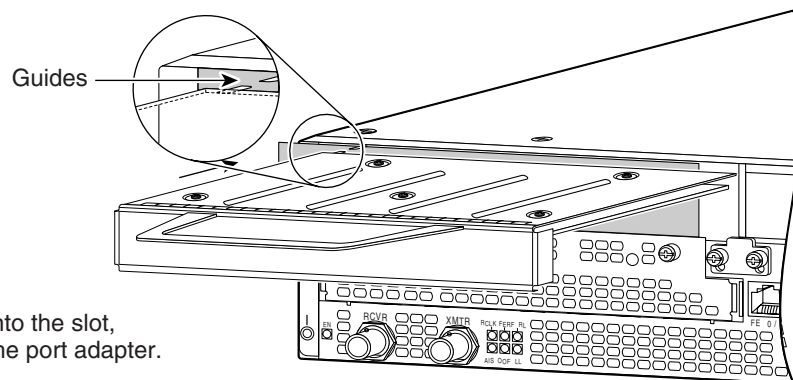

Step 6

With the port adapter halfway into the slot, connect all required cables to the port adapter.

Step 7

After connecting all required cables, carefully slide the port adapter all the way into the slot until the port adapter is seated in the router midplane.

Step 8

After the port adapter is properly seated, lock the port adapter retaining mechanism.

26522

Cisco 7200 Series Routers and Cisco 7200 VXR Routers—Removing and Installing a Port Adapter

Step 1

To remove the port adapter, place the port adapter lever in the unlocked position. (See A.) The port adapter lever remains in the unlocked position.

Step 2

Grasp the handle of the port adapter and pull the port adapter from the router, about halfway out of its slot. If you are removing a blank port adapter, pull the blank port adapter completely out of the chassis slot.

Step 3

With the port adapter halfway out of the slot, disconnect all cables from the port adapter. After disconnecting the cables, pull the port adapter from its chassis slot.

Step 4

To insert the port adapter, carefully align the port adapter carrier between the upper and the lower edges of the port adapter slot. (See B.)

Step 5



Carefully slide the new port adapter halfway into the port adapter slot. (See B.)

Step 6

With the port adapter halfway into the slot, connect all required cables to the port adapter. After connecting all required cables, carefully slide the port adapter all the way into the slot until the port adapter is seated in the router midplane.

Step 7


After the port adapter is properly seated, lock the port adapter lever. (See A.)

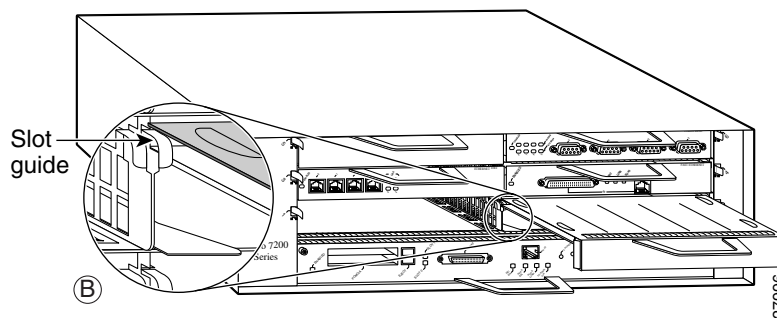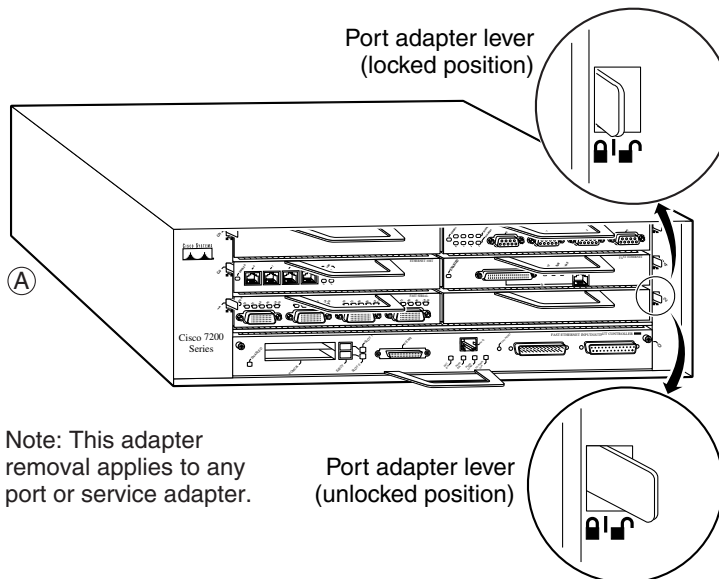


Cisco uBR7200 Series Routers—Removing a Port Adapter

Step 1

To remove the port adapter, unlock the port adapter retaining mechanism. The port adapter lever remains in the unlocked position.

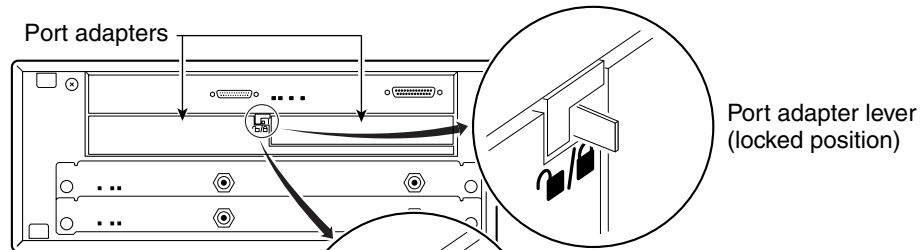


Place the port adapter lever (Cisco uBR7223, see A), or the port adapter retention clip (Cisco uBR7246 and Cisco uBR7246 VXR, see B) in the unlocked position. Either mechanism remains in the unlocked position.

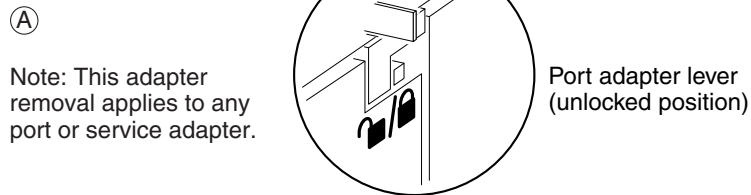


Step 2

Grasp the handle of the port adapter and pull the port adapter from the router, about halfway out of its slot. If you are removing a blank port adapter, pull the blank port adapter completely out of the chassis slot.

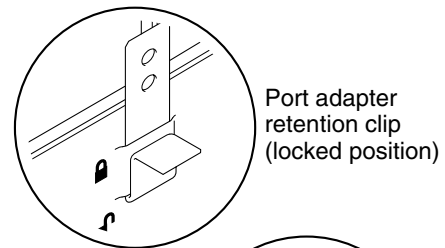

Step 3


With the port adapter halfway out of the slot, disconnect all cables from the port adapter. After disconnecting the cables, pull the port adapter from its chassis slot.

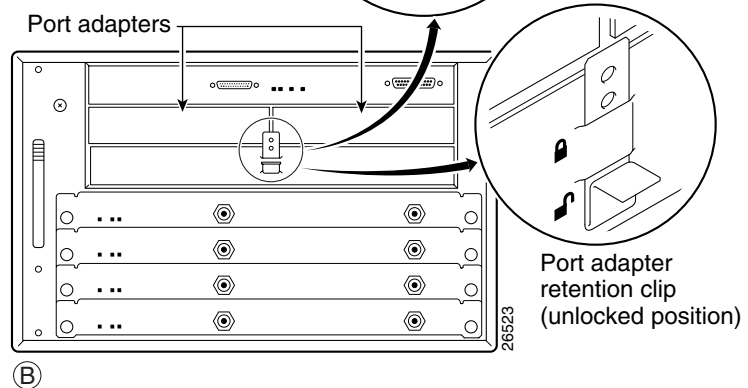

Cisco uBR7200 Series Routers—Installing a Port Adapter

Step 1

To insert the port adapter, carefully align the port adapter carrier between the upper and the lower edges of the port adapter slot.

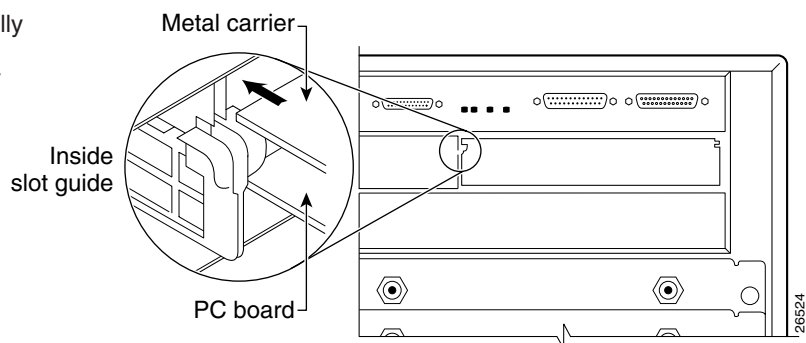

Step 2

Carefully slide the new port adapter halfway into the port adapter slot.

Step 3

With the port adapter halfway into the slot, connect all required cables to the port adapter. After connecting all required cables, carefully slide the port adapter all the way into the slot until the port adapter is seated in the router midplane.

Step 4

After the port adapter is properly seated, lock the port adapter lever or retention clip, depending on your system. (See illustration on preceding page.)

Cisco 7301 Router—Removing and Installing a Port Adapter

Step 1

Use an ESD wrist strap to ground yourself to the router.

Step 2

To remove a port adapter, use a Phillips screwdriver to turn the screw holding the port adapter latch. The screw should be loose enough to allow the latch to rotate to an unlocked position. (See A.) The latch can rotate 360°.

Step 3


Grasp the handle and pull the port adapter from the router, about halfway out of its slot. (See B.) If you are removing a blank port adapter, pull the blank port adapter completely out of the chassis slot.

Step 4

With the port adapter halfway out of the slot, disconnect all cables from the port adapter. After disconnecting the cables, pull the port adapter from its chassis slot.

Caution

The port adapter must slide into the slot guides close to the chassis lid. (See C.) Do not allow the port adapter components to come in contact with the system board or the port adapter could be damaged.

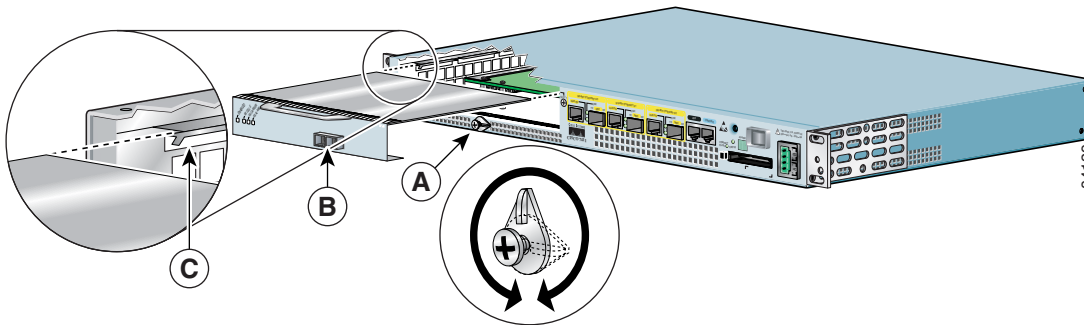

Step 5

To insert the port adapter, carefully align the port adapter carrier in the slot guides. (See C.) Slide the new port adapter halfway into the chassis.

Step 6

Connect all required cables to the port adapter. After connecting all required cables, carefully slide the port adapter all the way into the slot until the port adapter is seated in the midplane.

Step 7

After the port adapter is properly seated, turn and secure the port adapter latch in the upright, locked position. (See A.) Tighten the screw to ensure the port adapter remains firmly in place.

Cisco 7304 PCI Port Adapter Carrier Card—Removing and Installing a Port Adapter

You can install one single-width port adapter in a Cisco 7304 PCI Port Adapter Carrier Card. This section provides step-by-step instructions for removing and installing a port adapter in a Cisco 7304 PCI Port Adapter Carrier Card.

**Caution**

When performing the following procedures, wear a grounding wrist strap to avoid ESD damage to the Cisco 7304 PCI Port Adapter Carrier Card. Some platforms have an ESD connector for attaching the wrist strap.

**Warning**


Hazardous voltage or energy is present on the backplane when the system is operating. Use caution when servicing. Statement 1034

To remove and install a port adapter in a Cisco 7304 PCI Port Adapter Carrier Card, refer to [Figure 3-2](#) and do the following:

- Step 1** If the Cisco 7304 PCI Port Adapter Carrier Card is still in the router, you must remove the Cisco 7304 PCI Port Adapter Carrier Card before removing a port adapter.
- Step 2** To remove the port adapter from the Cisco 7304 PCI Port Adapter Carrier Card, turn the port adapter lock from its locked and horizontal position shown in A of [Figure 3-2](#) to its unlocked and vertical position shown in B of [Figure 3-2](#).
- Step 3** Grasp the handle of the port adapter and pull the port adapter from the Cisco 7304 PCI Port Adapter Carrier Card. (You have already disconnected the cables from the port adapter when removing the Cisco 7304 PCI Port Adapter Carrier Card).
- Step 4** To insert the port adapter in the Cisco 7304 PCI Port Adapter Carrier Card, locate the guide rails inside the Cisco 7304 PCI Port Adapter Carrier Card that hold the port adapter in place. They are at the top left and top right of the port adapter slot and are recessed about an inch, as shown in C of [Figure 3-2](#).
- Step 5** Carefully slide the port adapter in the Cisco 7304 PCI Port Adapter Carrier Card until the port adapter makes contact with the port adapter interface connector. When fully seated, the port adapter front panel should be flush with the face of the Cisco 7304 PCI Port Adapter Carrier Card.
- Step 6** After the port adapter is properly seated, turn the port adapter lock to its locked and horizontal position, as shown in A of [Figure 3-2](#).

Figure 3-2 illustrates how to remove and install a port adapter in a Cisco 7304 PCI Port Adapter Carrier Card.


Figure 3-2 Cisco 7304 PCI Port Adapter Carrier Card—Port Adapter Removal and Installation

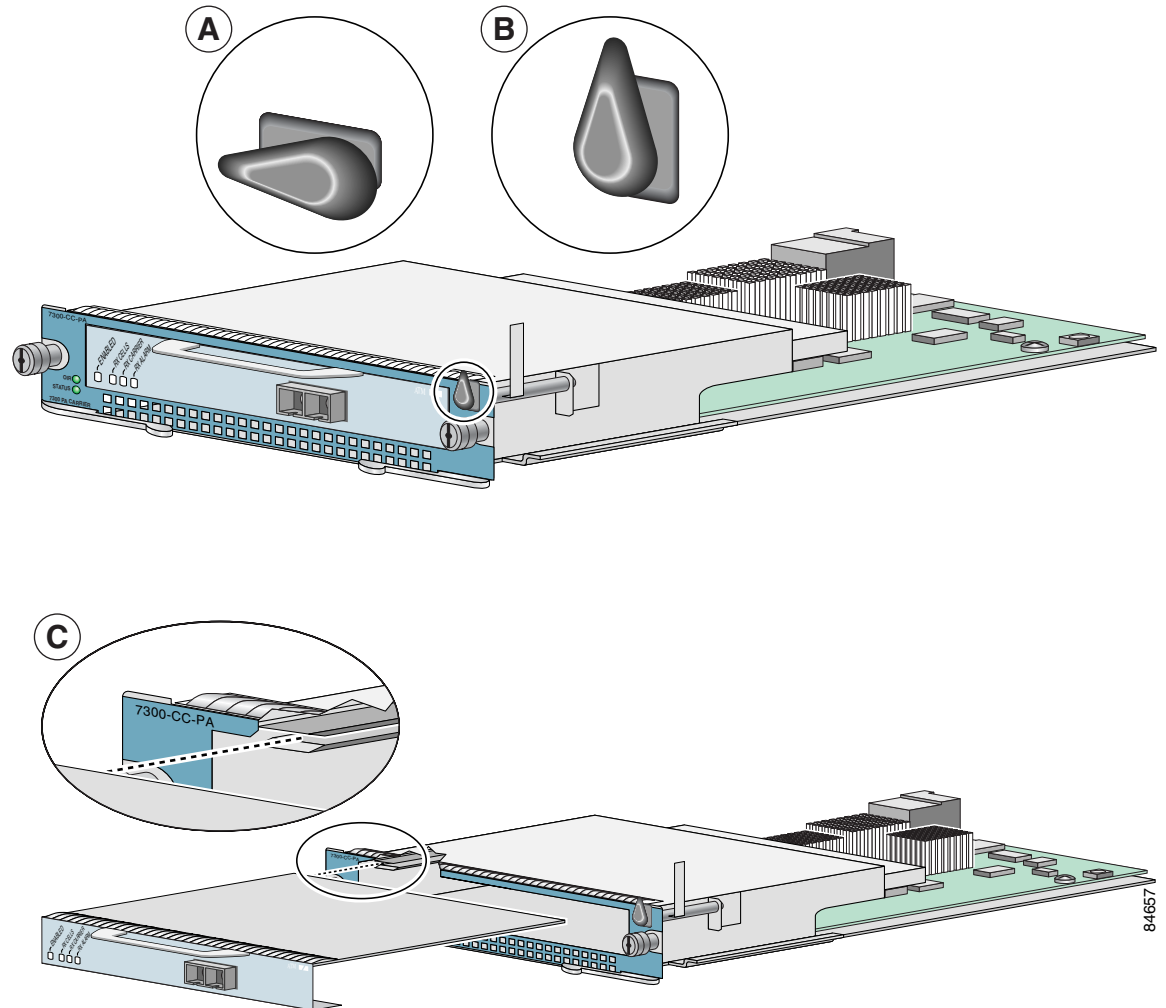

Cisco 7401ASR Router—Removing and Installing a Port Adapter

Step 1

To remove the port adapter, use a number 2 Phillips screwdriver to loosen the screw on the port adapter latch. Rotate the port adapter latch until it clears the faceplate of the port adapter. (See A.) The latch can rotate 360°.

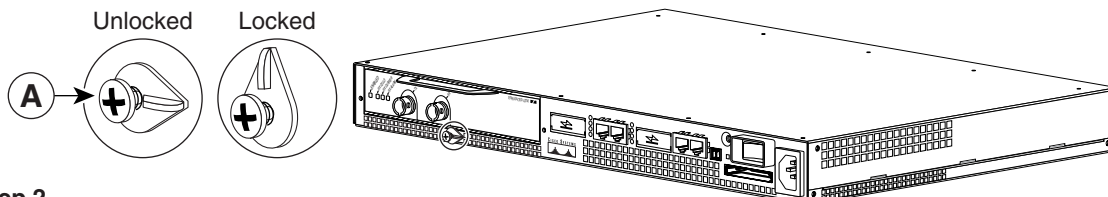

Step 2

Pull the port adapter from the router, about halfway out of its slot. (If you remove a blank port adapter, keep the blank port adapter for use in the router if you should ever remove the port adapter. The port adapter slot must always be filled.)

Step 3


With the port adapter halfway out of the slot, disconnect all cables from the port adapter. After disconnecting the cables, pull the port adapter completely out of the chassis slot.

Step 4

To insert the port adapter, locate the port adapter slot guides inside the Cisco 7401ASR router. They are near the top, and are recessed about 1/2 inch. (See B.)

Caution

The port adapter must slide into the slot guides under the chassis lid. Do not allow the port adapter components to come in contact with the system board, or the port adapter could be damaged.

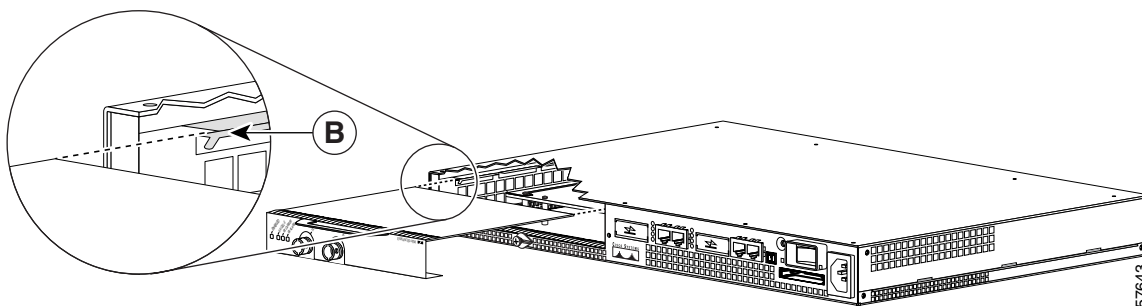

Step 5

Insert the port adapter in the slot guides halfway, and then reconnect the port adapter cables.

Step 6

After the cables are connected, carefully slide the port adapter all the way into the slot until the port adapter is seated in the router midplane. When installed, the port adapter input/output panel should be flush with the face of the router.

Step 7


After the port adapter is properly seated, rotate the port adapter latch to the upright locked position and use a number 2 Phillips screwdriver to tighten the latch screw. If needed, loosen the latch screw to rotate the latch over the port adapter. Finish the installation by tightening the latch screw.

Cisco 7000 Series Routers and Cisco 7500 Series Routers with VIP—Removing and Installing a Single-Width Port Adapter

Note: You must first remove the VIP from the chassis before removing a port adapter from the VIP4.


Step 1

To remove the port adapter, remove the screw that secures the port adapter (or blank port adapter). (See A.)

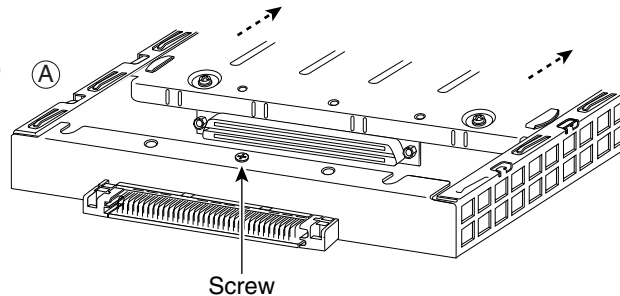

Step 2

With the screw removed, grasp the handle on the front of the port adapter (or blank port adapter) and carefully pull it out of its slot, away from the edge connector at the rear of the slot. (See A.)

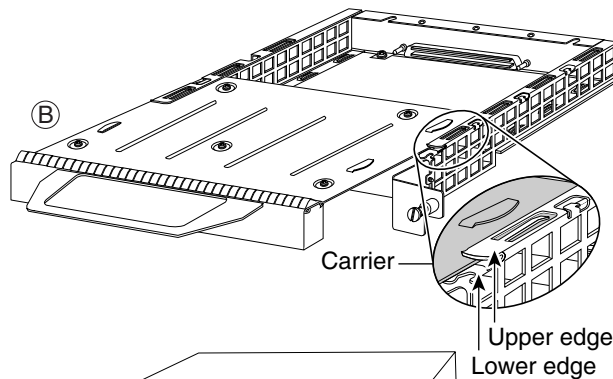

Step 3

To insert the port adapter, carefully align the port adapter carrier between the upper and the lower edges of the port adapter slot. (See B.)

Step 4


Install the screw in the rear of the port adapter slot. Do not overtighten the screw. (See A.)

Step 5

Carefully slide the new port adapter into the port adapter slot until the connector on the port adapter is completely seated in the connector at the rear of the port adapter slot. (See B.)

Step 6

Reinstall the VIP motherboard in the chassis, and tighten the captive installation screw on each end of the VIP faceplate. (See C.)

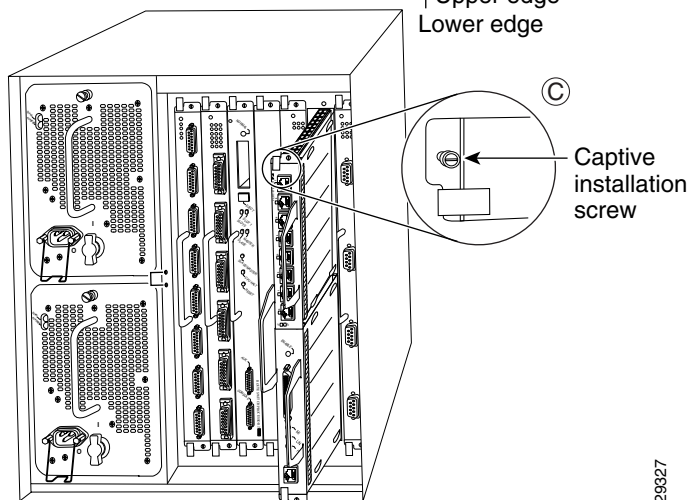

29927

Connecting PA-FE-TX and PA-FE-FX Port Adapter Interface Cables

To continue your PA-FE-TX and PA-FE-FX port adapter installation, you must install the interface cables. The following instructions apply to all supported platforms.

PA-FE-TX and PA-FE-FX Port Adapter RJ-45 and MII Connections

On a single PA-FE, you can use *either* the RJ-45 (or SC for PA-FE-FX) connection *or* the MII connection. (RJ-45, SC, and MII cables are not available from Cisco Systems; they are available from outside commercial cable vendors.) If you have two PA-FE port adapters on your VIP or Catalyst RSM/VIP2, you can use the RJ-45 (or SC for PA-FE-FX) connection on one port adapter and the MII connection on the other port adapter.



Caution

Before you attach your MII transceiver to the MII receptacle on your PA-FE-TX and PA-FE-FX port adapter, ensure that your MII transceiver responds to physical sublayer (PHY) address 0 per section 22.2.4.4. “PHY Address” of the IEEE 802.3u specification; otherwise, interface problems might result. Confirm that this capability is available on your MII transceiver with the transceiver vendor or in the transceiver documentation. If a selection for isolation mode is available, we recommend you use this setting (if PHY addressing is not mentioned).

Attaching PA-FE-TX and PA-FE-FX Port Adapter Interface Cables

Use the following procedure to connect RJ-45 (or SC for PA-FE-FX) and MII cables:

Step 1 If you have MII connections, attach an MII cable directly to the MII receptacle on the PA-FE-TX and PA-FE-FX or attach a 100BASE-T transceiver, with the media appropriate to your application, to the MII receptacle on the PA-FE-TX and PA-FE-FX. (See [Figure 3-3 on page 3-15](#) for the PA-FE-TX and [Figure 3-4 on page 3-15](#) for the PA-FE-FX.)

If you have RJ-45 connections, attach the Category 5 UTP cable directly to the RJ-45 port on the PA-FE-TX and PA-FE-FX. (See [Figure 3-3](#) for PA-FE-TX and [Figure 3-4](#) for PA-FE-FX.) The PA-FE-TX and PA-FE-FX is an end station device and not a repeater. You *must* connect the PA-FE-TX and PA-FE-FX to a repeater or hub.

If you have an SC connection (PA-FE-FX), attach the cable directly to the SC port on the PA-FE-FX. (See [Figure 3-4](#).) Use either one duplex SC connector or two simplex SC connectors, and observe the correct relationship between the receive (RX) and transmit (TX) ports on the PA-FE-FX and your repeater.



Note

Each PA-FE-FX or PA-FE-TX can have either an MII attachment or an RJ-45 (or SC) attachment, but not both simultaneously. The MII and RJ-45 (or SC) receptacles represent two physical connection options for one Fast Ethernet interface.

Figure 3-3 Connecting PA-FE-TX MII or RJ-45 Cables—Horizontal Orientation Shown Without Handles


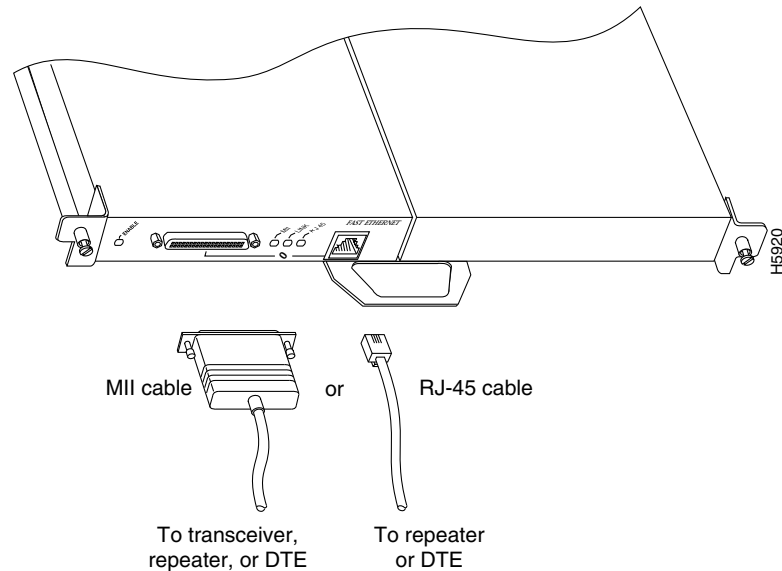


Figure 3-4 Connecting PA-FE-FX MII or SC Cables—Horizontal Orientation Shown Without Handles

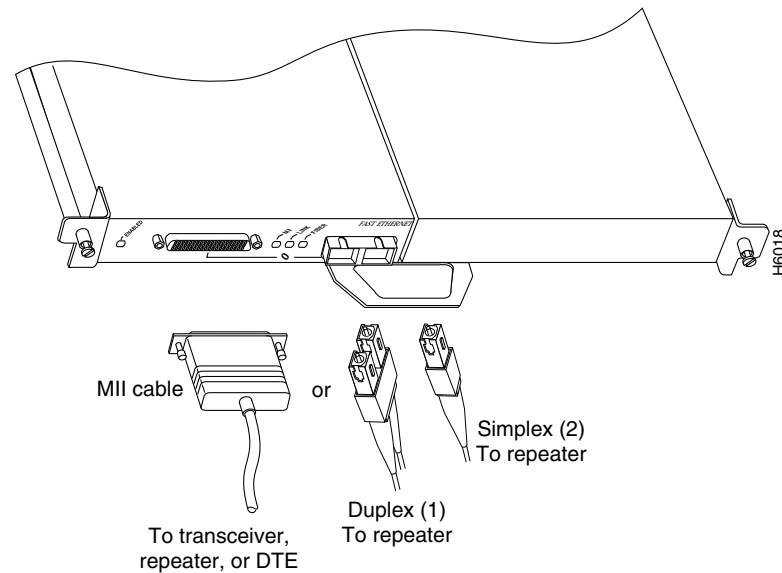

Warning


Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments. Statement 1051

Step 2

For the PA-FE-TX, attach the ferrite bead to the RJ-45 cable (at either end), as shown in [Figure 3-5 on page 3-16](#).

Caution

The ferrite bead prevents electromagnetic interference (EMI) from affecting the PA-FE-TX-equipped system and is a required component for proper system operation.

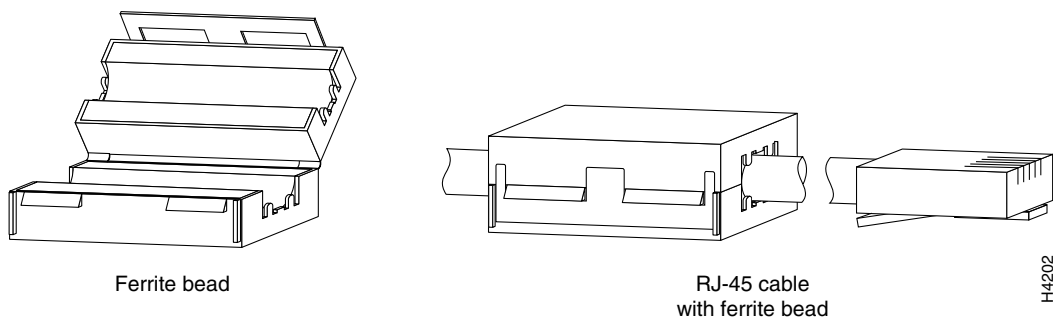Figure 3-5 Attaching the Ferrite Bead around the RJ-45 Cable**Caution**

To prevent problems on your PA-FE-TX and PA-FE-FX and network, do not simultaneously connect RJ-45 (or SC) and MII cables to one PA-FE-TX and PA-FE-FX. On a single PA-FE-TX and PA-FE-FX, only one network connection can be used at one time. Only connect cables that comply with EIA/TIA-568 standards.

Step 3

Attach the network end of your RJ-45 (or SC) or MII cable to your 100BASE-T transceiver, switch, hub, repeater, DTE, or other external 100BASE-T equipment.

**Note**

After your MII transceiver is connected and the PA-FE-TX and PA-FE-FX interface is configured as up, you can verify that your MII transceiver responds to physical sublayer (PHY) address 0 by disconnecting the transceiver from the MII receptacle; if the PA-FE-TX and PA-FE-FX interface goes down, then your MII transceiver responds to PHY address 0.

This completes the PA-FE-TX and PA-FE-FX port adapter cable installation.



Configuring the PA-FE-TX or PA-FE-FX

To continue your PA-FE-TX or PA-FE-FX port adapter installation, you must configure the Fast Ethernet interface. The instructions that follow apply to all supported platforms. Minor differences between the platforms—with Cisco IOS software commands—are noted.

This chapter contains the following sections:

- [Using the EXEC Command Interpreter, page 4-1](#)
- [Configuring the Interfaces, page 4-2](#)
- [Checking the Configuration, page 4-5](#)

Using the EXEC Command Interpreter

You modify the configuration of your router through the software command interpreter called the *EXEC* (also called enable mode). You must enter the privileged level of the EXEC command interpreter with the **enable** command before you can use the **configure** command to configure a new interface or change the existing configuration of an interface. The system prompts you for a password if one has been set.

The system prompt for the privileged level ends with a pound sign (#) instead of an angle bracket (>). At the console terminal, use the following procedure to enter the privileged level:

-
- Step 1** At the user-level EXEC prompt, enter the **enable** command. The EXEC prompts you for a privileged-level password as follows:

```
Router> enable
```

```
Password:
```

- Step 2** Enter the password (the password is case sensitive). For security purposes, the password is not displayed. When you enter the correct password, the system displays the privileged-level system prompt (#):

```
Router#
```

To configure the new interfaces, proceed to the [“Configuring the Interfaces” section on page 4-2](#).

Configuring the Interfaces

After you verify that the new PA-FE-TX or PA-FE-FX is installed correctly (the enabled LED goes on), use the privileged-level **configure** command to configure the new interfaces. Have the following information available:

- Protocols you plan to route on each new interface
- IP addresses, if you plan to configure the interfaces for IP routing
- Bridging protocols you plan to use

If you installed a new PA-FE-TX or PA-FE-FX or if you want to change the configuration of an existing interface, you must enter configuration mode to configure the new interfaces. If you replaced a PA-FE-TX or PA-FE-FX that was previously configured, the system recognizes the new interfaces and brings each of them up in their existing configuration.

For a summary of the configuration options available and instructions for configuring interfaces on a PA-FE-TX or PA-FE-FX, refer to the appropriate configuration publications listed in the “[Related Documentation](#)” section on page viii.

You execute configuration commands from the privileged level of the EXEC command interpreter, which usually requires password access. Contact your system administrator, if necessary, to obtain password access. (See the “[Using the EXEC Command Interpreter](#)” section on page 4-1 for an explanation of the privileged level of the EXEC.)

This section contains the following subsections:

- [Performing a Basic Configuration, page 4-2](#)
- [Configuring PA-FE-TX or PA-FE-FX Transmission Mode, page 4-4](#)
- [Configuring PA-FE-TX or PA-FE-FX Media Type, page 4-4](#)

Performing a Basic Configuration

Following are instructions for a basic configuration: enabling an interface and specifying IP routing. You might also need to enter other configuration subcommands, depending on the requirements for your system configuration and the protocols you plan to route on the interface. For complete descriptions of configuration subcommands and the configuration options available for interfaces, refer to the appropriate software documentation.

In the following procedure, press the **Return** key after each step unless otherwise noted. At any time you can exit the privileged level and return to the user level by entering **disable** at the prompt as follows:

```
Router# disable
```

```
Router>
```

-
- Step 1** At the privileged-level prompt, enter configuration mode and specify that the console terminal is the source of the configuration subcommands, as follows:

```
Router# configure terminal  
Enter configuration commands, one per line. End with CNTL/Z.  
Router(config)#
```

Step 2 The following examples explain how to configure the Fast Ethernet interface:

- For the Cisco 7100 series, Cisco 7200 series, and the Cisco uBR7200 series, at the prompt specify the first interface to configure by entering the subcommand **interface**, followed by the *type* (**fastethernet**) and *slot/interface* (port adapter slot number and interface number). The example that follows is for the first interface of the port adapter in slot 4:

```
Router(config)# interface fastethernet 4/0
```



Note

For the Cisco 7206VXR and Cisco 7206 router shelves in the Cisco AS5800 Universal Access Server, the interface specified in the above example would include a shelf number. For example, the command **interface fastethernet 5/4/0** would specify the first Fast Ethernet interface of the port adapter in slot 4 of router shelf 5.

- For the Cisco 7301 router, the Cisco 7401ASR router, and the Cisco 7304 PCI Port Adapter Carrier Card in a Cisco 7304 router, at the prompt specify the first interface to configure by entering the subcommand **interface**, followed by the *type* (**fastethernet**) and *slot/interface* (port adapter slot number and interface number). The example that follows is for the first interface of the port adapter in slot 1:

```
Router(config)# interface fastethernet 1/0
```

- For the VIP, at the prompt specify the first interface to configure by entering the subcommand **interface**, followed by the *type* (**fastethernet**) and *slot/port-adapter/interface*. The example that follows is for the first interface of the first port adapter, on a VIP in interface processor slot 1:

```
Router(config)# interface fastethernet 1/0/0
```

- For the Catalyst RSM/VIP2, at the prompt specify the first interface to configure by entering the subcommand **interface**, followed by the *type* (**fastethernet**) and *port-adapter/interface*. The example that follows is for the first interface of the first port adapter, on a Catalyst RSM/VIP2:

```
Router(config)# interface fastethernet 0/0
```

Step 3 If IP routing is enabled on the system, you can assign an IP address and subnet mask to the interface with the **ip address** configuration subcommand, as in the following example:

```
Router(config-if)# ip address 10.0.0.0 10.255.255.255
```

Step 4 Add any additional configuration subcommands required to enable routing protocols and set the interface characteristics.

Step 5 Change the shutdown state to up and enable the interface as follows:

```
Router(config-if)# no shutdown
```

Step 6 Configure additional interfaces as required.

Step 7 After including all of the configuration commands to complete your configuration, press **Ctrl-Z**—hold down the **Control** key while you press **Z**—or enter **end** or **exit** to exit configuration mode and return to the EXEC command interpreter prompt.

Step 8 Write the new configuration to NVRAM as follows:

```
Router# copy running-config startup-config  
[OK]  
Router#
```

This completes the procedure for creating a basic configuration.

Configuring PA-FE-TX or PA-FE-FX Transmission Mode

Half-duplex operation is the default transmission mode for the PA-FE-TX or PA-FE-FX. Use the **full-duplex** command to configure full-duplex operation for the PA-FE-TX or PA-FE-FX as follows:

```
Router# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)#
Router(config)# interface fastethernet 4/0
Router(config-if)# full-duplex
Ctrl-z
```

Use the **show interfaces fastethernet** command to verify that the 4/0 Fast Ethernet interface is now configured for full-duplex operation as follows:

```
Router# show interfaces fastethernet 4/0
FastEthernet 4/0 is administratively up, line protocol is up
(display text omitted)
Encapsulation ARPA, loopback not set, keepalive not set, fdx, 100BaseTX
```

Use the **no full-duplex** command to return the interface to half-duplex operation as follows:

```
Router# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# interface fastethernet 4/0
Router(config-if)# no full-duplex
Ctrl-z
Router#
```

Use the **show interfaces fastethernet** command to verify that the 4/0 Fast Ethernet interface is now configured for half-duplex operation as follows:

```
Router# show interfaces fastethernet 4/0
FastEthernet2/0 is administratively up, line protocol is up
(display text omitted)
Encapsulation ARPA, loopback not set, keepalive not set, hdx, 100BaseTX
(display text omitted)
```

To check the interface configuration using **show** commands, proceed to the [“Checking the Configuration” section on page 4-5](#)



Note

When you enter the **show interfaces fastethernet** command using Cisco IOS Release 11.1(10) or later, or Release 11.2(4) or later with updated Cisco hardware, the “overrun” field is always zero.

If you use this command because you are troubleshooting potential network problems, you may be expecting to see a number in the overrun field.

Configuring PA-FE-TX or PA-FE-FX Media Type

The RJ-45 receptacle is the default media type for the PA-FE-TX and the SC receptacle (for fiber-optic connections) is the default media type for the PA-FE-FX. Use the **media-type mii** command to configure the MII receptacle as the media type for the PA-FE as follows:

```
Router# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# interface fastethernet 4/0
Router(config-if)# media-type mii
Ctrl-z
```

```
Router# show interface fastethernet 4/0
FastEthernet3/0/0 is administratively up, line protocol is up
  (display text omitted)
  Encapsulation ARPA, loopback not set, keepalive not set, hdx, MII
  (display text omitted)
```

Use the **media-type 100** command to return the media type for the PA-FE-TX or PA-FE-FX to the RJ-45 receptacle or SC receptacle.

To check the interface configuration using **show** commands, proceed to the “[Checking the Configuration](#)” section on page 4-5.

Checking the Configuration

After configuring the new interface, use the **show** commands to display the status of the new interface or all interfaces, and use the **ping** command to check connectivity. This section includes the following subsections:

- [Using show Commands to Verify the Interface Status, page 4-5](#)
- [Using the ping Command to Verify Network Connectivity, page 4-22](#)

Using show Commands to Verify the Interface Status

This section demonstrates how you can use the **show** commands to verify that interfaces are configured and operating correctly and that the port adapter appears in them correctly. Sample displays of the output of selected **show** commands appear in the sections that follow. For complete command descriptions and examples, refer to the publications listed in the “[Related Documentation](#)” section on page viii.

If an interface is shut down and you configured it as up, or if the displays indicate that the hardware is not functioning properly, ensure that the interface is properly connected and terminated. If you still have problems bringing up the interface, contact a service representative for assistance. This section includes the following subsections:

- [Using the show controllers Commands, page 4-6](#)
- [Using the show protocols Command, page 4-6](#)
- [Using the show running-config Command, page 4-6](#)
- [Using the show startup-config Command, page 4-7](#)
- [Using the show version or show hardware Commands, page 4-8](#)
- [Using the show diag Command, page 4-13](#)
- [Using the show interfaces Command, page 4-17](#)

Choose the subsection appropriate for your system. Proceed to the “[Using the ping Command to Verify Network Connectivity](#)” section on page 4-22 when you have finished using the **show** commands.

Using the show controllers Commands

Display all the current interface processors and their interfaces using the **show controllers** command.



Note

The outputs that appear in this document may not match the output you receive when running these commands. The outputs in this document are examples only.

The following is an example of the **show controllers** command:

```
Router# show controllers

MEMD at 40000000, 2097152 bytes (unused 3360, recarves 1, lost 0)
RawQ 48000100, ReturnQ 48000108, EventQ 48000110
BufhdrQ 48000128 (2900 items), LovltrQ 48000140 (5 items, 2016 bytes)
IpcbufQ 48000150 (16 items, 4096 bytes)
IpcbufQ_classic 48000148 (8 items, 4096 bytes)
3570 buffer headers (48002000 - 4800FF10)
pool0: 9 buffers, 256 bytes, queue 48000130
pool1: 344 buffers, 1536 bytes, queue 48000138
pool2: 284 buffers, 4544 bytes, queue 48000158
pool3: 4 buffers, 4576 bytes, queue 48000160
slot2: VIP2, hw 2.4, sw 22.20, ccb 5800FF40, cmdq 48000090
software loaded from flash slot0:vip2_22-20.atmdx.191897
IOS (tm) VIP Software (SVIP-DW-M), Experimental Version 11.3
ROM Monitor version 17.0
ATM2/0/0, applique is DS3 (45Mbps)
gfreeq 48000158, lfreeq 48000168 (4544 bytes), throttled 0
rxlo 4, rxhi 284, rxcurr 1, maxrxcurr 5
txq 48001A00, txacc 48001A02 (value 284), txlimit 284
```

Using the show protocols Command

Display protocols configured for the entire system and for specific interfaces using the **show protocols** command.



Note

The outputs that appear in this document may not match the output you receive when running these commands. The outputs in this document are examples only.

The following is an example of the **show protocols** command:

```
Router# show protocols
line protocol is up
Router#
```

Using the show running-config Command

Display the running configuration file using the **show running-config** command.



Note

The outputs that appear in this document may not match the output you receive when running these commands. The outputs in this document are examples only.

The following is an example of the **show running-config** command:

```
Router# show running-config

Building configuration...
Current configuration:
!
!
!
user add admin uid 0 capability admin-access
!
!
!
hostname CR4430
!
interface ethernet 0
 ip address 10.2.2.8 255.255.255.0
 ip broadcast-address 10.2.2.255
 exit
!
interface ethernet 1
 exit
!
ip default-gateway 10.2.2.1
ip name-server 10.2.2.6
ip route 0.0.0.0 0.0.0.0 10.2.2.1
```

Using the show startup-config Command

Display the configuration stored in the NVRAM using the **show startup-config** command.



Note

The outputs that appear in this document may not match the output you receive when running these commands. The outputs in this document are examples only.

The following is an example of the **show startup-config** command:

```
Router# show startup-config

Building configuration...

Current configuration:
!
version 12.0
service timestamps debug uptime
service timestamps log uptime
no service password-encryption
!
hostname rp-3640-2b
!
ip subnet-zero
!
ip audit notify log
ip audit po max-events 100
!
crypto isakmp policy 1
 hash md5
 authentication pre-share
 crypto isakmp key cisco123 address 95.95.95.2
!
crypto ipsec transform-set rtpset esp-des esp-md5-hmac
!
crypto map rtp 1 ipsec-isakmp
```

```

set peer 95.95.95.2
set transform-set rtpset
match address 115
!
interface Ethernet0/0
ip address 98.98.98.1 255.255.255.0
no ip directed-broadcast
!
interface Ethernet0/1
ip address 99.99.99.2 255.255.255.0
no ip directed-broadcast
no ip route-cache
no ip mroute-cache
crypto map rtp
!
interface Ethernet0/2
no ip address
no ip directed-broadcast
shutdown
!
interface Ethernet0/3
no ip address
no ip directed-broadcast
shutdown
!
ip classless
ip route 0.0.0.0 0.0.0.0 99.99.99.1
no ip http server
!
access-list 115 permit ip 98.98.98.0 0.0.0.255 10.103.1.0 0.0.0.255
access-list 115 deny ip 98.98.98.0 0.0.0.255 any
!
line con 0
transport input none
line aux 0
line vty 0 4
login
!
end

```

Using the show version or show hardware Commands

Display the configuration of the system hardware, the number of each interface type installed, the Cisco IOS software version, the names and sources of configuration files, and the boot images, using the **show version** (or **show hardware**) command.



Note

The outputs that appear in this document may not match the output you receive when running these commands. The outputs in this document are examples only.

The following sections offer some platform-specific output examples using the **show version** command:

- [Catalyst 5000 Family Switches with RSM/VIP2—Example Output of the show version Command, page 4-9](#)
- [Cisco 7000 Series Routers—Example Output of the show version Command, page 4-9](#)
- [Cisco 7100 Series Routers—Example Output of the show version Command, page 4-10](#)
- [Cisco 7200 Series Routers, Cisco 7200 VXR Routers, and Cisco uBR7200 Series Routers—Example Output of the show version Command, page 4-10](#)
- [Cisco 7301 Routers—Example Output of the show version Command, page 4-11](#)
- [Cisco 7401ASR Routers—Example Output of the show version Command, page 4-11](#)
- [Cisco 7500 Series Routers with VIP—Example Output of the show version Command, page 4-12](#)

Catalyst 5000 Family Switches with RSM/VIP2—Example Output of the show version Command

Following is an example of the **show version** command from a Catalyst 5000 family switch:

```
Router# show version

Cisco Internetwork Operating System Software
IOS (tm) GS Software (RSP-A), Version 11.1(6)CA
Copyright (c) 1986-1995 by cisco Systems, Inc.
Compiled Fri 06-Oct-95 12:22 by mpo
Image text-base: 0x600088A0, data-base: 0x605A4000
ROM: System Bootstrap, Version 5.3(16645) RELEASED SOFTWARE
ROM: GS Bootstrap Software (RSP-BOOT-M), Version 11.1(6)CA, RELEASED SOFTWARE
honda uptime is 4 hours, 22 minutes
System restarted by reload
System image file is "slot0:rsp-a111-1", booted via slot0

cisco RSP2 (R4600) processor with 32768K bytes of memory.
R4600 processor, Implementation 32, Revision 2.0
Last reset from power-on
G.703/E1 software, Version 1.0.
Bridging software.
X.25 software, Version 2.0, NET2, BFE and GOSIP compliant.
Chassis Interface.
1 VIP2 controllers (1 FastEthernet).
1 FastEthernet/IEEE 802.3 interfaces.
125K bytes of non-volatile configuration memory.

20480K bytes of Flash PCMCIA card at slot 0 (Sector size 128K).
8192K bytes of Flash internal SIMM (Sector size 256K).
No slave installed in slot 6.
Configuration register is 0x2
```

Cisco 7000 Series Routers—Example Output of the show version Command

Following is an example of the **show version** command from a Cisco 7000 series router:

```
Router# show version

Cisco Internetwork Operating System Software
IOS (tm) C2600 Software (C2600-IS-M), Version 12.0(7)T, RELEASE SOFTWARE (fc2)
Copyright (c) 1986-1999 by cisco Systems, Inc.
Compiled Tue 07-Dec-99 02:21 by phanguye
Image text-base: 0x80008088, data-base: 0x80C524F8

ROM: System Bootstrap, Version 11.3(2)XA4, RELEASE SOFTWARE (fc1)
```

```

Router uptime is 3 minutes
System returned to ROM by abort at PC 0x802D0B60
System image file is "flash:c2600-is-mz.120-7.T"
cisco 2611 (MPC860) processor (revision 0x202) with 26624K/6144K bytes of memory.
Processor board ID JAB031202NK (3878188963)
M860 processor: part number 0, mask 49
Bridging software.
X.25 software, Version 3.0.0.
Basic Rate ISDN software, Version 1.1.
2 Ethernet/IEEE 802.3 interface(s)
2 Serial(sync/async) network interface(s)
1 ISDN Basic Rate interface(s)
32K bytes of non-volatile configuration memory.
8192K bytes of processor board System flash partition 1 (Read/Write)
8192K bytes of processor board System flash partition 2 (Read/Write)

```

Cisco 7100 Series Routers—Example Output of the show version Command

Following is an example of the **show version** command from a Cisco 7120 series router:

```

Router# show version
Cisco Internetwork Operating System Software
IOS (tm) EGR Software (c7100-IS-M), Version 12.0(4)XE, EARLY DEPLOYMENT
RELEASE)
TAC:Home:SW:IOS:Specials for info
Copyright (c) 1986-1999 by cisco Systems, Inc.
Compiled Thu 10-Jun-99 15:32 by linda
Image text-base:0x60008900, data-base:0x60D8E000

ROM:System Bootstrap, Version 12.0(19990720:023243)
[gautham-conn_4xe-PRE_ALPHE
BOOTFLASH:EGR Software (c7100-IS-M), Version 12.0(4)XE, EARLY DEPLOYMENT
RELEA)

Router uptime is 24 minutes
System restarted by power-on
System image file is "disk0:c7100-is-mz.120-4.XE"

cisco 7120-bad (EGR) processor with 61440K/69632K bytes of memory.
R527x CPU at 225Mhz, Implementation 40, Rev 10.0, 2048KB L2 Cache
Last reset from power-on
Bridging software.
X.25 software, Version 3.0.0.
2 FastEthernet/IEEE 802.3 interface(s)
125K bytes of non-volatile configuration memory.

40960K bytes of ATA PCMCIA card at slot 0 (Sector size 512 bytes).
8192K bytes of Flash internal SIMM (Sector size 256K).
Configuration register is 0x2000

```

Cisco 7200 Series Routers, Cisco 7200 VXR Routers, and Cisco uBR7200 Series Routers—Example Output of the show version Command

Following is an example of the **show version** command from a Cisco 7200 series router:

```

Router# show version
Cisco Internetwork Operating System Software
IOS (tm) 7200 Software (C7200-J-M), Version 11.1(7)CA [biff 105]
Copyright (c) 1986-1996 by cisco Systems, Inc.
Compiled Sun 04-Aug-96 06:00 by biff
Image text-base: 0x600088A0, data-base: 0x605A4000

```

```

ROM: System Bootstrap, Version 11.1(7)CA RELEASED SOFTWARE

Router uptime is 4 hours, 22 minutes
System restarted by reload
System image file is "c7200-j-mz", booted via slot0

cisco 7206 (NPE150) processor with 12288K/4096K bytes of memory.
R4700 processor, Implementation 33, Revision 1.0 (Level 2 Cache)
Last reset from power-on
Bridging software.
SuperLAT software (copyright 1990 by Meridian Technology Corp).
X.25 software, Version 2.0, NET2, BFE and GOSIP compliant.
TN3270 Emulation software (copyright 1994 by TGV INC).
Chassis Interface.
4 Ethernet/IEEE 802.3 interfaces.
2 FastEthernet/IEEE 802.3 interfaces.
4 Token Ring /IEEE802.5 interfaces.
12 Serial network interfaces.
1 Compression module.
125K bytes of non-volatile configuration memory.
1024K bytes of packet SRAM memory.

```

Cisco 7301 Routers—Example Output of the show version Command

Following is an example of the **show version** command from a Cisco 7301 router:

```

Router# show version
Cisco Internetwork Operating System Software
IOS (tm) 7301 Software (C7300-JS-M), Experimental Version 12.2(20020904:004736) [biff 107]
Copyright (c) 1986-2002 by cisco Systems, Inc.
Compiled Mon 09-Sep-02 18:02 by biff
Image text-base:0x600088F8, data-base:0x61A94000

ROM: System Bootstrap, Version 12.2(20020730:200705) [biff-TAZ2_QA_RELEASE_16B 101],
DEVELOPMENT SOFTWARE
BOOTLDR:7301 Software (C7301-BOOT-M), Experimental Version 12.2(20020813:014224)
[biff-TAZ2_QA_RELEASE_17B 101]

7301p2b uptime is 0 minutes
System returned to ROM by reload at 00:01:51 UTC Sat Jan 1 2000
System image file is "tftp://10.1.8.11/tazii/images/c7301-js-mz"

cisco 7301 (NPE-G1) processor (revision A) with 491520K/32768K bytes of memory.
Processor board ID 0
BCM1250 CPU at 700Mhz, Implementation 1, Rev 0.2, 512KB L2 Cache
1 slot midplane, Version 2.0

Last reset from power-on
Bridging software.
X.25 software, Version 3.0.0.
SuperLAT software (copyright 1990 by Meridian Technology Corp).
TN3270 Emulation software.
3 Gigabit Ethernet/IEEE 802.3 interface(s)
509K bytes of non-volatile configuration memory.

62976K bytes of ATA PCMCIA card at slot 0 (Sector size 512 bytes).
32768K bytes of Flash internal SIMM (Sector size 256K).
Configuration register is 0x102

```

Cisco 7401ASR Routers—Example Output of the show version Command

Following is an example of the **show version** command from a Cisco 7401ASR router:

```

Router# show version

Cisco Internetwork Operating System Software
IOS (tm) 7401ASR Software (C7401ASR-J-M), Version 11.1(6)CA
Copyright (c) 1986-1996 by cisco Systems, Inc.
Compiled Sun 21-Apr-95 12:22 by
Image text-base: 0x600088A0, data-base: 0x605A4000

ROM: System Bootstrap, Version 11.1(6)CA

Router uptime is 4 hours, 22 minutes
System restarted by reload
System image file is "slot0:c7401ASR-j-mz.960421", booted via slot0

cisco 7401ASR (R4700) processor with 22528K/10240K bytes of memory.
R4700 processor, Implementation 33, Revision 1.0 (Level 2 Cache)
Last reset from power-on
Bridging software.
X.25 software, Version 2.0, NET2, BFE and GOSIP compliant.
Chassis Interface.
4 Ethernet/IEEE 802.3 interfaces.
2 FastEthernet/IEEE 802.3 interfaces.
125K bytes of non-volatile configuration memory.

20480K bytes of Flash PCMCIA card at slot 0 (Sector size 128K).
8192K bytes of Flash internal SIMM (Sector size 256K).
Configuration register is 0x2

```

Cisco 7500 Series Routers with VIP—Example Output of the show version Command

Following is an example of the **show version** command from a Cisco 7500 series router with a VIP2:

```

Router# show version

Cisco Internetwork Operating System Software
IOS (tm) GS Software (RSP-A), Version 11.1(6)CA
Copyright (c) 1986-1995 by cisco Systems, Inc.
Compiled Fri 06-Oct-95 12:22 by mpo
Image text-base: 0x600088A0, data-base: 0x605A4000
ROM: System Bootstrap, Version 5.3(16645) RELEASED SOFTWARE
ROM: GS Bootstrap Software (RSP-BOOT-M), Version 11.1(6)CA, RELEASED SOFTWARE
honda uptime is 4 hours, 22 minutes
System restarted by reload
System image file is "slot0:rsp-a111-1", booted via slot0

cisco RSP2 (R4600) processor with 32768K bytes of memory.
R4600 processor, Implementation 32, Revision 2.0
Last reset from power-on
G.703/E1 software, Version 1.0.
Bridging software.
X.25 software, Version 2.0, NET2, BFE and GOSIP compliant.
Chassis Interface.
1 VIP2 controllers (1 FastEthernet).
1 FastEthernet/IEEE 802.3 interfaces.
125K bytes of non-volatile configuration memory.

20480K bytes of Flash PCMCIA card at slot 0 (Sector size 128K).
8192K bytes of Flash internal SIMM (Sector size 256K).
No slave installed in slot 6.
Configuration register is 0x2

```

Using the show diag Command

Display the types of port adapters installed in your system (and specific information about each) using the **show diag slot** command, where *slot* is the port adapter slot.



Note

The outputs that appear in this document may not match the output you receive when running these commands. The outputs in this document are examples only.

The following sections offer some platform-specific output examples using the **show diag** command:

- [Catalyst 5000 Family Switches with RSM/VIP2—Example Output of the show diag Command, page 4-13](#)
- [Cisco 7000 Series Routers—Example Output of the show diag Command, page 4-14](#)
- [Cisco 7100 Series Routers—Example Output of the show diag Command, page 4-14](#)
- [Cisco 7200 Series Routers, Cisco 7200 VXR Routers, and Cisco uBR7200 Series Routers—Example Output of the show diag Command, page 4-15](#)
- [Cisco 7301 Routers—Example Output of the show diag Command, page 4-15](#)
- [Cisco 7401ASR Routers—Example Output of the show diag Command, page 4-16](#)
- [Cisco 7500 Series Routers with VIP—Example Output of the show diag Command, page 4-16](#)

Catalyst 5000 Family Switches with RSM/VIP2—Example Output of the show diag Command

Following is an example of the **show diag** command that shows a port adapter on a Catalyst RSM/VIP2:

```
Router# show diag
Slot 0:
  Physical slot 0, ~physical slot 0xE, logical slot 0, CBus 1
  Microcode Status 0xC
  Master Enable, LED, WCS Loaded
  Board is analyzed
  Pending I/O Status: Console I/O
  EEPROM format version 1
  VIP2 controller, HW rev 2.2, board revision UNKNOWN
  Serial number: 03508056 Part number: 73-1554-02
  Test history: 0x00 RMA number: 43-27-00
  Flags: cisco 7000 board; 7500 compatible

  EEPROM contents (hex):
    0x20: 01 15 02 02 00 35 87 58 49 06 12 02 00 2B 1B 00
    0x30: 12 2B 00 2A 1A 00 00 00 00 00 00 00 00 00 00 00

  Slot database information:
  Flags: 0x4 Insertion time: 0x10DC (00:01:17 ago)
```



Note

The *slot* argument is not required for Catalyst 5000 family switches.

Cisco 7000 Series Routers—Example Output of the show diag Command

Following is an example of the **show diag** command from a Cisco 7000 router that shows two modules installed in slot 0 and slot 1 on a VIP2 in interface processor slot 3:

```
Router# show diag 3

Slot 3:
Physical slot 3, ~physical slot 0x7, logical slot 3, CBus 0
Microcode Status 0x4
Master Enable, LED, WCS Loaded
Board is analyzed
Pending I/O Status: None
EEPROM format version 1
VIP2 controller, HW rev 2.2, board revision UNKNOWN
Serial number: 03341418 Part number: 73-1684-02
Test history: 0x00 RMA number: 00-00-00
Flags: cisco 7000 board; 7500 compatible

EEPROM contents (hex):
 0x20: 01 15 02 02 00 32 FC 6A 49 06 94 02 00 00 00 00
 0x30: 07 2B 00 2A 1A 00 00 00 00 00 00 00 00 00 00 00

Slot database information:
Flags: 0x4 Insertion time: 0x3188 (01:20:53 ago)

Controller Memory Size: 8 MBytes

PA Bay 0 Information:
Token Ring PA, 4 ports
EEPROM format version 1
HW rev 1.1, Board revision 0
Serial number: 02827613 Part number: 73-1390-04

PA Bay 1 Information:
Token Ring PA, 4 ports
EEPROM format version 1
HW rev 1.1, Board revision 88
Serial number: 02023786 Part number: 73-1390-04
```

Cisco 7100 Series Routers—Example Output of the show diag Command

Following is an example of the **show diag slot** command that shows a module in slot 3 of a Cisco 7120 series router:

```
Router# show diag 3
Slot 3:
10/100 Fast-ethernet with RJ45 Integrated module, 2 ports
Integrated module is analyzed
EEPROM contents at hardware discovery:
Hardware revision 255.255 Board revision UNKNOWN
EEPROM format version 1
EEPROM contents (hex):
 0x20:01 D3 FF FF FF FF FF FF FF FF FF FF FF FF FF FF
 0x30:FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF
```



Note

To use the **show diag** command with the Cisco 7140 series router, replace the slot argument **3** with **4**.

Cisco 7200 Series Routers, Cisco 7200 VXR Routers, and Cisco uBR7200 Series Routers—Example Output of the show diag Command

Following is an example of the **show diag slot** command that shows a module in slot 1 of a Cisco 7200 series router:

```
Router# show diag 1
Slot 1:
Mueslix serial (RS232) module, 8 ports
module is analyzed
module insertion time 2d09h ago
Hardware revision 255.255          Board revision UNKNOWN
Serial number 4294967295          Part number 255-65535-255
Test history 0xFF                 RMA number 255-255-255
EEPROM format version 1
EEPROM contents (hex):
0x20: 01 0D FF FF FF FF FF FF FF FF FF FF FF FF FF FF
0x30: FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF
```



Note

Modules used with Cisco 7200 VXR routers require the correct base hardware revision in order to function. The following is an example of the type of error message that occurs on bootup if the incorrect hardware revision is used:

```
> PA-FE-REVNOTSUPPORTED:PA in slot 1 (Ethernet) requires base h/w revision of (1.14) for this chassis
```

Use the **show diag** command to display the hardware revision.

Cisco 7301 Routers—Example Output of the show diag Command



Note

Input/output data for the console port, auxiliary port, Gigabit Ethernet ports, and CompactFlash Disk are listed in the output of the **show c7300** command, rather than in the output of the **show diag** command. Use the **show diag** command for port adapter information.

```
Router# sh diag

Slot 1:
  POS Single Width, Multi Mode Port adapter, 1 port
  Port adapter is analyzed
  Port adapter insertion time 01:38:29 ago
  EEPROM contents at hardware discovery:
  Hardware revision 2.2          Board revision A0
  Serial number 28672741        Part number 73-3192-06
  FRU Part Number:PA-POS-OC3MM=

  Test history 0x0              RMA number 00-00-00
  EEPROM format version 1
  EEPROM contents (hex):
  0x20:01 96 02 02 01 B5 82 E5 49 0C 78 06 00 00 00 00
  0x30:50 00 00 00 02 08 19 00 00 00 FF FF FF FF FF FF
```

Cisco 7401ASR Routers—Example Output of the show diag Command

Following is an example of the **show diag slot** command that shows a port adapter in slot 1 of a Cisco 7401ASR router:

```
Router# show diag 1

Slot 1:
Fast-ethernet port adapter, 1 port
Port adapter is analyzed
Port adapter insertion time 2d09h ago
Hardware revision 255.255 Board revision A0
Serial number 4294967295 Part number 73-1556-04
Test history 0x0 RMA number 00-00-00
EEPROM format version 1
EEPROM contents (hex):
0x20: 01 02 01 01 FF FF FF FF 49 06 14 04 00 00 00 00
0x30: 50 00 00 00 FF FF FF FF FF FF FF FF FF FF FF FF
```

Cisco 7500 Series Routers with VIP—Example Output of the show diag Command

Following is an example of the **show diag slot** command that shows a port adapter in slot 0 on a VIP in interface processor slot 1:

```
Router# show diag 1
Slot 1:
Physical slot 1, ~physical slot 0xE, logical slot 1, CBus 0
Microcode Status 0xC
Master Enable, LED, WCS Loaded
Board is analyzed
Pending I/O Status: Console I/O
EEPROM format version 1
VIP2 controller, HW rev 2.2, board revision UNKNOWN
Serial number: 03508056 Part number: 73-1554-02
Test history: 0x00 RMA number: 43-27-00
Flags: cisco 7000 board; 7500 compatible

EEPROM contents (hex):
0x20: 01 15 02 02 00 35 87 58 49 06 12 02 00 2B 1B 00
0x30: 12 2B 00 2A 1A 00 00 00 00 00 00 00 00 00 00 00

Slot database information:
Flags: 0x4 Insertion time: 0x10DC (00:01:17 ago)

Controller Memory Size: 8 MBytes

PA Bay 0 Information:
Fast-Ethernet PA, 1 ports, 100BaseFX-ISL
EEPROM format version 1
HW rev 1.0, Board revision 43
Serial number: 02826254 Part number: 73-1690-02
```

Using the show interfaces Command

The **show interfaces** command displays status information (including the physical slot and interface address) for the interfaces you specify.

For complete descriptions of interface commands and the configuration options available for specific interfaces, refer to the publications listed in the “[Related Documentation](#)” section on page viii.



Note

The outputs that appear in this document may not match the output you receive when running these commands. The outputs in this document are examples only.

The following sections offer some platform-specific output examples using the **show interfaces** command:

- [Catalyst 5000 Family Switches with RSM/VIP2—Example Output of the show interfaces Command, page 4-17](#)
- [Cisco 7000 Series Routers—Example Output of the show interfaces Command, page 4-18](#)
- [Cisco 7100 Series Routers—Example Output of the show interfaces Command, page 4-18](#)
- [Cisco 7200 Series Routers, Cisco 7200 VXR Routers, and Cisco uBR7200 Series Routers—Example Output of the show interfaces Command, page 4-19](#)
- [Cisco 7301 Routers—Example Output of the show interfaces Command, page 4-20](#)
- [Cisco 7401ASR Routers—Example Output of the show interfaces Command, page 4-21](#)
- [Cisco 7500 Series Routers with VIP—Example Output of the show interfaces Command, page 4-21](#)

Catalyst 5000 Family Switches with RSM/VIP2—Example Output of the show interfaces Command

Using the **show interfaces type 0 or 1/interface-port-number** command displays the status information about a specific type of interface—in these examples, a serial interface—on a Catalyst RSM/VIP2.

In these examples, the eight serial interfaces (0 to 7) are on a port adapter in slot 1 of a Catalyst RSM/VIP2; also, most of the status information for each interface is omitted. (Interfaces are administratively shut down until you enable them.)

```
Router# show interfaces serial 1/0
Serial1/0 is up, line protocol is up
  Hardware is cyBus Serial
  Internet address is 10.0.0.1
    MTU 1500 bytes, BW 1544 Kbit, DLY 20000 usec, rely 255/255, load 1/255
  Encapsulation HDLC, loopback not set, keepalive not set
[Additional display text omitted from this example]
```

```
Router# show interfaces serial 1/1
Serial1/1 is up, line protocol is up
  Hardware is cyBus Serial
  Internet address is 10.0.0.1
    MTU 1500 bytes, BW 1544 Kbit, DLY 20000 usec, rely 255/255, load 1/255
  Encapsulation HDLC, loopback not set, keepalive not set
[Additional display text omitted from this example]
```

```

Router# show interfaces serial 1/2
Serial1/2 is up, line protocol is up
  Hardware is cyBus Serial
  Internet address is 10.0.0.2
  MTU 1500 bytes, BW 1544 Kbit, DLY 20000 usec, rely 255/255, load 1/255
  Encapsulation HDLC, loopback not set, keepalive not set
[Additional display text for remaining interfaces omitted]

```

Cisco 7000 Series Routers—Example Output of the show interfaces Command

Using the **show interfaces** *type interface-processor-slot-number/module-slot-number/interface-port-number* command displays the status information about a specific type of interface—in this example, a FDDI interface—on a Cisco 7000 series router.

Following is an example showing of the **show interfaces** command with a VIP2. In this example, the eight interfaces (0 to 7) are on a module in slot 1 of the VIP2 in interface processor slot 3; also, most of the status information for each interface is omitted. (Interfaces are administratively shut down until you enable them.)

```

Router# show interfaces fddi 3/0/0

Fddi3/0/0 is up, line protocol is up
  Hardware is cxBus FDDI, address is 0000.0c0c.4444 (bia 0060.3e47.4360)
  Internet address is 14.0.0.2/8
  MTU 4470 bytes, BW 100000 Kbit, DLY 100 usec, rely 255/255, load 10/255
  Encapsulation SNAP, loopback not set, keepalive not set
  ARP type: SNAP, ARP Timeout 04:00:00
  Phy-A state is connect, neighbor is Unknown, status QLS
  Phy-B state is active, neighbor is A, status SILS
  ECM is in, CFM is c_wrap_b, RMT is ring_op,
  Requested token rotation 5000 usec, negotiated 0 usec
  Configured tvx is 2500 usec
  LER for PortA = 09, LER for PortB = 0C ring operational 11:36:23
  Upstream neighbor 0000.0c0c.8888, downstream neighbor 0000.0c0c.8888
  Last input 00:02:22, output 00:00:06, output hang never
  Last clearing of "show interface" counters 14:57:58
  Output queue 0/40, 0 drops; input queue 0/75, 0 drops
  5 minute input rate 3922000 bits/sec, 147 packets/sec
  5 minute output rate 3962000 bits/sec, 148 packets/sec
    7523044 packets input, 631964210 bytes, 0 no buffer
    Received 0 broadcasts, 0 runts, 0 giants
    0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored, 0 abort
    7523554 packets output, 625092443 bytes, 0 underruns
    0 output errors, 0 collisions, 0 interface resets
    0 output buffer failures, 0 output buffers swapped out
    0 transitions, 0 traces, 0 claims, 0 beacon

```

Cisco 7100 Series Routers—Example Output of the show interfaces Command

Using the **show interfaces** *type module-slot-number/interface-port-number* command displays status information about a specific type of interface—in these examples, a serial interface—on a Cisco 7100 series router. (Interfaces are administratively shut down until you enable them.)

Following is an example of the **show interfaces** command used with a Cisco 7120 series router and a Cisco 7140 series router. In this example, the eight serial interfaces (0 to 7) are on a module in module slot 3 of a Cisco 7120 series router; also, most of the status information for each interface is omitted.

```

Router# show interfaces serial 3/0
Serial3/0 is up, line protocol is up
  Hardware is M8T-RS232
  Internet address is 10.0.0.0
  MTU 1500 bytes, BW 1544 Kbit, DLY 20000 usec, rely 255/255, load 1/255

```

```

Encapsulation HDLC, loopback not set, keepalive set (10 sec)
[Additional display text omitted from this example]

Router# show interfaces serial 3/1
Serial3/1 is up, line protocol is up
  Hardware is M8T-RS232
  Internet address is 10.0.0.1
  MTU 1500 bytes, BW 1544 Kbit, DLY 20000 usec, rely 255/255, load 1/255
  Encapsulation HDLC, loopback not set, keepalive set (10 sec)
[Additional display text omitted from this example]

Router# show interfaces serial 3/2
Serial3/2 is up, line protocol is up
  Hardware is M8T-RS232
  Internet address is 10.0.0.2
  MTU 1500 bytes, BW 1544 Kbit, DLY 20000 usec, rely 255/255, load 1/255
  Encapsulation HDLC, loopback not set, keepalive set (10 sec)
[Additional display text for remaining interfaces omitted]

```

**Note**

To use the **show interfaces** command with the Cisco 7140 series router, replace the interface address arguments **3/0**, **3/1**, **3/2**, **3/3**, **3/4**, **3/5**, **3/6**, and **3/7** with **4/0**, **4/1**, **4/2**, **4/3**, **4/4**, **4/5**, **4/6**, and **4/7**, respectively.

Cisco 7200 Series Routers, Cisco 7200 VXR Routers, and Cisco uBR7200 Series Routers—Example Output of the show interfaces Command

Using the **show interfaces type module-slot-number/interface-port-number** command displays the status information about a specific type of interface—in these examples, a serial interface.

Following is an example of the **show interfaces** command for Cisco 7200 series and Cisco uBR7200 series routers. In this example, the eight serial interfaces (0 to 7) are on a module in slot 1; also, most of the status information for each interface is omitted. (Interfaces are administratively shut down until you enable them.)

```

Router# show interfaces serial 1/0
Serial1/0 is up, line protocol is up
  Hardware is M8T-RS232
  Internet address is 10.0.0.0
  MTU 1500 bytes, BW 1544 Kbit, DLY 20000 usec, rely 255/255, load 1/255
  Encapsulation HDLC, loopback not set, keepalive set (10 sec)
[Additional display text omitted from this example]

Router# show interfaces serial 1/1
Serial1/1 is up, line protocol is up
  Hardware is M8T-RS232
  Internet address is 10.0.0.1
  MTU 1500 bytes, BW 1544 Kbit, DLY 20000 usec, rely 255/255, load 1/255
  Encapsulation HDLC, loopback not set, keepalive set (10 sec)
[Additional display text omitted from this example]

Router# show interfaces serial 1/2
Serial1/2 is up, line protocol is up
  Hardware is M8T-RS232
  Internet address is 10.0.0.2
  MTU 1500 bytes, BW 1544 Kbit, DLY 20000 usec, rely 255/255, load 1/255
  Encapsulation HDLC, loopback not set, keepalive set (10 sec)
[Additional display text for remaining interfaces omitted]

```

Cisco 7301 Routers—Example Output of the show interfaces Command

Using the **show interfaces** *type slot-number/interface-port-number* command displays status information about a specific type of interface—in this example, GigE interfaces—on a Cisco 7301 router.

Following is an example of the **show interfaces** command for a Cisco 7301 router. In this example, the three GigE interfaces (0 through 2) are on a module in slot 1.

```
outer# show interfaces
GigabitEthernet0/0 is up, line protocol is up
  Hardware is BCM1250 Internal MAC, address is 0005.dd2c.7c1b (bia 0005.dd2c.7c1b)
  Internet address is 10.1.3.153/16
  MTU 1500 bytes, BW 100000 Kbit, DLY 100 usec,
    reliability 255/255, txload 1/255, rxload 1/255
  Encapsulation ARPA, loopback not set
  Keepalive set (10 sec)
  Half-duplex, 100Mb/s, media type is RJ45
  output flow-control is off, input flow-control is off
  ARP type:ARPA, ARP Timeout 04:00:00
  Last input 00:00:01, output 00:00:07, output hang never
  Last clearing of "show interface" counters 19:00:50
  Input queue:0/75/63658/0 (size/max/drops/flushes); Total output drops:0
```

(display text omitted)

```
GigabitEthernet0/1 is up, line protocol is up
  Hardware is BCM1250 Internal MAC, address is 0005.dd2c.7c1a (bia 0005.dd2c.7c1a)
  Internet address is 192.18.1.1/24
  MTU 1500 bytes, BW 1000000 Kbit, DLY 10 usec,
    reliability 255/255, txload 5/255, rxload 6/255
  Encapsulation ARPA, loopback not set
  Keepalive set (10 sec)
  Full-duplex, 1000Mb/s, link type is autonegotiation, media type is SX
  output flow-control is off, input flow-control is off
  ARP type:ARPA, ARP Timeout 04:00:00
  Last input 18:56:46, output 00:00:09, output hang never
  Last clearing of "show interface" counters 19:00:52
  Input queue:0/75/16176489/0 (size/max/drops/flushes); Total output drops:0
```

(display text omitted)

```
GigabitEthernet0/2 is up, line protocol is up
  Hardware is BCM1250 Internal MAC, address is 0005.dd2c.7c19 (bia 0005.dd2c.7c19)
  Internet address is 1.1.1.1/24
  MTU 1500 bytes, BW 1000000 Kbit, DLY 10 usec,
    reliability 255/255, txload 1/255, rxload 5/255
  Encapsulation ARPA, loopback not set
  Keepalive set (10 sec)
  Full-duplex, 1000Mb/s, link type is autonegotiation, media type is SX
  output flow-control is off, input flow-control is off
  ARP type:ARPA, ARP Timeout 04:00:00
  Last input 00:04:42, output 00:00:01, output hang never
  Last clearing of "show interface" counters 19:00:54
  Input queue:0/75/22087/0 (size/max/drops/flushes); Total output drops:0
```

(display text omitted)

Cisco 7401ASR Routers—Example Output of the show interfaces Command

Using the **show interfaces** *type slot-number/interface-port-number* command displays status information about a specific type of interface—in this example, ATM interfaces—on a Cisco 7401ASR router.

Following is an example of the **show interfaces** command for a Cisco 7401ASR router. In this example, the eight ATM interfaces (0 through 7) are on a module in slot 1.

```
Router# show interfaces atm 1/1
ATM1/1 is up, line protocol is down
Hardware is IMA PA
  Internet address is 192.168.0.0/24
  MTU 4470 bytes, BW 1536 Kbit, DLY 20000 usec,
  reliability 255/255, txload 1/255, rxload 1/255
  Encapsulation UNKNOWN, loopback not set
  Keepalive set (10 sec)
  Encapsulation(s):AAL5
  512 maximum active VCs, 0 current VCCs
  VC idle disconnect time:300 seconds
  2 carrier transitions
  Last input never, output never, output hang never
  Last clearing of "show interface" counters never
  Input queue:0/75/0 (size/max/drops); Total output drops:0
  Queueing strategy:weighted fair
  Output queue:0/1000/64/0 (size/max total/threshold/drops)
  Conversations 0/0/256 (active/max active/max total)
  Reserved Conversations 0/0 (allocated/max allocated)
  5 minute input rate 0 bits/sec, 0 packets/sec
  5 minute output rate 0 bits/sec, 0 packets/sec
  0 packets input, 0 bytes, 0 no buffer
  Received 0 broadcasts, 0 runts, 0 giants, 0 throttles
  0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored, 0 abort
  0 packets output, 0 bytes, 0 underruns
  0 output errors, 0 collisions, 0 interface resets
  0 output buffer failures, 0 output buffers swapped out
```

Cisco 7500 Series Routers with VIP—Example Output of the show interfaces Command

Using the **show interfaces** *type interface-processor-slot-number/module-slot-number/interface-port-number* command displays the status information about a specific type of interface—in this example, serial interfaces—on a Cisco 7500 series router.

Following is an example of the **show interfaces** command used with a VIP2. In this example, the eight serial interfaces (0 to 7) are on a module in slot 1 of a VIP2 in interface processor slot 3; also, most of the status information for each interface is omitted. (Interfaces are administratively shut down until you enable them.)

```
Router# show interfaces serial 3/1/0
Serial3/1/0 is up, line protocol is up
  Hardware is cyBus Serial
  Internet address is 10.0.0.0
  MTU 1500 bytes, BW 1544 Kbit, DLY 20000 usec, rely 255/255, load 1/255
  Encapsulation HDLC, loopback not set, keepalive not set
  [Additional display text omitted from this example]
```

```

Router# show interfaces serial 3/1/1
Serial3/1/1 is up, line protocol is up
  Hardware is cyBus Serial
  Internet address is 10.0.0.1
  MTU 1500 bytes, BW 1544 Kbit, DLY 20000 usec, rely 255/255, load 1/255
  Encapsulation HDLC, loopback not set, keepalive not set
[Additional display text omitted from this example]

Router# show interfaces serial 3/1/2
Serial3/1/2 is up, line protocol is up
  Hardware is cyBus Serial
  Internet address is 10.0.0.2
  MTU 1500 bytes, BW 1544 Kbit, DLY 20000 usec, rely 255/255, load 1/255
  Encapsulation HDLC, loopback not set, keepalive not set
[Additional display text for remaining interfaces omitted]

```

Using the ping Command to Verify Network Connectivity

Using the **ping** command, you can verify that an interface port is functioning properly. This section provides a brief description of this command. Refer to the publications listed in the [“Related Documentation” section on page viii](#) for detailed command descriptions and examples.

The **ping** command sends echo request packets out to a remote device at an IP address that you specify. After sending an echo request, the system waits a specified time for the remote device to reply. Each echo reply is displayed as an exclamation point (!) on the console terminal; each request that is not returned before the specified timeout is displayed as a period (.). A series of exclamation points (!!!!!) indicates a good connection; a series of periods (.....) or the messages [timed out] or [failed] indicate a bad connection.

Following is an example of a successful **ping** command to a remote server with the address 10.0.0.10:

```

Router# ping 10.0.0.10 <Return>
Type escape sequence to abort.
Sending 5, 100-byte ICMP Echoes to 10.0.0.10, timeout is 2 seconds:
!!!!
Success rate is 100 percent (5/5), round-trip min/avg/max = 1/15/64 ms
Router#

```

If the connection fails, verify that you have the correct IP address for the destination and that the device is active (powered on), and repeat the **ping** command.