



Cisco Secure Endpoint PC4000 Hardware Installation Guide

First Published: 2023-08-28

Last Modified: 2023-11-03

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

All printed copies and duplicate soft copies of this document are considered uncontrolled. See the current online version for the latest version.

Cisco has more than 200 offices worldwide. Addresses and phone numbers are listed on the Cisco website at www.cisco.com/go/offices.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/c/en/us/about/legal/trademarks.html>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2023 Cisco Systems, Inc. All rights reserved.



CONTENTS

CHAPTER 1

Overview 1

- Features 1
- Package Contents 3
- Serial Number Location 3
- Front Panel 5
- Front Panel LEDs 6
- Rear Panel 8
- Rear Panel LEDs 9
- Power Supply 10
- Hardware Specifications 11
- Product ID Numbers 12
- Power Cord Specifications 12

CHAPTER 2

Installation Preparation 21

- Installation Warnings 21
- Safety Recommendations 23
- Maintain Safety with Electricity 24
- Prevent ESD Damage 25
- Site Environment 25
- Site Considerations 25
- Power Supply Considerations 25
- Rack Configuration Considerations 26

CHAPTER 3

Mount the Chassis 27

- Unpack and Inspect the Chassis 27
- Rack-Mount the Chassis 27

Connect Cables, Turn on Power, and Verify Connectivity 31

CHAPTER 4

Maintenance and Upgrade 35

Power Button Shut Down 35

Remove and Replace a Drive 36

Remove and Replace a Power Supply 38



CHAPTER 1

Overview

- [Features, on page 1](#)
- [Package Contents, on page 3](#)
- [Serial Number Location, on page 3](#)
- [Front Panel, on page 5](#)
- [Front Panel LEDs, on page 6](#)
- [Rear Panel, on page 8](#)
- [Rear Panel LEDs, on page 9](#)
- [Power Supply, on page 10](#)
- [Hardware Specifications, on page 11](#)
- [Product ID Numbers, on page 12](#)
- [Power Cord Specifications, on page 12](#)

Features

The Cisco Secure Endpoint PC4000 appliance supports Secure Endpoint Private Cloud version 4.0 and later.

The following table lists the features of the Cisco Secure Endpoint PC4000. See [Product ID Numbers, on page 12](#) for a list of the spare product IDs (PIDs) associated with the Secure Endpoint PC4000. You can remove and replace drives and power supplies. For all other internal component failures, you must send your chassis for return merchandise authorization (RMA). Use the Cisco Returns Portal for RMA: <https://www.cisco.com/c/en/us/support/returns/returns-portal.html>.

Table 1: Secure Endpoint PC4000


| Feature | Description |
|--------------------|--|
| Form factor | 2 RU |
| Rack mount | Yes Standard 19-in. (48.3 cm) 4-post EIA rack |
| Airflow | Front to rear Cold aisle to hot aisle |
| Pullout asset card | Displays the serial number. |

| Feature | Description |
|---------------------|---|
| Grounding hole | Yes Two threaded holes for dual-hole grounding lug. Use is optional. The supported AC power supplies have internal grounding, so no additional chassis grounding is required. |
| Locator beacon | Yes |
| Power switch | Yes |
| Processor | Two Intel Xeon Gold 6330 processors |
| Memory | 2 TB RAM |
| RDIMMs | Thirty-two 64-GB DDR4-3200-MHz RDIMMs |
| Management ports | Two built-in dual 1/10-GB ports |
| USB ports | 2 Version 3.0 Type A |
| VGA port | One 3-row 15-pin DE-15 connector Enabled by default. |
| SFP ports | 4 fixed SFP+ ports Supported SFP cables SFP-10G-SR |
| Serial console port | One 1-GB RJ45 serial port running RS-232 (RS-232D TIA-561) |
| System power | Two 1050-W AC power supplies (hot-swappable and redundant as 1+1) |
| Power consumption | 3196 BTU/hr |
| Fans | 6 fans for front-to-rear cooling |
| Storage | Fourteen UCS-SD960G63X-EP (960 GB SSD RAID 6) Ten UCS-SD76T61X-EV (7.6 TB SSD RAID 6) Two UCS-SD38T61X-EV (3.8 TB SSD RAID 1) Hot-swappable |
| RAID controller | 1 |

Package Contents

The following figure shows the package contents for the Secure Endpoint PC4000. Note that the contents are subject to change and your exact contents might contain additional or fewer items.

Figure 1: Package Contents

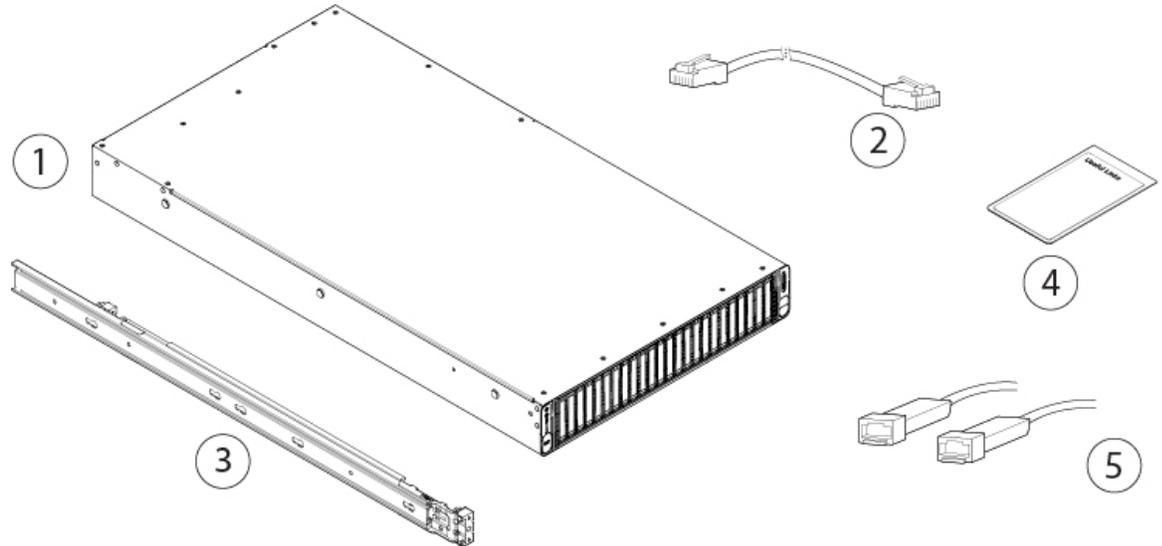


| | | | |
|---|---|---|---|
| 1 | Chassis | 2 | RJ-45 to RJ-45 Cat 5 Ethernet cable, yellow six feet long (Cisco part number 72-1482-XX) |
| 3 | Cisco rail kit (Cisco part number 800-43376-02) | 4 | Cisco Secure Endpoint Private Cloud Virtual Appliance PC4000 This document has a URL and QR code that point to the Digital Documentation Portal. The portal contains links to the Product Information page, the Hardware Installation Guide, the Regulatory and Safety Information Guide, and the Quick start Guide. |
| 5 | SFP+ cables (Optional; in package if ordered.) | | — |

Serial Number Location

The serial number (SN) for the Secure Endpoint PC4000 is printed on the pullout asset card located on the front panel as shown in the following figure.

Figure 2: Serial Number on Pullout Asset Card

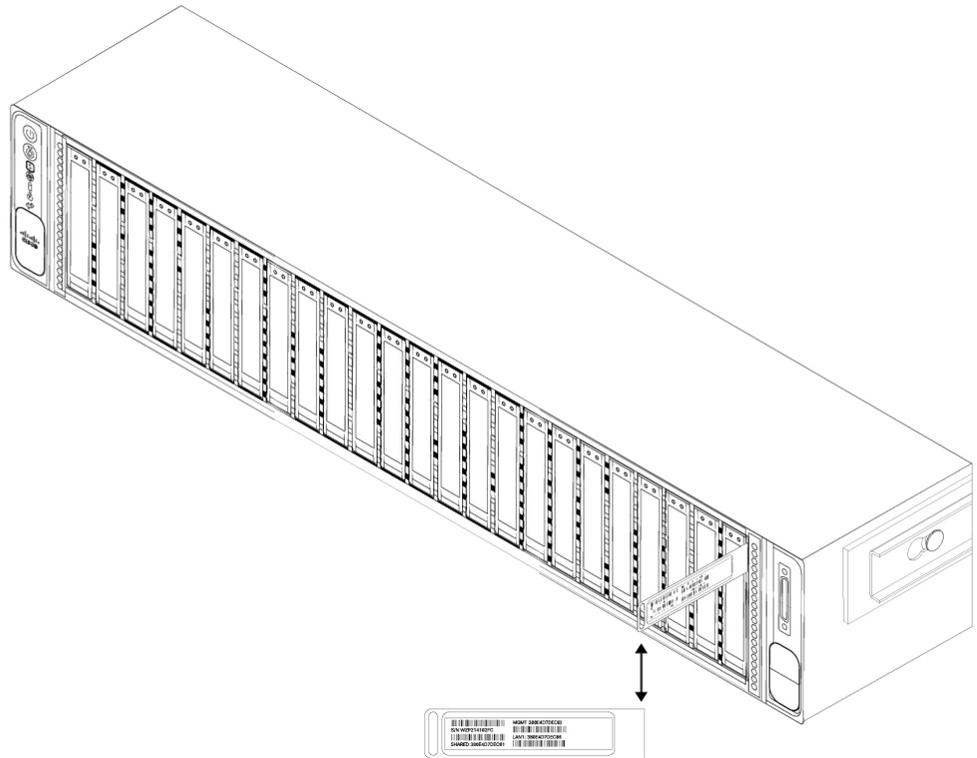


The serial number is also on the label on the cover of the chassis as shown in the following figure.



Caution The cover latch on the top of the chassis cover is not supported. There are no internal field-replaceable parts in the Secure Endpoint PC4000.

Figure 3: Serial Number Location on Cover

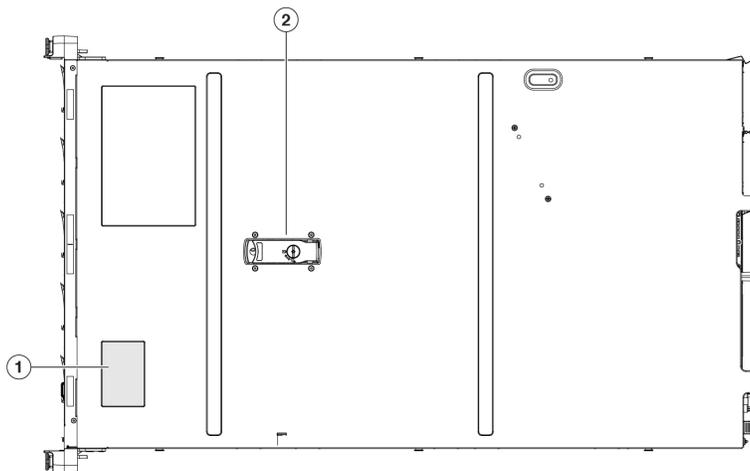


| | |
|---|---------------------|
| 1 | Serial number label |
|---|---------------------|

Front Panel

The following figure shows the front panel features and disk-drive configuration for the Secure Endpoint PC4000. See [Front Panel LEDs](#), on page 6 for a description of the LEDs.

Figure 4: Secure Endpoint PC4000 Front Panel

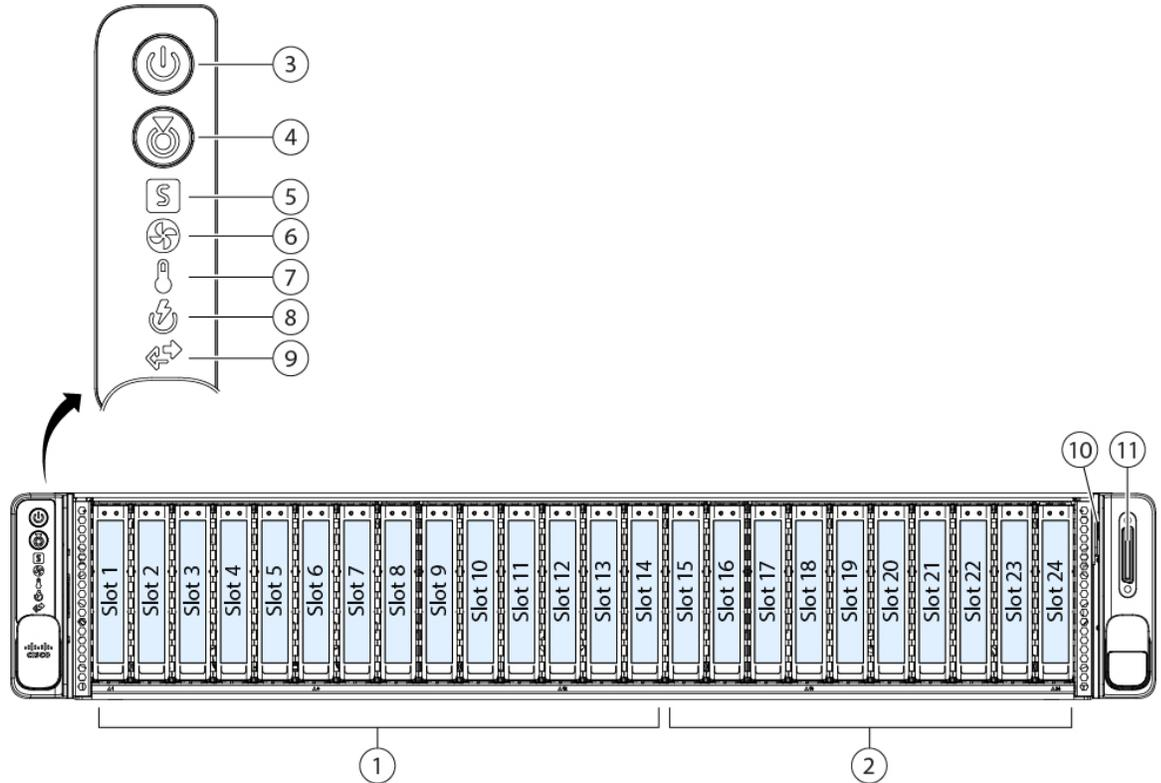


| | | | |
|-----------|--|-----------|---|
| 1 | Drive bays 1-14 are populated with SSDs for the /data volume. | 2 | Drive bays 15-24 populated with 7.6TB SSDs for the backup volume. |
| 3 | Power button/power status LED | 4 | Unit identification button/LED |
| 5 | System status LED | 6 | Fan status LED |
| 7 | Temperature status LED | 8 | Power supply status LED |
| 9 | Network link activity LED | 10 | Pullout asset card |
| 11 | KVM connector Used with KVM cable that provides one DB-15 VGA, one DB-9 serial, and two USB connectors. | — | — |

Front Panel LEDs

The following figure shows the front panel LEDs and describes their states.

Figure 5: Front Panel LEDs and Their States

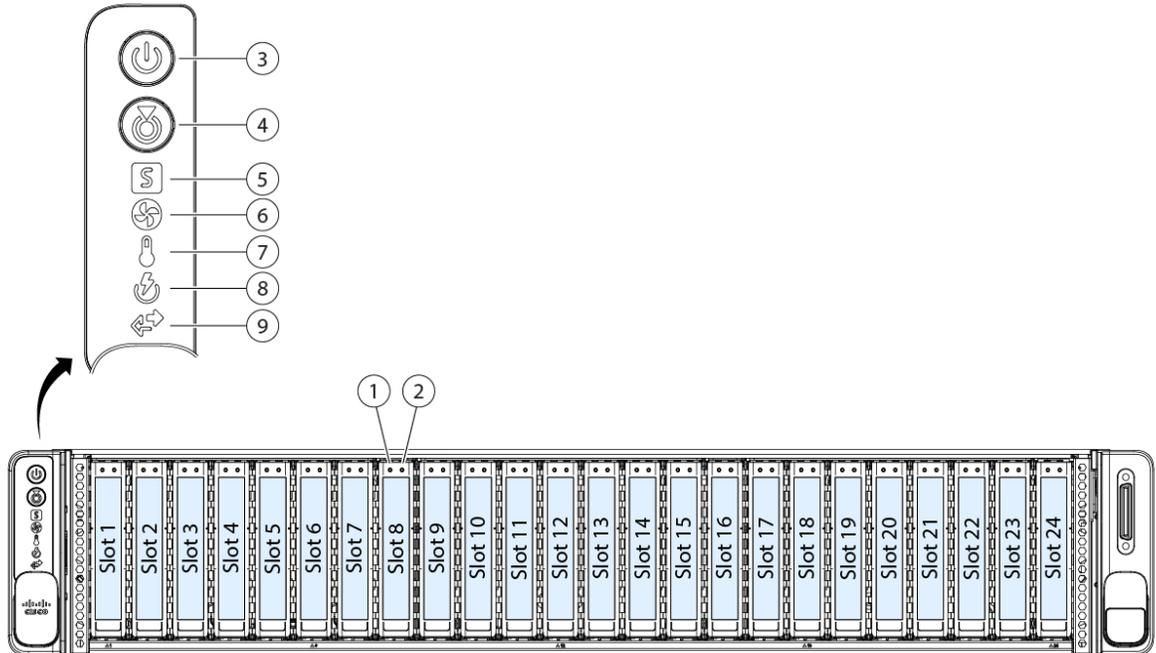

| | | | |
|-----------------|--|-----------------|---|
| <p>1</p> | <p>SAS/SATA drive fault</p> <ul style="list-style-type: none"> • Off—The drive is operating properly. • Amber—Drive fault detected. • Amber, flashing—The drive is rebuilding. • Amber, flashing with one-second interval—Drive locate function activated in the software. | <p>2</p> | <p>SAS/SATA drive activity LED</p> <ul style="list-style-type: none"> • Off—There is no drive in the drive tray (no access, no fault). • Green—The drive is ready. • Green, flashing—The drive is reading or writing data. |
| <p>3</p> | <p>Power button/LED</p> <ul style="list-style-type: none"> • Off—There is no AC power to the appliance. • Amber—The appliance is in standby mode. • Green—The appliance is in main power mode. Power is supplied to all appliance components. | <p>4</p> | <p>Unit identification</p> <ul style="list-style-type: none"> • Off—The unit identification function is not in use. • Blue, flashing—The unit identification function is activated. |


| | | | |
|---|--|---|---|
| 5 | <p>System health</p> <ul style="list-style-type: none"> • Green—The appliance is running in normal operating condition. • Green, flashing—The appliance is performing system initialization and memory check. • Amber—The appliance is in a degraded operational state (minor fault). For example: <ul style="list-style-type: none"> • Power supply redundancy is lost. • CPUs are mismatched. • At least one CPU is faulty. • At least one DIMM is faulty. • At least one drive in a RAID configuration failed. • Amber, 2 flashes—There is a major fault with the system board. • Amber, 3 flashes—There is a major fault with the memory DIMMs. • Amber, 4 flashes—There is a major fault with the CPUs. | 6 | <p>Power supply status</p> <ul style="list-style-type: none"> • Green—All power supplies are operating normally. • Amber—One or more power supplies are in a degraded operational state. • Amber, flashing—One or more power supplies are in a critical fault state. |
| 7 | <p>Fan status</p> <ul style="list-style-type: none"> • Green—All fan modules are operating properly. • Amber, flashing—One or more fan modules breached the unrecoverable threshold. | 8 | <p>Network link activity</p> <ul style="list-style-type: none"> • Off—The Ethernet Lights Out Management (LOM) port link is idle. • Green—One or more Ethernet LOM ports are link-active, but there is no activity. • Green, flashing—One or more Ethernet LOM ports are link-active, with activity. |

| | | | |
|----------|--|--|--|
| 9 | <p>Temperature status</p> <ul style="list-style-type: none"> • Green—The appliance is operating at normal temperature. • Amber—One or more temperature sensors breached the critical threshold. • Amber, flashing—One or more temperature sensors breached the unrecoverable threshold. | | |
|----------|--|--|--|

Rear Panel

The following figure shows the rear panel of the Secure Endpoint PC4000.

Figure 6: Rear Panel

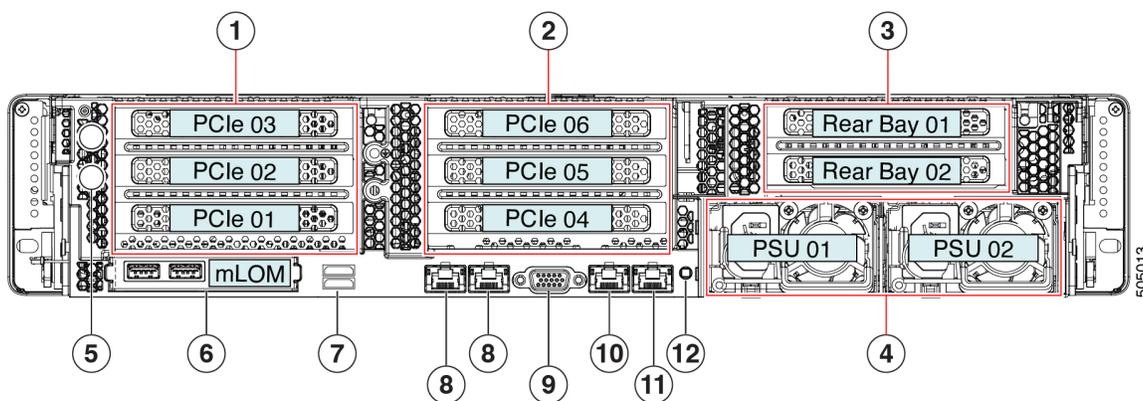


| | | | |
|----------|---|-----------|--|
| 1 | <p>PCIe riser 1 (PCIe slot 1, 2, 3) PCIe slot 3 is used for the SFP+ ports. PCIe slots 1 and 2 are not supported.</p> | 2 | <p>PCIe riser 2 (PCIe slots 4, 5, 6) PCIe riser 2 is not supported.</p> |
| 3 | <p>2.5-inch HDD bays populated by 3.8 TB SSDs for the recovery partition</p> | 4 | <p>Power supplies (two, redundant as 1+1)</p> |
| 5 | <p>Threaded holes for dual-hole grounding lug</p> | 6 | <p>Modular LAN-on-motherboard (mLOM) card slot (x16)</p> |
| 7 | <p>2 USB 3.0 Type A ports</p> | 8 | <p>Dual 1-Gb/10-Gb Ethernet ports (LAN1 and LAN2) The dual LAN ports can support 1 Gbps and 10 Gbps depending on the link partner capability.</p> |
| 9 | <p>VGA video port (DB-15 connector)</p> | 10 | <p>1-Gb Ethernet dedicated Cisco Integrated Management Controller (CIMC) port</p> |

| | | | |
|-----------|-------------------------------|-----------|-------------------------------------|
| 11 | Serial port (RJ-45 connector) | 12 | Rear unit identification button/LED |
|-----------|-------------------------------|-----------|-------------------------------------|

Rear Panel LEDs

The following figure shows the rear panel LEDs and describes their states.

Figure 7: Rear Panel LEDs and Their States

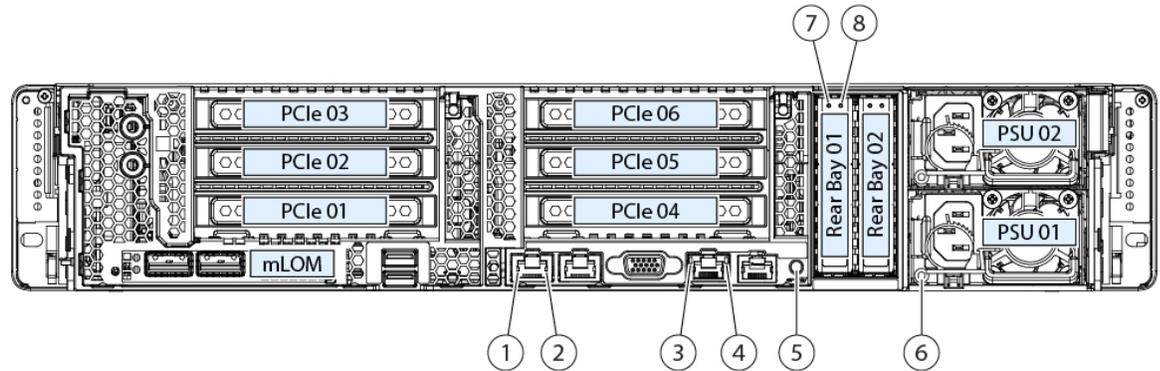

| | | | |
|----------|--|----------|---|
| 1 | 1-Gb/10-Gb Ethernet link speed (on both LAN1 and LAN2) <ul style="list-style-type: none"> • Amber—Link speed is 100 Mbps • Amber—Link speed is 1 Gbps • Green—Link speed is 10 Gbps | 2 | 1-Gb/10-Gb Ethernet link status (on both LAN1 and LAN2) <ul style="list-style-type: none"> • Off—No link is present • Green—Link is active • Green, flashing—Traffic is present on the active link |
| 3 | 1-Gb Ethernet dedicated management link speed <ul style="list-style-type: none"> • Off—Link speed is 10 Mbps • Amber—Link speed is 100 Mbps • Green—Link speed is 1 Gbps | 4 | 1-Gb Ethernet dedicated management link status <ul style="list-style-type: none"> • Off—No link is present • Green—Link is active • Green, flashing—Traffic is present on the active link |

| | | | |
|---|--|---|--|
| 5 | <p>Rear unit identification</p> <ul style="list-style-type: none"> • Off—The unit identification function is not in use • Blue, flashing—The unit identification function is activated | 6 | <p>Power supply status (one LED for each power supply unit)</p> <ul style="list-style-type: none"> • Off—No AC input (12 V main power off, 12 V standby power off) • Green, flashing—12 V main power off; 12 V standby power on • Green—12 V main power on; 12 V standby power on • Amber, flashing—Warning threshold detected but 12 V main power on • Amber—Critical error detected; 12 V main power off (for example, over-current, over-voltage, or over-temperature failure) |
| 7 | <p>SAS/SATA drive fault</p> <ul style="list-style-type: none"> • Off—The drive is operating properly • Amber—Drive fault detected • Amber, flashing—The drive is rebuilding • Amber, flashing with one-second interval—Drive locate function activated in the software | 8 | <p>SAS/SATA drive activity LED</p> <ul style="list-style-type: none"> • Off—There is no drive in the drive tray (no access, no fault) • Green—The drive is ready • Green, flashing—The drive is reading or writing data |

Power Supply

The following table lists the specifications for each 1050-W AC power supply (Cisco part number UCSC-PSU1-1050W) used in the Secure Endpoint PC4000.

Table 2: Power Supply Specifications

| Description | Specification |
|------------------------|---|
| Power consumption | 1313 BTU/hr |
| AC input voltage range | Nominal range: 100 to 120 V AC, 200 to 240 V AC Range: 90–132 V AC, 180–264 V AC |
| AC input frequency | Nominal range: 50–60 Hz Range: 47–63 Hz |

| Description | Specification |
|--|---|
| Maximum AC input current | 12.5 A peak at 100 V AC 6.0 A peak at 208 V AC |
| Maximum input volt amperes | 1250 VA at 100 V AC |
| Maximum output power for each power supply | 1050 W |
| Maximum inrush current | 15 A (subcycle duration) |
| Maximum hold-up time | 12 ms at 1050 W |
| Power supply output voltage | 12 V DC |
| Power supply standby voltage | 12 V DC |
| Efficiency rating | Climate Savers Platinum Efficiency (80 Plus Platinum certified) |
| Form factor | RSP2 |
| Input connector | IEC320 C14 |

Hardware Specifications

The following table lists the hardware specifications for the Secure Endpoint PC4000.

Table 3: Secure Endpoint PC4000 Hardware Specifications

| Specification | |
|---------------------------------------|--|
| Dimensions (H x W x D) | 3.4 x 16.9 x 29.5 in. (8.64 x 42.9 x 74.0 cm) |
| Maximum weight (fully loaded chassis) | 57.5 lb (26.1 kg) |
| Temperature | Operating: 50 to 95°F (10 to 35°C) Maximum temperature is derated by 1°F/547 ft (1°C/300 m) of altitude above 10,000 ft (3,048 m) Nonoperating: -40 to 149°F (-40 to 65°C) when the appliance is stored or transported |
| Relative humidity | Operating: 8 to 90% noncondensing Nonoperating: 5 to 95% noncondensing |
| Altitude | Operating: 0 to 10,000 ft Nonoperating: 0 to 40,000 ft when the appliance is stored or transported |
| Sound power level | 5.8 Bels (measure A-weighted per ISO7779 LWAd) Operation at 73°F (23°C) |

| Specification | |
|----------------------|--|
| Sound pressure level | 43 dBa (measure A-weighted per ISO7779 LpAM) Operation at 73°F (23°C) |

Product ID Numbers

The following table lists the spare Product IDs (PIDs) associated with the Secure Endpoint PC4000. The spare components are ones that you can order and replace yourself. If any internal components fail, you must RMA the entire chassis including the SFPs and SFP cables. Use the Cisco Returns Portal for RMA: <https://www.cisco.com/c/en/us/support/returns/returns-portal.html>. Remove the drives and power supplies before you send the chassis for RMA. You can view an inventory of PIDs using the Cisco Integrated Management Interface (CIMC). See [Viewing Product ID \(PID\) Catalog Details](#) for more information.

Table 4: Secure Endpoint PC4000 PIDs


| PID | Description |
|-------------------|----------------------------------|
| SEPC-AC-1050 | Power supply |
| UCSC-PSU1-1050W= | Power supply (spare) |
| SEPC-SD38T6I1X-EV | 3.8-TB hard disk drive |
| UCS-SD38T6I1X-EV= | 3.8-TB hard disk drive (spare) |
| SEPC-SD76TBM1X-EV | 7.6-TB hard disk drive |
| UCS-SD76TBM1X-EV= | 7.6-TB hard disk drive (spare) |
| SEPC-SD960G63X-EP | 960-GB solid state drive |
| UCS-SD960G63X-EP= | 960-GB solid state drive (spare) |
| UCSC-RAILB-M6 | Rail kit |
| UCSC-RAILB-M6= | Rail kit (spare) |

Power Cord Specifications

If you do not order the optional power cord with the system, you are responsible for selecting the appropriate power cord for the product. Using an incompatible power cord with this product may result in electrical safety hazard. Orders delivered to Argentina, Brazil, and Japan must have the appropriate power cord ordered with the system.


The following power cords and jumper cords are supported.

Figure 8: Argentina (CAB-250V-10A-AR)

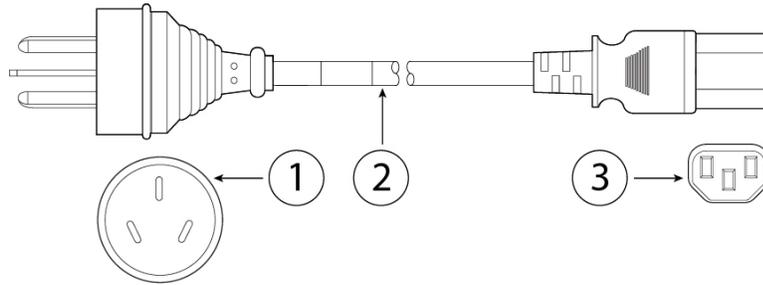


| | | | |
|----------|--------------------------|----------|------------------------------|
| 1 | Plug: IRAM 2073 | 2 | Cord set rating: 10 A, 250 V |
| 3 | Connector: IEC 60320/C13 | | — |

Figure 9: Australia (CAB-9K10A-AU)

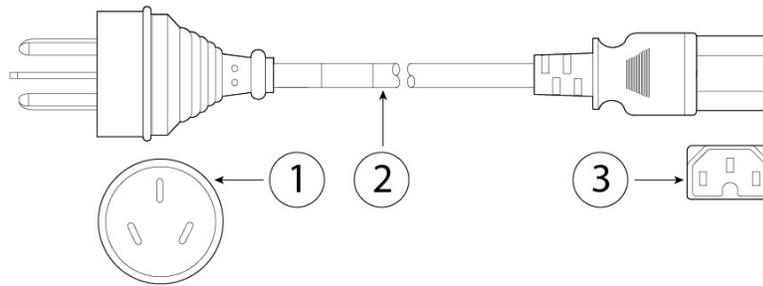


| | | | |
|----------|--------------------------|----------|------------------------------|
| 1 | Plug: A.S. 3112-2000 | 2 | Cord set rating: 10 A, 250 V |
| 3 | Connector: IEC 60320/C15 | | — |

Figure 10: Brazil (PWR-250V-10A-BZ)

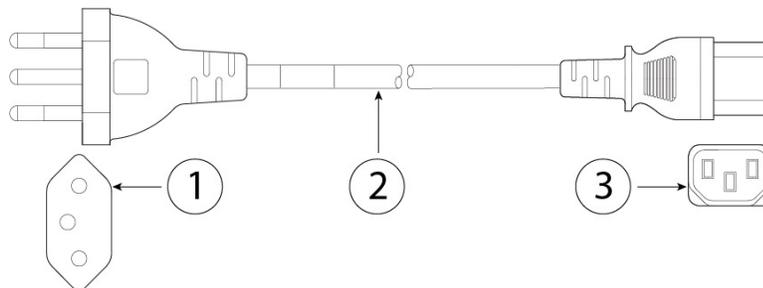


| | | | |
|----------|--------------------------|----------|------------------------------|
| 1 | Plug: NBR 14136 | 2 | Cord set rating: 10 A, 250 V |
| 3 | Connector: IEC 60320/C13 | | — |

Figure 11: Cabinet Jumper (CAB-C13-C14-2M)

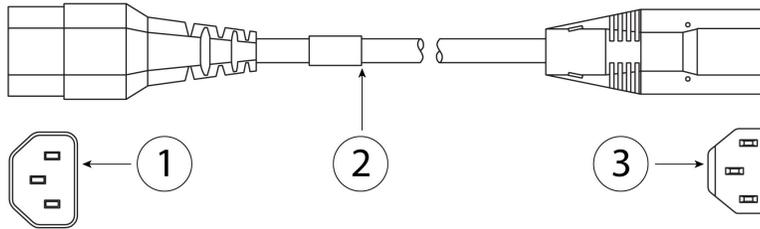


| | | | |
|----------|--------------------------------|----------|----------------------------|
| 1 | Plug: SS10A | 2 | Cord set rating: 10A, 250V |
| 3 | Connector: HS10S, C-13 to C-14 | | — |

Figure 12: Cabinet Jumper (CAB-C13-C14-AC)

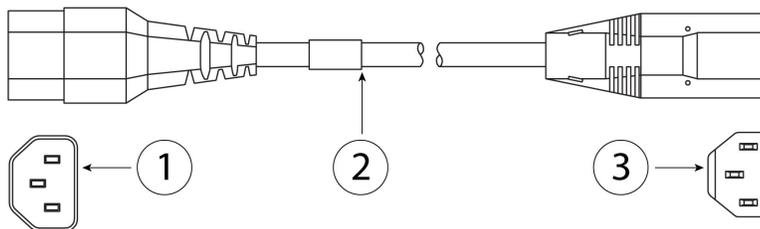


| | | | |
|----------|--|----------|------------------------------|
| 1 | Plug: SS10A | 2 | Cord set rating: 10 A, 250 V |
| 3 | Connector: HS10S, C-13 to C-14 (recessed receptacle) | | — |

Figure 13: Cabinet Jumper (CAB-C13-CBN)

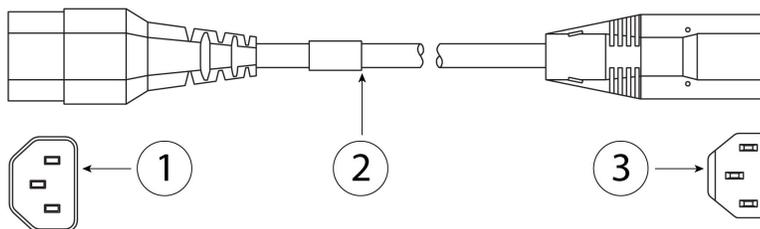


| | | | |
|----------|--------------------------------|----------|------------------------------|
| 1 | Plug: SS10A | 2 | Cord set rating: 10 A, 250 V |
| 3 | Connector: HS10S, C-13 to C-14 | | — |

Figure 14: China (CAB-250V-10A-CH)

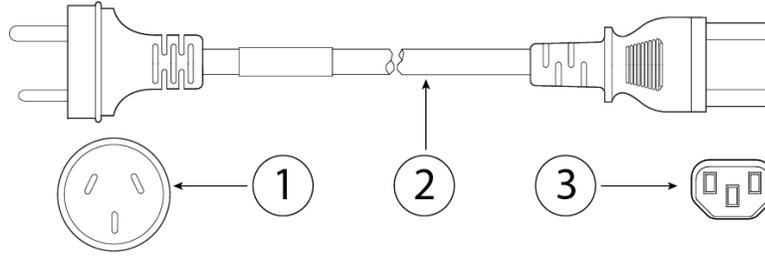


| | | | |
|----------|--------------------------|----------|------------------------------|
| 1 | Plug: GB2099.1/2008 | 2 | Cord set rating: 10 A, 250 V |
| 3 | Connector: IEC 60320/C13 | | — |

Figure 15: Europe (CAB-9K10A-EU)

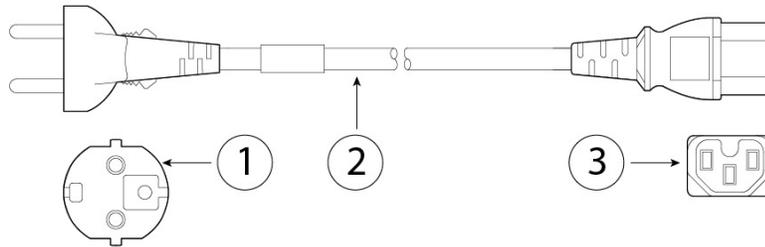


| | | | |
|----------|------------------------------------|----------|-----------------------------------|
| 1 | Plug: CEE 7/7 (M2511) | 2 | Cord set rating: 10 A/16 A, 250 V |
| 3 | Connector: IEC 60320/C15 (VSCC 15) | | — |

Figure 16: India (CAB-250V-10A-ID)

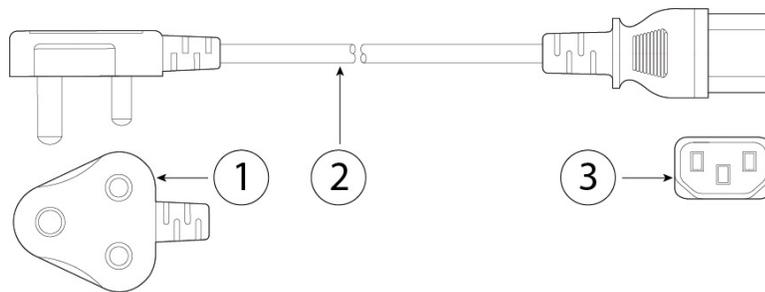


| | | | |
|----------|--------------------------|----------|------------------------------|
| 1 | Plug: IS 6538-1971 | 2 | Cord set rating: 16 A, 250 V |
| 3 | Connector: IEC 60320-C13 | | — |

Figure 17: Israel (CAB-250V-10A-IS)

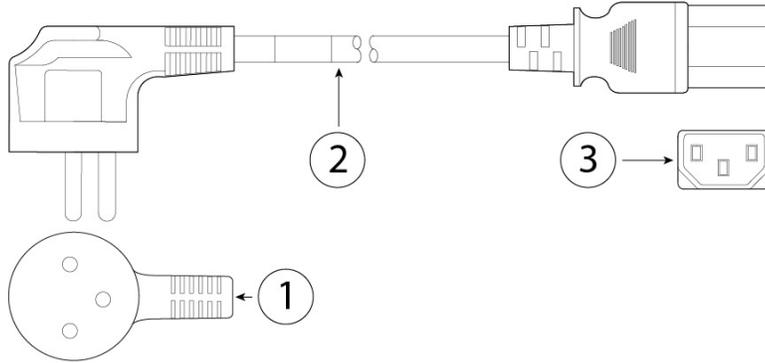


| | | | |
|---|--------------------------|---|------------------------------|
| 1 | Plug: SI-32 | 2 | Cord set rating: 10 A, 250 V |
| 3 | Connector: IEC 60320-C13 | | — |

Figure 18: Italy (CAB-9K10A-IT)

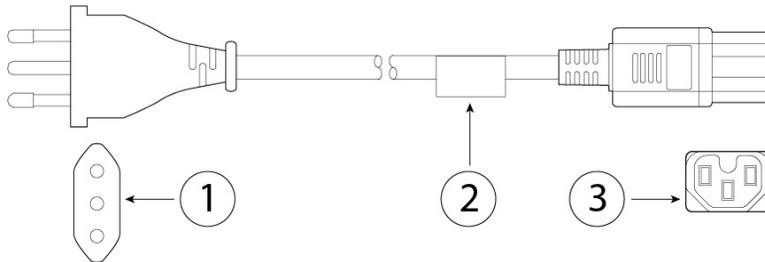


| | | | |
|---|---|---|------------------------------|
| 1 | Plug: CEI 23-16/VII (I/3G) | 2 | Cord set rating: 10 A, 250 V |
| 3 | Connector: IEC 60320/C15 (EN 60320/C15M) | | — |

Figure 19: Japan (CAB-JPN-3PIN)

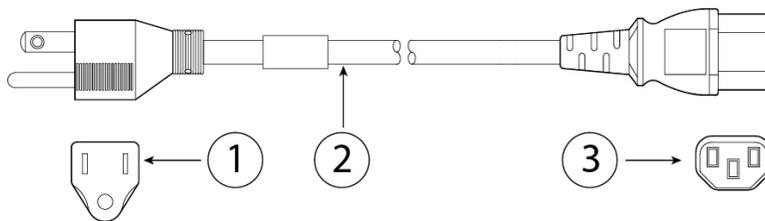


| | | | |
|---|--------------------------|---|------------------------------|
| 1 | Plug: JIS 8303 | 2 | Cord set rating: 12 A, 125 V |
| 3 | Connector: IEC 60320/C13 | | — |

Figure 20: Japan (CAB-C13-C14-2M-JP)

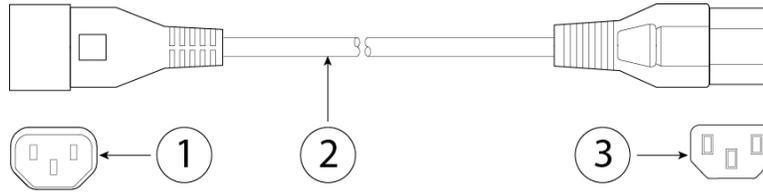


| | | | |
|----------|--------------------------------|----------|------------------------------|
| 1 | Plug: EN 60320-2-2/E | 2 | Cord set rating: 10 A, 250 V |
| 3 | Connector: EN 60320/C13 to C14 | | — |

Figure 21: Korea (CAB-9K10S-KOR)

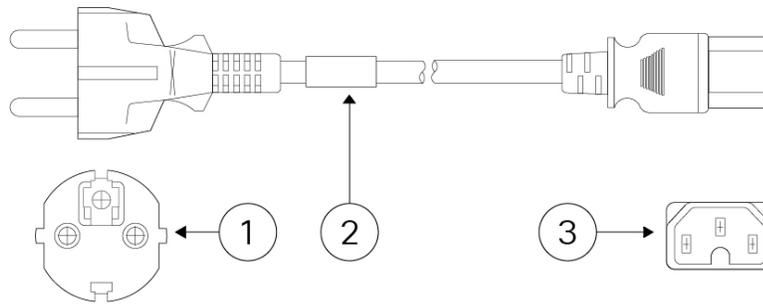


| | | | |
|----------|--------------------------|----------|------------------------------|
| 1 | Plug: EL211 (KSC 8305) | 2 | Cord set rating: 10 A, 250 V |
| 3 | Connector: IEC 60320/C15 | | — |

Figure 22: North America (CAB-9K12A-NA)

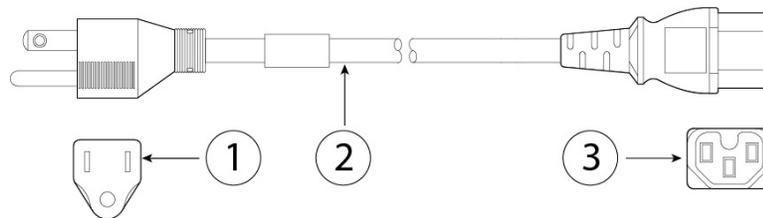


| | | | |
|----------|--------------------------|----------|------------------------------|
| 1 | Plug: NEMA5-15P | 2 | Cord set rating: 13 A, 125 V |
| 3 | Connector: IEC 60320/C15 | | — |

Figure 23: North America (CAB-N5K6A-NA)

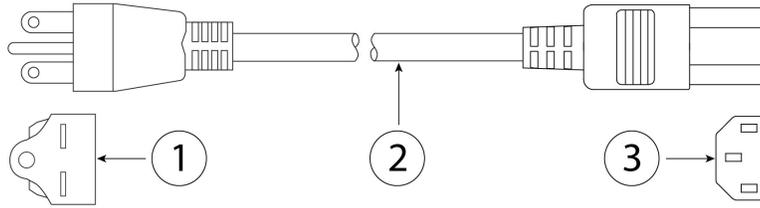


| | | | |
|----------|--------------------------|----------|------------------------------|
| 1 | Plug: NEMA6-15P | 2 | Cord set rating: 10 A, 125 V |
| 3 | Connector: IEC 60320/C13 | | — |

Figure 24: North America (CAB-AC-L620-C13)

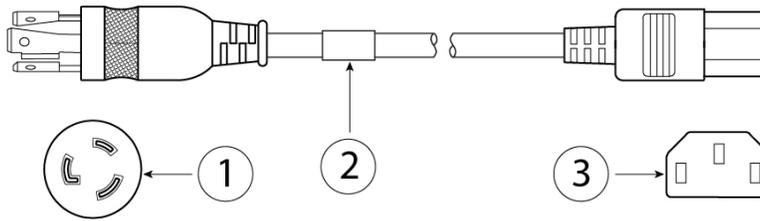


| | | | |
|----------|--------------------------------------|----------|------------------------------|
| 1 | Plug: NEMA L6-20 (molded twist lock) | 2 | Cord set rating: 13 A, 250 V |
| 3 | Connector: IEC 60320/C13 | | — |

Figure 25: Switzerland (CAB-9K10A-SW)

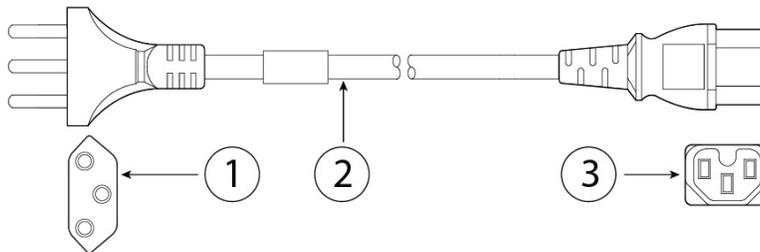


| | | | |
|----------|--------------------------|----------|------------------------------|
| 1 | Plug: SEV 1011 (MP232-R) | 2 | Cord set rating: 10 A, 250 V |
| 3 | Connector: IEC 60320/C15 | | — |

Figure 26: Taiwan (CAB-ACTW)

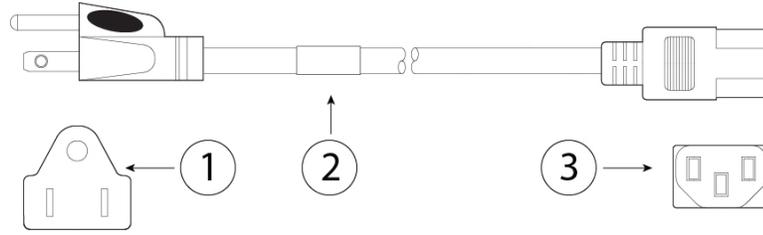

| | | | |
|----------|--------------------------|----------|------------------------------|
| 1 | Plug: EL 302 (CNS10917) | 2 | Cord set rating: 10 A, 125 V |
| 3 | Connector: IEC 60320/C13 | | — |

Figure 27: United Kingdom (CAB-9K10A-UK)

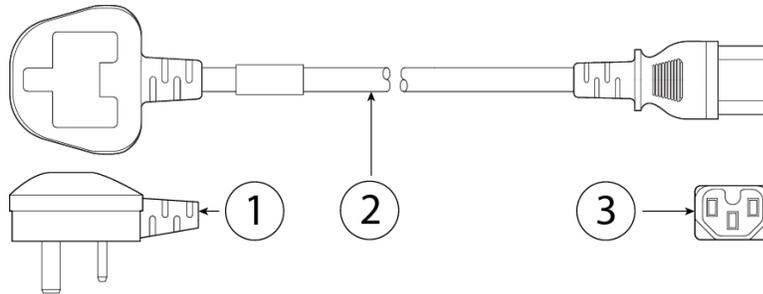

| | | | |
|----------|--------------------------|----------|------------------------------|
| 1 | Plug: BS1363A/SS145 | 2 | Cord set rating: 10 A, 250 V |
| 3 | Connector: IEC 60320/C15 | | — |



CHAPTER 2

Installation Preparation

- [Installation Warnings, on page 21](#)
- [Safety Recommendations, on page 23](#)
- [Maintain Safety with Electricity, on page 24](#)
- [Prevent ESD Damage, on page 25](#)
- [Site Environment, on page 25](#)
- [Site Considerations, on page 25](#)
- [Power Supply Considerations, on page 25](#)
- [Rack Configuration Considerations, on page 26](#)

Installation Warnings

Be sure to read the Regulatory and Compliance Safety Information document before installing the Secure Endpoint PC4000 appliance.

Take note of the following warnings:



Warning IMPORTANT SAFETY INSTRUCTIONS

Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. Read the installation instructions before using, installing, or connecting the system to the power source. Use the statement number at the beginning of each warning statement to locate its translation in the translated safety warnings for this device.

SAVE THESE INSTRUCTIONS



Warning **Statement 1005**—Circuit Breaker

This product relies on the building's installation for short-circuit (overcurrent) protection. Ensure that the protective device is rated not greater than: USA: 120 V, 15 A (EU: 250 V, 16 A)



Warning This equipment must be grounded. To reduce the risk of electric shock, never defeat the ground conductor or operate the equipment in the absence of a suitably installed ground conductor. Contact the appropriate electrical inspection authority or an electrician if you are uncertain that suitable grounding is available.



Warning To reduce risk of electric shock or fire, installation of the equipment must comply with local and national electrical codes.



Warning An instructed person is someone who has been instructed and trained by a skilled person and takes the necessary precautions when working with equipment.

A skilled person or qualified personnel is someone who has training or experience in the equipment technology and understands potential hazards when working with equipment.

There are no serviceable parts inside. To avoid risk of electric shock, do not open.



Note You are strongly advised to read the safety instruction before using the product.

<https://www.cisco.com/web/JP/techdoc/pldoc/pldoc.html>

When installing the product, use the provided or designated connection cables/power cables/AC adapters.

〈製品仕様における安全上の注意〉
www.cisco.com/web/JP/techdoc/index.html

接続ケーブル、電源コードセット、ACアダプタ、バッテリーなどの部品は、必ず添付品または指定品をご使用ください。添付品・指定品以外をご使用になると故障や動作不良、火災の原因となります。また、電源コードセットは弊社が指定する製品以外の電気機器には使用できないためご注意ください。



Warning Only a skilled person should be allowed to install, replace, or service this equipment. See statement 1089 for the definition of a skilled person.

There are no serviceable parts inside. To avoid risk of electric shock, do not open.



Warning Only an instructed person or skilled person should be allowed to install, replace, or service this equipment. See statement 1089 for the definition of an instructed or skilled person.

There are no serviceable parts inside. To avoid risk of electric shock, do not open.



Warning Blank faceplates and cover panels serve three important functions: they reduce the risk of electric shock and fire, they contain electromagnetic interference (EMI) that might disrupt other equipment, and they direct the flow of cooling air through the chassis. Do not operate the system unless all cards, faceplates, front covers, and rear covers are in place.

**Warning**

To reduce risk of fire, explosion, or leakage of flammable liquid or gas:

- Replace the battery only with the same or equivalent type recommended by the manufacturer.
- Do not dismantle, crush, puncture, use a sharp tool to remove, short the external contacts, or dispose of the battery in fire.
- Do not use if battery is warped or swollen.
- Do not store or use battery in a temperature $> .$
- Do not store or use battery in low air pressure environment $< .$

**Warning**

Invisible laser radiation is present. Do not expose to users of telescopic optics. This applies to Class 1/1M laser products.

**Warning**

Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments.

**Warning**

There are no serviceable parts inside. To avoid risk of electric shock, do not open.

**Warning**

Ultimate disposal of this product should be handled according to all national laws and regulations.

Safety Recommendations

Observe these safety guidelines:

- Keep the area clear and dust free before, during, and after installation.
- Keep tools away from walkways, where you and others might trip over them.
- Do not wear loose clothing or jewelry, such as earrings, bracelets, or chains that could get caught in the chassis.
- Wear safety glasses if you are working under any conditions that might be hazardous to your eyes.
- Do not perform any action that creates a potential hazard to people or makes the equipment unsafe.
- Never attempt to lift an object that is too heavy for one person.

Maintain Safety with Electricity



Warning This equipment must be grounded. To reduce the risk of electric shock, never defeat the ground conductor or operate the equipment in the absence of a suitably installed ground conductor. Contact the appropriate electrical inspection authority or an electrician if you are uncertain that suitable grounding is available.



Warning In the Scandinavian countries (Denmark, Finland, Iceland, Norway, and Sweden) the appliance must be connected to a grounded outlet.



Warning Before working on a chassis, be sure the power cord is unplugged.

Read the Regulatory Compliance and Safety Information document before installing the chassis.

Follow these guidelines when working on equipment powered by electricity:

- Before beginning procedures that require access to the interior of the chassis, locate the emergency power-off switch for the room in which you are working. Then, if an electrical accident occurs, you can act quickly to turn off the power.
- Do not work alone if potentially hazardous conditions exist anywhere in your work space.
- Never assume that power is disconnected; always check.
- Look carefully for possible hazards in your work area, such as moist floors, ungrounded power extension cables, frayed power cords, and missing safety grounds.
- If an electrical accident occurs:
 - Use caution; do not become a victim yourself.
 - Disconnect power from the system.
 - If possible, send another person to get medical aid. Otherwise, assess the condition of the victim, and then call for help.
 - Determine whether the person needs rescue breathing or external cardiac compressions; then take appropriate action.
- Use the chassis within its marked electrical ratings and product usage instructions.
- The chassis is equipped with an AC-input power supply, which is shipped with a three-wire electrical cord with a grounding-type plug that fits into a grounding-type power outlet only. Do not circumvent this safety feature. Equipment grounding should comply with local and national electrical codes.

Prevent ESD Damage

ESD occurs when electronic components are improperly handled, and it can damage equipment and impair electrical circuitry, which can result in intermittent or complete failure of your equipment.

Always follow ESD-prevention procedures when removing and replacing components. Ensure that the chassis is electrically connected to an earth ground. Wear an ESD-preventive wrist strap, ensuring that it makes good skin contact. Connect the grounding clip to an unpainted surface of the chassis frame to safely ground ESD voltages. To properly guard against ESD damage and shocks, the wrist strap and cord must operate effectively. If no wrist strap is available, ground yourself by touching the metal part of the chassis.

For safety, periodically check the resistance value of the antistatic strap, which should be between one and 10 megohms.

Site Environment

See [Hardware Specifications, on page 11](#) for information about physical specifications.

To avoid equipment failures and reduce the possibility of environmentally caused shutdowns, plan the site layout and equipment locations carefully. If you are currently experiencing shutdowns or unusually high error rates with your existing equipment, these considerations may help you isolate the cause of failures and prevent future problems.

Site Considerations

Considering the following helps you plan an acceptable operating environment for the chassis, and avoid environmentally-caused equipment failures.

- Electrical equipment generates heat. Ambient air temperature might not be adequate to cool equipment to acceptable operating temperatures without adequate circulation. Make sure that the room in which you operate your system has adequate air circulation.
- Ensure that the chassis cover is secure. The chassis is designed to allow cooling air to flow effectively within it. An open chassis allows air leaks, which may interrupt and redirect the flow of cooling air from the internal components.
- Always follow ESD prevention procedures to avoid damage to equipment. Damage from static discharge can cause immediate or intermittent equipment failure.

Power Supply Considerations

See [Power Supply, on page 10](#) for more detailed information about the power supply in the chassis.

When installing the chassis, consider the following:

- Check the power at the site before installing the chassis to ensure that it is free of spikes and noise. Install a power conditioner, if necessary, to ensure proper voltages and power levels in the appliance-input voltage.

- Install proper grounding for the site to avoid damage from lightning and power surges.
- The chassis does not have a user-selectable operating range. Refer to the label on the chassis for the correct appliance input-power requirement.
- Several styles of AC-input power supply cords are available for the chassis; make sure that you have the correct style for your site.
- If you are using dual redundant (1+1) power supplies, we recommend that you use independent electrical circuits for each power supply.
- Install an uninterruptible power source for your site, if possible.

Rack Configuration Considerations

See [Rack-Mount the Chassis, on page 27](#) for the procedure for rack-mounting the chassis.

Consider the following when planning a rack configuration:

- Standard 19-inch (48.3 cm) 4-post EIA rack with mounting rails that conform to English universal hole spacing according to section 1 of ANSI/EIA-310-D-1992.
- The rack-mounting posts need to be 2 to 3.5 mm thick to work with the slide rail rack mounting.
- If you are mounting a chassis in an open rack, make sure that the rack frame does not block the intake or exhaust ports.
- If your rack includes closing front and rear doors, the doors must have 65 percent open perforated area evenly distributed from top to bottom to permit adequate airflow.
- Be sure enclosed racks have adequate ventilation. Make sure that the rack is not overly congested as each chassis generates heat. An enclosed rack should have louvered sides and a fan to provide cooling air.
- In an enclosed rack with a ventilation fan in the top, heat generated by equipment near the bottom of the rack can be drawn upward and into the intake ports of the equipment above it in the rack. Ensure that you provide adequate ventilation for equipment at the bottom of the rack.
- Baffles can help to isolate exhaust air from intake air, which also helps to draw cooling air through the chassis. The best placement of the baffles depends on the airflow patterns in the rack. Experiment with different arrangements to position the baffles effectively.



CHAPTER 3

Mount the Chassis

- [Unpack and Inspect the Chassis, on page 27](#)
- [Rack-Mount the Chassis, on page 27](#)
- [Connect Cables, Turn on Power, and Verify Connectivity, on page 31](#)

Unpack and Inspect the Chassis



Note The chassis is thoroughly inspected before shipment. If any damage occurred during transportation or any items are missing, contact your customer service representative immediately. Keep the shipping container in case you need to send the chassis back due to damage.

See [Package Contents, on page 3](#) for a list of what shipped with the chassis.

-
- Step 1** Remove the chassis from its cardboard container and save all packaging material.
- Step 2** Compare the shipment to the equipment list provided by your customer service representative. Verify that you have all items.
- Step 3** Check for damage and report any discrepancies or damage to your customer service representative. Have the following information ready:
- Invoice number of shipper (see the packing slip)
 - Model and serial number of the damaged unit
 - Description of damage
 - Effect of damage on the installation
-

Rack-Mount the Chassis

You can install the chassis in a rack using the Cisco rack kit.

The rack must be of the following type:

- A standard 19-inches (48.3-cm) wide, 4-post EIA rack with mounting posts that conform to English universal hole spacing per section 1 of ANSI/EIA-310-D-1992.
- The rack post holes can be square 0.38-inches (9.6 mm), round 0.28-inches (7.1 mm), #12-24 UNC, or #10-32 UNC when you use the supplied slide rails.
- The minimum vertical rack space per chassis must be 1 RU, equal to 1.75 inches (44.45 mm).
- The slide rails for the chassis have an adjustment range of 24 to 36 inches (610 to 914 mm).



Note The slide rails supplied by Cisco Systems for the chassis do not require tools for installation if you install them in a rack that has square 0.38-inches (9.6 mm), round 0.28-inches (7.1 mm), or #12-24 UNC threaded holes.

Before you begin

Take note of the following warnings:



Warning To prevent personal injury or damage to the chassis, never attempt to lift or tilt the chassis using the handles on modules, such as power supplies, fans, or cards. These types of handles are not designed to support the weight of the unit.



Warning 2 people are required to lift the heavy parts of the product. To prevent injury, keep your back straight and lift with your legs, not your back.



Warning To reduce the risk of fire or bodily injury, do not operate the unit in an area that exceeds the maximum recommended ambient temperature of: 40°C




Warning To prevent bodily injury when mounting or servicing this unit in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety:

- This unit should be mounted at the bottom of the rack if it is the only unit in the rack.
- When mounting this unit in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack.

Step 1 Attach the inner rails to the sides of the chassis:

- a) Align an inner rail with one side of the chassis so that the three keyed slots in the rail align with the three pegs on the side of the chassis.
- b) Set the keyed slots over the pegs, and then slide the rail toward the front to lock it in place on the pegs. The front slot has a metal clip that locks over the front peg.
- c) Install the second inner rail to the opposite side of the chassis.

Figure 28: Attach the Inner Rail to Side of Chassis

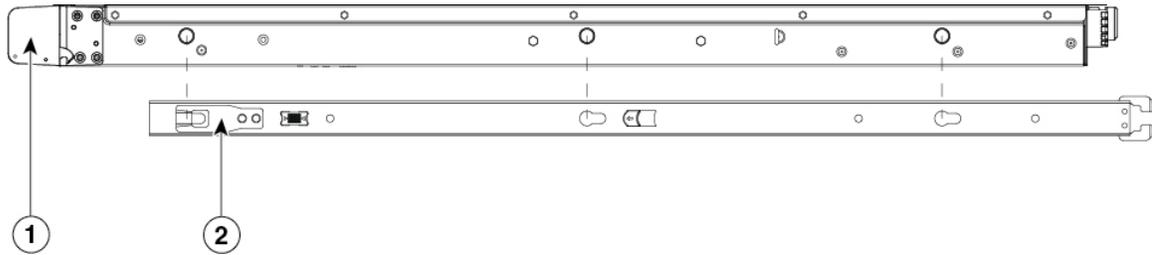


| | | | |
|---|------------------|---|----------------------------|
| 1 | Front of chassis | 2 | Locking clip on inner rail |
|---|------------------|---|----------------------------|

Step 2

Open the front securing plate on both slide-rail assemblies. The front end of the slide-rail assembly has a spring-loaded securing plate that must be open before you can insert the mounting pegs into the rack-post holes.

On the outside of the assembly, push the green arrow button toward the rear to open the securing plate.

Figure 29: Front Securing Mechanism, Inside of Front End

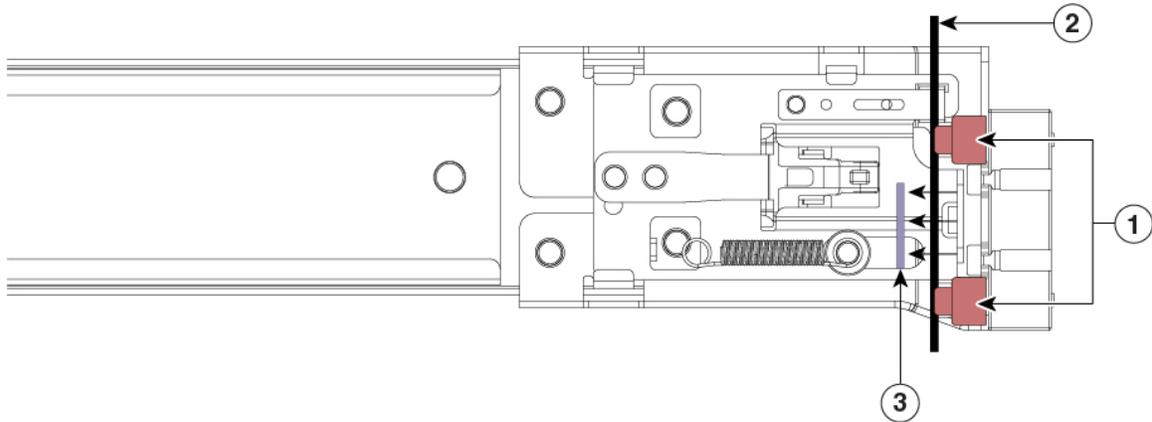

| | | | |
|---|---|---|-----------|
| 1 | Front mounting pegs | 2 | Rack post |
| 3 | Securing plate shown pulled back to open position | | |

Step 3

Install the slide rails into the rack:

- a) Align one slide-rail assembly front end with the front rack-post holes that you want to use.

The slide rail front end wraps around the outside of the rack post and the mounting pegs enter the rack-post holes from the outside-front.

Note The rack post must be between the mounting pegs and the open securing plate.


- b) Push the mounting pegs into the rack-post holes from the outside-front.
- c) Press the securing plate release button, marked “PUSH.” The spring-loaded securing plate closes to lock the pegs in place.
- d) Attach the second slide-rail assembly to the opposite side of the rack. Make sure that the two slide-rail assemblies are at the same height with each other and are level front-to-back.
- e) Pull the inner slide rails on each assembly out toward the rack front until they hit the internal stops and lock in place.

Step 4

Insert the chassis into the slide rails:

- a) Align the rear of the inner rails that are attached to the chassis sides with the front ends of the empty slide rails on the rack.
- b) Push the inner rails into the slide rails on the rack until they stop at the internal stops.
- c) Slide the release clip toward the rear on both inner rails, and then continue pushing the chassis into the rack until its front slam latches engage with the rack posts

Figure 30: Inner Rail Release Clip

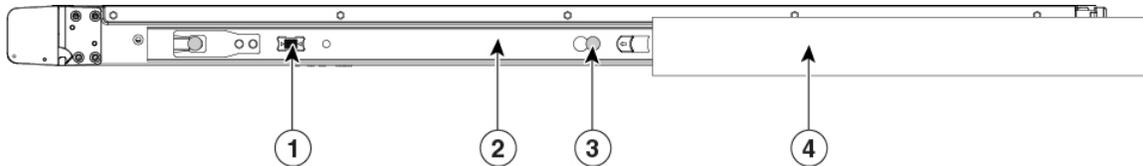

| | | | |
|----------|--|----------|---|
| 1 | Inner rail release clip | 2 | Inner rail attached to the chassis and inserted into outer rail |
| 3 | Button to unlock rail Press this button to unlock the rail so you can pull out the chassis from the rack when uninstalling or performing maintenance. | 4 | Outer rail attached to rack post |

Step 5

(Optional) Secure the chassis in the rack more permanently by using the two screws that are provided with the slide rails. Perform this step if you plan to move the rack with chassis installed. With the chassis fully pushed into the slide rails, open a hinged slam latch lever on the front of the chassis and insert the screw through the hole that is under the lever. The screw threads into the static part of the rail on the rack post and prevents the chassis from being pulled out. Repeat for the opposite slam latch.

What to do next

Continue with [Connect Cables, Turn on Power, and Verify Connectivity](#), on page 31.

Connect Cables, Turn on Power, and Verify Connectivity



Warning Invisible laser radiation is present. Do not expose to users of telescopic optics. This applies to Class 1/1M laser products.




Warning This unit is intended for installation in restricted access areas. Only skilled, instructed, or qualified personnel can access a restricted access area.



Warning This product relies on the building's installation for short-circuit (overcurrent) protection. To reduce risk of electric shock or fire, ensure that the protective device is rated not greater than: AC: 20A, DC: 40A



Warning This unit might have more than one power supply connection. To reduce risk of electric shock, remove all connections to de-energize the unit.

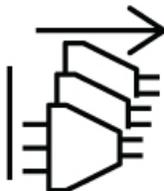

Warning To reduce risk of electric shock or personal injury, disconnect DC power before removing or replacing components or performing upgrades.



Warning To reduce risk of electric shock, when installing or replacing the unit, the ground connection must always be made first and disconnected last.

If your unit has modules, secure them with the provided screws.



Warning To reduce the risk of electric shock and fire, a readily accessible disconnect device must be incorporated in the fixed wiring.



Warning Blank faceplates and cover panels serve three important functions: they reduce the risk of electric shock and fire, they contain electromagnetic interference (EMI) that might disrupt other equipment, and they direct the flow of cooling air through the chassis. Do not operate the system unless all cards, faceplates, front covers, and rear covers are in place.



Warning To reduce risk of electric shock or fire, installation of the equipment must comply with local and national electrical codes.

After rack mounting the chassis, follow these steps to connect cables, turn on power, and verify connectivity.



Note AC power supplies have internal grounding and so no additional chassis grounding is required when the supported AC power cords are used. For more information about supported power cords, see [Power Cord Specifications, on page 12](#).

Before you begin

Take note of the following warnings.



Warning This is a Class 4 laser product. Invisible laser radiation is present. Avoid eye or skin exposure to direct or scattered radiation.



Warning Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments.


Step 1

Connect one Cisco-supported SFP+ transceiver and cable to the far left SFP port in PCIe 3 (see [Rear Panel, on page 8](#)). This is eth0 used to manage the PC4000 through the Opadmin console and should connect to a secure management network.

Each Cisco-certified SFP+ transceiver has an internal serial EEPROM that is encoded with security information. This encoding allows us to identify and validate that the SFP transceiver meets the requirements for the Secure Endpoint PC4000 chassis.

Note Only Cisco certified SFP+ transceivers are compatible with the 10-G interfaces and both transceivers must be 1-G or 10-G. You cannot use one transceiver of each kind. Cisco TAC may refuse support for any interoperability problems that result from using an untested third-party SFP+ transceiver.

Figure 31: Cable Connections

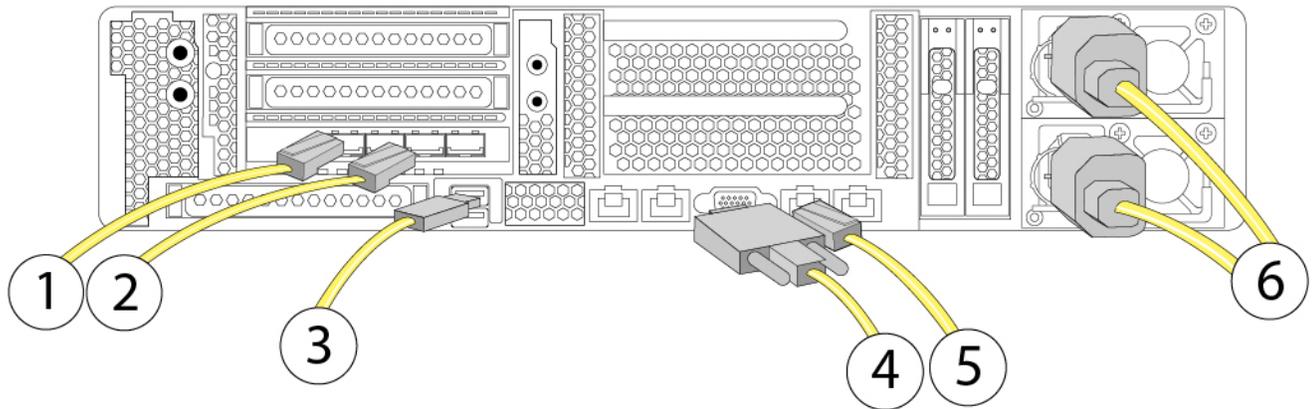

| | | | |
|----------|---|----------|---|
| 1 | eth0 Private Cloud Administration Portal interface 10 Gigabit Ethernet SFP+ support Use only Cisco supported SFP+ transceivers. | 2 | eth1 Secure Endpoint console interface 10 Gigabit Ethernet SFP+ support Use only Cisco supported SFP+ transceivers. |
| 3 | USB 3.0 Type A port You can connect a keyboard, and along with a monitor on the VGA port, you can access the CIMC. | 4 | VGA video port (DB-15 connector) |
| 5 | CIMC port 1-Gb Ethernet dedicated management port | 6 | Power cables |

- Step 2** Connect a second Cisco-supported SFP+ transceiver and cable to the SFP port to the right of the eth0 port in step 1. This is eth1 used to access the Secure Endpoint console and allows your Secure Endpoint connectors to perform cloud queries so should be connected to a network accessible to your endpoints.
- Step 3** Connect the Ethernet cable that shipped with your appliance to the CIMC port. This should be connected to a secure management network.
- Step 4** Use the supported power cords to connect the power supplies of the chassis to your power source. For more information about supported power cords, see [Power Cord Specifications, on page 12](#).
- Step 5** Connect a keyboard to one of the USB ports and a monitor to the VGA port or use the KVM port on the front panel.
- Step 6** Power on the appliance.
- Step 7** Press **F8** at the menu options to configure the CIMC. The first time you connect to the CIMC you are prompted to set a new password. For more information about the CIMC, see the [Cisco UCS C-Series Servers Integrated Management Controller CLI Configuration Guide](#) or the [Cisco UCS C-Series Integrated Management Controller GUI Configuration Guide](#).
- Step 8** Configure the network settings (IP address, DNS) for the CIMC. You can disconnect the keyboard and monitor once the network settings have been applied.
- Step 9** Connect to the CIMC from a web browser on a computer on your secure management network using the IP address you set in step 8. At the log in prompt enter `admin` as the username and the password you set in step 7.

- Step 10** Choose HTML based KVM session from the Launch KVM option on the browser page. See the [Private Cloud Administration Portal User Guide](#) to continue setup and configuration.
-



CHAPTER 4

Maintenance and Upgrade

- [Power Button Shut Down, on page 35](#)
- [Remove and Replace a Drive, on page 36](#)
- [Remove and Replace a Power Supply, on page 38](#)

Power Button Shut Down

The Secure Endpoint PC4000 runs in two modes:

- Main power mode—Power is supplied to all Secure Endpoint PC4000 components and all operating systems can run.
- Standby power mode—Power is supplied only to the service processor and certain components. You can safely remove power cords from the Secure Endpoint PC4000 in this mode.



Caution

After you shut down the Secure Endpoint PC4000 to standby power, electric current is still present in the chassis. To completely remove power as directed in some maintenance procedures, you must disconnect all power cords from all power supplies on the Secure Endpoint PC4000.

You can shut down the Secure Endpoint PC4000 using the front panel Power button or software management. See [Private Cloud Administration Portal User Guide](#) for the software procedures.

Step 1

Check the Power LED:

- Amber—The Secure Endpoint PC4000 is already in standby mode and you can safely remove power.
- Green—The Secure Endpoint PC4000 is in main power mode and you must shut it down before you can safely remove power.

Step 2

Perform a graceful shutdown or a hard shutdown:

Caution

To avoid data loss or damage to your operating system, perform a graceful shutdown of the operating system.

- Graceful shutdown—Press and release the Power button. The operating system performs a graceful shutdown and the Secure Endpoint PC4000 goes into standby mode. The power LED is amber.

- Emergency shutdown—Press and hold the Power button for four seconds to force the main power off and immediately enter standby mode.

Step 3 If a maintenance procedure instructs you to completely remove power from the Secure Endpoint PC4000, disconnect all power cords from the power supplies.

Remove and Replace a Drive



Note The drives are hot-swappable. You do not have to shut down the PC4000 to remove or replace drives.



Note You cannot add more drives to your PC4000. You can only replace the drives in the slots that are supported for your model.

Before you begin



Warning This equipment must be grounded. To reduce the risk of electric shock, never defeat the ground conductor or operate the equipment in the absence of a suitably installed ground conductor. Contact the appropriate electrical inspection authority or an electrician if you are uncertain that suitable grounding is available.



Warning There are no serviceable parts inside. To avoid risk of electric shock, do not open.



Warning To reduce risk of electric shock or fire, installation of the equipment must comply with local and national electrical codes.



Warning Only a skilled person should be allowed to install, replace, or service this equipment. See statement 1089 for the definition of a skilled person.

There are no serviceable parts inside. To avoid risk of electric shock, do not open.




Warning Only an instructed person or skilled person should be allowed to install, replace, or service this equipment. See statement 1089 for the definition of an instructed or skilled person.

There are no serviceable parts inside. To avoid risk of electric shock, do not open.

**Warning**


This unit might have more than one power supply connection. To reduce risk of electric shock, remove all connections to de-energize the unit.

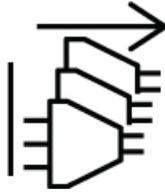**Step 1**

Remove the drive that you are replacing:

- a) Press the release button on the face of the drive tray.
- b) Grasp and open the ejector lever and then pull the drive tray out of the slot.

Figure 32: Remove the Drive

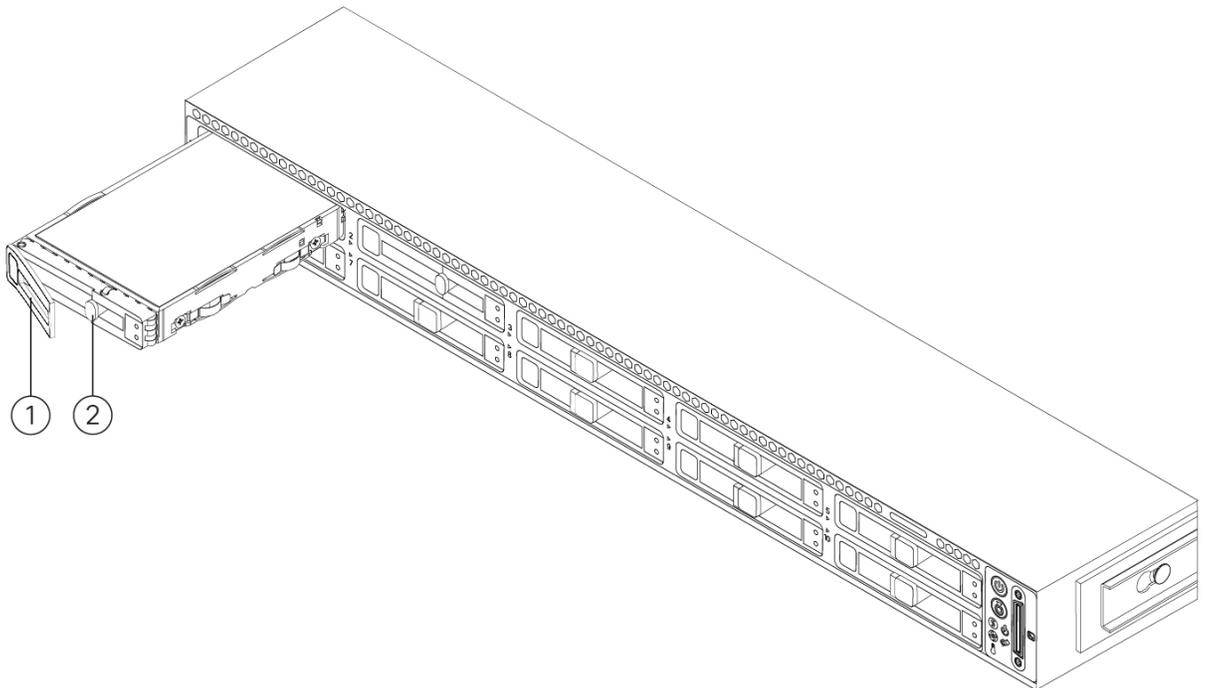


| | | | |
|----------|----------------|----------|----------------|
| 1 | Ejector handle | 2 | Release button |
|----------|----------------|----------|----------------|

Step 2

Remove the four drive-tray screws that secure the drive to the tray and then lift the drive out of the tray.

Figure 33: Remove the Drive Tray

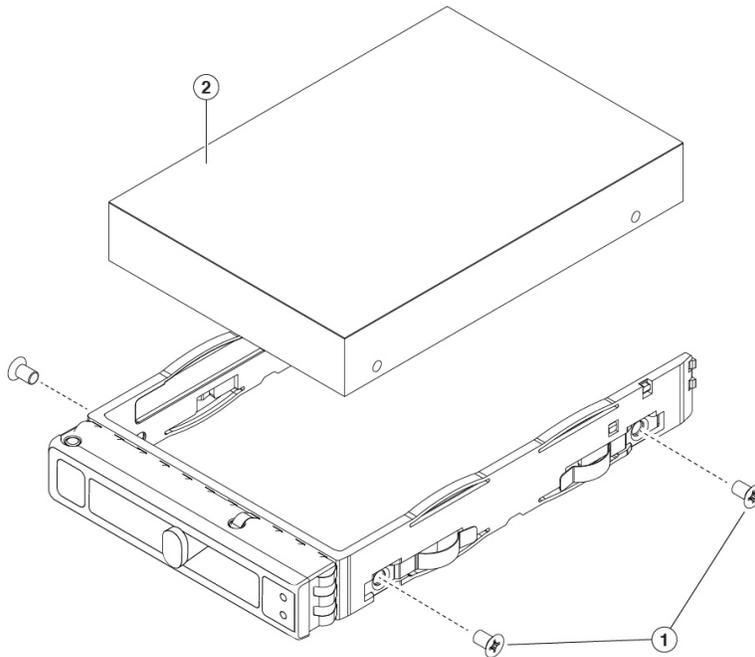

| | | | |
|---|---------------------------------------|---|-------------------------------|
| 3 | Drive tray screws (two on each side) | 4 | Drive removed from drive tray |
|---|---------------------------------------|---|-------------------------------|

Step 3

Install a new drive:

- Place a new drive in the empty drive tray and install the four drive-tray screws.
- With the ejector lever on the drive tray open, insert the drive tray into the empty drive bay.
- Push the tray into the slot until it touches the backplane, and then close the ejector lever to lock the drive in place.

Remove and Replace a Power Supply

The Private Cloud appliance ships with two power supplies, which are redundant and hot-swappable. One is the active power supply and the other is the standby power supply (1+1).

The Private Cloud appliance also supports cold redundancy. Depending on the power being drawn by the Private Cloud appliance, one power supply might actively provide all power to the system while the remaining power supply is put into a standby state. For example, if the power consumption can be satisfied by power supply 1, then power supply 2 is put into a standby state.

**Caution**

When you replace power supplies, do not mix power supply types in the Private Cloud appliance. Both power supplies must be the same wattage and Cisco PID.



Trouble Power supply health monitoring notifies you if the power supply loses power or malfunctions so that redundancy is lost. Check the power supply cables to make sure they are functioning. If they are and errors are still occurring, replace the power supply.

Before you begin

Take note of the following warnings:



Warning This equipment must be grounded. To reduce the risk of electric shock, never defeat the ground conductor or operate the equipment in the absence of a suitably installed ground conductor. Contact the appropriate electrical inspection authority or an electrician if you are uncertain that suitable grounding is available.



Warning There are no serviceable parts inside. To avoid risk of electric shock, do not open.



Warning To reduce risk of electric shock or fire, installation of the equipment must comply with local and national electrical codes.



Warning Only a skilled person should be allowed to install, replace, or service this equipment. See statement 1089 for the definition of a skilled person.

There are no serviceable parts inside. To avoid risk of electric shock, do not open.




Warning Only an instructed person or skilled person should be allowed to install, replace, or service this equipment. See statement 1089 for the definition of an instructed or skilled person.

There are no serviceable parts inside. To avoid risk of electric shock, do not open.




Warning This unit might have more than one power supply connection. To reduce risk of electric shock, remove all connections to de-energize the unit.

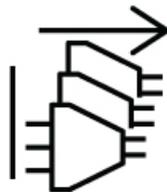

Step 1 Remove the power supply:

- a) Grasp the power supply handle while pinching the release lever toward the handle.
- b) Pull the power supply out of the bay.

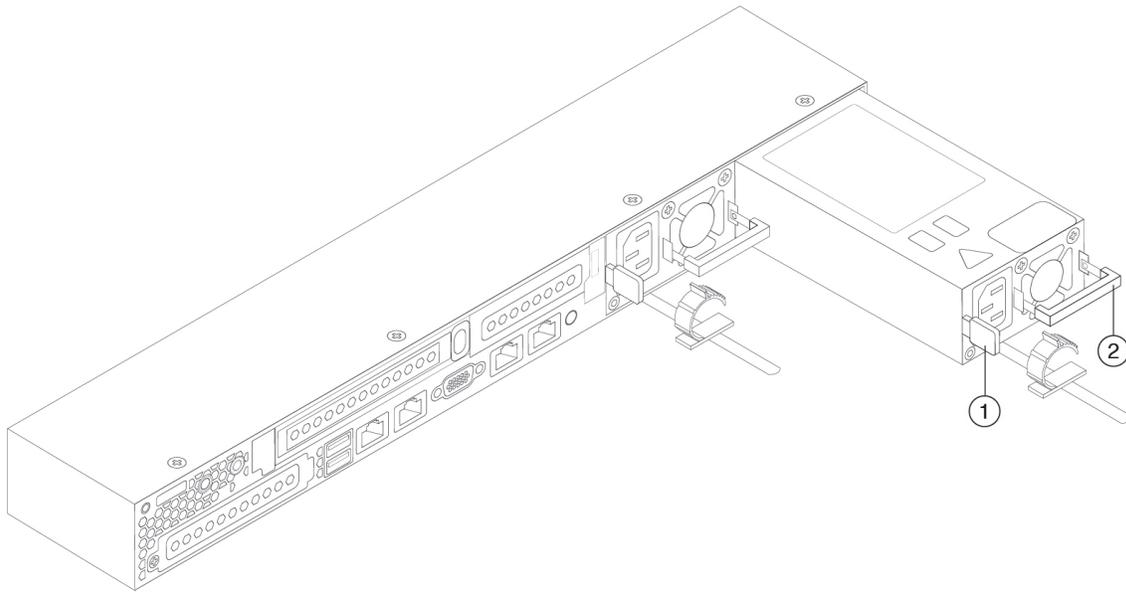Figure 34: Remove and Replace the AC Power Supply

| | | | |
|----------|---------------|----------|--------|
| 1 | Release lever | 2 | Handle |
|----------|---------------|----------|--------|

Step 2 Install a new power supply:

- a) Grasp the power supply handle and insert the new power supply into the empty bay.
- b) Push the power supply into the bay until the release lever locks.
- c) Connect the power cord to the new power supply.
- d) If you shut down the Private Cloud appliance, press the Power button to return it to main power mode.