Cisco M190 Content Security Management Appliance

- Rear Panel Ports, page 5-1
- Status LEDs and Buttons for Maintenance, page 5-2
- Summary of Features, page 5-4

Rear Panel Ports

Figure 5-1 shows the rear panel ports of the Cisco M190 Content Security Management Appliance. The model shown below has one power supply. It is also available with an optional second power supply.

Figure 5-1 Cisco M190 Content Security Management Appliance Rear Panel Ports

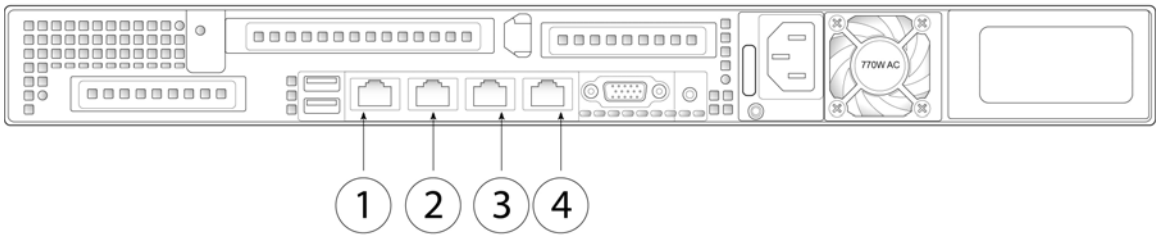

1	RPC port The RPC port speed is configured statically to 100 mbps and full-duplex mode without autonegotiation. Without autonegotiation, the RPC port fails to connect properly and cannot be used.	**2**	Console port Directly connects a computer to the appliance
3	Data 1 Gigabit Ethernet customer data interface; used as a management interface	**4**	Data 2 Gigabit Ethernet customer data interface

Status LEDs and Buttons for Maintenance

- Front Panel LEDs, page 5-2
- Rear Panel LEDs and Buttons, page 5-4

Front Panel LEDs

Figure 5-2 shows the front panel LEDs. Table 5-1 defines the LED states.

Figure 5-2 Cisco M190 Content Security Management Appliance Front Panel LEDS

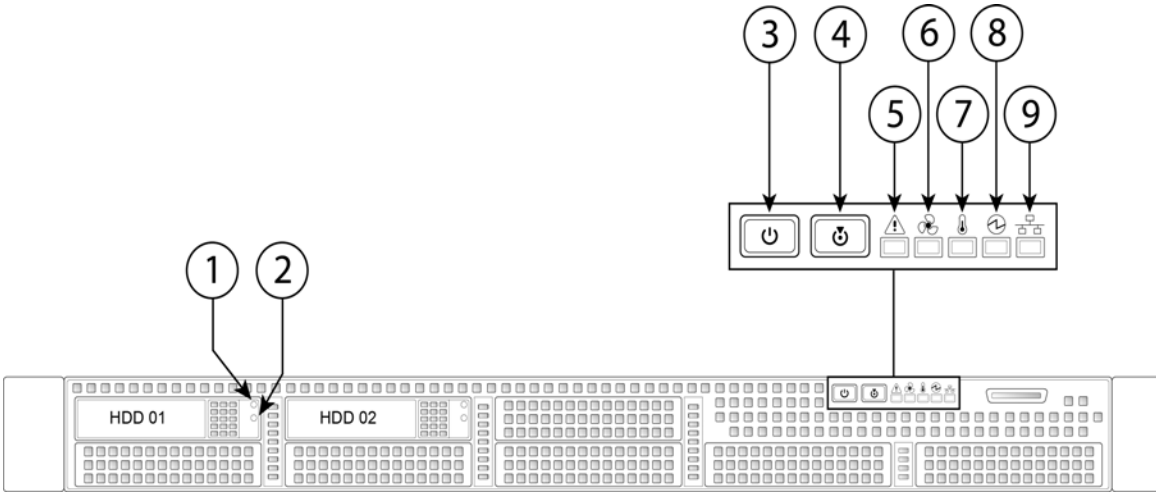

1	Hard drive fault LED	**6**	Fan status LED
2	Hard drive activity LED	**7**	Temperature status LED
3	Power button/power status LED	**8**	Power supply status LED
4	Identification button/LED	**9**	Network link activity LED
5	System status LED		

Table 5-1 Front Panel LEDs, Definitions of States

	LED Name	State
1	Hard drive fault	• Off—The hard drive is operating properly. • Amber—Drive fault detected. • Amber, flashing—The device is rebuilding. • Amber, flashing with one-second interval—Drive locate function activated.
2	Hard drive activity	• Off—There is no hard drive in the hard drive tray (no access, no fault). • Green—The hard drive is ready. • Green, flashing—The hard drive is reading or writing data.

Table 5-1 Front Panel LEDs, Definitions of States (continued)

	LED Name	State
3	Power button/LED	• Off—There is no AC power to the appliance. • Amber—The appliance is in standby power mode. Power is supplied only to the Baseboard Management Controller (BMC) and some motherboard functions which enable you to use remote power commands. • Green—The appliance is in main power mode. Power is supplied to all appliance components.
4	Unit identification	• Off—The unit identification function is not in use. • Blue—The unit identification function is activated.
5	System status	• Green—The appliance is running in normal operating condition. • Green, flashing—The appliance is performing system initialization and memory check. • Amber—The appliance is in a degraded operational state. For example: – Power supply redundancy is lost. – CPUs are mismatched. – At least one CPU is faulty. – At least one DIMM is faulty. – At least one drive in a RAID configuration failed. • Amber, flashing—The appliance is in a critical fault state. For example: – Boot failed. – Fatal CPU and/or bus error is detected. – The appliance is in an over-temperature condition.
6	Fan status	• Green—All fan modules are operating properly. • Amber—One or more fan modules breached the critical threshold. • Amber, flashing—One or more fan modules breached the non-recoverable threshold.
7	Temperature status	• Green—The appliance is operating at normal temperature. • Amber, steady—One or more temperature sensors breached the critical threshold. • Amber, blinking—One or more temperature sensors breached the non-recoverable threshold.
8	Power supply status	• Green—All power supplies are operating normally. • Amber—One or more power supplies are in a degraded operational state. • Amber, flashing—One or more power supplies are in a critical fault state.
9	Network link activity	• Off—The Ethernet link is idle. • Green—One or more Ethernet LOM ports are link-active, but there is no activity. • Green, flashing—One or more Ethernet LOM ports are link-active, with activity.

Rear Panel LEDs and Buttons

The rear panel has the following LEDs and buttons that can be used to maintain the appliance:

- Data/management port link speed LED—Located to the left of each data or management port.
- Data/management port link status LED—Located to the right of each data or management port.
- Unit identification button/LED—Located to the right of the VGA video port (DB-15).

Table 5-2 defines the LED states.

Table 5-2 Rear Panel LEDs, Definitions of States

LED Name	State
Data/Management port link speed	• Off—Link speed is 10 Mbps. • Amber—Link speed is 100 Mbps. • Green—Link speed is 1 Gbps.
Data/management port link status	• Off—No link is present. • Green—Link is active. • Green, flashing—Traffic is present on the active link.
Rear unit identification	• Off—The unit identification LED is not in use. • Blue—The unit identification LED is activated.

Summary of Features

Table 5-3 lists the features of the M190 Content Security Management Appliance.

Table 5-3 Cisco M190 Content Security Management Appliance Features

Feature	Description
Chassis	One rack-unit (1RU) chassis
Processors	One E5–2609 v3 processor
Memory	One 8-GB DDR4-2133 DIMM
RPC	Accessed through the 1-Gb dedicated port The RPC port speed is configured statically to 100 mbps and full-duplex mode without autonegotiation. Without autonegotiation, the RPC port fails to connect properly and cannot be used.
Data ports	Two 1-Gb BASE-T Ethernet LAN ports; also used as management ports
Management I/O	Supported connectors: • One 1-Gb BASE-T Ethernet LAN ports • One RS-232 serial port
Power	One or two 770 W AC power supplies
Power consumption	1313 BTU/hr or 2626 BTU/hr
Cooling	Six fan modules for front-to-rear cooling

Table 5-3 Cisco M190 Content Security Management Appliance Features (continued)

Feature	Description (continued)
Storage	Two 600-GB hard disk drives (2.5” 10K SAS 4Kn) are installed into front-panel drive bays that provide hot-swappable access for SAS drives. **Note** The drives with the PID CCS-HDD-600GB-RV-A are 1.8 TB, but have been partitioned to 600 GB of usable space
Disk management (RAID)	Dedicated internal riser for a PCIe-style Cisco modular RAID controller card