



## **Cisco ME 1200 Series Carrier Ethernet Access Devices Controller Configuration Guide, Cisco IOS 15.6(1)SN and Later Releases**

**First Published:** April 01, 2014

**Last Modified:** February 05, 2016

### **Americas Headquarters**

Cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, CA 95134-1706  
USA  
<http://www.cisco.com>  
Tel: 408 526-4000  
800 553-NETS (6387)  
Fax: 408 527-0883





## CONTENTS

---

### Preface

#### Preface **xxi**

Audience **xxi**

Document Conventions **xxi**

Related Documentation **xxiii**

---

### CHAPTER 1

#### Configuration Management **1**

Prerequisites for Managing Configurations **1**

Restrictions for Managing Configurations **1**

Information About Configuration Management **1**

Getting Started **3**

Step 1—Adding the Cisco ME 1200 NID to the Controller **3**

Step 2—Verifying the Cisco ME 1200 NID Addition onto the Controller **4**

Step 3—Creating VLAN on the Controller **5**

Step 4—Creating Layer 2 VLANs on the NID **6**

Step 5—Creating Layer 2 VLANs on the Controller **7**

Step 6—Modifying Switchport Mode as Trunk **8**

(Optional Step) Configuring Native VLAN **9**

Step 7—Creating Layer 3 VLANs on the NID **11**

Step 8—Creating Layer 3 VLANs on the Controller **13**

Step 9—Configuring IP Route **13**

Step 10—Creating Startup-config.xml File **15**

How to Manage Configurations **17**

Listing Configurations **17**

Verifying Configuration Version **18**

Copying Configuration **20**

Deleting Configuration **22**

Reloading the System **23**

Upgrading Configuration 25

---

**CHAPTER 2****Administering the Cisco ME 1200 NID 27**

Prerequisites for Administering the NID 27

How to Administer the Cisco ME 1200 NID 27

Configuring the System Clock 27

Viewing the System Clock 31

Verifying System Clock Settings 32

Clearing IP ARP Entries 33

Verifying IP ARP Entries 34

Configuring IP Route Global Configuration 36

Configuring IP Route 37

Viewing IP Route 38

Removing IP Route 40

Configuring IP DNS Proxy Request 41

Removing IP DNS Proxy Request Configuration 42

Configuring the Name Server 44

Verifying the Name Server 45

Removing the Name Server 46

Adding User 48

Remove User 49

Viewing User Information 51

Viewing Logged In User Information 52

---

**CHAPTER 3****Configuring Notifications 55**

Prerequisites for Configuring Notifications 55

Restrictions for Configuring Notifications 55

Information About Notifications 56

Types of Notifications 56

How to Configure Notifications 57

Setting Password on the Controller 57

Viewing Notifications 57

Configuring Notifications 59

Registering for HeartBeat Notification 61

Registering for Config Change Trap Notification 63

Registering for Asynchronous Failure Notification	65
Listing Notifications	67
Deleting Notifications	68

**CHAPTER 4****Zero Touch Provisioning 71**

Restrictions for ZTP	72
ZTP Activation	72
Step 1—Start ZTP	74
Step 2—Reload Defaults	74
Step 3—Get Management VLAN Configuration	74
ZTP for Cisco ME 1200 NIDs in Linear Topology	76
ZTP for Cisco ME 1200 NIDs in a Ring Topology	77
Step 4—Start the DHCP Client on the VLAN Interface	77
Step 5—Download and Apply the Initial Configuration	78
Step 6—Reverse DNS Lookup to Obtain Hostname	79
Step 7—Download and Apply Specific Configuration	79
Step 8—Copy Running Configuration to Startup Configuration	80

**CHAPTER 5****Configuring Synchronous Ethernet 81**

Prerequisites for Configuring SyncE	81
Restrictions for Configuring SyncE	81
Information About Synchronous Ethernet	82
Understanding SyncE Protocols	83
Understanding SyncE Clocks	83
How to Configure SyncE	84
Configuring SyncE Global Defaults	84
Viewing SyncE Global Defaults	85
Configuring SyncE Clock Defaults	87
Viewing SyncE Clock Defaults	88
88	
Configuring the Clock Source	90
Configuring Clock Source	90
Viewing Clock Configurations	91
Overwriting the Quality Level (QL)	93
Understanding Clock Redundancy	95

Configuring Clock Redundancy	95
Understanding SyncE Timers	98
Configuring SyncE Timers	99
Viewing SyncE Timers	102
Understanding ANEG Mode	103
Configuring ANEG mode	103
Verifying SyncE Status	105

**CHAPTER 6****Configuring Ethernet Virtual Connections 107**

How to Configure Ethernet Virtual Circuit	108
Configuring Ethernet Virtual Circuit	108
Creating a Policer	109
110	
EVC Control Entry (ECE) Configuration	111
Configuring ECE Sample Rule 1	111
Configuring the ECE Sample Rule 2	114
Configuring ECE Sample Rule 3	115
Configuring ECE Sample Rule 4	115
Configuring ECE Sample Rule 5	116
Ethernet Private Line or E-LAN	116
Configuring ECE for E-LAN Between Two UNI and NNI Ports	117
Configuring EVC for E-LAN	118
Ethernet Virtual Private Line	119
Configuring ECE For EVPL Service	119
Configuring EVC For EVPL Service	119
Other Commands For EVC Configuration	120
Configuring ECE_v3	124

**CHAPTER 7****Configuring Switch Ports 131**

How To Configure Switch Ports	131
Creating Layer 2 VLANs	131
Verifying Layer 2 VLAN Configuration	132
Deleting Layer 2 VLANs	133
Creating Layer 3 VLANs	134
Creating Layer 3 VLANs With Dynamic IP Address	136

Verifying Layer 3 VLANs With Dynamic IP Address	137
Deleting Layer 3 VLANs	137
Creating a VLAN Translation Group	139
Deleting VLAN Translation Groups	140
Verifying VLAN Translation Group	141
Creating VLAN Mapping	142
Deleting VLAN Mapping	144
Modifying Switch Ports	145
Deleting Switch Ports	148
Verifying Switch Port Details	149

---

**CHAPTER 8****Configuring Spanning-Tree Protocol 151**

Prerequisites for Configuring Spanning-Tree Protocol	151
Information About Spanning-Tree Protocol	151
Understanding Spanning-Tree Modes and Protocols	154
Understanding MSTP Configuration	154
Understanding RSTP	156
Understanding BPDU Guard and BPDU Filtering	156
How to Configure Spanning-Tree Protocol	157
Configuring Spanning-tree Aggregation Port Configurations	157
Viewing Spanning-Tree Aggregation Port Configurations	160
Configuring Spanning-Tree Global Configurations	161
Viewing Spanning-Tree Global Configurations	164
Configuring Spanning-Tree Port Configurations	165
Viewing Spanning-Tree Protocol Port Configurations	168
Verifying Spanning-Tree Status	170
Verifying Spanning-Tree Summary	171
Clearing Spanning-Tree Statistics	173
Clearing Spanning-Tree Detected Protocols	174

---

**CHAPTER 9****Configuring Link Aggregation Control Protocol (LACP) 177**

Information About LACP	177
IEEE 802.3ad Link Bundling	177
How to Configure LACP	179
Provisioning the Controller to Configure LACP	179

Configuring LACP Globally on the Controller	180
Configuring LACP Defaults Globally on the Controller	182
Configuring LACP at Port level on the Controller	183
Configuring Default LACP Configuration at Port level on the Controller	185
Clearing LACP Statistics on the Controller	186
Negating LACP Configuration and Restoring Defaults	188
Viewing the Global LACP Configuration on the controller	188
Viewing the Default LACP Configuration on the controller	190
Viewing the LACP Configuration at Port Level on the Controller	191
Viewing the Default LACP Configuration at Port Level on the controller	192
Verifying LACP	193
Viewing the LACP System ID Information on the controller	193
Viewing the LACP Load Balance Information on the controller	195
Viewing the LACP Internal State Information on the controller	196
Viewing the LACP Neighbors Status Information on the controller	198
Viewing the LACP Statistics on the controller	199

**CHAPTER 10****Provisioning Link Layer Discovery Protocol 203**

How To Configure LLDP	204
Setting LLDP Global Configuration	204
Setting LLDP Configuration to Default	206
Setting LLDP Port Configuration	207
Setting LLDP Port Configuration to Default	209
Other Commands For LLDP Configuration	210

**CHAPTER 11****Configuring SNMP 213**

Prerequisites for Configuring SNMP	213
Information About SNMP	213
How to Provision SNMP	214
Configuring and Retrieving Default SNMP Configurations	214
Configuring SNMPv2c Community Parameters	215
Configuring SNMPv3 Community	218
Configuring Trap Destination	220
Configuring an Entry in SNMP View List	222
Creating an SNMPv3 User	224



Creating an SNMP User 226

---

**CHAPTER 12****Configuring PTP 229**

Prerequisites for Configuring PTP 229

Information About PTP 229

How to Provision PTP 229

Configuring Slave IPv4 229

Enabling PTP on a Port 232

Enabling or Disabling Microsemi APR 235

Verifying PTP 238

Additional References 240

---

**CHAPTER 13****Configuring ACLs 241**

Prerequisites for Configuring ACLs 241

Restrictions for Configuring ACLs 241

How to Configure ACLs 242

Configuring ACL Rules using the Controller 242

Creating ACL Global Configurations 243

Applying ACL Configuration to the Ports 245

Viewing ACL Global Configurations 246

Removing ACL Global Configurations 248

Removing ACL Port Configurations 249

Verifying ACL Configurations 250

---

**CHAPTER 14****Configuring Quality of Service (QoS) 253**

How to Configure QoS 254

Provisioning the Controller to Configure QoS 254

Configuring QoS Input Policy Features Globally on the Controller 255

Configuring QoS Input Policy Features at Port level on the Controller 259

Configuring QoS Output Policy Features Globally on the Controller 262

Configuring QoS Output Policy Features at Port level on the Controller 266

Configuring QoS Control Entry (QCE) on the Controller 269

Configuring QoS Control Entry (QCE) Control Actions on the Controller 270

Configuring QCE Match Ingress Parameters on the Controller 272

Configuring QCE Control Ingress Match Frame Type Parameter on the Controller 273

Configuring QCE Control Ingress Inner Tag Match Parameter on the Controller	277
Configuring QCE Control Ingress MAC Params Parameter on the Controller	279
Configuring QCE Control Ingress Outer Tag Match Parameter on the Controller	281
Configuring QCE Control Ingress Ports Parameter on the Controller	283
Configuring System QoS on the Controller	285
Configuring Hierarchical QoS on the Controller	287
Configuring EVC Hierarchical QoS Policy on the Controller	289
Reordering QoS Control Entry (QCE) on the Controller	290
Deleting QoS Control Entry (QCE) on the Controller	292
Deleting HQoS ID on the Controller	293
Negating QoS and Restoring Defaults	294
Viewing QoS Input Policy Global Features on the Controller	295
Viewing QoS Input Policy Features at Port level on the Controller	297
Viewing QoS Output Policy Global Features on the Controller	298
Viewing QoS Output Policy Features at Port level on the Controller	299
Viewing QoS Control Entry (QCE) Configuration on the Controller	301
Viewing System QoS Settings on the Controller	302
Viewing HQoS ID on the Controller	304
Viewing EVC HQoS ID on the Controller	305
Displaying the QCE List on the Controller	306
Displaying QoS Queue Statistics on the Controller	307
Displaying the Hierarchical QoS ID List on the Controller	308

---

**CHAPTER 15**
**Configuring Ethernet OAM, Link OAM, and CFM 311**

Understanding the Ethernet OAM Protocol	311
OAM Features	312
Setting the Alarm Indication Signal (AIS)	312
Setting Delay Measurement	313
Updating Delay Measurement	315
Setting Loss Measurement	316
Setting Lock Signal	317
Setting Link Trace	319
Setting Loopback	320

Setting Test Signal	321
Updating Test Signal	323
Understanding Link OAM	324
Setting OAM Port Operations	324
Setting Link OAM Event Configuration	325
Setting Remote Loopback Start And Stop	327
Understanding Connectivity Fault Management	328
CFM Domain	328
Maintenance Associations and Maintenance Points	328
Adding Continuity Check and Automatic Protection Switching	329
Adding Peer MEP IDs	330
Adding Client Configuration	331
Creating MEP Configuration	333
Updating MEP Configuration	334
Configuration Example: Loopback	335
Configuration Example: Loss Measurement–Single Ended	337
Configuration Example: Loss Measurement–Dual Ended	341

---

**CHAPTER 16**
**Configuring Performance Monitoring 347**

Restrictions for Configuring Performance Monitoring	347
ITU-T Y.1731 Performance Monitoring in a Service Provider Network	347
Frame Delay and Frame-Delay Variation	348
How to Configure Performance Monitoring	349
Provisioning the Controller to Configure Performance Monitoring	349
Configuring Performance Monitoring with Default Configuration	351
Configuring Alarm Information Signal (AIS) on the Controller	352
Configuring Delay Measurement (DM) on the Controller	354
Configuring Loss Measurement (LM) on the Controller	357
Configuring Lock Signal on the Controller	359
Configuring LoopBack on the Controller	361
Configuring Link Trace on the Controller	363
Configuring Test Signal on the Controller	365
Viewing Alarm Information Signal (AIS) on the Controller	367
Viewing Delay Measurement (DM) Statistics on the Controller	368
Viewing Loss Measurement (LM) Statistics on the Controller	371

Viewing Lock Signal on the Controller	372
Viewing Loopback State on the Controller	373
Viewing Link Trace State on the Controller	375
Viewing Test Signal Statistics on the Controller	377
Updating Delay Measurement (DM) on the Controller	379
Updating Test Signal Parameters on the Controller	381
Clearing MEP Statistics on the Controller	382
Negating Performance Monitoring Configuration and Restoring Defaults	384
Setting Performance Monitoring Parameters	385
Viewing Performance Monitoring Parameters	388
Verifying Performance Monitoring	389

**CHAPTER 17****Configuring EPS 391**

Prerequisites for Configuring EPS	391
Information About EPS	391
How to Provision EPS	392
Creating MEP on NID-1	392
Creating MEP on NID-2	397
Configuring Bidirectional EPS on NID-2	402
Configuring Bidirectional EPS on NID-1	405
Configuring Unidirectional EPS on NID-2	408
Configuring Bidirectional EPS on NID-2	411
Displaying EPS	414
Clearing EPS Wait-To-Restore Timer	416
Updating EPS	417
Deleting EPS	418
Deleting EPS Command	420
Deleting EPS Hold Off Timer	421
Deleting EPS Revertive Timer	423
Verifying EPS	424

**CHAPTER 18****Configuring ERPS 427**

Prerequisites for Configuring ERPS	427
Restrictions for Configuring ERPS	427
Information About ERPS	427

How to Provision ERPS	428
Creating VLAN on NID-1	428
Creating MEP on Port 1 of NID-1	430
Creating MEP on Port 2 of NID-1	433
Configuring ERPS on NID-1	436
Creating VLAN on NID-2	438
Creating MEP on Port 1 of NID-2	440
Creating MEP on Port 2 of NID-2	443
Configuring ERPS on NID-2	446
Configuring ERPS on the UPE NID Controller	449
Verifying ERPS	452

---

**CHAPTER 19**

<b>Configuring L2CP</b>	<b>455</b>
Prerequisites for Configuring L2CP	455
Restrictions for Configuring L2CP	455
Information About L2CP	456
Configuring L2CP Using a UPE NID Controller	456

---

**CHAPTER 20**

<b>Configuring MAC Security</b>	<b>469</b>
Prerequisites for Configuring MAC Security	469
Information About MAC Security	469
How to Provision MAC Security	470
Configuring Port Security	470
Configuring MAC Security	472
Clearing MAC Address Table	474
Verifying MAC Security	475

---

**CHAPTER 21**

<b>Configuring NTP</b>	<b>487</b>
Prerequisites for Configuring NTP	487
Restrictions for Configuring NTP	487
Information About NTP	487
Network Time Protocol	487
How to Configure NTP	489
Provisioning the Controller to Configure NTP	489
Configuring NTP on the Controller	490

Configuring NTP with Default Configuration	491
Viewing the NTP Configuration	492
Deleting the NTP Configuration	493
Verifying NTP	494

---

**CHAPTER 22**

<b>Configuring Storm Control</b>	<b>495</b>
Restrictions for Configuring Storm Control	495
Information on Storm Control	495
How to Configure Storm Control	496
Provisioning the Controller to Configure Storm Control	496
Configuring Storm Control on the Controller	497
Retrieving the Storm Control Configuration	499
Displaying the Storm Control Configuration	500
Negating Storm Control Configuration and Restoring Defaults	502
Deleting the NTP Configuration	503

---

**CHAPTER 23**

<b>Configuring Syslog</b>	<b>505</b>
Prerequisites for Configuring Syslog	505
Information About Syslog	505
Enabling Syslog	506
Clearing Syslog	507
Verifying Syslog	509

---

**CHAPTER 24**

<b>Configuring Dedicated Debug Shell</b>	<b>511</b>
Prerequisites for Directly Accessing Cisco ME 1200 NID	511
Information About Dedicated Debug Shell	511
How to Provision Dedicated Debug Shell	512
Configuring the UPE NID Controller to Directly Access a Cisco ME 1200 NID	512
Directly Accessing the Cisco ME 1200 NID Using a Dedicated Debug Shell	512

---

**CHAPTER 25**

<b>Configuring SPAN</b>	<b>515</b>
Prerequisites for Configuring SPAN	515
Restrictions for Configuring SPAN	515
Information About SPAN	516
How to Provision SPAN	516

Enabling SPAN Globally to Start a Monitoring Session	516
Configuring SPAN Source Interface	517
Configuring SPAN Source CPU	519
519	
Configuring SPAN Source VLAN	521
521	
Configuring SPAN Destination	522
Deleting SPAN Source Configuration	523
Deleting SPAN Destination Configuration	524
Verifying Diagnostics POST	525
Additional References	526

---

**CHAPTER 26**
**Configuring RSPAN 529**

Prerequisites for Configuring RSPAN	529
Restrictions for Configuring RSPAN	529
Information About RSPAN	530
How to Provision RSPAN	530
Enabling SPAN Globally to Start a Monitoring Session	530
Configuring SPAN Source Interface on NID-1	531
Configuring Destination VLAN on NID-1	532
Configuring Source VLAN on NID-2	533
Configuring Destination Interface on NID-2	535
Deleting RSPAN Source Configuration on NID-2	536
Deleting RSPAN Destination Configuration on NID-1	537
Verifying RSPAN	537
Additional References	538

---

**CHAPTER 27**
**Configuring RFC 2544 541**

Prerequisites for Configuring RFC 2544	541
Restrictions for Configuring RFC 2544	541
Information About RFC 2544	542
How to Provision RFC 2544	544
Disabling LLDP Port on NID-1	544
Creating Layer 2 VLANs on NID-1	546
Assigning VLANs to Ports on NID-1	547

Disabling Spanning-Tree Protocol on NID-1	548
Disabling LLDP Port on NID-2	551
Creating Layer 2 VLANs on NID-2	552
Assigning VLANs to Ports on NID-2	553
Disabling Spanning-Tree Protocol on NID-2	555
Creating Port MEP Profile on NID-1	557
Creating Traffic Test Loop on Destination Port on NID-2	559
Disabling Loop Protection on Destination Port on NID-2	561
Setting RFC 2544 Reporting Parameters on NID-1	562
Displaying RFC 2544 Profile and Report on NID-1	564
Creating VLAN Profile on NID-1	566
Getting RFC 2544 Profile for VLAN on NID-1	568
Setting RFC 2544 Reporting Parameters for VLAN on NID-1	570
Displaying RFC 2544 Report for VLAN on NID-1	572
Deleting RFC 2544 Profile on NID-1	574
Modifying RFC 2544 with Frameless and Backtoback	575
Getting RFC 2544 Profile after Modifying Frameless and Backtoback	579
Verifying RFC 2544	581
Additional References	582

**CHAPTER 28****Configuring sFlow 583**

Prerequisites for Configuring sFlow	583
Restrictions for Configuring sFlow	583
Information About sFlow	583
How to Provision sFlow	584
Enabling sFlow Globally	584
Enabling sFlow on a Port	586
Getting Current Global sFlow Values	589
Getting Current Port Specific sFlow Values	591
Clearing sFlow Statistics	593
Verifying sFlow	594
Additional References	596

**CHAPTER 29****Configuring UDLD 599**

Prerequisites for Configuring UDLD	599
------------------------------------	-----



Restrictions for Configuring UDLD	599
Information About UDLD	599
How to Provision UDLD	600
Enabling UDLD Mode Globally	600
Disabling UDLD Mode Globally	602
Enabling UDLD Mode on a Port	603
Disabling UDLD Mode on a Port	605
Getting Current Global UDLD Values	607
Getting Current Port Specific UDLD Values	608
Verifying UDLD	611
Additional References	613

---

**CHAPTER 30**
**Configuring Flex Links 615**

Prerequisites for Configuring Flex Links	615
Restrictions for Configuring Flex Links	615
Information about Flex Links	616
MAC Address Table Move Update	616
How to Configure Flex Links	617
Configuring Flexlink Ports	617
Provisioning Flex Link Ports	618
Viewing Flex Link Configuration at Port Level on the NID	619
Viewing Flexlink Active Port Configuration	620
Enabling macMoveupdate on Active Port	622
Viewing macMoveUpdate Active Port Configuration	623

---

**CHAPTER 31**
**Configuring Y.1564 625**

Prerequisites for Configuring Y.1564	625
Information About Y.1564	625
Configuring New Y.1564 Profile	626
Getting the Profile Configuration using Profile Name	628
Viewing Profile Names	630
Managing Y.1564 Profile Names	631
Configuring Y.1564 Test Parameters	632
Viewing Y.1564 Test Parameters	633
Saving Y.1564 Test Report	634

Deleting Y.1564 Test Report 635

---

**CHAPTER 32****Configuring LST 637**

- Prerequisites for Configuring LST 637
- Understanding How Link State Tracking Works 637
  - Configuring mepTLV 638
  - Checking ccmTLV Configuration 639
  - Configuring LST 640
  - Checking LST Configuration 641
  - Viewing LST Configuration 642

---

**CHAPTER 33****Configuring Security Access Control Lists 645**

- Creating Access Control Entry 646
- Configuring Rate Limiter 654
- Applying ACL to Ports 655
- Viewing Access Control Entry 658
- Viewing ACL Rate Limiter 660
- Viewing ACL Ports 662

---

**CHAPTER 34****Multicast Vlan Register 665**

- IPMC Profile 665
  - Configuring IPMC and MVR Global administration 666
  - Creating IP Multicaste Entry Range 667
  - Configuring IPMC Profile 669
  - Configuring MVR Global 671
  - Configuring MVR Port 673
  - Viewing IPMC and MVR Global configuration 674
  - Viewing IPMC Entry Range 676
  - Viewing IPMC Profile 677
  - Viewing MVR Global Configuration 678
  - Viewing MVR Port Configuration 680

---

**CHAPTER 35****Double-tagged management VLAN using IVID parameter 683**

- Configuring Ethernet Virtual Circuit V2 684
- Configuring ECE V3 685

---

**CHAPTER 36****Configuring LAG Aggregation 691**

Viewing LAG Aggregation Commands on the controller . 692

Configuring LAG Traffic Distribution Mode 694

Viewing LAG Traffic Distribution Mode 695

Viewing Static Aggregation Group 696





## Preface

---

This preface contains information about the Cisco ME 1200 Series Carrier Ethernet Access Device.

- [Audience, page xxi](#)
- [Document Conventions, page xxi](#)
- [Related Documentation, page xxiii](#)

## Audience

This guide is for the person configuring the Cisco ME 1200 Series Carrier Ethernet Access Devices, hereafter known as Cisco ME 1200 NID.

## Document Conventions

This document uses the following conventions:

Convention	Description
^ or Ctrl	Both the ^ symbol and Ctrl represent the Control (Ctrl) key on a keyboard. For example, the key combination <b>^D</b> or <b>Ctrl-D</b> means that you hold down the Control key while you press the D key. (Keys are indicated in capital letters but are not case sensitive.)
<b>bold font</b>	Commands and keywords and user-entered text appear in <b>bold font</b> .
<i>Italic font</i>	Document titles, new or emphasized terms, and arguments for which you supply values are in <i>italic font</i> .
Courier font	Terminal sessions and information the system displays appear in <code>courier font</code> .
<b>Bold Courier font</b>	Bold Courier font indicates text that the user must enter.
[x]	Elements in square brackets are optional.

Convention	Description
...	An ellipsis (three consecutive nonbolded periods without spaces) after a syntax element indicates that the element can be repeated.
	A vertical line, called a pipe, indicates a choice within a set of keywords or arguments.
[x   y]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
{x   y}	Required alternative keywords are grouped in braces and separated by vertical bars.
[x {y   z}]	Nested set of square brackets or braces indicate optional or required choices within optional or required elements. Braces and a vertical bar within square brackets indicate a required choice within an optional element.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
<>	Nonprinting characters such as passwords are in angle brackets.
[ ]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

### Reader Alert Conventions

This document uses the following conventions for reader alerts:



#### Note

Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the manual.



#### Tip

Means *the following information will help you solve a problem*.



#### Warning

Means *reader be warned*. In this situation, you might perform an action that could result in bodily injury.

## Related Documentation

These documents provide information about the switches and are available from this Cisco.com site:

<http://www.cisco.com/c/en/us/support/switches/me-1200-series-carrier-ethernet-access-devices/tsd-products-support-general-information.html>

- *Release Notes for the Cisco ME 1200 Series Carrier Ethernet Access Devices*



---

**Note** Before installing, configuring, or upgrading the switch, see the release notes on Cisco.com for the latest information.

---

- *Cisco ME 3800x and ME 3600x Switches Software Configuration Guide*
- *Cisco Regulatory Compliance and Safety Information for Cisco ME 1200 Series Carrier Ethernet Access Devices*

For information on supported MIBs, see <ftp://ftp.cisco.com/pub/mibs/ME1200-MIBS/>.







# Configuration Management

---

This chapter helps you to get started and describes how to configure the initial switch configuration for the Cisco ME 1200 NID. This chapter also describes how to manage Cisco ME 1200 NID configurations.

- [Prerequisites for Managing Configurations, page 1](#)
- [Restrictions for Managing Configurations, page 1](#)
- [Information About Configuration Management, page 1](#)
- [Getting Started, page 3](#)
- [How to Manage Configurations, page 17](#)

## Prerequisites for Managing Configurations

- You must know the default IP address of the Cisco ME 1200 NID device. It is 192.0.2.1.
- NID must be added to the controller.
- NID must be accessible from the controller.

## Restrictions for Managing Configurations

- The option **show run** command is not supported.

## Information About Configuration Management

Configuration management stores the configurations. For more information, see [Assigning the Switch IP Address and Default Gateway](#).

### Understanding the Boot Process

The Cisco ME 1200 NID device is not connected to any network soon after it is unpacked. To start your Cisco ME 1200 NID, you need to follow the procedures in the hardware installation guide about installing and

powering on the switch. This document describes login and setting up the initial configuration (IP address, subnet mask, default gateway, secret and Telnet passwords, and so forth) of the Cisco ME 1200 NID.

The boot loader provides access to the flash file system before the operating system is loaded. Normally, the boot loader is used only to load, uncompress, and launch the operating system. After the boot loader gives the operating system control of the CPU, the boot loader is not active until the next system reset or power-on.

Before you can assign switch information, make sure you have connected a PC or terminal to the console port, and configured the PC or terminal-emulation software baud rate and character format to match these of the switch console port:

- Baud rate default is 115200.
- Data bits default is 8.
- Stop bits default is 1.
- Parity settings default is none.

**Table 1: Default Boot Configuration**

Feature	Default Setting
Operating system software image	<p>The device attempts to automatically boot the system using information in the BOOT environment variable. If the variable is not set, the Cisco ME 1200 NID attempts to load and execute the first executable image it can by performing a recursive, depth-first search throughout the flash file system.</p> <p>The Cisco IOS image is stored in a directory that has the same name as the image file (excluding the .bin extension).</p> <p>In a depth-first search of a directory, each encountered subdirectory is completely searched before continuing the search in the original directory.</p>
Configuration file	<p>Configured devices use the startup-config.xml file stored on the system board in flash memory.</p> <p>A new switch has no configuration file.</p>

### Initial Configuration

The initial configuration for the Cisco ME 1200 NID uses **interface vlan 1** command and 192.0.2.1 as the IP address. It also uses spanning-tree protocol for loop avoidance.

### Getting the Cisco ME 1200 NID Connected to the Controller

To get the Cisco ME 1200 NID connected to the controller, see [Step 1—Adding the Cisco ME 1200 NID to the Controller](#)

### Specifying the Filename to Read and Write the System Configuration

By default, the Cisco IOS software uses the file startup-config.xml file to read and write a nonvolatile copy of the system configuration. To copy the running configurations to the startup-config, see [Step 10—Creating Startup-config.xml File](#).

# Getting Started

Perform the following tasks to get started with Cisco ME 1200 NID:

- 1 Add the Cisco ME 1200 NID using the **platform nid-controller** command on the controller.
- 2 Verify if the NID is added on the controller using the **show platform nid-controller** command on the controller.
- 3 Create VLAN on the controller.
- 4 Create Layer 2 VLANs on the NID.
- 5 Create Layer 2 VLANs on the controller (to access the NID on a different VLAN other than VLAN 1).

**Note**

Steps 1 through 5 are performed to access Cisco ME 1200 NID through the Controller with the default factory IP address 192.0.2.1. The steps 1 to 5 are mandatory and are sufficient to establish the initial connectivity between the controller and the Cisco ME 1200 NID.

Perform the following steps to configure a switchport as Trunk and to establish connectivity on a different switch virtual interface (SVI). You can also configure default IP route to reach various servers.

**Note****Prerequisite for configuring Steps 6 through 10**

1. The controller should be configured with a different VLAN other than VLAN 1.
2. The configuration tasks are explained assuming the controller interface 0/1 is connected to Cisco ME 1200 NID 1/1. Change the interface configurations as applicable.
- 6 Modify switchport mode as Trunk on the NID.
- 7 Create Layer 3 VLANs on the NID.
- 8 Create Layer 3 VLANs on the controller.
- 9 Configure Default IP Route .
- 10 Create Startup-config.xml file.

## Step 1—Adding the Cisco ME 1200 NID to the Controller

**Note**

Effective Cisco IOS Release 15.4(2)SN, Cisco ME3600 switch will act as controller for the Cisco ME 1200 NID.

Effective Cisco IOS Release 15.5(1)SN, the Cisco ASR 920 Series Routers can also act as controller for the Cisco ME 1200 NID.

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>platform nid-controller add 192.0.2.1</b>  <b>Example:</b> Switch(config)# platform nid-controller add 192.0.2.1	Adds the Cisco ME 1200 NID using the <b>platform nid-controller</b> command on the controller. The Cisco ME 1200 NID is shipped with the factory default IP address 192.0.2.1.
Step 3	<b>end</b>  <b>Example:</b> Switch(config)# end	Exits to the Privileged EXEC mode.

**Configuration Example**

```
Switch# configure terminal
Switch(config)# platform nid-controller add 192.0.2.1
Switch(config)# end
```

**Step 2—Verifying the Cisco ME 1200 NID Addition onto the Controller**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>show platform nid-controller nids</b>  <b>Example:</b> Switch(config)# show platform nid-controller nids	Displays the Cisco ME 1200 NID IP addresses that are added to the controller.
Step 3	<b>end</b>  <b>Example:</b> Switch(config)# end	Exits to the Privileged EXEC mode.

**Configuration Example**

```
Switch# configure terminal
Switch# show platform nid-controller nids
```

NID_ID	MAC Address	IP Address	Lease	Physical Port	VLAN/BD	TFTP Server	Type
1	n/a	7.25.16.63	n/a	n/a	n/a	n/a	static
2	n/a	7.25.17.223	n/a	n/a	n/a	n/a	static

```
Switch(config)# end
```

**Step 3—Creating VLAN on the Controller****DETAILED STEPS**

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>interface vlan <i>vlan_id</i></b>  <b>Example:</b> Switch(config)# interface vlan 1	Creates VLAN 1.
<b>Step 3</b>	<b>ip address <i>ip_address subnet-mask</i></b>  <b>Example:</b> Switch(config-if)# ip address 192.0.2.2 255.255.255.0	Adds the IP address 192.0.2.2 and the subnet mask to the VLAN 1.  <ul style="list-style-type: none"> <li>• <b>ip_address</b>—Enter the IP address 192.0.2.2.</li> <li>• <b>subnet-mask</b>—Enter the IP subnet mask.</li> </ul>
<b>Step 4</b>	<b>end</b>  <b>Example:</b> Switch(config-if)# end	Exits the configure terminal mode.

**Configuration Example**

```
Switch# configure terminal
Switch(config)# interface vlan 1
Switch(config-if)# ip address 192.0.2.2 255.255.255.0
Switch(config-if)# end
```

**What to Do Next**

Ping the IP address 192.0.2.1 to check for reachability.

## Step 4—Creating Layer 2 VLANs on the NID

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters the global configuration mode.
<b>Step 2</b>	<b>controller nid slot/port</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionPortVlanPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionPortVlanPortType	Enters the ProvisionPortVlanPortType mode.
<b>Step 4</b>	<b>createVlanCommand createVlanReq vlan_list vlan_list</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createVlanCommand createVlanReq vlan_list 100-105	Creates the VLAN list. The valid values are from 1 to 4095.
<b>Step 5</b>	<b>createVlanCommand review</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createVlanCommand review	Displays the configuration.
<b>Step 6</b>	<b>createVlanCommand commit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createVlanCommand commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>ProvisionPortVlanPortTypeshow</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# showVlans showVlanRequest vlan-id 1 Switch(config-controller-ProvisionPortVlanPortType)# showVlans review	Displays the Vlan lists.
<b>Step 8</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# exit	Exits to the config-controller mode.

**Configuration Example**

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionPortVlanPortType
Switch(config-controller-ProvisionPortVlanPortType)# createVlanCommand createVlanReq vlan_list
100-105
Switch(config-controller-ProvisionPortVlanPortType)# createVlanCommand review

Commands in queue:
    createVlanCommand createVlanReq vlan_list 100-105

Switch(config-controller-ProvisionPortVlanPortType)# createVlanCommand commit

    Vlan Creation Commit Success!!!

Switch(config-controller-ProvisionPortVlanPortType)# exit
```

## Step 5—Creating Layer 2 VLANs on the Controller

**DETAILED STEPS**

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>vlan <i>vlan_id</i></b>  <b>Example:</b> Switch(config)# vlan 10	Creates a different VLAN other than VLAN 1 to access the NID.
<b>Step 3</b>	<b>end</b>  <b>Example:</b> Switch(config-vlan)# end	Exits to the Privileged EXEC mode.

**Configuration Example**

```
Switch# configure terminal
Switch(config)# vlan 10
Switch(config-vlan)# exit
```

## Step 6—Modifying Switchport Mode as Trunk

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionPortVlanPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionPortVlanPortType	Enters the ProvisionPortVlanPortType mode.
<b>Step 4</b>	<b>modifySwPort modifySWPortConfig interface interface_id</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig interaface 4	Configure the switchport configuration on the defined interface.
<b>Step 5</b>	<b>modifySwPort modifySWPortConfig mode trunk {allowed vlan {add {all   vlan_list vlan_list}   remove {all   vlan_list vlan_list}}   {native vlan vlan_list}}</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig mode trunk allowed vlan add vlan_list 100-105	Sets the mode to TRUNK. <ul style="list-style-type: none"> <li>• <b>allowed</b>—Sets the allowed VLAN characteristics when interface is in trunk mode.</li> <li>• <b>add</b>—Adds either all VLANs or specified VLANs to the current list.</li> <li>• <b>remove</b>—Removes either all VLANs or specified VLANs from the current list.</li> <li>• <b>vlan_id</b>—The VLAN ID. The valid values are from 0 to 4095.</li> </ul>
<b>Step 6</b>	<b>modifySwPort review</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort review	Displays the configuration.
<b>Step 7</b>	<b>modifySwPort commit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort commit	Sends the configuration to the NID.



	Command or Action	Purpose
<b>Step 8</b>	<b>ProvisionPortVlanPortTypeshow</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# showswPort showSwPortReq all Switch(ProvisionPortVlanPortType)# showswPort review	Displays the commit, flush or review commands in queue for switchport configuration.
<b>Step 9</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# exit	Exits to the config-controller mode.

### Configuration Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionPortVlanPortType
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig
interaface 4
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig mode
trunk allowed vlan add vlan_list 100-105
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort review

Commands in queue:
  modifySwPort modifySWPortConfig interaface 4
  modifySwPort modifySWPortConfig mode trunk allowed vlan add vlan_list 100-105

Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort commit

  ModifySwPort_Output.modifySwPortConfigResp = 0

  Modify SwitchPort Commit Success!!!

Switch(config-controller-ProvisionPortVlanPortType)# exit

```

## (Optional Step) Configuring Native VLAN

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.

	Command or Action	Purpose
<b>Step 3</b>	<b>ProvisionPortVlanPortType</b>  <b>Example:</b> Switch (config-controller)# ProvisionPortVlanPortType	Enters the ProvisionPortVlanPortType mode.
<b>Step 4</b>	<b>modifySwPort modifySWPortConfig mode trunk {allowed   native vlan vlan_id}</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig mode trunk native vlan 110	Assigns a native VLAN. Changing native VLAN is not always necessary. The device may lose connectivity if you change the native VLAN. You cannot access the NID by any way, if you change the native VLAN unless the native VLAN is same on both, the NID and the controller.
<b>Step 5</b>	<b>modifySwPort review</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort review	Displays the configuration.
<b>Step 6</b>	<b>modifySwPort commit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# exit	Exits to the config-controller mode.

### Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionPortVlanPortType
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig mode
trunk native vlan 110
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort review

Commands in queue:
  modifySwPort modifySWPortConfig mode trunk native vlan 110

Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort commit

  ModifySwPort_Output.modifySwPortConfigResp = 0

  Modify SwitchPort Commit Success!!!

Switch(config-controller-ProvisionPortVlanPortType)# exit

```

## Step 7—Creating Layer 3 VLANs on the NID

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>ProvisionPortVlanPortType</b>  <b>Example:</b> Switch (config-controller)# ProvisionPortVlanPortType	Enters the ProvisionPortVlanPortType mode.
Step 4	<b>createIntVlan createIntVlanReq vlan_id vlan_id</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan createIntVlanReq vlan_id 22	Creates the layer 3 VLAN.
Step 5	<b>createIntVlan createIntVlanReq {address {ipv4 {dhcp   ipv4_address}   ipv6 ipv6_address ipv6_address}   vlan-id vlan_id}</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan createIntVlanReq address ipv4 ipv4_address address 22.22.22.3 Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan createIntVlanReq address ipv4 ipv4_address mask 255.255.255.0 Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan createIntVlanReq address ipv6 ipv6_address 2001:4::1/64	Creates the interface VLAN on the specified IPv4 or IPv6 address, or VLAN ID.
Step 6	<b>createIntVlan review</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan review	Displays the configuration.
Step 7	<b>createIntVlan commit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan commit	Sends the configuration to the NID.

	Command or Action	Purpose
Step 8	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# exit	Exits to the config-controller mode.

### Configuration Example

Example 1: IPv4

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionPortVlanPortType
Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan createIntVlanReq vlan_Id
22
Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan createIntVlanReq address
ipv4 ipv4_address address 22.22.22.3
Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan createIntVlanReq address
ipv4 ipv4_address mask 255.255.255.0
Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan review
```

Commands in queue:

```
createIntVlan createIntVlanReq vlan_id 22
createIntVlan createIntVlanReq address ipv4 ipv4_address address 22.22.22.3
createIntVlan createIntVlanReq address ipv4 ipv4_address mask 255.255.255.0
```

```
Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan commit
```

```
CreateIntVlan_Output.createIntVlanResp = 0
```

```
Create Interface Vlan Commit Success!!!
```

```
Switch(config-controller-ProvisionPortVlanPortType)# exit
```

Example 2: IPv6

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionPortVlanPortType
Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan createIntVlanReq vlan_Id
22
Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan createIntVlanReq address
ipv6 ipv6_address 2001:4::1/64
Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan review
```

Commands in queue:

```
createIntVlan createIntVlanReq vlan_id 22
createIntVlan createIntVlanReq address ipv6 ipv6_address 2001:4::1/64
```

```
Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan commit
```

```
CreateIntVlan_Output.createIntVlanResp = 0
```

```
Create Interface Vlan Commit Success!!!
```

```
Switch(config-controller-ProvisionPortVlanPortType)# exit
```

## Step 8—Creating Layer 3 VLANs on the Controller

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>interface vlan <i>vlan_interface_number</i></b>  <b>Example:</b> Switch(config)# interface vlan 20	Creates the VLAN interface.
Step 3	<b>ip address <i>IP address IP subnet mask</i></b>  <b>Example:</b> Switch(config-if)# ip address 10.10.10.1 255.255.255.0	Assigns the IP address to the interface VLAN.
Step 4	<b>no shutdown</b>  <b>Example:</b> Switch(config-if)# no shutdown	Performs a no shutdown operation.
Step 5	<b>end</b>  <b>Example:</b> Switch(config-if)# end	Exits to the Privileged EXEC mode.

#### Configuration Example

```
Switch# configure terminal
Switch(config)# interface vlan 20
Switch(config-if)# ip address 10.10.10.1 255.255.255.0
Switch(config-if)# no shutdown
Switch(config-if)# end
```

## Step 9—Configuring IP Route

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.

	Command or Action	Purpose
<b>Step 2</b>	<b>controller nid</b> <i>I/NID_ID</i>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionPortVlanPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionPortVlanPortType	Enters the ProvisionPortVlanPortType mode.
<b>Step 4</b>	<b>setiproute setIpRouteReq {gateway_ip WORD   ipv4_address WORD   ipv4_mask WORD}</b>  <b>Example:</b>  Switch(config-controller-ProvisionNIDMgmtType)# setIpRoute setIpRouteReq ipv4_address 10.0.144.0  Switch(config-controller-ProvisionNIDMgmtType)# setIpRoute setIpRouteReq ipv4_mask 255.255.255.0  Switch(config-controller-ProvisionNIDMgmtType)# setIpRoute setIpRouteReq gateway_ip 10.0.0.1	Configures the IP Route. <ul style="list-style-type: none"> <li>• <b>gateway_ip</b>—Specifies the gateway IPv4 address. <ul style="list-style-type: none"> <li>◦ <i>WORD</i>—IPv4 address.</li> </ul> </li> <li>• <b>ipv4_address</b>—Specifies the IPv4 Network/Address. <ul style="list-style-type: none"> <li>◦ <i>WORD</i>—IPv4 Network/Address.</li> </ul> </li> <li>• <b>ipv4_mask</b>—Specifies the IPv4 mask. <ul style="list-style-type: none"> <li>◦ <i>WORD</i>—IPv4 mask.</li> </ul> </li> </ul>
<b>Step 5</b>	<b>setiproute review</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# setiproute review	Displays the configuration.
<b>Step 6</b>	<b>getiproute commit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# setiproute commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# exit	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionNIDMgmtType
Switch(config-controller-ProvisionNIDMgmtType)# setIpRoute setIpRouteReq ipv4_address
10.0.144.0
Switch(config-controller-ProvisionNIDMgmtType)# setIpRoute setIpRouteReq ipv4_mask
255.255.255.0
```

```

Switch(config-controller-ProvisionNIDMgmtType)# setIpRoute setIpRouteReq gateway_ip 10.0.0.1

Switch(config-controller-ProvisionNIDMgmtType)# setiproute review
Commands in Queue:
  setIpRoute setIpRouteReq ipv4_address 10.0.144.0
  setIpRoute setIpRouteReq ipv4_mask 255.255.255.0
  setIpRoute setIpRouteReq gateway_ip 10.0.0.1

Switch(config-controller-ProvisionNIDMgmtType)# setiproute commit

Setiproute Commit Success!!!

Switch(config-controller-ProvisionNIDMgmtType)# exit

```

## Step 10—Creating Startup-config.xml File

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionPortVlanPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionPortVlanPortType	Enters the ProvisionPortVlanPortType mode.
<b>Step 4</b>	<b>copyConfig copyConfigRequest {src {default-config   flash WORD   running-config   startup-config   tftp WORD}   dst {flash WORD   running-config   startup-config   tftp WORD}}</b>  <b>Example:</b>  Switch(config-controller-ProvisionConfigMGMTPortType)# copyConfig copyConfigRequest src running-config  Switch(config-controller-ProvisionConfigMGMTPortType)# copyConfig copyConfigRequest dst startup-config	Copies the configuration. <ul style="list-style-type: none"> <li>• <b>src</b>—Specifies the source location. <ul style="list-style-type: none"> <li>◦ <b>default</b>—Copies to the default-config file.</li> <li>◦ <b>flash</b>—Copies onto the flash. <ul style="list-style-type: none"> <li>◦ <b>WORD</b>—Filename. The format is flash:&lt;filename&gt;. For example, flash:ToTest.</li> </ul> </li> <li>◦ <b>running-config</b>—Copies to the running-config file.</li> <li>◦ <b>startup-config</b>—Copies to the startup-config file.</li> <li>◦ <b>tftp</b>—Copies to the TFTP server. <ul style="list-style-type: none"> <li>◦ <b>WORD</b>—TFTP filename. The format is tftp://server/path-and-filename. For example, tftp://10.0.0.221/ToTest.</li> </ul> </li> </ul> </li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>dst</b>—Specifies the destination location. <ul style="list-style-type: none"> <li>◦ <b>flash</b>—Copies onto the flash. <ul style="list-style-type: none"> <li>◦ <i>WORD</i>—Filename. The format is flash:&lt;filename&gt;. For example, flash:ToTest.</li> </ul> </li> <li>◦ <b>running-config</b>—Copies to the running-config file.</li> <li>◦ <b>startup-config</b>—Copies to the startup-config file.</li> <li>◦ <b>tftp</b>—Copies to the TFTP server. <ul style="list-style-type: none"> <li>◦ <i>WORD</i>—TFTP filename. The format is tftp://server/path-and-filename. For example, tftp://10.0.0.221/ToTest.</li> </ul> </li> </ul> </li> </ul>
<b>Step 5</b>	<b>copyConfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionConfigMGMTPortType) # copyConfig review	Displays the configuration.
<b>Step 6</b>	<b>copyConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionConfigMGMTPortType) # copyConfig commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionConfigMGMTPortType) # exit	Exits to the config-controller mode.

### Configuration Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionConfigMGMTPortType
Switch(config-controller-ProvisionConfigMGMTPortType) # copyConfig copyConfigRequest src
running-config
Switch(config-controller-ProvisionConfigMGMTPortType) # copyConfig copyConfigRequest dst
startup-config

Switch(config-controller-ProvisionConfigMGMTPortType) # copyConfig review
Commands in Queue:
  copyConfig copyConfigRequest src running-config
  copyConfig copyConfigRequest dst startup-config

```



```
Switch(config-controller-ProvisionConfigMGMTPortType)# copyConfig commit
CopyConfig Commit Success!!!
Switch(config-controller-ProvisionConfigMGMTPortType)# exit
```

# How to Manage Configurations

## Listing Configurations

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionPortVlanPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionPortVlanPortType	Enters the ProvisionPortVlanPortType mode.
<b>Step 4</b>	<b>listConfigs listConfigsReq</b>  <b>Example:</b> Switch(config-controller-ProvisionConfigMGMTPortType)# listConfigs listConfigsReq	Lists the configuration.
<b>Step 5</b>	<b>listConfigs review</b>  <b>Example:</b> Switch(config-controller-ProvisionConfigMGMTPortType)# listConfigs review	Displays the configuration.
<b>Step 6</b>	<b>listConfigs commit</b>  <b>Example:</b> Switch(config-controller-ProvisionConfigMGMTPortType)# listConfigs commit	Fetches listing of flash configuration on the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionConfigMGMTPortType)# exit	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionConfigMGMPortType
Switch(config-controller-ProvisionConfigMGMPortType)# listConfigs listConfigsReq
Switch(config-controller-ProvisionConfigMGMPortType)# listConfigs review

Commands in Queue:
  listConfigs listConfigsReq

Switch(config-controller-ProvisionConfigMGMPortType)# listConfigs commit

ListConfigs_Output.configFiles.files[0].fileName = 'default-config'
ListConfigs_Output.configFiles.files[0].fileSize = '  1100'
ListConfigs_Output.configFiles.files[0].timeStamp = '1970-01-01 00:00:00'
ListConfigs_Output.configFiles.files[0].permissions = 'r-'
ListConfigs_Output.configFiles.files[1].fileName = 'startup-config'
ListConfigs_Output.configFiles.files[1].fileSize = '  1552'
ListConfigs_Output.configFiles.files[1].timeStamp = '1970-01-01 00:04:44'
ListConfigs_Output.configFiles.files[1].permissions = 'rw'
ListConfigs_Output.configFiles.files[2].fileName = 'startup-config.xml'
ListConfigs_Output.configFiles.files[2].fileSize = ' 149016'
ListConfigs_Output.configFiles.files[2].timeStamp = '2014-03-25 10:15:58'
ListConfigs_Output.configFiles.files[2].permissions = 'rw'
ListConfigs_Output.configFiles.files[3].fileName = 'Totest'
ListConfigs_Output.configFiles.files[3].fileSize = '  149016'
ListConfigs_Output.configFiles.files[3].timeStamp = '2014-03-25 10:20:31'
ListConfigs_Output.configFiles.files[3].permissions = 'rw'

ListConfigs Commit Success!!!

Switch(config-controller-ProvisionConfigMGMPortType)# exit
```

## Verifying Configuration Version

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid <i>1/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionConfigMGMPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionConfigMGMPortType	Enters the ProvisionConfigMGMPortType mode.
<b>Step 4</b>	<b>showVersion showVersionReq</b>  <b>Example:</b> Switch(config-controller-ProvisionConfigMGMPortType)# showVersion showVersionReq	Displays the version.

	Command or Action	Purpose
Step 5	<b>showVersion review</b>  <b>Example:</b> Switch(config-controller-ProvisionConfigMGMTPortType) # showVersion review	Displays the configuration.
Step 6	<b>showVersion commit</b>  <b>Example:</b> Switch(config-controller-ProvisionConfigMGMTPortType) # showVersion commit	Sends the configuration to the NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionConfigMGMTPortType) # exit	Exits to the config-controller mode.

### Configuration Example



#### Note

The Active.Image is the current image and Alternative.Image is the backup image. While upgrading the image, you can choose to swap Active.Image with Alternate.Image.

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller) # ProvisionConfigMGMTPortType
Switch(config-controller-ProvisionConfigMGMTPortType) # showVersion showVersionReq
Switch(config-controller-ProvisionConfigMGMTPortType) # showVersion review

Commands in Queue:
  showVersion showVersionReq

Switch(config-controller-ProvisionConfigMGMTPortType) # showVersion commit

  ShowVersion_Output.showVersionResp.Active.Image = 'me1200-universal-mz.154-2.SN.dat'
  ShowVersion_Output.showVersionResp.Active.Version = 'ME1200 OS Software Build 15.4-2.SN'

  ShowVersion_Output.showVersionResp.Active.Date = 'Fri Mar 21 10:08:34 PDT 2014'
  ShowVersion_Output.showVersionResp.Alternative.Image = 'me1200-universal-mz.dat'
  ShowVersion_Output.showVersionResp.Alternative.Version = 'ME1200 OS Software Build
15.4-2.SN'
  ShowVersion_Output.showVersionResp.Alternative.Date = 'Fri Mar 21 05:56:50 PDT 2014'

  ShowVersion Commit Success!!!

Switch(config-controller-ProvisionConfigMGMTPortType) # exit
```

# Copying Configuration

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionConfigMGMPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionConfigMGMPortType	Enters the ProvisionConfigMGMPortType mode.
<b>Step 4</b>	<b>copyConfig copyConfigRequest {src {default-config   flash WORD   running-config   startup-config   tftp WORD}   dst {flash WORD   running-config   startup-config   tftp WORD}}</b>  <b>Example:</b> <pre>Switch(config-controller-ProvisionConfigMGMPortType)# copyConfig copyConfigRequest src running-config Switch(config-controller-ProvisionConfigMGMPortType)# copyConfig copyConfigRequest dst startup-config</pre> <p>In this example, the Source is the running-config, and the Destination is the startup-config. When you use these commands for the first time on the Cisco ME 1200 NID, the NID creates the startup-config.xml file in the flash, which is used during the device boot-up. When the device reloads for the first time, it uses the startup-config.xml file.</p>	Copies the configuration. <ul style="list-style-type: none"> <li>• <b>src</b>—Specifies the source location. <ul style="list-style-type: none"> <li>◦ <b>default</b>—Copies to the default-config file.</li> <li>◦ <b>flash</b>—Copies onto the flash. <ul style="list-style-type: none"> <li>◦ <i>WORD</i>—Filename. The format is flash:&lt;filename&gt;. For example, flash:ToTest.</li> </ul> </li> <li>◦ <b>running-config</b>—Copies to the running-config file.</li> <li>◦ <b>startup-config</b>—Copies to the startup-config file.</li> <li>◦ <b>tftp</b>—Copies to the TFTP server. <ul style="list-style-type: none"> <li>◦ <i>WORD</i>—TFTP filename. The format is tftp://server/path-and-filename. For example, tftp://10.0.0.221/ToTest.</li> </ul> </li> </ul> </li> <li>• <b>dst</b>—Specifies the destination location. <ul style="list-style-type: none"> <li>◦ <b>flash</b>—Copies onto the flash. <ul style="list-style-type: none"> <li>◦ <i>WORD</i>—Filename. The format is flash:&lt;filename&gt;. For example, flash:ToTest.</li> </ul> </li> </ul> </li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>◦ <b>running-config</b>—Copies to the running-config file.</li> <li>◦ <b>startup-config</b>—Copies to the startup-config file.</li> <li>◦ <b>tftp</b>—Copies to the TFTP server. <ul style="list-style-type: none"> <li>◦ <i>WORD</i>—TFTP filename. The format is tftp://server/path-and-filename. For example, tftp://10.0.0.221/ToTest.</li> </ul> </li> </ul>
<b>Step 5</b>	<b>copyConfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionConfigMGMTPortType)# copyConfig review	Displays the configuration.
<b>Step 6</b>	<b>copyConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionConfigMGMTPortType)# copyConfig commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionConfigMGMTPortType)# exit	Exits to the config-controller mode.

### Configuration Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionConfigMGMTPortType
Switch(config-controller-ProvisionConfigMGMTPortType)# copyConfig copyConfigRequest src
running-config
Switch(config-controller-ProvisionConfigMGMTPortType)# copyConfig copyConfigRequest dst
startup-config
Switch(config-controller-ProvisionConfigMGMTPortType)# copyConfig review

Commands in Queue:
copyConfig copyConfigRequest src running-config
copyConfig copyConfigRequest dst startup-config

Switch(config-controller-ProvisionConfigMGMTPortType)# copyConfig commit

CopyConfig Commit Success!!!

Switch(config-controller-ProvisionConfigMGMTPortType)# exit

```



**Note** When the running-config file is copied to the TFTP server, by default, it stores the file in the XML format. You need not mention the XML extension explicitly. This hold good vice versa as well.



**Note** When the Source is TFTP and the Destination is running-config, the TFTP file *appends* to the existing running-config, and does not overwrite the running-config file.

## Deleting Configuration

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionConfigMGMPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionConfigMGMPortType	Enters the ProvisionConfigMGMPortType mode.
<b>Step 4</b>	<b>deleteConfFile configName {configFileWORD}</b>  <b>Example:</b> Switch(config-controller-ProvisionConfigMGMTPortType)# deleteConfFile configName configFile flash:ToTest	Deletes the configuration. <ul style="list-style-type: none"> <li>• <b>configFile</b>—Specifies the configuration file to be deleted. <ul style="list-style-type: none"> <li>◦ <b>WORD</b>—File name. The format is <b>flash:filename</b>.</li> </ul> </li> </ul>
<b>Step 5</b>	<b>deleteConfFile review</b>  <b>Example:</b> Switch(config-controller-ProvisionConfigMGMTPortType)# deleteConfFile review	Displays the configuration.
<b>Step 6</b>	<b>deleteConfFile commit</b>  <b>Example:</b> Switch(config-controller-ProvisionConfigMGMTPortType)# deleteConfFile commit	Sends the configuration to the NID.

	Command or Action	Purpose
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionConfigMGMTPortType)# exit	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionConfigMGMTPortType
Switch(config-controller-ProvisionConfigMGMTPortType)# deleteConfFile configName configFile
flash:ToTest
Switch(config-controller-ProvisionConfigMGMTPortType)# deleteConfFile review

Commands in Queue:
deleteConfFile configName configFile flash:ToTest

Switch(config-controller-ProvisionConfigMGMTPortType)# deleteConfFile commit

DeleteConfFile Commit Success!!!

Switch(config-controller-ProvisionConfigMGMTPortType)# exit
```

### What to Do Next

Use the **listConfigs listConfigsReq** command to verify the delete action.

```
Switch(config-controller-ProvisionConfigMGMTPortType)# listConfigs listConfigsReq
Switch(config-controller-ProvisionConfigMGMTPortType)# listConfigs review
Switch(config-controller-ProvisionConfigMGMTPortType)# listConfigs commit
```

## Reloading the System

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionPortVlanPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionPortVlanPortType	Enters the ProvisionPortVlanPortType mode.

	Command or Action	Purpose
Step 4	<b>reloadSystem reloadSystemReq {last_saved}</b>  <b>Example:</b> Switch(config-controller-ProvisionConfigMGMTPortType) # reloadSystem reloadSystemReq last_saved	Reloads the configuration.  • <b>last_saved</b> —Reloads from the last saved configuration.
Step 5	<b>reloadSystem review</b>  <b>Example:</b> Switch(config-controller-ProvisionConfigMGMTPortType) # reloadSystem review	Displays the configuration.
Step 6	<b>reloadSystem commit</b>  <b>Example:</b> Switch(config-controller-ProvisionConfigMGMTPortType) # reloadSystem commit	Sends the configuration to the NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionConfigMGMTPortType) # exit	Exits to the config-controller mode.

### Configuration Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionConfigMGMTPortType
Switch(config-controller-ProvisionConfigMGMTPortType) # reloadSystem reloadSystemReq last_saved
Switch(config-controller-ProvisionConfigMGMTPortType) # reloadSystem review

Commands in Queue:
  reloadSystem reloadSystemReq last_saved

Switch(config-controller-ProvisionConfigMGMTPortType) # reloadSystem commit

  ReloadSystem Commit Success!!!

Switch(config-controller-ProvisionConfigMGMTPortType) # exit

```



#### Note

To reboot the system with the last saved changes, copy the configurations from running-config (source) to startup-config.xml (destination) file before you reload the system. This ensures the system boots-up with the latest configuration.



# Upgrading Configuration

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>configure terminal</b></p> <p><b>Example:</b> Switch# configure terminal</p>	Enters global configuration mode.
Step 2	<p><b>controller nid 1/NID_ID</b></p> <p><b>Example:</b> Switch(config)# controller nid 1/1</p>	Enters the controller configuration mode.
Step 3	<p><b>ProvisionConfigMGMPortType</b></p> <p><b>Example:</b> Switch(config-controller)# ProvisionConfigMGMPortType</p>	Enters the ProvisionConfigMGMPortType mode.
Step 4	<p><b>upgradeImage upgradeImageRequest {swap   upgrade {tftp WORD}}</b></p> <p><b>Example:</b> Switch(config-controller-ProvisionConfigMGMTPortType)# upgradeImage upgradeImageRequest upgrade tftp tftp://&lt;TFTP Server address&gt;/&lt;Path and file name&gt;</p>	<p>Upgrades the configuration.</p> <ul style="list-style-type: none"> <li>• <b>swap</b>—Swaps the configuration between Active and Alternate firmware images.</li> <li><b>Note</b> When the Cisco ME1200 NID is upgraded, the previous image is stored as a Backup image in the flash. Use the <b>upgradeImage upgradeImageRequest swap</b> command to load the system with the old image. To view the Active and Alternative (backup) firmware images, see the <a href="#">Verifying Configuration Version</a>.</li> <li>• <b>upgrade</b>—Upgrades the image. <ul style="list-style-type: none"> <li>◦ <b>tftp</b>—Specifies the TFTP location.</li> <li>◦ <b>WORD</b>—TFTP details. Enter the tftp://server/path-and-filename.</li> </ul> </li> </ul>
Step 5	<p><b>upgradeImage review</b></p> <p><b>Example:</b> Switch(config-controller-ProvisionConfigMGMTPortType)# upgradeImage review</p>	Displays the configuration.
Step 6	<p><b>upgradeImage commit</b></p> <p><b>Example:</b> Switch(config-controller-ProvisionConfigMGMTPortType)# upgradeImage commit</p>	Sends the configuration to the NID.

	Command or Action	Purpose
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionConfigMGMTPortType)# exit	Exits to the config-controller mode.

### Configuration Example

Example 1: Upgrade

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionConfigMGMTPortType
Switch(config-controller-ProvisionConfigMGMTPortType)# upgradeImage upgradeImageRequest
upgrade tftp tftp://<TFTP Server address>/<Path and file name>
Switch(config-controller-ProvisionConfigMGMTPortType)# upgradeImage review
```

```
Commands in Queue:
  upgradeImage upgradeImageRequest upgrade tftp tftp://<TFTP Server add>/<Path and file
name>
```

```
Switch(config-controller-ProvisionConfigMGMTPortType)# upgradeImage commit
```

```
  UpgradeImage Commit Success!!!
```

```
Switch(config-controller-ProvisionConfigMGMTPortType)# exit
```

Example 2: Swap

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionConfigMGMTPortType
Switch(config-controller-ProvisionConfigMGMTPortType)# upgradeImage upgradeImageRequest
swap
Switch(config-controller-ProvisionConfigMGMTPortType)# upgradeImage review
```

```
Commands in Queue:
  upgradeImage upgradeImageRequest swap
```

```
Switch(config-controller-ProvisionConfigMGMTPortType)# upgradeImage commit
```

```
  UpgradeSwap commit success !!!!
```

```
Switch(config-controller-ProvisionConfigMGMTPortType)# exit
```



## Administering the Cisco ME 1200 NID

This chapter describes how to perform one-time operations to administer the Cisco ME 1200 NID. For more information, see [Administering the Switch](#).

- [Prerequisites for Administering the NID, page 27](#)
- [How to Administer the Cisco ME 1200 NID, page 27](#)

### Prerequisites for Administering the NID

- NID must be added to the controller.
- NID must be accessible from the controller.

### How to Administer the Cisco ME 1200 NID

#### Configuring the System Clock

##### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.

	Command or Action	Purpose
Step 3	<p><b>ProvisionNIDMgmtType</b></p> <p><b>Example:</b> Switch(config-controller)# ProvisionNIDMgmtType</p>	Enters the ProvisionNIDMgmtType mode.
Step 4	<p><b>setclockConfig clockConfig {summerTime {endDate WORD   mode {disabled   nonRecurring   recurring}   name WORD   offSet Offset   startDate WORD}   timeZone {acronym WORD   hrOffSet hours   minOffSet mins}}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionNIDMgmtType)# setClockConfig clockConfig summerTime endDate 3-31-2016-23-59  Switch(config-controller-ProvisionNIDMgmtType)# setClockConfig clockConfig summerTime mode nonRecurring  Switch(config-controller-ProvisionNIDMgmtType)# setClockConfig clockConfig summerTime name MyClock  Switch(config-controller-ProvisionNIDMgmtType)# setClockConfig clockConfig summerTime offSet 3  Switch(config-controller-ProvisionNIDMgmtType)# setClockConfig clockConfig summerTime startDate 3-31-2014-23-59  Switch(config-controller-ProvisionNIDMgmtType)# setClockConfig clockConfig timeZone acronym IST  Switch(config-controller-ProvisionNIDMgmtType)# setClockConfig clockConfig timeZone hrOffSet 5  Switch(config-controller-ProvisionNIDMgmtType)# setClockConfig clockConfig timeZone minOffSet 30</pre>	<p>Configures the Cisco ME 1200 NID clock.</p> <ul style="list-style-type: none"> <li>• <b>summerTime</b>—Configures the summer (daylight savings) time. <ul style="list-style-type: none"> <li>◦ <b>endDate</b>—Specifies the end date format.</li> <li>◦ <b>WORD</b>—end date depends on the mode. For recurring mode, the format is <b>week-day-month-hrs:min</b>. Where, <ul style="list-style-type: none"> <li>• week ranges from 1 to 5.</li> <li>• day ranges from 1 to 7.</li> <li>• month ranges from 1 to 12.</li> <li>• hrs ranges from 0-23.</li> <li>• min ranges from 0-59.</li> </ul> </li> </ul> </li> <li>For nonrecurring mode, the format is <b>month-day-year-hrs:min</b>. <ul style="list-style-type: none"> <li>• month ranges from 1 to 12.</li> <li>• day ranges from 1 to 31.</li> <li>• year ranges from 2000-2097.</li> <li>• hrs ranges from 0-23.</li> <li>• min ranges from 0-59.</li> </ul> </li> <li>◦ <b>mode</b>—Specifies the day light saving time mode. <ul style="list-style-type: none"> <li>◦ <b>disabled</b>—Disables the day light saving time.</li> <li>◦ <b>nonRecurring</b>—Specifies the standard mode.</li> <li>◦ <b>recurring</b>—Specifies the recurring mode.</li> </ul> </li> <li>◦ <b>name</b>—Specifies the name of time zone in summer. <ul style="list-style-type: none"> <li>◦ <b>WORD</b>—Clock name.</li> </ul> </li> <li>◦ <b>offSet</b>—Specifies the Offset to add in minutes. <ul style="list-style-type: none"> <li>◦ <b>Offset</b>—offset time. The range is from 1 to 1440 minutes.</li> </ul> </li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>◦ <b>startDate</b>—Specifies the start date format. <ul style="list-style-type: none"> <li>◦ <i>WORD</i>—start date depends on the mode. For recurring mode, the format is <b>week-day-month-hrs:min</b>. Where, <ul style="list-style-type: none"> <li>• week ranges from 1 to 5.</li> <li>• day ranges from 1 to 7.</li> <li>• month ranges from 1 to 12.</li> <li>• hrs ranges from 0-23.</li> <li>• min ranges from 0-59.</li> </ul> </li> <li>For nonrecurring mode, the format is <b>month-day-year-hrs:min</b>. Where, <ul style="list-style-type: none"> <li>• month ranges from 1 to 12.</li> <li>• day ranges from 1 to 31.</li> <li>• year ranges from 2000-2097.</li> <li>• hrs ranges from 0-23.</li> <li>• min ranges from 0-59.</li> </ul> </li> </ul> </li> <li>• <b>timeZone</b>—Configures the time zone. <ul style="list-style-type: none"> <li>◦ <b>acronym</b>—Specifies the name of time zone. <ul style="list-style-type: none"> <li>◦ <i>WORD</i>—time zone name.</li> </ul> </li> <li>◦ <b>hrOffSet</b>—Specifies the off set hours from Universal Time Coordinated (UTC). <ul style="list-style-type: none"> <li>◦ <i>hours</i>—off set hour from UTC. The range is from minus(-) 23 to 23.</li> </ul> </li> <li>◦ <b>minOffSet</b>—Specifies the offset minutes from UTC. <ul style="list-style-type: none"> <li>◦ <i>mins</i>—off set minutes from UTC. The range is from 0-59.</li> </ul> </li> </ul> </li> </ul>
<b>Step 5</b>	<b>setclockConfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType) # setclockConfig review	Displays the configuration.

	Command or Action	Purpose
<b>Step 6</b>	<b>setclockConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# setclockConfig commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# exit	Exits to the config-controller mode.

### Configuration Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionNIDMgmtType
Switch(config-controller-ProvisionNIDMgmtType)# setClockConfig clockConfig summerTime endDate
3-31-2016-23-59
Switch(config-controller-ProvisionNIDMgmtType)# setClockConfig clockConfig summerTime mode
nonRecurring
Switch(config-controller-ProvisionNIDMgmtType)# setClockConfig clockConfig summerTime name
MyClock
Switch(config-controller-ProvisionNIDMgmtType)# setClockConfig clockConfig summerTime offSet
3
Switch(config-controller-ProvisionNIDMgmtType)# setClockConfig clockConfig summerTime
startDate 3-31-2014-23-59
Switch(config-controller-ProvisionNIDMgmtType)# setClockConfig clockConfig timeZone acronym
IST
Switch(config-controller-ProvisionNIDMgmtType)# setClockConfig clockConfig timeZone hrOffSet
5
Switch(config-controller-ProvisionNIDMgmtType)# setClockConfig clockConfig timeZone minOffSet
30

Switch(config-controller-ProvisionNIDMgmtType)# setclockConfig review
Commands in queue:
  setClockConfig clockConfig summerTime endDate 3-31-2016-23-59
  setClockConfig clockConfig summerTime mode nonRecurring
  setClockConfig clockConfig summerTime name MyClock
  setClockConfig clockConfig summerTime offSet 3
  setClockConfig clockConfig summerTime startDate 3-31-2014-23-59
  setClockConfig clockConfig timeZone acronym IST
  setClockConfig clockConfig timeZone hrOffSet 5
  setClockConfig clockConfig timeZone minOffSet 30

Switch(config-controller-ProvisionNIDMgmtType)# setclockConfig commit
SetClockConfig Commit Success!!!

Switch(config-controller-ProvisionNIDMgmtType)# exit

```

## Viewing the System Clock

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>ProvisionNIDMgmtType</b>  <b>Example:</b> Switch(config-controller)# ProvisionNIDMgmtType	Enters the ProvisionNIDMgmtType mode.
Step 4	<b>getClockConfig detailClock</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# getClockConfig detailClock	Displays the clock details.
Step 5	<b>getClockConfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# getClockConfig review	Displays the configuration.
Step 6	<b>getClockConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# getClockConfig commit	Sends the configuration to the NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# exit	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionNIDMgmtType
Switch(config-controller-ProvisionNIDMgmtType)# getClockConfig detailClock
Switch(config-controller-ProvisionNIDMgmtType)# getClockConfig review
```

```
Commands in queue:
getClockConfig detailClock
```

```
Switch(config-controller-ProvisionNIDMgmtType)# getClockConfig commit

GetClockConfig_Output.clockConfig.timeZone.hrOffSet = 5
GetClockConfig_Output.clockConfig.timeZone.minOffSet = 30
GetClockConfig_Output.clockConfig.timeZone.acronym = 'IST'
GetClockConfig_Output.clockConfig.summerTime.name = ''
GetClockConfig_Output.clockConfig.summerTime.mode.t = 1
GetClockConfig_Output.clockConfig.summerTime.mode.u.disabled = ''
GetClockConfig_Output.clockConfig.summerTime.startDate = ''
GetClockConfig_Output.clockConfig.summerTime.endDate = ''
GetClockConfig_Output.clockConfig.summerTime.offSet = 1

GetClockConfig Commit Success!!!

Switch(config-controller-ProvisionNIDMgmtType)# exit
```

## Verifying System Clock Settings

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionNIDMgmtType</b>  <b>Example:</b> Switch(config-controller)# ProvisionNIDMgmtType	Enters the ProvisionNIDMgmtType mode.
<b>Step 4</b>	<b>showclock showClockReq {show_clock}</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# showclock showClockReq show_clock	Displays the clock details.
<b>Step 5</b>	<b>showclock review</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# showclock review	Displays the configuration.
<b>Step 6</b>	<b>showclock commit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# showclock commit	Sends the configuration to the NID.



	Command or Action	Purpose
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# exit	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionNIDMgmtType
Switch(config-controller-ProvisionNIDMgmtType)# showclock showClockReq show_clock
Switch(config-controller-ProvisionNIDMgmtType)# showclock review

Commands in queue:
  showClock showClockReq show_clock

Switch(config-controller-ProvisionNIDMgmtType)# showclock commit
  ShowClock_Output.showClockResp.clock_info = 'System Time   : 1970-01-02T19:17:07+05:30'

  ShowClock Commit Success!!!

Switch(config-controller-ProvisionNIDMgmtType)# exit
```

## Clearing IP ARP Entries

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionNIDMgmtType</b>  <b>Example:</b> Switch(config-controller)# ProvisionNIDMgmtType	Enters the ProvisionNIDMgmtType mode.
<b>Step 4</b>	<b>clearIpArpEntries clearIpArpEntriesReq {all}</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# clearIpArpEntries clearIpArpEntriesReq all	Clears the IP ARP entries.

	Command or Action	Purpose
Step 5	<b>clearIpArpEntries review</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType) # clearIpArpEntries review	Displays the configuration.
Step 6	<b>clearIpArpEntries commit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType) # clearIpArpEntries commit	Sends the configuration to the NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType) # exit	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionNIDMgmtType
Switch(config-controller-ProvisionNIDMgmtType)# clearIpArpEntries clearIpArpEntriesReq all
Switch(config-controller-ProvisionNIDMgmtType)# clearIpArpEntries review

Commands in queue:
  clearIpArpEntries clearIpArpEntriesReq all

Switch(config-controller-ProvisionNIDMgmtType)# clearIpArpEntries commit

ClearIpArpEntries_Output.clearIpArpEntriesResp = 0

ClearIpArpEntries Commit Success!!!

Switch(config-controller-ProvisionNIDMgmtType)# exit
```

## Verifying IP ARP Entries

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.

	Command or Action	Purpose
Step 3	<b>ProvisionNIDMgmtType</b>  <b>Example:</b> Switch(config-controller)# ProvisionNIDMgmtType	Enters the ProvisionNIDMgmtType mode.
Step 4	<b>showIpArp showIpArpEntriesReq {all}</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# showIpArp showIpArpEntriesReq all	Displays the IP ARP details.
Step 5	<b>showIpArp review</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# showIpArp review	Displays the configuration.
Step 6	<b>showIpArp commit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# showIpArp commit	Sends the configuration to the NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# exit	Exits to the config-controller mode.

### Configuration Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionNIDMgmtType
Switch(config-controller-ProvisionNIDMgmtType)# showIpArp showIpArpEntriesReq all
Switch(config-controller-ProvisionNIDMgmtType)# showIpArp review

Commands in queue:
  showIpArpEntriesReq all

Switch(config-controller-ProvisionNIDMgmtType)# showIpArp commit

  ShowIpArp_Output.showIpArpEntriesResp.arp_entry[0] = '10.0.0.1 via
VLAN10:00-00-0c-07-ac-03'
  ShowIpArp_Output.showIpArpEntriesResp.arp_entry[1] = '10.0.10.21 via
VLAN10:e9-ed-f3-78-27-c0'

  ShowIpArp Commit Success!!!

Switch(config-controller-ProvisionNIDMgmtType)# exit

```

## Configuring IP Route Global Configuration

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>ProvisionNIDMgmtType</b>  <b>Example:</b> Switch(config-controller)# ProvisionNIDMgmtType	Enters the ProvisionNIDMgmtType mode.
Step 4	<b>ipRoutingGlobalConfig ipRoutingGlobalConfigReq {disable   enable}</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# ipRoutingGlobalConfig ipRoutingGlobalConfigReq enable	Configures the IP routing global configuration. <ul style="list-style-type: none"> <li>• <b>disable</b>—Disables the IP Routing.</li> <li>• <b>enable</b>—Enables the IP Routing.</li> </ul>
Step 5	<b>ipRoutingGlobalConfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# ipRoutingGlobalConfig review	Displays the configuration.
Step 6	<b>ipRoutingGlobalConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# ipRoutingGlobalConfig commit	Sends the configuration to the NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# exit	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionNIDMgmtType
Switch(config-controller-ProvisionNIDMgmtType)# ipRoutingGlobalConfig ipRoutingGlobalConfigReq
enable
Switch(config-controller-ProvisionNIDMgmtType)# ipRoutingGlobalConfig review
```

```

Commands in queue:
  ipRoutingGlobalConfig ipRoutingGlobalConfigReq enable

Switch(config-controller-ProvisionNIDMgmtType)# ipRoutingGlobalConfig commit

  IpRoutingGlobalConfig Commit Success!!!

Switch(config-controller-ProvisionNIDMgmtType)# exit

```

## Configuring IP Route

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid</b> <i>1/NID_ID</i>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionNIDMgmtType</b>  <b>Example:</b> Switch(config-controller)# ProvisionNIDMgmtType	Enters the ProvisionNIDMgmtType mode.
<b>Step 4</b>	<b>setiproute setIpRouteReq</b> { <i>gateway_ip WORD</i>   <i>ipv4_address WORD</i>   <i>ipv4_mask WORD</i> }  <b>Example:</b>  Switch(config-controller-ProvisionNIDMgmtType)# setIpRoute setIpRouteReq ipv4_address 10.0.144.0  Switch(config-controller-ProvisionNIDMgmtType)# setIpRoute setIpRouteReq ipv4_mask 255.255.255.0  Switch(config-controller-ProvisionNIDMgmtType)# setIpRoute setIpRouteReq gateway_ip 10.0.0.1	Configures the IP Route. <ul style="list-style-type: none"> <li>• <b>gateway_ip</b>—Specifies the gateway IPv4 address. <ul style="list-style-type: none"> <li>◦ <i>WORD</i>—IPv4 address.</li> </ul> </li> <li>• <b>ipv4_address</b>—Specifies the IPv4 Network/Address. <ul style="list-style-type: none"> <li>◦ <i>WORD</i>—IPv4 Network/Address.</li> </ul> </li> <li>• <b>ipv4_mask</b>—Specifies the IPv4 mask. <ul style="list-style-type: none"> <li>◦ <i>WORD</i>—IPv4 mask.</li> </ul> </li> </ul>
<b>Step 5</b>	<b>setiproute review</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# setiproute review	Displays the configuration.

	Command or Action	Purpose
<b>Step 6</b>	<b>getClockConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType) # setiproute commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType) # exit	Exits to the config-controller mode.

### Configuration Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionNIDMgmtType
Switch(config-controller-ProvisionNIDMgmtType)# setIpRoute setIpRouteReq ipv4_address
10.0.144.0
Switch(config-controller-ProvisionNIDMgmtType)# setIpRoute setIpRouteReq ipv4_mask
255.255.255.0
Switch(config-controller-ProvisionNIDMgmtType)# setIpRoute setIpRouteReq gateway_ip 10.0.0.1

Switch(config-controller-ProvisionNIDMgmtType)# setiproute review
Commands in Queue:
  setIpRoute setIpRouteReq ipv4_address 10.0.144.0
  setIpRoute setIpRouteReq ipv4_mask 255.255.255.0
  setIpRoute setIpRouteReq gateway_ip 10.0.0.1

Switch(config-controller-ProvisionNIDMgmtType)# setiproute commit

Setiproute Commit Success!!!

Switch(config-controller-ProvisionNIDMgmtType)# exit

```

## Viewing IP Route

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config) # controller nid 1/1	Enters the controller configuration mode.

	Command or Action	Purpose
<b>Step 3</b>	<b>ProvisionNIDMgmtType</b>  <b>Example:</b> Switch(config-controller)# ProvisionNIDMgmtType	Enters the ProvisionNIDMgmtType mode.
<b>Step 4</b>	<b>showiproute showIpRouteReq {all}</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType) # showiproute showIpRouteReq all	Displays the IP route details.  <ul style="list-style-type: none"> <li>• <b>all</b>—Specifies the IP route entries.</li> </ul>
<b>Step 5</b>	<b>showiproute review</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType) # showiproute review	Displays the configuration.
<b>Step 6</b>	<b>showiproute commit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType) # showiproute commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType) # exit	Exits to the config-controller mode.

### Configuration Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionNIDMgmtType
Switch(config-controller-ProvisionNIDMgmtType) # showiproute showIpRouteReq all
Switch(config-controller-ProvisionNIDMgmtType) # showiproute review

Commands in queue:
  showIpRoute showIpRouteReq all

Switch(config-controller-ProvisionNIDMgmtType) # showiproute commit

  ShowIpRoute_Output.showIpRouteResp.ip_route_entry[0] = '0.0.0.0/0 via 10.25.0.1 [UP
GATEWAY HW_RT]'
  ShowIpRoute_Output.showIpRouteResp.ip_route_entry[1] = '10.25.0.0/16 via [UP HW_RT]'
  ShowIpRoute_Output.showIpRouteResp.ip_route_entry[2] = '127.0.0.1/32 via 127.0.0.1 [UP
HOST]'
  ShowIpRoute_Output.showIpRouteResp.ip_route_entry[3] = '202.153.0.0/16 via 7.25.0.1 [UP
GATEWAY HW_RT]'
  ShowIpRoute_Output.showIpRouteResp.ip_route_entry[4] = '224.0.0.0/4 via 127.0.0.1 [UP]'

  ShowIpRoute Commit Success!!!

Switch(config-controller-ProvisionNIDMgmtType) # exit

```

## Removing IP Route

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>configure terminal</b></p> <p><b>Example:</b> Switch# configure terminal</p>	Enters global configuration mode.
Step 2	<p><b>controller nid I/NID_ID</b></p> <p><b>Example:</b> Switch(config)# controller nid 1/1</p>	Enters the controller configuration mode.
Step 3	<p><b>ProvisionNIDMgmtType</b></p> <p><b>Example:</b> Switch(config-controller)# ProvisionNIDMgmtType</p>	Enters the ProvisionNIDMgmtType mode.
Step 4	<p><b>removeiproute removeIpRouteReq {gateway_ip WORD   ipv4_address WORD   ipv4_mask WORD}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionNIDMgmtType)# removeiproute removeIpRouteReq ipv4_address 10.0.144.0  Switch(config-controller-ProvisionNIDMgmtType)# removeiproute removeIpRouteReq ipv4_mask 255.255.255.0  Switch(config-controller-ProvisionNIDMgmtType)# removeiproute removeIpRouteReq gateway_ip 10.0.0.1</pre>	<p>Removes the IP Route.</p> <ul style="list-style-type: none"> <li>• <b>gateway_ip</b>—Specifies the gateway IPv4 address. <ul style="list-style-type: none"> <li>◦ <i>WORD</i>—IPv4 address.</li> </ul> </li> <li>• <b>ipv4_address</b>—Specifies the IPv4 Network/Address. <ul style="list-style-type: none"> <li>◦ <i>WORD</i>—IPv4 Network/Address.</li> </ul> </li> <li>• <b>ipv4_mask</b>—Specifies the IPv4 mask. <ul style="list-style-type: none"> <li>◦ <i>WORD</i>—IPv4 mask.</li> </ul> </li> </ul>
Step 5	<p><b>removeIpRoute review</b></p> <p><b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# removeIpRoute review</p>	Displays the configuration.
Step 6	<p><b>removeIpRoute commit</b></p> <p><b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# removeIpRoute commit</p>	Sends the configuration to the NID.
Step 7	<p><b>exit</b></p> <p><b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# exit</p>	Exits to the config-controller mode.



**Configuration Example**

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionNIDMgmtType
Switch(config-controller-ProvisionNIDMgmtType)# removeiproute removeIpRouteReq ipv4_address
10.0.144.0
Switch(config-controller-ProvisionNIDMgmtType)# removeiproute removeIpRouteReq ipv4_mask
255.255.255.0
Switch(config-controller-ProvisionNIDMgmtType)# removeiproute removeIpRouteReq gateway_ip
10.0.0.1

Switch(config-controller-ProvisionNIDMgmtType)#removeIpRoute review

Commands in queue:
  removeiproute removeIpRouteReq ipv4_address 10.0.144.0
  removeiproute removeIpRouteReq ipv4_mask 255.255.255.0
  removeiproute removeIpRouteReq gateway_ip 10.0.0.1

Switch(config-controller-ProvisionNIDMgmtType)# removeIpRoute commit

  Removeiproute Commit Success!!!

Switch(config-controller-ProvisionNIDMgmtType)# exit

```

## Configuring IP DNS Proxy Request

**DETAILED STEPS**

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionNIDMgmtType</b>  <b>Example:</b> Switch(config-controller)# ProvisionNIDMgmtType	Enters the ProvisionNIDMgmtType mode.
<b>Step 4</b>	<b>setipdnsProxyConfig setIpDNSProxyConfigReq {dns_proxy}</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# setipdnsProxyConfig setIpDNSProxyConfigReq dns_proxy	Configures the IP DNS proxy request.  • <b>dns_proxy</b> —Configures the DNS proxy service.

	Command or Action	Purpose
<b>Step 5</b>	<b>setipdnsProxyConfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# setipdnsProxyConfig review	Displays the configuration.
<b>Step 6</b>	<b>setipdnsProxyConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# setipdnsProxyConfig commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# exit	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionNIDMgmtType
Switch(config-controller-ProvisionNIDMgmtType)# setipdnsProxyConfig setIpDNSProxyConfigReq
dns_proxy
Switch(config-controller-ProvisionNIDMgmtType)# setipdnsProxyConfig review

Commands in queue:
  setIpDnsProxyConfig setIpDNSProxyConfigReq dns_proxy

Switch(config-controller-ProvisionNIDMgmtType)# setipdnsProxyConfig commit

  SetIpDnsProxyConfig Commit Success!!!

Switch(config-controller-ProvisionNIDMgmtType)# exit
```

## Removing IP DNS Proxy Request Configuration

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.

	Command or Action	Purpose
<b>Step 3</b>	<b>ProvisionNIDMgmtType</b>  <b>Example:</b> Switch(config-controller)# ProvisionNIDMgmtType	Enters the ProvisionNIDMgmtType mode.
<b>Step 4</b>	<b>removeipdnsProxyConfig removeIpDnsProxyConfigReq {dns_proxy}</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType) # removeipdnsProxyConfig removeIpDnsProxyConfigReq dns_proxy	Removes the IP DNS proxy configuration.
<b>Step 5</b>	<b>removeipdnsProxyConfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType) # removeipdnsProxyConfig review	Displays the configuration.
<b>Step 6</b>	<b>removeipdnsProxyConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType) # removeipdnsProxyConfig commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType) # exit	Exits to the config-controller mode.

### Configuration Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller) # ProvisionNIDMgmtType
Switch(config-controller-ProvisionNIDMgmtType) # removeipdnsProxyConfig
removeIpDnsProxyConfigReq dns_proxy
Switch(config-controller-ProvisionNIDMgmtType) # removeipdnsProxyConfig review

Commands in queue:
  removeIpDnsProxyConfig removeIpDnsProxyConfigReq dns_proxy

Switch(config-controller-ProvisionNIDMgmtType) # removeipdnsProxyConfig commit

  RemoveIpDnsProxyConfig Commit Success!!!

Switch(config-controller-ProvisionNIDMgmtType) # exit

```

## Configuring the Name Server

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>ProvisionNIDMgmtType</b>  <b>Example:</b> Switch(config-controller)# ProvisionNIDMgmtType	Enters the ProvisionNIDMgmtType mode.
Step 4	<b>setnameServerConfig setNameServerConfigReq {dhcp {vlan_interface vlan_id}   ipv4_address WORD}</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# setNameServerConfig setNameServerConfigReq ipv4_address 10.0.0.5	Configures the name server. <ul style="list-style-type: none"> <li>• <b>dhcp</b>—Specifies the Dynamic Host Configuration Protocol.               <ul style="list-style-type: none"> <li>◦ <b>vlan_interface</b>—Select an VLAN interface to configure.                   <ul style="list-style-type: none"> <li>◦ <i>vlan_id</i>—Vlan ID. The range is from 1 to 4093.</li> </ul> </li> </ul> </li> <li>• <b>ipv4_address</b>—Specifies IPv4 unicast address.               <ul style="list-style-type: none"> <li>◦ <i>WORD</i> —IPv4 unicast address.</li> </ul> </li> </ul>
Step 5	<b>setnameServerConfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# setNameServerConfig review	Displays the configuration.
Step 6	<b>setnameServerConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# setNameServerConfig commit	Sends the configuration to the NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# exit	Exits to the config-controller mode.

**Configuration Example**

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionNIDMgmtType
Switch(config-controller-ProvisionNIDMgmtType)# setNameServerConfig setNameServerConfigReq
  ipv4_address 10.0.0.5
Switch(config-controller-ProvisionNIDMgmtType)# setNameServerConfig review

Commands in queue:
  setNameServerConfig setNameServerConfigReq ipv4_address 10.0.0.5

Switch(config-controller-ProvisionNIDMgmtType)# setNameServerConfig commit

  nid_create_SetNameServerConfig_req_file 7421

  SetNameServerConfig Commit Success!!!

Switch(config-controller-ProvisionNIDMgmtType)# exit

```

## Verifying the Name Server

**DETAILED STEPS**

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionNIDMgmtType</b>  <b>Example:</b> Switch(config-controller)# ProvisionNIDMgmtType	Enters the ProvisionNIDMgmtType mode.
<b>Step 4</b>	<b>shownameServerConfig showNameSeverConfigReq {config}</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# shownameServerConfig showNameSeverConfigReq config	Displays the name server details.  • <b>config</b> —Displays the name server configuration.
<b>Step 5</b>	<b>shownameServerConfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# shownameServerConfig review	Displays the configuration.

	Command or Action	Purpose
<b>Step 6</b>	<b>shownameServerConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# shownameServerConfig commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# exit	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionNIDMgmtType
Switch(config-controller-ProvisionNIDMgmtType)# shownameServerConfig showNameSeverConfigReq
config
Switch(config-controller-ProvisionNIDMgmtType)# shownameServerConfig review

Commands in queue:
  shownameServerConfig showNameSeverConfigReq config

Switch(config-controller-ProvisionNIDMgmtType)# shownameServerConfig commit
ShowNameServerConfig_Output.showNameServerConfigResp.name_server_config = 'Current DNS
server is 7.0.0.3 set by STATIC.'

  ShowNameServerConfig Commit Success!!!

Switch(config-controller-ProvisionNIDMgmtType)# exit
```

## Removing the Name Server

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionNIDMgmtType</b>  <b>Example:</b> Switch(config-controller)# ProvisionNIDMgmtType	Enters the ProvisionNIDMgmtType mode.

	Command or Action	Purpose
<b>Step 4</b>	<b>removenameServerConfig removeNameServerConfigReq</b> { <b>name_server</b> }  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# removenameServerConfig removeNameServerConfigReq name_server	Removes the name server.  <ul style="list-style-type: none"> <li>• <b>name_server</b>—Specifies the domain name system removal.</li> </ul>
<b>Step 5</b>	<b>removenameServerConfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# removenameServerConfig review	Displays the configuration.
<b>Step 6</b>	<b>getClockConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# removenameServerConfig commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionNIDMgmtType)# exit	Exits to the config-controller mode.

### Configuration Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionNIDMgmtType
Switch(config-controller-ProvisionNIDMgmtType)# removenameServerConfig
removeNameServerConfigReq name_server
Switch(config-controller-ProvisionNIDMgmtType)# removenameServerConfig review

Commands in queue:
    removenameServerConfig removeNameServerConfigReq name_server

Switch(config-controller-ProvisionNIDMgmtType)# removenameServerConfig commit

    RemoveNameServerConfig Commit Success!!!

Switch(config-controller-ProvisionNIDMgmtType)# exit

```

# Adding User

## SUMMARY STEPS

1. **configure terminal**
2. **controller nid 1/NID\_ID**
3. **ProvisionNIDMgmtType**
4. **addUser**
5. **addUser addUserReq { username | password { encrypted | none | unencrypted } | privilege }**
6. **addUser review**
7. **addUser commit**
8. **exit**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionNIDMgmtType</b>  <b>Example:</b> Switch( config-controller-ProvisionNIDMgmtType)# ProvisionNIDMgmtType	Enters the ProvisionNIDMgmtType mode.
<b>Step 4</b>	<b>addUser</b>  <b>Example:</b> Switch( config-controller-ProvisionNIDMgmtType)# addUser	Enters the addUser mode. You can add a user and assign rights from this mode.
<b>Step 5</b>	<b>addUser addUserReq { username   password { encrypted   none   unencrypted }   privilege }</b>  <b>Example:</b> Switch( config-controller-ProvisionNIDMgmtType)# addUser Switch( config-controller-ProvisionNIDMgmtType)# addUser addUserReq username niduser1_p Switch( config-controller-ProvisionNIDMgmtType)# addUser addUserReq password encrypted me1200vbox Switch(	Configures user for the Cisco ME 1200 NID. <ul style="list-style-type: none"> <li>• <b>username</b>—Configures the username . The length of the username must be within 31 character. You can include letters, numbers and underscore to assign a username.</li> <li>• <b>password</b>—Configures the password for the username.               <ul style="list-style-type: none"> <li>◦ <b>encrypted</b>— Configures an encrypted password. The length of the password must be within 31 character.</li> </ul> </li> </ul>



	Command or Action	Purpose
	<pre>config-controller-ProvisionNIDMgmtType)# addUser addUserReq privilege 15</pre>	<ul style="list-style-type: none"> <li>◦ <b>unencrypted</b>— Configures an unencrypted password. The length of the password must be within 31 character.</li> <li>◦ <b>none</b>— Configures without a password.</li> <li>• <b>privilege</b>— Configures the privilege level for a user. You can assign a value from 0 to 15.</li> </ul>
<b>Step 6</b>	<p><b>addUser review</b></p> <p><b>Example:</b></p> <pre>Switch( config-controller-ProvisionNIDMgmtType)# addUser review</pre>	Displays the configuration of the user.
<b>Step 7</b>	<p><b>addUser commit</b></p> <p><b>Example:</b></p> <pre>Switch( config-controller-ProvisionNIDMgmtType)# addUser commit</pre>	Sends the configuration of the user to the NID.
<b>Step 8</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch( config-controller-ProvisionNIDMgmtType)# exit</pre>	Exist the provisionNIDmgmt Type mode.

## Remove User

### SUMMARY STEPS

1. **configure terminal**
2. **controller nid /NID\_ID**
3. **ProvisionNIDMgmtType**
4. **removeUser**
5. **removeUser removeUserReq username**
6. **removeUser review**
7. **addUser commit**
8. **exit**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid <i>I/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionNIDMgmtType</b>  <b>Example:</b> Switch (config-controller)# ProvisionNIDMgmtType	Enters the ProvisionNIDMgmtType mode.
<b>Step 4</b>	<b>removeUser</b>  <b>Example:</b> Switch( config-controller-ProvisionNIDMgmtType) # removeUser	Enters the addUser mode. You can add a user and assign rights from this mode.
<b>Step 5</b>	<b>removeUser removeUserReq username</b>  <b>Example:</b> Switch( config-controller-ProvisionNIDMgmtType) # removeUser Switch( config-controller-ProvisionNIDMgmtType) # removeUser removeUserReq username niduser1_p	<ul style="list-style-type: none"> <li>• <b>username</b>—Removes the username from the username list .</li> </ul>
<b>Step 6</b>	<b>removeUser review</b>  <b>Example:</b> Switch( config-controller-ProvisionNIDMgmtType) # removeUser review	Displays the configuration of the user.
<b>Step 7</b>	<b>addUser commit</b>  <b>Example:</b> Switch( config-controller-ProvisionNIDMgmtType) # removeUser commit	Sends the configuration of the user to the Cisco ME 1200 NID.
<b>Step 8</b>	<b>exit</b>  <b>Example:</b> Switch( config-controller-ProvisionNIDMgmtType) # exit	Exist the provisionNIDmgmt Type mode.

## Viewing User Information

### SUMMARY STEPS

1. **configure terminal**
2. **controller nid 1/NID\_ID**
3. **ProvisionNIDMgmtType**
4. **showUsersConfigured**
5. **showUsersConfigured showUsersConfiguredReq all**
6. **showUsersConfigured review**
7. **showUsersConfigured commit**
8. **exit**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionNIDMgmtType</b>  <b>Example:</b> Switch (config-controller)# ProvisionNIDMgmtType	Enters the ProvisionNIDMgmtType mode.
<b>Step 4</b>	<b>showUsersConfigured</b>  <b>Example:</b> Switch( config-controller-ProvisionNIDMgmtType) # showUsersConfigured	Enters the showUsersConfigured mode. You can view all users information.
<b>Step 5</b>	<b>showUsersConfigured showUsersConfiguredReq all</b>  <b>Example:</b> Switch( config-controller-ProvisionNIDMgmtType) # showUsersConfigured Switch( config-controller-ProvisionNIDMgmtType) # showUsersConfigured showUsersConfiguredReq all	<ul style="list-style-type: none"> <li>• <b>all</b>—Displays all IP routes .</li> </ul>
<b>Step 6</b>	<b>showUsersConfigured review</b>  <b>Example:</b> Switch( config-controller-ProvisionNIDMgmtType) # showUsersConfigured review	Displays the configuration of the user.

	Command or Action	Purpose
<b>Step 7</b>	<b>showUsersConfigured commit</b>  <b>Example:</b> Switch( config-controller-ProvisionNIDMgmtType) # showUsersConfigured commit	Sends the configuration of the user to the Cisco ME 1200 NID.
<b>Step 8</b>	<b>exit</b>  <b>Example:</b> Switch( config-controller-ProvisionNIDMgmtType) # exit	Exist the provisionNIDmgmt Type mode.

## Viewing Logged In User Information

### SUMMARY STEPS

1. **configure terminal**
2. **controller nid 1/NID\_ID**
3. **ProvisionNIDMgmtType**
4. **removeUser**
5. **showUsersLoggedIn showUsersLoggedInReq all**
6. **showUsersLoggedIn review**
7. **showUsersLoggedIn commit**
8. **exit**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionNIDMgmtType</b>  <b>Example:</b> Switch (config-controller) # ProvisionNIDMgmtType	Enters the ProvisionNIDMgmtType mode.

	Command or Action	Purpose
<b>Step 4</b>	<b>removeUser</b>  <b>Example:</b> Switch( config-controller-ProvisionNIDMgmtType)# showUsersLoggedIn	Enters the showUsersLoggedInReq mode. You can view all logged in users and their information.
<b>Step 5</b>	<b>showUsersLoggedIn showUsersLoggedInReq all</b>  <b>Example:</b> Switch( config-controller-ProvisionNIDMgmtType)# showUsersLoggedIn Switch( config-controller-ProvisionNIDMgmtType)# showUsersLoggedIn showUsersLoggedInReq all	<ul style="list-style-type: none"> <li>• <b>all</b>—Displays all IP routes .</li> </ul>
<b>Step 6</b>	<b>showUsersLoggedIn review</b>  <b>Example:</b> Switch( config-controller-ProvisionNIDMgmtType)# showUsersLoggedIn review	Displays the configuration of the user.
<b>Step 7</b>	<b>showUsersLoggedIn commit</b>  <b>Example:</b> Switch( config-controller-ProvisionNIDMgmtType)# showUsersLoggedIn commit	Sends the configuration of the user to the Cisco ME 1200 NID.
<b>Step 8</b>	<b>exit</b>  <b>Example:</b> Switch( config-controller-ProvisionNIDMgmtType)# exit	Exist the provisionNIDmgmt Type mode.





## Configuring Notifications

---

This chapter describes how to configure notifications on Cisco ME 1200 NID.

- [Prerequisites for Configuring Notifications, page 55](#)
- [Restrictions for Configuring Notifications, page 55](#)
- [Information About Notifications, page 56](#)
- [Types of Notifications, page 56](#)
- [How to Configure Notifications, page 57](#)

### Prerequisites for Configuring Notifications

- NID must be added to the controller.
- NID must be accessible from the controller.
- Configuring username and enabling password on the controller is a must for HTTP authentication.

### Restrictions for Configuring Notifications

- Only the first three notification lists are supported. They are:
  - Notifications\_list 1 for HeartBeat notifications.
  - Notifications\_list 2 for Config Change Trap notifications.
  - Notifications\_list 3 for Asynchronous failure notifications.

**Note**

In case, the other notification lists are configured, the configuration does not get applied.

# Information About Notifications

Notifications are asynchronous messages generated by NID based on the events. The notifications are transported over HTTP POST request. The NID acts as an HTTP client and the controller (ME3600 or any other HTTP server) acts as a server.

## Types of Notifications

The Cisco ME 1200 NID supports three types of notifications:

- HeartBeat Notifications
- Config Change Trap Notifications
- Asynchronous Failure Notifications

### HeartBeat Notifications

Heartbeat notifications are used to check the liveliness of the NID. This corresponds to the `module_id = 1`, and the `notification_id = 1`. You can use the `setNotificationReceiver setNotificationReceiver_req heartbeat 30` command to configure the HeartBeat to 30 seconds. If the controller does not receive the heartbeat notification within 30 seconds, the controller waits for an additional 60 seconds before announcing Cisco ME 1200 NID as DOWN. For more information, see [Registering for HeartBeat Notification](#).

### Config Change Trap Notifications

The registered server receives configuration change notifications when any other controller does prime changes or accesses the NID through XML. This corresponds to the `module_id = 2`, and the `notification_id = 1`. For more information, see [Registering for Config Change Trap Notification](#).

### Asynchronous Failure Notifications (ICLI failures)

The controller receives asynchronous failure notifications, when there are ICLI failures. Every commit action (SOAP action) on the controller is translated into multiple ICLI commands on NID, and if there are failures during the ICLI command execution, an asynchronous failure notification is sent to the controller that has registered to receive the asynchronous failure notification. This corresponds to the `module_id = 3`, and the `notification_id = 1`. For more information, see [Registering for Asynchronous Failure Notification](#).



# How to Configure Notifications

## Setting Password on the Controller

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>username <i>user_name</i></b>  <b>Example:</b> Switch(config)# username guest123	Configures the username.  • <i>user_name</i> —username.
Step 3	<b>enable password <i>password</i></b>  <b>Example:</b> Switch(config)# enable password lab123	Configures the password.  • <i>password</i> —password.
Step 4	<b>exit</b>  <b>Example:</b> Switch(config)# exit	Exits to the privileged EXEC mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# username guest123
Switch(config)# enable password lab123
Switch(config)# exit
```

## Viewing Notifications

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.

	Command or Action	Purpose
Step 2	<b>controller nid <i>1/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>ProvisionNotifications</b>  <b>Example:</b> Switch(config-controller)# ProvisionNotifications	Enters the Notifications mode.
Step 4	<b>getNotificationList listAllNotifications_req</b>  <b>Example:</b> Switch(config-controller-ProvisionNotifications)# getNotificationList listAllNotifications_req	Displays the supported notifications list for that module.
Step 5	<b>getNotificationList review</b>  <b>Example:</b> Switch(config-controller-ProvisionNotifications)# getNotificationList review	Displays the configuration.
Step 6	<b>getNotificationList commit</b>  <b>Example:</b> Switch(config-controller-ProvisionNotifications)# getNotificationList commit	Sends the configuration to the NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionNotifications)# exit	Exits to the config-controller mode.

### Configuration Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionNotifications
Switch(config-controller-ProvisionNotifications)# getNotificationList
listAllNotifications_req
Switch(config-controller-ProvisionNotifications)# getNotificationList review

Commands in queue:
  getNotificationList listAllNotifications_req

Switch(config-controller-ProvisionNotifications)# getNotificationList commit

  GetNotificationList_Output.listAllNotifications_resp.notification[0].module_id = 1
  GetNotificationList_Output.listAllNotifications_resp.notification[0].module_description
= 'HeartBeat'
  GetNotificationList_Output.listAllNotifications_resp.notification[0].notification_id =
1

GetNotificationList_Output.listAllNotifications_resp.notification[0].notification_description
= 'Heartbeat Notifications'
  GetNotificationList_Output.listAllNotifications_resp.notification[1].module_id = 2
  GetNotificationList_Output.listAllNotifications_resp.notification[1].module_description

```

```

= 'ConfigChangeTrap'
  GetNotificationList_Output.listAllNotifications_resp.notification[1].notification_id =
  1

GetNotificationList_Output.listAllNotifications_resp.notification[1].notification_description
= 'Config Change Notifications'
  GetNotificationList_Output.listAllNotifications_resp.notification[2].module_id = 3
  GetNotificationList_Output.listAllNotifications_resp.notification[2].module_description
= 'AsyncNotification'
  GetNotificationList_Output.listAllNotifications_resp.notification[2].notification_id =
  1

GetNotificationList_Output.listAllNotifications_resp.notification[2].notification_description
= 'ICLI command failure'

  GetNotificationList Commit Success!!!

Switch(config-controller-ProvisionNotifications)# exit

```

## Configuring Notifications

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid <i>I/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionNotifications</b>  <b>Example:</b> Switch(config-controller)# ProvisionNotifications	Enters the Notifications mode.
<b>Step 4</b>	<b>setNotificationReceiver setNotificationReceiver_req {heartbeat <i>heartbeat</i>   http_BA_password <i>WORD</i>   http_BA_user <i>WORD</i>   http_file_path <i>WORD</i>   http_server_address <i>WORD</i>}</b>  <b>Example:</b> Switch(config-controller-ProvisionNotifications)# setNotificationReceiver setNotificationReceiver_req heartbeat 30  Switch(config-controller-ProvisionNotifications)# setNotificationReceiver setNotificationReceiver_req http_BA_password lab123  Switch(config-controller-ProvisionNotifications)# setNotificationReceiver setNotificationReceiver_req http_BA_user guest123  Switch(config-controller-ProvisionNotifications)# setNotificationReceiver	Configures the values for receiving the notifications. <ul style="list-style-type: none"> <li>• <b>heartbeat</b>—Specifies the rate at which keepalive packets are expected (in seconds).</li> <li>• <b>heartbeat</b>—Heartbeat rate. The range is from 1 to 65535.</li> <li>• <b>http_BA_password</b>—Specifies the HTTP basic authentication password.</li> <li>• <b>WORD</b>—Password.</li> <li>• <b>http_BA_user</b>—Specifies the HTTP basic authentication user.</li> <li>• <b>WORD</b>—user.</li> </ul>

	Command or Action	Purpose
	<pre>setNotificationReceiver_req http_file_path myfiles/nid_notification  Switch(config-controller-ProvisionNotifications)# setNotificationReceiver setNotificationReceiver_req http_server_address 10.20.30.40</pre>	<ul style="list-style-type: none"> <li>• <b>http_file_path</b>—Specifies the name of a document/resource. For example: /nid_notification.</li> <li>• <i>WORD</i>—name of a document.</li> <li>• <b>http_server_address</b>—Specifies the HTTP server IP address.</li> <li>• <i>WORD</i>—HTTP Server IP address.</li> </ul>
<b>Step 5</b>	<p><b>setNotificationReceiver review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionNotifications)# setNotificationReceiver review</pre>	Displays the configuration.
<b>Step 6</b>	<p><b>setNotificationReceiver commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionNotifications)# setNotificationReceiver commit</pre>	Sends the configuration to the NID.
<b>Step 7</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionNotifications)# exit</pre>	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionNotifications
Switch(config-controller-ProvisionNotifications)# setNotificationReceiver
setNotificationReceiver_req heartbeat 30
Switch(config-controller-ProvisionNotifications)# setNotificationReceiver
setNotificationReceiver_req http_BA_password lab123
Switch(config-controller-ProvisionNotifications)# setNotificationReceiver
setNotificationReceiver_req http_BA_user guest123
Switch(config-controller-ProvisionNotifications)# setNotificationReceiver
setNotificationReceiver_req
http_file_path myfiles/nid_notification
Switch(config-controller-ProvisionNotifications)# setNotificationReceiver
setNotificationReceiver_req
http_server_address 10.20.30.40
Switch(config-controller-ProvisionNotifications)# setNotificationReceiver review

Commands in queue:
  setNotificationReceiver setNotificationReceiver_req heartbeat 30
  setNotificationReceiver setNotificationReceiver_req http_BA_password lab123
  setNotificationReceiver setNotificationReceiver_req http_BA_user guest123
  setNotificationReceiver setNotificationReceiver_req http_file_path
myfiles/nid_notification
  setNotificationReceiver setNotificationReceiver_req http_server_address 10.20.30.40

Switch(config-controller-ProvisionNotifications)# setNotificationReceiver commit

SetNotificationReceiver_Output.setNotificationReceiver_resp.registerOK = true
```

```

SetNotificationReceiver_Output.setNotificationReceiver_resp.cookie = 5120

SetNotificationReceiver Commit Success!!!!

Switch(config-controller-ProvisionNotifications)# exit

```

**Note**

Use this procedure to generate multiple cookies. In the above mentioned example, 5120 is the cookie value.

## Registering for HeartBeat Notification

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionNotifications</b>  <b>Example:</b> Switch(config-controller)# ProvisionNotifications	Enters the Notifications mode.
<b>Step 4</b>	<b>registerForNotification regForNotification_req {cookie cookie value   notifications_list List of notifications {enable {enable   disable}   module_id Module ID   notification_id Notification ID }}</b>  <b>Example:</b>  Switch(config-controller-ProvisionNotifications)# registerForNotification regForNotification_req cookie 5120  Switch(config-controller-ProvisionNotifications)# registerForNotification regForNotification_req notifications_list 1 enable enable  Switch(config-controller-ProvisionNotifications)# registerForNotification regForNotification_req notifications_list 1 module_id 1  Switch(config-controller-ProvisionNotifications)# registerForNotification regForNotification_req notifications_list 1 notification_id 1  <b>Note</b> For the Heartbeat notification, the notification_list is 1, the module_id is 1, and the notification_id is 1.	Lists all the registered notifications under the generated cookie. <ul style="list-style-type: none"> <li>• <b>cookie</b>—Specifies the notification cookie with unique cookie value.</li> <li>• <b>cookie value</b>—cookie value. The range is from 1 to 65535.</li> <li>• <b>notifications_list</b>—Specifies the list of notifications.</li> <li>• <b>List of notifications</b>—list of notification ranges from 1 to 10, where, the supported lists are from 1 to 3.</li> <li>• <b>enable</b>—Enables or disables the notification.</li> <li>• <b>module_id</b>—Specifies the module ID from which notifications are desired.</li> <li>• <b>Module ID</b>—Module ID. The range is from 1 to 65536.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>notification_id</b>—Specifies the notification ID.</li> <li>• <i>Notification ID</i>—list of notification ranges from 1 to 10, wherein the supported lists are from 1 to 3.</li> </ul>
<b>Step 5</b>	<b>registerForNotification review</b>  <b>Example:</b> Switch(config-controller-ProvisionNotifications)# registerForNotification review	Displays the configuration.
<b>Step 6</b>	<b>registerForNotification commit</b>  <b>Example:</b> Switch(config-controller-ProvisionNotifications)# registerForNotification commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionNotifications)# exit	Exits to the config-controller mode.

### Configuration Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionNotifications
Switch(config-controller-ProvisionNotifications)# registerForNotification
regForNotification_req cookie 5120
Switch(config-controller-ProvisionNotifications)# registerForNotification
regForNotification_req
notifications_list 1 enable enable
Switch(config-controller-ProvisionNotifications)# registerForNotification
regForNotification_req
notifications_list 1 module_id 1
Switch(config-controller-ProvisionNotifications)# registerForNotification
regForNotification_req
notifications_list 1 notification_id 1
Switch(config-controller-ProvisionNotifications)# registerForNotification review

Commands in queue:
  registerForNotification regForNotification_req cookie 5120
  registerForNotification regForNotification_req notifications_list 1 enable enable
  registerForNotification regForNotification_req notifications_list 1 module_id 1
  registerForNotification regForNotification_req notifications_list 1 notification_id 1

Switch(config-controller-ProvisionNotifications)# registerForNotification commit

  RegisterForNotification_Output.regForNotification_resp = 0
  RegisterForNotification Commit Success!!!

Switch(config-controller-ProvisionNotifications)# exit

```

## Registering for Config Change Trap Notification

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>configure terminal</b></p> <p><b>Example:</b> Switch# configure terminal</p>	Enters global configuration mode.
Step 2	<p><b>controller nid 1/NID_ID</b></p> <p><b>Example:</b> Switch(config)# controller nid 1/1</p>	Enters the controller configuration mode.
Step 3	<p><b>ProvisionNotifications</b></p> <p><b>Example:</b> Switch(config-controller)# ProvisionNotifications</p>	Enters the Notifications mode.
Step 4	<p><b>registerForNotification regForNotification_req {cookie <i>cookie value</i>   notifications_list <i>List of notifications</i> {enable {enable   disable}   module_id <i>Module ID</i>   notification_id <i>Notification ID</i> }}</b></p> <p><b>Example:</b> Switch(config-controller-ProvisionNotifications)# registerForNotification regForNotification_req cookie 5120 Switch(config-controller-ProvisionNotifications)# registerForNotification regForNotification_req notifications_list 2 enable enable Switch(config-controller-ProvisionNotifications)# registerForNotification regForNotification_req notifications_list 2 module_id 2 Switch(config-controller-ProvisionNotifications)# registerForNotification regForNotification_req notifications_list 2 notification_id 1 Switch(config-controller-ProvisionNotifications)# registerForNotification regForNotification_req cookie 5120 Switch(config-controller-ProvisionNotifications)# registerForNotification regForNotification_req notifications_list 2 enable enable Switch(config-controller-ProvisionNotifications)# registerForNotification regForNotification_req notifications_list 2 module_id 2 Switch(config-controller-ProvisionNotifications)# registerForNotification regForNotification_req notifications_list 2 notification_id 1</p> <p><b>Note</b> For the ConfigChangeTrap notification, the notification_list is 2, the module_id is 2, and the notification_id is 1.</p>	<p>Lists all the registered notifications under the generated cookie.</p> <ul style="list-style-type: none"> <li>• <b>cookie</b>—Specifies the notification cookie with unique cookie value.</li> <li>• <b>cookie value</b>—cookie value. The range is from 1 to 65535.</li> <li>• <b>notifications_list</b>—Specifies the list of notifications.</li> <li>• <b>List of notifications</b>—list of notification ranges from 1 to 10, where, the supported lists are from 1 to 3.</li> <li>• <b>enable</b>—Enables or disables the notification.</li> <li>• <b>module_id</b>—Specifies the module ID from which notifications are desired.</li> <li>• <b>Module ID</b>—Module ID. The range is from 1 to 65536.</li> <li>• <b>notification_id</b>—Specifies the notification ID.</li> <li>• <b>Notification ID</b>—list of notification ranges from 1 to 10, wherein the supported lists are from 1 to 3.</li> </ul>

	Command or Action	Purpose
<b>Step 5</b>	<b>registerForNotification review</b>  <b>Example:</b> Switch(config-controller-ProvisionNotifications)# registerForNotification review	Displays the configuration.
<b>Step 6</b>	<b>registerForNotification commit</b>  <b>Example:</b> Switch(config-controller-ProvisionNotifications)# registerForNotification commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionNotifications)# exit	Exits to the config-controller mode.

### Configuration Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionNotifications
Switch(config-controller-ProvisionNotifications)# registerForNotification
regForNotification_req cookie 5120
Switch(config-controller-ProvisionNotifications)# registerForNotification
regForNotification_req notifications_list 2 enable enable
Switch(config-controller-ProvisionNotifications)# registerForNotification
regForNotification_req notifications_list 2 module_id 2
Switch(config-controller-ProvisionNotifications)# registerForNotification
regForNotification_req notifications_list 2 notification_id 1
Switch(config-controller-ProvisionNotifications)# registerForNotification review

Commands in queue:
  registerForNotification regForNotification_req cookie 5120
  registerForNotification regForNotification_req notifications_list 2 enable enable
  registerForNotification regForNotification_req notifications_list 2 module_id 2
  registerForNotification regForNotification_req notifications_list 2 notification_id 1

Switch(config-controller-ProvisionNotifications)# registerForNotification commit

  RegisterForNotification_Output.regForNotification_resp = 0
  RegisterForNotification Commit Success!!!

Switch(config-controller-ProvisionNotifications)# exit

```



## Registering for Asynchronous Failure Notification

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>configure terminal</b></p> <p><b>Example:</b> Switch# configure terminal</p>	Enters global configuration mode.
Step 2	<p><b>controller nid 1/NID_ID</b></p> <p><b>Example:</b> Switch(config)# controller nid 1/1</p>	Enters the controller configuration mode.
Step 3	<p><b>ProvisionNotifications</b></p> <p><b>Example:</b> Switch(config-controller)# ProvisionNotifications</p>	Enters the Notifications mode.
Step 4	<p><b>registerForNotification regForNotification_req {cookie cookie value   notifications_list List of notifications {enable {enable   disable}   module_id Module ID   notification_id Notification ID }}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionNotifications)# registerForNotification regForNotification_req cookie 5120  Switch(config-controller-ProvisionNotifications)# registerForNotification regForNotification_req notifications_list 3 enable enable  Switch(config-controller-ProvisionNotifications)# registerForNotification regForNotification_req notifications_list 3 module_id 3  Switch(config-controller-ProvisionNotifications)# registerForNotification regForNotification_req notifications_list 3 notification_id 1</pre> <p><b>Note</b> For the Asynchronous failure notification, the notification_list is 3, the module_id is 3, and the notification_id is 1.</p>	<p>Lists all the registered notifications under the generated cookie.</p> <ul style="list-style-type: none"> <li>• <b>cookie</b>—Specifies the notification cookie with unique cookie value.</li> <li>• <b>cookie value</b>—cookie value. The range is from 1 to 65535.</li> <li>• <b>notifications_list</b>—Specifies the list of notifications.</li> <li>• <b>List of notifications</b>—list of notification ranges from 1 to 10, where, the supported lists are from 1 to 3.</li> <li>• <b>enable</b>—Enables or disables the notification.</li> <li>• <b>module_id</b>—Specifies the module ID from which notifications are desired.</li> <li>• <b>Module ID</b>—Module ID. The range is from 1 to 65536.</li> <li>• <b>notification_id</b>—Specifies the notification ID.</li> <li>• <b>Notification ID</b>—list of notification ranges from 1 to 10, wherein the supported lists are from 1 to 3.</li> </ul>

	Command or Action	Purpose
<b>Step 5</b>	<b>registerForNotification review</b>  <b>Example:</b> Switch(config-controller-ProvisionNotifications)# registerForNotification review	Displays the configuration.
<b>Step 6</b>	<b>registerForNotification commit</b>  <b>Example:</b> Switch(config-controller-ProvisionNotifications)# registerForNotification commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionNotifications)# exit	Exits to the config-controller mode.

### Configuration Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionNotifications
Switch(config-controller-ProvisionNotifications)# registerForNotification
regForNotification_req cookie 5120
Switch(config-controller-ProvisionNotifications)# registerForNotification
regForNotification_req notifications_list 3 enable enable
Switch(config-controller-ProvisionNotifications)# registerForNotification
regForNotification_req notifications_list 3 module_id 3
Switch(config-controller-ProvisionNotifications)# registerForNotification
regForNotification_req notifications_list 3 notification_id 1
Switch(config-controller-ProvisionNotifications)# registerForNotification review

Commands in queue:
  registerForNotification regForNotification_req cookie 5120
  registerForNotification regForNotification_req notifications_list 3 enable enable
  registerForNotification regForNotification_req notifications_list 3 module_id 3
  registerForNotification regForNotification_req notifications_list 3 notification_id 1

Switch(config-controller-ProvisionNotifications)# registerForNotification commit

RegisterForNotification_Output.regForNotification_resp = 0
RegisterForNotification Commit Success!!!

Switch(config-controller-ProvisionNotifications)# exit

```

## Listing Notifications

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>ProvisionNotifications</b>  <b>Example:</b> Switch(config-controller)# ProvisionNotifications	Enters the Notifications mode.
Step 4	<b>listRegisteredNotification listNotificationsRegistered {cookie cookie value}</b>  <b>Example:</b> Switch(config-controller-ProvisionNotifications)# listRegisteredNotification listNotificationsRegistered cookie 5120	Lists all the registered notifications under the generated cookie.  <ul style="list-style-type: none"> <li>• <b>cookie</b>—Specifies the notification cookie with unique cookie value.</li> <li>• <b>cookie value</b>—cookie value. The range is from 1 to 65535.</li> </ul>
Step 5	<b>listRegisteredNotification review</b>  <b>Example:</b> Switch(config-controller-ProvisionNotifications)# listRegisteredNotification review	Displays the configuration.
Step 6	<b>listRegisteredNotification commit</b>  <b>Example:</b> Switch(config-controller-ProvisionNotifications)# listRegisteredNotification commit	Sends the configuration to the NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionNotifications)# exit	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionNotifications
Switch(config-controller-ProvisionNotifications)# listRegisteredNotification
```

```

listNotificationsRegistered cookie 5120
Switch(config-controller-ProvisionNotifications)# listRegisteredNotification review

Commands in queue:
  listRegisteredNotification listNotificationsRegistered cookie 5120

Switch(config-controller-ProvisionNotifications)# listRegisteredNotification commit

  ListRegisteredNotification_Output.regForNotification_req.notifications_list[0].module_id
= 1

ListRegisteredNotification_Output.regForNotification_req.notifications_list[0].notification_id
= 1
  ListRegisteredNotification_Output.regForNotification_req.notifications_list[0].enable
= true
  ListRegisteredNotification_Output.regForNotification_req.notifications_list[1].module_id
= 2

ListRegisteredNotification_Output.regForNotification_req.notifications_list[1].notification_id
= 1
  ListRegisteredNotification_Output.regForNotification_req.notifications_list[1].enable
= true
  ListRegisteredNotification_Output.regForNotification_req.notifications_list[2].module_id
= 3

ListRegisteredNotification_Output.regForNotification_req.notifications_list[2].notification_id
= 1
  ListRegisteredNotification_Output.regForNotification_req.notifications_list[2].enable
= true
  ListRegisteredNotification_Output.regForNotification_req.cookie = 5120

  ListRegisteredNotification Commit Success!!!

Switch(config-controller-ProvisionNotifications)# exit

```

## Deleting Notifications

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionNotifications</b>  <b>Example:</b> Switch(config-controller)# ProvisionNotifications	Enters the Notifications mode.
<b>Step 4</b>	<b>delNotificationReceiver delNotifReceiver_req {cookie cookie value}</b>	Deletes the notifications under the cookie. <ul style="list-style-type: none"> <li>• <b>cookie</b>—Specifies the notification cookie with unique cookie value.</li> </ul>

	Command or Action	Purpose
	<b>Example:</b> Switch(config-controller-ProvisionNotifications)# delNotificationReceiver delNotifReceiver_req cookie 5120	<ul style="list-style-type: none"> <li>• <i>cookie value</i>—cookie value.</li> </ul>
<b>Step 5</b>	<b>delNotificationReceiver review</b>  <b>Example:</b> Switch(config-controller-ProvisionNotifications)# delNotificationReceiver review	Displays the configuration.
<b>Step 6</b>	<b>delNotificationReceiver commit</b>  <b>Example:</b> Switch(config-controller-ProvisionNotifications)# delNotificationReceiver commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionNotifications)# exit	Exits to the config-controller mode.

### Configuration Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionNotifications
Switch(config-controller-ProvisionNotifications)# delNotificationReceiver delNotifReceiver_req
cookie 5120
Switch(config-controller-ProvisionNotifications)# delNotificationReceiver review

Commands in queue:
  delNotificationReceiver delNotifReceiver_req cookie 5120

Switch(config-controller-ProvisionNotifications)# delNotificationReceiver commit

  DelNotificationReceiver_Output.delNotifReceiver_resp = false

  DelNotificationReceiver Commit Success!!!

Switch(config-controller-ProvisionNotifications)# exit

```

### What to Do Next

After deleting the notification, use the **listRegisteredNotification listNotificationsRegistered {cookie cookie value}** command to verify if the delete operation is successful.

```

Switch(config-controller-ProvisionNotifications)# listRegisteredNotification
listNotificationsRegistered cookie cookie value
Switch(config-controller-ProvisionNotifications)# listRegisteredNotification review
Switch(config-controller-ProvisionNotifications)# listRegisteredNotification commit

```





## Zero Touch Provisioning

Zero Touch Provisioning (ZTP) automates configuration of Cisco ME 1200 Series Carrier Ethernet Access Device (hereafter known as Cisco ME 1200 NID) when it is deployed either in standalone operating mode or through a directly connected upstream user premise equipment (UPE) controller such as Cisco ME3600/ME3800 or Cisco ASR920. When connected through a UPE-based controller, provisioning of CE Services can be done from the remote controller mode. Otherwise, CLI on Cisco ME1200 NID can be accessed using SSH to provision CE Services once ZTP process is completed .


The ZTP process is activated by pressing the ZTP pinhole reset button found on the front of the Cisco ME 1200 NID. This minimizes manual operator intervention and helps reduce customers' initial deployment costs.



**Note**

The only interface for the ZTP is the ZTP button and the status LED, both found on the front of the Cisco ME 1200 NID.

**Figure 1: Cisco ME 1200 Topology-Typical Deployment**

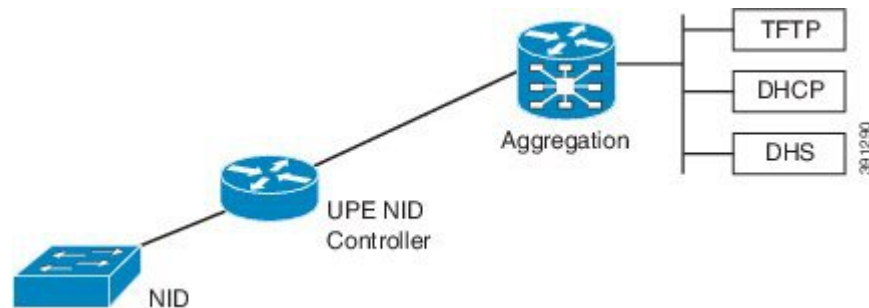

- [Restrictions for ZTP, page 72](#)
- [ZTP Activation, page 72](#)

## Restrictions for ZTP

- ZTP inherits the security levels of the protocols it uses. Therefore, ZTP must be used in a trusted environment, where all security concerns are handled by protocols or technologies it uses.
- ZTP is not supported over IPv6.

## ZTP Activation

Pressing the ZTP reset button triggers a series of steps that result in provisioning the Cisco ME 1200 NID with a complete, operational configuration.

- 1 [Start ZTP.](#)
- 2 [Restore to factory defaults.](#)
- 3 [Get management VLAN Configuration from LLDP-MED.](#)
- 4 [Start the DHCP client on VLAN interface.](#)
- 5 [Download and apply the initial configuration file from a location provided by the DHCP client.](#)
- 6 [Use reverse DNS to obtain the host name of the device.](#)
- 7 [Download and apply a specific configuration file.](#)



---

**Note**

Ensure that initial and specific configuration files are present on the TFTP server before starting the ZTP process.


---

- 8 [Copy the running configuration to startup configuration.](#)



The following figure depicts the process pictorially:

**Figure 2: ZTP Activation Process**

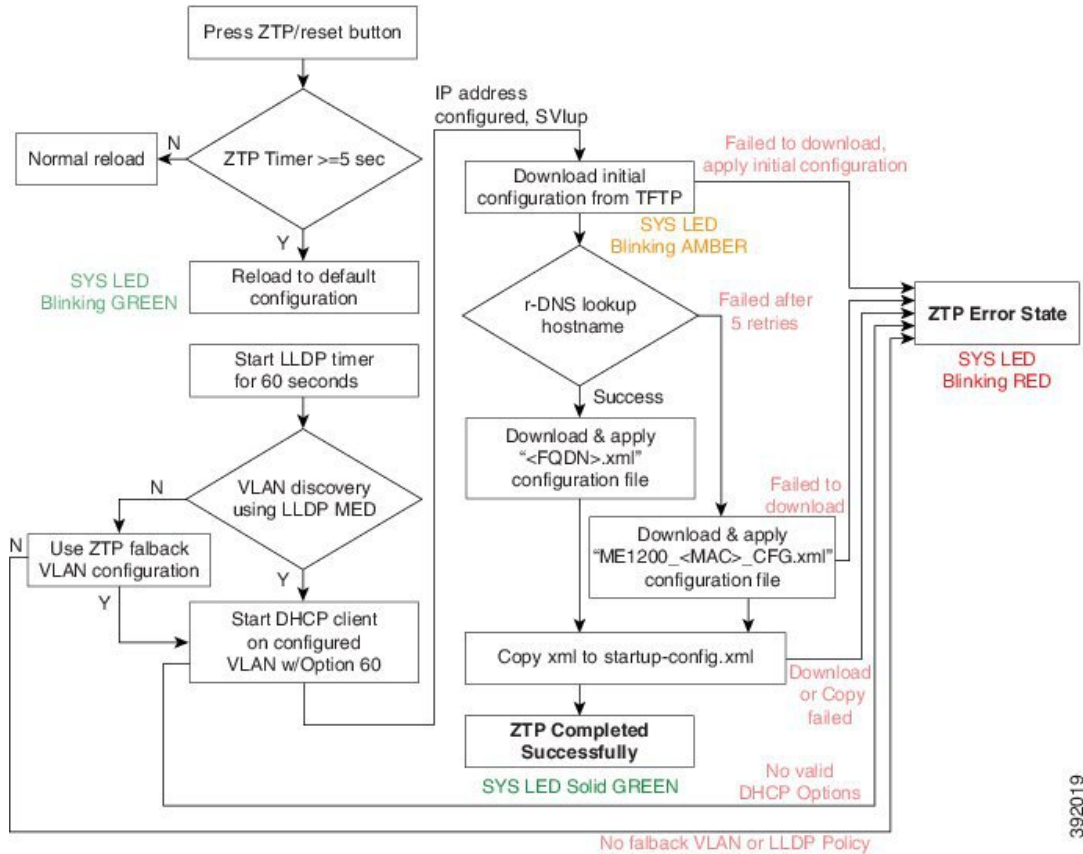

392019

This process is explained in detail in the following sections.

### UPE Controller Configuration

On the UPE NID Controller, such as Cisco ME 3600X Series Ethernet Access Switch, following DHCP server, management VLAN configuration is required:

- Configure the DHCP pool and add the TFTP and DNS configurations through DHCP options. The following is a sample DHCP pool:

```
ip dhcp excluded-address 7.6.0.1 7.6.19.51
ip dhcp excluded-address 7.6.19.64 7.6.255.255
ip dhcp pool ztp-test
network 7.6.0.0 255.255.255.0
default-router 7.6.0.10                                -> Adding local SVI IP as default gateway
for Cisco ME 1200 NID
option 60 ascii ME1200-00-3A-99-FD-45-34              -> Adding Cisco ME 1200 NID MAC
option 43 ip 7.0.0.221                                -> Adding TFTP server
option 67 ascii "ME1200_CFG"                         -> Adding initial configuration-file
dns-server 7.0.0.217
```

- Enable LLDP-MED network Policy TLV on the UPE NID Controller.

```
Switch(config)# interface gigabit 0/1                 -> Physical port on UPE connected to
```

```
Cisco ME 1200 NID
Switch(config)# lldp med-tlv-select network-policy
Switch(config)# lldp transmit
Switch(config)# lldp receive
Switch(config)# exit
```

- Run LLDP.  
Switch(config)# lldp run
- Configure an interface connecting to the 7.6.x.x switch and allowing VLAN (e.g. VLAN 10) to be used as management VLAN to ensure reachability to network gateway, or DHCP, TFTP, and DNS servers.
- Configure the interface connecting to Cisco ME 1200 NID as trunk.
- Assign management VLAN with the interface connecting to Cisco ME 1200 NID using the following command in global config mode

```
Switch(config)# platform nid-controller assign vlan 10 gigabitEthernet 1/1
```

## Step 1—Start ZTP

The ZTP activation is started by pressing the ZTP reset button for five seconds or more.



**Note** If the ZTP reset button is pressed for less than five seconds, a cold reload is issued.



**Note** When one instance of the ZTP activation is active, another instance cannot be started. Wait for the ZTP activation to complete (check ZTP status using LED to determine if it was successful or moved to error state) before starting the process again.

## Step 2—Reload Defaults

When ZTP activation is triggered, it causes the Cisco ME 1200 NID to reload with a default configuration that includes LLDP MED endpoint connectivity mode on all ports.

The Cisco ME 1200 NID may have links on several ports when the ZTP activation is started. All such ports are candidates for being used for the ZTP activation, and must be ready to receive the LLDP-MED TLV, where a packet is sent on a point-to-point link with a well-known multicast destination MAC.

The LLDP-MED information is sent every 30 seconds. To ensure that all ports receive the LLDP-MED TLV, a 60-second timer starts the count down for LLDP initialization on all ports.

## Step 3—Get Management VLAN Configuration

### VLAN Discovery using remote UPE-based controller

The first step after ZTP reload is the discovery of a management VLAN between the User-Facing Premise Equipment (UPE) NID Controller, such as the Cisco ME 3600X Series Ethernet Access Switch, and one or more Cisco ME 1200 NIDs. In this step, the LLDP-MED is used to acquire the management VLAN configuration.

The Cisco ME 1200 NID can be configured to act either as an end-point or a connectivity link. The default configuration type is an end-point, where all ports are scanned for received LLDP-MED broadcast. However, only those ports that have received a network policy with voice application type are considered. These ports are configured accordingly, and a VLAN interface is created on the defined VLAN.

If none of the ports received LLDP-MED TLVs after 60 seconds, or interface on UPE NID controller is not configured to allow a specific management VLAN, ZTP process tries to configure a fallback VLAN as described below. Hence it is better to check configurations and ensure there is no network connectivity issue while in this step.

### VLAN Discovery in standalone operating mode

If Cisco ME1200 NID is deployed without UPE NID controller or directly connected switch upstream, which does not support LLDP-MED Network Policy TLV, a fallback mechanism is used to complete VLAN discovery. This assumes that an external DHCP server is present on the network, which can support DHCP Option 60 and 43, and allocate IP address to ME1200 (Note: Option 60 unique identifier string will be of the form "ME1200-00-3A-99-FD-45-34", where 00:3a:99:fd:45:34 is a sample MAC address of the Cisco ME1200.

The fallback VLAN discovery can be described as follows:

- 1 When ZTP is triggered using the push button on Cisco ME 1200 NID, a special, default configuration is loaded, which includes the following commands:

```
ztp fallback vlan 1-4095 frame-type tagged interface Gi 1/1-6
ztp fallback vlan 1 frame-type untagged interface Gi 1/1-6
```

This causes DHCP replies coming from an external DHCP server to be processed by Cisco ME1200 NID.

- 2 If a DHCP OFFER containing a VLAN tag in the range of 1-4095, or DHCP OFFER on VLAN 1 (untagged) is received on any one of the ports 1-6, it is used to determine management VLAN.
- 3 To avoid a flood of DHCP messages from being intercepted by ME1200, only DHCP replies containing DHCP Option 60 & 43 are intercepted.

The VLAN that is determined from this fallback mechanism is used in subsequent steps of the ZTP process.



#### Note

The default fallback VLAN configuration can also be modified by user and the modified configuration allowed to persist across reloads. From the DHCP pool network range and deployment, user may know *a priori* of the VLAN or range of VLANs from which OFFERS are sent by DHCP server. Hence it is recommended to modify fallback VLAN configuration from default to a reasonable VLAN range.

Example 1:

If DHCP server is on VLAN 400 and it's connecting port type is tagged, following configuration change during initial Cisco ME1200 NID configuration will cause DHCP OFFERS on VLAN 400 to be processed when ZTP is triggered in standalone mode.

```
ztp fallback vlan 400 frame-type tagged interface Gi 1/1-6
```

If DHCP server is directly connected to one of the interfaces (say, interface 5), this configuration can be modified further as:

```
ztp fallback vlan 400 frame-type tagged interface Gi 1/5
```

Example 2:

If DHCP server is on VLAN 100 and it's connecting port type is untagged, following configuration change during initial Cisco ME1200 NID configuration causes DHCP OFFERS on VLAN 100 to be processed when ZTP is triggered in standalone mode.

```
ztp fallback vlan 100 frame-type untagged interface Gi 1/1-6
```



#### Note

Only a single VLAN can be configured if port-type is untagged.

If user wishes to disable fallback VLAN configuration, following command can be configured.

```
no ztp fallback vlan
```

Once configuration is modified for above steps, user can copy running-config to startup-config prior to ZTP reset. This will cause modified fallback configuration to be present when ZTP process is restarted.

## ZTP for Cisco ME 1200 NIDs in Linear Topology


If the network topology involves one or more Cisco ME 1200 NID downstream from the Cisco ME 1200 NID connected to UPE, the following steps are required to ensure ZTP works as expected. In this case, each Cisco ME 1200 NID is connected to the upstream Cisco ME 1200 NID through a point-to-point link.

For ZTP to work in this topology, you must trigger ZTP reset on the downstream Cisco ME 1200 NID after ZTP has successfully completed on the upstream Cisco ME 1200 NID.

In addition, before ZTP button is pressed on the downstream Cisco ME 1200 NID, the upstream Cisco ME 1200 NID which has just completed ZTP successfully requires a change in LLDP-MED device type—from endpoint to network connectivity. This single manual step is required to further propagate LLDP towards the downstream Cisco ME 1200 NID.

Consider the following topology:

**Figure 3: Cisco ME 1200 NID in a Linear Topology**

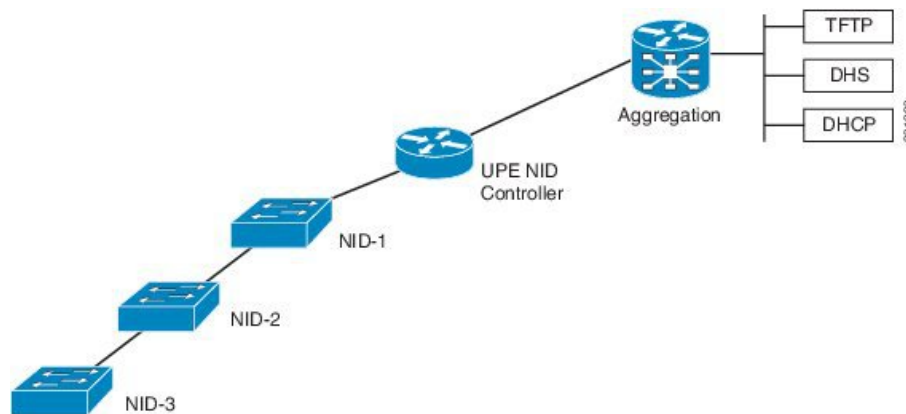

### Configuration on Cisco ME 1200 NID1 Before Starting the ZTP Process on Cisco ME 1200 NID2:

First, on Cisco ME 1200 NID2, configure a LLDP MED media VLAN policy for voice application-type, with frame-type and VLAN set to the same value as the upstream Cisco ME 1200 NID on which ZTP has completed. For example,

```
Switch(config)# lldp med media-vlan-policy 1 voice tagged 10 12-priority 0 dscp 0
```

Second, on the upstream ME1200 NID1, modify the interface connected to Cisco ME 1200 NID2, in this case GigabitEthernet 1/4, to LLDP MED connectivity type. Also, associate this interface to the same media VLAN policy configured on Cisco ME 1200 NID2. A sample configuration is provided below.

```
interface GigabitEthernet 1/4
switchport mode trunk
lldp med media-vlan policy-list 1      -> Assigning media VLAN policy
lldp med type connectivity             -> Configuring NID1 as network device
no spanning-tree
lldp transmit                          -> LLDP transmission is enabled
lldp receive                           -> LLDP reception is enabled
```

**Tip**

The above configuration can be included in the Cisco ME 1200 NID1 final configuration file to avoid manual configuration after ZTP on Cisco ME 1200 NID1.


**Next Steps**

- 1 Start ZTP on Cisco ME 1200 NID1.
- 2 When ZTP is finished on Cisco ME 1200 NID-1, start ZTP on Cisco ME 1200 NID2.

## ZTP for Cisco ME 1200 NIDs in a Ring Topology

Consider the following topology:

**Figure 4: LLDP-MED in a G.8032 Ring Topology**

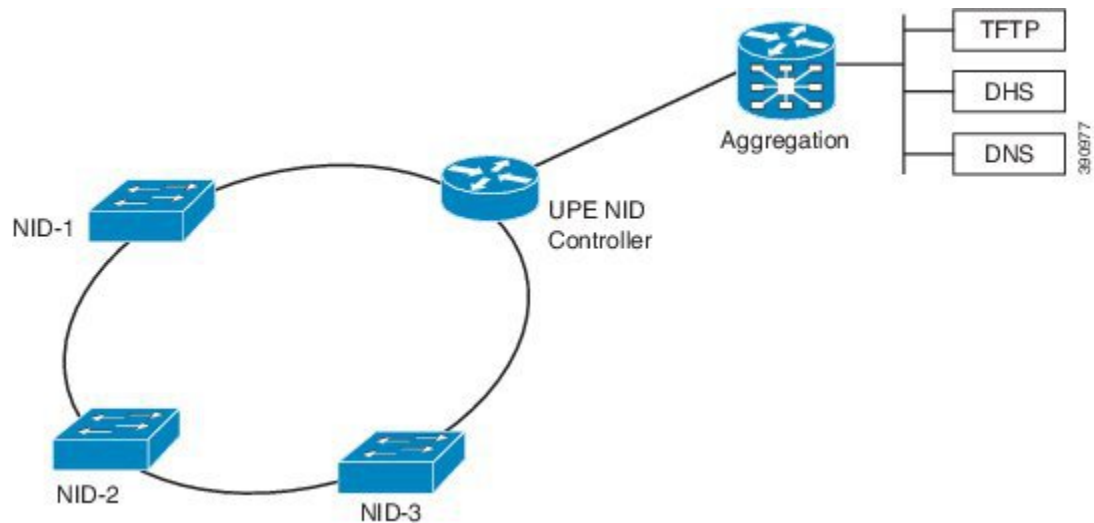

In this deployment, while Cisco ME 1200 NID-1 receives VLAN through LLDP-MED Network Policy TLV and initiates DHCP Discovery, the Cisco ME 1200 NIDs that are downstream to Cisco ME 1200 NID-1 do not receive LLDP-MED TLVs. This is because LLDP-MED TLVs are sent only between endpoint devices and are not propagated beyond Cisco ME 1200 NID-1.

To allow LLDP-MED TLVs to be propagated to all downstream Cisco ME 1200 NIDs once Cisco ME 1200 NID-1 completes VLAN discovery, modify the port configuration in the same manner as the linear chain topology deployment.

## Step 4—Start the DHCP Client on the VLAN Interface

A DHCP client is started on all the VLAN interfaces created in the previous step. To identify itself as a device undergoing ZTP, the DHCP client on Cisco ME 1200 NID adds DHCP Option 60 to the DHCPDISCOVER/DHCPREQUEST messages on the newly-discovered management VLAN, that it sends to the DHCP server.

The Option 60 Vendor Class Identifier in DHCPDISCOVER/DHCPREQUEST message is encoded as a unique ASCII string formed by concatenating the string "ME1200" with the complete Cisco ME 1200 NID

MAC address in the form similar to ME1200-XX-XX-XX-XX-XX, for example, ME1200-00-01-C1-00-00-00. In addition, as part of the parameters list sent in DHCPREQUEST, Cisco ME 1200 NID also requests the DHCP server to send following options:

- Option 43—This option is used by client to accept the DHCP ACK only from DHCP server or the UPE NID Controller specifically configured for it. The Vendor Specific Information in Option 43 is the IP address of the TFTP server that contains the configuration file.
- Option 67—This is the startup configuration filename.
- Option 3—Default gateway
- Option 6—DNS Server




---

**Note** Options 60, 43, and 67 are not used when the DHCP client is used in a non-ZTP mode.

---

### Wait for the DHCP Client(s) to Enter the Bound State

When multiple DHCP clients have been started, the first client to reach bound state with requested DHCP options is used further in the ZTP activation process.




---

**Note** If no DHCP client reaches bound state with the requested options within 120 seconds, ZTP activation process enters error state.

---

Once the connectivity is established between the Cisco ME 1200 NID and the UPE NID Controller, the Cisco ME 1200 NID can be remotely managed from the UPE NID Controller.

A database of NID instances, MAC addresses, IP addresses, TFTP server, attached physical ports is maintained on the UPE NID Controller. This information can be used for management of selected Cisco ME 1200 NIDs.

The association between the Cisco ME 1200 NID and UPE NID Controller is maintained by sending and receiving periodic IP-based heartbeat messages.

## Step 5—Download and Apply the Initial Configuration

When the DHCP client on the Cisco ME 1200 NID receives the DHCPACK, it uses the information from Option 43 and Option 67 from the DHCP client to download the initial configuration file. This configuration file is intended as a pre-staging configuration, containing basic reachability information such as the gateway, TFTP, DNS server, or the default VLAN configuration so that one or more NIDs can be added to network prior to ZTP auto-configuration. But if there is no requirement, this can be an empty configuration file. The intention of this step is to ensure that ME1200 NID can be reachable to gateway, TFTP, DNS servers. The filename should be specified as an ASCII string using Option 67 in DHCP pool configuration on UPE.

If the download operation fails or if the configuration could not be applied, the ZTP process enters the error state.




---

**Note** The value of the Option 67 field will be taken as the configuration filename, including any file extension.

---

## Step 6—Reverse DNS Lookup to Obtain Hostname

Using the IP address of the DHCP client and the DNS server provided by the DHCP client the Cisco ME 1200 NID performs a reverse DNS query to derive its host name. When the host name is derived, it is added to the current running configuration.

In case of failure, the reverse DNS process is retried five times. After five retries, the host name is configured with the MAC address of the device encoded in the format as: 00\_01\_C1\_00\_00\_00 (hex string values in uppercase), where 00:01:C1:00:00:00 is a sample ME1200 NID MAC address. This allows ZTP process to continue.

## Step 7—Download and Apply Specific Configuration

To perform Reverse DNS lookup, the DNS server must include the definition for a forward zone and a reverse zone. Specifically, the forward zone must include definitions for:

- Authoritative name server (NS record) containing fully-qualified domain name (FQDN) to be used for response.
- Address (A) record with hostname-IP address mapping.

The reverse zone must include the PTR record with IP address-name mapping.



**Note** FQDN is set as hostname at the end of this step.

The following is a sample DNS configuration:

```
NS    nid1.example.com
A     192.168.2.100
nid1  IN    A   192.168.2.100
nid2  IN    A   192.168.2.101
nid3  IN    A   192.168.2.102
nid4  IN    A   192.168.2.103
...

2.168.192.in-addr.arpa.
PTR   server.example.com.
101  IN    PTR   nid2.example.com.
102  IN    PTR   nid3.example.com.
103  IN    PTR   nid4.example.com.
```

The specific configuration of the device is downloaded from the same TFTP server as the initial configuration. If reverse DNS lookup fails to retrieve a hostname, then ZTP activation process looks for a filename with the following format on TFTP server:

NID\_MAC\_ADDR\_CFG.xml

For example, 00\_3B\_99\_FE\_5E\_00\_CFG.xml(hex string values in uppercase)

If there is no file stored in .xml format, then ZTP process enters the error state. In the error state, status LED is set to blinking red.



**Note** It is recommended that user makes 2 file copies of the saved, intended configuration - one named as per the FQDN, such as nid2.example.com.xml, and the other based on the MAC address, such as 00\_3B\_99\_FE\_5E\_00\_CFG.xml.

## Step 8—Copy Running Configuration to Startup Configuration

The first time ZTP is performed, you must store a default xml configuration in the fqdn.xml derived from rDNS and in NID\_MAC\_ADDR\_CFG.xml. The following is the content of this default xml file:

```
<?xml version="1.0" encoding="UTF-8"?>
<SOAP-ENV:Envelope xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
xmlns:ns0="http://new.webservice.namespace" xmlns:SOAP-ENV="http
://schemas.xmlsoap.org/soap/envelope/">
  <SOAP-ENV:Body>
    <run_cfg_resp>
    </run_cfg_resp>
  </SOAP-ENV:Body>
</SOAP-ENV:Envelope>
```

Only after this configuration is applied on Cisco ME 1200 NID, Step 8 will generate a complete XML configuration and store the file as flash:startup-config.xml. This file can be used to replace the default configuration in fqdn.xml and NID\_MAC\_ADDR\_CFG.xml as required.

As a last step in ZTP activation, the running configuration (which was the result of Cisco ME 1200 NID-specific configuration applied after reverse DNS and TFTP download) is copied to startup configuration (flash:startup-config.xml). This ensures that running configuration is persistent.

If there is an error in copying the configuration, the ZTP process enters the error state.

The ZTP process has completed, the status LED is set to solid green.





## Configuring Synchronous Ethernet

The Cisco ME 1200 NID support Synchronous Ethernet (SyncE), which is the PHY-layer frequency-synchronization solution for IEEE 802.3 links. It is an evolution of the conventional Ethernet and Ethernet + SDH and SONET-based synchronization. SyncE is used to synchronize and send clock information to remote sites on the network. Each network element along the synchronization path must support SyncE. SyncE provides only frequency synchronization, not related to time or space.

- [Prerequisites for Configuring SyncE, page 81](#)
- [Restrictions for Configuring SyncE, page 81](#)
- [Information About Synchronous Ethernet, page 82](#)
- [How to Configure SyncE, page 84](#)
- [Understanding Clock Redundancy, page 95](#)
- [Understanding SyncE Timers, page 98](#)
- [Understanding ANEG Mode, page 103](#)
- [Verifying SyncE Status, page 105](#)

### Prerequisites for Configuring SyncE

- NID must be added to the controller.
- NID must be accessible from the controller.

### Restrictions for Configuring SyncE

- The port number three (3) cannot be nominated to source number one (1).

# Information About Synchronous Ethernet

This chapter describes the Synchronous Ethernet features, standards, and limitations in the Cisco ME 1200 Series Carrier Ethernet Access Device. This chapter also describes procedures to configure Synchronous Ethernet.

## Synchronous Ethernet Overview

A separate external time-division multiplexing (TDM) circuit is required to provide synchronized timing to multiple remote network elements (NEs) for packet transport networks like Cisco Carrier Packet Transport system. The Synchronous Ethernet (SyncE) feature addresses this requirement by providing effective timing to the remote NEs through a packet network without using an external circuit for timing.

With Ethernet equipment gradually replacing existing Synchronous Optical Networking (SONET) and Synchronous Digital Hierarchy (SDH) equipment in service-provider networks, frequency synchronization is required to provide high-quality clock synchronization over Ethernet ports. The SyncE feature provides the required synchronization at the physical level. Operation messages maintain SyncE links and ensure that a node always derives timing from the most reliable source. SyncE uses the Ethernet Synchronization Message Channel (ESMC) to enable traceability of the best clock source to correctly define the timing source and prevent a timing loop.

The Cisco ME 1200 Series Carrier Ethernet Access Device supports Synchronous Ethernet (SyncE), which is the physical layer frequency-synchronization solution for IEEE 802.3 links. SyncE is defined by the ITU-T standards such as G.8261, G.8262, G.8264, and G.781. It is an evolution of the conventional Ethernet and Ethernet + SDH and SONET-based synchronization. SyncE is used to synchronize and send clock information to remote sites on the network. For SyncE to work, each network element along the synchronization path must support SyncE. SyncE provides only frequency synchronization, not related to time or space.

## Understanding SyncE

SyncE provides the Ethernet physical layer network (PHY) level frequency distribution of known common precision frequency references. Clocks for use in SyncE are compatible with the clocks used in the SONET/SDH synchronization network. To achieve network synchronization, synchronization information is transmitted through the network via synchronous network connections with performance of egress clock. In SONET/SDH the communication channel for conveying clock information is SSM, and in SyncE it is the ESMC.

SyncE is a standard for distribution of frequency over Ethernet links. Other standards (IEEE Std. 1588 Precision Time Protocol [PTP], IETF Network Time Protocol [NTP], and so on) have been and are being developed or enhanced for high-quality time distribution and Adaptive Clock Recovery (ACR) requirements.

To maintain the timing chain in SONET/SDH, operators often use SSM. Information provided by SSM Quality Levels (SSM-QL) helps a node derive timing from the most reliable source and prevent timing loops. The SONET/SDH header has a QL information present in the S1 bytes of its header. Hence, the SONET/SDH does not require any specific channel for QL information exchange. As the Ethernet does not have the QL information in its header, it requires ESMC for QL information. Because Ethernet networks are not required to be synchronous on all links or in all locations, a specific channel, the ESMC channel defined in G.8264, provides this service. ESMC is composed of the standard Ethernet header for an organization-specific slow protocol, the ITU-T OUI; a specific ITU-T subtype; an ESMC-specific header; a flag field; and a type, length, value (TLV) structure: the use of flags and TLVs aimed at improving the management of Synchronous Ethernet links and the associated timing change.

For more information, see [Configuring Synchronous Ethernet](#).

## SyncE Standards

- ITU-T G.8261: Timing and synchronization aspects in packet network

- ITU-T G.8262: Timing characteristics of Synchronous Ethernet equipment slave clock
- ITU-T G.8264: Distribution of timing through packet networks
- ITU-T G.781: Synchronization layer functions

## Understanding SyncE Protocols

Network clocking uses the Synchronization Status Messages (SSM) mechanism to exchange the Quality Level (QL) of the clock between the network elements. In Ethernet, Ethernet Synchronization Message Channel (ESMC) is used for SSM exchange.

The two important protocols used for SyncE are:

- Synchronization Status Messages (SSM)
- Ethernet Synchronization Messaging Channel (ESMC)

### Synchronization Status Messages (SSM)

Network elements use Synchronization Status Messages (SSM) to inform the neighboring elements about the Quality Level (QL) of the clock. The non-ethernet interfaces such as optical interfaces and SONET/T1/E1 SPA framers uses SSM. The key benefits of the SSM functionality:

- Prevents timing loops.
- Provides fast recovery when a part of the network fails.
- Ensures that a node derives timing from the most reliable clock source.

### Ethernet Synchronization Messaging Channel (ESMC)

To maintain a logical communication channel in synchronous network connections, ethernet relies on a channel called Ethernet synchronization Messaging Channel (ESMC). This is based on IEEE 802.3 Organization Specific Slow Protocol standards. ESMC relays the SSM code that represents the Quality Level (QL) of the Ethernet Equipment Clock (EEC) in a physical layer.

The ESMC packets are received only for those ports configured as clock sources and transmitted on all the SyncE interfaces in the system. These packets are then processed by the Clock selection algorithm and are used to select the best clock. The Tx frame is generated based on the QL value of the selected clock source and sent to all the enabled SyncE ports.

## Understanding SyncE Clocks

### Clock Selection Algorithm

The clock selection algorithm selects the best available synchronization source from the nominated sources. This algorithm exhibits nonrevertive behavior among the clock sources with the same QL value, and always selects the signal with the best QL value. For clock option SDH, the default is revertive, and for clock option SONET, the default is nonrevertive.

The following parameters contribute to the selection process:

- Quality level (QL)
- Signal fail through QL-FAILED

- Priority
- External commands (Manual, Auto-revertive and so on)

### Clock Selection Modes

A clock selection is said to be the best, when the clock source is configured with the highest QL and with the highest priority (for the ones with equal QL).

The following are different clock selection modes:

- **Manual**—the clock selector is manually set to the chosen clock source. If the manually selected clock source fails, then, the clock selector goes to the holdover state.
- **Selected**—the clock selector selects the clock manually, however, the highest priority selected clock source becomes the Source.
- **NonRevertive**—the clock selector selects the best clock source only done when the selected clock fails.
- **Revertive**—the selection of the best clock source is constantly searched for.
- **Holdover**—the clock selector is forced to the holdover state.
- **Freerun**—the clock selector is forced to the free run state.

Manual mode is used to force selection of a specific source. It is also used to switch back to the primary source if auto-nonrevertive mode is selected and the failure is cleared. Selected mode is used to freeze the current clock source, in case of a failure on switchover.

# How to Configure SyncE

## Configuring SyncE Global Defaults

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# <code>configure terminal</code>	Enters global configuration mode.
Step 2	<b>controller nid <i>1/NID_ID</i></b>  <b>Example:</b> Switch(config)# <code>controller nid 1/1</code>	Enters the controller configuration mode.
Step 3	<b>syncE</b>  <b>Example:</b> Switch(config-controller)# <code>SyncE</code>	Enters the SyncE mode.

	Command or Action	Purpose
<b>Step 4</b>	<b>setSyncEglobalDefaultConfig set_global_default_config</b>  <b>Example:</b> Switch(config-controller-SyncE)# setSyncEglobalDefaultConfig set_global_default_config	Sets the global configuration to defaults. This means that the SyncE feature is not configured on the device.
<b>Step 5</b>	<b>setSyncEglobalDefaultConfig review</b>  <b>Example:</b> Switch(config-controller-SyncE)# setSyncEglobalDefaultConfig review	Displays the configuration.
<b>Step 6</b>	<b>setSyncEglobalDefaultConfig commit</b>  <b>Example:</b> Switch(config-controller-SyncE)# setSyncEglobalDefaultConfig commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-SyncE)# exit	Exits to the config-controller mode.

### Configuration Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# SyncE
Switch(config-controller-SyncE)# setSyncEglobalDefaultConfig set_global_default_config
Switch(config-controller-SyncE)# setSyncEglobalDefaultConfig review

Commands in queue:
  setSyncEglobalDefaultConfig set_global_default_config

Switch(config-controller-SyncE)# setSyncEglobalDefaultConfig commit

  SetSyncEglobalDefaultConfig Commit Success!!!

Switch(config-controller-SyncE)# exit

```

## Viewing SyncE Global Defaults

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.

	Command or Action	Purpose
<b>Step 2</b>	<b>controller nid</b> <i>1/NID_ID</i>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>syncE</b>  <b>Example:</b> Switch(config-controller)# SyncE	Enters the SyncE mode.
<b>Step 4</b>	<b>getSyncEglobalconfig get_global_config</b>  <b>Example:</b> Switch(config-controller-SyncE)# getSyncEglobalconfig get_global_config	Displays the SyncE global configuration details.
<b>Step 5</b>	<b>getSyncEglobalconfig review</b>  <b>Example:</b> Switch(config-controller-SyncE)# getSyncEglobalconfig review	Displays the configuration that are in queue.
<b>Step 6</b>	<b>getSyncEglobalconfig commit</b>  <b>Example:</b> Switch(config-controller-SyncE)# getSyncEglobalconfig commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-SyncE)# exit	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# SyncE
Switch(config-controller-SyncE)# getSyncEglobalconfig get_global_config
Switch(config-controller-SyncE)# getSyncEglobalconfig review

Commands in queue:
  getSyncEglobalConfig get_global_config

Switch(config-controller-SyncE)# getSyncEglobalconfig commit

GetSyncEglobalConfig_Output.synce_global_conf.clock_select_config.t = 5
GetSyncEglobalConfig_Output.synce_global_conf.clock_select_config.u.revertive = ''
GetSyncEglobalConfig_Output.synce_global_conf.wait_to_restore = 5
GetSyncEglobalConfig_Output.synce_global_conf.SSM_QL_for_holdover.t = 1
GetSyncEglobalConfig_Output.synce_global_conf.SSM_QL_for_holdover.u.QL_NONE = ''
GetSyncEglobalConfig_Output.synce_global_conf.SSM_QL_for_freerun.t = 1
GetSyncEglobalConfig_Output.synce_global_conf.SSM_QL_for_freerun.u.QL_NONE = ''
GetSyncEglobalConfig_Output.synce_global_conf.EEC_Option.t = 1
GetSyncEglobalConfig_Output.synce_global_conf.EEC_Option.u.EEC1 = ''

GetSyncEglobalConfig Commit Success!!!
```

```
Switch(config-controller-SyncE)# exit
```

## Configuring SyncE Clock Defaults

This task configures the SyncE configurations to defaults.

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>syncE</b>  <b>Example:</b> Switch(config-controller)# SyncE	Enters the SyncE mode.
<b>Step 4</b>	<b>setSyncEclockDefaultConfig set_syncce_clock_config_defaults_req</b>  <b>Example:</b> Switch(config-controller-SyncE)# setSyncEclockDefaultConfig set_syncce_clock_config_defaults_req	Set SyncE default Clock configurations.
<b>Step 5</b>	<b>setSyncEclockDefaultConfig review</b>  <b>Example:</b> Switch(config-controller-SyncE)# setSyncEclockDefaultConfig review	Displays the configuration.
<b>Step 6</b>	<b>setSyncEclockDefaultConfig commit</b>  <b>Example:</b> Switch(config-controller-SyncE)# setSyncEclockDefaultConfig commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-SyncE)# exit	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# SyncE
```

```

Switch(config-controller-SyncE)# setSyncEclockDefaultConfig
set_syncce_clock_config_defaults_req
Switch(config-controller-SyncE)# setSyncEclockDefaultConfig review

Commands in queue:
  setSyncEclockDefaultConfig set_syncce_clock_config_defaults_req

Switch(config-controller-SyncE)# setSyncEclockDefaultConfig commit

  SetSyncEclockDefaultConfig Commit Success!!!

Switch(config-controller-SyncE)# exit

```

## Viewing SyncE Clock Defaults

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>syncE</b>  <b>Example:</b> Switch(config-controller)# SyncE	Enters the SyncE mode.
Step 4	<b>getSyncEclockdefaultConfig</b> <b>get_syncce_clock_config_defaults_req</b>  <b>Example:</b> Switch(config-controller-SyncE)# getSyncEclockdefaultConfig get_syncce_clock_config_defaults_req	Displays the SyncE default Clock configurations.
Step 5	<b>getSyncEclockdefaultConfig review</b>  <b>Example:</b> Switch(config-controller-SyncE)# getSyncEclockdefaultConfig review	Displays the configuration.
Step 6	<b>getSyncEclockdefaultConfig commit</b>  <b>Example:</b> Switch(config-controller-SyncE)# getSyncEclockdefaultConfig commit	Sends the configuration to the NID.



	Command or Action	Purpose
Step 7	<p><b>exit</b></p> <p><b>Example:</b> Switch(config-controller-SyncE)# exit</p>	Exits to the config-controller mode.

**Configuration Example**

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# SyncE
Switch(config-controller-SyncE)# getSyncEclockdefaultConfig
get_sync_e_clock_config_defaults_req
Switch(config-controller-SyncE)# getSyncEclockdefaultConfig review
```

```
Commands in queue:
getSyncEclockDefaultConfig get_sync_e_clock_config_defaults_req
```

```
Switch(config-controller-SyncE)# getSyncEclockdefaultConfig commit
```

```
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[0].state = false
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[0].port = 1
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[0].priority = 0
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[0].SSM_overwrite.t = 1
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[0].SSM_overwrite.u.QL_NONE
= ''
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[0].hold_off.t = 1
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[0].hold_off.u.disabled
= ''
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[0].aneg_mode.t = 1
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[0].aneg_mode.u.none =
''
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[1].state = false
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[1].port = 2
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[1].priority = 0
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[1].SSM_overwrite.t = 1
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[1].SSM_overwrite.u.QL_NONE
= ''
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[1].hold_off.t = 1
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[1].hold_off.u.disabled
= ''
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[1].aneg_mode.t = 1
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[1].aneg_mode.u.none =
''
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[2].state = false
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[2].port = 3
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[2].priority = 0
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[2].SSM_overwrite.t = 1
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[2].SSM_overwrite.u.QL_NONE
= ''
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[2].hold_off.t = 1
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[2].hold_off.u.disabled
= ''
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[2].aneg_mode.t = 1
GetSyncEclockDefaultConfig_Output.clock_sel_config.source_configs[2].aneg_mode.u.none =
''
GetSyncEclockDefaultConfig_Output.clock_sel_config.ssm_enable_ports.GigabitEthernet_1_UNI
= false
GetSyncEclockDefaultConfig_Output.clock_sel_config.ssm_enable_ports.GigabitEthernet_2_UNI
= false
GetSyncEclockDefaultConfig_Output.clock_sel_config.ssm_enable_ports.GigabitEthernet_3_UNI
= false
GetSyncEclockDefaultConfig_Output.clock_sel_config.ssm_enable_ports.GigabitEthernet_4_UNI
= false
```

```

GetSyncEclockDefaultConfig_Output.clock_sel_config.ssm_enable_ports.GigabitEthernet_5_UNI
= false
GetSyncEclockDefaultConfig_Output.clock_sel_config.ssm_enable_ports.GigabitEthernet_6_UNI
= false

GetSyncEclockDefaultConfig Commit Success!!!

Switch(config-controller-SyncE)# exit

```

## Configuring the Clock Source

### Configuring Clock Source

#### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>syncE</b>  <b>Example:</b> Switch(config-controller)# SyncE	Enters the SyncE mode.
<b>Step 4</b>	<b>setSyncEclockConfig clock_sel_config {source_configs source_configs port Physical port }</b>  <b>Example:</b> Switch(config-controller-SyncE)# setSyncEclockConfig clock_sel_config source_configs 0 port 2	Configures the clock source on the port. <ul style="list-style-type: none"> <li>• <b>source_configs</b>—Specifies the source configurations. <ul style="list-style-type: none"> <li>◦ <i>Physical port</i>—Physical port. The range is from 1 to 6.</li> </ul> </li> <li>• <b>port</b>—Specifies the physical port. <ul style="list-style-type: none"> <li>◦ <i>source_configs</i>—nominate a port number to be the clock source. The range is from 1 to 2.</li> </ul> </li> </ul>
<b>Step 5</b>	<b>setSyncEclockConfig review</b>  <b>Example:</b> Switch(config-controller-SyncE)# setSyncEclockConfig review	Displays the configuration.

	Command or Action	Purpose
Step 6	<b>setSyncEclockConfig commit</b>  <b>Example:</b> Switch(config-controller-SyncE)# setSyncEclockConfig commit	Sends the configuration to the NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch((config-controller-)syncE)# exit	Exits the SyncE mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# SyncE
Switch(config-controller-SyncE)# setSyncEclockConfig clock_sel_config source_configs 0 port
2
Switch(config-controller-SyncE)# setSyncEclockConfig review

Commands in queue:
  setSyncEclockConfig clock_sel_config source_configs 0 port 2

Switch(config-controller-SyncE)# setSyncEclockConfig commit

  SetSyncEclockConfig Commit Success!!!

Switch(config-controller-SyncE)# exit
```

## Viewing Clock Configurations

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid <i>1/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>syncE</b>  <b>Example:</b> Switch(config-controller)# SyncE	Enters the SyncE mode.

	Command or Action	Purpose
Step 4	<b>getSyncEclockConfig get_clock_config</b>  <b>Example:</b> Switch(config-controller-SyncE) # getSyncEclockConfig get_clock_config	Displays clock configuration.
Step 5	<b>setSyncEclockConfig review</b>  <b>Example:</b> Switch(config-controller-SyncE) # setSyncEclockConfig review	Displays the configuration.
Step 6	<b>getSyncEclockConfig commit</b>  <b>Example:</b> Switch(config-controller-SyncE) # getSyncEclockConfig commit	Sends the configuration to the NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-SyncE) # exit	Exits to the config-controller mode.

### Configuration Example

```

Switch# configure terminal
Switch(config)#controller nid 1/1
Switch(config-controller)# SyncE
Switch(config-controller-SyncE)# getSyncEclockConfig get_clock_config
Switch(config-controller-SyncE)# setSyncEclockConfig review

Commands in queue:
  getSyncEclockConfig get_clock_config

Switch(config-controller-SyncE)# getSyncEclockConfig commit

  GetSyncEclockConfig_Output.clock_sel_config.source_configs[0].state = true
  GetSyncEclockConfig_Output.clock_sel_config.source_configs[0].port = 4
  GetSyncEclockConfig_Output.clock_sel_config.source_configs[0].priority = 1
  GetSyncEclockConfig_Output.clock_sel_config.source_configs[0].SSM_overwrite.t = 2
  GetSyncEclockConfig_Output.clock_sel_config.source_configs[0].SSM_overwrite.u.QL_PRC =
'0'
  GetSyncEclockConfig_Output.clock_sel_config.source_configs[0].hold_off.t = 2
  GetSyncEclockConfig_Output.clock_sel_config.source_configs[0].hold_off.u.value = 800
  GetSyncEclockConfig_Output.clock_sel_config.source_configs[0].aneg_mode.t = 1
  GetSyncEclockConfig_Output.clock_sel_config.source_configs[0].aneg_mode.u.none = ''
  GetSyncEclockConfig_Output.clock_sel_config.source_configs[1].state = true
  GetSyncEclockConfig_Output.clock_sel_config.source_configs[1].port = 3
  GetSyncEclockConfig_Output.clock_sel_config.source_configs[1].priority = 0
  GetSyncEclockConfig_Output.clock_sel_config.source_configs[1].SSM_overwrite.t = 2
  GetSyncEclockConfig_Output.clock_sel_config.source_configs[1].SSM_overwrite.u.QL_PRC =
'0'
  GetSyncEclockConfig_Output.clock_sel_config.source_configs[1].hold_off.t = 2
  GetSyncEclockConfig_Output.clock_sel_config.source_configs[1].hold_off.u.value = 1000
  GetSyncEclockConfig_Output.clock_sel_config.source_configs[1].aneg_mode.t = 1
  GetSyncEclockConfig_Output.clock_sel_config.source_configs[1].aneg_mode.u.none = ''
  GetSyncEclockConfig_Output.clock_sel_config.source_configs[2].state = false
  GetSyncEclockConfig_Output.clock_sel_config.source_configs[2].port = 3
  GetSyncEclockConfig_Output.clock_sel_config.source_configs[2].priority = 0
  GetSyncEclockConfig_Output.clock_sel_config.source_configs[2].SSM_overwrite.t = 1

```

```

    GetSyncEClockConfig_Output.clock_sel_config.source_configs[2].SSM_overwrite.u.QL_NONE =
    ,
    GetSyncEClockConfig_Output.clock_sel_config.source_configs[2].hold_off.t = 1
    GetSyncEClockConfig_Output.clock_sel_config.source_configs[2].hold_off.u.disabled = ''
    GetSyncEClockConfig_Output.clock_sel_config.source_configs[2].aneg_mode.t = 1
    GetSyncEClockConfig_Output.clock_sel_config.source_configs[2].aneg_mode.u.none = ''
    GetSyncEClockConfig_Output.clock_sel_config.ssm_enable_ports.GigabitEthernet_1_UNI =
false
    GetSyncEClockConfig_Output.clock_sel_config.ssm_enable_ports.GigabitEthernet_2_UNI =
false
    GetSyncEClockConfig_Output.clock_sel_config.ssm_enable_ports.GigabitEthernet_3_UNI =
true
    GetSyncEClockConfig_Output.clock_sel_config.ssm_enable_ports.GigabitEthernet_4_UNI =
true
    GetSyncEClockConfig_Output.clock_sel_config.ssm_enable_ports.GigabitEthernet_5_UNI =
false
    GetSyncEClockConfig_Output.clock_sel_config.ssm_enable_ports.GigabitEthernet_6_UNI =
false

    GetSyncEClockConfig Commit Success!!!

Switch(config-controller-SyncE)# exit

```

## Overwriting the Quality Level (QL)

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid <i>1/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>syncE</b>  <b>Example:</b> Switch(config-controller)# SyncE	Enters the syncE mode.
<b>Step 4</b>	<b>setSyncEClockConfig clock_sel_config {source_configs   ssm_enable_ports {GigabitEthernet_1_UNI   GigabitEthernet_2_UNI   GigabitEthernet_3_UNI   GigabitEthernet_4_UNI   GigabitEthernet_5_UNI   GigabitEthernet_6_UNI} {disable   enable}}}</b>  <b>Example:</b> Switch(config-controller-SyncE)# setSyncEClockConfig clock_sel_config ssm_enable_ports GigabitEthernet_4_UNI enable	Enters the SyncE clock configuration to select the UNI ports. Here selecting the physical port 4: <ul style="list-style-type: none"> <li>• GigabitEthernet_1_UNI—Physical port 1.</li> <li>• GigabitEthernet_2_UNI—Physical port 2.</li> <li>• GigabitEthernet_3_UNI—Physical port 3.</li> <li>• GigabitEthernet_4_UNI—Physical port 4.</li> <li>• GigabitEthernet_5_UNI—Physical port 5.</li> <li>• GigabitEthernet_6_UNI—Physical port 6.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>disable</b>—Disables the SSM on the configured port.</li> <li>• <b>enable</b>—Enables the SSM on the configured port.</li> </ul>
<b>Step 5</b>	<pre>setSyncEclockConfig clock_sel_config {source_configs source_configs port Physical port }</pre> <p><b>Example:</b> Switch(config-controller-SyncE)# setSyncEclockConfig clock_sel_config source_configs 1 port 4</p>	<p>Configures the clock source on the port:</p> <ul style="list-style-type: none"> <li>• <i>source_configs</i>—Nominates a clock source, either 1 or 2.</li> <li>• <i>Physical port</i>—Physical port. The range is from 1 to 6.</li> </ul>
<b>Step 6</b>	<pre>setSyncEclockConfig clock_sel_config {source_configs source_configs SSM_overwrite {QL_DNU   QL_EEC1   QL_EEC2   QL_INV   QL_NONE   QL_PRC   QL_SSUA QL_SSUB}}}</pre> <p><b>Example:</b> Switch(config-controller-SyncE)# setSyncEclockConfig clock_sel_config source_configs 1 SSM_overwrite QL_PRC</p>	<p>Selects QL value to overwrite any received QL in an SSM message</p> <ul style="list-style-type: none"> <li>• <i>source_configs</i>—Nominate a port number to be the clock source. The range is from 1 to 2.</li> </ul>
<b>Step 7</b>	<pre>setSyncEclockConfig review</pre> <p><b>Example:</b> Switch(config-controller-SyncE)# setSyncEclockConfig review</p>	Displays the configuration.
<b>Step 8</b>	<pre>setSyncEclockConfig commit</pre> <p><b>Example:</b> Switch(config-controller-SyncE)# setSyncEclockConfig commit</p>	Sends the configuration to the NID.
<b>Step 9</b>	<pre>exit</pre> <p><b>Example:</b> Switch(config-controller-SyncE)# exit</p>	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# SyncE
Switch(config-controller-SyncE)# setSyncEclockConfig clock_sel_config ssm_enable_ports
GigabitEthernet_4_UNI enable
Switch(config-controller-SyncE)# setSyncEclockConfig clock_sel_config source_configs 1 port
4
Switch(config-controller-SyncE)# setSyncEclockConfig clock_sel_config source_configs 1
SSM_overwrite QL_PRC
Switch(config-controller-SyncE)# setSyncEclockConfig review
```

Commands in queue:

```

setSyncEclockConfig clock_sel_config ssm_enable_ports GigabitEthernet_4_UNI enable
setSyncEclockConfig clock_sel_config source_configs 1 port 4
setSyncEclockConfig clock_sel_config source_configs 0 SSM_overwrite QL_PRC

Switch(config-controller-SyncE)# setSyncEclockConfig commit

SetSyncEclockConfig Commit Success!!!

Switch(config-controller-SyncE)# exit

```

## Understanding Clock Redundancy

On the Cisco ME 1200 NID, it is possible to configure up to two clock sources. Any Ethernet port can act as a clock source. For the Cisco ME 1200 NID, external clock input does not exist. Based on the priority and Quality level (QL) of the clock sources, the best source is selected.

To select the best source, nominate the clock sources, and then set priorities for each of them. Enable SSM on ports used for synchronization. Note that QL overwrites the priority. That means, if port 2 receives QL-PRC and port 1 receives only QL-EEC1, and even though port 1 has higher priority than port 2, the port 2 is selected as QL overwrites.

## Configuring Clock Redundancy

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>syncE</b>  <b>Example:</b> Switch(config-controller)# SyncE	Enters the SyncE mode.
<b>Step 4</b>	<b>setSyncEclockConfig clock_sel_config {source_configs   ssm_enable_ports {GigabitEthernet_1_UNI   GigabitEthernet_2_UNI   GigabitEthernet_3_UNI   GigabitEthernet_4_UNI   GigabitEthernet_5_UNI   GigabitEthernet_6_UNI} {enable   disable}}}</b>  <b>Example:</b> Switch(config-controller-SyncE)# setSyncEclockConfig clock_sel_config ssm_enable_ports GigabitEthernet_5_UNI enable	Enters the SyncE clock configuration to select the UNI ports. Here selecting the physical port 5. <ul style="list-style-type: none"> <li>• <b>GigabitEthernet_1_UNI</b>—Physical port 1.</li> <li>• <b>GigabitEthernet_2_UNI</b>—Physical port 2.</li> <li>• <b>GigabitEthernet_3_UNI</b>—Physical port 3.</li> <li>• <b>GigabitEthernet_4_UNI</b>—Physical port 4.</li> <li>• <b>GigabitEthernet_5_UNI</b>—Physical port 5.</li> <li>• <b>GigabitEthernet_6_UNI</b>—Physical port 6.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>disable</b>—Disables the SSM on the configured port.</li> <li>• <b>enable</b>—Enables the SSM on the configured port.</li> </ul>
<b>Step 5</b>	<pre>setSyncEclockConfig clock_sel_config {source_configs   ssm_enable_ports {GigabitEthernet_1_UNI   GigabitEthernet_2_UNI   GigabitEthernet_3_UNI   GigabitEthernet_4_UNI   GigabitEthernet_5_UNI   GigabitEthernet_6_UNI} {enable   disable}}</pre> <p><b>Example:</b>  Switch(config-controller-SyncE)#  setSyncEclockConfig clock_sel_config  ssm_enable_ports GigabitEthernet_6_UNI enable</p>	<p>Enters the SyncE clock configuration to select the UNI ports. Here selecting the physical port 6.</p> <ul style="list-style-type: none"> <li>• <b>GigabitEthernet_1_UNI</b>—Physical port 1.</li> <li>• <b>GigabitEthernet_2_UNI</b>—Physical port 2.</li> <li>• <b>GigabitEthernet_3_UNI</b>—Physical port 3.</li> <li>• <b>GigabitEthernet_4_UNI</b>—Physical port 4.</li> <li>• <b>GigabitEthernet_5_UNI</b>—Physical port 5.</li> <li>• <b>GigabitEthernet_6_UNI</b>—Physical port 6.</li> <li>• <b>disable</b>—Disables the SSM on the configured port.</li> <li>• <b>enable</b>—Enables the SSM on the configured port.</li> </ul>
<b>Step 6</b>	<pre>setSyncEclockConfig clock_sel_config {source_configs source_configs port Physical port}</pre> <p><b>Example:</b>  Switch(config-controller-SyncE)#  setSyncEclockConfig clock_sel_config source_configs  1 port 5</p>	<p>Configures the clock source on the port. Here the configuration is done on port 5, and the <i>source_config</i> is set to 1.</p> <ul style="list-style-type: none"> <li>• <i>source_configs</i>—Nominate a port number to be the clock source. The range is from 1 to 2.</li> <li>• <i>Physical port</i>—Physical port. The range is from 1 to 6.</li> </ul>
<b>Step 7</b>	<pre>setSyncEclockConfig clock_sel_config {source_configs {priority priority}}</pre> <p><b>Example:</b>  Switch(config-controller-SyncE)#  setSyncEclockConfig clock_sel_config source_configs  1 priority 0</p>	<p>Sets the clock priority. Here the clock priority is set to 0.</p> <ul style="list-style-type: none"> <li>• <i>priority</i>—Clock priority value. Either 0 or 1.</li> </ul>
<b>Step 8</b>	<pre>setSyncEclockConfig clock_sel_config {source_configs source_configs state {enable   disable}}</pre> <p><b>Example:</b>  Switch(config-controller-SyncE)#  setSyncEclockConfig clock_sel_config source_configs  1 state enable</p>	<p>Enables or Disables the clock source.</p> <ul style="list-style-type: none"> <li>• <i>source_configs</i>—nominate a port number to be the clock source. The range is from 1 to 2.</li> </ul>
<b>Step 9</b>	<pre>setSyncEclockConfig clock_sel_config {source_configs source_configs hold_off {disabled    value {300 msec to 1800 msec}}}</pre>	<p>Sets the Hold-off timer value. Active loss of clock source is delayed by the selected amount of time. The clock selector changes the clock source if the loss of clock condition is cleared within this time.</p>



	Command or Action	Purpose
	<p><b>Example:</b></p> <pre>Switch(config-controller-SyncE) # setSyncEclockConfig clock_sel_config source_configs 1 hold_off value 1000</pre>	<ul style="list-style-type: none"> <li>• <i>source_configs</i>—nominate a port number to be the clock source. The range is from 1 to 2.</li> </ul>
<b>Step 10</b>	<p><b>setSyncEclockConfig clock_sel_config {source_configs source_configs port Physical port}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-SyncE) # setSyncEclockConfig clock_sel_config source_configs 0 port 5</pre>	<p>Configures the clock source on the port. Here the configuration is done on port 6, and the source_config is set to 0.</p> <ul style="list-style-type: none"> <li>• <i>source_configs</i>—Nominate a port number to be the clock source. The range is from 1 to 2.</li> <li>• <i>Physical port</i>—Physical port. The range is from 1 to 6.</li> </ul>
<b>Step 11</b>	<p><b>setSyncEclockConfig clock_sel_config {source_configs {priority priority}}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-SyncE) # setSyncEclockConfig clock_sel_config source_configs 0 priority 1</pre>	<p>Sets the clock priority. Here the clock priority is set to 1.</p> <ul style="list-style-type: none"> <li>• <i>priority</i>—Clock priority value. Either 0 or 1.</li> </ul>
<b>Step 12</b>	<p><b>setSyncEclockConfig clock_sel_config {source_configs source_configs state {enable   disable}}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-SyncE) # setSyncEclockConfig clock_sel_config source_configs 0 state enable</pre>	<p>Enables or Disables the clock source.</p> <ul style="list-style-type: none"> <li>• <i>source_configs</i>—Nominate a port number to be the clock source. The range is from 1 to 2.</li> </ul>
<b>Step 13</b>	<p><b>setSyncEclockConfig clock_sel_config {source_configs source_configs hold_off {disabled   value {300 msec to 1800 msec}}}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-SyncE) # setSyncEclockConfig clock_sel_config source_configs 0 hold_off value 800</pre>	<p>Sets the Hold-off timer value. Active loss of clock source is delayed by the selected amount of time. The clock selector changes the clock source if the loss of clock condition is cleared within this time.</p> <ul style="list-style-type: none"> <li>• <i>source_configs</i>—Nominate a port number to be the clock source. The range is from 1 to 2.</li> </ul>
<b>Step 14</b>	<p><b>setSyncEclockConfig review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-SyncE) # setSyncEclockConfig review</pre>	<p>Displays the configuration.</p>
<b>Step 15</b>	<p><b>setSyncEclockConfig commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-SyncE) # setSyncEclockConfig commit</pre>	<p>Sends the configuration to the NID.</p>

	Command or Action	Purpose
Step 16	<b>exit</b>  <b>Example:</b> Switch(config-controller-SyncE)# exit	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# SyncE
Switch(config-controller-SyncE)# setSyncEclockConfig clock_sel_config ssm_enable_ports
GigabitEthernet_5_UNI enable
Switch(config-controller-SyncE)# setSyncEclockConfig clock_sel_config ssm_enable_ports
GigabitEthernet_6_UNI enable
Switch(config-controller-SyncE)# setSyncEclockConfig clock_sel_config source_configs 1 port
5
Switch(config-controller-SyncE)# setSyncEclockConfig clock_sel_config source_configs 1
priority 0
Switch(config-controller-SyncE)# setSyncEclockConfig clock_sel_config source_configs 1 state
enable
Switch(config-controller-SyncE)# setSyncEclockConfig clock_sel_config source_configs 1
hold_off value 1000
Switch(config-controller-SyncE)# setSyncEclockConfig clock_sel_config source_configs 0 port
6
Switch(config-controller-SyncE)# setSyncEclockConfig clock_sel_config source_configs 0
priority 1
Switch(config-controller-SyncE)# setSyncEclockConfig clock_sel_config source_configs 0 state
enable
Switch(config-controller-SyncE)# setSyncEclockConfig clock_sel_config source_configs 0
hold_off value 800

Switch(config-controller-SyncE)# setSyncEclockConfig review

Commands in queue:
setSyncEclockConfig clock_sel_config ssm_enable_ports GigabitEthernet_5_UNI enable
setSyncEclockConfig clock_sel_config ssm_enable_ports GigabitEthernet_6_UNI enable
setSyncEclockConfig clock_sel_config source_configs 1 port 5
setSyncEclockConfig clock_sel_config source_configs 1 priority 0
setSyncEclockConfig clock_sel_config source_configs 1 state enable
setSyncEclockConfig clock_sel_config source_configs 1 hold_off value 1000
setSyncEclockConfig clock_sel_config source_configs 0 port 6
setSyncEclockConfig clock_sel_config source_configs 0 priority 1
setSyncEclockConfig clock_sel_config source_configs 0 state enable
setSyncEclockConfig clock_sel_config source_configs 0 hold_off value 800

Switch(config-controller-SyncE)# setSyncEclockConfig commit

SetSyncEclockConfig Commit Success!!!

Switch(config-controller-SyncE)# exit
```

## Understanding SyncE Timers

You can manage syncE timers by changing the priority of the clock sources. You can also influence selection by modifying the following timers:

- WTR (Wait to restore) Timer
- Hold-off Timer

### WTR Timer

The WTR time is activated on the falling edge of a clock source failure (in Revertive mode). This means that the clock source is first available for clock selection after WTR Time (can be cleared).

### Hold-off Timer

In the Hold-off timer, the active loss of clock source is delayed by the selected amount of time. The clock selector does not change the clock source if the loss of clock condition is cleared within this time.

## Configuring SyncE Timers

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>syncE</b>  <b>Example:</b> Switch(config-controller)# SyncE	Enters the syncE mode.
Step 4	<b>setSyncEglobalConfig sync_e_global_conf {EEC_Option   SSM_QL_for_freerun   SSM_QL_for_holdover   clock_select_config   wait_to_restore}</b>	Enters the SyncE global configuration. <ul style="list-style-type: none"> <li>• <b>EEC_Option</b>—Selects PLL EEC option.</li> <li>• <b>SSM_QL_for_freerun</b>—Transmits SSM QL value when clock selector is in Free Run Mode.</li> <li>• <b>SSM_QL_for_holdover</b>—Transmits SSM QL value when clock selector is in Hold Over State.</li> <li>• <b>clock_select_config</b>—Selection mode of nominated clock sources.</li> <li>• <b>wait_to_restore</b>—Select the wait to restore time.</li> </ul>
Step 5	<b>setSyncEglobalConfig sync_e_global_conf wait_to_restore wait to restore time</b>  <b>Example:</b> Switch(config-controller-SyncE)# setSyncEglobalConfig sync_e_global_conf wait_to_restore 1	Enters the wait to restore time. <ul style="list-style-type: none"> <li>• <b>wait to restore time</b>—Restore time. The range is from 0 to 12 minutes; enter the value zero to disable.</li> </ul>

	Command or Action	Purpose
<b>Step 6</b>	<p><b>setSyncEglobalConfig syncce_global_conf clock_select_config {freerun   holdover   manual manually set   nonrevertive   revertive   selected}</b></p> <p><b>Example:</b>  Switch(config-controller-SyncE)#  setSyncEglobalConfig syncce_global_conf  clock_select_config revertive</p>	<p>Enters the selection mode of nominated clock sources.</p> <ul style="list-style-type: none"> <li>• <b>freerun</b>—Selector is forced in free run.</li> <li>• <b>holdover</b>—Selector is forced in holdover.</li> <li>• <b>manual</b>—Selector is manually set to chosen clock source. <ul style="list-style-type: none"> <li>◦ <i>manually set</i>—Clock source. The range is from 1 to 2.</li> </ul> </li> <li>• <b>nonrevertive</b>—Automatic clock selection, selecting best clock source nonrevertively.</li> <li>• <b>revertive</b>—Automatic clock selection, selecting best clock source revertively.</li> <li>• <b>selected</b>—Manual clock selection, selecting pt selected clock source.</li> </ul>
<b>Step 7</b>	<p><b>setSyncEglobalConfig syncce_global_conf SSM_QL_for_holdover {QL_DNU   QL_EEC1   QL_EEC2   QL_INV   QL_NONE   QL_PRC   QL_SSUA QL_SSUB}</b></p> <p><b>Example:</b>  Switch(config-controller-SyncE)#  setSyncEglobalConfig syncce_global_conf  SSM_QL_for_holdover QL_EEC1</p>	<p>Transmits SSM QL value when clock selector is in Hold Over State.</p> <ul style="list-style-type: none"> <li>• <b>QL_DNU</b>—SSM QL value is QL_DNU.</li> <li>• <b>QL_EEC1</b>—SSM QL value is QL_EEC1.</li> <li>• <b>QL_EEC2</b>—SSM QL value is QL_EEC2.</li> <li>• <b>QL_INV</b>—SSM QL value is QL_INV.</li> <li>• <b>QL_NONE</b>—SSM QL value is QL_NONE.</li> <li>• <b>QL_PRC</b>—SSM QL value is QL_PRC.</li> <li>• <b>QL_SSUA</b>—SSM QL value is QL_SSUA.</li> <li>• <b>QL_SSUB</b>—SSM QL value is QL_SSUB.</li> </ul>
<b>Step 8</b>	<p><b>setSyncEglobalConfig syncce_global_conf SSM_QL_for_freerun {QL_DNU   QL_EEC1   QL_EEC2   QL_INV   QL_NONE   QL_PRC   QL_SSUA QL_SSUB}</b></p> <p><b>Example:</b>  Switch(config-controller-SyncE)#  setSyncEglobalConfig syncce_global_conf  SSM_QL_for_freerun QL_EEC2</p>	<p>Transmits SSM QL value when clock selector is in Free Run Mode.</p> <ul style="list-style-type: none"> <li>• <b>QL_DNU</b>—SSM QL value is QL_DNU.</li> <li>• <b>QL_EEC1</b>—SSM QL value is QL_EEC1.</li> <li>• <b>QL_EEC2</b>—SSM QL value is QL_EEC2.</li> <li>• <b>QL_INV</b>—SSM QL value is QL_INV.</li> <li>• <b>QL_NONE</b>—SSM QL value is QL_NONE.</li> <li>• <b>QL_PRC</b>—SSM QL value is QL_PRC.</li> <li>• <b>QL_SSUA</b>—SSM QL value is QL_SSUA.</li> <li>• <b>QL_SSUB</b>—SSM QL value is QL_SSUB.</li> </ul>

	Command or Action	Purpose
<b>Step 9</b>	<b>setSyncEglobalConfig sync_e_global_conf EEC_Option {EEC1   EEC2}</b>  <b>Example:</b> Switch(config-controller-SyncE)# setSyncEglobalConfig sync_e_global_conf EEC_Option EEC2	Selects PLL EEC option. <ul style="list-style-type: none"> <li>• <b>EEC1</b>—DPLL bandwidth is 3.5 Hz.</li> <li>• <b>EEC2</b>—DPLL bandwidth is 0.1 Hz.</li> </ul>
<b>Step 10</b>	<b>setSyncEglobalConfig review</b>  <b>Example:</b> Switch(config-controller-SyncE)# setSyncEglobalConfig review	Displays the configuration.
<b>Step 11</b>	<b>setSyncEglobalConfig commit</b>  <b>Example:</b> Switch(config-controller-SyncE)# setSyncEglobalConfig commit	Sends the configuration to the NID.
<b>Step 12</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-SyncE)# exit	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# SyncE
Switch(config-controller-SyncE)# setSyncEglobalConfig sync_e_global_conf wait_to_restore 1
Switch(config-controller-SyncE)# setSyncEglobalConfig sync_e_global_conf clock_select_config
revertive
Switch(config-controller-SyncE)# setSyncEglobalConfig sync_e_global_conf SSM_QL_for_holdover
QL_EEC1
Switch(config-controller-SyncE)# setSyncEglobalConfig sync_e_global_conf SSM_QL_for_freerun
QL_EEC2
Switch(config-controller-SyncE)# setSyncEglobalConfig sync_e_global_conf EEC_Option EEC2
Switch(config-controller-SyncE)# setSyncEglobalConfig review
```

Commands in queue:

```
setSyncEglobalConfig sync_e_global_conf wait_to_restore 1
setSyncEglobalConfig sync_e_global_conf clock_select_config revertive
setSyncEglobalConfig sync_e_global_conf SSM_QL_for_holdover QL_EEC1
setSyncEglobalConfig sync_e_global_conf SSM_QL_for_freerun QL_EEC2
setSyncEglobalConfig sync_e_global_conf EEC_Option EEC2
```

```
Switch(config-controller-SyncE)# setSyncEglobalConfig commit
```

```
SetSyncEglobalConfig Commit Success!!!
```

```
Switch(config-controller-SyncE)# exit
```

## Viewing SyncE Timers

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>syncE</b>  <b>Example:</b> Switch(config-controller)# SyncE	Enters the SyncE mode.
<b>Step 4</b>	<b>getSyncEglobalConfig get_global_config</b>  <b>Example:</b> Switch(config-controller-SyncE)# getSyncEglobalConfig get_global_config	Displays the SyncE global configuration.
<b>Step 5</b>	<b>getSyncEglobalConfig review</b>  <b>Example:</b> Switch(config-controller-SyncE)# getSyncEglobalConfig review	Sends the configuration to the NID.
<b>Step 6</b>	<b>getSyncEglobalConfig commit</b>  <b>Example:</b> Switch(config-controller-SyncE)# getSyncEglobalConfig commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-SyncE)# exit	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# SyncE
Switch(config-controller-SyncE)# getSyncEglobalConfig get_global_config
Switch(config-controller-SyncE)# getSyncEglobalConfig review
```

```
Commands in queue:
  getSyncEglobalConfig get_global_config
```

```
Switch(config-controller-SyncE)# getSyncEglobalConfig commit

GetSyncEglobalConfig_Output.synce_global_conf.clock_select_config.u.revertive = '0'
GetSyncEglobalConfig_Output.synce_global_conf.wait_to_restore = 1
GetSyncEglobalConfig_Output.synce_global_conf.SSM_QL_for_holdover.t = 6
GetSyncEglobalConfig_Output.synce_global_conf.SSM_QL_for_holdover.u.QL_EEC1 = '0'
GetSyncEglobalConfig_Output.synce_global_conf.SSM_QL_for_freerun.t = 1
GetSyncEglobalConfig_Output.synce_global_conf.SSM_QL_for_freerun.u.QL_NONE = ''
GetSyncEglobalConfig_Output.synce_global_conf.EEC_Option.t = 1
GetSyncEglobalConfig_Output.synce_global_conf.EEC_Option.u.EEC1 = ''

GetSyncEglobalConfig Commit Success!!!

Switch(config-controller-SyncE)# exit
```

## Understanding ANEG Mode

The Auto-negotiation (ANEG) mode is relevant for 1000BaseT ports only. To recover the clock from a port, the clock must be negotiated to the Slave mode. To distribute the clock, the port must be negotiated to the Master mode.

Following are the different ANEG modes that can be activated on a clock source port:

- **Prefer Slave**—the port negotiates to the Slave mode.
- **Prefer Master**—the port negotiates to the Master mode.
- **Forced Slave**—the port is forced to the Master mode.



**Note** The port in the **Locked** state always remains negotiated to the **Slave**.

## Configuring ANEG mode

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>syncE</b>  <b>Example:</b> Switch (config-controller)# SyncE	Enters the syncE mode.

	Command or Action	Purpose
<b>Step 4</b>	<pre>setSyncEclockConfig clock_sel_config {source_configs source_configs port Physical port}</pre> <p><b>Example:</b> Switch(config-controller-SyncE)# setSyncEclockConfig clock_sel_config source_configs 1 port 2</p>	<p>Configures the clock source on the port.</p> <ul style="list-style-type: none"> <li>• <i>source_configs</i>—Nominate a port number to be the clock source. The range is from 1 to 2.</li> <li>• <i>Physical port</i>—Physical port. The range is from 1 to 6.</li> </ul>
<b>Step 5</b>	<pre>setSyncEclockConfig clock_sel_config {source_configs source_configs aneg_mode {forced_slave   none   prefer_master   prefer_slave}}</pre> <p><b>Example:</b> Switch(config-controller-SyncE)# setSyncEclockConfig clock_sel_config source_configs 0 aneg_mode prefer_master</p>	<p>Configures the ANEG mode that is relevant to ports 1 and 2, which are 1000 base T.</p>
<b>Step 6</b>	<pre>setSyncEclockConfig review</pre> <p><b>Example:</b> Switch(config-controller-SyncE)# setSyncEclockConfig review</p>	<p>Displays the configuration.</p>
<b>Step 7</b>	<pre>setSyncEclockConfig commit</pre> <p><b>Example:</b> Switch(config-controller-SyncE)# setSyncEclockConfig commit</p>	<p>Sends the configuration to the NID.</p>
<b>Step 8</b>	<pre>exit</pre> <p><b>Example:</b> Switch(config-controller-SyncE)# exit</p>	<p>Exits to the config-controller mode.</p>

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# SyncE
Switch(config-controller-SyncE)# setSyncEclockConfig clock_sel_config source_configs 1 port
2
Switch(config-controller-SyncE)# setSyncEclockConfig clock_sel_config source_configs 0
aneg_mode prefer_master
Switch(config-controller-SyncE)# setSyncEclockConfig review

Commands in queue:
  setSyncEclockConfig clock_sel_config source_configs 1 port 2
  setSyncEclockConfig clock_sel_config source_configs 0 aneg_mode prefer_master

Switch(config-controller-SyncE)# setSyncEclockConfig commit

SetSyncEclockConfig Commit Success!!!

Switch(config-controller-SyncE)# exit
```



# Verifying SyncE Status

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid I/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>syncE</b>  <b>Example:</b> Switch(config-controller)# SyncE	Enters the SyncE mode.
Step 4	<b>showNetworkClock show_sync_e_status</b>  <b>Example:</b> Switch(config-controller-SyncE)# showNetworkClock show_sync_e_status	Displays the SyncE status.
Step 5	<b>exit</b>  <b>Example:</b> Switch(config-controller-SyncE)# exit	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# SyncE
Switch(config-controller-SyncE)# showNetworkClock show_sync_e_status

ShowNetworkClock_Output.show_network_clock.selector_state.t = 2
ShowNetworkClock_Output.show_network_clock.selector_state.u.holdover = ''
ShowNetworkClock_Output.show_network_clock.alarm_state[0].clock_source = 1
ShowNetworkClock_Output.show_network_clock.alarm_state[0].LOCS = false
ShowNetworkClock_Output.show_network_clock.alarm_state[0].SSM = false
ShowNetworkClock_Output.show_network_clock.alarm_state[0].WTR = false
ShowNetworkClock_Output.show_network_clock.alarm_state[1].clock_source = 2
ShowNetworkClock_Output.show_network_clock.alarm_state[1].LOCS = true
ShowNetworkClock_Output.show_network_clock.alarm_state[1].SSM = false
ShowNetworkClock_Output.show_network_clock.alarm_state[1].WTR = false
ShowNetworkClock_Output.show_network_clock.alarm_state[2].clock_source = 3
ShowNetworkClock_Output.show_network_clock.alarm_state[2].LOCS = true
ShowNetworkClock_Output.show_network_clock.alarm_state[2].SSM = false
ShowNetworkClock_Output.show_network_clock.alarm_state[2].WTR = false

ShowNetworkClock Commit Success!!!

Switch(config-controller-SyncE)# exit
```





## Configuring Ethernet Virtual Connections

---

Ethernet Virtual Connection (EVC) as an association between two or more user network interfaces that identifies a point-to-point or multipoint-to-multipoint path within the service provider network. An EVC is a conceptual service pipe within the service provider network. A bridge domain is a local broadcast domain that is VLAN-ID-agnostic. An ethernet flow point (EFP) service instance is a logical interface that connects a bridge domain to a physical port or to an EtherChannel group in a router.

The Cisco ME 1200 NID supports the application software control modules and interfaces related to EVC.

- [How to Configure Ethernet Virtual Circuit, page 108](#)
- [Configuring Ethernet Virtual Circuit, page 108](#)
- [Creating a Policer, page 109](#)
- [EVC Control Entry \(ECE\) Configuration, page 111](#)
- [Ethernet Private Line or E-LAN, page 116](#)
- [Ethernet Virtual Private Line, page 119](#)
- [Other Commands For EVC Configuration, page 120](#)
- [Configuring ECE\\_v3, page 124](#)

# How to Configure Ethernet Virtual Circuit

## Configuring Ethernet Virtual Circuit

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid /NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>ProvisionEVC</b>  <b>Example:</b> Switch (config-controller)# ProvisionEVC	Enters the ProvisionEVC mode.
Step 4	<b>addEVC evcConfiguration {instance evc_instance_id   learning {enable   disable}   nni_ports   nni_vid nni_vid_outer_tag   policer_id policer_id}</b>  <b>Example:</b>  Switch(config-controller-ProvisionEVC)# addEVC evcConfiguration nni_vid 101 Switch(config-controller-ProvisionEVC)# addEVC evcConfiguration learning enable Switch(config-controller-ProvisionEVC)# addEVC evcConfiguration nni_ports GigabitEthernet_6_NNI enable Switch(config-controller-ProvisionEVC)# addEVC evcConfiguration policer_id 1	Adds the EVE configuration.
Step 5	<b>addEVC review</b>  <b>Example:</b> Switch(config-controller-ProvisionEVC)# addEVC review	Reviews the addEVC configuration.
Step 6	<b>addEVC commit</b>  <b>Example:</b> Switch(config-controller-ProvisionEVC)# addEVC commit	Sends the addEVC configuration to the Cisco ME 1200 NID.
Step 7	<b>exit</b>  <b>Example:</b>  Switch(config-controller-ProvisionEVC)# exit Switch(config-controller)#	Exits to the controller configuration mode.

**Example**

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionEVC
Switch(config-controller-ProvisionEVC) # addEVC evcConfiguration instance 7
Switch(config-controller-ProvisionEVC) # addEVC evcConfiguration nni_vid 101
Switch(config-controller-ProvisionEVC) # addEVC evcConfiguration learning enable
Switch(config-controller-ProvisionEVC) # addEVC evcConfiguration nni_ports
GigabitEthernet_6_NNI enable
Switch(config-controller-ProvisionEVC) # addEVC evcConfiguration policer_id 1
Switch(config-controller-ProvisionEVC) # addEVC review
Switch(config-controller-ProvisionEVC) # addEVC commit
```

AddEVC Commit Success!!!

# Creating a Policer

**DETAILED STEPS**

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionEVC</b>  <b>Example:</b> Switch (config-controller)# ProvisionEVC	Enters the ProvisionEVC mode.
<b>Step 4</b>	<b>addPolicerEVC evc_policer {cbs cbs_id   cir committed_information_rate   ebs excess_burst_size   eir excess_information_rate   policer_id policer_id   policer mode {color_aware   coupled}   policer_type {mef   single}   rate_type {data   line}   state {enabled   disabled}}</b>  <b>Example:</b> Switch(config-controller-ProvisionEVC) # addPolicerEVC evc_policer cir 20000 Switch(config-controller-ProvisionEVC) # addPolicerEVC evc_policer ebs 30000 Switch(config-controller-ProvisionEVC) # addPolicerEVC evc_policer eir 40000 Switch(config-controller-ProvisionEVC) # addPolicerEVC evc_policer policer_id 1	<p>Adds the EVC Policer.</p> <ul style="list-style-type: none"> <li>• <b>cbs</b>—Specifies the committed burst size in bytes.</li> <li>• <b>cir</b>—Specifies the committed information rate. Multiply by 1000 to get rate in BPS.</li> <li>• <b>ebs</b>—Specifies the excess burst size in bytes.</li> <li>• <b>eir</b>—Specifies the excess information rate.</li> <li>• <b>policer_id</b>—Specifies the Policer ID. The valid values are from 1 to 1022.</li> <li>• <b>policer_mode</b>—Specifies the Policer mode—whether <b>color-aware</b> or <b>coupled</b>.</li> </ul>

	Command or Action	Purpose
	<pre>Switch(config-controller-ProvisionEVC) # addPolicerEVC evc_policer state enabled</pre>	<ul style="list-style-type: none"> <li>• <b>policer_type</b>—Specifies the Policer mode—whether <b>mef</b> or <b>single</b>.</li> <li>• <b>rate_type</b>—Specifies the rate type policing—whether <b>data</b> or <b>line</b>.</li> <li>• <b>state</b>—Specifies the policer state—whether <b>enabled</b> or <b>disabled</b>.</li> </ul>
<b>Step 5</b>	<p><b>addPolicerEVC review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionEVC) # addPolicerEVC review</pre>	Displays the addPolicerEVC configuration.
<b>Step 6</b>	<p><b>addPolicerEVC commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionEVC) # addPolicerEVC commit AddPolicerEVC Commit Success!!!</pre>	Sends the configuration to the NID.
<b>Step 7</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionEVC) # exit Switch(config-controller) #</pre>	Exits to the controller configuration mode.

Number of policers allowed are 1022. Use the following scale numbers for the ECE or EVC configuration with or without configuring QoS with tag pop 0, 1, or 2:

- Maximum 510 ECEs can be configured with or without configuring QoS (0-7 COS) with one NNI port to one UNI port.
- Maximum of 340 ECEs can be configured with or without configuring QoS (0-7 COS) with two NNI ports to one UNI or one NNI port to two UNI ports.
- Maximum of 255 ECEs can be configured with or without configuring QoS (0-7 COS) with three NNI ports to one UNI port or one NNI port to three UNI ports.
- Maximum of 170 ECEs can be configured with or without configuring QoS (0-7 COS) with four NNI ports to one UNI port or one NNI port to four UNI ports.
- Maximum of 128 ECEs can be configured with or without configuring QoS (0-7 COS) with five NNI ports to one UNI port or one NNI port to five UNI ports.

If OAM, HQoS, or EFP is configured on the Cisco ME 1200 NID, you can configure the following maximum service instances on every UNI interface:

- 64 ECE or EVC with eight COS classes.
- 104 ECE or EVC with four COS classes.
- 104 ECE or EVC with two COS classes.

## EVC Control Entry (ECE) Configuration

ECE rules are used to divide the UNI traffic into two service classes.

This division of UNI traffic is achieved through:

- Simple NNI: All EVCs on the NNI port use the same QoS mapping and statistics.



**Note** This method requires fewer resources.

- Advanced NNI: Each EVC on the NNI port has separate QoS mapping and statistics.

In the following example, multiple ECE rules are created:

### Configuring ECE Sample Rule 1

For rule 1, frames received on the UNI port with PCP 4-7 values are mapped to class 4 and sent with PCP 4 in the outer tag on the NNI port.

#### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>ProvisionEVC</b>  <b>Example:</b> Switch (config-controller)# ProvisionEVC	Enters the ProvisionEVC mode.
Step 4	<b>addECE ece_configuration ece_id ece_id</b>  <b>Example:</b> Switch(config-controller-ProvisionEVC)# addECE ece_configuration ece_id 2	Adds ECE configuration.

	Command or Action	Purpose
Step 5	<p><b>addECE ece_configuration control actions {class {disabled   specific <i>specific_id</i>}   direction {bothnni_to_uni   uni_to_nni}   drop_precedence {disabled   one   zero}   evc_id {none   specific <i>specific_evc_id</i>}   policer_id {discard   evc   none   specific <i>specific_id</i>}   policy_id <i>acl_policy_id</i>   tag_pop_count <i>tag_pop_count</i>}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions evc_id specific 7 Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions tag_pop_count 1 Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions policer_id specific 1 Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions class specific 4</pre>	<p>Adds the ECE control action configuration.</p> <ul style="list-style-type: none"> <li>• <b>class</b>—Specifies the ECE class.</li> <li>• <b>direction</b>—Specifies the direction of flow of traffic.</li> <li>• <b>drop_precedence</b>—Specifies the drop precedence (higher value means more dropping).</li> <li>• <b>evc_id</b>—Specifies the EVC ID. The valid <b>specific</b> values are from 1 to 1024.</li> <li>• <b>policer_id</b>—Specifies the policer ID. The valid <b>specific</b> values are from 1 to 1022.</li> <li>• <b>policy_id</b>—Specifies the ACL policy ID. The valid values are from 0 to 63.</li> <li>• <b>tag_pop_count</b>—Specifies the tagged VLAN count to be removed (either one or two outermost tags).</li> </ul>
Step 6	<p><b>addECE ece_configuration control egress-inner-tagaddECE ece_configuration control egress_inner_tag {dei-mode<i>dei_mode</i> {classified   drop_prec   fixed}   dei_value <i>dei</i>   pcp_mode {classified   fixed   mapped}   pcp_value <i>pcp_value</i>   type <i>type</i>   vlan_id <i>vlan_id</i>}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionEVC)# addECE ece_configuration control egress_inner_tag dei_mode classified Switch(config-controller-ProvisionEVC)# addECE ece_configuration control egress_inner_tag type none Switch(config-controller-ProvisionEVC)# addECE ece_configuration control egress_inner_tag vlan_id 3</pre>	<p>Adds the ECE control egress inner tag rewrite configuration.</p> <ul style="list-style-type: none"> <li>• <b>dei_mode</b>—Specifies the DEI mode—whether <b>classified</b>, <b>drop precedence</b>, or <b>fixed</b>.</li> <li>• <b>dei_value</b>—Specifies the DEI value. The valid values are 0 and 1.</li> <li>• <b>pcp_mode</b>—Specifies the PCP mode—whether <b>classified</b>, <b>fixed</b>, or <b>mapped</b>.</li> <li>• <b>pcp_value</b>—Specifies the PCP value. The valid values are from 1 to 7.</li> <li>• <b>type</b>—Specifies the type—whether <b>c-tagged</b>, <b>none</b>, <b>s-custom</b>, or <b>s-tagged</b>.</li> <li>• <b>vlan_id</b>—Specifies the VLAN ID. The valid values are from 1 to 4095.</li> </ul>
Step 7	<p><b>addECE ece_configuration control egress_outer_tag {dei_mode {classified   drop_prec   fixed}   dei_value <i>dei_value</i>   mode {enabled   disabled}   pcp_mode {classified   fixed   mapped}   pcp_value <i>pcp_value</i>   vlan_id <i>vlan_id</i>}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionEVC)# addECE ece_configuration control egress_outer_tag pcp_mode</pre>	<p>Adds the ECE control egress outer tag rewrite configuration.</p> <ul style="list-style-type: none"> <li>• <b>dei_mode</b>—Specifies the DEI mode—whether <b>classified</b>, <b>drop precedence</b>, or <b>fixed</b>.</li> <li>• <b>dei_value</b>—Specifies the DEI value. The valid values are 0 and 1.</li> </ul>



	Command or Action	Purpose
	<pre>fixed Switch(config-controller-ProvisionEVC)# addECE ece_configuration control egress_outer_tag pcp_value 4</pre>	<ul style="list-style-type: none"> <li>• <b>mode</b>—Specifies the mode—whether <b>enabled</b> or <b>disabled</b>.</li> <li>• <b>pcp_mode</b>—Specifies the PCP mode—whether <b>classified</b>, <b>fixed</b>, or <b>mapped</b>.</li> <li>• <b>pcp_value</b>—Specifies the PCP value. The valid values are from 1 to 7.</li> <li>• <b>vlan_id</b>—Specifies the VLAN ID. The valid values are from 1 to 4095.</li> </ul>
<b>Step 8</b>	<p><b>addECE ece_configuration control ingress_match {frame_type {any   ipv4 {dest_ip_filter   source_ip_filter}   ipv6 {dest_ip_filter   source_ip_filter}}   inner_tag_match {match_fields   match_type}   mac_params {dmac_filer   smac_filter}   outer_tag_match {match_fields   match_type}   uni_ports {GigabitEthernet_1_UNI   GigabitEthernet_2_UNI   GigabitEthernet_3_UNI   GigabitEthernet_4_UNI   GigabitEthernet_5_UNI   GigabitEthernet_6_UNI}}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match uni_ports GigabitEthernet_2_UNI enable Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match outer_tag_match match_type c_tagged Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match outer_tag_match match_fields vlan_id_filter specific 100 Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match outer_tag_match match_fields inner_pcp val_4-7</pre>	<p>Adds the ECE control ingress inner tag rewrite configuration.</p> <ul style="list-style-type: none"> <li>• <b>frame_type</b>—Specifies the type of frame relay.</li> <li>• <b>inner_tag_match</b>—Specifies the inner tag match value.</li> <li>• <b>mac_params</b>—Specifies the DMAC and SMAC default values.</li> <li>• <b>outer_tag_match</b>—Specifies the outer tag match value.</li> <li>• <b>uni_ports</b>—Specifies the GigabitEthernet UNI ports.</li> </ul>
<b>Step 9</b>	<p><b>addECE review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionEVC)# addECE review</pre>	<p>Reviews the addECE configuration.</p>
<b>Step 10</b>	<p><b>addECE commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionEVC)# addECE commit</pre>	<p>Sends the configuration to the NID.</p>
<b>Step 11</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionEVE)# exit Switch(config-controller)#</pre>	<p>Exits to the controller configuration mode.</p>

## Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionEVC
Switch(config-controller-ProvisionEVC)# addECE ece_configuration ece_id 1
Switch(config-controller-ProvisionEVC)# addECE ece_configuration ece_id 1
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions evc_id
specific 777
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions tag_pop_count
1
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions policer_id
none
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match
uni_ports GigabitEthernet_2_UNI enable
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match
outer_tag_match match_type c_tagged
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match
outer_tag_match match_fields vlan_id_filter specific 100
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match
outer_tag_match match_fields inner_dei any
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match
outer_tag_match match_fields inner_pcp val_any
Switch(config-controller-ProvisionEVC)# addECE review
Commands in queue:
  addECE ece_configuration ece_id 1
  addECE ece_configuration ece_id 1
  addECE ece_configuration control actions evc_id specific 777
  addECE ece_configuration control actions tag_pop_count 1
  addECE ece_configuration control actions policer_id none
  addECE ece_configuration control ingress_match uni_ports GigabitEthernet_2_UNI enable
  addECE ece_configuration control ingress_match outer_tag_match match_type c_tagged
  addECE ece_configuration control ingress_match outer_tag_match match_fields vlan_id_filter
specific 100
  addECE ece_configuration control ingress_match outer_tag_match match_fields inner_dei any

  addECE ece_configuration control ingress_match outer_tag_match match_fields inner_pcp
val_any

Switch(config-controller-ProvisionEVC)# addECE commit

Clearing Socket 4 Clearing Socket 4
AddECE Commit Success!!!

```

## Configuring the ECE Sample Rule 2

For rule 2, other frames received on the UNI port are mapped to class 0 and sent with PCP 0 in the outer tag on the NNI port.

**Note**

The configuration steps are similar to the ones mentioned in the [Configuring ECE Sample Rule 1](#) section.

## Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionEVC
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions evc_id
specific 7
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions tag_pop_count
1
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions policer_id
specific 1
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions class

```

```

specific 0
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match
uni_ports GigabitEthernet 2_UNI enable
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match
outer_tag_match match_type c_tagged
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match
outer_tag_match match_fields vlan_id filter specific 99
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match
outer_tag_match match_fields inner_pcp val 0-3
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control egress_outer_tag
pcp_mode fixed
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control egress_outer_tag
pcp_value 0
Switch(config-controller-ProvisionEVC)# addECE commit

```

## Configuring ECE Sample Rule 3

For rule 3, frames received on the NNI port 6 with S-tag 101 and C-tag 100 with any PCP values can be mapped to class 4 and sent with PCP 4 on the UNI port.



**Note** The configuration steps are similar to the ones mentioned in the [Configuring ECE Sample Rule 1](#) section.

### Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionEVC
Switch(config-controller-ProvisionEVC)# addECE ece_configuration ece_id 3
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions evc_id
specific 7
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions class
specific 4
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match
uni_ports GigabitEthernet 2_UNI enable
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control egress_inner_tag
pcp_mode fixed
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control egress_inner_tag
pcp_value 4
Switch(config-controller-ProvisionEVC)# addECE commit

```

## Configuring ECE Sample Rule 4

For rule 4, insert a new c-tag in frames forwarding to the NNI port.



**Note** The configuration steps are similar to the ones mentioned in the [Configuring ECE Sample Rule 1](#) section.

### Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionEVC
Switch(config-controller-ProvisionEVC)# addECE ece_configuration ece_id 4
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions evc_id
specific 7
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions tag_pop_count

```

```

1
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions policer_id
specific 1
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match
uni_ports GigabitEthernet_2_UNI enable
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match
outer_tag_match match_type c_tagged
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match
outer_tag_match match_fields vlan_id filter specific 99
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control egress_inner_tag
type c_tagged
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control egress_inner_tag
vlan_id 77
Switch(config-controller-ProvisionEVC)# addECE commit

```

## Configuring ECE Sample Rule 5

For rule 5, insert a new tag in frames forwarding to the UNI port, the outer tag for NNI - UNI direction for the ECE.



### Note

The configuration steps are similar to the ones mentioned in the [Configuring ECE Sample Rule 1](#) section.

### Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionEVC
Switch(config-controller-ProvisionEVC)# addECE ece_configuration ece_id 5
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions direction
nni_to_uni ---> This field is mandatory
to pass
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions evc_id
specific 7 ---> Map this ECE rule
to an EVC configured above.
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match
uni_ports GigabitEthernet_2_UNI enable
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control egress_outer_tag
enabled
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control egress_outer_tag
vlan_id 78
Switch(config-controller-ProvisionEVC)# addECE commit


```

## Ethernet Private Line or E-LAN

Ethernet Private Line (EPL) or E-LAN and Ethernet Virtual Private Line (EVPL) are Carrier Ethernet data services defined by the Metro Ethernet Forum. E-LAN provides a point-to-point Ethernet virtual connection (EVC) between a pair of dedicated user-network interfaces (UNIs), with a high degree of transparency.


The following diagrams show a Provider Network offering various types of E-LAN between two UNIs.

**Figure 5: An Unprotected Ethernet-LAN**

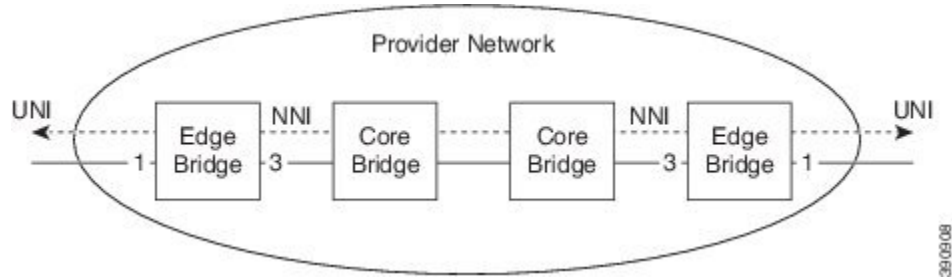


The following diagram shows an ethernet private (EP) line with 1-to-1 port protection on the network-network interface (NNI) side. This setup requires more resources compared to the unprotected EP-Line, because rules must be added for both NNI ports.

**Figure 6: Port Protected E-LAN**

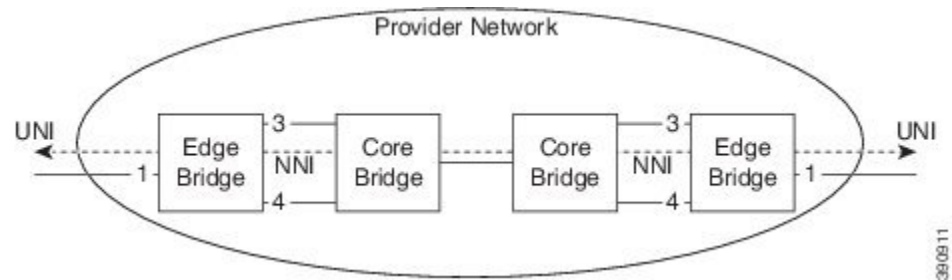

The following diagram shows an ethernet LAN with ring protection on the network-network interface (NNI) side. The resource consumption is similar to the port protection scenario, because rules are added for each NNI port.

**Figure 7: Ring-Protected E-LAN**

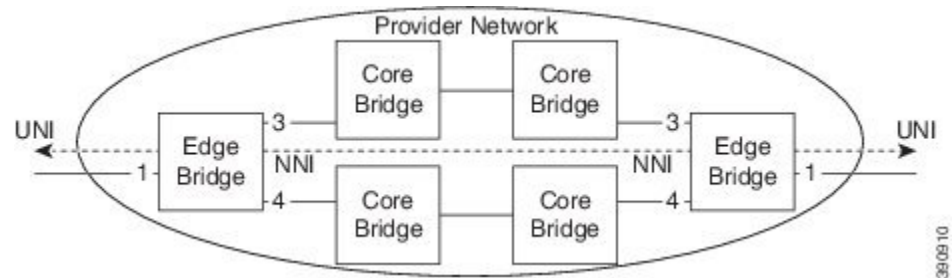

The following sections describe how to configure the Edge Bridges.

## Configuring ECE for E-LAN Between Two UNI and NNI Ports

For more information on configuring ECE, see the [EVC Control Entry \(ECE\) Configuration](#) section.

**ECE Rule 1 on UNI Interface 3**

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionEVC
Switch(config-controller-ProvisionEVC)# addECE ece_configuration ece_id 6
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions tag_pop_count
1
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions evc_id
specific 9
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions policer_id
specific 1
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match
uni_ports GigabitEthernet 3_UNI enable
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match
outer_tag_match match_type c_tagged
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match
outer_tag_match match_fields vlan_id filter specific 500
Switch(config-controller-ProvisionEVC)# addECE review
Switch(config-controller-ProvisionEVC)# addECE commit
```

**ECE Rule 1 on UNI Interface 2**

```
Switch# configure terminal
Switch(config)# controller nid 0/1
Switch(config-controller)# ProvisionEVC
Switch(config-controller-ProvisionEVC)# addECE ece_configuration ece_id 6
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions tag_pop_count
1
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions evc_id
specific 9
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions policer_id
specific 1
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match
uni_ports GigabitEthernet 2_UNI enable
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match
outer_tag_match match_type c_tagged
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match
outer_tag_match match_fields vlan_id filter specific 600
Switch(config-controller-ProvisionEVC)# addECE review
Switch(config-controller-ProvisionEVC)# addECE commit
```

**Note**


---

Tag POP count is 1 for E-LAN service, that is, all frames are passed to the EVC popping one tag in the direction from UNI to NNI and pushing one tag in the other direction.

---

**Configuring EVC for E-LAN**

For more information on configuring EVC, see the [Configuring Ethernet Virtual Circuit](#) section.


**Example**

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionEVC
Switch(config-controller-ProvisionEVC)# addEVC evcConfiguration instance 9
Switch(config-controller-ProvisionEVC)# addEVC evcConfiguration internal_vid 400
Switch(config-controller-ProvisionEVC)# addEVC evcConfiguration nni_vid 400
Switch(config-controller-ProvisionEVC)# addEVC evcConfiguration learning enable
Switch(config-controller-ProvisionEVC)# addEVC evcConfiguration nni_ports
GigabitEthernet 6_NNI enable
Switch(config-controller-ProvisionEVC)# addEVC evcConfiguration policer_id 1
Switch(config-controller-ProvisionEVC)# addEVC review
Switch(config-controller-ProvisionEVC)# addEVC commit
```

# Ethernet Virtual Private Line

The following diagram shows an unprotected ethernet virtual private line (EVP-Line) forwarding frames with C-VID = 17 between the user-network interface (UNI) ports.

**Figure 8: Unprotected EVP-Line**

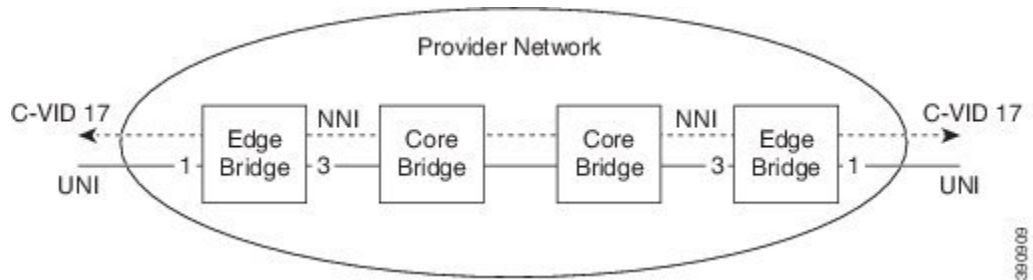

This following section describes the configuration of the EVPL service between the UNI and NNI ports.

## Configuring ECE For EVPL Service

For more information on configuring ECE, see the [EVC Control Entry \(ECE\) Configuration](#) section.

### Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionEVC
Switch(config-controller-ProvisionEVC)# addECE ece_configuration ece_id 6
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions evc_id
specific 8
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions policer_id
specific 1
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match
uni_ports GigabitEthernet_3_UNI enable
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match
outer_tag_match match type c_tagged
Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match
outer_tag_match match fields vlan_id_filter range 300-350
Switch(config-controller-ProvisionEVC)# addECE review
Switch(config-controller-ProvisionEVC)# addECE commit
```



#### Note

The above ECE rule allows all VLANs ranging from 300 to 350. However, if you need to filter specific VLANs then you must create individual ECE rules. For more information, see [Configuring ECE Sample Rule 1](#).

## Configuring EVC For EVPL Service

For more information on configuring EVC, see the [Configuring Ethernet Virtual Circuit](#) section.

### Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionEVC
Switch(config-controller-ProvisionEVC)# addEVC evcConfiguration instance 8
Switch(config-controller-ProvisionEVC)# addEVC evcConfiguration internal_vid 200
Switch(config-controller-ProvisionEVC)# addEVC evcConfiguration nni_vid 200
Switch(config-controller-ProvisionEVC)# addEVC evcConfiguration learning enable
Switch(config-controller-ProvisionEVC)# addEVC evcConfiguration nni_ports
GigabitEthernet_5_NNI enable
Switch(config-controller-ProvisionEVC)# addEVC evcConfiguration policer_id 1
Switch(config-controller-ProvisionEVC)# addEVC review
Switch(config-controller-ProvisionEVC)# addEVC commit
```

## Other Commands For EVC Configuration

### Clearing EVC Statistics

**clearEVCStatistics clear\_evc\_stats {all | ece | evc\_id | physical\_port}**

```
Switch(config-controller-ProvisionEVC)# clearEVCStatistics clear_evc_stats all
Switch(config-controller-ProvisionEVC)# clearEVCStatistics clear_evc_stats ece ece_id
<1-1024>
Switch(config-controller-ProvisionEVC)# clearEVCStatistics clear_evc_stats ece physical_port
<1-6>
Switch(config-controller-ProvisionEVC)# clearEVCStatistics clear_evc_stats evc_id <1-1024>
Switch(config-controller-ProvisionEVC)# clearEVCStatistics clear_evc_stats physical_port
<1-6>
Switch(config-controller-ProvisionEVC)# clearEVCStatistics review
Switch(config-controller-ProvisionEVC)# clearEVCStatistics commit
```

### Using the Default Configuration

#### default

```
Switch(config-controller-ProvisionEVC)# default
```

**Note**


---

This command resets all configuration to default values.

---

### Deleting Configuration

Use this command to delete the ECE configuration.

**deleteECE delete\_ece\_request ece\_id**

```
Switch(config-controller-ProvisionEVC)# deleteECE delete_ece_request <1-1024>
Switch(config-controller-ProvisionEVC)# deleteECE review
Switch(config-controller-ProvisionEVC)# deleteECE commit
```

Use this command to delete the EVC configuration.

**deleteEVC deleteEVCrequest evc\_id**

```
Switch(config-controller-ProvisionEVC)# deleteEVC deleteEVCrequest <1-1024>
Switch(config-controller-ProvisionEVC)# deleteEVC review
Switch(config-controller-ProvisionEVC)# deleteEVC commit
```

Use this command to delete the EVC Policer request.



**deletePolicerEVC *evc\_policer\_id evc\_policer\_id***

```
Switch(config-controller-ProvisionEVC) # deletePolicerEVC evc_policer_id <1-1024>
Switch(config-controller-ProvisionEVC) # deletePolicerEVC review
Switch(config-controller-ProvisionEVC) # deletePolicerEVC commit
```

**Editing Configuration**

Use this command to edit the ECE configuration.

**editECEConfiguration *ece\_update\_configuration {ece\_id ece\_id | update {class | direction | drop\_precedence | evc\_id | policer\_id | rule\_type | tag\_pop\_count | tx\_lookup}}***

```
Switch(config-controller-ProvisionEVC) # editECEConfiguration ece_update_configuration ece_id
<1-1024>
Switch(config-controller-ProvisionEVC) # editECEConfiguration ece_update_configuration update
class disabled
Switch(config-controller-ProvisionEVC) # editECEConfiguration ece_update_configuration update
class specific <0-7>
Switch(config-controller-ProvisionEVC) # editECEConfiguration ece_update_configuration update
direction both
Switch(config-controller-ProvisionEVC) # editECEConfiguration ece_update_configuration update
direction nni_to_uni
Switch(config-controller-ProvisionEVC) # editECEConfiguration ece_update_configuration update
direction uni_to_nni
Switch(config-controller-ProvisionEVC) # editECEConfiguration ece_update_configuration update
drop_precedence disabled
Switch(config-controller-ProvisionEVC) # editECEConfiguration ece_update_configuration update
drop_precedence one
Switch(config-controller-ProvisionEVC) # editECEConfiguration ece_update_configuration update
drop_precedence zero
Switch(config-controller-ProvisionEVC) # editECEConfiguration ece_update_configuration update
evc_id none
Switch(config-controller-ProvisionEVC) # editECEConfiguration ece_update_configuration update
evc_id specific <1-1024>
Switch(config-controller-ProvisionEVC) # editECEConfiguration ece_update_configuration update
policer_id discard
Switch(config-controller-ProvisionEVC) # editECEConfiguration ece_update_configuration update
policer_id evc
Switch(config-controller-ProvisionEVC) # editECEConfiguration ece_update_configuration update
policer_id none
Switch(config-controller-ProvisionEVC) # editECEConfiguration ece_update_configuration update
policer_id specific
Switch(config-controller-ProvisionEVC) # editECEConfiguration ece_update_configuration update
policy_id <0-63>
Switch(config-controller-ProvisionEVC) # editECEConfiguration ece_update_configuration update
rule_type both
Switch(config-controller-ProvisionEVC) # editECEConfiguration ece_update_configuration update
rule_type rx
Switch(config-controller-ProvisionEVC) # editECEConfiguration ece_update_configuration update
rule_type tx
Switch(config-controller-ProvisionEVC) # editECEConfiguration ece_update_configuration update
tag_pop_count <0-2>
Switch(config-controller-ProvisionEVC) # editECEConfiguration ece_update_configuration update
tx_lookup isdx
Switch(config-controller-ProvisionEVC) # editECEConfiguration ece_update_configuration update
tx_lookup vid_only
Switch(config-controller-ProvisionEVC) # editECEConfiguration ece_update_configuration update
tx_lookup vid_pcp
Switch(config-controller-ProvisionEVC) # editECEConfiguration review
Switch(config-controller-ProvisionEVC) # editECEConfiguration commit
```

Use this command to edit the EVC configuration.

**editEVCConfiguration *evcupdateConfiguration {instance instance\_id | update {internal\_vid | learning | nni\_ports | nni\_vid | policer\_id}}***

```
Switch(config-controller-ProvisionEVC) # editEVCConfiguration evcupdateConfiguration instance
<1-1024>
Switch(config-controller-ProvisionEVC) # editEVCConfiguration evcupdateConfiguration update
```

```

    internal_vid <1-4095>
Switch(config-controller-ProvisionEVC) # editEVCConfiguration evcupdateConfiguration update
learning
Switch(config-controller-ProvisionEVC) # editEVCConfiguration evcupdateConfiguration update
nni_ports
Switch(config-controller-ProvisionEVC) # editEVCConfiguration evcupdateConfiguration update
nni_vid
Switch(config-controller-ProvisionEVC) # editEVCConfiguration evcupdateConfiguration update
policer_id
Switch(config-controller-ProvisionEVC) # editEVCConfiguration review
Switch(config-controller-ProvisionEVC) # editEVCConfiguration commit

```

### Enabling/Disabling/Modifying EVC Policer

Use this command to enable the EVC Policer.

#### **enableEVCpolicer evc\_policer\_enable *policer\_id***

```

Switch(config-controller-ProvisionEVC) # enableEVCpolicer evc_policer_enable <1-1024>
Switch(config-controller-ProvisionEVC) # enableEVCpolicer review
Switch(config-controller-ProvisionEVC) # enableEVCpolicer commit

```

Use this command to disable the EVC Policer.

#### **disableEVCpolicer evc\_policer\_enable *policer\_id***

```

Switch(config-controller-ProvisionEVC) # disableEVCpolicer evc_policer_enable <1-1024>
Switch(config-controller-ProvisionEVC) # disableEVCpolicer review
Switch(config-controller-ProvisionEVC) # disableEVCpolicer commit

```

Use this command to modify the EVC Policer.

#### **modifyEVCpolicer evc\_policer\_enable *policer\_id***

```

Switch(config-controller-ProvisionEVC) # modifyEVCpolicer evc_policer_modify modify cbs
<0-100000>
Switch(config-controller-ProvisionEVC) # modifyEVCpolicer evc_policer_modify modify cir
<0-10000000>
Switch(config-controller-ProvisionEVC) # modifyEVCpolicer evc_policer_modify modify ebs
<0-100000>
Switch(config-controller-ProvisionEVC) # modifyEVCpolicer evc_policer_modify modify eir
<0-10000000>
Switch(config-controller-ProvisionEVC) # modifyEVCpolicer evc_policer_modify modify
policer_mode colour_aware
Switch(config-controller-ProvisionEVC) # modifyEVCpolicer evc_policer_modify modify
policer_mode coupled
Switch(config-controller-ProvisionEVC) # modifyEVCpolicer evc_policer_modify modify
policer_type mef
Switch(config-controller-ProvisionEVC) # modifyEVCpolicer evc_policer_modify modify
policer_type single
Switch(config-controller-ProvisionEVC) # modifyEVCpolicer evc_policer_modify modify rate_type
data
Switch(config-controller-ProvisionEVC) # modifyEVCpolicer evc_policer_modify modify rate_type
line
Switch(config-controller-ProvisionEVC) # modifyEVCpolicer evc_policer_modify modify state
Switch(config-controller-ProvisionEVC) # modifyEVCpolicer evc_policer_modify policer_id
<1-1022>
Switch(config-controller-ProvisionEVC) # modifyEVCpolicer review
Switch(config-controller-ProvisionEVC) # modifyEVCpolicer commit

```

### Fetching EVC and ECE Configuration

Use the following commands to fetch the ECE configuration:

- **getECEBlankForm getECEForm**

```

Switch(config-controller-ProvisionEVC) # getECEBlankForm getECEForm
Switch(config-controller-ProvisionEVC) # getECEBlankForm review
Switch(config-controller-ProvisionEVC) # getECEBlankForm commit

```

- **getECECounters ece\_statistics\_req ece\_statistics\_request**

```
Switch(config-controller-ProvisionEVC)# getECECounters ece_statistics_req <1-1024>
Switch(config-controller-ProvisionEVC)# getECECounters review
Switch(config-controller-ProvisionEVC)# getECECounters commit
```

- **getECEConfiguration getECEconfig ece\_configuration**

```
Switch(config-controller-ProvisionEVC)# getECEConfiguration getECEconfig <1-1024>
Switch(config-controller-ProvisionEVC)# getECEConfiguration review
Switch(config-controller-ProvisionEVC)# getECEConfiguration commit
```

Use the following commands to fetch the EVC configuration:

- **getEVCCBlankForm getEVCCForm**

```
Switch(config-controller-ProvisionEVC)# getEVCCBlankForm getEVCCForm
Switch(config-controller-ProvisionEVC)# getEVCCBlankForm review
Switch(config-controller-ProvisionEVC)# getEVCCBlankForm commit
```

- **getEVC\_Counters evc\_statistics\_req evc\_statistics\_request**

```
Switch(config-controller-ProvisionEVC)# getEVCCounters evc_statistics_req <1-1024>
Switch(config-controller-ProvisionEVC)# getEVCCounters review
Switch(config-controller-ProvisionEVC)# getEVCCounters commit
```

- **getEVCCConfiguration getEVCCconfig evc\_configuration**

```
Switch(config-controller-ProvisionEVC)# getEVCCConfiguration getEVCCconfig <1-1024>
Switch(config-controller-ProvisionEVC)# getEVCCConfiguration review
Switch(config-controller-ProvisionEVC)# getEVCCConfiguration commit
```

# Configuring ECE\_v3

## SUMMARY STEPS

1. configure terminal
2. controller nid 1/NID\_ID
3. ProvisionEVC
4. addECE-v3 eceConfiguration\_v3 ece\_id ece\_id
5. addECE\_v3 eceConfiguration\_v3 control action {class {disabled | specific *specific\_id*} | direction {bothnni\_to\_uni | uni\_to\_nni} | drop\_precedence {disabled | one | zero} | evc\_id {none | specific *specific\_eve\_id*} | l2cp\_dmac { cisco | custom} | l2cp\_mode { discard | forward | peer | tunnel} | policer\_id {discard | evc | none | specific *specific\_id*} | policy\_id *acl\_policy\_id* | rule\_type { both | rx | tx} | tag\_pop\_count {*tag\_pop\_count*} | tx\_lookup { isdx | vid\_only | vid\_pcp}
6. addECE\_v3 eceConfiguration\_v3 control egress-inner-tag {dei-mode {classified | drop\_prec | fixed} | dei\_value *dei* | pcp\_mode {classified | fixed | mapped} | pcp\_value *pcp\_value* | type *type* | vlan\_id *vlan\_id*}
7. addECE\_v3 eceConfiguration\_v3 control egress-outer-tag {dei\_mode {classified | drop\_prec | fixed} | dei\_value *dei\_value* | mode {enabled | disabled} | pcp\_mode {classified | fixed | mapped} | pcp\_value *pcp\_value* | vlan\_id *vlan\_id*}
8. addECE\_v3 eceConfiguration\_v3 control ingress\_match {frame\_type {any | ipv4 {dest\_ip\_filter | source\_ip\_filter} | ipv6 {dest\_ip\_filter | source\_ip\_filter}} | inner\_tag\_match {match\_fields | match\_type} | mac\_params {dmac\_filer | smac\_filter} | outer\_tag\_match {match\_fields | match\_type} | uni\_ports {GigabitEthernet\_1\_UNI | GigabitEthernet\_2\_UNI | GigabitEthernet\_3\_UNI | GigabitEthernet\_4\_UNI | GigabitEthernet\_5\_UNI | GigabitEthernet\_6\_UNI}}
9. addECE\_v3 eceConfiguration\_v3 control l2cp\_parameters { cdp | cisco-cfm | cisco-stp | cisco-vlan | dot1x | dtp | elmi | gmrp | gvrp | lacp | lamp | lldp | loam | pagp | pause | pb | pb\_gvrp | pvst | stp | uld | vtp}
10. addECE\_v3 review
11. addECE\_v3 commit
12. exit

## DETAILED STEPS

	Command or Action	Purpose
Step 1	configure terminal  Example: Switch# configure terminal	Enters global configuration mode.
Step 2	controller nid 1/NID_ID  Example: Switch(config)# controller nid 1/1	Enters the controller configuration mode.

	Command or Action	Purpose
Step 3	<b>ProvisionEVC</b>  <b>Example:</b> Switch (config-controller)# ProvisionEVC	Enters the ProvisionEVC mode.
Step 4	<b>addECE-v3 eceConfiguration_v3 ece_id ece_id</b>  <b>Example:</b>  Switch (config-controller-ProvisionEVC)# addECE ece_configuration ece_id 2	Adds ECE configuration.
Step 5	<b>addECE_v3 eceConfiguration_v3 control action {class {disabled   specific <i>specific_id</i>}   direction {bothnni_to_uni   uni_to_nni}   drop_precedence {disabled   one   zero}   evc_id {none   specific <i>specific_eve_id</i>}   l2cp_dmac {cisco   custom}   l2cp_mode {discard   forward   peer   tunnel}   policer_id {discard   evc   none   specific <i>specific_id</i>}   policy_id <i>acl_policy_id</i>   rule_type {both   rx   tx}   tag_pop_count {tag_pop_count}   tx_lookup {isdx   vid_only   vid_ppp}</b>  <b>Example:</b>  Switch (config-controller-ProvisionEVC)# addECE ece_configuration control actions evc_id specific 7 Switch (config-controller-ProvisionEVC)# addECE ece_configuration control actions tag_pop_count 1  Switch (config-controller-ProvisionEVC)# addECE ece_configuration control actions policer_id specific 1 Switch (config-controller-ProvisionEVC)# addECE ece_configuration control actions class specific 4	Adds the ECE control action configuration. <ul style="list-style-type: none"> <li>• <b>class</b>—Specifies the ECE class.</li> <li>• <b>direction</b>—Specifies the direction of flow of traffic.</li> <li>• <b>drop_precedence</b>—Specifies the drop precedence (higher value means more dropping).</li> <li>• <b>evc_id</b>—Specifies the EVC ID. The valid <b>specific</b> values are from 1 to 1024.</li> <li>• <b>policer_id</b>—Specifies the policer ID. The valid <b>specific</b> values are from 1 to 1022.</li> <li>• <b>policy_id</b>—Specifies the ACL policy ID. The valid values are from 0 to 63.</li> <li>• <b>tag_pop_count</b>—Specifies the tagged VLAN count to be removed (either one or two outermost tags).</li> <li>• <b>l2cp_dmac</b>—Specifies the L2CP tunnel DMAC. <ul style="list-style-type: none"> <li>◦ <b>cisco</b>—Specifies Cisco Generic BPDU Tunneling DMAC.</li> <li>◦ <b>custom</b>—Specifies custom DMAC.</li> </ul> </li> <li>• <b>l2cp_mode</b>—Specifies the L2CP mode. <ul style="list-style-type: none"> <li>◦ <b>discard</b>—Discard L2CP frames.</li> <li>◦ <b>forward</b>—Forward L2CP frames.</li> <li>◦ <b>peer</b>—Peer L2CP frames.</li> <li>◦ <b>tunnel</b>—Tunnel L2CP frames.</li> </ul> </li> <li>• <b>rule_type</b>—Specifies the rule type. <ul style="list-style-type: none"> <li>◦ <b>both</b>—Specifies both rule type.</li> <li>◦ <b>rx</b>—Specifies rx rule type .</li> </ul> </li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>◦ <b>tx</b>—Specifies tx rule type .</li> <li>• <b>tx_lookup</b>—Specifies tx-lookup.</li> <li>◦ <b>isdx</b>—Specifies isdx lookup.</li> <li>◦ <b>vid_only</b>—Specifies vid-only lookup .</li> <li>◦ <b>vid_pcp</b>—Specifies vid-pcp lookup .</li> </ul>
<b>Step 6</b>	<p><b>addECE_v3 eceConfiguration_v3 control egress-inner-tag {dei-mode {classified   drop_prec   fixed}   dei_value <i>dei</i>   pcp_mode {classified   fixed   mapped}   pcp_value <i>pcp_value</i>   type <i>type</i>   vlan_id <i>vlan_id</i>}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionEVC)# addECE_v3 ece_configuration control egress_inner_tag dei_mode classified Switch(config-controller-ProvisionEVC)# addECE_v3 ece_configuration control egress_inner_tag type none Switch(config-controller-ProvisionEVC)# addECE_v3 ece_configuration control egress_inner_tag vlan_id 3</pre>	<p>Adds the ECE control egress inner tag rewrite configuration.</p> <ul style="list-style-type: none"> <li>• <b>dei_mode</b>—Specifies the DEI mode—whether <b>classified</b>, <b>drop precedence</b>, or <b>fixed</b>.</li> <li>• <b>dei_value</b>—Specifies the DEI value. The valid values are 0 and 1.</li> <li>• <b>pcp_mode</b>—Specifies the PCP mode—whether <b>classified</b>, <b>fixed</b>, or <b>mapped</b>.</li> <li>• <b>pcp_value</b>—Specifies the PCP value. The valid values are from 1 to 7.</li> <li>• <b>type</b>—Specifies the type—whether <b>c-tagged</b>, <b>none</b>, <b>s-custom</b>, or <b>s-tagged</b>.</li> <li>• <b>vlan_id</b>—Specifies the VLAN ID. The valid values are from 1 to 4095.</li> </ul>
<b>Step 7</b>	<p><b>addECE_v3 eceConfiguration_v3 control egress-outer-tag {dei_mode {classified   drop_prec   fixed}   dei_value <i>dei_value</i>   mode {enabled   disabled}   pcp_mode {classified   fixed   mapped}   pcp_value <i>pcp_value</i>   vlan_id <i>vlan_id</i>}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionEVC)# addECE_v3 ece_configuration control egress_outer_tag pcp_mode fixed Switch(config-controller-ProvisionEVC)# addECE_v3 ece_configuration control egress_outer_tag pcp_value 4</pre>	<p>Adds the ECE control egress outer tag rewrite configuration.</p> <ul style="list-style-type: none"> <li>• <b>dei_mode</b>—Specifies the DEI mode—whether <b>classified</b>, <b>drop precedence</b>, or <b>fixed</b>.</li> <li>• <b>dei_value</b>—Specifies the DEI value. The valid values are 0 and 1.</li> <li>• <b>mode</b>—Specifies the mode—whether <b>enabled</b> or <b>disabled</b>.</li> <li>• <b>pcp_mode</b>—Specifies the PCP mode—whether <b>classified</b>, <b>fixed</b>, or <b>mapped</b>.</li> <li>• <b>pcp_value</b>—Specifies the PCP value. The valid values are from 1 to 7.</li> <li>• <b>vlan_id</b>—Specifies the VLAN ID. The valid values are from 1 to 4095.</li> </ul>
<b>Step 8</b>	<p><b>addECE_v3 eceConfiguration_v3 control ingress_match {frame_type {any   ipv4 {dest_ip_filter   source_ip_filter}   ipv6 {dest_ip_filter   source_ip_filter}}   inner_tag_match</b></p>	<p>Adds the ECE control ingress inner tag rewrite configuration.</p> <ul style="list-style-type: none"> <li>• <b>frame_type</b>—Specifies the type of frame relay.</li> </ul>

	Command or Action	Purpose
	<p>{<b>match_fields</b>   <b>match_type</b>}   <b>mac_params</b> {<b>dmac_filer</b>   <b>smac_filter</b>}   <b>outer_tag_match</b> {<b>match_fields</b>   <b>match_type</b>}   <b>uni_ports</b> {<b>GigabitEthernet_1_UNI</b>   <b>GigabitEthernet_2_UNI</b>   <b>GigabitEthernet_3_UNI</b>   <b>GigabitEthernet_4_UNI</b>   <b>GigabitEthernet_5_UNI</b>   <b>GigabitEthernet_6_UNI</b>}}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionEVC)# addECE_v3 ece_configuration control ingress_match uni_ports GigabitEthernet_2_UNI enable Switch(config-controller-ProvisionEVC)# addECE_v3 ece_configuration control ingress_match outer_tag_match match_type c_tagged Switch(config-controller-ProvisionEVC)# addECE_v3 ece_configuration control ingress_match outer_tag_match match_fields vlan_id_filter specific 100 Switch(config-controller-ProvisionEVC)# addECE_v3 ece_configuration control ingress_match outer_tag_match match_fields inner_pcp val_4-7</pre>	<ul style="list-style-type: none"> <li>• <b>inner_tag_match</b>—Specifies the inner tag match value.</li> <li>• <b>mac_params</b>—Specifies the DMAC and SMAC default values.</li> <li>• <b>outer_tag_match</b>—Specifies the outer tag match value.</li> <li>• <b>uni_ports</b>—Specifies the GigabitEthernet UNI ports.</li> </ul>
<p><b>Step 9</b></p>	<p><b>addECE_v3 eceConfiguration_v3 control l2cp_parameters</b> { <b>cdp</b>   <b>cisco-cfm</b>   <b>cisco-stp</b>   <b>cisco-vlan</b>   <b>dot1x</b>   <b>dtp</b>   <b>elmi</b>   <b>gmrp</b>   <b>gvrp</b>   <b>lacp</b>   <b>lamp</b>   <b>lldp</b>   <b>loam</b>   <b>pagp</b>   <b>pause</b>   <b>pb</b>   <b>pb_gvrp</b>   <b>pvst</b>   <b>stp</b>   <b>uld</b>   <b>vtp</b>}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionEVC)# addECE_v3 ece_configuration control l2cp_parameters dot1x</pre>	<p>Adds the ECE control ingress inner tag rewrite configuration.</p> <ul style="list-style-type: none"> <li>• <b>cdp</b>—Specifies cdp frames.</li> <li>• <b>cisco-cfm</b> —Specifies Cisco CFM frames.</li> <li>• <b>cisco-stp</b>—Specifies the Cisco STP Uplink Fast frames.</li> <li>• <b>cisco-vlan</b> —Specifies Cisco VLAN bridge frames.</li> <li>• <b>dot1x</b> —Specifies the 802.1X frames.</li> <li>• <b>dtp</b>—Specifies the DTP frames.</li> <li>• <b>elmi</b>—Specifies the E-LMI frames.</li> <li>• <b>gmrp</b> —Specifies the GMRP frames.</li> <li>• <b>gvrp</b> —Specifies the GVRP frames.</li> <li>• <b>lacp</b> —Specifies the LACP frames.</li> <li>• <b>lamp</b> —Specifies the LAMP frames.</li> <li>• <b>lldp</b> —Specifies the LLDP frames.</li> <li>• <b>loam</b> —Specifies the Link OAM frames.</li> <li>• <b>pagp</b>—Specifies the PAgP frames.</li> <li>• <b>pause</b> —Specifies the Pause frames.</li> <li>• <b>pb</b>—Specifies the PB frames.</li> <li>• <b>pb_gvrp</b> —Specifies the PB GVRP frames.</li> <li>• <b>pvst</b>—Specifies the PVST frames.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>stp</b> —Specifies the STP frames.</li> <li>• <b>uld</b> —Specifies the ULD frames.</li> <li>• <b>vtp</b> —Specifies the VTP frames.</li> </ul>
<b>Step 10</b>	<b>addECE_v3 review</b>  <b>Example:</b> Switch(config-controller-ProvisionEVC)# addECE_v3 review	Reviews the addECE configuration.
<b>Step 11</b>	<b>addECE_v3 commit</b>  <b>Example:</b> Switch(config-controller-ProvisionEVC)# addECE_v3 commit	Sends the configuration to the NID.
<b>Step 12</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionEVE)# exit Switch(config-controller)#	Exits to the controller configuration mode.

### Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
(config-controller-ProvisionEVE)# addece_v3 review

Commands in queue: 7

    addECE_v3 eceConfiguration_v3 ece-id 98
    addECE_v3 eceConfiguration_v3 control actions evc_id specific 97
    addECE_v3 eceConfiguration_v3 control ingress_match uni-ports 6-4
    addECE_v3 eceConfiguration_v3 control ingress-match frame-type l2cp
    addECE_v3 eceConfiguration_v3 control actions l2cp_mode tunnel
    addECE_v3 eceConfiguration_v3 control actions l2cp_dmac cisco
    addECE_v3 eceConfiguration_v3 control l2cp_parameters dot1x

(ProvisionEVC)# addece_v3 commit

AddECE_v3 Commit Success!!!(ProvisionEVC)#

```









## Configuring Switch Ports

This document describes various virtual LAN (VLAN) configuration you can perform on the switch ports, such as creating layer 2 and layer 3 VLANs, creating VLAN mapping, VLAN translation groups, and modifying software ports.

- [How To Configure Switch Ports](#), page 131

## How To Configure Switch Ports

### Creating Layer 2 VLANs

#### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>ProvisionPortVlanPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionPortVlanPortType	Enters the ProvisionPortVlanPortType mode.
Step 4	<b>createVlanCommand createVlanReq vlan_list vlan_list</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createVlanCommand createVlanReq vlan_list 100-4095	Creates the VLAN list. The valid values are from 1 to 4095.

	Command or Action	Purpose
<b>Step 5</b>	<b>createVlanCommand review</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType) # createVlanCommand review	Displays the createVlanCommand configuration.
<b>Step 6</b>	<b>createVlanCommand commit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType) # createVlanCommand commit	Sends the createVlanCommand configuration to the Cisco ME 1200 NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType) # exit Switch(config-controller) #	Exits to the config-controller mode.

### Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionPortVlanPortType
Switch(config-controller-ProvisionPortVlanPortType)# createVlanCommand createVlanReq vlan_list
100-4095
Switch(config-controller-ProvisionPortVlanPortType)# createVlanCommand review
Commands in queue:
 createVlanCommand createVlanReq vlan_list 100-4095
Switch(config-controller-ProvisionPortVlanPortType)# createVlanCommand commit
Vlan Creation Commit Success!!!
```

## Verifying Layer 2 VLAN Configuration

The following is a sample output of the command that displays in brief the configured layer 2 VLAN list:

```
Switch(config-controller-ProvisionPortVlanPortType) # showVlans showVlanRequest brief
```

```
Commands in queue:
```

```
showVlans showVlanRequest brief
```

```
Switch(config-controller-ProvisionPortVlanPortType) # showVlans commit
```

```
Configured Vlan List:
```

```
1
```

```
Show Vlans Commit Success!!!
```

## Deleting Layer 2 VLANs

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionPortVlanPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionPortVlanPortType	Enters the ProvisionPortVlanPortType mode.
<b>Step 4</b>	<b>deleteVlanCommand deleteVlanReq vlan_list vlan_list</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# deleteVlanCommand deleteVlanReq vlan_list 100-4095	Deletes the VLAN list.
<b>Step 5</b>	<b>deleteVlanCommand review</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# deleteVlanCommand review	Displays the deleteVlanCommand configuration.
<b>Step 6</b>	<b>deleteVlanCommand commit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# deleteVlanCommand commit	Sends the deleteVlanCommand configuration to the Cisco ME 1200 NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# exit Switch(config-controller)#	Exits to the config-controller mode.

### Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionPortVlanPortType
Switch(config-controller-ProvisionPortVlanPortType)# deleteVlanCommand deleteVlanReq vlan_list
100-4095
Switch(config-controller-ProvisionPortVlanPortType)# deleteVlanCommand review
Commands in queue:
  deleteVlanCommand deleteVlanReq vlan_list 100-4095
Switch(config-controller-ProvisionPortVlanPortType)# deleteVlanCommand commit
```

```
DeleteVlanCommand_Output.deleteVlanResp = 0
Vlan Deletion Commit Success!!!
```

## Creating Layer 3 VLANs

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionPortVlanPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionPortVlanPortType	Enters the ProvisionPortVlanPortType mode.
<b>Step 4</b>	<b>createIntVlan createIntVlanReq vlan_id vlan_id</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan createIntVlanReq vlan_id 22	Creates the interface VLAN list.
<b>Step 5</b>	<b>createIntVlan createIntVlanReq {address {ipv4 {dhcp   ipv4_address}   ipv6 ipv6_address }   vlan_id</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan createIntVlanReq address ipv4 ipv4_address address 22.22.22.3 Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan createIntVlanReq address ipv4 ipv4_address mask 255.255.255.0 Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan createIntVlanReq address ipv6 ipv6_address 2001:4::1/64	Creates the interface VLAN on the specified IPv4 or IPv6 address, or VLAN ID.
<b>Step 6</b>	<b>createIntVlan review</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan review	Displays the createIntVlan configuration.
<b>Step 7</b>	<b>createIntVlan commit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan commit	Sends the createIntVlan configuration to the Cisco ME 1200 NID.

	Command or Action	Purpose
Step 8	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# exit Switch(config-controller)	Exits to the config-controller mode.

### Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionPortVlanPortType
Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan createIntVlanReq vlan_Id
22
Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan createIntVlanReq address
ipv4 ipv4_address address 22.22.22.3
Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan createIntVlanReq address
ipv4 ipv4_address mask 255.255.255.0
Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan review
```

Commands in queue:

```
createIntVlan createIntVlanReq vlan_id 22
createIntVlan createIntVlanReq address ipv4 ipv4_address address 22.22.22.3
createIntVlan createIntVlanReq address ipv4 ipv4_address mask 255.255.255.0
```

```
Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan commit
```

```
CreateIntVlan_Output.createIntVlanResp = 0
```

```
Create Interface Vlan Commit Success!!!
```

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionPortVlanPortType
Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan createIntVlanReq vlan_Id
22
Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan createIntVlanReq address
ipv6 ipv6_address 2001:4::1/64
Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan review
```

Commands in queue:

```
createIntVlan createIntVlanReq vlan_id 22
createIntVlan createIntVlanReq address ipv6 ipv6_address 2001:4::1/64
```

```
Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan commit
```

```
CreateIntVlan_Output.createIntVlanResp = 0
```

```
Create Interface Vlan Commit Success!!!
```

## Creating Layer 3 VLANs With Dynamic IP Address

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionPortVlanPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionPortVlanPortType	Enters the ProvisionPortVlanPortType mode.
<b>Step 4</b>	<b>createIntVlan createIntVlanReq deleteVlanReq vlan_list vlan_list</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan createIntVlanReq vlan_id 23	Creates the interface VLAN on the specified VLAN.
<b>Step 5</b>	<b>createIntVlan createIntVlanReq address ipv4 dhcp</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan createIntVlanReq address ipv4 dhcp	Creates the interface VLAN on the specified address.
<b>Step 6</b>	<b>createIntVlan review</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan review	Displays the createIntVlan configuration.
<b>Step 7</b>	<b>createIntVlan commit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan commit	Sends the createIntVlan configuration to the Cisco ME 1200 NID.
<b>Step 8</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# exit Switch(config-controller)	Exits to the config-controller mode.



### Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionPortVlanPortType
Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan createIntVlanReq vlan_Id
23
Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan createIntVlanReq address
ipv4 dhcp
Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan review

Commands in queue:
createIntVlan createIntVlanReq vlan_id 23
createIntVlan createIntVlanReq address ipv4 dhcp

Switch(config-controller-ProvisionPortVlanPortType)# createIntVlan commit

CreateIntVlan_Output.createIntVlanResp = 0

Create Interface Vlan Commit Success!!!
```

## Verifying Layer 3 VLANs With Dynamic IP Address

The following is a sample output to display the layer 3 VLANs configured with a dynamic IP address:

```
Switch(config-controller-ProvisionPortVlanPortType)# showIntVlan showIntVlanReq vlan_list
23

Commands in queue:

showIntVlan showIntVlanReq vlan_list 23

Switch(config-controller-ProvisionPortVlanPortType)# showIntVlan commit

ShowIntVlan_Output.showIntVlanResp.vlan_list[0].vlan_id = 23
ShowIntVlan_Output.showIntVlanResp.vlan_list[0].Link = 'LINK:
00-3a-99-fd-4d-05 Mtu:1500'
ShowIntVlan_Output.showIntVlanResp.vlan_list[0].dhcp = 'DHCP'
ShowIntVlan_Output.showIntVlanResp.vlan_list[0].ipv6_address = 'IPv6
Address not configured'

Show Interface Vlan Commit Success!!!
```

## Deleting Layer 3 VLANs

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.

	Command or Action	Purpose
<b>Step 3</b>	<b>ProvisionPortVlanPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionPortVlanPortType	Enters the ProvisionPortVlanPortType mode.
<b>Step 4</b>	<b>deleteIntVlan deleteIntVlanReq vlan_list vlan_list</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# deleteIntVlan deleteIntVlanReq vlan_list 23	Deletes the VLAN list on the interface.
<b>Step 5</b>	<b>deleteIntVlan review</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# deleteIntVlan review	Displays the deleteIntVlan configuration.
<b>Step 6</b>	<b>deleteIntVlan commit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# deleteIntVlan commit	Sends the deleteIntVlan configuration to the Cisco ME 1200 NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# exit Switch(config-controller)#	Exits to the config-controller mode.

### Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionPortVlanPortType
Switch(config-controller-ProvisionPortVlanPortType)# deleteIntVlan deleteIntVlanReq vlan_list
23
Switch(config-controller-ProvisionPortVlanPortType)# deleteIntVlan review

Commands in queue:
deleteIntVlan deleteIntVlanReq vlan_list 23

Switch(config-controller-ProvisionPortVlanPortType)# deleteIntVlan commit
DeleteIntVlan_Output.deleteIntVlanResp = 0

Delete Interface Vlan Commit Success!!!

```

## Creating a VLAN Translation Group

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>ProvisionPortVlanPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionPortVlanPortType	Enters the ProvisionPortVlanPortType mode.
Step 4	<b>createVlanTranslationGroup createVlanTranslationGroupReq group_id group_id</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createVlanTranslationGroup createVlanTranslationGroupReq group_id 3	Creates the VLAN Translation group ID.
Step 5	<b>createVlanTranslationGroup createVlanTranslationGroupReq {vlan_idvlan_id   vlan_list vlan_list}</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createVlanTranslationGroup createVlanTranslationGroupReq vlan_id 22	Creates the VLAN translation <ul style="list-style-type: none"> <li>• <b>vlan_id</b>—Sets the VLAN ID on which translation occurs.</li> <li>• <b>vlan_list</b>—Sets the VLAN list that needs to be translated.</li> </ul>
Step 6	<b>createVlanTranslationGroup review</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createVlanTranslationGroup review	Displays the createVlanTranslationGroup configuration.
Step 7	<b>createVlanTranslationGroup commit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createVlanTranslationGroup commit	Sends the createVlanTranslationGroup configuration to the Cisco ME 1200 NID.
Step 8	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# exit Switch(config-controller)	Exits to the config-controller mode.

**Example**

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionPortVlanPortType
Switch(config-controller-ProvisionPortVlanPortType)# createVlanTranslationGroup
createVlanTranslationGroupReq group_Id 3
Switch(config-controller-ProvisionPortVlanPortType)# createVlanTranslationGroup
createVlanTranslationGroupReq vlan_id 22
Switch(config-controller-ProvisionPortVlanPortType)# createVlanTranslationGroup
createVlanTranslationGroupReq vlan_list 100,101,102
Switch(config-controller-ProvisionPortVlanPortType)# createVlanTranslationGroup review

Commands in queue:
createVlanTranslationGroup createVlanTranslationGroupReq group_Id 3
createVlanTranslationGroup createVlanTranslationGroupReq vlan_id 22
createVlanTranslationGroup createVlanTranslationGroupReq vlan_list 100,101,102

Switch(config-controller-ProvisionPortVlanPortType)# createVlanTranslationGroup commit

CreateVlanTranslationGroup_Output.createVlanTranslationGroupResp = 0

Create VlanTranslation Commit Success!!!

```

**Deleting VLAN Translation Groups****DETAILED STEPS**

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid <i>1/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionPortVlanPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionPortVlanPortType	Enters the ProvisionPortVlanPortType mode.
<b>Step 4</b>	<b>deleteVlanTranslation deleteVlanTranslationGroupReq group_idgroup_id</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# deleteVlanTranslation deleteVlanTranslationGroupReq group_id 3	Deletes the specified VLAN Translation group id.

	Command or Action	Purpose
Step 5	<b>deleteVlanTranslation deleteVlanTranslationGroupReq deleteVlanReq vlan_list vlan_list</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType) # deleteVlanTranslation deleteVlanTranslationGroupReq vlan_list 2,3	Deletes the specified VLAN Translation VLAN list.
Step 6	<b>deleteVlanTranslation review</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType) # deleteVlanTranslation review	Displays the deleteVlanTranslation configuration.
Step 7	<b>deleteVlanTranslation commit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType) # deleteVlanTranslation commit	Sends the deleteVlanTranslation configuration to the Cisco ME 1200 NID.
Step 8	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType) # exit Switch(config-controller) #	Exits to the config-controller mode.

### Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionPortVlanPortType
Switch(config-controller-ProvisionPortVlanPortType) # deleteVlanTranslation
deleteVlanTranslationGroupReq group_id 3
Switch(config-controller-ProvisionPortVlanPortType) # deleteVlanTranslation
deleteVlanTranslationGroupReq vlan_list 100,101,102
Switch(config-controller-ProvisionPortVlanPortType) # deleteVlanTranslation review

Commands in queue:
deleteVlanTranslation deleteVlanTranslationGroupReq group_id 3
deleteVlanTranslation deleteVlanTranslationGroupReq vlan_list 100,101,102

Switch(config-controller-ProvisionPortVlanPortType) # deleteVlanTranslation commit

DeleteVlanTranslation_Output.deleteVlanTranslationGroupResp = 0

Delete VlanTranslation Commit Success!!!

```

## Verifying VLAN Translation Group

The following is a sample output of the command to verify the VLAN translation group configuration:

```

Switch(config-controller-ProvisionPortVlanPortType) # showVlanTranslation
showVlanTranslationGroupReq
all

```

Commands in queue:

```
showVlanTranslation showVlanTranslationGroupReq all
```

```
Switch(config-controller-ProvisionPortVlanPortType)# showVlanTranslation commit
```

```
ShowVlanTranslation_Output.showVlanTranslationGroupResp[0].group_id = 3
ShowVlanTranslation_Output.showVlanTranslationGroupResp[0].vlan_list =
100
ShowVlanTranslation_Output.showVlanTranslationGroupResp[0].transvlan_id
= 22
ShowVlanTranslation_Output.showVlanTranslationGroupResp[1].group_id = 3
ShowVlanTranslation_Output.showVlanTranslationGroupResp[1].vlan_list =
101
ShowVlanTranslation_Output.showVlanTranslationGroupResp[1].transvlan_id
= 22
ShowVlanTranslation_Output.showVlanTranslationGroupResp[2].group_id = 3
ShowVlanTranslation_Output.showVlanTranslationGroupResp[2].vlan_list =
102
ShowVlanTranslation_Output.showVlanTranslationGroupResp[2].transvlan_id
= 22
Show VlanTranslation Commit Success!!!
```

## Creating VLAN Mapping

### Before You Begin

VLAN Mapping should be created for the VLAN translation group, and the mapping interface should be bound to that translation group.

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid /NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionPortVlanPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionPortVlanPortType	Enters the ProvisionPortVlanPortType mode.

	Command or Action	Purpose
Step 4	<b>createVlanMapping createVlanMappingReq group_id <i>group_id</i></b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createVlanMapping createVlanMappingReq group_id 3	Creates the VLAN mapping group ID.
Step 5	<b>createVlanMapping createVlanMappingReq interface <i>interface_id</i></b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createVlanMapping createVlanMappingReq interface 5	Creates the VLAN mapping on the specified interface.
Step 6	<b>createVlanMapping review</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createVlanMapping review	Displays the createVlanMapping configuration.
Step 7	<b>createVlanMapping commit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createVlanMapping commit	Sends the createVlanMapping configuration to the Cisco ME 1200 NID.
Step 8	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# exit Switch(config-controller)	Exits to the config-controller mode.

### Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionPortVlanPortType
Switch(config-controller-ProvisionPortVlanPortType)# createVlanMapping createVlanMappingReq
group_id 3
Switch(config-controller-ProvisionPortVlanPortType)# createVlanMapping createVlanMappingReq
interface 5
Switch(config-controller-ProvisionPortVlanPortType)# createVlanMapping review

Commands in queue:
createVlanMapping createVlanMappingReq group_id 3
createVlanMapping createVlanMappingReq interface 5

Switch(config-controller-ProvisionPortVlanPortType)# createVlanMapping commit
CreateVlanMapping_Output.createVlanMappingResp = 0

Create VlanMapping Commit Success!!!

```

## Deleting VLAN Mapping

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionPortVlanPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionPortVlanPortType	Enters the ProvisionPortVlanPortType mode.
<b>Step 4</b>	<b>deleteVlanMapping deleteVlanMappingReq interface interface_id</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# deleteVlanMapping deleteVlanMappingReq interface 5	Deleted VLAN mapping for the specified interface.
<b>Step 5</b>	<b>deleteVlanMapping review</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# deleteVlanMapping review	Displays the deleteVlanMapping configuration.
<b>Step 6</b>	<b>deleteVlanMapping commit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# deleteVlanMapping commit	Sends the deleteVlanMapping configuration to the Cisco ME 1200 NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# exit Switch(config-controller)#	Exits to the config-controller mode.

### Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionPortVlanPortType
Switch(config-controller-ProvisionPortVlanPortType)# deleteVlanMapping deleteVlanMappingReq
interface 5
```



```
Switch(config-controller-ProvisionPortVlanPortType)# deleteVlanMapping review

Commands in queue:
deleteVlanMapping deleteVlanMappingReq interface 5

Switch(config-controller-ProvisionPortVlanPortType)# deleteVlanMapping commit
DeleteVlanMapping_Output.deleteVlanMappingResp = 0

Delete Vlan Mapping Commit Success!!!
```

## Modifying Switch Ports

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid <i>1/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionPortVlanPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionPortVlanPortType	Enters the ProvisionPortVlanPortType mode.
<b>Step 4</b>	<b>modifySwPort modifySWPortConfig interface <i>interface_id</i></b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig interaface 4	Modifies the switchport configuration on the defined interface.
<b>Step 5</b>	<b>modifySwPort modifySWConfig { interface   intf-description   mode}</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig interface 4 Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig intf-description Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig mode	<ul style="list-style-type: none"> <li>• <b>interface</b>—Selects the interface to be configured.</li> <li>• <b>intf-description</b>—Specifies the description of the interface.</li> <li>• <b>mode</b>—Displays the mode of operation.</li> </ul>
<b>Step 6</b>	<b>modifySwPort modifySWPortConfig mode access vlan <i>vlan_id</i></b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig mode trunk native vlan 2	Sets the mode to ACCESS, and assigns a VLAN.

	Command or Action	Purpose
<b>Step 7</b>	<p><b>modifySwPort modifySWPortConfig mode trunk {allowed vlan {add {all   vlan_list vlan_list}   remove {all   vlan_list vlan_list}}   {native vlan vlan_list}}</b></p> <p><b>Example:</b>  Switch(config-controller-ProvisionPortVlanPortType) #  modifySwPort modifySWPortConfig mode  trunk allowed vlan add vlan_list 1-5</p>	<p>Sets the mode to TRUNK.</p> <ul style="list-style-type: none"> <li>• <b>allowed</b>—Sets the allowed VLAN characteristics when interface is in trunk mode.</li> <li>• <b>add</b>—Adds either all VLANs or specified VLANs to the current list.</li> <li>• <b>remove</b>—Removes either all VLANs or specified VLANs from the current list.</li> <li>• <b>vlan_id</b>—The VLAN ID. The valid values are from 0 to 4095.</li> </ul>
<b>Step 8</b>	<p><b>modifySwPort review</b></p> <p><b>Example:</b>  Switch(config-controller-ProvisionPortVlanPortType) #  modifySwPort review</p>	<p>Displays the modifySwPort configuration.</p>
<b>Step 9</b>	<p><b>modifySwPort commit</b></p> <p><b>Example:</b>  Switch(config-controller-ProvisionPortVlanPortType) #  modifySwPort commit</p>	<p>Sends the modifySwPort configuration to the Cisco ME 1200 NID.</p>
<b>Step 10</b>	<p><b>exit</b></p> <p><b>Example:</b>  Switch(config-controller-ProvisionPortVlanPortType) #  exit  Switch(config-controller) #</p>	<p>Exits to the config-controller mode.</p>

### Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionPortVlanPortType
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig
interaface 4
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig mode
trunk native vlan 2
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig mode
trunk allowed vlan add vlan_list 200-225
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort review

Commands in queue:
modifySwPort modifySWPortConfig interaface 4
modifySwPort modifySWPortConfig mode trunk native vlan 2
modifySwPort modifySWPortConfig mode trunk allowed vlan_list 200-225

Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort commit

ModifySwPort_Output.modifySwPortConfigResp = 0
Modify SwitchPort Commit Success!!!

```

**Note**

To configure the Switch Port mode as hybrid and the Port description, use **modifySwPort\_v2**. In addition to the available parameters for **modifySwPort**, the following are the new parameters available:

- *hybrid* - Sets mode to HYBRID unconditionally.
- *intf\_description description* - Configures interface description.

**Example**

The following example shows how to configure Switch Port mode as hybrid using **modifySwPort\_v2**.

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionPortVlanPortType
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort_v2 modifySWConfig interaface
1
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort_v2 modifySWConfig mode
hybrid allowed vlan remove vlan_list 1-100
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort-v2 modifySWConfig mode
hybrid port_type c_port
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort_v2 modifySWConfig mode
hybrid ingress_filtering enable
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort_v2 modifySWConfig mode
hybrid ingress_acceptance tagged
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort_v2 modifySWConfig mode
hybrid egress_tag all
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort_v2 modifySWConfig mode
hybrid native vlan 10

Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort_v2 review

Commands in queue:
  modifySwPort_v2 modifySWConfig interaface 1
  modifySwPort_v2 modifySWConfig mode hybrid allowed vlan remove vlan_list 1-100
  modifySwPort_v2 modifySWConfig mode hybrid port_type c_port
  modifySwPort_v2 modifySWConfig mode hybrid ingress_filtering enable
  modifySwPort_v2 modifySWConfig mode hybrid ingress_acceptance tagged
  modifySwPort_v2 modifySWConfig mode hybrid egress_tag all
  modifySwPort_v2 modifySWConfig mode hybrid native vlan 10

Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort_v2 commit
```

**Example**

The following example shows how to configure interface description using **modifySwPort\_v2**.

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionPortVlanPortType
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort_v2 modifySWConfig interaface
1
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort_v2 modifySWConfig
intf_description description connected_to_r1
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort_v2 review

Commands in queue:
  modifySwPort_v2 modifySWConfig interaface 1
  modifySwPort_v2 modifySWConfig intf_description description connected_to_r1

Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort_v2 commit
```

## Deleting Switch Ports

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionPortVlanPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionPortVlanPortType	Enters the ProvisionPortVlanPortType mode.
<b>Step 4</b>	<b>deleteSwPort deleteSwPortReq interface interface_id</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# deleteSwPort deleteSwPortReq interaface 5	Deletes the switchport on the specified interface.
<b>Step 5</b>	<b>deleteSwPort deleteSwPortReq mode {access   trunk}</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# deleteSwPort deleteSwPortReq mode access	Deletes the switchport on the specified mode.
<b>Step 6</b>	<b>deleteSwPort review</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# deleteSwPort review	Displays the deleteSwPort configuration.
<b>Step 7</b>	<b>deleteSwPort commit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# deleteSwPort commit	Sends the deleteSwPort configuration to the Cisco ME 1200 NID.
<b>Step 8</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# exit Switch(config-controller)#	Exits to the config-controller mode.

### Example

```
Switch# configure terminal
```

```

Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionPortVlanPortType
Switch(config-controller-ProvisionPortVlanPortType)# deleteSwPort deleteSwPortReq interaface
5
Switch(config-controller-ProvisionPortVlanPortType)# deleteSwPort deleteSwPortReq mode
access
Switch(config-controller-ProvisionPortVlanPortType)# deleteSwPort review

Commands in queue:
deleteSwPort deleteSwPortReq interaface 5
deleteSwPort deleteSwPortReq mode access

Switch(config-controller-ProvisionPortVlanPortType)# deleteSwPort commit
DeleteSwPort_Output.deleteSwPortResp = 0

Delete SwitchPort Commit Success!!!

```

## Verifying Switch Port Details

The following is a sample output to verify all details of the switch ports:

```

Switch(config-controller-ProvisionPortVlanPortType)# showSwPort showSwPortReq all all

Commands in queue:

showSwPort showSwPortReq all all

Switch(config-controller-ProvisionPortVlanPortType)# showSwPort commit

ShowSwPort_Output.showSwPortResp.interface_list[0].name = 'GigabitEthernet
1/1'
ShowSwPort_Output.showSwPortResp.interface_list[0].admin_mode = 'trunk'
ShowSwPort_Output.showSwPortResp.interface_list[0].access_mode = 1
ShowSwPort_Output.showSwPortResp.interface_list[0].trunk_mode = 1
ShowSwPort_Output.showSwPortResp.interface_list[0].trunk_members = '1-4095'
ShowSwPort_Output.showSwPortResp.interface_list[1].name = 'GigabitEthernet
1/2'
ShowSwPort_Output.showSwPortResp.interface_list[1].admin_mode = 'trunk'
ShowSwPort_Output.showSwPortResp.interface_list[1].access_mode = 1
ShowSwPort_Output.showSwPortResp.interface_list[1].trunk_mode = 1
ShowSwPort_Output.showSwPortResp.interface_list[1].trunk_members = '1-4095'
ShowSwPort_Output.showSwPortResp.interface_list[2].name = 'GigabitEthernet
1/3'
ShowSwPort_Output.showSwPortResp.interface_list[2].admin_mode = 'trunk'
ShowSwPort_Output.showSwPortResp.interface_list[2].access_mode = 1
ShowSwPort_Output.showSwPortResp.interface_list[2].trunk_mode = 1
ShowSwPort_Output.showSwPortResp.interface_list[2].trunk_members = '1-4095'
ShowSwPort_Output.showSwPortResp.interface_list[3].name = 'GigabitEthernet
1/4'
ShowSwPort_Output.showSwPortResp.interface_list[3].admin_mode = 'trunk'
ShowSwPort_Output.showSwPortResp.interface_list[3].access_mode = 1
ShowSwPort_Output.showSwPortResp.interface_list[3].trunk_mode = 2
ShowSwPort_Output.showSwPortResp.interface_list[3].trunk_members = '1-4095'
ShowSwPort_Output.showSwPortResp.interface_list[4].name = 'GigabitEthernet
1/5'
ShowSwPort_Output.showSwPortResp.interface_list[4].admin_mode = 'access'
ShowSwPort_Output.showSwPortResp.interface_list[4].access_mode = 120
ShowSwPort_Output.showSwPortResp.interface_list[4].trunk_mode = 1
ShowSwPort_Output.showSwPortResp.interface_list[4].trunk_members = '1-4095'
ShowSwPort_Output.showSwPortResp.interface_list[5].name = 'GigabitEthernet

```

```
1/6'  
ShowSwPort_Output.showSwPortResp.interface_list[5].admin_mode = 'access'  
ShowSwPort_Output.showSwPortResp.interface_list[5].access_mode = 1  
ShowSwPort_Output.showSwPortResp.interface_list[5].trunk_mode = 1  
ShowSwPort_Output.showSwPortResp.interface_list[5].trunk_members = '1-4095'  
  
Show SwitchPort Commit Success!!!
```



## Configuring Spanning-Tree Protocol

The Cisco ME 1200 Series Carrier Ethernet Access Device supports Spanning-Tree Protocol (STP), and this chapter describes how to configure the STP on port-based VLANs. On the Cisco ME 1200 NID, the STP is enabled by default on physical interfaces.

- [Prerequisites for Configuring Spanning-Tree Protocol, page 151](#)
- [Information About Spanning-Tree Protocol, page 151](#)
- [Understanding Spanning-Tree Modes and Protocols, page 154](#)
- [Understanding MSTP Configuration, page 154](#)
- [How to Configure Spanning-Tree Protocol, page 157](#)
- [Verifying Spanning-Tree Status, page 170](#)
- [Verifying Spanning-Tree Summary, page 171](#)

### Prerequisites for Configuring Spanning-Tree Protocol

- NID must be added to the controller.
- NID must be accessible from the controller.

### Information About Spanning-Tree Protocol

STP is a Layer 2 link management protocol that provides path redundancy while preventing loops in the network.

For a Layer 2 Ethernet network to function properly, only one active path can exist between any two stations. Multiple active paths among end stations cause loops in the network. If a loop exists in the network, end stations might receive duplicate messages. Devices might also learn end-station MAC addresses on multiple Layer 2 interfaces. These conditions result in an unstable network. Spanning-tree operation is transparent to end stations, which cannot detect whether they are connected to a single LAN segment or a switched LAN of multiple segments.

The STP uses a spanning-tree algorithm to select one switch of a redundantly connected network as the root of the spanning tree. The algorithm calculates the best loop-free path through a switched Layer 2 network by assigning a role to each port based on the role of the port in the active topology:

- Root—A forwarding port elected for the spanning-tree topology
- Designated—A forwarding port elected for every switched LAN segment
- Alternate—A blocked port providing an alternate path to the root bridge in the spanning tree
- Backup—A blocked port in a loopback configuration

The switch that has *all* of its ports as the designated role or the backup role is the root switch. The switch that has at least *one* of its ports in the designated role is called the designated switch.

Spanning tree forces redundant data paths into a standby (blocked) state. If a network segment in the spanning tree fails and a redundant path exists, the spanning-tree algorithm recalculates the spanning-tree topology and activates the standby path. Switches send and receive spanning-tree frames, called bridge protocol data units (BPDUs), at regular intervals. The switches do not forward these frames but use them to construct a loop-free path. BPDUs contain information about the sending switch and its ports, including switch and MAC addresses, switch priority, port priority, and path cost. Spanning tree uses this information to elect the root switch and root port for the switched network and the root port and designated port for each switched segment.

When two ports on a switch are part of a loop, the spanning-tree port priority and path cost settings control which port is put in the forwarding state and which is put in the blocking state. The spanning-tree port priority value represents the location of a port in the network topology and how well it is located to pass traffic. The path cost value represents the media speed.


**Note**


---

The switch sends keepalive messages (to ensure the connection is up) only on interfaces that do not have small form-factor pluggable (SFP) modules.

---

### Spanning-Tree Topology and BPDU

The stable, active spanning-tree topology of a switched network is controlled by these elements:

- The unique bridge ID (switch priority and MAC address) associated with each VLAN on each switch.
- The spanning-tree path cost to the root switch.
- The port identifier (port priority and MAC address) associated with each Layer 2 STP-enabled interface.

When the switches in a network are powered up, each functions as the root switch. Each switch sends a configuration BPDU through all of its ports, or on the Cisco ME device, only through the STP-enabled ports. The BPDUs communicate and compute the spanning-tree topology. Each configuration BPDU contains this information:

- The unique bridge ID of the switch that the sending switch identifies as the root switch
- The spanning-tree path cost to the root
- The bridge ID of the sending switch
- Message age
- The identifier of the sending interface
- Values for the hello, forward delay, and max-age protocol timers



When a switch receives a configuration BPDU that contains superior information (lower bridge ID, lower path cost, and so forth), it stores the information for that port. If this BPDU is received on the root port of the switch, the switch also forwards it with an updated message to all attached LANs for which it is the designated switch.

If a switch receives a configuration BPDU that contains inferior information to that currently stored for that port, it discards the BPDU. If the switch is a designated switch for the LAN from which the inferior BPDU was received, it sends that LAN a BPDU containing the up-to-date information stored for that port. In this way, inferior information is discarded, and superior information is propagated on the network.

For more information on BPDUs, see [Configuring Optional Spanning-Tree features](#).

### Spanning-Tree Interface States

Propagation delays can occur when protocol information passes through a switched LAN. As a result, topology changes can take place at different times and at different places in a switched network. When an STP port transitions directly from nonparticipation in the spanning-tree topology to the forwarding state, it can create temporary data loops. Interfaces must wait for new topology information to propagate through the switched LAN before starting to forward frames. They must allow the frame lifetime to expire for forwarded frames that have used the old topology.

Each Layer 2 interface on a switch using spanning tree exists in one of these states:

- **Blocking**—The interface does not participate in frame forwarding.
- **Listening**—The first transitional state after the blocking state when the spanning tree determines that the interface should participate in frame forwarding.
- **Learning**—The interface prepares to participate in frame forwarding.
- **Forwarding**—The interface forwards frames.
- **Disabled**—The interface is not participating in spanning tree because of a shutdown port, no link on the port, or no spanning-tree instance running on the port.

### Configuring Port Priority

If a loop occurs, spanning tree uses the port priority when selecting a spanning-tree port to put into the forwarding state. You can assign higher priority values (lower numerical values) to ports that you want selected first and lower priority values (higher numerical values) to ones that you want selected last. If all spanning-tree ports have the same priority value, spanning tree puts the port with the lowest interface number in the forwarding state and blocks the other interfaces.

### Configuring Path Cost

The spanning-tree path cost default value is derived from the media speed of an interface (port running spanning tree or port channel of multiple ports running spanning tree). If a loop occurs, spanning tree uses cost when selecting an interface to put in the forwarding state. You can assign lower cost values to interfaces that you want selected first and higher cost values that you want selected last. If all NNIs (or port channels) have the same cost value, spanning tree puts the interface with the lowest interface number in the forwarding state and blocks the other interfaces.

### Configuring the Switch Priority of a VLAN

You can configure the switch priority and make it more likely that the switch is chosen as the root switch.

### Admin Edge and Auto Edge

These two values control how a port is declared to be an edge port or not. An edge port, is a port which is not connected to a bridge. If auto edge is enabled, then the port determine whether a port is an edge port by registering for BPDUs, and if BPDUs are received on that port.

The admin edge determines what the port should start as being – edge or not.

#### Restricted Role and Restricted TCN

If restricted role is enabled, it causes the port not to be selected as Root Port for the Common and Internal Spanning Tree (CIST) or any Multiple Spanning Tree Instance (MSTI), even if it has the best spanning tree priority vector. Such a port is selected as an Alternate Port after the Root Port has been selected. If set, it can cause lack of spanning tree connectivity. It can be set by a network administrator to prevent bridges external to a core region of the network influence the spanning tree active topology, possibly because those bridges are not under the full control of the administrator. This feature is also known as Root Guard.

If restricted TCN is enabled, it causes the port not to propagate received topology change notifications and topology changes to other ports. If set it can cause temporary loss of connectivity after changes in a spanning tree's active topology as a result of persistently incorrect learned station location information. It is set by a network administrator to prevent bridges external to a core region of the network, causing address flushing in that region, possibly because those bridges are not under the full control of the administrator or the physical link state of the attached LANs transits frequently.

## Understanding Spanning-Tree Modes and Protocols

The switch ports support the following spanning-tree modes and protocols:

- **MSTP**—This spanning-tree mode is based on the IEEE 802.1s standard. You can map multiple VLANs to the same spanning-tree instance, which reduces the number of spanning-tree instances required to support a large number of VLANs. The MSTP runs on top of the RSTP (based on IEEE802.1w), which provides for rapid convergence of the spanning tree by eliminating the forward delay and by quickly transitioning root ports and designated ports to the forwarding state. You cannot run MSTP without RSTP.

The most common initial deployment of MSTP is in the backbone and distribution layers of a Layer 2 switched network. For more information, see [Configuring MSTP](#).

## Understanding MSTP Configuration

This section describes how to configure the Cisco implementation of the IEEE 802.1s Multiple STP (MSTP) on the Cisco ME 1200 NID. STP is enabled by default on switch ports.



#### Note

The multiple spanning-tree (MST) implementation is a pre-standard implementation. It is based on the draft version of the IEEE standard.

The MSTP enables multiple VLANs to be mapped to the same spanning-tree instance, thereby reducing the number of spanning-tree instances needed to support a large number of VLANs. The MSTP provides for multiple forwarding paths for data traffic and enables load balancing. It improves the fault tolerance of the network because a failure in one instance (forwarding path) does not affect other instances (forwarding paths). The most common initial deployment of MSTP is in the backbone and distribution layers of a Layer 2 switched network. This deployment provides the highly available network required in a service-provider environment.

Both MSTP and RSTP improve the spanning-tree operation and maintain backward compatibility with equipment that is based on the (original) 802.1D spanning tree, with existing Cisco-proprietary Multiple Instance STP (MISTP).

### Understanding MSTP

MSTP, which uses RSTP for rapid convergence, enables VLANs to be grouped into a spanning-tree instance, with each instance having a spanning-tree topology independent of other spanning-tree instances. This architecture provides multiple forwarding paths for data traffic, enables load balancing, and reduces the number of spanning-tree instances required to support a large number of VLANs.

### Multiple Spanning-Tree Regions

For the NID to participate in multiple spanning-tree (MST) instances, you must consistently configure the switches with the same MST configuration information. A collection of interconnected NIDs that have the same MST configuration comprises an MST region. The MST configuration controls to which MST region each switch belongs. The configuration includes the name of the region, the revision number, and the MST VLAN-to-instance assignment map. You configure the NID for a region by using the global configuration command, after which the NID enters the MST configuration mode. From this mode, you can map VLANs to an MST instance by using the instance MST configuration command, specify the region name by using the name MST configuration command, and set the revision number by using the revision MST configuration command. A region can have one member or multiple members with the same MST configuration; each member must be capable of processing RSTP bridge protocol data units (BPDUs). There is no limit to the number of MST regions in a network, but each region can support up to 65 spanning-tree instances. You can assign a VLAN to only one spanning-tree instance at a time.

### IST, CIST, and CST

The MSTP establishes and maintains two types of spanning trees, IST and CIST:

- An internal spanning tree (IST), which is the spanning tree that runs in an MST region. Within each MST region, the MSTP maintains multiple spanning-tree instances. Instance 0 is a special instance for a region, known as the internal spanning tree (IST). All other MST instances are numbered from 1 to 4094. The IST is the only spanning-tree instance that sends and receives BPDUs; all of the other spanning-tree instance information is contained in M-records, which are encapsulated within MSTP BPDUs. Because the MSTP BPDU carries information for all instances, the number of BPDUs that need to be processed by a switch to support multiple spanning-tree instances is significantly reduced. All MST instances within the same region share the same protocol timers, but each MST instance has its own topology parameters, such as root switch ID, root path cost, and so forth. By default, all VLANs are assigned to the IST. An MST instance is local to the region; for example, MST instance 1 in region A is independent of MST instance 1 in region B, even if regions A and B are interconnected.
- A common and internal spanning tree (CIST), which is a collection of the ISTs in each MST region, and the common spanning tree (CST) that interconnects the MST regions and single spanning trees. The spanning tree computed in a region appears as a subtree in the CST that encompasses the entire switched domain. The CIST is formed as a result of the spanning-tree algorithm running between switches that support the IEEE 802.1w, IEEE 802.1s, and IEEE 802.1D protocols. The CIST inside an MST region is the same as the CST outside a region.

For information regarding *Operations Within an MST Region*, *Operations Between MST Regions*, *IEEE 802.1s Terminology*, see [Configuring MSTP](#).

### Hop Count

The IST and MST instances do not use the message-age and maximum-age information in the configuration BPDU to compute the spanning-tree topology. Instead, they use the path cost to the root and a hop-count mechanism similar to the IP time-to-live (TTL) mechanism.

By using the global configuration command, you can configure the maximum hops inside the region and apply it to the IST and all MST instances in that region. The hopcount achieves the same result as the message-age information (trigger a reconfiguration). The root switch of the instance always sends a BPDU (or M-record) with a cost of 0 and the hop count set to the maximum value. When a switch receives this BPDU, it decrements the received remaining hop count by one and propagates this value as the remaining hop count in the BPDUs it generates. When the count reaches zero, the switch discards the BPDU and ages the information held for the port. The message-age and maximum-age information in the RSTP portion of the BPDU remain the same throughout the region, and the same values are propagated by the region's designated ports at the boundary.

## Understanding RSTP

The RSTP takes advantage of point-to-point wiring and provides rapid convergence of the spanning tree. Reconfiguration of the spanning tree can occur in less than 1 second (in contrast to 50 seconds with the default settings in the IEEE 802.1D spanning tree), which is critical for networks carrying delay-sensitive traffic such as voice and video.

## Understanding BPDU Guard and BPDU Filtering

### BPDU Guard

The BPDU guard feature can be globally enabled on the switch or can be enabled per interface, but the feature operates with some differences.

At the global level, you enable BPDU guard on Port Fast-enabled STP ports by using the default global configuration command. Spanning tree shuts down STP ports that are in a Port Fast-operational state if any BPDU is received on those ports. In a valid configuration, Port Fast-enabled STP ports do not receive BPDUs. Receiving a BPDU on a Port Fast-enabled port signals an invalid configuration, such as the connection of an unauthorized device, and the BPDU guard feature puts the interface in the error-disabled state.

At the interface level, you enable BPDU guard on any STP port by using the interface configuration command without also enabling the Port Fast feature. When the STP port receives a BPDU, it is put in the error-disabled state. The BPDU guard feature provides a secure response to invalid configurations because you must manually put the interface back in service. Use the BPDU guard feature in a service-provider network to prevent an access port from participating in the spanning tree. You can enable the BPDU guard feature for the entire switch or for an interface.

### BPDU Filtering

The BPDU filtering feature can be globally enabled on the switch or can be enabled per interface, but the feature operates with some differences.

At the global level, you can enable BPDU filtering on Port Fast-enabled STP ports by using the default global configuration command. This command prevents interfaces that are in a Port Fast-operational state from sending or receiving BPDUs. The interfaces still send a few BPDUs at link-up before the switch begins to filter outbound BPDUs. You should globally enable BPDU filtering on a switch so that hosts connected to these ports do not receive BPDUs. If a BPDU is received on a Port Fast-enabled STP port, the interface loses its Port Fast-operational status, and BPDU filtering is disabled.

At the interface level, you can enable BPDU filtering on any STP port by using the interface configuration command without also enabling the Port Fast feature. This command prevents the interface from sending or receiving BPDUs.



**Note** Enabling BPDU filtering on an STP port is the same as disabling spanning tree on it and can result in spanning-tree loops.

You can enable the BPDU filtering feature for the entire NID or for an STP port.

For more information on BPDUs, see [Understanding BPDUs](#).

# How to Configure Spanning-Tree Protocol

## Configuring Spanning-tree Aggregation Port Configurations

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>configure terminal</b></p> <p><b>Example:</b> Switch# configure terminal</p>	Enters global configuration mode.
Step 2	<p><b>controller nid <i>1/NID_ID</i></b></p> <p><b>Example:</b> Switch(config)# controller nid 1/1</p>	Enters the controller configuration mode.
Step 3	<p><b>ProvisionStpPortType</b></p> <p><b>Example:</b> Switch (config-controller)# ProvisionStpPortType</p>	Enters the ProvisionStpPortType mode.
Step 4	<p><b>setStpaggConfig stpAggrConfig {auto-edge {enable   disable}   bpdu-guardbpdu-guard {enable   disable}   edge {enable   disable}   link-type {auto   point-to   shared} {enable   disable}   mst instance <i>instance-id</i> {active {enable   disable}   cost {auto   cost-range <i>cost_range</i>}   port-priority <i>port_priority</i> }   restricted-role {enable   disable}   restricted-tcn {enable   disable} }</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionStpPortType)# setStpAggConfig stpAggrConfig auto-edge enable  Switch(config-controller-ProvisionStpPortType)# setStpAggConfig stpAggrConfig bpdu-guard disable  Switch(config-controller-ProvisionStpPortType)# setStpAggConfig stpAggrConfig edge disable  Switch(config-controller-ProvisionStpPortType)# setStpAggConfig stpAggrConfig link-type auto enable</pre>	<p>Configures the spanning-tree port configuration:</p> <ul style="list-style-type: none"> <li>• <b>stpPortConfig</b>—Sets the spanning-tree port configuration.</li> <li>• <b>auto-edge</b>—Detects the auto-edge status. <ul style="list-style-type: none"> <li>◦ <b>enable</b>—Enables the auto-edge</li> <li>◦ <b>disable</b>—Disables the auto-edge</li> </ul> </li> <li>• <b>bpdu-guard</b>—Configures the BPDU guard. <ul style="list-style-type: none"> <li>◦ <b>enable</b>—Enables the bpdu-guard</li> <li>◦ <b>disable</b>—Disables the bpdu-guard</li> </ul> </li> <li>• <b>edge</b>—Configures the edge port. <ul style="list-style-type: none"> <li>◦ <b>enable</b>—Enables the edge.</li> </ul> </li> </ul>

Command or Action	Purpose
<pre>Switch(config-controller-ProvisionStpPortType) # setStpAggConfig stpAggrConfig link-type point-to disable  Switch(config-controller-ProvisionStpPortType) # setStpAggConfig stpAggrConfig link-type shared disable  Switch(config-controller-ProvisionStpPortType) # setStpAggConfig stpAggrConfig mst instance 0 active enable  Switch(config-controller-ProvisionStpPortType) # setStpAggConfig stpAggrConfig mst instance 0 cost auto  Switch(config-controller-ProvisionStpPortType) # setStpAggConfig stpAggrConfig mst instance 0 cost cost-range 1  Switch(config-controller-ProvisionStpPortType) # setStpAggConfig stpAggrConfig mst instance 0 port-priority 1  Switch(config-controller-ProvisionStpPortType) # setStpAggConfig stpAggrConfig restricted-role enable  Switch(config-controller-ProvisionStpPortType) # setStpAggConfig stpAggrConfig restricted-tcn disable</pre>	<ul style="list-style-type: none"> <li>◦ <b>disable</b>—Disables the edge.</li> <li>• <b>link-type</b>—Configures the port link-type.       <ul style="list-style-type: none"> <li>◦ <b>auto</b>—Configures the link-type as auto.           <ul style="list-style-type: none"> <li>◦ <b>enable</b>—Enables the link-type as auto.</li> <li>◦ <b>disable</b>—Disables the link-type as auto.</li> </ul> </li> <li>◦ <b>point-to</b>—Forces the link-type as point-to-point.           <ul style="list-style-type: none"> <li>◦ <b>enable</b>—Enables the link-type as point-to.</li> <li>◦ <b>disable</b>—Disables the link-type as point-to.</li> </ul> </li> <li>◦ <b>shared</b>—Forces the link-type as shared.           <ul style="list-style-type: none"> <li>◦ <b>enable</b>—Enables the link-type as shared.</li> <li>◦ <b>disable</b>—Disables the link-type as shared.</li> </ul> </li> </ul> </li> <li>• <b>mst</b>—Configures the STP bridge instance.       <ul style="list-style-type: none"> <li>◦ <i>instance</i>—Instance. The range is from 0 to 7 where CIST=0, MST2=1 and so on.</li> <li>◦ <b>active</b>—Adds or removes an instance.           <ul style="list-style-type: none"> <li>◦ <b>enable</b>—Enables the mst instance as active.</li> <li>◦ <b>disable</b>—Disables the mst instance as active.</li> </ul> </li> <li>◦ <b>cost</b>—Configures the STP cost for the port.           <ul style="list-style-type: none"> <li>◦ <b>auto</b>—Uses auto cost.</li> <li>◦ <i>cost-range</i>—Cost. The range is from 1-200000000.</li> <li>◦ <i>port-priority</i>—STP priority of the port. The range is from 0 to 240.</li> </ul> </li> </ul> </li> <li>• <b>restricted-role</b>—Configures the port role. It is restricted (and never a root port).       <ul style="list-style-type: none"> <li>◦ <b>enable</b>—Enables the port as having restricted role.</li> <li>◦ <b>disable</b>—Disables the port as having restricted role.</li> </ul> </li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>restricted-tcn</b>—Restricts the topology change notifications. <ul style="list-style-type: none"> <li>◦ <b>enable</b>—Enables the restricted TCN.</li> <li>◦ <b>disable</b>—Disables the restricted TCN.</li> </ul> </li> </ul>
<b>Step 5</b>	<b>setStpAggConfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# setStpAggConfig review	Displays the configuration.
<b>Step 6</b>	<b>setstpPortConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# setStpAggConfig commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# exit	Exits to the config-controller mode.

### Configuration Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionStpPortType
Switch(config-controller-ProvisionStpPortType)# setStpAggConfig stpAggrConfig auto-edge
enable
Switch(config-controller-ProvisionStpPortType)# setStpAggConfig stpAggrConfig bpdu-guard
disable
Switch(config-controller-ProvisionStpPortType)# setStpAggConfig stpAggrConfig edge disable
Switch(config-controller-ProvisionStpPortType)# setStpAggConfig stpAggrConfig link-type
auto enable
Switch(config-controller-ProvisionStpPortType)# setStpAggConfig stpAggrConfig link-type
point-to disable
Switch(config-controller-ProvisionStpPortType)# setStpAggConfig stpAggrConfig link-type
shared disable
Switch(config-controller-ProvisionStpPortType)# setStpAggConfig stpAggrConfig mst instance
0 active enable
Switch(config-controller-ProvisionStpPortType)# setStpAggConfig stpAggrConfig mst instance
0 cost auto
Switch(config-controller-ProvisionStpPortType)# setStpAggConfig stpAggrConfig mst instance
0 cost cost-range 1
Switch(config-controller-ProvisionStpPortType)# setStpAggConfig stpAggrConfig mst instance
0 port-priority 1
Switch(config-controller-ProvisionStpPortType)# setStpAggConfig stpAggrConfig restricted-role
enable
Switch(config-controller-ProvisionStpPortType)# setStpAggConfig stpAggrConfig restricted-tcn
disable
Switch(config-controller-ProvisionStpPortType)# setStpAggConfig review

```

Commands in queue:

```
setStpAggConfig stpAggrConfig auto-edge enable
```

```

setStpAggConfig stpAggrConfig bpdu-guard disable
setStpAggConfig stpAggrConfig edge disable
setStpAggConfig stpAggrConfig link-type auto enable
setStpAggConfig stpAggrConfig link-type point-to disable
setStpAggConfig stpAggrConfig link-type shared disable
setStpAggConfig stpAggrConfig mst instance 0 active enable
setStpAggConfig stpAggrConfig mst instance 0 cost auto
setStpAggConfig stpAggrConfig mst instance 0 cost cost-range 1
setStpAggConfig stpAggrConfig mst instance 0 port-priority 1
setStpAggConfig stpAggrConfig restricted-role enable
setStpAggConfig stpAggrConfig restricted-tcn disable

```

```
Switch(config-controller-ProvisionStpPortType)# setStpAggConfig commit
```

```
SetStpAggConfig Commit Success!!!
```

```
Switch(config-controller-ProvisionStpPortType)# exit
```

## Viewing Spanning-Tree Aggregation Port Configurations

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionStpPortType</b>  <b>Example:</b> Switch (config-controller)# ProvisionStpPortType	Enters the ProvisionStpPortType mode.
<b>Step 4</b>	<b>getstpaggConfig getStpAggConfigRequest</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# getstpaggConfig getStpAggConfigRequest	Displays the configuration.
<b>Step 5</b>	<b>getstpaggConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# setStpAggConfig commit	Sends the configuration to the NID.
<b>Step 6</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# exit	Exits to the config-controller mode.



```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionStpPortType
Switch(config-controller-ProvisionStpPortType)# getstppaggConfig getStpAggConfigRequest

    stpAggrConfig.auto_edge = false
    stpAggrConfig.bpdu_guard = true
    stpAggrConfig.edge = false
    stpAggrConfig.link_type.t = 1
    stpAggrConfig.link_type.u.auto_ = false
    stpAggrConfig.mst.instance[0].active = true
    stpAggrConfig.mst.instance[0].cost.t = 1
    stpAggrConfig.mst.instance[0].cost.u.cost_range = 1
    stpAggrConfig.mst.instance[0].port_priority = 1
    stpAggrConfig.restricted_role = false
    stpAggrConfig.restricted_tcn = true

Switch(config-controller-ProvisionStpPortType)# getstppaggConfig commit

    GetstppaggConfig Commit Success!!!

Switch(config-controller-ProvisionStpPortType)# exit

```

## Configuring Spanning-Tree Global Configurations

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>ProvisionStpPortType</b>  <b>Example:</b> Switch (config-controller)# ProvisionStpPortType	Enters the ProvisionStpPortType mode.
Step 4	<b>setStpglobalConfig stpGlobalConfig {edge {bpdu-filter   bpdu-guard} {enable   disable}   mode {mstp   rstp   stp} {enable   disable}   mst {forward-time <i>Fwdtime</i>   instance <i>instance</i> {active {enable   disable}   priority <i>Prio</i>   vlan <i>WORD</i>}   max-age <i>Maxage</i>   max-hops <i>Maxhops</i>   name <i>Name</i>   revision <i>Revision</i> }   port-number <i>Port number</i> {enable   disable}   recovery <i>Interval</i>   transmit <i>hold-count</i> }</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)#	Configures the spanning-tree global configuration. <ul style="list-style-type: none"> <li>• <b>stpGlobalConfig</b>—Sets the spanning-tree global configuration.</li> <li>• <b>edge</b>—Configures the edge ports. <ul style="list-style-type: none"> <li>◦ <b>bpdu-filter</b>—Enables or disables the BPDU filter (stop BPDU tx/rx).</li> <li>◦ <b>bpdu-guard</b>—Enables or disables the BPDU guard.</li> </ul> </li> </ul>

Command or Action	Purpose
<pre>setStpGlobalConfig stpGlobalConfig edge bpdu-guard enable  Switch(config-controller-ProvisionStpPortType) # setStpGlobalConfig stpGlobalConfig mode mstp enable  Switch(config-controller-ProvisionStpPortType) # setStpGlobalConfig stpGlobalConfig mst forward-time 4  Switch(config-controller-ProvisionStpPortType) # setStpGlobalConfig stpGlobalConfig mst instance 0 active enable  Switch(config-controller-ProvisionStpPortType) # setStpGlobalConfig stpGlobalConfig mst instance 0 priority 0  Switch(config-controller-ProvisionStpPortType) # setStpGlobalConfig stpGlobalConfig mst instance 0 vlan 1  Switch(config-controller-ProvisionStpPortType) # setStpGlobalConfig stpGlobalConfig mst max-age 30  Switch(config-controller-ProvisionStpPortType) # setStpGlobalConfig stpGlobalConfig mst max-hops 30  Switch(config-controller-ProvisionStpPortType) # setStpGlobalConfig stpGlobalConfig mst name ciscoNID123  Switch(config-controller-ProvisionStpPortType) # setStpGlobalConfig stpGlobalConfig mst revision 1111  Switch(config-controller-ProvisionStpPortType) # setStpGlobalConfig stpGlobalConfig port-number 1 enable  Switch(config-controller-ProvisionStpPortType) # setStpGlobalConfig stpGlobalConfig recovery interval 3000  Switch(config-controller-ProvisionStpPortType) # setStpGlobalConfig stpGlobalConfig transmit hold-count 10</pre>	<ul style="list-style-type: none"> <li>• <b>mode</b>—Configures the STP protocol mode. <ul style="list-style-type: none"> <li>◦ <b>mstp</b>—Enables or disables the Multiple Spanning Tree (802.1s).</li> <li>◦ <b>rstp</b>—Enables or disables the Rapid Spanning Tree (802.1w)</li> <li>◦ <b>stp</b>—Enables or disables the Spanning Tree (802.1D).</li> </ul> </li>   <li>• <b>mst</b>—Configures the STP bridge instance. <ul style="list-style-type: none"> <li>◦ <i>Fwdtime</i>—Forward time. The range is from 4 to 30 seconds.</li> <li>◦ <i>instance</i>—Instance. The range is from 0 to 7 where CIST=0, MST2=1 and so on. <ul style="list-style-type: none"> <li>◦ <b>active</b>—Enables or disables the instance.</li> <li>◦ <i>Prio</i> —Specifies the priority. The range is from 0 to 61440 seconds. The range should be given in the sets of (0, 4096, 8192...) and so on.</li> <li>◦ <i>WORD</i>—VLAN range.</li> </ul> </li> <li>◦ <i>Maxage</i>—Maximum age. The range is from 6 to 40 seconds.</li> <li>◦ <i>Maxhops</i>—Maximum hops. The range is from 6 to 40 hop counts.</li> <li>◦ <i>Name</i>—Name of the bridge. You can use 32 characters to define.</li> <li>◦ <i>Revision</i>—Revision. The range is from 0-65535 revisions.</li> </ul> </li>   <li>• <b>port-number</b>—Configures the port number in the range from 1 to 6. <ul style="list-style-type: none"> <li>◦ <i>Port number</i>—Port number. The range is from 1 to 6.</li> <li>◦ <b>disable</b>—Disables the port-number.</li> <li>◦ <b>enable</b>—Enables the port-number.</li> </ul> </li>   <li>• <b>recovery</b>—Configures the error recovery timeout. <ul style="list-style-type: none"> <li>◦ <i>Interval</i>—Interval. The range is from 30-86400 seconds.</li> </ul> </li> </ul>
<p><b>Note</b> If the spanning-tree mode is STP or RSTP, and if the priority for the software needs to be changed, you can change using mst instance 0 and priority.</p>	

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>transmit</b>—Configures the BPDUs to transmit. <ul style="list-style-type: none"> <li>◦ <i>hold-count</i>—Maximum number of transmit BPDUs per second. The range is from 1 to 10 seconds.</li> </ul> </li> </ul>
<b>Step 5</b>	<b>setStpGlobalConfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig review	Displays the configuration.
<b>Step 6</b>	<b>setStpGlobalConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# exit	Exits to the config-controller mode.

### Configuration Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionStpPortType
Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig stpGlobalConfig edge
bpduguard enable
Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig stpGlobalConfig mode
mstp enable
Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig stpGlobalConfig mst
forward-time 4
Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig stpGlobalConfig mst
instance 0 active enable
Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig stpGlobalConfig mst
instance 0 priority 0
Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig stpGlobalConfig mst
instance 0 vlan 1
Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig stpGlobalConfig mst
max-age 30
Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig stpGlobalConfig mst
max-hops 30
Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig stpGlobalConfig mst name
myNID123
Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig stpGlobalConfig mst
revision 1111
Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig stpGlobalConfig port-number
1 enable
Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig stpGlobalConfig recovery
interval 3000
Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig stpGlobalConfig transmit
hold-count 10
Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig review

```

Commands in queue:

```

setStpGlobalConfig stpGlobalConfig edge bpdu-guard enable
setStpGlobalConfig stpGlobalConfig mode mstp enable
setStpGlobalConfig stpGlobalConfig mst forward-time 4
setStpGlobalConfig stpGlobalConfig mst instance 0 active enable
setStpGlobalConfig stpGlobalConfig mst instance 0 priority 0
setStpGlobalConfig stpGlobalConfig mst instance 0 vlan 1
setStpGlobalConfig stpGlobalConfig mst max-age 30
setStpGlobalConfig stpGlobalConfig mst max-hops 30
setStpGlobalConfig stpGlobalConfig mst name myNID123
setStpGlobalConfig stpGlobalConfig mst revision 1111
setStpGlobalConfig stpGlobalConfig port-number 1 enable
setStpGlobalConfig stpGlobalConfig recovery interval 3000
setStpGlobalConfig stpGlobalConfig transmit hold-count 10

Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig commit

SetStpGlobalConfig Commit Success!!!

Switch(config-controller-ProvisionStpPortType)# exit

```

## Viewing Spanning-Tree Global Configurations

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid /NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>ProvisionStpPortType</b>  <b>Example:</b> Switch (config-controller)# ProvisionStpPortType	Enters the ProvisionStpPortType mode.
Step 4	<b>getStpglobalConfig getStpGlobalConfigRequest</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# getStpglobalConfig getStpGlobalConfigRequest	Displays the configuration.
Step 5	<b>getStpglobalConfig commit</b>  <b>Example:</b> Switch (config-controller-ProvisionStpPortType)# getStpglobalConfig commit	Sends the configuration to the NID.
Step 6	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# exit	Exits to the config-controller mode.

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionStpPortType
Switch(config-controller-ProvisionStpPortType)# getStpglobalConfig getStpGlobalConfigRequest

    stpGlobalConfig.edge.bpdu_filter = false
    stpGlobalConfig.edge.bpdu_guard = true
    stpGlobalConfig.mode.t = 1
    stpGlobalConfig.mode.u.mstp = false
    stpGlobalConfig.mst.instance[0].active = true
    stpGlobalConfig.mst.instance[0].priority = 0
    stpGlobalConfig.mst.instance[0].vlan = '1'
    stpGlobalConfig.mst.forward_time = 4
    stpGlobalConfig.mst.max_age = 30
    stpGlobalConfig.mst.max_hops = 30
    stpGlobalConfig.mst.name = 'sandino123'
    stpGlobalConfig.mst.revision = 1111
    stpGlobalConfig.recovery.interval = 3000
    stpGlobalConfig.transmit.hold_count = 10
    stpGlobalConfig.port_number[0] = true
    stpGlobalConfig.port_number[1] = true
    stpGlobalConfig.port_number[2] = true
    stpGlobalConfig.port_number[3] = true
    stpGlobalConfig.port_number[4] = true
    stpGlobalConfig.port_number[5] = true

Switch(config-controller-ProvisionStpPortType)# getStpglobalConfig commit

    GetStpglobalConfig Commit Success!!!

Switch(config-controller-ProvisionStpPortType)# exit

```

## Configuring Spanning-Tree Port Configurations

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid <i>1/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>ProvisionStpPortType</b>  <b>Example:</b> Switch (config-controller)# ProvisionStpPortType	Enters the ProvisionStpPortType mode.
Step 4	<b>setStpportConfig stpPortConfig {auto-edge {enable   disable}   bpdu-guard {enable   disable}   edge {enable   disable}   link-type {auto   point-to   shared} {enable  </b>	Configures the spanning-tree port configuration.  • <b>stpPortConfig</b> —Sets the spanning-tree port configuration.

Command or Action	Purpose
<p><b>disable</b>   <b>mst instance</b> <i>instance-id</i> {<b>active</b> {<b>enable</b>   <b>disable</b>}   <b>cost</b> {<b>auto</b>   <b>cost-range</b> <i>cost_range</i>}   <b>port-priority</b> <i>port_priority</i>}   <b>port-number</b> <i>Port -number</i>   <b>restricted-role</b> {<b>enable</b>   <b>disable</b>}   <b>restricted-tcn</b> {<b>enable</b>   <b>disable</b>}}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionStpPortType)# setstpPortConfig stpPortConfig auto-edge enable  Switch(config-controller-ProvisionStpPortType)# setstpPortConfig stpPortConfig bpdu-guard disable  Switch(config-controller-ProvisionStpPortType)# setstpPortConfig stpPortConfig edge disable  Switch(config-controller-ProvisionStpPortType)# setstpPortConfig stpPortConfig link-type auto enable  Switch(config-controller-ProvisionStpPortType)# setstpPortConfig stpPortConfig link-type point-to disable  Switch(config-controller-ProvisionStpPortType)# setstpPortConfig stpPortConfig link-type shared disable  Switch(config-controller-ProvisionStpPortType)# setstpPortConfig stpPortConfig mst instance 0 active enable  Switch(config-controller-ProvisionStpPortType)# setstpPortConfig stpPortConfig mst instance 0 cost auto  Switch(config-controller-ProvisionStpPortType)# setstpPortConfig stpPortConfig mst instance 0 cost cost-range 1  Switch(config-controller-ProvisionStpPortType)# setstpPortConfig stpPortConfig mst instance 0 port-priority 1  Switch(config-controller-ProvisionStpPortType)# setstpPortConfig stpPortConfig restricted-role enable  Switch(config-controller-ProvisionStpPortType)# setstpPortConfig stpPortConfig restricted-tcn disable</pre>	<ul style="list-style-type: none"> <li>• <b>auto-edge</b>—Detects the auto-edge status. <ul style="list-style-type: none"> <li>◦ <b>enable</b>—Enables the auto-edge</li> <li>◦ <b>disable</b>—Disables the auto-edge</li> </ul> </li> <li>• <b>bpdu-guard</b>—Configures the BPDU guard. <ul style="list-style-type: none"> <li>◦ <b>enable</b>—Enables the bpdu-guard</li> <li>◦ <b>disable</b>—Disables the bpdu-guard</li> </ul> </li> <li>• <b>edge</b>—Configures the edge port. <ul style="list-style-type: none"> <li>◦ <b>enable</b>—Enables the edge.</li> <li>◦ <b>disable</b>—Disables the edge.</li> </ul> </li> <li>• <b>link-type</b>—Configures the port link-type. <ul style="list-style-type: none"> <li>◦ <b>auto</b>—Configures the link-type as auto. <ul style="list-style-type: none"> <li>◦ <b>enable</b>—Enables the link-type as auto.</li> <li>◦ <b>disable</b>—Disables the link-type as auto.</li> </ul> </li> <li>◦ <b>point-to</b>—Forces the link-type as point-to-point. <ul style="list-style-type: none"> <li>◦ <b>enable</b>—Enables the link-type as point-to.</li> <li>◦ <b>disable</b>—Disables the link-type as point-to.</li> </ul> </li> <li>◦ <b>shared</b>—Forces the link-type as shared. <ul style="list-style-type: none"> <li>◦ <b>enable</b>—Enables the link-type as shared.</li> <li>◦ <b>disable</b>—Disables the link-type as shared.</li> </ul> </li> </ul> </li> <li>• <b>mst</b>—Configures the STP bridge instance. <ul style="list-style-type: none"> <li>◦ <i>instance</i>—Instance. The range is from 0 to 7 where CIST=0, MST2=1 and so on.</li> <li>◦ <b>active</b>—Adds or removes an instance. <ul style="list-style-type: none"> <li>◦ <b>enable</b>—Enables the mst instance as active.</li> <li>◦ <b>disable</b>—Disables the mst instance as active.</li> </ul> </li> <li>◦ <b>cost</b>—Configures the STP cost for the port. <ul style="list-style-type: none"> <li>◦ <b>auto</b>—Uses auto cost.</li> </ul> </li> </ul> </li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>◦ <i>cost-range</i>—Cost range. The range is from 1-200000000.</li> <li>◦ <i>port-priority</i>—STP priority of the port. The range is from 0 to 240.</li> <li>• <b>port_number</b>—Configures the port number. <ul style="list-style-type: none"> <li>◦ <i>Port number</i>—Port number. The range is from 1 to 6.</li> </ul> </li> <li>• <b>restricted-role</b>—Configures the port role. It is restricted (and never a root port). <ul style="list-style-type: none"> <li>◦ <b>enable</b>—Enables the port as having restricted role.</li> <li>◦ <b>disable</b>—Disables the port as having restricted role.</li> </ul> </li> <li>• <b>restricted-tcn</b>—Restricts the topology change notifications. <ul style="list-style-type: none"> <li>◦ <b>enable</b>—Enables the restricted TCN.</li> <li>◦ <b>disable</b>—Disables the restricted TCN.</li> </ul> </li> </ul>
<b>Step 5</b>	<b>setstpPortConfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType) # setstpPortConfig review	Displays the configuration.
<b>Step 6</b>	<b>setstpPortConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType) # setstpPortConfig commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType) # exit	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller) # ProvisionStpPortType
Switch(config-controller-ProvisionStpPortType) # setstpPortConfig stpPortConfig auto-edge
enable
```

```

Switch(config-controller-ProvisionStpPortType)# setstpPortConfig stpPortConfig bpdu-guard
disable
Switch(config-controller-ProvisionStpPortType)# setstpPortConfig stpPortConfig edge disable
Switch(config-controller-ProvisionStpPortType)# setstpPortConfig stpPortConfig link-type
auto enable
Switch(config-controller-ProvisionStpPortType)# setstpPortConfig stpPortConfig link-type
point-to disable
Switch(config-controller-ProvisionStpPortType)# setstpPortConfig stpPortConfig link-type
shared disable
Switch(config-controller-ProvisionStpPortType)# setstpPortConfig stpPortConfig mst instance
0 active enable
Switch(config-controller-ProvisionStpPortType)# setstpPortConfig stpPortConfig mst instance
0 cost auto
Switch(config-controller-ProvisionStpPortType)# setstpPortConfig stpPortConfig mst instance
0 cost cost-range 1
Switch(config-controller-ProvisionStpPortType)# setstpPortConfig stpPortConfig mst instance
0 port-priority 1
Switch(config-controller-ProvisionStpPortType)# setstpPortConfig stpPortConfig restricted-role
enable
Switch(config-controller-ProvisionStpPortType)# setstpPortConfig stpPortConfig restricted-tcn
disable
Switch(config-controller-ProvisionStpPortType)# setstpPortConfig review

```

Commands in queue:

```

setstpPortConfig stpPortConfig auto-edge enable
setstpPortConfig stpPortConfig bpdu-guard disable
setstpPortConfig stpPortConfig edge disable
setstpPortConfig stpPortConfig link-type auto enable
setstpPortConfig stpPortConfig link-type point-to disable
setstpPortConfig stpPortConfig link-type shared disable
setstpPortConfig stpPortConfig mst instance 0 active enable
setstpPortConfig stpPortConfig mst instance 0 cost auto
setstpPortConfig stpPortConfig mst instance 0 cost cost-range 1
setstpPortConfig stpPortConfig mst instance 0 port-priority 1
setstpPortConfig stpPortConfig restricted-role enable
setstpPortConfig stpPortConfig restricted-tcn disable

```

```
Switch(config-controller-ProvisionStpPortType)# setstpPortConfig commit
```

```
SetStpAggConfig Commit Success!!!
```

```
Switch(config-controller-ProvisionStpPortType)# exit
```

## Viewing Spanning-Tree Protocol Port Configurations

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid <i>1/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.



	Command or Action	Purpose
Step 3	<b>ProvisionStpPortType</b>  <b>Example:</b> Switch (config-controller)# ProvisionStpPortType	Enters the ProvisionStpPortType mode.
Step 4	<b>getStpportConfig getstpPortConfigRequest {port_number port_number}</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# getStpportConfig getstpPortConfigRequest port_number 1	Displays the configuration.  • <i>port_number</i> —Port number. The range is from 1 to 6.
Step 5	<b>getStpportConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# getStpportConfig commit	Sends the configuration to the NID.
Step 6	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# exit	Exits to the config-controller mode.

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionStpPortType
Switch(config-controller-ProvisionStpPortType)# getStpportConfig getstpPortConfigRequest
port_number 1

    stpPortConfig.port_number = 1
    stpPortConfig.auto_edge = false
    stpPortConfig.bpdu_guard = false
    stpPortConfig.edge = false
    stpPortConfig.link_type.t = 1
    stpPortConfig.link_type.u.auto_ = false
    stpPortConfig.restricted_role = false
    stpPortConfig.restricted_tcn = false

Switch(config-controller-ProvisionStpPortType)# getStpportConfig commit

    GetStpPortConfig Commit Success!!!

Switch(config-controller-ProvisionStpPortType)# exit

```

# Verifying Spanning-Tree Status

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid <i>1/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>ProvisionStpPortType</b>  <b>Example:</b> Switch (config-controller)# ProvisionStpPortType	Enters the ProvisionStpPortType mode.
Step 4	<b>showStpdetail showStpDetailRequest</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# showStpdetail showStpDetailRequest	Displays the STP status.
Step 5	<b>showStpdetail commit</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# showStpdetail commit	Sends the configuration to the NID.
Step 6	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# exit	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionStpPortType
Switch(config-controller-ProvisionStpPortType)# showStpdetail showStpDetailRequest
```

```
stpinfo.instance[0].instance_id = 0
stpinfo.instance[0].name = 'CIST'
stpinfo.instance[0].bridgeId = '32768.00-3A-99-FD-4B-1C'
stpinfo.instance[0].designatedRoot = '8192.00-14-1B-EC-1A-BF'
stpinfo.instance[0].rootport = '1'
stpinfo.instance[0].rootPathCost = 200022
stpinfo.instance[0].RegionalRoot = '32768.00-3A-99-FD-4B-1C'
stpinfo.instance[0].InternalPathCost = 0
stpinfo.instance[0].maxHops = 20
stpinfo.instance[0].topologyChange = 'Steady'
stpinfo.instance[0].topologyChangeCount = 31
```

```

stpinfo.instance[0].timeSinceTopologyChange = ' 0d 00:04:49'
stpinfo.instance[0].port_status[0].active = true
stpinfo.instance[0].port_status[0].name = 'CIST'
stpinfo.instance[0].port_status[0].port = '1'
stpinfo.instance[0].port_status[0].port_role = 'RootPort'
stpinfo.instance[0].port_status[0].state = 'Forwarding'
stpinfo.instance[0].port_status[0].priority = 128
stpinfo.instance[0].port_status[0].pathcost = 3392
stpinfo.instance[0].port_status[0].edge = false
stpinfo.instance[0].port_status[0].ptp = true
stpinfo.instance[0].port_status[0].uptime = ' 0d 00:05:10'

```

```
Switch(config-controller-ProvisionStpPortType)# showStpdetail commit
```

```
ShowStpDetail Commit Success!!!
```

```
Switch(config-controller-ProvisionStpPortType)# exit
```

## Verifying Spanning-Tree Summary

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionStpPortType</b>  <b>Example:</b> Switch (config-controller)# ProvisionStpPortType	Enters the ProvisionStpPortType mode.
<b>Step 4</b>	<b>showStpsummary showstpSummaryRequest</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# showStpsummary showstpSummaryRequest	Displays the STP summary.
<b>Step 5</b>	<b>showStpdetail commit</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# showStpsummary commit	Sends the configuration to the NID.
<b>Step 6</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# exit	Exits to the config-controller mode.

### Configuration Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionStpPortType
Switch(config-controller-ProvisionStpPortType)# showStpdetail showStpDetailRequest

  StpSummaryinfo.Protocol = 'MSTP'
  StpSummaryinfo.MaxAge = 20
  StpSummaryinfo.ForwardDelay = 15
  StpSummaryinfo.txHoldCount = 6
  StpSummaryinfo.MaxHops = 20
  StpSummaryinfo.bpduFiltering = false
  StpSummaryinfo.bpduGuard = false
  StpSummaryinfo.errRecoveryDelay = 0
  StpSummaryinfo.mstp_bridge[0].instance_id = 0
  StpSummaryinfo.mstp_bridge[0].name = 'CIST'
  StpSummaryinfo.mstp_bridge[0].status = true
  StpSummaryinfo.mstp_bridge[1].instance_id = 1
  StpSummaryinfo.mstp_bridge[1].name = 'MSTI1'
  StpSummaryinfo.mstp_bridge[1].status = false
  StpSummaryinfo.mstp_bridge[2].instance_id = 2
  StpSummaryinfo.mstp_bridge[2].name = 'MSTI2'
  StpSummaryinfo.mstp_bridge[2].status = false
  StpSummaryinfo.mstp_bridge[3].instance_id = 3
  StpSummaryinfo.mstp_bridge[3].name = 'MSTI3'
  StpSummaryinfo.mstp_bridge[3].status = false
  StpSummaryinfo.mstp_bridge[4].instance_id = 4
  StpSummaryinfo.mstp_bridge[4].name = 'MSTI4'
  StpSummaryinfo.mstp_bridge[4].status = false
  StpSummaryinfo.mstp_bridge[5].instance_id = 5
  StpSummaryinfo.mstp_bridge[5].name = 'MSTI5'
  StpSummaryinfo.mstp_bridge[5].status = false
  StpSummaryinfo.mstp_bridge[6].instance_id = 6
  StpSummaryinfo.mstp_bridge[6].name = 'MSTI6'
  StpSummaryinfo.mstp_bridge[6].status = false
  StpSummaryinfo.mstp_bridge[7].instance_id = 7
  StpSummaryinfo.mstp_bridge[7].name = 'MSTI7'
  StpSummaryinfo.mstp_bridge[7].status = false
  StpSummaryinfo.portcounters[0].port_number = 0
  StpSummaryinfo.portcounters[0].rxMstp = 0
  StpSummaryinfo.portcounters[0].txMstp = 4
  StpSummaryinfo.portcounters[0].rxRstp = 0
  StpSummaryinfo.portcounters[0].txRstp = 0
  StpSummaryinfo.portcounters[0].rxstp = 144
  StpSummaryinfo.portcounters[0].txstp = 122790
  StpSummaryinfo.portcounters[0].rxtcn = 29
  StpSummaryinfo.portcounters[0].txtcn = 2
  StpSummaryinfo.portcounters[0].rxIllegalFrames = 0
  StpSummaryinfo.portcounters[0].unknownFrames = 0

Switch(config-controller-ProvisionStpPortType)# showStpsummary commit

  ShowStpSummary Commit Success!!!

Switch(config-controller-ProvisionStpPortType)# exit

```

## Clearing Spanning-Tree Statistics

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>ProvisionStpPortType</b>  <b>Example:</b> Switch (config-controller)# ProvisionStpPortType	Enters the ProvisionStpPortType mode.
Step 4	<b>clearStpstatistics stpPortSelect {all   port {port-number}}</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# clearStpstatistics stpPortSelect port-number 1	Clears the spanning-tree statistics. <ul style="list-style-type: none"> <li>• <b>all</b>—Clears the statistics from all the ports.</li> <li>• <b>port</b>—Clears the statistics from a specified port number.               <ul style="list-style-type: none"> <li>◦ <i>port-number</i>—Port number. The range is from 1 to 6.</li> </ul> </li> </ul>
Step 5	<b>ClearStpStatistics review</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# ClearStpStatistics review	Displays the configuration.
Step 6	<b>ClearStpStatistics Commit</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# ClearStpStatistics Commit	Sends the configuration to the NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# exit	Exits to the config-controller mode.

#### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
```

```

Switch(config-controller)# ProvisionStpPortType
Switch(config-controller-ProvisionStpPortType)# clearStpstatistics stpPortSelect port-number
1
Switch(config-controller-ProvisionStpPortType)# ClearStpStatistics Review

Commands in queue:
    clearStpstatistics stpPortSelect port-number 1

Switch(config-controller-ProvisionStpPortType)# ClearStpStatistics Commit

    ClearStpStatistics Commit Success!!!

Switch(config-controller-ProvisionStpPortType)# exit

```

## Clearing Spanning-Tree Detected Protocols

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid <i>1/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionStpPortType</b>  <b>Example:</b> Switch (config-controller)# ProvisionStpPortType	Enters the ProvisionStpPortType mode.
<b>Step 4</b>	<b>clearStpdetected stpPortSelect {all   port {<i>port-number</i>}}</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# clearStpdetected stpPortSelect port-number 1	Clear spanning-tree detected-protocols. <ul style="list-style-type: none"> <li>• <b>all</b>—Clears from all the ports.</li> <li>• <b>port</b>—Clears from a specified port number. <ul style="list-style-type: none"> <li>◦ <i>port-number</i>—Port number. The range is from 1 to 6.</li> </ul> </li> </ul>
<b>Step 5</b>	<b>clearStpdetected review</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# clearStpdetected review	Displays the configuration.
<b>Step 6</b>	<b>clearStpdetected commit</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# clearStpdetected commit	Sends the configuration to the NID.

	Command or Action	Purpose
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# exit	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionStpPortType
Switch(config-controller-ProvisionStpPortType)# clearStpdetected stpPortSelect port-number
1
Switch(config-controller-ProvisionStpPortType)# clearStpdetected review
Commands in queue:
  clearStpdetected stpPortSelect port-number 1

Switch(config-controller-ProvisionStpPortType)# clearStpdetected commit

  clearStpdetected Commit Success!!!

Switch(config-controller-ProvisionStpPortType)# exit
```







# Configuring Link Aggregation Control Protocol (LACP)

---

LACP is defined in IEEE 802.3ad standard and enables Cisco switches to manage Ethernet channels between switches that conform to the standard. LACP facilitates the automatic creation of EtherChannels by exchanging LACP packets between Ethernet ports.

By using LACP, the switch learns the identity of partners capable of supporting LACP and the capabilities of each port. It then dynamically groups similarly configured ports into a single logical link (channel or aggregate port). Similarly configured ports are grouped based on key value. For example, LACP groups the ports with the same speed, duplex mode, native VLAN, VLAN range, and trunking status and type.

- [Information About LACP, page 177](#)
- [How to Configure LACP, page 179](#)
- [Verifying LACP, page 193](#)

## Information About LACP

### IEEE 802.3ad Link Bundling

The IEEE 802.3ad Link Bundling feature provides a method for aggregating multiple Ethernet links into a single logical channel based on the IEEE 802.3ad standard. This feature helps improve the cost effectiveness of a device by increasing cumulative bandwidth without necessarily requiring hardware upgrades. In addition, IEEE 802.3ad link bundling provides a capability to dynamically provision, manage, and monitor various aggregated links and enables interoperability between various Cisco devices and devices of third-party vendors.

LACP supports the automatic creation of EtherChannels by exchanging LACP packets between LAN ports. LACP packets are exchanged only between ports in passive and active modes. The protocol “learns” the capabilities of LAN port groups dynamically and informs the other LAN ports. After LACP identifies correctly matched Ethernet links, it facilitates grouping the links into an EtherChannel. Then the EtherChannel is added to the spanning tree as a single bridge port.

Both the passive and active modes allow LACP to negotiate between LAN ports to determine if they can form an EtherChannel, based on criteria such as port speed and trunking state. (Layer 2 EtherChannels also use

VLAN numbers.) LAN ports can form an EtherChannel when they are in compatible LACP modes, as in the following examples:

- A LAN port in active mode can form an EtherChannel with another LAN port that is in active mode.
- A LAN port in active mode can form an EtherChannel with another LAN port that is in passive mode.
- A LAN port in passive mode cannot form an EtherChannel with another LAN port that is also in passive mode because neither port will initiate negotiation.

LACP uses the following parameters:

- LACP system priority—You must configure an LACP system priority on each device running LACP. The system priority can be configured automatically or through the command-line interface (CLI). LACP uses the system priority with the device MAC address to form the system ID and also during negotiation with other systems.
- LACP port priority—You must configure an LACP port priority on each port configured to use LACP. The port priority can be configured automatically or through the CLI. LACP uses the port priority to decide which ports should be put in standby mode when there is a hardware limitation that prevents all compatible ports from aggregating. LACP also uses the port priority with the port number to form the port identifier.
- LACP administrative key—LACP automatically configures an administrative key value on each port configured to use LACP. The administrative key defines the ability of a port to aggregate with other ports. A port's ability to aggregate with other ports is determined by the following:
  - Port physical characteristics such as data rate, duplex capability, and point-to-point or shared medium
  - Configuration restrictions that you establish

LACP, on ports configured to use it, tries to configure the maximum number of compatible ports in an EtherChannel, up to the maximum allowed by the hardware. To use the hot standby feature in the event a channel port fails, both ends of the LACP bundle must support the **lACP max-bundle** command.

As a control protocol, LACP uses the Slow Protocol multicast address of 01-80-C2-00-00-02 to transmit LACP protocol data units (PDUs). Operations, administration, and maintenance (OAM) packets also use the Slow Protocol link type. Subsequently, a subtype field is defined per the IEEE 802.3ad standard (Annex 43B, section 4) differentiating LACP PDUs from OAM PDUs.

# How to Configure LACP

## Provisioning the Controller to Configure LACP

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>ProvisionLacpPortType</b>  <b>Example:</b> Switch(config-controller)# <b>ProvisionLacpPortType</b>	Enters LACP provisioning mode.
Step 4	<b>ProvisionLacpPortType {clearLacpStats   default   exit   getLacpConfig   getLacpDefaults   getLacpPortConfig   getLacpPortDefaults   no   setLacpConfig   setLacpDefaults   setLacpPortConfig   setLacpPortDefaults   showLacpAggLB   showLacpInternal   showLacpNeighbors   showLacpStats   showLacpSysId}</b>  <b>Example:</b> Switch(config-controller-ProvisionLacpPortType)# ? ProvisionLacpPortType sub-mode commands: clearLacpStats        Clear LACP statistics request default                Set a command to its defaults exit                    Exit from ProvisionLacpPortType sub configuration mode getLacpConfig         Get LACP configuration request getLacpDefaults       Get LACP default configuration request getLacpPortConfig    Get LACP port configuration request getLacpPortDefaults   Get LACP port default configuration request no                      Negate a command or set its defaults setLacpConfig         Set LACP configuration request setLacpDefaults       Set LACP default configuration request setLacpPortConfig    Set LACP port configuration request setLacpPortDefaults   Set LACP port default configuration request showLacpAggLB        Show LACP load balance request showLacpInternal      Show LACP internal request showLacpNeighbors    Show LACP neighbor status request showLacpStats         Show LACP statistics request showLacpSysId        Show LACP system-id request	Displays the supported configurations for LACP.
Step 5	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionLacpPortType)# <b>exit</b>	Exits the LACP provisioning mode.

### Configuration Example

The following example shows the supported LACP configuration:

```
Switch(config-controller-ProvisionLacpPortType)# ?
ProvisionLacpPortType sub-mode commands:
  clearLacpStats          Clear LACP statistics request
  default                 Set a command to its defaults
  exit                   Exit from ProvisionLacpPortType sub configuration mode
  getLacpConfig           Get LACP configuration request
  getLacpDefaults        Get LACP default configuration request
  getLacpPortConfig       Get LACP port configuration request
  getLacpPortDefaults     Get LACP port default configuration request
  no                      Negate a command or set its defaults
  setLacpConfig           Set LACP configuration request
  setLacpDefaults        Set LACP default configuration request
  setLacpPortConfig       Set LACP port configuration request
  setLacpPortDefaults     Set LACP port default configuration request
  showLacpAggLB          Show LACP load balance request
  showLacpInternal       Show LACP internal request
  showLacpNeighbors      Show LACP neighbor status request
  showLacpStats          Show LACP statistics request
  showLacpSysId          Show LACP system-id request
```

## Configuring LACP Globally on the Controller

### Before You Begin

- Perform the steps to provision LACP on the controller. See [Provisioning the Controller to Configure LACP](#), on page 179.

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>setLacpConfig</b> {commit   flush   lacpGlobalConfiguration   review}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# setLacpConfig ?   commit                commit setLacpConfig   flush                 flush all setLacpConfig commands from queue   lacpGlobalConfiguration Set LACP configuration request   review                 review setLacpConfig commands</pre>	<p>Configures global LACP.</p> <ul style="list-style-type: none"> <li><b>commit</b>—Sends the LACP configuration to NID.</li> <li><b>flush</b>—Flushes all LACP configuration from the queue.</li> <li><b>lacpGlobalConfiguration</b>—Sets LACP configuration globally on the controller .</li> <li><b>review</b>—Displays the configuration on the controller .</li> </ul>
Step 2	<p><b>setLacpConfig lacpGlobalConfiguration</b> {lacpGlobalState {enable}   systemPriority_value}</p>	<p>Sets global LACP configuration.</p> <ul style="list-style-type: none"> <li><b>lacpGlobalState</b>—Enables the LACP configuration globally on the controller .</li> </ul> <p><b>Note</b> LACP is always enabled globally. Disable is not supported.</p>

	Command or Action	Purpose
	<p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# setLacpConfig lacpGlobalConfiguration lacpGlobalState enable Switch(config-controller-ProvisionLacpPortType)# setLacpConfig lacpGlobalConfiguration systemPrio 2</pre>	<ul style="list-style-type: none"> <li>• <b>enable</b>—Enables global LACP configuration.</li> <li>• <b>systemPrio</b> <i>priority_value</i>—Sets priority value. The valid range is from 1 to 65535.</li> </ul>
<b>Step 3</b>	<p><b>setLacpConfig review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# setLacpConfig review Commands in queue:     setLacpConfig lacpGlobalConfiguration lacpGlobalState enable     setLacpConfig lacpGlobalConfiguration systemPrio 2</pre>	Displays the LACP configuration on the controller .
<b>Step 4</b>	<p><b>setLacpConfig commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# setLacpConfig commit</pre>	Sends the LACP configuration to the NID.
<b>Step 5</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# exit</pre>	Exits the LACP provisioning mode.

### Configuration Example

The example shows global LACP configuration on the controller :

```
Switch(config-controller-ProvisionLacpPortType)# setLacpConfig lacpGlobalConfiguration
lacpGlobalState enable
Switch(config-controller-ProvisionLacpPortType)# setLacpConfig lacpGlobalConfiguration
systemPrio 2
Switch(config-controller-ProvisionLacpPortType)# setLacpConfig review
Commands in queue:
    setLacpConfig lacpGlobalConfiguration lacpGlobalState enable
    setLacpConfig lacpGlobalConfiguration systemPrio 2
Switch(config-controller-ProvisionLacpPortType)# setLacpConfig commit
SetLacpConfig Commit Success!!!
Switch(config-controller-ProvisionLacpPortType)# exit
```

## Configuring LACP Defaults Globally on the Controller

### Before You Begin

- Perform the steps to provision LACP on the controller . See [Provisioning the Controller to Configure LACP](#), on page 179.

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<pre>setLacpDefaults {commit   flush   setLacpDefaultsRequest   review}</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# setLacpDefaults ?   commit          commit setLacpDefaults   flush           flush all setLacpDefaults commands from queue   review          review setLacpDefaults commands  setLacpDefaultsRequest Set LACP default configuration request Switch(config-controller-ProvisionLacpPortType)# setLacpDefaults setLacpDefaultsRequest</pre>	<p>Configures default LACP globally.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the LACP configuration to NID.</li> <li>• <b>flush</b>—Flushes all LACP configuration from the queue.</li> <li>• <b>setLacpDefaultsRequest</b>—Sets LACP default configuration globally on the controller .</li> <li>• <b>review</b>—Displays the configuration on the controller .</li> </ul>
<b>Step 2</b>	<pre>setLacpDefaults review</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# setLacpDefaults review Commands in queue:   setLacpDefaults setLacpDefaultsRequest   setLacpDefaults setLacpDefaultsRequest</pre>	<p>Displays the default LACP configuration on the controller.</p> <p><b>Note</b> The default system priority value is set to 32768.</p>
<b>Step 3</b>	<pre>setLacpDefaults commit</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# setLacpDefaults commit</pre>	<p>Sends the LACP configuration to the NID.</p>
<b>Step 4</b>	<pre>exit</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# exit</pre>	<p>Exits the LACP provisioning mode.</p>

### Configuration Example

The example how to configure default LACP configuration on the controller:

```
Switch(config-controller-ProvisionLacpPortType)# setLacpDefaults setLacpDefaultsRequest
```

```
Switch(config-controller-ProvisionLacpPortType) # setLacpDefaults review
Commands in queue:
      setLacpDefaults setLacpDefaultsRequest
Switch(config-controller-ProvisionLacpPortType) # setLacpDefaults commit
SetLacpConfig Commit Success!!!
Switch(config-controller-ProvisionLacpPortType) # exit
```

## Configuring LACP at Port level on the Controller

### Before You Begin

- Perform the steps to provision LACP on the Controller. See [Provisioning the Controller to Configure LACP](#), on page 179.

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>setLacpPortConfig</b> {commit   flush   lacpPortConfiguration   review}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType) # <b>setLacpPortConfig ?</b>   commit                commit setLacpPortConfig   flush                 flush all setLacpPortConfig commands from queue lacpPortConfiguration Set LACP port configuration request review                  review setLacpPortConfig commands</pre>	<p>Configures LACP at port level.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the LACP configuration to the NID.</li> <li>• <b>flush</b>—Flushes all LACP configuration from the queue.</li> <li>• <b>lacpPortConfiguration</b>—Sets LACP configuration at port level on the Controller.</li> <li>• <b>review</b>—Displays the configuration on the NID.</li> </ul>
Step 2	<p><b>setLacpPortConfig lacpPortConfiguration</b> {key <i>key_group</i>   lacpEnable {enable   disable}   portNumber <i>port-num</i>   portPriority <i>priority-value</i>   role {active   passive} {enable   disable}   timeout {fast   slow} {enable   disable}}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType) # <b>setLacpPortConfig lacpPortConfiguration key 1</b> Switch(config-controller-ProvisionLacpPortType) # <b>setLacpPortConfig lacpPortConfiguration lacpEnable enable</b> Switch(config-controller-ProvisionLacpPortType) # <b>setLacpPortConfig lacpPortConfiguration portNumber 2</b> Switch(config-controller-ProvisionLacpPortType) # <b>setLacpPortConfig lacpPortConfiguration role active enable</b> Switch(config-controller-ProvisionLacpPortType) # <b>setLacpPortConfig lacpPortConfiguration portPriority 23</b> Switch(config-controller-ProvisionLacpPortType) # <b>setLacpPortConfig lacpPortConfiguration timeout fast enable</b></pre>	<p>Configures LACP port configuration.</p> <ul style="list-style-type: none"> <li>• <b>key</b> <i>key_group</i>—Specifies the key or channel group for LACP aggregation. The valid range is 0 to 65535.</li> <li>• <b>lacpEnable</b> —Enables LACP on the interface.</li> <li>• <b>enable</b>—Enables LACP configuration.</li> <li>• <b>disable</b>—Disables LACP configuration.</li> <li>• <b>portNumber</b> <i>port-num</i>—Specifies the targeted port. The valid range is from 1 to 6.</li> <li>• <b>portPriority</b> <i>priority-value</i>—Specifies the LACP priority. The valid range is from 1 to 65535.</li> <li>• <b>role</b>—Sets the activity mode.</li> <li>• <b>active</b>—Transmits the LACP BPDUs actively.</li> <li>• <b>passive</b>—Waits for the neighbor before transmitting.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>timeout</b>—Sets period between BPDU transmissions.</li> <li>• <b>fast</b>—Transmits BPDUs every second.</li> <li>• <b>slow</b>—Transmits BPDUs every 30th second.</li> </ul>
<b>Step 3</b>	<b>setLacpPortConfig review</b>  <b>Example:</b>  <pre>Switch(config-controller-ProvisionLacpPortType)# <b>setLacpPortConfig review</b> Commands in queue:     setLacpPortConfig lacpPortConfiguration key 3     setLacpPortConfig lacpPortConfiguration lacpEnable enable     setLacpPortConfig lacpPortConfiguration portNumber 2     setLacpPortConfig lacpPortConfiguration portPriority 2     setLacpPortConfig lacpPortConfiguration role active enable     setLacpPortConfig lacpPortConfiguration timeout fast enable     setLacpPortConfig lacpPortConfiguration key 2     setLacpPortConfig lacpPortConfiguration lacpEnable enable     setLacpPortConfig lacpPortConfiguration portNumber 2     setLacpPortConfig lacpPortConfiguration role active enable     setLacpPortConfig lacpPortConfiguration timeout fast enable</pre>	Displays the LACP configuration on the Controller.
<b>Step 4</b>	<b>setLacpPortConfigcommit</b>  <b>Example:</b>  <pre>Switch(config-controller-ProvisionLacpPortType)# <b>setLacpPortConfig commit</b></pre>	Sends the LACP configuration to the NID.
<b>Step 5</b>	<b>exit</b>  <b>Example:</b> <pre>Switch(config-controller-ProvisionLacpPortType)# <b>exit</b></pre>	Exits the LACP provisioning mode.

### Configuration Example

The example shows LACP port configuration on the Controller:

```
Switch(config-controller-ProvisionLacpPortType)# setLacpPortConfig lacpPortConfiguration
key 1
Switch(config-controller-ProvisionLacpPortType)# setLacpPortConfig lacpPortConfiguration
lacpEnable enable
Switch(config-controller-ProvisionLacpPortType)# setLacpPortConfig lacpPortConfiguration
portNumber 2
Switch(config-controller-ProvisionLacpPortType)# setLacpPortConfig lacpPortConfiguration
```



```

role active enable
Switch(config-controller-ProvisionLacpPortType) # setLacpPortConfig lacpPortConfiguration
portPriority 23
Switch(config-controller-ProvisionLacpPortType) # setLacpPortConfig lacpPortConfiguration
timeout fast enable
Switch(config-controller-ProvisionLacpPortType) # setLacpPortConfig review
Commands in queue:
    setLacpPortConfig lacpPortConfiguration key 3
    setLacpPortConfig lacpPortConfiguration lacpEnable enable
    setLacpPortConfig lacpPortConfiguration portNumber 2
    setLacpPortConfig lacpPortConfiguration portPriority 2
    setLacpPortConfig lacpPortConfiguration role active enable
    setLacpPortConfig lacpPortConfiguration timeout fast enable
    setLacpPortConfig lacpPortConfiguration key 2
    setLacpPortConfig lacpPortConfiguration lacpEnable enable
    setLacpPortConfig lacpPortConfiguration portNumber 2
    setLacpPortConfig lacpPortConfiguration role active enable
    setLacpPortConfig lacpPortConfiguration timeout fast enable
Switch(config-controller-ProvisionLacpPortType) # setLacpPortConfig commit
SetLacpPortConfig Commit Success!!!
Switch(config-controller-ProvisionLacpPortType) # exit
    
```

## Configuring Default LACP Configuration at Port level on the Controller

The default values for LACP port parameters are:

- lacpEnable: false
- portPriority 32768
- role: active
- timeout: fast

There is no default value for key. Configure a valid value to identify the LACP channel aggregation group. If no value is set, key value is displayed as 0.

### Before You Begin

- Perform the steps to provision LACP on the controller. See [Provisioning the Controller to Configure LACP](#), on page 179.

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<pre> setLacpPortDefaults {commit   flush   lacpPhysicalPort port_num  review}  Example:  Switch(config-controller-ProvisionLacpPortType) # setLacpPortDefaults ? commit          commit setLacpPortDefaults flush          flush all setLacpPortDefaults commands from queue lacpPhysicalPort Set LACP port default configuration request review          review setLacpPortDefaults commands                     </pre>	<p>Configures default LACP at port level.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the LACP configuration to NID.</li> <li>• <b>flush</b>—Flushes all LACP configuration from the queue.</li> <li>• <b>lacpPhysicalPort port_num</b>—Sets LACP default configuration at port level on the controller. The valid ports are 1 to 6.</li> </ul>

	Command or Action	Purpose
	<pre>Switch(config-controller-ProvisionLacpPortType)# setLacpPortDefaults lacpPhysicalPort 2</pre>	<ul style="list-style-type: none"> <li><b>review</b>—Displays the configuration on the controller .</li> </ul>
<b>Step 2</b>	<p><b>setLacpPortDefaults review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# setLacpPortDefaults review Commands in queue:     setLacpPortDefaults lacpPhysicalPort 2</pre>	Displays the LACP configuration on the controller .
<b>Step 3</b>	<p><b>setLacpPortDefaults commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# setLacpPortDefaults commit</pre>	Sends the LACP configuration to the NID.
<b>Step 4</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# exit</pre>	Exits the LACP provisioning mode.

### Configuration Example

The example shows default LACP port configuration on the controller :

```
Switch(config-controller-ProvisionLacpPortType)# setLacpPortDefaults lacpPhysicalPort 2
Switch(config-controller-ProvisionLacpPortType)# setLacpPortDefaults review
Commands in queue:
    setLacpPortDefaults lacpPhysicalPort 2
Switch(config-controller-ProvisionLacpPortType)# setLacpPortDefaults commit
SetLacpPortDefaults Commit Success!!!
Switch(config-controller-ProvisionLacpPortType)# exit
```

## Clearing LACP Statistics on the Controller

### Before You Begin

- Perform the steps to provision LACP on the Controller. See [Provisioning the Controller to Configure LACP](#), on page 179.

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<pre>clearLacpStats {commit   flush   lacpPhysicalPort port_num  review}</pre>	Clears LACP statistics.

	Command or Action	Purpose
	<p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType) # clearLacpStats ?   commit          commit clearLacpStats   flush           flush all clearLacpStats commands from queue   lacpPhysicalPort Clear LACP statistics request   review          review clearLacpStats commands Switch(config-controller-ProvisionLacpPortType) # clearLacpStats lacpPhysicalPort 3</pre>	<ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the LACP configuration to NID.</li> <li>• <b>flush</b>—Flushes all LACP configuration from the queue.</li> <li>• <b>lacpPhysicalPort</b> <i>port_num</i>—Clears the LACP statistics on a specified port on the Controller. The valid values are 1 to 6.</li> <li>• <b>review</b>—Displays the configuration on the Controller.</li> </ul>
<b>Step 2</b>	<p><b>clearLacpStats review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType) # clearLacpStats review Commands in queue:   clearLacpStats lacpPhysicalPort 3</pre>	Displays the LACP configuration on the Controller.
<b>Step 3</b>	<p><b>clearLacpStats commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType) # clearLacpStats commit</pre>	Sends the LACP configuration to the NID.
<b>Step 4</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType) # exit</pre>	Exits the LACP provisioning mode.

### Configuration Example

The example clears the LACP statistics on port 3 on the Controller:

```
Switch(config-controller-ProvisionLacpPortType) # clearLacpStats lacpPhysicalPort 3
Switch(config-controller-ProvisionLacpPortType) # clearLacpStats review
Commands in queue:
  clearLacpStats lacpPhysicalPort 3
Switch(config-controller-ProvisionLacpPortType) # clearLacpStats commit
ClearLacpStats_Output.clearLacpStatsResponse = 0

ClearLacpStats Commit Success!!!
Switch(config-controller-ProvisionLacpPortType) # exit
```

## Negating LACP Configuration and Restoring Defaults

### Before You Begin

- Perform the steps to provision LACP on the controller . See [Provisioning the Controller to Configure LACP, on page 179](#).

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>no ?</b></p> <p><b>Example:</b> Switch(config-controller-ProvisionLacpPortType)# <b>no ?</b></p> <pre>clearLacpStats      Clear LACP statistics request exit                Exit from ProvisionLacpPortType sub configuration mode getLacpConfig       Get LACP configuration request getLacpDefaults     Get LACP default configuration request getLacpPortConfig   Get LACP port configuration request getLacpPortDefaults Get LACP port default configuration request setLacpConfig       Set LACP configuration request setLacpDefaults     Set LACP default configuration request setLacpPortConfig   Set LACP port configuration request setLacpPortDefaults Set LACP port default configuration request showLacpAggLb       Show LACP load balance request showLacpInternal    Show LACP internal request showLacpNeighbors   Show LACP neighbor status request showLacpStats       Show LACP statistics request showLacpSysId       Show LACP system-id request</pre>	Negates the commands and sets the default configuration.
Step 2	<p><b>exit</b></p> <p><b>Example:</b> Switch(config-controller-ProvisionLacpPortType)# <b>exit</b></p>	Exits the LACP provisioning mode.

## Viewing the Global LACP Configuration on the controller

### Before You Begin

- Perform the steps to provision LACP on the controller . See [Provisioning the Controller to Configure LACP, on page 179](#).

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>getLacpConfig {commit   flush   getLacpConfigRequest   review}</b>	Retrieve the global LACP configuration.

	Command or Action	Purpose
	<p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType) # getLacpConfig ? commit                commit getLacpConfig flush                 flush all getLacpConfig commands from queue getLacpConfigRequest Get LACP configuration request review                review getLacpConfig commands commit                commit getLacpConfig Switch(config-controller-ProvisionLacpPortType) # getLacpConfig getLacpConfigRequest</pre>	<ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the LACP configuration to NID.</li> <li>• <b>flush</b>—Flushes all LACP configuration from the queue.</li> <li>• <b>getLacpConfigRequest</b>—Retrieves the configured global LACP configuration on the controller .</li> <li>• <b>review</b>—Displays the configuration on the controller .</li> </ul>
<b>Step 2</b>	<p><b>getLacpConfig review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType) # getLacpConfig review Commands in queue:   getLacpConfig getLacpConfigRequest   getLacpConfig getLacpConfigRequest</pre>	Displays the LACP configuration on the controller .
<b>Step 3</b>	<p><b>getLacpConfig commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType) # getLacpConfig commit</pre>	Sends the LACP configuration to the NID.
<b>Step 4</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType) # exit</pre>	Exits the LACP provisioning mode.

### Configuration Example

The example retrieves the global LACP configuration on the controller :

```
Switch(config-controller-ProvisionLacpPortType) # getLacpConfig getLacpConfigRequest
Switch(config-controller-ProvisionLacpPortType) # getLacpConfig review
Commands in queue:
  getLacpConfig getLacpConfigRequest
  getLacpConfig getLacpConfigRequest
Switch(config-controller-ProvisionLacpPortType) # getLacpConfig commit
GetLacpConfig_Output.lacpGlobalConfiguration.systemPrio = 32768
GetLacpConfig_Output.lacpGlobalConfiguration.lacpGlobalState = true
  GetLacpConfig Commit Success!!!
Switch(config-controller-ProvisionLacpPortType) # exit
```

## Viewing the Default LACP Configuration on the controller

### Before You Begin

- Perform the steps to provision LACP on the controller . See [Provisioning the Controller to Configure LACP, on page 179](#).

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<pre>getLacpDefaults {commit   flush   getLacpDefaultsRequest   review}</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# getLacpDefaults ?   commit                commit getLacpDefaults   flush                  flush all getLacpDefaults Commands from queue getLacpDefaultsRequest  Get LACP default configuration request review                  review getLacpDefaults commands Switch(config-controller-ProvisionLacpPortType)# getLacpDefaults getLacpDefaultsRequest</pre>	<p>Retrieves the default LACP configuration.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the LACP configuration to NID.</li> <li>• <b>flush</b>—Flushes all LACP configuration from the queue.</li> <li>• <b>getLacpDefaultsRequest</b>—Retrieves the default LACP configuration on the controller .</li> <li>• <b>review</b>—Displays the configuration on the controller .</li> </ul>
<b>Step 2</b>	<pre>getLacpDefaults review</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# getLacpDefaults review Commands in queue: getLacpDefaults getLacpDefaultsRequest</pre>	<p>Displays the LACP configuration on the controller .</p>
<b>Step 3</b>	<pre>getLacpDefaults commit</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# getLacpDefaults commit</pre>	<p>Sends the LACP configuration to the NID.</p>
<b>Step 4</b>	<pre>exit</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# exit</pre>	<p>Exits the LACP provisioning mode.</p>

### Configuration Example

The example retrieves the default LACP configuration on the controller :

```
Switch(config-controller-ProvisionLacpPortType)# getLacpDefaults getLacpDefaultsRequest
```

```
Switch(config-controller-ProvisionLacpPortType)# getLacpDefaults review
Commands in queue:
  getLacpDefaults getLacpDefaultsRequest
Switch(config-controller-ProvisionLacpPortType)# getLacpDefaults commit
GetLacpDefaults_Output.lacpGlobalConfiguration.systemPrio = 32768
GetLacpDefaults_Output.lacpGlobalConfiguration.lacpGlobalState = true

GetLacpDefaults Commit Success!!!
Switch(config-controller-ProvisionLacpPortType)# exit
```

## Viewing the LACP Configuration at Port Level on the Controller

### Before You Begin

- Perform the steps to provision LACP on the Controller. See [Provisioning the Controller to Configure LACP](#), on page 179.

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<pre><b>getLacpPortConfig</b> {<b>commit</b>   <b>flush</b>   <b>lacpPhysicalPort</b> <i>port_num</i>   <b>review</b>}</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# <b>getLacpPortConfig</b> ?   commit          commit getLacpPortConfig   flush           flush all getLacpPortConfig commands                   from queue   lacpPhysicalPort Get LACP port configuration request    review          review getLacpPortConfig commands Switch(config-controller-ProvisionLacpPortType)# <b>getLacpPortConfig lacpPhysicalPort 1</b></pre>	<p>Retrieves the LACP configuration at port.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the LACP configuration to NID.</li> <li>• <b>flush</b>—Flushes all LACP configuration from the queue.</li> <li>• <b>lacpPhysicalPort</b> <i>port_num</i>—Retrieves the LACP configuration for specified port on the Controller. The valid values are 1 to 6.</li> <li>• <b>review</b>—Displays the configuration on the Controller.</li> </ul>
<b>Step 2</b>	<pre><b>getLacpPortConfig review</b></pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# <b>getLacpPortConfig review</b> Commands in queue:   getLacpPortConfig lacpPhysicalPort 1</pre>	<p>Displays the LACP configuration on the Controller.</p>
<b>Step 3</b>	<pre><b>getLacpPortConfig commit</b></pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# <b>getLacpPortConfig commit</b></pre>	<p>Sends the LACP configuration to the NID.</p>
<b>Step 4</b>	<pre><b>exit</b></pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# <b>exit</b></pre>	<p>Exits the LACP provisioning mode.</p>

### Configuration Example

The example retrieves the LACP configuration for port 1 on the Controller:

```
Switch(config-controller-ProvisionLacpPortType)# getLacpPortConfig lacpPhysicalPort 1
Switch(config-controller-ProvisionLacpPortType)# getLacpPortConfig review
Commands in queue:
  getLacpPortConfig lacpPhysicalPort 1
Switch(config-controller-ProvisionLacpPortType)# getLacpPortConfig commit
GetLacpPortConfig_Output.lacpPortConfiguration.portNumber = 1
GetLacpPortConfig_Output.lacpPortConfiguration.lacpEnable = false
GetLacpPortConfig_Output.lacpPortConfiguration.key = 1
GetLacpPortConfig_Output.lacpPortConfiguration.role.t = 1
GetLacpPortConfig_Output.lacpPortConfiguration.role.u.active = true
GetLacpPortConfig_Output.lacpPortConfiguration.portPriority = 32768
GetLacpPortConfig_Output.lacpPortConfiguration.timeout.t = 1
GetLacpPortConfig_Output.lacpPortConfiguration.timeout.u.fast = true

GetLacpPortConfig Commit Success!!!
Switch(config-controller-ProvisionLacpPortType)# exit
```

## Viewing the Default LACP Configuration at Port Level on the controller

### Before You Begin

- Perform the steps to provision LACP on the controller . See [Provisioning the Controller to Configure LACP, on page 179](#).

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<pre><b>getLacpPortDefaults {commit   flush   lacpPhysicalPort port_num   review}</b></pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# <b>getLacpPortDefaults ?</b>   commit          commit getLacpPortDefaults   flush           flush all getLacpPortDefaults commands from queue lacpPhysicalPort Get LACP port default configuration request review           review getLacpPortDefaults commands Switch(config-controller-ProvisionLacpPortType)# <b>getLacpPortDefaults lacpPhysicalPort 1</b></pre>	<p>Retrieve the LACP configuration at port.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the LACP configuration to NID.</li> <li>• <b>flush</b>—Flushes all LACP configuration from the queue.</li> <li>• <b>lacpPhysicalPort port_num</b>—Retrieves the default LACP configuration for specified port on the controller . The valid values are 1 to 6.</li> <li>• <b>review</b>—Displays the configuration on the controller .</li> </ul>
<b>Step 2</b>	<pre><b>getLacpPortDefaults review</b></pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# <b>getLacpPortDefaults review</b></pre>	<p>Displays the LACP configuration on the controller .</p>



	Command or Action	Purpose
	Commands in queue: getLacpPortDefaults lacpPhysicalPort 1	
<b>Step 3</b>	<b>getLacpPortDefaults commit</b>  <b>Example:</b>  Switch(config-controller-ProvisionLacpPortType) # <b>getLacpPortDefaults commit</b>	Sends the LACP configuration to the NID.
<b>Step 4</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionLacpPortType) # <b>exit</b>	Exits the LACP provisioning mode.

### Configuration Example

The example retrieves the default LACP configuration for port 1 on the controller :

```
Switch(config-controller-ProvisionLacpPortType) # getLacpPortDefaults lacpPhysicalPort 1
Switch(config-controller-ProvisionLacpPortType) # getLacpPortDefaults review
Commands in queue:
  getLacpPortDefaults lacpPhysicalPort 1
Switch(config-controller-ProvisionLacpPortType) # getLacpPortDefaults commit
GetLacpPortDefaults_Output.lacpPortConfiguration.portNumber = 1
GetLacpPortDefaults_Output.lacpPortConfiguration.lacpEnable = false
GetLacpPortDefaults_Output.lacpPortConfiguration.key = 0
GetLacpPortDefaults_Output.lacpPortConfiguration.role.t = 1
GetLacpPortDefaults_Output.lacpPortConfiguration.role.u.active = true
GetLacpPortDefaults_Output.lacpPortConfiguration.portPriority = 32768
GetLacpPortDefaults_Output.lacpPortConfiguration.timeout.t = 1
GetLacpPortDefaults_Output.lacpPortConfiguration.timeout.u.fast = true

GetLacpPortDefaults Commit Success!!!
Switch(config-controller-ProvisionLacpPortType) # exit
```



#### Note

NOTE: You must explicitly configure a key value. The default value for key retrieved is 0 until it is set to a value using the setLacpPortConfig operation.

## Verifying LACP

### Viewing the LACP System ID Information on the controller

#### Before You Begin

- Perform the steps to provision LACP on the controller . See [Provisioning the Controller to Configure LACP](#), on page 179.

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>showLacpSysId {commit   flush   showLacpSysIdRequest   review}</b>  <b>Example:</b>  <pre>Switch(config-controller-ProvisionLacpPortType)# showLacpSysId ?   commit                commit showLacpSysId   flush                 flush all showLacpSysId commands   from queue   review                review showLacpSysId commands   showLacpSysIdRequest Show LACP system-id request Switch(config-controller-ProvisionLacpPortType)# showLacpSysId showLacpSysIdRequest</pre>	Displays the LACP system ID information. <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the LACP configuration to NID.</li> <li>• <b>flush</b>—Flushes all LACP configuration from the queue.</li> <li>• <b>showLacpSysIdRequest</b>—Displays the LACP system ID information on the controller .</li> <li>• <b>review</b>—Displays the configuration on the controller .</li> </ul>
<b>Step 2</b>	<b>showLacpSysId review</b>  <b>Example:</b>  <pre>Switch(config-controller-ProvisionLacpPortType)# showLacpSysId review Commands in queue:   showLacpSysId showLacpSysIdRequest   showLacpSysId showLacpSysIdRequest</pre>	Displays the LACP configuration on the controller .
<b>Step 3</b>	<b>showLacpSysId commit</b>  <b>Example:</b>  <pre>Switch(config-controller-ProvisionLacpPortType)# showLacpAggLB commit</pre>	Sends the LACP configuration to the NID.
<b>Step 4</b>	<b>exit</b>  <b>Example:</b>  <pre>Switch(config-controller-ProvisionLacpPortType)# exit</pre>	Exits the LACP provisioning mode.

## Configuration Example

The example displays the LACP system ID information on the controller :

```
Switch(config-controller-ProvisionLacpPortType)# showLacpSysId showLacpSysIdRequest
Commands in queue:
  showLacpSysId showLacpSysIdRequest
  showLacpSysId showLacpSysIdRequest
Switch(config-controller-ProvisionLacpPortType)# showLacpSysId commit
ShowLacpSysId_Output.showLacpSysIdResponse.systemId = 'b8-38-61-68-7b-bc'
ShowLacpSysId_Output.showLacpSysIdResponse.systemPriority = 32768

ShowLacpSysId Commit Success!!!
Switch(config-controller-ProvisionLacpPortType)# exit
```

## Viewing the LACP Load Balance Information on the controller

### Before You Begin

- Perform the steps to provision LACP on the controller . See [Provisioning the Controller to Configure LACP, on page 179](#).

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<p><b>showLacpAggLB {commit   flush   showLacpAggLBRequest   review}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType) # showLacpAggLB ?   commit                commit showLacpAggLB   flush                 flush all showLacpAggLB commands                         from queue   review                review showLacpAggLB commands   showLacpAggLBRequest Show LACP load balance request Switch(config-controller-ProvisionLacpPortType) # showLacpAggLB showLacpAggLBRequest</pre>	<p>Displays LACP load balance information.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the LACP configuration to NID.</li> <li>• <b>flush</b>—Flushes all LACP configuration from the queue.</li> <li>• <b>showLacpAggLBRequest</b>—Displays the LACP load balance information on the controller .</li> <li>• <b>review</b>—Displays the configuration on the controller .</li> </ul>
<b>Step 2</b>	<p><b>showLacpAggLB review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType) # showLacpAggLB review Commands in queue:   showLacpAggLB showLacpAggLBRequest</pre>	<p>Displays the LACP configuration on the controller .</p>
<b>Step 3</b>	<p><b>showLacpAggLB commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType) # showLacpAggLB commit</pre>	<p>Sends the LACP configuration to the NID.</p>
<b>Step 4</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType) # exit</pre>	<p>Exits the LACP provisioning mode.</p>

### Configuration Example

The example displays the LACP load balance information on the controller :

```
Switch(config-controller-ProvisionLacpPortType) # showLacpAggLB showLacpAggLBRequest
```

```

Switch(config-controller-ProvisionLacpPortType)# showLacpAggLB review
Commands in queue:
    showLacpAggLB showLacpAggLBRequest
Switch(config-controller-ProvisionLacpPortType)# showLacpAggLB commit
ShowLacpAggLB_Output.lacpAggLBMode.smac_enable = true
ShowLacpAggLB_Output.lacpAggLBMode.dmac_enable = false
ShowLacpAggLB_Output.lacpAggLBMode.ip_enable = true
ShowLacpAggLB_Output.lacpAggLBMode.port_enable = true

ShowLacpAggLB Commit Success!!!
Switch(config-controller-ProvisionLacpPortType)# exit

```

## Viewing the LACP Internal State Information on the controller

### Before You Begin

- Perform the steps to provision LACP on the controller . See [Provisioning the Controller to Configure LACP, on page 179](#).

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>showLacpInternal</b> {<b>commit</b>   <b>flush</b>   <b>lacpPhysicalPort</b> <i>port_num</i>   <b>review</b>}</p> <p><b>Example:</b></p> <pre> Switch(config-controller-ProvisionLacpPortType)# showLacpInternal ? commit          commit showLacpInternal flush           flush all showLacpInternal commands from queue lacpPhysicalPort Show LACP internal request review          review showLacpInternal commands Switch(config-controller-ProvisionLacpPortType)# showLacpInternal lacpPhysicalPort 2 </pre>	<p>Displays LACP internal state information.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the LACP configuration to NID.</li> <li>• <b>flush</b>—Flushes all LACP configuration from the queue.</li> <li>• <b>lacpPhysicalPort</b><i>port_num</i>—Displays the LACP internal state information for specified port on the controller .</li> <li>• <b>review</b>—Displays the configuration on the controller .</li> </ul>
Step 2	<p><b>showLacpInternal review</b></p> <p><b>Example:</b></p> <pre> Switch(config-controller-ProvisionLacpPortType)# showLacpInternal review Commands in queue:     showLacpNeighbors lacpPhysicalPort 1     showLacpInternal lacpPhysicalPort 1 </pre>	<p>Displays the LACP configuration on the controller .</p>
Step 3	<p><b>showLacpInternal commit</b></p> <p><b>Example:</b></p> <pre> Switch(config-controller-ProvisionLacpPortType)# showLacpInternal commit </pre>	<p>Sends the LACP configuration to the NID.</p>

	Command or Action	Purpose
Step 4	<p><b>exit</b></p> <p><b>Example:</b> Switch(config-controller-ProvisionLacpPortType) # <b>exit</b></p>	Exits the LACP provisioning mode.

**Configuration Example**

The example displays the LACP internal state information on the controller :

```
Switch(config-controller-ProvisionLacpPortType) # showLacpInternal lacpPhysicalPort 2
Switch(config-controller-ProvisionLacpPortType) # showLacpInternal review
Commands in queue:
    showLacpNeighbors lacpPhysicalPort 1
    showLacpInternal lacpPhysicalPort 1
Switch(config-controller-ProvisionLacpPortType) # showLacpInternal commit
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[0].portNumber =1
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[0].mode = false
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[0].key = 0
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[0].role = true
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[0].timeout = 1
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[0].portPriority= 32768
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[0].adminKey = 0
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[0].operKey = 3
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[0].collectorMaxDelay = 0
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[1].portNumber =2
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[1].mode = false
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[1].key = 0
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[1].role = true
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[1].timeout = 1
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[1].portPriority= 26733
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[1].adminKey = 0
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[1].operKey = 1
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[1].collectorMaxDelay = 0
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[2].portNumber =3
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[2].mode = false
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[2].key = 0
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[2].role = true
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[2].timeout = 1
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[2].portPriority= 32768
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[2].adminKey = 0
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[2].operKey = 1
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[2].collectorMaxDelay = 0
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[3].portNumber =4
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[3].mode = false
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[3].key = 0
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[3].role = true
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[3].timeout = 1
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[3].portPriority= 32768
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[3].adminKey = 0
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[3].operKey = 1
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[3].collectorMaxDelay = 0
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[4].portNumber =5
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[4].mode = false
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[4].key = 0
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[4].role = true
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[4].timeout = 1
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[4].portPriority= 32768
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[4].adminKey = 0
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[4].operKey = 1
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[4].collectorMaxDelay = 0
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[5].portNumber =6
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[5].mode = false
```

```

ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[5].key = 0
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[5].role = true
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[5].timeout = 1
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[5].portPriority= 32768
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[5].adminKey = 0
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[5].operKey = 1
ShowLacpInternal_Output.lacpPortInternals.lacpPortInternalslist[5].collectorMaxDelay = 0

ShowLacpInternal Commit Success!!!
Switch(config-controller-ProvisionLacpPortType)# exit

```

## Viewing the LACP Neighbors Status Information on the controller

### Before You Begin

- Perform the steps to provision LACP on the controller . See [Provisioning the Controller to Configure LACP](#), on page 179.

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<p><b>showLacpNeighbors</b> {<b>commit</b>   <b>flush</b>   <b>lacpPhysicalPort</b> <i>port_num</i>   <b>review</b>}</p> <p><b>Example:</b></p> <pre> Switch(config-controller-ProvisionLacpPortType)# <b>showLacpNeighbors ?</b>   commit          commit showLacpNeighbors   flush           flush all showLacpNeighbors commands                   from queue   lacpPhysicalPort Show LACP neighbor status request   review          review showLacpNeighbors commands Switch(config-controller-ProvisionLacpPortType)# <b>showLacpNeighbors lacpPhysicalPort 2</b> </pre>	<p>Displays LACP neighbor state information.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the LACP configuration to NID.</li> <li>• <b>flush</b>—Flushes all LACP configuration from the queue.</li> <li>• <b>lacpPhysicalPort</b> <i>port_num</i>—Displays the LACP neighbors information for specified port on the controller .</li> <li>• <b>review</b>—Displays the configuration on the controller .</li> </ul>
<b>Step 2</b>	<p><b>showLacpNeighbors review</b></p> <p><b>Example:</b></p> <pre> Switch(config-controller-ProvisionLacpPortType)# <b>showLacpNeighbors review</b> Commands in queue:   showLacpNeighbors lacpPhysicalPort 2 </pre>	<p>Displays the LACP configuration on the controller .</p>
<b>Step 3</b>	<p><b>showLacpNeighbors commit</b></p> <p><b>Example:</b></p> <pre> Switch(config-controller-ProvisionLacpPortType)# <b>showLacpNeighbors commit</b> </pre>	<p>Sends the LACP configuration to the NID.</p>

	Command or Action	Purpose
Step 4	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionLacpPortType) # <b>exit</b>	Exits the LACP provisioning mode.

### Configuration Example

The example displays the LACP neighbors status information on the controller :

```
Switch(config-controller-ProvisionLacpPortType) # showLacpNeighbors lacpPhysicalPort 2
Switch(config-controller-ProvisionLacpPortType) # showLacpNeighbors review
Commands in queue:
  showLacpNeighbors lacpPhysicalPort 2
Switch(config-controller-ProvisionLacpPortType) # showLacpNeighbors commit
ShowLacpNeighbors_Output.lacpNeighborStatus.lacpNeighborStatusList[0].aggrID = 1
ShowLacpNeighbors_Output.lacpNeighborStatus.lacpNeighborStatusList[0].partnerSysId =
'00-3a-99-fd-4a-44'
ShowLacpNeighbors_Output.lacpNeighborStatus.lacpNeighborStatusList[0].partnerPort = 3
ShowLacpNeighbors_Output.lacpNeighborStatus.lacpNeighborStatusList[0].partnerPortPriority
= 32768
ShowLacpNeighbors_Output.lacpNeighborStatus.lacpNeighborStatusList[0].partnerSysPriority =
32768
ShowLacpNeighbors_Output.lacpNeighborStatus.lacpNeighborStatusList[0].partnerOperKey = 3
ShowLacpNeighbors_Output.lacpNeighborStatus.lacpNeighborStatusList[0].aggrProtocolType =
'LACP'
ShowLacpNeighbors_Output.lacpNeighborStatus.lacpNeighborStatusList[0].bandwidth = 0
ShowLacpNeighbors_Output.lacpNeighborStatus.lacpNeighborStatusList[0].aggrMacAddr =
'00-3a-99-fd-4a-3b'
ShowLacpNeighbors_Output.lacpNeighborStatus.lacpNeighborStatusList[1].aggrID = 1
ShowLacpNeighbors_Output.lacpNeighborStatus.lacpNeighborStatusList[1].partnerSysId =
'00-3a-99-fd-4a-44'
ShowLacpNeighbors_Output.lacpNeighborStatus.lacpNeighborStatusList[1].partnerPort = 6
ShowLacpNeighbors_Output.lacpNeighborStatus.lacpNeighborStatusList[1].partnerPortPriority
= 32768
ShowLacpNeighbors_Output.lacpNeighborStatus.lacpNeighborStatusList[1].partnerSysPriority =
32768
ShowLacpNeighbors_Output.lacpNeighborStatus.lacpNeighborStatusList[1].partnerOperKey = 3
ShowLacpNeighbors_Output.lacpNeighborStatus.lacpNeighborStatusList[1].aggrProtocolType =
'LACP'
ShowLacpNeighbors_Output.lacpNeighborStatus.lacpNeighborStatusList[1].bandwidth = 0
ShowLacpNeighbors_Output.lacpNeighborStatus.lacpNeighborStatusList[1].aggrMacAddr =
'00-3a-99-fd-4a-3e'

ShowLacpNeighbors Commit Success!!!
Switch(config-controller-ProvisionLacpPortType) # exit
```

## Viewing the LACP Statistics on the controller

### Before You Begin

- Perform the steps to provision LACP on the controller . See [Provisioning the Controller to Configure LACP](#), on page 179.

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>showLacpStats</b> {<b>commit</b>   <b>flush</b>   <b>lacpPhysicalPort</b> <i>port_num</i>   <b>review</b>}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# showLacpStats ?   commit           commit showLacpStats   flush            flush all showLacpStats commands from                   queue   lacpPhysicalPort Show LACP statistics request   review           review showLacpStats commands Switch(config-controller-ProvisionLacpPortType)# showLacpStats lacpPhysicalPort 2</pre>	<p>Displays the LACP statistics.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the LACP configuration.</li> <li>• <b>flush</b>—Flushes all LACP configuration from the queue.</li> <li>• <b>lacpPhysicalPort</b><i>port_num</i>—Displays the LACP statistics for specified port on the controller .</li> <li>• <b>review</b>—Displays the configuration on the controller .</li> </ul>
Step 2	<p><b>showLacpStats review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# showLacpStats review Commands in queue:   showLacpStats lacpPhysicalPort 1   showLacpStats lacpPhysicalPort 2</pre>	<p>Displays the LACP configuration on the controller .</p>
Step 3	<p><b>showLacpStats commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# showLacpStats commit</pre>	<p>Sends the LACP configuration to the NID.</p>
Step 4	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# exit</pre>	<p>Exits the LACP provisioning mode.</p>

## Configuration Example

The example displays the LACP statistics on the controller :

```
Switch(config-controller-ProvisionLacpPortType)# showLacpStats lacpPhysicalPort 2
Switch(config-controller-ProvisionLacpPortType)# showLacpStats review
Commands in queue:
  showLacpStats lacpPhysicalPort 1
  showLacpStats lacpPhysicalPort 2
Switch(config-controller-ProvisionLacpPortType)# showLacpStats commit
ShowLacpStats_Output.lacpPortStatistics.lacpPortStatsList[0].rxUnknown = 0
ShowLacpStats_Output.lacpPortStatistics.lacpPortStatsList[0].port = 3
ShowLacpStats_Output.lacpPortStatistics.lacpPortStatsList[0].rxFrames = 17866
ShowLacpStats_Output.lacpPortStatistics.lacpPortStatsList[0].txFrames = 12527
ShowLacpStats_Output.lacpPortStatistics.lacpPortStatsList[0].rxIllegal = 0
ShowLacpStats_Output.lacpPortStatistics.lacpPortStatsList[1].rxUnknown = 0
ShowLacpStats_Output.lacpPortStatistics.lacpPortStatsList[1].port = 6
```



```
ShowLacpStats_Output.lacpPortStatistics.lacpPortStatsList[1].rxFrames = 17244
ShowLacpStats_Output.lacpPortStatistics.lacpPortStatsList[1].txFrames = 12132
ShowLacpStats_Output.lacpPortStatistics.lacpPortStatsList[1].rxIllegal = 0

ShowLacpStats Commit Success!!!
Switch(config-controller-ProvisionLacpPortType)# exit
```





# Provisioning Link Layer Discovery Protocol

The Cisco Discovery Protocol (CDP) is a device discovery protocol that runs over Layer 2 (the data link layer) on all Cisco-manufactured devices (routers, bridges, access servers, and switches). CDP allows network management applications to automatically discover and learn about other Cisco devices connected to the network.

To support non-Cisco devices and to allow for interoperability between other devices, the switch supports the IEEE 802.1AB Link Layer Discovery Protocol (LLDP). LLDP is a neighbor discovery protocol that is used for network devices to advertise information about themselves to other devices on the network. This protocol runs over the data link layer, which allows two systems running different network layer protocols to learn about each other.

LLDP supports a set of attributes that it uses to discover neighbor devices. These attributes contain type, length, and value descriptions and are referred to as TLVs. LLDP supported devices can use TLVs to receive and send information to their neighbors. Details such as configuration information, device capabilities, and device identity can be advertised using this protocol.

By default, LLDP is disabled globally and on interfaces.

The switch supports these basic management TLVs. These are mandatory LLDP TLVs.

- Port description TLV
- System name TLV
- System description
- System capabilities TLV
- Management address TLV

These organizationally-specific LLDP TLVs are also advertised to support LLDP-MED.

- Port VLAN ID TLV (IEEE 802.1 organizationally specific TLVs)
- MAC/PHY configuration/status TLV (IEEE 802.3 organizationally specific TLVs)
- [How To Configure LLDP, page 204](#)
- [Other Commands For LLDP Configuration, page 210](#)

# How To Configure LLDP

## Setting LLDP Global Configuration

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>configure terminal</b></p> <p><b>Example:</b> Switch# configure terminal</p>	Enters global configuration mode.
Step 2	<p><b>controller nid 1/NID_ID</b></p> <p><b>Example:</b> Switch(config)# controller nid 1/1</p>	Enters the controller configuration mode.
Step 3	<p><b>ProvisionLldpPortType</b></p> <p><b>Example:</b> Switch(config-controller)# ProvisionLldpPortType</p>	Enters the ProvisionLldpPortType mode.
Step 4	<p><b>setLldpConfig lldpGlobalConfiguration {global_state {enable   disable}   hold_time lldp_hold_time   lldp_transmission_delay value   reinit_delay tx_reinit_value timer tx_value   tlv_select {mgmt_address   port_description   system_capabilities   system_description   system_name}</b></p> <p><b>Example:</b> Switch(config-controller-ProvisionLldpPortType)# setLldpConfig lldpGlobalConfiguration global_state enable Switch(config-controller-ProvisionLldpPortType)# setLldpConfig lldpGlobalConfiguration hold_time 5 Switch(config-controller-ProvisionLldpPortType)# setLldpConfig lldpGlobalConfiguration lldp_transmission_delay 10 Switch(config-controller-ProvisionLldpPortType)# setLldpConfig lldpGlobalConfiguration timer 10 Switch(config-controller-ProvisionLldpPortType)# setLldpConfig lldpGlobalConfiguration reinit_delay 10 Switch(config-controller-ProvisionLldpPortType)# setLldpConfig lldpGlobalConfiguration tlv_select system_description enable Switch(config-controller-ProvisionLldpPortType)# setLldpConfig lldpGlobalConfiguration tlv_select port_description enable Switch(config-controller-ProvisionLldpPortType)# setLldpConfig lldpGlobalConfiguration tlv_select management_address enable Switch(config-controller-ProvisionLldpPortType)# setLldpConfig lldpGlobalConfiguration tlv_select system_capabilities enable Switch(config-controller-ProvisionLldpPortType)# setLldpConfig lldpGlobalConfiguration tlv_select system_name enable</p>	<p>Sets the LLDP global configuration.</p> <ul style="list-style-type: none"> <li>• <b>global_state</b>—LLDP global state. This state is either <i>enabled</i> or <i>disabled</i>.</li> <li>• <b>hold_time</b>—LLDP hold time before discarding the configuration. The valid values are from 2 to 10 seconds. The default value is 4 seconds.</li> <li>• <b>lldp_transmission_delay</b>—LLD Transmission delay value. The valid values are from 1 to 8192. The default value is 2 seconds.</li> <li>• <b>reinit_delay</b>—LLDP transmission re-initialization delay. The valid values are from 1 to 10 seconds. The default value is 2 seconds.</li> <li>• <b>timer</b>—Time between each LLDP frame transmitted in seconds. The valid values are from 5 to 32768. The default value is 30 seconds.</li> <li>• <b>tlv_select</b>—Transmission TLV.</li> </ul>

	Command or Action	Purpose
Step 5	<b>setLldpConfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionLldpPortType)# setLldpConfig review	Reviews the setLldpConfig.
Step 6	<b>setLldpConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionLldpPortType)# setLldpConfig commit	Sends the setLldpConfig configuration to the Cisco ME 1200 NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionLldpPortType)# exit Switch(config-controller)#	Exits to the config-controller mode.

### What to Do Next

After the configuration is sent to the Cisco ME 1200 NID, use the following **get** command to view the setLldpConfig configuration.

```
Switch(config-controller-ProvisionLldpPortType)# getLldpConfig getLldpConfigRequest
Switch(config-controller-ProvisionLldpPortType)# getLldpConfig review
```

Commands in queue:

```
getLldpConfig getLldpConfigRequest
```

```
Switch(config-controller-ProvisionLldpPortType)# getLldpConfig commit
```

```
GetLldpConfig_Output.lldpGlobalConfiguration.global_state = true
GetLldpConfig_Output.lldpGlobalConfiguration.hold_time = 5
GetLldpConfig_Output.lldpGlobalConfiguration.timer = 10
GetLldpConfig_Output.lldpGlobalConfiguration.tlv_select.system_name =
true
GetLldpConfig_Output.lldpGlobalConfiguration.tlv_select.system_description
= true
GetLldpConfig_Output.lldpGlobalConfiguration.tlv_select.port_description
= true
GetLldpConfig_Output.lldpGlobalConfiguration.tlv_select.management_address
= true
GetLldpConfig_Output.lldpGlobalConfiguration.tlv_select.system_capabilities
= true
GetLldpConfig_Output.lldpGlobalConfiguration.reinit_delay = 10
GetLldpConfig_Output.lldpGlobalConfiguration.lldp_transmission_delay =
10
```

```
GetLldpConfig Commit Success!!!
```

## Setting LLDP Configuration to Default

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>ProvisionLldpPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionLldpPortType	Enters the ProvisionLldpPortType mode.
Step 4	<b>setLldpDefaults setLldpDefaultsRequest</b>  <b>Example:</b>  Switch(config-controller-ProvisionLldpPortType)# setLldpDefaults setLldpDefaultsRequest	Sets the LLDP configuration to default values.
Step 5	<b>setLldpDefaults commit</b>  <b>Example:</b> Switch(config-controller-ProvisionLldpPortType)# setLldpDefaults commit	Sends the setLldpDefaults configuration to the Cisco ME 1200 NID.
Step 6	<b>exit</b>  <b>Example:</b>  Switch(config-controller-ProvisionLldpPortType)# exit Switch(config-controller)#	Exits to the config-controller mode.

### What to Do Next

After the configuration is sent to the Cisco ME 1200 NID, use the following **get** command to view the setLldpDefaults configuration.

```
Switch(config-controller-ProvisionLldpPortType)# getLldpDefaults getLldpDefaultsRequest
Switch(config-controller-ProvisionLldpPortType)# getLldpDefaults review
```

Commands in queue:

```
getLldpDefaults getLldpDefaultsRequest
```

```
Switch(config-controller-ProvisionLldpPortType)# getLldpDefaults commit
```

```

GetLldpDefaults_Output.lldpGlobalConfiguration.global_state = true
GetLldpDefaults_Output.lldpGlobalConfiguration.hold_time = 5
GetLldpDefaults_Output.lldpGlobalConfiguration.timer = 30
GetLldpDefaults_Output.lldpGlobalConfiguration.tlv_select.system_name =
true
GetLldpDefaults_Output.lldpGlobalConfiguration.tlv_select.system_description
= true
GetLldpDefaults_Output.lldpGlobalConfiguration.tlv_select.port_description
= true
GetLldpDefaults_Output.lldpGlobalConfiguration.tlv_select.management_address
= true
GetLldpDefaults_Output.lldpGlobalConfiguration.tlv_select.system_capabilities
= true
GetLldpDefaults_Output.lldpGlobalConfiguration.reinit_delay = 2
GetLldpDefaults_Output.lldpGlobalConfiguration.lldp_transmission_delay =
10

GetLldpDefaults Commit Success!!!

```

## Setting LLDP Port Configuration

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>ProvisionLldpPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionLldpPortType	Enters the ProvisionLldpPortType mode.
Step 4	<b>setLldpportconfig lldpPortConfiguration {lldp_receive_enable {disable   enable}   lldp_transmit_enable {disable   enable}   port_number port_number}</b>  <b>Example:</b> Switch(config-controller-ProvisionLldpPortType)# setLldpPortConfig lldpPortConfiguration port_number 3 Switch(config-controller-ProvisionLldpPortType)# setLldpPortConfig lldpPortConfiguration lldp_receive_enable disable Switch(config-controller-ProvisionLldpPortType)# setLldpPortConfig lldpPortConfiguration lldp_transmit_enable disable	Sets the LLDP port configuration. <ul style="list-style-type: none"> <li>• <b>lldp_receive_enable</b>—Whether LLDP receive is enabled or disabled.</li> <li>• <b>lldp_transmit_enable</b>—Whether LLDP transmit is enabled or disabled.</li> <li>• <b>port_number</b>—The target interface number. The valid values are from 1 to 6.</li> </ul>

	Command or Action	Purpose
<b>Step 5</b>	<b>setLldpPortConfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionLldpPortType) # setLldpPortConfig review	Reviews the setLldpPortConfig.
<b>Step 6</b>	<b>setLldpPortConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionLldpPortType) # setLldpConfig commit	Sends the setLldpConfig configuration to the Cisco ME 1200 NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionLldpPortType) # exit Switch(config-controller) #	Exits to the config-controller mode.

### What to Do Next

After the configuration is sent to the Cisco ME 1200 NID, use the following **get** command to view the setLldpPortConfig configuration.

```
Switch(config-controller-ProvisionLldpPortType) # getLldpportConfig physicalPortNum 3
Switch(config-controller-ProvisionLldpPortType) # getLldpportConfig review
```

Commands in queue:

```
getLldpConfig physicalPortNum 3
```

```
Switch(config-controller-ProvisionLldpPortType) # getLldpportConfig commit
```

```
GetLldpPortConfig_Output.lldpPortConfiguration.port_number = 3
GetLldpPortConfig_Output.lldpPortConfiguration.lldp_transmit_enable =
false
GetLldpPortConfig_Output.lldpPortConfiguration.lldp_receive_enable = false
```

```
GetLldpPortConfig Commit Success!!!
```



## Setting LLDP Port Configuration to Default

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>ProvisionLldpPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionLldpPortType	Enters the ProvisionLldpPortType mode.
Step 4	<b>setlldpportdefaults physicalPortNum port_number</b>  <b>Example:</b> Switch(config-controller-ProvisionLldpPortType)# setlldpportdefaults physicalPortNum 3	Sets the LLDP port configuration to default values.  • <b>physicalPortNum</b> —Port number for which the LLDP configuration is set to default. The valid values are from 1 to 6.
Step 5	<b>setlldpportdefaults commit</b>  <b>Example:</b> Switch(config-controller-ProvisionLldpPortType)# setlldpportdefaults commit	Sends the setlldpportdefaults configuration to the Cisco ME 1200 NID.
Step 6	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionLldpPortType)# exit Switch(config-controller)#	Exits to the config-controller mode.

### What to Do Next

After the configuration is sent to the Cisco ME 1200 NID, use the following **get** command to view the setlldpportdefaults configuration.

```
Switch(config-controller-ProvisionLldpPortType)# getLldpportdefaults physicalPortNum 3
Switch(config-controller-ProvisionLldpPortType)# getLldpportdefaults review
```

```
Commands in queue:
    getLldpportdefaults physicalPortNum 3
```

```
Switch(config-controller-ProvisionLldpPortType)# getLldpportdefaults commit
```

```

GetLldpPortDefaults_Output.lldpPortConfiguration.port_number = 3
GetLldpPortDefaults_Output.lldpPortConfiguration.lldp_transmit_enable =
true
GetLldpPortDefaults_Output.lldpPortConfiguration.lldp_receive_enable =
true

GetLldpPortDefaults Commit Success!!!

```

## Other Commands For LLDP Configuration

### Clearing LLDP Counters

#### clearLldpCounters

```
Switch(config-controller-ProvisionLldpPortType)# clearLldpCounters physicalPortNum 3
```

### Displaying LLDP Neighbors

#### showlldpneighbors physicalPortNum *physical\_port\_number*

```
Switch(config-controller-ProvisionLldpPortType)# showlldpneighbors physicalPortNum 3
Switch(config-controller-ProvisionLldpPortType)# showlldpneighbors commit
```

```

ShowLldpNeighbors_Output.lldpNeighborInformation.local_port_id = 3
ShowLldpNeighbors_Output.lldpNeighborInformation.chassis_id =
'18-9C-5D-A7-F4-1C'
ShowLldpNeighbors_Output.lldpNeighborInformation.remote_port_id = 'Gi0/3'
ShowLldpNeighbors_Output.lldpNeighborInformation.remote_port_description
= 'GigabitEthernet0/3'
ShowLldpNeighbors_Output.lldpNeighborInformation.remote_system_name =
'IRF-Whales-1'
ShowLldpNeighbors_Output.lldpNeighborInformation.remote_system_capabilities
= 'Bridge(+), Router(+)'
ShowLldpNeighbors_Output.lldpNeighborInformation.remote_system_description
= 'Cisco IOS Software, ME360x Software (ME360x-UNIVERSAL-M), Version
15.4(2)SN, RELEASE SOFTWARE (fc1)
Technical Support: http://www.cisco.com/techsupport
Copyright (c) 1986-2014 by Cisco Systems, Inc.
Compiled Fri 21-Mar-14 09:12 by prod_rel_team'
ShowLldpNeighbors_Output.lldpNeighborInformation.remote_management_IP =
'7.3.9.13 (IPv4)'
ShowLldpNeighbors_Output.lldpNeighborInformation.remote_management_IPv6
= ''

ShowLldpNeighbors Commit Success!!!

```

### Displaying LLDP Statistics

#### showlldpstatistics physicalPortNum *physical\_port\_number*

```
Switch(config-controller-ProvisionLldpPortType)# showlldpstatistics physicalPortNum 3
Switch(config-controller-ProvisionLldpPortType)# showlldpstatistics commit
```

```

ShowLldpStatistics_Output.lldpPortStatistics.global_counters.total_neighbor_entries_added
= 1
ShowLldpStatistics_Output.lldpPortStatistics.local_counters.Tx_Frames =
17
ShowLldpStatistics_Output.lldpPortStatistics.local_counters.Rx_Frames =
0

```

```
ShowLldpStatistics_Output.lldpPortStatistics.local_counters.Rx_Errors =  
0  
ShowLldpStatistics_Output.lldpPortStatistics.local_counters.Rx_Frames_Discarded  
= 0  
ShowLldpStatistics_Output.lldpPortStatistics.local_counters.TLVs_Discarded  
= 0  
ShowLldpStatistics_Output.lldpPortStatistics.local_counters.TLVs_Unrecognized  
= 0  
ShowLldpStatistics_Output.lldpPortStatistics.local_counters.Org_Discarded  
= 0  
ShowLldpStatistics_Output.lldpPortStatistics.local_counters.Age_Outs = 0  
ShowLldpStatistics Commit Success!!!
```





## Configuring SNMP

---

This document describes the Simple Network Management Protocol (SNMP) feature and configuration steps to implement network management using SNMP.

- [Prerequisites for Configuring SNMP, page 213](#)
- [Information About SNMP, page 213](#)
- [How to Provision SNMP, page 214](#)

### Prerequisites for Configuring SNMP

- NID must be added to the controller.
- NID must be accessible from the controller.

### Information About SNMP

SNMP is an application layer protocol that facilitates the exchange of management information among network devices, such as nodes and routers. It comprises part of the TCP/IP suite. System administrators can remotely manage network performance, find and solve network problems, and plan for network growth by using SNMP.

# How to Provision SNMP

## Configuring and Retrieving Default SNMP Configurations

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionSnmpConf</b>  <b>Example:</b> Switch(config-controller)# ProvisionSnmpConf	Enters the ProvisionSnmpConf mode.
<b>Step 4</b>	<b>setSnmpDefaultConf setSnmpDefaultConfigRequest request_id</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf)# setSnmpDefaultConf setSnmpDefaultConfigRequest 1	Configures SNMP default configuration status. <ul style="list-style-type: none"> <li>• <b>setSnmpDefaultConfigRequest</b>—Specifies SNMP default configuration.</li> <li>• <b>request_id</b>—Request ID. The default value is 1.</li> </ul>
<b>Step 5</b>	<b>getSnmpDefaultConf getSnmpDefaultConfRequest</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf)# getSnmpDefaultConf getSnmpDefaultConfRequest	Retrieves SNMP default configuration status. <ul style="list-style-type: none"> <li>• <b>getSnmpDefaultConfRequest</b>—Retrieves SNMP default configuration.</li> </ul>
<b>Step 6</b>	<b>getSnmpDefaultConf review</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf)# getSnmpDefaultConf review	Displays the configuration.
<b>Step 7</b>	<b>getSnmpDefaultConf commit</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf)# getSnmpDefaultConf commit	Sends the configuration to NID.

	Command or Action	Purpose
<b>Step 8</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmConf)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to configure and retrieve Default SNMP Configurations:

```
Switch(config-controller-ProvisionSnmConf)# setSnmDefaultConf setSnmDefaultConfigRequest
1
Switch(config-controller-ProvisionSnmConf)# getSnmDefaultConf getSnmDefaultConfRequest

Switch(config-controller-ProvisionSnmConf)# getSnmDefaultConf review
Switch(config-controller-ProvisionSnmConf)# getSnmDefaultConf commit
Switch(config-controller-ProvisionSnmConf)# exit
```

The following is a sample output on the NID.

```
Switch(config-controller-ProvisionSnmConf)#getSnmDefaultConf
getSnmDefaultConfRequest
Switch(config-controller-ProvisionSnmConf)#
Switch(config-controller-ProvisionSnmConf)#getSnmDefaultConf review
Commands in queue:
getSnmDefaultConf getSnmDefaultConfRequest
Switch(config-controller-ProvisionSnmConf)#getSnmDefaultConf commit
GetSnmDefaultConf_Output.getSnmDefaultResponse.trap = false
GetSnmDefaultConf_Output.getSnmDefaultResponse.version = 'v2c'
GetSnmDefaultConf_Output.getSnmDefaultResponse.snmp_server = 'disable'

GetSnmDefaultConf Commit Success!!!
```

## Configuring SNMPv2c Community Parameters

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid <i>1/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.

	Command or Action	Purpose
<b>Step 3</b>	<b>ProvisionSnmpConf</b>  <b>Example:</b> Switch(config-controller)# ProvisionSnmpConf	Enters the ProvisionSnmpConf mode.
<b>Step 4</b>	<b>setSnmpServerConf snmsnp_server_conf { trap {true   false}   version {v1   v2c   v3}   snmp_server {enable   disable}   community_v2c {comm_name comm_name   mode {ro   rw}}}</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf)# setSnmpServerConf snmp_server_conf snmp_server enable Switch(config-controller-ProvisionSnmpConf)# setSnmpServerConf snmp_server_conf version v2c Switch(config-controller-ProvisionSnmpConf)# setSnmpServerConf snmp_server_conf trap true Switch(config-controller-ProvisionSnmpConf)# setSnmpServerConf snmp_server_conf community_v2c comm_name Public Switch(config-controller-ProvisionSnmpConf)# setSnmpServerConf snmp_server_conf community_v2c mode ro	Configures SNMP server. <ul style="list-style-type: none"> <li>• <b>trap</b>—Specifies SNMP traps.</li> <li>• <b>true</b>—Enables SNMP trap.</li> <li>• <b>false</b>—Disables SNMP trap.</li> <li>• <b>version</b>—Specifies SNMP host version.</li> <li>• <b>v1</b>—Specifies SNMP version v1.</li> <li>• <b>v2c</b>—Specifies SNMP version v2c.</li> <li>• <b>v3</b>—Specifies SNMP version v3.</li> <li>• <b>snmp_server</b>—Specifies the SNMP server.</li> <li>• <b>Enable</b>—Enables the SNMP server.</li> <li>• <b>Disable</b>—Disables the SNMP server.</li> <li>• <b>community_v2c</b>—Specifies the v2c community.</li> <li>• <b>comm_name</b>—Specifies the v2c community name.</li> <li>• <b>comm_name</b>—v2c community name.</li> <li>• <b>mode</b>—Specifies read or write mode.</li> <li>• <b>ro</b>—Read mode.</li> <li>• <b>rw</b>—Write mode.</li> </ul>
<b>Step 5</b>	<b>setSnmpServerConf review</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf)# setSnmpServerConf review	Displays the configuration.
<b>Step 6</b>	<b>setSnmpServerConf commit</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf)# setSnmpServerConf commit	Sends the configuration to NID.



	Command or Action	Purpose
<b>Step 7</b>	<b>getSnmpServerConf getSnmpServerConfigRequest</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf) # getSnmpServerConf getSnmpServerConfigRequest	Retrieves SNMP server configuration.
<b>Step 8</b>	<b>getSnmpServerConf review</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf) # getSnmpServerConf review	Displays the configuration.
<b>Step 9</b>	<b>getSnmpServerConf commit</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf) # getSnmpServerConf commit	Sends the configuration to NID.
<b>Step 10</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf) # exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to configure and retrieve SNMPv2c community parameters:

```
Switch(config-controller-ProvisionSnmpConf) # setSnmpServerConf snmp_server_conf snmp_server
enable
Switch(config-controller-ProvisionSnmpConf) # setSnmpServerConf snmp_server_conf version
v2c
Switch(config-controller-ProvisionSnmpConf) # setSnmpServerConf snmp_server_conf trap true
Switch(config-controller-ProvisionSnmpConf) # setSnmpServerConf snmp_server_conf community_v2c
comm_name Public
Switch(config-controller-ProvisionSnmpConf) # setSnmpServerConf snmp_server_conf community_v2c
mode ro
Switch(config-controller-ProvisionSnmpConf) # setSnmpServerConf review
Switch(config-controller-ProvisionSnmpConf) # setSnmpServerConf commit

Switch(config-controller-ProvisionSnmpConf) # getSnmpServerConf getSnmpServerConfigRequest
Switch(config-controller-ProvisionSnmpConf) # getSnmpServerConf review
Switch(config-controller-ProvisionSnmpConf) # getSnmpServerConf commit
Switch(config-controller-ProvisionSnmpConf) # exit
```

The following is a sample output on the NID.

```
Switch(config-controller-ProvisionSnmpConf) #getSnmpServerConf commit
GetSnmpServerConf_Output.snmp_server_conf.trap = true
GetSnmpServerConf_Output.snmp_server_conf.version.t = 2
GetSnmpServerConf_Output.snmp_server_conf.version.u.v2c = 'v2c'
GetSnmpServerConf_Output.snmp_server_conf.snmp_server.t = 1
GetSnmpServerConf_Output.snmp_server_conf.snmp_server.u.enable = 'enabled'
GetSnmpServerConf_Output.snmp_server_conf.community_v2c.comm_name =
'Public'
GetSnmpServerConf_Output.snmp_server_conf.community_v2c.mode.t = 1
GetSnmpServerConf_Output.snmp_server_conf.community_v2c.mode.u.ro = 'RO'
```

```
GetSnmServerConf Commit Success!!!
```

## Configuring SNMPv3 Community

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid <i>I/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionSnmConf</b>  <b>Example:</b> Switch(config-controller)# ProvisionSnmConf	Enters the ProvisionSnmConf mode.
<b>Step 4</b>	<b>setSnmCommunity snmp_community_conf</b> <b>{community-namecommunity_name name   community_ip</b> <b>ip_address   community_mask mask}</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmConf) # setSnmCommunity snmp_community_conf community_ip 10.10.10.1 Switch(config-controller-ProvisionSnmConf) # setSnmCommunity snmp_community_conf community_mask 255.255.255.0 Switch(config-controller-ProvisionSnmConf) # setSnmCommunity snmp_community_conf community_name user12	Configures SNMP default configuration status. <ul style="list-style-type: none"> <li>• <b>community_name</b>—Configures SNMP community string.</li> <li>• <b>name</b>—Name of the community.</li> <li>• <b>community_ip</b>—Specifies community IP.</li> <li>• <b>ip_address</b>—IP address.</li> <li>• <b>community_mask</b>—Specifies community mask.</li> <li>• <b>mask</b>—Mask address.</li> </ul>
<b>Step 5</b>	<b>getSnmCommunity getSnmCommunityConfRequest</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmConf) # getSnmCommunity getSnmCommunityConfRequest	Configures SNMP default configuration status. <ul style="list-style-type: none"> <li>• <b>getSnmCommunityConfRequest</b>—Retrieves SNMP configuration information.</li> </ul>
<b>Step 6</b>	<b>getSnmCommunity review</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmConf) # getSnmCommunity review	Displays the configuration.

	Command or Action	Purpose
<b>Step 7</b>	<b>getSnmpCommunity commit</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf)# getSnmpCommunity commit	Sends the configuration to NID.
<b>Step 8</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to configure and retrieve SNMPv3 Community:

```
Switch(config-controller-ProvisionSnmpConf)# setSnmpCommunity snmp_community_conf
community_ip 10.10.10.1
Switch(config-controller-ProvisionSnmpConf)# setSnmpCommunity snmp_community_conf
community_mask 255.255.255.0
Switch(config-controller-ProvisionSnmpConf)# setSnmpCommunity snmp_community_conf
community_name user12
Switch(config-controller-ProvisionSnmpConf)# getSnmpCommunity getSnmpCommunityConfReques

Switch(config-controller-ProvisionSnmpConf)# getSnmpCommunity review
Switch(config-controller-ProvisionSnmpConf)# getSnmpCommunity commit
Switch(config-controller-ProvisionSnmpConf)# exit
```

The following is a sample output on the NID.

```
Switch(config-controller-ProvisionSnmpConf)# $SnmpCommunityConfReques

Switch(config-controller-ProvisionSnmpConf)#
Switch(config-controller-ProvisionSnmpConf)# getSnmpCommunity review
Commands in queue:
getSnmpCommunity getSnmpCommunityConfRequest
Switch(config-controller-ProvisionSnmpConf)#
Switch(config-controller-ProvisionSnmpConf)# getSnmpCommunity com
Switch(config-controller-ProvisionSnmpConf)# getSnmpCommunity commit
GetSnmpCommunity_Output.getSnmpCommunityResponse[0].community_name =
'public'
GetSnmpCommunity_Output.getSnmpCommunityResponse[0].community_ip =
'0.0.0.0'
GetSnmpCommunity_Output.getSnmpCommunityResponse[0].community_mask =
'0.0.0.0'
GetSnmpCommunity_Output.getSnmpCommunityResponse[1].community_name =
'private'
GetSnmpCommunity_Output.getSnmpCommunityResponse[1].community_ip =
'0.0.0.0'
GetSnmpCommunity_Output.getSnmpCommunityResponse[1].community_mask =
'0.0.0.0'
GetSnmpCommunity_Output.getSnmpCommunityResponse[2].community_name =
'user12'
GetSnmpCommunity_Output.getSnmpCommunityResponse[2].community_ip =
'10.10.10.1'
GetSnmpCommunity_Output.getSnmpCommunityResponse[2].community_mask =
```

```
'255.255.255.0'
GetSnmpCommunity Commit Success!!!
```

## Configuring Trap Destination

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionSnmpConf</b>  <b>Example:</b> Switch(config-controller)# ProvisionSnmpConf	Enters the ProvisionSnmpConf mode.
<b>Step 4</b>	<b>setSnmpHost snmp_host_config {host_id host_id   set_trap {enable   disable}   version {v1   v2c   v3} udp_port_no udp_port_no   address {ipv4 ipv4_address   ipv6 ipv6_address}   inform_mode {enable   disable}   inf_retries retry_instances   timeout_inform timeout_inform_value}</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf)# setSnmpHost snmp_host_config address ipv4 10.106.212.248 Switch(config-controller-ProvisionSnmpConf)# setSnmpHost snmp_host_config host_id trap-config Switch(config-controller-ProvisionSnmpConf)# setSnmpHost snmp_host_config inf_retries 255 Switch(config-controller-ProvisionSnmpConf)# setSnmpHost snmp_host_config inform_mode enable Switch(config-controller-ProvisionSnmpConf)# setSnmpHost snmp_host_config set_trap enable Switch(config-controller-ProvisionSnmpConf)# setSnmpHost snmp_host_config timeout_inform 2147 Switch(config-controller-ProvisionSnmpConf)# setSnmpHost snmp_host_config udp_port_no 162 Switch(config-controller-ProvisionSnmpConf)# setSnmpHost snmp_host_config version v2c	Configures SNMP host. <ul style="list-style-type: none"> <li>• <b>host_id</b>—Specifies the host name.</li> <li>• <i>host_id</i>—Host name.</li> <li>• <b>set_trap</b>—Specifies the trap.</li> <li>• <b>enable</b>—Enables the trap.</li> <li>• <b>disable</b>—Disables the trap.</li> <li>• <b>version</b>—Specifies SNMP host version.</li> <li>• <b>v1</b>—Specifies SNMP version v1.</li> <li>• <b>v2c</b>—Specifies SNMP version v2c.</li> <li>• <b>v3</b>—Specifies SNMP version v3.</li> <li>• <b>udp_port_no</b>—Specifies the host port number.</li> <li>• <i>udp_port_no</i>—Host port number.</li> <li>• <b>address</b>—Specifies the IP address.</li> <li>• <b>ipv4</b>—Specifies IPv4 address.</li> <li>• <i>ipv4_address</i>—IPv4 address.</li> <li>• <b>ipv6</b>—Specifies IPv6 address.</li> <li>• <i>ipv6_address</i>—IPv6 address.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>inform_mode</b>—Specifies inform mode.</li> <li>• <b>enable</b>—Enables inform mode.</li> <li>• <b>disable</b>—Disables inform mode.</li> <li>• <b>inf_retries</b>—Specifies inform retries.</li> <li>• <i>retry_instances</i>—Inform retry number.</li> <li>• <b>timeout_inform</b>—Specifies timeout inform.</li> <li>• <i>timeout_inform_value</i>—Timeout inform value.</li> </ul>
<b>Step 5</b>	<b>setSnmpHost review</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf)# setSnmpHost review	Displays the configuration.
<b>Step 6</b>	<b>setSnmpHost commit</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf)# setSnmpHost commit	Sends the configuration to NID.
<b>Step 7</b>	<b>getSnmpHost getSnmpHostRequest</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf)# getSnmpHost getSnmpHostRequest	Retrieves SNMP host configuration information.
<b>Step 8</b>	<b>getSnmpHost review</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf)# getSnmpHost review	Displays the configuration.
<b>Step 9</b>	<b>getSnmpHost commit</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf)# getSnmpHost commit	Sends the configuration to NID.
<b>Step 10</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to configure and retrieve trap destination:

```
Switch(config-controller-ProvisionSnmpConf)# setSnmpHost snmp_host_config address ipv4
10.106.212.248
```

```

Switch(config-controller-ProvisionSnmpConf)# setSnmpHost snmp_host_config host_id trap-config
Switch(config-controller-ProvisionSnmpConf)# setSnmpHost snmp_host_config inf_retries 255
Switch(config-controller-ProvisionSnmpConf)# setSnmpHost snmp_host_config inform_mode enable
Switch(config-controller-ProvisionSnmpConf)# setSnmpHost snmp_host_config set_trap enable
Switch(config-controller-ProvisionSnmpConf)# setSnmpHost snmp_host_config timeout_inform
2147
Switch(config-controller-ProvisionSnmpConf)# setSnmpHost snmp_host_config udp_port_no 162
Switch(config-controller-ProvisionSnmpConf)# setSnmpHost snmp_host_config version v2c
Switch(config-controller-ProvisionSnmpConf)# setSnmpHost review
Switch(config-controller-ProvisionSnmpConf)# setSnmpHost commit

Switch(config-controller-ProvisionSnmpConf)# getSnmpHost getSnmpHostRequest
Switch(config-controller-ProvisionSnmpConf)# getSnmpHost review
Switch(config-controller-ProvisionSnmpConf)# getSnmpHost commit
Switch(config-controller-ProvisionSnmpConf)# exit

```

## Configuring an Entry in SNMP View List

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid <i>1/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionSnmpConf</b>  <b>Example:</b> Switch(config-controller)# ProvisionSnmpConf	Enters the ProvisionSnmpConf mode.
<b>Step 4</b>	<b>setSnmpView setSnmpViewRequest {view-nameview_name   view_oid oid_value   view_type {included   excluded}}</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf)# setSnmpView setSnmpViewRequest view_type included Switch(config-controller-ProvisionSnmpConf)# setSnmpView setSnmpViewRequest view_oid .1.3.6.1.2.1.31 Switch(config-controller-ProvisionSnmpConf)# setSnmpView setSnmpViewRequest view_name ifMIB	Configures SNMP view. <ul style="list-style-type: none"> <li>• <b>view_name</b>—Specifies view name.</li> <li>• <b>view_oid</b>—Specifies object identifier.</li> <li>• <b>oid_value</b>—Object identifier value.</li> <li>• <b>view_type</b>—Specifies view type.</li> <li>• <b>included</b>—Includes view type.</li> <li>• <b>excluded</b>—Excludes view type.</li> </ul>
<b>Step 5</b>	<b>setSnmpView review</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf)# setSnmpView review	Displays the configuration.

	Command or Action	Purpose
Step 6	<b>setSnmView commit</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmConf) # setSnmView commit	Sends the configuration to NID.
Step 7	<b>getSnmView getSnmViewRequest</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmConf) # getSnmView getSnmViewRequest	Retrieves SNMP default configuration status.  <ul style="list-style-type: none"> <li>• <b>getSnmViewRequest</b>—Retrieves SNMP default configuration.</li> </ul>
Step 8	<b>getSnmView review</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmConf) # getSnmView review	Displays the configuration.
Step 9	<b>getSnmView commit</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmConf) # getSnmView commit	Sends the configuration to NID.
Step 10	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmConf) # exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to configure and retrieve an entry in SNMP view list:

```
Switch(config-controller-ProvisionSnmConf) # setSnmView setSnmViewRequest view_type
included
Switch(config-controller-ProvisionSnmConf) # setSnmView setSnmViewRequest view_oid
.1.3.6.1.2.1.31
Switch(config-controller-ProvisionSnmConf) # setSnmView setSnmViewRequest view_name
ifMIB
Switch(config-controller-ProvisionSnmConf) # setSnmView review
Switch(config-controller-ProvisionSnmConf) # setSnmView commit

Switch(config-controller-ProvisionSnmConf) # getSnmView getSnmViewRequest
Switch(config-controller-ProvisionSnmConf) # getSnmView review
Switch(config-controller-ProvisionSnmConf) # getSnmView commit
Switch(config-controller-ProvisionSnmConf) # exit
```

The following is a sample output on the NID.

```
Switch(config-controller-ProvisionSnmConf) #
Switch(config-controller-ProvisionSnmConf) #getSnmView getSnmViewRequest

Switch(config-controller-ProvisionSnmConf) #getSnmView review
Commands in queue:
getSnmView getSnmViewRequest
Switch(config-controller-ProvisionSnmConf) #getSnmView commit
GetSnmView_Output.getSnmViewResponse[0].view_name = 'ifMIB'
```

```

GetSnmplib_Output.getSnmplibResponse[0].view_oid = '.1.3.6.1.2.1.31'
GetSnmplib_Output.getSnmplibResponse[0].view_type = 'included'
GetSnmplib_Output.getSnmplibResponse[1].view_name = 'default_view'
GetSnmplib_Output.getSnmplibResponse[1].view_oid = '.1'
GetSnmplib_Output.getSnmplibResponse[1].view_type = 'included'

```

## Creating an SNMPv3 User

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid /NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionSnmplib</b>  <b>Example:</b> Switch(config-controller)# ProvisionSnmplib	Enters the ProvisionSnmplib mode.
<b>Step 4</b>	<b>setSnmplibUserConf setSnmplibUsersRequest {user_name user_name   user_engine_id user_engine_id   protocolauth {md5   sha}   protocol_passwd protocol_passwd   privilegedauth {aes   des}   priv_passwd priv_passwd}</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmplib)# setSnmplibUserConf setSnmplibUsersRequest priv_passwd 12345678 Switch(config-controller-ProvisionSnmplib)# setSnmplibUserConf setSnmplibUsersRequest privilegedauth aes Switch(config-controller-ProvisionSnmplib)# setSnmplibUserConf setSnmplibUsersRequest protocol_passwd 12345678 Switch(config-controller-ProvisionSnmplib)# setSnmplibUserConf setSnmplibUsersRequest protocolauth md5 Switch(config-controller-ProvisionSnmplib)# setSnmplibUserConf setSnmplibUsersRequest user_engine_id 800007e5017f000001 Switch(config-controller-ProvisionSnmplib)# setSnmplibUserConf setSnmplibUsersRequest user_name user1	Configures an SNMP user. <ul style="list-style-type: none"> <li>• <b>user_name</b>—Specifies user name.</li> <li>• <i>user_name</i>—User name.</li> <li>• <b>user_engine_id</b>—Specifies user engine ID.</li> <li>• <i>user_engine_id</i>—User engine ID.</li> <li>• <b>protocolauth</b>—Specifies authentication protocol.</li> <li>• <b>md5</b>—Specifies MD5 authentication protocol.</li> <li>• <b>sha</b>—Specifies SHA authentication protocol.</li> <li>• <b>protocol_passwd</b>—Specifies protocol password.</li> <li>• <i>protocol_passwd</i>—Protocol password.</li> <li>• <b>privilegedauth</b>—Specifies privilege authentication type.</li> <li>• <b>aes</b>—Specifies AES authentication.</li> <li>• <b>des</b>—Specifies DES authentication.</li> <li>• <b>priv_passwd</b>—Specifies privacy password.</li> </ul>



	Command or Action	Purpose
		• <i>priv_passwd</i> —Privacy password.
<b>Step 5</b>	<b>setSnmpUserConf review</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf) # setSnmpUserConf review	Displays the configuration.
<b>Step 6</b>	<b>setSnmpUserConf commit</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf) # setSnmpUserConf commit	Sends the configuration to NID.
<b>Step 7</b>	<b>getSnmpUserConf getSnmpUserConfRequest</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf) # getSnmpUserConf getSnmpUserConfRequest	Retrieves SNMP user configuration.
<b>Step 8</b>	<b>getSnmpUserConf review</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf) # getSnmpUserConf review	Displays the configuration.
<b>Step 9</b>	<b>getSnmpUserConf commit</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf) # getSnmpUserConf commit	Sends the configuration to NID.
<b>Step 10</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf) # exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to create and retrieve an SNMPv3 user:

```
Switch(config-controller-ProvisionSnmpConf)# setSnmpUserConf setSnmpUsersRequest priv_passwd
12345678
Switch(config-controller-ProvisionSnmpConf) # setSnmpUserConf setSnmpUsersRequest
privilegeauth aes
Switch(config-controller-ProvisionSnmpConf) # setSnmpUserConf setSnmpUsersRequest
protocol_passwd 12345678
Switch(config-controller-ProvisionSnmpConf) # setSnmpUserConf setSnmpUsersRequest protocolauth
md5
Switch(config-controller-ProvisionSnmpConf) # setSnmpUserConf setSnmpUsersRequest
user_engine_id 800007e5017f000001
Switch(config-controller-ProvisionSnmpConf) # setSnmpUserConf setSnmpUsersRequest user_name
user1
Switch(config-controller-ProvisionSnmpConf) # setSnmpUserConf review
Switch(config-controller-ProvisionSnmpConf) # setSnmpUserConf commit
```

```
Switch(config-controller-ProvisionSnmConf)# getSnmUserConf getSnmUserConfRequest
Switch(config-controller-ProvisionSnmConf)# getSnmUserConf review
Switch(config-controller-ProvisionSnmConf)# getSnmUserConf commit
Switch(config-controller-ProvisionSnmConf)# exit
```

The following is a sample output on the NID.

```
Switch(config-controller-ProvisionSnmConf)# $ getSnmUserConfRequest

Switch(config-controller-ProvisionSnmConf)#getSnmUserConf review
Commands in queue:
getSnmUserConf getSnmUserConfRequest
Switch(config-controller-ProvisionSnmConf)#getSnmUserConf commit
GetSnmUserConf_Output.getSnmUserConfResponse[0].user_name = 'user1'
GetSnmUserConf_Output.getSnmUserConfResponse[0].engine_id =
'800007e5017f000001'
GetSnmUserConf_Output.getSnmUserConfResponse[0].protocol = 'MD5'
GetSnmUserConf_Output.getSnmUserConfResponse[0].priv = 'DES'
GetSnmUserConf_Output.getSnmUserConfResponse[1].user_name =
'default_user'
GetSnmUserConf_Output.getSnmUserConfResponse[1].engine_id =
'800007e5017f000001'
GetSnmUserConf_Output.getSnmUserConfResponse[1].protocol = 'None'
GetSnmUserConf_Output.getSnmUserConfResponse[1].priv = 'None'

GetSnmUserConf Commit Success!!!
```

## Creating an SNMP User

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid <i>1/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionSnmConf</b>  <b>Example:</b> Switch(config-controller)# ProvisionSnmConf	Enters the ProvisionSnmConf mode.
<b>Step 4</b>	<b>setSnmConfig snmp_config {location <i>location_name</i>   contact <i>contact_name</i>   engine_id <i>engine_id</i> }</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmConf)# setSnmConfig snmp_config engine_id 800007e5017f000001 Switch(config-controller-ProvisionSnmConf)# setSnmConfig snmp_config contact user2	Configures an SNMP user. <ul style="list-style-type: none"> <li>• <b>location</b>—Specifies SNMP location.</li> <li>• <i>location_name</i>—SNMP location name.</li> <li>• <b>contact</b>—Specifies SNMP contact.</li> <li>• <i>contact_name</i>—SNMP contact name.</li> </ul>

	Command or Action	Purpose
	Switch(config-controller-ProvisionSnmpConf)# setSnmpConfig snmp_config location Bangalore	<ul style="list-style-type: none"> <li>• <b>engine_id</b>—Specifies engine ID.</li> <li>• <i>engine_id</i>—Engine ID.</li> </ul>
<b>Step 5</b>	<b>setSnmpConfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf)# setSnmpConfig review	Displays the configuration.
<b>Step 6</b>	<b>setSnmpConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf)# setSnmpConfig commit	Sends the configuration to NID.
<b>Step 7</b>	<b>getSnmpConfig getSnmpConfigRequest</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf)# getSnmpConfig getSnmpConfigRequest	Retrieves SNMP user configuration.
<b>Step 8</b>	<b>getSnmpConfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf)# getSnmpConfig review	Displays the configuration.
<b>Step 9</b>	<b>getSnmpConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf)# getSnmpConfig commit	Sends the configuration to NID.
<b>Step 10</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionSnmpConf)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to create and retrieve an SNMP user:

```
Switch(config-controller-ProvisionSnmpConf)# setSnmpUserConf setSnmpUsersRequest priv_passwd
12345678
Switch(config-controller-ProvisionSnmpConf)# setSnmpConfig snmp_config engine_id
800007e5017f000001
Switch(config-controller-ProvisionSnmpConf)# setSnmpConfig snmp_config contact user2
Switch(config-controller-ProvisionSnmpConf)# setSnmpConfig snmp_config location Bangalore
Switch(config-controller-ProvisionSnmpConf)# setSnmpConfig review
Switch(config-controller-ProvisionSnmpConf)# setSnmpConfig commit

Switch(config-controller-ProvisionSnmpConf)# getSnmpConfig getSnmpConfigRequest
Switch(config-controller-ProvisionSnmpConf)# getSnmpConfig review
Switch(config-controller-ProvisionSnmpConf)# getSnmpConfig commit
Switch(config-controller-ProvisionSnmpConf)# exit
```

The following is a sample output on the NID.

```
Switch(config-controller-ProvisionSnmConf) # $getSnmConfRequest
Switch(config-controller-ProvisionSnmConf) # getSnmConf commit
GetSnmConf_Output.getSnmConfResponse.location = 'Bangalore'
GetSnmConf_Output.getSnmConfResponse.contact = 'user2'
GetSnmConf_Output.getSnmConfResponse.engine_id = '800007e5017f000001'
```



## Configuring PTP

---

This document describes the Precision Time Protocol (PTP) feature and configuration steps to implement PTP.

- [Prerequisites for Configuring PTP, page 229](#)
- [Information About PTP, page 229](#)
- [How to Provision PTP, page 229](#)
- [Verifying PTP, page 238](#)
- [Additional References, page 240](#)

### Prerequisites for Configuring PTP

- NID must be added to the controller.
- NID must be accessible from the controller.

### Information About PTP

PTP, as defined in the IEEE 1588 standard, synchronizes with nanosecond accuracy the real-time clocks of the devices in a network. The clocks are organized into a master-member hierarchy. PTP identifies the switch port that is connected to a device with the most precise clock. This clock is referred to as the master clock. All the other devices on the network synchronize their clocks with the master and are referred to as members. Constantly exchanged timing messages ensure continued synchronization.

### How to Provision PTP

#### Configuring Slave IPv4

To configure slave IPv4, unicast, one step on VLAN 7 with domain number 0, perform the following steps:

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>PTPPortType</b>  <b>Example:</b> Switch(config-controller)# PTPPortType	Enters the PTPPortType mode.
Step 4	<b>setPTPclockInstance_v3 ptpClkConfig</b> {clk_inst_domain   clk_slave   clock_enable   <b>clock_instance</b> clock_instance_number  dscp   mode {boundary   e2transparent   master   p2pttransparent   slave}   two_step_flag   one_way   protocol {disable <b>ethernet</b>   unicast_ipv4   multicast_ipv4}  servo   <b>slave-cfg</b>   vlan {disable   vlan_id vlan_id_number}   pcp {disable   pcp_value}   enabled_ports {port1   port2   <b>port3</b>   port4   port5   port6}   filter   ho   identifier   <b>localpriority</b>   priority1   priority2 { profile   disable   <b>g8265dot1</b>   g8275dot1   ieee1588}  clock_domain clock_domain_number}  <b>Example:</b> Switch(config-controller-PTPPortType)# setPTPclockInstance_v3 ptp_clock_config clock_instance 1 Switch(config-controller-PTPPortType)# setPTPclockInstance_v3 ptp_clock_config clock_domain 0 Switch(config-controller-PTPPortType)# setPTPclockInstance_v3 ptp_clock_config clock_enable enable Switch(config-controller-PTPPortType)# setPTPclockInstance_v3 ptp_clock_config mode slave Switch(config-controller-PTPPortType)# setPTPclockInstance_v3 ptp_clock_config one_way disable Switch(config-controller-PTPPortType)# setPTPclockInstance_v3 ptp_clock_config protocol unicast_ipv4 Switch(config-controller-PTPPortType)# setPTPclockInstance_v3 ptp_clock_config two_step_flag disable Switch(config-controller-PTPPortType)# setPTPclockInstance_v3 ptp_clock_config vlan vlan_id 7	Configures slave IPV4, unicast, one step on VLAN 7 with domain number 0. <ul style="list-style-type: none"> <li>• <b>clk_inst_domain</b>—HW based or SW based Clock domain.</li> <li>• <b>clk_slave</b>—Set PTP slave clock options.</li> <li>• <b>clock_enable</b>—Enables or disables clock.</li> <li>• <b>clock_instance</b>— Specifies PTP clock instance.</li> <li>• <b>clock_instance_number</b>— Clock instance number.</li> <li>• <b>dscp</b>— Dscp value.</li> <li>• <b>mode</b>—Specifies clock mode.</li> <li>• <b>boundary</b>—Specifies ordinary boundary clock.</li> <li>• <b>e2transparent</b>— Specifies end to end transparent clock.</li> <li>• <b>master</b>—Specifies master only clock.</li> <li>• <b>p2pttransparent</b>—Specifies peer to peer transparent clock.</li> <li>• <b>slave</b>— Specifies slave only clock.</li> <li>• <b>two_step_flag</b>—Specifies two step flag.</li> <li>• <b>one_way</b>—Specifies one way.</li> <li>• <b>protocol</b>— Specifies the protocol.</li> <li>• <b>servo</b>— Set servo parameters.</li> <li>• <b>slave_cfg</b>— Specifies Unicast Slave configuration Entry.</li> <li>• <b>disable</b>—Disables protocol.</li> <li>• <b>ethernet</b>—Specifies EPS Ethernet protocol.</li> <li>• <b>unicast_ipv4</b>—Specifies unicast protocol.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>multicast_ipv4</b>— Specifies multicast protocol.</li> <li>• <b>vlan</b>—Specifies the VLAN ID.</li> <li>• <b>disable</b>—Disables VLAN tag.</li> <li>• <b>vlan_id</b>— Specifies the VLAN tag.</li> <li>• <i>vlan_id_number</i>— VLAN tag number.</li> <li>• <b>pcp</b>—Specifies VLAN PCP.</li> <li>• <b>disable</b>—Disables VLAN PCP.</li> <li>• <b>pcp_value</b>—Specifies the PCP value.</li> <li>• <b>enabled_ports</b>—Specifies UNI ports.</li> <li>• <b>port1</b>— Specifies physical port 1.</li> <li>• <b>port2</b>—Specifies physical port 2.</li> <li>• <b>port3</b>—Specifies physical port 3.</li> <li>• <b>port4</b>— Specifies physical port 4.</li> <li>• <b>port5</b>—Specifies physical port 5.</li> <li>• <b>port6</b>—Specifies physical port 6.</li> <li>• <b>filter</b>—Specifies filter parameters.</li> <li>• <b>ho</b>— Set PTP Servo holdover parameters.</li> <li>• <b>identifier</b>— Defines PTP clock instance identifier.</li> <li>• <b>localpriority</b>— Set Local priority for the port.</li> <li>• <b>priority1</b>—Specifies clock priority 1 for PTP BMC algorithm, 0 is highest priority.</li> <li>• <b>priority2</b>—Specifies clock priority 2 for PTP BMC algorithm.</li> <li>• <b>profile</b>— Specifies Clock's associated profile.</li> <li>• <b>clock_domain</b>—Specifies PTP domain.</li> <li>• <i>clock_domain_number</i>—PTP domain number.</li> </ul>
<p><b>Step 5</b></p>	<p><b>setPTPclockInstance_v3 review</b></p> <p><b>Example:</b>  <pre>Switch(config-controller-PTPPortType) # setPTPclockInstance_v3 review</pre></p>	<p>Displays the configuration.</p>

	Command or Action	Purpose
<b>Step 6</b>	<b>setPTPclockInstance_v3 commit</b>  <b>Example:</b> Switch(config-controller-PTPPortType)# setPTPclockInstance_v3 commit	Sends the configuration to NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-PTPPortType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to configure slave IPv4, unicast, one step on VLAN 7 with domain number 0:

```
Switch(config-controller-PTPPortType)# setPTPclockInstance_v3 ptp_clock_config clock_instance
1
Switch(config-controller-PTPPortType)# setPTPclockInstance_v3 ptp_clock_config clock_domain
0
Switch(config-controller-PTPPortType)# setPTPclockInstance_v3 ptp_clock_config clock_enable
enable
Switch(config-controller-PTPPortType)# setPTPclockInstance_v3 ptp_clock_config mode slave
Switch(config-controller-PTPPortType)# setPTPclockInstance_v3 ptp_clock_config one_way
disable
Switch(config-controller-PTPPortType)# setPTPclockInstance_v3 ptp_clock_config protocol
unicast_ipv4
Switch(Config-controller-PTPPortType)# setPTPclockInstance_v3 ptp_clock_config two_step_flag
disable
Switch(config-controller-PTPPortType)# setPTPclockInstance_v3 ptp_clock_config vlan vlan_id
7

Switch(config-controller-PTPPortType)# setPTPclockInstance_v3 review
Switch(config-controller-PTPPortType)# setPTPclockInstance_v3 commit
Switch(config-controller-PTPPortType)# exit
```

## Enabling PTP on a Port

To enable PTP on port 1/4 with PTP instance 1, perform the following steps:

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.



	Command or Action	Purpose
Step 3	<p><b>PTPPortType</b></p> <p><b>Example:</b> Switch(config-controller)# PTPPortType</p>	Enters the PTPPortType mode.
Step 4	<p><b>setPTPportProperties ptp_port_conf {ptp_run   clock_inst clock_inst_number   port_id port_id_number   announce_interval {disable   value}   announce_timeout {disable   value}   delay_asymmetry {disable   value}   delay_mechanism {disable   e2e   p2p}   delay_req {disable   interval interval_value}   egress_latency {disable   value}   ingress_latency {disable   value}   internal   sync_interval {disable   value value}}</b></p> <p><b>Example:</b> Switch(config-controller-PTPPortType)# setPTPportProperties ptp_port_conf port_id 4 Switch(config-controller-PTPPortType)# setPTPportProperties ptp_port_conf clock_inst 1 Switch(config-controller-PTPPortType)# setPTPportProperties ptp_port_conf sync_interval value -4 Switch(config-controller-PTPPortType)# setPTPportProperties ptp_port_conf delay_req interval -6 Switch(config-controller-PTPPortType)# setPTPportProperties ptp_port_conf ptp_run enable</p>	<p>Enables PTP on port 1/4, instance: 1.</p> <ul style="list-style-type: none"> <li>• <b>ptp_run</b>—Enables PTP on the specified port.</li> <li>• <b>clock_inst</b>— Specifies the PTP clock number.</li> <li>• <b>clock_inst_number</b>— PTP clock number.</li> <li>• <b>port_id</b>—Specifies the physical port number.</li> <li>• <b>port_id_number</b>—Physical port number.</li> <li>• <b>announce_interval</b>—Specifies the time interval for sending announce messages.</li> <li>• <b>disable</b>— Disables announce interval.</li> <li>• <b>value</b>—Specifies announce interval value.</li> <li>• <b>announce_timeout</b>—Sets announce timeout.</li> <li>• <b>disable</b>— Disables announce timeout.</li> <li>• <b>value</b>—Specifies announce timeout value.</li> <li>• <b>delay_asymmetry</b>—Sets path delay asymmetry.</li> <li>• <b>disable</b>— Disables delay asymmetry.</li> <li>• <b>value</b>—Specifies delay asymmetry in nano seconds.</li> <li>• <b>delay_mechanism</b>—Sets delay mechanism.</li> <li>• <b>disable</b>— Disables delay mechanism.</li> <li>• <b>e2e</b>—Specifies end to end delay mechanism.</li> <li>• <b>p2p</b>—Specifies peer to peer delay mechanism.</li> <li>• <b>delay_req</b>—Sets delay request interval.</li> <li>• <b>disable</b>— Disables delay request mechanism.</li> <li>• <b>interval</b>—Specifies peer to peer delay mechanism.</li> <li>• <b>interval_value</b>—Peer to peer delay value.</li> <li>• <b>egress_latency</b>—Sets port egress latency.</li> <li>• <b>disable</b>— Disables delay asymmetry.</li> <li>• <b>value</b>— Specifies egress latency in nano seconds.</li> <li>• <b>ingress_latency</b>—Sets port ingress latency.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>disable</b>— Disables delay asymmetry.</li> <li>• <b>value</b>— Specifies ingress latency in nano seconds.</li> <li>• <b>internal</b>— Enables as an internal interface.</li> <li>• <b>sync_interval</b>— Sets sync interval.</li> <li>• <b>disable</b>— Disables sync interval.</li> <li>• <b>value</b>— Specifies sync interval value.</li> <li>• <b>value</b>— Sync interval value.</li> </ul>
<b>Step 5</b>	<b>setPTPportProperties review</b>  <b>Example:</b> Switch(config-controller-PTPPortType)# setPTPportProperties review	Displays the configuration.
<b>Step 6</b>	<b>setPTPportProperties commit</b>  <b>Example:</b> Switch(config-controller-PTPPortType)# setPTPportProperties commit	Sends the configuration to NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-PTPPortType)# exit	Exits to the config-controller mode.

### Configuration Example

The following example shows how to enable PTP on a port.

```
Switch(config-controller-PTPPortType)# setPTPportProperties ptp_port_conf port_id 4
Switch(config-controller-PTPPortType)# setPTPportProperties ptp_port_conf clock_inst 1
Switch(config-controller-PTPPortType)# setPTPportProperties ptp_port_conf sync_interval
value -4
Switch(config-controller-PTPPortType)# setPTPportProperties ptp_port_conf delay_req interval
-6
Switch(config-controller-PTPPortType)# setPTPportProperties ptp_port_conf ptp_run enable

Switch(config-controller-PTPPortType)# setPTPportProperties review
Switch(config-controller-PTPPortType)# setPTPportProperties commit
Switch(config-controller-PTPPortType)# exit
```



**Note**

For G.8275.1 profile, there are a few additional parameters that have been added under **setPTPportProperties\_v2**. In addition to the available parameters for **setPTPportProperties**, the following are the new parameters available:

- *localpriority* - Sets Local priority for the port.
- *mcast\_dest* - Sets multicast destination address type for the port for G.8275.1 profile.
- *not\_slave* - Sets not\_slave attribute for the port for G8275.1 BMC algorithm.

**Configuration Example**

The following example shows how to enable PTP on a port using **setPTPportProperties\_v2**.

```
Switch(config-controller-PTPPortType)# setPTPportProperties_v2 ptp_port_config ptp_run
enable
Switch(config-controller-PTPPortType)# setPTPportProperties_v2 ptp_port_config clock_inst
1
Switch(config-controller-PTPPortType)# setPTPportProperties_v2 ptp_port_config port_id 2
Switch(config-controller-PTPPortType)# setPTPportProperties_v2 ptp_port_config localpriority
value 12
Switch(config-controller-PTPPortType)# setPTPportProperties_v2 ptp_port_config not_slave
enable
Switch(config-controller-PTPPortType)# setPTPportProperties_v2 ptp_port_config mcast_dest
default
Switch(config-controller-PTPPortType)# setPTPportProperties_v2 ptp_port_config sync_interval
value -4
Switch(config-controller-PTPPortType)# setPTPportProperties_v2 ptp_port_config delay_req
interval -6

Switch(config-controller-PTPPortType)# setPTPportProperties_v2 review

Commands in queue:
setPTPportProperties_v2 ptp_port_config ptp_run enable
setPTPportProperties_v2 ptp_port_config clock_inst 1
setPTPportProperties_v2 ptp_port_config port_id 2
setPTPportProperties_v2 ptp_port_config localpriority value 12
setPTPportProperties_v2 ptp_port_config not_slave enable
setPTPportProperties_v2 ptp_port_config mcast_dest default
setPTPportProperties_v2 ptp_port_config sync_interval value -4
setPTPportProperties_v2 ptp_port_config delay_req interval -6

Switch(config-controller-PTPPortType)# setPTPportProperties_v2 commit
Switch(config-controller-PTPPortType)# exit
```

## Enabling or Disabling Microsemi APR

To enable or disable Microsemi APR, perform the following steps:

**DETAILED STEPS**

	Command or Action	Purpose
Step 1	<p><b>configure terminal</b></p> <p><b>Example:</b> Switch# configure terminal</p>	Enters global configuration mode.

	Command or Action	Purpose
<b>Step 2</b>	<b>controller nid</b> <i>1/NID_ID</i>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>PTPPortType</b>  <b>Example:</b> Switch(config-controller)# PTPPortType	Enters the PTPPortType mode.
<b>Step 4</b>	<b>setPTPexternalProperties ptp_external_conf</b> {clock_output_freq   one_pps_output   one_pps_input   vcxo_freq_control   algorithm {enable   one_hertz   min_phase}}  <b>Example:</b> Switch(config-controller-PTPPortType)# setPTPexternalProperties ptp_external_conf algorithm enable enable Switch(config-controller-PTPPortType)# setPTPexternalProperties ptp_external_conf algorithm one_hertz enable	Enables Microsemi APR. <ul style="list-style-type: none"> <li>• <b>clock_output_freq</b>—Specifies external clock output frequency in Hz.</li> <li>• <b>one_pps_output</b>— Enables 1PPS output.</li> <li>• <b>one_pps_input</b>— Enables 1PPS input.</li> <li>• <b>vcxo_freq_control</b>—Specifies APR settings.</li> <li>• <b>enable</b>—Enables or disables the APR.</li> <li>• <b>one_hertz</b>— Enables or disables 1 Hz.</li> <li>• <b>min_phase</b>—Specifies phase correction begin threshold.</li> </ul>
<b>Step 5</b>	<b>setPTPexternalProperties ptp_external_conf</b> {clock_output_freq   one_pps_output   one_pps_input   vcxo_freq_control   algorithm {enable   one_hertz   min_phase}}  <b>Example:</b> Switch(config-controller-PTPPortType)# setPTPexternalProperties ptp_external_conf algorithm enable disable	Disables Microsemi APR and returns to default VTSS APR. <ul style="list-style-type: none"> <li>• <b>clock_output_freq</b>—Specifies external clock output frequency in Hz.</li> <li>• <b>one_pps_output</b>— Enables 1PPS output.</li> <li>• <b>one_pps_input</b>— Enables 1PPS input.</li> <li>• <b>vcxo_freq_control</b>—Specifies APR settings.</li> <li>• <b>enable</b>—Enables or disables the APR.</li> <li>• <b>one_hertz</b>— Enables or disables 1 Hz.</li> <li>• <b>min_phase</b>—Specifies phase correction begin threshold.</li> </ul>
<b>Step 6</b>	<b>setPTPexternalProperties review</b>  <b>Example:</b> Switch(config-controller-PTPPortType)# setPTPexternalProperties review	Displays the configuration.

	Command or Action	Purpose
Step 7	<b>setPTPclockInstance commit</b>  <b>Example:</b> Switch(config-controller-PTPPortType)# setPTPexternalProperties commit	Sends the configuration to NID.
Step 8	<b>exit</b>  <b>Example:</b> Switch(config-controller-PTPPortType)# exit	Exits to the config-controller mode.

### Configuration Example

The following example shows how to enable Microsemi APR.

```
Switch(config-controller-PTPPortType)# setPTPexternalProperties ptp_external_conf algorithm
enable enable
Switch(config-controller-PTPPortType)# setPTPexternalProperties ptp_external_conf algorithm
one_hertz enable
```

```
Switch(config-controller-PTPPortType)# setPTPexternalProperties review
Switch(config-controller-PTPPortType)# setPTPexternalProperties commit
Switch(config-controller-PTPPortType)# exit
```

The following example shows how to disable Microsemi APR and return to default VTSS APR.

```
Switch(config-controller-PTPPortType)# setPTPexternalProperties ptp_external_conf algorithm
enable disable
```

```
Switch(config-controller-PTPPortType)# setPTPexternalProperties review
Switch(config-controller-PTPPortType)# setPTPexternalProperties commit
Switch(config-controller-PTPPortType)# exit
```



#### Note

For G.8275.1 profile, there are a few additional parameters that have been added under **setPTPexternalProperties\_v2**. In addition to the available parameters for **setPTPexternalProperties**, the following are the new parameters available:

- *ho\_spec* - Holdover specification for G.8275 PTP clocks.
- *adjustment\_method* - Adjustment method.

### Configuration Example

The following example shows how to set holdover specification and adjustment method for G.8275.1 profile.

```
Switch(config-controller-PTPPortType)# setPTPexternalProperties_v2 ptp_external_config
ho_spec enable enable
Switch(config-controller-PTPPortType)# setPTPexternalProperties_v2 ptp_external_config
ho_spec cat1 value 11
Switch(config-controller-PTPPortType)# setPTPexternalProperties_v2 ptp_external_config
ho_spec cat2 value 12
Switch(config-controller-PTPPortType)# setPTPexternalProperties_v2 ptp_external_config
ho_spec cat3 value 13
Switch(config-controller-PTPPortType)# setPTPexternalProperties_v2 ptp_external_config
one_pps_mode one_pps_input enable
Switch(config-controller-PTPPortType)# setPTPexternalProperties_v2 ptp_external_config
adjustment_method ltc_phase enable
```

```
Switch(config-controller-PTPPortType)# setPTPexternalProperties_v2 review

Commands in queue:
  setPTPexternalProperties_v2 ptp_external_config ho_spec enable enable
  setPTPexternalProperties_v2 ptp_external_config ho_spec cat1_value 11
  setPTPexternalProperties_v2 ptp_external_config ho_spec cat2_value 12
  setPTPexternalProperties_v2 ptp_external_config ho_spec cat3_value 13
  setPTPexternalProperties_v2 ptp_external_config one_pps_mode one_pps_input enable
  setPTPexternalProperties_v2 ptp_external_config adjustment_method ltc_phase enable

Switch(config-controller-PTPPortType)# setPTPexternalProperties_v2 commit
Switch(config-controller-PTPPortType)# exit
```

## Verifying PTP

Use the following commands to verify the PTP status on the controller:

```
Switch(config-controller-PTPPortType)# showPTPall ptp_show_req 1
Switch(config-controller-PTPPortType)# showPTPall commit
```

This command displays the PTP configuration status on the NID.



### Note

To view the values of the parameters that have been added as part of G.8275.1 profile, use the **showPTPall\_v2** command.

The following is a sample output from the **showPTPall** command:

```
ShowPTPall_Output.ptp_show_response[0].local_current_time.ptp_time =
'local time not implemented for clk_inst = 1'
ShowPTPall_Output.ptp_show_response[0].local_current_time.clock_adjustment_method.t
= 4
ShowPTPall_Output.ptp_show_response[0].local_current_time.clock_adjustment_method.u.software
= ''
ShowPTPall_Output.ptp_show_response[0].clock_default_dataset.clock_id =
1
ShowPTPall_Output.ptp_show_response[0].clock_default_dataset.mode.t = 5
ShowPTPall_Output.ptp_show_response[0].clock_default_dataset.mode.u.slave
= ''
ShowPTPall_Output.ptp_show_response[0].clock_default_dataset.two_step_flag
= false
ShowPTPall_Output.ptp_show_response[0].clock_default_dataset.ports = '255'
ShowPTPall_Output.ptp_show_response[0].clock_default_dataset.clock_identity
= '4348018d07000075'
ShowPTPall_Output.ptp_show_response[0].clock_default_dataset.clock_quality
= 'Cl:255 Ac:128 Va:00004'
ShowPTPall_Output.ptp_show_response[0].clock_default_dataset.properties.priority1
= 0
ShowPTPall_Output.ptp_show_response[0].clock_default_dataset.properties.priority2
= 0
ShowPTPall_Output.ptp_show_response[0].clock_default_dataset.properties.clock_domain
= 127
ShowPTPall_Output.ptp_show_response[0].clock_default_dataset.protocol.t
= 1
ShowPTPall_Output.ptp_show_response[0].clock_default_dataset.protocol.u.ethernet
= ''
ShowPTPall_Output.ptp_show_response[0].clock_default_dataset.one_way =
```

```

true
ShowPTPall_Output.ptp_show_response[0].clock_default_dataset.vlan.t = 1
ShowPTPall_Output.ptp_show_response[0].clock_default_dataset.vlan.u.disable
= ''
ShowPTPall_Output.ptp_show_response[0].clock_default_dataset.pcp.t = 1
ShowPTPall_Output.ptp_show_response[0].clock_default_dataset.pcp.u.disable
= ''
ShowPTPall_Output.ptp_show_response[0].time_property.UTC_offset.t = 2
ShowPTPall_Output.ptp_show_response[0].time_property.UTC_offset.u.value
= 34
ShowPTPall_Output.ptp_show_response[0].time_property.frequency_traceable
= true
ShowPTPall_Output.ptp_show_response[0].time_property.leap59 = true
ShowPTPall_Output.ptp_show_response[0].time_property.leap61 = true
ShowPTPall_Output.ptp_show_response[0].time_property.timing_traceable =
true
ShowPTPall_Output.ptp_show_response[0].time_property.ptp_timescale = true
ShowPTPall_Output.ptp_show_response[0].time_property.ptp_timesource = 0
ShowPTPall_Output.ptp_show_response[0].clock_parent_dataset =
'ParentPortIdentity port Pstat Var ChangeRate d0c282fffe17dfbf 1 0
65170-8207664

GrandmasterIdentity GrandmasterClockQuality Pri1 Pri2fe17dfbf68fe70cd
Cl:128 Ac:128 Va:33914 92 145
'
ShowPTPall_Output.ptp_show_response[0].clock_current_dataset.stpRm = 1
ShowPTPall_Output.ptp_show_response[0].clock_current_dataset.offset_from_master
= ' 0.000.000.003'
ShowPTPall_Output.ptp_show_response[0].clock_current_dataset.mean_path_delay
= ' 0.000.000.067'
ShowPTPall_Output.ptp_show_response[0].clock_current_dataset.slave_port
= 4
ShowPTPall_Output.ptp_show_response[0].clock_current_dataset.slave_state.t
= 4
ShowPTPall_Output.ptp_show_response[0].clock_current_dataset.slave_state.u.LOCKED
= ''
ShowPTPall_Output.ptp_show_response[0].clock_current_dataset.holdover =
'TRUE -368.3
'
ShowPTPall_Output.ptp_show_response[0].slave_cfg[0].index_ = 0
ShowPTPall_Output.ptp_show_response[0].slave_cfg[0].duration = 100
ShowPTPall_Output.ptp_show_response[0].slave_cfg[0].peer_ip_addr =
'7.7.7.7'
ShowPTPall_Output.ptp_show_response[0].slave_cfg[1].index_ = 1
ShowPTPall_Output.ptp_show_response[0].slave_cfg[1].duration = 100
ShowPTPall_Output.ptp_show_response[0].slave_cfg[1].peer_ip_addr =
'0.0.0.0'
ShowPTPall_Output.ptp_show_response[0].slave_cfg[2].index_ = 2
ShowPTPall_Output.ptp_show_response[0].slave_cfg[2].duration = 100
ShowPTPall_Output.ptp_show_response[0].slave_cfg[2].peer_ip_addr =
'0.0.0.0'
ShowPTPall_Output.ptp_show_response[0].slave_cfg[3].index_ = 3
ShowPTPall_Output.ptp_show_response[0].slave_cfg[3].duration = 100
ShowPTPall_Output.ptp_show_response[0].slave_cfg[3].peer_ip_addr =
'0.0.0.0'
ShowPTPall_Output.ptp_show_response[0].slave_cfg4.index_ = 4
ShowPTPall_Output.ptp_show_response[0].slave_cfg4.duration = 100
ShowPTPall_Output.ptp_show_response[0].slave_cfg4.peer_ip_addr = '0.0.0.0'

```

```
ShowPTPall Commit Success!!!
```

## Additional References

### Related Documents

Related Topic	Document Title
Cisco ME 3800x and ME 3600x Switches Software Configuration Guide, Cisco IOS Release 15.4(1)S	<a href="http://www.cisco.com/c/en/us/td/docs/switches/metro/me3600x_3800x/software/release/15-4_1_S/configuration/guide/3800x3600xscg.html">http://www.cisco.com/c/en/us/td/docs/switches/metro/me3600x_3800x/software/release/15-4_1_S/configuration/guide/3800x3600xscg.html</a>

### MIBs

MIB	MIBs Link
MIBs Supporting Cisco IOS	To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL: <a href="http://www.cisco.com/go/mibs">http://www.cisco.com/go/mibs</a>

### Technical Assistance

Description	Link
<p>The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.</p> <p>To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.</p> <p>Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.</p>	<a href="http://www.cisco.com/support">http://www.cisco.com/support</a>





## Configuring ACLs

---

This chapter describes how to configure network security on the Cisco ME 1200 NID using access control lists (ACLs), which are also referred to as access lists. Information in this chapter about ACLs is specific to IP Version 4 (IPv4).

For more information on ACLs, see [Configuring Network Security with ACLs](#).

- [Prerequisites for Configuring ACLs, page 241](#)
- [Restrictions for Configuring ACLs, page 241](#)
- [How to Configure ACLs, page 242](#)

### Prerequisites for Configuring ACLs

- NID must be added to the controller.
- NID must be accessible from the controller.



**Note**

---

The ACL rules need to be configured on the controller and these rules can be applied onto ME1200 using ProvisionACL template.

---

### Restrictions for Configuring ACLs

- Logging of the packet frames are not supported.
- Modifying ACL parameter that is applied on Cisco ME 1200 NID is not supported. To modify, remove the parameter using the **removeAclConfig** and **removeAclFromPort** commands, and apply it to a port afresh.
- A maximum of 512 ACL entries can be programmed.
- ACLs can be configured with policy IDs ranging from 0 to 63.

**Tip**

To add more number of ACLs when the maximum entries are achieved, remove unwanted ACLs to configure more ACLs.

**Note**

The rules defined in the Controller, can be configured in Cisco ME 1200 NID .

## How to Configure ACLs

### Configuring ACL Rules using the Controller

#### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>mac access-list {extended WORD}</b>  <b>Example:</b> Switch(config)# mac access-list extended nid_acl_50000	Configures the extended ACL rules. <ul style="list-style-type: none"> <li>• <b>access-list</b>—Specifies the named access-list.</li> <li>◦ <b>extended</b>—Specifies that the access-list is of the type <b>extended</b>.</li> <li>◦ <b>WORD</b>—access-list name.</li> </ul>
<b>Step 3</b>	<b>deny {H.H.H  any  host H.H.H} {H.H.H  any  host H.H.H} OR permit {H.H.H   any  host H.H.H} {H.H.H  any  host H.H.H}</b>  <b>Example:</b> Switch(config-ext-macl)# deny host 0000.0000.0001 host 5555.6666.7777  Switch(config-ext-macl)# permit host 4444.aaaa.cccc host 4444.cccc.aaaa	Configures the ACL rule. <ul style="list-style-type: none"> <li>• <b>deny</b>—Specifies the packets to be reject.               <ul style="list-style-type: none"> <li>◦ <b>icmp</b>—Internet Control Message Protocol.</li> <li>◦ <b>ip</b>—Any Internet Protocol.</li> <li>◦ <b>tcp</b>—Transmission Control Protocol.</li> <li>◦ <b>udp</b>—User Datagram Protocol.</li> </ul> </li> <li>• <b>permit</b>—Specifies the packets to be forward.               <ul style="list-style-type: none"> <li>◦ <b>icmp</b>—Internet Control Message Protocol.</li> <li>◦ <b>ip</b>—Any Internet Protocol.</li> <li>◦ <b>tcp</b>—Transmission Control Protocol.</li> </ul> </li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>◦ <b>udp</b>—User Datagram Protocol.</li> <li>• <b>H.H.H</b>—Specifies the 48-bit source or destination MAC address.</li> <li>• <b>any</b>—Specifies any source or destination MAC address.</li> <li>• <b>host</b>—Specifies a single source or destination host. <ul style="list-style-type: none"> <li>◦ <i>H.H.H</i>—48-bit source or destination MAC address.</li> </ul> </li> </ul>
<b>Step 4</b>	<b>exit</b>  <b>Example:</b> Switch(config-ext-macl)# exit	Exits to the config-controller mode.

### Configuration Example



**Note** The following two configuration examples use IOS ACL commands.

Example 1: MAC

```
Switch# configure terminal
Switch(config)# mac access-list extended nid_acl_50000
Switch(config-ext-macl)# deny host 0000.0000.0001 host 5555.6666.7777
Switch(config)# mac access-list extended nid_acl_1002
Switch(config-ext-macl)# permit host 4444.aaaa.cccc host 4444.cccc.aaaa
Switch(config-ext-macl)# permit any any etype-6000
Switch(config-ext-macl)# exit
```

Example 2: IP

```
Switch# configure terminal
Switch(config)# ip access-list extended nid_acl_1001
Switch(config-ext-nacl)# deny ip host 15.15.1.2 host 15.15.1.3
Switch(config-ext-nacl)# deny tcp host 10.10.1.5 eq 101 host 10.10.1.6 eq 100
Switch(config-ext-macl)# exit
```

## Creating ACL Global Configurations

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.

	Command or Action	Purpose
<b>Step 2</b>	<b>controller nid <i>I/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionACL</b>  <b>Example:</b> Switch(config-controller)# ProvisionACL	Enters the ProvisionACL mode.
<b>Step 4</b>	<b>createAclConfigcreateAclConfigRequest {acl_name <i>WORD</i>}</b>  <b>Example:</b> Switch(config-controller-ProvisionACL)# createAclConfig createAclConfigRequest acl_name nid_acl_50000	Configures the ACL global configuration.  • <b>acl_name</b> —Specifies the extended ACL.  ◦ <b>WORD</b> —ACL name.
<b>Step 5</b>	<b>createAclConfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionACL)# createAclConfig review	Displays the configuration.
<b>Step 6</b>	<b>createAclConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionACL)# createAclConfig commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionACL)# exit	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionACL
Switch(config-controller-ProvisionACL)# createAclConfig createAclConfigRequest acl_name
acl_nid_50000
Switch(config-controller-ProvisionACL)# createAclConfig review

Commands in queue:
createAclConfig createAclConfigRequest acl_name acl_nid_50000

Switch(config-controller-ProvisionACL)# createAclConfig commit

CreateAclConfig Commit Success!!!

Switch(config-controller-ProvisionACL)# exit
```

## Applying ACL Configuration to the Ports

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionACL</b>  <b>Example:</b> Switch(config-controller)# ProvisionACL	Enters the ProvisionACL mode.
<b>Step 4</b>	<b>applyAclToPort</b> <b>applyAclToPortRequest</b> { <b>acl_name</b> <i>WORD</i>   <b>port_number</b> <i>Port_Number</i> }  <b>Example:</b> Switch(config-controller-ProvisionACL)# applyAclToPort applyAclToPortRequest acl_name nid_acl_50000  Switch(config-controller-ProvisionACL)# applyAclToPort applyAclToPortRequest port_number 3	Applies the ACL global configuration. <ul style="list-style-type: none"> <li>• <b>acl_name</b>—specifies the extended ACL. <ul style="list-style-type: none"> <li>◦ <i>WORD</i>—ACL name.</li> </ul> </li> <li>• <b>port_number</b>—Specifies the port number. <ul style="list-style-type: none"> <li>◦ <i>Port_Number</i>—port number. The range is from 1 to 6.</li> </ul> </li> </ul>
<b>Step 5</b>	<b>applyAclToPort review</b>  <b>Example:</b> Switch(config-controller-ProvisionACL)# applyAclToPort review	Displays the configuration.
<b>Step 6</b>	<b>applyAclToPort commit</b>  <b>Example:</b> Switch(config-controller-ProvisionACL)# applyAclToPort commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionACL)# exit	Exits to the config-controller mode.

**Configuration Example**

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionACL
Switch(config-controller-ProvisionACL)# applyAclToPort applyAclToPortRequest acl_name
nid_acl_50000
Switch(config-controller-ProvisionACL)# applyAclToPort applyAclToPortRequest port_number 3
Switch(config-controller-ProvisionACL)# applyAclToPort review

Commands in queue:
  applyAclToPort applyAclToPortRequest acl_name nid_acl_50000
  applyAclToPort applyAclToPortRequest port_number 3

Switch(config-controller-ProvisionACL)# applyAclToPort commit

  ApplyAclToPort  Commit Success!!!

Switch(config-controller-ProvisionACL)# exit

```

For applying the policy ID using EVC configuration, see [Configuring ECE Sample Rule 1 and Other Commands For EVC Configuration](#)

## Viewing ACL Global Configurations

**DETAILED STEPS**

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid <i>1/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionACL</b>  <b>Example:</b> Switch(config-controller)# ProvisionACL	Enters the ProvisionACL mode.
<b>Step 4</b>	<b>getAclConfiggetAclConfigRequest {acl_name <i>WORD</i>}</b>  <b>Example:</b> Switch(config-controller-ProvisionACL)# getAclConfig getAclConfigRequest acl_name nid_acl_50000	Displays the ACL global configuration.  • <b>acl_name</b> —Specifies the extended ACL . ◦ <b>WORD</b> —ACL name.
<b>Step 5</b>	<b>getAclConfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionACL)# getAclConfig review	Displays the configuration.

	Command or Action	Purpose
Step 6	<b>getAclConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionACL)# getAclConfig commit	Sends the configuration to the NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionACL)# exit	Exits to the config-controller mode.

### Configuration Example

Example 1: MAC

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionACL
Switch(config-controller-ProvisionACL)# getAclConfig getAclConfigRequest acl_name
nid_acl_50000
Switch(config-controller-ProvisionACL)# getAclConfig review
```

Commands in queue:

```
getAclConfig getAclConfigRequest acl_name nid_acl_50000
```

```
Switch(config-controller-ProvisionACL)# getAclConfig commit
GetAclConfig_Output.getAclConfigResponse.acl_definition = '
Extended MAC access list nid_acl_50000
permit host 0000.0000.0001 host 5555.5556.5557
permit any any etype-6000'
```

```
GetAclConfig Commit Success!!!
```

```
Switch(config-controller-ProvisionACL)# exit
```

Example 2: IP

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionACL
Switch(config-controller-ProvisionACL)# getAclConfig getAclConfigRequest acl_name
nid_acl_50000
Switch(config-controller-ProvisionACL)# getAclConfig review
```

Commands in queue:

```
getAclConfig getAclConfigRequest acl_name nid_acl_50000
```

```
Switch(config-controller-ProvisionACL)# getAclConfig commit
GetAclConfig_Output.getAclConfigResponse.acl_definition = '
Extended IP access list nid_acl_1001
ip access-list extended nid_acl_1001
deny ip host 15.15.1.2 host 15.15.1.3'
```

```
GetAclConfig Commit Success!!!
```

```
Switch(config-controller-ProvisionACL)# exit
```

## Removing ACL Global Configurations

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionACL</b>  <b>Example:</b> Switch(config-controller)# ProvisionACL	Enters the ProvisionACL mode.
<b>Step 4</b>	<b>removeAclconfigremoveAclConfigRequest {acl_name WORD}</b>  <b>Example:</b> Switch(config-controller-ProvisionACL)# removeAclconfig removeAclConfigRequest acl_name nid_acl_50000	Removes the ACL global configuration.  • <b>acl_name</b> —Specifies the extended ACL . ◦ <b>WORD</b> —ACL name.
<b>Step 5</b>	<b>removeAclconfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionACL)# removeAclconfig review	Displays the configuration.
<b>Step 6</b>	<b>removeAclconfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionACL)# removeAclconfig commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionACL)# exit	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionACL
Switch(config-controller-ProvisionACL)# removeAclconfig removeAclConfigRequest acl_name
nid_acl_50000
Switch(config-controller-ProvisionACL)# removeAclconfig review
```

Commands in queue:



```

removeAclconfig removeAclConfigRequest acl_name nid_acl_50000

Switch(config-controller-ProvisionACL)# removeAclconfig commit
RemoveAclConfig Commit Success!!!

```

**To verify the remove action:**

```

Switch(config-controller-ProvisionACL)# getAclConfig getAclConfigRequest acl_name
nid_acl_50000
Switch(config-controller-ProvisionACL)# getAclConfig commit

GetAclConfig_Output.getAclConfigResponse.acl_definition = '
nid_acl_50000 does not exist '

GetAclConfig Commit Success!!!

Switch(config-controller-ProvisionACL)# exit

```

**What to Do Next**

Use the **getAclConfig getAclConfigRequest** command to verify the remove action.

```

Switch(config-controller-ProvisionACL)# getAclConfig getAclConfigRequest acl_name acl_name
Switch(config-controller-ProvisionACL)# getAclConfig review
Switch(config-controller-ProvisionACL)# getAclConfig commit

```

## Removing ACL Port Configurations

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionACL</b>  <b>Example:</b> Switch(config-controller)# ProvisionACL	Enters the ProvisionACL mode.
<b>Step 4</b>	<b>removeAclFromPort removeAclFromPortRequest</b> <b>{acl_name WORD   port_number Port_Number}</b>  <b>Example:</b> Switch(config-controller-ProvisionACL)# removeAclFromPort removeAclFromPortRequest port-number 3	Removes the ACL port configuration. <ul style="list-style-type: none"> <li>• <b>acl_name</b>—Specifies the extended ACL. <ul style="list-style-type: none"> <li>◦ <i>WORD</i>—ACL name.</li> </ul> </li> <li>• <b>port_number</b>—Specifies the port number. <ul style="list-style-type: none"> <li>◦ <i>Port_Number</i>—Port number. The range is from 1 to 6.</li> </ul> </li> </ul>

	Command or Action	Purpose
<b>Step 5</b>	<b>removeAclFromPort review</b>  <b>Example:</b> Switch(config-controller-ProvisionACL)# removeAclFromPort review	Displays the configuration.
<b>Step 6</b>	<b>removeAclFromPort commit</b>  <b>Example:</b> Switch(config-controller-ProvisionACL)# removeAclFromPort commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionACL)# exit	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionACL
Switch(config-controller-ProvisionACL)# removeAclFromPort removeAclFromPortRequest port_number
3
Switch(config-controller-ProvisionACL)# removeAclFromPort review

Commands in queue:
  removeAclFromPort removeAclFromPortRequest port_number 3

Switch(config-controller-ProvisionACL)# removeAclFromPort commit
RemoveAclFromPort Commit Success!!!

Switch(config-controller-ProvisionACL)# exit
```

### What to Do Next

Use the **showAclConfigSummary** command to view the interface ACL summary.

```
Switch(config-controller-ProvisionACL)# showAclConfigSummary showAclConfigSummaryRequest
Switch(config-controller-ProvisionACL)# showAclConfigSummary review
Switch(config-controller-ProvisionACL)# showAclConfigSummary commit
```

## Verifying ACL Configurations

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.

	Command or Action	Purpose
<b>Step 2</b>	<b>controller nid</b> <i>I/NID_ID</i>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionACL</b>  <b>Example:</b> Switch(config-controller)# ProvisionACL	Enters the ProvisionACL mode.
<b>Step 4</b>	<b>showAclConfigSummaryshowAclConfigSummaryRequest</b>  <b>Example:</b> Switch(config-controller-ProvisionACL)# showAclConfigSummary showAclConfigSummaryRequest	Displays the ACL configuration summary.
<b>Step 5</b>	<b>showAclConfigSummary review</b>  <b>Example:</b> Switch(config-controller-ProvisionACL)# showAclConfigSummary review	Displays the configuration.
<b>Step 6</b>	<b>showAclConfigSummary commit</b>  <b>Example:</b> Switch(config-controller-ProvisionACL)# showAclConfigSummary commit	Sends the configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionACL)# exit	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionACL
Switch(config-controller-ProvisionACL)# showAclConfigSummary showAclConfigSummaryRequest
Switch(config-controller-ProvisionACL)# showAclConfigSummary review

Commands in queue:
  showAclConfigSummary showAclConfigSummaryRequest

Switch(config-controller-ProvisionACL)# showAclConfigSummary commit

ShowAclConfigSummary_Output.showAclConfigSummaryResponse.showOutput = '
Acl Configuration Summary
  policyid:  0 aclname: nid_acl_50000

Interface Acl Summary
  Port 3: nid_acl_50000'

ShowAclConfigSummary Commit Success!!!

Switch(config-controller-ProvisionACL)# exit
```





## Configuring Quality of Service (QoS)

QoS includes traffic classification, marking, policing, queuing, and scheduling configured with service policies that are attached to ingress and egress targets. With QoS, you can provide preferential treatment to certain types of traffic at the expense of other types. When you do not configure QoS, the switch offers best-effort service to each packet, regardless of the packet contents or size.

Ingress QoS includes classification, marking, and policing. Classification can be based on the class of service (CoS), Differentiated Services Code Point (DSCP) in the inbound packet. You can classify based on Layer 2 MAC, IP-standard, or match based on AMAC, IP parameters using QCE configurations.

For EVC level QoS, see [Creating a Policer](#), on page 109.

Hierarchical QoS on the Cisco ME 1200 Series Carrier Ethernet Access Devices supports queuing and scheduling per EVC level per port. 8 queues are supported per port on the EVC. The EVC must be configured on the interface before configuring HQoS.



**Note**

---

Single EVC per single UNI (input port) is supported.

---

The port scheduler is configured by default for fair round-robin scheduling between each EVC and non-service traffic, but can be weighted by configuring guaranteed bandwidths for the EVC. When guaranteed bandwidth is configured for an EVC, the remaining bandwidth of the port is divided equally between the remaining EVCs and non-service traffic.



**Note**

---

Configuring of guaranteed bandwidth for non-service traffic is *not* supported.

---

The CIR bandwidth requirements are configured for each CoS per EVC. Excess traffic is strictly *not* prioritized, but is shared proportionally between the CoS within the EVC.

For more information, see [Configuring Quality of Service \(QoS\)](#).

- [How to Configure QoS](#), page 254
- [Displaying the QCE List on the Controller](#), page 306
- [Displaying QoS Queue Statistics on the Controller](#), page 307
- [Displaying the Hierarchical QoS ID List on the Controller](#), page 308

# How to Configure QoS

## Provisioning the Controller to Configure QoS

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>ProvisionQos</b>  <b>Example:</b> Switch(config-controller)# <b>ProvisionQos</b>	Enters QoS provisioning mode.
Step 4	<b>ProvisionQos {default   deleteQCE   exit   getInputGlobalPolicy   getInputGlobalPolicy   getOutputGlobalPolicy   getOutputPortPolicy   getQCE   getSystemQosSettings   no   reorderQCEentries   setInputGlobalPolicy   setInputPortPolicy   setOutputGlobalPolicy   setOutputPortPolicy   setQCE   setSystemQosSettings   showQCElist   showQueueStatistics}</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# ? ProvisionQos sub-mode commands: default Set a command to its defaults deleteQCE Delete a particular QCE exit Exit from ProvisionQos sub configuration mode getInputGlobalPolicy Show Output QoS global features configured getInputPortPolicy Show Input Policy configured on Physical Port getOutputGlobalPolicy Show Global Output QoS features getOutputPortPolicy Show Output Policy configured on Physical Port getQCE getQCE (default) getSystemQosSettings getSystemQosSettings (default) no Negate a command or set its defaults reorderQCEentries reorderQCEentries (default) setInputGlobalPolicy configure Global Input QoS features setInputPortPolicy configure Input policy on Physical Port setOutputGlobalPolicy configure Global Output QoS features setOutputPortPolicy configure Output policy on Physical Port setQCE setQCE (default) setSystemQosSettings set System-wide QoS settings showQCElist showQCElist (default) showQueueStatistics Display egress queue statistics	Displays the supported configurations for QoS.

	Command or Action	Purpose
Step 5	<p><b>exit</b></p> <p><b>Example:</b> Switch(config-controller-ProvisionQos)# <b>exit</b></p>	Exits the QoS provisioning mode.

### Configuration Example

The following example shows the supported QoS configuration:

```
Switch(config-controller-ProvisionQos)# ?
ProvisionQos sub-mode commands:
  default          Set a command to its defaults
  deleteQCE        Delete a particular QCE
  exit             Exit from ProvisionQos sub configuration mode
  getInputGlobalPolicy Show Output QoS global features configured
  getInputPortPolicy Show Input Policy configured on Physical Port
  getOutputGlobalPolicy Show Global Output QoS features
  getOutputPortPolicy Show Output Policy configured on Physical Port
  getQCE           getQCE (default)
  getSystemQosSettings getSystemQosSettings (default)
  no              Negate a command or set its defaults
  reorderQCEentries reorderQCEentries (default)
  setInputGlobalPolicy configure Global Input QoS features
  setInputPortPolicy configure Input policy on Physical Port
  setOutputGlobalPolicy configure Global Output QoS features
  setOutputPortPolicy configure Output policy on Physical Port
  setQCE          setQCE (default)
  setSystemQosSettings set System-wide QoS settings
  showQCElist     showQCElist (default)
  showQueueStatistics Display egress queue statistics
```

## Configuring QoS Input Policy Features Globally on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS, on page 254](#).

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>setInputGlobalPolicy {commit   flush   inputGlobalPolicyConfig   review}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# <b>setInputGlobalPolicy ?</b>   commit          commit   setInputGlobalPolicy</pre>	<p>Sets the global input QoS policy.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the QoS configuration to NID.</li> <li>• <b>flush</b>—Flushes all QoS configuration from the queue.</li> <li>• <b>inputGlobalPolicyConfig</b>—Sets the input policy global configuration on the controller.</li> </ul>

	Command or Action	Purpose
	<pre>flush flush all setInputGlobalPolicy commands from queue inputGlobalPolicyConfig configure Global Input QoS features review review setInputGlobalPolicy commands</pre>	<ul style="list-style-type: none"> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
<b>Step 2</b>	<p><b>setInputGlobalPolicy inputGlobalPolicyConfig</b>  <b>{match_DSCP value_xx {mark_DSCP</b>  <i>dscp_value</i>   <b>mark_egress_class egress_queue}</b>  <b>  service_policy {attach   detach}}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# setInputGlobalPolicy inputGlobalPolicyConfig match_DSCP value_00 mark_DSCP 4 Switch(config-controller-ProvisionQos)# setInputGlobalPolicy inputGlobalPolicyConfig match_DSCP value_00 mark_egress_class 4 Switch(config-controller-ProvisionQos)# setInputGlobalPolicy inputGlobalPolicyConfig service_policy attach</pre>	<p>Configures input global policy.</p> <ul style="list-style-type: none"> <li>• <b>match_DSCP</b>—Matches a particular DSCP value .</li> <li>• <b>value_xx</b>—Sets DSCP values on the controller. Use the following values: <ul style="list-style-type: none"> <li>• <b>value_00</b> DSCP 0. Default PHB for best effort traffic</li> <li><b>value_01</b> DSCP 1</li> <li><b>value_02</b> DSCP 2</li> <li><b>value_03</b> DSCP 3</li> <li><b>value_04</b> DSCP 4</li> <li><b>value_05</b> DSCP 5</li> <li><b>value_06</b> DSCP 6</li> <li><b>value_07</b> DSCP 7</li> <li><b>value_08</b> CS1. Class Selector PHB precedence 1(DSCP 8)</li> <li><b>value_09</b> DSCP 9</li> <li><b>value_10</b> AF11. Assured Forwarding PHB (DSCP 10)</li> <li><b>value_11</b> DSCP 11</li> <li><b>value_12</b> AF12. Assured Forwarding PHB (DSCP 12)</li> <li><b>value_13</b> DSCP 13</li> <li><b>value_14</b> AF13. Assured Forwarding PHB (DSCP 14)</li> <li><b>value_15</b> DSCP 15</li> <li><b>value_16</b> CS2. Class Selector PHB precedence 1(DSCP 16)</li> <li><b>value_16</b> CS2. Class Selector PHB precedence 1(DSCP 16)</li> <li><b>value_17</b> DSCP 17</li> <li><b>value_18</b> AF21. Assured Forwarding PHB (DSCP 18)</li> <li><b>value_19</b> DSCP 19</li> <li><b>value_20</b> AF22. Assured Forwarding PHB (DSCP 20)</li> <li><b>value_21</b> DSCP 21</li> <li><b>value_22</b> AF23. Assured Forwarding PHB (DSCP 22)</li> <li><b>value_23</b> DSCP 23</li> <li><b>value_24</b> CS3. Class Selector PHB precedence 1(DSCP 24)</li> <li><b>value_25</b> DSCP 25</li> </ul> </li> </ul>



Command or Action	Purpose
	<p><b>value_26</b> AF31. Assured Forwarding PHB (DSCP 26)</p> <p><b>value_27</b> DSCP 27</p> <p><b>value_28</b> AF32. Assured Forwarding PHB (DSCP 28)</p> <p><b>value_29</b> DSCP 29</p> <p><b>value_30</b> AF33. Assured Forwarding PHB (DSCP 30)</p> <p><b>value_31</b> DSCP 31</p> <p><b>value_32</b> CS4. Class Selector PHB precedence 1(DSCP 32)</p> <p><b>value_33</b>DSCP 33</p> <p><b>value_34</b> AF41. Assured Forwarding PHB (DSCP 34)</p> <p><b>value_35</b> DSCP 35</p> <p><b>value_36</b> AF42. Assured Forwarding PHB (DSCP 36)</p> <p><b>value_37</b> DSCP 37</p> <p><b>value_38</b> AF43. Assured Forwarding PHB (DSCP 38)</p> <p><b>value_39</b> DSCP 39</p> <p><b>value_40</b> CS5. Class Selector PHB precedence 1(DSCP 40)</p> <p><b>value_41</b> DSCP 41</p> <p><b>value_42</b> DSCP 42</p> <p><b>value_43</b> DSCP 43</p> <p><b>value_44</b> VA. Voice Admit PHB(DSCP 44)</p> <p><b>value_45</b> DSCP 45</p> <p><b>value_46</b> Expedited Forwarding PHB(DSCP 46)</p> <p><b>value_47</b> DSCP 47</p> <p><b>value_48</b> CS6. Class Selector PHB precedence 1(DSCP 48)</p> <p><b>value_49</b> DSCP 49</p> <p><b>value_50</b> DSCP 50</p> <p><b>value_51</b> DSCP 51</p> <p><b>value_52</b> DSCP 52</p> <p><b>value_53</b> DSCP 53</p> <p><b>value_54</b> DSCP 54</p> <p><b>value_55</b> DSCP 55</p> <p><b>value_56</b> CS7. Class Selector PHB precedence 1(DSCP 56)</p> <p><b>value_57</b> DSCP 57</p> <p><b>value_58</b> DSCP 58</p> <p><b>value_59</b> DSCP 59</p>

	Command or Action	Purpose
		<p><b>value_60</b> DSCP 60</p> <p><b>value_61</b> DSCP 61</p> <p><b>value_62</b> DSCP 62</p> <p><b>value_63</b> DSCP 63</p> <ul style="list-style-type: none"> <li>• <b>mark_DSCP</b>—Marks the DSCP on the controller. The valid range is from 0 to 63. 64 is invalid.</li> <li>• <b>mark_egress_class</b>—Assigns to egress queue. The valid range is from 0 to 7. 8 is invalid.</li> <li>• <b>service_policy</b>—Attaches or detaches the service policy. <ul style="list-style-type: none"> <li>◦ <b>attach</b>—Attaches the service policy and enables the configuration.</li> <li>◦ <b>detach</b>—Removes the service policy, removes all configuration and restore the default configuration.</li> </ul> </li> </ul>
<b>Step 3</b>	<p><b>setInputGlobalPolicy review</b></p> <p><b>Example:</b>  Switch(config-controller-ProvisionQos) #  <b>setInputGlobalPolicy review</b></p> <p>Commands in queue:  setInputGlobalPolicy  inputGlobalPolicyConfig match_DSCP  value_02 mark_DSCP 4  setInputGlobalPolicy  inputGlobalPolicyConfig match_DSCP  value_02 mark_egress_class 4  setInputGlobalPolicy  inputGlobalPolicyConfig service_policy  attach</p>	Displays the QoS configuration on the controller.
<b>Step 4</b>	<p><b>setInputGlobalPolicy commit</b></p> <p><b>Example:</b>  Switch(config-controller-ProvisionQos) #  <b>setInputGlobalPolicy commit</b></p>	Sends the QoS configuration to the NID.
<b>Step 5</b>	<p><b>exit</b></p> <p><b>Example:</b>  Switch(config-controller-ProvisionQos) #  <b>exit</b></p>	Exits the QoS provisioning mode.

### Configuration Example

The example shows how to configure QoS input policy globally on the controller:

```
Switch(config-controller-ProvisionQos) # setInputGlobalPolicy inputGlobalPolicyConfig
match_DSCP value_00 mark_DSCP 4
Switch(config-controller-ProvisionQos) # setInputGlobalPolicy inputGlobalPolicyConfig
match_DSCP value_00 mark_egress_class 4
Switch(config-controller-ProvisionQos) # setInputGlobalPolicy inputGlobalPolicyConfig
service_policy attach
Switch(config-controller-ProvisionQos) # setInputGlobalPolicy review
Commands in queue:
    setInputGlobalPolicy inputGlobalPolicyConfig match_DSCP value_02 mark_DSCP 4
    setInputGlobalPolicy inputGlobalPolicyConfig match_DSCP value_02 mark_egress_class
4
    setInputGlobalPolicy inputGlobalPolicyConfig service_policy attach

Switch(config-controller-ProvisionQos) # setInputGlobalPolicy commit
SetInputGlobalPolicy Commit Success!!!
Switch(config-controller-ProvisionQos) # exit
```

## Configuring QoS Input Policy Features at Port level on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS, on page 254](#).

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>setInputPortPolicy</b> {commit   flush   inputPortPolicyConfig   review}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos) # setInputPortPolicy ?   commit                commit setInputPortPolicy   flush                 flush all setInputPortPolicy   commands from queue   inputPortPolicyConfig configure Input policy on Physical Port   review                review setInputPortPolicy   commands</pre>	<p>Sets the input QoS policy at port level.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the QoS configuration to NID.</li> <li>• <b>flush</b>—Flushes all QoS configuration from the queue.</li> <li>• <b>inputPortPolicyConfig</b>—Sets the input policy configuration at port level on the controller.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
Step 2	<p><b>inputPortPolicyConfig</b> {egress_class_marking {enable   disable}   globalDscpBasedDscpIngressMarking {enable   disable}   globalDscpBasedEgressClassMarking {enable   disable}   match cos value_xx mark_egress_class egress_queue   port_numberport_number   port_policer {cir kbps   state {enable   disable}}   qce {address {destination   source}   key {double_tag   ip_address   mac_ip_addr   normal}}   service_policy {attach   detach}}</p>	<p>Configures input policy at port.</p> <ul style="list-style-type: none"> <li>• <b>egress_class_marking</b>—Enables egress class marking as configured per each cos matched packet.</li> <li>• <b>globalDscpBasedDscpIngressMarking</b>—Enables DSCP based DSCP ingress marking on the port as per the configured global policy.</li> <li>• <b>globalDscpBasedEgressClassMarking</b>—Enable DSCP based Egress Class marking on the port as per the configured global policy.</li> </ul>

Command or Action	Purpose
<p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# setInputPortPolicy inputPortPolicyConfig egress_class marking enable Switch(config-controller-ProvisionQos)# setInputPortPolicy inputPortPolicyConfig globalDscpBasedDscpIngressMarking enable Switch(config-controller-ProvisionQos)# setInputPortPolicy inputPortPolicyConfig globalDscpBasedEgressClassMarking enable Switch(config-controller-ProvisionQos)# setInputPortPolicy inputPortPolicyConfig match cos value_0 Switch(config-controller-ProvisionQos)# setInputPortPolicy inputPortPolicyConfig port_number 1 Switch(config-controller-ProvisionQos)# setInputPortPolicy inputPortPolicyConfig port_policer cir 1000 Switch(config-controller-ProvisionQos)# setInputPortPolicy inputPortPolicyConfig port_policer state enable Switch(config-controller-ProvisionQos)# setInputPortPolicy inputPortPolicyConfig qce address destination Switch(config-controller-ProvisionQos)# setInputPortPolicy inputPortPolicyConfig qce key double_tag Switch(config-controller-ProvisionQos)# setInputPortPolicy inputPortPolicyConfig service_policy attach</pre>	<ul style="list-style-type: none"> <li>• <b>enable</b>—Enables the marking.</li> <li>• <b>disable</b>—Disables the marking.</li> <li>• <b>match</b>—Matches input packet COS.</li> <li>• <b>cos</b>—Sets the COS value. <ul style="list-style-type: none"> <li>◦ <b>value_0</b>—Sets the COS value 0.</li> <li>◦ <b>value_1</b>—Sets the COS value 1.</li> <li>◦ <b>value_2</b>—Sets the COS value 2.</li> <li>◦ <b>value_3</b>—Sets the COS value 3.</li> <li>◦ <b>value_4</b>—Sets the COS value 4.</li> <li>◦ <b>value_5</b>—Sets the COS value 5.</li> <li>◦ <b>value_6</b>—Sets the COS value 6.</li> <li>◦ <b>value_7</b>—Sets the COS value 7.</li> </ul> </li> <li>• <b>mark_egress_class egress_queue</b>—Sets the egress queue value. The valid range is from 0 to 7. Queue 8 is invalid.</li> <li>• <b>port_number port_number</b>—Sets the port number. The valid range is from 1 to 6. Port 7 is invalid.</li> <li>• <b>port_policer</b>—Sets port level policer.</li> <li>• <b>cir kbps</b>—Sets committed information rate in kbps. The valid range is from 100 to 1000000.</li> <li>• <b>state</b>—Enables or disables the policer state.</li> <li>• <b>qce</b>—Sets TCAM based QoS control entry settings for the port.</li> <li>• <b>address</b>—Matches the source or destination address of incoming packet in QCE.</li> <li>• <b>destination</b>—Matches against destination address.</li> <li>• <b>source</b>—Matches against source address.</li> <li>• <b>key</b>—Matches the key template in QCE. The default is normal. <ul style="list-style-type: none"> <li>◦ <b>double_tag</b>—Matches against Match outer tag, inner tag, IP protocol, DSCP and DPORT.</li> <li>◦ <b>ip_address</b>—Matches against Match outer tag, SMAC/DMAC, IP protocol, DSCP, SIP and DIP.</li> </ul> </li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>◦ <b>mac_ip_addr</b>—Match outer tag, inner tag, SMAC, DMAC, IP protocol, DSCP, SIP,DIP, SPORT and DPORT.</li> <li>◦ <b>normal</b>—Match outer tag, SMAC/DMAC, IP protocol, DSCP, SIP/DIP, SPORT and DPORT (default).</li> </ul> <ul style="list-style-type: none"> <li>• <b>service_policy</b>—Attaches or detaches the service policy on the port.</li> <li>• <b>attach</b>—Attaches the service policy and enables the configuration.</li> <li>• <b>detach</b>—Removes the service policy, removes the configuration and restores the default configuration.</li> </ul>
<p><b>Step 3</b></p>	<p><b>setInputPortPolicy review</b></p> <p><b>Example:</b>  Switch(config-controller-ProvisionQos)#  <b>setInputPortPolicy review</b></p> <p>Commands in queue:  Commands in queue:  setInputPortPolicy inputPortPolicyConfig  egress_class_marking enable  setInputPortPolicy inputPortPolicyConfig  globalDscpBasedDscpIngressMarking enable  setInputPortPolicy inputPortPolicyConfig  globalDscpBasedEgressClassMarking enable  setInputPortPolicy inputPortPolicyConfig match  cos value_0 mark_egress_class 5  setInputPortPolicy inputPortPolicyConfig match  cos value_0 mark_egress_class 5  setInputPortPolicy inputPortPolicyConfig  port_policer state enable  setInputPortPolicy inputPortPolicyConfig  port_number 1  setInputPortPolicy inputPortPolicyConfig  port_policer cir 1000  setInputPortPolicy inputPortPolicyConfig  port_policer state enable  setInputPortPolicy inputPortPolicyConfig qce  address source  setInputPortPolicy inputPortPolicyConfig qce  key normal  setInputPortPolicy inputPortPolicyConfig  service_policy attach</p>	<p>Displays the QoS configuration on the controller.</p>
<p><b>Step 4</b></p>	<p><b>setInputPortPolicycommit</b></p> <p><b>Example:</b>  Switch(config-controller-ProvisionQos)#  <b>setInputPortPolicy commit</b></p>	<p>Sends the QoS configuration to the NID.</p>

	Command or Action	Purpose
<b>Step 5</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# <b>exit</b>	Exits the QoS provisioning mode.

### Configuration Example

The example shows how to configure QoS input port policy on the controller:

```
Switch(config-controller-ProvisionQos)# setInputPortPolicy inputPortPolicyConfig
egress_class_marking enable
Switch(config-controller-ProvisionQos)# setInputPortPolicy inputPortPolicyConfig
globalDscpBasedDscpIngressMarking enable
Switch(config-controller-ProvisionQos)# setInputPortPolicy inputPortPolicyConfig
globalDscpBasedEgressClassMarking enable
Switch(config-controller-ProvisionQos)# setInputPortPolicy inputPortPolicyConfig match cos
value_0
Switch(config-controller-ProvisionQos)# setInputPortPolicy inputPortPolicyConfig port_number
1
Switch(config-controller-ProvisionQos)# setInputPortPolicy inputPortPolicyConfig port_policer
cir 1000
Switch(config-controller-ProvisionQos)# setInputPortPolicy inputPortPolicyConfig port_policer
state enable
Switch(config-controller-ProvisionQos)# setInputPortPolicy inputPortPolicyConfig qce address
destination
Switch(config-controller-ProvisionQos)# setInputPortPolicy inputPortPolicyConfig qce key
double_tag
Switch(config-controller-ProvisionQos)# setInputPortPolicy inputPortPolicyConfig
service_policy attach
Switch(config-controller-ProvisionQos)# setInputPortPolicy review
Commands in queue:
  Commands in queue:
    setInputPortPolicy inputPortPolicyConfig egress_class_marking enable
    setInputPortPolicy inputPortPolicyConfig globalDscpBasedDscpIngressMarking enable
    setInputPortPolicy inputPortPolicyConfig globalDscpBasedEgressClassMarking enable
    setInputPortPolicy inputPortPolicyConfig match cos value_0 mark_egress_class 5
    setInputPortPolicy inputPortPolicyConfig match cos value_0 mark_egress_class 5
    setInputPortPolicy inputPortPolicyConfig port_policer state enable
    setInputPortPolicy inputPortPolicyConfig port_number 1
    setInputPortPolicy inputPortPolicyConfig port_policer cir 1000
    setInputPortPolicy inputPortPolicyConfig port_policer state enable
    setInputPortPolicy inputPortPolicyConfig qce address source
    setInputPortPolicy inputPortPolicyConfig qce key normal
    setInputPortPolicy inputPortPolicyConfig service_policy attach
Switch(config-controller-ProvisionQos)# setInputPortPolicy commit
SetInputPortPolicy Commit Success!!!
Switch(config-controller-ProvisionQos)# exit
```

## Configuring QoS Output Policy Features Globally on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS](#), on page 254.

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>setOutputGlobalPolicy {commit   flush   outputGlobalPolicyConfig   review}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# setOutputGlobalPolicy ?   commit                commit setOutputGlobalPolicy   flush                flush all setOutputGlobalPolicy commands from queue   outputGlobalPolicyConfig configure Global Output QoS features   review                review setOutputGlobalPolicy commands</pre>	<p>Sets the global output QoS policy.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the QoS configuration to NID.</li> <li>• <b>flush</b>—Flushes all QoS configuration from the queue.</li> <li>• <b>outputGlobalPolicyConfig</b>—Sets the output policy global configuration on the controller.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
Step 2	<p><b>setOutputGlobalPolicy outputGlobalPolicyConfig {match_DSCP value_xx {mark_DSCP dscp_value}   service_policy {attach   detach}}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# setOutputGlobalPolicy outputGlobalPolicyConfig match_DSCP value_01 mark_DSCP 1 Switch(config-controller-ProvisionQos)# setOutputGlobalPolicy outputGlobalPolicyConfig service_policy attach</pre>	<p>Configures output global policy.</p> <ul style="list-style-type: none"> <li>• <b>match_DSCP</b>—Matches a particular DSCP value .</li> <li>• <b>value_xx</b>—Sets DSCP values on the controller. Use the following values: <ul style="list-style-type: none"> <li>• <b>value_00</b> DSCP 0. Default PHB for best effort traffic</li> <li><b>value_01</b> DSCP 1</li> <li><b>value_02</b> DSCP 2</li> <li><b>value_03</b> DSCP 3</li> <li><b>value_04</b> DSCP 4</li> <li><b>value_05</b> DSCP 5</li> <li><b>value_06</b> DSCP 6</li> <li><b>value_07</b> DSCP 7</li> <li><b>value_08</b> CS1. Class Selector PHB precedence 1(DSCP 8)</li> <li><b>value_09</b> DSCP 9</li> <li><b>value_10</b> AF11. Assured Forwarding PHB (DSCP 10)</li> <li><b>value_11</b> DSCP 11</li> <li><b>value_12</b> AF12. Assured Forwarding PHB (DSCP 12)</li> <li><b>value_13</b> DSCP 13</li> <li><b>value_14</b> AF13. Assured Forwarding PHB (DSCP 14)</li> <li><b>value_15</b> DSCP 15</li> <li><b>value_16</b> CS2. Class Selector PHB precedence 1(DSCP 16)</li> <li><b>value_16</b> CS2. Class Selector PHB precedence 1(DSCP 16)</li> <li><b>value_17</b> DSCP 17</li> </ul> </li> </ul>

Command or Action	Purpose
	<p> <b>value_18</b> AF21. Assured Forwarding PHB (DSCP 18)  <b>value_19</b> DSCP 19  <b>value_20</b> AF22. Assured Forwarding PHB (DSCP 20)  <b>value_21</b> DSCP 21  <b>value_22</b> AF23. Assured Forwarding PHB (DSCP 22)  <b>value_23</b> DSCP 23  <b>value_24</b> CS3. Class Selector PHB precedence 1(DSCP 24)  <b>value_25</b> DSCP 25  <b>value_26</b> AF31. Assured Forwarding PHB (DSCP 26)  <b>value_27</b> DSCP 27  <b>value_28</b> AF32. Assured Forwarding PHB (DSCP 28)  <b>value_29</b> DSCP 29  <b>value_30</b> AF33. Assured Forwarding PHB (DSCP 30)  <b>value_31</b> DSCP 31  <b>value_32</b> CS4. Class Selector PHB precedence 1(DSCP 32)  <b>value_33</b>DSCP 33  <b>value_34</b> AF41. Assured Forwarding PHB (DSCP 34)  <b>value_35</b> DSCP 35  <b>value_36</b> AF42. Assured Forwarding PHB (DSCP 36)  <b>value_37</b> DSCP 37  <b>value_38</b> AF43. Assured Forwarding PHB (DSCP 38)  <b>value_39</b> DSCP 39  <b>value_40</b> CS5. Class Selector PHB precedence 1(DSCP 40)  <b>value_41</b> DSCP 41  <b>value_42</b> DSCP 42  <b>value_43</b> DSCP 43  <b>value_44</b> VA. Voice Admit PHB(DSCP 44)  <b>value_45</b> DSCP 45  <b>value_46</b> Expedited Forwarding PHB(DSCP 46)  <b>value_47</b> DSCP 47  <b>value_48</b> CS6. Class Selector PHB precedence 1(DSCP 48)  <b>value_49</b> DSCP 49  <b>value_50</b> DSCP 50  <b>value_51</b> DSCP 51 </p>



	Command or Action	Purpose
		<p> <b>value_52</b> DSCP 52  <b>value_53</b> DSCP 53  <b>value_54</b> DSCP 54  <b>value_55</b> DSCP 55  <b>value_56</b> CS7. Class Selector PHB precedence 1(DSCP 56)  <b>value_57</b> DSCP 57  <b>value_58</b> DSCP 58  <b>value_59</b> DSCP 59  <b>value_60</b> DSCP 60  <b>value_61</b> DSCP 61  <b>value_62</b> DSCP 62  <b>value_63</b> DSCP 63                 </p> <ul style="list-style-type: none"> <li>• <b>mark_DSCP</b>—Marks the DSCP on the controller. The valid range is from 0 to 63. 64 is invalid.</li> <li>• <b>service_policy</b>—Applies the service policy.</li> <li>• <b>attach</b>—Adds the service policy.</li> <li>• <b>detach</b>—Removes the service policy.</li> </ul>
<p><b>Step 3</b></p>	<p><b>setOutputGlobalPolicy review</b></p> <p><b>Example:</b>                      Switch(config-controller-ProvisionQos) #  <b>setOutputGlobalPolicy review</b></p> <p>Commands in queue:                      setOutputGlobalPolicy                      outputGlobalPolicyConfig match_DSCP                      value_01 mark_DSCP 1                      setOutputGlobalPolicy                      outputGlobalPolicyConfig service_policy                      attach</p>	<p>Displays the QoS configuration on the controller.</p>
<p><b>Step 4</b></p>	<p><b>setOutputGlobalPolicycommit</b></p> <p><b>Example:</b>                      Switch(config-controller-ProvisionQos) #  <b>setOutputGlobalPolicy commit</b></p>	<p>Sends the QoS configuration to the NID.</p>
<p><b>Step 5</b></p>	<p><b>exit</b></p> <p><b>Example:</b>                      Switch(config-controller-ProvisionQos) #  <b>exit</b></p>	<p>Exits the QoS provisioning mode.</p>

### Configuration Example

The example shows how to configure QoS output policy globally on the controller:

```
Switch(config-controller-ProvisionQos) # setOutputGlobalPolicy outputGlobalPolicyConfig
match_DSCP value_00 mark_DSCP 4
Switch(config-controller-ProvisionQos) # setOutputGlobalPolicy outputGlobalPolicyConfig
service_policy attach
Switch(config-controller-ProvisionQos) # setOutputGlobalPolicy review
Commands in queue:
    setOutputGlobalPolicy outputGlobalPolicyConfig match_DSCP value_01 mark_DSCP 1
    setOutputGlobalPolicy outputGlobalPolicyConfig service_policy attach

Switch(config-controller-ProvisionQos) # setOutputGlobalPolicy commit
SetOutputGlobalPolicy Commit Success!!!
Switch(config-controller-ProvisionQos) # exit
```

## Configuring QoS Output Policy Features at Port level on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS](#), on page 254.

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>setOutputPortPolicy</b> {commit   flush   outputPortPolicyConfig   review}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos) # setOutputPortPolicy ?     commit                commit setOutputPortPolicy     flush                 flush all setOutputPortPolicy commands from queue outputPortPolicyConfig configure Output policy on Physical Port review                   review setOutputPortPolicy commands</pre>	<p>Sets the output QoS policy at port level.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the QoS configuration to NID.</li> <li>• <b>flush</b>—Flushes all QoS configuration from the queue.</li> <li>• <b>outputPortPolicyConfig</b>—Sets the output policy configuration at port level on the controller.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
Step 2	<p><b>outputPortPolicyConfig</b> {cos_marking {enable   disable}   globalDscpBasedDscpEgressMarking {enable   disable}   matchegress_class_xx {bandwidth {priority_level pr_level   remaining_ratio ratio}   mark_cos mark_cos_value   shaper {rate rate_value   state {enable   disable}}}   port_numberport_number   port_shape {rate rate_value   state {enable   disable}}   service_policy {attach   detach}}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos) # setOutputPortPolicy outputPortPolicyConfig cos_marking enable Switch(config-controller-ProvisionQos) #</pre>	<p>Configures output policy at port.</p> <ul style="list-style-type: none"> <li>• <b>cos_marking</b>—Enables egress class marking as configured per each cos matched packet.</li> <li>• <b>globalDscpBasedDscpEgressMarking</b>—Enables DSCP based DSCP egress marking on the port as per the configured global policy.</li> <li>• <b>enable</b>—Enables the marking.</li> <li>• <b>disable</b>—Disables the marking.</li> <li>• <b>match</b>—Matches output packet COS.</li> </ul>

	Command or Action	Purpose
	<pre> setOutputPortPolicy outputPortPolicyConfig globalDscpBasedDscpEgressMarking enable Switch(config-controller-ProvisionQos)# setOutputPortPolicy outputPortPolicyConfig match egress_class_0 bandwidth priority_level 8 Switch(config-controller-ProvisionQos)# setOutputPortPolicy outputPortPolicyConfig match egress_class_0 bandwidth remaining_ratio 20 Switch(config-controller-ProvisionQos)# setOutputPortPolicy outputPortPolicyConfig match egress_class_0 mark_cos 7 Switch(config-controller-ProvisionQos)# setOutputPortPolicy outputPortPolicyConfig port_number 1 Switch(config-controller-ProvisionQos)# setOutputPortPolicy outputPortPolicyConfig port_shaper rate 1000 Switch(config-controller-ProvisionQos)# setOutputPortPolicy outputPortPolicyConfig port_shaper state enable Switch(config-controller-ProvisionQos)# setOutputPortPolicy outputPortPolicyConfig service_policy attach </pre>	<ul style="list-style-type: none"> <li>◦ <b>all-egress_classes</b>—Sets the egress for all queues from 0 to 7.</li> <li>◦ <b>egress_class_0</b>—Sets queue 0, lowest priority.</li> <li>◦ <b>egress_class_1</b>—Sets queue 1.</li> <li>◦ <b>egress_class_2</b>—Sets queue 2.</li> <li>◦ <b>egress_class_3</b>—Sets queue 3.</li> <li>◦ <b>egress_class_4</b>—Sets queue 4.</li> <li>◦ <b>egress_class_5</b>—Sets queue 5, higher priority.</li> <li>◦ <b>egress_class_6</b>—Sets queue 6, highest priority.</li> <li>• <b>bandwith</b> —Sets scheduling scheme.</li> <li>• <b>priority_level <i>pr_level</i></b>—Configures priority scheduling. The valid range is from 1 to 8.</li> <li>• <b>remaining_ratio <i>ratio</i></b>—Configures weighted round robin mode of scheduling. The valid range is from 1 to 100.</li> <li>• <b>shaper</b> —Configures queue level shaper.</li> <li>• <b>mark_cos <i>cos_value</i></b>—Sets the COS value for marking. The valid range is from 0 to 7. COS 8 is invalid.</li> <li>• <b>port_number <i>port_number</i></b>—Sets the port number. The valid range is from 1 to 6. Port 7 is invalid.</li> <li>• <b>port_shaper</b>—Sets port level shaper.</li> <li>• <b>rate <i>kbps</i></b>—Sets shaper rate in kbps. The valid range is from 100 to 1000000.</li> <li>• <b>state</b>—Enables or disables the port shaper state.</li> <li>• <b>service_policy</b>—Sets the service policy on the port.</li> <li>• <b>attach</b>—Adds the service policy.</li> <li>• <b>detach</b>—Removes the service policy.</li> </ul>
<b>Step 3</b>	<p><b>setOutputPortPolicy review</b></p> <p><b>Example:</b></p> <pre> Switch(config-controller-ProvisionQos)# setOutputPortPolicy review </pre> <p>Commands in queue:</p> <pre> setOutputPortPolicy outputPortPolicyConfig cos_marking enable </pre>	Displays the QoS configuration on the controller.

	Command or Action	Purpose
	<pre> setOutputPortPolicy outputPortPolicyConfig globalDscpBasedDscpEgressMarking enable setOutputPortPolicy outputPortPolicyConfig match egress_class_0 bandwidth priority_level 8 setOutputPortPolicy outputPortPolicyConfig match all-egress_classes mark_cos 7 setOutputPortPolicy outputPortPolicyConfig port_number 4 setOutputPortPolicy outputPortPolicyConfig port_shaper rate 100 setOutputPortPolicy outputPortPolicyConfig port_shaper state enable setOutputPortPolicy outputPortPolicyConfig service_policy attach </pre>	
<b>Step 4</b>	<p><b>setOutputPortPolicycommit</b></p> <p><b>Example:</b> Switch(config-controller-ProvisionQos)# <b>setOutputPortPolicy commit</b></p>	Sends the QoS configuration to the NID.
<b>Step 5</b>	<p><b>exit</b></p> <p><b>Example:</b> Switch(config-controller-ProvisionQos)# <b>exit</b></p>	Exits the QoS provisioning mode.

### Configuration Example

The example shows how to configure QoS output port policy on the controller:

```

Switch(config-controller-ProvisionQos)# setOutputPortPolicy outputPortPolicyConfig cos_marking
enable
Switch(config-controller-ProvisionQos)# setOutputPortPolicy outputPortPolicyConfig
globalDscpBasedDscpEgressMarking enable
Switch(config-controller-ProvisionQos)# setOutputPortPolicy outputPortPolicyConfig match
egress_class_0 bandwidth priority_level 8
Switch(config-controller-ProvisionQos)# setOutputPortPolicy outputPortPolicyConfig match
egress_class_0 bandwidth remaining_ratio 20
Switch(config-controller-ProvisionQos)# setOutputPortPolicy outputPortPolicyConfig match
egress_class_0 mark_cos 7
Switch(config-controller-ProvisionQos)# setOutputPortPolicy outputPortPolicyConfig port_number
1
Switch(config-controller-ProvisionQos)# setOutputPortPolicy outputPortPolicyConfig port_shaper
rate 1000
Switch(config-controller-ProvisionQos)# setOutputPortPolicy outputPortPolicyConfig port_shaper
state enable
Switch(config-controller-ProvisionQos)# setOutputPortPolicy outputPortPolicyConfig
service_policy attach
Switch(config-controller-ProvisionQos)# setOutputPortPolicy review
Commands in queue:
    setOutputPortPolicy outputPortPolicyConfig cos_marking enable
    setOutputPortPolicy outputPortPolicyConfig globalDscpBasedDscpEgressMarking enable
    setOutputPortPolicy outputPortPolicyConfig match egress_class_0 bandwidth
priority_level 8
    setOutputPortPolicy outputPortPolicyConfig match all-egress_classes mark_cos 7
    setOutputPortPolicy outputPortPolicyConfig port_number 4
    setOutputPortPolicy outputPortPolicyConfig port_shaper rate 100
    setOutputPortPolicy outputPortPolicyConfig port_shaper state enable
    setOutputPortPolicy outputPortPolicyConfig service_policy attach
Switch(config-controller-ProvisionQos)# setOutputPortPolicy commit

```

```
SetInputPortPolicy Commit Success!!!
Switch(config-controller-ProvisionQos)# exit
```

## Configuring QoS Control Entry (QCE) on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS, on page 254](#).

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>setQCE</b> {commit   flush   QCE_configuration   review}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# setQCE ?   QCE_configuration  setQCE (default)   commit             commit setQCE   flush              flush all setQCE commands from   queue   review             review setQCE commands</pre>	<p>Sets QCE configuration.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the QoS configuration to NID.</li> <li>• <b>flush</b>—Flushes all QoS configuration from the queue.</li> <li>• <b>QCE_configuration</b>—Sets the default QCE on the controller.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
Step 2	<p><b>setQCE</b> QCE_configuration {control {actions   ingress_match}   qce-id}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration control action mark_Cos 4 Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration ingress_match frame_type any match_fields inner_cos val_0-1 Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration ingress_match frame_type any match_type vlan c_tagged Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration qce-id 4</pre>	<p>Configures QCE.</p> <ul style="list-style-type: none"> <li>• <b>control</b>—Configures QCE.</li> <li>• <b>actions</b>—Configures QCE actions. See <a href="#">Configuring QoS Control Entry (QCE) Control Actions on the Controller, on page 270</a>.</li> <li>• <b>ingress_match</b>—Configures ingress match. See <a href="#">Configuring QCE Match Ingress Parameters on the Controller, on page 272</a>.</li> <li>• <b>qce-id</b>—Specifies the QCE ID. The valid range is from 1 to 1024. 0 is invalid.</li> </ul>
Step 3	<p><b>setQCE</b> review</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# setQCE review</pre>	<p>Displays the QoS configuration on the controller.</p>
Step 4	<p><b>setQCE</b> commit</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# setQCE commit</pre>	<p>Sends the QoS configuration to the NID.</p>

	Command or Action	Purpose
Step 5	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# <b>exit</b>	Exits the QoS provisioning mode.

### Configuration Example

The example shows how to configure QoS QCE on the controller:

```
Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration control action mark_Cos 4
Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration ingress_match frame_type
any match_fields inner_cos val_0-1
Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration ingress_match frame_type
any match_type vlan c_tagged
Switch(config-controller-ProvisionQos)# setQCE review

Commands in queue:
  setQCE QCE_configuration control actions mark_COS 4
  setQCE QCE_configuration control actions mark_DSCP 3
  setQCE QCE_configuration control actions mark_egress_class 4
  setQCE QCE_configuration control ingress_match frame_type any
  setQCE QCE_configuration control ingress_match inner_tag_match match_fields inner_cos
  val_0-1

Switch(config-controller-ProvisionQos)# setQCE commit
SetQCE Commit Success!!!
Switch(config-controller-ProvisionQos)# exit
```

## Configuring QoS Control Entry (QCE) Control Actions on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS, on page 254](#).

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>setQCE QCE_configuration {control {actions   ingress_match}   qce-id}</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# <b>setQCE QCEconfiguration control action mark_Cos 4</b> Switch(config-controller-ProvisionQos)# <b>setQCE QCEconfiguration ingress_match frame_type any match_fields inner_cos val_0-1</b> Switch(config-controller-ProvisionQos)# <b>setQCE QCEconfiguration ingress_match frame_type any match_type vlan c_tagged</b>	Configures QCE. <ul style="list-style-type: none"> <li>• <b>control</b>—Configures QCE.</li> <li>• <b>actions</b>—Configures QCE actions. See <a href="#">Configuring QoS Control Entry (QCE) Control Actions on the Controller, on page 270</a>.</li> <li>• <b>ingress_match</b>—Configures ingress match. See <a href="#">Configuring QCE Match Ingress Parameters on the Controller, on page 272</a>.</li> </ul>

	Command or Action	Purpose
	Switch(config-controller-ProvisionQos)# <b>setQCE QCEconfiguration qce-id 4</b>	<ul style="list-style-type: none"> <li>• <b>qce-id</b>—Specifies the QCE ID. The valid range is from 1 to 1024. 0 is invalid.</li> </ul>
<b>Step 2</b>	<b>setQCE QCE_configurationcontrol {actions {mark_COS cos_vlaue   mark_DSCP dscp_vlaue   mark_egress_class egress_queue}}</b>  <b>Example:</b>  Switch(config-controller-ProvisionQos)# <b>setQCE QCEconfiguration control action mark_Cos 4</b> Switch(config-controller-ProvisionQos)# <b>setQCE QCEconfiguration control action mark_DSCP 3</b> Switch(config-controller-ProvisionQos)# <b>setQCE QCEconfiguration control action mark_egress_class 4</b>	<ul style="list-style-type: none"> <li>• <b>control</b>—Configures QCE.</li> <li>• <b>actions</b>—Configures QCE actions.</li> <li>• <b>mark_COS cos_vlaue</b>—Marks the Cos packets. The valid range is from 0 to 7. Value 8 is invalid.</li> <li>• <b>mark_DSCP dscp_vlaue</b>—Marks the DSCP packets. The valid range is from 0 to 63. Value 64 is invalid.</li> <li>• <b>mark_egress_class egress_queue</b>—Marks the egress queue. The valid range is from 0 to 7. Value 8 is invalid.</li> </ul>
<b>Step 3</b>	<b>setQCE review</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# <b>setQCE review</b>	Displays the QoS configuration on the controller.
<b>Step 4</b>	<b>setQCE commit</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# <b>setQCE commit</b>	Sends the QoS configuration to the NID.
<b>Step 5</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# <b>exit</b>	Exits the QoS provisioning mode.

### Configuration Example

The example shows how to configure QoS input policy globally on the controller:

```
Switch(config-controller-ProvisionQos)# setQCE QCEConfig match_DSCP value_00 mark_DSCP 4
Switch(config-controller-ProvisionQos)# setQCE QCEConfig match_DSCP value_00 mark_egress_class 4
Switch(config-controller-ProvisionQos)# setQCE QCEConfig service_policy attach
Switch(config-controller-ProvisionQos)# setQCE review
Commands in queue:
    setQCE QCE_configuration control actions mark_COS 4
    setQCE QCE_configuration control actions mark_DSCP 3
    setQCE QCE_configuration control actions mark_egress_class 4

Switch(config-controller-ProvisionQos)# setQCE commit
Switch(config-controller-ProvisionQos)# exit
```

## Configuring QCE Match Ingress Parameters on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS, on page 254](#).

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>setQCE QCE_configuration {control {actions   ingress_match}   qce-id}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration control action mark_Cos 4 Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration ingress_match frame_type any match_fields inner_cos val_0-1 Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration ingress_match frame_type any match_type vlan c_tagged Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration qce-id 4</pre>	<p>Configures QCE.</p> <ul style="list-style-type: none"> <li>• <b>control</b>—Configures QCE.</li> <li>• <b>actions</b>—Configures QCE actions. See <a href="#">Configuring QoS Control Entry (QCE) Control Actions on the Controller, on page 270</a>.</li> <li>• <b>ingress_match</b>—Configures ingress match. See <a href="#">Configuring QCE Match Ingress Parameters on the Controller, on page 272</a>.</li> <li>• <b>qce-id</b>—Specifies the QCE ID. The valid range is from 1 to 1024. 0 is invalid.</li> </ul>
Step 2	<p><b>setQCE QCE_configuration control ingress_match {frame_type   inner_tag_match   mac_params outer_tag_match   ports}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# setQCE QCE_configuration control ingress_match frame_type any match_fields inner_cos val_0-1 any Switch(config-controller-ProvisionQos)# setQCE QCE_configuration control ingress_match inner_tag_match match_fields inner_cos val_0-3 Switch(config-controller-ProvisionQos)# setQCE QCE_configuration control ingress_match mac_params dmac_filter any Switch(config-controller-ProvisionQos)# setQCE QCE_configuration control ingress_match outer_tag_match match_fields cos val_2-3 Switch(config-controller-ProvisionQos)# setQCE QCE_configuration control ingress_match ports gigabitEthernet_2 enable</pre>	<ul style="list-style-type: none"> <li>• <b>ingress_match</b>—Configures ingress match. <ul style="list-style-type: none"> <li>◦ <b>frame_type</b>—Matches against frame payload. See <a href="#">Configuring QCE Control Ingress Match Frame Type Parameter on the Controller, on page 273</a>.</li> <li>◦ <b>inner_tag_match</b>—Matches against inner tag. See <a href="#">Configuring QCE Control Ingress Inner Tag Match Parameter on the Controller, on page 277</a>.</li> <li>◦ <b>mac_params</b>—Matches against MAC filters. See <a href="#">Configuring QCE Control Ingress MAC Params Parameter on the Controller, on page 279</a>.</li> <li>◦ <b>outer_tag_match</b>—Matches against outer tag. See <a href="#">Configuring QCE Control Ingress Outer Tag Match Parameter on the Controller, on page 281</a>.</li> <li>◦ <b>ports</b>—Matches against ports. See <a href="#">Configuring QCE Control Ingress Ports Parameter on the Controller, on page 283</a>.</li> </ul> </li> </ul>



	Command or Action	Purpose
<b>Step 3</b>	<b>setQCE review</b>  <b>Example:</b> Switch(config-controller-ProvisionQos) # <b>setQCE review</b>	Displays the QoS configuration on the controller.
<b>Step 4</b>	<b>setQCE commit</b>  <b>Example:</b> Switch(config-controller-ProvisionQos) # <b>setQCE commit</b>	Sends the QoS configuration to the NID.
<b>Step 5</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionQos) # <b>exit</b>	Exits the QoS provisioning mode.

### Configuration Example

The example shows how to configure QCE control ingress match parameters on the controller:

```
Switch(config-controller-ProvisionQos) # setQCE QCE-configuration control ingress_match
frame_type any match_fields inner_cos val_0-1 any
Switch(config-controller-ProvisionQos) # setQCE QCE_configuration control ingress_match
inner_tag_match match_fields inner_cos val_0-3
Switch(config-controller-ProvisionQos) # setQCE QCE_configuration control ingress_match
mac_params dmac_filter any
Switch(config-controller-ProvisionQos) # setQCE QCE_configuration control ingress_match
outer_tag_match match_fields cos val_2-3
Switch(config-controller-ProvisionQos) # setQCE QCE_configuration control ingress_match ports
gigabitEthernet_2 enable
Switch(config-controller-ProvisionQos) # setQCE review
Commands in queue:
    setQCE QCE_configuration control ingress_match inner_tag_match match_fields inner_cos
    val_0-3
    setQCE QCE_configuration control ingress_match mac_params dmac_filter any
    setQCE QCE_configuration control ingress_match outer_tag_match match_fields cos
    val_2-3
    setQCE QCE_configuration control ingress_match ports GigabitEthernet_2 enable

Switch(config-controller-ProvisionQos) # setQCE commit
Switch(config-controller-ProvisionQos) # exit
```

## Configuring QCE Control Ingress Match Frame Type Parameter on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS](#), on page 254.

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>setQCE QCE_configuration {control {actions   ingress_match}   qce-id}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration control action mark_Cos 4 Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration ingress_match frame_type any match_fields inner_cos val_0-1 Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration ingress_match frame_type any match_type vlan_c_tagged Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration qce-id 4</pre>	<p>Configures QCE.</p> <ul style="list-style-type: none"> <li>• <b>control</b>—Configures QCE.</li> <li>• <b>actions</b>—Configures QCE actions. See <a href="#">Configuring QoS Control Entry (QCE) Control Actions on the Controller</a>, on page 270.</li> <li>• <b>ingress_match</b>—Configures ingress match. See <a href="#">Configuring QCE Match Ingress Parameters on the Controller</a>, on page 272.</li> <li>• <b>qce-id</b>—Specifies the QCE ID. The valid range is from 1 to 1024. 0 is invalid.</li> </ul>
Step 2	<p><b>setQCE QCE_configuration control ingress_match frame_type {any   ipv4 {dest_ip_filter {any   host host_name   network {dest_ip_addr dest_add   dest_ip_mask dest_mask}}   dscp_filter {any   range range_value   specific dscp_filter}}   fragment_type {any   frag   non_frag}   protocol {any   specific protocol_value   tcp   udp}   source_ip_filter {any   host host_name   network {source_ip_addr source_ip_addr source_add   source_ip_mask source_mask}}   ipv6 {dest_ip_filter {any   specific {dest_ip_addr_32bits dest_add   dest_ip_mask_32bits dest_mask}}   dscp_filter {any   range range_value   specific dscp_filter}}   protocol {any   specific protocol_value   tcp   udp}   source_ip-filter {any   specific source_ip_addr_32bits source_add   source_ip_mask_32bits source_mask}}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type any Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type ipv4 dest_ip_filter any Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type ipv4 dest_ip_filter host host1 Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type ipv4 dest_ip_filter network dest_ip_addr addr2 Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type ipv4 dscp_filter host any Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type ipv4 dscp filter range 3-4 Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type ipv4 fragment_type frag Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type ipv4 protocol specific 45</pre>	<ul style="list-style-type: none"> <li>• <b>control</b>—Configures QCE .</li> <li>• <b>ingress_match</b>—Configures ingress match. <ul style="list-style-type: none"> <li>◦ <b>frame_type</b>—Matches against frame payload.</li> <li>◦ <b>any</b>—Matches against any frame payload .</li> <li>◦ <b>ipv4</b>—Matches against IPv4 frames. <ul style="list-style-type: none"> <li>• <b>dest_ip_filter</b>—Matches against destination IP address filter .</li> <li>• <b>dscp_filter</b>—Matches against DSCP filter .</li> <li>• <b>fragment_type</b>—Matches against fragment type filter .</li> <li>• <b>protocol</b>—Matches against protocol filter .</li> <li>• <b>source_ip_filter</b>—Matches against source IP address filter .</li> </ul> </li> <li>◦ <b>ipv6</b>—Matches against IPv6 frames .</li> <li>◦ <b>any</b>—Matches against any IP address, or filter.</li> <li>◦ <b>host host_name</b>—Matches against a specified host .</li> <li>◦ <b>network</b>—Matches against a network .</li> <li>◦ <b>dest_ip_addr dest_add</b>—Matches against the destination IP address .</li> </ul> </li> </ul>

	Command or Action	Purpose
	<pre>Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type ipv4 source_ip_filter network source_ip_mask soumask Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type ipv6 dest_ip_filter any Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type ipv6 dest_ip_filter specific dest_ip_addr_32bits dest34 Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type ipv6 dscp_filter specific 45 any Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type ipv6 protocol specific 450 Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type ipv6 protocol specific 45 Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type ipv6 source_ip_filter specific source_ip_mask source-mask</pre>	<ul style="list-style-type: none"> <li>◦ <b>dest_ip_mask</b> <i>dest_mask</i>—Matches against the destination IP address mask.</li> <li>◦ <b>range</b> <i>range_value</i>—Matches against the specified range .</li> <li>◦ <b>specific</b> <i>dscp_filter</i>—Matches against the specific DSCP filter .</li> <li>◦ <b>frag</b>—Matches against the specified IP fragment type .</li> <li>◦ <b>non_frag</b>—Matches against the non fragment type .</li> <li>◦ <b>specific</b> <i>protocol_value</i>—Matches against the specific protocol value .</li> <li>◦ <b>tcp</b>—Matches against the TCP value .</li> <li>◦ <b>udp</b>—Matches against the UDP value .</li> <li>◦ <b>source_ip_addr</b> <i>source_addr</i>—Matches against the source IP address .</li> <li>◦ <b>source_ip_mask</b> <i>source_mask</i>—Matches against the source IP address mask.</li> <li>◦ <b>dest_ip_addr_32bits</b> <i>dest_add</i>—Matches against the destination IP address.</li> <li>◦ <b>dest_ip_mask_32bits</b> <i>dest_mask</i>—Matches against the destination IP address mask.</li> <li>◦ <b>source_ip_addr_32bits</b> <i>source_add</i>—Matches against the source IP address.</li> <li>◦ <b>source_ip_mask_32bits</b> <i>source_mask</i>—Matches against the source IP address mask.</li> </ul>
<b>Step 3</b>	<p><b>setQCE review</b></p> <p><b>Example:</b> Switch(config-controller-ProvisionQos)# <b>setQCE review</b></p>	Displays the QoS configuration on the controller.
<b>Step 4</b>	<p><b>setQCE commit</b></p> <p><b>Example:</b> Switch(config-controller-ProvisionQos)# <b>setQCE commit</b></p>	Sends the QoS configuration to the NID.

	Command or Action	Purpose
<b>Step 5</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# <b>exit</b>	Exits the QoS provisioning mode.

### Configuration Example

The example shows how to configure QCE Control Ingress Match frame type parameters on the controller:

```
Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type
any
Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type
ipv4 dest_ip_filter any
Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type
ipv4 dest_ip_filter host host1
Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type
ipv4 dest_ip_filter network dest_ip_addr addr2
Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type
ipv4 dscp_filter host any
Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type
ipv4 dscp_filter range 3-4
Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type
ipv4 fragment_type frag
Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type
ipv4 protocol_specific 45
Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type
ipv4 source_ip_filter network source_ip_mask soumask
Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type
ipv6 dest_ip_filter any
Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type
ipv6 dest_ip_filter specific dest_ip_addr 32bits dest34
Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type
ipv6 dscp_filter specific 45 any
Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type
ipv6 protocol_specific 450
Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type
ipv6 protocol_specific 45
Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match frame_type
ipv6 source_ip_filter specific source_ip_mask source-mask

Switch(config-controller-ProvisionQos)# setQCE review
Commands in queue:
    setQCE QCE_configuration control ingress_match inner_tag_match match_fields inner_cos
    val_0-3
    setQCE QCE_configuration control ingress_match outer_tag_match match_fields cos
    val_2-3
    setQCE QCE_configuration control ingress_match frame_type ipv6 dest_ip_filter any
    setQCE QCE_configuration control ingress_match frame_type ipv6 dscp_filter specific
    45
    setQCE QCE_configuration control ingress_match frame_type ipv6 protocol pecific 450
    setQCE QCE_configuration control ingress_match frame_type ipv6 source_ip_filter
    specific source_ip_mask_32bits source-mask

Switch(config-controller-ProvisionQos)# setQCE commit
Switch(config-controller-ProvisionQos)# exit
```

## Configuring QCE Control Ingress Inner Tag Match Parameter on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS, on page 254](#).

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>setQCE QCE_configuration {control {actions   ingress_match}   qce-id}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration control action mark_Cos 4 Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration ingress_match frame_type any match_fields inner_cos val_0-1 Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration ingress_match frame_type any match_type vlan c_tagged Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration qce-id 4</pre>	<p>Configures QCE.</p> <ul style="list-style-type: none"> <li>• <b>control</b>—Configures QCE.</li> <li>• <b>actions</b>—Configures QCE actions. See <a href="#">Configuring QoS Control Entry (QCE) Control Actions on the Controller, on page 270</a>.</li> <li>• <b>ingress_match</b>—Configures ingress match. See <a href="#">Configuring QCE Match Ingress Parameters on the Controller, on page 272</a>.</li> <li>• <b>qce-id</b>—Specifies the QCE ID. The valid range is from 1 to 1024. 0 is invalid.</li> </ul>
Step 2	<p><b>setQCE QCE_configuration control ingress_match inner_tag_match {match_fields {inner_cos inner_cos_xx   vlan_id_filter {any   range vlan_range   specific specific_vlan}}   match_type {any   c-tagged   s_tagged   tagged   untagged}}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match inner_tag_match match_fields inner_cos val_0-1 Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match inner_tag_match match_fields vlan_id_filter any Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match inner_tag_match match_fields vlan_id_filter range range1 Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match inner_tag_match match_fields vlan_id_filter specific 450 Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match inner_tag_match match_type c_tagged</pre>	<ul style="list-style-type: none"> <li>• <b>control</b>—Configures QCE.</li> <li>• <b>ingress_match</b>—Configures ingress match. <ul style="list-style-type: none"> <li>◦ <b>inner_tag_match</b>—Matches against inner tag value.</li> <li>◦ <b>match_fields</b>—Matches against tag fields . <ul style="list-style-type: none"> <li>◦ <b>inner-cos inner_cos_xx</b>—Matches against inner packet Cos value. <ul style="list-style-type: none"> <li>◦ <b>val_0-1</b>—Specifies packet COS 0-1.</li> <li>◦ <b>val_0-3</b>—Specifies packet COS 0-3.</li> <li>◦ <b>val_0-only</b>—Specifies packet COS 0.</li> <li>◦ <b>val_1-only</b>—Specifies packet COS 1.</li> <li>◦ <b>val_2-3</b>—Specifies packet COS 2-3.</li> <li>◦ <b>val_2-only</b>—Specifies packet COS 2-only.</li> <li>◦ <b>val_3-only</b>—Specifies packet COS 3-only.</li> <li>◦ <b>val_4-5</b>—Specifies packet COS 4-5.</li> <li>◦ <b>val_4-7</b>—Specifies packet COS 4-7.</li> <li>◦ <b>val_4-only</b>—Specifies packet COS 4-only.</li> </ul> </li> </ul> </li> </ul> </li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>◦ <b>val_5-only</b>—Specifies packet COS 5-only.</li> <li>◦ <b>val_6-7</b>—Specifies packet COS 6-7.</li> <li>◦ <b>val_6-only</b>—Specifies packet COS 6.</li> <li>◦ <b>val_7-only</b>—Specifies packet COS 7.</li> <li>◦ <b>val_any</b>—Specifies packet COS any.</li>   <li>◦ <b>vlan_id_filter</b>—Matches against VLAN ID filter.</li> <li>◦ <b>any</b>—Matches against any VLAN.</li> <li>◦ <b>range <i>vlan_range</i></b>—Matches against the specified VLAN range .</li> <li>◦ <b>specific <i>specific_vlan</i></b>—Matches against the specific VLAN. The valid range is from 1 to 4095.</li>   <li>◦ <b>match_type</b>—Matches against tag fields. <ul style="list-style-type: none"> <li>• <b>any</b>—Matches against any tagged .</li> <li>• <b>c-tagged</b>—Matches against C tagged .</li> <li>• <b>s-tagged</b>—Matches against S tagged .</li> <li>• <b>tagged</b>—Matches against tagged .</li> <li>• <b>untagged</b>—Matches against untagged .</li> </ul> </li> </ul>
<b>Step 3</b>	<b>setQCE review</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# <b>setQCE review</b>	Displays the QoS configuration on the controller.
<b>Step 4</b>	<b>setQCE commit</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# <b>setQCE commit</b>	Sends the QoS configuration to the NID.
<b>Step 5</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# <b>exit</b>	Exits the QoS provisioning mode.

## Configuration Example

The example shows how to configure QCE Control Match Ingress inner tag parameters on the controller:

```
Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match inner_tag_match
match_fields inner_cos val_0-1
Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match inner_tag_match
match_fields vlan_id_filter any
Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match inner_tag_match
match_fields vlan_id_filter range range1
Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match inner_tag_match
match_fields vlan_id_filter specific 450
Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match inner_tag_match
match_type c_tagged

Switch(config-controller-ProvisionQos)# setQCE review
Commands in queue:
    setQCE QCE_configuration control ingress_match inner_tag_match match_fields inner_cos
    val_0-1
    setQCE QCE_configuration control ingress_match inner_tag_match match_fields
    vlan_id_filter any
    setQCE QCE_configuration control ingress_match inner_tag_match match_fields
    vlan_id_filter range range1
    setQCE QCE_configuration control ingress_match inner_tag_match match_fields
    vlan_id_filter specific 450
    setQCE QCE_configuration control ingress_match inner_tag_match match_type c_tagged

Switch(config-controller-ProvisionQos)# setQCE commit
Switch(config-controller-ProvisionQos)# exit
```

## Configuring QCE Control Ingress MAC Params Parameter on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS, on page 254](#).

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<pre>setQCE QCE_configuration {control {actions   ingress_match}   qce-id}  Example:  Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration control action mark_Cos 4 Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration ingress_match frame_type any match_fields inner_cos val_0-1 Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration ingress_match frame_type any match_type vlan c_tagged Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration qce-id 4</pre>	<p>Configures QCE.</p> <ul style="list-style-type: none"> <li>• <b>control</b>—Configures QCE.</li> <li>• <b>actions</b>—Configures QCE actions. See <a href="#">Configuring QoS Control Entry (QCE) Control Actions on the Controller, on page 270</a>.</li> <li>• <b>ingress_match</b>—Configures ingress match. See <a href="#">Configuring QCE Match Ingress Parameters on the Controller, on page 272</a>.</li> <li>• <b>qce-id</b>—Specifies the QCE ID. The valid range is from 1 to 1024. 0 is invalid.</li> </ul>
Step 2	<pre>setQCE QCE_configuration {control ingress_match mac_params {dmac_filter {any   broadcast   multicast   specific</pre>	<ul style="list-style-type: none"> <li>• <b>control</b>—Configures QCE.</li> <li>• <b>ingress_match</b>—Configures ingress match.</li> </ul>

	Command or Action	Purpose
	<p><i>specific_filter</i>   <b>unicast</b>}   <b>smac_filter</b> {<b>any</b>   <b>specific</b> <i>specific_filter</i>}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos) # setQCE QCE_configuration ingress_match mac_params dmac_filter any Switch(config-controller-ProvisionQos) # setQCE QCE_configuration ingress_match mac_params dmac_filter broadcast Switch(config-controller-ProvisionQos) # setQCE QCE_configuration ingress_match mac_params dmac_filter specific filter1 Switch(config-controller-ProvisionQos) # setQCE QCE_configuration ingress_match mac_params smac_filter any Switch(config-controller-ProvisionQos) # setQCE QCE_configuration ingress_match mac_params smac_filter specific filter2</pre>	<ul style="list-style-type: none"> <li>• <b>mac_params</b>—Configures MAC filters.</li> <li>• <b>dmac_filter</b>—Configures destination MAC filters.</li> <li>• <b>smac_filter</b>—Configures source MAC filters.</li> <li>• <b>any</b>—Configures any MAC filter.</li> <li>• <b>broadcast</b>—Configures any broadcast MAC filter.</li> <li>• <b>multicast</b>—Configures any multicast MAC filter.</li> <li>• <b>specific</b> <i>specific_filter</i>—Configures specific MAC filter.</li> </ul>
<b>Step 3</b>	<p><b>setQCE review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos) # setQCE review</pre>	Displays the QoS configuration on the controller.
<b>Step 4</b>	<p><b>setQCE commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos) # setQCE commit</pre>	Sends the QoS configuration to the NID.
<b>Step 5</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos) # exit</pre>	Exits the QoS provisioning mode.

### Configuration Example

The example shows how to configure QCE Control Match Ingress MAC params parameters on the controller:

```
Switch(config-controller-ProvisionQos) # setQCE QCE_configuration ingress_match inner_tag_match
match_fields inner_cos val-0-1
Switch(config-controller-ProvisionQos) # setQCE QCE_configuration ingress_match inner_tag_match
match_fields vlan_id_filter any
Switch(config-controller-ProvisionQos) # setQCE QCE_configuration ingress_match inner_tag_match
match_fields vlan_id_filter range rangel
Switch(config-controller-ProvisionQos) # setQCE QCE_configuration ingress_match inner_tag_match
match_fields vlan_id_filter specific 450
Switch(config-controller-ProvisionQos) # setQCE QCE_configuration ingress_match inner_tag_match
match_type c-tagged

Switch(config-controller-ProvisionQos) # setQCE review
Commands in queue:
    setQCE QCE_configuration control ingress_match mac_params dmac_filter broadcast
    setQCE QCE_configuration control ingress_match mac_params smac_filter specific
source1
    setQCE QCE_configuration control ingress_match mac_params dmac_filter specific
```



```

filter1
    setQCE QCE_configuration control ingress_match mac_params smac_filter specific
filter2

Switch(config-controller-ProvisionQos)# setQCE commit
Switch(config-controller-ProvisionQos)# exit

```

## Configuring QCE Control Ingress Outer Tag Match Parameter on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS, on page 254](#).

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>setQCE QCE_configuration {control {actions   ingress_match}   qce-id}</b></p> <p><b>Example:</b></p> <pre> Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration control action mark_Cos 4 Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration ingress_match frame_type any match_fields inner_cos val_0-1 Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration ingress_match frame_type any match_type vlan_c_tagged Switch(config-controller-ProvisionQos)# setQCE QCEconfiguration qce-id 4 </pre>	<p>Configures QCE.</p> <ul style="list-style-type: none"> <li>• <b>control</b>—Configures QCE.</li> <li>• <b>actions</b>—Configures QCE actions. See <a href="#">Configuring QoS Control Entry (QCE) Control Actions on the Controller, on page 270</a>.</li> <li>• <b>ingress_match</b>—Configures ingress match. See <a href="#">Configuring QCE Match Ingress Parameters on the Controller, on page 272</a>.</li> <li>• <b>qce-id</b>—Specifies the QCE ID. The valid range is from 1 to 1024. 0 is invalid.</li> </ul>
Step 2	<p><b>setQCE QCE_configuration {control ingress_match outer_tag_match {match_fields {cos cos_xx   vlan_id_filter {any   range vlan_range   specific specific_vlan}   match_type {any   c-tagged   s_tagged   tagged   untagged}}</b></p> <p><b>Example:</b></p> <pre> Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match outer_tag_match match_fields cos val_0-1 Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match outer_tag_match match_fields vlan_id_filter any Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match outer_tag_match match_fields vlan_id_filter range range1 Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match outer_tag_match match_fields vlan_id_filter specific 230 Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match outer_tag_match match_type c-tagged </pre>	<ul style="list-style-type: none"> <li>• <b>control</b>—Configures QCE.</li> <li>• <b>ingress_match</b>—Configures ingress match. <ul style="list-style-type: none"> <li>◦ <b>outer_tag_match</b>—Matches against the outer tag value.</li> <li>◦ <b>match_fields</b>—Matches against outer tag fields . <ul style="list-style-type: none"> <li>◦ <b>cos cos_xx</b>—Matches against packet Cos value.</li> <li>◦ <b>val_0-1</b>—Specifies packet COS 0-1.</li> <li>◦ <b>val_0-3</b>—Specifies packet COS 0-3.</li> <li>◦ <b>val_0-only</b>—Specifies packet COS 0.</li> <li>◦ <b>val_1-only</b>—Specifies packet COS 1.</li> <li>◦ <b>val_2-3</b>—Specifies packet COS 2-3.</li> <li>◦ <b>val_2-only</b>—Specifies packet COS 2-only.</li> <li>◦ <b>val_3-only</b>—Specifies packet COS 3-only.</li> </ul> </li> </ul> </li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>◦ <b>val_4-5</b>—Specifies packet COS 4-5.</li> <li>◦ <b>val_4-7</b>—Specifies packet COS 4-7.</li> <li>◦ <b>val_4-only</b>—Specifies packet COS 4-only.</li> <li>◦ <b>val_5-only</b>—Specifies packet COS 5-only.</li> <li>◦ <b>val_6-7</b>—Specifies packet COS 6-7.</li> <li>◦ <b>val_6-only</b>—Specifies packet COS 6.</li> <li>◦ <b>val_7-only</b>—Specifies packet COS 7.</li> <li>◦ <b>val_any</b>—Specifies packet COS any.</li>   <li>◦ <b>vlan_id_filter</b>—Matches against VLAN ID filter.</li> <li>◦ <b>any</b>—Matches against any VLAN.</li> <li>◦ <b>range</b> <i>vlan_range</i>—Matches against the specified VLAN range .</li> <li>◦ <b>specific</b> <i>specific_vlan</i>—Matches against the specific VLAN. The valid range is from 1 to 4095.</li>   <li>◦ <b>match_type</b>—Matches against tag fields. <ul style="list-style-type: none"> <li>• <b>any</b>—Matches against any tagged .</li> <li>• <b>c-tagged</b>—Matches against C tagged .</li> <li>• <b>s-tagged</b>—Matches against S tagged .</li> <li>• <b>tagged</b>—Matches against tagged .</li> <li>• <b>untagged</b>—Matches against untagged .</li> </ul> </li> </ul>
<b>Step 3</b>	<b>setQCE review</b>  <b>Example:</b> Switch(config-controller-ProvisionQos) # <b>setQCE review</b>	Displays the QoS configuration on the controller.
<b>Step 4</b>	<b>setQCE commit</b>  <b>Example:</b> Switch(config-controller-ProvisionQos) # <b>setQCE commit</b>	Sends the QoS configuration to the NID.

	Command or Action	Purpose
Step 5	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# <b>exit</b>	Exits the QoS provisioning mode.

### Configuration Example

The example shows how to configure QCE Control Match Ingress outer tag parameters on the controller:

```
Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match outer_tag_match
match_fields cos val_0-1
Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match outer_tag_match
match_fields vlan_id_filter any
Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match outer_tag_match
match_fields vlan_id_filter range range1
Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match outer_tag_match
match_fields vlan_id_filter specific 230
Switch(config-controller-ProvisionQos)# setQCE QCE_configuration ingress_match outer_tag_match
match_type c-tagged

Switch(config-controller-ProvisionQos)# setQCE review
Commands in queue:
    setQCE QCE_configuration control ingress_match outer_tag_match match_fields
vlan_id_filter specific 230
    setQCE QCE_configuration control ingress_match outer_tag_match match_fields
vlan_id_filter range vlan2
    setQCE QCE_configuration control ingress_match outer_tag_match match_fields cos
val_0-1
    setQCE QCE_configuration control ingress_match outer_tag_match match_type c_tagged
Switch(config-controller-ProvisionQos)# setQCE commit
Switch(config-controller-ProvisionQos)# exit
```

## Configuring QCE Control Ingress Ports Parameter on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS, on page 254](#).

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>setQCE QCE_configuration {control {actions   ingress_match}   qce-id}</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# <b>setQCE QCEconfiguration control action mark_Cos 4</b> Switch(config-controller-ProvisionQos)# <b>setQCE</b>	Configures QCE. <ul style="list-style-type: none"> <li>• <b>control</b>—Configures QCE.</li> <li>• <b>actions</b>—Configures QCE actions. See <a href="#">Configuring QoS Control Entry (QCE) Control Actions on the Controller, on page 270</a>.</li> </ul>

	Command or Action	Purpose
	<pre>QCEconfiguration ingress_match frame_type any match_fields inner_cos val 0-1 Switch(config-controller-ProvisionQos) # setQCE QCEconfiguration ingress_match frame_type any match_type vlan c_tagged Switch(config-controller-ProvisionQos) # setQCE QCEconfiguration qce-id 4</pre>	<ul style="list-style-type: none"> <li>• <b>ingress_match</b>—Configures ingress match. See <a href="#">Configuring QCE Match Ingress Parameters on the Controller</a>, on page 272.</li> <li>• <b>qce-id</b>—Specifies the QCE ID. The valid range is from 1 to 1024. 0 is invalid.</li> </ul>
<b>Step 2</b>	<pre>setQCE QCE_configuration control ingress_match ports {GigabitEthernet_1   GigabitEthernet_2   GigabitEthernet_3   GigabitEthernet_4   GigabitEthernet_5   GigabitEthernet_6} {enable   disable}</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos) # setQCE QCE_configuration ingress_match ports GigabitEthernet_1 enable Switch(config-controller-ProvisionQos) # setQCE QCE_configuration ingress_match ports GigabitEthernet_3 disable</pre>	<ul style="list-style-type: none"> <li>• <b>control</b>—Configures QCE.</li> <li>• <b>ingress_match</b>—Configures ingress match.</li> <li>• <b>ports</b>—Configures ingress ports.</li> <li>• <b>GigabitEthernet_1</b>—Configures physical port 1.</li> <li>• <b>GigabitEthernet_2</b>—Configures physical port 2.</li> <li>• <b>GigabitEthernet_3</b>—Configures physical port 3.</li> <li>• <b>GigabitEthernet_4</b>—Configures physical port 4.</li> <li>• <b>GigabitEthernet_5</b>—Configures physical port 5.</li> <li>• <b>GigabitEthernet_6</b>—Configures physical port 6.</li> <li>• <b>enable</b>—Enables the port.</li> <li>• <b>disable</b>—Disables the port.</li> </ul>
<b>Step 3</b>	<pre>setQCE review</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos) # setQCE review</pre>	Displays the QoS configuration on the controller.
<b>Step 4</b>	<pre>setQCE commit</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos) # setQCE commit</pre>	Sends the QoS configuration to the NID.
<b>Step 5</b>	<pre>exit</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos) # exit</pre>	Exits the QoS provisioning mode.

### Configuration Example

The example shows how to configure QCE Control Match Ingress ports on the controller:

```
Switch(config-controller-ProvisionQos) # setQCE QCE_configuration ingress_match ports
GigabitEthernet_1 enable
Switch(config-controller-ProvisionQos) # setQCE QCE_configuration ingress_match ports
GigabitEthernet_3 disable
```

```
Switch(config-controller-ProvisionQos)# setQCE review
Commands in queue:
    setQCE QCE_configuration control ingress_match ports GigabitEthernet_1 enable
    setQCE QCE_configuration control ingress_match ports GigabitEthernet_3 disable

Switch(config-controller-ProvisionQos)# setQCE commit
Switch(config-controller-ProvisionQos)# exit
```

## Configuring System QoS on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS, on page 254](#).

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<pre>setSystemQosSettings {commit   flush   system_qos_config   review}</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# setSystemQosSettings ?   commit          commit setSystemQosSettings   flush           flush all setSystemQosSettings commands from queue   review          review setSystemQosSettings commands system_qos_config set System-wide QoS settings</pre>	<p>Sets the system QoS configuration.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the QoS configuration to NID.</li> <li>• <b>flush</b>—Flushes all QoS configuration from the queue.</li> <li>• <b>system_qos_config</b>—Sets the system wide QoS settings on the controller.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
Step 2	<pre>setSystemQosSettings system_qos_config WRED {egress_class_0   egress_class_1   egress_class_2   egress_class_3   egress_class_4   egress_class_5} {max_threshold threshold_value   min_threshold threshold_value   state {enable   disable}}</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# setSystemQosSettings system_qos_config WRED egress_class_0 max_threshold 20 Switch(config-controller-ProvisionQos)# setSystemQosSettings system_qos_config WRED egress_class_1 min_threshold 40 Switch(config-controller-ProvisionQos)# setSystemQosSettings system_qos_config WRED egress_class_2 state enable</pre>	<p>Configures system QoS.</p> <ul style="list-style-type: none"> <li>• <b>WRED</b>—Enables WRED algorithm for a non-priority queues on all ports.</li> <li>• <b>egress_class_0</b>—Egress queue 0.</li> <li>• <b>egress_class_1</b>—Egress queue 1.</li> <li>• <b>egress_class_2</b>—Egress queue 2.</li> <li>• <b>egress_class_3</b>—Egress queue 3.</li> <li>• <b>egress_class_4</b>—Egress queue 4.</li> <li>• <b>egress_class_5</b>—Egress queue 5.</li> <li>• <b>max_threshold threshold_value</b>—Sets the maximum threshold.</li> <li>• <b>min_threshold threshold_value</b>—Sets the minimum threshold.</li> <li>• <b>state</b>—Sets the WRED state per queue.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>enable</b>—Enables the WRED.</li> <li>• <b>disable</b>—Disables the WRED.</li> </ul>
<b>Step 3</b>	<b>setSystemQosSettings review</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# <b>setSystemQosSettings review</b>  Commands in queue: setSystemQosSettings system_qos_config WRED egress_class_0 max_threshold 20 setSystemQosSettings system_qos_config WRED egress_class_1 min_threshold 40 setSystemQosSettings system_qos_config WRED egress_class_2 state enable	Displays the QoS configuration on the controller.
<b>Step 4</b>	<b>setSystemQosSettingscommit</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# <b>setSystemQosSettings commit</b>	Sends the QoS configuration to the NID.
<b>Step 5</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# <b>exit</b>	Exits the QoS provisioning mode.

### Configuration Example

The example shows how to configure QOS system settings on the controller:

```
Switch(config-controller-ProvisionQos)# setSystemQosSettings system_qos_config WRED
egress_class_0 max_threshold 20
Switch(config-controller-ProvisionQos)# setSystemQosSettings system_qos_config WRED
egress_class_1 min_threshold 40
Switch(config-controller-ProvisionQos)# setSystemQosSettings system_qos_config WRED
egress_class_2 state enable
Switch(config-controller-ProvisionQos)# setSystemQosSettings review

Commands in queue:
setSystemQosSettings system_qos_config WRED egress_class_0 max_threshold 20
setSystemQosSettings system_qos_config WRED egress_class_1 min_threshold 40
setSystemQosSettings system_qos_config WRED egress_class_2 state enable
Switch(config-controller-ProvisionQos)# setSystemQosSettings commit
Switch(config-controller-ProvisionQos)# exit
```

# Configuring Hierarchical QoS on the Controller

## Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS, on page 254](#).

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>setsetHqosId</b> {commit   flush   hqos_id_config   review}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# setHqosId ?   commit          commit setHqosId   flush           flush all setHqosId commands from   queue   hqos_id_config  setHqosId (default)   review          review setHqosId commands</pre>	<p>Sets the hierarchical QoS configuration.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the QoS configuration to NID.</li> <li>• <b>flush</b>—Flushes all QoS configuration from the queue.</li> <li>• <b>hqos_id_config</b>—Sets the hierarchical QoS ID on the controller.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
Step 2	<p><b>setsetHqosId hqos_id_config</b> {bandwidth {rate <i>kbps</i>   state {enable   disable}}   hqos_id <i>hqos-id</i>   match {egress_class_0   egress_class_1   egress_class_2   egress_class_3   egress_class_4   egress_class_5   egress_class_6   egress_class_7} {bandwidth priority-level <i>priority</i>}   shaper {rate <i>kbps</i>   state {enable   disable}}   port_number <i>port-number</i>   shaper {rate <i>kbps</i>   state {enable   disable}}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# sethqosid hqos_id_config bandwidth rate 100 Switch(config-controller-ProvisionQos)# sethqosid hqos_id_config bandwidth state enable Switch(config-controller-ProvisionQos)# sethqosid hqos_id_config hqos_id 4 Switch(config-controller-ProvisionQos)# sethqosid hqos_id_config match egress_class_7 bandwidth priority_level 1 Switch(config-controller-ProvisionQos)# sethqosid hqos_id_config match egress_class_7 shaper rate 100 Switch(config-controller-ProvisionQos)# sethqosid hqos_id_config match egress_class_7 shaper state enable Switch(config-controller-ProvisionQos)# sethqosid hqos_id_config port 2 Switch(config-controller-ProvisionQos)# sethqosid hqos_id_config shaper rate 100 Switch(config-controller-ProvisionQos)# sethqosid hqos_id_config shaper state enable</pre>	<p>Configures hierarchical QoS.</p> <ul style="list-style-type: none"> <li>• <b>bandwidth</b>—Specifies bandwidth for logical interface.</li> <li>• <b>rate</b>—Specifies bandwidth rate in kbps. The valid range is from 100 to 1000000.</li> <li>• <b>state</b>—Specifies bandwidth state.</li> <li>• <b>enable</b>—Enables bandwidth state.</li> <li>• <b>disble</b>—Disables bandwidth state.</li> <li>• <b>hqos_id hqos-id</b>—Specifies HQoS ID. The valid range is 0 to 256. 0 is invalid.</li> <li>• <b>match</b>—Specifies HQoS match queues.</li> <li>• <b>egress_class_0</b>—Egress queue 0; lowest priority</li> <li>• <b>egress_class_1</b>—Egress queue 1.</li> <li>• <b>egress_class_2</b>—Egress queue 2.</li> <li>• <b>egress_class_3</b>—Egress queue 3.</li> <li>• <b>egress_class_4</b>—Egress queue 4.</li> <li>• <b>egress_class_5</b>—Egress queue 5.</li> <li>• <b>egress_class_6</b>—Egress queue 6; higher priority.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>egress_class_7</b>—Egress queue 7; highest priority.</li> <li>• <b>bandwidthpriority-levelpriority</b>—Sets the bandwidth priority scheduling level in strict mode. The valid values are 1-1.</li> <li>• <b>shaper</b>—Sets the queue level shaper.</li> <li>• <b>port_number port-number</b>—Sets the port number. The valid range is from 1 to 6. Port 7 is invalid.</li> <li>• <b>shaper</b>—Sets the interface level shaper.</li> <li>• <b>disable</b>—Disables the WRED.</li> </ul>
<b>Step 3</b>	<b>setHqosId review</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# <b>setHqosId review</b> Commands in queue: setHqosId hqos_id_config bandwidth rate 100 setHqosId hqos_id_config bandwidth state enable  setHqosId hqos_id_config hqos_id 4 setHqosId hqos_id_config match egress_class_7 bandwidth priority_level 1  setHqosId hqos_id_config match egress_class_7 shaper rate 100 setHqosId hqos_id_config match egress_class_7 shaper state enable setHqosId hqos_id_config port_number 2 setHqosId hqos_id_config shaper rate 100	Displays the HQoS configuration on the controller.
<b>Step 4</b>	<b>setHqosIdcommit</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# <b>setHqosId commit</b>	Sends the QoS configuration to the NID.
<b>Step 5</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# <b>exit</b>	Exits the QoS provisioning mode.

### Configuration Example

The example shows how to configure HQoS on the controller:

```
Switch(config-controller-ProvisionQos)# sethqosid hqos_id_config bandwidth rate 100
Switch(config-controller-ProvisionQos)# sethqosid hqos_id_config bandwidth state enable
Switch(config-controller-ProvisionQos)# sethqosid hqos_id_config hqos_id 4
Switch(config-controller-ProvisionQos)# sethqosid hqos_id_config match egress_class_7
bandwidth priority_level 1
Switch(config-controller-ProvisionQos)# sethqosid hqos_id_config match egress_class_7 shaper
rate 100
Switch(config-controller-ProvisionQos)# sethqosid hqos_id_config match egress_class_7 shaper
```



```

state enable
Switch(config-controller-ProvisionQos)# sethqosid hqos_id_config port 2
Switch(config-controller-ProvisionQos)# sethqosid hqos_id_config shaper rate 100
Switch(config-controller-ProvisionQos)# sethqosid hqos_id_config shaper state enable
Switch(config-controller-ProvisionQos)# setHqosId review
Commands in queue:
    setHqosId hqos_id_config bandwidth rate 100
    setHqosId hqos_id_config bandwidth state enable
    setHqosId hqos_id_config hqos_id 4
    setHqosId hqos_id_config match egress_class_7 bandwidth priority_level 1

    setHqosId hqos_id_config match egress_class_7 shaper rate 100
    setHqosId hqos_id_config match egress_class_7 shaper state enable
    setHqosId hqos_id_config port_number 2
    setHqosId hqos_id_config shaper rate 100
Switch(config-controller-ProvisionQos)# setHqosId commit
SetHqosId Commit Success!!!
Switch(config-controller-ProvisionQos)# exit

```

## Configuring EVC Hierarchical QoS Policy on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS](#), on page 254.

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>setEvcHqosPolicy</b> {commit   flush   hqos_id_config   review}</p> <p><b>Example:</b></p> <pre> Switch(config-controller-ProvisionQos)# setEvcHqosPolicy ?   commit                commit setEvcHqosPolicy   evcHqosPolicyConfig  setEvcHqosPolicy (default)   flush                flush all setEvcHqosPolicy commands from queue   review                review setEvcHqosPolicy commands </pre>	<p>Sets the hierarchical QoS configuration on the EVC.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the QoS configuration to NID.</li> <li>• <b>flush</b>—Flushes all QoS configuration from the queue.</li> <li>• <b>evcHqosPolicyConfig</b>—Sets the EVC HQoS policy on the controller.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
Step 2	<p><b>setEvcHqosPolicy evcHqosPolicyConfig</b> {evc_id <i>evc-id</i>   hqos_id <i>hqos-id</i>   service_policy {attach   detach}}</p> <p><b>Example:</b></p> <pre> Switch(config-controller-ProvisionQos)# setEvcHqosPolicy   evcHqosPolicyConfig evc_id 1 Switch(config-controller-ProvisionQos)# setEvcHqosPolicy   evcHqosPolicyConfig hqos_id 2 Switch(config-controller-ProvisionQos)# setEvcHqosPolicy   evcHqosPolicyConfig service_policy attach </pre>	<p>Configures hierarchical QoS on the EVC.</p> <ul style="list-style-type: none"> <li>• <b>evc_id</b> <i>evc-id</i>—Specifies EVC ID. The valid range is from 1 to 1024</li> <li>• <b>hqos_id</b> <i>hqos-id</i>—Specifies HQoS ID. The valid range is 0 to 256. 0 is invalid.</li> <li>• <b>service_policy</b> —Specifies service policy that should be applied or removed on the EVC.</li> <li>• <b>attach</b>—Applies the policy on the EVC.</li> <li>• <b>detach</b>—Detaches the policy on the EVC.</li> </ul>

	Command or Action	Purpose
<b>Step 3</b>	<b>setEvcHqosPolicy review</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# <b>setEvcHqosPolicy review</b> Commands in queue: setEvcHqosPolicy evcHqosPolicyConfig evc_id 1 setEvcHqosPolicy evcHqosPolicyConfig service_policy attach setEvcHqosPolicy evcHqosPolicyConfig service_policy detach setEvcHqosPolicy evcHqosPolicyConfig hqos_id 2 setEvcHqosPolicy evcHqosPolicyConfig evc_id 1	Displays the HQoS EVC configuration on the controller.
<b>Step 4</b>	<b>setEvcHqosPolicycommit</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# <b>setEvcHqosPolicy commit</b>	Sends the QoS configuration to the NID.
<b>Step 5</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# <b>exit</b>	Exits the QoS provisioning mode.

### Configuration Example

The example shows how to configure EVC HQoS on the controller:

```
Switch(config-controller-ProvisionQos)# setEvcHqosPolicy evcHqosPolicyConfig evc_id 1
Switch(config-controller-ProvisionQos)# setEvcHqosPolicy evcHqosPolicyConfig hqos_id 2
Switch(config-controller-ProvisionQos)# setEvcHqosPolicy evcHqosPolicyConfig attach
Switch(config-controller-ProvisionQos)# setEvcHqosPolicy review
Commands in queue:
    setEvcHqosPolicy evcHqosPolicyConfig evc_id 1
    setEvcHqosPolicy evcHqosPolicyConfig service_policy attach
    setEvcHqosPolicy evcHqosPolicyConfig service_policy detach
    setEvcHqosPolicy evcHqosPolicyConfig hqos_id 2
    setEvcHqosPolicy evcHqosPolicyConfig evc_id 1
Switch(config-controller-ProvisionQos)# setEvcHqosPolicy commit
Switch(config-controller-ProvisionQos)# exit
```

## Reordering QoS Control Entry (QCE) on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS, on page 254](#).

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>reorderQCEentries</b> {<b>commit</b>   <b>flush</b>   <b>reorder_qce</b>   <b>review</b>}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# reorderQCEentries ?   commit          commit reorderQCEentries   flush           flush all reorderQCEentries commands from queue   reorder_qce     reorderQCEentries (default)   review          review reorderQCEentries commands</pre>	<p>Reorders the QCE entries.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the QoS configuration to NID.</li> <li>• <b>flush</b>—Flushes all QoS configuration from the queue.</li> <li>• <b>reorder_qce</b>—Reorders the QCE on the controller.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
Step 2	<p><b>reorderQCEentries reorder_qce</b> {<b>qce_id qce_id</b>   <b>reorder</b> {<b>after</b>   <b>before</b>   <b>last</b>} {<b>qce_id qce_id</b>}}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# reorderQCEentries reorder_qce qce_id 3 Switch(config-controller-ProvisionQos)# reorderQCEentries reorder reorder before qce_id 2</pre>	<ul style="list-style-type: none"> <li>• <b>reorder_qce</b>—Reorders QCE .</li> <li>• <b>reorder</b>—Specifies the reorder operation.</li> <li>• <b>after</b>—Reorders after the specified QCE ID.</li> <li>• <b>before</b>—Reorders before the specified QCE ID..</li> <li>• <b>last</b>—Reorders QCE ID as last.</li> <li>• <b>qce-id</b>— Specifies the QCE ID. The valid range is from 1 to 1024. 0 is invalid.</li> </ul>
Step 3	<p><b>reorderQCEentries review review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# reorderQCEentries review Commands in queue:   reorderQCEentries reorder_qce qce_id 3   reorderQCEentries reorder_qce qce_id 3   reorderQCEentries reorder_qce reorder before qce_id 2</pre>	<p>Displays the QoS configuration on the controller.</p>
Step 4	<p><b>setQCE commitcommit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# reorderQCEentries commit ReorderQCEentries Commit Success!!!</pre>	<p>Sends the QoS configuration to the NID.</p>
Step 5	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# exit</pre>	<p>Exits the QoS provisioning mode.</p>

### Configuration Example

The example shows how to reorder QoS QCE on the controller:

```
Switch(config-controller-ProvisionQos)# reorderQCEentries reorder_qce qce_id 3
Switch(config-controller-ProvisionQos)# reorderQCEentries reorder reorder before qce_id 2

Switch(config-controller-ProvisionQos)# reorderQCEentries review
Commands in queue:
    reorderQCEentries reorder_qce qce_id 3
    reorderQCEentries reorder_qce qce_id 3
    reorderQCEentries reorder_qce reorder before qce_id 2
Switch(config-controller-ProvisionQos)# reorderQCEentries commit
reorderQCEentries commit
Switch(config-controller-ProvisionQos)# exit
```

## Deleting QoS Control Entry (QCE) on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS, on page 254](#).

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<p><b>deleteQCE</b> {commit   flush   delete_qce qce-id   review}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# deleteQCE ? commit      commit deleteQCE delete_qce  Delete a particular QCE flush       flush all deleteQCE commands from queue review      review deleteQCE commands Switch(config-controller-ProvisionQos)# deleteQCE delete_qce 2</pre>	<p>Deletes QoS configuration.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the QoS configuration to NID.</li> <li>• <b>flush</b>—Flushes all QoS configuration from the queue.</li> <li>• <b>delete_qce qce-id</b>—Deletes the QCE ID on the controller.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
<b>Step 2</b>	<p><b>deleteQCE review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# deleteQCE review Commands in queue:     deleteQCE delete_qce 3</pre>	<p>Displays the QoS configuration on the controller.</p>
<b>Step 3</b>	<p><b>deleteQCE commitcommit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# deleteQCE commit DeleteQCE Commit Success!!!</pre>	<p>Sends the QoS configuration to the NID.</p>

	Command or Action	Purpose
Step 4	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionQos) # <b>exit</b>	Exits the QoS provisioning mode.

### Configuration Example

The example shows how to delete QoS QCE on the controller:

```
Switch(config-controller-ProvisionQos) # deleteQCE delete_qce 2
Switch(config-controller-ProvisionQos) # deleteQCE review
Commands in queue:
  deleteQCE delete_qce 3
Switch(config-controller-ProvisionQos) # deleteQCE commit
DeleteQCE Commit Success!!!
Switch(config-controller-ProvisionQos) # exit
```

## Deleting HQoS ID on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS, on page 254](#).

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>deleteHqosId {commit   flush   delete_hqos_id hqos-id   review}</b>  <b>Example:</b> Switch(config-controller-ProvisionQos) # <b>deleteHqosId ?</b> commit commit deleteHqosId delete_hqos_id deleteHqosId (default) flush flush all deleteHqosId commands from queue review review deleteHqosId commands Switch(config-controller-ProvisionQos) # <b>deleteHqosId</b> <b>delete_hqos_id 2</b>	Deletes HQoS ID configuration. <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the QoS configuration to NID.</li> <li>• <b>flush</b>—Flushes all QoS configuration from the queue.</li> <li>• <b>delete_hqos_id hqos-id</b>—Deletes the HQoS ID on the controller.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
Step 2	<b>deleteHqosId review</b>  <b>Example:</b> Switch(config-controller-ProvisionQos) # <b>deleteHqosId</b> <b>review</b> Commands in queue: deleteHqosId delete_hqos_id 2	Displays the HQoS ID configuration on the controller.

	Command or Action	Purpose
Step 3	<b>deleteHqosIdcommit</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# <b>deleteHqosId commit</b> deleteHqosId Commit Success!!!	Sends the QoS configuration to the NID.
Step 4	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# <b>exit</b>	Exits the QoS provisioning mode.

### Configuration Example

The example shows how to delete HQoS ID on the controller:

```
Switch(config-controller-ProvisionQos)# deleteHqosId delete_hqos_id 2
Switch(config-controller-ProvisionQos)# deleteHqosId review
Commands in queue:
  deleteHqosId delete_hqos_id 2
Switch(config-controller-ProvisionQos)# deleteHqosId commit
DeleteHqosId Commit Success!!!
Switch(config-controller-ProvisionQos)# exit
```

## Negating QoS and Restoring Defaults

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS, on page 254](#).

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>no ?</b>  <b>Example:</b> Switch(config-controller-ProvisionQoS)# <b>no ?</b>  <pre>deleteQCE          Delete a particular QCE exit              Exit from ProvisionQos sub configuration mode getInputGlobalPolicy Show Output QoS global features configured getInputPortPolicy Show Input Policy configured on Physical Port getOutputGlobalPolicy Show Global Output QoS features getOutputPortPolicy Show Output Policy configured on Physical Port getQCE           getQCE (default) getSystemQosSettings getSystemQosSettings (default) reorderQCEentries reorderQCEentries (default) setInputGlobalPolicy configure Global Input QoS features setInputPortPolicy configure Input policy on Physical Port</pre>	Negates the commands and sets the default configuration.

	Command or Action	Purpose
	<pre>setOutputGlobalPolicy  configure Global Output QoS features setOutputPortPolicy    configure Output policy on Physical Port setQCE                  setQCE (default) setSystemQoSSettings   set System-wide QoS settings showQCElist            showQCElist (default) showQueueStatistics    Display egress queue statistics</pre>	
<b>Step 2</b>	<p><b>exit</b></p> <p><b>Example:</b> Switch(config-controller-ProvisionQos)# <b>exit</b></p>	Exits the QoS provisioning mode.

## Viewing QoS Input Policy Global Features on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS, on page 254](#).

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<pre>getInputGlobalPolicy {commit   flush   input   review}</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# getInputGlobalPolicy ?   commit  commit getInputGlobalPolicy   flush   flush all getInputGlobalPolicy commands from          queue   input   Show Output QoS global features configured   review  review getInputGlobalPolicy commands</pre> <pre>Switch(config-controller-ProvisionQos)# getInputGlobalPolicy input</pre>	<p>View the global input QoS policy.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the QoS configuration to NID.</li> <li>• <b>flush</b>—Flushes all QoS configuration from the queue.</li> <li>• <b>input</b>—Displays the input policy QoS global features configured the controller.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
<b>Step 2</b>	<pre>getInputGlobalPolicy review</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# getInputGlobalPolicy review Commands in queue:   getInputGlobalPolicy input</pre>	Displays the QoS configuration on the controller.

	Command or Action	Purpose
Step 3	<b>getInputGlobalPolicy commit</b>  <b>Example:</b> Switch(config-controller-ProvisionQos) # <b>getInputGlobalPolicy commit</b>	Sends the QoS configuration to the NID.
Step 4	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionQos) # <b>exit</b>	Exits the QoS provisioning mode.

### Configuration Example

The example displays the QoS input port policy on the controller:

```
Switch(config-controller-ProvisionQos) # getInputGlobalPolicy input
Switch(config-controller-ProvisionQos) # getInputGlobalPolicy review
CCommands in queue:
  getInputGlobalPolicy input
Switch(config-controller-ProvisionQos) # getInputGlobalPolicy commit

GetInputGlobalPolicy_Output.inputGlobalPolicyConfig.match_DSCP.value_00.mark_DSCP = 64
GetInputGlobalPolicy_Output.inputGlobalPolicyConfig.match_DSCP.value_00.mark_egress_class = 8
GetInputGlobalPolicy_Output.inputGlobalPolicyConfig.match_DSCP.value_01.mark_DSCP = 64
GetInputGlobalPolicy_Output.inputGlobalPolicyConfig.match_DSCP.value_01.mark_egress_class = 8
GetInputGlobalPolicy_Output.inputGlobalPolicyConfig.match_DSCP.value_02.mark_DSCP = 64
GetInputGlobalPolicy_Output.inputGlobalPolicyConfig.match_DSCP.value_02.mark_egress_class = 8
GetInputGlobalPolicy_Output.inputGlobalPolicyConfig.match_DSCP.value_03.mark_DSCP = 64
GetInputGlobalPolicy_Output.inputGlobalPolicyConfig.match_DSCP.value_03.mark_egress_class = 8
GetInputGlobalPolicy_Output.inputGlobalPolicyConfig.match_DSCP.value_04.mark_DSCP = 64
GetInputGlobalPolicy_Output.inputGlobalPolicyConfig.match_DSCP.value_04.mark_egress_class = 8
GetInputGlobalPolicy_Output.inputGlobalPolicyConfig.match_DSCP.value_05.mark_DSCP = 64
GetInputGlobalPolicy_Output.inputGlobalPolicyConfig.match_DSCP.value_05.mark_egress_class = 8
GetInputGlobalPolicy_Output.inputGlobalPolicyConfig.match_DSCP.value_06.mark_DSCP = 64
GetInputGlobalPolicy_Output.inputGlobalPolicyConfig.match_DSCP.value_06.mark_egress_class = 8
GetInputGlobalPolicy_Output.inputGlobalPolicyConfig.match_DSCP.value_07.mark_DSCP = 64
GetInputGlobalPolicy_Output.inputGlobalPolicyConfig.match_DSCP.value_07.mark_egress_class = 8
GetInputGlobalPolicy_Output.inputGlobalPolicyConfig.match_DSCP.value_08.mark_DSCP = 64
GetInputGlobalPolicy_Output.inputGlobalPolicyConfig.match_DSCP.value_08.mark_egress_class = 8
.
.
!
GetInputGlobalPolicy Commit Success!!!

Switch(config-controller-ProvisionQos) # exit
```



## Viewing QoS Input Policy Features at Port level on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS, on page 254](#).

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<pre>getInputPortPolicy {commit   flush   input_port port_number   review}</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# getInputPortPolicy ?   commit      commit getInputPortPolicy   flush       flush all getInputPortPolicy commands from queue   input_port  Show Input Policy configured on Physical Port   review      review getInputPortPolicy commands Switch(config-controller-ProvisionQos)# getInputPortPolicy input_port 2</pre>	<p>View the input QoS policy at port level.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the QoS configuration to NID.</li> <li>• <b>flush</b>—Flushes all QoS configuration from the queue.</li> <li>• <b>input_port port_number</b>—Displays the input port policy configuration at port level on the controller. The valid ports are 1 to 6. port 7 is invalid.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
<b>Step 2</b>	<pre>getInputPortPolicy review</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# getInputPortPolicy review</pre> <p>Commands in queue:</p> <pre>getInputPortPolicy input_port 3 getInputPortPolicy input_port 2</pre>	<p>Displays the QoS configuration on the controller.</p>
<b>Step 3</b>	<pre>getInputPortPolicy commit</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# getInputPortPolicy commit</pre>	<p>Sends the QoS configuration to the NID.</p>
<b>Step 4</b>	<pre>exit</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# exit</pre>	<p>Exits the QoS provisioning mode.</p>

### Configuration Example

The example displays the QoS input port policy on the controller:

```
Switch(config-controller-ProvisionQos)# getInputPortPolicy input_port 2
```

```

Switch(config-controller-ProvisionQos)# getInputPortPolicy review
Commands in queue:
    getInputPortPolicy input_port 3
    getInputPortPolicy input_port 2
Switch(config-controller-ProvisionQos)# getInputPortPolicy commit
GetInputPortPolicy_Output.inputPortPolicyConfig.port_number = 2
GetInputPortPolicy_Output.inputPortPolicyConfig.port_policer.state = false
GetInputPortPolicy_Output.inputPortPolicyConfig.port_policer.cir = 1000000
GetInputPortPolicy_Output.inputPortPolicyConfig.globalDscpBasedDscpIngressMarking = false
GetInputPortPolicy_Output.inputPortPolicyConfig.globalDscpBasedEgressClassMarking = false
GetInputPortPolicy_Output.inputPortPolicyConfig.match.cos_.value_0.mark_egress_class = 1
GetInputPortPolicy_Output.inputPortPolicyConfig.match.cos_.value_1.mark_egress_class = 0
GetInputPortPolicy_Output.inputPortPolicyConfig.match.cos_.value_2.mark_egress_class = 2
GetInputPortPolicy_Output.inputPortPolicyConfig.match.cos_.value_3.mark_egress_class = 3
GetInputPortPolicy_Output.inputPortPolicyConfig.match.cos_.value_4.mark_egress_class = 4
GetInputPortPolicy_Output.inputPortPolicyConfig.match.cos_.value_5.mark_egress_class = 5
GetInputPortPolicy_Output.inputPortPolicyConfig.match.cos_.value_6.mark_egress_class = 6
GetInputPortPolicy_Output.inputPortPolicyConfig.match.cos_.value_7.mark_egress_class = 7
GetInputPortPolicy_Output.inputPortPolicyConfig.egress_class_marking = false
GetInputPortPolicy_Output.inputPortPolicyConfig.qce.address.t = 1
GetInputPortPolicy_Output.inputPortPolicyConfig.qce.address.u.source = ''
GetInputPortPolicy_Output.inputPortPolicyConfig.qce.key.t = 1
GetInputPortPolicy_Output.inputPortPolicyConfig.qce.key.u.normal = ''
GetInputPortPolicy_Output.inputPortPolicyConfig.service_policy.t = 2
GetInputPortPolicy_Output.inputPortPolicyConfig.service_policy.u.detach = ''

GetInputPortPolicy Commit Success!!!
Switch(config-controller-ProvisionQos)# exit

```

## Viewing QoS Output Policy Global Features on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS, on page 254](#).

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<p><b>getInputGlobalPolicy {commit   flush   output   review}</b></p> <p><b>Example:</b></p> <pre> Switch(config-controller-ProvisionQos)# <b>getInputGlobalPolicy ?</b>   commit  commit  getOutputGlobalPolicy   flush   flush all getOutputGlobalPolicy commands from   output  Show Global Output QoS features   review  review  getOutputGlobalPolicy commands  Switch(config-controller-ProvisionQos)# <b>getInputGlobalPolicy output</b> </pre>	<p>View global output QoS policy.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the QoS configuration to NID.</li> <li>• <b>flush</b>—Flushes all QoS configuration from the queue.</li> <li>• <b>input</b>—Displays the input policy QoS global features configured the controller.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
<b>Step 2</b>	<p><b>getOutputPortPolicy review</b></p> <p><b>Example:</b></p> <pre> Switch(config-controller-ProvisionQos)# <b>getInputGlobalPolicy review</b> </pre>	<p>Displays the QoS configuration on the controller.</p>

	Command or Action	Purpose
	Commands in queue: getOutputGlobalPolicy output	
<b>Step 3</b>	<b>getOutputPortPolicy commit</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# <b>getInputGlobalPolicy commit</b>	Sends the QoS configuration to the NID.
<b>Step 4</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionQos)# <b>exit</b>	Exits the QoS provisioning mode.

### Configuration Example

The example displays the QoS output policy global features on the controller:

```
Switch(config-controller-ProvisionQos)# getInputGlobalPolicy output
Switch(config-controller-ProvisionQos)# getInputGlobalPolicy review
Commands in queue:
    getOutputGlobalPolicy output

Switch(config-controller-ProvisionQos)# getInputGlobalPolicy commit
GetOutputGlobalPolicy_Output.outputGlobalPolicyConfig.match_DSCP.value_00.mark_DSCP = 64
GetOutputGlobalPolicy_Output.outputGlobalPolicyConfig.match_DSCP.value_01.mark_DSCP = 64
GetOutputGlobalPolicy_Output.outputGlobalPolicyConfig.match_DSCP.value_02.mark_DSCP = 64
GetOutputGlobalPolicy_Output.outputGlobalPolicyConfig.match_DSCP.value_03.mark_DSCP = 64
GetOutputGlobalPolicy_Output.outputGlobalPolicyConfig.match_DSCP.value_04.mark_DSCP = 64
GetOutputGlobalPolicy_Output.outputGlobalPolicyConfig.match_DSCP.value_05.mark_DSCP = 64
GetOutputGlobalPolicy_Output.outputGlobalPolicyConfig.match_DSCP.value_06.mark_DSCP = 64
GetOutputGlobalPolicy_Output.outputGlobalPolicyConfig.match_DSCP.value_07.mark_DSCP = 64
GetOutputGlobalPolicy_Output.outputGlobalPolicyConfig.match_DSCP.value_08.mark_D

GetOutputGlobalPolicy Commit Success!!!
Switch(config-controller-ProvisionQos)# exit
```

## Viewing QoS Output Policy Features at Port level on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS, on page 254](#).

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>getOutputPortPolicy {commit   flush   output_port port_number  review}</b>	View the output Qos policy at port level.  • <b>commit</b> —Sends the QoS configuration to NID.

	Command or Action	Purpose
	<p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# getOutputPortPolicy ?   ccommit          commit getOutputPortPolicy   flush            flush all getOutputPortPolicy commands   from queue   output_port     Show Output Policy configured on Physical   Port   review          review getOutputPortPolicy commands Switch(config-controller-ProvisionQos)# getOutputPortPolicy output_port 4</pre>	<ul style="list-style-type: none"> <li>• <b>flush</b>—Flushes all QoS configuration from the queue.</li> <li>• <b>output_port <i>port_number</i></b>—Displays the output port policy configuration at port level on the controller. The valid ports are 1 to 6. port 7 is invalid.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
<b>Step 2</b>	<p><b>getOutputPortPolicy review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# getOutputPortPolicy review</pre> <p>Commands in queue:</p> <pre>getOutputPortPolicy output_port 4</pre>	Displays the QoS configuration on the controller.
<b>Step 3</b>	<p><b>getOutputPortPolicy commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# getOutputPortPolicy commit</pre>	Sends the QoS configuration to the NID.
<b>Step 4</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# exit</pre>	Exits the QoS provisioning mode.

### Configuration Example

The example displays the QoS output port policy on the controller:

```
Switch(config-controller-ProvisionQos)# getOutputPortPolicy output_port 4
Switch(config-controller-ProvisionQos)# getOutputPortPolicy review
Commands in queue:
  getOutputPortPolicy output_port 4

Switch(config-controller-ProvisionQos)# getOutputPortPolicy commit
GetOutputPortPolicy_Output.outputPortPolicyConfig.port_number = 4
GetOutputPortPolicy_Output.outputPortPolicyConfig.port_shaper.state = false
GetOutputPortPolicy_Output.outputPortPolicyConfig.port_shaper.rate = 1000000
GetOutputPortPolicy_Output.outputPortPolicyConfig.globalDscpBasedDscpEgressMarking = false
GetOutputPortPolicy_Output.outputPortPolicyConfig.match.egress_class_7.bandwidth.priority_level
= 1
GetOutputPortPolicy_Output.outputPortPolicyConfig.match.egress_class_7.shaper.state = false
GetOutputPortPolicy_Output.outputPortPolicyConfig.match.egress_class_7.shaper.rate = 1000000
GetOutputPortPolicy_Output.outputPortPolicyConfig.match.egress_class_7.mark_cos= 7
GetOutputPortPolicy_Output.outputPortPolicyConfig.match.egress_class_6.bandwidth.priority_level
= 2
GetOutputPortPolicy_Output.outputPortPolicyConfig.match.egress_class_6.shaper.state = false
GetOutputPortPolicy_Output.outputPortPolicyConfig.match.egress_class_6.shaper.rate = 1000000
.
```

```

!
GetOutputPortPolicy Commit Success!!!
Switch(config-controller-ProvisionQos)# exit

```

## Viewing QoS Control Entry (QCE) Configuration on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS, on page 254](#).

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>getQCE {commit   flush   QCE_ID <i>qce_id</i>  review}</b></p> <p><b>Example:</b></p> <pre> Switch(config-controller-ProvisionQos)# getOutputPortPolicy ? QCE_ID getQCE (default) commit commit getQCE flush flush all getQCE commands from queue review review getQCE commands Switch(config-controller-ProvisionQos)# getOutputPortPolicy qce-id 4 </pre>	<p>View the QCE configuration.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the QoS configuration to NID.</li> <li>• <b>flush</b>—Flushes all QoS configuration from the queue.</li> <li>• <b>QCE_ID <i>qce_id</i></b>—Displays the QCE configuration for QCE ID on the controller. The valid ports are 1 to 1024.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
Step 2	<p><b>getQCE review</b></p> <p><b>Example:</b></p> <pre> Switch(config-controller-ProvisionQos)# getQCE review Commands in queue: getQCE QCE_ID 2 getQCE QCE_ID 3 getQCE QCE_ID 23 </pre>	<p>Displays the QoS configuration on the controller.</p>
Step 3	<p><b>getOutputPortPolicy commit</b></p> <p><b>Example:</b></p> <pre> Switch(config-controller-ProvisionQos)# getQCE commit </pre>	<p>Sends the QoS configuration to the NID.</p>
Step 4	<p><b>exit</b></p> <p><b>Example:</b></p> <pre> Switch(config-controller-ProvisionQos)# exit </pre>	<p>Exits the QoS provisioning mode.</p>

## Configuration Example

The example displays the QoS output port policy on the controller:

```
Switch(config-controller-ProvisionQos)# getOutputPortPolicy qce-id 4
Switch(config-controller-ProvisionQos)# getQCE review
Commands in queue:
    getQCE QCE_ID 2
    getQCE QCE_ID 3
    getQCE QCE_ID 23
Switch(config-controller-ProvisionQos)# getQCE commit
GetQCE_Output.QCE_configuration.qce_id = 0
GetQCE_Output.QCE_configuration.control.ingress_match.ports.GigabitEthernet_1 = false
GetQCE_Output.QCE_configuration.control.ingress_match.ports.GigabitEthernet_2 =false
GetQCE_Output.QCE_configuration.control.ingress_match.ports.GigabitEthernet_3 =false
GetQCE_Output.QCE_configuration.control.ingress_match.ports.GigabitEthernet_4 =false
GetQCE_Output.QCE_configuration.control.ingress_match.ports.GigabitEthernet_5 =false
GetQCE_Output.QCE_configuration.control.ingress_match.ports.GigabitEthernet_6 =false
GetQCE_Output.QCE_configuration.control.ingress_match.outer_tag_match.match_type.t = 1
GetQCE_Output.QCE_configuration.control.ingress_match.outer_tag_match.match_type.u.any =
'0'
GetQCE_Output.QCE_configuration.control.ingress_match.outer_tag_match.match_fields.vlan_id_filter.t
= 1
GetQCE_Output.QCE_configuration.control.ingress_match.outer_tag_match.match_fields.vlan_id_filter.u.any
= '0'
GetQCE_Output.QCE_configuration.control.ingress_match.outer_tag_match.match_fields.cos_.t
= 1
GetQCE_Output.QCE_configuration.control.ingress_match.outer_tag_match.match_fields.cos_.u.val_any
= '0'
GetQCE_Output.QCE_configuration.control.ingress_match.inner_tag_match.match_type.t = 1
GetQCE_Output.QCE_configuration.control.ingress_match.inner_tag_match.match_type.u.any =
'0'
GetQCE_Output.QCE_configuration.control.ingress_match.inner_tag_match.match_fields.vlan_id_filter.t
= 1
GetQCE_Output.QCE_configuration.control.ingress_match.inner_tag_match.match_fields.vlan_id_filter.u.any
= '0'
GetQCE_Output.QCE_configuration.control.ingress_match.inner_tag_match.match_fields.inner_cos.t
= 1
GetQCE_Output.QCE_configuration.control.ingress_match.inner_tag_match.match_fields.inner_cos.u.val_any
= '0'
GetQCE_Output.QCE_configuration.control.ingress_match.mac_params.smac_filter.t = 1
GetQCE_Output.QCE_configuration.control.ingress_match.mac_params.smac_filter.u.any = '0'
GetQCE_Output.QCE_configuration.control.ingress_match.mac_params.dmac_filter.t = 1
GetQCE_Output.QCE_configuration.control.ingress_match.mac_params.dmac_filter.u.any = '0'
GetQCE_Output.QCE_configuration.control.ingress_match.frame_type.t = 1
GetQCE_Output.QCE_configuration.control.ingress_match.frame_type.u.any = '0'
GetQCE_Output.QCE_configuration.control.actions.mark_egress_class = 8
GetQCE_Output.QCE_configuration.control.actions.mark_COS = 8
GetQCE_Output.QCE_configuration.control.actions.mark_DSCP = 64

GetQCE Commit Success!!!

GetOutputPortPolicy Commit Success!!!
Switch(config-controller-ProvisionQos)# exit
```

## Viewing System QoS Settings on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS, on page 254](#).

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>getSystemQosSettings</b> {<b>commit</b>   <b>flush</b>   <b>QCE_ID</b> <i>qce_id</i>   <b>review</b>}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# getSystemQosSettings ? commit      commit getSystemQosSettings flush      flush all getSystemQosSettings commands from queue review      review getSystemQosSettings commands system_qos getSystemQosSettings (default)</pre> <pre>Switch(config-controller-ProvisionQos)# getSystemQosSettings system_qos</pre>	<p>View the system QoS configuration.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the QoS configuration to NID.</li> <li>• <b>flush</b>—Flushes all QoS configuration from the queue.</li> <li>• <b>system_qos</b>—Displays the system QoS configuration on the controller.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
Step 2	<p><b>getSystemQosSettings review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# getSystemQosSettings review Commands in queue:     getSystemQosSettings system_qos</pre>	<p>Displays the QoS configuration on the controller.</p>
Step 3	<p><b>getSystemQosSettings commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# getSystemQosSettings commit</pre>	<p>Sends the QoS configuration to the NID.</p>
Step 4	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# exit</pre>	<p>Exits the QoS provisioning mode.</p>

## Configuration Example

The example displays the system QoS settings on the controller:

```
Switch(config-controller-ProvisionQos)# getSystemQosSettings system_qos
Switch(config-controller-ProvisionQos)# getSystemQosSettings review
Commands in queue:
    getSystemQosSettings system_qos

Switch(config-controller-ProvisionQos)# getSystemQosSettings commit
GetSystemQosSettings_Output.system_qos_config.WRED.egress_class_0.state = false
GetSystemQosSettings_Output.system_qos_config.WRED.egress_class_0.min_threshold = 0
GetSystemQosSettings_Output.system_qos_config.WRED.egress_class_0.max_threshold= 100
GetSystemQosSettings_Output.system_qos_config.WRED.egress_class_1.state = false
GetSystemQosSettings_Output.system_qos_config.WRED.egress_class_1.min_threshold= 0
GetSystemQosSettings_Output.system_qos_config.WRED.egress_class_1.max_threshold= 100
GetSystemQosSettings_Output.system_qos_config.WRED.egress_class_2.state = false
GetSystemQosSettings_Output.system_qos_config.WRED.egress_class_2.min_threshold= 0
GetSystemQosSettings_Output.system_qos_config.WRED.egress_class_2.max_threshold= 100
GetSystemQosSettings_Output.system_qos_config.WRED.egress_class_3.state = false
```

```

GetSystemQosSettings_Output.system_qos_config.WRED.egress_class_3.min_threshold= 0
GetSystemQosSettings_Output.system_qos_config.WRED.egress_class_3.max_threshold= 100
GetSystemQosSettings_Output.system_qos_config.WRED.egress_class_4.state = false
GetSystemQosSettings_Output.system_qos_config.WRED.egress_class_4.min_threshold= 0
GetSystemQosSettings_Output.system_qos_config.WRED.egress_class_4.max_threshold= 100
GetSystemQosSettings_Output.system_qos_config.WRED.egress_class_5.state = false
GetSystemQosSettings_Output.system_qos_config.WRED.egress_class_5.min_threshold= 0
GetSystemQosSettings_Output.system_qos_config.WRED.egress_class_5.max_threshold= 100

GetSystemQosSettings Commit Success!!!

Switch(config-controller-ProvisionQos)# exit

```

## Viewing HQoS ID on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS](#), on page 254.

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<p><b>getHqosId</b> {<b>commit</b>   <b>flush</b>   <b>hqos_id_value</b> <i>hqos_id</i>   <b>review</b>}</p> <p><b>Example:</b></p> <pre> Switch(config-controller-ProvisionQos)# <b>getHqosId</b> ? commit          commit getHqosId flush           flush all getHqosId commands from queue hqos_id_value  getHqosId (default) review         review getHqosId commands  Switch(config-controller-ProvisionQos)# <b>getHqosId</b> <b>hqos_id_value 4</b> </pre>	<p>View the HQoS ID configuration.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the QoS configuration to NID.</li> <li>• <b>flush</b>—Flushes all QoS configuration from the queue.</li> <li>• <b>hqos_id_value</b> <i>hqos_id</i>—Displays the HQOS ID configuration on the controller. The valid range is from 1 to 256.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
<b>Step 2</b>	<p><b>getHqosId review</b></p> <p><b>Example:</b></p> <pre> Switch(config-controller-ProvisionQos)# <b>getHqosId</b> <b>review</b> Commands in queue: getHqosId hqos_id_value 2 </pre>	<p>Displays the HQoS ID configuration on the controller.</p>
<b>Step 3</b>	<p><b>getHqosId commit</b></p> <p><b>Example:</b></p> <pre> Switch(config-controller-ProvisionQos)# <b>getHqosId</b> <b>commit</b> </pre>	<p>Sends the HQoS configuration to the NID.</p>
<b>Step 4</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre> Switch(config-controller-ProvisionQos)# <b>exit</b> </pre>	<p>Exits the QoS provisioning mode.</p>



### Configuration Example

The example displays the system HQoS ID on the controller:

```
Switch(config-controller-ProvisionQos)# getHqosId hqos_id_value 4
Switch(config-controller-ProvisionQos)# getHqosId review
Commands in queue:
    getHqosId hqos_id_value 2
Switch(config-controller-ProvisionQos)# getHqosId commit
GetHqosId_Output.hqos_id_config.hqos_id = 4
GetHqosId_Output.hqos_id_config.port_number = 4
GetHqosId_Output.hqos_id_config.shaper.state = true
GetHqosId_Output.hqos_id_config.shaper.rate = 100000
GetHqosId_Output.hqos_id_config.bandwidth.state = true
GetHqosId_Output.hqos_id_config.bandwidth.rate = 10000
GetHqosId_Output.hqos_id_config.match.egress_class_7.bandwidth.priority_level = 1
GetHqosId_Output.hqos_id_config.match.egress_class_7.shaper.state = true
GetHqosId_Output.hqos_id_config.match.egress_class_7.shaper.rate = 40000
GetHqosId_Output.hqos_id_config.match.egress_class_6.bandwidth.priority_level = 2
GetHqosId_Output.hqos_id_config.match.egress_class_6.shaper.state = true
GetHqosId_Output.hqos_id_config.match.egress_class_6.shaper.rate = 50000
GetHqosId_Output.hqos_id_config.match.egress_class_5.bandwidth.t = 2
GetHqosId_Output.hqos_id_config.match.egress_class_5.bandwidth.u.remaining_ratio = 5
GetHqosId_Output.hqos_id_config.match.egress_class_4.bandwidth.t = 2
GetHqosId_Output.hqos_id_config.match.egress_class_4.bandwidth.u.remaining_ratio = 4
GetHqosId_Output.hqos_id_config.match.egress_class_3.bandwidth.t = 2
GetHqosId_Output.hqos_id_config.match.egress_class_3.bandwidth.u.remaining_ratio = 4
GetHqosId_Output.hqos_id_config.match.egress_class_2.bandwidth.t = 2
GetHqosId_Output.hqos_id_config.match.egress_class_2.bandwidth.u.remaining_ratio = 3
GetHqosId_Output.hqos_id_config.match.egress_class_1.bandwidth.t = 2
GetHqosId_Output.hqos_id_config.match.egress_class_1.bandwidth.u.remaining_ratio = 3
GetHqosId_Output.hqos_id_config.match.egress_class_0.bandwidth.t = 2
GetHqosId_Output.hqos_id_config.match.egress_class_0.bandwidth.u.remaining_ratio = 2
GetHqosId Commit Success!!!

Switch(config-controller-ProvisionQos)# exit
```

## Viewing EVC HQoS ID on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS, on page 254](#).

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><code>getEvcHqosPolicy {commit   flush   evcHqosPolicy evc-idevc_id   review}</code></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# getEvcHqosPolicy ?</pre>	<p>View the EVC HQoS ID configuration.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the QoS configuration to NID.</li> <li>• <b>flush</b>—Flushes all QoS configuration from the queue.</li> </ul>

	Command or Action	Purpose
	<pre> commit          commit getEvcHqosPolicy evcHqosPolicy  getEvcHqosPolicy (default) flush          flush all getEvcHqosPolicy commands from queue review         review getEvcHqosPolicy commands  Switch(config-controller-ProvisionQos)# <b>getEvcHqosPolicy evcHqosPolicy evc_id 1</b> </pre>	<ul style="list-style-type: none"> <li>• <b>evcHqosPolicy evc-id</b><i>evc_id</i>—Displays the EVC HQoS ID configuration on the controller. The valid range is from 1 to 1024.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
<b>Step 2</b>	<p><b>getEvcHqosPolicy review</b></p> <p><b>Example:</b></p> <pre> Switch(config-controller-ProvisionQos)# <b>getEvcHqosPolicy review</b> Commands in queue:     getEvcHqosPolicy evcHqosPolicy evc_id 1 </pre>	Displays the EVC HQoS ID configuration on the controller.
<b>Step 3</b>	<p><b>getHqosId commit</b></p> <p><b>Example:</b></p> <pre> Switch(config-controller-ProvisionQos)# <b>getEvcHqosPolicy commit</b> </pre>	Sends the EVC HQoS configuration to the NID.
<b>Step 4</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre> Switch(config-controller-ProvisionQos)# <b>exit</b> </pre>	Exits the QoS provisioning mode.

### Configuration Example

The example displays the EVC HQoS ID on the controller:

```

Switch(config-controller-ProvisionQos)# getEvcHqosPolicy evcHqosPolicy evc_id 1
Switch(config-controller-ProvisionQos)# getEvcHqosPolicy review
Commands in queue:
    getEvcHqosPolicy evcHqosPolicy evc_id 1
Switch(config-controller-ProvisionQos)# getEvcHqosPolicy commit

Switch(config-controller-ProvisionQos)# exit

```

## Displaying the QCE List on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS, on page 254](#).

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>showQCElist</b> {commit   flush   show_qce {all   specific <i>specific_QCE</i>}   review}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)#showQCElist show_qce all Switch(config-controller-ProvisionQos)#showQCElist show_qce specific 2 Switch(config-controller-ProvisionQos)#showQCElist review Switch(config-controller-ProvisionQos)#showQCElist commit</pre>	<p>Displays the QCE list.</p> <ul style="list-style-type: none"> <li>• <b>show_qce</b>—Displays QCE list.</li> <li>• <b>all</b>—Displays entire QCE list.</li> <li>• <b>specific <i>specific_QCE</i></b>—Displays specific QCE list.</li> <li>• <b>commit</b>—Sends the QoS configuration to the NID.</li> <li>• <b>flush</b>—Flushes all QoS configuration from the queue.</li> <li>• <b>review</b>—Displays the QoS configuration on the controller.</li> </ul>
Step 2	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# exit</pre>	<p>Exits the QoS provisioning mode.</p>

## Configuration Example

The example displays the QCE list on the controller:

```
Switch(config-controller-ProvisionQos)#showQCElist show_qce all
Switch(config-controller-ProvisionQos)#showQCElist show_qce specific 2
Switch(config-controller-ProvisionQos)#showQCElist review
Commands in queue:
    showQCElist show_qce all
    showQCElist show_qce specific 2
Switch(config-controller-ProvisionQos)#showQCElist commit
ShowQCElist_Output.show_qce_configuration.QCE_List[0].qce_id = 2
ShowQCElist_Output.show_qce_configuration.QCE_List[0].status = false

ShowQCElist Commit Success!!!
Switch(config-controller-ProvisionQos)# exit
```

## Displaying QoS Queue Statistics on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS, on page 254](#).

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>showQueueStatistics</b> {<b>commit</b>   <b>flush</b>   <b>queue_stats port_number port_num</b>}   <b>review</b>}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQoS)#showQueueStatistics queue_stats port_number 3 Switch(config-controller-ProvisionQoS)#showQueueStatistics review Switch(config-controller-ProvisionQoS)#showQueueStatistics commit</pre>	<p>Displays the QoS queue statistics.</p> <ul style="list-style-type: none"> <li>• <b>queue_stats</b>—Displays egress queue statistics.</li> <li>• <b>port_number port_num</b>—Displays statistics for specified port. The valid range is from 1 to 6.</li> <li>• <b>commit</b>—Sends the QoS configuration to NID.</li> <li>• <b>flush</b>—Flushes all QoS from the queue.</li> <li>• <b>review</b>—Displays the QoS configuration on the controller.</li> </ul>
Step 2	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQoS)# exit</pre>	<p>Exits the QoS provisioning mode.</p>

## Configuration Example

The example displays the egress queue statistics on the controller:

```
Switch(config-controller-ProvisionQoS)#showQueueStatistics queue_stats port_number 3
Switch(config-controller-ProvisionQoS)#showQueueStatistics review
Commands in queue:
    showQueueStatistics queue_stats port_number 3

Switch(config-controller-ProvisionQoS)#showQueueStatistics commit
ShowQueueStatistics_Output.queue_statistics.port_number = 3
ShowQueueStatistics_Output.queue_statistics.Queue_0.frames = 0
ShowQueueStatistics_Output.queue_statistics.Queue_1.frames = 0
ShowQueueStatistics_Output.queue_statistics.Queue_2.frames = 0
ShowQueueStatistics_Output.queue_statistics.Queue_3.frames = 0
ShowQueueStatistics_Output.queue_statistics.Queue_4.frames = 0
ShowQueueStatistics_Output.queue_statistics.Queue_5.frames = 0
ShowQueueStatistics_Output.queue_statistics.Queue_6.frames = 0
ShowQueueStatistics_Output.queue_statistics.Queue_7.frames = 0

ShowQueueStatistics Commit Success!!!
Switch(config-controller-ProvisionQoS)# exit
```

## Displaying the Hierarchical QoS ID List on the Controller

### Before You Begin

- Perform the steps to provision QoS on the controller. See [Provisioning the Controller to Configure QoS, on page 254](#).

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>showHqosIdList</b> {<b>commit</b>   <b>flush</b>   <b>show_hqos_id</b> {<b>all</b>   <b>specific</b> <i>specific_QCE</i>}   <b>review</b>}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)#showHqosIdList show_hqos_id all Switch(config-controller-ProvisionQos)#showHqosIdList show_hqos_id specific 2 Switch(config-controller-ProvisionQos)#showHqosIdList review Switch(config-controller-ProvisionQos)#showHqosIdList commit</pre>	<p>Displays the HQoS ID list.</p> <ul style="list-style-type: none"> <li>• <b>show_hqos_id</b>—Displays HQoS ID list.</li> <li>• <b>all</b>—Displays entire HQoS ID list.</li> <li>• <b>specific</b> <i>specific_hqos-id</i>—Displays specific HQoS ID list.</li> <li>• <b>commit</b>—Sends the QoS configuration to the NID.</li> <li>• <b>flush</b>—Flushes all QoS configuration from the queue.</li> <li>• <b>review</b>—Displays the QoS configuration on the controller.</li> </ul>
Step 2	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionQos)# exit</pre>	<p>Exits the QoS provisioning mode.</p>

## Configuration Example

The example displays the HQoS ID list on the controller:

```
Switch(config-controller-ProvisionQos)#showHqosIdList show_hqos_id specific 2
Switch(config-controller-ProvisionQos)#showHqosIdList review
Commands in queue:
    showHqosIdList show_hqos_id all
    showHqosIdList show_hqos_id specific 2
Switch(config-controller-ProvisionQos)#showHqosIdList commit
ShowHqosIdList_Output.show_hqos_id_response.hqos_id_list[0].hqos_id = 2
ShowHqosIdList_Output.show_hqos_id_response.hqos_id_list[0].status = false

ShowHqosIdList Commit Success!!!
Switch(config-controller-ProvisionQos)# exit
```





## Configuring Ethernet OAM, Link OAM, and CFM

Ethernet Operations, Administration, and Maintenance (OAM) is a protocol for installing, monitoring, and troubleshooting Ethernet networks to increase management capability within the context of the overall Ethernet infrastructure. The Cisco ME 1200 Series Carrier Ethernet Access Device supports IEEE 802.1ag Connectivity Fault Management (CFM), and IEEE 802.3ah Ethernet OAM discovery, link monitoring, remote fault detection, and remote loopback.

This document provides information about configuring Ethernet OAM, Link OAM, and CFM.

For more information on Ethernet OAM and CFM, see the *Cisco IOS Carrier Ethernet Configuration Guide*.

- [Understanding the Ethernet OAM Protocol](#) , page 311
- [Understanding Link OAM](#), page 324
- [Understanding Connectivity Fault Management](#), page 328
- [Configuration Example: Loopback](#), page 335
- [Configuration Example: Loss Measurement–Single Ended](#), page 337
- [Configuration Example: Loss Measurement–Dual Ended](#), page 341

### Understanding the Ethernet OAM Protocol

The Ethernet OAM protocol for installing, monitoring, and troubleshooting Metro Ethernet networks and Ethernet WANs relies on an optional sublayer in the data link layer of the OSI model. Normal link operation does not require Ethernet OAM. You can implement Ethernet OAM on any full-duplex point-to-point or emulated point-to-point Ethernet link for a network or part of a network (specified interfaces).

OAM frames, called OAM protocol data units (OAM PDUs) use the slow protocol destination MAC address 0180.c200.0002. They are intercepted by the MAC sublayer and cannot propagate beyond a single hop within an Ethernet network. Ethernet OAM is a relatively slow protocol, with a maximum transmission rate of 10 frames per second, resulting in minor impact to normal operations. However, when you enable link monitoring, because the CPU must poll error counters frequently, the number of required CPU cycles is proportional to the number of interfaces that must be polled.

## OAM Features

These OAM features are defined by IEEE 802.3ah:

- Discovery identifies devices in the network and their OAM capabilities. It uses periodic OAM PDUs to advertise OAM mode, configuration, and capabilities; PDU configuration; and platform identity. An optional phase allows the local station to accept or reject the configuration of the peer OAM entity.
- Link monitoring detects and indicates link faults under a variety of conditions and uses the event notification OAM PDU to notify the remote OAM device when it detects problems on the link. Error events include when the number of symbol errors, the number of frame errors, the number of frame errors within a specified number of frames, or the number of error seconds within a specified period exceed a configured threshold.
- Remote failure indication conveys a slowly deteriorating quality of an OAM entity to its peers by communicating these conditions: Link Fault means a loss of signal, Dying Gasp means an unrecoverable condition, and Critical Event means an unspecified vendor-specific critical event. The switch can receive and process but not generate Link Fault or Critical Event OAM PDUs. It can generate Dying Gasp OAM PDUs to show when Ethernet OAM is disabled, the interface is shut down, the interface enters the error-disabled state, or the switch is reloading. It also supports Dying Gasp PDUs based on loss of power.
- Remote loopback mode to ensure link quality with a remote peer during installation or troubleshooting. In this mode, when the switch receives a frame that is not an OAM PDU or a pause frame, it sends it back on the same port. The link appears to the user to be in the up state. You can use the returned loopback acknowledgment to test delay, jitter, and throughput.

The following sections describe how to configure ethernet OAM on the Cisco ME 1200 NID.

## Setting the Alarm Indication Signal (AIS)

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>OperationsMepPortType</b>  <b>Example:</b> Switch(config-controller)# OperationsMepPortType	Enters the OperationsMepPortType mode and enables provisioning of the MEP.
Step 4	<b>setAis aisConfig {aisAction {disable   enable {framerate   protect}}   mepInstance mep_instance_number}</b>	Enables or disables the alarm indication signal request on a Maintenance End Point (MEP) instance.



	Command or Action	Purpose
	<p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # setAis aisConfig aisAction enable frameRate fr1s Switch(config-controller-OperationsMepPortType) # setAis aisConfig aisAction enable protect disable Switch(config-controller-OperationsMepPortType) # setAis aisConfig aisAction disable Switch(config-controller-OperationsMepPortType) # setAis aisConfig mepInstance 1</pre>	<ul style="list-style-type: none"> <li>• <b>aisAction</b>—Enables or disables the AIS.</li> <li>• <b>framerate</b>—Defines the frame rate, whether frames per minutes, or frames per second.</li> <li>• <b>protect</b>—Defines whether or not AIS can be used for protection.</li> <li>• <b>mepInstance</b>—Sets the MEP instance number. The valid values are from 1 to 128.</li> </ul>
<b>Step 5</b>	<p><b>setAis review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # setAis review</pre>	Displays the setAis configuration.
<b>Step 6</b>	<p><b>setAis commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # setAis commit</pre>	Sends the setAis configuration to the Cisco ME 1200 NID.
<b>Step 7</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # exit Switch(config-controller) #</pre>	Exits to the controller configuration mode.

## Setting Delay Measurement

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<p><b>configure terminal</b></p> <p><b>Example:</b></p> <pre>Switch# configure terminal</pre>	Enters global configuration mode.
<b>Step 2</b>	<p><b>controller nid 1/NID_ID</b></p> <p><b>Example:</b></p> <pre>Switch(config)# controller nid 1/1</pre>	Enters the controller configuration mode.

	Command or Action	Purpose
<b>Step 3</b>	<b>ProvisionMepPortType</b>  <b>Example:</b> Switch(config-controller)# OperationsMepPortType	Enters the OperationsMepPortType mode and enables provisioning of the MEP.
<b>Step 4</b>	<b>setDm dmConfig {dmAction {disable   enable {calculation   cast   interval   lastN   mode   priority}}   mepInstance mep_instance_number}</b>  <b>Example:</b>  Switch(config-controller-OperationsMepPortType)# setDM dmConfig dmAction enable calculation rdtrp Switch(config-controller-OperationsMepPortType)# setDM dmConfig dmAction enable cast uni mepId 0 Switch(config-controller-OperationsMepPortType)# setDM dmConfig dmAction enable interval 10 Switch(config-controller-OperationsMepPortType)# setDM dmConfig dmAction enable lastN 10 Switch(config-controller-OperationsMepPortType)# setDM dmConfig dmAction enable mode twoWay Switch(config-controller-OperationsMepPortType)# setDM dmConfig dmAction enable priority 0 Switch(config-controller-OperationsMepPortType)# setDM dmConfig dmAction disable Switch(config-controller-OperationsMepPortType)# setDM dmConfig mepInstance 1	Enables or disables the delay measurement request. <ul style="list-style-type: none"> <li>• <b>dmAction</b>—Enables or disables the delay measurement.</li> <li>• <b>calculation</b>—Is the delay calculation.</li> <li>• <b>cast</b>—Is either unicast or multicast.</li> <li>• <b>interval</b>—Is the interval between PDU transmission. The valid values are from 10 to 65535.</li> <li>• <b>lastN</b>—Are the last N delays used for average last N calculation.</li> <li>• <b>mode</b>—Is either one-way mode or two-way mode.</li> <li>• <b>priority</b>—Is the priority in case of tagged OAM. In the EVC domain this is the COS-ID.</li> <li>• <b>mepInstance</b>—Is the MEP instance number. The valid values are from 1 to 128.</li> </ul>
<b>Step 5</b>	<b>setDm review</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType)# setDm review	Displays the setDm configuration.
<b>Step 6</b>	<b>setDm commit</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType)# setDm commit	Sends the setDm configuration to the Cisco ME 1200 NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b>  Switch(config-controller-OperationsMepPortType)# exit Switch(config-controller)#	Exits to the controller configuration mode.

## Updating Delay Measurement

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>ProvisionMepPortType</b>  <b>Example:</b> Switch(config-controller)# OperationsMepPortType	Enters the OperationsMepPortType mode and enables fault management and performance monitoring on the MEP.
Step 4	<b>updateDM updateDMConfig {mepInstance mep_instance_id   update {overflowReset {keep   reset}   synchronized {disable   enable}   txmode {proprietary   standardize}   unit {ns   us}   bin { fd   ifdv   threshold}}</b>  <b>Example:</b>  Switch(config-controller-OperationsMepPortType)# updateDM updateDmConfig update overflowReset keep Switch(config-controller-OperationsMepPortType)# updateDM updateDmConfig update synchronized disable Switch(config-controller-OperationsMepPortType)# updateDM updateDmConfig update txMode standardize Switch(config-controller-OperationsMepPortType)# updateDM updateDmConfig update unit us	Updates the delay measurement request. <ul style="list-style-type: none"> <li>• <b>mepInstance</b>—Configures the MEP instance number. The valid values are from 1 to 128.</li> <li>• <b>update</b>—Updates the delay measurement parameters.</li> <li>• <b>overflowRest</b>—Configures all Delay Measurement results on total delay counter overflow.</li> <li>• <b>synchronized</b>—Synchronizes the near- and far-end in real time.</li> <li>• <b>txmode</b>—Configures the transmission mode.</li> <li>• <b>unit</b>—Configures the delay in nano seconds or microseconds.</li> <li>• <b>bin</b>—Configures the delay measurement binning.               <ul style="list-style-type: none"> <li>◦ <b>fd</b> —Configures number of FD measurement bins . The values are from 2 to 10.</li> <li>◦ <b>ifdv</b> —Configures number of IFDV measurement Bins . The values are from 2 to 10.</li> <li>◦ <b>threshold</b> —Configures threshold for each delay measurement binning . The values are from 1 to 50000.</li> </ul> </li> </ul>

	Command or Action	Purpose
<b>Step 5</b>	<b>updateDM review</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType) # updateDM review	Displays the updateDM configuration.
<b>Step 6</b>	<b>updateDM commit</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType) # updateDM commit	Sends the updateDM configuration to the Cisco ME 1200 NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType) # exit Switch(config-controller) #	Exits to the controller configuration mode.

## Setting Loss Measurement

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config) # controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionMepPortType</b>  <b>Example:</b> Switch(config-controller) # OperationsMepPortType	Enters the OperationsMepPortType mode and enables fault management and performance monitoring on the MEP.
<b>Step 4</b>	<b>setlm lmConfig {lmAction {disable   enable {cast   flr   framerate   mode   priority}}   mepInstance mep_instance_number}</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType) #	Enables or disables the loss measurement request. <ul style="list-style-type: none"> <li>• <b>lmAction</b>—Enables or disables the loss measurement.</li> <li>• <b>cast</b>—Defines whether OAM PDU is transmitted with either unicast MAC or multicast MAC.</li> </ul>

	Command or Action	Purpose
	<pre>setLM lmConfig lmAction enable cast uni Switch(config-controller-OperationsMepPortType) # setLM lmConfig lmAction enable flr 5 Switch(config-controller-OperationsMepPortType) # setLM lmConfig lmAction enable frameRate frls Switch(config-controller-OperationsMepPortType) # setLM lmConfig lmAction enable mode single Switch(config-controller-OperationsMepPortType) # setLM lmConfig lmAction enable priority 0 Switch(config-controller-OperationsMepPortType) # setLM lmConfig lmAction disable Switch(config-controller-OperationsMepPortType) # setLM lmConfig mepInstance 1</pre>	<ul style="list-style-type: none"> <li>• <b>flr</b>—Is the frame loss ratio. The valid values for frame loss interval ratio is from 0 to 99.</li> <li>• <b>framerate</b>—Defines the frame rate, whether 1 or 10 frames per second, 1 or 6 frames per minutes, or 6 frames per hour.</li> <li>• <b>mode</b>—Is either single mode or dual mode.</li> <li>• <b>priority</b>—Is the priority in case of tagged OAM. In the EVC domain this is the COS-ID. The valid values are from 0 to 7.</li> <li>• <b>mepInstance</b>—Is the MEP instance number. The valid values are from 1 to 128.</li> </ul>
<b>Step 5</b>	<p><b>setLM review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # setLM review</pre>	Displays the setLM configuration.
<b>Step 6</b>	<p><b>setLM commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # setLM commit</pre>	Sends the setLM configuration to the Cisco ME 1200 NID.
<b>Step 7</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # exit Switch(config-controller) #</pre>	Exits to the controller configuration mode.

## Setting Lock Signal

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<p><b>configure terminal</b></p> <p><b>Example:</b></p> <pre>Switch# configure terminal</pre>	Enters global configuration mode.

	Command or Action	Purpose
<b>Step 2</b>	<p><b>controller nid</b> <i>1/NID_ID</i></p> <p><b>Example:</b> Switch(config)# controller nid 1/1</p>	Enters the controller configuration mode.
<b>Step 3</b>	<p><b>ProvisionMepPortType</b></p> <p><b>Example:</b> Switch(config-controller)# OperationsMepPortType</p>	Enters the OperationsMepPortType mode and enables fault management and performance monitoring on the MEP.
<b>Step 4</b>	<p><b>setlck lckConfig</b>{lckAction {disable   enable framerate   mepInstance <i>mep_instance_number</i>}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType)# setLck lckConfig lckAction enable frameRate fr1s Switch(config-controller-OperationsMepPortType)# setLck lckConfig lckAction disable Switch(config-controller-OperationsMepPortType)# setLck lckConfig mepInstance 1</pre>	<p>Enables or disables the lock signal request.</p> <ul style="list-style-type: none"> <li>• <b>lckAction</b>—Enables or disables the lock signal request.</li> <li>• <b>framerate</b>—Defines the frame rate, whether frames per minutes, or frames per second.</li> <li>• <b>mepInstance</b>—Is the MEP instance number. The valid values are from 1 to 128.</li> </ul>
<b>Step 5</b>	<p><b>setlck review</b></p> <p><b>Example:</b> Switch(config-controller-OperationsMepPortType)# setlck review</p>	Displays the setlck configuration.
<b>Step 6</b>	<p><b>setlck commit</b></p> <p><b>Example:</b> Switch(config-controller-OperationsMepPortType)# setlck commit</p>	Sends the setlck configuration to the Cisco ME 1200 NID.
<b>Step 7</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType)# exit Switch(config-controller)#</pre>	Exits to the controller configuration mode.

## Setting Link Trace

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid /NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>OperationsMepPortType</b>  <b>Example:</b> Switch(config-controller)# OperationsMepPortType	Enters the OperationsMepPortType mode and enables fault management and performance monitoring on the MEP.
<b>Step 4</b>	<b>setLinkTrace linkTrace {ltAction {disable   enable} {destination   priority   ttl}   mepInstance mep_instance_number}</b>  <b>Example:</b>  Switch(config-controller-OperationsMepPortType)# setLinkTrace linkTrace ltAction enable destination mepId 0 Switch(config-controller-OperationsMepPortType)# setLinkTrace linkTrace ltAction enable priority 0 Switch(config-controller-OperationsMepPortType)# setLinkTrace linkTrace ltAction enable ttl 1 Switch(config-controller-OperationsMepPortType)# setLinkTrace linkTrace ltAction disable Switch(config-controller-OperationsMepPortType)# setLinkTrace linkTrace mepInstance 1	Enables or disables the link trace request. <ul style="list-style-type: none"> <li>• <b>ltAction</b>—Enables or disables the link trace.</li> <li>• <b>enable destination</b>—Enables the target peer MEP.</li> <li>• <b>priority</b>—Is the priority in case of tagged OAM. In the EVC domain, this value is the COS-ID. The valid values are from 0 to 7.</li> <li>• <b>ttl</b>—Is the time-to-live value. The valid values are from 1 to 999.</li> <li>• <b>mepInstance</b>—Is the MEP instance number. The valid values are from 1 to 128.</li> </ul>
<b>Step 5</b>	<b>setLinkTrace review</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType)# setLinkTrace review	Displays the setLinkTrace configuration.
<b>Step 6</b>	<b>setLinkTrace commit</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType)# setLinkTrace commit	Sends the setLinkTrace configuration to the Cisco ME 1200 NID.

	Command or Action	Purpose
Step 7	<b>exit</b>  <b>Example:</b> <pre>Switch(config-controller-OperationsMepPortType)# exit Switch(config-controller)#</pre>	Exits to the controller configuration mode.

## Setting Loopback

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> <pre>Switch# configure terminal</pre>	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> <pre>Switch(config)# controller nid 1/1</pre>	Enters the controller configuration mode.
Step 3	<b>OperationsMepPortType</b>  <b>Example:</b> <pre>Switch(config-controller)# OperationsMepPortType</pre>	Enters the OperationsMepPortType mode and enables fault management and performance monitoring on the MEP.
Step 4	<b>setloopBack loopBackConfig {lbAction {disable   enable {cast   count   dei   interval   priority   size}}   mepInstance mep_instance_number}</b>  <b>Example:</b> <pre>Switch(config-controller-OperationsMepPortType)# setLoopBack loopBackConfig lbAction enable cast uni mepId 0 Switch(config-controller-OperationsMepPortType)# setLoopBack loopBackConfig lbAction enable count 5 Switch(config-controller-OperationsMepPortType)# setLoopBack loopBackConfig lbAction enable dei disable Switch(config-controller-OperationsMepPortType)# setLoopBack loopBackConfig lbAction enable interval 10 Switch(config-controller-OperationsMepPortType)# setLoopBack loopBackConfig lbAction enable priority 0 Switch(config-controller-OperationsMepPortType)# setLoopBack loopBackConfig lbAction enable size 100 Switch(config-controller-OperationsMepPortType)# setLoopBack loopBackConfig lbAction disable</pre>	Enables or disables the loopback request. <ul style="list-style-type: none"> <li>• <b>lbAction</b>—Enables or disables loopback.</li> <li>• <b>cast</b>—Is either unicast or multicast.</li> <li>• <b>count</b>—Is the number of loopback message (LBM) PDUs to send in one loop test.</li> <li>• <b>dei</b>—Is the Drop Eligible Indicator in case of tagged OAM.</li> <li>• <b>interval</b>—Is the interval between transmitting LBM protocol data unit (PDU). The valid values are from 1 to 100.</li> <li>• <b>priority</b>—Is the priority in case of tagged OAM. In the EVC domain this is the COS-ID.</li> <li>• <b>size</b>—Is the number of bytes in the LBM PDU Data Pattern TLV. The valid values are from 1 to 1400.</li> </ul>



	Command or Action	Purpose
	Switch(config-controller-OperationsMepPortType)# setLoopBack loopBackConfig mepInstance 1	<ul style="list-style-type: none"> <li>• <b>mepInstance</b>—Is the MEP instance number. The valid values are from 1 to 128.</li> </ul>
<b>Step 5</b>	<b>setloopBack review</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType)# setloopBack review	Displays the setloopBack configuration.
<b>Step 6</b>	<b>setloopBack commit</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType)# setloopBack commit	Sends the setloopBack configuration to the Cisco ME 1200 NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType)# exit Switch(config-controller)#	Exits to the controller configuration mode.

## Setting Test Signal

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>OperationsMepPortType</b>  <b>Example:</b> Switch(config-controller)# OperationsMepPortType	Enters the OperationsMepPortType mode and enables fault management and performance monitoring on the MEP.
<b>Step 4</b>	<b>setstst tstConfig tstConfig {dei {disable   enable}   mepId   mepInstance mep_instance_id   pattern   priority   rate   sequence size}</b>	Enables or disables the test signal request. <ul style="list-style-type: none"> <li>• <b>tstConfig</b>—Enables or disables the test signal request.</li> </ul>

	Command or Action	Purpose
	<p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # setTst tstConfig dei disable Switch(config-controller-OperationsMepPortType) # setTst tstConfig mepId 0 Switch(config-controller-OperationsMepPortType) # setTst tstConfig mepInstance 1 Switch(config-controller-OperationsMepPortType) # setTst tstConfig pattern allZero Switch(config-controller-OperationsMepPortType) # setTst tstConfig priority 0 Switch(config-controller-OperationsMepPortType) # setTst tstConfig rate 1 Switch(config-controller-OperationsMepPortType) # setTst tstConfig sequence disable Switch(config-controller-OperationsMepPortType) # setTst tstConfig size 64</pre>	<ul style="list-style-type: none"> <li>• <b>dei</b>—Defines the Drop Eligible Indicator in case of tagged OAM.</li> <li>• <b>mepId</b>—Defines peer MEP ID. The valid values are from 0 to 8191.</li> <li>• <b>mepInstance</b>—Is the MEP instance number. The valid values are from 1 to 128.</li> <li>• <b>pattern</b>—Enables the sequence number in test PDU.</li> <li>• <b>priority</b>—Is the priority in case of tagged OAM. In the EVC domain this is the COS-ID.</li> <li>• <b>rate</b>—Is the test frame transmission bit rate – in Mega bits per second. The valid values are from 1 to 400.</li> <li>• <b>sequence</b>— Enables and disables sequence number in test PDUs</li> <li>• <b>size</b>—Is the test frame size. The valid values are from 1 to 1581.</li> </ul>
<b>Step 5</b>	<p><b>setTst review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # setTst review</pre>	Displays the setTst configuration.
<b>Step 6</b>	<p><b>setTst commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # setTst commit</pre>	Sends the setTst configuration to the Cisco ME 1200 NID.
<b>Step 7</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # exit Switch(config-controller) #</pre>	Exits to the controller configuration mode.

## Updating Test Signal

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>OperationsMepPortType</b>  <b>Example:</b> Switch(config-controller)# OperationsMepPortType	Enters the OperationsMepPortType mode and enables fault management and performance monitoring on the MEP.
<b>Step 4</b>	<b>updateTst updateTstConfig {mepInstance mep_instance_id   update {Rx {disable   enable}   Tx {disable   enable}}}</b>  <b>Example:</b>  Switch(config-controller-OperationsMepPortType)# updateTst updateTstConfig update Rx enable Switch(config-controller-OperationsMepPortType)# updateTst updateTstConfig update Tx enable Switch(config-controller-OperationsMepPortType)# updateTst updateTstConfig mepInstance 1	Updates the test signal request. <ul style="list-style-type: none"> <li>• <b>updateTstConfig</b>—Updates the test signal parameters.</li> <li>• <b>mepInstance</b>—Is the MEP instance number. The valid values are from 1 to 128.</li> <li>• <b>update</b>—Enables or disables the receive and transmit test signals.</li> </ul>
<b>Step 5</b>	<b>updateTst review</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType)# updateTst review	Displays the updateTst configuration.
<b>Step 6</b>	<b>updateTst commit</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType)# updateTst commit	Sends the updateTst configuration to the Cisco ME 1200 NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b>  Switch(config-controller-OperationsMepPortType)# exit Switch(config-controller)#	Exits to the controller configuration mode.

# Understanding Link OAM

The following sections describe how to configure Link OAM on the Cisco ME 1200 NID.

## Setting OAM Port Operations

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid /NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>LinkOamPortType</b>  <b>Example:</b> Switch(config-controller)# LinkOamPortType	Enters the LinkOamPortType mode.
<b>Step 4</b>	<b>setLinkOamPortConfig portConfig {linkOam enable   linkmonitorSupport enable   loopbackOperation enable   loopbackSupport enable   mibretrivalSupport enable   oamMode {active   passive}   portNumber port_number   variableRetrieve {localInfo   remoteInfo}}</b>  <b>Example:</b>  Switch(config-controller-LinkOamPortType)# setLinkOamPortConfig portConfig portNumber 5 Switch(config-controller-LinkOamPortType)# setLinkOamPortConfig portConfig linkOam enable Switch(config-controller-LinkOamPortType)# setLinkOamPortConfig portConfig linkmonitorSupport enable  Switch(config-controller-LinkOamPortType)# setLinkOamPortConfig portConfig loopbackOperation enable Switch(config-controller-LinkOamPortType)# setLinkOamPortConfig portConfig loopbackSupport enable Switch(config-controller-LinkOamPortType)# setLinkOamPortConfig portConfig mibretrivalSupport enable Switch(config-controller-LinkOamPortType)# setLinkOamPortConfig portConfig oamMode active Switch(config-controller-LinkOamPortType)# setLinkOamPortConfig portConfig variableRetrieve localInfo	Sets the Link OAM port configuration. <ul style="list-style-type: none"> <li>• <b>linkOam</b>—Sets the supported Link OAM.</li> <li>• <b>linkmonitorSupport</b>—Enables or disables the Link monitor support.</li> <li>• <b>loopbackOperation</b>—Sets the loopback operation.</li> <li>• <b>loopbackSupport</b>—Sets the Link OAM remote loopback support.</li> <li>• <b>mibretrivalSupport</b>—Set MIB retrieval support.</li> <li>• <b>oamMode</b>—Sets the Link OAM mode to Active or Passive.</li> <li>• <b>portNumber</b>—Sets the interface number. The valid values are from 1 to 6.</li> <li>• <b>variableRetrieve</b>—Sets the MIB variable retrieve value to local information or remote information.</li> </ul>

	Command or Action	Purpose
Step 5	<b>setLinkOamPortConfig review</b>  <b>Example:</b> Switch(config-controller-LinkOamPortType) # setLinkOamPortConfig review	Displays the LinkOamPortType configuration.
Step 6	<b>setLinkOamPortConfig commit</b>  <b>Example:</b> Switch(config-controller-LinkOamPortType) # setLinkOamPortConfig commit	Sends the LinkOamPortType configuration to the Cisco ME 1200 NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-LinkOamPortType) # exit Switch(config-controller) #	Exits to the controller configuration mode.

### What to Do Next

After the configuration is sent to the Cisco ME 1200 NID, use the following **get** command to view the LinkOamPortType configuration.

```
Switch(config-controller-LinkOamPortType) # getLinkOamPortConfig linkOamRequest portNumber 5
Switch(config-controller-LinkOamPortType) # getLinkOamPortConfig review
Switch(config-controller-LinkOamPortType) # getLinkOamPortConfig commit
```

## Setting Link OAM Event Configuration

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config) # controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>LinkOamPortType</b>  <b>Example:</b> Switch(config-controller) # LinkOamPortType	Enters the LinkOamPortType mode.

	Command or Action	Purpose
Step 4	<p><b>setlinkeventConfig linkEventConfig {errorFrame {threshold   window}   frameSeconds {threshold   window}   portNumber <i>interface_number</i>   symbolPeriod {threshold   window}}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-LinkOamPortType)# setLinkEventConfig linkEventConfig portNumber 5 Switch(config-controller-LinkOamPortType)# setLinkEventConfig linkEventConfig errorFrame threshold 0 Switch(config-controller-LinkOamPortType)# setLinkEventConfig linkEventConfig errorFrame window 1 Switch(config-controller-LinkOamPortType)# setLinkEventConfig linkEventConfig frameSeconds threshold 0 Switch(config-controller-LinkOamPortType)# setLinkEventConfig linkEventConfig frameSeconds window 10 Switch(config-controller-LinkOamPortType)# setLinkEventConfig linkEventConfig symbolPeriod threshold 0 Switch(config-controller-LinkOamPortType)# setLinkEventConfig linkEventConfig symbolPeriod window 1</pre>	<p>Sets the Link Event configuration request.</p> <ul style="list-style-type: none"> <li>• <b>errorFrame</b>—Configures the frame error event thresholds and window for error frames that trigger an error-frame link event. The valid threshold values are from 0 to 4294967295 number of frames. The valid window values to count the number of error frames is from 1 to 60 seconds.</li> <li>• <b>frameSeconds</b>—Configures the frame seconds summary. The valid threshold values are from 0 to 65535 number of permissible error frames. The valid window values for monitoring the frames is from 10 to 900 seconds.</li> <li>• <b>portNumber</b>—Is the port number for the Link Event configuration request. The valid values are from 1 to 6.</li> <li>• <b>symbolPeriod</b>—Configures the window and thresholds for an error-symbol period that triggers an error-symbol period link event. The valid threshold values are from 0 to 4294967295 number of permissible error symbols. The valid window values for monitoring the frames is from 1 to 60 seconds.</li> </ul>
Step 5	<p><b>setLinkEventConfig review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-LinkOamPortType)# setLinkEventConfig review</pre>	Displays the setLinkEventConfig configuration.
Step 6	<p><b>setLinkEventConfig commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-LinkOamPortType)# setLinkEventConfig commit</pre>	Sends the setLinkEventConfig configuration to the Cisco ME 1200 NID.
Step 7	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-LinkOamPortType)# exit Switch(config-controller)#</pre>	Exits to the controller configuration mode.

### What to Do Next

After the configuration is sent to the Cisco ME 1200 NID, use the following **get** command to view the setLinkEventConfig configuration.

```
Switch(config-controller-LinkOamPortType)# getLinkEventConfig linkOamRequest portNumber 5
```

```
Switch(config-controller-LinkOamPortType)# getLinkEventConfig review
Switch(config-controller-LinkOamPortType)# getLinkEventConfig commit
```

## Setting Remote Loopback Start And Stop

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid /NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>LinkOamPortType</b>  <b>Example:</b> Switch(config-controller)# LinkOamPortType	Enters the LinkOamPortType mode.
Step 4	<b>setRemoteLoopBack remoteLoopBak {start portList   stop portList}</b>  <b>Example:</b> Switch(config-controller-LinkOamPortType)# setRemoteLoopBack remoteLoopBack start portList 1	Sets the remote loopback request. <ul style="list-style-type: none"> <li>• <b>start</b>—Starts the remote loopback on the defined port list.</li> <li>• <b>stop</b>—Stops the remote loopback on the defined port list.</li> </ul>
Step 5	<b>setRemoteLoopBack review</b>  <b>Example:</b> Switch(config-controller-LinkOamPortType)# setRemoteLoopBack review Commands in queue: 1 setRemoteLoopBack remoteLoopBack start portList 1 setRemoteLoopBack remoteLoopBack stop portList	Displays the setRemoteLoopBack configuration.
Step 6	<b>setRemoteLoopBack commit</b>  <b>Example:</b> Switch(config-controller-LinkOamPortType)# setRemoteLoopBack commit	Sends the setRemoteLoopBack configuration to the Cisco ME 1200 NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-LinkOamPortType)# exit Switch(config-controller)#	Exits to the controller configuration mode.


## Understanding Connectivity Fault Management

Ethernet CFM is an end-to-end per VLAN Ethernet layer OAM protocol that includes proactive connectivity monitoring, fault verification, and fault isolation. End-to-end can be provider-edge-to-provider-edge (PE-to-PE) device or customer-edge-to-customer-edge (CE-to-CE) device. Ethernet CFM, as specified by IEEE 802.1ag, is the standard for Layer 2 ping, Layer 2 traceroute, and end-to-end connectivity check of the Ethernet network.

### CFM Domain

A CFM maintenance domain is a management space on a network that is owned and operated by a single entity and defined by a set of ports internal to it, but at its boundary. You assign a unique maintenance level (from 0 to 7) to define the hierarchical relationship between domains. The larger the domain, the higher the level. For example, as shown in the figure below, a service-provider domain would be larger than an operator domain and might have a maintenance level of 6, while the operator domain maintenance level is 3 or 4.

Figure 9: CFM Maintenance Domains

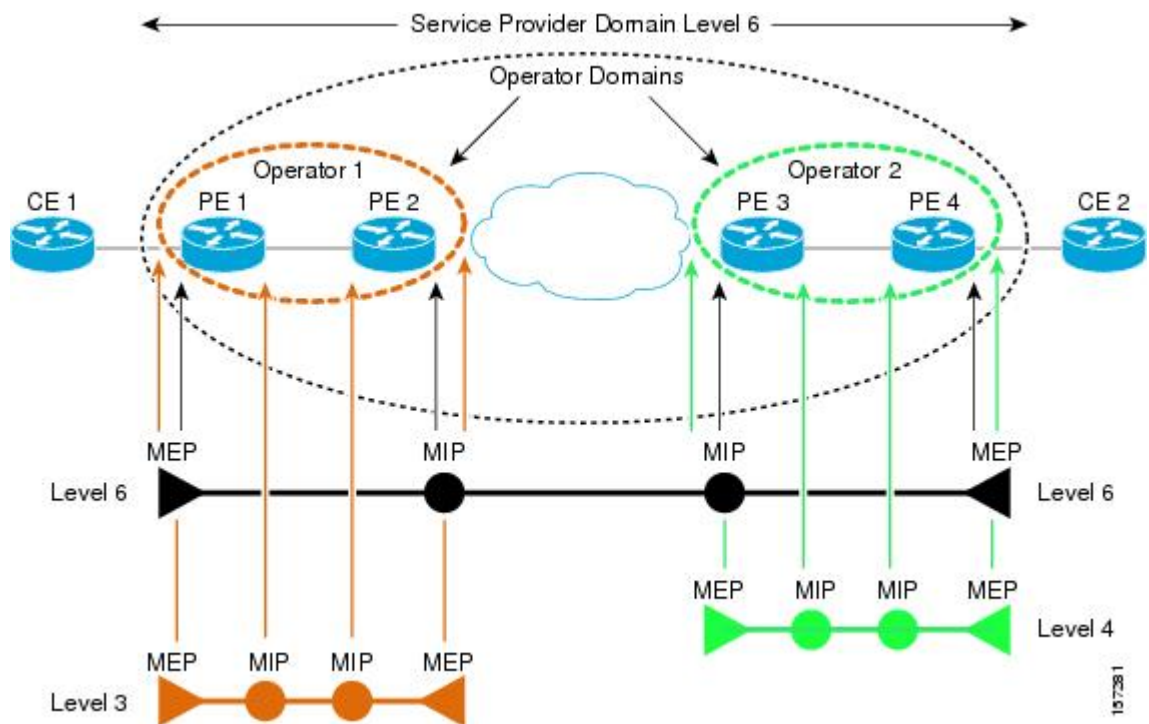

### Maintenance Associations and Maintenance Points

A maintenance association (MA) identifies a service that can be uniquely identified within the maintenance domain. The CFM protocol runs within a maintenance association. A maintenance point is a demarcation



point on an interface that participates in CFM within a maintenance domain. Maintenance points drop all lower-level frames and forward all higher-level frames. There are two types of maintenance points:

- Maintenance end points (MEPs) are points at the edge of the domain that define the boundaries and confine CFM messages within these boundaries. Outward facing or Down MEPs communicate through the wire side (connected to the port). Inward facing or Up MEPs communicate through the relay function side, not the wire side.
- Maintenance intermediate points (MIPs) are internal to a domain, not at the boundary, and respond to CFM only when triggered by traceroute and loopback messages. They forward CFM frames received from MEPs and other MIPs, drop all CFM frames at a lower level (unless MIP filtering is enabled), and forward all CFM frames at a higher level and at a lower level and regardless of whether they are received from the relay or wire side. When MIP filtering is enabled, the MIP drops CFM frames at a lower level. MIPs also catalog and forward continuity check messages (CCMs), but do not respond to them.

The following sections describe how to configure CFM on the Cisco ME 1200 NID.

## Adding Continuity Check and Automatic Protection Switching

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>ProvisionMepPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionMepPortType	Enters the ProvisionMepPortType mode and enables provisioning of the MEP.
Step 4	<b>addccAps mepFunctionalConfig {aps {disable   enable} {mode {multi   uni}   priority   switchingProtocol {laps   raps}}   cc {disable   enable} {framerate   priority}}</b>  <b>Example:</b> <pre>Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable mode multi Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable switchingProtocol laps Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig cc enable frameRate frls Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig cc enable priority 1</pre>	Adds the CC or APS configuration request. <ul style="list-style-type: none"> <li>• <b>mepFunctionalConfig</b>—Adds the Continuity Check (CC) or automatic protection switching (APS) configuration request.</li> <li>• <b>aps</b>—Enables or disables the APS parameters.</li> <li>• <b>mode</b>—Defines whether multicast or unicast.</li> <li>• <b>priority</b>—Defines the priority in case of tagged OAM. In the EVC domain, this parameter is the COS-ID. The valid values are from 0 to 7.</li> <li>• <b>switchingProtocol</b>—Sets the appropriate APS switching protocol—Linear Automatic Protection</li> </ul>

	Command or Action	Purpose
		Switching protocol (LAPS) or Ring Automatic Protection Switching protocol (RAPS). <ul style="list-style-type: none"> <li>• <b>cc</b>—Enables or disables the CC parameters.</li> <li>• <b>framerate</b>—Sets the CC frame rate.</li> </ul>
<b>Step 5</b>	<b>addCcAps review</b>  <b>Example:</b> Switch(config-controller-ProvisionMepPortType) # addCcAps review	Displays the addCcAps configuration.
<b>Step 6</b>	<b>addCcAps commit</b>  <b>Example:</b> Switch(config-controller-ProvisionMepPortType) # addCcAps commit	Sends the addCcAps configuration to the Cisco ME 1200 NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionMepPortType) # exit Switch(config-controller) #	Exits to the controller configuration mode.

## Adding Peer MEP IDs

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config) # controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionMepPortType</b>  <b>Example:</b> Switch(config-controller) # ProvisionMepPortType	Enters the ProvisionMepPortType mode and enables provisioning of the MEP.

	Command or Action	Purpose
Step 4	<p><b>addPeerMepId mepClientConfig {macAddress mac_address   mepInstance mep_instance   peerMepId peer_mep_id}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType)# addPeerMepId mepClientConfig aisPriority aisHighest Switch(config-controller-ProvisionMepPortType)# addPeerMepId mepClientConfig domain VLAN Switch(config-controller-ProvisionMepPortType)# addPeerMepId mepClientConfig flowId 21 Switch(config-controller-ProvisionMepPortType)# addPeerMepId mepClientConfig mepInstance 1</pre>	<p>Adds the client configuration request.</p> <ul style="list-style-type: none"> <li>• <b>mepClientConfig</b>—Adds the client configuration request.</li> <li>• <b>macAddress</b>—The peer MAC address. This MAC address will be overwritten by any learned MAC address through CCM reception.</li> <li>• <b>mepInstance</b>—Sets the MEP instance number. The valid values are from 1 to 128.</li> <li>• <b>peerMepId</b>—Sets the peer MEP ID. The valid values are from 1 to 8191.</li> </ul>
Step 5	<p><b>addPeerMepId review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType)# addPeerMepId review</pre>	Displays the addPeerMepId configuration.
Step 6	<p><b>addPeerMepId commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType)# addPeerMepId commit</pre>	Sends the addPeerMepId configuration to the Cisco ME 1200 NID.
Step 7	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType)# exit Switch(config-controller)#</pre>	Exits to the controller configuration mode.

## Adding Client Configuration

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>configure terminal</b></p> <p><b>Example:</b></p> <pre>Switch# configure terminal</pre>	Enters global configuration mode.
Step 2	<p><b>controller nid 1/NID_ID</b></p> <p><b>Example:</b></p> <pre>Switch(config)# controller nid 1/1</pre>	Enters the controller configuration mode.

	Command or Action	Purpose
<b>Step 3</b>	<b>ProvisionMepPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionMepPortType	Enters the ProvisionMepPortType mode and enables provisioning of the MEP.
<b>Step 4</b>	<b>addClient mepClientConfig {aisPriority {aisHighest   priority}   domain {evc  vlan}   flowID flow_id   lckPriority {lckHighest   priority}   level meg_level   mepInstance mep_instance}</b>  <b>Example:</b> Switch(config-controller-ProvisionMepPortType)# addClient mepClientConfig aisPriority aisHighest Switch(config-controller-ProvisionMepPortType)# addClient mepClientConfig domain VLAN Switch(config-controller-ProvisionMepPortType)# addClient mepClientConfig flowId 21 Switch(config-controller-ProvisionMepPortType)# addClient mepClientConfig mepInstance 1	Adds the client configuration request. <ul style="list-style-type: none"> <li>• <b>mepClientConfig</b>—Adds the client configuration request.</li> <li>• <b>aisPriority</b>—Sets the alarm indication signal priority. The AIS priority can be set to either the highest priority or any other priority between 0 and 7.</li> <li>• <b>domain</b>—Sets the domain—whether EVC or VLAN.</li> <li>• <b>flowID</b>—Sets the ID of the flow. MEP is related to this flow.</li> <li>• <b>lckPriority</b>—Sets the lock priority. The lock priority can be set to either the highest priority or any other priority between 0 and 7.</li> <li>• <b>level</b>—Sets the MEG level of the MEP. The valid values are from 0 to 7.</li> <li>• <b>mepInstance</b>—Sets the MEP instance number. The valid values are from 1 to 128.</li> </ul>
<b>Step 5</b>	<b>addClient review</b>  <b>Example:</b> Switch(config-controller-ProvisionMepPortType)# addClient review	Displays the addClient configuration.
<b>Step 6</b>	<b>addClient commit</b>  <b>Example:</b> Switch(config-controller-ProvisionMepPortType)# addClient commit	Sends the addClient configuration to the Cisco ME 1200 NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionMepPortType)# exit Switch(config-controller)#	Exits to the controller configuration mode.

## Creating MEP Configuration

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>configure terminal</b></p> <p><b>Example:</b> Switch# configure terminal</p>	Enters global configuration mode.
Step 2	<p><b>controller nid /NID_ID</b></p> <p><b>Example:</b> Switch(config)# controller nid 1/1</p>	Enters the controller configuration mode.
Step 3	<p><b>ProvisionMepPortType</b></p> <p><b>Example:</b> Switch(config-controller)# ProvisionMepPortType</p>	Enters the ProvisionMepPortType mode and enables provisioning of the MEP.
Step 4	<p><b>createMep createMepConfig {direction {DOWN   UP}   domain {EVC   PORT   VLAN}   flowId flow_id   level meg_level   megDomain {maName   megIdFormat {ieec   ituCcMeg   ituMeg}}   mepId mep_id   mepInstance mep_instance   mode {mep   mip}   residencePort port   vid vid_number   voe {disable   enable}}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig direction UP Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig domain VLAN Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig flowId 21 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig level 0 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mode MEP Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig residencePort 1 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig voe disable</pre>	<p>Creates the Maintenance End Point configuration.</p> <ul style="list-style-type: none"> <li>• <b>createMepConfig</b>—Creates the MEP configuration.</li> <li>• <b>direction</b>—Sets the direction of the MEP—whether down (Down MEP) or up (Up MEP).</li> <li>• <b>domain</b>—Sets the domain—whether EVC, Port, or VLAN.</li> <li>• <b>flowID</b>—Sets the ID of the flow. MEP is related to this flow.</li> <li>• <b>level</b>—Sets the MEG level of the MEP. The valid values are from 0 to 7.</li> <li>• <b>megDomain</b>—Sets the maintenance domain configuration to either <b>maName</b> (ITU/IEEE MEG-ID) or <b>megIdFormat</b>.</li> <li>• <b>mepId</b>—Sets the MEP ID. The valid values are from 0 to 8191.</li> <li>• <b>mepInstance</b>—Sets the MEP instance number. The valid values are from 1 to 128.</li> <li>• <b>mode</b>—Sets the mode of the MEP instance—whether Maintenance Entity End Point (MEP) or Maintenance Entity Intermediate Point (MIP).</li> <li>• <b>residencePort</b>—Defines the port that MEP is monitoring. The valid values are from 1 to 6.</li> <li>• <b>vid</b>—The valid values are from 0 to 4094.</li> </ul>

	Command or Action	Purpose
		<p><b>Note</b> If the MEP is a port Up-MEP or an EVC customer MIP, the VID must be provided.</p> <ul style="list-style-type: none"> <li>• <b>voe</b>—Enables or disables the MEP VOE.</li> </ul>
<b>Step 5</b>	<b>createMep review</b>  <b>Example:</b> Switch(config-controller-ProvisionMepPortType) # createMep review	Displays the createMep configuration.
<b>Step 6</b>	<b>createMep commit</b>  <b>Example:</b> Switch(config-controller-ProvisionMepPortType) # createMep commit	Sends the createMep configuration to the Cisco ME 1200 NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionMepPortType) # exit Switch(config-controller) #	Exits to the controller configuration mode.

## Updating MEP Configuration

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config) # controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionMepPortType</b>  <b>Example:</b> Switch(config-controller) # ProvisionMepPortType	Enters the ProvisionMepPortType mode and enables provisioning of the MEP.
<b>Step 4</b>	<b>updateMep mepUpdateConfig {mepInstance mep_instance   update {level meg_level   megDomain {maName   megIdFormat {ieec   ituCcMeg   ituMeg}}   mepId mep_id</b>	Updates the Maintenance End Point configuration. <ul style="list-style-type: none"> <li>• <b>mepInstance</b>—Sets the MEP instance number. The valid values are from 1 to 128.</li> </ul>

	Command or Action	Purpose
	<p>  <b>performanceMonitoring</b> {disable   enable}   <b>vid</b> <i>vid_number</i>   <b>voe</b> {disable   enable} } }</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig direction UP Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig domain VLAN Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig flowId 21 Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig level 0 Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig mode MEP Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig residencePort 1 Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig voe disable</pre>	<ul style="list-style-type: none"> <li>• <b>update</b>—Updates the MEP configuration.</li> <li>• <b>level</b>—Sets the MEG level of the MEP. The valid values are from 0 to 7.</li> <li>• <b>megDomain</b>—Sets the maintenance domain configuration to either <b>maName</b> (ITU/IEEE MEG-ID) or <b>megIdFormat</b>.</li> <li>• <b>mepId</b>—Sets the MEP ID. The valid values are from 0 to 8191.</li> <li>• <b>performanceMonitoring</b>—Enables or disables performance monitoring</li> <li>• <b>vid</b>—The valid values are from 0 to 4094. <b>Note</b> If the MEP is a port Up-MEP or an EVC customer MIP, the VID must be provided.</li> <li>• <b>voe</b>—Enables or disables the MEP VOE.</li> </ul>
<b>Step 5</b>	<p><b>updateMep review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType) # updateMep review</pre>	Displays the updateMep configuration.
<b>Step 6</b>	<p><b>updateMep commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType) # updateMep commit</pre>	Sends the updateMep configuration to the Cisco ME 1200 NID.
<b>Step 7</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType) # exit Switch(config-controller) #</pre>	Exits to the controller configuration mode.

## Configuration Example: Loopback

Consider the following topology:

(Gi1/5)NID-3(Gi1/3)====(Gi1/3)NID-4(Gi1/6)

### Configuration on Cisco ME 1200 NID-3

```
ProvisionPortVlanPortType
  createVlanCommand createVlanReq vlan_list 2000
createVlanCommand commit
```

## Configuration Example: Loopback

```

        modifySwPort modifySWPortConfig interaface 3
        modifySwPort modifySWPortConfig mode trunk native vlan 1
        modifySwPort modifySWPortConfig mode trunk allowed vlan add vlan_list 2000
modifySwPort commit
        modifySwPort modifySWPortConfig interaface 4
        modifySwPort modifySWPortConfig mode trunk native vlan 1
        modifySwPort modifySWPortConfig mode trunk allowed vlan add vlan_list 2000
modifySwPort commit
exit
ProvisionMepPortType
    createMep createMepConfig mepInstance 100
    createMep createMepConfig direction DOWN
    createMep createMepConfig domain vlan
    createMep createMepConfig level 0
    createMep createMepConfig megDomain maName ERPS-128
    createMep createMepConfig megDomain megIdFormat ituMep
    createMep createMepConfig mepId 100
    createMep createMepConfig mode MEP
    createMep createMepConfig residencePort 3
    createMep createMepConfig flow 2000
    createMep commit
    addPeerMepId peerMepConfig mepInstance 100
    addPeerMepId peerMepConfig peerMepId 101
addPeerMepId commit
    addCcAps mepFunctionalConfig mepInstance 100
    addCcAps mepFunctionalConfig cc enable priority 7
    addCcAps mepFunctionalConfig cc enable frameRate frls
    addCcAps mepFunctionalConfig aps enable mode multi
    addCcAps mepFunctionalConfig aps enable priority 7
    addCcAps mepFunctionalConfig aps enable switchingProtocol raps octet 1
addCcAps commit
exit

    setLoopBack loopBackConfig mepInstance 100
    setLoopBack loopBackConfig lbAction enable cast multi
    setLoopBack loopBackConfig lbAction enable count 10
    setLoopBack loopBackConfig lbAction enable dei disable
    setLoopBack loopBackConfig lbAction enable interval 1
    setLoopBack loopBackConfig lbAction enable priority 7
    setLoopBack loopBackConfig lbAction enable size 70
    setloopBack commit

```

## Configuration on the Cisco ME 1200 NID-4

```

ProvisionPortVlanPortType
    createVlanCommand createVlanReq vlan_list 2000
createVlanCommand commit
    modifySwPort modifySWPortConfig interaface 3
    modifySwPort modifySWPortConfig mode trunk native vlan 1
    modifySwPort modifySWPortConfig mode trunk allowed vlan add vlan_list 2000
modifySwPort commit
    modifySwPort modifySWPortConfig interaface 5
    modifySwPort modifySWPortConfig mode trunk native vlan 1
    modifySwPort modifySWPortConfig mode trunk allowed vlan add vlan_list 2000
modifySwPort commit
exit
ProvisionMepPortType
    createMep createMepConfig mepInstance 100
    createMep createMepConfig direction DOWN
    createMep createMepConfig domain vlan
    createMep createMepConfig level 0
    createMep createMepConfig megDomain maName ERPS-128
    createMep createMepConfig megDomain megIdFormat ituMep
    createMep createMepConfig mepId 101
    createMep createMepConfig mode MEP
    createMep createMepConfig residencePort 3
    createMep createMepConfig flow 2000
    createMep commit
    addPeerMepId peerMepConfig mepInstance 100
    addPeerMepId peerMepConfig peerMepId 100
addPeerMepId commit
    addCcAps mepFunctionalConfig mepInstance 100

```



```

addCcAps mepFunctionalConfig cc enable priority 7
addCcAps mepFunctionalConfig cc enable frameRate frls
addCcAps mepFunctionalConfig aps enable mode multi
addCcAps mepFunctionalConfig aps enable priority 7
addCcAps mepFunctionalConfig aps enable switchingProtocol raps octet 1
addCcAps commit
exit

```

### Loopback in Cisco ME 1200 NID-3

```

showLoopBack mepRequest mepInstance 100
showLoopBack commit
ShowLoopBack_Output.loopbackInfo.mepInst[0].config.mepInstance = 100
ShowLoopBack_Output.loopbackInfo.mepInst[0].config.dei.t = 2
ShowLoopBack_Output.loopbackInfo.mepInst[0].config.dei.u.disable = 'DEI Disable'
ShowLoopBack_Output.loopbackInfo.mepInst[0].config.priority = 7
ShowLoopBack_Output.loopbackInfo.mepInst[0].config.cast.t = 2
ShowLoopBack_Output.loopbackInfo.mepInst[0].config.cast.u.multi = 'MULTI'
ShowLoopBack_Output.loopbackInfo.mepInst[0].config.count = 10
ShowLoopBack_Output.loopbackInfo.mepInst[0].config.size = 70
ShowLoopBack_Output.loopbackInfo.mepInst[0].config.interval = 1
ShowLoopBack_Output.loopbackInfo.mepInst[0].state.mepInstance = 32
ShowLoopBack_Output.loopbackInfo.mepInst[0].state.transactionId = 11
ShowLoopBack_Output.loopbackInfo.mepInst[0].state.txLBM.upper = 0
ShowLoopBack_Output.loopbackInfo.mepInst[0].state.txLBM.lower = 10
ShowLoopBack_Output.loopbackInfo.mepInst[0].state.reply[0].rcvMac = '00-3A-99-FD-47-2F'
ShowLoopBack_Output.loopbackInfo.mepInst[0].state.reply[0].received.upper = 0
ShowLoopBack_Output.loopbackInfo.mepInst[0].state.reply[0].received.lower = 10
ShowLoopBack_Output.loopbackInfo.mepInst[0].state.reply[0].outOfOrder.upper = 0
ShowLoopBack_Output.loopbackInfo.mepInst[0].state.reply[0].outOfOrder.lower = 0

showLoopBack Commit Success!!!

```

## Configuration Example: Loss Measurement—Single Ended

Consider the following topology:

TG1====(Gi1/5)NID-3(Gi1/4)====(Gi0/1)UPE NID ControllerGi0/20)====(Gi1/5)NID-4(Gi1/6)====TG2

Cast: Multi

Ended: Single

### Configuration on Cisco ME 1200 NID-3

```

ProvisionEVC
  addEVC evcConfiguration instance 1024
  addEVC evcConfiguration internal_vid 1024
  addEVC evcConfiguration learning_enable
  addEVC evcConfiguration nni_ports GigabitEthernet_4_NNI enable
  addEVC evcConfiguration nni_vid 1024
addEVC commit
exit
ProvisionEVC
  addECE ece_configuration ece_id 1024
  addECE ece_configuration control ingress_match uni_ports GigabitEthernet_5_UNI
enable
  addECE ece_configuration control ingress_match outer_tag_match match_type tagged
  addECE ece_configuration control ingress_match outer_tag_match match_fields
vlan_id_filter specific 1024
  addECE ece_configuration control egress_outer_tag mode enabled
  addECE ece_configuration control egress_outer_tag pcp_mode fixed
  addECE ece_configuration control egress_outer_tag pcp_value 7
  addECE ece_configuration control actions class specific 7
  addECE ece_configuration control actions evc_id specific 1024
addECE commit
exit

```

```

ProvisionMepPortType
  createMep createMepConfig mepInstance 98
  createMep createMepConfig direction DOWN
  createMep createMepConfig domain EVC
  createMep createMepConfig flowId 1024
  createMep createMepConfig level 0
  createMep createMepConfig megDomain maName LM-Check
  createMep createMepConfig megDomain megIdFormat ituMeg
  createMep createMepConfig mepId 105
  createMep createMepConfig mode MEP
  createMep createMepConfig residencePort 4
createMep createMepConfig voe enable
createMep commit
  addPeerMepId peerMepConfig mepInstance 98
  addPeerMepId peerMepConfig peerMepId 106
addPeerMepId commit
  addCcAps mepFunctionalConfig mepInstance 98
  addCcAps mepFunctionalConfig cc enable priority 7
  addCcAps mepFunctionalConfig cc enable frameRate frls
addCcAps commit
exit
operationsMepPortType
  setLM lmConfig mepInstance 98
  setLM lmConfig lmAction enable cast multi
  setLM lmConfig lmAction enable frameRate frls
  setLM lmConfig lmAction enable mode single
  setLM lmConfig lmAction enable priority 7
setLM commit
exit

```

### Configuration on Cisco ME 1200 NID-4

```

ProvisionEVC
  addEVC evcConfiguration instance 1024
  addEVC evcConfiguration internal_vid 1024
  addEVC evcConfiguration learning_enable
  addEVC evcConfiguration nni_ports GigabitEthernet_5_NNI enable
  addEVC evcConfiguration nni_vid 1024
addEVC commit
exit
ProvisionEVC
  addECE ece_configuration ece_id 1024
  addECE ece_configuration control ingress_match uni_ports GigabitEthernet_6_UNI
enable
  addECE ece_configuration control ingress_match outer_tag_match match_type tagged
  addECE ece_configuration control ingress_match outer_tag_match match_fields
vlan_id_filter specific 1024
  addECE ece_configuration control egress_outer_tag mode enabled
  addECE ece_configuration control egress_outer_tag pcp_mode fixed
  addECE ece_configuration control egress_outer_tag pcp_value 7
  addECE ece_configuration control actions class specific 7
  addECE ece_configuration control actions evc_id specific 1024
addECE commit
exit
ProvisionMepPortType
  createMep createMepConfig mepInstance 98
  createMep createMepConfig direction DOWN
  createMep createMepConfig domain EVC
  createMep createMepConfig flowId 1024
  createMep createMepConfig level 0
  createMep createMepConfig megDomain maName LM-Check
  createMep createMepConfig megDomain megIdFormat ituMeg
  createMep createMepConfig mepId 106
  createMep createMepConfig mode MEP
  createMep createMepConfig residencePort 5
createMep createMepConfig voe enable
createMep commit
  addPeerMepId peerMepConfig mepInstance 98
  addPeerMepId peerMepConfig peerMepId 105
addPeerMepId commit
  addCcAps mepFunctionalConfig mepInstance 98
  addCcAps mepFunctionalConfig cc enable priority 7

```

```

        addCcAps mepFunctionalConfig cc enable frameRate frls
addCcAps commit
exit
operationsMepPortType
    setLM lmConfig mepInstance 98
        setLM lmConfig lmAction enable cast multi
        setLM lmConfig lmAction enable frameRate frls
        setLM lmConfig lmAction enable mode single
        setLM lmConfig lmAction enable priority 7
setLM commit
exit

```

### Configuration on the UPE NID Controller

```

Controller-Switch# show policy-map lm-v1024
  Policy Map lm-v1024
    Class lm-v1024
      police cir 1000000 bc 31250
        conform-action transmit
        exceed-action drop

```

```

Controller-Switch# show class-map lm-v1024
  Class Map match-all lm-v1024 (id 2)
    Match dscp af12 (12)

```

```

Controller-Switch#

```

```

!
interface GigabitEthernet0/1
  switchport trunk allowed vlan none
  switchport mode trunk
!
  service instance 1024 ethernet
    encapsulation dot1q 1024
    bridge-domain 1024
!

!
interface GigabitEthernet0/20
  switchport trunk allowed vlan none
  switchport mode trunk
  service-policy input lm-v1024
!
  service instance 1024 ethernet
    encapsulation dot1q 1024
    bridge-domain 1024
!

```

Send 20Mbps traffic from TG2 on VLAN 1024 with DSCP set to af12

```

Controller-Switch(config-controller-OperationsMepPortType)# showLM mepRequest mepInstance
 98
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mepInstance = 98
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.priority = 7
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.cast.t = 2
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.cast.u.multi = 'multi'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mode.t = 2
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mode.u.single = 'single'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.frameRate.t = 3
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.frameRate.u.frls = 'frls'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.flr = 5
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.mepInstance = 98
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.tx = 85
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.rx = 85
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.nearCount = 180123
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.farCount = 0
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.nearRatio = 94
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.farRatio = 0

```

To view loss measurement:

```

Controller-Switch(config)# controller nid 0/2
Controller-Switch(config-controller)# OpearationsMepPortType
Controller-Switch(config-controller-OpearationsMepPortType)# showlm mepRequest mepInstance
98
Controller-Switch(config-controller-OpearationsMepPortType)# showlm review
Commands in queue:
    showLM mepRequest mepInstance 98
Controller-Switch(config-controller-OpearationsMepPortType)# showlm commit
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mepInstance = 98
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.priority = 7
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.cast.t = 2
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.cast.u.multi = 'multi'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mode.t = 2
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mode.u.single = 'single'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.frameRate.t = 3
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.frameRate.u.frls = 'frls'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.flr = 5
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.mepInstance = 98
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.tx = 137
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.rx = 137
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.nearCount = 0
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.farCount = 1105217
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.nearRatio = 0
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.farRatio = 94

    showLM Commit Success!!!
Controller-Switch(config-controller-OpearationsMepPortType)#

```

To stop traffic, do the following:

```

Controller-Switch# show policy-map int gi 0/20
GigabitEthernet0/20

Service-policy input: lm-v1024

Class-map: lm-v1024 (match-all)
  2175126 packets, 287116632 bytes
  5 minute offered rate 5839000 bps, drop rate 5512000 bps
Match: dscp af12 (12)
police:
  cir 1000000 bps, bc 31250 bytes
  conform-action transmit
  exceed-action drop
conform: 122168 (packets) 16126176 (bytes)
exceed: 2052958 (packets) 270990456 (bytes)
conform: 331000 bps, exceed: 5512000 bps
  Input Policer:
    Policer Packets Drop: 2052958
    Policer Bytes Drop: 270990456

Class-map: class-default (match-any)
  3606 packets, 293801 bytes
  5 minute offered rate 10000 bps, drop rate 0000 bps
Match: any

```

To view loss measurement:

```

Controller-(config-controller-OpearationsMepPortType)# showlm review
Commands in queue:
    showLM mepRequest mepInstance 98
Controller-Switch(config-controller-OpearationsMepPortType)# showlm commit
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mepInstance = 98
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.priority = 7
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.cast.t = 2
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.cast.u.multi = 'multi'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mode.t = 2
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mode.u.single = 'single'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.frameRate.t = 3

```

```

ShowLM_Output.lossMeasurentInfo.mepInst[0].config.frameRate.u.frls = 'frls'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.flr = 5
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.mepInstance = 98
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.tx = 349
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.rx = 349
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.nearCount = 2052958
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.farCount = 0
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.nearRatio = 0
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.farRatio = 0

showLM Commit Success!!!

Controller-Switch(config-controller-OpearationsMepPortType)# controller nid 0/2

Controller-Switchconfig-controller-#OpearationsMepPortType
Controller-Switch(config-controller-OpearationsMepPortType)# showlm review
Commands in queue:
    showLM mepRequest mepInstance 98
Controller-Switch(config-controller-OpearationsMepPortType)# showlm commit
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mepInstance = 98
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.priority = 7
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.cast.t = 2
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.cast.u.multi = 'multi'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mode.t = 2
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mode.u.single = 'single'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.frameRate.t = 3
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.frameRate.u.frls = 'frls'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.flr = 5
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.mepInstance = 98
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.tx = 358
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.rx = 358
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.nearCount = 0
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.farCount = 2052958
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.nearRatio = 0
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.farRatio = 0

showLM Commit Success!!!
Controller-config-controller-(OpearationsMepPortType)#

```

## Configuration Example: Loss Measurement–Dual Ended

Consider the following topology:

TG1====(Gi1/5)NID-3(Gi1/4)====(Gi0/1)ME 3600(Gi0/20)====(Gi1/5)NID-4(Gi1/6)====TG2

Cast: Multi

Ended: Dual

### Configuration on Cisco ME 1200 NID-3

```

ProvisionEVC
    addEVC evcConfiguration instance 1022
    addEVC evcConfiguration internal_vid 1022
    addEVC evcConfiguration learning_enable
    addEVC evcConfiguration nni_ports GigabitEthernet_4_NNI enable
    addEVC evcConfiguration nni_vid 1022
addEVC commit
exit
ProvisionEVC
    addECE ece_configuration ece_id 1022
    addECE ece_configuration control ingress_match uni_ports GigabitEthernet_5_UNI
enable
    addECE ece_configuration control ingress_match outer_tag_match match_type tagged
    addECE ece_configuration control ingress_match outer_tag_match match_fields
vlan_id_filter specific 1022
    addECE ece_configuration control egress_outer_tag mode enabled

```

```

        addECE ece_configuration control egress_outer_tag pcp_mode fixed
        addECE ece_configuration control egress_outer_tag pcp_value 7
        addECE ece_configuration control actions class specific 7
        addECE ece_configuration control actions evc_id specific 1022
addECE commit
exit
ProvisionMepPortType
    createMep createMepConfig mepInstance 94
    createMep createMepConfig direction DOWN
    createMep createMepConfig domain EVC
    createMep createMepConfig flowId 1022
    createMep createMepConfig level 0
    createMep createMepConfig megDomain maName LM-Dual
    createMep createMepConfig megDomain megIdFormat ituMeg
    createMep createMepConfig mepId 102
    createMep createMepConfig mode MEP
    createMep createMepConfig residencePort 4
createMep createMepConfig voe enable
createMep commit
    addPeerMepId peerMepConfig mepInstance 94
    addPeerMepId peerMepConfig peerMepId 103
addPeerMepId commit
    addCcAps mepFunctionalConfig mepInstance 94
    addCcAps mepFunctionalConfig cc enable priority 7
    addCcAps mepFunctionalConfig cc enable frameRate frls
addCcAps commit
exit
operationsMepPortType
    setLM lmConfig mepInstance 94
    setLM lmConfig lmAction enable cast multi
    setLM lmConfig lmAction enable frameRate frls
    setLM lmConfig lmAction enable mode dual
    setLM lmConfig lmAction enable priority 7
setLM commit
exit

ProvisionEVC
    addEVC evcConfiguration instance 1021
    addEVC evcConfiguration internal_vid 1021
    addEVC evcConfiguration learning enable
    addEVC evcConfiguration nni_ports GigabitEthernet_4_NNI enable
    addEVC evcConfiguration nni_vid 1021
addEVC commit
exit

```

### Configuration on Cisco ME 1200 NID-4

```

ProvisionEVC
    addEVC evcConfiguration instance 1022
    addEVC evcConfiguration internal_vid 1022
    addEVC evcConfiguration learning enable
    addEVC evcConfiguration nni_ports GigabitEthernet_5_NNI enable
    addEVC evcConfiguration nni_vid 1022
addEVC commit
exit
ProvisionEVC
    addECE ece_configuration ece_id 1022
    addECE ece_configuration control ingress_match uni_ports GigabitEthernet_6_UNI
enable
    addECE ece_configuration control ingress_match outer_tag_match match_type tagged
    addECE ece_configuration control ingress_match outer_tag_match match_fields
vlan_id_filter specific 1022
    addECE ece_configuration control egress_outer_tag mode enabled
    addECE ece_configuration control egress_outer_tag pcp_mode fixed
    addECE ece_configuration control egress_outer_tag pcp_value 7
    addECE ece_configuration control actions class specific 7
    addECE ece_configuration control actions evc_id specific 1022
addECE commit
exit
ProvisionMepPortType
    createMep createMepConfig mepInstance 94
    createMep createMepConfig direction DOWN

```

```

        createMep createMepConfig domain EVC
        createMep createMepConfig flowId 1022
        createMep createMepConfig level 0
        createMep createMepConfig megDomain maName LM-Dual
        createMep createMepConfig megDomain megIdFormat ituMeg
        createMep createMepConfig mepId 103
        createMep createMepConfig mode MEP
        createMep createMepConfig residencePort 5
    createMep createMepConfig voe enable
    createMep commit
        addPeerMepId peerMepConfig mepInstance 94
        addPeerMepId peerMepConfig peerMepId 102
    addPeerMepId commit
        addCcAps mepFunctionalConfig mepInstance 94
        addCcAps mepFunctionalConfig cc enable priority 7
        addCcAps mepFunctionalConfig cc enable frameRate fr1s
    addCcAps commit
    exit
    operationsMepPortType
        setLM lmConfig mepInstance 94
        setLM lmConfig lmAction enable cast multi
        setLM lmConfig lmAction enable frameRate fr1s
        setLM lmConfig lmAction enable mode dual
        setLM lmConfig lmAction enable priority 7
    setLM commit
    exit

```

### Configuration on the UPE NID Controller

```

Controller-Switch# show policy-map lm-v1022
  Policy Map lm-v1022
    Class lm-v1022
      police cir 1000000 bc 31250
        conform-action transmit
        exceed-action drop

```

```

Controller-Switch#
!
interface GigabitEthernet0/1
  switchport trunk allowed vlan none
  switchport mode trunk
!
  service instance 1022 ethernet
    encapsulation dot1q 1022
    bridge-domain 1022
!
!
interface GigabitEthernet0/20
  switchport trunk allowed vlan none
  switchport mode trunk
  service-policy output lm-v1022
!
  service instance 1022 ethernet
    encapsulation dot1q 1022
    bridge-domain 1022
!
!

```

Send 20Mbps traffic from TG2 on VLAN 1022 with DSCP set to af11

```

Controller-Switch(config-controller-ProvisionMepPortType)# controller nid 0/2
Controller-Switch(config-controller)#ProvisionMepPortType
Controller-Switch(config-controller-ProvisionMepPortType)# showMepConfig flush
Controller-Switch(config-controller-ProvisionMepPortType)# showMepalar mepRequest mepInstance
  94
Controller-Switch(config-controller-ProvisionMepPortType)# showMepalar commit
ShowMepAlarms_Output.mepState.mepInst[0].mepInstance = 94
ShowMepAlarms_Output.mepState.mepInst[0].cLevel = false
ShowMepAlarms_Output.mepState.mepInst[0].cMeg = false
ShowMepAlarms_Output.mepState.mepInst[0].cMep = false
ShowMepAlarms_Output.mepState.mepInst[0].cAis = false
ShowMepAlarms_Output.mepState.mepInst[0].cLck = false

```

```
ShowMepAlarms_Output.mepState.mepInst[0].cSsf = false
ShowMepAlarms_Output.mepState.mepInst[0].aBlk = false
ShowMepAlarms_Output.mepState.mepInst[0].atsf = false
ShowMepAlarms_Output.mepState.mepInst[0].peerMepState[0].peerMepId = 102
ShowMepAlarms_Output.mepState.mepInst[0].peerMepState[0].cLoc = false
ShowMepAlarms_Output.mepState.mepInst[0].peerMepState[0].cRdi = false
ShowMepAlarms_Output.mepState.mepInst[0].peerMepState[0].cPeriod = false
ShowMepAlarms_Output.mepState.mepInst[0].peerMepState[0].cPrio = false
```

```
showMepAlarms Commit Success!!!
```

To view loss measurement:

```
Controller-Switch(config)# controller nid 0/2
Controller-Switch(config-controller)# OpearationsMepPortType
Controller-Switch(config-controller-OpearationsMepPortType)# showlm mepRequest mepInstance
98
Controller-Switch(config-controller-OpearationsMepPortType)# showlm review
Commands in queue:
showLM mepRequest mepInstance 98
Controller-Switch(config-controller-OpearationsMepPortType)# showlm commit
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mepInstance = 98
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.priority = 7
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.cast.t = 2
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.cast.u.multi = 'multi'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mode.t = 2
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mode.u.single = 'single'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.frameRate.t = 3
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.frameRate.u.frls = 'frls'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.flr = 5
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.mepInstance = 98
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.tx = 137
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.rx = 137
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.nearCount = 0
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.farCount = 1105217
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.nearRatio = 0
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.farRatio = 94

showLM Commit Success!!!
Controller-Switch(config-controller-OpearationsMepPortType)#
Controller-Switch(config-controller-ProvisionMepPortType)#controller nid 0/1

Controller-Switch(config-controller)#ProvisionMepPortType
Controller-Switch(config-controller-ProvisionMepPortType)#showMepConfig flush
Controller-Switch(config-controller-ProvisionMepPortType)#showMepalar mepRequest mepInstance
94
Controller-Switch(config-controller-ProvisionMepPortType)#showMepalar commit
ShowMepAlarms_Output.mepState.mepInst[0].mepInstance = 94
ShowMepAlarms_Output.mepState.mepInst[0].cLevel = false
ShowMepAlarms_Output.mepState.mepInst[0].cMeg = false
ShowMepAlarms_Output.mepState.mepInst[0].cMep = false
ShowMepAlarms_Output.mepState.mepInst[0].cAis = false
ShowMepAlarms_Output.mepState.mepInst[0].cLck = false
ShowMepAlarms_Output.mepState.mepInst[0].cSsf = false
ShowMepAlarms_Output.mepState.mepInst[0].aBlk = false
ShowMepAlarms_Output.mepState.mepInst[0].atsf = false
ShowMepAlarms_Output.mepState.mepInst[0].peerMepState[0].peerMepId = 103
ShowMepAlarms_Output.mepState.mepInst[0].peerMepState[0].cLoc = false
ShowMepAlarms_Output.mepState.mepInst[0].peerMepState[0].cRdi = false
ShowMepAlarms_Output.mepState.mepInst[0].peerMepState[0].cPeriod = false
ShowMepAlarms_Output.mepState.mepInst[0].peerMepState[0].cPrio = false

showMepAlarms Commit Success!!!
Controller-Switch(config-controller-ProvisionMepPortType)#

Controller-Switch(config-controller-ProvisionMepPortType)#controller nid 0/1
Controller-Switch(config-controller)#OpearationsMepPortType
Controller-Switch(config-controller-OpearationsMepPortType)#showlm flush
Controller-Switch(config-controller-OpearationsMepPortType)#showlm mepRequest mepInstance
94
Controller-Switch(config-controller-OpearationsMepPortType)#showlm commit
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mepInstance = 94
```



```

ShowLM_Output.lossMeasurentInfo.mepInst[0].config.priority = 7
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.cast.t = 2
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.cast.u.multi = 'multi'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mode.t = 1
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mode.u.dual = 'dual'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.frameRate.t = 3
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.frameRate.u.frls = 'frls'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.flr = 5
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.mepInstance = 94
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.tx = 64
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.rx = 47
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.nearCount = 1
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.farCount = 586684
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.nearRatio = 0
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.farRatio = 94

showLM Commit Success!!!
Controller-Switch(config-controller-OpearationsMepPortType)#controller nid 0/2
Controller-Switch(config-controller)#OpearationsMepPortType
Controller-Switch(config-controller-OpearationsMepPortType)#showlm flush
Controller-Switch(config-controller-OpearationsMepPortType)#showlm mepRequest mepInstance
94
Controller-Switch(config-controller-OpearationsMepPortType)#showlm commit
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mepInstance = 94
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.priority = 7
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.cast.t = 2
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.cast.u.multi = 'multi'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mode.t = 1
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mode.u.dual = 'dual'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.frameRate.t = 3
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.frameRate.u.frls = 'frls'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.flr = 5
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.mepInstance = 94
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.tx = 70
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.rx = 61
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.nearCount = 811684
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.farCount = 1
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.nearRatio = 94
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.farRatio = 0

showLM Commit Success!!!
Controller-Switch(config-controller-OpearationsMepPortType)#

```

To stop traffic, do the following:

Service-policy output: lm-v1022

```

Class-map: lm-v1022 (match-all)
  3389497 packets, 447413604 bytes
  5 minute offered rate 8626000 bps, drop rate 8126000 bps
  Match: dscp af11 (10)
  police:
    cir 1000000 bps, bc 31250 bytes
    conform-action transmit
    exceed-action drop
  conform: 196188 (packets) 25112064 (bytes)
  exceed: 3193309 (packets) 408743552 (bytes)
  conform: 492000 bps, exceed: 7880000 bps
  Queue-limit current-queue-depth 0 bytes
  Output Queue:
    Default Queue-limit 49152 bytes
    Tail Packets Drop: 3193309
    Tail Bytes Drop: 421516788

Class-map: class-default (match-any)
  2491 packets, 170276 bytes
  5 minute offered rate 6000 bps, drop rate 0000 bps
  Match: any

```

To view loss measurement:

```
Controller-Switch(config)# controller nid 0/1
```

```

Controller-Switch(config-controller)#
Controller-Switch(config-controller)# OpearationsMepPortType
Controller-Switch(config-controller-OpearationsMepPortType)# showlm review
Commands in queue:
  showLM mepRequest mepInstance 94
Controller-Switch(config-controller-OpearationsMepPortType)# showlm commit
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mepInstance = 94
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.priority = 7
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.cast.t = 2
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.cast.u.multi = 'multi'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mode.t = 1
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mode.u.dual = 'dual'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.frameRate.t = 3
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.frameRate.u.fr1s = 'fr1s'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.flr = 5
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.mepInstance = 94
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.tx = 262
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.rx = 262
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.nearCount = 0
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.farCount = 3193309
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.nearRatio = 0
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.farRatio = 0

  showLM Commit Success!!!

Controller-Switch(config)# controller nid 0/2
Controller-Switch(config-controller)# OpearationsMepPortType
Controller-Switch(config-controller-OpearationsMepPortType)# showlm review
Commands in queue:
  showLM mepRequest mepInstance 94
Controller-Switch(config-controller-OpearationsMepPortType)# showlm commit
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mepInstance = 94
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.priority = 7
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.cast.t = 2
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.cast.u.multi = 'multi'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mode.t = 1
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mode.u.dual = 'dual'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.frameRate.t = 3
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.frameRate.u.fr1s = 'fr1s'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.flr = 5
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.mepInstance = 94
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.tx = 277
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.rx = 276
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.nearCount = 3193309
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.farCount = 0
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.nearRatio = 0
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.farRatio = 0

  showLM Commit Success!!!
Controller-Switch(config-controller-OpearationsMepPortType)#

```



## Configuring Performance Monitoring

---

Performance Monitor is a carrier Ethernet software feature which provides:

- Monitoring delay measurements
- Monitoring loss measurements
- Monitoring ECE
- Monitoring EVC
- Storing the monitored data
- Transferring the monitored data

For information on configuring EVC, see [How to Configure Ethernet Virtual Circuit](#), on page 108.

For information on configuring MEP, see [Creating MEP Configuration](#), on page 333.

- [Restrictions for Configuring Performance Monitoring](#), page 347
- [ITU-T Y.1731 Performance Monitoring in a Service Provider Network](#), page 347
- [How to Configure Performance Monitoring](#), page 349
- [Verifying Performance Monitoring](#), page 389

### Restrictions for Configuring Performance Monitoring

- Performance monitoring is not enabled by default for loss measurement (LM), delay measurement (DM), EVC, and ECE.

### ITU-T Y.1731 Performance Monitoring in a Service Provider Network

ITU-T Y.1731 performance monitoring provides standard-based Ethernet performance monitoring that encompasses the measurement of Ethernet frame delay, frame-delay variation, and throughput as outlined in

the ITU-T Y.1731 specification and interpreted by the Metro Ethernet Forum (MEF). Service providers offer service level agreements (SLAs) that describe the level of performance customers can expect for services. This document describes the Ethernet performance management aspect of SLAs.

## Frame Delay and Frame-Delay Variation

The Frame Delay parameter can be used for on-demand OAM measurements of frame delay and frame-delay variation. When a maintenance end point (MEP) is enabled to generate frames with frame-delay measurement (ETH-DM) information, it periodically sends frames with ETH-DM information to its peer MEP in the same maintenance entity. Peer MEPs perform frame-delay and frame-delay variation measurements through this periodic exchange during the diagnostic interval.

An MEP requires the following specific configuration information to support ETH-DM:

- MEG level—MEG level at which the MEP exists
- Priority
- Drop eligibility—marked drop ineligible
- Transmission rate
- Total interval of ETH-DM
- MEF10 frame-delay variation algorithm

A MEP transmits frames with ETH-DM information using the `TxTimeStampf` information element. `TxTimeStampf` is the time stamp for when the ETH-DM frame was sent. A receiving MEP can compare the `TxTimeStampf` value with the `RxTimeef` value, which is the time the ETH-DM frame was received, and calculate one-way delay using the formula  $frame\ delay = RxTimeef - TxTimeStampf$ .

One-way frame-delay measurement (IDM) requires that clocks at both the transmitting MEP and the receiving MEPs are synchronized. Measuring frame-delay variation does not require clock synchronization and the variation can be measured using IDM or a frame-delay measurement message (DMM) and a frame-delay measurement reply (DMR) frame combination.

If it is not practical to have clocks synchronized, only two-way frame-delay measurements can be made. In this case, the MEP transmits a frame containing ETH-DM request information and the `TxTimeStampf` element, and the receiving MEP responds with a frame containing ETH-DM reply information and the `TxTimeStampf` value copied from the ETH-DM request information.

Two-way frame delay is calculated as  $frame\ delay = RxTimeb - TxTimeStampf$ , where `RxTimeb` is the time that the frame with ETH-DM reply information was received. Two-way frame delay and variation can be measured using only DMM and DMR frames.

To allow more precise two-way frame-delay measurement, the MEP replying to a frame with ETH-DM request information can also include two additional time stamps in the ETH-DM reply information:

- `RxTimeStampf`—Time stamp of the time at which the frame with ETH-DM request information was received.
- `TxTimeStampb`—Time stamp of the time at which the transmitting frame with ETH-DM reply information was sent.




**Note**

The frame-delay and frame-delay variation measurement processes are aborted when faults related to continuity and availability occur or when known network topology changes occur.

An MIP is transparent to the frames with ETH-DM information; therefore, an MIP does not require information to support the ETH-DM function.

The figure below shows a functional overview of a typical network in which Y.1731 performance monitoring is used.

**Figure 10: Y.1731 Performance Monitoring**

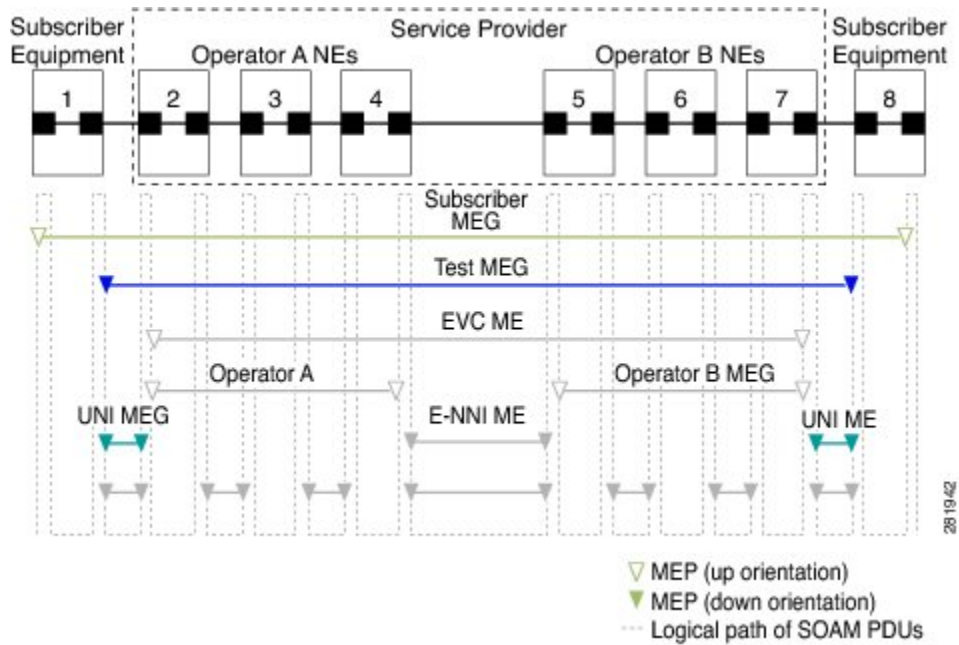

# How to Configure Performance Monitoring

## Provisioning the Controller to Configure Performance Monitoring

### DETAILED STEPS

	Command or Action	Purpose
Step 1	configure terminal  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.

	Command or Action	Purpose
<b>Step 2</b>	<b>controller nid</b> <i>1/NID_ID</i>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>OperationsMepPortType</b>  <b>Example:</b> Switch(config-controller)# <b>OperationsMepPortType</b>	Enters performance monitoring provisioning (PM) mode.
<b>Step 4</b>	<b>OperationsMepPortType</b> { <b>clearMepStats</b>   <b>default</b>   <b>exit</b>   <b>no</b>   <b>setAis</b>   <b>setDM</b>   <b>setLM</b>   <b>setLck</b>   <b>setLinkTrace</b>   <b>setLoopBack</b>   <b>setTst</b>   <b>showAis</b>   <b>showDM</b>   <b>showLM</b>   <b>showLck</b>   <b>showLinkTrace</b>   <b>showLoopBack</b>   <b>showTst</b>   <b>updateDM</b>   <b>updateTst</b> }  <b>Example:</b> Switch(config-controller-OperationsMepPortType)# ? OperationsMepPortType sub-mode commands: clearMepStats Clear mep statistics request default Set a command to its defaults exit Exit from OperationsMepPortType sub configuration mode  no Negate a command or set its defaults setAis Enable or Disable AIS request setDM Enable or Disable delay measurement request setLM Enable or Disable loss measurement request setLck Enable or Disable lock signal request setLinkTrace Enable or Disable linktrace request setLoopBack Enable/Disable loopback setTst Enable or Disable test signal request showAis Show AIS configuration request showDM Show delay measurement statistics request showLM Show LM statistics request showLck Show lock signal current configuration request showLinkTrace Show linktrace state and current configuration request  showLoopBack Show loopback state and current configuration request  showTst Show test signal statistics and current configuration request updateDM Update DM parameters request updateTst Update Tst signal request	Displays the supported configurations for performance monitoring.
<b>Step 5</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType)# <b>exit</b>	Exits the performance monitoring provisioning mode.

### Configuration Example

The following example shows the supported PM configuration:

```
Switch(config-controller-OperationsMepPortType)# ?
OperationsMepPortType sub-mode commands:
  clearMepStats Clear mep statistics request
  default       Set a command to its defaults
  exit          Exit from OperationsMepPortType sub configuration mode
```

no	Negate a command or set its defaults
setAis	Enable or Disable AIS request
setDM	Enable or Disable delay measurement request
setLM	Enable or Disable loss measurement request
setLck	Enable or Disable lock signal request
setLinkTrace	Enable or Disable linktrace request
setLoopBack	Enable/Disable loopback
setTst	Enable or Disable test signal request
showAis	Show AIS configuration request
showDM	Show delay measurement statistics request
showLM	Show LM statistics request
showLck	Show lock signal current configuration request
showLinkTrace	Show linktrace state and current configuration request
showLoopBack	Show loopback state and current configuration request
showTst	Show test signal statistics and current configuration request
updateDM	Update DM parameters request
updateTst	Update Tst signal request

## Configuring Performance Monitoring with Default Configuration

You can set the default performance monitoring configurations on the controller.

### Before You Begin

- Perform the steps to provision performance monitoring on the controller. See [Provisioning the Controller to Configure Performance Monitoring](#), on page 349.

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>default</b> {clearMepStats   setAis   setDM   setLM  setLck   setLinkTrace   setLoopBack   setTst   showAis   showDM   showLM   showLck   showLinkTrace   showLoopBack   showTst   updateDM   updateTst  exit}</p> <p><b>Example:</b> Switch(config-controller-OperationsMepPortType)# <b>default ?</b></p> <pre> clearMepStats  Clear mep statistics request exit           Exit from OpearationsMepPortType sub configuration mode setAis         Enable or Disable AIS request setDM         Enable or Disable delay measurement request setLM         Enable or Disable loss measurement request setLck        Enable or Disable lock signal request  setLinkTrace  Enable or Disable linktrace request setLoopBack  Enable/Disable loopback setTst       Enable or Disable test signal request  showAis       Show AIS configuration request showDM       Show delay measurement statistics request showLM       Show LM statistics request showLck      Show lock signal current configuration request showLinkTrace Show linktrace state and current                     </pre>	<p>Sets the default configuration.</p> <ul style="list-style-type: none"> <li>• <b>clearMepStats</b>—Clears MEP statistics.</li> <li>• <b>setAis</b>—Enables or disables AIS.</li> <li>• <b>setDM</b>—Enables or disables delay measurement.</li> <li>• <b>setLM</b>—Enables or disables loss measurement.</li> <li>• <b>setLck</b>—Enables or disables lock signals</li> <li>• <b>setLinkTrace</b>—Enables or disables link traces.</li> <li>• <b>setLoopBack</b>—Enables or disables loopback</li> <li>• <b>setTst</b>—Enables or disables the test signal.</li> <li>• <b>showAis</b>—Displays AIS configuration request.</li> <li>• <b>showDM</b>—Displays delay measurement statistics.</li> <li>• <b>showLM</b>—Displays loss measurement statistics.</li> <li>• <b>showLck</b>—Displays current configured loss signals.</li> <li>• <b>showLinkTrace</b>—Displays current configured link trace state.</li> </ul>

	Command or Action	Purpose
	<pre>configuration request showLoopBack Show loopback state and current configuration request showTst Show test signal statistics and current configuration request updateDM Update DM parameters request updateTst Update Tst signal request</pre>	<ul style="list-style-type: none"> <li>• <b>showLoopBack</b>—Displays current configured loopback state.</li> <li>• <b>showTst</b>—Displays current configured test signals statistics.</li> <li>• <b>updateDM</b>—Updates the delay measurement parameters.</li> <li>• <b>updateTst</b>—Updates test signal parameters.</li> <li>• <b>exit</b>—Exits from OperationsMepPortType configuration mode.</li> </ul>
<b>Step 2</b>	<p><b>exit</b></p> <p><b>Example:</b> Switch(config-controller-OperationsMepPortType) # <b>exit</b></p>	Exits the performance monitoring provisioning mode.

## Configuring Alarm Information Signal (AIS) on the Controller

### Before You Begin

- Perform the steps to provision performance monitoring on the controller. See [Provisioning the Controller to Configure Performance Monitoring](#), on page 349.

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<pre>setAis {commit   flush   aisConfig   review}</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # setAis ?   aisConfig Enable or Disable AIS request   commit    commit setAis   flush     flush all setAis commands from qu   review    review setAis commands</pre>	<p>Configures alarm information signal (AIS).</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the configuration to NID.</li> <li>• <b>flush</b>—Flushes all configuration from the queue.</li> <li>• <b>aisConfig</b>—Enables or disables the AIS configuration.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
<b>Step 2</b>	<pre>setAis aisConfig {aisaction {enable {frameRate {fr1m   fr1s}   disable}   protect {enable   disable} }   mepInstanceinstance_no}</pre>	<p>Configures AIS.</p> <ul style="list-style-type: none"> <li>• <b>aisaction</b>—Enables or disables AIS on the controller.</li> </ul>



	Command or Action	Purpose
	<p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # setAis aisConfig aisaction enable frameRate fr1m Switch(config-controller-OperationsMepPortType) # setAis aisConfig aisaction enable frameRate fr1s Switch(config-controller-OperationsMepPortType) # setAis aisConfig aisaction enable protect enable Switch(config-controller-OperationsMepPortType) # setAis aisConfig mepInstance 20</pre>	<ul style="list-style-type: none"> <li>• <b>enable</b>—Enables lock signal configuration.</li> <li>• <b>disable</b>—Disables lock signal configuration.</li> <li>• <b>frameRate</b>—Indicates the frame rate.</li> <li>• <b>fr1m</b>—Indicates the frame rate is 1 f/m.</li> <li>• <b>fr1s</b>—Indicates the frame rate is 1 f/s.</li> <li>• <b>mepinstance</b> <i>instance_no</i>—Indicates the MEP instance. The valid values are from 1 to 128.</li> </ul>
<b>Step 3</b>	<p><b>setAis review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # setAis review</pre> <p>Commands in queue:</p> <pre>setAis aisConfig aisAction enable protect enable setAis aisConfig aisAction enable frameRate fr1s setAis aisConfig aisAction enable frameRate fr1m setAis aisConfig mepInstance 20</pre>	Displays the AIS configuration on the controller.
<b>Step 4</b>	<p><b>setAiscommit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # setAis commit</pre>	Sends the AIS configuration to the NID.
<b>Step 5</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # exit</pre>	Exits the performance monitoring provisioning mode.

### Configuration Example

The example shows how to configure AIS on the controller:

```
Switch(config-controller-OperationsMepPortType) # setAis aisConfig aisaction enable frameRate
fr1m
Switch(config-controller-OperationsMepPortType) # setAis aisConfig aisaction enable frameRate
fr1s
Switch(config-controller-OperationsMepPortType) # setAis aisConfig aisaction enable protect
enable
Switch(config-controller-OperationsMepPortType) # setAis review
Switch(config-controller-OperationsMepPortType) # setAis aisConfig mepInstance 20

Commands in queue:
setAis aisConfig aisAction enable protect enable
setAis aisConfig aisAction enable frameRate fr1s
setAis aisConfig aisAction enable frameRate fr1m
setAis aisConfig mepInstance 20
```

```

Commands in queue:
    Commands in queue:
    setAis aisConfig mepInstance 2

Switch(config-controller-OperationsMepPortType)# setAis commit
SetAis_Output.mepResponse = 34537474

SetAis Commit Success!!!
Switch(config-controller-OperationsMepPortType)#end

```

## Configuring Delay Measurement (DM) on the Controller

### Before You Begin

- Perform the steps to provision performance monitoring on the controller. See [Provisioning the Controller to Configure Performance Monitoring](#), on page 349.

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<p><b>setDM</b> {commit   flush   dmConfig   review}</p> <p><b>Example:</b></p> <pre> Switch(config-controller-OperationsMepPortType)# setDM ? commit      commit setDM dmConfig    Enable or Disable delay measurement request  flush       flush all setDM commands from queue review      review setDM commands </pre>	<p>Configures delay measurement.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the configuration to NID.</li> <li>• <b>flush</b>—Flushes all configuration from the queue.</li> <li>• <b>dmConfig</b>—Enables or disables the delay measurement configuration.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
<b>Step 2</b>	<p><b>setDM dmConfig</b> {dmaction {enable {calculation {flow   rdtrp}   cast {mutli   uni mepId mep_Id}   interval interval_no   lastN delay_calc   mode {oneway   twoway}   priority priority_no }   disable }   mepInstance instance_no }</p> <p><b>Example:</b></p> <pre> Switch(config-controller-OperationsMepPortType)# setDM dmConfig dmaction enable calculation flow Switch(config-controller-OperationsMepPortType)# setDM dmConfig dmaction enable calculation rdtrp Switch(config-controller-OperationsMepPortType)# setDM dmConfig dmaction enable cast multi Switch(config-controller-OperationsMepPortType)# setDM dmConfig dmaction enable cast uni mepId 23 Switch(config-controller-OperationsMepPortType)# setDM dmConfig dmaction enable interval 20 Switch(config-controller-OperationsMepPortType)# setDM dmConfig dmaction enable lastN 200 Switch(config-controller-OperationsMepPortType)# setDM dmConfig dmaction enable mode oneway Switch(config-controller-OperationsMepPortType)# setDM dmConfig dmaction enable mode twoway </pre>	<p>Sets DM parameters</p> <ul style="list-style-type: none"> <li>• <b>dmaction</b>—Enables or disables DM on the controller.</li> <li>• <b>enable</b>—Enables delay measurement configuration.</li> <li>• <b>disable</b>—Disables delay measurement configuration.</li> <li>• <b>calculation</b>—Calculates delay.</li> <li>• <b>flow</b>—Two-way delay is calculated as round trip symmetrical flow. Far end resistance time is subtracted.</li> <li>• <b>rdtrp</b>—Two-way delay is calculated as round trip delay. Far end resistance time is <i>not</i> subtracted.</li> <li>• <b>cast</b>—Specifies transmission mode.</li> <li>• <b>multi</b>—Specifies OAM protocol data units (PDU) transmission with multicast MAC.</li> </ul>

	Command or Action	Purpose
	<pre>Switch(config-controller-OperationsMepPortType)# setDM dmConfig dmaction enable priority 3 Switch(config-controller-OperationsMepPortType)# setDM dmConfig dmaction enable calculation rdtrp Switch(config-controller-OperationsMepPortType)# setDM dmConfig mepInstance 1</pre>	<ul style="list-style-type: none"> <li>• <b>uni</b>—Specifies OAM protocol data units (PDU) transmission with unicast MAC. The MAC is procured from the peer MEP MAC database.</li> <li>• <b>mepId</b> <i>mep_id</i>—Specifies Peer MEP ID for unicast MAC.</li> <li>• <b>interval</b> <i>interval_no</i>—Specifies the interval time between the PDU transmission in ms. The valid range is from 0 to 65535. The minimum value is 10ms.</li> <li>• <b>lastN</b>—Specifies the latest N delays for calculation. The valid range is from 10 to 2000.</li> <li>• <b>mode</b>—Specifies the mode of delay measurement.</li> <li>• <b>oneway</b>—Specifies mode on IDM PDU measurement.</li> <li>• <b>twoway</b>—Specifies mode on DMM or DMR PDU.</li> <li>• <b>priority</b> <i>priority_no</i>—Priority in case of tagged OAM. In the EVC domain this is the COS-ID. The valid range is from 0 to 7.</li> <li>• <b>mepinstance</b> <i>instance_no</i>—Indicates the MEP instance. The valid values are from 1 to 128.</li> </ul>
<p><b>Step 3</b></p>	<p><b>setDM review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType)# setDM review</pre> <p>Commands in queue:</p> <pre>setDM dmConfig dmAction enable mode oneWay setDM dmConfig dmAction enable interval 10 setDM dmConfig dmAction enable lastN 20 setDM dmConfig dmAction enable calculation flow rdtrp setDM dmConfig dmAction enable calculation setDM dmConfig dmAction enable priority 2 setDM dmConfig dmAction enable calculation flow rdtrp setDM dmConfig dmAction enable calculation setDM dmConfig dmAction enable cast multi setDM dmConfig dmAction enable cast uni mepId 23 setDM dmConfig dmAction enable interval 20 setDM dmConfig dmAction enable priority 3 setDM dmConfig mepInstance 2</pre>	<p>Displays the DM configuration on the controller.</p>

	Command or Action	Purpose
Step 4	<b>setDMcommit</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType) # <b>setDM commit</b>  SetDM Commit Success!!!	Sends the DM configuration to the NID.
Step 5	<b>exit</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType) # <b>exit</b>	Exits the performance monitoring provisioning mode.

### Configuration Example

The example shows how to configure DM on the controller:

```
Switch(config-controller-OperationsMepPortType) # setDM dmConfig dmaction enable calculation
flow
Switch(config-controller-OperationsMepPortType) # setDM dmConfig dmaction enable calculation
rdtrp
Switch(config-controller-OperationsMepPortType) # setDM dmConfig dmaction enable cast multi
Switch(config-controller-OperationsMepPortType) # setDM dmConfig dmaction enable cast uni
mepId 23
Switch(config-controller-OperationsMepPortType) # setDM dmConfig dmaction enable interval
20
Switch(config-controller-OperationsMepPortType) # setDM dmConfig dmaction enable lastN 200
Switch(config-controller-OperationsMepPortType) # setDM dmConfig dmaction enable mode oneway
Switch(config-controller-OperationsMepPortType) # setDM dmConfig dmaction enable mode twoway
Switch(config-controller-OperationsMepPortType) # setDM dmConfig dmaction enable priority 3
Switch(config-controller-OperationsMepPortType) # setDM dmConfig dmaction enable calculation
rdtrp
Switch(config-controller-OperationsMepPortType) # setDM dmConfig mepInstance 1
Switch(config-controller-OperationsMepPortType) # setDM review
```

Commands in queue:

```
setDM dmConfig dmAction enable mode oneWay
setDM dmConfig dmAction enable interval 10
setDM dmConfig dmAction enable lastN 20
setDM dmConfig dmAction enable calculation flow
setDM dmConfig dmAction enable calculation rdtrp
setDM dmConfig dmAction enable priority 2
setDM dmConfig dmAction enable calculation flow
setDM dmConfig dmAction enable calculation rdtrp
setDM dmConfig dmAction enable cast multi
setDM dmConfig dmAction enable cast uni mepId 23
setDM dmConfig dmAction enable interval 20
setDM dmConfig dmAction enable priority 3
setDM dmConfig mepInstance 2
```

```
Switch(config-controller-OperationsMepPortType) # setDM commit
DM.dmConfig.mepInstance = 119
DM.dmConfig.dmAction.t = 1
DM.dmConfig.dmAction.u.enable.priority = 4
DM.dmConfig.dmAction.u.enable.cast.t = 2
DM.dmConfig.dmAction.u.enable.cast.u.multi = 'any <b z="1">test</b> element'
DM.dmConfig.dmAction.u.enable.mode.t = 2
DM.dmConfig.dmAction.u.enable.mode.u.twoWay = 'any <b z="1">test</b> element'
DM.dmConfig.dmAction.u.enable.calculation.t = 2
```

```

DM.dmConfig.dmAction.u.enable.calculation.u.flow = 'any <b z="1">test</b> elemen
t'
DM.dmConfig.dmAction.u.enable.interval = 42689
DM.dmConfig.dmAction.u.enable.lastN = 1573
DM.dmConfig.mepInstance = 119
DM.dmConfig.dmAction.t = 1
DM.dmConfig.dmAction.u.enable.priority = 0
DM.dmConfig.dmAction.u.enable.cast.t = 1
DM.dmConfig.dmAction.u.enable.cast.u.uni.mepId = 23
DM.dmConfig.dmAction.u.enable.mode.t = 1
DM.dmConfig.dmAction.u.enable.mode.u.oneWay = 'one-way'
DM.dmConfig.dmAction.u.enable.calculation.t = 1
DM.dmConfig.dmAction.u.enable.calculation.u.rdtrp = 'rdtrp'
DM.dmConfig.dmAction.u.enable.interval = 42689
DM.dmConfig.dmAction.u.enable.lastN = 1573
SetDM_Output.mepResponse = 0

Switch(config-controller-OperationsMepPortType) #end
    
```

## Configuring Loss Measurement (LM) on the Controller

### Before You Begin

- Perform the steps to provision performance monitoring on the controller. See [Provisioning the Controller to Configure Performance Monitoring](#), on page 349.

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>setLM {commit   flush   lmConfig   review}</b></p> <p><b>Example:</b></p> <pre> Switch(config-controller-OperationsMepPortType) # setLM ?   commit      commit setLM   lmConfig    Enable or Disable loss measurement   request   flush       flush all setLM commands from queue   review      review setLM commands                     </pre>	<p>Configures loss measurement (LM).</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the configuration to NID.</li> <li>• <b>flush</b>—Flushes all configuration from the queue.</li> <li>• <b>lmConfig</b>—Enables or disables the loss measurement configuration.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
Step 2	<p><b>setLM LmConfig { lmacction {enable {cast {multi   uni}   flr frame_interval   frameRate {fr10s   fr1m   fr1s   fr6h   fr6m}   mode {dual   single}   priority priority_no }   disable }   mepInstance instance_no }</b></p> <p><b>Example:</b></p> <pre> Switch(config-controller-OperationsMepPortType) # setLM lmConfig lmacction enable cast multi Switch(config-controller-OperationsMepPortType) # setLM lmConfig lmacction enable cast uni Switch(config-controller-OperationsMepPortType) # setLM lmConfig lmacction enable flr Switch(config-controller-OperationsMepPortType) # setLM lmConfig lmacction frameRate fr10s Switch(config-controller-OperationsMepPortType) # setLM lmConfig lmacction enable mode dual                     </pre>	<p>Sets LM parameters.</p> <ul style="list-style-type: none"> <li>• <b>lmacction</b>—Enables or disables LM on the controller.</li> <li>• <b>enable</b>—Enables loss measurement configuration.</li> <li>• <b>disable</b>—Disables loss measurement configuration.</li> <li>• <b>cast</b>—Specifies transmission mode.</li> <li>• <b>multi</b>—Specifies OAM protocol data units (PDU) transmission with multicast MAC.</li> <li>• <b>uni</b>—Specifies OAM protocol data units (PDU) transmission with unicast MAC. The MAC is procured from the peer MEP MAC database.</li> </ul>

	Command or Action	Purpose
	<pre>Switch(config-controller-OperationsMepPortType) # setLM lmConfig lmaction enable priority 4 Switch(config-controller-OperationsMepPortType) # setLM lmConfig mepInstance 1</pre>	<ul style="list-style-type: none"> <li>• <b>flr</b> <i>frame_interval</i>—Specifies the frame loss ratio interval time. The valid range is from 0 to 99.</li> <li>• <b>frameRate</b>—Specifies the LM frame rate. <ul style="list-style-type: none"> <li>◦ <b>fr10s</b> —Specifies the frame rate as 10 f/s.</li> <li>◦ <b>fr1m</b> —Specifies the frame rate as 1 f/min.</li> <li>◦ <b>fr1s</b> —Specifies the frame rate as 1 f/s.</li> <li>◦ <b>fr6h</b> —Specifies the frame rate as 6 f/hour.</li> <li>◦ <b>fr6m</b> —Specifies the frame rate as 6 f/min.</li> </ul> </li> <li>• <b>mode</b>—Specifies the mode of delay measurement.</li> <li>• <b>dual</b>—Specifies dual LM mode on CCM PDU.</li> <li>• <b>single</b>—Specifies single LM mode on LMM or LMR PDU.</li> <li>• <b>priority</b> <i>priority_no</i>—Priority in case of tagged OAM. In the EVC domain this is the COS-ID. The valid range is from 0 to 7.</li> <li>• <b>mepinstance</b> <i>instance_no</i>—Indicates the MEP instance. The valid values are from 1 to 128.</li> </ul>
<b>Step 3</b>	<pre>setLM review</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # setLM review</pre> <p>Commands in queue:</p> <pre>setLM lmConfig lmAction enable cast multi setLM lmConfig lmAction enable cast uni setLM lmConfig lmAction enable flr 2 setLM lmConfig lmAction enable frameRate fr10s setLM lmConfig lmAction enable mode dual setLM lmConfig lmAction enable priority 4</pre>	Displays the LM configuration on the controller.
<b>Step 4</b>	<pre>setLM commit</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # setLM commit SetLM Commit Success!!!</pre>	Sends the LM configuration to the NID.
<b>Step 5</b>	<pre>exit</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # exit</pre>	Exits the performance monitoring provisioning mode.

### Configuration Example

The example shows how to configure LM on the controller:

```
Switch(config-controller-OperationsMepPortType) # setLM lmConfig lmaction enable cast multi
Switch(config-controller-OperationsMepPortType) # setLM lmConfig lmaction enable cast uni
Switch(config-controller-OperationsMepPortType) # setLM lmConfig lmaction enable flr
Switch(config-controller-OperationsMepPortType) # setLM lmConfig lmaction frameRate fr10s
Switch(config-controller-OperationsMepPortType) # setLM lmConfig lmaction enable mode dual
Switch(config-controller-OperationsMepPortType) # setLM lmConfig lmaction enable priority 4
Switch(config-controller-OperationsMepPortType) # setLM lmConfig mepInstance 1
Switch(config-controller-OperationsMepPortType) # setLM review
```

Commands in queue:

```
setLM lmConfig lmAction enable cast multi
setLM lmConfig lmAction enable cast uni
setLM lmConfig lmAction enable flr 2
setLM lmConfig lmAction enable frameRate fr10s
setLM lmConfig lmAction enable mode dual
setLM lmConfig lmAction enable priority 4
```

```
Switch(config-controller-OperationsMepPortType) # setLM commit
SetLM_Output.mepResponse = 0 SetLM-Output.mepResponse = 0
SetLM Commit Success!!!
```

```
Switch(config-controller-OperationsMepPortType) #end
```

## Configuring Lock Signal on the Controller

### Before You Begin

- Perform the steps to provision performance monitoring on the controller. See [Provisioning the Controller to Configure Performance Monitoring](#), on page 349.

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>setLck</b> {commit   flush   lckConfig   review}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # setLck ? commit      commit setLck flush      flush all setLck commands from queue lckConfig  Enable or Disable lock signal request review     review setLck commands</pre>	<p>Configures lock signal.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the configuration to NID.</li> <li>• <b>flush</b>—Flushes all configuration from the queue.</li> <li>• <b>lckConfig</b>—Enables or disables the lock signal configuration.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
Step 2	<p><b>setLck lckConfig</b> {lckaction {enable frameRate {fr1m   fr1s}   disable}   mepInstance <i>instance_no</i>}</p>	<p>Sets lock signal parameters.</p> <ul style="list-style-type: none"> <li>• <b>lckaction</b>—Enables or disables lock signal on the controller.</li> </ul>

	Command or Action	Purpose
	<p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType)# <b>setlck lckConfig lckaction enable frameRate fr1m</b> Switch(config-controller-OperationsMepPortType)# <b>setlck lckConfig lckaction mepInstance 1</b></pre>	<ul style="list-style-type: none"> <li>• <b>enable</b>—Enables lock signal configuration.</li> <li>• <b>frameRate</b>—Configures the frame rate. <ul style="list-style-type: none"> <li>◦ <b>fr1m</b>—Specifies frame rate as 1 f/m.</li> <li>◦ <b>fr1s</b>—Specifies frame rate as 1 f/s.</li> </ul> </li> <li>• <b>disable</b>—Disables lock signal configuration.</li> <li>• <b>mepInstance</b> <i>instance_no</i>—Indicates the MEP instance. The valid values are from 1 to 128.</li> </ul>
<b>Step 3</b>	<p><b>setlck review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType)# <b>setlck review</b></pre> <p>Commands in queue:</p> <pre>    setLck lckConfig lckAction enable frameRate     fr1m     setLck lckConfig mepInstance 1</pre>	Displays the lock signal configuration on the controller.
<b>Step 4</b>	<p><b>setlckcommit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType)# <b>setlck commit</b></pre>	Sends the lock signal configuration to the NID.
<b>Step 5</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType)# <b>exit</b></pre>	Exits the performance monitoring provisioning mode.

### Configuration Example

The example shows how to configure lock signal on the controller:

```
Switch(config-controller-OperationsMepPortType)# setlck lckConfig lckaction enable frameRate
fr1m
Switch(config-controller-OperationsMepPortType)# setlck lckConfig lckaction mepInstance 1
Switch(config-controller-OperationsMepPortType)# setlck review

Commands in queue:
    setLck lckConfig lckAction enable frameRate fr1m
    setLck lckConfig mepInstance 1

Switch(config-controller-OperationsMepPortType)# setlck commit
SetLck_Output.mepResponse = 0
SetLck Commit Success!!!
Switch(config-controller-OperationsMepPortType)#end
```



# Configuring LoopBack on the Controller

## Before You Begin

- Perform the steps to provision performance monitoring on the controller. See [Provisioning the Controller to Configure Performance Monitoring](#), on page 349.

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>setLoopBack</b> {commit   flush   loopBackConfig   review}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # setLoopBack ?   commit          commit setLoopBack   flush           flush all setLoopBack commands from                   queue   loopBackConfig Enable/Disable loopback   review         review setLoopBack commands</pre>	<p>Configures loopback.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the configuration to NID.</li> <li>• <b>flush</b>—Flushes all configuration from the queue.</li> <li>• <b>loopBackConfig</b>—Enables or disables the loopback configuration.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
Step 2	<p><b>setLoopBack loopBackConfig</b> {lbAction {enable {cast {multi   uni {destination {macAddress target_MAC   mepid mep_id} } }   count count_no   dei {enable   disable}   interval interval   priority priority_no   size bytes}   disable}   mepInstance instance_no}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # setLoopBack loopbackConfig lbaction enable cast multi Switch(config-controller-OperationsMepPortType) # setLoopBack loopbackConfig lbaction enable cast uni destination macAddress mac1 Switch(config-controller-OperationsMepPortType) # setLoopBack loopbackConfig lbaction enable cast unidestination mepId 3 Switch(config-controller-OperationsMepPortType) # setLoopBack loopbackConfig lbaction enable count 345 Switch(config-controller-OperationsMepPortType) # setLoopBack loopbackConfig lbaction enable dei enable Switch(config-controller-OperationsMepPortType) # setLoopBack loopbackConfig lbaction enable interval 20 Switch(config-controller-OperationsMepPortType) # setLoopBack loopbackConfig lbaction enable priority 7 Switch(config-controller-OperationsMepPortType) # setLoopBack loopbackConfig lbaction enable size 1400 Switch(config-controller-OperationsMepPortType) # setLoopBack loopbackConfig mepInstance 125</pre>	<p>Sets loopback parameters.</p> <ul style="list-style-type: none"> <li>• <b>lbaction</b>—Enables or disables loop back on the controller.</li> <li>• <b>enable</b>—Enables loop back trace configuration.</li> <li>• <b>cast</b>—Specifies the type of loop back configuration.</li> <li>• <b>multi</b>—Specifies OAM protocol data units (PDU) transmission with multicast MAC.</li> <li>• <b>uni</b>—Specifies OAM protocol data units (PDU) transmission with unicast MAC. The MAC is procured from the peer MEP MAC database.</li> <li>• <b>destination</b>—Specifies the target peer MEP.</li> <li>• <b>macAddress target_MAC</b>—Specifies the MAC address for LT in MEP.</li> <li>• <b>mepId mep_id</b>—Specifies Peer MEP ID. The valid range is from 0 to 8191.</li> <li>• <b>dei</b>—Specifies drop eligible indicator for tagged OAM.</li> <li>• <b>enable</b>—Enables drop eligible indicator configuration.</li> <li>• <b>disable</b>—Disables drop eligible indicator configuration.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>count</b> <i>count_no</i>—Specifies the number of loop back PDU sent in a single loop test .</li> <li>• <b>interval</b> <i>interval_no</i>—Specifies the interval time between the PDU transmission in ms. The valid range is from 0 to 65535. The minimum value is 10ms.</li> <li>• <b>priority</b> <i>priority_no</i>—Specifies the priority for tagged OAM. In EVC domain, it indicates the COS-ID. The valid range is from 0 to 7.</li> <li>• <b>size</b> <i>frames</i>—Specifies the number of bytes. The valid range is from 1 to 1400.</li> <li>• <b>disable</b>—Disables loop back configuration.</li> <li>• <b>mepInstance</b> <i>instance_no</i>—Indicates the MEP instance. The valid values are from 1 to 128.</li> </ul>
<b>Step 3</b>	<b>setloopback review</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType)# <b>setloopback review</b> Commands in queue: setLoopBack loopBackConfig lbAction enable cast multi setLoopBack loopBackConfig lbAction enable cast uni destination macAddress mac1 setLoopBack loopBackConfig lbAction enable cast uni destination mepId 3 setLoopBack loopBackConfig lbAction enable count 345 setLoopBack loopBackConfig lbAction enable dei enable setLoopBack loopBackConfig lbAction enable interval 20 setLoopBack loopBackConfig lbAction enable priority 7 setLoopBack loopBackConfig lbAction enable size 1400 setLoopBack loopBackConfig mepInstance 125	Displays the loop back configuration on the controller.
<b>Step 4</b>	<b>setlckcommit</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType)# <b>setloopback commit</b>	Sends the loop back configuration to the NID.
<b>Step 5</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType)# <b>exit</b>	Exits the performance monitoring provisioning mode.

### Configuration Example

The example shows how to configure loop back on the controller:

```
Switch(config-controller-OperationsMepPortType) # setLoopBack loopbackConfig lbaction enable
cast multi
Switch(config-controller-OperationsMepPortType) # setLoopBack loopbackConfig lbaction enable
cast uni destination macAddress mac1
Switch(config-controller-OperationsMepPortType) # setLoopBack loopbackConfig lbaction enable
cast unidestination mepId 3
Switch(config-controller-OperationsMepPortType) # setLoopBack loopbackConfig lbaction enable
count 345
Switch(config-controller-OperationsMepPortType) # setLoopBack loopbackConfig lbaction enable
dei enable
Switch(config-controller-OperationsMepPortType) # setLoopBack loopbackConfig lbaction enable
interval 20
Switch(config-controller-OperationsMepPortType) # setLoopBack loopbackConfig lbaction enable
priority 7
Switch(config-controller-OperationsMepPortType) # setLoopBack loopbackConfig lbaction enable
size 1400
Switch(config-controller-OperationsMepPortType) # setLoopBack loopbackConfig mepInstance 125
Switch(config-controller-OperationsMepPortType) # setsetloopback review

Commands in queue:
    setLoopBack loopBackConfig lbAction enable cast multi
    setLoopBack loopBackConfig lbAction enable cast uni destination macAddre
ss mac1
    setLoopBack loopBackConfig lbAction enable cast uni destination mepId 3
    setLoopBack loopBackConfig lbAction enable cast uni destination mepId 3
    setLoopBack loopBackConfig lbAction enable count 345
    setLoopBack loopBackConfig lbAction enable dei enable
    setLoopBack loopBackConfig lbAction enable interval 20
    setLoopBack loopBackConfig lbAction enable priority 7
    setLoopBack loopBackConfig lbAction enable size 1400

Switch(config-controller-OperationsMepPortType) # setsetloopback commit
SetLoopBack_Output.mepResponse = 34275330

SetLoopBack Commit Success!!!
Switch(config-controller-OperationsMepPortType) #end
```

## Configuring Link Trace on the Controller

### Before You Begin

- Perform the steps to provision performance monitoring on the controller. See [Provisioning the Controller to Configure Performance Monitoring](#), on page 349.

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>setLinkTrace</b> {commit   flush   linkTrace   review}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # setLinkTrace ? commit      commit setLinkTrace flush      flush all setLinkTrace commands from</pre>	<p>Configures link trace.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the configuration to NID.</li> <li>• <b>flush</b>—Flushes all configuration from the queue.</li> <li>• <b>linkTrace</b>—Enables or disables the link trace configuration.</li> </ul>

	Command or Action	Purpose
	<pre>queue linkTrace Enable or Disable linktrace request review review setLinkTrace commands</pre>	<ul style="list-style-type: none"> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
<b>Step 2</b>	<p><b>setLinkTrace linkTrace</b> {<b>lTAction</b> {<b>enable</b> {<b>destination</b> {<b>macAddress</b> <i>target_MAC</i>   <b>mepId</b> <i>mep_id</i>}   <b>priority</b> <i>priority_no</i>   <b>tTl</b> <i>tTl_time</i> <b>disable</b>}}   <b>mepInstance</b> <i>instance_no</i>}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # setlinkTrace linkTrace ltkaction enable destination macAddress macl Switch(config-controller-OperationsMepPortType) # setlinkTrace linkTrace ltkaction enable destination mepId 3 Switch(config-controller-OperationsMepPortType) # setlinkTrace linkTrace ltkaction enable priority 2 Switch(config-controller-OperationsMepPortType) # setlinkTrace linkTrace ltkaction enable tTl 3</pre>	<p>Sets link trace parameters.</p> <ul style="list-style-type: none"> <li>• <b>lTaction</b>—Enables or disables link trace on the controller.</li> <li>• <b>enable</b>—Enables link trace configuration.</li> <li>• <b>destination</b>—Specifies the target peer MEP. <ul style="list-style-type: none"> <li>◦ <b>macAddress</b> <i>target_MAC</i>—Specifies the link trace MAC address for LT in MEP.</li> <li>◦ <b>mepId</b> <i>mep_id</i>—Specifies Peer MEP ID for link trace. The valid range is from 0 to 8191.</li> </ul> </li> <li>• <b>priority</b> <i>priority_no</i>—Specifies the priority for tagged OAM. In EVC domain, it indicates the COS-ID. The valid range is from 0 to 7.</li> <li>• <b>tTl</b> <i>tTl_time</i>—Specifies the time to live. The valid range is from 1 to 999.</li> <li>• <b>disable</b>—Disables link trace signal configuration.</li> <li>• <b>mepInstance</b> <i>instance_no</i>—Indicates the MEP instance. The valid values are from 1 to 128.</li> </ul>
<b>Step 3</b>	<p><b>setLinkTrace review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # setlinkTrace review</pre>	<p>Displays the link trace configuration on the controller.</p>
<b>Step 4</b>	<p><b>setlckcommit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # setlinkTrace commit</pre>	<p>Sends the link trace configuration to the NID.</p>
<b>Step 5</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # exit</pre>	<p>Exits the performance monitoring provisioning mode.</p>

### Configuration Example

The example shows how to configure link trace on the controller:

```
Switch(config-controller-OperationsMepPortType) # setlinkTrace linkTrace ltkaction enable
destination macAddress mac1
Switch(config-controller-OperationsMepPortType) # setlinkTrace linkTrace ltkaction enable
destination mepId 3
Switch(config-controller-OperationsMepPortType) # setlinkTrace linkTrace ltkaction enable
priority 2
Switch(config-controller-OperationsMepPortType) # setlinkTrace linkTrace ltkaction enable
ttl 3
Switch(config-controller-OperationsMepPortType) # setlinkTrace review
```

```
Switch(config-controller-OperationsMepPortType) # setlinkTrace commit
SetLinkTrace_Output.mepResponse = 34340866

SetLinkTrace Commit Success!!!
Switch(config-controller-OperationsMepPortType) #end
```

## Configuring Test Signal on the Controller

### Before You Begin

- Perform the steps to provision performance monitoring on the controller. See [Provisioning the Controller to Configure Performance Monitoring](#), on page 349.

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>setTst {commit   flush   tstConfig   review}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # setTst ? commit      commit setTst flush      flush all setTst commands from queue review      review setTst commands tstConfig  Enable or Disable test signal request</pre>	<p>Configures test signal.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the configuration to NID.</li> <li>• <b>flush</b>—Flushes all configuration from the queue.</li> <li>• <b>tstConfig</b>—Enables or disables the test signal configuration.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
Step 2	<p><b>setTst tstConfig {dei {enable   disable}   mepId mep_Id   mepInstance mep_instance   pattern {allOne   allZero   oneZero}   priority priority_no   rate bit_rate   sequence {enable   disable}   size frames}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # setTst tstConfig dei enable Switch(config-controller-OperationsMepPortType) # setTst tstConfig mepid 2 Switch(config-controller-OperationsMepPortType) # setTst tstConfig mepinstance 2 Switch(config-controller-OperationsMepPortType) #</pre>	<p>Sets test signal parameters.</p> <ul style="list-style-type: none"> <li>• <b>dei</b>—Specifies drop eligible indicator for tagged OAM.</li> <li>• <b>enable</b>—Enables drop eligible indicator configuration.</li> <li>• <b>disable</b>—Disables drop eligible indicator configuration.</li> <li>• <b>mepId mep_instance</b>—Specifies Peer MEP ID. The valid range is from 0 to 8191.</li> <li>• <b>mepInstance instance_no</b>—Indicates the MEP instance. The valid values are from 1 to 128.</li> </ul>

	Command or Action	Purpose
	<pre> setTst tstConfig pattern allOne Switch(config-controller-OperationsMepPortType) # setTst tstConfig pattern allZero Switch(config-controller-OperationsMepPortType) # setTst tstConfig sequence enable Switch(config-controller-OperationsMepPortType) # setTst tstConfig rate 400 Switch(config-controller-OperationsMepPortType) # setTst tstConfig size 45 </pre>	<ul style="list-style-type: none"> <li>• <b>priority</b> <i>priority_no</i>—Specifies the priority for tagged OAM. In EVC domain, it indicates the COS-ID. The valid range is from 0 to 7.</li> <li>• <b>pattern</b>—Specifies the sequence number is test PDU.</li> <li>• <b>allOne</b>—Specifies the test pattern to all one.</li> <li>• <b>allZero</b>—Specifies the test pattern to all zero.</li> <li>• <b>oneZero</b>—Specifies the test pattern to one zero.</li> <li>• <b>rate</b> <i>bit_rate</i>—Specifies the test frame transmission rate in Megabits per second. The valid range is from 1 to 1518.</li> <li>• <b>sequence</b>—Enables or disables the sequence in test PDU.</li> <li>• <b>size</b> <i>frames</i>—Specifies the test pattern size in frames. The valid range is from 1 to 1518.</li> </ul>
<b>Step 3</b>	<p><b>setTst review</b></p> <p><b>Example:</b>  Switch(config-controller-OperationsMepPortType) #  <b>setTst review</b>  Commands in queue:  setTst tstConfig dei enable  setTst tstConfig mepId 2  setTst tstConfig mepInstance 2  setTst tstConfig pattern allOne  setTst tstConfig pattern allZero  setTst tstConfig priority 5  setTst tstConfig pattern allZero  setTst tstConfig rate 400  setTst tstConfig size 45</p>	Displays the test signal configuration on the controller.
<b>Step 4</b>	<p><b>setTstcommit</b></p> <p><b>Example:</b>  Switch(config-controller-OperationsMepPortType) #  <b>setTst commit</b></p>	Sends the link trace configuration to the NID.
<b>Step 5</b>	<p><b>exit</b></p> <p><b>Example:</b>  Switch(config-controller-OperationsMepPortType) #  <b>exit</b></p>	Exits the performance monitoring provisioning mode.

### Configuration Example

The example shows how to configure test signal on the controller:

```
Switch(config-controller-OperationsMepPortType) # setTst tstConfig dei enable
Switch(config-controller-OperationsMepPortType) # setTst tstConfig mepid 2
Switch(config-controller-OperationsMepPortType) # setTst tstConfig mepinstance 2
Switch(config-controller-OperationsMepPortType) # setTst tstConfig pattern allOne
Switch(config-controller-OperationsMepPortType) # setTst tstConfig pattern allZero
Switch(config-controller-OperationsMepPortType) # setTst tstConfig rate 400
Switch(config-controller-OperationsMepPortType) # setTst tstConfig sequence enable
Switch(config-controller-OperationsMepPortType) # setTst tstConfig size 45

Switch(config-controller-OperationsMepPortType) # setTst review
Commands in queue:
    setTst tstConfig dei enable
    setTst tstConfig mepId 2
    setTst tstConfig mepInstance 2
    setTst tstConfig pattern allOne
    setTst tstConfig pattern allZero
    setTst tstConfig priority 5
    setTst tstConfig pattern allZero
    setTst tstConfig rate 400
    setTst tstConfig size 45

Switch(config-controller-OperationsMepPortType) # setTst commit
SetTst_Output.mepResponse = 34471938
SetTst Commit Success!!!
Switch(config-controller-OperationsMepPortType) #end
```

## Viewing Alarm Information Signal (AIS) on the Controller

### Before You Begin

- Perform the steps to provision performance monitoring on the controller. See [Provisioning the Controller to Configure Performance Monitoring](#), on page 349.

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>showAis</b> {commit   flush   mepRequest   review}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # showAis ? commit      commit showAis flush      flush all showAis commands from queue mepRequest  Show AIS configuration request review      review showAis commands</pre>	<p>Displays alarm information signal configuration.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the configuration to NID.</li> <li>• <b>flush</b>—Flushes all configuration from the queue.</li> <li>• <b>mepRequest</b>—Displays the alarm configuration.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
Step 2	<p><b>showAis mepRequest</b> {all   mepInstance <i>instance_no</i>}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) #</pre>	<ul style="list-style-type: none"> <li>• <b>all</b>—Displays AIS configuration for all MEPs on the controller.</li> <li>• <b>mepInstance <i>instance_no</i></b>—Indicates the MEP instance. The valid values are from 1 to 128.</li> </ul>

	Command or Action	Purpose
	<pre>showAis mepRequest all Switch(config-controller-OperationsMepPortType) # showAis mepRequest mepInstance 120</pre>	
<b>Step 3</b>	<p><b>showAis review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # showAis review</pre> <p>Commands in queue:</p> <pre>showAis mepRequest all showAis mepRequest mepInstance 120</pre>	Displays the configuration on the controller.
<b>Step 4</b>	<p><b>showAis commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # showAis commit</pre>	Sends the configuration to the NID.
<b>Step 5</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # exit</pre>	Exits the performance monitoring provisioning mode.

### Configuration Example

The example shows how to display the AIS on the controller:

```
Switch(config-controller-OperationsMepPortType) # showAis mepRequest all
Switch(config-controller-OperationsMepPortType) # showAis mepRequest mepInstance 120
Switch(config-controller-OperationsMepPortType) # showAis review

Commands in queue:
showAis mepRequest all
showAis mepRequest mepInstance 120

Switch(config-controller-OperationsMepPortType) # showAis commit
Ais_Output.aisInfo.mepInst[0].config.mepInstance = 100
ShowAis_Output.aisInfo.mepInst[0].config.frameRate.t = 2
ShowAis_Output.aisInfo.mepInst[0].config.frameRate.u.frls = 'frls'
ShowAis_Output.aisInfo.mepInst[0].config.protect.t = 1
ShowAis_Output.aisInfo.mepInst[0].config.protect.u.enable = 'enable'

showAis Commit Success!!!
Switch(config-controller-OperationsMepPortType) # end
```

## Viewing Delay Measurement (DM) Statistics on the Controller

### Before You Begin

- Perform the steps to provision performance monitoring on the controller. See [Provisioning the Controller to Configure Performance Monitoring](#), on page 349.



## DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>showDM</b> {<b>commit</b>   <b>flush</b>   <b>mepRequest</b>   <b>review</b>}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # <b>showDM</b> ?   commit      commit showDM   flush       flush all showDM commands from queue   mepRequest  Show delay measurement statistics request   review      review showDM commands</pre>	<p>Displays delay measurement (DM).</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the configuration to NID.</li> <li>• <b>flush</b>—Flushes all configuration from the queue.</li> <li>• <b>mepRequest</b>—Displays the configuration.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
Step 2	<p><b>showDM mepRequest</b> {<b>all</b>   <b>mepInstance</b> <i>instance_no</i>}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # <b>showDM</b> <b>mepRequest all</b> Switch(config-controller-OperationsMepPortType) # <b>showDM</b> <b>mepRequest mepInstance 100</b></pre>	<ul style="list-style-type: none"> <li>• <b>all</b>—Displays DM configuration for all MEPs on the controller.</li> <li>• <b>mepInstance</b> <i>instance_no</i>—Indicates the MEP instance. The valid values are from 1 to 128.</li> </ul>
Step 3	<p><b>showDM review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # <b>showDM</b> <b>review</b> Commands in queue:   showDM mepRequest all   showDM mepRequest all   showDM mepRequest mepInstance 100</pre>	<p>Displays the configuration on the controller.</p>
Step 4	<p><b>showDM commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # <b>showDM</b> <b>commit</b></pre>	<p>Sends the configuration to the NID.</p>
Step 5	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # <b>exit</b></pre>	<p>Exits the performance monitoring provisioning mode.</p>

## Configuration Example

The example shows how to display the delay measurement statistics on the controller:

```
Switch(config-controller-OperationsMepPortType) # showDM mepRequest all
Switch(config-controller-OperationsMepPortType) # showDM mepRequest mepInstance 100
Switch(config-controller-OperationsMepPortType) # showDM review
Commands in queue:
  showDM mepRequest all
  showDM mepRequest all
  showDM mepRequest mepInstance 100
```

```

Switch(config-controller-OperationsMepPortType)# showDM commit
ShowDM_Output.dmInfo.mepInst[0].config.mepInstance = 98
ShowDM_Output.dmInfo.mepInst[0].config.priority = 7
ShowDM_Output.dmInfo.mepInst[0].config.cast.t = 1
ShowDM_Output.dmInfo.mepInst[0].config.cast.u.uni.mepId = 106
ShowDM_Output.dmInfo.mepInst[0].config.mode.t = 2
ShowDM_Output.dmInfo.mepInst[0].config.mode.u.twoWay = 'two-way'
ShowDM_Output.dmInfo.mepInst[0].config.txMode.t = 1
ShowDM_Output.dmInfo.mepInst[0].config.txMode.u.standardize = 'standardize'
ShowDM_Output.dmInfo.mepInst[0].config.calculation.t = 1
ShowDM_Output.dmInfo.mepInst[0].config.calculation.u.rdtrp = 'rdtrp'
ShowDM_Output.dmInfo.mepInst[0].config.interval = 10
ShowDM_Output.dmInfo.mepInst[0].config.lastN = 10
ShowDM_Output.dmInfo.mepInst[0].config.unit.t = 2
ShowDM_Output.dmInfo.mepInst[0].config.unit.u.us = 'micro seconds'
ShowDM_Output.dmInfo.mepInst[0].config.synchronized.t = 2
ShowDM_Output.dmInfo.mepInst[0].config.synchronized.u.disable = 'Disable'
ShowDM_Output.dmInfo.mepInst[0].config.overflowReset.t = 1
ShowDM_Output.dmInfo.mepInst[0].config.overflowReset.u.keep = 'keep'
ShowDM_Output.dmInfo.mepInst[0].state.mepInstance = 106
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.F_to_N.tx = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.F_to_N.rxTimeout = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.F_to_N.rx = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.F_to_N.rxError = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.F_to_N.avgTotal = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.F_to_N.avgLastN = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.F_to_N.min = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.F_to_N.max = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.F_to_N.avgVariationTotal = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.F_to_N.avgVariationLastN = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.F_to_N.minVar = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.F_to_N.maxVar = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.F_to_N.overflow = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.N_to_F.tx = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.N_to_F.rxTimeout = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.N_to_F.rx = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.N_to_F.rxError = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.N_to_F.avgTotal = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.N_to_F.avgLastN = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.N_to_F.min = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.N_to_F.max = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.N_to_F.avgVariationTotal = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.N_to_F.avgVariationLastN = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.N_to_F.minVar = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.N_to_F.maxVar = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.oneWay.N_to_F.overflow = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.twoWay.tx = 793
ShowDM_Output.dmInfo.mepInst[0].state.mode.twoWay.rxTimeout = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.twoWay.rx = 793
ShowDM_Output.dmInfo.mepInst[0].state.mode.twoWay.rxError = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.twoWay.avgTotal = 17
ShowDM_Output.dmInfo.mepInst[0].state.mode.twoWay.avgLastN = 17
ShowDM_Output.dmInfo.mepInst[0].state.mode.twoWay.min = 17
ShowDM_Output.dmInfo.mepInst[0].state.mode.twoWay.max = 18
ShowDM_Output.dmInfo.mepInst[0].state.mode.twoWay.avgVariationTotal = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.twoWay.avgVariationLastN = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.twoWay.minVar = 0
ShowDM_Output.dmInfo.mepInst[0].state.mode.twoWay.maxVar = 1
ShowDM_Output.dmInfo.mepInst[0].state.mode.twoWay.overflow = 0
  showDM Commit Success!!!

Switch(config-controller-OperationsMepPortType)# end

```

## Viewing Loss Measurement (LM) Statistics on the Controller

### Before You Begin

- Perform the steps to provision performance monitoring on the controller. See [Provisioning the Controller to Configure Performance Monitoring](#), on page 349.

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<p><b>showLM</b> {commit   flush   mepRequest   review}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType)# showLM ?   commit      commit showLM   flush       flush all showLM commands from queue   mepRequest  Show LM statistics request   review      review showLM commands</pre>	<p>Displays loss measurement configuration.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the configuration to NID.</li> <li>• <b>flush</b>—Flushes all configuration from the queue.</li> <li>• <b>mepRequest</b>—Displays the configuration.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
<b>Step 2</b>	<p><b>showLM mepRequest</b> {all   mepInstance <i>instance_no</i>}</p> <p><b>Example:</b></p> <pre>Switch(config-controllerOperationsMepPortType)# showLM mepRequest all Switch(config-controller-OperationsMepPortType)# showLM mepRequest mepInstance 100</pre>	<ul style="list-style-type: none"> <li>• <b>all</b>—Displays LM statistics for all MEPs on the controller.</li> <li>• <b>mepInstance</b> <i>instance_no</i>—Indicates the MEP instance. The valid values are from 1 to 128.</li> </ul>
<b>Step 3</b>	<p><b>showLM review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType)# showLM review Commands in queue:   showLM mepRequest all   showLM mepRequest mepInstance 100</pre>	<p>Displays the configuration on the controller.</p>
<b>Step 4</b>	<p><b>showLM commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType)# showLM commit</pre>	<p>Sends the configuration to the NID.</p>
<b>Step 5</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType)# exit</pre>	<p>Exits the performance monitoring provisioning mode.</p>

### Configuration Example

The example shows how to display the loss measurement statistics on the controller:

```
Switch(config-controller-OperationsMepPortType)# showLM mepRequest all
Switch(config-controller-OperationsMepPortType)# showLM mepRequest mepInstance 100
Switch(config-controller-OperationsMepPortType)# showLM review

CCommands in queue:
    showLM mepRequest all
    showLM mepRequest mepInstance 100

Switch(config-controller-OperationsMepPortType)# showLM commit
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mepInstance = 98
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.priority = 7
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.cast.t = 2
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.cast.u.multi = 'multi'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mode.t = 2
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.mode.u.single = 'single'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.frameRate.t = 3
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.frameRate.u.frls = 'frls'
ShowLM_Output.lossMeasurentInfo.mepInst[0].config.flr = 5
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.mepInstance = 98
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.tx = 137
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.rx = 137
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.nearCount = 0
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.farCount = 1105217
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.nearRatio = 0
ShowLM_Output.lossMeasurentInfo.mepInst[0].state.farRatio = 94
    showLM Commit Success!!!

Switch(config-controller-OperationsMepPortType)# exit
```

## Viewing Lock Signal on the Controller

### Before You Begin

- Perform the steps to provision performance monitoring on the controller. See [Provisioning the Controller to Configure Performance Monitoring](#), on page 349.

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>showlck</b> {commit   flush   mepRequest   review}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType)# showAis ?   commit      commit showLck   flush       flush all showLck commands from queue   mepRequest  Show lock signal current configuration   request   review      review showLck commands</pre>	<p>Displays lock signal information.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the configuration to NID.</li> <li>• <b>flush</b>—Flushes all configuration from the queue.</li> <li>• <b>mepRequest</b>—Displays the configuration.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
Step 2	<p><b>showlck mepRequest</b> {all   mepInstance <i>instance_no</i>}</p>	<ul style="list-style-type: none"> <li>• <b>all</b>—Displays lock signal configuration for all MEPs on the controller.</li> </ul>

	Command or Action	Purpose
	<p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # showlck mepRequest all Switch(config-controller-OperationsMepPortType) # showlck mepRequest mepInstance 20</pre>	<ul style="list-style-type: none"> <li>• <b>mepInstance</b> <i>instance_no</i>—Indicates the MEP instance. The valid values are from 1 to 128.</li> </ul>
<b>Step 3</b>	<p><b>showlck review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # showlck review Commands in queue:   showLck mepRequest all   showLck mepRequest mepInstance 20</pre>	Displays the configuration on the controller.
<b>Step 4</b>	<p><b>setlck commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # showlck commit</pre>	Sends the configuration to the NID.
<b>Step 5</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # exit</pre>	Exits the performance monitoring provisioning mode.

### Configuration Example

The example shows how to display the lock signal on the controller:

```
Switch(config-controller-OperationsMepPortType) # showlck mepRequest all
Switch(config-controller-OperationsMepPortType) # showlck mepRequest mepInstance 20
Switch(config-controller-OperationsMepPortType) # showlck review

Commands in queue:
  showLck mepRequest all
  showLck mepRequest mepInstance 20

Switch(config-controller-OperationsMepPortType) # showlck commit
SetLck_Output.mepResponse = 0

SetLck Commit Success!!!
Switch(config-controller-OperationsMepPortType) # end
```

## Viewing Loopback State on the Controller

### Before You Begin

- Perform the steps to provision performance monitoring on the controller. See [Provisioning the Controller to Configure Performance Monitoring](#), on page 349.

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>showLoopBack</b> {<b>commit</b>   <b>flush</b>   <b>mepRequest</b>   <b>review</b>}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # <b>showLoopBack</b> ?   commit      commit showLoopBack   flush       flush all showLoopBack commands from   queue   mepRequest  Show loopback state and current   configuration request   review      review showLoopBack commands</pre>	<p>Display loopback information.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the configuration to NID.</li> <li>• <b>flush</b>—Flushes all configuration from the queue.</li> <li>• <b>mepRequest</b>—Displays the configuration.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
Step 2	<p><b>showLoopBack mepRequest</b> {<b>all</b>   <b>mepInstance</b> <i>instance_no</i>}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # <b>showLoopBack mepRequest all</b> Switch(config-controller-OperationsMepPortType) # <b>showLoopBack mepRequest mepInstance 30</b></pre>	<ul style="list-style-type: none"> <li>• <b>all</b>—Displays loopback configuration for all MEPs on the controller.</li> <li>• <b>mepInstance</b> <i>instance_no</i>—Indicates the MEP instance. The valid values are from 1 to 128.</li> </ul>
Step 3	<p><b>showLoopBack review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # <b>showLoopBack review</b></pre> <p>Commands in queue:</p> <pre>showLoopBack mepRequest all showLoopBack mepRequest mepInstance 30</pre>	<p>Displays the configuration on the controller.</p>
Step 4	<p><b>showLoopBack commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # <b>showLoopBack commit</b></pre>	<p>Sends the configuration to the NID.</p>
Step 5	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # <b>exit</b></pre>	<p>Exits the performance monitoring provisioning mode.</p>

## Configuration Example

The example shows how to display the loop back state on the controller:

```
Switch(config-controller-OperationsMepPortType) # showLoopBack mepRequest all
Switch(config-controller-OperationsMepPortType) # showLoopBack mepRequest mepInstance 30
Switch(config-controller-OperationsMepPortType) # showLoopBack review
```

```
Commands in queue:
showLoopBack mepRequest all
showLoopBack mepRequest mepInstance 30
```

```
Switch(config-controller-OperationsMepPortType)# showLoopBack commit
ShowLoopBack_Output.loopbackInfo.mepInst[0].config.mepInstance = 100
ShowLoopBack_Output.loopbackInfo.mepInst[0].config.dei.t = 2
ShowLoopBack_Output.loopbackInfo.mepInst[0].config.dei.u.disable = 'DEI Disable'
ShowLoopBack_Output.loopbackInfo.mepInst[0].config.priority = 7
ShowLoopBack_Output.loopbackInfo.mepInst[0].config.cast.t = 2
ShowLoopBack_Output.loopbackInfo.mepInst[0].config.cast.u.multi = 'MULTI'
ShowLoopBack_Output.loopbackInfo.mepInst[0].config.count = 10
ShowLoopBack_Output.loopbackInfo.mepInst[0].config.size = 70
ShowLoopBack_Output.loopbackInfo.mepInst[0].config.interval = 1
ShowLoopBack_Output.loopbackInfo.mepInst[0].state.mepInstance = 32
ShowLoopBack_Output.loopbackInfo.mepInst[0].state.transactionId = 11
ShowLoopBack_Output.loopbackInfo.mepInst[0].state.txLBM.upper = 0
ShowLoopBack_Output.loopbackInfo.mepInst[0].state.txLBM.lower = 10
ShowLoopBack_Output.loopbackInfo.mepInst[0].state.reply[0].rcvMac = '00-3A-99-FD-47-2F'
ShowLoopBack_Output.loopbackInfo.mepInst[0].state.reply[0].received.upper = 0
ShowLoopBack_Output.loopbackInfo.mepInst[0].state.reply[0].received.lower = 10
ShowLoopBack_Output.loopbackInfo.mepInst[0].state.reply[0].outOfOrder.upper = 0
ShowLoopBack_Output.loopbackInfo.mepInst[0].state.reply[0].outOfOrder.lower = 0

Switch(config-controller-OperationsMepPortType)# exit
```

## Viewing Link Trace State on the Controller

### Before You Begin

- Perform the steps to provision performance monitoring on the controller. See [Provisioning the Controller to Configure Performance Monitoring](#), on page 349.

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>showLinkTrace</b> {<b>commit</b>   <b>flush</b>   <b>mepRequest</b>   <b>review</b>}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType)# showLinkTrace ?   commit      commit showLinkTrace   flush       flush all showLinkTrace commands from               queue   mepRequest  Show linktrace state and current               configuration request   review      review showLinkTrace commands</pre>	<p>Displays link trace configuration.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the configuration to NID.</li> <li>• <b>flush</b>—Flushes all configuration from the queue.</li> <li>• <b>mepRequest</b>—Displays the configuration.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
Step 2	<p><b>showLinkTrace mepRequest</b> {<b>all</b>   <b>mepInstance</b> <i>instance_no</i>}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType)# showLinkTrace mepRequest all Switch(config-controller-OperationsMepPortType)# showLinkTrace mepRequest mepInstance 40</pre>	<ul style="list-style-type: none"> <li>• <b>all</b>—Displays link trace state configuration for all MEPs on the controller.</li> <li>• <b>mepInstance</b> <i>instance_no</i>—Indicates the MEP instance. The valid values are from 1 to 128.</li> </ul>

	Command or Action	Purpose
Step 3	<b>showLinkTrace review</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType) # <b>showLinkTrace review</b>  Commands in queue: showLinkTrace mepRequest all showLinkTrace mepRequest mepInstance 120	Displays the configuration on the controller.
Step 4	<b>showLinkTrace commit</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType) # <b>showLinkTrace commit</b>	Sends the configuration to the NID.
Step 5	<b>exit</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType) # <b>exit</b>	Exits the performance monitoring provisioning mode.

### Configuration Example

The example shows how to display the link trace state on the controller:

```
Switch(config-controller-OperationsMepPortType) # showLinkTrace mepRequest all
Switch(config-controller-OperationsMepPortType) # showLinkTrace mepRequest mepInstance 40
Switch(config-controller-OperationsMepPortType) # showLinkTrace review

Commands in queue:
showLinkTrace mepRequest all
showLinkTrace mepRequest mepInstance 40

Switch(config-controller-OperationsMepPortType) # showLinkTrace commit
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].config.mepInstance = 100
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].config.priority = 7
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].config.mepId = 101
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].config.macAddress = '00-00-00-00-00-00'
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].config.ttl = 1
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[0].transactionId = 1
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[0].reply[0].ttl = 0
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[0].reply[0].mode.t = 1
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[0].reply[0].mode.u.MEP = 'MEP'
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[0].reply[0].direction.t = 2
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[0].reply[0].direction.u.DOWN = 'DOWN'
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[0].reply[0].forwarded.t = 2
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[0].reply[0].forwarded.u.NO = 'Not
forwarded'
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[0].reply[0].relay = 1
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[0].reply[0].lastMac = '00-3A-99-FD-4A-53'
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[0].reply[0].nextMac = '00-3A-99-FD-47-2F'
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[1].transactionId = 2
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[1].reply[0].ttl = 0
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[1].reply[0].mode.t = 1
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[1].reply[0].mode.u.MEP = 'MEP'
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[1].reply[0].direction.t = 2
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[1].reply[0].direction.u.DOWN = 'DOWN'
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[1].reply[0].forwarded.t = 2
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[1].reply[0].forwarded.u.NO = 'Not
forwarded'
```



```
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[1].reply[0].relay = 1
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[1].reply[0].lastMac = '00-3A-99-FD-4A-53'
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[1].reply[0].nextMac = '00-3A-99-FD-47-2F'
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[2].transactionId = 3
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[2].reply[0].ttl = 0
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[2].reply[0].mode.t = 1
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[2].reply[0].mode.u.MEP = 'MEP'
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[2].reply[0].direction.t = 2
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[2].reply[0].direction.u.DOWN = 'DOWN'
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[2].reply[0].forwarded.t = 2
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[2].reply[0].forwarded.u.NO = 'Not
forwarded'
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[2].reply[0].relay = 1
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[2].reply[0].lastMac = '00-3A-99-FD-4A-53'
ShowLinkTrace_Output.linkTraceInfo.mepInst[0].state[2].reply[0].nextMac = '00-3A-99-FD-47-2F'

showLinkTrace Commit Success!!!

Switch(config-controller-OperationsMepPortType) # end
```

## Viewing Test Signal Statistics on the Controller

### Before You Begin

- Perform the steps to provision performance monitoring on the controller. See [Provisioning the Controller to Configure Performance Monitoring](#), on page 349.

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>showTst {commit   flush   mepRequest   review}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # showTst ?   commit      commit showTst   flush       flush all showTst commands from queue   mepRequest  Show test signal statistics and current                configuration request   review      review showTst commands</pre>	<p>Displays test signal statistics.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the configuration to NID.</li> <li>• <b>flush</b>—Flushes all configuration from the queue.</li> <li>• <b>mepRequest</b>—Displays the configuration.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
Step 2	<p><b>showTst mepRequest {all   mepInstance instance_no}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # showTst mepRequest all Switch(config-controller-OperationsMepPortType) # showTst mepRequest mepInstance 50</pre>	<ul style="list-style-type: none"> <li>• <b>all</b>—Displays test signal statistics configuration for all MEPs on the controller.</li> <li>• <b>mepInstance instance_no</b>—Indicates the MEP instance. The valid values are from 1 to 128.</li> </ul>
Step 3	<p><b>showTst review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # showTst review</pre> <p>Commands in queue:</p>	<p>Displays the configuration on the controller.</p>

	Command or Action	Purpose
	<pre>showTst mepRequest all showTst mepRequest mepInstance 50</pre>	
<b>Step 4</b>	<p><b>showTstcommit</b></p> <p><b>Example:</b> Switch(config-controller-OperationsMepPortType) # <b>showTst commit</b></p>	Sends the configuration to the NID.
<b>Step 5</b>	<p><b>exit</b></p> <p><b>Example:</b> Switch(config-controller-OperationsMepPortType) # <b>exit</b></p>	Exits the performance monitoring provisioning mode.

### Configuration Example

The example shows how to display the test signal statistics on the controller:

```
Switch(config-controller-OperationsMepPortType) # showTst mepRequest all
Switch(config-controller-OperationsMepPortType) # showTst mepRequest mepInstance 120
Switch(config-controller-OperationsMepPortType) # showTst review
```

```
Commands in queue:
  showTst mepRequest all
  showTst mepRequest mepInstance 50
```

```
Switch(config-controller-OperationsMepPortType) # showTst commit
ShowTst_Output.tstInfo.mepInst[0].config.mepInstance = 100
ShowTst_Output.tstInfo.mepInst[0].config.dei.t = 2
ShowTst_Output.tstInfo.mepInst[0].config.dei.u.disable = 'Disable'
ShowTst_Output.tstInfo.mepInst[0].config.priority = 7
ShowTst_Output.tstInfo.mepInst[0].config.mepId = 101
ShowTst_Output.tstInfo.mepInst[0].config.rate = 1000
ShowTst_Output.tstInfo.mepInst[0].config.size = 64
ShowTst_Output.tstInfo.mepInst[0].config.pattern.t = 1
ShowTst_Output.tstInfo.mepInst[0].config.pattern.u.allZero = 'all-zero'
ShowTst_Output.tstInfo.mepInst[0].config.sequence.t = 1
ShowTst_Output.tstInfo.mepInst[0].config.sequence.u.enable = 'Enable'
ShowTst_Output.tstInfo.mepInst[0].config.Tx.t = 1
ShowTst_Output.tstInfo.mepInst[0].config.Tx.u.enable = 'Enable'
ShowTst_Output.tstInfo.mepInst[0].config.Rx.t = 1
ShowTst_Output.tstInfo.mepInst[0].config.Rx.u.enable = 'Enable'
ShowTst_Output.tstInfo.mepInst[0].state.txFrameCount.upper = 0
ShowTst_Output.tstInfo.mepInst[0].state.txFrameCount.lower = 241803
ShowTst_Output.tstInfo.mepInst[0].state.rxFrameCount.upper = 0
ShowTst_Output.tstInfo.mepInst[0].state.rxFrameCount.lower = 0
ShowTst_Output.tstInfo.mepInst[0].state.rxRate = 0
ShowTst_Output.tstInfo.mepInst[0].state.testTime = 162
  showTst Commit Success!!!
```

```
Switch(config-controller-OperationsMepPortType) # end
```

## Updating Delay Measurement (DM) on the Controller

### Before You Begin

- Perform the steps to provision performance monitoring on the controller. See [Provisioning the Controller to Configure Performance Monitoring](#), on page 349.

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>updateDM</b> {commit   flush   updateDmConfig   review}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType)# updateDM ? commit          commit updateDM flush           flush all updateDM commands from queue  review          review updateDM commands updateDmConfig Update DM parameters request</pre>	<p>Updates delay measurement (DM).</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the configuration to NID.</li> <li>• <b>flush</b>—Flushes all configuration from the queue.</li> <li>• <b>updateDmConfig</b>—Updates the delay measurement parameters.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
Step 2	<p><b>updateDM updateDmConfig</b> {mepInstance <i>instance_no</i>   update {overflowReset {keep   reset}   synchronized {enable   disable}   txMode {proprietary   standardize}   unit {ns   us}}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType)# updateDM updateDmConfig mepInstance 100 Switch(config-controller-OperationsMepPortType)# updateDM updateDmConfig update overflowReset keep Switch(config-controller-OperationsMepPortType)# updateDM updateDmConfig update overflowReset reset Switch(config-controller-OperationsMepPortType)# updateDM updateDmConfig update synchronized enable Switchconfig-controller-OperationsMepPortType)# updateDM updateDmConfig update overflowReset keep Switch(config-controller-OperationsMepPortType)# updateDM updateDmConfig update txMode proprietary Switch(config-controller-OperationsMepPortType)# updateDM updateDmConfig update txMode standardize Switch(config-controller-OperationsMepPortType)# updateDM updateDmConfig update unit ns Switch(config-controller-OperationsMepPortType)# updateDM updateDmConfig update unit us</pre>	<p>Updates DM parameters.</p> <ul style="list-style-type: none"> <li>• <b>mepInstance</b> <i>instance_no</i>—Indicates the MEP instance. The valid values are from 1 to 128.</li> <li>• <b>update</b>—Updates DM parameters for all MEPs on the controller.</li> <li>• <b>overflowReset</b>—Reset all delay Measurement results on total delay counters.</li> <li>• <b>keep</b>—Retains all delay Measurement results.</li> <li>• <b>reset</b>—Resets all delay Measurement results.</li> <li>• <b>synchronized</b>—Synchronizes near end and far end time intervals.</li> <li>• <b>enable</b>—Enables synchronization of near and far end time interval.</li> <li>• <b>disable</b>—Disables synchronization of near and far end time interval.</li> <li>• <b>txMode</b>—Sets the Tx mode.</li> <li>• <b>proprietary</b>—Sets the proprietary delay measurement parameters .</li> <li>• <b>standardize</b>—Sets the Y.1731 standards to transmit 1DM/DMR delay measurement parameters.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>unit</b>—Sets the delay in units.</li> <li>• <b>ns</b>—Specifies nanoseconds.</li> <li>• <b>us</b>—Sets microseconds.</li> </ul>
<b>Step 3</b>	<b>updateDM review</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType) # <b>updateDM review</b> Commands in queue: updateDM updateDmConfig mepInstance 1 updateDM updateDmConfig update overflowReset keep  reset updateDM updateDmConfig update overflowReset updateDM updateDmConfig update synchronized enable updateDM updateDmConfig update txMode proprietary updateDM updateDmConfig update txMode standardize updateDM updateDmConfig update txMode standardize  updateDM updateDmConfig update unit ns updateDM updateDmConfig update unit us	Displays the configuration on the controller.
<b>Step 4</b>	<b>updateDM commit</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType) # <b>updateDM commit</b>	Sends the configuration to the NID.
<b>Step 5</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType) # <b>exit</b>	Exits the performance monitoring provisioning mode.

### Configuration Example

The example shows how to update the delay measurement parameters on the controller:

```
Switch(config-controller-OperationsMepPortType) # updateDM updateDmConfig mepInstance 100
Switch(config-controller-OperationsMepPortType) # updateDM updateDmConfig update overflowReset
keep
Switch(config-controller-OperationsMepPortType) # updateDM updateDmConfig update overflowReset
reset
Switch(config-controller-OperationsMepPortType) # updateDM updateDmConfig update synchronized
enable
Switch(config-controller-OperationsMepPortType) # updateDM updateDmConfig update overflowReset
keep
Switch(config-controller-OperationsMepPortType) # updateDM updateDmConfig update txMode
proprietary
Switch(config-controller-OperationsMepPortType) # updateDM updateDmConfig update txMode
standardize
Switch(config-controller-OperationsMepPortType) # updateDM updateDmConfig update unit ns
Switch(config-controller-OperationsMepPortType) # updateDM updateDmConfig update unit us
```

```
Switch(config-controller-OperationsMepPortType) # updateDM review
Commands in queue:
    updateDM updateDmConfig mepInstance 1
    updateDM updateDmConfig update overflowReset keep
    updateDM updateDmConfig update overflowReset reset
    updateDM updateDmConfig update synchronized enable
    updateDM updateDmConfig update txMode proprietary
    updateDM updateDmConfig update txMode standardize
    updateDM updateDmConfig update txMode standardize
    updateDM updateDmConfig update unit ns
    updateDM updateDmConfig update unit us

Switch(config-controller-OperationsMepPortType) # updateDM commit
Switch(config-controller-OperationsMepPortType) # end
```

## Updating Test Signal Parameters on the Controller

### Before You Begin

- Perform the steps to provision performance monitoring on the controller. See [Provisioning the Controller to Configure Performance Monitoring](#), on page 349.

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>updateTst {commit   flush   updateTstConfig   review}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # <b>updateTst ?</b>     commit                commit updateTst     flush                  flush all updateTst commands from queue     review                 review updateTst commands     updateTstConfig       Update Tst signal request</pre>	<p>Updates the test signal parameters.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the configuration to NID.</li> <li>• <b>flush</b>—Flushes all configuration from the queue.</li> <li>• <b>updateTstConfig</b>—Updates the test signal parameters.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
Step 2	<p><b>updateTst updateTstConfig {mepInstance instance_no   update {Rx   Tx} {enable   disable}}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # <b>updateTst updatetstConfig mepInstance 100</b> Switch(config-controller-OperationsMepPortType) # <b>updateTst updatetstConfig update Rx enable</b> Switch(config-controller-OperationsMepPortType) # <b>updateTst updatetstConfig update Tx enable</b></pre>	<ul style="list-style-type: none"> <li>• <b>mepInstance instance_no</b>—Indicates the MEP instance. The valid values are from 1 to 128.</li> <li>• <b>update</b>—Updates DM parameters for all MEPs.</li> <li>• <b>Rx</b>—Sets the Rx mode.</li> <li>• <b>Tx</b>—Sets the Tx mode.</li> <li>• <b>enable</b>—Enables the mode.</li> <li>• <b>disable</b>—Disables the mode.</li> </ul>
Step 3	<p><b>updateTst review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # <b>updateTst review</b></pre>	<p>Displays the configuration on the controller.</p>

	Command or Action	Purpose
	<pre>Commands in queue: updateTst updateTstConfig mepInstance 2 updateTst updateTstConfig update Rx enable updateTst updateTstConfig update Tx enable updateTst updateTstConfig update Tx enable</pre>	
<b>Step 4</b>	<p><b>updateTst commit</b></p> <p><b>Example:</b>  Switch(config-controller-OperationsMepPortType) #  <b>updateTst commit</b></p>	Sends the configuration to the NID.
<b>Step 5</b>	<p><b>exit</b></p> <p><b>Example:</b>  Switch(config-controller-OperationsMepPortType) # <b>exit</b></p>	Exits the performance monitoring provisioning mode.

### Configuration Example

The example shows how to update the test signal parameters on the controller:

```
Switch(config-controller-OperationsMepPortType) # updateTst updatetstConfig mepInstance 100
Switch(config-controller-OperationsMepPortType) # updateTst updatetstConfig update Rx enable
Switch(config-controller-OperationsMepPortType) # updateTst updatetstConfig update Tx enable

Switch(config-controller-OperationsMepPortType) # updateTst review
Commands in queue:
updateTst updateTstConfig mepInstance 2
updateTst updateTstConfig update Rx enable
updateTst updateTstConfig update Tx enable
updateTst updateTstConfig update Tx enable

Switch(config-controller-OperationsMepPortType) # updateTst commit
Switch(config-controller-OperationsMepPortType) # end
```

## Clearing MEP Statistics on the Controller

### Before You Begin

- Perform the steps to provision performance monitoring on the controller. See [Provisioning the Controller to Configure Performance Monitoring](#), on page 349.

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<p><b>clearMepStats {commit   flush   clearStats   review}</b></p> <p><b>Example:</b>  Switch(config-controller-OperationsMepPortType) #</p>	<p>Clears the MEP statistics.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the configuration to NID.</li> <li>• <b>flush</b>—Flushes all configuration from the queue.</li> </ul>

	Command or Action	Purpose
	<pre>clearMepStats ?   clearStats  Clear mep statistics request   commit      commit clearMepStats   flush       flush all clearMepStats commands from   queue   review      review clearMepStats commands</pre>	<ul style="list-style-type: none"> <li>• <b>clearStats</b>—Clears the MEP statistics.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
<b>Step 2</b>	<pre>clearMepStats clearStats {mepInstance instance_no   StatsType {DM   LM   TST}}</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # clearMepStats clearStats mepInstance 25 Switch(config-controller-OperationsMepPortType) # clearMepStats clearStats statstype DM</pre>	<ul style="list-style-type: none"> <li>• <b>mepInstance instance_no</b>—Indicates the MEP instance. The valid values are from 1 to 128.</li> <li>• <b>Statstype</b>—Indicates the protocol type.</li> <li>• <b>DM</b>—Specifies the delay measurement statistics.</li> <li>• <b>LM</b>—Specifies the loss measurement statistics.</li> <li>• <b>TST</b>—Specifies the test signal statistics.</li> </ul>
<b>Step 3</b>	<pre>clearMepStats review</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # clearMepStats review</pre> <p>Commands in queue:</p> <pre>clearMepStats clearStats mepInstance 23</pre>	Displays the configuration on the controller.
<b>Step 4</b>	<pre>clearMepStats commit</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # clearMepStats commit</pre>	Sends the configuration to the NID.
<b>Step 5</b>	<pre>exit</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType) # exit</pre>	Exits the performance monitoring provisioning mode.

### Configuration Example

The example shows how to clear the MEP statistics on the controller:

```
Switch(config-controller-OperationsMepPortType) # clearMepStats clearStats mepInstance 25
Switch(config-controller-OperationsMepPortType) # clearMepStats clearStats statstype DM
Switch(config-controller-OperationsMepPortType) # clearMepStats review

Commands in queue:
clearMepStats clearStats mepInstance 23

Switch(config-controller-OperationsMepPortType) # clearMepStats commit
Switch(config-controller-OperationsMepPortType) #end
```

## Negating Performance Monitoring Configuration and Restoring Defaults

### Before You Begin

- Perform the steps to provision performance monitoring on the controller. See [Provisioning the Controller to Configure Performance Monitoring](#), on page 349.

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<p><b>no ?</b></p> <p><b>Example:</b> Switch(config-controller-OperationsMepPortType)# <b>no ?</b></p> <pre> clearMepStats  Clear mep statistics request exit           Exit from OperationsMepPortType sub configuration mode setAis         Enable or Disable AIS request setDM          Enable or Disable delay measurement request setLM          Enable or Disable loss measurement request setLck         Enable or Disable lock signal request setLinkTrace   Enable or Disable linktrace request setLoopBack    Enable/Disable loopback setTst         Enable or Disable test signal request showAis        Show AIS configuration request showDM         Show delay measurement statistics request showLM         Show LM statistics request showLck        Show lock signal current configuration request showLinkTrace  Show linktrace state and current configuration request showLoopBack   Show loopback state and current configuration request showTst        Show test signal statistics and current configuration request updateDM       Update DM parameters request updateTst      Update Tst signal request </pre>	Negates the commands and sets the default configuration.
<b>Step 2</b>	<p><b>exit</b></p> <p><b>Example:</b> Switch(config-controller-OperationsMepPortType)# <b>exit</b></p>	Exits the performance monitoring provisioning mode.



# Setting Performance Monitoring Parameters

## SUMMARY STEPS

1. **configure terminal**
2. **controller nid 1/NID\_ID**
3. **ProvisionMepPortType**
4. **setPerformanceMonitoring perform-mon**{ interval { dm { disable | dm\_value } | evc { disable | evc\_value } | lm { disable | lm\_value } } | session { dm { disable | enable } | evc { disable | enable } | lm { disable | enable } } | storage { dm { disable | enable } | evc { disable | enable } | lm { disable | enable } | dm\_binning { disable | enable } } | transfer { fixed\_offset { disable | value } | hour { disable | value } | incomplete { disable | enable } | minute { disable | minute } | mode { all | disable | fixed | new } | random\_offset { disable | random\_offset } | status { disable | enable } | url { disable | enable } }
5. **setPerformanceMonitoring review**
6. **setPerformanceMonitoring commit**
7. **exit**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>ProvisionMepPortType</b>  <b>Example:</b> Switch(config-controller)# OperationsMepPortType	Enters the OperationsMepPortType mode and enables provisioning of the MEP.
Step 4	<b>setPerformanceMonitoring perform-mon</b> { interval { dm { disable   dm_value }   evc { disable   evc_value }   lm { disable   lm_value } }   session { dm { disable   enable }   evc { disable   enable }   lm { disable   enable } }   storage { dm { disable   enable }   evc { disable   enable }   lm { disable   enable }   dm_binning { disable   enable } }   transfer { fixed_offset { disable   value }   hour { disable   value }   incomplete { disable   enable }   minute { disable   minute }   mode { all   disable   fixed   new }   random_offset { disable   random_offset }   status { disable   enable }   url { disable   enable } }  <b>Example:</b>	Specify the performance monitoring parameters. <ul style="list-style-type: none"> <li>• <b>interval</b>—Specifies measurement interval. <ul style="list-style-type: none"> <li>◦ <b>dm</b> —Specifies delay measurement interval in minute or disable it. The delay management ranges from 1-60 minute.</li> </ul> </li> </ul>

Command or Action	Purpose
<pre>Switch(config-controller-OperationsMepPortType)#setPerformanceMonitoring perform-mon transfer status enable  Switch(config-controller-OperationsMepPortType)#setPerformanceMonitoring perform-mon transfer hour value 4  Switch(config-controller-OperationsMepPortType)#setPerformanceMonitoring perform-mon transfer minute minute 30  Switch(config-controller-OperationsMepPortType)#setPerformanceMonitoring perform-mon transfer fixed-offset value 11  Switch(config-controller-OperationsMepPortType)#setPerformanceMonitoring perform-mon transfer random-offset random-offset 200  Switch(config-controller-OperationsMepPortType)#setPerformanceMonitoring perform-mon transfer incomplete enable  Switch(config-controller-OperationsMepPortType)#setPerformanceMonitoring perform-mon transfer mode fixed 24  Switch(config-controller-OperationsMepPortType)#setPerformanceMonitoring perform-mon transfer url url tftp://202.153.144.25/tftpboot/praveen</pre>	<ul style="list-style-type: none"> <li>◦ <b>evc</b> —Specifies EVC in minute or disable it. The EVC ranges from 1-60 minute.</li> <li>◦ <b>lm</b>—Specifies loss measurement in minute or disable it. The loss measurement ranges from 1-60 minute.</li> <li>• <b>session</b>—Specifies the session. <ul style="list-style-type: none"> <li>◦ <b>dm</b> —Disable or enable intervals from previous incomplete transfers.</li> <li>◦ <b>evc</b> —Disable or enable intervals from previous incomplete transfers.</li> <li>◦ <b>lm</b>—Disable or enable intervals from previous incomplete transfers.</li> </ul> </li> <li>• <b>storage</b>—Specifies storage. <ul style="list-style-type: none"> <li>◦ <b>dm</b> —Disable or enable intervals from previous incomplete transfers.</li> <li>◦ <b>evc</b> —Disable or enable intervals from previous incomplete transfers.</li> <li>◦ <b>lm</b>—Disable or enable intervals from previous incomplete transfers.</li> <li>◦ <b>dm_binning</b>—Disable or enable intervals from previous incomplete transfers.</li> </ul> </li> <li>• <b>transfer</b>—Enable transfer mode. <ul style="list-style-type: none"> <li>◦ <b>fixed-offset</b> —Specifies a scheduled offset value in minute or disable it. Allowed range is 1-15 minute.</li> </ul> </li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>◦ <b>hour</b> —Specifies scheduled hour to transfer or disable it. Allowed range is 0-23 type hour.</li> <li>◦ <b>incomplete</b>—Disable or enable intervals from previous incomplete transfers.</li> <li>◦ <b>minute</b>—Specifies scheduled minute to transfer or disable it. Allowed range is 0, 15, 30 or 45.</li> <li>◦ <b>mode</b>—Specifies interval mode.                             <ul style="list-style-type: none"> <li>◦ <b>all</b>—Specifies all available interval .</li> <li>◦ <b>disable</b>—Disable interval.</li> <li>◦ <b>fixed</b>—Specifies fixed interval. Allowed range is 1-96.</li> <li>◦ <b>new</b>—Specifies new interval since last transfer .</li> </ul> </li> <li>◦ <b>random_offset</b>—Disable or enable random offset value. Allowed range is 0-900 seconds.</li> <li>◦ <b>status</b>—Disable or enable the status.</li> <li>◦ <b>url</b>—Disable or enable server url.</li> </ul>
<p><b>Step 5</b></p>	<p><b>setPerformanceMonitoring review</b></p> <p><b>Example:</b>                      Switch(config-controller-OperationsMepPortType) # setPerformanceMonitoring review</p>	<p>Displays the performance monitoring configuration.</p>

	Command or Action	Purpose
<b>Step 6</b>	<b>setPerformanceMonitoring commit</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType)# setPerformanceMonitoring commit	Sends the performance monitoring configuration to the Cisco ME 1200 NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-OperationsMepPortType)# exit Switch(config-controller)#	Exits to the controller configuration mode.

## Viewing Performance Monitoring Parameters

### SUMMARY STEPS

1. **configure terminal**
2. **controller nid 1/NID\_ID**
3. **ProvisionMepPortType**
4. **getPerformanceMonitoring getPerfomanceMonitorParameters**
5. **getPerformanceMonitoring review**
6. **g?etPerformanceMonitoring commit**
7. **exit**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionMepPortType</b>  <b>Example:</b> Switch(config-controller)# OperationsMepPortType	Enters the OperationsMepPortType mode and enables provisioning of the MEP.

	Command or Action	Purpose
Step 4	<p><b>getPerformanceMonitoring getPerformanceMonitorParameters</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType)#getPerformanceMonitoring getPerfomanceMonitorParameters</pre>	Retrieve Performance Monitor parameters
Step 5	<p><b>getPerformanceMonitoring review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType)# getPerformanceMonitoring review</pre>	Displays the performance monitoring configuration.
Step 6	<p><b>g?etPerformanceMonitoring commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType)# getPerformanceMonitoring commit</pre>	Sends the performance monitoring configuration to the Cisco ME 1200 NID.
Step 7	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-OperationsMepPortType)# exit Switch(config-controller)#</pre>	Exits to the controller configuration mode.

## Verifying Performance Monitoring

Use the **show perf-mon** commands to verify the Performance Monitoring status on the controller.

**show perf-mon {current | interval-id unit instance instance\_id | interval-info | id unit} {feature {dm | ece | evc | lm}}**

- This command displays the current delay measurement status. The following is a sample output from the command:  
Switch# **show perf-mon current feature dm**
- This command displays the current loss measurement status. The following is a sample output from the command:  
Switch# **show perf-mon current feature lm**
- This command displays the delay measurement status for interval-id. The following is a sample output from the command:  
Switch# **show perf-mon interval-id id 3 instance 4 feature dm**

- This command displays the loss measurement status for interval-info. The following is a sample output from the command:

```
Switch# show perf-mon interval-info 5 feature lm
```



## Configuring EPS

This document describes the Ethernet Protection Switching (EPS) feature and configuration steps to implement protection switching mechanisms for Ethernet layer topologies.

- [Prerequisites for Configuring EPS, page 391](#)
- [Information About EPS, page 391](#)
- [How to Provision EPS, page 392](#)
- [Verifying EPS, page 424](#)

### Prerequisites for Configuring EPS


- NID must be added to the controller.
- NID must be accessible from the controller.
- 

### Information About EPS

EPS is a fully allocated protection mechanism that ensures the route and bandwidth of the protection entity are reserved for a selected working entity. It provides a fast and simple protection mechanism. It is easier for the network administrators to monitor the status of the network (e.g., active network topology) with EPS when compared with other protocols such as Rapid Spanning Tree Protocol (RSTP).

The following figure shows the topology used for provisioning EPS on NID-1 and NID-2.

**Figure 11: EPS Topology**

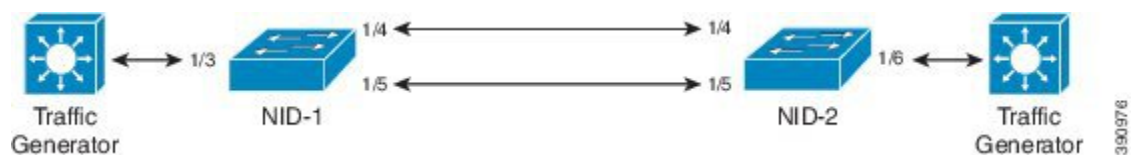

# How to Provision EPS

## Creating MEP on NID-1

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1 NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionMepPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionMepPortType	Enters the ProvisionMepPortType mode.
<b>Step 4</b>	<b>createMep {createMepConfig {mepinstance   mode {mep   mip}   direction {up   down}   domain {port   evc   vlan}   flowId   vid   level level_number   residencePort port_number   mepld id_number   megdomain {maName ma_name   megIdFormat {ituMeg   ituCcMeg   ieee}}}</b>  <b>Example:</b> Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mepInstance 20 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mepId 12 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig direction DOWN Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig domain PORT Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig residencePort 4 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mode MEP Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig level 0 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig megDomain maName nid-nid Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig megDomain megIdFormat ituMeg Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig vid 1112	Creates MEP configuration. <ul style="list-style-type: none"> <li>• <b>mepinstance</b>—Specifies the MEP instance number.</li> <li>• <b>mode</b>—Specifies the mode of the MEP instance.</li> <li>• <b>mep</b>—Specifies the maintenance entity end point.</li> <li>• <b>mip</b>—Specifies the maintenance entity intermediate point.</li> <li>• <b>direction</b>—Selects the direction of the MEP.</li> <li>• <b>up</b>—Specifies an Up MEP - monitoring egress OAM and traffic on residence port.</li> <li>• <b>down</b>—Specifies a Down MEP - monitoring ingress OAM and traffic on residence port.</li> <li>• <b>domain</b>—Selects the domain of the MEP.</li> <li>• <b>port</b>—Specifies a MEP in the Port Domain. Flow Instance is a Port.</li> <li>• <b>evc</b>—Specifies a MEP in the EVC Domain. Flow Instance is a EVC. The EVC must be created.</li> <li>• <b>vlan</b>—Specifies a MEP in the VLAN Domain. Flow Instance is a VLAN. The VLAN must be created.</li> <li>• <b>flowId</b>—Specifies the flow related to the MEP.</li> </ul>



	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>vid</b>—In case the MEP is a port Up-MEP or a EVC customer MIP the VID must be given.</li> <li>• <b>level</b>—Specifies the MEG level of the MEP.</li> <li>• <i>level_number</i>—MEG level number.</li> <li>• <b>residencePort</b>—Specifies the port monitored by MEP.</li> <li>• <i>port_number</i>—Residence port number.</li> <li>• <b>mepId</b>—Specifies MEP ID.</li> <li>• <i>id_number</i>—MEP ID number.</li> <li>• <b>megdomain</b>—Specifies the maintenance domain configuration.</li> <li>• <b>maName</b>—Specifies the ITU/IEEE MEG-ID (short MA name).</li> <li>• <i>ma_name</i>—Short MA name.</li> <li>• <b>megIdFormat</b>—Selects the MEG ID format.</li> <li>• <b>ituMeg</b>—Specifies the MEG-ID using ITU format (ICC - UMC).</li> <li>• <b>ituCcMeg</b>—Specifies the MEG-ID using ITU Country Code format (CC - ICC - UMC).</li> <li>• <b>ieee</b>—Specifies the MEG-ID (Short MA Name) using IEEE Character String format.</li> </ul>
<b>Step 5</b>	<b>addPeerMepId {commit   flush   peerMepConfig {macAddress   mepInstance   peerMepId}}</b>  <b>Example:</b> <pre>Switch(config-controller-ProvisionMepPortType)# addPeerMepId peerMepConfig mepInstance 20 Switch(config-controller-ProvisionMepPortType)# addPeerMepId peerMepConfig peerMepId 11</pre>	Adds peer MEP request. <ul style="list-style-type: none"> <li>• <b>commit</b>—Commits addPeerMepId.</li> <li>• <b>flush</b>—Flushes all addPeerMepId commands from queue.</li> <li>• <b>peerMepConfig</b>—Adds peer mep request.</li> <li>• <b>macAddress</b>—Specifies the peer MAC. This is overwritten by any learned MAC - through CCM reception.</li> <li>• <b>mepInstance</b>—Specifies the mep instance number.</li> <li>• <b>peerMepId</b>—Specifies the peer MEP-ID.</li> </ul>
<b>Step 6</b>	<b>addCcAps {commit   flush   mepFunctionalConfig {aps {enable   disable}   cc {enable   disable}   mepInstance mep_instance_number}   review}</b>  <b>Example:</b> <pre>Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig mepInstance 20</pre>	Adds CC/APS configuration request. <ul style="list-style-type: none"> <li>• <b>commit</b>—Commits addCcAps.</li> <li>• <b>flush</b>—Flushes all addCcAps commands from queue.</li> <li>• <b>mepFunctionalConfig</b>—Adds CC/APS configuration request.</li> </ul>

	Command or Action	Purpose
	<pre>Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig cc enable priority 7 Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig cc enable frameRate frls Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable mode uni Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable priority 7 Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable switchingProtocol laps</pre>	<ul style="list-style-type: none"> <li>• <b>aps</b>—Specifies APS protocol.</li> <li>• <b>enable</b>—Enables APS.</li> <li>• <b>disbale</b>—Disables APS.</li> <li>• <b>cc</b>—Specifies continuity check.</li> <li>• <b>enable</b>—Enables CC.</li> <li>• <b>disbale</b>—Disables CC.</li> <li>• <b>mepInstance</b>—Specifies the mep instance number.</li> <li>• <i>mep_instance_number</i>—MEP instance number.</li> </ul>
<b>Step 7</b>	<p><b>createMep createMepConfig {mepinstance   mode {mep   mip}   direction {up   down}   domain {port   evc   vlan}   flowId   vid   level level_number   residencePort port_number   mepld id_number   megdomain {maName ma_name   megIdFormat {ituMeg   ituCcMeg   ieec}}}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mepInstance 21 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mepId 14 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig direction DOWN Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig domain PORT Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig residencePort 5 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mode MEP Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig level 0 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig megDomain maName nid-nid Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig megDomain megIdFormat ituMeg Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig vid 1112</pre>	<p>Creates MEP configuration.</p> <ul style="list-style-type: none"> <li>• <b>mepinstance</b>—Specifies the MEP instance number.</li> <li>• <b>mode</b>—Specifies the mode of the MEP instance.</li> <li>• <b>mep</b>—Specifies the maintenance entity end point.</li> <li>• <b>mip</b>—Specifies the maintenance entity intermediate point.</li> <li>• <b>direction</b>—Selects the direction of the MEP.</li> <li>• <b>up</b>—Specifies an Up MEP - monitoring egress OAM and traffic on residence port.</li> <li>• <b>down</b>—Specifies a Down MEP - monitoring ingress OAM and traffic on residence port.</li> <li>• <b>domain</b>—Selects the domain of the MEP.</li> <li>• <b>port</b>—Specifies a MEP in the Port Domain. Flow Instance is a Port.</li> <li>• <b>evc</b>—Specifies a MEP in the EVC Domain. Flow Instance is a EVC. The EVC must be created.</li> <li>• <b>vlan</b>—Specifies a MEP in the VLAN Domain. Flow Instance is a VLAN. The VLAN must be created.</li> <li>• <b>flowId</b>—Specifies the flow related to the MEP.</li> <li>• <b>vid</b>—In case the MEP is a port Up-MEP or a EVC customer MIP the VID must be given.</li> <li>• <b>level</b>—Specifies the MEG level of the MEP.</li> <li>• <i>level_number</i>—MEG level number.</li> <li>• <b>residencePort</b>—Specifies the port monitored by MEP.</li> <li>• <i>port_number</i>—Residence port number.</li> <li>• <b>mepld</b>—Specifies MEP ID.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <i>id_number</i>—MEP ID number.</li> <li>• <b>megdomain</b>—Specifies the maintenance domain configuration.</li> <li>• <b>maName</b>—Specifies the ITU/IEEE MEG-ID(short MA name)</li> <li>• <i>ma_name</i>—Short MA name.</li> <li>• <b>megIdFormat</b>—Selects the MEG ID format.</li> <li>• <b>ituMeg</b>—Specifies the MEG-ID using ITU format (ICC - UMC).</li> <li>• <b>ituCcMeg</b>—Specifies the MEG-ID using ITU Country Code format (CC - ICC - UMC).</li> <li>• <b>ieee</b>—Specifies the MEG-ID (Short MA Name) using IEEE Character String format.</li> </ul>
<b>Step 8</b>	<p><b>addPeerMepId {commit   flush   peerMepConfig {macAddress   mepInstance   peerMepId}}</b></p> <p><b>Example:</b>  Switch(config-controller-ProvisionMepPortType)#  addPeerMepId peerMepConfig mepInstance 21  Switch(config-controller-ProvisionMepPortType)#  addPeerMepId peerMepConfig peerMepId 13</p>	<p>Adds peer MEP request.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Commits addPeerMepId.</li> <li>• <b>flush</b>—Flushes all addPeerMepId commands from queue.</li> <li>• <b>peerMepConfig</b>—Adds peer mep request.</li> <li>• <b>macAddress</b>—Specifies the peer MAC. This is overwritten by any learned MAC - through CCM reception.</li> <li>• <b>mepInstance</b>—Specifies the mep instance number.</li> <li>• <b>peerMepId</b>—Specifies the peer MEP-ID.</li> </ul>
<b>Step 9</b>	<p><b>addCcAps {commit   flush   mepFunctionalConfig {aps {enable   disable}   cc {enable   disable}   mepInstance mep_instance_number}   review}</b></p> <p><b>Example:</b>  Switch(config-controller-ProvisionMepPortType)#  addCcAps mepFunctionalConfig mepInstance 21  Switch(config-controller-ProvisionMepPortType)#  addCcAps mepFunctionalConfig cc enable priority 7  Switch(config-controller-ProvisionMepPortType)#  addCcAps mepFunctionalConfig cc enable frameRate frls  Switch(config-controller-ProvisionMepPortType)#  addCcAps mepFunctionalConfig aps enable mode uni  Switch(config-controller-ProvisionMepPortType)#  addCcAps mepFunctionalConfig aps enable priority 7  Switch(config-controller-ProvisionMepPortType)#  addCcAps mepFunctionalConfig aps enable switchingProtocol laps</p>	<p>Adds CC/APS configuration request.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Commits addCcAps.</li> <li>• <b>flush</b>—Flushes all addCcAps commands from queue.</li> <li>• <b>mepFunctionalConfig</b>—Adds CC/APS configuration request.</li> <li>• <b>aps</b>—Specifies APS protocol.</li> <li>• <b>enable</b>—Enables APS.</li> <li>• <b>disbale</b>—Disables APS.</li> <li>• <b>cc</b>—Specifies continuity check.</li> <li>• <b>enable</b>—Enables CC.</li> <li>• <b>disbale</b>—Disables CC.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>mepInstance</b>—Specifies the mep instance number.</li> <li>• <i>mep_instance_number</i>—MEP instance number.</li> </ul>
<b>Step 10</b>	<b>addCcAps review</b>  <b>Example:</b> Switch(config-controller-ProvisionMepPortType) # addCcAps review	Displays the configuration.
<b>Step 11</b>	<b>addCcAps commit</b>  <b>Example:</b> Switch(config-controller-ProvisionMepPortType) # addCcAps commit	Sends the configuration to NID.
<b>Step 12</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionMepPortType) # exit	Exits the ProvisionMepPortType mode.

### Configuration Example

The example shows how to create MEP on NID-1:

```
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig mepInstance 20
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig mepId 12
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig direction DOWN
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig domain PORT
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig residencePort 4
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig mode MEP
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig level 0
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig megDomain maName
nid-nid
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig megDomain
megIdFormat ituMeg
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig vid 1112

Switch(config-controller-ProvisionMepPortType) # addPeerMepId peerMepConfig mepInstance 20
Switch(config-controller-ProvisionMepPortType) # addPeerMepId peerMepConfig peerMepId 11
Switch(config-controller-ProvisionMepPortType) # addPeerMepId commit

Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig mepInstance
20
Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig cc enable
priority 7
Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig cc enable
frameRate frls
Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig aps enable
mode uni
Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig aps enable
priority 7
Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig aps enable
switchingProtocol laps

Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig mepInstance 21
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig mepId 14
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig direction DOWN
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig domain PORT
```

```

Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig residencePort 5
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mode MEP
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig level 0
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig megDomain maName
nid-nid
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig megDomain
megIdFormat ituMeg
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig vid 1112

Switch(config-controller-ProvisionMepPortType)# addPeerMepId peerMepConfig mepInstance 21
Switch(config-controller-ProvisionMepPortType)# addPeerMepId peerMepConfig peerMepId 13

Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig mepInstance
21
Switchconfig-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig cc enable
priority 7
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig cc enable
frameRate frls
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable
mode uni
Switchconfig-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable
priority 7
Switchconfig-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable
switchingProtocol laps

Switch(config-controller-ProvisionMepPortType)# addCcAps review
Switch(config-controller-ProvisionMepPortType)# addCcAps commit
Switch(config-controller-ProvisionMepPortType)# exit

```

## Creating MEP on NID-2

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1 NID_ID</b>  <b>Example:</b> Switch(config)# contoller nid 1/2	Enters the configuration mode.
<b>Step 3</b>	<b>ProvisionMepPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionMepPortType	Enters the ProvisionMepPortType mode.
<b>Step 4</b>	<b>createMep createMepConfig {mepinstance   mode {mep   mip}   direction {up   down}   domain {port   evc   vlan}   flowId   vid   level level_number   residencePort port_number   mepld id_number   megdomain {maName ma_name   megIdFormat {ituMeg   ituCcMeg   ieee}}}</b>  <b>Example:</b> Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mepInstance 20 Switch(config-controller-ProvisionMepPortType)#	Creates MEP configuration. <ul style="list-style-type: none"> <li>• <b>mepinstance</b>—Specifies the MEP instance number.</li> <li>• <b>mode</b>—Specifies the mode of the MEP instance.</li> <li>• <b>mep</b>—Specifies the maintenance entity end point.</li> <li>• <b>mip</b>—Specifies the maintenance entity intermediate point.</li> <li>• <b>direction</b>—Selects the direction of the MEP.</li> </ul>

	Command or Action	Purpose
	<pre> createMep createMepConfig mepId 11 Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig direction DOWN Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig domain PORT Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig residencePort 4 Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig mode MEP Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig level 0 Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig megDomain maName nid-nid Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig megDomain megIdFormat ituMeg Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig vid 1112 </pre>	<ul style="list-style-type: none"> <li>• <b>up</b>—Specifies an Up MEP - monitoring egress OAM and traffic on residence port.</li> <li>• <b>down</b>—Specifies a Down MEP - monitoring ingress OAM and traffic on residence port.</li> <li>• <b>domain</b>—Selects the domain of the MEP.</li> <li>• <b>port</b>—Specifies a MEP in the Port Domain. Flow Instance is a Port.</li> <li>• <b>evc</b>—Specifies a MEP in the EVC Domain. Flow Instance is a EVC. The EVC must be created.</li> <li>• <b>vlan</b>—Specifies a MEP in the VLAN Domain. Flow Instance is a VLAN. The VLAN must be created.</li> <li>• <b>flowId</b>—Specifies the flow related to the MEP.</li> <li>• <b>vid</b>—In case the MEP is a port Up-MEP or a EVC customer MIP, the VID must be given.</li> <li>• <b>level</b>—Specifies the MEG level of the MEP.</li> <li>• <i>level_number</i>—MEG level number.</li> <li>• <b>residencePort</b>—Specifies the port monitored by MEP.</li> <li>• <i>port_number</i>—Residence port number.</li> <li>• <b>mepId</b>—Specifies MEP ID.</li> <li>• <i>id_number</i>—MEP ID number.</li> <li>• <b>megdomain</b>—Specifies the maintenance domain configuration.</li> <li>• <b>maName</b>—Specifies the ITU/IEEE MEG-ID (short MA name).</li> <li>• <i>ma_name</i>—Short MA name.</li> <li>• <b>mepIdFormat</b>—Selects the MEG ID format.</li> <li>• <b>ituMeg</b>—Specifies the MEG-ID using ITU format (ICC - UMC).</li> <li>• <b>ituCcMeg</b>—Specifies the MEG-ID using ITU Country Code format (CC - ICC - UMC).</li> <li>• <b>ieec</b>—Specifies the MEG-ID (Short MA Name) using IEEE Character String format.</li> </ul>
<b>Step 5</b>	<pre> addPeerMepId {commit   flush   peerMepConfig {macAddress   mepInstance   peerMepId}} </pre>	<p>Adds peer MEP request.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Commits addPeerMepId.</li> </ul>

	Command or Action	Purpose
	<p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType)# addPeerMepId peerMepConfig mepInstance 20 Switch(config-controller-ProvisionMepPortType)# addPeerMepId peerMepConfig peerMepId 12</pre>	<ul style="list-style-type: none"> <li>• <b>flush</b>—Flushes all addPeerMepId commands from queue.</li> <li>• <b>peerMepConfig</b>—Adds peer mep request.</li> <li>• <b>macAddress</b>—Specifies the peer MAC. This is overwritten by any learned MAC - through CCM reception.</li> <li>• <b>mepInstance</b>—Specifies the mep instance number.</li> <li>• <b>peerMepId</b>—Specifies the peer MEP-ID.</li> </ul>
<b>Step 6</b>	<p><b>addCcAps {commit   flush   mepFunctionalConfig {aps {enable   disable}   cc {enable   disable}   mepInstance mep_instance_number}   review}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig mepInstance 20 Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig cc enable priority 7 Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig cc enable frameRate frls Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable mode uni Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable priority 7 Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable switchingProtocol laps</pre>	<p>Adds CC/APS configuration request.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Commits addCcAps.</li> <li>• <b>flush</b>—Flushes all addCcAps commands from queue.</li> <li>• <b>mepFunctionalConfig</b>—Adds CC/APS configuration request.</li> <li>• <b>aps</b>—Specifies APS protocol.</li> <li>• <b>enable</b>—Enables APS.</li> <li>• <b>disbale</b>—Disables APS.</li> <li>• <b>cc</b>—Specifies continuity check.</li> <li>• <b>enable</b>—Enables CC.</li> <li>• <b>disbale</b>—Disables CC.</li> <li>• <b>mepInstance</b>—Specifies the mep instance number.</li> <li>• <b>mep_instance_number</b>—MEP instance number.</li> </ul>
<b>Step 7</b>	<p><b>createMep createMepConfig {mepinstance   mode {mep   mip}   direction {up   down}   domain {port   evc   vlan}   flowId   vid   level level_number   residencePort port_number   mepld id_number   megdomain {maName ma_name   mepldFormat {ituMeg   ituCcMeg   ieee}}}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mepInstance 21 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mepId 13 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig direction DOWN Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig domain PORT Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig residencePort 5 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mode MEP Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig level 0 Switch(config-controller-ProvisionMepPortType)#</pre>	<p>Creates MEP configuration.</p> <ul style="list-style-type: none"> <li>• <b>mepinstance</b>—Specifies the MEP instance number.</li> <li>• <b>mode</b>—Specifies the mode of the MEP instance.</li> <li>• <b>mep</b>—Specifies the maintenance entity end point.</li> <li>• <b>mip</b>—Specifies the maintenance entity intermediate point.</li> <li>• <b>direction</b>—Selects the direction of the MEP.</li> <li>• <b>up</b>—Specifies an Up MEP - monitoring egress OAM and traffic on residence port.</li> <li>• <b>down</b>—Specifies a Down MEP - monitoring ingress OAM and traffic on residence port.</li> <li>• <b>domain</b>—Selects the domain of the MEP.</li> <li>• <b>port</b>—Specifies a MEP in the Port Domain. Flow Instance is a Port.</li> </ul>

	Command or Action	Purpose
	<pre>createMep createMepConfig megDomain maName nid-nid Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig megDomain megIdFormat ituMeg Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig vid 1112</pre>	<ul style="list-style-type: none"> <li>• <b>evc</b>—Specifies a MEP in the EVC Domain. Flow Instance is a EVC. The EVC must be created.</li> <li>• <b>vlan</b>—Specifies a MEP in the VLAN Domain. Flow Instance is a VLAN. The VLAN must be created.</li> <li>• <b>flowId</b>—Specifies the flow related to the MEP.</li> <li>• <b>vid</b>—In case the MEP is a port Up-MEP or a EVC customer MIP the VID must be given.</li> <li>• <b>level</b>—Specifies the MEG level of the MEP.</li> <li>• <i>level_number</i>—MEG level number.</li> <li>• <b>residencePort</b>—Specifies the port monitored by MEP.</li> <li>• <i>port_number</i>—Residence port number.</li> <li>• <b>mepId</b>—Specifies MEP ID.</li> <li>• <i>id_number</i>—MEP ID number.</li> <li>• <b>megdomain</b>—Specifies the maintenance domain configuration.</li> <li>• <b>maName</b>—Specifies the ITU/IEEE MEG-ID(short MA name)</li> <li>• <i>ma_name</i>—Short MA name.</li> <li>• <b>megIdFormat</b>—Selects the MEG ID format.</li> <li>• <b>ituMeg</b>—Specifies the MEG-ID using ITU format (ICC - UMC).</li> <li>• <b>ituCcMeg</b>—Specifies the MEG-ID using ITU Country Code format (CC - ICC - UMC).</li> <li>• <b>ieee</b>—Specifies the MEG-ID (Short MA Name) using IEEE Character String format.</li> </ul>
Step 8	<p><b>addPeerMepId {commit   flush   peerMepConfig {macAddress   mepInstance   peerMepId}}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType) # addPeerMepId peerMepConfig mepInstance 21 Switch(config-controller-ProvisionMepPortType) # addPeerMepId peerMepConfig peerMepId 14</pre>	<p>Adds peer MEP request.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Commits addPeerMepId.</li> <li>• <b>flush</b>—Flushes all addPeerMepId commands from queue.</li> <li>• <b>peerMepConfig</b>—Adds peer mep request.</li> <li>• <b>macAddress</b>—Specifies the peer MAC. This is overwritten by any learned MAC - through CCM reception.</li> <li>• <b>mepInstance</b>—Specifies the mep instance number.</li> <li>• <b>peerMepId</b>—Specifies the peer MEP-ID.</li> </ul>



	Command or Action	Purpose
<b>Step 9</b>	<p><b>addCcAps</b> {commit   flush   mepFunctionalConfig {aps {enable   disable}   cc {enable   disable}   mepInstance mep_instance_number}   review}</p> <p><b>Example:</b>  <pre>Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig mepInstance 21 Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig cc enable priority 7 Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig cc enable frameRate fr1s Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable mode uni Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable priority 7 Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable switchingProtocol laps</pre></p>	<p>Adds CC/APS configuration request.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Commits addCcAps.</li> <li>• <b>flush</b>—Flushes all addCcAps commands from queue.</li> <li>• <b>mepFunctionalConfig</b>—Adds CC/APS configuration request.</li> <li>• <b>aps</b>—Specifies APS protocol.</li> <li>• <b>enable</b>—Enables APS.</li> <li>• <b>disbale</b>—Disables APS.</li> <li>• <b>cc</b>—Specifies continuity check.</li> <li>• <b>enable</b>—Enables CC.</li> <li>• <b>disbale</b>—Disables CC.</li> <li>• <b>mepInstance</b>—Specifies the mep instance number.</li> <li>• <b>mep_instance_number</b>—MEP instance number.</li> </ul>
<b>Step 10</b>	<p><b>addCcAps review</b></p> <p><b>Example:</b>  <pre>Switch(config-controller-ProvisionMepPortType)# addCcAps review</pre></p>	<p>Displays the configuration.</p>
<b>Step 11</b>	<p><b>addCcAps commit</b></p> <p><b>Example:</b>  <pre>Switch(config-controller-ProvisionMepPortType)# addCcAps commit</pre></p>	<p>Sends the configuration to NID.</p>
<b>Step 12</b>	<p><b>exit</b></p> <p><b>Example:</b>  <pre>Switch(config-controller-ProvisionMepPortType)# exit</pre></p>	<p>Exits the ProvisionMepPortType mode.</p>

### Configuration Example

The example shows how to create MEP on NID2:

```
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mepInstance 20
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mepId 11
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig direction DOWN
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig domain PORT
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig residencePort 4
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mode MEP
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig level 0
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig megDomain maName
nid-nid
```

```

Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig megDomain
megIdFormat ituMeg
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig vid 1112

Switch(config-controller-ProvisionMepPortType)# addPeerMepId peerMepConfig mepInstance 20
Switch(config-controller-ProvisionMepPortType)# addPeerMepId peerMepConfig peerMepId 12
Switch(config-controller-ProvisionMepPortType)# addPeerMepId commit

Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig mepInstance
20
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig cc enable
priority 7
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig cc enable
frameRate frls
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable
mode uni
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable
priority 7
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable
switchingProtocol laps

Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mepInstance 21
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mepId 13
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig direction DOWN
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig domain PORT
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig residencePort 5
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mode MEP
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig level 0
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig megDomain maName
nid-nid
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig megDomain
megIdFormat ituMeg
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig vid 1112

Switch(config-controller-ProvisionMepPortType)# addPeerMepId peerMepConfig mepInstance 21
Switch(config-controller-ProvisionMepPortType)# addPeerMepId peerMepConfig peerMepId 14

Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig mepInstance
21
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig cc enable
priority 7
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig cc enable
frameRate frls
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable
mode uni
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable
priority 7
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable
switchingProtocol laps

Switch(config-controller-ProvisionMepPortType)# addCcAps review
Switch(config-controller-ProvisionMepPortType)# addCcAps commit
Switch(config-controller-ProvisionMepPortType)# exit

```

## Configuring Bidirectional EPS on NID-2

### Before You Begin

- Architecture a1plus1 bidirectional
- Domain port

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1 NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
Step 3	<b>EpsPortType</b>  <b>Example:</b> Switch(config-controller)# EpsPortType	Enters the EpsPortType mode.
Step 4	<b>setEpsInstConfig epsConfig {epsInst epsInst_number   domain {port   evc}   architecture {a1plus1   a1for1}   workflow {inst inst_number   portNo port_number}   protectFlow {inst inst_number   portNo port_number}   mepWork mepWork_number   mepProtect mepProtect_number   mepAps mepAPS_number}</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# setEpsInstance epsConfig epsInst 30 Switch(config-controller-EpsPortType)# setEpsInstance epsConfig architecture a1plus1 Switch(config-controller-EpsPortType)# setEpsInstance epsConfig domain port Switch(config-controller-EpsPortType)# setEpsInstance epsConfig mepAps 21 Switch(config-controller-EpsPortType)# setEpsInstance epsConfig mepProtect 21 Switch(config-controller-EpsPortType)# setEpsInstance epsConfig mepWork 20 Switch(config-controller-EpsPortType)# setEpsInstance epsConfig protectFlow portNo 5 Switch(config-controller-EpsPortType)# setEpsInstance epsConfig workFlow portNo 4	Sets EPS configuration. <ul style="list-style-type: none"> <li>• <b>epsConfig</b>—Specifies the EPS configuration.</li> <li>• <b>epsInst</b>— Specifies the EPS instance.</li> <li>• <b>epsInst_number</b>—EPS instance number.</li> <li>• <b>domain</b>—Specifies the domain of the EPS.</li> <li>• <b>port</b>—Specifies that this EPS is protecting in the port domain.</li> <li>• <b>evc</b>—Specifies that this EPS is protecting in the EVC domain.</li> <li>• <b>architecture</b>—Specifies the EPS architecture.</li> <li>• <b>a1plus1</b>—Specifies that the architecture is 1 plus 1.</li> <li>• <b>a1for1</b>—Specifies that the architecture is 1 for 1.</li> <li>• <b>workflow</b>—Specifies the working flow instance for the related EPS.</li> <li>• <b>inst</b>—Specifies the working flow instance number when not in the port domain.</li> <li>• <b>inst_number</b>—Working flow instance number.</li> <li>• <b>portNo</b>—Specifies port ID.</li> <li>• <b>port_number</b>—Port ID number.</li> <li>• <b>protectFlow</b>—Specifies the protect flow instance for the related EPS.</li> <li>• <b>inst</b>—Specifies the protect flow instance number when not in the port domain.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <i>inst_number</i>—Protect flow instance number.</li> <li>• <b>portNo</b>—Specifies port ID.</li> <li>• <i>port_number</i>—Port ID number.</li> <li>• <b>mepWork</b>—Specifies working MEP instance.</li> <li>• <i>mepWork_number</i>—Working MEP number.</li> <li>• <b>mepProtect</b>—Specifies protect MEP instance.</li> <li>• <i>mepProtect_number</i>—Protect MEP number.</li> <li>• <b>mepAps</b>—Specifies APS MEP instance.</li> <li>• <i>mepAPS_number</i>—APS MEP number.</li> </ul>
<b>Step 5</b>	<p><b>setEpsInstProperties epsInstconfig {epsInst <i>eps_instance_number</i>   protectionType {uni   bi}   aps {enable   disable}   revertive {enable   disable}   wtrTime <i>wtime</i>[m   s] holdoff}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-EpsPortType) # setEpsInstProperties epsInstConfig epsInst 30 Switch(config-controller-EpsPortType) # setEpsInstProperties epsInstConfig holdoff 1 Switch(config-controller-EpsPortType) # setEpsInstProperties epsInstConfig protectionType bi Switch(config-controller-EpsPortType) # setEpsInstProperties epsInstConfig revertive enable Switch(config-controller-EpsPortType) # setEpsInstProperties epsInstConfig wtrTime w10s</pre>	<p>Adds CC/APS configuration request.</p> <ul style="list-style-type: none"> <li>• <b>epsInst</b>—Specifies the EPS instance.</li> <li>• <i>ep_instance_number</i>—EPS instance number.</li> <li>• <b>protectionType</b>—Specifies the protection type in case of 1plus1.</li> <li>• <b>uni</b>—Specifies unidirectional.</li> <li>• <b>bi</b>— Specifies bidirectional.</li> <li>• <b>aps</b>—Specifies EPS 1+1 unidirectional with APS protection type.</li> <li>• <b>enable</b>—Enables APS protection.</li> <li>• <b>disable</b>—Disables APS protection.</li> <li>• <b>revertive</b>—Specifies revertive EPS.</li> <li>• <b>enable</b>—Enables revertive EPS.</li> <li>• <b>disable</b>— Disables revertive EPS.</li> <li>• <b>wtrTime</b>— Specifies the WTR time.</li> <li>• <i>time</i>—WTR time in minutes or seconds.</li> <li>• <b>m</b>— Time in minutes. Valid values are from 5 to 12.</li> <li>• <b>s</b>— Time in seconds. Valid values are 10 and 30.</li> <li>• <b>holdoff</b>— Specifies the hold off timer.</li> </ul>

	Command or Action	Purpose
Step 6	<b>setEpsInstProperties review</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# setEpsInstProperties review	Displays the configuration.
Step 7	<b>setEpsInstProperties commit</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# setEpsInstProperties commit	Sends the configuration to NID.
Step 8	<b>exit</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to configure bidirectional EPS on NID-2:

```
Switch(config-controller-EpsPortType)# setEpsInstance epsConfig epsInst 30
Switch(config-controller-EpsPortType)# setEpsInstance epsConfig architecture alplus1
Switch(config-controller-EpsPortType)# setEpsInstance epsConfig domain port
Switch(config-controller-EpsPortType)# setEpsInstance epsConfig mepAps 21
Switch(config-controller-EpsPortType)# setEpsInstance epsConfig mepProtect 21
Switch(config-controller-EpsPortType)# setEpsInstance epsConfig mepWork 20
Switch(config-controller-EpsPortType)# setEpsInstance epsConfig protectFlow portNo 5
Switch(config-controller-EpsPortType)# setEpsInstance epsConfig workFlow portNo 4

Switch(config-controller-EpsPortType)# setEpsInstProperties epsInstConfig epsInst 30
Switch(config-controller-EpsPortType)# setEpsInstProperties epsInstConfig holdoff 1
Switch(config-controller-EpsPortType)# setEpsInstProperties epsInstConfig protectionType
bi
Switch(config-controller-EpsPortType)# setEpsInstProperties epsInstConfig revertive enable
Switch(config-controller-EpsPortType)# setEpsInstProperties epsInstConfig wtrTime w10s

Switch(config-controller-EpsPortType)# setEpsInstProperties review
Switch(config-controller-EpsPortType)# setEpsInstProperties commit
Switch(config-controller-EpsPortType)# exit
```

## Configuring Bidirectional EPS on NID-1

### Before You Begin

- Architecture alplus1 bidirectional
- Domain port

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>EpsPortType</b>  <b>Example:</b> Switch(config-controller)# EpsPortType	Enters the EpsPortType mode.
Step 4	<b>setEpsInstConfig epsConfig {epsInst epsInst_number   domain {port   evc}   architecture {a1plus1   a1for1}   workflow {inst inst_number   portNo port_number}   protectFlow {inst inst_number   portNo port_number}   mepWork mepWork_number   mepProtect mepProtect_number   mepAps mepAPS_number}</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# setEpsInstance epsConfig epsInst 30 Switch(config-controller-EpsPortType)# setEpsInstance epsConfig architecture a1plus1 Switch(config-controller-EpsPortType)# setEpsInstance epsConfig domain port Switch(config-controller-EpsPortType)# setEpsInstance epsConfig mepAps 21 Switch(config-controller-EpsPortType)# setEpsInstance epsConfig mepProtect 21 Switch(config-controller-EpsPortType)# setEpsInstance epsConfig mepWork 20 Switch(config-controller-EpsPortType)# setEpsInstance epsConfig protectFlow portNo 5 Switch(config-controller-EpsPortType)# setEpsInstance epsConfig workFlow portNo 4	Sets EPS configuration. <ul style="list-style-type: none"> <li>• <b>epsConfig</b>—Specifies the EPS configuration.</li> <li>• <b>epsInst</b>— Specifies the EPS instance.</li> <li>• <b>epsInst_number</b>—EPS instance number.</li> <li>• <b>domain</b>—Specifies the domain of the EPS.</li> <li>• <b>port</b>—Specifies that this EPS is protecting in the port domain.</li> <li>• <b>evc</b>—Specifies that this EPS is protecting in the EVC domain.</li> <li>• <b>architecture</b>—Specifies the EPS architecture.</li> <li>• <b>a1plus1</b>—Specifies that the architecture is 1 plus 1.</li> <li>• <b>a1for1</b>—Specifies that the architecture is 1 for 1.</li> <li>• <b>workflow</b>—Specifies the working flow instance for the related EPS.</li> <li>• <b>inst</b>—Specifies the working flow instance number when not in the port domain.</li> <li>• <b>inst_number</b>—Working flow instance number.</li> <li>• <b>portNo</b>—Specifies port ID.</li> <li>• <b>port_number</b>—Port ID number.</li> <li>• <b>protectFlow</b>—Specifies the protect flow instance for the related EPS.</li> <li>• <b>inst</b>—Specifies the protect flow instance number when not in the port domain.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <i>inst_number</i>—Protect flow instance number.</li> <li>• <b>portNo</b>—Specifies port ID.</li> <li>• <i>port_number</i>—Port ID number.</li> <li>• <b>mepWork</b>—Specifies working MEP instance.</li> <li>• <i>mepWork_number</i>—Working MEP number.</li> <li>• <b>mepProtect</b>—Specifies protect MEP instance.</li> <li>• <i>mepProtect_number</i>—Protect MEP number.</li> <li>• <b>mepAps</b>—Specifies APS MEP instance.</li> <li>• <i>mepAPS_number</i>—APS MEP number.</li> </ul>
<b>Step 5</b>	<p><b>setEpsInstProperties epsInstconfig {epsInst <i>eps_instance_number</i>   protectionType {uni   bi}   aps {enable   disable}   revertive {enable   disable}   wtrTime <i>wtime</i>[m   s] holdoff}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-EpsPortType)# setEpsInstProperties epsInstConfig epsInst 30 Switch(config-controller-EpsPortType)# setEpsInstProperties epsInstConfig holdoff 1 Switch(config-controller-EpsPortType)# setEpsInstProperties epsInstConfig protectionType bi Switch(config-controller-EpsPortType)# setEpsInstProperties epsInstConfig revertive enable Switch(config-controller-EpsPortType)# setEpsInstProperties epsInstConfig wtrTime w10s</pre>	<p>Adds CC/APS configuration request.</p> <ul style="list-style-type: none"> <li>• <b>epsInst</b>—Specifies the EPS instance.</li> <li>• <i>ep_instance_number</i>—EPS instance number.</li> <li>• <b>protectionType</b>—Specifies the protection type in case of 1plus1.</li> <li>• <b>uni</b>—Specifies unidirectional.</li> <li>• <b>bi</b>— Specifies bidirectional.</li> <li>• <b>aps</b>—Specifies EPS 1+1 unidirectional with APS protection type.</li> <li>• <b>enable</b>—Enables APS protection.</li> <li>• <b>disable</b>—Disables APS protection.</li> <li>• <b>revertive</b>—Specifies revertive EPS.</li> <li>• <b>enable</b>—Enables revertive EPS.</li> <li>• <b>disable</b>— Disables revertive EPS.</li> <li>• <b>wtrTime</b>— Specifies the WTR time.</li> <li>• <i>time</i>—WTR time in minutes or seconds.</li> <li>• <b>m</b>— Time in minutes. Valid values are from 5 to 12.</li> <li>• <b>s</b>— Time in seconds. Valid values are 10 and 30.</li> <li>• <b>holdoff</b>— Specifies the hold off timer.</li> </ul>

	Command or Action	Purpose
<b>Step 6</b>	<b>setEpsInstProperties review</b>  <b>Example:</b> Switch(config-controller-EpsPortType) # setEpsInstProperties review	Displays the configuration.
<b>Step 7</b>	<b>setEpsInstProperties commit</b>  <b>Example:</b> Switch(config-controller-EpsPortType) # setEpsInstProperties commit	Sends the configuration to NID.
<b>Step 8</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-EpsPortType) # exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to configure bidirectional EPS on NID-1:

```
Switch(config-controller-EpsPortType) # setEpsInstance epsConfig epsInst 30
Switch(config-controller-EpsPortType) # setEpsInstance epsConfig architecture alplus1
Switch(config-controller-EpsPortType) # setEpsInstance epsConfig domain port
Switch(config-controller-EpsPortType) # setEpsInstance epsConfig mepAps 21
Switch(config-controller-EpsPortType) # setEpsInstance epsConfig mepProtect 21
Switch(config-controller-EpsPortType) # setEpsInstance epsConfig mepWork 20
Switch(config-controller-EpsPortType) # setEpsInstance epsConfig protectFlow portNo 5
Switch(config-controller-EpsPortType) # setEpsInstance epsConfig workFlow portNo 4

Switch(config-controller-EpsPortType) # setEpsInstProperties epsInstConfig epsInst 30
Switch(config-controller-EpsPortType) # setEpsInstProperties epsInstConfig holdoff 1
Switch(config-controller-EpsPortType) # setEpsInstProperties epsInstConfig protectionType
bi
Switch(config-controller-EpsPortType) # setEpsInstProperties epsInstConfig revertive enable
Switch(config-controller-EpsPortType) # setEpsInstProperties epsInstConfig wtrTime w10s

Switch(config-controller-EpsPortType) # setEpsInstProperties review
Switch(config-controller-EpsPortType) # setEpsInstProperties commit
Switch(config-controller-EpsPortType) # exit
```

## Configuring Unidirectional EPS on NID-2

### Before You Begin

- Architecture alplus1 unidirectional aps enable
- Domain port



## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1 NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
Step 3	<b>EpsPortType</b>  <b>Example:</b> Switch(config-controller)# EpsPortType	Enters the EpsPortType mode.
Step 4	<b>setEpsInstConfig epsConfig {epsInst epsInst_number   domain {port   evc}   architecture {a1plus1   a1for1}   workflow {inst inst_number   portNo port_number}   protectFlow {inst inst_number   portNo port_number}   mepWork mepWork_number   mepProtect mepProtect_number   mepAps mepAPS_number}</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# setEpsInstance epsConfig epsInst 30 Switch(config-controller-EpsPortType)# setEpsInstance epsConfig architecture a1plus1 Switch(config-controller-EpsPortType)# setEpsInstance epsConfig domain port Switch(config-controller-EpsPortType)# setEpsInstance epsConfig mepAps 21 Switch(config-controller-EpsPortType)# setEpsInstance epsConfig mepProtect 21 Switch(config-controller-EpsPortType)# setEpsInstance epsConfig mepWork 20 Switch(config-controller-EpsPortType)# setEpsInstance epsConfig protectFlow portNo 5 Switch(config-controller-EpsPortType)# setEpsInstance epsConfig workFlow portNo 4	Sets EPS configuration. <ul style="list-style-type: none"> <li>• <b>epsConfig</b>—Specifies the EPS configuration.</li> <li>• <b>epsInst</b>— Specifies the EPS instance.</li> <li>• <b>epsInst_number</b>—EPS instance number.</li> <li>• <b>domain</b>—Specifies the domain of the EPS.</li> <li>• <b>port</b>—Specifies that this EPS is protecting in the port domain.</li> <li>• <b>evc</b>—Specifies that this EPS is protecting in the EVC domain.</li> <li>• <b>architecture</b>—Specifies the EPS architecture.</li> <li>• <b>a1plus1</b>—Specifies that the architecture is 1 plus 1.</li> <li>• <b>a1for1</b>—Specifies that the architecture is 1 for 1.</li> <li>• <b>workflow</b>—Specifies the working flow instance for the related EPS.</li> <li>• <b>inst</b>—Specifies the working flow instance number when not in the port domain.</li> <li>• <b>inst_number</b>—Working flow instance number.</li> <li>• <b>portNo</b>—Specifies port ID.</li> <li>• <b>port_number</b>—Port ID number.</li> <li>• <b>protectFlow</b>—Specifies the protect flow instance for the related EPS.</li> <li>• <b>inst</b>—Specifies the protect flow instance number when not in the port domain.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <i>inst_number</i>—Protect flow instance number.</li> <li>• <b>portNo</b>—Specifies port ID.</li> <li>• <i>port_number</i>—Port ID number.</li> <li>• <b>mepWork</b>—Specifies working MEP instance.</li> <li>• <i>mepWork_number</i>—Working MEP number.</li> <li>• <b>mepProtect</b>—Specifies protect MEP instance.</li> <li>• <i>mepProtect_number</i>—Protect MEP number.</li> <li>• <b>mepAps</b>—Specifies APS MEP instance.</li> <li>• <i>mepAPS_number</i>—APS MEP number.</li> </ul>
<b>Step 5</b>	<p><b>setEpsInstProperties epsInstconfig {epsInst <i>eps_instance_number</i>   protectionType {uni   bi}   aps {enable   disable}   revertive {enable   disable}   wtrTime <i>wtime</i>[m   s] holdoff}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-EpsPortType)# setEpsInstProperties epsInstConfig epsInst 30 Switch(config-controller-EpsPortType)# setEpsInstProperties epsInstConfig aps enable Switch(config-controller-EpsPortType)# setEpsInstProperties epsInstConfig protectionType uni</pre>	<p>Adds CC/APS configuration request.</p> <ul style="list-style-type: none"> <li>• <b>epsInst</b>—Specifies the EPS instance.</li> <li>• <i>eps_instance_number</i>—EPS instance number.</li> <li>• <b>protectionType</b>—Specifies the protection type in case of 1plus1.</li> <li>• <b>uni</b>—Specifies unidirectional.</li> <li>• <b>bi</b>— Specifies bidirectional.</li> <li>• <b>aps</b>—Specifies EPS 1+1 unidirectional with APS protection type.</li> <li>• <b>enable</b>—Enables APS protection.</li> <li>• <b>disable</b>—Disables APS protection.</li> <li>• <b>revertive</b>—Specifies revertive EPS.</li> <li>• <b>enable</b>—Enables revertive EPS.</li> <li>• <b>disable</b>— Disables revertive EPS.</li> <li>• <b>wtrTime</b>— Specifies the WTR time.</li> <li>• <i>time</i>—WTR time in minutes or seconds.</li> <li>• <b>m</b>— Time in minutes. Valid values are from 5 to 12.</li> <li>• <b>s</b>— Time in seconds. Valid values are 10 and 30.</li> <li>• <b>holdoff</b>— Specifies the hold off timer.</li> </ul>

	Command or Action	Purpose
Step 6	<b>setEpsInstProperties review</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# setEpsInstProperties review	Displays the configuration.
Step 7	<b>setEpsInstProperties commit</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# setEpsInstProperties commit	Sends the configuration to NID.
Step 8	<b>exit</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to configure unidirectional EPS on NID-2:

```
Switch(config-controller-EpsPortType)# setEpsInstance epsConfig epsInst 30
Switch(config-controller-EpsPortType)# setEpsInstance epsConfig architecture alplus1
Switch(config-controller-EpsPortType)# setEpsInstance epsConfig domain port
Switch(config-controller-EpsPortType)# setEpsInstance epsConfig mepAps 21
Switch(config-controller-EpsPortType)# setEpsInstance epsConfig mepProtect 21
Switch(config-controller-EpsPortType)# setEpsInstance epsConfig mepWork 20
Switch(config-controller-EpsPortType)# setEpsInstance epsConfig protectFlow portNo 5
Switch(config-controller-EpsPortType)# setEpsInstance epsConfig workFlow portNo 4

Switch(config-controller-EpsPortType)# setEpsInstProperties epsInstConfig epsInst 30
Switch(config-controller-EpsPortType)# setEpsInstProperties epsInstConfig eps enable
Switch(config-controller-EpsPortType)# setEpsInstProperties epsInstConfig protectionType
uni

Switch(config-controller-EpsPortType)# setEpsInstProperties review
Switch(config-controller-EpsPortType)# setEpsInstProperties commit
Switch(config-controller-EpsPortType)# exit
```

## Configuring Bidirectional EPS on NID-2

### Before You Begin

- Architecture alfor1 bidirectional
- Domain port

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1 NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
Step 3	<b>EpsPortType</b>  <b>Example:</b> Switch(config-controller)# EpsPortType	Enters the EpsPortType mode.
Step 4	<b>setEpsInstConfig epsConfig {epsInst epsInst_number   domain {port   evc}   architecture {a1plus1   a1for1}   workflow {inst inst_number   portNo port_number}   protectFlow {inst inst_number   portNo port_number}   mepWork mepWork_number   mepProtect mepProtect_number   mepAps mepAPS_number}</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# setEpsInstance epsConfig epsInst 30 Switch(config-controller-EpsPortType)# setEpsInstance epsConfig architecture a1for1 Switch(config-controller-EpsPortType)# setEpsInstance epsConfig domain port Switch(config-controller-EpsPortType)# setEpsInstance epsConfig mepAps 21 Switch(config-controller-EpsPortType)# setEpsInstance epsConfig mepProtect 21 Switch(config-controller-EpsPortType)# setEpsInstance epsConfig mepWork 20 Switch(config-controller-EpsPortType)# setEpsInstance epsConfig protectFlow portNo 5 Switch(config-controller-EpsPortType)# setEpsInstance epsConfig workFlow portNo 4	Sets EPS configuration. <ul style="list-style-type: none"> <li>• <b>epsConfig</b>—Specifies the EPS configuration.</li> <li>• <b>epsInst</b>— Specifies the EPS instance.</li> <li>• <b>epsInst_number</b>—EPS instance number.</li> <li>• <b>domain</b>—Specifies the domain of the EPS.</li> <li>• <b>port</b>—Specifies that this EPS is protecting in the port domain.</li> <li>• <b>evc</b>—Specifies that this EPS is protecting in the EVC domain.</li> <li>• <b>architecture</b>—Specifies the EPS architecture.</li> <li>• <b>a1plus1</b>—Specifies that the architecture is 1 plus 1.</li> <li>• <b>a1for1</b>—Specifies that the architecture is 1 for 1.</li> <li>• <b>workflow</b>—Specifies the working flow instance for the related EPS.</li> <li>• <b>inst</b>—Specifies the working flow instance number when not in the port domain.</li> <li>• <b>inst_number</b>—Working flow instance number.</li> <li>• <b>portNo</b>—Specifies port ID.</li> <li>• <b>port_number</b>—Port ID number.</li> <li>• <b>protectFlow</b>—Specifies the protect flow instance for the related EPS.</li> <li>• <b>inst</b>—Specifies the protect flow instance number when not in the port domain.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <i>inst_number</i>—Protect flow instance number.</li> <li>• <b>portNo</b>—Specifies port ID.</li> <li>• <i>port_number</i>—Port ID number.</li> <li>• <b>mepWork</b>—Specifies working MEP instance.</li> <li>• <i>mepWork_number</i>—Working MEP number.</li> <li>• <b>mepProtect</b>—Specifies protect MEP instance.</li> <li>• <i>mepProtect_number</i>—Protect MEP number.</li> <li>• <b>mepAps</b>—Specifies APS MEP instance.</li> <li>• <i>mepAPS_number</i>—APS MEP number.</li> </ul>
<b>Step 5</b>	<p><b>setEpsInstProperties epsInstconfig {epsInst <i>eps_instance_number</i>   protectionType {uni   bi}   aps {enable   disable}   revertive {enable   disable}   wtrTime <i>wtime</i>[m   s] holdoff}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-EpsPortType)# setEpsInstProperties epsInstConfig epsInst 30 Switch(config-controller-EpsPortType)# setEpsInstProperties epsInstConfig protectionType bi Switch(config-controller-EpsPortType)# setEpsInstProperties epsInstConfig revertive enable Switch(config-controller-EpsPortType)# setEpsInstProperties epsInstConfig wtrTime w10s</pre>	<p>Adds CC/APS configuration request.</p> <ul style="list-style-type: none"> <li>• <b>epsInst</b>—Specifies the EPS instance.</li> <li>• <i>eps_instance_number</i>—EPS instance number.</li> <li>• <b>protectionType</b>—Specifies the protection type in case of 1plus1.</li> <li>• <b>uni</b>—Specifies unidirectional.</li> <li>• <b>bi</b>— Specifies bidirectional.</li> <li>• <b>aps</b>—Specifies EPS 1+1 unidirectional with APS protection type.</li> <li>• <b>enable</b>—Enables APS protection.</li> <li>• <b>disable</b>—Disables APS protection.</li> <li>• <b>revertive</b>—Specifies revertive EPS.</li> <li>• <b>enable</b>—Enables revertive EPS.</li> <li>• <b>disable</b>— Disables revertive EPS.</li> <li>• <b>wtrTime</b>— Specifies the WTR time.</li> <li>• <i>time</i>—WTR time in minutes or seconds.</li> <li>• <b>m</b>— Time in minutes. Valid values are from 5 to 12.</li> <li>• <b>s</b>— Time in seconds. Valid values are 10 and 30.</li> <li>• <b>holdoff</b>— Specifies the hold off timer.</li> </ul>

	Command or Action	Purpose
<b>Step 6</b>	<b>setEpsInstProperties review</b>  <b>Example:</b> Switch(config-controller-EpsPortType) # setEpsInstProperties review	Displays the configuration.
<b>Step 7</b>	<b>setEpsInstProperties commit</b>  <b>Example:</b> Switch(config-controller-EpsPortType) # setEpsInstProperties commit	Sends the configuration to NID.
<b>Step 8</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-EpsPortType) # exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to configure bidirectional EPS on NID-2:

```
Switch(config-controller-EpsPortType) # setEpsInstance epsConfig epsInst 30
Switch(config-controller-EpsPortType) # setEpsInstance epsConfig architecture alfor1
Switch(config-controller-EpsPortType) # setEpsInstance epsConfig domain port
Switch(config-controller-EpsPortType) # setEpsInstance epsConfig mepAps 21
Switch(config-controller-EpsPortType) # setEpsInstance epsConfig mepProtect 21
Switch(config-controller-EpsPortType) # setEpsInstance epsConfig mepWork 20
Switch(config-controller-EpsPortType) # setEpsInstance epsConfig protectFlow portNo 5
Switch(config-controller-EpsPortType) # setEpsInstance epsConfig workFlow portNo 4

Switch(config-controller-EpsPortType) # setEpsInstProperties epsInstConfig epsInst 30
Switch(config-controller-EpsPortType) # setEpsInstProperties epsInstConfig protectionType
bi
Switch(config-controller-EpsPortType) # setEpsInstProperties epsInstConfig revertive enable
Switch(config-controller-EpsPortType) # setEpsInstProperties epsInstConfig wtrTime w10s

Switch(config-controller-EpsPortType) # setEpsInstProperties review
Switch(config-controller-EpsPortType) # setEpsInstProperties commit
Switch(config-controller-EpsPortType) # exit
```

## Displaying EPS

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.

	Command or Action	Purpose
<b>Step 2</b>	<b>controller nid 1 NID_ID</b>  <b>Example:</b> Switch(config)# contoller nid 1/2	Enters the controller configuration mode.
<b>Step 3</b>	<b>EpsPortType</b>  <b>Example:</b> Switch(config-controller)# EpsPortType	Enters the EpsPortType mode.
<b>Step 4</b>	<b>getEpsInstProperties epsRequest epsInst eps_instance_number</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# getEpsInstProperties epsRequest epsInst 30	Sets EPS configuration. <ul style="list-style-type: none"> <li>• <b>epsRequest</b>—Specifies EPS get request parameter.</li> <li>• <b>epsInst</b>— Specifies the EPS instance.</li> <li>• <b>eps_instance_number</b>—EPS instance number.</li> </ul>
<b>Step 5</b>	<b>getEpsInstance epsRequest {epsInst eps_instance_number}</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# getEpsInstance epsRequest epsInst 30	Adds CC/APS configuration request. <ul style="list-style-type: none"> <li>• <b>epsRequest</b>—Specifies EPS get request parameter.</li> <li>• <b>epsInst</b>— Specifies the EPS instance.</li> <li>• <b>eps_instance_number</b>—EPS instance number.</li> </ul>
<b>Step 6</b>	<b>showEpsConfig showEpsReq epsInstList eps_instance_list_number</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# showEpsConfig showEpsReq epsInstList 30	Adds CC/APS configuration request. <ul style="list-style-type: none"> <li>• <b>showEpsReq</b>—Displays the EPS configuration.</li> <li>• <b>epsInstList</b>—Specifies the EPS instance list.</li> <li>• <b>eps_instance_list_number</b>—EPS instance list number.</li> </ul>
<b>Step 7</b>	<b>showEpsState showEpsReq epsInstList eps_instance_list_number</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# showEpsState showEpsReq epsInstList 30	Adds CC/APS configuration request. <ul style="list-style-type: none"> <li>• <b>showEpsReq</b>—Displays EPS request parameter.</li> <li>• <b>epsInstList</b>—Specifies the EPS instance list.</li> <li>• <b>eps_instance_list_number</b>—EPS instance list number. The valid value are from 1-100.</li> </ul>
<b>Step 8</b>	<b>setEpsInstProperties review</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# setEpsInstProperties review	Displays the configuration.

	Command or Action	Purpose
<b>Step 9</b>	<b>setEpsInstProperties commit</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# setEpsInstProperties commit	Sends the configuration to NID.
<b>Step 10</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to display EPS:

```
Switch(config-controller-EpsPortType)# getEpsInstProperties epsRequest epsInst 30
Switch(config-controller-EpsPortType)# getEpsInstance epsRequest epsInst 30
Switch(config-controller-EpsPortType)# showEpsConfig showEpsReq epsInstList 30
Switch(config-controller-EpsPortType)# showEpsState showEpsReq epsInstList 30
Switch(config-controller-EpsPortType)# setEpsInstProperties review
Switch(config-controller-EpsPortType)# setEpsInstProperties commit
Switch(config-controller-EpsPortType)# exit
```

## Clearing EPS Wait-To-Restore Timer

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>EpsPortType</b>  <b>Example:</b> Switch(config-controller)# EpsPortType	Enters the EpsPortType mode.
<b>Step 2</b>	<b>clearEpsWtr clearEps epsInst <i>eps_instance_number</i></b>  <b>Example:</b> Switch(config-controller-EpsPortType)# clearEpsWtr clearEps epsInst 30	Sets EPS configuration. <ul style="list-style-type: none"> <li>• <b>clearEps</b>—Specifies clear EPS WTR.</li> <li>• <b>epsInst</b>— Specifies the EPS instance.</li> <li>• <b><i>eps_instance_number</i></b>—EPS instance number.</li> </ul>
<b>Step 3</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# exit	Exits to the config-controller mode.



### Configuration Example

The example shows how to clear EPS:

```
Switch(config-controller-EpsPortType)# clearEpsWtr clearEps epsInst 30
Switch(config-controller-EpsPortType)# exit
```

## Updating EPS

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1 NID_ID</b>  <b>Example:</b> Switch(config)# contoller nid 1/2	Enters the controller configuration mode.
Step 3	<b>EpsPortType</b>  <b>Example:</b> Switch(config-controller)# EpsPortType	Enters the EpsPortType mode.
Step 4	<b>updateEpsInstance epsCommand {epsInst epsInst_number   command {lockout   forced   manualp   manualw   exercise   freeze   localLockout}}</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# updateEpsInstance epsCommand epsInst 1  <b>Example:</b> Switch(config-controller-EpsPortType)# updateEpsInstance epsCommand epsInst 1 Switch(config-controller-EpsPortType)# updateEpsInstance epsCommand command exercise Switch(config-controller-EpsPortType)# updateEpsInstance epsCommand command forced Switch(config-controller-EpsPortType)# updateEpsInstance epsCommand command freeze Switch(config-controller-EpsPortType)# updateEpsInstance epsCommand command localLockout Switch(config-controller-EpsPortType)# updateEpsInstance epsCommand command lockout Switch(config-controller-EpsPortType)# updateEpsInstance epsCommand command manualp Switch(config-controller-EpsPortType)# updateEpsInstance epsCommand command manualw	Use only one of the following commands, as required: Sets EPS configuration. <ul style="list-style-type: none"> <li>• <b>epsCommand</b>—Specifies the EPS command configuration.</li> <li>• <b>epsInst</b>— Specifies the EPS instance.</li> <li>• <b>epsInst_number</b>—EPS instance number.</li> <li>• <b>command</b>—Specifies the EPS commands.</li> <li>• <b>lockout</b>—Locks out of protection.</li> <li>• <b>forced</b>—Forces switching of normal traffic to protection.</li> <li>• <b>manualp</b>—Manually switches normal traffic to protection.</li> <li>• <b>manualw</b>—Manually switches normal traffic to working.</li> <li>• <b>exercise</b>—Specifies the exercise signal.</li> <li>• <b>freeze</b>—Specifies local freezing of EPS.</li> <li>• <b>localLockout</b>—Specifies local lockout of EPS.</li> <li>• <b>clear</b>—Clears EPS commands.</li> </ul>

	Command or Action	Purpose
<b>Step 5</b>	<b>updateEpsInstance review</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# updateEpsInstance review	Displays the configuration.
<b>Step 6</b>	<b>updateEpsInstance commit</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# updateEpsInstance commit	Sends the configuration to NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to update EPS:

```
Switch(config-controller-EpsPortType)# updateEpsInstance epsCommand epsInst 1
```

Use only one of the following commands, as required:

```
Switch(config-controller-EpsPortType)# updateEpsInstance epsCommand command exercise
Switch(config-controller-EpsPortType)# updateEpsInstance epsCommand command forced
Switch(config-controller-EpsPortType)# updateEpsInstance epsCommand command freeze
Switch(config-controller-EpsPortType)# updateEpsInstance epsCommand command localLockout
Switch(config-controller-EpsPortType)# updateEpsInstance epsCommand command lockout
Switch(config-controller-EpsPortType)# updateEpsInstance epsCommand command manualp
Switch(config-controller-EpsPortType)# updateEpsInstance epsCommand command manualw
```

```
Switch(config-controller-EpsPortType)# updateEpsInstance review
Switch(config-controller-EpsPortType)# updateEpsInstance commit
Switch(config-controller-EpsPortType)# exit
```

## Deleting EPS

### Before You Begin

- Architecture a1plus1 bidirectional
- Domain port

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1 NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
Step 3	<b>EpsPortType</b>  <b>Example:</b> Switch(config-controller)# EpsPortType	Enters the EpsPortType mode.
Step 4	<b>deleteEps deleteEpsConfig {epsInst eps_instance_number   delete {eps   command   holdoff   revertive}}</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# deleteEps deleteEpsConfig epsInst 30 Switch(config-controller-EpsPortType)# deleteEps deleteEpsConfig delete eps	Adds CC/APS configuration request. <ul style="list-style-type: none"> <li>• <b>deleteEpsConfig</b>—Deletes EPS configuration.</li> <li>• <b>epsInst</b>—Specifies the EPS instance.</li> <li>• <b>ep_instance_number</b>—EPS instance number.</li> <li>• <b>delete</b>—Deletes the configuration.</li> <li>• <b>eps</b>—Deletes EPS instance.</li> <li>• <b>command</b>—Deletes EPS commands.</li> <li>• <b>holdoff</b>—Clears hold off timer.</li> <li>• <b>revertive</b>—Disables revertive EPS.</li> </ul>
Step 5	<b>deleteEps review</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# deleteEps review	Displays the configuration.
Step 6	<b>deleteEps commit</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# deleteEps commit	Sends the configuration to NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to delete EPS:

```
Switch(config-controller-EpsPortType)# deleteEps deleteEpsConfig epsInst 30
Switch(config-controller-EpsPortType)# deleteEps deleteEpsConfig delete eps

Switch(config-controller-EpsPortType)# deleteEps review
Switch(config-controller-EpsPortType)# deleteEps commit
Switch(config-controller-EpsPortType)# exit
```

## Deleting EPS Command

### Before You Begin

- Architecture a1plus1 bidirectional
- Domain port

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1 NID_ID</b>  <b>Example:</b> Switch(config)# contoller nid 1/2	Enters the controller configuration mode.
<b>Step 3</b>	<b>EpsPortType</b>  <b>Example:</b> Switch(config-controller)# EpsPortType	Enters the EpsPortType mode.
<b>Step 4</b>	<b>deleteEps deleteEpsConfig {epsInst eps_instance_number   delete {eps   command   holdoff   revertive}}</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# deleteEps deleteEpsConfig epsInst 30 Switch(config-controller-EpsPortType)# deleteEps deleteEpsConfig delete command	Adds CC/APS configuration request. <ul style="list-style-type: none"> <li>• <b>deleteEpsConfig</b>—Deletes EPS configuration.</li> <li>• <b>epsInst</b>—Specifies the EPS instance.</li> <li>• <b>ep_instance_number</b>—EPS instance number.</li> <li>• <b>delete</b>—Deletes the configuration.</li> <li>• <b>eps</b>—Deletes EPS instance.</li> <li>• <b>command</b>—Deletes EPS commands.</li> <li>• <b>holdoff</b>—Clears hold off timer.</li> <li>• <b>revertive</b>—Disables revertive EPS.</li> </ul>

	Command or Action	Purpose
Step 5	<b>deleteEps review</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# deleteEps review	Displays the configuration.
Step 6	<b>deleteEps commit</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# deleteEps commit	Sends the configuration to NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to delete EPS command:

```
Switch(config-controller-EpsPortType)# deleteEps deleteEpsConfig epsInst 30
Switch(config-controller-EpsPortType)# deleteEps deleteEpsConfig delete command
```

```
Switch(config-controller-EpsPortType)# deleteEps review
Switch(config-controller-EpsPortType)# deleteEps commit
Switch(config-controller-EpsPortType)# exit
```

## Deleting EPS Hold Off Timer

### Before You Begin

- Architecture alplus1 bidirectional
- Domain port

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1 NID_ID</b>  <b>Example:</b> Switch(config)# contoller nid 1/2	Enters the controller configuration mode.

	Command or Action	Purpose
<b>Step 3</b>	<b>EpsPortType</b>  <b>Example:</b> Switch(config-controller)# EpsPortType	Enters the EpsPortType mode.
<b>Step 4</b>	<b>deleteEps deleteEpsConfig {epsInst <i>eps_instance_number</i>   delete {eps   command   holdoff   revertive}}</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# deleteEps deleteEpsConfig epsInst 30 Switch(config-controller-EpsPortType)# deleteEps deleteEpsConfig delete holdoff	Adds CC/APS configuration request. <ul style="list-style-type: none"> <li>• <b>deleteEpsConfig</b>—Deletes EPS configuration.</li> <li>• <b>epsInst</b>—Specifies the EPS instance.</li> <li>• <b>ep_instance_number</b>—EPS instance number.</li> <li>• <b>delete</b>—Deletes the configuration.</li> <li>• <b>eps</b>—Deletes EPS instance.</li> <li>• <b>command</b>—Deletes EPS commands.</li> <li>• <b>holdoff</b>—Clears hold off timer.</li> <li>• <b>revertive</b>—Disables revertive EPS.</li> </ul>
<b>Step 5</b>	<b>deleteEps review</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# deleteEps review	Displays the configuration.
<b>Step 6</b>	<b>deleteEps commit</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# deleteEps commit	Sends the configuration to NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to delete EPS hold off timer:

```
Switch(config-controller-EpsPortType)# deleteEps deleteEpsConfig epsInst 30
Switch(config-controller-EpsPortType)# deleteEps deleteEpsConfig delete holdoff
```

```
Switch(config-controller-EpsPortType)# deleteEps review
Switch(config-controller-EpsPortType)# deleteEps commit
Switch(config-controller-EpsPortType)# exit
```

## Deleting EPS Revertive Timer

### Before You Begin

- Architecture aplus1 bidirectional
- Domain port

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid / NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
Step 3	<b>EpsPortType</b>  <b>Example:</b> Switch(config-controller)# EpsPortType	Enters the EpsPortType mode.
Step 4	<b>deleteEps deleteEpsConfig {epsInst eps_instance_number   delete {eps   command   holdoff   revertive}}</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# deleteEps deleteEpsConfig epsInst 30 Switch(config-controller-EpsPortType)# deleteEps deleteEpsConfig delete revertive	Adds CC/APS configuration request. <ul style="list-style-type: none"> <li>• <b>deleteEpsConfig</b>—Deletes EPS configuration.</li> <li>• <b>epsInst</b>—Specifies the EPS instance.</li> <li>• <b>eps_instance_number</b>—EPS instance number.</li> <li>• <b>delete</b>—Deletes the configuration.</li> <li>• <b>eps</b>—Deletes EPS instance.</li> <li>• <b>command</b>—Deletes EPS commands.</li> <li>• <b>holdoff</b>—Clears hold off timer.</li> <li>• <b>revertive</b>—Disables revertive EPS.</li> </ul>
Step 5	<b>deleteEps review</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# deleteEps review	Displays the configuration.
Step 6	<b>deleteEps commit</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# deleteEps commit	Sends the configuration to NID.

	Command or Action	Purpose
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-EpsPortType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to delete EPS revertive timer:

```
Switch(config-controller-EpsPortType)# deleteEps deleteEpsConfig epsInst 30
Switch(config-controller-EpsPortType)# deleteEps deleteEpsConfig delete revertive
```

```
Switch(config-controller-EpsPortType)# deleteEps review
Switch(config-controller-EpsPortType)# deleteEps commit
Switch(config-controller-EpsPortType)# exit
```

## Verifying EPS

Use the following commands to verify the EPS status on the controller.

- **showEpsConfig showEpsReq epsInstList 1**

This command displays the EPS configuration status on the NID. The following is a sample output from the command:

```
Switch(config-controller-EpsPortType)# showEpsConfig showEpsReq epsInstList 1
Switch(config-controller-EpsPortType)# showEpsConfig review
```

Commands in queue:

```
showEpsConfig showEpsReq epsInstList 1
```

```
Switch(config-controller-EpsPortType)# showEpsConfig commit
```

```
Clearing Socket 5
xpinfo->value : 1Clearing Socket 5
ShowEpsConfig_Output.epsInfo.epsInstance[0].epsInst = 1
ShowEpsConfig_Output.epsInfo.epsInstance[0].config.domain.t = 1
ShowEpsConfig_Output.epsInfo.epsInstance[0].config.domain.u.port =
'Port'
ShowEpsConfig_Output.epsInfo.epsInstance[0].config.architecture.t =
1
ShowEpsConfig_Output.epsInfo.epsInstance[0].config.architecture.u.alplus1
= '1plus1'
ShowEpsConfig_Output.epsInfo.epsInstance[0].config.workFlow.t = 2
ShowEpsConfig_Output.epsInfo.epsInstance[0].config.workFlow.u.portNo
= 1
ShowEpsConfig_Output.epsInfo.epsInstance[0].config.protectFlow.t = 2
ShowEpsConfig_Output.epsInfo.epsInstance[0].config.protectFlow.u.portNo
= 1
ShowEpsConfig_Output.epsInfo.epsInstance[0].config.mepWork = 1
ShowEpsConfig_Output.epsInfo.epsInstance[0].config.mepProtect = 1
ShowEpsConfig_Output.epsInfo.epsInstance[0].config.mepAps = 1
ShowEpsConfig_Output.epsInfo.epsInstance[0].instConfig.protectionType.t
```



```

= 1
ShowEpsConfig_Output.epsInfo.epsInstance[0].instConfig.protectionType.u.uni
= 'unidirectional'
ShowEpsConfig_Output.epsInfo.epsInstance[0].instConfig.revertive.t =
2
ShowEpsConfig_Output.epsInfo.epsInstance[0].instConfig.revertive.u.disable
= 'Disable'
ShowEpsConfig_Output.epsInfo.epsInstance[0].instConfig.aps.t = 2
ShowEpsConfig_Output.epsInfo.epsInstance[0].instConfig.aps.u.disable
= 'Disable'
ShowEpsConfig_Output.epsInfo.epsInstance[0].instConfig.wtrTime.t = 1
ShowEpsConfig_Output.epsInfo.epsInstance[0].instConfig.wtrTime.u.w10m
= ''
ShowEpsConfig_Output.epsInfo.epsInstance[0].instConfig.holdoff = 100
ShowEpsConfig_Output.epsInfo.epsInstance[0].command.t = 2
ShowEpsConfig_Output.epsInfo.epsInstance[0].command.u.forced = 'forced'

ShowEpsConfig Commit Success!!!

```

- **showEpsState showEpsReq epsInstList 1**

This command displays the EPS status on the NID. The following is a sample output from the command:

```

Switch(config-controller-EpsPortType)# showEpsState showEpsReq epsInstList 1
Switch(config-controller-EpsPortType)# showEpsState review

```

Commands in queue:

```
showEpsState showEpsReq epsInstList 1
```

```
Switch(config-controller-EpsPortType)# showEpsState commit
```

```

Clearing Socket 5 Clearing Socket 5
ShowEpsState_Output.epsStateInfo.epsInst[0].epsInst = 1
ShowEpsState_Output.epsStateInfo.epsInst[0].protectionState = 'Disable'
ShowEpsState_Output.epsStateInfo.epsInst[0].wFlow = 'Ok'
ShowEpsState_Output.epsStateInfo.epsInst[0].pFlow = 'Ok'
ShowEpsState_Output.epsStateInfo.epsInst[0].transmitAps = 'LO'
ShowEpsState_Output.epsStateInfo.epsInst[0].receiveAps = 'LO'
ShowEpsState_Output.epsStateInfo.epsInst[0].architectureMismatch =
true
ShowEpsState_Output.epsStateInfo.epsInst[0].APSONWorking = true
ShowEpsState_Output.epsStateInfo.epsInst[0].switchingIncomplete = true
ShowEpsState_Output.epsStateInfo.epsInst[0].noAPSReceived = true
ShowEpsState_Output.epsStateInfo.epsInst[0].txApsRe = 1
ShowEpsState_Output.epsStateInfo.epsInst[0].txApsBr = 2200564160
ShowEpsState_Output.epsStateInfo.epsInst[0].rxApsRe = 2200566368
ShowEpsState_Output.epsStateInfo.epsInst[0].rxApsBr = 2222748384

ShowEpsState Commit Success!!!

```





# CHAPTER 18

## Configuring ERPS

---

This document describes the Ethernet Ring Protection Switching (ERPS) feature and configuration steps to implement protection switching mechanisms for Ethernet layer ring topologies.

- [Prerequisites for Configuring ERPS, page 427](#)
- [Restrictions for Configuring ERPS, page 427](#)
- [Information About ERPS, page 427](#)
- [How to Provision ERPS, page 428](#)
- [Verifying ERPS, page 452](#)

### Prerequisites for Configuring ERPS

- NID must be added to the controller.
- NID must be accessible from the controller.

### Restrictions for Configuring ERPS


- Maintenance End Point (MEP) is not supported on Ethernet Virtual Connections (EVC) bridge domain.
- MEP domain for control VLAN is only on Port or VLAN.

### Information About ERPS

The ITU-T G.8032 ERPS feature implements protection switching mechanisms for Ethernet layer ring topologies. This feature uses the G.8032 Ethernet Ring Protection (ERP) protocol, defined in ITU-T G.8032, to provide protection for Ethernet traffic in a ring topology, while ensuring that no loops are within the ring at the Ethernet layer. The loops are prevented by blocking traffic on either a predetermined link or a failed link.

The following figure shows the topology used for provisioning ERPS on NID-1 and NID-2 using a UPE NID Controller.

**Figure 12: ERPS Topology**

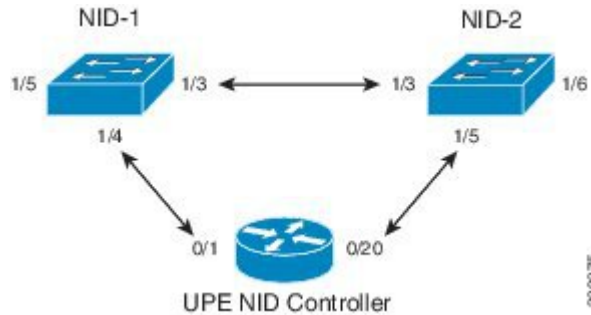

## How to Provision ERPS

### Creating VLAN on NID-1

#### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1 NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionPortVlanPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionPortVlanPortType	Enters the ProvisionPortVlanPortType mode.
<b>Step 4</b>	<b>createVlanCommand createVlanReq vlan_list vlan_list</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createVlanCommand createVlanReq vlan_list 2000	Creates VLAN list.
<b>Step 5</b>	<b>modifySwPort modifySWPortConfig interface interface_id   mode [access Vlan vlan_number]   trunk {allowed   native}</b>	Modifies the switchport configuration.  • <b>interface</b> —Selects the interface to be configured.

	Command or Action	Purpose
	<p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionPortVlanPortType) # modifySwPort modifySWPortConfig interface 3 Switch(config-controller-ProvisionPortVlanPortType) # modifySwPort modifySWPortConfig mode trunk native vlan 1 Switch(config-controller-ProvisionPortVlanPortType) # modifySwPort modifySWPortConfig mode trunk allowed vlan add vlan_list 2000</pre> <pre>Switch(config-controller-ProvisionPortVlanPortType) # modifySwPort modifySWPortConfig interface 4 Switch(config-controller-ProvisionPortVlanPortType) # modifySwPort modifySWPortConfig mode trunk native vlan 1 Switch(config-controller-ProvisionPortVlanPortType) # modifySwPort modifySWPortConfig mode trunk allowed vlan add vlan-list 2000</pre>	<ul style="list-style-type: none"> <li>• <i>Interface Id</i>—Specifies the interface ID.</li> <li>• <b>mode</b>—Specifies the mode of operation.</li> <li>• <b>access</b>—Sets mode to ACCESS unconditionally.</li> <li>• <b>vlan</b>—Sets VLAN when interface is in access mode.</li> <li>• <i>vlan_number</i>—Specifies the VLAN number.</li> <li>• <b>trunk</b>—Sets mode to TRUNK unconditionally.</li> <li>• <b>allowed</b>—Sets allowed VLAN characteristics when interface is in trunk mode.</li> <li>• <b>native</b>—Sets native VLAN.</li> </ul>
<b>Step 6</b>	<p><b>modifySwPort review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionPortVlanPortType) # modifySwPort review</pre>	Displays the configuration.
<b>Step 7</b>	<p><b>modifySwPort commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionPortVlanPortType) # modifySwPort commit</pre>	Sends the configuration to NID.
<b>Step 8</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionPortVlanPortType) # exit</pre>	Exits to the config-controller mode.

### Configuration Example

The example shows how to create VLAN on NID-1:

```
Switch(config-controller-ProvisionPortVlanPortType) # createVlanCommand createVlanReq vlan_list
2000

Switch(config-controller-ProvisionPortVlanPortType) # modifySwPort modifySWPortConfig interface
3
Switch(config-controller-ProvisionPortVlanPortType) # modifySwPort modifySWPortConfig mode
trunk native vlan 1
Switch(config-controller-ProvisionPortVlanPortType) # modifySwPort modifySWPortConfig mode
trunk allowed vlan add vlan_list 2000

Switch(config-controller-ProvisionPortVlanPortType) # modifySwPort modifySWPortConfig interface
4
Switch(config-controller-ProvisionPortVlanPortType) # modifySwPort modifySWPortConfig mode
trunk native vlan 1
Switch(config-controller-ProvisionPortVlanPortType) # modifySwPort modifySWPortConfig mode
trunk allowed vlan add vlan_list 2000
```

```
Switch(config-controller-ProvisionPortVlanPortType) # modifySwPort review
Switch(config-controller-ProvisionPortVlanPortType) # modifySwPort commit
Switch(config-controller-ProvisionPortVlanPortType) # exit
```

## Creating MEP on Port 1 of NID-1

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid / NID_ID</b>  <b>Example:</b> Switch(config) # contoller nid 1/2	Enters the controller configuration mode.
Step 3	<b>ProvisionMepPortType</b>  <b>Example:</b> Switch(config-controller) # ProvisionMepPortType	Enters the ProvisionMepPortType mode.
Step 4	<b>createMep createMepConfig {mepinstance   mode {mep   mip}   direction {up   down}   domain {port   evc   vlan}   flowId   vid   level level_number   residencePort port_number   mepld id_number   megdomain {maName ma_name   megIdFormat {ituMeg   ituCcMeg   iccc}}}</b>  <b>Example:</b> Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig mepInstance 100 Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig direction DOWN Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig domain vlan Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig level 0 Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig megDomain maName ERPS-1 Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig megDomain megIdFormat ituMeg Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig mepId 100 Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig mode MEP Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig residencePort 3 Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig flow 2000	Creates MEP configuration. <ul style="list-style-type: none"> <li>• <b>mepinstance</b>—Specifies the MEP instance number.</li> <li>• <b>mode</b>—Specifies the mode of the MEP instance.</li> <li>• <b>mep</b>—Specifies the maintenance entity end point.</li> <li>• <b>mip</b>—Specifies the maintenance entity intermediate point.</li> <li>• <b>direction</b>—Selects the direction of the MEP.</li> <li>• <b>up</b>—Specifies an Up MEP - monitoring egress OAM and traffic on residence port.</li> <li>• <b>down</b>—Specifies a Down MEP - monitoring ingress OAM and traffic on residence port.</li> <li>• <b>domain</b>—Selects the domain of the MEP.</li> <li>• <b>port</b>—Specifies a MEP in the Port Domain. Flow Instance is a Port.</li> <li>• <b>evc</b>—Specifies a MEP in the EVC Domain. Flow Instance is a EVC. The EVC must be created.</li> <li>• <b>vlan</b>—Specifies a MEP in the VLAN Domain. Flow Instance is a VLAN. The VLAN must be created.</li> <li>• <b>flowId</b>—Specifies the flow related to the MEP.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>vid</b>—In case the MEP is a port Up-MEP or a EVC customer MIP the VID must be given.</li> <li>• <b>level</b>—Specifies the MEG level of the MEP.</li> <li>• <i>level_number</i>—MEG level number.</li> <li>• <b>residencePort</b>—Specifies the port monitored by MEP.</li> <li>• <i>port_number</i>—Residence port number.</li> <li>• <b>mepId</b>—Specifies MEP ID.</li> <li>• <i>id_number</i>—MEP ID number.</li> <li>• <b>megdomain</b>—Specifies the maintenance domain configuration.</li> <li>• <b>maName</b>—Specifies the ITU/IEEE MEG-ID (short MA name).</li> <li>• <i>ma_name</i>—Short MA name.</li> <li>• <b>megIdFormat</b>—Selects the MEG ID format.</li> <li>• <b>ituMeg</b>—Specifies the MEG-ID using ITU format (ICC - UMC).</li> <li>• <b>ituCcMeg</b>—Specifies the MEG-ID using ITU Country Code format (CC - ICC - UMC).</li> <li>• <b>ieee</b>—Specifies the MEG-ID (Short MA Name) using IEEE Character String format.</li> </ul>
<b>Step 5</b>	<p><b>addPeerMepId commit   flush   peerMepConfig {macAddress   mepInstance   peerMepId}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType)# addPeerMepId peerMepConfig mepInstance 100 Switch(config-controller-ProvisionMepPortType)# addPeerMepId peerMepConfig peerMepId 101</pre>	<p>Adds peer MEP request.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Commits addPeerMepId.</li> <li>• <b>flush</b>—Flushes all addPeerMepId commands from queue.</li> <li>• <b>peerMepConfig</b>—Adds peer mep request.</li> <li>• <b>macAddress</b>—Specifies the peer MAC. This is overwritten by any learned MAC - through CCM reception.</li> <li>• <b>mepInstance</b>—Specifies the mep instance number.</li> <li>• <b>peerMepId</b>—Specifies the peer MEP-ID.</li> </ul>
<b>Step 6</b>	<p><b>addCcAps {commit   flush   mepFunctionalConfig {aps {enable   disable}   cc {enable   disable}   mepInstance mep_instance_number}   review}</b></p>	<p>Adds CC/APS configuration request.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Commits addCcAps.</li> </ul>

	Command or Action	Purpose
	<p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig mepInstance 100 Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig cc enable priority 7 Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig cc enable frameRate frls Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable mode multi Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable priority 7 Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable switchingProtocol raps octet 1</pre>	<ul style="list-style-type: none"> <li>• <b>flush</b>—Flushes all addCcAps commands from queue.</li> <li>• <b>mepFunctionalConfig</b>—Adds CC/APS configuration request.</li> <li>• <b>aps</b>—Specifies APS protocol.</li> <li>• <b>enable</b>—Enables APS.</li> <li>• <b>disbale</b>—Disables APS.</li> <li>• <b>cc</b>—Specifies continuity check.</li> <li>• <b>enable</b>—Enables CC.</li> <li>• <b>disbale</b>—Disables CC.</li> <li>• <b>mepInstance</b>—Specifies the mep instance number.</li> <li>• <i>mep_instance_number</i>—MEP instance number.</li> </ul>
<b>Step 7</b>	<p><b>addCcAps review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType)# addCcAps review</pre>	Displays the configuration.
<b>Step 8</b>	<p><b>addCcAps commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType)# addCcAps commit</pre>	Sends the configuration to NID.
<b>Step 9</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType)# exit</pre>	Exits to the config-controller mode.

### Configuration Example

The example shows how to create MEP on port 1 of NID-1:

```
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mepInstance 100
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig direction DOWN
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig domain vlan
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig level 0
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig megDomain maName
ERPS-1
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig megDomain
megIdFormat ituMeg
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mepId 100
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mode MEP
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig residencePort 3
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig flow 2000

Switch(config-controller-ProvisionMepPortType)# addPeerMepId peerMepConfig mepInstance 100
```



```

Switch(config-controller-ProvisionMepPortType)# addPeerMepId peerMepConfig peerMepId 101

Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig mepInstance
100
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig cc enable
priority 7
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig cc enable
frameRate frls
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable
mode multi
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable
priority 7
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable
switchingProtocol raps octet 1

Switch(config-controller-ProvisionMepPortType)# addCcAps review
Switch(config-controller-ProvisionMepPortType)# addCcAps commit
Switch(config-controller-ProvisionMepPortType)# exit

```

## Creating MEP on Port 2 of NID-1

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1 NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionMepPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionMepPortType	Enters the ProvisionMepPortType mode.
<b>Step 4</b>	<b>createMep createMepConfig {mepinstance   mode {mep   mip}   direction {up   down}   domain {port   evc   vlan}   flowId   vid   level level_number   residencePort port_number   mepld_id_number   megdomain {maName ma_name   megIdFormat {ituMeg   ituCcMeg   ieee}}}</b>  <b>Example:</b> Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mepInstance 99 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig direction DOWN Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig domain vlan Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig level 0 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig megDomain maName W-N-V2000 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig megDomain megIdFormat	Creates MEP configuration. <ul style="list-style-type: none"> <li>• <b>mepinstance</b>—Specifies the MEP instance number.</li> <li>• <b>mode</b>—Specifies the mode of the MEP instance.</li> <li>• <b>mep</b>—Specifies the maintenance entity end point.</li> <li>• <b>mip</b>—Specifies the maintenance entity intermediate point.</li> <li>• <b>direction</b>—Selects the direction of the MEP.</li> <li>• <b>up</b>—Specifies an Up MEP - monitoring egress OAM and traffic on residence port.</li> <li>• <b>down</b>—Specifies a Down MEP - monitoring ingress OAM and traffic on residence port.</li> <li>• <b>domain</b>—Selects the domain of the MEP.</li> </ul>

	Command or Action	Purpose
	<pre>ieee name W-N-V2000 Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig mepId 101 Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig mode MEP Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig residencePort 4 Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig flow 2000</pre>	<ul style="list-style-type: none"> <li>• <b>port</b>—Specifies a MEP in the Port Domain. Flow Instance is a Port.</li> <li>• <b>evc</b>—Specifies a MEP in the EVC Domain. Flow Instance is a EVC. The EVC must be created.</li> <li>• <b>vlan</b>—Specifies a MEP in the VLAN Domain. Flow Instance is a VLAN. The VLAN must be created.</li> <li>• <b>flowId</b>—Specifies the flow related to the MEP.</li> <li>• <b>vid</b>—In case the MEP is a port Up-MEP or a EVC customer MIP the VID must be given.</li> <li>• <b>level</b>—Specifies the MEG level of the MEP.</li> <li>• <i>level_number</i>—MEG level number.</li> <li>• <b>residencePort</b>—Specifies the port monitored by MEP.</li> <li>• <i>port_number</i>—Residence port number.</li> <li>• <b>mepId</b>—Specifies MEP ID.</li> <li>• <i>id_number</i>—MEP ID number.</li> <li>• <b>megdomain</b>—Specifies the maintenance domain configuration.</li> <li>• <b>maName</b>—Specifies the ITU/IEEE MEG-ID (short MA name).</li> <li>• <i>ma_name</i>—Short MA name.</li> <li>• <b>megIdFormat</b>—Selects the MEG ID format.</li> <li>• <b>ituMeg</b>—Specifies the MEG-ID using ITU format (ICC - UMC).</li> <li>• <b>ituCcMeg</b>—Specifies the MEG-ID using ITU Country Code format (CC - ICC - UMC).</li> <li>• <b>ieee</b>—Specifies the MEG-ID (Short MA Name) using IEEE Character String format.</li> </ul>
<b>Step 5</b>	<p><b>addPeerMepId commit   flush   peerMepConfig {macAddress   mepInstance   peerMepId}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType) # addPeerMepId peerMepConfig mepInstance 99 Switch(config-controller-ProvisionMepPortType) # addPeerMepId peerMepConfig peerMepId 102</pre>	<p>Adds peer MEP request.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Commits addPeerMepId.</li> <li>• <b>flush</b>—Flushes all addPeerMepId commands from queue.</li> <li>• <b>peerMepConfig</b>—Adds peer mep request.</li> <li>• <b>macAddress</b>—Specifies the peer MAC. This is overwritten by any learned MAC - through CCM reception.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>mepInstance</b>—Specifies the mep instance number.</li> <li>• <b>peerMepId</b>—Specifies the peer MEP-ID.</li> </ul>
<b>Step 6</b>	<p><b>addCcAps {commit   flush   mepFunctionalConfig {aps {enable   disable}   cc {enable   disable}   mepInstance mep_instance_number}   review}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig mepInstance 99 Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig cc enable priority 7 Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig cc enable frameRate fr1s Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig aps enable mode multi Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig aps enable priority 7 Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig aps enable switchingProtocol raps octet 1</pre>	<p>Adds CC/APS configuration request.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Commits addCcAps.</li> <li>• <b>flush</b>—Flushes all addCcAps commands from queue.</li> <li>• <b>mepFunctionalConfig</b>—Adds CC/APS configuration request.</li> <li>• <b>aps</b>—Specifies APS protocol.</li> <li>• <b>enable</b>—Enables APS.</li> <li>• <b>disbale</b>—Disables APS.</li> <li>• <b>cc</b>—Specifies continuity check.</li> <li>• <b>enable</b>—Enables CC.</li> <li>• <b>disbale</b>—Disables CC.</li> <li>• <b>mepInstance</b>—Specifies the mep instance number.</li> <li>• <b>mep_instance_number</b>—MEP instance number.</li> </ul>
<b>Step 7</b>	<p><b>addCcAps review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType) # addCcAps review</pre>	<p>Displays the configuration.</p>
<b>Step 8</b>	<p><b>addCcAps commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType) # addCcAps commit</pre>	<p>Sends the configuration to NID.</p>
<b>Step 9</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType) # exit</pre>	<p>Exits to the config-controller mode.</p>

**Configuration Example**

The example shows how to create MEP on port2 of NID-1:

```
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig mepInstance 99
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig direction DOWN
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig domain vlan
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig level 0
```

```

Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig megDomain maName
W-N-V2000
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig megDomain
megIdFormat ieee name W-N-V2000
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mepId 101
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mode MEP
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig residencePort 4
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig flow 2000

Switch(config-controller-ProvisionMepPortType)# addPeerMepId peerMepConfig mepInstance 99
Switch(config-controller-ProvisionMepPortType)# addPeerMepId peerMepConfig peerMepId 102

Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig mepInstance
99
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig cc enable
priority 7
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig cc enable
frameRate frls
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable
mode multi
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable
priority 7
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable
switchingProtocol raps octet 1

Switch(config-controller-ProvisionMepPortType)# addCcAps review
Switch(config-controller-ProvisionMepPortType)# addCcAps commit
Switch(config-controller-ProvisionMepPortType)# exit

```

## Configuring ERPS on NID-1

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1 NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
<b>Step 3</b>	<b>ErpsPortType</b>  <b>Example:</b> Switch(config-controller)# ErpsPortType	Enters the ErpsPortType mode.
<b>Step 4</b>	<b>setErpsInstConfig erpsConfig {erpsInst erpsInst_number   mep {port0 {sf sf_number   aps aps_number}   port1 {sf sf_number   aps aps_number}}   ringType {major   sub}}</b>  <b>Example:</b> Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig erpsInst 1 Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig mep port0 aps 100 Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig mep port0 sf 100	Sets ERPS configuration. <ul style="list-style-type: none"> <li>• <b>erpsConfig</b>—Specifies the ERPS configuration.</li> <li>• <b>erpsInst</b>— Specifies the ERPS instance.</li> <li>• <b>erpsInst_number</b>—ERPS instance number</li> <li>• <b>mep</b>—Specifies the MEP configuration.</li> <li>• <b>port0</b>—Selects the ERPS port 0 interface.</li> </ul>

	Command or Action	Purpose
	<pre>Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig mep port1 aps 99 Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig mep port1 sf 99 Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig port0 3 Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig port1 4 Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig ringType major</pre>	<ul style="list-style-type: none"> <li>• <b>port1</b>—Selects the ERPS port 0 interface.</li> <li>• <b>sf</b>—Specifies signal fail MEP.</li> <li>• <b>sf_number</b>—Signal fail MEP number.</li> <li>• <b>aps</b>—Specifies the APS MEP.</li> <li>• <b>aps_number</b>— APS MEP number.</li> <li>• <b>ringType</b>—Specifies type of ring.</li> <li>• <b>major</b>—Specifies the major ring.</li> <li>• <b>sub</b>—Specifies the sub ring.</li> </ul>
<b>Step 5</b>	<p><b>setErpsInstProperties erpsInstconfig {wtrTime time_in_minutes   erpsInst erp_instance_number   rplPort {port0   port1}   rplRole {owner   neighbour}   vlan {vlanList vlan_list_number   add   remove   none}}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ErpsPortType)# setErpsInstProperties erpsInstconfig wtrTime 1 Switch(config-controller-ErpsPortType)# setErpsInstProperties erpsInstconfig erpsInst 1 Switch(config-controller-ErpsPortType)# setErpsInstProperties erpsInstconfig rplPort port0 Switch(config-controller-ErpsPortType)# setErpsInstProperties erpsInstconfig rplRole owner Switch(config-controller-ErpsPortType)# setErpsInstProperties erpsInstconfig vlan vlanList 2-10 Switch(config-controller-ErpsPortType)# setErpsInstProperties erpsInstconfig wtrTime 1</pre>	<p>Adds CC/APS configuration request.</p> <ul style="list-style-type: none"> <li>• <b>wtrTime</b>— Specifies the WTR time.</li> <li>• <b>time_in_minutes</b>—WTR time in minutes. Allowed range is 1, 5-12.</li> <li>• <b>erpsInst</b>—Specifies the ERPS instance.</li> <li>• <b>erp_instance_number</b>—ERPS instance number.</li> <li>• <b>rplPort</b>—Specifies the RPL port.</li> <li>• <b>port0</b>—Selects the ERPS port 0 interface.</li> <li>• <b>port1</b>— Selects the ERPS port 1 interface.</li> <li>• <b>rplRole</b>—Specifies the RPL role.</li> <li>• <b>owner</b>—Specifies the RPL owner.</li> <li>• <b>neighbour</b>—Specifies the RPL neighbour.</li> <li>• <b>vlan</b>—Specifies the VLAN configuration.</li> <li>• <b>vlanList</b>—Specifies the VLAN list.</li> <li>• <b>vlan_list_number</b>— VLAN list number.</li> <li>• <b>add</b>—Adds to the set of included VLANs.</li> <li>• <b>remove</b>—Removes from the set of included VLANs.</li> <li>• <b>none</b>— Does not include any VLANs.</li> </ul>
<b>Step 6</b>	<p><b>setErpsInstProperties review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ErpsPortType)# setErpsInstProperties review</pre>	<p>Displays the configuration.</p>

	Command or Action	Purpose
<b>Step 7</b>	<b>setErpsInstProperties commit</b>  <b>Example:</b> Switch(config-controller-ErpsPortType)# setErpsInstProperties commit	Sends the configuration to NID.
<b>Step 8</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ErpsPortType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to configure ERPS on NID-1:

```
Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig erpsInst 1
Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig mep port0 aps 100
Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig mep port0 sf 100
Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig mep port1 aps 99
Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig mep port1 sf 99
Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig port0 3
Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig port1 4
Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig ringType major

Switch(config-controller-ErpsPortType)# setErpsInstProperties erpsInstconfig wtrTime 1
Switch(config-controller-ErpsPortType)# setErpsInstProperties erpsInstconfig erpsInst 1
Switch(config-controller-ErpsPortType)# setErpsInstProperties erpsInstconfig rplPort port0
Switch(config-controller-ErpsPortType)# setErpsInstProperties erpsInstconfig rplRole owner
Switch(config-controller-ErpsPortType)# setErpsInstProperties erpsInstconfig vlan vlanList
2-10
Switch(config-controller-ErpsPortType)# setErpsInstProperties erpsInstconfig wtrTime 1

Switch(config-controller-ErpsPortType)# setErpsInstProperties review
Switch(config-controller-ErpsPortType)# setErpsInstProperties commit
Switch(config-controller-ErpsPortType)# exit
```

## Creating VLAN on NID-2

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1 NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.

	Command or Action	Purpose
Step 3	<b>ProvisionPortVlanPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionPortVlanPortType	Enters the ProvisionPortVlanPortType mode.
Step 4	<b>createVlanCommand createVlanReq vlan_list vlan_list</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createVlanCommand createVlanReq vlan_list 2000	Creates VLAN list.
Step 5	<b>modifySwPort modifySWPortConfig interface interface_id   mode [access Vlan vlan_number]   trunk {allowed   native}</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig interface 3 Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig mode trunk native vlan 1 Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig mode trunk allowed vlan add vlan_list 2000  Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig interface 5 Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig mode trunk native vlan 1 Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig mode trunk allowed vlan add vlan_list 2000	Modifies the switchport configuration. <ul style="list-style-type: none"> <li>• <b>interface</b>—Selects the interface to be configured.</li> <li>• <b>Interface Id</b>—Specifies the interface ID.</li> <li>• <b>mode</b>—Specifies the mode of operation.</li> <li>• <b>access</b>—Sets mode to ACCESS unconditionally.</li> <li>• <b>vlan</b>—Sets VLAN when interface is in access mode.</li> <li>• <b>vlan_number</b>—Specifies the VLAN number.</li> <li>• <b>trunk</b>—Sets mode to TRUNK unconditionally.</li> <li>• <b>allowed</b>—Sets allowed VLAN characteristics when interface is in trunk mode.</li> <li>• <b>native</b>—Sets native VLAN.</li> </ul>
Step 6	<b>modifySwPort review</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort review	Displays the configuration.
Step 7	<b>modifySwPort commit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort commit	Sends the configuration to NID.
Step 8	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to create VLAN on NID-2:

```
Switch(config-controller-ProvisionPortVlanPortType)# createVlanCommand createVlanReq vlan_list
2000

Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig interface
3
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig mode
trunk native vlan 1
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig mode
trunk allowed vlan add vlan_list 2000

Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig interface
5
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig mode
trunk native vlan 1
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig mode
trunk allowed vlan add vlan_list 2000

Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort review
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort commit
Switch(config-controller-ProvisionPortVlanPortType)# exit
```

## Creating MEP on Port 1 of NID-2

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid / NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
Step 3	<b>ProvisionMepPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionMepPortType	Enters the ProvisionMepPortType mode.
Step 4	<b>createMep createMepConfig {mepinstance   mode {mep   mip}   direction {up   down}   domain {port   evc   vlan}   flowId   vid   level level_number   residencePort port_number   mepId id_number   megdomain {maName ma_name   megIdFormat {ituMeg   ituCcMeg   ieee}}}</b>  <b>Example:</b> Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mepInstance 100 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig direction DOWN Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig domain vlan Switch(config-controller-ProvisionMepPortType)#	Creates MEP configuration. <ul style="list-style-type: none"> <li>• <b>mepinstance</b>—Specifies the MEP instance number.</li> <li>• <b>mode</b>—Specifies the mode of the MEP instance.</li> <li>• <b>mep</b>—Specifies the maintenance entity end point.</li> <li>• <b>mip</b>—Specifies the maintenance entity intermediate point.</li> <li>• <b>direction</b>—Selects the direction of the MEP.</li> <li>• <b>up</b>—Specifies an Up MEP - monitoring egress OAM and traffic on residence port.</li> </ul>



	Command or Action	Purpose
	<pre> createMep createMepConfig level 0 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig megDomain maName ERPS-1 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig megDomain megIdFormat ituMeg Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mepId 101 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mode MEP Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig residencePort 3 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig flow 2000 </pre>	<ul style="list-style-type: none"> <li>• <b>down</b>—Specifies a Down MEP - monitoring ingress OAM and traffic on residence port.</li> <li>• <b>domain</b>—Selects the domain of the MEP.</li> <li>• <b>port</b>—Specifies a MEP in the Port Domain. Flow Instance is a Port.</li> <li>• <b>evc</b>—Specifies a MEP in the EVC Domain. Flow Instance is a EVC. The EVC must be created.</li> <li>• <b>vlan</b>—Specifies a MEP in the VLAN Domain. Flow Instance is a VLAN. The VLAN must be created.</li> <li>• <b>flowId</b>—Specifies the flow related to the MEP.</li> <li>• <b>vid</b>—In case the MEP is a port Up-MEP or a EVC customer MIP the VID must be given.</li> <li>• <b>level</b>—Specifies the MEG level of the MEP.</li> <li>• <i>level_number</i>—MEG level number.</li> <li>• <b>residencePort</b>—Specifies the port monitored by MEP.</li> <li>• <i>port_number</i>—Residence port number.</li> <li>• <b>mepId</b>—Specifies MEP ID.</li> <li>• <i>id_number</i>—MEP ID number.</li> <li>• <b>megdomain</b>—Specifies the maintenance domain configuration.</li> <li>• <b>maName</b>—Specifies the ITU/IEEE MEG-ID (short MA name).</li> <li>• <i>ma_name</i>—Short MA name.</li> <li>• <b>megIdFormat</b>—Selects the MEG ID format.</li> <li>• <b>ituMeg</b>—Specifies the MEG-ID using ITU format (ICC - UMC).</li> <li>• <b>ituCcMeg</b>—Specifies the MEG-ID using ITU Country Code format (CC - ICC - UMC).</li> <li>• <b>ieee</b>—Specifies the MEG-ID (Short MA Name) using IEEE Character String format.</li> </ul>
<b>Step 5</b>	<p><b>addPeerMepId commit   flush   peerMepConfig {macAddress   mepInstance   peerMepId}</b></p> <p><b>Example:</b></p> <pre> Switch(config-controller-ProvisionMepPortType)# addPeerMepId peerMepConfig mepInstance 100 </pre>	<p>Adds peer MEP request.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Commits addPeerMepId.</li> <li>• <b>flush</b>—Flushes all addPeerMepId commands from queue.</li> <li>• <b>peerMepConfig</b>—Adds peer mep request.</li> </ul>

	Command or Action	Purpose
	<pre>Switch(config-controller-ProvisionMepPortType) # addPeerMepId peerMepConfig peerMepId 100</pre>	<ul style="list-style-type: none"> <li>• <b>macAddress</b>—Specifies the peer MAC. This is overwritten by any learned MAC - through CCM reception.</li> <li>• <b>mepInstance</b>—Specifies the mep instance number.</li> <li>• <b>peerMepId</b>—Specifies the peer MEP-ID.</li> </ul>
<b>Step 6</b>	<p><b>addCcAps {commit   flush   mepFunctionalConfig {aps {enable   disable}   cc {enable   disable}   mepInstance mep_instance_number}   review}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig mepInstance 100 Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig cc enable priority 7 Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig cc enable frameRate fr1s Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig aps enable mode multi Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig aps enable priority 7 Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig aps enable switchingProtocol raps octet 1</pre>	<p>Adds CC/APS configuration request.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Commits addCcAps.</li> <li>• <b>flush</b>—Flushes all addCcAps commands from queue.</li> <li>• <b>mepFunctionalConfig</b>—Adds CC/APS configuration request.</li> <li>• <b>aps</b>—Specifies APS protocol.</li> <li>• <b>enable</b>—Enables APS.</li> <li>• <b>disable</b>—Disables APS.</li> <li>• <b>cc</b>—Specifies continuity check.</li> <li>• <b>enable</b>—Enables CC.</li> <li>• <b>disable</b>—Disables CC.</li> <li>• <b>mepInstance</b>—Specifies the mep instance number.</li> <li>• <b>mep_instance_number</b>—MEP instance number.</li> </ul>
<b>Step 7</b>	<p><b>addCcAps review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType) # addCcAps review</pre>	<p>Displays the configuration.</p>
<b>Step 8</b>	<p><b>addCcAps commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType) # addCcAps commit</pre>	<p>Sends the configuration to NID.</p>
<b>Step 9</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType) # exit</pre>	<p>Exits to the config-controller mode.</p>

### Configuration Example

The example shows how to create MEP on port 1 of NID-2:

```
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig mepInstance 100
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig direction DOWN
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig domain vlan
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig level 0
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig megDomain maName
ERPS-1
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig megDomain
megIdFormat ituMeg
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig mepId 101
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig mode MEP
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig residencePort 3
Switch(config-controller-ProvisionMepPortType) # createMep createMepConfig flow 2000

Switch(config-controller-ProvisionMepPortType) # addPeerMepId peerMepConfig mepInstance 100
Switch(config-controller-ProvisionMepPortType) # addPeerMepId peerMepConfig peerMepId 100

Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig mepInstance
100
Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig cc enable
priority 7
Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig cc enable
frameRate frls
Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig aps enable
mode multi
Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig aps enable
priority 7
Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig aps enable
switchingProtocol raps octet 1

Switch(config-controller-ProvisionMepPortType) # addCcAps review
Switch(config-controller-ProvisionMepPortType) # addCcAps commit
Switch(config-controller-ProvisionMepPortType) # exit
```

## Creating MEP on Port 2 of NID-2

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1 NID_ID</b>  <b>Example:</b> Switch(config)# contoller nid 1/2	Enters the controller configuration mode.
Step 3	<b>ProvisionMepPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionMepPortType	Enters the ProvisionMepPortType mode.
Step 4	<b>createMep createMepConfig {mepinstance   mode {mep   mip}   direction {up   down}   domain {port   evc   vlan}   flowId   vid   level level_number   residencePort</b>	Creates MEP configuration.  • <b>mepinstance</b> —Specifies the MEP instance number.

Command or Action	Purpose
<p><i>port_number</i>   <b>mepId</b> <i>id_number</i>   <b>megdomain</b> {<i>maName</i> <i>ma_name</i>   <b>megIdFormat</b> {<i>ituMeg</i>   <i>ituCcMeg</i>   <i>ieee</i>}}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mepInstance 99 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig direction DOWN Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig domain vlan Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig level 0 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig megDomain maName W-N-V2000 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig megDomain megIdFormat ieee name W-N-V2000 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mepId 103 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mode MEP Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig residencePort 5 Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig flow 2000</pre>	<ul style="list-style-type: none"> <li>• <b>mode</b>—Specifies the mode of the MEP instance.</li> <li>• <b>mep</b>—Specifies the maintenance entity end point.</li> <li>• <b>mip</b>—Specifies the maintenance entity intermediate point.</li> <li>• <b>direction</b>—Selects the direction of the MEP.</li> <li>• <b>up</b>—Specifies an Up MEP - monitoring egress OAM and traffic on residence port.</li> <li>• <b>down</b>—Specifies a Down MEP - monitoring ingress OAM and traffic on residence port.</li> <li>• <b>domain</b>—Selects the domain of the MEP.</li> <li>• <b>port</b>—Specifies a MEP in the Port Domain. Flow Instance is a Port.</li> <li>• <b>evc</b>—Specifies a MEP in the EVC Domain. Flow Instance is a EVC. The EVC must be created.</li> <li>• <b>vlan</b>—Specifies a MEP in the VLAN Domain. Flow Instance is a VLAN. The VLAN must be created.</li> <li>• <b>flowId</b>—Specifies the flow related to the MEP.</li> <li>• <b>vid</b>—In case the MEP is a port Up-MEP or a EVC customer MIP the VID must be given.</li> <li>• <b>level</b>—Specifies the MEG level of the MEP.</li> <li>• <i>level_number</i>—MEG level number.</li> <li>• <b>residencePort</b>—Specifies the port monitored by MEP.</li> <li>• <i>port_number</i>—Residence port number.</li> <li>• <b>mepId</b>—Specifies MEP ID.</li> <li>• <i>id_number</i>—MEP ID number.</li> <li>• <b>megdomain</b>—Specifies the maintenance domain configuration.</li> <li>• <b>maName</b>—Specifies the ITU/IEEE MEG-ID (short MA name).</li> <li>• <i>ma_name</i>—Short MA name.</li> <li>• <b>megIdFormat</b>—Selects the MEG ID format.</li> <li>• <b>ituMeg</b>—Specifies the MEG-ID using ITU format (ICC - UMC).</li> <li>• <b>ituCcMeg</b>—Specifies the MEG-ID using ITU Country Code format (CC - ICC - UMC).</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>ieee</b>—Specifies the MEG-ID (Short MA Name) using IEEE Character String format.</li> </ul>
<b>Step 5</b>	<b>addPeerMepId commit   flush   peerMepConfig {macAddress   mepInstance   peerMepId}</b>  <b>Example:</b> <pre>Switch(config-controller-ProvisionMepPortType) # addPeerMepId peerMepConfig mepInstance 99 Switch(config-controller-ProvisionMepPortType) # addPeerMepId peerMepConfig peerMepId 104</pre>	Adds peer MEP request. <ul style="list-style-type: none"> <li>• <b>commit</b>—Commits addPeerMepId.</li> <li>• <b>flush</b>—Flushes all addPeerMepId commands from queue.</li> <li>• <b>peerMepConfig</b>—Adds peer mep request.</li> <li>• <b>macAddress</b>—Specifies the peer MAC. This is overwritten by any learned MAC - through CCM reception.</li> <li>• <b>mepInstance</b>—Specifies the mep instance number.</li> <li>• <b>peerMepId</b>—Specifies the peer MEP-ID.</li> </ul>
<b>Step 6</b>	<b>addCcAps {commit   flush   mepFunctionalConfig {aps {enable   disable}   cc {enable   disable}   mepInstance mep_instance_number}   review}</b>  <b>Example:</b> <pre>Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig mepInstance 99 Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig cc enable priority 7 Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig cc enable frameRate frls Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig aps enable mode multi Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig aps enable priority 7 Switch(config-controller-ProvisionMepPortType) # addCcAps mepFunctionalConfig aps enable switchingProtocol raps octet 1</pre>	Adds CC/APS configuration request. <ul style="list-style-type: none"> <li>• <b>commit</b>—Commits addCcAps.</li> <li>• <b>flush</b>—Flushes all addCcAps commands from queue.</li> <li>• <b>mepFunctionalConfig</b>—Adds CC/APS configuration request.</li> <li>• <b>aps</b>—Specifies APS protocol.</li> <li>• <b>enable</b>—Enables APS.</li> <li>• <b>disbale</b>—Disables APS.</li> <li>• <b>cc</b>—Specifies continuity check.</li> <li>• <b>enable</b>—Enables CC.</li> <li>• <b>disbale</b>—Disables CC.</li> <li>• <b>mepInstance</b>—Specifies the mep instance number.</li> <li>• <i>mep_instance_number</i>—MEP instance number.</li> </ul>
<b>Step 7</b>	<b>addCcAps review</b>  <b>Example:</b> <pre>Switch(config-controller-ProvisionMepPortType) # addCcAps review</pre>	Displays the configuration.
<b>Step 8</b>	<b>addCcAps commit</b>  <b>Example:</b> <pre>Switch(config-controller-ProvisionMepPortType) # addCcAps commit</pre>	Sends the configuration to NID.

	Command or Action	Purpose
Step 9	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionMepPortType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to create MEP on port 2 of NID-2:

```
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mepInstance 99
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig direction DOWN
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig domain vlan
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig level 0
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig megDomain maName
W-N-V2000
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig megDomain
megIdFormat ieee name W-N-V2000
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mepId 103
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig mode MEP
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig residencePort 5
Switch(config-controller-ProvisionMepPortType)# createMep createMepConfig flow 2000

Switch(config-controller-ProvisionMepPortType)# addPeerMepId peerMepConfig mepInstance 99
Switch(config-controller-ProvisionMepPortType)# addPeerMepId peerMepConfig peerMepId 104

Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig mepInstance
99
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig cc enable
priority 7
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig cc enable
frameRate frls
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable
mode multi
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable
priority 7
Switch(config-controller-ProvisionMepPortType)# addCcAps mepFunctionalConfig aps enable
switchingProtocol raps octet 1

Switch(config-controller-ProvisionMepPortType)# addCcAps review
Switch(config-controller-ProvisionMepPortType)# addCcAps commit
Switch(config-controller-ProvisionMepPortType)# exit
```

## Configuring ERPS on NID-2

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.

	Command or Action	Purpose
Step 2	<p><b>controller nid</b> <i>1 NID_ID</i></p> <p><b>Example:</b> Switch(config)# controller nid 1/2</p>	Enters the controller configuration mode.
Step 3	<p><b>ErpsPortType</b></p> <p><b>Example:</b> Switch(config-controller)# ErpsPortType</p>	Enters the ErpsPortType mode.
Step 4	<p><b>setErpsInstConfig erpsConfig</b> {<b>erpsInst</b> <i>erpsInst_number</i>   <b>mep</b> {<b>port0</b> {<b>sf</b> <i>sf_number</i>   <b>aps</b> <i>aps_number</i>}   <b>port1</b> {<b>sf</b> <i>sf_number</i>   <b>aps</b> <i>aps_number</i>}}   <b>ringType</b> {<b>major</b>   <b>sub</b>}}</p> <p><b>Example:</b> Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig erpsInst 1 Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig mep port0 aps 100 Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig mep port0 sf 100 Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig mep port1 aps 99 Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig mep port1 sf 99 Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig port0 3 Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig port1 5 Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig ringType major</p>	<p>Sets ERPS configuration.</p> <ul style="list-style-type: none"> <li>• <b>erpsConfig</b>—Specifies the ERPS configuration.</li> <li>• <b>erpsInst</b>— Specifies the ERPS instance.</li> <li>• <i>erpsInst_number</i>—ERPS instance number</li> <li>• <b>mep</b>—Specifies the MEP configuration.</li> <li>• <b>port0</b>—Selects the ERPS port 0 interface.</li> <li>• <b>port1</b>—Selects the ERPS port 0 interface.</li> <li>• <b>sf</b>—Specifies signal fail MEP.</li> <li>• <i>sf_number</i>—Signal fail MEP number.</li> <li>• <b>aps</b>—Specifies the APS MEP.</li> <li>• <i>aps_number</i>— APS MEP number.</li> <li>• <b>ringType</b>—Specifies type of ring.</li> <li>• <b>major</b>—Specifies the major ring.</li> <li>• <b>sub</b>—Specifies the sub ring.</li> </ul>
Step 5	<p><b>setErpsInstProperties erpsInstconfig</b> {<b>wtrTime</b> <i>time_in_minutes</i>   <b>erpsInst</b> <i>erp_instance_number</i>   <b>rplPort</b> {<b>port0</b>   <b>port1</b>}   <b>rplRole</b> {<b>owner</b>   <b>neighbour</b>}   <b>vlan</b> {<b>vlanList</b> <i>vlan_list_number</i>   <b>add</b>   <b>remove</b>   <b>none</b>}}</p> <p><b>Example:</b> Switch(config-controller-ErpsPortType)# setErpsInstProperties erpsInstconfig wtrTime 1 Switch(config-controller-ErpsPortType)# setErpsInstProperties erpsInstconfig erpsInst 1 Switch(config-controller-ErpsPortType)# setErpsInstProperties erpsInstconfig rplPort port0 Switch(config-controller-ErpsPortType)# setErpsInstProperties erpsInstconfig rplRole neighbour Switch(config-controller-ErpsPortType)# setErpsInstProperties erpsInstconfig vlan vlanList 2-10 Switch(config-controller-ErpsPortType)# setErpsInstProperties erpsInstconfig wtrTime 1</p>	<p>Sets ERPS instance.</p> <ul style="list-style-type: none"> <li>• <b>wtrTime</b>— Specifies the WTR time.</li> <li>• <i>time_in_minutes</i>—WTR time in minutes. Allowed range is 1, 5-12.</li> <li>• <b>erpsInst</b>—Specifies the ERPS instance.</li> <li>• <i>erp_instance_number</i>—ERPS instance number.</li> <li>• <b>rplPort</b>—Specifies the RPL port.</li> <li>• <b>port0</b>—Selects the ERPS port 0 interface.</li> <li>• <b>port1</b>— Selects the ERPS port 1 interface.</li> <li>• <b>rplRole</b>—Specifies the RPL role.</li> <li>• <b>owner</b>—Specifies the RPL owner.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>neighbour</b>—Specifies the RPL neighbour.</li> <li>• <b>vlan</b>—Specifies the VLAN configuration.</li> <li>• <b>vlanList</b>—Specifies the VLAN list.</li> <li>• <i>vlan_list_number</i>—VLAN list number.</li> <li>• <b>add</b>—Adds to the set of included VLANs.</li> <li>• <b>remove</b>—Removes from the set of included VLANs.</li> <li>• <b>none</b>—Does not include any VLANs.</li> </ul>
<b>Step 6</b>	<b>setErpsInstProperties review</b>  <b>Example:</b> Switch(config-controller-ErpsPortType)# setErpsInstProperties review	Displays the configuration.
<b>Step 7</b>	<b>setErpsInstProperties commit</b>  <b>Example:</b> Switch(config-controller-ErpsPortType)# setErpsInstProperties commit	Sends the configuration to NID.
<b>Step 8</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ErpsPortType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to configure ERPS on NID-2:

```
Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig erpsInst 1
Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig mep port0 aps 100
Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig mep port0 sf 100
Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig mep port1 aps 99
Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig mep port1 sf 99
Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig port0 3
Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig port1 5
Switch(config-controller-ErpsPortType)# setErpsInstConfig erpsConfig ringType major

Switch(config-controller-ErpsPortType)# setErpsInstProperties erpsInstconfig wtrTime 1
Switch(config-controller-ErpsPortType)# setErpsInstProperties erpsInstconfig erpsInst 1
Switch(config-controller-ErpsPortType)# setErpsInstProperties erpsInstconfig rplPort port0
Switch(config-controller-ErpsPortType)# setErpsInstProperties erpsInstconfig rplRole neighbour
Switch(config-controller-ErpsPortType)# setErpsInstProperties erpsInstconfig vlan vlanList
2-10
Switch(config-controller-ErpsPortType)# setErpsInstProperties erpsInstconfig wtrTime 1

Switch(config-controller-ErpsPortType)# setErpsInstProperties review
Switch(config-controller-ErpsPortType)# setErpsInstProperties commit
Switch(config-controller-ErpsPortType)# exit
```



## Configuring ERPS on the UPE NID Controller

To configure ERPS on the UPE NID Controller, such as Cisco ME 3600X Series Ethernet Access Switch, complete the following steps.

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>enable</b>  <b>Example:</b> Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
<b>Step 2</b>	<b>configure terminal</b>  <b>Example:</b> Device# configure terminal	Enters global configuration mode.
<b>Step 3</b>	<b>ethernet ring g8032 ring-name</b>  <b>Example:</b> Device(config)# ethernet ring g8032 ring1	Specifies the Ethernet ring and enters Ethernet ring port configuration mode.
<b>Step 4</b>	<b>port0 interface type number</b>  <b>Example:</b> Device(config-erp-ring)# port0 interface fastethernet 0/1/0	Connects port0 of the local node of the interface to the Ethernet ring and enters Ethernet ring protection mode.
<b>Step 5</b>	<b>monitor service instance instance-id</b>  <b>Example:</b> Device(config-erp-ring-port)# monitor service instance 1	Assigns the Ethernet service instance to monitor the ring port (port0) and detect ring failures.
<b>Step 6</b>	<b>exit</b>  <b>Example:</b> Device(config-erp-ring-port)# exit	Exits Ethernet ring port configuration mode.
<b>Step 7</b>	<b>port1 {interfacetype number   none}</b>  <b>Example:</b> Device(config-erp-ring)# port1 interface fastethernet 0/1/1	Connects port1 of the local node of the interface to the Ethernet ring and enters Ethernet ring protection mode.

	Command or Action	Purpose
<b>Step 8</b>	<b>monitor service instance</b> <i>instance-id</i>  <b>Example:</b> <pre>Device(config-erp-ring-port)# monitor service instance 2</pre>	Assigns the Ethernet service instance to monitor the ring port (port1) and detect ring failures. <ul style="list-style-type: none"> <li>The interface (to which port1 is attached) must be a subinterface of the main interface.</li> </ul>
<b>Step 9</b>	<b>exit</b>  <b>Example:</b> <pre>Device(config-erp-ring-port)# exit</pre>	Exits Ethernet ring port configuration mode.
<b>Step 10</b>	<b>exclusion-list vlan-ids</b> <i>vlan-id</i>  <b>Example:</b> <pre>Device(config-erp-ring)# exclusion-list vlan-ids 2</pre>	Specifies VLANs that are unprotected by the Ethernet ring protection mechanism.
<b>Step 11</b>	<b>open-ring</b>  <b>Example:</b> <pre>Device(config-erp-ring)# open-ring</pre>	Specifies the Ethernet ring as an open ring.
<b>Step 12</b>	<b>instance</b> <i>instance-id</i>  <b>Example:</b> <pre>Device(config-erp-ring)# instance 1</pre>	Configures the Ethernet ring instance and enters Ethernet ring instance configuration mode.
<b>Step 13</b>	<b>description</b> <i>descriptive-name</i>  <b>Example:</b> <pre>Device(config-erp-inst)# description cisco_customer_instance</pre>	Specifies a descriptive name for the Ethernet ring instance.
<b>Step 14</b>	<b>profile</b> <i>profile-name</i>  <b>Example:</b> <pre>Device(config-erp-inst)# profile profile1</pre>	Specifies the profile associated with the Ethernet ring instance.
<b>Step 15</b>	<b>rpl</b> {port0   port1} {owner   neighbor   next-neighbor} }  <b>Example:</b> <pre>Device(config-erp-inst)# rpl port0 neighbor</pre>	Specifies the Ethernet ring port on the local node as the RPL owner, neighbor, or next neighbor.

	Command or Action	Purpose
<b>Step 16</b>	<b>inclusion-list vlan-ids</b> <i>vlan-id</i>  <b>Example:</b> <pre>Device(config-erp-inst)# inclusion-list vlan-ids 11</pre>	Specifies VLANs that are protected by the Ethernet ring protection mechanism.
<b>Step 17</b>	<b>aps-channel</b>  <b>Example:</b> <pre>Device(config-erp-inst)# aps-channel</pre>	Enters Ethernet ring instance aps-channel configuration mode.
<b>Step 18</b>	<b>level</b> <i>level-value</i>  <b>Example:</b> <pre>Device(config-erp-inst-aps)# level 5</pre>	Specifies the Automatic Protection Switching (APS) message level for the node on the Ethernet ring. <ul style="list-style-type: none"> <li>• All nodes in the Ethernet ring must be configured with the same level.</li> </ul>
<b>Step 19</b>	<b>port0 service instance</b> <i>instance-id</i>  <b>Example:</b> <pre>Device(config-erp-inst-aps)# port0 service instance 100</pre>	Associates APS channel information with port0.
<b>Step 20</b>	<b>port1 service instance</b> { <i>instance-id</i>   none }  <b>Example:</b> <pre>Device(config-erp-inst-aps)# port1 service instance 100</pre>	Associates APS channel information with port1.
<b>Step 21</b>	<b>end</b>  <b>Example:</b> <pre>Device(config-erp-inst-aps)# end</pre>	Returns to user EXEC mode.

### Configuration Example

The example shows how to configure ERPS on the UPE NID Controller:

```
!
ethernet cfm domain W-N-V2000 level 0
service W-N-V2000 evc evc2000 vlan 2000 direction down
  continuity-check
  continuity-check interval 1s
  efd notify g8032
!
!
interface GigabitEthernet0/1
```

```

switchport trunk allowed vlan none
switchport mode trunk
!
service instance 2000 ethernet evc2000
  encapsulation dot1q 2000
  bridge-domain 2000
  cfm mep domain W-N-V2000 mpid 102
  rmep mpid 101
!
!
interface GigabitEthernet0/20
switchport trunk allowed vlan none
switchport mode trunk
!
service instance 2000 ethernet evc2000
  encapsulation dot1q 2000
  bridge-domain 2000
  cfm mep domain W-N-V2000 mpid 104
  rmep mpid 103
!
!
ethernet ring g8032 profile 1
timer wtr 1
!
ethernet ring g8032 1
port0 interface GigabitEthernet0/1
port1 interface GigabitEthernet0/20
instance 1
  profile 1
  inclusion-list vlan-ids 2-10,2000
  aps-channel
  level 0
  port0 service instance 2000
  port1 service instance 2000
!
!

```

## Verifying ERPS

Use the following command to verify the ERPS status on the controller.

- **showErpsConfig showErpsReq erpsInstList 1**

This command displays the ERPS status on the NID. The following is a sample output from the command:

```

Switch(config-controller-ErpsPortType) # showErpsConfig showErpsReq erpsInstList 1
Switch(config-controller-ErpsPortType) # showErpsConfig review

```

```

showErpsConfig reviewCommands in queue:
  showErpsConfig showErpsReq erpsInstList 1

```

```

Switch(config-controller-ErpsPortType) # showErpsConfig commit

```

```

Stat = 0ShowErpsConfig_Output.erpsInfo.erpsInstance[0].grpId = 1
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].config.ringType.t = 1
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].config.ringType.u.major
= 'major'
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].config.virtualConnection.t
= 2
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].config.virtualConnection.u.disable
= 'Disable'
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].config.interconnect.t
= 2

```

```

ShowErpsConfig_Output.erpsInfo.erpsInstance[0].config.interconnect.u.disable
= 'Disable'
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].config.instance = 0
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].config.port0 = 3
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].config.port1 = 4
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].config.mep.port0.sf =
100
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].config.mep.port0.aps
= 100
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].config.mep.port1.sf =
99
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].config.mep.port1.aps
= 99
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].instConfig.guardTime
= 500
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].instConfig.wtrTime =
1
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].instConfig.revertive.t
= 1
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].instConfig.revertive.u.enable
= 'Enable'
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].instConfig.version.t
= 2
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].instConfig.version.u.v2
= 'V2'
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].instConfig.topologyChangePropagate.t
= 2
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].instConfig.topologyChangePropagate.u.disable
= 'Disable'
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].instConfig.holdoff =
0
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].instConfig.rplRole.t
= 1
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].instConfig.rplRole.u.owner
= 'owner'
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].instConfig.rplPort.t
= 1
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].instConfig.rplPort.u.port0
= 'port0'
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].instConfig.vlan.t = 1
ShowErpsConfig_Output.erpsInfo.erpsInstance[0].instConfig.vlan.u.vlanList
=
'2,3,4,5,6,7,8,9,10,21,22,23,24,25,26,27,28,29,30,31,32,33,34,35,36,37,38,39,40,1023,1024,1022,1021,1013,1012'

ShowErpsConfig Commit Success!!!

```

- **showErpsStats erpsShowStateReq erpsInst 1**

This command displays the ERPS status on the NID. The following is a sample output from the command:

```

Switch(config-controller-EpsPortType) # showErpsStats erpsShowStateReq erpsInst 1
Switch(config-controller-EpsPortType) # showErpsStats erpsShowStateReq show brief
Switch(config-controller-EpsPortType) # showErpsstats commit

ShowErpsStats_Output.erpsState.erpsInst[0].grpId = 1
ShowErpsStats_Output.erpsState.erpsInst[0].show.t = 1
ShowErpsStats_Output.erpsState.erpsInst[0].show.u.brief.grpId = 1
ShowErpsStats_Output.erpsState.erpsInst[0].show.u.brief.type = 'Maj'

```

```
ShowErpsStats_Output.erpsState.erpsInst[0].show.u.brief.version = '2'  
ShowErpsStats_Output.erpsState.erpsInst[0].show.u.brief.port0 =  
'GigabitEthernet 1/3'  
ShowErpsStats_Output.erpsState.erpsInst[0].show.u.brief.port0Lnk =  
'U'  
ShowErpsStats_Output.erpsState.erpsInst[0].show.u.brief.port0Blk =  
'B'  
ShowErpsStats_Output.erpsState.erpsInst[0].show.u.brief.majGrp = ''  
ShowErpsStats_Output.erpsState.erpsInst[0].show.u.brief.rplRole =  
'Ownr'  
ShowErpsStats_Output.erpsState.erpsInst[0].show.u.brief.rplPort =  
'Port0'  
ShowErpsStats_Output.erpsState.erpsInst[0].show.u.brief.rplBlk = 'Y'  
ShowErpsStats_Output.erpsState.erpsInst[0].show.u.brief.fsmState =  
'IDLE'  
ShowErpsStats_Output.erpsState.erpsInst[0].show.u.brief.rApsTx = 'Y'  
ShowErpsStats_Output.erpsState.erpsInst[0].show.u.brief.rApsPort0Rx  
= ' '  
ShowErpsStats_Output.erpsState.erpsInst[0].show.u.brief.fop = 'N'  
ShowErpsStats_Output.erpsState.erpsInst[0].show.u.brief.port1 =  
'GigabitEthernet 1/4'  
ShowErpsStats_Output.erpsState.erpsInst[0].show.u.brief.port1Lnk =  
'U'  
ShowErpsStats_Output.erpsState.erpsInst[0].show.u.brief.port1Blk =  
'U'  
ShowErpsStats_Output.erpsState.erpsInst[0].show.u.brief.revertive =  
'Rev'  
ShowErpsStats_Output.erpsState.erpsInst[0].show.u.brief.ringType =  
'_'  
ShowErpsStats_Output.erpsState.erpsInst[0].show.u.brief.rplRole_1 =  
' '  
ShowErpsStats_Output.erpsState.erpsInst[0].show.u.brief.rplPort_1 =  
' '  
ShowErpsStats_Output.erpsState.erpsInst[0].show.u.brief.rplBlk_1 = ''  
ShowErpsStats_Output.erpsState.erpsInst[0].show.u.brief.rApsPort1Rx  
= ' '  
  
ShowErpsStats Commit Success!!!
```



## Configuring L2CP

---

This document describes the Layer 2 Control Protocol (L2CP) feature and configuration steps to implement L2CP.

- [Prerequisites for Configuring L2CP, page 455](#)
- [Restrictions for Configuring L2CP, page 455](#)
- [Information About L2CP, page 456](#)
- [Configuring L2CP Using a UPE NID Controller, page 456](#)

### Prerequisites for Configuring L2CP

- NID must be added to the controller.
- NID must be accessible from the controller.

### Restrictions for Configuring L2CP

- When committing multiple lists, the list in previous commit is not retained. Example: a peer list 16-18 in a previous commit is replaced by a new commit of peer list 21.  
To retain multiple lists, you must specify the lists in a single commit. Example: peer list 16-18,21.
- Any L2CP processing configured using forward/peer/discard modes applies to all EVCs on the port.
- Provisioning L2CP in tunnel mode is not supported. You cannot prevent core switches from processing frame as a L2CP frame in a service provider network.
- To delete a previously configured discardList, you must configure **discard discardList** command with **no** before you commit the command. Otherwise, by default the previously configured value is retained.

Example:

```
setL2CPPortConfig l2cpPortConfiguration portNumber 6
setL2CPPortConfig l2cpPortConfiguration discard discardList no
```

## Information About L2CP

L2CP addresses the requirement for a bidirectional, IP-based protocol that operates across a number of access and aggregation network technologies such as Ethernet. The L2CP message exchange conveys status and control information between access devices and one or more other devices that require the information for executing local functions.

L2CP handling is required for edge switches providing Ethernet Virtual Connections (EVCs) in a service provider network.


In this case, UPE NID Controller and NID are used to establish an EVC between UNI ports of two Customer Premise Equipment (CPE).

The following options are available to provision L2CP on NID:

- **Forward**—The L2CP frame is forwarded to the network port like other layer 2 frames in the EVC.
- **Peer**—The L2CP frame is processed by a local protocol entity and is not forwarded.
- **Discard**—The L2CP frame is discarded.

The following figure shows the topology used for provisioning L2CP on NIDs using UPE NID Controllers.

**Figure 13: L2CP Topology**

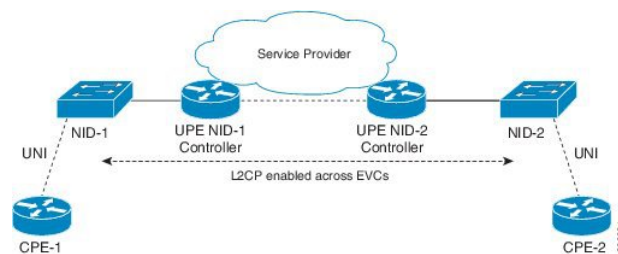

## Configuring L2CP Using a UPE NID Controller

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1 NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.



	Command or Action	Purpose
Step 3	<b>ProvisionL2CPPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionL2CPPortType	Enters the ProvisionL2CPPortType mode.
Step 4	<b>ProvisionL2CPPortType {default   exit   getL2CPPortConfig   no   setL2CPPortConfig}</b>  <b>Example:</b> Switch(config-controller)# ProvisionL2CPPortType	Sub-command options. <ul style="list-style-type: none"> <li>• <b>default</b>—Sets a command to its defaults.</li> <li>• <b>exit</b>—Exits from ProvisionL2CPPortType sub configuration mode.</li> <li>• <b>getL2CPPortConfig</b>—Retrieves current L2CP configuration request.</li> <li>• <b>no</b>—Negates a command or set its defaults.</li> <li>• <b>setL2CPPortConfig</b>—Configures L2CP forward on EVCs on this port.</li> </ul>
Step 5	<b>getL2CPPortConfig l2cpPort l2cpPort_number</b>  <b>Example:</b> Switch(config-controller-ProvisionL2CPPortType)# getL2CPPortConfig l2cpPort 5	Retrieves initial or default L2CP configuration. <ul style="list-style-type: none"> <li>• <b>l2cpPort</b>—Specifies L2CP port configuration request.</li> <li>• <b>l2cpPort_number</b>—L2CP port number. The valid range is from 1 to 6.</li> </ul>
Step 6	<b>setL2CPPortConfig l2cpPortConfiguration {enabled   portNumber portNumber   discard {discardList discardList_range}   forward {forwardList forwardList_range}   peer {peerList peerList_range}}</b>  <b>Example:</b> Switch(config-controller-ProvisionL2CPPortType)# setL2CPPortConfig l2cpPortConfiguration portNumber 5 Switch(config-controller-ProvisionL2CPPortType)# setL2CPPortConfig l2cpPortConfiguration enabled enable	Sets up L2CP forward/peer/discard configuration request on all EVCs on this port. <ul style="list-style-type: none"> <li>• <b>enabled</b>—Specifies L2CP configuration enabled/disabled on this port.</li> <li>• <b>portNumber</b>—Specifies port number to configure L2CP.</li> <li>• <b>portNumber</b>—Port number to configure L2CP. The valid range is from 1 to 6.</li> <li>• <b>discard</b>—Discards L2CP frames.</li> <li>• <b>discardList</b>— Selects BPDU addresses and GARP addresses.</li> <li>• <b>discardList_range</b>— BPDU addresses (0-15) and GARP addresses (16-31).</li> <li>• <b>forward</b>— Allows forwarding of L2CP frames.</li> <li>• <b>forwardList</b>—Selects BPDU addresses and GARP addresses.</li> <li>• <b>forwardList_range</b>— BPDU addresses (0-15) and GARP addresses (16-31).</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>peer</b>—Redirects L2CP frames to local protocol entity.</li> <li>• <b>peerList</b>—Selects BPDU addresses and GARP addresses.</li> <li>• <b>peerList_range</b>— BPDU addresses (0-15) and GARP addresses (16-31).</li> </ul>
<b>Step 7</b>	<b>setL2CPPortConfig review</b>  <b>Example:</b> Switch(config-controller-L2CPPortType) # setL2CPPortConfig review	(Optional) Displays the configuration.
<b>Step 8</b>	<b>setL2CPPortConfig flush</b>  <b>Example:</b> Switch(config-controller-L2CPPortType) # setL2CPPortConfig flush	(Optional) Flushes the configuration.
<b>Step 9</b>	<b>setL2CPPortConfig commit</b>  <b>Example:</b> Switch(config-controller-L2CPPortType) # setL2CPPortConfig commit	Sends the configuration to NID.
<b>Step 10</b>	<b>getL2CPPortConfig l2cpPort l2cpPort_number</b>  <b>Example:</b> Switch(config-controller-ProvisionL2CPPortType) # getL2CPPortConfig l2cpPort 5	Retrieves current L2CP configuration for a specified port. <ul style="list-style-type: none"> <li>• <b>l2cpPort</b>—Specifies L2CP port configuration request.</li> <li>• <b>l2cpPort_number</b>—L2CP port number. The valid range is from 1 to 6.</li> </ul>
<b>Step 11</b>	<b>getL2CPPortConfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionL2CPPortType) # getL2CPPortConfig review	(Optional) Displays the configuration.
<b>Step 12</b>	<b>getL2CPPortConfig flush</b>  <b>Example:</b> Switch(config-controller-ProvisionL2CPPortType) # getL2CPPortConfig flush	(Optional) Flushes the configuration.
<b>Step 13</b>	<b>getL2CPPortConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionL2CPPortType) # getL2CPPortConfig commit	Sends the configuration to NID.

	Command or Action	Purpose
Step 14	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionL2CPPortType)# exit	Exits to the config-controller mode.

### Configuration Example

- The example shows how to enable L2CP on a port:

```
Switch(config)#controller nid 1/1
Switch(config-controller)#
Switch(config-controller)#ProvisionL2CPPortType ?
<cr>

Switch(config-controller-ProvisionL2CPPortType)#?
ProvisionL2CPPortType sub-mode commands:
  default          Set a command to its defaults
  exit             Exit from ProvisionL2CPPortType sub configuration mode
  getL2CPPortConfig Get current L2CP configuration request
  no              Negate a command or set its defaults
  setL2CPPortConfig Configure L2CP forward on EVCs on this port

Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig ?
  commit          commit setL2CPPortConfig
  flush          flush all setL2CPPortConfig commands from queue
  l2cpPortConfiguration Configure L2CP forward on EVCs on this port
  review         review setL2CPPortConfig commands

Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig l2
Switch(config-controller-ProvisionL2CPPortType)#$pPortConfiguration ?
  discard        Discard L2CP frames
  enabled        L2CP configuration enabled/disabled on this port
  forward        Allow forwarding of L2CP frames
  peer          Redirect L2CP frames to local protocol entity
  portNumber     Port number to configure L2CP

Switch(config-controller-ProvisionL2CPPortType)#$guration portNumber 3
Switch(config-controller-ProvisionL2CPPortType)#$guration enabled enable

Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig review
Commands in queue:
  setL2CPPortConfig l2cpPortConfiguration portNumber 3
  setL2CPPortConfig l2cpPortConfiguration enabled enable

Commands in queue:
  setL2CPPortConfig l2cpPortConfiguration portNumber 3
  setL2CPPortConfig l2cpPortConfiguration enabled enable
Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig commit
SetL2CPPortConfig Commit Success!!!
```

When SetL2CPPortConfig operation is executed on a NID from a CPE NID Controller, initially GetL2CPPortConfig fetches the current configuration. This is followed by SetL2CPPortConfig to set the new L2CP configuration. The following is a sample output on the NID.

```
#
Decoding of Request message was successful
Decoded record:
GetL2CPPortConfig_Output.l2cpPortConfiguration.enabled = true
GetL2CPPortConfig_Output.l2cpPortConfiguration.portNumber = 3
GetL2CPPortConfig_Output.l2cpPortConfiguration.discard.discardList =
```

```

''
GetL2CPPortConfig_Output.l2cpPortConfiguration.forward.forwardList =
'16-31'
GetL2CPPortConfig_Output.l2cpPortConfiguration.peer.peerList = '0-15'
GetL2CPPortConfig_Output.xmlns:ns0 = "http://new.webservice.namespace"
GetL2CPPortConfig_Output.xmlns:http =
"http://schemas.xmlsoap.org/wsdl/http/"
GetL2CPPortConfig_Output.xmlns:mime =
"http://schemas.xmlsoap.org/wsdl/mime/"
GetL2CPPortConfig_Output.xmlns:soap =
"http://schemas.xmlsoap.org/wsdl/soap/"
GetL2CPPortConfig_Output.xmlns:soapenc =
"http://schemas.xmlsoap.org/soap/encoding/"
GetL2CPPortConfig_Output.xmlns:wsdl =
"http://schemas.xmlsoap.org/wsdl/"
Decoding of Request message was successful
Decoded record:
SetL2CPPortConfig_Input.l2cpPortConfiguration.enabled = true
SetL2CPPortConfig_Input.l2cpPortConfiguration.portNumber = 3
SetL2CPPortConfig_Input.l2cpPortConfiguration.discard.discardList =
''
SetL2CPPortConfig_Input.l2cpPortConfiguration.forward.forwardList =
'16-31'
SetL2CPPortConfig_Input.l2cpPortConfiguration.peer.peerList = '0-15'
Encoding of Response message was successful
Encoded record:
SetL2CPPortConfig_Output.l2cpPortConfigResponse = 0
SetL2CPPortConfig_Output.xmlns:ns0 = "http://new.webservice.namespace"
SetL2CPPortConfig_Output.xmlns:http =
"http://schemas.xmlsoap.org/wsdl/http/"
SetL2CPPortConfig_Output.xmlns:mime =
"http://schemas.xmlsoap.org/wsdl/mime/"
SetL2CPPortConfig_Output.xmlns:soap =
"http://schemas.xmlsoap.org/wsdl/soap/"
SetL2CPPortConfig_Output.xmlns:soapenc =
"http://schemas.xmlsoap.org/soap/encoding/"
SetL2CPPortConfig_Output.xmlns:wsdl =
"http://schemas.xmlsoap.org/wsdl/"

```

- The examples shows how to enable L2CP Forward on a port.

```

Switch(config)#controller nid 1/1
Switch(config-controller)#
Switch(config-controller)#ProvisionL2CPPortType ?
<cr>

Switch(config-controller-ProvisionL2CPPortType)#?
ProvisionL2CPPortType sub-mode commands:
  default          Set a command to its defaults
  exit             Exit from ProvisionL2CPPortType sub configuration mode
  getL2CPPortConfig Get current L2CP configuration request
  no               Negate a command or set its defaults
  setL2CPPortConfig Configure L2CP forward on EVCs on this port

Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig ?
  commit          commit setL2CPPortConfig
  flush           flush all setL2CPPortConfig commands from queue
  l2cpPortConfiguration Configure L2CP forward on EVCs on this port
  review          review setL2CPPortConfig commands

Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig l2
Switch(config-controller-ProvisionL2CPPortType)#$pPortConfiguration ?
  discard         Discard L2CP frames

```

```

enabled      L2CP configuration enabled/disabled on this port
forward      Allow forwarding of L2CP frames
peer         Redirect L2CP frames to local protocol entity
portNumber   Port number to configure L2CP

```

```

Switch(config-controller-ProvisionL2CPPortType)#$uration portNumber 3
Switch(config-controller-ProvisionL2CPPortType)#$uration enabled enable
Switch(config-controller-ProvisionL2CPPortType)#$uration forward for
Switch(config-controller-ProvisionL2CPPortType)#$orward forwardList 1-14
Switch(config-controller-ProvisionL2CPPortType)#
Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig review
Commands in queue:
    setL2CPPortConfig l2cpPortConfiguration forward forwardList 1-14
    setL2CPPortConfig l2cpPortConfiguration portNumber 3
    setL2CPPortConfig l2cpPortConfiguration enabled enable
Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig commit
SetL2CPPortConfig Commit Success!!!

```

The following is a sample output on the NID.

```

#
Decoding of Request message was successful
Decoded record:
GetL2CPPortConfig_Input.l2cpPort = 3
Encoding of Response message was successful
Encoded record:
GetL2CPPortConfig_Output.l2cpPortConfiguration.enabled = true
GetL2CPPortConfig_Output.l2cpPortConfiguration.portNumber = 3
GetL2CPPortConfig_Output.l2cpPortConfiguration.discard.discardList =
''
GetL2CPPortConfig_Output.l2cpPortConfiguration.forward.forwardList =
'16-31'
GetL2CPPortConfig_Output.l2cpPortConfiguration.peer.peerList = '0-15'
GetL2CPPortConfig_Output.xmlns:ns0 = "http://new.webservice.namespace"
GetL2CPPortConfig_Output.xmlns:http =
"http://schemas.xmlsoap.org/wsdl/http/"
GetL2CPPortConfig_Output.xmlns:mime =
"http://schemas.xmlsoap.org/wsdl/mime/"
GetL2CPPortConfig_Output.xmlns:soap =
"http://schemas.xmlsoap.org/wsdl/soap/"
GetL2CPPortConfig_Output.xmlns:soapenc =
"http://schemas.xmlsoap.org/soap/encoding/"
GetL2CPPortConfig_Output.xmlns:wsdl =
"http://schemas.xmlsoap.org/wsdl/"
Decoding of Request message was successful
Decoded record:
SetL2CPPortConfig_Input.l2cpPortConfiguration.enabled = true
SetL2CPPortConfig_Input.l2cpPortConfiguration.portNumber = 3
SetL2CPPortConfig_Input.l2cpPortConfiguration.discard.discardList =
''
SetL2CPPortConfig_Input.l2cpPortConfiguration.forward.forwardList =
'1-14'
SetL2CPPortConfig_Input.l2cpPortConfiguration.peer.peerList = '0-15'
Encoding of Response message was successful
Encoded record:
SetL2CPPortConfig_Output.l2cpPortConfigResponse = 0
SetL2CPPortConfig_Output.xmlns:ns0 = "http://new.webservice.namespace"
SetL2CPPortConfig_Output.xmlns:http =
"http://schemas.xmlsoap.org/wsdl/http/"
SetL2CPPortConfig_Output.xmlns:mime =
"http://schemas.xmlsoap.org/wsdl/mime/"
SetL2CPPortConfig_Output.xmlns:soap =

```

```
"http://schemas.xmlsoap.org/wsdl/soap/"
SetL2CPPortConfig_Output.xmlns:soapenc =
"http://schemas.xmlsoap.org/soap/encoding/"
SetL2CPPortConfig_Output.xmlns:wsdl =
"http://schemas.xmlsoap.org/wsdl/"

#show running-config interface GigabitEthernet 1/3
```

```
Building configuration...
interface GigabitEthernet 1/3
 switchport hybrid allowed vlan 1
 switchport hybrid acceptable-frame-type untagged
 switchport hybrid ingress-filtering
 switchport hybrid port-type unaware
 switchport mode trunk
 lldp med type end-point
 qos dscp-remark rewrite
 evc l2cp forward 1-14
```

- The examples shows how to enable L2CP Forward, Peer, Discard on a port.

```
Switch(config)#controller nid 1/1
Switch(config-controller)#
Switch(config-controller)#ProvisionL2CPPortType ?
 <cr>

Switch(config-controller-ProvisionL2CPPortType)#?
ProvisionL2CPPortType sub-mode commands:
 default          Set a command to its defaults
 exit             Exit from ProvisionL2CPPortType sub configuration mode
 getL2CPPortConfig Get current L2CP configuration request
 no              Negate a command or set its defaults
 setL2CPPortConfig Configure L2CP forward on EVCs on this port

Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig ?
 commit          commit setL2CPPortConfig
 flush          flush all setL2CPPortConfig commands from queue
 l2cpPortConfiguration Configure L2CP forward on EVCs on this port
 review         review setL2CPPortConfig commands

Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig l2
Switch(config-controller-ProvisionL2CPPortType)#$pPortConfiguration ?
 discard        Discard L2CP frames
 enabled        L2CP configuration enabled/disabled on this port
 forward        Allow forwarding of L2CP frames
 peer           Redirect L2CP frames to local protocol entity
 portNumber     Port number to configure L2CP

Switch(config-controller-ProvisionL2CPPortType)#$guration portNumber 3
Switch(config-controller-ProvisionL2CPPortType)#$guration enabled enable
Switch(config-controller-ProvisionL2CPPortType)#$guration forward for
Switch(config-controller-ProvisionL2CPPortType)#$orward forwardList 1-14
Switch(config-controller-ProvisionL2CPPortType)#$peer peerList 16-20
Switch(config-controller-ProvisionL2CPPortType)#$guration discard di
Switch(config-controller-ProvisionL2CPPortType)#$iscard discardList 19
Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig review
Commands in queue:
 setL2CPPortConfig l2cpPortConfiguration portNumber 3
 setL2CPPortConfig l2cpPortConfiguration enabled enable
 setL2CPPortConfig l2cpPortConfiguration peer peerList 16-20
 setL2CPPortConfig l2cpPortConfiguration discard discardList 19
 setL2CPPortConfig l2cpPortConfiguration forward forwardList 1-14

Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig review
Commands in queue:
 setL2CPPortConfig l2cpPortConfiguration portNumber 3
 setL2CPPortConfig l2cpPortConfiguration enabled enable
 setL2CPPortConfig l2cpPortConfiguration peer peerList 16-20
 setL2CPPortConfig l2cpPortConfiguration discard discardList 19
```

```

        setL2CPPortConfig l2cpPortConfiguration forward forwardList 1-14
Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig commit
SetL2CPPortConfig Commit Success!!!

```

The following is a sample output on the NID.

```

# Decoding of Request message was successful
Decoded record:
GetL2CPPortConfig_Input.l2cpPort = 3
Encoding of Response message was successful
Encoded record:
GetL2CPPortConfig_Output.l2cpPortConfiguration.enabled = true
GetL2CPPortConfig_Output.l2cpPortConfiguration.portNumber = 3
GetL2CPPortConfig_Output.l2cpPortConfiguration.discard.discardList =
' '
GetL2CPPortConfig_Output.l2cpPortConfiguration.forward.forwardList =
'1-14'
GetL2CPPortConfig_Output.l2cpPortConfiguration.peer.peerList = '0-15'
GetL2CPPortConfig_Output.xmlns:ns0 = "http://new.webservice.namespace"
GetL2CPPortConfig_Output.xmlns:http =
"http://schemas.xmlsoap.org/wsdl/http/"
GetL2CPPortConfig_Output.xmlns:mime =
"http://schemas.xmlsoap.org/wsdl/mime/"
GetL2CPPortConfig_Output.xmlns:soap =
"http://schemas.xmlsoap.org/wsdl/soap/"
GetL2CPPortConfig_Output.xmlns:soapenc =
"http://schemas.xmlsoap.org/soap/encoding/"
GetL2CPPortConfig_Output.xmlns:wSDL =
"http://schemas.xmlsoap.org/wsdl/"
Decoding of Request message was successful
Decoded record:
SetL2CPPortConfig_Input.l2cpPortConfiguration.enabled = true
SetL2CPPortConfig_Input.l2cpPortConfiguration.portNumber = 3
SetL2CPPortConfig_Input.l2cpPortConfiguration.discard.discardList =
'19'
SetL2CPPortConfig_Input.l2cpPortConfiguration.forward.forwardList =
'1-14'
SetL2CPPortConfig_Input.l2cpPortConfiguration.peer.peerList = '16-20'
Encoding of Response message was successful
Encoded record:
SetL2CPPortConfig_Output.l2cpPortConfigResponse = 0
SetL2CPPortConfig_Output.xmlns:ns0 = "http://new.webservice.namespace"
SetL2CPPortConfig_Output.xmlns:http =
"http://schemas.xmlsoap.org/wsdl/http/"
SetL2CPPortConfig_Output.xmlns:mime =
"http://schemas.xmlsoap.org/wsdl/mime/"
SetL2CPPortConfig_Output.xmlns:soap =
"http://schemas.xmlsoap.org/wsdl/soap/"
SetL2CPPortConfig_Output.xmlns:soapenc =
"http://schemas.xmlsoap.org/soap/encoding/"
SetL2CPPortConfig_Output.xmlns:wSDL =
"http://schemas.xmlsoap.org/wsdl/"

# show running-config interface GigabitEthernet 1/3

Building configuration...
interface GigabitEthernet 1/3
  switchport hybrid allowed vlan 1
  switchport hybrid acceptable-frame-type untagged
  switchport hybrid ingress-filtering

```

```

switchport hybrid port-type unaware
switchport mode trunk
lldp med type end-point
qos dscp-remark rewrite
evc l2cp peer 16-18,20 forward 1-14 discard 19
!
end

```

- The examples shows how to disable or reset L2CP Discard on a port.

```

Switch(config)#controller nid 1/1
Switch(config-controller)#
Switch(config-controller)#ProvisionL2CPPortType ?
<cr>

Switch(config-controller-ProvisionL2CPPortType)#?
ProvisionL2CPPortType sub-mode commands:
  default      Set a command to its defaults
  exit         Exit from ProvisionL2CPPortType sub configuration mode
  getL2CPPortConfig  Get current L2CP configuration request
  no          Negate a command or set its defaults
  setL2CPPortConfig  Configure L2CP forward on EVCs on this port

Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig ?
  commit      commit setL2CPPortConfig
  flush       flush all setL2CPPortConfig commands from queue
  l2cpPortConfiguration  Configure L2CP forward on EVCs on this port
  review      review setL2CPPortConfig commands

Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig l2
Switch(config-controller-ProvisionL2CPPortType)#SpPortConfiguration ?
  discard     Discard L2CP frames
  enabled     L2CP configuration enabled/disabled on this port
  forward     Allow forwarding of L2CP frames
  peer        Redirect L2CP frames to local protocol entity
  portNumber  Port number to configure L2CP

Switch(config-controller-ProvisionL2CPPortType)#$guration portNumber 3
Switch(config-controller-ProvisionL2CPPortType)#$guration enabled enable
Switch(config-controller-ProvisionL2CPPortType)#$guration discard di
Switch(config-controller-ProvisionL2CPPortType)#$iscard discardList no
Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig review
Commands in queue:
  setL2CPPortConfig l2cpPortConfiguration portNumber 3
  setL2CPPortConfig l2cpPortConfiguration enabled enable
  setL2CPPortConfig l2cpPortConfiguration peer peerList 16-20
  setL2CPPortConfig l2cpPortConfiguration discard discardList 19
  setL2CPPortConfig l2cpPortConfiguration forward forwardList 1-14

Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig review
Commands in queue:
  setL2CPPortConfig l2cpPortConfiguration portNumber 3
  setL2CPPortConfig l2cpPortConfiguration enabled enable
  setL2CPPortConfig l2cpPortConfiguration discard discardList no

Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig commit
SetL2CPPortConfig Commit Success!!!

```

The following is a sample output on the NID.

```

# Decoding of Request message was successful
Decoded record:
GetL2CPPortConfig_Input.l2cpPort = 3
Encoding of Response message was successful
Encoded record:
GetL2CPPortConfig_Output.l2cpPortConfiguration.enabled = true
GetL2CPPortConfig_Output.l2cpPortConfiguration.portNumber = 3
GetL2CPPortConfig_Output.l2cpPortConfiguration.discard.discardList =
'19'

```



```

GetL2CPPortConfig_Output.l2cpPortConfiguration.forward.forwardList =
'1-14'
GetL2CPPortConfig_Output.l2cpPortConfiguration.peer.peerList = '16-20'
GetL2CPPortConfig_Output.xmlns:ns0 = "http://new.webservice.namespace"
GetL2CPPortConfig_Output.xmlns:http =
"http://schemas.xmlsoap.org/wsdl/http/"
GetL2CPPortConfig_Output.xmlns:mime =
"http://schemas.xmlsoap.org/wsdl/mime/"
GetL2CPPortConfig_Output.xmlns:soap =
"http://schemas.xmlsoap.org/wsdl/soap/"
GetL2CPPortConfig_Output.xmlns:soapenc =
"http://schemas.xmlsoap.org/soap/encoding/"
GetL2CPPortConfig_Output.xmlns:wSDL =
"http://schemas.xmlsoap.org/wsdl/"
Decoding of Request message was successful
Decoded record:
SetL2CPPortConfig_Input.l2cpPortConfiguration.enabled = true
SetL2CPPortConfig_Input.l2cpPortConfiguration.portNumber = 3
SetL2CPPortConfig_Input.l2cpPortConfiguration.discard.discardList =
'no'
SetL2CPPortConfig_Input.l2cpPortConfiguration.forward.forwardList =
'1-14'
SetL2CPPortConfig_Input.l2cpPortConfiguration.peer.peerList = '16-20'
Encoding of Response message was successful
Encoded record:
SetL2CPPortConfig_Output.l2cpPortConfigResponse = 0
SetL2CPPortConfig_Output.xmlns:ns0 = "http://new.webservice.namespace"
SetL2CPPortConfig_Output.xmlns:http =
"http://schemas.xmlsoap.org/wsdl/http/"
SetL2CPPortConfig_Output.xmlns:mime =
"http://schemas.xmlsoap.org/wsdl/mime/"
SetL2CPPortConfig_Output.xmlns:soap =
"http://schemas.xmlsoap.org/wsdl/soap/"
SetL2CPPortConfig_Output.xmlns:soapenc =
"http://schemas.xmlsoap.org/soap/encoding/"
SetL2CPPortConfig_Output.xmlns:wSDL =
"http://schemas.xmlsoap.org/wsdl/"

# show running-config interface GigabitEthernet 1/3

```

```

Building configuration...
interface GigabitEthernet 1/3
  switchport hybrid allowed vlan 1
  switchport hybrid acceptable-frame-type untagged
  switchport hybrid ingress-filtering
  switchport hybrid port-type unaware
  switchport mode trunk
  lldp med type end-point
  qos dscp-remark rewrite
  evc l2cp peer 16-20 forward 1-14

```

- The examples shows how to retrieve current configuration on a NID.

```

Switch(config-controller-ProvisionL2CPPortType)#getL2CPPortConfig ?
  commit      commit getL2CPPortConfig
  flush       flush all getL2CPPortConfig commands from queue
  l2cpPort    Get current L2CP configuration request
  review      review getL2CPPortConfig commands

Switch(config-controller-ProvisionL2CPPortType)#getL2CPPortConfig l2cpPort ?
<1-6> Get L2CP Port Configuration Request

```

```
Switch(config-controller-ProvisionL2CPPortType)#$Config l2cpPort 3 ?
<cr>
Switch(config-controller-ProvisionL2CPPortType)#getL2CPPortConfig review
Commands in queue:
    getL2CPPortConfig l2cpPort 3
Switch(config-controller-ProvisionL2CPPortType)#
Switch(config-controller-ProvisionL2CPPortType)#getL2CPPortConfig commit
GetL2CPPortConfig_Output.l2cpPortConfiguration.enabled = true
GetL2CPPortConfig_Output.l2cpPortConfiguration.portNumber = 3
GetL2CPPortConfig_Output.l2cpPortConfiguration.discard.discardList = 'no'
GetL2CPPortConfig_Output.l2cpPortConfiguration.forward.forwardList = '1-14'
GetL2CPPortConfig_Output.l2cpPortConfiguration.peer.peerList = '16-20'
```

GetL2CPPortConfig Commit Success!!!

The following is a sample output on the NID.

```
# Decoding of Request message was successful
Decoded record:
GetL2CPPortConfig_Input.l2cpPort = 3
Encoding of Response message was successful
Encoded record:
GetL2CPPortConfig_Output.l2cpPortConfiguration.enabled = true
GetL2CPPortConfig_Output.l2cpPortConfiguration.portNumber = 3
GetL2CPPortConfig_Output.l2cpPortConfiguration.discard.discardList =
'no'
GetL2CPPortConfig_Output.l2cpPortConfiguration.forward.forwardList =
'1-14'
GetL2CPPortConfig_Output.l2cpPortConfiguration.peer.peerList = '16-20'
GetL2CPPortConfig_Output.xmlns:ns0 = "http://new.webservice.namespace"
GetL2CPPortConfig_Output.xmlns:http =
"http://schemas.xmlsoap.org/wsdl/http/"
GetL2CPPortConfig_Output.xmlns:mime =
"http://schemas.xmlsoap.org/wsdl/mime/"
GetL2CPPortConfig_Output.xmlns:soap =
"http://schemas.xmlsoap.org/wsdl/soap/"
GetL2CPPortConfig_Output.xmlns:soapenc =
"http://schemas.xmlsoap.org/soap/encoding/"
GetL2CPPortConfig_Output.xmlns:wsdl =
"http://schemas.xmlsoap.org/wsdl/"
```

- The examples shows how to flush L2CP configuration on a port.

```
Switch(config)#controller nid 1/1
Switch(config-controller)#
Switch(config-controller)#ProvisionL2CPPortType ?
<cr>

Switch(config-controller-ProvisionL2CPPortType)#?
ProvisionL2CPPortType sub-mode commands:
    default      Set a command to its defaults
    exit         Exit from ProvisionL2CPPortType sub configuration mode
    getL2CPPortConfig  Get current L2CP configuration request
    no          Negate a command or set its defaults
    setL2CPPortConfig  Configure L2CP forward on EVCs on this port

Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig ?
commit          commit setL2CPPortConfig
flush          flush all setL2CPPortConfig commands from queue
l2cpPortConfiguration  Configure L2CP forward on EVCs on this port
review         review setL2CPPortConfig commands

Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig review
Commands in queue:
    setL2CPPortConfig l2cpPortConfiguration portNumber 3
    setL2CPPortConfig l2cpPortConfiguration enabled enable
```

```

        setL2CPPortConfig l2cpPortConfiguration forward forwardList 1-14
        setL2CPPortConfig l2cpPortConfiguration peer peerList 16-20
Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig flush
Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig review
No commands in queue

```

- The examples shows how to remove specific configuration CLI from a CPE NID controller.

```

Switch(config)#controller nid 1/1
Switch(config-controller)#
Switch(config-controller)#ProvisionL2CPPortType ?
  <cr>

Switch(config-controller-ProvisionL2CPPortType)#?
ProvisionL2CPPortType sub-mode commands:
  default          Set a command to its defaults
  exit             Exit from ProvisionL2CPPortType sub configuration mode
  getL2CPPortConfig Get current L2CP configuration request
  no              Negate a command or set its defaults
  setL2CPPortConfig Configure L2CP forward on EVCs on this port

Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig ?
  commit          commit setL2CPPortConfig
  flush          flush all setL2CPPortConfig commands from queue
  l2cpPortConfiguration Configure L2CP forward on EVCs on this port
  review         review setL2CPPortConfig commands

Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig review
Commands in queue:
  setL2CPPortConfig l2cpPortConfiguration portNumber 3
  setL2CPPortConfig l2cpPortConfiguration enabled enable
  setL2CPPortConfig l2cpPortConfiguration forward forwardList 1-14
  setL2CPPortConfig l2cpPortConfiguration peer peerList 16-20

Switch(config-controller-ProvisionL2CPPortType)#no setL2CPPortConfig l2cpPor$
Switch(config-controller-ProvisionL2CPPortType)#$n forward forwardList 1-14
Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig review
Commands in queue:
  setL2CPPortConfig l2cpPortConfiguration portNumber 3
  setL2CPPortConfig l2cpPortConfiguration enabled enable
  setL2CPPortConfig l2cpPortConfiguration peer peerList 16-20

Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig review
Commands in queue:
  setL2CPPortConfig l2cpPortConfiguration portNumber 3
  setL2CPPortConfig l2cpPortConfiguration enabled enable
  setL2CPPortConfig l2cpPortConfiguration peer peerList 16-20
Switch(config-controller-ProvisionL2CPPortType)#setL2CPPortConfig commit
SetL2CPPortConfig Commit Success!!!

```





## CHAPTER 20

# Configuring MAC Security

---

This document describes the MAC security feature and configuration steps to implement MAC security.

- [Prerequisites for Configuring MAC Security, page 469](#)
- [Information About MAC Security, page 469](#)
- [How to Provision MAC Security, page 470](#)
- [Verifying MAC Security, page 475](#)

## Prerequisites for Configuring MAC Security

- NID must be added to the controller.
- NID must be accessible from the controller.

## Information About MAC Security

You can use the MAC security feature to restrict input to an interface by limiting and identifying MAC addresses of the devices that are allowed to access the port. When you assign secure MAC addresses to a secure port, the port does not forward packets with source addresses outside the group of defined addresses. If you limit the number of secure MAC addresses to one and assign a single secure MAC address, the device attached to that port is assured the full bandwidth of the port.

# How to Provision MAC Security

## Configuring Port Security

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1 NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
Step 3	<b>ProvisionMacTableSecurityType</b>  <b>Example:</b> Switch(config-controller)# ProvisionMacTableSecurityType	Enters the ProvisionMacTableSecurityType mode.
Step 4	<b>portSecurityGlobalConfig portSecurityGlobalConfigReq {mode {disable   enable}   agingTime {time time   disable}}</b>  <b>Example:</b> Switch(config-controller-ProvisionMacTableSecurityType)# portSecurityGlobalConfig portSecurityGlobalConfigReq agingTime time 60 Switch(config-controller-ProvisionMacTableSecurityType)# portSecurityGlobalConfig portSecurityGlobalConfigReq mode enable	Port Security Global Configuration. <ul style="list-style-type: none"> <li>• <b>portSecurityGlobalConfigReq</b>—Specifies port security global configuration.</li> <li>• <b>mode</b>—Option to enable/disable port security.</li> <li>• <b>disable</b>—Disables port security globally.</li> <li>• <b>enable</b>—Enables port security globally.</li> <li>• <b>agingTime</b>—Enables or disables port security aging.</li> <li>• <b>time</b>—Enables and sets time.</li> <li>• <b>time</b>—Time. The valid range is from 10 to 10000000 seconds.</li> <li>• <b>disable</b>—Disables aging.</li> </ul>
Step 5	<b>portSecurityGlobalConfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionMacTableSecurityType)# portSecurityGlobalConfig review	Displays the configuration.

	Command or Action	Purpose
Step 6	<p><b>portSecurityGlobalConfig commit</b></p> <p><b>Example:</b>  Switch(config-controller-ProvisionMacTableSecurityType) #  portSecurityGlobalConfig commit</p>	Sends the configuration to NID.
Step 7	<p><b>portSecurityInterfaceConfig portSecurityInterfaceConfigReq</b>  {<b>interface_id</b> <i>interface_id</i>   <b>port_security</b> {<b>mode</b> {<b>disable</b>   <b>enable</b>}   <b>mac_limit</b> {<b>maximum</b> <i>max_mac_number</i>   <b>disable</b>}   <b>violation</b> {<b>protect</b>   <b>shutdown</b>   <b>traponly</b>   <b>trap-shutdown</b>   <b>disable</b>}}}</p> <p><b>Example:</b>  Switch(config-controller-ProvisionMacTableSecurityType) #  portSecurityInterfaceConfig  portSecurityInterfaceConfigReq interface_id 2  Switch(config-controller-ProvisionMacTableSecurityType) #  portSecurityInterfaceConfig  portSecurityInterfaceConfigReq port_security mode enable</p> <p>Switch(config-controller-ProvisionMacTableSecurityType) #  portSecurityInterfaceConfig  portSecurityInterfaceConfigReq interface_id 2  Switch(config-controller-ProvisionMacTableSecurityType) #  portSecurityInterfaceConfig  portSecurityInterfaceConfigReq port_security mac_limit  maximum 100</p> <p>Switch(config-controller-ProvisionMacTableSecurityType) #  portSecurityInterfaceConfig  portSecurityInterfaceConfigReq interface_id 2  Switch(config-controller-ProvisionMacTableSecurityType) #  portSecurityInterfaceConfig  portSecurityInterfaceConfigReq port_security violation  shutdown</p>	<p>Interface mode Port Security Configuration.</p> <ul style="list-style-type: none"> <li>• <b>interface_id</b>—Specifies the interface ID.</li> <li>• <i>interface_id</i>—Interface ID. The valid range is from 1 to 6.</li> <li>• <b>port_security</b>—Configures port security.</li> <li>• <b>mode</b>—Specifies the mode for port security.</li> <li>• <b>disable</b>—Disables port security.</li> <li>• <b>enable</b>—Enables port security.</li> <li>• <b>mac_limit</b>—Specifies MAC address learning limit.</li> <li>• <b>maximum</b>—Specifies the maximum number of MAC addresses.</li> <li>• <i>max_mac_number</i>—Maximum number of MAC addresses. The valid range is from 1 to 1024.</li> <li>• <b>disable</b>—Removes the MAC limit.</li> <li>• <b>violation</b>—Specifies the action when exceeding the limit.</li> <li>• <b>protect</b>—Specifies no action.</li> <li>• <b>shutdown</b>—Shuts down the port.</li> <li>• <b>traponly</b>—Sends an SNMP trap.</li> <li>• <b>trap-shutdown</b>—Sends an SNMP trap and shuts down the port.</li> <li>• <b>disable</b>—Disables violation type.</li> </ul>
Step 8	<p><b>portSecurityInterfaceConfig review</b></p> <p><b>Example:</b>  Switch(config-controller-ProvisionMacTableSecurityType) #  portSecurityInterfaceConfig review</p>	Displays the configuration.
Step 9	<p><b>portSecurityInterfaceConfig commit</b></p> <p><b>Example:</b>  Switch(config-controller-ProvisionMacTableSecurityType) #  portSecurityInterfaceConfig commit</p>	Sends the configuration to NID.

	Command or Action	Purpose
<b>Step 10</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionMacTableSecurityType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to configure port security:

```
Switch(config-controller-ProvisionMacTableSecurityType)# portSecurityGlobalConfig
portSecurityGlobalConfigReq agingTime time 60
Switch(config-controller-ProvisionMacTableSecurityType)# portSecurityGlobalConfig
portSecurityGlobalConfigReq mode enable
Switch(config-controller-ProvisionMacTableSecurityType)# portSecurityGlobalConfig review
Switch(config-controller-ProvisionMacTableSecurityType)# portSecurityGlobalConfig commit

Switch(config-controller-ProvisionMacTableSecurityType)# portSecurityInterfaceConfig
portSecurityInterfaceConfigReq interface_id 2
Switch(config-controller-ProvisionMacTableSecurityType)# portSecurityInterfaceConfig
portSecurityInterfaceConfigReq port_security mode enable
Switch(config-controller-ProvisionMacTableSecurityType)# portSecurityInterfaceConfig
portSecurityInterfaceConfigReq interface_id 2
Switch(config-controller-ProvisionMacTableSecurityType)# portSecurityInterfaceConfig
portSecurityInterfaceConfigReq port_security mac_limit maximum 100
Switch(config-controller-ProvisionMacTableSecurityType)# portSecurityInterfaceConfig
portSecurityInterfaceConfigReq interface_id 2
Switch(config-controller-ProvisionMacTableSecurityType)# portSecurityInterfaceConfig
portSecurityInterfaceConfigReq port_security violation shutdown

Switch(config-controller-ProvisionMacTableSecurityType)# portSecurityInterfaceConfig review
Switch(config-controller-ProvisionMacTableSecurityType)# portSecurityInterfaceConfig commit
Switch(config-controller-ProvisionMacTableSecurityType)# exit
```

## Configuring MAC Security

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1 NID_ID</b>  <b>Example:</b> Switch(config)# contoller nid 1/2	Enters the controller configuration mode.



	Command or Action	Purpose
Step 3	<p><b>ProvisionMacTableSecurityType</b></p> <p><b>Example:</b> Switch(config-controller)# ProvisionMacTableSecurityType</p>	Enters the ProvisionMacTableSecurityType mode.
Step 4	<p><b>setMacGlobalConfig setMacGlobalConfigReq {macAgingTime {setAgingTime aging_time   disable}   staticMacEntry   learning}</b></p> <p><b>Example:</b> Switch(config-controller-ProvisionMacTableSecurityType)# setMacGlobalConfig setMacGlobalConfigReq macAgingTime setAgingTime 100</p>	<p>Global Configuration for MAC address table.</p> <ul style="list-style-type: none"> <li>• <b>macAgingTime</b>—Configures MAC aging time.</li> <li>• <b>setAgingTime</b>—Specifies aging time.</li> <li>• <b>aging_time</b>—Aging time in seconds. Valid range is from 10 to 1000000.</li> <li>• <b>disable</b>—Disables MAC aging.</li> <li>• <b>staticMacEntry</b>—Specifies static MAC address.</li> <li>• <b>learning</b>—Specifies MAC learning on VLAN.</li> </ul>
Step 5	<p><b>setMacGlobalConfig review</b></p> <p><b>Example:</b> Switch(config-controller-ProvisionMacTableSecurityType)# setMacGlobalConfig review</p>	Displays the configuration.
Step 6	<p><b>setMacGlobalConfig commit</b></p> <p><b>Example:</b> Switch(config-controller-ProvisionMacTableSecurityType)# setMacGlobalConfig commit</p>	Sends the configuration to NID.
Step 7	<p><b>setMacInterfaceConfig setMacInterfaceConfigReq {interface_id interface-id   mode {learning {enable   disable}   secure {enable   disable}}}</b></p> <p><b>Example:</b> Switch(config-controller-ProvisionMacTableSecurityType)# setMacInterfaceConfig setMacInterfaceConfigReq interface-id 3 Switch(config-controller-ProvisionMacTableSecurityType)# setMacInterfaceConfig setMacInterfaceConfigReq mode learning enable</p>	<p>Interface mode for MAC configuration.</p> <ul style="list-style-type: none"> <li>• <b>interface_id</b>—Specifies the interface ID.</li> <li>• <b>interface_id</b>—Interface ID.</li> <li>• <b>mode</b>—Specifies the learning mode.</li> <li>• <b>learning</b>—Specifies port default learning mode.</li> <li>• <b>enable</b>—Enables MAC learning.</li> <li>• <b>disable</b>—Disables MAC learning.</li> <li>• <b>secure</b>—Specifies port secure learning mode.</li> <li>• <b>enable</b>—Enables secure MAC learning.</li> <li>• <b>disable</b>—Disables secure MAC learning.</li> </ul>

	Command or Action	Purpose
<b>Step 8</b>	<b>setMacInterfaceConfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionMacTableSecurityType) # setMacInterfaceConfig review	Displays the configuration.
<b>Step 9</b>	<b>setMacInterfaceConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionMacTableSecurityType) # setMacInterfaceConfig commit	Sends the configuration to NID.
<b>Step 10</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionMacTableSecurityType) # exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to configure MAC table learning:

```
Switch(config-controller-ProvisionMacTableSecurityType) # setMacGlobalConfig
setMacGlobalConfigReq macAgingTime setAgingTime 100
Switch(config-controller-ProvisionMacTableSecurityType) # setMacGlobalConfig review
Switch(config-controller-ProvisionMacTableSecurityType) # setMacGlobalConfig commit

Switch(config-controller-ProvisionMacTableSecurityType) # setMacInterfaceConfig
setMacInterfaceConfigReq interface_id 3
Switch(config-controller-ProvisionMacTableSecurityType) # setMacInterfaceConfig
setMacInterfaceConfigReq mode learning enable
Switch(config-controller-ProvisionMacTableSecurityType) # setMacInterfaceConfig review
Switch(config-controller-ProvisionMacTableSecurityType) # setMacInterfaceConfig commit

Switch(config-controller-ProvisionMacTableSecurityType) # exit
```

## Clearing MAC Address Table

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid / NID_ID</b>  <b>Example:</b> Switch(config)# contoller nid 1/2	Enters the controller configuration mode.

	Command or Action	Purpose
Step 3	<b>ProvisionMacTableSecurityType</b>  <b>Example:</b> Switch(config-controller)# ProvisionMacTableSecurityType	Enters the ProvisionMacTableSecurityType mode.
Step 4	<b>clearMacTable clearMacTableReq clearAll</b>  <b>Example:</b> Switch(config-controller-ProvisionMacTableSecurityType)# clearMacTable clearMacTableReq clearAll	Clears MAC address table.  • <b>clearAll</b> —Clears all entries.
Step 5	<b>clearMacTable review</b>  <b>Example:</b> Switch(config-controller-ProvisionMacTableSecurityType)# clearMacTable review	Displays the configuration.
Step 6	<b>clearMacTable commit</b>  <b>Example:</b> Switch(config-controller-ProvisionMacTableSecurityType)# clearMacTable commit	Sends the configuration to NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionMacTableSecurityType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to configure port security:

```
Switch(config-controller-ProvisionMacTableSecurityType)# clearMacTable clearMacTableReq
clearAll
Switch(config-controller-ProvisionMacTableSecurityType)# clearMacTable review
Switch(config-controller-ProvisionMacTableSecurityType)# clearMacTable commit
Switch(config-controller-ProvisionMacTableSecurityType)# exit
```

## Verifying MAC Security

Use the following command to verify the MAC security status on the controller.

- **showMacTableLearningReq mode**

This command displays the MAC table learning status. The following is a sample output from the command:

```
Switch(config-controller-ProvisionMacTableSecurityType)# showmacTablelearning
showMacTableLearningReq mode
Switch(config-controller-ProvisionMacTableSecurityType)# showmacTablelearning review
```

```

Commands in queue:
showMacTableLearning showMacTableLearningReq mode

Switch(config-controller-ProvisionMacTableSecurityType)# showmacTablelearning commit

Clearing Socket 4
ShowMacTableLearning_Output.showMacTableLearningResp.status[0].interface_
= 1
ShowMacTableLearning_Output.showMacTableLearningResp.status[0].mode =
'Auto'
ShowMacTableLearning_Output.showMacTableLearningResp.status[1].interface_
= 2
ShowMacTableLearning_Output.showMacTableLearningResp.status[1].mode =
'Auto'
ShowMacTableLearning_Output.showMacTableLearningResp.status[2].interface_
= 3
ShowMacTableLearning_Output.showMacTableLearningResp.status[2].mode =
'Auto'
ShowMacTableLearning_Output.showMacTableLearningResp.status[3].interface_
= 4
ShowMacTableLearning_Output.showMacTableLearningResp.status[3].mode =
'Auto'
ShowMacTableLearning_Output.showMacTableLearningResp.status[4].interface_
= 5
ShowMacTableLearning_Output.showMacTableLearningResp.status[4].mode =
'Auto'
ShowMacTableLearning_Output.showMacTableLearningResp.status[5].interface_
= 6
ShowMacTableLearning_Output.showMacTableLearningResp.status[5].mode =
'Auto'
ShowMacTableLearning Commit Success!!!

```

- **showMacTableEntriesReq all**

This command displays the list of all MAC entries. The following is a sample output from the command:

```

Switch(config-controller-ProvisionMacTableSecurityType)# showMacTableEntries
showMacTableEntriesReq all
Switch(config-controller-ProvisionMacTableSecurityType)# showmacTableentries review

```

```

Commands in queue:
showMacTableEntries showMacTableEntriesReq all

Switch(config-controller-ProvisionMacTableSecurityType)# showmacTableentries commit

Clearing Socket 4
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[0].type
= 'Static '
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[0].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[0].mac_address
= '00:00:0c:07:aC:03'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[0].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[1].type
= 'Static '
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[1].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[1].mac_address
= '00:09:e8:74:36:c5'

```

```
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[1].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[2].type
= 'Static '
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[2].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[2].mac_address
= '00:14:1b:ec:18:00'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[2].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[3].type
= 'Static '
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[3].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[3].mac_address
= '00:19:a9:a2:9e:80'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[3].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[4].type
= 'Static '
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[4].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[4].mac_address
= '00:1c:b0:f5:b4:00'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[4].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[5].type
= 'Static '
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[5].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[5].mac_address
= '00:1c:b1:9a:00:00'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[5].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[6].type
= 'Static '
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[6].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[6].mac_address
= '00:1c:b1:f9:d0:00'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[6].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[7].type
= 'Static '
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[7].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[7].mac_address
= '00:1c:b1:fa:48:00'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[7].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[8].type
= 'Static '
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[8].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[8].mac_address
= '00:3a:99:fd:4b:1c'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[8].ports
= ' CPU'
```

```

ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[9].type
= 'Static '
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[9].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[9].mac_address
= '18:9c:5d:a7:f4:1c'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[9].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[10].type
= 'Static '
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[10].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[10].mac_address
= '33:33:00:00:00:01'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[10].ports
= 'GigabitEthernet 1/1-6 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[11].type
= 'Static '
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[11].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[11].mac_address
= '33:33:00:00:00:02'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[11].ports
= 'GigabitEthernet 1/1-6 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[12].type
= 'Static '
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[12].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[12].mac_address
= '33:33:ff:fd:4b:1c'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[12].ports
= 'GigabitEthernet 1/1-6 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[13].type
= 'Static '
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[13].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[13].mac_address
= 'ff:ff:ff:ff:ff:ff'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[13].ports
= 'GigabitEthernet 1/1-6 CPU'
ShowMacTableEntries Commit Success!!!

```

- **showMacTableEntriesReq interface\_id 2**

This command displays the list of all MAC entries for a given interface. The following is a sample output from the command:

```

Switch(config-controller-ProvisionMacTableSecurityType) # showMacTableEntries
showMacTableEntriesReq interface_id 2
Switch(config-controller-ProvisionMacTableSecurityType) # showmacTableentries review

```

```

Commands in queue:
showMacTableEntries showMacTableEntriesReq interface_id 2

```

```

Switch(config-controller-ProvisionMacTableSecurityType) # showmactableentries commit

```

```

Clearing Socket 4
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[0].type
= 'Static'

```

```

ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[0].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[0].mac_address
= '33:33:00:00:00:01'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[0].ports
= 'GigabitEthernet 1/1-6 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[1].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[1].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[1].mac_address
= '33:33:00:00:00:02'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[1].ports
= 'GigabitEthernet 1/1-6 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[2].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[2].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[2].mac_address
= '33:33:ff:fd:4b:1c'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[2].ports
= 'GigabitEthernet 1/1-6 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[3].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[3].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[3].mac_address
= 'ff:ff:ff:ff:ff:ff'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[3].ports
= 'GigabitEthernet 1/1-6 CPU'

ShowMacTableEntries Commit Success!!!

```

- **showMacTableEntriesReq mac\_address ff:ff:ff:ff:ff:ff**

This command displays the list of all MAC entries for a given MAC address. The following is a sample output from the command:

```

Switch(config-controller-ProvisionMacTableSecurityType) # showMacTableEntries
showMacTableEntriesReq mac-address ff:ff:ff:ff:ff:ff
Switch(config-controller-ProvisionMacTableSecurityType) # showmacTableentries review

```

```

Commands in queue:
  showMacTableEntries showMacTableEntriesReq mac_address
ff:ff:ff:ff:ff:ff

```

```

Switch(config-controller-ProvisionMacTableSecurityType) # showmactableentries commit

```

```

Clearing Socket 4
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[0].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[0].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[0].mac_address
= 'ff:ff:ff:ff:ff:ff'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[0].ports
= 'GigabitEthernet 1/1-6 CPU'

ShowMacTableEntries Commit Success!!!

```

- **showMacTableEntriesReq static**

This command displays all the static MAC entries. The following is a sample output from the command:

```
Switch(config-controller-ProvisionMacTableSecurityType) # showMacTableEntries
showMacTableEntriesReq static
Switch(config-controller-ProvisionMacTableSecurityType) # showmacTableentries review
```

Commands in queue:

```
showMacTableEntries showMacTableEntriesReq static
```

```
Switch(config-controller-ProvisionMacTableSecurityType) # showmactableentries commit
```

Clearing Socket 4

```
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[0].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[0].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[0].mac_address
= '00:00:0c:07:ac:03'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[0].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[1].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[1].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[1].mac_address
= '00:09:e8:74:36:c5'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[1].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[2].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[2].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[2].mac_address
= '00:14:1b:ec:18:00'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[2].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[3].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[3].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[3].mac_address
= '00:19:a9:a2:9e:80'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[3].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[4].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[4].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[4].mac_address
= '00:1c:b0:f5:b4:00'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[4].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[5].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[5].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[5].mac_address
= '00:1c:b1:9a:00:00'
```



```
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[5].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[6].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[6].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[6].mac_address
= '00:1c:b1:f9:d0:00'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[6].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[7].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[7].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[7].mac_address
= '00:1c:b1:fa:48:00'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[7].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[8].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[8].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[8].mac_address
= '00:3a:99:fd:4b:1c'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[8].ports
= ' CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[9].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[9].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[9].mac_address
= '18:9c:5d:a7:f4:1c'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[9].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[10].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[10].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[10].mac_address
= '33:33:00:00:00:01'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[10].ports
= 'GigabitEthernet 1/1-6 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[11].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[11].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[11].mac_address
= '33:33:00:00:00:02'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[11].ports
= 'GigabitEthernet 1/1-6 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[12].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[12].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[12].mac_address
= '33:33:ff:fd:4b:1c'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[12].ports
= 'GigabitEthernet 1/1-6 CPU'
```

```
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[13].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[13].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[13].mac_address
= 'ff:ff:ff:ff:ff:ff'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[13].ports
= 'GigabitEthernet 1/1-6 CPU'
ShowMacTableEntries Commit Success!!!
```

- **showMacTableEntriesReq vlan\_id 1**

This command displays all the MAC entries for a specified VLAN ID. The following is a sample output from the command:

```
Switch(config-controller-ProvisionMacTableSecurityType)# showMacTableEntries
showMacTableEntriesReq vlan_id 1
Switch(config-controller-ProvisionMacTableSecurityType)# showmacTableentries review
```

```
Commands in queue:
  showMacTableEntries showMacTableEntriesReq vlan_id 1
```

```
Switch(config-controller-ProvisionMacTableSecurityType)# showMacTableEntries commit
```

```
Clearing Socket 4
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[0].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[0].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[0].mac_address
= '00:00:0c:07:ac:03'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[0].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[1].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[1].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[1].mac_address
= '00:09:e8:74:36:c5'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[1].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[2].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[2].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[2].mac_address
= '00:14:1b:ec:18:00'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[2].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[3].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[3].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[3].mac_address
= '00:19:a9:a2:9e:80'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[3].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[4].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[4].vlan_id
```

```
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[4].mac_address
= '00:1c:b0:f5:b4:00'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[4].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[5].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[5].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[5].mac_address
= '00:1c:b1:9a:00:00'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[5].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[6].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[6].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[6].mac_address
= '00:1c:b1:f9:d0:00'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[6].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[7].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[7].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[7].mac_address
= '00:1c:b1:fa:48:00'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[7].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[8].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[8].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[8].mac_address
= '00:3a:99:fd:4b:1c'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[8].ports
= ' CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[9].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[9].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[9].mac_address
= '18:9c:5d:a7:f4:1c'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[9].ports
= 'GigabitEthernet 1/1 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[10].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[10].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[10].mac_address
= '33:33:00:00:00:01'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[10].ports
= 'GigabitEthernet 1/1-6 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[11].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[11].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[11].mac_address
```

```

= '33:33:00:00:00:02'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[11].ports
= 'GigabitEthernet 1/1-6 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[12].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[12].vlan0_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[12].mac_address
= '33:33:ff:fd:4b:1c'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[12].ports
= 'GigabitEthernet 1/1-6 CPU'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[13].type
= 'Static'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[13].vlan_id
= 1
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[13].mac_address
= 'ff:ff:ff:ff:ff:ff'
ShowMacTableEntries_Output.showMacTableEntriesResp.macEntries[13].ports
= 'GigabitEthernet 1/1-6 CPU'
ShowMacTableEntries Commit Success!!!

```

- **showMacAddressCountReq count**

This command displays count of MAC addresses learnt per interface. The following is a sample output from the command:

```

Switch(config-controller-ProvisionMacTableSecurityType) # showMacTableCount
showMacAddressCountReq count
Switch(config-controller-ProvisionMacTableSecurityType) # showmacTablecount review

```

```

Commands in queue:
showMacTableCount showMacAddressCountReq count

```

```

Switch(config-controller-ProvisionMacTableSecurityType) # showmacTablecount commit

```

```

Clearing Socket 4
ShowMacTableCount_Output.showMacAddressCountResp.macCount[0].Interface_id
= 1
ShowMacTableCount_Output.showMacAddressCountResp.macCount[0].count =
9
ShowMacTableCount_Output.showMacAddressCountResp.macCount[1].Interface_id
= 2
ShowMacTableCount_Output.showMacAddressCountResp.macCount[1].count =
0
ShowMacTableCount_Output.showMacAddressCountResp.macCount[2].Interface_id
= 3
ShowMacTableCount_Output.showMacAddressCountResp.macCount[2].count =
0
ShowMacTableCount_Output.showMacAddressCountResp.macCount[3].Interface_id
= 4
ShowMacTableCount_Output.showMacAddressCountResp.macCount[3].count =
0
ShowMacTableCount_Output.showMacAddressCountResp.macCount[4].Interface_id
= 5
ShowMacTableCount_Output.showMacAddressCountResp.macCount[4].count =
0
ShowMacTableCount_Output.showMacAddressCountResp.macCount[5].Interface_id
= 6
ShowMacTableCount_Output.showMacAddressCountResp.macCount[5].count =

```

```
0
ShowMacTableCount Commit Success!!!
```

- **showMacTableAgingReq agingTimeValue**

This command displays the MAC aging time. The following is a sample output from the command:

```
Switch(config-controller-ProvisionMacTableSecurityType) # showMacTableAgingTime
showMacTableAgingReq agingTimeValue
Switch(config-controller-ProvisionMacTableSecurityType) # showmactableagingTime review
```

```
Commands in queue:
```

```
showMacTableAgingTime showMacTableAgingReq agingTimeValue
```

```
Switch(config-controller-ProvisionMacTableSecurityType) # showmactableagingTime commit
```

```
Clearing Socket 4
```

```
ShowMacTableAgingTime_Output.showMacTableAgingResp.macAgingTime = 'MAC
Age Time: 300'
```

```
ShowMacTableAgingTime Commit Success!!!
```





## Configuring NTP

---

The Network Time Protocol (NTP) synchronizes the time of day among a set of distributed time servers and clients so that you can correlate events when you receive system logs and other time-specific events from multiple network devices. NTP uses the User Datagram Protocol (UDP) as its transport protocol. All NTP communications use Coordinated Universal Time (UTC).

- [Prerequisites for Configuring NTP, page 487](#)
- [Restrictions for Configuring NTP, page 487](#)
- [Information About NTP, page 487](#)
- [How to Configure NTP, page 489](#)
- [Verifying NTP, page 494](#)

### Prerequisites for Configuring NTP

- NTP is disabled by default. The NTP IPv4 and IPv6 address must be configured.
- The controller must acquire the time from the NTP server.

### Restrictions for Configuring NTP

- Maximum number of servers supported is 5.

### Information About NTP

#### Network Time Protocol

Network Time Protocol (NTP) is a protocol designed to time-synchronize a network of machines. NTP runs on UDP, which in turn runs on IP. NTP Version 3 (NTPv3) is documented in RFC 1305.

An NTP network usually gets its time from an authoritative time source such as a radio clock or an atomic clock attached to a time server. NTP then distributes this time across the network. NTP is extremely efficient; no more than one packet per minute is necessary to synchronize two machines to the accuracy of within a millisecond of one another.

NTP uses the concept of a stratum to describe how many NTP hops away a machine is from an authoritative time source. A stratum 1 time server typically has an authoritative time source (such as a radio or atomic clock or a Global Positioning System [GPS] time source) directly attached, a stratum 2 time server receives its time via NTP from a stratum 1 time server, and so on.

NTP has two ways to avoid synchronizing to a machine whose time may not be accurate. NTP does not synchronize to a machine that is not in turn synchronized with the NTP. NTP compares the time reported by several machines and does not synchronize to a machine whose time is significantly different from others, even if its stratum is lower. This strategy effectively builds a self-organizing tree of NTP servers.

Our implementation of NTP does not support stratum 1 service; that is, you cannot connect to a radio or atomic clock (for some specific platforms, however, you can connect to a GPS time-source device). We recommend that the time service you derive for your network from the public NTP servers that are available in the IP Internet.

If the network is isolated from the Internet, our implementation of NTP allows a machine to be configured so that it acts as though it is synchronized via NTP, when in fact the network has determined the time by using other means. Other machines can then synchronize to that machine via NTP.

A number of manufacturers include NTP software for their host systems and a publicly available version for systems running UNIX. This software also allows UNIX-derivative servers to acquire the time directly from an atomic clock, which would subsequently propagate time information along to Cisco devices.

The communication between machines running NTP (known as associations) are usually statically configured; each machine is given the IP address of all machines with which it should form associations. Accurate timekeeping is made possible through exchange of NTP messages between each pair of machines with an association.

However, in a LAN environment, NTP can be configured to use IP broadcast messages instead. This alternative reduces configuration complexity because each machine can be configured to send or receive broadcast messages. However, the accuracy of timekeeping is marginally reduced because the information flow is only one way.

The time kept on a machine is a critical resource, so we strongly recommend that you use the security features of NTP to avoid the accidental or malicious setting of incorrect time. Two security mechanisms are available: an access-list-based restriction scheme and an encrypted authentication mechanism.

When multiple sources of time (VINES, hardware clock, manual configuration) are available, NTP is always considered to be more authoritative. NTP time overrides the time set by any other method.

NTP services are disabled on all interfaces by default.

For more information about NTP, see the following sections:



# How to Configure NTP

## Provisioning the Controller to Configure NTP

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1 NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
Step 3	<b>NtpPortType</b>  <b>Example:</b> Switch(config-controller)# <b>NtpPortType</b>	Enters NTP provisioning mode.
Step 4	<b>NtpPortType {default   deleteNtpConfig   exit   getNtpConfig   no   setNtpConfig}</b>  <b>Example:</b> Switch(config-controller)#-NtpPortType)# ? NtpPortType sub-mode commands: default          Set a command to its defaults deleteNtpConfig  delete NTP config request exit             Exit from NtpPortType sub configuration mode getNtpConfig     get ntp properties request no               Negate a command or set its defaults setNtpConfig     Set Ntp Server Details	Displays the supported configurations for NTP.
Step 5	<b>exit</b>  <b>Example:</b> Switch(config-controller-NtpPortType)# <b>exit</b>	Exits the NTP provisioning mode.

### Configuration Example

The following example shows the supported NTP configuration:

```
Switch(config-controller-NtpPortType)# ?
NtpPortType sub-mode commands:
  default          Set a command to its defaults
  deleteNtpConfig  delete NTP config request
  exit             Exit from NtpPortType sub configuration mode
  getNtpConfig     get ntp properties request
```

```
no          Negate a command or set its defaults
setNtpConfig Set Ntp Server Details
```

## Configuring NTP on the Controller

### Before You Begin

- Ensure that the NID is reachable for the provided NTP server.
- Set the time zone for synchronization with the NTP server. See [Configuring the System Clock](#), on page 27.
- Perform the steps to provision NTP on the controller. See [Provisioning the Controller to Configure NTP](#), on page 489

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<pre>setNtpConfig {commit   flush   ntpConfig   review}</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-NtpPortType)# setNtpConfig ? commit          commit deleteNtpConfig flush          flush all deleteNtpConfig commands from queue ntpConfig      Set Ntp Server Details review         review deleteNtpConfig commands</pre>	<p>Sets NTP configuration</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the NTP configuration to NID.</li> <li>• <b>flush</b>—Flushes all NTP configuration from the queue.</li> <li>• <b>ntpConfig</b>—Sets the NTP server configuration on the controller.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
<b>Step 2</b>	<pre>setNtpConfig ntpConfig {hostinfo {hostname host_name}   ipv4address IPv4_address   ipv6address IPv6_address}   ntpmode {enable   number server_number}}</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-NtpPortType)# setNtpConfig hostinfo hostname host1 Switch(config-controller-NtpPortType)# setNtpConfig ipv4address 192.34.7.8 Switch(config-controller-NtpPortType)# setNtpConfig ipv6address 2001:DB8:0:ABCD::1 Switch(config-controller-NtpPortType)# setNtpConfig ntpmode enable Switch(config-controller-NtpPortType)# setNtpConfig ntpmode number 5</pre>	<p>Configures NTP.</p> <ul style="list-style-type: none"> <li>• <b>hostinfo</b>—Sets the host information such as host name, IPv4 address and IPv6 address on the controller.</li> <li>• <b>ntpmode</b>—Enables or disables the NTP mode on the controller.</li> <li>• <b>number server_number</b>—Sets the NTP server details. The valid range is from 1 to 5.</li> </ul>
<b>Step 3</b>	<pre>setNtpconfig review</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-NtpPortType)# setNtpconfig review</pre> <p>Commands in queue:</p> <pre>setNtpConfig ntpConfig hostInfo hostName host1</pre>	<p>Displays the NTP configuration on the controller.</p>

	Command or Action	Purpose
	<pre> setNtpConfig ntpConfig hostInfo ipv4Address 192.34.7.8 setNtpConfig ntpConfig ntpMode enable setNtpConfig ntpConfig number 5 setNtpConfig ntpConfig ntpMode enable </pre>	
<b>Step 4</b>	<p><b>setNtpconfigcommit</b></p> <p><b>Example:</b> Switch(config-controller-NtpPortType)# <b>setNtpconfig commit</b></p>	Sends the NTP configuration to the NID.
<b>Step 5</b>	<p><b>exit</b></p> <p><b>Example:</b> Switch(config-controller-NtpPortType)# <b>exit</b></p>	Exits the NTP provisioning mode.

### Configuration Example

The example shows how to configure NTP on the controller:

```

Switch(config-controller-NtpPortType)# setNtpConfig hostinfo hostname host1
Switch(config-controller-NtpPortType)# setNtpConfig ipv4address 192.34.7.8
Switch(config-controller-NtpPortType)# setNtpConfig ipv6address 2001:DB8:0:ABCD::1
Switch(config-controller-NtpPortType)# setNtpConfig ntpmode enable
Switch(config-controller-NtpPortType)# setNtpConfig ntpmode number 5
Switch(config-controller-NtpPortType)# setNtpconfig review

```

Commands in queue:

```

setNtpConfig ntpConfig hostInfo hostName host1
setNtpConfig ntpConfig hostInfo ipv4Address 192.34.7.8
setNtpConfig ntpConfig ntpMode enable
setNtpConfig ntpConfig number 5
setNtpConfig ntpConfig ntpMode enable

```

```

Switch(config-controller-NtpPortType)# setNtpconfig commit
Switch(config-controller-NtpPortType)# exit

```

## Configuring NTP with Default Configuration

You can set the default NTP configuration on the controller.

### Before You Begin

- Perform the steps to provision NTP on the controller. See [Provisioning the Controller to Configure NTP, on page 489](#).

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<pre> default {getNtpConfig   setNtpConfig   deleteNtpConfig   exit } </pre>	Sets the default NTP configuration.

	Command or Action	Purpose
	<p><b>Example:</b> Switch(config-controller-NtpPortType) # <b>default ?</b></p> <pre>deleteNtpConfig  delete NTP config request exit             Exit from NtpPortType sub configuration mode getNtpConfig     get ntp properties request setNtpConfig     Set Ntp Server Details</pre>	<ul style="list-style-type: none"> <li>• <b>getNtpConfig</b>—View the configuration on the controller.</li> <li>• <b>setNtpConfig</b>—Sets the configuration on the controller.</li> <li>• <b>deleteNtpConfig</b>—Deletes the configuration from the controller.</li> <li>• <b>exit</b>—Exits from NtpPortType configuration mode.</li> </ul>
<b>Step 2</b>	<p><b>exit</b></p> <p><b>Example:</b> Switch(config-controller-NtpPortType) # <b>exit</b></p>	Exits the NTP provisioning mode.

## Viewing the NTP Configuration

### Before You Begin

- Perform the steps to provision NTP on the controller. See [Provisioning the Controller to Configure NTP, on page 489](#).

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<p><b>getNtpConfig</b> {<b>commit</b>   <b>flush</b>   <b>ntpStatusRequest</b> <i>ntp_status</i>   <b>review</b>}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-NtpPortType) #<b>getNtpConfig</b> <b>ntpStatusRequest 1</b> Switch(config-controller-NtpPortType) #<b>getNtpConfig</b> <b>review</b> Switch(config-controller-NtpPortType) #<b>getNtpConfig</b> <b>commit</b></pre>	<ul style="list-style-type: none"> <li>• <b>ntpStatusRequest</b>—Request NTP configuration properties.</li> <li>• <b>commit</b>—Sends the NTP configuration to NID.</li> <li>• <b>flush</b>—Flushes all NTP configuration from the queue.</li> <li>• <b>review</b>—Displays the configuration.</li> </ul>
<b>Step 2</b>	<p><b>exit</b></p> <p><b>Example:</b> Switch(config-controller-NtpPortType) # <b>exit</b></p>	Exits the NTP provisioning mode.

### Configuration Example

The example shows how to view the configuration:

```
Switch(config-controller-NtpPortType) # getNtpConfig ntpStatusRequest 1
Switch(config-controller-NtpPortType) # getNtpConfig review
```

```
Commands in queue:
  getNtpConfig ntpStatusRequest 1
  getNtpConfig ntpStatusRequest 2
  getNtpConfig ntpStatusRequest 3
```

```
Switch(config-controller-NtpPortType) # getNtpConfig commit
Switch(config-controller-NtpPortType) # end
```

## Deleting the NTP Configuration

### Before You Begin

- Perform the steps to provision NTP on the controller. See [Provisioning the Controller to Configure NTP, on page 489](#).

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>deleteNtpConfig {commit   flush   ntpDeleteConfig   review}</b>  <b>Example:</b> <pre>Switch(config-controller-NtpPortType) # deleteNtpConfig ?   commit          commit deleteNtpConfig   flush           flush all deleteNtpConfig commands from queue   ntpDeleteConfig delete NTP config request   review          review deleteNtpConfig commands</pre>	Removes the NTP configuration. <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the NTP configuration to NID.</li> <li>• <b>flush</b>—Flushes all NTP configuration from the queue.</li> <li>• <b>ntpDeleteConfig</b>—Deletes the NTP configuration request on the controller.</li> <li>• <b>review</b>—Displays the configuration on the controller.</li> </ul>
<b>Step 2</b>	<b>ntpDeleteConfig {ntpEnable   ntpServerNoserver_num}</b>  <b>Example:</b> <pre>Switch(config-controller-NtpPortType) # deleteNtpConfig ntpDeleteConfig ntpEnable Switch(config-controller-NtpPortType) # deleteNtpConfig ntpDeleteConfig ntpServer 1</pre>	Removes NTP configuration. <ul style="list-style-type: none"> <li>• <b>ntpEnable</b>—Disables the NTP configuration.</li> <li>• <b>ntpServerNo</b>—Disables the NTP server.</li> <li>• <b>server_num</b>—Specifies the NTP server. The valid range is from 1 to 5.</li> </ul>
<b>Step 3</b>	<b>ntpDeleteConfig review</b>  <b>Example:</b> <pre>Switch(config-controller-NtpPortType) # deleteNtpConfig review</pre>	Displays the NTP configuration.

	Command or Action	Purpose
<b>Step 4</b>	<b>ntpDeleteConfig commit</b>  <b>Example:</b> Switch(config-controller-NtpPortType)# <b>deleteNtpConfig commit</b>	Sends the NTP configuration to the NID.
<b>Step 5</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-NtpPortType)# <b>exit</b>	Exits the NTP provisioning mode.

### Configuration Example

The following example shows how to delete the NTP configuration:

```
Switch(config-controller-NtpPortType)# deleteNtpConfig ntpDeleteConfig ntpEnable
Switch(config-controller-NtpPortType)# deleteNtpConfig ntpDeleteConfig ntpServer 1
Switch(config-controller-NtpPortType)# deleteNtpConfig review
Commands in queue:
    deleteNtpConfig ntpDeleteConfig ntpEnable
    deleteNtpConfig ntpDeleteConfig ntpServerNo 2
Switch(config-controller-NtpPortType)# deleteNtpConfig commit
DeleteNtpConfig Commit Success!!!
Switch(config-controller-NtpPortType)# deleteNtpConfig exit
```

## Verifying NTP

Use these commands to verify the NTP status on the controller.

- **show ntp status**

This command displays the NTP status on the NID. The following is a sample output from the command:

```
Switch# show ntp status

NTP Mode : disabled
Idx  Server IP host address (a.b.c.d) or a host name string
---  -----
1
2
3
4
5
```



## Configuring Storm Control

---

A traffic storm occurs when packets flood the LAN, creating excessive traffic and degrading network performance. The traffic broadcast and multicast suppression (or storm control) feature prevents LAN ports from being disrupted by a broadcast, multicast and unicast traffic storm on physical interfaces.

- [Restrictions for Configuring Storm Control, page 495](#)
- [Information on Storm Control, page 495](#)
- [How to Configure Storm Control, page 496](#)

### Restrictions for Configuring Storm Control

- Storm control cannot be configured per port. It is configured globally on all ports

### Information on Storm Control

A broadcast storm occurs when huge amount of broadcast, multicast, or unknown unicast packets flood the LAN, creating excessive traffic and degrading network performance. Errors in the protocol-stack implementation or in the network configuration can also cause a storm. The mechanism to prevent and control such events is known as storm control or broadcast suppression.

Broadcast and Multicast Suppression monitors incoming traffic levels periodically, and compares traffic level with configured storm control policer level or rate. The traffic storm control threshold level is measured based on the traffic rate in bits (or kilobits) per second at which broadcast, multicast, unicast packets are received.

Storm control prevents traffic on a LAN from being disrupted by a broadcast, multicast, or unicast storm on a port. Storm control is applicable for physical interfaces and is used to restrict the unicast, broadcast and multicast ingress traffic on the Layer2 interfaces.

# How to Configure Storm Control

## Provisioning the Controller to Configure Storm Control

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1 NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
Step 3	<b>ProvisionStormControl</b>  <b>Example:</b> Switch(config-controller)# <b>ProvisionStormControl</b>	Enters Storm control provisioning mode.
Step 4	<b>ProvisionStormControl {getStormControlGlobal   setStormControlGlobal   showStormControl  no   exit}</b>  <b>Example:</b> Switch((config-controller)ProvisionStormControl)# ?	Displays the supported configurations for storm control. <ul style="list-style-type: none"> <li>• <b>getStormControlGlobal</b>—View the configuration, see <a href="#">Retrieving the Storm Control Configuration</a>, on page 499.</li> <li>• <b>setStormControlGlobal</b>—Configures storm control, see <a href="#">Configuring Storm Control on the Controller</a>, on page 497.</li> <li>• <b>showStormControlGlobal</b>—Displays the configuration, see <a href="#">Displaying the Storm Control Configuration</a>, on page 500.</li> <li>• <b>no</b>—Negates the configuration, see <a href="#">Negating Storm Control Configuration and Restoring Defaults</a>, on page 502.</li> <li>• <b>exit</b>—Exits the configuration.</li> </ul>
Step 5	<b>exit</b>  <b>Example:</b> Switch((config-controller)ProvisionStormControl)# <b>exit</b>	Exits the storm control provisioning mode.



### Configuration Example

The following example shows the supported storm control configuration:

```
Switch((config-controller)ProvisionStormControl)# ?
ProvisionStormControl sub-mode commands:
  exit                               Exit from ProvisionStormControl sub configuration mode
  getStormControlGlobal              Storm Control Global Configuration Get Request
  no                                  Negate a command or set its defaults
  setStormControlGlobal              Storm Control Global Configuration Set Request
  showStormControl                   Display Storm Control Policer properties
```

## Configuring Storm Control on the Controller

### Before You Begin

- Perform the steps to provision storm control on the controller. See [Provisioning the Controller to Configure Storm Control](#), on page 496.

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>setStormControlGlobal {commit   flush   stormControlGlobalConfiguration   review}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionStormControl)# setStormControlGlobal ?   commit                               commit setStormControlGlobal   flush                                 flush all setStormControlGlobal commands   from queue   review setStormControlGlobal   commands   stormControlGlobalConfiguration Storm Control Global   Configuration Set   Request</pre>	<p>Configures global storm control.</p> <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the storm control configuration to NID.</li> <li>• <b>flush</b>—Flushes all storm control configuration from the queue.</li> <li>• <b>stormControlGlobalConfiguration</b>—Sets the storm control configuration globally.</li> </ul> <p><b>Note</b> Storm control is configured globally (all ports) and <i>not</i> per port.</p> <ul style="list-style-type: none"> <li>• <b>review</b>—Displays the configuration.</li> </ul>
Step 2	<p><b>setStormControlGlobal stormControlGlobalConfiguration {broadcast {bc_enabled {enable   disable}   level level_bps   mode {bps   kbps}}   multicast {level level_bps   mc_enabled {enable   disable}   mode {bps   kbps}}   unicast {level level_bps   uc_enabled {enable   disable}   mode {bps   kbps}}}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionStormControl)# setStormControlGlobal stormControlGlobalConfiguration broadcast level 64 Switch(config-controller-ProvisionStormControl)# setStormControlGlobal stormControlGlobalConfiguration broadcast mode kps Switch(config-controller-ProvisionStormControl)#</pre>	<ul style="list-style-type: none"> <li>• <b>broadcast</b>—Sets police broadcast frames.</li> <li>• <b>multicast</b>—Sets police multicast frames.</li> <li>• <b>unicast</b>—Sets police unicast frames.</li> <li>• <b>bc_enabled</b>—Sets broadcast policer rate.</li> <li>• <b>mc_enabled</b>—Sets multicast policer rate.</li> <li>• <b>uc_enabled</b>—Sets unicast policer rate.</li> <li>• <b>level level_bps</b>—Configure policer rate or level. Allowed values are 1,2,4,8,16,32,64,128,256,512 (bps/kbps) and 1024 kbps.</li> </ul>

	Command or Action	Purpose
	<pre>setStormControlGlobal stormControlGlobalConfiguration broadcast bc_enabled enable Switch(config-controller-ProvisionStormControl) # setStormControlGlobal stormControlGlobalConfiguration multicast level 8 Switch(config-controller-ProvisionStormControl) # setStormControlGlobal stormControlGlobalConfiguration multicast mode bps Switch(config-controller-ProvisionStormControl) # setStormControlGlobal stormControlGlobalConfiguration broadcast mc_enabled disable Switch(config-controller-ProvisionStormControl) # setStormControlGlobal stormControlGlobalConfiguration unicast level 16  Switch(config-controller-ProvisionStormControl) # setStormControlGlobal stormControlGlobalConfiguration unicast uc_enabled disable Switch(config-controller-ProvisionStormControl) # setStormControlGlobal stormControlGlobalConfiguration unicast mode bps</pre>	<ul style="list-style-type: none"> <li>• <b>mode</b>—Sets the mode in bps or kbps</li> <li>• <b>bps</b>—Configures policer rate in bps.</li> <li>• <b>kbps</b>—Configures policer rate in kbps.</li> <li>• <b>disable</b>—Disables the storm control configuration.</li> <li>• <b>enable</b>—Enables the storm control configuration.</li> </ul>
<b>Step 3</b>	<p><b>setStormControlGlobal review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionStormControl) # <b>setStormControlGlobal review</b></pre> <p>Commands in queue:</p> <pre>setStormControlGlobal stormControlGlobalConfiguration broadcast bc_enabled enable setStormControlGlobal stormControlGlobalConfiguration broadcast level 64 setStormControlGlobal stormControlGlobalConfiguration broadcast mode bps setStormControlGlobal stormControlGlobalConfiguration unicast uc_enabled enable setStormControlGlobal stormControlGlobalConfiguration unicast level 16 setStormControlGlobal stormControlGlobalConfiguration unicast mode kbps setStormControlGlobal stormControlGlobalConfiguration multicast mc_enabled enable setStormControlGlobal stormControlGlobalConfiguration multicast mode bps setStormControlGlobal stormControlGlobalConfiguration unicast level 8</pre>	Displays the storm control configuration.
<b>Step 4</b>	<p><b>setStormControlGlobal commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionStormControl) # <b>setStormControlGlobal commit</b></pre>	Sends the storm control configuration to the NID.
<b>Step 5</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch((config-controller)ProvisionStormControl) # <b>exit</b></pre>	Exits the storm control provisioning mode.

## Configuration Example

The example shows how to configure storm control on the controller:

```
Switch(config-controller-ProvisionStormControl)# setStormControlGlobal
stormControlGlobalConfiguration broadcast level 64
Switch(config-controller-ProvisionStormControl)# setStormControlGlobal
stormControlGlobalConfiguration broadcast mode kps
Switch(config-controller-ProvisionStormControl)# setStormControlGlobal
stormControlGlobalConfiguration broadcast bc_enabled enable
Switch(config-controller-ProvisionStormControl)# setStormControlGlobal
stormControlGlobalConfiguration multicast level 8
Switch(config-controller-ProvisionStormControl)# setStormControlGlobal
stormControlGlobalConfiguration multicast mode bps
Switch(config-controller-ProvisionStormControl)# setStormControlGlobal
stormControlGlobalConfiguration broadcast mc_enabled disable
Switch(config-controller-ProvisionStormControl)# setStormControlGlobal
stormControlGlobalConfiguration unicast level 16
Switch(config-controller-ProvisionStormControl)# setStormControlGlobal
stormControlGlobalConfiguration unicast uc_enabled disable
Switch(config-controller-ProvisionStormControl)# setStormControlGlobal
stormControlGlobalConfiguration unicast mode bps
Switch(config-controller-ProvisionStormControl)# setStormControlGlobal review

Commands in queue:
setStormControlGlobal stormControlGlobalConfiguration broadcast bc_enabled enable
setStormControlGlobal stormControlGlobalConfiguration broadcast level 64
setStormControlGlobal stormControlGlobalConfiguration broadcast mode bps
setStormControlGlobal stormControlGlobalConfiguration unicast uc_enabled enable
setStormControlGlobal stormControlGlobalConfiguration unicast level 16
setStormControlGlobal stormControlGlobalConfiguration unicast mode kbps
setStormControlGlobal stormControlGlobalConfiguration multicast mc_enabled enable
setStormControlGlobal stormControlGlobalConfiguration multicast mode bps
setStormControlGlobal stormControlGlobalConfiguration unicast level 8

Switch(config-controller-ProvisionStormControl)# setStormControlGlobal commit
SetStormControlGlobal Commit Success!!!
Switch(config-controller-ProvisionStormControl)#end
```

## Retrieving the Storm Control Configuration

### Before You Begin

- Perform the steps to provision storm control on the controller. See [Provisioning the Controller to Configure Storm Control](#), on page 496.

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<code>getStormControlGlobal {commit   flush   getStormControlGlobalRequest   review}</code>	Retrieve the storm control configuration. <ul style="list-style-type: none"> <li>• <code>getStormControlGlobalRequest</code>—Request storm control configuration properties.</li> </ul>

	Command or Action	Purpose
	<p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionStormControl)#getStormControlGlobal getStormControlGlobalRequest Switch(config-controller-ProvisionStormControl)#getStormControlGlobal review Switch(config-controller-ProvisionStormControl)#getStormControlGlobal commit</pre>	<ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the storm control configuration to NID.</li> <li>• <b>flush</b>—Flushes all storm control configuration from the queue.</li> <li>• <b>review</b>—Displays the configuration.</li> </ul>
<b>Step 2</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch((config-controller)ProvisionStormControl)# exit</pre>	Exits the storm control provisioning mode.

### Configuration Example

The example shows how to retrieve the configuration on the ME1200:

```
Switch(config-controller-ProvisionStormControl)#getStormControlGlobal
getStormControlGlobalRequest
Switch(config-controller-ProvisionStormControl)#getStormControlGlobal review
Commands in queue:
    getStormControlGlobal getStormControlGlobalRequest
    getStormControlGlobal getStormControlGlobalRequest

Switch(config-controller-ProvisionStormControl)# getStormControlGlobal commit
Switch(config-controller-ProvisionStormControl)# end
```

## Displaying the Storm Control Configuration

### Before You Begin

- Perform the steps to provision storm control on the controller. See [Provisioning the Controller to Configure Storm Control](#), on page 496.

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<p><b>showStormControl {commit   flush   showStormControlReq   review}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionStormControl)#showStormControl showStormControlReq Switch(config-controller-ProvisionStormControl)#showStormControl review Switch(config-controller-ProvisionStormControl)#showStormControl commit</pre>	<p>Displays the storm control configuration.</p> <ul style="list-style-type: none"> <li>• <b>showStormControlReq</b>—Displays storm control policer properties.</li> <li>• <b>commit</b>—Sends the show storm control configuration to NID.</li> <li>• <b>flush</b>—Flushes all show storm control configuration from the queue.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>review</b>—Displays the show storm configuration.</li> </ul>
<b>Step 2</b>	<b>exit</b>  <b>Example:</b> Switch((config-controller) ProvisionStormControl) # <b>exit</b>	Exits the storm control provisioning mode.

### Configuration Example

The example shows how to view the configuration:

```
Switch(config-controller-ProvisionStormControl) #showStormControl showStormControlReq
Switch(config-controller-ProvisionStormControl) #showStormControl review
```

Commands in queue:

```
showStormControl showStormControlReq
Switch(config-controller-ProvisionStormControl) #showStormControl commit
```

```
ShowStormControl_Output.stormControlGlobalConfiguration.broadcast.bc_enabled = true
ShowStormControl_Output.stormControlGlobalConfiguration.broadcast.level = 1024000
ShowStormControl_Output.stormControlGlobalConfiguration.broadcast.mode.t = 2
ShowStormControl_Output.stormControlGlobalConfiguration.broadcast.mode.u.kbps = 'kbps'
ShowStormControl_Output.stormControlGlobalConfiguration.multicast.mc_enabled = true
ShowStormControl_Output.stormControlGlobalConfiguration.multicast.level = 512000
ShowStormControl_Output.stormControlGlobalConfiguration.multicast.mode.t = 2
ShowStormControl_Output.stormControlGlobalConfiguration.multicast.mode.u.kbps = 'kbps'
ShowStormControl_Output.stormControlGlobalConfiguration.unicast.uc_enabled = true
ShowStormControl_Output.stormControlGlobalConfiguration.unicast.level = 1000
ShowStormControl_Output.stormControlGlobalConfiguration.unicast.mode.t = 2
ShowStormControl_Output.stormControlGlobalConfiguration.unicast.mode.u.kbps = 'kbps'
ShowStormControl_Commit Success!!!
```

```
Switch(config-controller-ProvisionStormControl) # exit
```

## Negating Storm Control Configuration and Restoring Defaults



**Note** Following are the default values for storm control:

- broadcast
  - bc\_enabled = false
  - level = 1
  - mode = bps
- multicast
  - mc\_enabled = false
  - level = 1
  - mode = bps
- unicast
  - uc\_enabled = false
  - level = 1
  - mode = bps

### Before You Begin

- Perform the steps to provision storm control on the controller. See [Provisioning the Controller to Configure Storm Control](#), on page 496.
- 

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<p><b>no</b> {getStormControlGlobal   setStormControlGlobal   showStormControl   exit}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionStormControl)# no ? exit          Exit from ProvisionStormControl sub configuration mode getStormControlGlobal Storm Control Global Configuration Get Request setStormControlGlobal Storm Control Global Configuration Set Request showStormControl      Display Storm Control Policer properties</pre>	<p>Negates storm control configurations.</p> <ul style="list-style-type: none"> <li>• <b>getStormControlGlobal</b>—View the configuration.</li> <li>• <b>setStormControlGlobal</b>—Sets the configuration.</li> <li>• <b>showStormControl</b>—Displays the configuration.</li> <li>• <b>exit</b>—Exits from ProvisionStormControl mode.</li> </ul>

	Command or Action	Purpose
Step 2	<b>exit</b>  <b>Example:</b> Switch((config-controller)ProvisionStormControl)# <b>exit</b>	Exits the storm control provisioning mode.

### Configuration Example

The following example is a sample output for negation:

```
Switch(config-controller-ProvisionStormControl)#showStormControl review
Commands in queue:
showStormControl showStormControlReq
```

```
Switch(config-controller-ProvisionStormControl)#no showStormControl showStormControlReq
Switch(config-controller-ProvisionStormControl)#showStormControl review
No commands in queue
```

```
Switch(config-controller-ProvisionStormControl)#setStormControlGlobal review
Commands in queue:
setStormControlGlobal stormControlGlobalConfiguration broadcast bc_enabled enable
setStormControlGlobal stormControlGlobalConfiguration broadcast level 64
setStormControlGlobal stormControlGlobalConfiguration broadcast level 128
```

```
Switch(config-controller-ProvisionStormControl)#no setStormControlGlobal
stormControlGlobalConfiguration broadcast level 64
Switch(config-controller-ProvisionStormControl)#stormControlGlobal review
Commands in queue:
setStormControlGlobal stormControlGlobalConfiguration broadcast bc_enabled enable
setStormControlGlobal stormControlGlobalConfiguration broadcast level 128
```

## Deleting the NTP Configuration

### Before You Begin

- Perform the steps to provision NTP on the controller. See [Provisioning the Controller to Configure NTP, on page 489](#).

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>deleteNtpConfig {commit   flush   ntpDeleteConfig   review}</b>  <b>Example:</b> Switch(config-controller-NtpPortType)# <b>deleteNtpConfig ?</b> commit               commit deleteNtpConfig flush               flush all deleteNtpConfig commands from queue ntpDeleteConfig   delete NTP config request review             review deleteNtpConfig commands	Removes the storm control configuration. <ul style="list-style-type: none"> <li>• <b>commit</b>—Sends the NTP configuration to NID.</li> <li>• <b>flush</b>—Flushes all NTP configuration from the queue.</li> <li>• <b>ntpDeleteConfig</b>—Deletes the NTP configuration request on the controller.</li> <li>• <b>review</b>—Displays the configuration.</li> </ul>

	Command or Action	Purpose
<b>Step 2</b>	<p><b>ntpDeleteConfig { ntpEnable   ntpServerNo <i>server_num</i> }</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-NtpPortType) # deleteNtpConfig ntpDeleteConfig ntpEnable Switch(config-controller-NtpPortType) # deleteNtpConfig ntpDeleteConfig ntpServer 1</pre>	<ul style="list-style-type: none"> <li>• <b>ntpEnable</b>—Disables the NTP configuration.</li> <li>• <b>ntpServerNo</b>—Disables the NTP server.</li> <li>• <b>server_num</b>—Specifies the NTP server. The valid range is from 1 to 5.</li> </ul>
<b>Step 3</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-NtpPortType) # exit</pre>	Exits the NTP provisioning mode.





## Configuring Syslog

---

This document describes the Syslog feature and configuration steps to implement Syslog.

- [Prerequisites for Configuring Syslog, page 505](#)
- [Information About Syslog, page 505](#)
- [Enabling Syslog, page 506](#)
- [Clearing Syslog, page 507](#)
- [Verifying Syslog, page 509](#)

### Prerequisites for Configuring Syslog

- NID must be added to the controller.
- NID must be accessible from the controller.

### Information About Syslog

Syslog is a method to collect messages from devices to a server running a syslog daemon. A syslog service simply accepts messages, and stores them in files or prints them according to a simple configuration file. This form of logging is the best available for Cisco devices because it can provide protected long-term storage for logs. This is useful both in routine troubleshooting and in incident handling.

# Enabling Syslog

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid / NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
<b>Step 3</b>	<b>sysLog</b>  <b>Example:</b> Switch(config-controller)# sysLog	Enters the sysLog mode.
<b>Step 4</b>	<b>setSyslogProperties sysLogConf {valid   logServer {valid   host {hostname   ipv4address}}}   level {info   error   warning}} {enable   disable}</b>  <b>Example:</b> Switch(config-controller-sysLog)# setSyslogProperties sysLogConf valid enable Switch(config-controller-sysLog)# setSyslogProperties sysLogConf level info Switch(config-controller-sysLog)# setSyslogProperties sysLogConf logServer valid enable Switch(config-controller-sysLog)# setSyslogProperties sysLogConf logServer host ipv4address 10.78.101.221	Configures syslog properties. <ul style="list-style-type: none"> <li>• <b>sysLogConf</b>—Sets syslog properties.</li> <li>• <b>valid</b>—Enables or disables logging.</li> <li>• <b>logServer</b>—Specifies the logging server.</li> <li>• <b>valid</b>—Enables or disables logging server.</li> <li>• <b>host</b>—Specifies log server name or hostname.</li> <li>• <b>hostname</b>—Specifies domain name of the logging server.</li> <li>• <b>ipv4address</b>—Specifies IPv4 address of the logging server.</li> <li>• <b>level</b>—Specifies the log level.</li> <li>• <b>info</b>— Specifies the level information.</li> <li>• <b>error</b>— Specifies the level error.</li> <li>• <b>warning</b>— Specifies the level warning.</li> <li>• <b>enable</b>— Enables configuration of syslog properties.</li> <li>• <b>disable</b>— Disables configuration of syslog properties.</li> </ul>
<b>Step 5</b>	<b>setSyslogProperties review</b>  <b>Example:</b> Switch(config-controller-sysLog)# setSyslogProperties review	Displays the configuration.

	Command or Action	Purpose
Step 6	<b>setSyslogProperties commit</b>  <b>Example:</b> Switch(config-controller-sysLog) # setSyslogProperties commit	Sends the configuration to NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-sysLog) # exit	.Exits to the config-controller mode.

### Configuration Example

The example shows how to enable syslog:

```
Switch(config-controller-sysLog) # setSyslogProperties sysLogConf valid enable
Switch(config-controller-sysLog) # setSyslogProperties sysLogConf level info
Switch(config-controller-sysLog) # setSyslogProperties sysLogConf logServer valid enable
Switch(config-controller-sysLog) # setSyslogProperties sysLogConf logServer host ipv4address
10.78.101.221
```

```
Switch(config-controller-sysLog) # setSyslogProperties review
Switch(config-controller-sysLog) # setSyslogProperties commit
Switch(config-controller-sysLog) # exit
```

## Clearing Syslog

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid / NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
Step 3	<b>sysLog</b>  <b>Example:</b> Switch(config-controller) # sysLog	Enters the sysLog mode.
Step 4	<b>clearSysLog clearLogLevelConf {error   info   warning} {enable   disable}</b>	Clears system log information. <ul style="list-style-type: none"> <li>• <b>clearLogLevelConf</b>—Clears log information.</li> </ul>

	Command or Action	Purpose
	<p><b>Example:</b>  Switch(config-controller-sysLog)# clearSysLog  clearLogLevelConf info enable</p>	<ul style="list-style-type: none"> <li>• <b>error</b>—Specifies level error.</li> <li>• <b>info</b>—Specifies level information.</li> <li>• <b>warning</b>—Specifies level warning.</li> <li>• <b>enable</b>—Enables the clearing of log information.</li> <li>• <b>disable</b>—Disables the clearing of log information.</li> </ul>
<b>Step 5</b>	<p><b>clearSysLog review</b></p> <p><b>Example:</b>  Switch(config-controller-sysLog)# clearSysLog  review</p>	Displays the configuration.
<b>Step 6</b>	<p><b>clearSysLog commit</b></p> <p><b>Example:</b>  Switch(config-controller-sysLog)# clearSysLog  commit</p>	Sends the configuration to NID.
<b>Step 7</b>	<p><b>clearSysLog clearLogLevelConf {error   info   warning} {enable   disable}</b></p> <p><b>Example:</b>  Switch(config-controller-sysLog)# clearSysLog  clearLogLevelConf error enable</p>	<p>Clears system log level errors.</p> <ul style="list-style-type: none"> <li>• <b>clearLogLevelConf</b>—Clears log information.</li> <li>• <b>error</b>—Specifies level error.</li> <li>• <b>info</b>—Specifies level information.</li> <li>• <b>warning</b>—Specifies level warning.</li> <li>• <b>enable</b>—Enables the clearing of log information.</li> <li>• <b>disable</b>—Disables the clearing of log information.</li> </ul>
<b>Step 8</b>	<p><b>clearSysLog review</b></p> <p><b>Example:</b>  Switch(config-controller-sysLog)# clearSysLog  review</p>	Displays the configuration.
<b>Step 9</b>	<p><b>clearSysLog commit</b></p> <p><b>Example:</b>  Switch(config-controller-sysLog)# clearSysLog  commit</p>	Sends the configuration to NID.
<b>Step 10</b>	<p><b>clearSysLog clearLogLevelConf {error   info   warning} {enable   disable}</b></p> <p><b>Example:</b>  Switch(config-controller-sysLog)# clearSysLog  clearLogLevelConf warning enable</p>	<p>Clears system log level warnings.</p> <ul style="list-style-type: none"> <li>• <b>clearLogLevelConf</b>—Clears log information.</li> <li>• <b>error</b>—Specifies level error.</li> <li>• <b>info</b>—Specifies level information.</li> <li>• <b>warning</b>—Specifies level warning.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>enable</b>—Enables the clearing of log information.</li> <li>• <b>disable</b>—Disables the clearing of log information.</li> </ul>
<b>Step 11</b>	<b>clearSysLog review</b>  <b>Example:</b> Switch(config-controller-sysLog)# clearSysLog review	Displays the configuration.
<b>Step 12</b>	<b>clearSysLog commit</b>  <b>Example:</b> Switch(config-controller-sysLog)# clearSysLog commit	Sends the configuration to NID.
<b>Step 13</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-sysLog)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to clear syslog:

```
Switch(config-controller-sysLog)# clearSysLog clearLogLevelConf info
Switch(config-controller-sysLog)# clearSysLog review
Switch(config-controller-sysLog)# clearSysLog commit
Switch(config-controller-sysLog)# clearSysLog clearLogLevelConf error
Switch(config-controller-sysLog)# clearSysLog review
Switch(config-controller-sysLog)# clearSysLog commit
Switch(config-controller-sysLog)# clearSysLog clearLogLevelConf warning
Switch(config-controller-sysLog)# clearSysLog review
Switch(config-controller-sysLog)# clearSysLog commit
Switch(config-controller-sysLog)# exit
```

## Verifying Syslog

Use the following command to verify the syslog status on the controller.

- **showLogLevelConf**

This command displays the syslog configuration status on the NID. The following is a sample output from the command:

```
Switch(config-controller-sysLog)# showSysLog showLogLevelConf
Switch(config-controller-sysLog)# showSysLog review
```

```
Commands in queue:
showSysLog showLogLevelConf
```

```
Switch(config-controller-sysLog)# showSysLog commit
```

```
Clearing Socket 0 Clearing Socket 0
ShowSysLog_Output.showLogLevelResponse.hostMode = true
ShowSysLog_Output.showLogLevelResponse.hostAddress = '10.78.101.221'
ShowSysLog_Output.showLogLevelResponse.logLevel = 'info'
ShowSysLog_Output.showLogLevelResponse.noOfLogEntries.InfoCounter =
40
ShowSysLog_Output.showLogLevelResponse.noOfLogEntries.warningCounter
= 0
ShowSysLog_Output.showLogLevelResponse.noOfLogEntries.errorCounter =
0

ShowSysLog Commit Success!!!
```



## CHAPTER 24

# Configuring Dedicated Debug Shell

---

This document describes the configuration steps to directly access Cisco ME 1200 NID using a dedicated debug shell.

- [Prerequisites for Directly Accessing Cisco ME 1200 NID, page 511](#)
- [Information About Dedicated Debug Shell, page 511](#)
- [How to Provision Dedicated Debug Shell, page 512](#)
- [Directly Accessing the Cisco ME 1200 NID Using a Dedicated Debug Shell, page 512](#)

## Prerequisites for Directly Accessing Cisco ME 1200 NID

- NID must be added to the controller.
- NID must be accessible from the controller.

## Information About Dedicated Debug Shell

Dedicated debug shell provides direct access to Cisco ME 1200 NID.

# How to Provision Dedicated Debug Shell

## Configuring the UPE NID Controller to Directly Access a Cisco ME 1200 NID

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>debugShell</b>  <b>Example:</b> Switch(config-controller)# debugShell	Enters the dedicated debug shell mode.

#### Configuration Example

The example shows how to configure an UPE NID Controller to Directly Access a Cisco ME 1200 NID:

```
Switch(config-controller)# debugShell
```

#### What to Do Next

Log on to the Cisco ME 1200 NID.

## Directly Accessing the Cisco ME 1200 NID Using a Dedicated Debug Shell

Log on to the Cisco ME 1200 NID using the username and password.



## DETAILED STEPS

	Command or Action	Purpose
Step 1	<p>?</p> <p><b>Example:</b> NID-1# ?</p> <pre> apply clear          Reset functions configure     Enter configuration mode copy          Copy from source to destination delete        Delete one file in flash: file system diagnostic    diagnostic mode dir           Directory of all files in flash: file system disable       Turn off privileged commands do            To run exec commands in config mode dot1x         IEEE Standard for port-based Network Access Control  enable        Turn on privileged commands erps          Ethernet Ring Protection Switching exit          Exit from EXEC mode firmware      Firmware upgrade/swap help          Description of the interactive help system ip            IPv4 commands link-oam      Link OAM configuration logout        Exit from EXEC mode more          Display file no            Negate a command or set its defaults ping          Send ICMP echo messages platform      Platform configuration ptp           Misc non persistent 1588 settings reload        Reload system. rfc2544       RFC2544 performance tests send          Send a message to other tty lines show          Show running system information terminal      Set terminal line parameters </pre>	Displays the available commands to enter the dedicated debug shell.
Step 2	<p><b>exit</b></p> <p><b>Example:</b> NID-1# exit</p>	Exits the Cisco ME 1200 NID interface.





## CHAPTER 25

# Configuring SPAN

---

This document describes the Switched Port Analyzer (SPAN) feature and configuration steps to implement SPAN.

- [Prerequisites for Configuring SPAN, page 515](#)
- [Restrictions for Configuring SPAN, page 515](#)
- [Information About SPAN, page 516](#)
- [How to Provision SPAN, page 516](#)
- [Verifying Diagnostics POST, page 525](#)
- [Additional References, page 526](#)

## Prerequisites for Configuring SPAN

- You must enable SPAN globally to support the desired SPAN configuration.
- NID must have an IP address.
- You must select a SPAN source from the following options:
  - Interface—one or more source interfaces.
  - VLAN— one or more source VLANs.
  - CPU— to monitor CPU traffic.

## Restrictions for Configuring SPAN

- You cannot configure a port as both a source and destination port.
- VLAN SPAN monitors only the traffic that leaves or enters Layer 2 ports in the VLAN.
- SPAN sources interface and VLAN cannot exit together.

## Information About SPAN


Switched Port Analyzer (SPAN) feature, sometimes called port mirroring or port monitoring, selects network traffic for analysis by a network analyzer. The SPAN feature is local when the monitored ports are all located on the same switch as the destination port. A local SPAN session is an association of a destination port with source ports. You can monitor incoming or outgoing traffic on a series or range of ports.

SPAN is used to monitor traffic within the switch. Traffic source can be from:

- Single or multiple ports
- Single or multiple VLANs
- Source CPU

Destination can be an interface on the same switch. The following figure shows the topology used for provisioning SPAN on a NID using a UPE NID Controller.

**Figure 14: SPAN Topology**

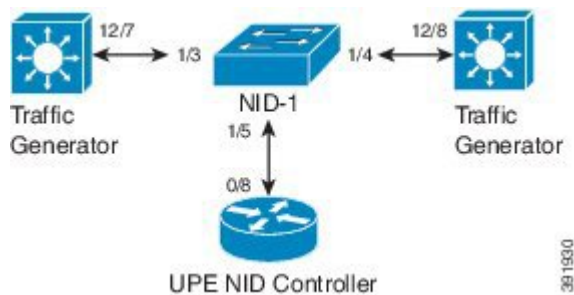

## How to Provision SPAN

### Enabling SPAN Globally to Start a Monitoring Session

#### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1 NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.

	Command or Action	Purpose
<b>Step 3</b>	<b>span</b>  <b>Example:</b> Switch(config-controller)# span	Enters the SPAN mode.
<b>Step 4</b>	<b>setSpanGlobalConfReq {enable   disable}</b>  <b>Example:</b> Switch(config-controller-SPAN)# setSpanGlobalConf setSpanGlobalConfReq enable	Enters SPAN global configuration mode. Sub-command options. <ul style="list-style-type: none"> <li>• <b>enable</b>—Enables SPAN globally.</li> <li>• <b>disable</b>—Disables SPAN globally.</li> </ul>
<b>Step 5</b>	<b>setSpanGlobalConf review</b>  <b>Example:</b> Switch(config-controller-SPAN)# setSpanGlobalConf review	(Optional) Displays the configuration.
<b>Step 6</b>	<b>setSpanGlobalConf commit</b>  <b>Example:</b> Switch(config-controller-SPAN)# setSpanGlobalConf commit	Sends the configuration to NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-SPAN)# exit	Exits to the config-controller mode.

### Configuration Example

- The example shows how to enable SPAN globally:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# span
Switch(config-controller-SPAN)# setSpanGlobalConf setSpanGlobalConfReq enable
Switch(config-controller-SPAN)# setSpanGlobalConf review
Switch(config-controller-SPAN)# setSpanGlobalConf commit
Switch(config-controller-SPAN)# exit
```

## Configuring SPAN Source Interface

### Before You Begin

Perform the steps to enable SPAN globally. See [Enabling SPAN Globally to Start a Monitoring Session](#), on page 516.

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<p><b>setSpanSrcConfRequest</b> {source {cpu {rx   tx   both}   {vlan <i>vlan_list</i>}   interface {<i>intf_range</i>   traffic-type {rx   tx   both}}}</p> <p><b>Example:</b>  Switch(config-controller-SPAN) #  setSpanSrcConf commitsetSpanSrcConf  setSpanSrcConfRequest source interface  intf_range 1-2</p>	<p>Configures SPAN source interface.</p> <ul style="list-style-type: none"> <li>• <b>source</b>—Mirrors source interface or VLAN.</li> <li>• <b>cpu</b>—Mirrors source CPU.</li> <li>• <b>rx</b>—Mirrors received traffic.</li> <li>• <b>tx</b>—Mirrors transmitted traffic.</li> <li>• <b>both</b>—Mirrors received and transmitted traffic.</li> <li>• <b>vlan</b>—Mirrors source VLAN.</li> <li>• <i>vlan_list</i>—Mirrors source VLAN.</li> <li>• <b>interface</b>— Mirrors source interface and traffic type.</li> <li>• <i>intf_range</i>—Mirrors an interface number or a range from 1 to 6.</li> <li>• <b>traffic-type</b>—Mirrors traffic type.</li> <li>• <b>rx</b>—Mirrors received traffic.</li> <li>• <b>tx</b>—Mirrors transmitted traffic.</li> <li>• <b>both</b>—Mirrors received and transmitted traffic.</li> </ul>
<b>Step 2</b>	<p><b>setSpanSrcConfRequest</b> {source {cpu {rx   tx   both}   {vlan <i>vlan_list</i>}   interface {<i>intf_range</i>   traffic-type {rx   tx   both}}}</p> <p><b>Example:</b>  Switch(config-controller-SPAN) #  setSpanSrcConf commitsetSpanSrcConf  setSpanSrcConfRequest source interface  traffic-type both</p>	<p>Configures SPAN source traffic type as both, receive and transmit.</p> <ul style="list-style-type: none"> <li>• <b>source</b>—Mirrors source interface or VLAN.</li> <li>• <b>cpu</b>—Mirrors source CPU.</li> <li>• <b>rx</b>—Mirrors received traffic.</li> <li>• <b>tx</b>—Mirrors transmitted traffic.</li> <li>• <b>both</b>—Mirrors received and transmitted traffic.</li> <li>• <b>vlan</b>—Mirrors source VLAN.</li> <li>• <i>vlan_list</i>—Mirrors source VLAN.</li> <li>• <b>interface</b>— Mirrors source interface and traffic type.</li> <li>• <i>intf_range</i>—Mirrors an interface number or a range from 1 to 6.</li> <li>• <b>traffic-type</b>—Mirrors traffic type.</li> <li>• <b>rx</b>—Mirrors received traffic.</li> <li>• <b>tx</b>—Mirrors transmitted traffic.</li> <li>• <b>both</b>—Mirrors received and transmitted traffic.</li> </ul>

	Command or Action	Purpose
<b>Step 3</b>	<b>setSpanSrcConf review</b>  <b>Example:</b> Switch(config-controller-SPAN) # setSpanSrcConf review	(Optional) Displays the configuration.
<b>Step 4</b>	<b>setSpanGlobalConf commit</b>  <b>Example:</b> Switch(config-controller-SPAN) # setSpanSrcConf commit	Sends the configuration to NID.
<b>Step 5</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-SPAN) # exit	Exits to the config-controller mode.

### Configuration Example

- The example shows how to configure SPAN on an interface range:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# span
Switch(config-controller-SPAN)# setSpanGlobalConf setSpanGlobalConfReq enable
Switch(config-controller-SPAN)# setSpanGlobalConf review
Switch(config-controller-SPAN)# setSpanGlobalConf commit
Switch(config-controller-SPAN)# exit
Switch(config-controller-SPAN)# setSpanSrcConf commitsetSpanSrcConf setSpanSrcConfRequest
source interface intf_range 1-2
Switch(config-controller-SPAN)# setSpanSrcConf commitsetSpanSrcConf setSpanSrcConfRequest
source interface traffic-type both
Switch(config-controller-SPAN)# setSpanSrcConf review
Switch(config-controller-SPAN)# setSpanSrcConf commit
Switch(config-controller-SPAN)# exit
```

## Configuring SPAN Source CPU

### Before You Begin

Perform the steps to enable SPAN globally. See [Enabling SPAN Globally to Start a Monitoring Session](#), on page 516.

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>setSpanSrcConfRequest {source {cpu {rx   tx   both}   {vlan vlan_list}   interface {intf_range   traffic-type {rx   tx   both}}}</b>	Configures SPAN source CPU.  <ul style="list-style-type: none"> <li><b>source</b>—Mirrors source interface or VLAN.</li> </ul>

	Command or Action	Purpose
	<p><b>Example:</b></p> <pre>Switch(config-controller-SPAN)# setSpanSrcConf setSpanSrcConfRequest source cpu both</pre>	<ul style="list-style-type: none"> <li>• <b>cpu</b>—Mirrors source CPU.</li> <li>• <b>rx</b>—Mirrors received traffic.</li> <li>• <b>tx</b>—Mirrors transmitted traffic.</li> <li>• <b>both</b>—Mirrors received and transmitted traffic.</li> <li>• <b>vlan</b>—Mirrors source VLAN.</li> <li>• <b>vlan_list</b>—Mirrors source VLAN.</li> <li>• <b>interface</b>— Mirrors source interface and traffic type.</li> <li>• <b>intf_range</b>—Mirrors an interface number or a range from 1 to 6.</li> <li>• <b>traffic-type</b>—Mirrors traffic type.</li> <li>• <b>rx</b>—Mirrors received traffic.</li> <li>• <b>tx</b>—Mirrors transmitted traffic.</li> <li>• <b>both</b>—Mirrors received and transmitted traffic.</li> </ul>
<b>Step 2</b>	<p><b>setSpanSrcConf review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-SPAN)# setSpanSrcConf review</pre>	(Optional) Displays the configuration.
<b>Step 3</b>	<p><b>setSpanGlobalConf commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-SPAN)# setSpanSrcConf commit</pre>	Sends the configuration to NID.
<b>Step 4</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-SPAN)# exit</pre>	Exits to the config-controller mode.

### Configuration Example

- The example shows how to configure SPAN on an interface range:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# span
Switch(config-controller-SPAN)# setSpanGlobalConf setSpanGlobalConfReq enable
Switch(config-controller-SPAN)# setSpanGlobalConf review
Switch(config-controller-SPAN)# setSpanGlobalConf commit
Switch(config-controller-SPAN)# exit
Switch(config-controller-SPAN)# setSpanSrcConf setSpanSrcConfRequest source cpu both
Switch(config-controller-SPAN)# setSpanSrcConf review
Switch(config-controller-SPAN)# setSpanSrcConf commit
Switch(config-controller-SPAN)# exit
```



## Configuring SPAN Source VLAN

### Before You Begin

Perform the steps to enable SPAN globally. See [Enabling SPAN Globally to Start a Monitoring Session](#), on page 516.

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<p><b>setSpanSrcConfRequest</b> {source {cpu {rx   tx   both}   {vlan <i>vlan_list</i>}   interface {<i>intf_range</i>   traffic-type {rx   tx   both}}}</p> <p><b>Example:</b>  Switch(config-controller-SPAN) #  setSpanSrcConf setSpanSrcConfRequest source  vlan <i>vlan_list</i> 100</p>	<p>Configures SPAN source VLAN.</p> <ul style="list-style-type: none"> <li>• <b>source</b>—Mirrors source interface or VLAN.</li> <li>• <b>cpu</b>—Mirrors source CPU.</li> <li>• <b>rx</b>—Mirrors received traffic.</li> <li>• <b>tx</b>—Mirrors transmitted traffic.</li> <li>• <b>both</b>—Mirrors received and transmitted traffic.</li> <li>• <b>vlan</b>—Mirrors source VLAN.</li> <li>• <i>vlan_list</i>—Mirrors source VLAN.</li> <li>• <b>interface</b>— Mirrors source interface and traffic type.</li> <li>• <i>intf_range</i>—Mirrors an interface number or a range from 1 to 6.</li> <li>• <b>traffic-type</b>—Mirrors traffic type.</li> <li>• <b>rx</b>—Mirrors received traffic.</li> <li>• <b>tx</b>—Mirrors transmitted traffic.</li> <li>• <b>both</b>—Mirrors received and transmitted traffic.</li> </ul>
<b>Step 2</b>	<p><b>setSpanSrcConf review</b></p> <p><b>Example:</b>  Switch(config-controller-SPAN) #  setSpanSrcConf review</p>	(Optional) Displays the configuration.
<b>Step 3</b>	<p><b>setSpanGlobalConf commit</b></p> <p><b>Example:</b>  Switch(config-controller-SPAN) #  setSpanSrcConf commit</p>	Sends the configuration to NID.

	Command or Action	Purpose
<b>Step 4</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-SPAN) # exit	Exits to the config-controller mode.

### Configuration Example

- The example shows how to configure SPAN on an interface range:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# span
Switch(config-controller-SPAN)# setSpanGlobalConf setSpanGlobalConfReq enable
Switch(config-controller-SPAN)# setSpanGlobalConf review
Switch(config-controller-SPAN)# setSpanGlobalConf commit
Switch(config-controller-SPAN)# exit
Switch(config-controller-SPAN)# setSpanSrcConf setSpanSrcConfRequest source vlan
vlan_list 100
Switch(config-controller-SPAN)# setSpanSrcConf review
Switch(config-controller-SPAN)# setSpanSrcConf commit
Switch(config-controller-SPAN)# exit
```

## Configuring SPAN Destination

### Before You Begin

Perform the steps to enable SPAN globally. See [Enabling SPAN Globally to Start a Monitoring Session](#), on page 516.

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>setSpanDestConfRequest destination intf_id</b>  <b>Example:</b> Switch(config-controller-SPAN) # setSpanDestConf setSpanDestConfRequest destination intf_id 4	Configures SPAN destination. <ul style="list-style-type: none"> <li><b>destination</b>—Mirrors destination interface.</li> <li><b>intf_id</b>—Specifies single port ID range from 1 to 6.</li> </ul>
<b>Step 2</b>	<b>setSpanDestConf review</b>  <b>Example:</b> Switch(config-controller-SPAN) # setSpanDestConf review	(Optional) Displays the configuration.
<b>Step 3</b>	<b>setSpanDestConf commit</b>  <b>Example:</b> Switch(config-controller-SPAN) # setSpanDestConf commit	Sends the configuration to NID.

	Command or Action	Purpose
Step 4	<b>exit</b>  <b>Example:</b> Switch(config-controller-SPAN) # exit	Exits to the config-controller mode.

### Configuration Example

- The example shows how to configure SPAN destination:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# span
Switch(config-controller-SPAN)# setSpanGlobalConf setSpanGlobalConfReq enable
Switch(config-controller-SPAN)# setSpanGlobalConf review
Switch(config-controller-SPAN)# setSpanGlobalConf commit
Switch(config-controller-SPAN)# exit
Switch(config-controller-SPAN)# setSpanDestConf setSpanDestConfRequest destination
intf_id 4
Switch(config-controller-SPAN)# setSpanDestConf review
Switch(config-controller-SPAN)# setSpanDestConf commit
Switch(config-controller-SPAN)# exit
```

## Deleting SPAN Source Configuration

### Before You Begin

Perform the steps to enable SPAN globally. See [Enabling SPAN Globally to Start a Monitoring Session](#), on page 516.

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>delSpanSrcConfRequest</b> {source {cpu {rx   tx   both}   {vlan <i>vlan_list</i> }   interface { <i>intf_range</i>   traffic-type {rx   tx   both}}}  <b>Example:</b> Switch(config-controller-SPAN) # delSpanSrcConf delSpanSrcConfRequest source cpu rx	Deletes SPAN source configuration. <ul style="list-style-type: none"> <li><b>source</b>—Removes mirror of source interface or VLAN.</li> <li><b>cpu</b>—Removes mirror of source CPU.</li> <li><b>rx</b>—Removes mirror of received traffic.</li> <li><b>tx</b>—Removes mirror of transmitted traffic.</li> <li><b>both</b>—Removes mirror of received and transmitted traffic.</li> <li><b>vlan</b>—Removes mirror of source VLAN.</li> <li><b>vlan_list</b>—Removes mirror of source VLAN.</li> <li><b>interface</b>—Removes mirror of source interface and traffic type.</li> <li><b>intf_range</b>—Removes mirror of interface number or a range from 1 to 6.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>traffic-type</b>—Removes mirror of traffic type.</li> <li>• <b>rx</b>—Removes mirror of received traffic.</li> <li>• <b>tx</b>—Removes mirror of transmitted traffic.</li> <li>• <b>both</b>—Removes mirror of received and transmitted traffic.</li> </ul>
<b>Step 2</b>	<b>delSpanSrcConf review</b>  <b>Example:</b> Switch(config-controller-SPAN) # delSpanSrcConf review	(Optional) Displays the configuration.
<b>Step 3</b>	<b>delSpanSrcConf commit</b>  <b>Example:</b> Switch(config-controller-SPAN) # delSpanSrcConf commit	Sends the configuration to NID.
<b>Step 4</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-SPAN) # exit	Exits to the config-controller mode.

### Configuration Example

- The example shows how to configure SPAN on an interface range:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# span
Switch(config-controller-SPAN)# setSpanGlobalConf setSpanGlobalConfReq enable
Switch(config-controller-SPAN)# setSpanGlobalConf review
Switch(config-controller-SPAN)# setSpanGlobalConf commit
Switch(config-controller-SPAN)# exit
Switch(config-controller-SPAN)# delSpanSrcConf delSpanSrcConfRequest source cpu rx
Switch(config-controller-SPAN)# delSpanSrcConf review
Switch(config-controller-SPAN)# delSpanSrcConf commit
Switch(config-controller-SPAN)# exit
```

## Deleting SPAN Destination Configuration

### Before You Begin

Perform the steps to enable SPAN globally. See [Enabling SPAN Globally to Start a Monitoring Session](#), on page 516.

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>delSpanDestConfRequest destination intf_id</b>  <b>Example:</b> <pre>Switch(config-controller-SPAN)# delSpanDstConf delSpanDstConfRequest destination intf_id 4</pre>	Deletes SPAN destination configuration. <ul style="list-style-type: none"> <li>• <b>destination</b>—Removes mirror of destination interface.</li> <li>• <b>intf_id</b>—Specifies single port ID range from 1 to 6.</li> </ul>
Step 2	<b>delSpanDstConf review</b>  <b>Example:</b> <pre>Switch(config-controller-SPAN)# delSpanDstConf review</pre>	(Optional) Displays the configuration.
Step 3	<b>delSpanDstConf commit</b>  <b>Example:</b> <pre>Switch(config-controller-SPAN)# delSpanDstConf commit</pre>	Sends the configuration to NID.
Step 4	<b>exit</b>  <b>Example:</b> <pre>Switch(config-controller-SPAN)# exit</pre>	Exits to the config-controller mode.

## Configuration Example

- The example shows how to configure SPAN destination:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# span
Switch(config-controller-SPAN)# setSpanGlobalConf setSpanGlobalConfReq enable
Switch(config-controller-SPAN)# setSpanGlobalConf review
Switch(config-controller-SPAN)# setSpanGlobalConf commit
Switch(config-controller-SPAN)# exit
Switch(config-controller-SPAN)# delSpanDstConf delSpanDstConfRequest destination intf_id
4
Switch(config-controller-SPAN)# delSpanDstConf review
Switch(config-controller-SPAN)# delSpanDstConf commit
Switch(config-controller-SPAN)# exit
```

## Verifying Diagnostics POST

Use the following commands to verify the diagnostics test status.

- **showDiagResults showDiagTestResults**

The following is a sample output from the command:

```
Switch(config-controller-Diagnostics)# showDiagResults showDiagTestResults
Switch(config-controller-Diagnostics)# showDiagResults review
```

Commands in queue:

```
showDiagResults showDiagTestResults
```

```
Switch(config-controller-Diagnostics)# showDiagResults commit
```

```
ShowDiagResults_Output.diagTestResults.testresult[0] = 'External Port
Loopback Test =>'
ShowDiagResults_Output.diagTestResults.testresult[1] = 'Passed'
ShowDiagResults_Output.diagTestResults.testresult[2] = 'Sync-E
Reference Source Clock Test =>'
ShowDiagResults_Output.diagTestResults.testresult[3] = 'Passed'
ShowDiagResults_Output.diagTestResults.testresult[4] = 'PTP One PPS
Test =>'
ShowDiagResults_Output.diagTestResults.testresult[5] = 'Passed'
ShowDiagResults Commit Success!!!
```

## Additional References

### Related Documents

Related Topic	Document Title
Cisco ME 3800x and ME 3600x Switches Software Configuration Guide, Cisco IOS Release 15.4(1)S	<a href="http://www.cisco.com/c/en/us/td/docs/switches/metro/me3600x_3800x/software/release/15-4_1_S/configuration/guide/3800x3600xscg.html">http://www.cisco.com/c/en/us/td/docs/switches/metro/me3600x_3800x/software/release/15-4_1_S/configuration/guide/3800x3600xscg.html</a>

### MIBs

MIB	MIBs Link
MIBs Supporting Cisco IOS	To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL: <a href="http://www.cisco.com/go/mibs">http://www.cisco.com/go/mibs</a>

**Technical Assistance**

Description	Link
<p>The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.</p> <p>To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.</p> <p>Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.</p>	<p><a href="http://www.cisco.com/support">http://www.cisco.com/support</a></p>







## Configuring RSPAN

---

This document describes the Remote Switched Port Analyzer (RSPAN) feature and configuration steps to implement RSPAN.

- [Prerequisites for Configuring RSPAN, page 529](#)
- [Restrictions for Configuring RSPAN, page 529](#)
- [Information About RSPAN, page 530](#)
- [How to Provision RSPAN, page 530](#)
- [Verifying RSPAN, page 537](#)
- [Additional References, page 538](#)

### Prerequisites for Configuring RSPAN

- You must enable SPAN globally to support the desired SPAN configuration.
- NID must have an IP address.
- You must select a SPAN source from the following options:
  - Interface—one or more source interfaces.
  - VLAN— one or more source VLANs.
  - CPU— to monitor CPU traffic.


### Restrictions for Configuring RSPAN

- You cannot configure a port as both a source and destination port.
- VLAN SPAN monitors only the traffic that leaves or enters Layer 2 ports in the VLAN.
- SPAN sources interface and VLAN cannot exit together.

## Information About RSPAN

Remote Switched Port Analyzer (RSPAN) is an advanced feature that requires a special VLAN to carry the traffic that is monitored by SPAN between switches. RSPAN is useful when source ports are not located on the same switch as the destination port. The following figure shows the topology used for provisioning RSPAN on two NIDs using a UPE NID Controller.

**Figure 15: RSPAN Topology**

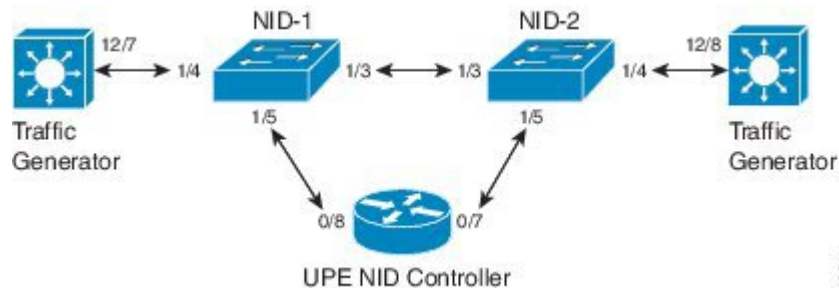

381931

## How to Provision RSPAN

### Enabling SPAN Globally to Start a Monitoring Session

#### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1 NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
<b>Step 3</b>	<b>span</b>  <b>Example:</b> Switch(config-controller)# span	Enters the SPAN mode.
<b>Step 4</b>	<b>setSpanGlobalConfReq {enable   disable}</b>  <b>Example:</b> Switch(config-controller-SPAN)# setSpanGlobalConfReq enable	Enters SPAN global configuration mode. Sub-command options.  • <b>enable</b> —Enables SPAN globally.

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>disbale</b>—Disables SPAN globally.</li> </ul>
<b>Step 5</b>	<b>setSpanGlobalConf review</b>  <b>Example:</b> Switch(config-controller-SPAN)# setSpanGlobalConf review	(Optional) Displays the configuration.
<b>Step 6</b>	<b>setSpanGlobalConf commit</b>  <b>Example:</b> Switch(config-controller-SPAN)# setSpanGlobalConf commit	Sends the configuration to NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-SPAN)# exit	Exits to the config-controller mode.

### Configuration Example

- The example shows how to enable SPAN globally:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# span
Switch(config-controller-SPAN)# setSpanGlobalConf setSpanGlobalConfReq enable
Switch(config-controller-SPAN)# setSpanGlobalConf review
Switch(config-controller-SPAN)# setSpanGlobalConf commit
Switch(config-controller-SPAN)# exit
```

## Configuring SPAN Source Interface on NID-1

### Before You Begin

Perform the steps to enable SPAN globally. See [Enabling SPAN Globally to Start a Monitoring Session](#), on page 516.

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>setSpanSrcConfRequest {source {cpu {rx   tx   both}   {vlan vlan_list}   interface {intf_range}   traffic-type {rx   tx   both}}}</b>  <b>Example:</b> Switch(config-controller-SPAN)# setSpanSrcConf commitsetSpanSrcConf setSpanSrcConfRequest source interface intf_range 1/4	Configures SPAN source interface. <ul style="list-style-type: none"> <li>• <b>source</b>—Mirrors source interface or VLAN.</li> <li>• <b>cpu</b>—Mirrors source CPU.</li> <li>• <b>rx</b>—Mirrors received traffic.</li> <li>• <b>tx</b>—Mirrors transmitted traffic.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>both</b>—Mirrors received and transmitted traffic.</li> <li>• <b>vlan</b>—Mirrors source VLAN.</li> <li>• <i>vlan_list</i>—Mirrors source VLAN.</li> <li>• <b>interface</b>— Mirrors source interface and traffic type.</li> <li>• <i>intf_range</i>—Mirrors an interface number or a range from 1 to 6.</li> <li>• <b>traffic-type</b>—Mirrors traffic type.</li> <li>• <b>rx</b>—Mirrors received traffic.</li> <li>• <b>tx</b>—Mirrors transmitted traffic.</li> <li>• <b>both</b>—Mirrors received and transmitted traffic.</li> </ul>
<b>Step 2</b>	<b>setSpanSrcConf review</b>  <b>Example:</b> Switch(config-controller-SPAN) # setSpanSrcConf review	(Optional) Displays the configuration.
<b>Step 3</b>	<b>setSpanGlobalConf commit</b>  <b>Example:</b> Switch(config-controller-SPAN) # setSpanSrcConf commit	Sends the configuration to NID.
<b>Step 4</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-SPAN) # exit	Exits to the config-controller mode.

### Configuration Example

- The example shows how to configure SPAN source on NID-1:

```
Switch(config-controller-SPAN) # setSpanSrcConf commitsetSpanSrcConf setSpanSrcConfRequest
source interface intf_range 1/4
Switch(config-controller-SPAN) # setSpanSrcConf review
Switch(config-controller-SPAN) # setSpanSrcConf commit
Switch(config-controller-SPAN) # exit
```

## Configuring Destination VLAN on NID-1

### Before You Begin

Perform the steps to configure SPAN source on NID-1. See [Configuring SPAN Source Interface on NID-1, on page 531](#).

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>setrSpandestConf setRSpanDestConfRequest remote <i>vlan_id</i></b>  <b>Example:</b> <pre>Switch(config-controller-SPAN)# setrSpandestConf setRSpanDestConfRequest 500 vlan_id 500</pre>	Configures destination VLAN. <ul style="list-style-type: none"> <li>• <b>remote</b>—Mirrors remote destination.</li> <li>• <b><i>vlan_id</i></b>— Remote mirror destination VLAN number.</li> </ul>
Step 2	<b>setrSpandestConf review</b>  <b>Example:</b> <pre>Switch(config-controller-SPAN)# setrSpandestConf review</pre>	(Optional) Displays the configuration.
Step 3	<b>setrSpandestConf commit</b>  <b>Example:</b> <pre>Switch(config-controller-SPAN)# setrSpandestConf commit</pre>	Sends the configuration to NID.
Step 4	<b>exit</b>  <b>Example:</b> <pre>Switch(config-controller-SPAN)# exit</pre>	Exits to the config-controller mode.

## Configuration Example

- The example shows how to configure destination VLAN on NID-1:

```
Switch(SPAN)# exit Switch(config-controller-SPAN)# setrSpandestConf
setRSpanDestConfRequest remote vlan_id 500
Switch(config-controller-SPAN)# setrSpandestConf review
Switch(config-controller-SPAN)# setrSpandestConf commit
Switch(config-controller-SPAN)# exit
```

## Configuring Source VLAN on NID-2

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> <pre>Switch# configure terminal</pre>	Enters the global configuration mode.

	Command or Action	Purpose
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
Step 3	<b>span</b>  <b>Example:</b> Switch(config-controller)# span	Enters the SPAN mode.
Step 4	<b>setRSpansrcConf setRSpanSrcConfRequest remote vlan_id</b>  <b>Example:</b> Switch((config-controller)SPAN)# setRSpansrcConf setRSpanSrcConfRequest remote vlan_id 500	Configures RSPAN source. <ul style="list-style-type: none"> <li>• <b>remote</b>—Mirrors remote source.</li> <li>• <b>vlan_id</b>— Remote mirror source VLAN number.</li> </ul>
Step 5	<b>setRSpansrcConf review</b>  <b>Example:</b> Switch((config-controller)SPAN)# setRSpansrcConf review	(Optional) Displays the configuration.
Step 6	<b>setRSpansrcConf commit</b>  <b>Example:</b> Switch((config-controller)SPAN)# setRSpansrcConf commit	Sends the configuration to NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch((config-controller)SPAN)# exit	Exits to the config-controller mode.

### Configuration Example

- The example shows how to configure source VLAN on NID-2:

```

Switch(config)# controller nid 1/2
Switch(config-controller)# span
Switch(config-controller-SPAN)# setSpanGlobalConf setSpanGlobalConfReq enable
Switch(config-controller-SPAN)# setSpanGlobalConf review
Switch(config-controller-SPAN)# setSpanGlobalConf commit
Switch(config-controller-SPAN)# exit
Switch(config-controller-SPAN)# setRSpansrcConf setRSpanSrcConfRequest remote vlan_id
500
Switch(config-controller-SPAN)# setRSpansrcConf review
Switch(config-controller-SPAN)# setRSpansrcConf commit
Switch(config-controller-SPAN)# exit

```

## Configuring Destination Interface on NID-2

### Before You Begin

Perform the steps to configure source VLAN on NID-2. See [Configuring Source VLAN on NID-2](#), on page 533.

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>setSpanDestConf setSpanDestConfRequest destination <i>intf_id</i></b>  <b>Example:</b> Switch(config-controller-SPAN)# setSpanDestConf setSpanDestConfRequest destination intf_id 5	Configures destination interface. <ul style="list-style-type: none"> <li>• <b>destination</b>—Mirrors destination interface.</li> <li>• <b>intf_id</b>— Single port ID from 1 to 6.</li> </ul>
<b>Step 2</b>	<b>setSpanDestConf review</b>  <b>Example:</b> Switch(config-controller-SPAN)# setSpanDestConf review	(Optional) Displays the configuration.
<b>Step 3</b>	<b>setSpanDestConf commit</b>  <b>Example:</b> Switch(config-controller-SPAN)# setSpanDestConf commit	Sends the configuration to NID.
<b>Step 4</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-SPAN)# exit	Exits to the config-controller mode.

### Configuration Example

- The example shows how to configure destination VLAN on NID-1:

```
Switch(config-controller-SPAN)# setSpanDestConf setSpanDestConfRequest destination
intf_id 5
Switch(config-controller-SPAN)# setSpanDestConf review
Switch(config-controller-SPAN)# setSpanDestConf commit
Switch(config-controller-SPAN)# exit
```

## Deleting RSPAN Source Configuration on NID-2

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>delRSpanSrcConfRequest remote <i>vlan_id</i></b>  <b>Example:</b> <pre>Switch(config-controller-SPAN)# delRSpanSrcConf delRSpanSrcConfRequest remote vlan_id 500</pre>	Deletes RSPAN source configuration. <ul style="list-style-type: none"> <li>• <b>remote</b>—Removes remote mirror source.</li> <li>• <b><i>vlan_id</i></b>— Removes remote mirror source VLAN number.</li> </ul>
<b>Step 2</b>	<b>delRSpanSrcConf review</b>  <b>Example:</b> <pre>Switch(config-controller-SPAN)# delRSpanSrcConf review</pre>	(Optional) Displays the configuration.
<b>Step 3</b>	<b>delRSpanSrcConf commit</b>  <b>Example:</b> <pre>Switch(config-controller-SPAN)# delRSpanSrcConf commit</pre>	Sends the configuration to NID.
<b>Step 4</b>	<b>exit</b>  <b>Example:</b> <pre>Switch(config-controller-SPAN)# exit</pre>	Exits to the config-controller mode.

### Configuration Example

- The example shows how to delete RSPAN source configuration on NID-2:

```
Switch(config-controller-SPAN)# delRSpanSrcConf delRSpanSrcConfRequest remote vlan_id
500
Switch(config-controller-SPAN)# delRSpanSrcConf review
Switch(config-controller-SPAN)# delRSpanSrcConf commit
Switch(config-controller-SPAN)# exit
```



## Deleting RSPAN Destination Configuration on NID-1

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>delRSpanDstConfRequest remote <i>vlan_id</i></b>  <b>Example:</b> <pre>Switch(config-controller-SPAN)# delRSpanDstConf delRSpanDstConfRequest remote <i>vlan_id</i> 500</pre>	Deletes RSPAN destination configuration. <ul style="list-style-type: none"> <li>• <b>remote</b>—Removes remote mirror destination.</li> <li>• <b><i>vlan_id</i></b>—Removes remote mirror destination VLAN number.</li> </ul>
Step 2	<b>delSpanDstConf review</b>  <b>Example:</b> <pre>Switch(config-controller-SPAN)# delRSpanDstConf review</pre>	(Optional) Displays the configuration.
Step 3	<b>delSpanDstConf commit</b>  <b>Example:</b> <pre>Switch(config-controller-SPAN)# delRSpanDstConf commit</pre>	Sends the configuration to NID.
Step 4	<b>exit</b>  <b>Example:</b> <pre>Switch(config-controller-SPAN)# exit</pre>	Exits to the config-controller mode.

### Configuration Example

- The example shows how to delete RSPAN destination configuration on NID-1:

```
Switch(config-controller-SPAN)# delRSpanDstConf delRSpanDstConfRequest remote vlan_id
500
Switch(config-controller-SPAN)# delRSpanDstConf review
Switch(config-controller-SPAN)# delRSpanDstConf commit
Switch(config-controller-SPAN)# exit
```

## Verifying RSPAN

Use the following commands to verify the RSPAN status on the controller.

- **showSpanConfig showSpanConfigReq**

This command displays the SPAN configuration status on the NID, when source interface is 1/4 and traffic type is both. The following is a sample output from the command:

```
Switch(config-controller-SPAN)# showSpanConfig showSpanConfigReq
Switch(config-controller-SPAN)# showSpanConfig review
```

```

Commands in queue:
  showSpanConfig showSpanConfigReq

Switch(config-controller-SPAN)# showSpanConfig commit

ShowSpanConfig_Output.showSpanConfigResp.span_config[0] = 'Session:
1, Mode: Disabled'
ShowSpanConfig_Output.showSpanConfigResp.span_config[1] = 'Type: Remote
Source Session'
ShowSpanConfig_Output.showSpanConfigResp.span_config[2] = 'Dest RMIRROR
VLAN: 500'
ShowSpanConfig_Output.showSpanConfigResp.span_config[3] = 'Source
VLAN(s): '
ShowSpanConfig_Output.showSpanConfigResp.span_config[4] = 'Source
port(s): 1/5'
ShowSpanConfig_Output.showSpanConfigResp.span_config[5] = 'Traffic
Type: '
ShowSpanConfig_Output.showSpanConfigResp.span_config[6] = 'rx : 1/5'
ShowSpanConfig_Output.showSpanConfigResp.span_config[7] = 'Destination
Ports: 1/4'
ShowSpanConfig Commit Success!!!

```

## Additional References

### Related Documents

Related Topic	Document Title
Cisco ME 3800x and ME 3600x Switches Software Configuration Guide, Cisco IOS Release 15.4(1)S	<a href="http://www.cisco.com/c/en/us/td/docs/switches/metro/me3600x_3800x/software/release/15-4_1_S/configuration/guide/3800x3600xscg.html">http://www.cisco.com/c/en/us/td/docs/switches/metro/me3600x_3800x/software/release/15-4_1_S/configuration/guide/3800x3600xscg.html</a>

### MIBs

MIB	MIBs Link
MIBs Supporting Cisco IOS	To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL: <a href="http://www.cisco.com/go/mibs">http://www.cisco.com/go/mibs</a>

**Technical Assistance**

Description	Link
<p>The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.</p> <p>To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.</p> <p>Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.</p>	<p><a href="http://www.cisco.com/support">http://www.cisco.com/support</a></p>





## Configuring RFC 2544

---

This document describes the RFC 2544 feature and configuration steps to implement RFC 2544.

- [Prerequisites for Configuring RFC 2544, page 541](#)
- [Restrictions for Configuring RFC 2544, page 541](#)
- [Information About RFC 2544, page 542](#)
- [How to Provision RFC 2544, page 544](#)
- [Verifying RFC 2544, page 581](#)
- [Additional References, page 582](#)

### Prerequisites for Configuring RFC 2544

- You must disable:
  - Link Layer Discovery Protocol (LLDP) transmit and receive on source port.
  - Loop protection on destination port or Spanning Tree Protocol (STP) on destination and source port.
- You must create:
  - Traffic test loop on destination port.
  - RFC 2544 profile with source port specified.
- There should be no traffic coming in or out of the ports.
- NID must have an IP address.

### Restrictions for Configuring RFC 2544

- Ethernet Virtual Circuit (EVC) Maintenance End Points (MEP) is not supported.

- The RFC 2544 report can not be accessed on the Controller. You can save the report to a TFTP server.

## Information About RFC 2544

RFC 2544 defines a number of tests that can be used to describe the performance characteristics of a network interconnect devices. These tests certify that a Service Level Agreement (SLA) between a customer and a service provider is met.

You can perform RFC 2544 benchmark tests on Carrier Ethernet switch platforms running ME 1200 software without the need for any external test equipment.

The RFC 2544 benchmarking can be run on a Metro Ethernet and offers a variety of diagnosis, such as:

- Throughput—Measures the maximum rate at which none of the offered frames are dropped on the device.
- Back-to-back—Measures the buffering capacity of a device.
- Frame loss—Measures the performance of a network device in an overloaded state.
- Latency—Measures the round-trip time taken by a test frame to travel through a network device or across the network and back to the test port.

In addition, the ME 1200 software includes a test suite tool that allows creating, saving, and executing test profiles and capturing and reporting results. The Local Node acts as a frame generator and checker.




### Note

For RFC 2544 to function properly, the Remote Node must support looping of particular frames.

The RFC 2544 benchmarking can be done either on the Port MEP or Virtual Local Area Network (VLAN) MEP. The following figure shows the topology used for provisioning RFC 2544 on two NIDs using a UPE NID Controller.

**Figure 16: RFC 2544 Topology**

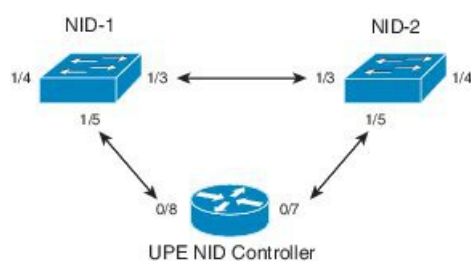

Before executing RFC 2544 test, you must prepare a test profile. The RFC 2544 test profile contains all the parameters associated with one test, where *one test* may be a combination of one or more sub-tests (Throughput, Latency, and Frame Loss, Back-to-Back).

Common and sub-test specific parameters in a test profile are listed below:

#### • Common Parameters

- Profile Name— Name of each profile. Name can be up to 32 characters. Default name is New profile.

- Profile Description—A text description up to 128 characters associated with the profile. Default description is blank.
- MEG Level—Maintenance Entity Group (MEG) level on which the RFC 2544 test is run. Default MEG level is 7.
- Egress Port—Egress port of the switch on which the RFC 2544 test frames are generated and checked.
- Sequence Number Check—Checks generated frame sequence number. Default is Disabled.
- Dwell Time—Number of seconds to wait after each trial for the system to settle before reading statistics from the hardware. Default is 2 seconds.
- Type—Selects between two types of traffic: Port Down\_MEP and VLAN-based Down\_MEP. With VLAN-based Down\_MEP, a configurable VLAN tag is inserted in the generated test frames.
- VLAN ID—Specifies the VLAN ID if VLAN-based Down\_MEP is configured.
- PCP—Specifies the PCP value if VLAN-based Down\_MEP is configured.
- DEI—Specifies the DEI value if VLAN-based Down\_MEP is configured.
- DMAC—Specifies the DMAC of the generated frames for both Port-based and VLAN-based Down\_MEP.
- Frame Size—Specifies the frame size each test must be repeated with, such as 64,128,256,512, 1024,1280,1518,2000, and 9600 bytes. Default frame size is all but 9600.
- Sub-Tests To Run—Specifies the sub-tests to be run in the profile (Throughput, Latency, Frame Loss, Back-to-Back). Default sub-tests to run is Throughput and Latency.

#### • Throughput Test Parameters

- Trial Duration—Duration of a trial run in seconds. Valid range is from 1 to 1800 seconds. Default trial duration is 60 seconds.
- Minimum and Maximum Rate—Specifies the maximum and minimum search rates.
- Rate Step—Specifies the granularity of search within the minimum and maximum rates define above. All three input parameters are specified in % of the egress port's actual link speed and must be in the range from 1 to 1000% with a granularity of 1%. Default rate step is Minimum: 800% of link speed, Maximum: 1000% of link speed, and Step size: 20% of link speed.
- Allowed Frame Loss—Specifies the allowable frame loss. Valid value is in range is from 0 to 100% with a granularity of 1%. Default allowable frame loss is 0.

#### • Latency Test Parameters

- Trial Duration—Duration of a trial run in seconds. Valid range is from 10 to 1800 seconds. Default trial duration is 120 seconds.
- Delay Measurement Interval—Specifies the number of seconds between each delay measurement. Valid range is from 1 to 60 seconds in steps of 1 second. Default delay measurement interval is 10 seconds.
- Allowed Frame Loss—Specifies the pass criterion of an allowable frame loss. Valid range is from 0 to 10% with a granularity of 0.1%. Default allowed frame loss is 0.

- **Frame Loss Test Parameters**

- Trial Duration—Duration of a trial run in seconds. Valid range is from 1 to 1800 seconds. Default trial duration is 60 seconds.
- Minimum and Maximum Rate—Specifies the maximum and minimum search rates.
- Rate Step—Specifies the granularity of search within the minimum and maximum rates define above. All three input parameters must be specified in % of the egress port's actual link speed and must be in the range from 1 to 1000% with a granularity of 1%. Default rate step is Minimum: 800%.

- **Back-to-Back Test Parameters**

- Trial duration—Specifies the duration of a burst. Valid range is from 100 to 10000 milliseconds. Default trial duration is 2000 milliseconds.
- Trial Count—Specifies the number of times the trial is executed. Valid range is from 1 to 100. Default trial count is 50. Up to 16 profiles can be created and saved in the switch flash memory.

#### RFC 2544 Test Report

On executing a RFC 2544 test profile, RFC 2544 test report is generated. The RFC 2544 test report is in clear text format and contains all the input parameters defined by the associated test profile and the measurement results. The RFC 2544 test report can be used to certify if an SLA is met.

The last 10 RFC 2544 test reports are stored in the Flash memory of the UPE NID controller.

## How to Provision RFC 2544

### Disabling LLDP Port on NID-1

#### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionLldpPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionLldpPortType	Enters the ProvisionLldpPortType mode.



	Command or Action	Purpose
<b>Step 4</b>	<p><b>setLldpportconfig lldpPortConfiguration {lldp_receive_enable {disable   enable}   lldp_transmit_enable {disable   enable}   port_number port_number}</b></p> <p><b>Example:</b>  Switch(config-controller-ProvisionLldpPortType)#  setLldpPortConfig lldpPortConfiguration port_number 3  Switch(config-controller-ProvisionLldpPortType)#  setLldpPortConfig lldpPortConfiguration  lldp_receive_enable disable  Switch(config-controller-ProvisionLldpPortType)#  setLldpPortConfig lldpPortConfiguration  lldp_transmit_enable disable</p>	<p>Sets the Link Layer Discovery Protocol (LLDP) port configuration.</p> <ul style="list-style-type: none"> <li>• <b>lldp_receive_enable</b>—Whether LLDP receive is enabled or disabled.</li> <li>• <b>lldp_transmit_enable</b>—Whether LLDP transmit is enabled or disabled.</li> <li>• <b>port_number</b>—The target interface number. The valid values are from 1 to 6.</li> </ul>
<b>Step 5</b>	<p><b>setLldpPortConfig review</b></p> <p><b>Example:</b>  Switch(config-controller-ProvisionLldpPortType)#  setLldpPortConfig review</p>	Displays the setLldpPortConfig configuration.
<b>Step 6</b>	<p><b>setLldpPortConfig commit</b></p> <p><b>Example:</b>  Switch(config-controller-ProvisionLldpPortType)#  setLldpPortConfig commit</p>	Sends the setLldpConfig configuration to the ME 1200 NID.
<b>Step 7</b>	<p><b>exit</b></p> <p><b>Example:</b>  Switch(config-controller-ProvisionLldpPortType)# exit</p>	Exits to the config-controller mode.

### Configuration Example

The example shows how to disable LLDP port on NID-1:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionLldpPortType
Switch(config-controller-ProvisionLldpPortType)# setLldpPortConfig lldpPortConfiguration
port_number 3
Switch(config-controller-ProvisionLldpPortType)# setLldpPortConfig lldpPortConfiguration
lldp_receive_enable disable
Switch(config-controller-ProvisionLldpPortType)# setLldpPortConfig lldpPortConfiguration
lldp_transmit_enable disable
Switch(config-controller-ProvisionLldpPortType)# setLldpPortConfig review
Switch(config-controller-ProvisionLldpPortType)# setLldpPortConfig commit
Switch(config-controller-ProvisionLldpPortType)# exit
```

## Creating Layer 2 VLANs on NID-1

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionLldpPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionLldpPortType	Enters the ProvisionLldpPortType mode.
<b>Step 4</b>	<b>createVlanCommand createVlanReq vlan_list vlan_list</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createVlanCommand createVlanReq vlan_list 2-4095	Creates the VLAN list. The valid values are from 1 to 4095.
<b>Step 5</b>	<b>createVlanCommand review</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createVlanCommand review	Displays the createVlanCommand configuration.
<b>Step 6</b>	<b>createVlanCommand commit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createVlanCommand commit	Sends the createVlanCommand configuration to the ME 1200 NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to create Layer 2 VLANs on NID-1:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionPortVlanPortType
Switch(config-controller-ProvisionPortVlanPortType)# createVlanCommand createVlanReq vlan_list
2-4095
Switch(config-controller-ProvisionPortVlanPortType)# createVlanCommand review
```

```
Switch(config-controller-ProvisionPortVlanPortType)# createVlanCommand commit
Switch(config-controller-ProvisionPortVlanPortType)# exit
```

## Assigning VLANs to Ports on NID-1

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1 NID_ID</b>  <b>Example:</b> Switch(config)# contoller nid 1/2	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionPortVlanPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionPortVlanPortType	Enters the ProvisionPortVlanPortType mode.
<b>Step 4</b>	<b>modifySwPort modifySWPortConfig mode access vlan vlan_id</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig mode trunk native vlan 3	Sets the mode to ACCESS, and assigns a VLAN.
<b>Step 5</b>	<b>modifySwPort modifySWPortConfig mode trunk {allowed vlan {add {all   vlan_list vlan_list }   remove {all   vlan_list vlan_list }}   {native vlan vlan_list }</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig mode trunk allowed vlan add vlan_list 2-4095	Sets the mode to TRUNK. <ul style="list-style-type: none"> <li>• <b>allowed</b>—Sets the allowed VLAN characteristics when interface is in trunk mode.</li> <li>• <b>add</b>—Adds either all VLANs or specified VLANs to the current list.</li> <li>• <b>remove</b>—Removes either all VLANs or specified VLANs from the current list.</li> <li>• <b>vlan_d</b>—Specifies the VLAN ID. The valid values are from 0 to 4095.</li> </ul>
<b>Step 6</b>	<b>modifySwPort review</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort review	Displays the modifySwPort configuration.

	Command or Action	Purpose
<b>Step 7</b>	<b>modifySwPort commit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort commit	Sends the modifySwPort configuration to the ME 1200 NID.
<b>Step 8</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to assign VLANs to ports on NID-1:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionPortVlanPortType
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig
interface 3
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig mode
trunk native vlan 3
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig mode
trunk allowed vlan add vlan_list 2-4095
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort review
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort commit
Switch(config-controller-ProvisionPortVlanPortType)# exit
```

## Disabling Spanning-Tree Protocol on NID-1

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionStpPortType</b>  <b>Example:</b> Switch (config-controller)# ProvisionStpPortType	Enters the ProvisionStpPortType mode.

	Command or Action	Purpose
<p><b>Step 4</b></p>	<pre>setStpGlobalConfig stpGlobalConfig {edge {bpdu-filter   bpdu-guard} {enable   disable}   mode {mstp   rstp   stp} {enable   disable}   mst {forward-time Fwdtime   instance instance {active {enable   disable}   priority Prio   vlan WORD}   max-age Maxage   max-hops Maxhops   name Name   revision Revision }   port-number Port number {enable   disable}   recovery Interval   transmit hold-count }</pre> <p><b>Example:</b> Switch(config-controller-ProvisionStpPortType) # setStpGlobalConfig stpGlobalConfig port-number 3 disable</p> <p><b>Note</b> If the spanning-tree mode is STP or RSTP, and if the priority for the software needs to be changed, you can change using mst instance 0 and priority.</p>	<p>Configures the spanning-tree global configuration.</p> <ul style="list-style-type: none"> <li>• <b>stpGlobalConfig</b>—Sets the spanning-tree global configuration.</li> <li>• <b>edge</b>—Configures the edge ports. <ul style="list-style-type: none"> <li>◦ <b>bpdu-filter</b>—Enables or disables the BPDU filter (stop BPDU tx/rx).</li> <li>◦ <b>bpdu-guard</b>—Enables or disables the BPDU guard.</li> </ul> </li> <li>• <b>mode</b>—Configures the STP protocol mode. <ul style="list-style-type: none"> <li>◦ <b>mstp</b>—Enables or disables the Multiple Spanning Tree (802.1s).</li> <li>◦ <b>rstp</b>—Enables or disables the Rapid Spanning Tree (802.1w).</li> <li>◦ <b>stp</b>—Enables or disables the Spanning Tree (802.1D).</li> </ul> </li> <li>• <b>mst</b>—Configures the STP bridge instance. <ul style="list-style-type: none"> <li>◦ <i>Fwdtime</i>—Forward time. The range is from 4 to 30 seconds.</li> <li>◦ <i>instance</i>—Instance. The range is from 0 to 7 where CIST=0, MST2=1 and so on. <ul style="list-style-type: none"> <li>◦ <b>active</b>—Enables or disables the instance.</li> <li>◦ <i>Prio</i> —Specifies the priority. The range is from 0 to 61440 seconds. The range should be given in the sets of (0, 4096, 8192...) and so on.</li> <li>◦ <i>WORD</i>—VLAN range.</li> </ul> </li> <li>◦ <i>Maxage</i>—Maximum age. The range is from 6 to 40 seconds.</li> <li>◦ <i>Maxhops</i>—Maximum hops. The range is from 6 to 40 hop counts.</li> <li>◦ <i>Name</i>—Name of the bridge. You can use 32 characters to define.</li> <li>◦ <i>Revision</i>—Revision. The range is from 0-65535 revisions.</li> </ul> </li> <li>• <b>port-number</b>—Configures the port number in the range from 1 to 6. <ul style="list-style-type: none"> <li>◦ <i>Port number</i>—Port number. The range is from 1 to 6.</li> </ul> </li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>◦ <b>disable</b>—Disables the port-number.</li> <li>◦ <b>enable</b>—Enables the port-number.</li> <li>• <b>recovery</b>—Configures the error recovery timeout. <ul style="list-style-type: none"> <li>◦ <i>Interval</i>—Interval. The range is from 30-86400 seconds.</li> </ul> </li> <li>• <b>transmit</b>—Configures the BPDUs to transmit. <ul style="list-style-type: none"> <li>◦ <i>hold-count</i>—Maximum number of transmit BPDUs per second. The range is from 1 to 10 seconds.</li> </ul> </li> </ul>
<b>Step 5</b>	<b>setStpGlobalConfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig review	Displays the setStpGlobalConfig.
<b>Step 6</b>	<b>setStpGlobalConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig commit	Sends the setStpGlobalConfig configuration to the ME 1200 NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to disable Spanning-Tree Protocol on NID-1:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionStpPortType
Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig stpGlobalConfig port-number
3 disable
Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig review
Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig commit
Switch(config-controller-ProvisionStpPortType)# exit
```

## Disabling LLDP Port on NID-2

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionLldpPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionLldpPortType	Enters the ProvisionLldpPortType mode.
<b>Step 4</b>	<b>setLldpportconfig lldpPortConfiguration {lldp_receive_enable {disable   enable}   lldp_transmit_enable {disable   enable}   port_number port_number}</b>  <b>Example:</b> Switch(config-controller-ProvisionLldpPortType)# setLldpPortConfig lldpPortConfiguration port_number 3 Switch(config-controller-ProvisionLldpPortType)# setLldpPortConfig lldpPortConfiguration lldp_receive_enable disable Switch(config-controller-ProvisionLldpPortType)# setLldpPortConfig lldpPortConfiguration lldp_transmit_enable disable	Sets the Link Layer Discovery Protocol (LLDP) port configuration. <ul style="list-style-type: none"> <li>• <b>lldp_receive_enable</b>—Whether LLDP receive is enabled or disabled.</li> <li>• <b>lldp_transmit_enable</b>—Whether LLDP transmit is enabled or disabled.</li> <li>• <b>port_number</b>—The target interface number. The valid values are from 1 to 6.</li> </ul>
<b>Step 5</b>	<b>setLldpPortConfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionLldpPortType)# setLldpPortConfig review	Displays the setLldpPortConfig configuration.
<b>Step 6</b>	<b>setLldpPortConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionLldpPortType)# setLldpPortConfig commit	Sends the setLldpConfig configuration to the ME 1200 NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionLldpPortType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to disable LLDP port on NID-2:

```
Switch(config)# controller nid 1/2
Switch(config-controller)# ProvisionLldpPortType
Switch(config-controller-ProvisionLldpPortType)# setLldpPortConfig lldpPortConfiguration
port_number 3
Switch(config-controller-ProvisionLldpPortType)# setLldpPortConfig lldpPortConfiguration
lldp_receive_enable disable
Switch(config-controller-ProvisionLldpPortType)# setLldpPortConfig lldpPortConfiguration
lldp_transmit_enable disable
Switch(config-controller-ProvisionLldpPortType)# setLldpPortConfig review
Switch(config-controller-ProvisionLldpPortType)# setLldpPortConfig commit
Switch(config-controller-ProvisionLldpPortType)# exit
```

## Creating Layer 2 VLANs on NID-2

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionPortVlanPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionPortVlanPortType	Enters the ProvisionPortVlanPortType mode.
<b>Step 4</b>	<b>createVlanCommand createVlanReq vlan_list vlan_list</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createVlanCommand createVlanReq vlan_list 2-4095	Creates the VLAN list. The valid values are from 1 to 4095.
<b>Step 5</b>	<b>createVlanCommand review</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createVlanCommand review	Displays the createVlanCommand configuration.
<b>Step 6</b>	<b>createVlanCommand commit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# createVlanCommand commit	Sends the createVlanCommand configuration to the ME 1200 NID.



	Command or Action	Purpose
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to create Layer 2 VLANs on NID-2:

```
Switch(config)# controller nid 1/2
Switch(config-controller)# ProvisionPortVlanPortType
Switch(config-controller-ProvisionPortVlanPortType)# createVlanCommand createVlanReq vlan_list
2-4095
Switch(config-controller-ProvisionPortVlanPortType)# createVlanCommand review
Switch(config-controller-ProvisionPortVlanPortType)# createVlanCommand commit
Switch(config-controller-ProvisionPortVlanPortType)# exit
```

## Assigning VLANs to Ports on NID-2

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionPortVlanPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionPortVlanPortType	Enters the ProvisionPortVlanPortType mode.
<b>Step 4</b>	<b>modifySwPort modifySWPortConfig interface interface_id</b>  <b>Example:</b> Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig interaface 3	Modifies the switchport configuration on the defined interface.
<b>Step 5</b>	<b>modifySwPort modifySWPortConfig mode access vlan vlan_id</b>	Sets the mode to ACCESS, and assigns a VLAN.

	Command or Action	Purpose
	<p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig mode trunk native vlan 3</pre>	
<b>Step 6</b>	<p><b>modifySwPort modifySWPortConfig mode trunk {allowed vlan {add {all   vlan_list vlan_list}   remove {all   vlan_list vlan_list}}   {native vlan vlan_list}}</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig mode trunk allowed vlan add vlan_list 2-4095</pre>	<p>Sets the mode to TRUNK.</p> <ul style="list-style-type: none"> <li>• <b>allowed</b>—Sets the allowed VLAN characteristics when interface is in trunk mode.</li> <li>• <b>add</b>—Adds either all VLANs or specified VLANs to the current list.</li> <li>• <b>remove</b>—Removes either all VLANs or specified VLANs from the current list.</li> <li>• <b>vlan_d</b>—Specifies the VLAN ID. The valid values are from 0 to 4095.</li> </ul>
<b>Step 7</b>	<p><b>modifySwPort review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort review</pre>	Displays the modifySwPort configuration.
<b>Step 8</b>	<p><b>modifySwPort commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort commit</pre>	Sends the modifySwPort configuration to the ME 1200 NID.
<b>Step 9</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionPortVlanPortType)# exit</pre>	Exits to the config-controller mode.

### Configuration Example

The example shows how to assign VLANs to ports on NID-2:

```
Switch(config)# controller nid 1/2
Switch(config-controller)# ProvisionPortVlanPortType
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig
interaface 3
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig mode
trunk native vlan 3
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort modifySWPortConfig mode
trunk allowed vlan add vlan_list 2-4095
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort review
Switch(config-controller-ProvisionPortVlanPortType)# modifySwPort commit
Switch(config-controller-ProvisionPortVlanPortType)# exit
```

## Disabling Spanning-Tree Protocol on NID-2

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
Step 3	<b>ProvisionStpPortType</b>  <b>Example:</b> Switch (config-controller)# ProvisionStpPortType	Enters the ProvisionStpPortType mode.
Step 4	<b>setStpGlobalConfig stpGlobalConfig {edge {bpdu-filter   bpdu-guard} {enable   disable}   mode {mstp   rstp   stp} {enable   disable}   mst {forward-time Fwdtime   instance instance {active {enable   disable}   priority Prio   vlan WORD}   max-age Maxage   max-hops Maxhops   name Name   revision Revision }   port-number Port number {enable   disable}   recovery Interval   transmit hold-count }</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig stpGlobalConfig port-number 3 disable  <b>Note</b> If the spanning-tree mode is STP or RSTP, and if the priority for the software needs to be changed, you can change using mst instance 0 and priority.	Configures the spanning-tree global configuration. <ul style="list-style-type: none"> <li>• <b>stpGlobalConfig</b>—Sets the spanning-tree global configuration.</li> <li>• <b>edge</b>—Configures the edge ports.               <ul style="list-style-type: none"> <li>◦ <b>bpdu-filter</b>—Enables or disables the BPDU filter (stop BPDU tx/rx).</li> <li>◦ <b>bpdu-guard</b>—Enables or disables the BPDU guard.</li> </ul> </li> <li>• <b>mode</b>—Configures the STP protocol mode.               <ul style="list-style-type: none"> <li>◦ <b>mstp</b>—Enables or disables the Multiple Spanning Tree (802.1s).</li> <li>◦ <b>rstp</b>—Enables or disables the Rapid Spanning Tree (802.1w).</li> <li>◦ <b>stp</b>—Enables or disables the Spanning Tree (802.1D).</li> </ul> </li> <li>• <b>mst</b>—Configures the STP bridge instance.               <ul style="list-style-type: none"> <li>◦ <b>Fwdtime</b>—Forward time. The range is from 4 to 30 seconds.</li> <li>◦ <b>instance</b>—Instance. The range is from 0 to 7 where CIST=0, MST2=1 and so on.                   <ul style="list-style-type: none"> <li>◦ <b>active</b>—Enables or disables the instance.</li> </ul> </li> </ul> </li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>◦ <i>Prio</i> —Specifies the priority. The range is from 0 to 61440 seconds. The range should be given in the sets of (0, 4096, 8192...) and so on.</li> <li>◦ <i>WORD</i>—VLAN range.</li> <li>◦ <i>Maxage</i>—Maximum age. The range is from 6 to 40 seconds.</li> <li>◦ <i>Maxhops</i>—Maximum hops. The range is from 6 to 40 hop counts.</li> <li>◦ <i>Name</i>—Name of the bridge. You can use 32 characters to define.</li> <li>◦ <i>Revision</i>—Revision. The range is from 0-65535 revisions.</li> <li>• <b>port-number</b>—Configures the port number in the range from 1 to 6. <ul style="list-style-type: none"> <li>◦ <i>Port number</i>—Port number. The range is from 1 to 6.</li> <li>◦ <b>disable</b>—Disables the port-number.</li> <li>◦ <b>enable</b>—Enables the port-number.</li> </ul> </li> <li>• <b>recovery</b>—Configures the error recovery timeout. <ul style="list-style-type: none"> <li>◦ <i>Interval</i>—Interval. The range is from 30-86400 seconds.</li> </ul> </li> <li>• <b>transmit</b>—Configures the BPDUs to transmit. <ul style="list-style-type: none"> <li>◦ <i>hold-count</i>—Maximum number of transmit BPDUs per second. The range is from 1 to 10 seconds.</li> </ul> </li> </ul>
<b>Step 5</b>	<b>setStpGlobalConfig review</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig review	Displays the setStpGlobalConfig.
<b>Step 6</b>	<b>setStpGlobalConfig commit</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig commit	Sends the setStpGlobalConfig configuration to the ME 1200 NID.

	Command or Action	Purpose
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionStpPortType) # exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to disable Spanning-Tree Protocol on NID-2:

```
Switch(config)# controller nid 1/2
Switch(config-controller)# ProvisionStpPortType
Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig stpGlobalConfig port-number
3 disable
Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig review
Switch(config-controller-ProvisionStpPortType)# setStpGlobalConfig commit
Switch(config-controller-ProvisionStpPortType)# exit
```

## Creating Port MEP Profile on NID-1

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
Step 3	<b>RFC2544PortType</b>  <b>Example:</b> Switch(config-controller)# RFC2544PortType	Enters the RFC2544PortType mode.
Step 4	<b>setRfc2544Profile Rfc2544Profile {profileName   description   megLevel   egressPort   seqNoCheck {enable   disable}   dwellTime   mepType {portDownMep   vlanDownMep}   vlanId   pcp   dei   dMac}</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType)# setRfc2544Profile Rfc2544Profile profileName profile1 Switch(config-controller-RFC2544PortType)#	Creates Port MEP profile. <ul style="list-style-type: none"> <li>• <b>profileName</b>—Specifies RFC 2544 profile name.</li> <li>• <b>description</b>—Adds a description to profile.  <b>Note</b> We recommend that you add a description for the profile.</li> <li>• <b>megLevel</b>—Sets profile MEG level used in TST PDUs.</li> <li>• <b>egressPort</b>—Sets the egress interface on which PDUs are transmitted.</li> </ul>

	Command or Action	Purpose
	<pre>setRfc2544Profile Rfc2544Profile description profile1 Switch(config-controller-RFC2544PortType)# setRfc2544Profile Rfc2544Profile egressPort 3 Switch(config-controller-RFC2544PortType)# setRfc2544Profile Rfc2544Profile megLevel 5 Switch(config-controller-RFC2544PortType)# setRfc2544Profile Rfc2544Profile mepType portDownMep Switch(config-controller-RFC2544PortType)# setRfc2544Profile Rfc2544Profile seqNoCheck disable</pre>	<ul style="list-style-type: none"> <li>• <b>seqNoCheck</b>—Enables sequence number checking of looped TST PDUs. <ul style="list-style-type: none"> <li>◦ <b>enable</b>—Enables sequence number.</li> <li>◦ <b>disable</b>—Disables sequence number.</li> </ul> </li> <li>• <b>dwelTime</b>—Controls the number of seconds that the execution pauses after each trial, before reading counters and status from hardware.</li> <li>• <b>mepType</b>—Specifies MEP type port. MEP or VLAN MEP. <ul style="list-style-type: none"> <li>◦ <b>portDownMep</b>—Creates a port down MEP.</li> <li>◦ <b>vlanDownMep</b>—Creates a VLAN down MEP. All PDUs are then transmitted with a VLAN tag.</li> </ul> </li> <li>• <b>vlanId</b>—Specifies VLAN ID incase of VLAN down MEP.</li> <li>• <b>pcp</b>—Specifies PCP value used in the VLAN tag incase of VLAN MEP.</li> <li>• <b>dei</b>—Specifies DEI value used in the VLAN tag incase vlan mep.</li> <li>• <b>dMac</b>—Specifies destination MAC address used in generation of the Y.1731 TST and 1DM frames.</li> </ul>
<b>Step 5</b>	<p><b>setRfc2544Profile review</b></p> <p><b>Example:</b></p> <pre>Switch((config-controller)RFC2544PortType)# setRfc2544Profile review</pre>	Displays the setRfc2544Profile.
<b>Step 6</b>	<p><b>setRfc2544Profile commit</b></p> <p><b>Example:</b></p> <pre>Switch((config-controller)RFC2544PortType)# setRfc2544Profile commit</pre>	Sends the setRfc2544Profile configuration to the Cisco ME 1200 NID.
<b>Step 7</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch((config-controller)RFC2544PortType)# exit</pre>	Exits to the config-controller mode.

### Configuration Example

The example shows how to create Port MEP profile on NID-1:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# RFC2544PortType
Switch(config-controller-RFC2544PortType)# setRfc2544Profile Rfc2544Profile profileName
profile1
Switch(config-controller-RFC2544PortType)# setRfc2544Profile Rfc2544Profile description
profile1
Switch(config-controller-RFC2544PortType)# setRfc2544Profile Rfc2544Profile egressPort 3
Switch(config-controller-RFC2544PortType)# setRfc2544Profile Rfc2544Profile megLevel 5
Switch(config-controller-RFC2544PortType)# setRfc2544Profile Rfc2544Profile mepType
portDownMep
Switch(config-controller-RFC2544PortType)# setRfc2544Profile Rfc2544Profile seqNoCheck
disable
Switch(config-controller-RFC2544PortType)# setRfc2544Profile review
Switch(config-controller-RFC2544PortType)# setrfc2544profile commit
Switch(config-controller-RFC2544PortType)# exit
```

## Creating Traffic Test Loop on Destination Port on NID-2

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
<b>Step 3</b>	<b>RFC2544PortType</b>  <b>Example:</b> Switch(config-controller)# RFC2544PortType	Enters the RFC2544PortType configuration mode.
<b>Step 4</b>	<b>setTrafficTestLoop trafficTestLoopConfig</b> <b>{instNum   adminState {enable   disable}   custVID</b> <b>  name   type {macLoop   oamLoop}   interface  </b> <b>direction {facility   terminal}   domain {evc   port</b> <b>  vlan}   flowId   level}</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType)# setTrafficTestLoop trafficTestLoopConfig interface 3 Switch(config-controller-RFC2544PortType)# setTrafficTestLoop trafficTestLoopConfig type macLoop Switch(config-controller-RFC2544PortType)# setTrafficTestLoop trafficTestLoopConfig direction facility Switch(config-controller-RFC2544PortType)#	Creates traffic test loop on destination port on NID-2.  <ul style="list-style-type: none"> <li>• <b>instNum</b>—Specifies the traffic-test-loop instance number.</li> <li>• <b>adminState</b>—Specifies the administrative state. <ul style="list-style-type: none"> <li>◦ <b>enable</b>—Creates a loop if all required resources are available and operational state is up.</li> <li>◦ <b>disable</b>—Deletes the loop and operational state is down.</li> </ul> </li> <li>• <b>custVID</b>—Only relevant for OAM-loop in EVC domain. Loops C-tagged customer frames with this specified VID in the EVC.</li> <li>• <b>name</b>—Specifies the traffic-test-loop name.</li> <li>• <b>type</b>—Specifies the type of the traffic-test-loop. Currently only MAC loop is supported.</li> </ul>

	Command or Action	Purpose
	<pre> setTrafficTestLoop trafficTestLoopConfig domain port Switch(config-controller-RFC2544PortType)# setTrafficTestLoop trafficTestLoopConfig adminState enable Switch(config-controller-RFC2544PortType)# setTrafficTestLoop trafficTestLoopConfig instNum 1 </pre>	<ul style="list-style-type: none"> <li>◦ <b>macLoop</b>—All frames in the flow are looped with MAC swap.</li> <li>◦ <b>oamLoop</b>—Y.1731 OAM aware and is looping the following: <ul style="list-style-type: none"> <li>◦ Loopback Messages (LBM) and Loopback Replies (LBR)</li> <li>◦ Delay Measurement Message (DMM) and Delay Measurement Reply (DMR)</li> </ul> </li> <li>• <b>interface</b>—Specifies the residence port of the traffic-test-loop.</li> <li>• <b>direction</b>—Specifies the direction of the traffic-test-loop. <ul style="list-style-type: none"> <li>◦ <b>facility</b>—Specifies that this traffic-test-loop is pointing to the port. Looping is done from ingress to egress.</li> <li>◦ <b>terminal</b>—Specifies that this traffic-test-loop is pointing to the forwarding plane. Looping is done from egress to ingress. <p><b>Note</b> The <b>terminal</b> option is not supported.</p> </li> </ul> </li> <li>• <b>domain</b>—The domain of the traffic-test-loop. <ul style="list-style-type: none"> <li>◦ <b>evc</b>—This traffic-test-loop is in the EVC domain.</li> <li>◦ <b>port</b>—This traffic-test-loop is in the Port domain.</li> <li>◦ <b>vlan</b>—This traffic-test-loop is in the VLAN domain.</li> </ul> <p><b>Note</b> Only <b>port</b> domain is supported.</p> </li> <li>• <b>flowId</b>—Specifies the EVC domain instance ID or VID in VLAN domain.</li> <li>• <b>level</b>—Specifies the Y.1731 OAM level of the traffic-test-loop. This is relevant only for OAM looping type traffic-test-loop.</li> </ul>
<b>Step 5</b>	<p><b>setTrafficTestLoop review</b></p> <p><b>Example:</b></p> <pre> Switch((config-controller)RFC2544PortType)# setTrafficTestLoop review </pre>	Displays the setTrafficTestLoop configuration.
<b>Step 6</b>	<p><b>setTrafficTestLoop commit</b></p> <p><b>Example:</b></p> <pre> Switch((config-controller)RFC2544PortType)# setTrafficTestLoop commit </pre>	Sends the setTrafficTestLoop configuration to the ME 1200 NID.



	Command or Action	Purpose
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch((config-controller)RFC2544PortType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to create traffic test loop on destination port on NID-2:

```
Switch(config)# controller nid 1/2
Switch(config-controller)# RFC2544PortType
Switch(config-controller-RFC2544PortType)# setTrafficTestLoop trafficTestLoopConfig interface
3
Switch(config-controller-RFC2544PortType)# setTrafficTestLoop trafficTestLoopConfig type
macLoop
Switch(config-controller-RFC2544PortType)# setTrafficTestLoop trafficTestLoopConfig direction
facility
Switch(config-controller-RFC2544PortType)# setTrafficTestLoop trafficTestLoopConfig domain
port
Switch(config-controller-RFC2544PortType)# setTrafficTestLoop trafficTestLoopConfig adminState
enable
Switch(config-controller-RFC2544PortType)# setTrafficTestLoop trafficTestLoopConfig instNum
1
Switch(config-controller-RFC2544PortType)# setTrafficTestLoop review
Switch(config-controller-RFC2544PortType)# setTrafficTestLoop commit
Switch(config-controller-RFC2544PortType)# exit
```

## Disabling Loop Protection on Destination Port on NID-2

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid <i>I/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
<b>Step 3</b>	<b>RFC2544PortType</b>  <b>Example:</b> Switch(config-controller)# RFC2544PortType	Enters the RFC2544PortType configuration mode.
<b>Step 4</b>	<b>deleteTrafficTestLoop deleteLoopConfig {trafficLoop  instNum  loopPotect interface}</b>	Disables loop protection on destination port on NID-2. <ul style="list-style-type: none"> <li>• <b>deleteLoopConfig</b>—Deletes traffic test loop configuration.</li> </ul>

	Command or Action	Purpose
	<p><b>Example:</b></p> <pre>Switch((config-controller)RFC2544PortType)# deleteTrafficTestLoop deleteLoopConfig loopPotect interface 3</pre>	<ul style="list-style-type: none"> <li>• <b>trafficLoop</b>—Deletes traffic test loop configuration. <ul style="list-style-type: none"> <li>◦ <i>instNum</i>—Specifies the traffic-test-loop instance number.</li> </ul> </li> <li>• <b>loopPotect</b>—Deletes loop protection at port level. <ul style="list-style-type: none"> <li>◦ <i>interface</i>—Specifies the residence port of the traffic-test-loop.</li> </ul> </li> </ul>
<b>Step 5</b>	<p><b>deleteTrafficTestLoop review</b></p> <p><b>Example:</b></p> <pre>Switch((config-controller)RFC2544PortType)# deleteTrafficTestLoop review</pre>	Displays the deleteTrafficTestLoop configuration.
<b>Step 6</b>	<p><b>deleteTrafficTestLoop commit</b></p> <p><b>Example:</b></p> <pre>Switch((config-controller)RFC2544PortType)# deleteTrafficTestLoop commit</pre>	Sends the deleteTrafficTestLoop configuration to the ME 1200 NID.
<b>Step 7</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch((config-controller)RFC2544PortType)# exit</pre>	Exits to the config-controller mode.

### Configuration Example

The example shows how to disable loop protection on destination port on NID-2:

```
Switch(config)# controller nid 1/2
Switch(config-controller)# RFC2544PortType
Switch(config-controller-RFC2544PortType)# deleteTrafficTestLoop deleteLoopConfig loopPotect
interface 3
Switch(config-controller-RFC2544PortType)# deleteTrafficTestLoop review
Switch(config-controller-RFC2544PortType)# deleteTrafficTestLoop commit
Switch(config-controller-RFC2544PortType)# exit
```

## Setting RFC 2544 Reporting Parameters on NID-1

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<p><b>configure terminal</b></p> <p><b>Example:</b></p> <pre>Switch# configure terminal</pre>	Enters global configuration mode.

	Command or Action	Purpose
<p><b>Step 2</b></p>	<p><b>controller nid</b> <i>1/NID_ID</i></p> <p><b>Example:</b> Switch(config)# controller nid 1/2</p>	<p>Enters the controller configuration mode.</p>
<p><b>Step 3</b></p>	<p><b>RFC2544PortType</b></p> <p><b>Example:</b> Switch(config-controller)# RFC2544PortType</p>	<p>Enters the RFC2544PortType mode.</p>
<p><b>Step 4</b></p>	<p><b>setReportParams rfc2544Reports reportAction</b> {<b>delete</b> <i>reportName</i>   <b>save</b> {<i>reportName</i>   <i>ftpPath</i>}   <b>start</b> {<i>reportName</i>   <i>profileName</i>   <i>description</i>}   <b>stop</b> <i>reportName</i>   <b>rename</b> {<i>oldName</i>   <i>newName</i>}}</p> <p><b>Example:</b> Switch(config-controller-RFC2544PortType)# setReportParams rfc2544Reports reportAction start profileName profile1 Switch(config-controller-RFC2544PortType)# setReportParams rfc2544Reports reportAction start reportName profile1 Switch(config-controller-RFC2544PortType)# setReportParams rfc2544Reports reportAction start description profile1</p>	<p>Sets RFC 2544 reporting parameters.</p> <ul style="list-style-type: none"> <li>• <b>reportAction</b>—Specifies action to be performed on the report.             <ul style="list-style-type: none"> <li>◦ <b>delete</b>—Deletes the existing report.                     <ul style="list-style-type: none"> <li>◦ <i>reportName</i>—Specifies name of the report.</li> </ul> </li> <li>◦ <b>save</b>—Saves the existing report.                     <ul style="list-style-type: none"> <li>◦ <i>reportName</i>—Specifies the name of existing report.</li> <li>◦ <i>ftpPath</i>—Specifies TFTP server URL tftp://server[:port]/path-to-file.</li> </ul> </li> <li>◦ <b>start</b>—Starts profile execution                     <ul style="list-style-type: none"> <li>◦ <i>reportName</i>—Specifies unique name of the resulting report.</li> <li>◦ <i>profileName</i>—Specifies name of the profile to execute.</li> <li>◦ <i>description</i>—(Optional) Provides a description of the report.                             <p><b>Note</b> We recommend that you add a description for the report.</p> </li> </ul> </li> <li>◦ <b>stop</b>—Stops the report.                     <ul style="list-style-type: none"> <li>◦ <i>reportName</i>—Specifies name of the report to be stopped.</li> </ul> </li> <li>◦ <b>rename</b>—Renames the existing report.                     <ul style="list-style-type: none"> <li>◦ <i>oldName</i>—Specifies name of the old profile.</li> <li>◦ <i>newName</i>—Specifies name of the new profile.</li> </ul> </li> </ul> </li> </ul>

	Command or Action	Purpose
<b>Step 5</b>	<b>setReportParams review</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType) # setReportParams review	Displays the setReportParams configuration.
<b>Step 6</b>	<b>setReportParams commit</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType) # setReportParams commit	Sends the setReportParams configuration to the ME 1200 NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType) # exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to set the RFC 2544 reporting parameters on NID-1:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# RFC2544PortType
Switch(config-controller-RFC2544PortType)# setReportParams rfc2544Reports reportAction start
profileName profile1
Switch(config-controller-RFC2544PortType)# setReportParams rfc2544Reports reportAction start
reportName profile1
Switch(config-controller-RFC2544PortType)# setReportParams rfc2544Reports reportAction start
description profile1
Switch(config-controller-RFC2544PortType)# setReportParams review
Switch(config-controller-RFC2544PortType)# setReportParams commit
Switch(config-controller-RFC2544PortType)# exit
```

## Displaying RFC 2544 Profile and Report on NID-1

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.

	Command or Action	Purpose
Step 3	<b>RFC2544PortType</b>  <b>Example:</b> Switch(config-controller)# RFC2544PortType	Enters the RFC2544PortType mode.
Step 4	<b>showRfc2544 showRequest show {profiles   report}</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType)# showRfc2544 showRequest show profiles	Displays RFC 2544 profile. <ul style="list-style-type: none"> <li>• <b>show</b>—Displays profile or report. <ul style="list-style-type: none"> <li>◦ <b>profiles</b>—Displays profile information.</li> <li>◦ <b>report</b>—Displays report information.</li> </ul> </li> </ul>
Step 5	<b>showRfc2544 review</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType)# showRfc2544 review	Displays the showRfc2544 configuration.
Step 6	<b>showRfc2544 commit</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType)# showRfc2544 commit	Sends the setRfc2544Profile configuration to the ME 1200 NID.
Step 7	<b>showRfc2544 showRequest show {profiles   report}</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType)# showRfc2544 showRequest show report	Displays RFC 2544 profile. <ul style="list-style-type: none"> <li>• <b>show</b>—Displays profile or report. <ul style="list-style-type: none"> <li>◦ <b>profiles</b>—Displays profile information.</li> <li>◦ <b>report</b>—Displays report information.</li> </ul> </li> </ul>
Step 8	<b>showRfc2544 review</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType)# showRfc2544 review	Displays the showRfc2544 configuration.
Step 9	<b>showRfc2544 commit</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType)# showRfc2544 commit	Sends the setRfc2544Profile configuration to the ME 1200 NID.
Step 10	<b>exit</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to display RFC 2544 profile and report on NID-1:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# RFC2544PortType
Switch(config-controller-RFC2544PortType)# showRfc2544 showRequest show profiles
Switch(config-controller-RFC2544PortType)# showRfc2544 review
Switch(config-controller-RFC2544PortType)# showRfc2544 commit
```

```
ShowRfc2544_Output.showResponse.t = 1
ShowRfc2544_Output.showResponse.u.profile[0].profileName = 'profile1'
ShowRfc2544_Output.showResponse.u.profile[0].description = 'profile1'
```

```
ShowRfc2544 Commit Success!!!
```

```
Switch(config-controller)# RFC2544PortType
Switch(config-controller-RFC2544PortType)# showRfc2544 showRequest show report
Switch(config-controller-RFC2544PortType)# showRfc2544 review
Switch(config-controller-RFC2544PortType)# showRfc2544 commit
```

```
ShowRfc2544_Output.showResponse.t = 2
ShowRfc2544_Output.showResponse.u.report[0].reportName = 'Report1'
ShowRfc2544_Output.showResponse.u.report[0].created =
'1970-01-04T07:29:25+00:00'
ShowRfc2544_Output.showResponse.u.report[0].status = 'Succeeded'
ShowRfc2544_Output.showResponse.u.report[1].reportName = 'Rep15'
ShowRfc2544_Output.showResponse.u.report[1].created =
'1970-01-02T01:57:34+00:00'
ShowRfc2544_Output.showResponse.u.report[1].status = 'Failed'
ShowRfc2544_Output.showResponse.u.report[2].reportName = 'Rep16'
ShowRfc2544_Output.showResponse.u.report[2].created =
'1970-01-02T02:08:12+00:00'
ShowRfc2544_Output.showResponse.u.report[2].status = 'Succeeded'
ShowRfc2544_Output.showResponse.u.report[3].reportName = 'profile1'
ShowRfc2544_Output.showResponse.u.report[3].created =
'1970-01-02T03:48:16+00:00'
ShowRfc2544_Output.showResponse.u.report[3].status = 'Failed'
```

```
ShowRfc2544 Commit Success!!!
```

```
Switch(config-controller-RFC2544PortType)# exit
```

## Creating VLAN Profile on NID-1

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.

	Command or Action	Purpose
<b>Step 2</b>	<p><b>controller nid</b> <i>1/NID_ID</i></p> <p><b>Example:</b> Switch(config)# controller nid 1/2</p>	<p>Enters the controller configuration mode.</p>
<b>Step 3</b>	<p><b>RFC2544PortType</b></p> <p><b>Example:</b> Switch(config-controller)# RFC2544PortType</p>	<p>Enters the RFC2544PortType mode.</p>
<b>Step 4</b>	<p><b>setRfc2544Profile Rfc2544Profile</b> {profileName   description   megLevel   egressPort   seqNoCheck {enable   disable}   dwellTime   mepType {portDownMep   vlanDownMep}   vlanId   pcp   dei   dMac}</p> <p><b>Example:</b> Switch(config-controller-RFC2544PortType)# setRfc2544Profile Rfc2544Profile profileName vlan-profile Switch(config-controller-RFC2544PortType)# setRfc2544Profile Rfc2544Profile egressPort 3 Switch(config-controller-RFC2544PortType)# setRfc2544Profile Rfc2544Profile mepType vlanDownMep Switch(config-controller-RFC2544PortType)# setRfc2544Profile Rfc2544Profile vlanId 999 Switch(config-controller-RFC2544PortType)# setRfc2544Profile Rfc2544Profile megLevel 4 Switch(config-controller-RFC2544PortType)# setRfc2544Profile Rfc2544Profile description vlanprofile</p>	<p>Creates RFC profile.</p> <ul style="list-style-type: none"> <li>• <b>profileName</b>—Specifies RFC 2544 profile name.</li> <li>• <b>description</b>—Adds a description to profile. <ul style="list-style-type: none"> <li><b>Note</b> We recommend that you add a description for the profile.</li> </ul> </li> <li>• <b>megLevel</b>—Sets profile MEG level used in TST PDUs.</li> <li>• <b>egressPort</b>—Sets the egress interface on which PDUs are transmitted.</li> <li>• <b>seqNoCheck</b>—Enables sequence number checking of looped TST PDUs. <ul style="list-style-type: none"> <li>◦ <b>enable</b>—Enables sequence number.</li> <li>◦ <b>disable</b>—Disables sequence number.</li> </ul> </li> <li>• <b>dwellTime</b>—Controls the number of seconds that the execution pauses after each trial, before reading counters and status from hardware.</li> <li>• <b>mepType</b>—Specifies MEP type port. MEP or VLAN MEP. <ul style="list-style-type: none"> <li>◦ <b>portDownMep</b>—Creates a port down MEP.</li> <li>◦ <b>vlanDownMep</b>—Creates a VLAN down MEP. All PDUs are then transmitted with a VLAN tag.</li> </ul> </li> <li>• <b>vlanId</b>—Specifies VLAN ID incase of VLAN down MEP.</li> <li>• <b>pcp</b>—Specifies PCP value used in the VLAN tag incase of VLAN MEP.</li> <li>• <b>dei</b>—Specifies DEI value used in the VLAN tag incase vlan mep.</li> <li>• <b>dMac</b>—Specifies destination MAC address used in generation of the Y.1731 TST and 1DM frames.</li> </ul>

	Command or Action	Purpose
<b>Step 5</b>	<b>setRfc2544Profile review</b>  <b>Example:</b> Switch(config-controllerRFC2544PortType)# setRfc2544Profile review	Displays the setRfc2544Profile.
<b>Step 6</b>	<b>setRfc2544Profile commit</b>  <b>Example:</b> Switch(config-controllerRFC2544PortType)# setRfc2544Profile commit	Sends the setRfc2544Profile configuration to the ME 1200 NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controllerRFC2544PortType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to create VLAN profile on NID-1:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# RFC2544PortType
Switch(config-controller-RFC2544PortType)# setRfc2544Profile Rfc2544Profile profileName
vlan-profile
Switch(config-controller-RFC2544PortType)# setRfc2544Profile Rfc2544Profile egressPort 3
Switch(config-controller-RFC2544PortType)# setRfc2544Profile Rfc2544Profile mepType
vlanDownMep
Switch(config-controller-RFC2544PortType)# setRfc2544Profile Rfc2544Profile vlanId 999
Switch(config-controller-RFC2544PortType)# setRfc2544Profile Rfc2544Profile megLevel 4
Switch(config-controller-RFC2544PortType)# setRfc2544Profile Rfc2544Profile description
vlanprofile
Switch(config-controller-RFC2544PortType)# setRfc2544Profile review
Switch(config-controller-RFC2544PortType)# setrfc2544profile commit
Switch(config-controller-RFC2544PortType)# exit
```

## Getting RFC 2544 Profile for VLAN on NID-1

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.



	Command or Action	Purpose
Step 3	<b>RFC2544PortType</b>  <b>Example:</b> Switch(config-controller)# RFC2544PortType	Enters the RFC2544PortType mode.
Step 4	<b>getRfc2544Profile rfc2544Request profileName <i>profileName</i></b>  <b>Example:</b> Switch(config-controller-RFC2544PortType)# getRfc2544Profile rfc2544Request profileName vlan-profile	Gets the RFC 2544 profile. <ul style="list-style-type: none"> <li>• <b>rfc2544Request</b>—Specifies RFC2544 request parameter.</li> <li>• <b>profileName</b>—Specifies name of the profile.</li> </ul>
Step 5	<b>getRfc2544Profile review</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType)# getRfc2544Profile review	Displays the getRfc2544Profile configuration.
Step 6	<b>getRfc2544Profile commit</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType)# getRfc2544Profile commit	Sends the getRfc2544Profile configuration to the ME 1200 NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to get RFC 2544 profile for VLAN on NID-1:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# RFC2544PortType
Switch(config-controller-RFC2544PortType)# getRfc2544Profile rfc2544Request profileName
vlan-profile
Switch(config-controller-RFC2544PortType)# getRfc2544Profile review
Switch(config-controller-RFC2544PortType)# getRfc2544Profile commit
```

```
GetRfc2544Profile_Output.Rfc2544Profile.profileName = 'vlan-profile'
GetRfc2544Profile_Output.Rfc2544Profile.description = 'vlanprofile'
GetRfc2544Profile_Output.Rfc2544Profile.megLevel = 4
GetRfc2544Profile_Output.Rfc2544Profile.egressPort = 3
GetRfc2544Profile_Output.Rfc2544Profile.seqNoCheck.t = 2
GetRfc2544Profile_Output.Rfc2544Profile.seqNoCheck.u.disable = ''
GetRfc2544Profile_Output.Rfc2544Profile.dwellTime = 2
GetRfc2544Profile_Output.Rfc2544Profile.mepType.t = 2
GetRfc2544Profile_Output.Rfc2544Profile.mepType.u.vlanDownMep = ''
GetRfc2544Profile_Output.Rfc2544Profile.vlanId = 999
GetRfc2544Profile_Output.Rfc2544Profile.pcp = 0
GetRfc2544Profile_Output.Rfc2544Profile.dei = 0
GetRfc2544Profile_Output.Rfc2544Profile.dMac = '00-00-00-00-00-01'
```

```
GetRfc2544Profile Commit Success!!!
```

```
Switch(config-controller-RFC2544PortType)# exit
```

## Setting RFC 2544 Reporting Parameters for VLAN on NID-1

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
<b>Step 3</b>	<b>RFC2544PortType</b>  <b>Example:</b> Switch(config-controller)# RFC2544PortType	Enters the RFC2544PortType mode.
<b>Step 4</b>	<b>setReportParams rfc2544Reports reportAction {delete reportName   save {reportName   tftpPath}   start {reportName   profileName   description}   stop reportName   rename {oldName   newName}}</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType)# setReportParams rfc2544Reports reportAction start profileName vlan-profile Switch(config-controller-RFC2544PortType)# setReportParams rfc2544Reports reportAction start reportName vlan-profile Switch(config-controller-RFC2544PortType)# setReportParams rfc2544Reports reportAction start description vlan-profile	Sets RFC 2544 reporting parameters. <ul style="list-style-type: none"> <li>• <b>reportAction</b>—Specifies action to be performed on the report. <ul style="list-style-type: none"> <li>◦ <b>delete</b>—Deletes the existing report.</li> <li>◦ <i>reportName</i>—Specifies name of the report.</li> <li>◦ <b>save</b>—Saves the existing report. <ul style="list-style-type: none"> <li>◦ <i>reportName</i>—Specifies the name of existing report.</li> <li>◦ <i>tftpPath</i>—Specifies TFTP server URL tftp://server[:port]/path-to-file.</li> </ul> </li> <li>◦ <b>start</b>—Starts profile execution <ul style="list-style-type: none"> <li>◦ <i>reportName</i>—Specifies unique name of the resulting report.</li> <li>◦ <i>profileName</i>—Specifies name of the profile to execute.</li> <li>◦ <i>description</i>—(Optional) Provides a description of the report.</li> </ul> </li> </ul> </li> </ul> <p><b>Note</b> We recommend that you add a description for the report.</p>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>◦ <b>stop</b>—Stops the report. <ul style="list-style-type: none"> <li>◦ <i>reportName</i>—Specifies name of the report to be stopped.</li> </ul> </li> <li>◦ <b>rename</b>—Renames the existing report. <ul style="list-style-type: none"> <li>◦ <i>oldName</i>—Specifies name of the old profile.</li> <li>◦ <i>newName</i>—Specifies name of the new profile.</li> </ul> </li> </ul>
<b>Step 5</b>	<b>setReportParams review</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType) # setReportParams review	Displays the setReportParams configuration.
<b>Step 6</b>	<b>setReportParams commit</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType) # setReportParams commit	Sends the setReportParams configuration to the ME 1200 NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType) # exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to set the RFC 2544 reporting parameters for VLAN on NID-1:

```
Switch(config)# controller nid 1/1
Switch(config-controller) # RFC2544PortType
Switch(config-controller-RFC2544PortType) # setReportParams rfc2544Reports reportAction start
  profileName vlan-profile
Switch(config-controller-RFC2544PortType) # setReportParams rfc2544Reports reportAction start
  reportName vlan-profile
Switch(config-controller-RFC2544PortType) # setReportParams rfc2544Reports reportAction start
  description vlan-profile
Switch(config-controller-RFC2544PortType) # setReportParams review
Switch(config-controller-RFC2544PortType) # setReportParams commit
Switch(config-controller-RFC2544PortType) # exit
```

## Displaying RFC 2544 Report for VLAN on NID-1

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
Step 3	<b>RFC2544PortType</b>  <b>Example:</b> Switch(config-controller)# RFC2544PortType	Enters the RFC2544PortType mode.
Step 4	<b>showRfc2544 showRequest show {profiles   report}</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType)# showRfc2544 showRequest show profiles	Displays RFC 2544 profile. <ul style="list-style-type: none"> <li>• <b>show</b>—Displays profile or report. <ul style="list-style-type: none"> <li>◦ <b>profiles</b>—Displays profile information.</li> <li>◦ <b>report</b>—Displays report information.</li> </ul> </li> </ul>
Step 5	<b>showRfc2544 review</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType)# showRfc2544 review	Displays the showRfc2544 configuration.
Step 6	<b>showRfc2544 commit</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType)# showRfc2544 commit	Sends the setRfc2544Profile configuration to the ME 1200 NID.
Step 7	<b>showRfc2544 showRequest show {profiles   report}</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType)# showRfc2544 showRequest show report	Displays RFC 2544 profile. <ul style="list-style-type: none"> <li>• <b>show</b>—Displays profile or report. <ul style="list-style-type: none"> <li>◦ <b>profiles</b>—Displays profile information.</li> <li>◦ <b>report</b>—Displays report information.</li> </ul> </li> </ul>
Step 8	<b>showRfc2544 review</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType)# showRfc2544 review	Displays the showRfc2544 configuration.

	Command or Action	Purpose
<b>Step 9</b>	<b>showRfc2544 commit</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType)# showRfc2544 commit	Sends the setRfc2544Profile configuration to the ME 1200 NID.
<b>Step 10</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to display RFC 2544 report for VLAN on NID-1:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# RFC2544PortType
Switch(config-controller-RFC2544PortType)# showRfc2544 showRequest show report
Switch(config-controller-RFC2544PortType)# showRfc2544 review
Switch(config-controller-RFC2544PortType)# showRfc2544 commit
```

```
ShowRfc2544_Output.showResponse.t = 2
ShowRfc2544_Output.showResponse.u.report[0].reportName = 'Report1'
ShowRfc2544_Output.showResponse.u.report[0].created =
'1970-01-04T07:29:25+00:00'
ShowRfc2544_Output.showResponse.u.report[0].status = 'Succeeded'
ShowRfc2544_Output.showResponse.u.report[1].reportName = 'Rep15'
ShowRfc2544_Output.showResponse.u.report[1].created =
'1970-01-02T01:57:34+00:00'
ShowRfc2544_Output.showResponse.u.report[1].status = 'Failed'
ShowRfc2544_Output.showResponse.u.report[2].reportName = 'Rep16'
ShowRfc2544_Output.showResponse.u.report[2].created =
'1970-01-02T02:08:12+00:00'
ShowRfc2544_Output.showResponse.u.report[2].status = 'Succeeded'
ShowRfc2544_Output.showResponse.u.report[3].reportName = 'profile1'
ShowRfc2544_Output.showResponse.u.report[3].created =
'1970-01-02T03:48:16+00:00'
ShowRfc2544_Output.showResponse.u.report[3].status = 'Failed'
```

```
ShowRfc2544 Commit Success!!!
```

```
Switch(config-controller-RFC2544PortType)# exit
```

## Deleting RFC 2544 Profile on NID-1

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
Step 3	<b>RFC2544PortType</b>  <b>Example:</b> Switch(config-controller)# RFC2544PortType	Enters the RFC2544PortType mode.
Step 4	<b>deleterfc2544 rfc2544DeleteConfig {profileName            profileName   delete {btob   dMAC   description              dwellTime   frameLoss   frameSizes   ifc   latency              megLevel   rfc2544   throughput   vid}}</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType)# deleteRfc2544 rfc2544DeleteConfig profileName profile1	Deletes RFC profile. <ul style="list-style-type: none"> <li>• <b>profileName</b>—Specifies RFC 2544 profile name.</li> <li>• <i>profileName</i>—Name of the RFC 2544 profile .</li> <li>• <b>delete</b>—Deletes the specific attributes of the profile.</li> <li>• <b>btob</b>—Removes back-to-back test.</li> <li>• <b>dMAC</b>—Removes destination MAC.</li> <li>• <b>description</b>—Removes description.</li> <li>• <b>dwellTime</b>—Removes dwell time.</li> <li>• <b>frameLoss</b>—Removes frame loss test.</li> <li>• <b>frameSizes</b>—Removes frame sizes.</li> <li>• <b>ifc</b>—Removes IFC.</li> <li>• <b>latency</b>—Removes latency test.</li> <li>• <b>megLevel</b>—Removes MEG level.</li> <li>• <b>rfc2544</b>—Removes RFC 2544 profile.</li> <li>• <b>throughput</b>—Removes throughput test.</li> <li>• <b>vid</b>—Removes version ID (VID).</li> </ul>

	Command or Action	Purpose
Step 5	<b>deleteRfc2544 review</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType)# deleteRfc2544 review	Displays the deleteRfc2544 configuration.
Step 6	<b>deleteRfc2544 commit</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType)# deleteRfc2544 commit	Sends the deleteRfc2544 configuration to the ME 1200 NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType)# exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to delete RFC 2544 profile on NID-1:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# RFC2544PortType
Switch(config-controller-RFC2544PortType)# deleteRfc2544 rfc2544DeleteConfig profileName
profile1
Switch(config-controller-RFC2544PortType)# deleteRfc2544 review
Switch(config-controller-RFC2544PortType)# deleteRfc2544 commit
Switch(config-controller-RFC2544PortType)# exit
```

## Modifying RFC 2544 with Frameloss and Backtoback

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
Step 3	<b>RFC2544PortType</b>  <b>Example:</b> Switch(config-controller)# RFC2544PortType	Enters the RFC2544PortType mode.

	Command or Action	Purpose
<b>Step 4</b>	<p><b>SetRfc2544TestToRun testParameters</b>  <b>{profileName <i>profileName</i>   frameSizes   testToRun</b>  <b>{throughput   latency   frameLoss   backToBack}</b>  <b>  thoughputTPParams {trialDuration   minRate  </b>  <b>maxRate   accuracy   allowedFrameLoss}  </b>  <b>latencyTPParams {trialDuration   delayMessInterval</b>  <b>  allowedFrameLoss}   frameLossTPParams</b>  <b>{trialDuration   minRate   maxRate   rateStep}  </b>  <b>backToBackTPParams {trialDuration   trialCount}}</b></p> <p><b>Example:</b>  Switch(config-controller-RFC2544PortType)#  setRfc2544TestToRun testParameters profileName  vlan-profile  Switch(config-controller-RFC2544PortType)#  setRfc2544TestToRun testParameters  backToBackTPParams trialCount 2  Switch(config-controller-RFC2544PortType)#  setRfc2544TestToRun testParameters  frameLossTPParams minRate 100  Switch(config-controller-RFC2544PortType)#  setRfc2544TestToRun testParameters  frameLossTPParams maxRate 200  Switch(config-controller-RFC2544PortType)#  setRfc2544TestToRun testParameters  frameLossTPParams rateStep 10</p>	<p>Modifies RFC 2544 with Frameloss and BacktoBack.</p> <ul style="list-style-type: none"> <li>• <b>testParameters</b>—Specifies RFC 2544 test parameters.</li> <li>• <b>profileName</b>—Specifies RFC 2544 profile name.</li> <li>• <b>profileName</b>—Name of the RFC 2544 profile.</li> <li>• <b>frameSizes</b>—Specifies frame sizes separated by a comma, for example, 1024,128,1280,1518, 2000, 256, 512, 64, 9600.</li> <li>• <b>testToRun</b>—Test to be run. <ul style="list-style-type: none"> <li>◦ <b>throughput</b>—Enables throughput test and optionally set its parameters.</li> <li>◦ <b>latency</b>—Enables latency test and optionally set its parameters.</li> <li>◦ <b>frameLoss</b>—Enables frame-loss test and optionally set its parameters.</li> <li>◦ <b>backToBack</b>—Enables back-to-back test and optionally set its parameters.</li> </ul> </li> <li>• <b>thoughputTPParams</b>—Specifies throughput test parameters. <ul style="list-style-type: none"> <li>◦ <b>trialDuration</b>—Sets the duration of one trial.</li> <li>◦ <b>minRate</b>—Sets the minimum rate.</li> <li>◦ <b>maxRate</b>—Sets the maximum rate.</li> <li>◦ <b>accuracy</b>—Sets the accuracy (stop criterion).</li> <li>◦ <b>allowedFrameLoss</b>—Sets the maximum allowed test protocol data unit (PDU) loss at which the test is considered successful.</li> </ul> </li> <li>• <b>latencyTPParams</b>—Specifies latency test parameters. <ul style="list-style-type: none"> <li>◦ <b>trialDuration</b>—Sets the duration of one trial.</li> <li>◦ <b>delayMessInterval</b>—Specifies interval between sending delay measurement frames.</li> <li>◦ <b>allowedFrameLoss</b>—Sets the maximum allowed test PDU loss at which the test is considered successful.</li> </ul> </li> <li>• <b>frameLossTPParams</b>—Specifies frame loss test parameters. <ul style="list-style-type: none"> <li>◦ <b>trialDuration</b>—Sets the duration of one trial.</li> <li>◦ <b>minRate</b>— Sets the minimum rate.</li> <li>◦ <b>maxRate</b>— Sets the maximum rate.</li> </ul> </li> </ul>



	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>◦ <b>rateStep</b>—Sets the step rate.</li> <li>• <b>backToBackTPParams</b>—Specifies back to back test parameters. <ul style="list-style-type: none"> <li>◦ <b>trialDuration</b>—Specifies the time (in milliseconds) to transmit a burst of Y.1731 test frames at line rate and frame size.</li> <li>◦ <b>trialCount</b>—Specifies the number of times to repeat the burst.</li> </ul> </li> </ul>
<b>Step 5</b>	<b>SetRfc2544TestToRun review</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType) # SetRfc2544TestToRun review	Displays the SetRfc2544TestToRun configuration.
<b>Step 6</b>	<b>SetRfc2544TestToRun commit</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType) # SetRfc2544TestToRun commit	Sends the SetRfc2544TestToRun configuration to the ME 1200 NID.
<b>Step 7</b>	<b>SetRfc2544TestToRun testParameters</b> { <b>profileName</b> <i>profileName</i>   <b>frameSizes</b>   <b>testToRun</b>   <b>throughput</b>   <b>latency</b>   <b>frameLoss</b>   <b>backToBack</b> }   <b>throughputTPParams</b> { <b>trialDuration</b>   <b>minRate</b>   <b>maxRate</b>   <b>accuracy</b>   <b>allowedFrameLoss</b> }   <b>latencyTPParams</b> { <b>trialDuration</b>   <b>delayMessInterval</b>   <b>allowedFrameLoss</b> }   <b>frameLossTPParams</b> { <b>trialDuration</b>   <b>minRate</b>   <b>maxRate</b>   <b>rateStep</b> }   <b>backToBackTPParams</b> { <b>trialDuration</b>   <b>trialCount</b> } }  <b>Example:</b> Switch(config-controller-RFC2544PortType) # setRfc2544TestToRun testParameters testToRun backToBack enable Switch(config-controller-RFC2544PortType) # setRfc2544TestToRun testParameters testToRun frameLoss enable Switch(config-controller-RFC2544PortType) # setRfc2544TestToRun testParameters testToRun latency disable Switch(config-controller-RFC2544PortType) # setRfc2544TestToRun testParameters testToRun throughput disable Switch(config-controller-RFC2544PortType) # setRfc2544TestToRun testParameters profileName vlan-profile	Modifies RFC 2544 with Frameloss and BacktoBack. <ul style="list-style-type: none"> <li>• <b>testParameters</b>—Specifies RFC 2544 test parameters.</li> <li>• <b>profileName</b>—Specifies RFC 2544 profile name.</li> <li>• <i>profileName</i>—Name of the RFC 2544 profile.</li> <li>• <b>frameSizes</b>—Specifies frame sizes separated by a comma, for example, 1024,128,1280,1518, 2000, 256, 512, 64, 9600.</li> <li>• <b>testToRun</b>—Test to be run. <ul style="list-style-type: none"> <li>◦ <b>throughput</b>—Enables throughput test and optionally set its parameters.</li> <li>◦ <b>latency</b>—Enables latency test and optionally set its parameters.</li> <li>◦ <b>frameLoss</b>—Enables frame-loss test and optionally set its parameters.</li> <li>◦ <b>backToBack</b>—Enables back-to-back test and optionally set its parameters.</li> </ul> </li> <li>• <b>throughputTPParams</b>—Specifies throughput test parameters. <ul style="list-style-type: none"> <li>◦ <b>trialDuration</b>—Sets the duration of one trial.</li> <li>◦ <b>minRate</b>—Sets the minimum rate.</li> <li>◦ <b>maxRate</b>—Sets the maximum rate.</li> </ul> </li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>◦ <b>accuracy</b>—Sets the accuracy (stop criterion).</li> <li>◦ <b>allowedFrameLoss</b>—Sets the maximum allowed test protocol data unit (PDU) loss at which the test is considered successful.</li> <li>• <b>latencyTParams</b>—Specifies latency test parameters. <ul style="list-style-type: none"> <li>◦ <b>trialDuration</b>—Sets the duration of one trial.</li> <li>◦ <b>delayMessInterval</b>—Specifies interval between sending delay measurement frames.</li> <li>◦ <b>allowedFrameLoss</b>—Sets the maximum allowed test PDU loss at which the test is considered successful.</li> </ul> </li> <li>• <b>frameLossTParams</b>—Specifies frame loss test parameters. <ul style="list-style-type: none"> <li>◦ <b>trialDuration</b>—Sets the duration of one trial.</li> <li>◦ <b>minRate</b>— Sets the minimum rate.</li> <li>◦ <b>maxRate</b>— Sets the maximum rate.</li> <li>◦ <b>rateStep</b>—Sets the step rate.</li> </ul> </li> <li>• <b>backToBackTParams</b>—Specifies back to back test parameters. <ul style="list-style-type: none"> <li>◦ <b>trialDuration</b>—Specifies the time (in milliseconds) to transmit a burst of Y.1731 test frames at line rate and frame size.</li> <li>◦ <b>trialCount</b>—Specifies the number of times to repeat the burst.</li> </ul> </li> </ul>
<b>Step 8</b>	<b>SetRfc2544TestToRun review</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType) # SetRfc2544TestToRun review	Displays the SetRfc2544TestToRun configuration.
<b>Step 9</b>	<b>SetRfc2544TestToRun commit</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType) # SetRfc2544TestToRun commit	Sends the SetRfc2544TestToRun configuration to the ME 1200 NID.
<b>Step 10</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType) # exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to modify and enable RFC 2544 with Frameloss and BacktoBack:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# RFC2544PortType
Switch(config-controller-RFC2544PortType)# setRfc2544TestToRun testParameters profileName
vlan-profile
Switch(config-controller-RFC2544PortType)# setRfc2544TestToRun testParameters
backToBackTParams trialCount 2
Switch(config-controller-RFC2544PortType)# setRfc2544TestToRun testParameters frameLossTParams
minRate 100
Switch(config-controller-RFC2544PortType)# setRfc2544TestToRun testParameters frameLossTParams
maxRate 200
Switch(config-controller-RFC2544PortType)# setRfc2544TestToRun testParameters frameLossTParams
rateStep 10
Switch(config-controller-RFC2544PortType)# setRfc2544TestToRun review
Switch(config-controller-RFC2544PortType)# setRfc2544TestToRun commit

Switch(config-controller-RFC2544PortType)# setRfc2544TestToRun testParameters testToRun
backToBack enable
Switch(config-controller-RFC2544PortType)# setRfc2544TestToRun testParameters testToRun
frameLoss enable
Switch(config-controller-RFC2544PortType)# setRfc2544TestToRun testParameters testToRun
latency disable
Switch(config-controller-RFC2544PortType)# setRfc2544TestToRun testParameters testToRun
throughput disable
Switch(config-controller-RFC2544PortType)# setRfc2544TestToRun testParameters profileName
vlan-profile
Switch(config-controller-RFC2544PortType)# setRfc2544TestToRun review
Switch(config-controller-RFC2544PortType)# setRfc2544TestToRun commit

Switch(config-controller-RFC2544PortType)# exit
```

## Getting RFC 2544 Profile after Modifying Frameloss and BacktoBack

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
Step 3	<b>RFC2544PortType</b>  <b>Example:</b> Switch(config-controller)# RFC2544PortType	Enters the RFC2544PortType mode.

	Command or Action	Purpose
Step 4	<b>getRfc2544TestToRun rfc2544Request profileName</b> <i>profileName</i>  <b>Example:</b> Switch(config-controller-RFC2544PortType) # getRfc2544TestToRun rfc2544Request profileName vlan-profile	Gets the RFC 2544 profile. <ul style="list-style-type: none"> <li>• <b>rfc2544Request</b>—Specifies RFC2544 request parameter.</li> <li>• <b>profileName</b>—Specifies name of the profile.</li> </ul>
Step 5	<b>getRfc2544TestToRun review</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType) # getRfc2544TestToRun review	Displays the getRfc2544Profile configuration.
Step 6	<b>getRfc2544TestToRun commit</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType) # getRfc2544TestToRun commit	Sends the getRfc2544Profile configuration to the ME 1200 NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-RFC2544PortType) # exit	Exits to the config-controller mode.

### Configuration Example

The example shows how to get RFC 2544 Profile after modifying frameloss and backtoBack:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# RFC2544PortType
Switch(config-controller-RFC2544PortType)# getRfc2544TestToRun rfc2544Request profileName
vlan-profile
Switch(config-controller-RFC2544PortType)# getRfc2544TestToRun review
Switch(config-controller-RFC2544PortType)# getRfc2544TestToRun commit
```

```
GetRfc2544TestToRun_Output.testParameters.profileName = 'vlan-profile'
GetRfc2544TestToRun_Output.testParameters.frameSizes =
'64-128-256-512-1024-1280-1518-2000'
GetRfc2544TestToRun_Output.testParameters.testToRun.throughput = false
GetRfc2544TestToRun_Output.testParameters.testToRun.latency = false
GetRfc2544TestToRun_Output.testParameters.testToRun.frameLoss = true
GetRfc2544TestToRun_Output.testParameters.testToRun.backToBack = true
GetRfc2544TestToRun_Output.testParameters.throughputTParams.trialDuration
= 60
GetRfc2544TestToRun_Output.testParameters.throughputTParams.minRate = 800
GetRfc2544TestToRun_Output.testParameters.throughputTParams.maxRate = 1000
GetRfc2544TestToRun_Output.testParameters.throughputTParams.accuracy = 2
GetRfc2544TestToRun_Output.testParameters.throughputTParams.allowedFrameLoss
= 0
GetRfc2544TestToRun_Output.testParameters.latencyTParams.trialDuration =
120
GetRfc2544TestToRun_Output.testParameters.latencyTParams.delayMessInterval
= 10
```

```

GetRfc2544TestToRun_Output.testParameters.latencyTParams.allowedFrameLoss
= 0
GetRfc2544TestToRun_Output.testParameters.frameLossTParams.trialDuration
= 60
GetRfc2544TestToRun_Output.testParameters.frameLossTParams.minRate = 800
GetRfc2544TestToRun_Output.testParameters.frameLossTParams.maxRate = 1000
GetRfc2544TestToRun_Output.testParameters.frameLossTParams.rateStep = 5
GetRfc2544TestToRun_Output.testParameters.backToBackTParams.trialDuration
= 2000
GetRfc2544TestToRun_Output.testParameters.backToBackTParams.trialCount =
50

```

```
GetRfc2544TestToRun Commit Success!!!
```

```
Switch(config-controller-RFC2544PortType)# exit
```

## Verifying RFC 2544

Use the following commands to verify the RFC 2544 status on the controller.

- **showRfc2544 com**

This command displays the RFC 2544 report. The following is a sample output from the command:

```
Switch(config-controller-SPAN)# showRfc2544 com
Switch(config-controller-SPAN)# showRfc2544 com review
```

```
Commands in queue:
  showRfc2544 com
```

```
Switch(config-controller-SPAN)# showSpanConfig commit
```

```

ShowRfc2544_Output.showResponse.t = 2
ShowRfc2544_Output.showResponse.u.report[0].reportName = 'Jul3'
ShowRfc2544_Output.showResponse.u.report[0].created =
'1970-01-04T01:02:24+00:00'
ShowRfc2544_Output.showResponse.u.report[0].status = 'Failed'
ShowRfc2544_Output.showResponse.u.report[1].reportName = 'July3'
ShowRfc2544_Output.showResponse.u.report[1].created =
'1970-01-04T01:15:37+00:00'
ShowRfc2544_Output.showResponse.u.report[1].status = 'Failed'
ShowRfc2544_Output.showResponse.u.report[2].reportName = 'repjuly3'
ShowRfc2544_Output.showResponse.u.report[2].created =
'1970-01-04T01:52:07+00:00'
ShowRfc2544_Output.showResponse.u.report[2].status = 'Succeeded'
ShowRfc2544_Output.showResponse.u.report[3].reportName = 'Report1'
ShowRfc2544_Output.showResponse.u.report[3].created =
'1970-01-04T07:29:25+00:00'
ShowRfc2544_Output.showResponse.u.report[3].status = 'Succeeded'
ShowRfc2544_Output.showResponse.u.report[4].reportName = 'rep-vlan'
ShowRfc2544_Output.showResponse.u.report[4].created =
'1970-01-04T21:01:59+00:00'
ShowRfc2544_Output.showResponse.u.report[4].status = 'Failed'
ShowRfc2544_Output.showResponse.u.report[5].reportName = 'Report20'
ShowRfc2544_Output.showResponse.u.report[5].created =
'1970-01-01T08:15:17+00:00'
ShowRfc2544_Output.showResponse.u.report[5].status = 'Failed'
ShowRfc2544_Output.showResponse.u.report[6].reportName = 'Rep22'

```

```

ShowRfc2544_Output.showResponse.u.report[6].created =
'1970-01-01T09:36:14+00:00'
ShowRfc2544_Output.showResponse.u.report[6].status = 'Failed'
ShowRfc2544_Output.showResponse.u.report[7].reportName = 'profile2'
ShowRfc2544_Output.showResponse.u.report[7].created =
'1970-01-02T00:55:43+00:00'
ShowRfc2544_Output.showResponse.u.report[7].status = 'Failed'

ShowRfc2544 Commit Success!!!

```

## Additional References

### Related Documents

Related Topic	Document Title
Cisco ME 3800x and ME 3600x Switches Software Configuration Guide, Cisco IOS Release 15.4(1)S	<a href="http://www.cisco.com/c/en/us/td/docs/switches/metro/me3600x_3800x/software/release/15-4_1_S/configuration/guide/3800x3600xscg.html">http://www.cisco.com/c/en/us/td/docs/switches/metro/me3600x_3800x/software/release/15-4_1_S/configuration/guide/3800x3600xscg.html</a>

### MIBs

MIB	MIBs Link
MIBs Supporting Cisco IOS	To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL: <a href="http://www.cisco.com/go/mibs">http://www.cisco.com/go/mibs</a>

### Technical Assistance

Description	Link
<p>The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.</p> <p>To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.</p> <p>Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.</p>	<a href="http://www.cisco.com/support">http://www.cisco.com/support</a>



## CHAPTER 28

# Configuring sFlow

---

This document describes the sampled flow (sFlow) feature and configuration steps to implement sFlow.

- [Prerequisites for Configuring sFlow, page 583](#)
- [Restrictions for Configuring sFlow, page 583](#)
- [Information About sFlow, page 583](#)
- [How to Provision sFlow, page 584](#)
- [Verifying sFlow, page 594](#)
- [Additional References, page 596](#)

## Prerequisites for Configuring sFlow

- You must enable sFlow on an interface on Cisco ME 1200 NID.

## Restrictions for Configuring sFlow

- ME 1200 NID does not support configuring more than one sFlow instance with maximum sample rate on the specified data source, either in the ingress or egress direction.

## Information About sFlow

Using sFlow, a standards-based protocol mechanism, allows you to monitor Layer 2 traffic in data networks that contain switches and routers. It consists of :

- **sFlow Agent** (embedded on ME 1200 NID)—The sFlow Agent uses sampling technology to capture traffic statistics from the monitored device and then forwards the sampled data to a central sFlow Collector for analysis. Packet sampling is done using one or more sFlow instances, each configured with a sampling rate.

- sFlow Instances—There may be one or more sFlow Instances associated with a single data source. Each sFlow instance operates independently of other sFlow instances. For example, Packet Flow Sampling instances have their own sampling rates and Counter Sampling instances have their own sampling intervals.
- **sFlow Collector**—The sFlow Collector is a software application that can receive sFlow datagrams and present a view of traffic and other network parameters which are output as type, length, and value (TLV) in the datagrams. The sFlow collectors can also read and configure sFlow-managed objects. Both counter and packet flow statistics are collected and sent as sFlow Datagrams (defined by maximum datagram size of 200-1468) to a sFlow Collector.
  - sFlow Datagram—The sFlow Datagram format specifies a standard format for the sFlow Agent to send sampled data to a remote sFlow Collector. The sFlow Datagram version 5 is supported. The format of the sFlow Datagram is specified using the External Data Representation (XDR) standard. This makes it simpler for the sFlow Agent to encode and the sFlow Collector to decode. Samples are sent as User Datagram Protocol (UDP) packets to the host and port specified in the SFLOW MIB or CLI. The assigned port for sFlow (and the default specified in the SFLOW MIB) is port 6343. All sFlow Agents and applications by default must use UDP port 6343.

By default, sFlow is disabled on ME 1200 NID. You can enable sFlow on a specific interface or port.

## How to Provision sFlow

### Enabling sFlow Globally

#### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid <i>1/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
<b>Step 3</b>	<b>sflow</b>  <b>Example:</b> Switch(config-controller)# sflow	Enters the sFlow mode.
<b>Step 4</b>	<b>sFlow_global {agent-ip {ipv4   ipv6}   collector-ip {ipv4   ipv6}   collector-port   datagram-maxsize   rx-timeout}</b>	Enters the sFlow global configuration mode.  • <b>agent-ip</b> —Specifies Agent IP address.



	Command or Action	Purpose
	<p><b>Example:</b></p> <pre>Switch(config-controller-SFlow)# setsFlowGlobalConfig sFlow_global agent-ip ipv4 7.25.16.63 Switch(config-controller-SFlow)# setsFlowGlobalConfig sFlow_global collector-ip ipv4 7.25.16.253 Switch(config-controller-SFlow)# setsFlowGlobalConfig sFlow_global collector-port 2033 Switch(config-controller-SFlow)# setsFlowGlobalConfig sFlow_global datagram-maxsize 512 Switch(config-controller-SFlow)#setsFlowGlobalConfig sFlow_global rx-timeout 50000</pre>	<ul style="list-style-type: none"> <li>◦ <b>ipv4</b>—Specifies IPv4 address.</li> <li>◦ <b>ipv6</b>—Specifies IPv6 address.</li> <li>• <b>collector-ip</b>—Specifies collector IP address. <ul style="list-style-type: none"> <li>◦ <b>ipv4</b>—Specifies IPv4 address.</li> <li>◦ <b>ipv6</b>—Specifies IPv6 address.</li> </ul> </li> <li>• <b>collector-port</b>—Specifies collector UDP port. The valid range is from 1 to 65535.</li> <li>• <b>datagram-maxsize</b>—Specifies maximum datagram size. The valid range is from 200 to 1468.</li> <li>• <b>rx-timeout</b>—Specifies the receive timeout in seconds. The valid range is from 0 to 2147483647. The switch decrements the timeout once every second, and samples are received as long as it is non-zero. Once it reaches zero, receiver and all its configurations are reset to defaults.</li> </ul>
<b>Step 5</b>	<p><b>setsFlowGlobalConfig review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-SFlow)# setsFlowGlobalConfig review</pre>	(Optional) Displays the configuration.
<b>Step 6</b>	<p><b>setsFlowGlobalConfig commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-SFlow)# setsFlowGlobalConfig commit</pre>	Sends the configuration to NID.
<b>Step 7</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-SFlow)# exit</pre>	Exits to the config-controller mode.

### Configuration Example

- The example shows how to enable sFlow globally:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# sflow
Switch(config-controller-SFlow)# setsFlowGlobalConfig sFlow_global agent-ip ipv4
7.25.16.63
Switch(config-controller-SFlow)# setsFlowGlobalConfig sFlow_global collector-ip ipv4
7.25.16.253
Switch(config-controller-SFlow)# setsFlowGlobalConfig sFlow_global collector-port 2033
Switch(config-controller-SFlow)# setsFlowGlobalConfig sFlow_global datagram-maxsize
512
```

```
Switch(config-controller-SFlow)# setsFlowGlobalConfig sFlow_global rx-timeout 50000
Switch(config-controller-SFlow)# setsFlowGlobalConfig review
```

Commands in queue:

```
setsFlowGlobalConfig sFlow_global agent-ip ipv4 7.25.16.63
setsFlowGlobalConfig sFlow_global collector-ip ipv4 7.25.16.253

setsFlowGlobalConfig sFlow_global collector-port 6343
setsFlowGlobalConfig sFlow_global datagram-maxsize 512
setsFlowGlobalConfig sFlow_global rx-timeout 50000
```

```
Switch(config-controller-SFlow)# setsFlowGlobalConfig commit
```

```
SetsFlowGlobalConfig Commit Success!!!
```

```
Switch(config-controller-SFlow)# exit
```

## Enabling sFlow on a Port

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid <i>1/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
<b>Step 3</b>	<b>sflow</b>  <b>Example:</b> Switch(config-controller)# sflow	Enters the sFlow mode.
<b>Step 4</b>	<b>sflow_port {interface-id   enable   flow-sampler {enable-defaults   sampling-rate   sampling-maxsize}   counter-poller {enable   interval}}</b>  <b>Example:</b> Switch(config-controller-SFlow)# setsFlowPortConfig sFlow_port interface-id 3 Switch(config-controller-SFlow)# setsFlowPortConfig sFlow_port enable enable Switch(config-controller-SFlow)# setsFlowPortConfig sFlow_port counter-poller enable enable Switch(config-controller-SFlow)# setsFlowPortConfig sFlow_port counter-poller interval 10 Switch(config-controller-SFlow)# setsFlowPortConfig sFlow_port flow-sampler enable-defaults enable	Enters the sFlow port specific configuration mode. <ul style="list-style-type: none"> <li>• <b>interface-id</b>—Specifies physical port.</li> <li>• <b>enable</b>—Enables or disables sFlow on this port.</li> <li>• <b>flow-sampler</b>—Specifies sFlow flow sampler configuration. <ul style="list-style-type: none"> <li>◦ <b>enable-defaults</b>—Enables the flow sampler default values. <p><b>Note</b> To configure <b>sampling-rate</b> and <b>sampling-maxsize</b> as per your requirement, you must set this option to disable.</p> </li> <li>◦ <b>sampling-rate</b>—Specifies the statistical sampling rate. The valid range is from 1 to 4294967295.</li> </ul> </li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>◦ <b>sampling-maxsize</b>—Specifies maximum number of bytes to transmit per flow sample. The valid range is from 14 to 200.</li> <li>• <b>counter-poller</b>—Specifies Interface counter poller configuration. <ul style="list-style-type: none"> <li>◦ <b>enable</b>—Enables counter poller.</li> <li>◦ <b>interval</b>—Specifies counter poll interval. The valid range is from 1 to 3600 seconds.</li> </ul> </li> </ul>
<b>Step 5</b>	<b>setsFlowPortConfig review</b>  <b>Example:</b> Switch(config-controller-SFlow)# setsFlowPortConfig review	(Optional) Displays the configuration.
<b>Step 6</b>	<b>setsFlowPortConfig commit</b>  <b>Example:</b> Switch(config-controller-SFlow)# setsFlowPortConfig commit	Sends the configuration to NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-SFlow)# exit	Exits to the config-controller mode.

### Configuration Example



#### Note

sFlow configuration does not persist on the NID. Running **show running-config.xml** command does not display the sFlow configuration globally or per-port. This is working as designed.

- The example shows how to enable sFlow on a port with default values enabled:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# sflow
Switch(config-controller-SFlow)# setsFlowPortConfig sFlow_port interface-id 3
Switch(config-controller-SFlow)# setsFlowPortConfig sFlow_port enable enable
Switch(config-controller-SFlow)# setsFlowPortConfig sFlow_port flow-sampler
enable-defaults enable
Switch(config-controller-SFlow)# setsFlowPortConfig review
```

Commands in queue:

```
setsFlowPortConfig sFlow_port interface-id 3
setsFlowPortConfig sFlow_port enable enable
```

```
setsFlowPortConfig sFlow_port flow-sampler enable-defaults
enable
```

```
Switch(config-controller-SFlow)# setsFlowPortConfig commit
```

```
SetsFlowPortConfig Commit Success!!!
```

```
Switch(config-controller-SFlow)# exit
```

- The example shows how to enable sFlow on a port without any default values set:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# sflow
Switch(config-controller-SFlow)# setsFlowPortConfig sFlow_port interface-id 1
Switch(config-controller-SFlow)# setsFlowPortConfig sFlow_port enable enable
Switch(config-controller-SFlow)# setsFlowPortConfig sFlow_port flow-sampler
enable-defaults disable
Switch(config-controller-SFlow)# setsFlowPortConfig review
```

```
Commands in queue:
```

```
setsFlowPortConfig sFlow_port interface-id 1
setsFlowPortConfig sFlow_port enable enable
setsFlowPortConfig sFlow_port flow-sampler enable-defaults
disable
```

```
Switch(config-controller-SFlow)# setsFlowPortConfig commit
```

```
SetsFlowPortConfig Commit Success!!!
```

```
Switch(config-controller-SFlow)# exit
```

- The example shows how enable sFlow on a port with user-configured parameters:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# sflow
Switch(config-controller-SFlow)# setsFlowPortConfig sFlow_port interface-id 1
Switch(config-controller-SFlow)# setsFlowPortConfig sFlow_port enable enable
Switch(config-controller-SFlow)# setsFlowPortConfig sFlow_port flow-sampler
enable-defaults disable
Switch(config-controller-SFlow)# setsFlowPortConfig sFlow_port flow-sampler
sampling-maxsize 512
Switch(config-controller-SFlow)# setsFlowPortConfig sFlow_port flow-sampler sampling-rate
200
Switch(config-controller-SFlow)# setsFlowPortConfig sFlow_port counter-poller enable
enable
Switch(config-controller-SFlow)# setsFlowPortConfig sFlow_port counter-poller interval
30
Switch(config-controller-SFlow)# setsFlowPortConfig review
```

```
Commands in queue:
```

```
setsFlowPortConfig sFlow_port interface-id 1
setsFlowPortConfig sFlow_port enable enable
setsFlowPortConfig sFlow_port flow-sampler enable-defaults
disable
setsFlowPortConfig sFlow_port flow-sampler sampling-maxsize
512
setsFlowPortConfig sFlow_port flow-sampler sampling-rate 200
setsFlowPortConfig sFlow_port counter-poller enable enable
setsFlowPortConfig sFlow_port counter-poller interval 30
```

```
Switch(config-controller-SFlow)# setsFlowPortConfig commit
```

```
SetsFlowPortConfig Commit Success!!!
```

```
Switch(config-controller-sFlow)# exit
```

## Getting Current Global sFlow Values

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
Step 3	<b>sflow</b>  <b>Example:</b> Switch(config-controller)# sflow	Enters the sFlow mode.
Step 4	<b>sFlow_global_req</b>  <b>Example:</b> Switch(config-controller-sFlow)# getsFlowGlobalConfig sFlow_global_req	Enters the sFlow global configuration mode.
Step 5	<b>getsFlowGlobalConfig review</b>  <b>Example:</b> Switch(config-controller-sFlow)# getsFlowGlobalConfig review	(Optional) Displays the configuration.
Step 6	<b>getsFlowGlobalConfig commit</b>  <b>Example:</b> Switch(config-controller-sFlow)# getsFlowGlobalConfig commit	Sends the configuration to NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-sFlow)# exit	Exits to the config-controller mode.

### Configuration Example

- The example shows how to get current global sFlow values:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# sflow
```

```
Switch(config-controller-sFlow)# getFlowGlobalConfig sFlow_global_req
Switch(config-controller-sFlow)# getFlowGlobalConfig review
```

Commands in queue:

```
getFlowGlobalConfig sFlow_global_req
```

```
Switch(config-controller-sFlow)# getFlowGlobalConfig commit
```

```
GetFlowGlobalConfig_Output.sFlow_global.agent_ip.t = 1
GetFlowGlobalConfig_Output.sFlow_global.agent_ip.u.ipv4 = '0.0.0.0'
GetFlowGlobalConfig_Output.sFlow_global.collector_ip.t = 1
GetFlowGlobalConfig_Output.sFlow_global.collector_ip.u.ipv4 =
'0.0.0.0'
GetFlowGlobalConfig_Output.sFlow_global.collector_port = 65535
GetFlowGlobalConfig_Output.sFlow_global.datagram-maxsize = 1468
GetFlowGlobalConfig_Output.sFlow_global.rx-timeout = 50000
```

```
GetFlowGlobalConfig Commit Success!!!
```

```
Switch(config-controller-sFlow)# exit
```

The following is a sample output on the NID.

```
Decoding of Request message was successful urn:#getFlowConfig
```

```
Decoded record:
```

```
GetFlowGlobalConfig_Input.sFlow_global_req = '0'
```

```
Encoding of Response message was successful
```

```
Encoded record:
```

```
GetFlowGlobalConfig_Output.sFlow_global.agent_ip.t = 1
GetFlowGlobalConfig_Output.sFlow_global.agent_ip.u.ipv4 = '0.0.0.0'
GetFlowGlobalConfig_Output.sFlow_global.collector_ip.t = 1
GetFlowGlobalConfig_Output.sFlow_global.collector_ip.u.ipv4 =
'0.0.0.0'
GetFlowGlobalConfig_Output.sFlow_global.collector_port = 65535
GetFlowGlobalConfig_Output.sFlow_global.datagram-maxsize = 1468
GetFlowGlobalConfig_Output.sFlow_global.rx-timeout = 50000
GetFlowGlobalConfig_Output.xmlns:ns0 =
"http://new.webservice.namespace"
GetFlowGlobalConfig_Output.xmlns:http =
"http://schemas.xmlsoap.org/wsdl/http/"
GetFlowGlobalConfig_Output.xmlns:mime =
"http://schemas.xmlsoap.org/wsdl/mime/"
GetFlowGlobalConfig_Output.xmlns:soap =
"http://schemas.xmlsoap.org/wsdl/soap/"
GetFlowGlobalConfig_Output.xmlns:soapenc =
"http://schemas.xmlsoap.org/soap/encoding/"
GetFlowGlobalConfig_Output.xmlns:wsdl =
"http://schemas.xmlsoap.org/wsdl/"
```

## Getting Current Port Specific sFlow Values

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid /NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
Step 3	<b>sflow</b>  <b>Example:</b> Switch(config-controller)# sflow	Enters the sFlow mode.
Step 4	<b>sflowPortConfigReq port id</b>  <b>Example:</b> Switch(config-controller-SFlow)# getFlowPortConfig sflowPortConfigReq 2	Enters the sFlow port-specific configuration mode.
Step 5	<b>getFlowGlobalConfig review</b>  <b>Example:</b> Switch(config-controller-SFlow)# getFlowGlobalConfig review	(Optional) Displays the configuration.
Step 6	<b>getFlowGlobalConfig commit</b>  <b>Example:</b> Switch(config-controller-SFlow)# getFlowGlobalConfig commit	Sends the configuration to NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-SFlow)# exit	Exits to the config-controller mode.

### Configuration Example

- The example shows how to get current port-specific sFlow values:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# sflow
Switch(config-controller-SFlow)# getFlowPortConfig sflowPortConfigReq 2
Switch(config-controller-SFlow)# getFlowGlobalConfig review
```

Commands in queue:

```
getFlowPortConfig sFlowPortConfigReq 2
```

```
Switch(config-controller-SFlow)# getFlowGlobalConfig commit
```

```
GetFlowPortConfig_Output.sFlow_port.interface_id = 2
GetFlowPortConfig_Output.sFlow_port.enable = false
GetFlowPortConfig_Output.sFlow_port.flow_sampler.enable_defaults =
true
GetFlowPortConfig_Output.sFlow_port.flow_sampler.sampling_rate = 4096
GetFlowPortConfig_Output.sFlow_port.flow_sampler.sampling-maxsize =
128
GetFlowPortConfig_Output.sFlow_port.counter_poller.enable = false
GetFlowPortConfig_Output.sFlow_port.counter_poller.interval = 60
```

```
GetFlowPortConfig Commit Success!!!
```

```
Switch(config-controller-SFlow)# exit
```

The following is a sample output on the NID.

```
GetFlowPortConfig_Input.sFlowPortConfigReq = 2
Encoding of Response message was successful
Encoded record:
GetFlowPortConfig_Output.sFlow_port.interface_id = 2
GetFlowPortConfig_Output.sFlow_port.enable = false
GetFlowPortConfig_Output.sFlow_port.flow_sampler.enable_defaults =
true
GetFlowPortConfig_Output.sFlow_port.flow_sampler.sampling_rate = 4096
GetFlowPortConfig_Output.sFlow_port.flow_sampler.sampling-maxsize =
128
GetFlowPortConfig_Output.sFlow_port.counter_poller.enable = false
GetFlowPortConfig_Output.sFlow_port.counter_poller.interval = 60
GetFlowPortConfig_Output.xmlns:ns0 = "http://new.webservice.namespace"
GetFlowPortConfig_Output.xmlns:http =
"http://schemas.xmlsoap.org/wsdl/http/"
GetFlowPortConfig_Output.xmlns:mime =
"http://schemas.xmlsoap.org/wsdl/mime/"
GetFlowPortConfig_Output.xmlns:soap =
"http://schemas.xmlsoap.org/wsdl/soap/"
GetFlowPortConfig_Output.xmlns:soapenc =
"http://schemas.xmlsoap.org/soap/encoding/"
GetFlowPortConfig_Output.xmlns:wsdl =
"http://schemas.xmlsoap.org/wsdl/"
```



## Clearing sFlow Statistics

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
<b>Step 3</b>	<b>sflow</b>  <b>Example:</b> Switch(config-controller)# sflow	Enters the sFlow mode.
<b>Step 4</b>	<b>clear_sflow_stats</b>  <b>Example:</b> Switch(config-controller-sFlow)# clearsFlowStatistics clear_sflow_stats	Clears sFlow statistics.
<b>Step 5</b>	<b>clearsFlowStatistics review</b>  <b>Example:</b> Switch(config-controller-sFlow)# clearsFlowStatistics review	(Optional) Displays the configuration.
<b>Step 6</b>	<b>clearsFlowStatistics commit</b>  <b>Example:</b> Switch(config-controller-sFlow)# clearsFlowStatistics commit	Sends the configuration to NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-sFlow)# exit	Exits to the config-controller mode.

### Configuration Example

- The example shows how to clear sFlow statistics:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# sflow
Switch(config-controller-sFlow)# clearsFlowStatistics clear_sflow_stats
Switch(config-controller-sFlow)# clearsFlowStatistics review
```

```
Commands in queue:
      clearsFlowStatistics clear_sflow_stats
```

```
Switch(config-controller-SFlow)# clearsFlowStatistics commit
```

```
ClearsFlowStatistics Commit Success!!!
```

```
Switch(config-controller-SFlow)# exit
```

## Verifying sFlow

Use the following commands to verify the sFlow status on the controller.

- **showsFlowStatistics sFlow\_stats\_req**

This command displays the sFlow statistics on the NID. The following is a sample output from the command:

```
Switch(config-controller-SFlow)# showsFlowStatistics sFlow_stats_req
Switch(config-controller-SFlow)# showsFlowStatistics review
```

```
Commands in queue:
      showsFlowStatistics sFlow_stats_req
```

```
Switch(config-controller-SFlow)# showsFlowStatistics commit
```

```
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[0].interface_id
= 1
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[0].tx_flow_samples
= 0
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[0].counter_samples
= 42
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[1].interface_id
= 2
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[1].tx_flow_samples
= 0
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[1].counter_samples
= 0
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[2].interface_id
= 3
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[2].tx_flow_samples
= 1
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[2].counter_samples
= 0
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[3].interface_id
= 4
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[3].tx_flow_samples
= 0
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[3].counter_samples
= 0
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[4].interface_id
= 5
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[4].tx_flow_samples
= 0
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[4].counter_samples
= 0
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[5].interface_id
```

```
= 6
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[5].tx_flow_samples
= 0
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[5].counter_samples
= 0
ShowsFlowStatistics_Output.sFlow_stats.receiver.statistics[0].tx_successes
= 0
ShowsFlowStatistics_Output.sFlow_stats.receiver.statistics[0].tx_errors
= 43
ShowsFlowStatistics_Output.sFlow_stats.receiver.statistics[0].flow_samples
= 1
ShowsFlowStatistics_Output.sFlow_stats.receiver.statistics[0].counter_samples
= 42

ShowsFlowStatistics Commit Success!!!
```

The following is a sample output on the NID.

```
Decoding of Request message was successful urn:#showsFlowStatistics
Decoded record:
ShowsFlowStatistics_Input.sFlow_stats_req = '0'
Encoding of Response message was successful
Encoded record:
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[0].interface_id
= 1
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[0].tx_flow_samples
= 0
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[0].counter_samples
= 42
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[1].interface_id
= 2
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[1].tx_flow_samples
= 0
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[1].counter_samples
= 0
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[2].interface_id
= 3
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[2].tx_flow_samples
= 1
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[2].counter_samples
= 0
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[3].interface_id
= 4
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[3].tx_flow_samples
= 0
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[3].counter_samples
= 0
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[4].interface_id
= 5
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[4].tx_flow_samples
= 0
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[4].counter_samples
= 0
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[5].interface_id
= 6
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[5].tx_flow_samples
= 0
ShowsFlowStatistics_Output.sFlow_stats.samplers.interface_[5].counter_samples
```

```

= 0
ShowsFlowStatistics_Output.sFlow_stats.receiver.statistics[0].tx_successes
= 0
ShowsFlowStatistics_Output.sFlow_stats.receiver.statistics[0].tx_errors
= 43
ShowsFlowStatistics_Output.sFlow_stats.receiver.statistics[0].flow_samples
= 1
ShowsFlowStatistics_Output.sFlow_stats.receiver.statistics[0].counter_samples
= 42
ShowsFlowStatistics_Output.xmlns:ns0 =
"http://new.webservice.namespace"
ShowsFlowStatistics_Output.xmlns:http =
"http://schemas.xmlsoap.org/wsdl/http/"
ShowsFlowStatistics_Output.xmlns:mime =
"http://schemas.xmlsoap.org/wsdl/mime/"
ShowsFlowStatistics_Output.xmlns:soap =
"http://schemas.xmlsoap.org/wsdl/soap/"
ShowsFlowStatistics_Output.xmlns:soapenc =
"http://schemas.xmlsoap.org/soap/encoding/"
ShowsFlowStatistics_Output.xmlns:wsdl =
"http://schemas.xmlsoap.org/wsdl/"

```

## Additional References

### Related Documents

Related Topic	Document Title
Cisco ME 3800x and ME 3600x Switches Software Configuration Guide, Cisco IOS Release 15.4(1)S	<a href="http://www.cisco.com/c/en/us/td/docs/switches/metro/me3600x_3800x/software/release/15-4_1_S/configuration/guide/3800x3600xscg.html">http://www.cisco.com/c/en/us/td/docs/switches/metro/me3600x_3800x/software/release/15-4_1_S/configuration/guide/3800x3600xscg.html</a>

### MIBs

MIB	MIBs Link
MIBs Supporting Cisco IOS	To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL: <a href="http://www.cisco.com/go/mibs">http://www.cisco.com/go/mibs</a>

**Technical Assistance**

Description	Link
<p>The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.</p> <p>To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.</p> <p>Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.</p>	<p><a href="http://www.cisco.com/support">http://www.cisco.com/support</a></p>





## CHAPTER 29

# Configuring UDLD

---

This document describes the Unidirectional Link Detection (UDLD) feature and configuration steps to implement UDLD.

- [Prerequisites for Configuring UDLD, page 599](#)
- [Restrictions for Configuring UDLD, page 599](#)
- [Information About UDLD, page 599](#)
- [How to Provision UDLD, page 600](#)
- [Verifying UDLD, page 611](#)
- [Additional References, page 613](#)

## Prerequisites for Configuring UDLD

- To identify and disable the unidirectional links, devices at both ends must support UDLD.
- UDLD Hello packet timers must be same for both the devices.

## Restrictions for Configuring UDLD

- Access Control Lists (ACLs) cannot be used to block the UDLD traffic.
- UDLD on ME 1200 NID cannot interoperate with other devices. UDLD can be enabled only between ME 1200 NIDs.

## Information About UDLD

UDLD is a Layer 2 protocol that enables devices connected through Ethernet cables to monitor the physical configuration and detect presence of a unidirectional link. A unidirectional link occurs when traffic sent by a local device is received by its neighbor but traffic coming from the neighboring device is not received by the

local device. When a unidirectional link is detected, the affected port is disabled and user is alerted. This can help prevent spanning tree topology loops.

UDLD supports two operation modes:

- **Normal**—In this mode, UDLD detects a unidirectional link due to misconnected fibers on a fiber-optic link that is not detected by Layer 1 mechanisms.



**Note** If port connections are correct and traffic is one way, UDLD does not detect the unidirectional link. In this case, no action is taken and link is considered undetermined.

- **Aggressive**—In this mode, unidirectional link due to one-way traffic on fiber-optic and twisted pair links, and misconnected ports on fiber-optic links can be detected. Specifically, if one end of the link cannot send or receive traffic, or one of the ports is down and the other is up, the unidirectional link can be detected. Using the loss of hello packets as indication to detect bi-directional link that cannot be re-established, UDLD disables the affected port.

In addition, UDLD can detect the identities of neighbors by caching the information contained in UDLD hello packet.

By default, UDLD is disabled on ME 1200 NID. The normal or aggressive mode can be

- enabled globally on all ports or
- enabled or modified on the individual ports

## How to Provision UDLD

### Enabling UDLD Mode Globally

#### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>UDLDPortType</b>  <b>Example:</b> Switch(config-controller)# UDLDPortType	Enters the UDLD mode.



	Command or Action	Purpose
<b>Step 4</b>	<b>udldGlobalConfig {mode {normal   aggressive}   message-interval}</b>  <b>Example:</b> <pre>Switch(config-controller-UDLDPortType)# setGlobalUDLDConfig udldGlobalConfig mode normal enable Switch(config-controller-UDLDPortType)# setGlobalUDLDConfig udldGlobalConfig message-interval 10</pre>	Enters UDLD global configuration mode.  Sub-command options: <ul style="list-style-type: none"> <li>• <b>mode</b>—Specifies UDLD configuration mode. <ul style="list-style-type: none"> <li>◦ <b>normal</b>—Enables UDLD in normal mode on all fiber-optic ports.</li> <li>◦ <b>aggressive</b>—Enables UDLD in aggressive mode on all fiber-optic ports.</li> </ul> </li> <li>• <b>message-interval</b>—Specifies time interval between UDLD probe messages on ports (7-90 seconds).</li> </ul>
<b>Step 5</b>	<b>setGlobalUDLDConfig review</b>  <b>Example:</b> <pre>Switch(config-controller-UDLDPortType)# setGlobalUDLDConfig review</pre>	(Optional) Displays the configuration.
<b>Step 6</b>	<b>setGlobalUDLDConfig commit</b>  <b>Example:</b> <pre>Switch(config-controller-UDLDPortType)# setGlobalUDLDConfig commit</pre>	Sends the configuration to NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> <pre>Switch(config-controller-UDLDPortType)# exit</pre>	Exits to the config-controller mode.

### Configuration Example

- The example shows how to enable UDLD globally in normal mode:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# UDLDPortType
Switch(config-controller-UDLDPortType)# setGlobalUDLDConfig udldGlobalConfig mode normal
enable
Switch(config-controller-UDLDPortType)# setGlobalUDLDConfig udldGlobalConfig
message-interval 10
Switch(config-controller-UDLDPortType)# setGlobalUDLDConfig review
```

Commands in queue:

```
setGlobalUDLDConfig udldGlobalConfig mode normal enable
setGlobalUDLDConfig udldGlobalConfig message-interval 10
```

```
Switch(config-controller-UDLDPortType)# setGlobalUDLDConfig commit
```

```
SetGlobalUDLDConfig Commit Success!!!
```

```
Switch(config-controller-UDLDPortType)# exit
```

This enables UDLD on all ports of ME 1200 NID with a time interval of 10 seconds.

## Disabling UDLD Mode Globally

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid <i>1/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
<b>Step 3</b>	<b>UDLDPortType</b>  <b>Example:</b> Switch(config-controller)# UDLDPortType	Enters the UDLD mode.
<b>Step 4</b>	<b>udldGlobalConfig {mode {normal   aggressive}   message-interval}</b>  <b>Example:</b> Switch((config-controller) UDLDPortType)# setGlobalUDLDConfig udldGlobalConfig mode normal disable	Enters UDLD global configuration mode. Sub-command options: <ul style="list-style-type: none"><li>• <b>mode</b>—Specifies UDLD configuration mode.<ul style="list-style-type: none"><li>◦ <b>normal</b>—Enables UDLD in normal mode on all fiber-optic ports.</li><li>◦ <b>aggressive</b>—Enables UDLD in aggressive mode on all fiber-optic ports.</li></ul></li><li>• <b>message-interval</b>—Specifies time interval between UDLD probe messages on ports. The valid range is from 7 to 90 seconds.</li></ul>
<b>Step 5</b>	<b>setGlobalUDLDConfig review</b>  <b>Example:</b> Switch((config-controller) UDLDPortType)# setGlobalUDLDConfig review	(Optional) Displays the configuration.
<b>Step 6</b>	<b>setGlobalUDLDConfig commit</b>  <b>Example:</b> Switch(config-controller) UDLDPortType)# setGlobalUDLDConfig commit	Sends the configuration to NID.

	Command or Action	Purpose
Step 7	<b>exit</b>  <b>Example:</b> Switch((config-controller)UDLDPortType)# exit	Exits to the config-controller mode.

### Configuration Example

- The example shows how to disable UDLD globally in normal mode:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# UDLDPortType
Switch(config-controller-UDLDPortType)# setGlobalUDLDConfig udldGlobalConfig mode normal
disable
Switch(config-controller-UDLDPortType)# setGlobalUDLDConfig review
```

Commands in queue:

```
setGlobalUDLDConfig udldGlobalConfig mode normal disable
```

```
Switch((config-controller)UDLDPortType)# setGlobalUDLDConfig commit
```

```
SetGlobalUDLDConfig Commit Success!!!
```

```
Switch((config-controller)UDLDPortType)# exit
```

This disables UDLD on all ports of ME 1200 NID.

## Enabling UDLD Mode on a Port

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
Step 3	<b>UDLDPortType</b>  <b>Example:</b> Switch(config-controller)# UDLDPortType	Enters the UDLD mode.
Step 4	<b>udldInterfaceConfig {mode {enable   aggressive}   message-interval seconds   port port number}</b>	Enters UDLD global configuration mode. Sub-command options:

	Command or Action	Purpose
	<p><b>Example:</b></p> <pre>Switch(config-controller-UDLDPortType)# setIntfUDLDConfig udldInterfaceConfig mode aggressive enable Switch(config-controller-UDLDPortType)# setIntfUDLDConfig udldInterfaceConfig message-interval 20 Switch(config-controller-UDLDPortType)# setIntfUDLDConfig udldInterfaceConfig port 3</pre>	<ul style="list-style-type: none"> <li>• <b>mode</b>—Specifies UDLD configuration mode. <ul style="list-style-type: none"> <li>◦ <b>enable</b>—Enables UDLD in normal mode on selected interface.</li> <li>◦ <b>aggressive</b>—Enables UDLD in aggressive mode on selected interface.</li> </ul> </li> <li>• <b>message-interval</b>—Specifies time interval between UDLD probe messages on ports. <ul style="list-style-type: none"> <li>◦ <i>seconds</i>—Time interval in seconds. Valid range is from 7 to 90 seconds.</li> </ul> </li> <li>• <b>port</b>—Specifies targeted interface. <ul style="list-style-type: none"> <li>◦ <i>port number</i>—Specifies number of the selected port.</li> </ul> </li> </ul>
<b>Step 5</b>	<p><b>setIntfUDLDConfig review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-UDLDPortType)# setIntfUDLDConfig review</pre>	(Optional) Displays the configuration.
<b>Step 6</b>	<p><b>setIntfUDLDConfig commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-UDLDPortType)# setIntfUDLDConfig commit</pre>	Sends the configuration to NID.
<b>Step 7</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-UDLDPortType)# exit</pre>	Exits to the config-controller mode.

### Configuration Example

- The example shows how to enable UDLD on a specific port in an aggressive mode:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# UDLDPortType
Switch(config-controller-UDLDPortType)# setIntfUDLDConfig udldInterfaceConfig mode
aggressive enable
Switch(config-controller-UDLDPortType)# setIntfUDLDConfig udldInterfaceConfig
message-interval 20
Switch(config-controller-UDLDPortType)# setIntfUDLDConfig udldInterfaceConfig port 3
Switch(config-controller-UDLDPortType)# setIntfUDLDConfig review
```

Commands in queue:

```
Switch(config-controller-UDLDPortType)# setIntfUDLDConfig
udldInterfaceConfig mode aggressive enable
```

```
Switch(config-controller-UDLDPortType) # setIntfUDLDConfig
udldInterfaceConfig message-interval 20
Switch(config-controller-UDLDPortType) # setIntfUDLDConfig
udldInterfaceConfig port 3
```

```
Switch(config-controller-UDLDPortType) # setIntfUDLDConfig commit
```

```
SetIntfUDLDConfig Commit Success!!!
```

```
Switch(config-controller-UDLDPortType) # exit
```

This enables UDLD in aggressive mode only on port 3 of ME 1200 NID with a time interval of 20 seconds.

## Disabling UDLD Mode on a Port

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
Step 3	<b>UDLDPortType</b>  <b>Example:</b> Switch(config-controller)# UDLDPortType	Enters the UDLD mode.
Step 4	<b>udldInterfaceConfig {mode {enable   aggressive}   message-interval seconds   port port number}</b>  <b>Example:</b> Switch(config-controller-UDLDPortType)# setIntfUDLDConfig udldInterfaceConfig port 3 Switch(config-controller-UDLDPortType)# setIntfUDLDConfig udldInterfaceConfig mode aggressive disable	Enters UDLD port specific configuration mode. Sub-command options: <ul style="list-style-type: none"> <li>• <b>mode</b>—Specifies UDLD configuration mode. <ul style="list-style-type: none"> <li>◦ <b>enable</b>—Enables UDLD in normal mode on selected interface.</li> <li>◦ <b>aggressive</b>—Enables UDLD in aggressive mode on selected interface.</li> </ul> </li> <li>• <b>message-interval</b>—Specifies time interval between UDLD probe messages on ports. <ul style="list-style-type: none"> <li>◦ <i>seconds</i>—Time interval in seconds. Valid range is from 7 to 90 seconds.</li> </ul> </li> <li>• <b>port</b>—Specifies targeted interface.</li> </ul>

	Command or Action	Purpose
		° <i>port number</i> —Specifies number of the selected port.
<b>Step 5</b>	<b>setIntfUDLDConfig review</b>  <b>Example:</b> Switch(config-controller-UDLDPortType) # setIntfUDLDConfig review	(Optional) Displays the configuration.
<b>Step 6</b>	<b>setIntfUDLDConfig commit</b>  <b>Example:</b> Switch(config-controller-UDLDPortType) # setIntfUDLDConfig commit	Sends the configuration to NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-UDLDPortType) # exit	Exits to the config-controller mode.

### Configuration Example

- The example shows how to disable UDLD on a specific port in an aggressive mode:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# UDLDPortType
Switch(config-controller-UDLDPortType)# setIntfUDLDConfig udldInterfaceConfig port 3
Switch(config-controller-UDLDPortType)# setIntfUDLDConfig udldInterfaceConfig mode
aggressive disable
Switch(config-controller-UDLDPortType)# setIntfUDLDConfig review
```

```
Commands in queue:
    setIntfUDLDConfig udldInterfaceConfig port 3
    setIntfUDLDConfig udldInterfaceConfig mode aggressive disable
```

```
Switch(config-controller-UDLDPortType)# setIntfUDLDConfig commit
```

```
SetIntfUDLDConfig Commit Success!!!
```

```
Switch(config-controller-UDLDPortType)# exit
```

This disables UDLD in an aggressive mode on port 3 of ME 1200 NID.

## Getting Current Global UDLD Values

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.
<b>Step 3</b>	<b>UDLDPortType</b>  <b>Example:</b> Switch(config-controller)# UDLDPortType	Enters the UDLD mode.
<b>Step 4</b>	<b>getGlobalUDLDConfReq</b>  <b>Example:</b> Switch(config-controller-UDLDPortType)# getGlobalUDLDConfig getGlobalUDLDConfReq	Enters UDLD global configuration mode.
<b>Step 5</b>	<b>getGlobalUDLDConfig review</b>  <b>Example:</b> Switch(config-controller-UDLDPortType)# getGlobalUDLDConfig review	(Optional) Displays the configuration.
<b>Step 6</b>	<b>getGlobalUDLDConfig commit</b>  <b>Example:</b> Switch(config-controller-UDLDPortType)# getGlobalUDLDConfig commit	Sends the configuration to NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-UDLDPortType)# exit	Exits to the config-controller mode.

### Configuration Example

- The example shows how to get current global UDLD values:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# UDLDPortType
Switch(config-controller-UDLDPortType)# getGlobalUDLDConfig getGlobalUDLDConfReq
Switch(config-controller-UDLDPortType)# getGlobalUDLDConfig review
```

```
Commands in queue:
  getGlobalUDLDConfig getGlobalUDLDConfReq
```

```
Switch(config-controller-UDLDPortType)# getGlobalUDLDConfig commit
```

```
GetGlobalUDLDConfig_Output.udldGlobalConfig.mode.t = 1
GetGlobalUDLDConfig_Output.udldGlobalConfig.mode.u.normal = false
GetGlobalUDLDConfig_Output.udldGlobalConfig.message_interval = 7
```

```
GetGlobalUDLDConfig Commit Success!!!
```

```
Switch(config-controller-UDLDPortType)# exit
```

The following is a sample output on the NID.

```
Decoding of Request message was successful
```

```
Decoded record:
```

```
GetGlobalUDLDConfig_Input.getGlobalUDLDConfReq = '0'
```

```
Set UDLD global to defaultsEncoding of Response message was successful
```

```
Encoded record:
```

```
GetGlobalUDLDConfig_Output.udldGlobalConfig.mode.t = 1
GetGlobalUDLDConfig_Output.udldGlobalConfig.mode.u.normal = false
GetGlobalUDLDConfig_Output.udldGlobalConfig.message_interval = 7
```

```
GetGlobalUDLDConfig_Output.xmlns:ns0 =
```

```
"http://new.webservice.namespace"
```

```
GetGlobalUDLDConfig_Output.xmlns:http =
```

```
"http://schemas.xmlsoap.org/wsd/http/"
```

```
GetGlobalUDLDConfig_Output.xmlns:mime =
```

```
"http://schemas.xmlsoap.org/wsd/mime/"
```

```
GetGlobalUDLDConfig_Output.xmlns:soap =
```

```
"http://schemas.xmlsoap.org/wsd/soap/"
```

```
GetGlobalUDLDConfig_Output.xmlns:soapenc =
```

```
"http://schemas.xmlsoap.org/soap/encoding/"
```

```
GetGlobalUDLDConfig_Output.xmlns:wsdl =
```

```
"http://schemas.xmlsoap.org/wsd/"
```

## Getting Current Port Specific UDLD Values

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/2	Enters the controller configuration mode.



	Command or Action	Purpose
Step 3	<b>UDLDPortType</b>  <b>Example:</b> Switch(config-controller)# UDLDPortType	Enters the UDLD mode.
Step 4	<b>etGlobalUDLDConfReq</b>  <b>Example:</b> Switch(config-controller-UDLDPortType)# getIntfUDLDConfig udldPhyPort 3	Enters UDLD port specific configuration mode.
Step 5	<b>setGlobalUDLDConfig review</b>  <b>Example:</b> Switch(config-controller-UDLDPortType)# getIntfUDLDConfig review	(Optional) Displays the configuration.
Step 6	<b>setGlobalUDLDConfig commit</b>  <b>Example:</b> Switch(config-controller-UDLDPortType)# getIntfUDLDConfig commit	Sends the configuration to NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-UDLDPortType)# exit	Exits to the config-controller mode.

### Configuration Example

- The example shows how to get current port specific UDLD values when UDLD is disabled:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# UDLDPortType
Switch(config-controller-UDLDPortType)# getIntfUDLDConfig udldPhyPort 3
Switch(config-controller-UDLDPortType)# getIntfUDLDConfig review
```

```
Commands in queue:
  getIntfUDLDConfig udldPhyPort 3
```

```
Switch(config-controller-UDLDPortType)# getIntfUDLDConfig commit
```

```
GetIntfUDLDConfig_Output.udldInterfaceConfig.mode.t = 1
GetIntfUDLDConfig_Output.udldInterfaceConfig.mode.u.enable = false
GetIntfUDLDConfig_Output.udldInterfaceConfig.message_interval = 7
GetIntfUDLDConfig_Output.udldInterfaceConfig.port = 3
```

```
GetIntfUDLDConfig Commit Success!!!
```

```
Switch(config-controller-UDLDPortType)# exit
```

The following is a sample output on the NID.

```
# Decoding of Request message was successful
Decoded record:
GetIntfUDLDConfig-Input.udldPhyPort = 3
Set UDLD intf to defaultsEncoding of Response message was successful
Encoded record:
GetIntfUDLDConfig_Output.udldInterfaceConfig.mode.t = 1
GetIntfUDLDConfig_Output.udldInterfaceConfig.mode.u.enable = false
GetIntfUDLDConfig_Output.udldInterfaceConfig.message_interval = 7
GetIntfUDLDConfig_Output.udldInterfaceConfig.port = 3
GetIntfUDLDConfig_Output.xmlns:ns0 = "http://new.webservice.namespace"
GetIntfUDLDConfig_Output.xmlns:http =
"http://schemas.xmlsoap.org/wsdl/http/"
GetIntfUDLDConfig_Output.xmlns:mime =
"http://schemas.xmlsoap.org/wsdl/mime/"
GetIntfUDLDConfig_Output.xmlns:soap =
"http://schemas.xmlsoap.org/wsdl/soap/"
GetIntfUDLDConfig_Output.xmlns:soapenc =
"http://schemas.xmlsoap.org/soap/encoding/"
GetIntfUDLDConfig_Output.xmlns:wSDL =
"http://schemas.xmlsoap.org/wsdl/"
```

- The example shows how to get current port specific UDLD values when UDLD is enabled:

```
Switch(config)# controller nid 1/1
Switch(config-controller)# UDLDPortType
Switch(config-controller-UDLDPortType)# getIntfUDLDConfig udldPhyPort 3
Switch(config-controller-UDLDPortType)# getIntfUDLDConfig review
```

```
Commands in queue:
  getIntfUDLDConfig udldPhyPort 3
```

```
Switch(config-controller-UDLDPortType)# getIntfUDLDConfig commit
```

```
GetIntfUDLDConfig_Output.udldInterfaceConfig.mode.t = 1
GetIntfUDLDConfig_Output.udldInterfaceConfig.mode.u.enable = true
GetIntfUDLDConfig_Output.udldInterfaceConfig.message_interval = 7
GetIntfUDLDConfig_Output.udldInterfaceConfig.port = 3
```

```
GetIntfUDLDConfig Commit Success!!!
```

```
Switch(config-controller-UDLDPortType)# exit
```

The following is a sample output on the NID.

```
# Decoding of Request message was successful
Decoded record:
GetIntfUDLDConfig-Input.udldPhyPort = 3

Set UDLD intf to defaultsEncoding of Response message was successful
Encoded record:
GetIntfUDLDConfig_Output.udldInterfaceConfig.mode.t = 1
GetIntfUDLDConfig_Output.udldInterfaceConfig.mode.u.enable = true
GetIntfUDLDConfig_Output.udldInterfaceConfig.message_interval = 7
GetIntfUDLDConfig_Output.udldInterfaceConfig.port = 3
GetIntfUDLDConfig_Output.xmlns:ns0 = "http://new.webservice.namespace"
GetIntfUDLDConfig_Output.xmlns:http =
"http://schemas.xmlsoap.org/wsdl/http/"
GetIntfUDLDConfig_Output.xmlns:mime =
"http://schemas.xmlsoap.org/wsdl/mime/"
```

```
GetIntfUDLDConfig_Output.xmlns:soap =
"http://schemas.xmlsoap.org/wsdl/soap/"
GetIntfUDLDConfig_Output.xmlns:soapenc =
"http://schemas.xmlsoap.org/soap/encoding/"
GetIntfUDLDConfig_Output.xmlns:wSDL =
"http://schemas.xmlsoap.org/wsdl/"
```

## Verifying UDLD

Use the following command to verify the UDLD status on the controller.

- **showUDLDStatusReq**

This command displays the UDLD configuration status on the NID. The following is a sample output from the command:

```
Switch(config-controller-UDLDPortType)# showUDLDStatus showUDLDStatusReq
Switch(config-controller-UDLDPortType)# showUDLDStatus review
```

```
Commands in queue:
      showUDLDStatus showUDLDStatusReq
```

```
Switch(config-controller-UDLDPortType)# showUDLDStatus commit
```

```
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[0].port = 1
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[0].mode =
'Disable'
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[0].messageInterval
= 7
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[0].adminState
= false
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[0].localDeviceId
= 'B8-38-61-68-7B-BC'
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[0].localDeviceName
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[0].bidirState
= 'Indeterminant'
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[0].nbrPortID
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[0].nbrDeviceID
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[0].nbrDeviceName
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[0].nbrLinkState
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[1].port = 2
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[1].mode =
'Disable'
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[1].messageInterval
= 7
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[1].adminState
= false
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[1].localDeviceId
= 'B8-38-61-68-7B-BC'
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[1].localDeviceName
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[1].bidirState
```

```

= 'Indeterminant'
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[1].nbrPortID
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[1].nbrDeviceID
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[1].nbrDeviceName
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[1].nbrLinkState
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[2].port = 3
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[2].mode =
'Normal'
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[2].messageInterval
= 10
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[2].adminState
= true
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[2].localDeviceId
= 'B8-38-61-68-7B-BC'
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[2].localDeviceName
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[2].bidirState
= 'Indeterminant'
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[2].nbrPortID
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[2].nbrDeviceID
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[2].nbrDeviceName
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[2].nbrLinkState
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[3].port = 4
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[3].mode =
'Normal'
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[3].messageInterval
= 10
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[3].adminState
= true
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[3].localDeviceId
= 'B8-38-61-68-7B-BC'
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[3].localDeviceName
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[3].bidirState
= 'Indeterminant'
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[3].nbrPortID
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[3].nbrDeviceID
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[3].nbrDeviceName
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[3].nbrLinkState
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[4].port = 5
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[4].mode =
'Normal'
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[4].messageInterval
= 10
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[4].adminState
= true

```

```

ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[4].localDeviceId
= 'B8-38-61-68-7B-BC'
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[4].localDeviceName
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[4].bidirState
= 'Indeterminant'
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[4].nbrPortID
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[4].nbrDeviceID
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[4].nbrDeviceName
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[4].nbrLinkState
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[5].port = 6
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[5].mode =
'Disable'
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[5].messageInterval
= 7
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[5].adminState
= false
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[5].localDeviceId
= 'B8-38-61-68-7B-BC'
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[5].localDeviceName
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[5].bidirState
= 'Indeterminant'
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[5].nbrPortID
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[5].nbrDeviceID
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[5].nbrDeviceName
= ''
ShowUDLDStatus_Output.showUDLDStatusResp.udldStatusList[5].nbrLinkState
= ''

```

## Additional References

### Related Documents

Related Topic	Document Title
Cisco ME 3800x and ME 3600x Switches Software Configuration Guide, Cisco IOS Release 15.4(1)S	<a href="http://www.cisco.com/c/en/us/td/docs/switches/metro/me3600x_3800x/software/release/15-4_1_S/configuration/guide/3800x3600xscg.html">http://www.cisco.com/c/en/us/td/docs/switches/metro/me3600x_3800x/software/release/15-4_1_S/configuration/guide/3800x3600xscg.html</a>

**MIBs**

MIB	MIBs Link
MIBs Supporting Cisco IOS	To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL: <a href="http://www.cisco.com/go/mibs">http://www.cisco.com/go/mibs</a>

**Technical Assistance**

Description	Link
<p>The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.</p> <p>To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.</p> <p>Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.</p>	<a href="http://www.cisco.com/support">http://www.cisco.com/support</a>



## Configuring Flex Links

This document describes the Flex Link feature and configuration steps to implement Flex Links. They also describe how to configure the MAC address table move update feature.

**Note**

Flex Links does not currently support stacking, duo switches structure, or VLAN separation.

- [Prerequisites for Configuring Flex Links, page 615](#)
- [Restrictions for Configuring Flex Links, page 615](#)
- [Information about Flex Links, page 616](#)
- [MAC Address Table Move Update, page 616](#)
- [How to Configure Flex Links, page 617](#)

## Prerequisites for Configuring Flex Links

- Disable STP before configuring Flex Links. If STP is disabled on the switch, make sure that there are no Layer 2 loops in the topology.
- Flex Links is supported on the Serval CEServices application.

### Default Configuration

Default Flex Links configuration is when there is no configuration for Flex Links pairs or for the MAC address move update transmit feature.

## Restrictions for Configuring Flex Links

- Only one Flex Links backup link can be configured for any active link, and it must be a different interface from the active interface.

- The backup link does not have to be the same type as the active link. However, they should be configured with similar characteristics so that there are no loops or changes in operation if the standby link becomes active.
- An active link cannot belong to another Flex Links pair.
- The Flex Links pair cannot belong to the same port channel. However, a Flex Links pair can be a port channel and a physical interface, or two port channels or physical interfaces.
- The port channel interface should be active when included in the Flex Links pair, for it to be configured properly.

## Information about Flex Links

Flex Links configuration provides link-level redundancy in the absence of Spanning Tree Protocol (STP). Flex Links consists of a pair of interfaces (ports or port channels) with one interface configured as the primary interface (forwarding status) and the other as the backup interface (standby status). When a failure occurs on the primary interface, the backup interface moves to forwarding status and starts to forward traffic.

Flex Links works by detecting link down on a primary interface and then bringing up the backup interface that has been defined as backup. It is most commonly implemented at the access layer where the switch has dual uplinks to the distribution layer.

Flex Links is designed to interact with supporting modules, such as the port module, the aggregation module, the packet module, and the configuration module. The basic Flex Links protocol functions are as follows:

- Initialize module configurations
- Interact with the packet module to transmit/receive MAC address table update frames
- Interact with the configuration module to read/write FL configurations
- Register with the port module to receive the port up/down event

The Flex Links API layer provides direct interaction with the switch for the implementation of the active and backup ports groups, the setup of the port status, and the MAC-address table read.

## MAC Address Table Move Update

The MAC address table move update is an optional Flex Links feature. It allows the switch to provide rapid bidirectional convergence when an active link goes down and the backup link starts forwarding traffic.

**Note**

---

MAC address table move update enables fast recovery of network connectivity but consumes CPU resources.

---



# How to Configure Flex Links

## Configuring Flexlink Ports

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>FlexlinksPortType</b>  <b>Example:</b> Switch(config-controller)# FlexlinksPortType	Enters FlexlinksPortType mode to provision Flex Links.
Step 4	<b>flexlinkPortConfiguration flexlinksConfiguration {activePort backupPort flexlinkEnabled}</b>  <b>Example:</b> Switch(config-controller-FlexlinkPortType)# flexlinkPortConfiguration flexlinksConfiguration activePort activePortId 4 flexlinkPortConfiguration flexlinksConfiguration backupPort backupPortId 6 flexlinkPortConfiguration flexlinksConfiguration flexlinkEnabled enable	<ul style="list-style-type: none"> <li>• <b>activePort</b>— Enter the Port number of interface to be configured .</li> <li>• <b>backupPort</b>— Enter the backup interface port number. It can be a physical port number or LLAG/LACP group ID.</li> <li>• <b>flexlinkEnabled</b>— Enter enable or disable to configure Flexlink port number.</li> </ul>
Step 5	<b>flexlinkPortConfiguration review</b>  <b>Example:</b> Switch(config-controller-FlexlinksPotType)# flexlinkPortConfiguration review	Displays the Flexlink configuration commands in the queue.

	Command or Action	Purpose
<b>Step 6</b>	<b>flexlinkPortConfiguration commit</b>  <b>Example:</b> Switch(config-controller-FlexlinksPotType)# flexlinkPortConfiguration commit	Sends the Flexlink port configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-FlexLinksPortType)# <b>exit</b>	Exits the config controller mode.

## Provisioning Flex Link Ports

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>FlexlinksPortType</b>  <b>Example:</b> Switch(config-controller)# FlexlinksPortType	Enters the FlexlinksPortType mode to provision Flex Links.
<b>Step 4</b>	<b>getFlexlinksConfiguration</b> <b>getFlexlinkConfigRequest {llagGroupId lagGroup-Id phyPortId phyPort-Id}</b>  <b>Example:</b> Switch(config-controller-FlexlinksPotType)# getFlexlinksConfiguration Switch(config-controller-FlexlinksPotType)# getFlexlinksConfiguration getFlexlinkConfigRequest port phyPortId 4 Switch(config-controller-FlexlinksPotType)# getFlexlinksConfiguration getFlexlinkConfigRequest llagGroupId 2	Gets the activeport configuration using getcommand.
<b>Step 5</b>	<b>getFlexlinksConfiguration review</b>  <b>Example:</b> Switch(config-controller-FlexlinksPotType)# getFlexlinksConfiguration review	Displays the activeport configuration using getcommand.

	Command or Action	Purpose
Step 6	<b>getFlexlinksConfiguration commit</b>  <b>Example:</b> Switch(config-controller-FlexlinksPotType) # getFlexlinksConfiguration commit	Sends the activeport configuration to the NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-FlexLinksPortType) # <b>exit</b>	Exits the config controller mode.

## Viewing Flex Link Configuration at Port Level on the NID

### Before You Begin

- Perform the steps to provision Flex Links on the controller .

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid <i>1/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>FlexlinksPortType</b>  <b>Example:</b> Switch(config-controller)# FlexlinksPortType	Enters FlexlinksPortType mode to provision Flex Links.
Step 4	<b>getFlexlinksConfiguration</b> <b>getFlexlinkConfigRequestportllagGroupId phyPortId</b>  <b>Example:</b> Switch(config-controller-FlexlinksPortType) # getFlexlinksConfiguration getFlexlinkConfigRequest port llagGroupId 2 Switch(config-controller-FlexlinksPortType) # getFlexlinksConfiguration getFlexlinkConfigRequest port phyPortId 4	Retrieves the Flex Links configuration at port. <ul style="list-style-type: none"> <li>• <b>llagGroupId <i>llagGroup-Id</i></b>—Displays the targeted active LLAG Group Id.</li> <li>• <b>review</b>—Displays the targeted active physical port.</li> </ul>

	Command or Action	Purpose
<b>Step 5</b>	<b>getFlexlinksConfiguration review</b>  <b>Example:</b> Switch(config-controller-FlexlinksPortType)# <b>getFlexlinksConfiguration review</b> Commands in queue: 4       getFlexlinksConfiguration flexlinksPhysicalPort	Displays the Flex Links configuration.
<b>Step 6</b>	<b>getFlexlinksConfiguration commit</b>  <b>Example:</b> Switch(config-controller-FlexlinksPortType)# <b>getFlexlinksConfiguration commit</b>	Sends the Flex Links configuration to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-FlexLinksPortType)# <b>exit</b>	Exist the controller config mode.

### Configuration Example

The example retrieves the Flex Links configuration for port 4 on the NID:

```
Switch(config-controller-FlexlinksPortType)# getFlexlinksConfigRequestportphyPortId 4
Switch(config-controller-FlexlinksPortType)# getFlexlinksConfiguration review
Commands in queue:
  getFlexlinksConfigRequestportphyPortId 4
Switch(config-controller-FlexlinksPortType)# getFlexlinksConfiguration commit
GetFlexlinksConfiguration_Output.getFlexlinksConfiguration.portNumber = 4
GetFlexlinksConfiguration_Output.getFlexlinksConfiguration.flexlinksEnable = false
GetFlexlinksConfiguration_Output.getFlexlinksConfiguration.key = 4
GetFlexlinksConfiguration_Output.getFlexlinksConfiguration.role.t = 4
GetFlexlinksConfiguration_Output.getFlexlinksConfiguration.role.u.active = true
GetFlexlinksConfiguration_Output.getFlexlinksConfiguration.portPriority = 32768
GetFlexlinksConfiguration_Output.getFlexlinksConfiguration.timeout.t = 4
getFlexlinksConfiguration_Output.getFlexlinksConfiguration.timeout.u.fast = true

GetFlexlinksConfiguration Commit Success!!!
Switch(config-controller-FlexlinksPortType)# exit
```

## Viewing Flexlink Active Port Configuration

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.

	Command or Action	Purpose
Step 2	<b>controller nid</b> <i>1/NID_ID</i>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>FlexlinksPortType</b>  <b>Example:</b> Switch(config-controller)# FlexlinksPortType	Enters FlexlinksPortType mode to provision Flex Links.
Step 4	<b>showFlexlinksConfigdisplayFlexlinksConfigport</b> { <b>llagGroupID</b>   <b>phyPortId</b> }  <b>Example:</b> Switch(config-controller-FlexlinksPortType)# showFlexlinksConfig displayFlexlinksConfig port phyPortId 4	<ul style="list-style-type: none"> <li>• <b>port</b>— Displays the targeted active port.</li> <li>• <b>llagGroupID</b>— Displays the active llagGroupID number.</li> <li>• <b>phyPortId</b>— Displays the active physical port number.</li> </ul>
Step 5	<b>showFlexlinksConfig review</b>  <b>Example:</b> Switch(config-controller-FlexlinksPotType)# showFlexlinksConfig review	Displays the ports for Flexlink configuration.
Step 6	<b>showFlexlinksConfig commit</b>  <b>Example:</b> Switch(config-controller-FlexlinksPotType)# showFlexlinksConfig commit	Sends the Flexlink configuration to the NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-FlexLinksPortType)# <b>exit</b>	Exits the config controller mode.

### Configuration Example

The example shows the flexlink configuration in active ports.

```
Switch(config-controller)# FlexlinksPortType
Switch(config-controller-FlexlinksPortType)# showFlexlinksConfig displayFlexlinksConfig
port phyPortId 4

(config-controller-FlexlinksPortType)# showFlexlinksConfig commit
ShowFlexlinksConfig_Output.displayFlexlinksConfigResp[0].backupPort = 'GigabitEthernet 1/6'
ShowFlexlinksConfig_Output.displayFlexlinksConfigResp[0].activePort = 'GigabitEthernet 1/4'
ShowFlexlinksConfig_Output.displayFlexlinksConfigResp[0].backupState = 'Active Up/Backup
Standby'
ShowFlexlinksConfig_Output.displayFlexlinksConfigResp[0].macUpdateEnabled = 'enabled'

(config-controller-FlexlinksPortType)# showFlexlinksConfig commit
ShowFlexlinksConfig_Output.displayFlexlinksConfigResp[0].backupPort = 'GigabitEthernet 1/6'
ShowFlexlinksConfig_Output.displayFlexlinksConfigResp[0].activePort = 'GigabitEthernet 1/4'
```

```
ShowFlexlinksConfig_Output.displayFlexlinksConfigResp[0].backupState = 'Active Up/Backup Standby'
ShowFlexlinksConfig_Output.displayFlexlinksConfigResp[0].macUpdateEnabled = 'enabled'

ShowFlexlinksConfig Commit Success!!!(FlexlinksPortType)#
Commit Success!!!(config-controller-FlexlinksPortType)#
```

## Enabling macMoveupdate on Active Port

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid /NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>FlexlinksPortType</b>  <b>Example:</b> Switch(config-controller)# FlexlinksPortType	Enters the FlexlinksPortType mode to provision Flex Links.
<b>Step 4</b>	<b>macMoveUpdatePortConfig macMoveUpdateConfig { llagGroupId llagGroup-Id   mmuEnabled { enable disable }   portNumber portNumber }</b>  <b>Example:</b> Switch(config-controller-FlexlinksPortType)# macMoveUpdatePortConfig macMoveUpdateConfig Switch(config-controller-FlexlinksPortType)# macMoveUpdatePortConfig macMoveUpdateConfig llagGroup id 2 Switch(config-controller-FlexlinksPortType)# macMoveUpdatePortConfig macMoveUpdateConfig portNumber 4 Switch(config-controller-FlexlinksPortType)# macMoveUpdatePortConfig macMoveUpdateConfig mmuEnabled enable	Displays the macMoveUpdateConfig mode. <b>Note</b> User can enable macMoveUpdate, only after flex link is configured. <ul style="list-style-type: none"> <li>• <b>llagGroupId</b>— Configures llag as an active port in flex link. The range is from 1-4</li> <li>• <b>portNumber</b>— Configures port number in flex link. The range is from 1-124</li> <li>• <b>mmuEnabled</b>—Updates the MAC Move Transmitt in flex link to either enable or disable.</li> </ul>
<b>Step 5</b>	<b>macMoveUpdatePortConfig review</b>  <b>Example:</b> Switch(config-controller-FlexlinksPotType)# macMoveUpdatePortConfig review	Displays the macMoveUpdatePortConfig commands.
<b>Step 6</b>	<b>macMoveUpdatePortConfig commit</b>  <b>Example:</b> Switch(config-controller-FlexlinksPotType)# macMoveUpdatePortConfig commit	Sends the macMoveUpdatePortConfig commands to the NID.

	Command or Action	Purpose
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-FlexLinksPortType) # <b>exit</b>	Exits the config controller mode.

## Viewing macMoveUpdate Active Port Configuration

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>FlexlinksPortType</b>  <b>Example:</b> Switch(config-controller) # FlexlinksPortType	Enters FlexlinksPortType mode to provision Flex Links.
<b>Step 4</b>	<b>getMACMoveUpdateConfiggetFlexlinkConfigRequestport{llagGroupId phyPortId}</b>  <b>Example:</b> Switch(config-controller-FlexlinksPortType) # getMACMoveUpdateConfig getFlexlinkConfigRequest port phyPortId 4	<ul style="list-style-type: none"> <li>• <b>port</b>— Displays the targeted active port.</li> <li>• <b>llagGroupId</b>— Displays the active llagGroupId number.</li> <li>• <b>phyPortId</b>— Displays the active physical port number.</li> </ul>
<b>Step 5</b>	<b>getMACMoveUpdateConfig review</b>  <b>Example:</b> Switch(config-controller-FlexlinksPotType) # getMACMoveUpdateConfig review	Displays the ports for Flexlink configuration.
<b>Step 6</b>	<b>getMACMoveUpdateConfig commit</b>  <b>Example:</b> Switch(config-controller-FlexlinksPotType) # getMACMoveUpdateConfig review	Sends the Flexlink configuration to the NID.

	Command or Action	Purpose
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller)FlexLinksPortType)# <b>exit</b>	Exits the Flex Links provisioning mode.

### Configuration Example

The example shows the flexlink configuration in active ports.

```
Switch(config-controller)# FlexlinksPortType
Switch(config-controller-FlexlinksPortType)# getMACMoveUpdateConfig getFlexlinkConfigRequest
port phyPortId 4
(config-controller-FlexlinksPortType)# getMACMoveUpdateConfig review

Commands in queue: 1

getMACMoveUpdateConfig getFlexlinkConfigRequest port phyPortId 4
(config-controller-FlexlinksPortType)# getMACMoveUpdateConfig commit
GetMACMoveUpdateConfig_Output.macMoveUpdateConfig._choice1.t = 1
GetMACMoveUpdateConfig_Output.macMoveUpdateConfig._choice1.u.portNumber = 4
GetMACMoveUpdateConfig_Output.macMoveUpdateConfig.mmuEnabled = true

GetMACMoveUpdateConfig Commit Success!!!(config-controller-FlexlinksPortType)#
```





## CHAPTER 31

# Configuring Y.1564

---

This document describes the Y.1564 test feature and configuration steps to execute Y.1564 feature.

- [Prerequisites for Configuring Y.1564](#) , page 625
- [Information About Y.1564](#), page 625

## Prerequisites for Configuring Y.1564

- You must disable:
  - Link Layer Discovery Protocol (LLDP) transmit and receive on source port.
  - Loop protection on destination port or Spanning Tree Protocol (STP) on destination and source port.
  - Spanning Tree Protocol (STP).
- NID must have an IP address.
- Loop should not be configured.

## Information About Y.1564

ITU-T Y.1564 (Or sometimes called Y.156sam or EtherSAM - Ethernet Service Activation Methodology) is a QoS and network performance ITU-T Ethernet-based service test methodology. This testing procedure tests service turn-up, installation and troubleshooting of Ethernet-based services.

Y.1564 allows simultaneous testing of multiple Ethernet services and measures. It also validates the different QoS mechanisms provisioned in the network to prioritize different service types - allowing faster deployment, easier service and network troubleshooting.

Y.1564 allows simultaneous testing of multiple Ethernet services and measures. It also validates the different QoS mechanisms provisioned in the network to prioritize different service types - allowing faster deployment, easier service and network troubleshooting.

## Configuring New Y.1564 Profile

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ciscoY1564</b>  <b>Example:</b> Switch(config-controller)# ciscoY1564	Enters ciscoY1564 configuration mode.
<b>Step 4</b>	<b>setY1564Profile y1564ProfileProfile name description acceptable-fdv acceptable-gdv acceptable-flr acceptable-flr acceptable-ftd acceptable-ftd  cir-test {dm-interval dm-interval duration duration  step-count step-count  start {enable disable} }  dst-oam-aware {enable disable}  dwell-time dwell-time  eir-test {enable disable}  meg-level meg-level duration  performance-test {enable disable}  traffic-policing-test {dm-interval duration}  traffic-type {customer-simulated oam}  emix  user-defined-frame-size }</b>  <b>Example:</b> Switch(config-controller-ciscoY1564)# setY1564Profile y1564Profile profileName Switch(config-controller-ciscoY1564)# setY1564Profile y1564Profile description Switch(config-controller-ciscoY1564)# setY1564Profile y1564Profile acceptable-fdv 0-10000 Switch(config-controller-ciscoY1564)# setY1564Profile y1564Profile acceptable-flr 0-1000 Switch(config-controller-ciscoY1564)# setY1564Profile y1564Profile acceptable-ftd 0-10000 Switch(config-controller-ciscoY1564)# setY1564Profile y1564Profile cir-test start enable Switch(config-controller-ciscoY1564)# setY1564Profile y1564Profile cir-test dm-interval 100-10000 Switch(config-controller-ciscoY1564)# setY1564Profile y1564Profile cir-test duration <cr> Switch(config-controller-ciscoY1564)# setY1564Profile y1564Profile cir-test step-count 1-1000 Switch(config-controller-ciscoY1564)# setY1564Profile y1564Profile dst-oam-aware enable Switch(config-controller-ciscoY1564)#	<ul style="list-style-type: none"> <li>• <b>profileName</b>— Enter the name of the profile for Y1564 .</li> <li>• <b>description</b>— Enter a brief description about the profile .</li> <li>• <b>acceptable-fdv</b>— Enter frame delay variation in milliseconds to configure Y1564. Acceptable limit is 0-10000. The default value is 0, which disables the test.</li> <li>• <b>acceptable-flr</b>— Enter frame loss ratio per mile to configure Y1564. Acceptable limit is 0-1000. The default value is 0 and 1000 disables the test.</li> <li>• <b>acceptable-ftd</b>— Enter frame transfer delay in milliseconds to configure Y1564. Acceptable limit is 0-10000. Acceptable limit is 0-10000. The default value is 0, which disables the test.</li> <li>• <b>cir-test</b>— Enter frame delay variation in milliseconds to configure Y1564. Acceptable limit is 0-10000. <ul style="list-style-type: none"> <li>◦ <b>dm-interval</b>— Enter the interval of between sending delay measurement frame. Acceptable limit is 100-10000.</li> <li>◦ <b>duration</b>— Enter the duration of one step.</li> <li>◦ <b>step-count</b>— Enter the number of steps to configure CIR. Acceptable limit is 1-1000</li> <li>◦ <b>start</b>— Enter enable or disable to configure CIR test.</li> </ul> </li> </ul>

Command or Action	Purpose
<pre> setY1564Profile y1564Profile dwell-time 100-10000 Switch(config-controller-ciscoY1564)# setY1564Profile y1564Profile eir-test enable Switch(config-controller-ciscoY1564)# setY1564Profile y1564Profile meg-level 0-7 Switch(config-controller-ciscoY1564)# setY1564Profile y1564Profile performance-test enable Switch(config-controller-ciscoY1564)# setY1564Profile y1564Profile traffic-policing-test dm-interval 100-10000 Switch(config-controller-ciscoY1564)# setY1564Profile y1564Profile traffic-policing-test duration &lt;cr&gt; Switch(config-controller-ciscoY1564)# setY1564Profile y1564Profile traffic-policing-test duration start enable Switch(config-controller-ciscoY1564)# setY1564Profile y1564Profile traffic-type Switch(config-controller-ciscoY1564)# setY1564Profile y1564Profile traffic-type customer-simulated &lt;cr&gt; Switch(config-controller-ciscoY1564)# setY1564Profile y1564Profile traffic-type oam &lt;cr&gt; Switch(config-controller-ciscoY1564)# setY1564Profile y1564Profile emix Switch(config-controller-ciscoY1564)# setY1564Profile y1564Profile e emix U Switch(config-controller-ciscoY1564)# setY1564Profile y1564Profile user-defined-frame-size 10000                     </pre>	<ul style="list-style-type: none"> <li>• <b>dst-oam-aware</b>— Enter enable or disable to configure remote end Y.1731 OAM aware.</li> <li>• <b>dwell-time</b>— Enter the time frame of execution, pauses in milliseconds after each trial before reading counters, and status from hardware. Acceptable limit is 100-10000. Default value is 500.</li> <li>• <b>eir-test</b>— Enter EIR configuration test and optionally set its parameters to configure Y1564. Parameters are dm-interval, duration and start.</li> <li>• <b>meg-level</b>— Enter the profile MEG level to configure Y1564 . Acceptable limit is 0-7.</li> <li>• <b>performance-test</b>— Enter the performance test parameters. <ul style="list-style-type: none"> <li>◦ <b>dm-interval</b>— Enter the time interval in milliseconds between sending delay measurement frame. Acceptable limit is 100-10000.</li> <li>◦ <b>duration</b>— Enter the duration of performance test.</li> <li>◦ <b>start</b>—Enter enable or disable to start the performance test.</li> </ul> </li> <li>• <b>traffic-policing-test</b>— Enter the traffic policing test parameters.. <ul style="list-style-type: none"> <li>◦ <b>dm-interval</b>— Enter the time interval in milliseconds between sending delay measurement frame. Acceptable limit is 100-10000.</li> <li>◦ <b>duration</b>— Enter the duration of traffic policing test.</li> <li>◦ <b>start</b>—Enter enable or disable to start the traffic policing test.</li> </ul> </li> <li>• <b>traffic-type</b>— Enter the type of traffic generated at the near end. <ul style="list-style-type: none"> <li>◦ <b>customer-simulated</b>— Enter the frames that simulate real customer traffic as background traffic.</li> <li>◦ <b>oam</b>— Enter the duration of traffic policing test.</li> </ul> </li> <li>• <b>emix</b>— select the frame size(EMIX letter-encoded) that the enabled tests will use. Encoding is as follows: a: 64, b: 128, c: 256, d: 512, e: 1024,f: 1280, g: 1518, h: MTU, u: user-defined.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>user-defined-frame-size</b>— Enter the frame size if emix is set to 'U'. Acceptable limit is 64-10236</li> </ul>
<b>Step 5</b>	<b>review</b>  <b>Example:</b> Switch(config-controller-ciscoY1564) # setY1564Profile review	Reviews the ciscoY1564 profile configuration parameters.
<b>Step 6</b>	<b>commit</b>  <b>Example:</b> Switch(config-controller-ciscoY1564) # setY1564Profile commit	Sends the ciscoY1564 profile parameters to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ciscoY1564) # exit	Exits the config controller mode.

## Getting the Profile Configuration using Profile Name

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ciscoY1564</b>  <b>Example:</b> Switch(config-controller)# ciscoY1564	Enters ciscoY1564 configuration mode.
<b>Step 4</b>	<b>getY1564ProfilegetY1564ProfileReq</b>  <b>Example:</b> Switch(config-controller-ciscoY1564) # getY1564Profile getY1564ProfileReq	Retrieves the Profile configuration.

	Command or Action	Purpose
<b>Step 5</b>	<b>getY1564Profile</b> review  <b>Example:</b> Switch(config-controller-ciscoY1564)# getY1564Profile review	Displays the Y.1564 profile configuration.
<b>Step 6</b>	<b>getY1564Profile</b> commit  <b>Example:</b> Switch(config-controller-ciscoY1564)# getY1564Profile commit	Sends the Y.1564 profile configuration information to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ciscoY1564)# exit	Exits the config controller mode.

The following example shows the Profile Configuration using the Profile Name:

```
Switch(config-controller)# getY1564Profile commit
GetY1564Profile_Output.y1564Profile.y1564Profile_ELEM_0.profileName = 'cisco123456'
GetY1564Profile_Output.y1564Profile.y1564Profile_ELEM_0.description = 'oamunaware'
GetY1564Profile_Output.y1564Profile.y1564Profile_ELEM_0.acceptable_fdv = 0
GetY1564Profile_Output.y1564Profile.y1564Profile_ELEM_0.acceptable_ftd = 0
GetY1564Profile_Output.y1564Profile.y1564Profile_ELEM_0.acceptable_flr = 0
GetY1564Profile_Output.y1564Profile.y1564Profile_ELEM_0.dst_oam_aware = false
GetY1564Profile_Output.y1564Profile.y1564Profile_ELEM_0.dwell_time = 500
GetY1564Profile_Output.y1564Profile.y1564Profile_ELEM_0.emix = '1024'
GetY1564Profile_Output.y1564Profile.y1564Profile_ELEM_0.meg_level = 7
GetY1564Profile_Output.y1564Profile.y1564Profile_ELEM_0.traffic_type.t = 1
GetY1564Profile_Output.y1564Profile.y1564Profile_ELEM_0.traffic_type.u.oam = '0'
GetY1564Profile_Output.y1564Profile.y1564Profile_ELEM_0.user_defined_frame_size = 2000
GetY1564Profile_Output.y1564Profile.y1564Profile_ELEM_0.cir_test.start = true
GetY1564Profile_Output.y1564Profile.y1564Profile_ELEM_0.cir_test.duration = 60
GetY1564Profile_Output.y1564Profile.y1564Profile_ELEM_0.cir_test.dm_interval = 500
GetY1564Profile_Output.y1564Profile.y1564Profile_ELEM_0.cir_test.step_count = 4
GetY1564Profile_Output.y1564Profile.y1564Profile_ELEM_0.eir_test.start = true
GetY1564Profile_Output.y1564Profile.y1564Profile_ELEM_0.eir_test.duration = 60
GetY1564Profile_Output.y1564Profile.y1564Profile_ELEM_0.eir_test.dm_interval = 500
GetY1564Profile_Output.y1564Profile.y1564Profile_ELEM_0.performance_test.start = true
GetY1564Profile_Output.y1564Profile.y1564Profile_ELEM_0.performance_test.duration = 10
GetY1564Profile_Output.y1564Profile.y1564Profile_ELEM_0.performance_test.dm_interval = 100
GetY1564Profile_Output.y1564Profile.y1564Profile_ELEM_0.traffic_policing_test.start = true
GetY1564Profile_Output.y1564Profile.y1564Profile_ELEM_0.traffic_policing_test.duration = 10
GetY1564Profile_Output.y1564Profile.y1564Profile_ELEM_0.traffic_policing_test.dm_interval = 100

GetY1564Profile Commit Success
```

## Viewing Profile Names

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ciscoY1564</b>  <b>Example:</b> Switch(config-controller)# ciscoY1564	Enters ciscoY1564 configuration mode.
<b>Step 4</b>	<b>showY1564showY1564Req {profiles reports}</b>  <b>Example:</b> Switch(config-controller-ciscoY1564)# showY1564 showY1564Req	Displays existing profiles or report information.
<b>Step 5</b>	<b>showY1564review</b>  <b>Example:</b> Switch(config-controller-ciscoY1564)# showY1564 review	Displays the profile configurations.
<b>Step 6</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ciscoY1564)# exit	Exits the config controller mode.

The following example shows the configurations to display a particular Profiles using the profile name or description:

```
Switch(config-controller-ciscoY1564)#showY1564 commit
ShowY1564_Output.showY1564Resp.t = 1
ShowY1564_Output.showY1564Resp.u.profile[0].profileName = 'NewProfile1'
ShowY1564_Output.showY1564Resp.u.profile[0].description = ''
ShowY1564_Output.showY1564Resp.u.profile[1].profileName = 'cisco123456'
ShowY1564_Output.showY1564Resp.u.profile[1].description = 'oamunaware'
ShowY1564_Commit Success
```

## Managing Y.1564 Profile Names

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>ciscoY1564</b>  <b>Example:</b> Switch(config-controller)# ciscoY1564	Enters ciscoY1564 configuration mode.
Step 4	<b>y1564ProfileManagement old-y1564ProfileManagmentReq {delete rename {new-name old-name}}</b>  <b>Example:</b> Switch(config-controller-ciscoY1564)# y1564ProfileManagement y1564ProfileManagmentReq rename old-name cisco123456 Switch(config-controller-ciscoY1564)# y1564ProfileManagement y1564ProfileManagmentReq rename new-name cisco Switch(config-controller-ciscoY1564)# y1564ProfileManagement y1564ProfileManagmentReq delete cisco	<ul style="list-style-type: none"> <li>• <b>rename</b>—Set rename to rename a old profile name.</li> <li>• <b>delete</b>—Set delete to delete an existing profile.</li> </ul>
Step 5	<b>review</b>  <b>Example:</b> Switch(config-controller-ciscoY1564)# y1564ProfileManagement review	Reviews the ciscoY1564 profile names.
Step 6	<b>commit</b>  <b>Example:</b> Switch(config-controller-ciscoY1564)# y1564ProfileManagement commit	Sends the changed or deleted ciscoY1564 profile names to the NID .
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-ciscoY1564)# exit	Exits the config controller mode.

## Configuring Y.1564 Test Parameters

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>ciscoY1564</b>  <b>Example:</b> Switch(config-controller)# ciscoY1564	Enters ciscoY1564 configuration mode.
Step 4	<b>setY1564TestParamsy1564TestsReq { dei description  dscp ece   evc   interface   pcp   peer-mac   profile-name   report-name   vlan vlan-id }</b>  <b>Example:</b> <pre>Switch(config-controller-ciscoY1564)# setY1564TestParams y1564TestsReq profile-name cisco123456 Switch(config-controller-ciscoY1564)# setY1564TestParams y1564TestsReq report-name controllerreport123456 Switch(config-controller-ciscoY1564)# setY1564TestParams y1564TestsReq description dstmodeno  Switch(config-controller-ciscoY1564)# setY1564TestParams y1564TestsReq evc 1 Switch(config-controller-ciscoY1564)# setY1564TestParams y1564TestsReq ece 1 Switch(config-controller-ciscoY1564)# setY1564TestParams y1564TestsReq interface 3 Switch(config-controller-ciscoY1564)# setY1564TestParams y1564TestsReq peer-mac 00-00-00-00-00-01 Switch(config-controller-ciscoY1564)# setY1564TestParams y1564TestsReq pcp 2 Switch(config-controller-ciscoY1564)# setY1564TestParams y1564TestsReq vlan untagged Switch(config-controller-ciscoY1564)# setY1564TestParams y1564TestsReq dei 0 Switch(config-controller-ciscoY1564)# setY1564TestParams review Switch(config-controller-ciscoY1564)# setY1564TestParams commit</pre>	<ul style="list-style-type: none"> <li>• <b>dei</b>— Enter the DEI number of the profile. The valid range is 0-1.</li> <li>• <b>description</b>— Enter the description about the test.</li> <li>• <b>dscp</b>— Enter the DSCP number of the profile. The valid range is 0-63.</li> <li>• <b>ece</b>— Enter the ECE ID number of the profile, on which the test needs to be executed. The valid range is 1-1024.</li> <li>• <b>evc</b>— Enter the EVC ID number of the profile. The valid range is 1-1024.</li> <li>• <b>interface</b>— Enter the UNI port. The valid range is 1-125.</li> <li>• <b>pcp</b>— Enter the PCP number of the profile. The valid range is 0-7.</li> <li>• <b>peer-mac</b>— Enter peer MAC address.</li> <li>• <b>profile-name</b>— Enter the name of the existing profile, that needs to be tested.</li> <li>• <b>report-name</b>— Enter a unique name for the test report.</li> <li>• <b>vlan</b>— Enter the Vlan ID.</li> </ul>



	Command or Action	Purpose
Step 5	<b>review</b>  <b>Example:</b> Switch(config-controller-ciscoY1564)# setY1564TestParams review	Reviews the ciscoY1564 profile test parameters.
Step 6	<b>commit</b>  <b>Example:</b> Switch(config-controller-ciscoY1564)# setY1564TestParams commit	Sends the test parameter reports to the NID.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-ciscoY1564)# exit	Exits the config controller mode.

### Configuration Example

when profile is configured as DST, then OAM-aware port and peer-mac address need to be specified in setY1564TestParams.

```
Switch(config-controller)# ciscoY1564
Switch(config-controller-ciscoY1564)# setY1564TestParams y1564TestsReq
Switch(config-controller-ciscoY1564)# setY1564TestParams y1564TestsReq profile-name
cisco123456
Switch(config-controller-ciscoY1564)# setY1564TestParams y1564TestsReq report-name
controllerreport123456
Switch(config-controller-ciscoY1564)# setY1564TestParams y1564TestsReq description dstmodeno
Switch(config-controller-ciscoY1564)# setY1564TestParams y1564TestsReq peer-mac
00-02:01:00:01:03
Switch(config-controller-ciscoY1564)# setY1564TestParams y1564TestsReq evc 1
Switch(config-controller-ciscoY1564)# setY1564TestParams y1564TestsReq ece 1
Switch(config-controller-ciscoY1564)# setY1564TestParams y1564TestsReq interface 3
Switch(config-controller-ciscoY1564)# setY1564TestParams review
Switch(config-controller-ciscoY1564)# setY1564TestParams commit
```

## Viewing Y.1564 Test Parameters

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.

	Command or Action	Purpose
<b>Step 3</b>	<b>ciscoY1564</b>  <b>Example:</b> Switch(config-controller)# ciscoY1564	Enters ciscoY1564 configuration mode.
<b>Step 4</b>	<b>getY1564TestParamsgetY1564TestsReq</b>  <b>Example:</b> Switch(config-controller-ciscoY1564)# getY1564TestParams getY1564TestsReq	Retrieves the parameters set for latest tet.
<b>Step 5</b>	<b>review</b>  <b>Example:</b> Switch(config-controller-ciscoY1564)# getY1564TestParams review	Reviews the ciscoY1564 profile configuration parameters.
<b>Step 6</b>	<b>commit</b>  <b>Example:</b> Switch(config-controller-ciscoY1564)# getY1564TestParams commit	Sends the test parameter reports to the NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ciscoY1564)# exit	Exits the config controller mode.

## Saving Y.1564 Test Report

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ciscoY1564</b>  <b>Example:</b> Switch(config-controller)# ciscoY1564	Enters the ciscoY1564 configuration mode.

	Command or Action	Purpose
Step 4	<b>y1564ReportManagement y1564ReportManagementReqsave stop</b>  <b>Example:</b> <pre>Switch(config-controller-ciscoY1564)# y1564ReportManagemen y1564ReportManagementReq save reportName controllerreport Switch(config-controller-ciscoY1564)# y1564ReportManagemen y1564ReportManagementReq save tftpPath tftp://202.153.144.25/auto/tftp-blr-users1/sharsh</pre>	<ul style="list-style-type: none"> <li>• <b>Save</b>—Set save to save a profile test report.</li> <li>• <b>Stop</b>—Set stop to stop an ongoing profile test .</li> </ul>
Step 5	<b>review</b>  <b>Example:</b> <pre>Switch(config-controller-ciscoY1564)#y1564ReportManagement review</pre>	Reviews the ciscoY1564 profile test report.
Step 6	<b>commit</b>  <b>Example:</b> <pre>Switch(config-controller-ciscoY1564)#y1564ReportManagement commit</pre>	Sends the ciscoY1564 profile test report to the NID.
Step 7	<b>exit</b>  <b>Example:</b> <pre>Switch(config-controller-ciscoY1564)# exit</pre>	Exits the config controller mode.

## Deleting Y.1564 Test Report

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> <pre>Switch# configure terminal</pre>	Enters global configuration mode.
Step 2	<b>controller nid//NID_ID</b>  <b>Example:</b> <pre>Switch(config)# controller nid 1/1</pre>	Enters the controller configuration mode.
Step 3	<b>ciscoY1564</b>  <b>Example:</b> <pre>Switch(config-controller)# ciscoY1564</pre>	Enters the ciscoY1564 configuration mode.
Step 4	<b>y1564ReportManagement y1564ReportManagementReq {delete stop}</b>	<ul style="list-style-type: none"> <li>• <b>delete</b>—Set delete to delete an existing profile test report.</li> </ul>

	Command or Action	Purpose
	<p><b>Example:</b></p> <pre>Switch(config-controller-ciscoY1564)# y1564ReportManagemen y1564ReportManagementReq delete controlerreport</pre>	<ul style="list-style-type: none"> <li>• <b>Stop</b>—Set stop to stop an ongoing profile test</li> </ul>
<b>Step 5</b>	<p><b>review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ciscoY1564)# y1564ReportManagement review</pre>	Reviews the ciscoY1564 profile test report.
<b>Step 6</b>	<p><b>commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ciscoY1564)# y1564ReportManagement commit</pre>	Sends the ciscoY1564 profile test report to the NID.
<b>Step 7</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ciscoY1564)# exit</pre>	Exits the config controller mode.



## Configuring LST

---

This chapter describes how to configure Link State Tracking on the Cisco ME 1200 NID

- [Prerequisites for Configuring LST](#) , page 637
- [Understanding How Link State Tracking Works](#), page 637

### Prerequisites for Configuring LST

- Configure UP MEP using ProvisionMepPortType template. To know more, refer creating MEP configuration.
- Configure ccmTLV in UP MEP in LSTPortType template.



**Note**

---

While configuring UP MEP, the ports should be of same VLAN.

---

### Understanding How Link State Tracking Works

Link-state tracking, also known as trunk failover, is a feature that binds the link state of multiple interfaces. When LST is enabled in an instance, Local SF or received 'isDown' in CCM Interface Status TLV, will bring down the residence port. Only valid in Up-MEP. The CCM rate must be 1 f/s or faster.

## Configuring mepTLV

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>LSTPortType</b>  <b>Example:</b> Switch(config-controller)# LSTPortType	Enters LST Port Type configuration mode.
Step 4	<b>mepTLVConfiguration</b>  <b>Example:</b> Switch(config-controller-LSTPortType)# mepTLVConfiguration	Enters mepTLVConfiguration mode.
Step 5	<b>ccmTLVConfigccmEnabled {enable disable}</b>  <b>Example:</b> Switch(config-controller-LSTPortType)# mepTLVConfiguration Switch# mepTLVConfiguration ccmTLVConfig ccmEnabled enable	Enables or Disables ccmTLVConfig.
Step 6	<b>mepTLVConfigurationccmTLVConfigmepInstancemepInstance_id</b>  <b>Example:</b> Switch(config-controller-LSTPortType)# mepTLVConfiguration Switch(config-controller-LSTPortType)# mepTLVConfiguration ccmTLVConfig mepInstance 1-100	Creates Link State Tracking Configuration at MEP instance number. The valid number is 1 to 100.
Step 7	<b>mepTLVConfiguration review</b>  <b>Example:</b> Switch(config-controller-LSTPortType)# mepTLVConfiguration review	Reviews the mepTLVConfiguration mode.
Step 8	<b>mepTLVConfiguration commit</b>  <b>Example:</b> Switch(config-controller-LSTPortType)# mepTLVConfiguration commit	Sends the mepTLVConfiguration to the controller.

	Command or Action	Purpose
Step 9	<b>exit</b>  <b>Example:</b> Switch(config-controller-LSTPortType)# exit	Exits the config controller mode.

## Checking ccmTLV Configuration

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid /NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>LSTPortType</b>  <b>Example:</b> Switch(config-controller)# LSTPortType	Enters LST Port Type configuration mode.
Step 4	<b>LinkStateTrackingConfigurationlinkStateTrackingConfigmepInstancemepInstance_id</b>  <b>Example:</b> Switch(config-controller-LSTPortType)# LinkStateTrackingConfiguration Switch(config-controller-LSTPortType)# LinkStateTrackingConfiguration linkStateTrackConfig mepInstance 1-100	Creates Link State Tracking Configuration at MEP instance number. The valid number is 1 to 100.
Step 5	<b>getmepTLVConfiguration review</b>  <b>Example:</b> Switch(config-controller-LSTPortType)# getmepTLVConfiguration review	Reviews the mepTLVConfiguration mode.
Step 6	<b>getmepTLVConfiguration commit</b>  <b>Example:</b> Switch(config-controller-LSTPortType)# getmepTLVConfiguration commit	Sends the mepTLVConfiguration to the controller.

# Configuring LST

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>LSTPortType</b>  <b>Example:</b> Switch(config-controller)# LSTPortType	Enters LST Port Type configuration mode.
<b>Step 4</b>	<b>LinkStateTrackingConfiguration</b>  <b>Example:</b> Switch(config-controller-LSTPortType)# LinkStateTrackingConfiguration	Enters LinkStateTrackingConfiguration mode.
<b>Step 5</b>	<b>LinkStateTrackingConfigurationlinkStateTrackingConfigmepInstancemepInstance_id</b>  <b>Example:</b> Switch(config-controller-LSTPortType)# LinkStateTrackingConfiguration Switch(config-controller-LSTPortType)# LinkStateTrackingConfiguration linkStateTrackConfig mepInstance 1-100	Creates Link State Tracking Configuration at MEP instance number. The valid number is 1 to 100.
<b>Step 6</b>	<b>LinkStateTrackingConfigurationlinkStateTrackingConfiglstEnabled{disable enable}</b>  <b>Example:</b> Switch(config-controller-LSTPortType)# LinkStateTrackingConfiguration Switch(config-controller-LSTPortType)# LinkStateTrackingConfiguration linkStateTrackConfig lstEnabled enable/disable	Sets up LSTPortType configuration. <ul style="list-style-type: none"> <li>• enable- Enables the LST configuration on the ports.</li> <li>• disable- Disables the LST configuration on the ports.</li> </ul>
<b>Step 7</b>	<b>LinkStateTrackingConfiguration review</b>  <b>Example:</b> Switch(config-controller-LSTPortType)# LinkStateTrackingConfiguration review	Reviews the LinkStateTrackingConfiguration mode.
<b>Step 8</b>	<b>LinkStateTrackingConfiguration commit</b>  <b>Example:</b> Switch(config-controller-LSTPortType)# LinkStateTrackingConfiguration commit	Sends the LinkStateTrackingConfiguration to thecontroller.



	Command or Action	Purpose
<b>Step 9</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-LSTPortType) # exit	Exits the config controller mode.

## Checking LST Configuration

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>LSTPortType</b>  <b>Example:</b> Switch(config-controller) # LSTPortType	Enters LST Port Type configuration mode.
<b>Step 4</b>	<b>getLSTConfiguration</b>  <b>Example:</b> Switch(config-controller-LSTPortType) # getLSTConfiguration	Gets the link state tracking configuration response.
<b>Step 5</b>	<b>getLSTConfigurationmepInstancemepInstance_id</b>  <b>Example:</b> Switch(config-controller-LSTPortType) #getLSTConfiguration Switch(config-controller-LSTPortType) #getLSTConfiguration mepInstance 1-100	Creates Link State Tracking Configuration at MEP instance number. The valid number is 1 to 100.
<b>Step 6</b>	<b>getLSTConfiguration review</b>  <b>Example:</b> Switch(config-controller-LSTPortType) # getLSTConfiguration review	Reviews the LSTConfiguration mode.

	Command or Action	Purpose
<b>Step 7</b>	<b>getLSTConfiguration commit</b>  <b>Example:</b> Switch(config-controller-LSTPortType) # getLSTConfiguration commit	Sends the LSTConfiguration mode to the controller.

## Viewing LST Configuration

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config) # controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>LSTPortType</b>  <b>Example:</b> Switch(config-controller) # LSTPortType	Enters LST Port Type configuration mode.
<b>Step 4</b>	<b>displayLSTConfiguration</b>  <b>Example:</b> Switch(config-controller-LSTPortType) # displayLSTConfiguration	Displays the link state tracking configuration response.
<b>Step 5</b>	<b>displayLSTConfigurationmepInstancemepInstance_id</b>  <b>Example:</b> Switch(config-controller-LSTPortType) # displayLSTConfiguration Switch(config-controller-LSTPortType) # displayLSTConfiguration mepInstance 1-100	Displays Link State Tracking Configuration at MEP instance number. The valid number is 1 to 100.
<b>Step 6</b>	<b>displayLSTConfiguration review</b>  <b>Example:</b> Switch(config-controller-LSTPortType) # displayLSTConfiguration review	Display the LSTConfiguration mode.

	Command or Action	Purpose
<b>Step 7</b>	<b>displayLSTConfiguration commit</b>  <b>Example:</b> Switch(config-controller-LSTPortType)# displayLSTConfiguration commit	Display the LSTConfiguration mode in the controller.





## Configuring Security Access Control Lists

---

This chapter describes how to configure security access control lists (ACLs) on your Cisco ME 1200 NID. ACLs provide basic security for your network by filtering traffic and controlling network connections.

- [Creating Access Control Entry](#) , page 646
- [Configuring Rate Limiter](#) , page 654
- [Applying ACL to Ports](#) , page 655
- [Viewing Access Control Entry](#) , page 658
- [Viewing ACL Rate Limiter](#) , page 660
- [Viewing ACL Ports](#) , page 662

# Creating Access Control Entry

## SUMMARY STEPS

1. configure terminal
2. controller nid *1/NID\_ID*
3. SECURITYACL
4. setACLGlobalConfig ace\_global\_config { ace\_id | ace\_enable { enable | disable } | action { deny | Permit | filter { any | intf-range } } | dot1q-tag { any | tagged | untagged } | evc-policer { disable | policer\_id } | frame\_type { any | arp { arp\_req\_rep { any | reply | request } | arp\_sender\_mac\_match { any | value } | arp\_type { any | arp | other | rarp } | ethernet { any | value } | ip { any | value } | ip\_length { any | value } | rarp\_target\_mac\_match { any | value } | sip\_filter { any | ip\_subnet } | tip\_filter { any | ip\_subnet } | ethernet\_type { dmac\_filter { any | dmac\_type | specific } | ethertype\_filter { any | specific } | smac\_filter { any | specific } } | ipv4 { dip\_filter { any | ipv4\_subnet } | dmac\_filter { dmac\_type } | ip\_protocol\_filter { icmp { code\_filter { any | code\_value } | ip\_fragment { value | any } | ip\_option { value | any } | ip\_ttl { value | any } | type\_filter { any | type\_value } } | other { any | ip\_protocol\_value } | tcp { dest\_port\_filter { any | port\_number | range } | ip\_fragment { value | any } | ip-option { value | any } | ip\_ttl { value | any } | src\_port\_filter { any | port\_number | range } | tcp\_ack { value | any } | tcp\_fin { value | any } | tcp\_psh { value | any } | tcp\_rst { value | any } | tcp\_rst { value | any } | tcp\_syn { value | any } | tcp\_urg { value | any } } | udp { dest\_port\_filter { any | port\_number | range } | ip\_fragment { value | any } | ip-option { value | any } | ip\_ttl { value | any } | src\_port\_filter { any | port\_number | range } | sip\_filter { ipv4\_subnet | any } | ipv6 { dmac\_filter { dmac\_type } | hop\_limit { any | value } | ip\_protocol\_filter { icmp { code\_filter | type\_filter } | other { next\_header\_value } | tcp { dest\_port\_filter { any | port\_number | range } | ip\_ttl { value | any } | src\_port\_filter { any | port\_number | range } | tcp\_ack { value | any } | tcp\_fin { value | any } | tcp\_psh { value | any } | tcp\_rst { value | any } | tcp\_rst { value | any } | tcp\_syn { value | any } | tcp\_urg { value | any } | udp { dest\_port\_filter { any | port\_number | range } | src\_port\_filter { any | port\_number | range } } | sip\_filter { any | specific } } | ingress\_port { any | intf\_range } | logging { enable | disable } | mirror { enable | disable } | next { disable | last | next\_ace\_id } | policy\_filter { any | policy\_value } | rate\_limiter { disable | value } | shutdown { enable | disable } | tag\_priority { any | value } | vid { any | vlan\_type } }

5. setaclglobalconfig review
6. setaclglobalconfig commit
7. exit

## DETAILED STEPS

	Command or Action	Purpose
Step 1	configure terminal  Example: Switch# configure terminal	Enters global configuration mode.

	Command or Action	Purpose
<b>Step 2</b>	<p><code>controller nid 1/NID_ID</code></p> <p><b>Example:</b>  <code>Switch(config)# controller nid 1/1</code></p>	Enters the controller configuration mode.
<b>Step 3</b>	<p><code>SECURITYACL</code></p> <p><b>Example:</b>  <code>Switch(config-controller)# SECURITYACL</code></p>	Enters the SecurityACL mode.
<b>Step 4</b>	<p><code>setACLGlobalConfig ace_global_config { ace_id   ace_enable { enable   disable }   action { deny   Permit   filter { any   intf-range } }   dot1q-tag { any   tagged   untagged }   evc-policer { disable   policer_id }   frame_type { any   arp { arp_req_rep { any   reply   request }   arp_sender_mac_match { any   value }   arp_type { any   arp   other   rarp }   ethernet { any   value }   ip { any   value } ip_length { any   value } rarp_target_mac_match { any   value } sip_filter { any   ip_subnet } tip_filter { any   ip_subnet }   ethernet_type { dmac_filter { any   dmac_type   specific }   ethertype_filter { any   specific }   smac_filter { any   specific }   ipv4 { dip_filter { any   ipv4_subnet }   dmac_filter { dmac_type }   ip_protocol_filter { icmp { code_filter { any   code_value }   ip_fragment { value   any }   ip_option { value   any }   ip_ttl { value   any } type_filter { any   type_value }   other { any   ip_protocol_value }   tcp { dest_port_filter { any   port_number   range }   ip_fragment { value   any }   ip-option { value   any }   ip_ttl { value   any }   src_port_filter { any   port_number   range }   tcp_ack { value   any }   tcp_fin { value   any }   tcp_psh { value   any }   tcp_rst { value   any }   tcp_rst { value   any }   tcp_syn { value   any }   tcp_urg { value   any } }   udp { dest_port_filter { any   port_number   range }   ip_fragment { value   any }   ip-option { value   any }   ip_ttl { value   any }   src_port_filter { any   port_number   range }   sip_filter { ipv4_subnet   any }   ipv6 { dmac_filter { dmac_type }   hop_limit { any   value }   ip_protocol_filter { icmp { code_filter   type_filter }   other { next_header_value }   tcp { dest_port_filter { any   port_number   range }   ip_ttl { value   any }   src_port_filter { any   port_number   range }   tcp_ack { value   any }   tcp_fin { value   any }   tcp_psh { value   any }   tcp_rst { value   any }   tcp_rst { value   any }   tcp_syn { value   any }   tcp_urg { value   any }   udp { dest_port_filter { any   port_number   range }   src_port_filter { any   port_number   range } }   sip_filter { any   specific } }   ingress_port { any   intf_range }   logging { enable   disable }   mirror { enable   disable }   next { disable   last   next_ace_id }   policy_filter { any   policy_value }   rate_limiter { disable   value }   shutdown { enable   disable }   tag_priority { any   value }   vid { any   vlan_type } }</code></p>	<p>Applies the ACL global configuration.</p> <ul style="list-style-type: none"> <li>• <b>ace_enable</b>—Specifies the port number. <ul style="list-style-type: none"> <li>◦ —port number. The range is from 1 to 6.</li> </ul> </li> <li>• <b>ace_id</b> —Specify a valid ACE ID. The available options are from 1-512.</li> <li>• <b>action</b> —Specify the action to take with a frame that hits this ACE. <ul style="list-style-type: none"> <li>◦ <b>permit</b> —The frame that hits this ACE is granted permission for the ACE operation.</li> <li>◦ <b>deny</b> —The frame that hits this ACE is dropped.</li> <li>◦ <b>filter</b> —Frames matching the ACE are filtered.</li> </ul> </li> <li>• <b>dot1q_tag</b> —Specifies tagging.</li> <li>• <b>evc_policer</b> —Select whether EVC policer is enabled or disabled. The default value is "Disabled". Note that the ACL rate limiter and EVC policer can not both be enabled. If enabled, specify the EVC policer ID. You can specify EVC policer Id from 1-1022</li> <li>• <b>frame_type</b>— Select the frame type for this ACE. These frame types are mutually exclusive. <ul style="list-style-type: none"> <li>◦ <b>any</b> —Any frame can match this ACE.</li> <li>◦ <b>ethernet_type</b> —Only Ethernet Type frames can match this ACE. The available options are :</li> <li>◦ <b>dmac_filter</b>—Specifies destination MAC address field. Available values are any, dmac-type and specific.</li> </ul> </li> </ul>

Command or Action	Purpose
<p><b>Example:</b></p> <pre>Switch(config-controller-SecurityACL)#setaclglobalconfig ace_global_config ?   ace_enable      Enable or disable ACE   ace_id          ACE ID   action          Access list action   dot1q_tag       Tag   evc_policer     EVC policer   frame_type      Frame Type   ingress_port    Ingress port   logging         Logging frame information   lookup          Second lookup   mirror          Mirror frame to destination mirror port    next           insert the current ACE before the next ACE ID   policy_filter   Policy   rate_limiter    Rate Limiter   shutdown        Shutdown incoming port   tag_priority    Tag priority   vid             VID field</pre>	<ul style="list-style-type: none"> <li>◦ <b>ethertype_filter</b>—Specifies Etype value. Available values are any and specific.</li> <li>◦ <b>smac_filter</b>—Specifies source MAC address field.</li> <li>◦ <b>arp</b>—Only ARP frames can match this ACE. Notice the ARP frames won't match the ACE with ethernet type.       <ul style="list-style-type: none"> <li>◦ <b>arp_req_rep</b>—Specifies request or reply. Available options are any, request or reply.</li> <li>◦ <b>arp_sender_mac_match</b>—Specifies arp sender MAC match. Available options are any or value 0-1.</li> <li>◦ <b>arp_type</b>—Specifies ARP parameters. Available options are any, arp, other, and rarp.</li> <li>◦ <b>ethernet</b>—Specifies Ethernet value. Available options are any or value 0-1.</li> <li>◦ <b>ip</b>—Specifies IP value. Available options are any or value 0-1.</li> <li>◦ <b>ip_length</b>—Specifies IP or Ethernet length value. Available options are any or value 0-1.</li> <li>◦ <b>rarp_target_mac_match</b>—Specifies rarp target mismatch. Available options are any or value 0-1.</li> <li>◦ <b>sip-filter</b>—Specifies source IP address field. Available options are any or <b>ip-subnet</b>. IP Subnet specify the host IP address and mask.</li> <li>◦ <b>tip-filter</b>—Specifies target IP address field. Available options are any or <b>ip-subnet</b>. IP Subnet specify the host IP address and mask.</li> </ul> </li> <li>◦ <b>ipv4</b>—Only ipv4 frames can match this ACE. Notice the ipv4 frames won't match the ACE with ethernet type.       <ul style="list-style-type: none"> <li>◦ <b>dip_filter</b>—Specifies destination IP address field. Available options are any</li> </ul> </li> </ul>



Command or Action	Purpose
	<p>or <b>ipv4-subnet</b>. IP Subnet specify the host IP address and mask.</p> <ul style="list-style-type: none"> <li>◦ <b>dmac_filter</b>—Specifies destination MAC address field. DMAC type includes, any/unicast/multicast/broadcast.</li> <li>◦ <b>ip_protocol_filter</b>—Specifies IP protocol filter.                             <ul style="list-style-type: none"> <li>◦ <b>icmp</b>—Specifies frame type of IPv6 ICMP. You can configure code-filter, IP-fragment field, IP option field, IP TTL field and ICMP type field.</li> <li>◦ <b>other</b>—Specifies protocol value. Allowed range is 0,2-5,7-16,18-255 .</li> <li>◦ <b>tcp</b>—Specifies frame type of IPv6 TCP. You can configure following parameters :                                     <ul style="list-style-type: none"> <li>◦ <b>dest_port_filter</b> — TCP destination port field</li> <li>◦ <b>ip_fragment</b> — IP fragment field</li> <li>◦ <b>ip_option</b> — IP option field</li> <li>◦ <b>ip_ttl</b> —IP TTL field</li> <li>◦ <b>src_port_filter</b> —TCP source port field</li> <li>◦ <b>tcp_ack</b> —TCP ack field</li> <li>◦ <b>tcp_fin</b> —TCP fin field</li> <li>◦ <b>tcp_psh</b> —TCP psh field</li> <li>◦ <b>tcp_rst</b>— TCP rst field</li> <li>◦ <b>tcp_syn</b>— TCP syn field</li> <li>◦ <b>tcp_urg</b> —TCP urg field</li> </ul> </li> <li>◦ <b>udp</b>—Specifies frame type of IPv6 UDP. You can configure code_filter and type_filter field.</li> </ul> </li> <li>◦ <b>sip-filter</b>—Specifies source IP address field. Available options are any or</li> </ul>

Command or Action	Purpose
	<p><b>ipv4-subnet.</b> IP Subnet specify the host IP address and mask.</p> <ul style="list-style-type: none"> <li>◦ <b>ipv6</b>—Only ipv6 frames can match this ACE. Notice the ipv6 frames won't match the ACE with ethernet type. <ul style="list-style-type: none"> <li>◦ <b>dmac_filter</b>—Specifies destination MAC address field. Available values are any/unicast/multicast/broadcast.</li> <li>◦ <b>hop_limit</b>—Specifies hop limit value. Available values are any and value ranges from 0-1.</li> <li>◦ <b>ip_protocol--ilter</b>—Specifies IP protocol filter. <ul style="list-style-type: none"> <li>◦ <b>icmp</b>—Specifies frame type of IPv6 ICMP. You can configure code-filter and type-filter field.</li> <li>◦ <b>other</b>—Specifiesnext_header_value value. Allowed range is 0-65535 .</li> <li>◦ <b>tcp</b>—Specifies frame type of IPv6 TCP. You can configure following parameters : <ul style="list-style-type: none"> <li>◦ dest_port_filter — TCP destination port field</li> <li>◦ src_port_filter —TCP source port field</li> <li>◦ tcp_ack —TCP ack field</li> <li>◦ tcp_fin —TCP fin field</li> <li>◦ tcp_psh —TCP psh field</li> <li>◦ tcp_rst— TCP rst field</li> <li>◦ tcp_syn— TCP syn field</li> <li>◦ tcp_urg —TCP urg field</li> </ul> </li> <li>◦ <b>udp</b>—Specifies frame type of IPv6 UDP. You can configure dest_port_filter and src_port_filter.</li> </ul> </li> </ul> </li> <li>• <b>ingress_port</b>—Select the ingress port for which this ACE applies.</li> </ul>

Command or Action	Purpose
	<ul style="list-style-type: none"> <li>◦ <b>any</b> —No policy filter is specified. (policy filter status is "don't-care".)</li> <li>◦ <b>intf_range</b> —If you want to filter a specific policy with this ACE, choose this value. Two field for entering an policy value and bitmask appears. Select an Interface Number/Range [1-6]/1,2,3,4,5,6</li> <li>• <b>logging</b>—Specify the logging operation of the ACE. Notice that the logging message doesn't include the 4 bytes CRC information.             <ul style="list-style-type: none"> <li>◦ <b>enable</b> —Frames matching the ACE are stored in the System Log.</li> <li>◦ <b>disable</b> —Frames matching the ACE are not logged.</li> </ul> </li> <li><b>Note</b>     The logging feature only works when the packet length is less than 1518(without VLAN tags) and the System Log memory size and logging rate is limited.</li> <li>• <b>lookup</b>—Specify to enable or disable the second lookup operation of the ACE.</li> <li>• <b>mirror</b>—Specify the mirror operation of this port. Frames matching the ACE are mirrored to the destination mirror port. The rate limiter will not affect frames on the mirror port.             <ul style="list-style-type: none"> <li>◦ <b>enable</b> —Frames received on the port are mirrored.</li> <li>◦ <b>disable</b> —Frames received on the port are not mirrored. The default value is "Disabled".</li> </ul> </li> <li>• <b>next</b>—Specify the current ACE before the next ACE ID</li> <li>• <b>policy_filter</b>—Specify the policy number filter for this ACE.             <ul style="list-style-type: none"> <li>◦ <b>any</b> —No policy filter is specified. (policy filter status is "don't-care".)</li> <li>◦ <b>specific</b> —If you want to filter a specific policy with this ACE, choose this value. Two field for entering an policy value and bitmask appears.</li> </ul> </li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• <b>rate_limiter</b>—Specify the rate limiter in number of base units. The allowed range is 1 to 16. Disabled indicates that the rate limiter operation is disabled.</li> <li>• <b>shutdown</b>—Specify the port shut down operation of the ACE. <ul style="list-style-type: none"> <li>◦ <b>enable</b> —If a frame matches the ACE, the ingress port will be disabled.</li> <li>◦ <b>disable</b> —Port shut down is disabled for the ACE.</li> </ul> </li> </ul> <p><b>Note</b> The shutdown feature only works when the packet length is less than 1518(without VLAN tags).</p> <ul style="list-style-type: none"> <li>• <b>tag_priority</b>—Specifies tag priority.</li> <li>• <b>vid</b>—Specifies vid.</li> </ul> <p><b>Note</b> EVC policer and rate limiter can not be configured at the same time .</p>
<b>Step 5</b>	<b>setaclglobalconfig review</b>  <b>Example:</b> Switch(config-controller-SecurityACL)# setaclglobalconfig review	Displays the configuration.
<b>Step 6</b>	<b>setaclglobalconfig commit</b>  <b>Example:</b> Switch(config-controller-SecurityACL)# setaclglobalconfig commit	Sends the configuration to the controller.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-SecurityACL)# exit	Exits to the config-controller mode.

### Configuration Example

```
Switch(config-controller-SecurityACL)# configure terminal
SwitchsetACLGlobalConfig ace-global-config ace-id 30
setACLGlobalConfig ace-global-config ace-enable enable
setACLGlobalConfig ace-global-config lookup enable
setACLGlobalConfig ace-global-config lookup enable
setACLGlobalConfig ace-global-config ingress-port intf-range 3-4
setACLGlobalConfig ace-global-config policy-filter policy-value 4
setACLGlobalConfig ace-global-config frame-type ethernet-type dmac-filter specific
00-00-00-00-10-01
setACLGlobalConfig ace-global-config frame-type ethernet-type smac-filter specific
00-00-00-00-20-02
setACLGlobalConfig ace-global-config action permit
```

```

setACLGlobalConfig ace-global-config ace-id 30
setACLGlobalConfig ace-global-config ace-enable enable
setACLGlobalConfig ace-global-config lookup enable
setACLGlobalConfig ace-global-config lookup enable
setACLGlobalConfig ace-global-config ingress-port intf-range 3-4
setACLGlobalConfig ace-global-config policy-filter policy-value 4
setACLGlobalConfig ace-global-config frame-type ethernet-type dmac-filter specific
00-00-00-00-10-01
setACLGlobalConfig ace-global-config frame-type ethernet-type smac-filter specific
00-00-00-00-20-02
setACLGlobalConfig ace-global-config action permit
setACLGlobalConfig ace-global-config evc-policer policer-id 10
setACLGlobalConfig ace-global-config mirror disable
setACLGlobalConfig ace-global-config shutdown disable
setACLGlobalConfig ace-global-config logging disable
whales1(config-controller-SecurityACL)#setaclglobalconfig commit
SetACLGlobalConfig Commit Success!!!

```

Mac acl rule :

```

setACLGlobalConfig ace_global_config ace_enable enable
setACLGlobalConfig ace_global_config ace_id 2
setACLGlobalConfig ace_global_config lookup enable
setACLGlobalConfig ace_global_config ingress_port intf_range 2-5
setACLGlobalConfig ace_global_config policy_filter policy_value 63
setACLGlobalConfig ace_global_config frame_type ethernet_type smac_filter specific
00-00-00-00-00-01
setACLGlobalConfig ace_global_config frame_type ethernet_type dmac_filter any
setACLGlobalConfig ace_global_config frame_type ethernet_type ether_type_filter specific
0xffff
setACLGlobalConfig ace_global_config dot1q_tag tagged
setACLGlobalConfig ace_global_config vid_vlan_value 80
setACLGlobalConfig ace_global_config tag_priority value 6-7
setACLGlobalConfig ace_global_config action deny redirect intf_range 6
setACLGlobalConfig ace_global_config evc_policer policer_id 2
setACLGlobalConfig ace_global_config logging enable
setACLGlobalConfig ace_global_config shutdown enable
setACLGlobalConfig ace_global_config mirror enable
setACLGlobalConfig review
setACLGlobalConfig commit

```

IP acl rule :

```

setACLGlobalConfig ace_global_config lookup enable
setACLGlobalConfig ace_global_config ace_enable enable
setACLGlobalConfig ace_global_config ace_id 3
setACLGlobalConfig ace_global_config policy_filter policy_value 62
setACLGlobalConfig ace_global_config frame_type ipv4 dip_filter any
setACLGlobalConfig ace_global_config frame_type ipv4 sip_filter ipv4_subnet 10.20.10.2/16
setACLGlobalConfig ace_global_config shutdown enable
setACLGlobalConfig ace_global_config mirror enable
setACLGlobalConfig ace_global_config frame_type ipv4 dmac_filter dmac_type broadcast
setACLGlobalConfig ace_global_config frame_type ipv4 ip_protocol_filter icmp code_filter
code_value 1
setACLGlobalConfig ace_global_config frame_type ipv4 ip_protocol_filter icmp type_filter
type_value 1
setACLGlobalConfig ace_global_config dot1q_tag tagged
setACLGlobalConfig ace_global_config vid_vlan_value 100
setACLGlobalConfig ace_global_config tag_priority value 5
setACLGlobalConfig ace_global_config action deny redirect intf_range 5
setACLGlobalConfig ace_global_config evc_policer policer_id 5
setACLGlobalConfig review
setACLGlobalConfig commit

```

ipv6 :

```

setACLGlobalConfig ace_global_config ace_enable enable
setACLGlobalConfig ace_global_config ace_id 55
setACLGlobalConfig ace_global_config policy_filter policy_value 63
setACLGlobalConfig ace_global_config ingress_port intf_range 2-3

```

```

setACLGlobalConfig ace_global_config frame_type ipv6 sip_filter specific ipv6_address
0:0:0:0:0:0:5
setACLGlobalConfig ace_global_config frame_type ipv6 dmac_filter dmac_type unicast
setACLGlobalConfig ace_global_config frame_type ipv6 hop_limit value 1
setACLGlobalConfig ace_global_config frame_type ipv6 ip_protocol_filter icmp code_filter
code_value 1
setACLGlobalConfig ace_global_config frame_type ipv6 ip_protocol_filter icmp type_filter
type_value 1
setACLGlobalConfig ace_global_config action deny redirect intf_range 4
setACLGlobalConfig ace_global_config mirror enable
setACLGlobalConfig ace_global_config rate_limiter value 10
setACLGlobalConfig review
setACLGlobalConfig commit

```

## Configuring Rate Limiter

### SUMMARY STEPS

1. **configure terminal**
2. **controller nid *1/NID\_ID***
3. **setaclrateLimiter**
4. **setaclrateLimiter acl\_rate\_limiter id | unit| { rate\_in\_kbps | rate\_in\_pps}**
5. **setaclrateLimiter review**
6. **setaclrateLimiter commit**
7. **exit**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid <i>1/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>setaclrateLimiter</b>  <b>Example:</b> Switch(config-controller)# setaclrateLimiter	Enters the applyACLtoport mode.
<b>Step 4</b>	<b>setaclrateLimiter acl_rate_limiter id   unit  { rate_in_kbps   rate_in_pps}</b>  <b>Example:</b> Switch(config-controller-SecurityACL)#setaclrateLimiter acl_rate_limiter ?	Configure the rate limiter for the of the switch. .  <ul style="list-style-type: none"> <li>• <b>id</b>—The rate limiter ID for the settings contained in the same row and its range is 1 to 16.</li> </ul>

	Command or Action	Purpose
	<pre>id    Rate limiter ID unit  Specify Unit and rate value</pre>	<ul style="list-style-type: none"> <li><b>unit</b> —Specify the rate unit. The allowed values are: pps: packets per second. kbps: Kbits per second.</li> </ul>
<b>Step 5</b>	<p><b>setaclrateLimiter review</b></p> <p><b>Example:</b> Switch(config-controller-SecurityACL)# setaclrateLimiter review</p>	Displays the configuration.
<b>Step 6</b>	<p><b>setaclrateLimiter commit</b></p> <p><b>Example:</b> Switch(config-controller-SecurityACL)# setaclrateLimiter commit</p>	Sends the configuration to the controller.
<b>Step 7</b>	<p><b>exit</b></p> <p><b>Example:</b> Switch(config-controller-SecurityACL)# exit</p>	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionACL
Switch(config-controller-ProvisionACL)# SetACLRateLimiter acl_rate_limiter id 2
Switch(config-controller-ProvisionACL)# setACLRateLimiter acl_rate_limiter unit rate_in_kbps
10000

Switch(config-controller-ProvisionACL)# exit
```

## Applying ACL to Ports

### SUMMARY STEPS

1. **configure terminal**
2. **controller nid *I/NID\_ID***
3. **applyACLtoPort**
4. **applyACLtoPort acl\_port\_config { action\_deny { enable| disable} | evc\_policy { enable| evc\_policer\_id} | logging { enable| disable} | mirror { enable| disable} | policy { enable| policer\_id} | port\_number | rate\_limiter { disable| rate\_limiter\_id} | redirect { disable| intf\_range} | shutdown { enable| disable} }**
5. **applyACLtoPort review**
6. **applyACLtoPort commit**
7. **exit**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid <i>1/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>applyACLtoPort</b>  <b>Example:</b> Switch(config-controller)# applyACLtoPort	Enters the applyACLtoport mode.
<b>Step 4</b>	<b>applyACLtoPort acl_port_config { action_deny { enable  disable}   evc_policy { enable   evc_policer_id}   logging { enable  disable}   mirror { enable  disable}   policy { enable  policer_id}   port_number   rate_limiter { disable   rate_limiter_id}   redirect { disable  intf_range}   shutdown { enable  disable} }</b>  <b>Example:</b> Switch(config-controller-SecurityACL)#applyACLtoPort acl_port_config ? action_deny Access list action deny if enabled to true, else permit evc_policy EVC policer logging Logging frame information. mirror Mirror frame to destination mirror port policy Policy port_number Port Number rate_limiter Rate Limiter redirect Redirect frame to specific port shutdown Shutdown incoming port	Configure the ACL parameters of each switch port. These parameters will affect frames received on a port unless the frame matches a specific ACE. <ul style="list-style-type: none"> <li>• <b>action_deny</b>—Select whether forwarding is permitted ("Permit") or denied ("Deny"). The default value is "Permit". <ul style="list-style-type: none"> <li>◦ <b>enable</b> —Access list action deny if enabled to true, denies forwarding.</li> <li>◦ <b>disable</b> —Access list action deny if disabled, permits forwarding.</li> </ul> </li> <li>• <b>evc_policy</b> —Select which EVC policer ID to apply on this port. <ul style="list-style-type: none"> <li>◦ <b>enable</b> —Enabling evc_policy disable policer .</li> <li>◦ <b>evc_policer_id</b> —Enter an EVC Policy ID. The allowed values are Disabled or the values 1 through 1022.</li> </ul> </li> <li>• <b>logging</b> —Specify the logging operation of this port. Notice that the logging message doesn't include the 4 bytes CRC. <ul style="list-style-type: none"> <li>◦ <b>enable</b> —Frames received on the port are stored in the System Log.</li> <li>◦ <b>disable</b> —Frames received on the port are not logged.</li> </ul> </li> </ul>



	Command or Action	Purpose
		<p><b>Note</b> The default value is "Disabled". The logging feature only works when the packet length is less than 1518(without VLAN tags) and the System Log memory size and logging rate is limited.</p> <ul style="list-style-type: none"> <li>• <b>mirror</b> —Specify the mirror operation of this port.                             <ul style="list-style-type: none"> <li>◦ <b>enable</b> —Frames received on the port are mirrored.</li> <li>◦ <b>disable</b> —Frames received on the port are not mirrored.</li> </ul> </li> </ul> <p><b>Note</b> The default value is "Disabled".</p> <ul style="list-style-type: none"> <li>• <b>policy</b>—Select which EVC policer ID to apply on this port.                             <ul style="list-style-type: none"> <li>◦ <b>enable</b> —Enabling evc_policy disable policy..</li> <li>◦ <b>policy_id</b> —Enter an EVC Policy ID. The The allowed values are Disabled or the values 0 through 63.</li> </ul> </li> <li>• <b>port_number</b>—The logical port for the settings contained in the same row. .</li> <li>• <b>rate_limiter</b>—Select which rate limiter to apply on this port. The allowed values are Disabled or the values 1 through 16. The default value is "Disabled".</li> <li>• <b>redirect</b>—Select which port frames are redirected on. The allowed values are Disabled or a specific port number and it can't be set when action is permitted. The default value is "Disabled".                             <ul style="list-style-type: none"> <li>◦ <b>disable</b> —Disable direct.</li> <li>◦ <b>intf_range</b> —Interface number ranges from 1-6.</li> </ul> </li> <li>• <b>shutdown</b>—Specify the port shut down operation of this port.                             <ul style="list-style-type: none"> <li>◦ <b>enable</b> —To reopen ports by changing the volatile port configuration of the ACL user module.</li> <li>◦ <b>disable</b> —To close ports by changing the volatile port configuration of the ACL user module. The default value is "Enabled".</li> </ul> </li> </ul>

	Command or Action	Purpose
<b>Step 5</b>	<b>applyACLtoPort review</b>  <b>Example:</b> Switch(config-controller-SecurityACL) # applyACLtoPort review	Displays the configuration.
<b>Step 6</b>	<b>applyACLtoPort commit</b>  <b>Example:</b> Switch(config-controller-SecurityACL) # applyAclToPort commit	Sends the configuration to the controller.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-SecurityACL) # exit	Exits to the config-controller mode.

### Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionACL
Switch(config-controller-ProvisionACL)# applyACLtoPort acl_port_config port_number 3
applyACLtoPort acl_port_config evc_policy enable enable
applyACLtoPort acl_port_config evc_policy enable enable
applyACLtoPort acl_port_config evc_policy evc_policer_id 55
applyACLtoPort acl_port_config policy enable enable
applyACLtoPort acl_port_config policy policy_id 33
```

```
Switch(config-controller-ProvisionACL)# applyAclToPort commit
```

```
ApplyAclToPort Commit Success!!!
```

```
Switch(config-controller-ProvisionACL)# exit
```

## Viewing Access Control Entry

### SUMMARY STEPS

1. **configure terminal**
2. **controller nid 1/NID\_ID**
3. **SECURITYACL**
4. **getACLGlobalConfig get\_acl\_global\_config ace\_id**
5. **getaclglobalconfig review**
6. **setaclglobalconfig commit**
7. **exit**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid <i>1/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>SECURITYACL</b>  <b>Example:</b> Switch(config-controller)# SECURITYACL	Enters the SecurityACL mode.
Step 4	<b>getACLGlobalConfig get_acl_global_config ace_id</b>  <b>Example:</b> Switch(config-controller-SecurityACL)#setaclglobalconfig ace_global_config ? ace_enable Enable or disable ACE ace_id ACE ID action Access list action dot1q_tag Tag evc_policer EVC policer frame_type Frame Type ingress_port Ingress port logging Logging frame information lookup Second lookup mirror Mirror frame to destination mirror port next insert the current ACE before the next ACE ID policy_filter Policy rate_limiter Rate Limiter shutdown Shutdown incoming port tag_priority Tag priority vid VID field	Retrieves the ACL global configuration. <ul style="list-style-type: none"> <li>• <b>ace_id</b> —Specify a valid ACE ID. The available options are from 1-512.</li> </ul>
Step 5	<b>getaclglobalconfig review</b>  <b>Example:</b> Switch(config-controller-SecurityACL)# getaclglobalconfig review	Displays the configuration.
Step 6	<b>setaclglobalconfig commit</b>  <b>Example:</b> Switch(config-controller-SecurityACL)# getaclglobalconfig commit	Sends the configuration to the controller.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-SecurityACL)# exit	Exits to the config-controller mode.

### Configuration Example

```
Switch(config-controller-SecurityACL)# GetACLGlobalConfig_Output.ace_global_config.ace_id
= 30
GetACLGlobalConfig_Output.ace_global_config.ace_enable = true
GetACLGlobalConfig_Output.ace_global_config.lookup = true
GetACLGlobalConfig_Output.ace_global_config.ingress_port.t = 2
GetACLGlobalConfig_Output.ace_global_config.ingress_port.u.intf_range = '2-3'
GetACLGlobalConfig_Output.ace_global_config.policy_filter.t = 2
GetACLGlobalConfig_Output.ace_global_config.policy_filter.u.policy_value = 4
GetACLGlobalConfig_Output.ace_global_config.dot1q_tag.t = 1
GetACLGlobalConfig_Output.ace_global_config.dot1q_tag.u.any = 'any'
GetACLGlobalConfig_Output.ace_global_config.tag_priority.t = 1
GetACLGlobalConfig_Output.ace_global_config.tag_priority.u.any = 'any'
GetACLGlobalConfig_Output.ace_global_config.vid.t = 1
GetACLGlobalConfig_Output.ace_global_config.vid.u.any = 'any'
GetACLGlobalConfig_Output.ace_global_config.rate_limiter.t = 1
GetACLGlobalConfig_Output.ace_global_config.rate_limiter.u.disable = 'disable'
GetACLGlobalConfig_Output.ace_global_config.mirror = false
GetACLGlobalConfig_Output.ace_global_config.logging = false
GetACLGlobalConfig_Output.ace_global_config.shutdown = false
GetACLGlobalConfig_Output.ace_global_config.evc_policer.t = 1
GetACLGlobalConfig_Output.ace_global_config.evc_policer.u.disable = 'disable'
GetACLGlobalConfig_Output.ace_global_config.action.t = 2
GetACLGlobalConfig_Output.ace_global_config.action.u.deny.redirect.t = 1
GetACLGlobalConfig_Output.ace_global_config.action.u.deny.redirect.u.disable = '0'
GetACLGlobalConfig_Output.ace_global_config.frame_type.t = 2
GetACLGlobalConfig_Output.ace_global_config.frame_type.u.ethernet_type.smac_filter.t = 2
GetACLGlobalConfig_Output.ace_global_config.frame_type.u.ethernet_type.smac_filter.u.specific
= '00-00-00-00-20-02'
GetACLGlobalConfig_Output.ace_global_config.frame_type.u.ethernet_type.dmac_filter.t = 1
GetACLGlobalConfig_Output.ace_global_config.frame_type.u.ethernet_type.dmac_filter.u.specific
= '00-00-00-00-10-01'
GetACLGlobalConfig_Output.ace_global_config.frame_type.u.ethernet_type.ethertype_filter.t
= 1
GetACLGlobalConfig_Output.ace_global_config.frame_type.u.ethernet_type.ethertype_filter.u.any
= 'default'
GetACLGlobalConfig_Output.ace_global_config.next.t = 3
GetACLGlobalConfig_Output.ace_global_config.next.u.disable = 'disable'
```

## Viewing ACL Rate Limiter

### SUMMARY STEPS

1. **configure terminal**
2. **controller nid *1/NID\_ID***
3. **getaclrateLimiter**
4. **getaclrateLimiter get\_acl\_rate\_limiter id | unit| { rate\_in\_kbps | rate\_in\_pps}**
5. **getaclrateLimiter review**
6. **getaclrateLimiter commit**
7. **exit**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid</b> <i>1/NID_ID</i>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>getaclrateLimiter</b>  <b>Example:</b> Switch(config-controller)# getaclrateLimiter	Enters the applyACLtoport mode.
Step 4	<b>getaclrateLimiter get_acl_rate_limiter id   unit</b> { <b>rate_in_kbps   rate_in_pps</b> }  <b>Example:</b> Switch(config-controller-SecurityACL)#getaclrateLimiter get_acl_rate_limiter ? rate_id Rate limiter ID	Configure the rate limiter for the of the switch. .  <ul style="list-style-type: none"> <li>• <b>id</b>—The rate limiter ID for the settings contained in the same row and its range is 1 to 16.</li> <li>• <b>unit</b> —Specify the rate unit. The allowed values are: pps: packets per second. kbps: Kbits per second.</li> </ul>
Step 5	<b>getaclrateLimiter review</b>  <b>Example:</b> Switch(config-controller-SecurityACL)# getaclrateLimiter review	Displays the configuration.
Step 6	<b>getaclrateLimiter commit</b>  <b>Example:</b> Switch(config-controller-SecurityACL)# getaclrateLimiter commit	Sends the configuration to the controller.
Step 7	<b>exit</b>  <b>Example:</b> Switch(config-controller-SecurityACL)# exit	Exits to the config-controller mode.

## Configuration Example

```
Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionACL
Switch(config-controller-ProvisionACL)# getACLrateLimiter commit
GetACLRateLimiter_Output.acl_rate_limiter.id = 2
GetACLRateLimiter_Output.acl_rate_limiter.unit.t = 2
GetACLRateLimiter_Output.acl_rate_limiter.unit.u.rate_in_kbps = 10000
```

```
GetACLRateLimiter Commit Success!!!
```

```
Switch(config-controller-ProvisionACL)# exit
```

## Viewing ACL Ports

### SUMMARY STEPS

1. **configure terminal**
2. **controller nid *1/NID\_ID***
3. **getaclportConfig**
4. **getaclportConfig get\_acl\_port\_config port port\_number**
5. **ggetaclportConfig review**
6. **getaclportConfig commit**
7. **exit**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid <i>1/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>getaclportConfig</b>  <b>Example:</b> Switch(config-controller)# getaclportConfig	Enters the applyACLtoport mode.
<b>Step 4</b>	<b>getaclportConfig get_acl_port_config port port_number</b>  <b>Example:</b> Switch(config-controller-SecurityACL)#getaclportConfig get_acl_port_config port? port_number Port Number	Configure the ACL parameters of each switch port. These parameters will affect frames received on a port unless the frame matches a specific ACE.  • <b>port_number</b> —The logical port for the settings contained in the same row. .
<b>Step 5</b>	<b>ggetaclportConfig review</b>  <b>Example:</b> Switch(config-controller-SecurityACL)# getaclportConfig review	Displays the configuration.

	Command or Action	Purpose
<b>Step 6</b>	<b>getaclportConfig commit</b>  <b>Example:</b> Switch(config-controller-SecurityACL)# getaclportConfig commit	Sends the configuration to the controller.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-SecurityACL)# exit	Exits to the config-controller mode.

### Configuration Example

```

Switch# configure terminal
Switch(config)# controller nid 1/1
Switch(config-controller)# ProvisionACL
Switch(config-controller-ProvisionACL)# GetACLPortConfig_Output.acl_port_config.port_number
= 3
GetACLPortConfig_Output.acl_port_config.action_deny = false
GetACLPortConfig_Output.acl_port_config.policy.enable = true
GetACLPortConfig_Output.acl_port_config.policy.policy_id = 33
GetACLPortConfig_Output.acl_port_config.rate_limiter.t = 2
GetACLPortConfig_Output.acl_port_config.rate_limiter.u.rate_limiter_id = 18
GetACLPortConfig_Output.acl_port_config.evc_policy.enable = true
GetACLPortConfig_Output.acl_port_config.evc_policy.evc_policer_id = 55
GetACLPortConfig_Output.acl_port_config.mirror = false
GetACLPortConfig_Output.acl_port_config.logging = false
GetACLPortConfig_Output.acl_port_config.shutdown = false
GetACLPortConfig_Output.acl_port_config.redirect.t = 1
GetACLPortConfig_Output.acl_port_config.redirect.u.disable = true

GetACLPortConfig Commit Success!!!

Switch(config-controller-ProvisionACL)# exit

```







## Multicast Vlan Register

Multicast Vlan Register (MVR) allows a subscriber on a device port to register/ unregister subscription of the multicast stream on the network-wide multicast VLAN. For example, television channels over a service provider network. It allows a single multicast VLAN to be shared on the network while subscribers remain in separate VLANs. The MVR group address required by the subscriber thus forms the VLAN trunk. To select the expected group address for an MVR VLAN requires cooperation from an IPMC profile. MVR has the following three kinds of port roles.

- Source ports indicate where the multicasting servers are located. Source ports are also known as Uplink ports.
- Receiver ports indicate where the multicast listeners are located. Receiver ports are also known as Downlink ports.
- Inactive ports denote that MVR operations on the designated ports are disabled.

A switch port may be a source port, a receiver port, or an inactive port in an MVR VLAN per system, and it must stay in the same port role for multiple MVR VLANs.

- [IPMC Profile, page 665](#)

## IPMC Profile

IPMC provides IPMC profile, an access control on registration. IPMC profile manages permissions in multicast registration for group tables. An IPMC profile provides the rules for specific group addresses to decide whether or not the multicast registration should happen. The concept of an IPMC profile is similar to that of an ACL that gives permission by checking the given rules in a specific order. An IPMC profile is constructed with address range rules where the first matching condition takes effect.

## Configuring IPMC and MVR Global administration

### SUMMARY STEPS

1. **configure terminal**
2. **controller nid 1/NID\_ID**
3. **IPMCMVR**
4. **setIPMC\_MVRglobal**
5. **setIPMC\_MVRglobal setIPMC\_MVRglobalreq {IPMC | MVR }**
6. **setIPMC\_MVRglobal review**
7. **setIPMC\_MVRglobal commit**
8. **setIPMC\_MVRglobal exit**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>IPMCMVR</b>  <b>Example:</b> Switch (config-controller)#IPMCMVR	Enters Cisco MVR template services mode.
<b>Step 4</b>	<b>setIPMC_MVRglobal</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# setIPMC_MVRglobal	Enters IPMC and MVR global configuration mode.
<b>Step 5</b>	<b>setIPMC_MVRglobal setIPMC_MVRglobalreq {IPMC   MVR }</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# setIPMC_MVRglobal  Switch( config-controller-IPMC_MVR)# ssetIPMC-MVRglobal setIPMC_MVRglobalreq Switch( config-controller-IPMC_MVR)# ssetIPMC_MVRglobal setIPMC_MVRglobalreq IPMC enable Switch( config-controller-IPMC_MVR)# ssetIPMC_MVRglobal setIPMC_MVRglobalreq MVR enable	<ul style="list-style-type: none"> <li>• <b>IPMC</b>— Enabling IPMC status makes the IPMC global configuration to make an entry in the NID. You can either enable or disable IPMC configuration at the NID.</li> <li>• <b>MVR</b>— Enabling MVR status makes the MVR global configuration to make an entry in the NID. You can either enable or disable IPMC configuration at the NID.</li> </ul>

	Command or Action	Purpose
<b>Step 6</b>	<b>setIPMC_MVRglobal review</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# setIPMC_MVRglobal review	Displays IPMC or MVR configuration in the queue.
<b>Step 7</b>	<b>setIPMC_MVRglobal commit</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# setIPMC_MVRglobal commit	Sends IPMC or MVR configuration to the NID.
<b>Step 8</b>	<b>setIPMC_MVRglobal exit</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# setIPMC_MVRglobal exit	Exists IPMC and MVR global configuration mode..

## Creating IP Multicast Entry Range

### SUMMARY STEPS

1. **configure terminal**
2. **controller nid 1/NID\_ID**
3. **IPMCMVR**
4. **setIPMCentryrange**
5. **setIPMCentryrange setprofilerangereq { end-address | entry\_name | start-address | status }**
6. **setIPMCentryrange review**
7. **setIPMCentryrange commit**
8. **setIPMCentryrange exit**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.

	Command or Action	Purpose
<b>Step 3</b>	<b>IPMCMVR</b>  <b>Example:</b> Switch (config-controller)#IPMCMVR	Enters Cisco MVR template services mode.
<b>Step 4</b>	<b>setIPMCentryrange</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# setIPMCentryrange	Enters IPMC entry range configuration mode.
<b>Step 5</b>	<b>setIPMCentryrange setproflerangereq { end-address   entry_name   start-address   status }</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# setIPMCentryrange  Switch( config-controller-IPMC_MVR)# setIPMCentryrange setproflerangereq Switch( config-controller-IPMC_MVR)# setIPMCentryrange setproflerangereq end_address Switch( config-controller-IPMC_MVR)# setIPMCentryrange setproflerangereq entry_name Switch( config-controller-IPMC_MVR)# setIPMCentryrange setproflerangereq start address Switch( config-controller-IPMC_MVR)# setIPMCentryrange setproflerangereq status	<ul style="list-style-type: none"> <li>• <b>end-address</b>— Enter a valid IPv4 or IPv6 address for multi cast end address range.</li> <li>• <b>start_address</b>— Enter a valid IPv4 or IPv6 address for multi cast start address range.</li> <li>• <b>entry_name</b>— Enter IPMC range entry name. The length of the name should not exceed 16 character.</li> <li>• <b>status</b>— Enabling status makes the multicast range configuration to make an entry in the NID. You can either enable or disable multicast range configuration.</li> </ul>
<b>Step 6</b>	<b>setIPMCentryrange review</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# setIPMCentryrange review	Displays IPMC entry range configuration in the queue.
<b>Step 7</b>	<b>setIPMCentryrange commit</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# setIPMCentryrange commit	Sends IPMC entry range configuration to the NID.
<b>Step 8</b>	<b>setIPMCentryrange exit</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# setIPMCentryrange exit	Exists IPMC entry range configuration mode.

## Configuring IPMC Profile

### SUMMARY STEPS

1. **configure terminal**
2. **controller nid 1/NID\_ID**
3. **IPMCMVR**
4. **setprofileIPMC**
5. **setprofileIPMC setIPMCprofileConfig {description | profile\_name | range\_profile { range\_name | range\_rules { deny\_logDisable | deny\_logEnable | permit\_logDisable | permit\_logDisable} } | status }**
6. **setprofileIPMC review**
7. **setprofileIPMC commit**
8. **setprofileIPMC exit**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>IPMCMVR</b>  <b>Example:</b> Switch (config-controller)#IPMCMVR	Enters Cisco MVR template services mode.
<b>Step 4</b>	<b>setprofileIPMC</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# setprofileIPMC	Enters IPMC profile configuration mode.
<b>Step 5</b>	<b>setprofileIPMC setIPMCprofileConfig {description   profile_name   range_profile { range_name   range_rules { deny_logDisable   deny_logEnable   permit_logDisable   permit_logDisable} }   status }</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# setprofileIPMC  Switch( config-controller-IPMC_MVR)# setprofileIPMC setIPMCprofileConfig Switch( config-controller-IPMC_MVR)#	<ul style="list-style-type: none"> <li>• <b>description</b>— Enter a brief description about the profile.</li> <li>• <b>profile_name</b>— Enter a profile name.</li> <li>• <b>range_profile</b>— Enter name and rule for IPMC profile. <ul style="list-style-type: none"> <li>• <b>range_name</b>— Enter a range name. The character of range name should be 16.</li> </ul> </li> </ul>

	Command or Action	Purpose
	<pre>setprofileIPMC setIPMCprofileConfig description Switch( config-controller-IPMC_MVR)# setprofileIPMC setIPMCprofileConfig profile_name Switch( config-controller-IPMC_MVR)# setprofileIPMC setIPMCprofileConfig range_profile Switch( config-controller-IPMC_MVR)# setprofileIPMC setIPMCprofileConfig status</pre>	<ul style="list-style-type: none"> <li>• <b>range_rules</b>— Enter a range rules for IPMC profile.</li> <li>• <b>deny_logDisable</b> — Deny matching addresses.</li> <li>• <b>deny_logEnable</b> — Deny matching addresses and Log when matching.</li> <li>• <b>permit_logDisable</b> — Permit matching addresses.</li> <li>• <b>permit_logEnable</b> — Permit matching addresses and Log when matching.</li> </ul> <p>• <b>status</b>— Enabling status makes the multicast range configuration to make an entry in the NID. You can either enable or disable multicast range configuration.</p> <p><b>Note</b> To configure IPMC Profile, it is mandatory to configure <b>entry_name</b> and <b>range_name</b> parameters.</p>
<b>Step 6</b>	<p><b>setprofileIPMC review</b></p> <p><b>Example:</b> Switch( config-controller-IPMC_MVR)# setprofileIPMC review</p>	Displays IPMC profile in the queue.
<b>Step 7</b>	<p><b>setprofileIPMC commit</b></p> <p><b>Example:</b> Switch( config-controller-IPMC_MVR)# setprofileIPMC commit</p>	Sends IPMC profile configuration to the NID.
<b>Step 8</b>	<p><b>setprofileIPMC exit</b></p> <p><b>Example:</b> Switch( config-controller-IPMC_MVR)# setprofileIPMC exit</p>	Exists IPMC profile configuration mode.

# Configuring MVR Global

## SUMMARY STEPS

1. **configure terminal**
2. **controller nid 1/NID\_ID**
3. **IPMCMVR**
4. **setglobalMVRConfig**
5. **setglobalMVRConfig setMVRglobalconfig {VLAN\_Name | channel\_name | frame { priority | tagged } | igmp\_address | last\_member\_query\_interval | mode { compatible | dynamic} vlan\_id status}**
6. **setglobalMVRConfig review**
7. **setglobalMVRConfig commit**
8. **setglobalMVRConfig exit**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>IPMCMVR</b>  <b>Example:</b> Switch (config-controller)#IPMCMVR	Enters Cisco MVR template services mode.
Step 4	<b>setglobalMVRConfig</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# setglobalMVRConfig	Enters MVR global configuration mode.
Step 5	<b>setglobalMVRConfig setMVRglobalconfig {VLAN_Name   channel_name   frame { priority   tagged }   igmp_address   last_member_query_interval   mode { compatible   dynamic} vlan_id status}</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# setglobalMVRConfig Switch( config-controller-IPMC_MVR)# setglobalMVRConfig setMVRglobalconfig Switch( config-controller-IPMC_MVR)# setglobalMVRConfig setMVRglobalconfig VLAN_Name	<ul style="list-style-type: none"> <li>• <b>VLAN_Name</b>— Enter MVR multicast VLAN name</li> <li>• <b>frame</b>— <ul style="list-style-type: none"> <li>• <b>Priority</b>— Enter interface CoS priority. Configurable values are 0-7.</li> <li>• <b>tagged</b>— Enabling frame status makes the IGMP/MLD frames configuration to make an entry in the NID. You can either enable or disable tagged configuration at the NID. .</li> </ul> </li> </ul>

	Command or Action	Purpose
	<pre>Switch( config-controller-IPMC_MVR)# setglobalMVRConfig setMVRglobalconfig channel_name  Switch( config-controller-IPMC_MVR)# setglobalMVRConfig setMVRglobalconfig frame Switch( config-controller-IPMC_MVR)# setglobalMVRConfig setMVRglobalconfig igmp_address  Switch( config-controller-IPMC_MVR)# setglobalMVRConfig setMVRglobalconfig last_member_query_interval Switch( config-controller-IPMC_MVR)# setglobalMVRConfig setMVRglobalconfig mode Switch( config-controller-IPMC_MVR)# setglobalMVRConfig setMVRglobalconfig vlan_id Switch( config-controller-IPMC_MVR)# setglobalMVRConfig setMVRglobalconfig status</pre>	<ul style="list-style-type: none"> <li>• <b>igmp_address</b>— Enter a valid IPv4 unicast address.</li> <li>• <b>last-member_query_interval</b>— Enter a last member query interval in tenths of seconds. The configurable value range is 0 - 31744.</li> <li>• <b>mode</b>— <ul style="list-style-type: none"> <li>• <b>compatible</b>— Select enable or disable for compatible interface mode.</li> <li>• <b>dynamic</b>— Select enable or disable for dynamic interface mode.</li> </ul> </li> <li>• <b>vlan_id</b>— Enter a MVR Multicast vlan id. The valid range is 1-4095.</li> <li>• <b>Status</b>— Enabling status makes the MVR global configuration to make an entry in the NID. You can either enable or disable MVR global configuration.</li> </ul> <p><b>Note</b> To configure MVR GLOBAL, it is mandatory to configure <b>vlan_name</b> and <b>vlan_id</b> parameters while configuring profile.</p> <p><b>Note</b> There is a particular <b>vlan-name</b> for the corresponding <b>vlan_id</b> as stored in ME1200 NID. You can not configure if <b>vlan_name</b> and <b>vlan-id</b> mismatches as previously configured value.</p>
<b>Step 6</b>	<p><b>setglobalMVRConfig review</b></p> <p><b>Example:</b></p> <pre>Switch( config-controller-IPMC_MVR)# setglobalMVRConfig review</pre>	Displays MVR global configuration in the queue.
<b>Step 7</b>	<p><b>setglobalMVRConfig commit</b></p> <p><b>Example:</b></p> <pre>Switch( config-controller-IPMC_MVR)# setglobalMVRConfig commit</pre>	Sends MVR global configuration to the NID.
<b>Step 8</b>	<p><b>setglobalMVRConfig exit</b></p> <p><b>Example:</b></p> <pre>Switch( config-controller-IPMC_MVR)# setglobalMVRConfig exit</pre>	Exists the MVR global configuration mode..



# Configuring MVR Port

## SUMMARY STEPS

1. **configure terminal**
2. **controller nid 1/NID\_ID**
3. **IPMCMVR**
4. **setMVRportconfig**
5. **setMVRportconfig setmvrportConfigReq {VLAN\_name | immediate\_leave | port\_number | type |status }**
6. **setMVRportconfig review**
7. **setMVRportconfig commit**
8. **setMVRportconfig exit**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>IPMCMVR</b>  <b>Example:</b> Switch (config-controller)#IPMCMVR	Enters Cisco MVR template services mode.
Step 4	<b>setMVRportconfig</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# setMVRportconfig	Enters MVR port configuration mode.
Step 5	<b>setMVRportconfig setmvrportConfigReq {VLAN_name   immediate_leave   port_number   type  status }</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# setMVRportconfig Switch( config-controller-IPMC_MVR)# setMVRportconfig setmvrportConfigReq Switch( config-controller-IPMC_MVR)# setMVRportconfig setmvrportConfigReq VLAN-name Switch( config-controller-IPMC_MVR)# setMVRportconfig setmvrportConfigReq immediate-leave	<ul style="list-style-type: none"> <li>• <b>VLAN_name</b>— Enter previously configured MVR multicast VLAN name.</li> <li>• <b>immediate_leave</b>— Enabling immediate leave implements immediate leave capability of the designated port.</li> <li>• <b>type</b>— <ul style="list-style-type: none"> <li>• <b>receiver</b>— Define if you want to configure the port as receiver.</li> </ul> </li> </ul>

	Command or Action	Purpose
	<pre>Switch( config-controller-IPMC_MVR) # setMVRportconfig setmvrportConfigReq port-number Switch( config-controller-IPMC_MVR) # setMVRportconfig setmvrportConfigReq status</pre>	<ul style="list-style-type: none"> <li>• <b>Source</b>— Define if you want to configure the port as a source .</li> <li>• <b>port_number</b>— Enter the targeted interface .</li> <li>• <b>status</b>— Enabling status makes MVR port configuration to make an entry in the NID. You can either enable or disable MVR port configuration.</li> </ul> <p><b>Note</b> To configure MVR Port, it is mandatory to configure <b>vlan_name</b> and <b>port_number</b> parameters .</p>
<b>Step 6</b>	<p><b>setMVRportconfig review</b></p> <p><b>Example:</b>  <pre>Switch( config-controller-IPMC_MVR) # setMVRportconfig review</pre></p>	Displays MVR port configuration in the queue.
<b>Step 7</b>	<p><b>setMVRportconfig commit</b></p> <p><b>Example:</b>  <pre>Switch( config-controller-IPMC_MVR) # setMVRportconfig commit</pre></p>	Sends MVR port configuration to the NID.
<b>Step 8</b>	<p><b>setMVRportconfig exit</b></p> <p><b>Example:</b>  <pre>Switch( config-controller-IPMC_MVR) # setMVRportconfig exit</pre></p>	Exists MVR port configuration mode.

## Viewing IPMC and MVR Global configuration

### SUMMARY STEPS

1. **configure terminal**
2. **controller nid /NID\_ID**
3. **IPMCMVR**
4. **getIPMC\_MVRglobal**
5. **getIPMC\_MVRglobal getIPMC\_MVRglobalreq**
6. **getIPMC\_MVRglobal review**
7. **setIPMC\_MVRglobal commit**
8. **setIPMC\_MVRglobal exit**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>IPMCMVR</b>  <b>Example:</b> Switch (config-controller)#IPMCMVR	Enters Cisco MVR template services mode.
<b>Step 4</b>	<b>getIPMC_MVRglobal</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# setIPMC_MVRglobal	Enters IPMC and MVR global configuration mode.
<b>Step 5</b>	<b>getIPMC_MVRglobal getIPMC_MVRglobalreq</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# getIPMC-MVRglobal  Switch( config-controller-IPMC_MVR)# getIPMC-MVRglobal getIPMC-MVRglobalreq	Retrieves IPMC and MVR information using get command.
<b>Step 6</b>	<b>getIPMC_MVRglobal review</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# getIPMC-MVRglobal review	Displays IPMC or MVR configuration in the queue.
<b>Step 7</b>	<b>setIPMC_MVRglobal commit</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# getIPMC-MVRglobal commit	Sends IPMC or MVR configuration to the NID.
<b>Step 8</b>	<b>setIPMC_MVRglobal exit</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# setIPMC-MVRglobal exit	Exits IPMC and MVR global configuration mode..

## Viewing IPMC Entry Range

### SUMMARY STEPS

1. **configure terminal**
2. **controller nid *1/NID\_ID***
3. **IPMCMVR**
4. **getIPMCentryrange**
5. **getIPMCentryrange getprofilerangereq entry\_name**
6. **setIPMCentryrange review**
7. **setIPMCentryrange commit**
8. **getIPMCentryrange exit**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid <i>1/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>IPMCMVR</b>  <b>Example:</b> Switch (config-controller)#IPMCMVR	Enters Cisco MVR template services mode.
<b>Step 4</b>	<b>getIPMCentryrange</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# getIPMCentryrange	Enters IPMC entry range configuration mode.
<b>Step 5</b>	<b>getIPMCentryrange getprofilerangereq entry_name</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# getIPMCentryrange  Switch( config-controller-IPMC_MVR)# getIPMCentryrange getprofilerangereq	<ul style="list-style-type: none"> <li>• <b>entry_name</b>— Enter IPMC range entry name. The length of the name should not exceed 16 character.</li> </ul>
<b>Step 6</b>	<b>setIPMCentryrange review</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# getIPMCentryrange review	Displays IPMC entry range configuration in the queue.

	Command or Action	Purpose
<b>Step 7</b>	<b>setIPMCentryrange commit</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# getIPMCentryrange commit	Sends IPMC entry range configuration to the NID.
<b>Step 8</b>	<b>getIPMCentryrange exit</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# setIPMCentryrange exit	Exists IPMC entry range configuration mode.

## Viewing IPMC Profile

### SUMMARY STEPS

1. **configure terminal**
2. **controller nid 1/NID\_ID**
3. **IPMCMVR**
4. **getprofileIPMC**
5. **getprofileIPMC getIPMCprofileconfigreq profile\_name**
6. **getprofileIPMC review**
7. **getprofileIPMC commit**
8. **setprofileIPMC exit**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>IPMCMVR</b>  <b>Example:</b> Switch (config-controller)#IPMCMVR	Enters Cisco MVR template services mode.

	Command or Action	Purpose
<b>Step 4</b>	<b>getprofileIPMC</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# getprofileIPMC	Enters IPMC profile configuration mode.
<b>Step 5</b>	<b>getprofileIPMC getIPMCprofileconfigreq profile_name</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# getprofileIPMC Switch( config-controller-IPMC_MVR)# getprofileIPMC getIPMCprofileConfigreq Switch( config-controller-IPMC_MVR)# getprofileIPMC getIPMCprofileConfigreq profile-name	• <b>profile_name</b> — Enter a profile name.
<b>Step 6</b>	<b>getprofileIPMC review</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# getprofileIPMC review	Displays IPMC profile in the queue.
<b>Step 7</b>	<b>getprofileIPMC commit</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# getprofileIPMC commit	Sends IPMC profile configuration to the NID.
<b>Step 8</b>	<b>setprofileIPMC exit</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# getprofileIPMC exit	Exists IPMC profile configuration mode.

## Viewing MVR Global Configuration

### SUMMARY STEPS

1. **configure terminal**
2. **controller nid 1/NID\_ID**
3. **IPMCMVR**
4. **getglobalMVRConfig**
5. **getglobalMVRConfig getMVRglobalconfig VLAN\_Name**
6. **getglobalMVRConfig review**
7. **getglobalMVRConfig commit**
8. **getglobalMVRConfig exit**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
Step 2	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	<b>IPMCMVR</b>  <b>Example:</b> Switch (config-controller)#IPMCMVR	Enters Cisco MVR template services mode.
Step 4	<b>getglobalMVRConfig</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# getglobalMVRConfig	Enters MVR global configuration mode.
Step 5	<b>getglobalMVRConfig getMVRglobalconfig VLAN_Name</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# getglobalMVRConfig Switch( config-controller-IPMC_MVR)# getglobalMVRConfig getMVRglobalconfig Switch( config-controller-IPMC_MVR)# getglobalMVRConfig getMVRglobalconfig VLAN_Name	<ul style="list-style-type: none"> <li>• <b>VLAN_Name</b>— Enter MVR multicast VLAN name .</li> </ul>
Step 6	<b>getglobalMVRConfig review</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# getglobalMVRConfig review	Displays MVR global configuration in the queue.
Step 7	<b>getglobalMVRConfig commit</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# getglobalMVRConfig commit	Sends MVR global configuration to the NID.
Step 8	<b>getglobalMVRConfig exit</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# setglobalMVRConfig exit	Exists the MVR global configuration mode.

## Viewing MVR Port Configuration

### SUMMARY STEPS

1. **configure terminal**
2. **controller nid *1/NID\_ID***
3. **IPMCMVR**
4. **getMVRportconfig**
5. **getMVRportconfig getmvrportConfigReq {VLAN\_name | port-number }**
6. **getMVRportconfig review**
7. **getMVRportconfig commit**
8. **getMVRportconfig exit**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid <i>1/NID_ID</i></b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>IPMCMVR</b>  <b>Example:</b> Switch (config-controller)#IPMCMVR	Enters Cisco MVR template services mode.
<b>Step 4</b>	<b>getMVRportconfig</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# getMVRportconfig	Enters MVR port configuration mode.
<b>Step 5</b>	<b>getMVRportconfig getmvrportConfigReq {VLAN_name   port-number }</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR)# getMVRportconfig Switch( config-controller-IPMC_MVR)# getMVRportconfig getmvrportConfigReq Switch( config-controller-IPMC_MVR)# getMVRportconfig getmvrportConfigReq VLAN_name Switch( config-controller-IPMC_MVR)# getMVRportconfig getmvrportConfigReq port_number	<ul style="list-style-type: none"> <li>• <b>VLAN_name</b>— Enter previously configured MVR multicast VLAN name.</li> <li>• <b>port_number</b>— Enter the targeted interface .</li> </ul>



	Command or Action	Purpose
<b>Step 6</b>	<b>getMVRportconfig review</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR) # getMVRportconfig review	Displays MVR port configuration in the queue.
<b>Step 7</b>	<b>getMVRportconfig commit</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR) # getMVRportconfig commit	Sends MVR port configuration to the NID.
<b>Step 8</b>	<b>getMVRportconfig exit</b>  <b>Example:</b> Switch( config-controller-IPMC_MVR) # getMVRportconfig exit	Exits MVR port configuration mode.






# CHAPTER 35

## Double-tagged management VLAN using IVID parameter

This enhancement allows configuring double VLAN tag management for remote management over a single Ethernet service connection where management is done in one VLAN and customer traffic in another VLAN and both are carried over the same Ethernet virtual connection (EVC). Following example describes how double VLAN management works.

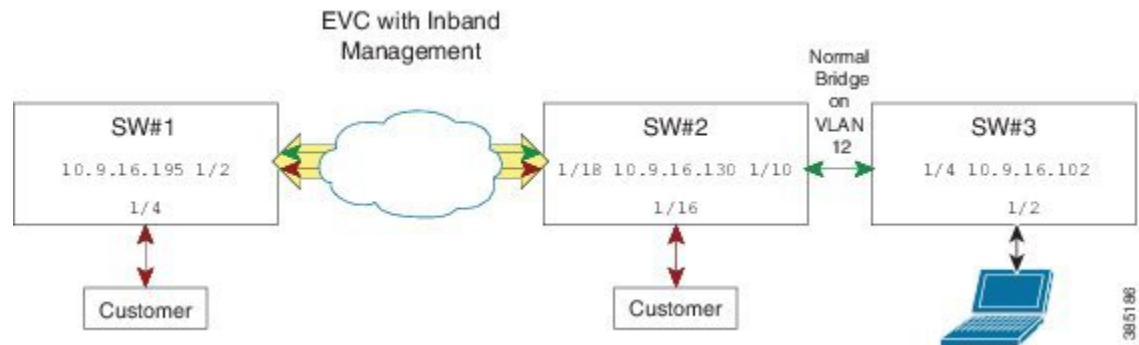

In the above diagram, switch SW1 is the remote node, managed through a single EVC carrying both customer and management traffic. SW2 is the end point for the EVC from where customer EVC and management traffic is carried as standard management VLAN (VLAN 12 in example) to SW3. Customer traffic is received on port GigabitEthernet 1/4 on SW1 and sent between SW1 and SW2.

- [Configuring Ethernet Virtual Circuit V2, page 684](#)
- [Configuring ECE V3, page 685](#)

# Configuring Ethernet Virtual Circuit V2

## SUMMARY STEPS

1. **configure terminal**
2. **controller nid 1/NID\_ID**
3. **ProvisionEVC**
4. **addEVC\_v2 createEvcConfig {instance | internal\_vid learning {enable | disable} | nni\_ports | nni\_vid | policer\_id | name | internal-vid }**
5. **addEVC\_v2 review**
6. **addEVC\_v2 commit**
7. **exit**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 2</b>	<b>controller nid 1/NID_ID</b>  <b>Example:</b> Switch(config)# controller nid 1/1	Enters the controller configuration mode.
<b>Step 3</b>	<b>ProvisionEVC</b>  <b>Example:</b> Switch (config-controller)# ProvisionEVC	Enters the ProvisionEVC mode.
<b>Step 4</b>	<b>addEVC_v2 createEvcConfig {instance   internal_vid learning {enable   disable}   nni_ports   nni_vid   policer_id   name   internal-vid }</b>  <b>Example:</b>  Switch(config-controller-ProvisionEVC)# addEVC-v2 createEvcConfig instance 1 Switch(config-controller-ProvisionEVC)#addEVC-v2 createEvcConfig nni-ports 2 Switch(config-controller-ProvisionEVC)# addEVC-v2 createEvcConfig learning enable Switch(config-controller-ProvisionEVC)#addEVC-v2 createEvcConfig nni-vid 100 Switch(config-controller-ProvisionEVC)#addEVC-v2 createEvcConfig internal-vid 100	Adds the EVE configuration.
<b>Step 5</b>	<b>addEVC_v2 review</b>  <b>Example:</b> Switch(config-controller-ProvisionEVC)# addEVC_v2 review	Reviews the addEVC configuration.

	Command or Action	Purpose
<b>Step 6</b>	<b>addEVC_v2 commit</b>  <b>Example:</b> Switch(config-controller-ProvisionEVC)# addEVC_v2 commit	Sends the addEVC configuration to the Cisco ME 1200 NID.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Switch(config-controller-ProvisionEVC)# exit Switch(config-controller)#	Exits to the controller configuration mode.

### Example

On SW1, 2 EVC instances are configured on NNI port GigabitEthernet 1/2. Both instances have VLAN ID (VID)=100, but EVC1 has an internal VID (IVID) = 100 while EVC2 has IVID=12 which is the management VID. This is achieved using addEVC-v2 operation in ProvisionEVC template.

```
(ProvisionEVC)# addEVC-v2 review
Commands in queue: 5
  addEVC_v2 createEvcConfig instance 1
  addEVC_v2 createEvcConfig nni-ports 2
  addEVC_v2 createEvcConfig learning enable
  addEVC_v2 createEvcConfig nni_vid 100
  addEVC_v2 createEvcConfig internal_vid 100
(ProvisionEVC)# addEVC-v2 commit
AddEVC_v2 Commit Success!!!

(ProvisionEVC)# addEVC_v2 review
Commands in queue: 5
  addEVC_v2 createEvcConfig instance 2
  addEVC_v2 createEvcConfig learning enable
  addEVC_v2 createEvcConfig nni_ports 2
  addEVC_v2 createEvcConfig nni_vid 100
  addEVC_v2 createEvcConfig internal_vid 12
(ProvisionEVC)# addEVC_v2 commit
AddEVC_v2 Commit Success!!!
```

## Configuring ECE V3

An EVC control entry (ECE) from UNI-NNI port is configured with outer tag 100 and inner tag 12. This is achieved using addECE-v3 operation in ProvisionEVC template.

## SUMMARY STEPS

1. configure terminal
2. controller nid 1/NID\_ID
3. ProvisionEVC
4. addECE\_v3
5. addECE\_v3 eceConfiguration\_v3 control action {class {disabled | specific *specific\_id*} | direction {both | nni\_to\_uni | uni\_to\_nni} | drop\_precedence {disabled | one | zero} | evc\_id {none | specific *specific\_eve\_id*} | policer\_id {discard | evc | none | specific *specific\_id*} | policy\_id *acl\_policy\_id* | tag\_pop\_count *tag\_pop\_count*} | rule\_type { both | rx | tx } | tx\_lookup { isdx | vid\_only | vid\_pcp }
6. addECE\_v3 eceConfiguration\_v3 control egress-inner-tag addECE ece\_configuration control egress\_inner\_tag {dei-mode | dei\_mode {classified | drop\_prec | fixed} | dei\_value *dei* | pcp\_mode {classified | fixed | mapped} | pcp\_value *pcp\_value* | type *type* | vlan\_id *vlan\_id*}
7. addECE ece\_configuration control egress\_outer\_tag {dei\_mode {classified | drop\_prec | fixed} | dei\_value *dei\_value* | mode {enabled | disabled} | pcp\_mode {classified | fixed | mapped} | pcp\_value *pcp\_value* | vlan\_id *vlan\_id*}
8. addECE ece\_configuration control ingress\_match {frame\_type {any | ipv4 {dest\_ip\_filter | source\_ip\_filter} | ipv6 {dest\_ip\_filter | source\_ip\_filter}} | inner\_tag\_match {match\_fields | match\_type} | mac\_params {dmac\_filer | smac\_filter} | outer\_tag\_match {match\_fields | match\_type} | uni\_ports {GigabitEthernet\_1\_UNI | GigabitEthernet\_2\_UNI | GigabitEthernet\_3\_UNI | GigabitEthernet\_4\_UNI | GigabitEthernet\_5\_UNI | GigabitEthernet\_6\_UNI}}
9. addECE review
10. addECE commit
11. exit

## DETAILED STEPS

	Command or Action	Purpose
Step 1	configure terminal  Example: Switch# configure terminal	Enters global configuration mode.
Step 2	controller nid 1/NID_ID  Example: Switch(config)# controller nid 1/1	Enters the controller configuration mode.
Step 3	ProvisionEVC  Example: Switch (config-controller) # ProvisionEVC	Enters the ProvisionEVC mode.
Step 4	addECE_v3  Example: Switch(config-controller-ProvisionEVC) # addECE_v3	Adds ECE configuration.

	Command or Action	Purpose
Step 5	<p><b>addECE_v3eceConfiguration_v3 control action</b> {class {disabled   specific <i>specific_id</i>}   direction {bothnni_to_uni   uni_to_nni}   drop_precedence {disabled   one   zero}   evc_id {none   specific <i>specific_evc_id</i>}   policer_id {discard   evc   none   specific <i>specific_id</i>}   policy_id <i>acl_policy_id</i>   tag_pop_count <i>tag_pop_count</i>}   rule_type { both   rx   tx}   tx_lookup { isdx   vid_only   vid_pcp}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions evc_id specific 7 Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions tag_pop_count 1 Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions policer_id specific 1 Switch(config-controller-ProvisionEVC)# addECE ece_configuration control actions class specific 4</pre>	<p>Adds the ECE control action configuration.</p> <ul style="list-style-type: none"> <li>• <b>class</b>—Specifies the ECE class.</li> <li>• <b>direction</b>—Specifies the direction of flow of traffic.</li> <li>• <b>drop_precedence</b>—Specifies the drop precedence (higher value means more dropping).</li> <li>• <b>evc_id</b>—Specifies the EVC ID. The valid <b>specific</b> values are from 1 to 1024.</li> <li>• <b>policer_id</b>—Specifies the policer ID. The valid <b>specific</b> values are from 1 to 1022.</li> <li>• <b>policy_id</b>—Specifies the ACL policy ID. The valid values are from 0 to 63.</li> <li>• <b>tag_pop_count</b>—Specifies the tagged VLAN count to be removed (either one or two outermost tags).</li> <li>• <b>rule_type</b>—Specifies a rule type.</li> <li>• <b>tx_lookup</b>—Specifies tx lookup.</li> </ul>
Step 6	<p><b>addECE_v3 eceConfiguration_v3 control egress-inner-tag</b>addECE ece_configuration control egress_inner_tag {dei-mode <i>dei_mode</i> {classified   drop_prec   fixed}   dei_value <i>dei</i>   pcp_mode {classified   fixed   mapped}   pcp_value <i>pcp_value</i>   type <i>type</i>   vlan_id <i>vlan_id</i>}</p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionEVC)# addECE ece_configuration control egress_inner_tag dei_mode classified Switch(config-controller-ProvisionEVC)# addECE ece_configuration control egress_inner_tag type none Switch(config-controller-ProvisionEVC)# addECE ece_configuration control egress_inner_tag vlan_id 3</pre>	<p>Adds the ECE control egress inner tag rewrite configuration.</p> <ul style="list-style-type: none"> <li>• <b>dei_mode</b>—Specifies the DEI mode—whether <b>classified</b>, <b>drop precedence</b>, or <b>fixed</b>.</li> <li>• <b>dei_value</b>—Specifies the DEI value. The valid values are 0 and 1.</li> <li>• <b>pcp_mode</b>—Specifies the PCP mode—whether <b>classified</b>, <b>fixed</b>, or <b>mapped</b>.</li> <li>• <b>pcp_value</b>—Specifies the PCP value. The valid values are from 1 to 7.</li> <li>• <b>type</b>—Specifies the type—whether <b>c-tagged</b>, <b>none</b>, <b>s-custom</b>, or <b>s-tagged</b>.</li> <li>• <b>vlan_id</b>—Specifies the VLAN ID. The valid values are from 1 to 4095.</li> </ul>
Step 7	<p><b>addECE ece_configuration control egress_outer_tag</b> {dei_mode {classified   drop_prec   fixed}   dei_value <i>dei_value</i>   mode {enabled   disabled}   pcp_mode {classified   fixed   mapped}   pcp_value <i>pcp_value</i>   vlan_id <i>vlan_id</i>}</p>	<p>Adds the ECE control egress outer tag rewrite configuration.</p> <ul style="list-style-type: none"> <li>• <b>dei_mode</b>—Specifies the DEI mode—whether <b>classified</b>, <b>drop precedence</b>, or <b>fixed</b>.</li> </ul>

	Command or Action	Purpose
	<p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionEVC)# addECE ece_configuration control egress_outer_tag pcp_mode fixed Switch(config-controller-ProvisionEVC)# addECE ece_configuration control egress_outer_tag pcp_value 4</pre>	<ul style="list-style-type: none"> <li>• <b>dei_value</b>—Specifies the DEI value. The valid values are 0 and 1.</li> <li>• <b>mode</b>—Specifies the mode—whether <b>enabled</b> or <b>disabled</b>.</li> <li>• <b>pcp_mode</b>—Specifies the PCP mode—whether <b>classified</b>, <b>fixed</b>, or <b>mapped</b>.</li> <li>• <b>pcp_value</b>—Specifies the PCP value. The valid values are from 1 to 7.</li> <li>• <b>vlan_id</b>—Specifies the VLAN ID. The valid values are from 1 to 4095.</li> </ul>
<b>Step 8</b>	<pre>addECE ece_configuration control ingress_match {frame_type {any   ipv4 {dest_ip_filter   source_ip_filter}   ipv6 {dest_ip_filter   source_ip_filter}}   inner_tag_match {match_fields   match_type}   mac_params {dmac_filer   smac_filter}   outer_tag_match {match_fields   match_type}   uni_ports {GigabitEthernet_1_UNI   GigabitEthernet_2_UNI   GigabitEthernet_3_UNI   GigabitEthernet_4_UNI   GigabitEthernet_5_UNI   GigabitEthernet_6_UNI}}</pre> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match uni_ports GigabitEthernet_2_UNI enable Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match outer_tag_match match_type c_tagged Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match outer_tag_match match_fields vlan_id_filter specific 100 Switch(config-controller-ProvisionEVC)# addECE ece_configuration control ingress_match outer_tag_match match_fields inner_pcp val_4-7</pre>	<p>Adds the ECE control ingress inner tag rewrite configuration.</p> <ul style="list-style-type: none"> <li>• <b>frame_type</b>—Specifies the type of frame relay.</li> <li>• <b>inner_tag_match</b>—Specifies the inner tag match value.</li> <li>• <b>mac_params</b>—Specifies the DMAC and SMAC default values.</li> <li>• <b>outer_tag_match</b>—Specifies the outer tag match value.</li> <li>• <b>uni_ports</b>—Specifies the GigabitEthernet UNI ports.</li> </ul>
<b>Step 9</b>	<p><b>addECE review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionEVC)# addECE_v3 review</pre>	Reviews the addECE configuration.
<b>Step 10</b>	<p><b>addECE commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionEVC)# addECE_v3 commit</pre>	Sends the configuration to the NID.



	Command or Action	Purpose
Step 11	<b>exit</b>  <b>Example:</b>  Switch(config-controller-ProvisionEVE)# exit Switch(config-controller)#	Exits to the controller configuration mode.

## Example

An EVC control entry (ECE) from UNI-NNI port is configured with outer tag 100 and inner tag 12. This is achieved using addECE-v3 operation in ProvisionEVC template.

```
(ProvisionEVC)# addECE-v3 review
Commands in queue: 7
  addECE_v3 eceConfiguration_v3 ece-id 5
  addECE_v3 eceConfiguration_v3 control egress_outer_tag mode enabled
  addECE_v3 eceConfiguration_v3 control egress_outer-tag vlan_id 100
  addECE_v3 eceConfiguration_v3 control egress_inner-tag type c_tagged
  addECE_v3 eceConfiguration_v3 control egress_inner-tag vlan_id 12
  addECE_v3 eceConfiguration_v3 control actions rule_type tx
  addECE_v3 eceConfiguration_v3 control actions evc-id specific 2
(ProvisionEVC)# addECE-v3 commit
AddECE_v3 Commit Success!!!
```

Another ECE entry is configured for NNI-UNI direction matching on same tags and popping off the two tags.

```
(ProvisionEVC)# addECE-v3 review
Commands in queue: 10
  addECE_v3 eceConfiguration_v3 ece-id 6
  addECE_v3 eceConfiguration_v3 control ingress_match outer_tag-match match_type
c_tagged
  addECE_v3 eceConfiguration_v3 control ingress_match outer_tag-match match_fields
vlan_id_filter specific 100
  addECE_v3 eceConfiguration_v3 control ingress_match inner_tag-match match_type
c_tagged
  addECE_v3 eceConfiguration_v3 control ingress_match inner_tag-match match_fields
vlan_id_filter specific 12
  addECE_v3 eceConfiguration_v3 control actions_rule_type rx
  addECE_v3 eceConfiguration_v3 control actions_evc-id specific 2
  addECE_v3 eceConfiguration_v3 control actions policer_id none

  addECE_v3 eceConfiguration_v3 control actions tag_pop_count 2
  addECE_v3 eceConfiguration_v3 control actions policy_id 1
(ProvisionEVC)# addECE-v3 commit
AddECE_v3 Commit Success!!!
```

For customer traffic coming on GigabitEthernet1/4 on, say VLAN 10, a third, bi-directional EVC control entry (ECE) is configured with VID=10

```
(ProvisionEVC)# addECE_v3 review
Commands in queue: 6
  addECE_v3 eceConfiguration_v3 ece_id 7
  addECE_v3 eceConfiguration_v3 control ingress_match uni-ports 4
  addECE_v3 eceConfiguration_v3 control ingress_match outer_tag_match match_type
tagged
  addECE_v3 eceConfiguration_v3 control ingress_match outer-tag-match match_fields
vlan_id_filter specific 10
  addECE_v3 eceConfiguration_v3 control actions policer_id none
  addECE_v3 eceConfiguration_v3 control actions policy-id 1
```

```
(ProvisionEVC)# addECE_v3 commit  
AddECE_v3 Commit Success!!!
```



# CHAPTER 36

## Configuring LAG Aggregation

### SUMMARY STEPS

1. ProvisionLacpPortType
2. setAggregationCfg aggPortConfig { aggEnabled | group | portNumber }
3. setAggregationCfg review
4. setAggregationCfg commit
5. setAggregationCfg exit

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>ProvisionLacpPortType</b></p> <p><b>Example:</b> Switch(config-controller)# ProvisionLacpPortType</p>	Enters the ProvisionLacpPortType mode.
Step 2	<p><b>setAggregationCfg aggPortConfig { aggEnabled   group   portNumber }</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType)# setAggregationCfg Switch(config-controller-ProvisionLacpPortType)# setAggregationCfg aggPortConfig Switch(config-controller-ProvisionLacpPortType)# setAggregationCfg aggPortConfig aggEnabled Switch(config-controller-ProvisionLacpPortType)# setAggregationCfg aggPortConfig group Switch(config-controller-ProvisionLacpPortType)# setAggregationCfg aggPortConfig portNumber</pre>	<p>Configures Static LAG aggregation on LACP mode.</p> <ul style="list-style-type: none"> <li>• <b>aggEnabled</b> <ul style="list-style-type: none"> <li>• <b>enable</b>—Enable static LAG group on interface.</li> <li>• <b>disable</b>—Disable static LAG group on interface.</li> </ul> </li> <li>• <b>group</b>—Configure aggregation group.</li> <li>• <b>portNumber</b>—Configure targeted interface on the controller .</li> </ul>

	Command or Action	Purpose
<b>Step 3</b>	<b>setAggregationCfg review</b>  <b>Example:</b>  Switch(config-controller-ProvisionLacpPortType) # <b>setAggregationCfg review</b>	Displays the LACP aggregation configuration on the controller .
<b>Step 4</b>	<b>setAggregationCfg commit</b>  <b>Example:</b>  Switch(config-controller-ProvisionLacpPortType) # <b>setAggregationCfg commit</b>	Sends the LACP aggregation configuration on the controller .
<b>Step 5</b>	<b>setAggregationCfg exit</b>  <b>Example:</b>  Switch(config-controller-ProvisionLacpPortType) # <b>setAggregationCfg exit</b>	Exists the LACP aggregation configuration mode.

- [Viewing LAG Aggregation Commands on the controller . , page 692](#)
- [Configuring LAG Traffic Distribution Mode, page 694](#)
- [Viewing LAG Traffic Distribution Mode, page 695](#)
- [Viewing Static Aggregation Group, page 696](#)

## Viewing LAG Aggregation Commands on the controller .

### SUMMARY STEPS

1. ProvisionLacpPortType
2. getAggregationCfg aggPortConfig lacpPhysicalPort
3. getAggregationCfg review
4. getAggregationCfg commit
5. getAggregationCfg exit

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>ProvisionLacpPortType</b>  <b>Example:</b> Switch(config-controller) # ProvisionLacpPortType	Enters the ProvisionLacpPortType mode.
Step 2	<b>getAggregationCfg aggPortConfig lacpPhysicalPort</b>  <b>Example:</b> Switch(config-controller-ProvisionLacpPortType) # getAggregationCfg Switch(config-controller-ProvisionLacpPortType) # getAggregationCfg aggPortConfig Switch(config-controller-ProvisionLacpPortType) # getAggregationCfg aggPortConfig lacpPhysicalPort	<ul style="list-style-type: none"> <li>• <b>lacpPhysicalPort</b>—Gets static aggregation request commands oncontroller .</li> </ul>
Step 3	<b>getAggregationCfg review</b>  <b>Example:</b> Switch(config-controller-ProvisionLacpPortType) # <b>getAggregationCfg review</b>	Displays the LAG aggregation commands on the controller .
Step 4	<b>getAggregationCfg commit</b>  <b>Example:</b> Switch(config-controller-ProvisionLacpPortType) # <b>GetAggregationCfg commit</b>	Sends the LAG aggregation configuration on the controller .
Step 5	<b>getAggregationCfg exit</b>  <b>Example:</b> Switch(config-controller-ProvisionLacpPortType) # <b>setAggregationCfg exit</b>	Exists the LACP aggregation configuration mode.

# Configuring LAG Traffic Distribution Mode

## SUMMARY STEPS

1. ProvisionLacpPortType
2. setAggregationMode aggModeConfig {dmac { enable | disable} | ip { enable | disable} | port { enable | disable} | smac { enable | disable} }
3. aggModeConfig review
4. aggModeConfig commit
5. aggModeConfig exit

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><b>ProvisionLacpPortType</b></p> <p><b>Example:</b> Switch(config-controller)# ProvisionLacpPortType</p>	Enters the ProvisionLacpPortType mode.
Step 2	<p><b>setAggregationMode aggModeConfig {dmac { enable   disable}   ip { enable   disable}   port { enable   disable}   smac { enable   disable} }</b></p> <p><b>Example:</b> Switch(config-controller-ProvisionLacpPortType)# setAggregationMode aggModeConfig Switch(config-controller-ProvisionLacpPortType)# setAggregationMode aggModeConfig dmac enable Switch(config-controller-ProvisionLacpPortType)# setAggregationMode aggModeConfig ip enable Switch(config-controller-ProvisionLacpPortType)# setAggregationMode aggModeConfig port enable Switch(config-controller-ProvisionLacpPortType)# setAggregationMode aggModeConfig smac enable</p>	<p>Configures traffic distribution mode.</p> <ul style="list-style-type: none"> <li>• <b>dmac</b> <ul style="list-style-type: none"> <li>• <b>enable</b>—Uses destination MAC address for traffic distribution.</li> <li>• <b>disable</b>—Does not use destination MAC address for traffic distribution.</li> </ul> </li> <li>• <b>ip</b> <ul style="list-style-type: none"> <li>• <b>enable</b>—Uses ip address for traffic distribution.</li> <li>• <b>disable</b>—Does not use ip address for traffic distribution.</li> </ul> </li> <li>• <b>port</b> <ul style="list-style-type: none"> <li>• <b>enable</b>—Uses ip port for traffic distribution.</li> <li>• <b>disable</b>—Does not use ip port for traffic distribution.</li> </ul> </li> <li>• <b>smac</b> <ul style="list-style-type: none"> <li>• <b>enable</b>—Uses source MAC address for traffic distribution.</li> <li>• <b>disable</b>—Does not use source MAC address for traffic distribution.</li> </ul> </li> </ul>

	Command or Action	Purpose
<b>Step 3</b>	<b>aggModeConfig review</b>  <b>Example:</b> <pre>Switch(config-controller-ProvisionLacpPortType)# aggModeConfig review</pre>	Displays the LACP aggregation configuration mode commands on the controller .
<b>Step 4</b>	<b>aggModeConfig commit</b>  <b>Example:</b> <pre>Switch(config-controller-ProvisionLacpPortType)# aggModeConfig commit</pre>	Sends the LACP aggregation mode configuration commands on the controller .
<b>Step 5</b>	<b>aggModeConfig exit</b>  <b>Example:</b> <pre>Switch(config-controller-ProvisionLacpPortType)# aggModeConfig exit</pre>	Exists the LACP aggregation configuration mode.

## Viewing LAG Traffic Distribution Mode

### SUMMARY STEPS

1. ProvisionLacpPortType
2. getAggregationMode aggModeConfigReq
3. getAggregationMode review
4. getAggregationMode commit
5. getAggregationMode exit

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>ProvisionLacpPortType</b>  <b>Example:</b> <pre>Switch(config-controller)# ProvisionLacpPortType</pre>	Enters the ProvisionLacpPortType mode.
<b>Step 2</b>	<b>getAggregationMode aggModeConfigReq</b>	<ul style="list-style-type: none"> <li>• <b>aggModeConfigReq</b>—Gets aggregation mode configuration</li> </ul>

	Command or Action	Purpose
	<p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType) # getAggregationMode aggModeConfigReq</pre>	
<b>Step 3</b>	<p><b>getAggregationMode review</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType) # getAggregationMode review</pre>	Displays the aggregation configuration mode commands on the controller .
<b>Step 4</b>	<p><b>getAggregationMode commit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType) # getAggregationMode commit</pre>	Sends the LACP aggregation mode configuration commands on the controller .
<b>Step 5</b>	<p><b>getAggregationMode exit</b></p> <p><b>Example:</b></p> <pre>Switch(config-controller-ProvisionLacpPortType) # getAggregationMode exit</pre>	Exists the LACP aggregation configuration mode.

## Viewing Static Aggregation Group

### SUMMARY STEPS

1. ProvisionLacpPortType
2. showAggregation showAggConfigReq
3. showAggregation review
4. showAggregation commit
5. setAggregationCfg exit



## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>ProvisionLacpPortType</b>  <b>Example:</b> Switch(config-controller)# ProvisionLacpPortType	Enters the ProvisionLacpPortType mode.
Step 2	<b>showAggregation showAggConfigReq</b>  <b>Example:</b> Switch(config-controller-ProvisionLacpPortType)# showAggregation Switch(config-controller-ProvisionLacpPortType)# showAggregation showAggConfigReq	Displays Static LAG aggregation on LACP mode. <ul style="list-style-type: none"> <li>• <b>showAggConfigReq</b>—Displays all on thecontroller .</li> </ul>
Step 3	<b>showAggregation review</b>  <b>Example:</b> Switch(config-controller-ProvisionLacpPortType)# showAggregation review	Displays the LAG aggregation configuration on the controller .
Step 4	<b>showAggregation commit</b>  <b>Example:</b> Switch(config-controller-ProvisionLacpPortType)# setAggregationCfg commit	Sends the LAG aggregation configuration on the controller .
Step 5	<b>setAggregationCfg exit</b>  <b>Example:</b> Switch(config-controller-ProvisionLacpPortType)# setAggregationCfg exit	Exists the LACP aggregation configuration mode.

