



# Cisco Unified CallManager Release 4.1 with Avaya Modular Messaging 2.0 using a Cisco WS-X6608-T1 using Q.SIG as MGCP Gateway

10/31/2007

## Table of Contents


<a href="#">Introduction</a> .....	1
<a href="#">Network Topology</a> .....	2
<a href="#">Limitations</a> .....	2
<a href="#">System Components</a> .....	2
<a href="#">Hardware Requirements</a> .....	2
<a href="#">Software Requirements</a> .....	3
<a href="#">Features</a> .....	3
<a href="#">Features Supported</a> .....	3
<a href="#">Configuration</a> .....	3
<a href="#">Configuring the Cisco Unified CallManager</a> .....	5

## Introduction

- This is a lab report performed to validate interoperability of Cisco Unified CallManager Release 4.1(2) using Cisco WS-X6608-T1 gateway ports configured for T1 QSIG connecting to Avaya Modular Messaging voicemail platform.
- The network topology diagram (Figure 1) shows the test setup for end-to-end interoperability with the Cisco Unified CallManager connected via Cisco WS-X6608 T1/E1 blade ports used as MGCP gateways configured as ISO QSIG trunks to an Avaya Modular Messaging (MM) platform, using QSIG integration over T1 trunk.
- This Application Note uses the Cisco WS-X6608 T1/E1 voice gateway; however other Cisco voice gateways are also an option to use since Unified CallManager QSIG implementation does not depend on the physical interface.

## Network Topology

Figure 1. Network Topology

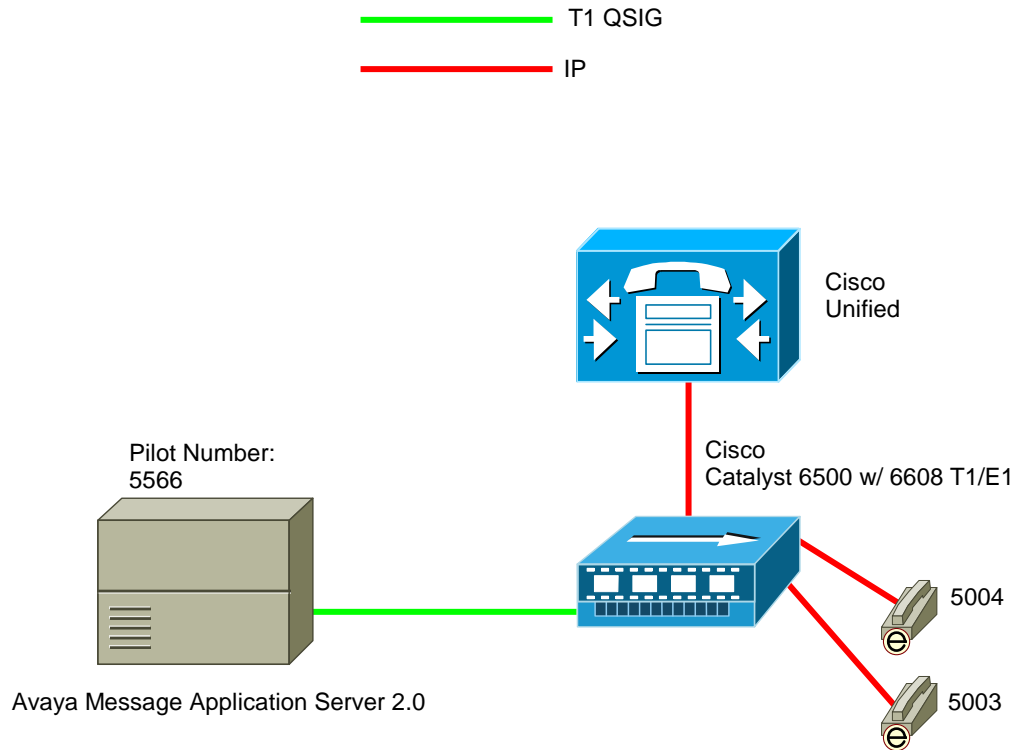

## Limitations

The following section lists known limitations, caveats, or integration issues.

- Calls originating from MM, such as transferred calls from the Automated Attendant, do not provide Calling Name display.
- Avaya MM does not initiate Path Replacement Proposal. Testing has shown that MM does not initiate Path Replacement proposal, although it responds properly to Path Replacement proposals initiated by Unified CallManager.

## System Components

### Hardware Requirements

The following hardware is required:

- Cisco Catalyst 6500 switch with WS-X6608-T1 blades
- Cisco MCS server



- Avaya Modular Messaging server hardware
- Dialogic D/480JCT-1T1 or D/240JCT-T1

### Software Requirements

The following software is required:

- Cisco Unified CallManager Release 4.1(2)
- Avaya Modular Messaging release 2.0
- Dialogic Driver version 5.1.1 FP1 SU15
- Cisco CatOs 7.6(8)

### Features

This section lists new and changed features and features that are not supported.

#### Features Supported

- System forward to personal greeting (busy/ring no answer/all calls)
- Multiple Call Forward
- Reply to messages left in telephone answering mode
- Multiple Greetings
- Find Me
- Return to Operator
- Direct call
- Message Waiting Indication

### Configuration

This section contains configuration menus and commands and describes configuration sequences and tasks.

#### Configuring the Avaya Message Application Server (MAS)

1. Access the **Voice Mail System Configuration** application from the MAS program group. Expand all fields so that all options are displayed.
2. Select the **Voice Mail Domain**.
3. Expand **PBXs**.
4. Select **Avaya G3 (Dialogic QSIG)**.
5. Access the **General (QSIG) PBX Configuration** tab.
6. Set **DTMF Inter-Digit Delay during Dialing (ms) = 80**.



7. Set **DTMF Length during Dialing (ms) = 80**.
8. Set **DTMF Length during Detection (ms) = 50**.
9. Access the **Transfer/Outcall** tab.
10. Set **Transfer Mode = Blind**.
11. Access the **Tone Detection** tab.
12. Set **Maximum Silence before Hanging Up (ms) = 6000**.
13. Access the **Outgoing Call** tab.
14. Set **Layer Protocol = G.711 mu-Law** (must match setting on Unified CallManager Gateway Configuration parameter "PCM Type").
15. Set **BC Transfer Cap = Speech**.
16. Set **Number Type = Unknown**.
17. Set **Number Plan = Unknown**.
18. In the **Origin Number** = Enter the Voicemail Pilot Number as configured in Unified CallManager.
19. Select **OK** to save changes.
20. Access the Message **Waiting Indicator (MWI)** tab.
21. Click on **Enable Message Waiting Indicator (MWI)** checkbox to enable MWI.
22. In parameter **MAS MWI Server** = Enter the name of the MWI server created during initial installation of MAS server.
23. Set **Maximum Requests per Minute = 200**.
24. In parameter Message **Application Servers that Support MWI** = Enter a list of MAS servers capable of placing MWI requests, if multiple servers are installed.
25. Select **OK** to save changes.
26. Access the **Port Groups** General tab contained within the MAS name.
27. Click **Add Group** button.
28. Name the Port Group **MWI** (or another easy to remember name).
29. Within the **Port Groups** General tab, uncheck the Port(s) used for MWI.



30. Select the **Default Group** under the **Port Groups** and make sure it is configured to meet customer's requirements for **Incoming** and **Outgoing** under **Port Group Usage**.
31. Check all **Ports**, except the port used for MWI.
32. Select **OK** to save changes.
33. Access the **QSIG General** tab contained within the **PBX Type** tab.
34. Set **Telephony Type = Dialogic QSIG**.
35. Make sure **Avaya G3 (QSIG)** is selected in the PBXs field.
36. Select **OK** to save changes.
37. Access the **General** tab contained within the Telephony **Interface (Dialogic- QSIG)** tab.
38. Set Playback Volume = 2.
39. In parameter **Maximum Concurrent Calls** = Enter the number of trunk channels connected to the Unified CallManager (e.g. 23 when using a single T1).
40. Make sure ports are enabled within parameter **Port =**.
41. Select **OK** to save changes.
42. Access the **General** tab contained within the **PBX Integration** tab.
43. Enable QSIG integration by clicking the **QSIG =** checkbox.
44. Access the **QSIG/DSE** tab.
45. Set **Port Group Name** = MWI (or name assigned to Port Group in **Port Groups**).
46. Set **Max MWI Sessions = 1**.
47. Leave parameter **Indicator On/Off signals must use same port =** blank.
48. Leave parameter **MWI On Field =** at default setting.
49. Leave parameter **MWI Off Field =** at default setting.
50. Select **OK** to save changes.

After making these changes, restart the Message Application Server

#### **Configuring the Cisco Unified CallManager**

- Configure Voice Mail Pilot



- Configure Voice Mail Profile
- Configure Message Waiting Numbers (On/Off)
- Add the newly-created Voice Mail Profile to extensions that will be using Avaya MM as the messaging platform, and configure Call Forward settings as per customer's requirements.

## Cisco WS-X6608-T1 Voice Gateway Configuration

# Gateway Configuration

[Back to Find/List Gateway](#)  
[Dependency Record](#)

**Product : Cisco Catalyst 6000 T1 VoIP Gateway**  
**Gateway : S0/DS1-0@SDA0001C9D93A9C**  
**Device Protocol: Digital Access PRI**  
**Registration: Registered with Cisco CallManager 172.20.236.2**  
**IP Address: [172.20.236.15](#)**

Status: Ready

Update

Delete

Reset Gateway

### Device Information

MAC Address*	<input type="text" value="0001C9D93A9C"/>
Description	<input type="text" value="Cat 6500 port 5/5"/>
Device Pool*	<input type="text" value="Default"/>
Call Classification*	<input type="text" value="Use System Default"/>
Network Locale	<input type="text" value="United States"/>
Media Resource Group List	<input type="text" value=" &lt; None &gt;"/>
Location	<input type="text" value=" &lt; None &gt;"/>
AAR Group	<input type="text" value=" &lt; None &gt;"/>
Load Information	<input type="text"/>

### Multilevel Precedence and Preemption (MLPP) Information



### Multilevel Precedence and Preemption (MLPP) Information

MLPP Domain (e.g., "0000FF")	<input type="text"/>
MLPP Indication	<input type="text" value="Off"/>
MLPP Preemption	<input type="text" value="Disabled"/>

### Interface Information

PRI Protocol Type*	<input type="text" value="PRI QSIG T1"/>
Protocol Side*	<input type="text" value="Network"/>
Channel Selection Order*	<input type="text" value="Bottom Up"/>
Channel IE Type*	<input type="text" value="Use Number when 1B"/>
PCM Type*	<input type="text" value="μ-law"/>
Delay for first restart (1/8 sec ticks)	<input type="text" value="32"/>
Delay between restarts (1/8 sec ticks)	<input type="text" value="4"/>
<input checked="" type="checkbox"/> Inhibit restarts at PRI initialization	
<input type="checkbox"/> Enable status poll	



## Call Routing Information

### Inbound Calls

Significant Digits*	<input type="text" value="All"/>
Calling Search Space	<input type="text" value=" &lt; None &gt;"/>
AAR Calling Search Space	<input type="text" value=" &lt; None &gt;"/>
Prefix DN	<input type="text"/>

### Outbound Calls

Calling Line ID Presentation*	<input type="text" value="Allowed"/>
Calling Party Selection*	<input type="text" value="Originator"/>
Called party IE number type unknown*	<input type="text" value="Cisco CallManager"/>
Calling party IE number type unknown*	<input type="text" value="Cisco CallManager"/>
Called Numbering Plan*	<input type="text" value="Cisco CallManager"/>
Calling Numbering Plan*	<input type="text" value="Cisco CallManager"/>
Number of digits to strip*	<input type="text" value="0"/>
Caller ID DN	<input type="text"/>
SMDI Base Port*	<input type="text" value="0"/>



### PRI Protocol Type Specific Information

- Display IE Delivery
- Redirecting Number IE Delivery - Outbound
- Redirecting Number IE Delivery - Inbound
- Send Extra Leading Character In DisplayIE\*\*\*
- Setup non-ISDN Progress Indicator IE Enable\*\*\*\*
- MCDN Channel Number Extension Bit Set to Zero\*\*
- Send Calling Name In Facility IE
- Interface Identifier Present\*\*

Interface Identifier Value\*\*

Connected Line ID Presentation (QSIG Inbound Call)\*

### UUIE Configuration

- Passing Precedence Level Through UUIE

Security Access Level



## Product Specific Configuration



Clock Reference*	Network
TX-Level CSU*	0dB
FDL Channel*	ATT 54016
Framing*	ESF
Audio Signal Adjustment into IP Network*	NoDbPadding
Audio Signal Adjustment from IP Network*	NoDbPadding
Yellow Alarm*	Bit2
Zero Suppression*	B8ZS
Digit On Duration(50-500ms)*	100
Interdigit Duration(50-500msec)*	100
SNMP Community String	public
Disable SNMP Set operations*	<input type="checkbox"/>
Debug Port Enable*	<input checked="" type="checkbox"/>
Hold Tone Silence Duration*	0
Port Used for Voice Calls*	<input checked="" type="checkbox"/>
Port Used for Modem Calls*	<input checked="" type="checkbox"/>
Port Used for Fax Calls*	<input checked="" type="checkbox"/>



### Fax and Modem Parameters

Fax Relay Enable*	<input checked="" type="checkbox"/>
Fax Error Correction Mode Override*	<input checked="" type="checkbox"/>
Maximum Fax Rate*	14400bps
Fax Payload Size*	20
Non Standard Facilities Country Code*	65535
Non Standard Facilities Vendor Code*	65535
Fax/Modem Packet Redundancy*	<input type="checkbox"/>
NSE Type*	Non-IOS Gateways

### Playout Delay Parameters

Initial Playout Delay*	40
Minimum Playout Delay*	20
Maximum Playout Delay*	150

### Echo Canceller Configuration

Echo TailLength (ms)*	32 ms
Minimum ERL (db)*	6 db

\* indicates required item

\*\* applicable to DMS-100 protocol only

\*\*\* applicable to DMS-100 protocol and DMS-250 protocol only



Cisco Unified CallManager QSIG-related Service Parameters Configuration

**Clusterwide Parameters (Feature - Forward)**

Parameter Name	Parameter Value	Suggested Value
Forward Maximum Hop Count*	<input type="text" value="12"/>	12
Forward No Answer Timer (sec)*	<input type="text" value="12"/>	12
Max Forward Hops to DN*	<input type="text" value="12"/>	12
Retain Forward Information*	<input type="text" value="False"/>	False
Forward By Reroute Enabled*	<input type="text" value="True"/>	False
Forward By Reroute T1 Timer (sec)*	<input type="text" value="10"/>	10
Include Original Called Info for Q.SIG Call Diversions*	<input type="text" value="Always"/>	Only after the first diversion



### Clusterwide Parameters (Feature - Path Replacement)

Parameter Name	Parameter Value	Suggested Value
Path Replacement Enabled*	<input type="text" value="True"/>	False
Path Replacement on Tromboned Calls*	<input type="text" value="True"/>	True
Start Path Replacement Minimum Delay Time (sec)*	<input type="text" value="0"/>	0
Start Path Replacement Maximum Delay Time (sec)*	<input type="text" value="0"/>	0
Path Replacement T1 Timer (sec)*	<input type="text" value="30"/>	30
Path Replacement T2 Timer (sec)*	<input type="text" value="15"/>	15
Path Replacement PINX ID	<input type="text" value="5555"/>	



### **Important Information**

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.



### **Corporate Headquarters**

Cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, CA 95134-1706  
USA  
www.cisco.com  
Tel: 408 526-4000  
800 553-NETS (6387)  
Fax: 408 526-4100

### **European Headquarters**

Cisco Systems International  
BV  
Haarlerbergpark  
Haarlerbergweg 13-19  
1101 CH Amsterdam  
The Netherlands  
www-europe.cisco.com  
Tel: 31 0 20 357 1000  
Fax: 31 0 20 357 1100

### **Americas Headquarters**

Cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, CA 95134-1706  
USA  
www.cisco.com  
Tel: 408 526-7660  
Fax: 408 527-0883

### **Asia Pacific Headquarters**

Cisco Systems, Inc.  
Capital Tower  
168 Robinson Road  
#22-01 to #29-01  
Singapore 068912  
www.cisco.com  
Tel: +65 317 7777  
Fax: +65 317 7799

Cisco Systems has more than 200 offices in the following countries and regions. Addresses, phone numbers, and fax numbers are listed on the Cisco Web site at [www.cisco.com/go/offices](http://www.cisco.com/go/offices).

Argentina • Australia • Austria • Belgium • Brazil • Bulgaria • Canada • Chile • China PRC • Colombia • Costa Rica • Croatia • Czech Republic • Denmark • Dubai, UAE • Finland • France • Germany • Greece • Hong Kong SAR • Hungary • India • Indonesia • Ireland • Israel • Italy • Japan • Korea • Luxembourg • Malaysia • Mexico • The Netherlands • New Zealand • Norway • Peru • Philippines • Poland • Portugal • Puerto Rico • Romania • Russia • Saudi Arabia • Scotland • Singapore • Slovakia • Slovenia • South Africa • Spain • Sweden • Switzerland • Taiwan • Thailand • Turkey • Ukraine • United Kingdom • United States • Venezuela • Vietnam • Zimbabwe

© 2007 Cisco Systems, Inc. All rights reserved.

CCVP, the Cisco logo, and the Cisco Square Bridge logo are trademarks of Cisco Systems, Inc.; Changing the Way We Work, Live, Play, and Learn is a service mark of Cisco Systems, Inc.; and Access Registrar, Aironet, BPX, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Enterprise/Solver, EtherChannel, EtherFast, EtherSwitch, Fast Step, Follow Me Browsing, FormShare, GigaDrive, HomeLink, Internet Quotient, IOS, iPhone, IP/TV, iQ Expertise, the iQ logo, iQ Net Readiness Scorecard, iQuick Study, LightStream, Linksys, MeetingPlace, MGX, Networking Academy, Network Registrar, Packet, PIX, ProConnect, ScriptShare, SMARTnet, StackWise, The Fastest Way to Increase Your Internet Quotient, and TransPath are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or Website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0705R)

Printed in the USA

