



CHAPTER 1

Configuring PIM and PIM6

This chapter describes how to configure the Protocol Independent Multicast (PIM) and PIM6 features on Cisco NX-OS devices in your IPv4 and IPv6 networks.

This chapter includes the following sections:

- [Information About PIM and PIM6, page 1-1](#)
- [Licensing Requirements for PIM and PIM6, page 1-18](#)
- [Prerequisites for PIM and PIM6, page 1-18](#)
- [Guidelines and Limitations for PIM and PIM6, page 1-18](#)
- [Default Settings, page 1-19](#)
- [Configuring PIM and PIM6, page 1-20](#)
- [Verifying the PIM and PIM6 Configuration, page 1-55](#)
- [Displaying Statistics, page 1-56](#)
- [Configuration Examples for PIM, page 1-57](#)
- [Where to Go Next, page 1-63](#)
- [Additional References, page 1-63](#)
- [Feature History for PIM and PIM6, page 1-64](#)

Information About PIM and PIM6



Note

Beginning with Cisco NX-OS Release 5.0(2a), Bidirectional Forwarding Detection (BFD) supports PIM. See the *Cisco Nexus 7000 Series NX-OS Interfaces Configuration Guide, Release 5.x*, for information on BFD.

PIM, which is used between multicast-capable routers, advertises group membership across a routing domain by constructing multicast distribution trees. PIM builds shared distribution trees on which packets from multiple sources are forwarded, as well as source distribution trees on which packets from a single source are forwarded. For more information about multicast, see the [“Information About Multicast” section on page 1-1](#).

Cisco NX-OS supports PIM sparse mode for IPv4 networks (PIM) and for IPv6 networks (PIM6). In PIM sparse mode, multicast traffic is sent only to locations of the network that specifically request it. You can configure PIM and PIM6 to run simultaneously on a router. You can use PIM and PIM6 global

Send document comments to nexus7k-docfeedback@cisco.com

parameters to configure RPs, message packet filtering, and statistics. You can use PIM and PIM6 interface parameters to enable multicast, identify PIM borders, set the PIM hello message interval, and set the designated router (DR) priority. For more information, see the “[Configuring PIM or PIM6 Sparse Mode](#)” section on page 1-22.



Note

Cisco NX-OS does not support PIM dense mode.

In Cisco NX-OS, multicast is enabled only after you enable the PIM or PIM6 feature on each router and then enable PIM or PIM6 sparse mode on each interface that you want to participate in multicast. You can configure PIM for an IPv4 network and PIM6 for an IPv6 network. In an IPv4 network, if you have not already enabled IGMP on the router, PIM enables it automatically. In an IPv6 network, MLD is enabled by default. For information about configuring IGMP and MLD, see [Chapter 1, “Configuring IGMP”](#) and [Chapter 1, “Configuring MLD.”](#)



Note

Beginning with Cisco NX-OS Release 5.2(1) for the Nexus 7000 Series devices, you can configure PIMv4 to run over generic routing encapsulation (GRE) tunnels including outgoing interfaces (OIFs).

You use the PIM and PIM6 global configuration parameters to configure the range of multicast group addresses to be handled by each of the three distribution modes:

- Any Source Multicast (ASM) provides discovery of multicast sources. It builds a shared tree between sources and receivers of a multicast group and supports switching over to a source tree when a new receiver is added to a group. ASM mode requires that you configure an RP.
- Single Source Multicast (SSM) builds a source tree originating at the designated router on the LAN segment that receives a request to join a multicast source. SSM mode does not require you to configure RPs. Source discovery must be accomplished through other means.
- Bidirectional shared trees (Bidir) build a shared tree between sources and receivers of a multicast group but do not support switching over to a source tree when a new receiver is added to a group. Bidir mode requires that you configure an RP. Bidir forwarding does not require source discovery because only the shared tree is used.

You can combine the three modes to cover different ranges of group addresses. For more information, see the “[Configuring PIM and PIM6](#)” section on page 1-20.

For more information about PIM sparse mode and shared distribution trees used by ASM and Bidir modes, see [RFC 4601](#).

For more information about PIM SSM mode, see [RFC 3569](#).

For more information about PIM Bidir mode, see [draft-ietf-pim-bidir-09.txt](#).

This section includes the following topics:

- [Hello Messages, page 1-3](#)
- [Join-Prune Messages, page 1-3](#)
- [State Refreshes, page 1-3](#)
- [Rendezvous Points, page 1-4](#)
- [PIM Register Messages, page 1-16](#)
- [Designated Routers, page 1-16](#)
- [Designated Forwarders, page 1-17](#)
- [ASM Switchover from Shared Tree to Source Tree, page 1-17](#)

Send document comments to nexus7k-docfeedback@cisco.com

- [Administratively Scoped IP Multicast, page 1-17](#)
- [Bidirectional Forwarding Detection for PIM, page 1-17](#)
- [Virtualization Support, page 1-18](#)

Hello Messages

The PIM process begins when the router establishes PIM neighbor adjacencies by sending PIM hello messages to the multicast address 224.0.0.13. Hello messages are sent periodically at the interval of 30 seconds. When all neighbors have replied, the PIM software chooses the router with the highest priority in each LAN segment as the designated router (DR). The DR priority is based on a DR priority value in the PIM hello message. If the DR priority value is not supplied by all routers, or the priorities match, the highest IP address is used to elect the DR.

The hello message also contains a hold-time value, which is typically 3.5 times the hello interval. If this hold time expires without a subsequent hello message from its neighbor, the device detects a PIM failure on that link.

For added security, you can configure an MD5 hash value that the PIM software uses to authenticate PIM hello messages with PIM neighbors.

For information about configuring hello message authentication, see the [“Configuring PIM or PIM6 Sparse Mode” section on page 1-22](#).

Join-Prune Messages

When the DR receives an IGMP membership report message from a receiver for a new group or source, the DR creates a tree to connect the receiver to the source by sending a PIM join message out the interface toward the rendezvous point (ASM or Bidir mode) or source (SSM mode). The rendezvous point (RP) is the root of a shared tree, which is used by all sources and hosts in the PIM domain in the ASM or the Bidir mode. SSM does not use an RP but builds a shortest path tree (SPT) that is the lowest cost path between the source and the receiver.

When the DR determines that the last host has left a group or source, it sends a PIM prune message to remove the path from the distribution tree.

The routers forward the join or prune action hop by hop up the multicast distribution tree to create (join) or tear down (prune) the path.

**Note**

In this publication, the terms “PIM join message” and “PIM prune message” are used to simplify the action taken when referring to the PIM join-prune message with only a join or prune action.

Join-prune messages are sent as quickly as possible by the software. You can filter the join-prune messages by defining a routing policy. For information about configuring the join-prune message policy, see the [“Configuring PIM or PIM6 Sparse Mode” section on page 1-22](#).

State Refreshes

PIM requires that multicast entries are refreshed within a 3.5-minute timeout interval. The state refresh ensures that traffic is delivered only to active listeners, and it keeps routers from using unnecessary resources.

Send document comments to nexus7k-docfeedback@cisco.com

To maintain the PIM state, the last-hop DR sends join-prune messages once per minute. State creation applies to both (*, G) and (S, G) states as follows:

- (*, G) state creation example—An IGMP (*, G) report triggers the DR to send a (*, G) PIM join message toward the RP.
- (S, G) state creation example—An IGMP (S, G) report triggers the DR to send an (S, G) PIM join message toward the source.

If the state is not refreshed, the PIM software tears down the distribution tree by removing the forwarding paths in the multicast outgoing interface list of the upstream routers.

Rendezvous Points

A rendezvous point (RP) is a router that you select in a multicast network domain that acts as a shared root for a multicast shared tree. You can configure as many RPs as you like, and you can configure them to cover different group ranges.

This section includes the following topics:

- [Static RP, page 1-4](#)
- [BSRs, page 1-4](#)
- [Auto-RP, page 1-5](#)
- [Anycast-RP, page 1-15](#)

Static RP

You can statically configure an RP for a multicast group range. You must configure the address of the RP on every router in the domain.

You can define static RPs for the following reasons:

- To configure routers with the Anycast-RP address
- To manually configure an RP on a device

For information about configuring static RPs, see the “[Configuring Static RPs](#)” section on page 1-29.

BSRs

The bootstrap router (BSR) ensures that all routers in the PIM domain have the same RP cache as the BSR. You can configure the BSR to help you select an RP set from BSR candidate RPs. The function of the BSR is to broadcast the RP set to all routers in the domain. You select one or more candidate BSRs to manage the RPs in the domain. Only one candidate BSR is elected as the BSR for the domain.



Caution


Do not configure both Auto-RP and BSR protocols in the same network.

[Figure 1-1](#) shows the BSR mechanism. Router A, the software-elected BSR, sends BSR messages out all enabled interfaces (shown by the solid lines in the figure). The messages, which contain the RP set, are flooded hop by hop to all routers in the network. Routers B and C are candidate RPs that send their candidate-RP advertisements directly to the elected BSR (shown by the dashed lines in the figure).

Send document comments to nexus7k-docfeedback@cisco.com

The elected BSR receives candidate-RP messages from all the candidate RPs in the domain. The bootstrap message sent by the BSR includes information about all of the candidate RPs. Each router uses a common algorithm to select the same RP address for a given multicast group.

Figure 1-1 BSR Mechanism

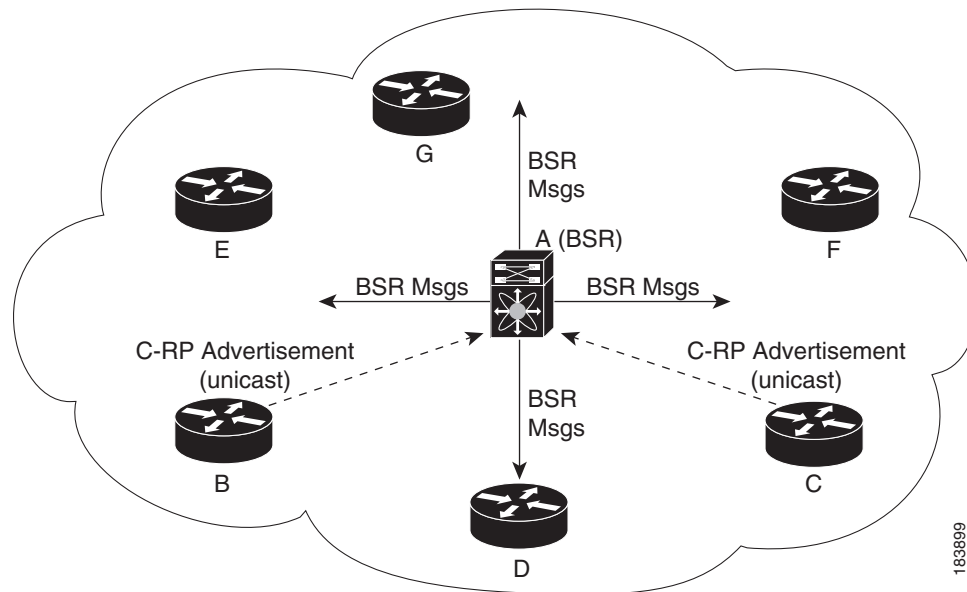

In the RP selection process, the RP address with the best priority is determined by the software. If the priorities match for two or more RP addresses, the software may use the RP hash in the selection process. Only one RP address is assigned to a group.

By default, routers are not enabled to listen or forward BSR messages. You must enable the BSR listening and forwarding feature so that the BSR mechanism can dynamically inform all routers in the PIM domain of the RP set assigned to multicast group ranges.

For more information about bootstrap routers, see [RFC 5059](#).



Note

The BSR mechanism is a nonproprietary method of defining RPs that can be used with third-party routers.

For information about configuring BSRs and candidate RPs, see the “[Configuring BSRs](#)” section on page 1-31.

Auto-RP

Auto-RP is a Cisco protocol that was prior to the Internet standard bootstrap router mechanism. You configure Auto-RP by selecting candidate mapping agents and RPs. Candidate RPs send their supported group range in RP-Announce messages to the Cisco RP-Announce multicast group 224.0.1.39. An Auto-RP mapping agent listens for RP-Announce messages from candidate RPs and forms a Group-to-RP mapping table. The mapping agent multicasts the Group-to-RP mapping table in RP-Discovery messages to the Cisco RP-Discovery multicast group 224.0.1.40.




Caution

Do not configure both Auto-RP and BSR protocols in the same network.

Send document comments to nexus7k-docfeedback@cisco.com

Figure 1-2 shows the Auto-RP mechanism. Periodically, the RP mapping agent multicasts the RP information that it receives to the Cisco-RP-Discovery group 224.0.1.40 (shown by the solid lines in the figure).

Figure 1-2 Auto-RP Mechanism

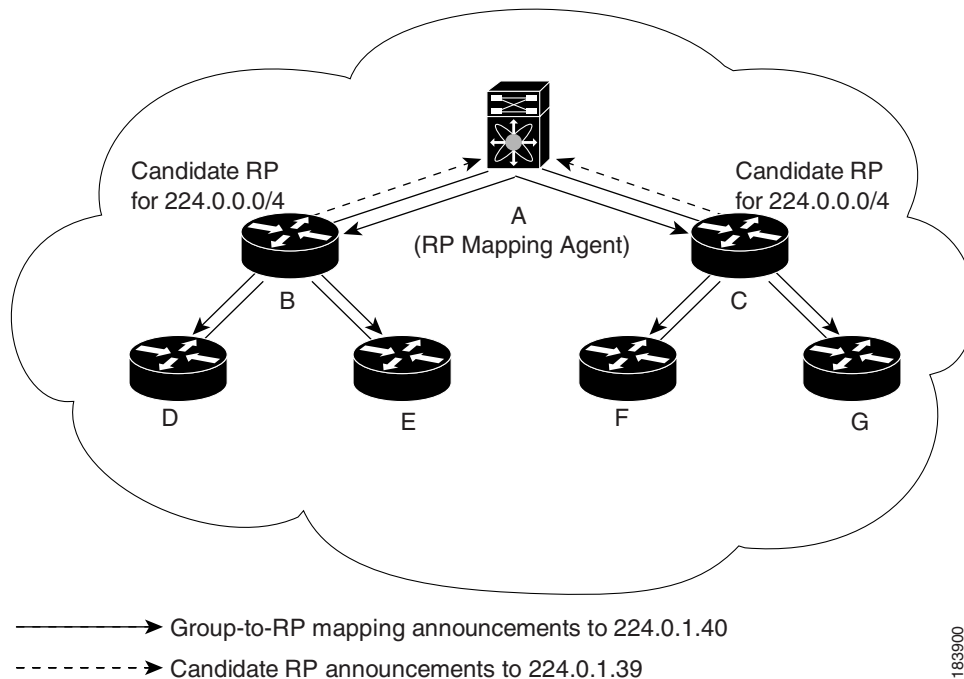

By default, routers are not enabled to listen or forward Auto-RP messages. You must enable the Auto-RP listening and forwarding feature so that the Auto-RP mechanism can dynamically inform routers in the PIM domain of the group-to-RP mapping.



Note

Auto-RP is not supported for PIM6.

For information about configuring Auto-RP, see the “[Configuring Auto-RP](#)” section on page 1-35.

Multiple RPs Configured in a PIM Domain

This section describes the election process rules when multiple RPs are configured in a PIM domain and includes the following topics:

- [PIM BSR Bootstrap/Auto-RP Mapping-Agent Election Process, page 1-6](#)
- [PIM RP versus RP Election Process, page 1-9](#)

PIM BSR Bootstrap/Auto-RP Mapping-Agent Election Process

This section includes the following topics:

- [Bootstrap Router \(BSR\) Election Process Details, page 1-7](#)
- [Auto-RP Mapping Agent Election Process, page 1-8](#)

Send document comments to nexus7k-docfeedback@cisco.com

Bootstrap Router (BSR) Election Process Details

If the BSR priorities are different, the BSR with the highest priority (highest numerical value) is elected as the BSR router for the PIM domain (see configuration example 1).

- Configuration example 1—Different BSR-candidate priorities: In this example, the system elects the device labeled N7K-1 as the BSR candidate for the PIM domain because it has the highest priority. The device labeled N7K-2 has the default priority of 64.

Configuration for N7K-1:

```
interface loopback0
  ip address 192.168.1.1/32
  ip pim sparse-mode

ip pim bsr bsr-candidate loopback0 priority 128

ip pim bsr forward listen
```

Configuration for N7K-2:

```
interface loopback0
  ip address 192.168.2.1/32
  ip pim sparse-mode

ip pim bsr bsr-candidate loopback0

ip pim bsr forward listen
```

Verification for N7K-1:

```
show ip pim rp
PIM RP Status Information for VRF "default"
BSR: 192.168.1.1*, next Bootstrap message in: 00:00:12,
priority: 128, hash-length: 30
```

Verification for N7K-2:

```
show ip pim rp
PIM RP Status Information for VRF "default"
BSR: 192.168.1.1, uptime: 00:04:27, expires: 00:02:00,
priority: 128, hash-length: 30
```

If the BSR priorities are the same, the BSR with the highest BSR-candidate IP address is elected as the BSR router for the PIM domain (see configuration example 2).

- Configuration example 2—Identical BSR-candidate priorities: In this example, the system elects the device labeled N7K-2 as the BSR for the PIM domain because it has the highest BSR-candidate IP address.

Configuration for N7K-1:

```
interface loopback0
  ip address 192.168.1.1/32
  ip pim sparse-mode

ip pim bsr bsr-candidate loopback0

ip pim bsr forward listen
```

Send document comments to nexus7k-docfeedback@cisco.com

Configuration for N7K-2:

```
interface loopback0
  ip address 192.168.2.1/32
  ip pim sparse-mode

ip pim bsr bsr-candidate loopback0

ip pim bsr forward listen
```

Verification for N7K-1:

```
show ip pim rp
PIM RP Status Information for VRF "default"
  BSR: 192.168.2.1, uptime: 01:45:20, expires: 00:01:54,
  priority: 64, hash-length: 30
```

Verification for N7K-2:

```
show ip pim rp
PIM RP Status Information for VRF "default"
  BSR: 192.168.2.1*, next Bootstrap message in: 00:00:30,
  priority: 64, hash-length: 30
```

Auto-RP Mapping Agent Election Process

The router with the highest mapping-agent IP address is elected as the mapping agent for the PIM domain. You cannot configure the priority for the Auto-RP mapping agent (see configuration example):

- Configuration example—Highest IP address: In this example, the system elects the device labeled N7K-2 as the mapping agent for the PIM domain because it has the highest mapping-agent IP address.

Configuration for N7K-1:

```
interface loopback0
  ip address 192.168.1.1/32
  ip pim sparse-mode

ip pim auto-rp mapping-agent loopback0

ip pim auto-rp forward listen
```

Configuration for N7K-2:

```
interface loopback0
  ip address 192.168.2.1/32
  ip pim sparse-mode

ip pim auto-rp mapping-agent loopback0

ip pim auto-rp forward listen
```

Verification for N7K-1:

```
show ip pim rp
PIM RP Status Information for VRF "default"
  BSR disabled
  Auto-RP RPA: 192.168.2.1, next Discovery message in: 00:00:52
```


Send document comments to nexus7k-docfeedback@cisco.com

Verification for N7K-2:

```
show ip pim rp
PIM RP Status Information for VRF "default"
  BSR disabled
  Auto-RP RPA: 192.168.2.1*, next Discovery message in: 00:00:47
```

PIM RP versus RP Election Process

Table 1-1 shows the process that the system uses to select the RP for a multicast group if multiple RPs are configured in the network using BSR, Auto-RP, or static RP configurations.

Table 1-1 PIM RP Versus RP Election Process Summary Table

BSR-RP vs. BSR-RP	BSR-RP vs. Static RP	Auto-RP vs. Auto- RP	Auto-RP vs. Static RP
1. Most specific RP group-list	1. Most specific RP group-list	1. Most specific RP group-list	1. Most specific RP group-list
2. Lowest RP priority	2. Highest RP IP address	2. Highest RP IP address	2. Highest RP IP address
3. Highest RP IP address	—	—	—



Note

BSR-RP versus Auto-RP is not listed in Table 1-1 because we recommend that you do not run both simultaneously in the same network.

This section includes the following topics:

- [PIM BSR RP-Candidate vs. BSR RP-Candidate Election Process, page 1-9](#)
- [PIM BSR RP-Candidate vs. Static RP Election Process, page 1-12](#)
- [PIM Auto-RP-Candidate vs. Auto-RP-Candidate Election Process, page 1-15](#)
- [PIM Auto-RP-Candidate vs. Static RP Election Process, page 1-15](#)

PIM BSR RP-Candidate vs. BSR RP-Candidate Election Process

The BSR RP-candidate with the most specific group-list is elected as the RP for any multicast addresses specified in its configured group list. The most specific group list takes priority over the BSR RP-candidate priority and the highest BSR RP-candidate IP address (see configuration example 1).

- Configuration example 1—Most specific group-list: In this example, the system elects the device labeled N7K-1 as the RP for all multicast addresses specified in the 224.1.1.0/24 group-list. The system elects the device labeled N7K-2 for the multicast addresses within the less specific 224.0.0.0/4 group-list.

Configuration for N7K-1:

```
interface loopback0
  ip address 192.168.1.1/32
  ip pim sparse-mode

ip pim bsr bsr-candidate loopback0
ip pim bsr rp-candidate loopback0 group-list 224.1.1.0/24
```

Send document comments to nexus7k-docfeedback@cisco.com

```
ip pim bsr forward listen
```

Configuration for N7K-2:

```
interface loopback0
 ip address 192.168.2.1/32
 ip pim sparse-mode
 ip pim bsr bsr-candidate loopback0
 ip pim bsr rp-candidate loopback0 group-list 224.0.0.0/4
 ip pim bsr forward listen
```

Verification for N7K-1:

```
show ip pim group 224.1.1.0
```

```
PIM Group-Range Configuration for VRF "default"
Group-range      Mode      RP-address      Shared-tree-only range
224.1.1.0/24     ASM      192.168.1.1    -
```

```
show ip pim group 224.3.0.0
```

```
PIM Group-Range Configuration for VRF "default"
Group-range      Mode      RP-address      Shared-tree-only range
224.0.0.0/4     ASM      192.168.2.1    -
```

Verification for N7K-2:

```
show ip pim group 224.1.1.0
```

```
PIM Group-Range Configuration for VRF "default"
Group-range      Mode      RP-address      Shared-tree-only range
224.1.1.0/24     ASM      192.168.1.1    -
```

```
show ip pim group 224.3.0.0
```

```
PIM Group-Range Configuration for VRF "default"
Group-range      Mode      RP-address      Shared-tree-only range
224.0.0.0/4     ASM      192.168.2.1    -
```

When multiple BSR RP-candidates advertise the same group list (for example, 224.0.0.0/4), the system elects the BSR RP-candidate with the highest priority (lowest numerical value) as the RP for any multicast address specified in its group-list (see configuration example 2).

- Configuration example 2—Identical group-list with different RP priorities: In this example, the system elects the device labeled N7K-1 as the RP for all multicast addresses specified in the 224.0.0.0/4 group-list because it has the lowest RP-candidate priority. The device labeled N7K-2 has a default priority of 192.

Configuration for N7K-1:

```
interface loopback0
 ip address 192.168.1.1/32
 ip pim sparse-mode

 ip pim bsr bsr-candidate loopback0
 ip pim bsr rp-candidate loopback0 group-list 224.0.0.0/4 priority 10
 ip pim bsr forward listen
```

Configuration for N7K-2:

```
interface loopback0
 ip address 192.168.2.1/32
 ip pim sparse-mode

 ip pim bsr bsr-candidate loopback0
 ip pim bsr rp-candidate loopback0 group-list 224.0.0.0/4
 ip pim bsr forward listen
```

Send document comments to nexus7k-docfeedback@cisco.com

Verification for N7K-1:

```
show ip pim rp
PIM RP Status Information for VRF "default"
BSR: 192.168.2.1, uptime: 00:09:14, expires: 00:01:37,
    priority: 64, hash-length: 30
Auto-RP disabled
BSR RP Candidate policy: None
BSR RP policy: None
Auto-RP Announce policy: None
Auto-RP Discovery policy: None

RP: 192.168.1.1*, (0), uptime: 00:08:15, expires: 00:01:57,
    priority: 10, RP-source: 192.168.2.1 (B), group ranges:
224.0.0.0/4

RP: 192.168.2.1, (0), uptime: 00:08:15, expires: 00:01:57,
    priority: 192, RP-source: 192.168.2.1 (B), group ranges:
224.0.0.0/4

show ip pim group 224.1.1.0
PIM Group-Range Configuration for VRF "default"
Group-range      Mode      RP-address      Shared-tree-only range
224.0.0.0/4      ASM       192.168.1.1
```

Verification for N7K-2:

```
show ip pim rp
PIM RP Status Information for VRF "default"
BSR: 192.168.2.1*, next Bootstrap message in: 00:00:55,
    priority: 64, hash-length: 30
Auto-RP disabled
BSR RP Candidate policy: None
BSR RP policy: None
Auto-RP Announce policy: None
Auto-RP Discovery policy: None

RP: 192.168.1.1, (0), uptime: 00:11:34, expires: 00:02:26,
    priority: 10, RP-source: 192.168.1.1 (B), group ranges:
224.0.0.0/4

RP: 192.168.2.1*, (0), uptime: 00:12:21, expires: 00:02:22,
    priority: 192, RP-source: 192.168.2.1 (B), group ranges:
224.0.0.0/4

show ip pim group 224.1.1.0
PIM Group-Range Configuration for VRF "default"
Group-range      Mode      RP-address      Shared-tree-only range
224.0.0.0/4      ASM       192.168.1.1      -
```

When multiple BSR RP-candidates advertise the same group list (for example, 224.0.0.0/4) and are configured with the same BSR RP-candidate priority, the system elects the BSR RP-candidate with the highest IP address as the RP for any multicast address specified in its group list (see configuration example 3).

- Configuration example 3—Identical group list with identical RP priorities: In this example, the system elects the device labeled N7K-2 as the RP for all multicast addresses specified in the 224.0.0.0/4 group list because it has the highest RP-candidate IP address.

Configuration for N7K-1:

```
interface loopback0
 ip address 192.168.1.1/32
```

Send document comments to nexus7k-docfeedback@cisco.com

```
ip pim sparse-mode

ip pim bsr bsr-candidate loopback0
ip pim bsr rp-candidate loopback0 group-list 224.0.0.0/4
ip pim bsr forward listen
```

Configuration for N7K-2:

```
interface loopback0
 ip address 192.168.2.1/32
 ip pim sparse-mode

ip pim bsr bsr-candidate loopback0
ip pim bsr rp-candidate loopback0 group-list 224.0.0.0/4
ip pim bsr forward listen
```

Verification for N7K-1:

```
show ip pim group 224.1.1.0
PIM Group-Range Configuration for VRF "default"
Group-range      Mode      RP-address      Shared-tree-only range
224.0.0.0/4      ASM       192.168.2.1    -
```

Verification for N7K-2:

```
show ip pim group 224.1.1.0
PIM Group-Range Configuration for VRF "default"
Group-range      Mode      RP-address      Shared-tree-only range
224.0.0.0/4      ASM       192.168.2.1    -
```

PIM BSR RP-Candidate vs. Static RP Election Process

The RP with the most specific group list is elected as the RP for any multicast addresses specified in its configured group list. The most specific group list takes priority over the highest RP IP address (see configuration example 1). (RP priorities are not applicable when comparing BSR RP-candidates to static RPs.)

- Configuration example 1—Most specific group list: In this example, the system elects the device labeled N7K-1 as the BSR RP for all multicast addresses specified in the 224.1.1.0/24 group-list. The system elects the device labeled N7K-2 as the RP for the multicast addresses within the less specific 224.0.0.0/4 group list because of the static RP statement.

Configuration for N7K-1:

```
interface loopback0
 ip address 192.168.1.1/32
 ip pim sparse-mode

ip pim bsr bsr-candidate loopback0
ip pim rp-address 192.168.2.1 group-list 224.0.0.0/4
ip pim bsr rp-candidate loopback0 group-list 224.1.1.0/24
ip pim forward listen
```

Configuration for N7K-2:

```
interface loopback0
 ip address 192.168.2.1/32
 ip pim sparse-mode

ip pim rp-address 192.168.2.1 group-list 224.0.0.0/4
```

Send document comments to nexus7k-docfeedback@cisco.com

```
ip pim bsr forward listen
```

Verification for N7K-1:

```
show ip pim group 224.1.1.0
```

```
PIM Group-Range Configuration for VRF "default"
Group-range      Mode      RP-address      Shared-tree-only range
224.1.1.0/24     ASM       192.168.1.1    -
```

```
show ip pim group 224.3.0.0
```

```
PIM Group-Range Configuration for VRF "default"
Group-range      Mode      RP-address      Shared-tree-only range
224.0.0.0/4     ASM       192.168.2.1    -
```

Verification for N7K-2:

```
show ip pim group 224.1.1.0
```

```
PIM Group-Range Configuration for VRF "default"
Group-range      Mode      RP-address      Shared-tree-only range
224.1.1.0/24     ASM       192.168.1.1    -
```

```
show ip pim group 224.3.0.0
```

```
PIM Group-Range Configuration for VRF "default"
Group-range      Mode      RP-address      Shared-tree-only range
224.0.0.0/4     ASM       192.168.2.1    -
```

When a static RP and the BSR RP-candidate advertise the same group list (for example, 224.0.0.0/4), the system elects the system with the highest RP IP address as the RP for any multicast addresses specified in its group-list (see configuration example 2).

- Configuration example 2—Identical RP group list: In this example, the system elects the device labeled N7K-2 as the RP for all multicast addresses specified in the 224.0.0.0/4 group list because it has the highest RP IP address.

Configuration for N7K-1:

```
interface loopback0
 ip address 192.168.1.1/32
 ip pim sparse-mode

ip pim rp-address 192.168.1.1 group-list 224.0.0.0/4

ip pim bsr forward listen
```

Configuration for N7K-2:

```
interface loopback0
 ip address 192.168.2.1/32
 ip pim sparse-mode

ip pim bsr bsr-candidate loopback0
ip pim rp-address 192.168.1.1 group-list 224.0.0.0/4
ip pim bsr rp-candidate loopback0 group-list 224.0.0.0/4
ip pim bsr forward listen
```

Verification for N7K-1:

```
show ip pim group 224.1.1.0
```

```
PIM Group-Range Configuration for VRF "default"
Group-range      Mode      RP-address      Shared-tree-only range
224.0.0.0/4     ASM       192.168.2.1
```

Verification for N7K-2:

Send document comments to nexus7k-docfeedback@cisco.com

```
show ip pim group 224.1.1.0
PIM Group-Range Configuration for VRF "default"
Group-range      Mode      RP-address      Shared-tree-only range
224.0.0.0/4      ASM       192.168.2.1     -
```

Because you cannot configure a static RP and its default value is 0, the RP priority has no impact. You can configure the BSR RP-candidate with a value between 0 and 255. The system elects the device with the most specific group list. If both devices have the same group list, the system elects the device with the highest RP IP address (see configuration example 3).

- Configuration example 3—Identical group list and identical RP priorities: In this example, the system elects the device labeled N7K-2 as the RP for all multicast addresses specified in the 224.0.0.0/4 group list because it has the highest RP IP address. The system does not compare RP priorities between BSR RPs and static RPs.

Configuration for N7K-1:

```
interface loopback0
 ip address 192.168.1.1/32
 ip pim sparse-mode

ip pim bsr bsr-candidate loopback0
ip pim rp-address 192.168.2.1 group-list 224.0.0.0/4
ip pim bsr rp-candidate loopback0 group-list 224.0.0.0/4 priority 0

ip pim bsr forward listen
```

Configuration for N7K-2:

```
interface loopback0
 ip address 192.168.2.1/32
 ip pim sparse-mode

ip pim rp-address 192.168.2.1 group-list 224.0.0.0/4

ip pim bsr forward listen
```

Verification for N7K-1:

```
show ip pim rp
PIM RP Status Information for VRF "default"
BSR: 192.168.1.1*, next Bootstrap message in: 00:00:52,
  priority: 64, hash-length: 30
Auto-RP disabled
BSR RP Candidate policy: None
BSR RP policy: None
Auto-RP Announce policy: None
Auto-RP Discovery policy: None

RP: 192.168.1.1*, (0), uptime: 00:01:57, expires: 00:02:25,
  priority: 0, RP-source: 192.168.1.1 (B), group ranges:
  224.0.0.0/4
RP: 192.168.2.1, (0), uptime: 02:16:09, expires: never,
  priority: 0, RP-source: (local), group ranges:
  224.0.0.0/4
```

```
show ip pim group 224.1.1.0
PIM Group-Range Configuration for VRF "default"
Group-range      Mode      RP-address      Shared-tree-only range
224.0.0.0/4      ASM       192.168.2.1     -
```

Verification for N7K-2:

```
show ip pim rp
```

[Send document comments to nexus7k-docfeedback@cisco.com](mailto:nexus7k-docfeedback@cisco.com)

```
PIM RP Status Information for VRF "default"
BSR: 192.168.1.1, uptime: 00:29:47, expires: 00:01:45,
    priority: 64, hash-length: 30
Auto-RP disabled
BSR RP Candidate policy: None
BSR RP policy: None
Auto-RP Announce policy: None
Auto-RP Discovery policy: None

RP: 192.168.1.1, (0), uptime: 00:06:59, expires: 00:02:05,
priority: 0, RP-source: 192.168.1.1 (B), group ranges:
    224.0.0.0/4
RP: 192.168.2.1*, (0), uptime: 00:13:15, expires: never,
priority: 0, RP-source: (local), group ranges:
    224.0.0.0/4
```

```
show ip pim group 224.1.1.0
```

```
PIM Group-Range Configuration for VRF "default"
Group-range      Mode      RP-address      Shared-tree-only range
224.0.0.0/4      ASM       192.168.2.1    -
```

PIM Auto-RP-Candidate vs. Auto-RP-Candidate Election Process

The auto-RP-candidate election is similar to the BSR RP-candidate election process, but it does not support priorities (see the [“PIM BSR RP-Candidate vs. BSR RP-Candidate Election Process”](#) section on page 1-9). You cannot configure the priority for an auto-RP, and the default value is 0.

PIM Auto-RP-Candidate vs. Static RP Election Process

The auto-RP-candidate versus static RP election uses the same rules as the election process for the BSR RP-candidate versus static RP (see [“PIM BSR RP-Candidate vs. Static RP Election Process”](#) section on page 1-12).

Anycast-RP

Anycast-RP has two implementations: one uses Multicast Source Discovery Protocol (MSDP) and the other is based on [RFC 4610](#), *Anycast-RP Using Protocol Independent Multicast (PIM)*. This section describes how to configure PIM Anycast-RP.

You can use PIM Anycast-RP to assign a group of routers, called the Anycast-RP set, to a single RP address that is configured on multiple routers. The set of routers that you configure as Anycast-RPs is called the Anycast-RP set. This method is the only RP method that supports more than one RP per multicast group, which allows you to load balance across all RPs in the set. The Anycast RP supports all multicast groups.

PIM register messages are sent to the closest RP and PIM join-prune messages are sent in the direction of the closest RP as determined by the unicast routing protocols. If one of the RPs goes down, unicast routing ensures these message will be sent in the direction of the next-closest RP.

You must configure PIM on the loopback interface that is used for the PIM Anycast RP.

For more information about PIM Anycast-RP, see [RFC 4610](#).

For information about configuring Anycast-RPs, see the [“Configuring a PIM Anycast-RP Set”](#) section on page 1-37.

Send document comments to nexus7k-docfeedback@cisco.com

PIM Register Messages

PIM register messages are unicast to the RP by designated routers (DRs) that are directly connected to multicast sources. The PIM register message has the following functions:

- To notify the RP that a source is actively sending to a multicast group.
- To deliver multicast packets sent by the source to the RP for delivery down the shared tree.

The DR continues to send PIM register messages to the RP until it receives a Register-Stop message from the RP. The RP sends a Register-Stop message in either of the following cases:

- The RP has no receivers for the multicast group being transmitted.
- The RP has joined the SPT to the source but has not started receiving traffic from the source.

You can use the **ip pim register-source** command to configure the IP source address of register messages when the IP source address of a register message is not a uniquely routed address to which the RP can send packets. This situation might occur if the source address is filtered so that the packets sent to it are not forwarded or if the source address is not unique to the network. In these cases, the replies sent from the RP to the source address will fail to reach the DR, resulting in Protocol Independent Multicast sparse mode (PIM-SM) protocol failures.

The following example shows how to configure the IP source address of the register message to the loopback 3 interface of a DR:

```
ip pim register-source loopback 3
```



Note

In Cisco NX-OS, PIM register messages are rate limited to avoid overwhelming the RP.

You can filter PIM register messages by defining a routing policy. For information about configuring the PIM register message policy, see the [“Configuring Shared Trees Only for ASM”](#) section on page 1-40.

Designated Routers

In PIM ASM and SSM modes, the software chooses a designated router (DR) from the routers on each network segment. The DR is responsible for forwarding multicast data for specified groups and sources on that segment.

The DR for each LAN segment is determined as described in the [“Hello Messages”](#) section on page 1-3.

In ASM mode, the DR is responsible for unicasting PIM register packets to the RP. When a DR receives an IGMP membership report from a directly connected receiver, the shortest path is formed to the RP, which may or may not go through the DR. The result is a shared tree that connects all sources transmitting on the same multicast group to all receivers of that group.

In SSM mode, the DR triggers (*, G) or (S, G) PIM join messages toward the RP or the source. The path from the receiver to the source is determined hop by hop. The source must be known to the receiver or the DR.

For information about configuring the DR priority, see the [“Configuring PIM or PIM6 Sparse Mode”](#) section on page 1-22.

Send document comments to nexus7k-docfeedback@cisco.com

Designated Forwarders

In PIM Bidir mode, the software chooses a designated forwarder (DF) at RP discovery time from the routers on each network segment. The DF is responsible for forwarding multicast data for specified groups on that segment. The DF is elected based on the best metric from the network segment to the RP.

If the router receives a packet on the RPF interface toward the RP, the router forwards the packet out all interfaces in the OIF-list. If a router receives a packet on an interface on which the router is the elected DF for that LAN segment, the packet is forwarded out all interfaces in the OIF-list except the interface that it was received on and also out the RPF interface toward the RP.



Note

Cisco NX-OS puts the RPF interface into the OIF-list of the MRIB, but not in the OIF-list of the MFIB.

ASM Switchover from Shared Tree to Source Tree

In ASM mode, the DR that is connected to a receiver switches over from the shared tree to the shortest-path tree (SPT) to a source unless you configure the PIM parameter to use shared trees only. For information about configuring the use of shared trees only, see the “[Configuring Shared Trees Only for ASM](#)” section on page 1-40.

During the switchover, messages on the SPT and shared tree may overlap. These messages are different. The shared tree messages are propagated upstream toward the RP, while SPT messages go toward the source.

For information about SPT switchovers, see the “Last-Hop Switchover” to the SPT section in [RFC 4601](#).

Administratively Scoped IP Multicast

The administratively scoped IP multicast method allows you to set boundaries on the delivery of multicast data. For more information, see [RFC 2365](#).

You can configure an interface as a PIM boundary so that PIM messages are not sent out that interface. For information about configuring the domain border parameter, see the “[Configuring PIM or PIM6 Sparse Mode](#)” section on page 1-22.

You can use the Auto-RP scope parameter to set a time-to-live (TTL) value. For more information, see the “[Configuring Shared Trees Only for ASM](#)” section on page 1-40.

Bidirectional Forwarding Detection for PIM

Beginning with Cisco NX-OS Release 5.0(2a), Bidirectional Forwarding Detection (BFD) allows the system to rapidly detect failures in a network. See the *Cisco Nexus 7000 Series NX-OS Unicast Routing Configuration Guide, Release 5.x* for more information about BFD.

In PIM, a link or neighbor group failure is detected when the hold-time, which is set as part of the hello interval, expires. However, BFD provides a more efficient method to detect a failure. This protocol establishes a session between the two endpoints over a link and uses the forwarding engine. When BFD is enabled, the PIM process attempts to add a BFD session as each neighbor is discovered. If a BFD session already exists, no duplicate is created but PIM receives a callback that contains the state of the BFD session. You can enable BFD for PIM per VRF or per interface.

Send document comments to nexus7k-docfeedback@cisco.com

PIM removes the BFD session when you disable BFD for that VRF or interface, the interface is no longer a PIM interface, or the neighboring BFD session goes down.

Virtualization Support

A virtual device context (VDC) is a logical representation of a set of system resources. Within each VDC, multiple virtual routing and forwarding (VRF) instances can be defined. For each VRF in a VDC in the system, independent multicast system resources are maintained, including the MRIB and M6RIB.

You can use the PIM and PIM6 **show** commands with a VRF argument to provide a context for the information displayed. The default VRF is used if no VRF argument is supplied.

For information about configuring VDCs, see the *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.2*.

For information about configuring VRFs, see the *Cisco Nexus 7000 Series NX-OS Unicast Routing Configuration Guide, Release 5.x*.

High Availability

For information about high availability, see the *Cisco Nexus 7000 Series NX-OS High Availability and Redundancy Guide, Release 5.x*.

Licensing Requirements for PIM and PIM6

The following table shows the licensing requirements for this feature:

Product	License Requirement
Cisco NX-OS	PIM and PIM6 require an Enterprise Services license. For a complete explanation of the Cisco NX-OS licensing scheme and how to obtain and apply licenses, see the <i>Cisco NX-OS Licensing Guide</i> .

Prerequisites for PIM and PIM6

PIM and PIM6 have the following prerequisites:

- You are logged onto the device.
- You are in the correct virtual device context (VDC). A VDC is a logical representation of a set of system resources. You can use the **switchto vdc** command with a VDC number.
- For global commands, you are in the correct virtual routing and forwarding (VRF) mode. The default configuration mode shown in the examples in this chapter applies to the default VRF.

Guidelines and Limitations for PIM and PIM6

PIM and PIM6 have the following guidelines and limitations:

Send document comments to nexus7k-docfeedback@cisco.com

- Tunnel interfaces do not support PIM until Cisco NX-OS Release 5.2(1). Beginning with Release 5.2(1), you can configure multicast on GRE tunnel interfaces.
- Cisco NX-OS PIM and PIM6 do not interoperate with any version of PIM dense mode or PIM sparse mode version 1.
- Do not configure both Auto-RP and BSR protocols in the same network.
- Configure candidate RP intervals to a minimum of 15 seconds.
- If a device is configured with a BSR policy that should prevent it from being elected as the BSR, the device ignores the policy. This behavior results in the following undesirable conditions:
 - If a device receives a BSM that is permitted by the policy, the device, which incorrectly elected itself as the BSR, drops that BSM so that routers downstream fail to receive it. Downstream devices correctly filter the BSM from the incorrect BSR so that these devices do not receive RP information.
 - A BSM received by a BSR from a different device sends a new BSM but ensures that downstream devices do not receive the correct BSM.
- While using a virtual port channel (vPC) with dual supervisors, you must use the default timers as follows:
 - While using dual supervisors where we recommend high default timer values; convergence will suffer on a link failure. If you want to perform ISSU or you want the system to do an SSO without any network reconvergence, you must specify higher default timer values.
 - Beginning with Release 5.x, we recommend that you use BFD for PIM instead of nondefault timers.
- Default PIM timer values are recommended for most deployments. ISSU/SSO may not function as expected if timers are modified from the default values.
- Beginning with Release 5.x, we recommend that you use BFD for PIM to support subsecond failure detection.

Default Settings

Table 1-2 lists the default settings for PIM and PIM6 parameters.

Table 1-2 **Default PIM and PIM6 Parameters**

Parameters	Default
Use shared trees only	Disabled
Flush routes on restart	Disabled
Log Neighbor changes	Disabled
Auto-RP message action	Disabled
BSR message action	Disabled
SSM multicast group range or policy	232.0.0.0/8 for IPv4 and FF3x::/96 for IPv6
PIM sparse mode	Disabled
Designated router priority	0
Hello authentication mode	Disabled
Domain border	Disabled

[Send document comments to nexus7k-docfeedback@cisco.com](mailto:nexus7k-docfeedback@cisco.com)

Table 1-2 Default PIM and PIM6 Parameters (continued)

Parameters	Default
RP address policy	No message filtering
PIM register message policy	No message filtering
BSR candidate RP policy	No message filtering
BSR policy	No message filtering
Auto-RP mapping agent policy	No message filtering
Auto-RP RP candidate policy	No message filtering
Join-prune policy	No message filtering
Neighbor adjacency policy	Become adjacent with all PIM neighbors
BFD	Disabled

Configuring PIM and PIM6

You can configure both PIM and PIM6 on the same router. You configure either PIM or PIM6 for each interface, depending on whether that interface is running IPv4 or IPv6.



Note

Cisco NX-OS supports only PIM sparse mode version 2. In this publication, “PIM” refers to PIM sparse mode version 2.

You can configure separate ranges of addresses in the PIM or PIM6 domain using the multicast distribution modes described in [Table 1-3](#).

Table 1-3 PIM and PIM6 Multicast Distribution Modes

Multicast Distribution Mode	Requires RP Configuration	Description
ASM	Yes	Any source multicast
Bidir	Yes	Bidirectional shared trees
SSM	No	Single source multicast
RPF routes for multicast	No	RPF routes for multicast

To configure PIM and PIM6, follow these steps:

- Step 1** From the multicast distribution modes described in [Table 1-3](#), select the range of multicast groups that you want to configure in each mode.
- Step 2** Enable the PIM and PIM6 features. See the “[Enabling the PIM and PIM6 Features](#)” section on page 1-21.
- Step 3** Configure PIM or PIM6 sparse mode on each interface that you want to participate in a PIM domain. See the “[Configuring PIM or PIM6 Sparse Mode](#)” section on page 1-22.
- Step 4** Follow the configuration steps for the multicast distribution modes that you selected in Step 1 as follows:
 - For ASM or Bidir mode, see the “[Configuring ASM and Bidir](#)” section on page 1-29.

Send document comments to nexus7k-docfeedback@cisco.com

- For SSM mode, see the “Configuring SSM” section on page 1-42.
- For RPF routes for multicast, see the “Configuring RPF Routes for Multicast” section on page 1-44.

Step 5 Configure message filtering. See the “Configuring Message Filtering” section on page 1-48.

The CLI commands used to configure PIM or PIM6 differ as follows:

- Commands begin with **ip pim** for PIM and begin with **ipv6 pim** for PIM6.
- Commands begin with **show ip pim** for PIM and begin with **show ipv6 pim** for PIM6.

This section includes the following topics:

- [Enabling the PIM and PIM6 Features, page 1-21](#)
- [Configuring PIM or PIM6 Sparse Mode, page 1-22](#)
- [Configuring ASM and Bidir, page 1-29](#)
- [Configuring SSM, page 1-42](#)
- [Configuring RPF Routes for Multicast, page 1-44](#)
- [Configuring Route Maps to Control RP Information Distribution, page 1-45](#)
- [Configuring Message Filtering, page 1-48](#)
- [Restarting the PIM and PIM6 Processes, page 1-52](#)
- [Configuring BFD for PIM, page 1-54](#)

**Note**

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

Enabling the PIM and PIM6 Features

Before you can access the PIM or PIM6 commands, you must enable the PIM or PIM6 feature.

BEFORE YOU BEGIN

Ensure that you have installed the Enterprise Services license.

SUMMARY STEPS

1. **config t**
2. **feature pim**
3. **feature pim6**
4. **(Optional) show running-configuration pim**
5. **(Optional) show running-configuration pim6**
6. **(Optional) copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com

DETAILED STEPS

	Command	Purpose
Step 1	<code>config t</code> Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	<code>feature pim</code> Example: switch(config)# feature pim	Enables PIM. By default, PIM is disabled.
Step 3	<code>feature pim6</code> Example: switch(config)# feature pim6	Enables PIM6. By default, PIM6 is disabled.
Step 4	<code>show running-configuration pim</code> Example: switch(config)# show running-configuration pim	(Optional) Shows the running-configuration information for PIM, including the feature command.
Step 5	<code>show running-configuration pim6</code> Example: switch(config)# show running-configuration pim6	(Optional) Shows the running-configuration information for PIM6, including the feature command.
Step 6	<code>copy running-config startup-config</code> Example: switch(config)# copy running-config startup-config	(Optional) Saves configuration changes.

Configuring PIM or PIM6 Sparse Mode

You configure PIM or PIM6 sparse mode on every device interface that you want to participate in a sparse mode domain. You can configure the sparse mode parameters described in [Table 1-4](#).

Table 1-4 PIM and PIM6 Sparse Mode Parameters

Parameter	Description
Global to the device	
Auto-RP message action	Enables listening and forwarding of Auto-RP messages. The default is disabled, which means that the router does not listen or forward Auto-RP messages unless it is configured as a candidate RP or mapping agent. Note PIM6 does not support the Auto-RP method.
BSR message action	Enables listening and forwarding of BSR messages. The default is disabled, which means that the router does not listen or forward BSR messages unless it is configured as a candidate RP or BSR candidate.

Send document comments to nexus7k-docfeedback@cisco.com

Table 1-4 PIM and PIM6 Sparse Mode Parameters (continued)

Parameter	Description
Bidir RP limit	Configures the number of Bidir RPs that you can configure for IPv4 and IPv6. The maximum number of Bidir RPs supported per VRF for PIM and PIM6 combined cannot exceed 8. Values range from 0 to 8. The default is 6 for IPv4 and 2 for IPv6.
Register rate limit	Configures the IPv4 or IPv6 register rate limit in packets per second. The range is from 1 to 65,535. The default is no limit.
Initial holddown period	Configures the IPv4 or IPv6 initial holddown period in seconds. This holddown period is the time it takes for the MRIB to come up initially. If you want faster convergence, enter a lower value. The range is from 90 to 210. Specify 0 to disable the holddown period. The default is 210.
Per device interface	
PIM sparse mode	Enables PIM or PIM6 on an interface.
Designated router priority	Sets the designated router (DR) priority that is advertised in PIM hello messages on this interface. On a multi-access network with multiple PIM-enabled routers, the router with the highest DR priority is elected as the DR router. If the priorities match, the software elects the DR with the highest IP address. The DR originates PIM register messages for the directly connected multicast sources and sends PIM join messages toward the rendezvous point (RP) for directly connected receivers. Values range from 1 to 4294967295. The default is 1.
Hello authentication mode	<p>Enables an MD5 hash authentication key, or password, in PIM hello messages on the interface so that directly connected neighbors can authenticate each other. The PIM hello messages are IPsec encoded using the Authentication Header (AH) option. You can enter an unencrypted (cleartext) key or one of these values followed by a space and the MD5 authentication key:</p> <ul style="list-style-type: none"> • 0—Specifies an unencrypted (cleartext) key • 3—Specifies a 3-DES encrypted key • 7—Specifies a Cisco Type 7 encrypted key <p>The authentication key can be up to 16 characters. The default is disabled.</p> <p>Note PIM6 does not support hello authentication.</p>
Hello interval	Configures the interval at which hello messages are sent in milliseconds. The range is from 1 to 4294967295. The default is 30000.

Send document comments to nexus7k-docfeedback@cisco.com

Table 1-4 PIM and PIM6 Sparse Mode Parameters (continued)

Parameter	Description
Domain border	Enables the interface to be on the border of a PIM domain so that no bootstrap, candidate-RP, or Auto-RP messages are sent or received on the interface. The default is disabled. Note PIM6 does not support the Auto-RP method.
Neighbor policy	Configures which PIM neighbors to become adjacent to based on a route-map policy ¹ where you can specify IP addresses to become adjacent to with the match ip[v6] address command. If the policy name does not exist, or no IP addresses are configured in a policy, adjacency is established with all neighbors. The default is to become adjacent with all PIM neighbors. Note We recommend that you should configure this feature only if you are an experienced network administrator.

1. To configure route-map policies, see the *Cisco Nexus 7000 Series NX-OS Unicast Routing Configuration Guide, Release 5.x*.

For information about configuring multicast route maps, see the “[Configuring Route Maps to Control RP Information Distribution](#)” section on page 1-45.



Note

To configure the join-prune policy, see the “[Configuring Message Filtering](#)” section on page 1-48.

BEFORE YOU BEGIN

Ensure that you have installed the Enterprise Services license and enabled PIM or PIM6.

SUMMARY STEPS

PIM Commands

1. **config t**
2. (Optional) **ip pim auto-rp {listen [forward] | forward [listen]}**
3. (Optional) **ip pim bsr {listen [forward] | forward [listen]}**
4. (Optional) **show ip pim rp [ip-prefix] [vrf vrf-name | all]**
5. (Optional) **ip pim bidir-rp-limit limit**
6. (Optional) **ip pim register-rate-limit rate**
7. (Optional) **[ip | ipv4] routing multicast holddown holddown-period**
8. **show running-configuration pim**
9. **interface interface**
10. **ip pim sparse-mode**
11. (Optional) **ip pim dr-priority priority**
12. (Optional) **ip pim hello-authentication ah-md5 auth-key**
13. (Optional) **ip pim hello-interval interval**
14. (Optional) **ip pim border**

Send document comments to nexus7k-docfeedback@cisco.com

15. (Optional) `ip pim neighbor-policy policy-name`
16. (Optional) `show ip pim interface [interface | brief] [vrf vrf-name | all]`
17. (Optional) `copy running-config startup-config`

PIM6 Commands

1. `config t`
2. (Optional) `ipv6 pim bsr {listen [forward] | forward [listen]}`
3. (Optional) `show ipv6 pim rp [ipv6-prefix] [vrf vrf-name | all]`
4. (Optional) `ipv6 pim bidir-rp-limit limit`
5. (Optional) `ipv6 pim register-rate-limit rate`
6. (Optional) `ipv6 routing multicast holddown holddown-period`
7. `show running-configuration pim6`
8. `interface interface`
9. `ipv6 pim sparse-mode`
10. (Optional) `ipv6 pim dr-priority priority`
11. (Optional) `ipv6 pim hello-interval interval`
12. (Optional) `ipv6 pim border`
13. (Optional) `ipv6 pim neighbor-policy policy-name`
14. (Optional) `show ipv6 pim interface [interface | brief] [vrf vrf-name | all]`
15. (Optional) `copy running-config startup-config`

DETAILED STEPS

PIM Commands

	Command	Purpose
Step 1	<code>config t</code> Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	<code>ip pim auto-rp {listen [forward] forward [listen]}</code> Example: switch(config)# ip pim auto-rp listen	(Optional) Enables listening or forwarding of Auto-RP messages. The default is disabled, which means that the software does not listen to or forward Auto-RP messages.
Step 3	<code>ip pim bsr {listen [forward] forward [listen]}</code> Example: switch(config)# ip pim bsr forward	(Optional) Enables listening or forwarding of BSR messages. The default is disabled, which means that the software does not listen or forward BSR messages.
Step 4	<code>show ip pim rp [<i>ip-prefix</i>] [vrf <i>vrf-name</i> all]</code> Example: switch(config)# show ip pim rp	(Optional) Displays PIM RP information, including Auto-RP and BSR listen and forward states.

Send document comments to nexus7k-docfeedback@cisco.com

	Command	Purpose
Step 5	<pre>ip pim bidir-rp-limit limit</pre> <p>Example: switch(config)# ip pim bidir-rp-limit 4</p>	(Optional) Specifies the number of Bidir RPs that you can configure for IPv4. The maximum number of Bidir RPs supported per VRF for PIM and PIM6 combined cannot exceed 8. Values range from 0 to 8. The default is 6.
Step 6	<pre>ip pim register-rate-limit rate</pre> <p>Example: switch(config)# ip pim register-rate-limit 1000</p>	(Optional) Configures the rate limit in packets per second. The range is from 1 to 65,535. The default is no limit.
Step 7	<pre>[ip ipv4] routing multicast holddown holddown-period</pre> <p>Example: switch(config)# ip routing multicast holddown 100</p>	(Optional) Configures the initial holddown period in seconds. The range is from 90 to 210. Specify 0 to disable the holddown period. The default is 210.
Step 8	<pre>show running-configuration pim</pre> <p>Example: switch(config)# show running-configuration pim</p>	(Optional) Displays PIM running-configuration information, including the Bidir RP limit and register rate limit.
Step 9	<pre>interface interface</pre> <p>Example: switch(config)# interface ethernet 2/1 switch(config-if)#</p>	Enters interface mode on the interface type and number, such as ethernet slot/port .
Step 10	<pre>ip pim sparse-mode</pre> <p>Example: switch(config-if)# ip pim sparse-mode</p>	Enables PIM sparse mode on this interface. The default is disabled.
Step 11	<pre>ip pim dr-priority priority</pre> <p>Example: switch(config-if)# ip pim dr-priority 192</p>	(Optional) Sets the designated router (DR) priority that is advertised in PIM hello messages. Values range from 1 to 4294967295. The default is 1.
Step 12	<pre>ip pim hello-authentication ah-md5 auth-key</pre> <p>Example: switch(config-if)# ip pim hello-authentication ah-md5 my_key</p>	<p>(Optional) Enables an MD5 hash authentication key in PIM hello messages. You can enter an unencrypted (cleartext) key or one of these values followed by a space and the MD5 authentication key:</p> <ul style="list-style-type: none"> 0—Specifies an unencrypted (cleartext) key 3—Specifies a 3-DES encrypted key 7—Specifies a Cisco Type 7 encrypted key <p>The key can be up to 16 characters. The default is disabled.</p>
Step 13	<pre>ip pim hello-interval interval</pre> <p>Example: switch(config-if)# ip pim hello-interval 25000</p>	<p>(Optional) Configures the interval at which hello messages are sent in milliseconds. The range is from 1000 to 18724286. The default is 30000.</p> <p>Note Before Cisco NX-OS Release 5.2(1), the minimum value was 1 millisecond.</p>

Send document comments to nexus7k-docfeedback@cisco.com

	Command	Purpose
Step 14	ip pim border Example: switch(config-if)# ip pim border	(Optional) Enables the interface to be on the border of a PIM domain so that no bootstrap, candidate-RP, or Auto-RP messages are sent or received on the interface. The default is disabled.
Step 15	ip pim neighbor-policy <i>policy-name</i> Example: switch(config-if)# ip pim neighbor-policy my_neighbor_policy	(Optional) Configures which PIM neighbors to become adjacent to based on a route-map policy with the match ip address command. The policy name can be up to 63 characters. The default is to become adjacent with all PIM neighbors. Note We recommend that you should configure this feature only if you are an experienced network administrator.
Step 16	show ip pim interface [<i>interface</i> brief] [vrf <i>vrf-name</i> all] Example: switch(config-if)# show ip pim interface	(Optional) Displays PIM interface information.
Step 17	copy running-config startup-config Example: switch(config-if)# copy running-config startup-config	(Optional) Saves configuration changes.

PIM6 Commands

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	ipv6 pim bsr { listen [forward] forward [listen]} Example: switch(config)# ipv6 pim bsr forward	(Optional) Enables listening or forwarding of BSR messages. The default is disabled, which means that the software does not listen or forward BSR messages.
Step 3	show ipv6 pim rp [<i>ipv6-prefix</i>] [vrf <i>vrf-name</i> all] Example: switch(config)# show ipv6 pim rp	(Optional) Displays PIM6 RP information, including BSR listen and forward states.
Step 4	ipv6 pim bidir-rp-limit <i>limit</i> Example: switch(config)# ipv6 pim bidir-rp-limit 4	(Optional) Specifies the number of Bidir RPs that you can configure for IPv6. The maximum number of Bidir RPs supported per VRF for PIM and PIM6 combined cannot exceed 8. Values range from 0 to 8. The default is 2.
Step 5	ipv6 pim register-rate-limit <i>rate</i> Example: switch(config)# ipv6 pim register-rate-limit 1000	(Optional) Configures the rate limit in packets per second. The range is from 1 to 65,535. The default is no limit.

Send document comments to nexus7k-docfeedback@cisco.com

	Command	Purpose
Step 6	<pre>ipv6 routing multicast holddown holddown-period</pre> <p>Example: switch(config)# ipv6 routing multicast holddown 100</p>	(Optional) Configures the initial holddown period in seconds. The range is from 90 to 210. Specify 0 to disable the holddown period. The default is 210.
Step 7	<pre>show running-configuration pim6</pre> <p>Example: switch(config)# show running-configuration pim6</p>	(Optional) Displays PIM6 running-configuration information, including the Bidir RP limit and register rate limit.
Step 8	<pre>interface interface</pre> <p>Example: switch(config)# interface ethernet 2/1 switch(config-if)#</p>	Enters interface mode on the specified interface.
Step 9	<pre>ipv6 pim sparse-mode</pre> <p>Example: switch(config-if)# ipv6 pim sparse-mode</p>	Enables PIM6 sparse mode on this interface. The default is disabled.
Step 10	<pre>ipv6 pim dr-priority priority</pre> <p>Example: switch(config-if)# ipv6 pim dr-priority 192</p>	(Optional) Sets the designated router (DR) priority that is advertised in PIM6 hello messages. Values range from 1 to 4294967295. The default is 1.
Step 11	<pre>ipv6 pim hello-interval interval</pre> <p>Example: switch(config-if)# ipv6 pim hello-interval 25000</p>	(Optional) Configures the interval at which hello messages are sent in milliseconds. The range is from 1000 to 18724286. The default is 30000. Note Before Cisco NX-OS Release 5.2(1), the minimum value was 1 millisecond.
Step 12	<pre>ipv6 pim border</pre> <p>Example: switch(config-if)# ipv6 pim border</p>	(Optional) Enables the interface to be on the border of a PIM6 domain so that no bootstrap, candidate-RP, or Auto-RP messages are sent or received on the interface. The default is disabled.
Step 13	<pre>ipv6 pim neighbor-policy policy-name</pre> <p>Example: switch(config-if)# ipv6 pim neighbor-policy my_neighbor_policy</p>	(Optional) Configures which PIM6 neighbors to become adjacent to based on a route-map policy with the match ipv6 address command. The policy name can be up to 63 characters. The default is to become adjacent with all PIM6 neighbors. Note We recommend that you should configure this feature only if you are an experienced network administrator.
Step 14	<pre>show ipv6 pim interface [interface brief] [vrf vrf-name all]</pre> <p>Example: switch(config-if)# show ipv6 pim interface</p>	(Optional) Displays PIM6 interface information.
Step 15	<pre>copy running-config startup-config</pre> <p>Example: switch(config-if)# copy running-config startup-config</p>	(Optional) Saves configuration changes.

[Send document comments to nexus7k-docfeedback@cisco.com](mailto:nexus7k-docfeedback@cisco.com)

Configuring ASM and Bidir

Any Source Multicast (ASM) and bidirectional shared trees (Bidir) are multicast distribution modes that require the use of RPs to act as a shared root between sources and receivers of multicast data.

To configure ASM or Bidir mode, you configure sparse mode and the RP selection method, where you indicate the distribution mode and assign the range of multicast groups.



Note

Bidir mode is not supported for vPCs. For more information about vPCs, see the *Cisco Nexus 7000 Series NX-OS Interfaces Configuration Guide, Release 5.x*.

This section includes the following topics:

- [Configuring Static RPs, page 1-29](#)
- [Configuring BSRs, page 1-31](#)
- [Configuring Auto-RP, page 1-35](#)
- [Configuring a PIM Anycast-RP Set, page 1-37](#)
- [Configuring Shared Trees Only for ASM, page 1-40](#)

Configuring Static RPs

You can configure an RP statically by configuring the RP address on every router that will participate in the PIM domain.

You can specify a route-map policy name that lists the group prefixes to use with the **match ip multicast** command.

Beginning with Cisco NX-OS Release 5.1(3), the **ip pim rp-address** command has been enhanced with the following functionalities:

- Added prefix-list method of configuration in addition to existing route-map method.
- Added support for policy actions (route-map or prefix-list).



Note

Cisco NX-OS always uses the longest-match prefix to find the RP. So, the behavior is the same irrespective of the position of the group prefix in the route map or in the prefix list.

The following example configuration produce the same output using Cisco NX-OS (231.1.1.0/24 is always denied irrespective of the sequence number):

```
ip prefix-list plist seq 10 deny 231.1.1.0/24
ip prefix-list plist seq 20 permit 231.1.0.0/16
```

```
ip prefix-list plist seq 10 permit 231.1.0.0/16
ip prefix-list plist seq 20 deny 231.1.1.0/24
```

This behavior differs from Cisco IOS. See the *Cisco Nexus 7000 Series NX-OS Multicast Routing Command Reference, Release 5.x*, behavior for more samples for the **ip pim rp-address** command.

BEFORE YOU BEGIN

Ensure that you have installed the Enterprise Services license and enabled PIM or PIM6.

Send document comments to nexus7k-docfeedback@cisco.com

SUMMARY STEPS

PIM Commands

1. `config t`
2. `ip pim rp-address rp-address [group-list ip-prefix | route-map policy-name] [bidir]`
3. (Optional) `show ip pim group-range [ip-prefix] [vrf vrf-name | all]`
4. (Optional) `copy running-config startup-config`

PIM6 Commands

1. `config t`
2. `ipv6 pim rp-address rp-address [group-list ipv6-prefix | route-map policy-name] [bidir]`
3. (Optional) `show ipv6 pim group-range [ipv6-prefix] [vrf vrf-name | all]`
4. (Optional) `copy running-config startup-config`

DETAILED STEPS

PIM Commands

	Command	Purpose
Step 1	<code>config t</code> Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	<code>ip pim rp-address rp-address [group-list ip-prefix route-map policy-name] [bidir]</code> Example 1: switch(config)# ip pim rp-address 192.0.2.33 group-list 224.0.0.0/9 Example 2: switch(config)# ip pim rp-address 192.0.2.34 group-list 224.128.0.0/9 bidir	Configures a PIM static RP address for a multicast group range. You can specify a route-map policy name that lists the group prefixes to use with the match ip multicast command. The default mode is ASM unless you specify the bidir keyword. The default group range is 224.0.0.0 through 239.255.255.255. Example 1 configures PIM ASM mode for the specified group range. Example 2 configures PIM Bidir mode for the specified group range.
Step 3	<code>show ip pim group-range [ip-prefix] [vrf vrf-name all]</code> Example: switch(config)# show ip pim group-range	(Optional) Displays PIM modes and group ranges.
Step 4	<code>copy running-config startup-config</code> Example: switch(config)# copy running-config startup-config	(Optional) Saves configuration changes.

Send document comments to nexus7k-docfeedback@cisco.com

PIM6 Commands

	Command	Purpose
Step 1	<code>confi g t</code> Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	<code>ipv6 pim rp-address rp-address</code> <code>[group-list ipv6-prefix route-map</code> <code>policy-name] [bidir]</code> Example 1: switch(config)# ipv6 pim rp-address 2001:0db8:0:abcd::1 group-list ff1e:abcd:def1::0/24 Example 2: switch(config)# ipv6 pim rp-address 2001:0db8:0:abcd::2 group-list ff1e:abcd:def2::0/96 bidir	Configures a PIM6 static RP address for a multicast group range. You can specify a route-map policy name that lists the group prefixes to use with the match ip multicast command. The mode is ASM unless you specify the bidir keyword. The default group range is ff00::0/8. Example 1 configures PIM6 ASM mode for the specified group range. Example 2 configures PIM6 Bidir mode for the specified group range.
Step 3	<code>show ipv6 pim group-range [ipv6-prefix]</code> <code>[vrf vrf-name all]</code> Example: switch(config)# show ipv6 pim group-range	(Optional) Displays PIM6 modes and group ranges.
Step 4	<code>copy running-config startup-config</code> Example: switch(config)# copy running-config startup-config	(Optional) Saves configuration changes.

Configuring BSRs

You configure BSRs by selecting candidate BSRs and RPs.



Caution

Do not configure both Auto-RP and BSR protocols in the same network.

You can configure a candidate BSR with the arguments described in [Table 1-5](#).

Table 1-5 Candidate BSR Arguments

Argument	Description
<i>interface</i>	Interface type and number used to derive the BSR source IP address used in bootstrap messages.
<i>hash-length</i>	Number of high order 1s used to form a mask that is ANDed with group address ranges of candidate RPs to form a hash value. The mask determines the number of consecutive addresses to assign across RPs with the same group range. For PIM, this value ranges from 0 to 32 and has a default of 30. For PIM6, this value ranges from 0 to 128 and has a default of 126.
<i>priority</i>	Priority assigned to this BSR. The software elects the BSR with the highest priority, or if the BSR priorities match, the software elects the BSR with the highest IP address. This value ranges from 0, the lowest priority, to 255 and has a default of 64.

Send document comments to nexus7k-docfeedback@cisco.com

You can configure a candidate RP with the arguments and keywords described in [Table 1-6](#).

Table 1-6 BSR Candidate RP Arguments and Keywords

Argument or Keyword	Description
<i>interface</i>	Interface type and number used to derive the BSR source IP address used in Bootstrap messages.
group-list <i>ip-prefix</i>	Multicast groups handled by this RP specified in a prefix format.
<i>interval</i>	Number of seconds between sending candidate-RP messages. This value ranges from 1 to 65,535 and has a default of 60 seconds. Note We recommend that you configure the candidate RP interval to a minimum of 15 seconds.
<i>priority</i>	Priority assigned to this RP. The software elects the RP with the highest priority for a range of groups, or if the priorities match, the highest IP address. (The highest priority is the lowest numerical value.) This value ranges from 0, the highest priority, to 255 and has a default of 192. Note This priority differs from the BSR BSR-candidate priority, which prefers the highest value between 0 and 255.
bidir	Unless you specify bidir, this RP will be in ASM mode. If you specify bidir, the RP will be in Bidir mode.
route-map <i>policy-name</i>	Route-map policy name that defines the group prefixes where this feature is applied.



Tip

You should choose the candidate BSRs and candidate RPs that have good connectivity to all parts of the PIM domain.

You can configure the same router to be both a BSR and a candidate RP. In a domain with many routers, you can select multiple candidate BSRs and RPs to automatically fail over to alternates if a BSR or an RP fails.

To configure candidate BSRs and RPs, follow these steps:

- Step 1** Configure whether each router in the PIM domain should listen and forward BSR messages. A router configured as either a candidate RP or a candidate BSR will automatically listen to and forward all bootstrap router protocol messages, unless an interface is configured with the domain border feature. For more information, see the [“Configuring PIM or PIM6 Sparse Mode”](#) section on page 1-22.
- Step 2** Select the routers to act as candidate BSRs and RPs.
- Step 3** Configure each candidate BSR and candidate RP as described in this section.
- Step 4** Configure BSR message filtering. See the [“Configuring Message Filtering”](#) section on page 1-48.

BEFORE YOU BEGIN

Ensure that you have installed the Enterprise Services license and enabled PIM or PIM6.

Send document comments to nexus7k-docfeedback@cisco.com

SUMMARY STEPS

PIM Commands

1. `config t`
2. `ip pim bsr listen forward`
3. `ip pim [bsr] bsr-candidate interface [hash-len hash-length] [priority priority]`
4. `ip pim [bsr] rp-candidate interface {group-list ip-prefix | route-map policy-name} [priority priority] [interval interval] [bidir]`
5. (Optional) `show ip pim group-range [ip-prefix] [vrf vrf-name | all]`
6. (Optional) `copy running-config startup-config`

PIM6 Commands

1. `config t`
2. `ipv6 pim [bsr] bsr-candidate interface [hash-len hash-length] [priority priority]`
3. `ipv6 pim [bsr] rp-candidate interface {group-list ipv6-prefix | route-map policy-name} [priority priority] [interval interval] [bidir]`
4. (Optional) `show ipv6 pim group-range [ipv6-prefix] [vrf vrf-name | all]`
5. (Optional) `copy running-config startup-config`

DETAILED STEPS

PIM Commands

	Command	Purpose
Step 1	<code>config t</code> Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	<code>ip pim bsr listen forward</code> Example: switch(config)# ip pim bsr listen forward	Configures listen and forward. Ensure that you have entered this command in each VRF on the remote PE.
Step 3	<code>ip pim [bsr] bsr-candidate interface [hash-len hash-length] [priority priority]</code> Example: switch(config)# ip pim bsr-candidate ethernet 2/1 hash-len 24	Configures a candidate bootstrap router (BSR). The source IP address used in a bootstrap message is the IP address of the interface. The hash length ranges from 0 to 32 and has a default of 30. The priority ranges from 0 to 255 and has a default of 64. For parameter details, see Table 1-5 .

Send document comments to nexus7k-docfeedback@cisco.com

	Command	Purpose
Step 4	<pre>ip pim [bsr] rp-candidate interface {group-list ip-prefix route-map policy-name} [priority priority] [interval interval] [bidir]</pre> <p>Example 1: switch(config)# ip pim rp-candidate ethernet 2/1 group-list 239.0.0.0/24</p> <p>Example 2: switch(config)# ip pim rp-candidate ethernet 2/1 group-list 239.0.0.0/24 bidir</p>	<p>Configures a candidate RP for BSR. The priority ranges from 0, the highest priority, to 65,535 and has a default of 192. The interval ranges from 1 to 65,535 seconds and has a default of 60.</p> <p>Note We recommend that you configure the candidate RP interval to a minimum of 15 seconds.</p> <p>Example 1 configures an ASM candidate RP. Example 2 configures a Bidir candidate RP.</p>
Step 5	<pre>show ip pim group-range [ip-prefix] [vrf vrf-name all]</pre> <p>Example: switch(config)# show ip pim group-range</p>	(Optional) Displays PIM modes and group ranges.
Step 6	<pre>copy running-config startup-config</pre> <p>Example: switch(config)# copy running-config startup-config</p>	(Optional) Saves configuration changes.

PIM6 Commands

	Command	Purpose
Step 1	<pre>config t</pre> <p>Example: switch# config t switch(config)#</p>	Enters configuration mode.
Step 2	<pre>ipv6 pim [bsr] bsr-candidate interface [hash-len hash-length] [priority priority]</pre> <p>Example: switch(config)# ipv6 pim bsr-candidate ethernet 2/1 hash-len 24 priority 192</p>	Configures a candidate bootstrap router (BSR). The source IP address used in a bootstrap message is the IP address of the interface. The hash length ranges from 0 to 128 and has a default of 126. The priority ranges from 0, the lowest priority, to 255 and has a default of 64. For parameter details, see Table 1-5 .
Step 3	<pre>ipv6 pim [bsr] rp-candidate interface {group-list ipv6-prefix route-map policy-name} [priority priority] [interval interval] [bidir]</pre> <p>Example 1: switch(config)# ipv6 pim rp-candidate ethernet 2/1 group-list ff1e:abcd:def1::0/24</p> <p>Example 2: switch(config)# ipv6 pim rp-candidate ethernet 2/1 group-list ff1e:abcd:def2::0/24 bidir</p>	<p>Configures a candidate RP for BSR. The priority ranges from 0, the highest priority, to 65,535 and has a default of 192. The interval ranges from 1 to 65,535 seconds and has a default of 60. For parameter details, see Table 1-6.</p> <p>Example 1 configures an ASM candidate RP. Example 2 configures a Bidir candidate RP.</p>

Send document comments to nexus7k-docfeedback@cisco.com

	Command	Purpose
Step 4	<pre>show ipv6 pim group-range [ipv6-prefix] [vrf vrf-name all]</pre> <p>Example: switch(config)# show ipv6 pim group-range</p>	(Optional) Displays PIM6 modes and group ranges.
Step 5	<pre>copy running-config startup-config</pre> <p>Example: switch(config)# copy running-config startup-config</p>	(Optional) Saves configuration changes.

Use the **show ipv6 pim group-range** command to display the configured PIM6 modes and group ranges.

Configuring Auto-RP

You can configure Auto-RP by selecting candidate mapping agents and RPs. You can configure the same router to be both a mapping agent and a candidate RP.



Note

Auto-RP is not supported by PIM6.



Caution

Do not configure both Auto-RP and BSR protocols in the same network.

You can configure an Auto-RP mapping agent with the arguments described in [Table 1-7](#).

Table 1-7 Auto-RP Mapping Agent Arguments

Argument	Description
<i>interface</i>	Interface type and number used to derive the IP address of the Auto-RP mapping agent used in bootstrap messages.
scope ttl	Time-To-Live (TTL) value that represents the maximum number of hops that RP-Discovery messages are forwarded. This value can range from 1 to 255 and has a default of 32. Note See the border domain feature in the “ Configuring PIM or PIM6 Sparse Mode ” section on page 1-22.

If you configure multiple Auto-RP mapping agents, only one is elected as the mapping agent for the domain. The elected mapping agent ensures that all candidate RP messages are sent out. All mapping agents receive the candidate RP messages and advertise the same RP cache in their RP-discovery messages.

You can configure a candidate RP with the arguments and keywords described in [Table 1-8](#).

Send document comments to nexus7k-docfeedback@cisco.com

Table 1-8 Auto-RP Candidate RP Arguments and Keywords

Argument or Keyword	Description
<i>interface</i>	Interface type and number used to derive the IP address of the candidate RP used in Bootstrap messages.
group-list <i>ip-prefix</i>	Multicast groups handled by this RP. It is specified in a prefix format.
scope <i>tll</i>	Time-To-Live (TTL) value that represents the maximum number of hops that RP-Discovery messages are forwarded. This value can range from 1 to 255 and has a default of 32. Note See the border domain feature in the “ Configuring PIM or PIM6 Sparse Mode ” section on page 1-22.
<i>interval</i>	Number of seconds between sending RP-Announce messages. This value can range from 1 to 65,535 and has a default of 60. Note We recommend that you configure the candidate RP interval to a minimum of 15 seconds.
bidir	If not specified, this RP will be in ASM mode. If specified, this RP will be in Bidir mode.
route-map <i>policy-name</i>	Route-map policy name that defines the group prefixes where this feature is applied.



Tip

You should choose mapping agents and candidate RPs that have good connectivity to all parts of the PIM domain.

To configure Auto-RP mapping agents and candidate RPs, follow these steps:

-
- Step 1** For each router in the PIM domain, configure whether that router should listen and forward Auto-RP messages. A router configured as either a candidate RP or an Auto-RP mapping agent will automatically listen to and forward all Auto-RP protocol messages, unless an interface is configured with the domain border feature. For more information, see the “[Configuring PIM or PIM6 Sparse Mode](#)” section on page 1-22.
 - Step 2** Select the routers to act as mapping agents and candidate RPs.
 - Step 3** Configure each mapping agent and candidate RP as described in this section.
 - Step 4** Configure Auto-RP message filtering. See the “[Configuring Message Filtering](#)” section on page 1-48.
-

BEFORE YOU BEGIN

Ensure that you have installed the Enterprise Services license and enabled PIM or PIM6.

Send document comments to nexus7k-docfeedback@cisco.com

SUMMARY STEPS

PIM Commands

1. `config t`
2. `ip pim {send-rp-discovery | {auto-rp mapping-agent}} interface [scope ttl]`
3. `ip pim {send-rp-announce | {auto-rp rp-candidate}} interface {group-list ip-prefix | route-map policy-name} [scope ttl] [interval interval] [bidir]`
4. (Optional) `show ip pim group-range [ip-prefix] [vrf vrf-name | all]`
5. (Optional) `copy running-config startup-config`

DETAILED STEPS

PIM Commands

	Command	Purpose
Step 1	<code>config t</code> Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	<code>ip pim {send-rp-discovery {auto-rp mapping-agent}} interface [scope ttl]</code> Example: switch(config)# ip pim auto-rp mapping-agent ethernet 2/1	Configures an Auto-RP mapping agent. The source IP address used in Auto-RP Discovery messages is the IP address of the interface. The default scope is 32. For parameter details, see Table 1-7 .
Step 3	<code>ip pim {send-rp-announce {auto-rp rp-candidate}} interface {group-list ip-prefix route-map policy-name} [scope ttl] [interval interval] [bidir]</code> Example 1: switch(config)# ip pim auto-rp rp-candidate ethernet 2/1 group-list 239.0.0.0/24 Example 2: switch(config)# ip pim auto-rp rp-candidate ethernet 2/1 group-list 239.0.0.0/24 bidir	Configures an Auto-RP candidate RP. The default scope is 32. The default interval is 60 seconds. By default, the command creates an ASM candidate RP. For parameter details, see Table 1-8 . Note We recommend that you configure the candidate RP interval to a minimum of 15 seconds. Example1 configures an ASM candidate RP. Example 2 configures a Bidir candidate RP.
Step 4	<code>show ip pim group-range [ip-prefix] [vrf vrf-name all]</code> Example: switch(config)# show ip pim group-range	(Optional) Displays PIM modes and group ranges.
Step 5	<code>copy running-config startup-config</code> Example: switch(config)# copy running-config startup-config	(Optional) Saves configuration changes.

Configuring a PIM Anycast-RP Set

To configure a PIM Anycast-RP set, follow these steps:

Send document comments to nexus7k-docfeedback@cisco.com

-
- Step 1** Select the routers in the PIM Anycast-RP set.
- Step 2** Select an IP address for the PIM Anycast-RP set.
- Step 3** Configure each peer RP in the PIM Anycast-RP set as described in this section.
-

BEFORE YOU BEGIN

Ensure that you have installed the Enterprise Services license and enabled PIM or PIM6.

SUMMARY STEPS

PIM Commands

1. `config t`
2. `interface loopback number`
3. `ip address ip-prefix`
4. `exit`
5. `ip pim anycast-rp anycast-rp-address anycast-rp-peer-address`
6. Repeat Step 5 using the same *anycast-rp* for each RP in the RP set (including local router)
7. (Optional) `show ip pim group-range [ip-prefix] [vrf vrf-name | all]`
8. (Optional) `copy running-config startup-config`

PIM6 Commands

1. `config t`
2. `interface loopback number`
3. `ipv6 address ipv6-prefix`
4. `exit`
5. `ipv6 pim anycast-rp anycast-rp-address anycast-rp-peer-address`
6. Repeat Step 5 using the same *anycast-rp* for each RP in the RP set (including local router)
7. (Optional) `show ipv6 pim group-range [ipv6-prefix] [vrf vrf-name | all]`
8. (Optional) `copy running-config startup-config`

DETAILED STEPS

PIM Commands

	Command	Purpose
Step 1	<code>config t</code> Example: switch# <code>config t</code> switch(config)#	Enters configuration mode.
Step 2	<code>interface loopback number</code> Example: switch(config)# <code>interface loopback 0</code>	Configures an interface loopback. This example configures interface loopback 0.

Send document comments to nexus7k-docfeedback@cisco.com

	Command	Purpose
Step 3	ip address <i>ip-prefix</i> Example: switch(config-if)# ip address 192.0.2.3/32	Configures an IP address for this interface. This example configures an IP address for the Anycast-RP.
Step 4	exit Example: switch(config)# exit	Returns to configuration mode.
Step 5	ip pim anycast-rp <i>anycast-rp-address</i> <i>anycast-rp-peer-address</i> Example: switch(config)# ip pim anycast-rp 192.0.2.3 192.0.2.31	Configures a PIM Anycast-RP peer address for the specified Anycast-RP address. Each command with the same Anycast-RP address forms an Anycast-RP set. The IP addresses of RPs are used for communication with RPs in the set.
Step 6	Repeat Step 5 using the same Anycast-RP address for each RP in the RP set (including the local router).	—
Step 7	show ip pim group-range [<i>ip-prefix</i>] [vrf <i>vrf-name</i> all] Example: switch(config)# show ip pim group-range	(Optional) Displays PIM modes and group ranges.
Step 8	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves configuration changes.

PIM6 Commands

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	interface loopback <i>number</i> Example: switch(config)# interface loopback 0	Configures an interface loopback. This example configures loopback 0.
Step 3	ipv6 address <i>ipv6-prefix</i> Example: switch(config-if)# ipv6 address 2001:0db8:0:abcd::3/32	Configures an IP address for this interface. This example configures an IP address for the Anycast-RP.
Step 4	exit Example: switch(config)# exit	Returns to configuration mode.
Step 5	ipv6 pim anycast-rp <i>anycast-rp-address</i> <i>anycast-rp-peer-address</i> Example: switch(config)# ipv6 pim anycast-rp 2001:0db8:0:abcd::3 2001:0db8:0:abcd::31	Configures a PIM6 Anycast-RP peer address for the specified Anycast-RP address. Each command with the same Anycast-RP address forms an Anycast-RP set. The IP addresses of RPs are used for communication with RPs in the set.

Send document comments to nexus7k-docfeedback@cisco.com

	Command	Purpose
Step 6	Repeat Step 5 using the same Anycast-RP address for each RP in the RP set (including local router).	—
Step 7	<pre>show ipv6 pim group-range [ipv6-prefix] [vrf vrf-name all]</pre> <p>Example: switch(config)# show ipv6 pim group-range</p>	(Optional) Displays PIM6 modes and group ranges.
Step 8	<pre>copy running-config startup-config</pre> <p>Example: switch(config)# copy running-config startup-config</p>	(Optional) Saves configuration changes.

Configuring Shared Trees Only for ASM

You can configure shared trees only on the last-hop router for Any Source Multicast (ASM) groups, which means that the router never switches over from the shared tree to the SPT when a receiver joins an active group. You can specify a group range where the use of shared trees is to be enforced with the **match ip[v6] multicast** command. This option does not affect the normal operation of the router when a source tree join-prune message is received.



Note

The Cisco NX-OS software does not support the shared-tree feature on vPCs. For more information about vPCs, see the *Cisco Nexus 7000 Series NX-OS Interfaces Configuration Guide, Release 5.x*.

The default is disabled, which means that the software can switch over to source trees.



Note

In ASM mode, only the last-hop router switches from the shared tree to the SPT.

BEFORE YOU BEGIN

Ensure that you have installed the Enterprise Services license and enabled PIM or PIM6.

SUMMARY STEPS

PIM Commands

1. `config t`
2. `ip pim use-shared-tree-only group-list policy-name`
3. (Optional) `show ip pim group-range [ip-prefix] [vrf vrf-name | all]`
4. (Optional) `copy running-config startup-config`

PIM6 Commands

1. `config t`
2. `ipv6 pim use-shared-tree-only group-list policy-name`
3. (Optional) `show ipv6 pim group-range [ipv6-prefix] [vrf vrf-name | all]`

[Send document comments to nexus7k-docfeedback@cisco.com](mailto:nexus7k-docfeedback@cisco.com)

4. (Optional) copy running-config startup-config

DETAILED STEPS

PIM Commands

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	ip pim use-shared-tree-only group-list policy-name Example: switch(config)# ip pim use-shared-tree-only group-list my_group_policy	Builds only shared trees, which means that the software never switches over from the shared tree to the SPT. You specify a route-map policy name that lists the groups to use with the match ip multicast command. By default, the software triggers a PIM (S, G) join toward the source when it receives multicast packets for a source for which it has the (*, G) state.
Step 3	show ip pim group-range [ip-prefix] [vrf vrf-name all] Example: switch(config)# show ip pim group-range	(Optional) Displays PIM modes and group ranges.
Step 4	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves configuration changes.

PIM6 Commands

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	ipv6 pim use-shared-tree-only group-list policy-name Example: switch(config)# ipv6 pim use-shared-tree-only group-list my_group_policy	Builds only shared trees, which means that the software never builds source trees. You specify a route-map policy name that lists the groups to use with the match ipv6 multicast command. By default, the software triggers a PIM (S, G) join toward the source when it receives multicast packets for a source for which it has the (*, G) state.

Send document comments to nexus7k-docfeedback@cisco.com

	Command	Purpose
Step 3	<pre>show ipv6 pim group-range [ipv6-prefix] [vrf vrf-name all]</pre> <p>Example: switch(config)# show ipv6 pim group-range</p>	(Optional) Displays PIM6 modes and group ranges.
Step 4	<pre>copy running-config startup-config</pre> <p>Example: switch(config)# copy running-config startup-config</p>	(Optional) Saves configuration changes.

Configuring SSM

Source-Specific Multicast (SSM) is a multicast distribution mode where the software on the DR connected to a receiver that is requesting data for a multicast source builds a shortest path tree (SPT) to that source.

On an IPv4 network, a host can request multicast data for a specific source only if it is running IGMPv3 and the DR for that host is running IGMPv3. You will usually enable IGMPv3 when you configure an interface for PIM in the SSM mode. For hosts running IGMPv1 or IGMPv2, you can configure a group to source mapping using SSM translation. For more information, see [Chapter 1, “Configuring IGMP”](#) and [Chapter 1, “Configuring MLD.”](#)

You can configure the group range that is used by SSM by specifying values on the command line. By default, the SSM group range for PIM is 232.0.0.0/8 and for PIM6 is FF3x/96.

You can specify a route-map policy name that lists the group prefixes to use with the **match ip multicast** command.



Note

If you want to use the default SSM group range, you do not need to configure the SSM group range.

BEFORE YOU BEGIN

Ensure that you have installed the Enterprise Services license and enabled PIM or PIM6.

SUMMARY STEPS

PIM Commands

1. **config t**
2. **ip pim ssm {range {*ip-prefix* | none} | route-map *policy-name*}**
no ip pim ssm {range {*ip-prefix* | none} | route-map *policy-name*}
3. (Optional) **show ip pim group-range [*ip-prefix*] [vrf *vrf-name* | all]**
4. (Optional) **copy running-config startup-config**

PIM6 Commands

1. **config t**
2. **ipv6 pim ssm {range {*ipv6-prefix* | none} | route-map *policy-name*}**
no ipv6 pim ssm {range {*ipv6-prefix* | none} | route-map *policy-name*}

Send document comments to nexus7k-docfeedback@cisco.com

3. (Optional) `show ipv6 pim group-range [ipv6-prefix] [vrf vrf-name | all]`
4. (Optional) `copy running-config startup-config`

DETAILED STEPS

PIM Commands

	Command	Purpose
Step 1	<code>config t</code> Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	<code>ip pim ssm range {ip-prefix none} route-map policy-name</code> Example: switch(config)# ip pim ssm range 239.128.1.0/24	Configures up to four group ranges to be treated in SSM mode. You can specify a route-map policy name that lists the group prefixes to use with the match ip multicast command. The default range is 232.0.0.0/8. If the keyword none is specified, all group ranges are removed.
	<code>no ip pim ssm {range {ip-prefix none} route-map policy-name}</code> Example: switch(config)# no ip pim ssm range none	Removes the specified prefix from the SSM range, or removes the route-map policy. If the keyword none is specified, resets the SSM range to the default of 232.0.0.0/8.
Step 3	<code>show ip pim group-range [ip-prefix] [vrf vrf-name all]</code> Example: switch(config)# show ip pim group-range	(Optional) Displays PIM modes and group ranges.
Step 4	<code>copy running-config startup-config</code> Example: switch(config)# copy running-config startup-config	(Optional) Saves configuration changes.

PIM6 Commands

	Command	Purpose
Step 1	<code>config t</code> Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	<code>ipv6 pim ssm {range {ipv6-prefix none} route-map policy-name}</code> Example: switch(config)# ipv6 pim ssm range FF30::0/32	Configures up to four group ranges to be treated in SSM mode. You can specify a route-map policy name that lists the group prefixes to use with the match ip multicast command. If the keyword none is specified, all group ranges are removed. The default range is FF3x/96.
	<code>no ipv6 pim ssm {range {ipv6-prefix none} route-map policy-name}</code> Example: switch(config)# no ipv6 pim ssm range none	Removes the specified prefix from the SSM range, or removes the route-map policy. If the keyword none is specified, resets the SSM range to the default of FF3x/96.

Send document comments to nexus7k-docfeedback@cisco.com

	Command	Purpose
Step 3	<pre>show ipv6 pim group-range [ipv6-prefix] [vrf vrf-name all]</pre> <p>Example: switch(config)# show ipv6 pim group-range</p>	(Optional) Displays PIM6 modes and group ranges.
Step 4	<pre>copy running-config startup-config</pre> <p>Example: switch(config)# copy running-config startup-config</p>	(Optional) Saves configuration changes.

Configuring RPF Routes for Multicast

You can define RPF routes for multicast when you want multicast data to diverge from the unicast traffic path. You can define RPF routes for multicast on border routers to enable reverse path forwarding (RPF) to an external network.

Multicast routes are used not to directly forward traffic but to make RPF checks. RPF routes for multicast cannot be redistributed. For more information about multicast forwarding, see the [“Multicast Forwarding” section on page 1-5](#).



Note

IPv6 static multicast routes are not supported.

BEFORE YOU BEGIN

Ensure that you have installed the Enterprise Services license and enabled PIM or PIM6.

SUMMARY STEPS

PIM Commands

1. **config t**
2. **ip mroute** {*ip-addr mask* | *ip-prefix*} {*next-hop* | *nh-prefix* | *interface*} [*route-preference*] [**vrf** *vrf-name*]
3. (Optional) **show ip static-route** [**multicast**] [**vrf** *vrf-name*]
4. (Optional) **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com

DETAILED STEPS

PIM Commands

	Command	Purpose
Step 1	<code>config t</code> Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	<code>ip mroute {ip-addr mask ip-prefix} {next-hop nh-prefix interface} [route-preference] [vrf vrf-name]</code> Example: switch(config)# ip mroute 192.0.2.33/1 224.0.0.0/1	Configures an RPF route for multicast for use in RPF calculations. Route preference values range from 1 to 255. The default preference is 1.
Step 3	<code>show ip static-route [multicast] [vrf vrf-name]</code> Example: switch(config)# show ip static-route multicast	(Optional) Displays configured static routes.
Step 4	<code>copy running-config startup-config</code> Example: switch(config)# copy running-config startup-config	(Optional) Saves configuration changes.

Configuring Route Maps to Control RP Information Distribution

You can configure route maps to help protect against some RP configuration errors and malicious attacks. You use route maps in commands that are described in the [“Configuring Message Filtering” section on page 1-48](#).

By configuring route maps, you can control distribution of RP information that is distributed throughout the network. You specify the BSRs or mapping agents to be listened to on each client router and the list of candidate RPs to be advertised (listened to) on each BSR and mapping agent to ensure that what is advertised is what you expect.

See the [“Configuring BSRs” section on page 1-31](#) and [“Configuring Auto-RP” section on page 1-35](#) for more information.



Note

Only the `match ip [v6] multicast` command has an effect in the route map.

BEFORE YOU BEGIN

Ensure that you have installed the Enterprise Services license and enabled PIM or PIM6.

SUMMARY STEPS

PIM Commands

1. `config t`

Send document comments to nexus7k-docfeedback@cisco.com

2. **route-map** *map-name* [**permit** | **deny**] [*sequence-number*]
3. **match ip multicast** {{**rp** ip-address [**rp-type** rp-type]} {{**group-range** {gaddr_start to gaddr_end} | {**group** ip-prefix}} {**source** source-ip-address}}
4. (Optional) **show route-map**
5. (Optional) **copy running-config startup-config**

PIM6 Commands

1. **config t**
2. **route-map** *map-name* [**permit** | **deny**] [*sequence-number*]
3. **match ipv6 multicast** {{**rp** ip-address [**rp-type** rp-type]} {{**group-range** {gaddr_start to gaddr_end} | {**group** ip-prefix}} {**source** source-ip-address}}
4. (Optional) **show route-map**
5. (Optional) **copy running-config startup-config**

DETAILED STEPS

PIM Commands

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	route-map <i>map-name</i> [permit deny] [<i>sequence-number</i>] Example for ASM only: switch(config)# route-map ASM_only permit 10 switch(config-route-map)# Example for Bidir only: switch(config)# route-map Bidir_only permit 10 switch(config-route-map)#	Enters route-map configuration mode. Note This configuration method uses the permit keyword.
Step 3	match ip multicast {{ rp ip-address [rp-type rp-type]} {{ group-range {gaddr_start to gaddr_end} { group ip-prefix}} { source source-ip-address}} Example for ASM only: switch(config-route-map)# match ip multicast group 224.0.0.0/4 rp 0.0.0.0/0 rp-type ASM Example for Bidir only: switch(config-route-map)# match ip multicast group 224.0.0.0/4 rp 0.0.0.0/0 rp-type Bidir	Matches the group, RP, and RP type specified. You can specify the RP type (ASM or Bidir). This configuration method requires the group and RP specified as shown in the examples. Note BSR RP, auto-RP, and static RP cannot use the group-range keyword. This command allows both permit or deny . Some match mask commands do not allow permit or deny.

Send document comments to nexus7k-docfeedback@cisco.com

	Command	Purpose
Step 4	show route-map Example: switch(config-route-map)# show route-map	(Optional) Displays configured route maps.
Step 5	copy running-config startup-config Example: switch(config-route-map)# copy running-config startup-config	(Optional) Saves configuration changes.
PIM6 Commands		
	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	route-map map-name [permit deny] [sequence-number] Example for ASM only: switch(config)# route-map ASM_only permit 10 switch(config-route-map)# Example for Bidir only: switch(config)# route-map Bidir_only permit 10 switch(config-route-map)#	Enters route-map configuration mode. Note This configuration method uses the permit keyword.
Step 3	match ipv6 multicast {{rp ip-address [rp-type rp-type]} {{group-range {gaddr_start to gaddr_end} {group ip-prefix}} {source source-ip-address}} Example for ASM only: switch(config)# match ipv6 multicast group ff0e::2:101:0:0/96 rp 2001::0348:0:0/96 rp-type ASM Example for Bidir only: switch(config)# match ipv6 multicast group ff0e::2:101:0:0/96 rp 2001::0348:0:0/96 rp-type Bidir	Matches the group, RP, and RP type specified. You can specify the RP type (ASM or Bidir). This configuration method requires the group and RP specified as shown in the examples. Note BSR RP, auto-RP, and static RP cannot use the group-range keyword. This command allows both permit or deny . Some match mask commands do not allow permit or deny.
Step 4	show route-map Example: switch(config-route-map)# show route-map	(Optional) Displays configured route maps.
Step 5	copy running-config startup-config Example: switch(config-route-map)# copy running-config startup-config	(Optional) Saves configuration changes.

Send document comments to nexus7k-docfeedback@cisco.com

Configuring Message Filtering



Note

Prefix matches in the rp-candidate-policy must be exact relative to what the c-rp is advertising. Subset matches are not possible.

You can configure filtering of the PIM and PIM6 messages described in [Table 1-9](#).

Table 1-9 PIM and PIM6 Message Filtering

Message Type	Description
Global to the Device	
Log Neighbor changes	Enables syslog messages that list the neighbor state changes to be generated. The default is disabled.
PIM register policy	Enables PIM register messages to be filtered based on a route-map policy ¹ where you can specify group or group and source addresses with the match ip[v6] multicast command. This policy applies to routers that act as an RP. The default is disabled, which means that the software does not filter PIM register messages.
BSR candidate RP policy	Enables BSR candidate RP messages to be filtered by the router based on a route-map policy ¹ where you can specify the RP and group addresses and whether the type is Bidir or ASM with the match ip[v6] multicast command. This command can be used on routers that are eligible for BSR election. The default is no filtering of BSR messages.
BSR policy	Enables BSR messages to be filtered by the BSR client routers based on a route-map policy ¹ where you can specify BSR source addresses with the match ip[v6] multicast command. This command can be used on client routers that listen to BSR messages. The default is no filtering of BSR messages.
Auto-RP candidate RP policy	Enables Auto-RP announce messages to be filtered by the Auto-RP mapping agents based on a route-map policy ¹ where you can specify the RP and group addresses, and whether the type is Bidir or ASM with the match ip multicast command. This command can be used on a mapping agent. The default is no filtering of Auto-RP messages. Note PIM6 does not support the Auto-RP method.
Auto-RP mapping agent policy	Enables Auto-RP discover messages to be filtered by client routers based on a route-map policy ¹ where you can specify mapping agent source addresses with the match ip multicast command. This command can be used on client routers that listen to discover messages. The default is no filtering of Auto-RP messages. Note PIM6 does not support the Auto-RP method.
Per Device Interface	
Join-prune policy	Enables join-prune messages to be filtered based on a route-map policy ¹ where you can specify group, group and source, or group and RP addresses with the match ip[v6] multicast command. The default is no filtering of join-prune messages.

1. For information about configuring route-map policies, see the *Cisco Nexus 7000 Series NX-OS Unicast Routing Configuration Guide, Release 5.x*.

Send document comments to nexus7k-docfeedback@cisco.com

For information about configuring multicast route maps, see the “Configuring Route Maps to Control RP Information Distribution” section on page 1-45.

Route maps as a filtering policy can be used (either **permit** or **deny** for each statement) for the following commands:

- **jp-policy** can use (S,G), (*,G), or (RP,G)
- **register-policy** can use (S,G) or (*,G)
- **igmp report-policy** can use (*,G) or (S,G)
- **state-limit reserver-policy** can use (*,G) or (S,G)
- **auto-rp rp-candidate-policy** can use (RP,G)
- **bsr rp-candidate-policy** can use (RP,G)
- **autorp mapping-agent policy** can use (S)
- **bsr bsr-policy** can use (S)

Route maps as containers can be use for the following commands, where route-map action (**permit** or **deny**) is ignored:

- **ip pim rp-address route map** can use only G
- **ip pim ssm-range route map** can use only G
- **ip igmp static-oif route map** can use (S,G), (*,G), (S,G-range), (*,G-range)
- **ip igmp join-group route map** can use (S,G), (*,G), (S,G-range), (*, G-range)

BEFORE YOU BEGIN

Ensure that you have installed the Enterprise Services license and enabled PIM or PIM6.

SUMMARY STEPS

PIM Commands

1. **config t**
2. (Optional) **ip pim log-neighbor-changes**
3. (Optional) **ip pim register-policy *policy-name***
4. (Optional) **ip pim bsr rp-candidate-policy *policy-name***
5. (Optional) **ip pim bsr bsr-policy *policy-name***
6. (Optional) **ip pim auto-rp rp-candidate-policy *policy-name***
7. (Optional) **ip pim auto-rp mapping-agent-policy *policy-name***
8. **interface *interface***
9. (Optional) **ip pim jp-policy *policy-name* [in | out]**
10. (Optional) **show run pim**
11. (Optional) **copy running-config startup-config**

PIM6 Commands

1. **config t**
2. (Optional) **ipv6 pim log-neighbor-changes**

Send document comments to nexus7k-docfeedback@cisco.com

3. (Optional) `ipv6 pim register-policy policy-name`
4. (Optional) `ipv6 pim bsr rp-candidate-policy policy-name`
5. (Optional) `ipv6 pim bsr bsr-policy policy-name`
6. `interface interface`
7. (Optional) `ipv6 pim jp-policy policy-name [in | out]`
8. (Optional) `show run pim6`
9. (Optional) `copy running-config startup-config`

DETAILED STEPS

PIM Commands

	Command	Purpose
Step 1	<code>config t</code> Example: <code>switch# config t</code> <code>switch(config)#</code>	Enters configuration mode.
Step 2	<code>ip pim log-neighbor-changes</code> Example: <code>switch(config)# ip pim</code> <code>log-neighbor-changes</code>	(Optional) Enables syslog messages that list the neighbor state changes to be generated. The default is disabled.
Step 3	<code>ip pim register-policy policy-name</code> Example: <code>switch(config)# ip pim register-policy</code> <code>my_register_policy</code>	(Optional) Enables PIM register messages to be filtered based on a route-map policy. You can specify group or group and source addresses with the match ip multicast command.
Step 4	<code>ip pim bsr rp-candidate-policy policy-name</code> Example: <code>switch(config)# ip pim bsr</code> <code>rp-candidate-policy</code> <code>my_bsr_rp_candidate_policy</code>	(Optional) Enables BSR candidate RP messages to be filtered by the router based on a route-map policy where you can specify the RP and group addresses and whether the type is Bidir or ASM with the match ip multicast command. This command can be used on routers that are eligible for BSR election. The default is no filtering of BSR messages.
Step 5	<code>ip pim bsr bsr-policy policy-name</code> Example: <code>switch(config)# ip pim bsr bsr-policy</code> <code>my_bsr_policy</code>	(Optional) Enables BSR messages to be filtered by the BSR client routers based on a route-map policy where you can specify BSR source addresses with the match ip multicast command. This command can be used on client routers that listen to BSR messages. The default is no filtering of BSR messages.
Step 6	<code>ip pim auto-rp rp-candidate-policy policy-name</code> Example: <code>switch(config)# ip pim auto-rp</code> <code>rp-candidate-policy</code> <code>my_auto_rp_candidate_policy</code>	(Optional) Enables Auto-RP announce messages to be filtered by the Auto-RP mapping agents based on a route-map policy where you can specify the RP and group addresses and whether the type is Bidir or ASM with the match ip multicast command. This command can be used on a mapping agent. The default is no filtering of Auto-RP messages.

Send document comments to nexus7k-docfeedback@cisco.com

	Command	Purpose
Step 7	<pre>ip pim auto-rp mapping-agent-policy policy-name</pre> <p>Example: switch(config)# ip pim auto-rp mapping-agent-policy my_auto_rp_mapping_policy</p>	(Optional) Enables Auto-RP discover messages to be filtered by client routers based on a route-map policy where you can specify mapping agent source addresses with the match ip multicast command. This command can be used on client routers that listen to discover messages. The default is no filtering of Auto-RP messages.
Step 8	<pre>interface interface</pre> <p>Example: switch(config)# interface ethernet 2/1 switch(config-if)#</p>	Enters interface mode on the specified interface.
Step 9	<pre>ip pim jp-policy policy-name [in out]</pre> <p>Example: switch(config-if)# ip pim jp-policy my_jp_policy</p>	(Optional) Enables join-prune messages to be filtered based on a route-map policy where you can specify group, group and source, or group and RP addresses with the match ip multicast command. The default is no filtering of join-prune messages. Beginning with Cisco NX-OS Release 4.2(3), this command filters messages in both incoming and outgoing directions.
Step 10	<pre>show run pim</pre> <p>Example: switch(config-if)# show run pim</p>	(Optional) Displays PIM configuration commands.
Step 11	<pre>copy running-config startup-config</pre> <p>Example: switch(config-if)# copy running-config startup-config</p>	(Optional) Saves configuration changes.

PIM6 Commands

	Command	Purpose
Step 1	<pre>config t</pre> <p>Example: switch# config t switch(config)#</p>	Enters configuration mode.
Step 2	<pre>ipv6 pim log-neighbor-changes</pre> <p>Example: switch(config)# ipv6 pim log-neighbor-changes</p>	(Optional) Enables syslog messages that list the neighbor state changes to be generated. The default is disabled.
Step 3	<pre>ipv6 pim register-policy policy-name</pre> <p>Example: switch(config)# ipv6 pim register-policy my_register_policy</p>	(Optional) Enables PIM register messages to be filtered based on a route-map policy. You can specify group or group and source addresses with the match ipv6 multicast command. The default is disabled.

Send document comments to nexus7k-docfeedback@cisco.com

	Command	Purpose
Step 4	<pre>ipv6 pim bsr rp-candidate-policy policy-name</pre> <p>Example:</p> <pre>switch(config)# ipv6 pim bsr rp-candidate-policy my_bsr_rp_candidate_policy</pre>	(Optional) Enables BSR candidate RP messages to be filtered by the router based on a route-map policy where you can specify the RP and group addresses and whether the type is Bidir or ASM with the match ipv6 multicast command. This command can be used on routers that are eligible for BSR election. The default is no filtering of BSR messages.
Step 5	<pre>ipv6 pim bsr bsr-policy policy-name</pre> <p>Example:</p> <pre>switch(config)# ipv6 pim bsr bsr-policy my_bsr_policy</pre>	(Optional) Enables BSR messages to be filtered by the BSR client routers based on a route-map policy ¹ where you can specify BSR source addresses with the match ipv6 multicast command. This command can be used on client routers that listen to BSR messages. The default is no filtering of BSR messages.
Step 6	<pre>interface interface</pre> <p>Example:</p> <pre>switch(config)# interface ethernet 2/1 switch(config-if)#</pre>	Enters interface mode on the specified interface.
Step 7	<pre>ipv6 pim jp-policy policy-name [in out]</pre> <p>Example:</p> <pre>switch(config-if)# ipv6 pim jp-policy my_jp_policy</pre>	(Optional) Enables join-prune messages to be filtered based on a route-map policy where you can specify group, group and source, or group and RP addresses with the match ipv6 multicast command. The default is no filtering of join-prune messages. Beginning with Cisco NX-OS Release 4.2(3), this command filters messages in both incoming and outgoing directions.
Step 8	<pre>show run pim6</pre> <p>Example:</p> <pre>switch(config-if)# show run pim6</pre>	(Optional) Displays PIM6 configuration commands.
Step 9	<pre>copy running-config startup-config</pre> <p>Example:</p> <pre>switch(config-if)# copy running-config startup-config</pre>	(Optional) Saves configuration changes.

Restarting the PIM and PIM6 Processes

You can restart the PIM and PIM6 processes and optionally flush all routes. By default, routes are not flushed.

When routes are flushed, they are removed from the Multicast Routing Information Base (MRIB and M6RIB) and the Multicast Forwarding Information Base (MFIB and M6FIB).

When you restart PIM or PIM6, the following tasks are performed:

- The PIM database is deleted.
- The MRIB and MFIB are unaffected and forwarding of traffic continues.
- The multicast route ownership is verified through the MRIB.
- Periodic PIM join and prune messages from neighbors are used to repopulate the database.

Send document comments to nexus7k-docfeedback@cisco.com

BEFORE YOU BEGIN

Ensure that you have installed the Enterprise Services license and enabled PIM or PIM6.

SUMMARY STEPS

PIM Commands

1. `restart pim`
2. `config t`
3. `ip pim flush-routes`
4. (Optional) `show running-configuration pim`
5. (Optional) `copy running-config startup-config`

PIM6 Commands

1. `restart pim6`
2. `config t`
3. `ipv6 pim flush-routes`
4. (Optional) `show running-configuration pim6`
5. (Optional) `copy running-config startup-config`

DETAILED STEPS

PIM Commands

	Command	Purpose
Step 1	<code>restart pim</code> Example: <code>switch# restart pim</code>	Restarts the PIM process.
Step 2	<code>config t</code> Example: <code>switch# config t</code> <code>switch(config)#</code>	Enters configuration mode.
Step 3	<code>ip pim flush-routes</code> Example: <code>switch(config)# ip pim flush-routes</code>	Removes routes when the PIM process is restarted. By default, routes are not flushed.
Step 4	<code>show running-configuration pim</code> Example: <code>switch(config)# show</code> <code>running-configuration pim</code>	(Optional) Displays the PIM running-configuration information, including the flush-routes command.
Step 5	<code>copy running-config startup-config</code> Example: <code>switch(config)# copy running-config</code> <code>startup-config</code>	(Optional) Saves configuration changes.

Send document comments to nexus7k-docfeedback@cisco.com

PIM6 Commands

	Command	Purpose
Step 1	restart pim6 Example: switch# restart pim6	Restarts the PIM6 process.
Step 2	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 3	ipv6 pim flush-routes Example: switch(config)# ipv6 pim flush-routes	Removes routes when the PIM6 process is restarted. By default, routes are not flushed.
Step 4	show running-configuration pim6 Example: switch(config)# show running-configuration pim6	(Optional) Displays the PIM6 running-configuration, including the flush-routes command.
Step 5	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves configuration changes.

Configuring BFD for PIM

You can configure BFD for PIM by either VRF or by interface.

BEFORE YOU BEGIN

Ensure that you have installed the Enterprise Services license, enabled PIM or PIM6, and enabled BFD.

SUMMARY STEPS

1. **config t**
2. **vrf context** *vrf-name*
3. **ip pim bfd**
or
1. **config t**
2. **interface** *interface-type*
3. **ip pim bfd instance**
4. **exit**
5. (Optional) **show running-configuration pim**
6. (Optional) **copy running-config startup-config**

[Send document comments to nexus7k-docfeedback@cisco.com](mailto:nexus7k-docfeedback@cisco.com)

DETAILED STEPS

	Command	Purpose
Step 1	<code>config t</code> Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	<code>vrf context vrf-name</code> Example: switch# vrf context test switch(config-vrf)#	Enters VRF configuration mode.
Step 3	<code>ip pim bfd</code> Example: switch(config-vrf)# ip pim bfd	Enables BFD on the specified VRFs. Note You can also enter the <code>ip pim bfd</code> command in configuration mode, which enables BFD on VRF.
	OR	
Step 1	<code>config t</code>	Enters configuration mode.
Step 2	<code>interface interface-type</code> Example: switch(config)# interface ethernet 7/40 switch(config-if)#	Enters interface configuration mode.
Step 3	<code>ip pim bfd instance</code> Example: switch(config-if)# ip pim bfd instance	Enables BFD on the specified interfaces. You can enable or disable BFD on RIM interfaces irrespective of whether BFD is enabled on the VRF.
Step 4	<code>exit</code> Example: switch(config)# exit	Exits out of VRF or interface configuration mode.
Step 5	<code>show running-configuration pim</code> Example: switch(config)# show running-configuration pim	(Optional) Displays the PIM running-configuration information.
Step 6	<code>copy running-config startup-config</code> Example: switch(config)# copy running-config startup-config	(Optional) Saves configuration changes.

Verifying the PIM and PIM6 Configuration

To display the PIM and PIM6 configurations information, perform one of the following tasks. Use the `show ip` form of the command for PIM and the `show ipv6` form of the command for PIM6.

Send document comments to nexus7k-docfeedback@cisco.com

Table 1-10 PIM show Commands

Command	Description
show ip [v6] mroute { <i>source group</i> <i>group [source]</i> } [vrf vrf-name all]	Displays the IP or IPv6 multicast routing table.
show ip [v6] pim df [vrf vrf-name all]	Displays the designated forwarder (DF) information for each RP by interface.
show ip [v6] pim group-range [vrf vrf-name all]	Displays the learned or configured group ranges and modes. For similar information, see also the show ip pim rp command.
show ip [v6] pim interface [<i>interface</i> brief] [vrf vrf-name all]	Displays information by the interface.
show ip [v6] pim neighbor [vrf vrf-name all]	Displays neighbors by the interface.
show ip [v6] pim oif-list <i>group [source]</i> [vrf vrf-name all]	Displays all the interfaces in the OIF-list.
show ip [v6] pim route { <i>source group</i> <i>group [source]</i> } [vrf vrf-name all]	Displays information for each multicast route, including interfaces on which a PIM join for that (S, G) has been received.
show ip [v6] pim rp [vrf vrf-name all]	Displays rendezvous points (RPs) known to the software, how they were learned, and their group ranges. For similar information, see also the show ip pim group-range command.
show ip [v6] pim rp-hash [vrf vrf-name all]	Displays the bootstrap router (BSR) RP hash information. For information about the RP hash, see RFC 5059 .
show running-configuration pim [6]	Displays the running-configuration information.
show startup-configuration pim [6]	Displays the startup-configuration information.
show ip [v6] pim vrf [<i>vrf-name</i> all] [detail]	Displays per-VRF information.

For detailed information about the fields in the output from these commands, see the *Cisco Nexus 7000 Series NX-OS Multicast Routing Command Reference, Release 5.x*.

Displaying Statistics

You can display and clear PIM and PIM6 statistics by using the commands in this section.

This section includes the following topics:

- [Displaying PIM and PIM6 Statistics, page 1-57](#)
- [Clearing PIM and PIM6 Statistics, page 1-57](#)

[Send document comments to nexus7k-docfeedback@cisco.com](mailto:nexus7k-docfeedback@cisco.com)

Displaying PIM and PIM6 Statistics

You can display the PIM and PIM6 statistics and memory usage using the commands listed in [Table 1-11](#). Use the **show ip** form of the command for PIM and the **show ipv6** form of the command for PIM6.

Table 1-11 PIM and PIM6 Statistics Commands

Command	Description
show ip [v6] pim policy statistics	Displays policy statistics for Register, RP, and join-prune message policies.
show ip [v6] pim statistics [vrf vrf-name all]	Displays global statistics. If PIM is in vPC mode, displays vPC statistics.

For detailed information about the fields in the output from these commands, see the *Cisco Nexus 7000 Series NX-OS Multicast Routing Command Reference, Release 5.x*.

Clearing PIM and PIM6 Statistics

You can clear the PIM and PIM6 statistics using the commands listed in [Table 1-12](#). Use the **show ip** form of the command for PIM and the **show ipv6** form of the command for PIM6.

Table 1-12 PIM and PIM6 Commands to Clear Statistics

Command	Description
clear ip [v6] pim interface statistics interface	Clears counters for the specified interface.
clear ip [v6] pim policy statistics	Clears policy counters for Register, RP, and join-prune message policies.
clear ip [v6] pim statistics [vrf vrf-name all]	Clears global counters handled by the PIM process.

Configuration Examples for PIM



Note

See the “[Multiple RPs Configured in a PIM Domain](#)” section on [page 1-6](#) for more configuration examples.

This section describes how to configure PIM using different data distribution modes and RP selection methods.

This section includes the following topics:

- [SSM Configuration Example, page 1-58](#)
- [BSR Configuration Example, page 1-58](#)
- [Auto-RP Configuration Example, page 1-59](#)
- [PIM Anycast-RP Configuration Example, page 1-60](#)

Send document comments to nexus7k-docfeedback@cisco.com

- [Prefix-Based and Route-Map-Based Configurations, page 1-61](#)

SSM Configuration Example

To configure PIM in SSM mode, follow these steps for each router in the PIM domain:

- Step 1** Configure PIM sparse mode parameters on the interfaces that you want to participate in the domain. We recommend that you enable PIM on all interfaces.

```
switch# config t
switch(config)# interface ethernet 2/1
switch(config-if)# ip pim sparse-mode
```

- Step 2** Configure the parameters for IGMP that support SSM. See [Chapter 1, “Configuring IGMP”](#) Usually, you configure IGMPv3 on PIM interfaces to support SSM.

```
switch# config t
switch(config)# interface ethernet 2/1
switch(config-if)# ip igmp version 3
```

- Step 3** Configure the SSM range if you do not want to use the default range.

```
switch# config t
switch(config)# ip pim ssm range 239.128.1.0/24
```

- Step 4** Configure message filtering.

```
switch# config t
switch(config)# ip pim log-neighbor-changes
```

The following example shows how to configure PIM SSM mode:

```
config t
interface ethernet 2/1
  ip pim sparse-mode
  ip igmp version 3
exit
ip pim ssm range 239.128.1.0/24
ip pim log-neighbor-changes
```

BSR Configuration Example

To configure PIM in ASM mode using the BSR mechanism, follow these steps for each router in the PIM domain:

- Step 1** Configure PIM sparse mode parameters on the interfaces that you want to participate in the domain. We recommend that you enable PIM on all interfaces.

```
switch# config t
switch(config)# interface ethernet 2/1
switch(config-if)# ip pim sparse-mode
```

- Step 2** Configure whether that router should listen and forward BSR messages.

```
switch# config t
switch(config)# ip pim bsr forward listen
```

Send document comments to nexus7k-docfeedback@cisco.com

Step 3 Configure the BSR parameters for each router that you want to act as a BSR.

```
switch# config t  
switch(config)# ip pim bsr-candidate ethernet 2/1 hash-len 30
```

Step 4 Configure the RP parameters for each router that you want to act as a candidate RP.

```
switch# config t  
switch(config)# ip pim rp-candidate ethernet 2/1 group-list 239.0.0.0/24
```

Step 5 Configure message filtering.

```
switch# config t  
switch(config)# ip pim log-neighbor-changes
```

The following example shows how to configure PIM ASM mode using the BSR mechanism and how to configure the BSR and RP on the same router:

```
config t  
  interface ethernet 2/1  
    ip pim sparse-mode  
    exit  
  ip pim bsr forward listen  
ip pim bsr-candidate ethernet 2/1 hash-len 30  
ip pim rp-candidate ethernet 2/1 group-list 239.0.0.0/24  
ip pim log-neighbor-changes
```

Auto-RP Configuration Example

To configure PIM in Bidir mode using the Auto-RP mechanism, follow these steps for each router in the PIM domain:

Step 1 Configure PIM sparse mode parameters on the interfaces that you want to participate in the domain. We recommend that you enable PIM on all interfaces.

```
switch# config t  
switch(config)# interface ethernet 2/1  
switch(config-if)# ip pim sparse-mode
```

Step 2 Configure whether that router should listen and forward Auto-RP messages.

```
switch# config t  
switch(config)# ip pim auto-rp forward listen
```

Step 3 Configure the mapping agent parameters for each router that you want to act as a mapping agent.

```
switch# config t  
switch(config)# ip pim auto-rp mapping-agent ethernet 2/1
```

Step 4 Configure the RP parameters for each router that you want to act as a candidate RP.

```
switch# config t  
switch(config)# ip pim auto-rp rp-candidate ethernet 2/1 group-list 239.0.0.0/24 bidir
```

Step 5 Configure message filtering.

```
switch# config t  
switch(config)# ip pim log-neighbor-changes
```

Send document comments to nexus7k-docfeedback@cisco.com

The following example shows how to configure PIM Bidir mode using the Auto-RP mechanism and how to configure the mapping agent and RP on the same router:

```
config t
  interface ethernet 2/1
    ip pim sparse-mode
  exit
  ip pim auto-rp listen
  ip pim auto-rp forward
  ip pim auto-rp mapping-agent ethernet 2/1
  ip pim auto-rp rp-candidate ethernet 2/1 group-list 239.0.0.0/24 bidir
  ip pim log-neighbor-changes
```

PIM Anycast-RP Configuration Example

To configure ASM mode using the PIM Anycast-RP method, follow these steps for each router in the PIM domain:

- Step 1** Configure PIM sparse mode parameters on the interfaces that you want to participate in the domain. We recommend that you enable PIM on all interfaces.

```
switch# config t
switch(config)# interface ethernet 2/1
switch(config-if)# ip pim sparse-mode
```

- Step 2** Configure the RP address that you configure on all routers in the Anycast-RP set.

```
switch# config t
switch(config)# interface loopback 0
switch(config-if)# ip address 192.0.2.3/32
```

- Step 3** Configure a loopback with an address to use in communication between routers in the Anycast-RP set for each router that you want to be in the Anycast-RP set.

```
switch# config t
switch(config)# interface loopback 1
switch(config-if)# ip address 192.0.2.31/32
```

- Step 4** Configure the Anycast-RP parameters and repeat with the IP address of each Anycast-RP for each router that you want to be in the Anycast-RP set. This example shows two Anycast-RPs.

```
switch# config t
switch(config)# ip pim anycast-rp 192.0.2.3 193.0.2.31
switch(config)# ip pim anycast-rp 192.0.2.3 193.0.2.32
```

- Step 5** Configure message filtering.

```
switch# config t
switch(config)# ip pim log-neighbor-changes
```

The following example shows how to configure PIM ASM mode using two Anycast-RPs:

```
config t
  interface ethernet 2/1
    ip pim sparse-mode
  exit
```

Send document comments to nexus7k-docfeedback@cisco.com

```
interface loopback 0
  ip address 192.0.2.3/32
  exit
ip pim anycast-rp 192.0.2.3 192.0.2.31
ip pim anycast-rp 192.0.2.3 192.0.2.32
ip pim log-neighbor-changes
```

Prefix-Based and Route-Map-Based Configurations

```
ip prefix-list plist11 seq 10 deny 231.129.128.0/17
ip prefix-list plist11 seq 20 deny 231.129.0.0/16
ip prefix-list plist11 seq 30 deny 231.128.0.0/9
ip prefix-list plist11 seq 40 permit 231.0.0.0/8

ip prefix-list plist22 seq 10 deny 231.129.128.0/17
ip prefix-list plist22 seq 20 deny 231.129.0.0/16
ip prefix-list plist22 seq 30 permit 231.128.0.0/9
ip prefix-list plist22 seq 40 deny 231.0.0.0/8

ip prefix-list plist33 seq 10 deny 231.129.128.0/17
ip prefix-list plist33 seq 20 permit 231.129.0.0/16
ip prefix-list plist33 seq 30 deny 231.128.0.0/9
ip prefix-list plist33 seq 40 deny 231.0.0.0/8

ip pim rp-address 21.21.0.11 prefix-list plist11
ip pim rp-address 21.21.0.22 prefix-list plist22
ip pim rp-address 21.21.0.33 prefix-list plist33

route-map rmap11 deny 10
  match ip multicast group 231.129.128.0/17
route-map rmap11 deny 20
  match ip multicast group 231.129.0.0/16
route-map rmap11 deny 30
  match ip multicast group 231.128.0.0/9
route-map rmap11 permit 40
  match ip multicast group 231.0.0.0/8

route-map rmap22 deny 10
  match ip multicast group 231.129.128.0/17
route-map rmap22 deny 20
  match ip multicast group 231.129.0.0/16
route-map rmap22 permit 30
  match ip multicast group 231.128.0.0/9
route-map rmap22 deny 40
  match ip multicast group 231.0.0.0/8

route-map rmap33 deny 10
  match ip multicast group 231.129.128.0/17
route-map rmap33 permit 20
  match ip multicast group 231.129.0.0/16
route-map rmap33 deny 30
  match ip multicast group 231.128.0.0/9
route-map rmap33 deny 40
  match ip multicast group 231.0.0.0/8

ip pim rp-address 21.21.0.11 route-map rmap11
ip pim rp-address 21.21.0.22 route-map rmap22
ip pim rp-address 21.21.0.33 route-map rmap33
```

Send document comments to nexus7k-docfeedback@cisco.com

Output

```
dc3rtg-d2(config-if)# show ip pim rp
PIM RP Status Information for VRF "default"
BSR disabled
Auto-RP disabled
BSR RP Candidate policy: None
BSR RP policy: None
Auto-RP Announce policy: None
Auto-RP Discovery policy: None

RP: 21.21.0.11, (0), uptime: 00:12:36, expires: never,
  priority: 0, RP-source: (local), group-map: rmap11, group ranges:
    231.0.0.0/8 231.128.0.0/9 (deny)
    231.129.0.0/16 (deny) 231.129.128.0/17 (deny)
RP: 21.21.0.22, (0), uptime: 00:12:36, expires: never,
  priority: 0, RP-source: (local), group-map: rmap22, group ranges:
    231.0.0.0/8 (deny) 231.128.0.0/9
    231.129.0.0/16 (deny) 231.129.128.0/17 (deny)
RP: 21.21.0.33, (0), uptime: 00:12:36, expires: never,
  priority: 0, RP-source: (local), group-map: rmap33, group ranges:
    231.0.0.0/8 (deny) 231.128.0.0/9 (deny)
    231.129.0.0/16 231.129.128.0/17 (deny)

dc3rtg-d2(config-if)# show ip mroute
IP Multicast Routing Table for VRF "default"

(*, 231.1.1.1/32), uptime: 00:07:20, igmp pim ip
  Incoming interface: Ethernet2/1, RPF nbr: 1.1.0.1
  Outgoing interface list: (count: 1)
    loopback1, uptime: 00:07:20, igmp

(*, 231.128.1.1/32), uptime: 00:14:27, igmp pim ip
  Incoming interface: Ethernet2/1, RPF nbr: 1.1.0.1
  Outgoing interface list: (count: 1)
    loopback1, uptime: 00:14:27, igmp

(*, 231.129.1.1/32), uptime: 00:14:25, igmp pim ip
  Incoming interface: Ethernet2/1, RPF nbr: 1.1.0.1
  Outgoing interface list: (count: 1)
    loopback1, uptime: 00:14:25, igmp

(*, 231.129.128.1/32), uptime: 00:14:26, igmp pim ip
  Incoming interface: Null, RPF nbr: 0.0.0.0
  Outgoing interface list: (count: 1)
    loopback1, uptime: 00:14:26, igmp

(*, 232.0.0.0/8), uptime: 1d20h, pim ip
  Incoming interface: Null, RPF nbr: 0.0.0.0
  Outgoing interface list: (count: 0)

dc3rtg-d2(config-if)# show ip pim group-range
PIM Group-Range Configuration for VRF "default"
Group-range      Mode      RP-address      Shared-tree-only range
232.0.0.0/8      SSM       -                -
231.0.0.0/8      ASM       21.21.0.11      -
231.128.0.0/9    ASM       21.21.0.22      -
231.129.0.0/16   ASM       21.21.0.33      -
231.129.128.0/17 Unknown   -                -
```

Send document comments to nexus7k-docfeedback@cisco.com

Where to Go Next

You can configure the following features that work with PIM or PIM6:

- [Chapter 1, “Configuring IGMP”](#)
- [Chapter 1, “Configuring MLD”](#)
- [Chapter 1, “Configuring IGMP Snooping”](#)
- [Chapter 1, “Configuring MSDP”](#)

Additional References

For additional information related to implementing PIM, see the following sections:

- [Related Documents, page 1-63](#)
- [Standards, page 1-63](#)
- [MIBs, page 1-63](#)
- [Appendix 1, “IETF RFCs for IP Multicast”](#)
- [Feature History for PIM and PIM6, page 1-64](#)

Related Documents

Related Topic	Document Title
VDCs	<i>Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.2</i>
CLI commands	<i>Cisco Nexus 7000 Series NX-OS Multicast Routing Command Reference, Release 5.x</i>
Configuring VRFs and Policy Based Routing	<i>Cisco Nexus 7000 Series NX-OS Unicast Routing Configuration Guide, Release 5.x</i>

Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	—

MIBs

MIBs	MIBs Link
<ul style="list-style-type: none"> • IPMCAST-MIB • PIM MIB--Beginning in Cisco Release 5.2(1) for the Cisco Nexus 7000 Series devices 	To locate and download MIBs, go to the following URL: http://www.cisco.com/public/sw-center/netmgmt/cmtk/mibs.shtml

[Send document comments to nexus7k-docfeedback@cisco.com](mailto:nexus7k-docfeedback@cisco.com)

Feature History for PIM and PIM6

Table 1-13 lists the release history for this feature.

Table 1-13 Feature History for PIM and PIM6

Feature Name	Releases	Feature Information
Support for the ip pim register-source command.	5.2(1)	Support for configuring the IP source address of register messages.
BFD support for PIM (IPv4)	5.0(2)	BFD supported for PIM with IPv4.
vPC	4.1(3)	<p>Cisco NX-OS software for the Nexus 7000 Series devices does not support PIM SSM or BIDR on a vPC. Cisco NX-OS software fully supports PIM ASM on a vPC.</p> <p>Display vPC statistics with the show ip pim statistics command.</p> <p>The following section provides information about this feature:</p> <ul style="list-style-type: none"> • “Configuring ASM and Bidir” section on page 1-29 • “Displaying PIM and PIM6 Statistics” section on page 1-57