



Performance Routing v3 Configuration Guide, Cisco IOS Release 15M&T

First Published: 2014-07-22

Last Modified: 2015-03-25

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883



CONTENTS

CHAPTER 1

About this Guide 1

- Audience 1
- Document Organization 1
- Document Conventions 2
- New and Changed Information 3
- Additional References for PfRv3 4

CHAPTER 2

Performance Routing Version 3 7

- Feature Information for PfRv3 7
- Hardware and Software Support 8
- Restrictions for Configuring Performance Routing v3 8
- Information About PfRv3 9
 - Performance Routing v3 Overview 9
 - Benefits of PfRv3 9
 - PfRv3 Design Overview 10
 - PfRv3 Configuration Components 11
 - Device Setup and Role 11
 - Domain Policies 12
 - PfRv3 and Link Group Configuration 13

CHAPTER 3

Configuring PfRv3 15

- Configuring Performance Routing Version 3 15
 - Configuring Hub Master Controller 15
 - Configuring Hub Border Router 18
 - Configuring Domain Policies 21
 - Configuring Branch Master Controller 24

Configuring Branch Border Router	26
Configuring Branch Master Controller and Border Router	27
Verifying PfRv3 Configuration	29
Verifying Hub Master Controller Configurations	29
Verifying Hub Border Router Configurations	36
Verifying Branch Master Controller Configurations	40
Verifying Branch Border Configurations	42
Monitoring PfRv3	47
Monitoring Site Prefix	47
Monitoring Traffic Classes	49
Monitoring Channels	52
Example: Configuring Performance Routing Version 3	55

CHAPTER 4**PfRv3 Transit Site Support 91**

Feature Information for PfRv3 Transit Site Support	91
Prerequisites for PfRv3 Transit Site Support	92
Restrictions for PfRv3 Transit Site Support	92
Information About PfRv3 Transit Site Support	92
Information About Transit Site Support	92
PfRv3 Transit Site Use Case Scenarios	92
How to Configure Transit Site Support	95
Configuring Transit Hub	95
Configuring Transit Site Border Routers	98
Verifying PfRv3 Transit Site Support	101
Configuration Examples for PfRv3 Transit Site Support	105
Example: Configuring Transit Site Support	105

CHAPTER 5**PfRv3 Path of Last Resort 123**

Feature Information for PfRv3 Path of Last Resort	123
Restrictions for PfRv3 Path of Last Resort	123
Information About PfRv3 Path of Last Resort	124
PfRv3 Path of Last Resort	124
How to Configure PfRv3 Path of Last Resort	124
Configuring Policy for Path of Last Resort	124

Configuring Path of Last Resort	125
Verifying PfRv3 Path of Last Resort	125

CHAPTER 6**PfRv3 Probe Reduction 129**

Feature Information for PfRv3 Probe Reduction	129
Prerequisites for PfRv3 Probe Reduction	129
Information About PfRv3 Probe Reduction	129
How to Configure PfRv3 Probe Reduction	130
Configuring PfRv3 Probe Reduction	130
Verifying PfRv3 Probe Reduction	131
Configuration Examples for PfRv3 Probe Reduction	132
Example: PfRv3 Probe Reduction	132
Additional References for PfRv3 Probe Reduction	132

CHAPTER 7**PfRv3 Remote Prefix Tracking 133**

Feature Information for PfRv3 Remote Prefix Tracking	133
Information About PfRv3 Remote Prefix Tracking	134
Site Prefixes Database	134
Learning Local Site Prefixes	134
Learning Remote Site Prefixes	135
PfRv3 Remote Prefix Tracking via Egress Flow	136
PfRv3 Remote Prefix Tracking via RIB table	136
How Site Prefix is Learnt?	136
WAN Interfaces Configuration	137
Prefix Learning on Border Router	137
Forwarding the Prefix to Master Controller	137
Prefix Classification by Master Controller	137
Path Preference	138
How to Display Site Prefixes	138
Displaying Site Prefixes Learnt By a Border Router	138
Displaying Site Prefixes Learnt By a Master Controller	139
Additional References for PfRv3 Remote Prefix Tracking	143



CHAPTER 1

About this Guide

- [Audience, on page 1](#)
- [Document Organization, on page 1](#)
- [Document Conventions, on page 2](#)
- [New and Changed Information, on page 3](#)
- [Additional References for PfRv3, on page 4](#)

Audience

The *Performance Routing Version 3 Configuration Guide* is for network managers and administrators. This guide provides an overview on Performance Routing v3 and describes how to configure performance routing v3 on Cisco devices.

Document Organization

This document is organized into the following chapters:

Chapter	Description
Overview of Performance Routing v3	Describes the design and different device roles in PfRv3.
Configuring Performance Routing v3	Describes the configuration, verification, and monitoring operations for different components of PfRv3.
Performance Routing v3 Transit Site Support	Describes PfRv3 transit site support, and provides information on how to configure and verify PfRv3 transit sites configurations.
Performance Routing v3 Zero SLA Support	Describes PfRv3 Zero SLA support, and provides information on how to configure and verify PfRv3 Zero SLA configurations.
Troubleshooting	Describes the common troubleshooting scenarios along with the workaround.
PfRv3 Remote Prefix Tracking	Describes the PfRv3 remote site prefixes, prefix tracking, and how to display site prefixes.

Chapter	Description
Command Reference	Lists the various commands required to configure, verify, and debug PFRv3 configurations.

Document Conventions

This document uses the following conventions:

Convention	Description
^ or Ctrl	Both the ^ symbol and Ctrl represent the Control (Ctrl) key on a keyboard. For example, the key combination ^D or Ctrl-D means that you hold down the Control key while you press the D key. (Keys are indicated in capital letters but are not case sensitive.)
bold font	Commands and keywords and user-entered text appear in bold font .
<i>Italic font</i>	Document titles, new or emphasized terms, and arguments for which you supply values are in <i>italic font</i> .
Courier font	Terminal sessions and information the system displays appear in <i>courier font</i> .
Bold Courier font	Bold Courier font indicates text that the user must enter.
[x]	Elements in square brackets are optional.
...	An ellipsis (three consecutive nonbolded periods without spaces) after a syntax element indicates that the element can be repeated.
	A vertical line, called a pipe, indicates a choice within a set of keywords or arguments.
[x y]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
{x y}	Required alternative keywords are grouped in braces and separated by vertical bars.
[x {y z}]	Nested set of square brackets or braces indicate optional or required choices within optional or required elements. Braces and a vertical bar within square brackets indicate a required choice within an optional element.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
<>	Nonprinting characters such as passwords are in angle brackets.
[]	Default responses to system prompts are in square brackets.

Convention	Description
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

Reader Alert Conventions

This document uses the following conventions for reader alerts:



Note Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the manual.



Tip Means *the following information will help you solve a problem*.



Caution Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.



Timesaver Means *the described action saves time*. You can save time by performing the action described in the paragraph.



Warning Means *reader be warned*. In this situation, you might perform an action that could result in bodily injury.

New and Changed Information

This chapter provides release-specific information for each new and changed feature in the *Cisco Performance Routing v3 Configuration Guide*.

The following table summarizes the new and changed features for the *Cisco Performance Routing v3 Configuration Guide* and where they are documented.

Table 1: New and Changed Features

Feature Name	Releases	Feature Information	Where Documented
Performance Routing v3	15.5(1)T Cisco IOS XE 3.13S	PfRv3 is an intelligent-path control mechanism for improving application delivery and WAN efficiency. PfRv3 protects critical application and increases bandwidth utilization and serves as an integral part of the overall Cisco Intelligent WAN (IWAN) solution.	<ul style="list-style-type: none"> • Overview of Performance Routing v3 • Configuring Basic PfRv3
Performance Routing v3 Zero SLA Support	15.5(1)T Cisco IOS XE 3.14S	The PfRv3 zero SLA support feature enables users to reduce probing frequency on various ISP links.	Performance Routing v3 Zero SLA Support
Performance Routing v3 Transit Site Support	15.5(2)T Cisco IOS XE 3.15S	The PfRv3 transit site support feature enables enterprise organizations to configure multiple data centers at the hub site.	PfRv3 Transit Site Support

Additional References for PfRv3

Related Documents

Related Topic	Document Title
Cisco IOS commands	Cisco IOS Master Command List, All Releases
Cisco PfRv3 commands: complete command syntax, command mode, command history, defaults, usage guidelines and examples	Cisco IOS Performance Routing Command Reference

Technical Assistance

Description	Link
<p>The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.</p> <p>To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.</p> <p>Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.</p>	<p>http://www.cisco.com/cisco/web/support/index.html</p> <p>http://www.cisco.com/support</p>



CHAPTER 2

Performance Routing Version 3

Performance Routing Version 3 (PfRv3) is the evolution of Performance Routing (PfR). PfRv3 is an intelligent-path control mechanism for improving application delivery and WAN efficiency. It protects critical applications, increases bandwidth utilization, and serves as an integral part of the Cisco Intelligent WAN (IWAN) solution. PfRv3 uses differentiated services code points (DSCP) and application-based policy framework to provide a multi-site aware bandwidth and path control optimization.

- [Feature Information for PfRv3, on page 7](#)
- [Hardware and Software Support, on page 8](#)
- [Restrictions for Configuring Performance Routing v3, on page 8](#)
- [Information About PfRv3, on page 9](#)

Feature Information for PfRv3

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Table 2: Feature Information for Configuring PfRv3

Feature Name	Releases	Feature Information
PfRv3	15.4(3)M	<p>Performance Routing v3 (PfRv3) is the evolution of Performance Routing.</p> <p>PfRv3 is an intelligent-path control mechanism for improving application delivery and WAN efficiency. It protects critical applications, increases bandwidth utilization, and serves as an integral part of the Cisco Intelligent WAN (IWAN) solution.</p> <p>The following commands were modified by this feature: domain default, vrf default, master, source-interface, site-prefixes, password, monitor-interval, route-control, load-balance, enterprise-prefix, advanced, minimum-mask-length, mitigation-mode, threshold-variance, smart-probes, collector, class, match, priority, path-preference, border, domain-path.</p>

Hardware and Software Support

Cisco Performance Routing Version 3 (PfRv3) supports the following Cisco platforms and software releases:

Device	Cisco IOS Software Release	Hub/Remote Site
Cisco ISR 4000 Series Routers	Cisco IOS XE 3.13 or later	Hub or remote site
Cisco ASR 1000 Series Routers	Cisco IOS XE 3.13 or later	Hub site
Cisco CSR 1000v Series Routers	Cisco IOS XE 3.14 or later	Hub site (master controller only)
Cisco ISR-G2 Series Routers	Cisco IOS 15.5(1)T1 or later Cisco IOS 15.4(3)M1 or later	Remote site

Restrictions for Configuring Performance Routing v3

- Asymmetric routing is not supported for application-based policy.

- A new session cannot be established with application-based policy during blackout failure until route converges to backup path. For application-based flows, application ID is not recognized by Network Based Application Recognition (NBAR2) until session gets established and packet exchanges directly. You can configure Differentiated Services Code Point (DSCP) based policy for fast failover with blackout failure.
- PfRv3 does not support High Availability (HA) for both master and border routers. ESP switch over can trigger temporary unreachable event for one to two seconds.
- IPv6 is not supported.
- Network Address Translation (NAT) is not supported.
- Remarking DSCP for traffic flows on WAN interface is not supported.
- On a HUB Master Controller (MC), when a class is configured for matching application within a PfRv3 domain, the list of NBAR application names are limited if there is no active Border Router (BR).



Note Use at least one active BR for the MC to display all possible NBAR application names based on the protocol pack installed in BR.



Note PfRv2 is not supported on Cisco IOS 15.6(3)M and Cisco IOS 15.7(3)M or later releases. Cisco IOS XE 16.3.1 has PfRv2 CLIs, but the functionality is not supported.

Information About PfRv3

Performance Routing v3 Overview

Performance Routing Version 3 (PfRv3) is a one-touch provisioning and multi-site coordination solution that simplifies network provisioning. It enables intelligence of Cisco devices to improve application performance and availability. PfRv3 is an application-based policy driven framework that provides a multi-site aware bandwidth and path control optimization for WAN and cloud-based applications.

PfRv3 monitors network performance and selects best path for each application based on criteria such as reachability, delay, jitter, and loss. It evenly distributes traffic and maintains equivalent link utilization levels and load balances traffic.

It is tightly integrated with existing AVC components such as Performance Monitoring, Quality of Service (QoS), and NBAR2. PfRv3 is useful for enterprise and managed service providers looking for ways to increase their WAN reliability and availability while saving cost.

Benefits of PfRv3


Performance Routing Version 3 provides the following benefits:

- Centralized provisioning — Policies are defined on the hub-master controller and then distributed to all branches. Hence, per-site provisioning is not required in PfRv3.
- Simple provisioning — PfRv3 has simplified policies with pre-existing templates that a user can choose from.
- Enterprise domain — All sites belong to an enterprise domain and are connected with peering.
- Application and DSCP-based policies — Policies are provisioned based on applications. PfRv3 provides application visibility such as bandwidth, performance, and correlation to Quality of Service (QoS) queues by using Unified Monitoring.
- Automatic discovery — PfRv3 sites are discovered using peering. Each site peers with the hub site. The WAN interfaces are automatically discovered on the branch sites.
- Scalable passive monitoring — PfRv3 uses Unified Monitor to monitor traffic going into WAN links and traffic coming from the WAN links. It monitors performance metrics based on per DSCP instead of per flow or per prefix basis.
- Smart probing — PfRv3 uses probing mechanism that generates traffic only when there is no traffic. It generates real-time transport protocol traffic, which allows measuring jitter and packet loss using performance monitors.
- Scaling — Smart probing and enhanced passive metrics help to attain scale up to 2000 branches.
- VRF awareness — Different policies can be configured for different VRFs.

PfRv3 Design Overview

An enterprise organization has a hub and branch site. The hub site consists of a master controller and border router.

Figure 1: PfRv3 Design Topology

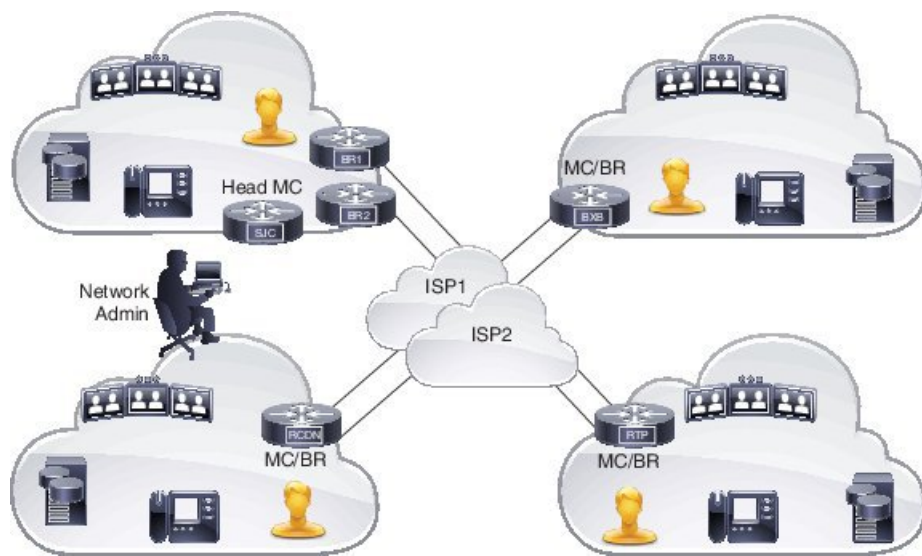

- In a network, all the policies are created on the hub-master controller. Policies dictate the desired treatment for a set of specified differentiated service code points (DSCPs) or application IDs (such as telepresence,

WebEx, and so on) in the network. The policies are percolated to all the master controllers on the network via Service Advertisement Framework (SAF). The policies can be modified by the hub-master controller and the modified policies are sent over the SAF framework so that all the nodes in the network are in sync with the hub-master controller. The hub-master controller collects information about flows handled by border routers. This information is exported to the master controller periodically using the performance monitoring instances (PMI) exporter. A domain can be configured on the central location (Hub) and branches. PfRv3 allows only one domain configuration. Virtual Routing and Forwarding (VRF) and roles are defined on a domain.

- PfRv3 is enabled on the WAN interface of the hub-border routers. The border routers give the flow information to the branch-master controller.
- Every branch has a local-master controller. The master controller can be either co-located with a branch router or a separate router. You must configure both local master and branch border on the same domain. Border devices establishes connection with local-master controller only if both are in the same domain. In a scenario where master and border configurations are on different domain, peering rejects all messages from different peers. Border devices are automatically shut down for five minutes. The connection is established only when the domain conflict is resolved.

Based on the flow information provided by the hub-border router, the branch-master (local-master) controller applies appropriate controls on the branch router per flow. It ascertains if a flow is operating within the policy limits or out-of-policy. The master-controller to branch-border communication is done via a TCP connection. This connection is used for tasks such as sending configuration and control information from master controller to branch router and flow information from branch router to master controller.

- The branch router is the enforcer, which classifies and measures metrics and sends them to the local-master controller. It is also responsible for path enforcement.

PfRv3 Configuration Components

PfRv3 comprises of the following configuration components:

- Device setup and role — Identifies devices in the network where PfRv3 should be configured and in what role.
- Policy configurations — Identifies the traffic in the network and determines what policies to apply.

Device Setup and Role

There are four different roles a device can play in PfRv3 configuration:

- Hub-master controller — The master controller at the hub site, which can be either a data center or a head quarter. All policies are configured on hub-master controller. It acts as master controller for the site and makes optimization decision.
- Hub-border router — The border controller at the hub site. PfRv3 is enabled on the WAN interfaces of the hub-border routers. You can configure more than one WAN interface on the same device. You can have multiple hub border devices. On the hub-border router, PfRv3 must be configured with the address of the local hub-master controller, path names, and path-ids of the external interfaces. You can use the global routing table (default VRF) or define specific VRFs for the hub-border routers.

- Branch-master controller — The branch-master controller is the master controller at the branch site. There is no policy configuration on this device. It receives policy from the hub-master controller. This device acts as master controller for the branch site and makes optimization decision.
- Branch- border router — The border device at the branch-site. There is no configuration other than enabling of PfRv3 border-master controller on the device. The WAN interface that terminates on the device is detected automatically.

Domain Policies

Domain policies are defined only on the hub-master controller and then sent over peering infrastructure to all the branch-master controllers. Policies can be defined per application or per differentiated service code point (DSCP). You cannot mix and match DSCP and application-based policies in the same class group. Traffic that does not match any of the classification and match statements falls into a default group, which is load balanced (no performance measurement is done).



Note You can either select an existing template for a policy or customize your policies for a domain type.

The following table lists the existing templates for domain type policy:

Pre-defined Template	Threshold Definition
Voice	Priority 1 one-way-delay threshold 150 threshold 150 (msec) Priority 2 packet-loss-rate threshold 1 (%) Priority 2 byte-loss-rate threshold 1 (%) Priority 3 jitter 30 (msec)
Real-time-video	Priority 1 packet-loss-rate threshold 1 (%) Priority 1 byte-loss-rate threshold 1 (%) Priority 2 one-way-delay threshold 150 (msec) Priority 3 jitter 20 (msec)
Low-latency-data	Priority 1 one-way-delay threshold 100 (msec)) Priority 2 byte-loss-rate threshold 5 (%) Priority 2 packet-loss-rate threshold 5 (%)
Bulk-data	Priority 1 one-way-delay threshold 300 (msec) Priority 2 byte-loss-rate threshold 5 (%) Priority 2 packet-loss-rate threshold 5 (%)
Best-effort	Priority 1 one-way-delay threshold 500 (msec) Priority 2 byte-loss-rate threshold 10 (%) Priority 2 packet-loss-rate threshold 10 (%)

Pre-defined Template	Threshold Definition
Scavenger	Priority 1 one-way-delay threshold 500 (msec) Priority 2 byte-loss-rate threshold 50 (%) Priority 2 packet-loss-rate threshold 50 (%)
Custom	Defines customized user-defined policy values

PfRv3 and Link Group Configuration

PfRv3 allows you to configure the following option for link grouping:

- Allows up to five primary path preferences and four fallback path preferences
- Allows a fallback blackhole configuration
- Allows a fallback routing configuration

During Policy Decision Point (PDP), the exits are first sorted on the available bandwidth and then a second sort algorithm places all primary path preferences in the front of the list followed by fallback preferences. If you have a configuration of primary Internet Service Provider (ISP) 1 and ISP2 and ISP3 as fallback, during policy decision, ISP1 is selected as the primary channel and if ISP2 is equally good it is selected as the fallback. ISP3 is considered only if ISP2 is bad in bandwidth availability.

Routing configuration means that when the traffic is uncontrolled, the routing table takes the responsibility of pushing the flow out of the box.




CHAPTER 3

Configuring PfRv3

There are four different roles a device can play in the PfRv3 configuration:

- Hub Master Controller
- Hub Border Router
- Branch Master Controller
- Branch Border Router

Figure 2: PfRv3 Workflow

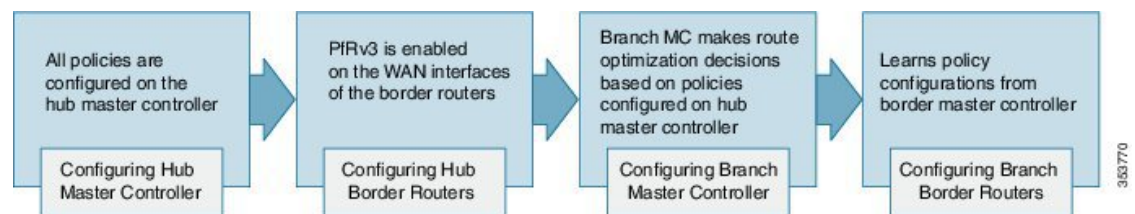

- [Configuring Performance Routing Version 3, on page 15](#)

Configuring Performance Routing Version 3

Configuring Hub Master Controller

The hub-master controller is located at the hub site in the Intelligent WAN (IWAN) topology and all policies are configured on the hub-master controller. For more information on hub-master controller, refer to the topic [Hub Master Controller](#). For information on hardware and software supported on hub-master controller, refer to the topic [Hardware and Software Requirements](#).

You can use the global routing table (default VRF) or define specific VRFs for the hub-master controller.



Note If default VRF (Global Routing Table) is used, then specific VRF definitions can be omitted.



Note The following configuration task is supported on both Cisco IOS Release 15.4 MT and Cisco IOS XE Release 3.13.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface loopback** *interface-number*
4. **ip address** *ip-address-mask*
5. **exit**
6. **domain** {*domain-name* | **default**}
7. **vrf** {*vrf-name* | **default**}
8. **master** {**hub** | **branch** | **transit**}
9. **source-interface loopback** *interface-number*
10. **enterprise-prefix prefix-list** *site-list*
11. **site-prefixes prefix-list** *site -list*
12. **exit**
13. **ip prefix-list** *ip-list seq sequence-number permit ip-prefix-network le le-length*
14. **end**
15. (Optional) **show domain** *domain-name master status*

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	interface loopback <i>interface-number</i> Example: Device(config)# interface Loopback0	Enters interface configuration mode.
Step 4	ip address <i>ip-address-mask</i> Example: Device(config-if)# ip address 10.8.3.3 255.255.255.255	Configures an IP address for an interface on the hub-master controller.

	Command or Action	Purpose
Step 5	exit Example: <pre>Device(config-if)# exit</pre>	Exits interface configuration mode and returns to global configuration mode.
Step 6	domain { <i>domain-name</i> default } Example: <pre>Device(config)# domain default</pre>	Enters domain configuration mode. Note You can either configure a default domain or define a specific domain for the master controller configuration. If you are defining a specific domain, for example "domain-cisco", you must configure the same domain for all devices for PfRv3 configuration.
Step 7	vrf { <i>vrf-name</i> default } Example: <pre>Device(config-domain)# vrf default</pre>	Configures default Virtual Routing and Forwarding (VRF) instances for the default or specific domain. Note You can configure specific VRF definition also for the hub-master controller configuration.
Step 8	master { hub branch transit } Example: <pre>Device(config-domain-vrf)# master hub</pre>	Enters master controller configuration mode and configures the master as a hub. When the master hub is configured, EIGRP SAF auto-configuration is enabled by default and requests from remote sites are sent to the hub-master controller.
Step 9	source-interface loopback <i>interface-number</i> Example: <pre>Device(config-domain-vrf-mc)# source-interface Loopback0</pre>	Configures the loopback used as a source for peering with other sites or master controller. Note The source-interface loopback also serves as a site ID of a particular site (hub or branch) on the master controller.
Step 10	enterprise-prefix prefix-list <i>site-list</i> Example: <pre>Device(config-domain-vrf-mc)# enterprise-prefix prefix-list ENTERPRISE</pre>	Configures an enterprise prefix-list with static site targets. Note The enterprise-prefix prefix-list command defines the boundary for all the internal enterprise prefixes. A prefix that is not from the prefix-list is considered as internet prefix and is routed over internet-bound links.
Step 11	site-prefixes prefix-list <i>site -list</i> Example: <pre>Device(config-domain-vrf-mc)# site-prefixes prefix-list Data_Center_1</pre>	Configures the prefix-list containing list of site prefixes. Note The site-prefix prefix-list defines static site-prefix for the local site and disables automatic site-prefix learning on the border router. The static-site prefix list is only required for hub and transit sites.

	Command or Action	Purpose
Step 12	exit Example: Device(config-domain-vrf-mc)# exit	Exits from master controller configuration mode and returns to domain configuration mode. Note Exit from domain configuration mode and enter in global configuration mode using the exit command.
Step 13	ip prefix-list ip-list seq sequence-number permit ip-prefix-network le le-length Example: Device(config)# ip prefix-list DATA_CENTER_1 seq 5 permit 10.8.0.0/16 le 24 Device(config)# ip prefix-list ENTERPRISE seq 5 permit 10.0.0.0/8 le 24	Configures the IP prefix list to filter traffic based on the IP network defined in the configuration.
Step 14	end Example: Device(config)# end	Exits configuration mode and returns to privileged EXEC mode.
Step 15	(Optional) show domain domain-name master status Example: Device# show domain one master status	Use this show command to display the status of a master controller.

What to do next

- Configuring Domain Policies
- Configuring Hub Border Routers
- Configuring Branch Routers
- Verifying PfRv3 Configuration
- Configuring Channel-based Metrics Measurement

Configuring Hub Border Router

The border routers on the central site register to the central master controller with their external interface and the path names configured on the external interface. You can use the global routing table (default VRF) or define specific VRFs for hub-border routers.



Note On the hub-border router, you must configure PfRv3 with the following:

- The source interface of the border router
- The IP address of the hub-master controller
- The path name on external interfaces

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface loopback** *interface-number*
4. **ip address** *ip-address-mask*
5. **exit**
6. **domain** {*domain-name* | **default**}
7. **vrf** {*vrf-name* | **default**}
8. **border**
9. **source-interface loopback** *interface-number*
10. **master** [*ip-address* | **local**]
11. **exit**
12. **exit**
13. **exit**
14. **interface** *tunnel-name*
15. **ip address** *ip-address mask*
16. **domain** *domain-name path path-name*
17. **end**
18. (Optional) **show domain** *domain-name border status*

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	interface loopback <i>interface-number</i> Example: Device(config)# interface Loopback0	Enters interface configuration mode.
Step 4	ip address <i>ip-address-mask</i> Example: Device(config-if)# ip address 10.8.1.1 255.255.255.255	Configures an IP address for an interface on the hub-border router (Border Router 1).
Step 5	exit Example:	Exits interface configuration mode and returns to global configuration mode.

	Command or Action	Purpose
	Device(config-if)# exit	
Step 6	domain { <i>domain-name</i> default } Example: Device(config)# domain one	Enters domain configuration mode.
Step 7	vrf { <i>vrf-name</i> default } Example: Device(config-domain)# vrf default	Configures Virtual Routing and Forwarding (VRF) for the default domain. Note You can also configure specific VRF definition for hub-border configuration.
Step 8	border Example: Device(config-domain-vrf)# border	Enters border configuration mode.
Step 9	source-interface loopback <i>interface-number</i> Example: Device(config-domain-vrf-br)# source-interface Loopback0	Configures the loopback used as a source for peering with other sites or master controller.
Step 10	master [<i>ip-address</i> local] Example: Device(config-domain-vrf-br)# master 10.8.3.3	Configures the IP address of the hub-master controller. You can also configure the local domain master controller as the master.
Step 11	exit Example: Device(config-domain-vrf-br)# exit	Exits border configuration mode and enters VRF configuration mode.
Step 12	exit Example: Device(config-domain-vrf)# exit	Exits VRF configuration mode and enters domain configuration mode.
Step 13	exit Example: Device(config-domain)# exit	Exits domain configuration mode and enters global configuration mode.
Step 14	interface <i>tunnel-name</i> Example: Device(config)# interface Tunnel100	Enters interface configuration mode.
Step 15	ip address <i>ip-address mask</i> Example: Device(config-if)# ip address 10.0.100.84 255.255.255.0	Configures an IP address for the tunnel interface.

	Command or Action	Purpose
Step 16	<p>domain <i>domain-name</i> path <i>path-name</i></p> <p>Example:</p> <pre>Device(config-if)# domain one path MPLS</pre>	<p>Configures the Internet Service Provider (ISP). There are two types of external interfaces, enterprise link such as DMVPN tunnel interface and internet-bound interface. Internet-bound external interface is configured only on the hub site for the internet edge deployment and cannot be discovered by any branch site.</p> <p>We recommend using front VRF on the tunnel interface for enterprise links over internet ISP links.</p> <p>Note You can configure multiple ISPs. If you are defining specific domain name for example, <code>domain_cisco</code>, you must specify the same domain name for configuring ISP paths.</p>
Step 17	<p>end</p> <p>Example:</p> <pre>Device(config-if)# end</pre>	Exits interface configuration mode and returns to privileged EXEC mode.
Step 18	<p>(Optional) show domain <i>domain-name</i> border status</p> <p>Example:</p> <pre>Device# show domain one border status</pre>	Use this show command to display the status of a border router.

What to do next

- Configuring Branch Master Controller
- Configuring Branch Border Router
- Verifying PfRv3 Configuration

Configuring Domain Policies



Note You can define policies based on either per application or per differentiated services code point (DSCP) but, you cannot mix and match DSCP and application-based policies in the same class group. You can use predefined policies from the template or create custom policies.

Before you begin

Configure a device as hub-master controller at the hub site. To know more about how to configure a hub-master controller, see [Configuring Hub Master Controller, on page 15](#) section.

SUMMARY STEPS

1. **domain** {*domain-name* | **default**}
2. **vrf** {*vrf-name* | **default**}
3. **master** [**hub** | **branch** | **transit**]

4. **monitor-interval** *seconds* **dscp ef**
5. **load-balance**
6. **class** *class-name* **sequence** *sequence-number*
7. **match** {**application** | **dscp**} *services-value* **policy**
8. **path-preference** *path-name* **fallback** *path-name*
9. **priority** *priority-number* [**jitter** | **loss** | **one-way-delay**] **threshold** *threshold-value*
10. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	domain { <i>domain-name</i> default } Example: Device(config)# domain default	Enters domain configuration mode. Note You can either configure a default domain or define a specific domain for the border configuration. If you are defining a specific domain, for example "domain-cisco", you must configure the same domain for all devices for PFRv3 configuration.
Step 2	vrf { <i>vrf-name</i> default } Example: Device(config-domain)# vrf default	Configures default Virtual Routing and Forwarding (VRF) instances for the default or specific domain. Note You can configure specific VRF definition also for the hub-master controller configuration.
Step 3	master [hub branch transit] Example: Device(config-domain-vrf)# master hub	Enters master controller configuration mode and configures the master as a hub. When the master hub is configured, EIGRP SAF auto-configuration is enabled by default and requests from remote sites are sent to the hub master controller.
Step 4	monitor-interval <i>seconds</i> dscp ef Example: Device(config-domain-vrf-mc)# monitor-interval 2 dscp ef	Configures interval time that defines monitoring interval on ingress monitors. Note For critical applications monitor interval is set to 2 seconds. Default value is 30 seconds. You can lower the monitor interval for critical applications to achieve a fast fail over to the secondary path. This is known as quick monitor.
Step 5	load-balance Example: Device(config-domain-vrf-mc)# load-balance	Configures load balancing. Note When load balancing is enabled, all the traffic that falls in the default class is load balanced. When load balancing is disabled, PFRv3 deletes this default class and traffic is not load balanced and is routed based on the routing table information.

	Command or Action	Purpose
Step 6	<p>class <i>class-name</i> sequence <i>sequence-number</i></p> <p>Example:</p> <pre>Device(config-domain-vrf-mc)# class VOICE sequence 10</pre>	<p>Enters policy class configuration mode.</p> <p>Note Class-name value must be in all capitals.</p>
Step 7	<p>match {application dscp} <i>services-value</i> policy</p> <p>Example:</p> <pre>Device(config-domain-vrf-mc-class)# match dscp ef policy voice</pre>	<p>Configures policy on per DSCP basis. You can select a DSCP value from 0 to 63. You can select the following policy types:</p> <ul style="list-style-type: none"> • best-effort • bulk-data • custom • low-latency-data • real-time-video • scavenger • voice <p>In this example, the domain policy type is configured for voice.</p>
Step 8	<p>path-preference <i>path-name</i> fallback <i>path-name</i></p> <p>Example:</p> <pre>Device(config-domain-vrf-mc-class)# path-preference MPLS fallback INET</pre>	<p>Configures the path preference for applications.</p> <p>Note You can configure up to five primary path preferences and four fallback preferences. Group policies sharing the same purpose can be defined under the same class path preference. You cannot configure different path preference under the same class.</p>
Step 9	<p>priority <i>priority-number</i> [jitter loss one-way-delay] threshold <i>threshold-value</i></p> <p>Example:</p> <pre>Device(config-domain-vrf-mc-class-type)# priority 2 loss threshold 10 Device(config-domain-vrf-mc-class-type)# priority 1 one-way-delay threshold 600 Device(config-domain-vrf-mc-class-type)# priority 2 jitter threshold 200</pre>	<p>Enters class type configuration mode. Configures the user-defined threshold value for loss, jitter, and one-way-delay for the policy type. Threshold values are defined in usec.</p> <p>Note You can configure class type priorities only for a custom policy. You can configure multiple priorities for custom policies.</p>
Step 10	<p>end</p> <p>Example:</p> <pre>Device(config)# end</pre>	<p>Exits configuration mode and returns to privileged EXEC mode.</p>

What to do next

Verifying PfRv3 Configurations

Configuring Branch Master Controller

You must configure the IP address of the hub-master controller for setting up the branch-master controller. You can use the global routing table (default VRF) or define specific VRFs for the branch-master controller.



Note If default VRF (Global Routing Table) is used, then VRF definition can be omitted.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface loopback** *interface-number*
4. **ip address** *ip-address-mask*
5. **domain** {*domain-name* | **default**}
6. **vrf** {*vrf-name* | **default**}
7. **master branch**
8. **source-interface loopback** *interface-number*
9. **hub** *ip-address*
10. **end**
11. (Optional) **show domain** *domain-name* **master status**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	interface loopback <i>interface-number</i> Example: Device(config)# interface Loopback0	Enters interface configuration mode.
Step 4	ip address <i>ip-address-mask</i> Example:	Configures an IP address for an interface on the branch-master controller.

	Command or Action	Purpose
	Device(config-if)# ip address 10.2.10.10 255.255.255.255	
Step 5	domain { <i>domain-name</i> default } Example: Device(config)# domain default	Enters domain configuration mode. Note You can either configure a default domain or define a specific domain for master controller configuration. If you are defining the specific domain, for example "domain_cisco", you must configure the same domain for all devices for PfRv3 configuration.
Step 6	vrf { <i>vrf-name</i> default } Example: Device(config-domain)# vrf default	Configures Virtual Routing and Forwarding (VRF) for the default domain. Note You can also configure specific VRF definition for branch border configuration.
Step 7	master branch Example: Device(config-domain-vrf)# master branch	Configures the device as master branch.
Step 8	source-interface loopback <i>interface-number</i> Example: Device(config-domain-vrf-mc)# source-interface Loopback0	Configures the loopback used as a source for peering with other sites or master controller.
Step 9	hub <i>ip-address</i> Example: Device(config-domain-vrf-mc)# hub 10.8.3.3	Specifies the IP address of the hub master controller.
Step 10	end Example: Device(config-domain-vrf-mc)# end	Exits master controller domain configuration mode and returns to privileged EXEC mode.
Step 11	(Optional) show domain <i>domain-name</i> master status Example: Device# show domain one master status	Use this show command to display the status of a master controller.

What to do next

Configuring Branch Border Router

Verifying Border Router

Configuring Branch Border Router

A border router on a branch site must register to the local master controller. You need not provision any external interfaces for border routers on branch. Interfaces are learnt during the discovery process together with the path names (colors). You can use the global routing table (default VRF) or define specific VRFs for border routers.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **domain** {*domain-name* | **default**}
4. **vrf** {*vrf-name* | **default**}
5. **border**
6. **source-interface loopback** *interface-number*
7. **master** *ip-address*
8. **end**
9. (Optional) **show domain** *domain-name* **border status**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	domain { <i>domain-name</i> default } Example: Device(config)# domain default	Enters domain configuration mode.
Step 4	vrf { <i>vrf-name</i> default } Example: Device(config-domain)# vrf default	Configures Virtual Routing and Forwarding (VRF) for the default domain. Note You can also configure specific VRF definition for the branch-border configuration.
Step 5	border Example: Device(config-domain-vrf)# border	Enters border configuration mode.
Step 6	source-interface loopback <i>interface-number</i> Example:	Configures the loopback address used as a source for peering with other sites or the master controller.

	Command or Action	Purpose
	Device(config-domain-vrf-br)# source-interface Loopback0	
Step 7	master <i>ip-address</i> Example: Device(config-domain-vrf-br)# master 10.1.1.1	Specifies the IP address of the branch-master controller.
Step 8	end Example: Device(config-domain-vrf-br)# end	Exits border configuration mode and returns to privileged EXEC mode.
Step 9	(Optional) show domain <i>domain-name</i> border status Example: Device# show domain one border status	Use this show command to display the status of a border router.

What to do next

Verifying PfRv3 Configurations

Configuring Branch Master Controller and Border Router

A branch device can be configured to perform the role of a master controller and a border router. The branch-master controller or border router peers with the hub-master controller and receives all policy updates from it.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface loopback** *interface-number*
4. **ip address** *ip-address-mask*
5. **exit**
6. **domain** {*domain-name* | **default**}
7. **vrf** {*vrf-name* | **default**}
8. **border**
9. **source-interface loopback** *interface-number*
10. **master local**
11. **master branch**
12. **source-interface loopback** *interface-number*
13. **hub** *ip-address*
14. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.

	Command or Action	Purpose
	Example: Device> enable	<ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	interface loopback <i>interface-number</i> Example: Device(config)# interface Loopback0	Enters interface configuration mode.
Step 4	ip address <i>ip-address-mask</i> Example: Device(config-if)# ip address 10.2.12.12 255.255.255.255	Configures an IP address for an interface on the branch master controller.
Step 5	exit Example: Device(config-if)# exit	Exits interface configuration mode and returns to global configuration mode.
Step 6	domain {<i>domain-name</i> default} Example: Device(config)# domain default	Enters domain configuration mode.
Step 7	vrf {<i>vrf-name</i> default} Example: Device(config-domain)# vrf default	Configures Virtual Routing and Forwarding (VRF) for the default domain.
Step 8	border Example: Device(config-domain-vrf)# border	Enters border configuration mode.
Step 9	source-interface loopback <i>interface-number</i> Example: Device(config-domain-vrf-br)# source-interface Loopback0	Configures the loopback used as a source for peering with other sites or master controller.
Step 10	master local Example: Device(config-domain-vrf-br)# master local	Configures the local IP address of the device as branch-master controller.

	Command or Action	Purpose
Step 11	master branch Example: Device(config-domain-vrf-mc)# master branch	Configures the master type of the device as a branch.
Step 12	source-interface loopback <i>interface-number</i> Example: Device(config-domain-vrf-mc)# source-interface Loopback0	Configures the loopback used as a source for peering with other sites or master controller.
Step 13	hub <i>ip-address</i> Example: Device(config-domain-vrf-mc)# hub 10.8.3.3	Configures the IP address of the hub-master controller.
Step 14	end Example: Device(config-domain-vrf-mc)# end	Exits the configuration mode and returns to privileged EXEC mode.

What to do next

Verifying PfRv3 Configuration

Verifying PfRv3 Configuration

Verifying Hub Master Controller Configurations

Use the following show commands in any order to verify the status of the hub-master controller.

SUMMARY STEPS

1. **show domain *domain-name* master policy**
2. **show domain *domain-name* master status**
3. **show domain *domain-name* master exits**
4. **show domain *domain-name* master peering**
5. **show derived-config | section eigrp**
6. **show domain *domain-name* master discovered-sites**

DETAILED STEPS**Step 1** **show domain *domain-name* master policy**

This command displays the policy information configured on the hub master controller.

Check the following fields in the output to ensure that the hub-master controller is configured accurately:

- Policy publishing status to remote sites

- Policy threshold per class based on either DSCP or application
- Class default is enabled

Example:

```
HubMC# show domain one master policy
```

```
No Policy publish pending
```

```
-----
class VOICE sequence 10
  path-preference MPLS fallback INET
  class type: Dscp Based
  match dscp ef policy custom
    priority 2 packet-loss-rate threshold 5.0 percent
    priority 1 one-way-delay threshold 150 msec
    priority 2 byte-loss-rate threshold 5.0 percent
    Number of Traffic classes using this policy: 1

class VIDEO sequence 20
  path-preference INET fallback MPLS
  class type: Dscp Based
  match dscp af41 policy custom
    priority 2 packet-loss-rate threshold 5.0 percent
    priority 1 one-way-delay threshold 150 msec
    priority 2 byte-loss-rate threshold 5.0 percent
    Number of Traffic classes using this policy: 1
  match dscp cs4 policy custom
    priority 2 packet-loss-rate threshold 5.0 percent
    priority 1 one-way-delay threshold 150 msec
    priority 2 byte-loss-rate threshold 5.0 percent
    Number of Traffic classes using this policy: 1

class CRITICAL sequence 30
  path-preference MPLS fallback INET
  class type: Dscp Based
  match dscp af31 policy custom
    priority 2 packet-loss-rate threshold 10.0 percent
    priority 1 one-way-delay threshold 600 msec
    priority 2 byte-loss-rate threshold 10.0 percent
    Number of Traffic classes using this policy: 1

class default
  match dscp all
  Number of Traffic classes using this policy: 3
-----
```

The following table describes the significant fields shown in the command output.

Table 3: show domain master policy Field Descriptions

Field	Description
No policy publish pending	Specifies if the policy publishing is pending to remote sites.

Field	Description
class	Name of the class type. In this example, the following classes are listed: <ul style="list-style-type: none"> • VOICE • VIDEO • CRITICAL
path-preference	Specifies the path preferred for the class type.
match	Specifies the DSCP value to match for a policy type.
priority	Specifies the detailed policy threshold per class, based on the DSCP or application.

Step 2 **show domain *domain-name* master status**

This command displays the status of the hub-master controller.

Check the following fields in the output to ensure that the hub-master controller is configured accurately:

- Operational status is Up
- Configured status is Up
- External interfaces with appropriate path names are defined
- Load balancing is enabled
- Default channels for load-sharing are enabled and configured

Example:

```
HubMC# show domain one master status
```

```
-----
*** Domain MC Status ***

Master VRF: Global

Instance Type: Hub
Instance id: 0
Operational status: Up
Configured status: Up
Loopback IP Address: 10.8.3.3
Load Balancing:
  Admin Status: Enabled
  Operational Status: Up
  Enterprise top level prefixes configured: 1
  Max Calculated Utilization Variance: 1%
  Last load balance attempt: 00:27:23 ago
  Last Reason: Variance less than 20%
  Total unbalanced bandwidth:
    External links: 0 Kbps Internet links: 0 Kbps
Route Control: Enabled
Mitigation mode Aggressive: Disabled
Policy threshold variance: 20
```

```

Minimum Mask Length: 28
Sampling: off

Borders:
  IP address: 10.8.2.2
  Connection status: CONNECTED (Last Updated 1d11h ago )
  Interfaces configured:
    Name: Tunnel200 | type: external | Service Provider: INET | Status: UP
    Number of default Channels: 3

Tunnel if: Tunnel0

IP address: 10.8.1.1
Connection status: CONNECTED (Last Updated 1d11h ago )
Interfaces configured:
  Name: Tunnel100 | type: external | Service Provider: MPLS | Status: UP
  Number of default Channels: 3

Tunnel if: Tunnel0
-----

```

The following table describes the significant fields shown in the command output.

Table 4: show domain master status Field Descriptions

Field	Description
Instance Type	Displays the instance type of the device. In this output, the device is configured as a hub.
Operational Status	Displays the operational status of the hub.
Configured Status	Displays the configuration status of the hub.
Load Balancing	Displays the load balancing status. If load balancing is enabled, the master controller will load balance the default-class traffic among all the external interfaces.
Borders	Displays the information of border routers connected to the hub master controller.
Number of default Channels	Displays the number of channels configured.

Step 3 show domain *domain-name* master exits

This command displays the summary of the external interfaces configured at the hub site.

Check the following fields in the output to ensure that the hub-master controller is configured accurately:

- External interface capacity
- Egress utilization
- Number of traffic classes per DSCP on external interface
- Range of Egress utilization

Example:

```
HubMC# show domain one master exits
```

```
-----

*** Domain MC Status ***

BR address: 10.8.2.2 | Name: Tunnel200 | type: external | Path: INET |
  Egress capacity: 50000 Kbps | Egress BW: 17514 Kbps | Ideal:17948 Kbps | under:
434 Kbps | Egress Utilization: 35 %
  DSCP: cs4[32]-Number of Traffic Classes[1]
  DSCP: af41[34]-Number of Traffic Classes[1]
  DSCP: cs5[40]-Number of Traffic Classes[1]

BR address: 10.8.1.1 | Name: Tunnel100 | type: external | Path: MPLS |
  Egress capacity: 100000 Kbps | Egress BW: 36331 Kbps | Ideal:35896 Kbps | over:
435 Kbps | Egress Utilization: 36 %
  DSCP: cs1[8]-Number of Traffic Classes[1]
  DSCP: af11[10]-Number of Traffic Classes[1]
  DSCP: af31[26]-Number of Traffic Classes[1]
  DSCP: ef[46]-Number of Traffic Classes[1]

-----
```

The following table describes the significant fields shown in the command output.

Table 5: show domain master exits Field Descriptions

Field	Description
BR address	IP address of border routers configured at the hub site.
type	Type of interface. Internal or external. In this example, the type is external.
Path	Name of the path.
Egress capacity	Egress capacity of the interface.
DSCP	Number of traffic classed configured per DSCP on external interfaces.

Step 4 **show domain *domain-name* master peering**

This command displays the peering information of the hub-master controller.

Check the following fields in the output to ensure that the hub-master controller is configured accurately:

- Peering state status
- Cent-policy status
- PMI status
- Globals service status

Example:

```
HubMC# show domain one master peering
```

```

-----
*** Domain MC Status ***

Peering state: Enabled
Origin: Loopback0(10.8.3.3)
Peering type: Listener

Subscribed service:
  cent-policy (2) :
  site-prefix (1) :
    Last Notification Info: 00:23:15 ago, Size: 160, Compressed size: 144, Status: No Error, Count:
3
  service-provider (4) :
  globals (5) :
    Last Notification Info: 00:03:09 ago, Size: 325, Compressed size: 218, Status: No Error, Count:
6
  pmi (3) :

Published service:
  site-prefix (1) :
    Last Publish Info: 00:03:10 ago, Size: 209, Compressed size: 138, Status: No Error
  cent-policy (2) :
    Last Publish Info: 00:02:58 ago, Size: 2244, Compressed size: 468, Status: No Error
  pmi (3) :
    Last Publish Info: 02:03:12 ago, Size: 2088, Compressed size: 458, Status: No Error
  globals (5) :
    Last Publish Info: 00:03:09 ago, Size: 325, Compressed size: 198, Status: No Error
-----

```

The following table describes the significant fields shown in the command output.

Table 6: show domain master peering Field Descriptions

Field	Description
Peering state	Status of peering.
Subscribed services	Lists the status of services subscribed to.
Published services	Services published by the hub-master controller to the remote sites.

Step 5 show derived-config | section eigrp

This command displays if EIGRP SAF is automatically configured.

Check the following fields in the output to ensure that the hub-master controller is configured accurately:

- EIGRP SAF configuration is auto enabled
- EIGRP SAF peering status between hub and branch sites

Example:

```
HubMC# show derived-config | section eigrp
```

```
-----
router eigrp #AUTOCFG# (API-generated auto-configuration, not user configurable)
```



```

!
service-family ipv4 autonomous-system 59501
!
sf-interface Loopback0
  hello-interval 120
  hold-time 600
exit-sf-interface
!
topology base
exit-sf-topology
  remote-neighbors source Loopback0 unicast-listen
exit-service-family
-----

```

The fields shown above are self-explanatory.

Step 6 **show domain *domain-name* master discovered-sites**

This command displays the sites that are remotely connected to the hub site.

Example:

```

HubMC# show domain one master discovered-sites
-----

*** Domain MC DISCOVERED sites ***

  Number of sites: 3
  *Traffic classes [Performance based][Load-balance based]

Site ID: 255.255.255.255
  DSCP :default[0]-Number of traffic classes[0][0]
  DSCP :af31[26]-Number of traffic classes[0][0]
  DSCP :cs4[32]-Number of traffic classes[0][0]
  DSCP :af41[34]-Number of traffic classes[0][0]
  DSCP :cs5[40]-Number of traffic classes[0][0]
  DSCP :ef[46]-Number of traffic classes[0][0]

Site ID: 10.2.10.10
  DSCP :default[0]-Number of traffic classes[1][1]
  DSCP :af31[26]-Number of traffic classes[0][0]
  DSCP :cs4[32]-Number of traffic classes[1][0]
  DSCP :af41[34]-Number of traffic classes[0][0]
  DSCP :cs5[40]-Number of traffic classes[0][0]
  DSCP :ef[46]-Number of traffic classes[1][0]

Site ID: 10.2.11.11
  DSCP :default[0]-Number of traffic classes[0][0]
  DSCP :af31[26]-Number of traffic classes[0][0]
  DSCP :cs4[32]-Number of traffic classes[0][0]
  DSCP :af41[34]-Number of traffic classes[0][0]
  DSCP :cs5[40]-Number of traffic classes[0][0]
  DSCP :ef[46]-Number of traffic classes[0][0]
-----

```

The fields shown above are self-explanatory.

Verifying Hub Border Router Configurations

Use the following show commands in any order to verify the status of the hub border routers.

SUMMARY STEPS

1. **show domain *domain-name* border status**
2. **show domain *domain-name* border peering**
3. **show platform software pfrv3 rp active smart-probe**
4. **show platform software pfrv3 fp active smart-probe**
5. **show platform hardware qfp active feature pfrv3 client global pfrv3-instance detail**

DETAILED STEPS

Step 1 **show domain *domain-name* border status**

This command displays the status of the border routers configured at the hub site.

Check the following fields in the output to ensure that the hub-border routers are configured accurately:

- Border status is UP
- External interfaces are listed with the right path names
- Minimum requirement is met

Example:

```
HubBR# show domain one border status
```

```
-----
****Border Status****

Instance Status: UP
Present status last updated: 02:07:43 ago
Loopback: Configured Loopback0 UP (10.8.2.2)
Master: 10.8.3.3
Connection Status with Master: UP
MC connection info: CONNECTION SUCCESSFUL
Connected for: 02:07:42
Route-Control: Enabled
Minimum Mask length: 28
Sampling: off
Minimum Requirement: Met
External Wan interfaces:
  Name: Tunnel100 Interface Index: 14 SNMP Index: 9 SP:MPLS Status: UP
  Name: Tunnel200 Interface Index: 154 SNMP Index: 10 SP:INET Status: UP

Auto Tunnel information:

  Name:Tunnel0 if_index: 15
  Borders reachable via this tunnel: 10.8.2.2
-----
```

The following table describes the significant fields shown in the command output.

Table 7: show domain border status Field Descriptions

Field	Description
Instance Status	Displays the instance status.
Master	IP address of the master controller.
Minimum Requirement	Displays the minimum requirement status of the border router.
External Wan interfaces	Displays the information of external interfaces configured on border router.
Auto Tunnel information	Displays the information of auto-tunnel configuration.

Step 2 **show domain domain-name border peering**

This command displays the border router peering status.

Check the following fields in the output to ensure that the hub-border router is configured accurately:

- Peering status
- PMI status
- Site-prefix status
- Globals service status

Example:

```
HubBR# show domain one border peering
```

```
-----
Peering state: Enabled
Origin: Loopback0(10.8.2.2)
Peering type: Peer(With 10.8.3.3)
Subscribed service:
  pmi (3) :
    Last Notification Info: 02:09:49 ago, Size: 2088, Compressed size: 478, Status:
No Error, Count: 1
  site-prefix (1) :
    Last Notification Info: 00:06:19 ago, Size: 128, Compressed size: 134, Status:
No Error, Count: 6
  globals (5) :
    Last Notification Info: 00:09:48 ago, Size: 325, Compressed size: 218, Status:
No Error, Count: 9
Published service:
-----
```

The following table describes the significant fields shown in the command output.

Table 8: show domain border peering Field Descriptions

Field	Description
Peering state	Status of peering.
Peering type	Type of peering. In this example, the border router is peering with master-hub controller.
Subscribed service	Lists the status of services subscribed to. In this example, the following services are subscribed: <ul style="list-style-type: none"> • pmi • site-prefix • globals
Published services	Services published by the hub-border routers to the remote sites.

Step 3 show platform software pfrv3 rp active smart-probe

Note To verify the status of a hub-border router on Cisco ASR 1000 Series Aggregation Services Routers, use the **show platform software pfrv3 rp active smart-probe** command.

This command displays the PfRv3 smart probe status on a Cisco ASR 1000 Series Aggregation Services Router configured at the hub site.

Example:

```
HubBR# show platform software pfrv3 rp active smart-probe
```

```
-----
PfRv3 smart probe parameters :

Total number of PfRv3 smart probe: 1

Parameters :
  vrf id = 0
  Probe src = 10.8.3.3
  Src port = 18000, Dst port = 19000
  Unreach time = 1000, Probe period = 500
  Discovery = false
  Dscp bitmap = 0xffffffffffffffff
  interval = 10000
  Discovery_probe = true
  minimum prefix length = 28
-----
```

The fields shown above are self-explanatory.

Step 4 show platform software pfrv3 fp active smart-probe

Note To verify the smart probe status of an embedded-service-processor on Cisco ASR 1000 Series Aggregation Services Routers, use the **show platform software pfrv3 fp active smart-probe** command.

This command displays the PfRv3 smart probe status on a Cisco ASR 1000 Series Aggregation Services Router configured at the hub site.

Example:

```
HubBR# show platform software pfrv3 fp active smart-probe
```

```
-----
PfRv3 smart probe parameters :
Total number of PfRv3 smart probe: 1
Parameters :
  vrf id = 0
  Probe src = 10.8.3.3
  Src port = 18000, Dst port = 19000
  Unreach time = 1000, Probe period = 500
  Discovery = false
  Dscp bitmap = 0xffffffffffffffff
  interval = 10000
  Discovery_probe = true
  minimum prefix length = 28
-----
```

The fields shown above are self-explanatory.

Step 5 **show platform hardware qfp active feature pfrv3 client global pfrv3-instance detail**

Note To verify the platform hardware information for PfR v3 on Cisco ASR 1000 Series Aggregation Services Routers, use the **show platform hardware qfp active feature pfrv3 client global pfrv3-instance detail** command.

This command displays the platform hardware information on a Cisco ASR 1000 Series Aggregation Services Router configured at the hub site.

Example:

```
HubBR# show platform hardware qfp active feature pfrv3 client global pfrv3-instance detail
```

```
-----
PfRv3 QFP CLIENT GLOBAL INFO
Number of Instances: 1
Instance
  hash val: 5
  tbl id: 0
  symmetry: Off
  discovery: Off
  discovery_probe: On
  probe info:
    probe src: 10.8.3.3, src port: 18000, dst port: 19000
    unreach time: 1000, probe period: 500
    dscp bitmap: 0xffffffffffffffff, interval: 10000
    mml: 28
  exmem info:
    PPE addr: 0xe80b7830
-----
```

The fields shown above are self-explanatory.

Verifying Branch Master Controller Configurations

Use the following show commands in any order to verify the status of the branch-master controller.

SUMMARY STEPS

1. **show domain** *domain-name* **master status**
2. **show domain** *domain-name* **master policy**

DETAILED STEPS

Step 1 **show domain** *domain-name* **master status**

This command displays the status information of the branch-master controller.

Check the following fields in the output to ensure that the branch-master controller is configured accurately:

- External interfaces are listed with correct path names
- Minimum requirements are met
- Path names are correct

Example:

```
BRMC# show domain one master status
```

```
*** Domain MC Status ***

Master VRF: Global

Instance Type: Branch
Instance id: 0
Operational status: Up
Configured status: Up
Loopback IP Address: 10.2.10.10
Load Balancing:
  Operational Status: Up
  Max Calculated Utilization Variance: 21%
  Last load balance attempt: 00:00:07 ago
  Last Reason: No channels yet for load balancing
Total unbalanced bandwidth:
  External links: 5327 Kbps Internet links: 0 Kbps
Route Control: Enabled
Mitigation mode Aggressive: Disabled
Policy threshold variance: 20
Minimum Mask Length: 28
Sampling: off
Minimum Requirement: Met
```

```

Borders:
  IP address: 10.2.10.10
  Connection status: CONNECTED (Last Updated 02:03:22 ago )
  Interfaces configured:
    Name: Tunnel100 | type: external | Service Provider: MPLS | Status: UP
      Number of default Channels: 0

    Name: Tunnel200 | type: external | Service Provider: INET | Status: UP
      Number of default Channels: 0

  Tunnel if: Tunnel0

```

The following table describes the significant fields shown in the command output.

Table 9: show domain master status Field Descriptions

Field	Description
Instance Type	Displays the instance type of the device. In this output, the device is configured as a branch.
Operational Status	Displays the operational status of the branch-master controller.
Configured Status	Displays the configuration status of the branch-master controller.
Load Balancing	Displays the load balancing status. If load balancing is enabled on the hub-master controller, the branch master controller receives load balanced traffic.
Borders	Displays the information of border routers connected to the branch-master controller, and external interfaces connected to path names.

Step 2 show domain *domain-name* master policy

This command displays the policy information received from the hub-master controller.

Example:

```
BRMC# show domain one master policy
```

```

-----
class VOICE sequence 10
  path-preference MPLS fallback INET
  class type: Dscp Based
  match dscp ef policy custom
    priority 2 packet-loss-rate threshold 5.0 percent
    priority 1 one-way-delay threshold 150 msec
    priority 2 byte-loss-rate threshold 5.0 percent
  Number of Traffic classes using this policy: 1

class VIDEO sequence 20
  path-preference INET fallback MPLS

```

```

class type: Dscp Based
  match dscp af41 policy custom
    priority 2 packet-loss-rate threshold 5.0 percent
    priority 1 one-way-delay threshold 150 msec
    priority 2 byte-loss-rate threshold 5.0 percent
    Number of Traffic classes using this policy: 1
  match dscp cs4 policy custom
    priority 2 packet-loss-rate threshold 5.0 percent
    priority 1 one-way-delay threshold 150 msec
    priority 2 byte-loss-rate threshold 5.0 percent
    Number of Traffic classes using this policy: 1

class CRITICAL sequence 30
  path-preference MPLS fallback INET
  class type: Dscp Based
    match dscp af31 policy custom
      priority 2 packet-loss-rate threshold 10.0 percent
      priority 1 one-way-delay threshold 600 msec
      priority 2 byte-loss-rate threshold 10.0 percent
      Number of Traffic classes using this policy: 1

class default
  match dscp all

```

The following table describes the significant fields shown in the command output.

Table 10: show domain master policy Field Descriptions

Field	Description
class	Name of the class type. In this example, the following classes are listed: <ul style="list-style-type: none"> • VOICE • VIDEO • CRITICAL
path-preference	Specifies the path preferred for the class type.
match	Specifies the DSCP value to match for a policy type.
priority	Specifies the detailed policy threshold per class, based on the DSCP or application.

Verifying Branch Border Configurations

Use the following show commands in any order to verify the status of the branch-border router.

SUMMARY STEPS

1. **show domain *domain-name* border status**

2. **show eigrp service-family ipv4 neighbors detail**
3. **show domain *domain-name* master peering**
4. **show domain *domain-name* border pmi**
5. **show flow monitor type performance-monitor**

DETAILED STEPS

Step 1 **show domain *domain-name* border status**

This command displays the status information of the branch-border routers.

Check the following fields in the output to ensure that the branch-border routers are configured accurately:

- Border status is UP
- External interfaces are listed with the right path names
- Minimum requirement is met

Example:

```
BR# show domain one border status
```

```
-----
*** Border Status ***

Instance Status: UP
Present status last updated: 02:11:47 ago
Loopback: Configured Loopback0 UP (10.2.10.10)
Master: 10.2.10.10
Connection Status with Master: UP
MC connection info: CONNECTION SUCCESSFUL
Connected for: 02:11:41
Route-Control: Enabled
Minimum Mask length: 28
Sampling: off
Minimum Requirement: Met
External Wan interfaces:
  Name: Tunnel100 Interface Index: 14 SNMP Index: 9 SP:MPLS Status: UP
  Name: Tunnel200 Interface Index: 15 SNMP Index: 10 SP:INET Status: UP

Auto Tunnel information:

  Name:Tunnel0 if_index: 19
  Borders reachable via this tunnel:
-----
```

The following table describes the significant fields shown in the command output.

Table 11: show domain border status Field Descriptions

Field	Description
Instance Status	Displays the instance status of the device.

Field	Description
Master	Displays the IP address of the local-master controller.
Connection Status with Master	Displays the connection status with master controller. <ul style="list-style-type: none"> • UP - Indicates that the connection is successful and the policy information is communicated from the master controller to the border router.
External Wan Interfaces	Displays the information about external WAN tunnel interfaces connected to the branch-master controller.

Step 2 **show eigrp service-family ipv4 neighbors detail**

This command displays the SAF peering information of the local master controller.

Example:

```
BR# show eigrp service-family ipv4 neighbors detail
```

```
-----
EIGRP-SFv4 VR(#AUTOCFG#) Service-Family Neighbors for AS(59501)
H   Address                Interface                Hold Uptime  SRTT  RTO  Q   Seq
                               (sec)          (ms)          Cnt Num
0   10.8.3.3                Lo0                    497 02:12:18   5   100  0   31
  Remote Static neighbor (static multihop)
  Version 17.0/4.0, Retrans: 0, Retries: 0, Prefixes: 6
  Topology-ids from peer - 0
Max Nbrs: 65535, Current Nbrs: 0
-----
```

The fields shown above are self-explanatory.

Step 3 **show domain *domain-name* master peering**

This command displays the peering information of the branch-master controller.

Check the following fields in the output to ensure that the branch-border routers are configured accurately:

- Peering status
- PMI status
- Site-perfix status
- Globals service status

Example:

```
BR# show domain one master peering
```

```
-----
Peering state: Enabled
Origin:        Loopback0(10.2.10.10)
Peering type:  Listener, Peer(With 10.8.3.3)
-----
```

```

Subscribed service:
  cent-policy (2) :
    Last Notification Info: 00:24:15 ago, Size: 2244, Compressed size: 488, Status:
No Error, Count: 5
  site-prefix (1) :
    Last Notification Info: 00:24:15 ago, Size: 128, Compressed size: 134, Status:
No Error, Count: 35
  service-provider (4) :
  globals (5) :
    Last Notification Info: 00:24:15 ago, Size: 325, Compressed size: 218, Status:
No Error, Count: 19

Published service:
  site-prefix (1) :
    Last Publish Info: 00:49:11 ago, Size: 160, Compressed size: 124, Status: No
Error
  globals (5) :
    Last Publish Info: 10:29:09 ago, Size: 325, Compressed size: 198, Status: No
Error
    
```

The following table describes the significant fields shown in the command output.

Table 12: show domain master peering Field Descriptions

Field	Description
Peering state	Status of peering.
Subscribed services	Displays the subscribed services list.
Published services	Displays the services published by the branch-master controller to the branch-border routers.

Step 4 `show domain domain-name border pmi`

This command displays the performance monitor information applied on the external interfaces.

Check the following fields in the output to ensure that the branch-border router is configured accurately and performance monitors are correctly applied on external interfaces :

- Ingress policy activation
- Egress policy activation
- PMI status

Example:

```

BR# show domain one border pmi

****Pfrv3 PMI INFORMATION****

Ingress policy Pfrv3-Policy-Ingress-0-4:
Ingress policy activated on:
  Tunnel200 Tunnel100

[SNIP]
    
```

```
Egress policy Pfrv3-Policy-Egress-0-3:
Egress policy activated on:
  Tunnel200 Tunnel100
-----
PMI[Egress-aggregate]-FLOW MONITOR[MON-Egress-aggregate-0-48-1]
  Trigger Nbar:No
-----
PMI[Egress-prefix-learn]-FLOW MONITOR[MON-Egress-prefix-learn-0-48-2]
```

The fields shown above are self-explanatory.

Step 5 show flow monitor type performance-monitor

This command displays the flow monitor information for passive-performance monitoring on the egress interface of WAN. The flow monitors are automatically generated.

Check the following fields in the output to ensure that the branch-border router is configured accurately:

- Cache type
- Flow monitor interval time
- Export spreading status

Example:

```
BR# show flow monitor type performance-monitor

Flow Monitor type performance-monitor MON-Egress-aggregate-0-48-9:
  Description :User defined
  Flow Record :CENT-FLOWREC-Egress-aggregate-0-11
  Flow Exporter :CENT_FLOW_EXP-2
  Cache type :synchronized
    entries :4000
    interval :30 (seconds)
  history size :0 (intervals)
    timeout :1 (intervals)
  export spreading:TRUE
  Interface applied :2

Flow Monitor type performance-monitor MON-Egress-prefix-learn-0-48-10:
  Description :User defined
  Flow Record :CENT-FLOWREC-Egress-prefix-learn-0-12
  Flow Exporter :CENT_FLOW_EXP-2
  Cache type :synchronized
    entries :700
    interval :30 (seconds)
  history size :0 (intervals)
    timeout :1 (intervals)
  export spreading:FALSE
  Interface applied :2

Flow Monitor type performance-monitor MON-Ingress-per-DSCP-0-48-11:
  Description :User defined
  Flow Record :CENT-FLOWREC-Ingress-per-DSCP-0-13
  Flow Exporter :not configured
  Cache type :synchronized
    entries :2000
    interval :30 (seconds)
  history size :0 (intervals)
    timeout :1 (intervals)
  export spreading:FALSE
```

Interface applied :2

The fields shown above are self-explanatory.

Monitoring PfRv3

Monitoring Site Prefix

Site prefixes are internal prefixes for each site. The site prefix database resides on both the master controller and the border routers. Site prefixes are learned from monitoring traffic moving in the egress direction on the WAN interface.

- The site prefix database at hub site learns the site prefixes and their origins from both local egress flow and advertisements from remote peers.
- The site prefix database at border router learns the site prefixes and their origins only from remote peer's advertisements.



Note By default, master controller and border routers age out all the site prefixes at a frequency of 24 hours.

SUMMARY STEPS

1. **show domain** *domain-name* **master site-prefix**
2. **show domain** *domain-name* **border site-prefix**
3. **show domain** *domain-name* **border pmi | begin prefix-learn**

DETAILED STEPS

Step 1 **show domain** *domain-name* **master site-prefix**

This command displays the site- prefix status information of the hub master controller.

Example:

```
HubMC# show domain one master site-prefix
```

```
Change will be published between 5-60 seconds
Next Publish 00:54:41 later
Prefix DB Origin: 10.8.3.3
Prefix Flag: S-From SAF; L-Learned; T-Top Level; C-Configured;
```

Site-id	Site-prefix	Last Updated	Flag
10.2.10.10	10.1.10.0/24	00:42:07 ago	S,
10.2.10.10	10.2.10.10/32	00:42:07 ago	S,
10.2.11.11	10.2.11.11/32	00:18:25 ago	S,
10.8.3.3	10.8.3.3/32	1d05h ago	L,
10.8.3.3	10.8.0.0/16	1d05h ago	C,
255.255.255.255	*10.0.0.0/8	1d05h ago	T,

The fields shown above are self-explanatory.

Step 2 `show domain domain-name border site-prefix`

This command displays the site- prefix status information of the hub-border router.

Example:

```
HubBR# show domain one border site-prefix
```

```
Prefix Flag: S-From SAF; L-Learned; T-Top Level; C-Configured;
```

Site-id	Site-prefix	Last Updated	Flag
10.2.10.10	10.1.10.0/24	00:59:12 ago	S,
10.2.11.11	10.1.11.0/24	01:14:42 ago	S,
10.2.10.10	10.2.10.10/32	01:08:04 ago	S,
10.2.11.11	10.2.11.11/32	01:22:01 ago	S,
10.8.3.3	10.8.3.3/32	01:30:22 ago	S,
10.8.3.3	10.8.0.0/16	01:30:22 ago	S,C,
255.255.255.255	*10.0.0.0/8	01:30:22 ago	S,T,

The fields shown above are self-explanatory.

Step 3 `show domain domain-name border pmi | begin prefix-learn`

This command displays the automatically learned site- prefix status information of the hub-border router.

Example:

```
HubBR# show domain one border pmi | begin prefix-learn
```

```
-----
PMI [Egress-prefix-learn]-FLOW MONITOR [MON-Egress-prefix-learn-0-48-29]
monitor-interval:30
minimum-mask-length:28
key-list:
  ipv4 source prefix
  ipv4 source mask
  routing vrf input
Non-key-list:
  counter bytes long
  counter packets long
  timestamp absolute monitoring-interval start
DSCP-list:N/A
Class:CENT-Class-Egress-ANY-0-51

Exporter-list:
  10.2.10.10
-----
```

The fields shown above are self-explanatory.

Monitoring Traffic Classes

PfRv3 manages aggregation of flows called traffic classes. A traffic class is an aggregation of flow going to the same destination prefix, with the same DSCP and application name (if application-based policies are used).

Traffic classes are divided in the following groups:

- Performance traffic classes — This is the traffic class where the performance metrics is defined for the policy type.
- Non-performance traffic classes — This is the default traffic class and does not have any performance metrics associated with it.

The master-hub controller learns the traffic classes by monitoring the traffic moving in egress direction on WAN interface.

SUMMARY STEPS

1. **show domain** *domain-name* **master traffic-classes summary**
2. **show domain** *domain-name* **master traffic-classes**
3. **show domain** *domain-name* **master traffic-classes policy** *policy-name*

DETAILED STEPS

Step 1 **show domain** *domain-name* **master traffic-classes summary**

This command displays the summary information of all the traffic classes.

Example:

```
HubMC# show domain one master traffic-classes summary
```

```
-----
APP - APPLICATION, TC-ID - TRAFFIC-CLASS-ID, APP-ID - APPLICATION-ID
SP - SERVICE PROVIDER, PC = PRIMARY CHANNEL ID,
BC - BACKUP CHANNEL ID, BR - BORDER, EXIT - WAN INTERFACE
UC - UNCONTROLLED, PE - PICK-EXIT, CN - CONTROLLED, UK - UNKNOWN
```

Dst-Site-Pfx	Dst-Site-Id	APP	DSCP	TC-ID	APP-ID	State	SP
PC/BC	BR/EXIT						
10.1.10.0/24	10.2.10.10	N/A	af11	193	N/A	CN	MPLS
59/60	10.8.2.2/Tunnel100						
10.1.10.0/24	10.2.10.10	N/A	cs1	192	N/A	CN	MPLS
57/58	10.8.2.2/Tunnel100						
10.1.10.0/24	10.2.10.10	N/A	cs5	191	N/A	CN	MPLS
55/NA	10.8.2.2/Tunnel100						
10.1.10.0/24	10.2.10.10	N/A	ef	190	N/A	CN	MPLS
52/NA	10.8.2.2/Tunnel100						
10.1.10.0/24	10.2.10.10	N/A	af41	195	N/A	CN	INET
64/63	10.8.1.1/Tunnel200						
10.1.10.0/24	10.2.10.10	N/A	cs4	189	N/A	CN	INET
54/53	10.8.1.1/Tunnel200						
10.1.10.0/24	10.2.10.10	N/A	af31	194	N/A	CN	MPLS
61/62	10.8.2.2/Tunnel100						
Total Traffic Classes: 7 Site: 7 Internet: 0							

The fields shown above are self-explanatory.

Step 2 `show domain domain-name master traffic-classes`

This command displays the status information of the traffic class for the hub-master controller.

Example:

```
HubMC# show domain one master traffic-classes
```

```
-----
Dst-Site-Prefix: 10.1.10.0/24      DSCP: af11 [10] Traffic class id:193
TC Learned:                        00:22:13 ago
Present State:                      CONTROLLED
Current Performance Status: not monitored (default class)
Current Service Provider:  MPLS since 00:12:10
Previous Service Provider:  INET for 298 sec
BW Used:                            9195 Kbps
Present WAN interface:             Tunnel100 in Border 10.8.2.2
Present Channel (primary):         59
Backup Channel:                    60
Destination Site ID:               10.2.10.10
Class-Sequence in use:             default
Class Name:                         default
BW Updated:                        00:00:14 ago
Reason for Route Change:           Load Balance
-----
```

```
-----
Dst-Site-Prefix: 10.1.10.0/24      DSCP: cs1 [8] Traffic class id:192
TC Learned:                        00:22:14 ago
Present State:                      CONTROLLED
Current Performance Status: not monitored (default class)
Current Service Provider:  MPLS since 00:12:40
Previous Service Provider:  INET for 184 sec
BW Used:                            9251 Kbps
Present WAN interface:             Tunnel100 in Border 10.8.2.2
Present Channel (primary):         57
Backup Channel:                    58
Destination Site ID:               10.2.10.10
Class-Sequence in use:             default
Class Name:                         default
BW Updated: 00:00:12                ago
Reason for Route Change:           Load Balance
-----
```

```
.
.
.
```

The fields shown above are self-explanatory.

Step 3 `show domain domain-name master traffic-classes policy policy-name`

This command displays the occurrence of performance issues in a policy traffic class.

Example:

```
HubMC# show domain one master traffic-classes policy VIDEO
```

```
-----
Dst-Site-Prefix: 10.1.10.0/24      DSCP: cs4 [32]      Traffic class id:200
TC Learned:                        00:06:00 ago
Present State:                      CONTROLLED
Current Performance Status: in-policy
-----
```



```

Current Service Provider:  MPLS since 00:00:30 (hold until 59 sec)
Previous Service Provider:  INET for 117 sec
(A fallback provider. Primary provider will be re-evaluated 00:02:30 later)
BW Used:                    309 Kbps
Present WAN interface:      Tunnel100 in Border 10.8.2.2
Present Channel (primary):  76
Backup Channel:            73
Destination Site ID:       10.2.10.10
Class-Sequence in use:     20
Class Name:                VIDEO using policy User-defined
  priority 2 packet-loss-rate threshold 5.0 percent
  priority 1 one-way-delay threshold 150 msec
  priority 2 byte-loss-rate threshold 5.0 percent
BW Updated:                00:00:03 ago
Reason for Route Change:   Delay
.
.
.
-----

```

The fields shown above are self-explanatory.

Cisco IOS XE Platform Commands

To view traffic-classes on Cisco IOS XE platform, use the following show commands in any order:

SUMMARY STEPS

1. **show platform software pfrv3 rp active route-control traffic-class**
2. **show platform software pfrv3 fp active route-control traffic-class**
3. **show platform hardware qfp active feature pfrv3 client route-control traffic-class detail**
4. **show platform software interface rp active name** *interface-name*
5. **show platform software interface fp active name** *interface-name*
6. **show platform hardware qfp active interface if-name** *interface-name*

DETAILED STEPS

	Command or Action	Purpose
Step 1	show platform software pfrv3 rp active route-control traffic-class	This command displays the traffic class information for a platform.
Step 2	show platform software pfrv3 fp active route-control traffic-class	This command displays the traffic class information for a platform.
Step 3	show platform hardware qfp active feature pfrv3 client route-control traffic-class detail	This command displays the hardware information for the configured policy.
Step 4	show platform software interface rp active name <i>interface-name</i>	This command displays the ingress interface information for PfRv3.
Step 5	show platform software interface fp active name <i>interface-name</i>	This command displays the ingress interface information for PfRv3.

	Command or Action	Purpose
Step 6	show platform hardware qfp active interface if-name <i>interface-name</i>	This command displays the interface information in a data plane path for PfRv3.

Monitoring Channels

A channel is a unique combination of destination site-Id, path name, and DSCP value. A channel is created when there is a new DSCP value, or an interface, or a site is added to the network. Performance is measured per channel on remote site and feedback is sent to the source site in case of performance failure.

SUMMARY STEPS

1. **show domain** *domain-name* **master channels dscp ef**
2. **show domain** *domain-name* **master channels link-name** *path-name*
3. **show domain** *domain-name* **border channels**
4. **show domain** *domain-name* **border exporter statistics**
5. **show domain** *domain-name* **border channels parent-route**
6. **show domain** *domain-name* **border parent-route**

DETAILED STEPS

Step 1 **show domain** *domain-name* **master channels dscp ef**

This command displays channel information from the hub site. You can view the information of an active and backup channel using this command.

Example:

```
HubMC# show domain one master channels dscp ef
```

Legend: * (Value obtained from Network delay:)

```
Channel Id: 89   Dst Site-Id: 10.2.10.10 Link Name: MPLS DSCP: ef [46] TCs: 1
Channel Created: 00:01:15 ago
Provisional State: Initiated and open
Operational state: Available
Interface Id: 14
Estimated Channel Egress Bandwidth: 5380 Kbps
Immitigable Events Summary:
Total Performance Count: 0, Total BW Count: 0
TCA Statistics:
  Received 0 ; Processed 0 ; Unreach_rcvd:0
```

The fields shown above are self-explanatory.

Step 2 **show domain** *domain-name* **master channels link-name** *path-name*

This command displays channel status information and the unreachable threshold crossing alerts (TCA) and on demand export (ODE) on a hub-master controller.

Example:

```
HubMC# show domain one master channels link-name INET
```

```
Legend: * (Value obtained from Network delay:)
```

```
Channel Id: 25 Dst Site-Id: 10.2.10.10 Link Name: INET DSCP: default [0] TCs: 0
Channel Created: 13:39:27 ago
Provisional State: Initiated and open
Operational state: Available but unreachable
Interface Id: 13
Estimated Channel Egress Bandwidth: 0 Kbps
Immitigable Events Summary:
  Total Performance Count: 0, Total BW Count: 0
ODE Stats Bucket Number: 1
  Last Updated : 00:00:01 ago
  Packet Count : 0
  Byte Count : 0
  One Way Delay : N/A
  Loss Rate Pkts : N/A
  Loss Rate Bytes: N/A
  Jitter Mean : N/A
  Unreachable : TRUE
ODE Stats Bucket Number: 2
  Last Updated : 00:00:57 ago
  Packet Count : 0
  Byte Count : 0
  One Way Delay : N/A
  Loss Rate Pkts : N/A
  Loss Rate Bytes: N/A
  Jitter Mean : N/A
  Unreachable : TRUE
TCA Statitics:
  Received:4 ; Processed:1 ; Unreach_rcvd:4
Latest TCA Bucket
  Last Updated : 00:00:01 ago
.
.
.
-----
```

The fields shown above are self-explanatory.

Step 3 **show domain *domain-name* border channels**

This command displays channel information from the hub-border site.

Example:

```
HubBR# show domain one border channels
```

```
Border Smart Probe Stats:
-----
```

```
Channel id: 21
Channel dscp: 0
Channel site: 255.255.255.255
Channel interface: Tunnel200
Channel operation state: Initiated_n_open
Channel RX state: reachable
Channel TX state: reachable
Channel next hop: 0.0.0.0
Channel rcv_probes: 0
Channel send_probes: 0
Channel rcv_packets: 0
```

```

Channel send_packets: 0
Channel recv_bytes: 0
Channel send_bytes 0
Last Probe Received: N/A
Last Probe Sent: N/A
.
.
.
-----

```

The fields shown above are self-explanatory.

Step 4 **show domain *domain-name* border exporter statistics**

This command displays the border site exporter statistics information.

Example:

```

HubBR# show domain one border exporter statistics

show on-demand exporter(default vrf)

On-demand exporter
Border: 10.2.10.10
  Process ID: SEND=176, RECV=523

Interface: Tunnel200 (index=15, service provider=INET)
  Bandwidth: Ingress=23464 Kbit/sec, Capacity=50000 Kbit/sec
             Egress =7609 Kbit/sec, Capacity=50000 Kbit/sec

Total sent BW packets:           0
Total sent BW templates:        0, Last sent: not yet sent

Interface: Tunnel100 (index=14, service provider=MPLS)
  Bandwidth: Ingress=30285 Kbit/sec, Capacity=50000 Kbit/sec
             Egress =3757 Kbit/sec, Capacity=50000 Kbit/sec

Total sent BW packets:           0
Total sent BW templates:        0, Last sent: not yet sent

Global Stats:
  Table ID lookup count: 0
  Table ID Channel found count: 0
  Table ID Next hop found count: 0
-----

```

The fields shown above are self-explanatory.

Step 5 **show domain *domain-name* border channels parent-route**

This command displays the parent route information of a border channel.

Note PRv3 determines parent route preference in the following order: NHRP cache (when spoke-to-spoke direct tunnels are established), BGP, EIGRP, static routes, and RIB. A less specific prefix match from a higher preferred protocol will be selected over a more specific prefix from a less preferred protocol source. For example, prefix 10.0.0.0/8 is available through BGP and a more specific path is available through EIGRP. IWAN will not follow the longest prefix match available through EIGRP but will select 10.0.0.0/8 from BGP.

Example:

```

HubBR# show domain one border channels parent route

Channel id: 21, Dscp: defa [0], Site-Id: 255.255.255.255, Path: INET, Interface: Tunnel200
Nexthop: 0.0.0.0
Protocol: None

Channel id: 23, Dscp: defa [0], Site-Id: 10.2.11.11, Path: INET, Interface: Tunnel200
Nexthop: 10.0.200.11
Protocol: BGP

Channel id: 25, Dscp: defa [0], Site-Id: 10.2.10.10, Path: INET, Interface: Tunnel200
Nexthop: 10.0.200.10
Protocol: BGP

Channel id: 88, Dscp: cs4 [20], Site-Id: 10.2.10.10, Path: INET, Interface: Tunnel200
Nexthop: 10.0.200.10
Protocol: BGP

Channel id: 91, Dscp: ef [2E], Site-Id: 10.2.10.10, Path: INET, Interface: Tunnel200
Nexthop: 10.0.200.10
Protocol: BGP

Channel id: 92, Dscp: af11 [A], Site-Id: 10.2.10.10, Path: INET, Interface: Tunnel200
Nexthop: 10.0.200.10
Protocol: BGP
-----

```

The fields shown above are self-explanatory.

Step 6 **show domain *domain-name* border parent-route**

This command displays the parent route information of a channel.

Example:

```

HubBR# show domain one border parent route

Border Parent Route Details:
Prot: BGP, Network: 10.2.10.10/32, Gateway: 10.0.200.10, Interface: Tunnel200, Ref count: 8
Prot: BGP, Network: 10.2.11.11/32, Gateway: 10.0.200.11, Interface: Tunnel200, Ref count: 1
-----


```

The fields shown above are self-explanatory.

Example: Configuring Performance Routing Version 3

Let us consider a use case scenario, where the service provider of a large enterprise network wants to optimize the WAN reliability and bandwidth of its network infrastructure based on applications between the head quarter site and branch sites. The service provider wants the network to intelligently choose a path that meets the performance requirement of its video-based applications over non-critical applications.

Figure 3: PFRv3 Topology

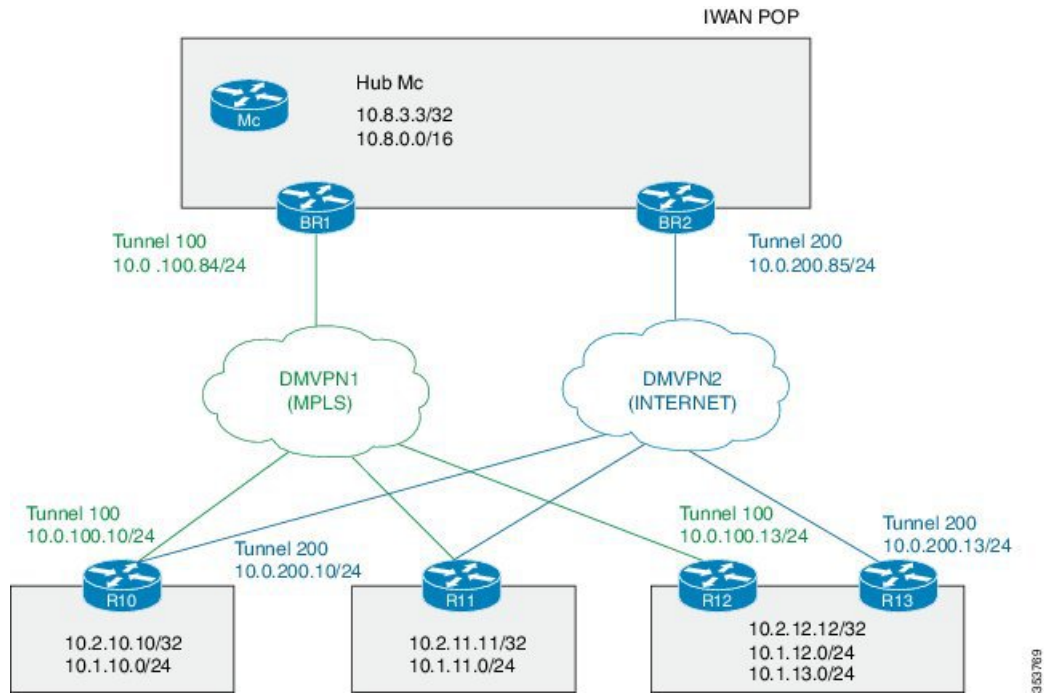

In this example, the following routers are used:

- Hub Master Controller — Cisco ASR 1002-X router configured with bandwidth of 5 Gbps upgradable with software licensing options to 10 Gbps, 20 Gbps, and 36 Gbps and has a quad-core 2.13 GHz processor (with three memory options 4-GB, 8-GB, and 16-GB)
- Hub Border Routers — Cisco ASR 1002 Series Router configured with an Embedded Services Processor 5 (ESP5)
- Branch Routers — Cisco 4451X Integrated Services Router.

Example: Configuring Hub Master Controller

Configure the interfaces on hub master controller

```
HubMC> enable
HubMC# configure terminal
HubMC (config) # interface Loopback0
HubMC (config-if) # ip address 10.8.3.3 255.255.255.255
HubMC (config-if) # exit
```

Configure the device as hub-master controller

```
HubMC (config) # domain one
HubMC (config-domain) # vrf default
HubMC (config-domain-vrf) # master hub
HubMC (config-domain-vrf-mc) # source-interface Loopback0
HubMC (config-domain-vrf-mc) # enterprise-prefix prefix-list ENTERPRISE
HubMC (config-domain-vrf-mc) # site-prefixes prefix-list DATA_CENTER_1
HubMC (config-domain-vrf-mc) # exit
```

Configure IP prefix-lists

```
HubMC(config)# ip prefix-list DATA_CENTER_1 seq 5 permit 10.8.0.0/16 le 24
HubMC(config)# ip prefix-list ENTERPRISE seq 5 permit 10.0.0.0/8 le 24
```

Example: Configuring Domain Policies on Hub Master Controller

```
HubMC(config)# domain one
HubMC(config-domain)# vrf default
HubMC(config-domain-vrf)# master hub
HubMC(config-domain-vrf-mc)# monitor-interval 2 dscp ef
HubMC(config-domain-vrf-mc)# load-balance
HubMC(config-domain-vrf-mc)# class VOICE sequence 10
HubMC(config-domain-vrf-mc-class)# match dscp ef policy voice
HubMC(config-domain-vrf-mc-class)# path-preference MPLS fallback INET
HubMC(config-domain-vrf-mc-class)# exit
HubMC(config-domain-vrf-mc)# class VIDEO sequence 20
HubMC(config-domain-vrf-mc-class)# match dscp af41 policy real-time-video
HubMC(config-domain-vrf-mc-class)# match dscp cs4 policy real-time-video
HubMC(config-domain-vrf-mc-class)# path-preference INET fallback MPLS
HubMC(config-domain-vrf-mc-class)# exit
HubMC(config-domain-vrf-mc)# class CRITICAL sequence 30
HubMC(config-domain-vrf-mc-class)# match dscp af31 policy custom
HubMC(config-domain-vrf-mc-class-type)# priority 2 loss threshold 10
HubMC(config-domain-vrf-mc-class-type)# priority 1 one-way-delay threshold 600
HubMC(config-domain-vrf-mc-class-type)# priority 2 jitter threshold 600
HubMC(config-domain-vrf-mc-class)# exit
HubMC(config-domain-vrf-mc-class)# path-preference MPLS fallback INET
```

Example: Configuring Hub Border Routers

Configure the interfaces on hub border router (BR1)

```
BR1> enable
BR1# configure terminal
BR1(config)# interface Loopback0
BR1(config-if)# ip address 10.8.1.1 255.255.255.255
BR1(config-if)# exit
```

Configure the device as border router (BR1)

```
BR1(config)# domain one
BR1(config-domain)# vrf default
BR1(config-domain-vrf)# border
BR1(config-domain-vrf-br)# source-interface Loopback0
BR1(config-domain-vrf-br)# master 10.8.3.3
BR1(config-domain-vrf-br)# exit
```

Configure tunnel from BR1 to DMVPN1 (MPLS)Link

```
BR1(config)# interface Tunnel100
BR1(config-if)# bandwidth 100000
BR1(config-if)# ip address 10.0.100.84 255.255.255.0
BR1(config-if)# no ip redirects
BR1(config-if)# ip mtu 1400
```

```
BR1(config-if)# ip nhrp authentication cisco
BR1(config-if)# ip nhrp map multicast dynamic
BR1(config-if)# ip nhrp network-id 1
BR1(config-if)# ip nhrp holdtime 600
BR1(config-if)# ip tcp adjust-mss 1360
BR1(config-if)# load-interval 30
BR1(config-if)# tunnel source GigabitEthernet3
BR1(config-if)# tunnel mode gre multipoint
BR1(config-if)# tunnel key 100
BR1(config-if)# tunnel protection ipsec profile DMVPN-PROFILE1
BR1(config-if)# domain one path MPLS
```

Configure the interfaces on hub border router (BR2)

```
BR2> enable
BR2# configure terminal
BR2(config)# interface Loopback0
BR2(config-if)# ip address 10.8.2.2 255.255.255.255
BR2(config-if)# exit
```

Configure the device as border router (BR2)

```
BR2(config)# domain one
BR2(config-domain)# vrf default
BR2(config-domain-vrf)# border
BR2(config-domain-vrf-br)# source-interface Loopback0
BR2(config-domain-vrf-br)# master 10.8.3.3
BR2(config-domain-vrf-br)# exit
```

Configure tunnel from BR2 to DMVPN2 (INTERNET)Link

```
BR2(config)# interface Tunnel200
BR2(config-if)# bandwidth 50000
BR2(config-if)# ip address 10.0.200.85 255.255.255.0
BR2(config-if)# no ip redirects
BR2(config-if)# ip mtu 1400
BR2(config-if)# ip nhrp authentication cisco
BR2(config-if)# ip nhrp map multicast dynamic
BR2(config-if)# ip nhrp network-id 2
BR2(config-if)# ip nhrp holdtime 600
BR2(config-if)# ip tcp adjust-mss 1360
BR2(config-if)# load-interval 30
BR2(config-if)# delay 1000
BR2(config-if)# tunnel source GigabitEthernet3
BR2(config-if)# tunnel mode gre multipoint
BR2(config-if)# tunnel key 200
BR2(config-if)# tunnel protection ipsec profile DMVPN-PROFILE2
BR2(config-if)# domain one path INET
```

Example: Configuring Branch Routers (Single CPE)

Configure the interfaces (R10)

```
R10> enable
R10# configure terminal
R10(config)# interface Loopback0
R10(config-if)# ip address 10.2.10.10 255.255.255.255
R10(config-if)# exit
```

Configure the device as branch master controller (R10)


```

R10(config)# domain one
R10(config-domain)# vrf default
R10(config-domain-vrf)# border
R10(config-domain-vrf-br)# source-interface Loopback0
R10(config-domain-vrf-br)# master local
R10(config-domain-vrf-br)# exit
R10(config-domain-vrf)# master branch
R10(config-domain-vrf-mc)# source-interface Loopback0
R10(config-domain-vrf-mc)# hub 10.8.3.3

```

Configure the tunnel interface and tunnel path from R10

```

R10(config)# interface Tunnel100
R10(config-if)# bandwidth 100000
R10(config-if)# ip address 10.0.100.10 255.255.255.0
R10(config-if)# no ip redirects
R10(config-if)# ip mtu 1400
R10(config-if)# ip nhrp authentication cisco
R10(config-if)# ip nhrp map 10.0.100.84 172.16.84.4
R10(config-if)# ip nhrp map multicast 172.16.84.4
R10(config-if)# ip nhrp network-id 1
R10(config-if)# ip nhrp holdtime 600
R10(config-if)# ip nhrp nhs 10.0.100.84
R10(config-if)# ip nhrp registration timeout 60
R10(config-if)# ip tcp adjust-mss 1360
R10(config-if)# load-interval 30
R10(config-if)# delay 1000
R10(config-if)# tunnel source GigabitEthernet2
R10(config-if)# tunnel mode gre multipoint
R10(config-if)# tunnel key 100
R10(config-if)# tunnel protection ipsec profile DMVPN-PROFILE1

```

Configure another tunnel path from R10

```

R10(config)# interface Tunnel200
R10(config-if)# bandwidth 50000
R10(config-if)# ip address 10.0.200.10 255.255.255.0
R10(config-if)# no ip redirects
R10(config-if)# ip mtu 1400
R10(config-if)# ip nhrp authentication cisco
R10(config-if)# ip nhrp map 10.0.200.85 172.16.85.5
R10(config-if)# ip nhrp multicast 172.16.85.5
R10(config-if)# ip nhrp network-id 2
R10(config-if)# ip nhrp holdtime 600
R10(config-if)# ip nhrp nhs 10.0.200.85
R10(config-if)# ip tcp adjust-mss 1360
R10(config-if)# load-interval 30
R10(config-if)# delay 1000
R10(config-if)# tunnel source GigabitEthernet3
R10(config-if)# tunnel mode gre multipoint
R10(config-if)# tunnel key 200
R10(config-if)# tunnel protection ipsec profile DMVPN-PROFILE2

```

Configure the interfaces (R11)

```

R11> enable
R11# configure terminal
R11(config)# interface Loopback0
R11(config-if)# ip address 10.2.11.11 255.255.255.255
R11(config-if)# exit

```

Configure the device as branch master controller (R11)

```

R11(config)# domain one
R11(config-domain)# vrf default
R11(config-domain-vrf)# border
R11(config-domain-vrf-br)# source-interface Loopback0
R11(config-domain-vrf-br)# master local
R11(config-domain-vrf-br)# exit
R11(config-domain-vrf)# master branch
R11(config-domain-vrf-mc)# source-interface Loopback0
R11(config-domain-vrf-mc)# hub 10.8.3.3

```

Configure the tunnel interface and tunnel path from R11

```

R11(config)# interface Tunnel100
R11(config-if)# bandwidth 100000
R11(config-if)# ip address 10.0.100.11 255.255.255.0
R11(config-if)# no ip redirects
R11(config-if)# ip mtu 1400
R11(config-if)# ip nhrp authentication cisco
R11(config-if)# ip nhrp map 10.0.100.84 172.16.84.4
R11(config-if)# ip nhrp map multicast 172.16.84.4
R11(config-if)# ip nhrp network-id 1
R11(config-if)# ip nhrp holdtime 600
R11(config-if)# ip nhrp nhs 10.0.100.84
R11(config-if)# ip nhrp registration timeout 60
R11(config-if)# ip tcp adjust-mss 1360
R11(config-if)# load-interval 30
R11(config-if)# delay 1000
R11(config-if)# tunnel source GigabitEthernet2
R11(config-if)# tunnel mode gre multipoint
R11(config-if)# tunnel key 100
R11(config-if)# tunnel protection ipsec profile DMVPN-PROFILE1

```

Configure another tunnel path from R11

```

R11(config)# interface Tunnel200
R11(config-if)# bandwidth 50000
R11(config-if)# ip address 10.0.200.11 255.255.255.0
R11(config-if)# no ip redirects
R11(config-if)# ip mtu 1400
R11(config-if)# ip nhrp authentication cisco
R11(config-if)# ip nhrp map 10.0.200.85 172.16.85.5
R11(config-if)# ip nhrp multicast 172.16.85.5
R11(config-if)# ip nhrp network-id 2
R11(config-if)# ip nhrp holdtime 600
R11(config-if)# ip nhrp nhs 10.0.200.85
R11(config-if)# ip tcp adjust-mss 1360
R11(config-if)# load-interval 30
R11(config-if)# delay 1000
R11(config-if)# tunnel source GigabitEthernet3
R11(config-if)# tunnel mode gre multipoint
R11(config-if)# tunnel key 200
R11(config-if)# tunnel vrf INET2
R11(config-if)# tunnel protection ipsec profile DMVPN-PROFILE2

```

Example: Configuring Branch Routers (Dual CPE)**Configure the interfaces (R12)**

```
R12> enable
R12# configure terminal
R12(config)# interface Loopback0
R12(config-if)# ip address 10.2.12.12 255.255.255.255
R12(config-if)# exit
```

Configure the device as branch master controller (R12)

```
R12(config)# domain one
R12(config-domain)# vrf default
R12(config-domain-vrf)# border
R12(config-domain-vrf-br)# source-interface Loopback0
R12(config-domain-vrf-br)# master local
R12(config-domain-vrf-br)# exit
R12(config-domain-vrf)# master branch
R12(config-domain-vrf-mc)# source-interface Loopback0
R12(config-domain-vrf-mc)# hub 10.8.3.3
```

Configure the tunnel interface and tunnel path from R12

```
R12(config)# interface Tunnel100
R12(config-if)# bandwidth 100000
R12(config-if)# ip address 10.0.100.13 255.255.255.0
R12(config-if)# no ip redirects
R12(config-if)# ip mtu 1400
R12(config-if)# ip nhrp authentication cisco
R12(config-if)# ip nhrp map 10.0.100.84 172.16.84.4
R12(config-if)# ip nhrp map multicast 172.16.84.4
R12(config-if)# ip nhrp network-id 1
R12(config-if)# ip nhrp holdtime 600
R12(config-if)# ip nhrp nhs 10.0.100.84
R12(config-if)# ip nhrp registration timeout 60
R12(config-if)# ip tcp adjust-mss 1360
R12(config-if)# load-interval 30
R12(config-if)# delay 1000
R12(config-if)# tunnel source GigabitEthernet3
R12(config-if)# tunnel mode gre multipoint
R12(config-if)# tunnel key 100
R12(config-if)# tunnel protection ipsec profile DMVPN-PROFILE1
```

Configure the interfaces (R13)

```
R13> enable
R13# configure terminal
R13(config)# interface Loopback0
R13(config-if)# ip address 10.2.13.13 255.255.255.255
R13(config-if)# exit
```

Configure the device as a border router with R12 as the master controller (R13)

```
R13(config)# domain one
R13(config-domain)# vrf default
R13(config-domain-vrf)# border
R13(config-domain-vrf-br)# source-interface Loopback0
R13(config-domain-vrf-br)# master 10.2.12.12
```

Configure the tunnel interface and tunnel path from R13

```
R13(config)# interface Tunnel200
R13(config-if)# bandwidth 50000
```

```

R13(config-if)# ip address 10.0.200.13 255.255.255.0
R13(config-if)# no ip redirects
R13(config-if)# ip mtu 1400
R13(config-if)# ip nhrp authentication cisco
R13(config-if)# ip nhrp map 10.0.200.85 172.16.85.5
R13(config-if)# ip nhrp multicast 172.16.85.5
R13(config-if)# ip nhrp network-id 2
R13(config-if)# ip nhrp holdtime 600
R13(config-if)# ip nhrp nhs 10.0.200.85
R13(config-if)# ip tcp adjust-mss 1360
R13(config-if)# load-interval 30
R13(config-if)# delay 1000
R13(config-if)# tunnel source GigabitEthernet6
R13(config-if)# tunnel mode gre multipoint
R13(config-if)# tunnel key 200
R13(config-if)# tunnel vrf INET2
R13(config-if)# tunnel protection ipsec profile DMVPN-PROFILE2

```

Verifying PFRv3 Configuration

To verify the PFRv3 configuration, use the following show commands in any order:

show domain *domain-name* master status

```
HubMC# show domain one master status
```

```

-----
*** Domain MC Status ***

Master VRF: Global

Instance Type: Hub
Instance id: 0
Operational status: Up
Configured status: Up
Loopback IP Address: 10.8.3.3
Load Balancing:
  Admin Status: Enabled
  Operational Status: Up
  Enterprise top level prefixes configured: 1
  Max Calculated Utilization Variance: 1%
  Last load balance attempt: 00:27:23 ago
  Last Reason: Variance less than 20%
  Total unbalanced bandwidth:
    External links: 0 Kbps Internet links: 0 Kbps
Route Control: Enabled
Mitigation mode Aggressive: Disabled
Policy threshold variance: 20
Minimum Mask Length: 28
Sampling: off

Borders:
  IP address: 10.8.2.2
  Connection status: CONNECTED (Last Updated 1d11h ago )
  Interfaces configured:
    Name: Tunnel200 | type: external | Service Provider: INET | Status: UP
    Number of default Channels: 3

Tunnel if: Tunnel0

  IP address: 10.8.1.1
  Connection status: CONNECTED (Last Updated 1d11h ago )
  Interfaces configured:

```

```
Name: Tunnel100 | type: external | Service Provider: MPLS | Status: UP
Number of default Channels: 3
```

```
Tunnel if: Tunnel0
```

show domain *domain-name* master discovered-sites

```
HubMC# show domain one master discovered-sites
```

```
*** Domain MC DISCOVERED sites ***

Number of sites: 3

*Traffic classes [Performance based][Load-balance based]

Site ID: 255.255.255.255
  DSCP :default[0]-Number of traffic classes[0][0]
  DSCP :af31[26]-Number of traffic classes[0][0]
  DSCP :cs4[32]-Number of traffic classes[0][0]
  DSCP :af41[34]-Number of traffic classes[0][0]
  DSCP :cs5[40]-Number of traffic classes[0][0]
  DSCP :ef[46]-Number of traffic classes[0][0]

Site ID: 10.2.10.10
  DSCP :default[0]-Number of traffic classes[1][1]
  DSCP :af31[26]-Number of traffic classes[0][0]
  DSCP :cs4[32]-Number of traffic classes[1][0]
  DSCP :af41[34]-Number of traffic classes[0][0]
  DSCP :cs5[40]-Number of traffic classes[0][0]
  DSCP :ef[46]-Number of traffic classes[1][0]

Site ID: 10.2.11.11
  DSCP :default[0]-Number of traffic classes[0][0]
  DSCP :af31[26]-Number of traffic classes[0][0]
  DSCP :cs4[32]-Number of traffic classes[0][0]
  DSCP :af41[34]-Number of traffic classes[0][0]
  DSCP :cs5[40]-Number of traffic classes[0][0]
  DSCP :ef[46]-Number of traffic classes[0][0]
```

show domain *domain-name* border status

```
HubBR# show domain one border status
```

```
****Border Status****

Instance Status: UP
Present status last updated: 02:07:43 ago
Loopback: Configured Loopback0 UP (10.8.2.2)
Master: 10.8.3.3
Connection Status with Master: UP
MC connection info: CONNECTION SUCCESSFUL
Connected for: 02:07:42
Route-Control: Enabled
Minimum Mask length: 28
Sampling: off
```

```

Minimum Requirement: Met
External Wan interfaces:
  Name: Tunnell100 Interface Index: 14 SNMP Index: 9 SP:MPLS Status: UP

Auto Tunnel information:
  Name:Tunnel0 if_index: 15
  Borders reachable via this tunnel: 10.8.2.2

```

show platform software pfrv3 rp active smart-probe

```
HubBR# show platform software pfrv3 rp active smart-probe
```

```

PFRv3 smart probe parameters :

Total number of PFRv3 smart probe: 1

Parameters :
  vrf id = 0
  Probe src = 10.8.3.3
  Src port = 18000, Dst port = 19000
  Unreach time = 1000, Probe period = 500
  Discovery = false
  Dscp bitmap = 0xffffffffffffffff
  interval = 10000
  Discovery_probe = true
  minimum prefix length = 28

```

show derived-config | section eigrp

```
HubMC# show derived-config | section eigrp
```

```

router eigrp #AUTOCFG# (API-generated auto-configuration, not user configurable)
!
service-family ipv4 autonomous-system 59501
!
sf-interface Loopback0
  hello-interval 120
  hold-time 600
exit-sf-interface
!
topology base
exit-sf-topology
remote-neighbors source Loopback0 unicast-listen
exit-service-family

```

show domain domain-name master policy

```
HubMC# show domain one master policy
```

```

No Policy publish pending

class VOICE sequence 10
  path-preference MPLS fallback INET

```

```

class type: Dscp Based
  match dscp ef policy custom
    priority 2 packet-loss-rate threshold 5.0 percent
    priority 1 one-way-delay threshold 150 msec
    priority 2 byte-loss-rate threshold 5.0 percent
    Number of Traffic classes using this policy: 1

class VIDEO sequence 20
  path-preference INET fallback MPLS
  class type: Dscp Based
  match dscp af41 policy custom
    priority 2 packet-loss-rate threshold 5.0 percent
    priority 1 one-way-delay threshold 150 msec
    priority 2 byte-loss-rate threshold 5.0 percent
    Number of Traffic classes using this policy: 1
  match dscp cs4 policy custom
    priority 2 packet-loss-rate threshold 5.0 percent
    priority 1 one-way-delay threshold 150 msec
    priority 2 byte-loss-rate threshold 5.0 percent
    Number of Traffic classes using this policy: 1

class CRITICAL sequence 30
  path-preference MPLS fallback INET
  class type: Dscp Based
  match dscp af31 policy custom
    priority 2 packet-loss-rate threshold 10.0 percent
    priority 1 one-way-delay threshold 600 msec
    priority 2 byte-loss-rate threshold 10.0 percent
    Number of Traffic classes using this policy: 1

class default
  match dscp all
  Number of Traffic classes using this policy: 3

```

show domain *domain-name* border pmi

BR# **show domain one border pmi**

****Pfrv3 PMI INFORMATION****

Ingress policy Pfrv3-Policy-Ingress-0-4:

Ingress policy activated on:

Tunnel200 Tunnel100

[SNIP]

Egress policy Pfrv3-Policy-Egress-0-3:

Egress policy activated on:

Tunnel200 Tunnel100

PMI[Egress-aggregate]-FLOW MONITOR[MON-Egress-aggregate-0-48-1]

Trigger Nbar:No

PMI[Egress-prefix-learn]-FLOW MONITOR[MON-Egress-prefix-learn-0-48-2]

With application based policy:

show ip access-lists dynamic

BR# **show ip access-lists dynamic**

Extended IP access list mma-dvmc-acl#3

10 deny ip any 224.0.0.0 15.255.255.255

20 deny ip any any dscp cs6

```

30 permit tcp any any
40 permit udp any neq 18000 any neq 19000
50 permit icmp any any

```

show domain *domain-name* master site-prefix

```
HubMC# show domain one master site-prefix
```

```

Change will be published between 5-60 seconds
Next Publish 00:54:41 later
Prefix DB Origin: 10.8.3.3
Prefix Flag: S-From SAF; L-Learned; T-Top Level; C-Configured;

```

Site-id	Site-prefix	Last Updated	Flag
10.2.10.10	10.1.10.0/24	00:42:07 ago	S,
10.2.10.10	10.2.10.10/32	00:42:07 ago	S,
10.2.11.11	10.2.11.11/32	00:18:25 ago	S,
10.8.3.3	10.8.3.3/32	1d05h ago	L,
10.8.3.3	10.8.0.0/16	1d05h ago	C,
255.255.255.255	*10.0.0.0/8	1d05h ago	T,

show domain *domain-name* border site-prefix

```
HubBR# show domain one border site-prefix
```

```
Prefix Flag: S-From SAF; L-Learned; T-Top Level; C-Configured;
```

Site-id	Site-prefix	Last Updated	Flag
10.2.10.10	10.1.10.0/24	00:59:12 ago	S,
10.2.11.11	10.1.11.0/24	01:14:42 ago	S,
10.2.10.10	10.2.10.10/32	01:08:04 ago	S,
10.2.11.11	10.2.11.11/32	01:22:01 ago	S,
10.8.3.3	10.8.3.3/32	01:30:22 ago	S,
10.8.3.3	10.8.0.0/16	01:30:22 ago	S,C,
255.255.255.255	*10.0.0.0/8	01:30:22 ago	S,T,

show domain *domain-name* master traffic-classes summary

```
HubMC# show domain one master traffic-classes summary
```

```

-----
APP - APPLICATION, TC-ID - TRAFFIC-CLASS-ID, APP-ID - APPLICATION-ID
SP - SERVICE PROVIDER, PC = PRIMARY CHANNEL ID,
BC - BACKUP CHANNEL ID, BR - BORDER, EXIT - WAN INTERFACE
UC - UNCONTROLLED, PE - PICK-EXIT, CN - CONTROLLED, UK - UNKNOWN

```

Dst-Site-Pfx	Dst-Site-Id	APP	DSCP	TC-ID	APP-ID	State	SP
PC/BC	BR/EXIT						
10.1.10.0/24	10.2.10.10	N/A	af11	193	N/A	CN	MPLS
59/60	10.8.2.2/Tunnel100						
10.1.10.0/24	10.2.10.10	N/A	cs1	192	N/A	CN	MPLS
57/58	10.8.2.2/Tunnel100						
10.1.10.0/24	10.2.10.10	N/A	cs5	191	N/A	CN	MPLS
55/NA	10.8.2.2/Tunnel100						
10.1.10.0/24	10.2.10.10	N/A	ef	190	N/A	CN	MPLS
52/NA	10.8.2.2/Tunnel100						
10.1.10.0/24	10.2.10.10	N/A	af41	195	N/A	CN	INET
64/63	10.8.1.1/Tunnel200						
10.1.10.0/24	10.2.10.10	N/A	cs4	189	N/A	CN	INET
54/53	10.8.1.1/Tunnel200						
10.1.10.0/24	10.2.10.10	N/A	af31	194	N/A	CN	MPLS
61/62	10.8.2.2/Tunnel100						


```
Total Traffic Classes: 7 Site: 7 Internet: 0
```

show domain *domain-name* master traffic-classes policy

```
HubMC# show domain one master traffic-classes policy VIDEO
```

```
Dst-Site-Prefix: 10.1.10.0/24   DSCP: cs4 [32]   Traffic class id:200
  TC Learned:                00:06:00 ago
  Present State:              CONTROLLED
  Current Performance Status: in-policy
  Current Service Provider:   MPLS since 00:00:30 (hold until 59 sec)
  Previous Service Provider:  INET for 117 sec
  (A fallback provider. Primary provider will be re-evaluated 00:02:30 later)
  BW Used:                    309 Kbps
  Present WAN interface:      Tunnel100 in Border 10.8.2.2
  Present Channel (primary):  76
  Backup Channel:            73
  Destination Site ID:       10.2.10.10
  Class-Sequence in use:     20
  Class Name:                 VIDEO using policy User-defined
    priority 2 packet-loss-rate threshold 5.0 percent
    priority 1 one-way-delay threshold 150 msec
    priority 2 byte-loss-rate threshold 5.0 percent
  BW Updated: 00:00:03 ago
  Reason for Route Change: Delay
```

```
.
.
.
```

show running-config

```
HubMC# show running-config
```

```
Building configuration...
Current configuration : 5137 bytes
!
! Last configuration change at 02:37:06 CST Mon Nov 3 2014
! NVRAM config last updated at 02:35:51 CST Mon Nov 3 2014
!
version 15.4
service timestamps debug datetime msec localtime show-timezone
service timestamps log datetime msec localtime show-timezone
service internal
no platform punt-keepalive disable-kernel-core
platform console serial
!
hostname HubMC
!
boot-start-marker
boot-end-marker
!
!
vrf definition Mgmt-intf
!
address-family ipv4
exit-address-family
!
no logging console
!
no aaa new-model
```



```
!  
interface Loopback0  
ip address 10.8.3.3 255.255.255.255  
!  
interface GigabitEthernet1  
vrf forwarding Mgmt-intf  
ip address 10.124.19.208 255.255.255.0  
negotiation auto  
!  
interface GigabitEthernet2  
no ip address  
load-interval 30  
speed 1000  
no negotiation auto  
!  
interface GigabitEthernet2.100  
encapsulation dot1Q 100  
ip address 10.8.101.1 255.255.255.0  
!  
interface GigabitEthernet2.101  
encapsulation dot1Q 101  
ip address 10.8.102.1 255.255.255.0  
!  
interface GigabitEthernet2.102  
encapsulation dot1Q 102  
ip address 10.8.103.1 255.255.255.0  
!  
interface GigabitEthernet2.103  
encapsulation dot1Q 103  
ip address 10.8.104.1 255.255.255.0  
!  
interface GigabitEthernet3  
description --INTERNAL--  
ip address 10.8.24.2 255.255.255.0  
speed 1000  
no negotiation auto  
!  
interface GigabitEthernet4  
description --INTERNAL--  
ip address 10.8.25.2 255.255.255.0  
speed 1000  
no negotiation auto  
!  
!  
router eigrp 100  
network 10.8.3.3 0.0.0.0  
network 10.8.24.0 0.0.0.255  
network 10.8.25.0 0.0.0.255  
redistribute connected  
!  
!  
virtual-service csr_mgmt  
!  
ip forward-protocol nd  
!  
no ip http server  
no ip http secure-server  
ip route vrf Mgmt-intf 0.0.0.0 0.0.0.0 10.124.19.1  
!  
!  
ip prefix-list DC1_PREFIX seq 10 permit 10.8.0.0/16  
!  
ip prefix-list ENTERPRISE_PREFIX seq 10 permit 10.0.0.0/8  
no service-routing capabilities-manager
```

```

!
!
!
control-plane
!
!
line con 0
exec-timeout 0 0
stopbits 1
line vty 0 4
exec-timeout 0 0
privilege level 15
no login
line vty 5 15
exec-timeout 0 0
privilege level 15
no login
!
ntp logging
ntp source Loopback0
ntp master 3
!
end

```

show running-config

```
HubBR1# show running-config
```

```

Building configuration...
Current configuration : 5312 bytes
!
! Last configuration change at 02:31:02 CST Mon Nov 3 2014
! NVRAM config last updated at 02:31:02 CST Mon Nov 3 2014
!
version 15.4
service timestamps debug datetime msec localtime show-timezone
service timestamps log datetime msec localtime show-timezone
service internal
no platform punt-keepalive disable-kernel-core
platform console serial
!
hostname HubBR1
!
boot-start-marker
boot-end-marker
!
!
vrf definition INET1
rd 65512:1
!
address-family ipv4
exit-address-family
!
vrf definition Mgmt-intf
!
address-family ipv4
exit-address-family
!
no logging console
!
no aaa new-model
clock timezone CST 8 0

```

```

!
!
!
!
no ip domain lookup
!
!
!
!
!
subscriber templating
!
multilink bundle-name authenticated
!
domain one
vrf default
border
source-interface Loopback0
master 10.8.3.3
!
!
license udi pid CSR1000V sn 952V3LWQECD
license boot level ax
spanning-tree extend system-id
!
!
redundancy
mode none
!
!
!
!
!
!
ip ftp source-interface GigabitEthernet1
ip ftp username mgcusr
ip ftp password mgcusr
ip tftp source-interface GigabitEthernet1
!
crypto keyring DMVPN-KEYRING1
pre-shared-key address 0.0.0.0 0.0.0.0 key cisco123
!
!
!
!
!
crypto isakmp policy 10
encr aes
authentication pre-share
crypto isakmp performance
crypto isakmp profile ISAKMP-INET1
keyring DMVPN-KEYRING1
match identity address 0.0.0.0
!
crypto ipsec security-association replay disable
crypto ipsec security-association replay window-size 1024
!
crypto ipsec transform-set AES256/SHA/TRANSPORT esp-aes 256 esp-sha-hmac
mode transport
!
crypto ipsec profile DMVPN-PROFILE1
set transform-set AES256/SHA/TRANSPORT
set isakmp-profile ISAKMP-INET1
!

```

```

!
!
!
!
!
!
!
!
interface Loopback0
ip address 10.8.1.1 255.255.255.255
!
interface Tunnel100
bandwidth 100000
ip address 10.0.100.84 255.255.255.0
no ip redirects
ip mtu 1400
ip nhrp authentication cisco
ip nhrp map multicast dynamic
ip nhrp network-id 1
ip nhrp holdtime 600
ip nhrp redirect
ip tcp adjust-mss 1360
load-interval 30
tunnel source GigabitEthernet3
tunnel mode gre multipoint
tunnel key 100
tunnel protection ipsec profile DMVPN-PROFILE1
domain one path MPLS
!
interface GigabitEthernet1
vrf forwarding Mgmt-intf
ip address 10.124.19.210 255.255.255.0
negotiation auto
!
interface GigabitEthernet2
description --INTERNAL--
ip address 10.8.24.4 255.255.255.0
speed 1000
no negotiation auto
!
interface GigabitEthernet3
description --MPLS--
ip address 172.16.84.4 255.255.255.0
load-interval 30
speed 1000
no negotiation auto
!
interface GigabitEthernet4
no ip address
load-interval 30
speed 1000
no negotiation auto
!
interface GigabitEthernet5
ip address 101.1.4.1 255.255.255.0
speed 1000
no negotiation auto
!
interface GigabitEthernet6
no ip address
speed 1000
no negotiation auto
!
!

```

```
router eigrp 100
network 10.8.2.2 0.0.0.0
network 10.8.24.0 0.0.0.255
redistribute bgp 10 metric 100000 1 255 255 1500
distance eigrp 90 210
!
router ospf 100
router-id 10.8.1.1
network 172.16.84.4 0.0.0.0 area 0
!
router bgp 10
bgp router-id 10.8.1.1
bgp log-neighbor-changes
bgp listen range 10.0.100.0/24 peer-group MPLS-SPOKES
neighbor MPLS-SPOKES peer-group
neighbor MPLS-SPOKES remote-as 10
neighbor MPLS-SPOKES timers 20 60
!
address-family ipv4
bgp redistribute-internal
network 10.8.1.1 mask 255.255.255.255
network 10.8.3.3 mask 255.255.255.255
network 10.8.101.0 mask 255.255.255.0
network 10.8.102.0 mask 255.255.255.0
network 10.8.103.0 mask 255.255.255.0
network 10.8.104.0 mask 255.255.255.0
aggregate-address 10.8.0.0 255.255.0.0 summary-only
neighbor MPLS-SPOKES activate
neighbor MPLS-SPOKES send-community
neighbor MPLS-SPOKES default-originate
neighbor MPLS-SPOKES route-map MPLS-DC1-IN in
neighbor MPLS-SPOKES route-map MPLS-DC1-OUT out
distance bgp 20 109 109
exit-address-family
!
!
virtual-service csr_mgmt
!
ip forward-protocol nd
!
ip bgp-community new-format
ip community-list standard MPLS-DMVPN permit 10:100
ip community-list standard INET-DMVPN permit 10:200
no ip http server
no ip http secure-server
ip route vrf Mgmt-intf 0.0.0.0 0.0.0.0 10.124.19.1
!
!
ip prefix-list DC1-LOCAL-ROUTES seq 10 permit 0.0.0.0/0
ip prefix-list DC1-LOCAL-ROUTES seq 20 permit 10.8.0.0/16 le 32
no service-routing capabilities-manager
!
route-map MPLS-DC1-IN deny 10
match ip address prefix-list DC1-LOCAL-ROUTES
!
route-map MPLS-DC1-IN permit 20
set community 10:100
!
route-map TO-PEER permit 10
match ip address prefix-list DC1-LOCAL-ROUTES
set ip next-hop self
set community no-advertise
!
route-map site_prefixes permit 10
```

```

match ip address prefix-list site_prefixes
!
route-map MPLS-DC1-OUT permit 10
match ip address prefix-list DC1-LOCAL-ROUTES
set community 10:100
!
route-map MPLS-DC1-OUT permit 20
description readvertise routes learned from MPLS DMVPN cloud
match community MPLS-DMVPN
!
!
!
control-plane
!
!
line con 0
exec-timeout 0 0
stopbits 1
line vty 0 4
exec-timeout 0 0
privilege level 15
no login
line vty 5 15
exec-timeout 0 0
privilege level 15
no login
!
ntp source Loopback0
ntp server 10.8.3.3
!
end

```

show running-config

```
HubBR2# show running-config
```

```

Current configuration : 5254 bytes
!
! Last configuration change at 02:30:54 CST Mon Nov 3 2014
! NVRAM config last updated at 02:25:26 CST Mon Nov 3 2014
!
version 15.4
service timestamps debug datetime msec localtime show-timezone
service timestamps log datetime msec localtime show-timezone
service internal
no platform punt-keepalive disable-kernel-core
platform console serial
!
hostname HubBR2
!
boot-start-marker
boot-end-marker
!
!
vrf definition INET2
rd 65512:2
!
address-family ipv4
exit-address-family
!
vrf definition Mgmt-intf
!
address-family ipv4

```



```
exit-address-family
!
no logging console
!
no aaa new-model
clock timezone CST 8 0
!
!
!
!
!
!
no ip domain lookup
!
!
!
subscriber templating
!
multilink bundle-name authenticated
!
domain one
vrf default
border
source-interface Loopback0
master 10.8.3.3
!
!
license udi pid CSR1000V sn 94EFH1HPLI9
license boot level ax
spanning-tree extend system-id
!
!
redundancy
99
mode none
!
!
!
!
!
!
ip ftp source-interface GigabitEthernet1
ip ftp username mgcusr
ip ftp password mgcusr
ip tftp source-interface GigabitEthernet1
!
crypto keyring DMVPN-KEYRING2 vrf INET2
pre-shared-key address 0.0.0.0 0.0.0.0 key cisco123
!
!
!
!
!
crypto isakmp policy 10
encr aes
authentication pre-share
crypto isakmp invalid-spi-recovery
crypto isakmp performance
crypto isakmp profile ISAKMP-INET2
keyring DMVPN-KEYRING2
match identity address 0.0.0.0 INET2
!
```

```

crypto ipsec security-association replay disable
crypto ipsec security-association replay window-size 1024
!
crypto ipsec transform-set AES256/SHA/TRANSPORT esp-aes 256 esp-sha-hmac
mode transport
!
crypto ipsec profile DMVPN-PROFILE2
set transform-set AES256/SHA/TRANSPORT
set isakmp-profile ISAKMP-INET2
!
!
!
!
!
!
!
!
!
interface Loopback0
ip address 10.8.2.2 255.255.255.255
!
interface Tunnel200
bandwidth 50000
ip address 10.0.200.85 255.255.255.0
no ip redirects
ip mtu 1400
ip nhrp authentication cisco
ip nhrp map multicast dynamic
ip nhrp network-id 2
ip nhrp holdtime 600
ip nhrp redirect
ip tcp adjust-mss 1360
load-interval 30
delay 1000
tunnel source GigabitEthernet4
tunnel mode gre multipoint
tunnel key 200
100
tunnel vrf INET2
tunnel protection ipsec profile DMVPN-PROFILE2
domain one path INET
!
interface GigabitEthernet1
vrf forwarding Mgmt-intf
ip address 10.124.19.209 255.255.255.0
negotiation auto
!
interface GigabitEthernet2
description --INTERNAL--
ip address 10.8.25.5 255.255.255.0
speed 1000
no negotiation auto
!
interface GigabitEthernet3
ip address 101.1.4.2 255.255.255.0
speed 1000
no negotiation auto
!
interface GigabitEthernet4
description --INET--
vrf forwarding INET2
ip address 172.16.85.5 255.255.255.0
load-interval 30
speed 1000

```

```

no negotiation auto
!
!
router eigrp 100
network 10.8.1.1 0.0.0.0
network 10.8.25.0 0.0.0.255
redistribute bgp 10 metric 100000 1 255 255 1500
distance eigrp 90 210
!
router ospf 100 vrf INET2
router-id 10.8.2.2
network 172.16.85.5 0.0.0.0 area 0
!
router bgp 10
bgp router-id 10.8.2.2
bgp log-neighbor-changes
bgp listen range 10.0.200.0/24 peer-group INET-SPOKES
neighbor INET-SPOKES peer-group
neighbor INET-SPOKES remote-as 10
neighbor INET-SPOKES timers 20 60
!
address-family ipv4
bgp redistribute-internal
network 10.8.2.2 mask 255.255.255.255
network 10.8.3.3 mask 255.255.255.255
network 10.8.101.0 mask 255.255.255.0
network 10.8.102.0 mask 255.255.255.0
network 10.8.103.0 mask 255.255.255.0
network 10.8.104.0 mask 255.255.255.0
aggregate-address 10.8.0.0 255.255.0.0 summary-only
neighbor INET-SPOKES activate
neighbor INET-SPOKES send-community
neighbor INET-SPOKES default-originate
neighbor INET-SPOKES route-map INET-DC1-IN in
neighbor INET-SPOKES route-map INET-DC1-OUT out
distance bgp 20 109 109
exit-address-family
!
!
101
virtual-service csr_mgmt
!
ip forward-protocol nd
!
ip bgp-community new-format
ip community-list standard MPLS-DMVPN permit 10:100
ip community-list standard INET-DMVPN permit 10:200
no ip http server
no ip http secure-server
ip route vrf Mgmt-intf 0.0.0.0 0.0.0.0 10.124.19.1
!
!
ip prefix-list DC1-LOCAL-ROUTES seq 10 permit 0.0.0.0/0
ip prefix-list DC1-LOCAL-ROUTES seq 20 permit 10.8.0.0/16 le 32
no service-routing capabilities-manager
!
route-map INET-DC1-IN deny 10
match ip address prefix-list DC1-LOCAL-ROUTES
!
route-map INET-DC1-IN permit 20
set community 10:200
!
route-map TO-PEER permit 10
match ip address prefix-list DC1-LOCAL-ROUTES

```

```

set ip next-hop self
set community no-advertise
!
route-map site_prefixes permit 10
match ip address prefix-list site_prefixes
!
route-map INET-DC1-OUT permit 10
match ip address prefix-list DC1-LOCAL-ROUTES
set community 10:200
!
route-map INET-DC1-OUT permit 20
description readvertise routes learned from INTERNET DMVPN cloud
match community INET-DMVPN
!
!
!
control-plane
!
!
line con 0
exec-timeout 0 0
stopbits 1
line vty 0 4
exec-timeout 0 0
privilege level 15
no login
line vty 5 15
exec-timeout 0 0
privilege level 15
no login
!
ntp source Loopback0
ntp server 10.8.3.3
!
end

```

show running-config

```
BR10# show running-config
```

```

Building configuration...
Current configuration : 8517 bytes
!
! Last configuration change at 02:29:54 CST Mon Nov 3 2014
!
version 15.4
service timestamps debug datetime msec localtime show-timezone
service timestamps log datetime msec localtime show-timezone
service internal
no platform punt-keepalive disable-kernel-core
platform shell
platform console serial
!
hostname Branch10
!
boot-start-marker
boot-end-marker
!
!
vrf definition INET2
rd 65512:2
!
address-family ipv4

```



```

ip ftp username mgcusr
ip ftp password mgcusr
ip tftp source-interface GigabitEthernet1
!
!
crypto keyring DMVPN-KEYRING1
pre-shared-key address 0.0.0.0 0.0.0.0 key cisco123
crypto keyring DMVPN-KEYRING2 vrf INET2
pre-shared-key address 0.0.0.0 0.0.0.0 key cisco123
!
!
!
!
!
crypto isakmp policy 10
encr aes
authentication pre-share
crypto isakmp invalid-spi-recovery
crypto isakmp keepalive 40 5
crypto isakmp profile ISAKMP-INET1
keyring DMVPN-KEYRING1
match identity address 0.0.0.0
crypto isakmp profile ISAKMP-INET2
keyring DMVPN-KEYRING2
match identity address 0.0.0.0 INET2
!
crypto ipsec security-association idle-time 60
crypto ipsec security-association replay window-size 512
!
crypto ipsec transform-set AES256/SHA/TRANSPORT esp-aes 256 esp-sha-hmac
mode transport
!
crypto ipsec profile DMVPN-PROFILE1
set transform-set AES256/SHA/TRANSPORT
set isakmp-profile ISAKMP-INET1
!
crypto ipsec profile DMVPN-PROFILE2
set transform-set AES256/SHA/TRANSPORT
set isakmp-profile ISAKMP-INET2
!
!
!
!
!
!
!
!
!
interface Loopback0
ip address 10.2.10.10 255.255.255.255
!
interface Tunnel100
bandwidth 100000
ip address 10.0.100.10 255.255.255.0
no ip redirects
ip mtu 1400
ip nhrp authentication cisco
ip nhrp map 10.0.100.84 172.16.84.4
ip nhrp map multicast 172.16.84.4
ip nhrp network-id 1
ip nhrp holdtime 600
ip nhrp nhs 10.0.100.84
ip nhrp registration timeout 60
ip nhrp shortcut

```

```
ip tcp adjust-mss 1360
load-interval 30
delay 1000
tunnel source GigabitEthernet2
tunnel mode gre multipoint
tunnel key 100
tunnel protection ipsec profile DMVPN-PROFILE1
!
interface Tunnel200
bandwidth 50000
ip address 10.0.200.10 255.255.255.0
no ip redirects
ip mtu 1400
ip nhrp authentication cisco
ip nhrp map 10.0.200.85 172.16.85.5
ip nhrp map multicast 172.16.85.5
ip nhrp network-id 2
ip nhrp holdtime 600
ip nhrp nhs 10.0.200.85
ip nhrp registration timeout 60
ip nhrp shortcut
ip tcp adjust-mss 1360
load-interval 30
delay 1000
tunnel source GigabitEthernet3
tunnel mode gre multipoint
tunnel key 200
tunnel vrf INET2
tunnel protection ipsec profile DMVPN-PROFILE2
!
interface GigabitEthernet1
vrf forwarding Mgmt-intf
ip address 10.124.19.212 255.255.255.0
negotiation auto
!
interface GigabitEthernet2
description --MPLS--
ip address 172.16.101.10 255.255.255.0
speed 1000
no negotiation auto
!
interface GigabitEthernet3
description --INET--
vrf forwarding INET2
ip address 172.16.102.10 255.255.255.0
load-interval 30
speed 1000
no negotiation auto
!
interface GigabitEthernet4
no ip address
speed 1000
no negotiation auto
!
interface GigabitEthernet5
no ip address
speed 1000
no negotiation auto
!
interface GigabitEthernet5.100
encapsulation dot1Q 100
ip address 10.1.10.1 255.255.255.0
!
router ospf 200 vrf INET2
```

```

network 172.16.102.10 0.0.0.0 area 0
!
router ospf 100
router-id 10.2.10.10
network 101.7.7.2 0.0.0.0 area 0
network 172.16.101.10 0.0.0.0 area 0
!
router bgp 10
bgp router-id 10.2.10.10
bgp log-neighbor-changes
neighbor MPLS-HUB peer-group
neighbor MPLS-HUB remote-as 10
neighbor MPLS-HUB timers 20 60
neighbor INET-HUB peer-group
neighbor INET-HUB remote-as 10
neighbor INET-HUB timers 20 60
neighbor 10.0.100.84 peer-group MPLS-HUB
neighbor 10.0.200.85 peer-group INET-HUB
!
address-family ipv4
network 10.1.10.0 mask 255.255.255.0
network 10.2.10.10 mask 255.255.255.255
neighbor MPLS-HUB send-community
neighbor MPLS-HUB route-map MPLS-SPOKE-IN in
neighbor MPLS-HUB route-map MPLS-SPOKE-OUT out
neighbor INET-HUB send-community
neighbor INET-HUB route-map INET-SPOKE-IN in
neighbor INET-HUB route-map INET-SPOKE-OUT out
neighbor 10.0.100.84 activate
neighbor 10.0.100.84 soft-reconfiguration inbound
neighbor 10.0.200.85 activate
neighbor 10.0.200.85 soft-reconfiguration inbound
exit-address-family
!
!
virtual-service csr_mgmt
!
ip forward-protocol nd
!
ip bgp-community new-format
ip community-list standard MPLS-HUB1 permit 10:100
ip community-list standard MPLS-HUB2 permit 10:101
ip community-list standard INET-HUB1 permit 10:200
ip community-list standard INET-HUB2 permit 10:201
no ip http server
no ip http secure-server
ip route vrf Mgmt-intf 0.0.0.0 0.0.0.0 10.124.19.1
!
ip access-list extended RC
permit tcp host 10.1.10.2 any
ip access-list extended SMP
permit udp any eq 18000 any eq 19000
!
!
ip prefix-list INET-DMVPN seq 5 permit 0.0.0.0/0
ip prefix-list INET-DMVPN seq 10 permit 10.8.0.0/16
!
ip prefix-list MPLS-DMVPN seq 5 permit 0.0.0.0/0
ip prefix-list MPLS-DMVPN seq 10 permit 10.8.0.0/16
no service-routing capabilities-manager
!
route-map MPLS-SPOKE-OUT deny 10
match ip address prefix-list INET-DMVPN
!

```



```

route-map MPLS-SPOKE-OUT permit 20
!
route-map INET-SPOKE-OUT deny 10
match ip address prefix-list MPLS-DMVPN
!
route-map INET-SPOKE-OUT permit 20
!
route-map MPLS-SPOKE-IN permit 5
match ip address prefix-list MPLS-DMVPN
set local-preference 201
!
route-map MPLS-SPOKE-IN permit 10
match community MPLS-HUB1
set local-preference 201
!
route-map MPLS-SPOKE-IN permit 20
match community MPLS-HUB2
set local-preference 200
!
route-map INET-SPOKE-IN permit 5
match ip address prefix-list MPLS-DMVPN
set local-preference 151
!
route-map INET-SPOKE-IN permit 30
match community INET-HUB1
set local-preference 151
!
route-map INET-SPOKE-IN permit 40
match community INET-HUB2
set local-preference 150
!
!
!
control-plane
!
!
line con 0
exec-timeout 0 0
stopbits 1
line vty 0 4
exec-timeout 0 0
privilege level 15
no login
line vty 5 15
exec-timeout 0 0
privilege level 15
no login
!
ntp source Loopback0
ntp server 10.8.3.3
!
end

```

show running-config

```
BR11# show running-config
```

```

-----
Building configuration...
Current configuration : 6929 bytes
!
! Last configuration change at 02:30:33 CST Mon Nov 3 2014
! NVRAM config last updated at 02:30:34 CST Mon Nov 3 2014
!

```



```
master branch
source-interface Loopback0
hub 10.8.3.3
!
!
license udi pid CSR1000V sn 9YRYPG7XWOA
license boot level ax
spanning-tree extend system-id
!
!
redundancy
mode none
!
!
!
!
!
!
ip ftp source-interface GigabitEthernet1
ip ftp username mgcusr
ip ftp password mgcusr
ip tftp source-interface GigabitEthernet1
!
crypto keyring DMVPN-KEYRING1
pre-shared-key address 0.0.0.0 0.0.0.0 key cisco123
crypto keyring DMVPN-KEYRING2 vrf INET2
pre-shared-key address 0.0.0.0 0.0.0.0 key cisco123
!
!
!
!
!
crypto isakmp policy 10
encr aes
authentication pre-share
crypto isakmp invalid-spi-recovery
crypto isakmp keepalive 40 5
crypto isakmp profile ISAKMP-INET1
keyring DMVPN-KEYRING1
match identity address 0.0.0.0
crypto isakmp profile ISAKMP-INET2
keyring DMVPN-KEYRING2
match identity address 0.0.0.0 INET2
!
crypto ipsec security-association idle-time 60
crypto ipsec security-association replay window-size 512
!
crypto ipsec transform-set AES256/SHA/TRANSPORT esp-aes 256 esp-sha-hmac
mode transport
!
crypto ipsec profile DMVPN-PROFILE1
set transform-set AES256/SHA/TRANSPORT
set isakmp-profile ISAKMP-INET1
!
crypto ipsec profile DMVPN-PROFILE2
set transform-set AES256/SHA/TRANSPORT
set isakmp-profile ISAKMP-INET2
!
!
!
!
!
!
```

```

!
!
interface Loopback0
ip address 10.2.11.11 255.255.255.255
!
interface Tunnel100
bandwidth 100000
ip address 10.0.100.11 255.255.255.0
no ip redirects
ip mtu 1400
ip nhrp authentication cisco
ip nhrp map 10.0.100.84 172.16.84.4
ip nhrp map multicast 172.16.84.4
ip nhrp network-id 1
ip nhrp holdtime 600
ip nhrp nhs 10.0.100.84
ip nhrp registration timeout 60
ip nhrp shortcut
ip tcp adjust-mss 1360
load-interval 30
delay 1000
tunnel source GigabitEthernet3
tunnel mode gre multipoint
tunnel key 100
tunnel protection ipsec profile DMVPN-PROFILE1
!
interface Tunnel200
bandwidth 50000
ip address 10.0.200.11 255.255.255.0
no ip redirects
ip mtu 1400
ip nhrp authentication cisco
ip nhrp map 10.0.200.85 172.16.85.5
ip nhrp map multicast 172.16.85.5
ip nhrp network-id 2
ip nhrp holdtime 600
ip nhrp nhs 10.0.200.85
ip nhrp registration timeout 60
ip nhrp shortcut
ip tcp adjust-mss 1360
load-interval 30
delay 1000
tunnel source GigabitEthernet6
tunnel mode gre multipoint
tunnel key 200
tunnel vrf INET2
tunnel protection ipsec profile DMVPN-PROFILE2
!
interface GigabitEthernet1
vrf forwarding Mgmt-intf
ip address 10.124.19.213 255.255.255.0
negotiation auto
!
interface GigabitEthernet2
no ip address
shutdown
negotiation auto
!
interface GigabitEthernet3
description --MPLS--
ip address 172.16.111.11 255.255.255.0
load-interval 30
negotiation auto
!

```

```
interface GigabitEthernet4
no ip address
shutdown
negotiation auto
!
interface GigabitEthernet5
no ip address
negotiation auto
!
interface GigabitEthernet5.200
encapsulation dot1Q 200
ip address 10.1.11.1 255.255.255.0
!
interface GigabitEthernet6
description --INET--
vrf forwarding INET2
ip address 172.16.112.11 255.255.255.0
negotiation auto
!
router ospf 200 vrf INET2
network 172.16.112.11 0.0.0.0 area 0
!
router ospf 100
router-id 10.2.11.11
network 101.7.8.2 0.0.0.0 area 0
network 172.16.111.11 0.0.0.0 area 0
!
router bgp 10
bgp router-id 10.2.11.11
bgp log-neighbor-changes
neighbor MPLS-HUB peer-group
neighbor MPLS-HUB remote-as 10
neighbor MPLS-HUB timers 20 60
neighbor INET-HUB peer-group
neighbor INET-HUB remote-as 10
neighbor INET-HUB timers 20 60
neighbor 10.0.100.84 peer-group MPLS-HUB
neighbor 10.0.200.85 peer-group INET-HUB
!
address-family ipv4
network 10.1.11.0 mask 255.255.255.0
network 10.2.11.11 mask 255.255.255.255
neighbor MPLS-HUB send-community
neighbor MPLS-HUB route-map MPLS-SPOKE-IN in
neighbor MPLS-HUB route-map MPLS-SPOKE-OUT out
neighbor INET-HUB send-community
neighbor INET-HUB route-map INET-SPOKE-IN in
neighbor INET-HUB route-map INET-SPOKE-OUT out
neighbor 10.0.100.84 activate
neighbor 10.0.100.84 soft-reconfiguration inbound
neighbor 10.0.200.85 activate
neighbor 10.0.200.85 soft-reconfiguration inbound
exit-address-family
!
!
virtual-service csr_mgmt
!
ip forward-protocol nd
!
ip bgp-community new-format
ip community-list standard MPLS-HUB1 permit 10:100
ip community-list standard MPLS-HUB2 permit 10:101
ip community-list standard INET-HUB1 permit 10:200
ip community-list standard INET-HUB2 permit 10:201
```

```

no ip http server
no ip http secure-server
ip route vrf Mgmt-intf 0.0.0.0 0.0.0.0 10.124.19.1
!
!
ip prefix-list INET-DMVPN seq 5 permit 0.0.0.0/0
ip prefix-list INET-DMVPN seq 10 permit 10.8.0.0/16
!
ip prefix-list MPLS-DMVPN seq 5 permit 0.0.0.0/0
ip prefix-list MPLS-DMVPN seq 10 permit 10.8.0.0/16
no service-routing capabilities-manager
!
route-map MPLS-SPOKE-OUT deny 10
match ip address prefix-list INET-DMVPN
!
route-map MPLS-SPOKE-OUT permit 20
!
route-map INET-SPOKE-OUT deny 10
match ip address prefix-list MPLS-DMVPN
!
route-map INET-SPOKE-OUT permit 20
!
route-map MPLS-SPOKE-IN permit 5
match ip address prefix-list MPLS-DMVPN
set local-preference 201
!
route-map MPLS-SPOKE-IN permit 10
match community MPLS-HUB1
set local-preference 201
!
route-map MPLS-SPOKE-IN permit 20
match community MPLS-HUB2
set local-preference 200
!
route-map site_prefixes permit 10
match ip address prefix-list site_prefixes
!
route-map INET-SPOKE-IN permit 5
match ip address prefix-list MPLS-DMVPN
set local-preference 151
!
route-map INET-SPOKE-IN permit 30
match community INET-HUB1
set local-preference 151
!
route-map INET-SPOKE-IN permit 40
match community INET-HUB2
set local-preference 150
!
!
!
control-plane
!
!
line con 0
exec-timeout 0 0
stopbits 1
line vty 0 4
exec-timeout 0 0
privilege level 15
no login
line vty 5 15
exec-timeout 0 0
privilege level 15

```

```
no login
!  
ntp source Loopback0  
ntp server 10.8.3.3  
!  
end
```



CHAPTER 4

PfRv3 Transit Site Support

Starting with Cisco IOS XE Release 3.15S and Cisco IOS Release 15.5(2)T release, Performance Routing version 3 (PfRv3) supports multiple data centers at the hub site. The multi-data center or the transit site support feature enables service providers to scale their network infrastructure, and load-balance the traffic when required.

- [Feature Information for PfRv3 Transit Site Support, on page 91](#)
- [Prerequisites for PfRv3 Transit Site Support, on page 92](#)
- [Restrictions for PfRv3 Transit Site Support, on page 92](#)
- [Information About PfRv3 Transit Site Support, on page 92](#)
- [How to Configure Transit Site Support, on page 95](#)
- [Configuration Examples for PfRv3 Transit Site Support, on page 105](#)

Feature Information for PfRv3 Transit Site Support

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Table 13: Feature Information for PfRv3 Transit Site Support

Feature Name	Releases	Feature Information
PfRv3 Transit Site Support	15.5(2)T Cisco IOS XE Release 3.15S	The PfRv3 Transit Site Support feature enables service providers to configure multiple-data centers at the hub site. The following commands were modified by this feature: master (domain VRF configuration), domain (interface configuration).

Prerequisites for PfRv3 Transit Site Support

- Upgrade all branch sites, hub, and transit sites with latest Cisco IOS image to enable transit site support feature.

Restrictions for PfRv3 Transit Site Support

- Multiple next hops are supported only on hub or transit hub.
- Basic tunnel function is not supported between an old Cisco IOS release version and a new version, if transit site support is enabled.
- Hub sites must be connected by a Layer 3 routed link, which provides primary routing between the hub sites. Routing between hub sites over the DMVPN network is not supported

Information About PfRv3 Transit Site Support

Information About Transit Site Support

The multi-data center or the transit site support feature enables service providers to scale their network infrastructure, and load-balance the traffic when required. The multi-data center support enables all the hub sites to be connected with all the branch sites in an enterprise network. For example, in a use case scenario, an organization with two data centers and a single branch site, the branch site can communicate with the master-hub controller through the two next-hops (hub-branch routers) located at the hub site. If one hub-border router is down, then the branch site can still communicate through the second hub-border router. To differentiate the traffic from different hub-border routers, a path-id is configured on each interface of every channel. The branch router determines the inbound traffic based on the path-id of hub-branch routers. A path-id is a unique 32-bit number for a path between two sites.

PfRv3 Transit Site Use Case Scenarios


The transit site support feature supports the following use case scenarios:

- Single data center with multiple borders
- Dual data center with multiple borders
- Dual data center with same prefix

Single Data Center with Multiple Borders

In the following illustration, spoke A (R10) is connected to two (BR1 and BR2) DMVPN hubs in a single Dynamic Multipoint VPN (DMVPN) domain. There are two paths and two next-hops to the hub site from the spoke A. To differentiate traffic from different ISP paths, a path-id is added on each domain path. Use the `domain domain-name path path-name path-id` command to configure the path-ids.


Figure 4: Single Data Center with Multiple Borders

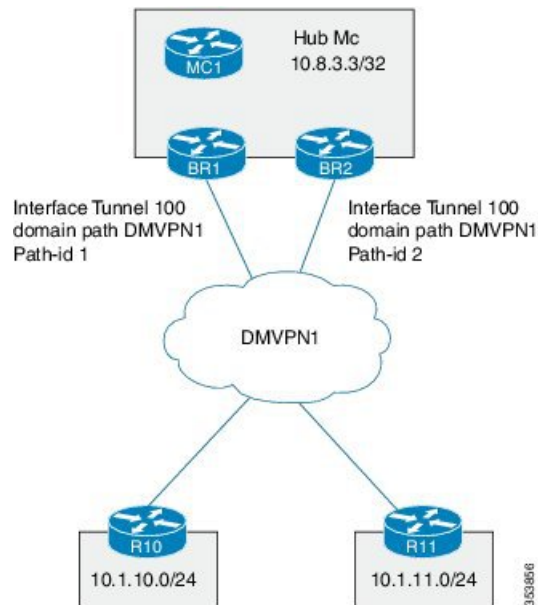

Dual Data Center with Multiple Borders

In the following illustration, the two data centers are connected to all the branch sites. You can use both the data centers in active mode and use separate prefixes for both the data centers. To differentiate the traffic originating from different data centers, a transit-id is assigned to each data center. The valid range for a transit-id is from 1 to 62. By default, 0 is assigned to the master hub. Use the **master transit** command to configure the transit-id.


Figure 5: Dual Data Center with Multiple Borders

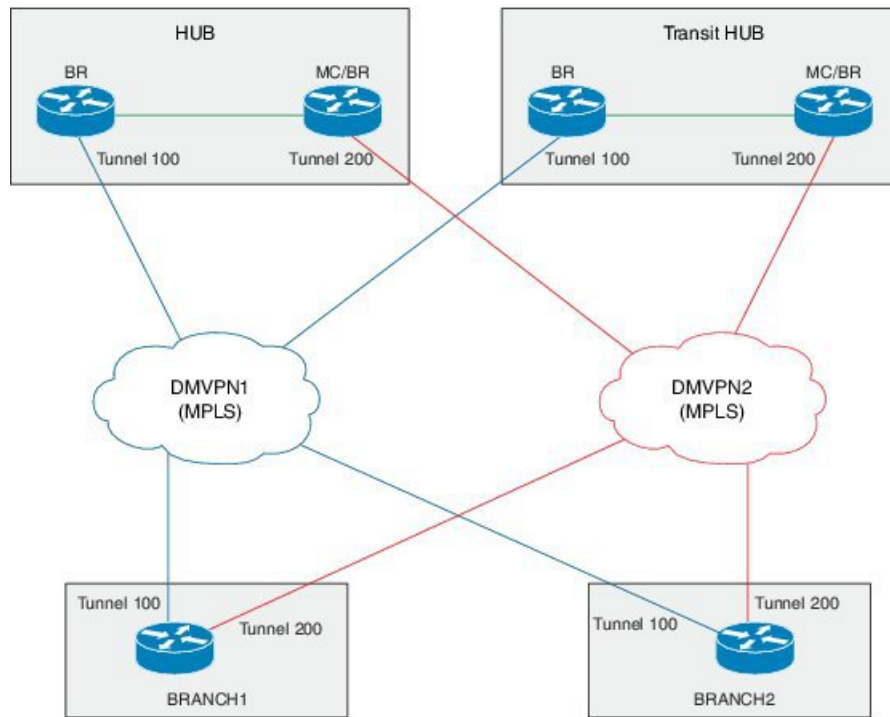

Dual Data Center with Same Prefix

In the following illustration, two data centers are connected to all the branch sites. However, in this scenario both the data centers are active and load-balance the traffic. If one data center is down, then traffic is routed through the other data center. Both the data centers share the same prefix.

Figure 6: Dual Data Center with Same Prefix

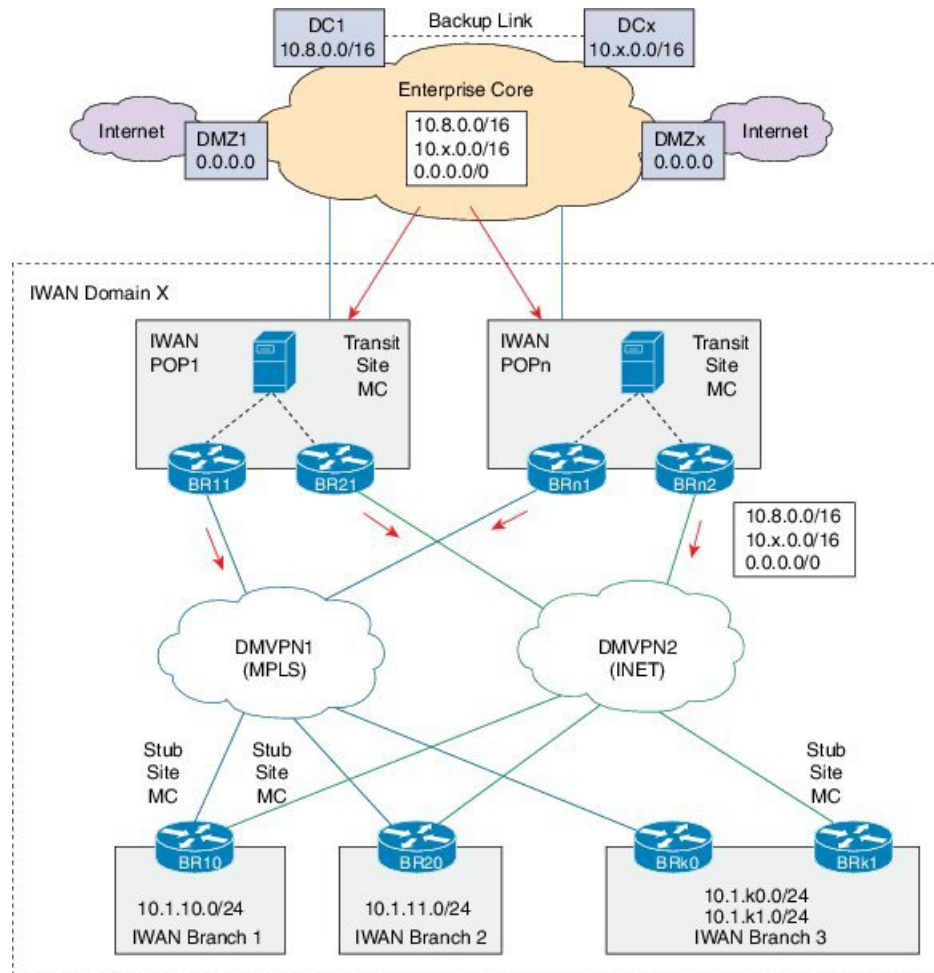

How to Configure Transit Site Support

Configuring Transit Hub

Before you begin

Configure the primary hub before configuring the transit hub.



Note In the current release, transit hub support is available only on Cisco ASR 1000 Series Aggregation Services Routers and Cisco 4000 Series Integrated Services Routers.



Note All policies are configured on the primary hub-master controller.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface loopback** *interface-number*
4. **exit**
5. **domain** {*domain-name* | **default**}
6. **vrf** {*vrf-name* | **default**}
7. **master transit** *pop-id*
8. **source-interface loopback** *interface-number*
9. **site-prefixes prefix-list** *site -list*
10. **hub** *ip-address*
11. **exit**
12. **end**
13. (Optional) **show domain** *domain-name* **master status**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	interface loopback <i>interface-number</i> Example: Device(config)# interface Loopback0	Enters interface configuration mode.
Step 4	exit Example: Device(config-if)# exit	Exits interface configuration mode and returns to global configuration mode.
Step 5	domain { <i>domain-name</i> default } Example:	Enters domain configuration mode.

	Command or Action	Purpose
	Device(config)# domain default	Note You can either configure a default domain or define a specific domain for the transit hub configuration. If you are defining a specific domain, for example "domain-cisco", you must configure the same domain for all devices for PfRv3 configuration.
Step 6	vrf { <i>vrf-name</i> default } Example: Device(config-domain)# vrf default	Configures default Virtual Routing and Forwarding (VRF) instances for the default or specific domain.
Step 7	master transit <i>pop-id</i> Example: Device(config-domain-vrf)# master transit 1	Enters master-controller configuration mode and configures the master as a transit hub. The valid range for a pop-id is from 1 to 62.
Step 8	source-interface loopback <i>interface-number</i> Example: Device(config-domain-vrf-mc)# source-interface Loopback0	Configures the loopback used as a source for peering with other sites or master controller. Note The source-interface loopback also serves as a site ID of a particular site (hub or branch) on the master controller.
Step 9	site-prefixes prefix-list <i>site -list</i> Example: Device(config-domain-vrf-mc)# site-prefixes prefix-list Data_Center_1	Configures the prefix-list containing list of site prefixes. Note You must configure the static-site prefix list for a hub and transit sites.
Step 10	hub <i>ip-address</i> Example: Device(config-domain-vrf-mc)# hub 10.8.3.3	Configures the hub for the transit site.
Step 11	exit Example: Device(config-domain-vrf-mc)# exit	Exits from master controller configuration mode and returns to domain configuration mode. Note Exit from domain configuration mode and enter in global configuration mode using the exit command.
Step 12	end Example: Device(config)# end	Exits configuration mode and returns to privileged EXEC mode.
Step 13	(Optional) show domain <i>domain-name</i> master status Example: Device# show domain one master status	Use this show command to display the status of a master controller.

Configuring Transit Site Border Routers



Note In Cisco IOS XE Release 3.15S and Cisco IOS Release 15.5(2)T release, the transit site support is available only on Cisco ASR 1000 Series Aggregation Services Routers and Cisco 4000 Series Integrated Services Routers.

In a transit site support scenario, you must configure hub-border routers with the following:

- The source interface of the border router
- The IP address of the hub-master controller
- The domain path name on external interfaces
- The domain path ID for each external interface

To configure multiple hub-border routers to the same ISP path, perform the following task on each hub-border router.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface loopback** *interface-number*
4. **ip address** *ip-address-mask*
5. **exit**
6. **domain** {*domain-name* | **default**}
7. **vrf** {*vrf-name* | **default**}
8. **border**
9. **source-interface loopback** *interface-number*
10. **master** *ip-address*
11. **exit**
12. **exit**
13. **exit**
14. **interface** *tunnel-name*
15. **ip address** *ip-address mask*
16. **description** *description-line*
17. **domain** *domain-name path path-name path-id path-id*
18. **end**
19. (Optional) **show domain** *domain-name border status*

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example:	Enables privileged EXEC mode. • Enter your password if prompted.

	Command or Action	Purpose
	Device> enable	
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	interface loopback <i>interface-number</i> Example: Device(config)# interface Loopback0	Enters interface configuration mode.
Step 4	ip address <i>ip-address-mask</i> Example: Device(config-if)# ip address 10.9.4.4 255.255.255.255	Configures an IP address for an interface on the hub-border router (Border Router 1).
Step 5	exit Example: Device(config-if)# exit	Exits interface configuration mode and returns to global configuration mode.
Step 6	domain { <i>domain-name</i> default } Example: Device(config)# domain default	Enters domain configuration mode.
Step 7	vrf { <i>vrf-name</i> default } Example: Device(config-domain)# vrf default	Configures Virtual Routing and Forwarding (VRF) for the default domain. Note You can configure specific VRF definition for the hub-border configuration.
Step 8	border Example: Device(config-domain-vrf)# border	Enters border configuration mode and configures the device as border.
Step 9	source-interface loopback <i>interface-number</i> Example: Device(config-domain-vrf-br)# source-interface Loopback0	Configures the loopback used as a source for peering with other sites or master controller.
Step 10	master <i>ip-address</i> Example: Device(config-domain-vrf-br)# master 10.9.3.3	Configures the IP address of the hub-master controller.

	Command or Action	Purpose
Step 11	exit Example: Device(config-domain-vrf-br)# exit	Exits border configuration mode and enters VRF configuration mode.
Step 12	exit Example: Device(config-domain-vrf)# exit	Exits VRF configuration mode and enters domain configuration mode.
Step 13	exit Example: Device(config-domain)# exit	Exits domain configuration mode and enters global configuration mode.
Step 14	interface <i>tunnel-name</i> Example: Device(config)# interface Tunnel100	Enters interface configuration mode.
Step 15	ip address <i>ip-address mask</i> Example: Device(config-if)# ip address 10.0.100.84 255.255.255.0	Configures an IP address for the tunnel interface.
Step 16	description <i>description-line</i> Example: Device1(config-if)# description primary path Device2(config-if)# description secondary path	Configures a description to associate with an ISP path.
Step 17	domain <i>domain-name path path-name path-id path-id</i> Example: Device(config-if)# domain default path MPLS path-id 1	<p>Configures the Internet Service Provider (ISP) associated with the domain and the path. There are two types of external interfaces, enterprise link such as DMVPN tunnel interface and internet -bound interface. Multiple next hop is supported only on DMVPN tunnel interfaces. The path-id is a unique identifier for each path in a domain. Valid values for a path-id are from 1 to 62.</p> <p>We recommend using front VRF on the tunnel interface for enterprise links.</p> <p>Note You can configure multiple ISPs. If you are defining specific domain name for example, domain_cisco, you must specify the same domain name for configuring ISP paths.</p> <p>You must assign a unique path-id for all the paths that are connected from hub-border routers to the same ISP domain.</p>
Step 18	end Example:	Exits interface configuration mode and returns to privileged EXEC mode.

	Command or Action	Purpose
	Device(config-if)# end	
Step 19	(Optional) show domain <i>domain-name</i> border status Example: Device# show domain default border status	Use this show command to display the status of a border router.

What to do next

Verifying Pfrv3 Transit Site Support

Verifying Pfrv3 Transit Site Support

The **show** commands can be entered in any order.

Before you begin

Configure multiple DMVPN paths from hub-border routers or from transit-hub border routers.

SUMMARY STEPS

1. **show domain** *domain-name* **master channels**
2. **show domain** *domain-name* **border channel**
3. **show domain** *domain-name* **master site-prefix**
4. **show domain** *domain-name* **border site-prefix**
5. **show domain** *domain-name* **master channels dst-site-id** *destination-site-id*

DETAILED STEPS**Step 1** **show domain** *domain-name* **master channels**

Displays channel information of the hub-master controller.

Example:

```
HubMC# show domain default master channels
```

```
-----
Channel Id: 8  Dst Site-Id: 10.2.11.11  Link Name: MPLS  DSCP: default [0] pfr-label: 0:0 | 2:30
[0x21E] TCs: 0
Channel Created: 03:19:14 ago
Provisional State: Initiated and open
Operational state: Available but unreachable
Channel to hub: FALSE
Interface Id: 11
Supports Zero-SLA: Yes
Muted by Zero-SLA: No
Estimated Channel Egress Bandwidth: 0 Kbps
Immitigable Events Summary:
  Total Performance Count: 0, Total BW Count: 0
ODE Stats Bucket Number: 1
Last Updated   : 00:00:21 ago
  Packet Count  : 0
  Byte Count    : 0
```

```

One Way Delay : N/A
Loss Rate Pkts : N/A
Loss Rate Bytes: N/A
Jitter Mean   : N/A
Unreachable   : TRUE
ODE Stats Bucket Number: 2
Last Updated  : 00:00:52 ago
Packet Count  : 0
Byte Count    : 0
One Way Delay : N/A
Loss Rate Pkts : N/A
Loss Rate Bytes: N/A
Jitter Mean   : N/A
Unreachable   : TRUE
TCA Statistics:
  Received:355 ; Processed:354 ; Unreach_rcvd:355
Latest TCA Bucket
Last Updated  : 00:00:21 ago
Local unreachable TCA received(Check for stale TCA 00:00:09 later)
.
.
.
-----

```

Step 2 **show domain *domain-name* border channel**

Displays the information of border router channels at the hub site.

Example:

```
HubBR# show domain default border channels
```

```

-----
Border Smart Probe Stats:

Smart probe parameters:
Source address used in the Probe: 10.2.10.10
Unreach time: 1000 ms
Probe source port: 18000
Probe destination port: 19000
Interface Discovery: ON
Probe freq for channels with traffic :10 secs
Discovery Probes: OFF
Number of transit probes consumed :29
Number of transit probes re-routed: 0
DSCP's using this: [0] [1] [2] [3] [4] [5] [6] [7] [8] [9] [10] [11] [12] [13] [14] [15] [16] [17]
[18] [19] [20] [21] [22] [23] [24] [25] [26] [27] [28] [29] [30] [31] [32] [33] [34] [35] [36] [37]
[38] [39] [40] [41] [42] [43] [44] [45] [46] [47] [48] [49] [50] [51] [52] [53] [54] [55] [56] [57]
[58] [59] [60] [61] [62] [63] [64]
All the other DSCPs use the default interval: 10 secs

Channel id: 20
Channel create time: 06:42:54 ago
Site id : 10.2.11.11
DSCP : default[0]
Service provider : MPLS
Pfr-Label : 0:0 | 0:0 [0x0]
exit path-id: 0
Exit path-id sent on wire: 0
Number of Probes sent : 77407
Number of Probes received : 75949
Last Probe sent : 00:00:00 ago
Last Probe received : 00:00:00 ago
Channel state : Initiated and open
Channel next_hop : 10.0.100.11

```

```

RX Reachability : Reachable
TX Reachability : Reachable
Channel is sampling 0 flows
Channel remote end point: 10.0.100.11
Channel to hub: FALSE
Version: 3
Supports Zero-SLA: Yes
Muted by Zero-SLA: No
Probe freq with traffic : 1 in 10000 ms

```

```

.
.
.
-----

```

Step 3 **show domain *domain-name* master site-prefix**

Displays the details of site-prefixes configured to the master hub.

Example:

```
HubMC# show domain default master site-prefix
```

```

-----
Load for five secs: 0%/0%; one minute: 0%; five minutes: 0%
Time source is NTP, 11:28:29.421 CET Tue Mar 17 2015

```

```

Change will be published between 5-60 seconds
Next Publish 00:33:03 later
Prefix DB Origin: 10.9.3.3
Prefix Flag: S-From SAF; L-Learned; T-Top Level; C-Configured; M-shared

```

Site-id	Site-prefix	Last Updated	DC Bitmap	Flag
10.2.10.10	10.1.10.0/24	01:25:15 ago	0x0	S
10.2.11.11	10.1.11.0/24	01:25:19 ago	0x0	S
10.2.10.10	10.2.10.10/32	01:25:15 ago	0x0	S
10.2.11.11	10.2.11.11/32	01:25:19 ago	0x0	S
10.2.12.12	10.2.12.12/32	01:28:54 ago	0x0	S
10.8.3.3	10.8.3.3/32	01:28:47 ago	0x1	S
10.9.3.3	10.8.0.0/16	01:28:47 ago	0x5	C,M
10.8.3.3	10.8.0.0/16	01:28:47 ago	0x5	C,M
10.9.3.3	10.9.3.3/32	03:29:04 ago	0x4	L
10.9.3.3	10.9.0.0/16	01:28:47 ago	0x5	C,M
10.8.3.3	10.9.0.0/16	01:28:47 ago	0x5	C,M
255.255.255.255	*10.0.0.0/8	01:28:47 ago	0x1	S,T

Step 4 **show domain *domain-name* border site-prefix**

Displays the details of site-prefixes configured on the border.

Example:

```
HubBR# show domain default border site-prefix
```

```

-----
Prefix Flag: S-From SAF; L-Learned; T-Top Level; C-Configured; M-shared

```

Site-id	Site-prefix	Last Updated	DC Bitmap	Flag
10.2.10.10	10.1.10.0/24	00:36:58 ago	0x0	S
10.2.11.11	10.1.11.0/24	00:37:02 ago	0x0	S

```

10.2.10.10          10.2.10.10/32          00:36:58 ago          0x0          S
10.2.11.11          10.2.11.11/32          00:37:02 ago          0x0          S
10.2.12.12          10.2.12.12/32          00:40:37 ago          0x0          S
10.8.3.3            10.8.3.3/32            00:40:29 ago          0x1          S
10.9.3.3            10.8.0.0/16            00:38:40 ago          0x5          S,C,M
10.8.3.3            10.8.0.0/16            00:38:40 ago          0x5          S,C,M
10.9.3.3            10.9.3.3/32            00:38:40 ago          0x4          S
10.9.3.3            10.9.0.0/16            00:38:40 ago          0x5          S,C,M
10.8.3.3            10.9.0.0/16            00:38:40 ago          0x5          S,C,M
255.255.255.255    *10.0.0.0/8            00:40:29 ago          0x1          S,T
-----

```

Step 5 `show domain domain-name master channels dst-site-id destination-site-id`

Displays the details of destination site-ids configured with hub-master controller.

Note Use this command on a spoke or a branch device to view the details of the destination site-ids.

Example:

```
BR# show domain default master channels dst-site-id 10.8.3.3
```

```
-----
Legend: * (Value obtained from Network delay:)
```

```

Channel Id: 27 Dst Site-Id: 10.8.3.3 Link Name: INET DSCP: default [0] pfr-label: 0:20 | 0:0
[0x140000] TCs: 0
Channel Created: 01:16:34 ago
Provisional State: Initiated and open
Operational state: Available
Channel to hub: TRUE
Interface Id: 12
Supports Zero-SLA: Yes
Muted by Zero-SLA: No
Estimated Channel Egress Bandwidth: 5 Kbps
Immitigable Events Summary:
Total Performance Count: 0, Total BW Count: 0
Site Prefix List
  10.8.3.3/32 (Active)
  10.8.0.0/16 (Active)
  10.9.0.0/16 (Standby)
ODE Stats Bucket Number: 1
Last Updated : 00:00:24 ago
Packet Count : 562
Byte Count : 47208
One Way Delay : 71 msec*
Loss Rate Pkts: 0.0 %
Loss Rate Byte: 0.0 %
Jitter Mean : 619 usec
Unreachable : FALSE
ODE Stats Bucket Number: 2
Last Updated : 00:00:54 ago
Packet Count : 558
Byte Count : 46872
One Way Delay : 55 msec*
Loss Rate Pkts: 0.0 %
Loss Rate Byte: 0.0 %
Jitter Mean : 556 usec
Unreachable : FALSE
TCA Statistics:
  Received:133 ; Processed:133 ; Unreach_rcvd:0
Latest TCA Bucket
Last Updated : 00:00:24 ago

```

```

One Way Delay : 71 msec*
Loss Rate Pkts: NA
Loss Rate Byte: NA
Jitter Mean   : NA
Unreachability: FALSE

```

```

.
.
.


```

Configuration Examples for PfRv3 Transit Site Support

Example: Configuring Transit Site Support

In this use case scenario, an enterprise organization has two data centers with multiple-border routers connected to the same ISP domain. The branch-border routers can reach the hub-master controller through multiple next-hops.

Figure 7: PfRv3 Transit Hub Topology

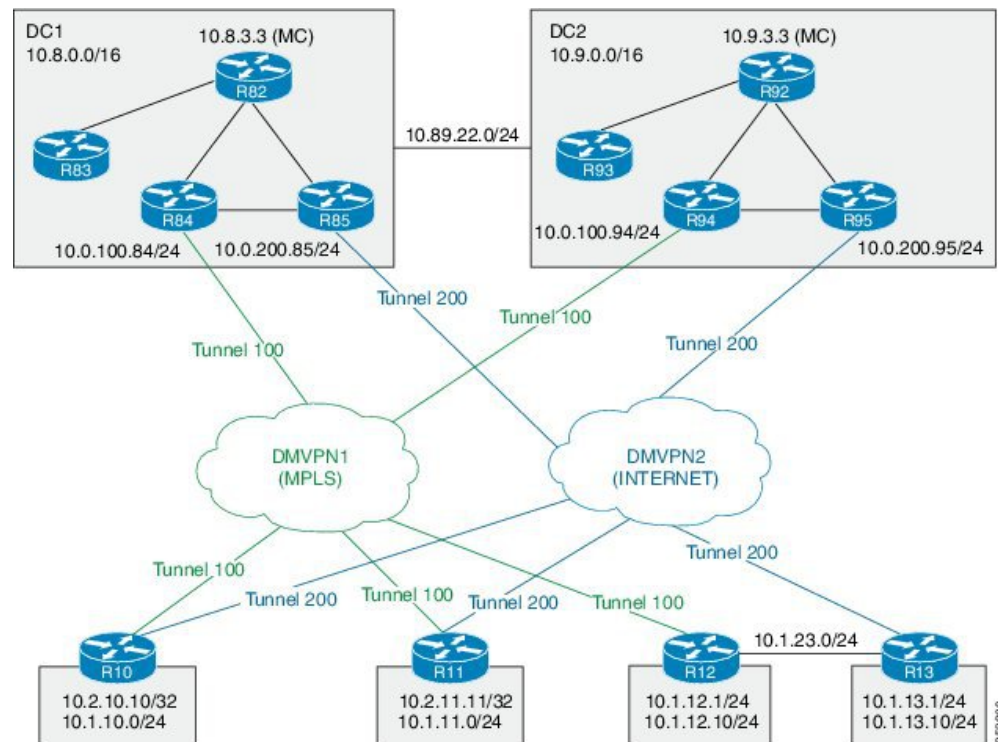

In this example, the following routers are used:

- Hub Master Controller — Cisco ASR 1002-X router configured with an embedded services processor (ESP) default bandwidth of 5 Gbps upgradable with software licensing options to 10 Gbps, 20 Gbps, and 36 Gbps.

- Hub Border Routers — Cisco ASR 1000 Series Embedded Services Processor 2
- Branch Routers — Cisco 4451X Integrated Services Router.

Example: Configuring Data Center 1 (DC1) Devices

Configure the interfaces on master hub controller (R82)

```
HubMC> enable
HubMC# configure terminal
HubMC (config)# interface Loopback0
HubMC (config-if)# ip address 10.8.3.3 255.255.255.255
HubMC (config-if)# exit
```

Configure the device as hub-master controller

```
HubMC (config)# domain default
HubMC (config-domain)# vrf default
HubMC (config-domain-vrf)# master hub
HubMC (config-domain-vrf-mc)# source-interface Loopback0
HubMC (config-domain-vrf-mc)# enterprise-prefix prefix-list ENTERPRISE_PREFIX
HubMC (config-domain-vrf-mc)# site-prefixes prefix-list DC1_PREFIX
HubMC (config-domain-vrf-mc)# exit
```

Configure IP prefix-lists

```
HubMC (config)# ip prefix-list DC1_PREFIX seq 10 permit 10.8.0.0/16
HubMC (config)# ip prefix-list DC1_PREFIX seq 10 permit 10.9.0.0/16
HubMC (config)# ip prefix-list ENTERPRISE_PREFIX seq 10 permit 10.0.0.0/8
```

Configure domain policies on hub master controller

```
HubMC (config)# domain default
HubMC (config-domain)# vrf default
HubMC (config-domain-vrf)# master hub
HubMC (config-domain-vrf-mc)# source-interface Loopback0
HubMC (config-domain-vrf-mc)# site-prefixes prefix-list DC1_PREFIX
HubMC (config-domain-vrf-mc)# load-balance
HubMC (config-domain-vrf-mc)# enterprise-prefix prefix-list ENTERPRISE_PREFIX

HubMC (config-domain-vrf-mc)# class VOICE sequence 10
HubMC (config-domain-vrf-mc-class)# match dscp ef policy custom
HubMC (config-domain-vrf-mc-class-type)# priority 2 loss threshold 5
HubMC (config-domain-vrf-mc-class-type)# priority 1 one-way-delay threshold 150
HubMC (config-domain-vrf-mc-class-type)# exit
HubMC (config-domain-vrf-mc-class)# path-preference MPLS fallback INET
HubMC (config-domain-vrf-mc-class)# exit

HubMC (config-domain-vrf-mc)# class VIDEO sequence 20
HubMC (config-domain-vrf-mc-class)# match dscp af41 policy custom
HubMC (config-domain-vrf-mc-class-type)# priority 2 loss threshold 5
HubMC (config-domain-vrf-mc-class-type)# priority 1 one-way-delay threshold 150
HubMC (config-domain-vrf-mc-class-type)# exit
HubMC (config-domain-vrf-mc-class)# match dscp cs4 policy custom
HubMC (config-domain-vrf-mc-class-type)# priority 2 loss threshold 5
HubMC (config-domain-vrf-mc-class-type)# priority 1 one-way-delay threshold 150
HubMC (config-domain-vrf-mc-class-type)# exit
HubMC (config-domain-vrf-mc-class)# path-preference INET fallback MPLS
HubMC (config-domain-vrf-mc-class)# exit

HubMC (config-domain-vrf-mc)# class CRITICAL sequence 30
```



```

HubMC(config-domain-vrf-mc-class)# match dscp af31 policy custom
HubMC(config-domain-vrf-mc-class-type)# priority 2 loss threshold 10
HubMC(config-domain-vrf-mc-class-type)# priority 1 one-way-delay threshold 600
HubMC(config-domain-vrf-mc-class-type)# exit
HubMC(config-domain-vrf-mc-class)# path-preference MPLS fallback INET
HubMC(config-domain-vrf-mc)# class DEFAULT sequence 100
HubMC(config-domain-vrf-mc-class)# match dscp default policy custom
HubMC(config-domain-vrf-mc-class-type)# priority 2 loss threshold 5
HubMC(config-domain-vrf-mc-class-type)# priority 1 one-way-delay threshold 50
HubMC(config-domain-vrf-mc-class-type)# priority 3 jitter threshold 20000
HubMC(config-domain-vrf-mc-class-type)# exit

```

Configure hub border routers on DC1 (R84)

```

BR84> enable
BR84# configure terminal
BR84(config)# interface Loopback0
BR84(config-if)# ip address 10.8.4.4 255.255.255.255
BR84(config-if)# exit

```

Configure the device as border router (BR84)

```

BR84(config)# domain default
BR84(config-domain)# vrf default
BR84(config-domain-vrf)# border
BR84(config-domain-vrf-br)# source-interface Loopback0
BR84(config-domain-vrf-br)# master 10.8.3.3
BR84(config-domain-vrf-br)# exit

```

Configure tunnel from BR84 to DMVPN1 (MPLS)Link

```

BR84(config)# interface Tunnel100
BR84(config-if)# bandwidth 100000
BR84(config-if)# ip address 10.0.100.84 255.255.255.0
BR84(config-if)# no ip redirects
BR84(config-if)# ip mtu 1400
BR84(config-if)# ip nhrp authentication cisco
BR84(config-if)# ip nhrp map multicast dynamic
BR84(config-if)# ip nhrp network-id 1
BR84(config-if)# ip nhrp holdtime 60
BR84(config-if)# ip nhrp redirect
BR84(config-if)# ip tcp adjust-mss 1360
BR84(config-if)# load-interval 30
BR84(config-if)# delay 1000
BR84(config-if)# tunnel source Ethernet0/1
BR84(config-if)# tunnel mode gre multipoint
BR84(config-if)# tunnel key 100
BR84(config-if)# tunnel vrf IWAN-TRANSPORT-1
BR84(config-if)# domain path MPLS path-id 10

```

Configure hub border routers on DC1 (R85)

```

BR85> enable
BR85# configure terminal
BR85(config)# interface Loopback0
BR85(config-if)# ip address 10.8.5.5 255.255.255.255
BR85(config-if)# exit

```

Configure the device as border router (BR85)

```

BR85(config)# domain default
BR85(config-domain)# vrf default
BR85(config-domain-vrf)# border
BR85(config-domain-vrf-br)# source-interface Loopback0

```

Example: Configuring Transit Site Support

```
BR85(config-domain-vrf-br)# master 10.8.3.3
BR85(config-domain-vrf-br)# exit
```

Configure tunnel from BR84 to DMVPN2 (INET)Link

```
BR85(config)# interface Tunnel200
BR85(config-if)# bandwidth 5000
BR85(config-if)# ip address 10.0.200.85 255.255.255.0
BR85(config-if)# no ip redirects
BR85(config-if)# ip mtu 1400
BR85(config-if)# ip nhrp authentication cisco
BR85(config-if)# ip nhrp map multicast dynamic
BR85(config-if)# ip nhrp network-id 2
BR85(config-if)# ip nhrp holdtime 60
BR85(config-if)# ip nhrp redirect
BR85(config-if)# ip tcp adjust-mss 1360
BR85(config-if)# load-interval 30
BR85(config-if)# delay 1000
BR85(config-if)# tunnel source Ethernet0/1
BR85(config-if)# tunnel mode gre multipoint
BR85(config-if)# tunnel key 200
BR85(config-if)# tunnel vrf IWAN-TRANSPORT-2
BR85(config-if)# domain path INET path-id 20
```

Example: Configuring Data Center 2 (DC2) Devices**Configure the interfaces on master hub controller (R92)**

```
HubMC> enable
HubMC# configure terminal
HubMC(config)# interface Loopback0
HubMC(config-if)# ip address 10.9.3.3 255.255.255.255
HubMC(config-if)# exit
```

Configure the device as transit-hub master controller

```
HubMC(config)# domain default
HubMC(config-domain)# vrf default
HubMC(config-domain-vrf)# master transit 2
HubMC(config-domain-vrf-mc)# source-interface Loopback0
HubMC(config-domain-vrf-mc)# site-prefixes prefix-list DC2_PREFIX
HubMC(config-domain-vrf-mc)# hub 10.8.3.3
HubMC(config-domain-vrf-mc)# exit
```

Configure IP prefix-lists

```
HubMC(config)# ip prefix-list DC2_PREFIX seq 10 permit 10.9.0.0/16
HubMC(config)# ip prefix-list DC2_PREFIX seq 20 permit 10.8.0.0/16
HubMC(config)# ip prefix-list ENTERPRISE_PREFIX seq 10 permit 10.0.0.0/8
```

Configure hub border routers on DC2 (R94)

```
BR94> enable
BR94# configure terminal
BR94(config)# interface Loopback0
BR94(config-if)# ip address 10.9.4.4 255.255.255.255
BR94(config-if)# exit
```

Configure the device as border router (BR94)

```
BR94(config)# domain default
BR94(config-domain)# vrf default
BR94(config-domain-vrf)# border
BR94(config-domain-vrf-br)# source-interface Loopback0
```

```
BR94(config-domain-vrf-br)# master 10.9.3.3
BR94(config-domain-vrf-br)# exit
```

Configure tunnel from BR94 to DMVPN1 (MPLS)Link

```
BR94(config)# interface Tunnel100
BR94(config-if)# bandwidth 1000
BR94(config-if)# ip address 10.0.100.94 255.255.255.0
BR94(config-if)# no ip redirects
BR94(config-if)# ip mtu 1400
BR94(config-if)# ip nhrp authentication cisco
BR94(config-if)# ip nhrp map multicast dynamic
BR94(config-if)# ip nhrp network-id 1
BR94(config-if)# ip nhrp holdtime 60
BR94(config-if)# ip nhrp redirect
BR94(config-if)# ip tcp adjust-mss 1360
BR94(config-if)# load-interval 30
BR94(config-if)# delay 1000
BR94(config-if)# tunnel source Ethernet0/1
BR94(config-if)# tunnel mode gre multipoint
BR94(config-if)# tunnel key 100
BR94(config-if)# tunnel vrf IWAN-TRANSPORT-1
BR94(config-if)# domain path MPLS path-id 30
```

Configure hub border routers on DC2 (R95)

```
BR95> enable
BR95# configure terminal
BR95(config)# interface Loopback0
BR95(config-if)# ip address 10.9.5.5 255.255.255.255
BR95(config-if)# exit
```

Configure the device as border router (BR95)

```
BR95(config)# domain default
BR95(config-domain)# vrf default
BR95(config-domain-vrf)# border
BR95(config-domain-vrf-br)# source-interface Loopback0
BR95(config-domain-vrf-br)# master 10.9.3.3
BR95(config-domain-vrf-br)# exit
```

Configure tunnel from BR95 to DMVPN2 (INET)Link

```
BR95(config)# interface Tunnel200
BR95(config-if)# bandwidth 1000
BR95(config-if)# ip address 10.0.200.95 255.255.255.0
BR95(config-if)# no ip redirects
BR95(config-if)# ip mtu 1400
BR95(config-if)# ip nhrp authentication cisco
BR95(config-if)# ip nhrp map multicast dynamic
BR95(config-if)# ip nhrp network-id 2
BR95(config-if)# ip nhrp holdtime 60
BR95(config-if)# ip nhrp redirect
BR95(config-if)# ip tcp adjust-mss 1360
BR95(config-if)# load-interval 30
BR95(config-if)# delay 1000
BR95(config-if)# tunnel source Ethernet0/1
BR95(config-if)# tunnel mode gre multipoint
BR95(config-if)# tunnel key 200
BR95(config-if)# tunnel vrf IWAN-TRANSPORT-2
BR95(config-if)# domain path INET path-id 40
```

Example: Configuring Branch Routers**Configure the interfaces (R10)**

```
R10> enable
R10# configure terminal
R10(config)# interface Loopback0
R10(config-if)# ip address 10.2.10.10 255.255.255.255
R10(config-if)# exit
```

Configure the device as branch-master controller (R10)

```
R10(config)# domain default
R10(config-domain)# vrf default
R10(config-domain-vrf)# border
R10(config-domain-vrf-br)# source-interface Loopback0
R10(config-domain-vrf-br)# master local
R10(config-domain-vrf-br)# exit
R10(config-domain-vrf)# master branch
R10(config-domain-vrf-mc)# source-interface Loopback0
R10(config-domain-vrf-mc)# hub 10.8.3.3
```

Configure the tunnel interface and tunnel path from R10

```
R10(config)# interface Tunnel100
R10(config-if)# bandwidth 400
R10(config-if)# ip address 10.0.100.10 255.255.255.0
R10(config-if)# no ip redirects
R10(config-if)# ip mtu 1400
R10(config-if)# ip nhrp authentication cisco
R10(config-if)# ip nhrp map multicast dynamic
R10(config-if)# ip nhrp network-id 1
R10(config-if)# ip nhrp holdtime 60
R10(config-if)# ip nhrp nhs 10.0.100.84 nbma 172.16.84.4 multicast
R10(config-if)# ip nhrp nhs 10.0.100.94 nbma 172.16.94.4 multicast
R10(config-if)# ip nhrp registration no-unique
R10(config-if)# ip nhrp registration timeout 60
R10(config-if)# ip nhrp shortcut
R10(config-if)# ip nhrp redirect
R10(config-if)# ip tcp adjust-mss 1360
R10(config-if)# load-interval 30
R10(config-if)# delay 1000
R10(config-if)# no nhrp route-watch
R10(config-if)# if-state nhrp
R10(config-if)# tunnel source Ethernet0/1
R10(config-if)# tunnel mode gre multipoint
R10(config-if)# tunnel key 100
R10(config-if)# tunnel vrf IWAN-TRANSPORT-1

R10(config)# interface Tunnel200
R10(config-if)# bandwidth 5000
R10(config-if)# ip address 10.0.200.10 255.255.255.0
R10(config-if)# no ip redirects
R10(config-if)# ip mtu 1400
R10(config-if)# ip nhrp authentication cisco
R10(config-if)# ip nhrp map multicast dynamic
R10(config-if)# ip nhrp network-id 2
R10(config-if)# ip nhrp holdtime 600
R10(config-if)# ip nhrp nhs 10.0.200.85 nbma 172.16.85.5 multicast
R10(config-if)# ip nhrp nhs 10.0.200.95 nbma 172.16.95.5 multicast
R10(config-if)# ip nhrp registration no-unique
R10(config-if)# ip nhrp registration timeout 60
```

```

R10(config-if)# ip nhrp shortcut
R10(config-if)# ip nhrp redirect
R10(config-if)# ip tcp adjust-mss 1360
R10(config-if)# load-interval 30
R10(config-if)# delay 1000
R10(config-if)# no nhrp route-watch
R10(config-if)# if-state nhrp
R10(config-if)# tunnel source Ethernet0/2
R10(config-if)# tunnel mode gre multipoint
R10(config-if)# tunnel key 200
R10(config-if)# tunnel vrf IWAN-TRANSPORT-2

```

Configure the interfaces (R11)

```

R11> enable
R11# configure terminal
R11(config)# interface Loopback0
R11(config-if)# ip address 10.2.11.11 255.255.255.255
R11(config-if)# exit

```

Configure the device as branch master controller (R11)

```

R11(config)# domain default
R11(config-domain)# vrf default
R11(config-domain-vrf)# border
R11(config-domain-vrf-br)# source-interface Loopback0
R11(config-domain-vrf-br)# master local
R11(config-domain-vrf-br)# exit
R11(config-domain-vrf)# master branch
R11(config-domain-vrf-mc)# source-interface Loopback0
R11(config-domain-vrf-mc)# hub 10.8.3.3

```

Configure the tunnel interface and tunnel path from R11

```

R11(config)# interface Tunnel100
R11(config-if)# bandwidth 2000
R11(config-if)# ip address 10.0.100.11 255.255.255.0
R11(config-if)# no ip redirects
R11(config-if)# ip mtu 1400
R11(config-if)# ip nhrp authentication cisco
R11(config-if)# ip nhrp map multicast dynamic
R11(config-if)# ip nhrp network-id 1
R11(config-if)# ip nhrp holdtime 60
R11(config-if)# ip nhrp nhs 10.0.100.84 nbma 172.16.84.4 multicast
R11(config-if)# ip nhrp nhs 10.0.100.94 nbma 172.16.94.4 multicast
R11(config-if)# ip nhrp registration no-unique
R11(config-if)# ip nhrp registration timeout 60
R11(config-if)# ip nhrp shortcut
R11(config-if)# ip nhrp redirect
R11(config-if)# ip tcp adjust-mss 1360
R11(config-if)# load-interval 30
R11(config-if)# delay 1000
R11(config-if)# no nhrp route-watch
R11(config-if)# if-state nhrp
R11(config-if)# tunnel source Ethernet0/1
R11(config-if)# tunnel mode gre multipoint
R11(config-if)# tunnel key 100
R11(config-if)# tunnel vrf IWAN-TRANSPORT-1

R11(config)# interface Tunnel200
R11(config-if)# bandwidth 5000
R11(config-if)# ip address 10.0.200.11 255.255.255.0
R11(config-if)# no ip redirects
R11(config-if)# ip mtu 1400

```

```

R11(config-if)# ip nhrp authentication cisco
R11(config-if)# ip nhrp map multicast dynamic
R11(config-if)# ip nhrp network-id 2
R11(config-if)# ip nhrp holdtime 600
R11(config-if)# ip nhrp nhs 10.0.200.85 nbma 172.16.85.5 multicast
R11(config-if)# ip nhrp nhs 10.0.200.95 nbma 172.16.95.5 multicast
R11(config-if)# ip nhrp registration no-unique
R11(config-if)# ip nhrp registration timeout 60
R11(config-if)# ip nhrp shortcut
R11(config-if)# ip nhrp redirect
R11(config-if)# ip tcp adjust-mss 1360
R11(config-if)# load-interval 30
R11(config-if)# delay 1000
R11(config-if)# no nhrp route-watch
R11(config-if)# if-state nhrp
R11(config-if)# tunnel source Ethernet0/2
R11(config-if)# tunnel mode gre multipoint
R11(config-if)# tunnel key 200
R11(config-if)# tunnel vrf IWAN-TRANSPORT-2

```

Configure the interfaces (R12)

```

R12> enable
R12# configure terminal
R12(config)# interface Loopback0
R12(config-if)# ip address 10.2.12.12 255.255.255.255
R12(config-if)# exit

```

Configure the device as branch-master controller (R12)

```

R12(config)# domain default
R12(config-domain)# vrf default
R12(config-domain-vrf)# border
R12(config-domain-vrf-br)# source-interface Loopback0
R12(config-domain-vrf-br)# master local
R12(config-domain-vrf-br)# exit
R12(config-domain-vrf)# master branch
R12(config-domain-vrf-mc)# source-interface Loopback0
R12(config-domain-vrf-mc)# hub 10.8.3.3

```

Configure the tunnel interface and tunnel path from R12

```

R12(config)# interface Tunnel100
R12(config-if)# bandwidth 400
R12(config-if)# ip address 10.0.100.12 255.255.255.0
R12(config-if)# no ip redirects
R12(config-if)# ip mtu 1400
R12(config-if)# ip nhrp authentication cisco
R12(config-if)# ip nhrp map multicast dynamic
R12(config-if)# ip nhrp network-id 1
R12(config-if)# ip nhrp holdtime 600
R12(config-if)# ip nhrp nhs 10.0.100.84 nbma 172.16.84.4 multicast
R12(config-if)# ip nhrp nhs 10.0.100.94 nbma 172.16.94.4 multicast
R12(config-if)# ip nhrp registration no-unique
R12(config-if)# ip nhrp registration timeout 60
R12(config-if)# ip nhrp shortcut
R12(config-if)# ip tcp adjust-mss 1360
R12(config-if)# load-interval 30
R12(config-if)# delay 1000
R12(config-if)# no nhrp route-watch
R12(config-if)# if-state nhrp
R12(config-if)# tunnel source Ethernet0/1
R12(config-if)# tunnel mode gre multipoint

```

```
R12(config-if)# tunnel key 100
R12(config-if)# tunnel vrf IWAN-TRANSPORT-1
```

Configure the interfaces (R13)

```
R13> enable
R13# configure terminal
R13(config)# interface Loopback0
R13(config-if)# ip address 10.2.13.13 255.255.255.255
R13(config-if)# exit
```

Configure the device as a border router with R12 as the master controller (R13)

```
R13(config)# domain default
R13(config-domain)# vrf default
R13(config-domain-vrf)# border
R13(config-domain-vrf-br)# source-interface Loopback0
R13(config-domain-vrf-br)# master 10.2.12.12
R13(config-domain-vrf-br)# exit
```

Configure the tunnel interface and tunnel path from R13

```
R13(config)# interface Tunnel200
R13(config-if)# bandwidth 400
R13(config-if)# ip address 10.0.200.13 255.255.255.0
R13(config-if)# no ip redirects
R13(config-if)# ip mtu 1400
R13(config-if)# ip nhrp authentication cisco
R13(config-if)# ip nhrp network-id 2
R13(config-if)# ip nhrp holdtime 600
R13(config-if)# ip nhrp nhs 10.0.200.85 nbma 172.16.85.5 multicast
R13(config-if)# ip nhrp nhs 10.0.100.95 nbma 172.16.95.5 multicast
R13(config-if)# ip nhrp registration no-unique
R13(config-if)# ip nhrp registration timeout 60
R13(config-if)# ip nhrp shortcut
R13(config-if)# ip tcp adjust-mss 1360
R13(config-if)# load-interval 30
R13(config-if)# delay 1000
R13(config-if)# if-state nhrp
R13(config-if)# tunnel source Ethernet0/2
R13(config-if)# tunnel mode gre multipoint
R13(config-if)# tunnel key 200
R13(config-if)# tunnel vrf IWAN-TRANSPORT-2
```

Verifying PfRv3 Transit Site Configuration

To verify the PfRv3 transit site configuration, use the following show commands in any order:

```
HubMC2# show domain default master status
```

```
-----
*** Domain MC Status ***
```

```
Master VRF: Global
```

```
Instance Type:   Transit
POP ID:         2
Instance id:    0
Operational status: Up
Configured status: Up
Loopback IP Address: 10.9.3.3
Load Balancing:
Operational Status: Up
Max Calculated Utilization Variance: 0%
```

Example: Configuring Transit Site Support

```

Last load balance attempt: 03:07:30 ago
Last Reason: Variance less than 20%
Total unbalanced bandwidth:
    External links: 0 Kbps  Internet links: 0 Kbps
Route Control: Enabled
Mitigation mode Aggressive: Disabled
Policy threshold variance: 20
Minimum Mask Length: 28
Minimum Requirement: Met

Borders:
  IP address: 10.9.5.5
  Version: 2
  Connection status: CONNECTED (Last Updated 03:25:38 ago )
  Interfaces configured:
Name: Tunnel200 | type: external | Service Provider: INET path-id:40 | Status: UP | Zero-SLA:
NO
    Number of default Channels: 0

Tunnel if: Tunnel0

IP address: 10.9.4.4
Version: 2
Connection status: CONNECTED (Last Updated 03:25:37 ago )
Interfaces configured:
  Name: Tunnel100 | type: external | Service Provider: MPLS path-id:30 | Status: DOWN
Tunnel if: Tunnel0

```

```

-----
HubMC2# show domain default master channels

```

```

-----
Channel Id: 8  Dst Site-Id: 10.2.11.11  Link Name: MPLS  DSCP: default [0] pfr-label: 0:0
| 2:30 [0x21E] TCs: 0
Channel Created: 03:19:14 ago
Provisional State: Initiated and open
Operational state: Available but unreachable
Channel to hub: FALSE
Interface Id: 11
Supports Zero-SLA: Yes
Muted by Zero-SLA: No
Estimated Channel Egress Bandwidth: 0 Kbps
Immitigable Events Summary:
  Total Performance Count: 0, Total BW Count: 0
ODE Stats Bucket Number: 1
  Last Updated   : 00:00:21 ago
  Packet Count   : 0
  Byte Count     : 0
  One Way Delay  : N/A
  Loss Rate Pkts : N/A
  Loss Rate Bytes: N/A
  Jitter Mean    : N/A
  Unreachable    : TRUE
ODE Stats Bucket Number: 2
  Last Updated   : 00:00:52 ago
  Packet Count   : 0
  Byte Count     : 0
  One Way Delay  : N/A
  Loss Rate Pkts : N/A
  Loss Rate Bytes: N/A
  Jitter Mean    : N/A
  Unreachable    : TRUE

```



```
TCA Statistics:
  Received:355 ; Processed:354 ; Unreach_rcvd:355
Latest TCA Bucket
Last Updated : 00:00:21 ago
Local unreachable TCA received(Check for stale TCA 00:00:09 later)
```

```
HubMC2# show domain default master site-capability device-capb path-id
```

```
Site pop id : 1
Site mc type : Transit
Border Address : 10.9.4.4
Service provider: MPLS path-id: 30 if_index: 11
Border Address : 10.9.5.5
Service provider: INET path-id: 40 if_index: 11
```

```
HubMC2# show domain default master site-prefix
```

```
Load for five secs: 0%/0%; one minute: 0%; five minutes: 0%
Time source is NTP, 11:28:29.421 CET Tue Mar 17 2015
```

```
Change will be published between 5-60 seconds
Next Publish 00:33:03 later
Prefix DB Origin: 10.9.3.3
Prefix Flag: S-From SAF; L-Learned; T-Top Level; C-Configured; M-shared
```

Site-id	Site-prefix	Last Updated	DC Bitmap	Flag
10.2.10.10	10.1.10.0/24	01:25:15 ago	0x0	S
10.2.11.11	10.1.11.0/24	01:25:19 ago	0x0	S
10.2.10.10	10.2.10.10/32	01:25:15 ago	0x0	S
10.2.11.11	10.2.11.11/32	01:25:19 ago	0x0	S
10.2.12.12	10.2.12.12/32	01:28:54 ago	0x0	S
10.8.3.3	10.8.3.3/32	01:28:47 ago	0x1	S
10.9.3.3	10.8.0.0/16	01:28:47 ago	0x5	C,M
10.8.3.3	10.8.0.0/16	01:28:47 ago	0x5	C,M
10.9.3.3	10.9.3.3/32	03:29:04 ago	0x4	L
10.9.3.3	10.9.0.0/16	01:28:47 ago	0x5	C,M
10.8.3.3	10.9.0.0/16	01:28:47 ago	0x5	C,M
255.255.255.255	*10.0.0.0/8	01:28:47 ago	0x1	S,T

```
HubMC2# show domain default master policy
```

```
Load for five secs: 0%/0%; one minute: 0%; five minutes: 0%
Time source is NTP, 11:31:10.977 CET Tue Mar 17 2015
```

```
class VOICE sequence 10
  path-preference MPLS fallback INET
  class type: Dscp Based
  match dscp ef policy custom
  priority 2 packet-loss-rate threshold 5.0 percent
```

Example: Configuring Transit Site Support

```

        priority 1 one-way-delay threshold 150 msec
        priority 2 byte-loss-rate threshold 5.0 percent

class VIDEO sequence 20
  path-preference MPLS fallback INET
  class type: Dscp Based
  match dscp af41 policy custom
    priority 2 packet-loss-rate threshold 5.0 percent
    priority 1 one-way-delay threshold 150 msec
    priority 2 byte-loss-rate threshold 5.0 percent
  match dscp cs4 policy custom
    priority 2 packet-loss-rate threshold 5.0 percent
    priority 1 one-way-delay threshold 150 msec
    priority 2 byte-loss-rate threshold 5.0 percent

class CRITICAL sequence 30
  path-preference MPLS fallback INET
  class type: Dscp Based
  match dscp af31 policy custom
    priority 2 packet-loss-rate threshold 10.0 percent
    priority 1 one-way-delay threshold 600 msec
    priority 2 byte-loss-rate threshold 10.0 percent
  Number of Traffic classes using this policy: 1

class DEFAULT0 sequence 100
  class type: Dscp Based
  match dscp default policy custom
    priority 2 packet-loss-rate threshold 5.0 percent
    priority 1 one-way-delay threshold 50 msec
    priority 3 jitter threshold 200000 usec
    priority 2 byte-loss-rate threshold 5.0 percent
  Number of Traffic classes using this policy: 1

class default
  match dscp all

```

```
-----
HubMC2# show domain default master discovered

```

```
-----
Load for five secs: 0%/0%; one minute: 0%; five minutes: 0%
Time source is NTP, 14:31:58.410 CET Tue Mar 17 2015

```

```
*** Domain MC DISCOVERED sites ***
```

```

Number of sites: 5
*Traffic classes [Performance based][Load-balance based]

Site ID: 255.255.255.255
Site Discovered:06:32:33 ago
Off-limits: Disabled
DSCP :default[0]-Number of traffic classes[0][0]
DSCP :af31[26]-Number of traffic classes[0][0]

Site ID: 10.8.3.3
Site Discovered:06:30:37 ago
Off-limits: Disabled
DSCP :default[0]-Number of traffic classes[0][0]
DSCP :af31[26]-Number of traffic classes[0][0]

Site ID: 10.2.10.10
Site Discovered:06:30:37 ago
Off-limits: Disabled

```

```

DSCP :default[0]-Number of traffic classes[1][0]
DSCP :af31[26]-Number of traffic classes[1][0]

Site ID: 10.2.11.11
Site Discovered:06:30:34 ago
Off-limits: Disabled
DSCP :default[0]-Number of traffic classes[0][0]
DSCP :af31[26]-Number of traffic classes[0][0]

Site ID: 10.2.12.12
Site Discovered:06:30:37 ago
Off-limits: Disabled
DSCP :default[0]-Number of traffic classes[0][0]
DSCP :af31[26]-Number of traffic classes[0][0]
    
```

BR94# **show domain default border status**

```

-----
**** Border Status ****

Instance Status: UP
Present status last updated: 06:39:21 ago
Loopback: Configured Loopback0 UP (10.9.4.4)
Master: 10.9.3.3
Master version: 2
Connection Status with Master: UP
MC connection info: CONNECTION SUCCESSFUL
Connected for: 06:39:15
Route-Control: Enabled
Asymmetric Routing: Disabled
Minimum Mask length: 28
Sampling: off
Minimum Requirement: Met
External Wan interfaces:
    Name: Tunnel100 Interface Index: 11 SNMP Index: 8 SP: MPLS path-id: 30 Status: DOWN
Zero-SLA: NO

Auto Tunnel information:

    Name:Tunnel0 if_index: 12
    Borders reachable via this tunnel: 10.9.5.5
    
```

BR94# **show domain default border site-prefix**

Prefix Flag: S-From SAF; L-Learned; T-Top Level; C-Configured; M-shared

Site-id	Site-prefix	Last Updated	DC Bitmap	Flag
10.2.10.10	10.1.10.0/24	00:36:58 ago	0x0	S
10.2.11.11	10.1.11.0/24	00:37:02 ago	0x0	S
10.2.10.10	10.2.10.10/32	00:36:58 ago	0x0	S
10.2.11.11	10.2.11.11/32	00:37:02 ago	0x0	S
10.2.12.12	10.2.12.12/32	00:40:37 ago	0x0	S
10.8.3.3	10.8.3.3/32	00:40:29 ago	0x1	S
10.9.3.3	10.8.0.0/16	00:38:40 ago	0x5	S,C,M
10.8.3.3	10.8.0.0/16	00:38:40 ago	0x5	S,C,M
10.9.3.3	10.9.3.3/32	00:38:40 ago	0x4	S
10.9.3.3	10.9.0.0/16	00:38:40 ago	0x5	S,C,M
10.8.3.3	10.9.0.0/16	00:38:40 ago	0x5	S,C,M

Example: Configuring Transit Site Support

```
255.255.255.255      *10.0.0.0/8      00:40:29 ago      0x1      S,T
```

```
R10# show domain default master channels dst-site-id 10.8.3.3
```

```
Legend: * (Value obtained from Network delay:)
```

```
Channel Id: 27 Dst Site-Id: 10.8.3.3 Link Name: INET DSCP: default [0] pfr-label: 0:20
| 0:0 [0x140000] TCs: 0
Channel Created: 01:16:34 ago
Provisional State: Initiated and open
Operational state: Available
Channel to hub: TRUE
Interface Id: 12
Supports Zero-SLA: Yes
Muted by Zero-SLA: No
Estimated Channel Egress Bandwidth: 5 Kbps
Immitigable Events Summary:
  Total Performance Count: 0, Total BW Count: 0
Site Prefix List
  10.8.3.3/32 (Active)
  10.8.0.0/16 (Active)
  10.9.0.0/16 (Standby)
ODE Stats Bucket Number: 1
  Last Updated : 00:00:24 ago
  Packet Count : 562
Byte Count : 47208
  One Way Delay : 71 msec*
  Loss Rate Pkts: 0.0 %
  Loss Rate Byte: 0.0 %
  Jitter Mean : 619 usec
  Unreachable : FALSE
ODE Stats Bucket Number: 2
  Last Updated : 00:00:54 ago
  Packet Count : 558
  Byte Count : 46872
  One Way Delay : 55 msec*
  Loss Rate Pkts: 0.0 %
  Loss Rate Byte: 0.0 %
  Jitter Mean : 556 usec
  Unreachable : FALSE
TCA Statistics:
  Received:133 ; Processed:133 ; Unreach_rcvd:0
Latest TCA Bucket
  Last Updated : 00:00:24 ago
  One Way Delay : 71 msec*
  Loss Rate Pkts: NA
  Loss Rate Byte: NA
  Jitter Mean : NA
  Unreachability: FALSE
.
.
.
```

```
R10# show domain default border status
```

```
Tue Mar 24 04:52:50.379
```

```
**** Border Status ****
```

```

Instance Status: UP
Present status last updated: 3d14h ago
Loopback: Configured Loopback0 UP (10.2.10.10)
Master: 10.2.10.10
Master version: 2
Connection Status with Master: UP
MC connection info: CONNECTION SUCCESSFUL
Connected for: 3d14h
Route-Control: Enabled
Asymmetric Routing: Disabled
Minimum Mask length: 28
Sampling: off
Minimum Requirement: Met
External Wan interfaces:
Name: Tunnel100 Interface Index: 14 SNMP Index: 8 SP: MPLS Status: UP Zero-SLA: NO Path-id
List: 0:10, 1:30
Name: Tunnel200 Interface Index: 15 SNMP Index: 9 SP: INET Status: UP Zero-SLA: NO Path-id
List: 0:20, 1:40

```

Auto Tunnel information:

```

Name:Tunnel0 if_index: 13
Borders reachable via this tunnel:

```

```

-----
R10# show domain default master status

```

```

-----
*** Domain MC Status ***

```

Master VRF: Global

```

Instance Type: Branch
Instance id: 0
Operational status: Up
Configured status: Up
Loopback IP Address: 10.2.10.10
Load Balancing:
Operational Status: Up
Max Calculated Utilization Variance: 1%
Last load balance attempt: never
Last Reason: Variance less than 20%
Total unbalanced bandwidth:
External links: 0 Kbps Internet links: 0 Kbps
Route Control: Enabled
Mitigation mode Aggressive: Disabled
Policy threshold variance: 20
Minimum Mask Length: 28
Minimum Requirement: Met

```

Borders:

```

IP address: 10.2.10.10
Version: 2

```

Connection status: CONNECTED (Last Updated 3d14h ago)

Interfaces configured:

```

Name: Tunnel100 | type: external | Service Provider: MPLS | Status: UP | Zero-SLA: NO
Number of default Channels: 0

```

Path-id list: 0:10 1:30

```

Name: Tunnel200 | type: external | Service Provider: INET | Status: UP | Zero-SLA: NO
Number of default Channels: 0

```

Example: Configuring Transit Site Support

```
Path-id list: 0:20 1:40
```

```
Tunnel if: Tunnel0
```

```
-----
R10# show domain default master site-capability 10.9.3.3 path-id
```

```
-----
Site id : 10.9.3.3
Site pop id : 1
Site mc type : Transit
Border Address : 10.9.4.4
Service provider: MPLS path-id: 30 if_index: 11
Border Address : 10.9.5.5
Service provider: INET path-id: 40 if_index: 11
-----
```

```
R10# show domain default master site-capability 10.8.3.3 path-id
```

```
-----
Site id : 10.8.3.3
Site pop id : 0
Site mc type : Hub
Border Address : 10.8.5.5
Service provider: INET path-id: 20 if_index: 11
Border Address : 10.8.4.4
Service provider: MPLS path-id: 10 if_index: 11
-----
```

```
R10# show domain default border channels service-provider INET
```

```
-----
Tue Mar 24 04:53:39.968
```

```
Border Smart Probe Stats:
```

```
Smart probe parameters:
Source address used in the Probe: 10.2.10.10
Unreach time: 1000 ms
Probe source port: 18000
Probe destination port: 19000
Interface Discovery: ON
Probe freq for channels with traffic :10 secs
Discovery Probes: OFF
Number of transit probes consumed :0
Number of transit probes re-routed: 0
DSCP's using this: [0] [1] [2] [3] [4] [5] [6] [7] [8] [9] [10] [11] [12] [13] [14] [15]
[16] [17] [18] [19] [20] [21] [22] [23] [24] [25] [26] [27] [28] [29] [30] [31] [32] [33]
[34] [35] [36] [37] [38] [39] [40] [41] [42] [43] [44] [45] [46] [47] [48] [49] [50] [51]
[52] [53] [54] [55] [56] [57] [58] [59] [60] [61] [62] [63] [64]
All the other DSCPs use the default interval: 10 secs
```

```
Channel id: 6
Channel create time: 3d14h ago
Site id : 10.8.3.3
DSCP : default[0]
Service provider : INET
Pfr-Label : 0:20 | 0:0 [0x140000]
```

```
exit path-id: 0
Exit path-id sent on wire: 0
Number of Probes sent : 5657983
Number of Probes received : 5823008
Last Probe sent : 00:00:00 ago
Last Probe received : 00:00:00 ago
Channel state : Discovered and open
Channel next_hop : 10.0.200.85
RX Reachability : Reachable
TX Reachability : Reachable
Channel is sampling 0 flows
Channel remote end point: 10.0.200.85
Channel to hub: TRUE
Version: 3
Supports Zero-SLA: Yes
Muted by Zero-SLA: No
Probe freq with traffic : 1 in 10000 ms
.
.
.
```

```
-----
R10# show ip nhrp nhs
-----
```

```
Legend: E=Expecting replies, R=Responding, W=Waiting
```

```
Tunnel100:
```

```
10.0.100.84 RE NBMA Address: 172.16.84.4 priority = 0 cluster = 0
10.0.100.94 RE NBMA Address: 172.16.94.4 priority = 0 cluster = 0
```

```
Tunnel200:
```

```
10.0.200.85 RE NBMA Address: 172.16.85.5 priority = 0 cluster = 0
10.0.200.95 RE NBMA Address: 172.16.95.5 priority = 0 cluster = 0
-----
```




CHAPTER 5

PfRv3 Path of Last Resort

The PfRv3 path of last resort feature allows the traffic to be routed to the path of last resort.

- [Feature Information for PfRv3 Path of Last Resort, on page 123](#)
- [Restrictions for PfRv3 Path of Last Resort, on page 123](#)
- [Information About PfRv3 Path of Last Resort, on page 124](#)
- [How to Configure PfRv3 Path of Last Resort, on page 124](#)

Feature Information for PfRv3 Path of Last Resort

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Table 14: Feature Information for PfRv3 Path of Last Resort

Feature Name	Releases	Feature Information
PfRv3 Path of Last Resort	15.5(3)M	The PfRv3 Path of Last Resort is a route used by the device when a service provider cannot be reached or the exits are out of bandwidth. The following commands were modified or added by this feature: domain path isp-name, show domain default vrf border, show domain default vrf master.

Restrictions for PfRv3 Path of Last Resort

- Path of last resort supports probing per interface and not per channel.
- Path of last resort is not supported on multi next hop interfaces.

Information About PfRv3 Path of Last Resort

PfRv3 Path of Last Resort

The PfRv3 Path of Last Resort feature provides the ability to designate a service provider as a path of last resort such that when the primary and fallback service providers become unavailable due to unreadability or out of bandwidth situations, traffic is routed over the path of last resort service provider. This feature is used for metered links where data is charged on a per-usage basis and is used when no other service providers are available.

The following are the different supported modes:

- Standby mode—No traffic classes are currently routed over the path of last resort service provider.
- Active mode—Traffic classes are currently routed over the path of last resort service provider.
- Disabled mode—The path of last resort is not enabled.

The channels of the path of last resort are inactive when it is in standby mode. Once the path of last resort is active, smart probes are sent only on DSCP 0 (Zero SLA) to conserve bandwidth. In addition, smart probe frequency is reduced to 1 packet every 10 seconds from 20 packets per seconds, unreachable detection are extended to 60 seconds.

How to Configure PfRv3 Path of Last Resort

Configuring Policy for Path of Last Resort

To configure policy for path of last resort, perform the steps below.

SUMMARY STEPS

1. domain default

DETAILED STEPS

	Command or Action	Purpose
Step 1	domain default Example: <pre>domain default vrf default master hub class foo seq 1 match dscp ef policy voice path-preference ISP1 fallback ISP2 path-last-resort ISP4</pre>	The keyword specifies that the traffic for this policy is routed over the path of last resort when the primary and fallback service providers are unavailable.

Configuring Path of Last Resort

To configure path of last resort, perform the steps below.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface tunnel** *tunnel-number*
4. **domain path** *isp-name* [**internet-bound** | **path-id** | **path-last-resort** | **zero-sla**]

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	interface tunnel <i>tunnel-number</i> Example: Device(config)# interface tunnel 100	Enters interface configuration mode.
Step 4	domain path <i>isp-name</i> [internet-bound path-id path-last-resort zero-sla] Example: Device(config-if)# domain path ISP1 path-last-resort	Specifies a service provider for the interface. • internet-bound —Configures an internet bound interface. • path-id —Configures service provider's path-id for the interface. • path-last-resort —Configures the interface to be a path of a last resort. • zero-sla —Configures Zero SLA for the interface. Note You can configure multiple Internet Service Providers (ISPs). If you are defining a specific domain name for an ISP (for example, domain_abc), you must specify the same domain name while configuring the ISP paths.

Verifying PfRv3 Path of Last Resort

The **show** commands can be entered in any order.

SUMMARY STEPS

1. **show domain default vrf *vrf-name* master status**
2. **show domain default vrf *vrf-name* border status**
3. **show domain default vrf *vrf-name* master channels**
4. **show domain default vrf *vrf-name* border channels**
5. **show domain default vrf *vrf-name* master policy**

DETAILED STEPS

Step 1 **show domain default vrf *vrf-name* master status**

Displays the master status of the hub border routers.

Example:

```
Device# show domain default vrf vrf1 master status

Borders:
  IP address: 10.204.1.4
  Version: 2
  Connection status: CONNECTED (Last Updated 00:59:16 ago )
  Interfaces configured:
    Name: Tunnel20 | type: external | Service Provider: ISP2 | Status: UP | Zero-SLA: NO | Path of
Last Resort: Disabled
    Number of default Channels: 0
    Tunnel if: Tunnell
    IP address: 10.203.1.3
    Version: 2
    Connection status: CONNECTED (Last Updated 00:59:16 ago )
    Interfaces configured:
      Name: Tunnell10 | type: external | Service Provider: ISP1 | Status: UP | Zero-SLA: YES | Path of
Last Resort: Standby
      Number of default Channels: 0
      Tunnel if: Tunnell
```

Step 2 **show domain default vrf *vrf-name* border status**

Displays the master status of the hub border routers.

Example:

```
Device# show domain default vrf vrf1 border status

-----
**** Border Status ****
Instance Status: UP
Present status last updated: 01:01:42 ago
Loopback: Configured Loopback1 UP (30.209.1.9)
Master: 30.209.1.9
Master version: 2
Connection Status with Master: UP
MC connection info: CONNECTION SUCCESSFUL
Connected for: 01:01:42
Route-Control: Enabled
Asymmetric Routing: Disabled
Minimum Mask length: 28
Sampling: off
Minimum Requirement: Met
External Wan interfaces:
  Name: Tunnell10 Interface Index: 16 SNMP Index: 13 SP: ISP1 path-id: 0 Status: UP Zero-SLA: YES
```

```
Path of Last Resort: Standby Path-id List: 0:0
  Name: Tunnel20 Interface Index: 18 SNMP Index: 15 SP: ISP2 Status: UP Zero-SLA: NO Path of Last
Resort: Disabled Path-id List: 0:0
```

Auto Tunnel information:

```
Name:Tunnell if_index: 21
  Borders reachable via this tunnel:
```

Step 3 **show domain default vrf *vrf-name* master channels**

Displays the master status of the hub master controller.

Example:

```
Device# show domain default vrf vrf1 master channels
```

```
Channel Id: 9 Dst Site-Id: 30.209.1.9 Link Name: ISP1 DSCP: af41 [34] pfr-label: 0:0 | 0:0 [0x0]
TCs: 0
  Channel Created: 00:57:15 ago
  Provisional State: Initiated and open
  Operational state: Available
  Channel to hub: FALSE
  Interface Id: 16
  Supports Zero-SLA: Yes
  Muted by Zero-SLA: Yes
Muted by Path of Last Resort: Yes
  Estimated Channel Egress Bandwidth: 0 Kbps
  Immitigable Events Summary:
    Total Performance Count: 0, Total BW Count: 0
  ODE Stats Bucket Number: 1
    Last Updated : 00:56:15 ago
    Packet Count : 505
    Byte Count : 42420
    One Way Delay : 229 msec*
    Loss Rate Pkts: 0.0 %
    Loss Rate Byte: 0.0 %
    Jitter Mean : 535 usec
    Unreachable : FALSE
  TCA Statistics:
    Received:1 ; Processed:1 ; Unreach_rcvd:0
  Latest TCA Bucket
    Last Updated : 00:56:15 ago
    One Way Delay : 229 msec*
    Loss Rate Pkts: NA
    Loss Rate Byte: NA
    Jitter Mean : NA
    Unreachability: FALSE
```

Step 4 **show domain default vrf *vrf-name* border channels**

Displays the information of border router channels at the hub site.

Example:

```
Device# show domain default vrf vrf1 border channels
```

```
Channel id: 2
  Channel create time: 00:46:02 ago
  Site id : 255.255.255.255
  DSCP : default[0]
  Service provider : ISP1
```

```

Pfr-Label : 0:0 | 0:0 [0x0]
exit path-id: 0
Exit path-id sent on wire: 0
Number of Probes sent : 0
Number of Probes received : 0
Last Probe sent : 00:46:02 ago
Last Probe received : - ago
Channel state : Initiated and open
Channel next_hop : 0.0.0.0
RX Reachability : Initial State
TX Reachability : Reachable
Channel is sampling 0 flows
Channel remote end point: 0.0.0.0
Channel to hub: FALSE
Version: 0
Supports Zero-SLA: No
Muted by Zero-SLA: No
Muted by Path of Last Resort: Yes
Probe freq with traffic : 1 in 10000 ms

```

Step 5 **show domain default vrf *vrf-name* master policy**

Displays the status of the master policy.

Example:

```

Device# show domain default vrf vrf1 master policy

class VOICE sequence 10
  path-last-resort ISPl
  class type: Dscp Based
  match dscp ef policy custom
  priority 1 one-way-delay threshold 200 msec
  Number of Traffic classes using this policy: 2

```



CHAPTER 6

PfRv3 Probe Reduction

This document provides information about the PfRv3 Probe Reduction feature that allows reducing traffic probe on channels that do not carrying any traffic.

- [Feature Information for PfRv3 Probe Reduction, on page 129](#)
- [Prerequisites for PfRv3 Probe Reduction, on page 129](#)
- [Information About PfRv3 Probe Reduction, on page 129](#)
- [How to Configure PfRv3 Probe Reduction, on page 130](#)
- [Configuration Examples for PfRv3 Probe Reduction, on page 132](#)
- [Additional References for PfRv3 Probe Reduction, on page 132](#)

Feature Information for PfRv3 Probe Reduction

Table 15: Feature Information for PfRv3 Probe Reduction

Feature Name	Releases	Feature Information
PfRv3 Probe Reduction	15.6(3)M	This document provides information about the PfRv3 Probe Reduction feature that allows reducing traffic probe on channels that do not carrying any traffic. The following command was introduced: smart-probes burst

Prerequisites for PfRv3 Probe Reduction

Information About PfRv3 Probe Reduction

The PfRv3 Probe Reduction feature allows reducing traffic probe on channels that do not carry any traffic. Probing is used to compute important metrics such as reachability, one-way delay (OWD), jitter, and loss on channels that do not have user traffic. It helps PfRv3 algorithm to choose the best channel to use for a given traffic class.

A domain level parameter is defined to store the probing information. You need to store two sets of parameters; general monitor and quick monitor. In other words, one can specify the number of packets to be sent in a probe burst and the interval between such bursts.

Smart probe are of three types:

- **Active Channel Probe**—Active channel probe is sent out to measure network delay if no probe is sent out for past 10 seconds interval.
- **Unreachable Probe**—Unreachable probe is used to detect channel reachability when there is no traffic send out.
- **Burst Probe**—Burst probes are used to calculate delay, loss, jitter on a channel that is not carrying active user traffic.

How to Configure PfRv3 Probe Reduction

Configuring PfRv3 Probe Reduction

You can perform this task on a hub master or a border device.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **domain default**
4. Do one of the following:
 - **master hub**
 - **border**
5. **advanced**
6. **smart-probes burst [quick] *number-of-packets* packets every *interval* seconds**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none">• Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	domain default Example: Device(config)# domain default	Enters domain configuration mode.

	Command or Action	Purpose
Step 4	<p>Do one of the following:</p> <ul style="list-style-type: none"> • master hub • border <p>Example: Device(config-domain)# master hub</p> <p>Example: Device(config-domain)# border</p>	<p>Configures the device as a master hub and enters master controller configuration mode.</p> <p>Configures the device as the border and enters border configuration mode.</p> <p>Note If you select border configuration, it overwrites the master configuration.</p>
Step 5	<p>advanced</p> <p>Example: Device(config-domain-mc)# advanced</p> <p>Example: Device(config-domain-br)# advanced</p>	Enters advanced configuration mode.
Step 6	<p>smart-probes burst [quick] <i>number-of-packets</i> packets every <i>interval</i> seconds</p> <p>Example: Device(config-domain-mc-advanced)# smart-probe burst 10 packets every 20 seconds</p> <p>Example: Device(config-domain-br-advanced)# smart-probe burst quick 10 packets every 1 seconds</p>	<p>Specifies the number of packets to be sent in a probe burst and the interval between the bursts. The default values are as follows:</p> <ul style="list-style-type: none"> • 1 packet every 1 second for default monitor • 20 packets every 1 second for quick monitor

Verifying PfRv3 Probe Reduction

SUMMARY STEPS

1. **show domain {default | *domain-name*} [vrf *vrf-name*] {master | border} status**

DETAILED STEPS

show domain {default | *domain-name*} [vrf *vrf-name*] {master | border} status

Use this command to verify the configuration.

Example:

```
Router# show domain default vrf green master status
```

```
Smart Probe Profile:
  General Monitor:
    Current Provision Level: Master Hub
    Master Hub:
      Packets per burst: 10
      Interval(secs): 20
  Quick Monitor:
    Current Provision Level: Master Hub
```

```

Master Hub:
  Packets per burst: 10
  Interval(secs): 1
Smart Probe Inter-Packet Gap (ms) : 16
Smart Probe Timer Wheel Granularity (ms): 8

```

Configuration Examples for PfRv3 Probe Reduction

Example: PfRv3 Probe Reduction

```

domain default
master hub
advanced
  smart-probe burst 10 packets every 20 seconds
  smart-probe burst quick 10 packets every 1 seconds

```

Additional References for PfRv3 Probe Reduction

Related Documents

Related Topic	Document Title
Cisco IOS commands	Cisco IOS Master Command List, All Releases
Performance Routing Version 3 commands	Cisco IOS Performance Routing Version 3 Command Reference



CHAPTER 7

PfRv3 Remote Prefix Tracking

Performance Routing Version 3 (PfRv3) is an intelligent-path control mechanism for improving application delivery and WAN efficiency. The PfRv3 Remote Prefix Tracking feature enhances networks running Performance Routing Version 3 (PfRv3) to learn the prefix of a remote device from the Routing Information Base (RIB) table.

- [Feature Information for PfRv3 Remote Prefix Tracking, on page 133](#)
- [Information About PfRv3 Remote Prefix Tracking, on page 134](#)
- [How to Display Site Prefixes, on page 138](#)
- [Additional References for PfRv3 Remote Prefix Tracking, on page 143](#)

Feature Information for PfRv3 Remote Prefix Tracking

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Table 16: Feature Information for PfRv3 Remote Prefix Tracking

Feature Name	Releases	Feature Information
PfRv3 Remote Prefix Tracking	Cisco IOS release 3.16.6, 15.6M2, 15.5.3M6, 15.7M, 16.3.5, and Cisco IOS XE Everest 16.6.1.	Performance Routing Version 3 (PfRv3) is an intelligent-path control mechanism for improving application delivery and WAN efficiency. The PfRv3 Remote Prefix Tracking feature enhances networks running Performance Routing Version 3 (PfRv3) to learn the prefix of a remote device from the Routing Information Base (RIB) table. The following command was modified: show domain default vrf .

Information About PfRv3 Remote Prefix Tracking

Site Prefixes Database

Site Prefixes are LAN side prefixes owned by each site. The site prefix database is central to the site concept in PfRv3. Site prefix database reside on the master controller.

- The master site learns the remote site prefix through SAF advertised by remote MC. Master site learns the local site prefix from the local borders. The border learns the prefix from RIB and sends the prefix learned to the local master
- The border site prefix database is populated by SAF messages published by all the remote site master and local site master.
- By default, MCs and BRs delete site prefixes every 24 hours.


Learning Local Site Prefixes

Border routers collect the prefix from the RIB table and send it to the local master controller. After receiving prefixes from a border router, the local master controller filters prefixes as per the following criteria.

1. If a prefix is learned on a tunnel interface, the prefix is marked remote and not added to local LAN list.
2. If a prefix is learned from NHRP, the prefix is not added to LAN list.
3. If a prefix is learned on a physical interface of the tunnel interface. the prefix is not added to LAN list.
4. If an enterprise prefix is configured on the hub and the prefix is part of the enterprise prefix list configured on hub, the branch master adds the prefix from the RIB table to the LAN list.

The prefixes in the LAN list are added to the site prefix database as local site prefix list.


Figure 8: Learning Local Site Prefixes

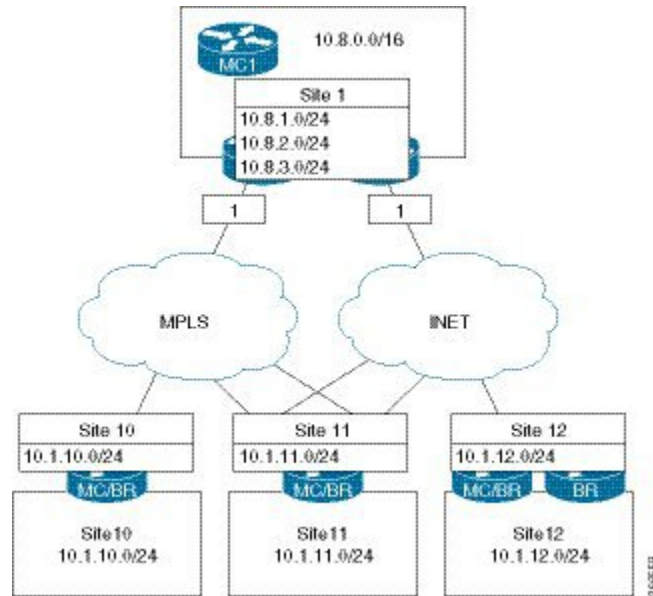

Learning Remote Site Prefixes

In order to learn from advertisements via the peering infrastructure from remote peers, every MC and BR subscribes to the peering service for the subservice of site prefix. MCs publish and receive site prefixes. BRs only receive site prefixes. MC learns prefixes from the border and filters the prefixes as explained in the previous section and publishes the prefix to all sites. This message is received by all MCs and BRs that subscribe to the peering service. The message is decoded and added to the site prefix databases at those MCs and BRs.

Figure 9: Pfrv3-discovery-site-prefix.png

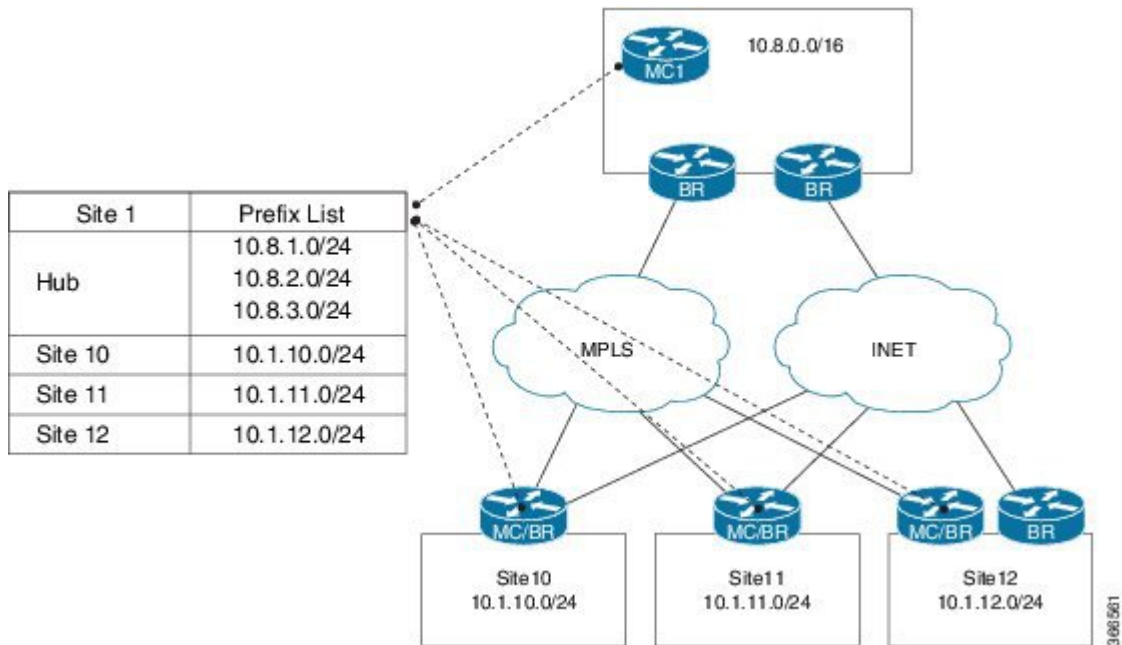

PfRv3 Remote Prefix Tracking via Egress Flow

Prior to Cisco IOS XE Everest 16.6.1, the site prefix was learnt via the egress flow on the WAN interface. The prefix thus, learnt is published to all remote sites in the network using the EIGRP SAF message. If a remote site does not receive a new SAF message within 24 hours, the prefix is removed from the local-prefix database. If the routing is updated within 24 hours, corresponding prefix table will not be updated. Since, the prefix is learned from the egress traffic, sometimes-wrong prefixes are learnt due to redirected traffic. These wrongly learnt prefixes are not cleaned up until the 24 hour age out time.

Additionally, the prefix reachability is not tracked per channel. For example, if the prefix belongs to a specific site, it is assumed that prefix is reachable through all the channels available for that site. This results in a traffic blackhole when the prefix is not reachable through the selected channel.

PfRv3 Remote Prefix Tracking via RIB table


The PfRv3 Remote Prefix Tracking feature prevents the above scenarios by learning the local site prefixes from the RIB table instead of the egress flow. The prefixes are advertised to the remote sites. Changes to RIB table are tracked and are accordingly notified to all remote sites. Therefore, all sites are updated automatically with the precise site prefix information. Remote site tracks the prefix learnt via the WAN interface. While controlling the traffic, remote sites validate the reachability of the prefix on all channels available for a site.

There is no specific configuration required for this feature. You only need to configure the WAN interfaces.

How Site Prefix is Learnt?

The following workflow illustrates the process of how site prefix is learnt.

Figure 10: Site Prefix Learning Workflow

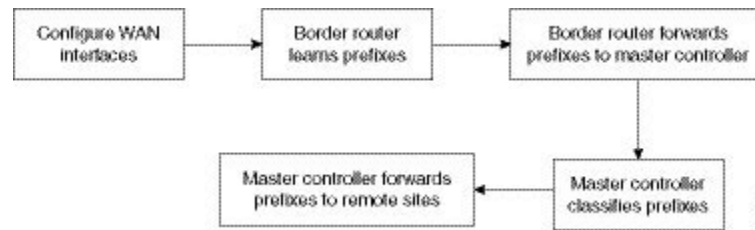

WAN Interfaces Configuration

You must configure the WAN interfaces on a border router in a branch using the **domain***domain-name* **dynamic-path** command. For more information, see “[Configuring Branch Border Router](#)” in the *Performance Routing Version 3* chapter.

Prefix Learning on Border Router

On initialization, the border device learns the entire prefix from the RIB table and stores in the local prefix database, where the information is classified per VRF. Any changes in the RIB database, such as addition or deletion of prefixes, are accounted in the prefix database as appropriate. Prefixes learned from the RIB on the local border are forwarded to the local master controller. The prefix information in the border device can be viewed using the **show domain default vrf vrf name border route-import** command.

Forwarding the Prefix to Master Controller

Master controller learns about a new prefix added or removed in the RIB table from the border device.

On a branch site, when the WAN interfaces are configured using the **domain***domain-name* **dynamic-path** command., the wan interface details are shared with the master controller by all border routers in a site. The master controller classifies this prefix information as WAN or LAN prefix, as appropriate.

On a hub site, The prefixes are learnt and classified similar to a branch site. The only difference is the command used to configure the WAN interface, which is **domain path service-provider-name path-id number** command.



Note It is mandatory to configure prefixes on the hub and the transit hub. It is also mandatory to configure the **domain** *domain-name* **dynamic-path** in branch tunnel interface.

Prefix Classification by Master Controller

Master controller filters the prefix using the criteria described in the *Learning Local Site Prefixes* section and updates the local prefix database. The local prefix database is published to all the subscribers using the EIGRP SAF message. The prefix information in the border device can be viewed using the following commands:

- **show domain** {*domain-name* | **default**} **vrf vrf-name master route-import local all**
- **show domain** {*domain-name* | **default**} **vrf vrf-name master route-import border border-ip**
- **show domain** {*domain-name* | **default**} **vrf vrf-name master route-import local**
- **show domain** {*domain-name* | **default**} **vrf vrf-name master route-import remote**

- **show domain** {*domain-name* | *default*} **vrf** *vrf-name* **border route-import**
- **show domain** {*domain-name* | *default*} **vrf** *vrf-name* **border local-prefix interface** *interface-name*

Path Preference

When a master controller receives prefixes from a border router, the master controller evaluates the traffic classes to a device, whose prefixes are listed in the RIB table and performs a policy decision to select a channel.

A channel is added to a channel list of a traffic class when a device associated with a prefix is reachable. The master controller decides on a path to a device based on the reachability of device (with a prefix in the RIB) on a channel. Prefixes are validated as follows:

- The list of interfaces on which prefixes are reachable is obtained from the prefix database and the prefix is verified for reachability via the same interface as the channel interface.
- A list of routes is obtained for a prefix that is reachable via an interface.

The channel is verified for the next hop address and if the next hop matches the appropriate prefix route. If the parent route of a device pertaining to a prefix matches the channel next hop, it indicates that the device with the prefix is reachable through a channel. If prefixes cannot be reached on a channel, a syslog message is displayed.



Note Maximum secondary paths must be configured on the border devices using the maximum-paths command so that prefixes are reachable. This command are enabled in the EIGRP or BGP router configuration mode.

How to Display Site Prefixes

Displaying Site Prefixes Learnt By a Border Router

SUMMARY STEPS

1. **show domain** *domain-name* **vrf** *vrf-name* **border site-prefix**
2. **show domain default vrf** *vrf name* **border route-import**
3. **show domain default vrf** *vrf name* **border route-import interface**
4. **show monitor event-trace pfrv3 all**

DETAILED STEPS

Step 1 **show domain** *domain-name* **vrf** *vrf-name* **border site-prefix**

Use this command to verify the reachability of the prefix on all channels.

Step 2 **show domain default vrf** *vrf name* **border route-import**

Use this command to view the prefix information learnt by a border device from the RIB table.

Example:

```
B1MCBR# show domain default vrf green border route-import
```

```
Codes: L - local, C - connected, S - static, R - RIP, M - mobile, B - BGP
D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
E1 - OSPF external type 1, E2 - OSPF external type 2
i - IS-IS, su - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
ia - IS-IS inter area, * - candidate default, U - per-user static route
o - ODR, P - periodic downloaded static route, H - NHRP, l - LISP
a - application route
+ - replicated route, % - next hop override, p - overrides from Pfr
```

Proto	Prefix	Location	Next-Hop	Index	Interface	In-RIB
L	10.20.0.1/32	Local	0.0.0.0	29	Ethernet0/2.30	YES
C	10.20.0.0/24	Local	0.0.0.0	29	Ethernet0/2.30	YES
L	10.20.1.1/32	Local	0.0.0.0	25	Ethernet0/1.30	YES
C	10.20.1.0/24	Local	0.0.0.0	25	Ethernet0/1.30	YES
D	10.20.2.0/24	Local	10.20.0.2	29	Ethernet0/2.30	YES
L	51.1.0.4/32	Local	0.0.0.0	24	Tunnel10	YES
C	51.1.0.0/16	Local	0.0.0.0	24	Tunnel10	YES
D	52.1.0.0/16	Local	10.20.0.2	29	Ethernet0/2.30	YES
C	100.20.1.1/32	Local	0.0.0.0	22	Loopback1	YES
D	100.20.2.1/32	Local	10.20.0.2	29	Ethernet0/2.30	YES
S	100.20.3.1/32	Local	10.20.0.3	29	Ethernet0/2.30	YES

Step 3 `show domain default vrf vrfname border route-import interface`

Use this command to view the prefix information associated with an interface.

Example:

```
B1MCBR# show domain default vrf green border route-import interface Loopback1
```

```
Codes: L - local, C - connected, S - static, R - RIP, M - mobile, B - BGP
D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
E1 - OSPF external type 1, E2 - OSPF external type 2
i - IS-IS, su - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
ia - IS-IS inter area, * - candidate default, U - per-user static route
o - ODR, P - periodic downloaded static route, H - NHRP, l - LISP
a - application route
+ - replicated route, % - next hop override, p - overrides from Pfr
```

Proto	Prefix	Location	Next-Hop	Index	Interface	In-RIB
C	100.20.1.1/32	Local	0.0.0.0	22	Loopback1	YES

Step 4 `show monitor event-trace pfrv3 all`

Enables debugging by collecting trace.

Displaying Site Prefixes Learnt By a Master Controller

SUMMARY STEPS

1. `show domain default vrf vrfname master route-import`
2. `show domain default vrf vrfname master route-import interface`
3. `show domain default vrf vrfname master local-prefix`

DETAILED STEPS

Step 1 show domain default vrf *vrf name* master route-import

Use this command to view the prefix information learnt by a master controller.

Example:

```
B1MCCR# show domain default vrf green master route-import all
```

```
Codes: L - local, C - connected, S - static, R - RIP, M - mobile, B - BGP
       D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, su - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
       ia - IS-IS inter area, * - candidate default, U - per-user static route
       o - ODR, P - periodic downloaded static route, H - NHRP, l - LISP
       a - application route
       + - replicated route, % - next hop override, p - overrides from PFR
```

Enterprise Prefix List:

Prefix: 100.20.0.0, Mask: 16

Prefix: 100.30.0.0, Mask: 16

Prefix: 100.0.0.0, Mask: 8

Proto	Prefix	IF-Role	Location In-RIB	BR-IP	Next-Hop	Index	Interface
B	10.10.1.0/24		Remote	100.20.1.1	10.20.1.2	25	Ethernet0/1.30
	WAN	YES					
B	10.10.2.0/24		Local	100.20.2.1	10.20.2.2	25	Ethernet0/1.32
	LAN	YES					
B	10.10.3.0/24		Remote	100.20.1.1	10.20.1.2	25	Ethernet0/1.30
	WAN	YES					
B	10.10.4.0/24		Local	100.20.2.1	10.20.2.2	25	Ethernet0/1.32
	LAN	YES					
B	10.15.1.0/24		Remote	100.20.1.1	10.20.1.2	25	Ethernet0/1.30
	WAN	YES					
B	10.15.2.0/24		Local	100.20.2.1	10.20.2.2	25	Ethernet0/1.32
	LAN	YES					
L	10.20.0.1/32		Local	100.20.1.1	0.0.0.0	29	Ethernet0/2.30
	LAN	YES					
L	10.20.0.2/32		Local	100.20.2.1	0.0.0.0	28	Ethernet0/2.30
	LAN	YES					
C	10.20.0.0/24		Local	100.20.1.1	0.0.0.0	29	Ethernet0/2.30
	LAN	YES					
C	10.20.0.0/24		Local	100.20.2.1	0.0.0.0	28	Ethernet0/2.30
	LAN	YES					
L	10.20.1.1/32		Remote	100.20.1.1	0.0.0.0	25	Ethernet0/1.30
	WAN	YES					
C	10.20.1.0/24		Remote	100.20.1.1	0.0.0.0	25	Ethernet0/1.30
	WAN	YES					
D	10.20.1.0/24		Remote	100.20.2.1	10.20.0.1	28	Ethernet0/2.30
	LAN	YES					
L	10.20.2.1/32		Local	100.20.2.1	0.0.0.0	25	Ethernet0/1.32
	LAN	YES					
D	10.20.2.0/24		Local	100.20.1.1	10.20.0.2	29	Ethernet0/2.30
	LAN	YES					
C	10.20.2.0/24		Local	100.20.2.1	0.0.0.0	25	Ethernet0/1.32
	LAN	YES					
B	10.30.1.0/24		Remote	100.20.1.1	10.20.1.2	25	Ethernet0/1.30
	WAN	YES					
B	10.30.2.0/24		Local	100.20.2.1	10.20.2.2	25	Ethernet0/1.32

```

LAN      YES
L  51.1.0.4/32 Remote  100.20.1.1  0.0.0.0  24  Tunnel10
WAN      YES
C  51.1.0.0/16 Remote  100.20.1.1  0.0.0.0  24  Tunnel10
WAN      YES

```

B1MCBR# show domain default vrf green master route-import local

Codes: L - local, C - connected, S - static, R - RIP, M - mobile, B - BGP
D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
E1 - OSPF external type 1, E2 - OSPF external type 2
i - IS-IS, su - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
ia - IS-IS inter area, * - candidate default, U - per-user static route
o - ODR, P - periodic downloaded static route, H - NHRP, l - LISP
a - application route
+ - replicated route, % - next hop override, p - overrides from PFR

Enterprise Prefix List:
Prefix: 100.20.0.0, Mask: 16
Prefix: 100.30.0.0, Mask: 16
Prefix: 100.0.0.0, Mask: 8

Proto	Prefix	Location	BR-IP	Next-Hop	Index	Interface
	IF-Role	In-RIB				
L	10.20.0.1/32	Local	100.20.1.1	0.0.0.0	29	Ethernet0/2.30
	LAN	YES				
C	10.20.0.0/24	Local	100.20.1.1	0.0.0.0	29	Ethernet0/2.30
	LAN	YES				
C	10.20.0.0/24	Local	100.20.2.1	0.0.0.0	28	Ethernet0/2.30
	LAN	YES				
D	10.20.2.0/24	Local	100.20.1.1	10.20.0.2	29	Ethernet0/2.30
	LAN	YES				
C	10.20.2.0/24	Local	100.20.2.1	0.0.0.0	25	Ethernet0/1.32
	LAN	YES				
C	100.20.1.1/32	Local	100.20.1.1	0.0.0.0	22	Loopback1
	LAN	YES				
D	100.20.1.1/32	Local	100.20.2.1	10.20.0.1	28	Ethernet0/2.30
	LAN	YES				
D	100.20.2.1/32	Local	100.20.1.1	10.20.0.2	29	Ethernet0/2.30
	LAN	YES				
C	100.20.2.1/32	Local	100.20.2.1	0.0.0.0	23	Loopback1
	LAN	YES				
S	100.20.3.1/32	Local	100.20.1.1	10.20.0.3	29	Ethernet0/2.30
	LAN	YES				

B1MCBR# show domain default vrf green master route-import remote

Codes: L - local, C - connected, S - static, R - RIP, M - mobile, B - BGP
D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
E1 - OSPF external type 1, E2 - OSPF external type 2
i - IS-IS, su - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
ia - IS-IS inter area, * - candidate default, U - per-user static route
o - ODR, P - periodic downloaded static route, H - NHRP, l - LISP
a - application route
+ - replicated route, % - next hop override, p - overrides from PFR

Enterprise Prefix List:
Prefix: 100.20.0.0, Mask: 16
Prefix: 100.30.0.0, Mask: 16
Prefix: 100.0.0.0, Mask: 8

Proto	Prefix	Location	BR-IP	Next-Hop	Index	Interface
-------	--------	----------	-------	----------	-------	-----------

Displaying Site Prefixes Learnt By a Master Controller

	IF-Role	In-RIB					
L	10.20.1.1/32 WAN	Remote YES	100.20.1.1	0.0.0.0	25	Ethernet0/1.30	
C	10.20.1.0/24 WAN	Remote YES	100.20.1.1	0.0.0.0	25	Ethernet0/1.30	
L	51.1.0.4/32 WAN	Remote YES	100.20.1.1	0.0.0.0	24	Tunnel10	
C	51.1.0.0/16 WAN	Remote YES	100.20.1.1	0.0.0.0	24	Tunnel10	
D	52.1.0.0/16 LAN	Remote NO	100.20.1.1	10.20.0.2	29	Ethernet0/2.30	
D	52.1.0.0/16 WAN	Remote YES	100.20.1.1	51.1.0.3	24	Tunnel10	
B	10.10.1.0/24 WAN	Remote YES	100.20.1.1	10.20.1.2	25	Ethernet0/1.30	
B	10.10.3.0/24 WAN	Remote YES	100.20.1.1	10.20.1.2	25	Ethernet0/1.30	
B	10.15.1.0/24 WAN	Remote YES	100.20.1.1	10.20.1.2	25	Ethernet0/1.30	
B	10.30.1.0/24 WAN	Remote YES	100.20.1.1	10.20.1.2	25	Ethernet0/1.30	
D	100.10.0.0/16 LAN	Remote NO	100.20.1.1	10.20.0.2	29	Ethernet0/2.30	
D	100.10.0.0/16 WAN	Remote YES	100.20.1.1	51.1.0.2	24	Tunnel10	

B1MCBR# show domain default vrf green master route-import border 100.20.1.1

Codes: L - local, C - connected, S - static, R - RIP, M - mobile, B - BGP
 D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
 N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
 E1 - OSPF external type 1, E2 - OSPF external type 2
 i - IS-IS, su - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
 ia - IS-IS inter area, * - candidate default, U - per-user static route
 o - ODR, P - periodic downloaded static route, H - NHRP, l - LISP
 a - application route
 + - replicated route, % - next hop override, p - overrides from PFR

Enterprise Prefix List:

Prefix: 100.20.0.0, Mask: 16

Prefix: 100.30.0.0, Mask: 16

Prefix: 100.0.0.0, Mask: 8

Proto	Prefix	Location	BR-IP	Next-Hop	Index	Interface
	IF-Role	In-RIB				
L	10.20.0.1/32 LAN	Local YES	100.20.1.1	0.0.0.0	29	Ethernet0/2.30
C	10.20.0.0/24 LAN	Local YES	100.20.1.1	0.0.0.0	29	Ethernet0/2.30
L	10.20.1.1/32 WAN	Remote YES	100.20.1.1	0.0.0.0	25	Ethernet0/1.30
C	10.20.1.0/24 WAN	Remote YES	100.20.1.1	0.0.0.0	25	Ethernet0/1.30
D	10.20.2.0/24 LAN	Local YES	100.20.1.1	10.20.0.2	29	Ethernet0/2.30
L	51.1.0.4/32 WAN	Remote YES	100.20.1.1	0.0.0.0	24	Tunnel10
C	51.1.0.0/16 WAN	Remote YES	100.20.1.1	0.0.0.0	24	Tunnel10
D	52.1.0.0/16 LAN	Remote NO	100.20.1.1	10.20.0.2	29	Ethernet0/2.30
D	52.1.0.0/16 WAN	Remote YES	100.20.1.1	51.1.0.3	24	Tunnel10

C	100.20.1.1/32	Local	100.20.1.1	0.0.0.0	22	Loopback1
	LAN	YES				
D	100.20.2.1/32	Local	100.20.1.1	10.20.0.2	29	Ethernet0/2.30
	LAN	YES				

Step 2 `show domain default vrf vrf name master route-import interface`

Use this command to view the prefix information associated with an interface.

Example:

```
Router# show domain default vrf green border local-prefix interface Ethernet0/0.10
Codes: L - local, C - connected, S - static, R - RIP, M - mobile,
       B-BGP D - EIGRP, EX - EIGRP external, O - OSPF,
       IA - OSPF inter area N1 - OSPF NSSA external type 1,
       N2 - OSPF NSSA external type 2 E1 - OSPF external type 1,
       E2 - OSPF external type 2 i - IS-IS, su - IS-IS summary,
       L1 - IS-IS level-1, L2 - IS-IS level-2 ia - IS-IS inter area,
       * - candidate default, H- NHRP
Local  -- Prefix learned over LAN.
Remote - Prefix learned over WAN.
Prefix      Interface      BR IP      Index  Prefix-site  Proto  Next-Hop      Status
-----
100.10.4.1/32  Ethernet0/0.10  100.20.1.1  12     Local        C      C              -----
Up
```

Step 3 `show domain default vrf vrf name master local-prefix`

Use this command to view the prefix information associated with an border router.

Example:

```
Router# show domain default vrf green master local-prefix border-ip 100.20.1.1
Codes: L - local, C - connected, S - static, R - RIP, M - mobile,
       B-BGP D - EIGRP, EX - EIGRP external, O - OSPF,
       IA - OSPF inter area N1 - OSPF NSSA external type 1,
       N2 - OSPF NSSA external type 2 E1 - OSPF external type 1,
       E2 - OSPF external type 2 i - IS-IS, su - IS-IS summary,
       L1 - IS-IS level-1, L2 - IS-IS level-2 ia - IS-IS inter area,
       * - candidate default, H- NHRP
Local  -- Prefix learned over LAN.
Remote - Prefix learned over WAN.
Prefix      Interface      BR IP      Index  Prefix-site  Proto  Next-Hop      Status
-----
100.10.4.1/32  Ethernet0/0.10  100.20.1.1  12     Local        C      C              -----
```

Additional References for PfRv3 Remote Prefix Tracking

Related Documents

Related Topic	Document Title
Cisco IOS commands	Cisco IOS Master Command List All Releases
PfRv3commands	Cisco IOS Performance Routing Version 3 Command Reference
Site Prefix Splitting	Site Prefix Splitting

