



vEdge 2000 Router


The vEdge 2000 router delivers highly secure site-to-site data connectivity to large enterprises, offers interface modularity, and provides the following features:

- 1RU, standard rack mountable in a 19-inch rack
- Support for AC input power
- Four built-in 1-Gigabit Ethernet SFP ports (4x1-Gigabit Ethernet)
- Two Pluggable Interface Module (PIM) slots that support two types of PIMs:
 - Eight ports of 1-Gigabit Ethernet (8x1-Gigabit Ethernet)
 - Two ports of 10-Gigabit Ethernet (2x10-Gigabit Ethernet)
- Encryption and QoS support
- 1-Gbps of unidirectional Internet Mix (IMIX) forwarding traffic (inclusive of encryption)
- Secure identification chip for anti-counterfeit and secure authentication
- Redundant hot-swappable fan tray modules
- Dual redundant hot-swappable power supply slots
- Front to back cooling

Chassis Views


The following figures show the front and back panels of the vEdge 2000 router, indicating the location of the power interfaces, module slots, status indicators, and chassis identification labels.

Figure 1: Front Panel of the vEdge 2000 Router

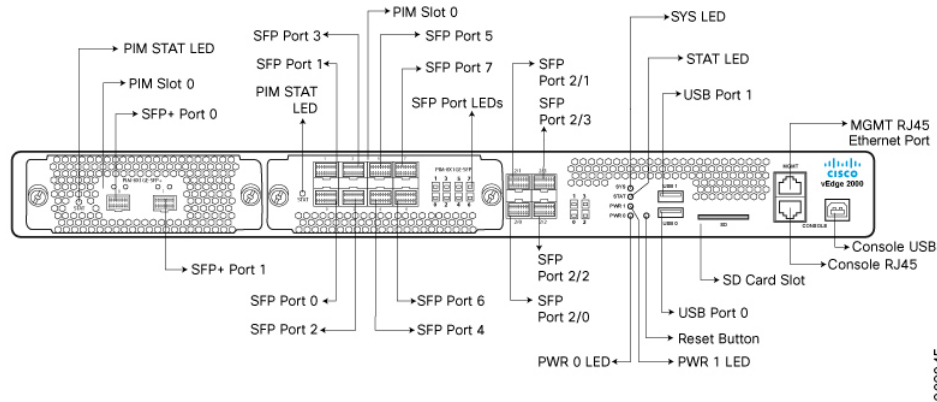

369045

Figure 2: Back Panel Slots and Connectors of the vEdge 2000 Router

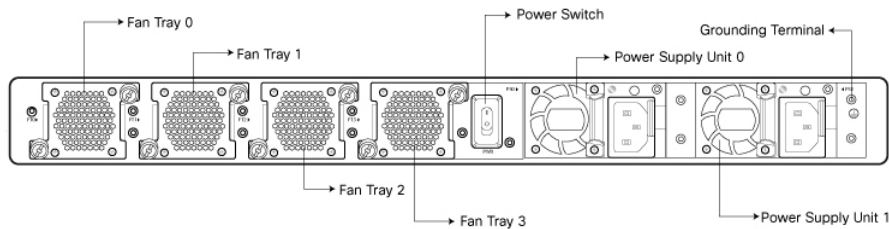

369046

- [Declaration of Conformity, on page 2](#)
- [Components and Specifications, on page 3](#)
- [Planning and Installation, on page 26](#)
- [Maintenance and Troubleshooting, on page 41](#)

Declaration of Conformity

The Viptela products are controlled under the Commerce Control List (CCL) of the U.S. Export Administration Regulations (EAR) as networking equipment within the following U.S. Export Control Classification Numbers (ECCN): 5A002, 5D002, and 5E002.

The vEdge hardware and software products and the Viptela encryption technology can be delivered to most end users and destinations worldwide without a licensing requirement. The Viptela solution and products have undergone a one-time review by the Government of the United States of America and qualify for License Exception ENC. As such, they are eligible for export according to Section 740.17 of the EAR.

The Viptela solutions and products can be delivered to most end users worldwide, except to entities or end users in the following countries: Cuba, Iran, North Korea, Sudan, and Syria.

Controlled Technologies

Viptela manages technology subject to the U.S. Export Administration Regulations (EAR). These controlled technologies may include items under U.S. ECCN 5E002 encryption technology. The Viptela encryption technology is for the development, production, and use of Viptela products that implement or use encryption.

The Viptela software distribution policy allows only authenticated users to download the Viptela encryption software. Recipients of controlled technology are obliged to maintain adequate controls to prevent nationals from outside the U.S. and Canada from accessing Viptela information, subject to ECCN5E002, without first obtaining authorization from the U.S. government.

For additional information on controlled technologies, please contact Viptela support at support@viptela.com

Components and Specifications

This article provides the chassis specifications of the vEdge 2000 router and lists the other router components.

Chassis Specifications

The following table lists the specifications for the vEdge 2000 router chassis.

Table 1: vEdge 2000 Router Chassis Specifications

Item	Specification
Services and Slot Density	
Fixed SFP-based traffic ports (max 1 Gbps)	4
Pluggable Interface Module (PIM) slots	2
Embedded hardware-based crypto acceleration (IPSec)	Yes
Memory DDR3 ECC DRAM	8 GB
SD card slot (external)	Maximum capacity supported 32 GB
NAND storage (internal)	8 GB
External USB flash memory slots (Type A USB 3.0)	2
USB console port (Type B default 115.2 Kbps)	1
Serial console port (RJ-45 default 115.2 Kbps)	1
Management Ethernet port (RJ-45 10/100/1000 Mbps)	1
Power supply option	Hot-swappable Power Supply Units (PSUs)
Redundant power supply support	Active-Active redundancy
Power Specifications	
AC input voltage	100-240 Volts
AC input line frequency	50-60 Hz
Typical power consumption	125 Watts
Physical Specifications	

Item	Specification
Chassis height	1.75 in. (4.45 cm)
Chassis width	Chassis only: 17.25 in. (43.82 cm) Chassis with mounting brackets attached: 19 in. (48.2 cm)
Chassis depth	18.5 in. (47 cm)
Rack height	1 RU
Rack-mount accessory kit 19 in (48.3 cm)	Provided with the unit
Weight	Chassis only: 11 lb (5 kg) Chassis with two power supplies installed: 15 lb (6.8 kg)
Airflow	Front to back
Packaging Specifications	
Package height	8.5 in. (21.6 cm)
Package width	22 in. (55.88 cm)
Package depth	23.5 in. (59.7 cm)
Operating Condition	
Temperature	0 to 40°C (32 to 104°F) at sea level (temperature de-rating of 1.5 deg C per 1000 feet of altitude applicable up to max of 10000 feet or 3000 m)
Altitude	Max 3000 m (10000 ft)
Humidity	10 to 85% RH
Transportation/Storage Condition	
Temperature	-40 to 70°C (-40 to 158°F)
Humidity	5 to 95%RH
Altitude	4570 m (15000 ft)
Reliability	
MTBF	420K hours
Regulatory Compliance	
Safety	AS/NZS 60950-1 CAN/CSA 60950-1 CB-IEC60950-1 CE Marking EN 60950-1 UL60950-1

Item	Specification
EMC	AS/NZS CISPR22 Class A EN 300 386 EN 55022 Class A FCC Class A ICES Class A VCCI Class A
Environmental	ROHS 6/6


Front Panel Components

This article describes the LEDs, reset button, and the SD card slot on the front panel of the vEdge 2000 router. See At a Glance for the exact location of these components on the front panel of the router.

LEDs

The vEdge 2000 router has four chassis status LEDs located in the center of the front panel next to the USB ports. See the following figure.

Figure 3: Chassis Status LEDs in a vEdge 2000 Router

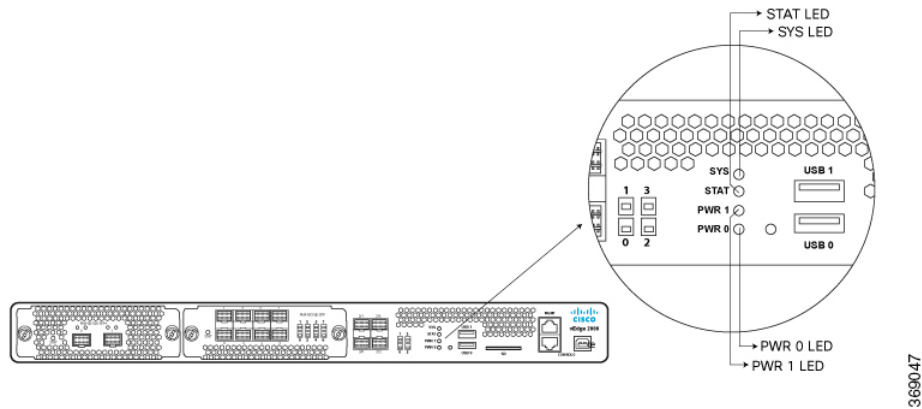

The following table describes the LEDs, their color and states, and the status they indicate.

Table 2:

LED	Color	Description
SYS	Green/Amber/Red	<ul style="list-style-type: none"> Off: System is off Green: System is healthy and operating correctly Blinking Green: System is booting up Red: Major failure or alarm is present
STAT	Green	<ul style="list-style-type: none"> Off: Status of OMP to vSmart controller is down Green: Status of OMP to vSmart controller is up

LED	Color	Description
PWR 1	Green/Red	<ul style="list-style-type: none"> • Off: Power supply unit 1 is not present, or router is not powered • Green: 12-Volt output is OK on power supply unit 1 • Red: Fault on power supply unit 1, or only power supply unit 0 is connected
PWR 0	Green/Red	<ul style="list-style-type: none"> • Off: Router is not powered • Green: 12-Volt output is OK on power supply unit 0 • Red: Fault on power supply unit 0, or only power supply unit 1 is connected

Reset Button

The front panel of the vEdge 2000 router has a reset button. The reset button is recessed to avoid accidentally pressing it while the router is operational. To press the reset button, use a sharp narrow tool. The following table describes the effects of pressing the reset button.

Table 3:

Press Duration	Behavior
Short press	Pressing for two seconds resets and reboots the router.
Long press	Pressing for 10 seconds resets the router and reboots it with factory default configuration.

SD Card Slot

The front panel of the vEdge 2000 router has an SD card slot. The SD card slot has the following specifications:

- High speed bus: maximum 25 MB/second
- Supported card types: SD, SDHC

PIM and Transceiver Modules

This article describes the Pluggable Interface Modules (PIMs) for the vEdge 2000 router as well as the SFP and SFP+ transceivers for those PIMs.

PIMs for the vEdge 2000 Router

The vEdge 2000 router offers interface modularity, providing two PIM slots that support two types of PIMs:


- 8x1-Gigabit Ethernet SFP PIM (Model: PIM-8x1GE-SFP)

- 2x10-Gigabit Ethernet SFP+ PIM (Model: PIM-2x10GE-SFP+)

The two PIM slots are labeled PIM Slot 0 and PIM Slot 1.


The following figures show the front panel of the 8x1-Gigabit Ethernet SFP PIM and the 2x10-Gigabit Ethernet SFP+ PIM, respectively.

Figure 4: Front Panel of 8x1-Gigabit Ethernet SFP PIM

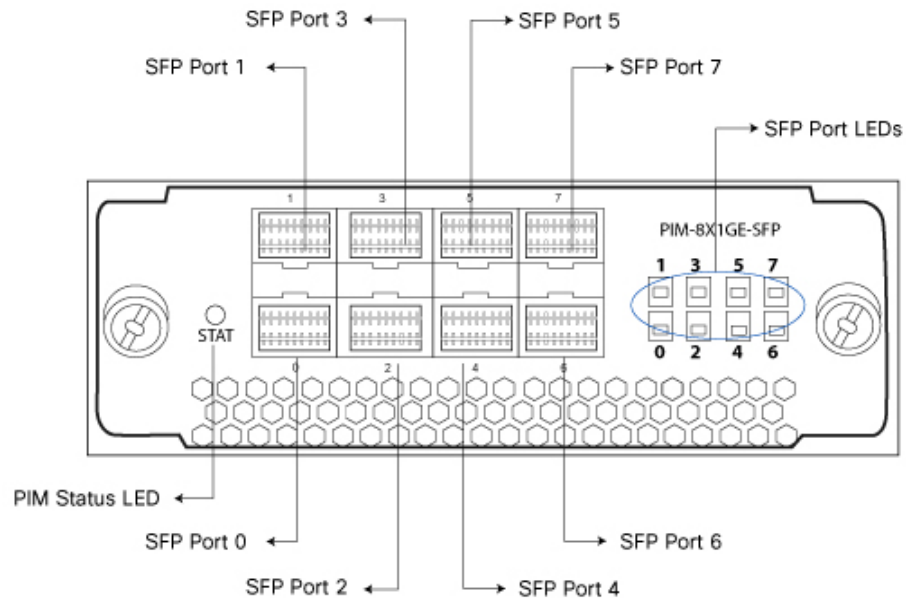

369048

Figure 5: Front Panel of 2x10-Gigabit Ethernet SFP+ PIM

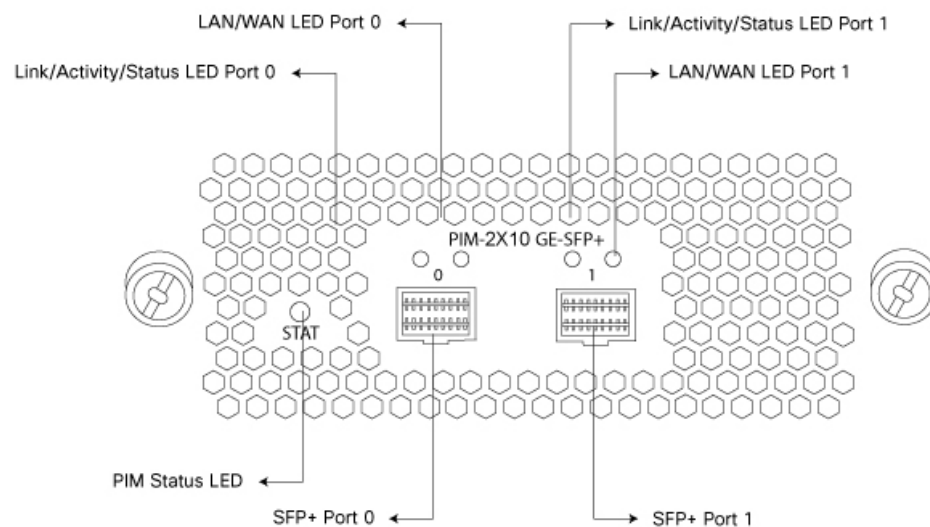

369049

The status LED on the front panel indicates the status of the PIM. For an explanation of the LAN/WAN LED and the Link/Activity/Status LED, see Network Port LEDs .

Table 4:

LED State	Description
Off	<ul style="list-style-type: none"> The PIM module is offline. The router is powered off.
Green	<ul style="list-style-type: none"> The PIM module is online and functioning normally.
Red	<ul style="list-style-type: none"> The PIM module is online but is not functioning normally.



Note You can install the 8x1-Gigabit Ethernet SFP PIM in either PIM Slot 0 or PIM Slot 1. However, when it is installed in PIM Slot 0, only four ports are usable. When it is installed in PIM Slot 1, all eight ports are usable. There is no such restriction with the 2x10-Gigabit Ethernet SFP+ PIM. For details, see Interface Port Combinations for the vEdge 2000 Router below.

Interface Port Combinations for the vEdge 2000 Router

A vEdge 2000 router has four fixed 1-Gigabit Ethernet interfaces, and you can install one or two PIM modules for additional interfaces.

You can combine the fixed interfaces and the PIM modules as follows:

- Two 2x10-Gigabit Ethernet SFP+ PIMs. This combination allows you to configure four 10-Gigabit Ethernet interfaces. This would give you a total of four 10-Gigabit Ethernet interfaces and four 1-Gigabit Ethernet interfaces in the router.
- One 2x10-Gigabit Ethernet SFP+ PIM (in PIM Slot 0) and one 8x1-Gigabit Ethernet SFP PIM (in PIM Slot 1). This combination allows you to configure two 10-Gigabit Ethernet interfaces and eight 1-Gigabit Ethernet interfaces. This would give you a total of two 10-Gigabit Ethernet interface and twelve 1-Gigabit Ethernet interfaces in the router.
- Two 8x1-Gigabit Ethernet SFP PIMs. This combination allows you to configure twelve 1-Gigabit Ethernet interfaces. This would give you a total of sixteen 1-Gigabit Ethernet interfaces in the router.

Table 5:

PIM Slot 0	PIM Slot 1	Total 10GE Interfaces	Total 1GE Interfaces
2x10-Gigabit Ethernet SFP+ PIM	2x10-Gigabit Ethernet SFP+ PIM	4	4 (fixed)
2x10 Gigabit Ethernet SFP+ PIM	8x1-Gigabit Ethernet SFP PIM	2	12 (8 on PIM plus 4 fixed)

PIM Slot 0	PIM Slot 1	Total 10GE Interfaces	Total 1GE Interfaces
8x1-Gigabit Ethernet SFP PIM	8x1-Gigabit Ethernet SFP PIM	0	16 (12 on PIM plus 4 fixed)

When the 8x1-Gigabit Ethernet SFP PIM is in PIM Slot 0, only the first four ports are usable; the remaining four ports are unusable.

Changing PIM Types

If you change the type of PIM that is installed in a vEdge 2000 router slot from a 1-Gigabit Ethernet to a 10-Gigabit Ethernet PIM, or vice versa, possibly as part of an RMA process, follow these steps:

1. Delete the configuration for the old PIM (the PIM you are removing or returning as part of the RMA process).
2. Remove the old PIM.
3. Insert the new PIM (the PIM you received as part of the RMA process).
4. Reboot the vEdge 2000 router.
5. Configure the interfaces for the new PIM.

Supported Transceiver Modules

The built-in Gigabit Ethernet network ports on the vEdge 2000 router and the network ports on the 8x1-Gigabit Ethernet SFP PIM support SFP transceivers. The 10-Gigabit Ethernet ports on the 2x10-Gigabit Ethernet SFP+ PIM support SFP+ transceivers.

This section describes the optical interfaces supported for the SFP and SFP+ transceivers and the copper interfaces supported for the SFP transceivers.



Note It is recommended that you use the optical transceivers and optical connectors purchased from Viptela for your vEdge routers.

The tables below describe the optical interface support over single-mode fiber-optic (SMF) and multimode fiber-optic (MMF) cables for SFP and SFP+ transceivers and over the copper interface for SFP transceivers.

Table 6:

Ethernet Standard	Specification	Value
1000 BASE-T	Model Number	SFP-1GE-Base-T
	Rate	10/100/1000 Mbps
Connector Type	RJ-45	
Fiber Count	N/A	

Ethernet Standard	Specification	Value
Transmitter Wavelength	N/A	
Minimum Launch Power	N/A	
Maximum Launch Power	N/A	
Minimum Receiver Sensitivity	N/A	
Maximum Input Power	N/A	
Cable Type	Copper	
Distance	100 m (328 ft)	
DOM Support	Not available	
1000 BASE-SX	Model Number	SFP-1GE-SX
	Rate	1000 Mbps
Connector Type	LC	
Fiber Count	Dual	
Transmitter Wavelength	850 nm	
Minimum Launch Power	-9.5 dBm	
Maximum Launch Power	-3 dBm	
Minimum Receiver Sensitivity	-21 dBm	
Maximum Input Power	0 dBm	
Fiber Type	MMF	
Distance	220 m (721 ft) to 550 m (1804 ft) depending on fiber core size/modal bandwidth specification	
DOM Support	Available	
1000 BASE-LX	Model Number	SFP-1GE-LX
	Rate	1000 Mbps
Connector Type	LC	
Fiber Count	Dual	
Transmitter Wavelength	1310 nm	
Minimum Launch Power	-9.5 dBm	

Ethernet Standard	Specification	Value
Maximum Launch Power	-3 dBm	
Minimum Receiver Sensitivity	-25 dBm	
Maximum Input Power	-3 dBm	
Fiber Type	SMF	
Distance	10 km (6.2 miles)	
DOM Support	Available	
1000 BASE-EX	Model Number	SFP-1GE-EX
	Rate	1000 Mbps
Connector Type	LC	
Fiber Count	Dual	
Transmitter Wavelength	1310 nm	
Minimum Launch Power	-14 dBm	
Maximum Launch Power	-8 dBm	
Minimum Receiver Sensitivity	-45 dBm	
Maximum Input Power	-3 dBm	
Fiber Type	SMF	
Distance	40 km (24.8 miles)	
DOM Support	Available	

Table 7:

Ethernet Standard	Specification	Value
10G BASE-SR	Model Number	SFP+-1GE-SR
	Rate	10 Gbps
Connector Type	LC	
Fiber Count	Dual	
Transmitter Wavelength	850 nm	
Minimum Launch Power	-7.3 dBm	

Ethernet Standard	Specification	Value
Maximum Launch Power	-1 dBm	
Minimum Receiver Sensitivity	-9.9 dBm	
Maximum Input Power	-1 dBm	
Fiber Type	MMF	
Distance	26 m (85 ft) to 300 m (984 ft) depending on fiber core size/modal bandwidth specification	
DOM Support	Available	
10G BASE-LR	Model Number	SFP+-1GE-LR
	Rate	10 Gbps
Connector Type	LC	
Fiber Count	Dual	
Transmitter Wavelength	1310 nm	
Minimum Launch Power	-8.2 dBm	
Maximum Launch Power	0.5 dBm	
Minimum Receiver Sensitivity	-18 dBm	
Maximum Input Power	0.5 dBm	
Fiber Type	SMF	
Distance	10 km (6.2 miles)	
DOM Support	Available	

Supported Transceivers

This article provides a list of copper and fiber transceivers that have been tested and qualified for use in vEdge 1000, vEdge 2000, and vEdge 5000 routers. You can order the transceivers that have a Viptela part number in the tables below directly from Viptela.

Table 8:

Manufacturer & Part Number	Viptela Part Number	vEdge 1000 Router	vEdge 2000 Router	vEdge 5000 Router	Description
Finisar FCLF-8521-3	SFP-1GE-Base-T	Supported	Supported	Supported	<ul style="list-style-type: none"> • Small form-factor pluggable (SFP) transceiver • RJ45-type connector • 10/100/1000-Mbps Ethernet
Finisar FCLF8521P2BTL	SFP-1GE-Base-T	Supported	Supported	Supported	<ul style="list-style-type: none"> • SFP transceiver • RJ45-type connector • 10/100/1000-Mbps Ethernet
Cisco-Avago SFBR-5766PZ-CS2		Supported		Supported	<ul style="list-style-type: none"> • SFP transceiver • RJ45-type connector • 10/100/1000-Mbps Ethernet
Bel-Fuse 1GBT-SFP05		Supported			<ul style="list-style-type: none"> • SFP transceiver • RJ45-type connector • 10/100/1000-Mbps Ethernet
Avago ABCU-5710RZ		Supported		Supported	<ul style="list-style-type: none"> • SFP transceiver • RJ45-type connector • 10/100/1000-Mbps Ethernet
Cisco GLC-T1000BASE-T		Supported		Supported	<ul style="list-style-type: none"> • SFP transceiver • RJ45-type connector • 10/100/1000-Mbps Ethernet

Table 9:

Manufacturer & Part Number	Viptela Part Number	vEdge 1000 Router	vEdge 2000 Router	vEdge5000 Router	Description
Avago AFBR-5710PZ		Supported		Supported	<ul style="list-style-type: none"> • Small form-factor pluggable (SFP) transceiver • LC-type connector • Short-reach 850-nm optics over multimode fiber for 1-Gbps applications
Avago AFCT-5710PZ		Supported		Supported	<ul style="list-style-type: none"> • SFP transceiver • LC-type connector • Long-reach 1310-nm optics for single-mode fiber up to 10 km for 1-Gbps applications
Finisar FTLF1318P3BTL	SFP-1GE-LX	Supported	Supported	Supported	<ul style="list-style-type: none"> • SFP transceiver • LC-type connector • Long-reach 1310-nm optics for single-mode fiber up to 10 km for 1-Gbps applications
Cisco-Finisar FTLF8519P2BCL-C4		Supported		Supported	<ul style="list-style-type: none"> • SFP transceiver • LC-type connector • Short-reach 850-nm optics over multimode fiber for 1-Gbps applications
Finisar FTLF8519P3BNL	SFP-1GE-SX	Supported	Supported	Supported	<ul style="list-style-type: none"> • SFP transceiver • LC-type connector • Short-reach 850-nm optics for multi-mode fiber for 1-Gbps applications
Finisar FTLX8574D3BCL	SFP+-10GE-SR		Supported	Supported	<ul style="list-style-type: none"> • SFP+ transceiver • LC-type connector • Short-reach 850-nm optics over multimode fiber for 10-Gbps applications

Manufacturer & Part Number	Viptela Part Number	vEdge 1000 Router	vEdge 2000 Router	vEdge5000 Router	Description
Finisar FTLX8571D3BCV				Supported	<ul style="list-style-type: none"> • SFP+ transceiver • LC-type transceiver • Short-reach 850-nm optics for multi-mode fiber for dual-rate 1 Gbps/10 Gbps applications <p>Note : The SFP+ ports of the 10-Gigabit Ethernet PIM support a rate of 10 Gbps only. 1 Gbps is not supported.</p>
Finisar FTLX1471D3BCV				Supported	<ul style="list-style-type: none"> • SFP+ transceiver • LC-type connector • Long-reach 1310-nm optics for single-mode fiber up to 10 km for dual-rate 1 Gbps/10 Gbps applications <p>Note: The SFP+ ports on the 10-Gigabit Ethernet PIM support a rate of 10 Gbps only. 1 Gbps is not supported.</p>
Finisar FTLX1471D3BCL	SFP+-10GE-LR		Supported	Supported	<ul style="list-style-type: none"> • SFP+ transceiver • LC-type connector • Long-reach 1310-nm optics for single-mode fiber up to 10 km for 10-Gbps applications

Ports and Connectors

The vEdge 2000 router supports three types of ports: network ports (also called SFP ports), management port, and console port.

Network Ports (SFP Ports)

The built-in network ports on the vEdge 2000 router as well as the 8x1-Gigabit Ethernet SFP PIM module support 1-Gbps SFP module. The 2x10-Gigabit Ethernet SFP+ PIM module supports 10-Gbps SFP+ module.

The following table provides the pinout information for the built-in SFP and the PIM SFP/SFP+ port connector. The SFP/SFP+ ports comply with the SFP/SFP+ MSA standards.


Table 10:

Pin	Signal	Description
1	VeeT	Module transmitter ground
2	TX_Fault	Module transmitter fault
3	TX_Disable	Transmitter disable
4	SDA	Two-wire serial interface data line
5	SCL	Two-wire serial interface clock
6	MOD_ABS	Module absent
7	RS0	Rate select 0; optionally controls SFP+ module receiver
8	RX_LOS	Receiver loss of signal indication
9	RS1	Rate select 1; optionally controls SFP+ transmitter
10	VeeR	Module receiver ground
11	VeeR	Module receiver ground
12	RD-	Receiver inverted data output
13	RD+	Receiver non-inverted data output
14	VeeR	Module receiver ground
15	VccR	Module receiver 3.3-V supply
16	VccT	Module transmitter 3.3-V supply
17	VeeT	Module transmitter ground
18	TD+	Transmitter non inverted data input
19	TD-	Transmitter inverted data input
20	VeeT	Module transmitter ground

Network Port LEDs


Each network port on the vEdge 2000 router has two LEDs—the link/activity/status LED and the LAN/WAN LED. See the following figures.

Figure 6: LEDs on the Built-in SFP Network Ports on a vEdge 2000 Router

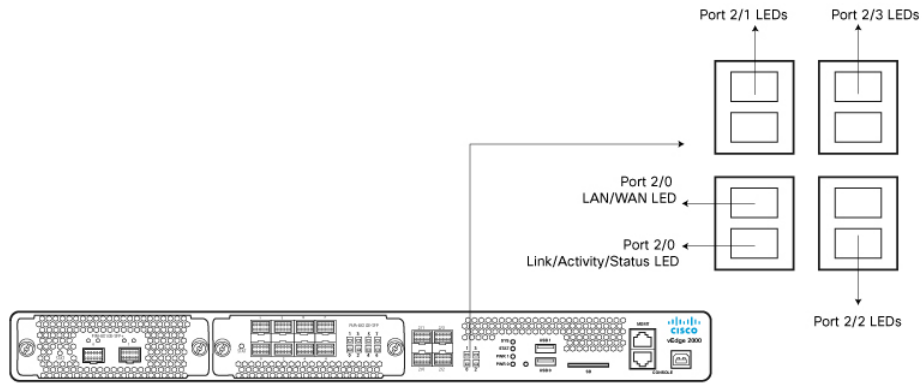

369050

Figure 7: LEDs on the Network Ports on an 8x1GE SFP PIM

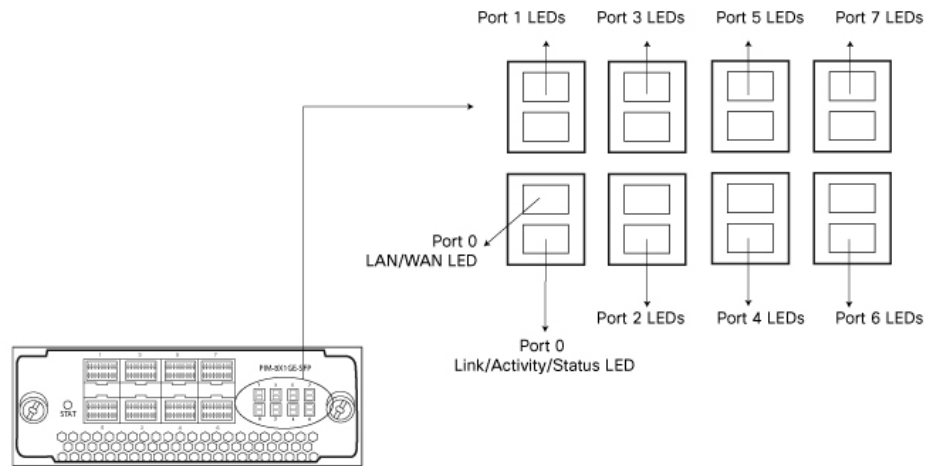

369051

Figure 8: LEDs on the Network Ports on a 2x10GE SFP+ PIM

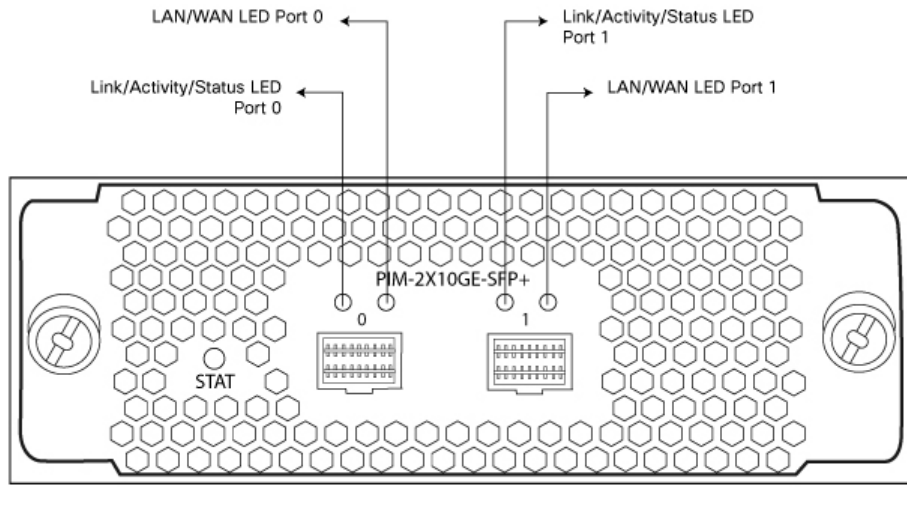


Table 11:

Color	State & Description
Green	<ul style="list-style-type: none"> • Blinking—The link is negotiated and active at maximum speed, and there is link activity. • On steadily—The link is negotiated and active at maximum speed, but there is no link activity.
Yellow (SFP ports only)	<ul style="list-style-type: none"> • Blinking—The link is negotiated and active at a speed of 10M/100M, and there is link activity. • On steadily—The link is negotiated and active at a speed of 10M/100M, but there is no link activity.
Alternating green and yellow	<ul style="list-style-type: none"> • An SFP has been detected in the port but the link is not active.
Off	<ul style="list-style-type: none"> • There is no SFP present in the port and the link is not active.

The following table describes the LAN/WAN LED on the network ports.

Table 12:

Color	State & Description
Green	<ul style="list-style-type: none"> • On steadily—The port is configured as a WAN port. • Off—The port is configured as a LAN port.

Management Port

The management port on a vEdge 2000 router uses an RJ-45 connector to connect to a management device for out-of-band management.

The management port uses an autosensing RJ-45 connector to support a 10/100/1000Base-T connection. The two LEDs on the port indicate link/activity on the port and the administrative status of the port. See Management Port LEDs below.

The following table provides the pinout information for the RJ-45 connector for the management port.


Table 13:

Pin	Signal	Description
1	TRP1+	Transmit/receive data pair 1
2	TRP1-	Transmit/receive data pair 1
3	TRP2+	Transmit/receive data pair 2
4	TRP3+	Transmit/receive data pair 3
5	TRP3-	Transmit/receive data pair 3
6	TRP2-	Transmit/receive data pair 2
7	TRP4+	Transmit/receive data pair 4
8	TRP4-	Transmit/receive data pair 4

Management Port LEDs

The management port on the vEdge 2000 router has two LEDs that indicate link/activity and port status. See the following figure.

Figure 9: LEDs on the Management Port on a vEdge 2000 Router

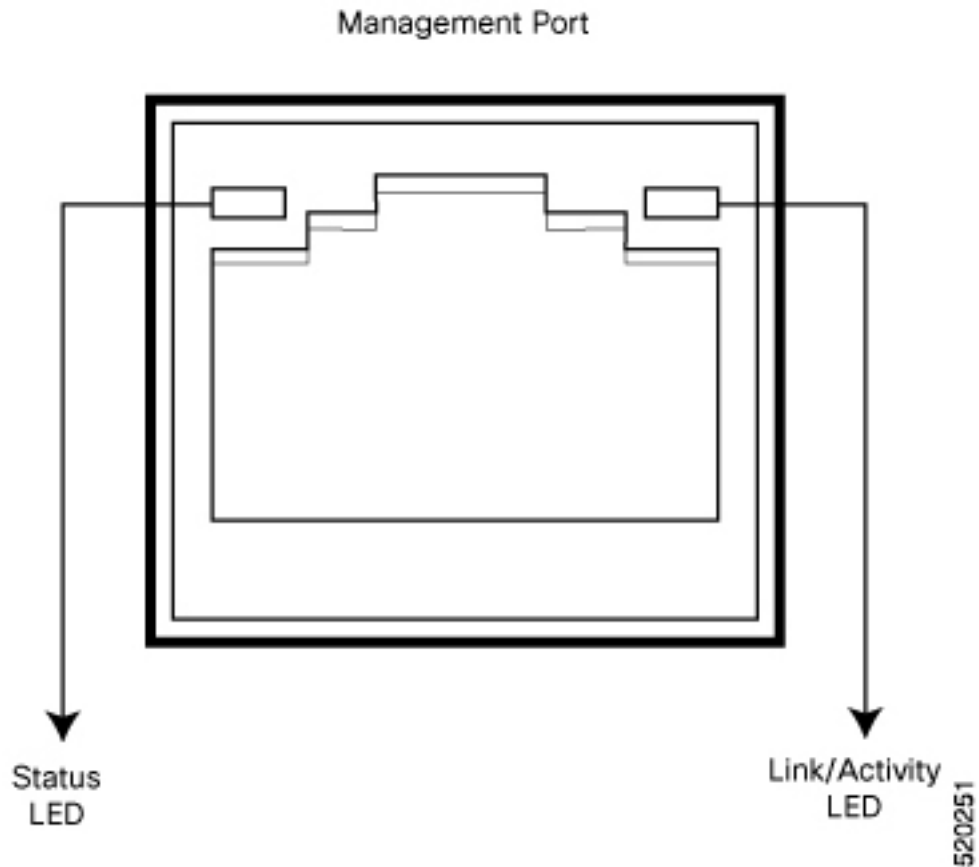

The following table describes the LEDs on the management port.

Table 14:


LED	Color	State and Description
Link/Activity	Green	<ul style="list-style-type: none"> • Blinking—There is link activity • Off—There is no link activity
Status	Green/Yellow	Indicates the speed of the link: <ul style="list-style-type: none"> • Green—1000 Mbps • Yellow—10/100 Mbps • Off—Link is not up

Console Port

The console port on a vEdge 2000 router is accessible via the following external interfaces:

- An RS-232 serial interface that uses an RJ-45 connector to connect to a console management device.
- A USB serial interface that uses a standard USB Type B connector to connect to a console management device. See Figure 5.

Figure 10: USB Type B Connector

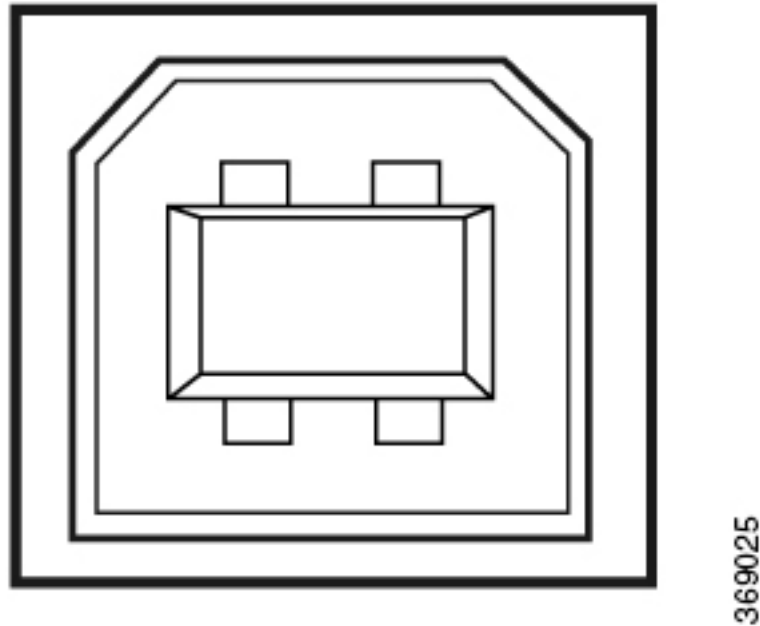

Note

- At any given time, you can activate only one of the external interfaces.
- The default baud rate for the console port is 115,200 baud.
- When you connect a device such as a PC or a terminal server to the console serial port of a vEdge router, ensure that the PC or terminal serial port is configured to disable flow control.

The following table provides the pinout information for the RJ-45 console port connector.

Table 15:


Pin	Signal	Description
1	RTS Output	Request to send
2	NC	No connect
3	TxD Output	Transmit data

R#	Signal	Description
4	Signal Ground	Signal ground
5	Signal Ground	Signal ground
6	RxD Input	Receive data
7	NC	No connect
8	CTS Input	Clear to send

RJ-45-to-DB-9 Serial Port Adapter Pinout

The console port on a vEdge 2000 router is an RS-232 serial interface that uses an RJ-45 connector to connect to a management device such as a PC or a laptop. If your PC or laptop does not have a DB-9 male connector pin and you want to connect your PC or laptop to a vEdge 2000 router, use a combination of the RJ-45-to-DB-9 female adapter along with a USB-to-DB-9 male adapter. See the following figure.

Figure 11: vEdge 2000 Router Connected to a Laptop via RJ-45-to-DB-9 Cable

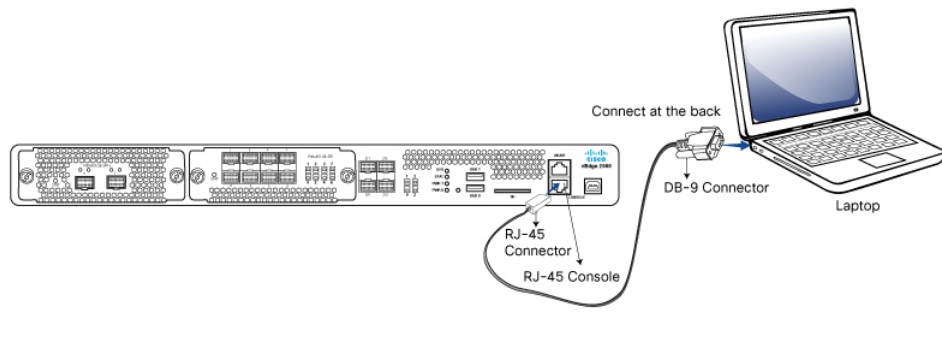


The following table provides the wiring and pinout information for the RJ-45-to-DB-9 serial port adapter cable.

Table 16:

RJ-45 Pin	Signal	DB9 Pin	Signal
1	RTS	8	CTS
3	TXD	2	RXD
4	GND	5	GND
6	RXD	3	TXD
8	CTS	7	RTS

You can also connect the vEdge 2000 router to a management device such as a PC or a laptop using an RJ-45-to-RJ45 cable as shown in the following figure. Note that the vEdge 2000 router does not ship with an RJ-45-to-RJ-45 cable.

Figure 12: vEdge 2000 Router Connected to a Laptop via RJ-45-to-RJ-45 Cable

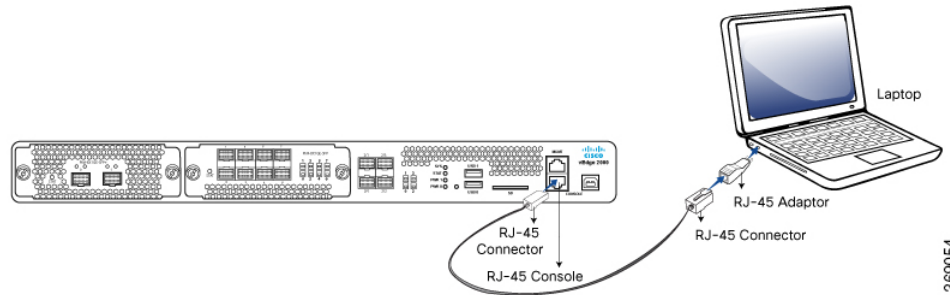

Field-Replaceable Units

The vEdge 2000 router is a stiff sheet-metal structure that houses the hardware components. Field-replaceable units (FRUs) are hardware components that you can remove and replace at your site. Table 1 lists the FRUs in the vEdge routers.

The power supply, transceivers, and fan tray are hot-removable and hot-insertable. You can remove and replace these components without powering off the router or disrupting router functions.

Table 17:

FRU	FRU Model Number
AC power supply	• vEdge-2000-Power-Supply-AC
8-Port 1-Gigabit Ethernet SFP PIM	• PIM-8x1GE-SFP
2-Port 10-Gigabit Ethernet SFP+ PIM	• PIM-2x10GE-SFP+
Gigabit Ethernet transceivers	• SFP-1GE-SX • SFP-1GE-LX • SFP-1GE-EX • SFP-1GE-Base-T
10-Gigabit Ethernet transceivers	• SFP+-10GE-SR • SFP+-10GE-LR
Fan tray	• vEdge-2000-Fan

Power Supply and Cooling in Cisco vEdge 2000 Routers

The vEdge 2000 router ships with two AC power supplies installed. Read this article to learn more about the AC power supply in the router as well as about the cooling system and airflow through the router chassis.

AC Power Supply in vEdge 2000 Router

The vEdge 2000 router ships with two AC power supplies installed. The second power supply is for redundancy and load-balancing. If one of the AC power supplies fails due to device failure or input power line failure, a single unit is sufficient to power the entire router.

The AC power supply in a vEdge 2000 router is a hot-insertable and hot-removable field replacement unit (FRU). You can remove and replace the power supply in the rear of the chassis without powering off the router or disrupting normal functioning.

The following table describes the AC power supply specifications for the vEdge 2000 router.

Table 18:

Item	Specification
AC input voltage	90-264 Vrms
AC input line frequency	47-63 Hz
Maximum output power	800 W
Nominal power consumption	125 Watts

AC Power Supply LEDs

The vEdge 2000 AC power supply has an LED faceplate that displays information about the status of the power supply. The following table describes the LEDs on an AC power supply in a vEdge 2000 router.

Table 19:

LED State	Description
OFF	No AC power to all PSU
1Hz Flashing Blue	AC present; only standby output on
Blue	Power supply DC output on and OK
Red	Power supply has failed
0.5Hz Flashing Red*/Blue*	Power supply warning

*Flashing frequency: 1Hz (0.5 seconds Red/0.5 seconds Blue)

AC Power Cord Specifications


The vEdge 2000 router ships with a detachable AC power cord. The power cord has a C13 connector at one end and the other end is specific to the country/locality to which the product is shipped.

Cooling System and Airflow in a vEdge 2000 Router

The cooling system in a vEdge 2000 router consists of four individual fan trays, each comprising a double-stacked fan module. The fan trays cool the router itself, except the power supply units, which have their own fans for cooling.

The fan tray is a hot-insertable and hot-removable field-replaceable unit (FRU). The fan trays provide front-to-back cooling, as shown in Figure 4. If one of the fans in a fan tray fails, you can remove the specific fan tray and replace it with a spare fan tray module without powering off the router or disrupting normal functions. Also, if one of the fans fails, the rest of the working fans will keep the system running indefinitely.


Figure 13: Fan Tray in a vEdge 2000 Router

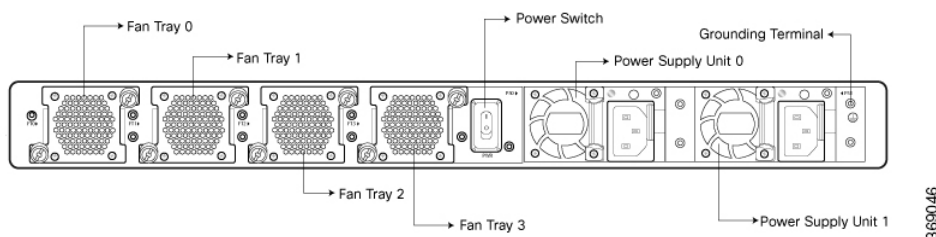

The fan tray installs horizontally in the rear of the chassis. It has two thumbscrews that serve as handles and also as a mechanism to secure the fan tray to the main chassis.

The air intake to cool the chassis flows through the perforations in the front of the chassis. Hot air exits from the rear of the chassis via the vents provided near the fans.

Figure 14: vEdge 2000 Router Airflow

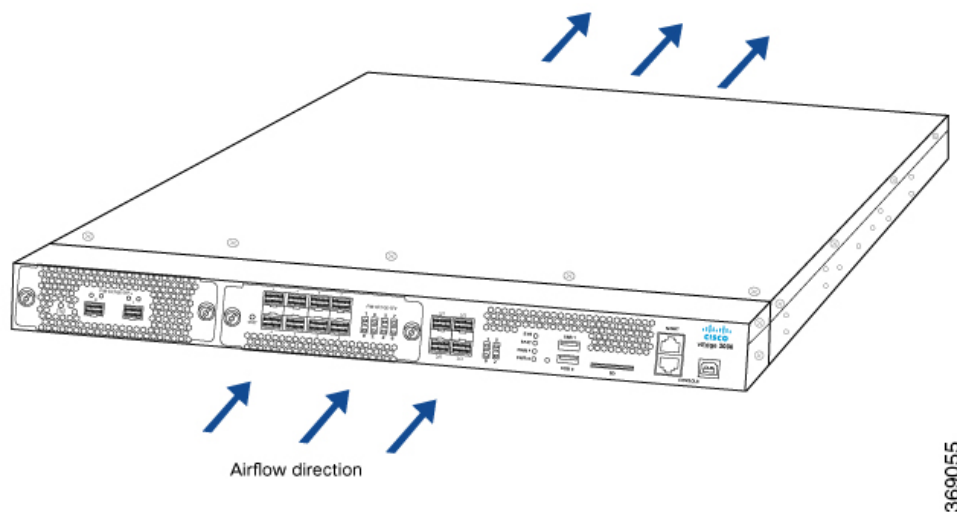

Temperature sensors in the chassis monitor the internal chassis temperature. When a single fan/fan tray fails at room temperature, the system can still provide sufficient cooling.

If a fan/fan tray fails or if the ambient temperature inside the chassis rises above the acceptable range, the router raises an alarm. If the temperature inside the chassis rises above the maximum threshold temperature, the router shuts down automatically.

Planning and Installation

This article provides general safety standards to adhere to when installing or connecting a vEdge 2000 router or its components.

General Safety Standards

- Install your vEdge router in compliance with the following local, national, and international electrical codes:
 - United States—National Fire Protection Association (NFPA 70), United States National Electrical Code.
 - Other countries—International Electromechanical Commission (IEC) 60364, Part 1 through Part 7.
 - Evaluated to the TN power system.
 - Canada—Canadian Electrical Code, Part 1, CSA C22.1.
- Permit only trained and qualified personnel to install or replace switch components.
- Locate the emergency power-off switch in the room in which you are working. In case of an electrical accident, quickly turn off the power.
- Disconnect power before installing or removing the vEdge router.
- If an electrical accident occurs, use caution and immediately turn off power to the router.
- Make sure that grounding surfaces are thoroughly cleaned and well-finished before grounding connections are made.
- Do not work alone if hazardous conditions exist.
- Always check that power is disconnected from a circuit. Never assume that it is disconnected.
- Carefully inspect your work area for possible hazards, such as moist floors, worn-out power cords, ungrounded power extension cords, and missing safety grounds.
- Operate the device within marked electrical ratings and product usage instructions.
- To ensure that the router and the FRUs function safely and correctly, use the specified cables and connectors, and make certain they are in good condition.



Caution

Before removing or installing router modules and components, ensure that the router chassis is electrically connected to ground. Ensure that you attach an ESD grounding strap to an ESD point and place the other end of the strap around your bare wrist making good skin contact. Failure to use an ESD grounding strap could result in damage to the router.



Note Some router components are hot-swappable and hot-insertable. You can remove and replace them without powering off or disconnecting power to the router. Do not, however, install the router or any of its component if they appear to be damaged.

Prepare for Router Installation

This article provide guidelines and requirements for preparing your site to install the vEdge 2000 router.

Site Preparation Guidelines

Efficient operation of your vEdge 2000 router requires proper site planning and proper layout of your equipment rack or wiring closet:

- Ensure that the area around the router is kept free of dust and conductive material.
- Follow appropriate airflow guidelines so that the cooling system functions normally.
- Follow ESD prevention procedures to avoid any damage to the router.
- Install the router in an enclosed, secure area allowing only authorized personnel to access the device.

Environmental Requirements

Install the vEdge 2000 router in a dry, clean, temperature-controlled, and well-ventilated environment:

- Maintain ambient airflow for the router to operate normally. The ambient intake air temperature should be in the range 0°C to 40°C (32°F to 104°F). If the airflow is blocked or if the air intake is too warm, the router can get overheated.
- Avoid temperature extremes. Ensure that the router is operating at an ambient temperature not more that 40°C (104°F) at sea level. For higher altitudes, a derating of 1.50°C per 1,000 feet applies.
- High humidity conditions can cause moisture to penetrate into the chassis. The device supports 10% to 85% humidity levels, non-condensing.

Rack Requirements

You can mount the vEdge 2000 router in a two-post or a four-post rack. The following table provides the rack requirements for the router.

Table 20:

Rack Requirement	Guidelines
Rack type	Use a two-post or a four-post rack that meets the size requirements for the router, provides bracket holes or hole patterns spaced at 1 U (1.75 in. or 4.45 cm) increments, and is strong enough to support the weight of the router.
Mounting brackets	Ensure that the holes in the mounting brackets are spaced at 1 U (1.75 in. or 4.45 cm). This allows you to mount the router in any location in the rack.

Rack Requirement	Guidelines
Rack size	It is recommended that the rack comply with the size and strength standards of a 19-inch rack as defined in <i>Cabinets, Racks, Panels, and Associated Equipment</i> (document number EIA-310-D), published by the Electronics Industry Association (http://www.eia.org). Ensure that the rack rails are spaced widely enough to accommodate the external dimensions of the chassis and that the outer edges of the front mount brackets extend the width of the chassis to 19 in. (48.2 cm). You must also ensure that the spacing of rails and adjacent racks allows for the proper clearance around the router and rack.
Rack secured to building structure	For maximum stability, secure the rack to ceiling brackets and to floor brackets.

Airflow Requirements

When planning your site for installing the vEdge 2000 router, allow enough clearance around the installed router. Since the router works with a front-to-back airflow there are no clearance requirements for the sides, but it is recommended that you provide at least 3 in. of clearance at the back.

Install the vEdge 2000 Router

Once you have prepared your site for router installation, follow the instructions below to unpack the vEdge 2000 router and install it on either two front posts, four posts, or two mid-posts in a 19-inch rack.


Unpack the vEdge 2000 Router

A vEdge 2000 router is shipped in a cardboard carton and secured firmly in place with foam packing material. The carton contains an accessory box with Quick Start instructions. It is recommended that you do not unpack the router until you are ready to install it.

To unpack the router>

1. Move the cardboard carton close to the installation site, making sure you have adequate space to remove all the contents of the box.
2. Open the top flaps of the carton. The router chassis and the accessories are packed together in the same box with partitions in the packing foam to accommodate the accessories.
3. Gradually remove the packing foam holding the router and the accessories in place. See Figure 1.
4. Take out the router and each accessory.
5. Verify the router components against the packing list included in the box.

Figure 15: Unpacking the vEdge 2000 Router

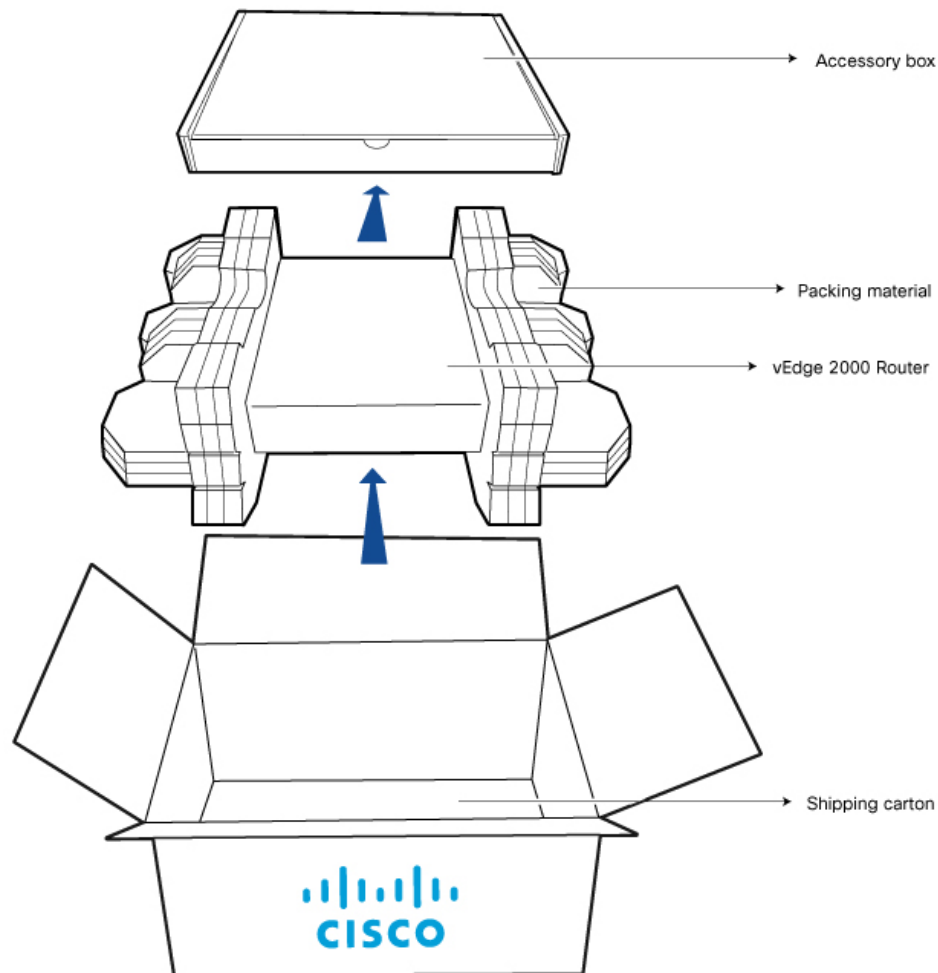

369063



Note It is recommended that you do not discard the shipping carton and packing material when you unpack the router. Flatten and store the box in case you need to move or return the router in the future. See Return Hardware .

Packing List for a vEdge 2000 Router

The cardboard carton in which the router is packed includes a packing list. Check the parts you receive with your router against the items on the packing list. The packing list specifies the name, part number, and quantity of each item in the carton and the accessory box.

If any part on the packing list is missing, contact your customer service representative or contact Viptela customer support from within the U.S. or Canada by telephone at 800-525-5033 or by email to support@viptela.com .

The following table lists the parts shipped with the vEdge 2000 router and their quantities.

Table 21:

Component	Quantity
Router chassis	1
Fan tray (preinstalled)	4
AC power supply (preinstalled)	2
AC power cord appropriate for your geographical location (AC router models only)	2
Blanking cover panel for PIM slots (preinstalled)	2 (1 per PIM slot)
Dust covers for ports (attached to router ports)	1 per port (both built-in and PIM ports included)
USB console cable	1
Short mounting ear, Right	1
Short mounting ear, Left	1
Extended mounting ear, Right	1
Extended mounting ear, Left	1
1U slider	2
Screws for rack mount (A)	8
Screws for short or extended mounting ears (B)	8
Additional screws for extended mounting ears (C)	4
Screws for sliders (D)	8
Screws for locking 1U sliders (E)	4
vEdge 2000 Router Quick Start	1

Mount the vEdge 2000 Router in a Rack

You can mount the vEdge 2000 router in a 19-inch rack in one of the following ways:

- Mount the router on two front posts
- Mount the router on all four posts
- Mount the router on two mid-posts

In addition to the accessory box, you need the following tools to mount a vEdge 2000 router in a 19-inch rack:


- Number 2 Phillips (+) screwdriver
- Tape measure

Mount the vEdge 2000 Router on Two Posts

To mount the vEdge 2000 router on two front posts in a 19-inch rack:

1. Place the router chassis on the floor or on a sturdy table near the rack.
2. Verify the internal dimensions of the rack with a tape measure. The chassis is 440 mm wide and must fit within the mounting posts.
3. Secure the two extended mounting ears, marked Left and Right, to either side of the router chassis using the eight screws for mounting ears (four on each side) in the packet marked B plus the four additional screws for extended mounting ears (two on each side) in the packet marked C.


Figure 16: Attaching the Extended Mounting Ears to the vEdge 2000 Router Chassis

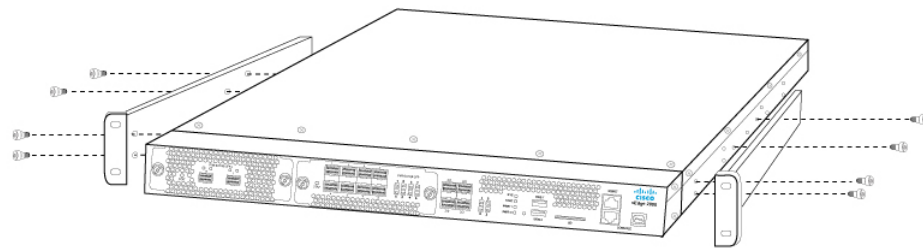

369056

4. Grasp both sides of the router, then lift and position it in the rack, making sure that the mounting ear holes are aligned with the threaded holes in the rack rail. Align the bottom hole in both the mounting ears with a hole in each rack rail, making sure the chassis is level.


Figure 17: Positioning the vEdge 2000 Router in the Rack

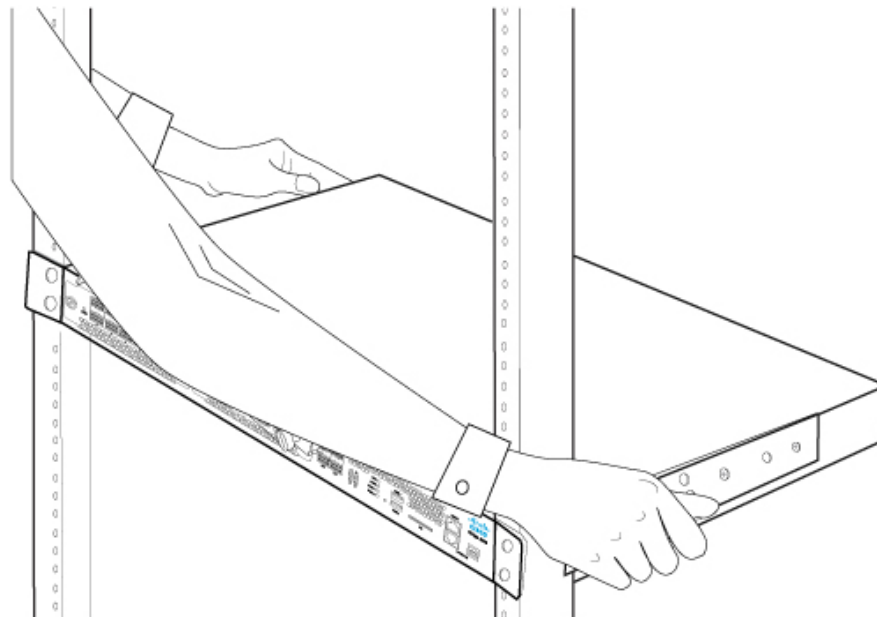

369059

5. Have a second person secure the mounting ears to the rack, using four rack-mount screws (two on each side) from the packet marked A. Tighten the screws.

Figure 18: Attaching the Extended Mounting Ears to the Rack

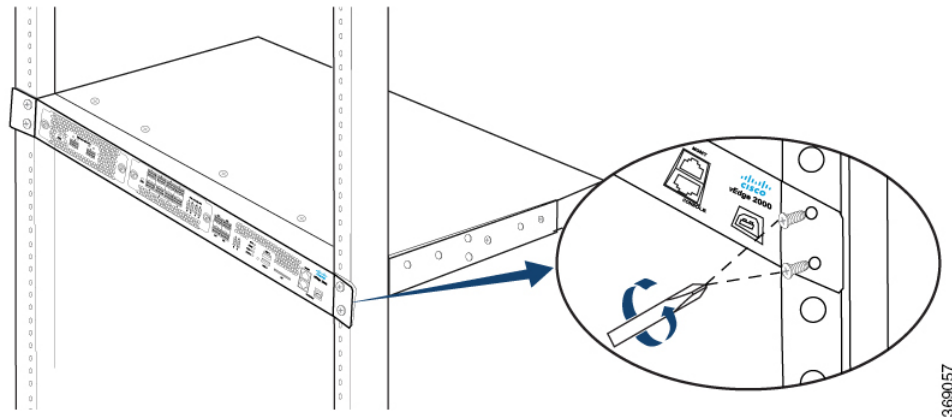

6. Use a tape measure or level to verify that the chassis is installed straight and that all screws on one side of the rack are aligned with the screws on the other side.




Tip It is recommended that you retain the dust covers in any unused ports.

Mount the vEdge 2000 Router on Four Posts

To mount a vEdge 2000 router on four posts in a 19-inch rack:


1. Place the router chassis on the floor or on a sturdy table near the rack.
2. Verify the internal dimensions of the rack with a tape measure. The chassis is 440 mm wide and must fit within the mounting posts.
3. Secure the two short mounting ears, marked Left and Right, to either side of the router chassis using the eight screws for mounting ears (four on each side) in the packet marked B.

Figure 19: Attaching the Short Mounting Ears to the vEdge 2000 Router Chassis

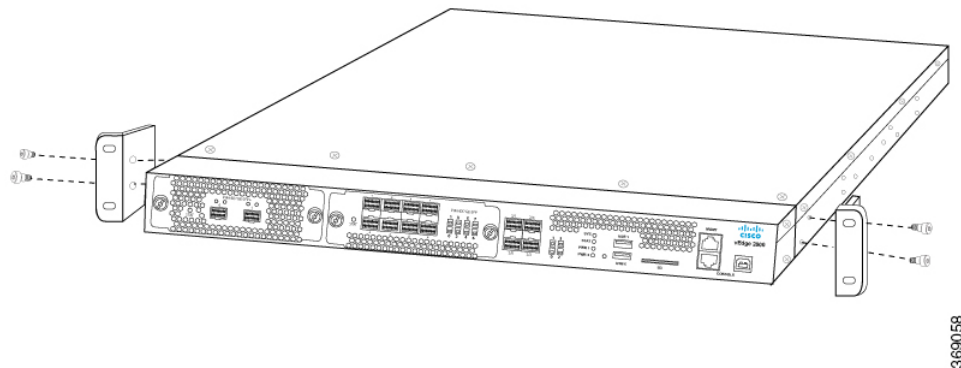


- Slide out the two interchangeable 1U sliders, and secure to either side of the router chassis using the eight screws for sliders (four on each side) in the packet marked D.

Figure 20: Attaching the 1U Sliders to the vEdge 2000 Router Chassis

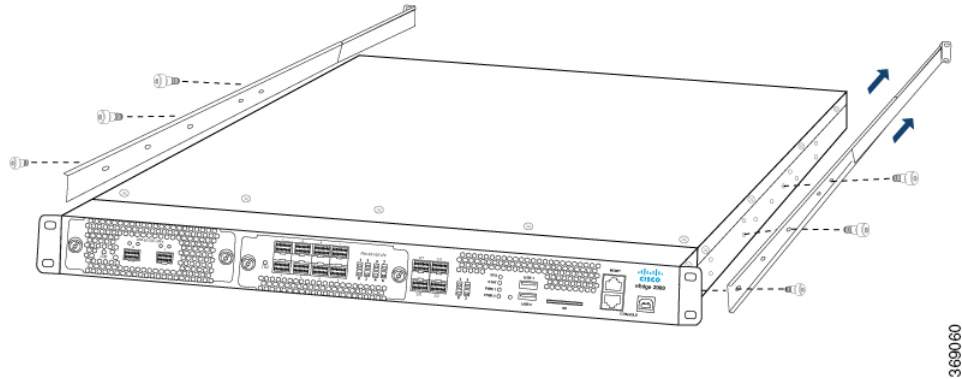


- Grasp both sides of the router, then lift and position it in the rack, aligning the front bracket holes with the threaded holes in the front post of the rack rail. Align the bottom hole in both the mounting brackets with a hole in each rack rail, making sure the chassis is level.

Figure 21: Positioning the vEdge 2000 Router in the Rack

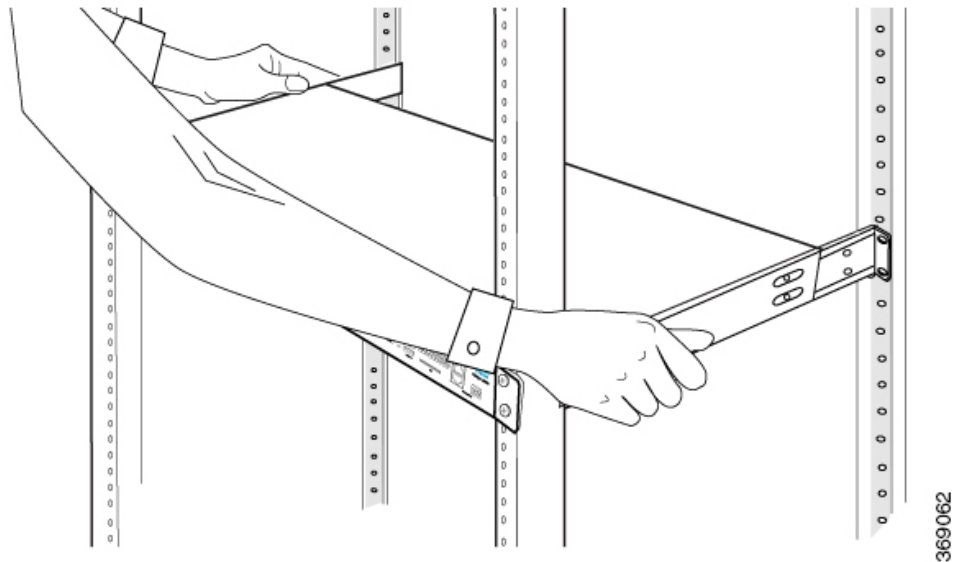


- Have a second person secure the mounting ears to the front of the rack using four rack-mount screws (two on each side) from the packet marked A. Tighten the screws.

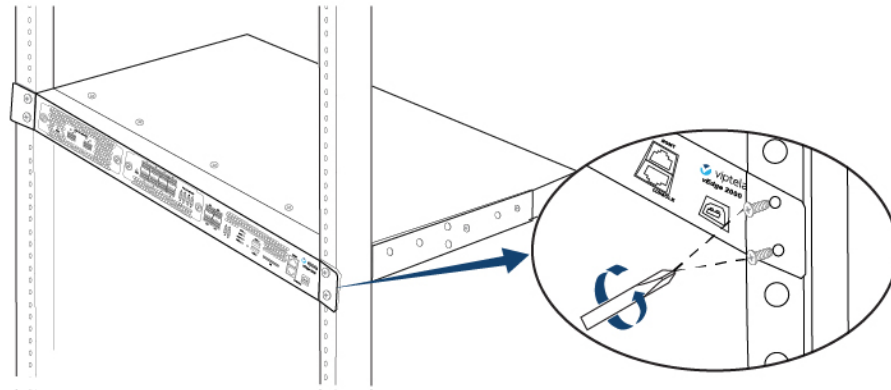Figure 22: Attaching the Short Mounting Ears to the Rack


3690064

- Secure the 1U sliders to the rear post, using the remaining four rack-mount screws (two on each side) in the packet marked A. Tighten the screws.

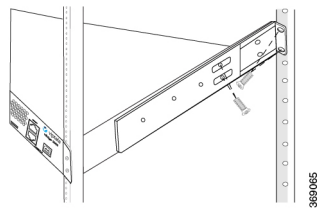Figure 23: Attaching the 1U Sliders to the Rear of the Rack

3690065

- Lock the 1U sliders in place using the screws in the packet marked E. Tighten the screws.

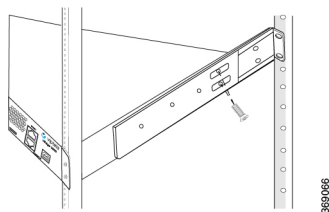Figure 24: Locking the 1U Sliders in Place

3690066

- Verify that the router chassis is straight by making sure that all screws in the front are aligned with the screws in the back of the chassis.

**Warning**

To prevent bodily injury when mounting or servicing the vEdge 2000 router in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety:


- If this is the only router in the rack, mount it at the bottom of the rack.
- If you are mounting the router in a partially filled rack, start to load the rack from the bottom, placing the heaviest component at the bottom of the rack.

Mount the vEdge 2000 Router on Mid-Posts

To mount a vEdge 2000 router on two mid-posts in a 19-inch rack:


1. Place the router chassis on the floor or on a sturdy table near the rack.
2. Verify the internal dimensions of the rack with a tape measure. The chassis is 440 mm wide and must fit within the mounting posts.
3. Secure the two short mounting ears, marked Left and Right, to either side of the router chassis using the eight screws for mounting ears (four on each side) in the packet marked B.

Figure 25: Attaching the Short Mounting Ears to the Center of the Router Chassis

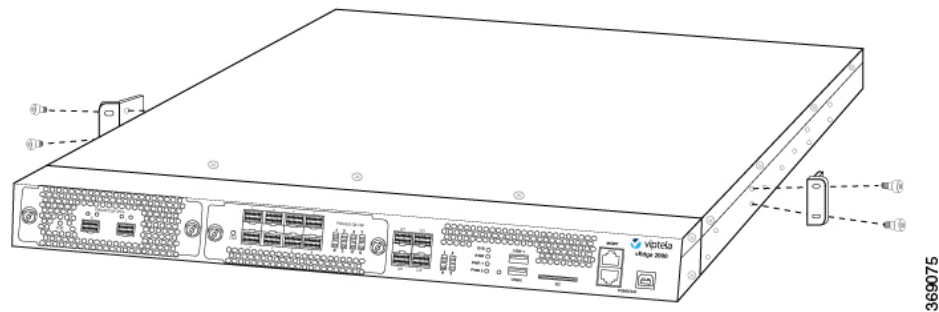

4. Grasp both sides of the router, then lift and position it in the rack, making sure that the mounting ear holes are aligned with the threaded holes in the rack rail. Align the bottom hole in both the mounting ears with a hole in each rack rail, making sure the chassis is level.

Figure 26: Positioning the vEdge 2000 Router in the Rack

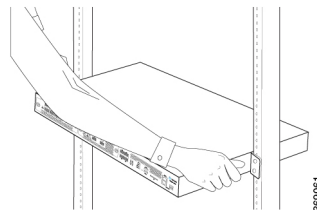

5. Have a second person attach the mounting ears to the rack, using four rack-mount screws (two on each side) from the packet marked A. Tighten the screws.
6. Use a tape measure or level to verify that the chassis is installed straight and that all screws on one side of the rack are aligned with the screws on the other side.



Tip It is recommended that you retain the dust covers in any unused ports.

Connect the vEdge 2000 Router

This article describes how to connect the vEdge 2000 router to system ground, an AC power source, a management console, and to a network for out-of-band-management.

Step 1: Connect Earth Ground to the Router


To meet safety and electromagnetic interference (EMI) requirements and to ensure proper operation of the vEdge 2000 router, connect the router to earth ground before you power it on. To do so, you need the following tools:

- Number 2 Phillips (+) screwdriver

To connect system ground to the vEdge 2000 router:

1. Connect one end of the grounding cable to a proper earth ground, such as the rack in which the vEdge 2000 router is mounted.
2. Secure the grounding lug to the protective grounding terminal with the washers and screws.
3. Dress the grounding cable, and make sure that it does not touch or block access to other router components.

Figure 27: Connecting a Grounding Cable to a vEdge 2000 Router

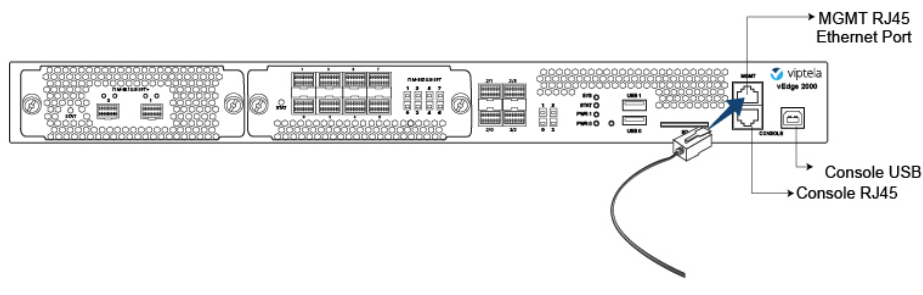

369070

Install vEdge 2000 Router Components

The vEdge 2000 router is a stiff sheet-metal structure that houses various hardware components. Some of these hardware components are field-replaceable units (FRUs) including:

- Power supplies
- Fan trays
- Pluggable Interface Modules (PIMs)
- SFP and SFP+ transceivers

This article provides step-by-step procedures for installing these router components. For instructions on removing the components, see [Remove Router Components](#).



Caution Before you install any components in the router chassis, make sure that you understand how to prevent electrostatic discharge (ESD) damage. See [General Safety Standards](#).



Note Before you install any components in the router chassis, ensure that you have an ESD grounding strap and a number 2 Phillips (+) screwdriver.


Install an AC Power Supply in a vEdge 2000 Router

The AC power supply in a vEdge 2000 router is a hot-insertable and hot-removable field replacement unit (FRU). You can remove and replace the power supply without powering off the router or disrupting normal functioning.

To install an AC power supply in a router:

1. Check the model number and ensure that you have the correct power supply.
2. Attach the ESD grounding strap to your bare wrist. Then connect the strap to the ESD point on the rack.
3. Press the release latch to carefully remove the existing power supply from the power supply slot in the rear panel of the router chassis.
4. Remove the new power supply from the plastic bag in which it was shipped, taking care that you do not touch any of the power supply pins, leads, or solder connections.
5. With both hands, place the new power supply into the power supply slot in the rear panel of the router chassis and slide it in until it is firmly seated. You will hear a click sound when the power supply is firmly seated in the slot. See Figure 1.

Figure 28: Installing an AC Power Supply in a vEdge 2000 Router

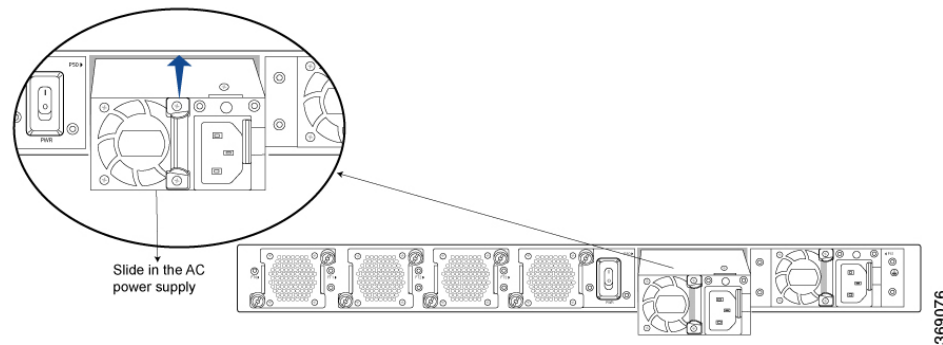

Install a Fan Tray in a vEdge 2000 Router

The vEdge 2000 router contains four individual fan trays, each comprising a double-stacked fan module. The fan tray is a hot-insertable and hot-removable field-replaceable unit (FRU). You can remove and replace an individual fan tray without powering off the router or disrupting normal functioning.


The fan tray installs horizontally in the rear of the router chassis. Handles on each side facilitate installing and removing of the fan tray.

To install a fan tray in a vEdge 2000 router:

1. Attach the ESD grounding strap to your bare wrist. Then connect the strap to the ESD point on the router chassis.
2. Unscrew and carefully remove the existing fan tray from the fan tray slot in the rear of the chassis.
3. Gently remove the new fan tray from the plastic bag in which it was shipped.
4. With both hands, hold the thumb screws on each side of the fan tray and align the fan tray along the fan tray slot.

- Slide in the fan tray until it is firmly seated in the router chassis and then tighten the screws. See Figure 2.

Figure 29: Installing a Fan Tray in a vEdge 2000 Router

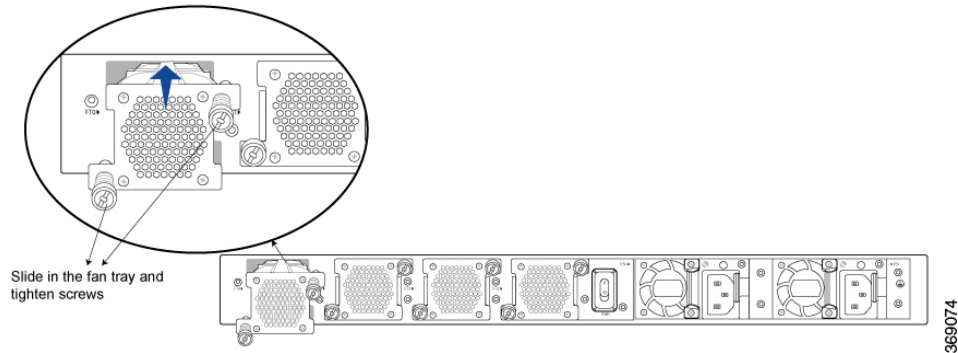


Install a PIM in a vEdge 2000 Router

The vEdge 2000 router supports two types of Pluggable Interface Modules (PIMs).

To install a PIM in a vEdge 2000 router:


- Remove the PIM from its bag, taking care not to touch module components, pins, leads, or solder connections.
- Remove the black plastic protective cover that covers the gold-plated contact pins.

Figure 30: Removing the Black Plastic Protective Cover

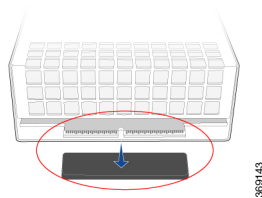

- Using both hands, place the PIM in the empty slot and slide it in gently until it is fully seated.

Figure 31: Installing a PIM in a vEdge 2000 Router

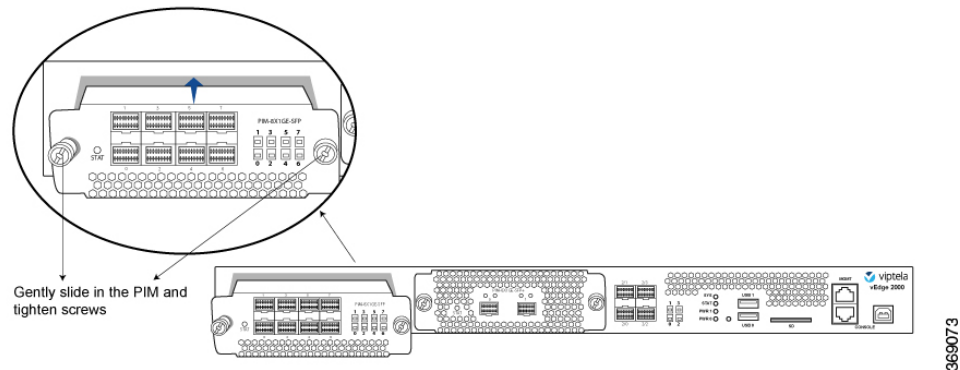

- Tighten the captive thumb screws using the number 2 Phillips (+) screwdriver.



Note To remove a PIM and replace it with a different type of PIM in a PIM slot, you must do the following: 1. Delete the configuration for the old PIM (the PIM you are removing). 2. Remove the PIM from the router. 3. Insert the new PIM. 4. Reboot the router. 5. Configure the interfaces for the new PIM.



Note If you do not remove the black plastic protective cover before installing the PIM, you will damage the PIM slot in the router chassis and the entire unit will become unusable.



Caution Before you slide the PIM into the slot in the router chassis, make sure that the PIM is aligned correctly. Misalignment might cause the pins to bend, making the PIM unusable.


Install a Transceiver in a vEdge 2000 Router

The transceivers for the vEdge 2000 router are hot-removable and hot-insertable field-replaceable units (FRUs). You can remove and replace them without powering off the router or disrupting router functions.

To install any type of transceiver in a vEdge 2000 router:

1. Gently remove the new transceiver from the plastic bag in which it was shipped.
2. Cover the transceiver with a rubber safety cap, if it is not already covered.
3. If the port in which you plan to install the transceiver is covered with a dust cover, remove the cover, and save it for later use.
4. Carefully slide the transceiver in the empty port until it is firmly seated. See Figure 5.
5. Remove the safety cap when you are ready to connect an optic fiber cable to the port.

Figure 32: Installing a Transceiver in a vEdge 2000 Router

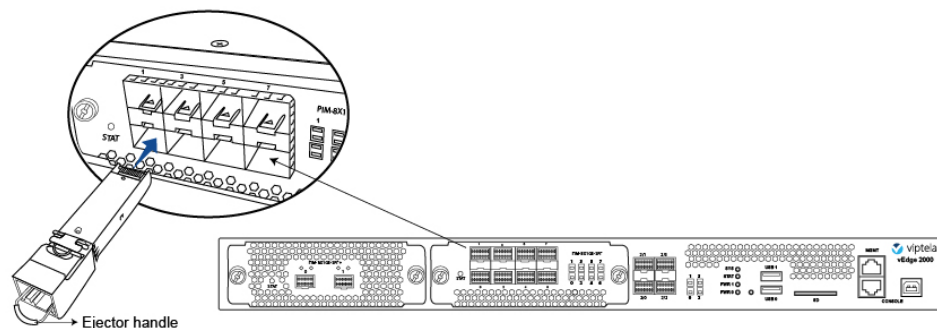

369071



Note It is recommended that you purchase the optical transceivers and optical connectors for your vEdge routers from Viptela.

**Warning**

Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.

vEdge 2000 Router Default Configuration

The default configuration file looks like this:

```
vEdge2000# show running-config
system
vbond ztp.viptela.com
aaa
  auth-order local radius tacacs
  usergroup basic
    task system read write
    task interface read write
  !
  usergroup netadmin
  !
  usergroup operator
    task system read
    task interface read
    task policy read
    task routing read
    task security read
  !
  user admin
  password
$St.vzh6SwUaaOnRu$<br/>AiJYG3VFR1NurXPY7YXSputMw4hg3<br/>Bign362rj4IIWm7UVFiReqv/<br/>4EhKQOUSaZnZZPveQjBFtozCioyE<br/>/

!
!
logging
  disk
  enable
!
!
!
omp
  no shutdown
  graceful-restart
  advertise connected
  advertise static
!
security
  ipsec
    authentication-type ah-sha1-hmac sha1-hmac
  !
!
vpn 0
interface ge2/0
  ip dhcp-client
  tunnel-interface
  encapsulation ipsec
  no allow-service bgp
  allow-service dhcp
  allow-service dns
  allow-service icmp
  no allow-service sshd
  no allow-service netconf
```



```
no allow-service ntp
no allow-service ospf
no allow-service stun
!
no shutdown
!
!
vpn 512
interface mgmt0
 ip address 192.168.1.1/24
 no shutdown
!
```

Maintenance and Troubleshooting

Now that you have installed and connected the vEdge 2000 router, you can monitor and troubleshoot the various LEDs and system alarms on the router.

Alarm Severity Levels

The system alarms on the vEdge 2000 router have two types of severity levels:

- Major (red)—Indicates a critical situation on the router resulting from one of two conditions:
 - One or more hardware components on the router has failed.
 - One or more hardware components on the router has exceeded the temperature threshold

A major alarm condition requires immediate attention. If a temperature related major alarm persists for more than five minutes, the router will shut down.

- Minor (yellow)—Indicates a warning on the router that, if left unattended, might result in an interruption in router operation or degradation in router performance. A yellow alarm condition requires further monitoring and/or maintenance.

Hardware Alarms

Hardware alarms on the vEdge 2000 router are predefined and are triggered by a physical condition on the router such as a power supply failure, excessive component temperature, or fan failure. The vEdge 2000 router triggers the following types of hardware alarms:

- Main board temperature alarm—The main board of the router has four temperature sensing points (board sensor 1 through 4). If the temperature of the sensor location crosses the predefined threshold level, the system triggers an alarm.
- CPU and DRAM temperature alarm—If the temperature of the system CPU or of the DRAM modules crosses the predefined threshold level, the system triggers an alarm.
- PIM temperature alarm—If the temperature of the PIM modules crosses the predefined threshold level, the system triggers an alarm.
- Fan alarm—The router has modular fan trays for system cooling. The Viptela software maintains the fans at an optimal fan speed, raising the speed as the ambient temperature increases and decreasing the speed as the temperature decreases, to keep the router operating at the lowest possible temperature in the

green temperature threshold. If a fan stops running, the system triggers an alarm. Also if a fan starts to run below a predefined RPM threshold, the system triggers an alarm.

- Power supply alarm—The router has two power supplies for redundancy reasons. If one of the power supplies is not plugged in or there is a failure on a power supply input, the system triggers an alarm

The following table lists the yellow and red alarm threshold for the nine temperature sensing points in the system—four board sensors spread across the board, one CPU junction temperature sensor, two DRAM temperature sensors, and two PIM temperature sensors. The lower threshold value (Bad Fan) applies if a fan failure condition is also detected; otherwise the higher threshold value applies (normal).

Table 22:

Item	Yellow Alarm (degrees C)	Red Alarm (degrees C)		
		Bad Fan	Normal	Bad Fan
Chassis board sensor1	65	60	80	75
Chassis board sensor2	65	60	80	75
Chassis board sensor3	65	60	80	75
Chassis board sensor4	65	60	80	75
CPU junction temperature	85	80	100	95
DRAM DIMM 0	65	60	80	75
DRAM DIMM 1	65	60	80	75
PIM 0	65	60	80	75
PIM 1	65	60	80	75

Checking Alarms and Notifications

To view the current chassis environment condition, enter the **show hardware environment** command at the system prompt. The system displays the power supply status, temperature sensor readings, fan speed, and related alarm status if any exists.

To view the severity of active alarms, enter the **show hardware alarms** command at the system prompt. The system displays the alarm severity and a brief description of the cause of each active alarm.

To view temperature thresholds at which green, yellow, and red alarms are generated, enter the **show hardware temperature-thresholds** command at the system prompt. The system displays the alarm temperature threshold information for a specific board or all boards in the router and for the router's CPU and DRAM.

To view all other events on a Viptela device, enter the **show notification stream** command. The system displays notifications about events that have occurred on the Viptela device.

LEDs

The chassis LEDs located on the front panel of the vEdge 2000 router indicate the status of the router.

If there are one or more major alarms active in the router, the SYS LED is lit red. If there are one or more minor alarms active in the router, the SYS LED is lit amber. See Front Panel Components for details of the LEDs and the status they indicate.

Remove vEdge 2000 Router Components

The vEdge 2000 router is a stiff sheet-metal structure that houses the hardware components. The field-replaceable units (FRUs) in the vEdge routers are:

- Power supply
- Fan tray
- Pluggable Interface Modules (PIM)
- SFP and SFP+ transceiver

This article provides step-by-step procedures for removing these router components. For instructions on installing the components, see [Install vEdge 2000 Router Components](#).



Caution Before you install any components in the router chassis, make sure that you understand how to prevent Electrostatic discharge (ESD) damage. See [General Safety Standards](#).

Remove an AC Power Supply from a vEdge 2000 Router

The AC power supply in a vEdge 2000 router is a hot-insertable and hot-removable field replacement unit (FRU). You can remove and replace the power supply without powering off the router or disrupting normal functioning.

To remove the power supply from the router chassis, you need the following parts and tools:


- An antistatic bag or an antistatic mat
- A replacement power supply or a cover panel for the power supply slot

To remove an AC power supply from the router:

1. Place the antistatic bag or the antistatic mat on a firm, flat surface.
2. Attach the ESD grounding strap to your bare wrist. Then connect the strap to the ESD point on the rack.
3. Turn the power switch on the outlet (if one exists) to the OFF (0) position.
4. Disconnect the power cord from the power source.
5. Press the release latch on the right side of the power supply to disconnect the power supply from the chassis.
6. Grasp the power supply handle with one hand and slide the power supply firmly halfway out of the chassis.
7. Place the other hand underneath the power supply and slide it completely out of the chassis making sure not to touch any power supply pins, leads, or solder connection.

8. Place the removed power supply in the antistatic bag or on the antistatic mat.

Figure 33: Removing an AC Power Supply from a vEdge 2000 Router

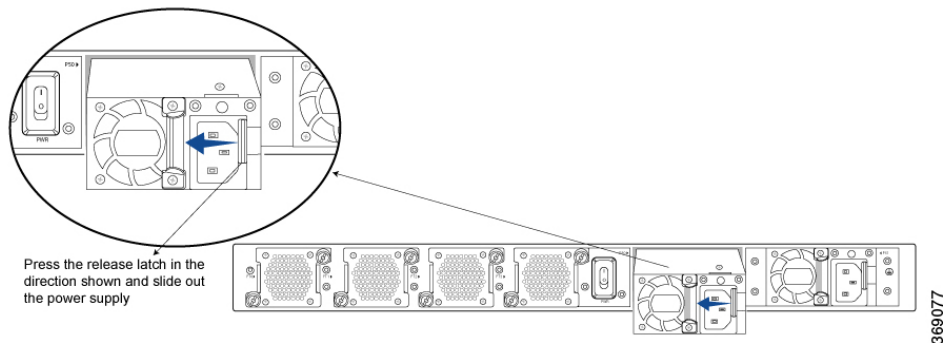

Caution Make sure that you do not leave the power supply slot in the rear of the chassis empty for a long time while the router is operational. Once you remove the power supply, either replace it promptly or install a cover panel over the empty slot.

Remove a Fan Tray from a vEdge 2000 Router

The vEdge 2000 router contains four individual fan trays each comprising of a double-stacked fan module. The fan tray is a hot-insertable and hot-removable field-replaceable unit (FRU). You can remove and replace an individual fan tray without powering off the router or disrupting normal functioning.

The fan tray installs horizontally in the rear of the router chassis. Handles on each side facilitate installing and removing of the fan tray.


To remove the fan tray from the router chassis, you need the following parts and tools:

- An antistatic bag or an antistatic mat
- A replacement fan tray

To remove a fan tray from a vEdge 2000 router:

1. Place the antistatic bag or the antistatic mat on a firm, flat surface.
2. Attach the ESD grounding strap to your bare wrist. Then connect the strap to the ESD point on the rack.
3. Unscrew the two thumb screws on the fan tray to release it from the router chassis. Then remove the fan tray.
4. Place the fan tray in the antistatic bag or the antistatic mat.

Figure 34: Removing a Fan Tray from a vEdge 2000 Router

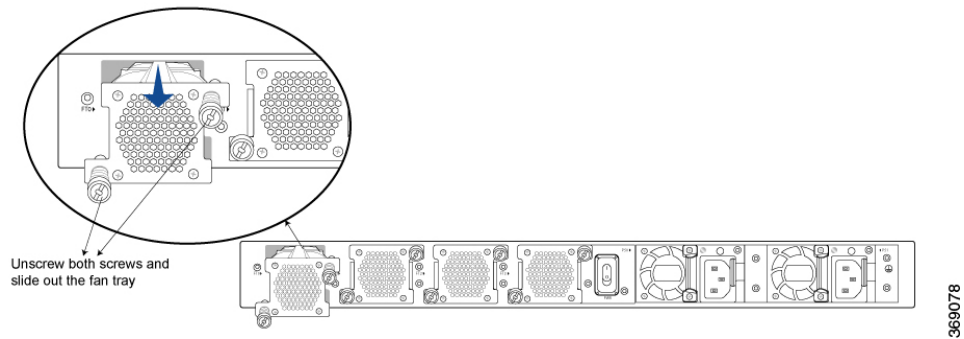

Warning When removing the fan tray, keep your hands and finger away from the spinning fan blades as the fans might still be spinning.

Remove a PIM from a vEdge 2000 Router

The vEdge 2000 router supports two flavors of the Pluggable Interface Modules (PIMs). Both modules install horizontally on the front of the chassis. See *Front Panel of the vEdge 2000 Router* .


To remove a PIM from a PIM slot in a vEdge 2000 router, you need the following parts and tools:

- Number 2 Phillips (+) screwdriver
- A replacement PIM or cover panel
- An antistatic bag or antistatic mat

To remove a PIM from a PIM slot in a vEdge 2000 router:

1. Power down the router.
2. Using a number 2 Phillips (+) screwdriver, loosen the captive screws.
3. Pull the PIM halfway out by holding on to the captive thumb screws.
4. Hold the front edge of the PIM with both hands and slide it completely out of the chassis.
5. Place the PIM in an antistatic bag or on an antistatic mat.
6. Power up the router.

Figure 35: Removing a PIM from a vEdge 2000 Router

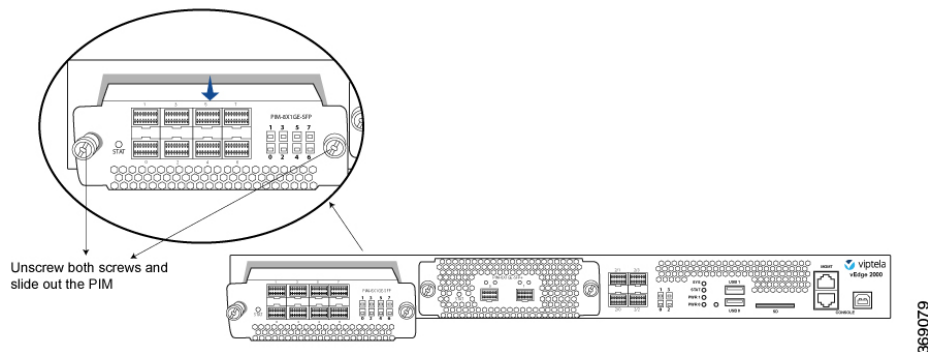

Note To remove a PIM and replace it with a different type of PIM in a PIM slot, you must power down the router, replace the PIM, and then power the router back again. Also, if there are any transceivers installed in the PIM, remove them before you remove the PIM. For instructions on removing a transceiver from a vEdge router, see below.



Caution Make sure that you do not leave the PIM slot in the front of the chassis empty for a long time while the router is operational. Once you remove the PIM, either replace it promptly or install a cover panel over the empty slot.

Remove a Transceiver from a vEdge 2000 Router

The transceivers for the vEdge router are hot-removable and hot-insertable field-replaceable units (FRUs): You can remove and replace them without powering off the router or disrupting router functions.

To remove any type of transceiver from a vEdge 2000 router, you need the following parts and tools:


- A transceiver slot dust cover
- An antistatic mat or an electrostatic bag
- A rubber safety cap for the transceiver

To remove any type of from a vEdge router:

1. Place the antistatic mat or the electrostatic bag on a firm, flat surface.
2. Attach the ESD grounding strap to your bare wrist. Then connect the strap to the ESD point on the rack.
3. Label the cables connected to the transceiver so that you can reconnect them correctly later.
4. Remove the cable connector from the transceiver.
5. Unlock the transceiver by pulling down the ejector handle from the transceiver.
6. Grasp the transceiver ejector handle and pull the transceiver approximately 0.5 in. out of the router.
7. Using your fingers, grasp the body of the transceiver and pull it out of the router completely.

8. Place a rubber safety cap over the transceiver.
9. Place the removed transceiver on the antistatic mat or in an electrostatic bag.
10. If you are not installing a new transceiver, place the transceiver slot dust cover over the empty port.

Figure 36: Removing a Transceiver from a vEdge 2000 Router

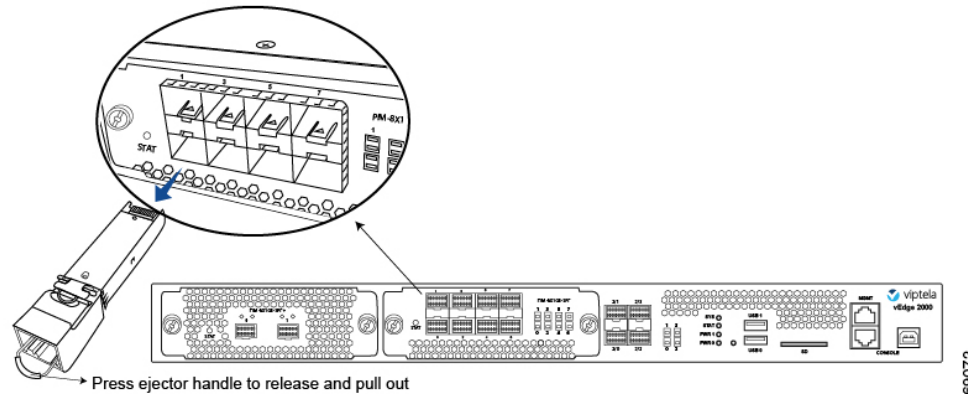

Note It is recommended that you purchase the optical transceivers and optical connectors for your vEdge routers from Viptela.



Warning Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.

Restore a vEdge Router

This article explains how to revert the configuration for a vEdge router to the factory-default values. It also explains how to do a soft and hard reset of the router.

Reverting to the vEdge Router Factory-Default Configuration

After you set up and start the virtual machines (VMs) for the vEdge Cloud routers and set up and start the hardware vEdge routers in your overlay network, they come up with a factory-default configuration. When you make and commit changes to the default configuration, a new configuration file is created. This new configuration file then becomes the active configuration.

If desired, you can revert to the default factory configuration:

```
vEdge# request software reset
```

Reset the Router

You can reset the vEdge router by doing either a hard press or a soft press. To perform either type of press, locate the Reset button on the front panel of the router. The Reset button is recessed to avoid accidentally pressing it while the router is operational. To press the Reset button, use a sharp narrow tool.

Perform a Long Press Reset

A long press reset of the vEdge router erases passwords, keys, and most other configuration parameters, restoring the router to its factory-default configuration.

To perform a long press reset, press the Reset button for more than 10 seconds. After you release the Reset button, the router will reboot and resume normal operation.

Perform a Short Press Reset

A short press reset of the Edge router is equivalent to a graceful software reboot and is the same as entering the **reboot** command at the CLI prompt.

To perform a short press reset, press the Reset button for two seconds. The short press reset takes effect almost instantaneously and reboots the router.

Return Hardware

This article describes how to return a vEdge router or a hardware component to Viptela for repair or replacement.

Locate Serial and Model Number

To return a vEdge router or a hardware component to Viptela, you need the serial and model number of the router or the component being returned.

You can locate the serial and model number of a vEdge router in one of the following ways:

- In vManage NMS, select the Configuration ► Devices screen. The device table lists the serial and model numbers of the routers in the network.
- Enter the **show hardware inventory** command at the CLI prompt.
- The serial number is printed on a label on the right side of the router; the model number is printed on a label on the back of the router.

Figure 37: Sample Serial Number Label for a vEdge Router



Obtain an RMA Number

If you are returning a vEdge router or a hardware component to Viptela for repair or replacement, contact the Viptela Customer Support team to open a support case and obtain a Return Materials Authorization (RMA) number.

Before you open a case and request an RMA number, keep the following information ready:

- Your existing service contract number, if you have one
- Serial number of the router or component
- Model number of the router or component
- Physical location of the router

- Your name, organization name, telephone number, fax number, and shipping address
- Failure or problem description with details
- Type of activity being performed on the router when the problem occurred
- Configuration data displayed by one or more show commands

To obtain an RMA number:

1. Open a support case with Viptela in one of the following ways:
 - Log in to www.viptela.com/support
 - Send email to support@viptela.com
 - Call toll-free 800-525-5033
2. A Viptela Customer Support representative validates your request and issues an RMA number for returning the router or a hardware component.



Note Do not return the router or any component to Viptela before first obtaining an RMA number. Viptela reserves the right to refuse to take any shipment that does not have an RMA number.

Repack the Router

If you need to move or return the vEdge router, repack the router in its original packing. Before you repack the router follow these steps:

1. Shut down the vEdge router by issuing the **poweroff** command at the CLI prompt.
2. Disconnect power to the router.
3. Remove the cables and transceivers.

You will need the following tools to repack the router:

- Phillips Number 2 (+) screwdriver
- Cardboard carton and original packing in which you received the router

To repack the router in its original packing:

1. If you do not have a vEdge 1000 router, skip this step. Otherwise:
 - a. If the router is installed in a rack using the rack-mount kit from Viptela, remove the front stopper screwed along the front side of the rack-mount tray.
 - b. Then remove the rack-mount tray from the rack by having one person support the weight of the rack-mount tray while a second person unscrews the rack-mount screws.
 - c. Place the rack-mount tray on a firm, flat surface.
 - d. Slide out the vEdge 1000 router from the rack-mount tray.
2. Place the router chassis in the plastic packing bag.

3. Place the side packing foam on both sides of the router chassis.
4. Secure the chassis in the cardboard carton.
5. Secure the top of the chassis by placing the top packing foam over the top of the chassis.
6. Close the cardboard shipping box and seal it with packing tape.
7. Write the RMA number on top of the box for purposes of tracking.

If you are returning any field-replaceable units with the router, repack them as described in Repack Router Components below.

Repack Router Components

If you need to return any router components, follow these steps:

1. Ensure that you have the antistatic bag for each component and an ESD grounding strap.
2. Place each component in its antistatic bag.
3. Pack each component in its original packing material. If you do not have the original packing material, ensure that the component is packed adequately with packing material to prevent any damage in transit.
4. Place the component in the original cardboard box or another cardboard box if the original is not available.
5. Secure the box with tape.
6. Write the RMA number on top of the box for purposes of tracking.